# TX-D1000 HE

## SCHEMATIC DIAGRAM

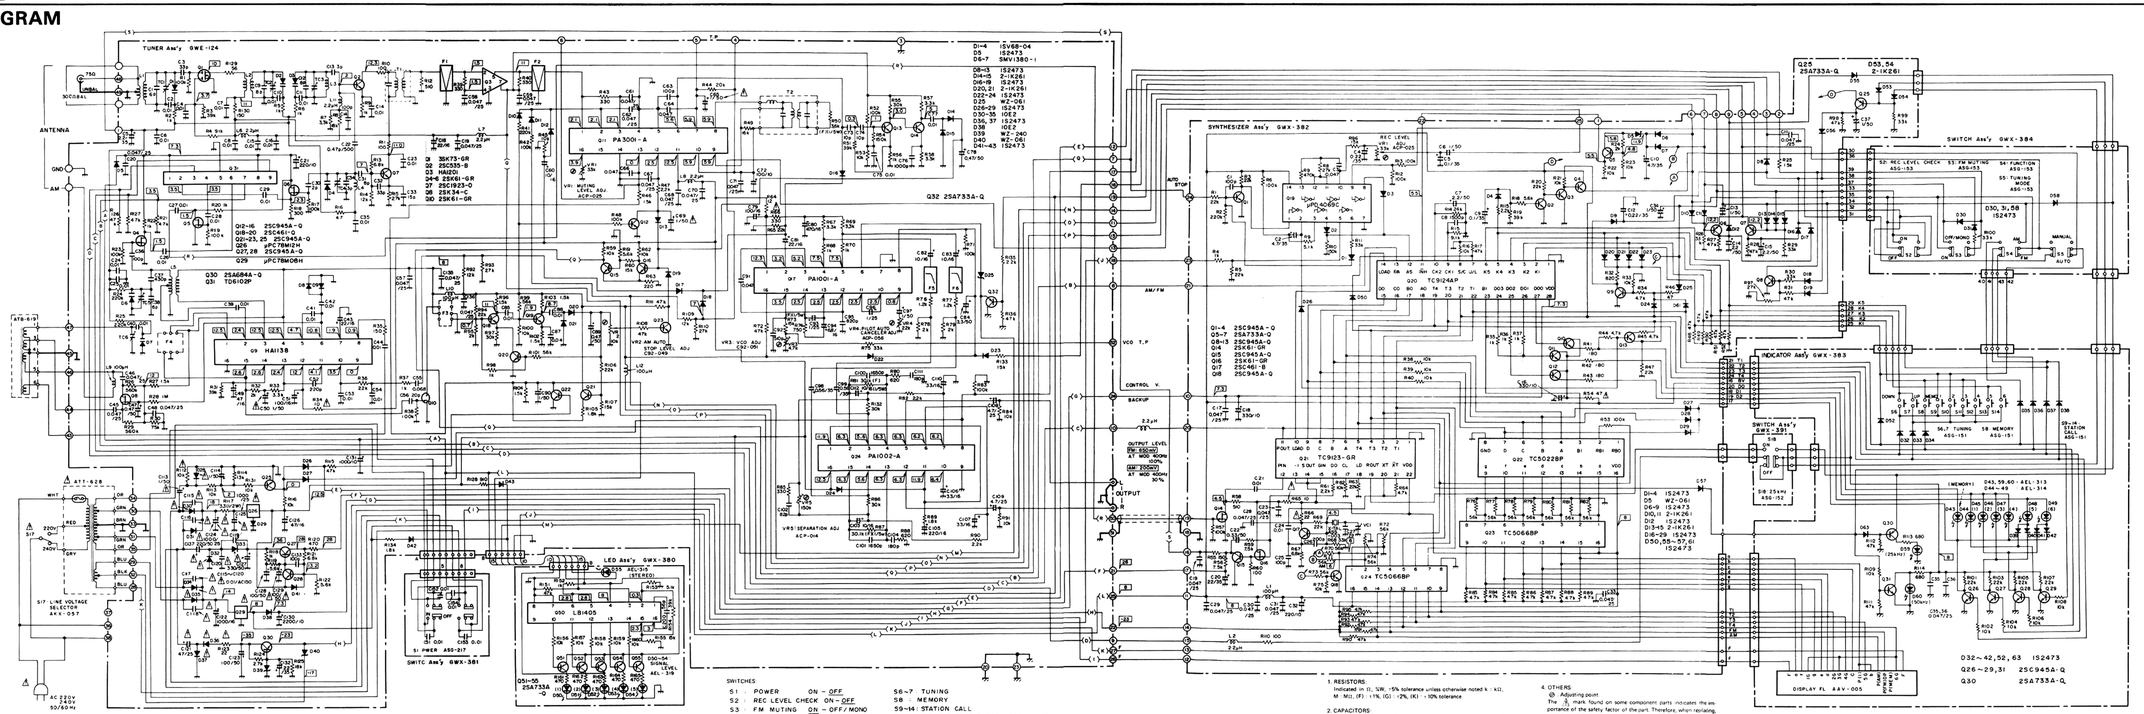


SWITCHES

| | | | |
|---|---|---|---|
| S1 : POWER | ON – OFF | S6~7 : TUNING | |
| S2 : REC LEVEL CHECK | ON – OFF | S8 : MEMORY | |
| S3 : FM MUTING | ON – OFF/MONO | S9~14 : STATION CALL | |
| S4 : FUNCTION | FM – AM | S17 : LINE VOLTAGE SELECTOR | 220V – 240V |
| S5 : TUNING MODE | AUTO – MANUAL | S18 : 25kHz | ON – OFF |

The underlined indicates the switch position.

1. RESISTORS:
Indicated in Ω, 1/4W, ±5% tolerance unless otherwise noted k : kΩ, M : MΩ, (F) : +1%, (G) : ±2%, (K) : ±10% tolerance

2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted p : pF
Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE:
DC voltage (V) at no input signal

4. OTHERS
Adjusting point
The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.