
SCHEMATIC DIAGRAMS (Tuner Section)

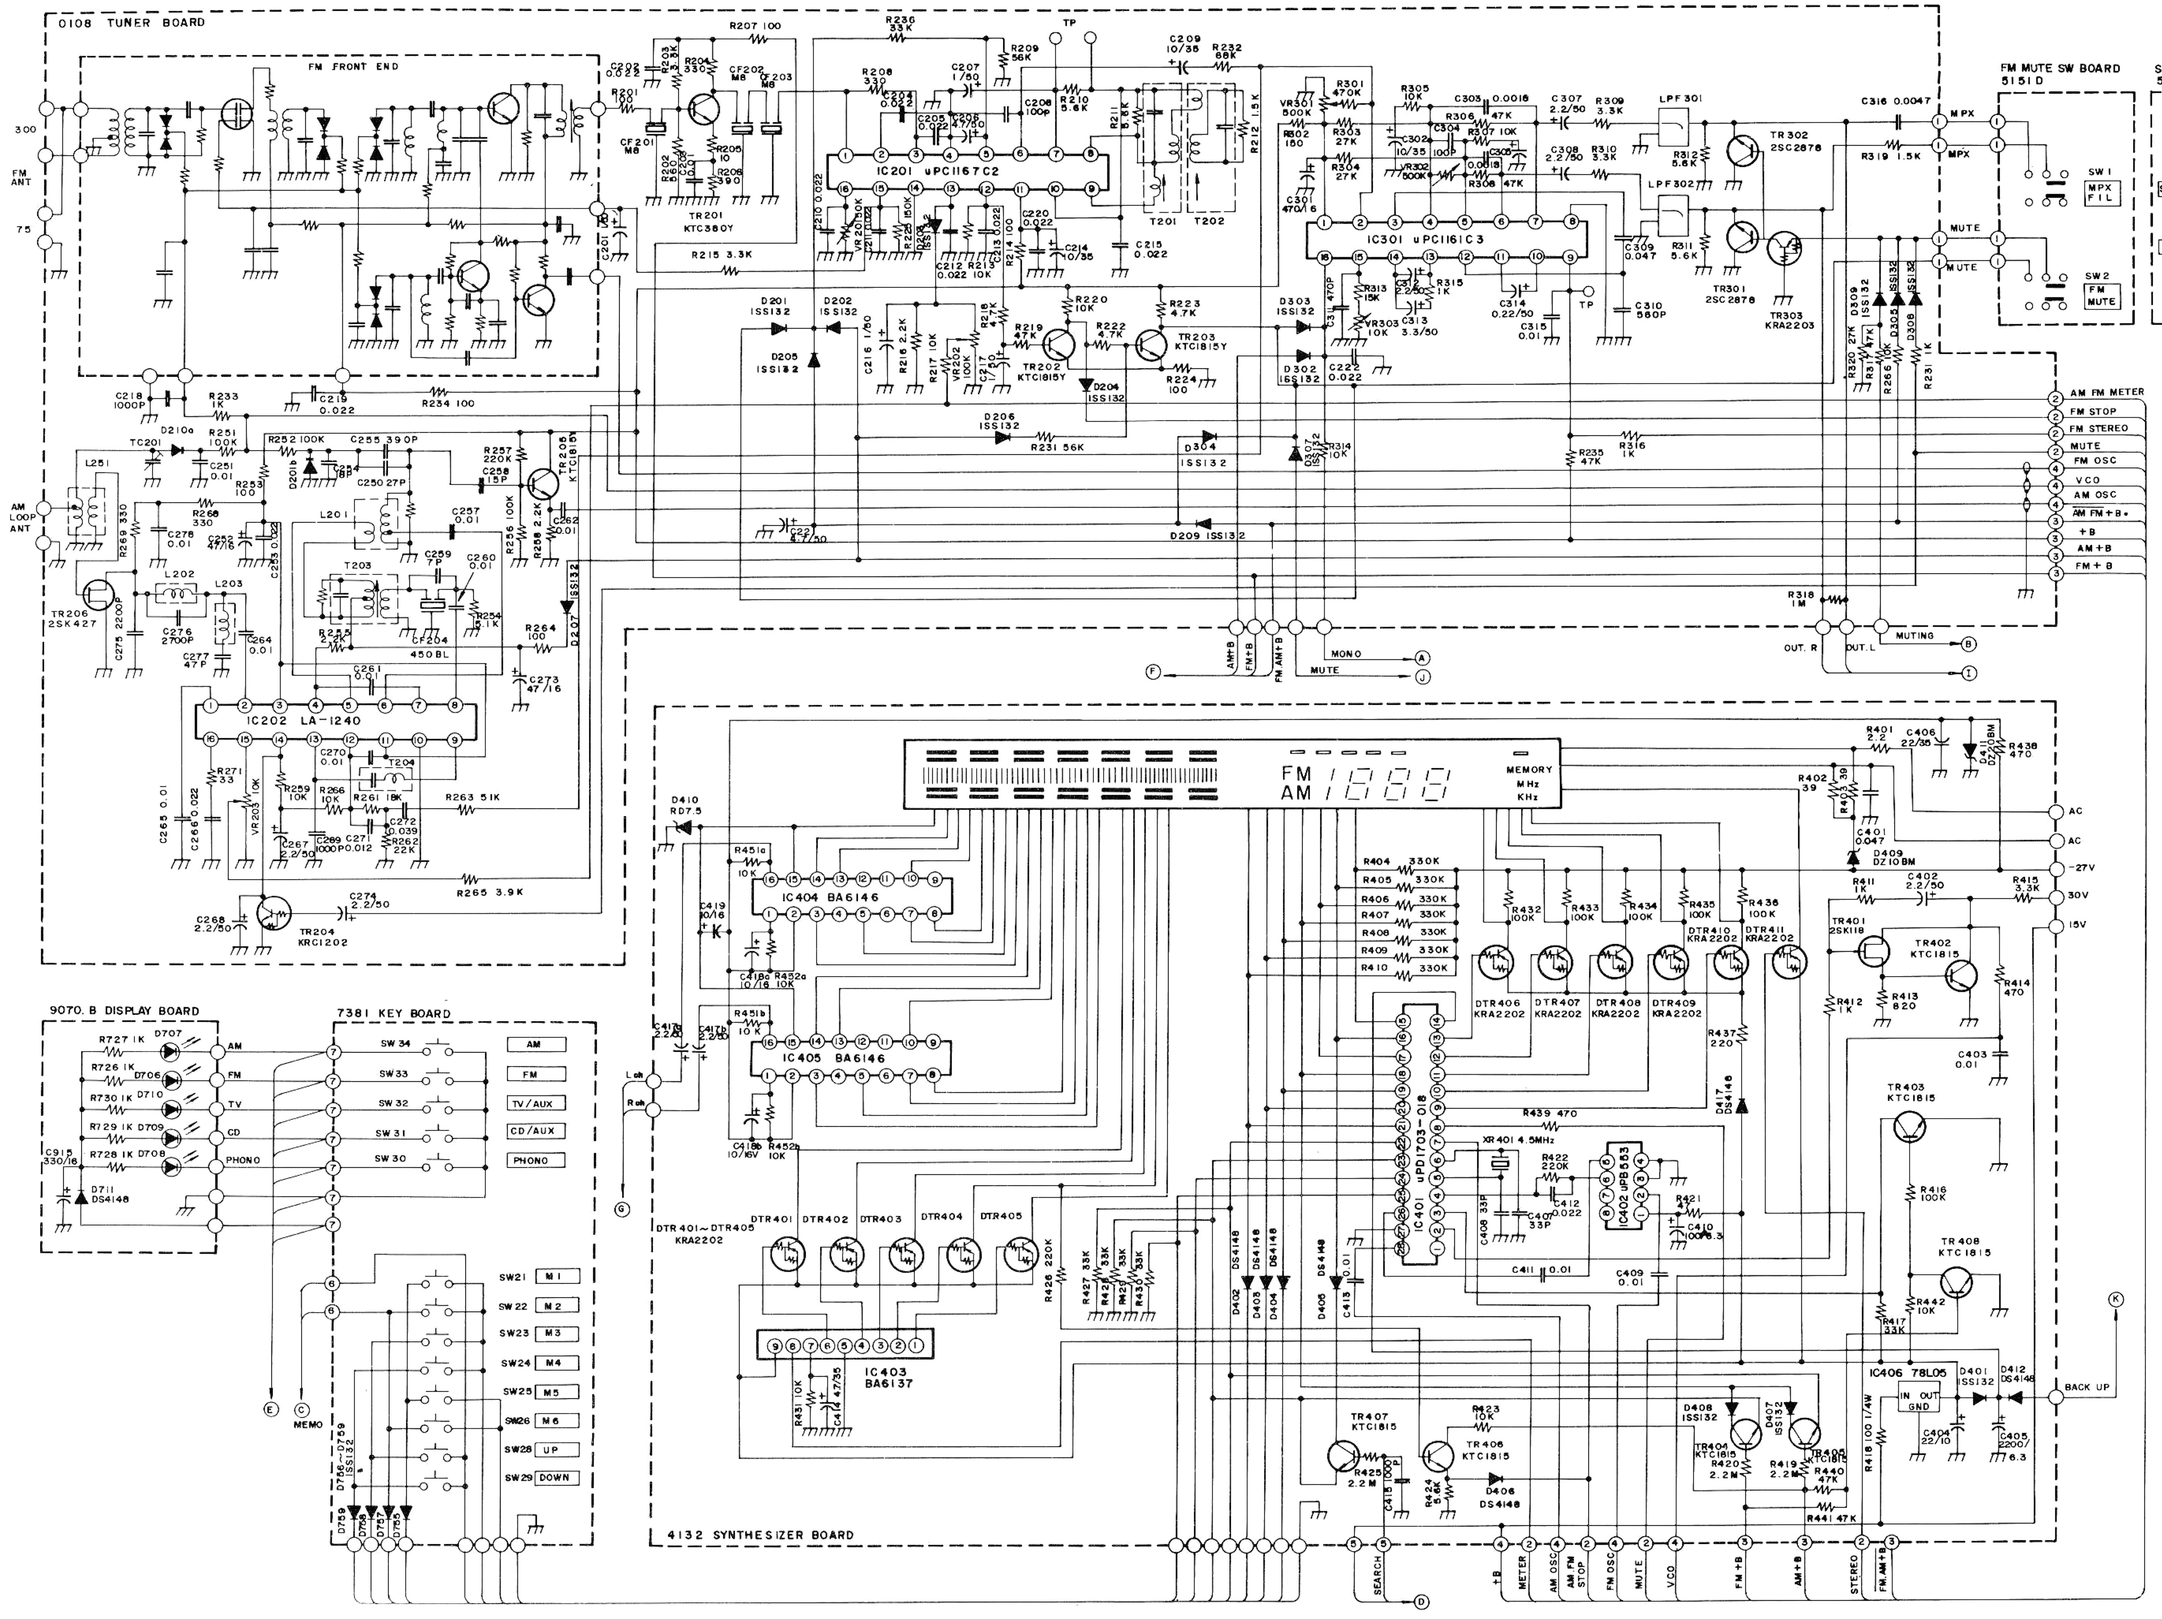

Notes

1. Resistance values are indicated in ohms unless otherwise specified (K=1,000, M=1,000,000)
2. Capacitance values are shown in microfarads unless otherwise noted (P=micro-micro farads)

Schematic subject to change without notice.
For most accurate Schematic (and parts)
contact Radio Shack, National Parts Dept.,
Fort Worth TX 76101

SCHEMATIC DIAGRAMS (Audio Section)

