Schematic Diagram . . . Model SU-Z22 (This schematic diagram may be modified at any time with the development of new technology)

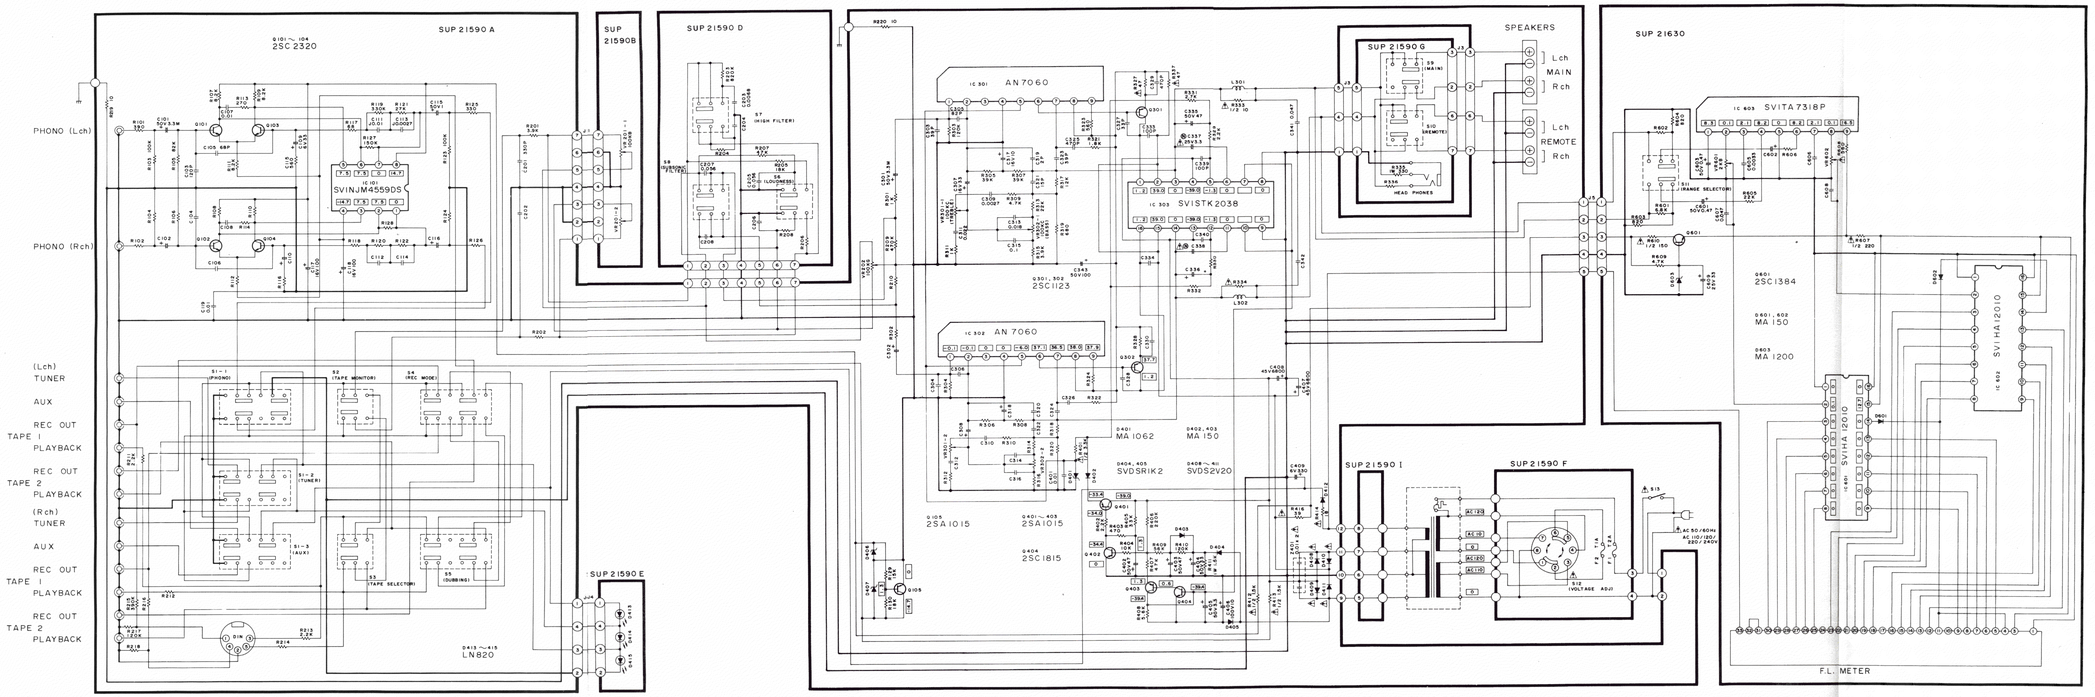

TERMINAL GUIDE

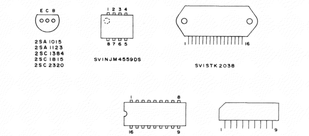

NOTES

1. S1 Input selector switch in "phono" position. (phono ⟷ tuner ⟷ aux)
2. S2 Tape monitor switch in "source" position. (source ⟷ tape)
3. S3 Tape selector switch in "tape 1" position. (tape 1 ⟷ tape 2)
4. S4 Rec mode switch in "source" position. (source ⟷ dubbing)
5. S5 Dubbing switch in "tape 1▶2" position. (tape 1▶2 ⟷ tape 2▶1)
6. S6 Loudness switch in "off" position.
7. S7 High filter switch in "off" position.
8. S8 Subsonic filter switch in "off" position.
9. S9 Main speaker switch in "on" position.
10. S10 Remote speaker switch in "off" position.
11. S11 Range selector switch in "x 1" position. (x 1 ⟷ x 0.01)
12. S12 Voltage adjustmen switch in "240V" position.
    240V ⟷ 220V ⟷ 110V ⟷ 120V
13. S13 Power switch in "off" position.
14. All the resistors otherwise noticed are 1/4W ± 5% or 1/8W ± 5% carbon film resistors.
15. ⚠ Indicates that only parts specified by the manufacturer be used for safety.
16. ▭ Indicates voltage values are the standard values for the DC electron tester with chassis taken as standard.

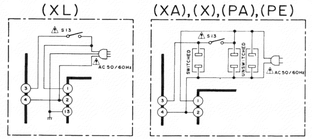

Printed in Japan SQX449