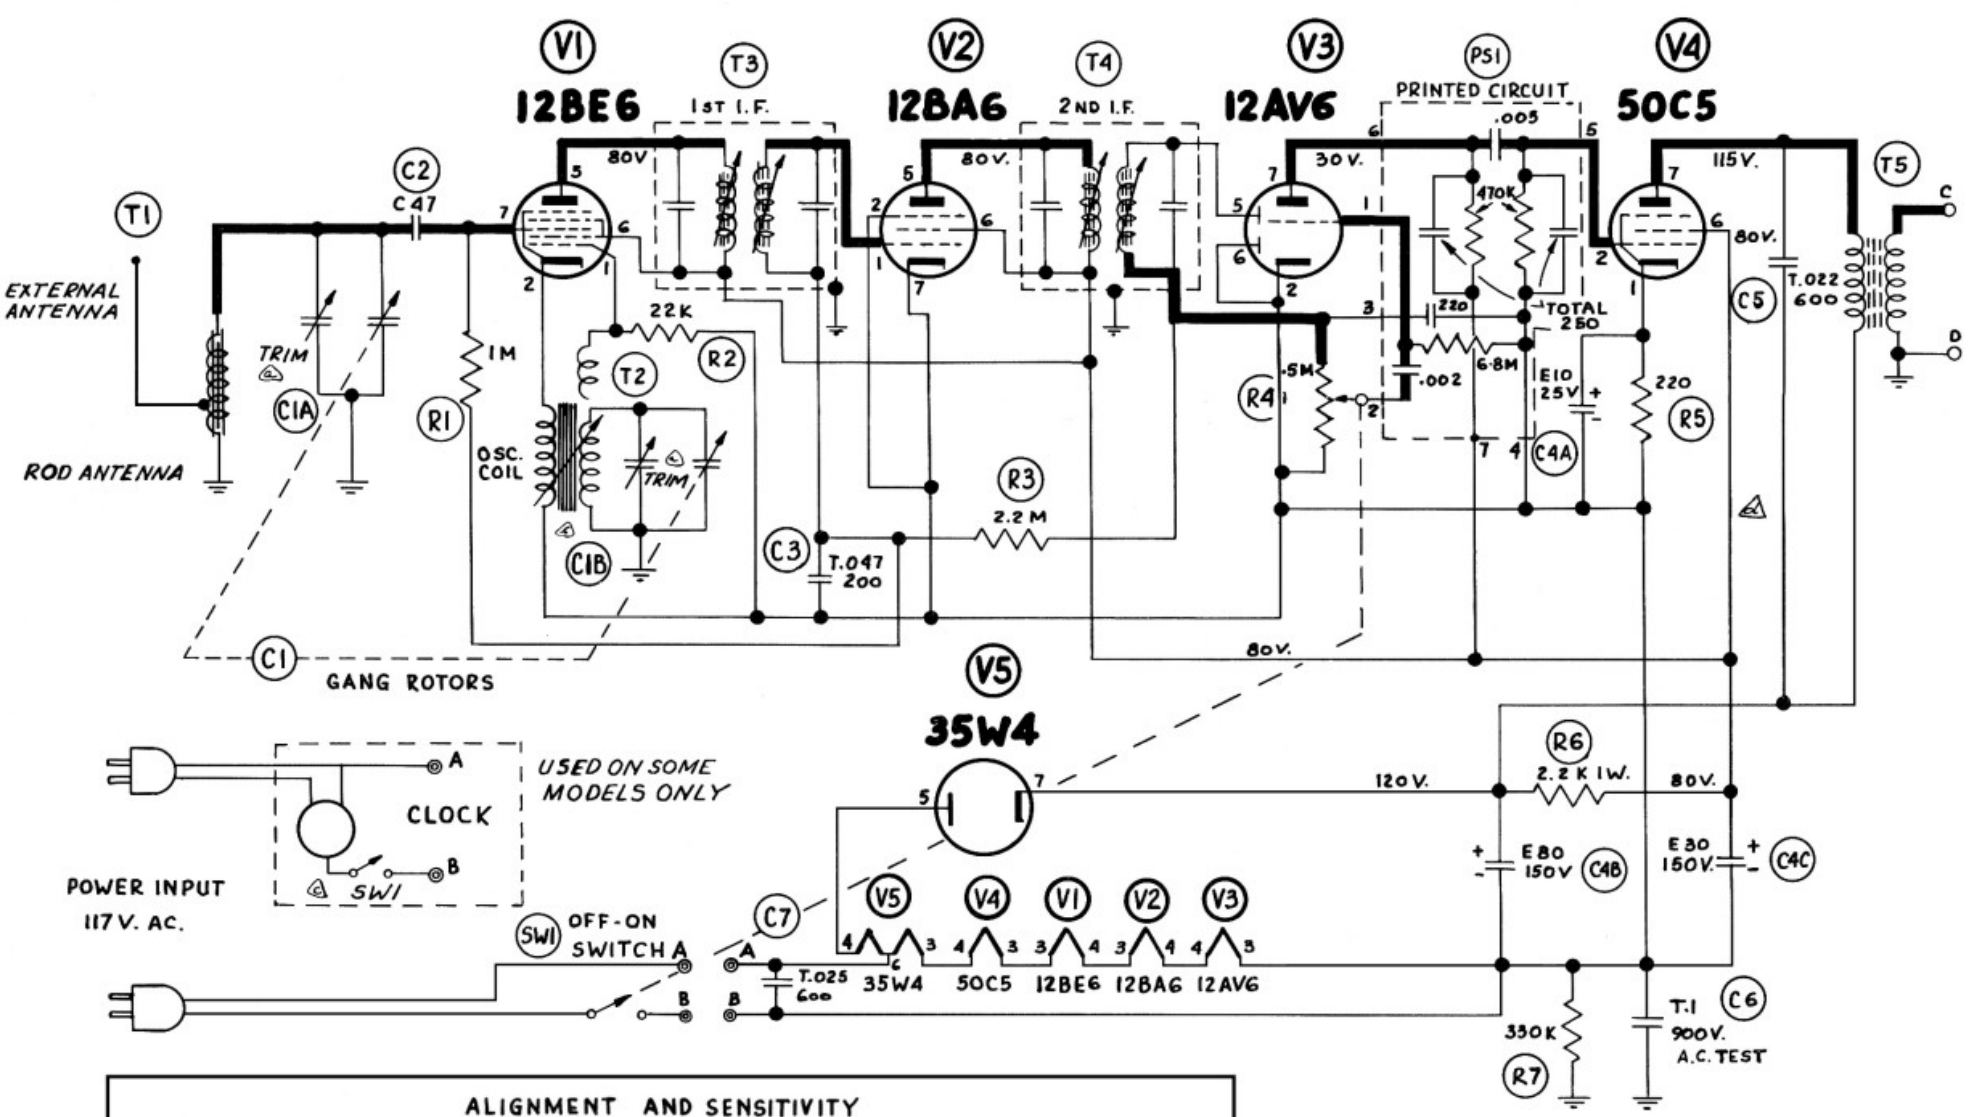

ALIGNMENT AND SENSITIVITY						
STEP	APPLY SIGNAL KC.	APPLY SIGNAL TO	THRU SERIES TUNING	SET GANG AT	ADJUST FOR MAX. OUTPUT	NOMINAL SENSITIVITY
1	455	12BAG #1	.05 μfd.	MIN. CAP.	2ND. I. F.	2000 μV.
2	455	12BE6 #7	.05 μfd.	MIN. CAP.	1ST. I. F	65 μV.
3	1460	*ANT.	—	1460	OSC. TRIMMER	—
4	1460	*ANT.	—	1460	ANT. TRIMMER	275 μv./M.
5	535	*ANT.	—	MAX. CAP.	CHECK ONLY	—
6	600	*ANT.	—	600	CHECK ONLY	475 μV./M.

* FASHION LOOP CONSISTING OF SEVERAL TURNS OF WIRE AND RADIATE SIGNAL, FROM GENERATOR TO LOOP OF RECEIVER.

VIKING RMK-316
RM-318, RM-318R