

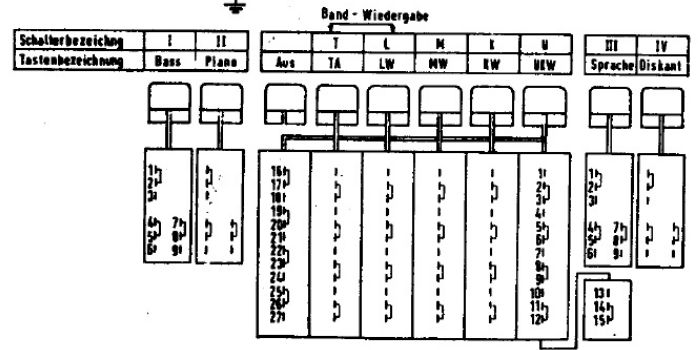


Meßpunkte an der Lötenseite, Chassis - Rückseite

Regel- spg	A	CBS	AM b	FM a	FM s	C100	MF a	MF b	MF c	MF d	MF e	MF f	MF g	MF h	MF i	MF j	MF k	MF l	MF m	MF n	MF o	MF p	MF q	MF r	MF s	MF t	MF u	MF v	MF w	MF x	MF y	MF z																	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50



SCHAUB LORENZ
mod. Bati 800 stereo

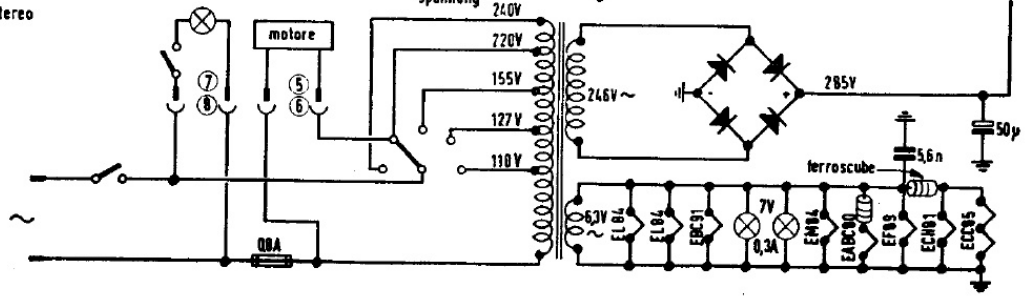

Schema elettrico del radiorecettore Schaub Lorenz, mod. Bati 800, stereo