



NSX-NT929 LH

SERVICE MANUAL

COMPACT DISC STEREO SYSTEM

- Replace this Service manual with "Revision Publishing" when it is issued.

aiwa
S/M Code No. 09-00C-440-2T1

SIMPLE

DATA

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-------------|---------|----------------|-------|----------------------------|--------|------------|
| O | ACCESSORY | | 87-006-268-010 | 1C | ANT, LOOP AM | LHSM | CX-NT929 |
| O | ACCESSORY | | 8Z-NF5-702-010 | 2A | RC UNIT, RC-ZAS04 | LHSM | CX-NT929 |
| O | ACCESSORY | * | 87-043-115-010 | 1A | FEEDER-ANT, FM | LHSM | CX-NT929 |
| ! | O ACCESSORY | * | 87-A91-017-010 | 1A | PLUG, CONVERSION JT-0476 | LHSM | CX-NT929 |
| O | AMP 1F | | 8A-NF3-217-110 | 0E | HLDR, TR-SW | LHSM | CX-NT929 |
| X | AMP 1F | | 8B-NF4-221-010 | -- | HT-SINK, TR | LHSM | CX-NT929 |
| X | AMP 1F | * | 8B-NF4-630-010 | -- | PWB, COMB AMP | LHSM | CX-NT929 |
| X | AMP 1F | * | 8B-NF4-631-010 | -- | PWB, AMP 1F | LHSM | CX-NT929 |
| X | AMP 1F | * | 8B-NF4-632-010 | -- | PWB, VM REG | LHSM | CX-NT929 |
| O | AMP 1F | C 0001 | 87-A11-148-080 | 0E | CAP, TC U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0002 | 87-A11-148-080 | 0E | CAP, TC U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0003 | 87-A11-148-080 | 0E | CAP, TC U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0004 | 87-A11-148-080 | 0E | CAP, TC U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0011 | 87-010-190-080 | 0E | C-CAP, S 0.01-50 Z F C2012 | LHSM | CX-NT929 |
| O | AMP 1F | C 0012 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0013 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0014 | 87-010-190-080 | 0E | C-CAP, S 0.01-50 Z F C2012 | LHSM | CX-NT929 |
| O | AMP 1F | C 0015 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0016 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0020 | 87-A12-068-080 | 0E | CAP, E 470-16 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0021 | 87-A12-089-080 | 0E | CAP, E 3.3-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0022 | 87-A10-301-080 | 0E | CAP, M 0.033-50 J | LHSM | CX-NT929 |
| O | AMP 1F | C 0023 | 87-A12-085-080 | 0E | CAP, E 0.33-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0024 | 87-A12-086-080 | 0E | CAP, E 0.47-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0025 | 87-A12-086-080 | 0E | CAP, E 0.47-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0028 | 87-A12-085-080 | 0E | CAP, E 0.33-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0029 | 87-A10-301-080 | 0E | CAP, M 0.033-50 J | LHSM | CX-NT929 |
| O | AMP 1F | C 0030 | 87-A12-069-080 | 0E | CAP, E 22-25 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0099 | 87-A12-089-080 | 0E | CAP, E 3.3-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0100 | 87-A12-089-080 | 0E | CAP, E 3.3-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0101 | 87-012-279-080 | 0E | C-CAP, U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | AMP 1F | C 0102 | 87-012-279-080 | 0E | C-CAP, U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | AMP 1F | C 0103 | 87-A12-091-080 | 0E | CAP, E 10-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0104 | 87-A12-091-080 | 0E | CAP, E 10-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0105 | 87-012-282-080 | 0E | C-CAP, U 4700P-50 K B | LHSM | CX-NT929 |
| O | AMP 1F | C 0106 | 87-012-282-080 | 0E | C-CAP, U 4700P-50 K B | LHSM | CX-NT929 |
| O | AMP 1F | C 0107 | 87-A12-090-080 | 0E | CAP, E 4.7-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0108 | 87-A12-090-080 | 0E | CAP, E 4.7-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0109 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0110 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0111 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0112 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0113 | 87-012-167-080 | 0E | C-CAP, U 5P-50 C CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0114 | 87-012-167-080 | 0E | C-CAP, U 5P-50 C CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0115 | 87-010-986-080 | 0E | C-CAP, S 820P-50 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0116 | 87-010-986-080 | 0E | C-CAP, S 820P-50 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0117 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0118 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0119 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | AMP 1F | C 0120 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | AMP 1F | C 0121 | 87-A10-596-080 | 0E | C-CAP, S 100P-100 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0122 | 87-A10-596-080 | 0E | C-CAP, S 100P-100 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0123 | 87-A10-596-080 | 0E | C-CAP, S 100P-100 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0124 | 87-A10-596-080 | 0E | C-CAP, S 100P-100 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0161 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | AMP 1F | C 0200 | 87-A12-089-080 | 0E | CAP, E 3.3-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0201 | 87-012-279-080 | 0E | C-CAP, U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | AMP 1F | C 0202 | 87-012-279-080 | 0E | C-CAP, U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | AMP 1F | C 0203 | 87-A12-091-080 | 0E | CAP, E 10-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0204 | 87-A12-091-080 | 0E | CAP, E 10-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0205 | 87-012-282-080 | 0E | C-CAP, U 4700P-50 K B | LHSM | CX-NT929 |
| O | AMP 1F | C 0206 | 87-012-282-080 | 0E | C-CAP, U 4700P-50 K B | LHSM | CX-NT929 |
| O | AMP 1F | C 0207 | 87-A12-090-080 | 0E | CAP, E 4.7-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0208 | 87-A12-090-080 | 0E | CAP, E 4.7-50 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0209 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0210 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0211 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0212 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | AMP 1F | C 0213 | 87-012-167-080 | 0E | C-CAP, U 5P-50 C CH | LHSM | CX-NT929 |
| O | AMP 1F | C 0214 | 87-012-167-080 | 0E | C-CAP, U 5P-50 C CH | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT | NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------|------|---------|------------|----------------|-------------|----------------------------|---------------|
| O | AMP | 1F | C | 0215 | 87-010-986-080 | 0E | C-CAP,S 820P-50 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0216 | 87-010-986-080 | 0E | C-CAP,S 820P-50 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0217 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM CX-NT929 |
| O | AMP | 1F | C | 0218 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM CX-NT929 |
| O | AMP | 1F | C | 0219 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM CX-NT929 |
| O | AMP | 1F | C | 0220 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM CX-NT929 |
| O | AMP | 1F | C | 0221 | 87-A10-596-080 | 0E | C-CAP,S 100P-100 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0222 | 87-A10-596-080 | 0E | C-CAP,S 100P-100 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0223 | 87-A10-596-080 | 0E | C-CAP,S 100P-100 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0224 | 87-A10-596-080 | 0E | C-CAP,S 100P-100 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0301 | 87-012-282-080 | 0E | C-CAP,U 4700P-50 K B | LHSM CX-NT929 |
| O | AMP | 1F | C | 0302 | 87-012-282-080 | 0E | C-CAP,U 4700P-50 K B | LHSM CX-NT929 |
| O | AMP | 1F | C | 0303 | 87-010-866-080 | 0E | CAP,E 10-63 M VX | LHSM CX-NT929 |
| O | AMP | 1F | C | 0304 | 87-010-866-080 | 0E | CAP,E 10-63 M VX | LHSM CX-NT929 |
| O | AMP | 1F | C | 0305 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM CX-NT929 |
| O | AMP | 1F | C | 0307 | 87-A10-812-080 | 0E | C-CAP,S 220P-200 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0308 | 87-A10-812-080 | 0E | C-CAP,S 220P-200 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0407 | 87-A10-812-080 | 0E | C-CAP,S 220P-200 J CH | LHSM CX-NT929 |
| O | AMP | 1F | C | 0408 | 87-A10-812-080 | 0E | C-CAP,S 220P-200 J CH | LHSM CX-NT929 |
| ! | O | AMP | CN | 0001 | 87-099-043-010 | 0E | CONN,2P V WHT EH | LHSM CX-NT929 |
| O | AMP | 1F | CN | 0002 | 87-A60-619-010 | 0E | CONN,2P V 2MM JMT | LHSM CX-NT929 |
| O | AMP | 1F | CN | 0003 | 87-A60-619-010 | 0E | CONN,2P V 2MM JMT | LHSM CX-NT929 |
| ! | O | AMP | CN | 0006 | 87-A61-108-010 | 0E | CONN,5P V TID-A | LHSM CX-NT929 |
| ! | O | AMP | CN | 0012 | 87-A61-011-010 | 0E | CONN,13P H BLK TAC-L13P-A3 | LHSM CX-NT929 |
| ! | O | AMP | CN | 0102 | 87-A61-011-010 | 0E | CONN,13P H BLK TAC-L13P-A3 | LHSM CX-NT929 |
| ! | O | AMP | CN | 0104 | 87-A61-108-010 | 0E | CONN,5P V TID-A | LHSM CX-NT929 |
| ! | O | AMP | CNA | 0013 | 8A-NF8-655-010 | 1A | CONN ASSY,7P TID-A(250) | LHSM CX-NT929 |
| S | AMP | 1F | D | 0002 | 87-A40-224-010 | 1E | DIODE,GBU8DL | LHSM CX-NT929 |
| S | AMP | 1F | D | 0100 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0101 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0102 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0103 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0104 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0105 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0106 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0107 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0108 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0109 | 87-A40-488-080 | 0E | DIODE,1SS244 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0110 | 87-A40-488-080 | 0E | DIODE,1SS244 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0111 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0112 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0201 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0202 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0203 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0204 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0205 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0206 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0207 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0208 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0209 | 87-A40-488-080 | 0E | DIODE,1SS244 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0210 | 87-A40-488-080 | 0E | DIODE,1SS244 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0211 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0212 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0301 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0303 | 87-A40-764-080 | 0E | ZENER,UZ10BSC | LHSM CX-NT929 |
| S | AMP | 1F | D | 0304 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0305 | 87-A40-764-080 | 0E | ZENER,UZ10BSC | LHSM CX-NT929 |
| S | AMP | 1F | D | 0306 | 87-A40-747-080 | 0E | ZENER,UZ5.1BSB | LHSM CX-NT929 |
| S | AMP | 1F | D | 0307 | 87-A40-646-010 | 1B | DIODE,FMB-G16L | LHSM CX-NT929 |
| S | AMP | 1F | D | 0308 | 87-A40-646-010 | 1B | DIODE,FMB-G16L | LHSM CX-NT929 |
| S | AMP | 1F | D | 0309 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0310 | 87-A40-269-080 | 0E | C-DIODE,MC2836 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0311 | 87-A40-313-080 | 0E | C-DIODE,MC2840 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0312 | 87-A40-313-080 | 0E | C-DIODE,MC2840 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0313 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0314 | 87-A40-751-080 | 0E | ZENER,UZ6.2BSB | LHSM CX-NT929 |
| S | AMP | 1F | D | 0317 | 87-A40-646-010 | 1B | DIODE,FMB-G16L | LHSM CX-NT929 |
| S | AMP | 1F | D | 0318 | 87-A40-646-010 | 1B | DIODE,FMB-G16L | LHSM CX-NT929 |
| S | AMP | 1F | D | 0409 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM CX-NT929 |
| S | AMP | 1F | D | 0410 | 87-A40-269-080 | 0E | C-DIODE,MC2836 | LHSM CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT | NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------|------|---------|----------------|-------|---------------------|--------|------------|
| S | AMP | 1F | D 0412 | 87-A40-313-080 | 0E | C-DIODE,MC2840 | LHSM | CX-NT929 |
| S | AMP | 1F | D 0501 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | AMP | 1F | D 0502 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | AMP | 1F | IC 0020 | 87-A21-419-040 | 0E | C-IC,NJM14558MD-TE2 | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0001 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0005 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0006 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0007 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0008 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0009 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0010 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0011 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0012 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0013 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0014 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0016 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0017 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0018 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0019 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0020 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0021 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0022 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0023 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0024 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0025 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0026 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0027 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0028 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0029 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0030 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0031 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0032 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0033 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0034 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0035 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0036 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0037 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0038 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0039 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0147 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0148 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0247 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | JR 0248 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| O | AMP | 1F | L 0011 | 87-A50-610-010 | 0E | COIL,1UH K(MDEC) | LHSM | CX-NT929 |
| O | AMP | 1F | L 0012 | 87-A50-610-010 | 0E | COIL,1UH K(MDEC) | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0001 | 89-213-702-010 | 1A | TR,2SB1370E | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0002 | 89-213-702-010 | 1A | TR,2SB1370E | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0010 | 87-A30-087-080 | 0E | C-FET,2SK2158 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0011 | 87-A30-455-040 | 0E | C-TR,DTA144EKA | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0020 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0021 | 87-A30-455-040 | 0E | C-TR,DTA144EKA | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0022 | 87-A30-086-070 | 0E | C-TR,CSD1306E | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0023 | 87-A30-086-070 | 0E | C-TR,CSD1306E | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0025 | 89-213-750-010 | 1A | TR,2SB1375 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0026 | 89-110-372-080 | 0E | C-TR,2SA1037K(R) | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0101 | 87-A30-107-070 | 0E | C-TR,CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0102 | 87-A30-107-070 | 0E | C-TR,CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0103 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0104 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0105 | 87-A30-107-070 | 0E | C-TR,CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0106 | 87-A30-107-070 | 0E | C-TR,CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0107 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0108 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0109 | 87-A30-106-040 | 0E | C-TR,CMBT5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0110 | 87-A30-106-040 | 0E | C-TR,CMBT5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0111 | 87-A30-190-080 | 0E | TR,CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0112 | 87-A30-190-080 | 0E | TR,CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0113 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0114 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0115 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT | NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------|------|---------|----------------|-------|-----------------------|--------|------------|
| S | AMP | 1F | Q 0116 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0117 | 87-A30-190-080 | 0E | TR, CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0118 | 87-A30-190-080 | 0E | TR, CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0119 | 87-A30-523-010 | 1E | TR, 2SD2562 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0120 | 87-A30-523-010 | 1E | TR, 2SD2562 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0121 | 87-A30-522-010 | 1F | TR, 2SB1649 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0122 | 87-A30-522-010 | 1F | TR, 2SB1649 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0123 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0124 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0201 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0202 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0203 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0204 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0205 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0206 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0207 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0208 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0209 | 87-A30-106-040 | 0E | C-TR, CMBT5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0210 | 87-A30-106-040 | 0E | C-TR, CMBT5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0211 | 87-A30-190-080 | 0E | TR, CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0212 | 87-A30-190-080 | 0E | TR, CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0213 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0214 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0215 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0216 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0217 | 87-A30-190-080 | 0E | TR, CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0218 | 87-A30-190-080 | 0E | TR, CC5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0219 | 87-A30-097-010 | 1C | TR, FN1016 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0220 | 87-A30-097-010 | 1C | TR, FN1016 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0221 | 87-A30-098-010 | 1C | TR, FP1016 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0222 | 87-A30-098-010 | 1C | TR, FP1016 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0223 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0224 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0301 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0302 | 87-A30-106-040 | 0E | C-TR, CMBT5551 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0303 | 87-A30-186-010 | 1B | FET, 2SK3053 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0304 | 87-A30-186-010 | 1B | FET, 2SK3053 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0305 | 87-A30-447-040 | 1F | C-TR, DTA114EKA | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0306 | 87-A30-075-080 | 0E | C-TR, 2SA1235F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0307 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0308 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0309 | 87-A30-447-040 | 1F | C-TR, DTA114EKA | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0313 | 87-A30-186-010 | 1B | FET, 2SK3053 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0314 | 87-A30-186-010 | 1B | FET, 2SK3053 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0408 | 87-A30-107-070 | 0E | C-TR, CMBT5401 | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0409 | 87-A30-447-040 | 1F | C-TR, DTA114EKA | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0609 | 87-A30-086-070 | 0E | C-TR, CSD1306E | LHSM | CX-NT929 |
| S | AMP | 1F | Q 0610 | 87-A30-086-070 | 0E | C-TR, CSD1306E | LHSM | CX-NT929 |
| X | AMP | 1F | R 0001 | 88-108-471-080 | 0E | C-RES, U 470-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0002 | 88-108-471-080 | 0E | C-RES, U 470-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0011 | 88-121-100-080 | 0E | RES, 10-1/8W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0012 | 88-121-100-080 | 0E | RES, 10-1/8W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0013 | 88-130-100-080 | 0E | RES, 10-1/4W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0014 | 88-130-100-080 | 0E | RES, 10-1/4W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0018 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0019 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0021 | 88-108-562-080 | 0E | C-RES, U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0022 | 88-108-273-080 | 0E | C-RES, U 27K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0023 | 88-130-181-080 | 0E | RES, 180-1/4W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0024 | 88-130-181-080 | 0E | RES, 180-1/4W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0025 | 88-108-223-080 | 0E | C-RES, U 22K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0026 | 88-108-101-080 | 0E | C-RES, U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0027 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0028 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0029 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0030 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0031 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0032 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0034 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0035 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT | NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------|------|---------|----------------|-------|----------------------|--------|------------|
| X | AMP | 1F | R 0036 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0037 | 88-121-222-080 | 0E | RES,2.2K-1/8W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0038 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0039 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0040 | 88-108-822-080 | 0E | C-RES,U 8.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0041 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0042 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0099 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0100 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0101 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0102 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0103 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0104 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0105 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0106 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0107 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0108 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0109 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0110 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0111 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0112 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0113 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0114 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0115 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0116 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0117 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0118 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0119 | 88-108-393-080 | 0E | C-RES,U 39K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0120 | 88-108-393-080 | 0E | C-RES,U 39K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0121 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0122 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0123 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0124 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0125 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0126 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0127 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0128 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0129 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0130 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0131 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0132 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0133 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0134 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0135 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0136 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0137 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0138 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0139 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0140 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0141 | 88-108-331-080 | 0E | C-RES,U 330-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0142 | 88-108-331-080 | 0E | C-RES,U 330-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0143 | 88-108-391-080 | 0E | C-RES,U 390-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0144 | 88-108-391-080 | 0E | C-RES,U 390-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0147 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0148 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0149 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0150 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0151 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0152 | 88-108-271-080 | 0E | C-RES,U 270-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0153 | 88-108-271-080 | 0E | C-RES,U 270-1/16W J | LHSM | CX-NT929 |
| X | AMP | 1F | R 0155 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| O | AMP | 1F | R 0157 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0158 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0159 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0160 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0161 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0162 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0163 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP | 1F | R 0164 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| X | AMP | 1F | R 0165 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| X | AMP 1F | R 0169 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0200 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0201 | 88-108-563-080 | 0E | C-RES,U 56K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0202 | 88-108-563-080 | 0E | C-RES,U 56K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0203 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0204 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0205 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0206 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0207 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0208 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0209 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0210 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0211 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0212 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0213 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0214 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0215 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0216 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0217 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0218 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0219 | 88-108-393-080 | 0E | C-RES,U 39K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0220 | 88-108-393-080 | 0E | C-RES,U 39K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0221 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0222 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0223 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0224 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0225 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0226 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0227 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0228 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0229 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0230 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0231 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0232 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0233 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0234 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0235 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0236 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0237 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0238 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0239 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0240 | 88-108-390-080 | 0E | C-RES,U 39-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0241 | 88-108-331-080 | 0E | C-RES,U 330-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0242 | 88-108-331-080 | 0E | C-RES,U 330-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0243 | 88-108-391-080 | 0E | C-RES,U 390-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0244 | 88-108-391-080 | 0E | C-RES,U 390-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0247 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0248 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0250 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0251 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0252 | 88-108-271-080 | 0E | C-RES,U 270-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0253 | 88-108-271-080 | 0E | C-RES,U 270-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0255 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| O | AMP 1F | R 0257 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0258 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0259 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0260 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0261 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0262 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0263 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| O | AMP 1F | R 0264 | 87-A00-669-080 | 0E | RES,M/F 0.22-2W J RA | LHSM | CX-NT929 |
| X | AMP 1F | R 0265 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0301 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0302 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0303 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0304 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0305 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0306 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0307 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0308 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------------|---------|----------------|-------|------------------------|--------|------------|
| X | AMP 1F | R 0309 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0310 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0312 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0313 | 88-118-332-080 | 0E | C-RES,S 3.3K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0314 | 88-118-332-080 | 0E | C-RES,S 3.3K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0315 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0316 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0317 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0318 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0319 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0320 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0321 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0322 | 88-118-562-080 | 0E | C-RES,S 5.6K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0323 | 88-118-562-080 | 0E | C-RES,S 5.6K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0324 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0326 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0327 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0328 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0329 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0330 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0331 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0332 | 88-108-182-080 | 0E | C-RES,U 1.8K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0333 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0334 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0335 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0336 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0337 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0338 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0339 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0340 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0341 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0342 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0343 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0344 | 88-118-562-080 | 0E | C-RES,S 5.6K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0345 | 88-118-332-080 | 0E | C-RES,S 3.3K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0347 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0348 | 88-118-682-080 | 0E | C-RES,S 6.8K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0350 | 88-118-562-080 | 0E | C-RES,S 5.6K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0351 | 88-118-123-080 | 0E | C-RES,S 12K-1/10W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0417 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0418 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0419 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0420 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0427 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0428 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0429 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0430 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0431 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0432 | 88-108-182-080 | 0E | C-RES,U 1.8K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0433 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0438 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0439 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0501 | 88-121-151-080 | 0E | RES,150-1/8W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0502 | 88-121-151-080 | 0E | RES,150-1/8W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0503 | 88-121-151-080 | 0E | RES,150-1/8W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0504 | 88-121-151-080 | 0E | RES,150-1/8W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0691 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | AMP 1F | R 0692 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| ! | O AMP 1F | RY 0102 | 87-A91-686-010 | 1B | RELAY, G5PA-28 (OMRON) | LHSM | CX-NT929 |
| O | AMP 1F | TH 0101 | 87-A91-042-080 | 0E | C-THMS,100K 55001 | LHSM | CX-NT929 |
| O | AMP 1F | TH 0102 | 87-A91-042-080 | 0E | C-THMS,100K 55001 | LHSM | CX-NT929 |
| O | AMP 1F | TH 0202 | 87-A91-042-080 | 0E | C-THMS,100K 55001 | LHSM | CX-NT929 |
| ! | O AMP 1F | WH 0013 | 87-A90-460-010 | 0E | HLD, WIRE 2.5-7P | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-020-010 | -- | COVER, FAN | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-021-010 | -- | BOX, CASS L | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-022-010 | -- | BOX, CASS R | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-031-010 | -- | PANEL, UNDERCOVER | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-041-010 | -- | COVER, TRAY | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-042-010 | -- | PANEL, CD | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|--------------------|---------|----------------|-------|---------------------------|--------|------------|
| O | APPEARANCE | | 8B-NF4-043-010 | -- | PANEL, COVER | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-044-010 | -- | PANEL, KEY-CD | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-045-010 | -- | PANEL, TRAY | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-051-010 | -- | WINDOW, DISP | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-058-010 | -- | WINDOW, CASS L | LHSM | CX-NT929 |
| O | APPEARANCE | | 8B-NF4-059-010 | -- | WINDOW, CASS R | LHSM | CX-NT929 |
| O | APPEARANCE | | 8Z-NF3-048-010 | 0E | COVER, BOTTOM | LHSM | CX-NT929 |
| O | APPEARANCE | * | 8A-NF3-026-110 | 1F | CABI, BOTTOM | LHSM | CX-NT929 |
| O | APPEARANCE | * | 8A-NF3-027-110 | 2M | CABI, STEEL | LHSM | CX-NT929 |
| O | APPEARANCE | * | 8B-NF4-001-010 | -- | CABI, FR | LHSM | CX-NT929 |
| O | APPEARANCE | * | 8B-NF4-011-010 | -- | CABI, REAR | LHSM | CX-NT929 |
| O | CD | | 84-ZG1-245-210 | 0E | CAP, OPTICAL | LHSM | CX-NT929 |
| X | CD | | M8-6ZG-188-030 | -- | 6ZG-1 ZZRNDM | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0501 | 87-A12-062-080 | 0E | CAP, E 100-10 SMG | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0502 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0503 | 87-A10-353-080 | 0E | C-CAP, U 0.22-10 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0504 | 87-A10-353-080 | 0E | C-CAP, U 0.22-10 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0505 | 87-A10-025-080 | 0E | C-CAP, U 0.22-16 Z F | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0506 | 87-012-280-080 | 0E | C-CAP, U 3300P-50 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0507 | 87-010-986-080 | 0E | C-CAP, S 820P-50 J CH | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0508 | 87-A12-319-080 | 0E | C-CAP, U 0.1-25 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0509 | 87-A12-319-080 | 0E | C-CAP, U 0.1-25 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0510 | 87-012-280-080 | 0E | C-CAP, U 3300P-50 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0511 | 87-010-986-080 | 0E | C-CAP, S 820P-50 J CH | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0512 | 87-A10-025-080 | 0E | C-CAP, U 0.22-16 Z F | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0513 | 87-A12-083-080 | 0E | CAP, E 0.1-50 SMG | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0514 | 87-A12-061-080 | 0E | CAP, E 47-10 SMG | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0515 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0516 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0517 | 87-012-279-080 | 0E | C-CAP, U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0518 | 87-012-279-080 | 0E | C-CAP, U 2700P-50 K B GRM | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | C 0519 | 88-700-930-810 | 0E | CAP, M 0.22-50 J LDS | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0531 | 87-A12-091-080 | 0E | CAP, E 10-50 SMG | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0532 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0533 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0534 | 87-012-199-080 | 0E | C-CAP, U 220P-50 J CH | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0535 | 87-012-274-080 | 0E | C-CAP, U 1000P-50 K B | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0536 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0537 | 87-012-188-080 | 0E | C-CAP, U 47P-50 J CH | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0538 | 87-012-188-080 | 0E | C-CAP, U 47P-50 J CH | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0539 | 87-012-188-080 | 0E | C-CAP, U 47P-50 J CH | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | C 0541 | 87-012-274-080 | 0E | C-CAP, U 1000P-50 K B | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | CLP0501 | 87-A60-884-010 | 0E | PIN, DIAL COATING-SHS | LHSM | CX-NT929 |
| S | DSP/ECHO (MIC MIX) | D 0501 | 87-A40-747-080 | 0E | ZENER, UZ5.1BSB | LHSM | CX-NT929 |
| O | DSP/ECHO (MIC MIX) | FB 0501 | 87-008-372-080 | 0E | FLTR, EMI BL01 RN1 | LHSM | CX-NT929 |
| S | DSP/ECHO (MIC MIX) | IC 0501 | 87-A21-018-040 | 1H | C-IC, M65849BFP631D | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | JR 0504 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | JR 0506 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| S | DSP/ECHO (MIC MIX) | Q 0531 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | DSP/ECHO (MIC MIX) | Q 0532 | 87-A30-075-080 | 0E | C-TR, 2SA1235F | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0501 | 88-128-221-080 | 0E | C-RES, 220-1/8W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0502 | 88-128-221-080 | 0E | C-RES, 220-1/8W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0503 | 88-108-222-080 | 0E | C-RES, U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0504 | 88-108-223-080 | 0E | C-RES, U 22K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0505 | 88-121-473-080 | 0E | RES, 47K-1/8W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0506 | 88-121-473-080 | 0E | RES, 47K-1/8W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0507 | 88-121-473-080 | 0E | RES, 47K-1/8W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0508 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0509 | 88-108-392-080 | 0E | C-RES, U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0510 | 88-108-101-080 | 0E | C-RES, U 100-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0511 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0512 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0513 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0514 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0531 | 88-128-101-080 | 0E | C-RES, 100-1/8W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0532 | 88-108-822-080 | 0E | C-RES, U 8.2K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0533 | 88-108-101-080 | 0E | C-RES, U 100-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0534 | 88-108-392-080 | 0E | C-RES, U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0535 | 88-108-472-080 | 0E | C-RES, U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | DSP/ECHO (MIC MIX) | R 0536 | 88-108-104-080 | 0E | C-RES, U 100K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|--------------------|---------|----------------|-------|-------------------------------|--------|------------|
| X | DSP/ECHO (MIC MIX) | R 0537 | 88-108-123-080 | 0E | C-RES, U 12K-1/16W J | LHSM | CX-NT929 |
| ! | X ELECTRICAL | | 87-069-033-010 | 0E | CABLE, TIE | LHSM | CX-NT929 |
| ! | O ELECTRICAL | | 87-085-185-010 | 0E | BUSHING, AC CORD(E) CM-22B | LHSM | CX-NT929 |
| O | ELECTRICAL | | 87-A91-736-010 | 1F | FAN, DSB0812M-S382 -300MM | LHSM | CX-NT929 |
| O | ELECTRICAL | | 87-A91-870-010 | 0E | F-BEAD, 9.5-17.5-28.5 TAITECH | LHSM | CX-NT929 |
| O | ELECTRICAL | | 88-906-481-110 | 1A | FF-CABLE, 6P 1.25 480MM | LHSM | CX-NT929 |
| O | ELECTRICAL | | 88-908-381-110 | 0E | FF-CABLE, 8P 1.25 | LHSM | CX-NT929 |
| O | ELECTRICAL | | 88-910-471-110 | -- | FF-CABLE, 10P 1.25 | LHSM | CX-NT929 |
| O | ELECTRICAL | | 88-915-221-110 | 1A | FF-CABLE, 15P 1.25 220MM | LHSM | CX-NT929 |
| X | ELECTRICAL | | 89-750-064-410 | 0E | WIRE ASSY, 60 LUG | LHSM | CX-NT929 |
| O | ELECTRICAL | | 8A-MA5-610-010 | 0E | LBL, FUSE 4A | LHSM | CX-NT929 |
| O | ELECTRICAL | | 8B-NF4-633-010 | -- | FAN, ADO612DS-D70GL | LHSM | CX-NT929 |
| ! | S ELECTRICAL | F 0101 | 87-035-459-010 | 0E | FUSE, 5A 250V T 218 | LHSM | CX-NT929 |
| ! | S ELECTRICAL | F 0102 | 87-035-459-010 | 0E | FUSE, 5A 250V T 218 | LHSM | CX-NT929 |
| O | ELECTRICAL | PT 0101 | 8B-NF4-601-010 | -- | PT, LH EI114-80 BNF-4 | LHSM | CX-NT929 |
| ! | O ELECTRICAL | W 0101 | 87-A80-157-010 | 1B | AC CORD ASSY, E BLK CC | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0609 | 87-012-277-080 | 0E | C-CAP, U 1800P-50 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0610 | 87-012-277-080 | 0E | C-CAP, U 1800P-50 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0611 | 87-010-956-080 | 0E | C-CAP, S 0.068-25 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0612 | 87-016-369-080 | 0E | C-CAP, S 0.033-25 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0613 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0614 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0615 | 87-A12-319-080 | 0E | C-CAP, U 0.1-25 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0616 | 87-A10-260-080 | 0E | C-CAP, U 0.1-16 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0617 | 87-010-829-080 | 0E | C-CAP, U 0.047-16 Z F | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0618 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0619 | 87-A12-062-080 | 0E | CAP, E 100-10 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0620 | 87-012-277-080 | 0E | C-CAP, U 1800P-50 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0622 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0623 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0624 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0626 | 87-A12-062-080 | 0E | CAP, E 100-10 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0627 | 87-A12-086-080 | 0E | CAP, E 0.47-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0628 | 87-A12-086-080 | 0E | CAP, E 0.47-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0629 | 87-A10-504-080 | 0E | C-CAP, U 0.047-16 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0630 | 87-A10-504-080 | 0E | C-CAP, U 0.047-16 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0631 | 87-012-281-080 | 0E | C-CAP, U 3900P-50 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0632 | 87-012-281-080 | 0E | C-CAP, U 3900P-50 K B GRM | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0634 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0635 | 87-A12-376-080 | 0E | CAP, M 0.1-100 J CP | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0636 | 87-A12-376-080 | 0E | CAP, M 0.1-100 J CP | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0637 | 87-A12-376-080 | 0E | CAP, M 0.1-100 J CP | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0638 | 87-A12-376-080 | 0E | CAP, M 0.1-100 J CP | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0639 | 87-A12-091-080 | 0E | CAP, E 10-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0641 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0642 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0643 | 87-010-831-080 | 0E | C-CAP, U 0.1-16 Z F | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0644 | 87-A12-087-080 | 0E | CAP, E 1-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0645 | 87-A12-088-080 | 0E | CAP, E 2.2-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0646 | 87-A12-088-080 | 0E | CAP, E 2.2-50 SMG | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0671 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0672 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0673 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0677 | 87-010-403-080 | 0E | CAP, E 3.3-50 M 11L SME | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0678 | 87-010-403-080 | 0E | CAP, E 3.3-50 M 11L SME | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0679 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0680 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0682 | 87-010-759-080 | 0E | C-CAP, U 0.1-25 Z F | LHSM | CX-NT929 |
| O | FUNC/E.VR | C 0699 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| ! | O FUNC/E.VR | CN 0601 | 87-099-719-010 | 1B | CONN, 30P H BLK TYK-B(X) | LHSM | CX-NT929 |
| ! | O FUNC/E.VR | CN 0602 | 87-A60-131-010 | 0E | CONN, 6P V FE | LHSM | CX-NT929 |
| ! | O FUNC/E.VR | CN 0607 | 87-A60-996-010 | 0E | CONN, 13P V BLK TAC-L13X-A3 | LHSM | CX-NT929 |
| S | FUNC/E.VR | D 0601 | 87-A40-745-080 | 0E | ZENER, UZ4.7BSA | LHSM | CX-NT929 |
| S | FUNC/E.VR | D 0603 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| S | FUNC/E.VR | D 0605 | 87-A40-392-080 | 0E | DIODE, 1N5818-T | LHSM | CX-NT929 |
| S | FUNC/E.VR | D 0606 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| X | FUNC/E.VR | FB 0601 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| S | FUNC/E.VR | IC 0601 | 87-A21-452-130 | 1H | C-IC, BD3876AKS2 | LHSM | CX-NT929 |
| O | FUNC/E.VR | J 0601 | 87-A60-885-010 | 1A | JACK, PIN 6P R/W MSC | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0601 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| X | FUNC/E.VR | JR 0605 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0610 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0612 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0613 | 88-108-123-080 | 0E | C-RES,U 12K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0614 | 88-108-123-080 | 0E | C-RES,U 12K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0618 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0619 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0622 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0623 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0624 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0635 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0636 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0637 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0638 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0639 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0640 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0641 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0642 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0643 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0644 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0645 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0646 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | JR 0661 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0601 | 87-026-610-080 | 0E | TR,KTC3198GR | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0606 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0607 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0608 | 87-A30-455-040 | 0E | C-TR,DTA144EKA | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0611 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0612 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0613 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0615 | 87-A30-086-040 | 0E | C-TR,CSD1306E | LHSM | CX-NT929 |
| S | FUNC/E.VR | Q 0616 | 87-A30-086-040 | 0E | C-TR,CSD1306E | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0601 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0602 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0603 | 88-108-393-080 | 0E | C-RES,U 39K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0604 | 88-108-393-080 | 0E | C-RES,U 39K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0605 | 88-121-393-080 | 0E | RES,39K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0606 | 88-121-393-080 | 0E | RES,39K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0607 | 88-121-472-080 | 0E | RES,4.7K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0608 | 88-121-472-080 | 0E | RES,4.7K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0609 | 88-121-392-080 | 0E | RES,3.9K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0610 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0611 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0612 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0613 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0614 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0615 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0616 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0617 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0618 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0619 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0620 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0621 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0622 | 88-108-183-080 | 0E | C-RES,U 18K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0623 | 88-121-223-080 | 0E | RES,22K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0625 | 88-108-105-080 | 0E | C-RES,U 1M-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0626 | 88-128-470-080 | 0E | C-RES, 47-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0627 | 88-128-330-080 | 0E | C-RES, 33-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0628 | 88-128-330-080 | 0E | C-RES, 33-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0629 | 88-121-330-080 | 0E | RES,33-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0632 | 88-128-560-080 | 0E | C-RES, 56-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0633 | 88-128-560-080 | 0E | C-RES, 56-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0634 | 88-128-560-080 | 0E | C-RES, 56-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0635 | 88-128-560-080 | 0E | C-RES, 56-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0636 | 88-128-103-080 | 0E | C-RES, 10K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0637 | 88-118-104-080 | 0E | C-RES,S 100K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0639 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0640 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0641 | 88-108-154-080 | 0E | C-RES,U 150K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0642 | 88-108-154-080 | 0E | C-RES,U 150K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------------|---------|----------------|-------|-----------------------|--------|------------|
| X | FUNC/E.VR | R 0645 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0646 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0647 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0648 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0651 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0653 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0654 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0655 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0659 | 88-108-105-080 | 0E | C-RES,U 1M-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0660 | 88-108-105-080 | 0E | C-RES,U 1M-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0661 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0662 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0663 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0664 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0665 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0666 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0667 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0668 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0671 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0672 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0676 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0677 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0678 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0679 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0680 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0683 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0684 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0685 | 88-121-102-080 | 0E | RES,1K-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0686 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0687 | 88-118-683-080 | 0E | C-RES,S 68K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0688 | 88-118-105-080 | 0E | C-RES,S 1M-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0693 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0694 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0695 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0696 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0697 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0698 | 88-128-560-080 | 0E | C-RES, 56-1/8W J | LHSM | CX-NT929 |
| X | FUNC/E.VR | R 0699 | 88-128-560-080 | 0E | C-RES, 56-1/8W J | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-061-010 | -- | KEY,GEQ | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-062-010 | -- | KEY,ASSY FUNC | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-063-010 | -- | BTN,POWER | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-064-010 | -- | KEY,BBE | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-065-010 | -- | KEY,JOG | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-066-010 | -- | KEY,KARAOKE | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-067-010 | -- | KEY,ASSY OPE | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-068-010 | -- | BTN,PAUSE | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-069-010 | -- | KEY,REC | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-070-010 | -- | KEY,ASSY CD | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-071-010 | -- | KEY,SPICE | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-072-010 | -- | KEY,RDS | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-073-010 | -- | CAP, CD | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-077-010 | -- | RING,JOG H | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-079-010 | -- | RING,VOL | LHSM | CX-NT929 |
| O | KNOB | | 8B-NF4-081-010 | -- | KNOB,RTRY JOG | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-082-010 | -- | REFLECTOR,CD | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-085-010 | -- | REFLECTOR,OPE DIRECT | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-087-010 | -- | FRAME,FUNC | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-088-010 | -- | FRAME,OPE | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-091-010 | -- | BTN,TAPE | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-092-010 | -- | BTN,TUNER | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-093-010 | -- | BTN,AUX | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-094-010 | -- | BTN,CD | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-095-010 | -- | BTN,MD | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-096-010 | -- | BTN,STOP | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-097-010 | -- | BTN,PLAY | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-098-010 | -- | BTN,FW | LHSM | CX-NT929 |
| X | KNOB | | 8B-NF4-099-010 | -- | BTN,REW | LHSM | CX-NT929 |
| X | MECHANICAL | | 8B-NF4-210-010 | -- | CHAS,MAIN | LHSM | CX-NT929 |
| O | MECHANICAL | * | 8A-NF3-212-110 | 1B | HLDR,REAR | LHSM | CX-NT929 |
| O | MECHANICAL | * | 8A-NF3-213-210 | 1B | HLDR,HT-SINK L | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME | |
|-----|------------|---------|----------------|----------------|-----------------|-------------------------------|------------|----------|
| O | MECHANICAL | * | 8A-NF3-214-110 | 1B | HLDR, HT-SINK R | LHSM | CX-NT929 | |
| O | MECHANICAL | * | 8B-NF4-212-010 | -- | HLDR, CHAS L-1 | LHSM | CX-NT929 | |
| O | MECHANICAL | * | 8B-NF4-213-010 | -- | HLDR, CHAS, L-2 | LHSM | CX-NT929 | |
| O | MECHANICAL | * | 8B-NF4-214-010 | -- | HLDR, CHAS R-1 | LHSM | CX-NT929 | |
| O | MECHANICAL | * | 8B-NF4-215-010 | -- | HLDR, CHAS R-2 | LHSM | CX-NT929 | |
| X | MECHANICAL | * | 8B-NF4-220-010 | -- | HT-SINK, MAIN | LHSM | CX-NT929 | |
| O | MECHANICAL | * | 8B-NF4-222-010 | -- | HLDR, TR VM | LHSM | CX-NT929 | |
| O | MIC | C | 0602 | 87-012-282-080 | 0E | C-CAP,U 4700P-50 K B | LHSM | CX-NT929 |
| O | MIC | C | 0603 | 87-010-112-040 | 0E | CAP,E 100-16 M 11L SME | LHSM | CX-NT929 |
| O | MIC | C | 0604 | 87-010-405-040 | 0E | CAP,E 10-50 M 11L SME | LHSM | CX-NT929 |
| O | MIC | C | 0605 | 87-010-546-040 | 0E | CAP,E 0.33-50 M 11L SME | LHSM | CX-NT929 |
| O | MIC | C | 0606 | 87-012-191-080 | 0E | C-CAP,U 68P-50 J CH | LHSM | CX-NT929 |
| O | MIC | C | 0608 | 87-012-268-080 | 0E | C-CAP,U 330P-50 K B GRM | LHSM | CX-NT929 |
| O | MIC | C | 0610 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MIC | C | 0621 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | MIC | J | 0601 | 87-A61-243-010 | 1A | JACK, 6.3 BLK MONO W/SW V MSC | LHSM | CX-NT929 |
| O | MIC | J | 0602 | 87-A61-243-010 | 1A | JACK, 6.3 BLK MONO W/SW V MSC | LHSM | CX-NT929 |
| O | MIC | L | 0601 | 87-003-098-080 | 0E | COIL, 2.2UH K LAL02 | LHSM | CX-NT929 |
| S | MIC | Q | 0601 | 87-A30-087-080 | 0E | C-FET, 2SK2158 | LHSM | CX-NT929 |
| S | MIC | Q | 0602 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | MIC | Q | 0603 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | MIC | Q | 0604 | 87-A30-075-080 | 0E | C-TR, 2SA1235F | LHSM | CX-NT929 |
| X | MIC | R | 0601 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0602 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0603 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0604 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0605 | 88-108-334-080 | 0E | C-RES,U 330K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0606 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0607 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0608 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0609 | 88-108-334-080 | 0E | C-RES,U 330K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0610 | 88-108-154-080 | 0E | C-RES,U 150K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0611 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MIC | R | 0613 | 88-121-101-080 | 0E | RES,100-1/8W J | LHSM | CX-NT929 |
| X | MIC | R | 0616 | 88-121-101-080 | 0E | RES,100-1/8W J | LHSM | CX-NT929 |
| O | MICON | * | | 8B-NF4-202-010 | -- | GUIDE, FL | LHSM | CX-NT929 |
| X | MICON | * | | 8B-NF4-610-010 | -- | PWB, COMB FRONT BNF4 | LHSM | CX-NT929 |
| X | MICON | * | | 8B-NF4-611-010 | -- | PWB, FRONT DISPLAY BNF4 | LHSM | CX-NT929 |
| X | MICON | * | | 8B-NF4-612-010 | -- | PWB, FRONT CD KEY BNF-4 | LHSM | CX-NT929 |
| X | MICON | * | | 8B-NF4-613-010 | -- | PWB, FRONT FUNC LED BNF-4 | LHSM | CX-NT929 |
| X | MICON | * | | 8B-NF4-614-010 | -- | PWB, FRONT DECK LED BNF-4 | LHSM | CX-NT929 |
| O | MICON | C | 0106 | 87-012-335-080 | 0E | C-CAP,U 270P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0110 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | MICON | C | 0112 | 87-010-402-040 | 0E | CAP,E 2.2-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0113 | 87-010-402-040 | 0E | CAP,E 2.2-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0121 | 87-010-757-080 | 0E | C-CAP,U 0.047-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0122 | 87-010-757-080 | 0E | C-CAP,U 0.047-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0141 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | MICON | C | 0142 | 87-012-199-080 | 0E | C-CAP,U 220P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0151 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | MICON | C | 0152 | 87-012-199-080 | 0E | C-CAP,U 220P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0156 | 87-010-405-040 | 0E | CAP,E 10-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0157 | 87-012-268-080 | 0E | C-CAP,U 330P-50 K B GRM | LHSM | CX-NT929 |
| O | MICON | C | 0161 | 87-015-694-040 | 0E | CAP,E 0.47-50 M 7L SRA | LHSM | CX-NT929 |
| O | MICON | C | 0162 | 87-010-785-080 | 0E | C-CAP,U 0.015-25 K B GRM | LHSM | CX-NT929 |
| O | MICON | C | 0163 | 87-010-787-080 | 0E | C-CAP,U 0.022-25 K B | LHSM | CX-NT929 |
| O | MICON | C | 0170 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0171 | 87-012-278-080 | 0E | C-CAP,U 2200P-50 K B | LHSM | CX-NT929 |
| O | MICON | C | 0172 | 87-010-263-040 | 0E | CAP,E 100-10 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0175 | 87-010-248-040 | 0E | CAP,E 220-10 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0176 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0177 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0178 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0181 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0182 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0184 | 87-010-757-080 | 0E | C-CAP,U 0.047-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0191 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0192 | 87-012-178-080 | 0E | C-CAP,U 18P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0340 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0341 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME | |
|-----|-----------|---------|------------|----------------|-------------|------------------------|------------|----------|
| O | MICON | C | 0342 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0343 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0344 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0345 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0346 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0347 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0348 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0349 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0350 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0351 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0352 | 87-010-176-080 | 0E | C-CAP,S 680P-50 J SL | LHSM | CX-NT929 |
| O | MICON | C | 0360 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | MICON | C | 0361 | 87-010-757-080 | 0E | C-CAP,U 0.047-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0362 | 87-010-408-040 | 0E | CAP,E 47-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0363 | 87-010-405-040 | 0E | CAP,E 10-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0364 | 87-010-405-040 | 0E | CAP,E 10-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0401 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0402 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0411 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0412 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0901 | 87-010-544-040 | 0E | CAP,E 0.1-50 M 11L SME | LHSM | CX-NT929 |
| O | MICON | C | 0902 | 87-A10-025-080 | 0E | C-CAP,U 0.22-16 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0903 | 87-A10-025-080 | 0E | C-CAP,U 0.22-16 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0904 | 87-012-188-080 | 0E | C-CAP,U 47P-50 J CH | LHSM | CX-NT929 |
| O | MICON | C | 0905 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | MICON | C | 0906 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| ! | O MICON | CN | 0101 | 87-099-720-010 | 1B | CONN,30P BLK TYK-B(P) | LHSM | CX-NT929 |
| ! | O MICON | CN | 0102 | 87-A60-058-010 | 0E | CONN,10P V 9604S-10C | LHSM | CX-NT929 |
| ! | O MICON | CN | 0420 | 87-099-667-010 | 0E | CONN,8P H TUC-P08P-B1 | LHSM | CX-NT929 |
| ! | O MICON | CN | 0421 | 87-099-669-010 | 0E | CONN,8P H TUC-08PX-B1 | LHSM | CX-NT929 |
| ! | O MICON | CN | 0430 | 87-099-565-010 | 0E | CONN,6P TUC-P6P-B1 | LHSM | CX-NT929 |
| ! | O MICON | CN | 0431 | 87-099-554-010 | 0E | CONN,6P H TUC-P6X-B1 | LHSM | CX-NT929 |
| ! | O MICON | CN | 0501 | 87-A60-079-010 | 0E | CONN,08P H 9604S-08F | LHSM | CX-NT929 |
| ! | O MICON | CN | 0502 | 87-A60-059-010 | 0E | CONN,08P V 9604S-08C | LHSM | CX-NT929 |
| ! | O MICON | CN | 0701 | 87-099-750-010 | 0E | CONN,15P V 9604SC | LHSM | CX-NT929 |
| S | MICON | D | 0121 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0161 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0171 | 87-A40-234-080 | 0E | ZENER,MTZJ5.6A | LHSM | CX-NT929 |
| S | MICON | D | 0172 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0173 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0182 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0302 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0310 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0311 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0371 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0372 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0373 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0374 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0375 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0376 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0377 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0378 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0381 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0382 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0383 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0384 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0385 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0386 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0387 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0388 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0701 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0702 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0901 | 87-A40-747-080 | 0E | ZENER,UZ5.1BSB | LHSM | CX-NT929 |
| S | MICON | D | 0911 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0912 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0913 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | MICON | D | 0914 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| O | MICON | FL | 0101 | 8B-NF4-615-010 | -- | FL,HNA-13LM01-BNF4 | LHSM | CX-NT929 |
| S | MICON | IC | 0101 | 8B-NF4-635-010 | -- | C-IC,LC876596W-5T96 | LHSM | CX-NT929 |
| S | MICON | IC | 0157 | 87-A21-831-010 | 1B | IC,SPS-442-1-F1 | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|-----------------------|--------|------------|
| S | MICON | IC 0401 | 87-A21-021-040 | 1B | C-IC, BU2099FV | LHSM | CX-NT929 |
| S | MICON | IC 0411 | 87-070-289-040 | 1B | C-IC, BU2092F | LHSM | CX-NT929 |
| S | MICON | IC 0901 | 87-A21-577-040 | 1C | C-IC, M61506FP | LHSM | CX-NT929 |
| X | MICON | JR 0101 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0102 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0103 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0104 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0105 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0106 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0107 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0108 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0109 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | MICON | JR 0110 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| O | MICON | L 0191 | 87-A50-333-010 | 0E | COIL, OSC 9.43MHZ | LHSM | CX-NT929 |
| O | MICON | LED0181 | 87-A40-317-080 | 0E | LED, SLR-342VCT31 RED | LHSM | CX-NT929 |
| O | MICON | LED0182 | 87-A40-317-080 | 0E | LED, SLR-342VCT31 RED | LHSM | CX-NT929 |
| O | MICON | LED0401 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0402 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0403 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0404 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0405 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0406 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0407 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0408 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0411 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0412 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0413 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0414 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0415 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0416 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0417 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0418 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0421 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0422 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0423 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0424 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0425 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0426 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0427 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0428 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0429 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0430 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0431 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0432 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0433 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0434 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0435 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0436 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0437 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0438 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0439 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0440 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0441 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0442 | 87-A41-056-040 | 0E | LED, HLMF-D405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0501 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0502 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0503 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0504 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0505 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0506 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0507 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0508 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0509 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| O | MICON | LED0510 | 87-A41-055-040 | 0E | LED, HLMF-K405 ORANGE | LHSM | CX-NT929 |
| S | MICON | Q 0161 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | MICON | Q 0171 | 87-026-609-080 | 0E | TR, KTA1266GR | LHSM | CX-NT929 |
| S | MICON | Q 0172 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | MICON | Q 0173 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | MICON | Q 0174 | 87-A30-447-040 | 1F | C-TR, DTA114EKA | LHSM | CX-NT929 |
| S | MICON | Q 0181 | 87-A30-427-040 | 0E | C-TR, DTC114EKA | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| S | MICON | Q 0182 | 87-A30-087-080 | 0E | C-FET,2SK2158 | LHSM | CX-NT929 |
| S | MICON | Q 0301 | 87-A30-276-040 | 0E | C-TR,DTA143EKA | LHSM | CX-NT929 |
| S | MICON | Q 0701 | 87-A30-582-080 | 0E | TR,CD1585BC | LHSM | CX-NT929 |
| S | MICON | Q 0702 | 87-A30-318-080 | 0E | TR,CSA952K | LHSM | CX-NT929 |
| S | MICON | Q 0703 | 87-A30-318-080 | 0E | TR,CSA952K | LHSM | CX-NT929 |
| X | MICON | R 0101 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0104 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0105 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0106 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0107 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0108 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0109 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0110 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0111 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0112 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0113 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0114 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0115 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0116 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0117 | 88-108-474-080 | 0E | C-RES,U 470K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0121 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0122 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0123 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0124 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0125 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0126 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0127 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0128 | 88-108-560-080 | 0E | C-RES,U 56-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0129 | 88-108-560-080 | 0E | C-RES,U 56-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0130 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0131 | 88-108-563-080 | 0E | C-RES,U 56K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0132 | 88-108-474-080 | 0E | C-RES,U 470K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0133 | 88-121-104-080 | 0E | RES,100K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0134 | 88-121-104-080 | 0E | RES,100K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0141 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0142 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0143 | 88-108-184-080 | 0E | C-RES,U 180K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0144 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0145 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0151 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0152 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0153 | 88-108-184-080 | 0E | C-RES,U 180K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0154 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0155 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0156 | 88-121-470-080 | 0E | RES,47-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0157 | 88-108-563-080 | 0E | C-RES,U 56K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0161 | 88-108-124-080 | 0E | C-RES,U 120K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0162 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0163 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0164 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0165 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0167 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0171 | 88-121-470-080 | 0E | RES,47-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0172 | 88-121-470-080 | 0E | RES,47-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0173 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0174 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0175 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0176 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0180 | 88-108-105-080 | 0E | C-RES,U 1M-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0181 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0182 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0183 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0184 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | MICON | R 0185 | 88-121-102-080 | 0E | RES,1K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0186 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0187 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0188 | 88-121-683-080 | 0E | RES,68K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0191 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0194 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0195 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| X | MICON | R 0199 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0210 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0211 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0212 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0213 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0214 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0215 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0216 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0217 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0218 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0219 | 88-108-182-080 | 0E | C-RES,U 1.8K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0220 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0221 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0222 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0223 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0224 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0225 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0226 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0227 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0228 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0229 | 88-108-182-080 | 0E | C-RES,U 1.8K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0230 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0231 | 88-108-272-080 | 0E | C-RES,U 2.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0232 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0233 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0234 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0235 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0236 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0237 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0238 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0240 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0241 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0242 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0243 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0244 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0245 | 88-108-821-080 | 0E | C-RES,U 820-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0246 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0247 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0248 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0249 | 88-108-182-080 | 0E | C-RES,U 1.8K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0250 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0251 | 88-108-272-080 | 0E | C-RES,U 2.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0252 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0253 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0254 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0255 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0256 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0257 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0301 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0302 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0303 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0304 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0305 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0306 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0307 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0308 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0309 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0310 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0311 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0312 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0313 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0314 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0315 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0316 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0317 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0318 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0319 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0320 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0321 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0322 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| X | MICON | R 0323 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0324 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0325 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0326 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0327 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0328 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0329 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0330 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0331 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0332 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0333 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0334 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0335 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0336 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0337 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0338 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0339 | 88-118-473-080 | 0E | C-RES,S 47K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0340 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0341 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0342 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0343 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0344 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0345 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0346 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0347 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0348 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0349 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0350 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0351 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0352 | 88-118-223-080 | 0E | C-RES,S 22K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0360 | 88-121-100-080 | 0E | RES,10-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0361 | 88-130-391-080 | 0E | RES,390-1/4W J | LHSM | CX-NT929 |
| X | MICON | R 0362 | 88-130-391-080 | 0E | RES,390-1/4W J | LHSM | CX-NT929 |
| X | MICON | R 0363 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0364 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0365 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0366 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0367 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0368 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0369 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0370 | 88-121-822-080 | 0E | RES,8.2K-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0371 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0381 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0382 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0383 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0384 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0385 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0386 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0387 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0388 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0389 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0401 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0402 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0403 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0404 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0405 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0406 | 88-121-331-080 | 0E | RES,330-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0407 | 88-121-331-080 | 0E | RES,330-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0411 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0412 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0413 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0414 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0415 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0416 | 88-121-331-080 | 0E | RES,330-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0417 | 88-121-331-080 | 0E | RES,330-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0421 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0422 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0423 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0424 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0425 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use Japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| X | MICON | R 0431 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0432 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0433 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0434 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0435 | 88-121-561-080 | 0E | RES,560-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0441 | 88-121-681-080 | 0E | RES,680-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0442 | 88-121-681-080 | 0E | RES,680-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0501 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0502 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0503 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0504 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0505 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0506 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0507 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0508 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0509 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0510 | 88-108-122-080 | 0E | C-RES,U 1.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0511 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0512 | 88-108-272-080 | 0E | C-RES,U 2.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0513 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0514 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0515 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0516 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0517 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0702 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0703 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0704 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0705 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0706 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0707 | 88-118-102-080 | 0E | C-RES,S 1K-1/10W J | LHSM | CX-NT929 |
| X | MICON | R 0719 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0720 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0901 | 88-121-391-080 | 0E | RES,390-1/8W J | LHSM | CX-NT929 |
| X | MICON | R 0902 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0903 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0904 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0905 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0906 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0907 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0908 | 88-108-683-080 | 0E | C-RES,U 68K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0911 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0912 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0913 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0914 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0915 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0916 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0917 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | MICON | R 0918 | 88-108-273-080 | 0E | C-RES,U 27K-1/16W J | LHSM | CX-NT929 |
| O | MICON | S 0211 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0212 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0213 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0214 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0215 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0216 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0217 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0218 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0219 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0220 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0221 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0222 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0223 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0224 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0225 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0226 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0227 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0228 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0229 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0230 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0231 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0232 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------------------|---------|------------------|-------|--------------------------|--------|------------|
| O | MICON | S 0233 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0234 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0235 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0236 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0237 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0238 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0239 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0241 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0242 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0243 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0244 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0245 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0246 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0247 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0248 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0249 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0250 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0251 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0252 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0257 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0258 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0501 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0502 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0503 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0504 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0505 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0506 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | S 0507 | 87-A90-095-080 | 0E | SW, TACT EVQ11G04M | LHSM | CX-NT929 |
| O | MICON | SW 0141 | 87-A92-073-010 | -- | SW, RTRY EC12E24204-30MM | LHSM | CX-NT929 |
| O | MICON | SW 0151 | 87-A92-074-010 | -- | SW, RTRY EC12E12204-30MM | LHSM | CX-NT929 |
| O | OTHERS | | 82-NF5-218-010 | 0E | SPR-T, EJECT 1 (SIN) | LHSM | CX-NT929 |
| O | OTHERS | | 82-NF5-219-010 | 0E | SPR-T, EJECT 2 (SIN) | LHSM | CX-NT929 |
| ! | O | OTHERS | 82-NF5-229-010 | 0E | PLATE, LOCK (*) | LHSM | CX-NT929 |
| ! | O | OTHERS | 86-NF9-224-010 | 0E | SPR-C, LOCK | LHSM | CX-NT929 |
| ! | X | OTHERS | 86-NFZ-205-010 | 0E | CUSH, 12.5-15.5-2 (NP) | LHSM | CX-NT929 |
| ! | O | OTHERS | 87-064-185-010 | 0E | HLDR, WIRE PVC 0.5 | LHSM | CX-NT929 |
| ! | O | OTHERS | 87-NF4-216-010 | 0E | HLDR, LOCK 1 | LHSM | CX-NT929 |
| ! | O | OTHERS | 87-NF4-217-110 | 0E | HLDR, LOCK 2 | LHSM | CX-NT929 |
| ! | O | OTHERS | 87-NF4-221-010 | 0E | HLDR, CABLE | LHSM | CX-NT929 |
| ! | O | OTHERS | 87-NF8-220-010 | 0E | DMPR, 150 | LHSM | CX-NT929 |
| X | OTHERS | | 8A-NHP-210-010 | 1B | PLATE, PT | LHSM | CX-NT929 |
| O | OTHERS | | 8A-NHP-214-010 | 0E | HLDR, HL | LHSM | CX-NT929 |
| X | OTHERS | | 8B-NF4-224-010 | -- | SH, TR | LHSM | CX-NT929 |
| ! | O | OTHERS | * 8A-NF8-206-010 | 0E | HLDR, PWB M | LHSM | CX-NT929 |
| O | OTHERS | | * 8B-NF4-201-010 | -- | GUIDE, LED CD | LHSM | CX-NT929 |
| O | OTHERS | | * 8B-NF4-223-010 | -- | HLDR, PWB H11.9 | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | | 84-NF6-202-010 | 0E | HT-SINK, MK2 | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | | * 8B-NF4-640-010 | -- | PWB, COMB MAIN | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | | * 8B-NF4-641-010 | -- | PWB, MAIN | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0011 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0012 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0013 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0014 | 87-A12-317-080 | 0E | C-CAP, U 0.1-50 Z F | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0015 | 87-A10-122-090 | 1H | CAP, E 6800-65 M VR | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0016 | 87-A10-122-090 | 1H | CAP, E 6800-65 M VR | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0019 | 87-016-035-090 | 1E | CAP, E 6800-35 M VR | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0020 | 87-016-035-090 | 1E | CAP, E 6800-35 M VR | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0025 | 87-A12-093-080 | 0E | CAP, E 33-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0026 | 87-A12-093-080 | 0E | CAP, E 33-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0027 | 87-A12-093-080 | 0E | CAP, E 33-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0028 | 87-A12-093-080 | 0E | CAP, E 33-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0029 | 87-A12-095-080 | 0E | CAP, E 100-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0030 | 87-A12-095-080 | 0E | CAP, E 100-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0031 | 87-A12-062-080 | 0E | CAP, E 100-10 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0032 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0033 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0034 | 87-A12-089-080 | 0E | CAP, E 3.3-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0035 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0036 | 87-A12-062-080 | 0E | CAP, E 100-10 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0037 | 87-A12-072-080 | 0E | CAP, E 100-25 SMG | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|--------------------|---------|----------------|-------|----------------------------|--------|------------|
| O | P-SUPPLY/PWB/FAN | C 0038 | 87-A12-092-080 | 0E | CAP,E 22-50 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0039 | 87-A12-066-080 | 0E | CAP,E 47-16 SMG | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | C 0040 | 87-A12-074-080 | 0E | CAP,E 470-25 SMG | LHSM | CX-NT929 |
| ! | O P-SUPPLY/PWB/FAN | CN 0011 | 87-A60-996-010 | 0E | CONN,13P V BLK TAC-L13X-A3 | LHSM | CX-NT929 |
| ! | O P-SUPPLY/PWB/FAN | CN 0013 | 87-A61-109-010 | 0E | CONN,7P V TID-A | LHSM | CX-NT929 |
| O | P-SUPPLY/PWB/FAN | CNA0013 | 8B-NF4-662-010 | -- | CONN ASSY,11P TID-A(600) | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0011 | 87-A40-673-090 | 1B | DIODE,D10XB20 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0019 | 87-A40-269-080 | 0E | C-DIODE,MC2836 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0020 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0021 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0022 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0023 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0024 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0025 | 87-A40-784-080 | 0E | ZENER,UZ39BSB | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0026 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0027 | 87-A40-270-080 | 0E | C-DIODE,MC2838 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0028 | 87-A40-269-080 | 0E | C-DIODE,MC2836 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0029 | 87-A40-269-080 | 0E | C-DIODE,MC2836 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0031 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0051 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0052 | 87-A40-764-080 | 0E | ZENER,UZ10BSC | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0053 | 87-A40-553-080 | 0E | DIODE,1N4003 LES | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0054 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0055 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | D 0056 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | JR 0014 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | JR 0015 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | JR 0016 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | JR 0017 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | JR 0018 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0011 | 87-A30-515-080 | 0E | TR,2SA19790/Y | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0012 | 87-A30-515-080 | 0E | TR,2SA19790/Y | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0013 | 87-A30-515-080 | 0E | TR,2SA19790/Y | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0014 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0015 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0016 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0017 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0018 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0019 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0053 | 87-026-610-080 | 0E | TR,KTC3198GR | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0054 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0055 | 87-A30-075-080 | 0E | C-TR,2SA1235F | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0056 | 87-A30-495-080 | 0E | TR,2SA1981Y | LHSM | CX-NT929 |
| S | P-SUPPLY/PWB/FAN | Q 0057 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0017 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0018 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0019 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0020 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0021 | 88-128-104-080 | 0E | C-RES, 100K-1/8W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0022 | 88-128-104-080 | 0E | C-RES, 100K-1/8W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0023 | 88-118-471-080 | 0E | C-RES,S 470-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0024 | 88-118-821-080 | 0E | C-RES,S 820-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0025 | 88-118-821-080 | 0E | C-RES,S 820-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0026 | 88-118-471-080 | 0E | C-RES,S 470-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0027 | 88-128-100-080 | 0E | C-RES, 10-1/8W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0028 | 88-128-104-080 | 0E | C-RES, 100K-1/8W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0029 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0030 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0031 | 88-128-473-080 | 0E | C-RES, 47K-1/8W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0032 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0033 | 88-128-473-080 | 0E | C-RES, 47K-1/8W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0034 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0035 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0036 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0039 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0040 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0041 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0042 | 88-118-103-080 | 0E | C-RES,S 10K-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0044 | 88-108-123-080 | 0E | C-RES,U 12K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0046 | 88-118-102-080 | 0E | C-RES,S 1K-1/10W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|--------------------|---------|----------------|-------|--------------------------------|--------|------------|
| X | P-SUPPLY/PWB/FAN | R 0047 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0048 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0049 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0053 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0054 | 88-118-680-080 | 0E | C-RES,S 68-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0055 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0057 | 88-108-221-080 | 0E | C-RES,U 220-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0058 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0059 | 88-118-471-080 | 0E | C-RES,S 470-1/10W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0061 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| | | | | | | | |
| X | P-SUPPLY/PWB/FAN | R 0065 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0066 | 88-108-333-080 | 0E | C-RES,U 33K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0067 | 88-108-394-080 | 0E | C-RES,U 390K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0068 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0069 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0070 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0071 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| X | P-SUPPLY/PWB/FAN | R 0072 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| ! | O P-SUPPLY/PWB/FAN | WH 0011 | 87-A91-179-010 | 0E | HLDL,WIRE 2.5-11P | LHSM | CX-NT929 |
| X | PACKING | | 87-B40-101-010 | 1A | BAG,PV 0.04-760-800 PL | LHSM | CX-NT929 |
| | | | | | | | |
| X | PACKING | | 87-B40-281-010 | 0E | LBL,BAR-CODE A 35X8 | LHSM | CX-NT929 |
| X | PACKING | | 8B-NF4-853-010 | -- | CUSHION,FRONT LH/M | LHSM | CX-NT929 |
| X | PACKING | | 8B-NF4-854-010 | -- | CUSHION,REAR LH/M | LHSM | CX-NT929 |
| X | PACKING | | 8B-NF4-855-010 | -- | CTN,PRINTED LHSM | LHSM | CX-NT929 |
| X | PACKING | | 8B-NF4-970-010 | -- | LBL,POP LHL | LHSM | CX-NT929 |
| X | PACKING | | 8B-NF4-971-010 | -- | LBL,POP LHR | LHSM | CX-NT929 |
| X | PACKING | | 93-704-337-010 | 1A | SH,FOAMED-MAT 0.31-800-500 | LHSM | CX-NT929 |
| ! | X PLATE | | 87-057-961-010 | 0E | LBL,CAUTION TRIANGLE | LHSM | CX-NT929 |
| ! | X PLATE | | 87-057-995-010 | 0E | LBL,CAUTION EFSL | LHSM | CX-NT929 |
| O | PLATE | | 8B-NF4-083-010 | -- | REFLECTOR, FUNC | LHSM | CX-NT929 |
| | | | | | | | |
| O | PLATE | | 8B-NF4-084-010 | -- | REFLECTOR, OPE | LHSM | CX-NT929 |
| O | PLATE | | 8B-NF4-086-010 | -- | REFLECTOR, JOG | LHSM | CX-NT929 |
| O | POWER AMP | C 0103 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| O | POWER AMP | C 0104 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| O | POWER AMP | C 0105 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| O | POWER AMP | C 0106 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| O | POWER AMP | C 0113 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | POWER AMP | C 0114 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | POWER AMP | C 0117 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| O | POWER AMP | C 0118 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| | | | | | | | |
| O | POWER AMP | C 0127 | 87-A12-317-080 | 0E | C-CAP,U 0.1-50 Z F | LHSM | CX-NT929 |
| O | POWER AMP | C 0131 | 87-A12-087-080 | 0E | CAP,E 1-50 SMG | LHSM | CX-NT929 |
| O | POWER AMP | C 0132 | 87-A12-061-080 | 0E | CAP,E 47-10 SMG | LHSM | CX-NT929 |
| O | POWER AMP | C 0133 | 87-A12-071-080 | 0E | CAP,E 47-25 SMG | LHSM | CX-NT929 |
| O | POWER AMP | CN 0131 | 87-A60-619-010 | 0E | CONN,2P V 2MM JMT | LHSM | CX-NT929 |
| O | POWER AMP | CN 0132 | 8A-NHP-643-010 | 0E | CONN ASSY,2P (FAN)ANHP-390 | LHSM | CX-NT929 |
| O | POWER AMP | CNA0102 | 8B-NF4-660-010 | -- | CONN ASSY,4P TID-A | LHSM | CX-NT929 |
| S | POWER AMP | D 0131 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | POWER AMP | D 0132 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| O | POWER AMP | J 0101 | 87-A61-481-010 | 0E | JACK,DIA6.3 BLK ST W/SW MSC16B | LHSM | CX-NT929 |
| | | | | | | | |
| ! | O POWER AMP | J 0102 | 87-A60-238-010 | 1A | TERMINAL,SP 4P (MSC) | LHSM | CX-NT929 |
| O | POWER AMP | J 0106 | 87-A60-750-010 | 1A | JACK,PIN 4P R/W BLUE | LHSM | CX-NT929 |
| X | POWER AMP | JR 0101 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | JR 0110 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | POWER AMP | JR 0111 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| O | POWER AMP | L 0101 | 87-A50-610-010 | 0E | COIL,1UH K(MDEC) | LHSM | CX-NT929 |
| O | POWER AMP | L 0102 | 87-A50-610-010 | 0E | COIL,1UH K(MDEC) | LHSM | CX-NT929 |
| S | POWER AMP | Q 0132 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | POWER AMP | Q 0135 | 87-A30-218-080 | 0E | TR,2SB1237Q | LHSM | CX-NT929 |
| O | POWER AMP | R 0101 | 87-A00-441-050 | 0E | RES,270-1/2W J RP | LHSM | CX-NT929 |
| | | | | | | | |
| O | POWER AMP | R 0102 | 87-A00-441-050 | 0E | RES,270-1/2W J RP | LHSM | CX-NT929 |
| O | POWER AMP | R 0103 | 87-A00-441-050 | 0E | RES,270-1/2W J RP | LHSM | CX-NT929 |
| O | POWER AMP | R 0104 | 87-A00-441-050 | 0E | RES,270-1/2W J RP | LHSM | CX-NT929 |
| X | POWER AMP | R 0105 | 88-121-222-080 | 0E | RES,2.2K-1/8W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0106 | 88-121-222-080 | 0E | RES,2.2K-1/8W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0107 | 88-130-100-080 | 0E | RES,10-1/4W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0108 | 88-130-100-080 | 0E | RES,10-1/4W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0109 | 88-128-100-080 | 0E | C-RES, 10-1/8W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0110 | 88-128-100-080 | 0E | C-RES, 10-1/8W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0114 | 88-128-102-080 | 0E | C-RES, 1K-1/8W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|------------|---------|----------------|-------|------------------------------|--------|------------|
| X | POWER AMP | R 0115 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0117 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0118 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0133 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0134 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0135 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0136 | 88-108-474-080 | 0E | C-RES,U 470K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0137 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0138 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0139 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0140 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | POWER AMP | R 0142 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | POWER AMP | WH 0101 | 87-A90-507-010 | 0E | HLD, WIRE 2.5-4P | LHSM | CX-NT929 |
| X | PRINTED DU | | 87-B40-085-010 | 0E | BAG,PV 0.04-200-350 PL | LHSM | CX-NT929 |
| X | PRINTED DU | | 87-B50-056-010 | 0E | SH, CAUTION AC VOLTAGE | LHSM | CX-NT929 |
| X | PRINTED DU | | 87-B50-079-010 | 0E | LIST, FACILITY(B)-0007 | LHSM | CX-NT929 |
| O | PRINTED DU | | 8B-NF4-902-010 | -- | IB, LH (ESP) M | LHSM | CX-NT929 |
| X | PT | * | 8B-NF4-620-010 | -- | PWB, PT LH BNF-4 | LHSM | CX-NT929 |
| ! | O PT | CN 0101 | 87-A61-122-010 | 0E | CONN, 11P V TID-A | LHSM | CX-NT929 |
| O | PT | CNA0012 | 8B-NF4-661-010 | -- | CONN ASSY, 5P TID-A | LHSM | CX-NT929 |
| S | PT | D 0101 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| S | PT | D 0102 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| S | PT | D 0103 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| S | PT | D 0104 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| O | PT | FC 0101 | 87-033-147-010 | 0E | FUSE CLAMP, MT-20 | LHSM | CX-NT929 |
| O | PT | FC 0102 | 87-033-147-010 | 0E | FUSE CLAMP, MT-20 | LHSM | CX-NT929 |
| O | PT | FC 0103 | 87-033-147-010 | 0E | FUSE CLAMP, MT-20 | LHSM | CX-NT929 |
| O | PT | FC 0104 | 87-033-147-010 | 0E | FUSE CLAMP, MT-20 | LHSM | CX-NT929 |
| S | PT | PR 0102 | 87-026-682-080 | 0E | PROTECTOR, 10A 491SERIES 60V | LHSM | CX-NT929 |
| S | PT | PR 0103 | 87-026-682-080 | 0E | PROTECTOR, 10A 491SERIES 60V | LHSM | CX-NT929 |
| X | PT | PR 0104 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| X | PT | PR 0105 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| S | PT | PR 0106 | 87-026-682-080 | 0E | PROTECTOR, 10A 491SERIES 60V | LHSM | CX-NT929 |
| X | PT | PR 0107 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| S | PT | PR 0108 | 87-026-682-080 | 0E | PROTECTOR, 10A 491SERIES 60V | LHSM | CX-NT929 |
| X | PT | PR 0109 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| ! | O PT | PT 0103 | 8B-MA6-673-010 | -- | PT, SUB BMA H (VRK) | LHSM | CX-NT929 |
| X | PT | R 0103 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| X | PT | R 0104 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| ! | O PT | RY 0102 | 87-A91-300-010 | 1B | RELAY, AC 12V-ALA2PF12 | LHSM | CX-NT929 |
| ! | O PT | SW 0101 | 87-A90-165-010 | 1A | SW, SL 1-2-3 SWS2301 | LHSM | CX-NT929 |
| O | PT | T 0101 | 87-A60-317-010 | 0E | TERMINAL, 1P MSC | LHSM | CX-NT929 |
| O | PT | T 0102 | 87-A60-317-010 | 0E | TERMINAL, 1P MSC | LHSM | CX-NT929 |
| ! | O PT | WH 0012 | 87-A90-459-010 | 0E | HLD, WIRE 2.5-5P | LHSM | CX-NT929 |
| O | RHYTHM | C 0801 | 87-010-986-080 | 0E | C-CAP, S 820P-50 J CH | LHSM | CX-NT929 |
| O | RHYTHM | C 0802 | 87-012-272-080 | 0E | C-CAP, U 680P-50 K B GRM | LHSM | CX-NT929 |
| O | RHYTHM | C 0804 | 87-010-785-080 | 0E | C-CAP, U 0.015-25 K B GRM | LHSM | CX-NT929 |
| O | RHYTHM | C 0806 | 87-010-401-040 | 0E | CAP, E 1-50 M 11L SME | LHSM | CX-NT929 |
| O | RHYTHM | C 0807 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | RHYTHM | C 0809 | 87-012-198-080 | 0E | C-CAP, U 180P-50 J CH | LHSM | CX-NT929 |
| O | RHYTHM | C 0810 | 87-010-263-040 | 0E | CAP, E 100-10 M 11L SME | LHSM | CX-NT929 |
| O | RHYTHM | C 0811 | 87-010-406-040 | 0E | CAP, E 22-50 M 11L SME | LHSM | CX-NT929 |
| O | RHYTHM | C 0812 | 87-010-405-040 | 0E | CAP, E 10-50 M 11L SME | LHSM | CX-NT929 |
| O | RHYTHM | C 0833 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| S | RHYTHM | D 0801 | 87-A40-749-080 | 0E | ZENER, UZ5.6BSB | LHSM | CX-NT929 |
| S | RHYTHM | IC 0801 | 87-A21-051-040 | 2A | C-IC, BU9990-03FS | LHSM | CX-NT929 |
| X | RHYTHM | JR 0111 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| O | RHYTHM | L 0801 | 87-A50-093-010 | 0E | COIL, CLOCK OSC 5.76MHZ | LHSM | CX-NT929 |
| O | RHYTHM | L 0802 | 87-003-098-080 | 0E | COIL, 2.2UH K LAL02 | LHSM | CX-NT929 |
| X | RHYTHM | R 0801 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0802 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0803 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0804 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0805 | 88-108-182-080 | 0E | C-RES, U 1.8K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0806 | 88-108-183-080 | 0E | C-RES, U 18K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0807 | 88-108-472-080 | 0E | C-RES, U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0808 | 88-108-472-080 | 0E | C-RES, U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0809 | 88-108-472-080 | 0E | C-RES, U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0810 | 88-108-472-080 | 0E | C-RES, U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0811 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|--------------------------|--------|------------|
| X | RHYTHM | R 0812 | 88-121-221-080 | 0E | RES,220-1/8W J | LHSM | CX-NT929 |
| X | RHYTHM | R 0814 | 88-108-100-080 | 0E | C-RES,U 10-1/16W J | LHSM | CX-NT929 |
| O | SCREW | | 87-067-579-010 | 0E | BVT2+3-8 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | | 87-067-581-010 | 0E | BVT2+3-15 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | | 87-067-641-010 | 0E | UTT2+3-8 W/O SLOT BLK | LHSM | CX-NT929 |
| O | SCREW | | 87-067-689-010 | 0E | BVTT+3-8 | LHSM | CX-NT929 |
| O | SCREW | | 87-067-703-010 | 0E | BVT2+3-10 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | | 87-067-758-010 | 0E | BVT2+3-12 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | | 87-067-761-010 | 0E | BVT2+3-10 BLK | LHSM | CX-NT929 |
| O | SCREW | | 87-067-975-010 | 0E | S-SCREW,IT+4-8 SWCH12A | LHSM | CX-NT929 |
| O | SCREW | | 87-591-095-410 | 0E | QIT+3-8 | LHSM | CX-NT929 |
| O | SCREW | | 87-721-096-410 | 0E | QT2+3-10 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | | 87-721-097-410 | 0E | QT2+3-12 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | | 87-NF4-224-010 | 0E | S-SCREW,IT3B+3-8 CU | LHSM | CX-NT929 |
| O | SCREW | * | 87-B10-190-010 | 0E | BVT2+3-22 W/O SLOT | LHSM | CX-NT929 |
| O | SCREW | * | 87-B10-190-010 | 0E | BVT2+3-22 W/O SLOT | LHSM | CX-NT929 |
| X | TAPE | | 80-MQ1-209-010 | 0E | CLOTH,20-7 | LHSM | CX-NT929 |
| ! | X TAPE | | 87-069-033-010 | 0E | CABLE,TIE | LHSM | CX-NT929 |
| ! | X TAPE | | M8-2ZM-384-030 | -- | 2ZM-3MK2 PR7NM | LHSM | CX-NT929 |
| X | TAPE | * | 8Z-NF3-226-010 | 0E | PLATE,SHLD DECK | LHSM | CX-NT929 |
| X | TAPE | * | 8Z-NF3-226-010 | 0E | PLATE,SHLD DECK | LHSM | CX-NT929 |
| O | TAPE | * | 8Z-NF3-643-010 | 0E | CONN ASSY,3P PB | LHSM | CX-NT929 |
| O | TAPE | * | 8Z-NF3-644-010 | 1B | CONN ASSY,8P RPB | LHSM | CX-NT929 |
| O | TAPE DECK | C 0301 | 87-012-188-080 | 0E | C-CAP,U 47P-50 J CH | LHSM | CX-NT929 |
| O | TAPE DECK | C 0302 | 87-012-188-080 | 0E | C-CAP,U 47P-50 J CH | LHSM | CX-NT929 |
| O | TAPE DECK | C 0303 | 87-012-336-080 | 0E | C-CAP,U 330P-50 J SL | LHSM | CX-NT929 |
| O | TAPE DECK | C 0304 | 87-012-336-080 | 0E | C-CAP,U 330P-50 J SL | LHSM | CX-NT929 |
| O | TAPE DECK | C 0305 | 87-012-336-080 | 0E | C-CAP,U 330P-50 J SL | LHSM | CX-NT929 |
| O | TAPE DECK | C 0306 | 87-012-336-080 | 0E | C-CAP,U 330P-50 J SL | LHSM | CX-NT929 |
| O | TAPE DECK | C 0307 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0311 | 87-010-787-080 | 0E | C-CAP,U 0.022-25 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0312 | 87-010-787-080 | 0E | C-CAP,U 0.022-25 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0313 | 87-012-275-080 | 0E | C-CAP,U 1200P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0314 | 87-012-275-080 | 0E | C-CAP,U 1200P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0315 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0316 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0317 | 87-A10-706-080 | 0E | C-CAP,U 0.33-16 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0318 | 87-A10-706-080 | 0E | C-CAP,U 0.33-16 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0319 | 87-A10-025-080 | 0E | C-CAP,U 0.22-16 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0320 | 87-A10-025-080 | 0E | C-CAP,U 0.22-16 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0321 | 87-A10-025-080 | 0E | C-CAP,U 0.22-16 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0322 | 87-A10-025-080 | 0E | C-CAP,U 0.22-16 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0324 | 87-A12-071-080 | 0E | CAP,E 47-25 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0325 | 87-A12-057-080 | 0E | CAP,E 330-6.3 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0327 | 87-A12-090-080 | 0E | CAP,E 4.7-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0328 | 87-A12-090-080 | 0E | CAP,E 4.7-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0332 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0335 | 87-A12-087-080 | 0E | CAP,E 1-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0336 | 87-A12-087-080 | 0E | CAP,E 1-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0337 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0339 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0340 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0351 | 87-A10-039-080 | 0E | C-CAP,U 470P-50 J CH | LHSM | CX-NT929 |
| O | TAPE DECK | C 0352 | 87-A10-039-080 | 0E | C-CAP,U 470P-50 J CH | LHSM | CX-NT929 |
| O | TAPE DECK | C 0354 | 87-010-175-080 | 0E | C-CAP,S 560P-50 J SL | LHSM | CX-NT929 |
| O | TAPE DECK | C 0355 | 87-012-274-080 | 0E | C-CAP,U 1000P-50 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0356 | 87-A12-071-080 | 0E | CAP,E 47-25 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0357 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0358 | 87-012-279-080 | 0E | C-CAP,U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0359 | 87-012-279-080 | 0E | C-CAP,U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0360 | 87-012-279-080 | 0E | C-CAP,U 2700P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0363 | 87-A12-361-080 | 0E | CAP,M 5600P-100 J CP | LHSM | CX-NT929 |
| O | TAPE DECK | C 0370 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0371 | 87-012-271-080 | 0E | C-CAP,U 560P-50 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0372 | 87-012-271-080 | 0E | C-CAP,U 560P-50 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0373 | 87-012-275-080 | 0E | C-CAP,U 1200P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0374 | 87-012-275-080 | 0E | C-CAP,U 1200P-50 K B GRM | LHSM | CX-NT929 |
| O | TAPE DECK | C 0375 | 87-A12-084-080 | 0E | CAP,E 0.22-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0376 | 87-A12-084-080 | 0E | CAP,E 0.22-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0378 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|-------------------------|--------|------------|
| O | TAPE DECK | C 0381 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0382 | 87-012-188-080 | 0E | C-CAP,U 47P-50 J CH | LHSM | CX-NT929 |
| O | TAPE DECK | C 0383 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0384 | 87-A12-088-080 | 0E | CAP,E 2.2-50 SMG | LHSM | CX-NT929 |
| O | TAPE DECK | C 0385 | 87-012-280-080 | 0E | C-CAP,U 3300P-50 K B | LHSM | CX-NT929 |
| O | TAPE DECK | C 0386 | 87-010-759-080 | 0E | C-CAP,U 0.1-25 Z F | LHSM | CX-NT929 |
| O | TAPE DECK | C 0388 | 87-012-199-080 | 0E | C-CAP,U 220P-50 J CH | LHSM | CX-NT929 |
| X | TAPE DECK | CLP0301 | 87-A60-884-010 | 0E | PIN,DIAL COATING-SHS | LHSM | CX-NT929 |
| X | TAPE DECK | CLP0302 | 87-A60-884-010 | 0E | PIN,DIAL COATING-SHS | LHSM | CX-NT929 |
| O | TAPE DECK | CN 0301 | 87-A60-620-010 | 0E | CONN,3P V 2MM JMT | LHSM | CX-NT929 |
| O | TAPE DECK | CN 0351 | 87-A60-625-010 | 0E | CONN,8P V 2MM JMT | LHSM | CX-NT929 |
| S | TAPE DECK | D 0352 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | TAPE DECK | D 0353 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| X | TAPE DECK | FB 0301 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| S | TAPE DECK | IC 0302 | 87-A20-355-010 | 1C | IC,CXA1553P | LHSM | CX-NT929 |
| S | TAPE DECK | IC 0303 | 87-A20-783-040 | 1D | C-IC,BA7762AFS | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0303 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0304 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0305 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0306 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0307 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0309 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0310 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0312 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0313 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0314 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0315 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0316 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0317 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0318 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0319 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0321 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0322 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0325 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0326 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0327 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0328 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0329 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0330 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0333 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0334 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0335 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0338 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0339 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0340 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | JR 0341 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TAPE DECK | L 0301 | 87-A50-625-010 | 0E | COIL,TRAP 85KHZ (SANWA) | LHSM | CX-NT929 |
| O | TAPE DECK | L 0302 | 87-A50-625-010 | 0E | COIL,TRAP 85KHZ (SANWA) | LHSM | CX-NT929 |
| O | TAPE DECK | L 0351 | 87-007-342-010 | 0E | COIL,OSC 85KHZ BIAS | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0351 | 87-A30-087-080 | 0E | C-FET,2SK2158 | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0353 | 87-A30-087-080 | 0E | C-FET,2SK2158 | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0354 | 87-A30-087-080 | 0E | C-FET,2SK2158 | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0355 | 87-A30-455-040 | 0E | C-TR,DTA144EKA | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0357 | 87-026-609-080 | 0E | TR,KTA1266GR | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0358 | 87-026-610-080 | 0E | TR,KTC3198GR | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0359 | 87-026-610-080 | 0E | TR,KTC3198GR | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0361 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0381 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| S | TAPE DECK | Q 0382 | 87-A30-076-080 | 0E | C-TR,2SC3052F | LHSM | CX-NT929 |
| X | TAPE DECK | R 0301 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0302 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0304 | 88-108-224-080 | 0E | C-RES,U 220K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0305 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0306 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0307 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0308 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0309 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0310 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0311 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|--------------|---------|----------------|-------|-----------------------------|--------|------------|
| X | TAPE DECK | R 0312 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0314 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0315 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0316 | 88-108-392-080 | 0E | C-RES,U 3.9K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0317 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0318 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0319 | 88-108-822-080 | 0E | C-RES,U 8.2K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0320 | 88-108-822-080 | 0E | C-RES,U 8.2K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0321 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0322 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0323 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0324 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0328 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0329 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0332 | 88-108-223-080 | 0E | C-RES,U 22K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0333 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0335 | 88-121-273-080 | 0E | RES,27K-1/8W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0336 | 88-121-273-080 | 0E | RES,27K-1/8W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0337 | 88-108-563-080 | 0E | C-RES,U 56K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0338 | 88-108-183-080 | 0E | C-RES,U 18K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0350 | 88-130-180-080 | 0E | RES,18-1/4W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0351 | 88-108-105-080 | 0E | C-RES,U 1M-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0352 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0353 | 88-108-152-080 | 0E | C-RES,U 1.5K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0354 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TAPE DECK | R 0355 | 88-128-829-080 | 0E | C-RES, 8.2-1/8W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0356 | 88-108-183-080 | 0E | C-RES,U 18K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0357 | 88-108-183-080 | 0E | C-RES,U 18K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0359 | 88-128-100-080 | 0E | C-RES, 10-1/8W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0360 | 88-108-332-080 | 0E | C-RES,U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0363 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0364 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | R 0371 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0372 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0373 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0374 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0375 | 88-108-183-080 | 0E | C-RES,U 18K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0381 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0382 | 88-108-274-080 | 0E | C-RES,U 270K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0383 | 88-108-474-080 | 0E | C-RES,U 470K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0384 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0385 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0386 | 88-108-153-080 | 0E | C-RES,U 15K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0387 | 88-108-184-080 | 0E | C-RES,U 180K-1/16W J | LHSM | CX-NT929 |
| X | TAPE DECK | R 0389 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TAPE DECK | R 0393 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0301 | 87-024-355-080 | 0E | SFR,33K H EVN DJAA03 | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0302 | 87-024-355-080 | 0E | SFR,33K H EVN DJAA03 | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0303 | 87-024-355-080 | 0E | SFR,33K H EVN DJAA03 | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0304 | 87-024-355-080 | 0E | SFR,33K H EVN DJAA03 | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0305 | 87-024-436-080 | 0E | SFR,47K H RH063MC | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0306 | 87-024-436-080 | 0E | SFR,47K H RH063MC | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0351 | 87-024-436-080 | 0E | SFR,47K H RH063MC | LHSM | CX-NT929 |
| O | TAPE DECK | SFR0352 | 87-024-436-080 | 0E | SFR,47K H RH063MC | LHSM | CX-NT929 |
| X | TAPE DECK | SH 0301 | 87-MA6-202-010 | 0E | PLATE,SHLD DECK | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0901 | 87-018-145-080 | 0E | CAP,TC U 6.8P-50 K CH UP050 | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0904 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0905 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0907 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0908 | 87-A10-915-080 | 0E | C-CAP,U 1000P-25 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0909 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0910 | 87-012-174-080 | 0E | C-CAP,U 12P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0911 | 87-012-170-080 | 0E | C-CAP,U 8P-50 D CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0912 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0913 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0914 | 87-012-165-080 | 0E | C-CAP,U 3P-50 C CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0915 | 87-012-174-080 | 0E | C-CAP,U 12P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0916 | 87-012-180-080 | 0E | C-CAP,U 22P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0917 | 87-012-186-080 | 0E | C-CAP,U 39P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C 0918 | 87-A10-039-080 | 0E | C-CAP,U 470P-50 J CH | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME | |
|-----|--------------|---------|------------|----------------|-------------|---------------------------|------------|----------|
| O | TUNER(FM FE) | C | 0921 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | C | 0922 | 87-012-174-080 | 0E | C-CAP,U 12P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(FM FE) | D | 0902 | 87-A40-128-080 | 0E | C-VARI-CAP,HVU202A | LHSM | CX-NT929 |
| O | TUNER(FM FE) | D | 0903 | 87-A40-128-080 | 0E | C-VARI-CAP,HVU202A | LHSM | CX-NT929 |
| O | TUNER(FM FE) | L | 0902 | 88-ZA1-602-110 | 0E | COIL,FM-RF-U2 2G | LHSM | CX-NT929 |
| O | TUNER(FM FE) | L | 0903 | 88-ZA1-601-010 | 0E | COIL,FM-RF-U1 2G | LHSM | CX-NT929 |
| O | TUNER(FM FE) | L | 0904 | 87-005-847-080 | 0E | COIL,2.2UH K CECS | LHSM | CX-NT929 |
| O | TUNER(FM FE) | L | 0905 | 88-ZA1-624-010 | 0E | COIL,FM IFT 7-6.2 (COILS) | LHSM | CX-NT929 |
| O | TUNER(FM FE) | L | 0906 | 88-ZA1-603-010 | 0E | COIL,FM-OSC-U 2G | LHSM | CX-NT929 |
| S | TUNER(FM FE) | Q | 0901 | 89-503-602-080 | 1A | C-FET,2SK360E | LHSM | CX-NT929 |
| S | TUNER(FM FE) | Q | 0902 | 89-327-143-080 | 0E | C-TR,2SC27140 | LHSM | CX-NT929 |
| S | TUNER(FM FE) | Q | 0903 | 89-327-143-080 | 0E | C-TR,2SC27140 | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0903 | 88-108-471-080 | 0E | C-RES,U 470-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0904 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0905 | 88-108-564-080 | 0E | C-RES,U 560K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0907 | 88-108-472-080 | 0E | C-RES,U 4.7K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0908 | 88-108-121-080 | 0E | C-RES,U 120-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0909 | 88-108-473-080 | 0E | C-RES,U 47K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0910 | 88-108-682-080 | 0E | C-RES,U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0911 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | TUNER(FM FE) | R | 0921 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER(FM FE) | SH | 0901 | 88-ZA1-605-010 | -- | SHLD-CASE,IFT CAP-CASE | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0771 | 87-A12-062-080 | 0E | CAP,E 100-10 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0772 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0779 | 87-010-784-080 | 0E | C-CAP,U 0.012-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0780 | 87-010-784-080 | 0E | C-CAP,U 0.012-25 K B | LHSM | CX-NT929 |
| X | TUNER(IF) | C | 0781 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0782 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0783 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0784 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0785 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0786 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0788 | 87-012-167-080 | 0E | C-CAP,U 5P-50 C CH | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0789 | 87-A10-592-080 | 0E | C-CAP,S 0.015-50 J B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0790 | 87-A10-592-080 | 0E | C-CAP,S 0.015-50 J B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0791 | 87-010-831-080 | 0E | C-CAP,U 0.1-16 Z F | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0792 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0793 | 87-A12-090-080 | 0E | CAP,E 4.7-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0795 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0796 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0797 | 87-A12-091-080 | 0E | CAP,E 10-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0798 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0799 | 87-A12-077-080 | 0E | CAP,E 33-35 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0800 | 87-010-829-080 | 0E | C-CAP,U 0.047-16 Z F | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0801 | 87-A12-089-080 | 0E | CAP,E 3.3-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0802 | 87-010-829-080 | 0E | C-CAP,U 0.047-16 Z F | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0803 | 87-010-787-080 | 0E | C-CAP,U 0.022-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0804 | 87-A12-062-080 | 0E | CAP,E 100-10 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0807 | 87-A12-086-080 | 0E | CAP,E 0.47-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0808 | 87-A12-087-080 | 0E | CAP,E 1-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0809 | 87-A12-087-080 | 0E | CAP,E 1-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0810 | 87-010-831-080 | 0E | C-CAP,U 0.1-16 Z F | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0811 | 87-A12-089-080 | 0E | CAP,E 3.3-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0812 | 87-A12-089-080 | 0E | CAP,E 3.3-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0814 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0815 | 87-A12-086-080 | 0E | CAP,E 0.47-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0816 | 87-A12-086-080 | 0E | CAP,E 0.47-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0821 | 87-A12-091-080 | 0E | CAP,E 10-50 SMG | LHSM | CX-NT929 |
| X | TUNER(IF) | C | 0822 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0823 | 87-010-986-080 | 0E | C-CAP,S 820P-50 J CH | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0824 | 87-A12-090-080 | 0E | CAP,E 4.7-50 SMG | LHSM | CX-NT929 |
| O | TUNER(IF) | C | 0825 | 87-A10-504-080 | 0E | C-CAP,U 0.047-16 K B | LHSM | CX-NT929 |
| X | TUNER(IF) | D | 0801 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| S | TUNER(IF) | D | 0803 | 87-020-465-080 | 0E | DIODE,1SS133 | LHSM | CX-NT929 |
| S | TUNER(IF) | IC | 0801 | 87-A21-695-010 | 1C | IC,LA1845L | LHSM | CX-NT929 |
| X | TUNER(IF) | JR | 0781 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TUNER(IF) | JR | 0785 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER(IF) | JR | 0786 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER(IF) | JR | 0790 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER(IF) | JR | 0792 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-------------|---------|----------------|-------|--------------------------|--------|------------|
| X | TUNER (IF) | JR 0795 | 88-129-000-080 | 0E | C-JUMPER, 3216 | LHSM | CX-NT929 |
| X | TUNER (IF) | JR 0797 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (IF) | JR 0801 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (IF) | JR 0802 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| O | TUNER (IF) | L 0801 | 87-A50-608-010 | 0E | COIL, FM DET-N (TOK) | LHSM | CX-NT929 |
| O | TUNER (IF) | L 0802 | 87-A91-551-010 | 1A | FLTR, PCFJZH-450 L (TOK) | LHSM | CX-NT929 |
| O | TUNER (IF) | L 0811 | 87-005-847-080 | 0E | COIL, 2.2UH K CECS | LHSM | CX-NT929 |
| O | TUNER (IF) | L 0821 | 87-A50-209-010 | 1A | COIL, 1POLE MPX (MIT) | LHSM | CX-NT929 |
| O | TUNER (IF) | L 0822 | 87-A50-209-010 | 1A | COIL, 1POLE MPX (MIT) | LHSM | CX-NT929 |
| S | TUNER (IF) | Q 0801 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| S | TUNER (IF) | Q 0802 | 87-A30-076-080 | 0E | C-TR, 2SC3052F | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0773 | 88-108-222-080 | 0E | C-RES, U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0774 | 88-108-222-080 | 0E | C-RES, U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0775 | 88-108-332-080 | 0E | C-RES, U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0776 | 88-108-332-080 | 0E | C-RES, U 3.3K-1/16W J | LHSM | CX-NT929 |
| O | TUNER (IF) | R 0790 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0791 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0793 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0795 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0801 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0802 | 88-108-223-080 | 0E | C-RES, U 22K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0803 | 88-128-183-080 | 0E | C-RES, 18K-1/8W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0804 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0805 | 88-108-332-080 | 0E | C-RES, U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0806 | 88-108-682-080 | 0E | C-RES, U 6.8K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0807 | 88-108-821-080 | 0E | C-RES, U 820-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0808 | 88-108-821-080 | 0E | C-RES, U 820-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0809 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0810 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0811 | 88-108-474-080 | 0E | C-RES, U 470K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0812 | 88-108-474-080 | 0E | C-RES, U 470K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0813 | 88-108-224-080 | 0E | C-RES, U 220K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0814 | 88-108-105-080 | 0E | C-RES, U 1M-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0815 | 88-121-682-080 | 0E | RES, 6.8K-1/8W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0818 | 88-108-103-080 | 0E | C-RES, U 10K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0821 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0823 | 88-108-333-080 | 0E | C-RES, U 33K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0824 | 88-108-102-080 | 0E | C-RES, U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0825 | 88-108-473-080 | 0E | C-RES, U 47K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0826 | 88-108-223-080 | 0E | C-RES, U 22K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0827 | 88-108-332-080 | 0E | C-RES, U 3.3K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (IF) | R 0828 | 88-108-332-080 | 0E | C-RES, U 3.3K-1/16W J | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0971 | 87-A12-067-080 | 0E | CAP, E 330-16 SMG | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0972 | 87-A12-090-080 | 0E | CAP, E 4.7-50 SMG | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0973 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0974 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0979 | 87-012-195-080 | 0E | C-CAP, U 100P-50 J CH | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0981 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0982 | 87-010-831-080 | 0E | C-CAP, U 0.1-16 Z F | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0983 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0984 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0987 | 87-012-286-080 | 0E | C-CAP, U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0991 | 87-012-176-080 | 0E | C-CAP, U 15P-50 J CH | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0992 | 87-012-176-080 | 0E | C-CAP, U 15P-50 J CH | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0993 | 87-012-274-080 | 0E | C-CAP, U 1000P-50 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0995 | 87-012-274-080 | 0E | C-CAP, U 1000P-50 K B | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0997 | 87-010-831-080 | 0E | C-CAP, U 0.1-16 Z F | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0998 | 87-A12-071-080 | 0E | CAP, E 47-25 SMG | LHSM | CX-NT929 |
| O | TUNER (PLL) | C 0999 | 87-A11-155-080 | 0E | CAP, TC U 0.01-16 Z F | LHSM | CX-NT929 |
| S | TUNER (PLL) | D 0991 | 87-017-149-080 | 0E | ZENER, HZS6A2L | LHSM | CX-NT929 |
| S | TUNER (PLL) | D 0994 | 87-020-465-080 | 0E | DIODE, 1SS133 | LHSM | CX-NT929 |
| S | TUNER (PLL) | IC 0991 | 87-A21-928-010 | 1C | IC, LC72131D-N | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0971 | 88-129-000-080 | 0E | C-JUMPER, 3216 | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0972 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0973 | 88-129-000-080 | 0E | C-JUMPER, 3216 | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0974 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0976 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0977 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0988 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |
| X | TUNER (PLL) | JR 0991 | 88-108-000-080 | 0E | C-JUMPER, U | LHSM | CX-NT929 |

PARTS LIST

! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.

Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.

| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|--------------|---------|----------------|-------|-----------------------------|--------|------------|
| S | TUNER (PLL) | Q 0981 | 87-A30-234-080 | 0E | TR, CSC4115BC | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0975 | 88-108-562-080 | 0E | C-RES,U 5.6K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0976 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0977 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0978 | 88-108-681-080 | 0E | C-RES,U 680-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0980 | 88-108-684-080 | 0E | C-RES,U 680K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0981 | 88-121-471-080 | 0E | RES,470-1/8W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0982 | 88-108-822-080 | 0E | C-RES,U 8.2K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0983 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0984 | 88-121-181-080 | 0E | RES,180-1/8W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0985 | 88-121-471-080 | 0E | RES,470-1/8W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0986 | 88-108-222-080 | 0E | C-RES,U 2.2K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0987 | 88-121-472-080 | 0E | RES,4.7K-1/8W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0988 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0989 | 88-121-102-080 | 0E | RES,1K-1/8W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0990 | 88-108-563-080 | 0E | C-RES,U 56K-1/16W J | LHSM | CX-NT929 |
| O | TUNER (PLL) | R 0991 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0992 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| O | TUNER (PLL) | R 0993 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0994 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| O | TUNER (PLL) | R 0995 | 87-012-195-080 | 0E | C-CAP,U 100P-50 J CH | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0996 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0997 | 88-108-154-080 | 0E | C-RES,U 150K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0998 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (PLL) | R 0999 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| O | TUNER (PLL) | X 0992 | 87-A70-306-010 | 1A | VIB,XTAL 4.500MHZ CSA-309ST | LHSM | CX-NT929 |
| X | TUNER (RDS) | JR 0871 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RDS) | JR 0873 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0842 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0843 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0844 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0845 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0846 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0847 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0848 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0849 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0850 | 87-A12-071-080 | 0E | CAP,E 47-25 SMG | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0851 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0852 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0853 | 87-012-286-080 | 0E | C-CAP,U 0.01-25 K B | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0858 | 87-010-831-080 | 0E | C-CAP,U 0.1-16 Z F | LHSM | CX-NT929 |
| X | TUNER (RF) | C 0940 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0959 | 87-010-831-080 | 0E | C-CAP,U 0.1-16 Z F | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0960 | 87-010-831-080 | 0E | C-CAP,U 0.1-16 Z F | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0961 | 87-012-167-080 | 0E | C-CAP,U 5P-50 C CH | LHSM | CX-NT929 |
| O | TUNER (RF) | C 0963 | 87-015-785-080 | 0E | C-CAP, 0.1-25 Z F C3216 | LHSM | CX-NT929 |
| O | TUNER (RF) | CF 0831 | 87-008-261-010 | 1A | FLTR,CF SFE10.7MA5 | LHSM | CX-NT929 |
| O | TUNER (RF) | CF 0832 | 87-008-261-010 | 1A | FLTR,CF SFE10.7MA5 | LHSM | CX-NT929 |
| X | TUNER (RF) | D 0944 | 88-100-000-010 | 0E | PLATING-JW, 0.58 SN95 | LHSM | CX-NT929 |
| ! | O TUNER (RF) | J 0831 | 87-A60-202-010 | 1A | TERMINAL,ANT 4P MSP-154V-02 | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0834 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0835 | 88-108-561-080 | 0E | C-RES,U 560-1/16W J | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0851 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0943 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0946 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0951 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0952 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0954 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0955 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | JR 0964 | 88-129-000-080 | 0E | C-JUMPER,3216 | LHSM | CX-NT929 |
| O | TUNER (RF) | L 0832 | 87-005-847-080 | 0E | COIL,2.2UH K CECS | LHSM | CX-NT929 |
| O | TUNER (RF) | L 0951 | 8A-NF8-667-010 | 1C | COIL,AM PACK 4(TOK) | LHSM | CX-NT929 |
| S | TUNER (RF) | Q 0835 | 87-A30-521-080 | 0E | C-TR,2SC5345S(O) | LHSM | CX-NT929 |
| S | TUNER (RF) | Q 0836 | 87-A30-489-080 | 0E | C-TR,KRA107S | LHSM | CX-NT929 |
| X | TUNER (RF) | R 0832 | 88-108-391-080 | 0E | C-RES,U 390-1/16W J | LHSM | CX-NT929 |
| X | TUNER (RF) | R 0836 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (RF) | R 0840 | 88-108-221-080 | 0E | C-RES,U 220-1/16W J | LHSM | CX-NT929 |
| X | TUNER (RF) | R 0850 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | TUNER (RF) | R 0851 | 88-108-000-080 | 0E | C-JUMPER,U | LHSM | CX-NT929 |
| X | TUNER (RF) | R 0852 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |

PARTS LIST

- ! = Δ SAFTY PARTS
 C = Components marked

All components used on this model at the production line are shown in this service manual.

However, please note that not all components will be available as spare parts for after-sales service.


Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.

Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.

K NO. = Only use japanese.


| ! C | UNIT NAME | REF NO. | PARTS CODE | K NO. | DESCRIPTION | SUFFIX | MODEL NAME |
|-----|-----------|---------|----------------|-------|----------------------|--------|------------|
| X | TUNER(RF) | R 0853 | 88-108-102-080 | 0E | C-RES,U 1K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0854 | 88-108-331-080 | 0E | C-RES,U 330-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0855 | 88-108-183-080 | 0E | C-RES,U 18K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0856 | 88-108-103-080 | 0E | C-RES,U 10K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0857 | 88-108-181-080 | 0E | C-RES,U 180-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0858 | 88-108-101-080 | 0E | C-RES,U 100-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0860 | 88-118-101-080 | 0E | C-RES,S 100-1/10W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0945 | 88-108-104-080 | 0E | C-RES,U 100K-1/16W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0962 | 88-121-221-080 | 0E | RES,220-1/8W J | LHSM | CX-NT929 |
| X | TUNER(RF) | R 0963 | 88-108-330-080 | 0E | C-RES,U 33-1/16W J | LHSM | CX-NT929 |

SCHEMATIC DIAGRAM - 1 (MAIN) <1/6>

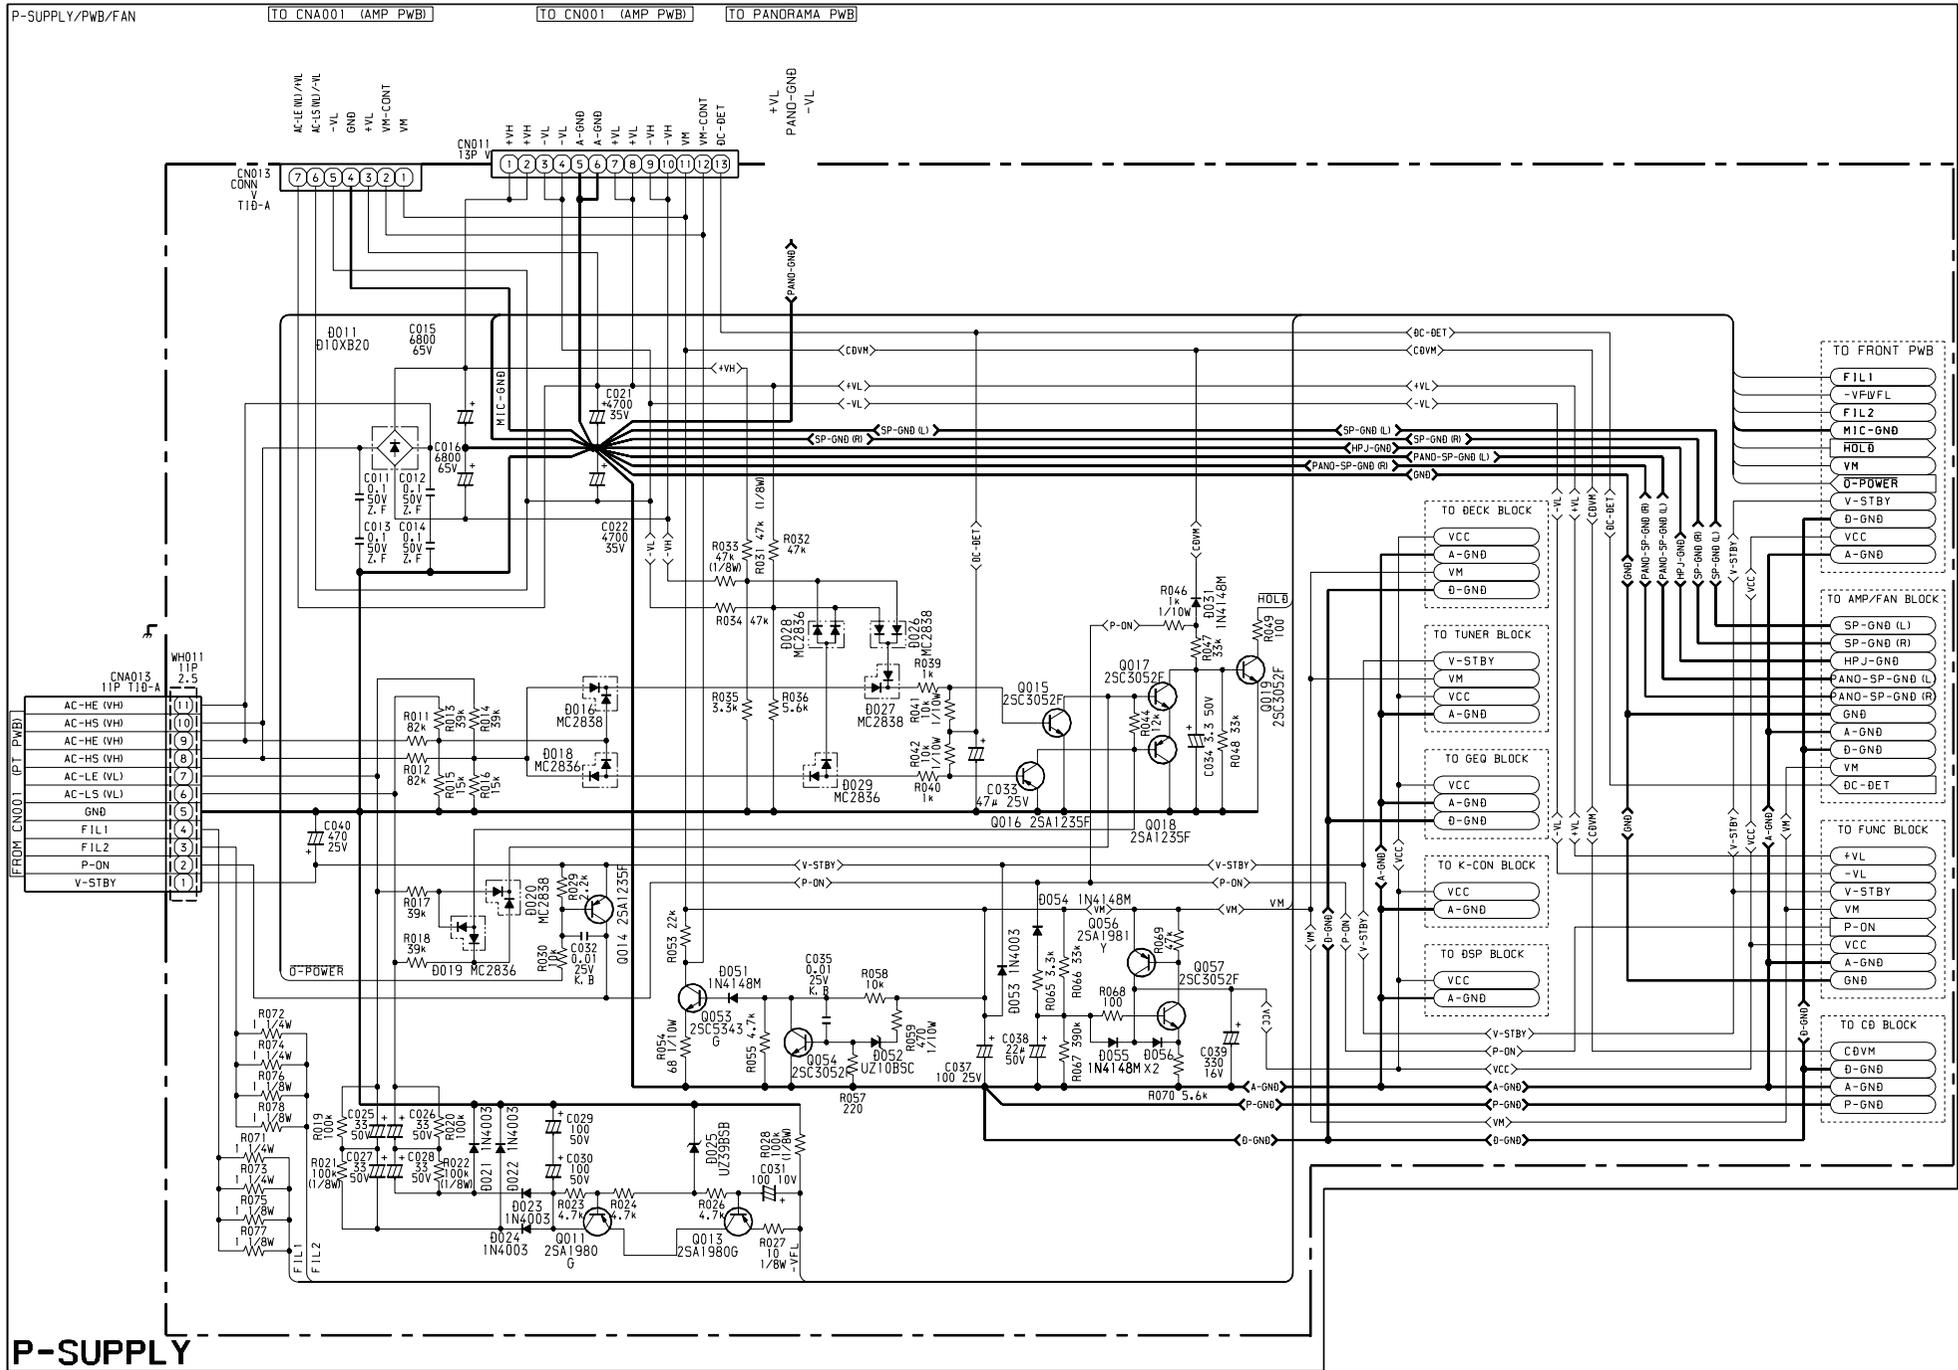

P-SUPPLY

SCHEMATIC DIAGRAM - 4 (MAIN) <4/6>

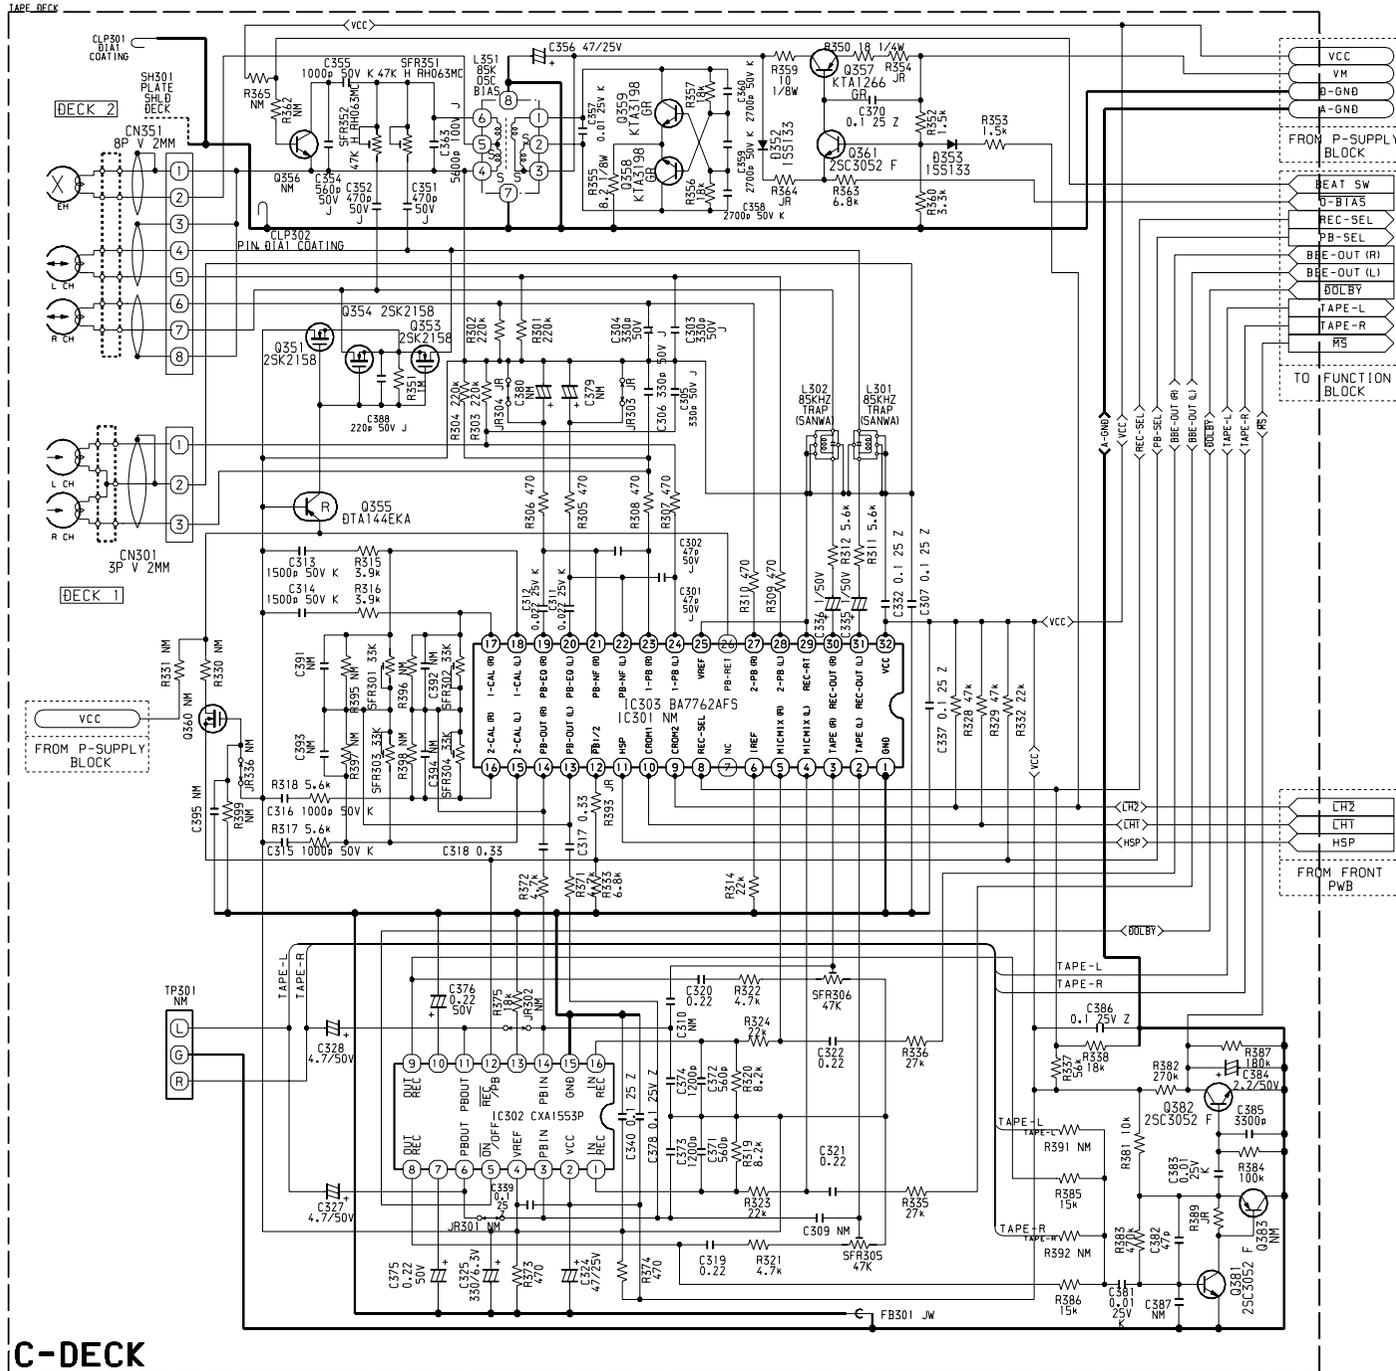

| | WITH DOLBY | W/O DOLBY (R/R) | W/O DOLBY (R+1,1+1) |
|---------------------|------------|-----------------|---------------------|
| C313 | 1200P | 1000P | 1500P |
| C314 | 1200P | 1000P | 1500P |
| C315 | 1000P | 1000P | 2200P |
| C316 | 1000P | 1000P | 2200P |
| C317 | 0.33 BK | C-JR | C-JR |
| C318 | 0.33 BK | C-JR | C-JR |
| C375 | 0.22/50 | X | X |
| C376 | 0.22/50 | X | X |
| C379 | X | 22/25 | 22/25 |
| C380 | X | 22/25 | 22/25 |
| C391 | 270P | 56P | 56P |
| C392 | 270P | 56P | 56P |
| C393 | 270P | 56P | 56P |
| C394 | 270P | 56P | 56P |
| JR301 | X | C-JR | C-JR |
| JR302 | X | C-JR | C-JR |
| JR303 | C-JR | X | X |
| JR304 | C-JR | X | X |
| R315 | 4.7K | 5.6K | 5.6K |
| R316 | 4.7K | 5.6K | 5.6K |
| R317 | 5.6K | 5.6K | 5.6K |
| R318 | 5.6K | 5.6K | 5.6K |
| R371 | 4.7K | 39 | 39 |
| R372 | 4.7K | 39 | 39 |
| R375 | 18K | X | X |
| R395 | X | 100K | 100K |
| R396 | X | 100K | 100K |
| R397 | X | 100K | 100K |
| R398 | X | 100K | 100K |
| SFR301 | 33K | X | X |
| SFR302 | 33K | X | X |
| SFR303 | 33K | X | X |
| SFR304 | 33K | X | X |
| R301 R302 R303 R304 | 220K | 220K | 39K |
| C305 C304 C306 | 330P | 330P | 560P |


| | WITH DOLBY | W/O DOLBY (R/R, R+1,1+1) |
|--------|------------|--------------------------|
| C309 | X | 0.1 |
| C310 | X | 0.1 |
| C319 | 0.22 | X |
| C320 | 0.22 | X |
| C321 | 0.22 | 0.33 |
| C322 | 0.22 | 0.33 |
| C371 | 820P | X |
| C372 | 820P | X |
| C373 | 1200P | 0.15 |
| C374 | 1200P | 0.15 |
| C382 | 47P | 15P |
| C385 | 3300P | X |
| C387 | X | 270P |
| IC302 | CXA1553P | X |
| Q383 | X | 2SA1235 |
| R319 | 4.7K | 22K |
| R320 | 4.7K | 22K |
| R321 | 4.7K | X |
| R322 | 4.7K | X |
| R323 | 22K | C-JR |
| R324 | 22K | C-JR |
| R335 | 27K | 22K |
| R336 | 27K | 22K |
| R383 | 470K | 820K |
| R385 | 15K | X |
| R386 | 15K | X |
| R389 | C-JR | 6.8K |
| R391 | X | 15K |
| R392 | X | 15K |
| SFR305 | 50K | X |
| SFR306 | 50K | X |

| | ROHM | HITACHI |
|-------|-----------|---------|
| IC301 | X | HA12211 |
| IC303 | BA7762AF5 | X |
| JR336 | X | C-JR |
| Q360 | X | 2SK2158 |
| R330 | X | C-JR |
| R331 | X | 33K |

| | EZ MODEL | EXCEPT EZ |
|------|----------|-----------|
| Q356 | 2SC3052F | X |
| R362 | 4.7K | X |
| R365 | 10K | X |

| | EZ MODEL | EXCEPT EZ |
|-------|----------|-----------|
| FB301 | EM1B01RN | JW |

C-DECK

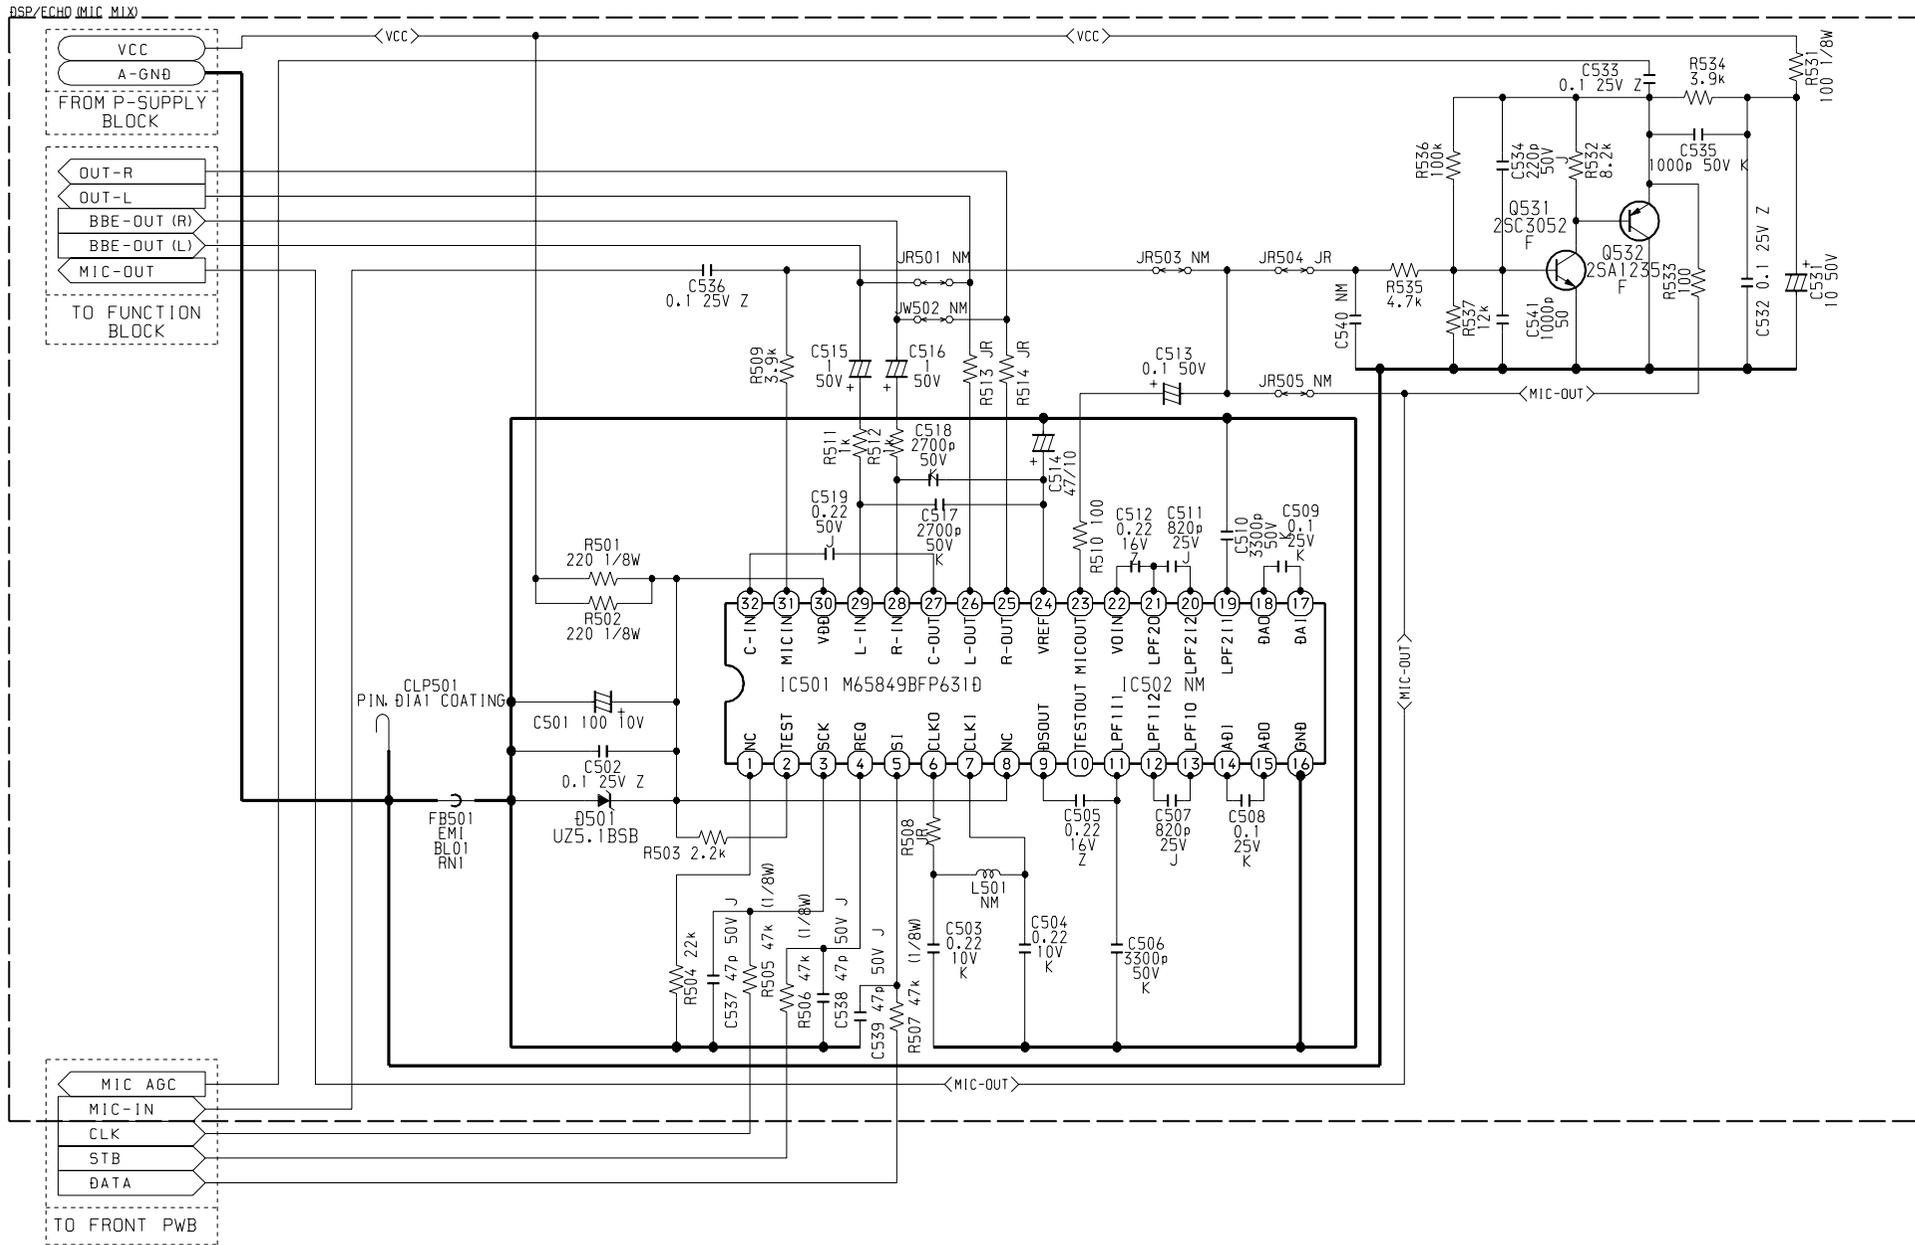

DSP/ECHO (MIC MIX)

IFT COIL


| | PARTS NO./ PARTS CODE | | |
|-----|--|---|---|
| | U/LH, EZ, K, G, V, HS | HE/HR/HC | D/HØ |
| 1ST | 87-491-551-01 FLTR, PCF-22M-450 L (TOK) | 87-491-552-01 FLTR, CFMT-450AL (TOK) | 87-491-553-01 FLTR, PCFMT-040L (TOK) |
| 2ND | | | |
| 3RD | | | |

AM PACK


| | PARTS NO./ PARTS CODE | |
|-----|---------------------------------------|--------------------------------------|
| | U/LH, D/HØ, V, HS | EZ, K, G |
| 1ST | 8A-NF8-667-D1 COIL, AM PACK+ (TOK) | 8A-NF8-668-01 COIL, AM PACK (TOK) |
| 2ND | | |
| 3RD | | |

*EXCEPT SW BAND MODEL (HE/HR/HC)


* LA1843 USING...
L801 FM BET (TOK) & R802 4.7K MUST USE.
LA1844 USING...
L801 FM BET-N (TOK) & R802 22K MUST USE.

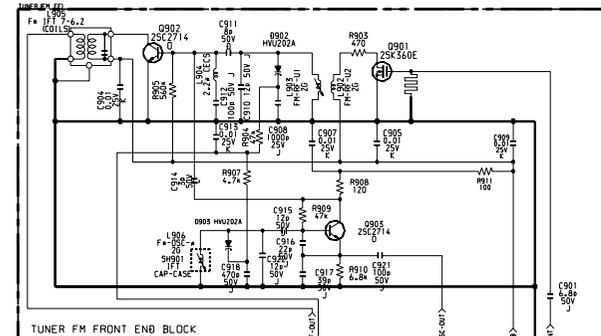

TUNER FM FRONT END BLOCK

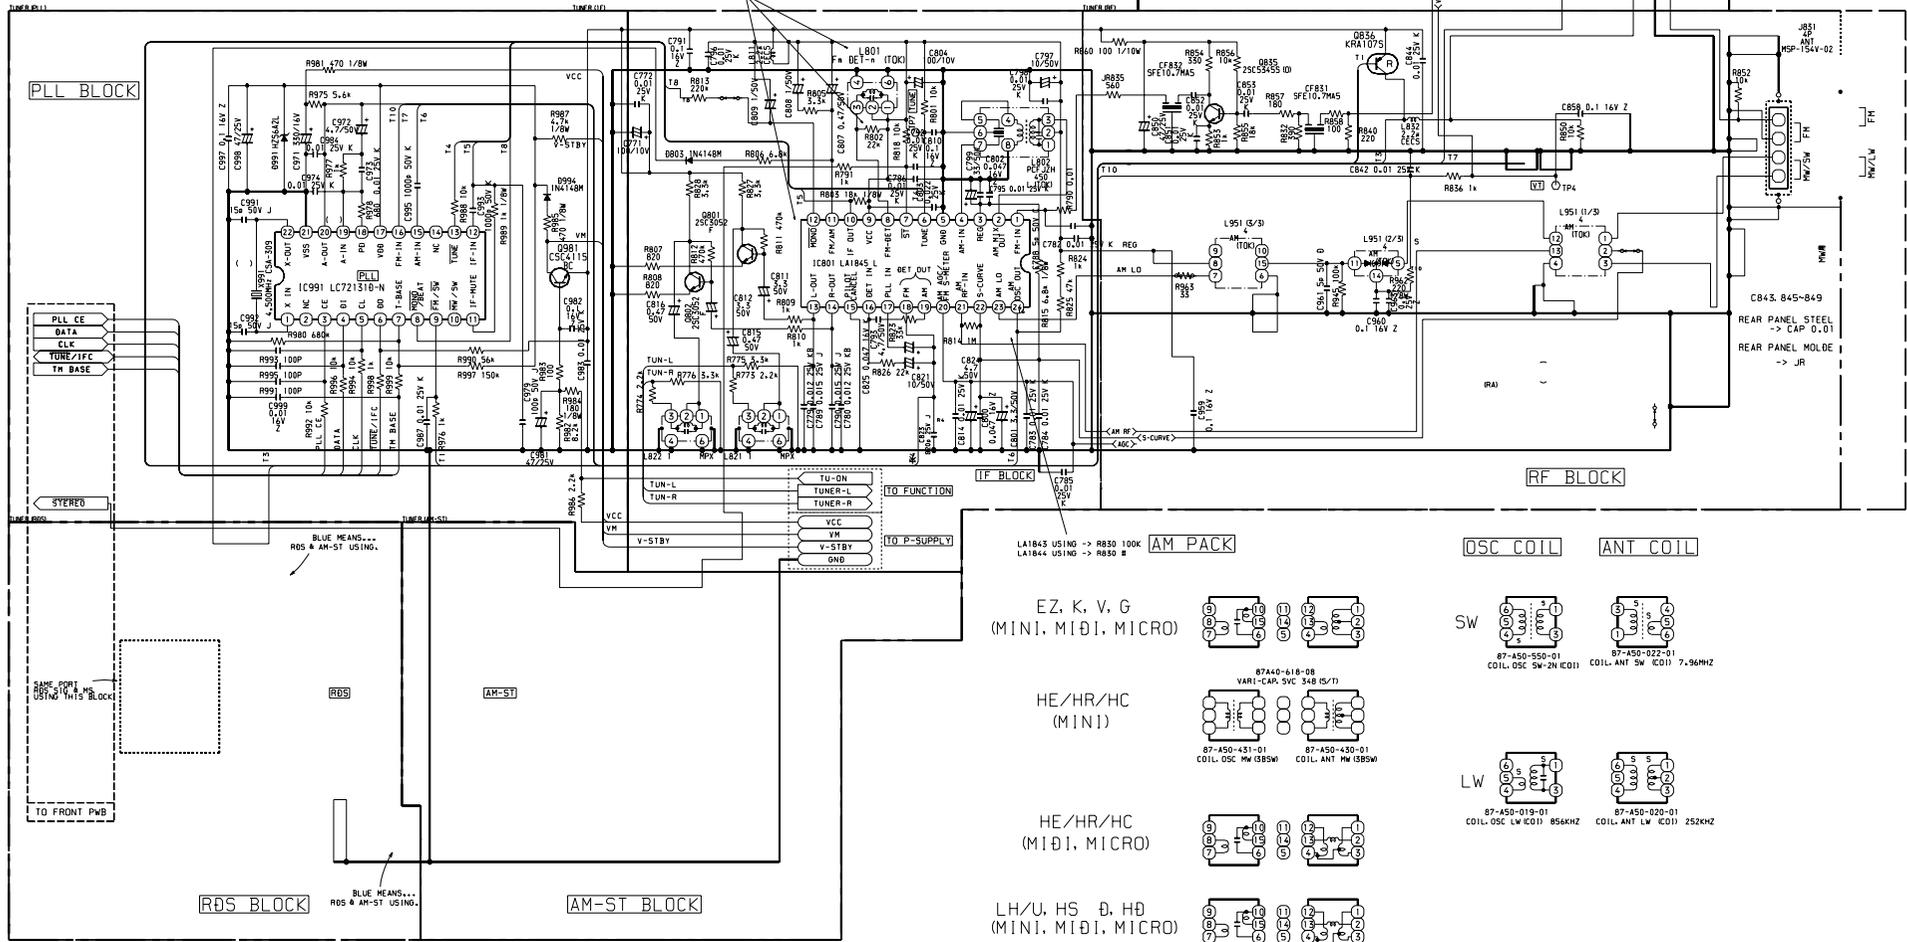



LA1843 USING -> R850 100K
LA1844 USING -> R850 8

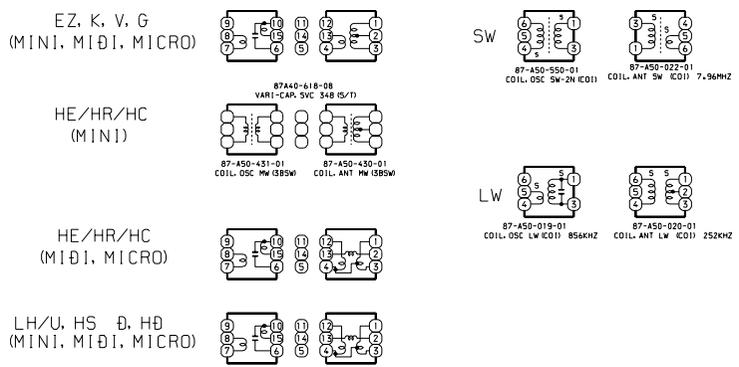

TUNER

SCHEMATIC DIAGRAM - 8 (AMP)

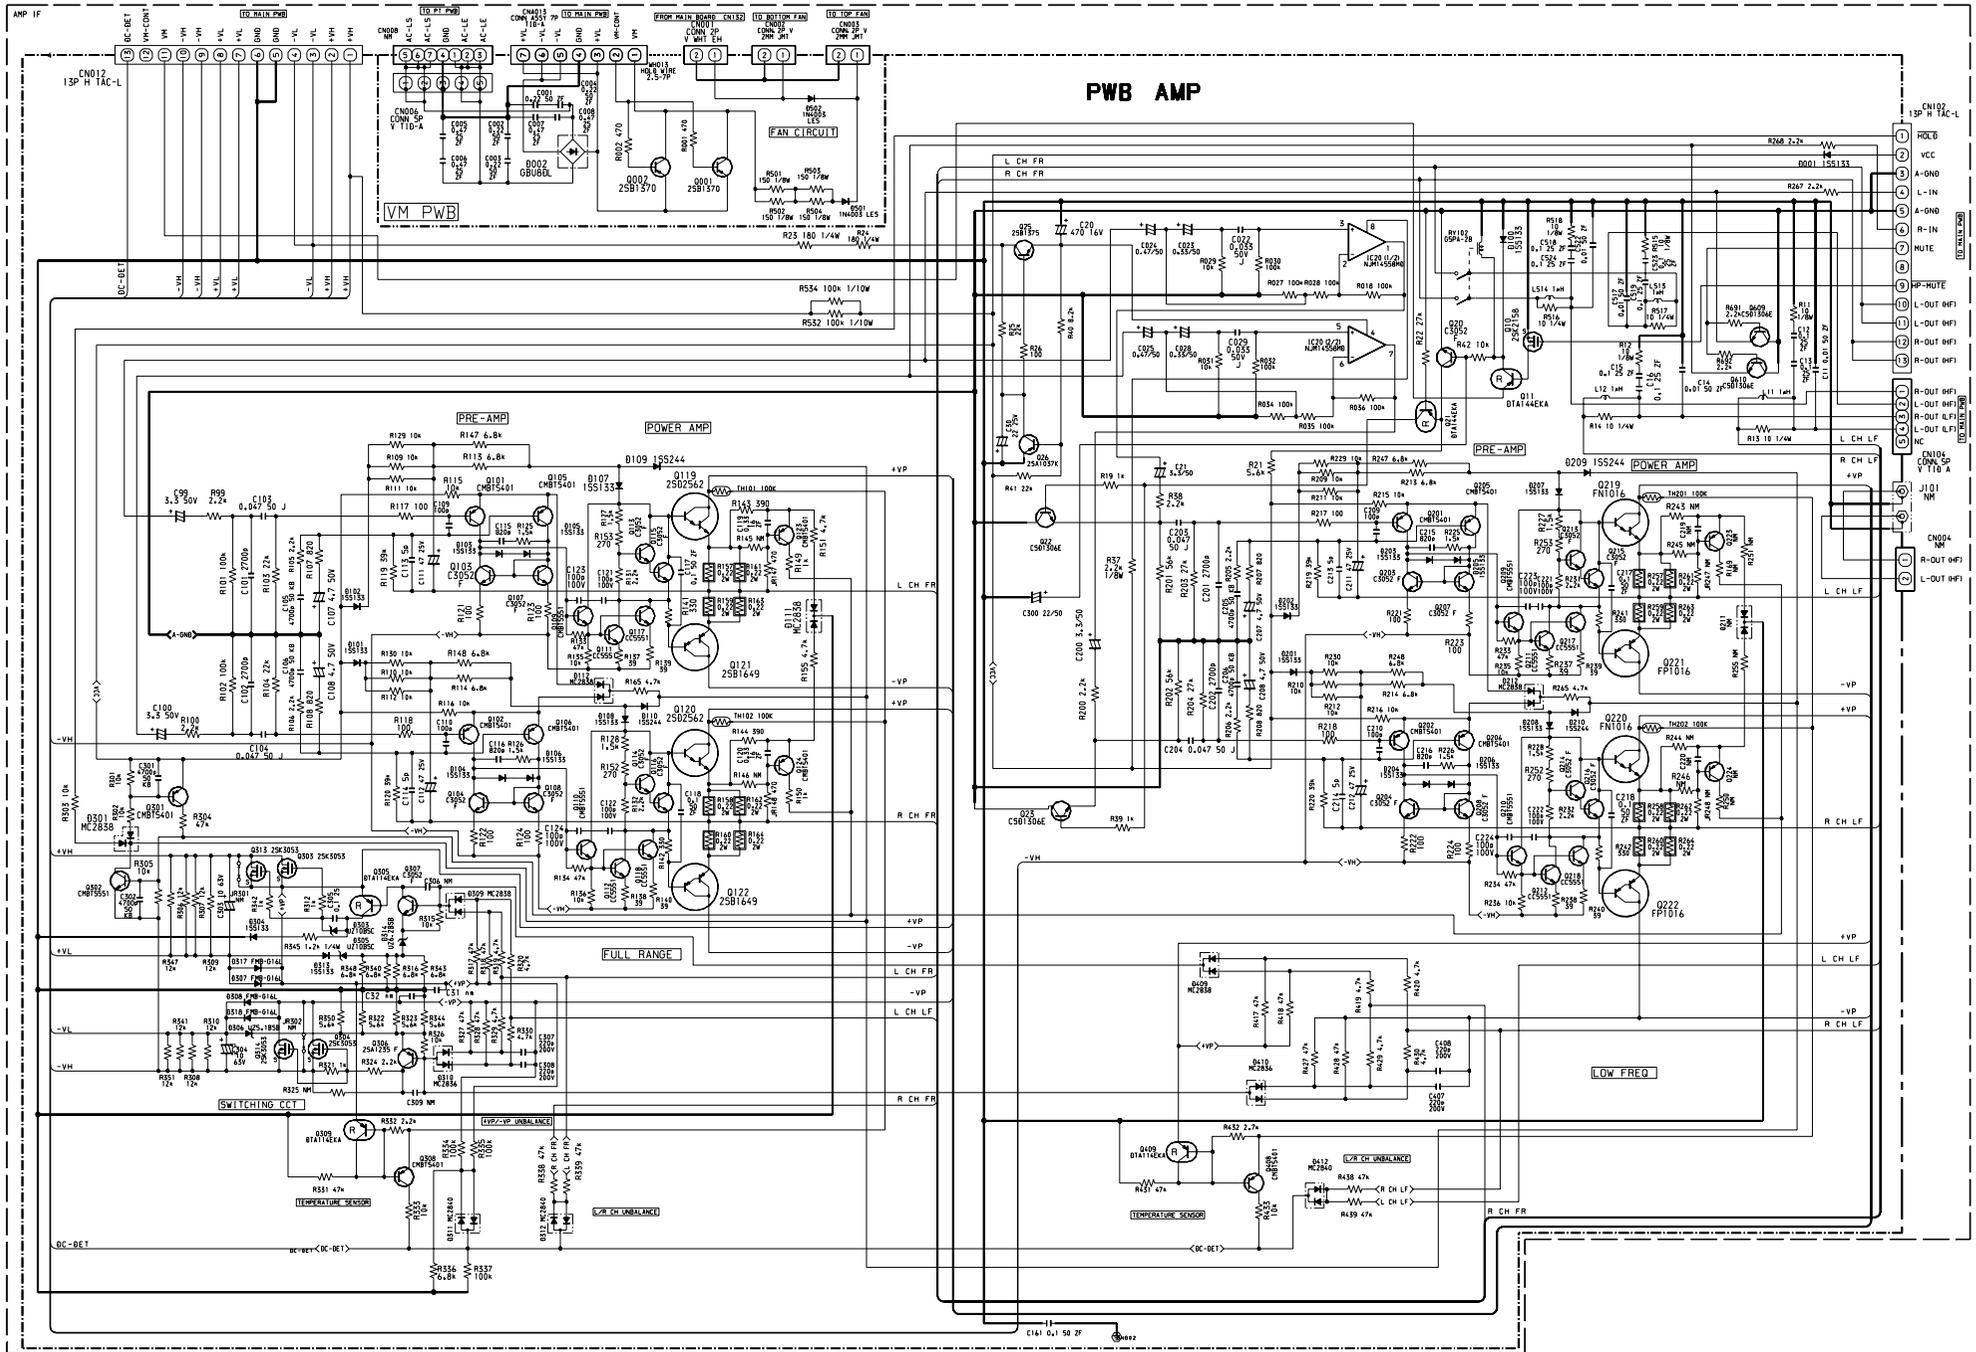

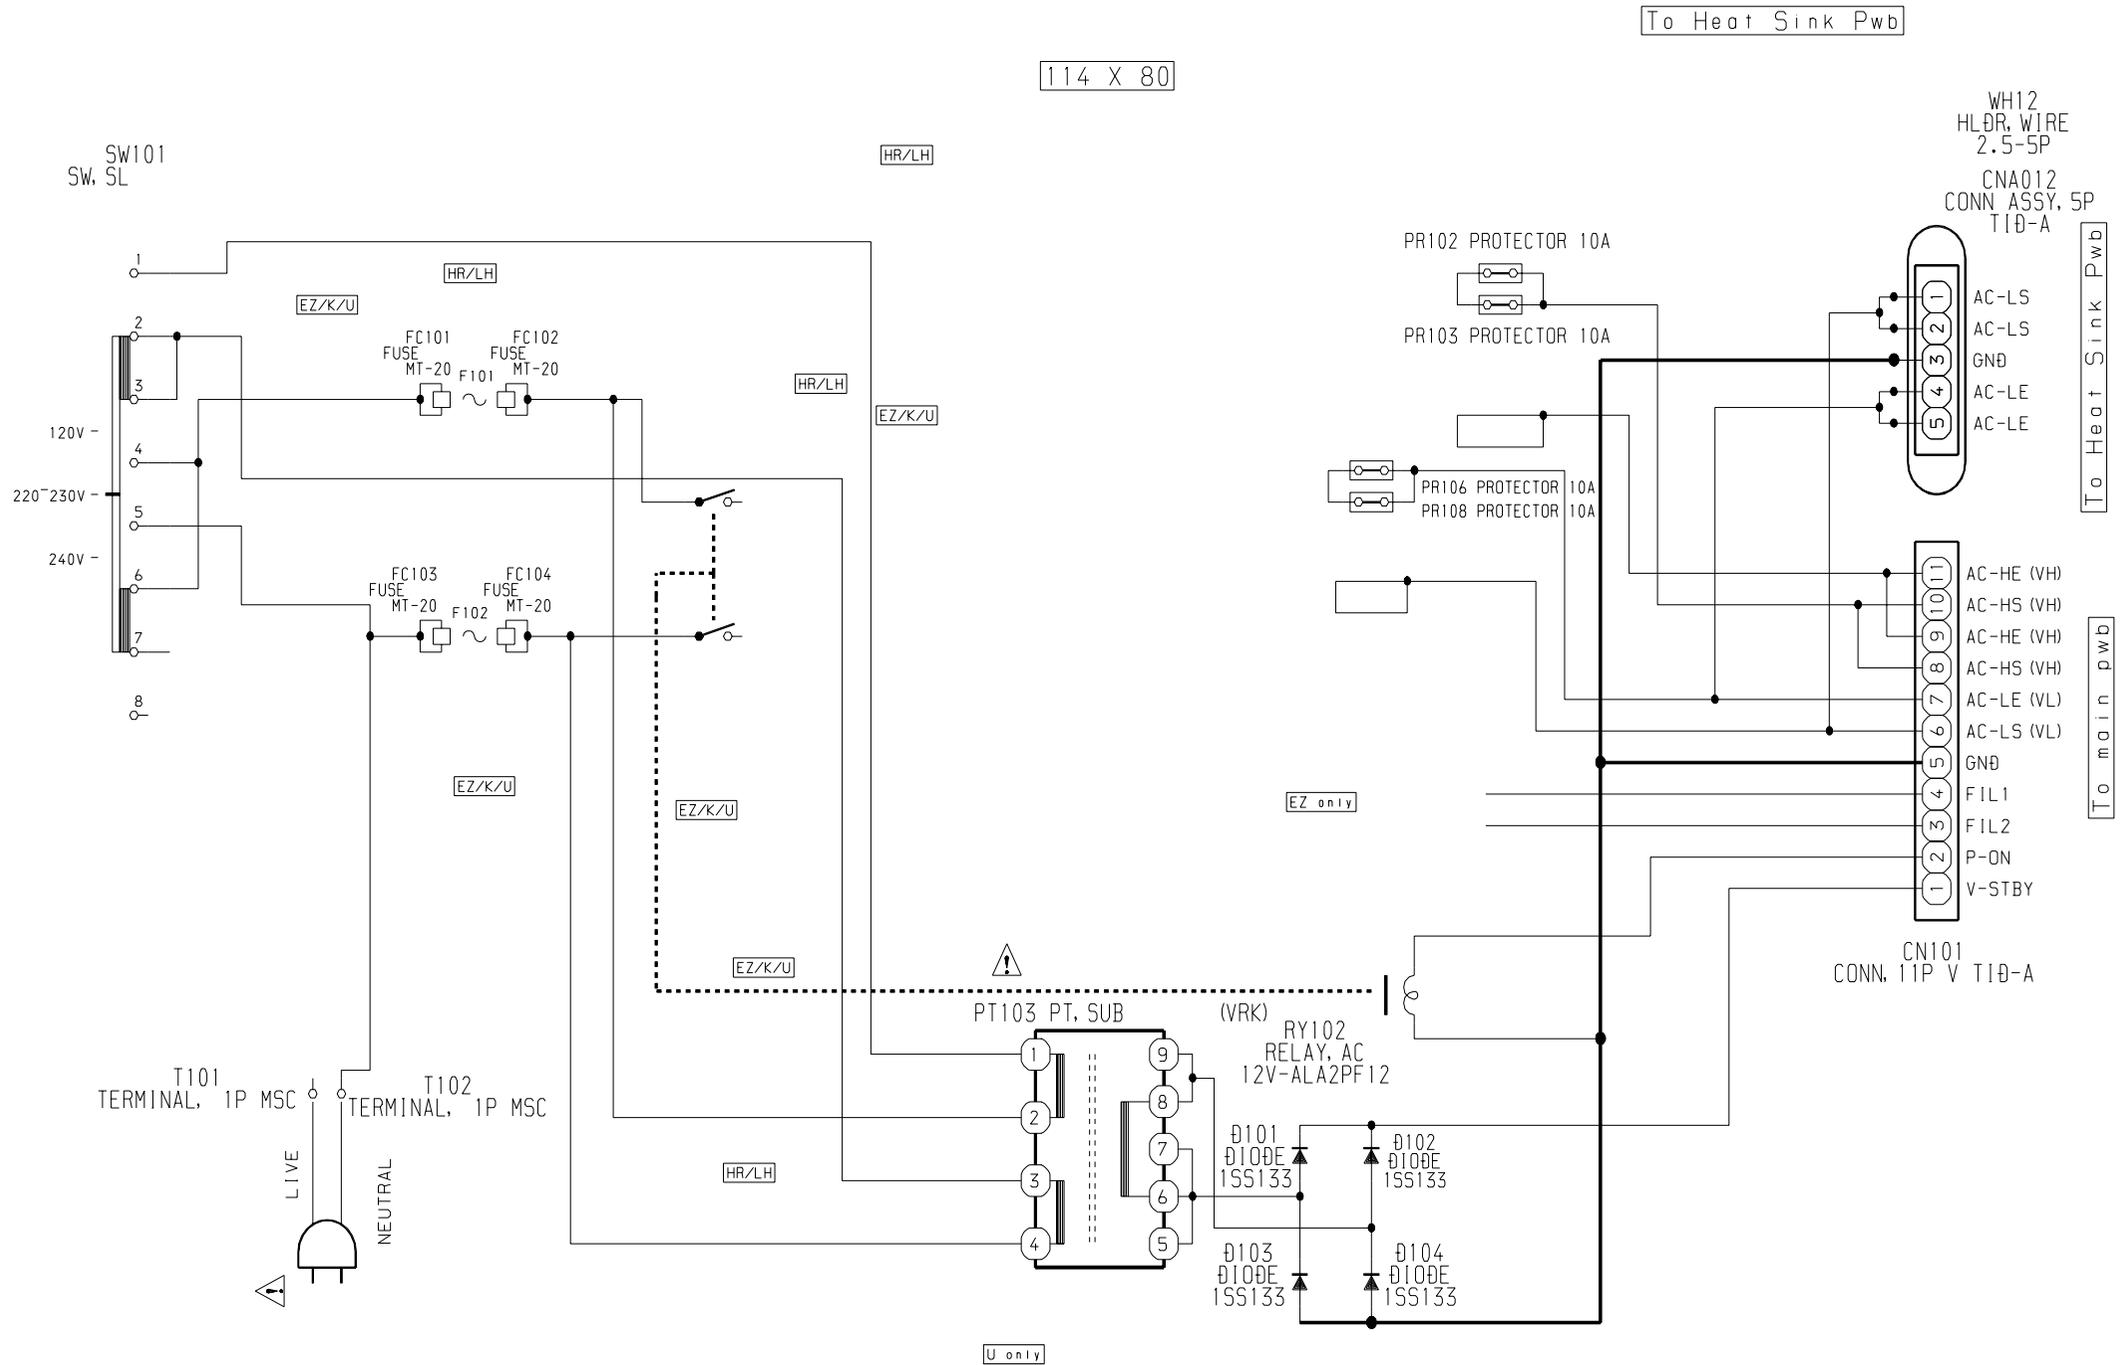

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111