


DIAGRAM A AM-FM, TUNER, IF, STEREO DECODER (Type 2331, 2332)

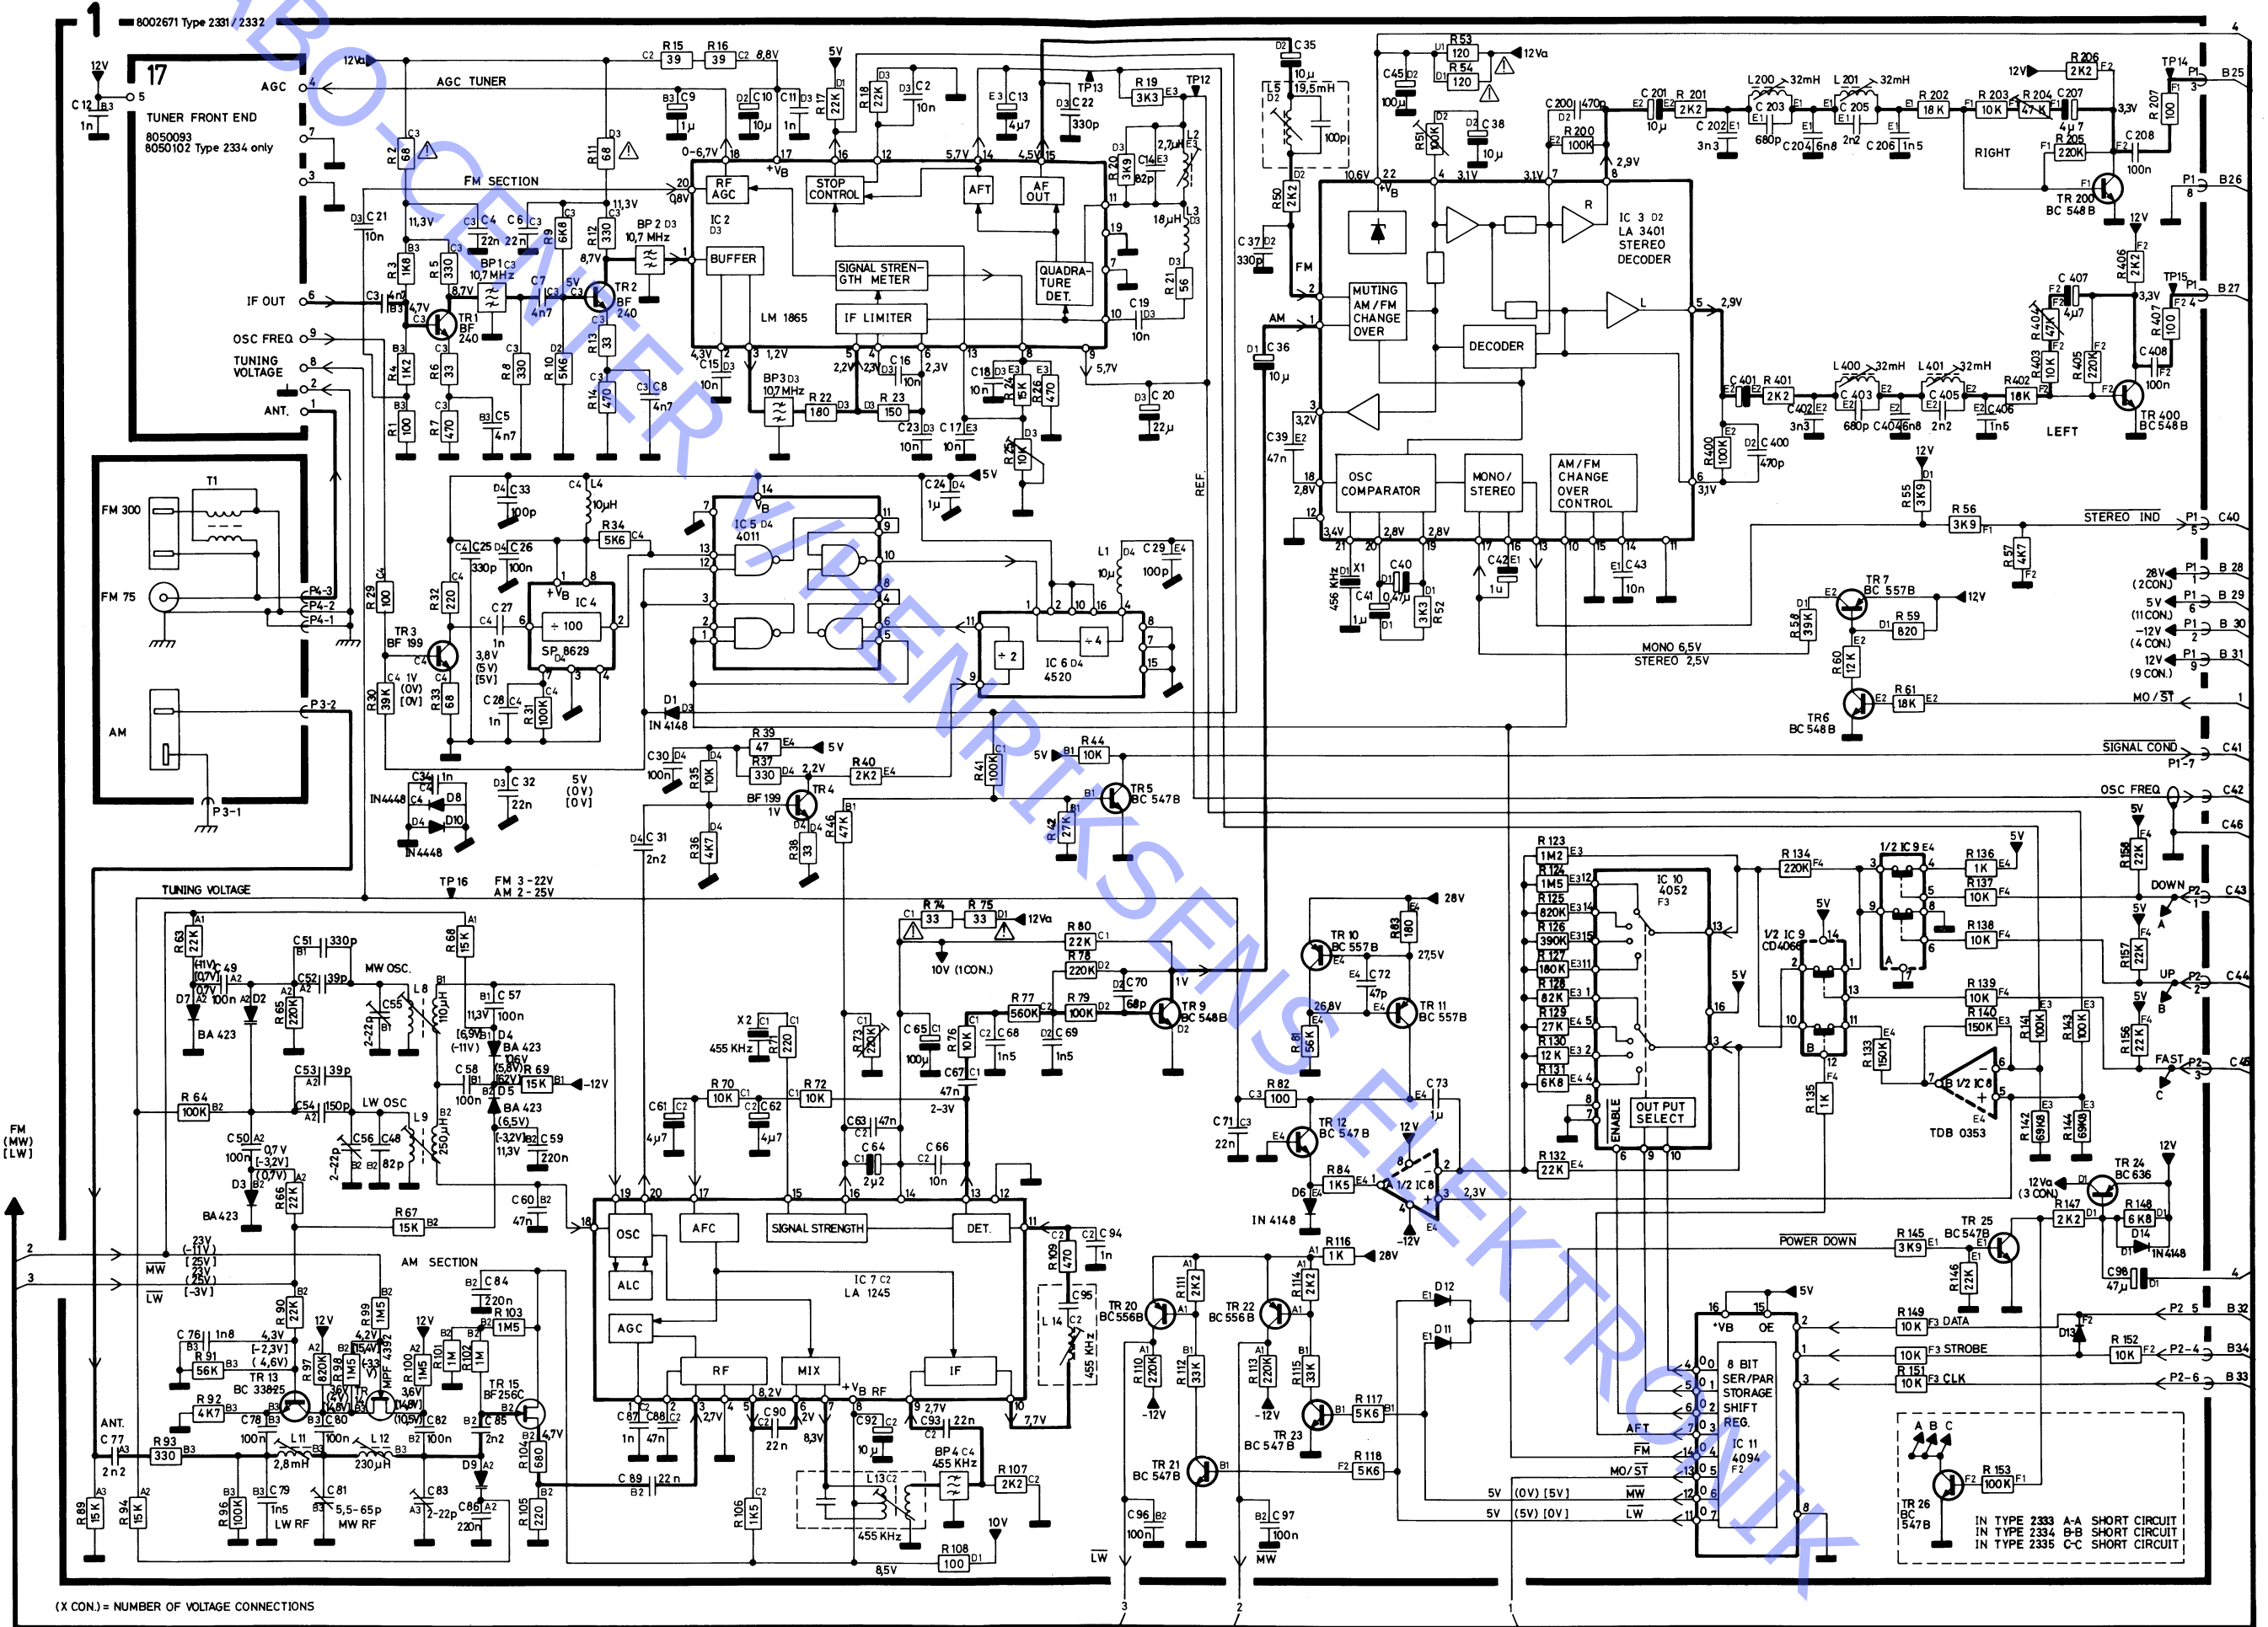

Bang & Olufsen BEOMASTER 5500


1-7

1-7

1-7


DIAGRAM B RIAA AMPL., INPUT SELECT, VOLUME AND TONE CONTROL, OUTPUT AMPL., POWER SUPPLY

8002914 ONLY TYPE 2333

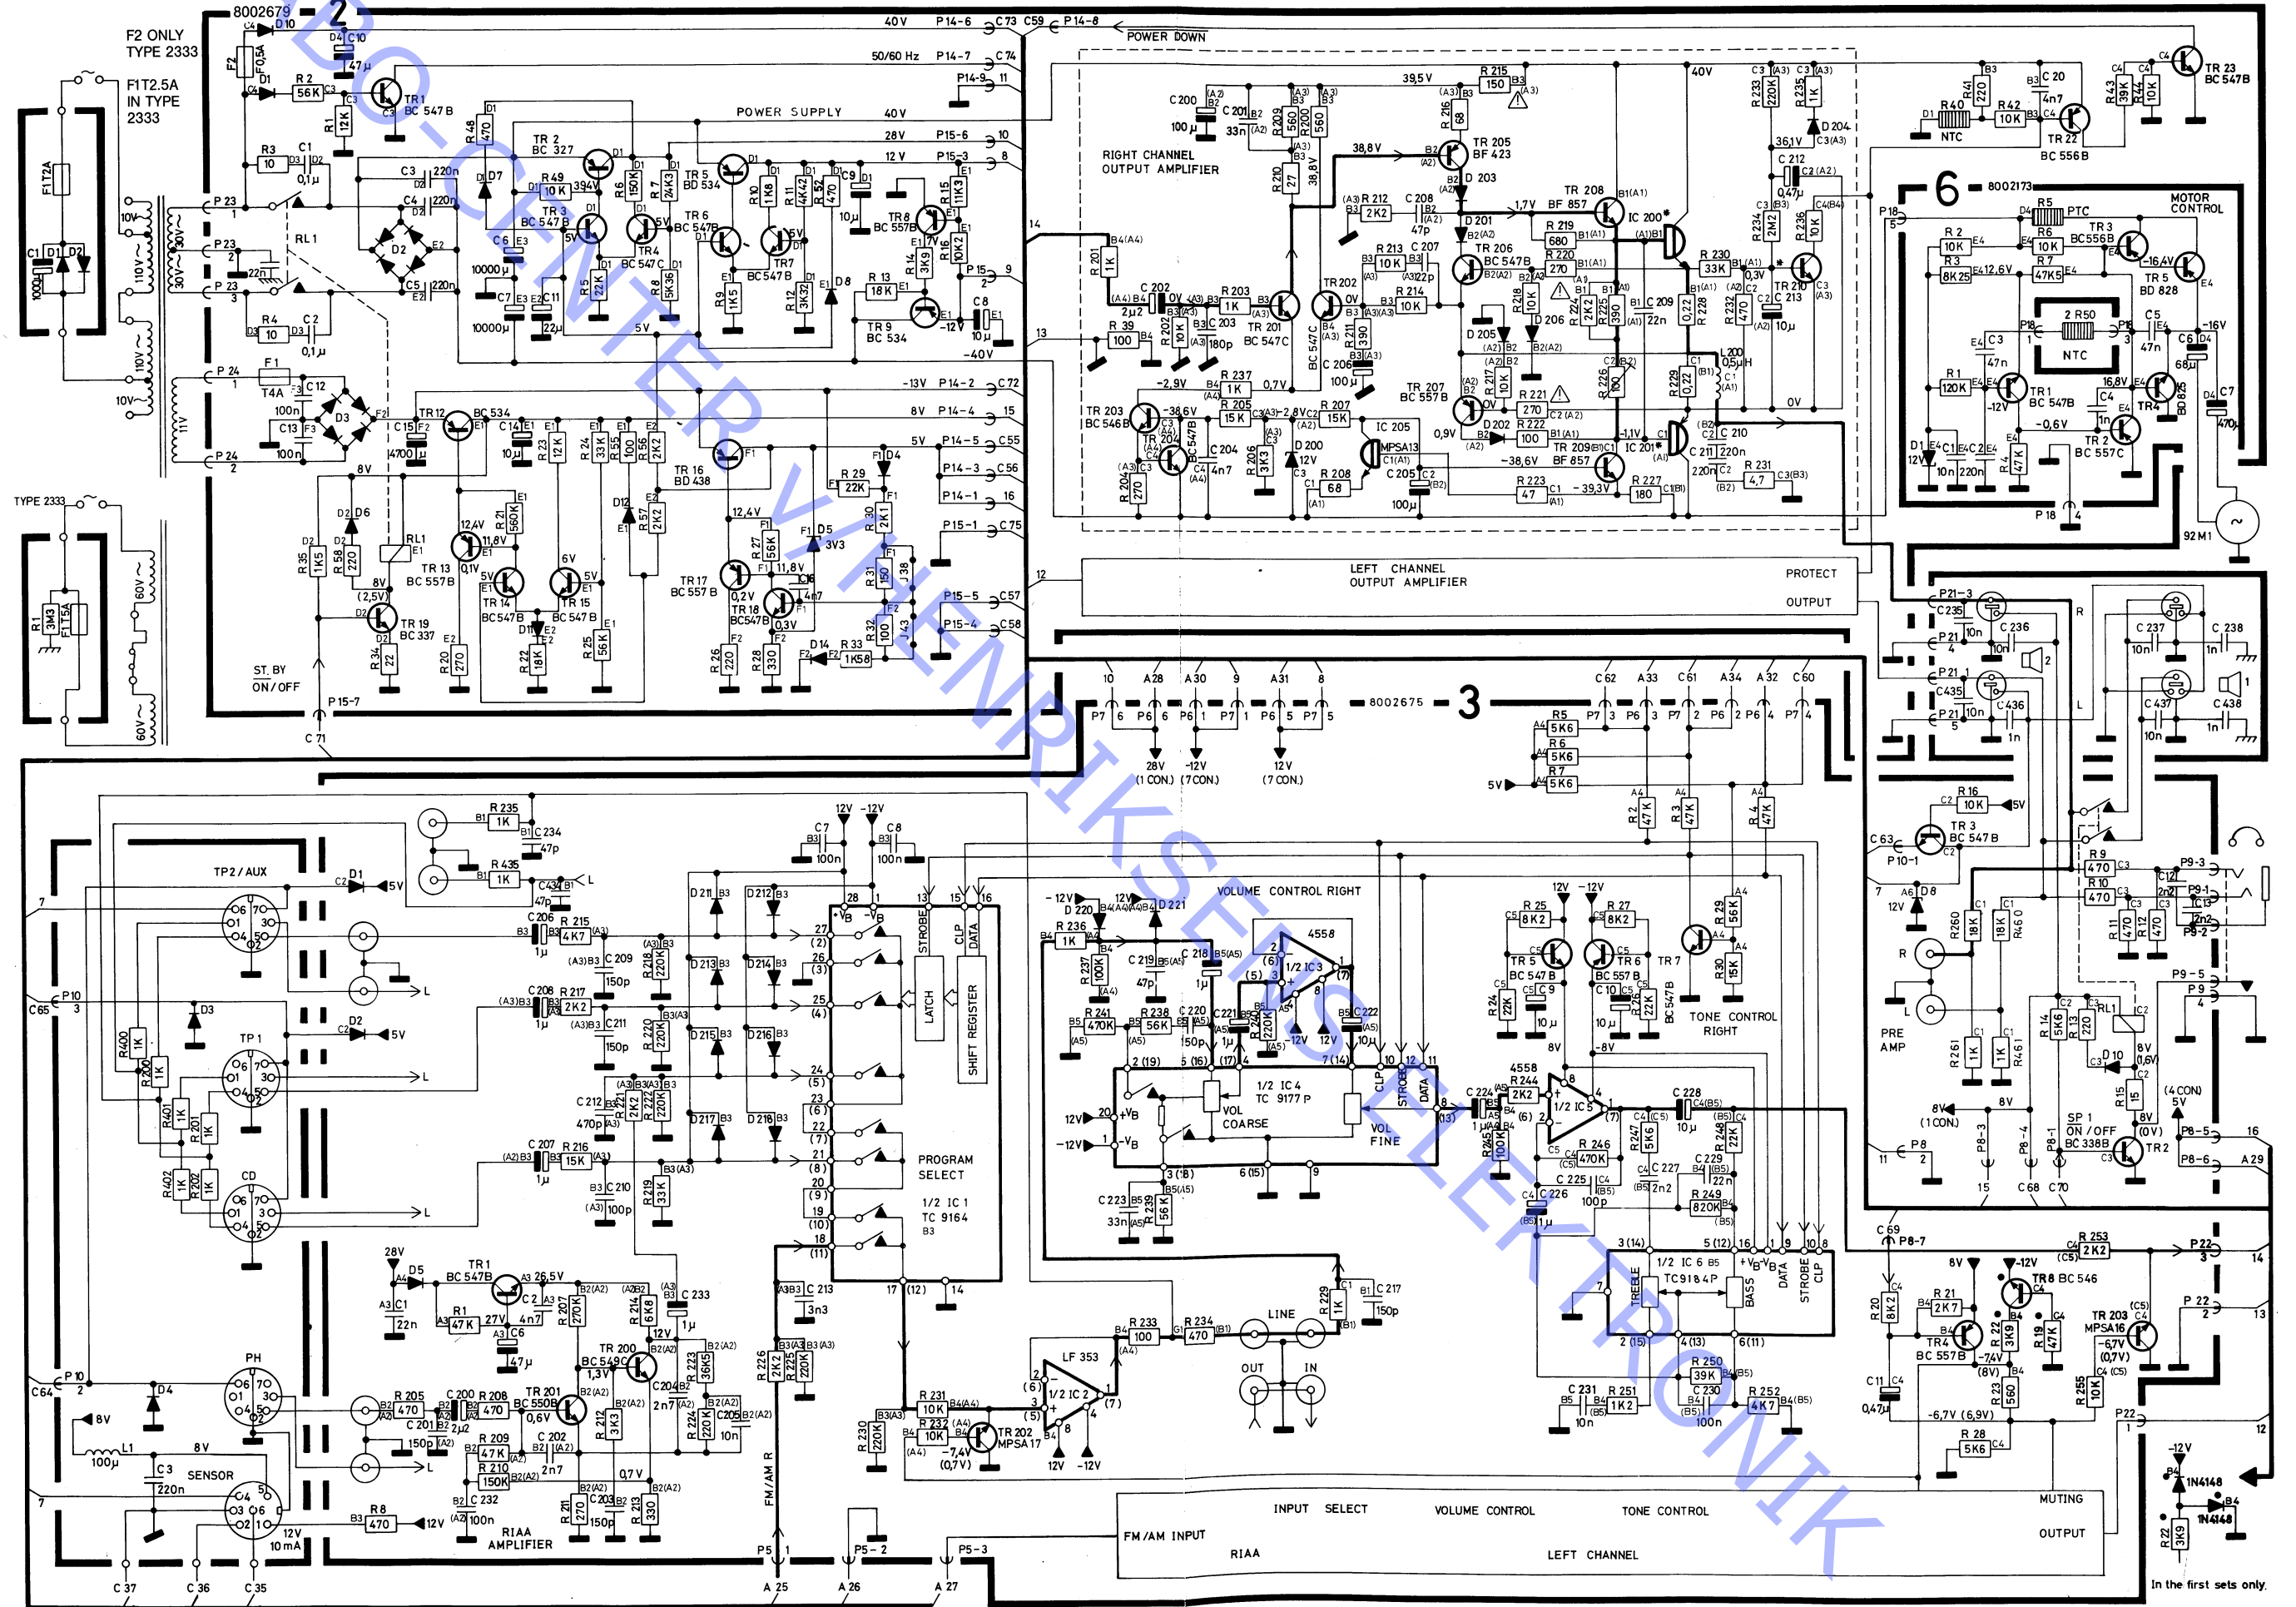

In the first sets only.

DIAGRAM C MICROCOMPUTER, IR RECEIVER/TRANSMITTER DISPLAY

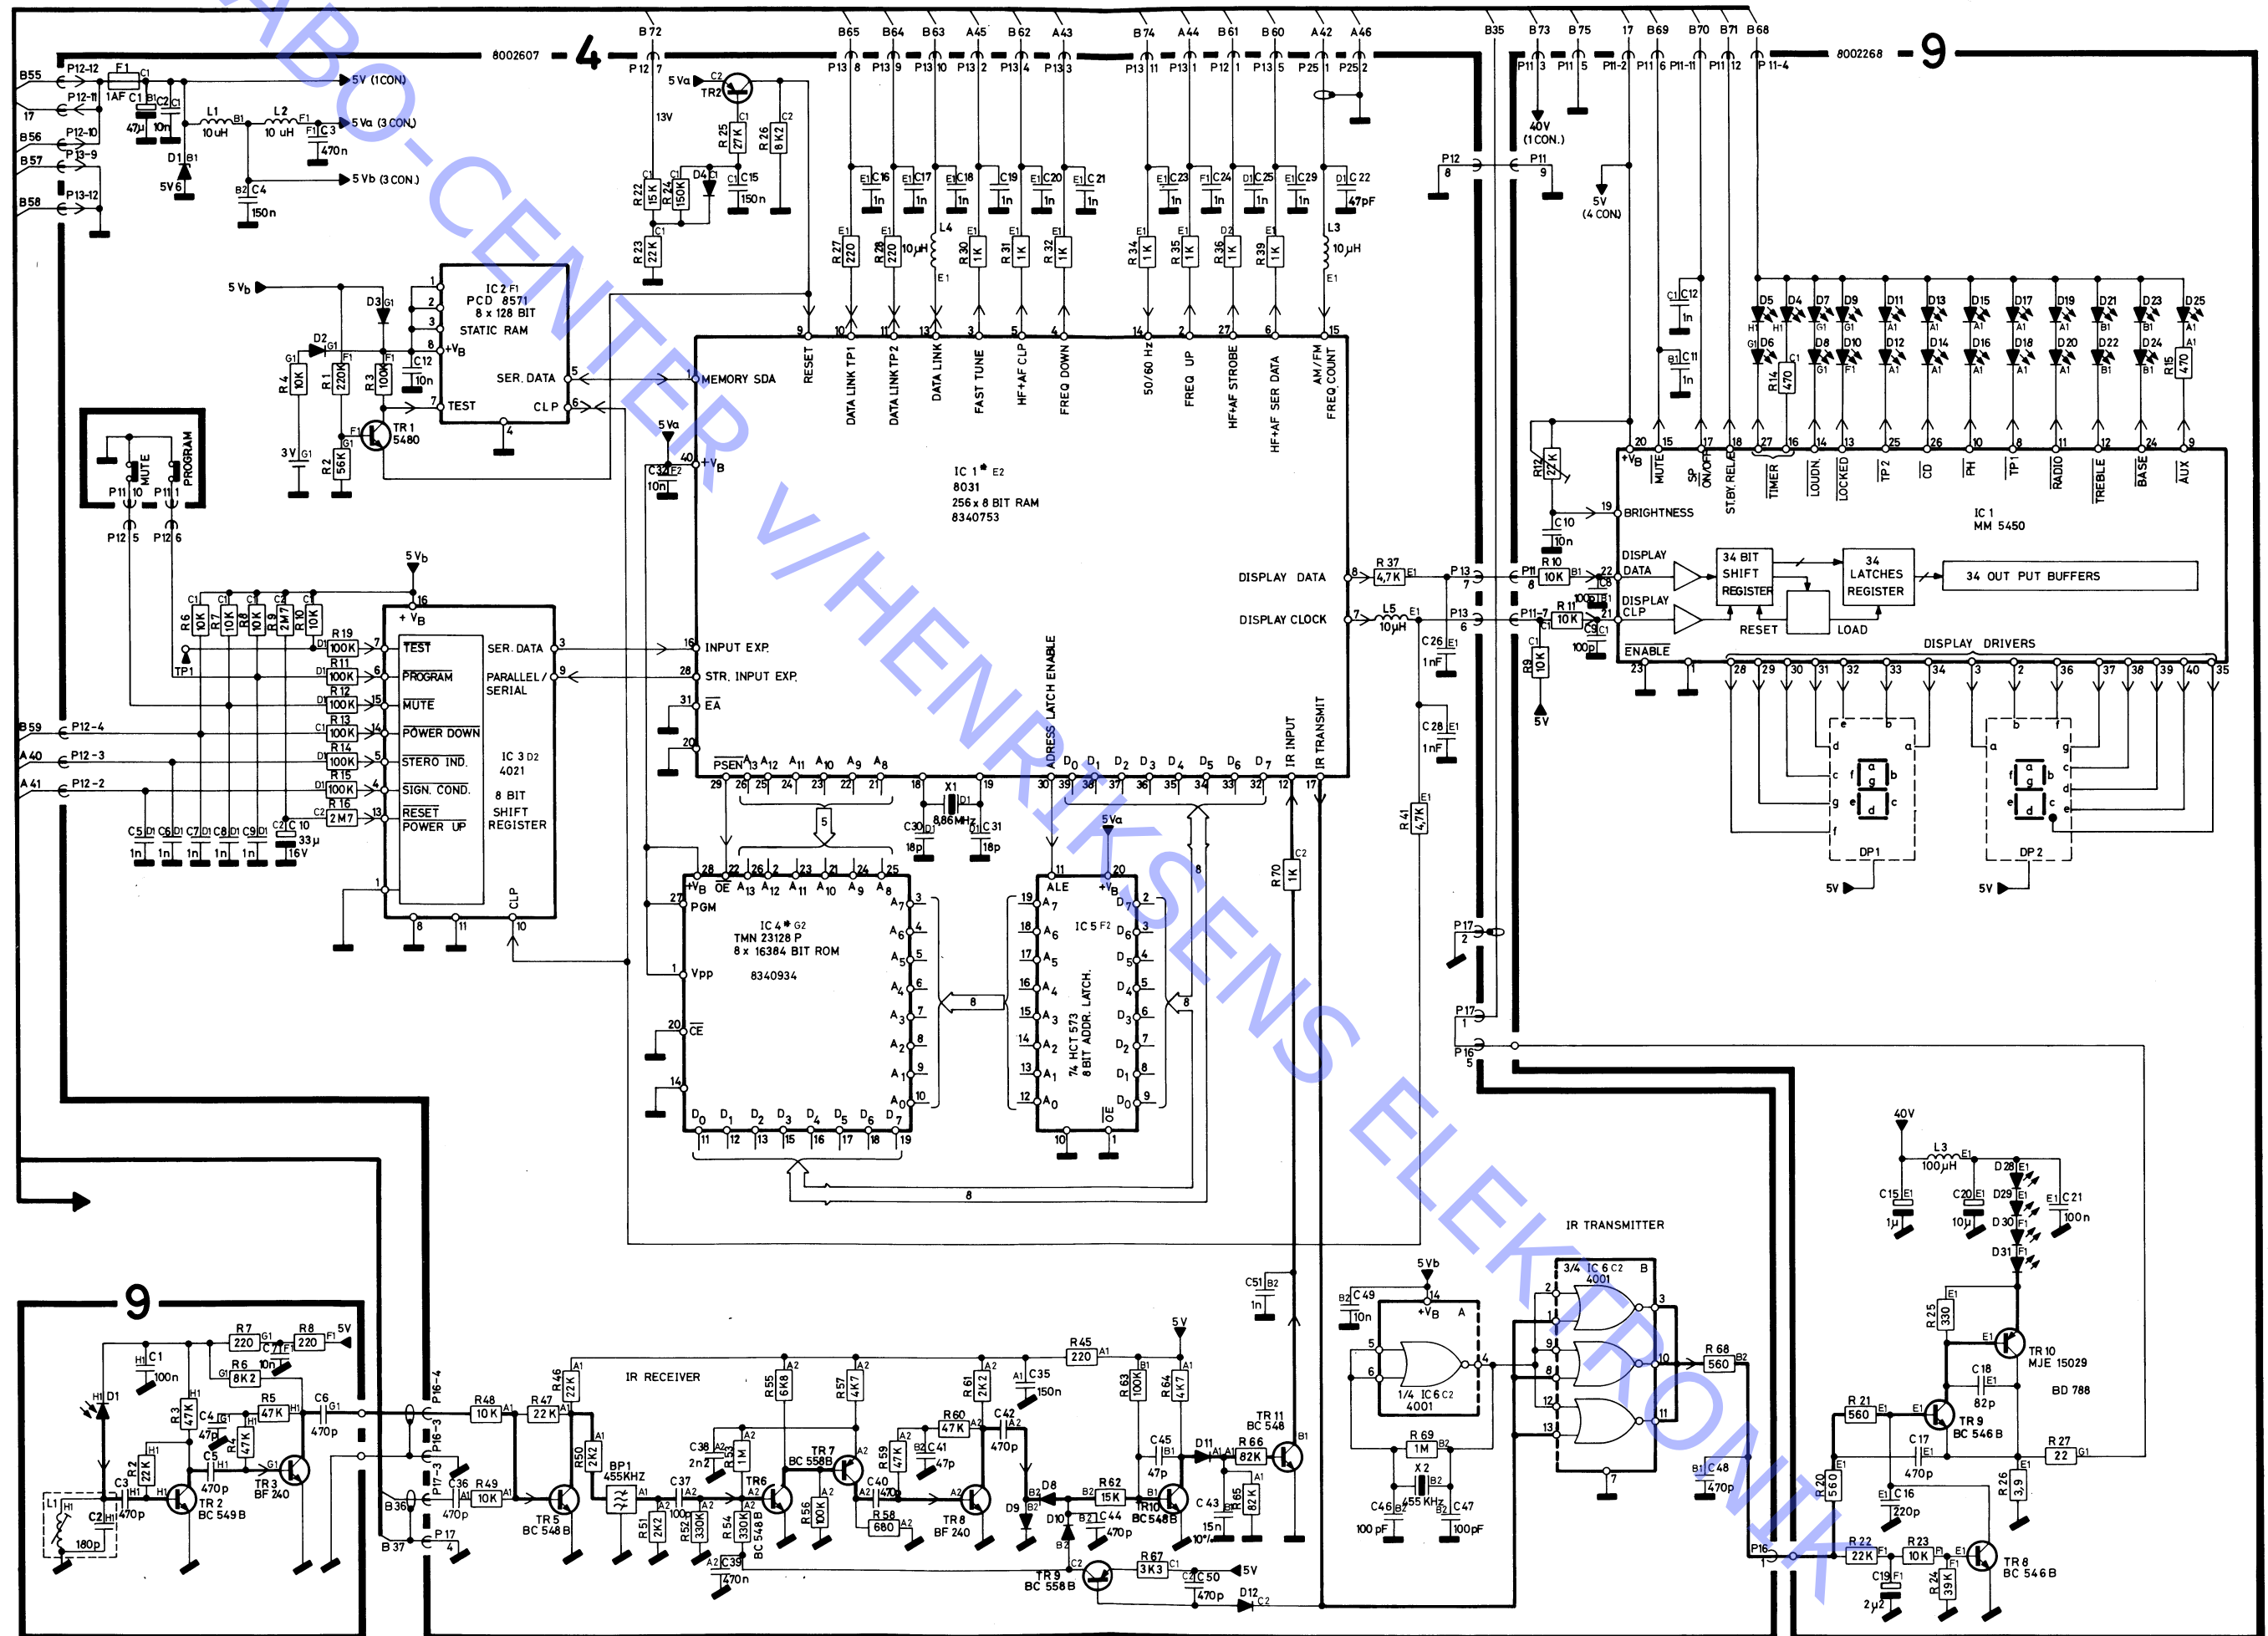

(X CON) = NUMBERS OF VOLTAGE CONNECTION.

8050093
8050102 Type
2334 only

