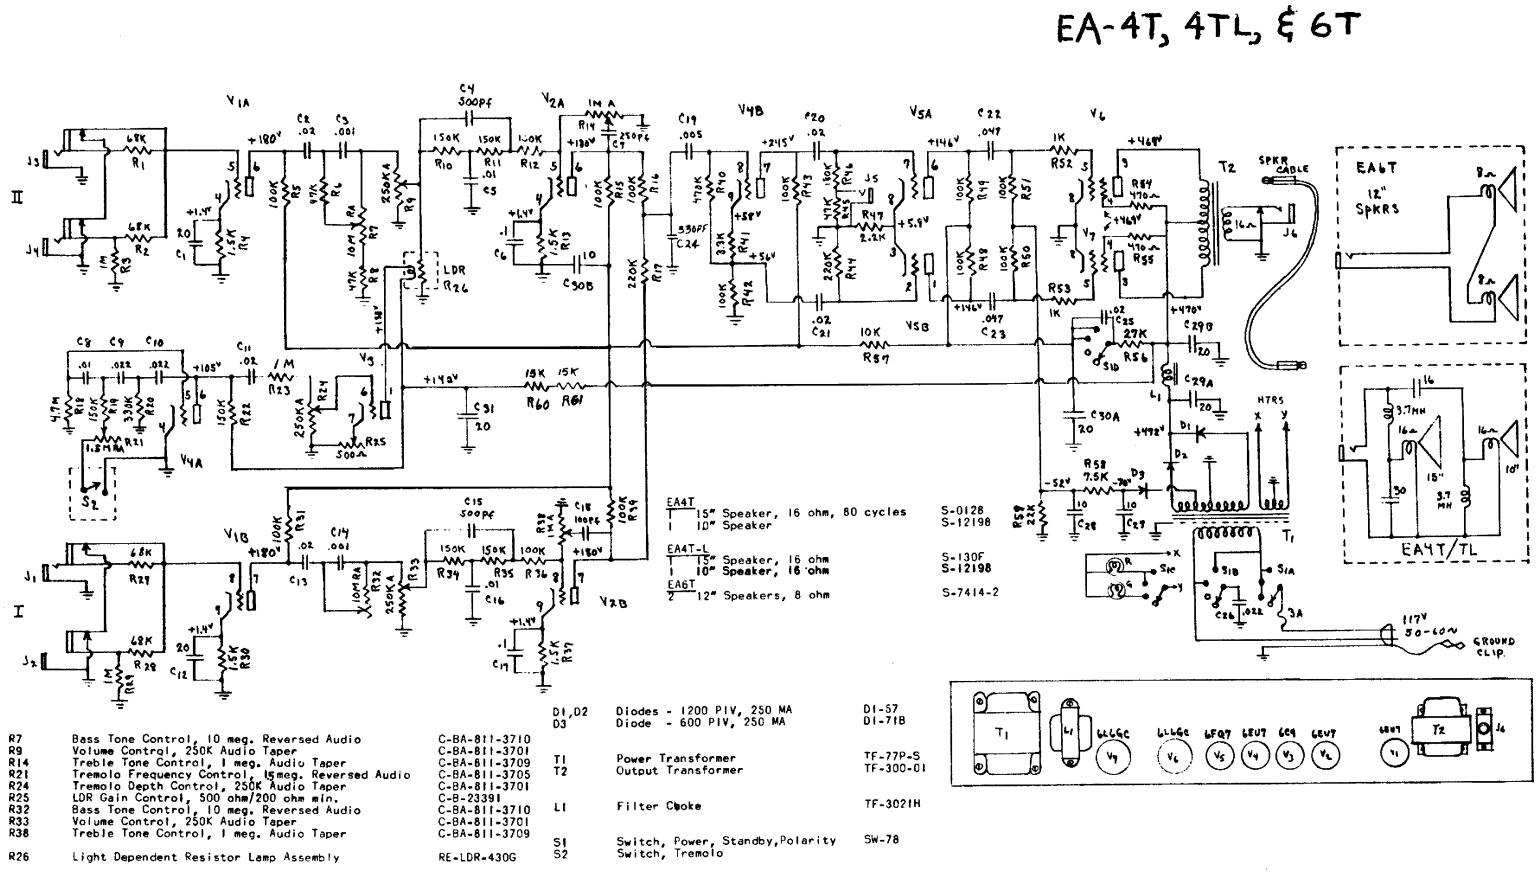


R7	Bass Tone Control, 10 meg. Reversed Audio	C-BA-811-3710
R9	Volume Control, 250K Audio Taper	C-BA-811-3701
R14	Treble Tone Control, 1 meg. Audio Taper	C-BA-811-3709
R21	Tremolo Frequency Control, 15meg. Reversed Audio	C-BA-811-3705
R24	Tremolo Depth Control, 250K Audio Taper	C-BA-811-3701
R25	LDR Gain Control, 500 ohm/200 ohm min.	C-B-23391
R32	Bass Tone Control, 10 meg. Reversed Audio	C-BA-811-3710
R33	Volume Control, 250K Audio Taper	C-BA-811-3701
R38	Treble Tone Control, 1 meg. Audio Taper	C-BA-811-3709
R26	Light Dependent Resistor Lamp Assembly	RE-LDR-430G

D1,D2	Diodes - 1200 PIV, 250 MA	DI-57
D3	Diode - 600 PIV, 250 MA	DI-718
T1	Power Transformer	TF-77P-S
T2	Output Transformer	TF-300-01
L1	Filter Choke	TF-3021H
S1	Switch, Power, Standby, Polarity	SW-78
S2	Switch, Tremolo	

FUSE

The fuse used in this Amplifier is a type 3AG of three amperes rating.

DO NOT USE FUSES OF HIGHER RATING

SERVICE

If the amplifier is in need of servicing, it should be taken to a reliable radio man. The electrical diagram in this folder should be shown the repairman to assist him in servicing the amplifier.