

# JVC


# SERVICE MANUAL

## COMPACT COMPONENT SYSTEM

### MX-J300

#### Area Suffix

A	-----	Australia
U	-----	Other Areas
US	-----	Singapore
UT	-----	Taiwan
UP	-----	Korea
UY	-----	Argentina
UZ	-----	Production country mark

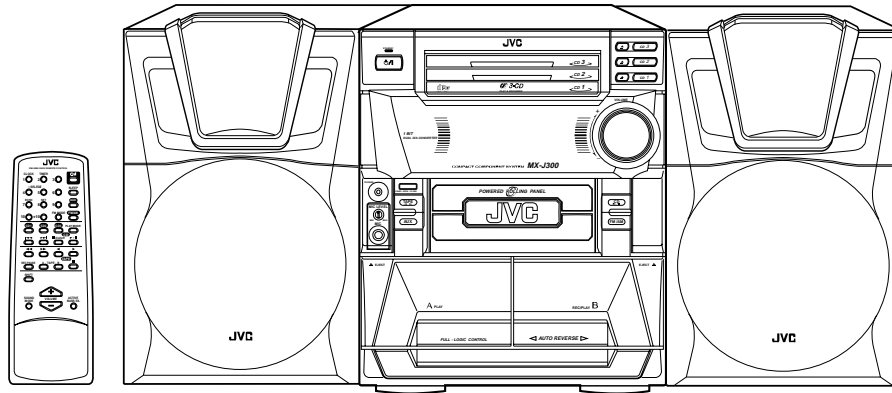

COMPACT  
**disc**  
DIGITAL AUDIO

### Contents

Safety Precautions	-----	1-2	Flow of functional	
Important for laser products	-----	1-3	operation until TOC read	----- 1-27
Preventing static electricity	-----	1-4	Maintenance of laser pickup	----- 1-28
Disassembly method	-----	1-5	Replacement of laser pickup	----- 1-28
Adjustment method	-----	1-24	Description of major ICs	----- 1-29



Control section


5

4

3

2

1

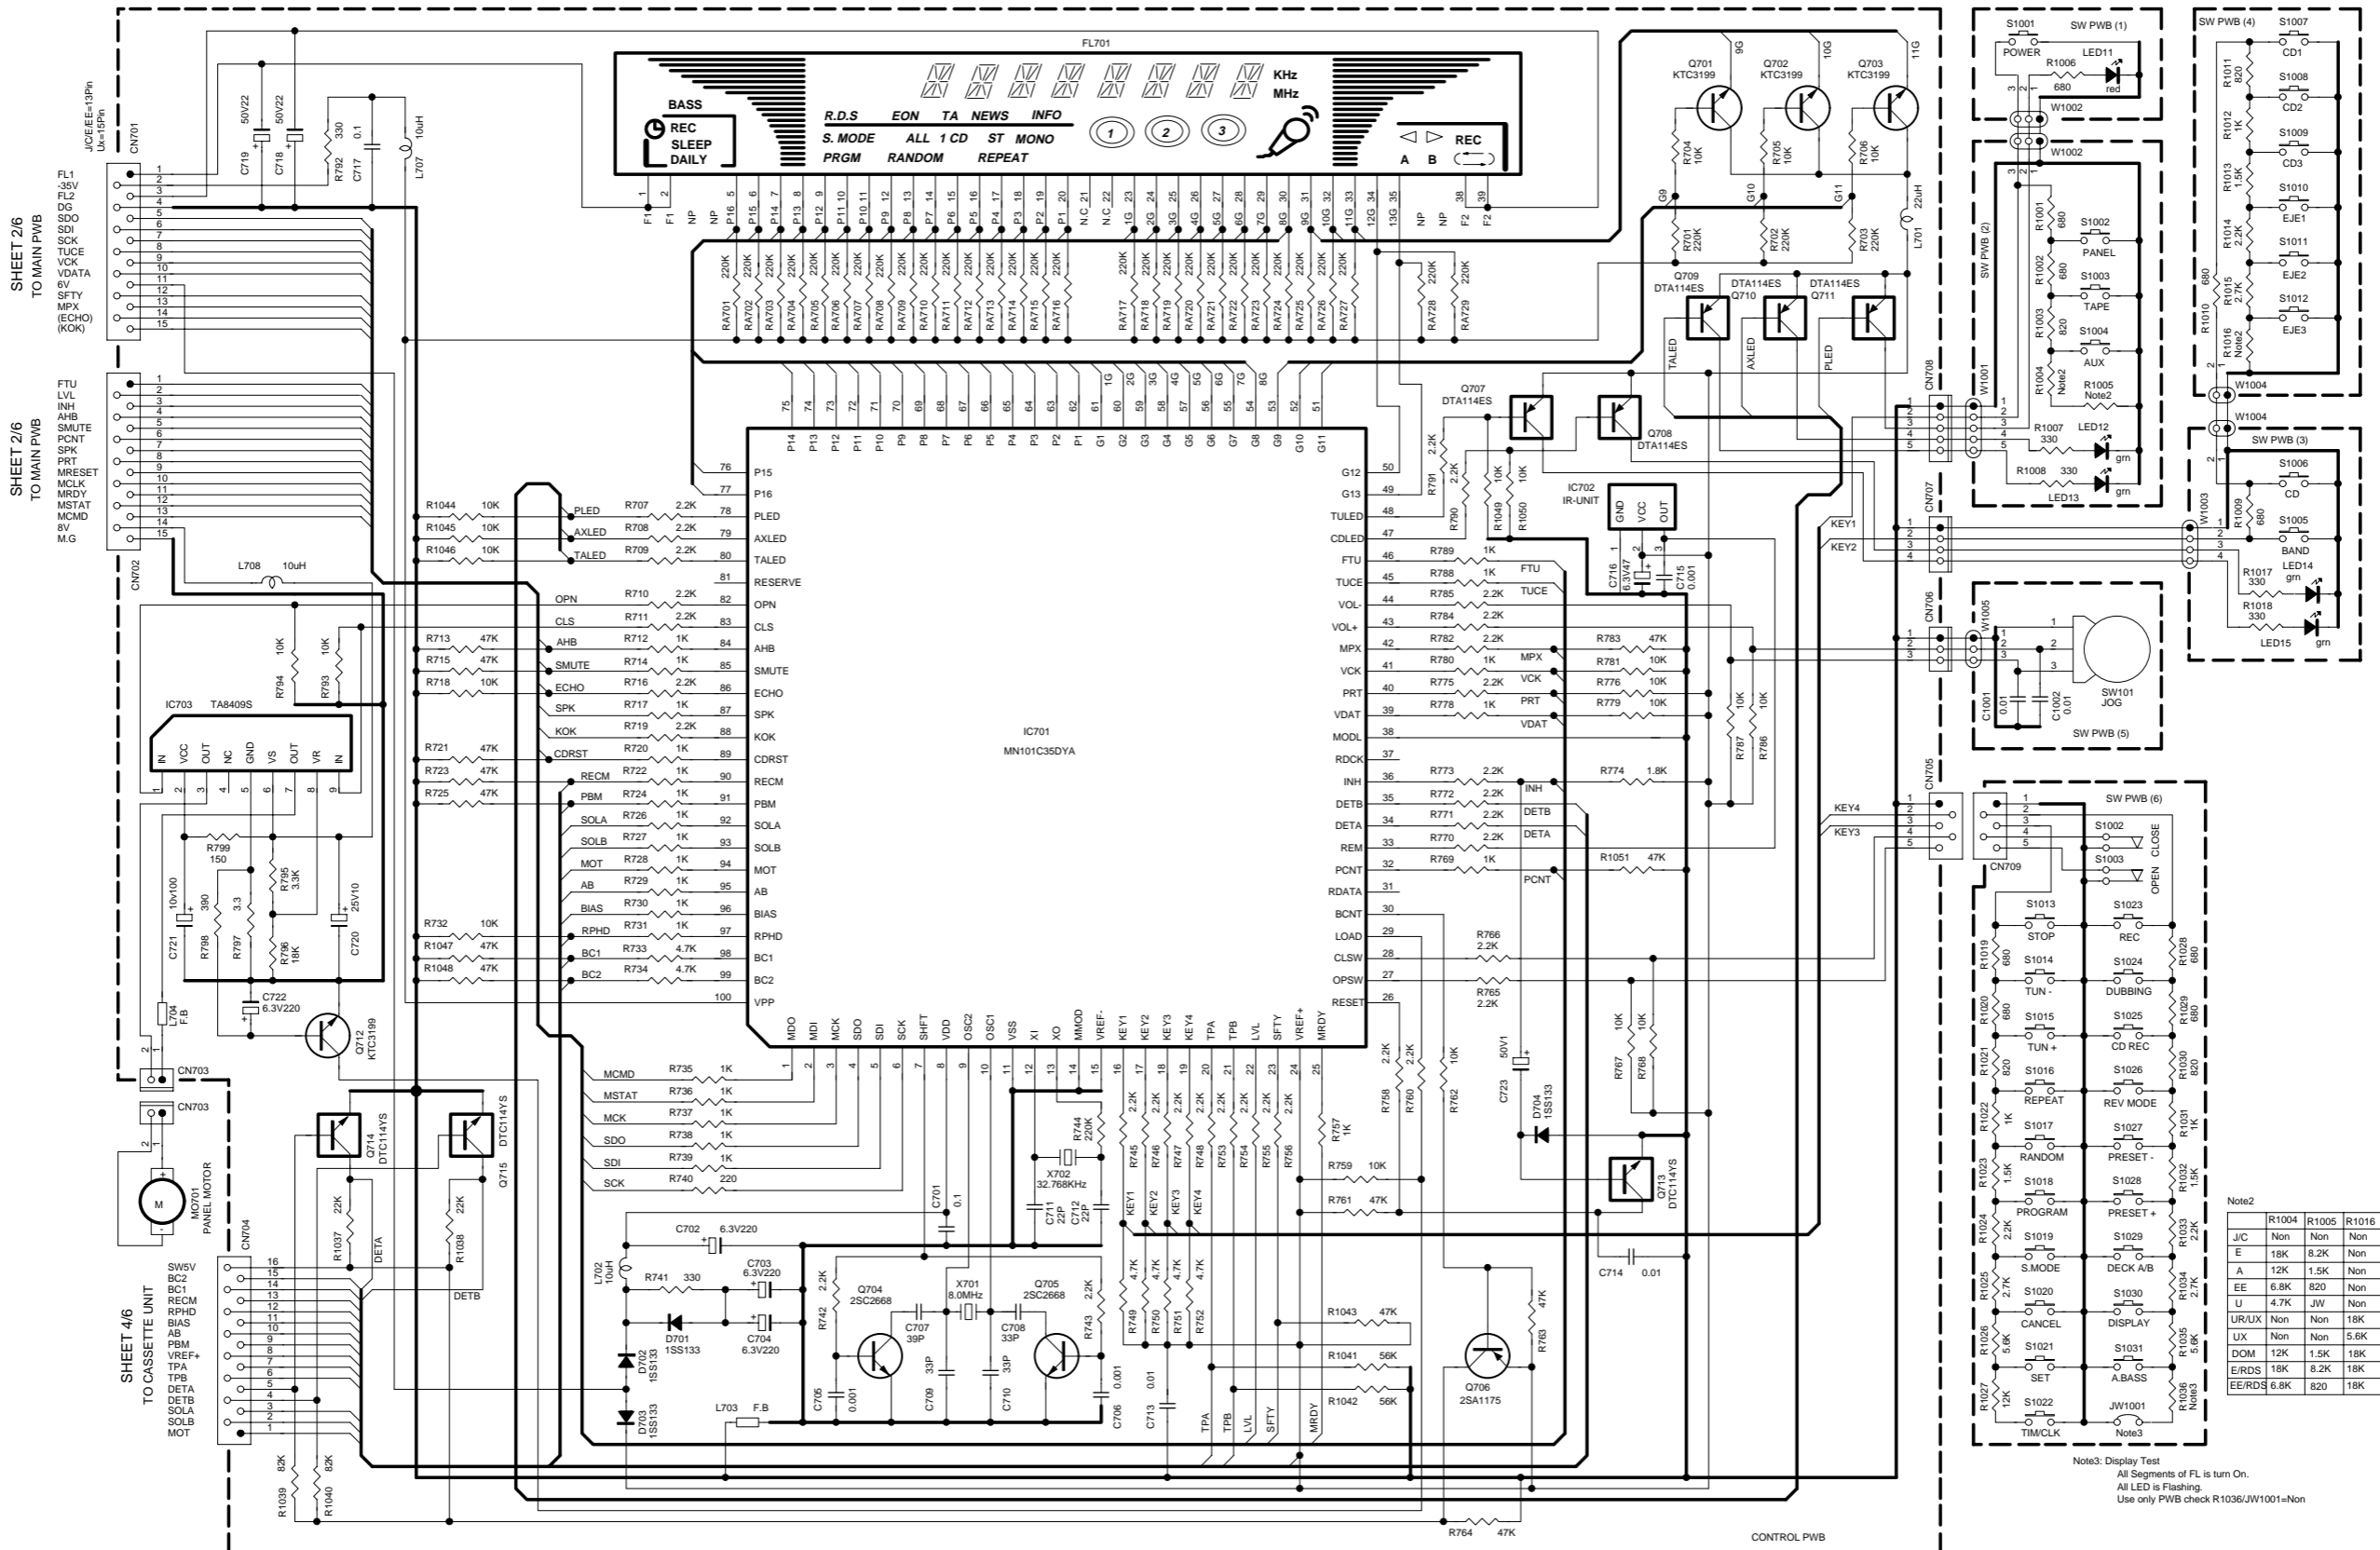


Note2

	R1004	R1005	R1016
J/C	Non	Non	Non
E	18K	8.2K	Non
A	12K	1.5K	Non
EE	6.8K	820	Non
U	4.7K	JW	Non
UR/UX	Non	Non	18K
LUX	Non	Non	5.6K
DOM	12K	1.5K	18K
E/RDS	18K	8.2K	18K
EE/RDS	6.8K	820	18K

Note3: Display Test  
 All Segments of FL is turn On.  
 All LED is Flashing.  
 Use only PWB check R1036/JW1001=Non

■ Cassette amplifier section

5  
4  
3  
2  
1

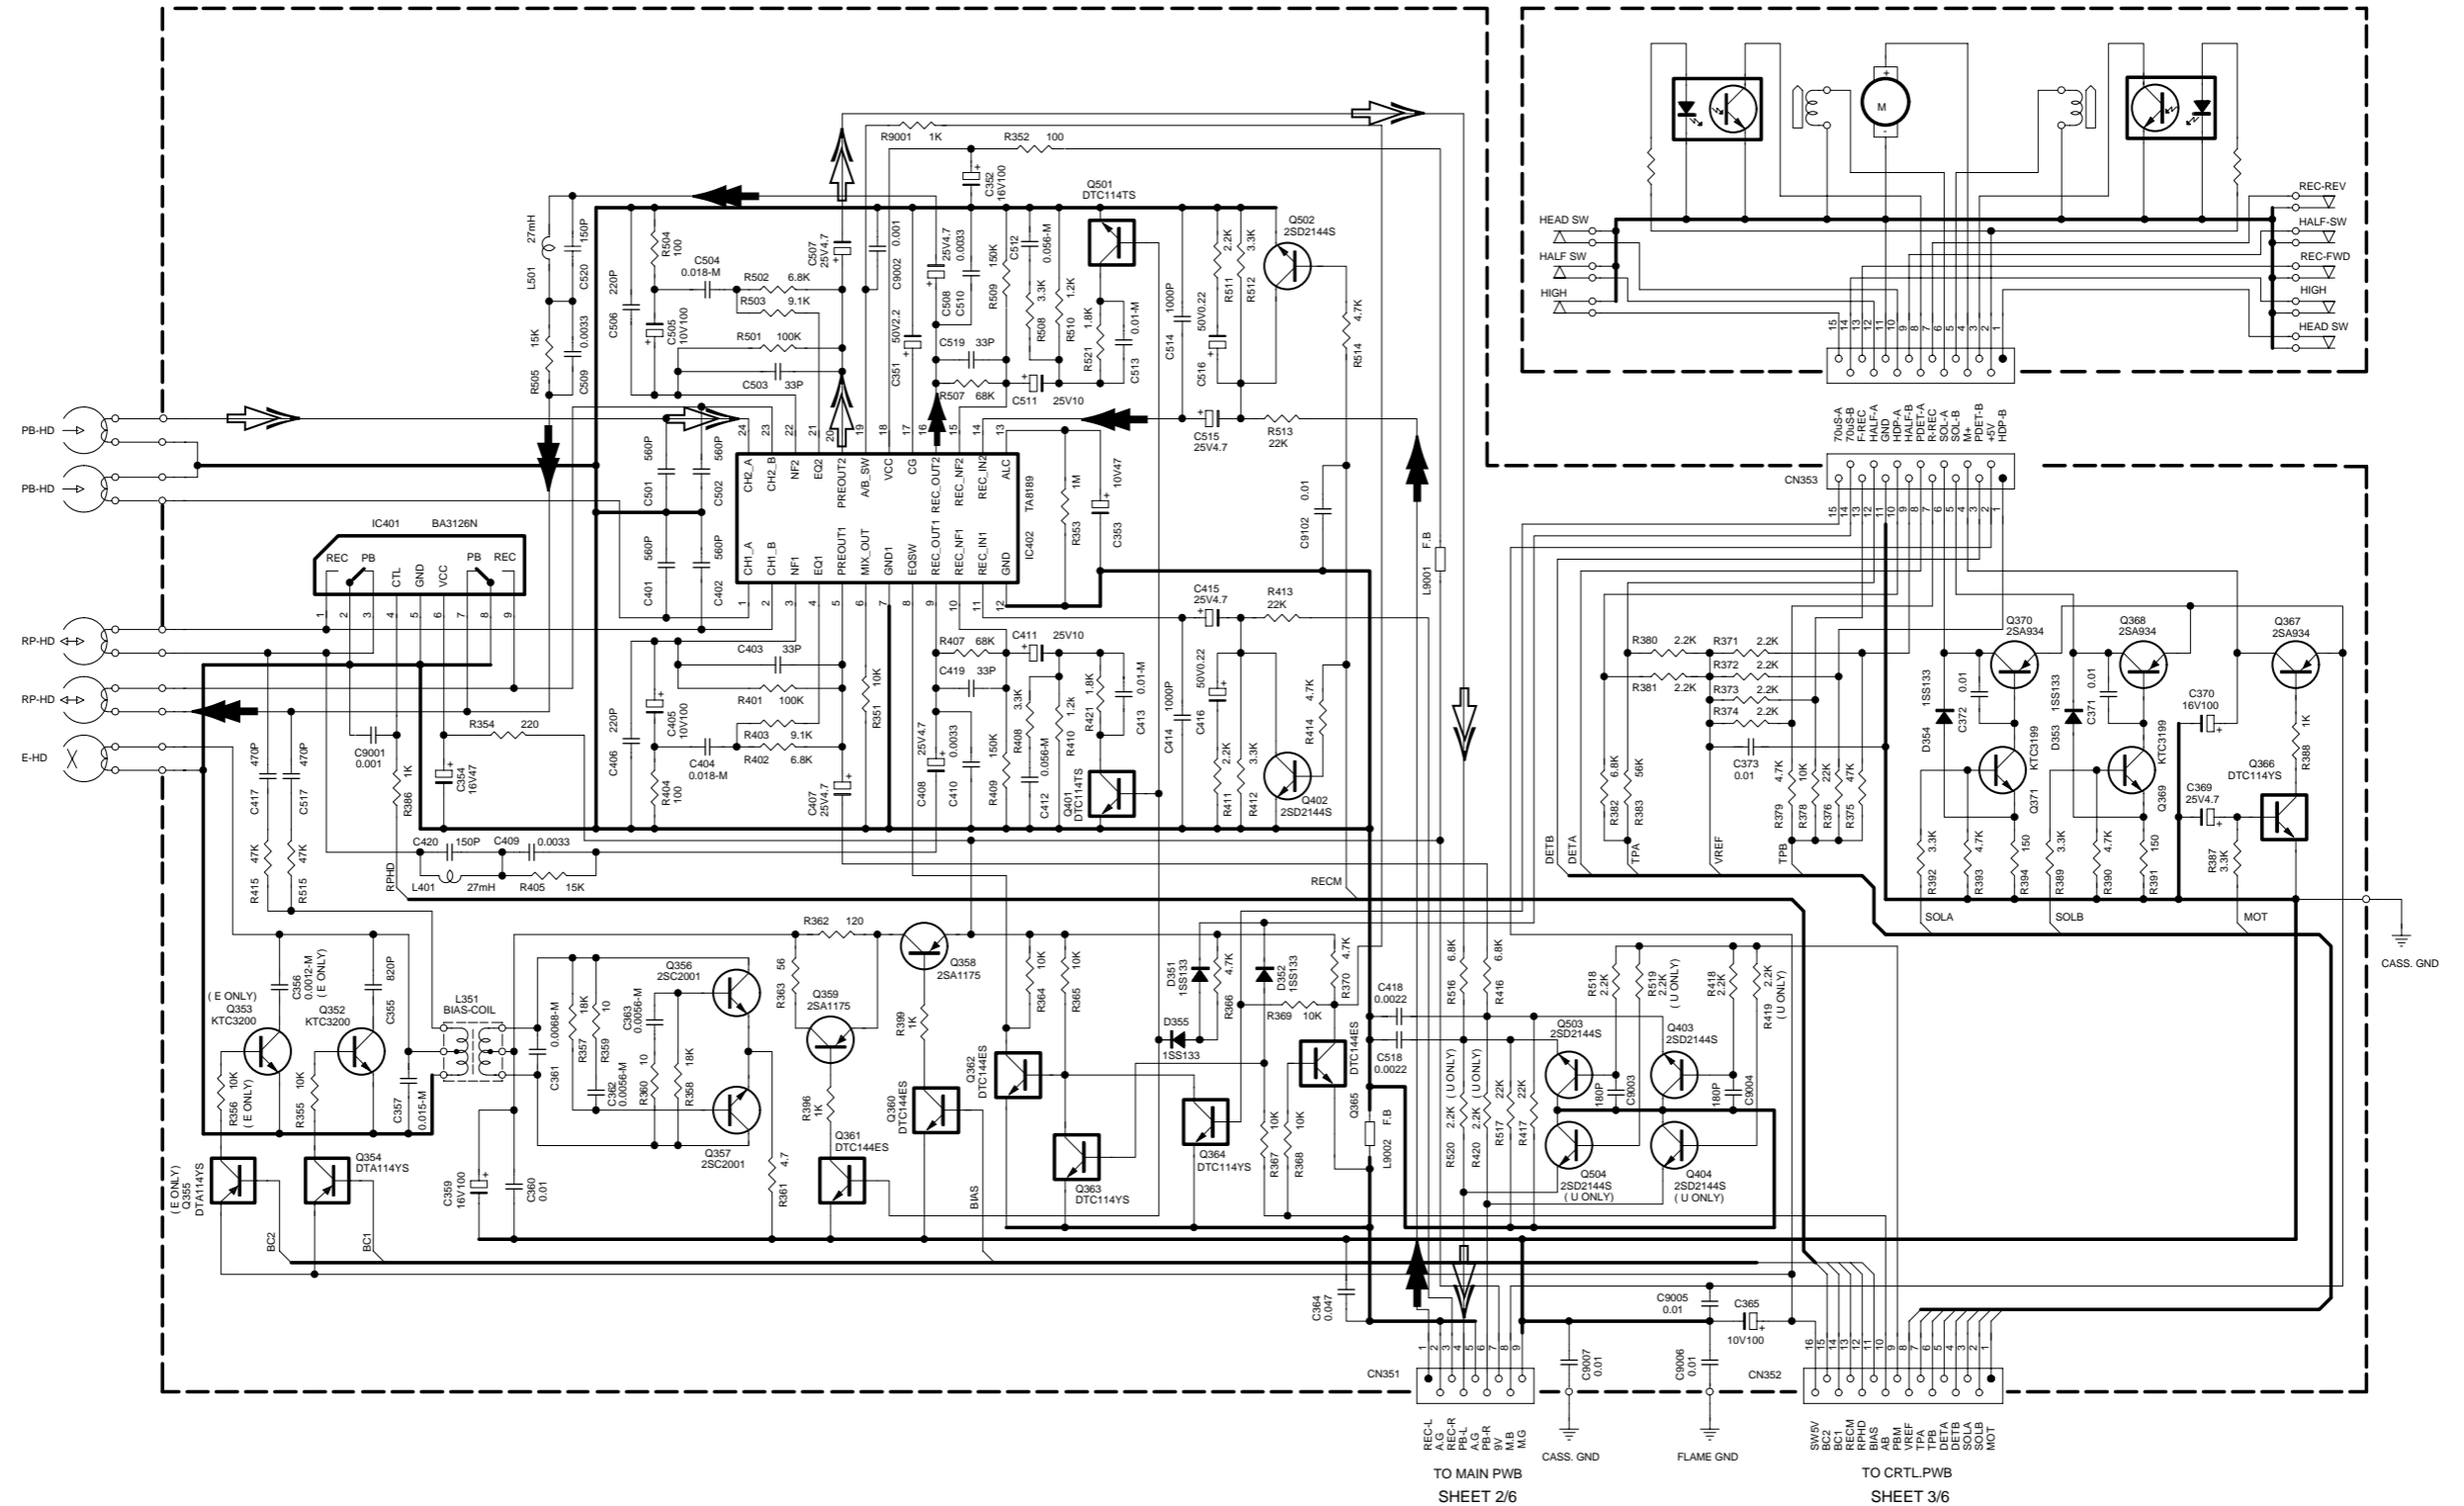

\*\* : C356,R356,Q353,Q355 FOR E VERSION ONLY.  
 \*\* : R419 & R519 ,R420 & R520 ,Q404 & Q504 FOR U VERSION ONLY.

⇒ TAPE P.B. signal  
 → RECORDING signal

CD Servo & CD Mechanism control section


5

4

3

2

1

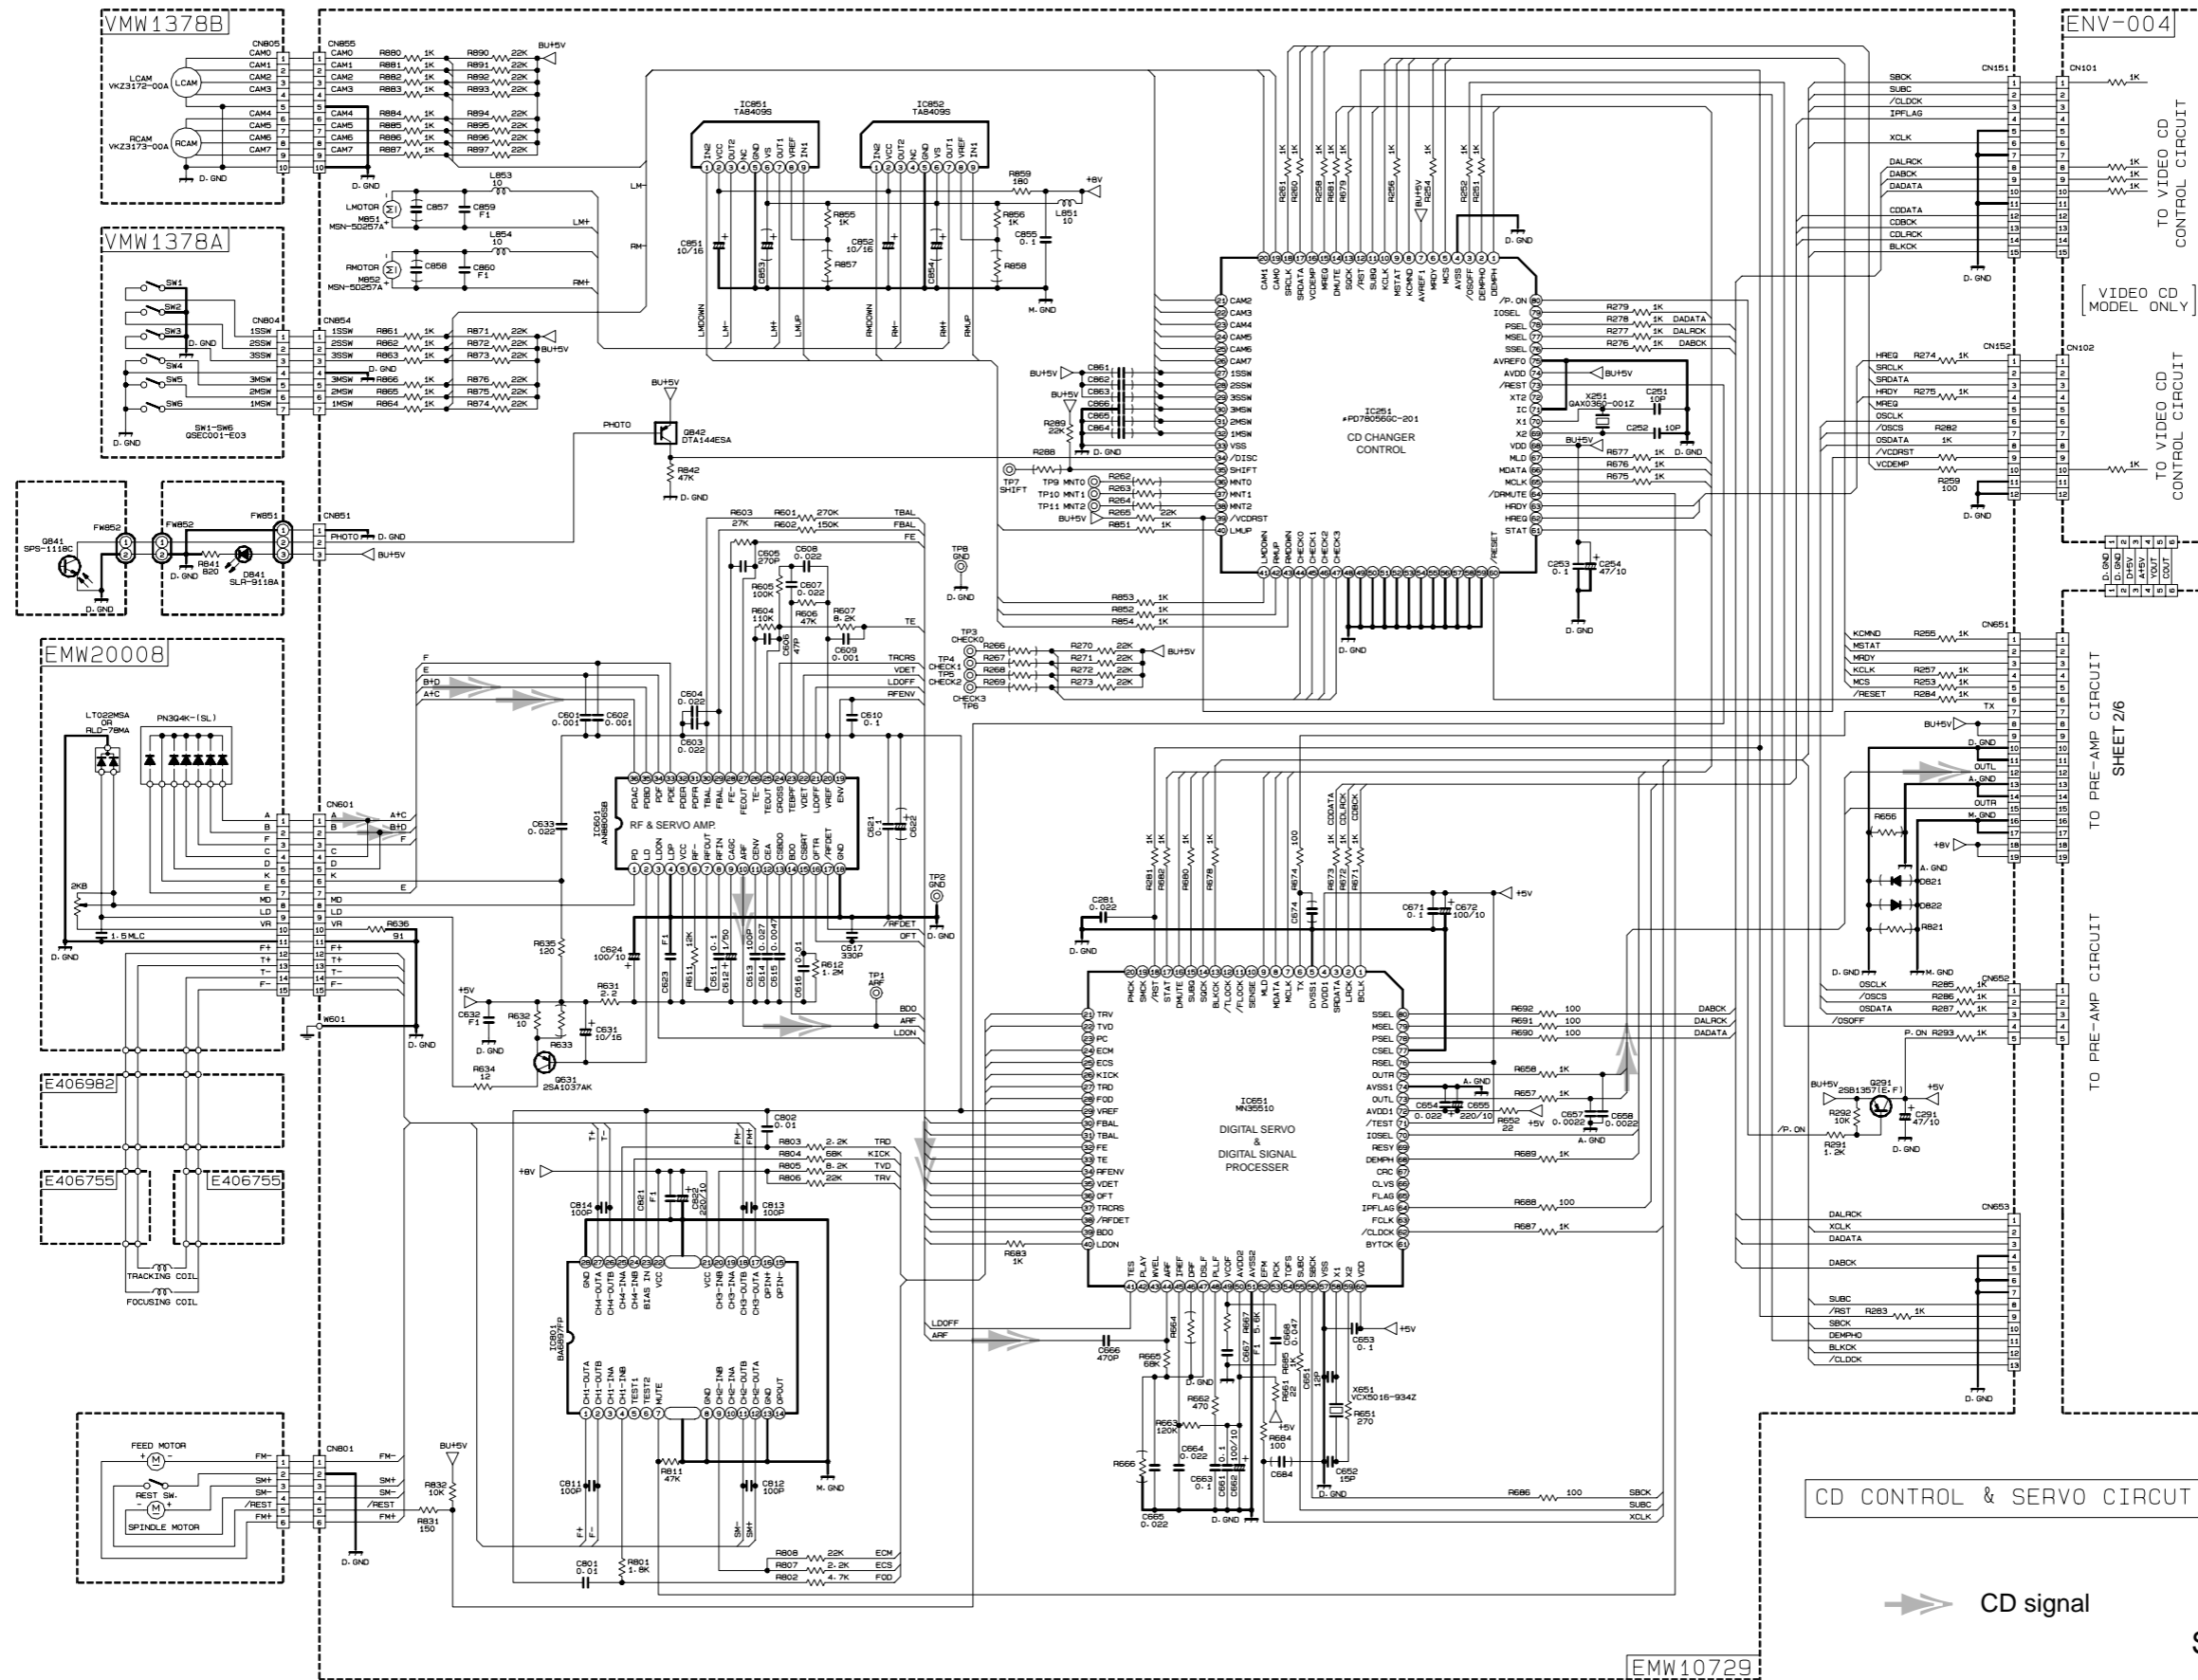

CD CONTROL & SERVO CIRCUIT


CD signal

EMW10729

■ Mic & headphone section (Ver. U/US/UT/UP/UY/UZ)

■ Headphone section (Only Ver. A)

5  
4  
3  
2  
1

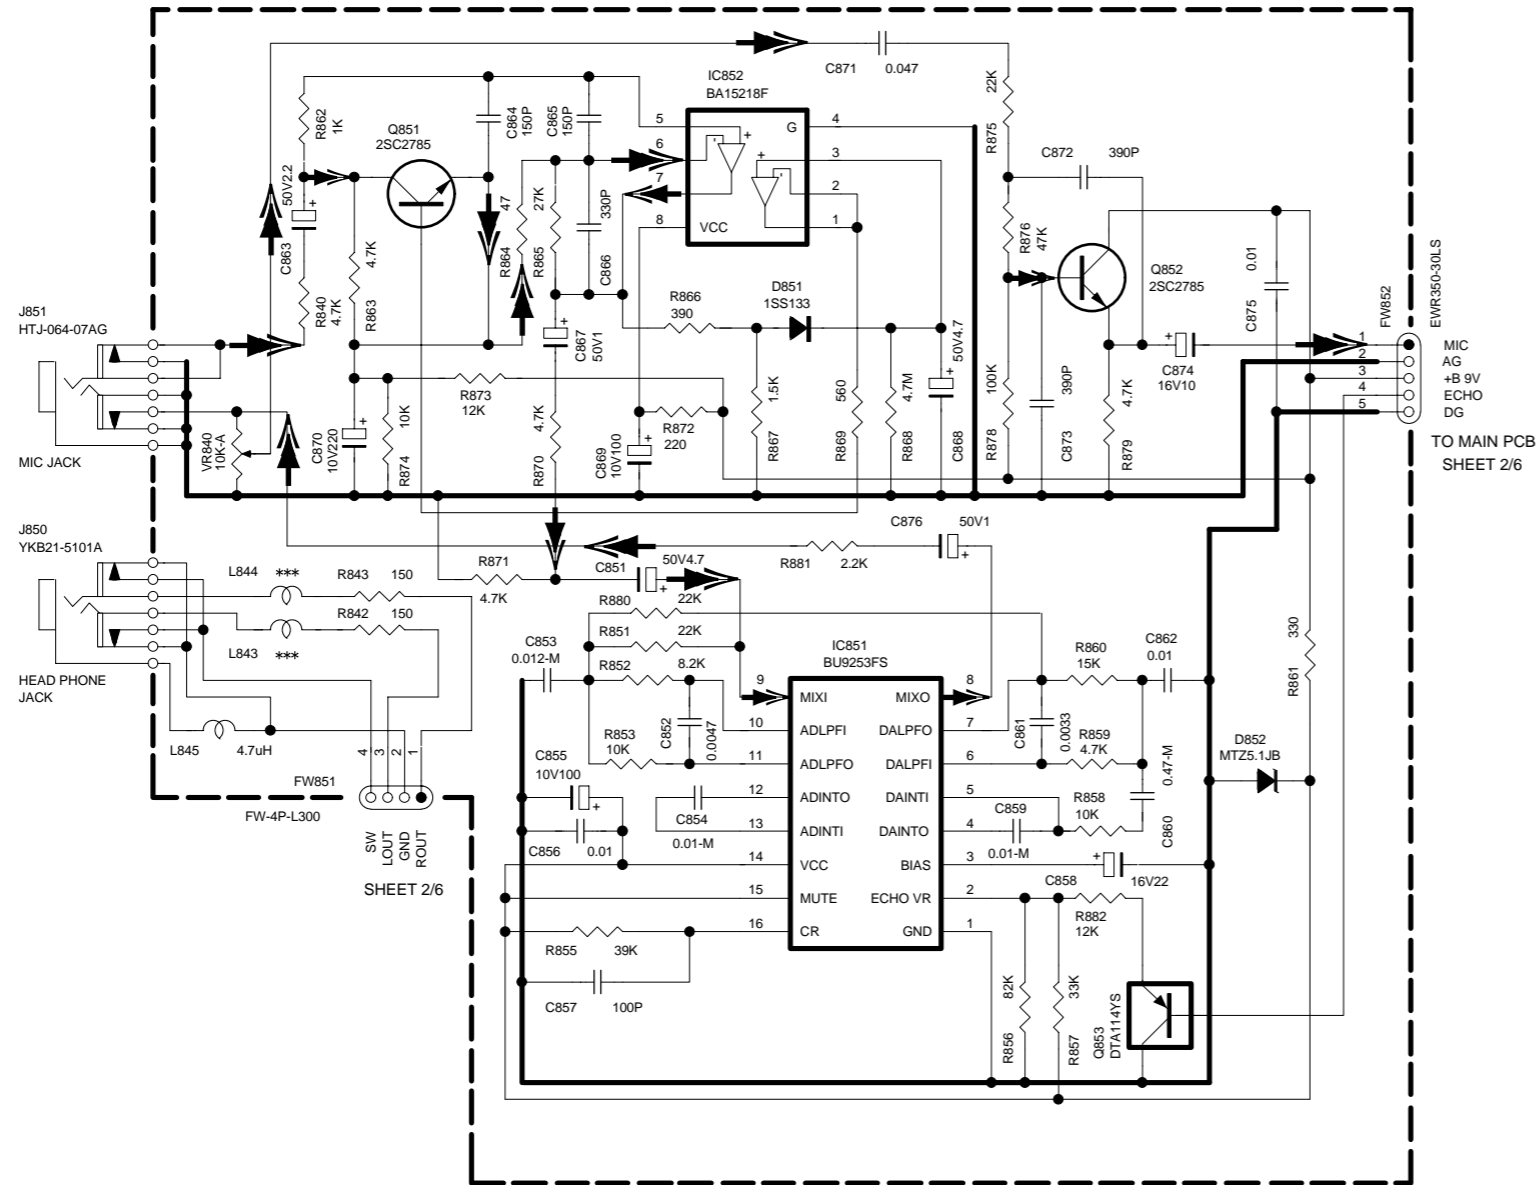

➡ MIC signal

