


* 请参见零部件表


维修底板的拆卸

1. 切断处于维修底板上 ❶ 位置的六个部分，将维修底板从主体壳上取下来。

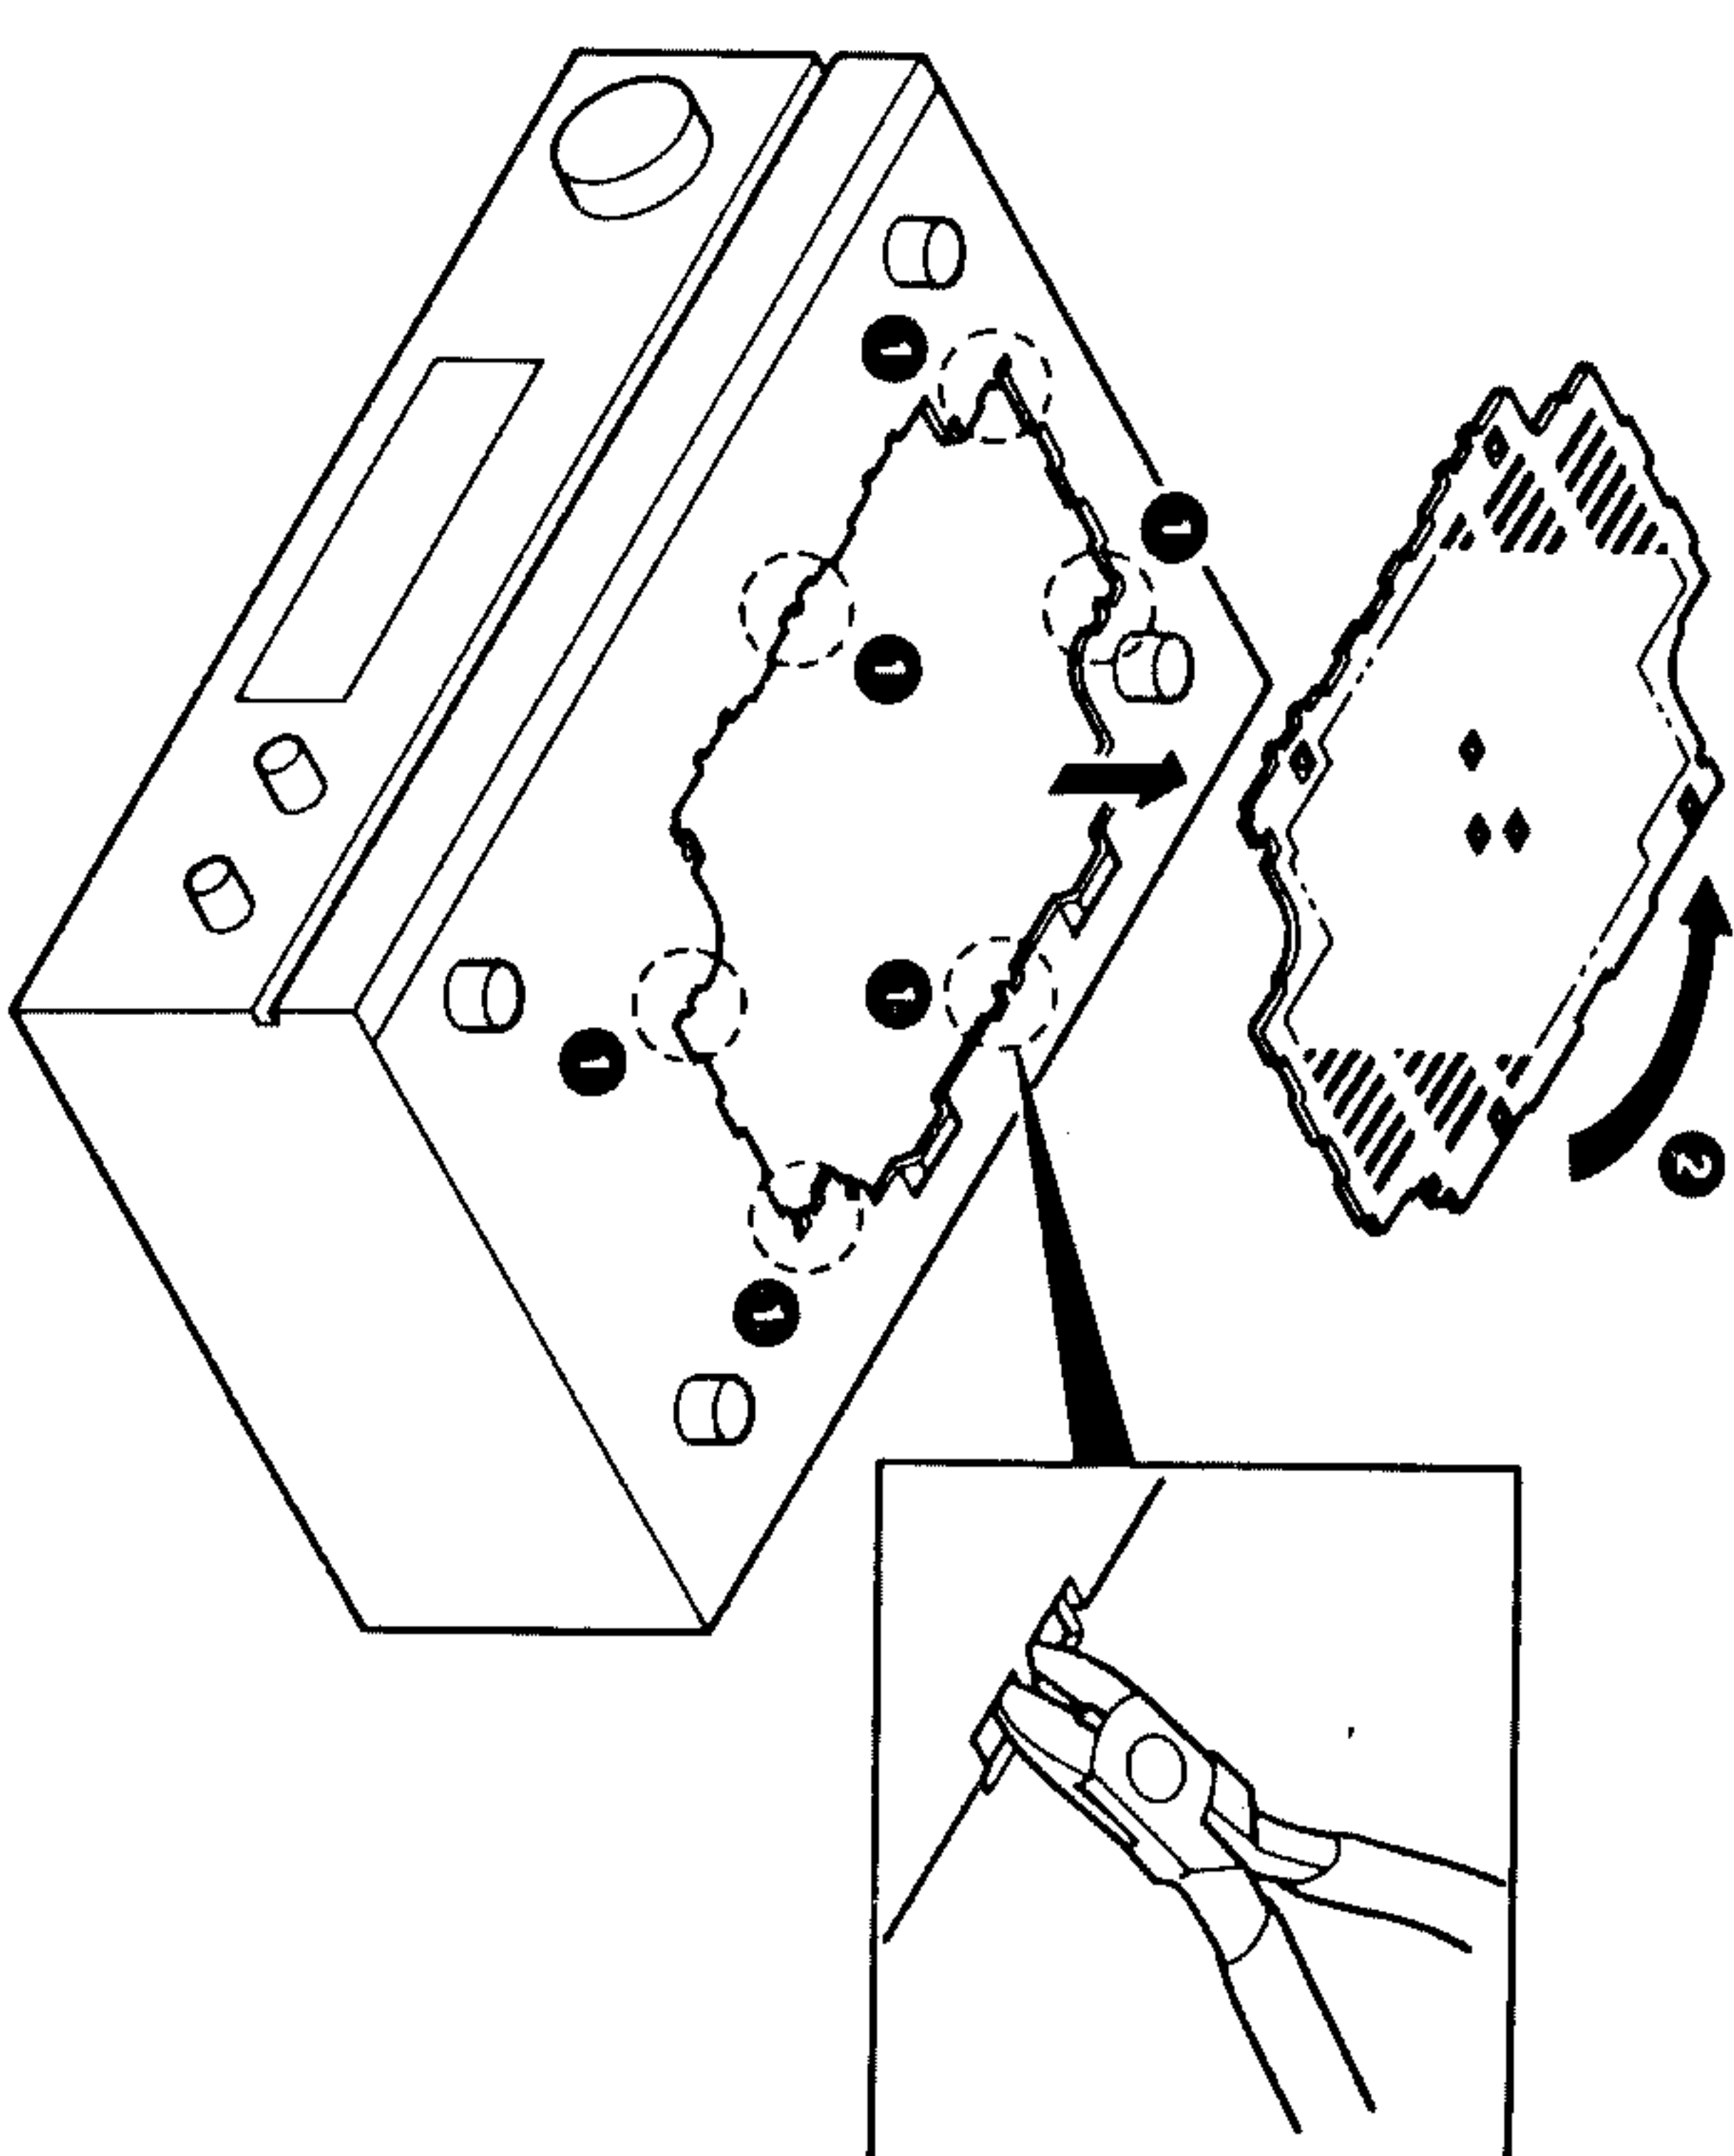

维修完之后

2. 将机械组件按照箭头 ❷ 所示方向旋转 180°，将其翻转过来。
3. 将维修底板上的两个卡爪 ❸ 插入主机的凸出槽中
4. 用两个螺钉 (M3×6) ❹ 将维修底盘在主体盘上固定好。


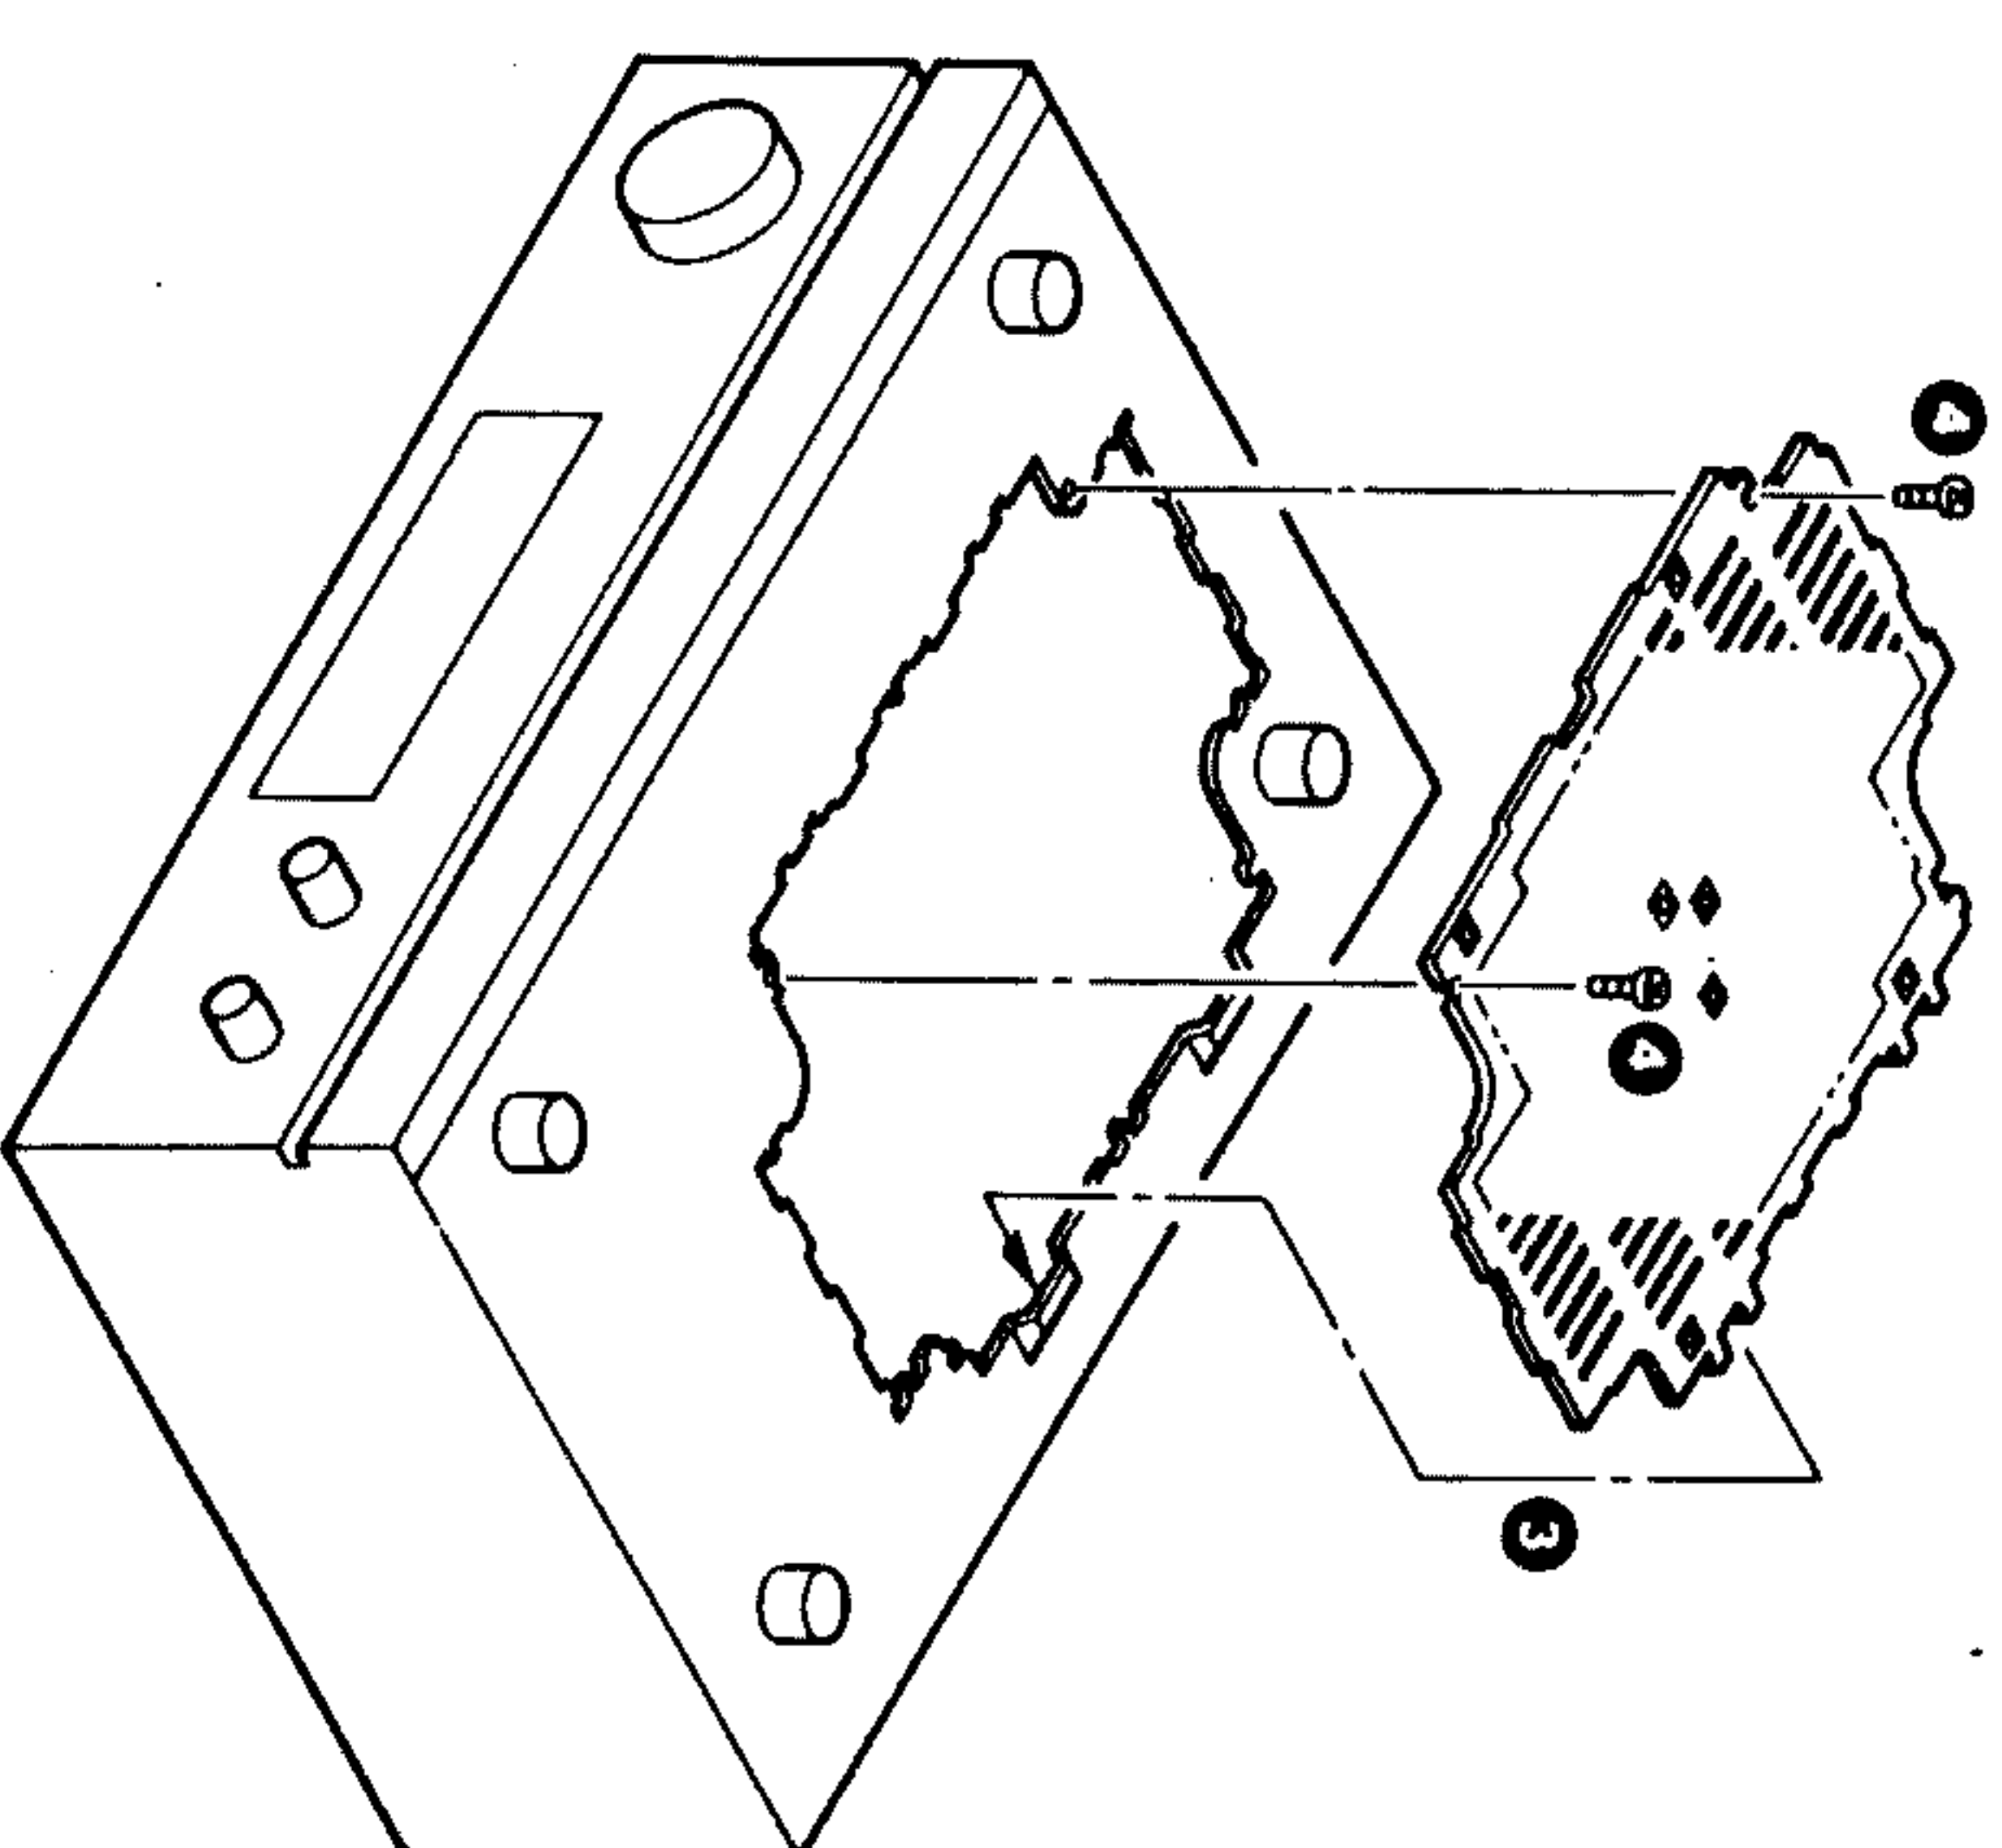


键的功能


No.	元件	输入设定	输出设定	放大器设定	校正点	校正至	图
设定控制部分和开关至: 电源, 开 音箱: B							
1	空载电流	-	通过 CP1 (L) CP2 (R) 连接一个DC电压计	音量: 0	VR1 (L) VR2 (R)	9 mV	(a)

本遥控装置不能用来控制以下所列 CD 唱机的打动搜索功能, 同时也不能作用于数字式功能。(从 1 至 0 以及标有 +10 的按键)

* DP-M97, DP-57, DP-47

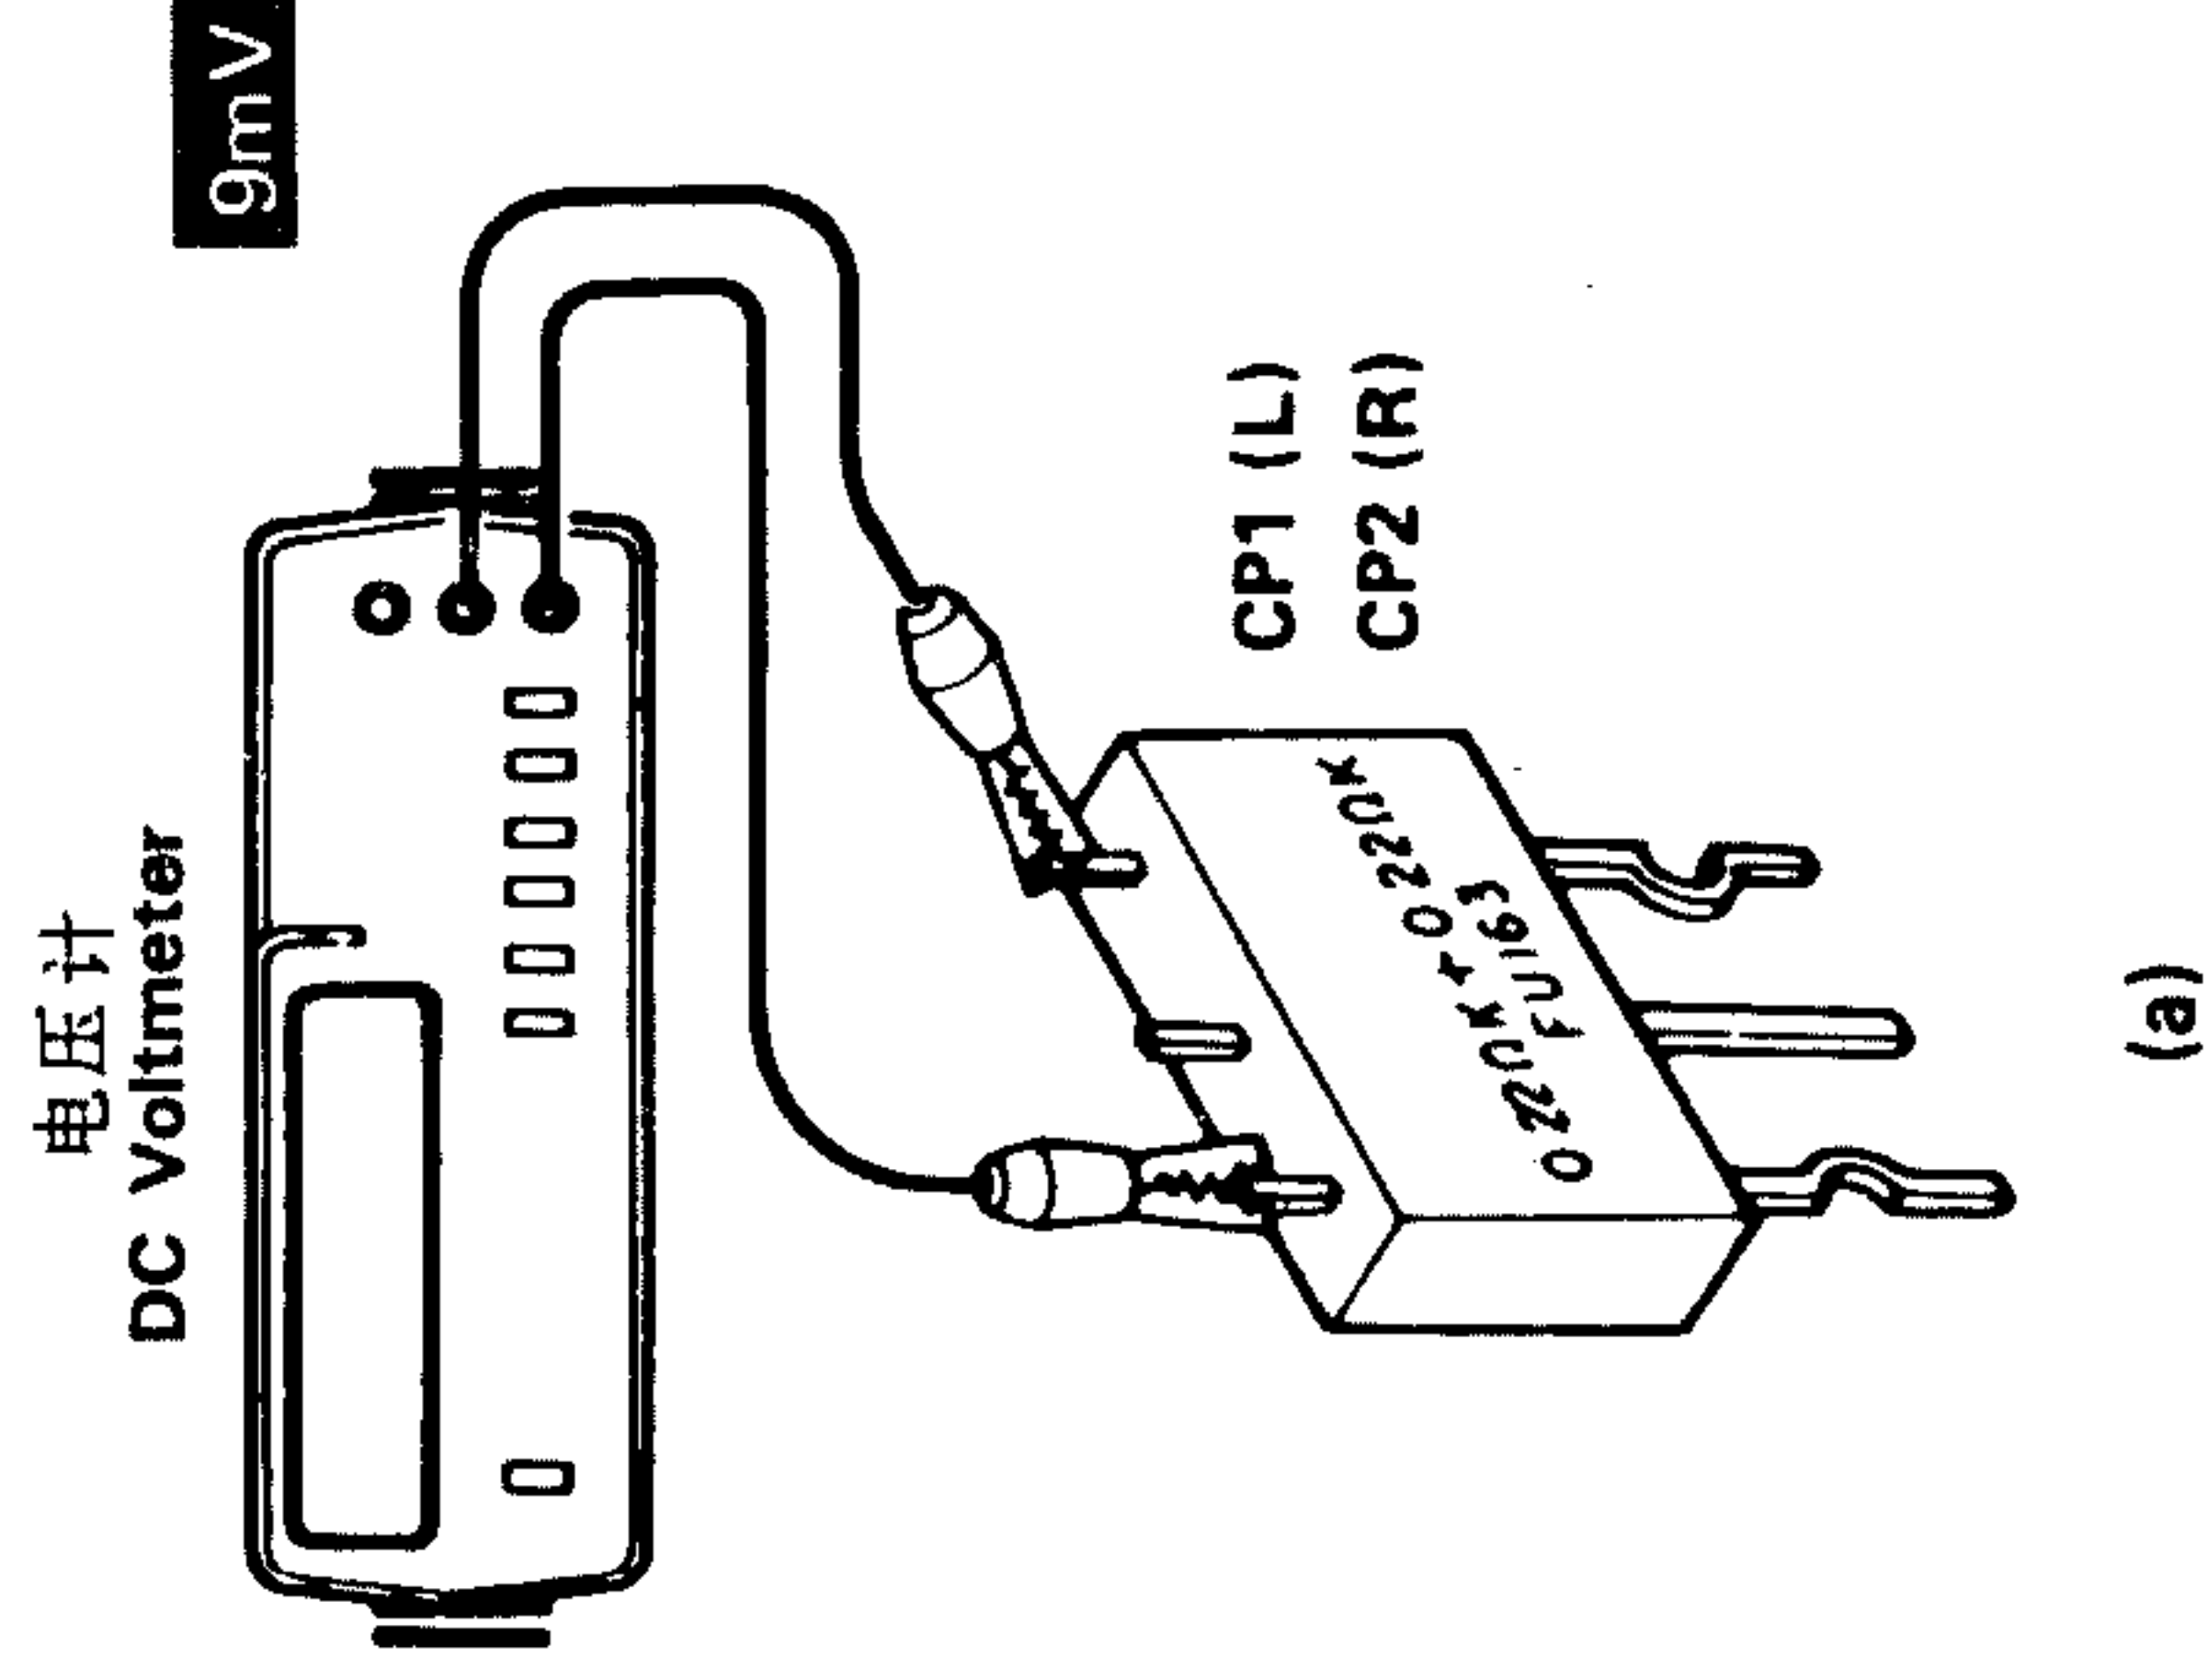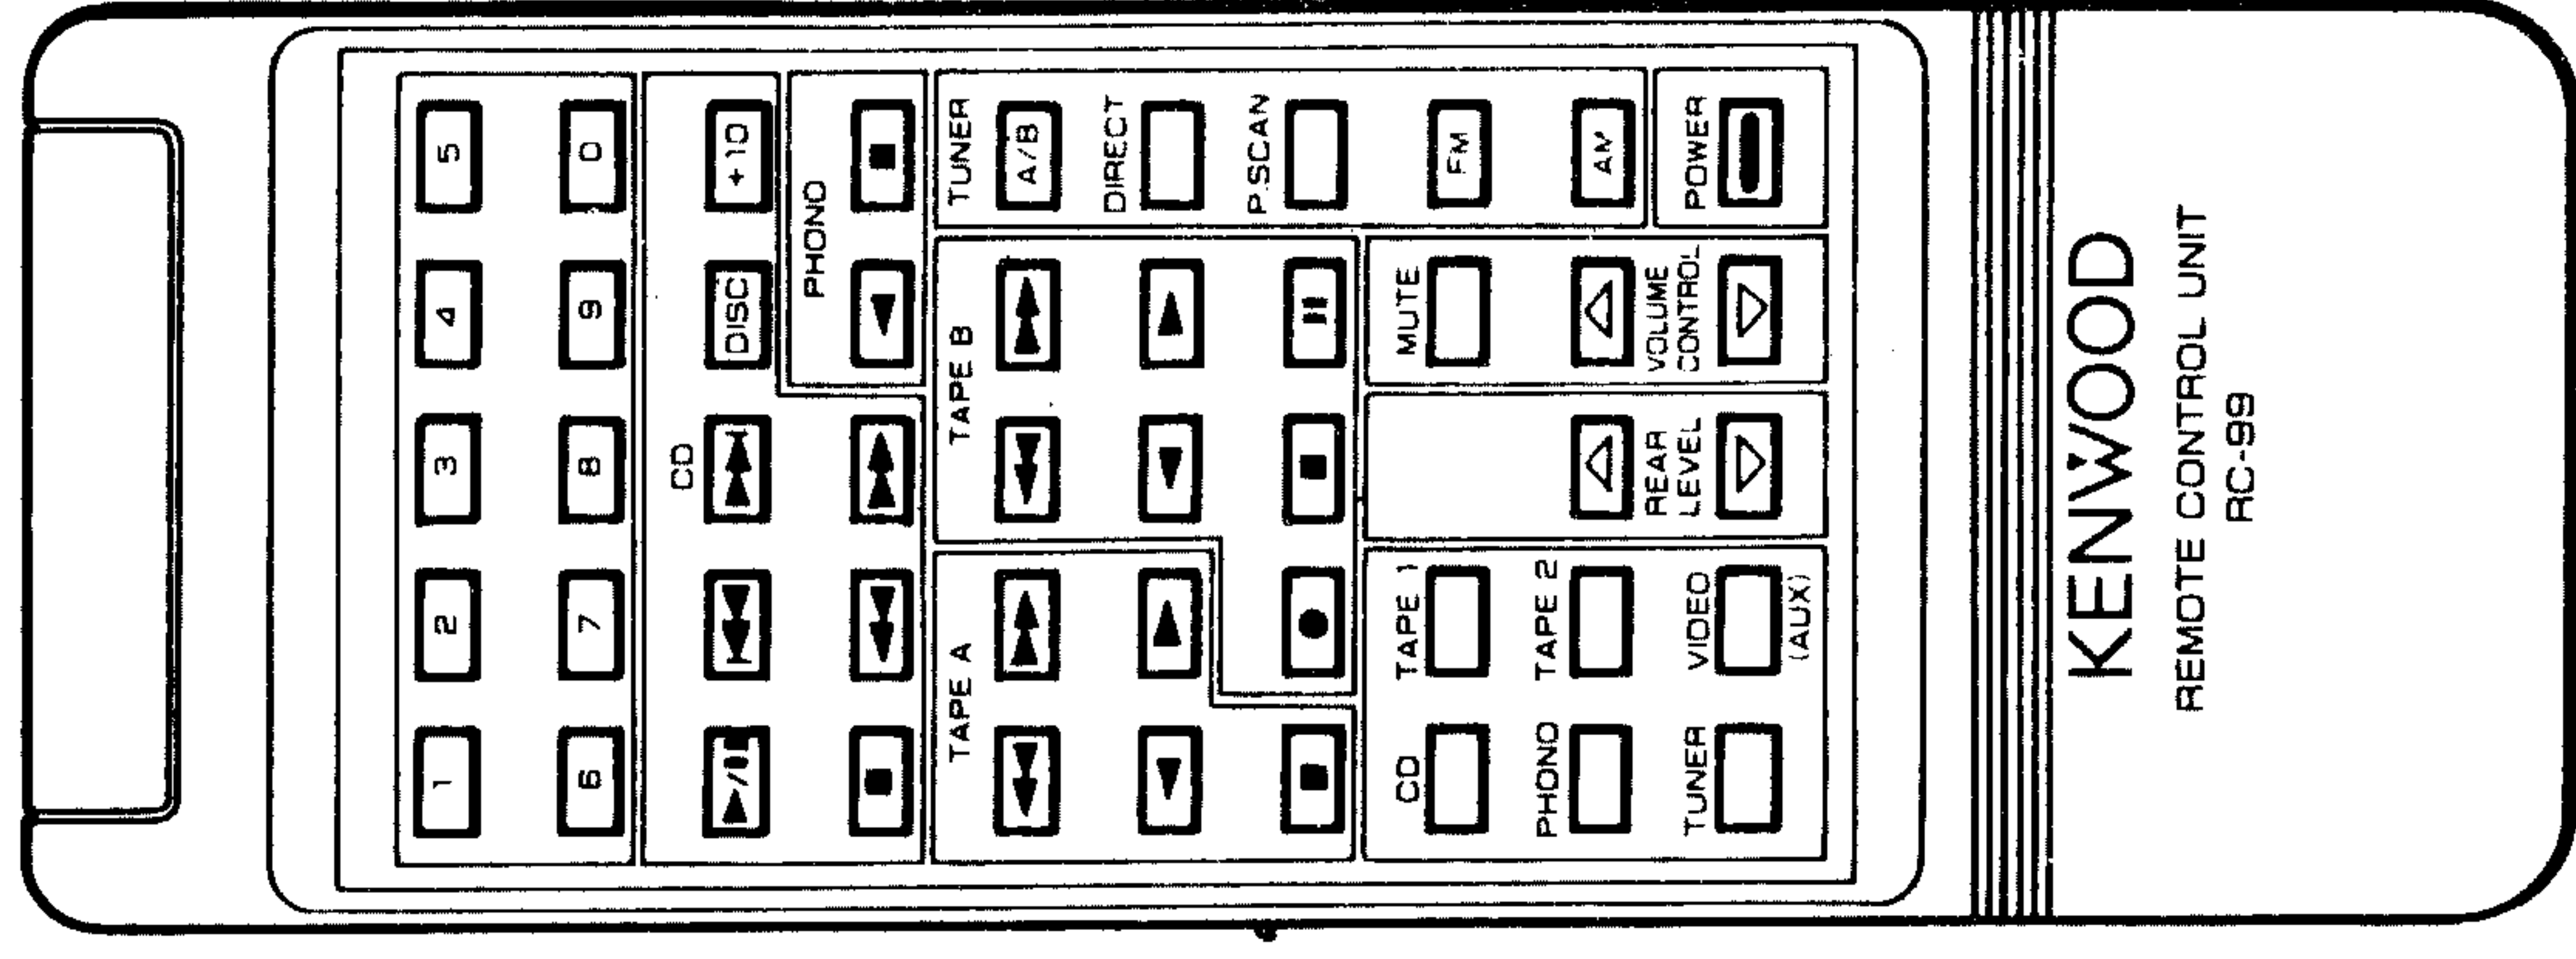







接线图



A B C D E F G H

印刷电路板 (元件一侧图)

AUDIO UNIT

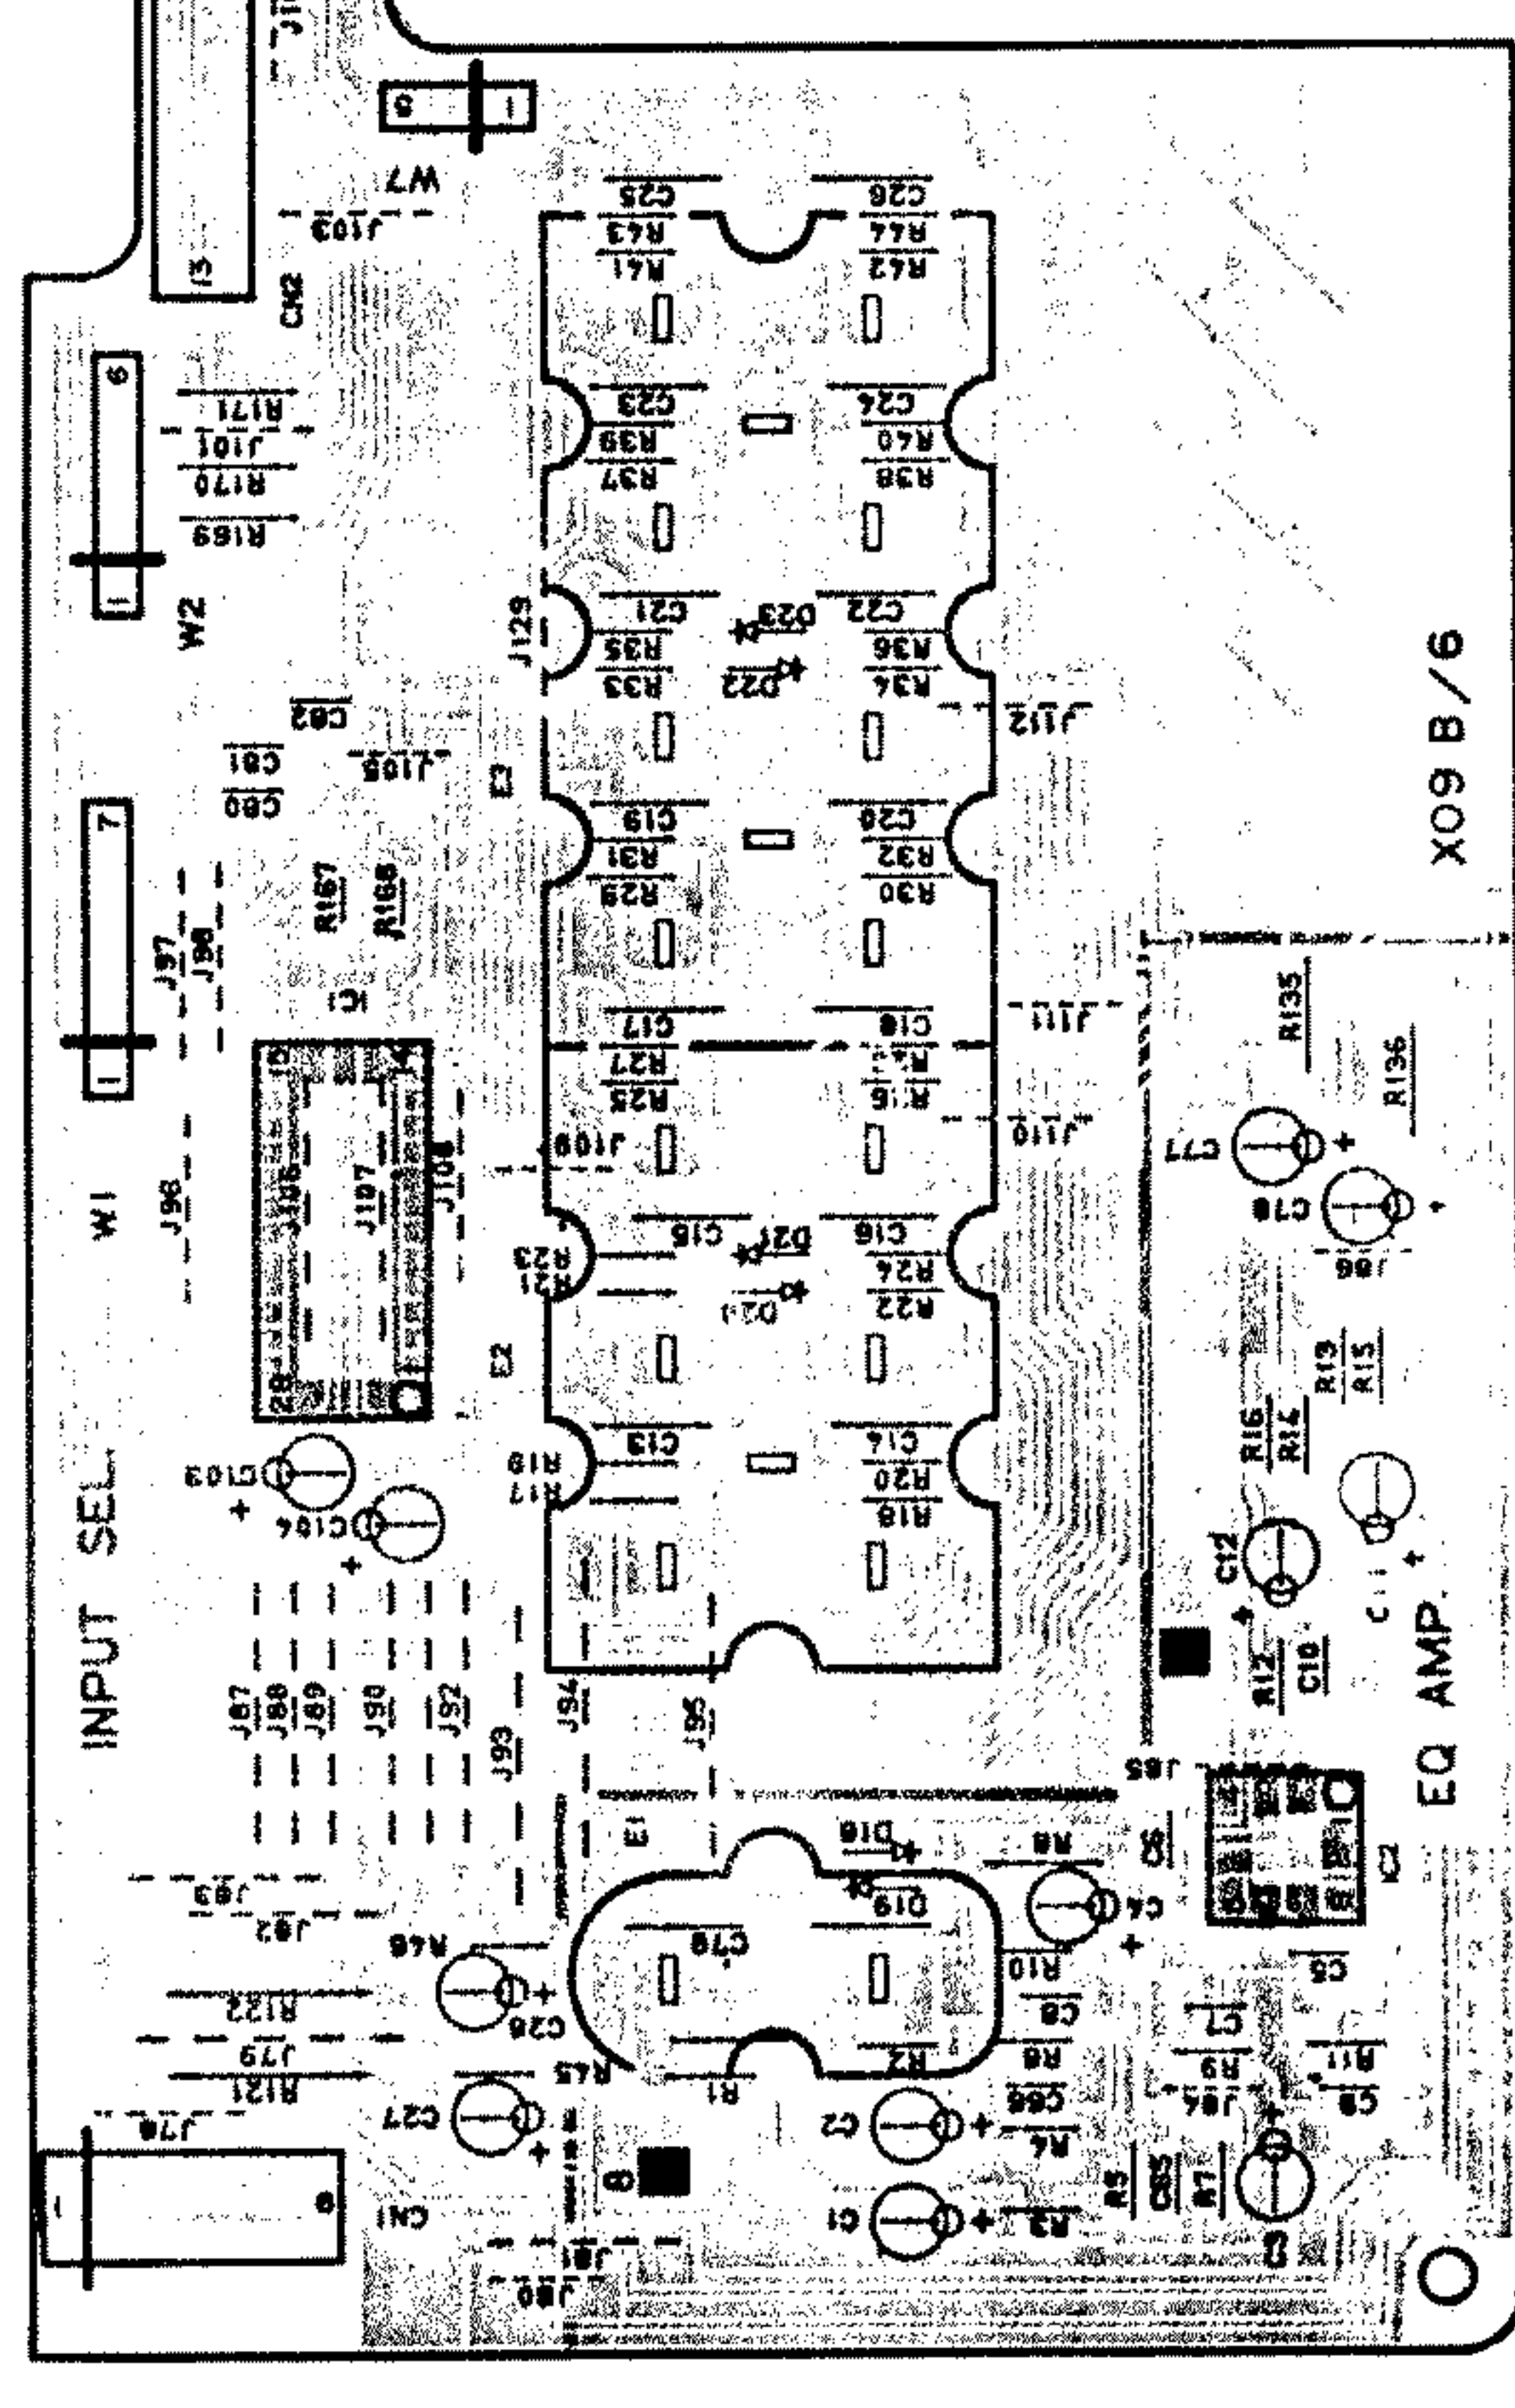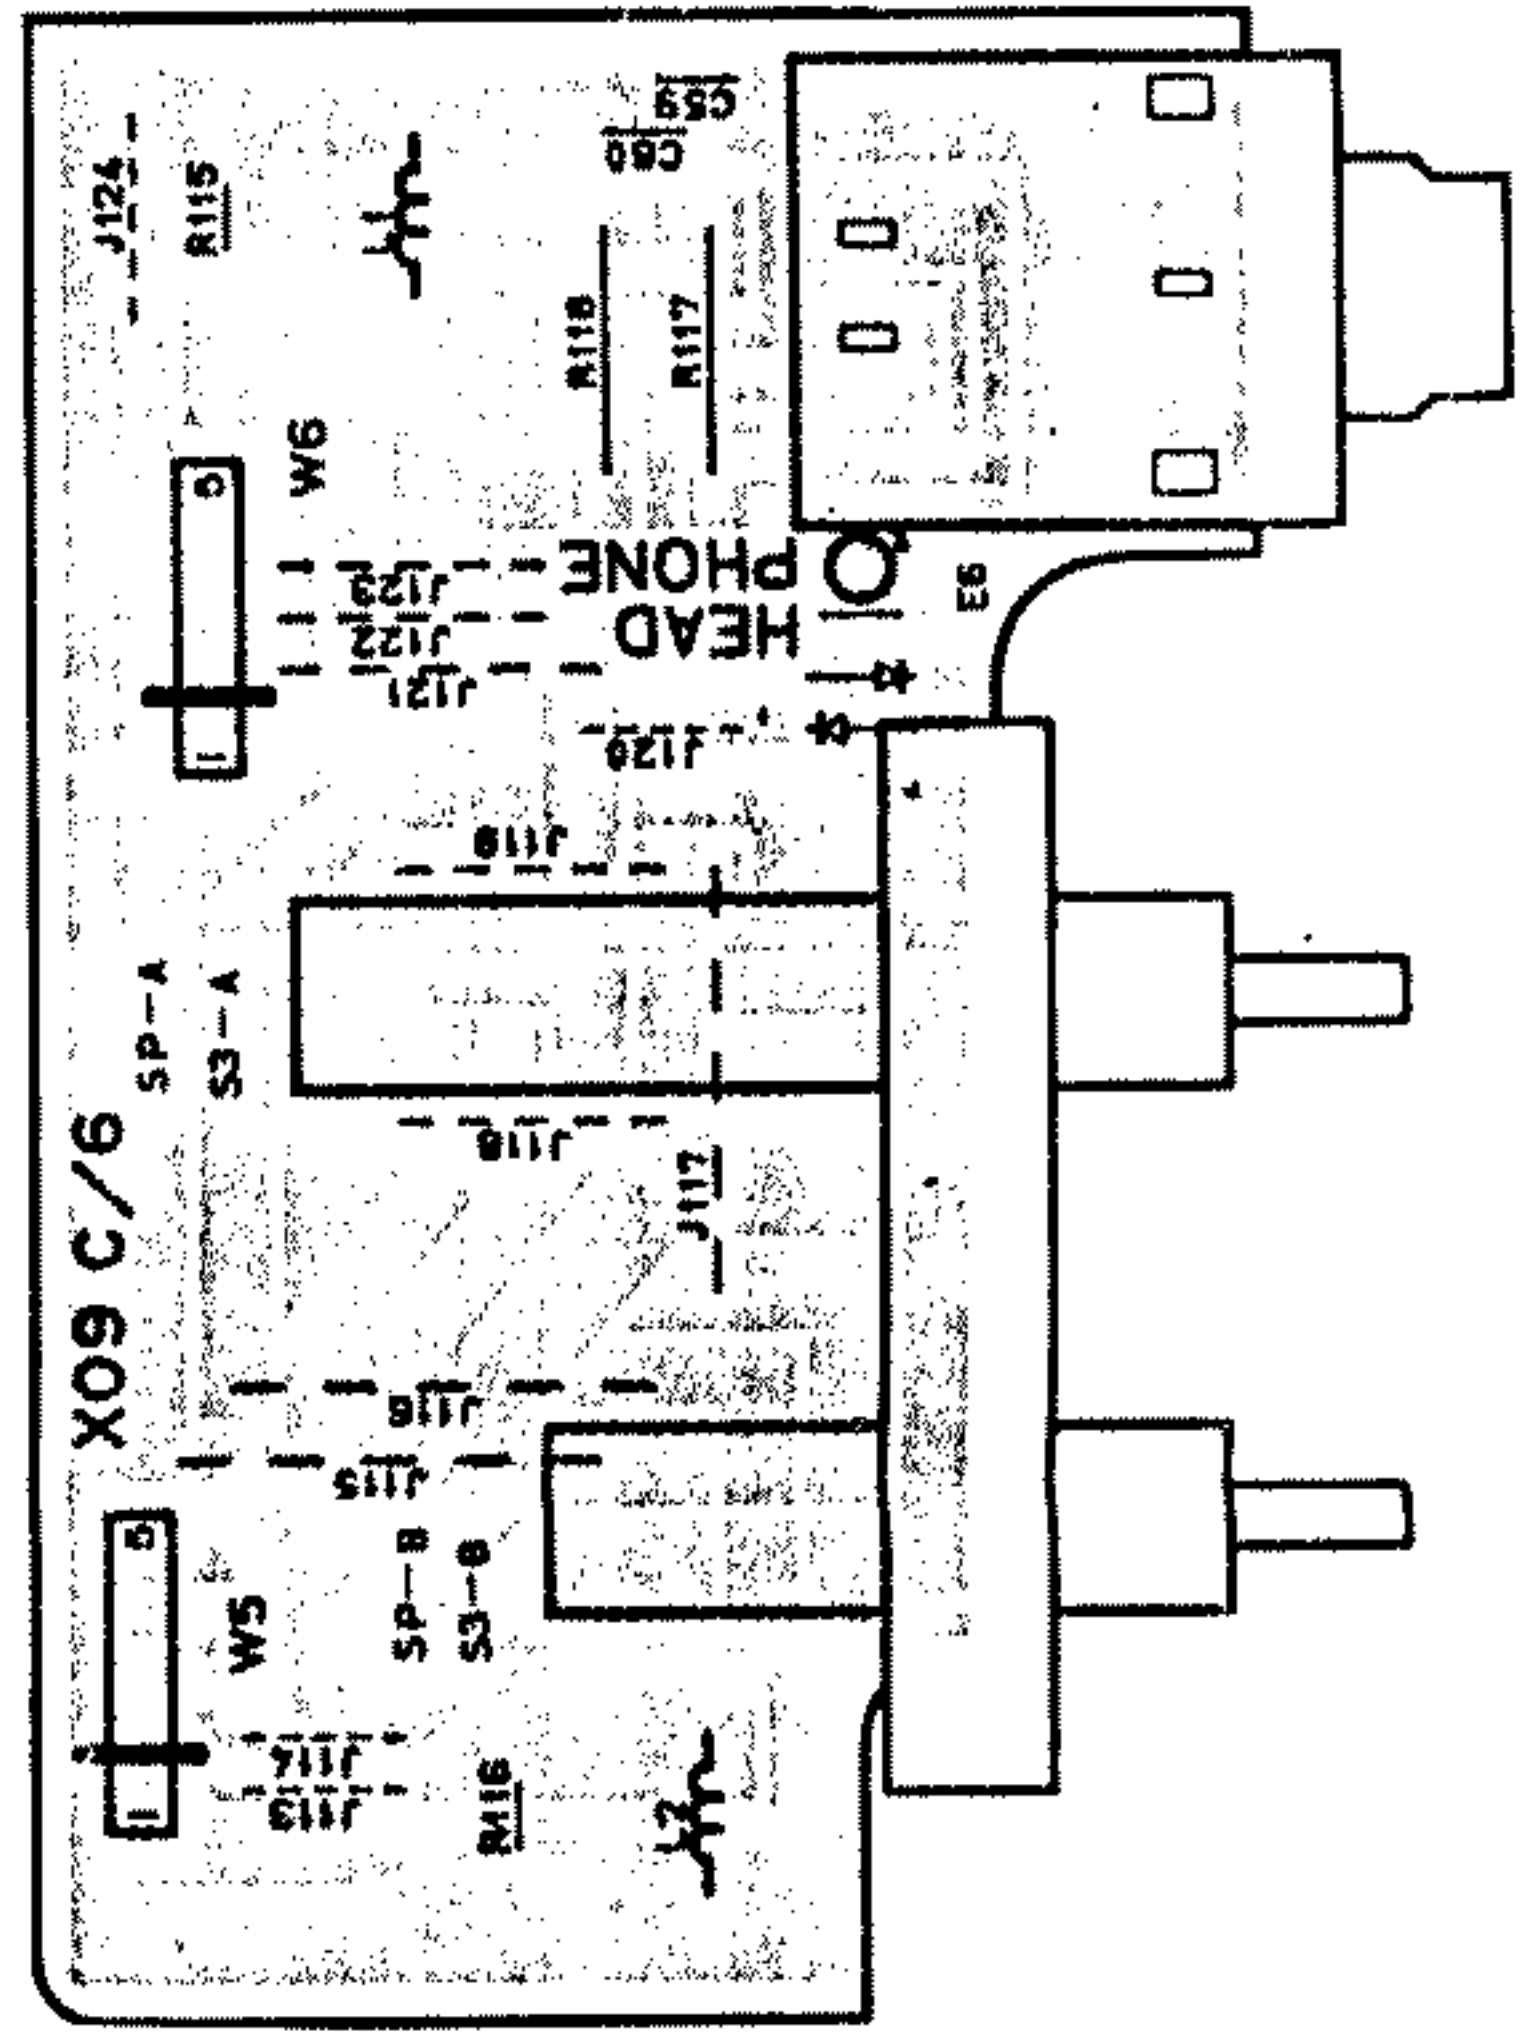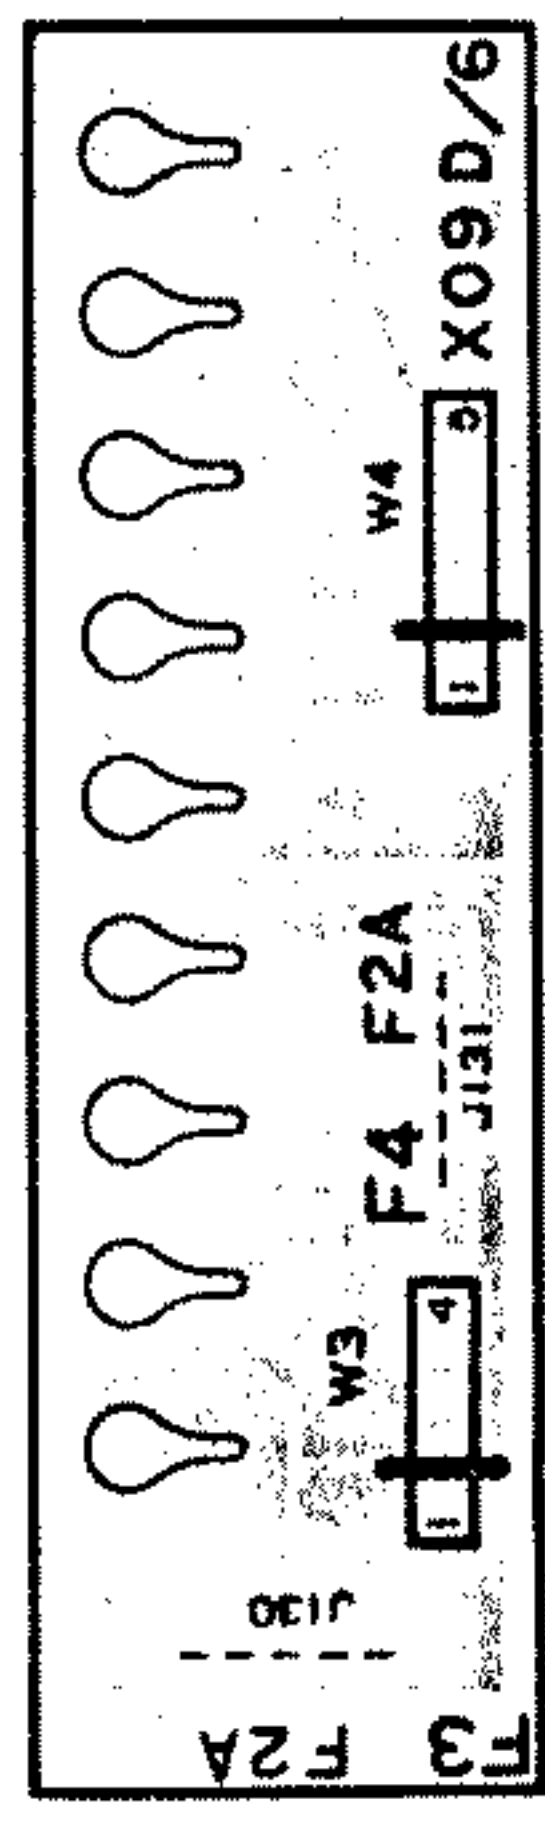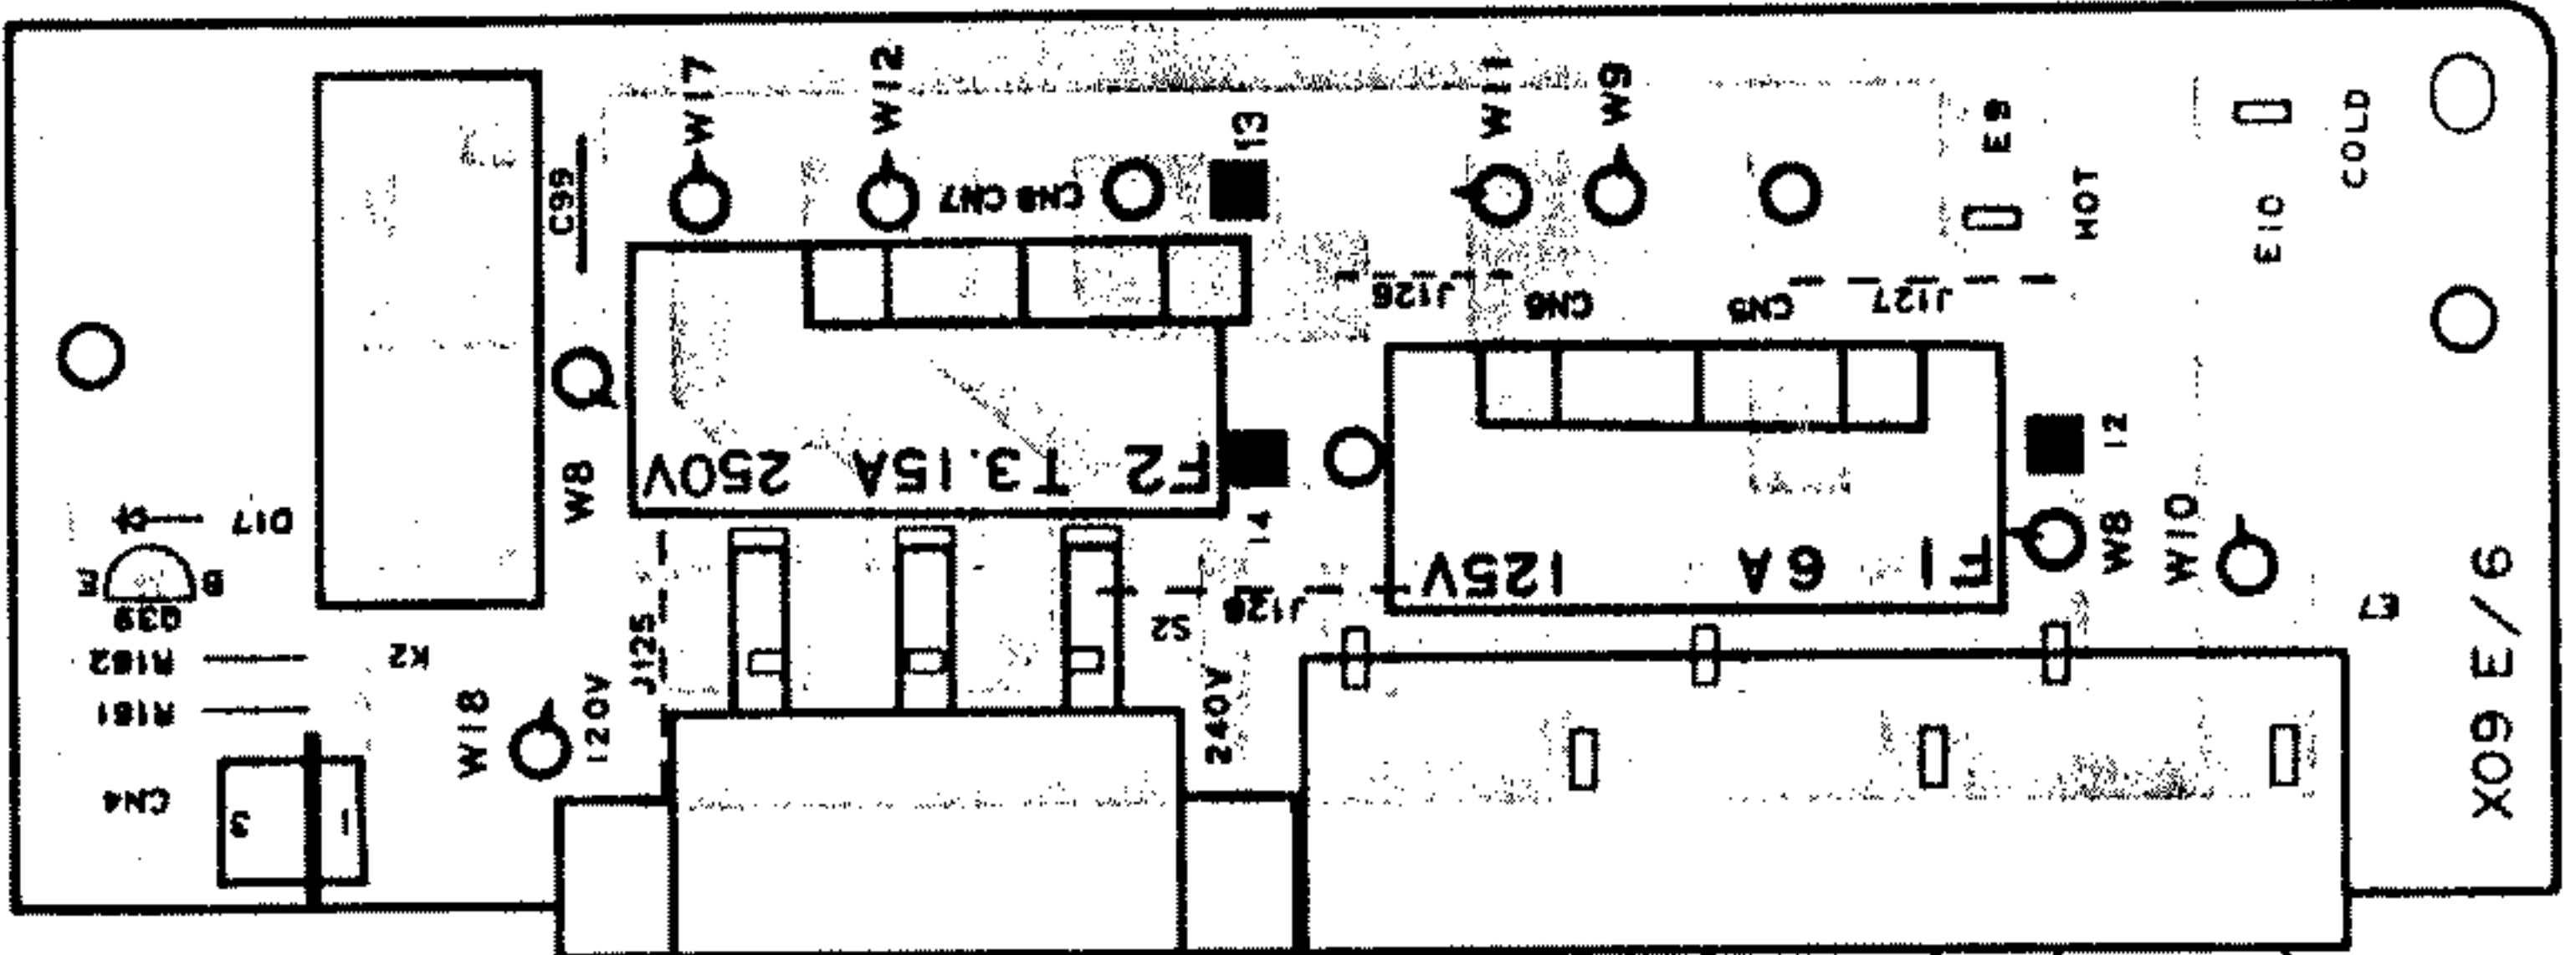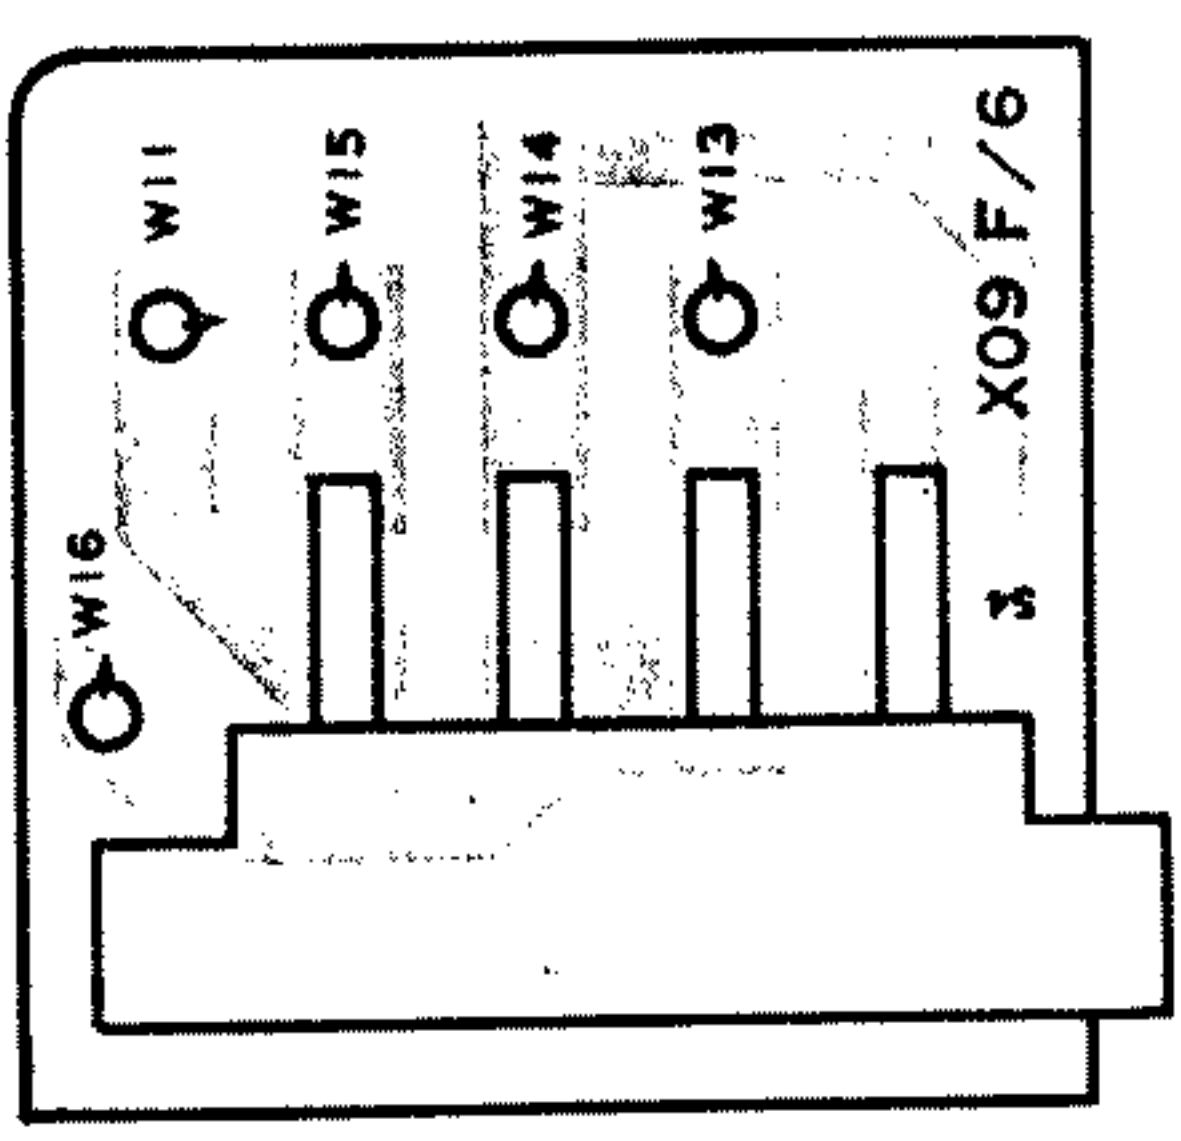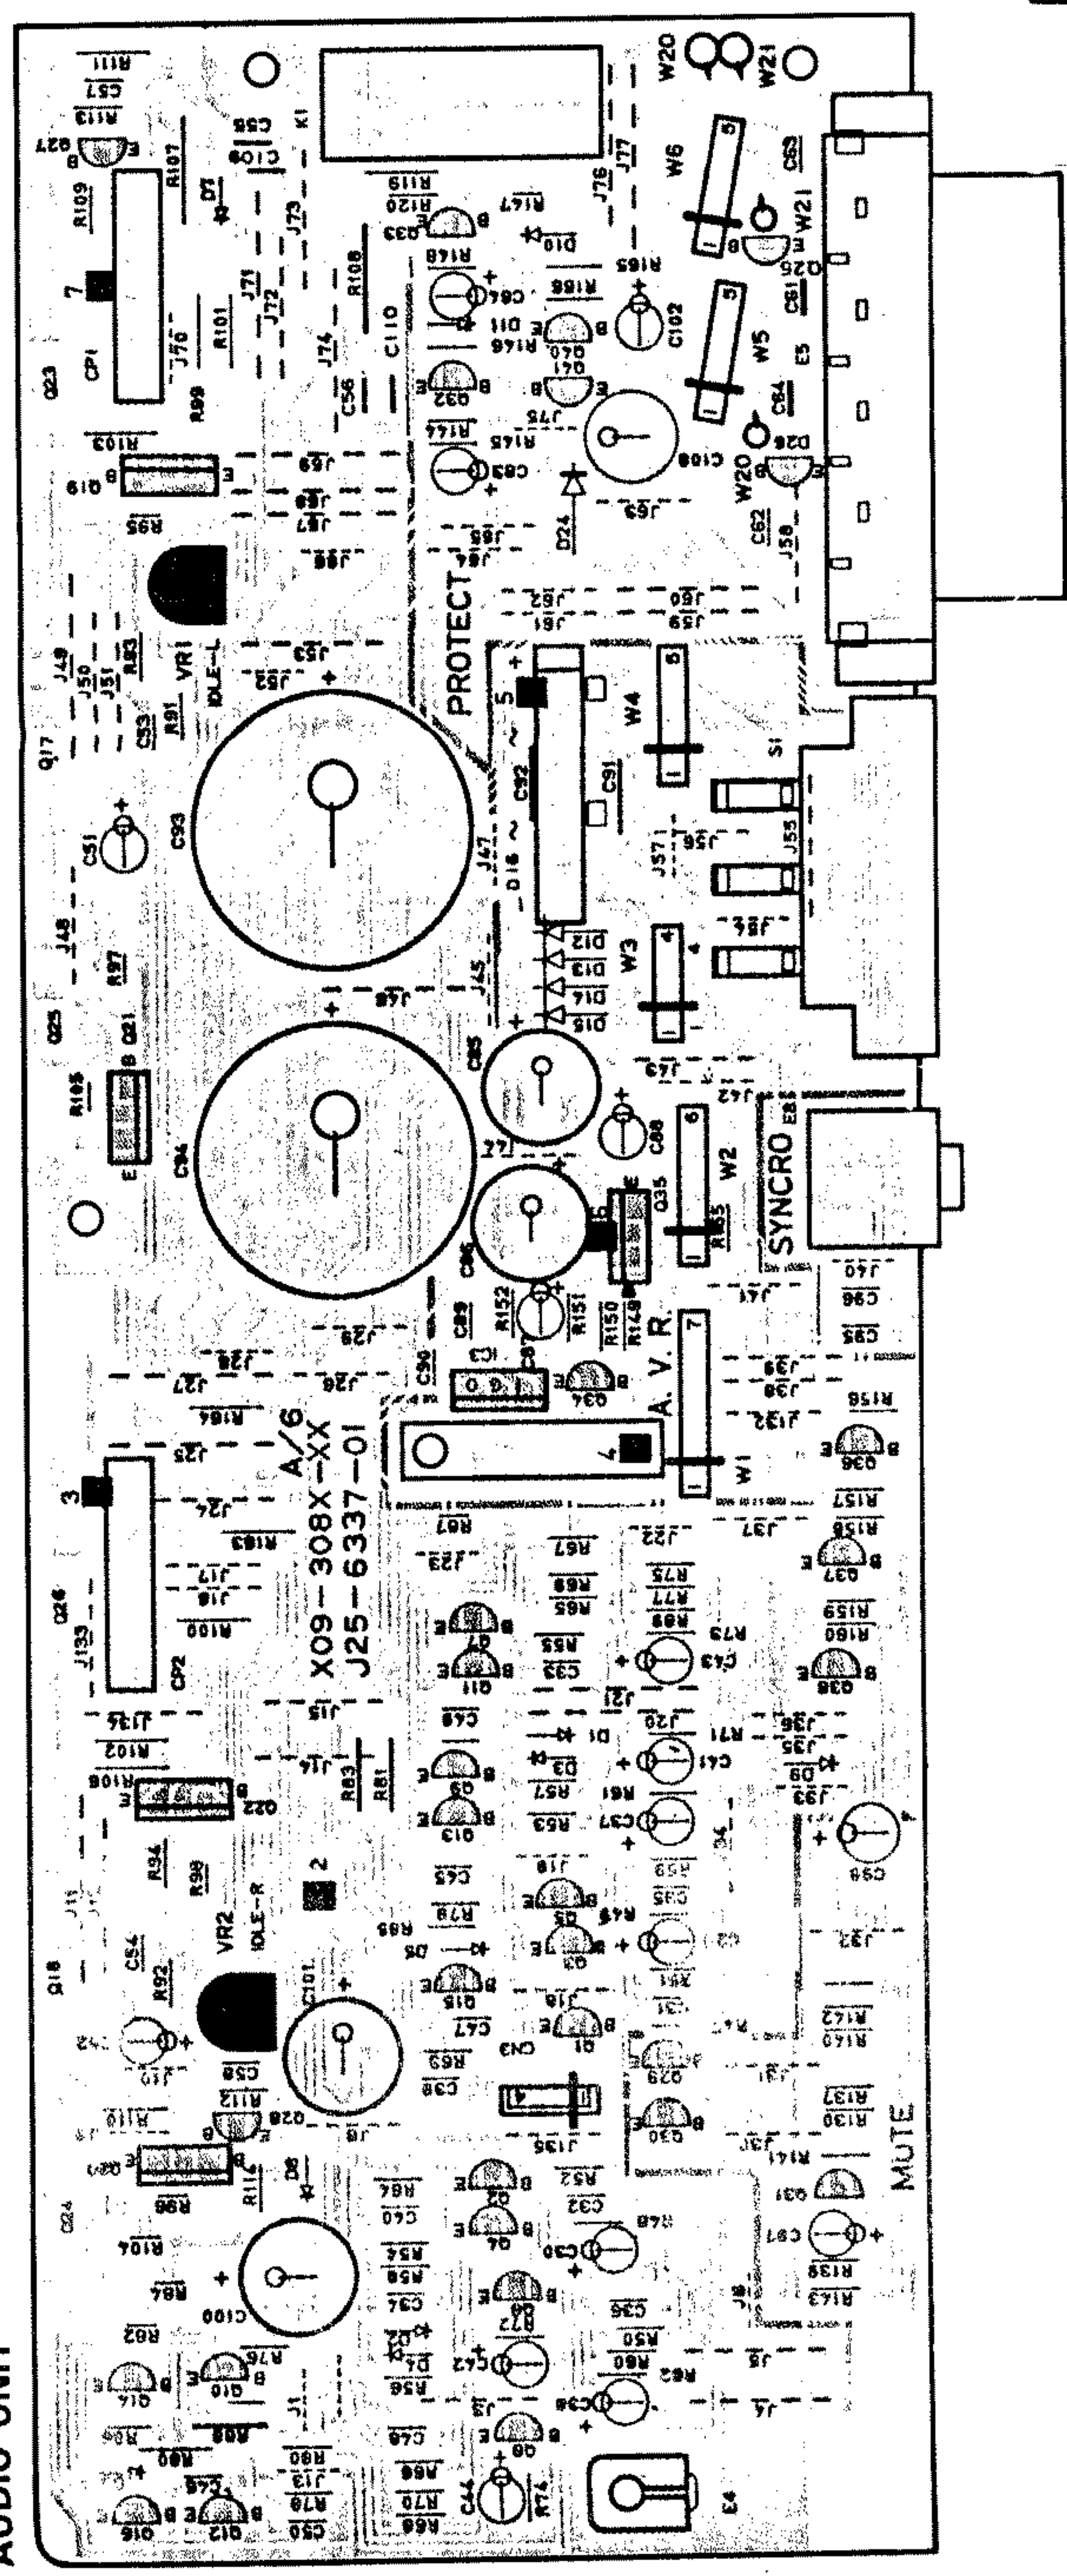


X09-308X-XX

Ref. No.	Address
IC Q	
1	3B
2	3B
3	3B
4	3B
5	3C
6	3B
7	2C
8	3A
9	2C
10	2A
11	2C
12	2A
13	2C
14	2A
15	2B
16	2A
17	
18	
19	2F
20	2B
21	2E
22	2C
23	
24	
25	3G
26	3F
27	2G
28	2B
29	3B
30	3B
31	3B
32	2F
33	2G
34	3D
35	3D
36	3D
37	3C
38	3C
39	3H
40	3G
41	3F
1	5C
2	6B
3	3D

电阻和电容的阻值, 请见电路原理图。






印刷电路板 (元件一侧图)

CONTROL UNIT

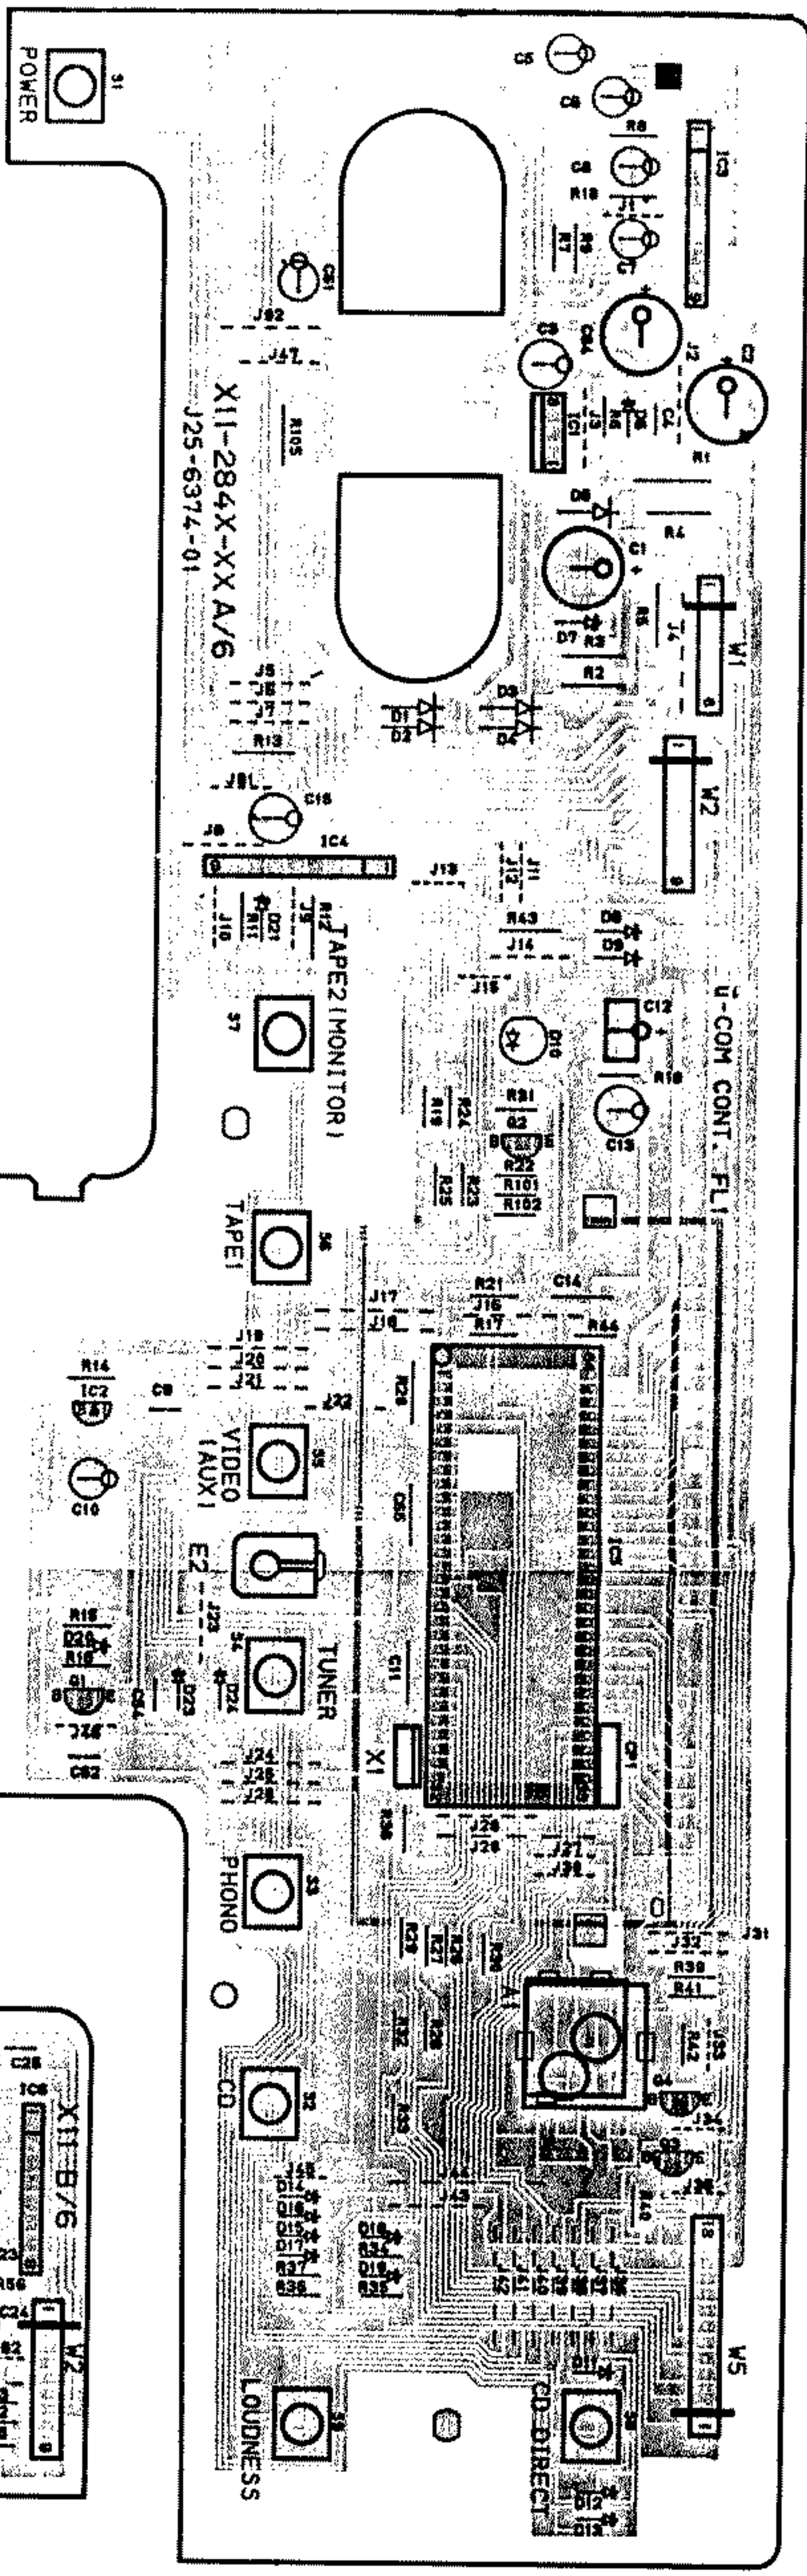


X11-284X-XX

Ref. No.	IC	Q	Address
1		3P	
2		2N	
3		2R	
4		2Q	
5		5R	
6		5R	
7		4L	
8		4L	
1		2L	
2		3O	
3		2K	
4		3N	
5		2P	
6		3Q	
7		5R	
9		5R	
10		4O	

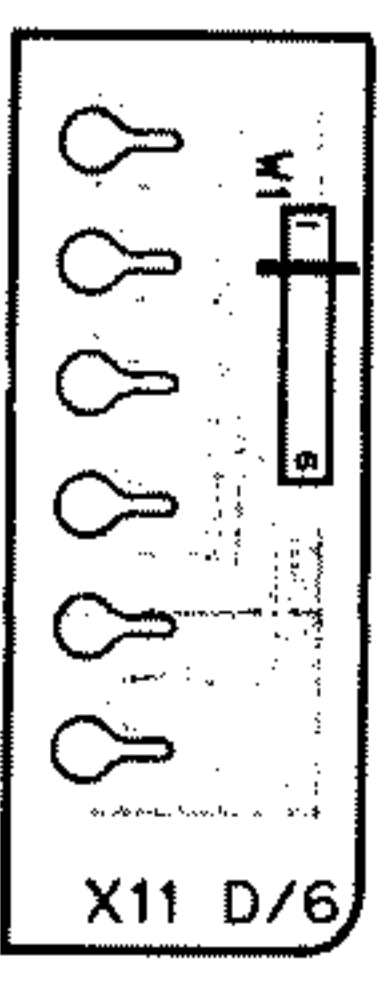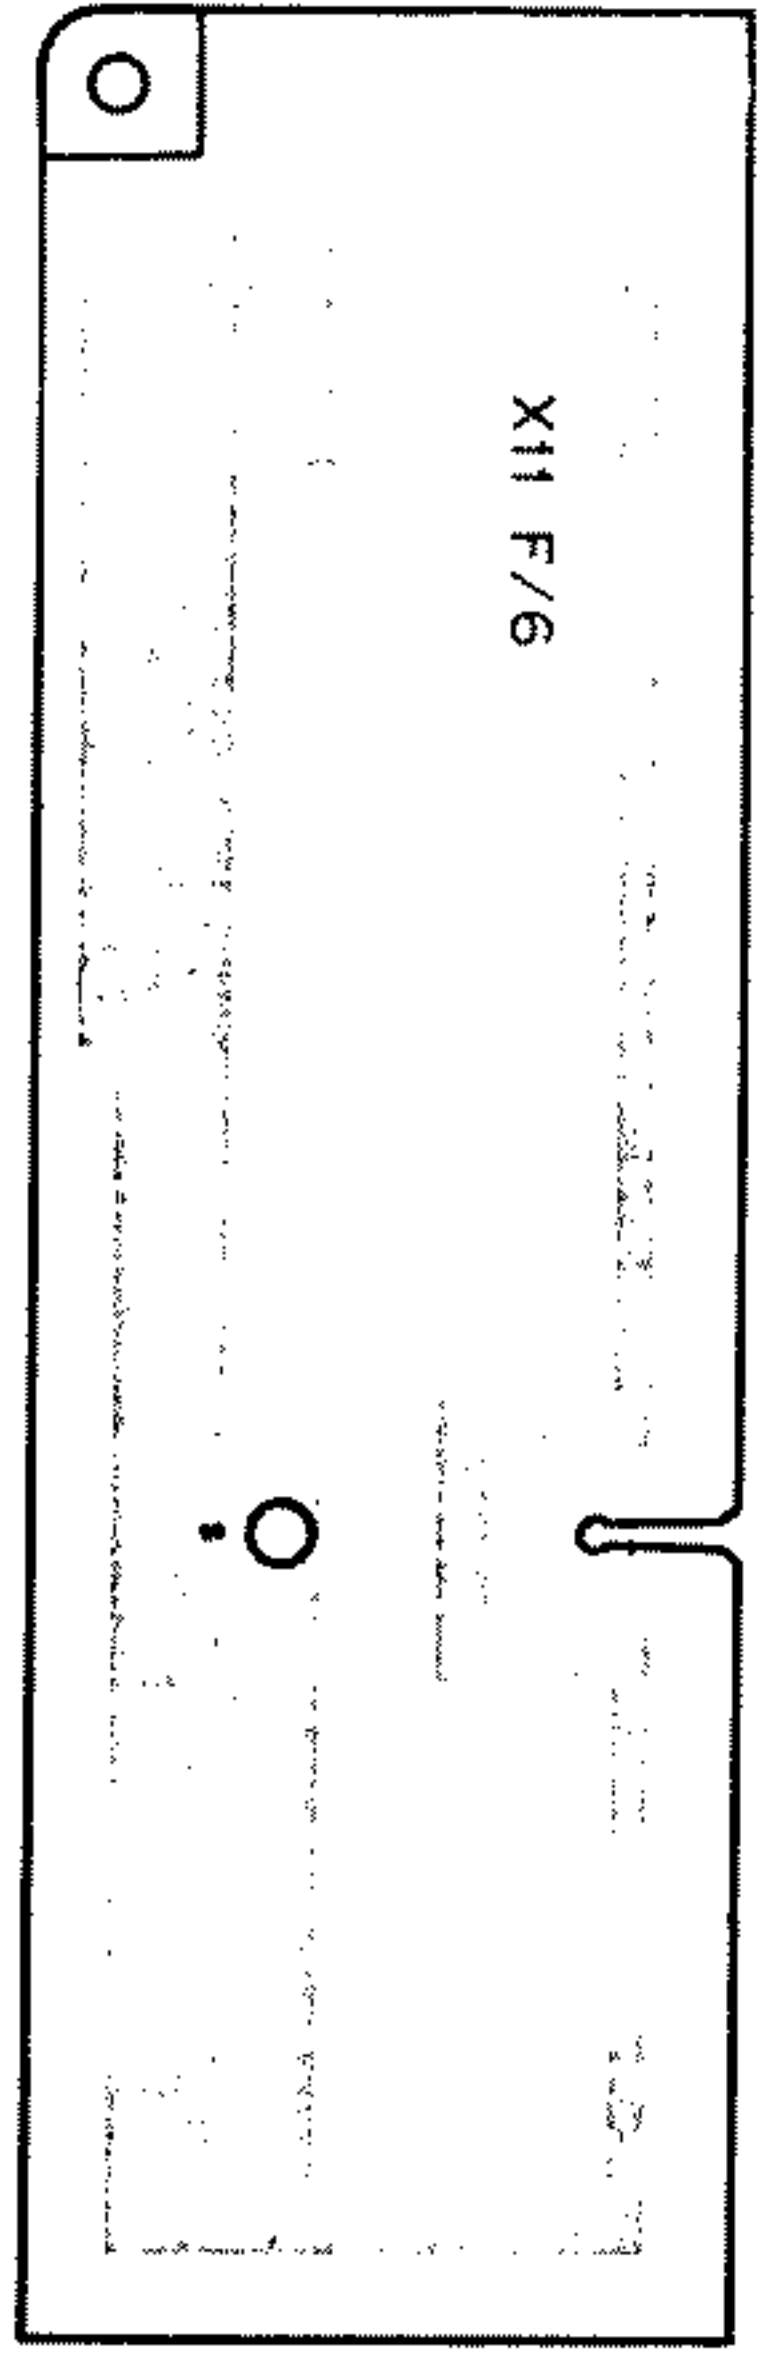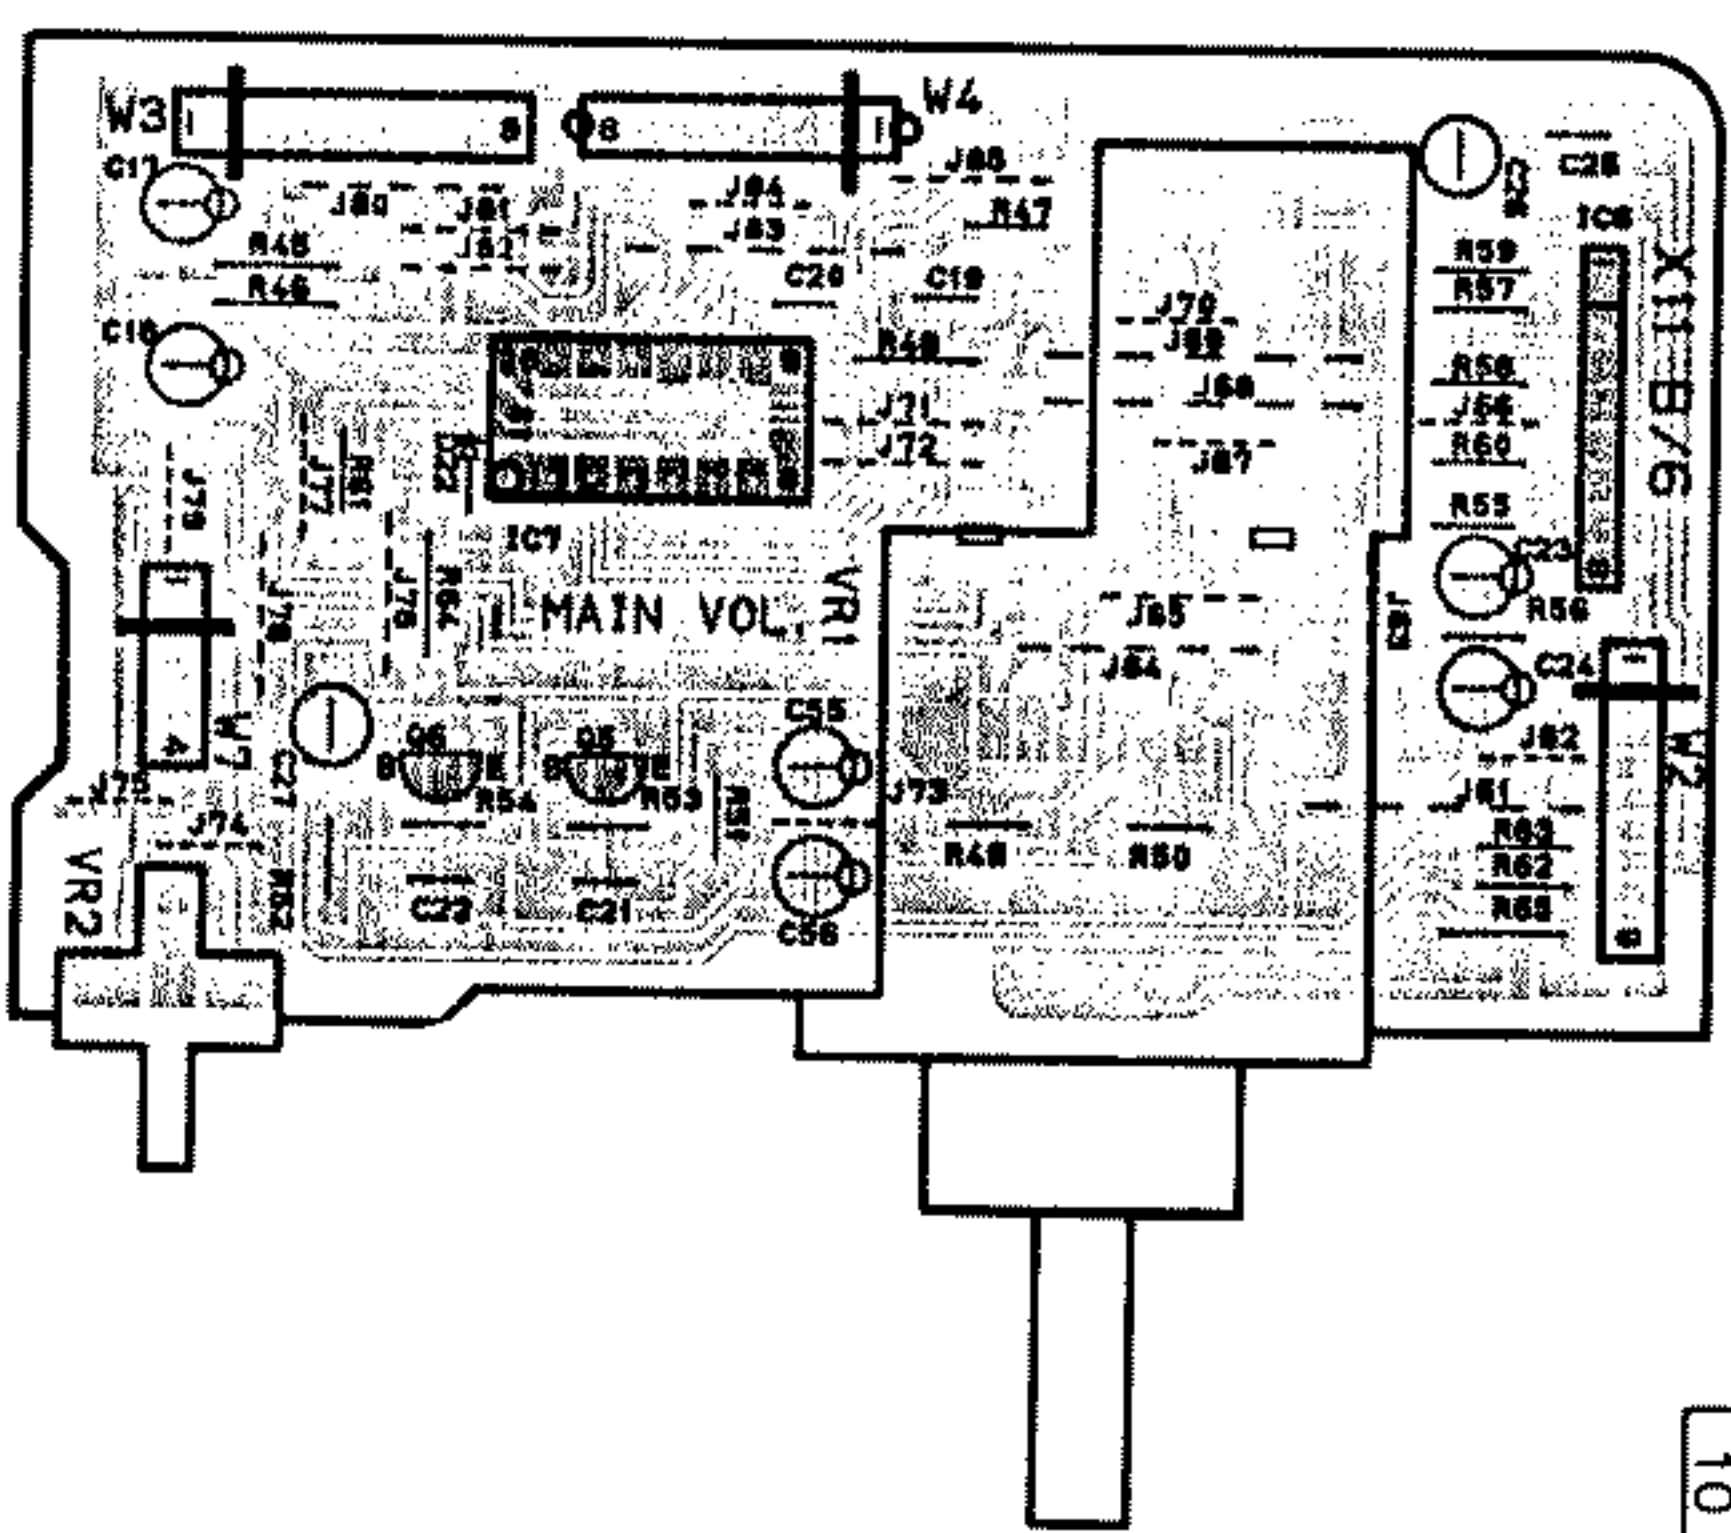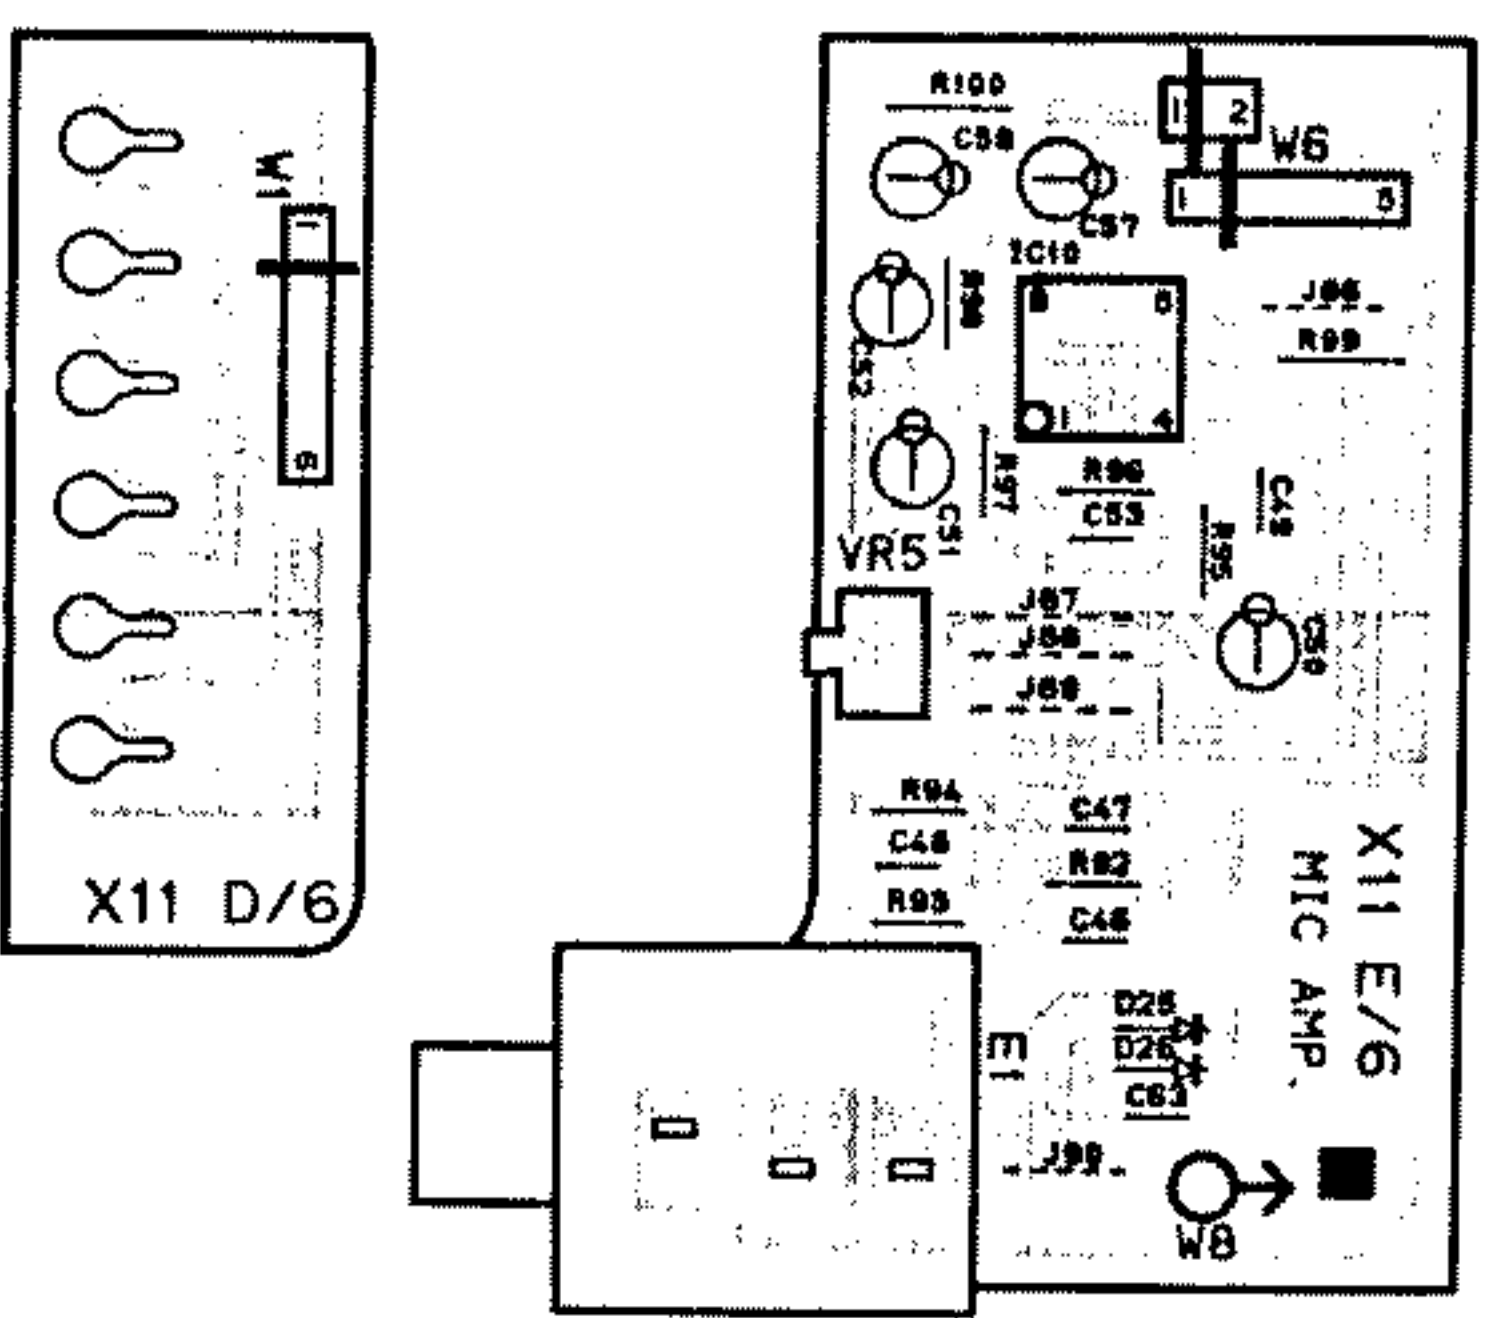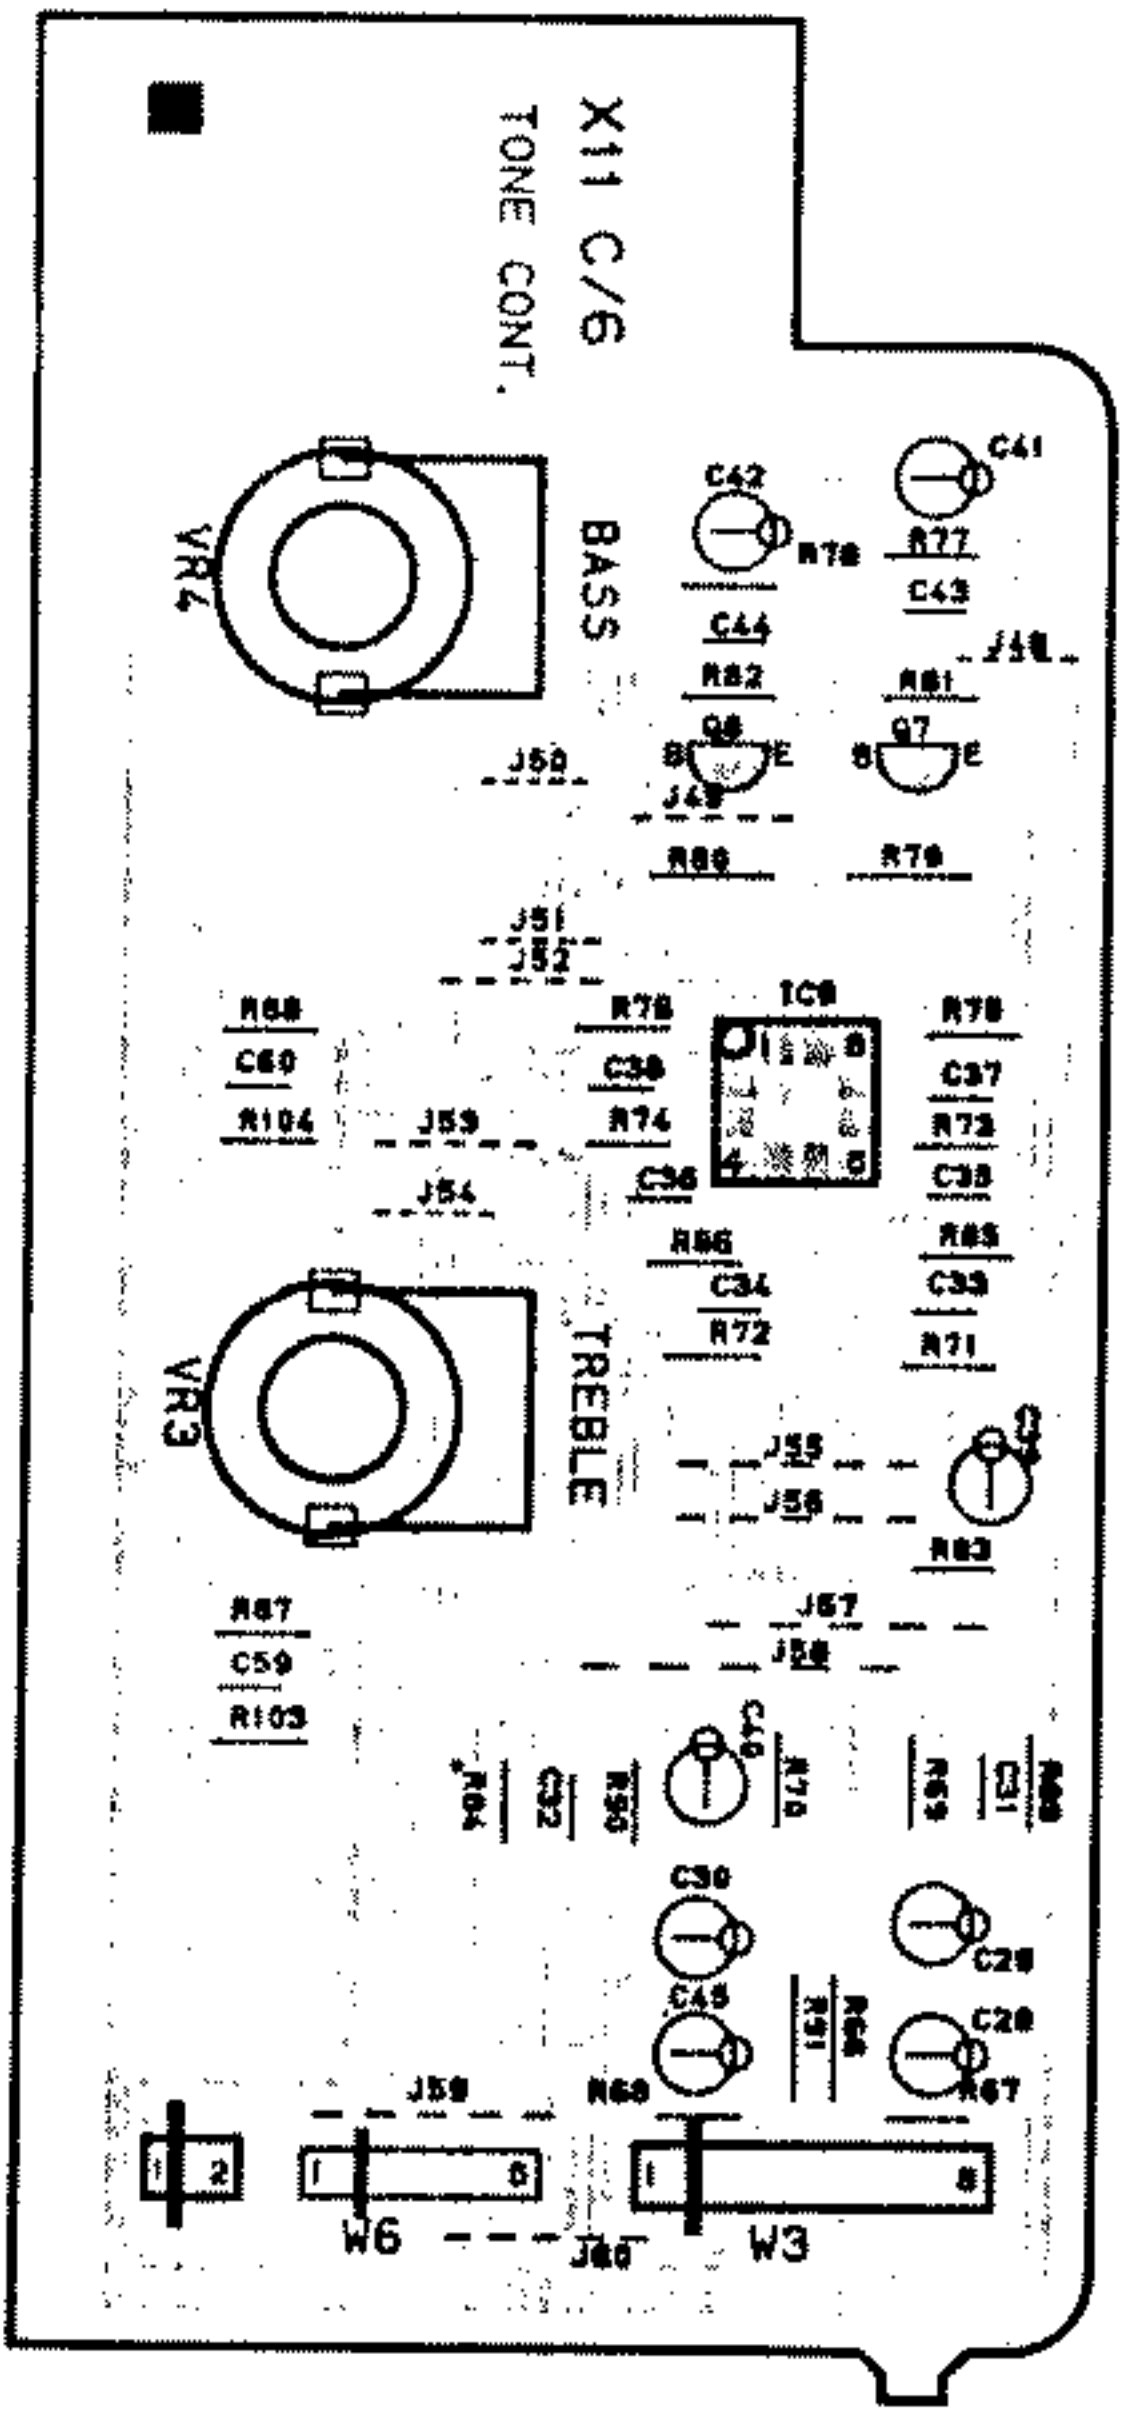

注意：为了有效的安全性，只能按照厂家给出的推荐元件（见零部件表）来更换安全要求严格的元件。表示安全性能要求严格的元件，为了减少触电的危险，应该在将装置还给用户之前，对高压电阻或电阻进行测量（在露在外部的零部件均与电源电路绝缘的情况下进行测量）。

● 直流电压用高阻电压表来测量。电压值会有轻微的变动，因有测量仪器以及被测部件的变化。



(XII) - 284X-XX1A/6)

(XII) - 284X-XX1B/6)

(XII) - 284X-XX1C/6)

(XII) - 284X-XX1D/6)

(XII) - 284X-XX1E/6)

(XII) - 284X-XX1F/6)

(XII) - 284X-XX1G/6)

(XII) - 284X-XX1H/6)

(XII) - 284X-XX1I/6)

(XII) - 284X-XX1J/6)

(XII) - 284X-XX1K/6)

(XII) - 284X-XX1L/6)

(XII) - 284X-XX1M/6)

(XII) - 284X-XX1N/6)

(XII) - 284X-XX1O/6)

(XII) - 284X-XX1P/6)

(XII) - 284X-XX1Q/6)

(XII) - 284X-XX1R/6)

(XII) - 284X-XX1S/6)

(XII) - 284X-XX1T/6)

(XII) - 284X-XX1U/6)

(XII) - 284X-XX1V/6)

(XII) - 284X-XX1W/6)

(XII) - 284X-XX1X/6)

(XII) - 284X-XX1Y/6)

(XII) - 284X-XX1Z/6)

(XII) - 284X-XX1AA/6)

(XII) - 284X-XX1AB/6)

(XII) - 284X-XX1AC/6)

(XII) - 284X-XX1AD/6)

(XII) - 284X-XX1AE/6)

(XII) - 284X-XX1AF/6)

(XII) - 284X-XX1AG/6)

(XII) - 284X-XX1AH/6)

(XII) - 284X-XX1AI/6)

(XII) - 284X-XX1AJ/6)

(XII) - 284X-XX1AK/6)

(XII) - 284X-XX1AL/6)

(XII) - 284X-XX1AM/6)

(XII) - 284X-XX1AN/6)

(XII) - 284X-XX1AO/6)

(XII) - 284X-XX1AP/6)

(XII) - 284X-XX1AQ/6)

(XII) - 284X-XX1AR/6)

(XII) - 284X-XX1AS/6)

(XII) - 284X-XX1AT/6)

(XII) - 284X-XX1AU/6)

(XII) - 284X-XX1AV/6)

(XII) - 284X-XX1AW/6)

(XII) - 284X-XX1AX/6)

(XII) - 284X-XX1AY/6)

(XII) - 284X-XX1AZ/6)

(XII) - 284X-XX1BA/6)

(XII) - 284X-XX1BB/6)

(XII) - 284X-XX1BC/6)

(XII) - 284X-XX1BD/6)

(XII) - 284X-XX1BE/6)

(XII) - 284X-XX1BF/6)

(XII) - 284X-XX1BG/6)

(XII) - 284X-XX1BH/6)

(XII) - 284X-XX1BI/6)

(XII) - 284X-XX1BJ/6)

(XII) - 284X-XX1BK/6)

(XII) - 284X-XX1BL/6)

(XII) - 284X-XX1BM/6)

(XII) - 284X-XX1BN/6)

(XII) - 284X-XX1BO/6)

(XII) - 284X-XX1BP/6)

(XII) - 284X-XX1BQ/6)

(XII) - 284X-XX1BR/6)

(XII) - 284X-XX1BS/6)

(XII) - 284X-XX1BT/6)

(XII) - 284X-XX1BU/6)

(XII) - 284X-XX1BV/6)

(XII) - 284X-XX1BW/6)

(XII) - 284X-XX1BX/6)

(XII) - 284X-XX1BY/6)

(XII) - 284X-XX1BZ/6)

(XII) - 284X-XX1CA/6)

(XII) - 284X-XX1CB/6)

(XII) - 284X-XX1CC/6)

(XII) - 284X-XX1CD/6)

(XII) - 284X-XX1CE/6)

(XII) - 284X-XX1CF/6)

(XII) - 284X-XX1CG/6)

(XII) - 284X-XX1CH/6)

(XII) - 284X-XX1CI/6)

(XII) - 284X-XX1CJ/6)

(XII) - 284X-XX1CK/6)

(XII) - 284X-XX1CL/6)

(XII) - 284X-XX1CM/6)

(XII) - 284X-XX1CN/6)

(XII) - 284X-XX1CO/6)

(XII) - 284X-XX1CP/6)

(XII) - 284X-XX1CQ/6)

(XII) - 284X-XX1CR/6)

(XII) - 284X-XX1CS/6)

(XII) - 284X-XX1CT/6)

(XII) - 284X-XX1CU/6)

(XII) - 284X-XX1CV/6)

(XII) - 284X-XX1CW/6)

(XII) - 284X-XX1CX/6)

(XII) - 284X-XX1CY/6)

(XII) - 284X-XX1CZ/6)

(XII) - 284X-XX1DA/6)

(XII) - 284X-XX1DB/6)

(XII) - 284X-XX1DC/6)

(XII) - 284X-XX1DD/6)

(XII) - 284X-XX1DE/6)

(XII) - 284X-XX1DF/6)

(XII) - 284X-XX1DG/6)

(XII) - 284X-XX1DH/6)

(XII) - 284X-XX1DI/6)

(XII) - 284X-XX1DJ/6)

(XII) - 284X-XX1DK/6)

(XII) - 284X-XX1DL/6)

(XII) - 284X-XX1DM/6)

(XII) - 284X-XX1DN/6)

(XII) - 284X-XX1DO/6)

(XII) - 284X-XX1DP/6)

(XII) - 284X-XX1DQ/6)

(XII) - 284X-XX1DR/6)

(XII) - 284X-XX1DS/6)

(XII) - 284X-XX1DT/6)

(XII) - 284X-XX1DU/6)

(XII) - 284X-XX1DV/6)

(XII) - 284X-XX1DW/6)

(XII) - 284X-XX1DX/6)

(XII) - 284X-XX1DY/6)

(XII) - 284X-XX1DZ/6)

(XII) - 284X-XX1EA/6)

(XII) - 284X-XX1EB/6)

(XII) - 284X-XX1EC/6)

(XII) - 284X-XX1ED/6)

(XII) - 284X-XX1EE/6)

(XII) - 284X-XX1EF/6)

(XII) - 284X-XX1EG/6)

(XII) - 284X-XX1EH/6)

(XII) - 284X-XX1EI/6)

(XII) - 284X-XX1EJ/6)

(XII) - 284X-XX1EK/6)

(XII) - 284X-XX1EL/6)

(XII) - 284X-XX1EM/6)

(XII) - 284X-XX1EN/6)

(XII) - 284X-XX1EO/6)

(XII) - 284X-XX1EP/6)

(XII) - 284X-XX1EQ/6)

(XII) - 284X-XX1ER/6)

(XII) - 284X-XX1ES/6)

(XII) - 284X-XX1ET/6)

(XII) - 284X-XX1EU/6)

(XII) - 284X-XX1EV/6)

(XII) - 284X-XX1EW/6)

(XII) - 284X-XX1EX/6)

(XII) - 284X-XX1EY/6)

(XII) - 284X-XX1EZ/6)

(XII) - 284X-XX1FA/6)

(XII) - 284X-XX1FB/6)

(XII) - 284X-XX1FC/6)

(XII) - 284X-XX1FD/6)

(XII) - 284X-XX1FE/6)

(XII) - 284X-XX1FF/6)

(XII) - 284X-XX1FG/6)

(XII) - 284X-XX1FH/6)

(XII) - 284X-XX1FI/6)

(XII) - 284X-XX1FJ/6)

(XII) - 284X-XX1FK/6)

(XII) - 284X-XX1FL/6)

(XII) - 284X-XX1FM/6)

(XII) - 284X-XX1FN/6)

(XII) - 284X-XX1FO/6)

(XII) - 284X-XX1FP/6)

(XII) - 284X-XX1FQ/6)

(XII) - 284X-XX1FR/6)

(XII) - 284X-XX1FS/6)

(XII) - 284X-XX1FT/6)

(XII) - 284X-XX1FU/6)

(XII) - 284X-XX1FV/6)

(XII) - 284X-XX1FW/6)

(XII) - 284X-XX1FX/6)

(XII) - 284X-XX1FY/6)

(XII) - 284X-XX1FZ/6)

(XII) - 284X-XX1GA/6)

(XII) - 284X-XX1GB/6)

(XII) - 284X-XX1GC/6)

(XII) - 284X-XX1GD/6)

(XII) - 284X-XX1GE/6)

(XII) - 284X-XX1GF/6)

(XII) - 284X-XX1GG/6)

(XII) - 284X-XX1GH/6)

(XII) - 284X-XX1GI/6)

(XII) - 284X-XX1GJ/6)

(XII) - 284X-XX1GK/6)

(XII) - 284X-XX1GL/6)

(XII) - 284X-XX1GM/6)

(XII) - 284X-XX1GN/6)

(XII) - 284X-XX1GO/6)

(XII) - 284X-XX1GP/6)

(XII) - 284X-XX1GQ/6)

(XII) - 284X-XX1GR/6)

(XII) - 284X-XX1GS/6)

(XII) - 284X-XX1GT/6)

(XII) - 284X-XX1GU/6)

(XII) - 284X-XX1GV/6)

(XII) - 284X-XX1GW/6)

(XII) - 284X-XX1GX/6)

(XII) - 284X-XX1GY/6)

(XII) - 284X-XX1GZ/6)

(XII) - 284X-XX1HA/6)

(XII) - 284X-XX1HB/6)

(XII) - 284X-XX1HC/6)

(XII) - 284X-XX1HD/6)

(XII) - 284X-XX1HE/6)

(XII) - 284X-XX1HF/6)

(XII) - 284X-XX1HG/6)

(XII) - 284X-XX1HH/6)

(XII) - 284X-XX1HI/6)

(XII) - 284X-XX1HJ/6)

(XII) - 284X-XX1HK/6)

(XII) - 284X-XX1HL/6)

说明

- 2SA1123
- 2SA1124
- 2SA733 (A)
- 2SA992
- 2SA1845
- 2SC2003
- 2SC2631
- 2SC2632
- 2SC2878
- 2SC945 (A)

- 2SA933S
- 2SC1740S

- 2SA1215
- 2SC2921

- 2SC4137

- 2SA1535
- 2SB941
- 2SC3944

- TC9215P

- TA8409S














- BA6138

- μPC4570C-A
- μPC7805H
- μPC7812HF


- M51951ASL

- TC9163N


- NJM4555L

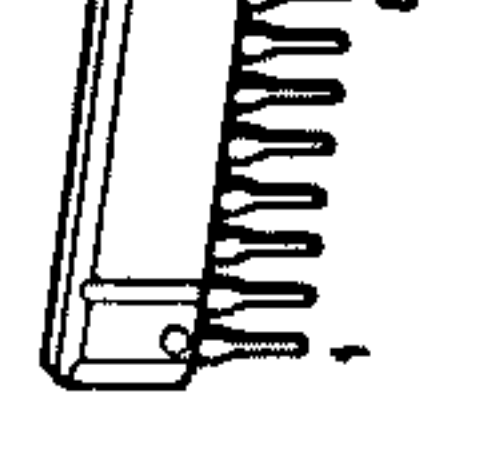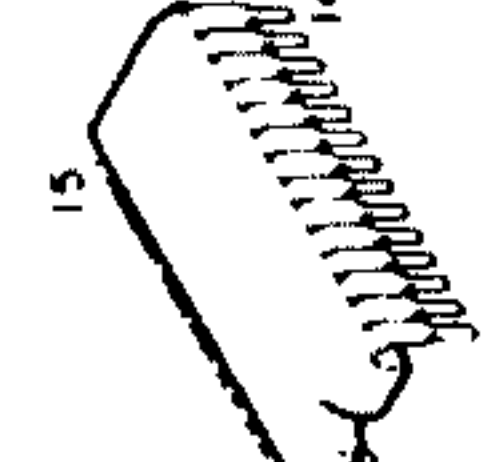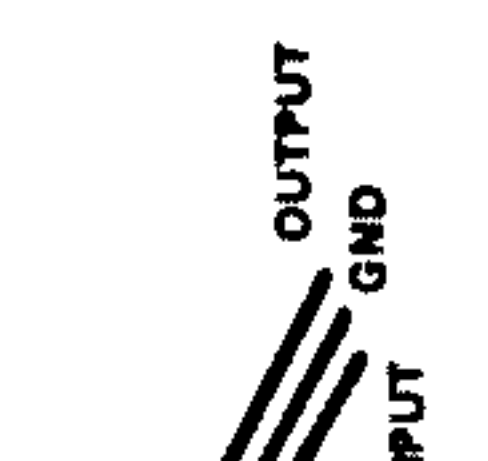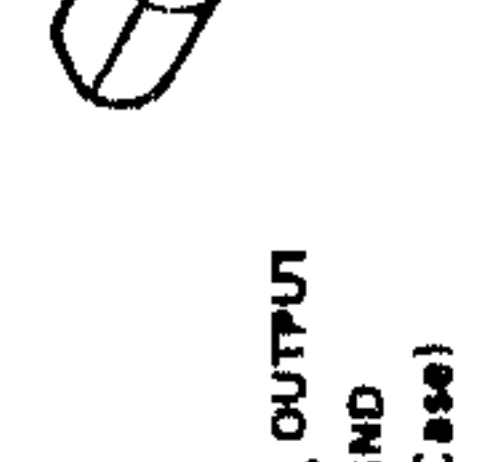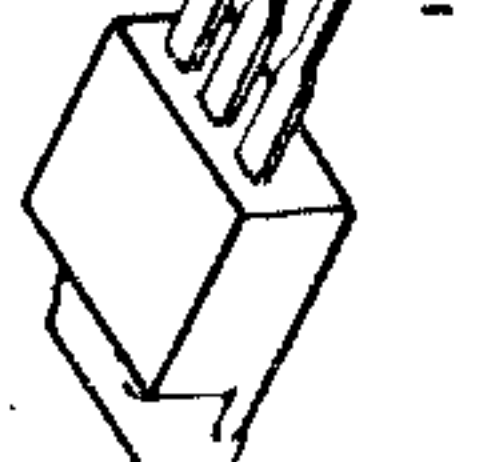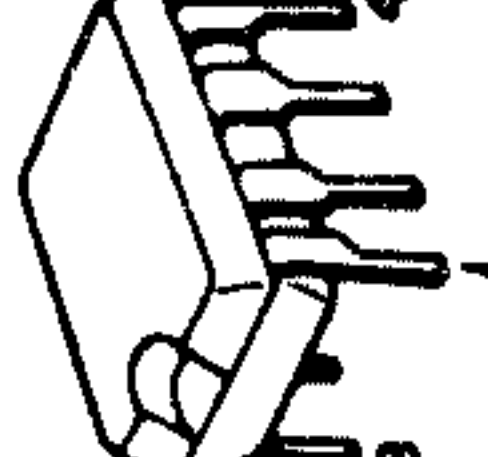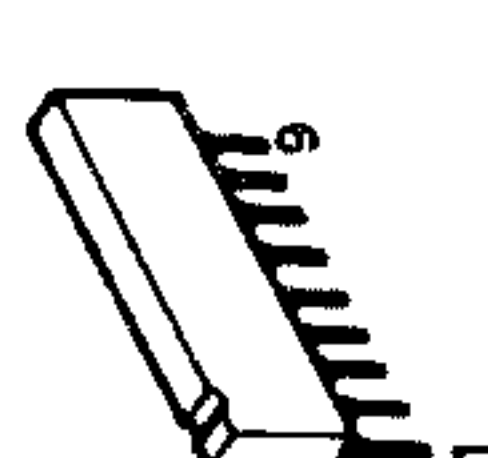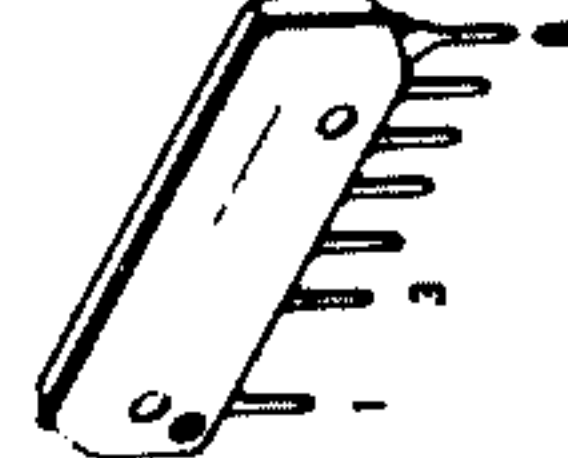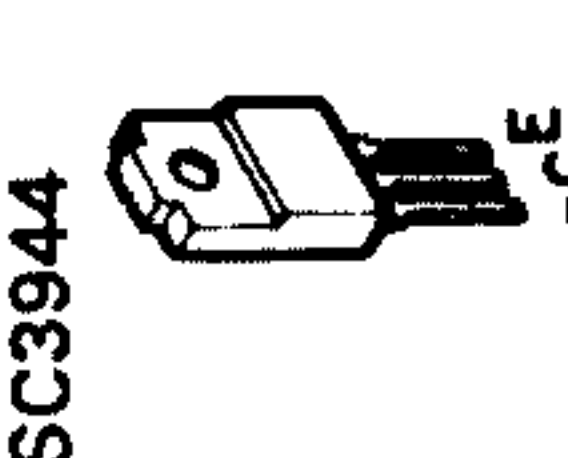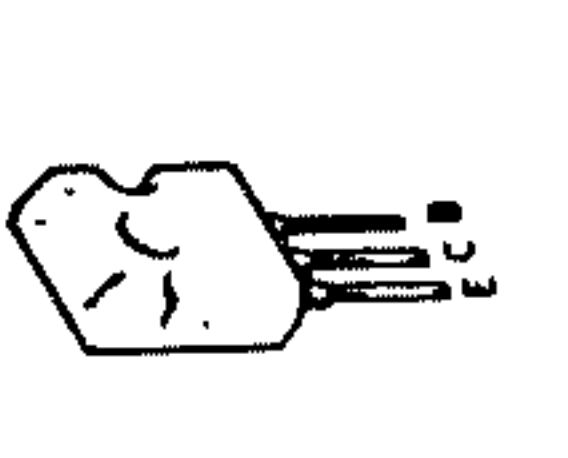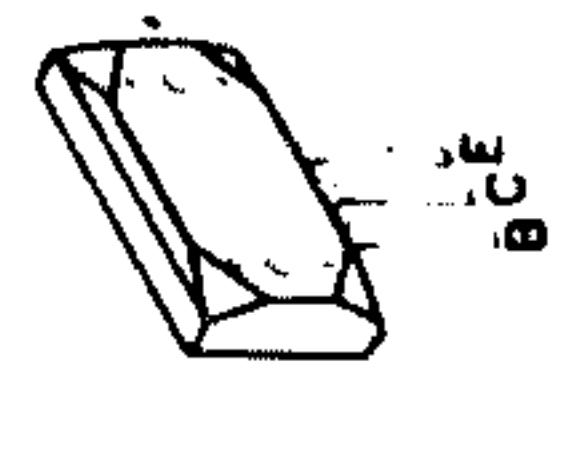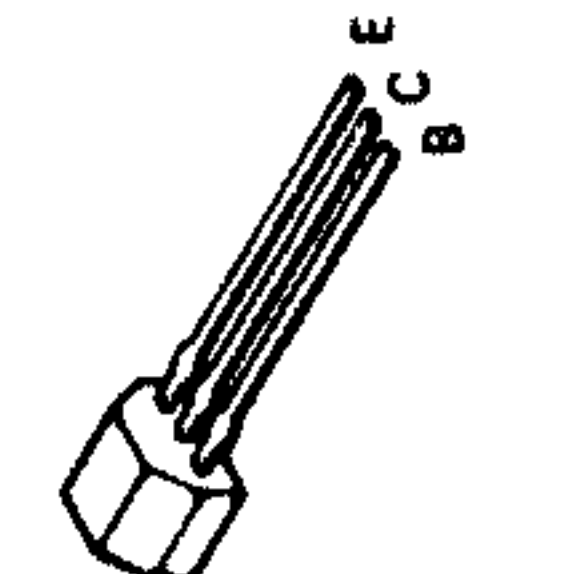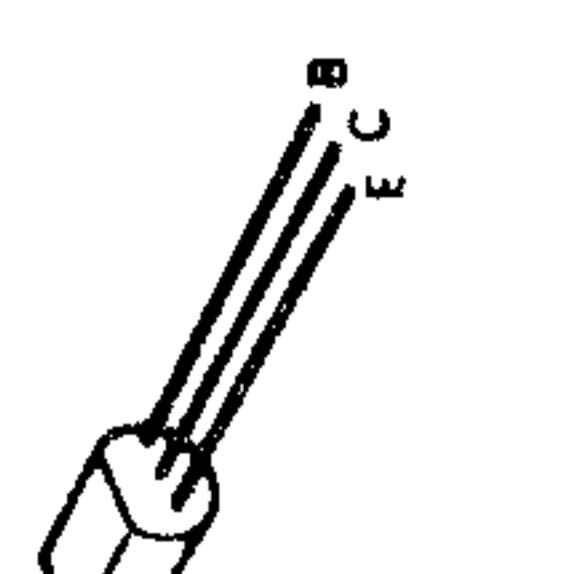

附件

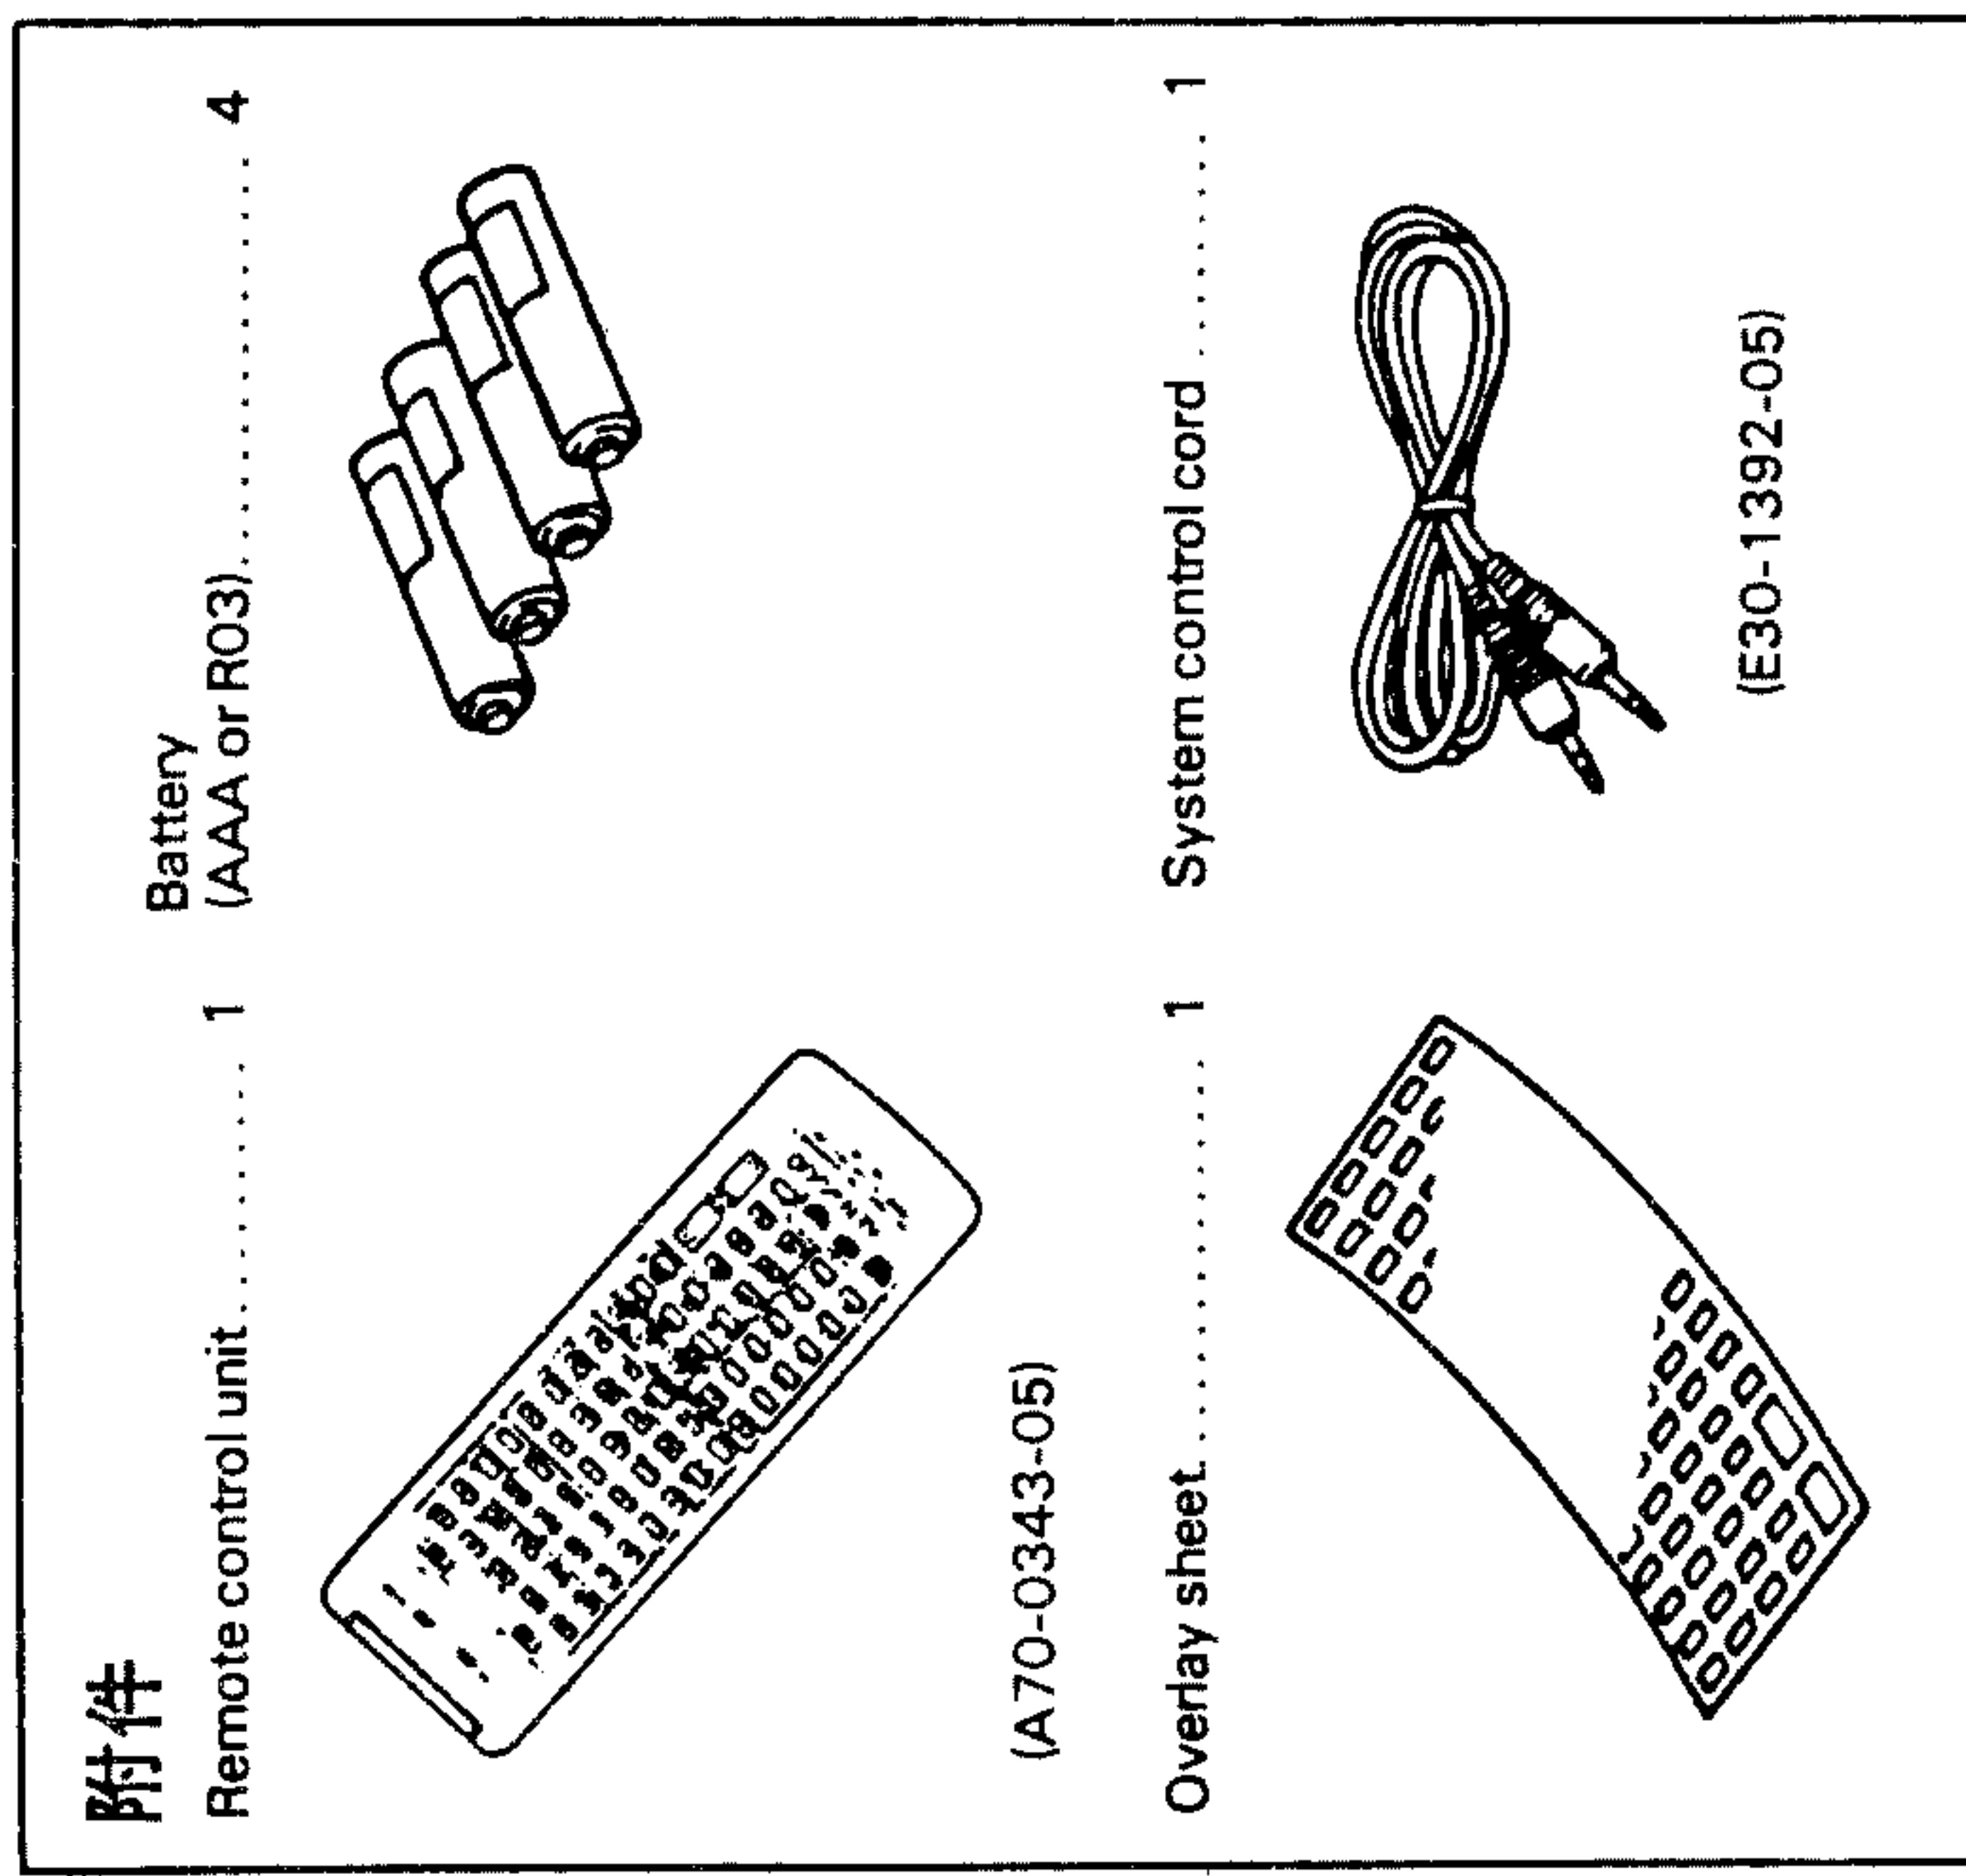

分解图

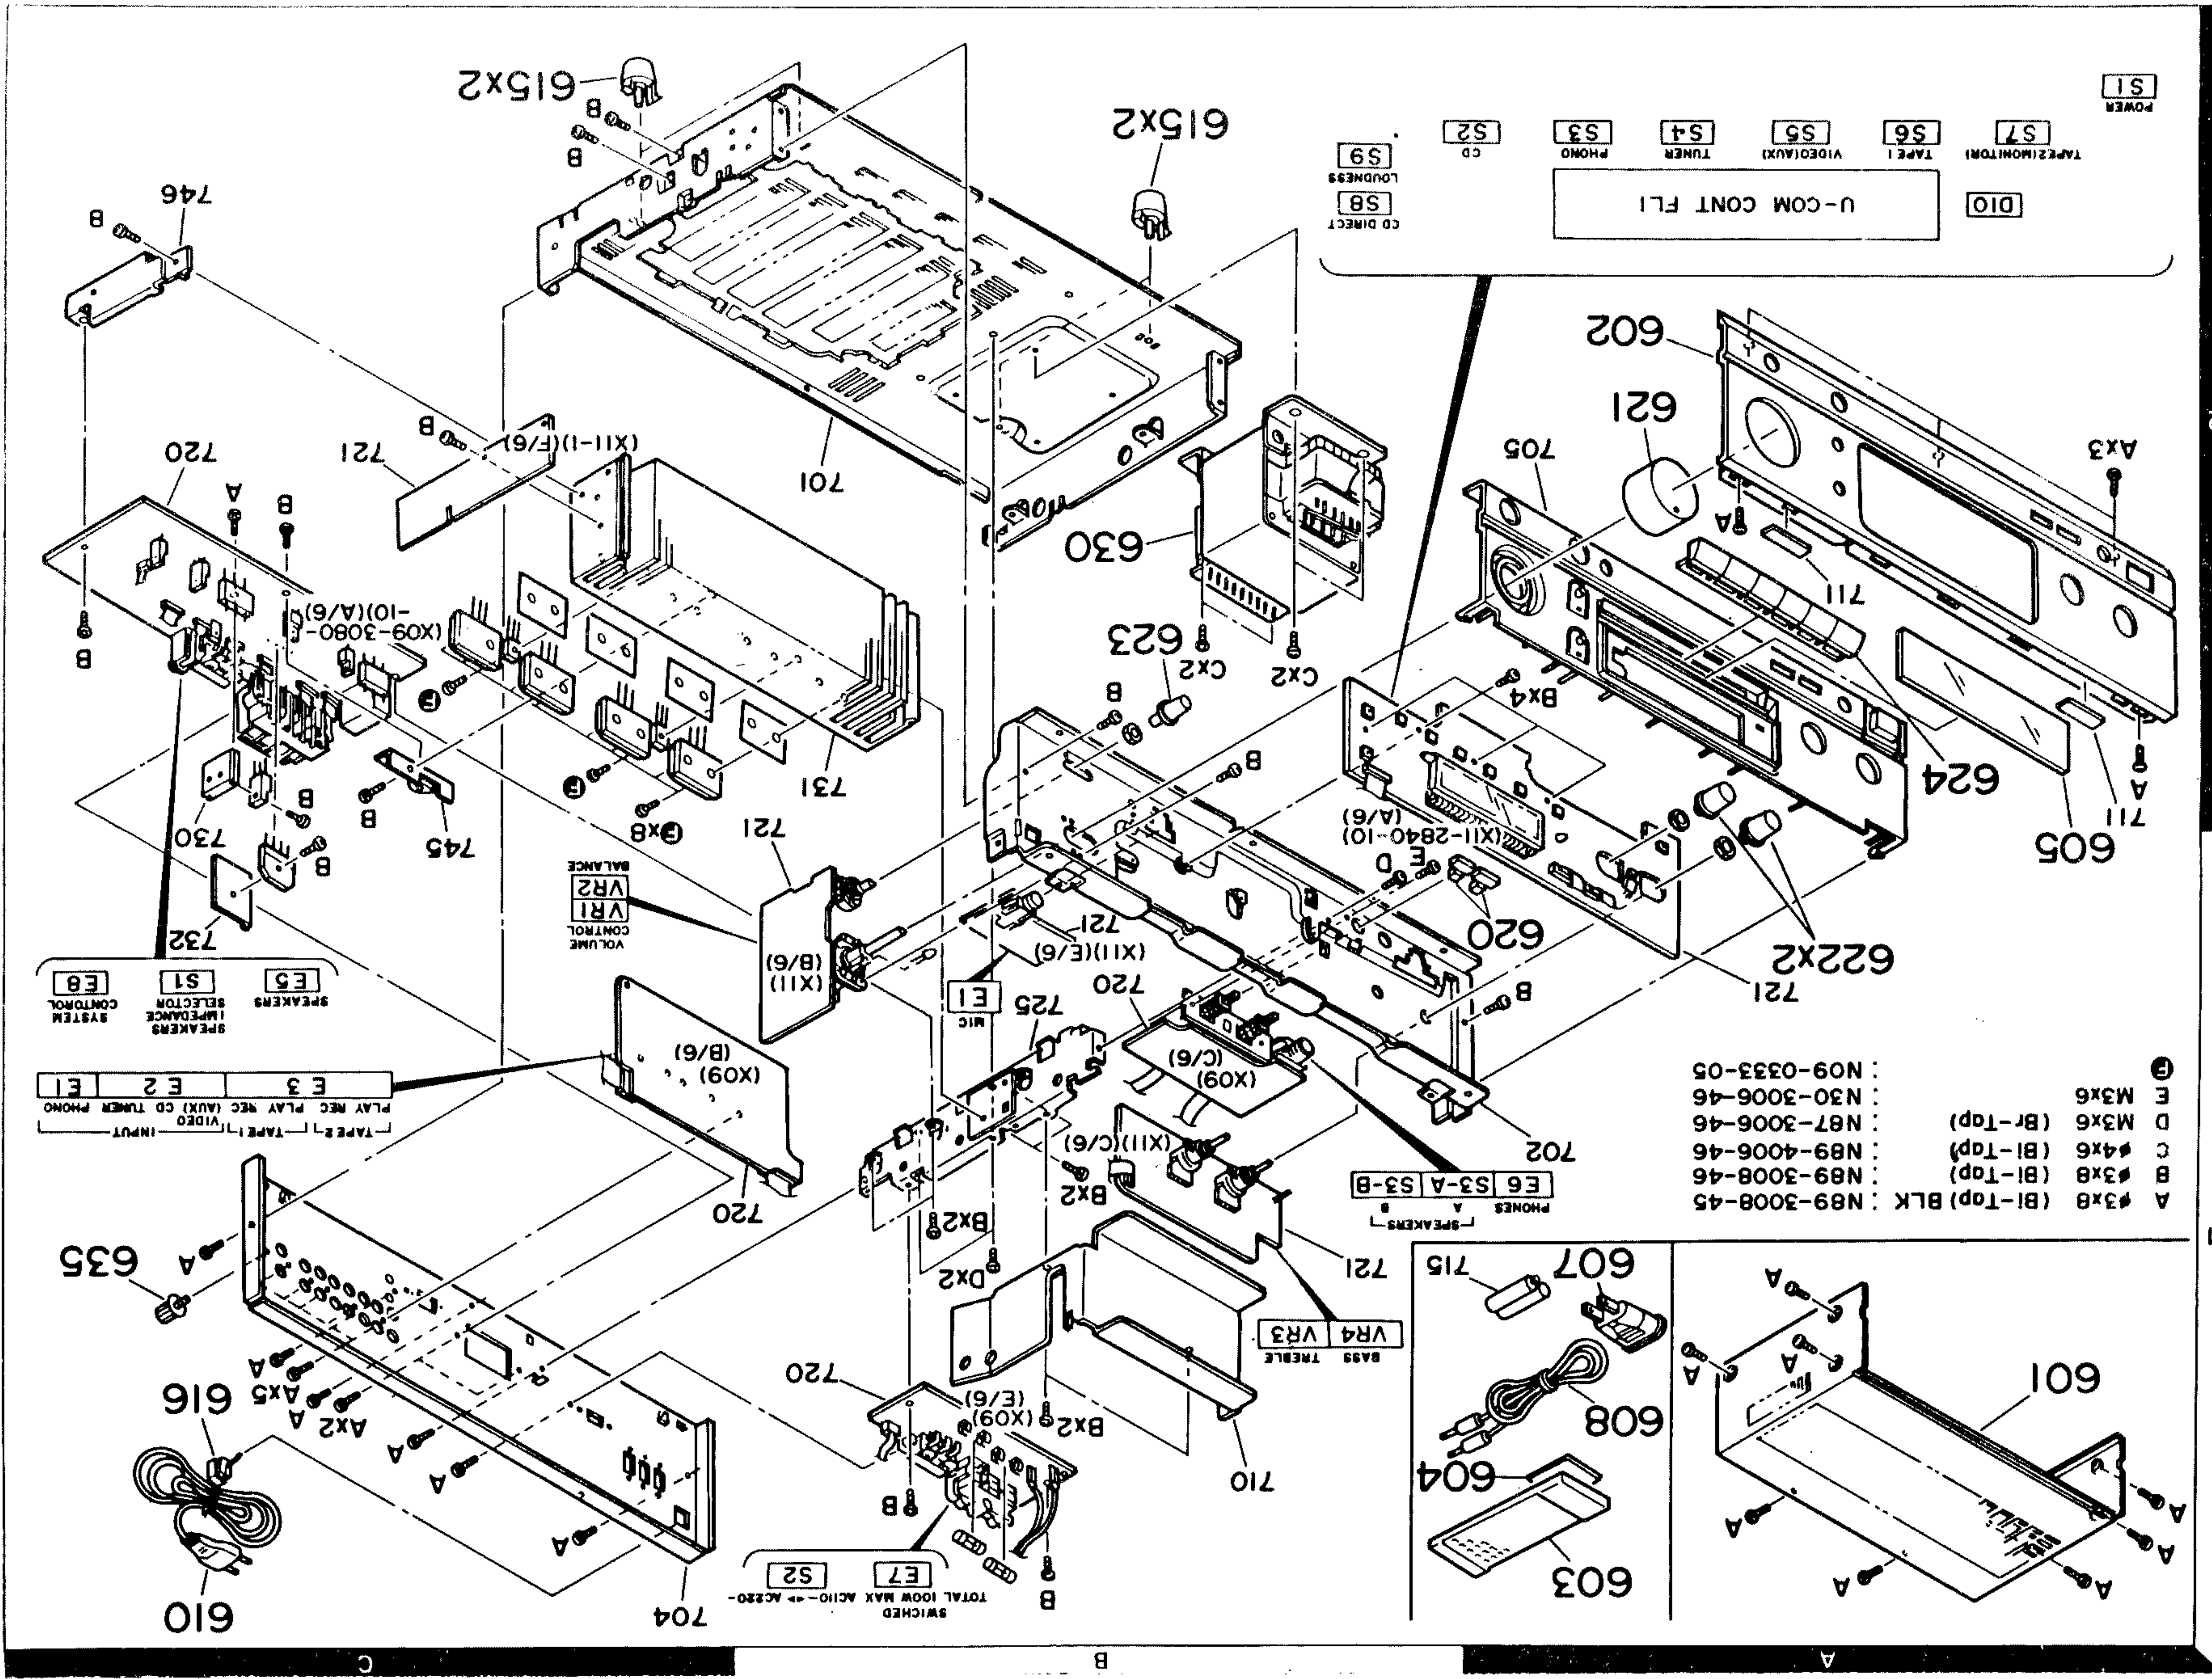

零部件表

* 新零部件
不提供无零件号码的更换用零件。

Ref. No. 参考号码	Address 位置	New Parts 新零件	Parts No. 零件号码	Description 零件名称 / 规格	Destination 向备注	Remarks 备注
KA-99 (JAPAN MADE)						
601	1A	*	A01-1834-01	METALLIC CABINET	KPYX	
602	2A	*	A20-6006-02	PANEL	M	
603	1A, 1B	*	A70-0343-05	REMOTE CONTROLLER ASSY		
604	1A	*	A09-0078-08	BATTERY COVER		
605	2A	*	B10-1078-03	FRONT GLASS	K	
-	-	-	B46-0092-03	WARRANTY CARD	Y	
-	-	-	B46-0094-03	WARRANTY CARD	Y	
-	-	-	B46-0095-03	WARRANTY CARD	Y	
-	-	-	B46-0096-13	WARRANTY CARD	X	
-	-	-	B46-0121-03	WARRANTY CARD	P	
-	-	-	B58-0513-04	CAUTION CARD (PRESET220-240)	Y	
-	-	-	B60-0093-00	INSTRUCTION MANUAL (ENGLISH)		
-	-	-	B60-0094-00	INSTRUCTION MANUAL (FRENCH)		
-	-	-	B60-0095-00	INSTRUCTION MANUAL (SP, AL, CH)	PM	
607	1A, 1B	*	E03-0115-05	AC PLUG ADAPTER	M	
608	1A, 1B	*	E30-1392-05	CORD WITH PLUG	M	
610	1C	*	E30-0459-05	AC POWER CORD	M	
610	1C	*	E30-0812-05	AC POWER CORD	Y	
610	1C	*	E30-0974-05	AC POWER CORD	KP	
610	1C	*	E30-1341-05	AC POWER CORD	X	
E7	1B	*	E03-0055-05	AC OUTLET	X	
E7	1B	*	E03-0114-05	AC OUTLET	M	
-	-	-	H01-8749-04	ITEM CARTON CASE		
-	-	-	H10-3971-02	POLYSTYRENE FOAMED FIXTURE		
-	-	-	H10-3972-02	POLYSTYRENE FOAMED FIXTURE		
-	-	-	H25-0223-04	PROTECTION BAG (750X350X0.03)		
-	-	-	H25-0232-04	PROTECTION BAG (235X350X0.03)		
615	2B, 2C	*	J02-1013-05	FOOT		
616	1C	*	J42-0083-05	POWER CORD BUSHING		
-	-	-	J61-0307-05	WIRE BAND		
620	1B	*	K27-2014-04	KNØB (BUTTON) (SPEAKERS)		
621	2A	*	K29-3744-04	KNØB (VOLUME CONTROL)		
622	1A, 2A	*	K29-3909-04	KNØB (BASS, TREBLE)		
623	2B	*	K29-3911-04	KNØB (BALANCE)		
624	2A	*	K29-3914-03	KNØB (INPUT SELECTOR)		
630	2B	*	L07-0054-05	POWER TRANSFORMER	K	
630	2B	*	L07-0055-05	POWER TRANSFORMER	P	
630	2B	*	L07-0056-05	POWER TRANSFORMER	Y	
630	2B	*	L07-0057-05	POWER TRANSFORMER	M	
630	2B	*	L07-0058-05	POWER TRANSFORMER	X	
635	1C	*	N08-0128-35	BINDING POST (EARTH)		
A	2B	*	N30-3006-46	PAN HEAD MACHINE SCREW		
B	2B, 3C	*	N87-3006-46	BRAZIER HEAD TAPTITE SCREW		
C	1A, 1C	*	N89-3008-45	BINDING HEAD TAPTITE SCREW		
D	1B, 2B	*	N89-3008-46	BINDING HEAD TAPTITE SCREW		
E	2B	*	N89-4006-46	BINDING HEAD TAPTITE SCREW		
AUDIO UNIT (X09-308X-XX)						
C1, 2			CE04KW1H100M	ELECTRØ 10UF	50WV	
C3, 4			CE04KW1A101M	ELECTRØ 100UF	10WV	
C5, 6			CK45FB1H561K	CERAMIC 560PF	K	
C7, 8			CF92FV1H123J	MF 0.012UF	J	

零部件表

* 新零部件
不提供无零件号码的更换用零件。

Ref. No. 参考号码	Address 位置	New Parts 新零件	Parts No. 零件号码	Description 零件名称 / 规格	Destination 向备注	Remarks 备注
C9		*	CF92FV1H332J	MF 3300PF	J	
C11		*	CE04KW1H4R7M	ELECTRØ 4.7UF	50WV	
C27		*	CE04KW1H2R2M	ELECTRØ 2.2UF	50WV	
C31		*	CC45FSL1H221J	CERAMIC 220PF	J	
C33		*	CF92FV1H152J	MF 1500PF	J	
C37		*	CE04KW1A101M	ELECTRØ 100UF	10WV	
C39		*	CC45FSL1H050C	CERAMIC 5.0PF	C	
C41		*	CE04KW1H010M	ELECTRØ 1.0UF	50WV	
C45		*	CC45FSL1H331J	CERAMIC 330PF	J	
C47		*	CC45FSL1H020C	CERAMIC 2.0PF	C	
C49		*	CC45FSL1H220J	CERAMIC 22PF	J	
C51		*	CE04KW1H010M	ELECTRØ 1.0UF	50WV	
C53		*	CK45FF1H103Z	CERAMIC 0.010UF	Z	
C55		*	CF92FV1H104J	MF 0.10UF	J	
C57		*	CF92FV1H222J	MF 2200PF	J	
C65		*	CC45FSL1H221J	CERAMIC 220PF	J	
C77		*	CE04KW1C220M	ELECTRØ 22UF	16WV	
C79		*	C91-0769-05	CERAMIC 0.01UF	M	
C80		*	CK45FB1H102K	CERAMIC 1000PF	K	
C82		*	CK45FB1H332K	CERAMIC 3300PF	K	
C83		*	CE04KW1H4R7M	ELECTRØ 4.7UF	50WV	
C84		*	CE04KW1H010M	ELECTRØ 1.0UF	50WV	
C85		*	CE04KW1E102M	ELECTRØ 1000UF	25WV	
C87		*	CE04KW1E470M	ELECTRØ 47UF	25WV	
C88		*	CE04KW1C470M	ELECTRØ 47UF	16WV	
C89		*	CF92FV1H104J	MF 0.10UF	J	
C91		*	CK45FE2H103P	CERAMIC 0.010UF	P	
C93		*	C90-1645-05	ELECTRØ 200UF	80WV	
C95		*	CC45FSL1H101J	CERAMIC 100PF	J	
C97		*	CE04KW1H3R3M	ELECTRØ 3.3UF	50WV	
C98		*	CE04KW0J221M	ELECTRØ 220UF	6.3WV	
C99		*	C91-0647-05	CERAMIC 0.01UF	P	
C100		*	CE04KW2A101M	ELECTRØ 100UF	100WV	
C102		*	CE04KW1A101M	ELECTRØ 100UF	10WV	
C103		*	CE04KW1C220M	ELECTRØ 22UF	16WV	
C108		*	CE04KW1V331M	ELECTRØ 330UF	35WV	
C109		*	CF92FV1H104J	MF 0.10UF	J	
E1		*	E13-0259-05	PHONØ JACK (2P) (PHONØ)		
E2		*	E13-0637-05	PHONØ JACK (6P) (CD, TUNER, AUX)		
E3		*	E13-0826-05	PHONØ JACK (TAP)		
E5		*	E20-0823-05	TERMINAL BOARD (8P) (SPEAKER)		
E6		*	E11-0162-05	PHONE JACK (3P) (PHONES)		
E7		*	E03-0093-05	AC OUTLET		
E8		*	E11-0188-05	PHONE JACK (SYSTEM CONTROL)		
F1		*	F05-3121-05	FUSE (SEMØØ) (250V T3.15A)	X	
F1		*	F05-6029-05	FUSE (UL) (250V T6.3A)	KP	
F1		*	F05-6321-05	FUSE (SEMØØ) (250V 6.3A)	M	
F1		*	F05-6324-05	FUSE (250V 6.3A)	Y	
F2		*	F05-3121-05	FUSE (SEMØØ) (250V T3.15A)	M	
F2		*	F05-3123-05	FUSE (250V 3.15A)	Y	
CNS		*	J13-0075-05	FUSE CLIP	YM	
CNS		*	J13-0075-05	FUSE CLIP	KPX	

零部件表

*新零部件
不提供无零件号码的更换用零件。

Ref. No. 参考号码	Address 位置	New Parts 新零件	Parts No. 零件号码	Description 零件名称 / 规格	Destination 向	Remarks 备注
L1 ,2			L39-0085-05	PHASE-COMPENSATION COIL	到实地	
C	2C		N89-3008-45	BINDING HEAD TAPTITE SCREW		
D	2C		N89-3008-46	BINDING HEAD TAPTITE SCREW		
F	2C		N09-0333-05	TAPPING SCREW (3X12)		
G	2C		N35-3008-46	BINDING HEAD MACHINE SCREW		
CP1 ,2			R90-0187-05	MULTI-COMP 0.22X2 K 5W		
R81			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R82			RD14NB2E221J	RD 220 J 1/4W		
R83			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R84			RD14NB2E221J	RD 220 J 1/4W		
R87			RD14NB2E101J	RD 100 J 1/4W		
R88			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R95 -98		*	RD14NB2E220J	RD 22 J 1/4W		
R99 -101			RD14AB2E331J	FL-PROOF RD 330 J 1/4W		
R102			RD14GB2E331J	FL-PROOF RD 330 J 1/4W		
R103			RD14AB2E2R2J	FL-PROOF RD 2.2 J 1/4W		
R104,105		*	RD14NB2E2R2J	RD 2.2 J 1/4W		
R106			RD14GB2E2R2J	FL-PROOF RD 2.2 J 1/4W		
R107,108			RS14DB3D100J	FL-PROOF RS 10 J 2W		
R115,116			RD14NB2E100J	RD 10 J 1/4W		
R117,118			RS14DB3D561J	FL-PROOF RS 560 J 2W		
R147			RD14NB2E100J	RD 10 J 1/4W		
R163,164			RD14AB2E6R8J	FL-PROOF RD 6.8 J 1/4W		
R167,168		*	RD14NB2E220J	RD 22 J 1/4W		
VR1 ,2			R12-1083-05	TRIM POT. 1K		
K1			S51-2092-05	MAGNETIC RELAY		
K2			S51-1052-05	MAGNETIC RELAY		
S1			S31-2136-05	SLIDE SWITCH(IMPEDANCE SELECT)	YMX	
S2			S31-2131-05	SLIDE SWITCH(VOLTAGE SELECTOR)	Y	
S3			S42-2163-05	MULTIPLE PUSH SWITCH (SPEAKER)		
S4		*	S31-2322-05	SLIDE SWITCH(VOLTAGE SELECTOR)	M	
D1 -10			HSS104A	DIODE		
D1 -10			1SS131	DIODE		
D11			HZS4.7N(B)	ZENER DIODE		
D11			RD4.7ES(B)	ZENER DIODE		
D12 -15			S5566B	DIODE		
D16			RBV-602LFA	DIODE		
D17 -23			HSS104A	DIODE		
D17 -23			1SS131	DIODE		
D24			S5566B	DIODE		
D25 ,26			MA177	DIODE		
IC1			TC9163N	IC(BILATERAL SWITCH X16)		
IC2			UPC4570C-A	IC(OP AMP X2)		
IC3			UPC7812HF	IC(VOLTAGE REGULATOR/ +12V)		
Q1 -4			2SC1845(F,E)	TRANSISTOR		
Q5 -8			2SA992(F,E)	TRANSISTOR		
Q9 -14			2SC2632(Q,R,S)	TRANSISTOR		
Q15 ,16			2SA1124(Q,R,S)	TRANSISTOR		
Q17 ,18			2SC4137	TRANSISTOR		
Q19 ,20			2SC3944(Q,R,S)	TRANSISTOR		
Q21 ,22			2SA1535(Q,R,S)	TRANSISTOR		
Q23 ,24			2SC2921	TRANSISTOR		
Q25 ,26			2SA1215	TRANSISTOR		

零部件表

*新零部件
不提供无零件号码的更换用零件。

Ref. No. 参考号码	Address 位置	New Parts 新零件	Parts No. 零件号码	Description 零件名称 / 规格	Destination 向	Remarks 备注
Q27 ,28			2SC2631(R,S)	TRANSISTOR		
Q29 ,30			2SC2878(B)	TRANSISTOR		
Q31			2SA733(A)(Q,P)	TRANSISTOR		
Q31			2SA933S(Q,R)	TRANSISTOR		
Q32			2SA1123(R,S)	TRANSISTOR		
Q33			2SC2003(L,K)	TRANSISTOR		
Q34			2SA733(A)(Q,P)	TRANSISTOR		
Q34			2SA933S(Q,R)	TRANSISTOR		
Q35			2SB941	TRANSISTOR		
Q36			2SC1740S(Q,R)	TRANSISTOR		
Q36			2SC945(A)(Q,P)	TRANSISTOR		
Q37			2SA733(A)(Q,P)	TRANSISTOR		
Q37			2SA933S(Q,R)	TRANSISTOR		
Q38			2SC1740S(Q,R)	TRANSISTOR		
Q38			2SC945(A)(Q,P)	TRANSISTOR		
Q39			2SC2003(L,K)	TRANSISTOR		
Q40 ,41			2SC1740S(Q,R)	TRANSISTOR		
Q40 ,41			2SC945(A)(Q,P)	TRANSISTOR		
CONTROL UNIT (X11-284X-XX)						
D10		*	B30-1291-05	LED		
C1 ,2			CE04DW1V221M	ELECTRO 220UF 35WV		
C3			CE04KW0J221M	ELECTRO 220UF 6.3WV		
C4			CF92FV1H103J	MF 0.010UF J		
C5 ,6			CE04KW1V100M	ELECTRO 10UF 35WV		
C7 ,8			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C9			CK45FF1H103Z	CERAMIC 0.010UF Z		
C10			CE04KW1HOR1M	ELECTRO 0.1UF 50WV		
C11			C91-0769-05	CERAMIC 0.01UF M		
C12			C91-0928-05	BACKUP C 0.047F 5.5WV		
C13			CE04KW0J221M	ELECTRO 220UF 6.3WV		
C14			C91-0085-05	CERAMIC 0.022UF N		
C15			CE04KW1C101M	ELECTRO 100UF 16WV		
C17 ,18			CE04KW1E470M	ELECTRO 47UF 25WV		
C19 ,20			CF92FV1H473J	MF 0.047UF J		
C21 ,22			CF92FV1H333J	MF 0.033UF J		
C23 ,24			CE04KW1V100M	ELECTRO 10UF 35WV		
C25			CF92FV1H104J	MF 0.10UF J		
C26			C90-1333-05	NP-ELEC 22UF 10WV		
C27			C90-1353-05	NP-ELEC 10UF 25WV		
C28			CE04KW1E470M	ELECTRO 47UF 25WV		
C29 ,30			CE04KW1V100M	ELECTRO 10UF 35WV		
C31 -34			CC45FSL1H221J	CERAMIC 220PF J		
C35 -38			CK45FB1H561K	CERAMIC 560PF K		
C39 ,40			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C41 ,42			CE04KW1V100M	ELECTRO 10UF 35WV		
C43 ,44			CF92FV1H203J	MF 0.020UF J		
C45			CE04KW1E470M	ELECTRO 47UF 25WV		
C46			CK45FF1H472Z	CERAMIC 4700PF Z		
C47			CC45FSL1H221J	CERAMIC 220PF J		
C48			CF92FV1H473J	MF 0.047UF J		
C49			CC45FSL1H221J	CERAMIC 220PF J		
C50 -52			CE04KW1V100M	ELECTRO 10UF 35WV		
C53			CF92FV1H102J	MF 1000PF J		
C54			CK45FF1H103Z	CERAMIC 0.010UF Z		

零部件表

规格

* 新零部件
不提供无零件号码的更换用零件。

Ref. No. 参考号码	Address 位置	New Parts 新零件 零件号码	Description 零件名称 / 规格	Destination 到货地	Remarks 备注
C55, 56		CE04KW1V100M	ELECTRØ 10UF 35MV	M	
C57, 58		CE04KW1E470M	ELECTRØ 47UF 25MV	M	
C59, 60		CE92FV1H683J	MF 0.068UF~ J		
C61		CE04KW1E470M	ELECTRØ 47UF 25MV	KPYX	
C62		CK45FF1H103Z	CERAMIC 0.010UF Z		
C62, 63		CK45FF1H103Z	CERAMIC 0.010UF Z		
C64		CE04DW1V221M	ELECTRØ 220UF 35MV	M	
C65		C91-0769-05	CERAMIC 0.01UF M		
C66		CE04DW1V221M	ELECTRØ 220UF 35MV		
E1		E11-0159-05	PHONE JACK(3P)(MIC JACK)	M	
X1		L78-0244-05	RESONATOR 4.0MHZ		
CP1		R90-0482-05	MULTI-COMP 100KX4 J		
R1		RS14KB3A561J	FL-PROOF RS 560 J		
R2	, 3	RD14NB2E101J	RD 100 J		
R4	, 5	RD14NB2E1R0J	RD 1.0 J		
VR1		R29-5037-05	POTENTIOMETER(100KX2)(MAIN VR)		
VR2		R01-5072-05	POTENTIOMETER(200K) (BALANCE)		
VR3	, 4	R06-3068-05	POTENTIOMETER(100KX2)(BAS. TRE)		
VR5		R10-5037-05	POTENTIOMETER(100KX2)(MIC MIX)	M	
S1	- 9	S40-1064-05	PUSH SWITCH (SELECTOR)		
D1	- 5	S5566B	DIODE		
D6		HSS104	DIODE		
D6		1SS133	DIODE		
D7		HZSS.6N(B2)	ZENER DIODE		
D7		RD5.6ES(B2)	ZENER DIODE		
D8	, 9	HSS104	DIODE		
D8	, 9	1SS133	DIODE		
D11	-20	HSS104	DIODE		
D11	-20	1SS133	DIODE		
D21		HZS3.9N(B2)	ZENER DIODE		
D21		RD3.9ES(B2)	ZENER DIODE		
D22	-24	HSS104	DIODE		
D22	-24	1SS133	DIODE		
D22	-26	HSS104	DIODE		
D22	-26	1SS133	DIODE		
D22	-26	1SS133	DIODE		
FL1		FIP7AM7R	FLUORESCENT INDICATOR TUBE		
IC1		UPC7805H	IC(VOLTAGE REGULATOR/ +5V)		
IC2		M51951ASL	IC(SYSTEM RESET)		
IC3		BA6138	IC(ROOT AMP X2)		
IC4		TA8409S	IC(MOTOR CONTROL)		
IC5		M50940-197SP	IC		
IC6		NJM4565L	IC		
IC7		TC9215P	IC(ANALOG SWITCH X 6)		
IC9		UPC4570C-A	IC(OP AMP X2)	KPYX	
IC9	, 10	UPC4570C-A	IC(OP AMP X2)	M	
Q1	-4	2SC1740S(Q,R)	TRANSISTOR		
Q1	-4	2SC945(A)(Q,P)	TRANSISTOR		
Q5	, 6	2SC2878(B)	TRANSISTOR		
Q7	, 8	2SC1845(F,E)	TRANSISTOR		
A1		W02-0975-05	ELECTRIC CIRCUIT MODULE		
A1		W02-1043-05	OPTIC RECEIVING MODULE		

最大连续功率输出
(IHF '66)从20赫至20,000赫, 0.05% T.H.D. 8 欧 110瓦 + 110瓦
1,000赫, 0.05%, T.H.D. 8 欧 135瓦 + 135瓦
音乐功率, 8 欧 220瓦 + 220瓦
总谐波失真真线输入至扬声器输出
(20赫至20,000赫) 0.03%, 1/2的额定功率, 8 欧
(1千赫) 0.01%, 1/2的额定功率, 8 欧
相互调制失真 (60赫 : 7千赫 = 4 : 1) 0.03%, 额定功率, 8 欧
功率带宽 10赫至100千赫, 0.2% T.H.D. 8 欧
频率响应 10赫至50千赫, + 0分贝, - 3分贝
输入灵敏度/阻抗
声音 2.5毫伏/47千欧
调谐器, 磁带演奏, CD, 辅助设备, 电视 150毫伏/33千欧
信噪比 (IHF-A) 75分贝, 用于2.5毫伏输入
声音 100分贝
调谐器, 磁带演奏, CD, 辅助设备, 电视 100毫伏, T.H.D. 0.3%, 1千赫
输出电平/阻抗
磁带REC (Pin) 150毫伏/3.3千赫
音频响应 RIAA标准曲线 ± 0.5分贝 (20赫至20,000赫)
音频控制
低频 ± 10dB (at 100Hz)
音响控制 + 8分贝, 70赫 (-30分贝音量音平)
综合
功率消耗 220瓦 (IEC)
尺寸 宽: 440毫米
高: 133毫米
深: 281毫米
净重 8.9公斤