



LG Electronics Inc.

P/NO : 3829RGP020N

OCTOBER, 2005

LG Electronics Inc.

MODELS : LH-RH7500SA/LH-RH7700S/LH-RH7505SA
LHS-75SA5S/LHS-75SA5C/LHS-75SA5A

SERVICE MANUAL




HDD/DVD Recorder Receiver System **SERVICE MANUAL**

**MODELS : LH-RH7500SA/LH-RH7700S/LH-RH7505SA
LHS-75SA5S/LHS-75SA5C/LHS-75SA5A**

CAUTION

BEFORE SERVICING THE UNIT, READ THE "SAFETY PRECAUTIONS"
IN THIS MANUAL.

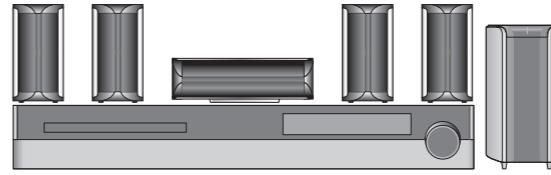

SECTION 1

SUMMARY

CONTENTS

PRODUCT SAFETY SERVICING GUIDELINES FOR VIDEO PRODUCTS	1-2
SERVICING PRECAUTIONS	1-3
THE STEPS FOR CHANGE THE OPTION CODE	1-4
SPECIFICATIONS	1-5

PRODUCT SAFETY SERVICING GUIDELINES FOR VIDEO PRODUCTS

IMPORTANT SAFETY NOTICE

This manual was prepared for use only by properly trained audio-video service technicians.

When servicing this product, under no circumstances should the original design be modified or altered without permission from LG Electronics Corporation. All components should be replaced only with types identical to those in the original circuit and their physical location, wiring and lead dress must conform to original layout upon completion of repairs.

Special components are also used to prevent x-radiation, shock and fire hazard. These components are indicated by the letter "x" included in their component designators and are required to maintain safe performance. No deviations are allowed without prior approval by LG Electronics Corporation.

Circuit diagrams may occasionally differ from the actual circuit used. This way, implementation of the latest safety and performance improvement changes into the set is not delayed until the new service literature is printed.

CAUTION: Do not attempt to modify this product in any way. Never perform customized installations without manufacturer's approval. Unauthorized modifications will not only void the warranty, but may lead to property damage or user injury.

Service work should be performed only after you are thoroughly familiar with these safety checks and servicing guidelines.

GRAPHIC SYMBOLS



The exclamation point within an equilateral triangle is intended to alert the service personnel to important safety information in the service literature.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the service personnel to the presence of noninsulated "dangerous voltage" that may be of sufficient magnitude to constitute a risk of electric shock.



The pictorial representation of a fuse and its rating within an equilateral triangle is intended to convey to the service personnel the following fuse replacement caution notice:


CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ALL FUSES WITH THE SAME TYPE AND RATING AS MARKED NEAR EACH FUSE.

SERVICE INFORMATION

While servicing, use an isolation transformer for protection from AC line shock. After the original service problem has been corrected, make a check of the following:

FIRE AND SHOCK HAZARD

1. Be sure that all components are positioned to avoid a possibility of adjacent component shorts. This is especially important on items trans-ported to and from the repair shop.
2. Verify that all protective devices such as insulators, barriers, covers, shields, strain reliefs, power supply cords, and other hardware have been reinstalled per the original design. Be sure that the safety purpose of the polarized line plug has not been defeated.
3. Soldering must be inspected to discover possible cold solder joints, solder splashes, or sharp solder points. Be certain to remove all loose foreign particles.
4. Check for physical evidence of damage or deterioration to parts and components, for frayed leads or damaged insulation (including the AC cord), and replace if necessary.
5. No lead or component should touch a high current device or a resistor rated at 1 watt or more. Lead tension around protruding metal surfaces must be avoided.
6. After reassembly of the set, always perform an AC leakage test on all exposed metallic parts of the cabinet (the channel selector knobs, antenna terminals, handle and screws) to be sure that set is safe to operate without danger of electrical shock. DO NOT USE A LINE ISOLATION TRANSFORMER DURING THIS TEST. Use an AC voltmeter having 5000 ohms per volt or more sensitivity in the following manner: Connect a 1500 ohm, 10 watt resistor, paralleled by a .15 mfd 150V AC type capacitor between a known good earth ground water pipe, conduit, etc.) and the exposed metallic parts, one at a time. Measure the AC voltage across the combination of 1500 ohm resistor and .15 mfd capacitor. Reverse the AC plug by using a non-polarized adaptor and repeat AC voltage measurements for each exposed metallic part. Voltage measured must not exceed 0.75 volts RMS. This corresponds to 0.5 milliamp AC. Any value exceeding this limit constitutes a potential shock hazard and must be corrected immediately.

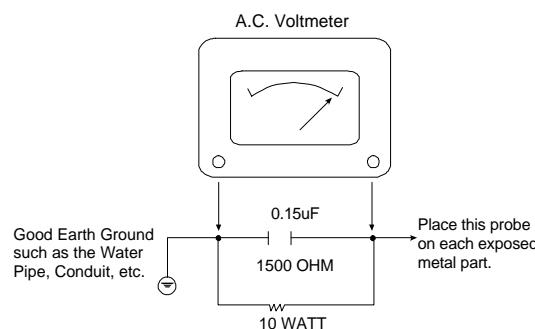

TIPS ON PROPER INSTALLATION

1. Never install any receiver in a closed-in recess, cubbyhole, or closely fitting shelf space over, or close to, a heat duct, or in the path of heated air flow.
2. Avoid conditions of high humidity such as: outdoor patio installations where dew is a factor, near steam radiators where steam leakage is a factor, etc.
3. Avoid placement where draperies may obstruct venting. The customer should also avoid the use of decorative scarves or other coverings that might obstruct ventilation.
4. Wall- and shelf-mounted installations using a commercial mounting kit must follow the factory-approved mounting instructions. A product mounted to a shelf or platform must retain its original feet (or the equivalent thickness in spacers) to provide adequate air flow across the bottom. Bolts or screws used for fasteners must not touch any parts or wiring. Perform leakage tests on customized installations.
5. Caution customers against mounting a product on a sloping shelf or in a tilted position, unless the receiver is properly secured.
6. A product on a roll-about cart should be stable in its mounting to the cart. Caution the customer on the hazards of trying to roll a cart with small casters across thresholds or deep pile carpets.
7. Caution customers against using extension cords. Explain that a forest of extensions, sprouting from a single outlet, can lead to disastrous consequences to home and family.

SERVICING PRECAUTIONS

CAUTION: Before servicing the DVD Recorder Combi Receiver covered by this service data and its supplements and addends, read and follow the *SAFETY PRECAUTIONS*. **NOTE:** if unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions in this publications, always follow the safety precautions.

Remember Safety First:

General Servicing Precautions

1. Always unplug the DVD Recorder Combi Receiver AC power cord from the AC power source before:
 - (1) Removing or reinstalling any component, circuit board, module, or any other assembly.
 - (2) Disconnecting or reconnecting any internal electrical plug or other electrical connection.
 - (3) Connecting a test substitute in parallel with an electrolytic capacitor.
- Caution:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
2. Do not spray chemicals on or near this DVD Recorder Combi Receiver or any of its assemblies.
3. Unless specified otherwise in this service data, clean electrical contacts by applying an appropriate contact cleaning solution to the contacts with a pipe cleaner, cotton-tipped swab, or comparable soft applicator.
Unless specified otherwise in this service data, lubrication of contacts is not required.
4. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service manual might be equipped.
5. Do not apply AC power to this DVD Recorder Combi Receiver and / or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
6. Always connect the test instrument ground lead to an appropriate ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power on. Connect an insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between each blade of the attachment plug and accessible conductive parts (Note 1) should be more than 1M-ohm.


Note 1: Accessible Conductive Parts include Metal panels, Input terminals, Earphone jacks,etc.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor chip components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate an electrical charge sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil, or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
- Caution:** Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Normally harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

THE STEPS FOR CHANGE THE OPTION CODE

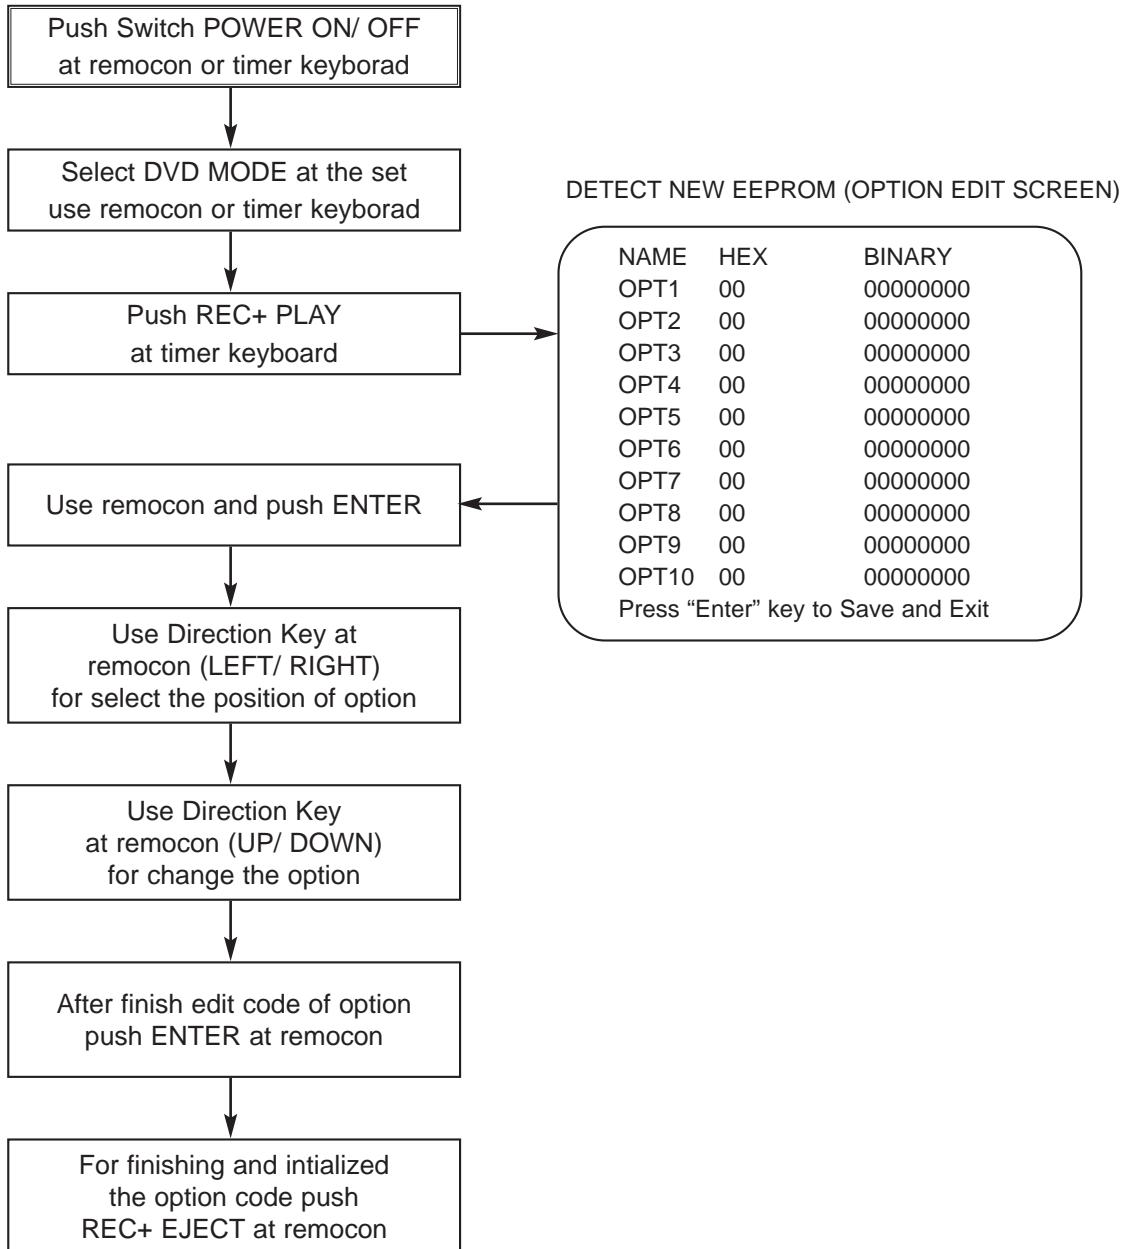

SPECIFICATIONS

GENERAL

Power requirements	AC 200-240V, 50/60 Hz
Power consumption	45W
Dimensions (approx.)	430 X 49 X 350 mm (w x h x d) without foot
Mass (approx.)	4.6 kg
Operating temperature	5°C to 35°C
Operating humidity	5 % to 90 %
Recording format	PAL

RECORDING

Recording format	DVD Video Recording, DVD-VIDEO
Recordable media	HDD (160GB), DVD-ReWritable, DVD-Recordable, DVD+ReWritable, DVD+Recordable, DVD+Recordable (Double Layer)
Recordable time	DVD (4.7GB): Approx. 1 hour (HQ mode), 2 hours (SQ mode), 4 hours (LQ mode), 6 hours (EQ mode) DVD+R DL (8.5GB): Approx. 3 hour (HQ mode), 3 hours 40 minutes (SQ mode), 7 hours 10 minutes (LQ mode), 10 hours 30 minutes (EQ mode)
	HDD (160GB): Approx. 42 hours (HQ mode), 82 hours (SQ mode), 152 hours (LQ mode), 226 hours (EQ mode)

VIDEO RECORDING FORMAT

Sampling frequency	27MHz
Compression format	MPEG 2 (VBR support)

AUDIO RECORDING FORMAT

Sampling frequency	48kHz
Compression format	Dolby Digital

PLAYBACK

Frequency response	DVD (PCM 48 kHz): 8 Hz to 20 kHz, CD: 8 Hz to 20 kHz
Signal-to-noise ratio	DVD (PCM 96 kHz): 8 Hz to 44 kHz
Harmonic distortion	More than 100 dB (AUDIO OUT connector)
Dynamic range	Less than 0.008% (AUDIO OUT connector) More than 95 dB (AUDIO OUT connector)

INPUTS

AERIAL IN	Aerial input, 75 ohms
VIDEO IN	1.0 Vp-p 75 ohms, sync negative, RCA jack x 2 / SCART x 2
AUDIO IN	0 dBm more than 47 kohms, RCA jack (L, R) x 2 / SCART x 2
DV IN	4 pin (IEEE 1394 standard)

OUTPUTS

VIDEO OUT	1 Vp-p 75 Ω, sync negative, RCA jack x 1 / SCART x 2
COMPONENT VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, negative sync, RCA jack x 1 (Pb)/(Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2
HDMI video/audio output	19 pin (HDMI standard, Type A)
Audio output (digital audio)	0.5 V (p-p), 75 Ω, RCA jack x 1
Audio output (optical audio)	3 V (p-p), 75 Ω, Optical connector x 1
Audio output (analog audio)	2.0 Vrms (1 KHz, 0 dB), 600 Ω, RCA jack (L, R) x 1 / SCART x 2

AMPLIFIER(LH-RH7000 SERIES)

Stereo mode	100W + 100W (6Ω at 1 kHz, THD 10 %)
Surround mode	Front: 100W + 100W (THD 10 %)
(* Depending on the sound mode settings and the source, there may be no sound output.)	Center*: 100W
	Surround*: 100W + 100W (6Ω at 1 kHz, THD 10 %)
	Subwoofer*: 200W (3Ω at 30 Hz, THD 10 %)

AMPLIFIER(LH-RH9000 SERIES)

Stereo mode	180W + 180W (4Ω at 1 kHz, THD 10 %)
Surround mode	Front: 180W + 180W (THD 10 %)
(* Depending on the sound mode settings and the source, there may be no sound output.)	Center*: 180W
	Surround*: 180W + 180W (4Ω at 1 kHz, THD 10 %)
	Subwoofer*: 300W (3Ω at 30 Hz, THD 10 %)

TUNER SPECIFICATIONS

Tuning Range (FM)	87.5 - 108 MHz
Intermediate Frequency (FM)	10.7 MHz
Signal-to-noise ratio	60 dB (Mono)
Tuning Range (AM)	522 - 1,620 kHz
Intermediate Frequency (AM)	450 kHz
Antenna	Wire antenna (FM) Loop antenna (AM)

SPEAKERS(LHS-75PA5)

	FRONT (LHS-75PA5F)	SATELLITE (LHS-75PA5S)	CENTER (LHS-75PA5C)	ACTIVE SUBWOOFER (LHS-75PA5A)
Power consumption:	-	-	-	70W
Type:	1 Way 2 Speaker	1 Way 1 Speaker	1 Way 2 Speaker	1 Way 1 Speaker
Impedance:	6 Ω	3 Ω	6 Ω	3 Ω
Frequency Response:	100 - 20,000 Hz	100 - 20,000 Hz	80 - 20,000 Hz	35 - 1,500 Hz
Sound Pressure Level:	85 dB/W (1m)	85 dB/W (1m)	85 dB/W (1m)	83 dB/W (1m)
Max Input Power:	100W	100W	100W	200W
Net Dimensions (WxHxD):	269.5x1200x269.5mm	120x223x151mm	448x85x105mm	295x432x414mm
Net Weight:	2.9 kg	1.1 kg	1.2 kg	14 kg

SPEAKERS(LHS-75SA5)

	SATELLITE (LHS-75SA5S)	CENTER (LHS-75SA5C)	ACTIVE SUBWOOFER (LHS-75SA5A)
Power consumption:	-	-	70W
Type:	1 Way 1 Speaker	1 Way 1 Speaker	1 Way 1 Speaker
Impedance:	6 Ω	6 Ω	3 Ω
Frequency Response:	100 - 20,000 Hz	0 - 20,000 Hz	35 - 1,500 Hz
Sound Pressure Level:	85 dB/W (1m)	85 dB/W (1m)	83 dB/W (1m)
Max Input Power:	100W	100W	200W
Net Dimensions (WxHxD):	120 x 223 x 151 mm	301 x 85 x 105 mm	295 x 432 x 414 mm
Net Weight:	1.1 kg	1.2 kg	14 kg

SPEAKERS(LHS-75TA5)

	SATELLITE (LHS-75TA5S)	CENTER (LHS-75TA5C)	ACTIVE SUBWOOFER (LHS-75TA5A)
Power consumption:	-	-	70W
Type:	1 Way 2 Speaker	1 Way 2 Speaker	1 Way 1 Speaker
Impedance:	6 Ω	6 Ω	3 Ω
Frequency Response:	80 - 20,000 Hz	80 - 20,000 Hz	35 - 1,500 Hz
Sound Pressure Level:	85 dB/W (1m)	85 dB/W (1m)	83 dB/W (1m)
Max. Input Power:	100W	100W	200W
Net Dimensions (WxHxD):	269.5 x 1200 x 269.5 mm	448 x 85 x 105 mm	295 x 432 x 414 mm
Net Weight:	2.9 kg	1.2 kg	14 kg

SPEAKERS(LHS-95TA9)

	SATELLITE (LHS-95TA9S)	CENTER (LHS-95TA9C)	ACTIVE SUBWOOFER (LHS-95TA9A)
Power consumption:	-	-	110W
Type:	1 Way 2 Speaker	1 Way 2 Speaker	1 Way 1 Speaker
Impedance:	4 Ω	4 Ω	3 Ω
Frequency Response:	80 - 20,000 Hz	80 - 20,000 Hz	35 - 1,500 Hz
Sound Pressure Level:	85 dB/W (1m)	85 dB/W (1m)	83 dB/W (1m)
Max. Input Power:	180W	180W	300W
Net Dimensions (WxHxD):	269.5 x 1200 x 269.5 mm	448 x 85 x 105 mm	295 x 432 x 414 mm
Net Weight:	2.9 kg	1.2 kg	14 kg

SECTION 2


EXPLODED VIEWS

CONTENTS


EXPLODED VIEWS	2-2
1. Cabinet and Main Frame Section	2-2
2. Deck Mechanism (RL-05)	2-3
3. SPEAKER Section	2-4
1) Woofer Speaker Section	2-4
2) Center Speaker Section (OPTIONAL PART)	2-5
3) Rear Section (OPTIONAL PART).....	2-6
4) Front Speaker Section (OPTIONAL PART)	2-7
5) Center Speaker Section (OPTIONAL PART)	2-8

EXPLODED VIEWS

1. CABINET AND MAIN FRAME SECTION

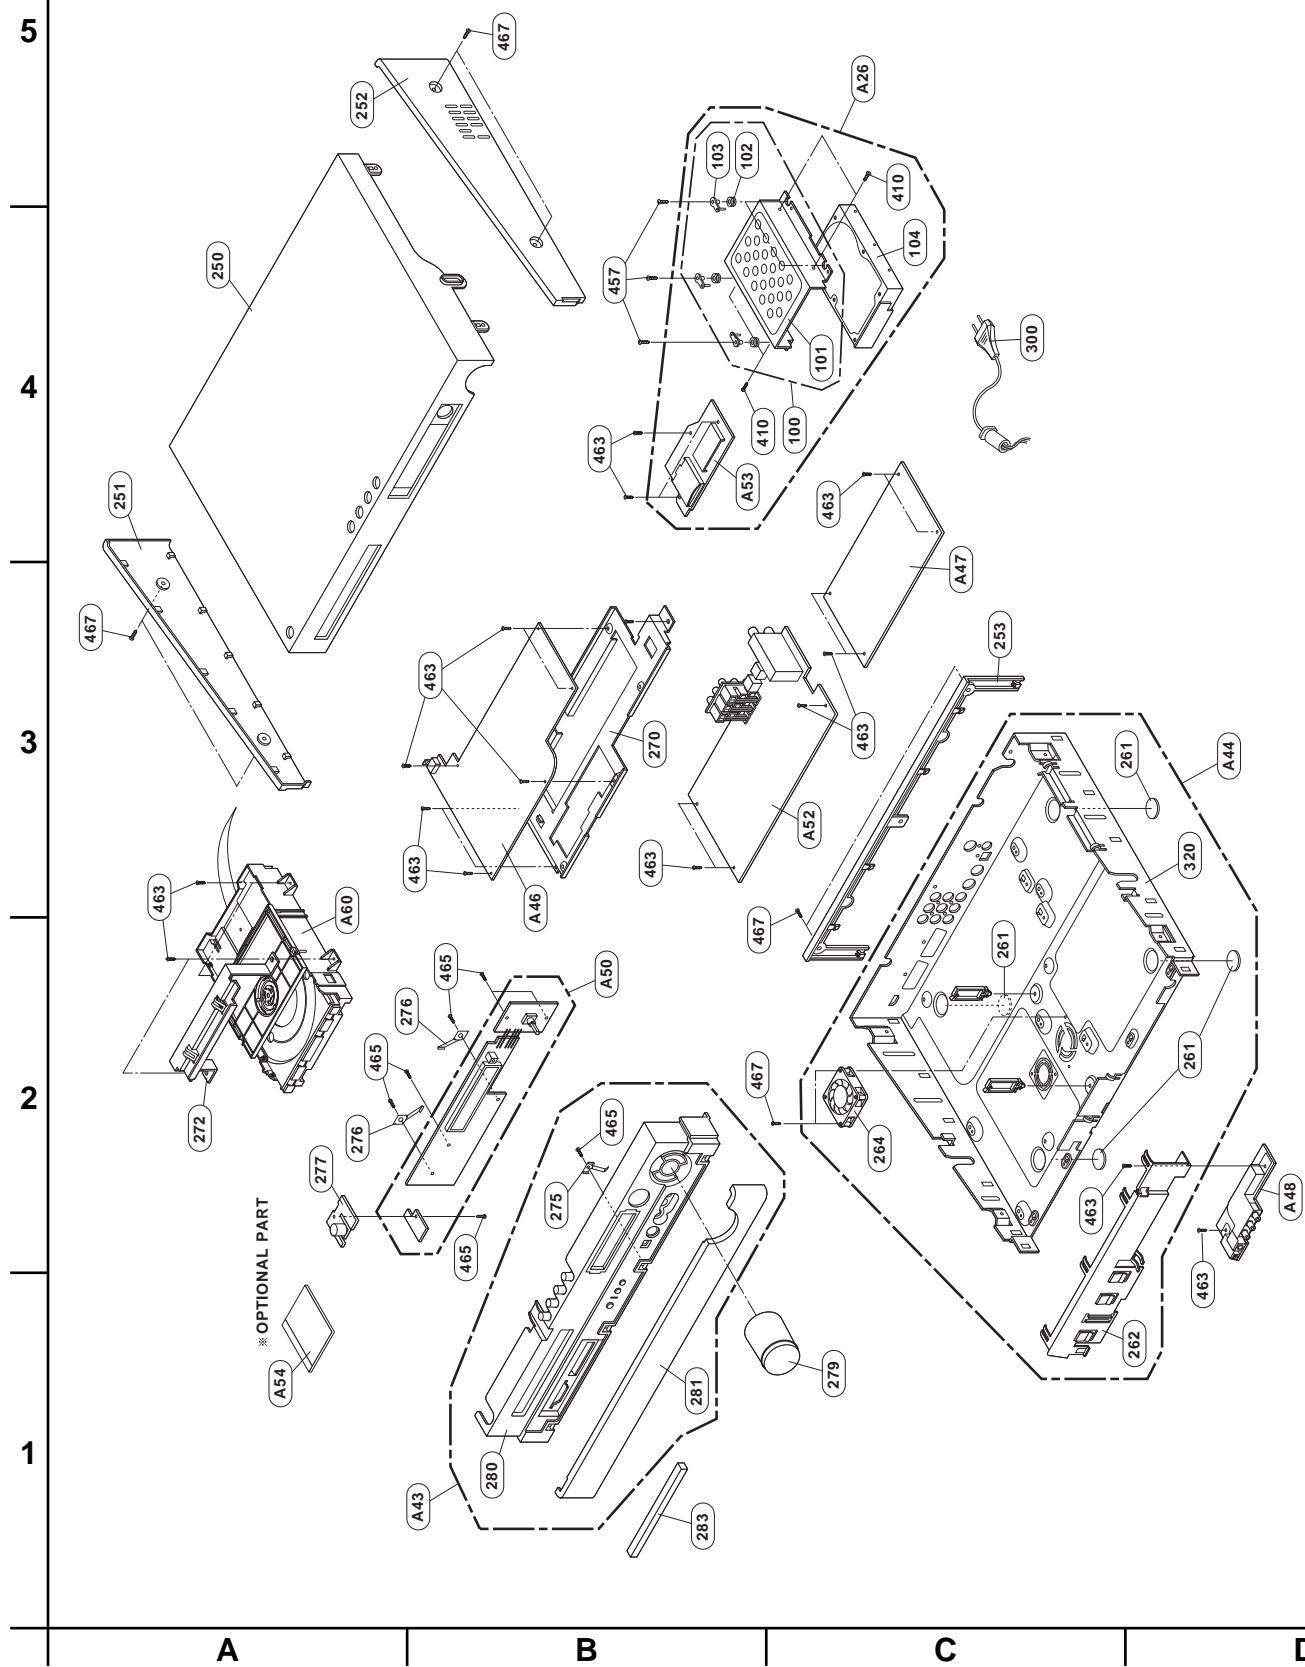


2. DECK MECHANISM SECTION (RL-05)

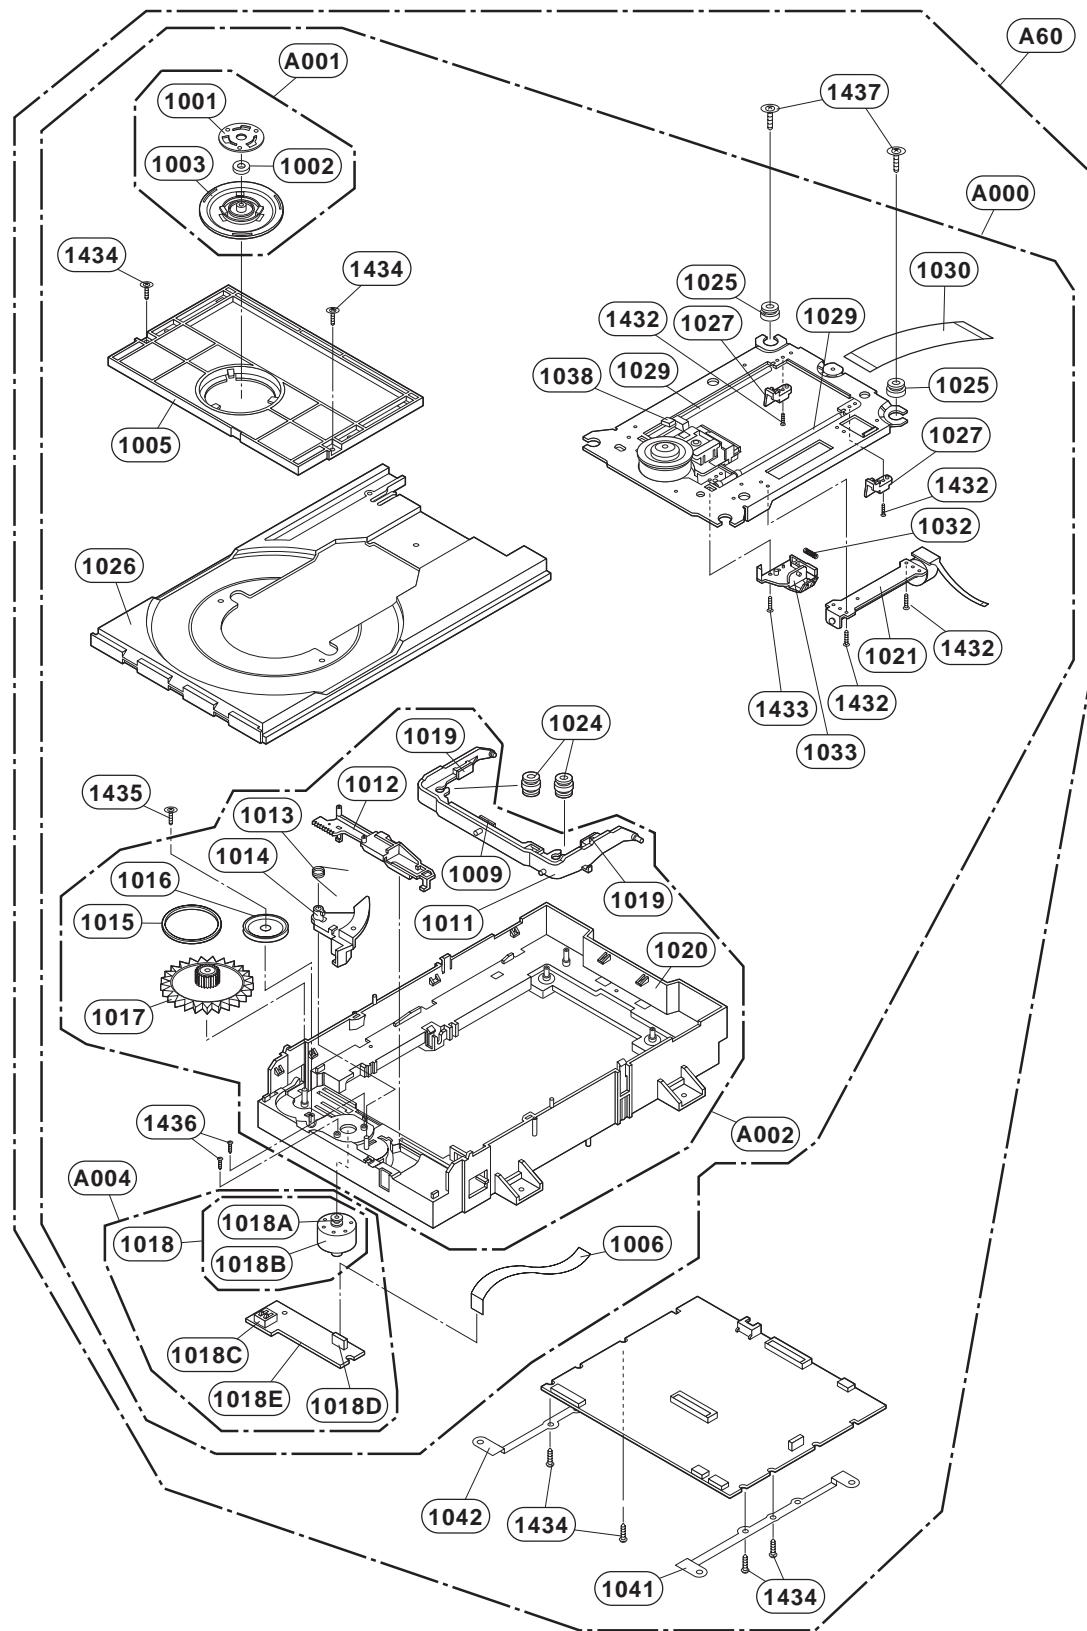


3. SPEAKER SECTION

1) WOOFER SPEAKER SECTION


(LHS-75PA5A/LHS-75TA5A/LHS-75SA5A/LHS-95PA5A/LHS-95TA5A/LHS-95SA5A)

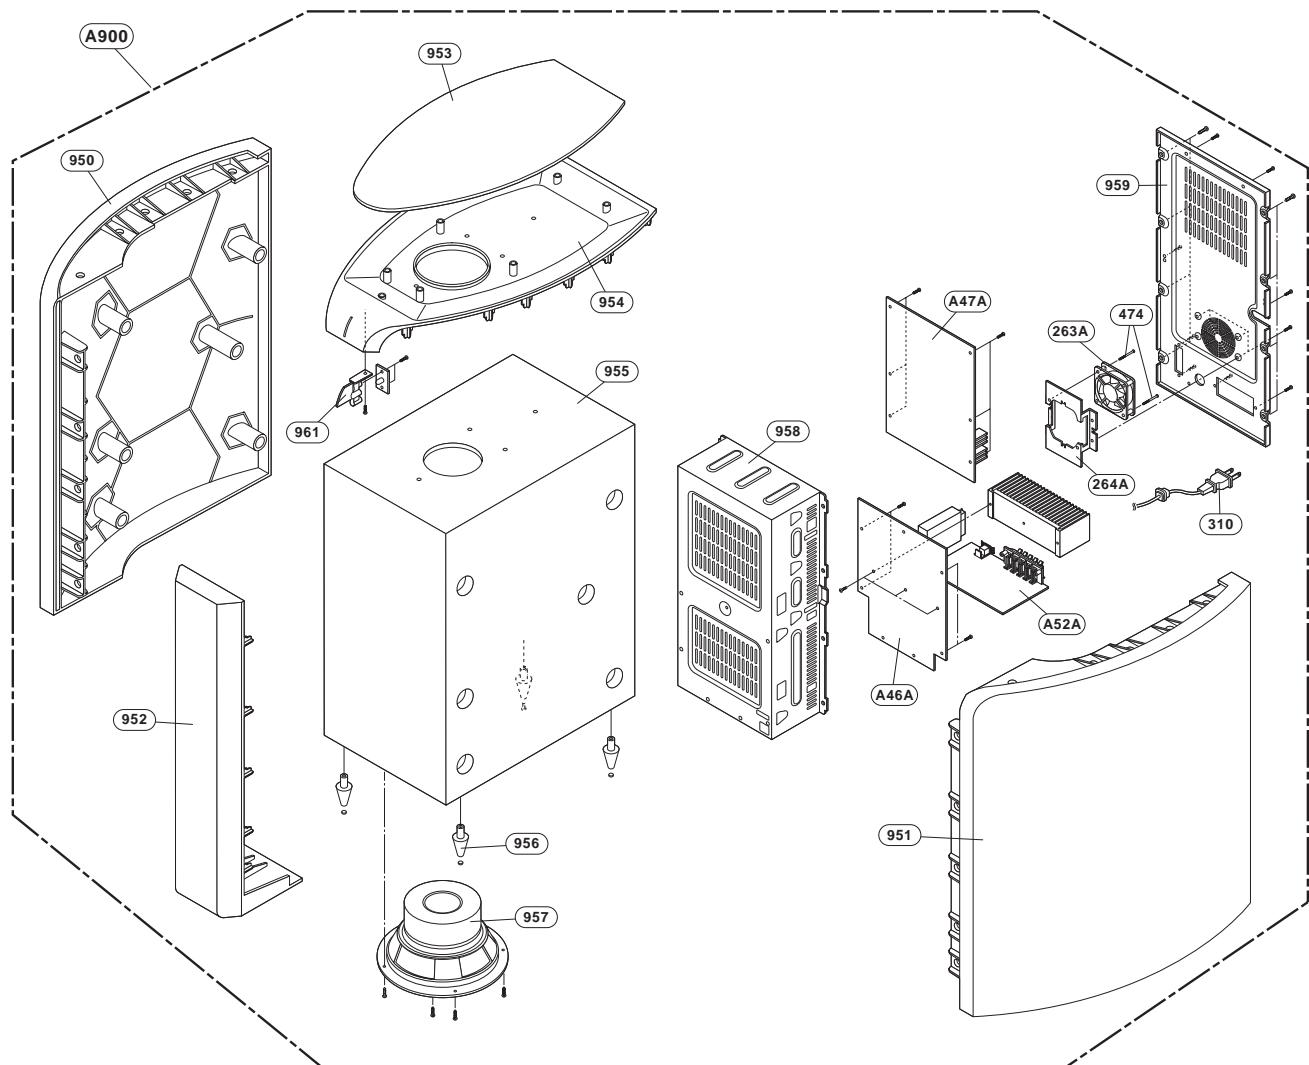


2) CENTER SPEAKER SECTION (OPTIONAL PART)
(LHS-75PA5C/LHS-75TA5C/LHS-95PA5C/LHS-95TA5C)

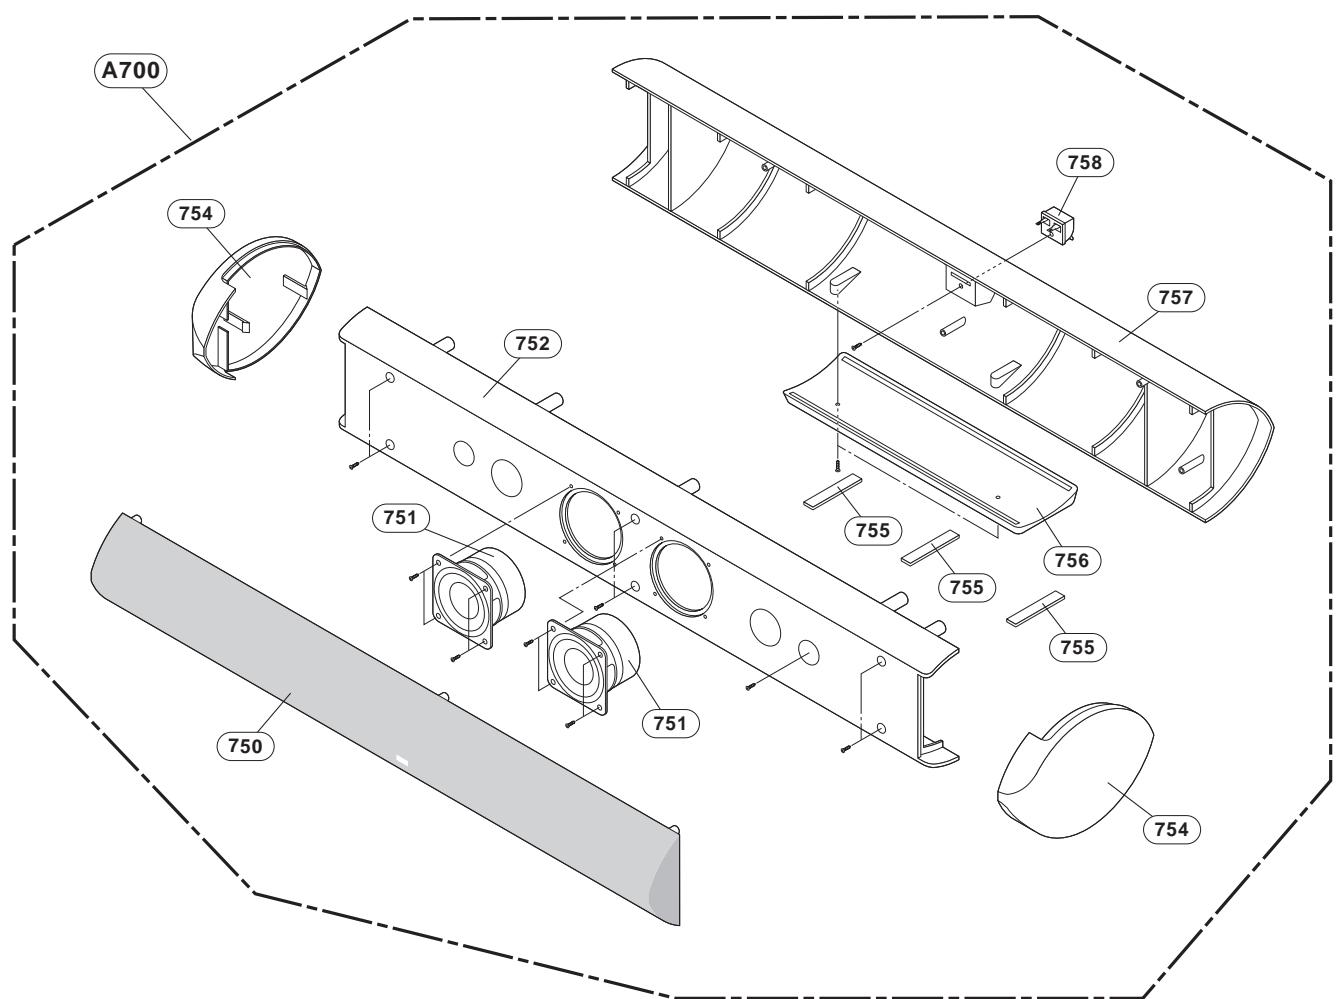


3) REAR SECTION (OPTIONAL PART)
(LHS-75PA5S/LHS-75SA5S/LHS-95PA5S/LHS-95SA5S)

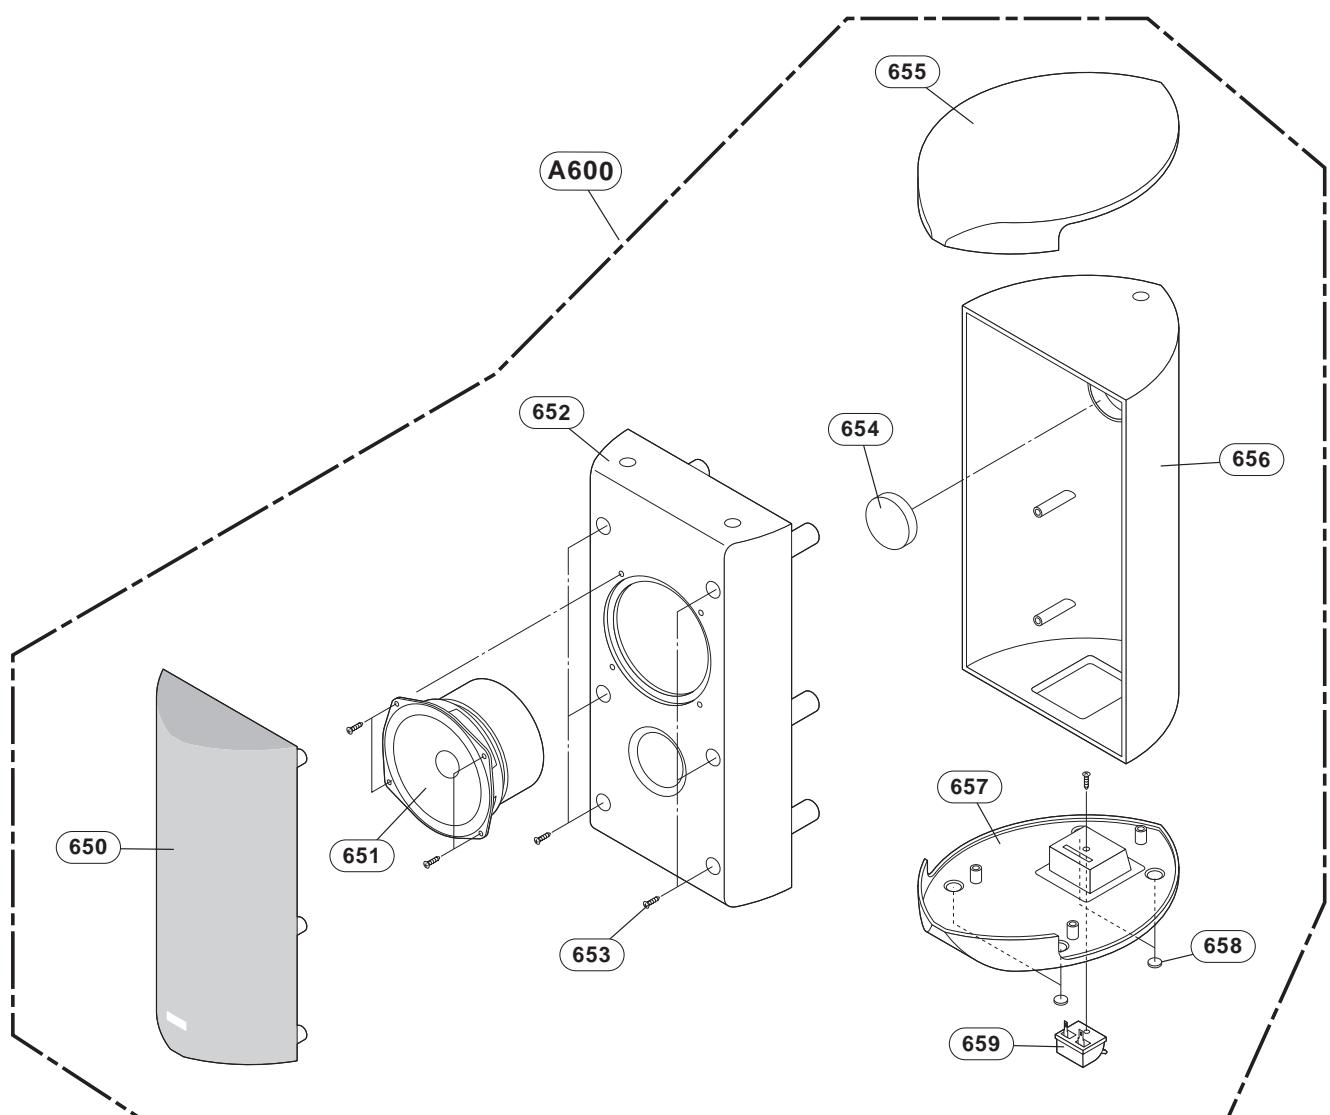

4) FRONT SPEAKER SECTION (OPTIONAL PART)
(LHS-75PA5F/LHS-75TA5S/LHS-95PA5F/LHS-95TA5S)

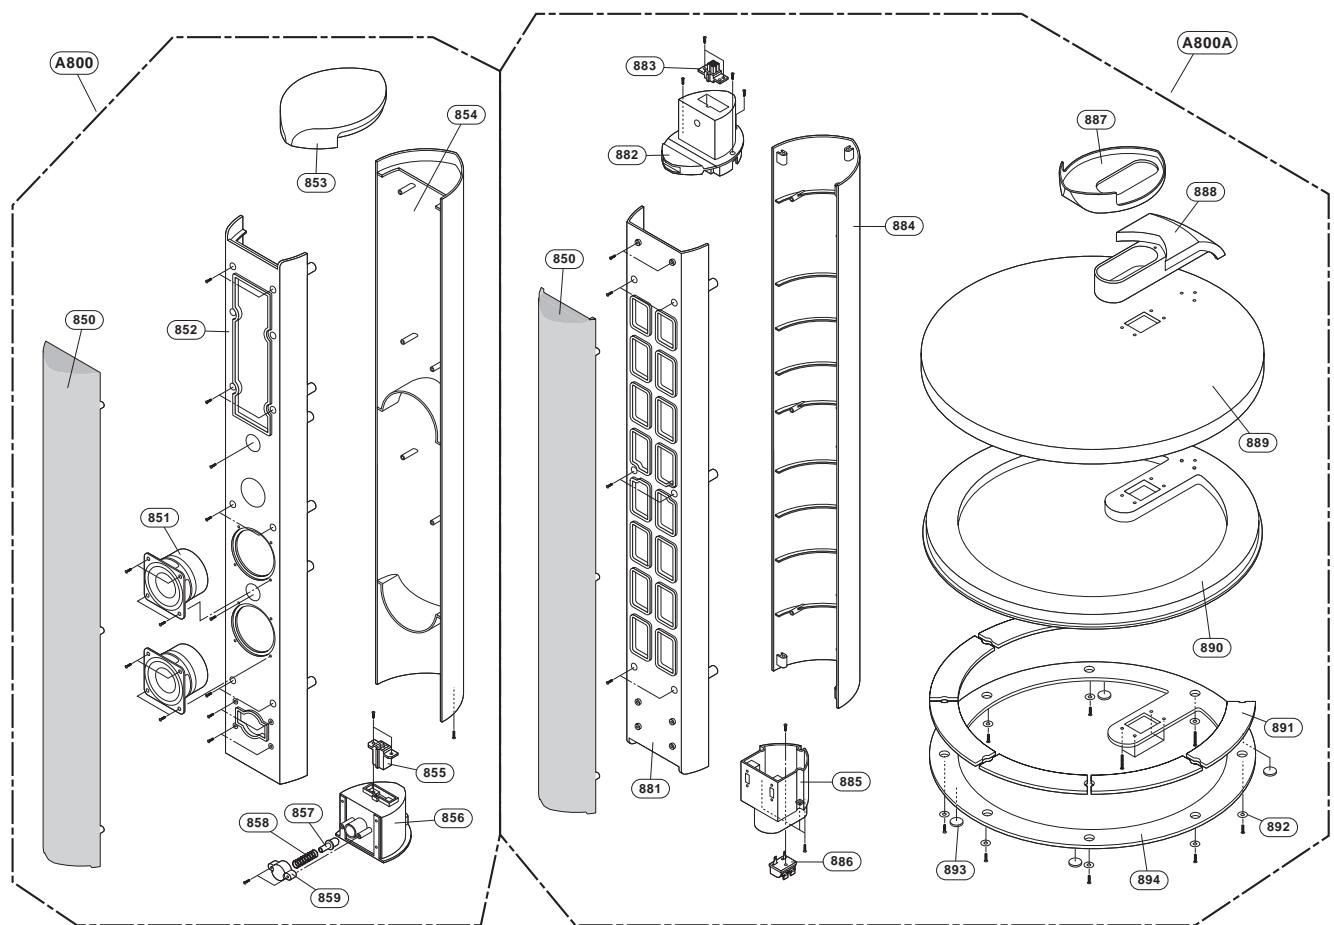

5) CENTER SPEAKER SECTION (OPTIONAL PART)
(LHS-75SA5C/LHS-95SA5C)

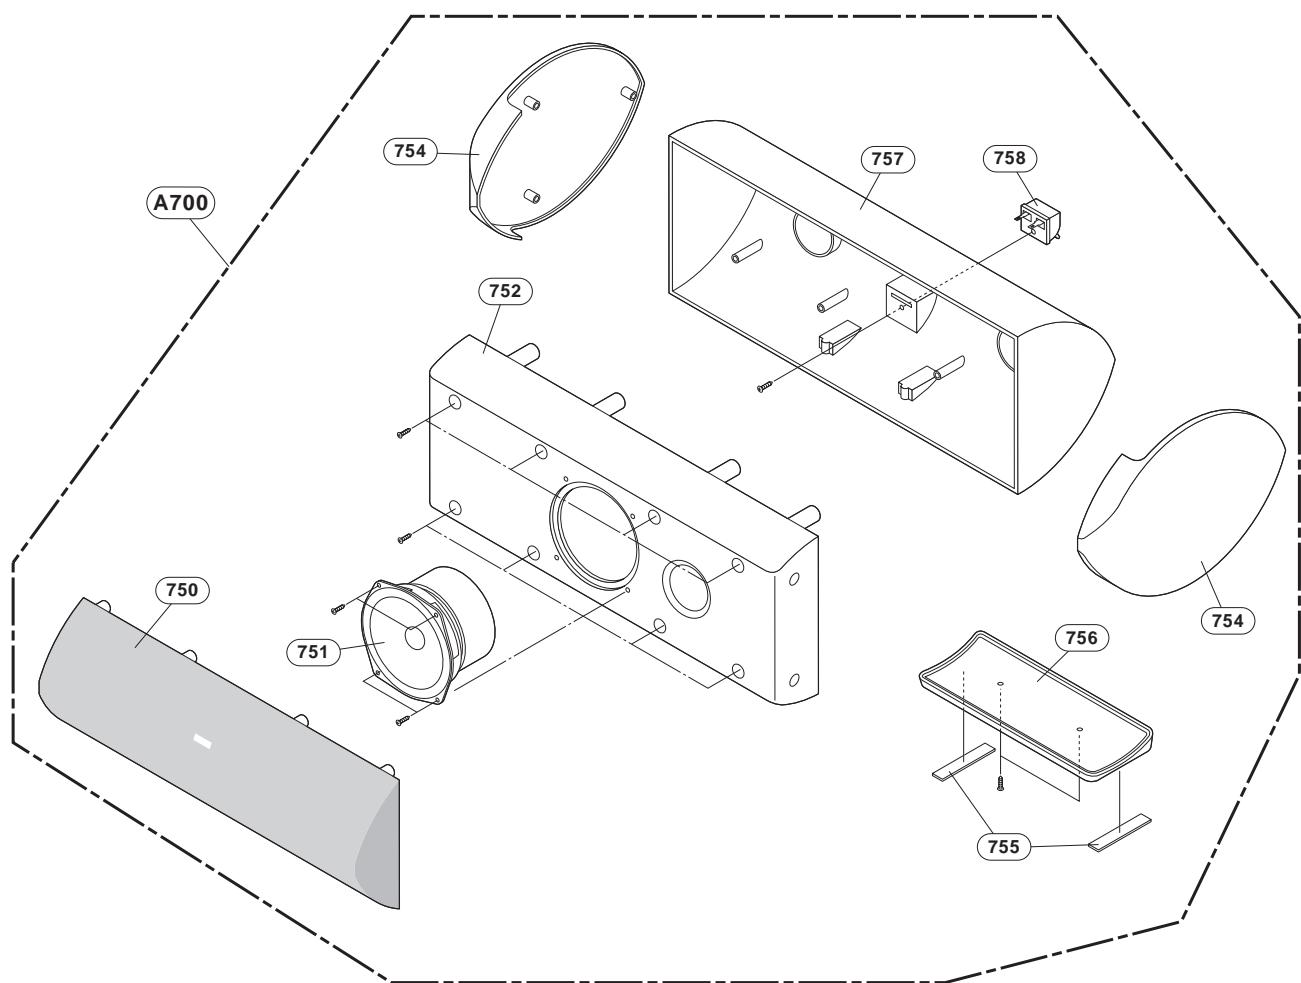

SECTION 3

ELECTRICAL


CONTENTS




OVERALL WIRING DIAGRAM.....	3-2	WOOFER PART
HDR PART		
ELECTRICAL TROUBLESHOOTING		
GUIDE.....	3-2	
1. SMPS I/O PART	3-2	
2. SMPS DVD/HDD PART.....	3-5	
3. SYSTEM CIRCUIT PART	3-8	
4. DISC NOT RECOGNIZED.....	3-8	
5. WHEN PLAYING DISC, NO AUDIO OUTPUT	3-9	
6. NO OPTICAL/DIGITAL OUTPUT	3-10	
7. NO TUNER AUDIO OUTPUT	3-11	
8. NO EXTERNAL INPUT AUDIO	3-12	
9. NO RGB/COMPONENT VIDEO SIGNAL WHEN PLAY DISC	3-13	
10. NO COMPOSITE/S-VIDEO SIGNAL WHEN PLAY DISC	3-13	
11. NO TV, EXTERNAL INPUT VIDEO SIGNAL	3-14	
12. NO DV(IEEE 1394)INPUT(VIDEO/AUDIO) SIGNAL.....	3-15	
BLOCK DIAGRAMS.....	3-16	
1. OVERALL H/W BLOCK DIAGRAM	3-16	
2. LAYOUT CONNECTION BLOCK DIAGRAM	3-18	
3. SMPS BLOCK DIAGRAM	3-20	
4. IN/OUT BLOCK DIAGRAM.....	3-22	
5. VIDEO BLOCK DIAGRAM	3-24	
6. AUDIO BLOCK DIAGRAM	3-26	
CIRCUIT DIAGRAMS.....	3-28	
1. POWER(SMPS) CIRCUIT DIAGRAM	3-28	
2. I/O MICOM CIRCUIT DIAGRAM	3-30	
3. I/O CIRCUIT DIAGRAM.....	3-32	
4. LSI CIRCUIT DIAGRAM	3-34	
5. FLASH/DDR CIRCUIT DIAGRAM	3-36	
6. RESET/RATCH CIRCUIT DIAGRAM	3-38	
7. HDMI/IEE1394 CIRCUIT DIAGRAM	3-40	
8. VIDEO DECODER CIRCUIT DIAGRAM	3-42	
9. INTERFACE CIRCUIT DIAGRAM	3-44	
10. FRONT CIRCUIT DIAGRAM	3-46	
11. FRONT PWR KEY CIRCUIT DIAGRAM.....	3-48	
12. FRONT JACK CIRCUIT DIAGRAM.....	3-50	
• CIRCUIT VOLTAGE CHART	3-52	
PRINTED CIRCUIT DIAGRAMS.....	3-54	
1. MAIN P.C.BOARD (TOP VIEW)	3-54	
2. MAIN P.C.BOARD (BOTTOM VIEW)	3-56	
3. POWER P.C.BOARD.....	3-58	
4. JACK P.C.BOARD	3-58	
5. I/O P.C.BOARD (TOP VIEW).....	3-60	
6. I/O P.C.BOARD (BOTTOM VIEW).....	3-62	
7. KEY P.C.BOARD	3-64	
8. TIMER P.C.BOARD	3-64	
ELECTRICAL TROUBLESHOOTING		
GUIDE.....	3-66	
BLOCK DIAGRAMS	3-67	
1. WIRING DIAGRAM		
2. BLOCK DIAGRAM.....	3-69	
CIRCUIT DIAGRAMS	3-71	
1. SMPS CIRCUIT DIAGRAM_700W.....	3-71	
2. SMPS CIRCUIT DIAGRAM_1200W.....	3-73	
3. AMP CIRCUIT DIAGRAM.....	3-75	
4. MICOM & DSP CIRCUIT DIAGRAM	3-77	
5. DSP CIRCUIT DIAGRAM	3-79	
6. I/O JACK CIRCUIT DIAGRAM	3-81	
PRINTED CIRCUIT DIAGRAMS	3-83	
1. MAIN & WOOFER P.C.BOARD (TOP VIEW).....	3-83	
2. MAIN & WOOFER P.C.BOARD (BOTTOM VIEW).....	3-85	
3. POWER P.C.BOARD.....	3-87	
4. I/O JACK P.C.BOARD	3-89	


HDR PART

ELECTRICAL TROUBLESHOOTING GUIDE


1. SMPS I/O PART




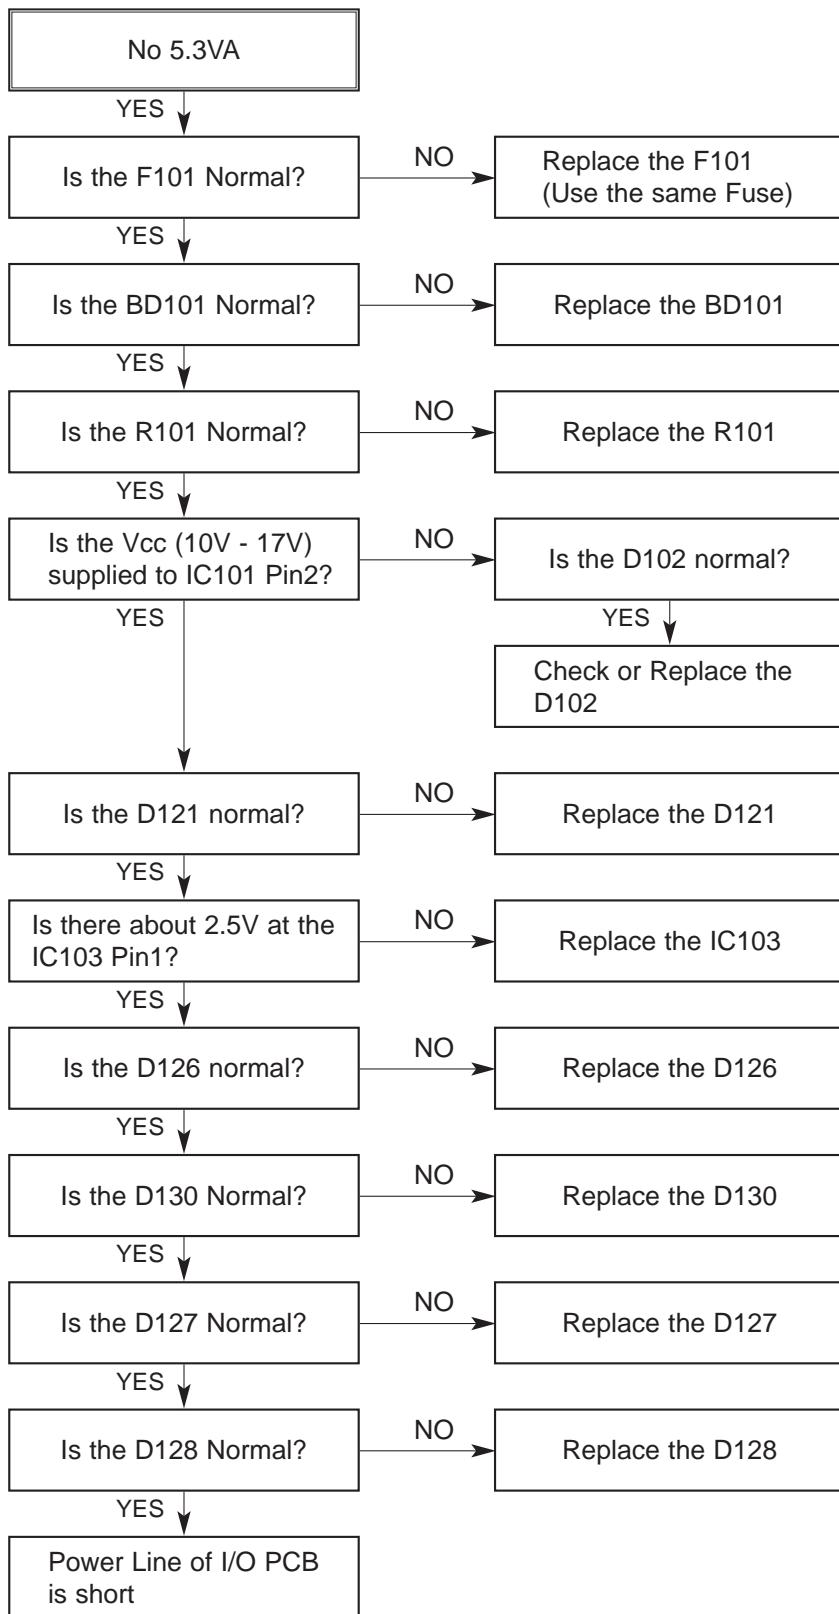


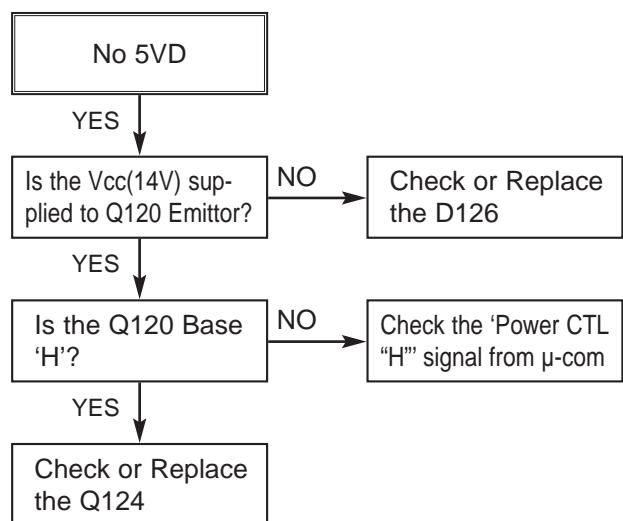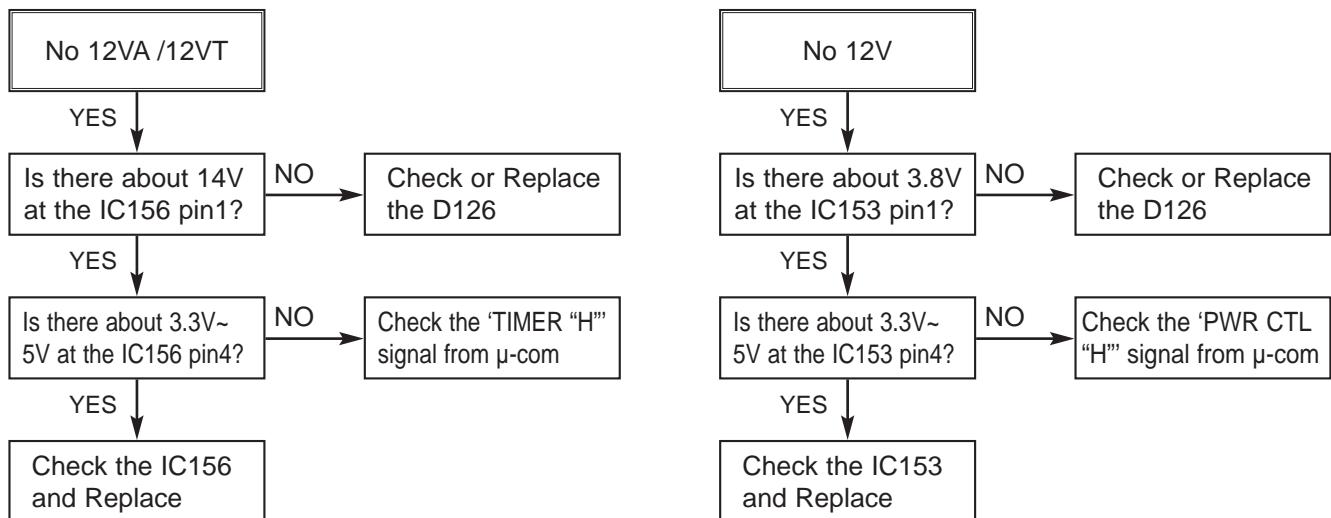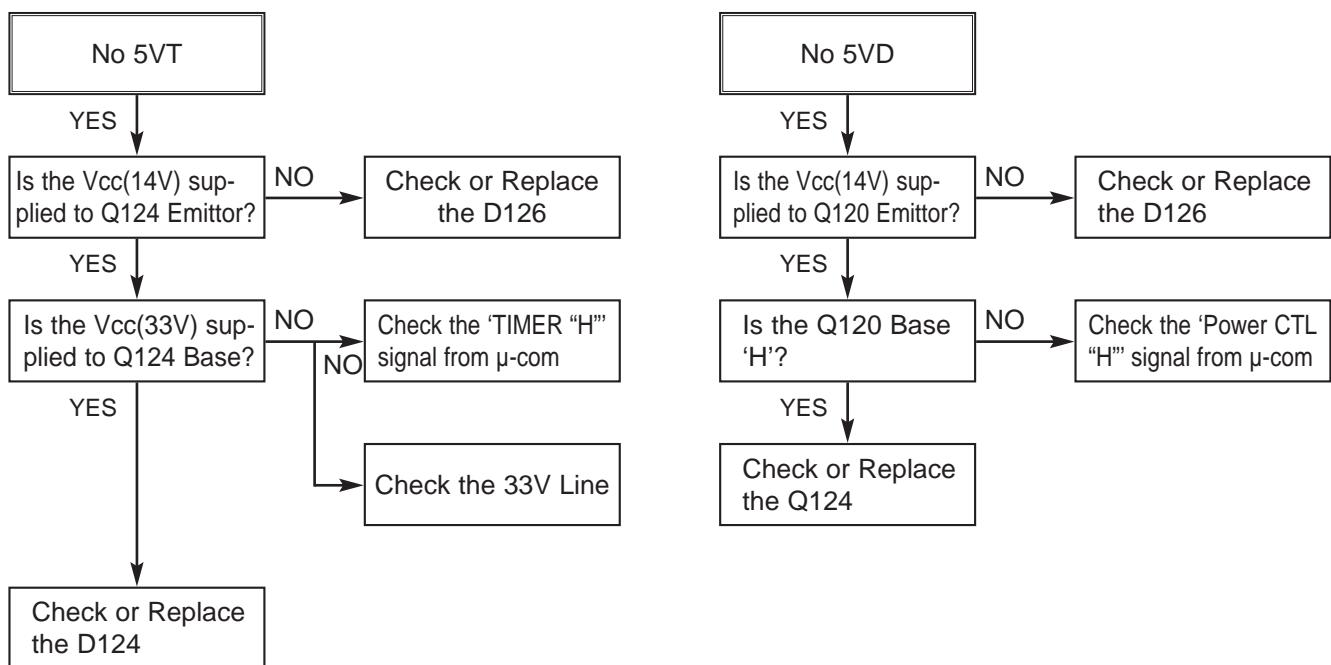


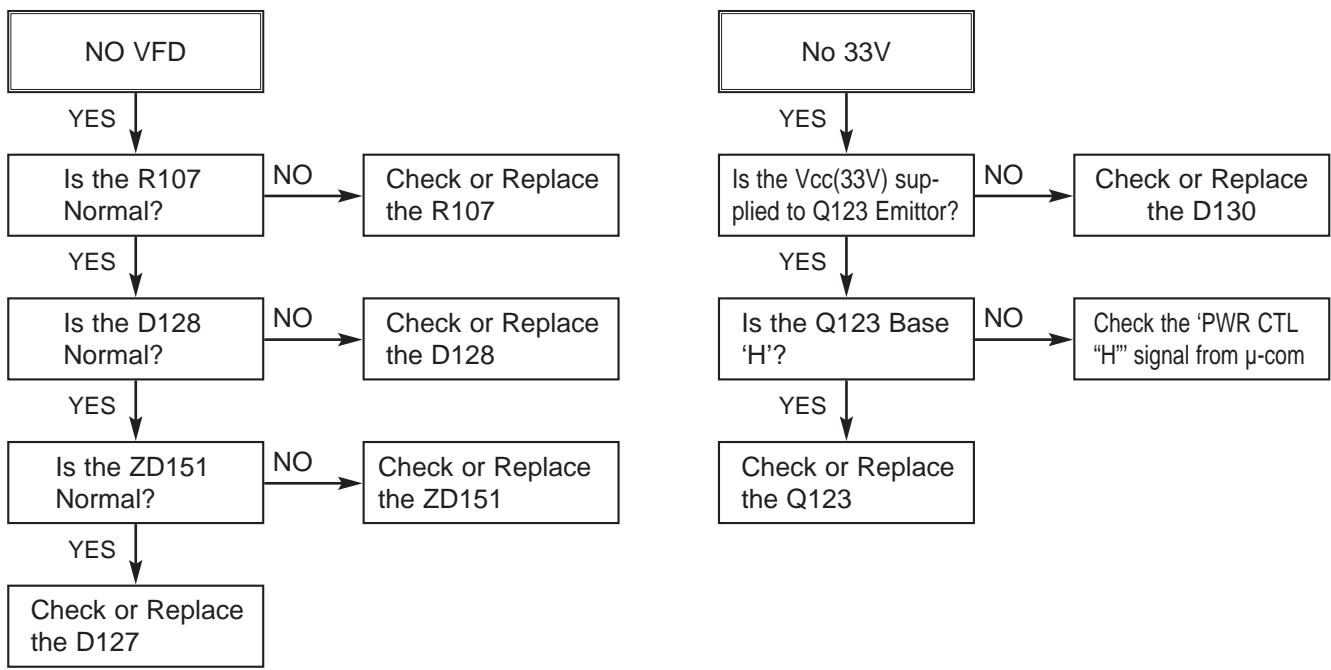


2. SMPS DVD/HDD PART

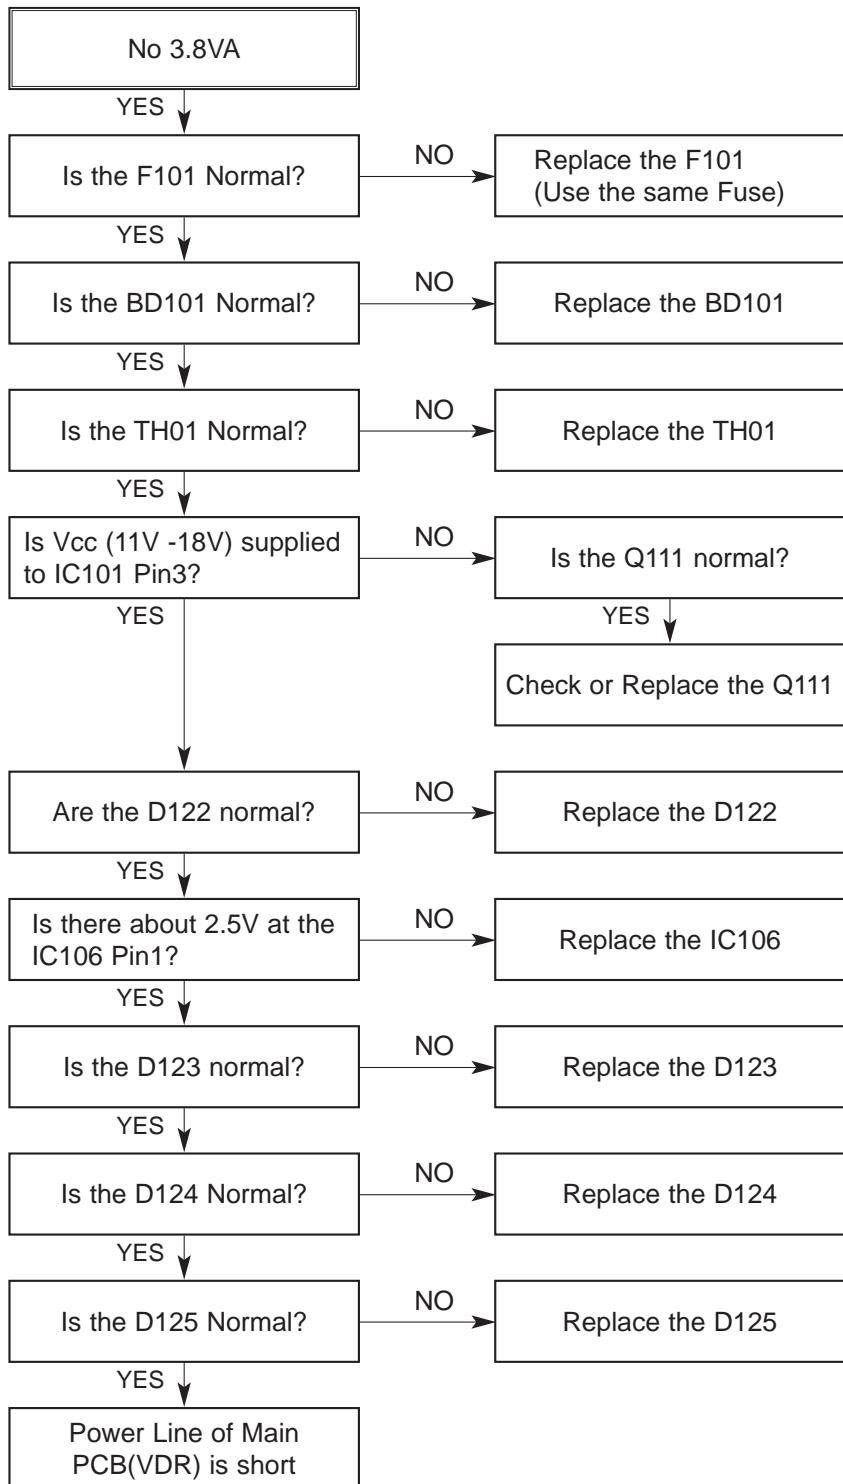

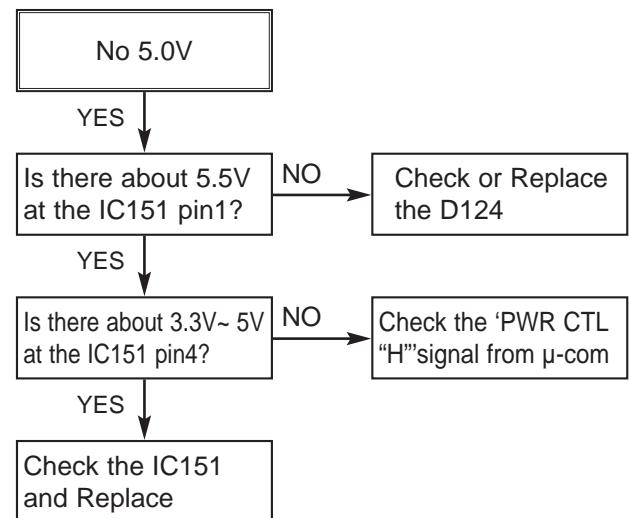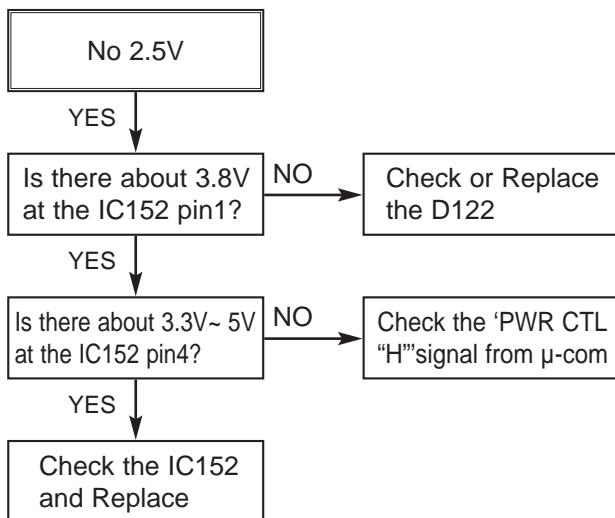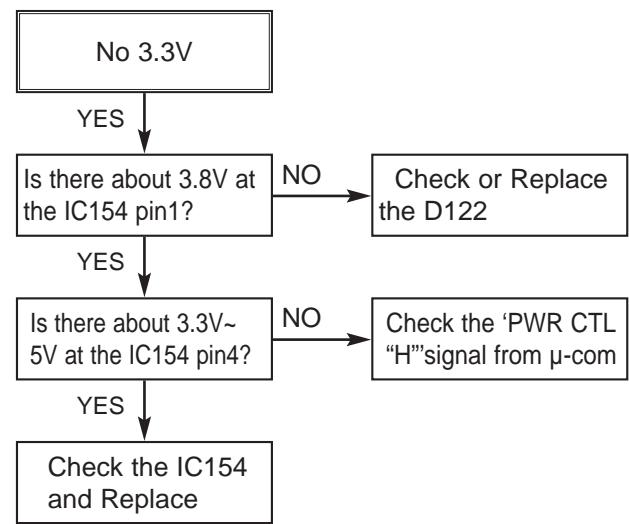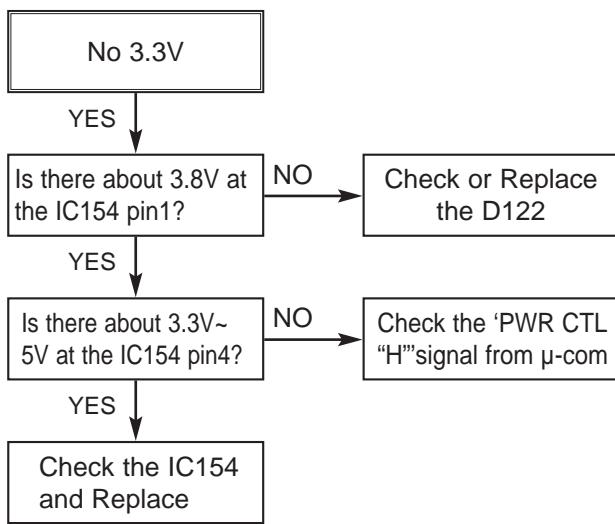


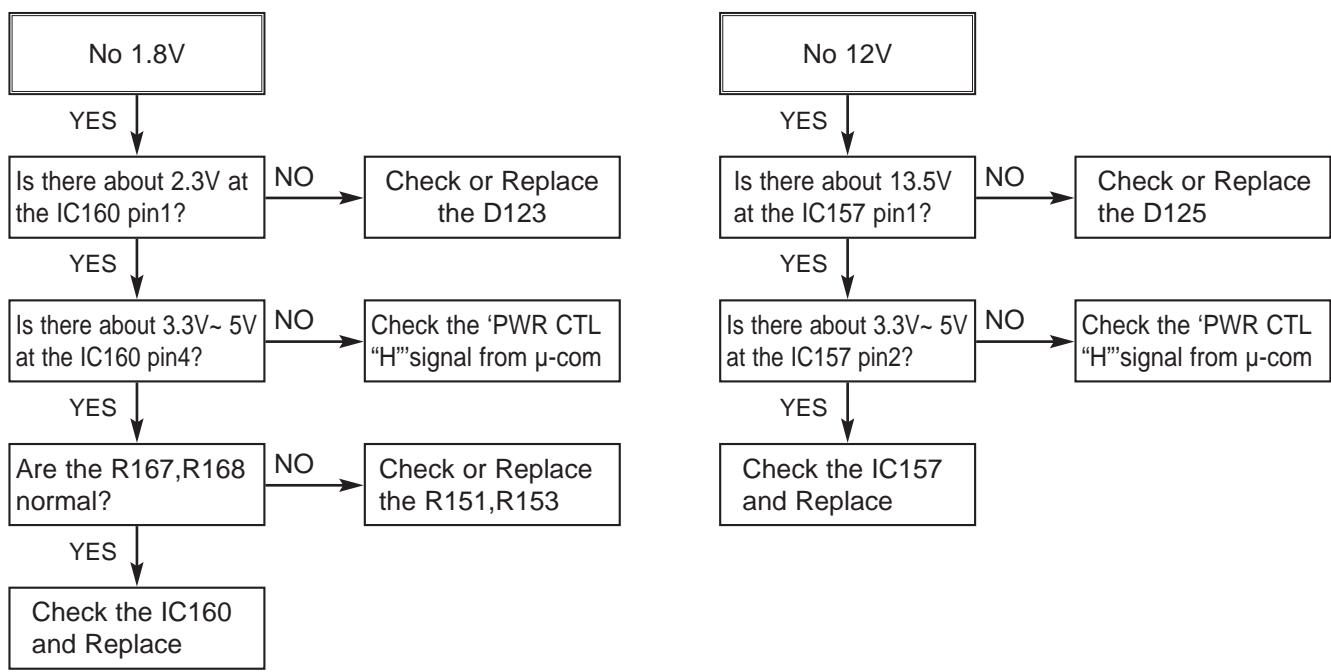


3. SYSTEM Circuit PART

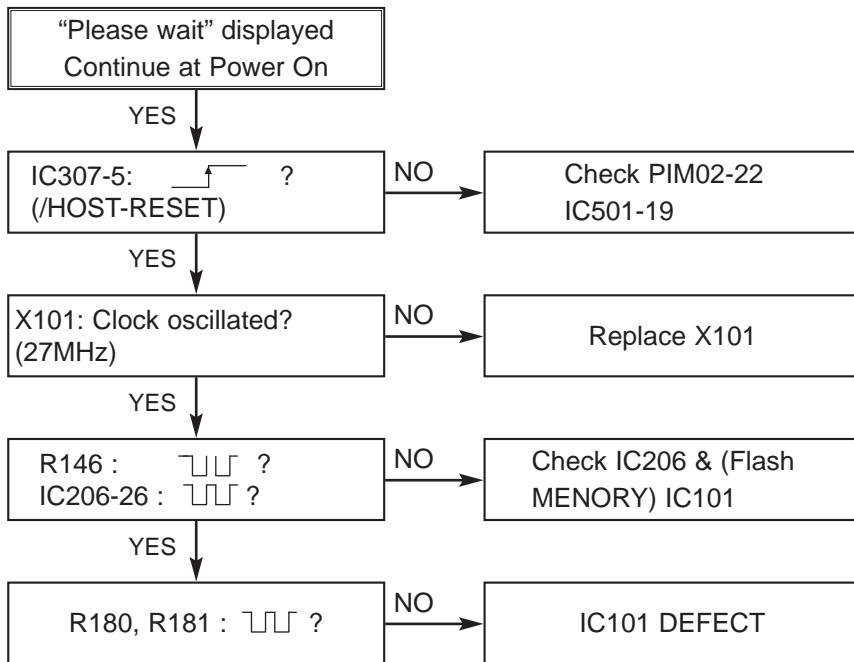


4. DISC not recognized

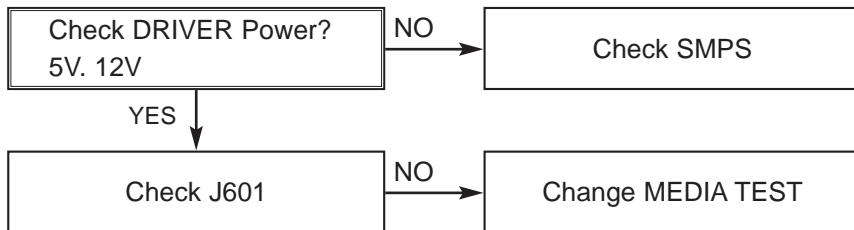


5. When playing DISC, no Audio output

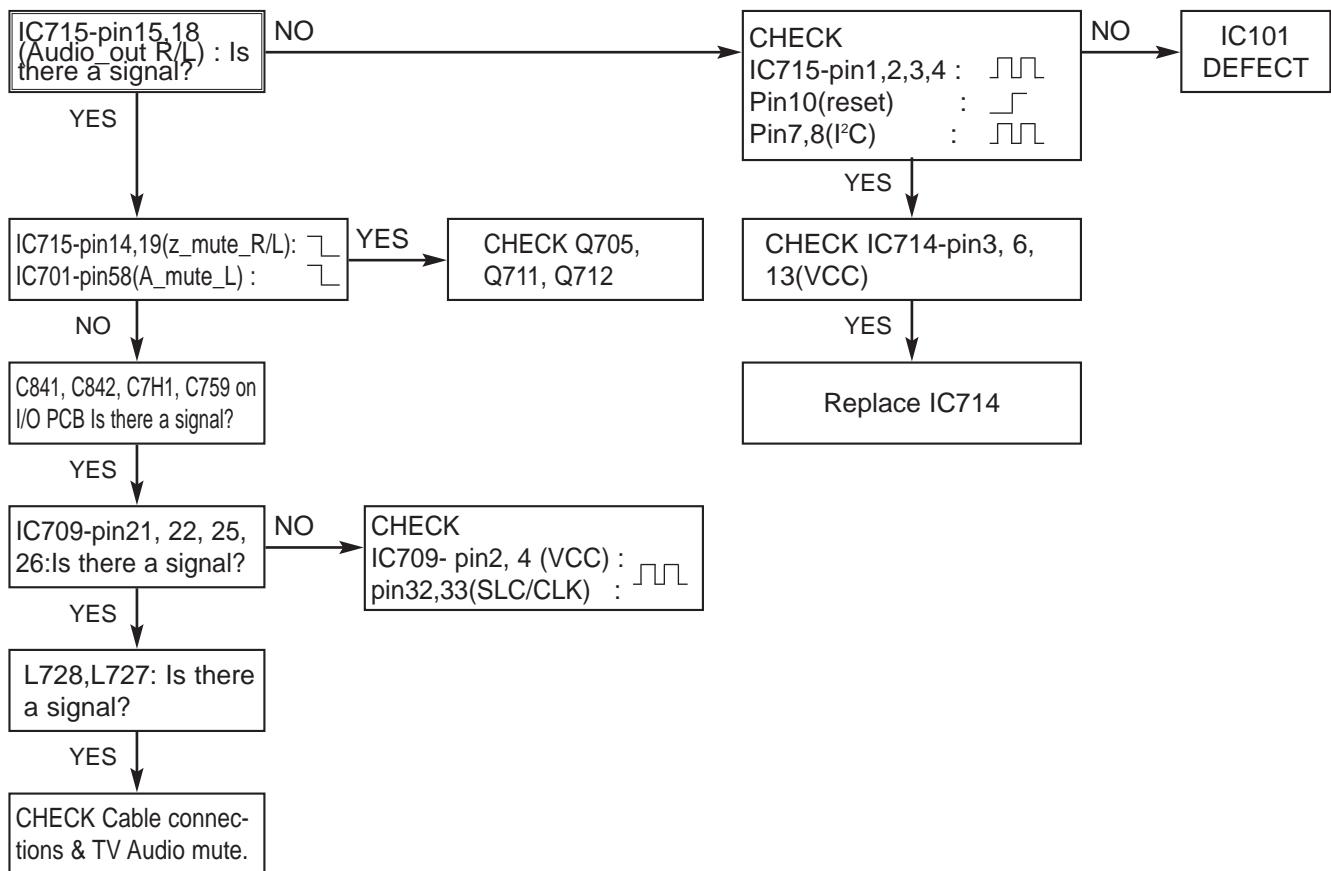


6. No OPTICAL/DIGITAL Output

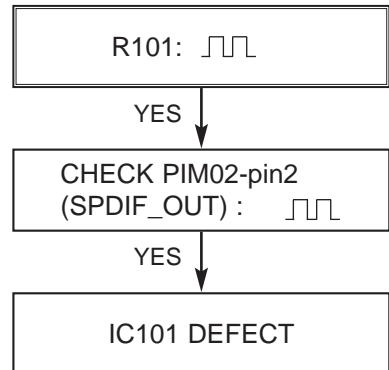


7. No TUNER Audio Output

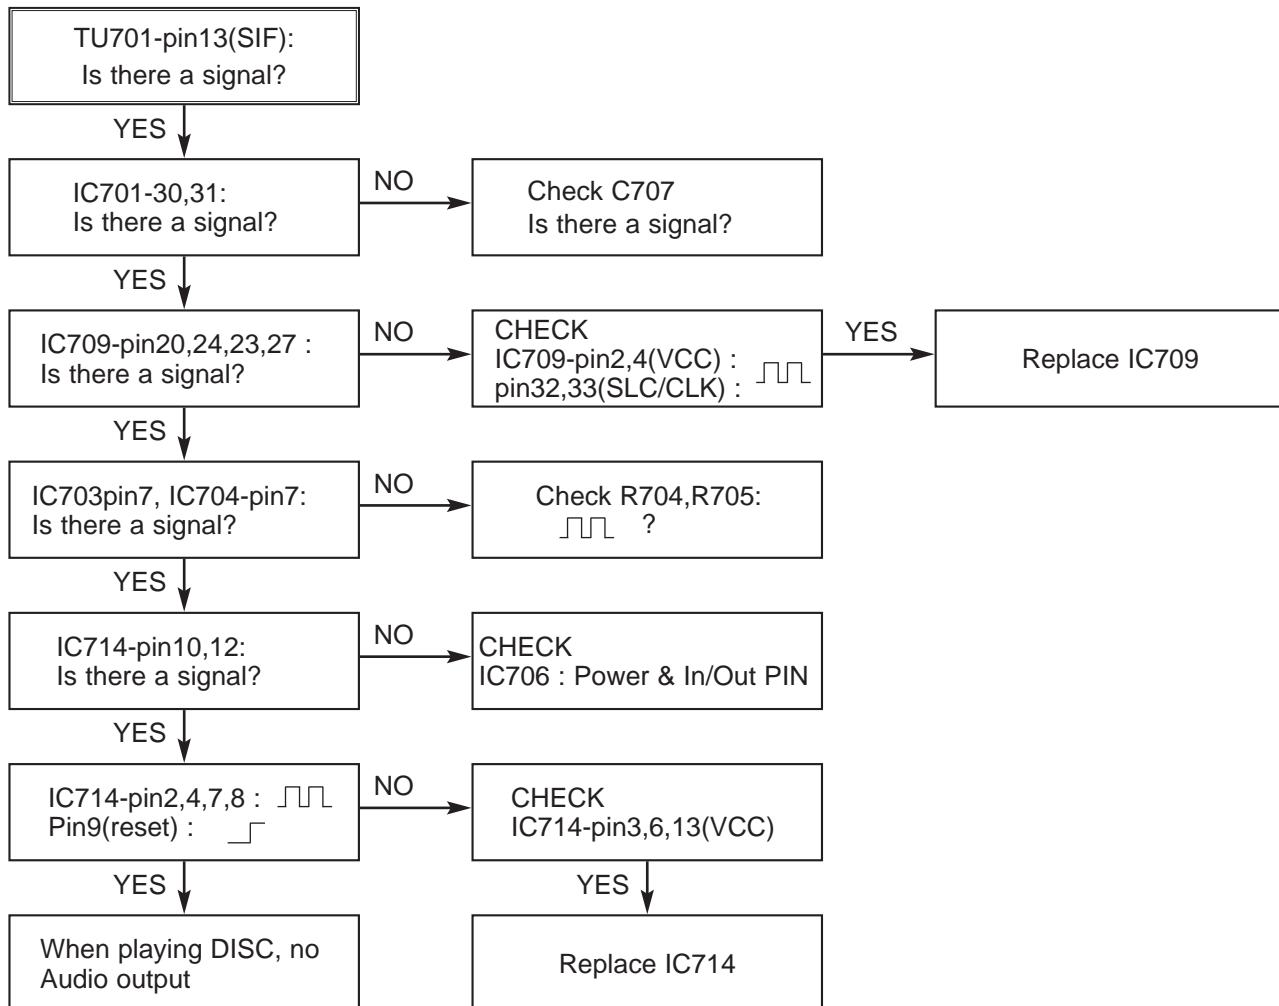


8. No External input Audio

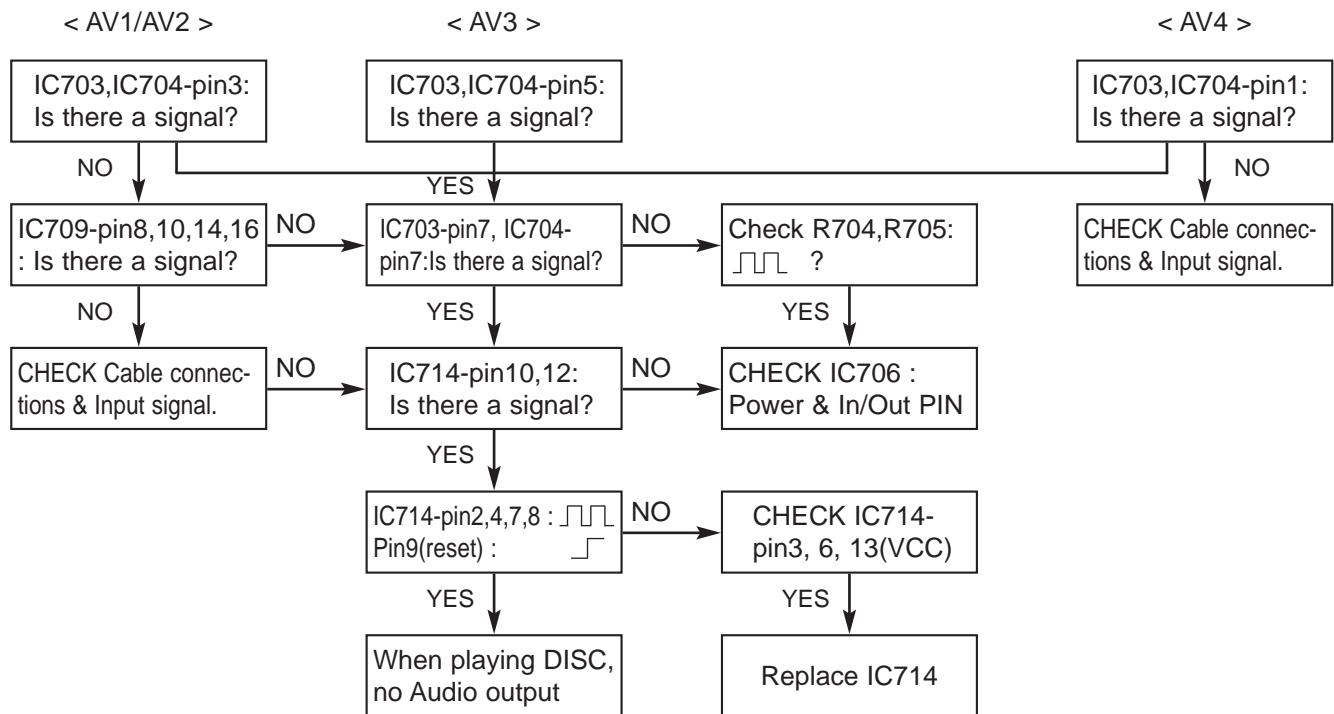


9. No RGB/Component Video signal when play DISC

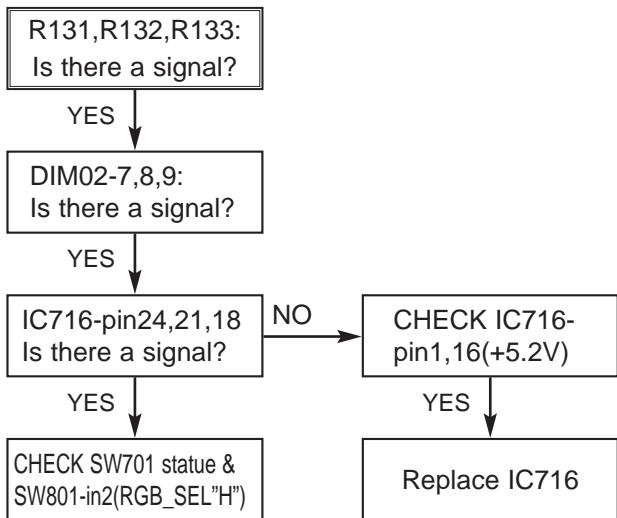


10. No composite/s-video Signal when play DISC

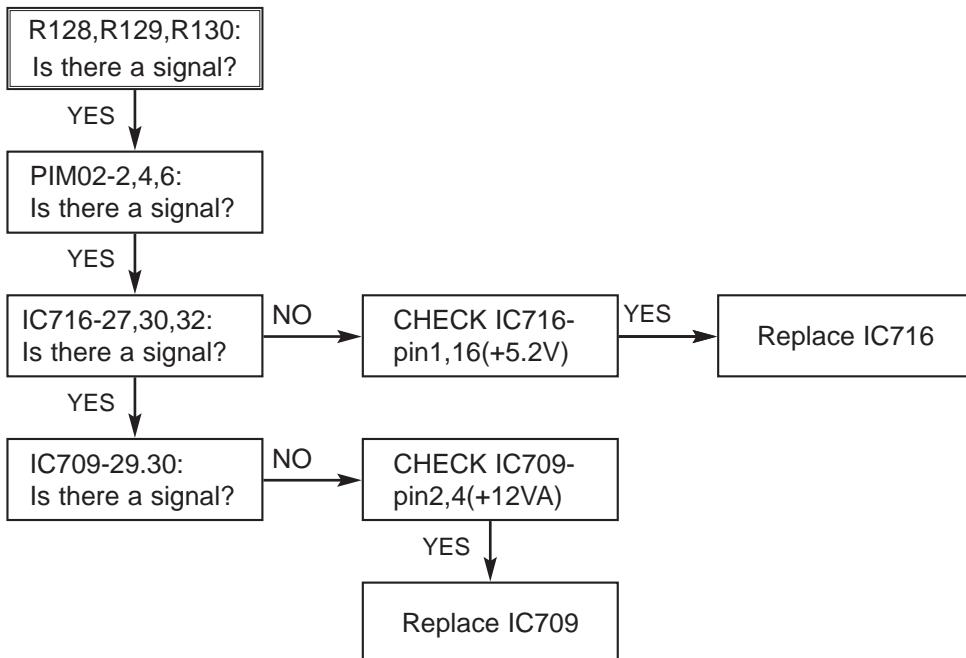

11. No TV, External input Video signal

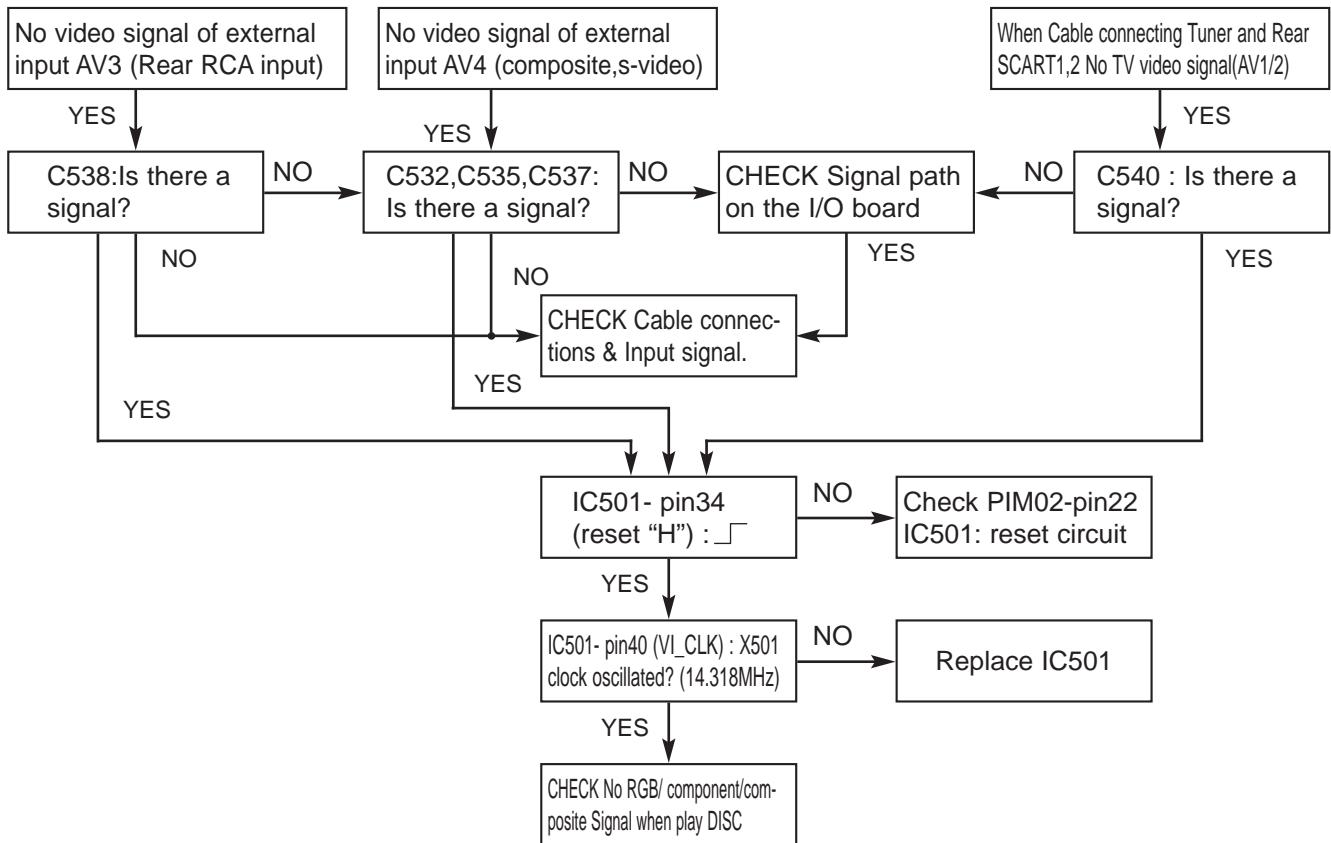


12. No DV(IEEE 1394)input(Video/Audio) signal

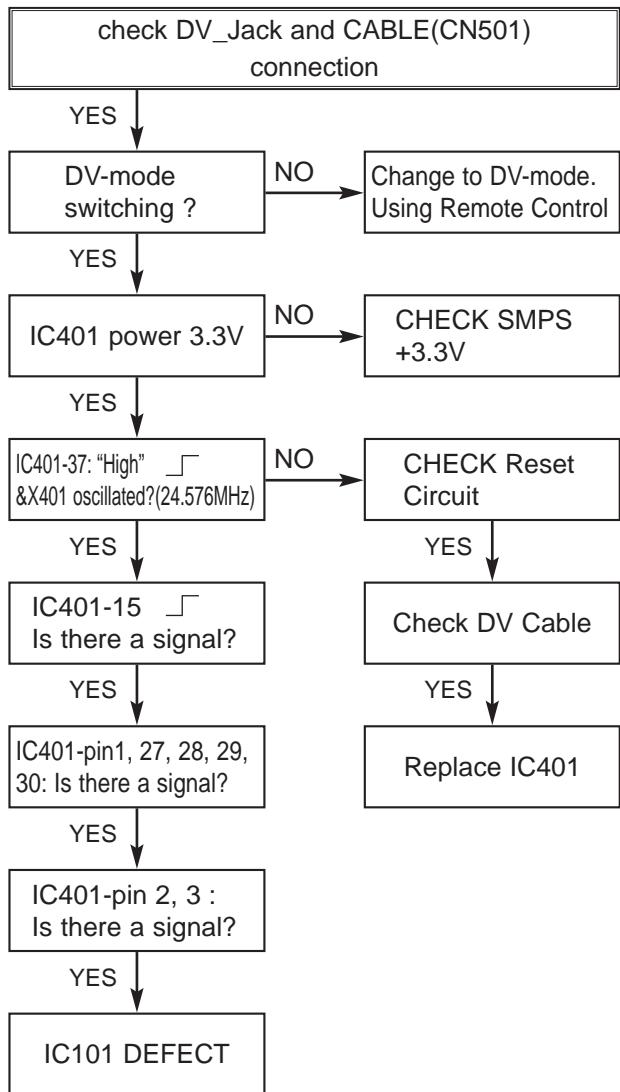


MEMO

BLOCK DIAGRAMS


1. OVERALL H/W BLOCK DIAGRAM

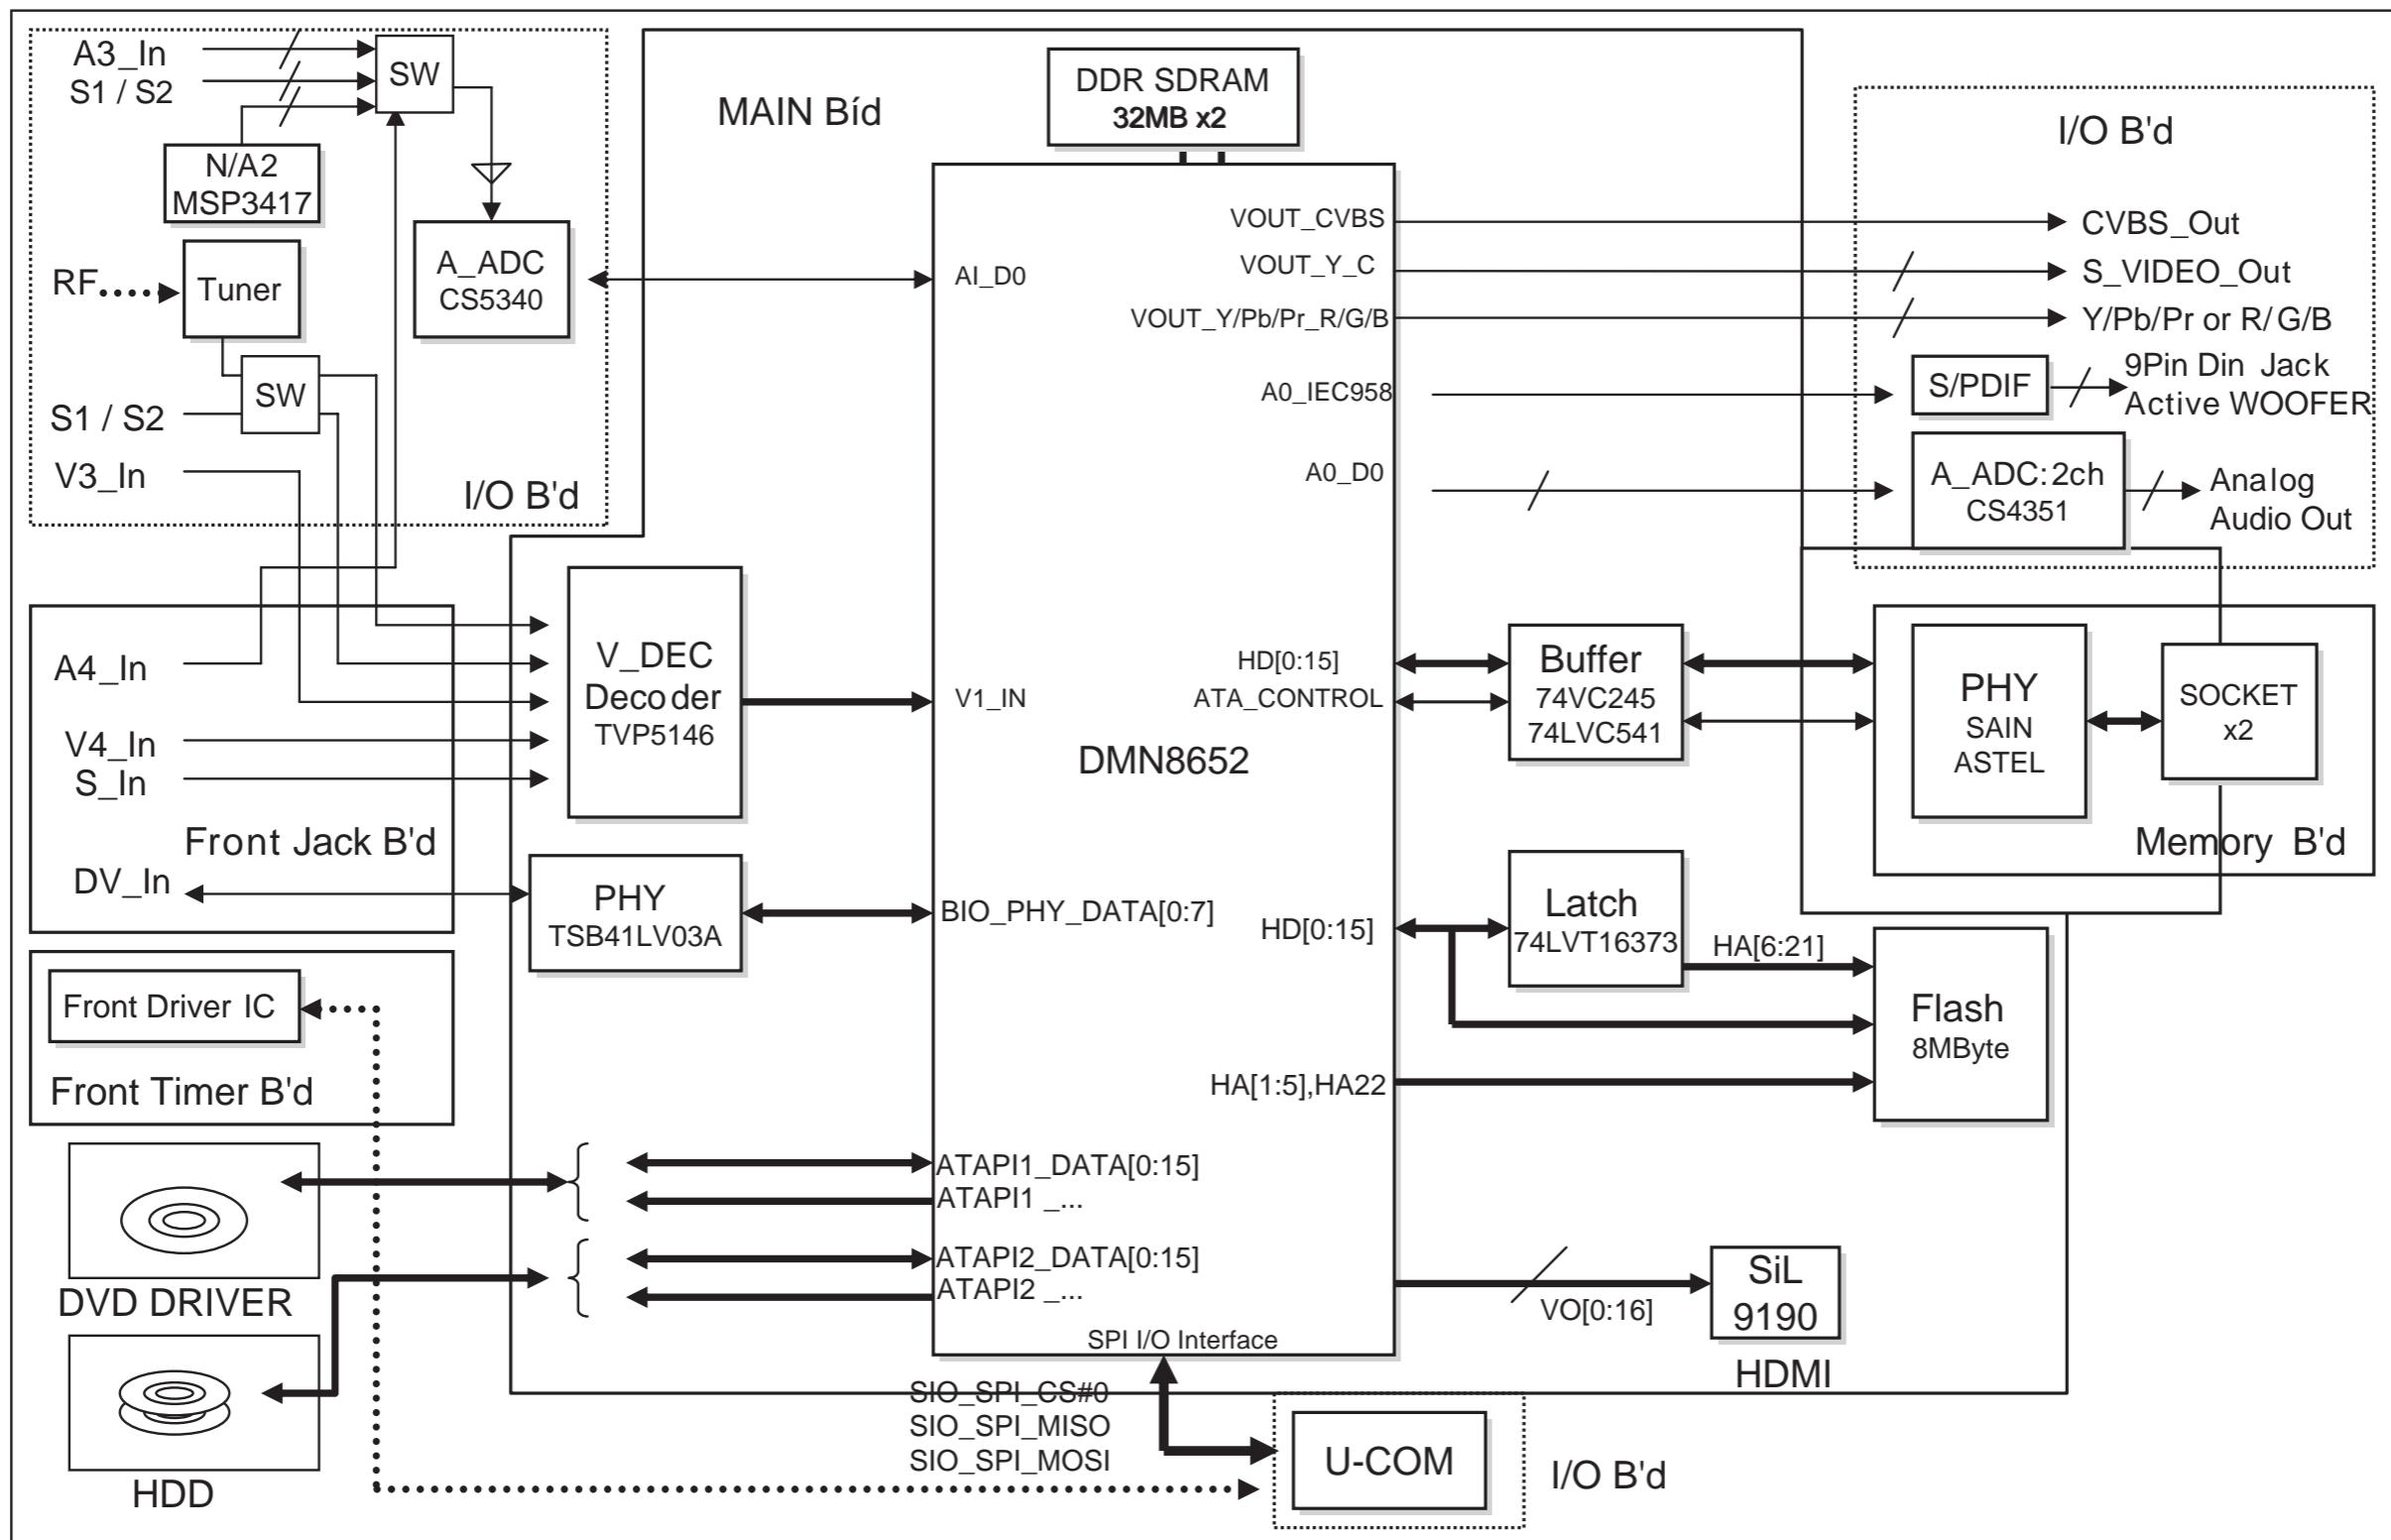


2. LAYOUT CONNECTION BLOCK DIAGRAM

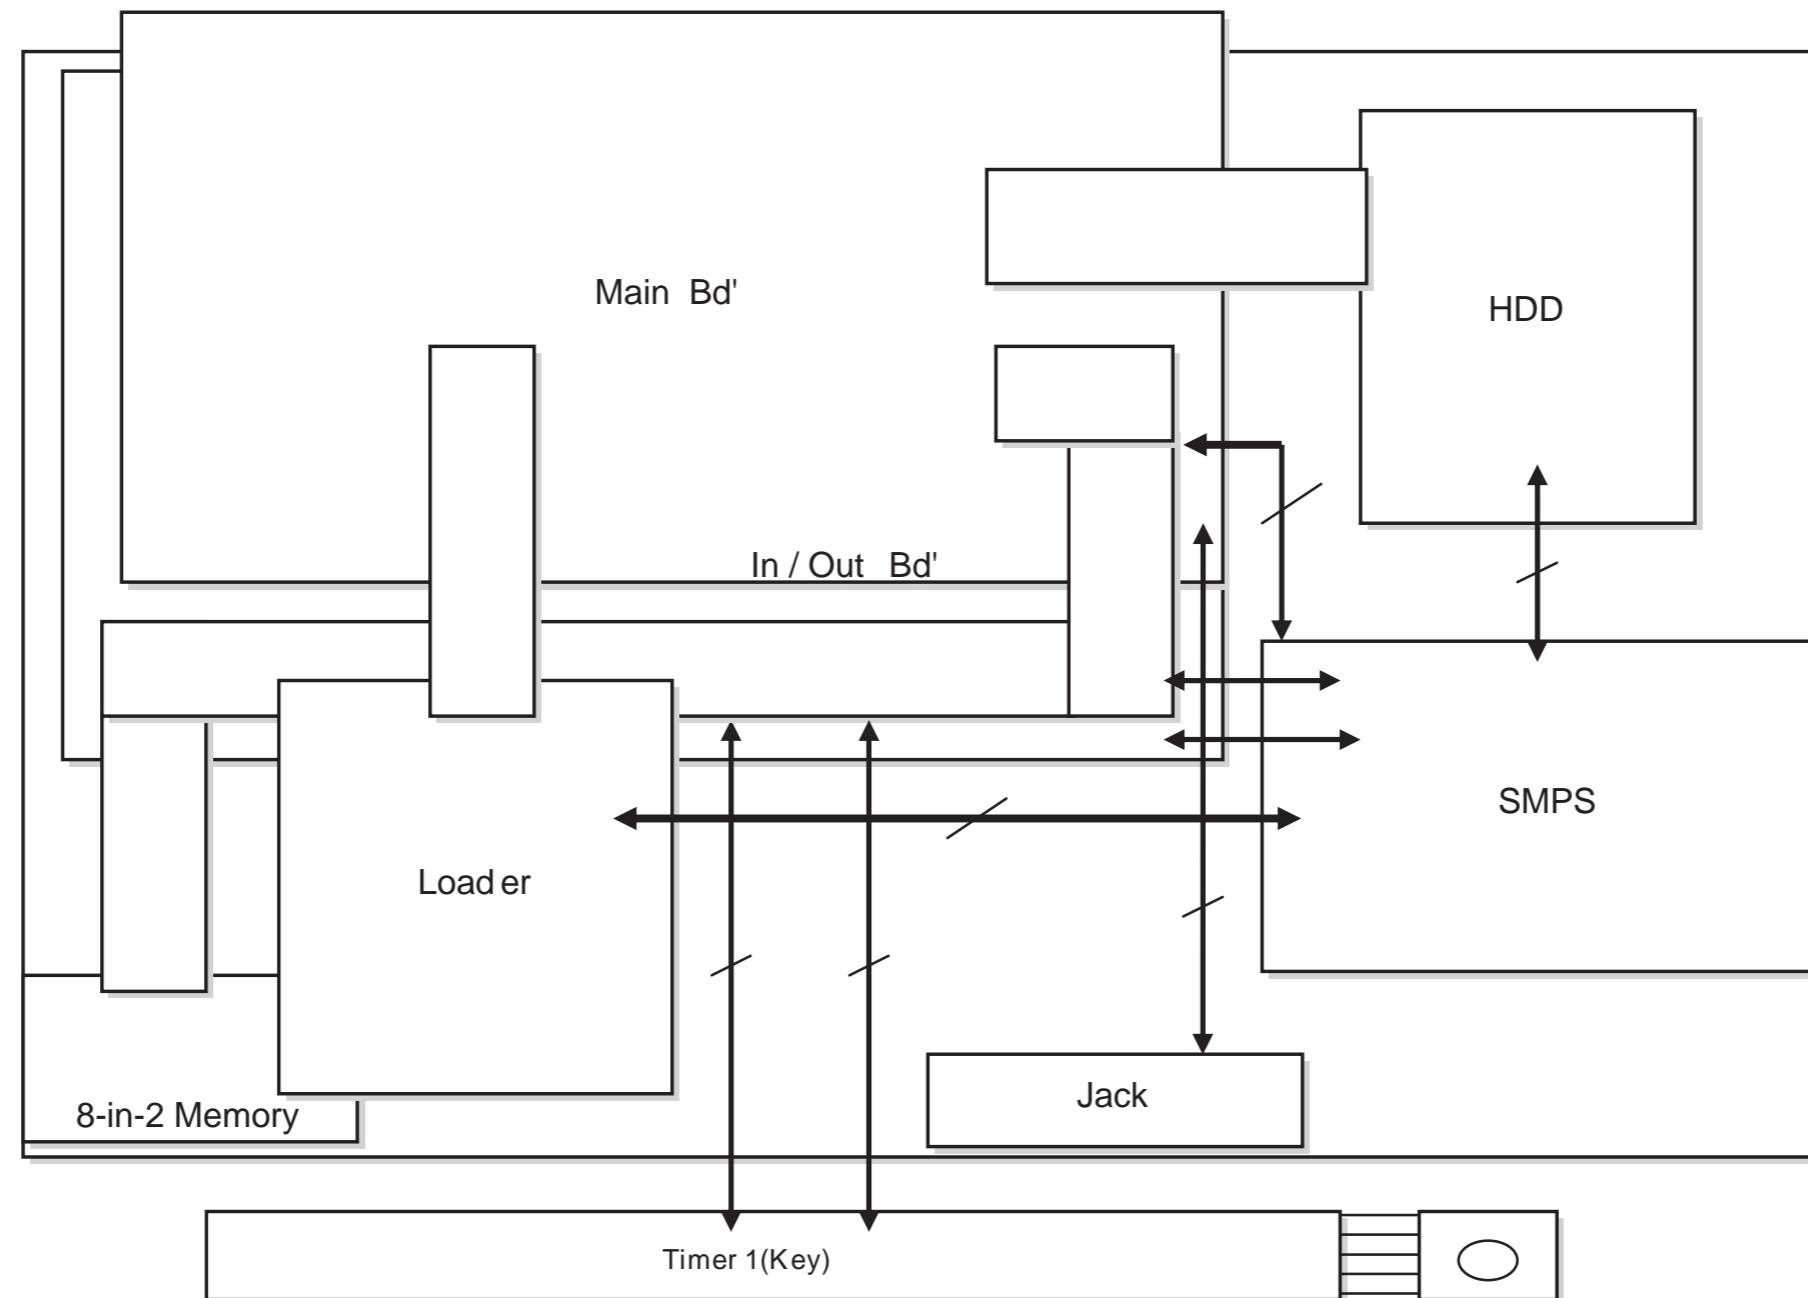


3. SMPS BLOCK DIAGRAM

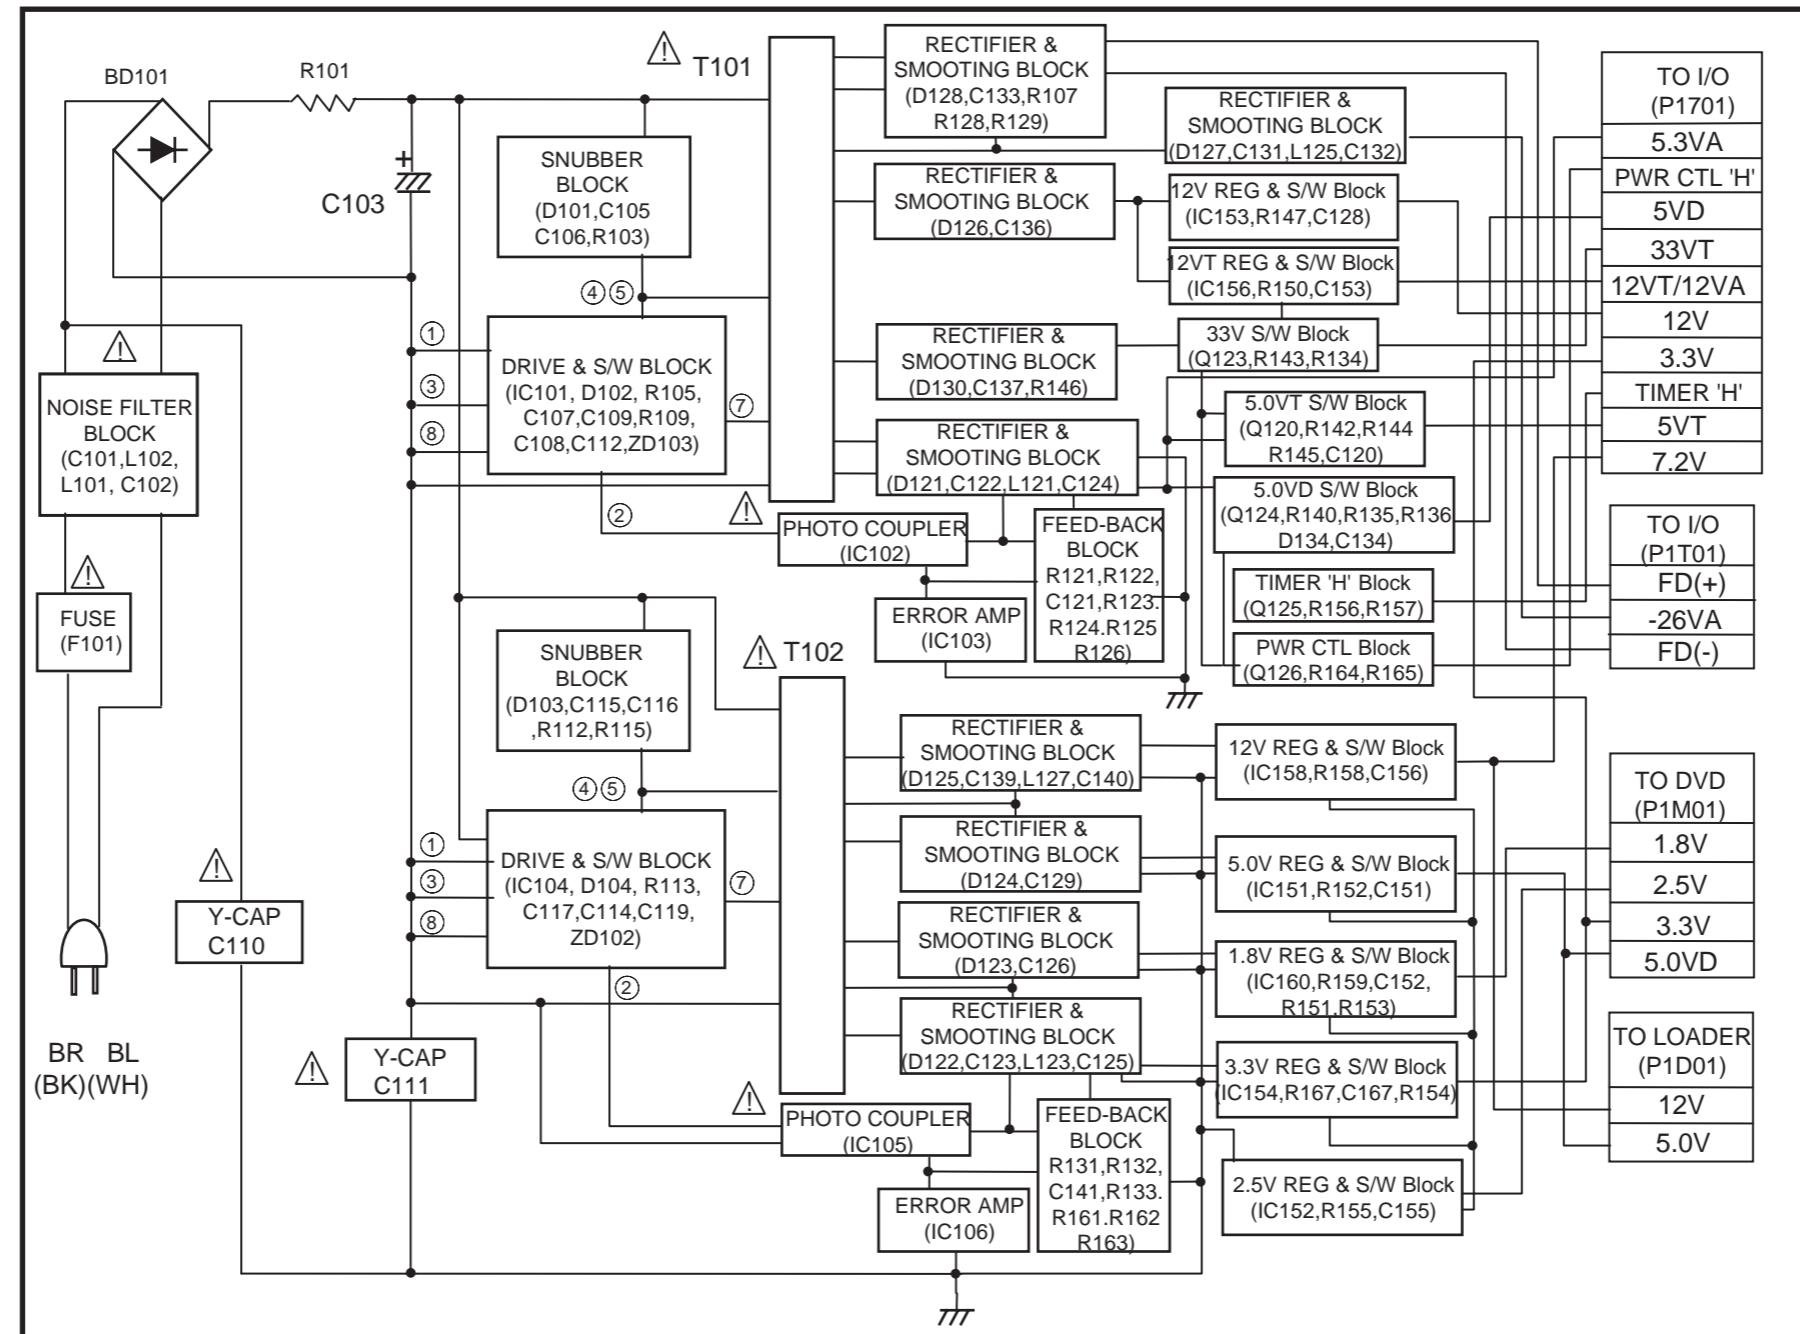


4. IN/OUT BLOCK DIAGRAM

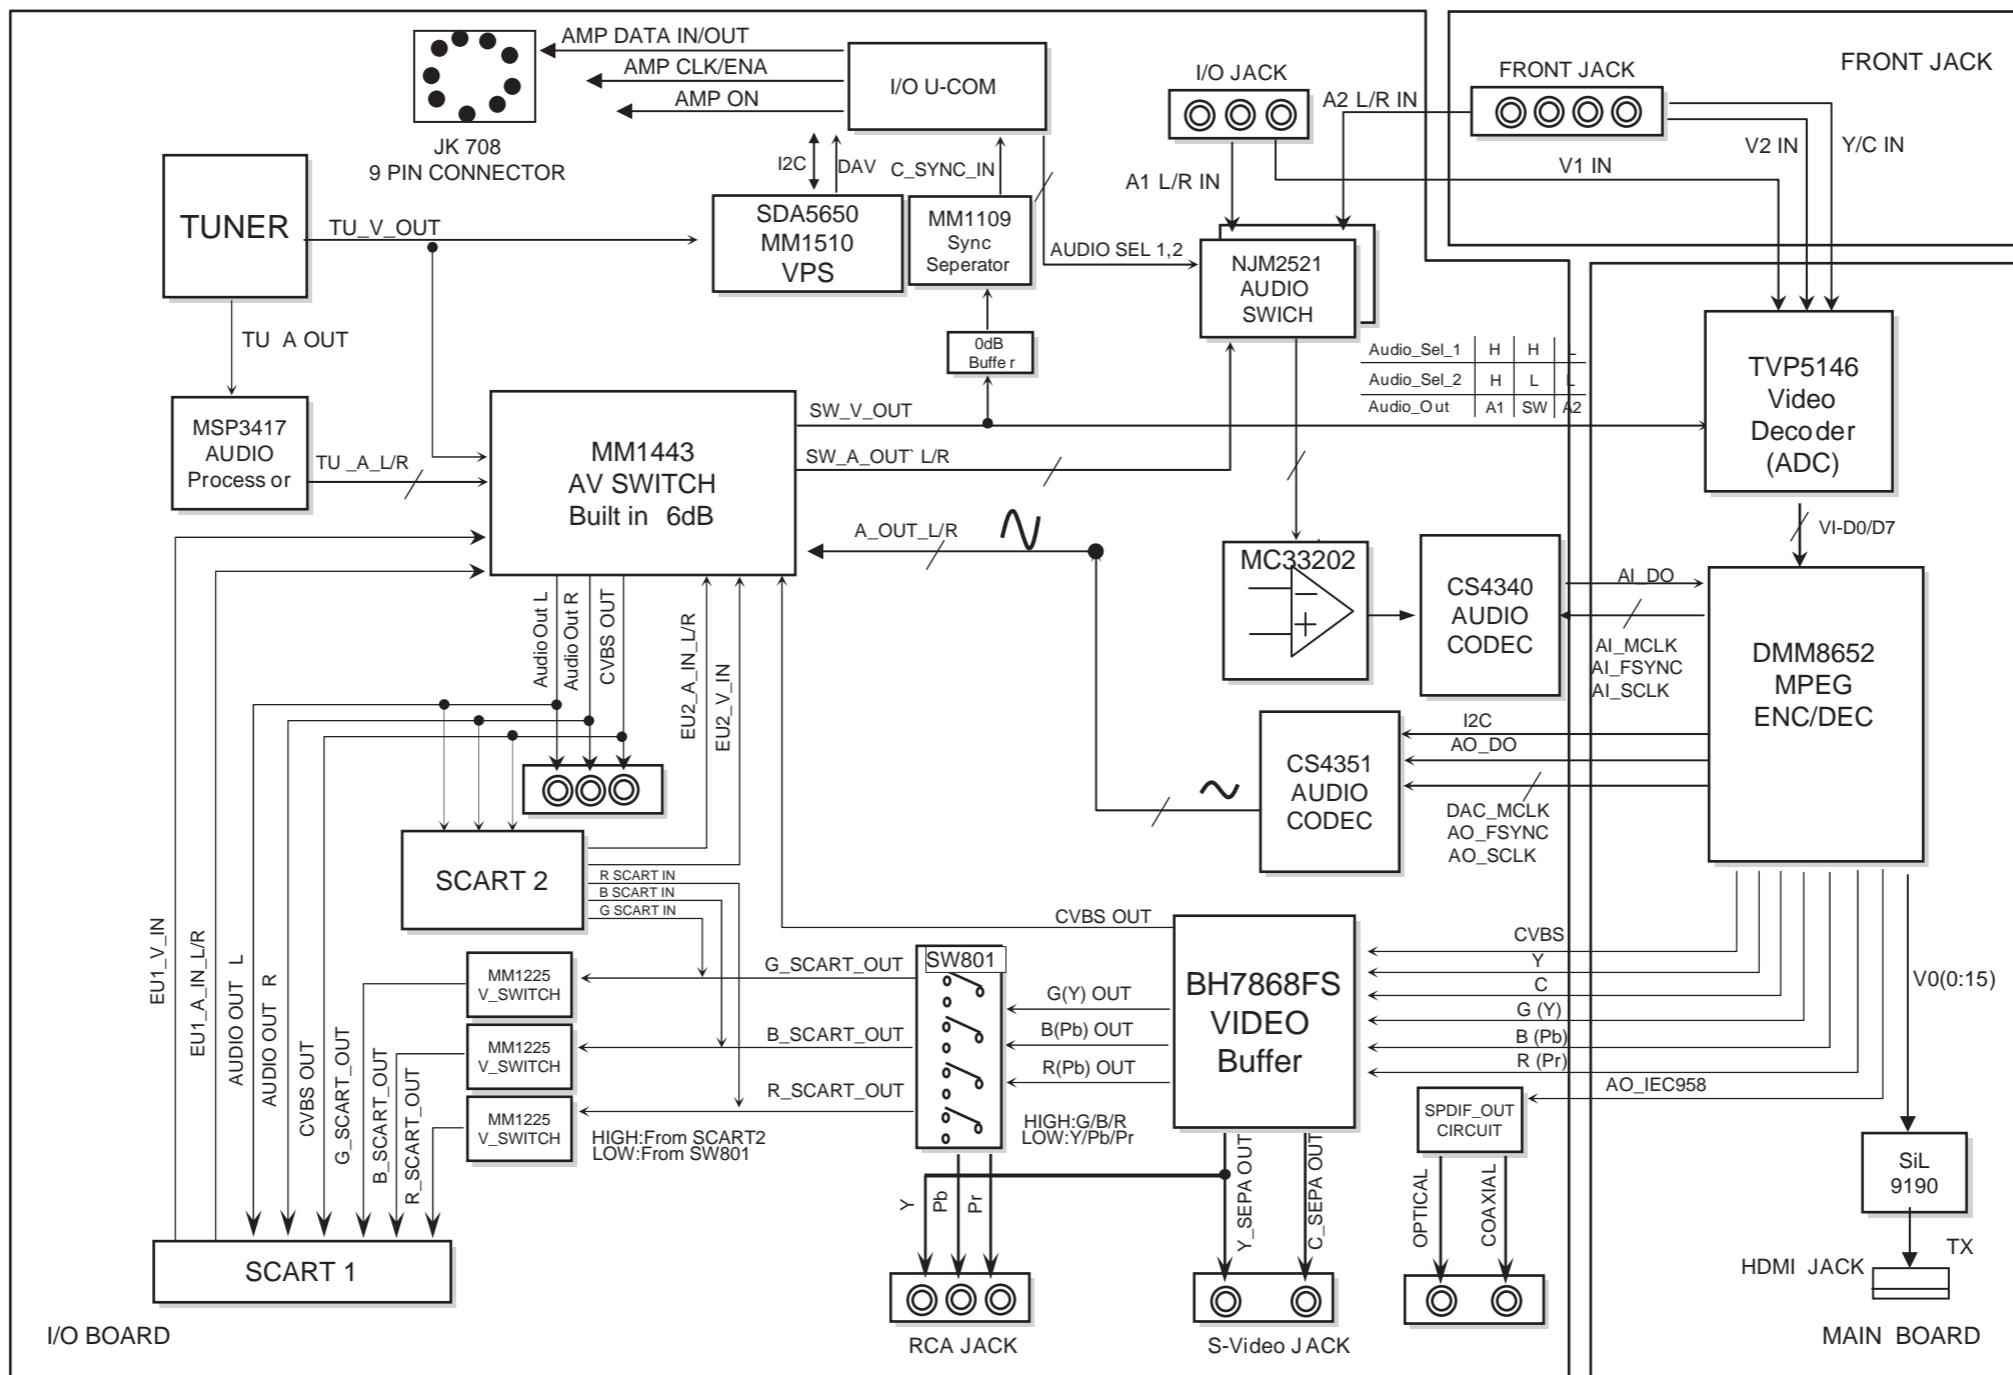

5. VIDEO BLOCK DIAGRAM

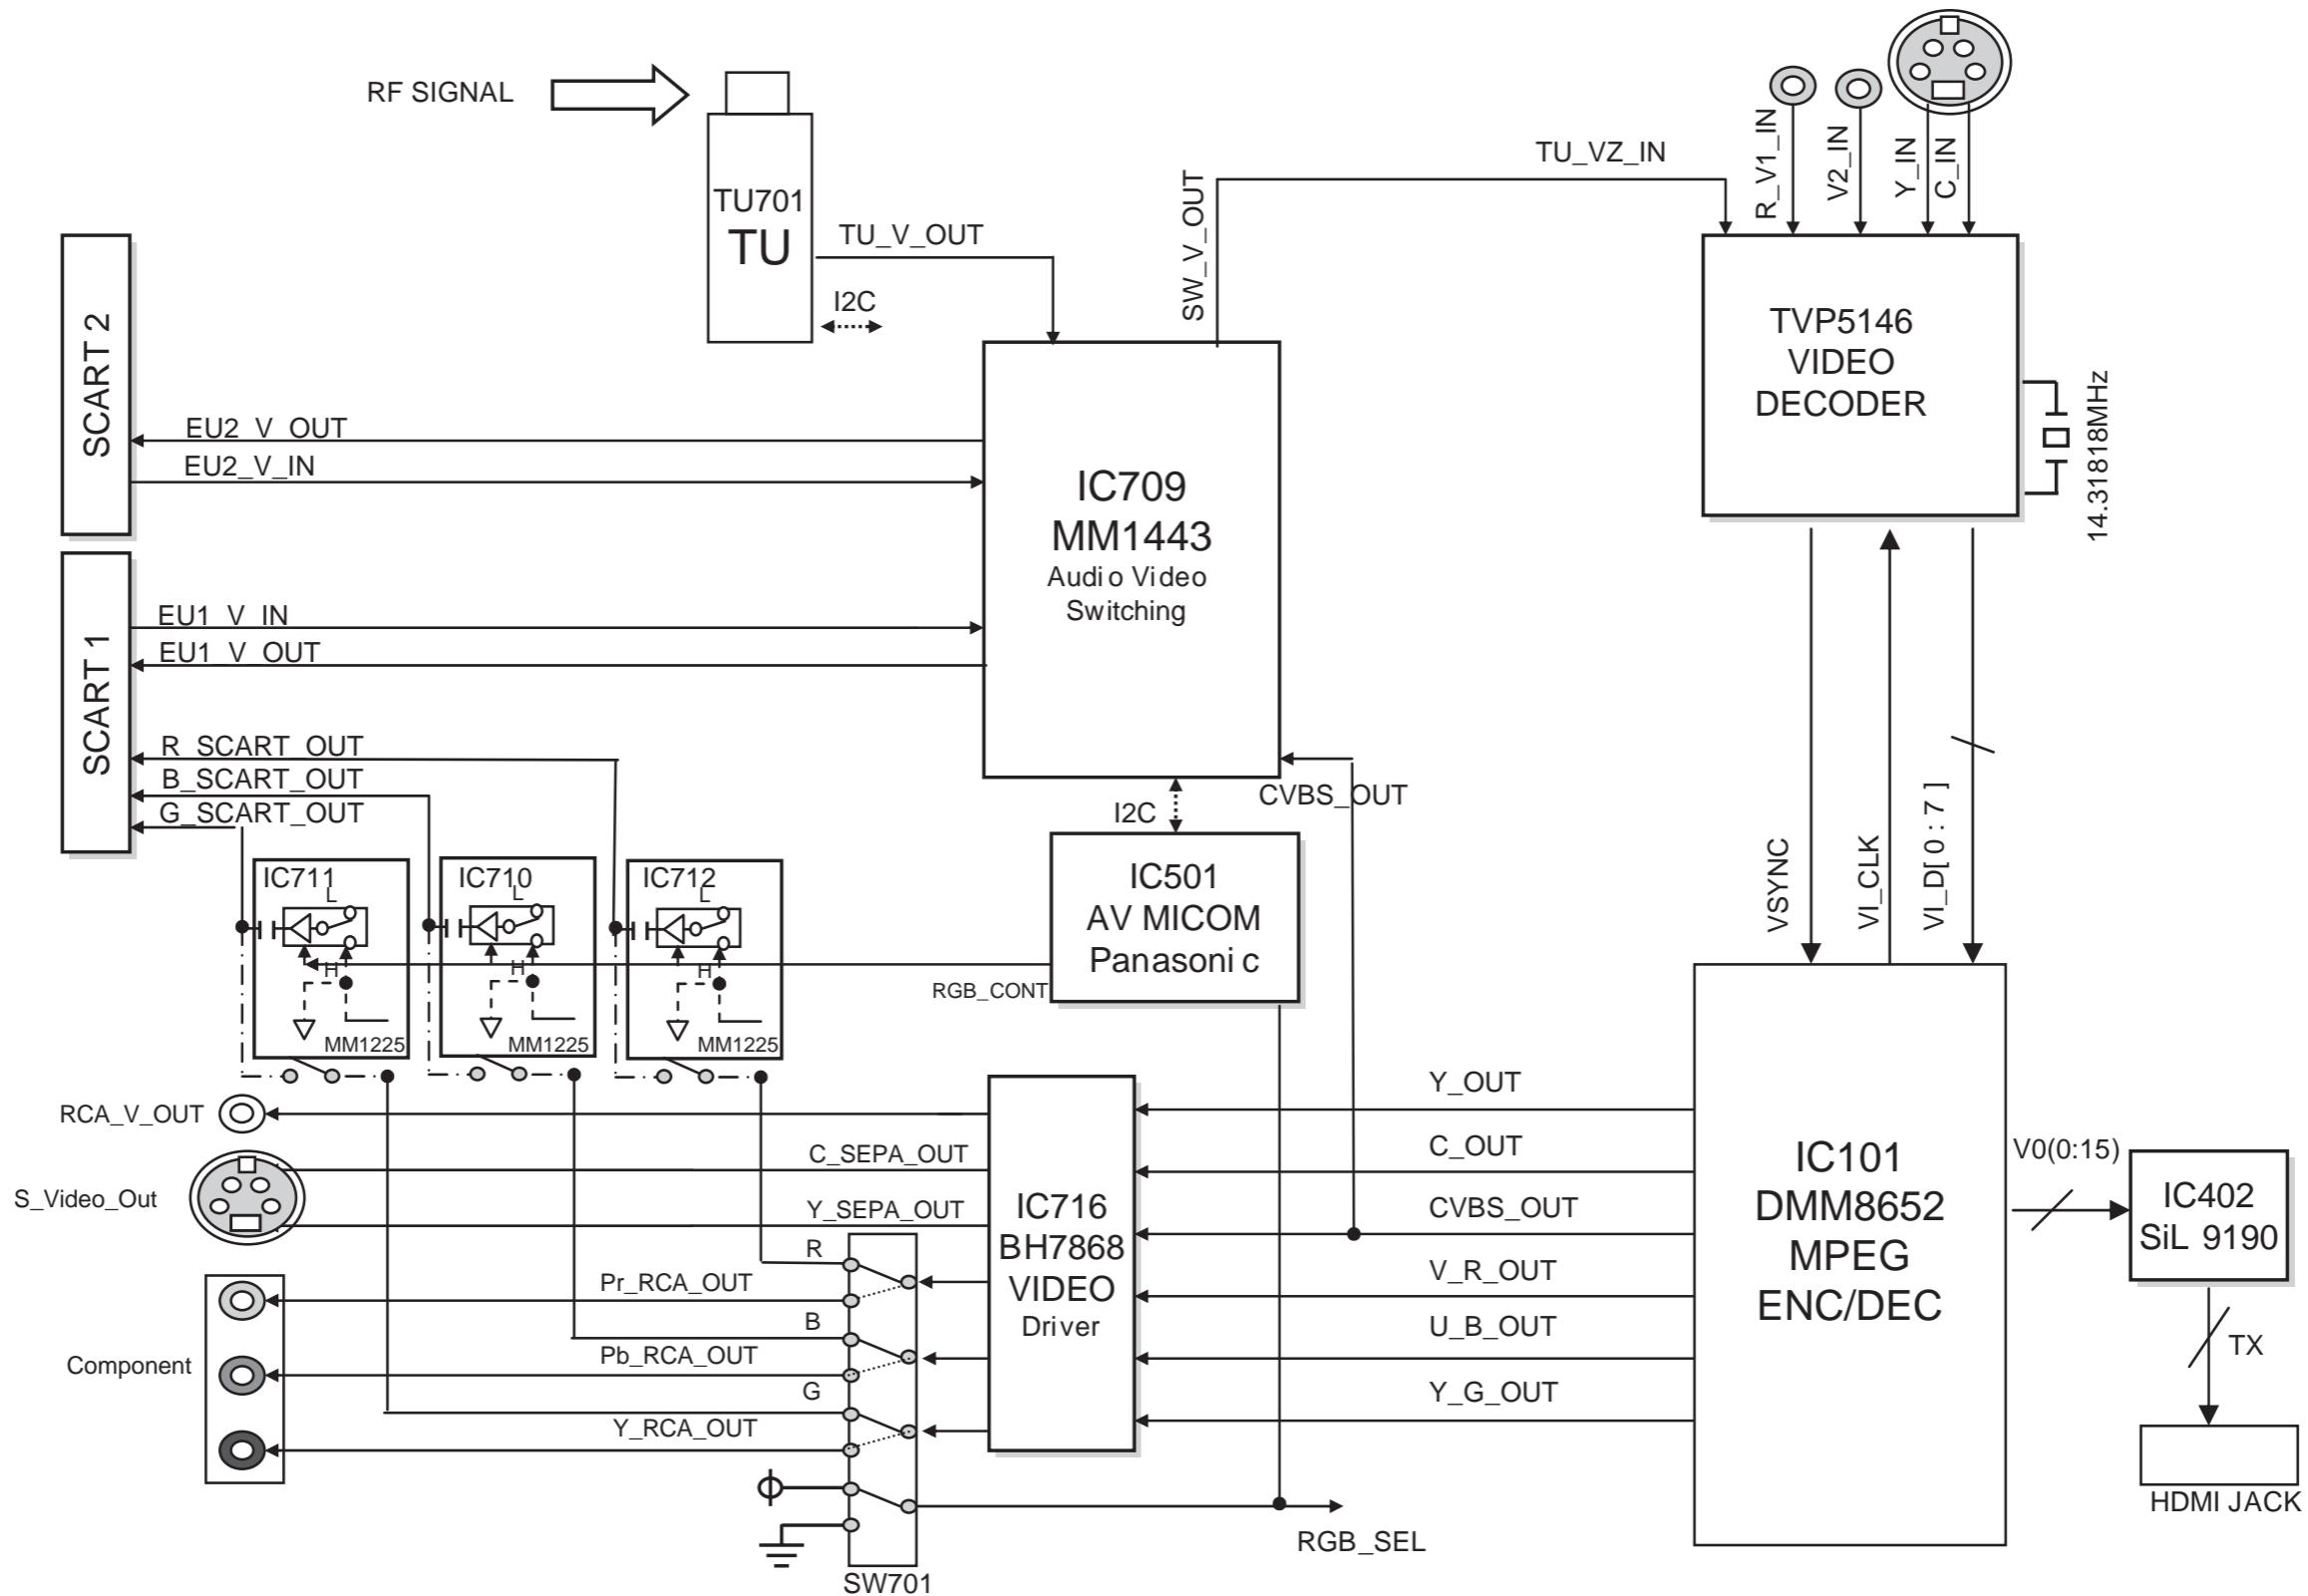

6. AUDIO BLOCK DIAGRAM

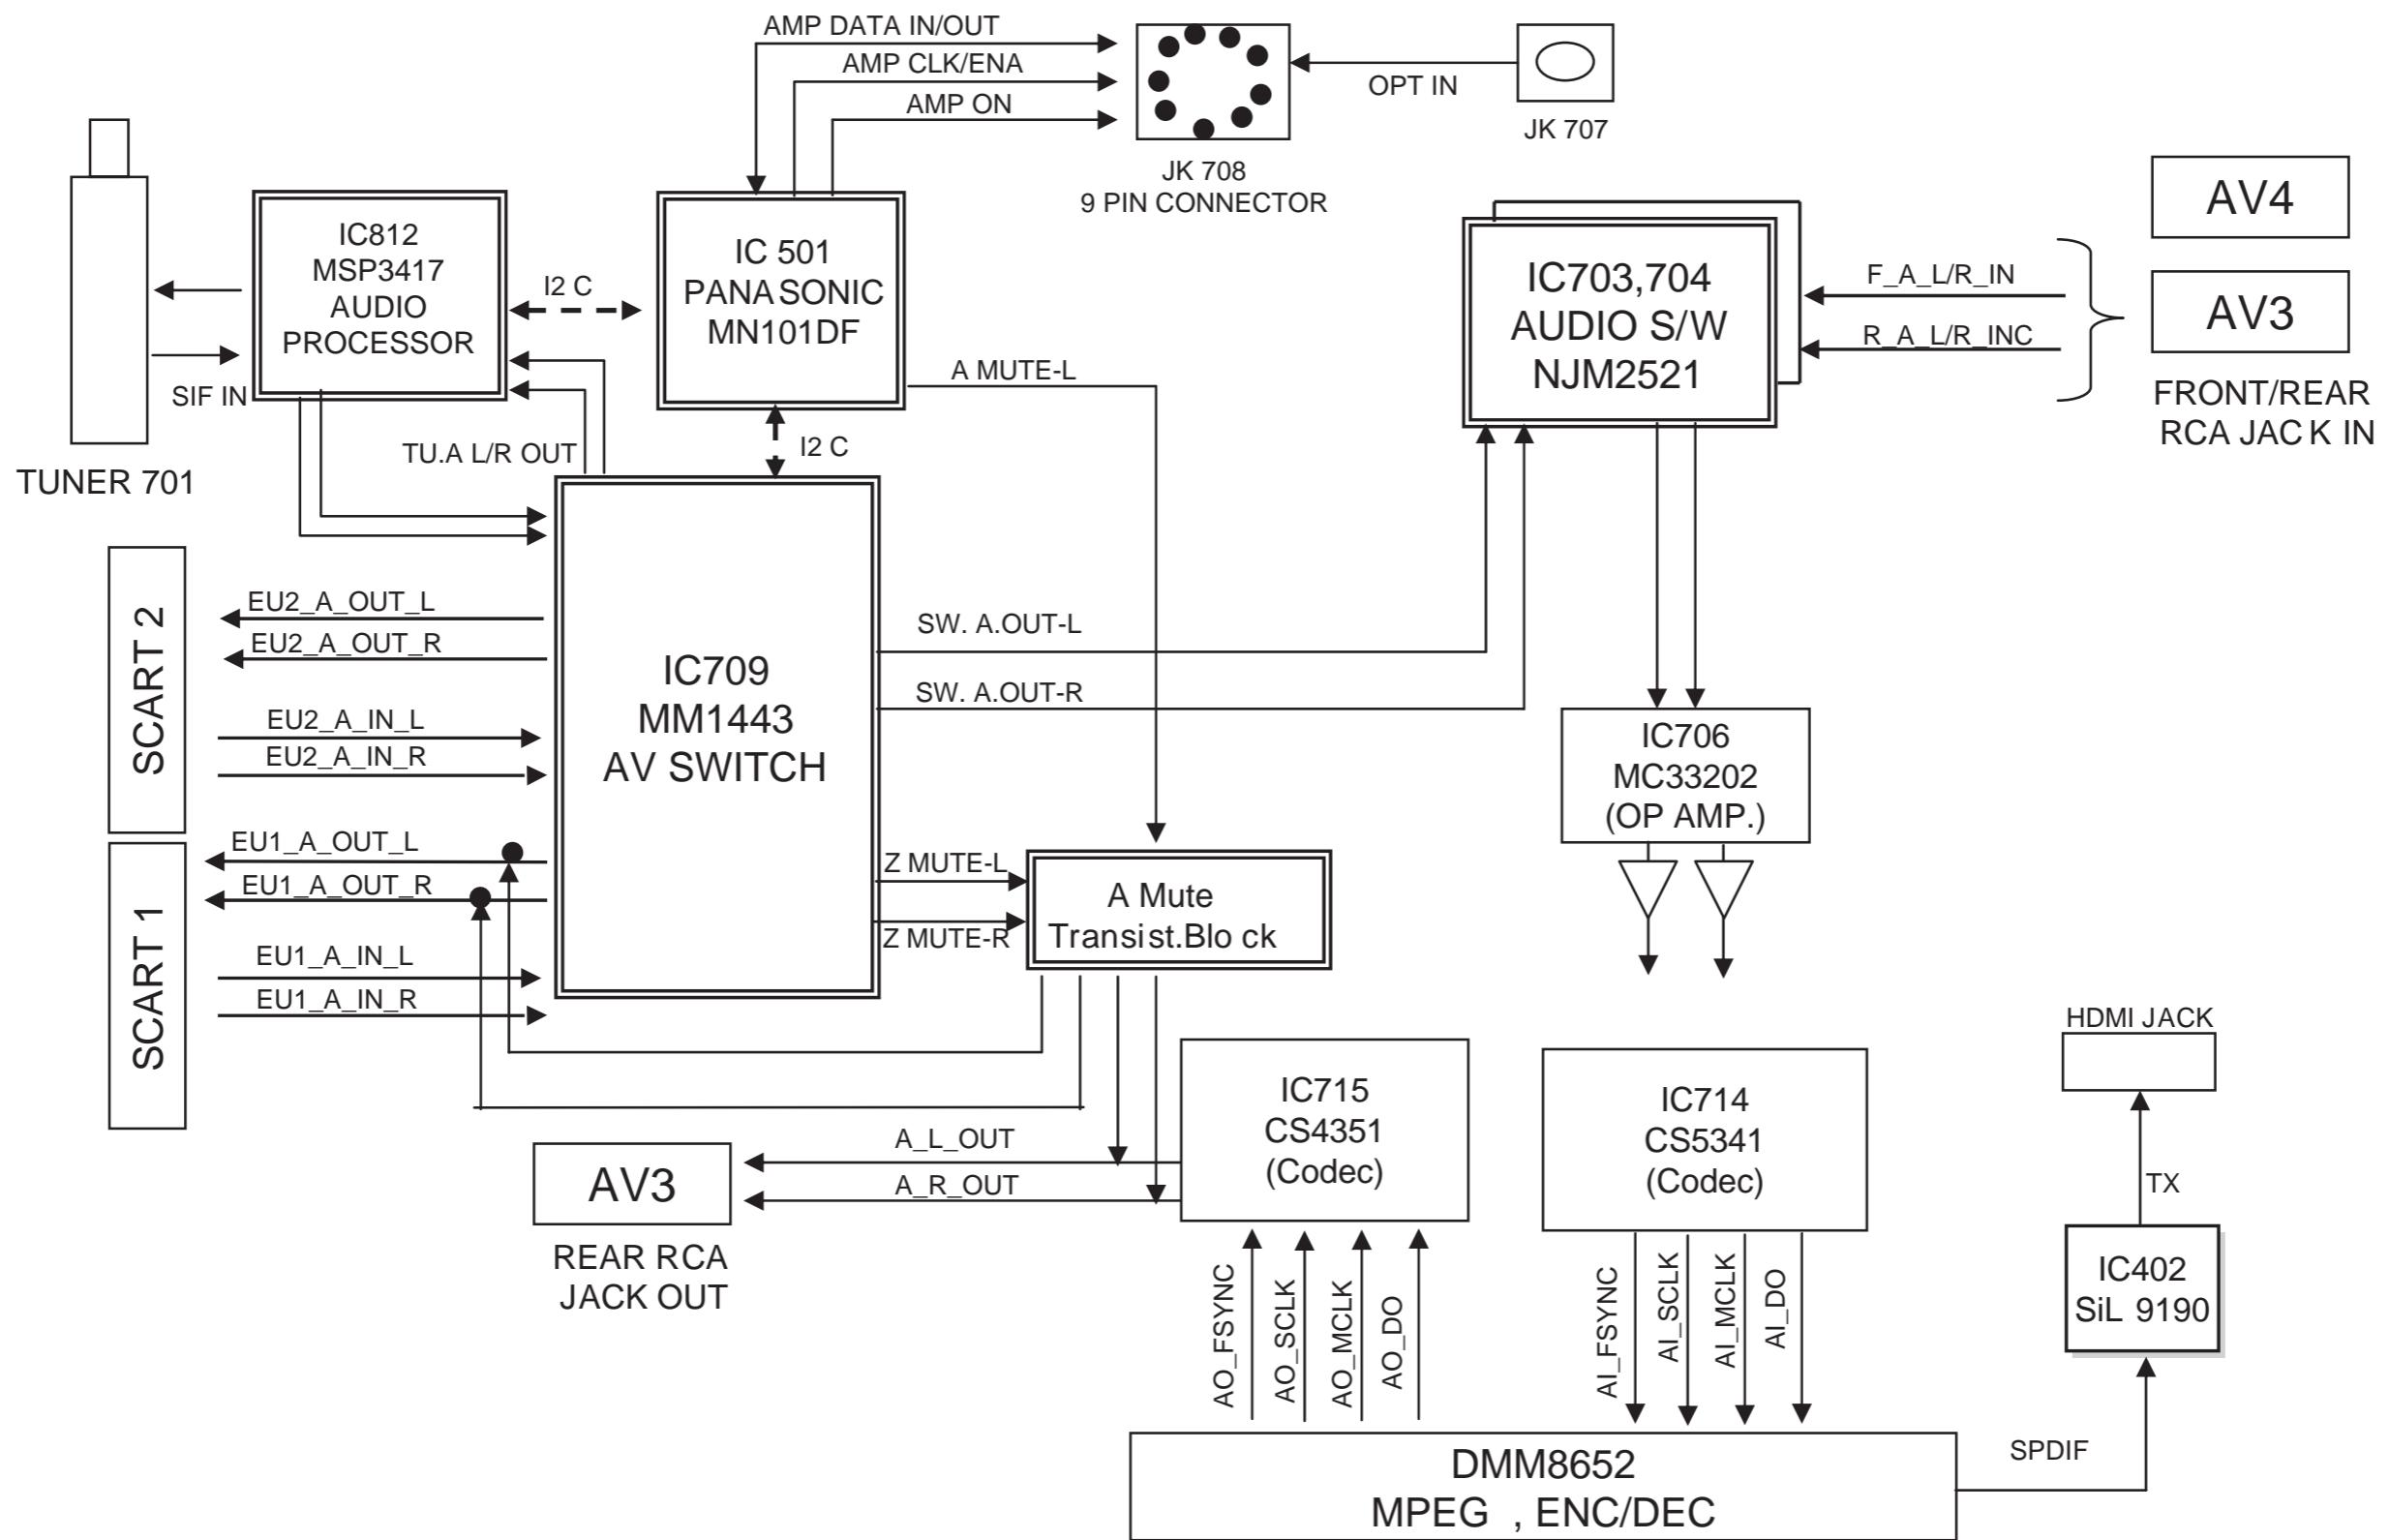

CIRCUIT DIAGRAMS


1. POWER(SMPS) CIRCUIT DIAGRAM

IMPORTANT SAFETY NOTICE


WHEN SERVICING THIS CHASSIS, UNDER NO CIRCUMSTANCES SHOULD THE ORIGINAL DESIGN BE MODIFIED OR ALTERED WITHOUT PERMISSION FROM THE LG ELECTRONICS CORPORATION. ALL COMPONENTS SHOULD BE REPLACED ONLY WITH TYPES IDENTICAL TO THOSE IN THE ORIGINAL CIRCUIT DIAGRAM. THIS CIRCUIT DIAGRAM MAY OCCASIONALLY DIFFER FROM THE ACTUAL CIRCUIT USED. THIS WAY, IMPLEMENTATION OF THE LATEST SAFETY AND PERFORMANCE IMPROVEMENT CHANGES INTO THE SET IS NOT DELAYED UNTIL THE NEW SERVICE LITERATURE IS PRINTED.

NOTE :


1. Shaded(■) parts are critical for safety. Replace only with specified part number.
2. Voltages are DC-measured with a digital voltmeter during Play mode.

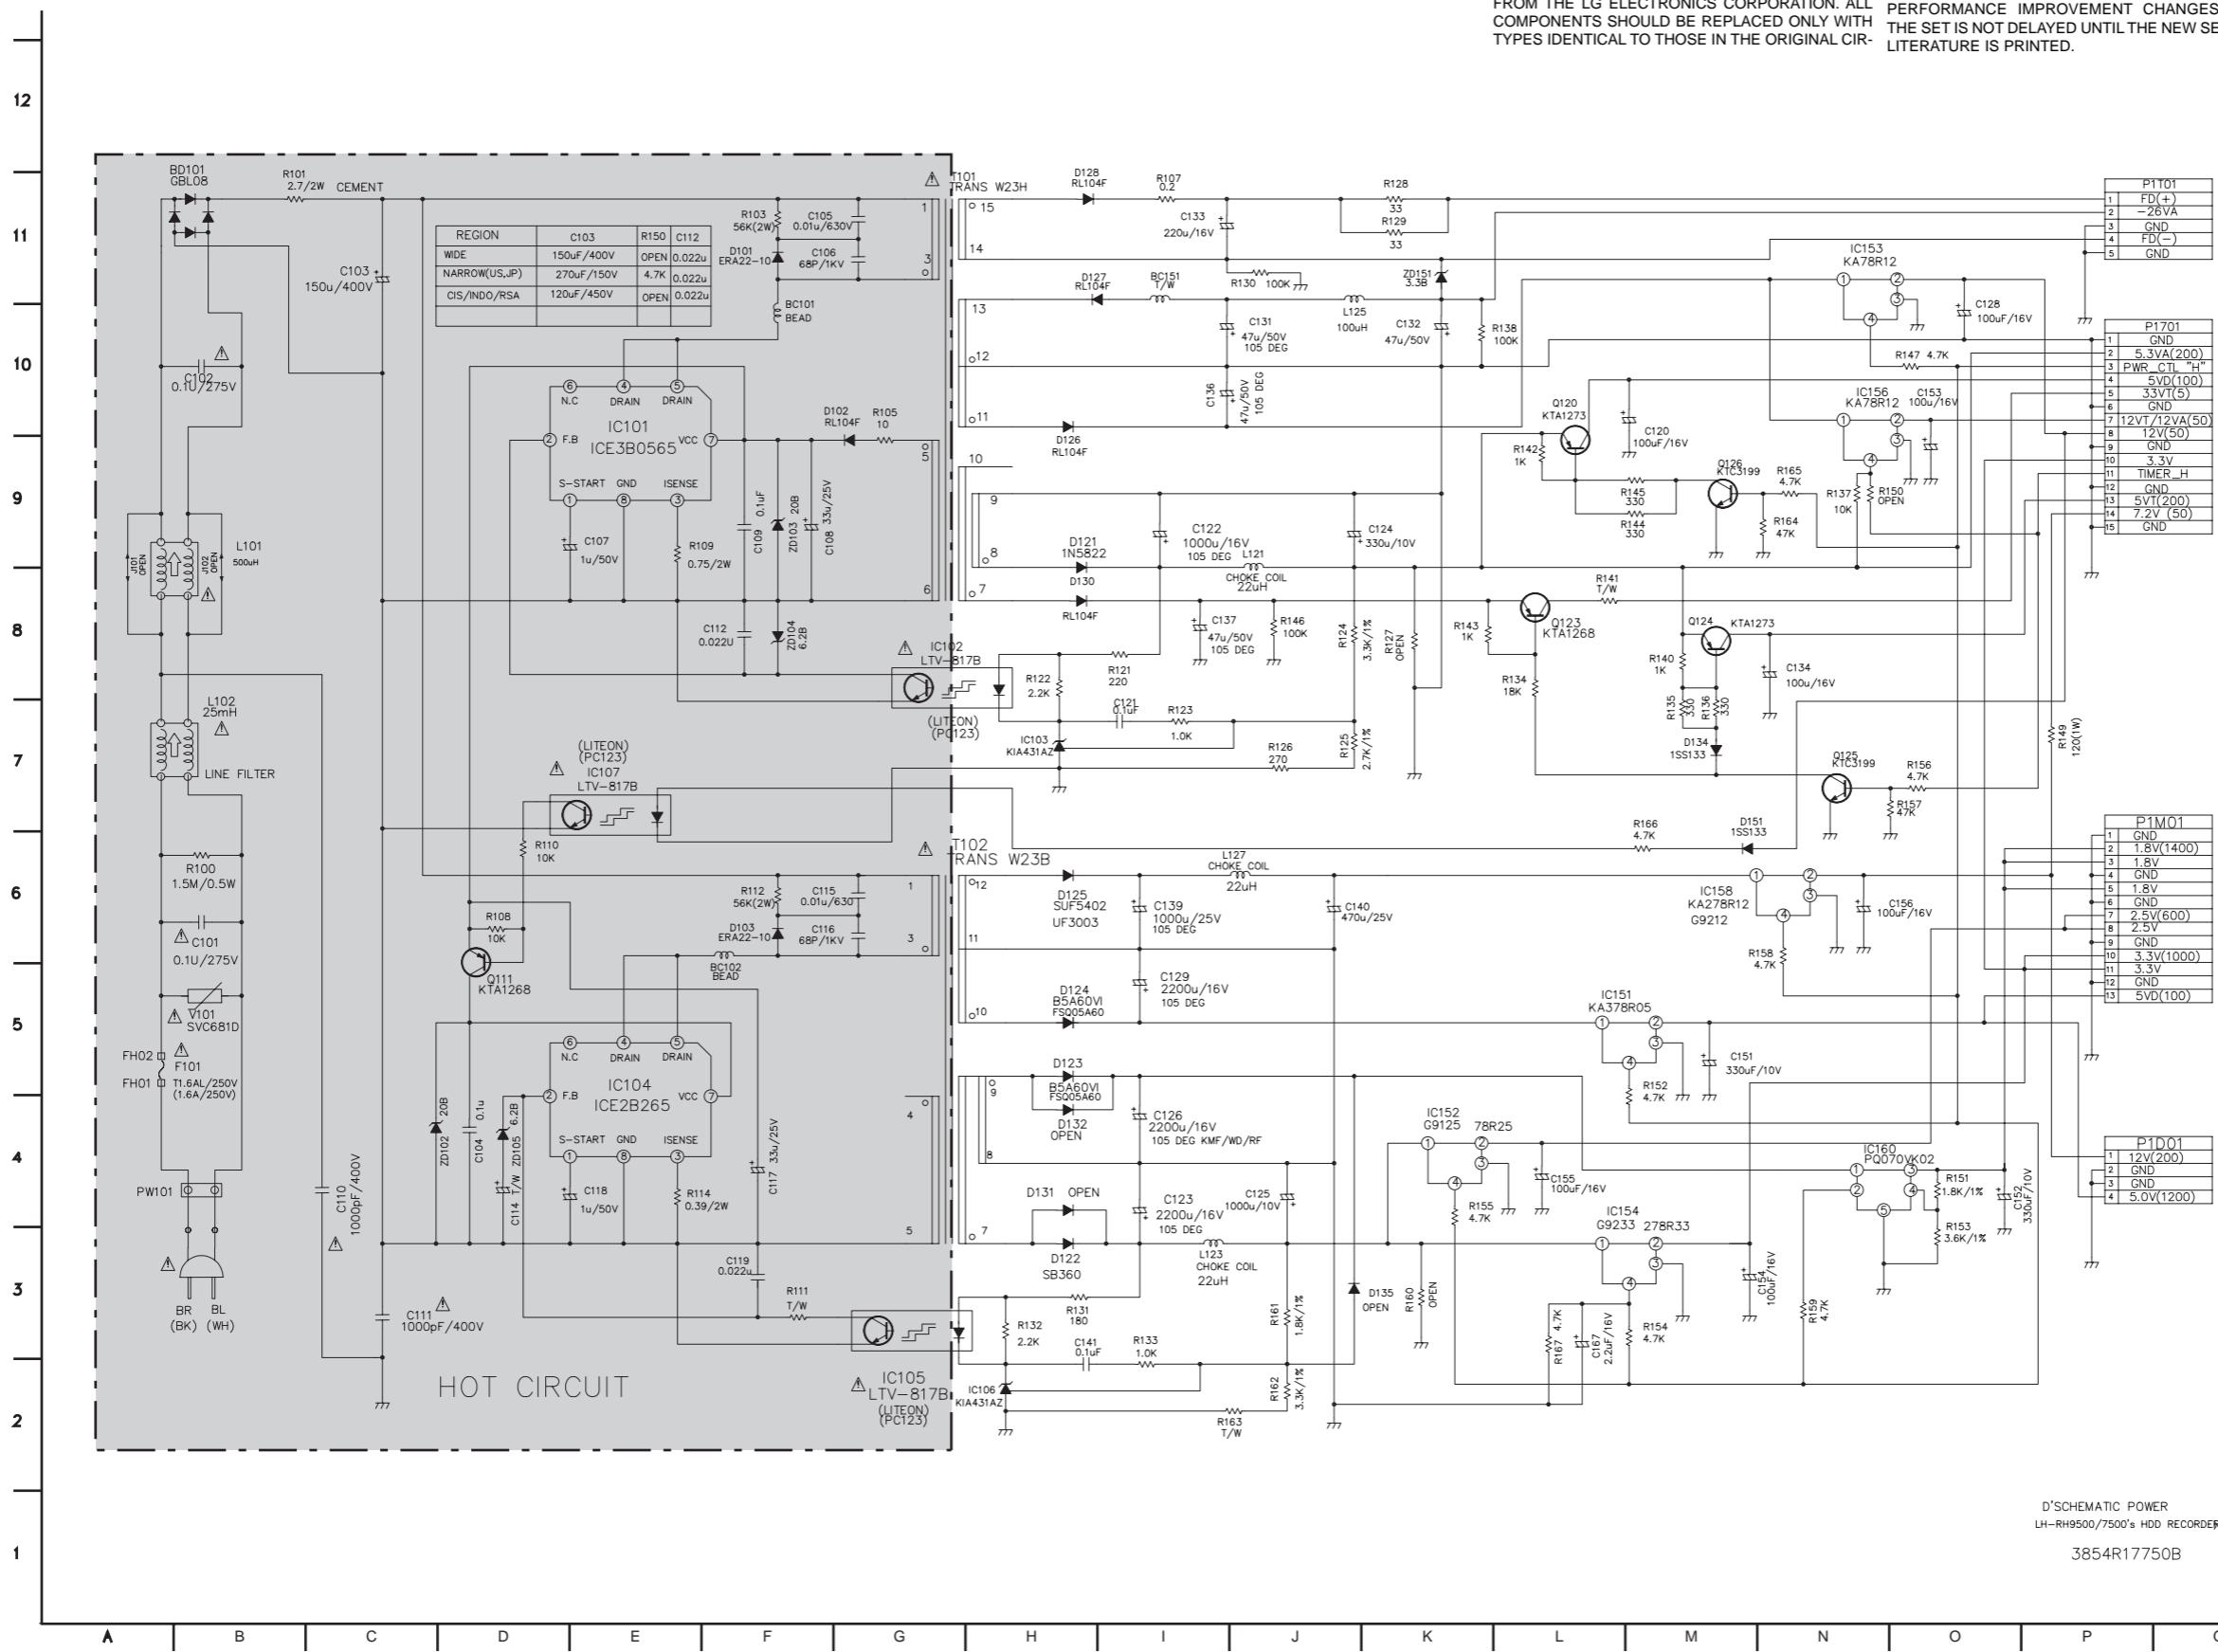


2. I/O MICOM CIRCUIT DIAGRAM

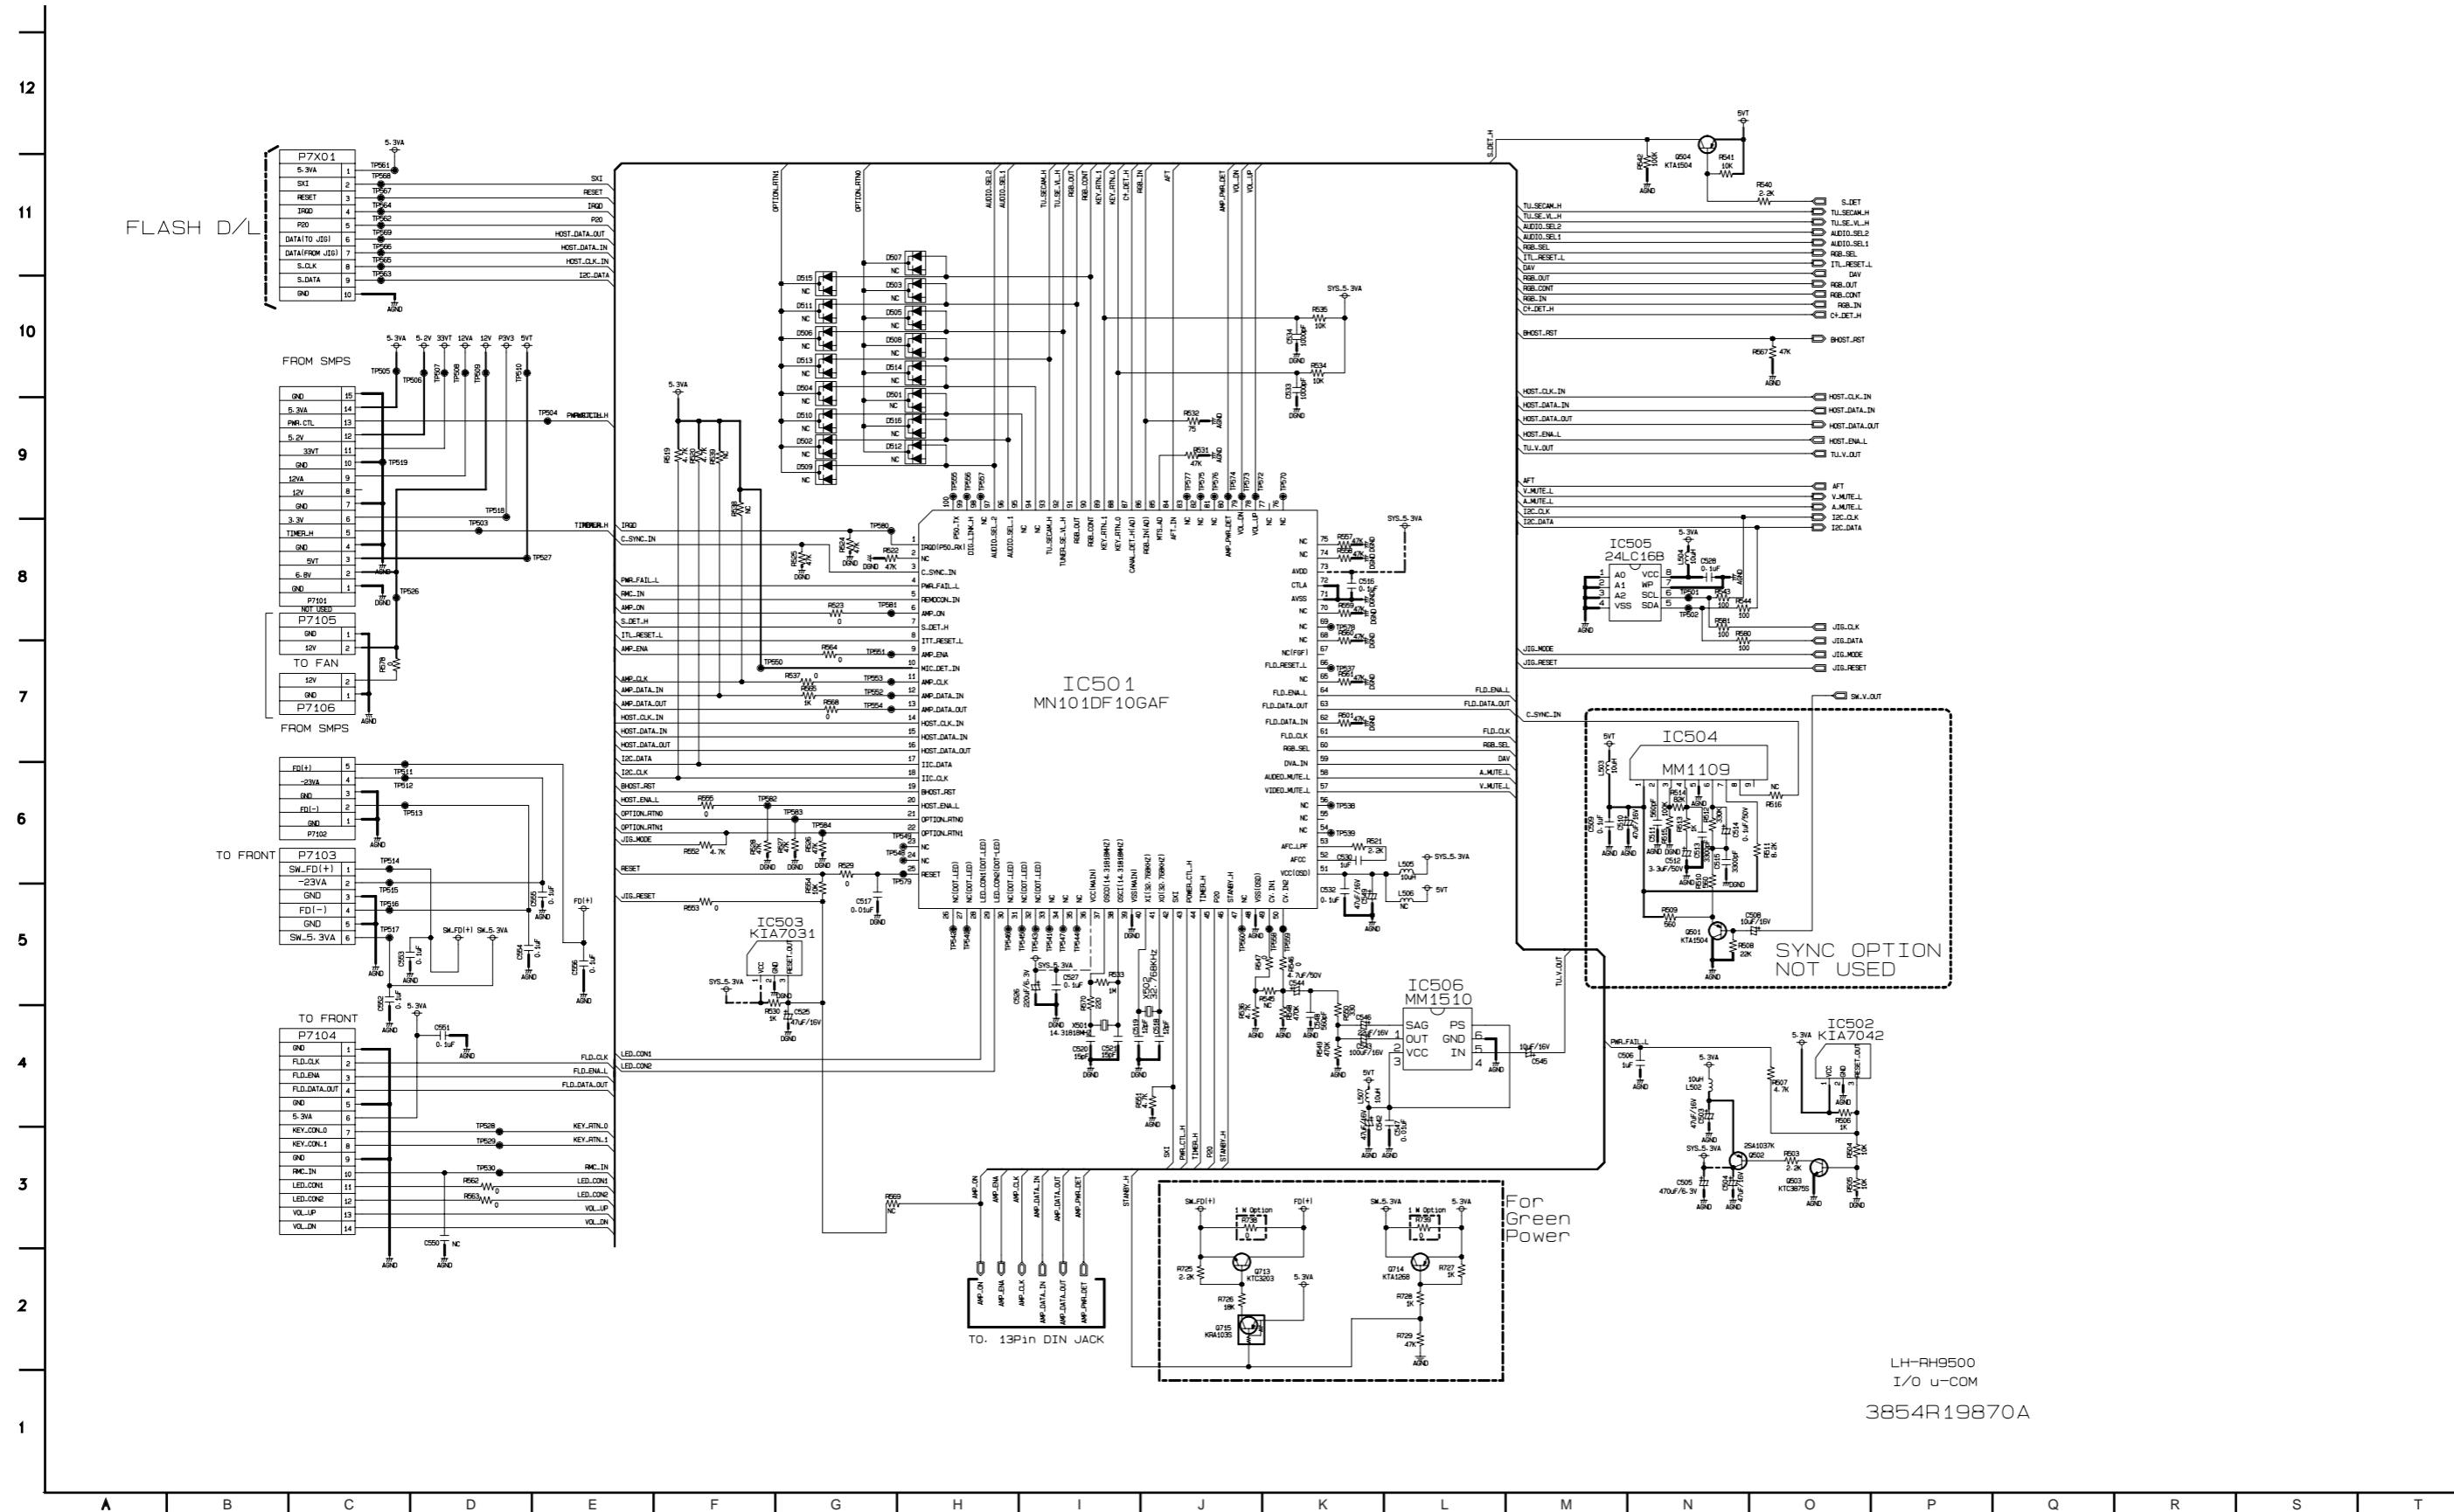


3. I/O CIRCUIT DIAGRAM

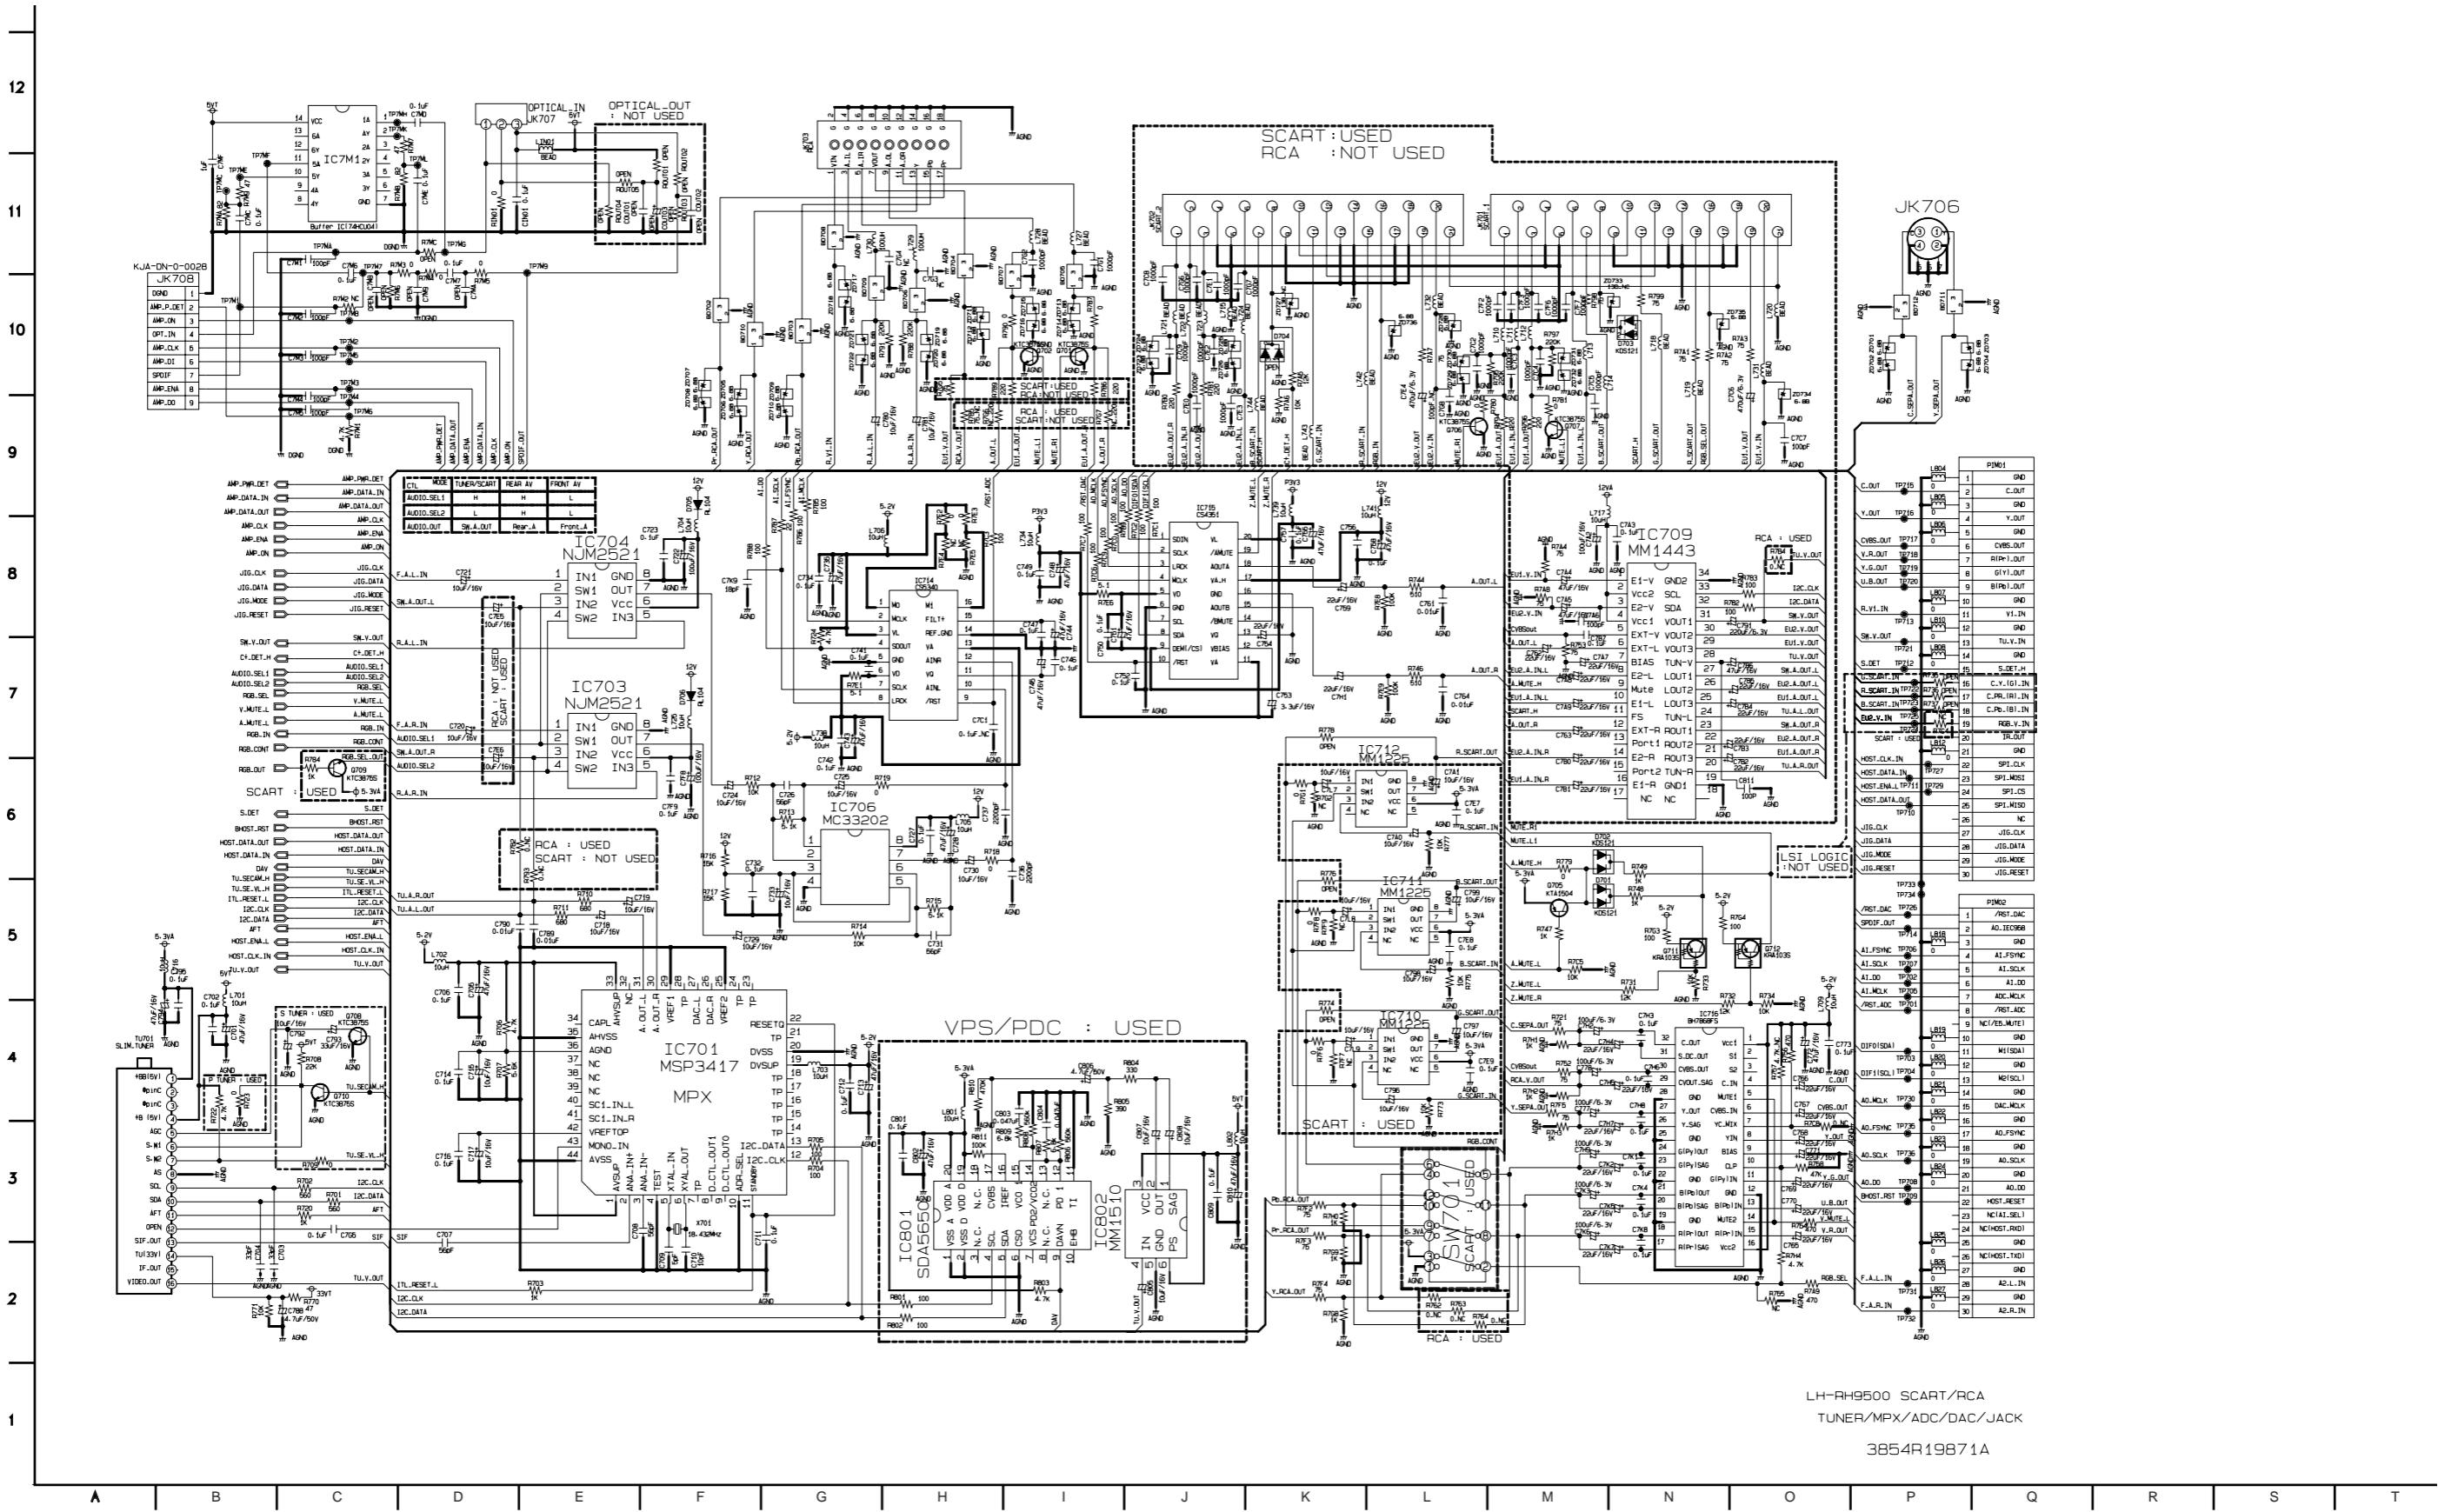


4. LSI CIRCUIT DIAGRAM

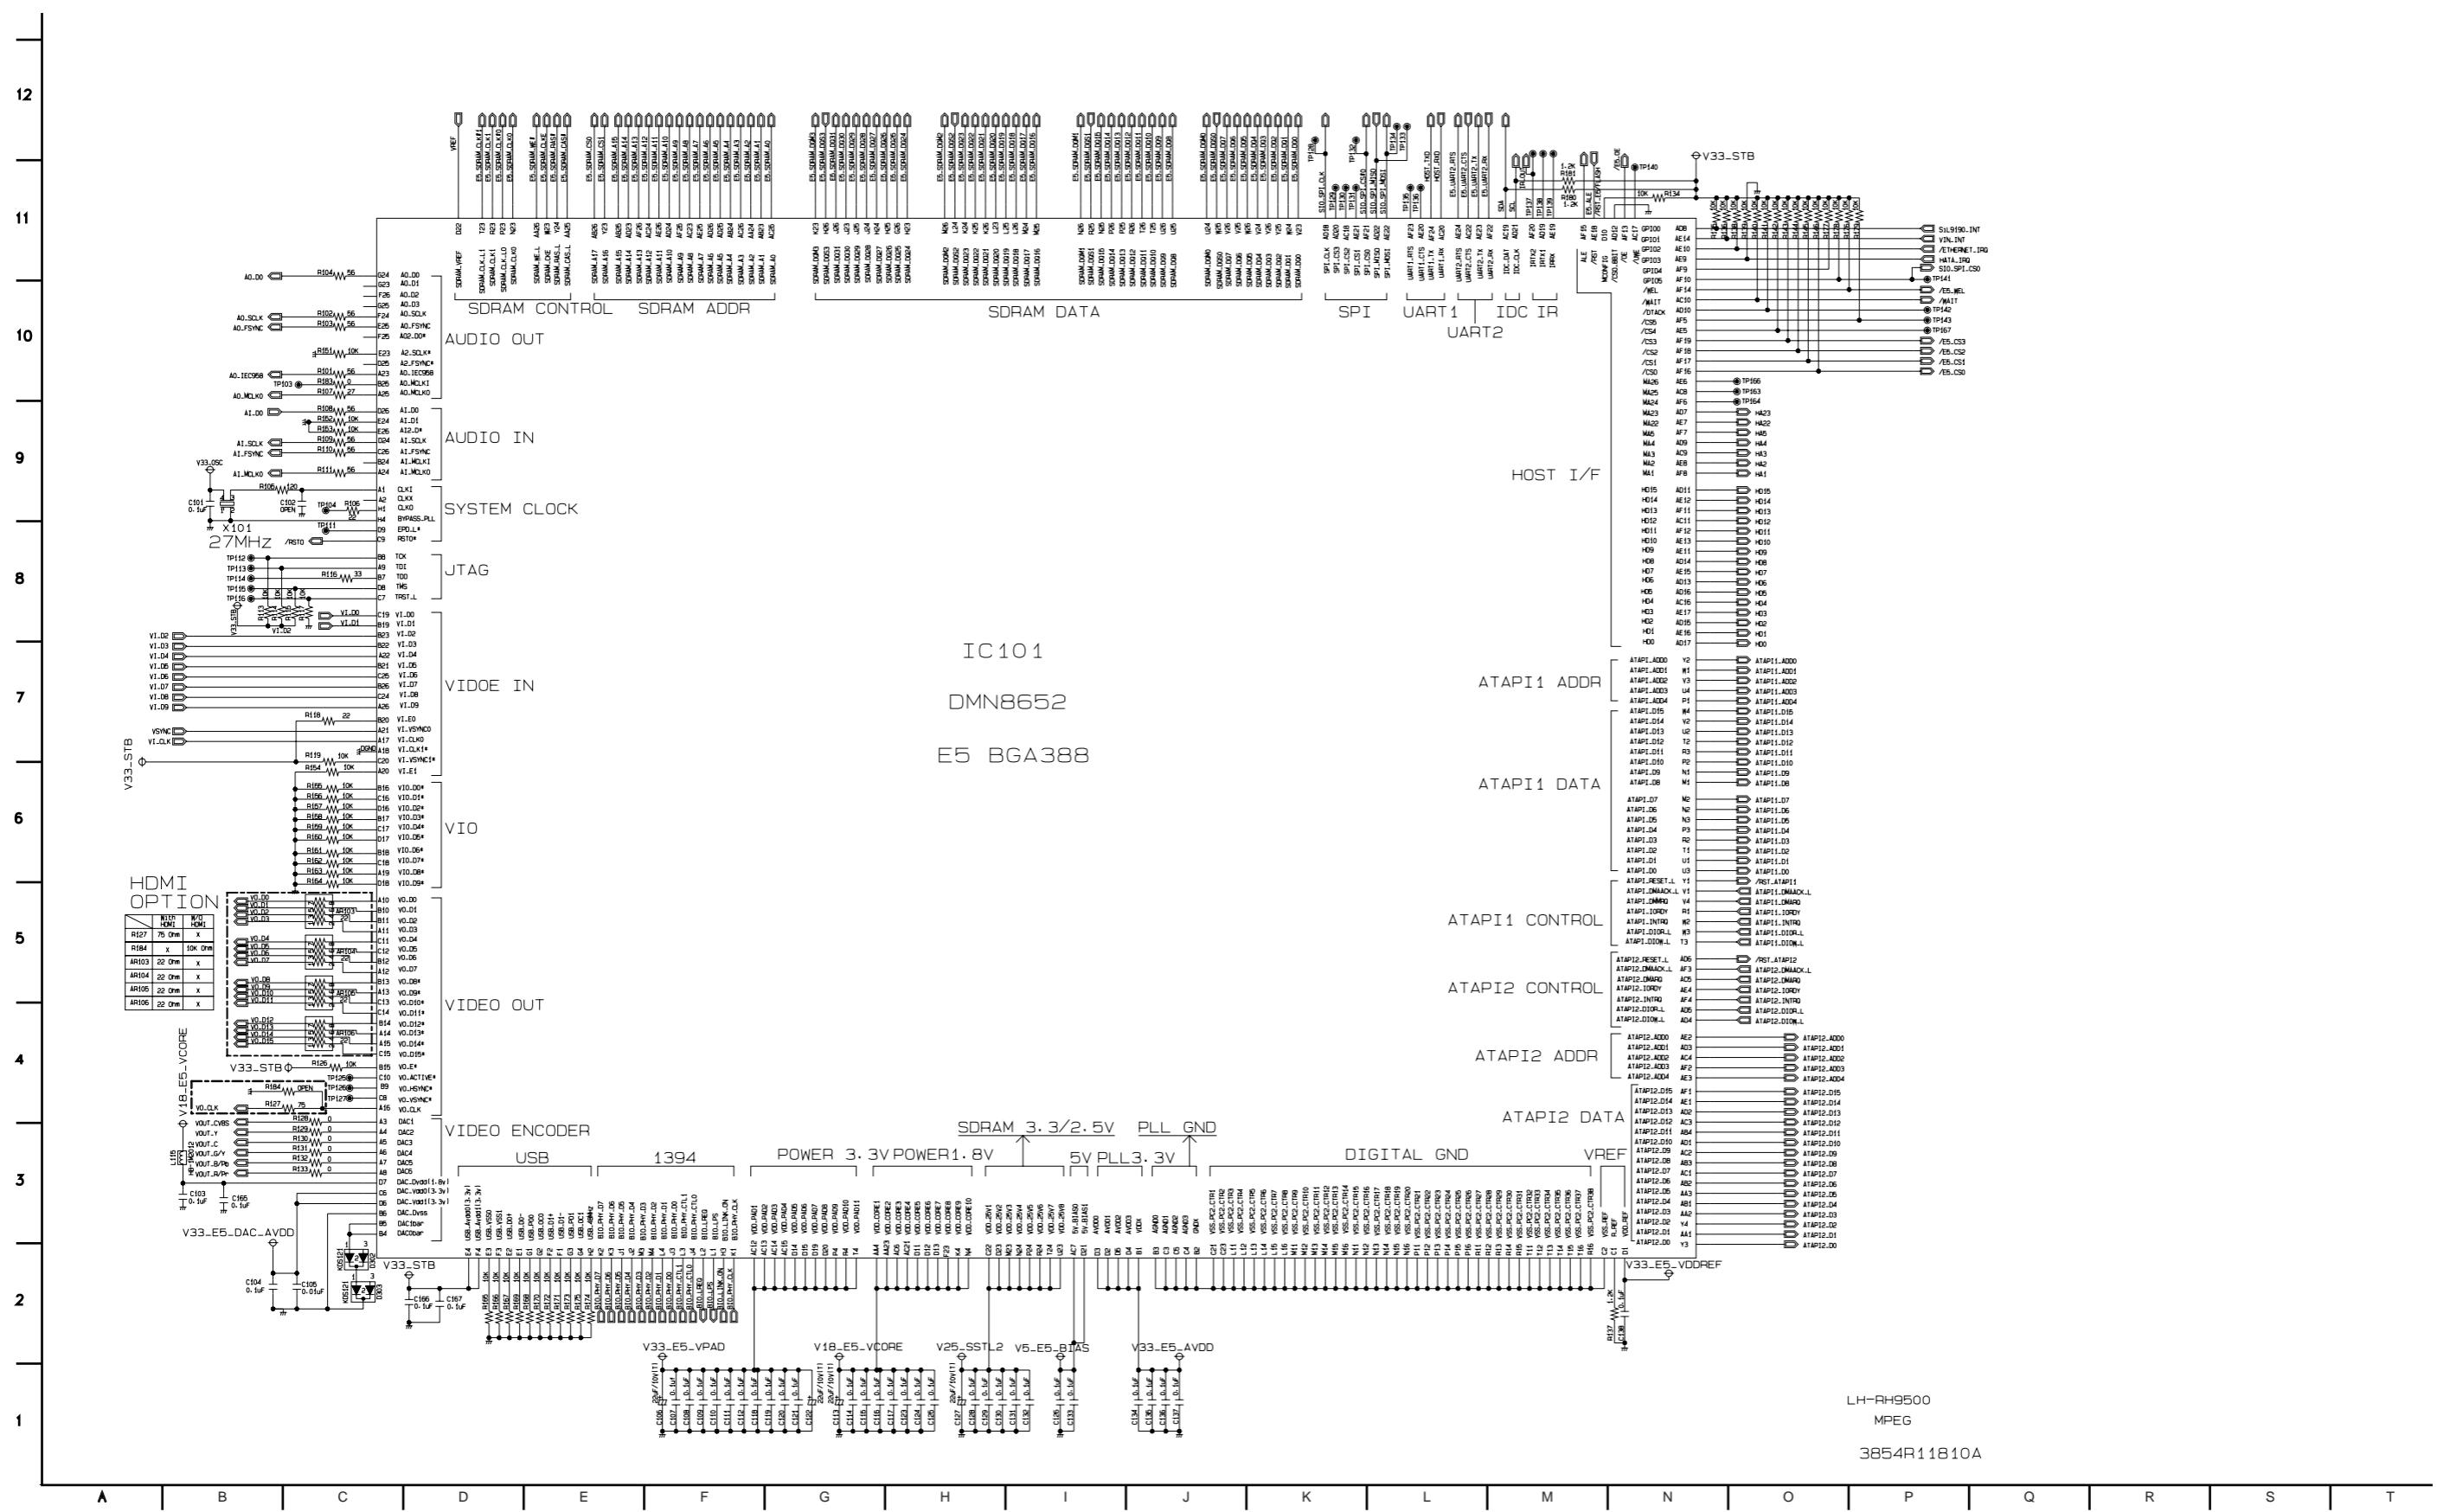


5. FLASH/DDR CIRCUIT DIAGRAM

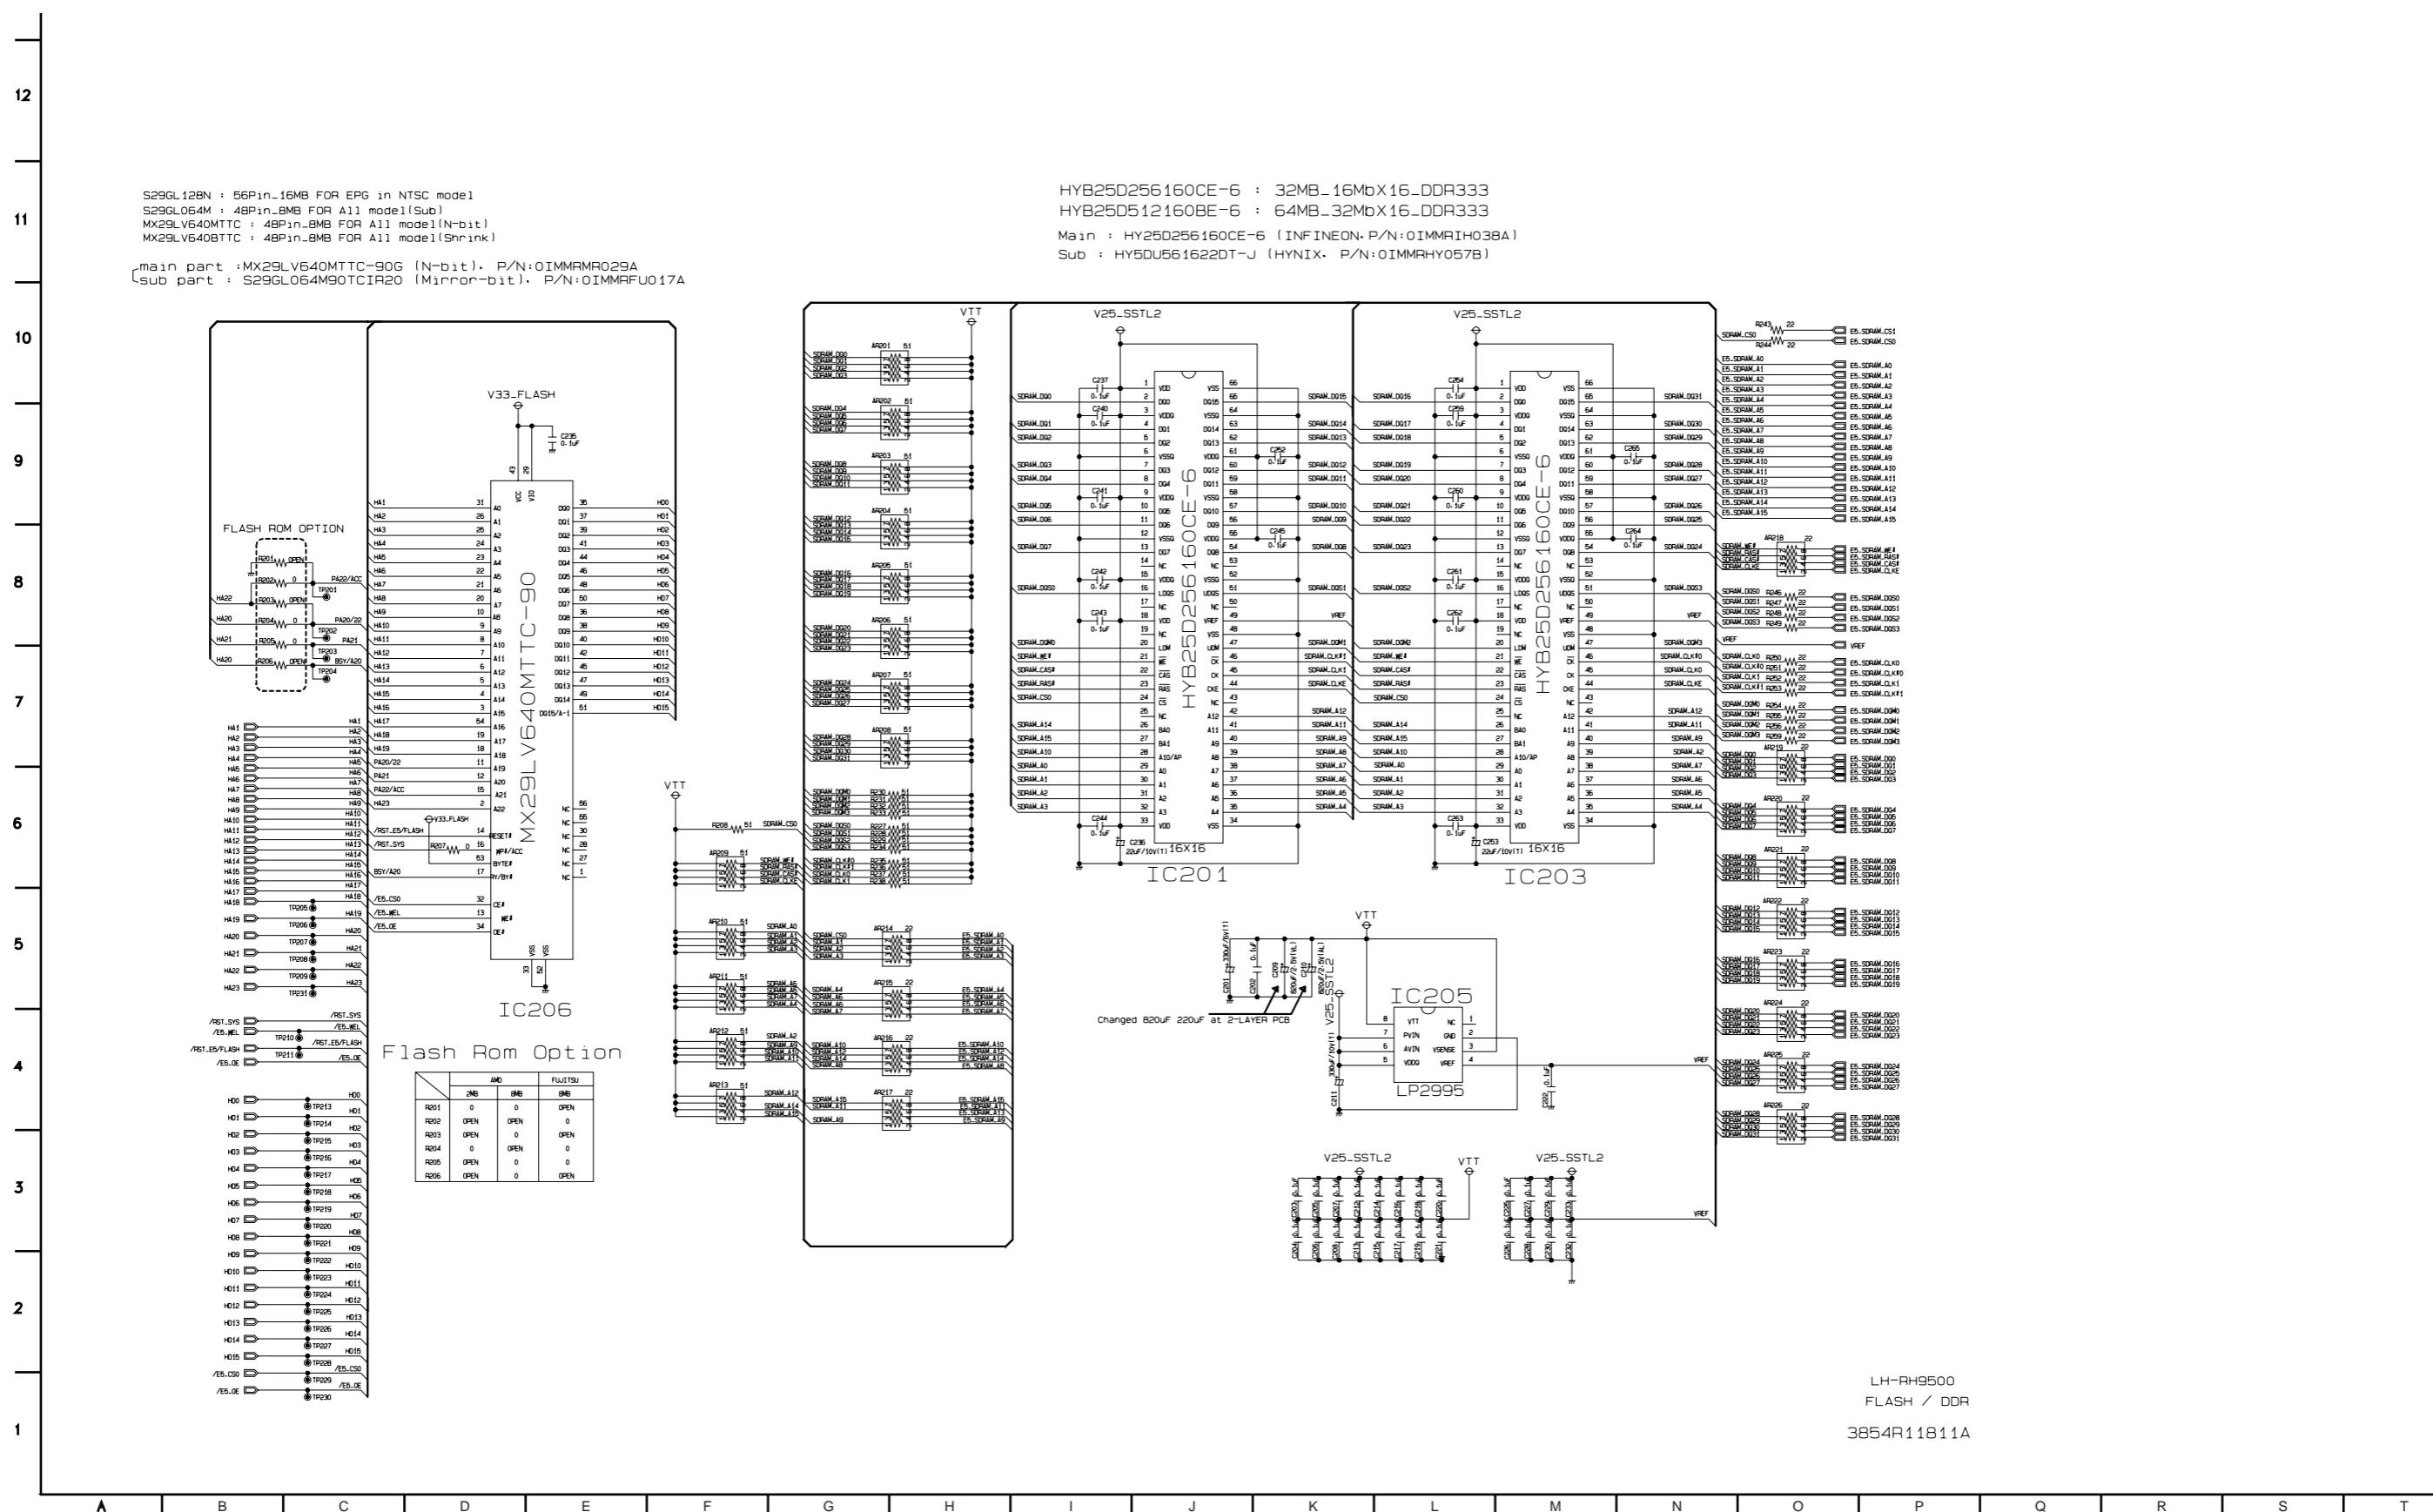


6. RESET/RATCH CIRCUIT DIAGRAM

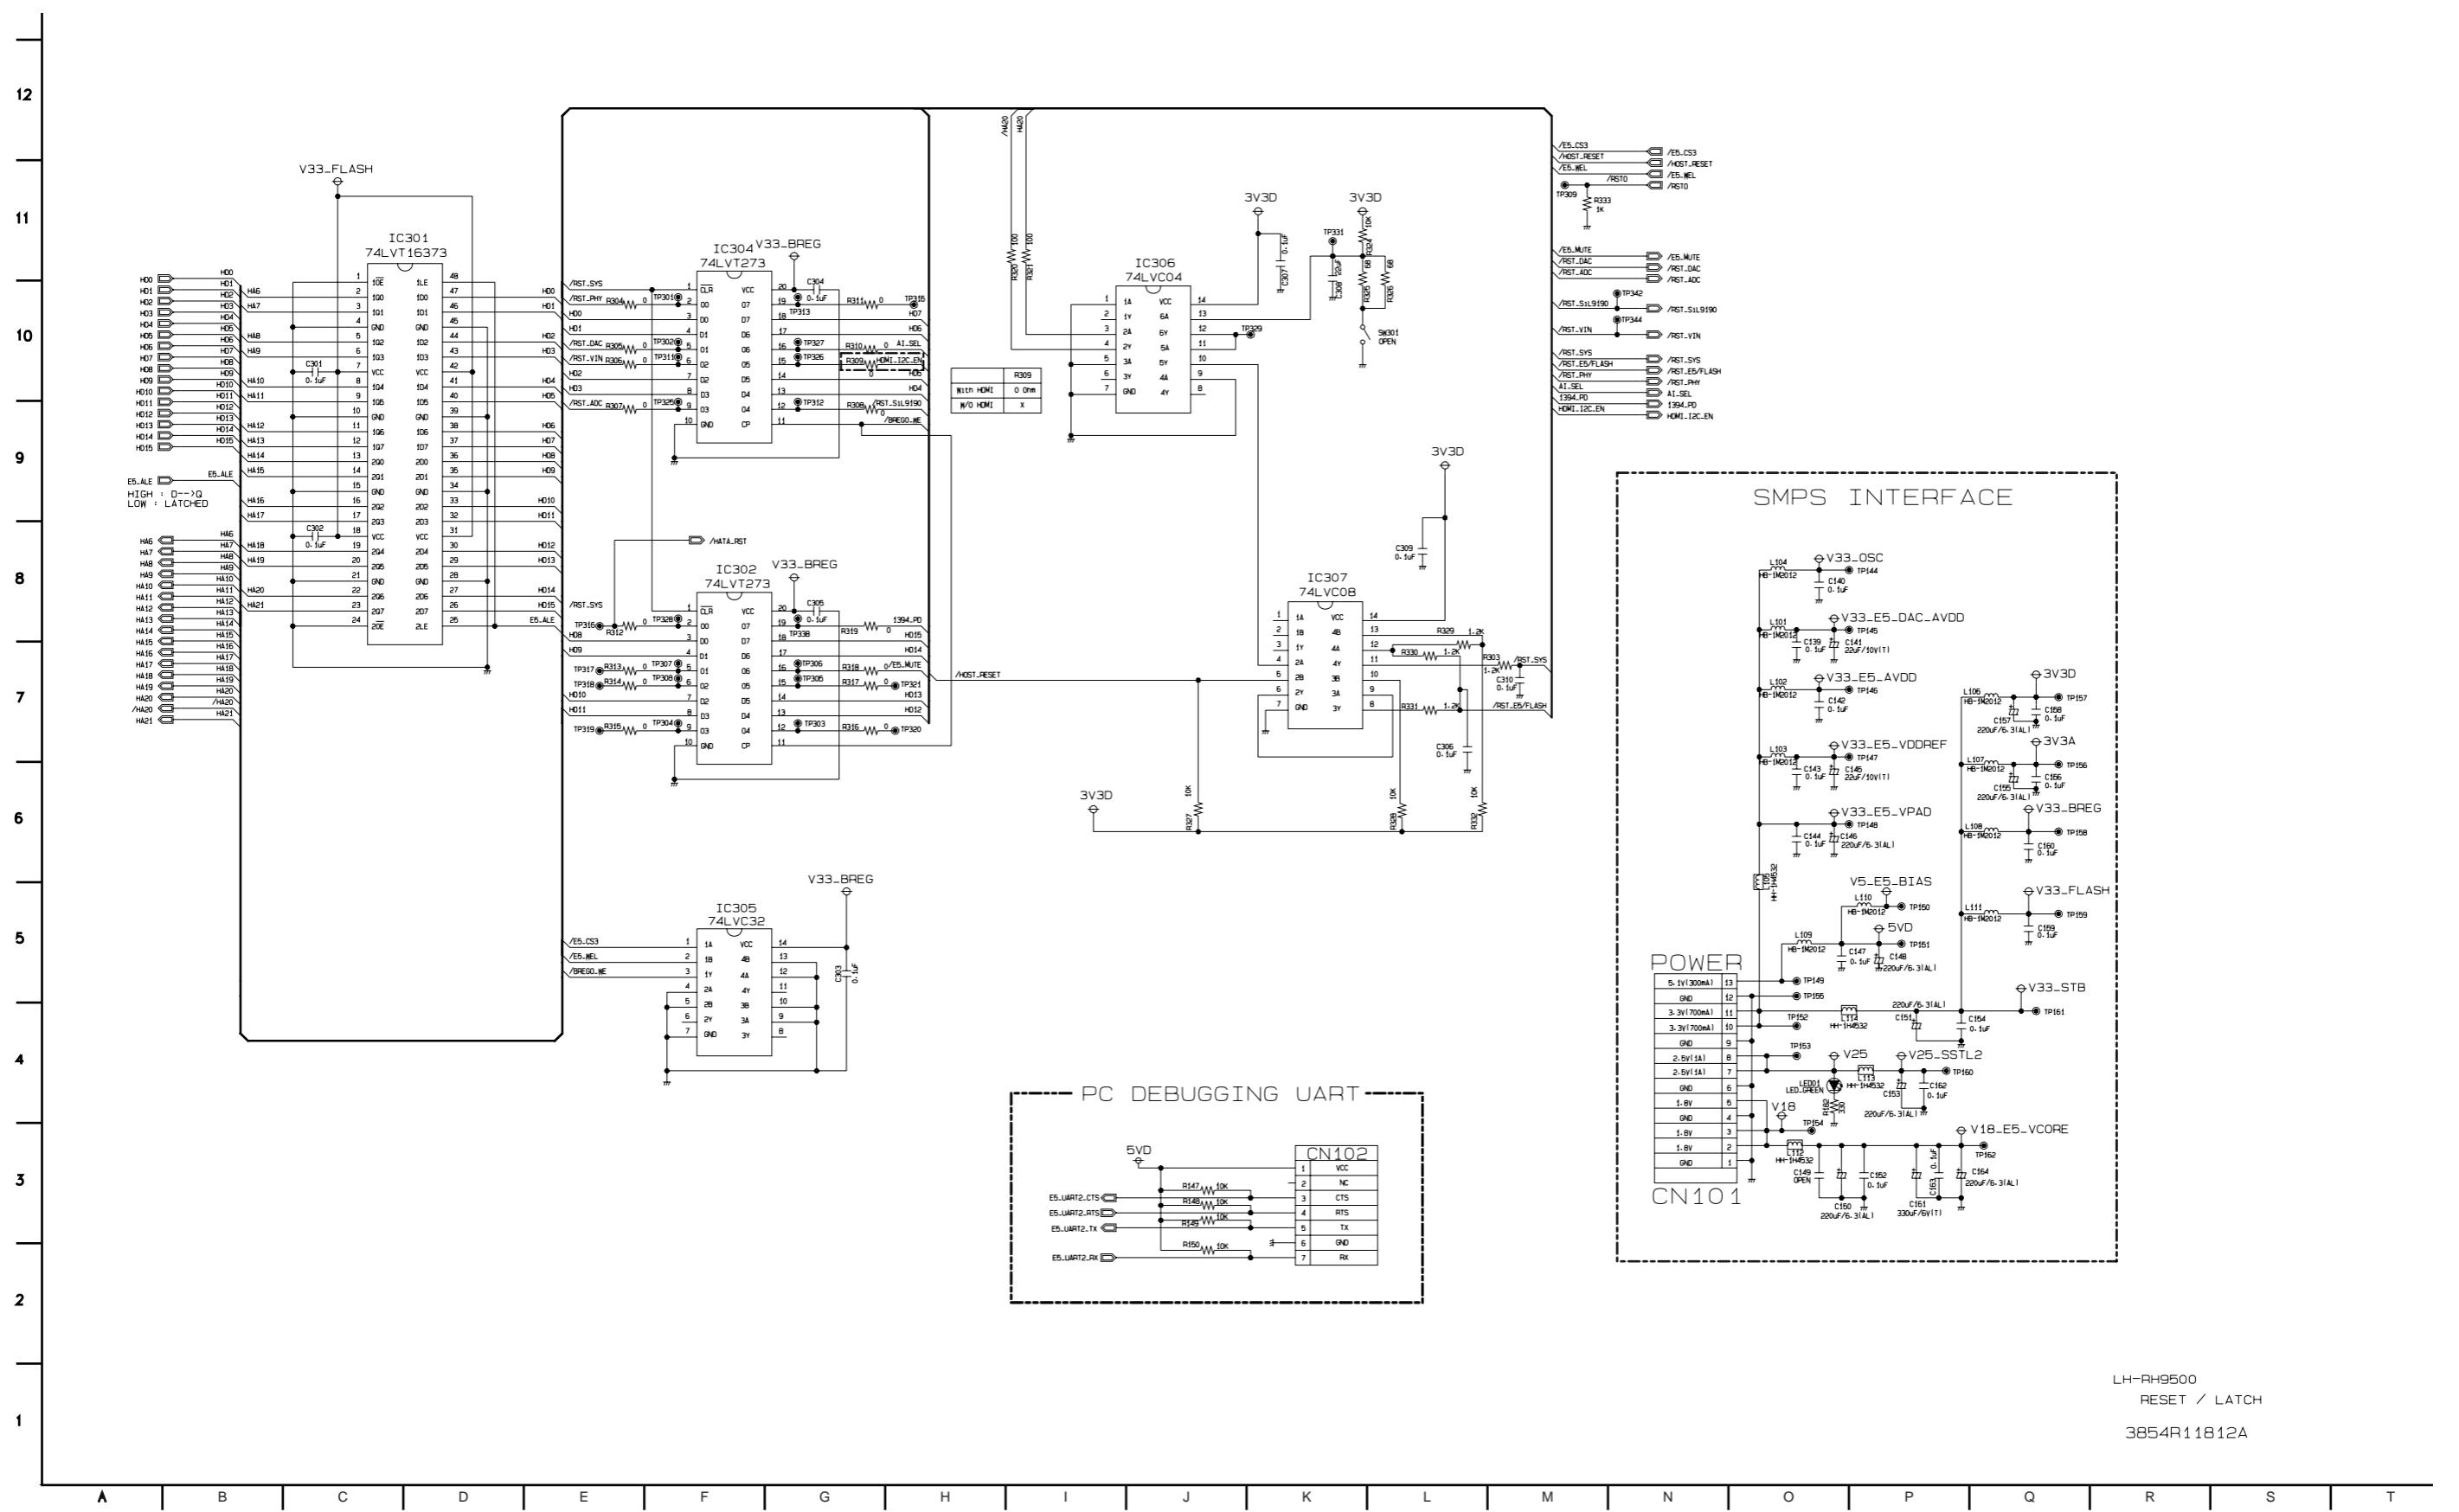

7. HDMI/IEEE1394 CIRCUIT DIAGRAM

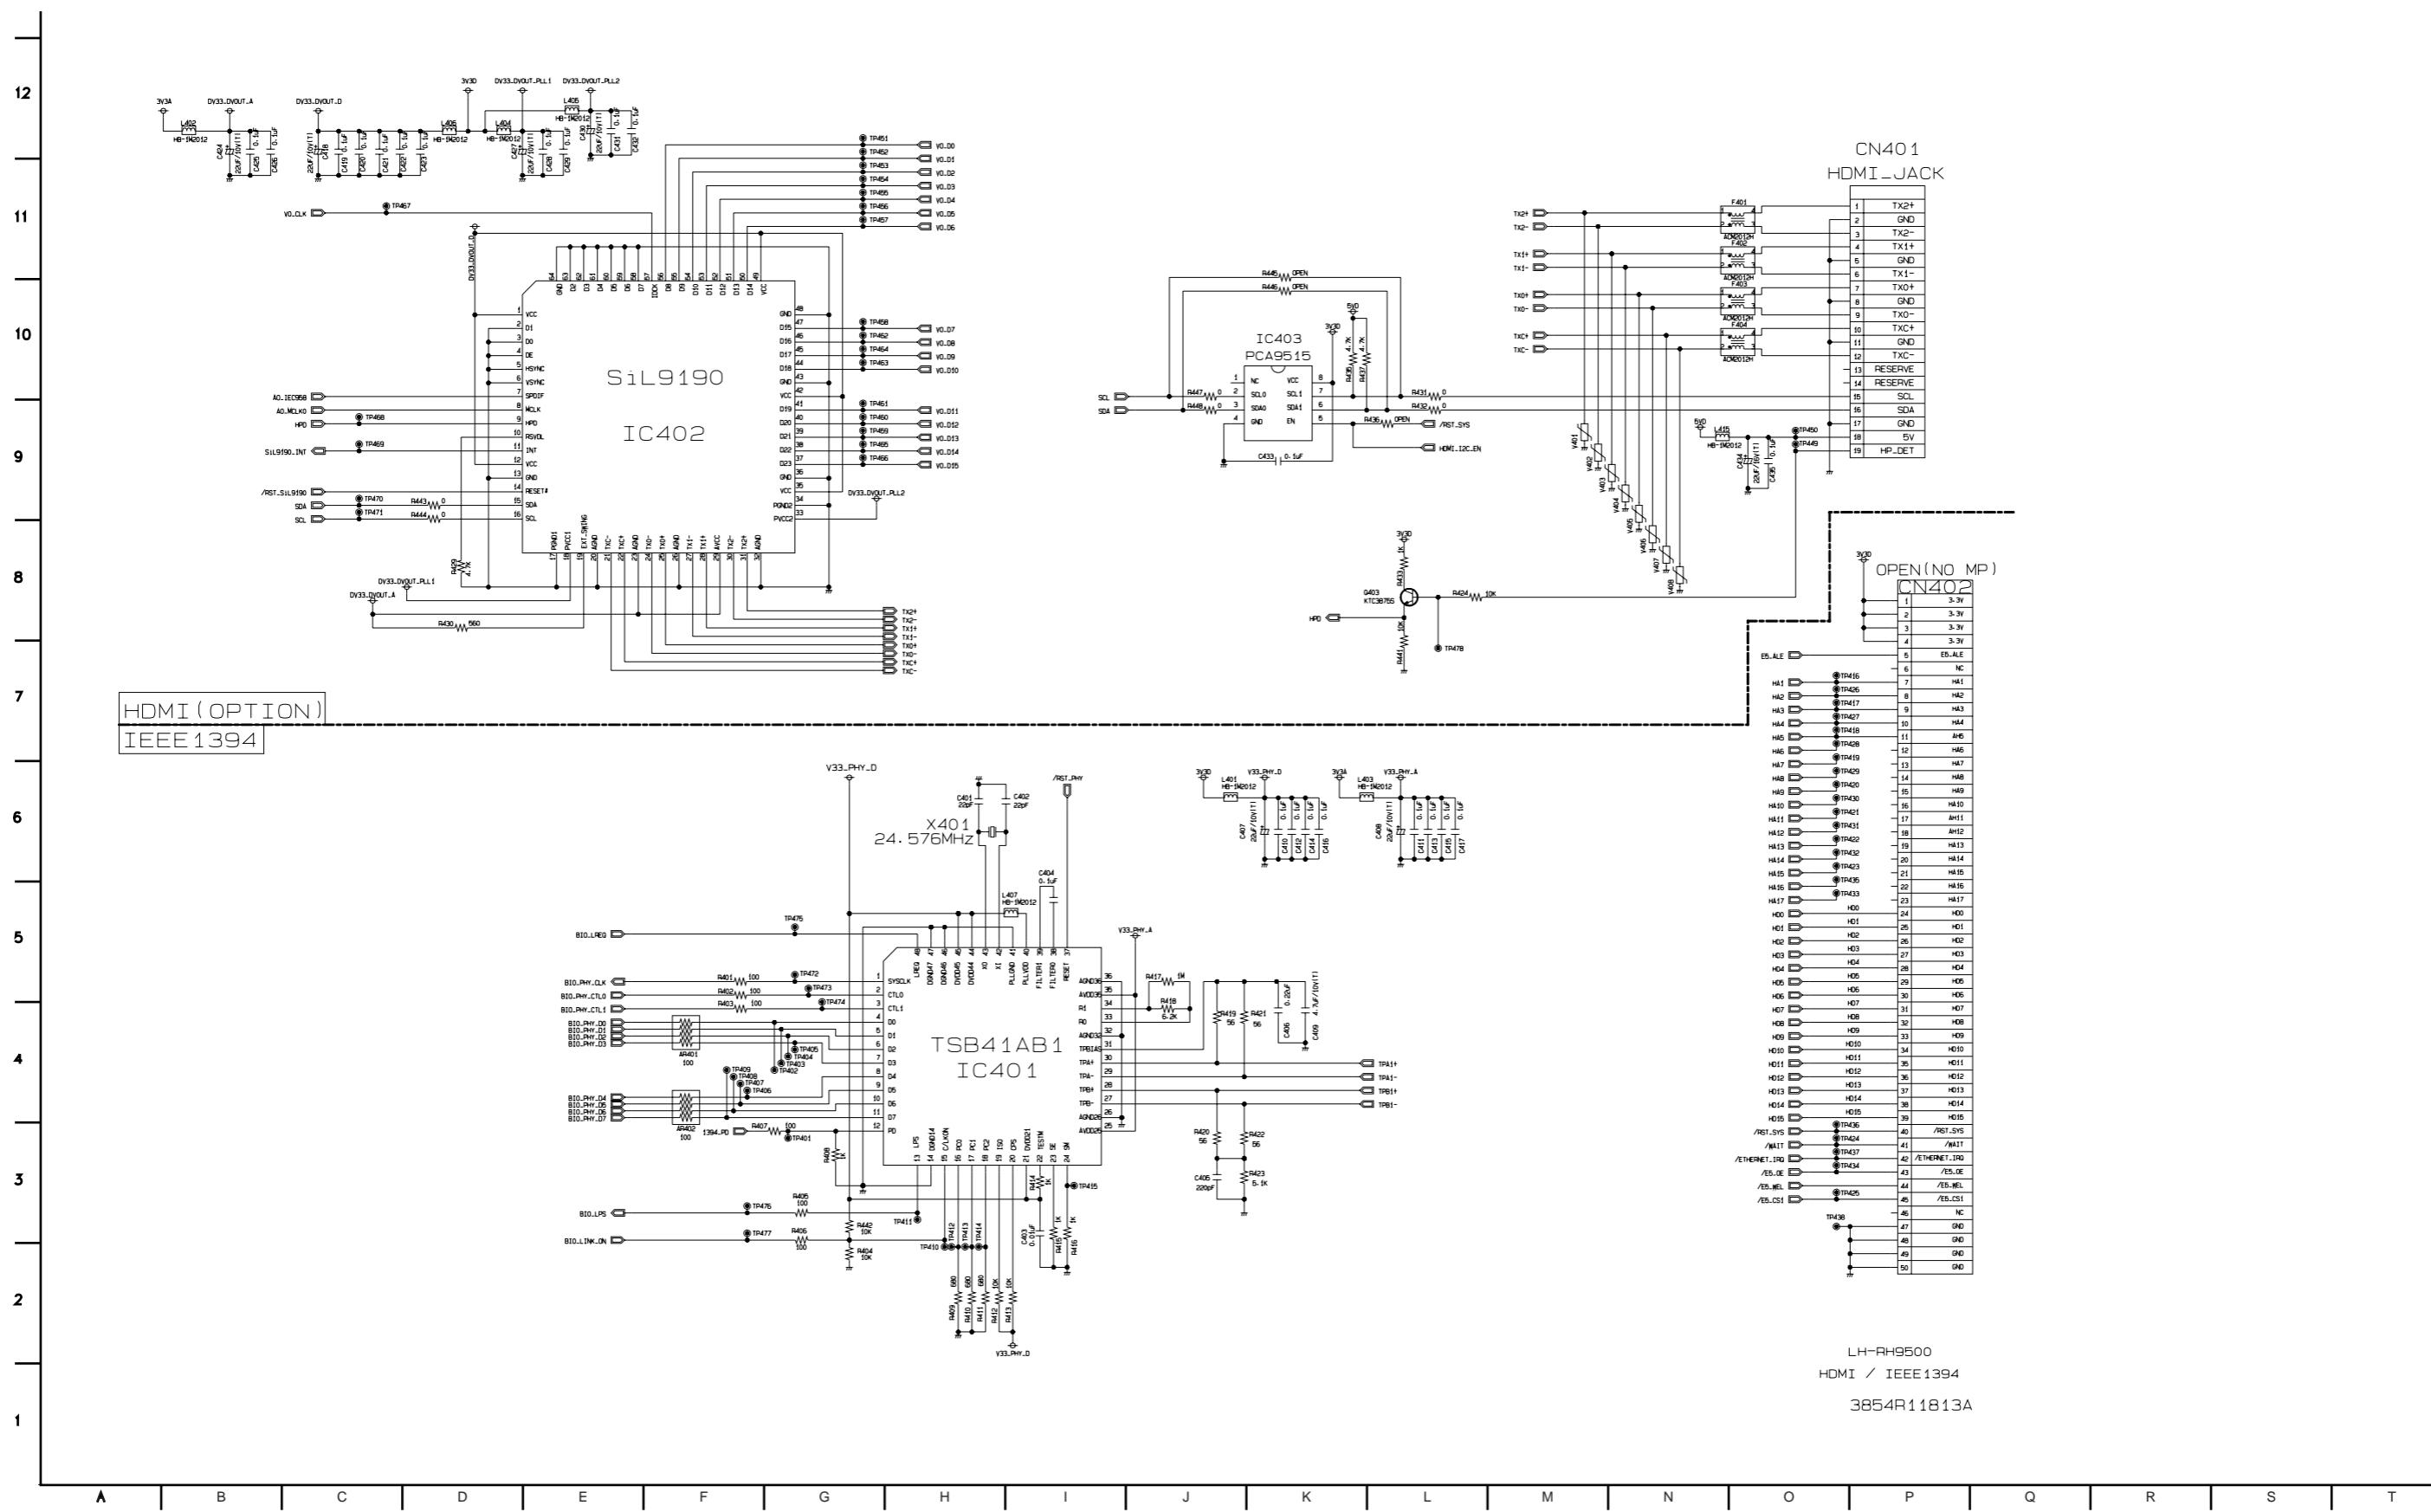


8. VIDEO DECODER CIRCUIT DIAGRAM

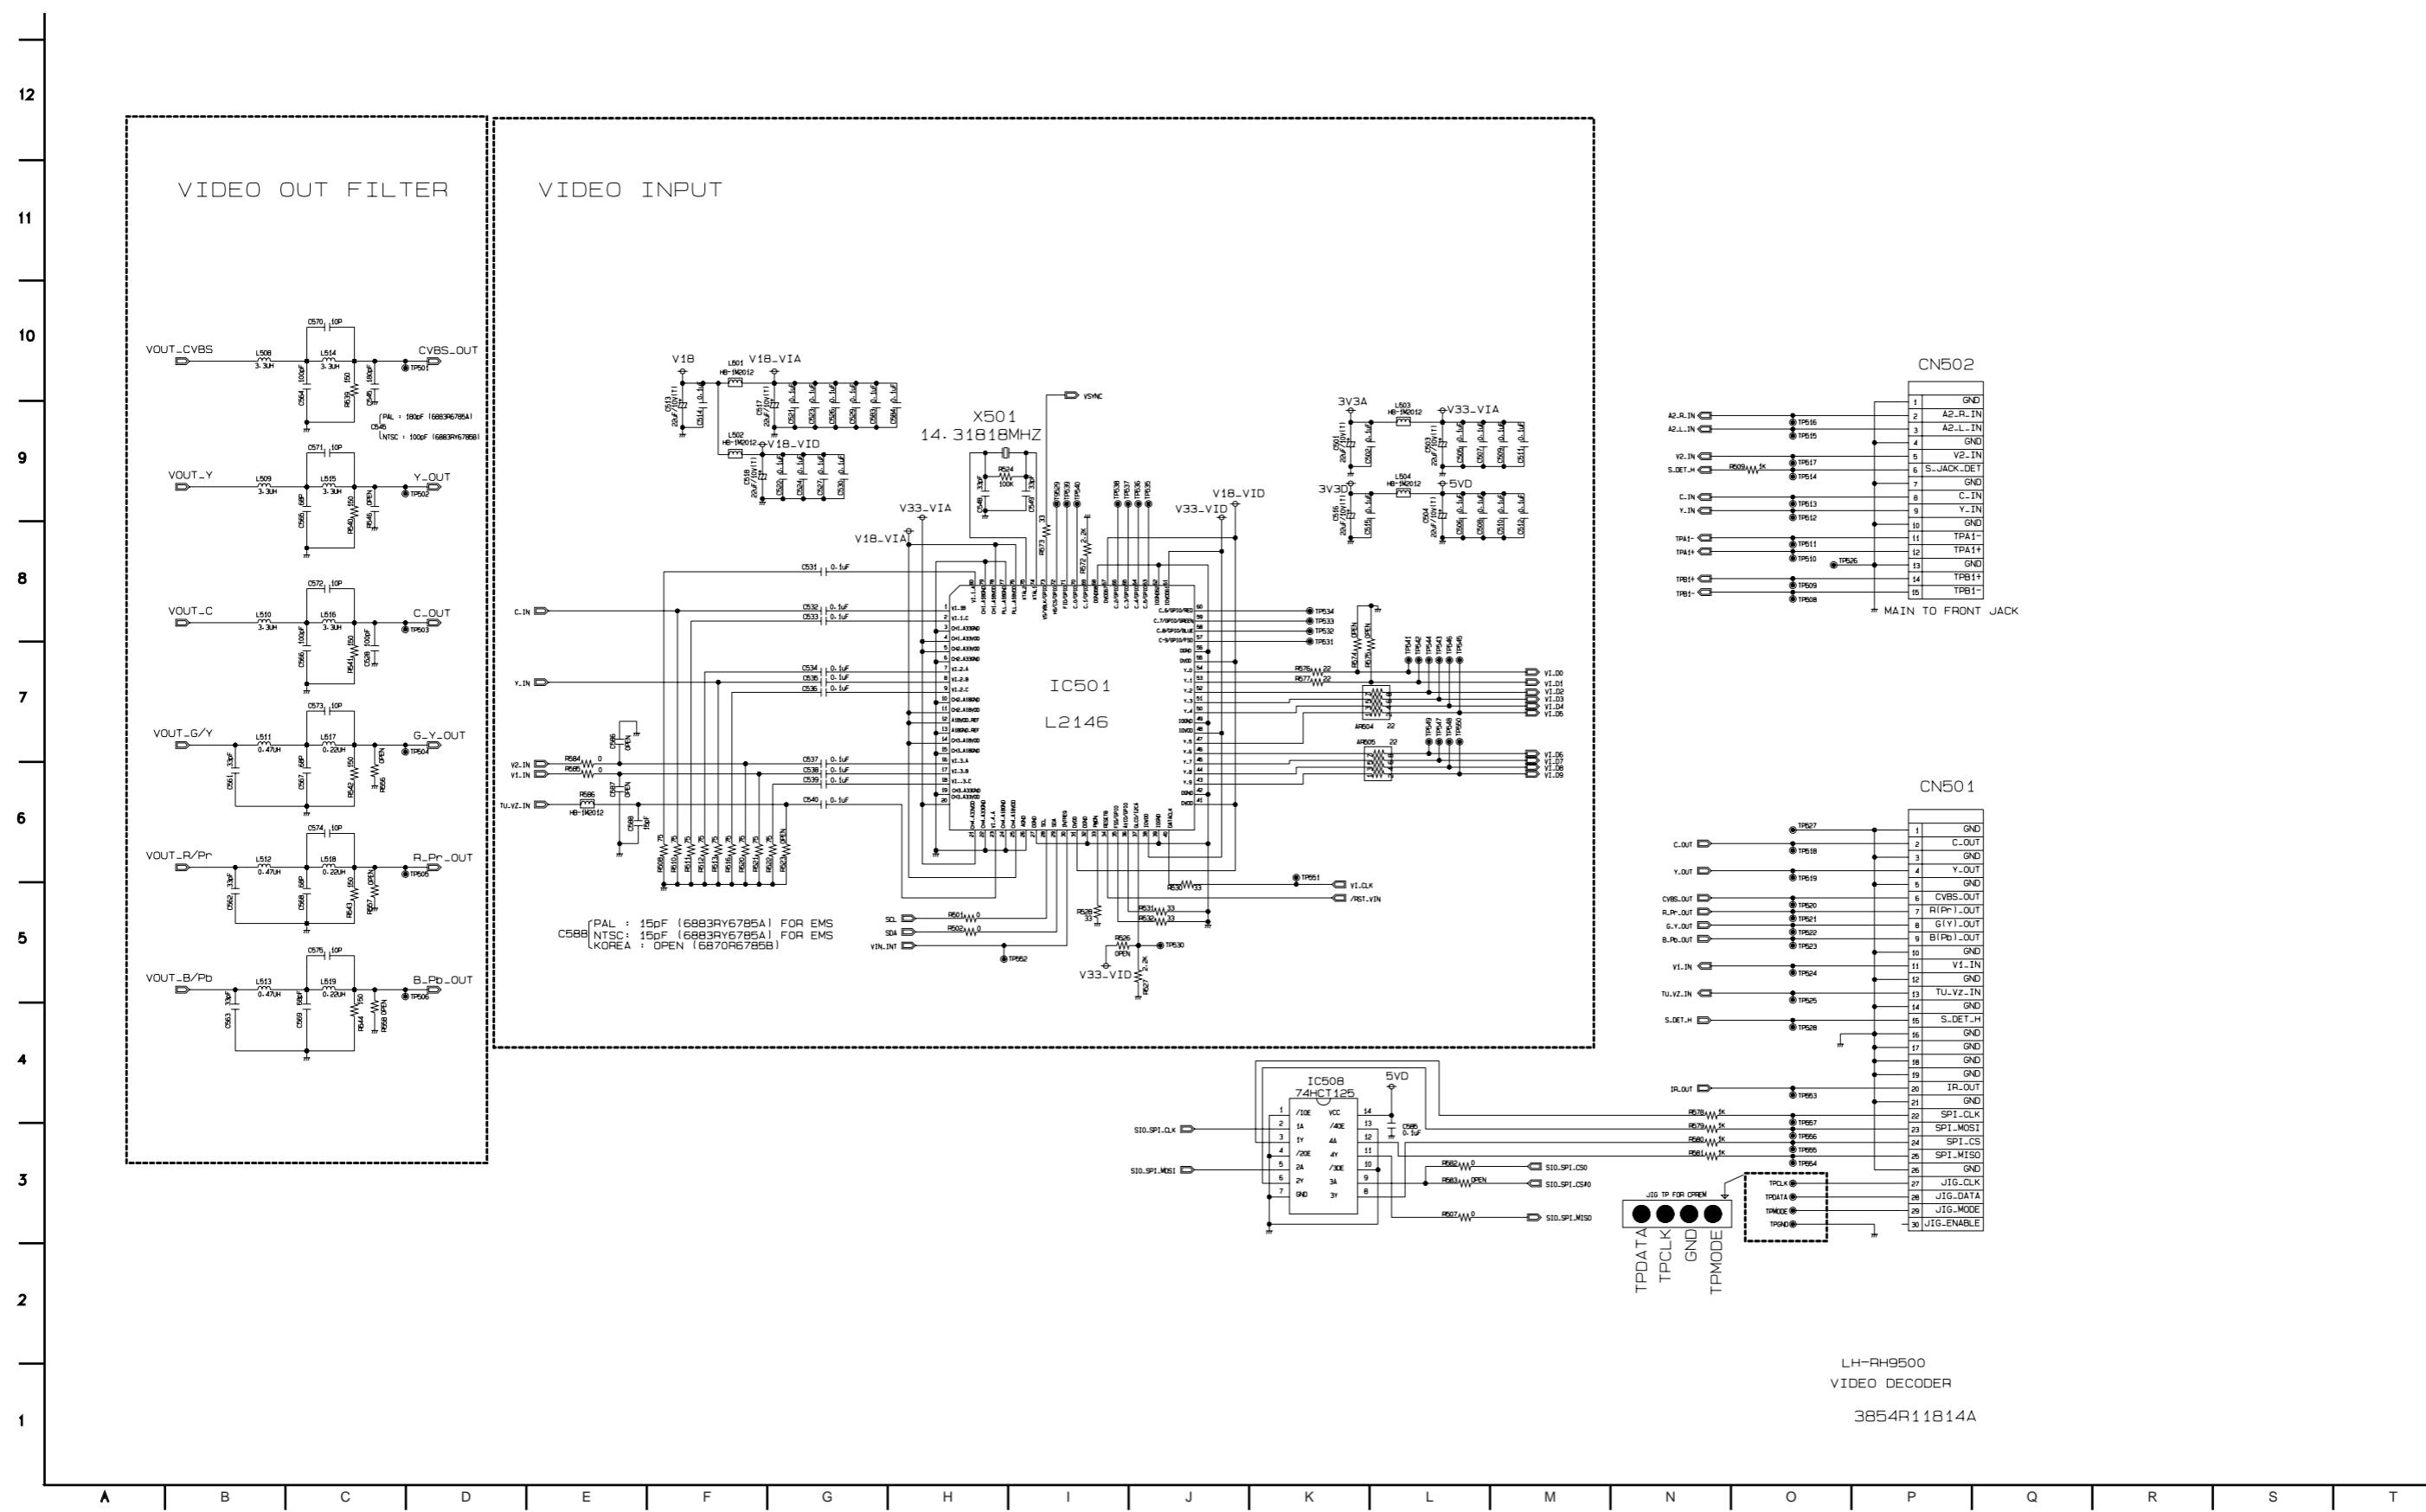


3-4

3-4


9. INTERFACE CIRCUIT DIAGRAM

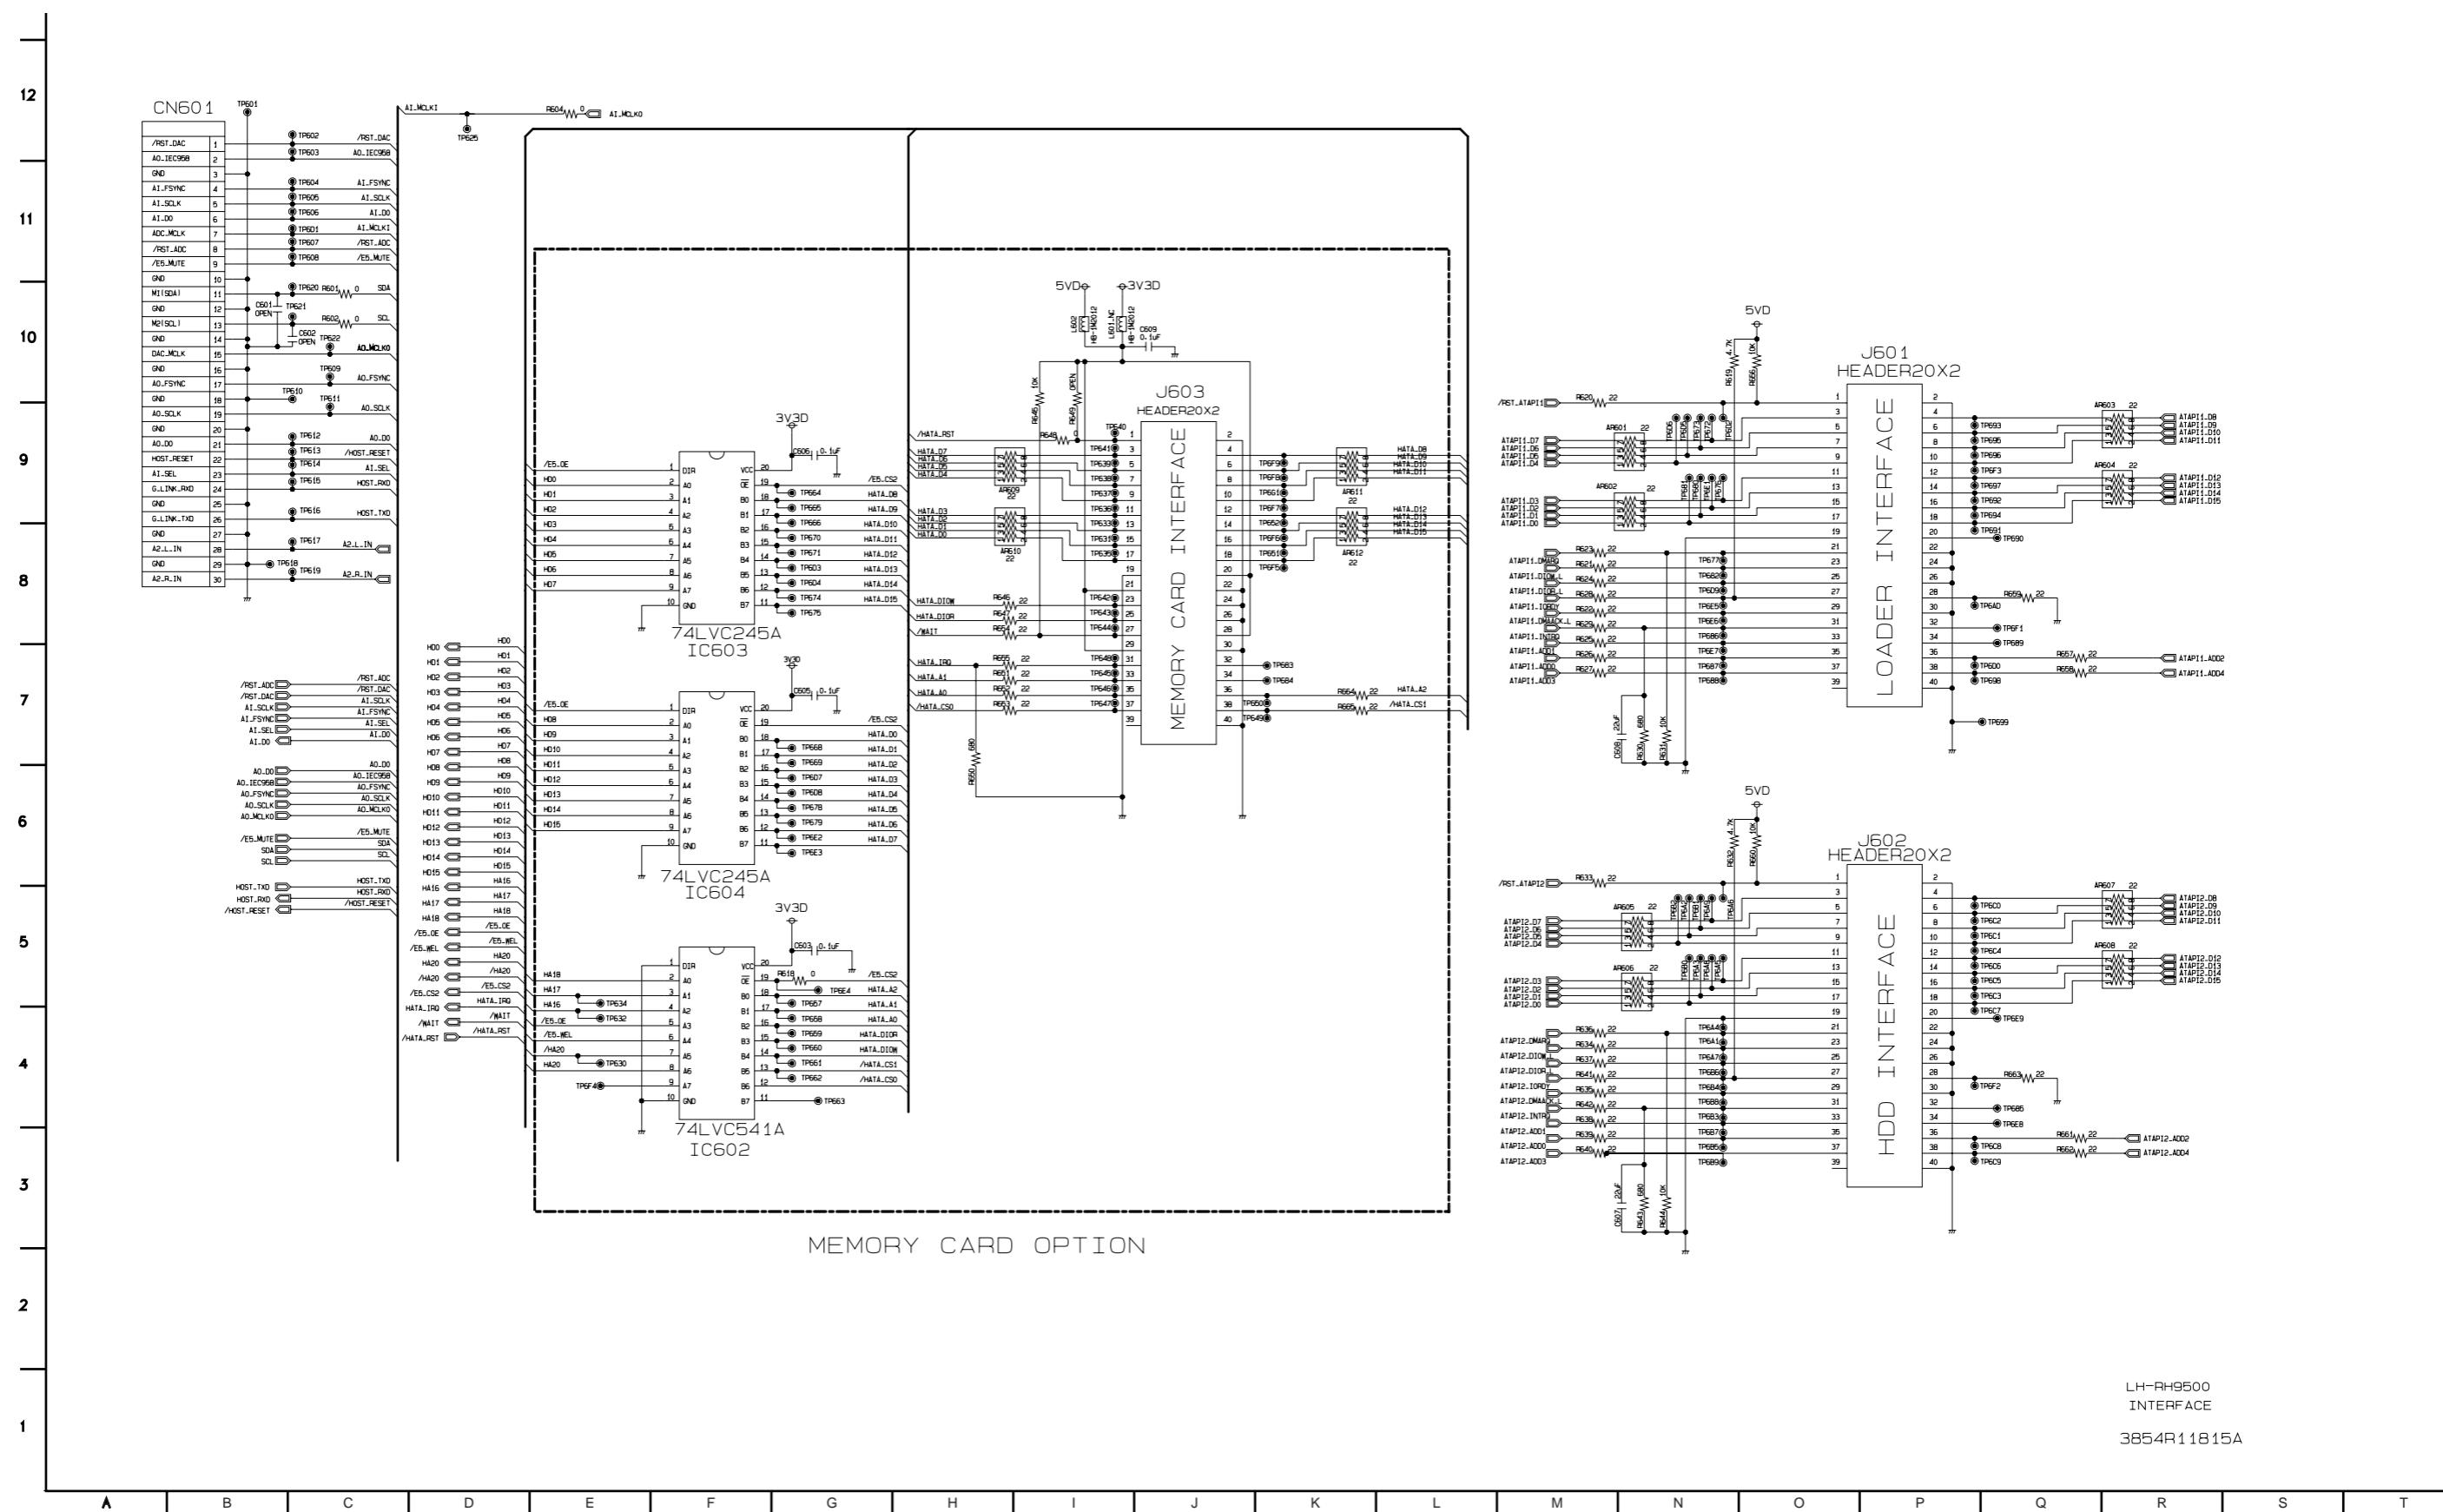


10. FRONT CIRCUIT DIAGRAM

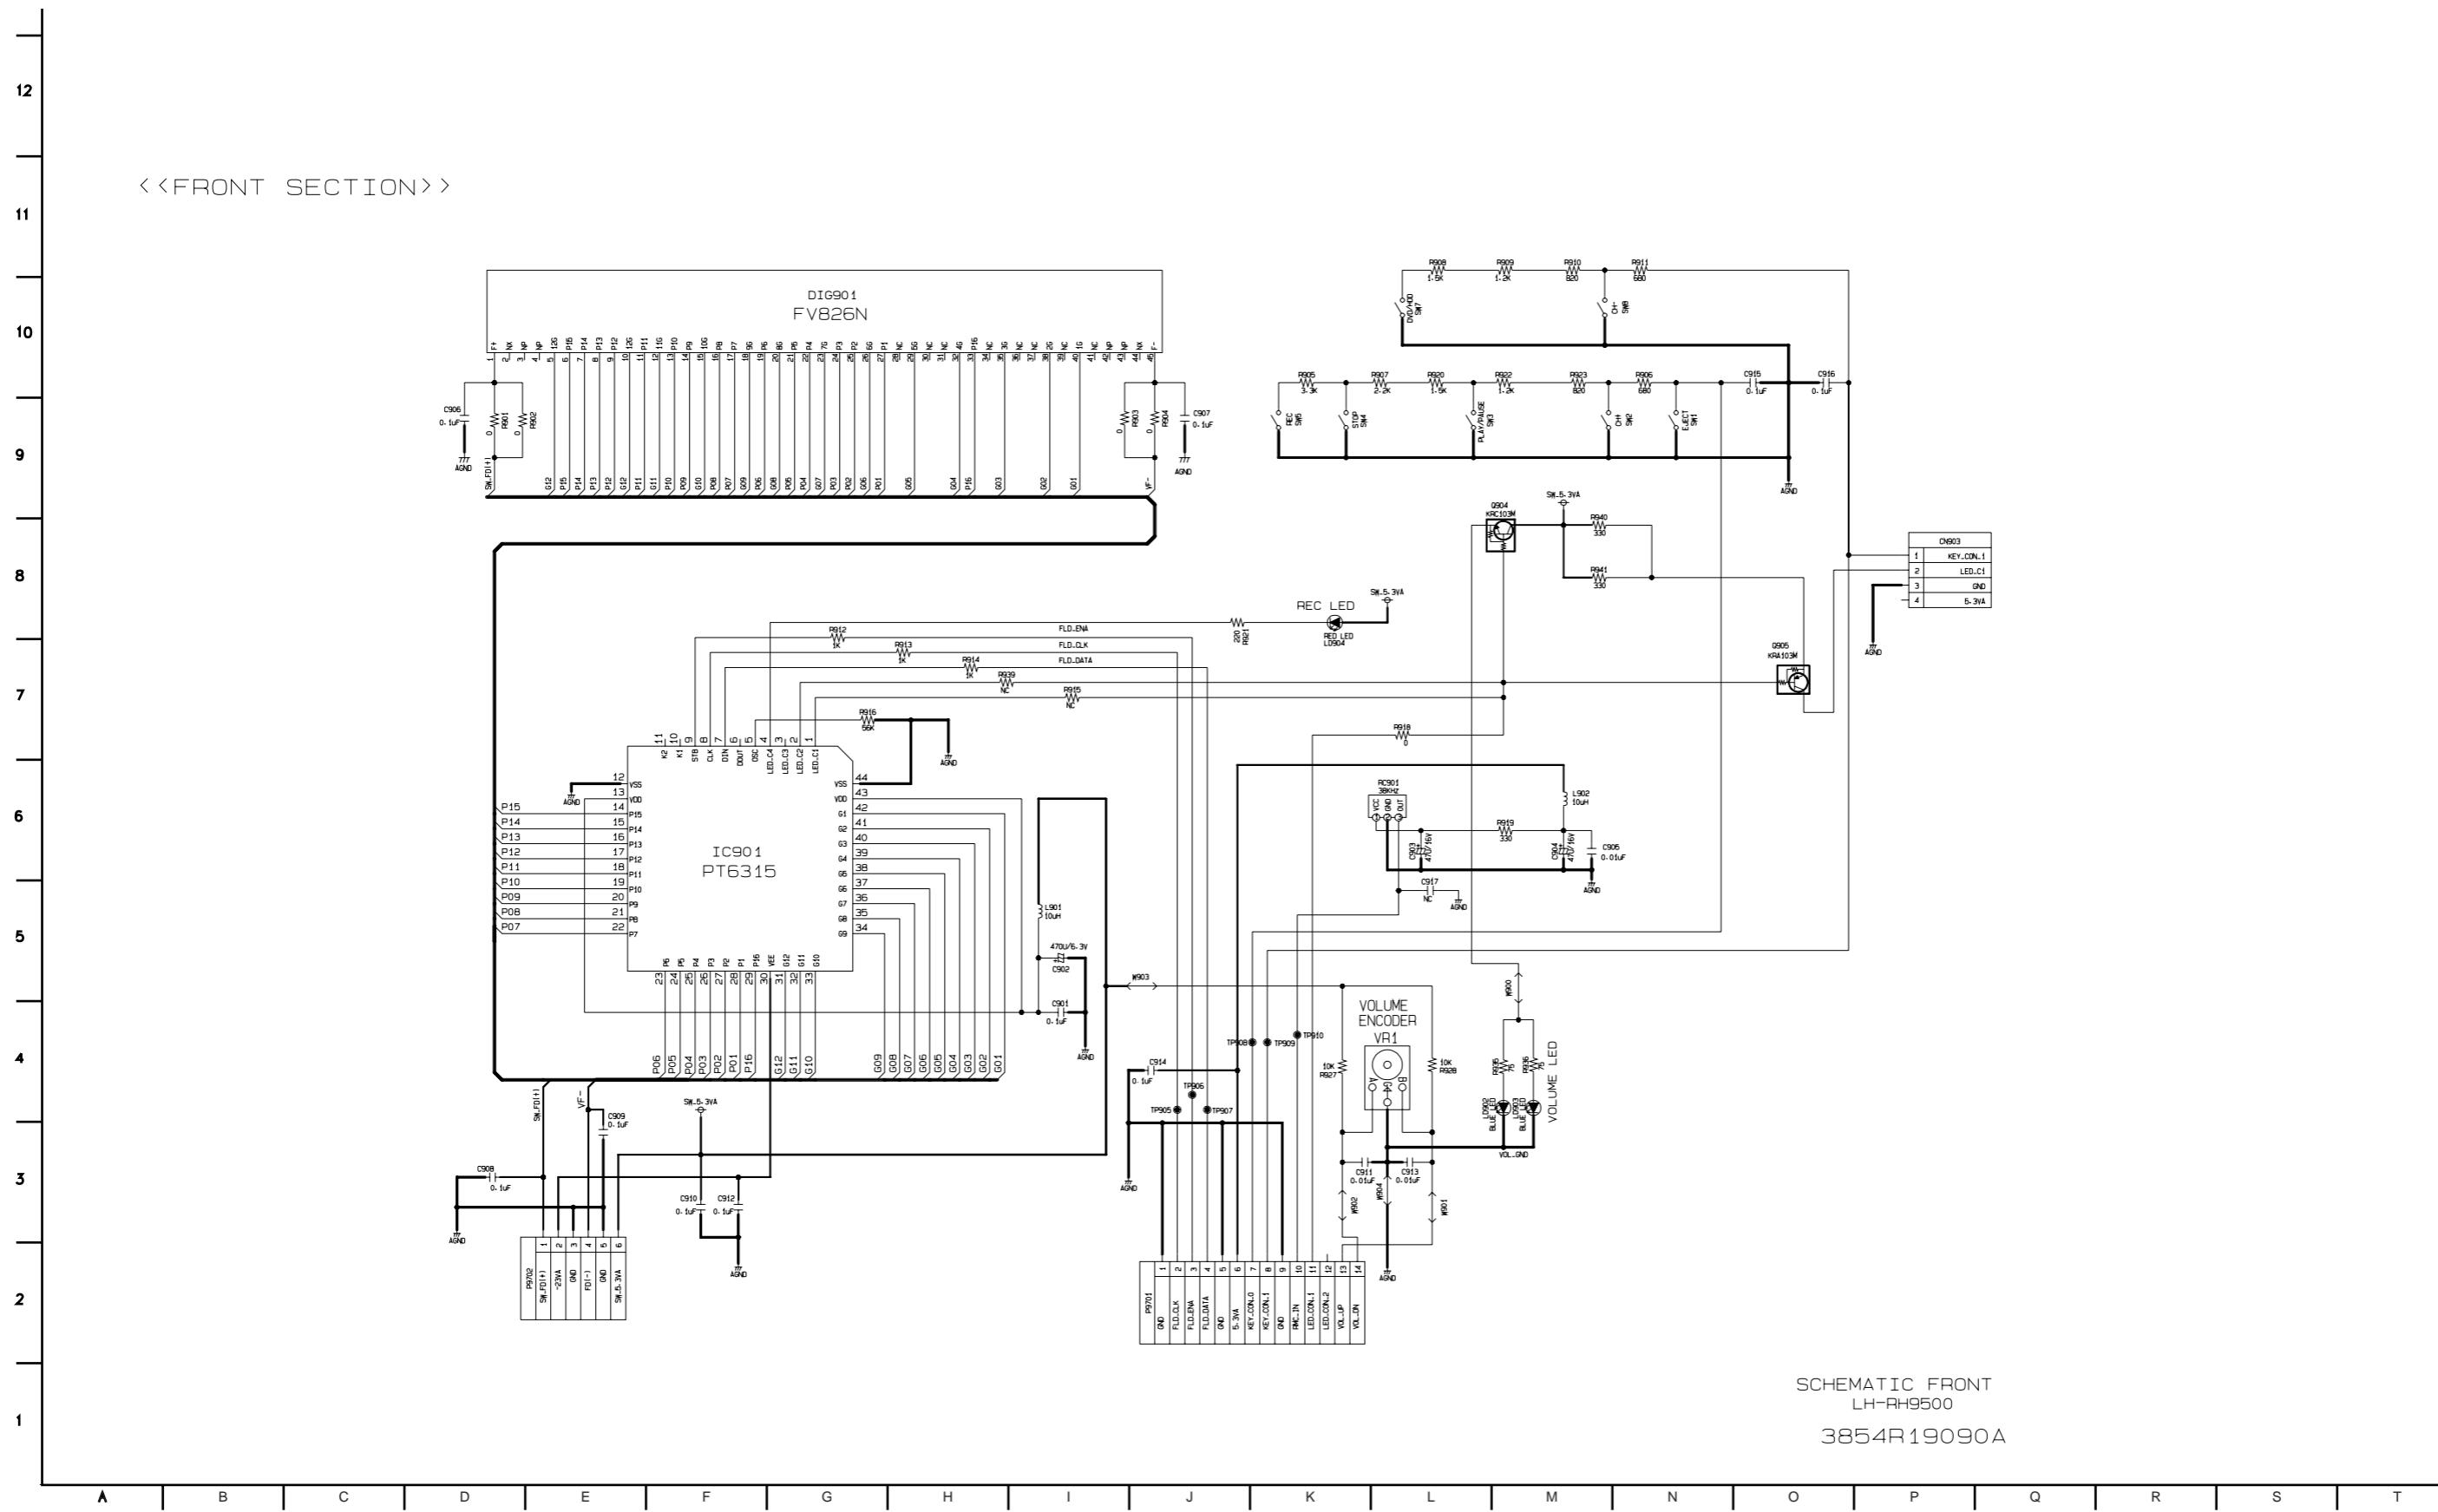

11. FRONT PWR KEYCIRCUIT DIAGRAM

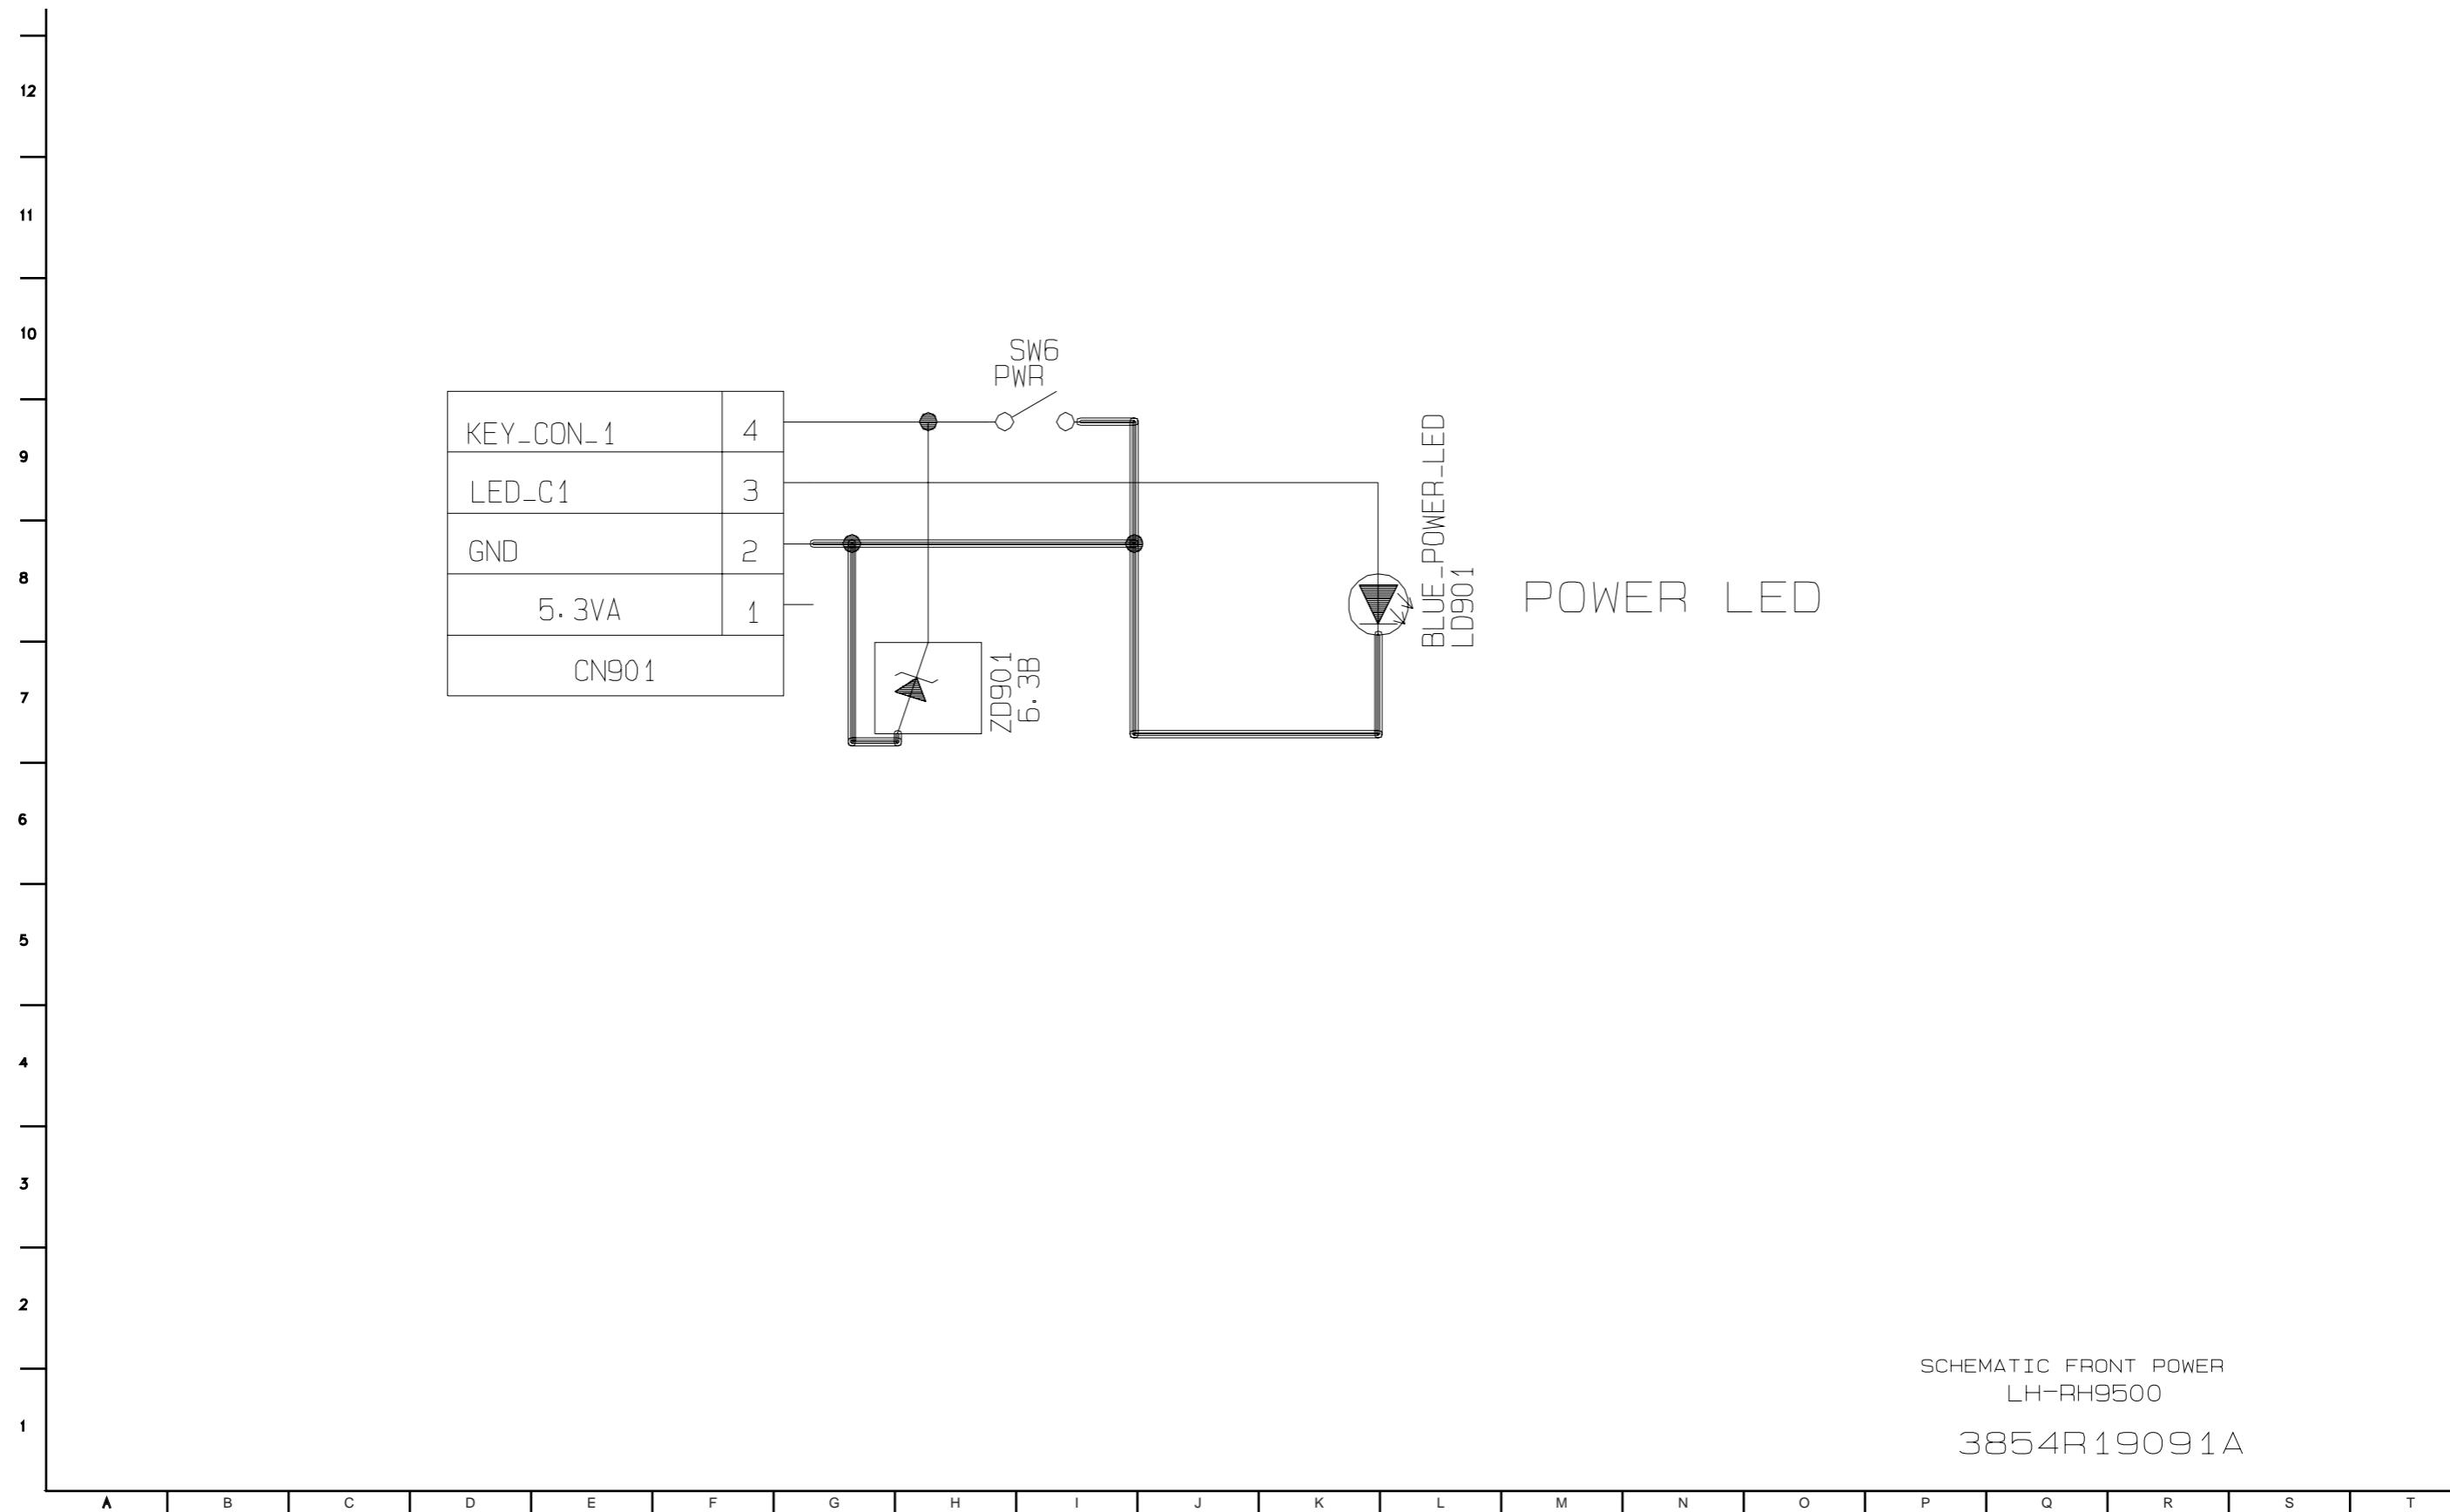

12. FRONT JACK CIRCUIT DIAGRAM

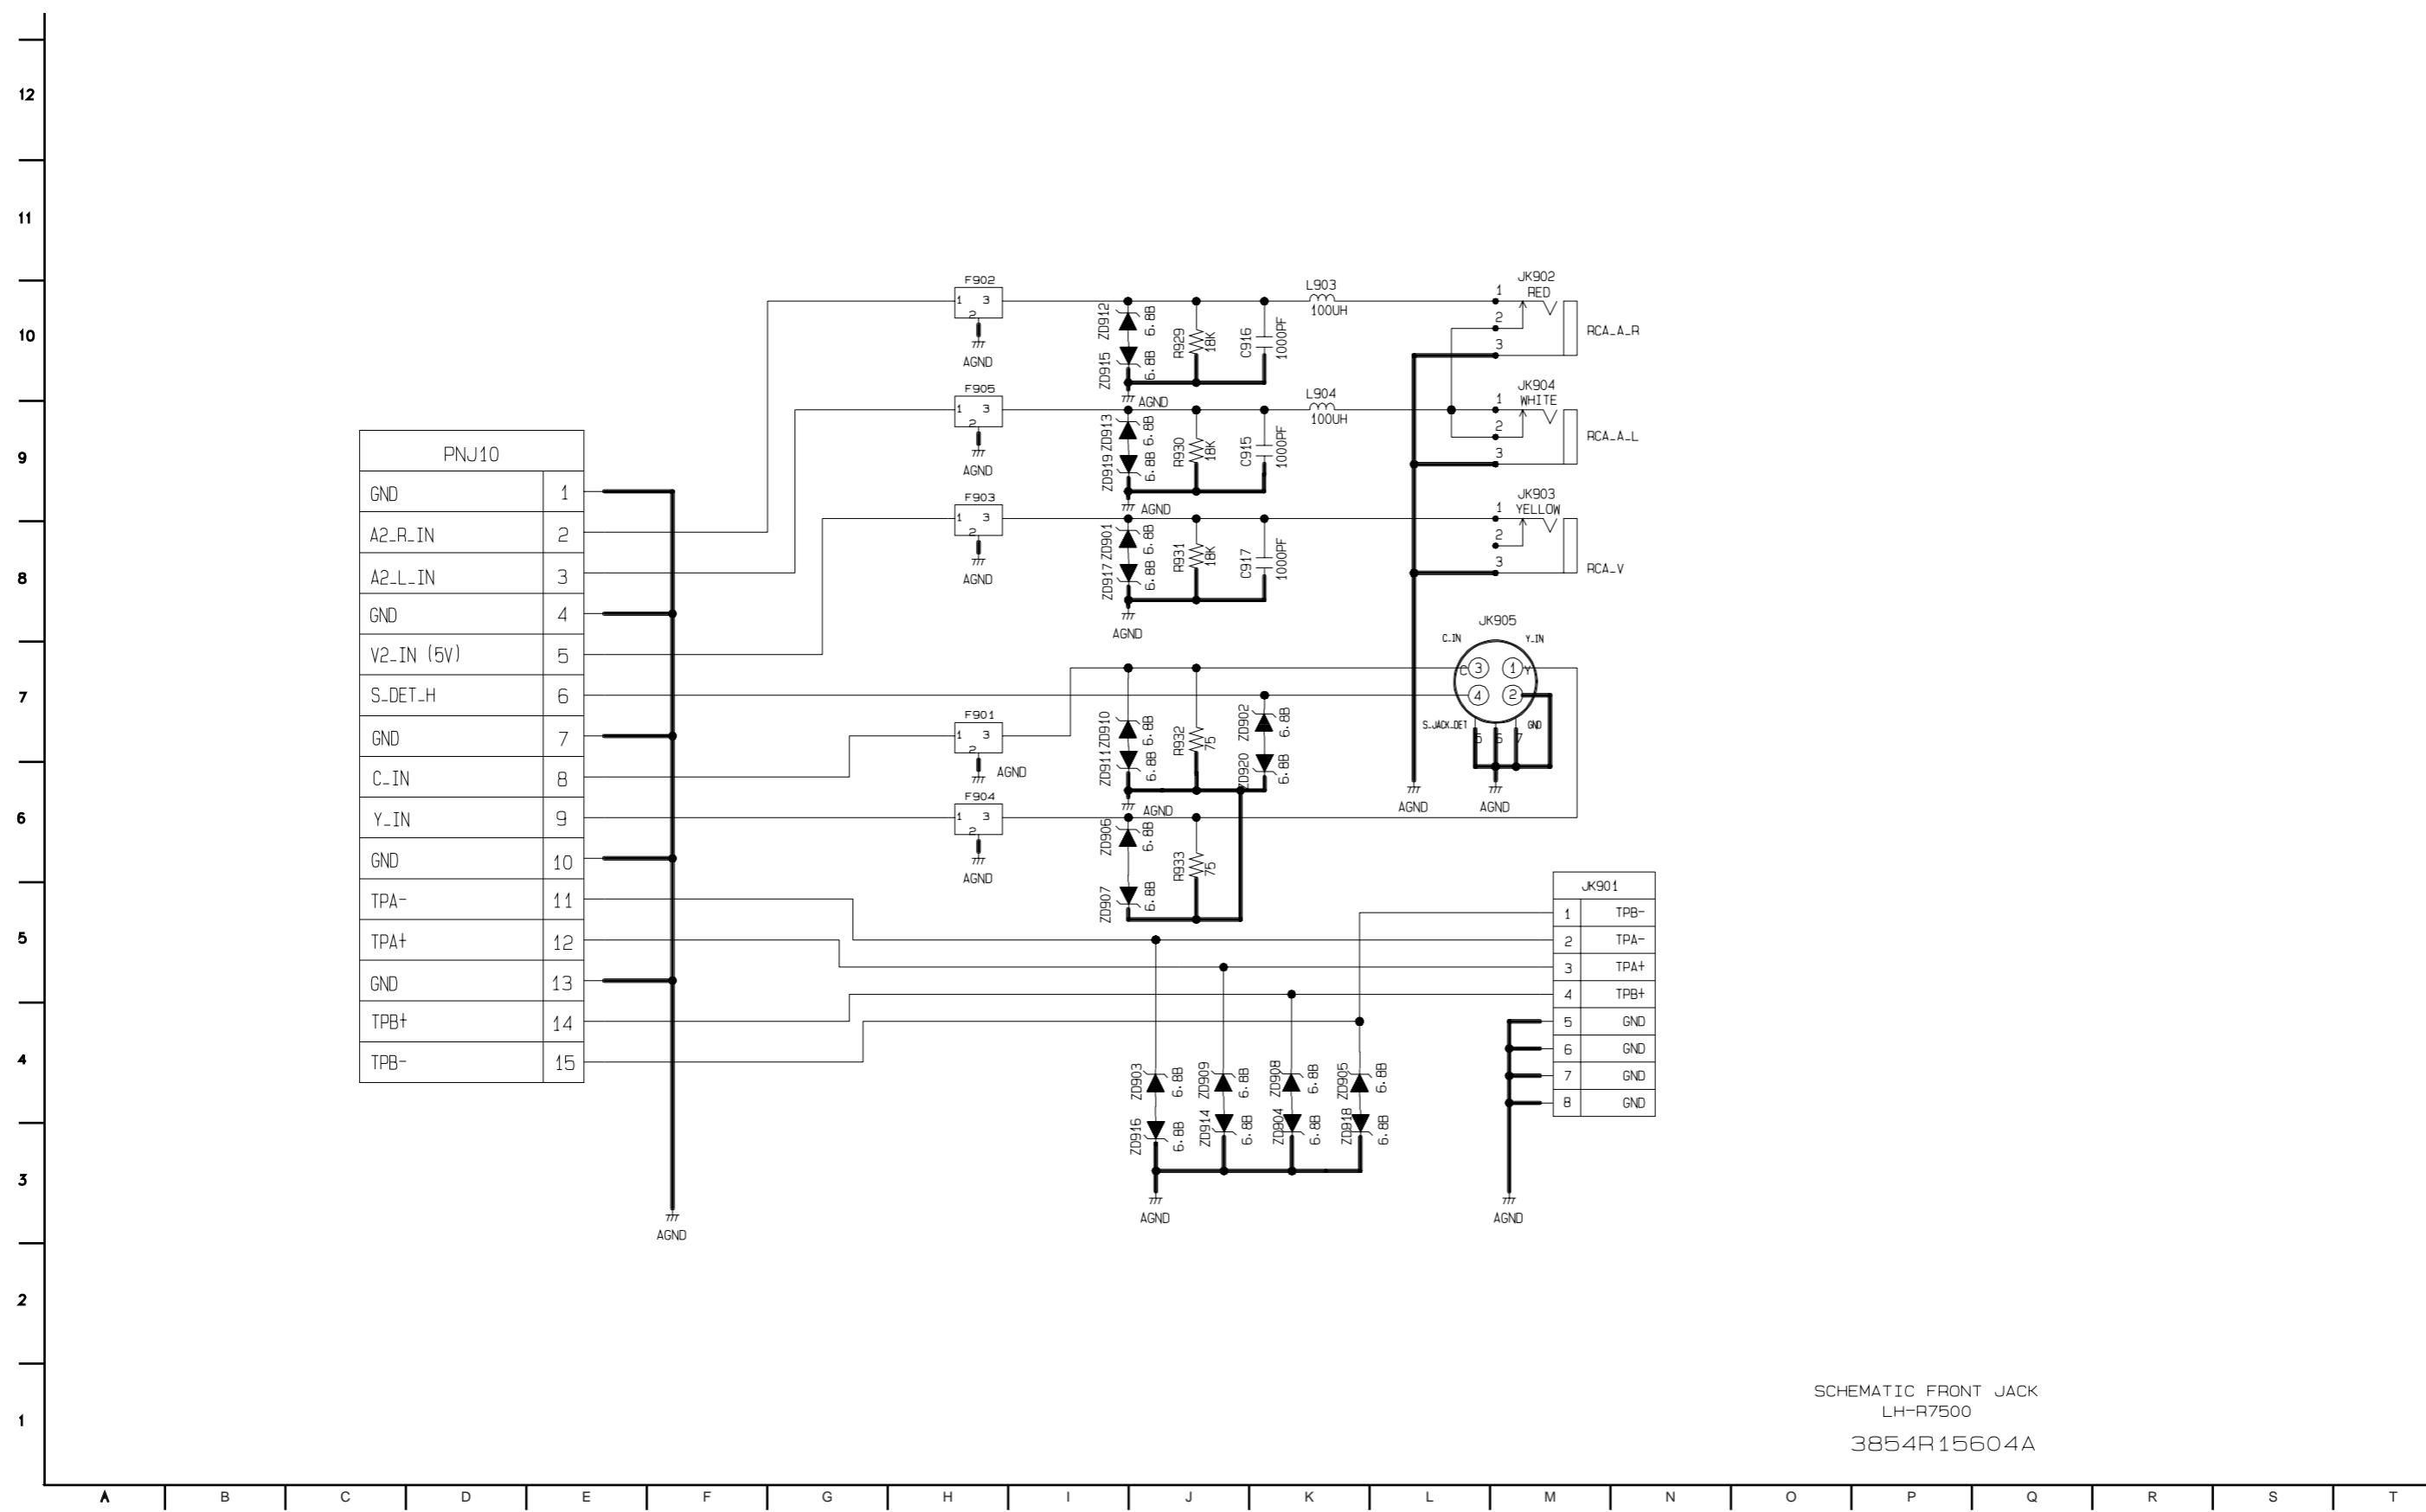

• CIRCUIT VOLTAGE CHART


MODE PIN NO.	EE	PLAY
IC 402		
1	3.27	3.24
2	0.00	0.00
3	0.00	0.00
4	0.00	0.00
5	0.00	0.00
6	0.00	0.00
7	1.68	1.65
8	1.68	1.70
9	0.00	0.00
10	0.00	0.00
11	0.00	0.00
12	3.27	3.24
13	0.00	0.00
14	3.30	3.27
15	3.30	3.20
16	3.28	3.25
17	0.00	0.00
18	3.29	3.25
19	2.69	2.70
20	0.00	0.00
21	0.00	0.00
22	0.00	0.00
23	3.26	3.26
24	0.00	0.00
25	0.00	0.00
26	0.00	0.00
27	0.00	0.00
28	0.00	0.00
29	3.26	3.27
30	0.00	0.00
31	0.00	0.00
32	0.00	0.00
33	3.25	3.25
34	0.00	0.00
35	3.27	3.24
36	0.00	0.00
37	2.86	2.35
38	0.94	1.26
39	0.87	0.84
40	0.28	1.10
41	0.95	1.34
42	3.27	3.24
43	0.00	0.00
44	0.09	1.06
45	0.99	1.50
46	0.09	0.95
47	2.51	1.93
48	0.00	0.00
49	3.27	3.24
50	0.85	1.22
51	0.84	0.84
52	0.74	1.46
53	0.8 - 1.34	1.36
54	0.08	1.05

MODE PIN NO.	EE	PLAY
IC 501		
1	0.00	0.00
2	0.00	0.00
3	0.00	0.00
4	3.30	3.26
5	3.30	3.26
6	0.00	0.00
7	0.00	0.00
8	0.00	0.00
9	0.00	0.00
10	0.00	0.00
11	1.84	1.84
12	1.84	1.84
13	0.00	0.00
14	1.84	1.81
15	0.00	0.00
16	0.00	0.00
17	0.00	0.00
18	0.00	0.00
19	0.00	0.00
20	3.30	3.26
21	3.30	3.27
22	0.00	0.00
23	0.80	0.79
24	0.00	0.00
25	1.84	1.81
26	0.00	0.00
27	0.00	0.00
28	3.20	3.20
29	3.20	3.20
30	3.30	3.27
31	1.84	1.81
32	0.00	0.00
33	0.00	0.00
34	3.30	3.26
35	0.00	0.00
36	0.00	0.00
37	2.86	2.84
38	3.28	3.24
39	0.00	0.00
40	1.57	1.54
41	1.84	1.81
42	0.00	0.00
43	2.80	2.78
44	1.30	1.10

MODE PIN NO.	EE	PLAY
IC 101		
AA23	1.82	1.82
AA4	1.82	1.82
AC12	3.30	3.30
AC13	3.30	3.30
AC14	3.30	3.30
AC15	3.30	3.30
AC21	1.82	1.82
AC6	1.82	1.82
AC7	5.03	5.03
B1	3.30	3.30
C1	1.29	1.29
C22	2.50	2.49
C6	3.30	3.30
D11	1.82	1.82
D12	1.82	1.82
D13	1.82	1.82
D19	3.30	3.30
D2	3.30	3.30

PRINTED CIRCUIT DIAGRAMS

1. MAIN P.C.BOARD (TOP VIEW)

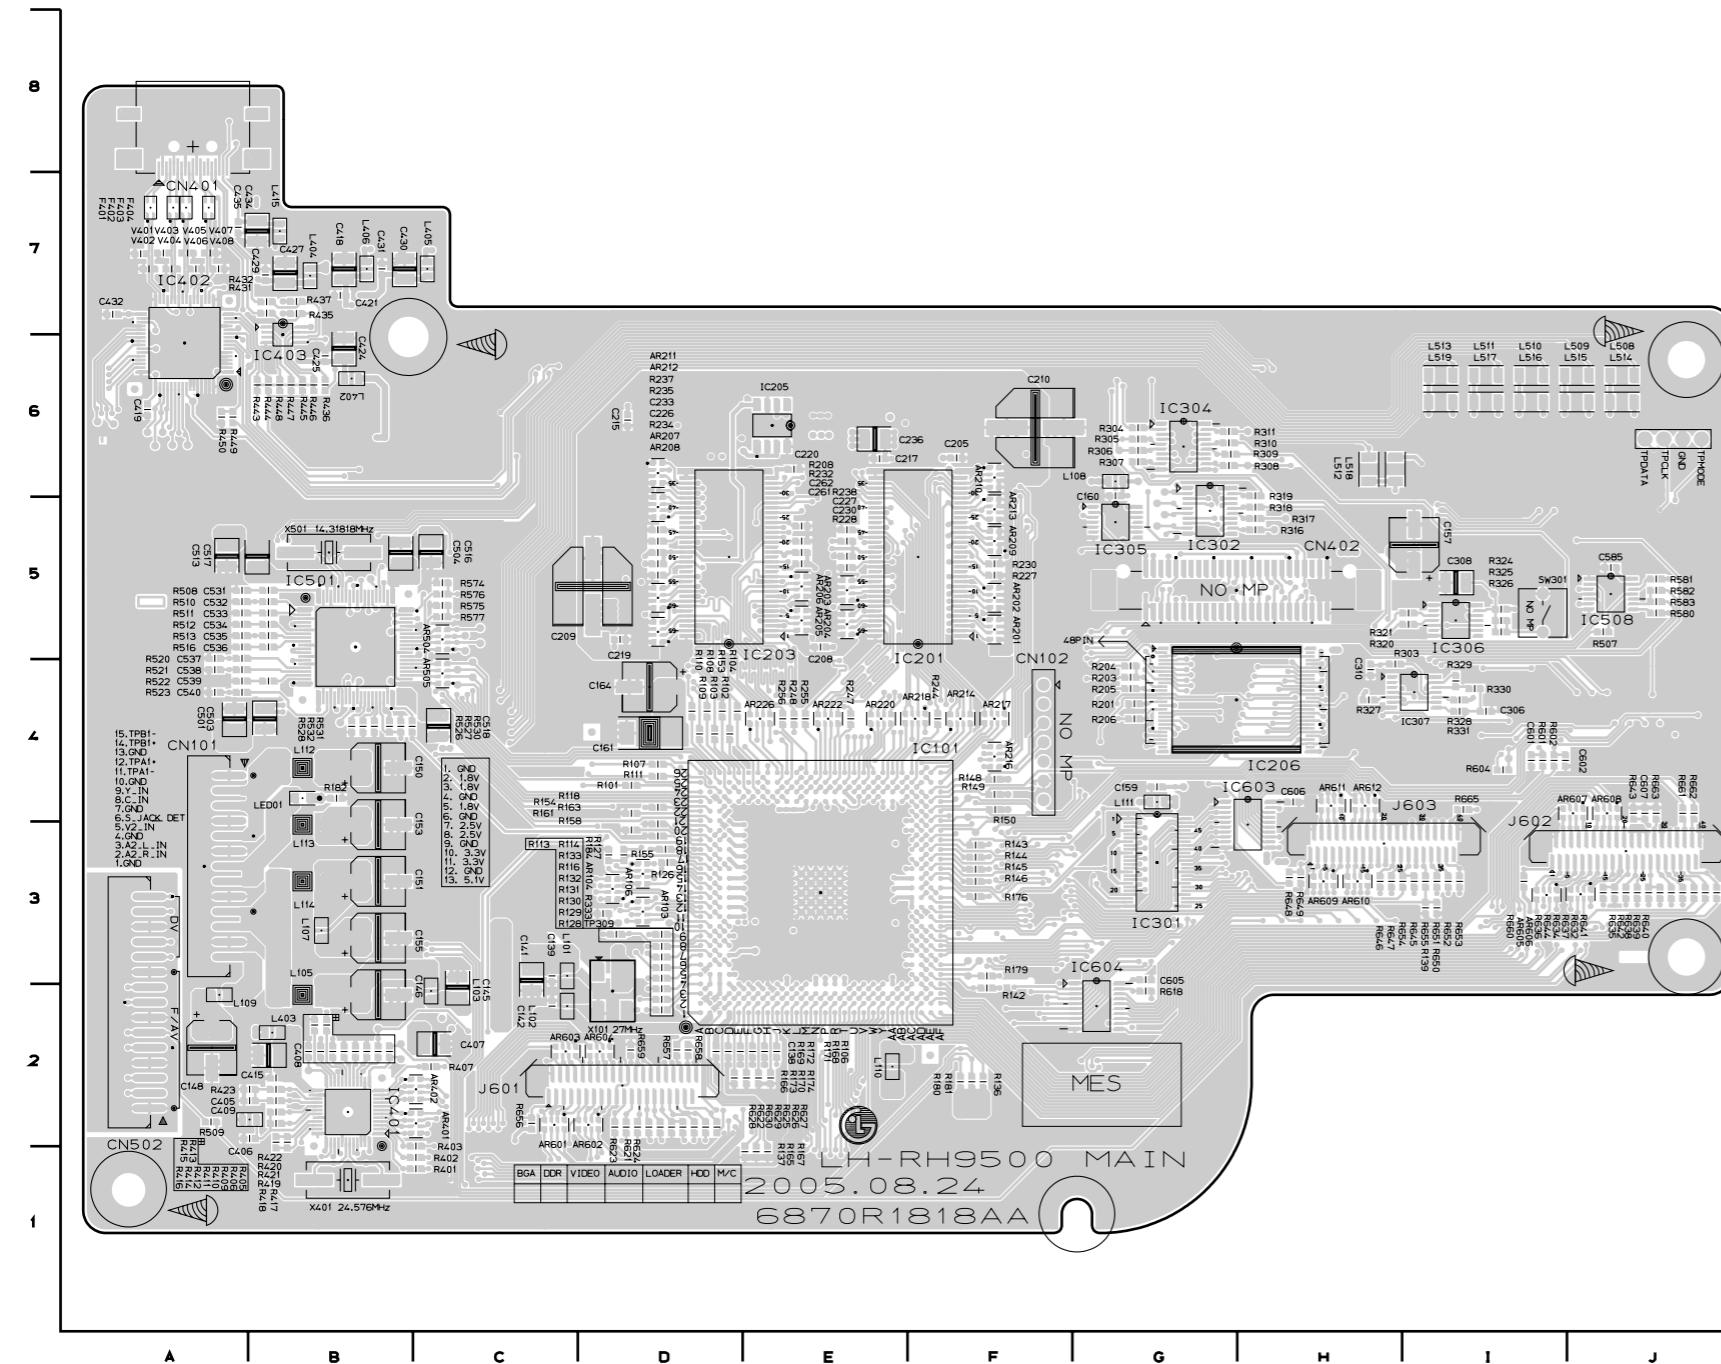


3-54

	LOCATION GUIDE												
AR103	D3	C209	D5	CN101	A3	L516	I6	R181	F2	R414	B2	R625	D2
AR104	D3	C210	F6	CN102	F4	L517	I6	R182	B4	R415	B2	R626	D2
AR106	D3	C215	D6	CN401	A8	L518	H6	R184	D3	R416	B2	TP162	B4
AR201	F5	C217	E6	CN402	G5	L519	I6	R201	G4	R417	B2	TP164	F3
AR202	F5	C219	D5	CN502	A2	LED01	B4	R203	G4	R418	B2	TP166	F5
AR203	E5	C220	E6	F401	A7	R101	D4	R204	G4	R419	B2	TP304	G5
AR204	E5	C226	D5	F402	A7	R102	D4	R205	G4	R420	B2	TP307	G5
AR205	E5	C227	E5	F403	A7	R103	D4	R206	G4	R421	B2	TP308	G5
AR206	E5	C230	E5	F404	A7	R104	D4	R208	E5	R422	B2	TP309	D3
AR207	D5	C233	D5	GND	J6	R106	E2	R227	F5	R423	B2	TP315	H6
AR208	D5	C236	E6	IC101	E3	R107	D4	R228	E5	R431	B7	TP320	H5
AR209	F5	C261	E5	IC201	F5	R108	D4	R230	F5	R432	B7	TP321	H5
AR210	F6	C262	E5	IC203	D5	R109	D4	R232	E5	R435	B7	TP328	G6
AR211	D6	C306	I4	IC205	E6	R110	D4	R234	D5	R436	B6	TP331	I5
AR212	D5	C308	I5	IC206	G4	R111	D4	R235	D5	R437	B7	TP411	B2
AR213	F5	C310	H4	IC301	C3	R113	D3	R237	D5	R443	B6	TP415	B2
AR214	F4	C405	B2	IC302	G5	R114	D3	R238	E5	R444	B6	TP451	A6
AR216	F4	C406	B2	IC304	G6	R116	D3	R244	F4	R445	B6	TP453	A6
AR217	F4	C407	C2	IC305	G5	R118	D4	R247	E4	R446	B6	TP455	A6
AR218	F4	C408	B2	IC306	I5	R126	D3	R248	E4	R447	B6	TP457	A6
AR220	E4	C409	B2	IC307	I4	R127	D3	R255	E4	R448	B6	TP459	A6
AR222	E4	C415	B2	IC401	B2	R128	D2	R256	E4	R449	A6	TP466	A6
AR226	E4	C418	B7	IC402	A6	R129	D2	R303	H4	R450	A6	TP467	A6
AR401	C2	C419	A6	IC403	B6	R130	D2	R304	G6	R507	J5	TP469	B6
AR402	C2	C421	B7	IC501	B5	R131	D3	R305	G6	R508	A5	TP476	B2
AR504	C5	C424	B6	IC508	J5	R132	D3	R306	G6	R509	A2	TP477	B2
AR505	C4	C425	B7	IC603	H3	R133	D3	R307	G6	R510	A5	TP537	B5
AR601	C2	C427	B7	IC604	G2	R136	F2	R308	G6	R511	A5	TP543	C5
AR602	D2	C429	B7	J601	D2	R137	E1	R309	G6	R512	A5	TP544	C5
AR603	C2	C430	B7	J602	J3	R139	I3	R310	G6	R513	A5	TP545	C5
AR604	D2	C431	B7	J603	H3	R142	F2	R311	G6	R516	A5	TP547	C4
AR605	I3	C432	A7	L101	C3	R143	F3	R316	H5	R520	A4	TP548	C4
AR606	J3	C434	B7	L102	C2	R144	F3	R317	H5	R521	A4	TP549	C4
AR607	J4	C435	A7	L103	C2	R145	F3	R318	H5	R522	A4	TP550	C4
AR608	J4	C501	A4	L105	B2	R146	F3	R319	H6	R523	A4	TP552	B4
AR609	H3	C503	B4	L107	B3	R148	F4	R320	I5	R526	B4	TP625	I4
AR610	H3	C504	B5	L108	G6	R149	F4	R321	I5	R527	B4	TPCLK	J6
AR611	H4	C513	A5	L109	A2	R150	F4	R324	I5	R528	B4	V401	A7
AR612	H4	C516	C5	L110	E2	R153	D4	R325	I5	R530	B4	V402	A7
C138	D2	C517	B5	L111	G4	R154	D4	R326	I5	R531	B4	V403	A7
C139	C3	C518	C4	L112	B4	R155	D3	R327	H4	R532	B4	V404	A7
C141	C3	C531	B5	L113	B3	R158	D3	R328	H4	R534	C3	V405	A7
C142	C2	C532	B5	L114	B3	R161	D3	R329	I4	R575	C5	V406	A7
C145	C2	C533	B5	L402	B6	R163	D3	R330	I4	R576	C5	V407	A7
C146	B2	C534	B5	L403	B2	R165	E1	R331	I4	R577	C5	V408	A7
C148	A2	C535	B5	L404	B7	R166	D2	R333	D3	R580	J5	X101	D2
C150	B4	C536	B5	L405	C7	R167	E1	R401	C1	R581	J5	X401	B1
C151	B3	C537	A4	L406	B7	R168	E2	R402	C1	R582	J5	X402	B1
C153	B3	C538	A4	L415	B7	R169	D2	R403	C1	R583	J5	X403	B1
C155	B3	C539	B4	L508	J6	R170	E2	R405	B2	R601	I4	X404	B1
C157	I5	C540	A4	L509	J6	R171	E2	R406	B2	R602	I4	TP150	F2
C159	G4	C585	J5	L510	I6	R172	D2	R407	C2	R604	I4	TP151	A2
C160	G6	C601	I4	L511	I6	R173	E2	R409	B2	R618	G2	TP156	A4
C161	D4	C602	I4	L512	H6	R174	E2	R410	B2	R621	D2	TP158	G6
C164	D4	C605	G3	L513	I6	R176	F3	R411	B2	R622	D2	TP159	G4
C205	F6	C606	H4	L514	J6	R179	F3	R412	B2	R623	D2	TP160	B3
C208	E5	C607	J4	L515	J6	R180	F2	R413	B2	R624	D2	TP161	B3


3-55

2. MAIN P.C.BOARD (BOTTOM VIEW)

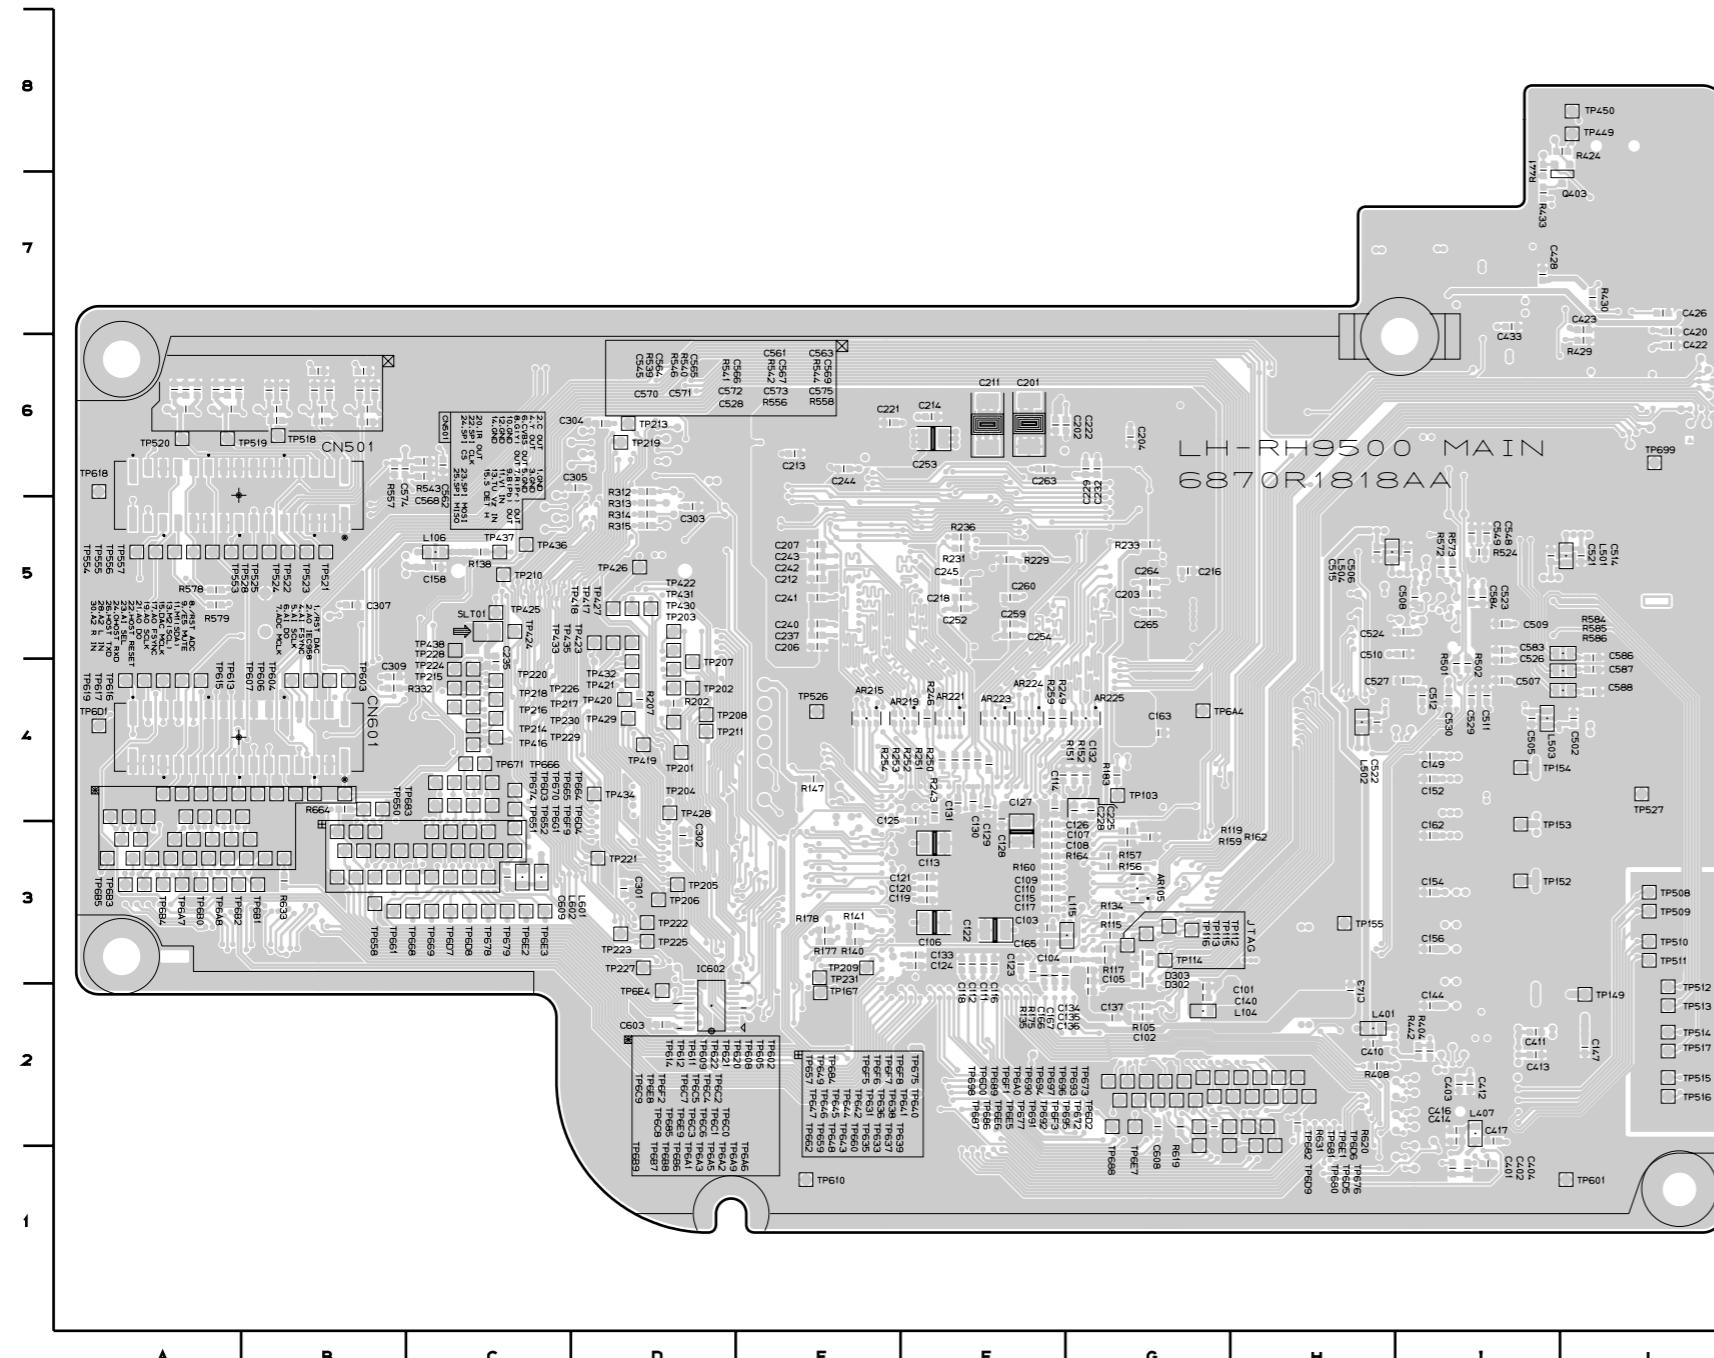

LOCATION GUIDE	
AR105	G3
AR215	E4
AR219	F4
AR221	F4
AR223	F4
AR224	F4
AR225	G4
C101	G2
C102	G2
C103	F3
C104	G3
C105	G3
C106	F3
C107	F3
C108	F3
C109	F3
C110	F3
C111	F3
C112	F3
C113	F3
C114	F4
C115	F3
C116	F3
C117	F3
C118	F3
C119	F3
C120	F3
C121	F3
C122	F3
C123	F3
C124	F3
C125	F3
C126	F3
C127	F3
C128	F4
C129	F3
C130	F4
C131	F4
C132	G4
C133	F3
C134	G3
C135	G3
C136	G2
C137	G2
C143	I2
C144	I2
C147	J2
C149	I4
C152	I4
C154	I3
C156	I3
C158	C5
C162	I3
C163	G4
C165	F3
C166	F3
C167	F3
C201	F6
C202	F6
C203	G5
C204	G6
C205	E5
C207	E5
C211	E6
C212	E5
C213	E6
C214	F6
C218	F5
C221	E6
C222	G6
C225	G4
C228	G4
C229	G6
C232	G6
C235	C4
C237	F5
C240	E5
C241	E5
C242	E5
C244	C24
C245	F5
C253	C24
C255	C24
C256	C24
C263	C24
C264	C24
C265	C24
C266	C24
C267	C24
C268	C24
C269	C24
C270	C24
C271	C24
C272	C24
C273	C24
C274	C24
C275	C24
C276	C24
C277	C24
C278	C24
C279	C24
C280	C24
C281	C24
C282	C24
C283	C24
C284	C24
C285	C24
C286	C24
C287	C24
C288	C24
C289	C24
C290	C24
C291	C24
C292	C24
C293	C24
C294	C24
C295	C24
C296	C24
C297	C24
C298	C24
C299	C24
C300	C24
C301	C24
C302	C24
C303	C24
C304	C24
C305	C24
C306	C24
C307	C24
C308	C24
C309	C24
C310	C24
C311	C24
C312	C24
C313	C24
C314	C24
C315	C24
C316	C24
C317	C24
C318	C24
C319	C24
C320	C24
C321	C24
C322	C24
C323	C24
C324	C24
C325	C24
C326	C24
C327	C24
C328	C24
C329	C24
C330	C24
C331	C24
C332	C24
C333	C24
C334	C24
C335	C24
C336	C24
C337	C24
C338	C24
C339	C24
C340	C24
C341	C24
C342	C24
C343	C24
C344	C24
C345	C24
C346	C24
C347	C24
C348	C24
C349	C24
C350	C24
C351	C24
C352	C24
C353	C24
C354	C24
C355	C24
C356	C24
C357	C24
C358	C24
C359	C24
C360	C24
C361	C24
C362	C24
C363	C24
C364	C24
C365	C24
C366	C24
C367	C24
C368	C24
C369	C24
C370	C24
C371	C24
C372	C24
C373	C24
C374	C24
C375	C24
C376	C24
C377	C24
C378	C24
C379	C24
C380	C24
C381	C24
C382	C24
C383	C24
C384	C24
C385	C24
C386	C24
C387	C24
C388	C24
C389	C24
C390	C24
C391	C24
C392	C24
C393	C24
C394	C24
C395	C24
C396	C24
C397	C24
C398	C24
C399	C24
C400	C24
C401	C24
C402	C24
C403	C24
C404	C24
C405	C24
C406	C24
C407	C24
C408	C24
C409	C24
C410	C24
C411	C24
C412	C24
C413	I2
C414	I2
C415	I2
C416	I2
C417	I2
C418	I2
C419	I2
C420	I2
C421	I2
C422	I2
C423	I2
C424	I2
C425	I2
C426	I2
C427	I2
C428	I2
C429	I2
C430	I2
C431	I2
C432	I2
C433	I2
C434	I2
C435	I2
C436	I2
C437	I2
C438	I2
C439	I2
C440	I2
C441	I2
C442	I2
C443	I2
C444	I2
C445	I2
C446	I2
C447	I2
C448	I2
C449	I2
C450	I2
C451	I2
C452	I2
C453	I2
C454	I2
C455	I2
C456	I2
C457	I2
C458	I2
C459	I2
C460	I2
C461	I2
C462	I2
C463	I2
C464	I2
C465	I2
C466	I2
C467	I2
C468	I2
C469	I2
C470	I2
C471	I2
C472	I2
C473	I2
C474	I2
C475	I2
C476	I2
C477	I2
C478	I2
C479	I2
C480	I2
C481	I2
C482	I2
C483	I2
C484	I2
C485	I2
C486	I2
C487	I2
C488	I2
C489	I2
C490	I2
C491	I2
C492	I2
C493	I2
C494	I2
C495	I2
C496	I2
C497	I2
C498	I2
C499	I2
C500	I2
C501	I2
C502	I2
C503	I2
C504	I2
C505	I2
C506	I2
C507	I2
C508	I2
C509	I2
C510	I2
C511	I2
C512	I2
C513	I2
C514	I2
C515	I2
C516	I2
C517	I2
C518	I2
C519	I2
C520	I2
C521	I2
C522	I2
C523	I2
C524	I2
C525	I2
C526	I2
C527	I2
C528	I2
C529	I2
C530	I2
C531	I2
C532	I2
C533	I2
C534	I2
C535	I2
C536	I2
C537	I2
C538	I2
C539	I2
C540	I2
C541	I2
C542	I2
C543	I2
C544	I2
C545	I2
C546	I2
C547	I2
C548	I2
C549	I2
C550	I2
C551	I2
C552	I2
C553	I2
C554	I2
C555	I2
C556	I2
C557	I2
C558	I2
C559	I2
C560	I2
C561	I2
C562	I2
C563	I2
C564	I2
C565	I2
C566	I2
C567	I2
C568	I2
C569	I2
C570	I2
C571	I2
C572	I2
C573	I2
C574	I


3. POWER P.C.BOARD

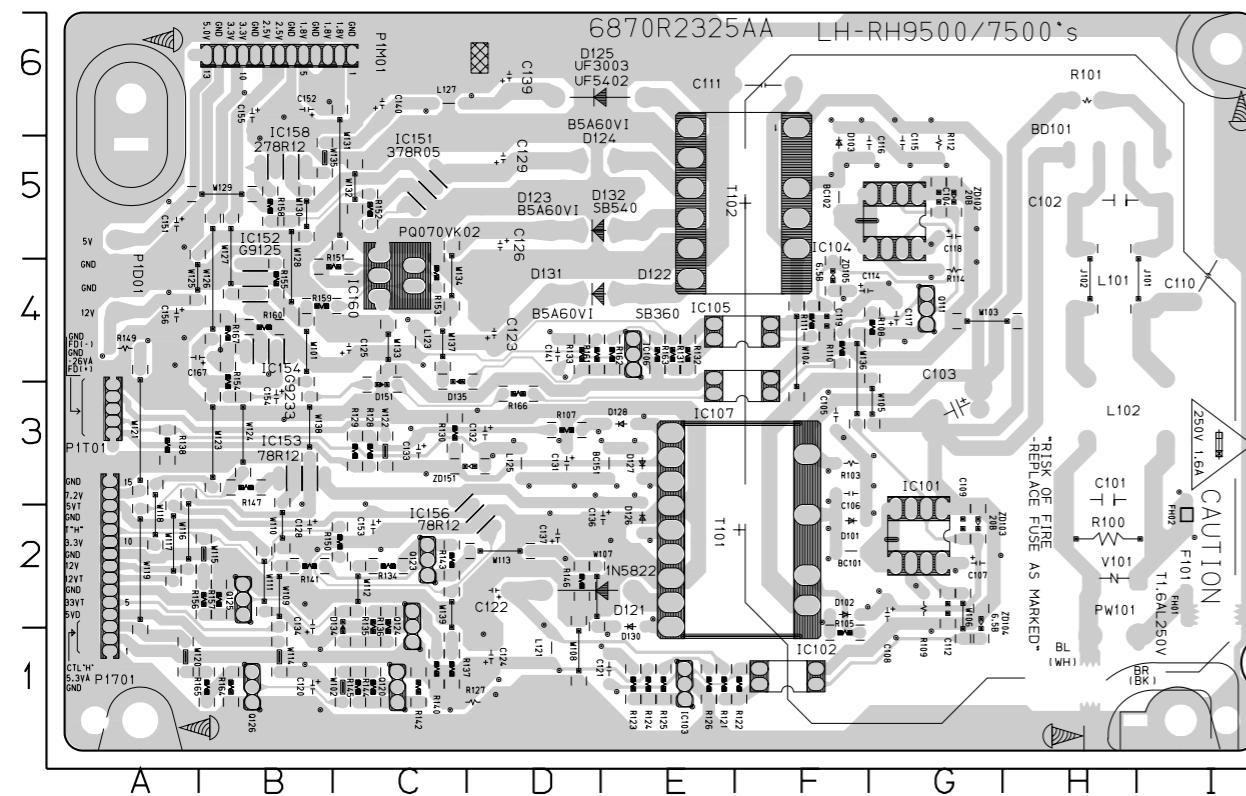


LOCATION GUIDE

BC101	F2	C133	C3	IC101	G2	R100	H2	R144	C1
BC102	F5	C134	B2	IC102	F1	R101	H6	R145	C1
BC151	E3	C136	E2	IC103	E1	R103	F3	R146	D2
BD101	H5	C137	D2	IC104	G5	R105	F1	R147	B3
C101	H3	C139	D6	IC105	E4	R107	D3	R149	A4
C102	H5	C140	C6	IC106	E4	R108	G4	R150	C2
C103	G3	C141	D4	IC107	E3	R109	G2	R151	C4
C104	G5	C151	A5	IC151	C5	R110	F4	R152	C5
C105	F3	C152	B6	IC152	B4	R111	F4	R153	C4
C106	F3	C153	C2	IC153	B3	R112	G5	R154	B4
C107	G2	C154	B3	IC154	B4	R114	G4	R155	B4
C108	G2	C155	B6	IC156	D2	R121	E1	R156	B2
C109	G2	C156	A4	IC158	B5	R122	F1	R157	B2
C110	I4	C167	A4	IC160	C4	R123	E1	R158	B5
C111	F6	D101	F2	J101	I4	R124	E1	R159	B4
C112	G2	D102	F2	J102	H4	R125	E1	R160	B4
C114	F4	D103	F5	L101	H4	R126	E1	R161	D4
C115	G5	D121	D2	L102	H3	R127	D1	R162	E4
C116	G5	D122	D4	L121	D1	R128	C3	R163	E4
C117	G4	D123	D5	L123	C4	R129	C3	R164	B1
C118	G5	D124	D5	L125	D3	R130	C3	R165	B1
C119	F4	D125	D6	L127	C6	R131	E4	R166	D3
C120	B1	D126	E2	P1701	A1	R132	E4	R167	B4
C121	E1	D127	E3	P1D01	A4	R133	D4	T101	F2
C122	D2	D128	E3	P1M01	C6	R134	C2	T102	F5
C123	D4	D130	E2	P1T01	A3	R135	C2	V101	H2
C124	D1	D131	D4	PW101	H1	R136	C2	ZD102	G5
C125	C4	D132	D5	Q111	G4	R137	C1	ZD103	G2
C126	D5	D134	C2	Q120	C1	R138	A3	ZD104	G2
C128	B2	D135	C3	Q123	C2	R140	C1	ZD105	F4
C129	D5	D151	C3	Q124	C2	R141	B2	ZD105	F4
C131	D3	FH01	I2	Q125	B2	R142	C1	ZD151	D3
C132	D3	FH02	I2	Q126	B1	R143	C2		


4. JACK P.C.BOARD

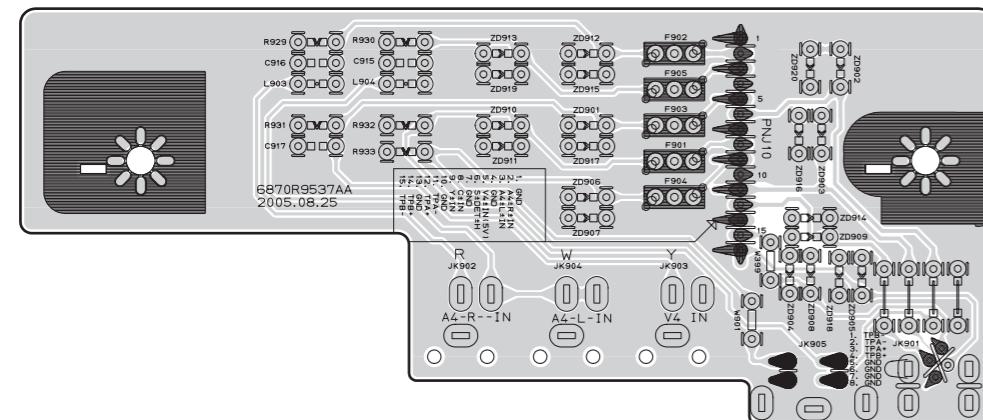

5. I/O P.C.BOARD (TOP VIEW)

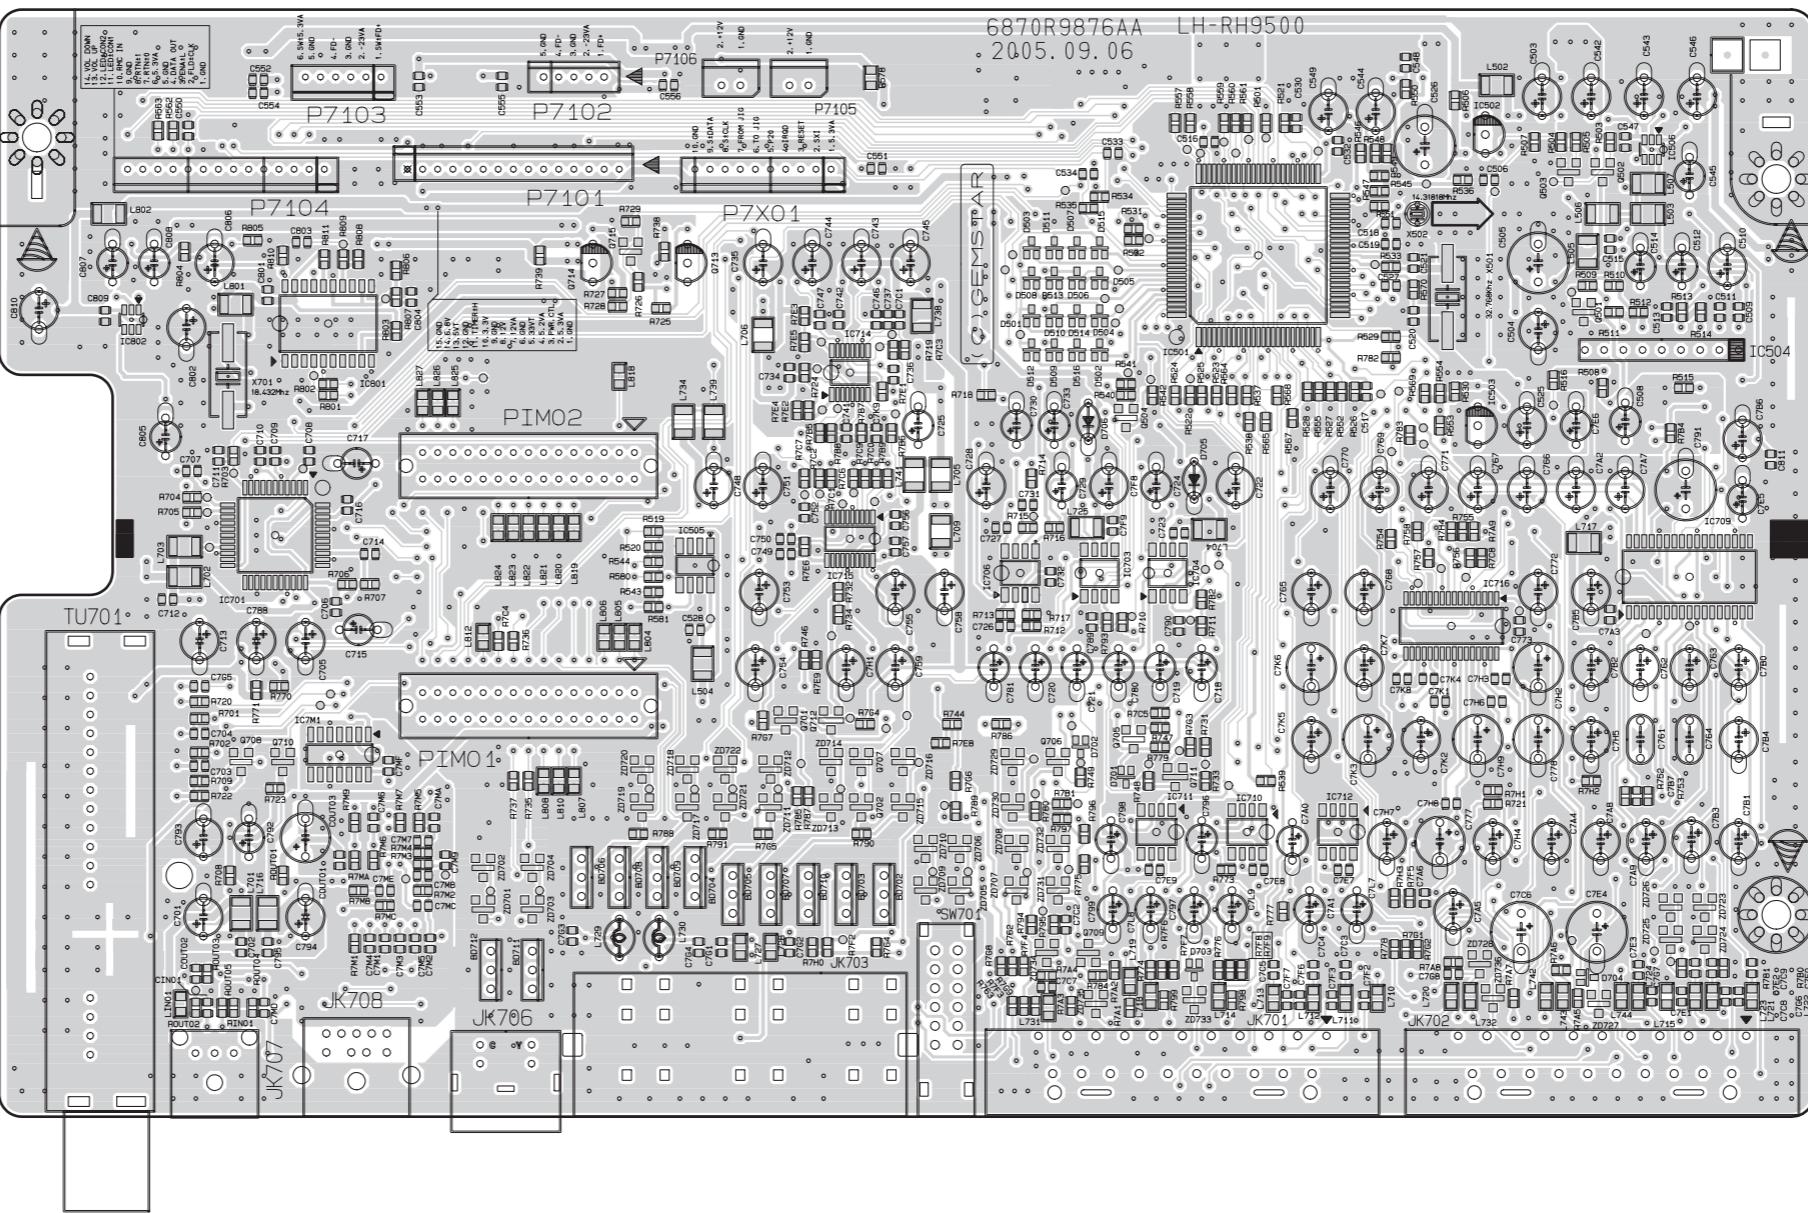

6. I/O P.C.BOARD (BOTTOM VIEW)

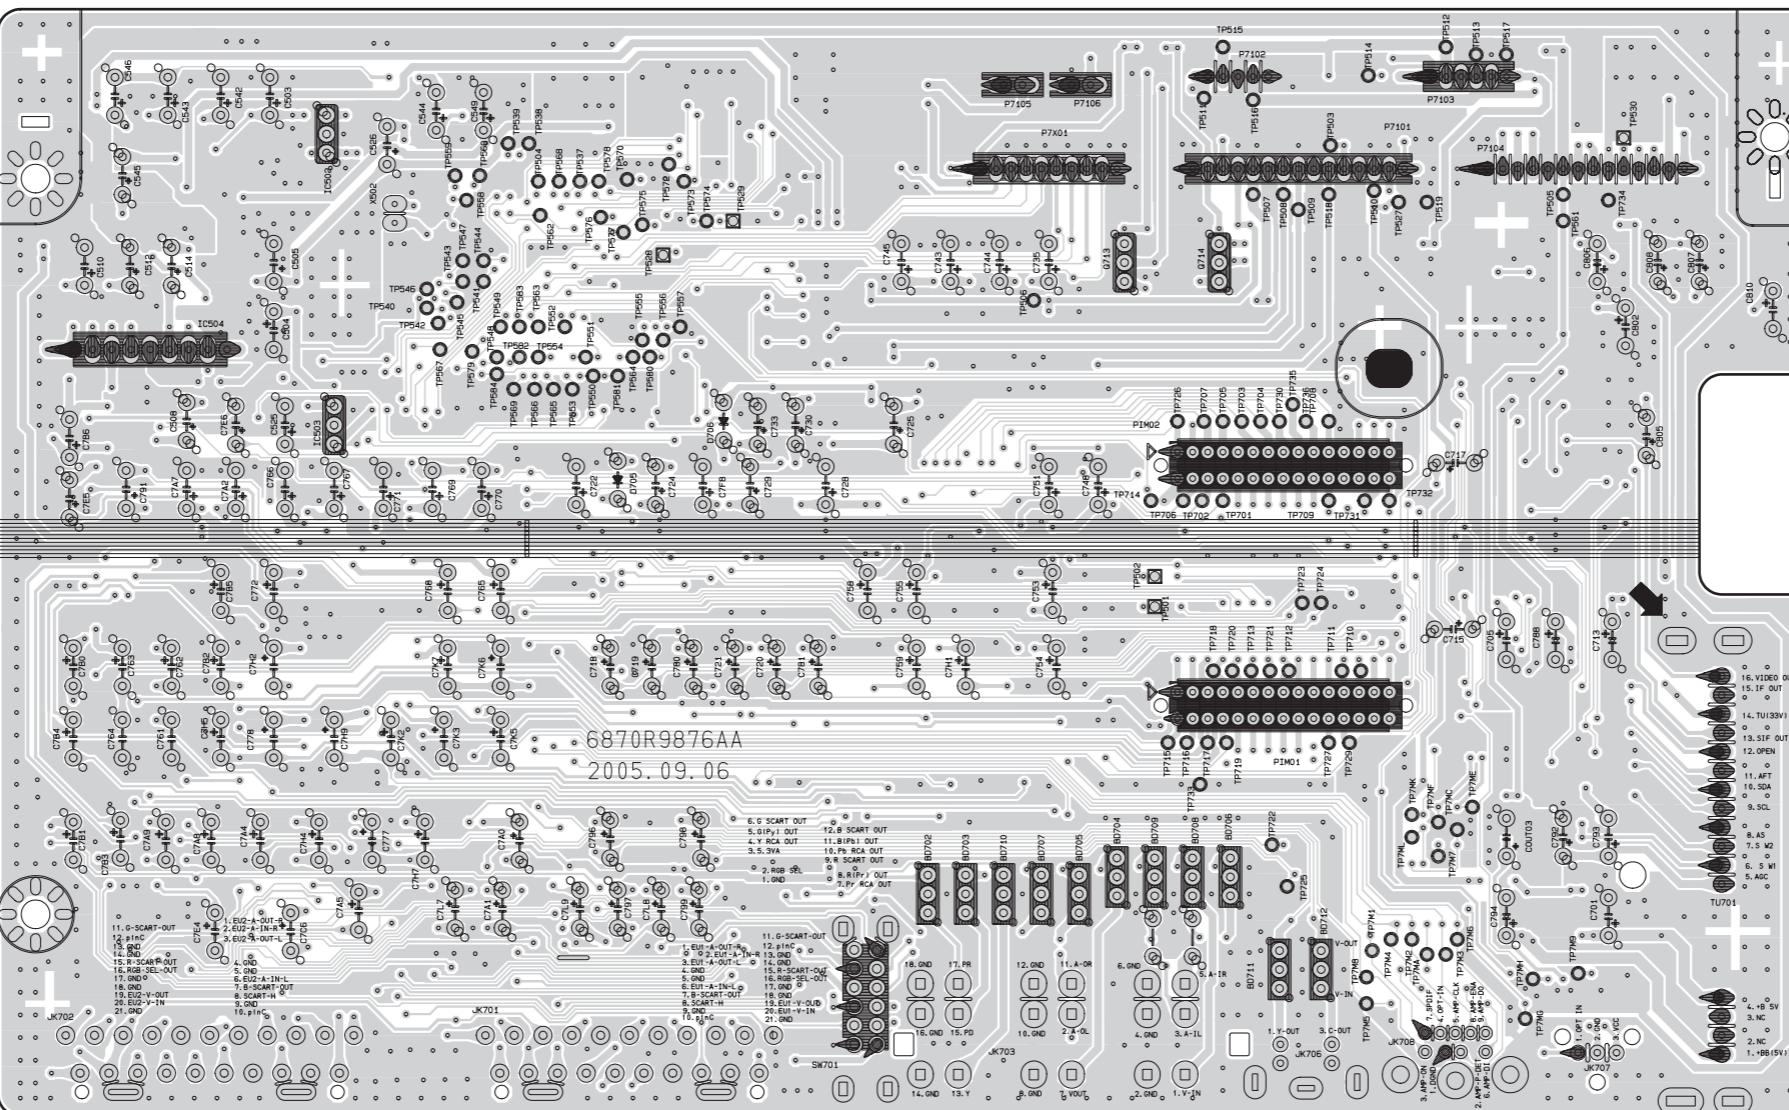

7. KEY P.C.BOARD

(TOP VIEW)




(BOTTOM VIEW)




8. TIMER P.C.BOARD

(TOP VIEW)

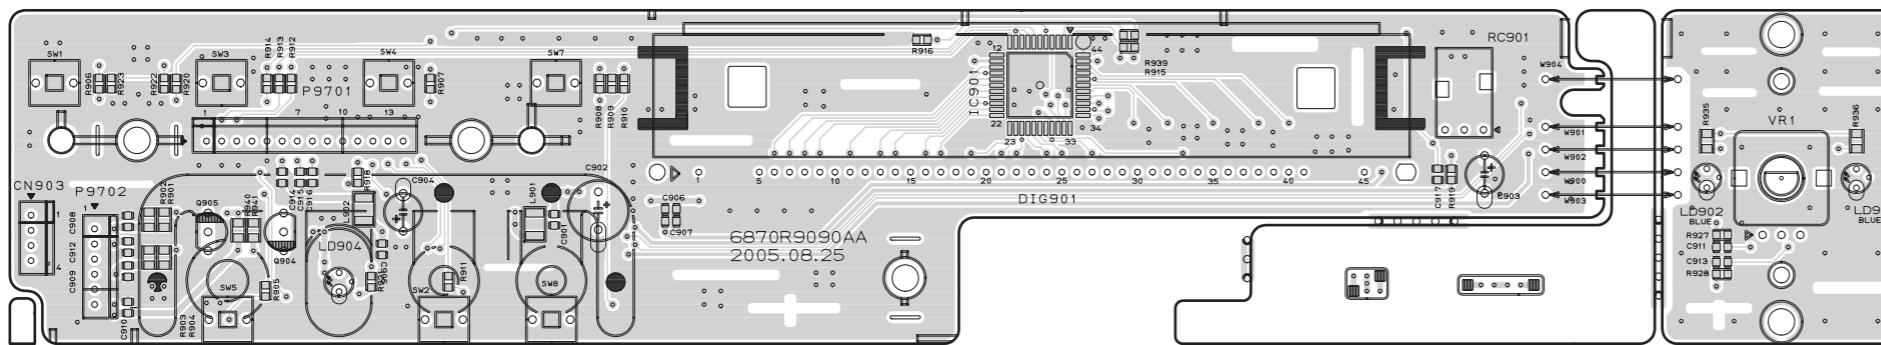


(BOTTOM VIEW)

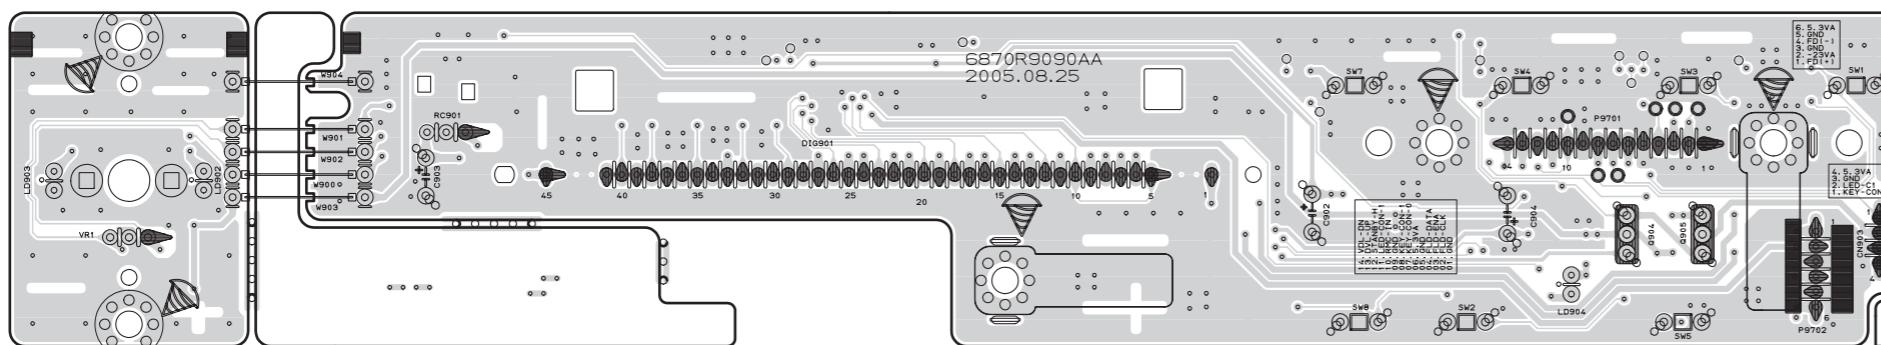

MEMO

MEMO


WOOFER PART ELECTRICAL TROUBLESHOOTING GUIDE

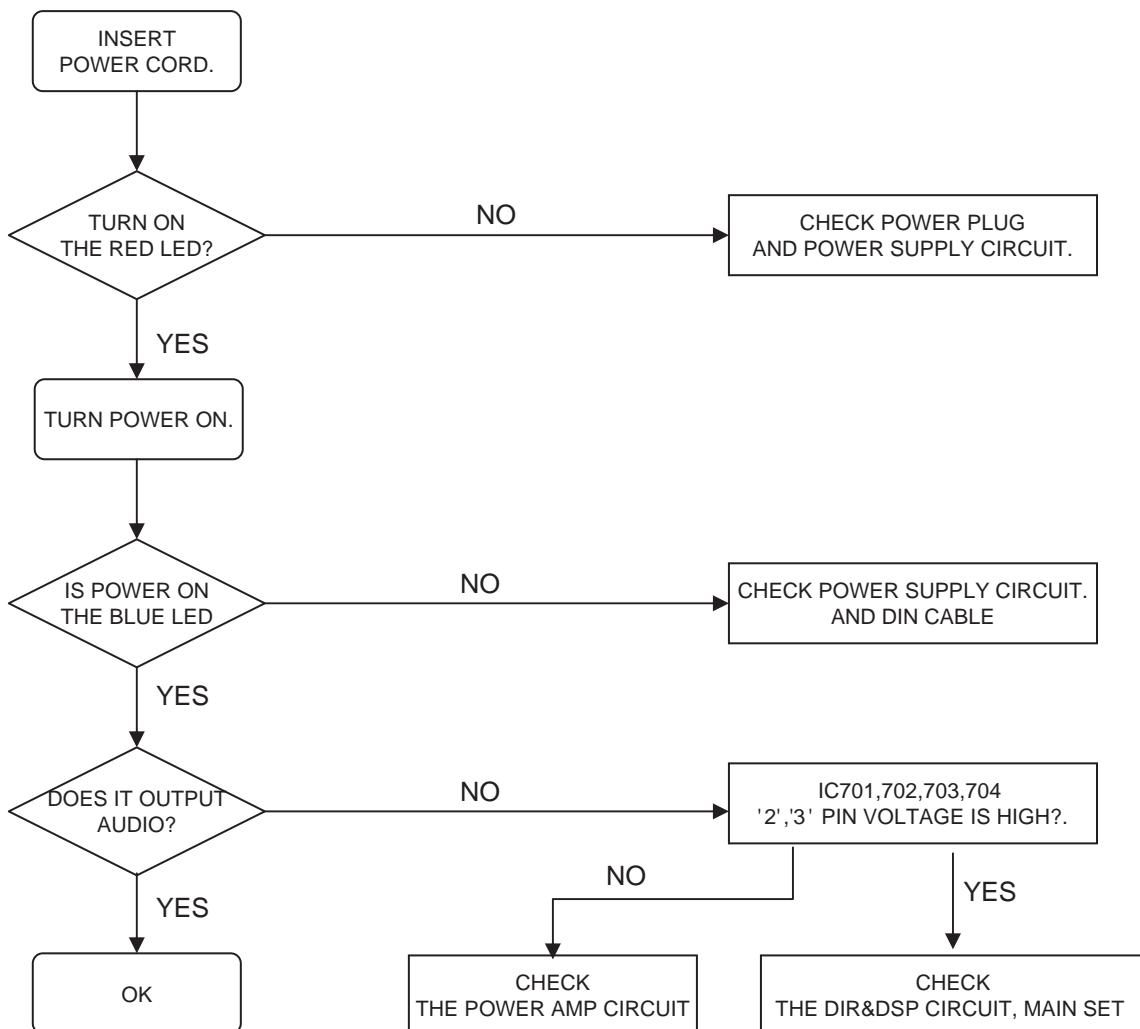

MEMO

BLOCK DIAGRAMS


1. WIRING DIAGRAM

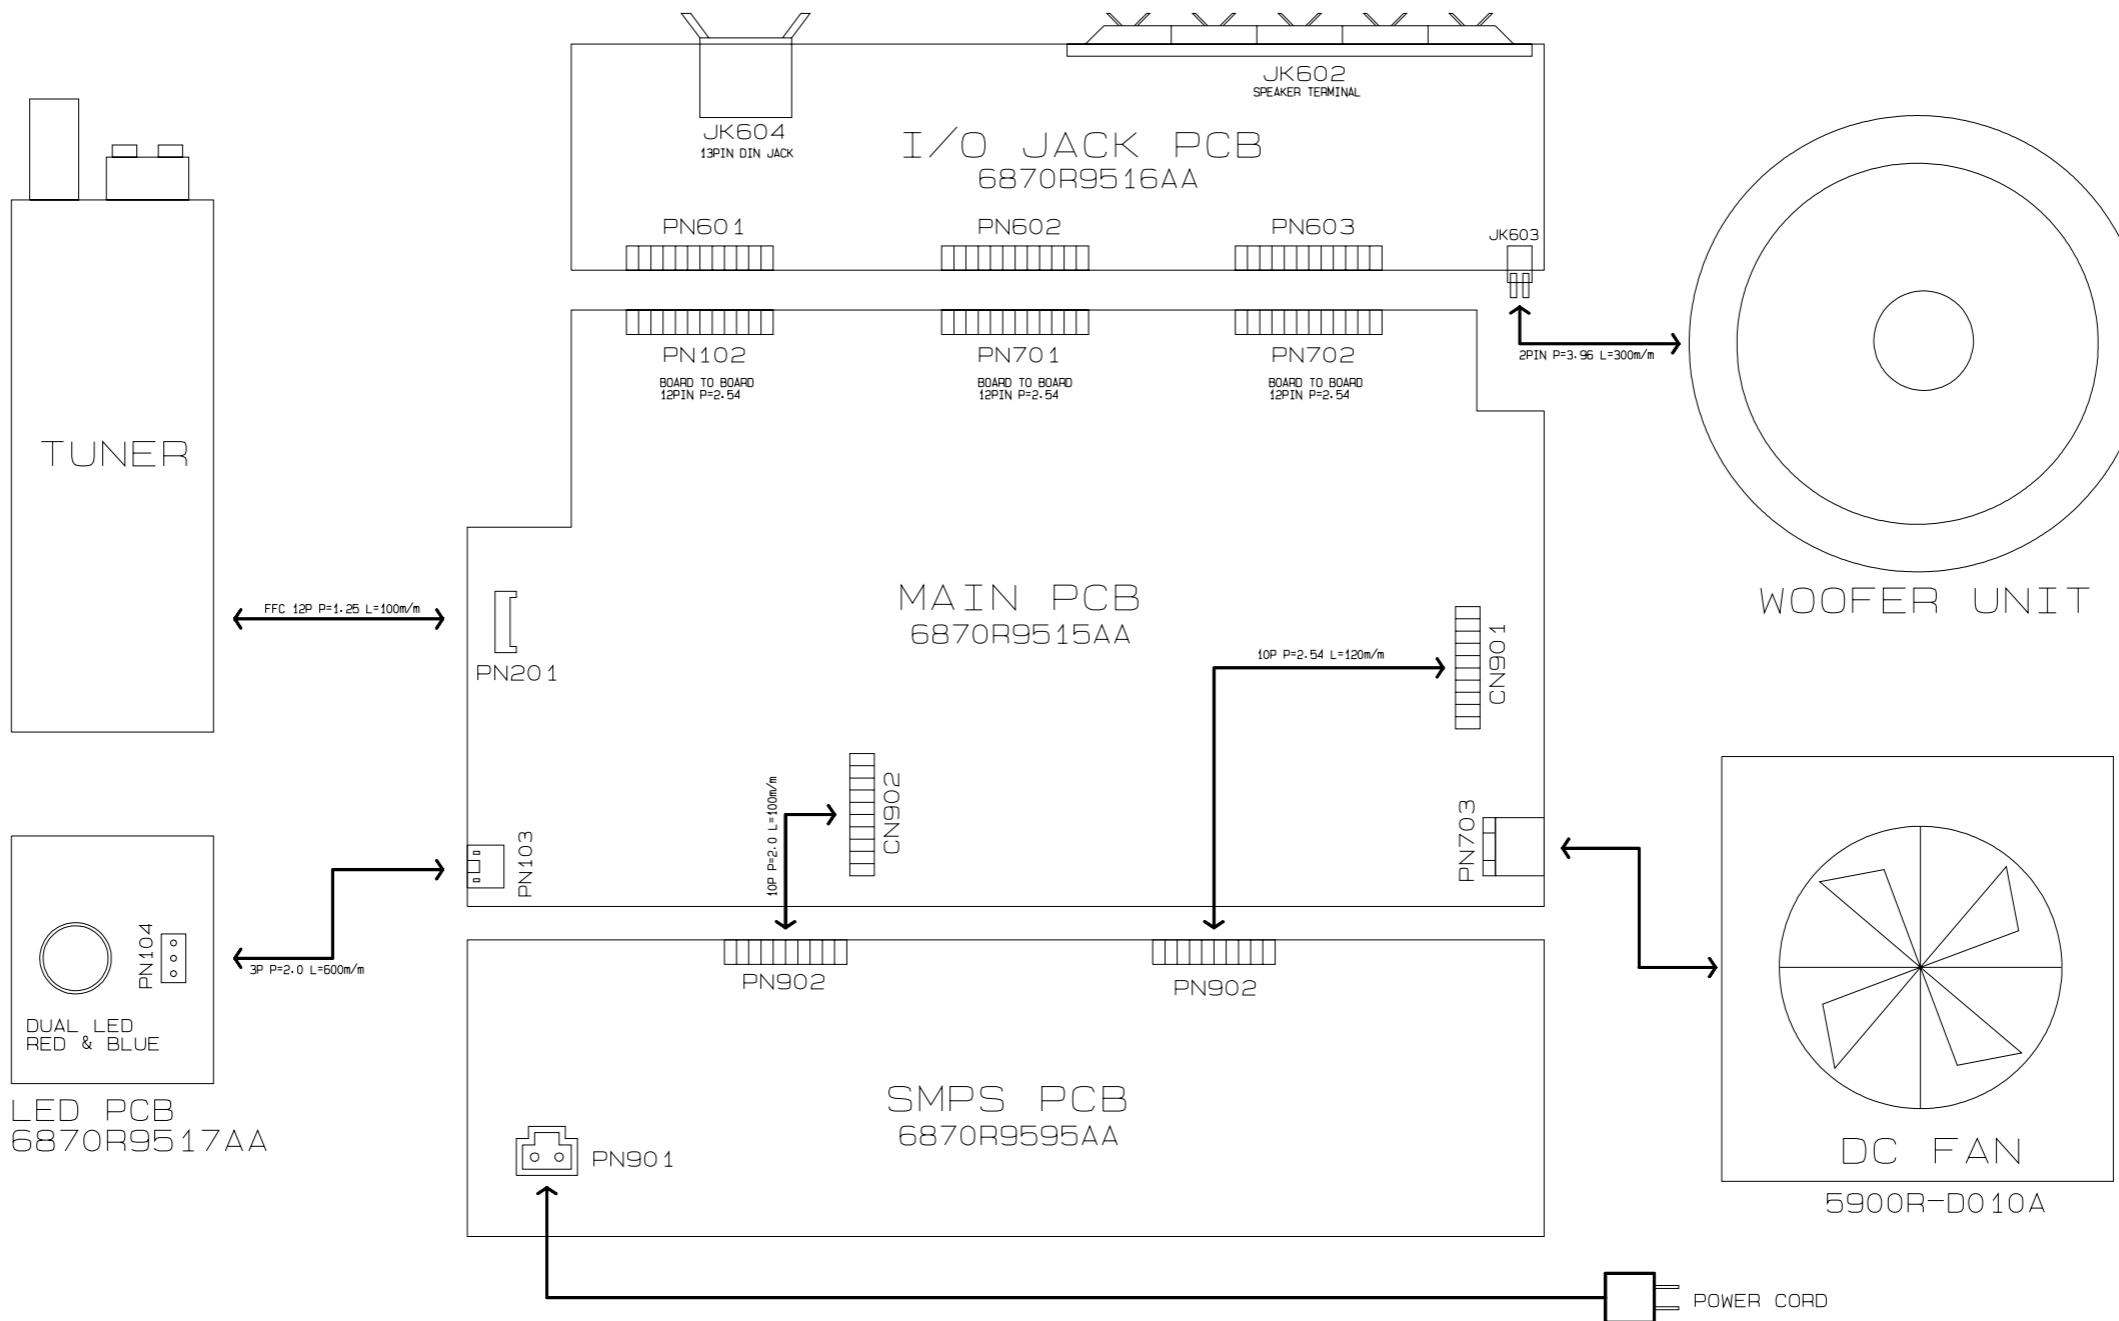

WIRING DIAGRAM(SHT#6)
LHS-95PAA 2005.02.25

3854R19510A

2. BLOCK DIAGRAM

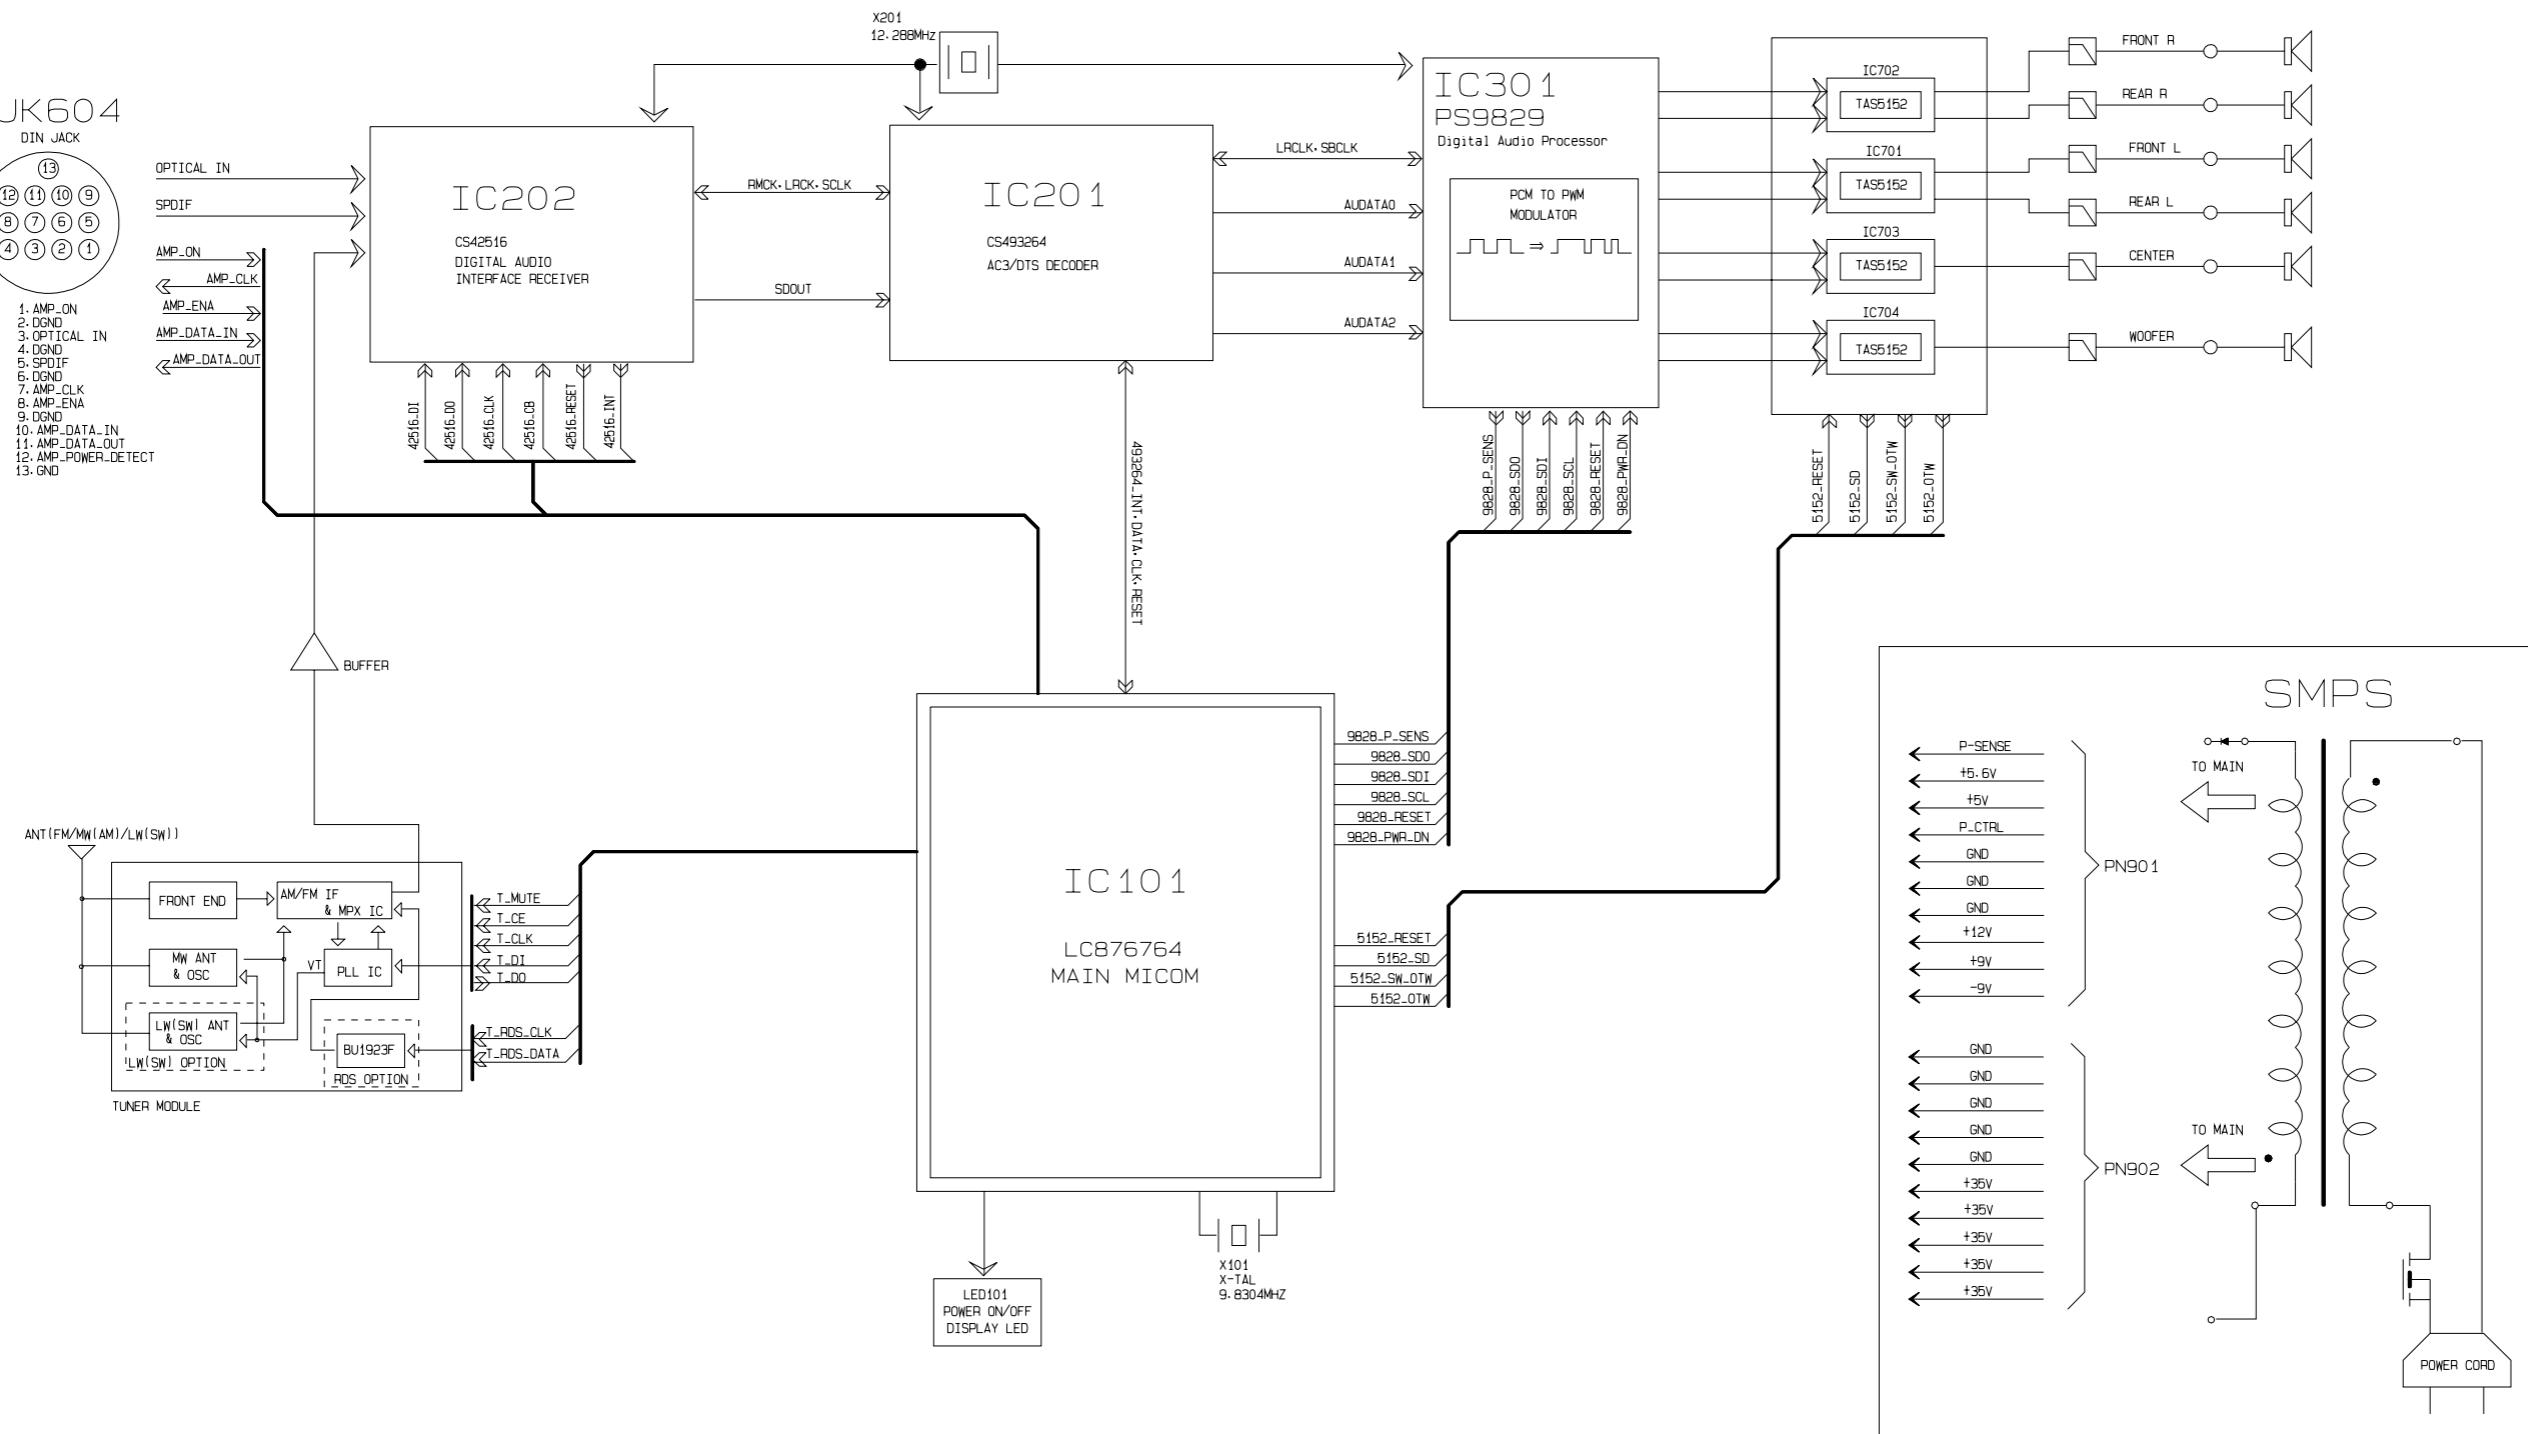


BLOCK DIAGRAM (SHT#5)
LHS-95PAA 2005.02.01

3854R19510A

CIRCUIT DIAGRAMS


1. SMPS CIRCUIT DIAGRAM_700W

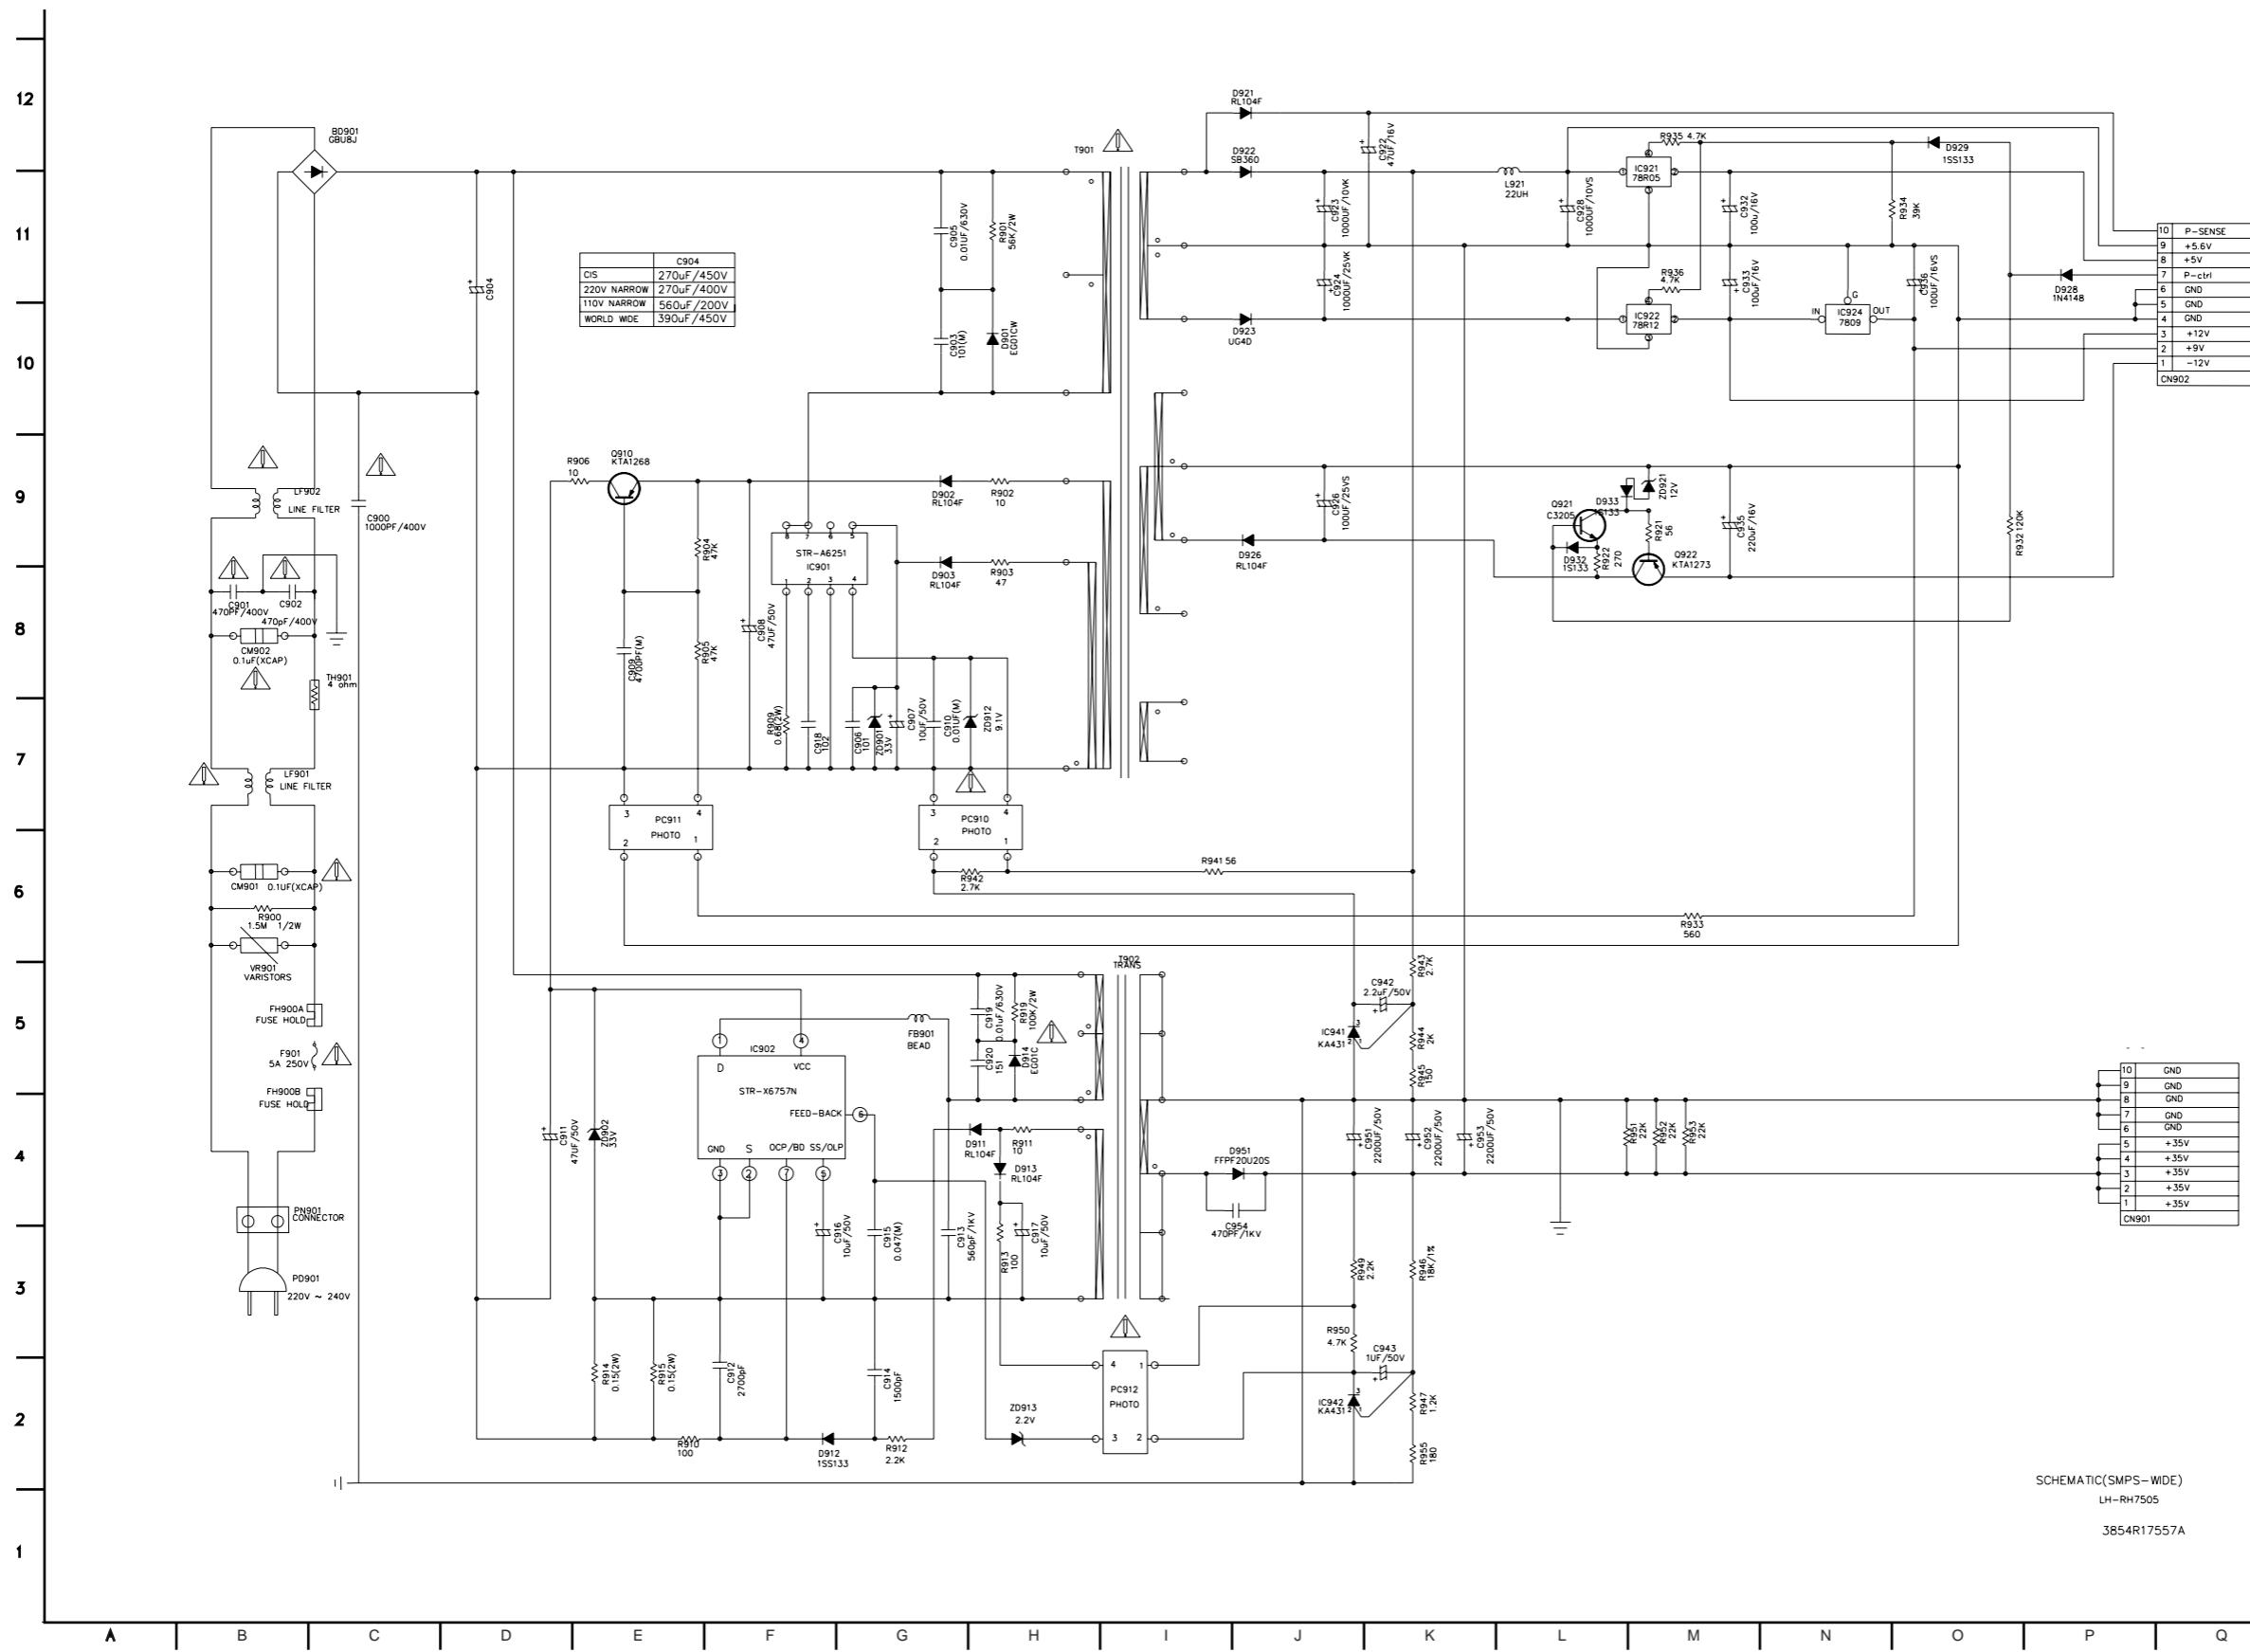


3-69

3-70


2. SMPS CIRCUIT DIAGRAM_1200W

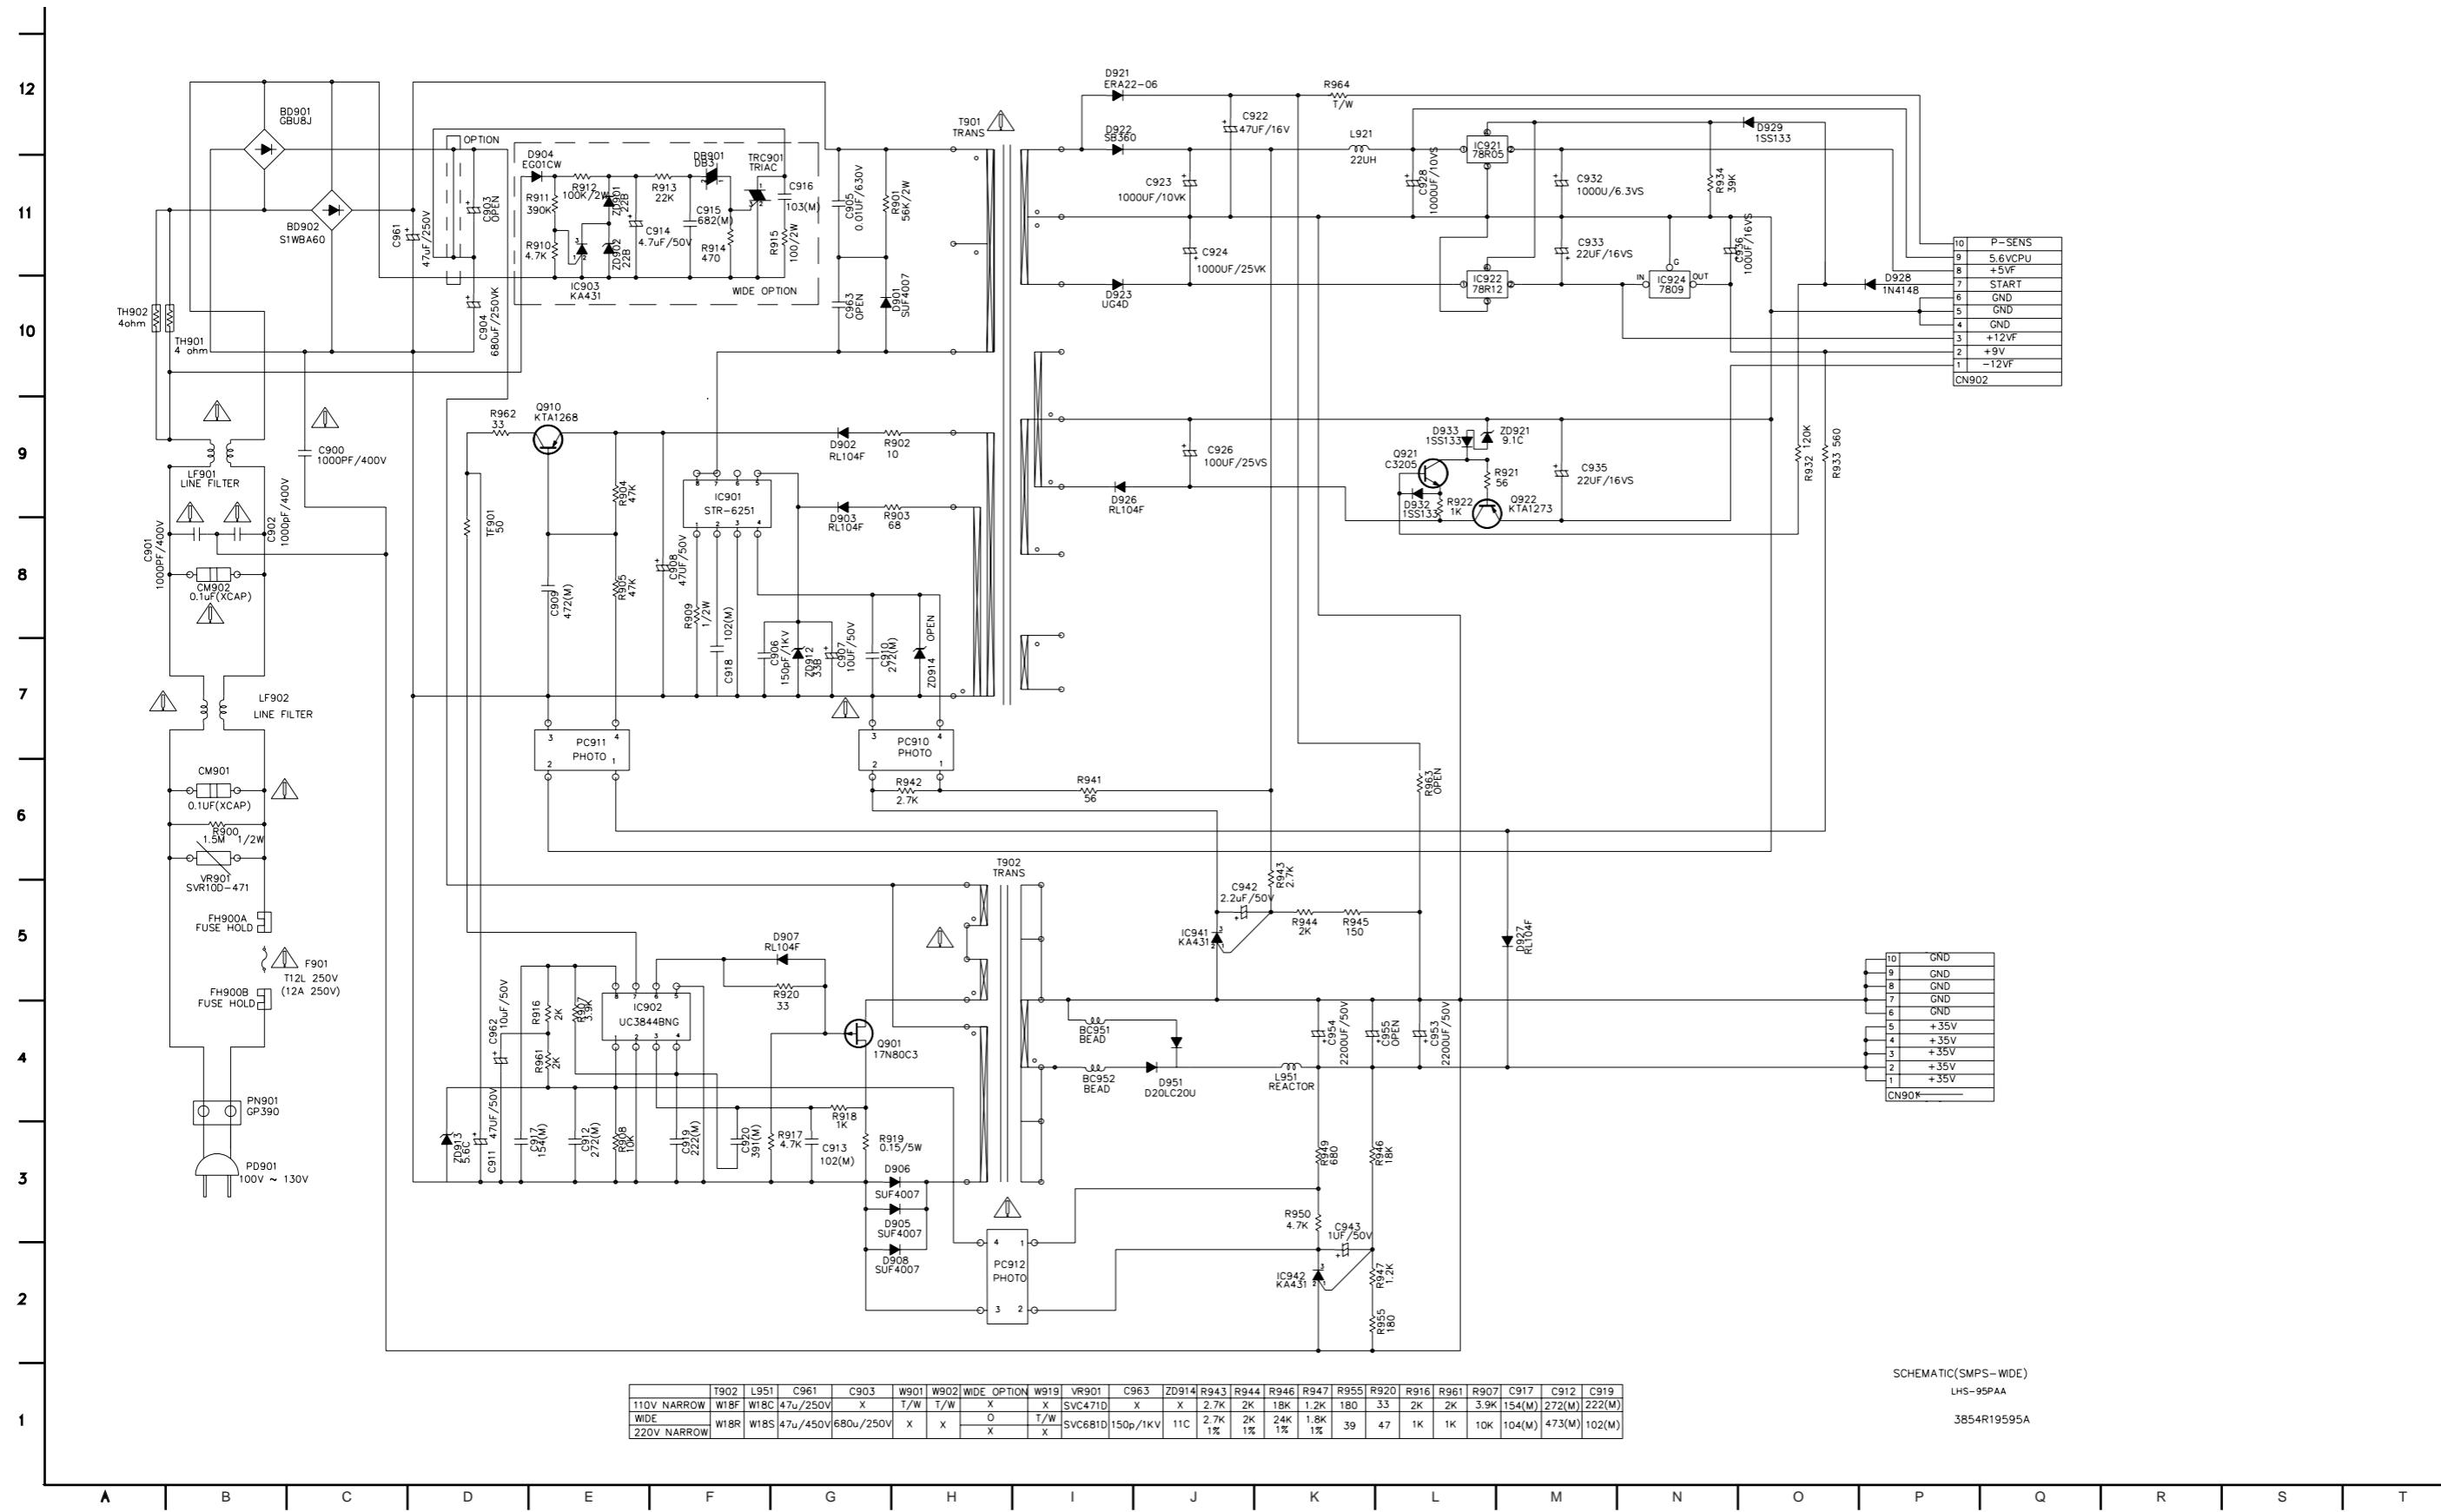


3. AMP CIRCUIT DIAGRAM

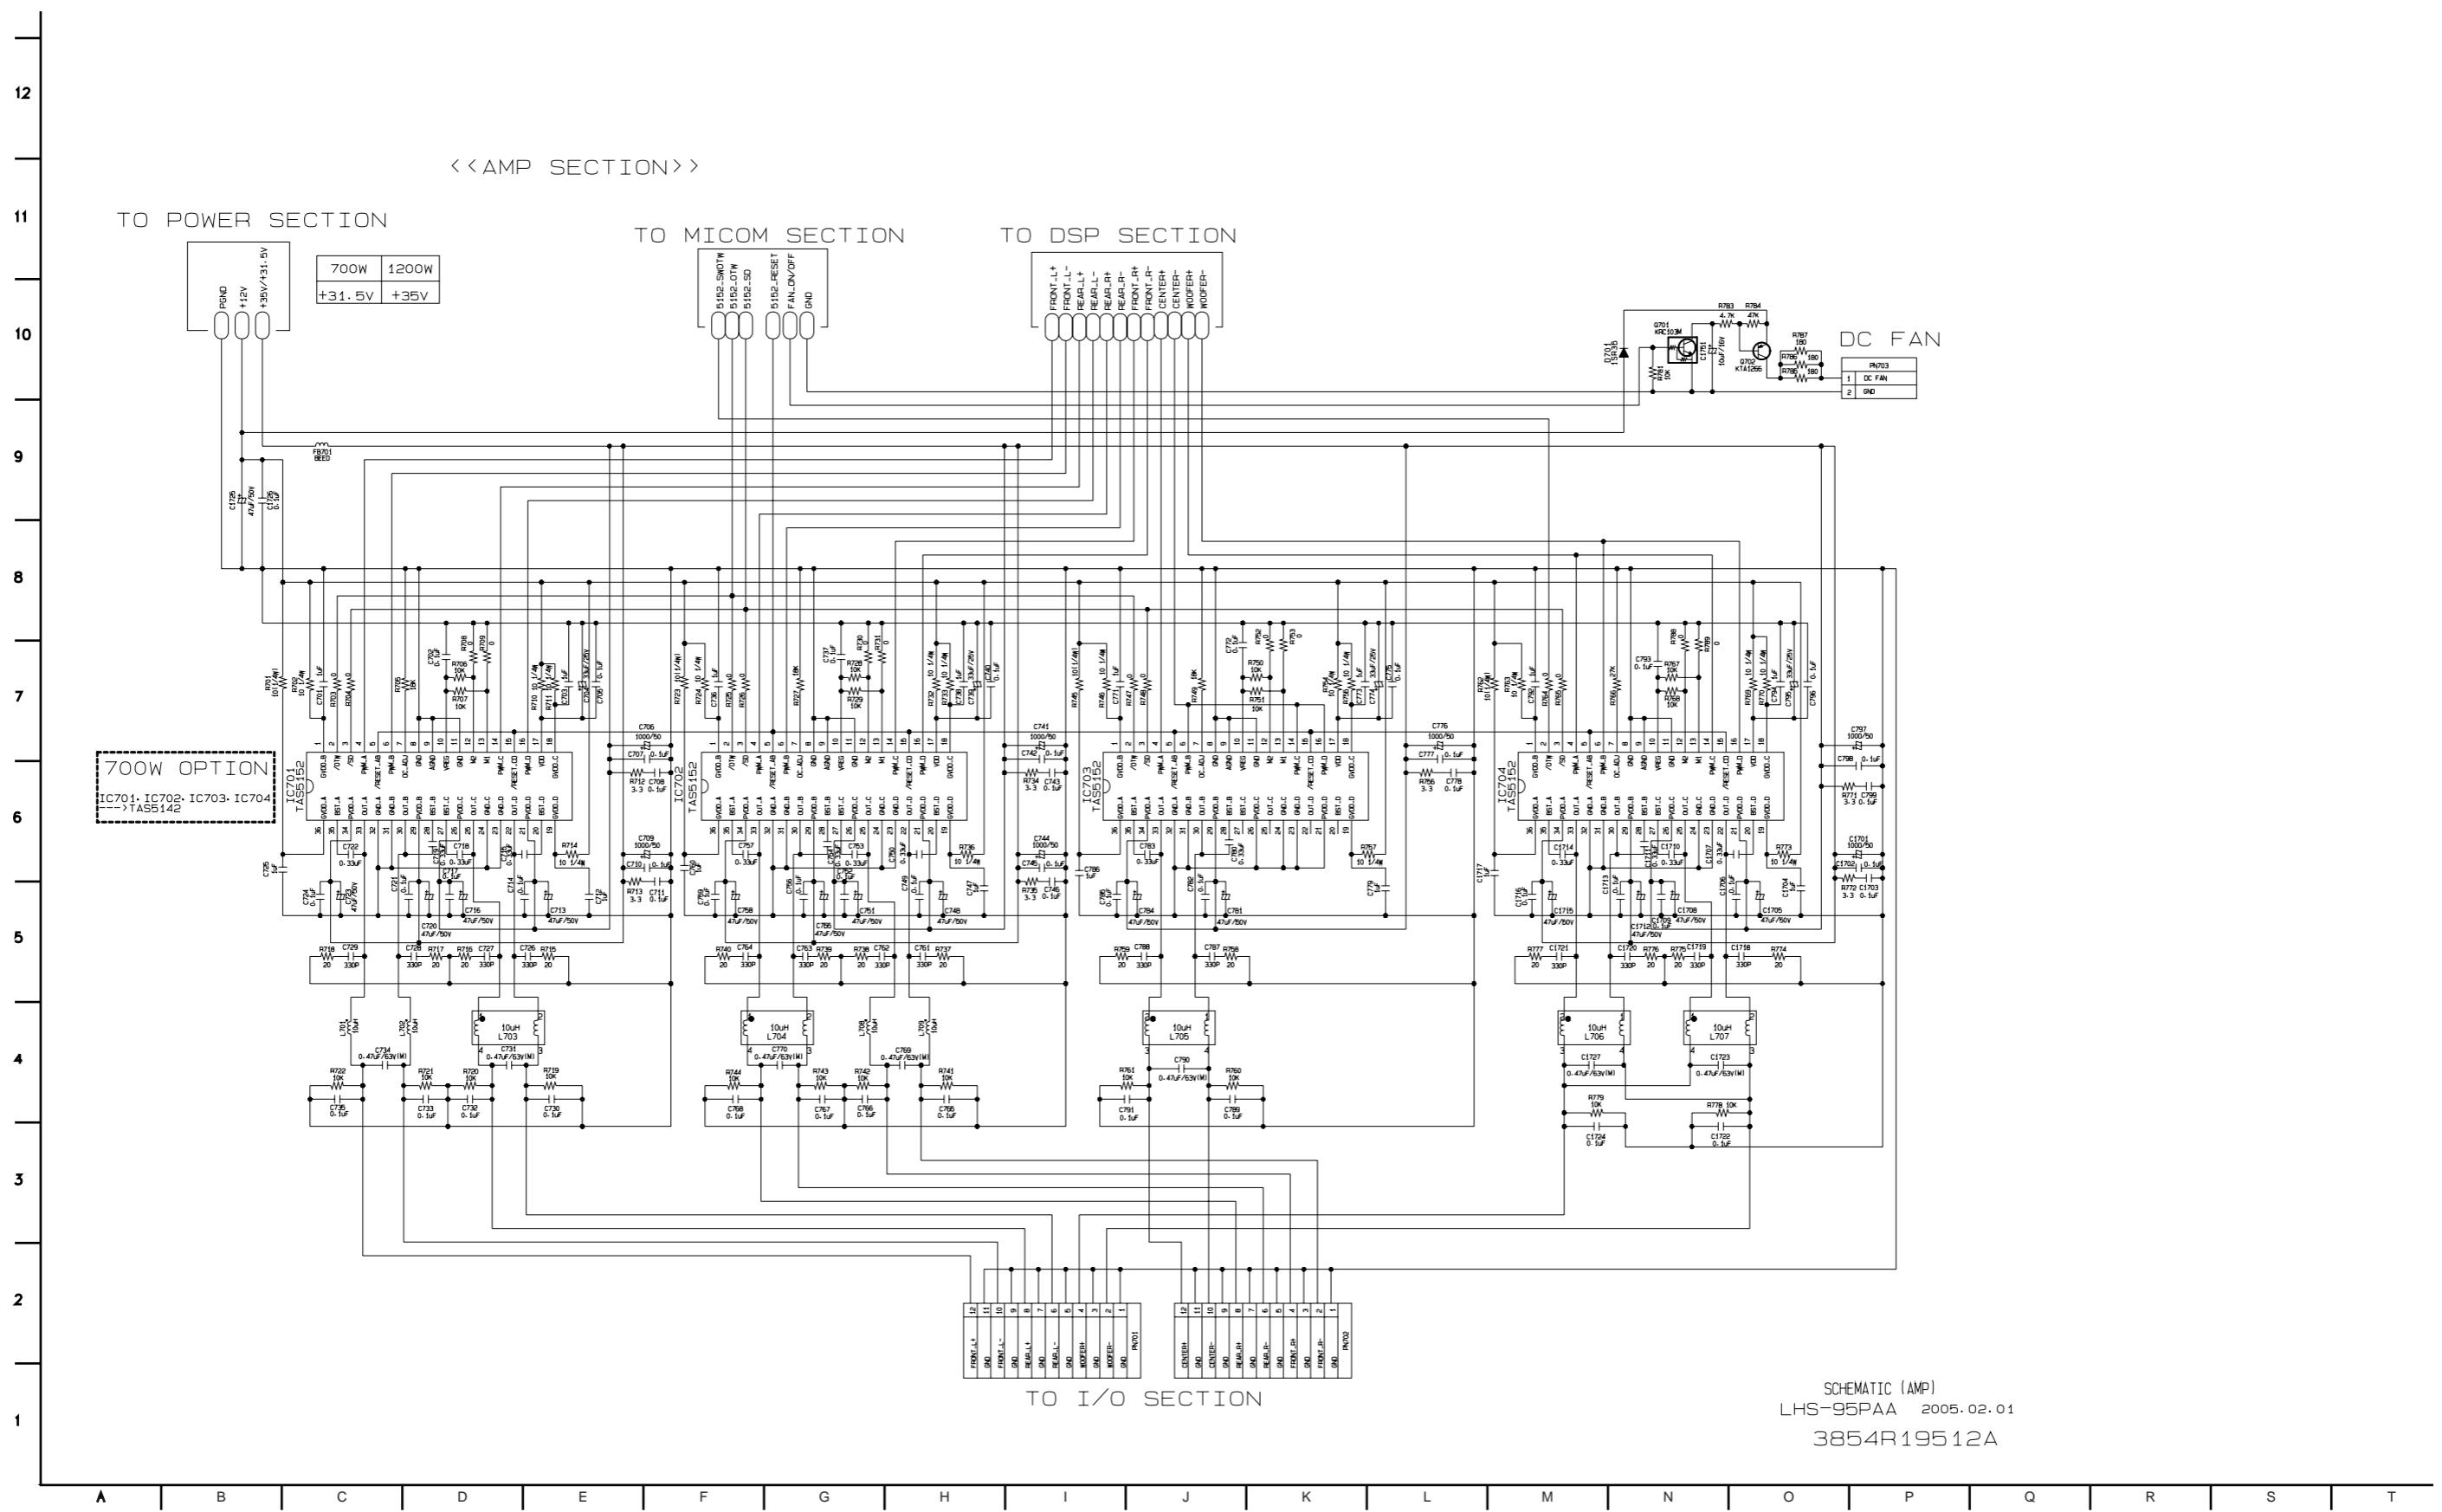


4. MICOM & DSP CIRCUIT DIAGRAM

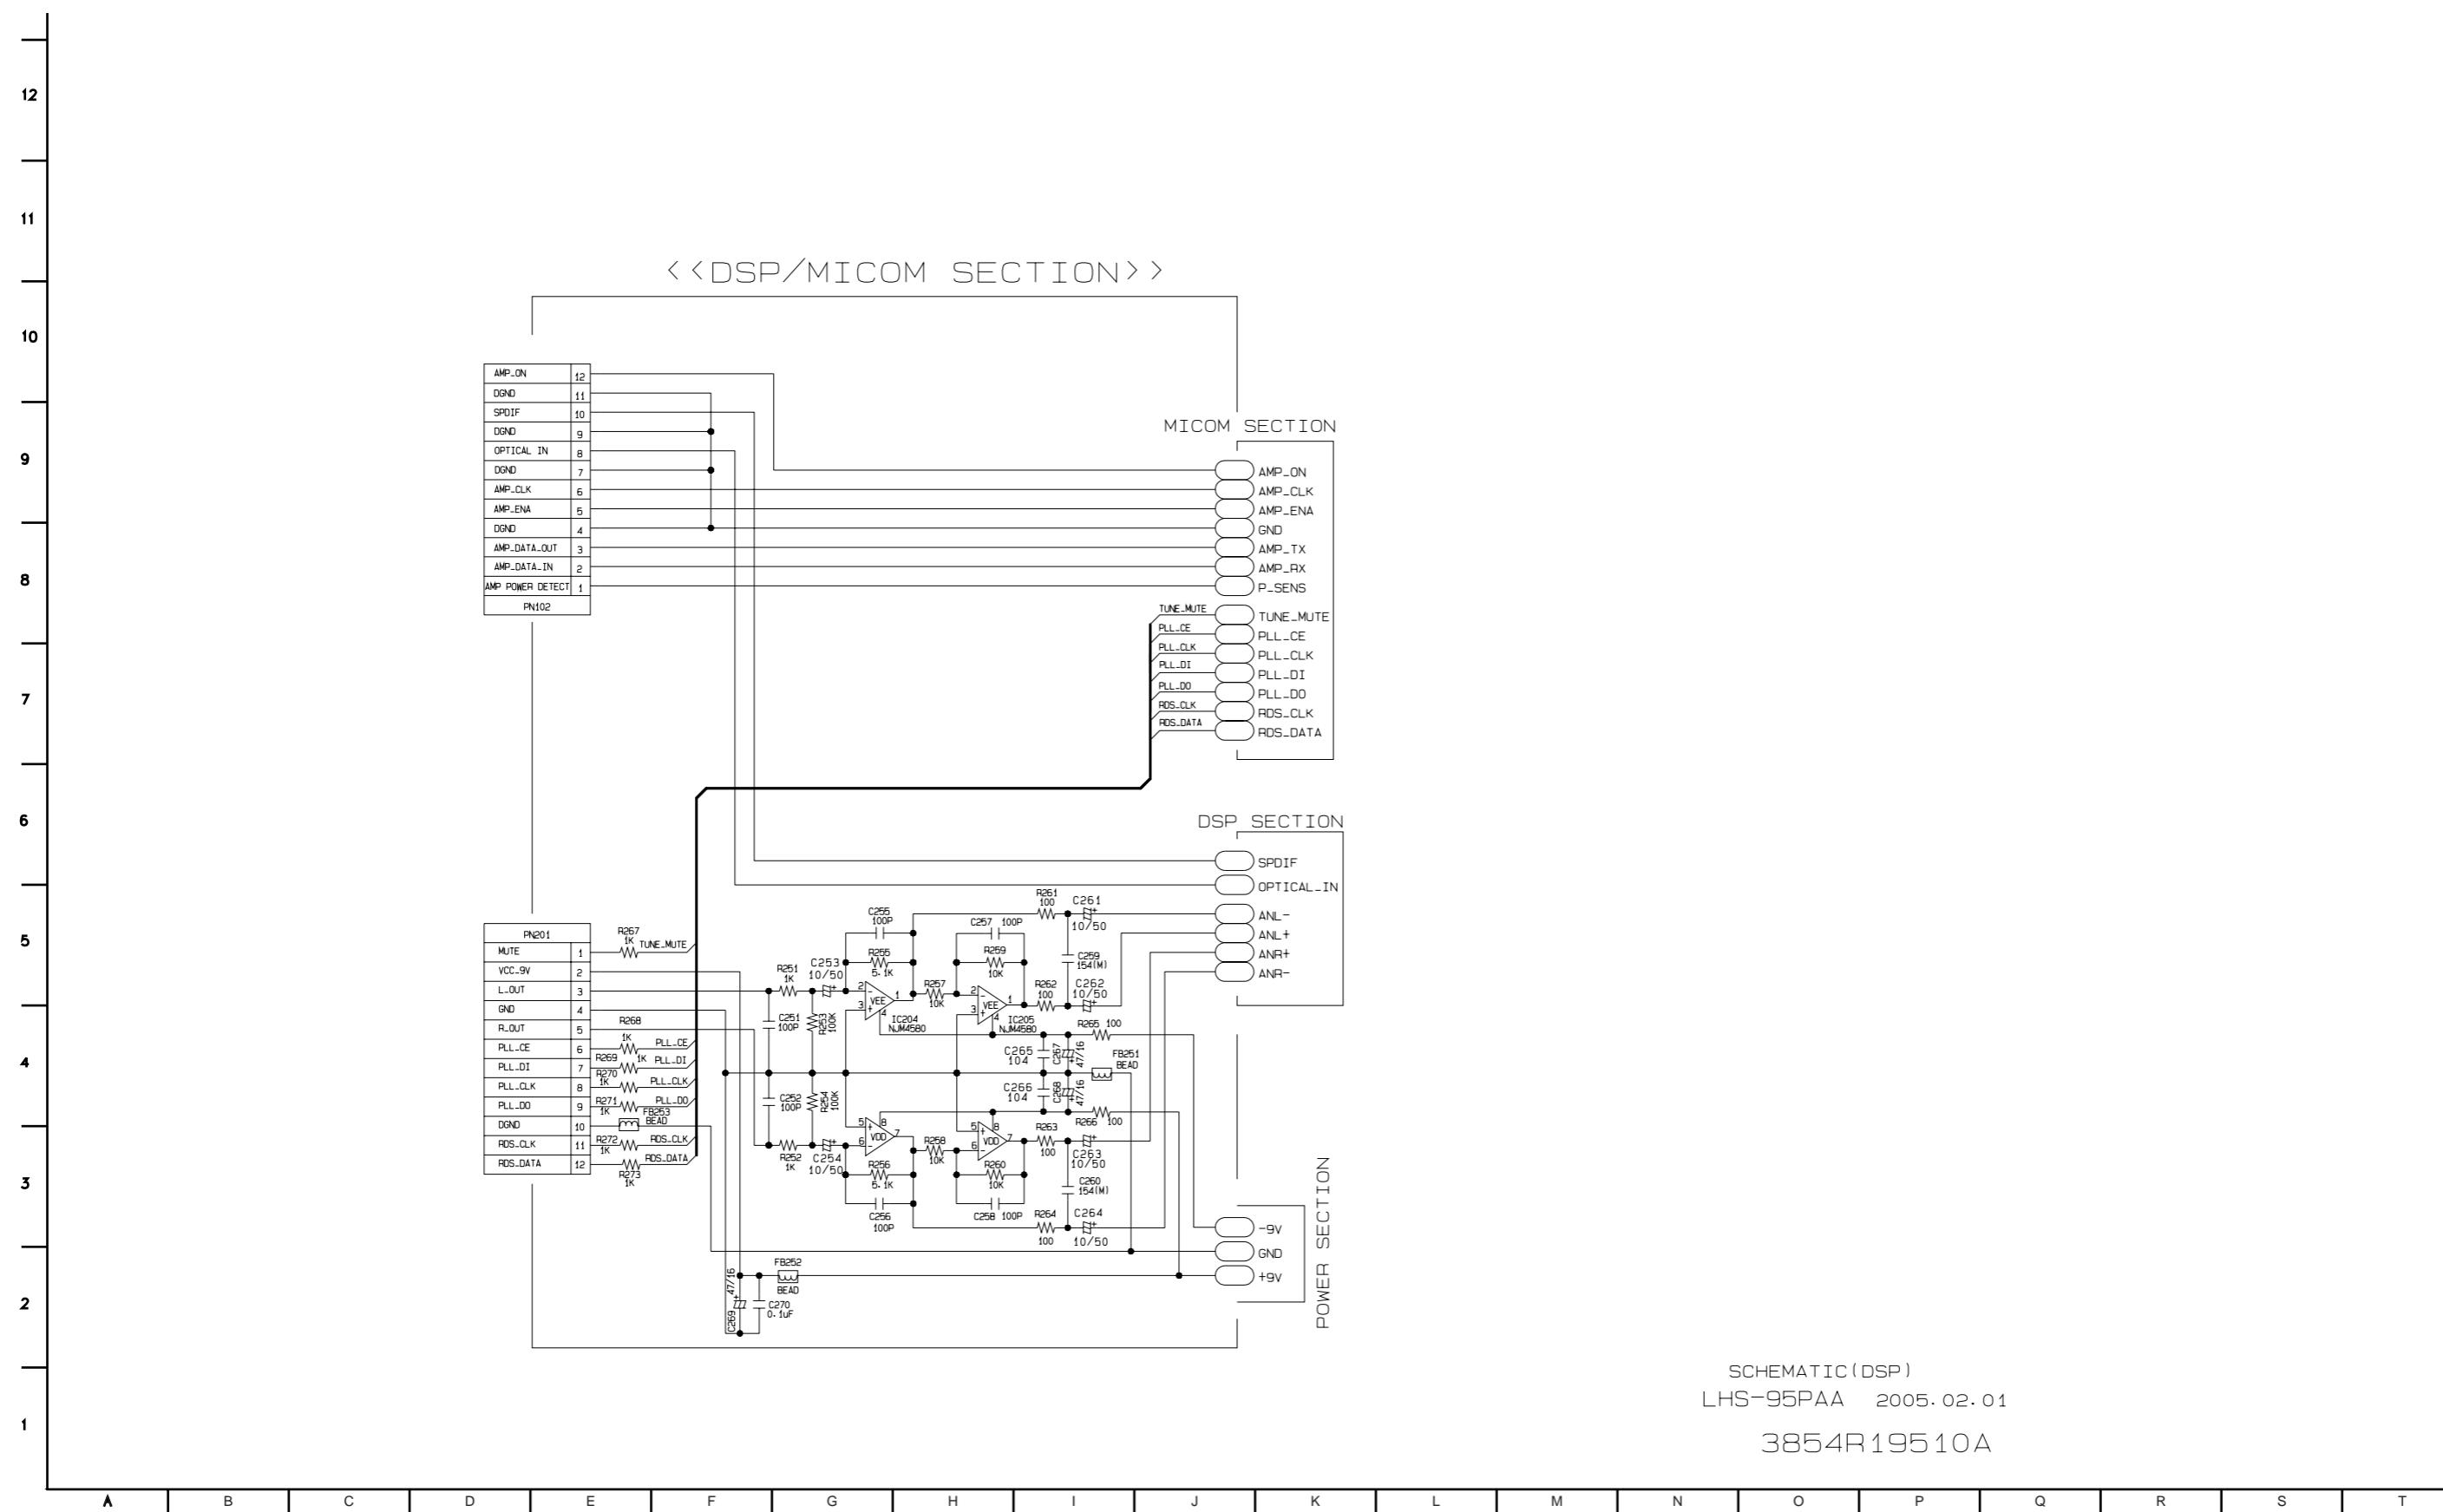

5. DSP CIRCUIT DIAGRAM

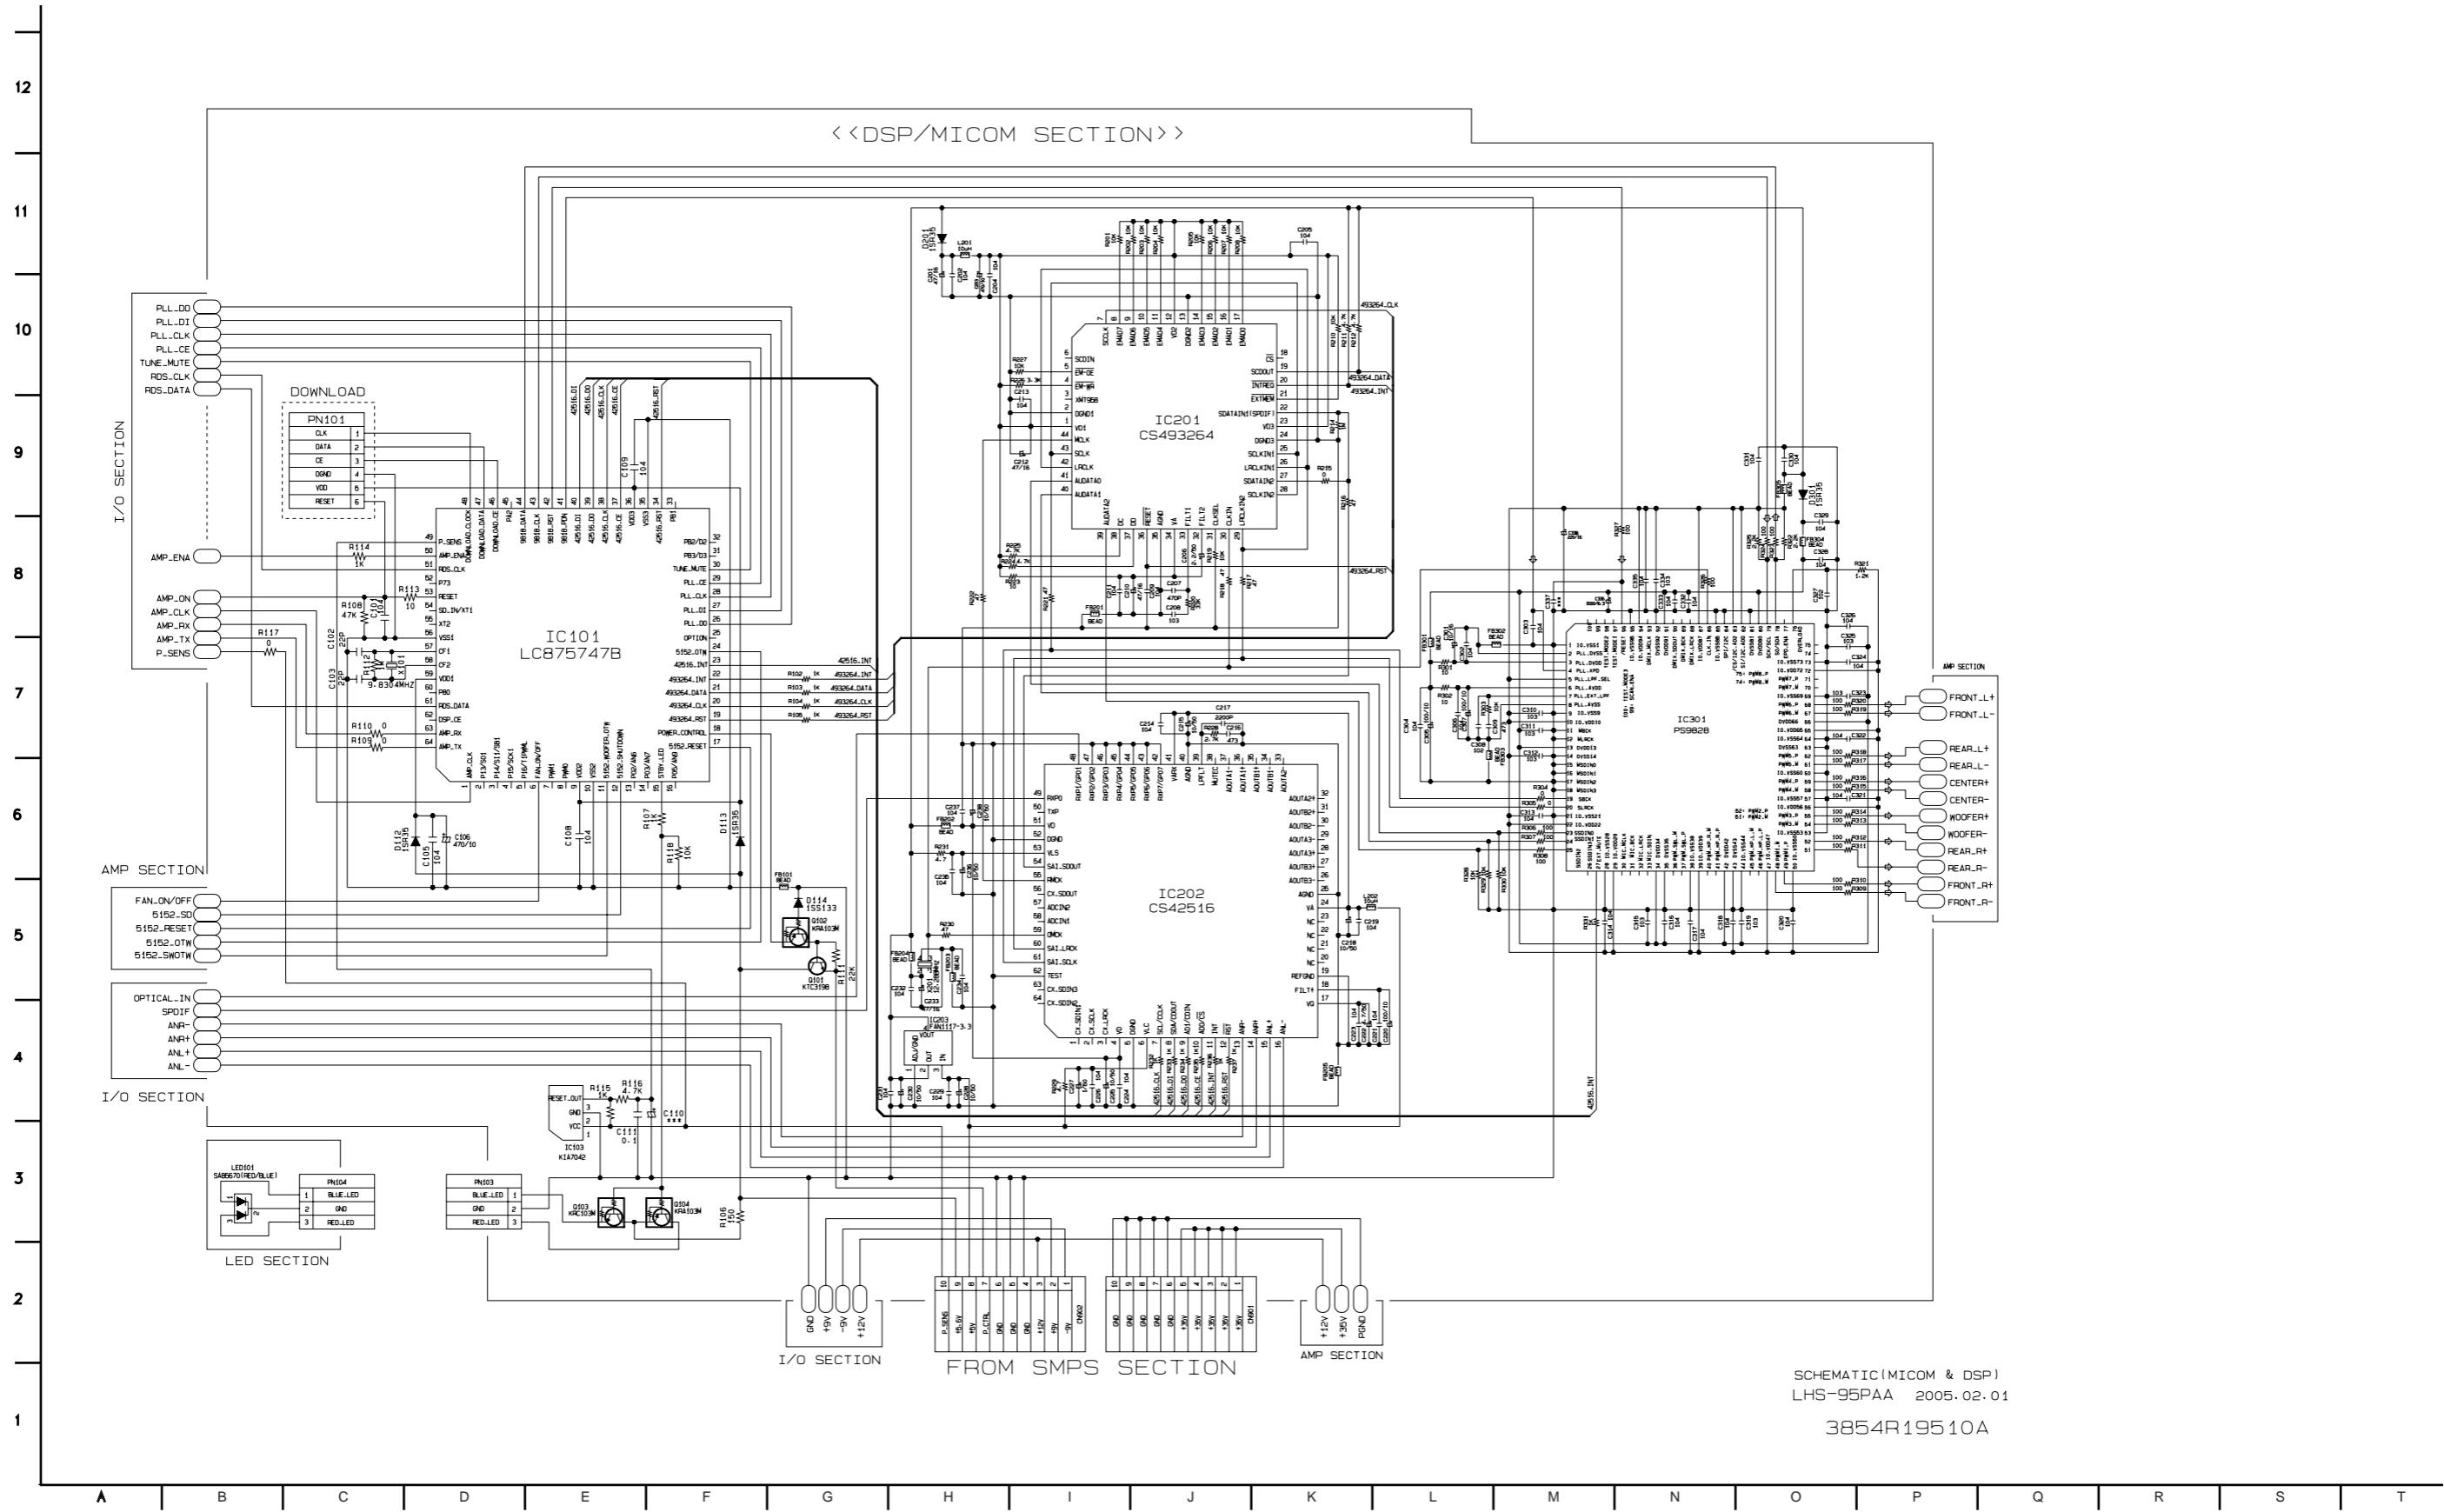


6. I/O JACK CIRCUIT DIAGRAM

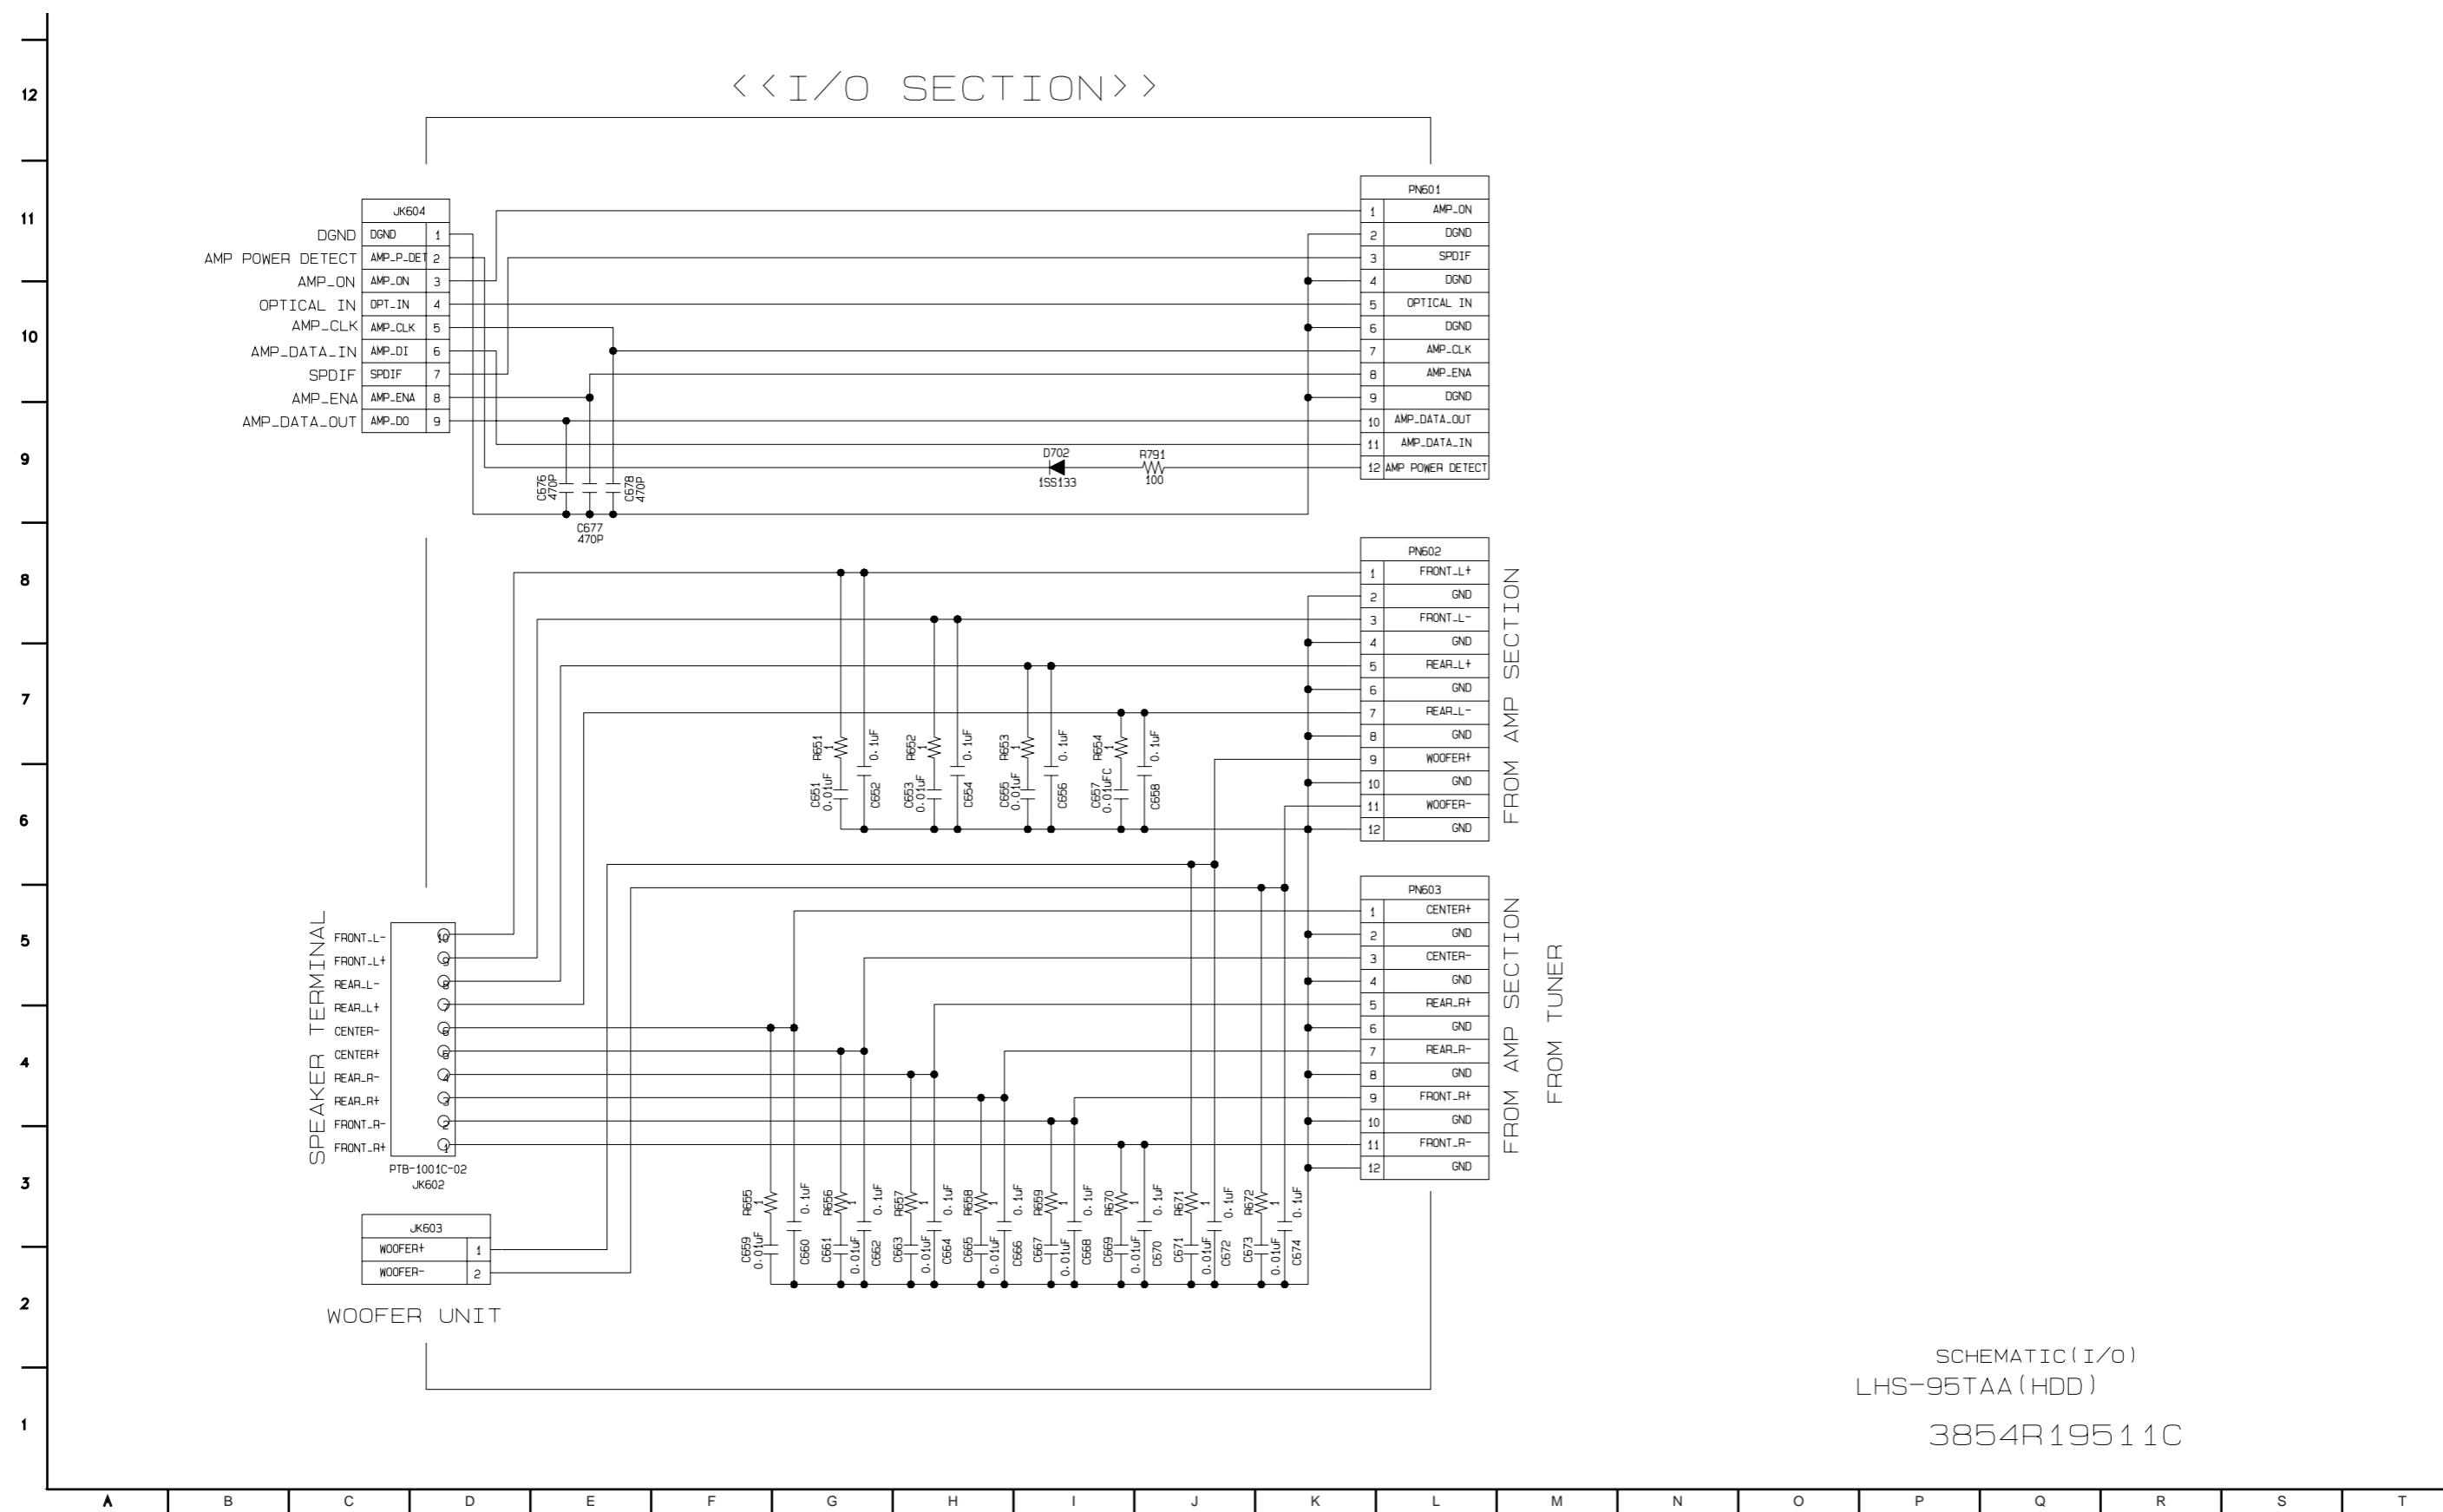


PRINTED CIRCUIT DIAGRAMS


1. MAIN & WOOFER P.C.BOARD (TOP VIEW)

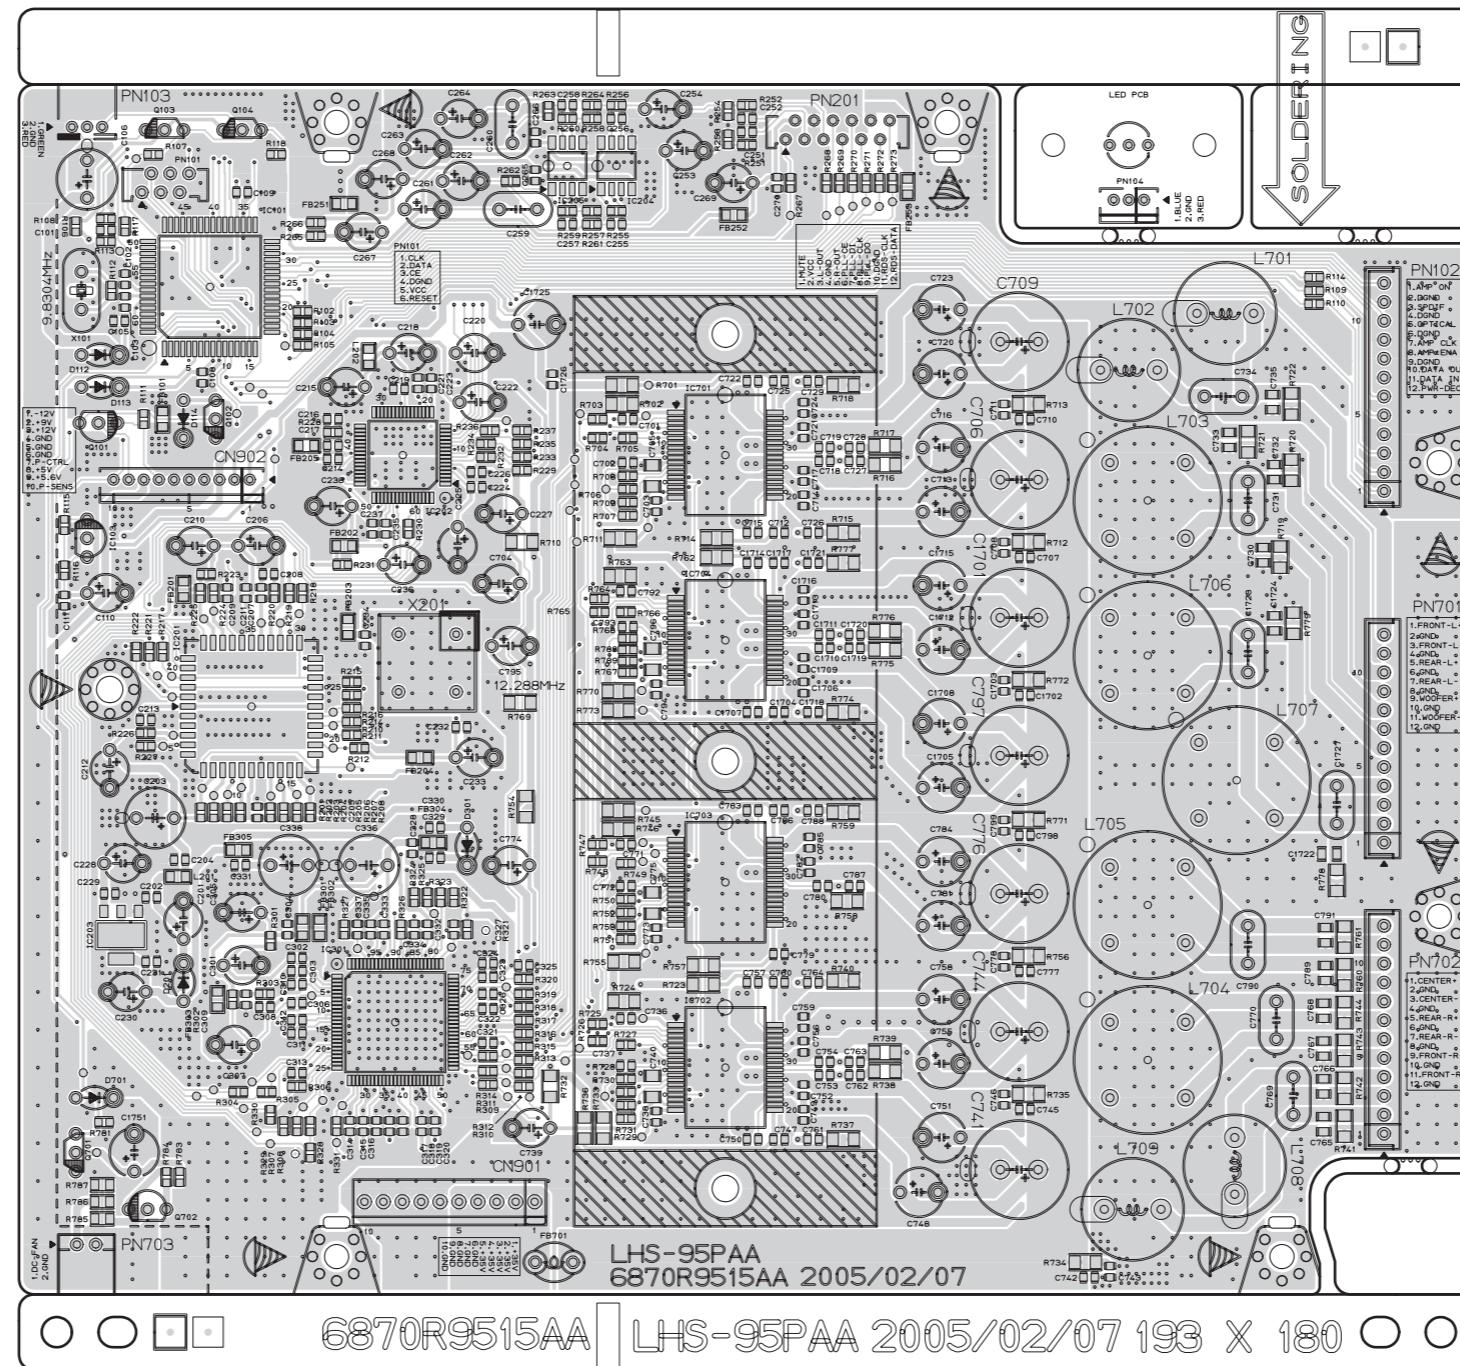


2. MAIN & WOOFER P.C.BOARD (BOTTOM VIEW)

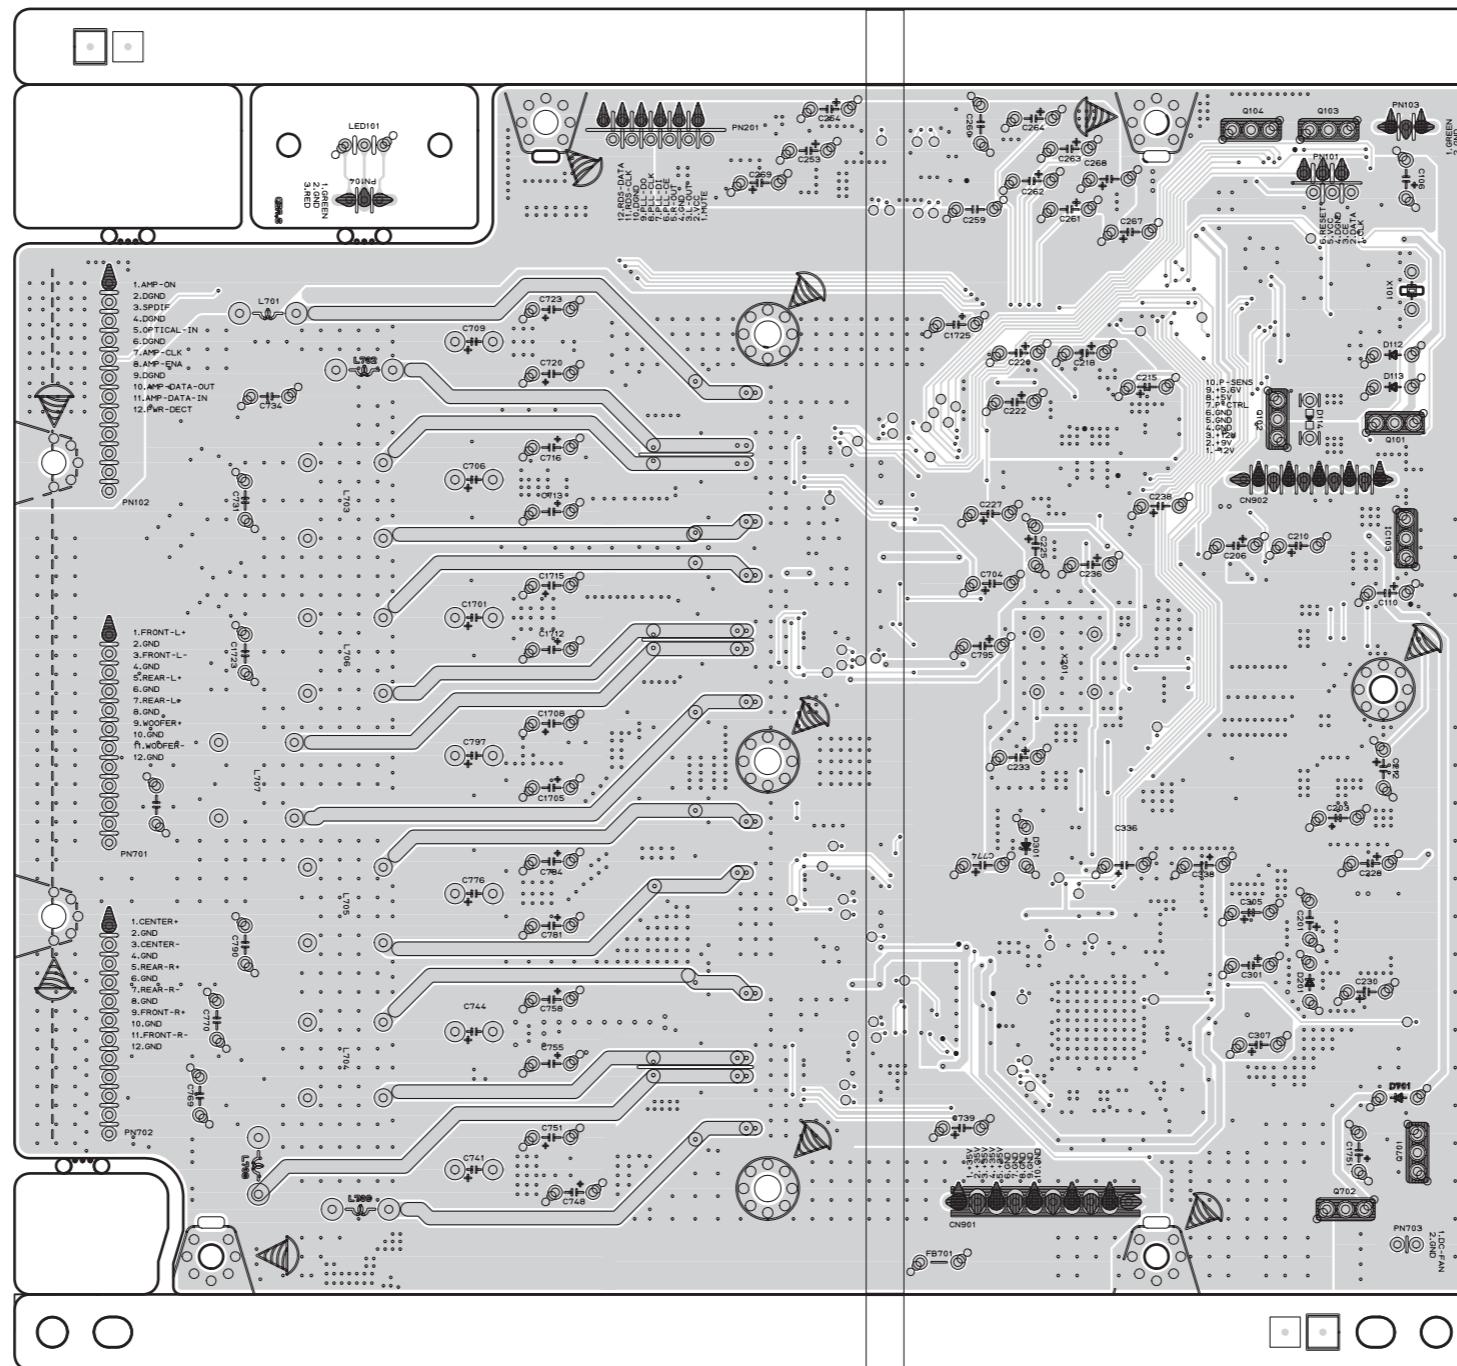

3. POWER P.C.BOARD

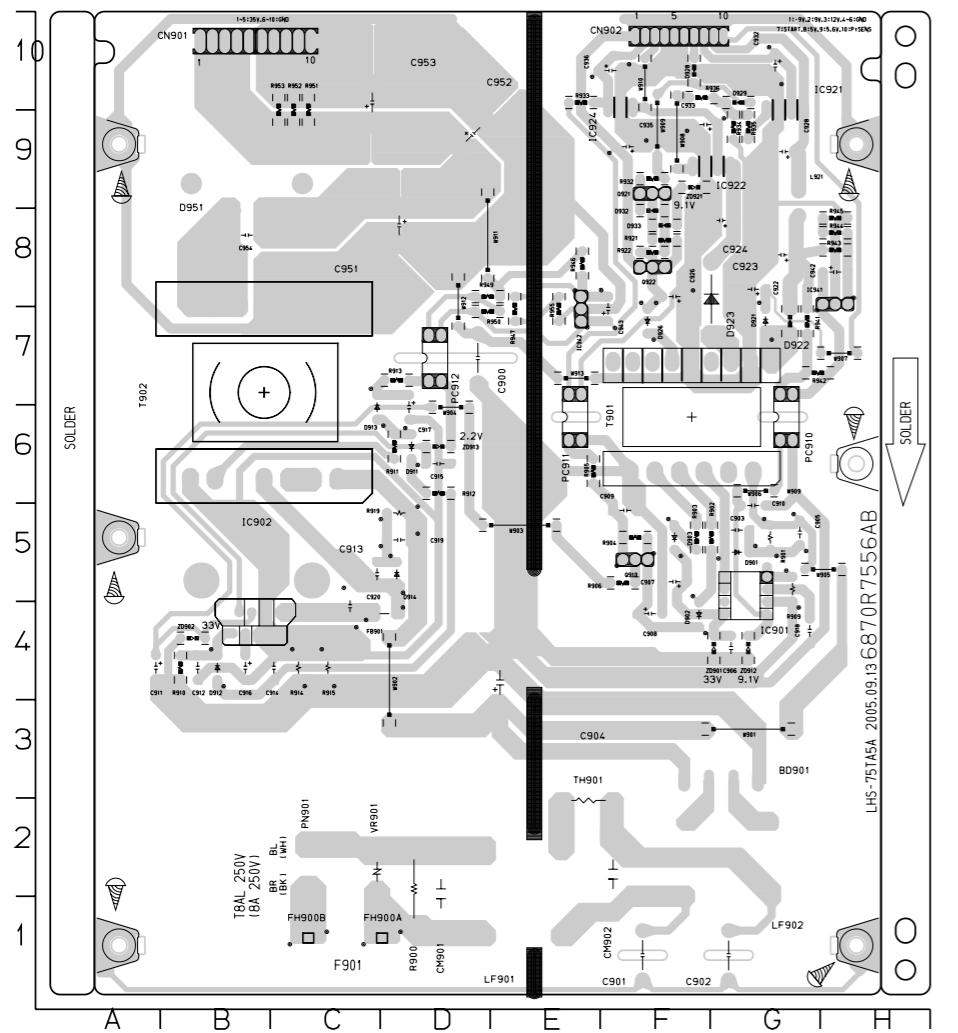


LOCATION GUIDE	
0901	G3
0901	D7
0901	F1
0902	G1
0903	G5
0904	E4
0905	G5
0906	LG
0907	F5
0908	F4
0909	PC910
0910	PC911
0911	G5
0912	A4
0913	C4
0914	C4
0915	D6
0916	B4
0917	D6
0918	B4
0919	D5
0920	P905
0921	G8
0922	G8
0923	G8
0924	G8
0925	F6
0926	G9
0927	G9
0928	G10
0929	F9
0930	F9
0931	P919
0932	H4
0933	F7
0934	D8
0935	D9
0936	C1
0937	B4
0938	P936
0939	F10
0940	P941
0941	B10
0942	P942
0943	F10
0944	G5
0945	F4
0946	F5
0947	P947
0948	B4
0949	P949
0950	C5
0951	G5
0952	F7
0953	T901
0954	F10
0955	P955
0956	G9
0957	F10
0958	G7
0959	F7
0960	P952
0961	G9
0962	F9
0963	G7
0964	F9
0965	G9
0966	F7
0967	G9
0968	F8
0969	ZD901
0970	D4
0971	ZD912
0972	ZD921

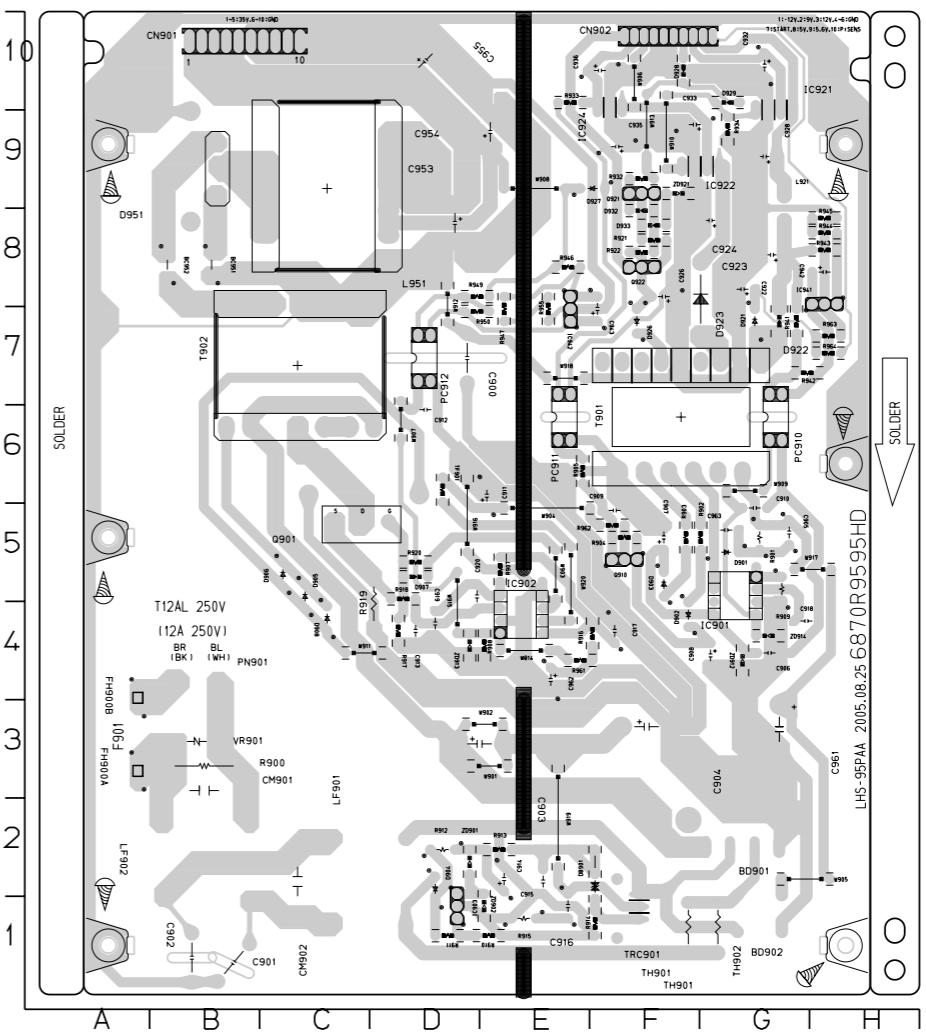

LOCATION GUIDE							
51	BB	D902	F4	R908	E4		
	BB	D903	F5	R909	E5		
101	G2	D904	D2	R910	E1		
02	G1	D905	C5	R911	D1		
0	D7	D906	C3	R912	D2		
1	B1	D907	D5	R913	E2		
2	B1	D908	C7	R914	F1		
3	E3	D921	G7	R915	E1		
4	F3	D922	G7	R916	F1		
5	G5	D923	G8	R917	D4		
6	G4	D926	F7	R918	F1		
7	F5	D927	F9	R919	D4		
8	G4	D928	F10	R920	D5		
9	G5	D929	G10	R921	F8		
1	E6	D933	F8	R922	F8		
2	D6	D951	B9	R933	E10		
3	D4	DE901	F2	R934	G9		
4	E2	FH900A	A3	R941	G7		
5	E2	FH900B	A4	R942	G7		
6	E1	IC901	G5	R943	H8		
7	F4	IC902	E4	R944	H8		
8	G4	IC903	D1	R945	H8		
9	D4	IC921	G3	R946	E8		
10	D5	IC922	G9	R947	E7		
12	G8	IC924	F10	R949	D8		
13	G3	IC941	H6	R950	D7		
14	G8	IC942	E7	R955	E7		
16	F6	L921	G8	R956	E4		
18	G9	L951	C9	R962	F5		
20	G10	LF901	C2	R963	H7		
23	F9	LF902	C9	R964	H7		
25	F9	PC910	G7	T901	F6		
26	F10	PC911	E7	T902	C7		
2	H2	PC912	D7	TF901	D6		
3	F7	PN901	B4	TH901	F1		
3	D8	Q901	C5	TH902	G1		
4	E9	Q910	F10	TRC901	C1		
5	D10	Q921	F9	VR901	B3		
1	G3	Q922	B5	ZD901	B1		
2	E4	R900	B3	ZD902	E1		
3	C5	R901	G5	ZD912	G4		
101	B3	R902	G5	ZD913	D4		
102	C2	R903	F5	ZD914	G4		
101	B10	R904	F5	ZD921	F9		
102	F10	R905	E6				
1	G5	R907	E1				

4. I/O JACK P.C.BOARD

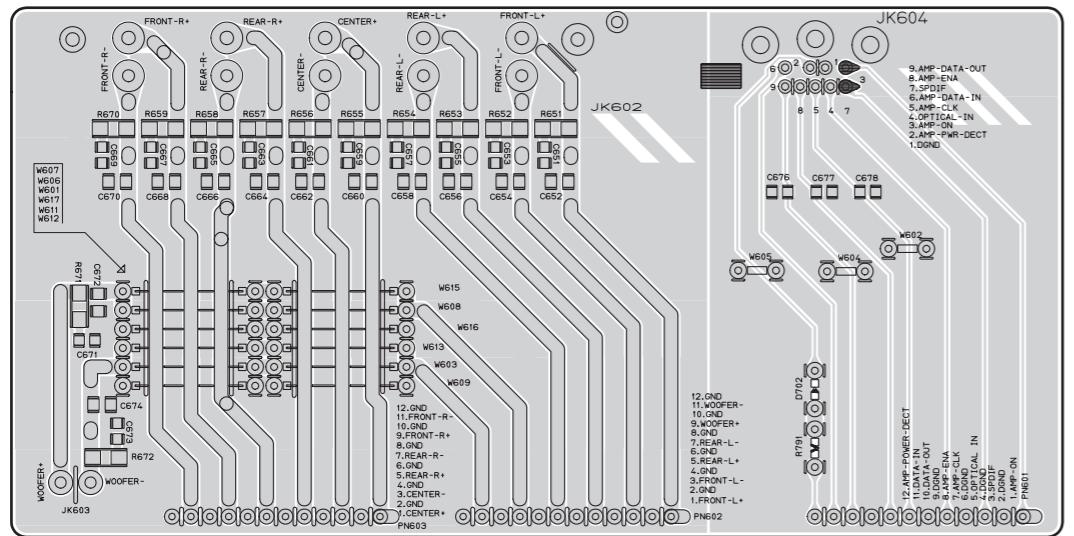


SECTION 4


RL-05 LOADER PART


CONTENTS


ELECTRICAL TROUBLESHOOTING GUIDE	4-2
WAVEFORMS	4-16
1. POWER & RESET SIGNAL	4-16
2. MAIN CLOCK1 FOR IC202 (16.9MHZ).....	4-16
3. SDRAM CLOCK	4-17
4. TRAY OPEN/CLOSE SIGNAL 1	4-17
5. TRAY OPEN/CLOSE SIGNAL 2	4-18
6. SLED MOVE SIGNAL 1	4-18
7. SLED MOVE SIGNAL 2	4-19
8. FOCUS SEARCH SIGNAL.....	4-19
9. LASER TURN ON SIGNAL	4-20
10. DISC TYPE JUDGEMENT WAVEFORM (CD SERIES)	4-21
11. DISC TYPE JUDGEMENT WAVEFORM (CD&CD-R).....	4-21
12. DISC TYPE JUDGEMENT WAVEFORM (CD-RW).....	4-22
13. DISC TYPE JUDGEMENT WAVEFORM (DVD SERIES)	4-22
14. DISC TYPE JUDGEMENT WAVEFORM (DVD_SINGLE&R)	4-23
15. DISC TYPE JUDGEMENT WAVEFORM (DVD_DUAL)	4-23
16. DISC TYPE JUDGEMENT WAVEFORM (DVDRW)	4-24
17. SPINDLE WAVEFORM1	4-24
18. SPINDLE WAVEFORM2	4-25
19. FOCUS ON SIGNAL(CD)	4-25
20. FOCUS ON SIGNAL(CD)).....	4-26
21. FOCUS ON SIGNAL(DVD)	4-26
22. FOCUS ON SIGNAL (DVD)	4-27
23. TRACK OFF SIGNAL(CD)	4-27
24. TRACK OFF SIGNAL(DVD)	4-28
25. TILT DRIVER SIGNAL(DISC READING)	4-28
26. RF WAVEFORM(DVD)	4-29
27. RF WAVEFORM(CD)	4-29
28. WOBBLE(DVD-R/RW)_READING	4-30
29. WOBBLE(DVD+R/RW)_READING&WRITING =>X1 SPEED	4-30
30. LD ENABLE(DVD)	4-31
31. LD ENABLE(CD)	4-31
32. LASER POWER(READING)_DVD+RW	4-32
33. LASER POWER(ERASE)_DVD+RW	4-32
34. LASER POWER(WRITING)_INITIAL STATE	4-33
35. LASER POWER(WRITING)_PROCESSING	4-33
THE DIFFERENCE OF DVD-R/RW, DVD+R/RW DISCS AND DVD-ROM	4-34
1. RECORDING LAYER	4-34
2. DISC SPECIFICATION.....	4-35
3. DISC MATERIALS	4-34
4. ORGANIZATION OF THE INNER DRIVE AREA, OUTER DRIVE AREA, LEAD-IN ZONE AND LEAD-OUT ZONE	4-39
5. ALPC(AUTOMATIC LASER POWER CONTROL) CIRCUIT	4-43
HOW TO USE TEST TOOL	4-44
BLOCK DIAGRAMS	4-51
1. OVERALL BLOCK DIAGRAM	4-51
2. DSP BLOCK DIAGRAM	4-52
3. μ-COM BLOCK DIAGRAM	4-53
4. RF BLOCK DIAGRAM	4-54
CIRCUIT DIAGRAMS	4-55
1. RF1 CIRCUIT DIAGRAM	4-55
2. DSP CIRCUIT DIAGRAM	4-57
3. μ-COM CIRCUIT DIAGRAM	4-59
CIRCUIT VOLTAGE CHART	4-61
PRINTED CIRCUIT DIAGRAMS	4-63
1. MAIN P.C.BOARD	4-63
2. MAIN P.C.BOARD	4-65


ELECTRICAL TROUBLESHOOTING GUIDE


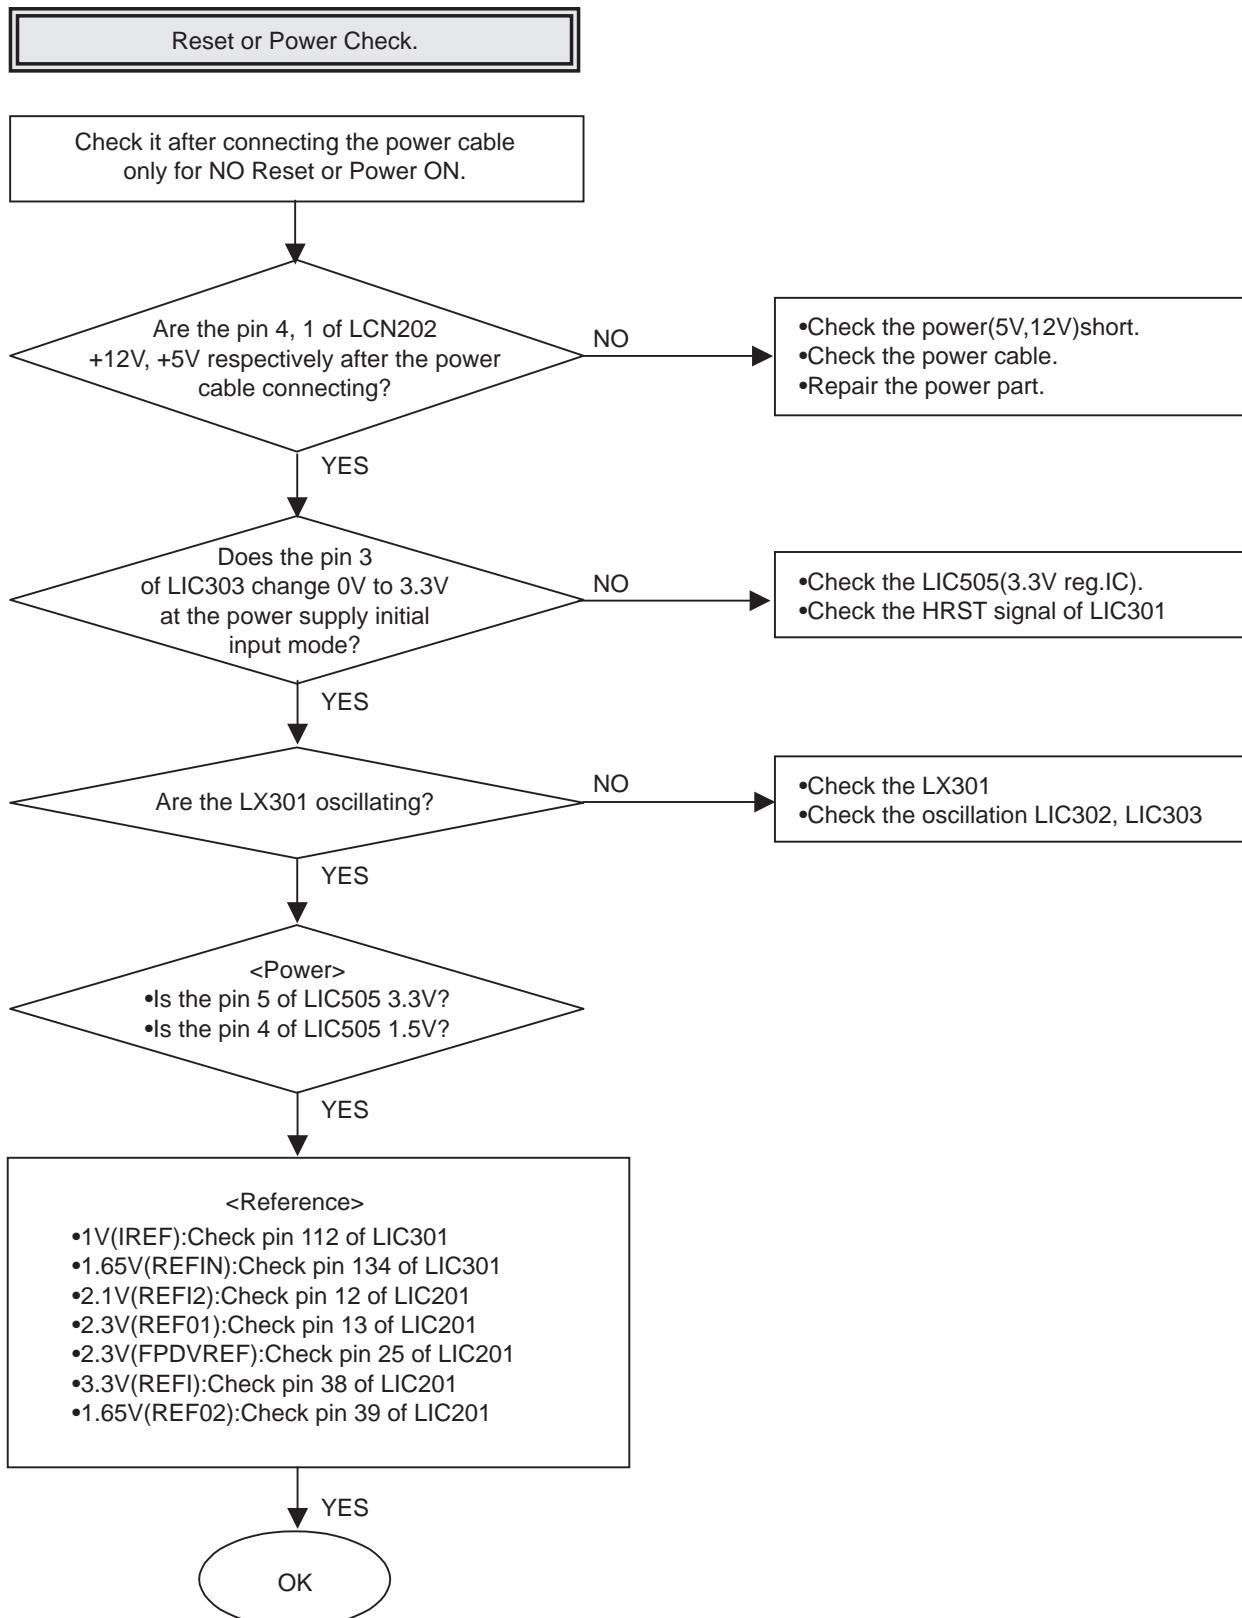


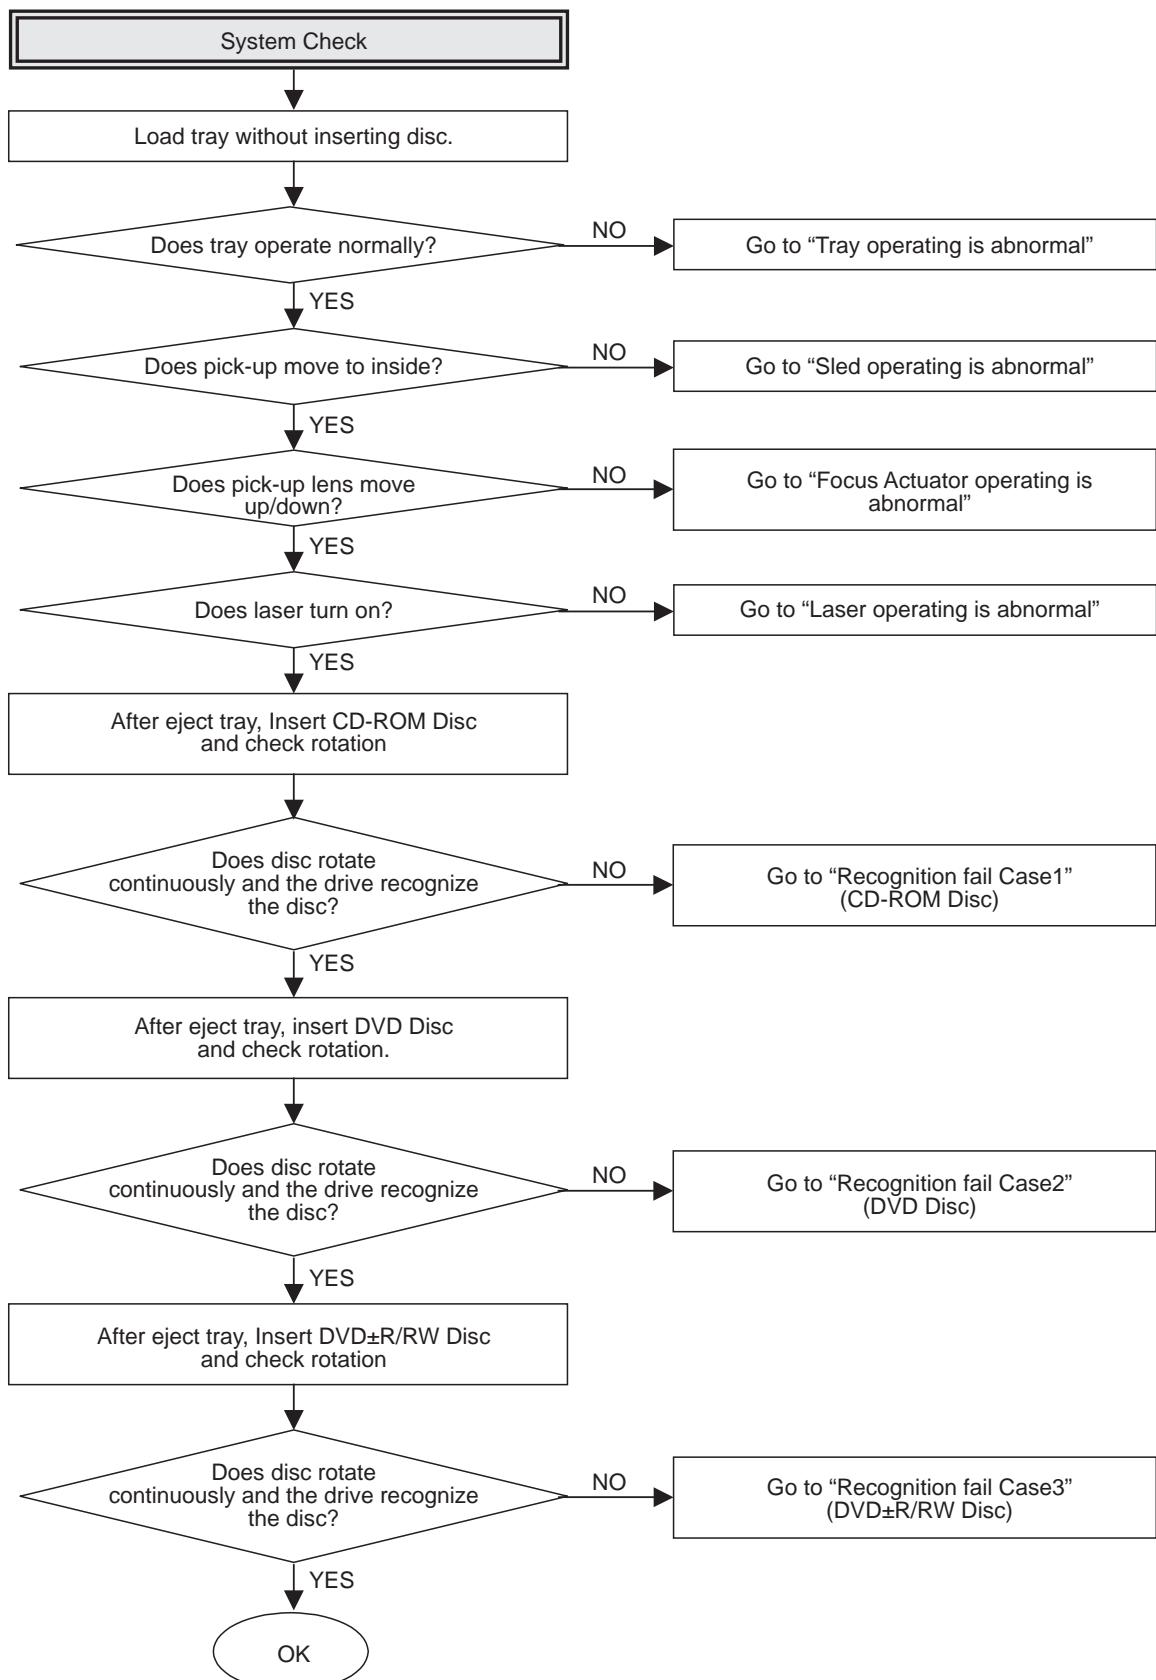


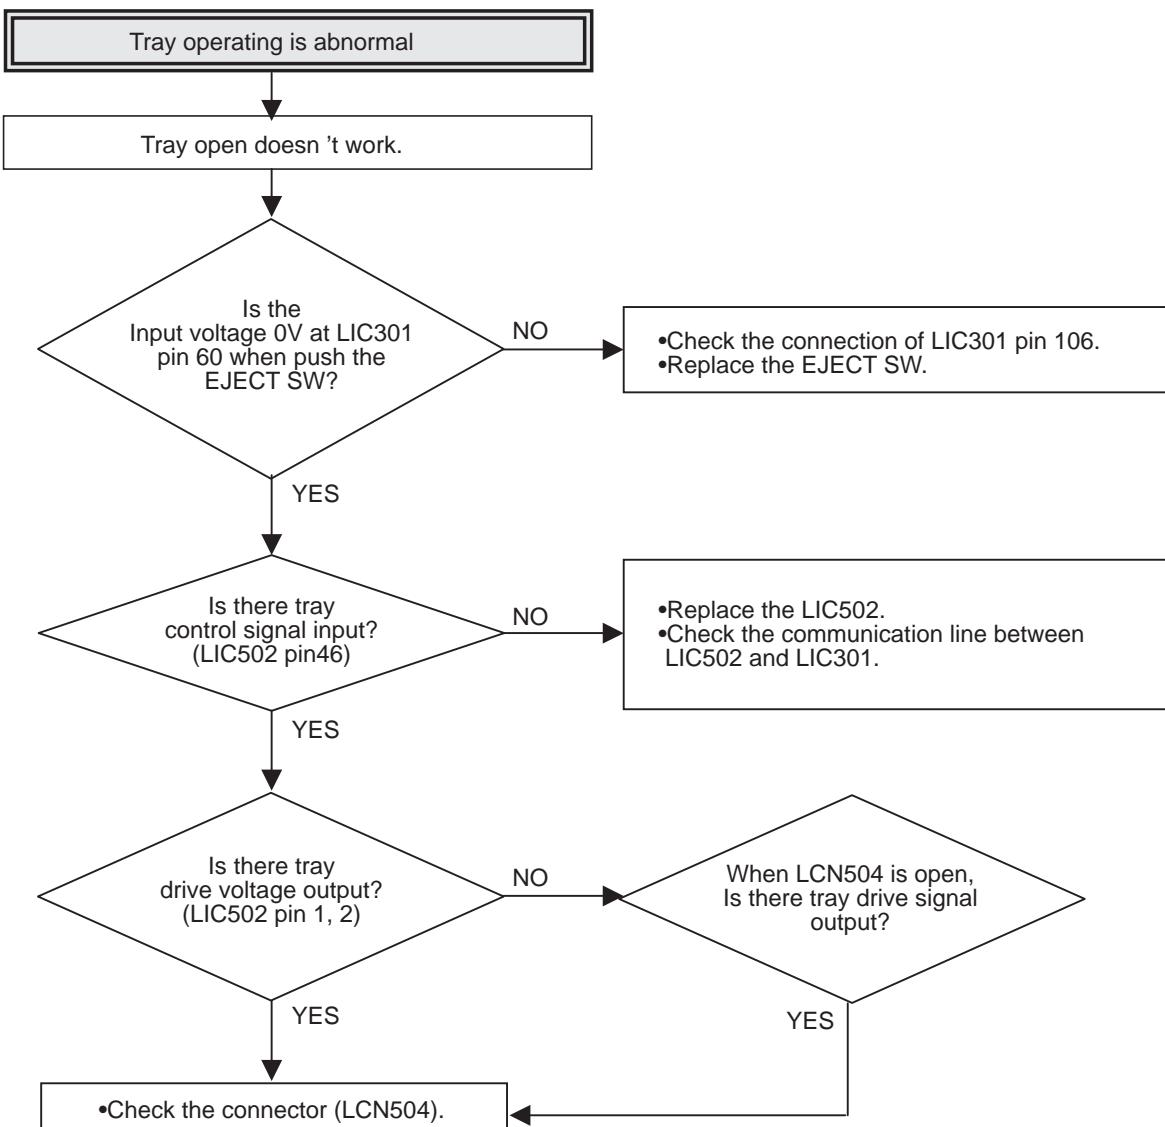



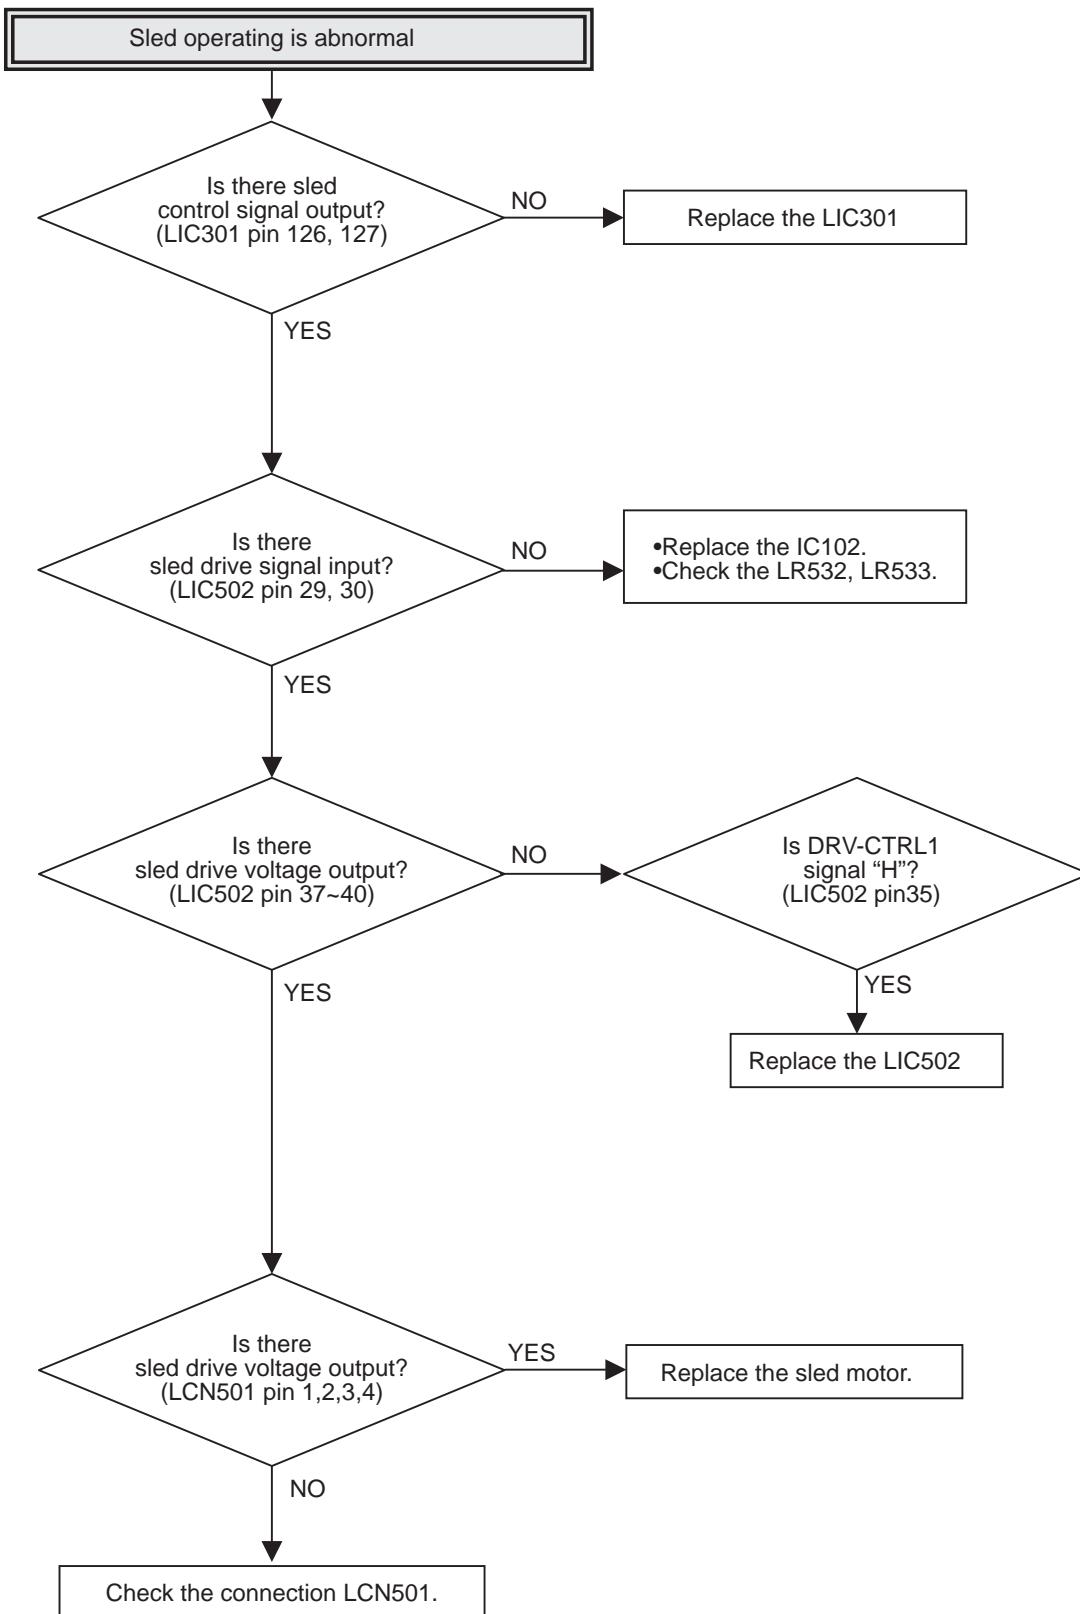


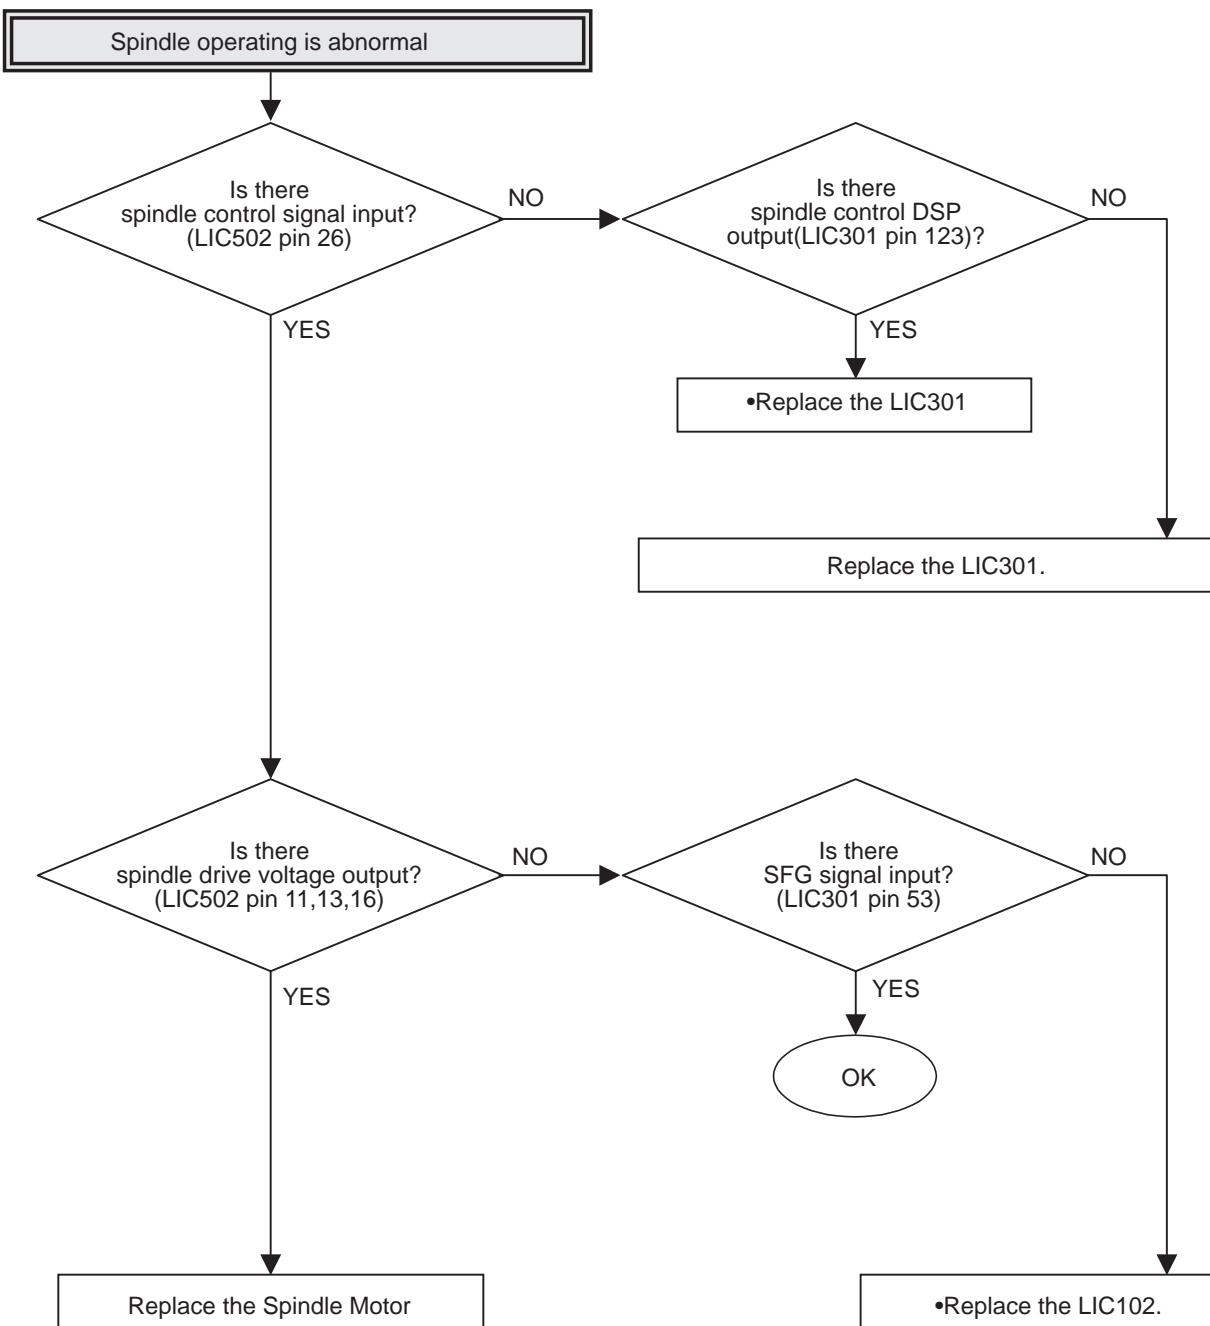


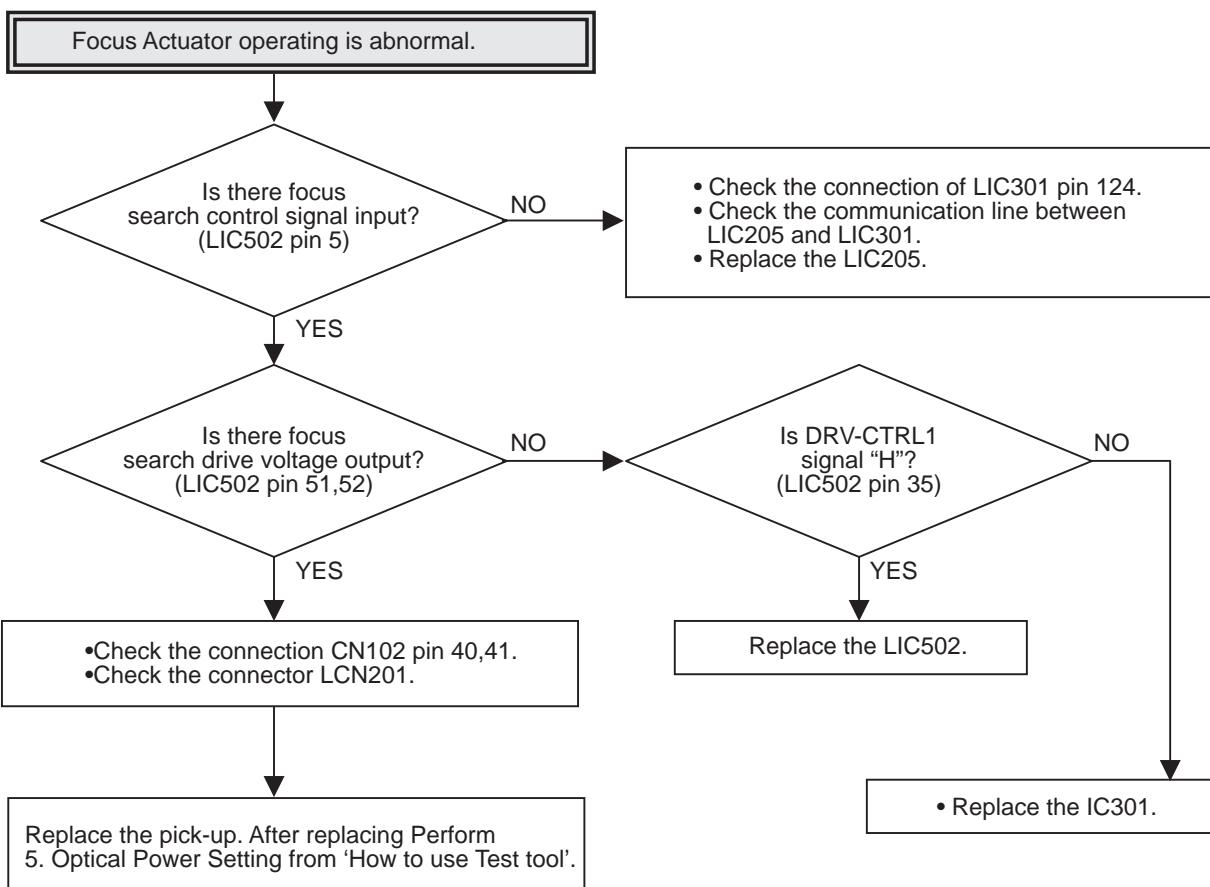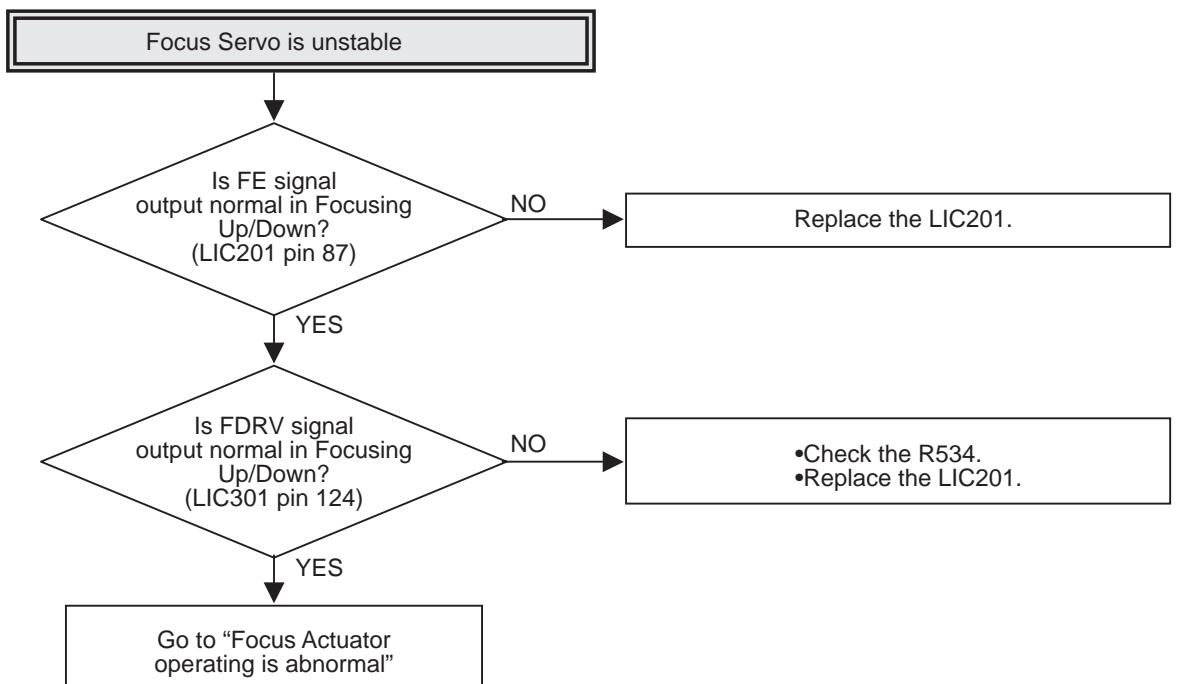


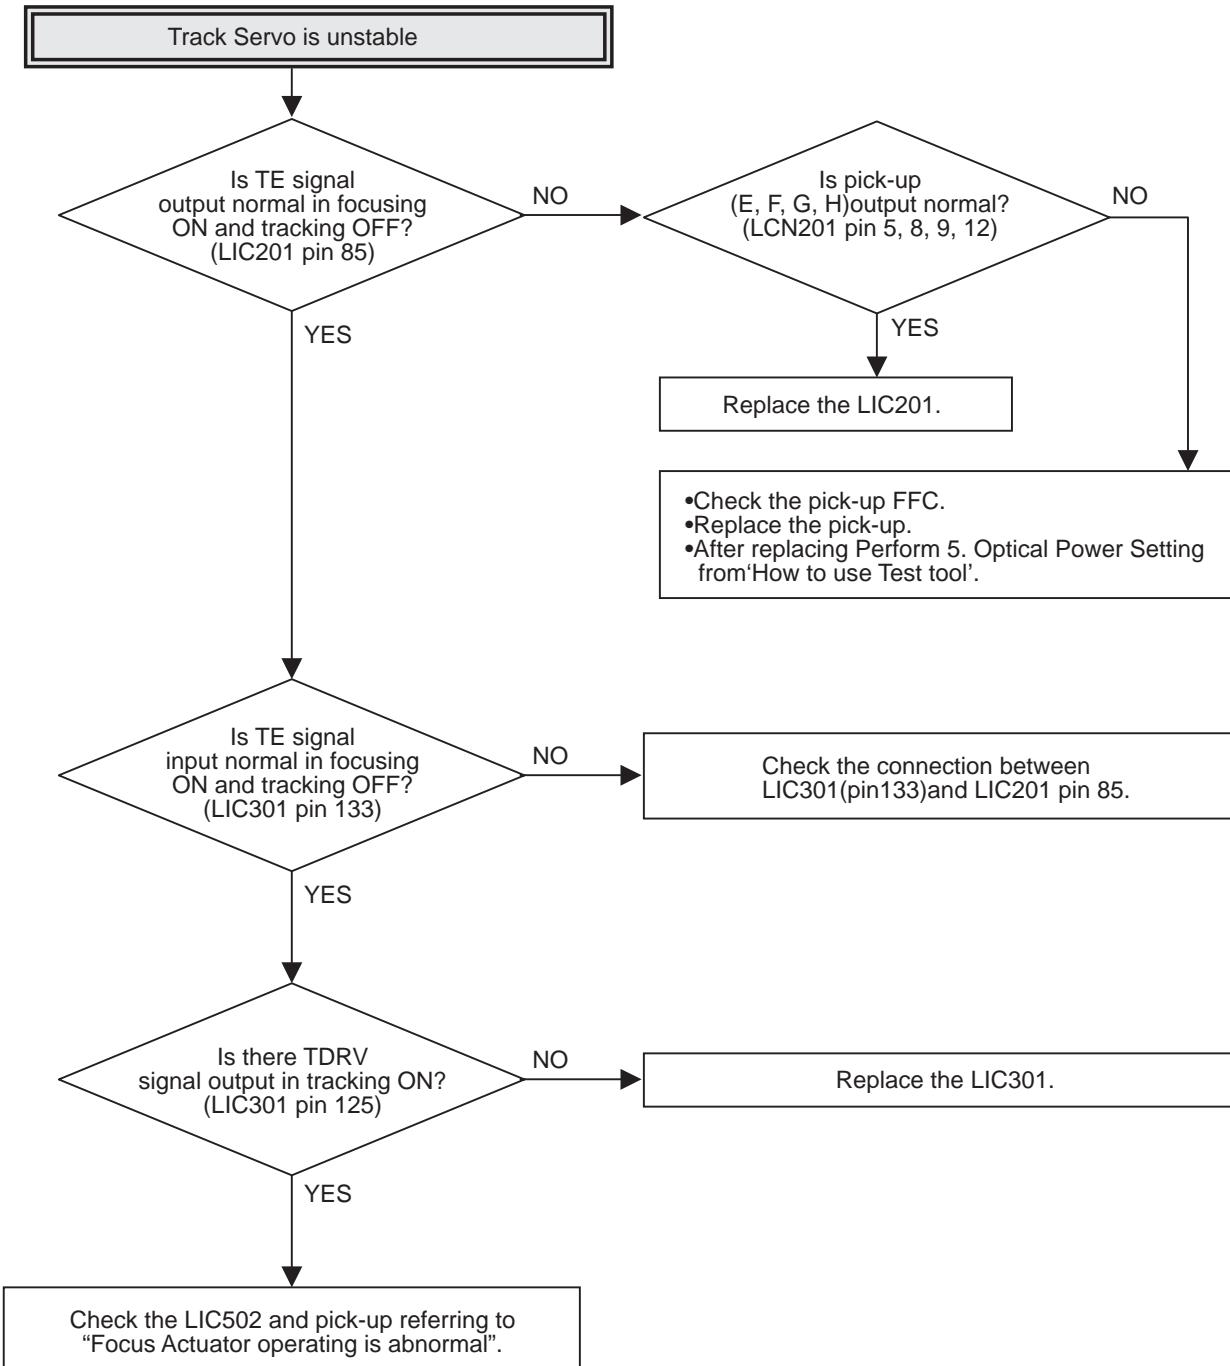


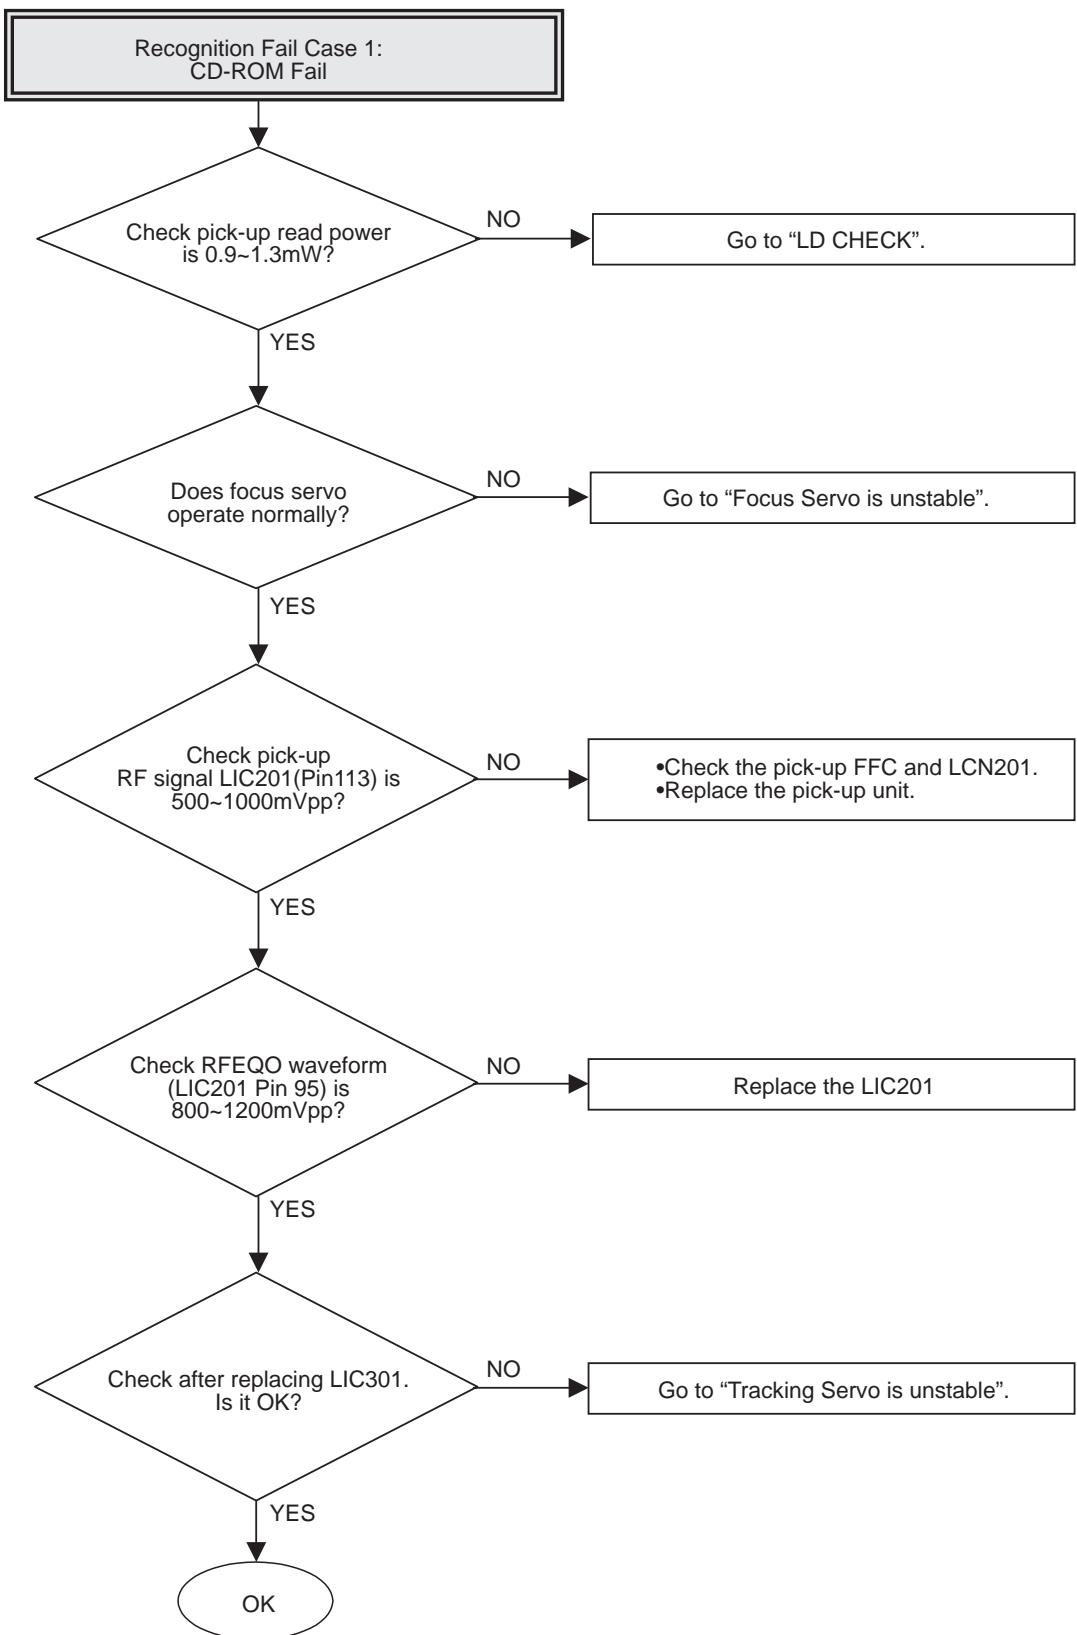


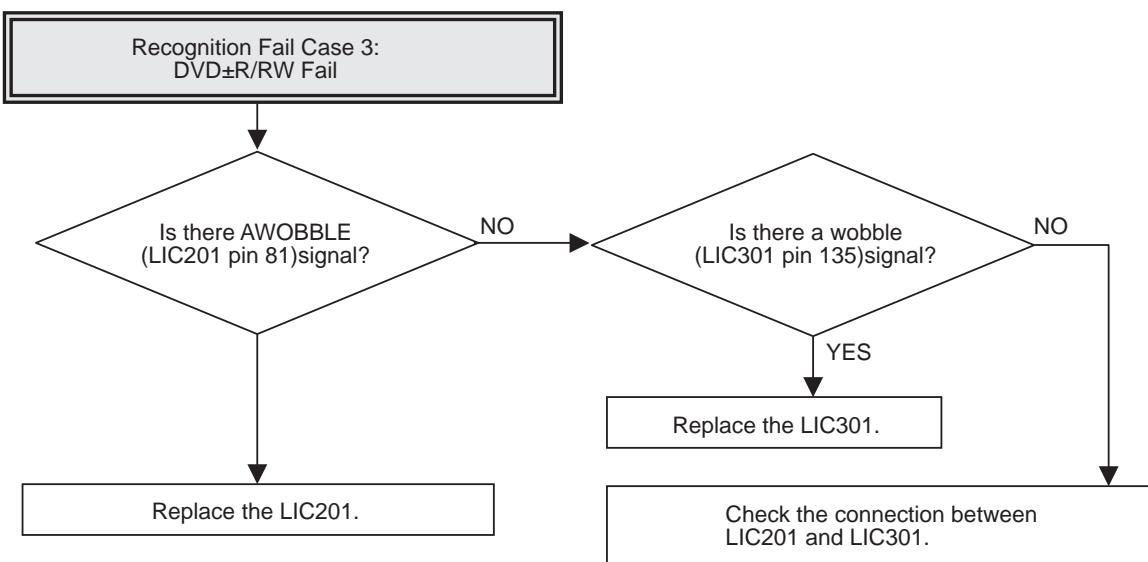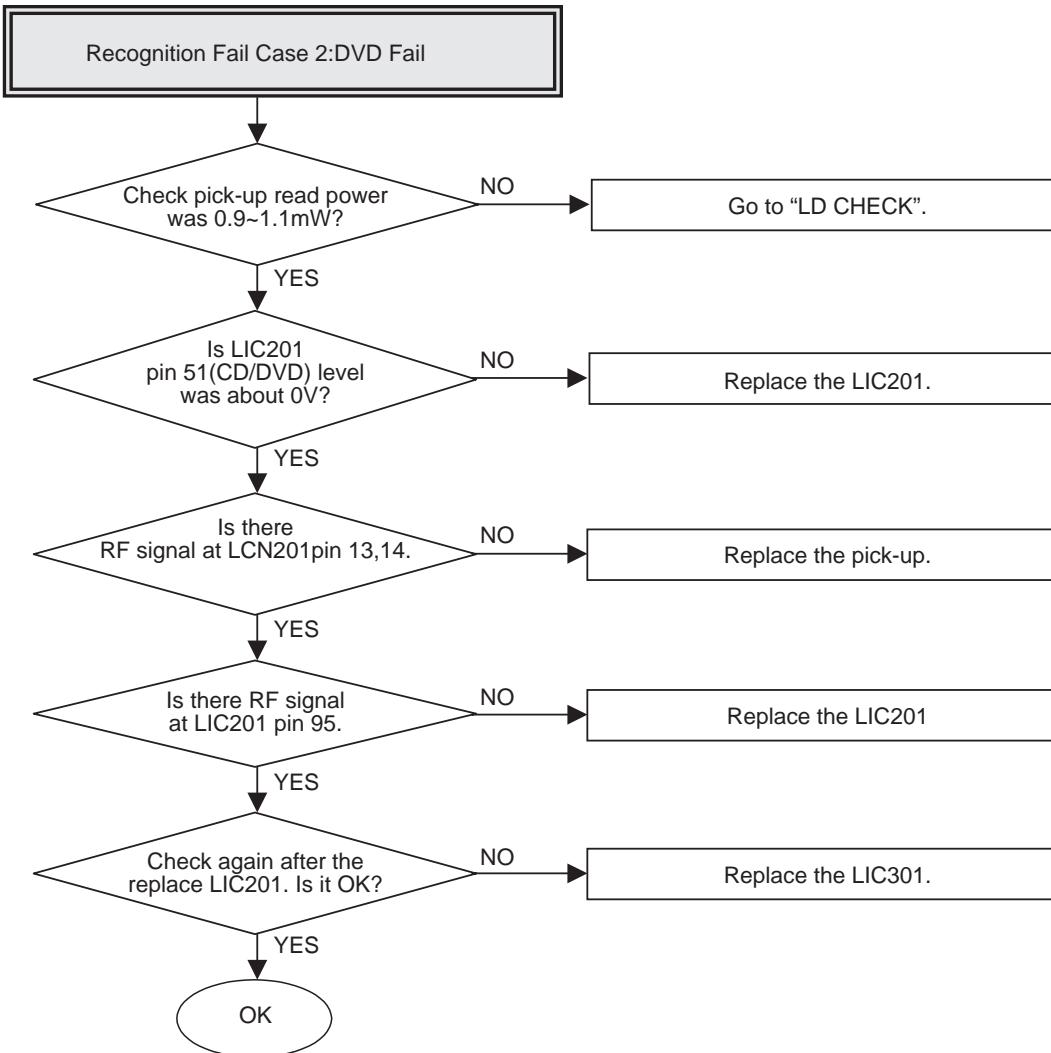


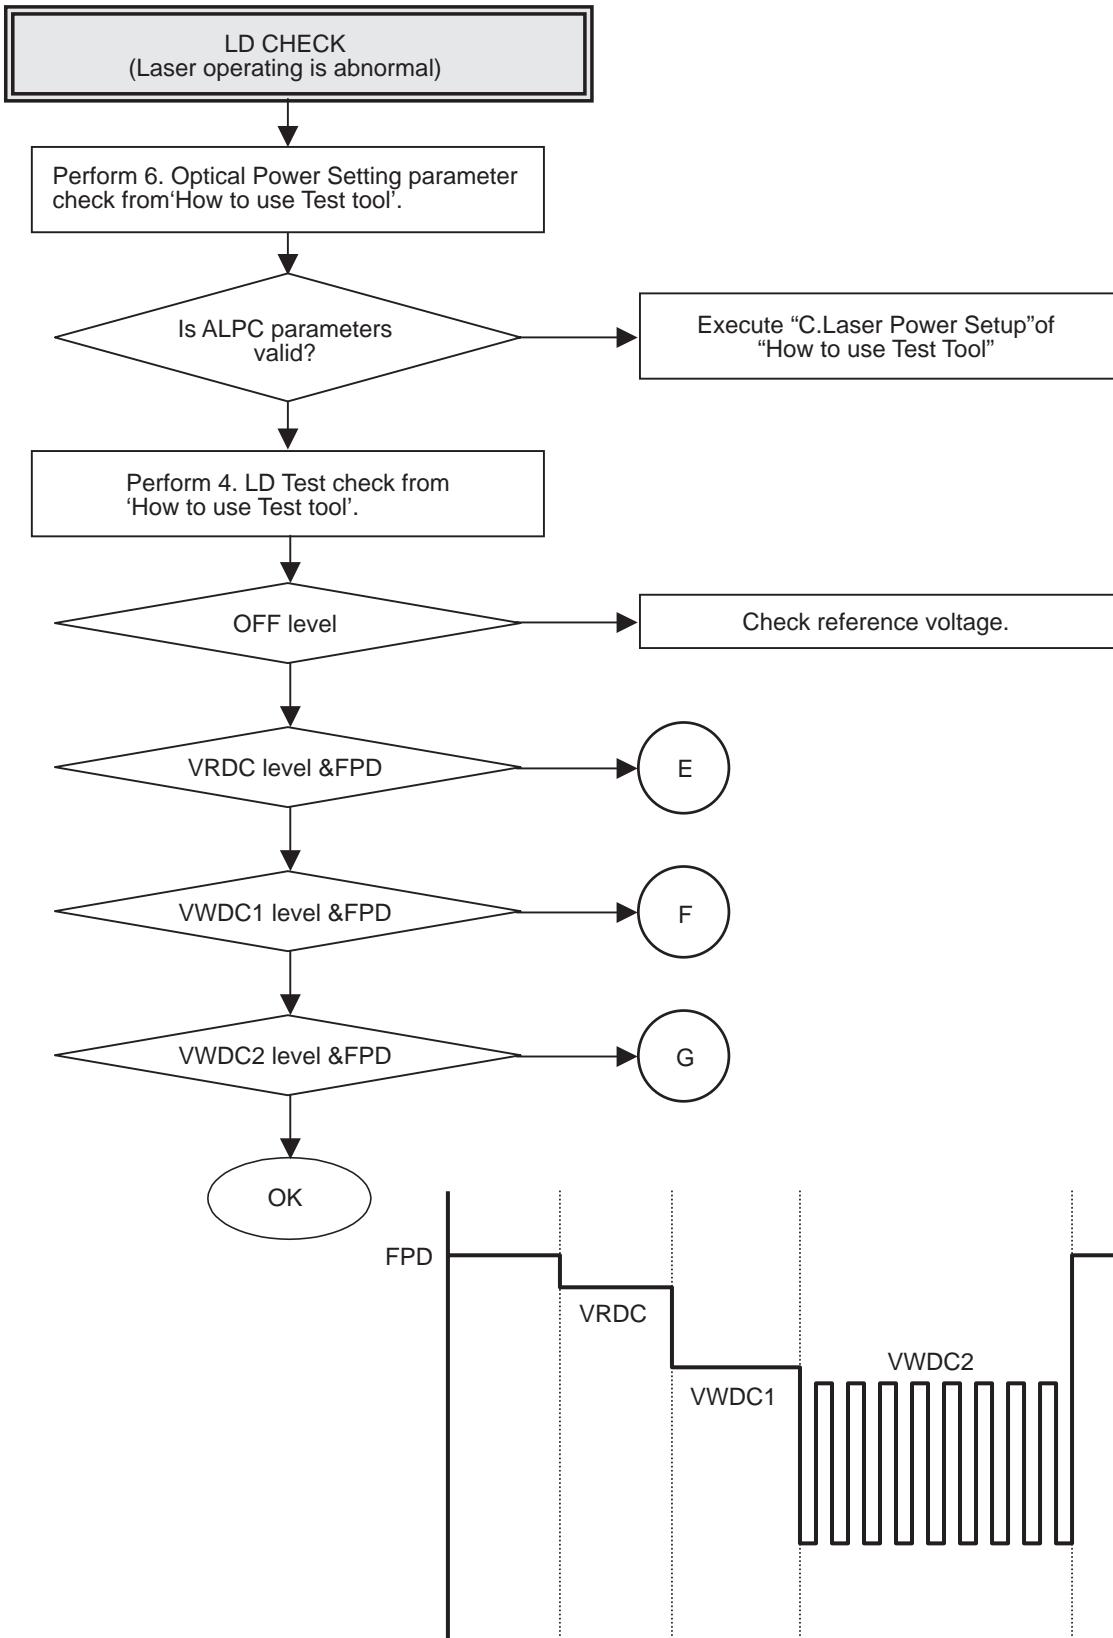

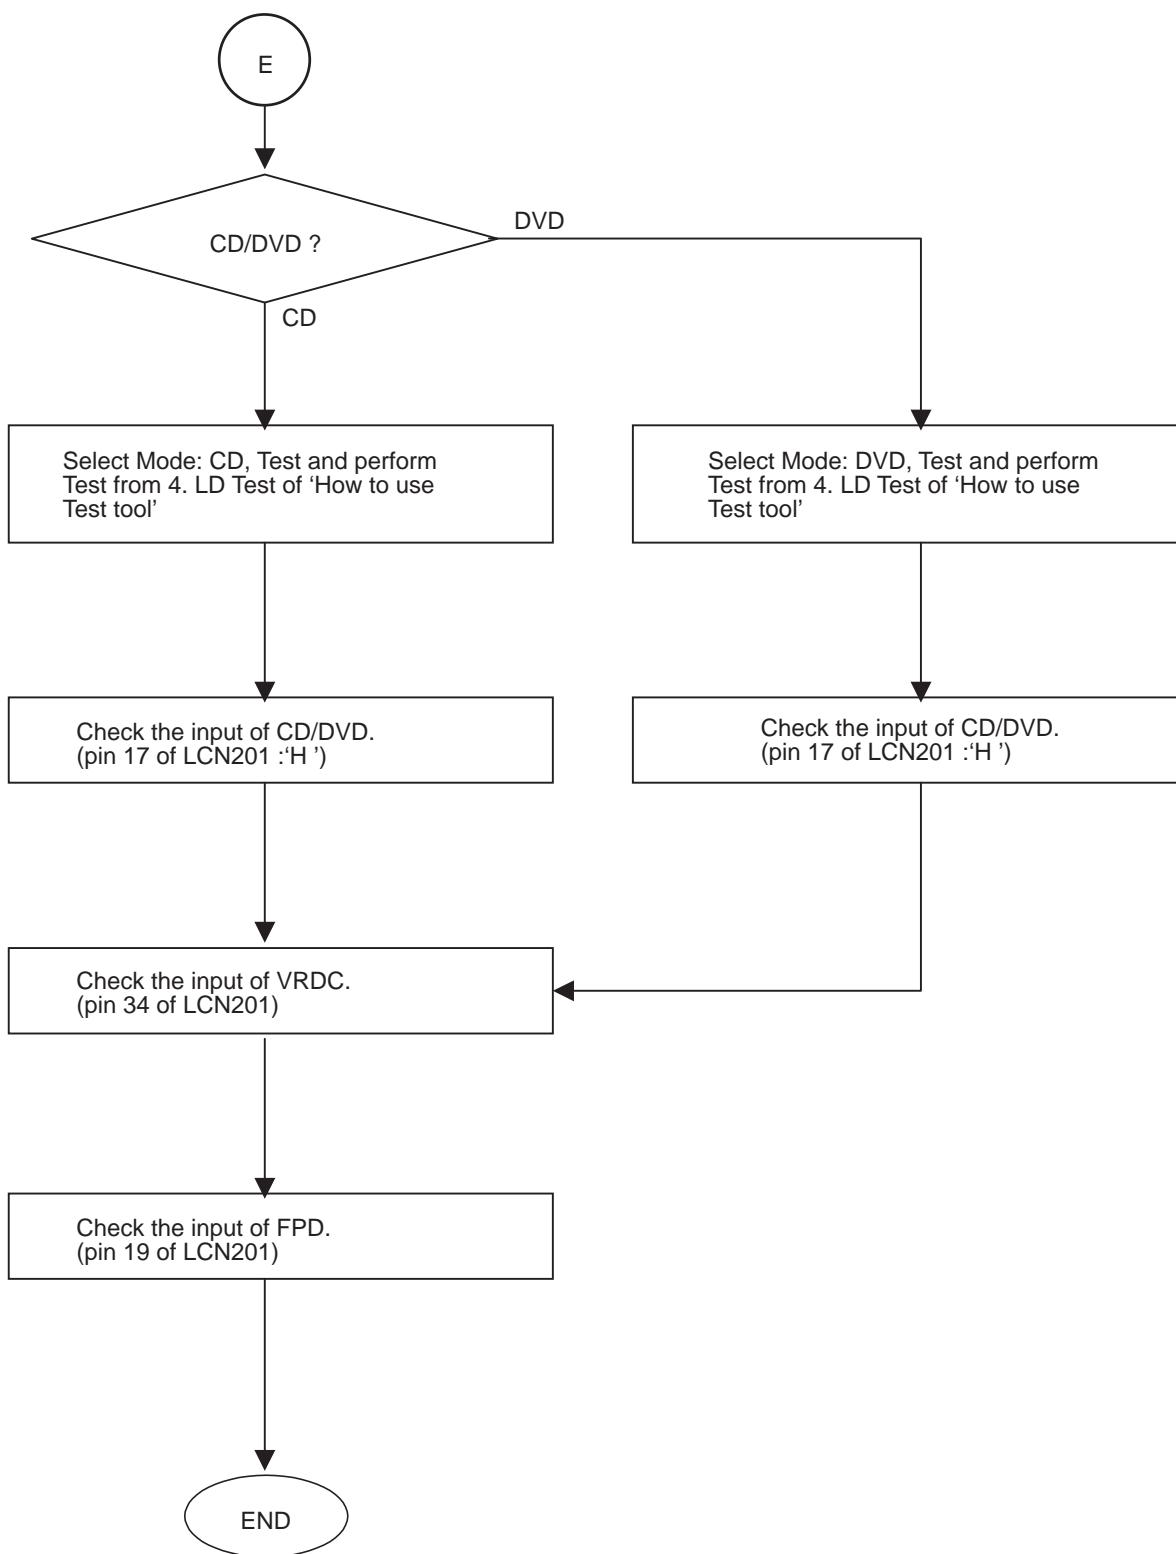

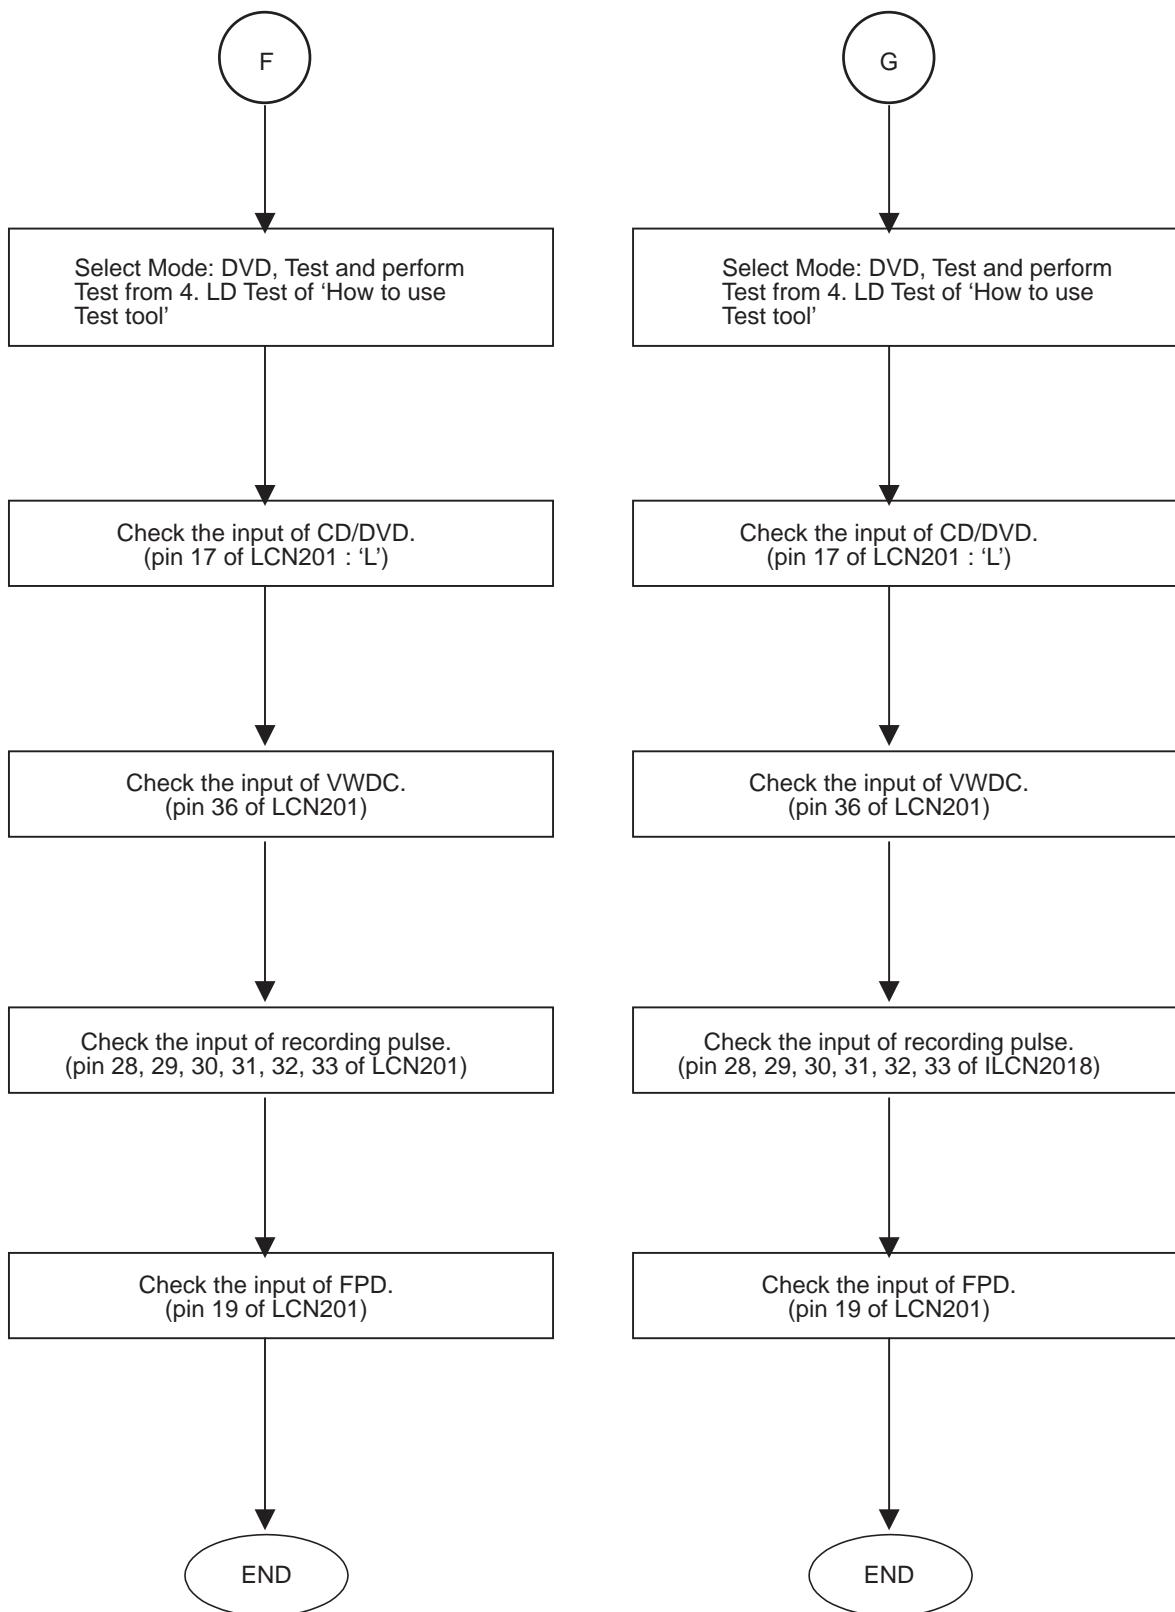


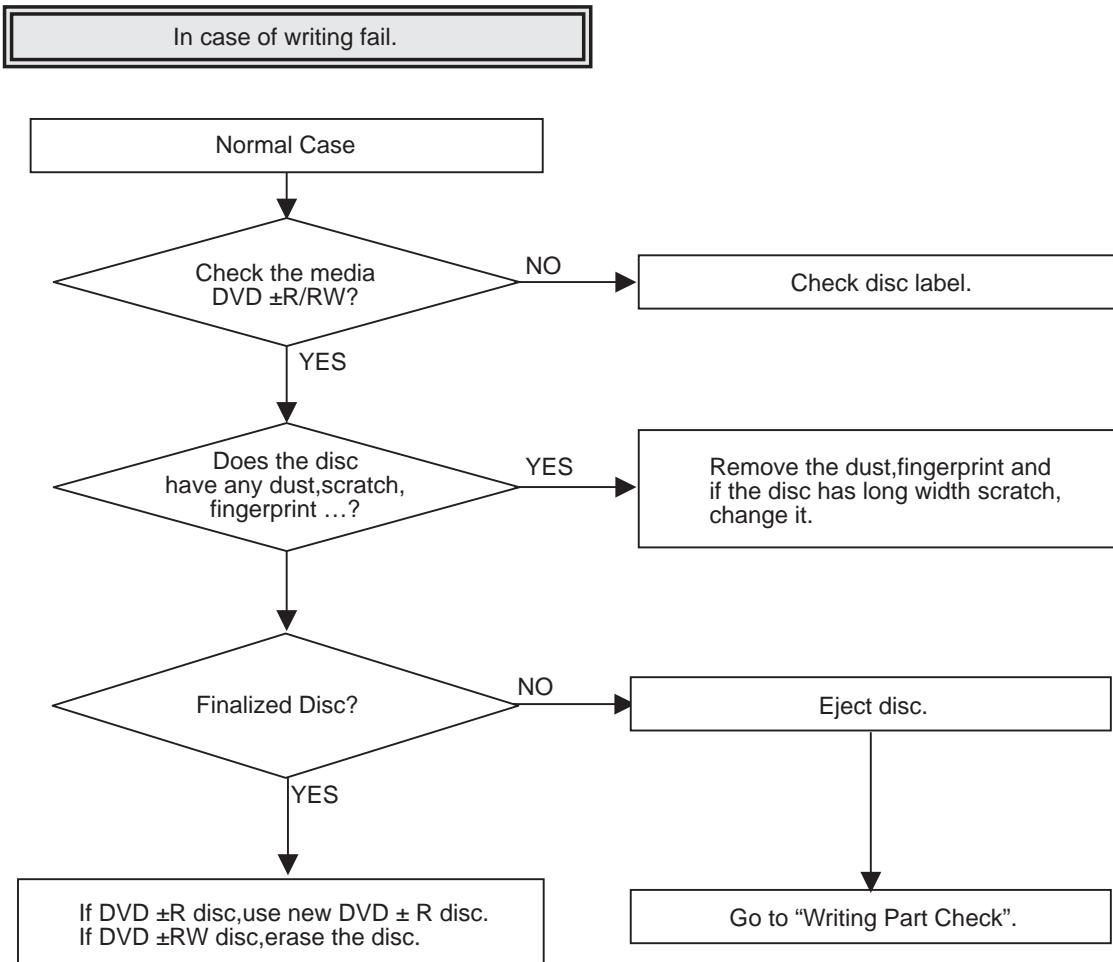

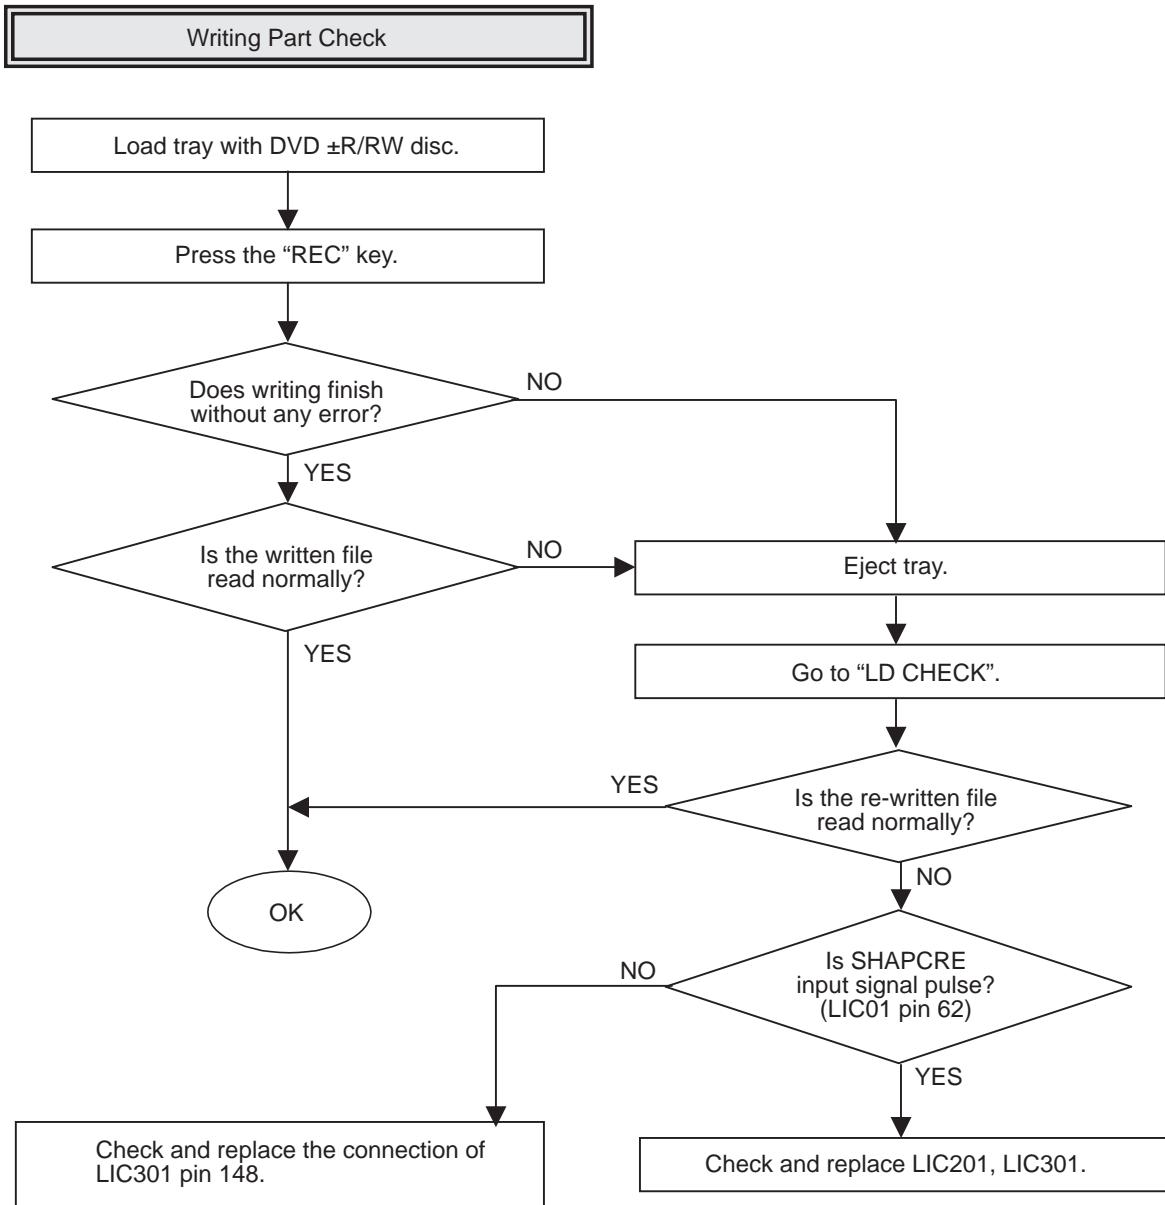


WAVEFORMS


1. POWER & RESET Signal

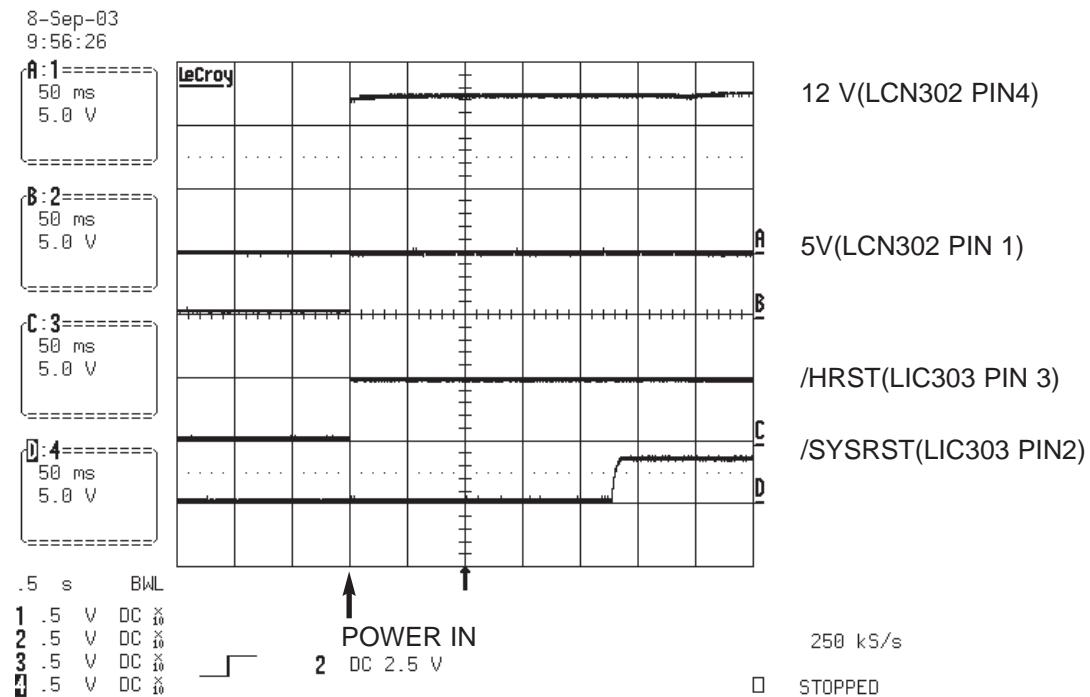


2. Main Clock1 for IC202 (16.9MHz)

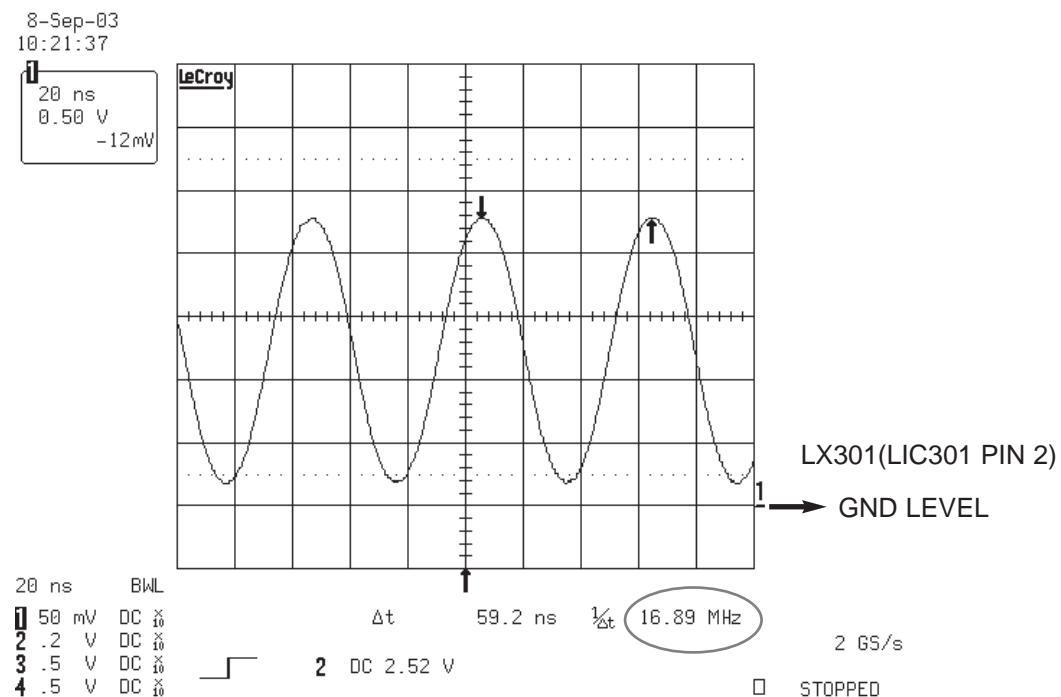


3. SDRAM Clock

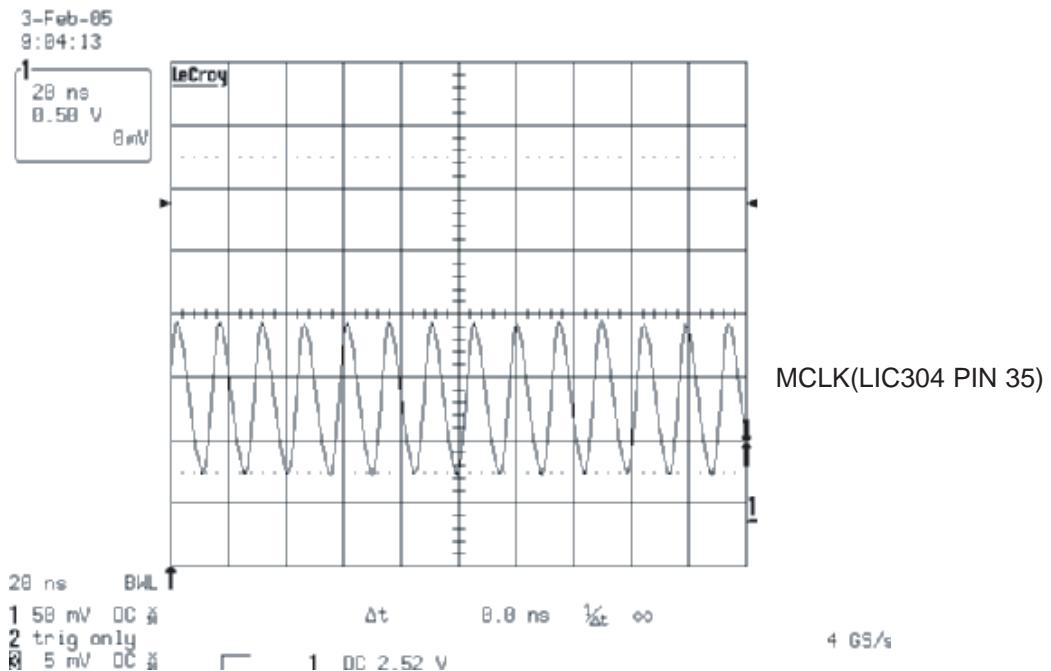


4. TRAY OPEN/CLOSE SIGNAL 1

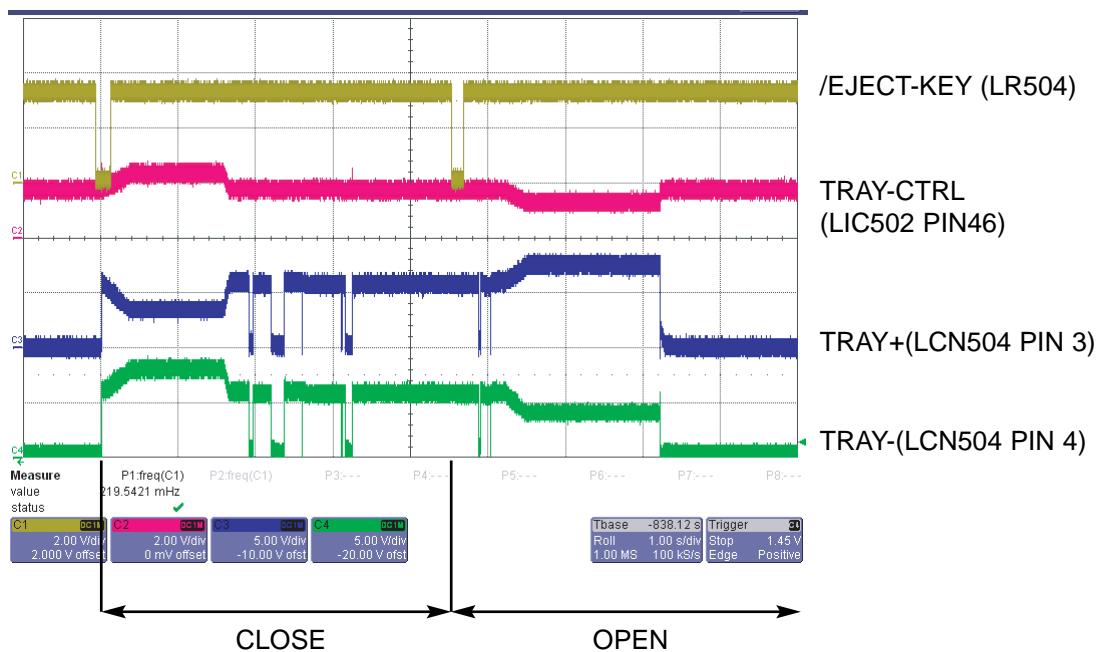


5. TRAY OPEN/CLOSE SIGNAL 2

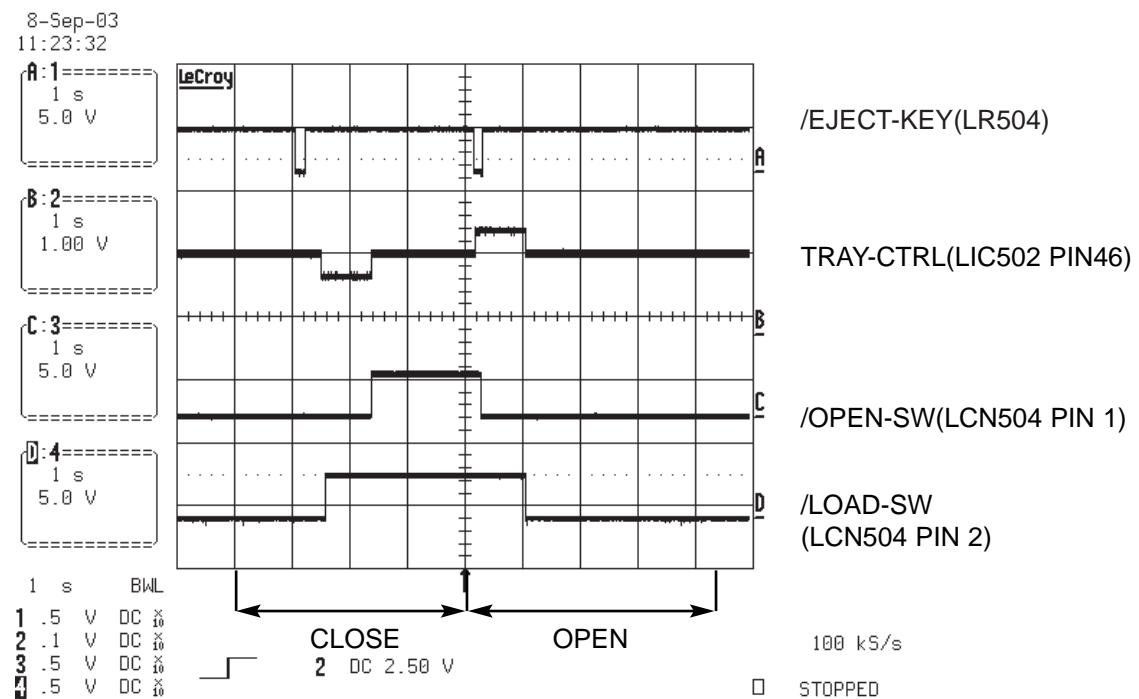


6. SLED MOVE SIGNAL 1

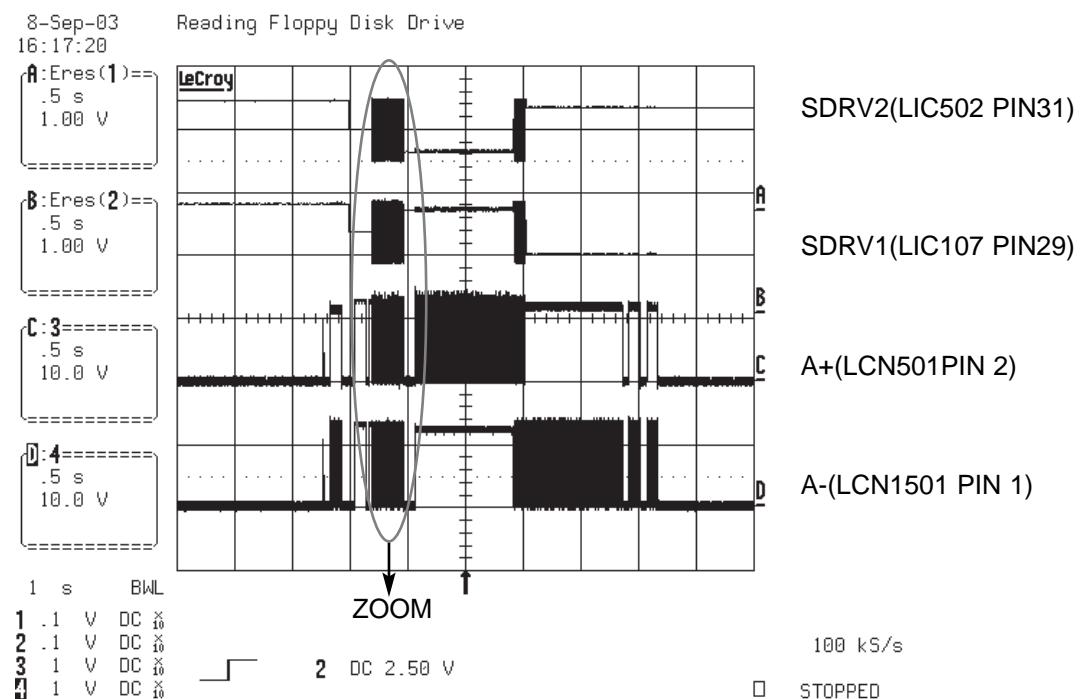


7. SLED MOVE SIGNAL 2

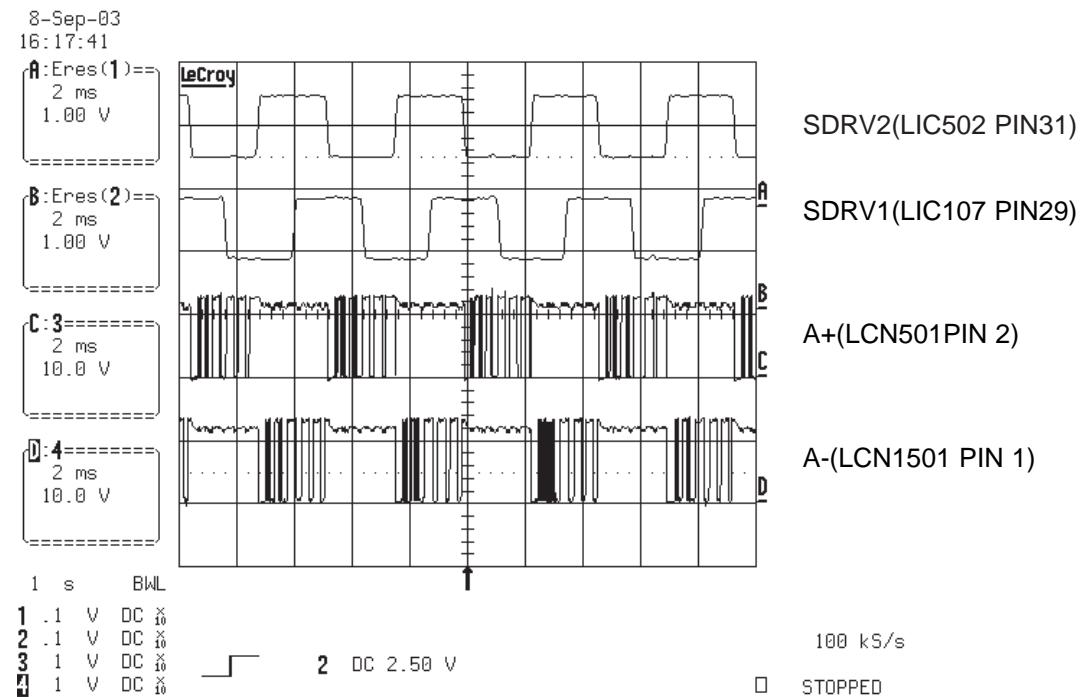


8. FOCUS SEARCH SIGNAL

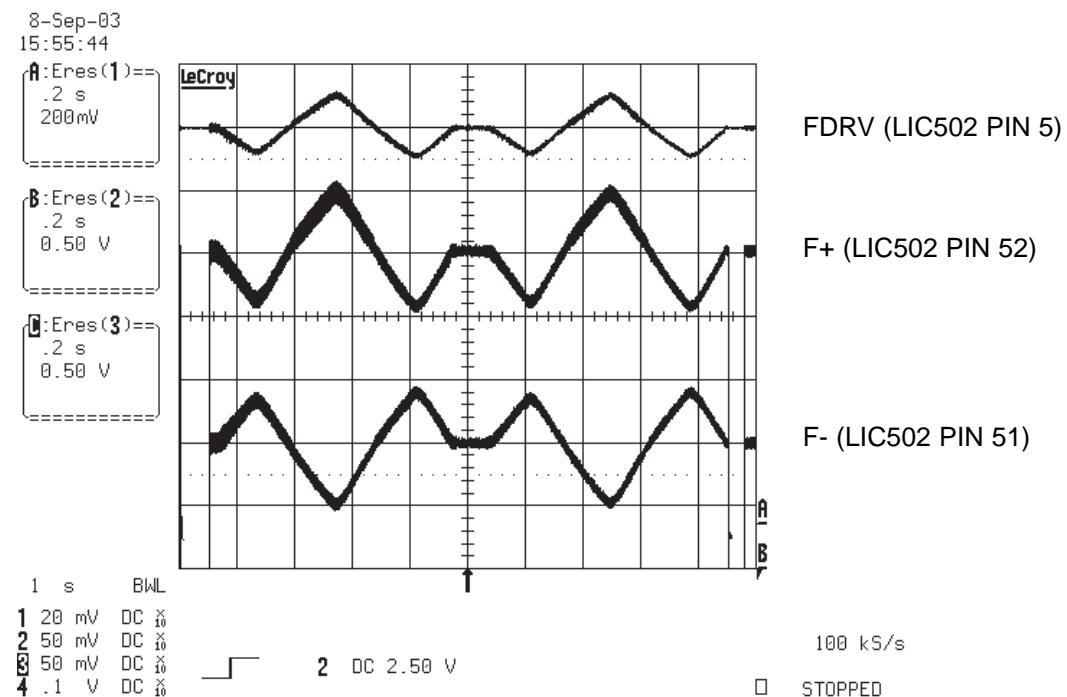

9. LASER TURN ON SIGNAL

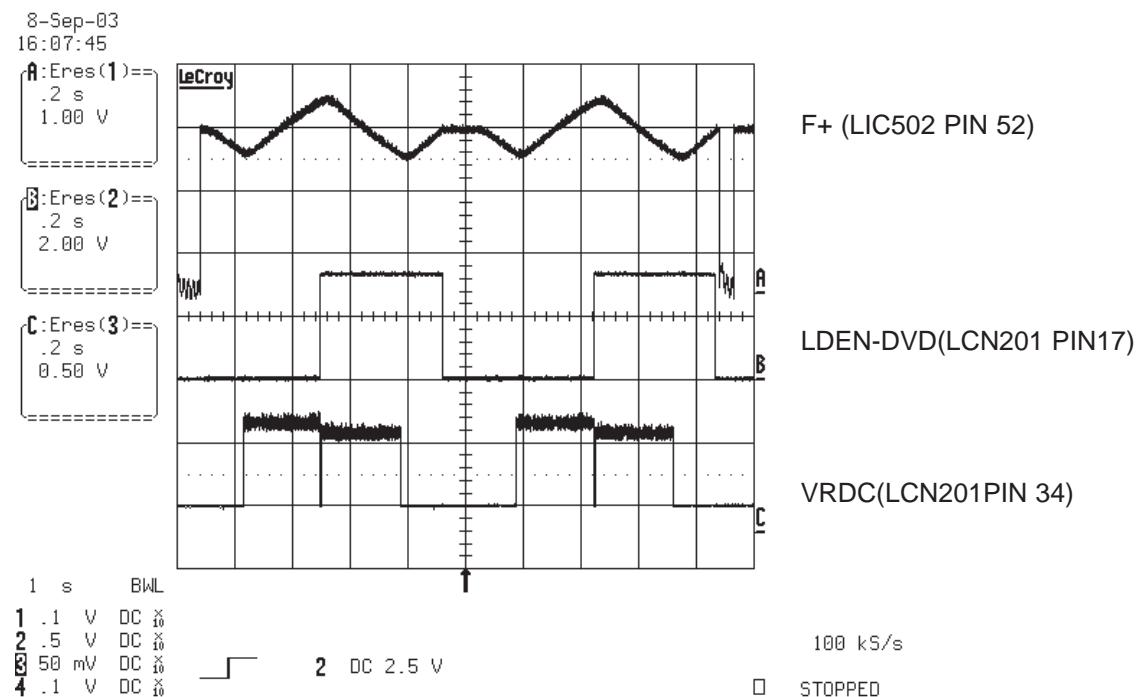

10. DISC TYPE JUDGEMENT WAVEFORM (CD SERIES)

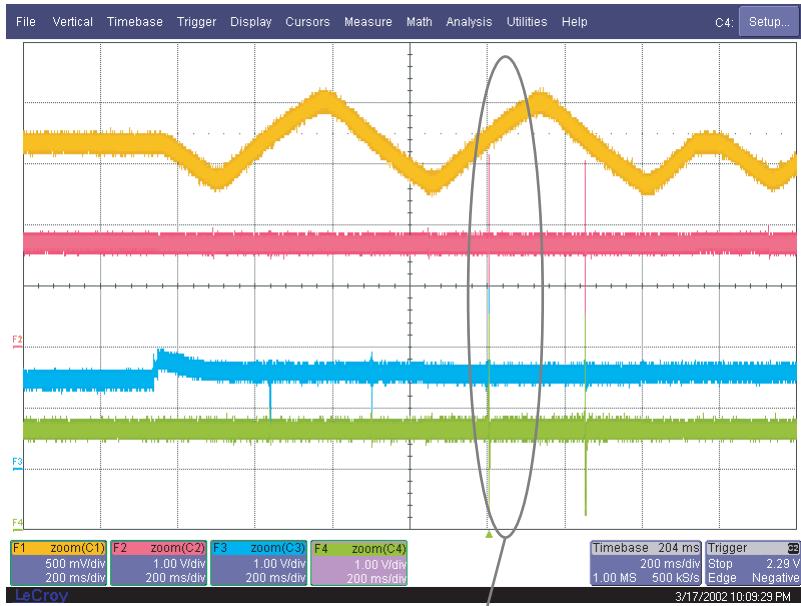


FDRV(LIC502 PIN 5)

FE(LIC201 PIN87)

TE(LIC201 PIN85)

RF(LIC201PIN 113)

11. DISC TYPE JUDGEMENT WAVEFORM (CD&CD-R)

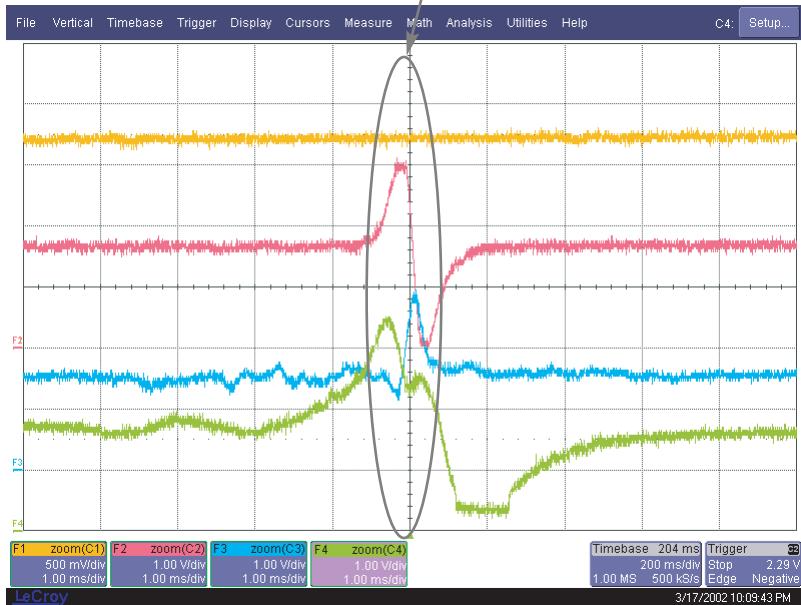


FDRV(LIC502 PIN 5)

FE(LIC201 PIN87)


TE(LIC201 PIN85)

RF(LIC201PIN 113)


12. DISC TYPE JUDGEMENT WAVEFORM (CD-RW)

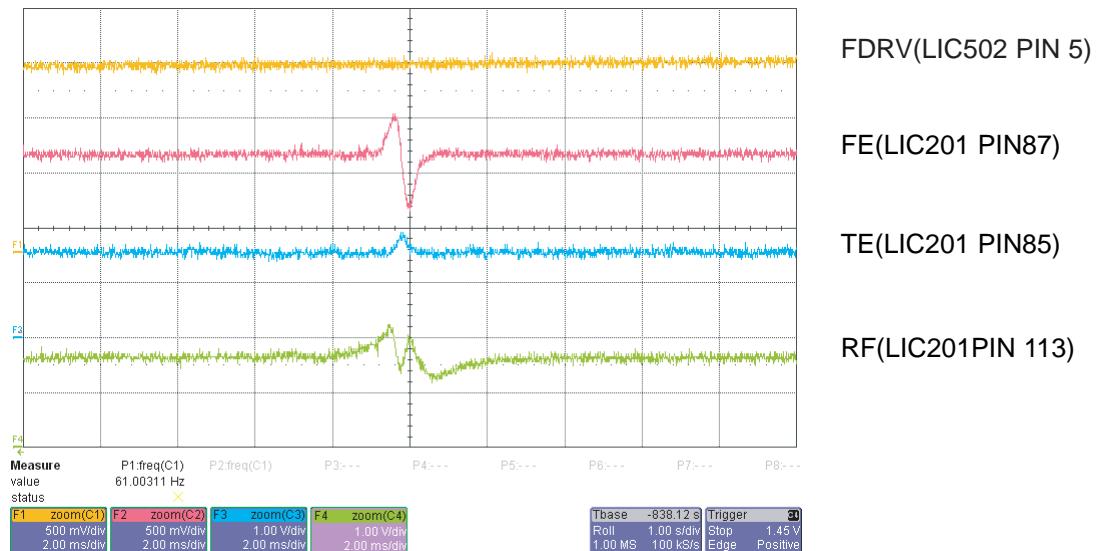

13. DISC TYPE JUDGEMENT WAVEFORM (DVD SERIES)

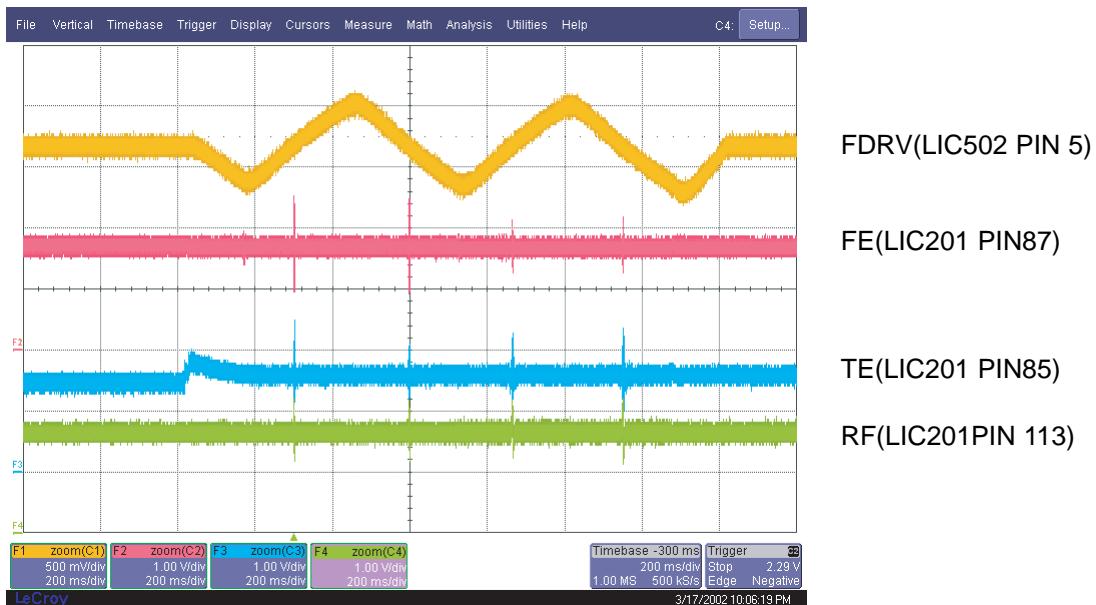

14. DISC TYPE JUDGEMENT WAVEFORM (DVD_SINGLE&R)

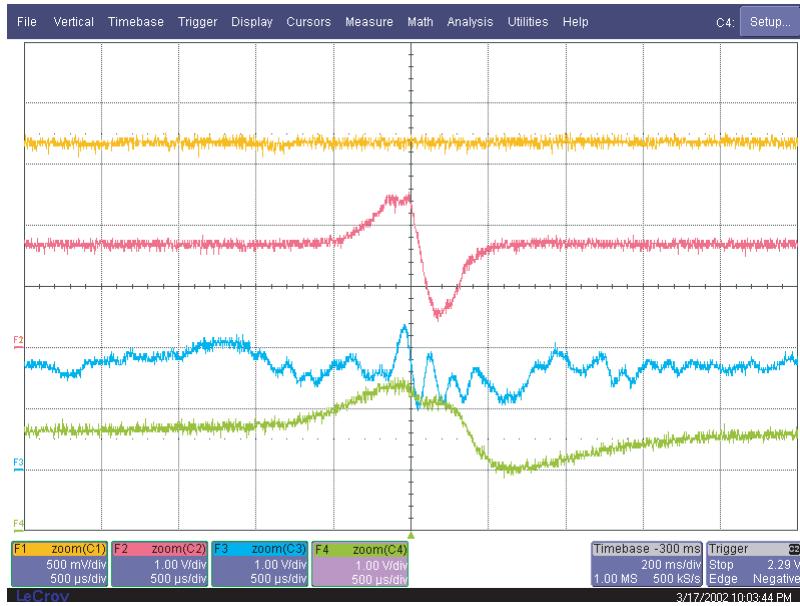


FDRV(LIC502 PIN 5)

FE(LIC201 PIN87)

TE(LIC201 PIN85)

RF(LIC201PIN 113)

15. DISC TYPE JUDGEMENT WAVEFORM (DVD _DUAL)

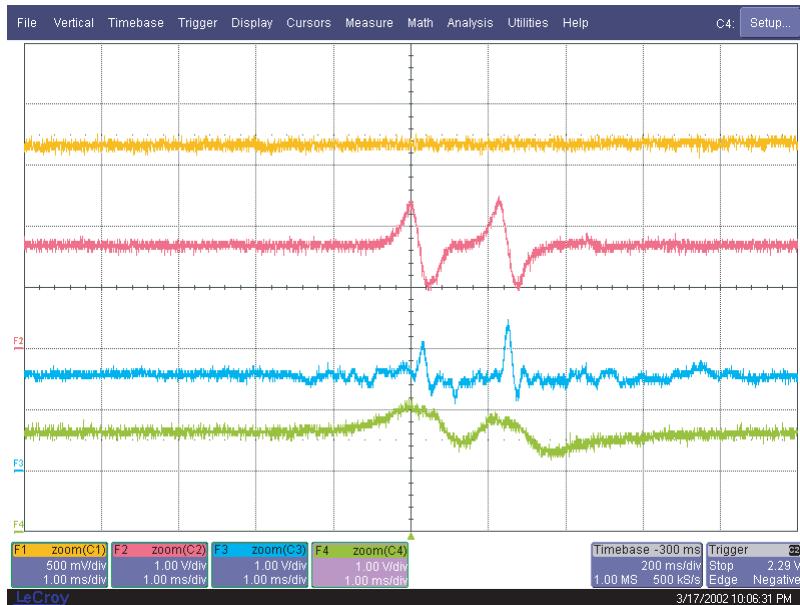


FDRV(LIC502 PIN 5)

FE(LIC201 PIN87)


TE(LIC201 PIN85)

RF(LIC201PIN 113)


16. DISC TYPE JUDGEMENT WAVEFORM (DVDRW)

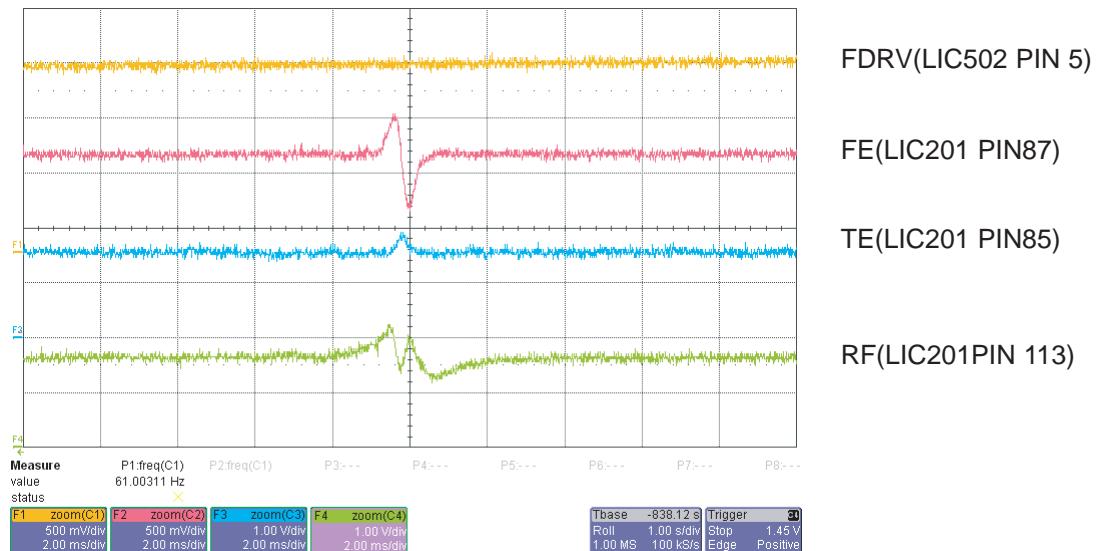


17. SPINDLE WAVEFORM1

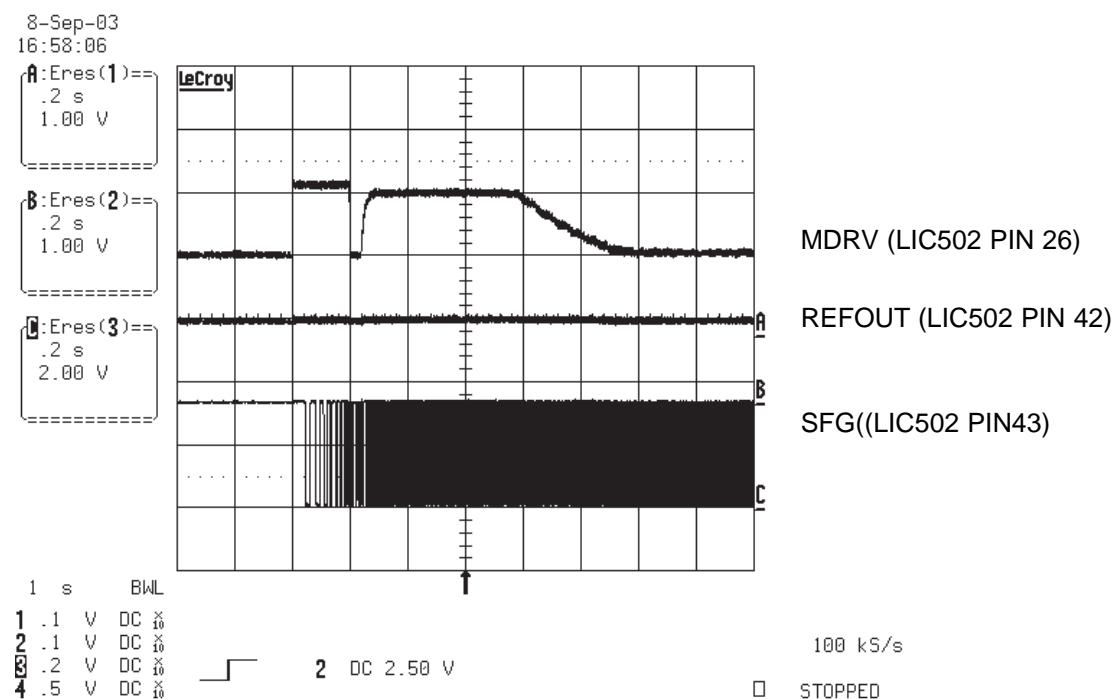


18. SPINDLE WAVEFORM2

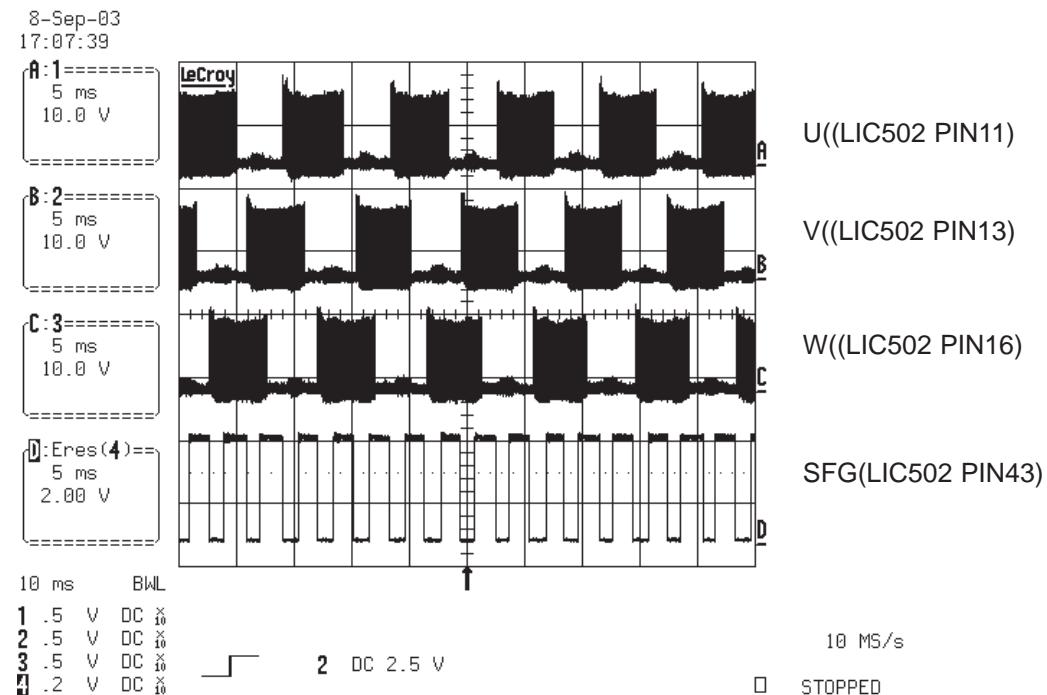


19. FOCUS ON SIGNAL(CD)

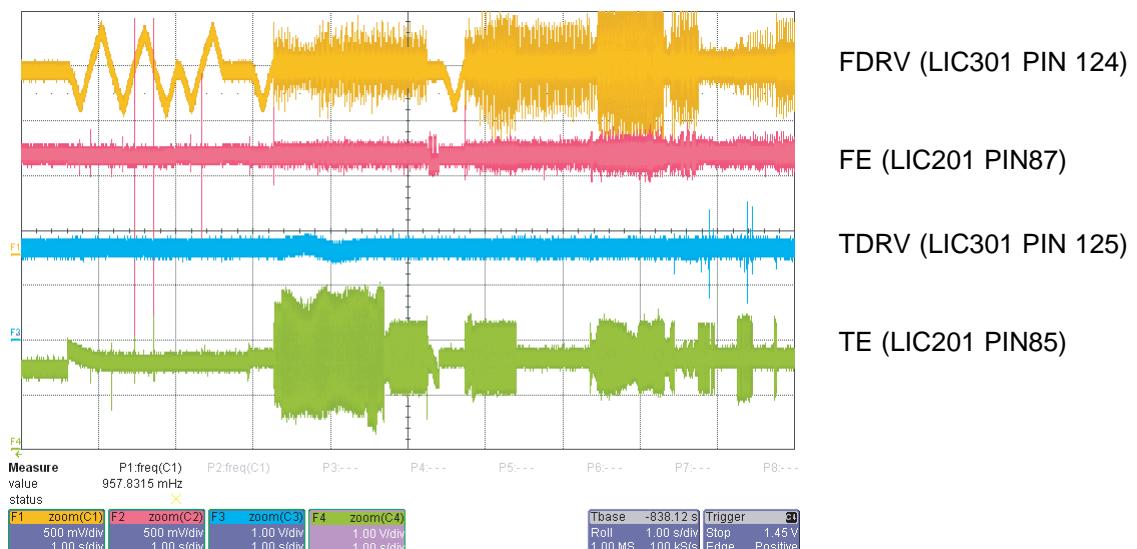


20. FOCUS ON SIGNAL(CD)

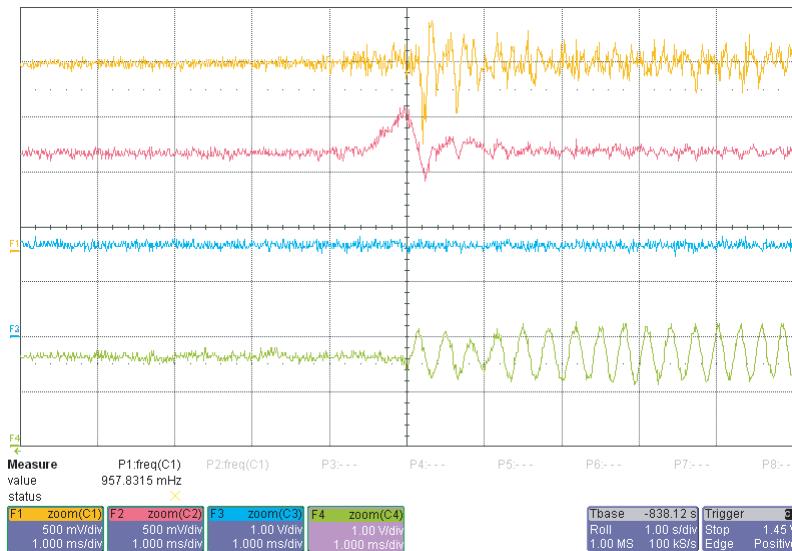

21. FOCUS ON SIGNAL(DVD)

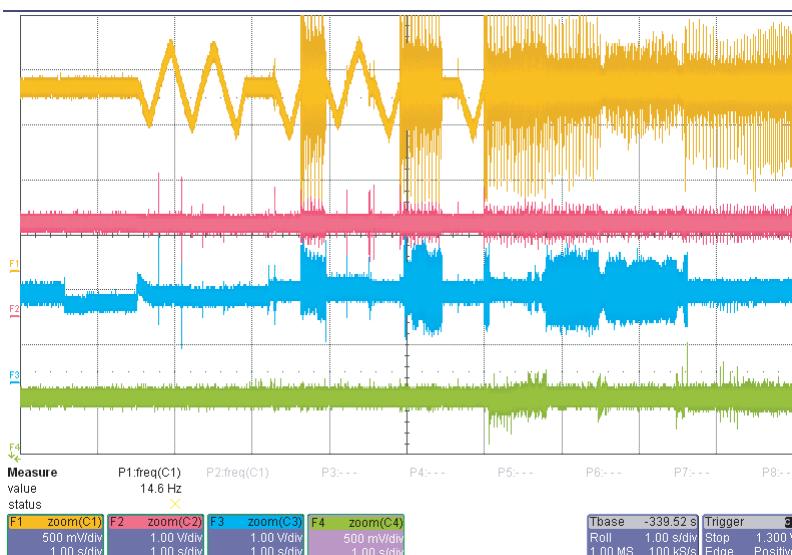

22. FOCUS ON SIGNAL (DVD)

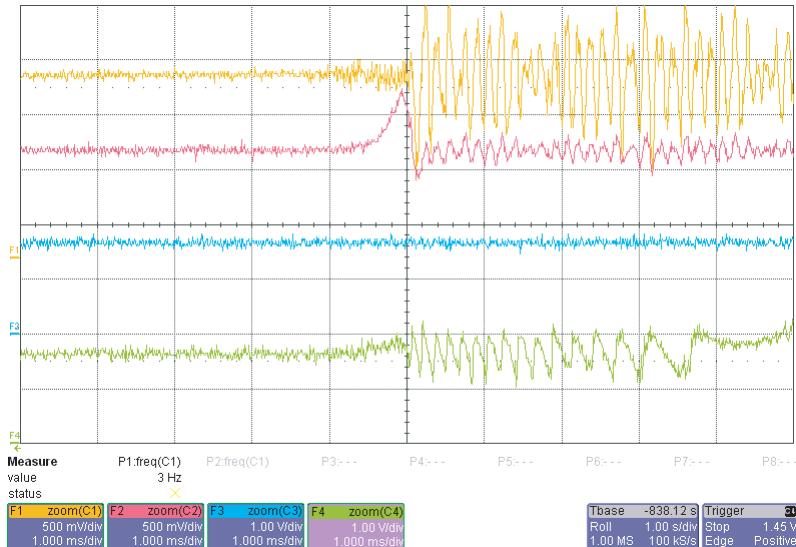


FDRV (LIC301 PIN 124)

FE (LIC201 PIN87)

TDRV (LIC301 PIN 125)

TE (LIC201 PIN85)

23. TRACK OFF SIGNAL(CD)

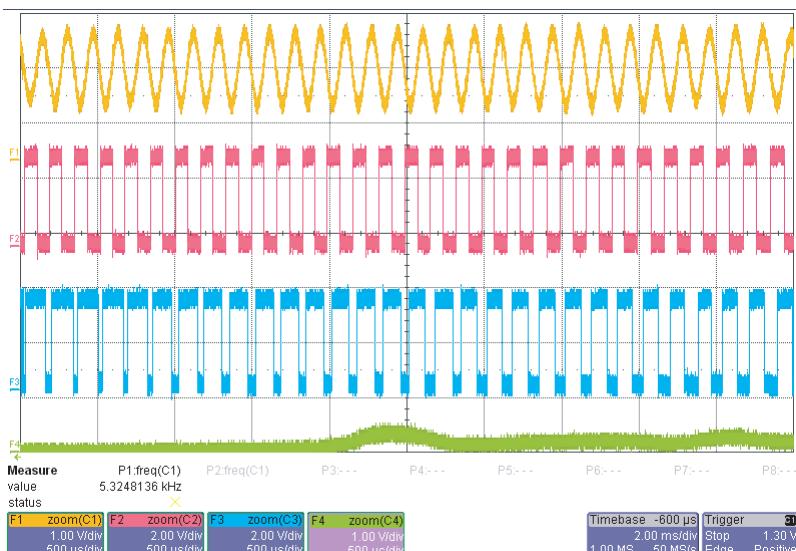


TE (LIC106 PIN85)


TZC(LIC106 PIN74)

MIRRBCA(LIC106 PIN77)


24. TRACK OFF SIGNAL(DVD)

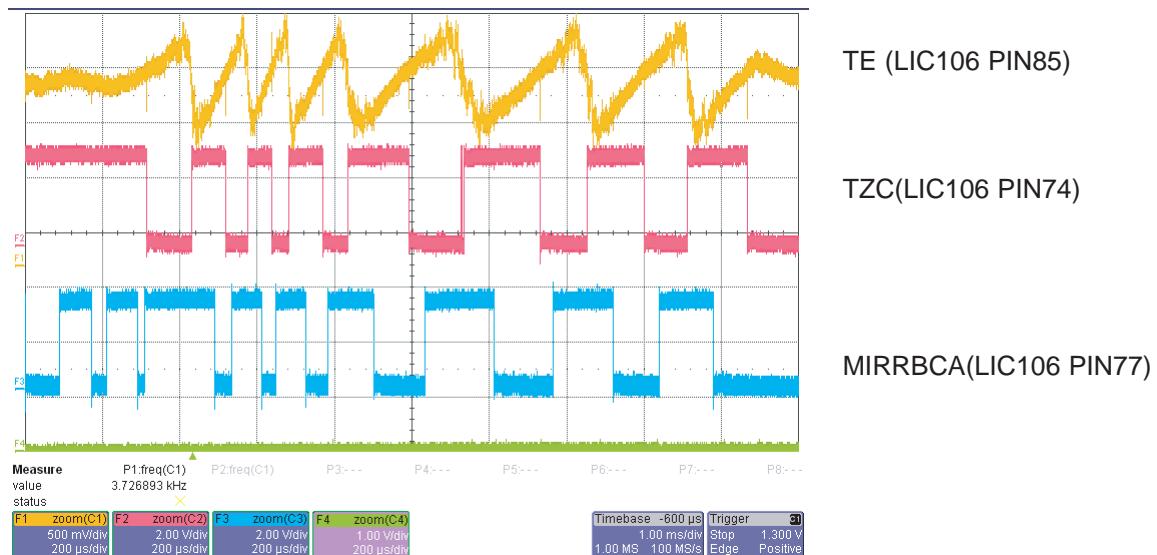


25. Tilt Driver signal(Disc reading)

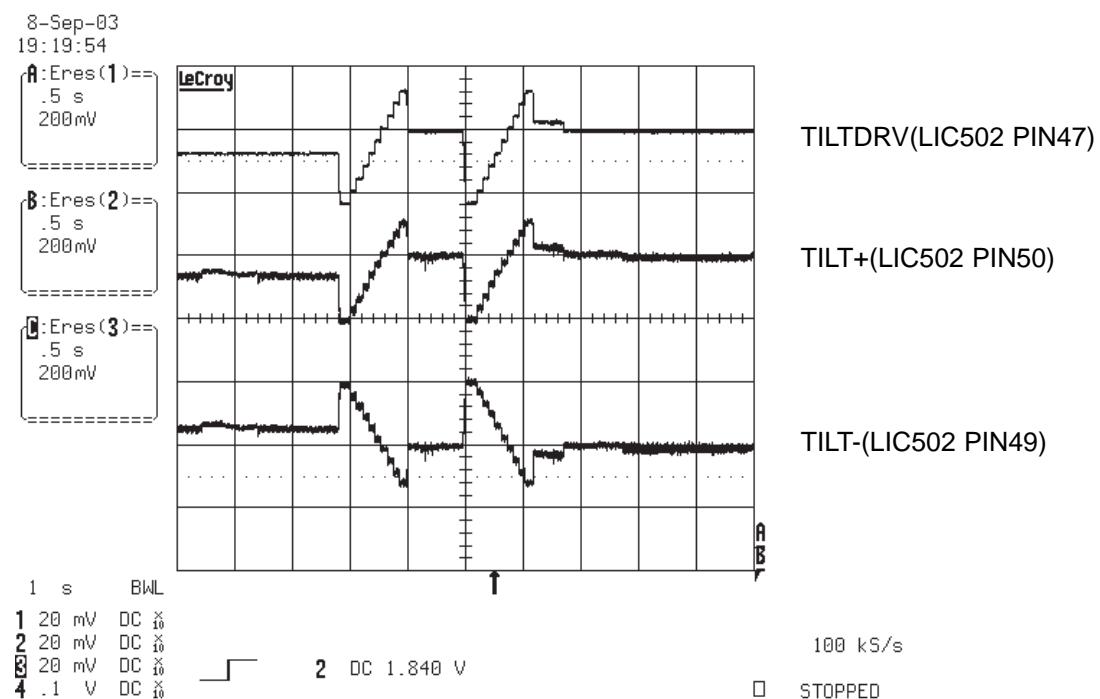


26. RF WAVEFORM(DVD)

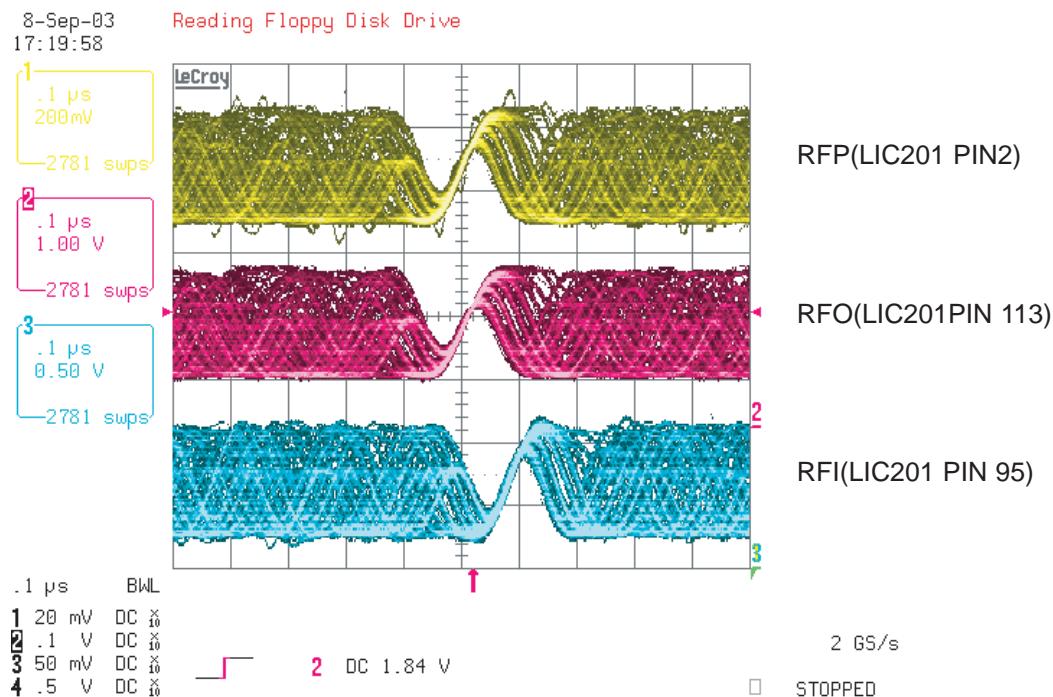

27. RF WAVEFORM(CD)

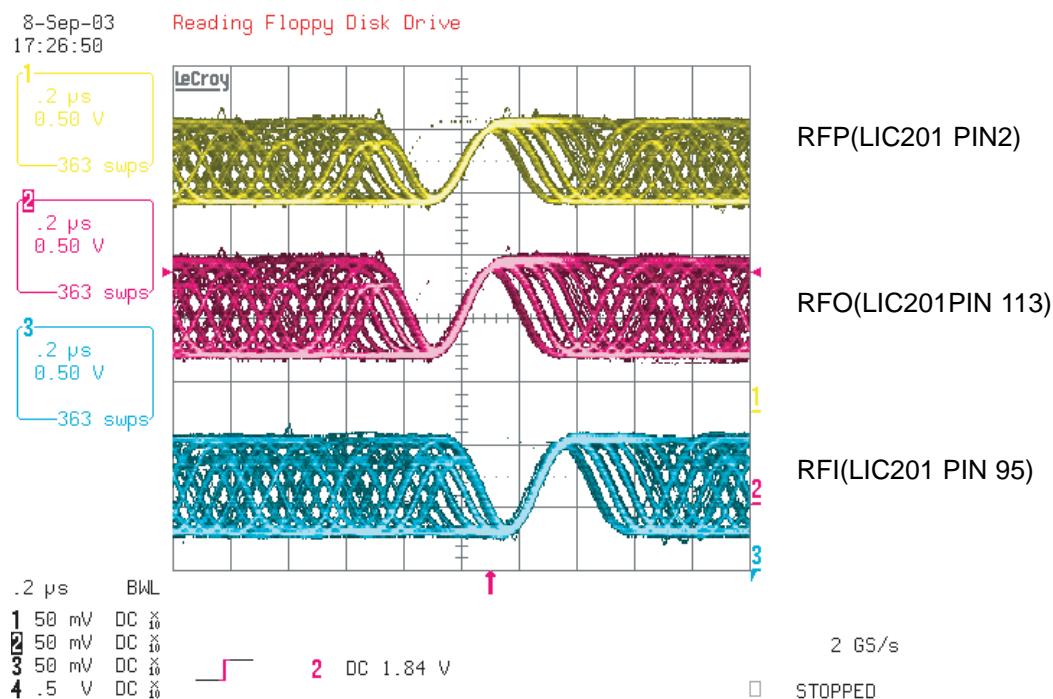


28. WOBBLE(DVD-R/RW)_READING

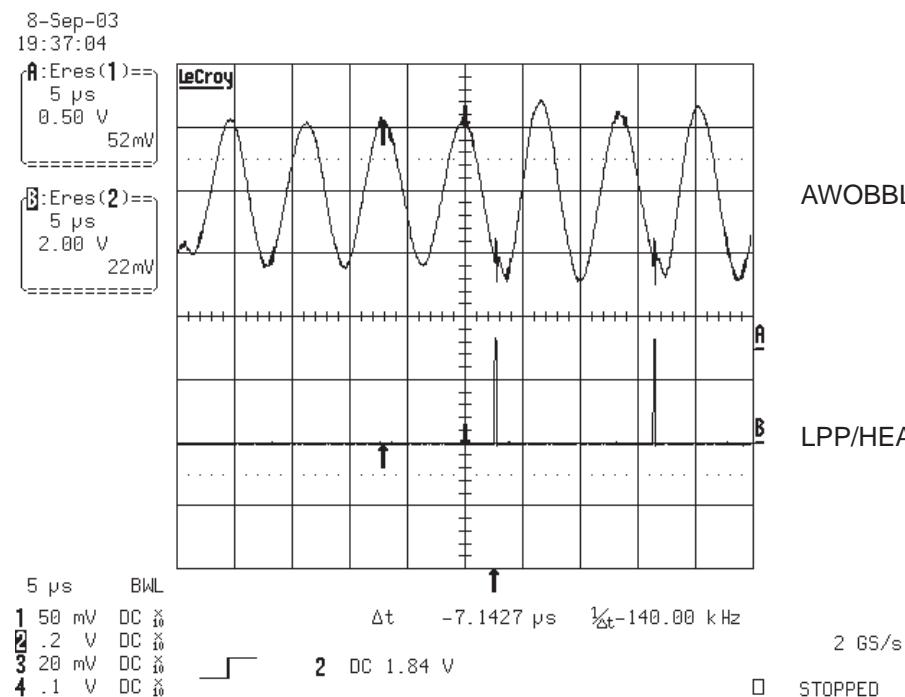

AWOBBLE(LIC201 PIN81)

LPP/HEAD(LIC201 PIN 73)


29. WOBBLE(DVD+R/RW)_READING& WRITING => X1 SPEED

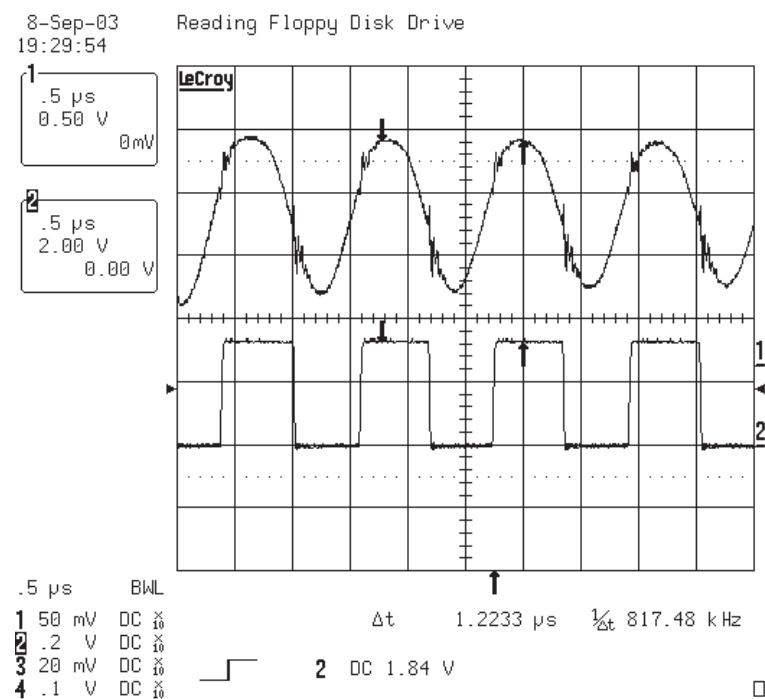

AWOBBLE(LIC201 PIN81)

LPP/HEAD(LIC201PIN 73)


30. LD Enable(DVD)

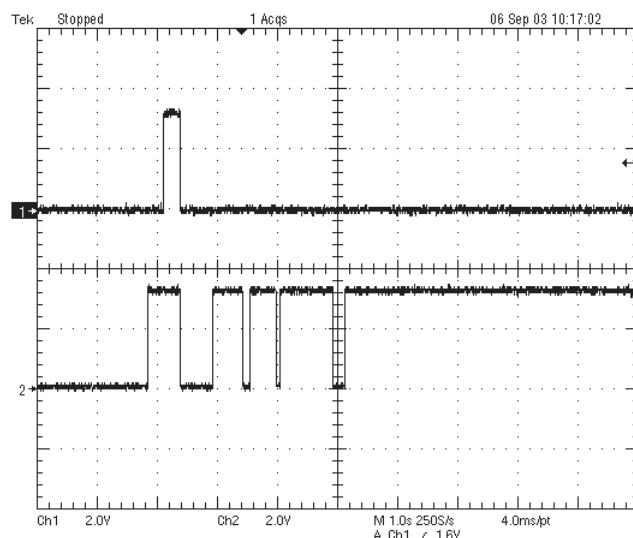

CD/DVD(LCN201 PIN 17)

LDEN(LCN PIN 38)


31. LD Enable(CD)

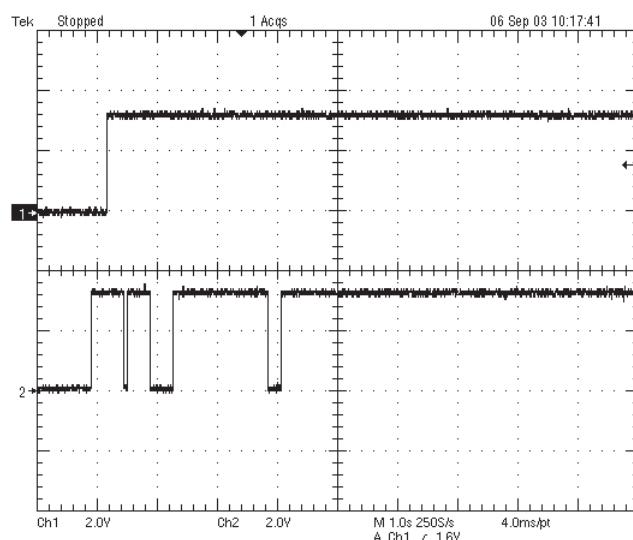

CD/DVD(LCN201 PIN 17)

LDEN(LCN102 PIN 38)

32. Laser Power(reading) _ DVD+RW

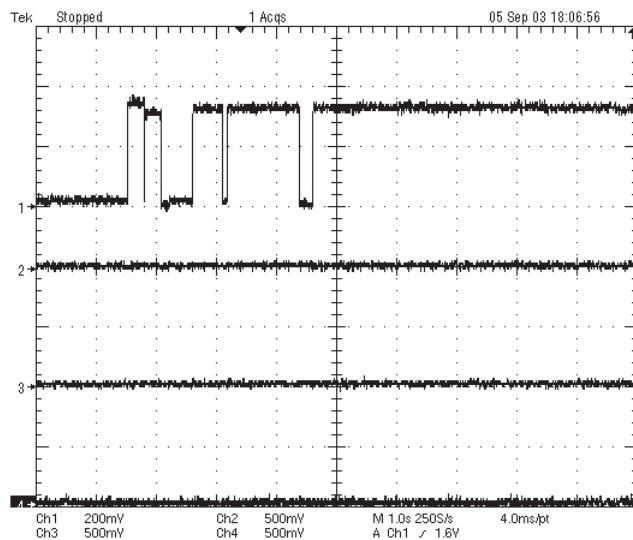


VRDC(LCN201 PIN 34)

VWDC(LCN201 PIN 36)

VWDC2(LCN201 PIN 35)

OPCTR(LIC301 PIN 151)

33. Laser Power(Erase) _ DVD+RW

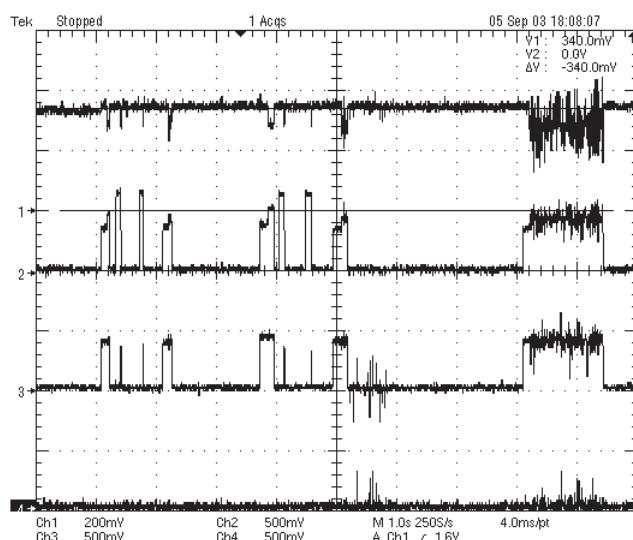


VRDC(LCN201 PIN 34)

VWDC(LCN201 PIN 36)

VWDC2(LCN201 PIN 35)

OPCTR(LIC301 PIN 151)

34. Laser Power(Writing) _ initial state

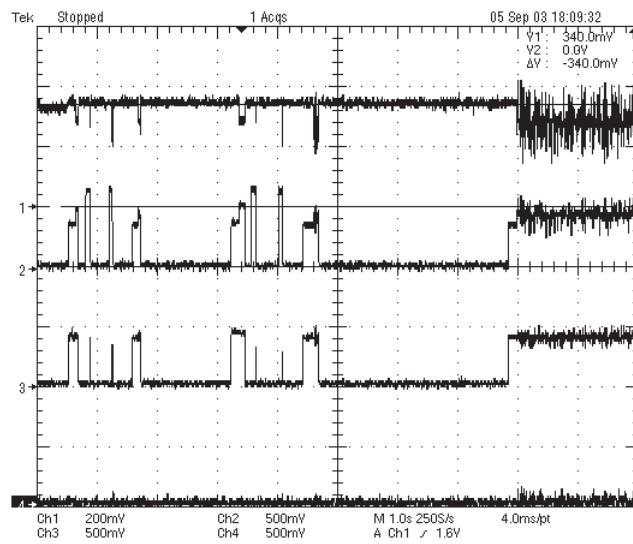


VRDC(LCN201 PIN 34)

VWDC(LCN201 PIN 36)

VWDC2(LCN102 PIN 35)

OPCTR(G(LIC301 PIN 151)

35.Laser Power(Writing)_Processing

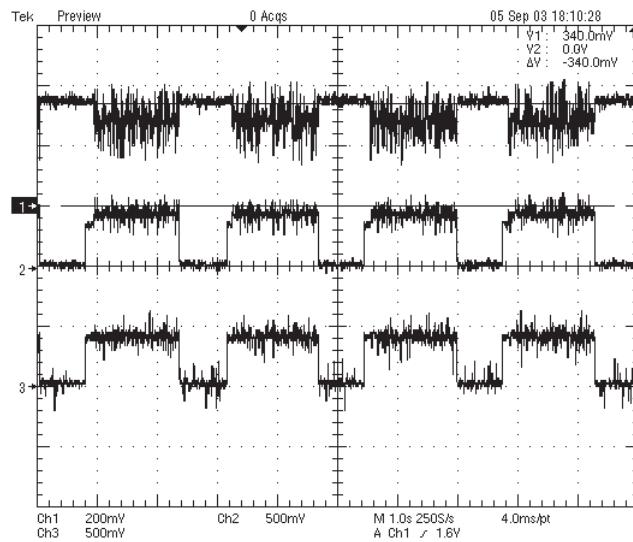

VRDC(LCN201 PIN 34)


VWDC(LCN201 PIN 36)

VWDC2(LCN201 PIN 35)


The difference of DVD-R/RW, DVD+R/RW discs and DVD-ROM

1. Recording Layer

- DVD-ROM (Read Only Disc)

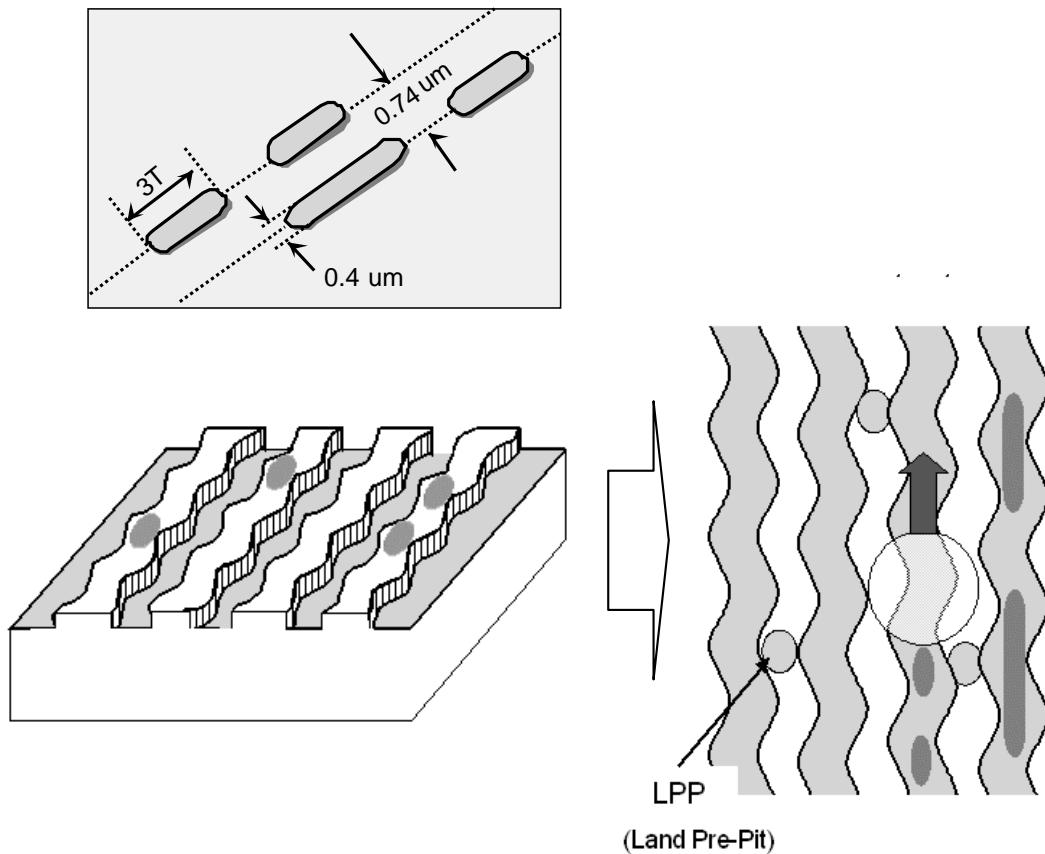

- DVD+R/RW Disc

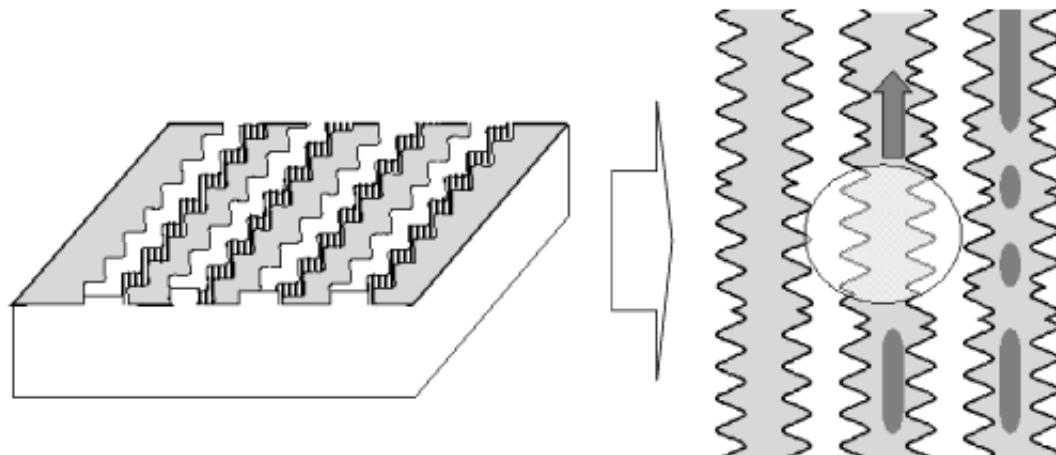


2. Disc Specification

	DVD-ROM		DVD-R	DVD-RW	DVD+R	DVD+RW
	Single-Layer	Dual-Layer				
Media Type	Read Only	Read Only	Dye	Phase change	Dye	Phase change
User data capacity	4.7GB	8.54GB	4.7GB	4.7GB	4.7GB	4.7GB
Wavelength	650nm	650nm	650nm	650nm	650nm	650nm
Reflectivity	45~85%	18~30%	45~85%	18~30%	45~85%	18~30%
Track pitch	0.74μm	0.74μm	0.74μm	0.74μm	0.74μm	0.74μm
Minimum pit length	0.4μm	0.4μm	0.4μm	0.4μm	0.4μm	0.4μm
Modulation	>0.6	>0.6	>0.6	>0.6	>0.6	>0.6
Channel bit-rate	26.16MHz	26.16MHz	26.16MHz	26.16MHz	26.16MHz	26.16MHz
Wobble Frequency	–	–	140KHz	140KHz	817.4KHz	817.4KHz
Addressing	26.16MHz	26.16MHz	Wobble & LPP	Wobble & LPP	Wobble(ADIP)	Wobble(ADIP)
Read Power (mW)					0.7 ± 0.1	0.7 ± 0.1
Write Power (mW)	–					
Jitter	<8%	<8%	<8%	<8%	<9%	<9%


3. Disc Materials

1) DVD-ROM

< Single Layer >

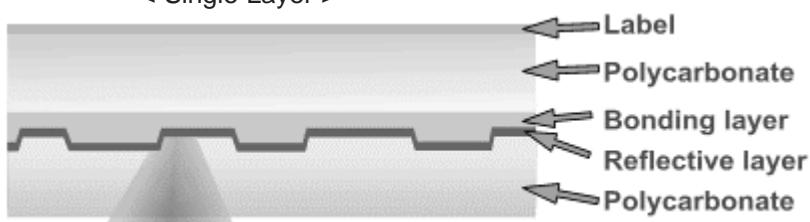


< Dual Layer >

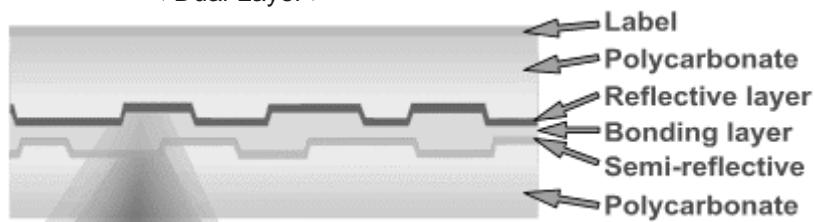

2) Recording format using organic dye material (DVD-R / DVD+R)

The format that records data through the creation of recorded marks by changing the organic dye material with a laser beam.

⑥ Disc structure

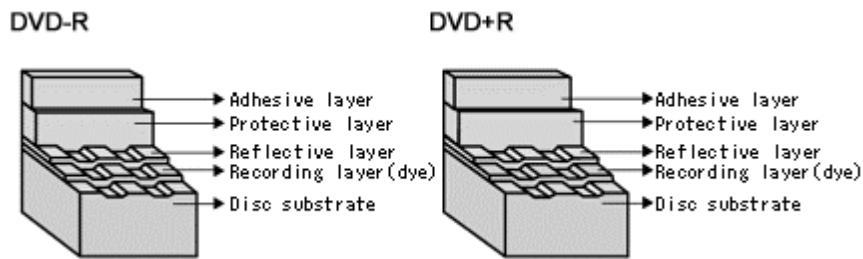


⑥ Recording principles

[Recording]

Recording is done by changing the organic dye layer and the substrate with a laser. When a strong laser is applied to a disc, the temperature of the organic dye material goes up, the dye is decomposed and the substrate changes at the same time. At this time, a durable bit is created as is the case with a CD-ROM.

[Playback]

Signals are read with the differences of the reflection of a laser from pits.

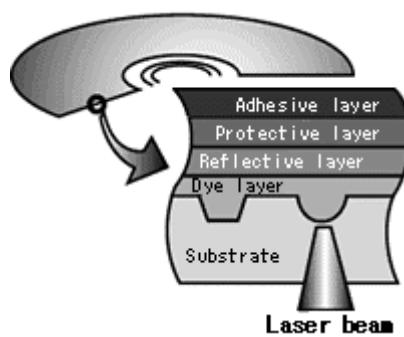


3) Recording format using phase-change recording material (DVD-RW / DVD+RW)

- Data is recorded by changing the recording layer from the amorphous status to the crystalline status, and played back by reading the difference of the reflection coefficient.

Amorphous: Non-crystalline.

G Disc structure

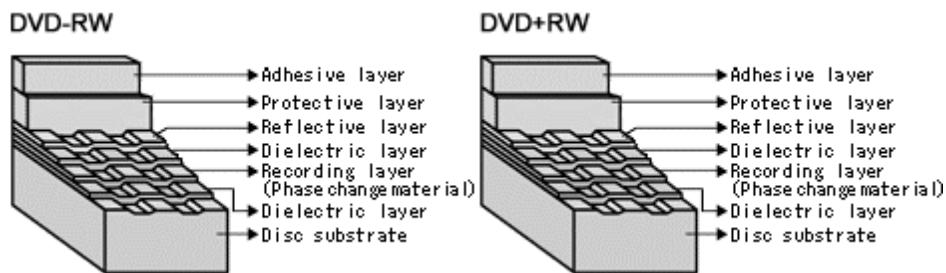



G Recording principles

[Recording]

When a high-power laser is applied to the recording material, it melts and then becomes amorphous with a low reflection coefficient when it quickly cools off. When a mid-power laser is applied to heat gradually the recording material and then gradually cools it off, it becomes crystal with a high reflection coefficient.

[Playback]

A low-power laser is used for playback. The amount of reflected light depends on the status (amorphous or crystalline) of the recording material. This is detected by an optical sensor.

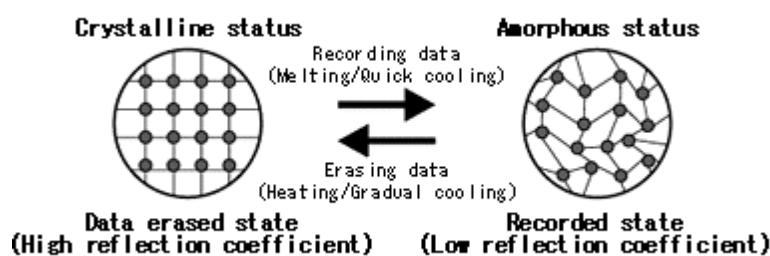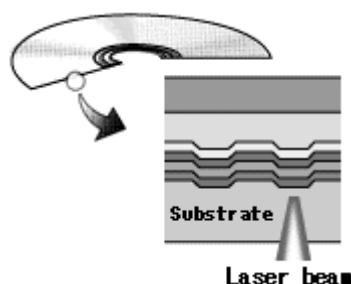


To make recordings, it is necessary to modulate the write pulse, which is called "Write Strategy".

There can be many types in Write Strategy. Typically Write Strategy for DVD ±R has NMP(Non Multi-Pulse) type and MP(Multi-Pulse) type. In NMP type each single mark is created by subsequent separated short pulses. In MP type each single mark is created by one continuous pulse.

Write Strategy for DVD ±RW has Type 1 and Type2. In Type 1 the mark with nT width is created by one top pulse and $(n-2)$ multi-pulses. Thus mark 3T is made by one top pulse and one multi-pulse. In Type 2 the mark with nT width is created by one top pulse and $(n-3)$ multi-pulses. Thus mark 3T is made by one top pulse only.

RL-02A uses MP type Write Strategy for DVD ±R and Type 1 for DVD ±RW as shown below.

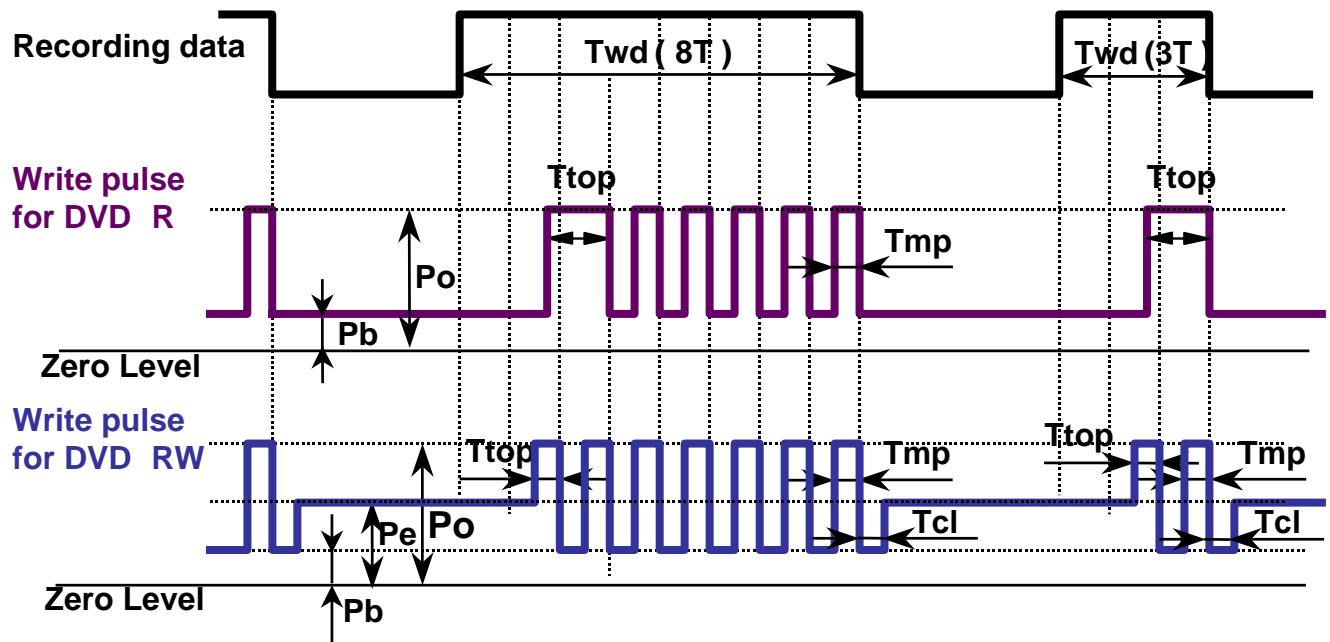


Po :Write Power (Peak Power)

Pe :Erase Power


Pb :Bias Power

4. Organization of the Inner Drive Area, Outer Drive Area, Lead-in Zone and Lead-out Zone

1) Layout of DVD-ROM disc

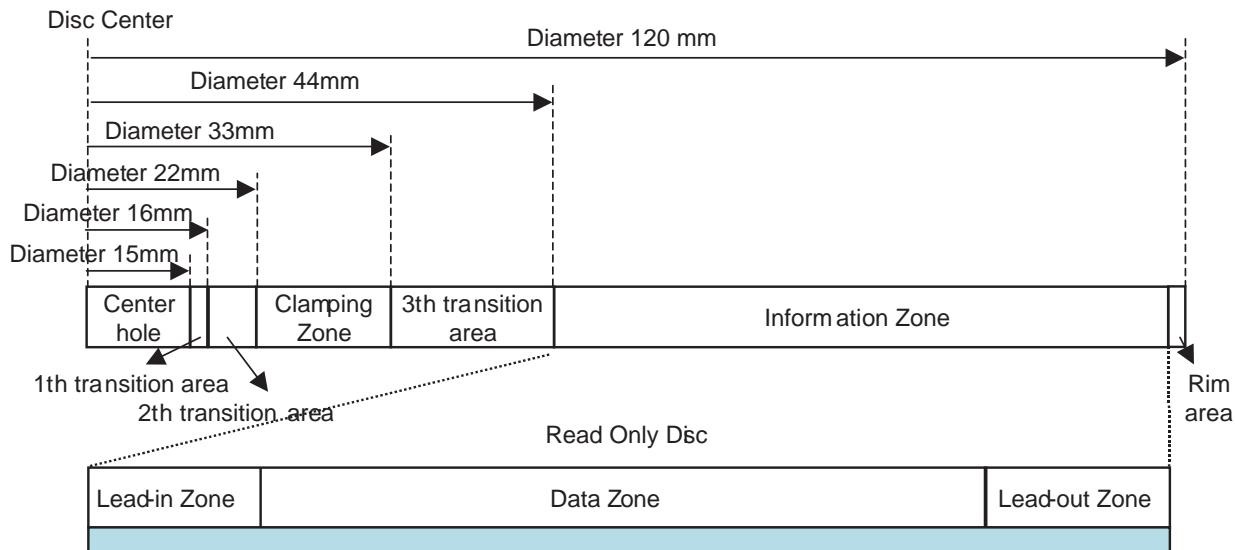

2) Layout of DVD+R disc

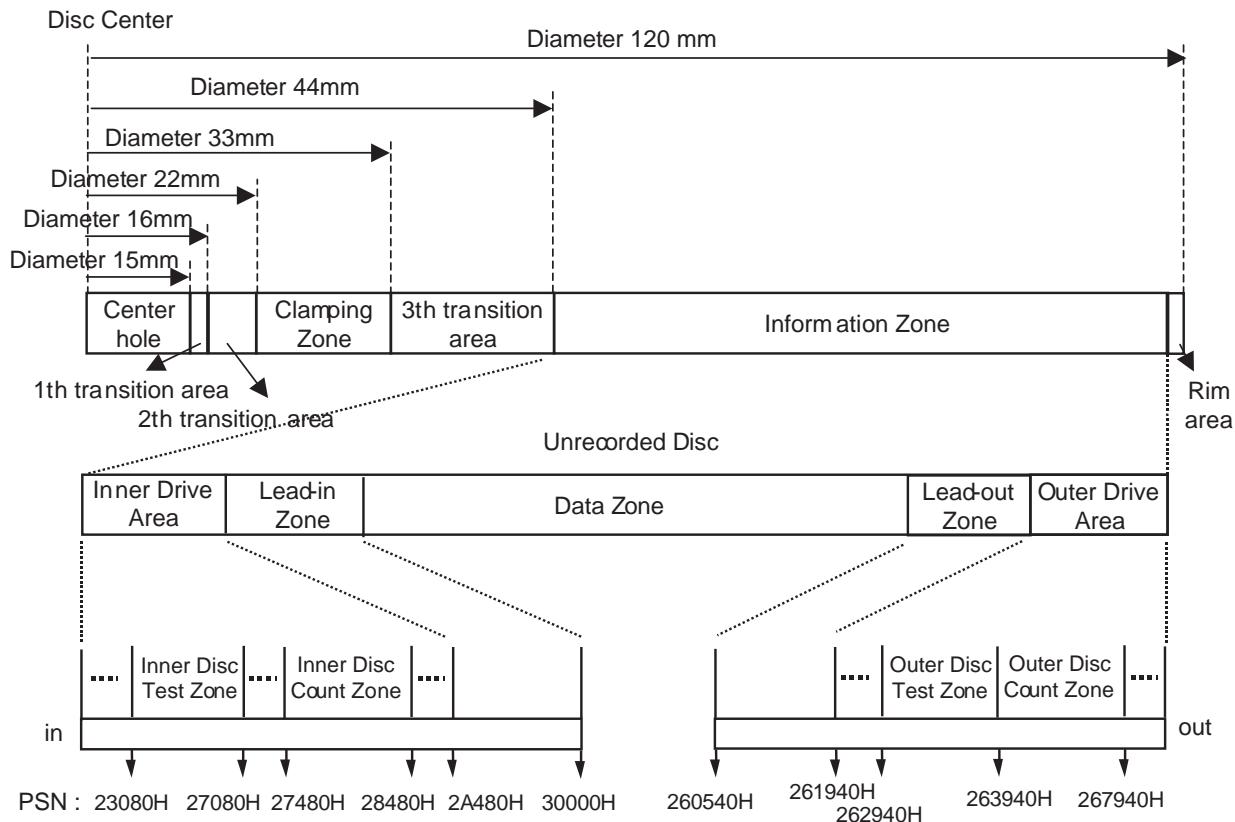


Inner Disc Test Zone : for performing OPCprocedures.

Inner Disc Count Zone : For counting the number of OPCalgorithm performed in IDT Zone.

Outer Disc Test Zone : for performing OPC procedures.

Outer Disc Count Zone : For counting the number of OPC algorithm performed in IDT Zone.

3) Layout of DVD+RW disc

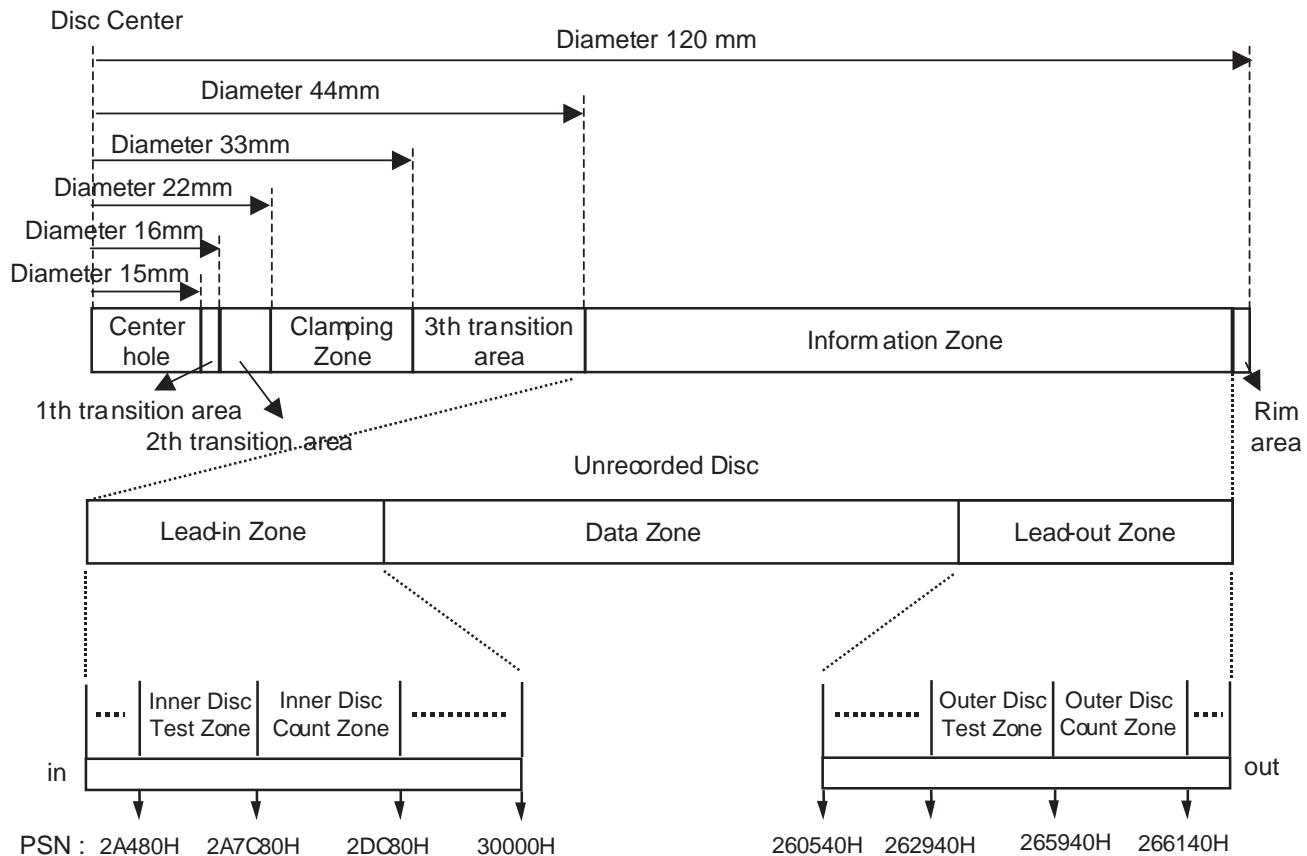


Inner Disc Test Zone : for performing OPC procedures.

Inner Disc Count Zone : For counting the number of OPC algorithm performed in IDT Zone.

Outer Disc Test Zone : for performing OPC procedures.

Outer Disc Count Zone : For counting the number of OPC algorithm performed in IDT Zone.


4) Layout of DVD-R/RW disc

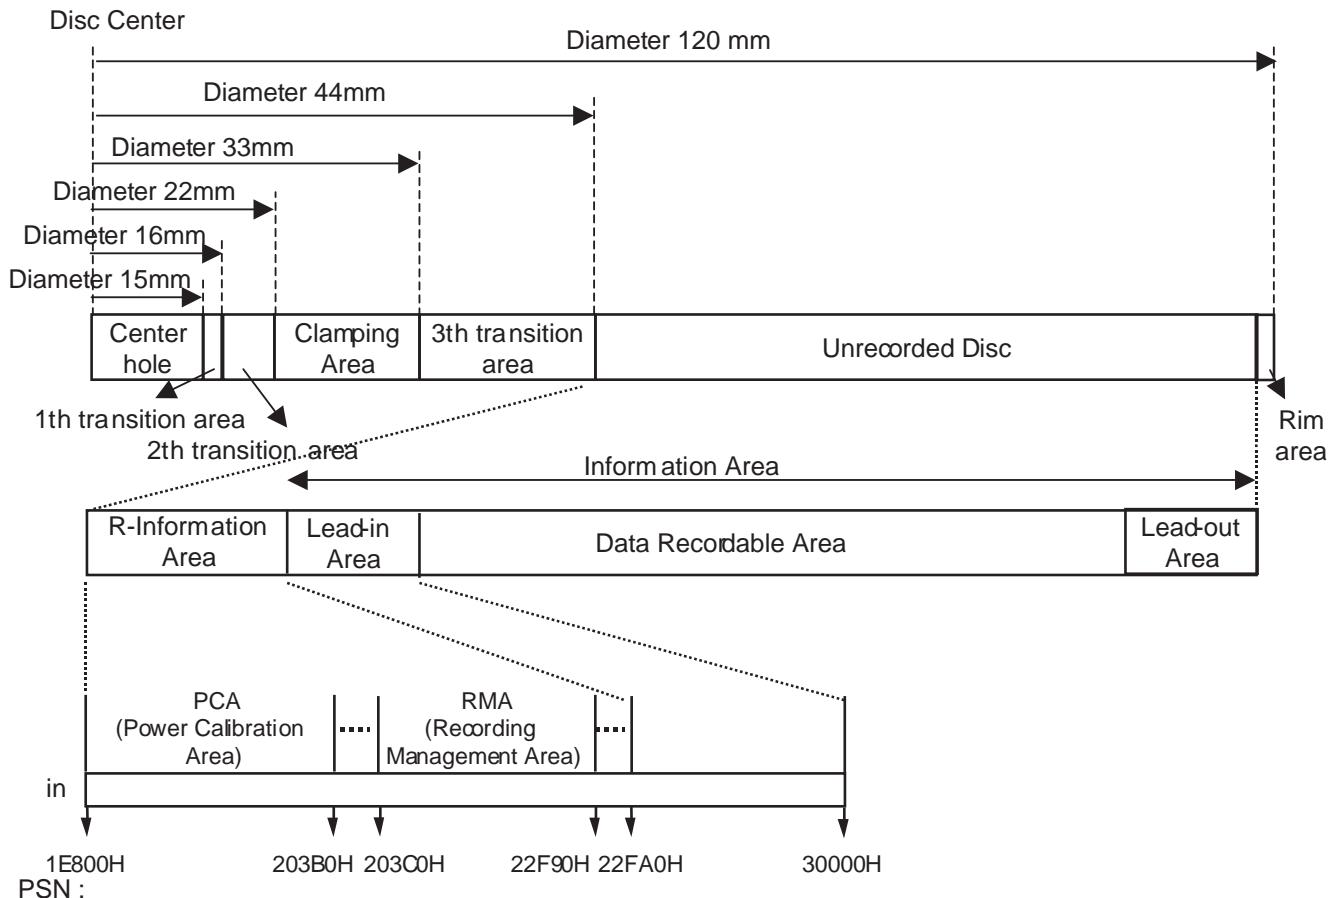

5. ALPC(Automatic Laser Power Control) Circuit

1) Block Diagram

IC 106 (uPC3330)

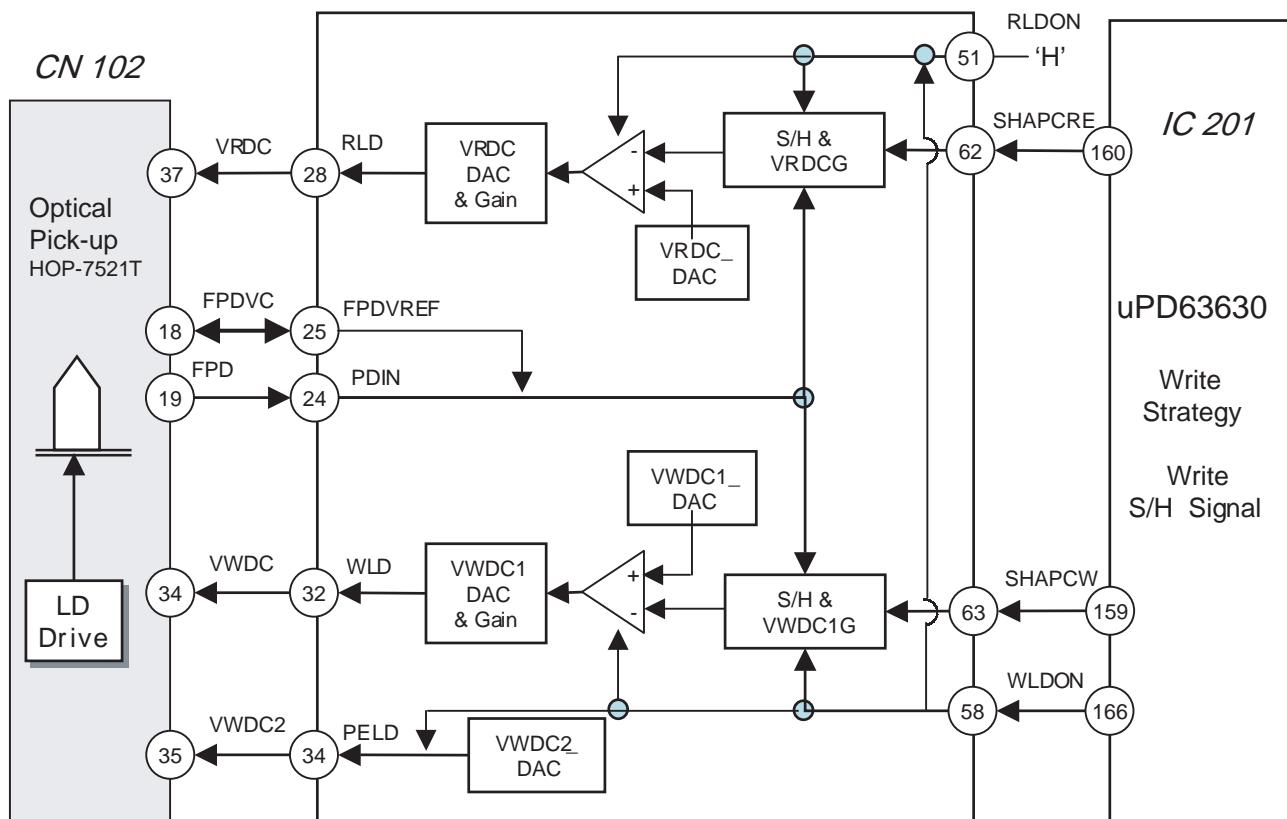

2) ALPC(Automatic Laser Power Control) Circuit Operation

ALPC function in CD-R/RW,DVD+R/RW analog front-end is for constant power level control purpose.

Based on the accurate power sensor(FPD) in OPU, ALPC feedback loop maintains constant power level against laser diode's temperature variation.

There are two power control loops in uPC3330, which are used with different combination for different applications. Generally, the first ALPC loop is used for read-power control. The 2nd ALPC loop is used for write(erase) power control for CD-R/RW and DVD+R/RW disc.

Owing to the small signal level in read-power control mode, the first ALPC loop amplifies the FPD signal to enhance the accuracy of read power control. The built-in 10-bit DAC(VRDC_DAC) is used to set the read power level.

Moreover, the 2nd ALPC loop is used for high power control. The built-in 10-bit DAC(VWDC1_DAC) is used to set the wanted power level.

And the register VWDC1G is employed to adjust the gain of FPD signal.

The following potentiometers(VRDC_DAC, VWDC1_DAC, and VWDC2_DAC) and amplifiers (VRDCG and VWDC1G) are used to set the wanted levels of the output pins RLD, WLD, and PELD

How to use test tool

1. ALPC Measurement System Configuration



In order to measure and adjust DVD RW optical power, The following measurement equipments are needed.

N Compulsory equipment

- ① Optical Power meter & Sensor (ADVANTEST, TQ8210/Q82017A or equivalent)
- ② Personal Computer (Pentium 3, 500MHz Above, , RAM:64M Above, Win98 Above)
- ③ Adjustment Program (Dragon or ALPC) for SVC, ALPC Program recommended

N FI optional equipment

- ①USB-ATAPI Interface (needed when using USB Port from the laptop computer without ATAPI interface or a desktop computer)
- ②Connector-ATAPI Interface Board(Part Mo:6881R-7677A) (needed when ATAPI is not attached to Loader)

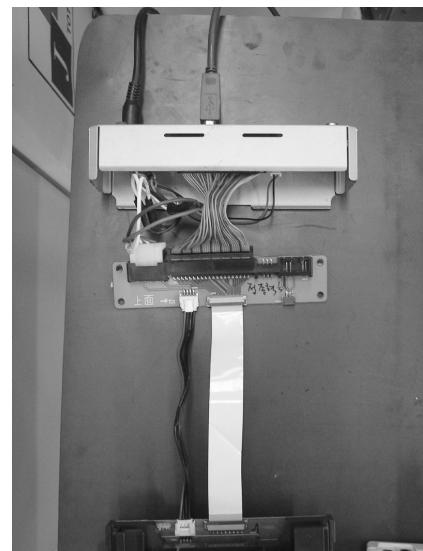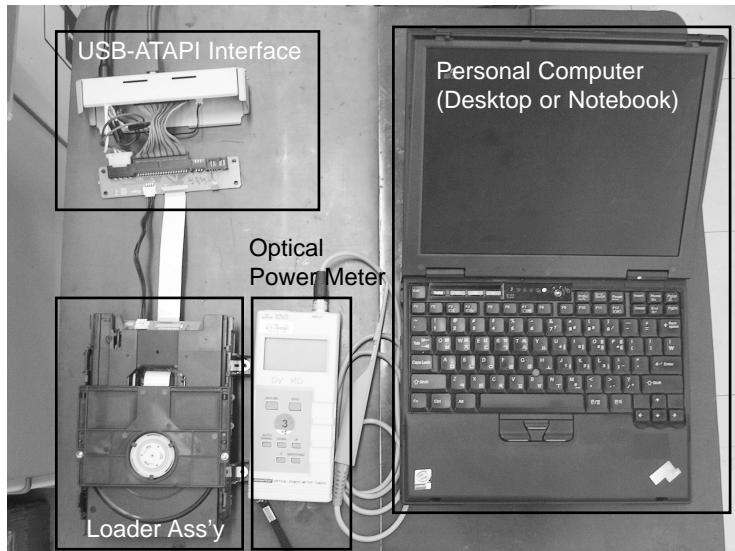

Connector-ATAPI Interface Board

2. ALPC Program Configuration

ALPC Program consists of total 4 files.

ALPC.exe
LgBada.dll
modelnm.txt
WNASPI32.DLL

These 4 files should be located in one directory.

ALPC.exe is a program execution file.

modelnm.txt is a configuration file.

Determine how to connect

The following contents are included when you open "modelnm.txt" file.

The following contents are included when you open LGE connect=0


connect=0 is the item which you can determine whether you use Serial or ATAPI.

0 : ATAPI
1 : Serial

Thus, select connect=0 to use ATAPI, or select connect=1 to use Serial, then save the file.
(For SVC, ATAPI setting is recommended.)

3. Running ALPC Program

When running ALPC.exe file, the following screen appears.

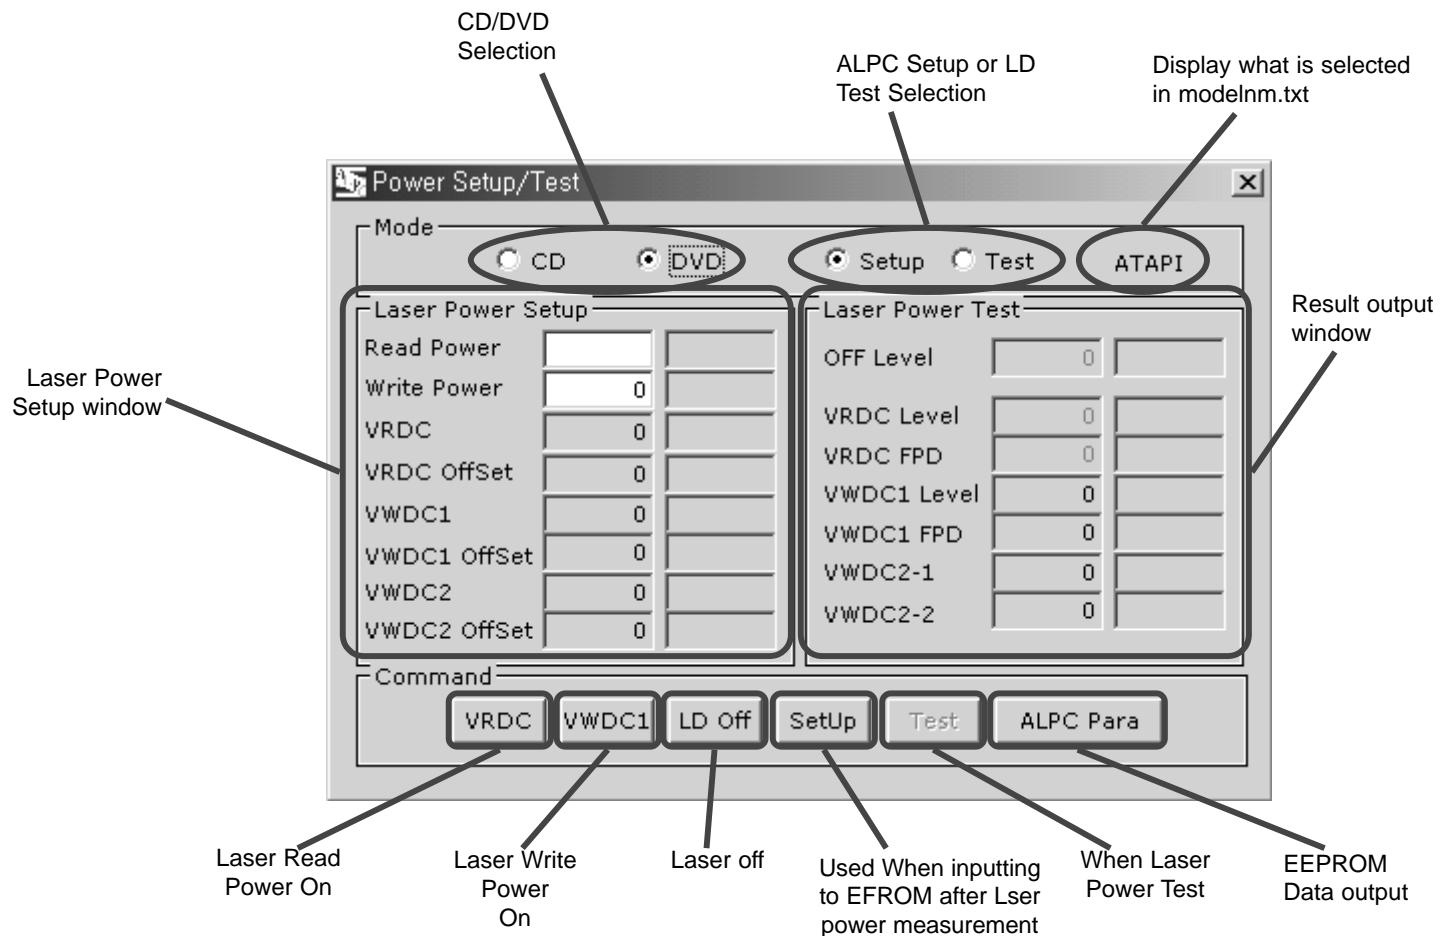

4 LD Test


* Test DVD LD

- ① Select DVD mode
- ② Select Test mode
- ③ Click **Test**

* Test DVD CD

- ① Select CD mode
- ② Select Test mode
- ③ Click **Test**

Section	Off	VRDC	VR_FPD	VWDC1	VW_FPD	VW2-1	VW2-2
CD	2.4±0.08	0.53±0.22	0.02±0.01				
DVD	2.4±0.08	0.7±0.2	0.04±0.01	0.43±0.05	0.2±0.02	0.08±0.02	0.2±0.03

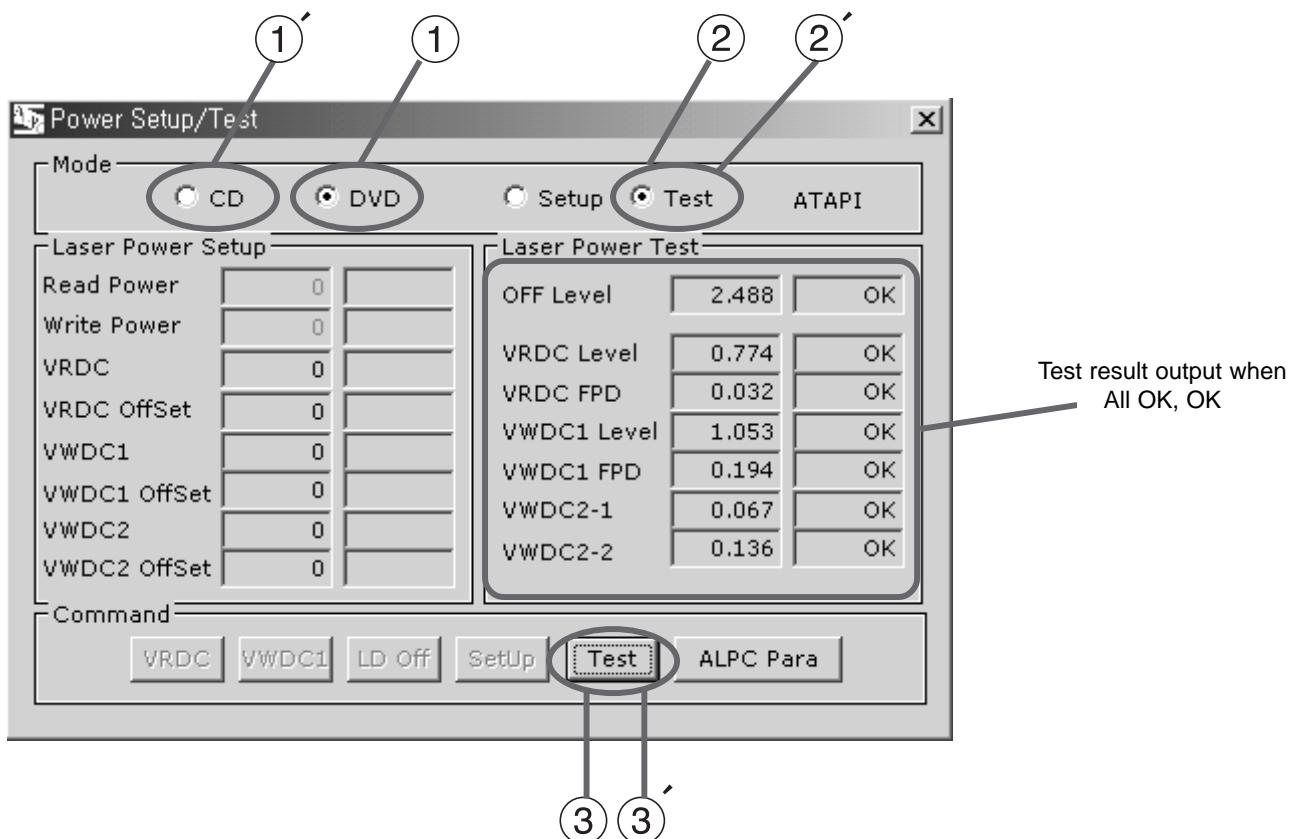

Specification can be changed according to pick-up type, circuit, program, and chipset.
 If specification is changed, program can be sent by supervisor.
 Specification above is temporary reference.

5. Optical Power Setting


When replacing Travers ass'y including Pick-up or Loader PCB, Optical Power Setting should be performed for Pick-up and Loading PCB's matching.

① DVD LD optocal Power Setting

- Select DVD and Setup mode
- Push **VRDC**. (Read Power On. Strong Red light can be seen from pick up optical lens.)
- Measure optical power.
- Write measurement value in Read Power.
- Push **VWDC1**. (Write power On.) (Caution) Light is very strong. Never look at the light directly.
- Measure optical power
- Write measurement value in Read Power and push LD off **LD off**.
- Push **Setup**. (Measurement value is inputted to EEPROM)

② DVD LD optocal Power Setting

- Select CD and Setup mode
- Push **VRDC**. (Read Power On. Weak Red light can be seen from pick up optical lens.)
- Measure optical power.
- Write measurement value in Read Power.
- Push **VWDC1**. (Write power On. Weak Red light can be seen.)
- Measure optical power and push LD off **LD off**.
- Write measurement value in Read Power.
- Push **Setup**. (Measurement value is inputted to EEPROM)

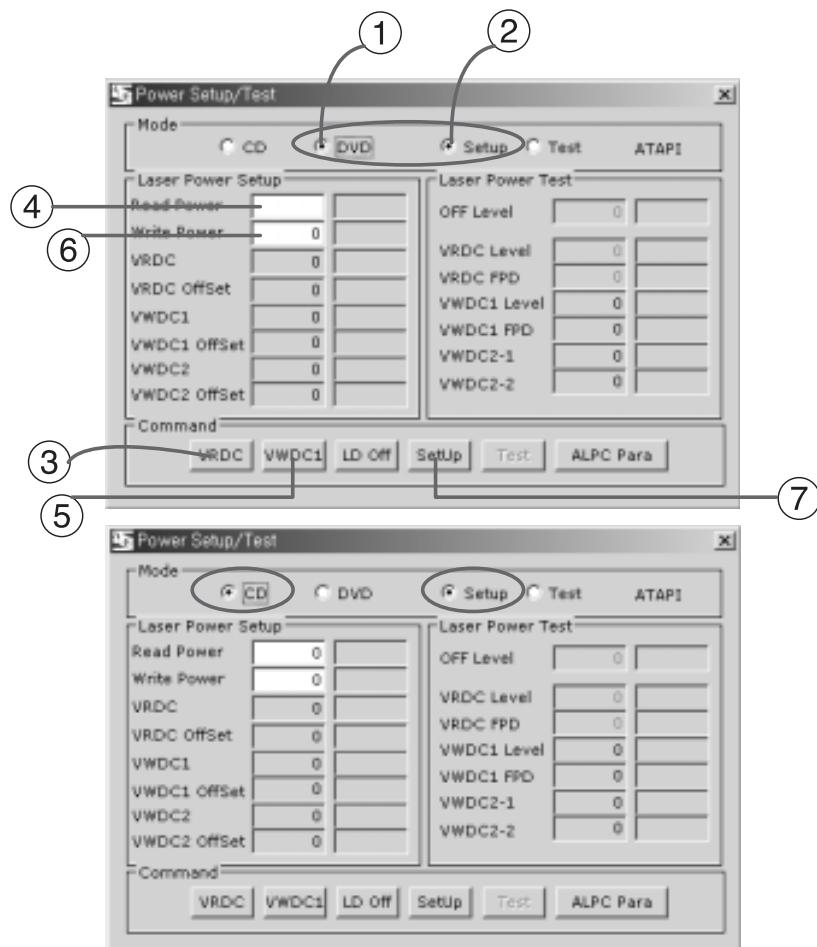


6. Optical Power Setting Parameter Check


Use when defective happens even though LD test result is normal.

When defective can be found but power test result is OK, You need to check current settings whether they are proper or not. In this case, Pressing **ALPC Para** will display ALPC Parameter Info window and show current optical power settings recorded in EEPROM(IC302).

Write down these settings on the paper, perform optical power setting and press **ALPC Para** again, then new optical power settings will appear. Compare these two parameters. If there is a big difference, optical power setting may have been wrong at first or pick-up optical output may have been changed. If pick-up is normal, problem can be solved by resetting optical power without replacing pick-up.

In order to remove previous ALPC Parameter from ALPC Parameter Info, press **Reset** at the bottom of ALPC Parameter Info window.

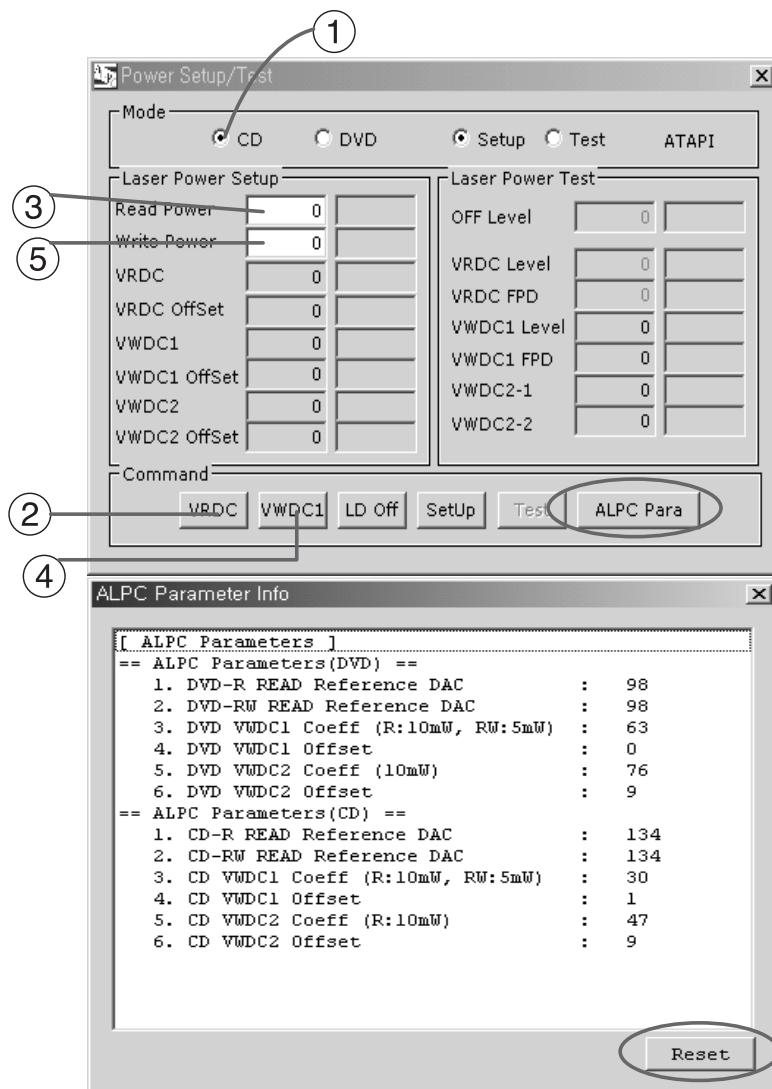

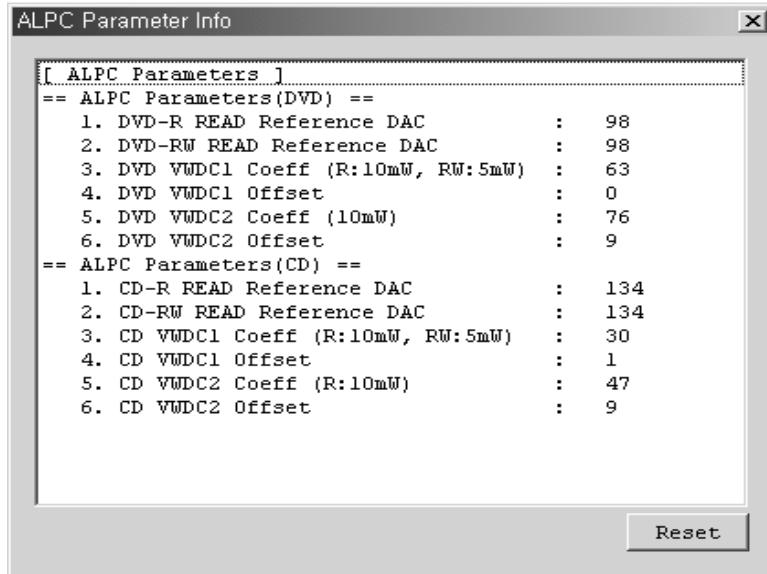

[VALID ALPC Parameters]

<CD>

- 1) CD-R READ Reference DAC : 70 ~ 100
- 2) CD-RW READ Reference DAC : 70 ~ 100

<DVD>

- 1) DVD-R READ Reference DAC : 42 ~ 107
- 2) DVD-RW READ Reference DAC : 42 ~ 107
- 3) VWDC1 : 35 ~ 65
- 4) VWDC1 Offset : 0 ~ 6
- 5) VWDC2 : 20 ~ 43
- 6) VWDC2 Offset : 0 ~ 10

Appendix. How to measure optical power


Optical power measurement is measuring actual optical power coming out from an object lens with LD turned on. thus, In order to measure optical power, LD should to be turned on and environment need to be dark enough.

If necessary, Cover the top side of the sensor with black paper or hand when measuring.

Generally, fluorescent light is about 50 μW , sun light is about 100 mW. so, If this is ignored, optical power setting may not be set correctly.


Optical power mesurement procedure

1. Adjust optical power meter's λ (wave length) to DVD. (Generally 660 nm)
2. Turn DVD LD on.
3. Place sensor less than 3mm apart from pick-up object lens, perpendicular to lens.
Adjust position so that the center of object lens match to L mark on the sensor.
4. Read monitor's value. (Read Maximum value as moving position slightly)
(Check working unit. Unit should be mW. When LD is dead, μW or nW unit may not be read correctly.)
5. Multiply monitor's value by 100, round off to the nearest integer, then write constant part.
6. Adjust optical power meter's λ (wave length) to CD. (Generally 780 nm)
7. Turn CD LD on.
8. Repeat step 3~5 above.

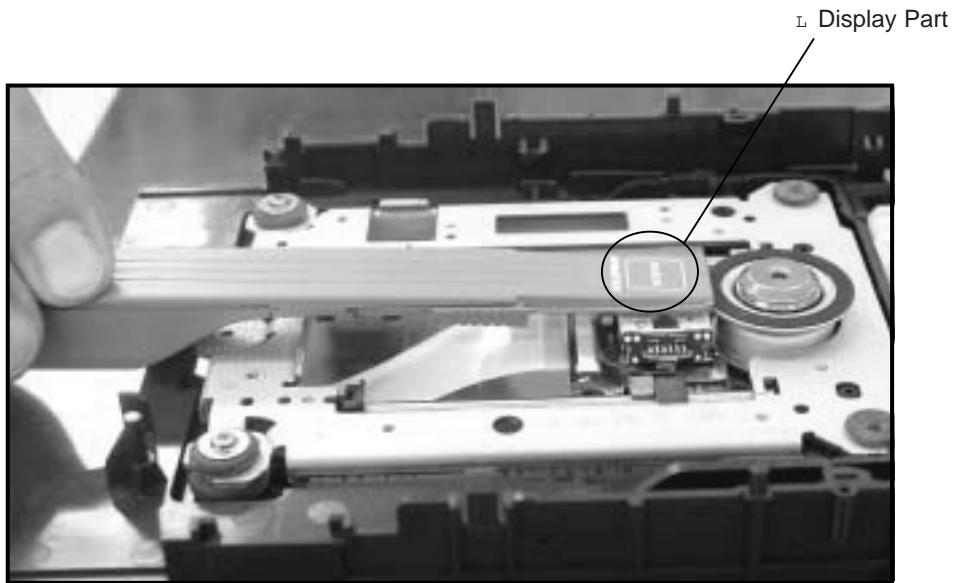


BLOCK DIAGRAMS


1. OVERALL BLOCK DIAGRAM

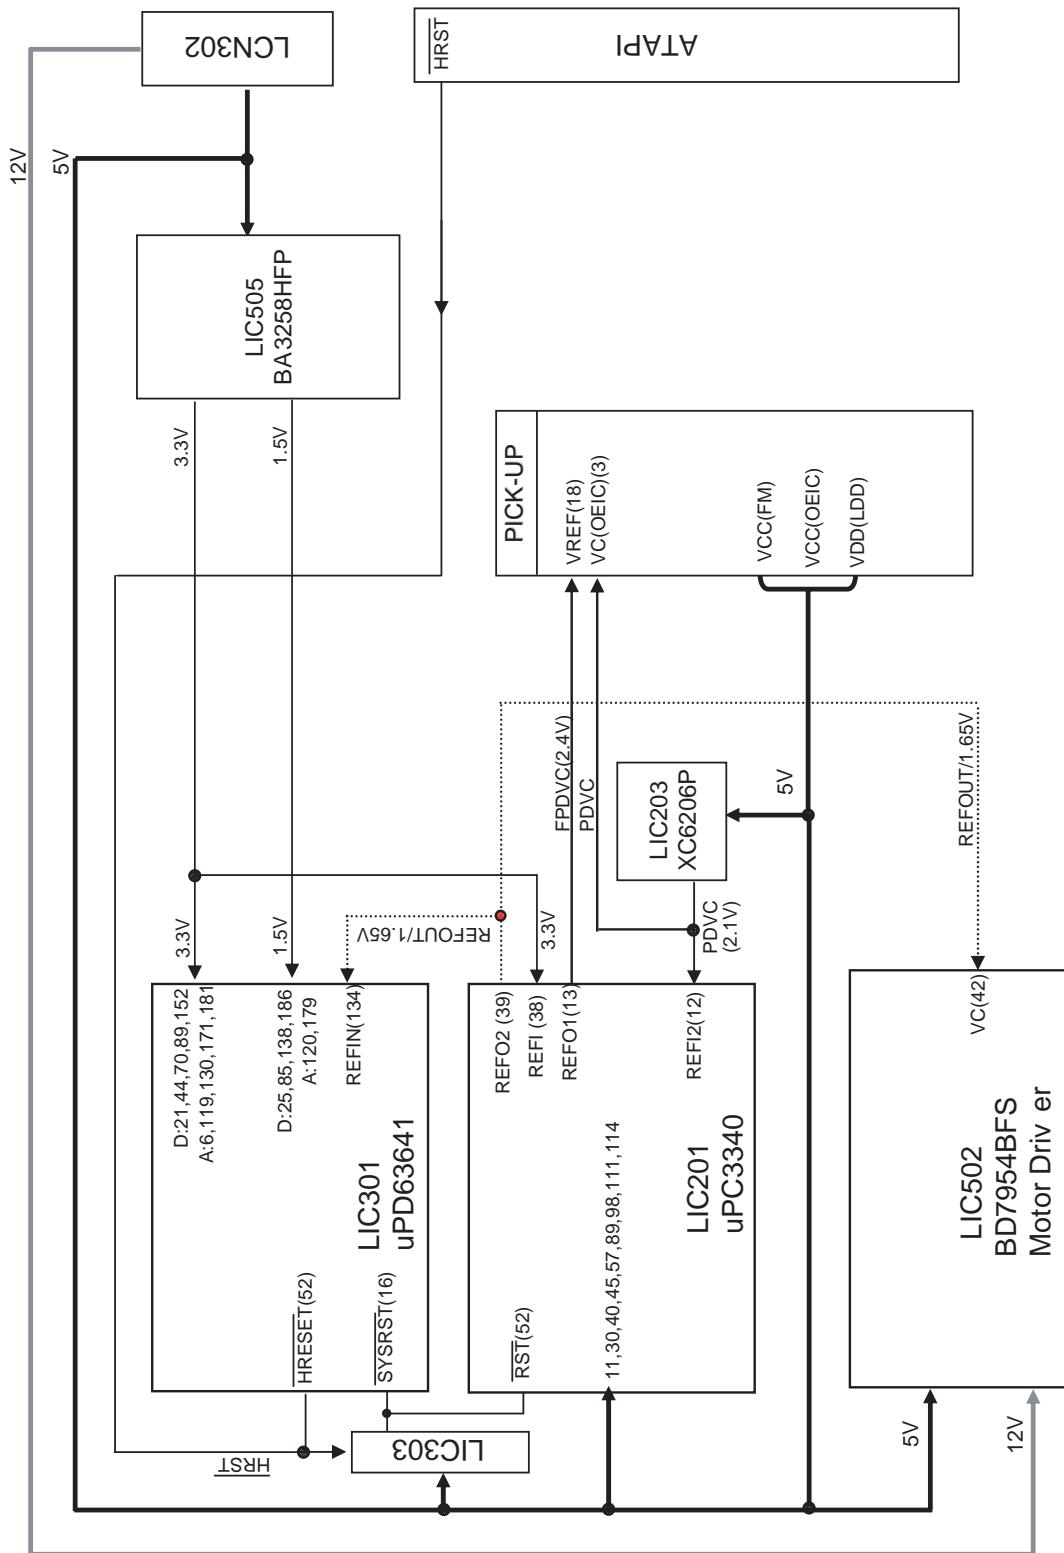


2. DSP BLOCK DIAGRAM

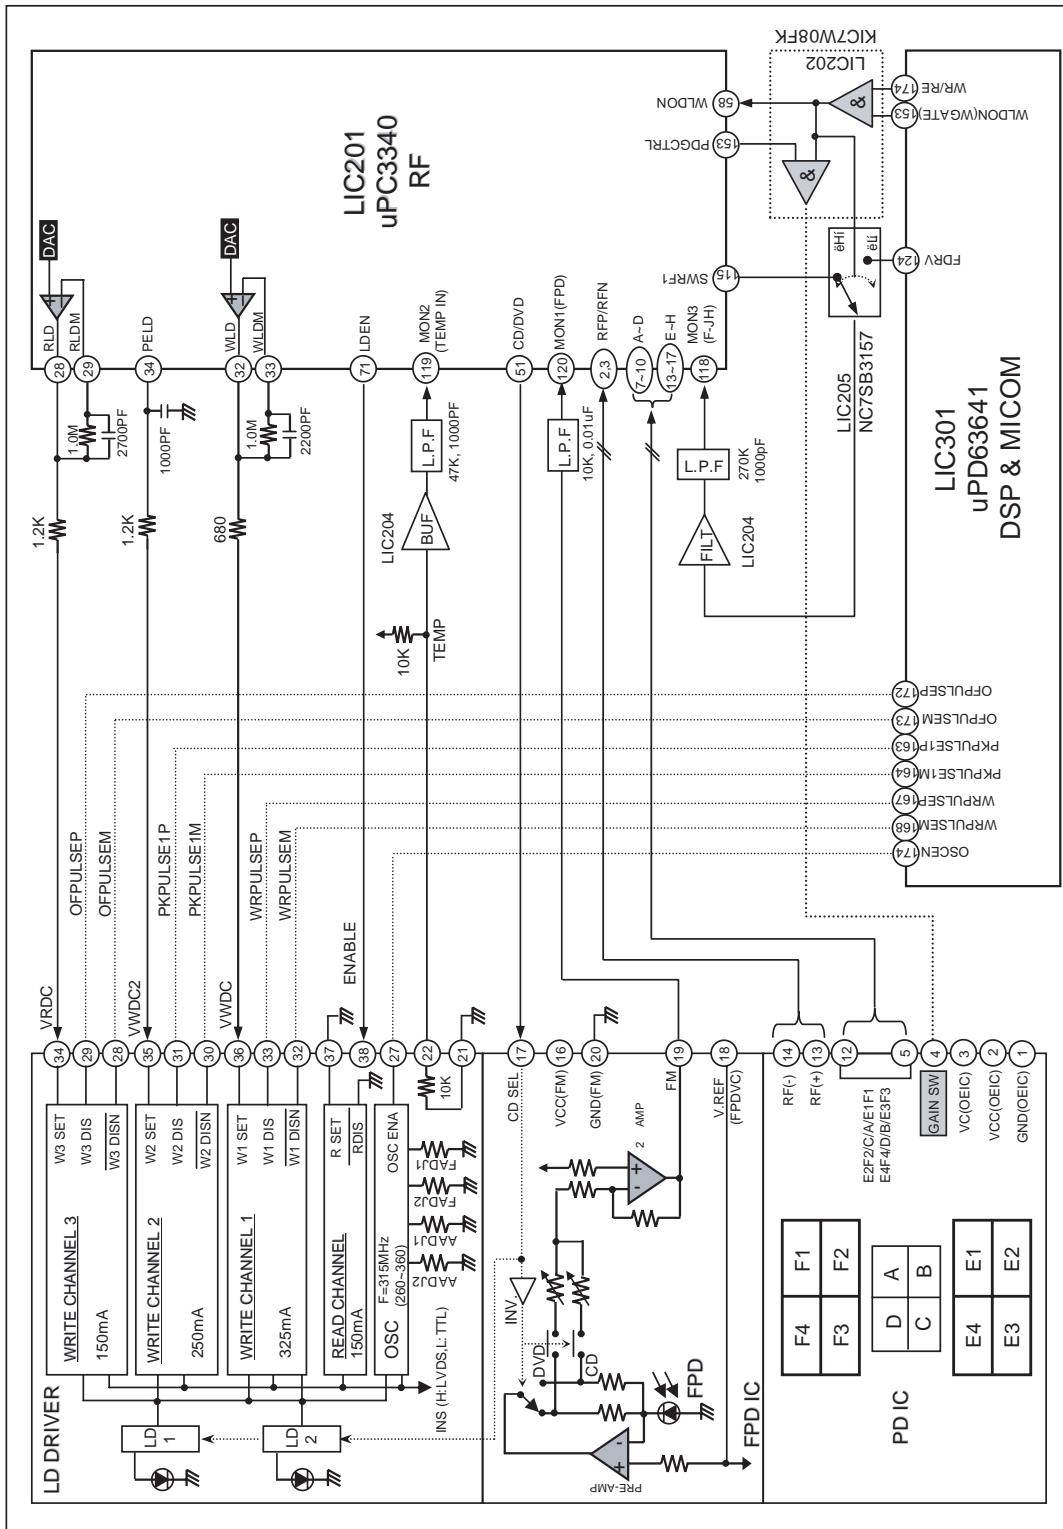

3. μ-COM BLOCK DIAGRAM

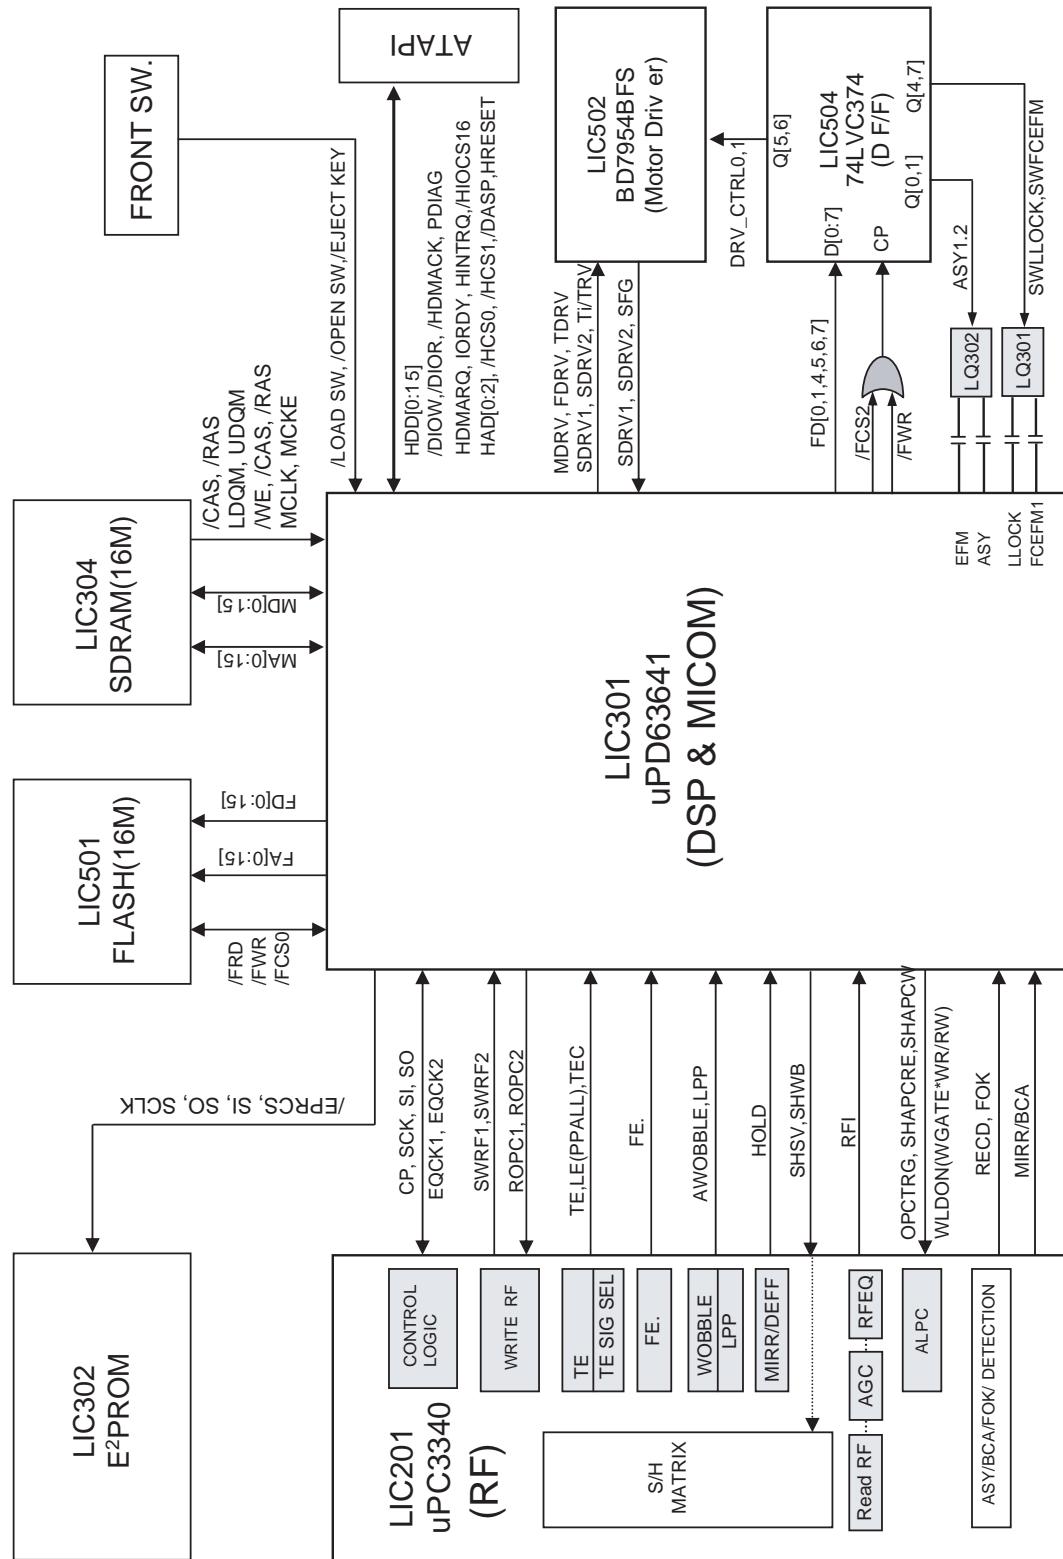


4. RF BLOCK DIAGRAM

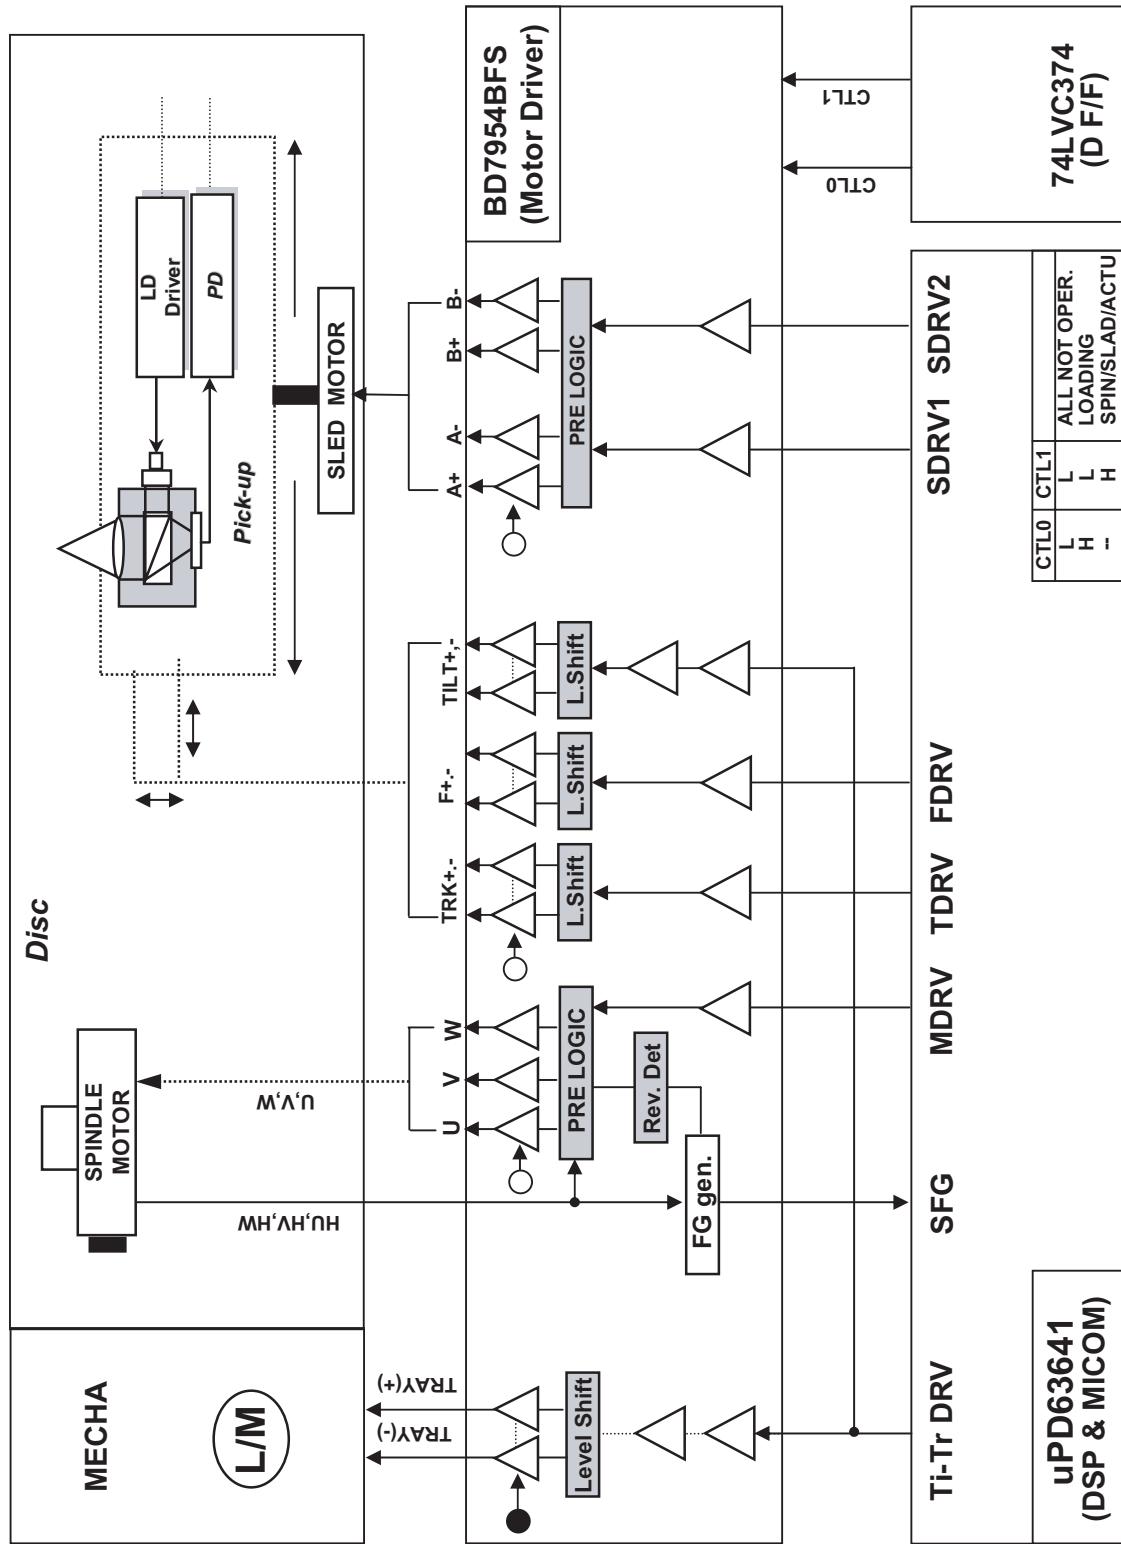

CIRCUIT DIAGRAMS


1. RF CIRCUIT DIAGRAM

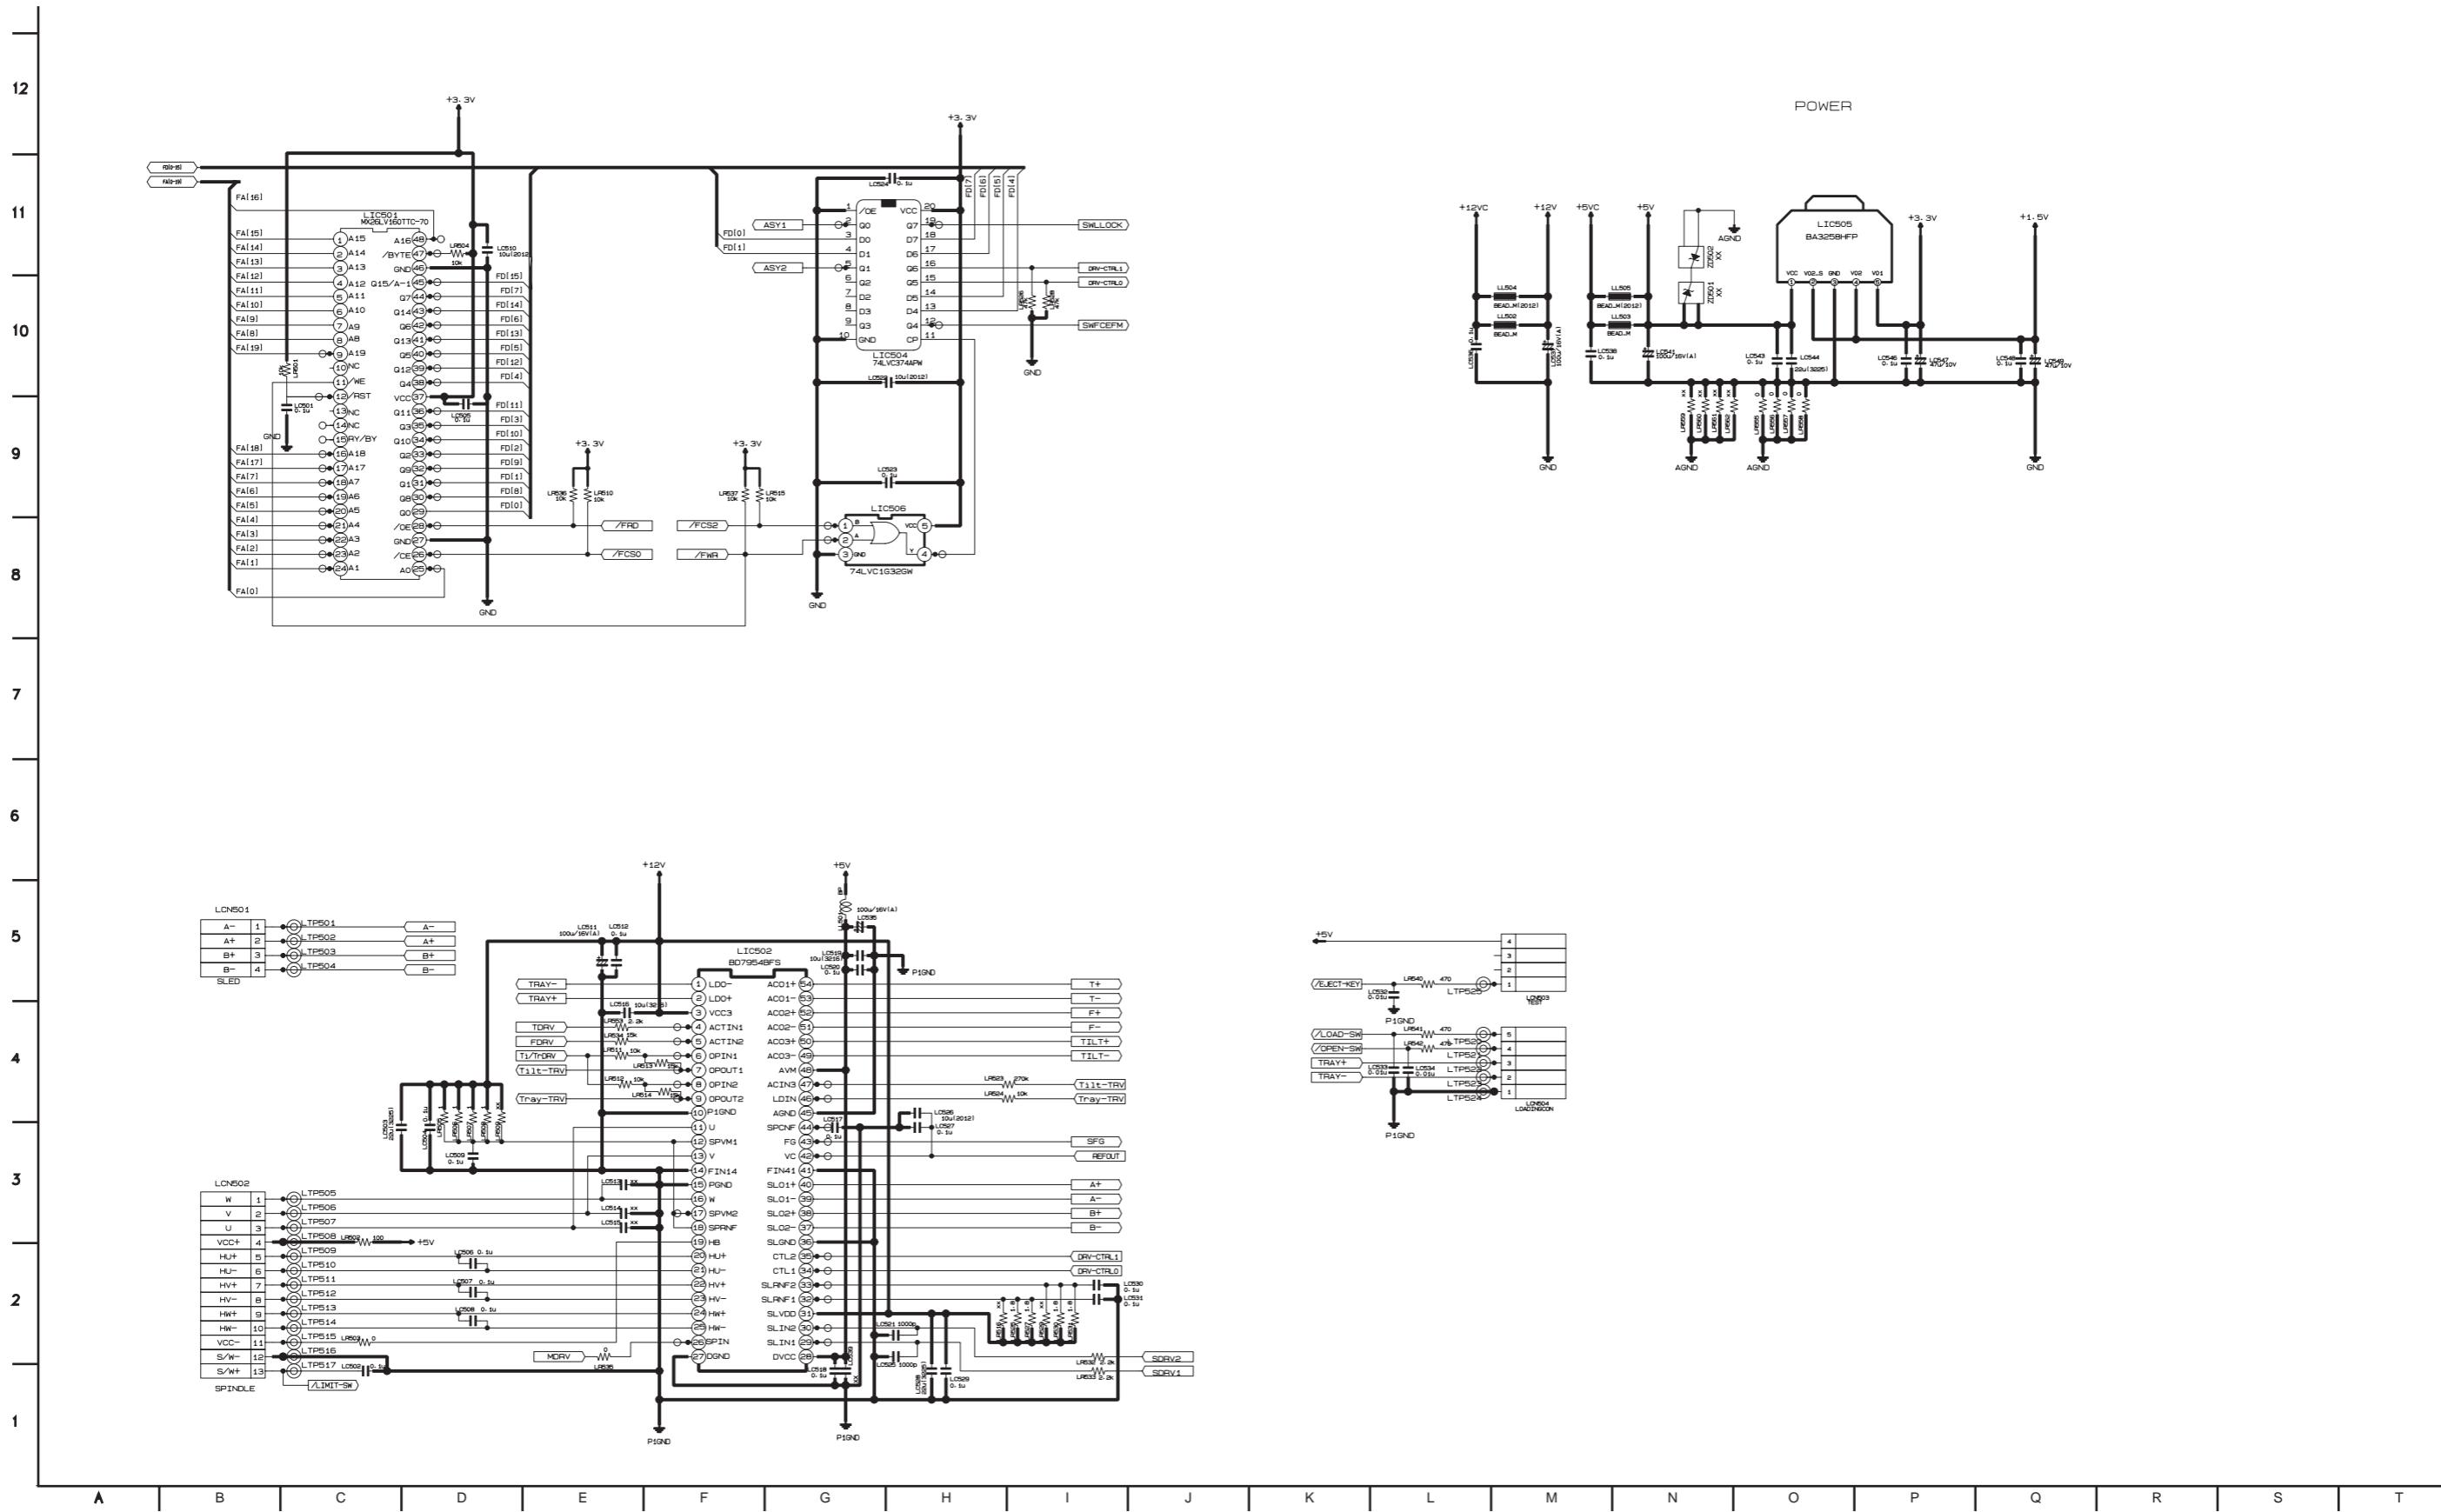


4-55

4-56

2. DSP CIRCUIT DIAGRAM

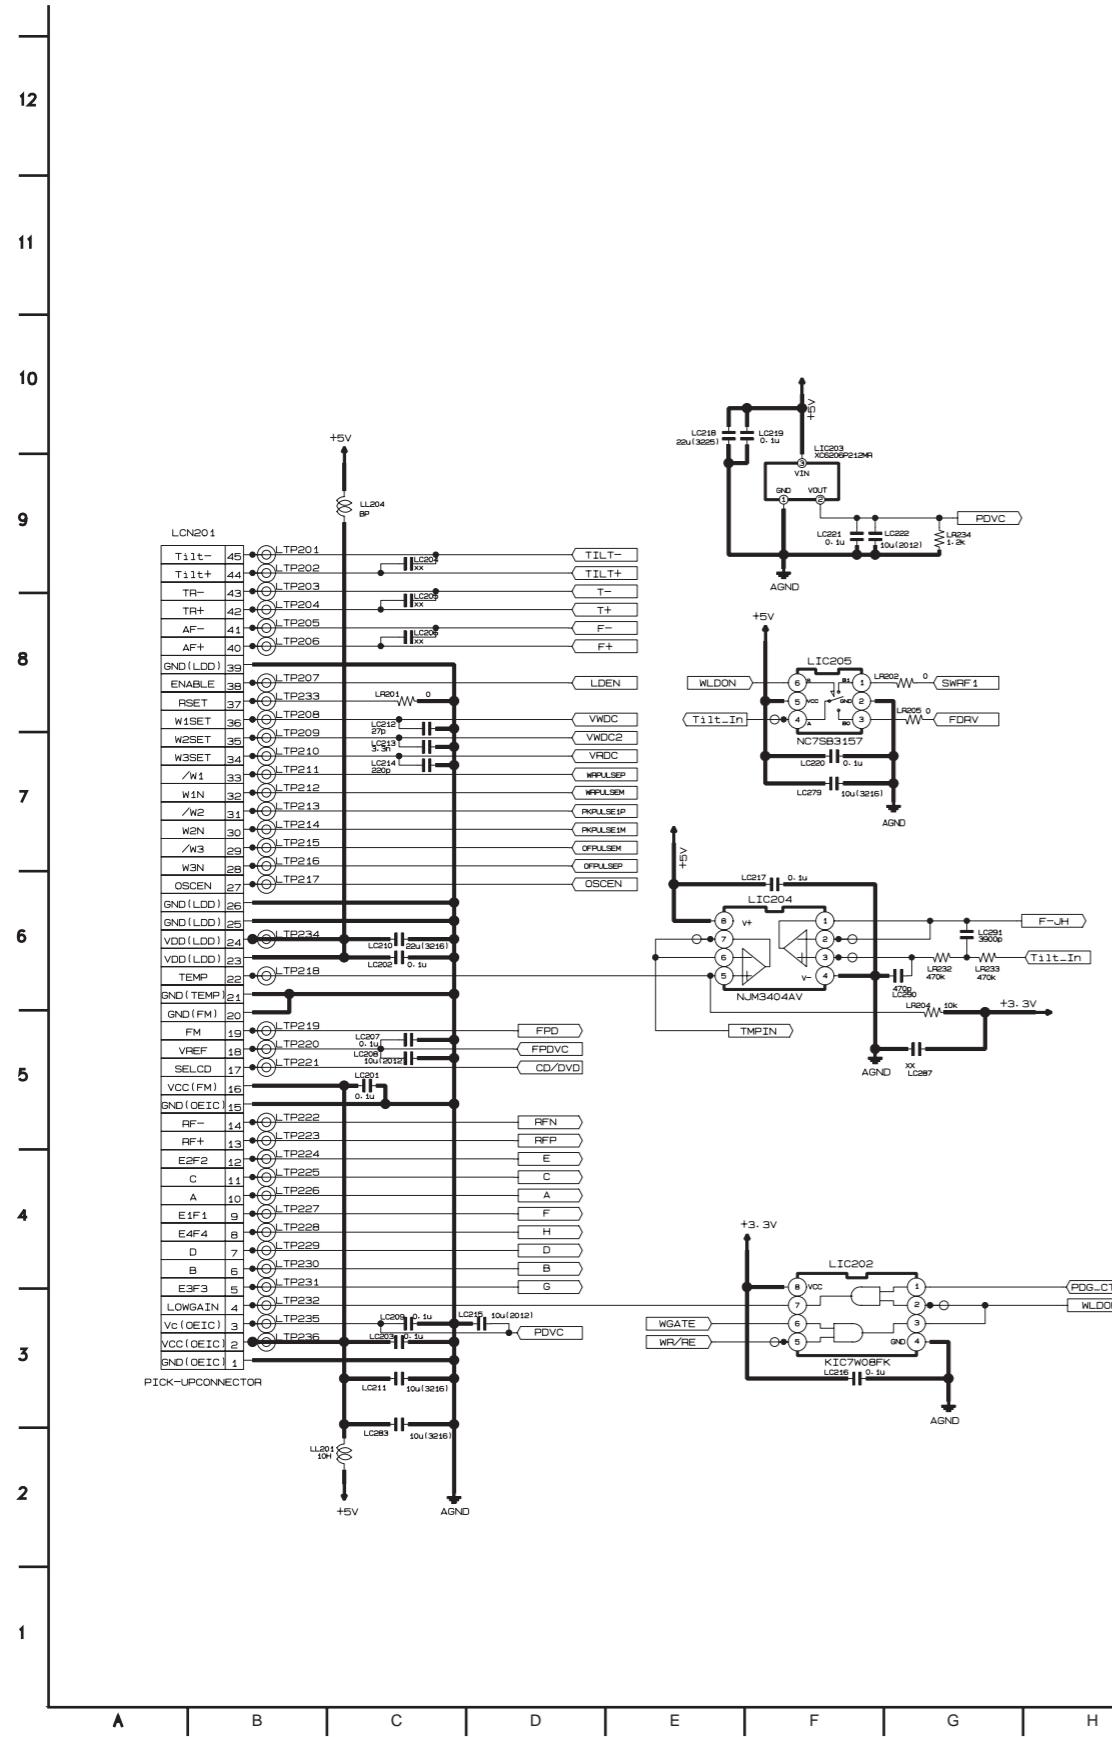


4-57

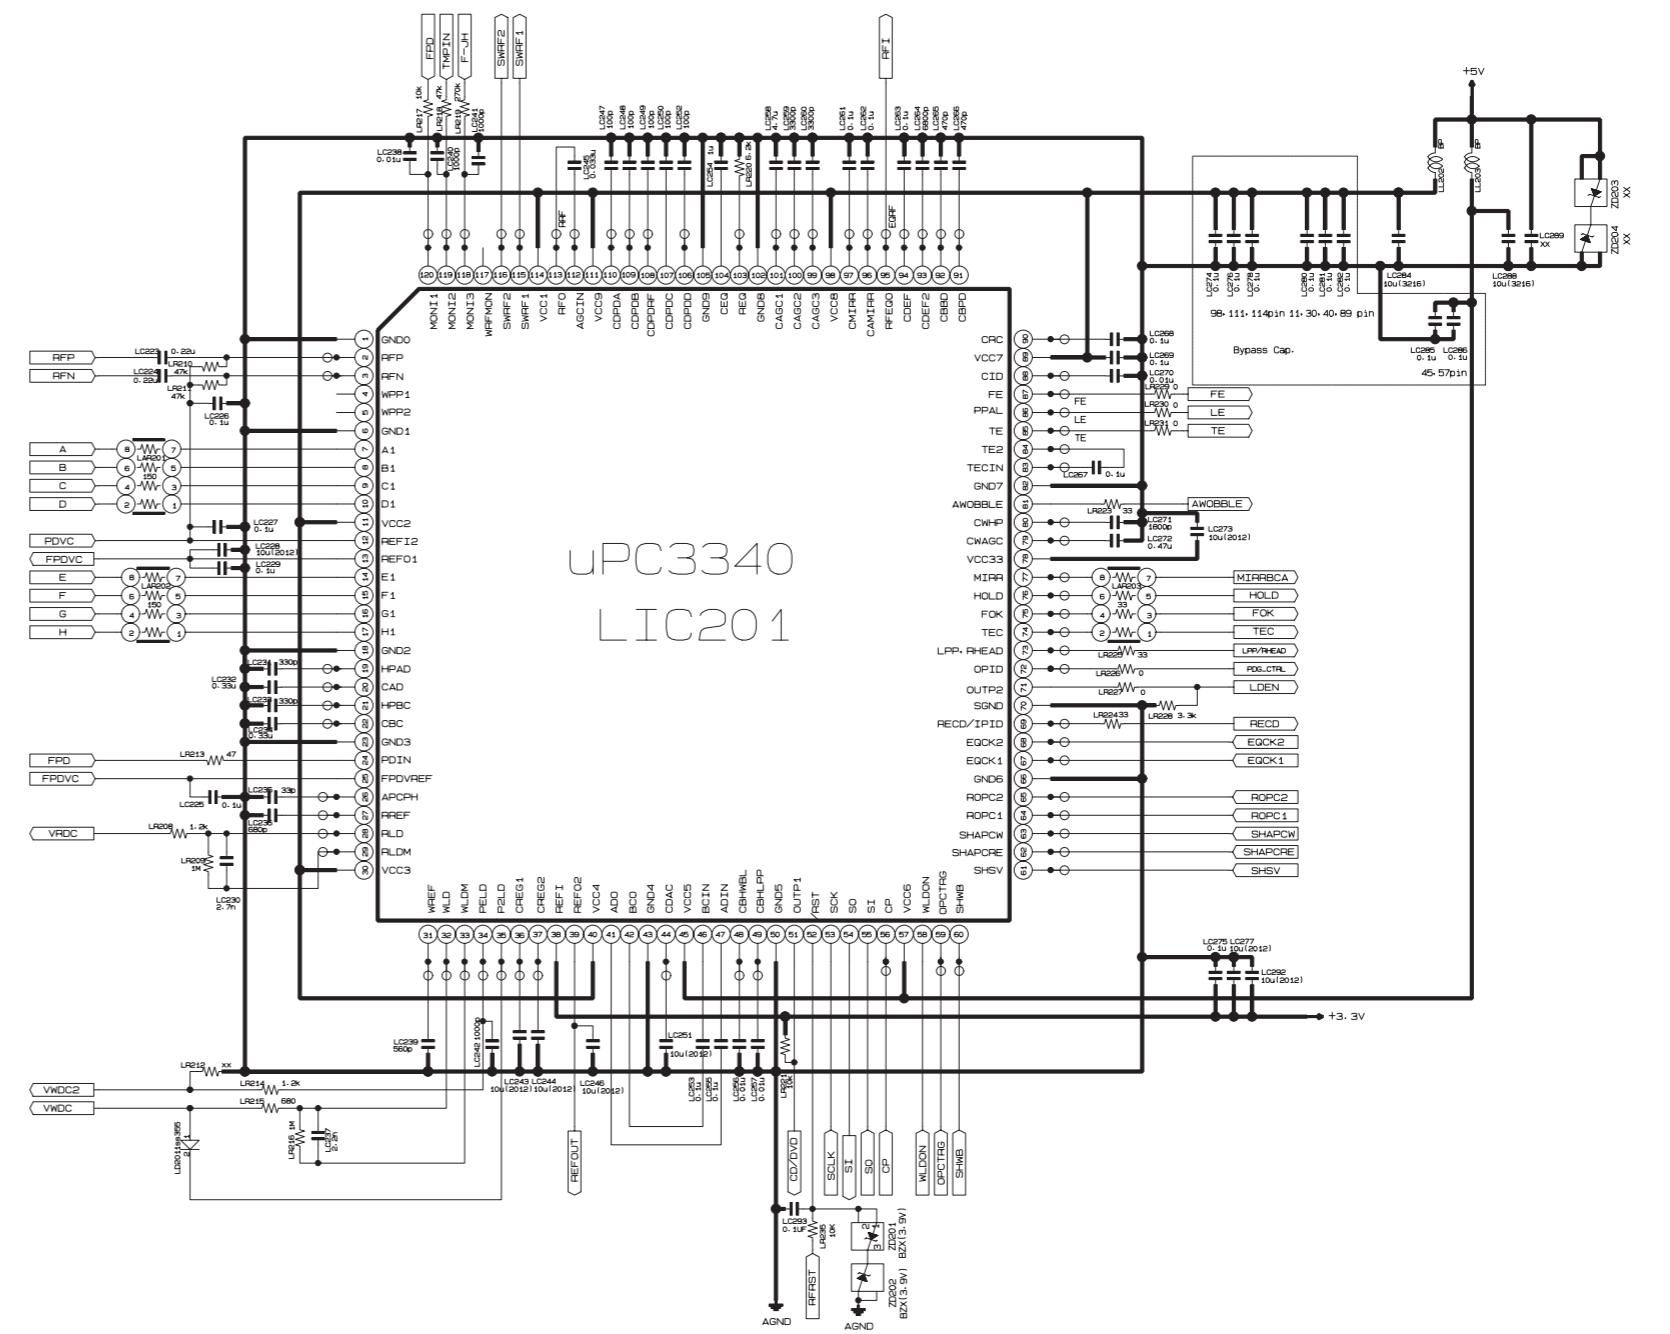

4-58

3. μ-COM CIRCUIT DIAGRAM

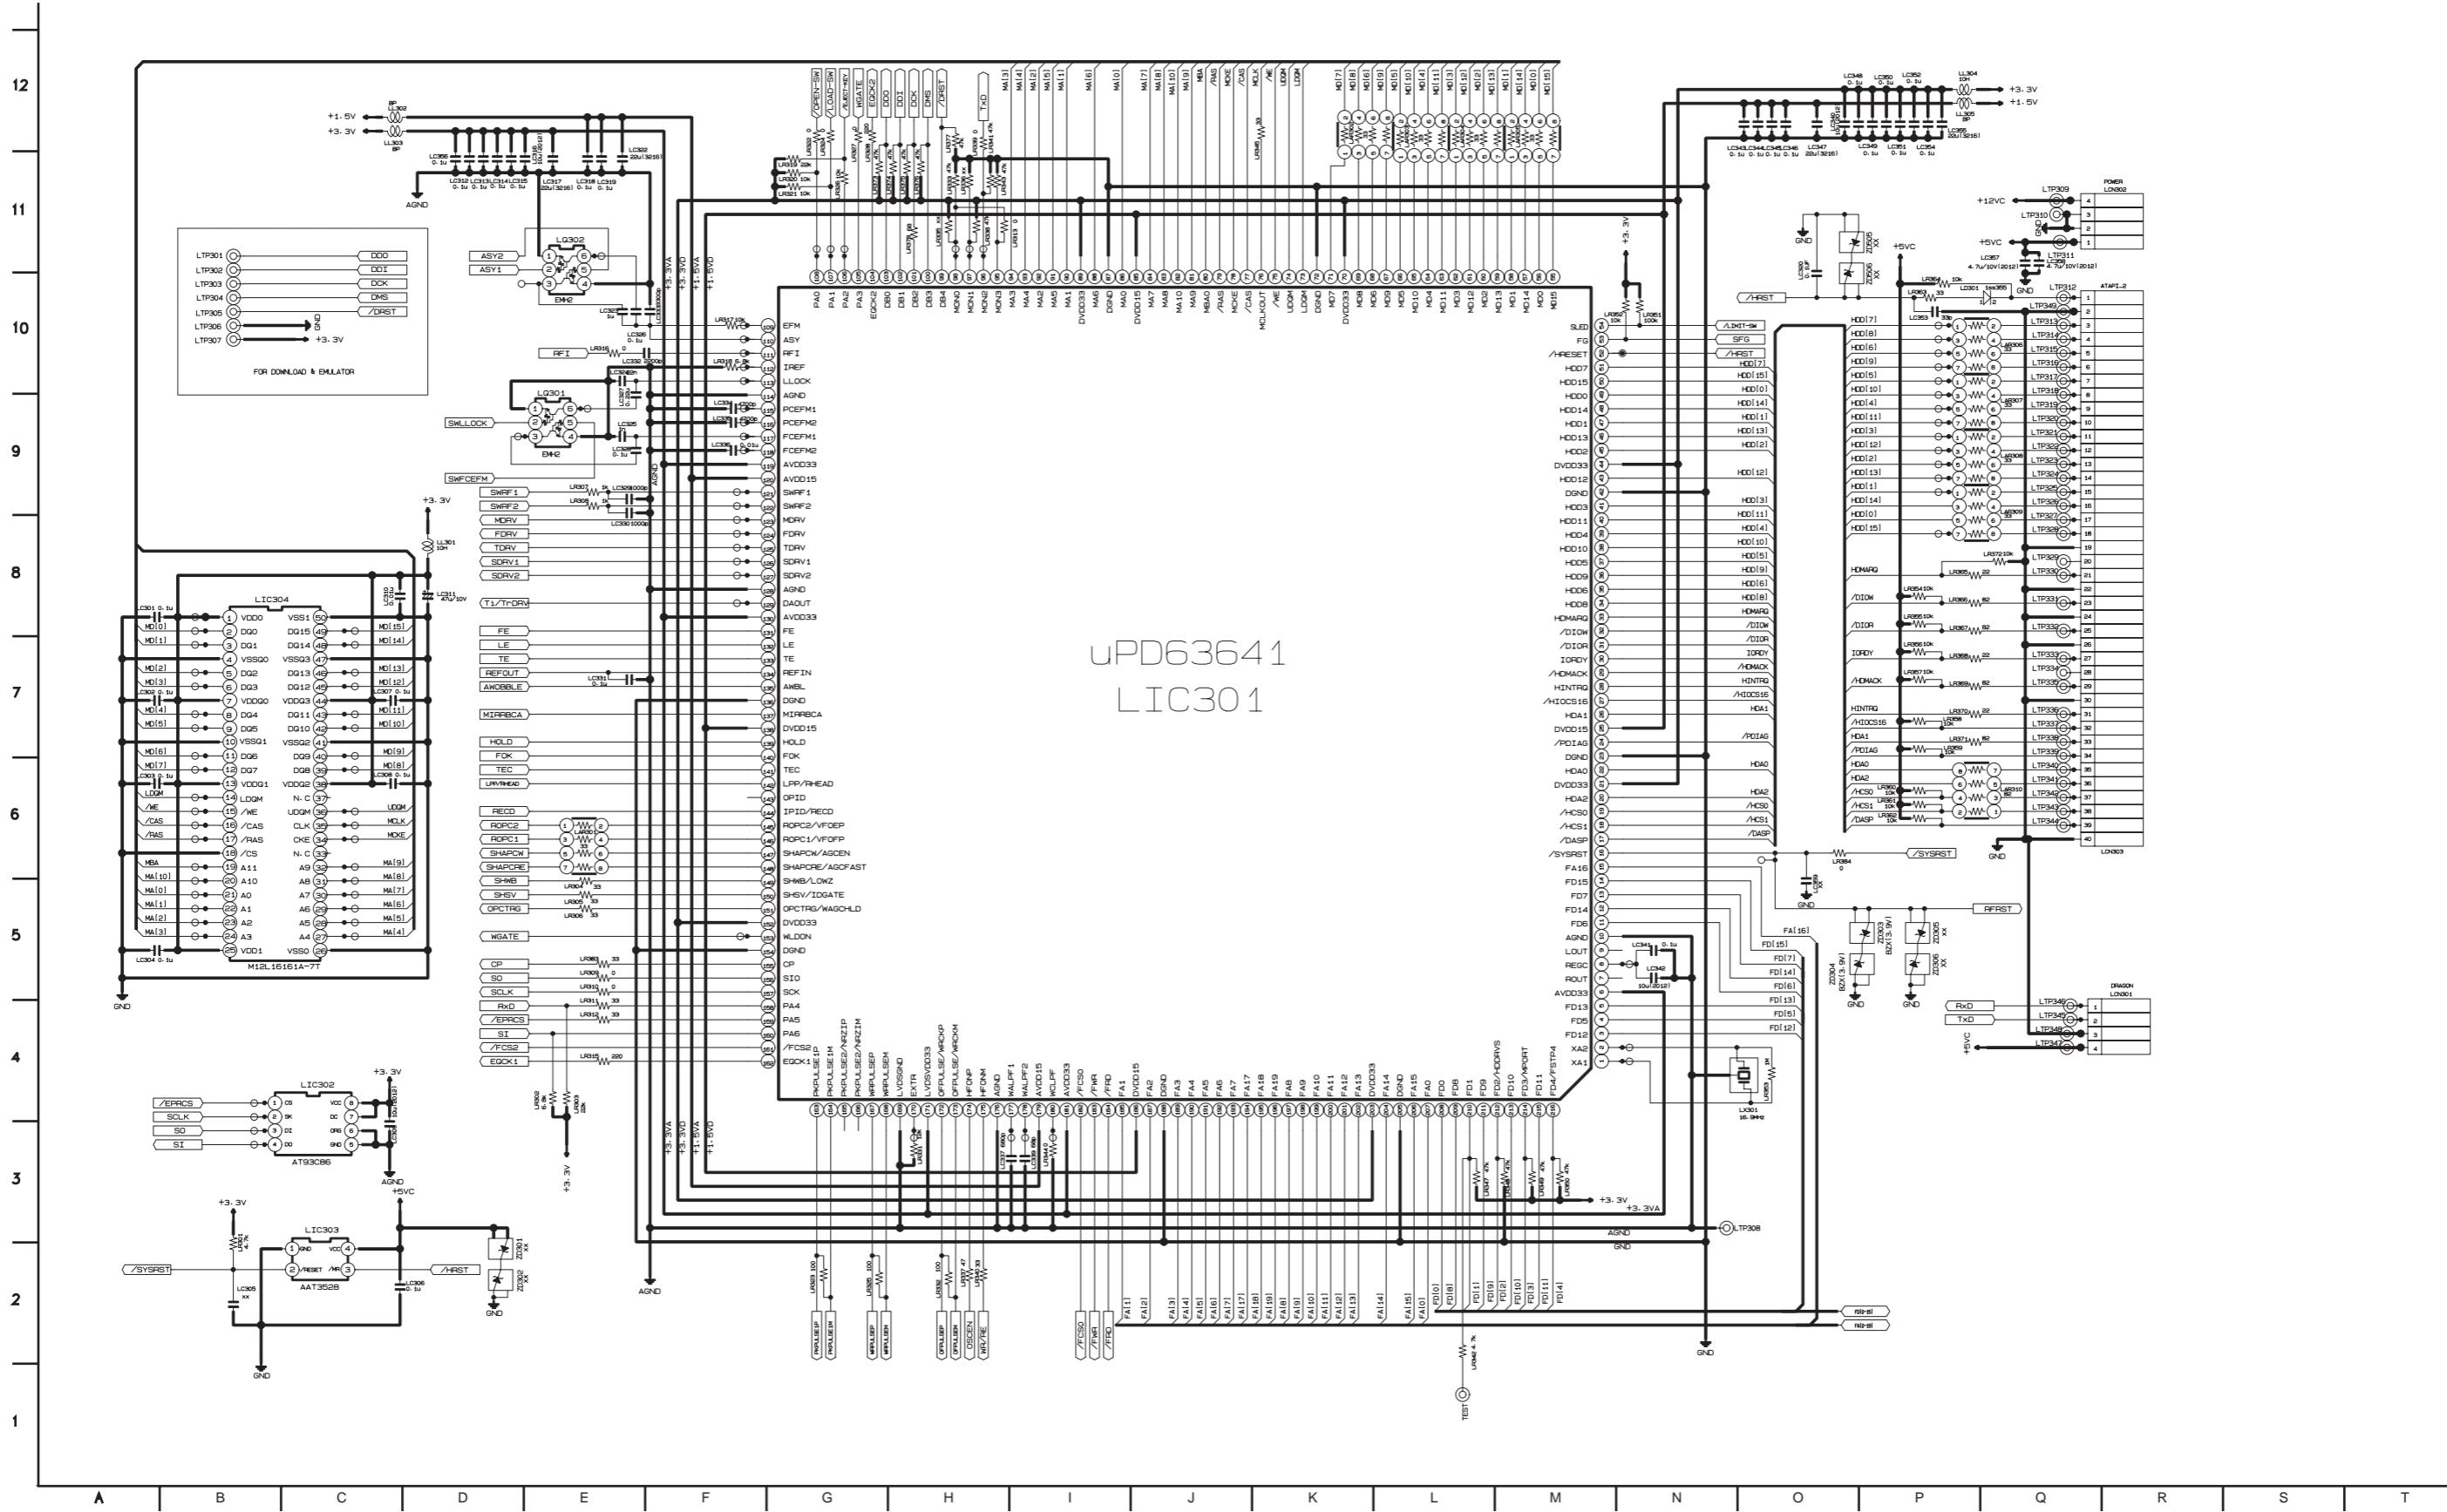

CIRCUIT VOLTAGE CHART


MODE PIN NO.	STATE
LIC 201	
1	0
2	2.35
3	2.35
4	2.36
5	2.36
6	0
7	2.14
8	2.14
9	2.14
10	2.14
11	5.07
12	2.13
13	2.38
14	2.14
15	2.14
16	2.14
17	2.14
18	0
19	2.39
20	0.11
21	2.38
22	0.11
23	0
24	2.38
25	2.38
26	1.71
27	0
28	0
29	0
30	5.06
31	0
32	0
33	0
34	0
35	0
36	0
37	0
38	0
39	0
40	0
41	0
42	0
43	0
44	0
45	0
46	0
47	0
48	0
49	0
50	0
51	0
52	0
53	0
54	0
55	0
56	0
57	0
58	0
59	0
60	0
61	0
62	0
63	0
64	0
65	0
66	0
67	0
68	0
69	0
70	0
71	0
72	0
73	0
74	0
75	0
76	0
77	0
78	0
79	0
80	0
81	0
82	0
83	0
84	0
85	0
86	0
87	0
88	0
89	0
90	0
91	0
92	0
93	0
94	0
95	0
96	0
97	0
98	0
99	0
100	0
101	0
102	0
103	0
104	0
105	0
106	0
107	0
108	0
109	0
110	0
111	0
112	0
113	0
114	0
115	0
116	0
117	0
118	0
119	0
120	0
121	0
122	0
123	0
124	0
125	0
126	0
127	0
128	0
129	0
130	0
131	0
132	0
133	0
134	0
135	0
136	0
137	0
138	0
139	0
140	0
141	0
142	0
143	0
144	0
145	0
146	0
147	0
148	0
149	0
150	0
151	0
152	0
153	0
154	0
155	0
156	0
157	0
158	0
159	0
160	0
161	0
162	0
163	0
164	0
165	0
166	0
167	0
168	0
169	0
170	0
171	0
172	0
173	0
174	0
175	0
176	0
177	0
178	0
179	0

MODE PIN NO.	STATE
LIC 202	
1	3.33
2	5.08
3	0
4	0
5	0
6	0
7	0
8	0
9	0
10	0
11	0
12	0
13	0
14	0
15	0
16	0
17	0
18	0
19	0
20	0
21	0
22	0
23	0
24	0
25	0
26	0
27	0
28	0
29	0
30	0
31	0
32	0
33	0
34	0
35	0
36	0
37	0
38	0
39	0
40	0
41	0
42	0
43	0
44	0
45	0
46	0
47	0
48	0
49	0
50	0
51	0
52	0
53	0
54	0
55	0
56	0
57	0
58	0
59	0
60	0
61	0
62	0
63	0
64	0
65	0
66	0
67	0
68	0
69	0
70	0
71	0
72	0
73	0
74	0
75	0
76	0
77	0
78	0
79	0
80	0
81	0
82	0
83	0
84	0
85	0
86	0
87	0
88	0
89	0
90	0
91	0
92	0
93	0
94	0
95	0
96	0
97	0
98	0
99	0
100	0
101	0
102	0
103	0
104	0
105	0
106	0
107	0
108	0
109	0
110	0
111	0
112	0
113	0
114	0
115	0
116	0
117	0
118	0
119	0
120	0
121	0
122	0
123	0
124	0
125	0
126	0
127	0
128	0
129	0
130	0
131	0
132	0
133	0
134	0
135	0
136	0
137	0
138	0
139	0
140	0
141	0
142	0
143	0
144	0
145	0
146	0
147	0
148	0
149	0
150	0
151	0
152	0
153	0
154	0
155	0
156	0
157	0
158	0
159	0
160	0
161	0
162	0
163	0
164	0
165	0
166	0
167	0
168	0
169	0
170	0
171	0
172	0
173	0
174	0
175	0
176	0
177	0
178	0
179	0

MODE PIN NO.	STATE
LIC 203	
1	0
2	0
3	0
4	0
5	0
6	0
7	0
8	0
9	0
10	0
11	0
12	0
13	0
14	0
15	0
16	0
17	0
18	0
19	0
20	0
21	0
22	0
23	0
24	0
25	0
26	0
27	0
28	0
29	0
30	0
31	0
32	0


PRINTED CIRCUIT DIAGRAMS

1. MAIN P.C.BOARD

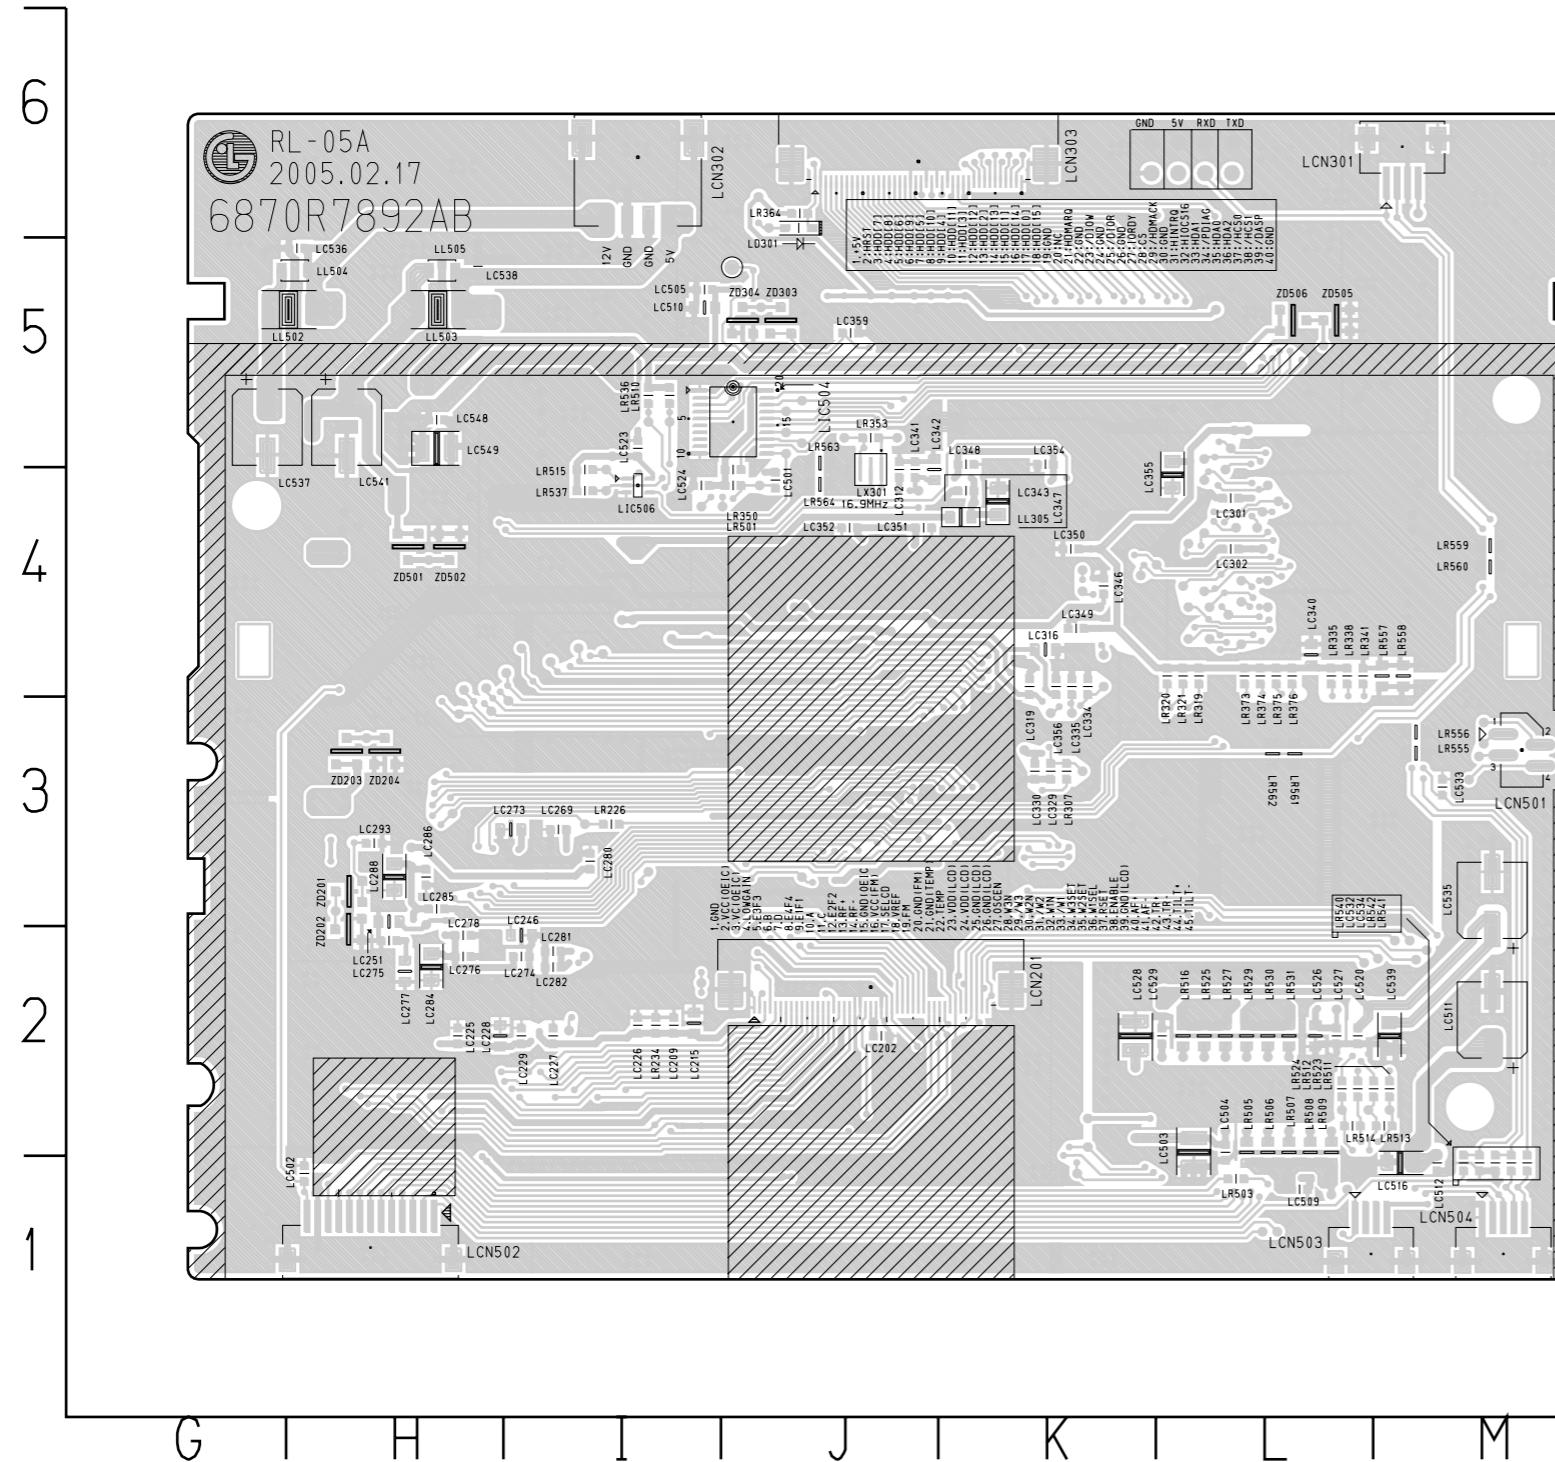

LOCATION GUIDE										
LC202	J2	LC343	K4	LC541	H5	LICT318L4	LICT559L2	LR513	M2	
LC209	I2	LC346	K4	LC548	H5	LICT319L4	LICT561L2	LR514	L2	
LC215	I2	LC347	K4	LC549	H5	LICT321L4	LICT563L2	LR515	I4	
LC225	H2	LC348	K5	LCN201	J2	LICT324L4	LICT566I4	LR516	L2	
LC226	I2	LC349	K4	LCN301	M6	LICT325L4	LICT567I4	LR523	M2	
LC227	I2	LC350	K4	LCN302	I6	LICT328L4	LICT568J5	LR524	L2	
LC228	H2	LC351	J4	LCN303	J6	LICT329L4	LL305	K4	L2	
LC229	I2	LC352	J4	LCN501	M3	LICT330K4	LL502	H5	L2	
LC246	I2	LC354	K5	LCN502	H1	LICT331K4	LL503	H5	LR529	L2
LC251	H3	LC355	L4	LCN503	L1	LICT332L4	LL504	H5	LR530	L2
LC269	I3	LC356	K4	LCN504	M1	LICT333L4	LL505	H5	LR531	M1
LC273	I3	LC359	J5	LD301	J6	LICT335K4	LR226	I3	LR536	I5
LC274	I2	LC501	J4	LIC504	J5	LICT336L4	LR234	I2	LR537	I4
LC275	H2	LC502	H1	LIC506	I4	LICT337K1	LR307	K3	LR540	M1
LC276	H2	LC503	L2	LICT202J3		LICT339K2	LR319	L4	LR541	M1
LC277	H2	LC504	L2	LICT203I2		LICT353K3	LR320	L4	LR542	M1
LC278	H2	LC505	I5	LICT211I2		LICT354K3	LR321	L4	LR555	M3
LC280	I3	LC509	L1	LICT238H3		LICT361K4	LR335	L4	LR556	M3
LC281	I2	LC510	I5	LICT247I3		LICT362K3	LR338	L4	LR557	M4
LC282	I2	LC511	M2	LICT265I3		LICT364K3	LR341	L4	LR558	M4
LC284	H2	LC512	M1	LICT277H3		LICT370J4	LR350	J4	LR559	M4
LC285	H3	LC516	M1	LICT301L4		LICT374J5	LR353	J5	LR560	M4
LC286	H3	LC520	L2	LICT302L5		LICT378J5	LR364	J6	LR561	L3
LC288	H3	LC523	I5	LICT303L5		LICT383J5	LR373	L4	LR562	L3
LC293	H3	LC524	I4	LICT304L4		LICT501J4	LR374	L4	LR563	J5
LC301	L4	LC526	L2	LICT305L4		LICT502I4	LR375	L4	LR564	J4
LC302	L4	LC527	L2	LICT306L4		LICT505L1	LR376	L4	LR301	J4
LC312	J4	LC528	K2	LICT307L4		LICT516L2	LR501	J4	ZD201	H3
LC316	K4	LC529	L2	LICT308L4		LICT517L2	LR503	L1	ZD202	H2
LC319	K4	LC532	M1	LICT309L4		LICT526J4	LR505	L2	ZD203	H3
LC329	K3	LC533	M3	LICT310L4		LICT539J5	LR506	L2	ZD204	H3
LC330	K3	LC534	M1	LICT311K4		LICT541J5	LR507	L2	ZD303	J5
LC334	K4	LC535	M3	LICT312L4		LICT543J5	LR508	L2	ZD304	J5
LC335	K4	LC536	H5	LICT313L4		LICT545J5	LR509	L2	ZD501	H4
LC340	L4	LC537	G5	LICT314L4		LICT554I5	LR510	I5	ZD502	H4
LC341	J4	LC538	H5	LICT315L4		LICT555I5	LR511	M2	ZD505	L5
LC342	J4	LC539	M2	LICT316L4		LICT558M2	LR512	L2	ZD506	L5

2. MAIN P.C.BOARD

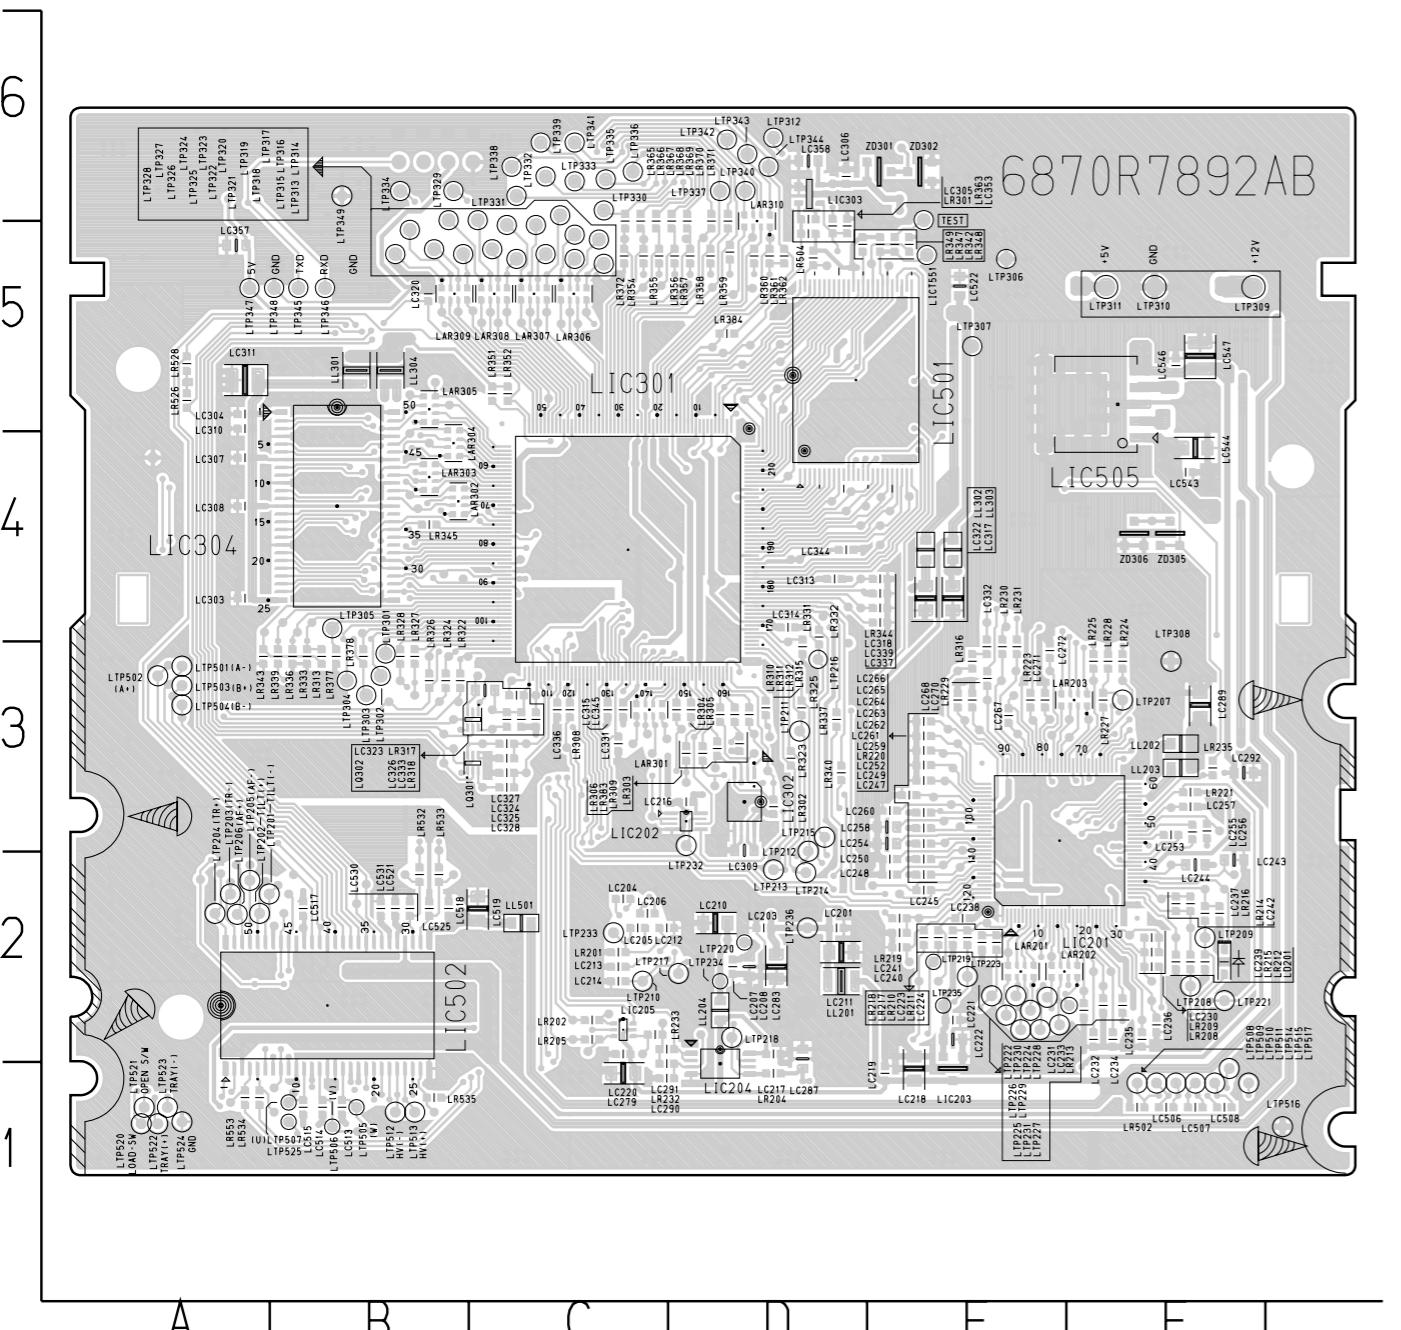

LOCATION GUIDE

EQRF	E3	LC235	F2	LC292	F3	LC518	B2	LICT220E2	LICT272D3	LICT377D4	LICT544D5	LR220	E3	LR339	B3	LR553	A1	LTP305	B4	LTP346	B5	
FE	E3	LC236	F2	LC303	A4	LC519	C2	LICT221F2	LICT273C3	LICT384B5	LICT546D5	LR221	F3	LR340	D3	LTP201	A2	LTP306	E5	LTP347	A5	
LAR201	E2	LC237	F2	LC304	A5	LC521	B2	LICT222E3	LICT274C3	LICT385C5	LICT547D5	LR223	E3	LR342	E5	LTP202	A2	LTP307	E5	LTP348	B5	
LAR202	E2	LC238	E2	LC305	D6	LC522	E5	LICT223F2	LICT275C3	LICT386C5	LICT548D5	LR224	F3	LR343	A3	LTP203	A2	LTP308	F3	LTP349	B6	
LAR203	F3	LC239	F2	LC306	D6	LC525	B2	LICT224C3	LICT276C3	LICT387C5	LICT549E5	LR225	F3	LR344	E4	LTP204	A2	LTP309	F5	LTP501	A3	
LAR301	C3	LC240	E2	LC307	A4	LC530	B2	LICT225F2	LICT277B4	LICT388C5	LICT550D5	LR227	F3	LR345	B4	LTP205	A2	LTP310	F5	LTP502	A3	
LAR302	B4	LC241	E2	LC308	A4	LC531	B2	LICT226C2	LICT320B5	LICT389C5	LICT551E5	LR228	F3	LR347	E5	LTP206	A2	LTP311	F5	LTP503	A3	
LAR303	B4	LC242	F2	LC309	D3	LC543	F4	LICT227F2	LICT322B4	LICT390C5	LICT552E5	LR229	E3	LR348	E5	LTP207	F3	LTP312	D6	LTP504	A2	
LAR304	B4	LC243	F2	LC310	A5	LC544	F4	LICT228F2	LICT323B4	LICT391C5	LICT556D4	LR230	E3	LR349	D5	LTP208	F2	LTP313	C5	LTP505	B6	
LAR305	B5	LC244	F2	LC311	A5	LC546	F5	LICT230E2	LICT326B4	LICT392C5	LICT557D5	LR231	E3	LR351	C5	LTP209	F2	LTP314	C5	LTP506	B6	
LAR306	C5	LC245	E2	LC313	D4	LC547	F5	LICT232E2	LICT327B4	LICT393C5	LICT560B1	LR232	C1	LR352	C5	LTP210	C2	LTP315	C5	LTP507	B6	
LAR307	C5	LC247	E2	LC314	D4	LC201	F2	LICT234E2	LICT334B4	LICT394C5	LICT562B2	LR233	C2	LR354	C5	LTP211	D3	LTP316	C5	LTP508	F5	
LAR308	C5	LC248	E2	LC315	C3	LE	E3	LICT236E3	LICT338C2	LICT395C5	LICT564B2	LR235	F3	LR355	C5	LTP212	D2	LTP317	C6	LTP509	F5	
LAR309	B5	LC249	E2	LC317	E4	LC201	E3	LICT239E3	LICT340B3	LICT396C5	LICT565B2	LR230	D1	LR356	D5	LTP213	D2	LTP318	C5	LTP510	F5	
LAR310	D5	LC250	E2	LC318	E4	LC202	D3	LICT243E3	LICT341B3	LICT397C5	LL201	LD2	LR302	D3	LTP357	D5	LTP214	D2	LTP319	C5	LTP511	F5
LC201	D2	LC252	E3	LC320	B5	LC203	E1	LICT244F3	LICT342A2	LICT503A1	LL202	F3	LR303	D3	LTP358	D5	LTP215	D3	LTP320	C5	LTP512	B6
LC203	D2	LC253	F3	LC322	E4	LC204	D1	LICT245F3	LICT343D5	LICT504B1	LL203	F3	LR304	D3	LTP359	D5	LTP216	D3	LTP321	C5	LTP513	B6
LC204	C2	LC254	E3	LC323	C3	LC205	C2	LICT246E3	LICT344D3	LICT505B1	LL204	D2	LR305	D3	LTP360	D5	LTP217	D2	LTP322	C5	LTP514	F5
LC205	C2	LC255	F3	LC324	C3	LC301	C2	LICT248E3	LICT345D3	LICT513B2	LL301	B5	LR306	D3	LR361	D5	LTP218	D2	LTP323	C5	LTP515	F5
LC206	C2	LC256	F3	LC325	C3	LC302	D3	LICT249E3	LICT346D3	LICT514B2	LL302	E4	LR308	C3	LTP362	D5	LTP219	E2	LTP324	B5	LTP516	G6
LC207	D2	LC257	F3	LC326	C3	LC303	D6	LICT250E3	LICT347D3	LICT515B2	LL303	E4	LR309	D3	LTP363	D5	LTP220	D2	LTP325	B5	LTP517	F5
LC208	D2	LC258	E3	LC327	C3	LC304	B4	LICT251E3	LICT349C3	LICT518B2	LL304	B5	LR310	D3	LTP365	C5	LTP221	F2	LTP326	B5	LTP520	A3
LC210	D2	LC259	E3	LC328	C3	LC501	D5	LICT252E3	LICT350C3	LICT519B2	LL501	C2	LR311	D3	LTP366	C5	LTP222	E2	LTP327	B5	LTP521	A3
LC211	D2	LC260	E3	LC331	C3	LC502	B2	LICT253E3	LICT351C3	LICT520B3	LL301	C3	LR312	D3	LTP367	C5	LTP223	E2	LTP328	B5	LTP522	A3
LC212	C2	LC261	E3	LC332	E3	LC505	F5	LICT254E3	LICT352C3	LICT521B3	LL302	C3	LR313	B3	LTP368	D5	LTP224	E2	LTP329	B6	LTP523	A3
LC213	C2	LC262	E3	LC333	C3	LICT201E2	LICT355E3	LICT355B3	LICT524B3	LR201	C2	LR315	D3	LR369	D5	LTP225	E2	LTP330	C6	LTP524	A3	
LC214	C2	LC263	E3	LC336	C3	LICT204D2	LICT356E3	LICT356C3	LICT525D4	LR202	C2	LR316	E3	LR370	D5	LTP226	E2	LTP331	C6	LTP525	B6	
LC216	D3	LC264	E3	LC337	E4	LICT205C3	LICT357E3	LICT357C3	LICT527B3	LR204	D1	LR317	C3	LR371	D5	LTP227	E2	LTP332	C6	RRF		
LC217	D2	LC265	E3	LC339	E4	LICT206F2	LICT358E3	LICT358C3	LICT528D4	LR205	C2	LR318	C3	LR372	C5	LTP228	F2	LTP333	C6	TE		
LC218	E1	LC266	E3	LC344	D4	LICT207F2	LICT359E3	LICT359E4	LICT529D4	LR208	F2	LR322	B3	LR373	B3	LTP229	E2	LTP334	B6	TEST		
LC219	E1	LC267	E3	LC345	C3	LICT208F2	LICT360E3	LICT360C3	LICT530D4	LR209	F2	LR323	D3	LR378	B3	LTP230	E2	LTP335	C6	ZD301	E6	
LC220	C2	LC268	E3	LC353	D5	LICT209F2	LICT361F3	LICT363C3	LICT531E4	LR210	E2	LR324	B3	LR383	D3	LTP231	E2	LTP336	C6	ZD302	A6	
LC221	E2	LC270	E3	LC357	A5	LICT210E2	LICT262F3	LICT365B3	LICT532D4	LR211	E2	LR325	D3	LR384	D5	LTP232	D3	LTP337	D6	ZD303	F4	
LC222	E2	LC271	E3	LC358	D6	LICT212F2	LICT263F3	LICT366B3	LICT533E4	LR212	F2	LR326	B3	LR502	F1	LTP233	C2	LTP338	C6	ZD304	F4	
LC223	E2	LC272	E3	LC506	F1	LICT213F2	LICT264F3	LICT367B3	LICT534E4	LR213	F2	LR327	B3	LR504	D5	LTP234	D2	LTP339	C6	ZD305	F4	
LC224	E2	LC279	C1	LC507	F1	LICT214F2	LICT266D3	LICT368D3	LICT535E4	LR214	F2	LR328	B3	LR526	A5	LTP235	E2	LTP340	D6	ZD306	F4	
LC230	F2	LC283	D2	LC508	F1	LICT215F2	LICT267F3	LICT369D3	LICT536E4	LR215	F2	LR331	D3	LR528	A5	LTP236	D2	LTP341	C6	ZD307	F4	
LC231	F2	LC287	D2	LC513	B1	LICT216E2	LICT268C3	LICT371B4	LICT537D5	LR216	F2	LR332	D4	LR532	B2	LTP230	B3	LTP342	D6	ZD308	F4	
LC232	F2	LC289	F3	LC514	B1	LICT217F2	LICT269D3	LICT372B4	LICT538D5	LR217	E2	LR333	B3	LR533	B2	LTP230	B3	LTP343	D6	ZD309	F4	
LC233	F2	LC290	C1	LC515	B1	LICT218E2	LICT270D3	LICT373B4	LICT540D5	LR218	E2	LR336	B3	LR534	A1	LTP203	B3	LTP344	D6	ZD310	F4	
LC234	F2	LC291	C2	LC517	B2	LICT219E2	LICT271B3	LICT374D4	LICT542D5	LR219	F2	LR337	D3	LR535	B1	LTP204	B3	LTP345	B5	ZD311	F4	