marantz

SCHEMATIC DIAGRAM FOR Model Pm-4

Q401,Q402,Q403,Q404 2SC2545(E)	Q413,Q414 2SD666(C)	QE01,QE02,QE03,QE04 2SA750(E)	Q701, Q702 M47F	Q707, Q708 2SA970(GR,BL)	Q713, Q714 2SC1568(S)	Q719, Q720 2SC2564(R or O)	Q725,Q726 2SA733(Q)		Q755, Q756,Q757, Q758 W068	Q811 2SD1029(D)	Q814 2SA750(E)	Q818 2SA750(E)	Q823, Q824 2SC1400(E)	QY01, QY02 SLP-144B
Q405, Q406,Q407, Q408 2SA750(E)	Q417, Q418 1S1555	QE05, QE06 2SD666(C)	Q703, Q704 2SC2259(F or G)	Q709,Q710 2SA949(Y)	Q715, Q716 2SC2824(Y)	Q721,Q722 2SA1094(R or O)	Q727, Q728 HZ12A2L	Q741,Q742,Q747~Q750 1S1555	Q801 ~ Q806 DS-135D	Q812 2S8813(D)	Q815 2SA750(E)	Q819,Q820, Q827 1S1555	Q825 2SD517(L or K)	
Q409,Q410,Q411,Q412 2SC1400(E)	Q415, Q416 2SB646(C)		Q705,Q706 2SC1400(E)	Q711, Q712 2SC2229(Y)	Q717, Q718 2SA1184(Y)	Q723, Q724 2SC945(Q)	Q729 ~ Q736 1S1555	Q751,Q752,Q753,Q754 1S2471	Q807,Q808,Q809,Q810 S3V820	Q813 2SC1400(E)	Q816, Q817 2SC1400(E)	Q821,Q822 HZ6B1L	Q826 1S2471	

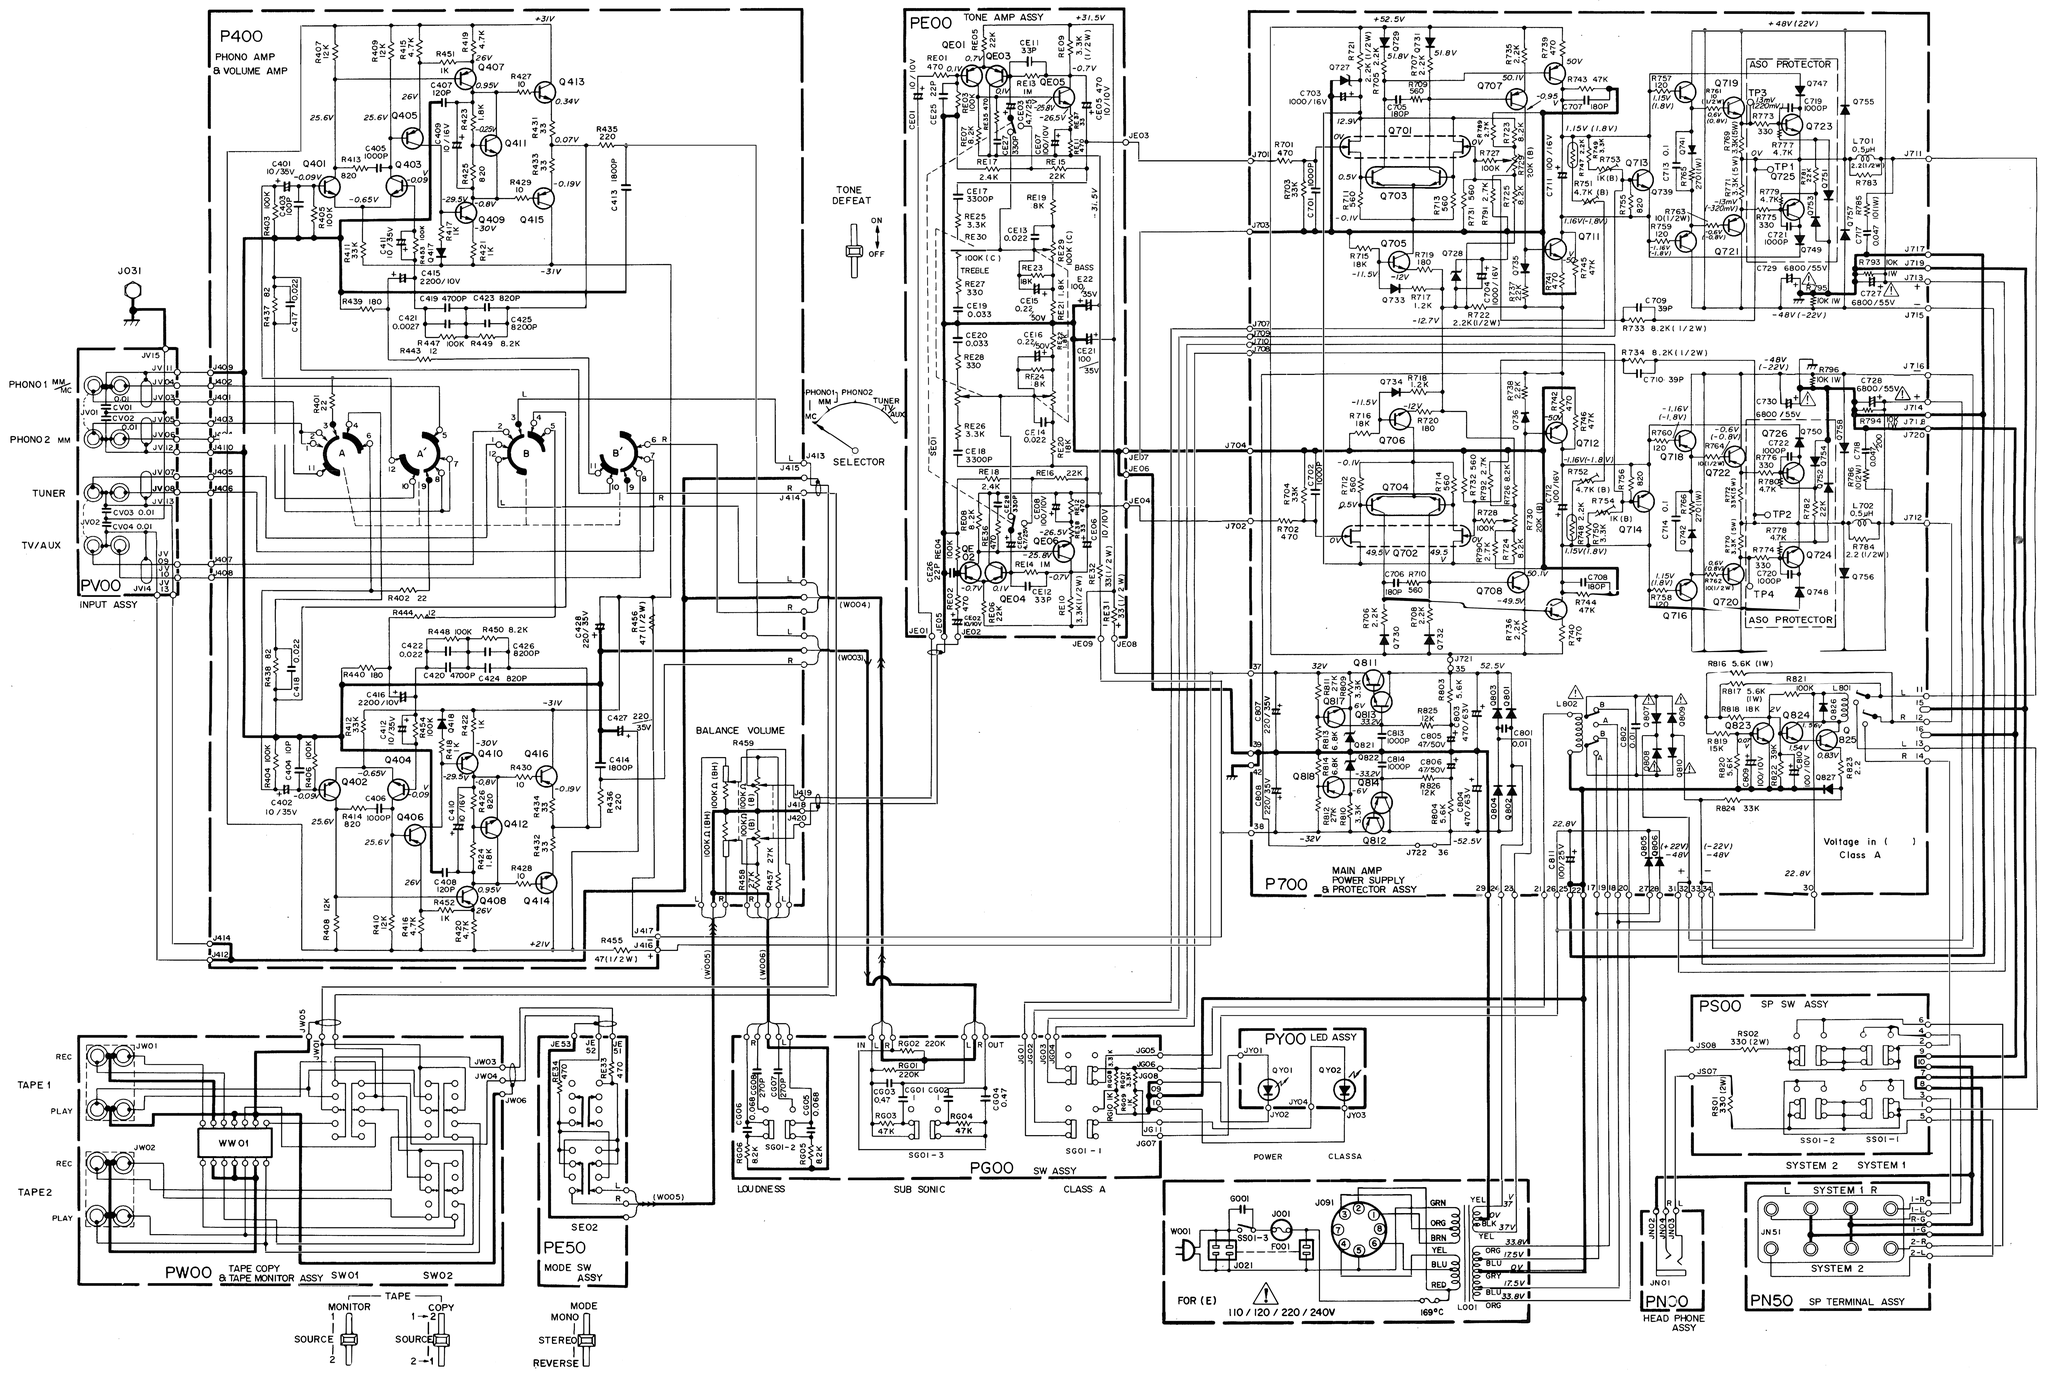

Note on safety: The parts marked with ⚠ are important parts on the safety. Please use the parts having the designated parts number without fail.

Components and wiring are subject to change for modification without notice.

202H856010 Printed in Japan 1980/9