Ref. No. 3469

ONKYO SERVICE MANUAL

QUARTZ SYNTHESIZED TUNER AMPLIFIER

MODEL TX-9022RDS
MODEL TX-SV9030

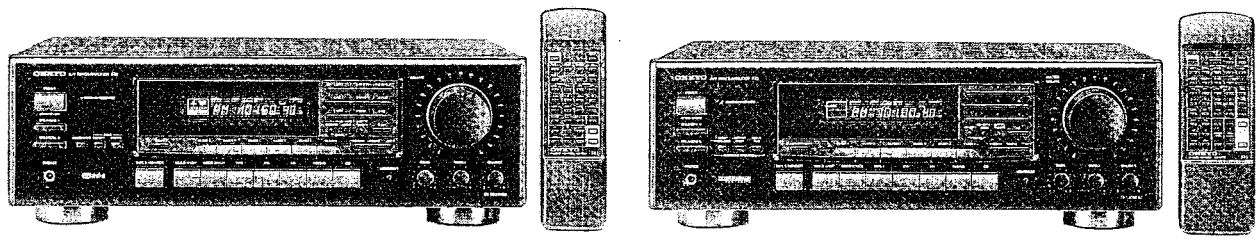

SAFETY-RELATED COMPONENT WARNING!!
COMPONENTS IDENTIFIED BY MARK ⚠ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

ONKYO
AUDIO COMPONENTS

TABLE OF CONTENTS

SPECIFICATIONS

AMPLIFIER SECTION

	TX-9022RDS	TX-SV9030
Power Output:	USA & Canadian models: 100 watts per channel, min. RMS, at 8 ohms, both channels driven, from 40 Hz to 20 kHz with no more than 0.2% THD. Other than USA & Canadian models: Continuous output 2 × 100 watts at 4 ohms 1 kHz (DIN) 2 × 75 watts at 8 ohms 1 kHz (DIN)	Stereo mode Front L/R channels 60 watts per channel min. RMS. at 8 ohms, both channels driven, from 20 Hz to 20,000 Hz, with no more than 0.08% total harmonic distortion. Continuous Power output: 2 × 90 watts 4 ohms 1 kHz (DIN) 2 × 70 watts 8 ohms 1 kHz (DIN) Surround mode Front L/R and center channels 50 watts per channel min. RMS at 8 ohms, with no more than 0.08% total harmonic distortion at 1,000 Hz Rear channels 15 watts per channel min. RMS at 8 ohms with no more than 0.3% total harmonic distortion at 1,000 Hz
Total Harmonic Distortion:	0.08% at power 30 watts	0.08% at rated power (FRONT)
IM Distortion:	0.08% at power 30 watts	0.08% at rated power (FRONT)
Damping Factor:	50 at 8 ohms	50 at 8 ohms (FRONT)
Sensitivity and Impedance:	Phono: 2.5 mV/50 kohms CD/Tape Play: 150 mV/50 kohms Tape Rec: 150 mV/2.2 kohms	Phono: 2.5 mV/50 kohms CD/Tape Play: 150 mV/50 kohms Tape Rec: 150 mV/2.2 kohms Mono out (SUBWOOFER): 1V 2.2 kohms
Phono Overload:	120 mV RMS. at 1,000 Hz, 0.5% THD.	120 mV RMS. at 1,000 Hz, 0.5% THD.
Frequency Response:	20 to 30,000 Hz, +/–1 dB	20 to 30,000 Hz, +/–1 dB
RIAA Deviation:	20 to 20,000 Hz, +/–0.8 dB	20 to 20,000 Hz, +/–0.8 dB
Tone Control:	BASS: +/–10 dB at 100 Hz TREBLE: +/–10 dB at 10,000 Hz	BASS: +/–10 dB at 100 Hz TREBLE: +/–10 dB at 10,000 Hz
Signal to Noise Ratio:	PHONO: 80 dB (IHF A, 5 mV input) CD/TAPE: 100 dB (IHF A)	PHONO: 80 dB (IHF A, 5 mV input) CD/TAPE: 100 dB (IHF A)

VIDEO SECTION

Signal sensitivity and impedance:	VDP/VCR input, output: 1 Vp-p, 75 ohms	VDP/VCR input, output: 1 Vp-p, 75 ohms

TUNER SECTION

FM:

Tuning Range:	87.5 — 108.0 MHz	87.5 — 108.0 MHz
Usable Sensitivity:	Mono: 11.2 dBf, 1.0 µV (75 ohms) Stereo: 17.2 dBf, 2.0 µV (75 ohms)	Mono: 11.2 dBf, 1.0 µV (75 ohms) Stereo: 17.2 dBf, 2.0 µV (75 ohms)
50dB Quieting Sensitivity:	Mono: 18.2 dBf, 2.2 µV (75 ohms) Stereo: 38.2 dBf, 22 µV (75 ohms)	Mono: 18.2 dBf, 2.2 µV (75 ohms) Stereo: 38.2 dBf, 22 µV (75 ohms)
Capture Ratio:	1.5 dB	1.5 dB
Image Rejection Ratio:	USA & Canadian models: 40 dB Other area models: 85 dB	USA & Canadian models: 40dB Other area models: 85 dB
IF Rejection Ratio:	90 dB	90 dB
Signal-to-Noise Ratio:	Mono: 73 dB Stereo: 67 dB	Mono: 73 dB Stereo: 67 dB
Alternate Channel Attenuation:	55 dB	55 dB
Selectivity:	50 dB (DIN)	50 dB (DIN)
AM Suppression Ratio:	50 dB	50 dB
Total Harmonic Distortion:	Mono: 0.15% Stereo: 0.25%	Mono: 0.15% Stereo: 0.25%
Frequency Response:	30 — 15,000 Hz +/-1.5 dB	30 — 15,000 Hz +/-1.5 dB
Stereo Separation:	45 dB at 1 kHz/30 dB at 100 — 10,000 Hz	45 dB at 1 kHz/30 dB at 100 — 10,000 Hz

AM:

Tuning Range:	USA & Canadian models: 530 — 1710 kHz (10 kHz steps) European models: 522 — 1611 kHz (9kHz steps) Worldwide models 531 — 1602 kHz (9 kHz steps), 530 — 1710 kHz (10 kHz steps)	USA & Canadian models: 530 — 1710 kHz (10 kHz steps) European models: 522 — 1611 kHz (9kHz steps) Worldwide models 531 — 1602 kHz (9 kHz steps), 530 — 1710 kHz (10 kHz steps)
Usable Sensitivity:	30 µV	30 µV
Image Rejection Ratio:	40 dB	40 dB
IF Rejection Ratio:	40 dB	40 dB
Signal-to-Noise Ratio:	40 dB	40 dB
Total Harmonic Distortion:	0.7%	0.7%

GENERAL

Power Supply:	European models: AC 230V, 50 Hz	European models: AC 230V, 50 Hz
Dimensions (W × H × D):	455 × 150 × 331 mm 17-15/16" × 5-7/8" × 13-1/16"	455 × 150 × 331 mm 17-15/16" × 5-7/8" × 13-1/16"
Weight:	9.5 kg (20.9 lbs)	10.2 kg (22.5 lbs)

Remote control transmitter RC-223S

Transmitter:	Infrared
Signal range:	Approx. 5 meters (16ft. × 4˝)
Power supply:	Two "AA" batteries(1.5V × 2)

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1.Replacing the fuses

This symbol located near the fuse indicates that the fuse used is fast operating type. For continued protection against fire hazard, replace with same type fuse. For fuse rating, refer to the marking adjacent to the symbol.

Ce symbole indique que le fusible utilise est a rapide. Pour une protection permanente, n'utiliser que des fusibles de meme type. Ce darnier est indique la qu le present symbol est appose.

Circuit No.	Part No.	Descriptions	Remarks
F902	252076	3.15A-SE-EAK,Primary	
F903	252075	2.5A-SE-EAK,AC outlet	
F921,F922	252079	6.3A-SE-EAK,SEcondary	TX-SV9030 only

2.Changing the band step

With the exception of the models below, a BAND STEP selector switch is not provided.

<AM>

MODEL	BAND STEP	R727
MD	10kHz to 9kHz	47 kΩ
MP	9kHz to 10kHz	22 kΩ

3.Memroy preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory,the power switch must be turned on and off a few times each month to keep the back-up system operative. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit.
On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

EXPLODED VIEW

MODEL TX-SV9030

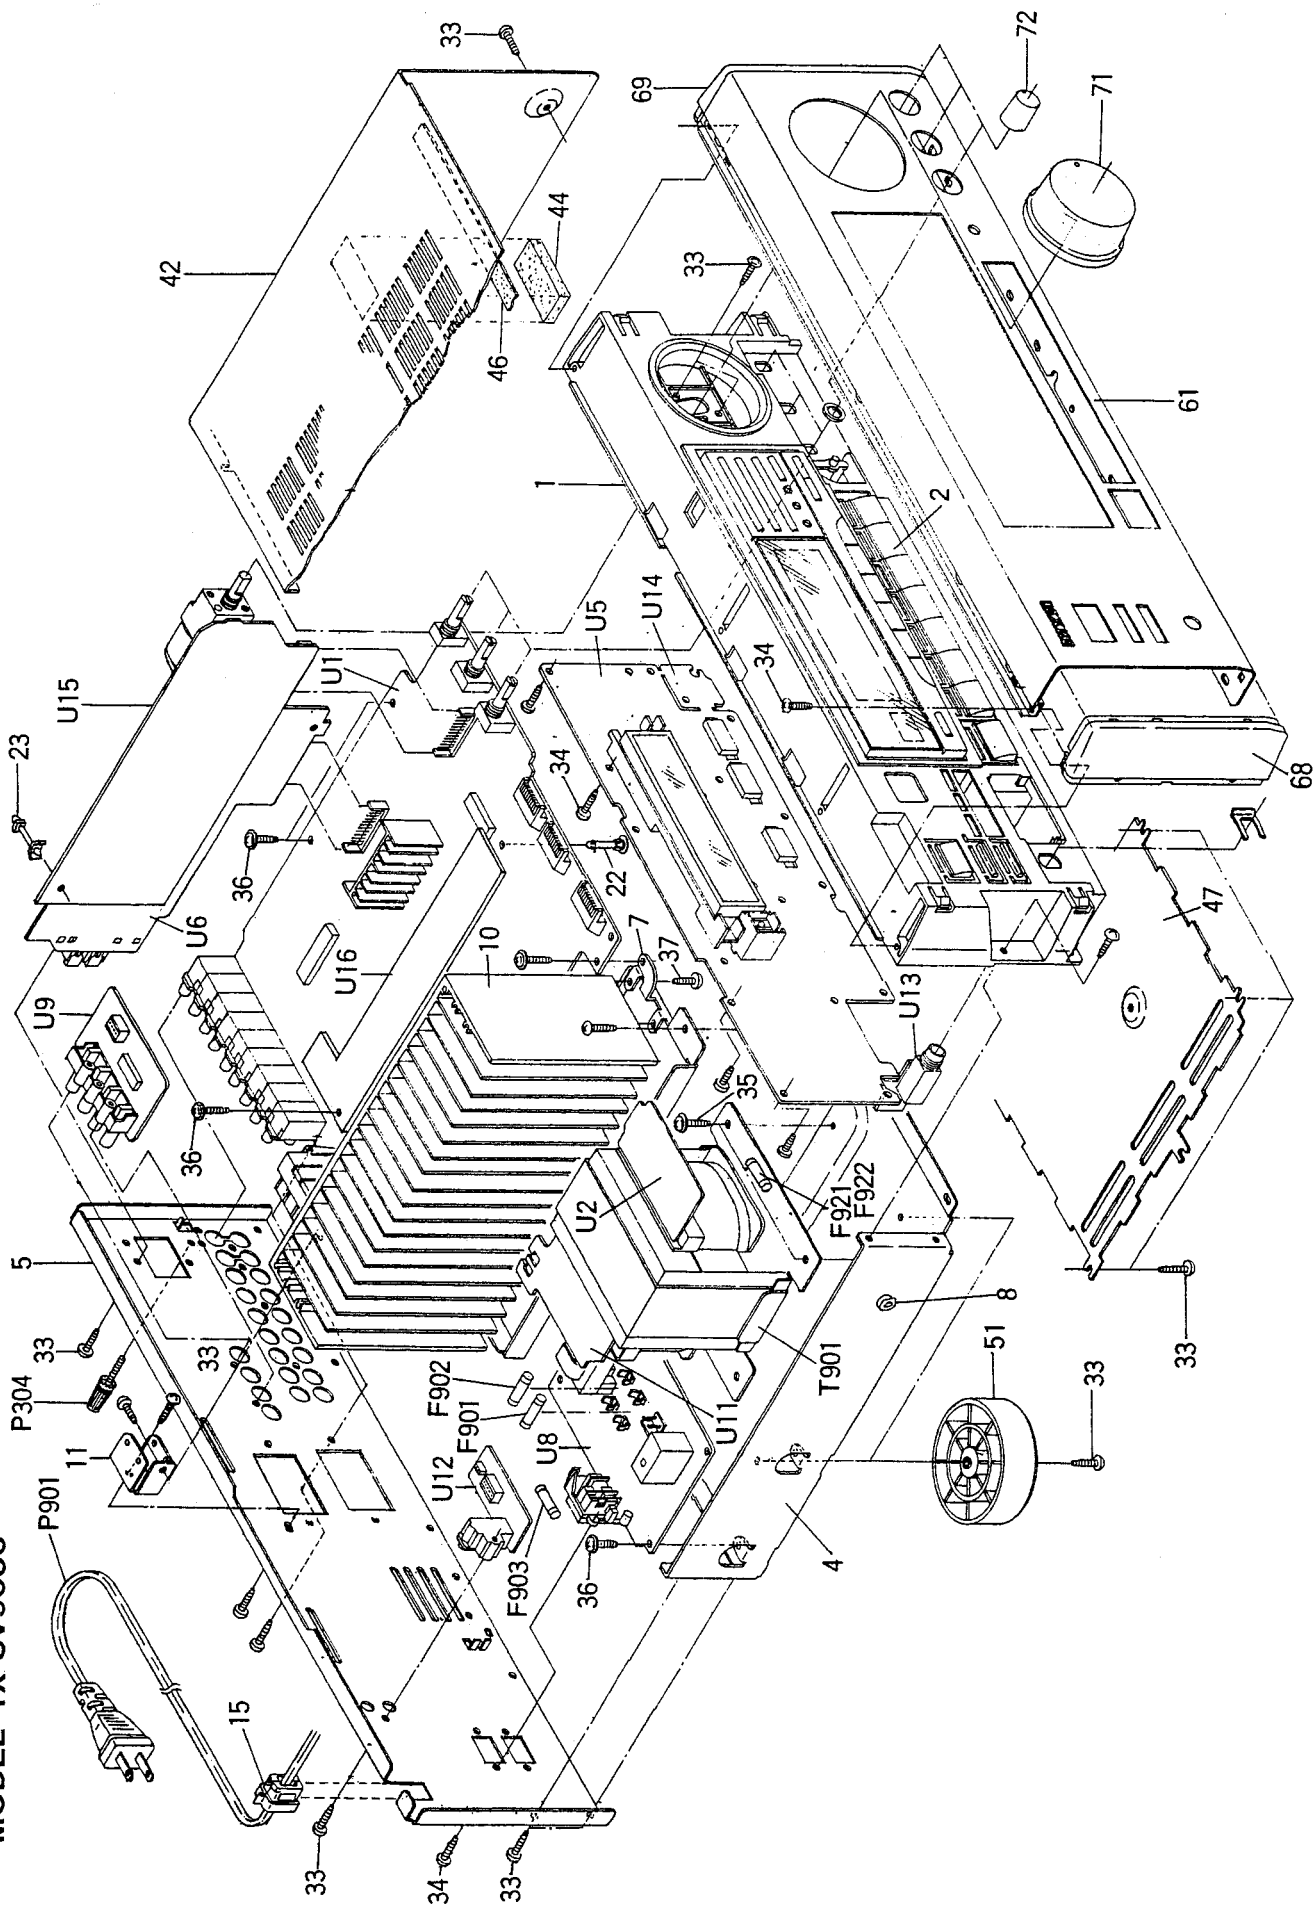

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
1	27110794Y	Front bracket
2	28324929AY	Knob CLA
3	28175209Y	Isolating plate
4	27100278AY	Chassis
5	27121827AY	Rear panel
7	27130727Y	Bracket H
8	27270212Y	Spacer
10	27160330AY	Radiator
11	27141623Y	Retainer H
13	27141530AY	Retainer HS-2
15	27300750	Bushing cord
22	27190524	KGLS-14RF,Holder
23	27190062	KGLS-12S,Holder
32	801433	3SMS8W.SW+14B(BC),Special screw
33	834430088	3TTS+8B(BC),Self-tapping screw
34	833430080	3TTP+8P(BC),Self-tapping screw
35	830440089	4TTC+8B(BC),Self-tapping screw
36	831130088	3TTW+8B,Self-tapping screw
37	834430108	3TTS+10B(BC),Self-tapping screw
39	82143006	3P+6FN(BC),Pan head screw
42	28184476BY	Top cover
44	28140265	Cushion
46	28140546	Cushion
47	27170302Y	Bottom panel
51	27175251AY	Leg
61	1A473121Y	Front panel ass'y
62	8910301	CS-3,Ring CS
63	28191673Y	Clear plate
64	28198782Y	Facet
67	28135199	Badge
68	28125255A	End cap L
69	28125256A	End cap R
71	28324933A	Knob VOLUME
72	28324845B	Knob LEVEL
F902	252076	⚠ 3.15A-SE-EAK,Fuse
F903	252075	⚠ 2.5A-SE-EAK,Fuse
F921,F922	252079	⚠ 6.3A-SE-EAK,Fuse
P304	25060044	Terminal
P901	253193HIT	⚠ AS-CEE,Power supply cord
Q521,Q522	2202523,	2SC4468-O,
	2202524,	2SC4468-Y,
	2202526,	2SC4468-P,
	2202292 or	2SC3182N-R or
	2202293	2SC3182N-O,Transistors

REF.NO.	PART NO.	DESCRIPTION
Q523,Q524	2202513,	2SA1695-O,
	2202514,	2SA1695-Y,
	2202516,	2SA1695-P,
	2202282 or	2SA1265N-R or
	2202283	2SA1265N-O,Transistors
Q821	2202253,	2SC4467-O,
	2202254,	2SC4467-Y,
	2202256,	2SC4467-P,
	2202502 or	2SC3181N-R or
	2202503	2SC3181N-O,Transistors
Q822	2202373,	2SC4466-O,
	2202374,	2SC4466-Y,
	2202375,	2SC4466-P,
	2202352 or	2SC3180N-R or
	2202353	2SC3180N-O,Transistors
Q823	2202243,	2SA1694-O,
	2202244,	2SA1694-Y,
	2202246,	2SA1694-P,
	2202492 or	2SA1264N-R or
	2202493	2SA1264N-O,Transistors
Q824	2202363,	2SA1693-O,
	2202364,	2SA1693-Y,
	2202365,	2SA1693-P,
	2202342 or	2SA1263N-R or
	2202343	2SA1263N-O,Transistors
T901	2300984Y	⚠ NPT-1196P,Power transformer
U1	1A472592-1AY	NAAR-4892-1A,Main circuit pc board ass'y
U2	1A472593-1AY	NAETC-4893-1A,Power supply circuit pc board ass'y
U5	1A472597-1AY	NADIS-4897-1A,Display circuit pc board ass'y
U6	1A472598-1AY	NARF-4898-1A,Tuner circuit pc board ass'y
U8	1A472500-1AY	NAPS-4900-1A,Power supply circuit pc board ass'y
U9	1A472501-1Y	NAETC-4901-1,Video circuit pc board ass'y
U11	1A472503-1Y	NAETC-4903-1,Primary circuit pc board ass'y
U12	1A472504-1Y	NAETC-4904-1,RI terminal pc board ass'y
U13	1A472505-1Y	NAETC-4905-1,Headphone terminal pc board ass'y
U14	1A472506-1Y	NASW-4906-1,Loudness switch pc board ass'y
U15	1A472508-1Y	NAAF-4908-1,Surround ciruict pc board ass'y
U16	1A472509-1AY	NAAF-4909-1A,Center and rear amplifier pc board ass'y

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

EXPLODED VIEW

MODEL TX-9022RDS

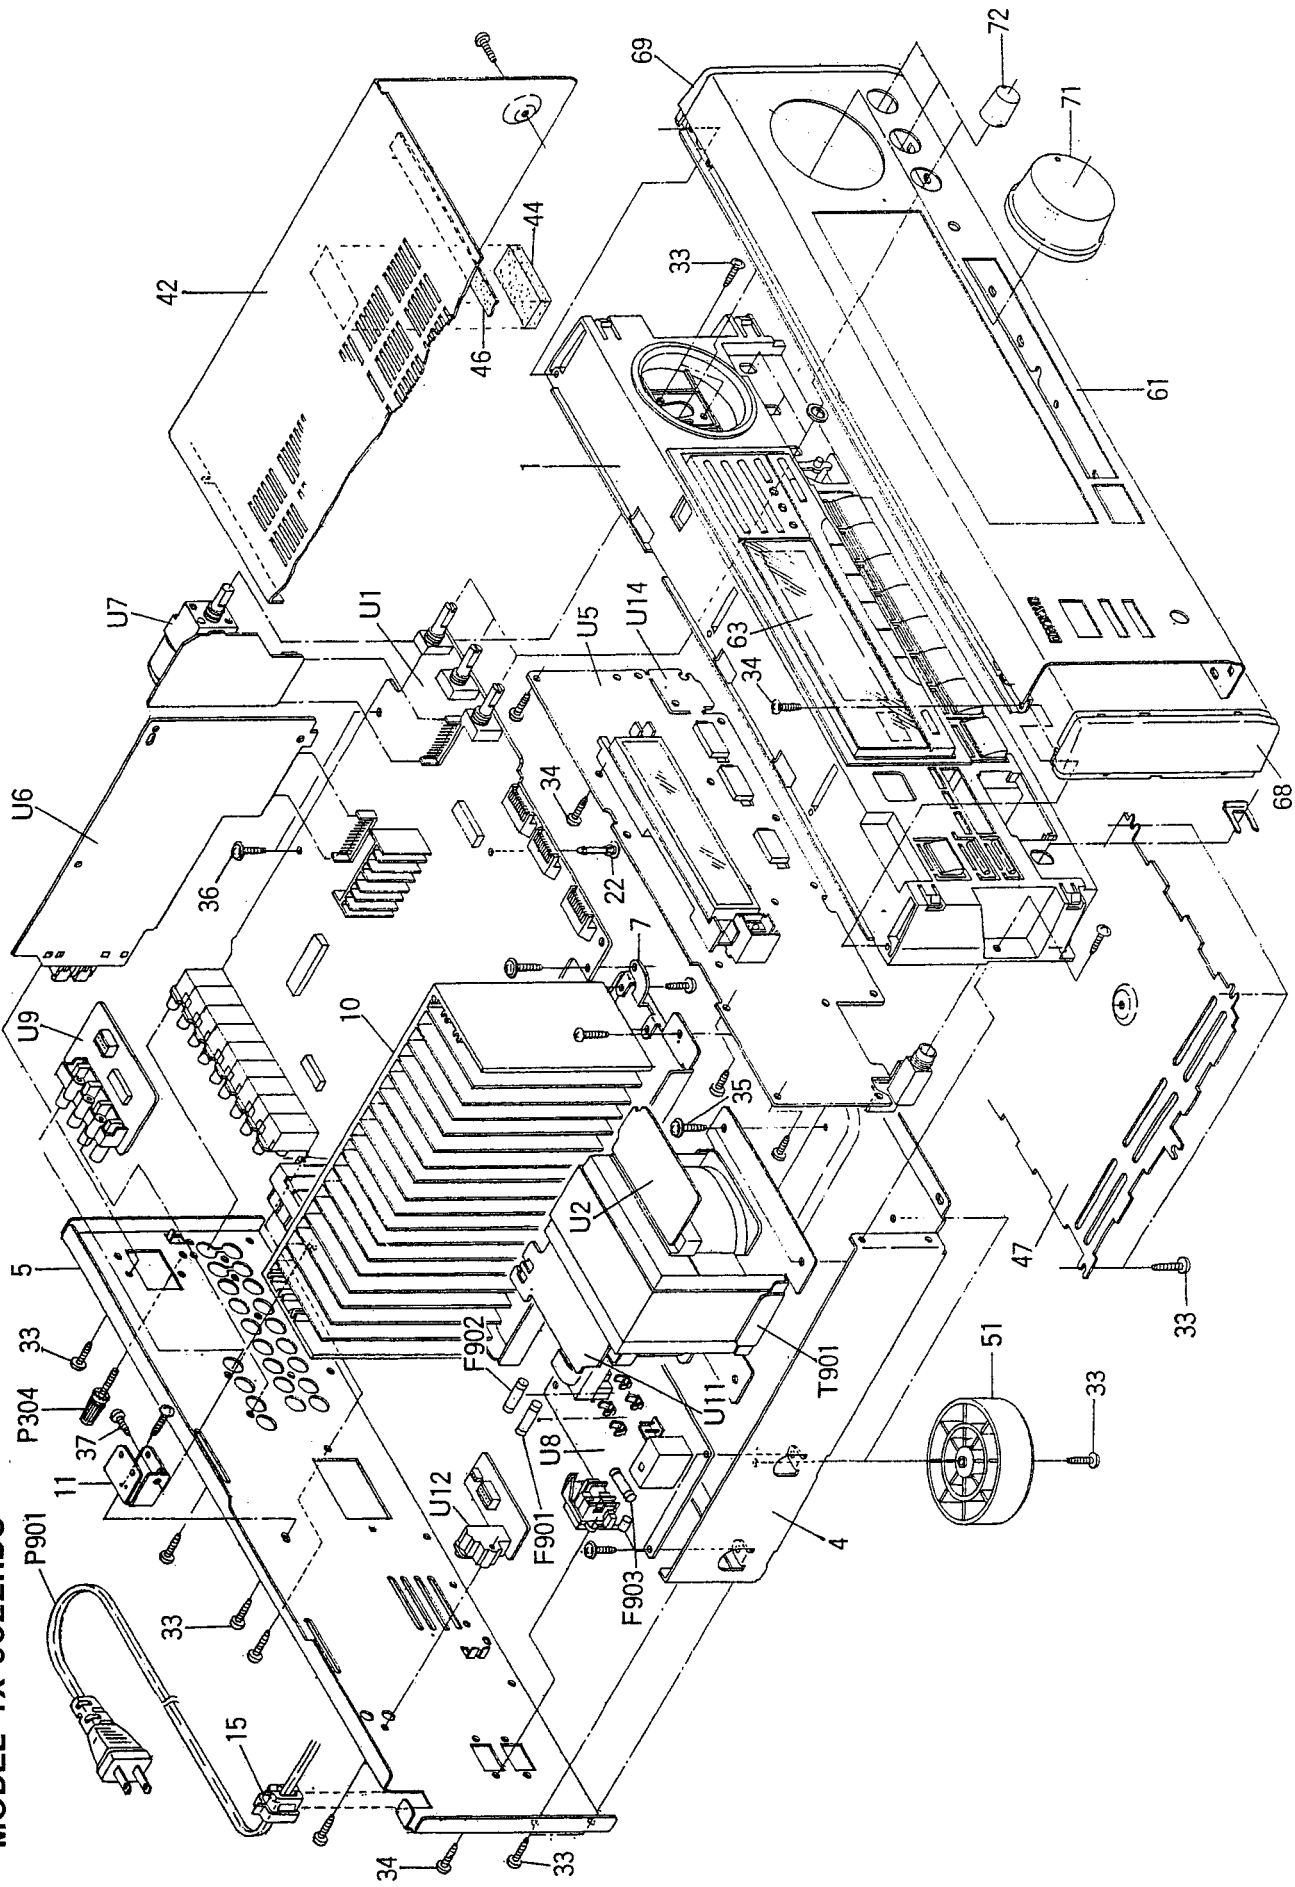

PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
1	27110795Y	Front bracket
2	28324929Y	Knob CLA
3	28175209Y	Isolating plate
4	27100278AY	Chassis
5	27121839AY	Rear panel
7	27130727Y	Bracket H
8	27270212Y	Spacer
10	27160330AY	Radiator
11	27141623Y	Retainer H
15	27300750	⚠ Bushing cord
22	27190524	KGLS-14RF,Holder
32	801433	3SMS8W,SW+14B(BC),Special screw
33	834430088	3TTS+8B(BC),Self-tapping screw
34	833430080	3TTP+8P(BC),Self-tapping screw
35	830440089	4TTC+8B(BC),Self-tapping screw
36	831130088	3TTW+8B,Self-tapping screw
37	834430108	3TTS+10B(BC),Self-tapping screw
42	28184476BY	Top cover
44	28140265	Cushion
46	28140546	Cushion
47	27170302Y	Bottom panel
51	27175251AY	Leg
61	1A477121Y	Front panel ass'y
62	8910301	CS-3,Ring CS
63	28191673Y	Clear plate
64	28198782Y	Facet
67	28135199	Badge
68	28125255A	End cap L
69	28125256A	End cap R
71	28324932B	Knob VOLUME
72	28324845B	Knob LEVEL
F902	252076	⚠ 3.15A-SE-EAK,Fuse
F903	252075	⚠ 2.5A-SE-EAK,Fuse

REF.NO.	PART NO.	DESCRIPTION
P304	25060044	Terminal
P901	253172 or	⚠ AS-CEE-2,
	253092-1A	Power supply cord
Q521,Q522	2201653,	2SC3856-O,
	2201654 or	2SC3856-Y or
	2201655	2SC3856-P,Transistors
Q523,Q524	2201663,	2SA1492-O,
	2201664 or	2SA1492-Y or
	2201665	2SA1492-P,Transistors
T901	2300976Y	⚠ NPT-1194P,Power transformer
U1	1A468592-3AY	NAAR-4892-3A,Main circuit pc board ass'y
U2	1A468593-3AY	NAETC-4893-3A,Power supply circuit pc board ass'y
U5	1A476597-3CY	NADIS-4897-3C,Display circuit pc board ass'y
U6	1A476598-3CY	NARF-4898-3C,Tuner circuit pc board ass'y
U7	1A468599-3Y	NAAF-4899-3,Volume circuit pc board ass'y
U8	1A468500-3AY	NAPS-4900-3A,Power supply circuit pc board ass'y
U9	1A468501-3Y	NAETC-4901-3,Video circuit pc board ass'y
U11	1A468503-3Y	NAETC-4903-3,Primary circuit pc board ass'y
U12	1A468504-3BY	NAETC-4904-3B,RI terminal pc board ass'y
U13	1A468505-3Y	NAETC-4905-3,Headphone terminal pc board ass'y
U14	1A468506-3Y	NASW-4906-3,Loudness switch pc board ass'y

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

BLOCK DIAGRAM

TUNER SECTION
TX-SV9030

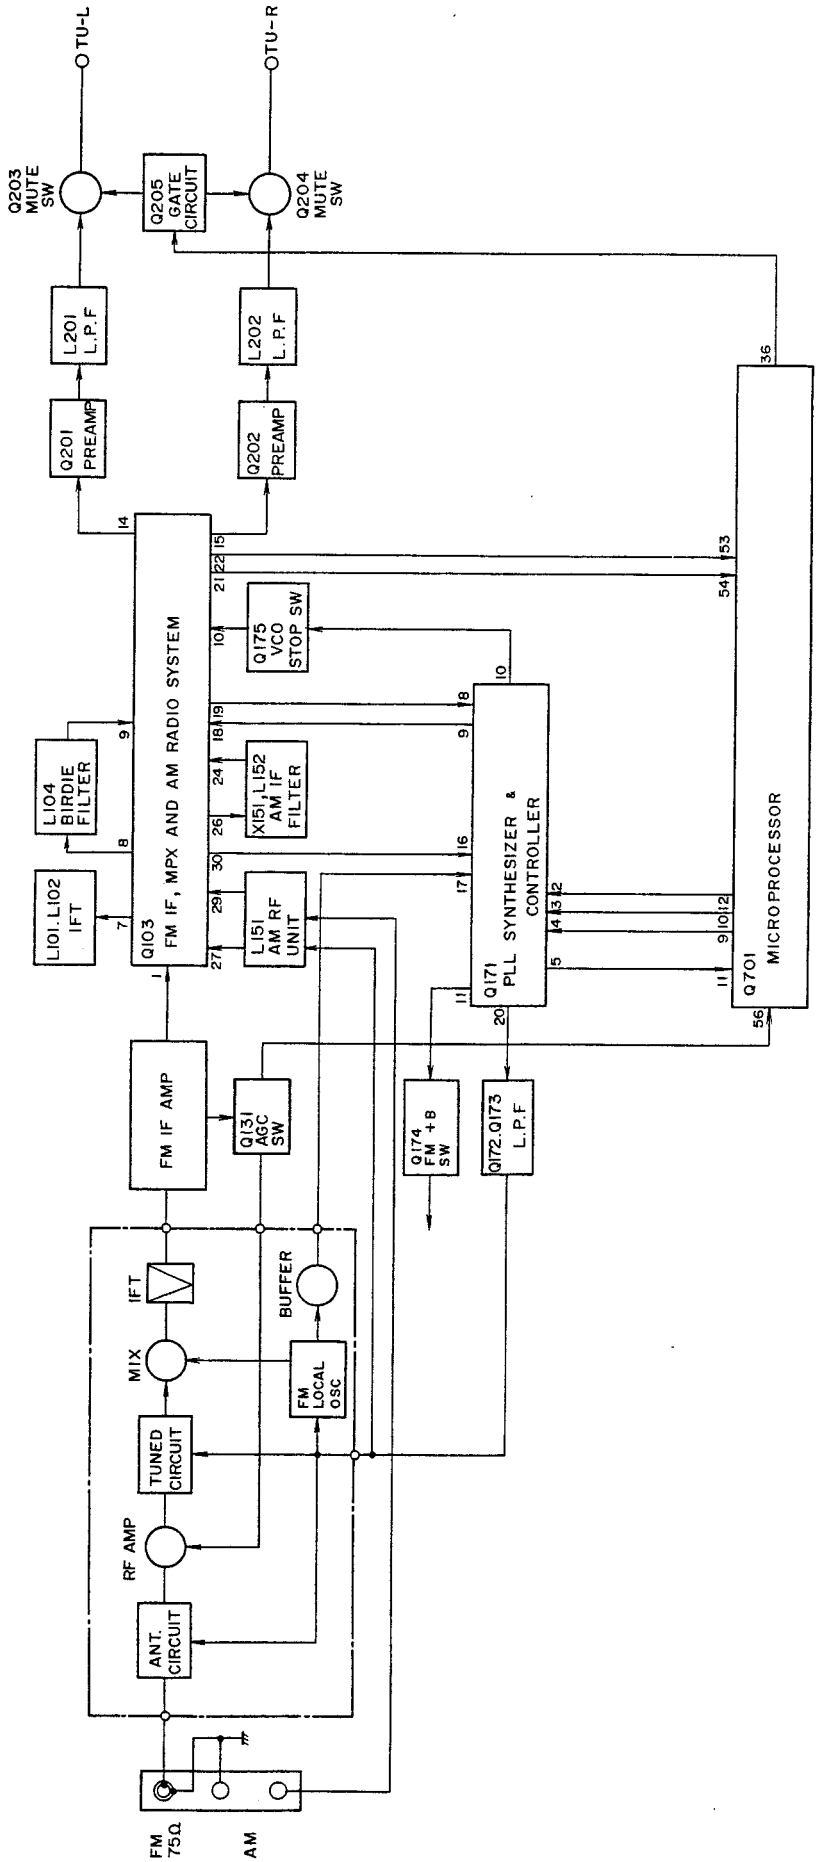

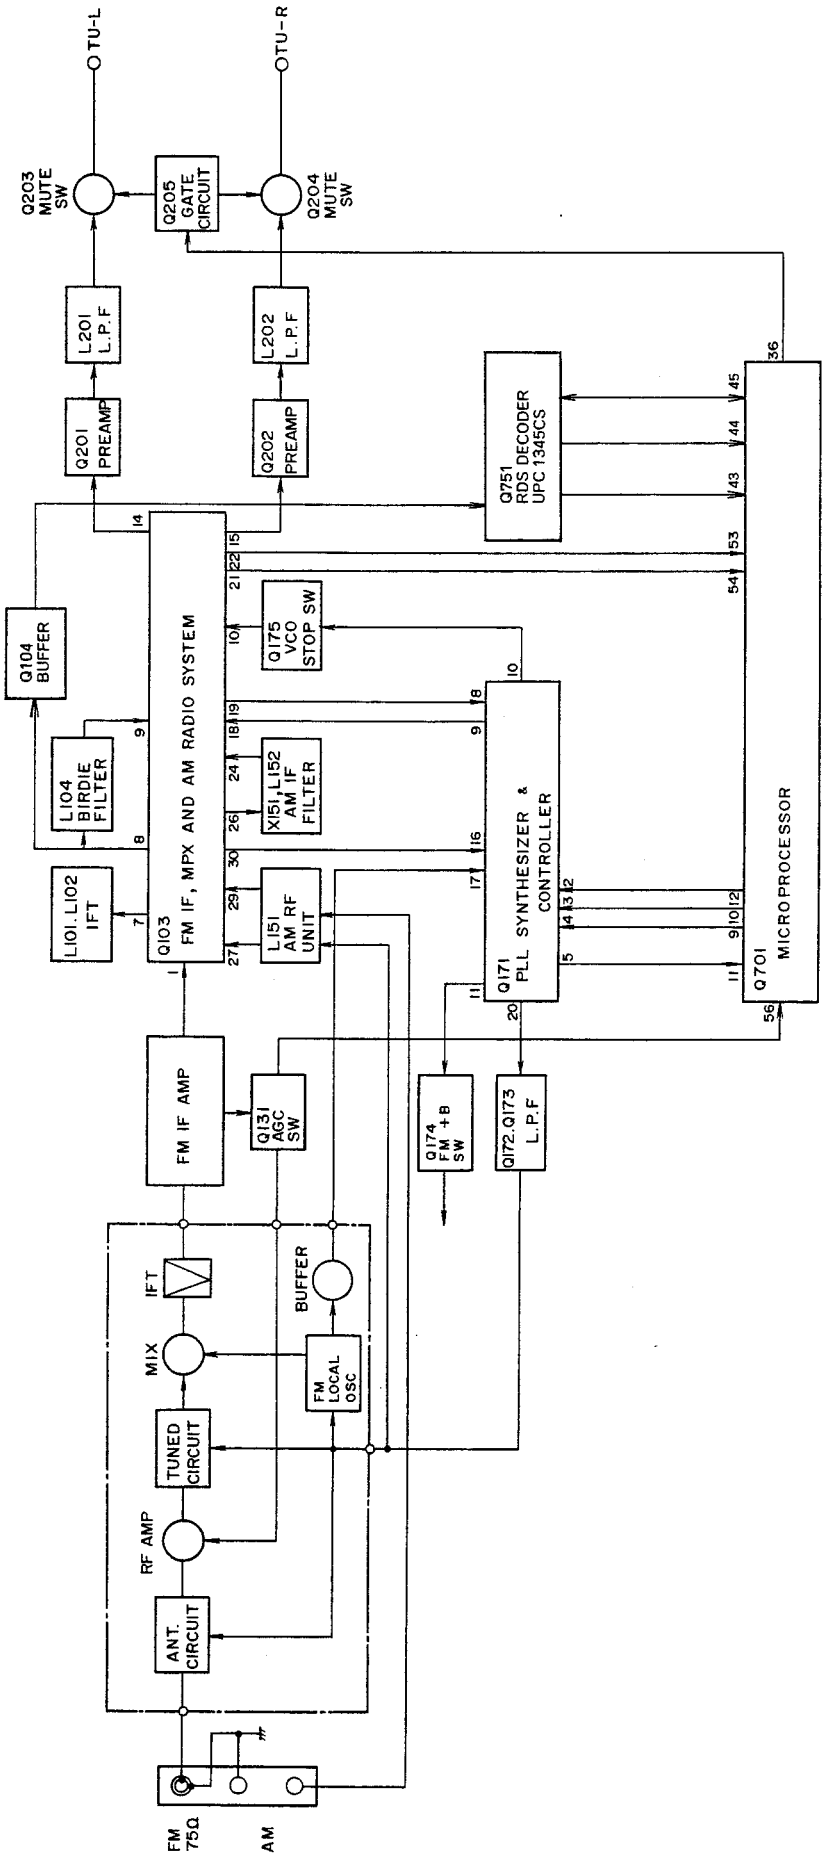
TU-L
TU-R
Q203 MUTE SW
Q205 GATE CIRCUIT
Q204 MUTE SW
L201 L.P.F
L202 L.P.F
Q201 PREAMP
Q202 PREAMP
Q751 RDS DECODER UPC1345CS
Q104 BUFFER
Q175 VCO STOP SW
L104 BIRDIE FILTER
X151, L152 AM IF FILTER
L101, L102 IFT
Q103 FM IF, MPX AND AM RADIO SYSTEM
L151 AM RF UNIT
Q171 PLL SYNTHESIZER & CONTROLLER
Q701 MICROPROCESSOR
FM IF AMP
Q131 AGC SW
Q174 FM+B SW
Q172, Q173 L.P.F
IFT
MIX
BUFFER
FM LOCAL OSC
TUNED CIRCUIT
RF AMP
ANT. CIRCUIT
FM 75Ω
AM

TX-9022RDS

BLOCK DIAGRAM AMPLIFIER SECTION MODEL TX-SV9030

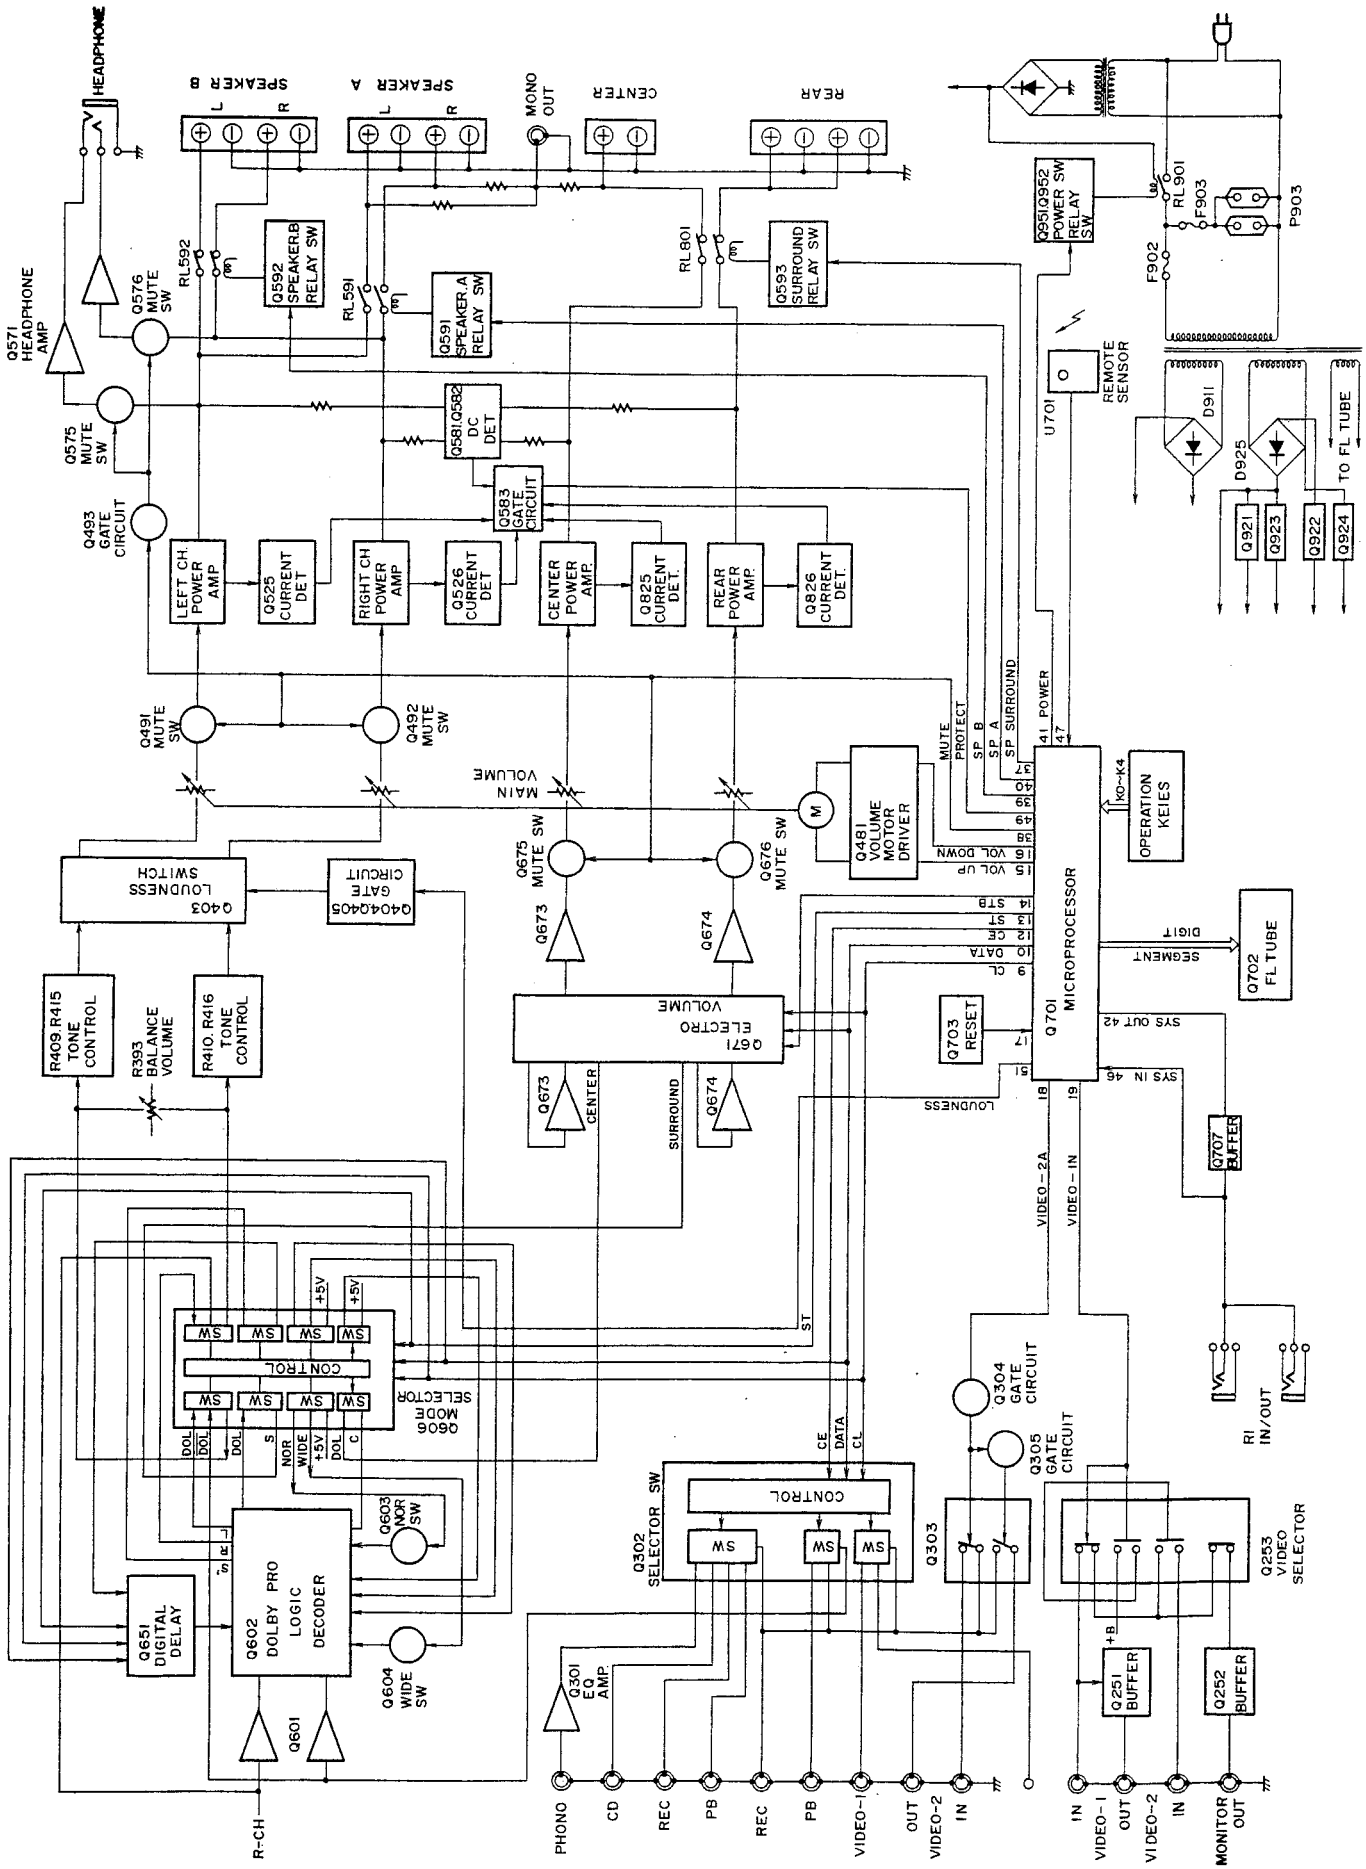

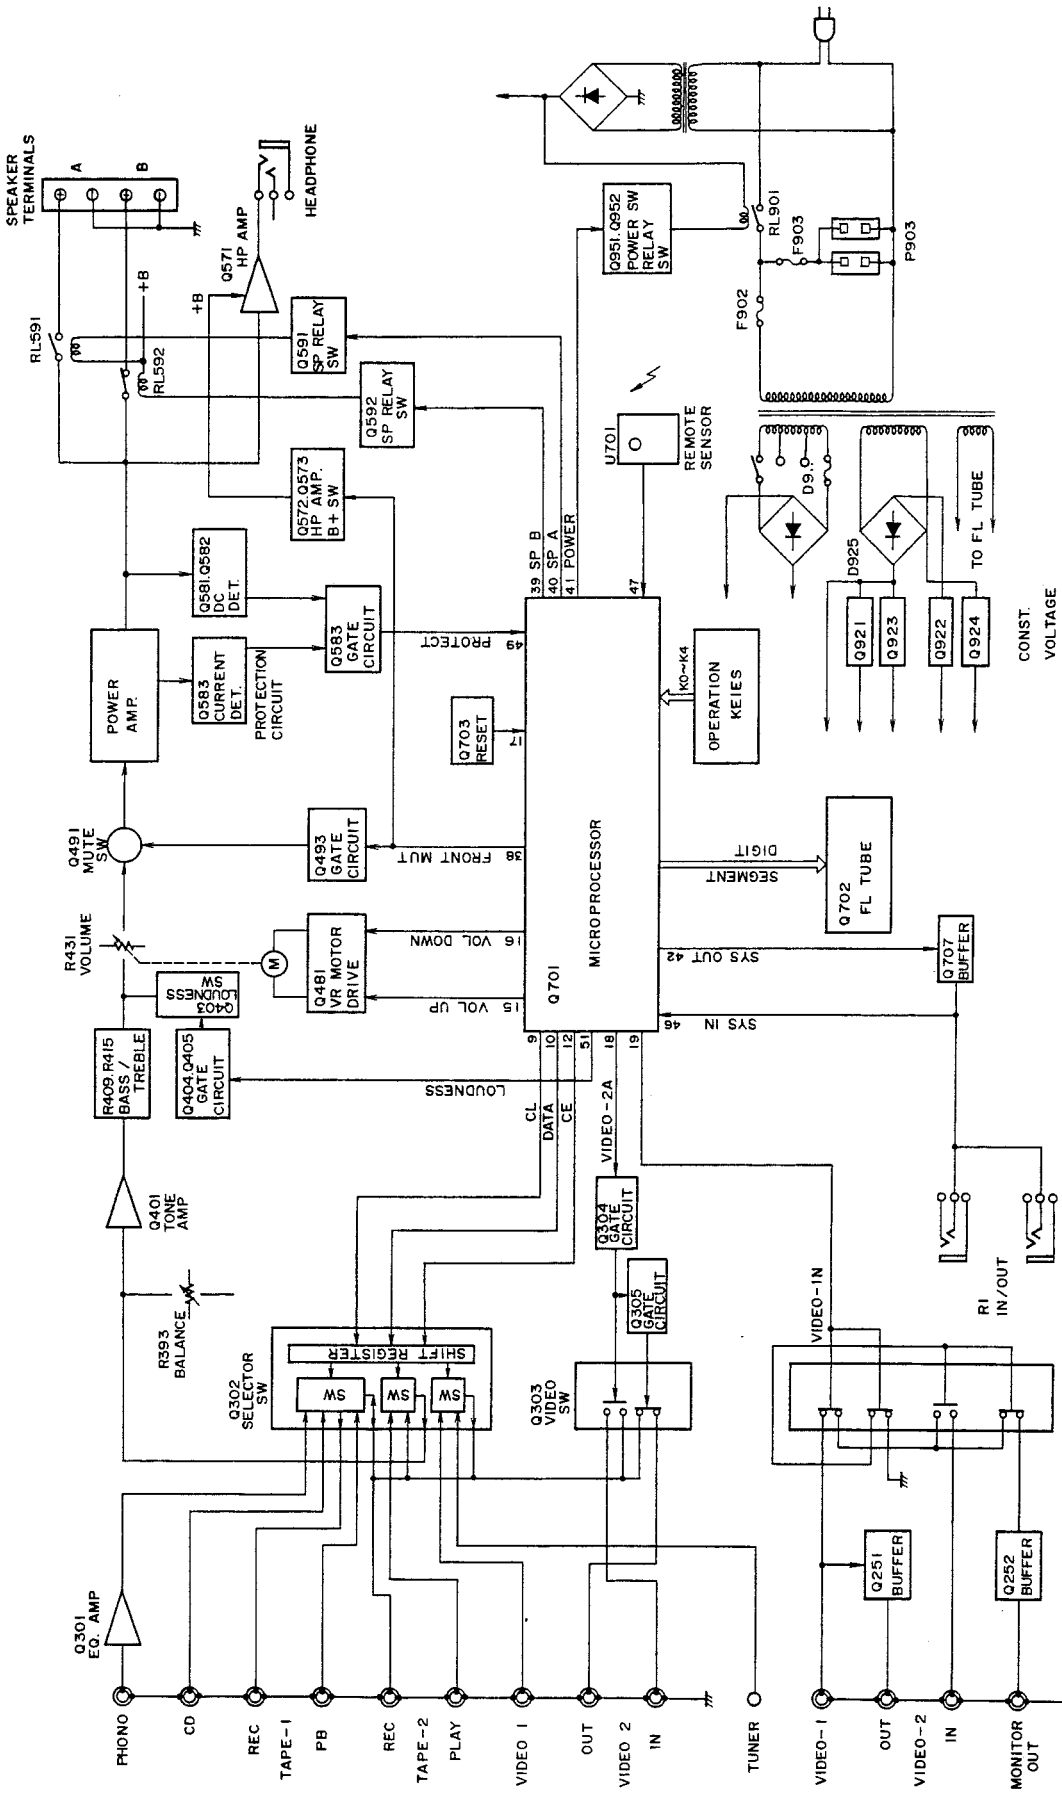
SPEAKER TERMINALS
A
B
HEADPHONE
Q571 HP AMP
+B
RL591
RL592
Q591 SP RELAY SW
Q592 SP RELAY SW
Q572,Q573 HP AMP. B+ SW
Q581,Q582 DC DET.
Q583 CURRENT DET.
PROTECTION CIRCUIT
Q583 GATE CIRCUIT
PROTECT
POWER AMP.
Q703 RESET
Q491 MUTE SW
Q493 GATE CIRCUIT
FRONT MUT
R431 VOLUME
Q481 VR MOTOR DRIVE
VOL DOWN
VOL UP
LOUDNESS SW
Q403
R409,R415 BASS / TREBLE
Q404,Q405 GATE CIRCUIT
LOUDNESS
Q401 TONE AMP
R393 BALANCE
Q302 SELECTOR SW
SHIFT REGISTER
SW
Q303 VIDEO SW
Q304 GATE CIRCUIT
Q305 GATE CIRCUIT
VIDEO-2A
CL
DATA
CE
Q701 MICROPROCESSOR
39 SP B
40 SP A
41 POWER
47
49
38
16
15
9
10
12
51
18
19
K0~K4
OPERATION KEIES
SEGMENT
DIGIT
Q702 FL TUBE
SYS OUT 42
SYS IN 46
Q707 BUFFER
U701
REMOTE SENSOR
Q951,Q952 POWER SW RELAY SW
RL901
F903
F902
P903
D9.0
D925
Q921
Q923
Q922
Q924
TO FL TUBE
CONST. VOLTAGE
Q301 EQ. AMP
VIDEO-IN
R1 IN/OUT
Q253 VIDEO SW
Q251 BUFFER
Q252 BUFFER
PHONO
CD
REC
TAPE-1
PB
REC
TAPE-2
PLAY
VIDEO 1
OUT
VIDEO 2
IN
TUNER
VIDEO-1
OUT
VIDEO-2
IN
MONITOR OUT

TX-9022RDS

MICROPROCESSOR CONNECTION DIAGRAM

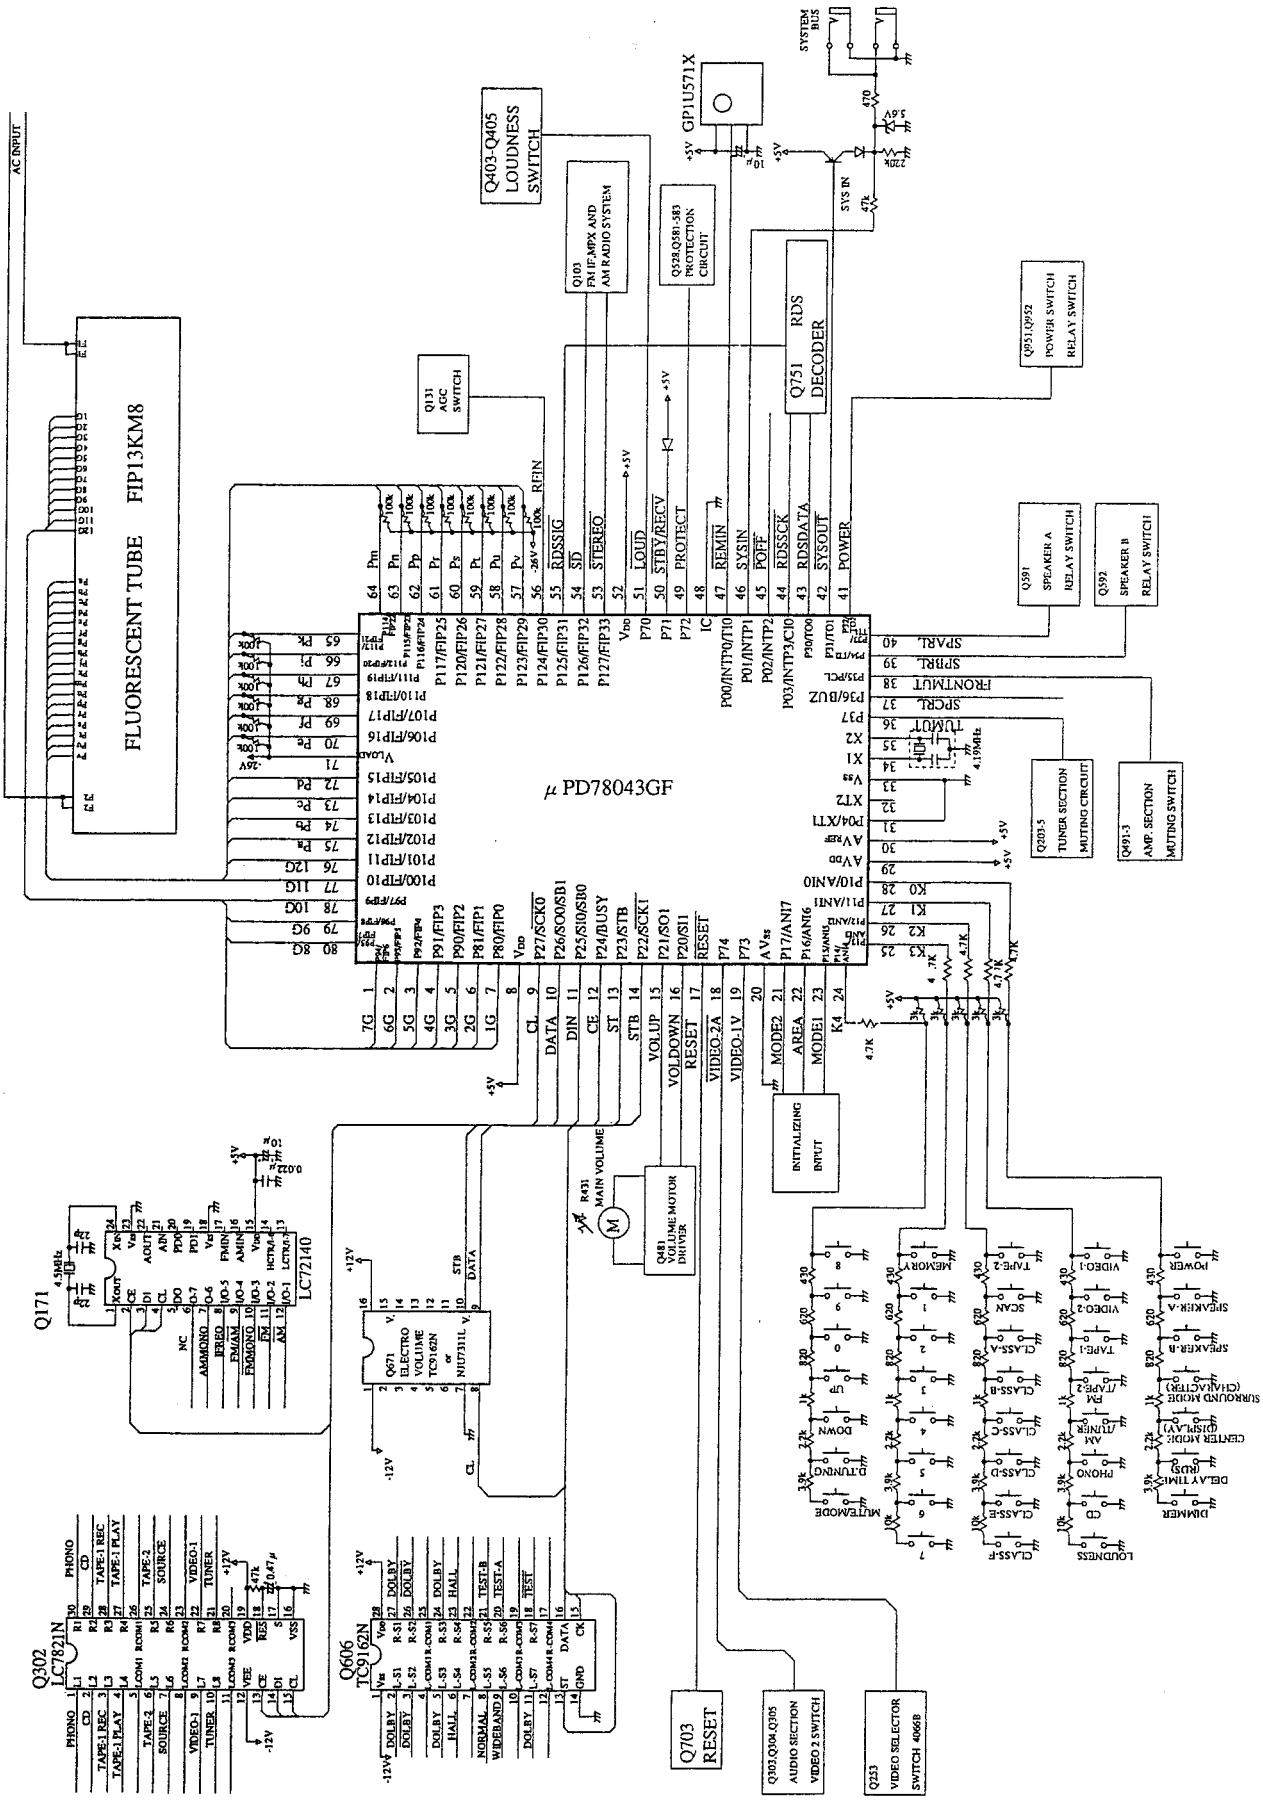

TERMINAL DESCRIPTION

Pin No.	Function	Description
1~7	7G~1G	Grid output terminals Active"H"
8	VDD	Positive power supply terminal (+5V)
9	CL	Output terminal for CL-terminal of LC7821N , CK-terminal of TC9162N , CL-terminal of LC72140 , CK-terminal of TC9213P and SCK-terminal of M65830P
10	DATA	Output terminal for DI-terminal of LC7821N , DATA-terminal of TC9162N , DI-terminal of LC72140 , DATA-terminal of TC9213P and DATA-terminal of M65830P
11	DIN	Input terminal for DO-terminal of LC72140
12	CE	Output terminal for CE-teminal of LC7821N and LC72140
13	STB	Output terminal for ST-terminal of TC9162N , STB-terminal of TC9213P and REQ-terminal of M65830P.
14	$\overline{\text{RDSSCK}}$	Input terminal for CLK OUT-terminal of RDS decoder μ PC1346CS
15	VOLUP	Volume control output terminal
16	VOLDOWN	Refer to table 1
17	$\overline{\text{RESET}}$	Input terminal for System Reset
18	$\overline{\text{VIDEO-2A}}$	Output terminal for changing Audio Signal of VIDEO-2
19	VIDEO-1V	Output terminal for changing Visual Signal of VIDEO-1
20	AVSS	Grand terminal for A/D converter
21	MODE2	Initial setting Input terminal for changing AM stereo function
22	AREA	Initial setting(BAND0,BAND1,AM10K) input terminal for changing frequency range
23	MODE	Initial setting input terminal for surround function
24	K4	Key input terminal.
25	K3	Key input terminal.
26	K2	Key input terminal.
27	K1	Key input terminal.
28	K0	Key input terminal.
29	AVDD	Analog positive power terminal (+5V) for A/D converter
30	AVREF	Reference voltage input terminal for A/D converter
31	XT1	Crystal connection terminal for resonator of sub system clock
32	XT2	Not used.
33	VSS	Ground Terminal
34	X1	Connect the ceramic resonator 4.19MHz.
35	X2	Resonator connection terminal for resonstor of main system clock
36	TUMUT	Muting output terminal for tuner
37	SURMUT	Muting output terminal for center and rear amplifiers
38	FRONTMUT	Muting output terminal for front amplifier
39	SPBRL	Control output terminal for speaker relay B

Pin No.	Function	Description
40	SPARL	Control output terminal for speaker relay A
41	POWER	Power source control output terminal
42	SYSOUT	System code output terminal
43	RDSDATA	Input terminal for DATA OUT-terminal of μ PC1346CS
44	RDSSCK	Input terminal for SCK-terminal of μ PC1346CS
45	POFF	Detection input terminal for power failure
46	SYSIN	System code input terminal
47	REMIN	Input terminal for signal of remote control
48	IC	Internal connection terminal
49	PROTECT	Detection input terminal for movement of protection circuit
50	STBY/RECV	STAND-BY and RECEIVED indication output terminal
51	LOUD	Control output terminal for Loudness switch
52	VDD	Positive power supply terminal (+5V)
53	STEREO	Detection input terminal for stereo broadcasting
54	SD	Detection input terminal for radio station
55	RDSSIG	Detection input terminal for RDS broadcasting
56	RFIN	RF MODE input terminal
57~70	Pv~Pe	Segment output terminals Active"H"
71	VLOAD	Pull-down resistor connection terminal for control and driver of FIP
72~75	Pd~Pa	Segment output terminals Active"H"
76~80	12G~8G	Grid output terminals Active"H"

	Outputs	
Movement	VOLUP(#15)	VOLDOWN(#16)
Stop	H	H
UP	H	L
DOWN	L	H
POWER OFF	L	L

Table 1

IC BLOCK DIAGRAMS AND DESCRIPTIONS

NJM2177L / M69032P (Dolby Pro Logic)

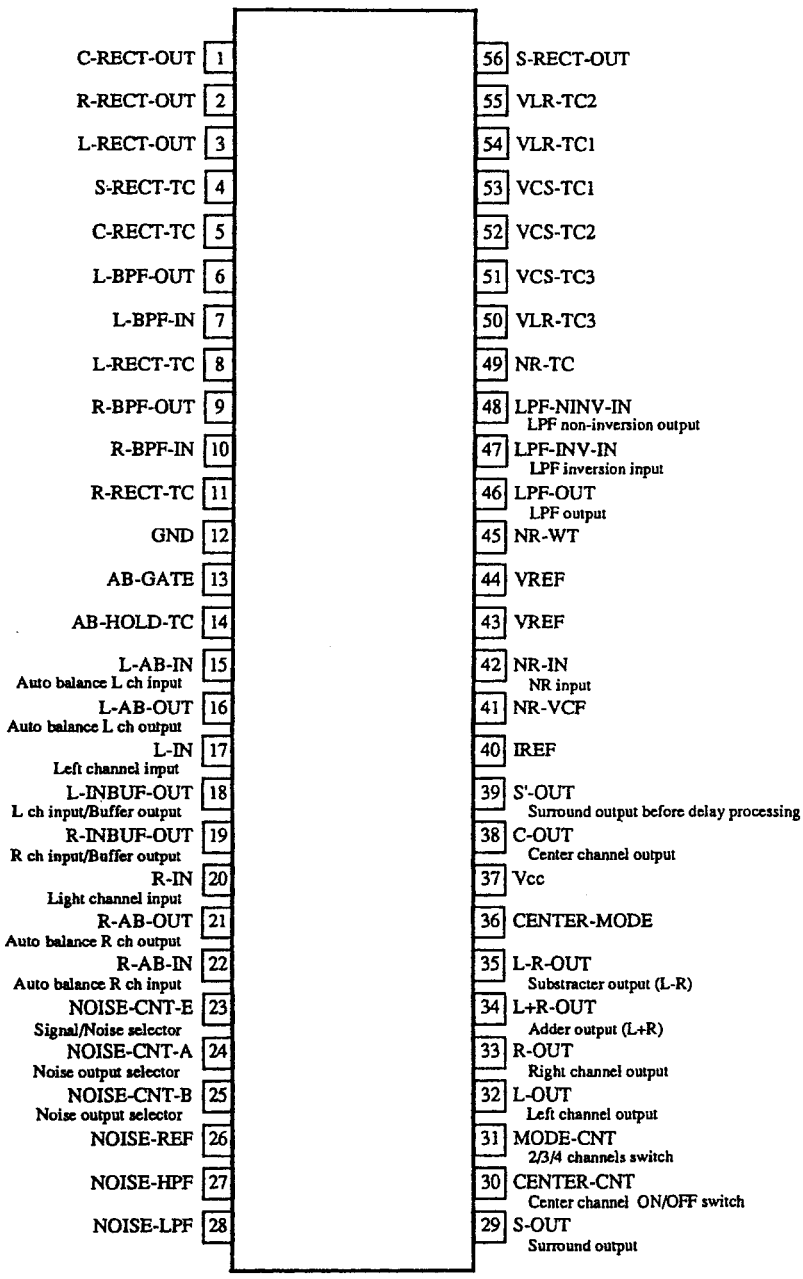

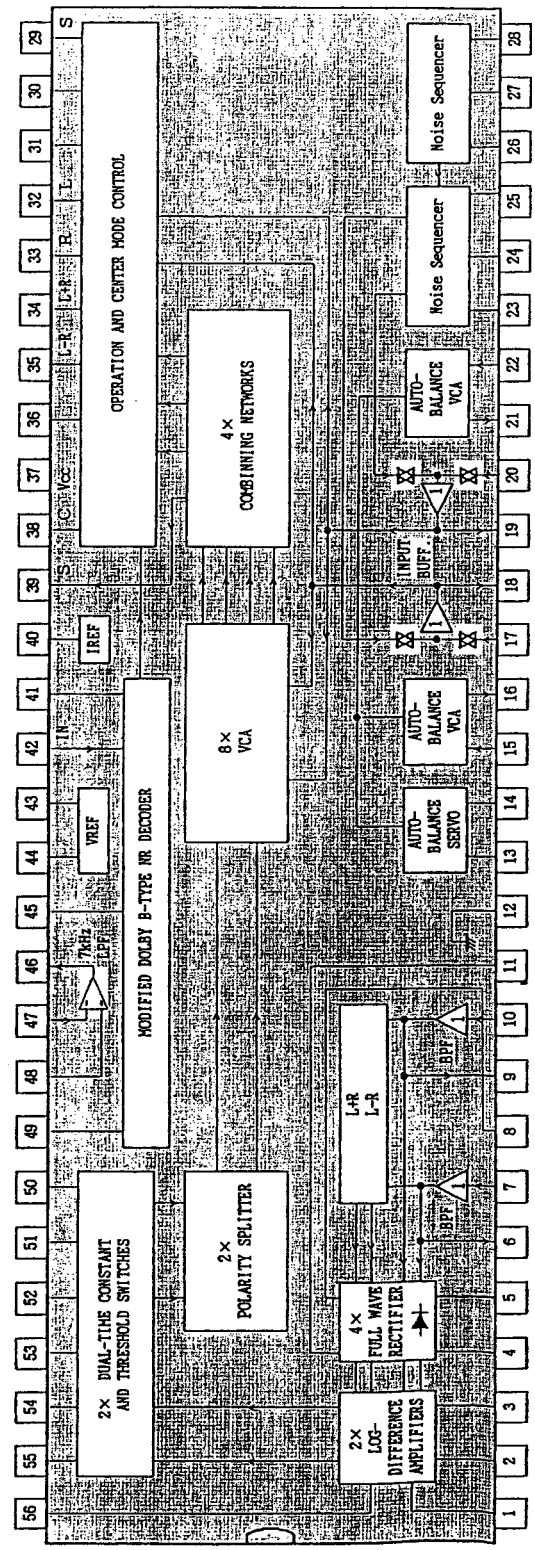

M65830P (Digitai Delay)

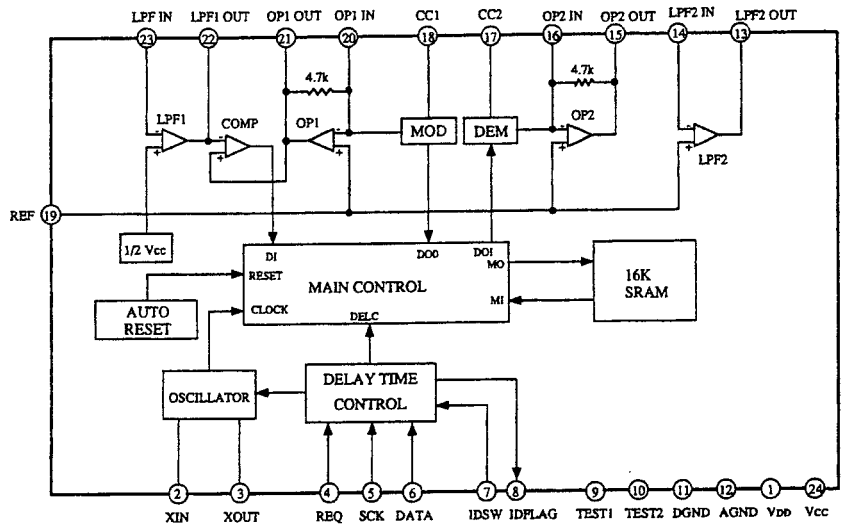

Pin No.	Mark	Function	I/O	Description
1	VDD	Digital power supply	-	
2	XIN	Resonator input	I	Connect the 2MHz ceramic resonator
3	XOUT	Resonator output	O	
4	REQ	Request	I	Data request input
5	SCK	Shift lock	I	Serial data shift clock input
6	DATA	Data	I	Serial data input
7	IDSW	ID switch	I	External input of 4th bit of ID code
8	IDFLAG	ID flag	O	Data input confirmation pulse and serial data output
9	TEST1	Test 1	-	Normal mode when low level
10	TEST2	Test 2	-	Normal mode when low level
11	D GND	Digital ground	-	
12	A GND	Analog ground	-	
13	LPF2 OUT	LPF filter 2 output	O	
14	LPF2 IN	LPF filter 2 input	I	
15	OP2 OUT	Operation amp. 2 output	O	
16	OP2 IN	Operation amp. 2 input	I	
17	CC2	Current control 2	-	Demodulation ADM control
18	CC1	Current control 1	-	Modulation ADM control
19	REF	Reference	-	Analog reference voltage=1/2VCC
20	OP1 IN	Operation amp. 1 input	I	
21	OP1 OUT	Operation amp. 1 output	O	
22	LPF1 OUT	LPF filter 1 output	O	
23	LPF1 IN	LPF filter 1 input	I	
24	VCC	Analog power supply	-	

TC9213P (Eiectro Volume)

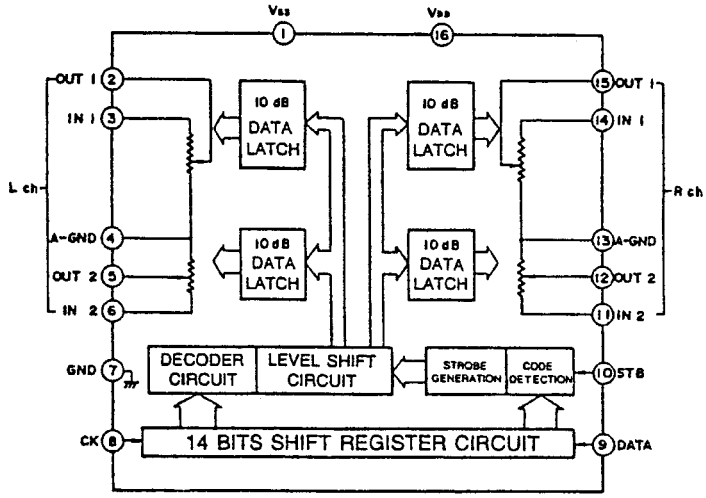

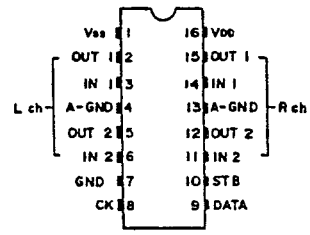

μPD1346CS (RDS Decoder)

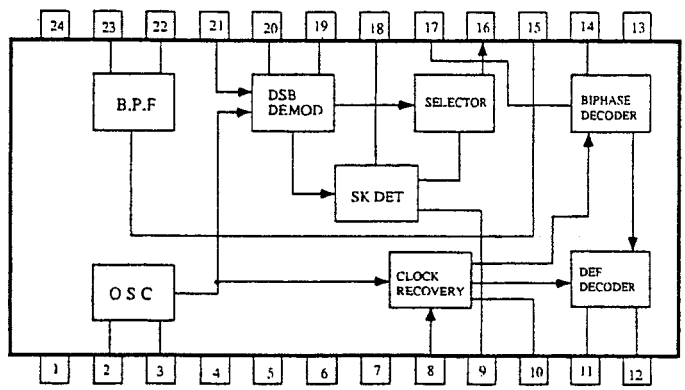

No.	Terminal	Description	No.	Terminal	Description
1	Vcc	Supply voltage for the digital circuit	13	GND	Ground for the analog circuit
2	OSC IN	Resonator input	14	INTEG	Integrating filter terminal
3	OSC OUT	Resonator output	15	BPF ADJ	Adjustment fc of band pass filter
4	GND	Ground for the digital circuit	16	PSK OUT	Biphase signal output
5	TEST1	Test input	17	PSK IN	Biphase decoder input
6	TEST2	Test input	18	LPF SK	Low pass filter for the detection SK
7	OP.CTL	Control input of the operation stop	19	LPF Q	Low pass filter for the crossed detector
8	S/L CTL	Mode control input of the synchonizing detection	20	LPF I	Low pass filter for the synchronizing detector
9	SK OUT	SK detection output	21	DSB IN	DSB demodulator circuit input
10	RDS OUT	RDS synchonizing detection output	22	BPF OUT	Band pass filter output
11	CLOCK OUT	Bit rate clock output	23	BPF IN	Band pass filter input
12	DATA OUT	RDS data output	24	Vcc	Supply voltage for analog circuit

LC7821N (Analogue switch)

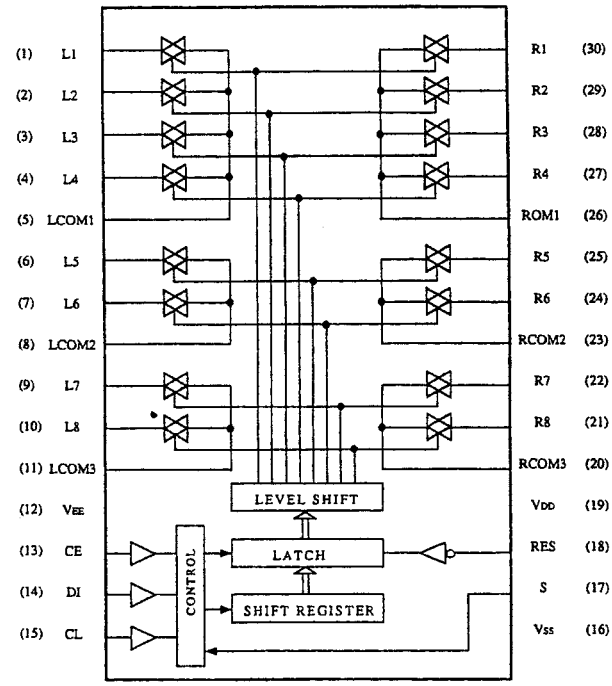

Pin No.	Terminal	Description
1	PHONO	Input/output terminals of audio signal of left channel. Control to the inside analogue switch at the serial data.
2	CD	
3	TAPE 1 REC	
4	TAPE 1 PB	
5	L COM 1	
6	MONITOR	
7	SOURCE	
8	L COM 2	
9	VIDEO 1	
10	TUNER	
11	L COM 3	
12	Vss	Negative power supply terminal. (-15V)
13	CE	Chip enable terminal.Connect the terminal SEL of microprocessor.
14	DI	Serial data input terminal.Connect the terminal DATA of microprocessor.
15	CL	Serial clock input terminal.Connect the terminal CL of microprocessor

Pin No.	Terminal	Description
16	Vss	Ground terminal.
17	S	Selector terminal
18	RES	Reset terminal.
19	VDD	Power supply terminal.(+15V)
20	R COM 3	Input/output terminals of audio signal of right channel. Control to the inside analogue switch at the serial data.
21	TUNER	
22	VIDEO 1	
23	R COM 2	
24	SOURCE	
25	MONITOR	
26	R COM 1	
27	TAPE 1 PB	
28	TAPE 1 REC	
29	CD	
30	PHONO	

TA7291S (Volume driver)

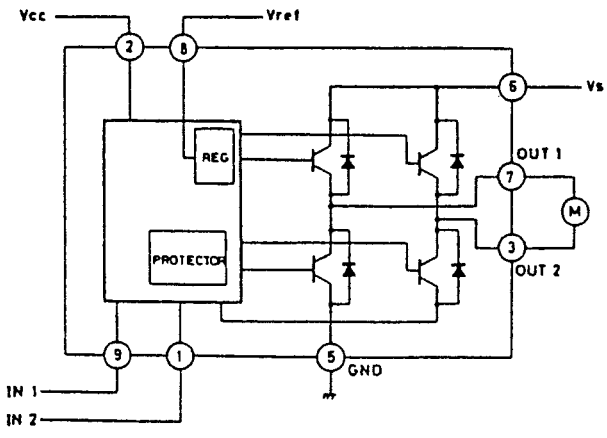

INPUT		OUTPUT		MODE
IN 1	IN 2	OUT 1	OUT 2	
0	0	∞	∞	STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/CW
1	1	L	L	BRAKE

CCW: Counter clockwise direction
CW: Clockwise direction

LA1851N (AM, FM IF and MPX)

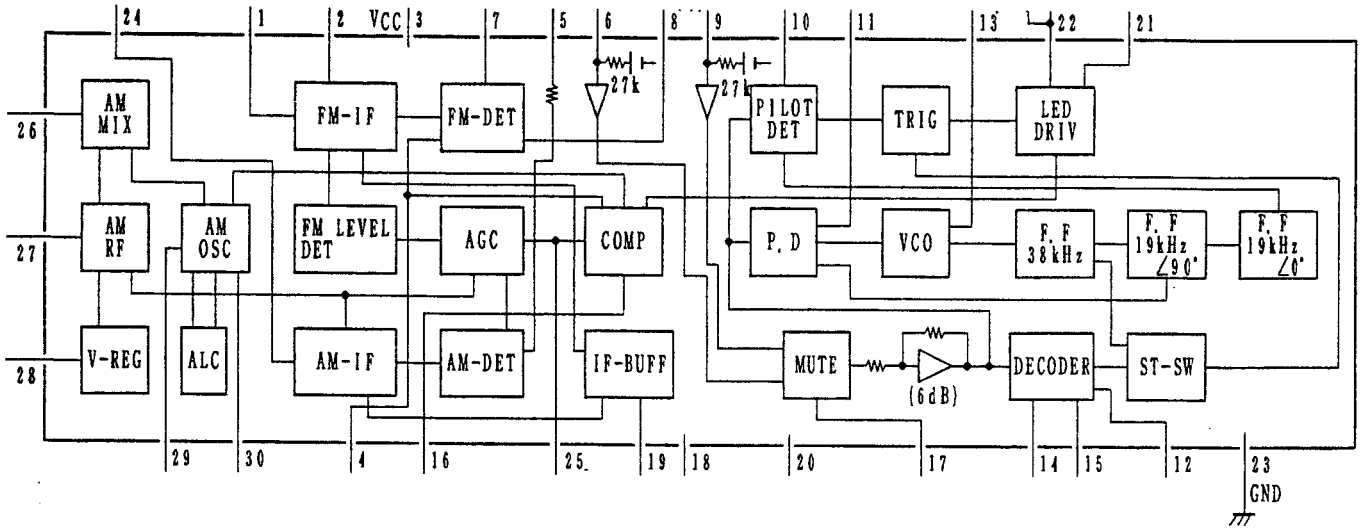

LC72140 (PLL Frequency Synthesized LSI)

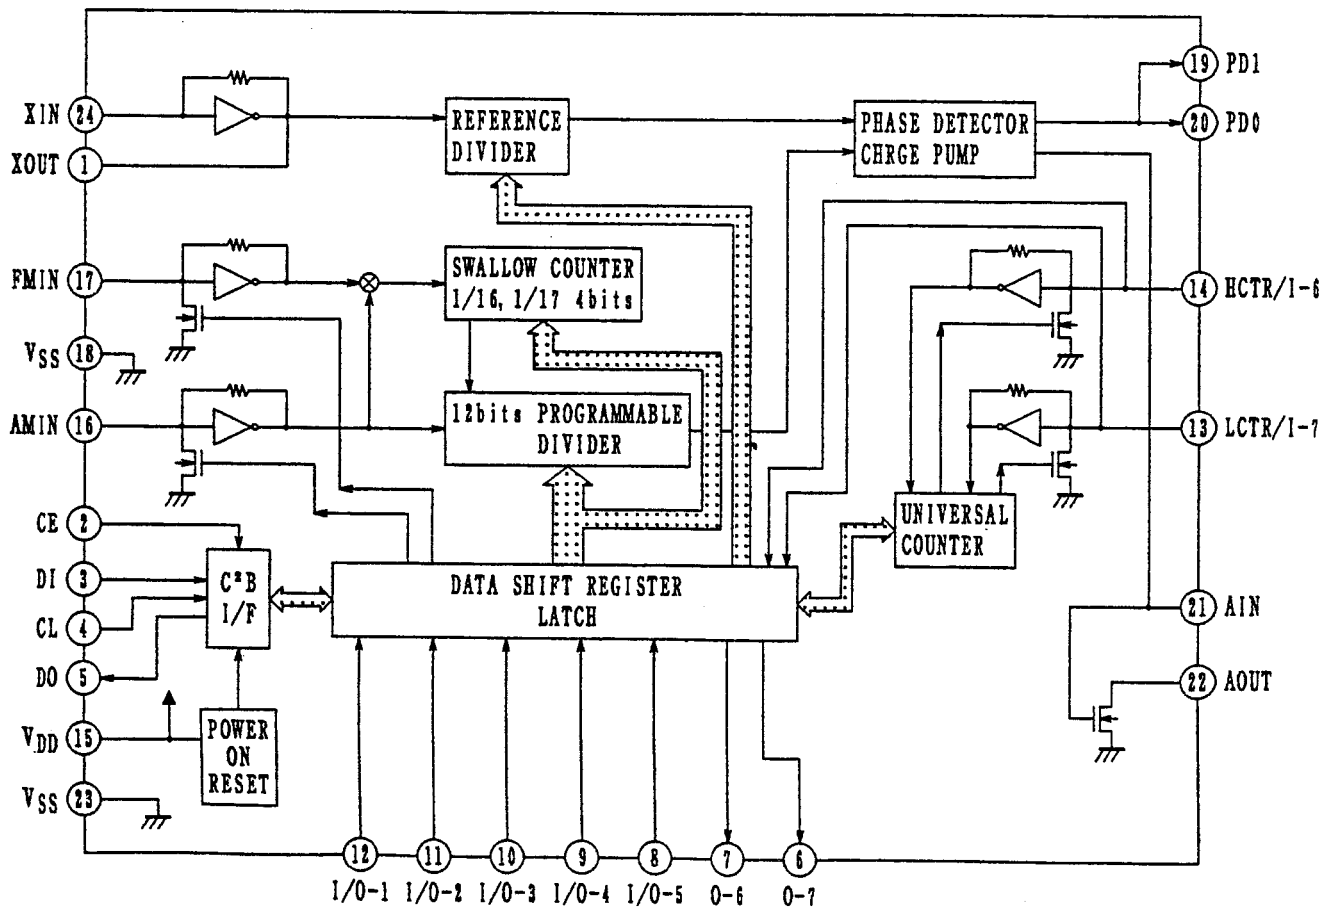

FL TUBE

TX-9022RDS

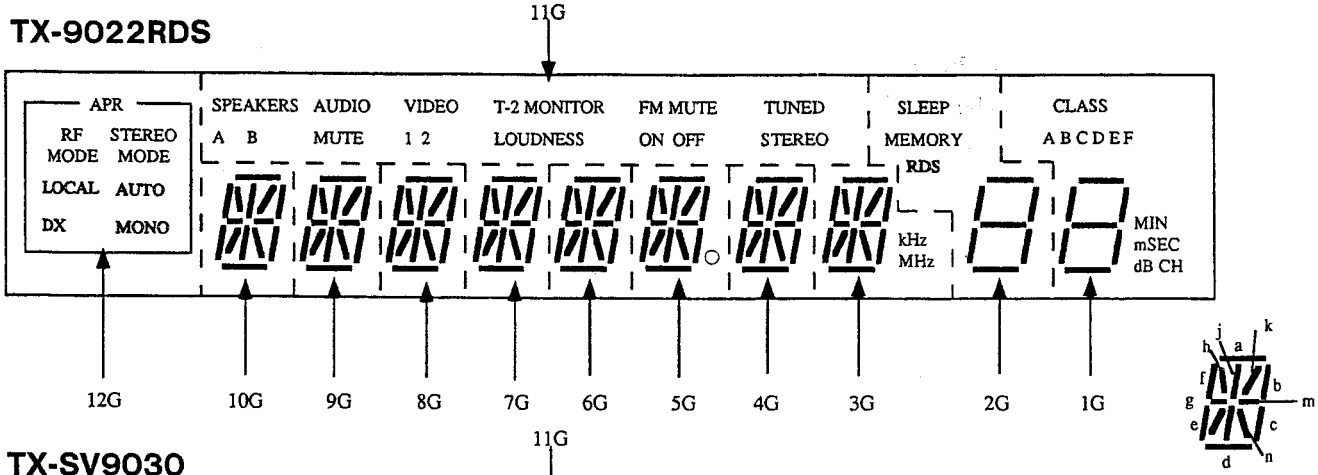

TX-SV9030

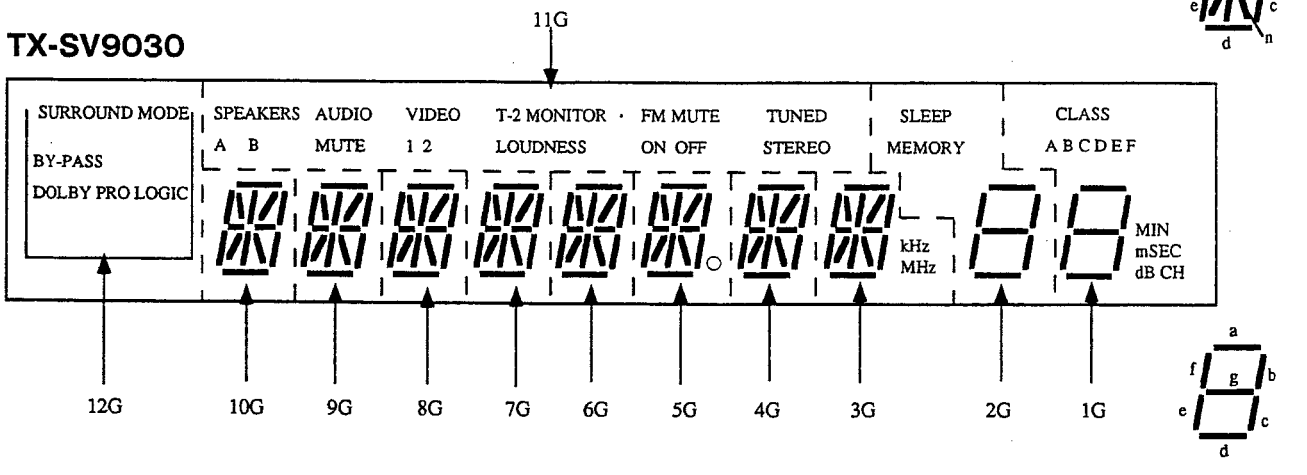

TERMINAL NO.	1	2	3	4	5	6	7	8	9	10	11	12
ELECTRODE	F1	F1	NP	NP	NP	Pv	Pu	Pt	Ps	Pr	Pp	Pn
TERMINAL NO.	13	14	15	16	17	18	19	20	21	22	23	24
ELECTRODE	Pm	Pk	Pj	Ph	Pg	Pf	Pe	Pd	Pc	Pb	Pa	NP
TERMINAL NO.	25	26	27	28	29	30	31	32	33	34	35	36
ELECTRODE	NP	NP	NP	12G	11G	10G	9G	8G	7G	6G	5G	4G
TERMINAL NO.	37	38	39	40	41	42	43	44	45	46		
ELECTRODE	3G	2G	1G	NP	NP	NP	NP	NP	F2	F2		

ADJUSTMENT PROCEDURES

Preparation

1.Input

FM mono:1kHz,75kHz devi.,60dB/ μ V

FM stereo:1kHz,75kHz devi.,60dB/ μ V

Pilot signal 19kHz 7.5kHz devi.

AM:400Hz 30% mod.

2.Outputs

Connect the non-inductive type resistors of 8 ohms to the speaker terminals A unless otherwise noted.

TX-SV9030

3. Standard Knob Positions

Master Volume Control .....Maximum
Bass Control .....Center
Treble Control .....Center
Balance Control .....Center
Input selector .....CD
Tape 2 Monitor.....OFF
Muting .....OFF
Loudness .....OFF
Speakers .....ON
Dolby Surround.....OFF
Center Mode .....Wide Band
Delay Time.....20 ms
Center Level .....0 dB
Rear Level .....0 dB

Idling Current Adjustment

Connect the DC voltmeter to the terminals P521, P522, and P821 (VCT and IID) on the main circuit pc board. Adjust the trim resistors R537, R538 and R837 so that the indicator of voltmeter becomes 3 ± 0.5mV.

NOTE:Adjust after switching on for 5 minutes.

Set Volume knob to the minimum position.

TX-9022RDS

3. Standard Knob Positions

Master Volume Control .....Maximum
Bass Control .....Center
Treble Control .....Center
Balance Control .....Center
Input selector .....CD
Tape 2 Monitor.....OFF
Muting .....OFF
Loudness .....OFF
Speakers .....A

Idling Current Adjustment

Connect the DC voltmeter to the terminals P521, and P522 (VCT and IID) on the main circuit pc board. Adjust the trim resistors R537, and R538 so that the indicator of voltmeter becomes 3 ± 0.5mV.

NOTE:Adjust after switching on for 5 minutes.

Set Volume knob to the minimum position.

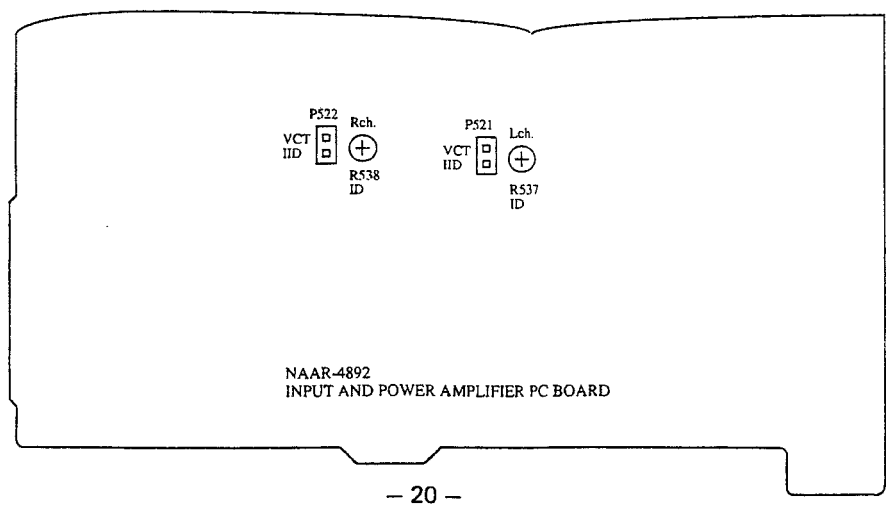

Set the unit to the test mode.

1. Press and hold down the CD button, then press the Power button.
2. " TEST-" is displayed on the display.
3. While "TEST-" is displayed, press the FM key.

FM ADJUSTMENT

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Tuning frequency	Output indicator	Adjustment point	Adjust for	Remarks
FM IF/RF	1	Fig.1	99.0MHz 1kHz 75kHz devi. 65dBf(60dB)	———	99.0MHz	DC voltmeter	L101	0±20mV	FM MUTE/MODE switch:ON/STEREO Repeat the steps 1 and 3 until no further adjustment is necessary.
	2					AC voltmeter	IFT on the front end	Maximum	
	3					Distortion analyzer	L102	Minimum	
Stereo Distortion		Fig.2	99.0MHz Ext. mod.65dBf(60dB)	Channel L or R 1kHz	99.0MHz	Distortion analyzer	IFT on the front end	Minimum	Don't turn more than ±180°
Stereo Separation	1	Fig.2	99.0MHz Ext. mod. 65dBf(60dB)	Channel L 1kHz	99.0MHz	Channel R AC voltmeter	R202	Minimum	Maximum and same separation
	2			Channel R 1kHz		Channel L AC voltmeter		Minimum	
Muting Level		Fig.2	99.0MHz 21.2dBf(16dB)	———	99.0MHz	Oscilloscope or TUNED indicator	R101	Signal output or light on	
RDS		Fig.3	99.0MHz Ext. mod.40dB	RDS data or 57kHz 3% devi.	99.0MHz	Oscilloscope	R786	Maximum	TX-9022RDS only

AM ADJUSTMENT

Step	AM SG output	Tuning Frequency	Output Indicator	Adjustment point	Adjust for
1		522kHz	Digital DC voltmeter	OSC coil on RF block L151	1.3±0.1V
2	603kHz 400Hz 30% mod. 60dB/m	603kHz	AC voltmeter	RF coil on RF block L151	Maximum
3	999kHz 400Hz 30% mod. 60dB/m	999kHz	AC voltmeter	L152	Maximum

Reference Specification
FM tuned voltage:87.5MHz～108.0MHz
More than 1.3V～Less than 10V
AM tuned voltage:522kHz～1611kHz
1.3±0.2V～Less than 9.0V

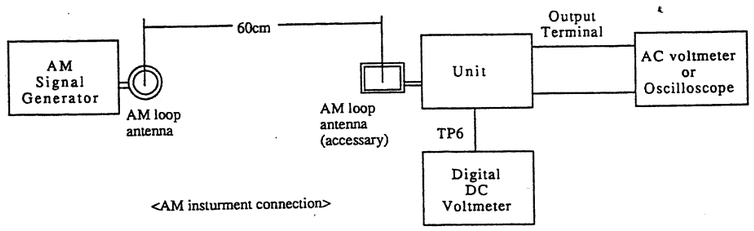

<AM insturment connection>

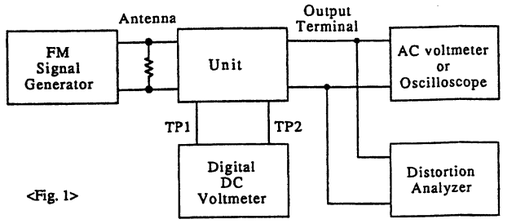

<Fig. 1>

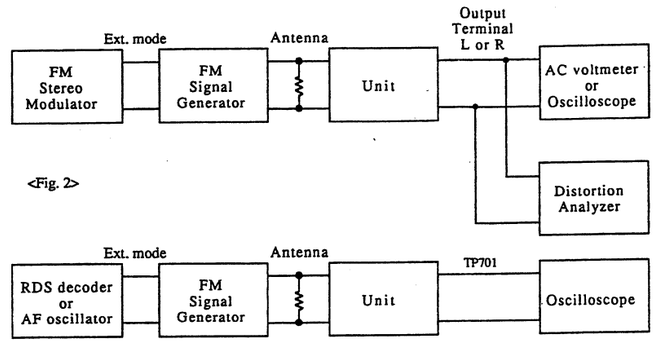

<Fig. 2>

<Fig. 3>

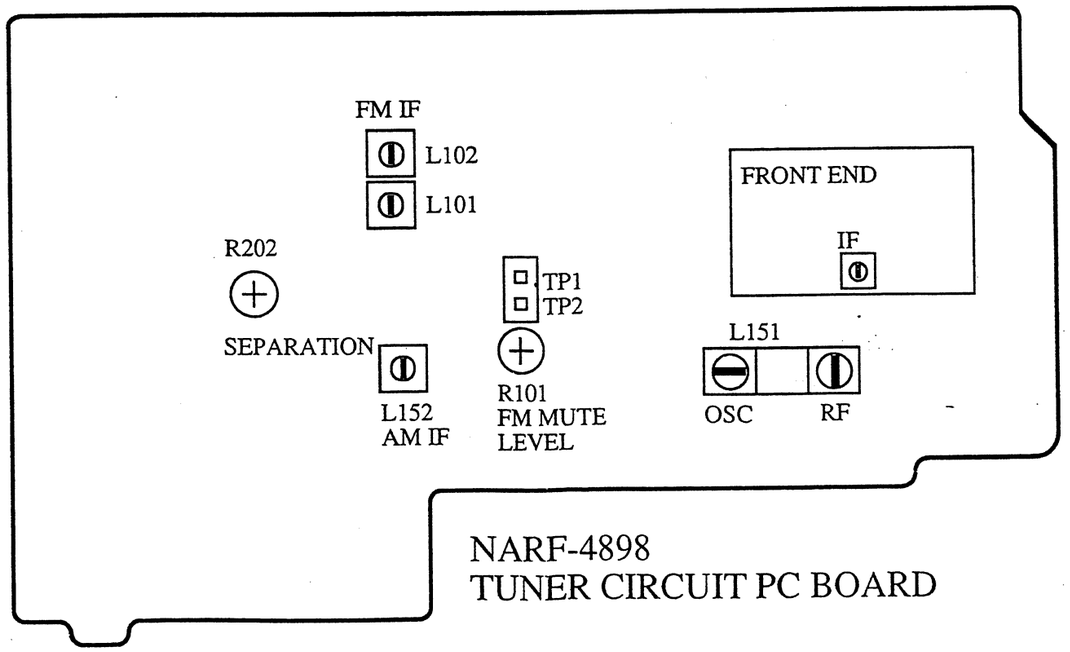

TX-9022RDS
TX-SV9030

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

HEADPHONE TERMINAL PC BOARD (NAETC-4905)

DISPLAY CIRCUIT PC BOARD (NADIS-4897)

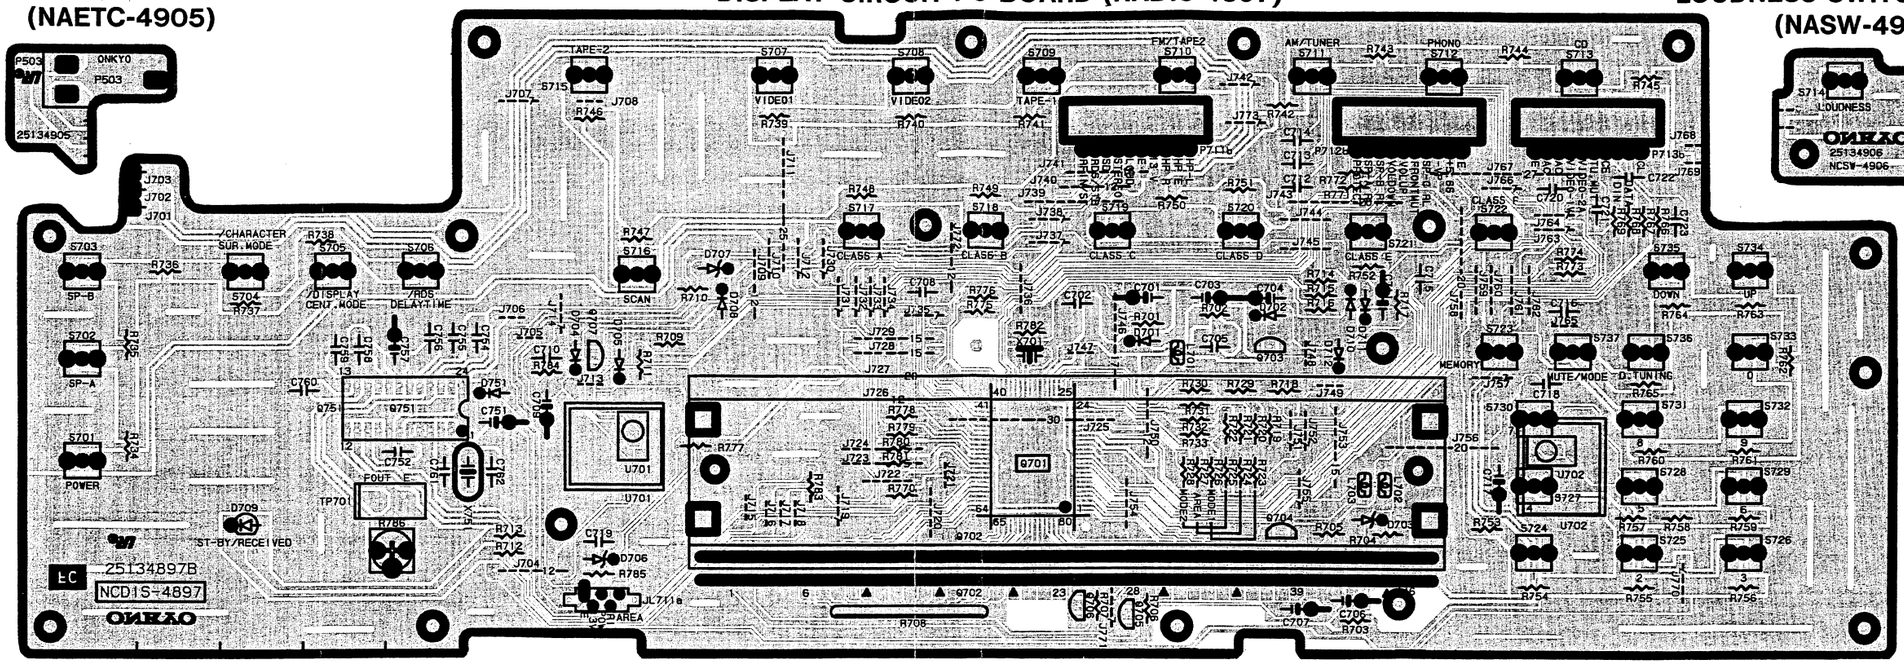

LOUDNESS SWITCH PC BOARD (NASW-4906)

TUNER CIRCUIT PC BOARD (NARF-4898)

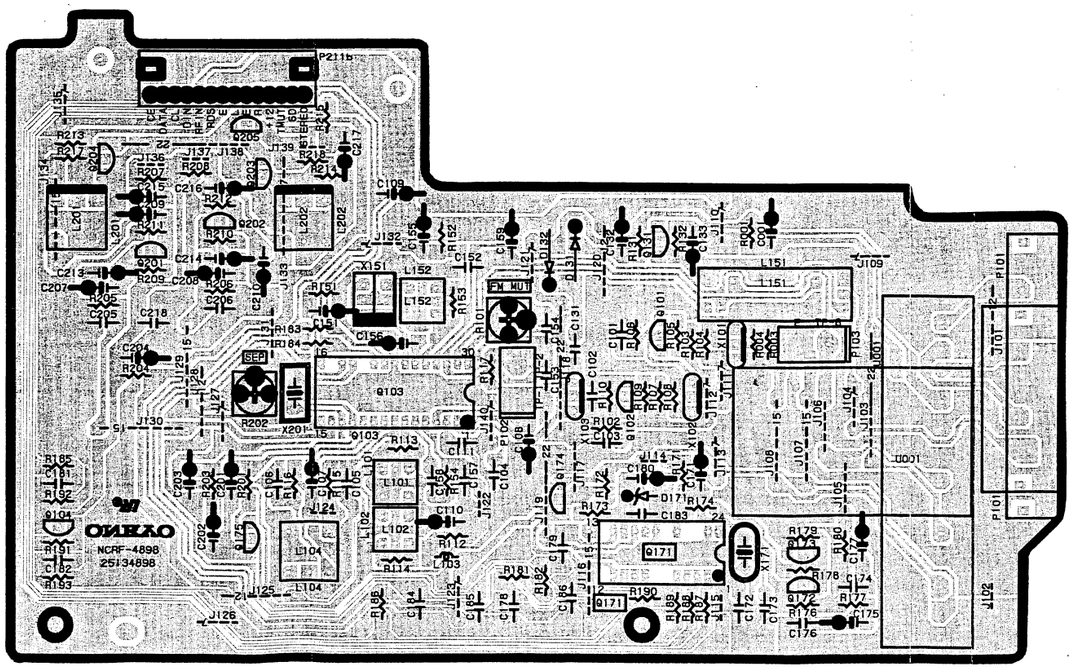

POWER SUPPLY CIRCUIT PC BOARD (NAPS-4900)

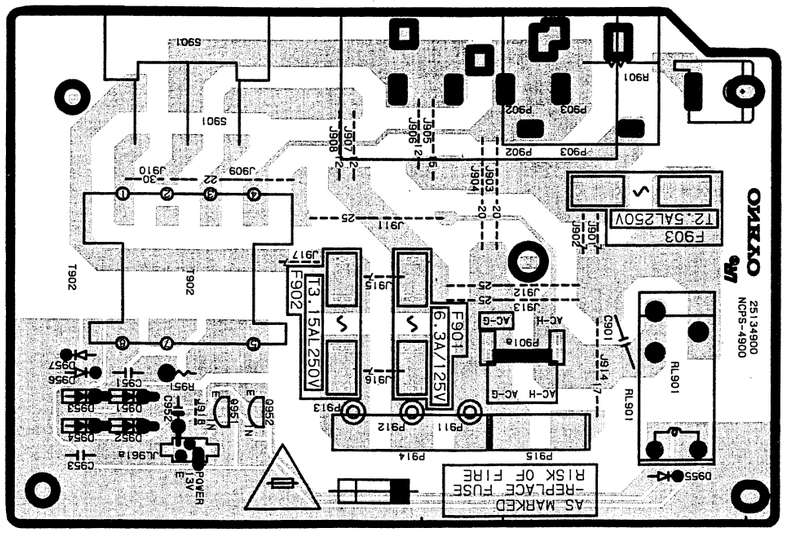

SCHEMATIC DIAGRAM
MODEL TX-9022RDS

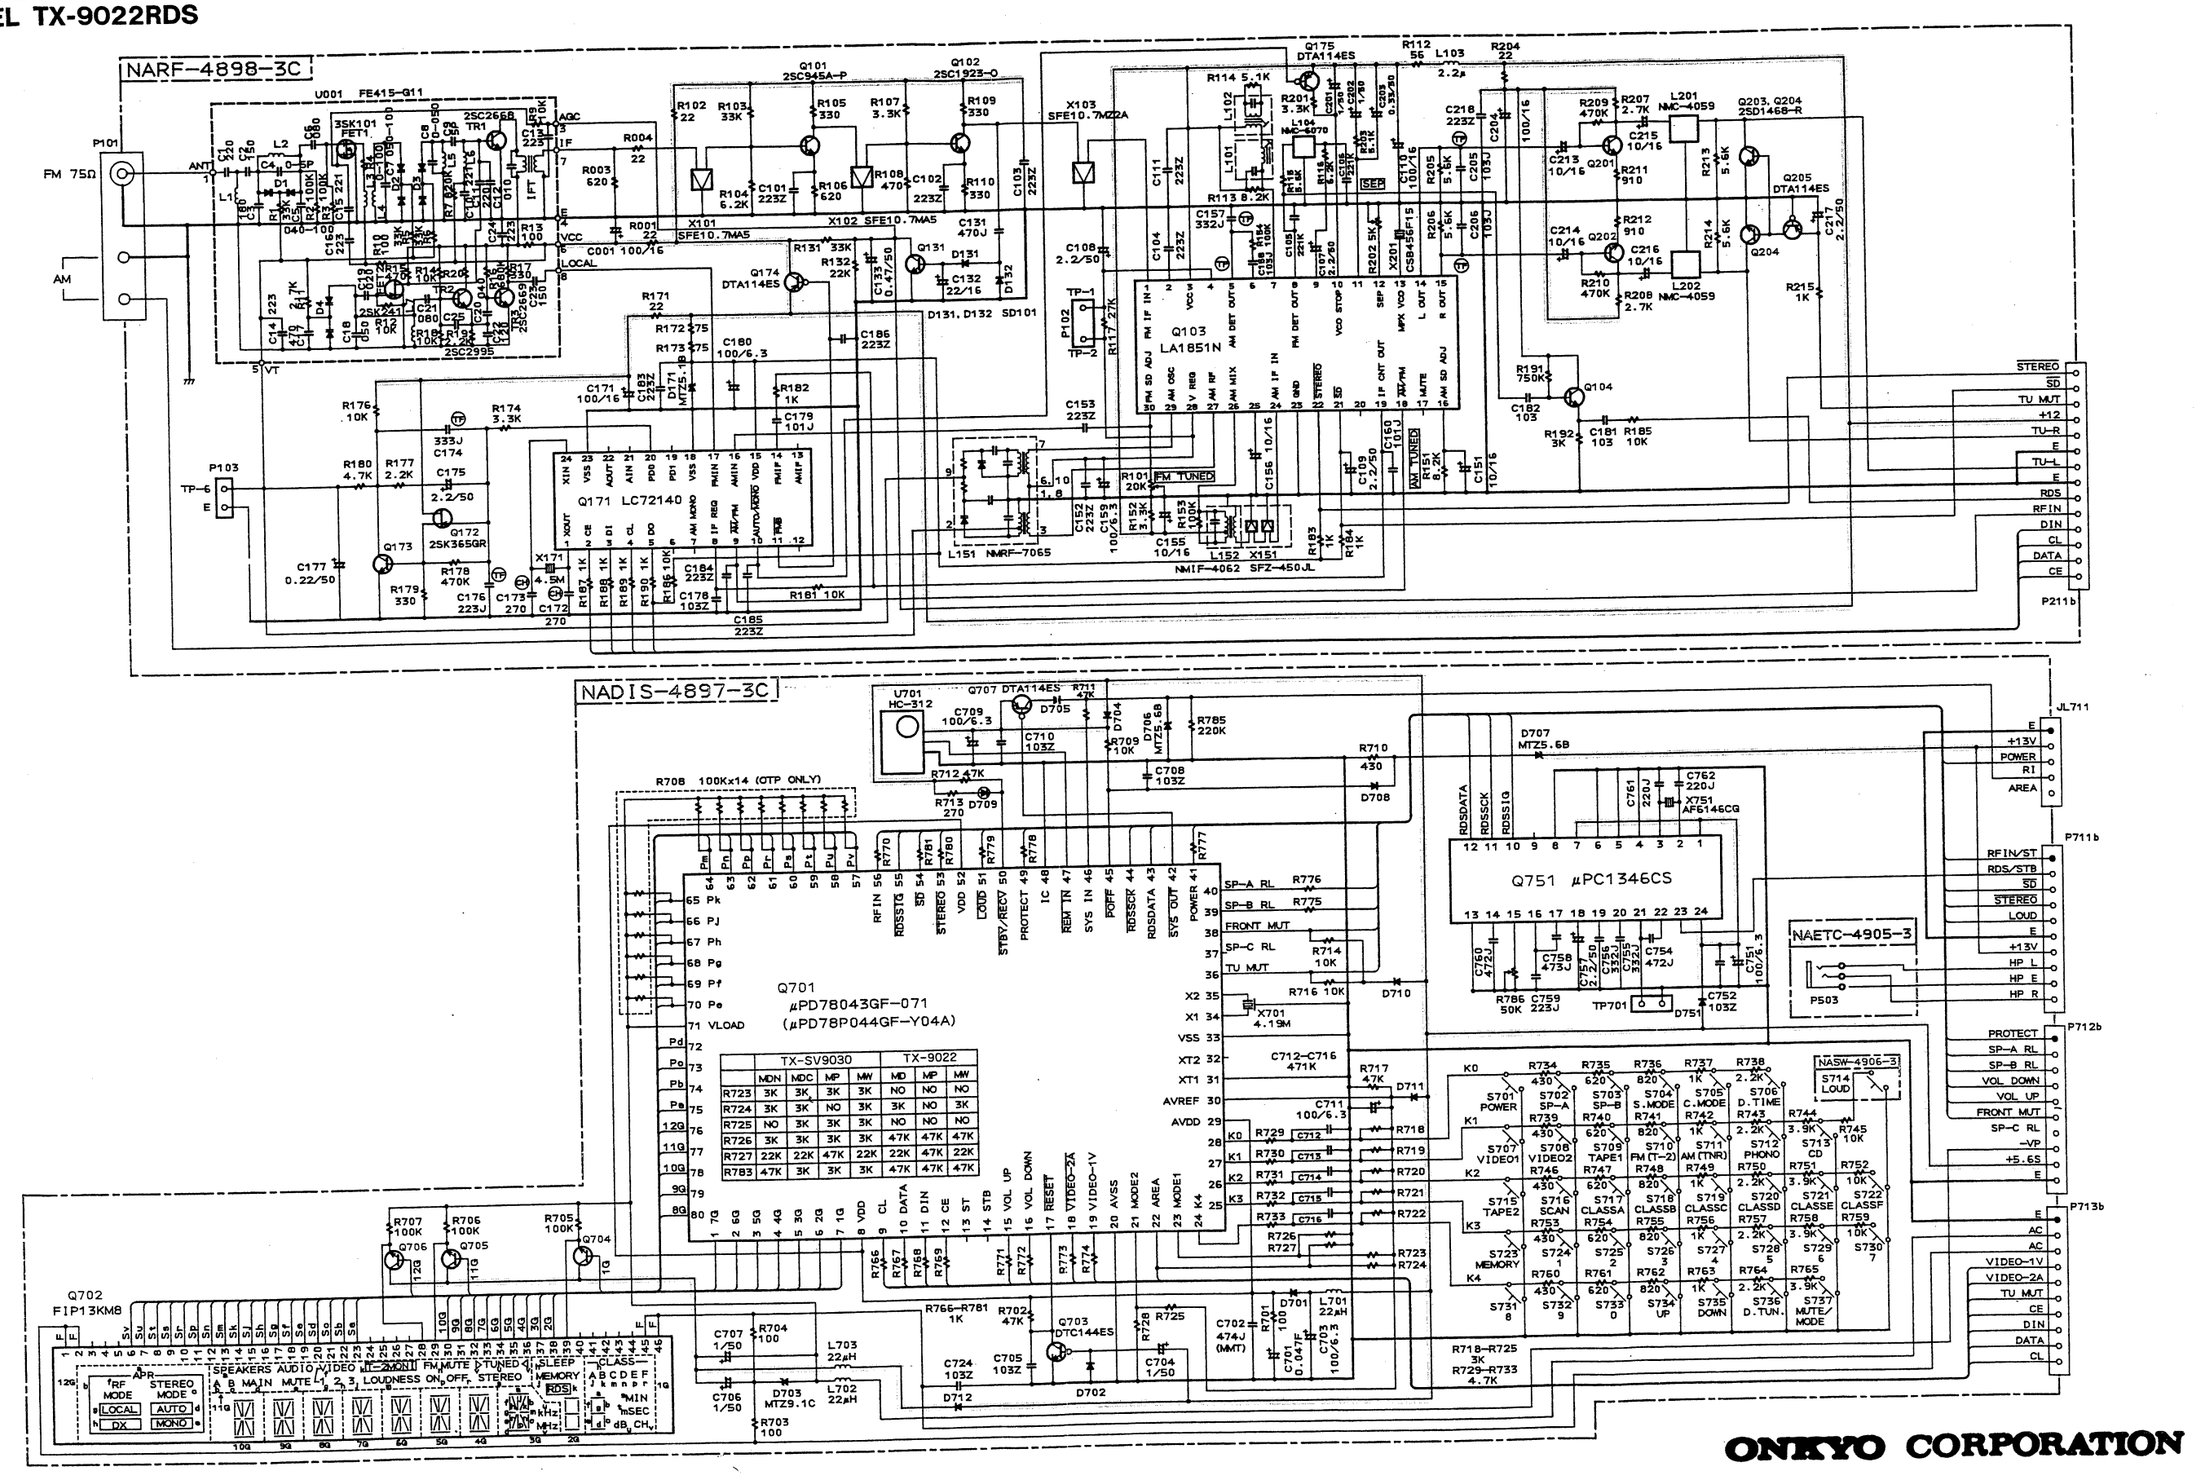

ONKYO CORPORATION

SCHEMATIC DIAGRAM
MODEL TX-SV9030

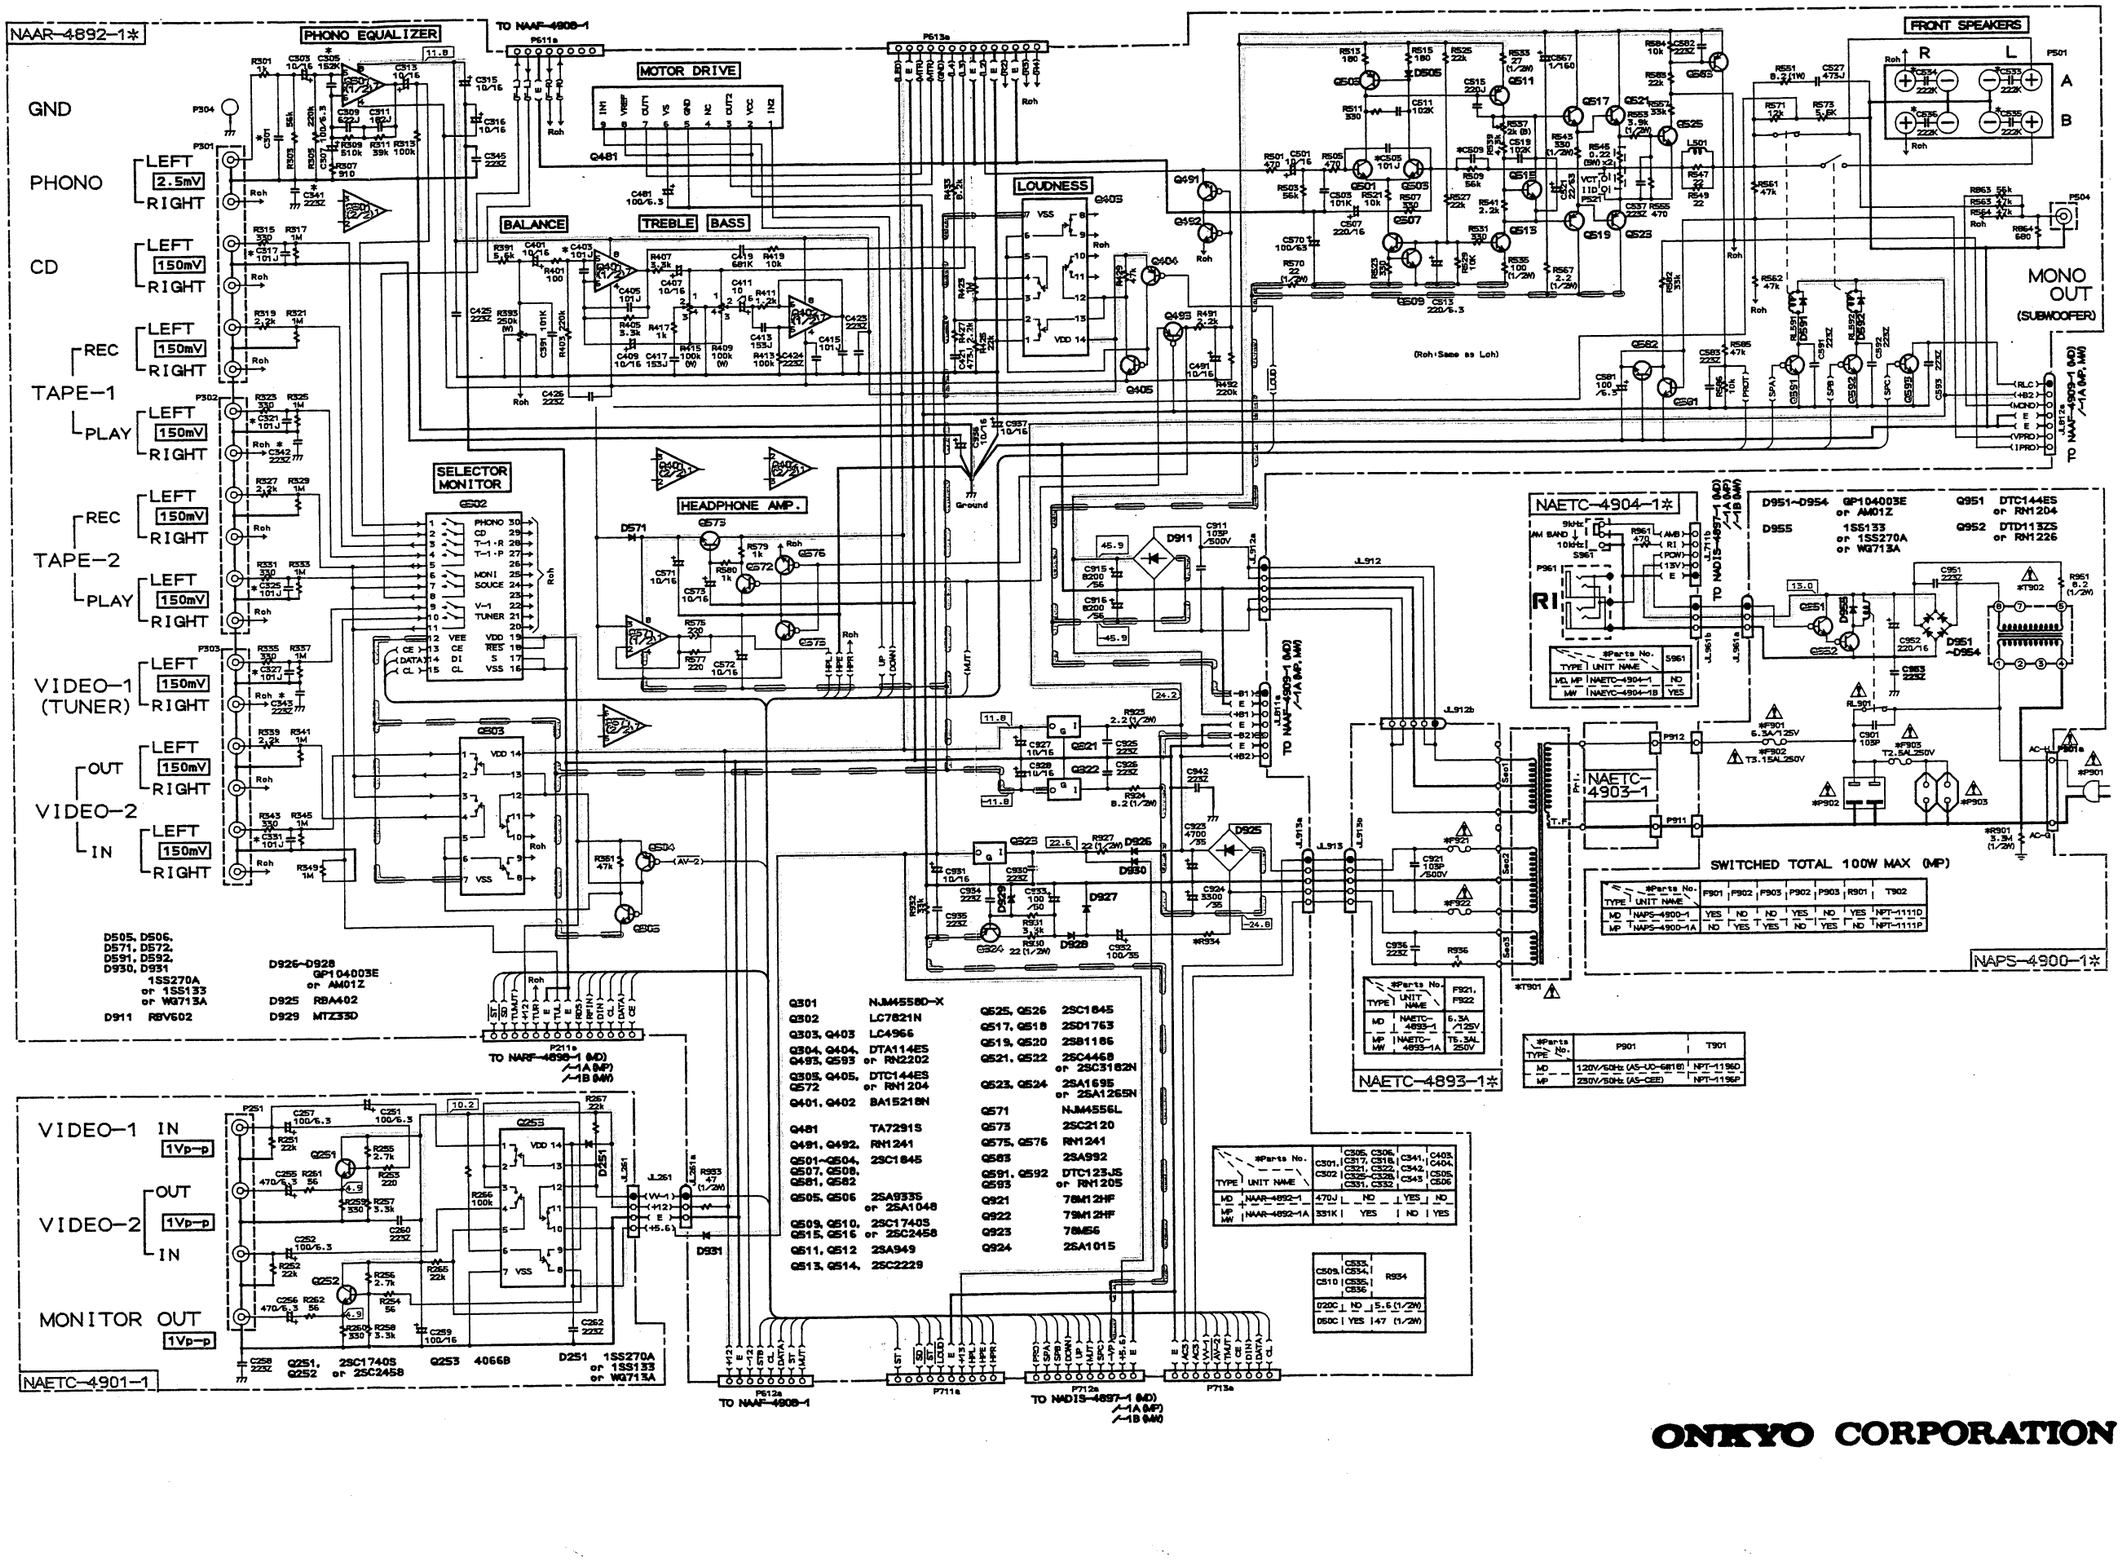

ONKYO CORPORATION

SCHEMATIC DIAGRAM
MODEL TX-9022RDS

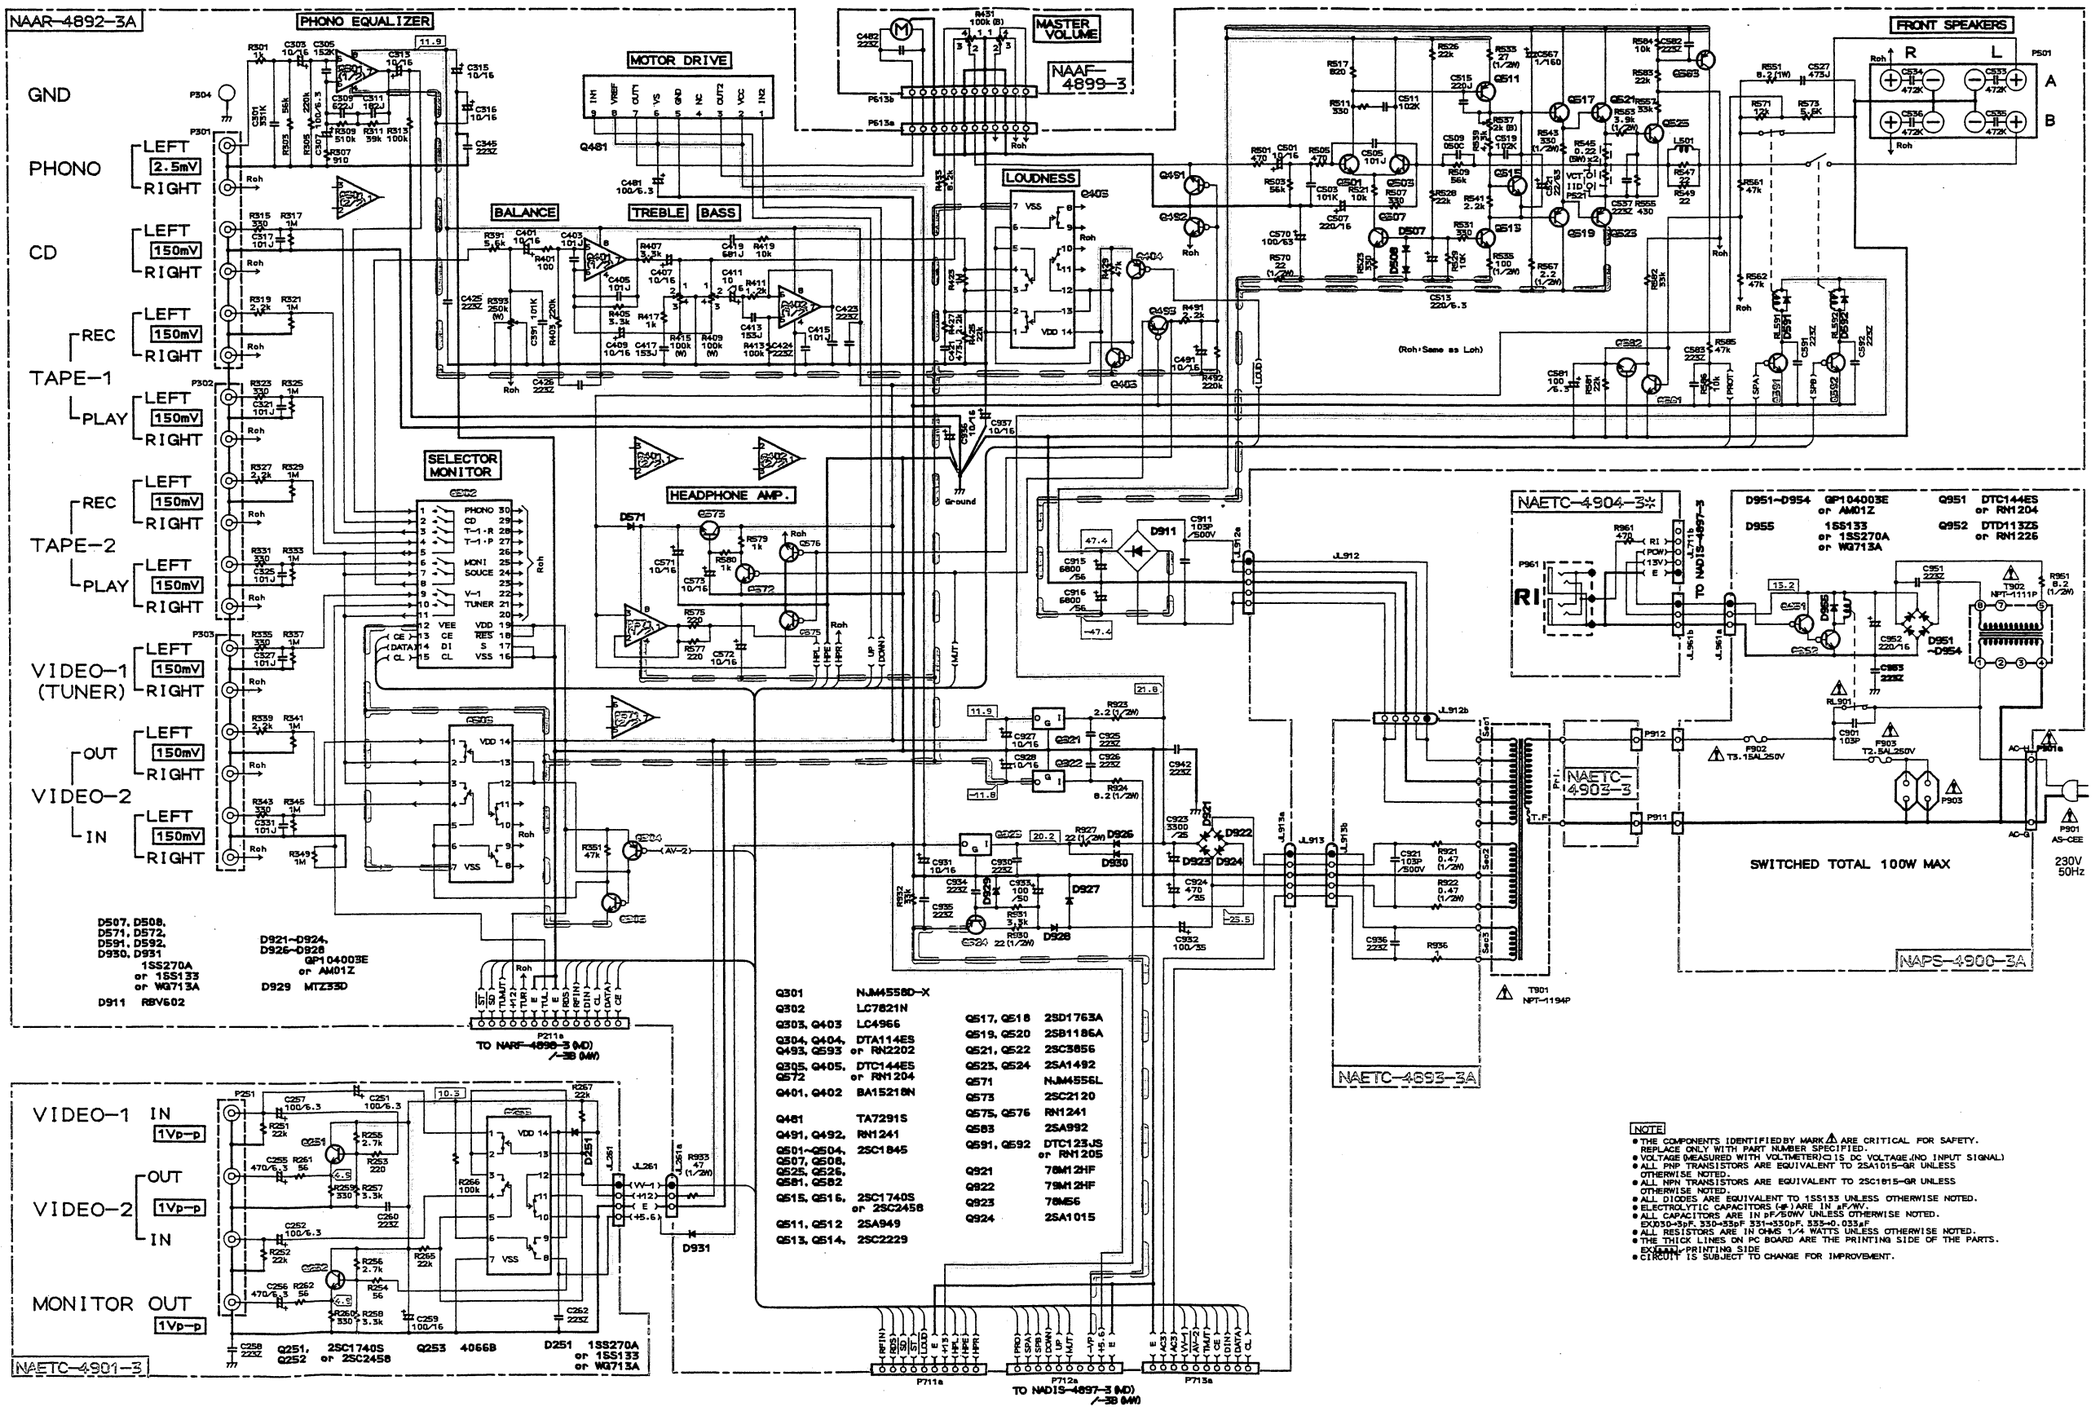

NOTE
- THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE MEASURED WITH VOLTMETER(10 1S DC VOLTAGE/NO INPUT SIGNAL)
- ALL PNP TRANSISTORS ARE EQUIVALENT TO 2SA1015-GR UNLESS OTHERWISE NOTED.
- ALL NPN TRANSISTORS ARE EQUIVALENT TO 2SC1815-GR UNLESS OTHERWISE NOTED.
- ALL DIODES ARE EQUIVALENT TO 1SS133 UNLESS OTHERWISE NOTED.
- ELECTROLYTIC CAPACITORS (▶) ARE IN μF/WV.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED. EX)0.45pF, 330→330pF, 331→330pF, 333→0.033μF
- ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES ON PC BOARD ARE THE PRINTING SIDE OF THE PARTS. EX)~~~~: PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

ONKYO CORPORATION

SCHEMATIC DIAGRAM
MODEL TX-SV9030

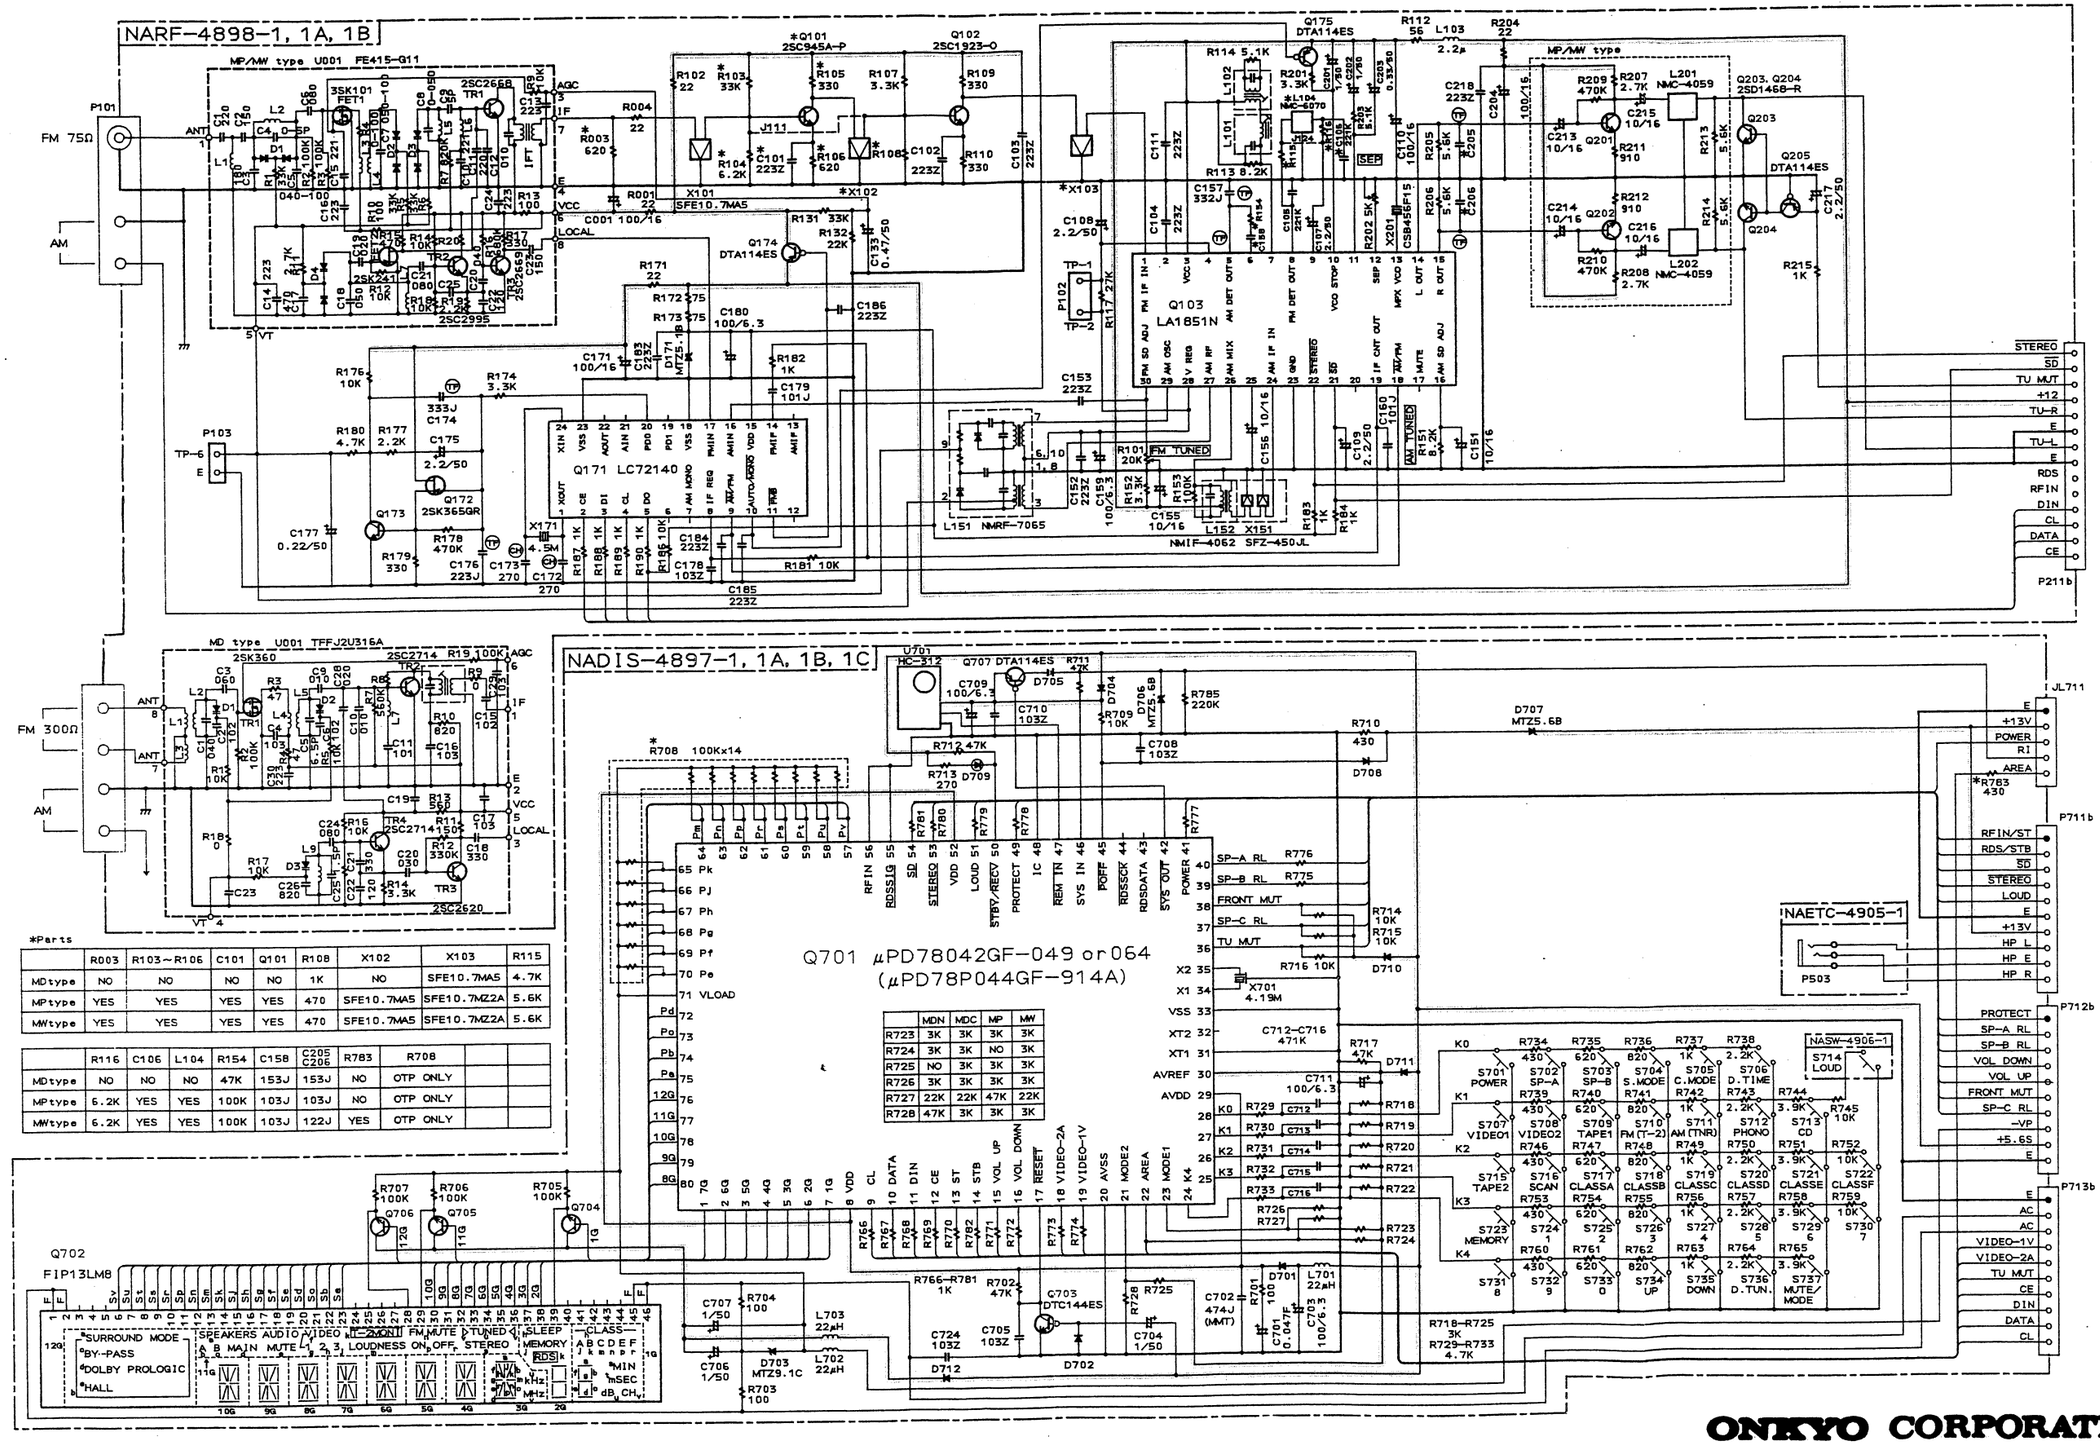

*Parts

	R003	R103~R106	C101	Q101	R108	X102	X103	R115
MDtype	NO	NO	NO	NO	1K	NO	SFE10.7MA5	4.7K
MPtype	YES	YES	YES	YES	470	SFE10.7MA5	SFE10.7MZ2A	5.6K
MWtype	YES	YES	YES	YES	470	SFE10.7MA5	SFE10.7MZ2A	5.6K

	R116	C106	L104	R154	C158	C205 C206	R783	R708		
MDtype	NO	NO	NO	47K	153J	153J	NO	OTP ONLY		
MPtype	6.2K	YES	YES	100K	103J	103J	NO	OTP ONLY		
MWtype	6.2K	YES	YES	100K	103J	122J	YES	OTP ONLY		

	MDN	MDC	MP	MW
R723	3K	3K	3K	3K
R724	3K	3K	NO	3K
R725	NO	3K	3K	3K
R726	3K	3K	3K	3K
R727	22K	22K	47K	22K
R728	47K	3K	3K	3K

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

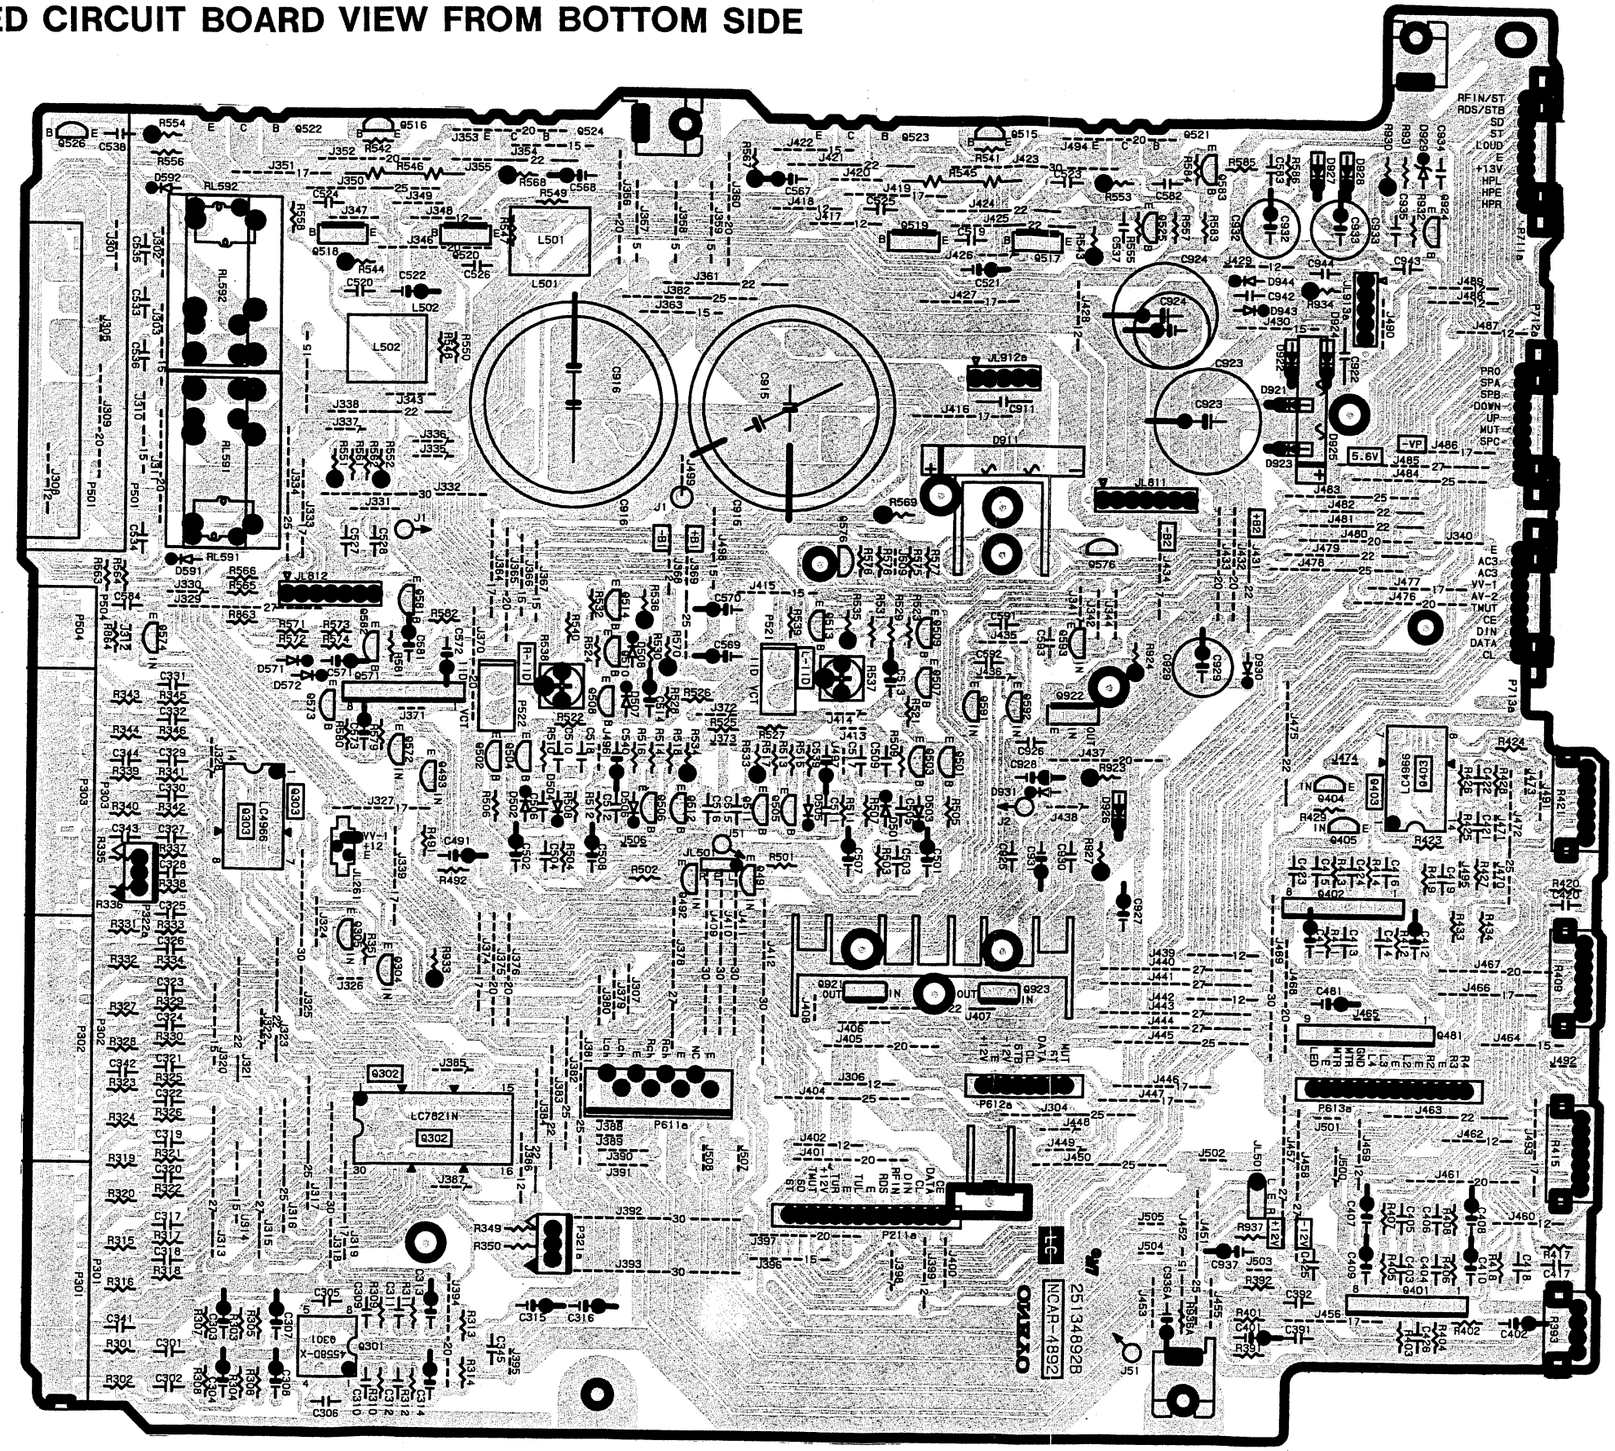

MAIN CIRCUIT PC BOARD (NAAR-4892)

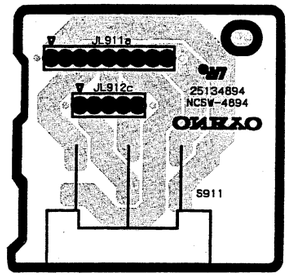

SWITCH PC BOARD (NASW-4894)

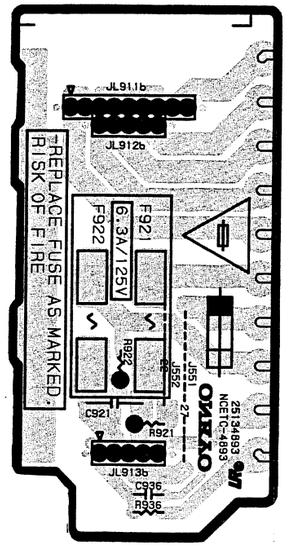

POWER SUPPLY CIRCUIT PC BOARD (NAETC-4893)

TX-9022RDS
TX-SV9030

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

SURROUND CIRCUIT PC BOARD (NAAF-4908)

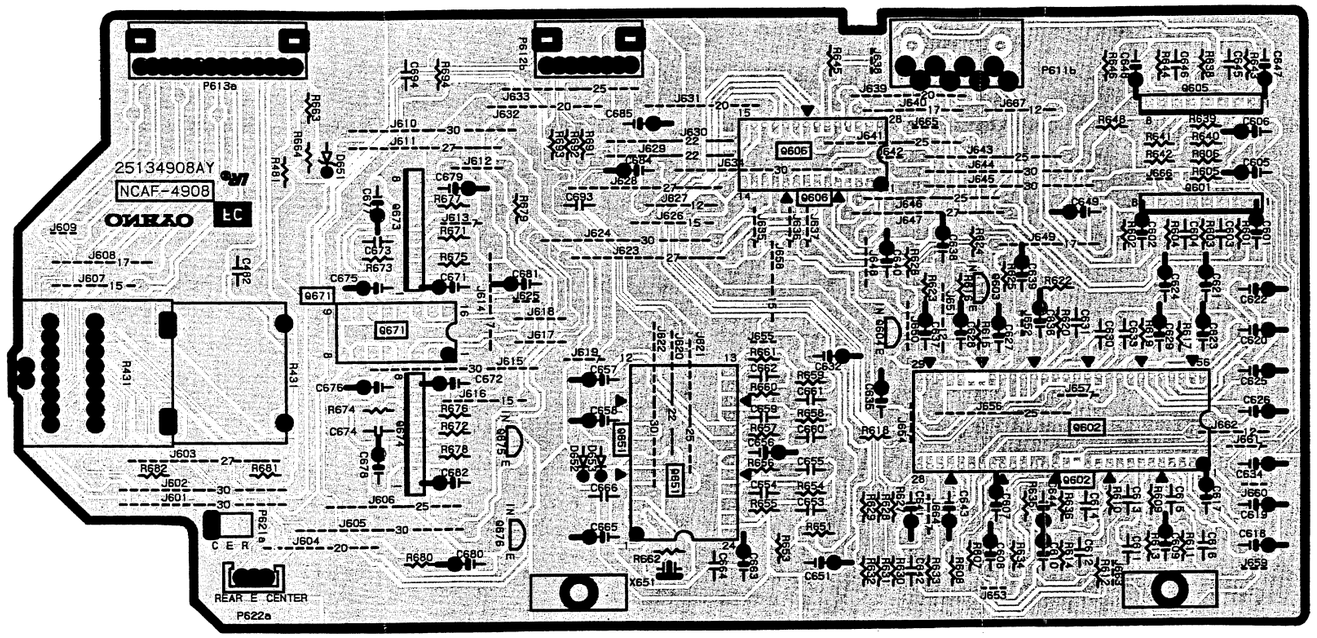

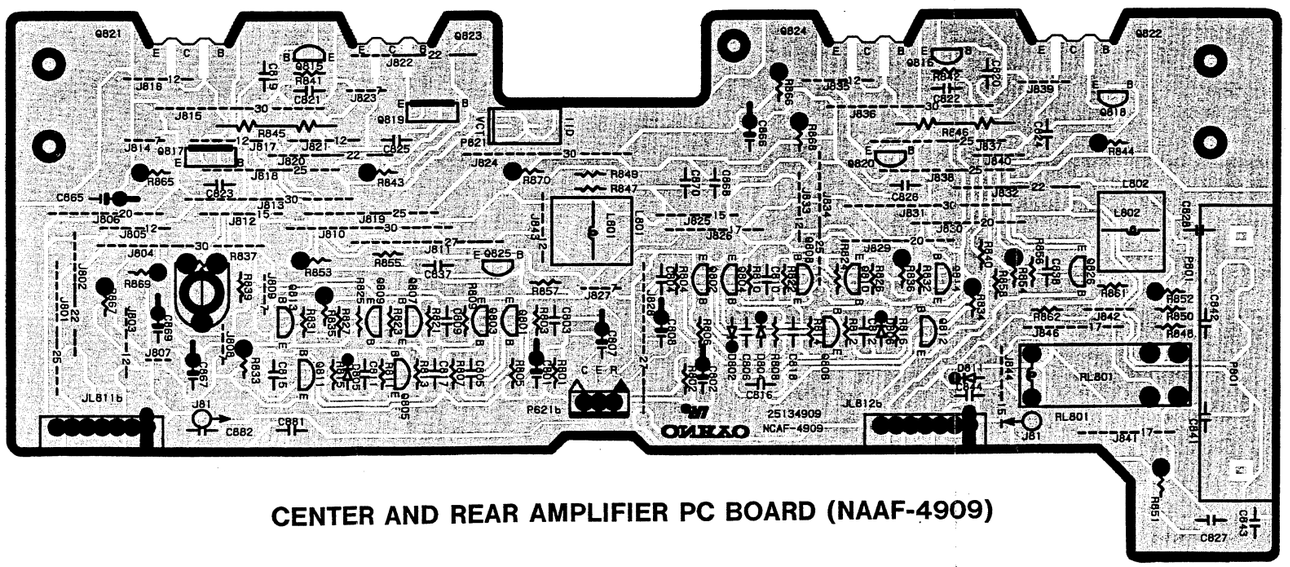

CENTER AND REAR AMPLIFIER PC BOARD (NAAF-4909)

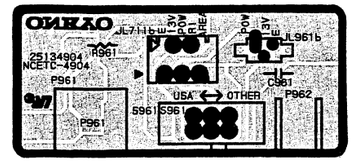

RI TERMINAL PC BOARD (NAETC-4904)

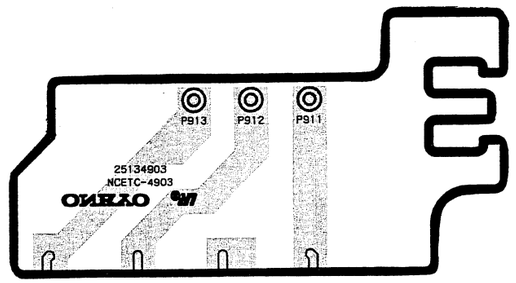

PRIMARY CIRCUIT PC BOARD (NAETC-4903)

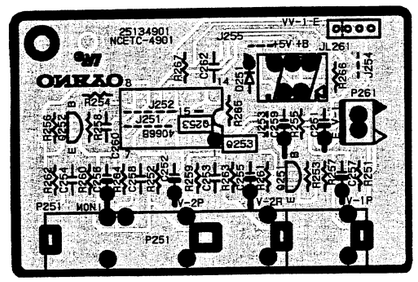

VIDEO CIRCUIT PC BOARD (NAETC-4901)

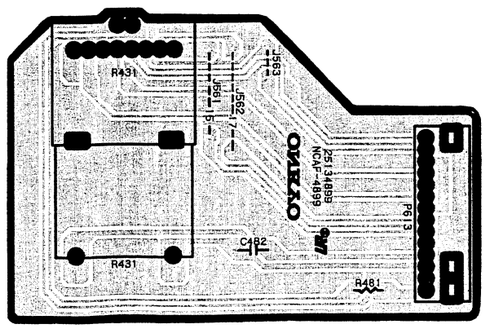

VOLUME CIRCUIT PC BOARD (NAAF-4899)

SCHEMATIC DIAGRAM
MODEL TX-SV9030

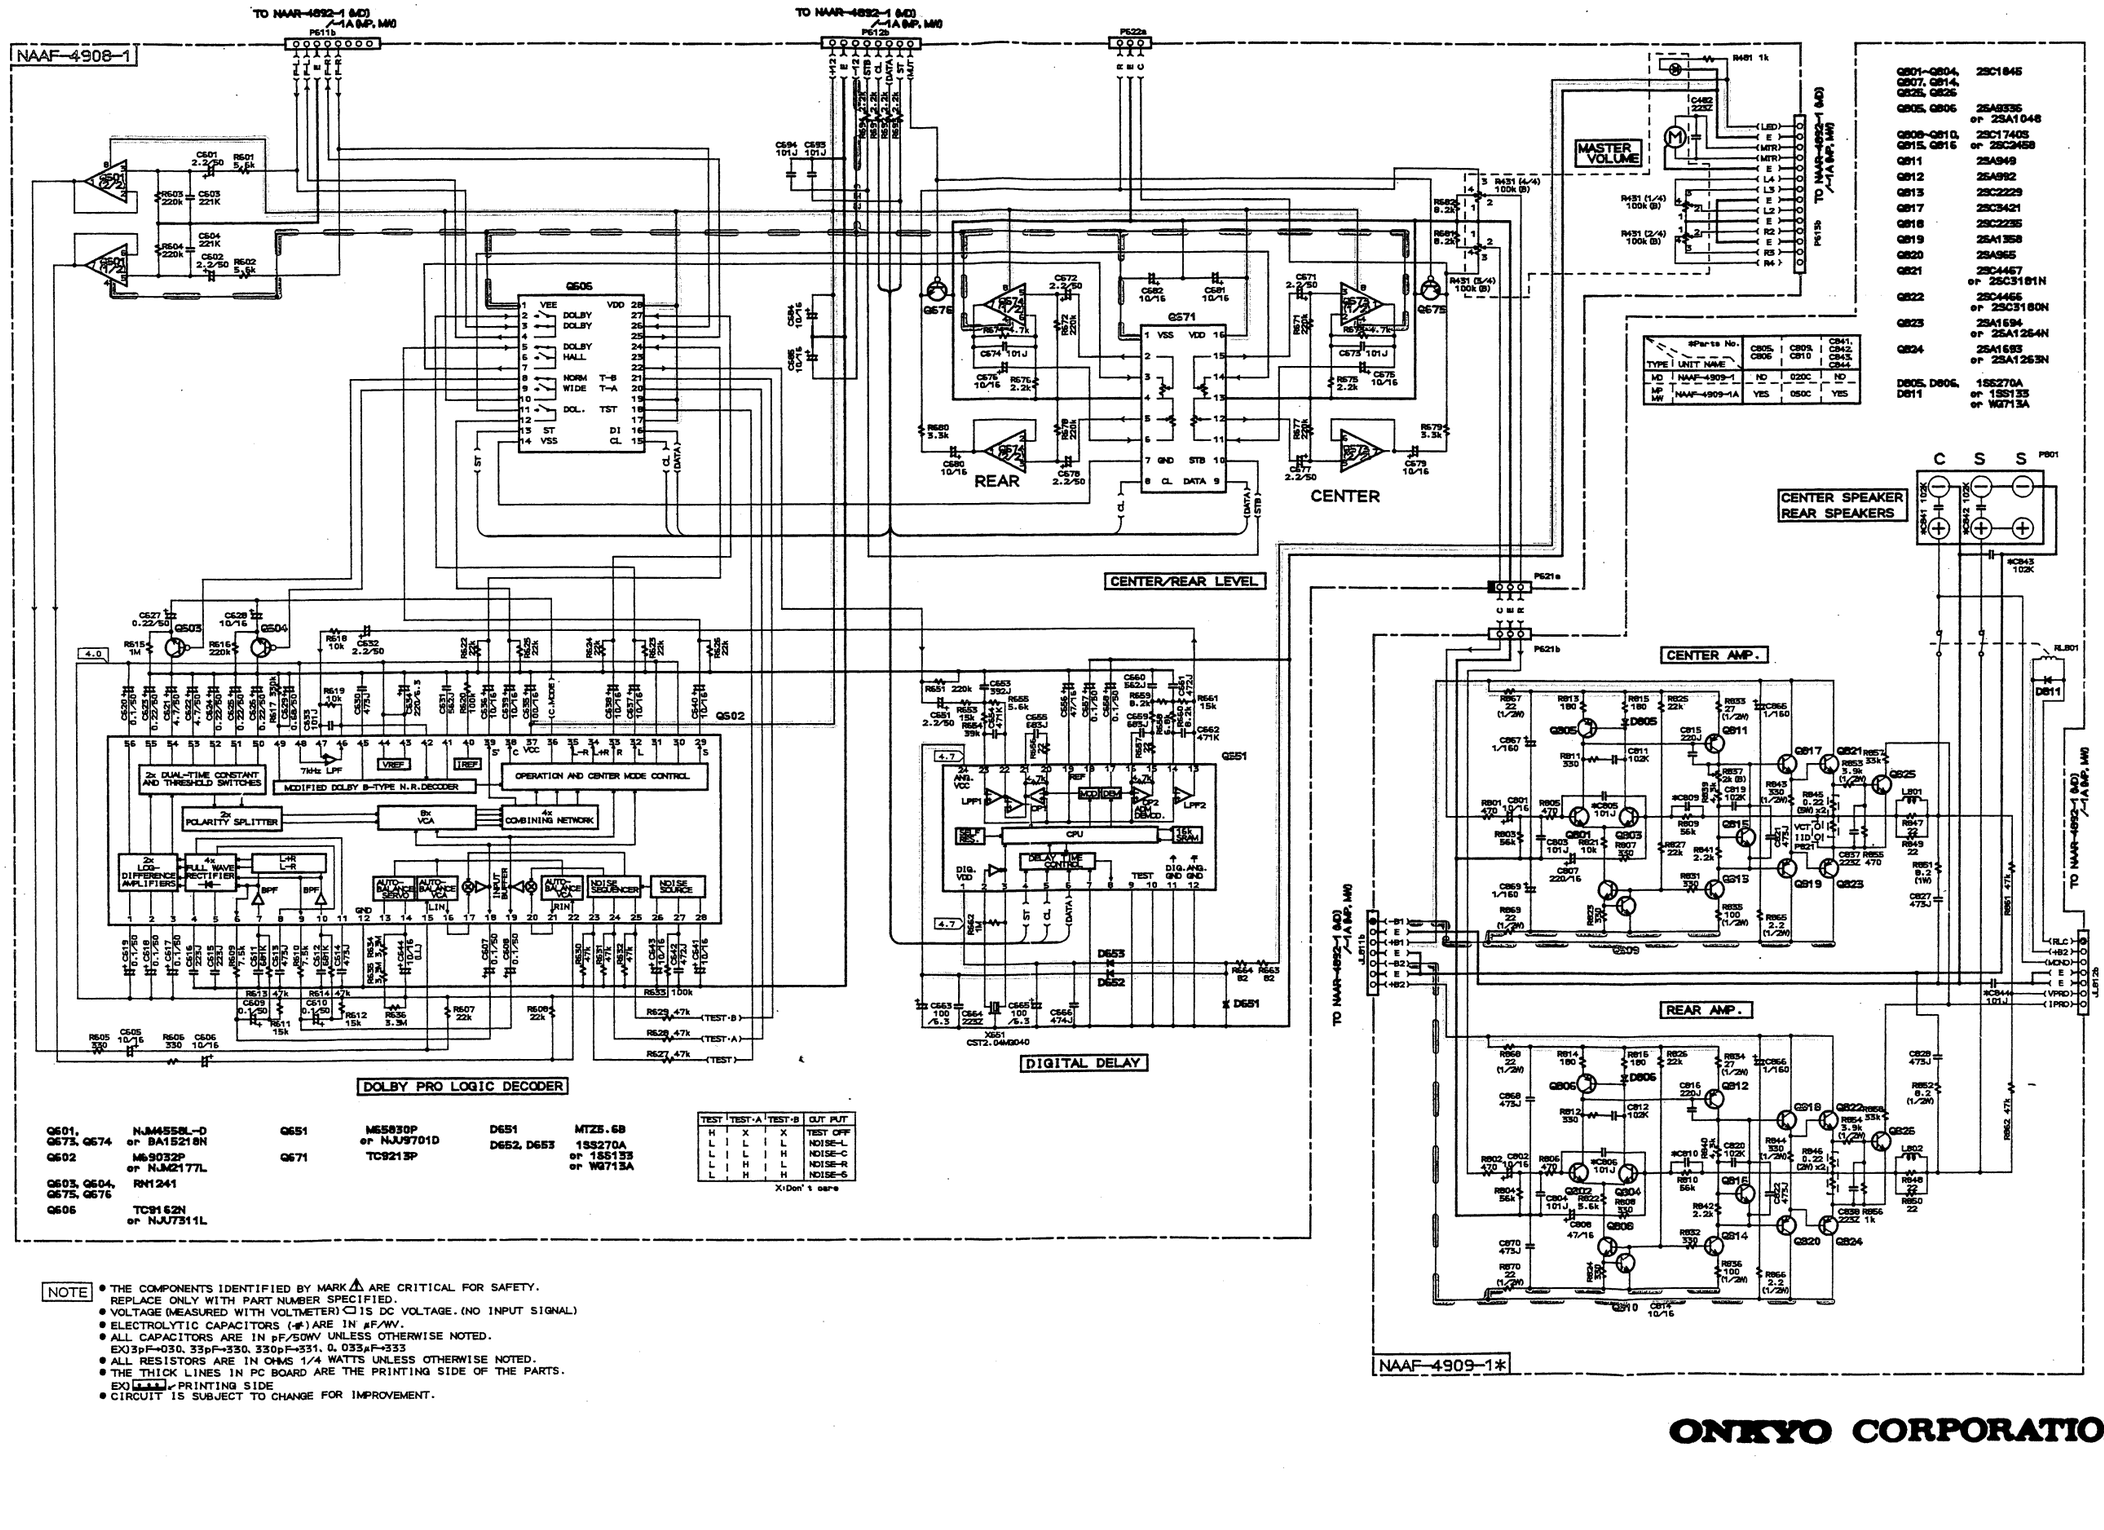

Q501, Q673, Q674	NJM4558L-D or BA15218N	Q651	M65830P or NJU9701D	D651	MTZ5.6B
Q502	M69032P or NJM2177L	Q671	TC9213P	D652, D653	1SS270A or 1SS133 or WG713A
Q503, Q504, Q675, Q676	RN1241				
Q505	TC9162N or NJU7311L				

TEST	TEST-A	TEST-B	OUTPUT
H	L	L	TEST OFF
L	L	H	NOISE-L
L	H	L	NOISE-C
L	H	H	NOISE-R
L	L	L	NOISE-S

X:Don't care

Parts No. TYPE	UNIT NAME	C805, C806	C809, C810	C841, C842, C843, C844
NO	NAAF-4909-1	NO	020C	NO
EXP MW	NAAF-4909-1A	YES	050C	YES

Q801–Q804, Q807, Q814, Q825, Q826	2SC1845
Q805, Q806	2SA9335 or 2SA1048
Q808–Q810, Q815, Q816	2SC1740S or 2SC3458
Q811	2SA949
Q812	2SA992
Q813	2SC2229
Q817	2SC3421
Q818	2SC2235
Q819	2SA1358
Q820	2SA965
Q821	2SC4467 or 2SC3181N
Q822	2SC4466 or 2SC3180N
Q823	2SA1694 or 2SA1264N
Q824	2SA1693 or 2SA1263N
D805, D806, D811	1SS270A or 1SS133 or WG713A

NOTE
- THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH VOLTMETER) ☐ IS DC VOLTAGE. (NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS (-#-) ARE IN μF/WV.
- ALL CAPACITORS ARE IN pF/50WV UNLESS OTHERWISE NOTED. EX) 3pF→030, 33pF→330, 330pF→331, 0.033μF→333
- ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
- THE THICK LINES IN PC BOARD ARE THE PRINTING SIDE OF THE PARTS. EX) ▬▬ PRINTING SIDE
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

ONKYO CORPORATION

PRINTED CIRCUIT BOARD-PARTS LIST

TX-9022RDS

MAIN CIRCUIT PC BOARD (NAAR-4892-3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q301	222502	NJM4558D-X
Q302	22240280	LC7821N
Q303,Q403	22240025	LC4966
Q401,Q402	22240247	BA15218N
Q481	22240239	TA7291S
Q571	22240752	NJM4556L
Q921	222780125NEC	78M12HF
Q922	222790125	79M12HF
Q923	222780565JRC	78M56
	Transistors	
Q304,Q404	2213510 or	DTA114ES or
Q493	2214350	RN2202
Q305,Q405	221282 or	DTC144ES or
Q572	2213560	RN1204
Q491,Q492	2213631 or	RN1241-A or
Q575,Q576	2213632	RN1241-B
Q501-Q504	2211732 or	2SC1845-F or
Q507,Q508	2211733	2SC1845-E
Q511,Q512	2211353 or	2SA949-O or
	2211354	2SA949-Y
Q513,Q514	2211633 or	2SC2229-O or
	2211634	2SC2229-Y
Q515,Q516	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
Q517,Q518	2202034 or	2SD1763A-D or
	2202035	2SD1763A-E
Q519,Q520	2202024 or	2SB1186A-D or
	2202025	2SB1186A-E
Q521,Q522	2201653,	* 2SC3856-O,
	2201654 or	* 2SC3856-Y or
	2201655	* 2SC3856-P
Q523,Q524	2201663,	* 2SA1492-O,
	2201664 or	* 2SA1492-Y or
	2201665	* 2SA1492-P
Q525,Q526	2211732 or	2SC1845-F or
	2211733	2SC1845-E
Q573	2211163 or	2SC2120-O or
	2211164	2SC2120-Y
Q581,Q582	2211732 or	2SC1845-F or
	2211733	2SC1845-E
Q583	2211792 or	2SA992-F or
	2211793	2SA992-E
Q591,Q592	2213640 or	DTC123JS or
	2214660	RN1205
Q924	2211455	2SA1015-GR

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D507,D508	223222,	WG713A,
D571,D572	223205 or	1SS270A or
D591,D592	223163	1SS133
D911	22380038	RBV602
D921-D924	22380035 or	GP104003E or
D926-D928	22380046	AM01Z
D929	224453304	MTZ33D
D930,D931	223222,	WG713A,
	223205 or	1SS270A or
	223163	1SS133
	Coils	
L501,L502	231176S	S-1.3C
	Capacitors	
C303,C304	354741009	10 μF,16V,Elect.
C307,C308	354721019	100 μF,6.3V,Elect.
C309,C310	374726224	6200pF±5%,50V,Plastic
C311,C312	374721824	1800pF±5%,50V,Plastic
C313-C316	354741009	10 μF,16V,Elect.
C391,C392	374721015	100pF±10%,50V,Plastic
C401,C402	354741009	10 μF,16V,Elect.
C407-C412	354741009	10 μF,16V,Elect.
C413,C414	374721534	0.015 μF±5%,50V,Plastic
C417,C418	374721534	0.015 μF±5%,50V,Plastic
C421,C422	374724734	0.047 μF±5%,50V,Plastic
C481,C514	354721019	100 μF,6.3V,Elect.
C491	354741009	10 μF,16V,Elect.
C501,C502	354741009	10 μF,16V,Elect.
C503,C504	374721015	100pF±10%,50V,Plastic
C507,C508	354742219	220 μF,16V,Elect.
C513,C514	354722219	220 μF,6.3V,Elect.
C521,C522	354772209	22 μF,63V,Elect.
C527,C528	374724734	0.047 μF±5%,50V,Plastic
C567,C568	354700109	1 μF,160V,Elect.
C570	354771019	100 μF,63V,Elect.
C571-C573	354741009	10 μF,16V,Elect.
C581	354721019	100 μF,6.3V,Elect.
C915,C916	3504266 or	# 6800 μF,56V or
	3504267	# 6800 μF,56V,Elect.
C923	354753329	3300 μF,25V,Elect.
C924	354764719	470 μF,35V,Elect.
C927,C928	354741009	10 μF,16V,Elect.
C931	354741009	10 μF,16V,Elect.
C932	354761019	100 μF,35V,Elect.
C933	354781019	100 μF,50V,Elect.
C936-C938	354741009	10 μF,16V,Elect.
	Resistors	
R393	5104225	N11RGLC250KWT22Z, Balance
R409	5104230	N14RLC100KWT22Z,Bass
R415	5104230	N14RLC100KWT22Z,Treble

CIRCUIT NO.	PART NO.	DESCRIPTION
	Resistors	
R533,R534	443522704	27 ohm,1/2W,Metal oxide
R535,R536	443521014	100 ohm,1/2W,Metal oxide
R537,R538	5210259	N06HR 2KBC,Trim
R543,R544	443523314	330 ohm,1/2W,Metal oxide
R545,R546	4000132Y	0.22 ohm×2,5W+5W,Metal plate
R551,R552	453630824	8.2 ohm,1W,Metal
R553,R554	443523924	3.9 kohm,1/2W,Metal oxide
R567,R568	453530224	2.2 ohm,1/2W,Metal
R570	443522204	22 ohm,1/2W,Metal oxide
R923	453530224	2.2 ohm,1/2W,Metal
R924	453530824	8.2 ohm,1/2W,Metal
R927,R930	443522204	22 ohm,1/2W,Metal oxide
R933	443524704	47 ohm,1/2W,Metal oxide
	Relaies	
RL591,RL592	25065339	NRL-2P5A-DC24-046
	Plugs	
P211a	25055652	NPLG-14P608
P613a	25055651	NPLG-12P607
	Terminals	
P301-P303	25045300	NPJ-6PDBL-159
P501	25060158	NTM-8PDMN084
	Sockets	
P711a-P713a	25051046	NSCT-10P833
JL261a	25051087	NSCT-3P874
JL912a,JL913a	25051109	NSCT-5P896

POWER SUPPLY CIRCUIT PC BOARD(NAETC-4893-3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
R921,R922	453534794	0.47 ohm,1/2W,Metal resistors

DISPLAY CIRCUIT PC BOARD (NADIS-4897-3C)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q701	22240758Y	μPD78043GF-071
Q751	22240679	μPC1346CS
	FL tube	
Q702	212128Y	FIP13KM8
	Remote control sensor	
U701	24130010Y	HC-312
	Transistors	
Q703	221282 or	DTC144ES or
	2213560	RN1204
Q704-Q706	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
Q707	2213510 or	DTA114ES or
	2214350	RN2202

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D701,D702	223205 or	1SS270A or
D704,D705	223163	1SS133
D703	224450913	MTZ9.1C
D706,D707	224450562	MTZ5.6B
D708,D751	223205 or	1SS270A or
D710-D712	223163	1SS133
D709	225291D	SEL4910D-D,LED
	Resonator	
X701	3010163	CST4.19MGW,Ceramic
X751	3010203	AF6146CG,X'tal
	Coils	
L701-L703	233454K220	NCH-1452 220K
	Capacitors	
C701	3000075Y	0.047F,5.5V,Super
C702	375524744	0.47 μF±5%,50V,Plastic
C703,C709	354721019	100 μF,6.3V,Elect.
C704	354780109	1 μF,50V,Elect.
C706,C707	354780109	1 μF,50V,Elect.
C711	354721019	100 μF,6.3V,Elect.
C751	354721019	100 μF,6.3V,Elect.
C753,C754	374724724	4700pF±5%,50V,Plastic
C755,C756	374723324	3300pF±5%,50V,Plastic
C757	354780229	2.2 μF,50V,Elect.
C758	374724734	0.047 μF±5%,50V,Plastic
C759	374722234	0.022 μF±5%,50V,Plastic
C760	374724724	4700pF±5%,50V,Plastic
	Resistor	
R786	5210265	N06HR50KBC,Trim
	Switches	
S701-S713	25035652	NPS-111-S604
S715-S737	25035652	NPS-111-S604
	Plugs	
P711b-P713b	25055659	NPLG-10P615
	Holder	
	27190937Y	FL tube
	Retainer	
	27141575Y	RI terminal

CAUTION:Replacement for transistor of mark *,if necessary, must be made from the same beta group (H FE) as the original type.

CAUTIONS:Replacement for capacitor of mark # must be made the same sort capacitor.

TUNER CIRCUIT PC BOARD (NARF-4898-3C)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Front end	
TU001	240089	FE415-G11
	ICs	
Q103	22240749Y	LA1851N
Q171	22240750Y	LC72140
	Transistors	
Q101	2210746	2SC945A-P
Q102	2211723	2SC1923-O
Q104	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
Q131,Q173	2213284 or	2SC1740S-R or
Q201,Q202	2212115	2SC2458-GR
Q172	2212445	2SK365-GR
Q174,Q175	2213510 or	DTA114ES or
Q205	2214350	RN2202
Q203,Q204	2212794	2SD1468-R
	Diodes	
D131,D132	223191	SD101
D171	224450512	MTZ5.1B
	Resonators	
X171	3010228Y	XTL-4.5M,Crystal
X201	3010227Y	CSB456F15,Ceramic
	Coils and transformers	
L101	233457Y	NFIF-4081
L102	233458Y	NFIF-4082
L103	233454M022	NCH-1452 022M
L104	233383	NMC-6070
L201,L202	233355A	NMC-4059
L151	232163	NMRF-7065
L152	232139	NMIF-4062
	Ceramic filters	
X101,X102	3010071	SFE10.7MA5
X103	3010130	SFE10.7MZ2A
X151	3010123	SFZ-450JL
	Capacitors	
C001	354741019	100 μ F,16V,Elect.
C107-C109	354780229	2.2 μ F,50V,Elect.
C110,C171	354741019	100 μ F,16V,Elect.
C132	354742209	22 μ F,16V,Elect.
C133	354784799	0.47 μ F,50V,Elect.
C151	354741009	10 μ F,16V,Elect.
C155,C156	354741009	10 μ F,16V,Elect.
C157	374723324	3300pF±5%,50V,Plastic
C158	374721534	0.015 μ F±5%,50V,Plastic
C159,C180	354721019	100 μ F,6.3V,Elect.
C174	374723334	0.033 μ F±5%,50V,Plastic
C175	354780229	2.2 μ F,50V,Elect.
C176	374722234	0.022 μ F±5%,50V,Plastic
C177	354782299	0.22 μ F,50V,Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C201,C202	354780109	1 μ F,50V,Elect.
C203	354783399	0.33 μ F,50V,Elect.
C204	354741019	100 μ F,16V,Elect.
C205,C206	374721034	0.01 μ F±5%,50V,Plastic
C213-C216	354741009	10 μ F,16V,Elect.
C217	354780229	2.2 μ F,50V,Elect.
	Resistors	
R101	5210263	N06HR 20KBC,Trim
R202	5210259	N06HR2KBC,Trim
	Terminal	
P101	25060117	NTM-2PDML051
	Socket	
P211b	25050986	NSCT-14P773

VOLUME CIRCUIT PC BOARD (NAAF-4899-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
R431,R432	5104334Y	N16RGL100KBT25F,Variable,Volume
P613b	25050985	NSCT-12P772,Socket

POWER SUPPLY CIRCUIT PC BOARD (NAPS-4900-3A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q951	221282 or	DTC144ES or
	2213560	RN1204
Q952	2213650 or	DTD113ZS or
	2214680	RN1226
	Diodes	
D951-D954	22380035 or	GP104003E or
	22380046	AM01Z
D955	223222,	WG713A,
	223205 or	1SS270A or
	223163	1SS133
	Capacitors	
C901	3500065A	⚠ DE7150FZ103PAC400V/125V
C952	354742219	220 μ F,16V,Elect.
	Resistor	
R951	453530824	8.2 ohm,1/2W,Metal
	Power transformer	
T902	2300671	⚠ NPT-1111P
	Relay	
RL901	25065483	⚠ NRL-1P5A-DC-12-084
	Fuses	
F902	252076	⚠ 3.15A-SE-EAK
F903	252075	⚠ 2.5A-SE-EAK
	Fuseholders	
F902a,F903a	25050065	⚠ YSH403T
	Socket	
P902	25050410	⚠ NSCT-2P235,AC outlet

VIDEO CIRCUIT PC BOARD (NAETC-4901-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q253	222840661	4066B
	Transistors	
Q251,Q252	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
	Diode	
D251	223222,	WG713A,
	223205 or	1SS270A or
	223163	1SS133
	Capacitors	
C251,C252	354721019	100 μ F,6.3V,Elect.
C255,C256	354724719	470 μ F,6.3V,Elect.
C257	354721019	100 μ F,6.3V,Elect.
C259	354741019	100 μ F,16V,Elect.
	Terminal	
P251	25045339	NPJ-4PDYE190

RI TERMINAL PC BOARD(NAETC-4904-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Terminal	
P961	25045330	NPJ-2PDBL184

HEADPHONE TERMINAL PC BOARD(NASW-4905-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Terminal	
P503	25045255	YKB21-5009

LOUDNESS SWITCH PC BOARD(NASW-4906-3)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Socket	
S714	25035652	NPS-111-S604

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

PRINTED CIRCUIT BOARD-PARTS LIST

TX-SV9030

MAIN CIRCUIT PC BOARD (NAAR-4892-1A)

CIRCUIT NO.	PART NO.		DESCRIPTION
	ICs		
Q301	222502		NJM4558D-X
Q302	22240280		LC7821N
Q303,Q403	22240025		LC4966
Q401,Q402	22240247		BA15218N
Q481	22240239		TA7291S
Q571	22240752		NJM4556L
Q921	222780125NEC		78M12HF
Q922	222790125		79M12HF
Q923	222780565JRC		78M56
	Transistors		
Q304,Q404	2213510 or		DTA114ES or
Q493	2214350		RN2202
Q305,Q405	221282 or		DTC144ES or
Q572	2213560		RN1204
Q491,Q492	2213631 or		RN1241-A or
Q575,Q576	2213632		RN1241-B
Q501-Q504	2211732 or	*	2SC1845-F or
Q507,Q508	2211733	*	2SC1845-E
Q505,Q506	2213354 or		2SA933S-R or
	2212125		2SA1048-GR
Q509,Q510	2213284 or		2SC1740S-R or
Q515,Q516	2212115		2SC2458-GR
Q511,Q512	2211353 or		2SA949-O or
	2211354		2SA949-Y
Q513,Q514	2211633 or		2SC2229-O or
	2211634		2SC2229-Y
Q517,Q518	2201944,	*	2SD1763-D,
	2201945 or	*	2SD1763-E or
	2201946	*	2SD1763-F
Q519,Q520	2201934,	*	2SB1186-D,
	2201935 or	*	2SB1186-E or
	2201936	*	2SB1186-F
Q521,Q522	2202523,	*	2SC4468-O,
	2202524,	*	2SC4468-Y,
	2202526,	*	2SC4468-P,
	2202292 or	*	2SC3182N-R or
	2202293	*	2SC3182N-O
Q523,Q524	2202513,	*	2SA1695-O,
	2202514,	*	2SA1695-Y,
	2202516,	*	2SA1695-P,
	2202282 or	*	2SA1265N-R or
	2202283	*	2SA1265N-O
Q525,Q526	2211732 or		2SC1845-F or
	2211733		2SC1845-E
Q573	2211163 or		2SC2120-O or
	2211164		2SC2120-Y
Q575,Q576	2213631 or		RN1241-A or
	2213632		RN1241-B

CIRCUIT NO.	PART NO.		DESCRIPTION
	Transistors		
Q581,Q582	2211732 or		2SC1845-F or
	2211733		2SC1845-E
Q583	2211792 or		2SA992-F or
	2211793		2SA992-E
Q591-Q593	2213640 or		DTC123JS or
	2214660		RN1205
Q924	2211455		2SA1015-GR
	Diodes		
D505,D506	223222,		WG713A,
D571,D572	223205 or		1SS270A or
D591,D592	223163		1SS133
D911	22380038		RBV602
D925	22380048		RBA402
D926-D928	22380035 or		GP104003E or
	22380046		AM01Z
D929	224453304		MTZ33D
D930,D931	223222,		WG713A,
	223205 or		1SS270A or
	223163		1SS133
	Coils		
L501,L502	231176S		S-1.3C
	Capacitors		
C303,C304	354741009		10 μ F,16V,Elect.
C307,C308	354721019		100 μ F,6.3V,Elect.
C309,C310	374726224		6200pF±5%,50V,Plastic
C311,C312	374721824		1800pF±5%,50V,Plastic
C313-C316	354741009		10 μ F,16V,Elect.
C391,C392	374721015		100pF±10%,50V,Plastic
C401,C402	354741009		10 μ F,16V,Elect.
C407-C412	354741009		10 μ F,16V,Elect.
C413,C414	374721534		0.015 μ F±5%,50V,Plastic
C417,C418	374721534		0.015 μ F±5%,50V,Plastic
C421,C422	374724734		0.047 μ F±5%,50V,Plastic
C481	354721019		100 μ F,6.3V,Elect.
C491	354741009		10 μ F,16V,Elect.
C501,C502	354741009		10 μ F,16V,Elect.
C503,C504	374721015		100pF±10%,50V,Plastic
C507,C508	354742219		220 μ F,16V,Elect.
C513,C514	354722219		220 μ F,6.3V,Elect.
C521,C522	354772209		22 μ F,63V,Elect.
C527,C528	374724734		0.047 μ F±5%,50V,Plastic
C567,C568	354700109		1 μ F,160V,Elect.
C570	354771019		100 μ F,63V,Elect.
C571-C573	354741009		10 μ F,16V,Elect.
C581	354721019		100 μ F,6.3V,Elect.
C915,C916	3504263 or	*	8200 μ F,56V or
	3504268	*	8200 μ F,56V,Elect.
C923	3504213		4700 μ F,35V,Elect.
C924	354763329		3300 μ F,35V,Elect.

CAUTION:Replacement for transistor of mark *,if necessary, must be made from the same beta group (H FE) as the original type.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C927,C928	354741009	10 μ F,16V,Elect.
C931	354741009	10 μ F,16V,Elect.
C932	354761019	100 μ F,35V,Elect.
C933	354781019	100 μ F,50V,Elect.
C936,C937	354741009	10 μ F,16V,Elect.
	Resistors	
R393	5104225	N11RGLC250KWT22Z, Balance
R409	5104230	N14RLC100KWT22Z,Bass
R415	5104230	N14RLC100KWT22Z,Treble
R533,R534	443522704	27 ohm,1/2W,Metal oxide
R535,R536	443521014	100 ohm,1/2W,Metal oxide
R537,R538	5210259	N06HR 2KBC,Trim
R543,R544	443523314	330 ohm,1/2W,Metal oxide
R545,R546	4000132Y	0.22 ohm×2,5W+5W,Metal plate
R551,R552	453630824	8.2 ohm,1W,Metal
R553,R554	443523924	3.9 kohm,1/2W,Metal oxide
R567,R568	453530224	2.2 ohm,1/2W,Metal
R570	443522204	22 ohm,1/2W,Metal oxide
R923	453530224	2.2 ohm,1/2W,Metal
R924	453530824	8.2 ohm,1/2W,Metal
R927,R930	443522204	22 ohm,1/2W,Metal oxide
R933	443524704	47 ohm,1/2W,Metal oxide
R934	443524704	47 ohm,1/2W,Metal oxide
	Relaies	
RL591,RL592	25065485	NRL-2P2A-DC24-086
	Plugs	
P211a,P613a	25055652	NPLG-14P608
P611a	25055678	NPLG-8P634
P612a	25055649	NPLG-8P605
	Terminals	
P301-P303	25045300	NPJ-6PDBL-159
P501	25060158	NTM-8PDMN084
P504	25045302	NPJ-1PDBL-161
	Sockets	
P711a-P713a	25051046	NSCT-10P833
JL261a	25051087	NSCT-3P874
JL811a,JL812a	25051111	NSCT-7P898
JL912a,JL913a	25051109	NSCT-5P896

POWER SUPPLY CIRCUIT PC BOARD(NAETC-4893-1A)

CIRCUIT NO.	PART NO.		DESCRIPTION
F921,F922	252076	!	6.3A-SE-EAK,Fuse
F921a,F922a	25050065	!	YSH403T,Fuseholders

DISPLAY CIRCUIT PC BOARD (NADIS-4897-1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q701	22240773Y	μ PD78042GF-064
	FL tube	
Q702	212127Y	FIP13LM8
	Remote control sensor	
U701	24130010Y	HC-312
	Transistors	
Q703	221282 or	DTC144ES or
	2213560	RN1204
Q704-Q706	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
Q707	2213510 or	DTA114ES or
	2214350	RN2202
	Diodes	
D701,D702	223205 or	1SS270A or
D704,D705	223163	1SS133
D703	224450913	MTZ9.1C
D706,D707	224450562	MTZ5.6B
D708	223205 or	1SS270A or
D710-D712	223163	1SS133
D709	225291D	SEL4910D-D,LED
	Resonator	
X701	3010163	CST4.19MGW,Ceramic
	Coils	
L701-L703	233454K220	NCH-1452 220K
	Capacitors	
C701	3000075Y	0.047F,5.5V,Super
C702	375524744	0.47 μ F±5%,50V,Plastic
C703,C709	354721019	100 μ F,6.3V,Elect.
C704	354780109	1 μ F,50V,Elect.
C706,C707	354780109	1 μ F,50V,Elect.
C711	354721019	100 μ F,6.3V,Elect.
	Switches	
S701-S713	25035652	NPS-111-S604
S715-S737	25035652	NPS-111-S604
	Plugs	
P711b-P713b	25055659	NPLG-10P615
	Holder	
	27190937Y	FL tube
	Retainer	
	27141575Y	RI terminal

TUNER CIRCUIT PC BOARD (NARF-4898-1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Front end	
TU001	240089	FE415-G11
	ICs	
Q103	22240749Y	LA1851N
Q171	22240750Y	LC72140
	Transistors	
Q101	2210746	2SC945A-P
Q102	2211723	2SC1923-O
Q172	2212445	2SK365-GR
Q173	2213284 or	2SC1740S-R or
Q201,Q202	2212115	2SC2458-GR
Q174,Q175	2213510 or	DTA114ES or
Q205	2214350	RN2202
Q203,Q204	2212794	2SD1468-R
	Diode	
D171	224450512	MTZ5.1B
	Resonators	
X171	3010228Y	XTL-4.5M,Crystal
X201	3010227Y	CSB456F15,Ceramic
	Coils and transformers	
L101	233457Y	NFIF-4081
L102	233458Y	NFIF-4082
L103	233454M022	NCH-1452 022M
L104	233383	NMC-6070
L201,L202	233355A	NMC-4059
L151	232163	NMRF-7065
L152	232139	NMIF-4062
	Ceramic filters	
X101,X102	3010071	SFE10.7MA5
X103	3010130	SFE10.7MZ2A
X151	3010123	SFZ-450JL
	Capacitors	
C001	354741019	100 μ F,16V,Elect.
C107-C109	354780229	2.2 μ F,50V,Elect.
C110	354741019	100 μ F,16V,Elect.
C133	354784799	0.47 μ F,50V,Elect.
C151	354741009	10 μ F,16V,Elect.
C155,C156	354741009	10 μ F,16V,Elect.
C157	374723324	3300pF±5%,50V,Plastic
C158	374721034	0.01 μ F±5%,50V,Plastic
C159,C180	354721019	100 μ F,6.3V,Elect.
C174	374723334	0.033 μ F±5%,50V,Plastic
C175	354780229	2.2 μ F,50V,Elect.
C176	374722234	0.022 μ F±5%,50V,Plastic
C177	354782299	0.22 μ F,50V,Elect.
C201,C202	354780109	1 μ F,50V,Elect.
C203	354783399	0.33 μ F,50V,Elect.
C204	354741019	100 μ F,16V,Elect.
C205,C206	374721034	0.01 μ F±5%,50V,Plastic
C213-C216	354741009	10 μ F,16V,Elect.
C217	354780229	2.2 μ F,50V,Elect.
	Resistors	
R101	5210263	N06HR 20KBC,Trim
R202	5210259	N06HR2KBC,Trim
	Terminal	
P101	25060117	NTM-2PDML051
	Socket	
P211b	25050986	NSCT-14P773

POWER SUPPLY CIRCUIT PC BOARD (NAPS-4900-1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q951	221282 or	DTC144ES or
	2213560	RN1204
Q952	2213650 or	DTD113ZS or
	2214680	RN1226
	Diodes	
D951-D954	22380035 or	GP104003E or
	22380046	AM01Z
D955	223222,	WG713A,
	223205 or	1SS270A or
	223163	1SS133
	Capacitors	
C901	3500065A	⚠ DE7150FZ103PAC400V/125V
C952	354742219	220 μ F,16V,Elect.
	Resistor	
R951	453530824	8.2 ohm,1/2W,Metal
	Power transformer	
T902	2300671	⚠ NPT-1111P
	Relay	
RL901	25065483	⚠ NRL-1P5A-DC-12-084
	Fuses	
F902	252076	⚠ 3.15A-SE-EAK
F903	252075	⚠ 2.5A-SE-EAK
	Fuseholders	
F902a,F903a	25050065	⚠ YSH403T
	Socket	
P902	25051125	⚠ NSCT-4P912,AC outlet

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

VIDEO CIRCUIT PC BOARD (NAETC-4901-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q253	222840661	4066B
	Transistors	
Q251,Q252	2213284 or	2SC1740S-R or
	2212115	2SC2458-GR
	Diode	
D251	223222,	WG713A,
	223205 or	1SS270A or
	223163	1SS133
	Capacitors	
C251,C252	354721019	100 μ F,6.3V,Elect.
C255,C256	354724719	470 μ F,6.3V,Elect.
C257	354721019	100 μ F,6.3V,Elect.
C259	354741019	100 μ F,16V,Elect.
	Terminal	
P251	25045339	NPJ-4PDYE190

RI TERMINAL PC BOARD(NAETC-4904-1)

CIRCUIT NO.	PART NO.	DESCRPTION
	Terminal	
P961	25045330	NPJ-2PDBL184

HEADPHONE TERMINAL PC BOARD(NASW-4905-1)

CIRCUIT NO.	PART NO.	DESCRPTION
	Terminal	
P503	25045255	YKB21-5009

LOUDNESS SWITCH PC BOARD(NASW-4906-1)

CIRCUIT NO.	PART NO.	DESCRPTION
	Switch	
S714	25035652	NPS-111-S604

SURROUND CIRCUIT PC BOARD (NAAF-4908-1)

CIRCUIT NO.	PART NO.	DESCRPTION
	ICs	
Q601	22240247 or	BA15218N or
Q673,Q674	22240293	NJM4558L-D
Q602	22240683 or	NJM2177L or
	22240692	M69032P
Q606	22240398 or	TC9162N or
	22240751	NJU7311L
Q651	22240686 or	M65830P or
	22240687	NJU9701D
Q671	22240266	TC9213P
	Transistors	
Q603,Q604	2213631 or	RN1241-A or
Q675,Q676	2213632	RN1241-B
	Diodes	
D651	224450562	MTZ5.6B
D652,D653	223222,	WG713A,
	223205 or	1SS270A or
	223163	1SS133
	Resonator	
X651	3010217	CST2.04MG040,Ceramic
	Capacitors	
C601,C602	354780229	2.2 μ F,50V,Elect.
C605,C606	354741009	10 μ F,16V,Elect.
C607-C610	354781099	0.1 μ F,50V,Elect.
C613,C614	374724734	0.047 μ F±5%,50V,Plastic
C615,C616	374722234	0.022 μ F±5%,50V,Plastic
C617-C620	354781099	0.1 μ F,50V,Elect.
C621,C622	354780479	4.7 μ F,50V,Elect.
C623-C627	354782299	0.22 μ F,50V,Elect.
C628	354741009	10 μ F,16V,Elect.
C629	354786899	0.68 μ F,50V,Elect.
C630	374724734	0.047 μ F±5%,50V,Plastic
C631,C660	374725625	5600pF±5%,50V,Plastic
C632	354780229	2.2 μ F,50V,Elect.
C634	354722219	220 μ F,6.3V,Elect.
C635	354741019	100 μ F,16V,Elect.
C636-C641	354741009	10 μ F,16V,Elect.
C642	374724724	4700pF±5%,50V,Plastic
C643	354741009	10 μ F,16V,Elect.
C644	392841007	10 μ F,16V,Elect.
C651	354782299	0.22 μ F,50V,Elect.
C653	374723924	3900pF±5%,50V,Plastic
C655	374726834	0.068 μ F±5%,50V,Plastic
C656	354744709	47 μ F,16V,Elect.
C657,C658	354781099	0.1 μ F,50V,Elect.
C659	374726834	0.068 μ F±5%,50V,Plastic
C661	374724724	4700pF±5%,50V,Plastic
C663,C665	354721019	100 μ F,6.3V,Elect.
C666	375524744	0.47 μ F±5%,50V,Plastic
CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C671,C672	354780229	2.2 μ F,50V,Elect.
C675,C676	354741009	10 μ F,16V,Elect.
C677,C678	354780229	2.2 μ F,50V,Elect.
C679-C682	354741009	10 μ F,16V,Elect.
C684,C685	354741009	10 μ F,16V,Elect.
	Resistor	
R431	5104332Y	N16RQL100KBT25F,Main volume
	Plug	
P622a	25055405	NPLG-3P387
	Sockets	
P611b	25051127	NSCT-8P914
P612b	25050983	NSCT-8P770

CIRCUIT NO.	PART NO.		DESCRIPTION
	Sockets		
P613b	25050986		NSCT-14P773
P621a	2000802ULY		NSAS-6P758

CENTER AND REAR AMPLIFIER PC BOARD (NAAF-4909-1A)

CIRCUIT NO.	PART NO.		DESCRIPTION
	Transistors		
Q801-Q804	2211732 or	*	2SC1845-F or
Q807,Q808	2211733	*	2SC1845-E
Q805,Q806	2213354 or		2SA933S-R or
	2212125		2SA1048-GR
Q809,Q810	2213284 or		2SC1740S-R or
Q815,Q816	2212115		2SC2458-GR
Q811,Q812	2211353 or		2SA949-O or
	2211354		2SA949-Y
Q813	2211633 or		2SC2229-O or
	2211634		2SC2229-Y
Q814	2211732 or		2SC1845-F or
Q825,Q826	2211733		2SC1845-E
Q817	2212653 or		2SC3421-O or
	2212654		2SC3421-Y
Q818	2211653 or		2SC2235-O or
	2211654		2SC2235-Y
Q819	2212643 or		2SA1538-O or
	2212644		2SA1538-Y
Q820	2211643 or		2SA965-O or
	2211644		2SA965-Y
Q821	2202253,	*	2SC4467-O,
	2202254,	*	2SC4467-Y,
	2202256,	*	2SC4467-P,
	2202502 or	*	2SC3181N-R or
	2202503	*	2SC3181N-O
Q822	2202373,	*	2SC4466-O,
	2202374,	*	2SC4466-Y,
	2202375,	*	2SC4466-P,
	2202352 or	*	2SC3180N-R or
	2202353	*	2SC3180N-O
Q823	2202243,	*	2SA1694-O,
	2202244,	*	2SA1694-Y,
	2202246,	*	2SA1694-P,
	2202492 or	*	2SA1264N-R or
	2202493	*	2SA1264N-O
Q824	2202363,	*	2SA1693-O,
	2202364,	*	2SA1693-Y,
	2202365,	*	2SA1693-P,
	2202342 or	*	2SA1263N-R or
	2202343	*	2SA1263N-O

CIRCUIT NO.	PART NO.	DESCRIPTION
	Diodes	
D805,D806	223222,	WG713A,
D811	223205 or	1SS270A or
	223163	1SS133
	Coils	
L801,L802	231176S	S-1.3C
	Capacitors	
C801,C802	354741009	10 μ F,16V,Elect.
C807	354742219	220 μ F,16V,Elect.
C808	354744709	47 μ F,16V,Elect.
C821,C822	374724734	0.047 μ F±5%,50V,Plastic
C827,C828	374724734	0.047 μ F±5%,50V,Plastic
C865,C867	354700109	1 μ F,160V,Elect.
C866	354784709	47 μ F,50V,Elect.
C868,C870	374724734	0.047 μ F±5%,50V,Plastic
C869	354700109	1 μ F,160V,Elect.
	Resistors	
R833,R834	443522704	27 ohm,1/2W,Metal oxide
R835,R836	442521014	100 ohm,1/2W,Metal oxide
R837	5215044	N08HR 2KBC,Trim
R843,R844	443523314	330 ohm,1/2W,Metal oxide
R845	4000132Y	0.22 ohm×2,5W+5W,Metal plate
R846	4000131Y	0.22 ohm×2,2W+2W,Metal plate
R851,R852	453530824	8.2 ohm,1/2W,Metal
R853,R854	443523924	3.9 kohm,1/2W,Metal oxide
R865,R866	453530224	2.2 ohm,1/2W,Metal
R867-R870	443522204	22 ohm,1/2W,Metal oxide
	Relay	
RL801	25065485	NRL-2P2A-DC24-086
	Plugs	
P621b	25055234	NPLG-3P218
	Terminal	
P801	25060191Y	NTM-6PDML113

CAUTION:Replacement for transistor of mark *,if necessary, must be made from the same beta group (H FE) as the original type.

NOTE: THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

PACKING VIEW

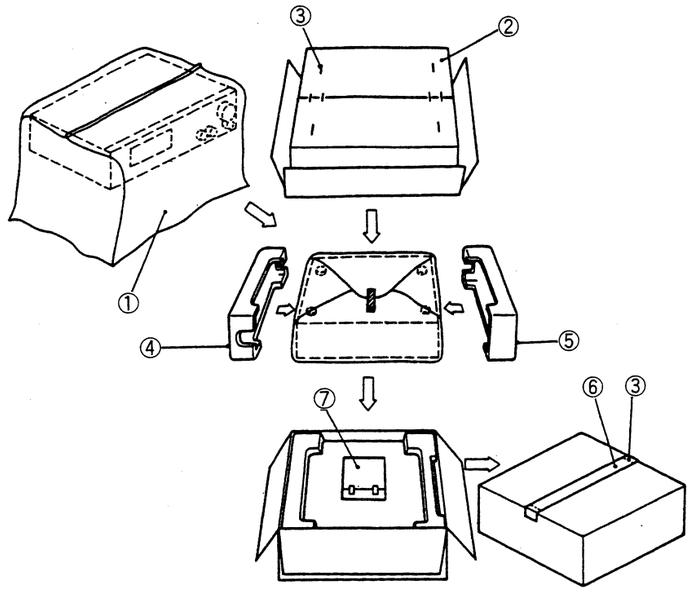

TX-9022RDS PARTS LIST

REF.NO.	PART NO.	DESCRIPTION
1	29100034-1Y	Styrene bag for unit
2	29052706Y	Carton box
3	282301	Ten staples
4	29091652BY	Pad R
5	29091651BY	Pad L
6	29110071	PP tape
7	Accessary bag ass'y	
	232140	NMA-3057,AM loop antenna
	2010200	Cord RI
	3010054	UM-3,Two batteries
	24140261AY	RC-261S,Remote control transmitter
	29100097-1Y	Styrene bag for accessary
	292112Y	FM antenna
	29341902Y	Instruction manual
	29365020H	Warranty card
	29100094B	Styrene bag for warranty card
	29100097-1Y	Styrene bag for accessary

DESCRIPTION

Styrene bag for unit

Carton box

Ten staples

Pad R

Pad L

PP tape

NMA-3057,AM loop antenna

Cord RI

UM-3,Two batteries

RC-262S,Remote control transmitter

Styrene bag for accessary

FM antenna

Instruction manual

Warranty card

Styrene bag for warranty card