

Service Manual

DVD Home Theater Sound System

SA-HT640WPL

Colour

(S).....Silver Type



Subject : Block Diagram / Schematic Diagram / Printed Circuit Board / Exploded Views & Parts List (Update)

Please file and use this supplement manual together with the service manual for Model No.SA-HT640WPL, Order No. MD0603060C3

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS


	Page		Page
1 Notes	2	5.1. DVD Module P.C.B.	29
2 Block Diagram	3	5.2. Main, AC- inlet & Sub power P.C.B.	30
3 Schematic Diagram Notes	11	5.3. Power P.C.B.	31
4 Schematic Diagram	13	5.4. FL, Headphone, Loading Motor, Tray Motor & Sensor P.C.B.	32
4.1. DVD Module Circuit	13	6 Exploded Views	33
4.2. Main Circuit	17	6.1. Cabinet Parts Location	33
4.3. Power, AC-inlet & Sub power Circuit	22	6.2. Packaging	36
4.4. FL, Headphone, Loading Motor, Tray Motor, Sensor & Optical Pickup Unit Circuit	26	7 Replacement Parts List (Revise)	37
5 Printed Circuit Board	29	7.1. Component Parts List	38


1 Notes

This supplement includes revised contents to the original service manual for below sections:-

- 1)Block Diagram (Section 17)
- 2)Schematic Diagram (Section 18)
- 3)Printed Circuit Board (Section 19)
- 4)Exploded Views (Section 23)
- 5)Replacement Parts List (Section 24)



2 Block Diagram

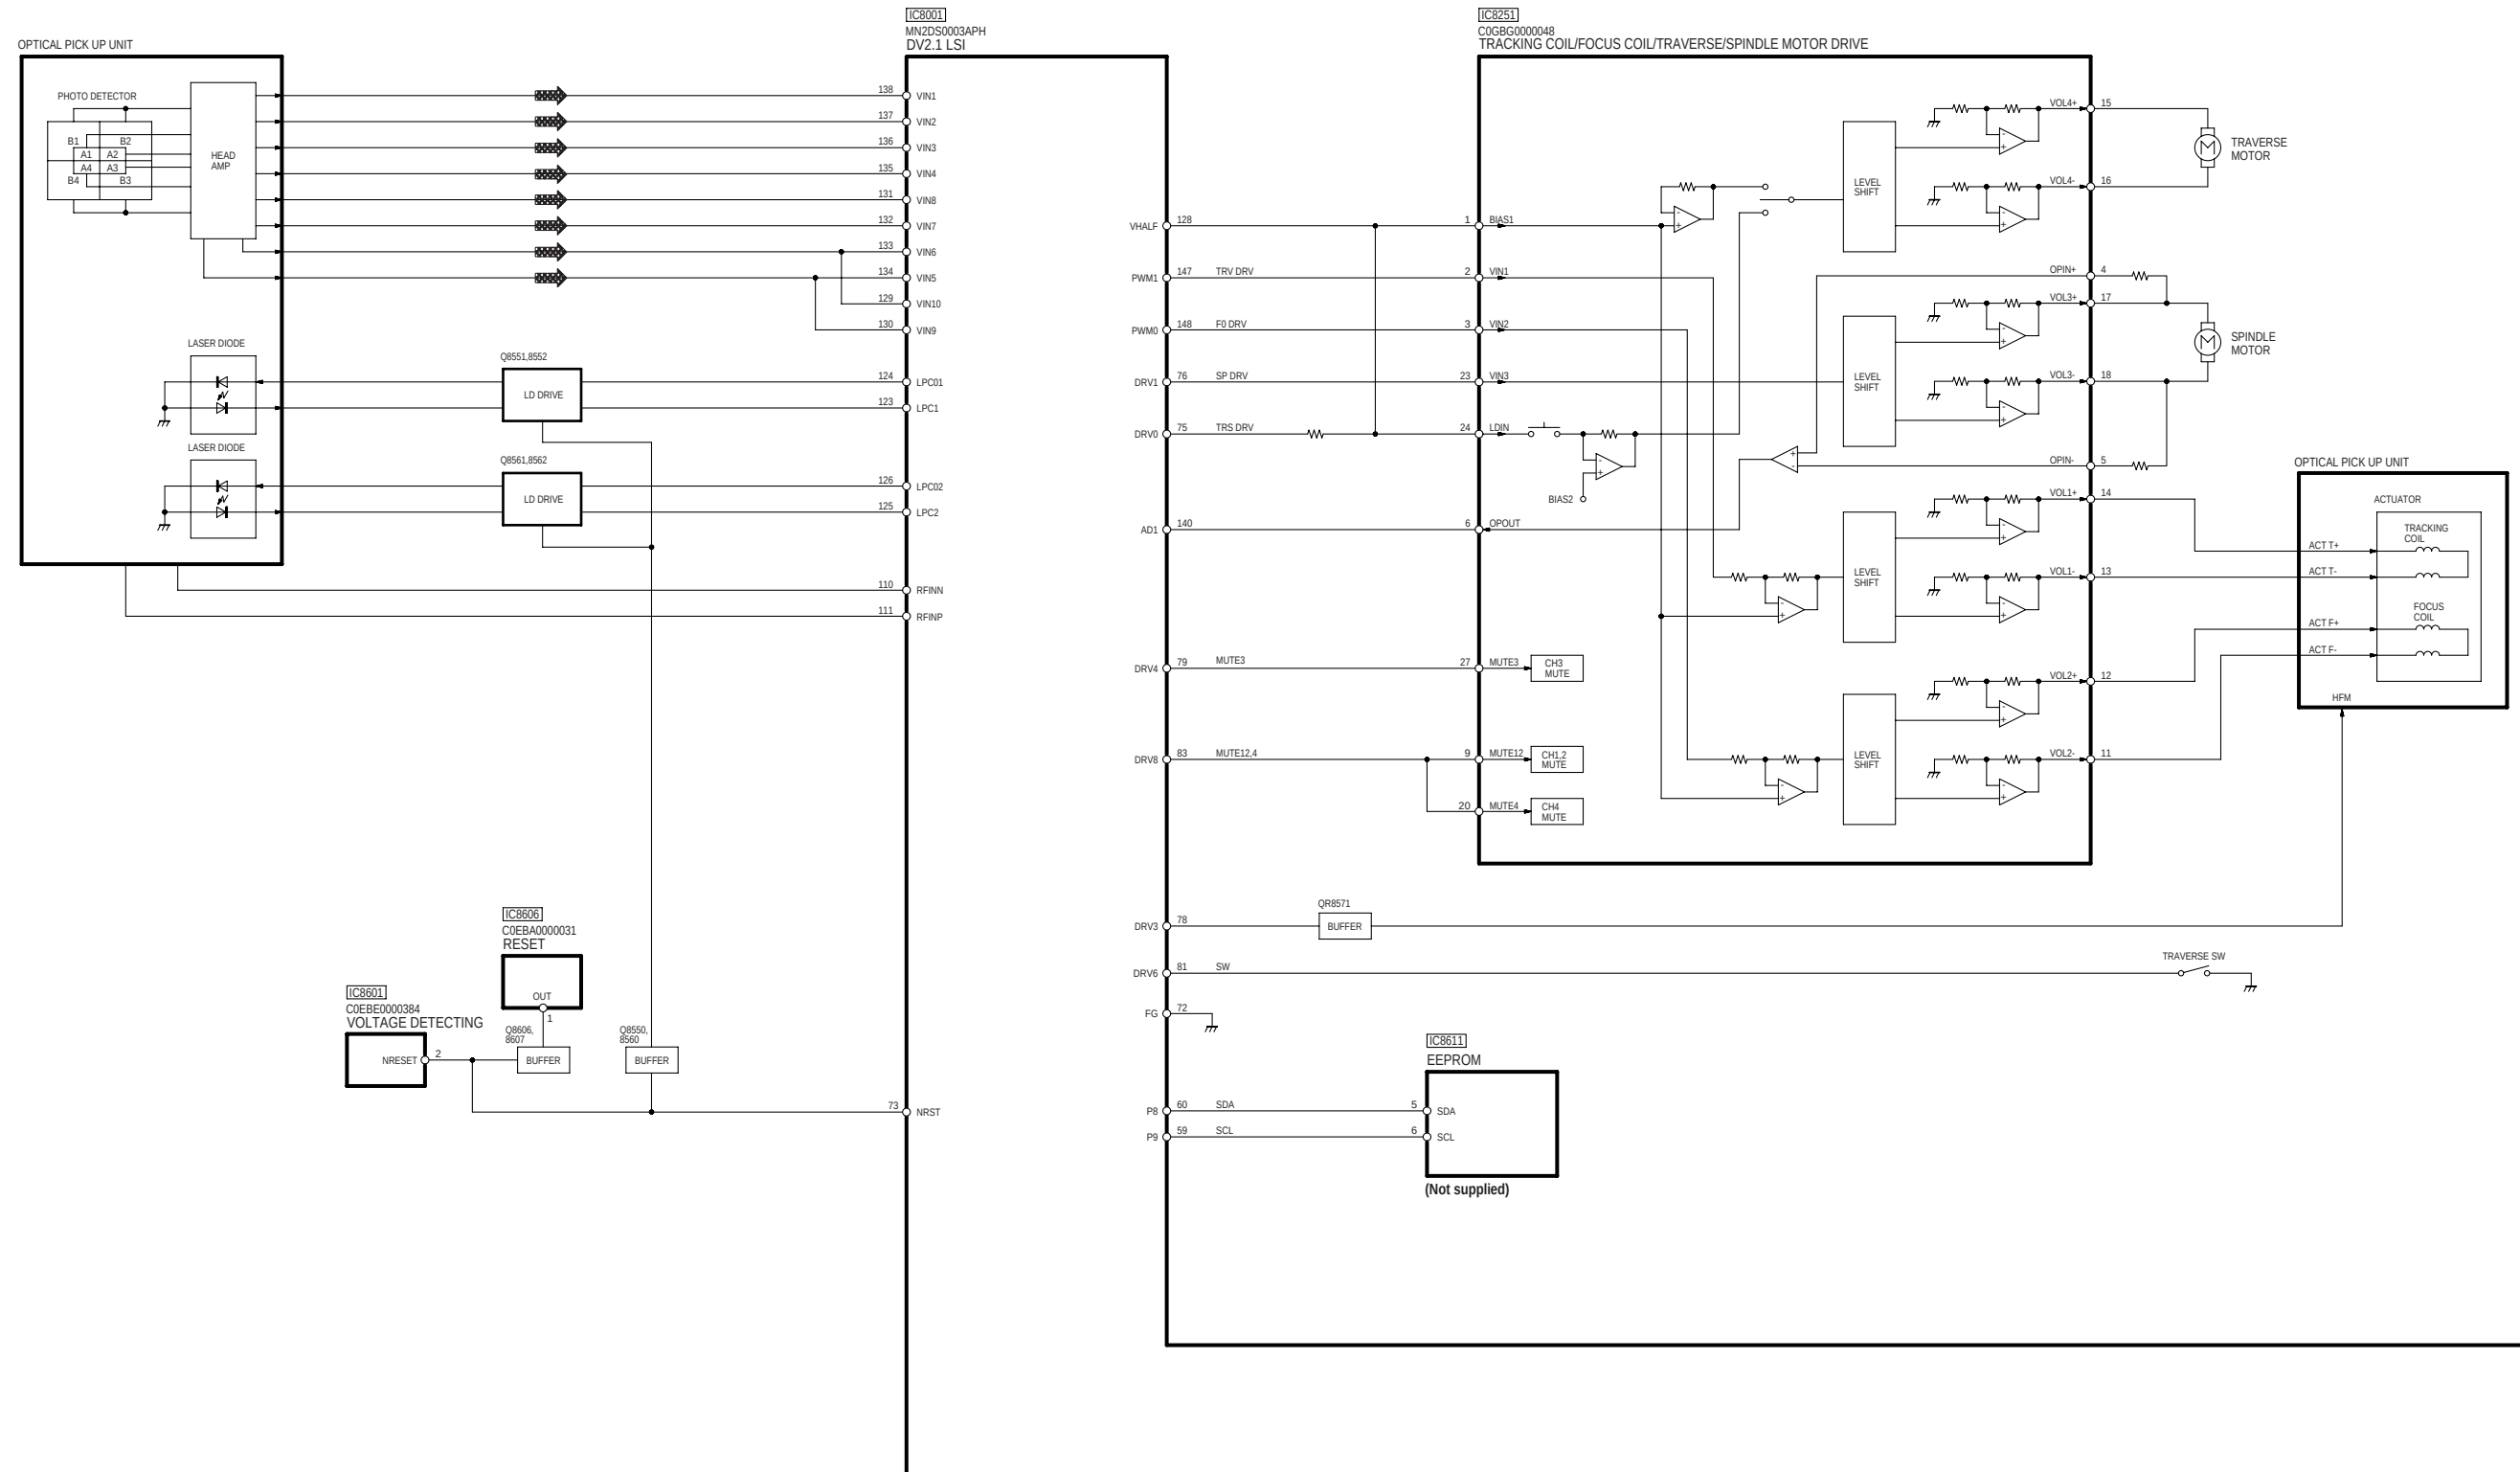

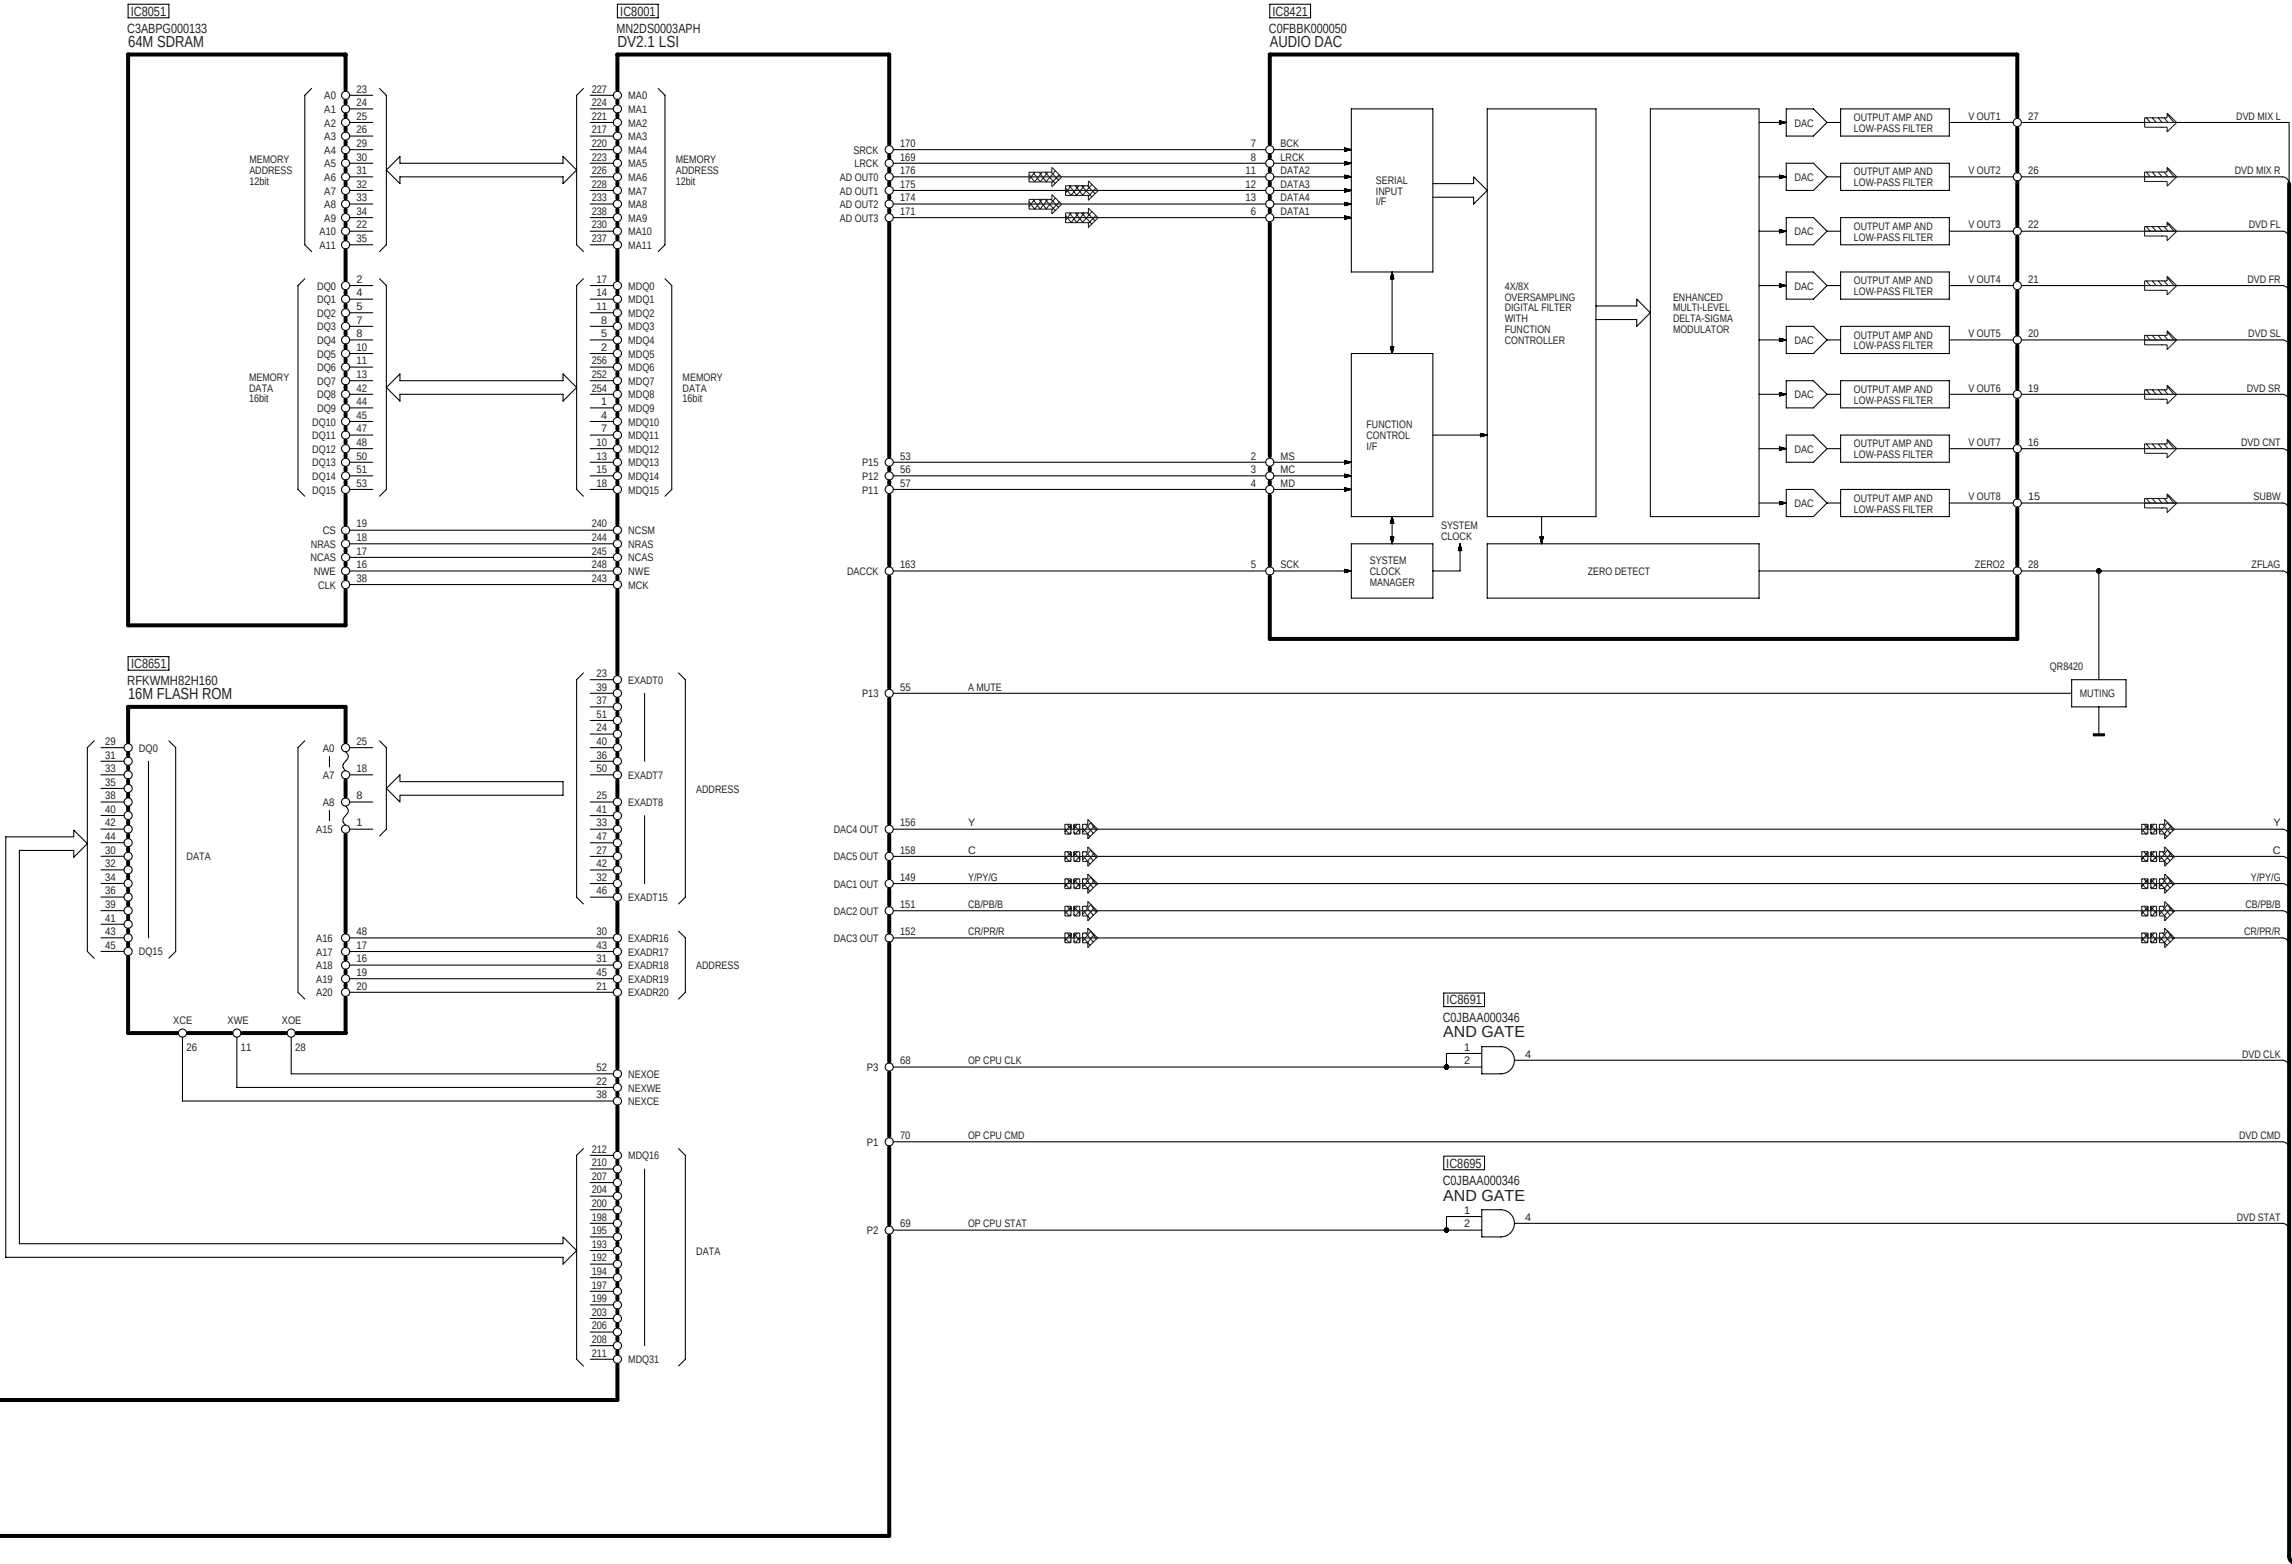


SA-HT640WPL BLOCK DIAGRAM


TUNER PACK

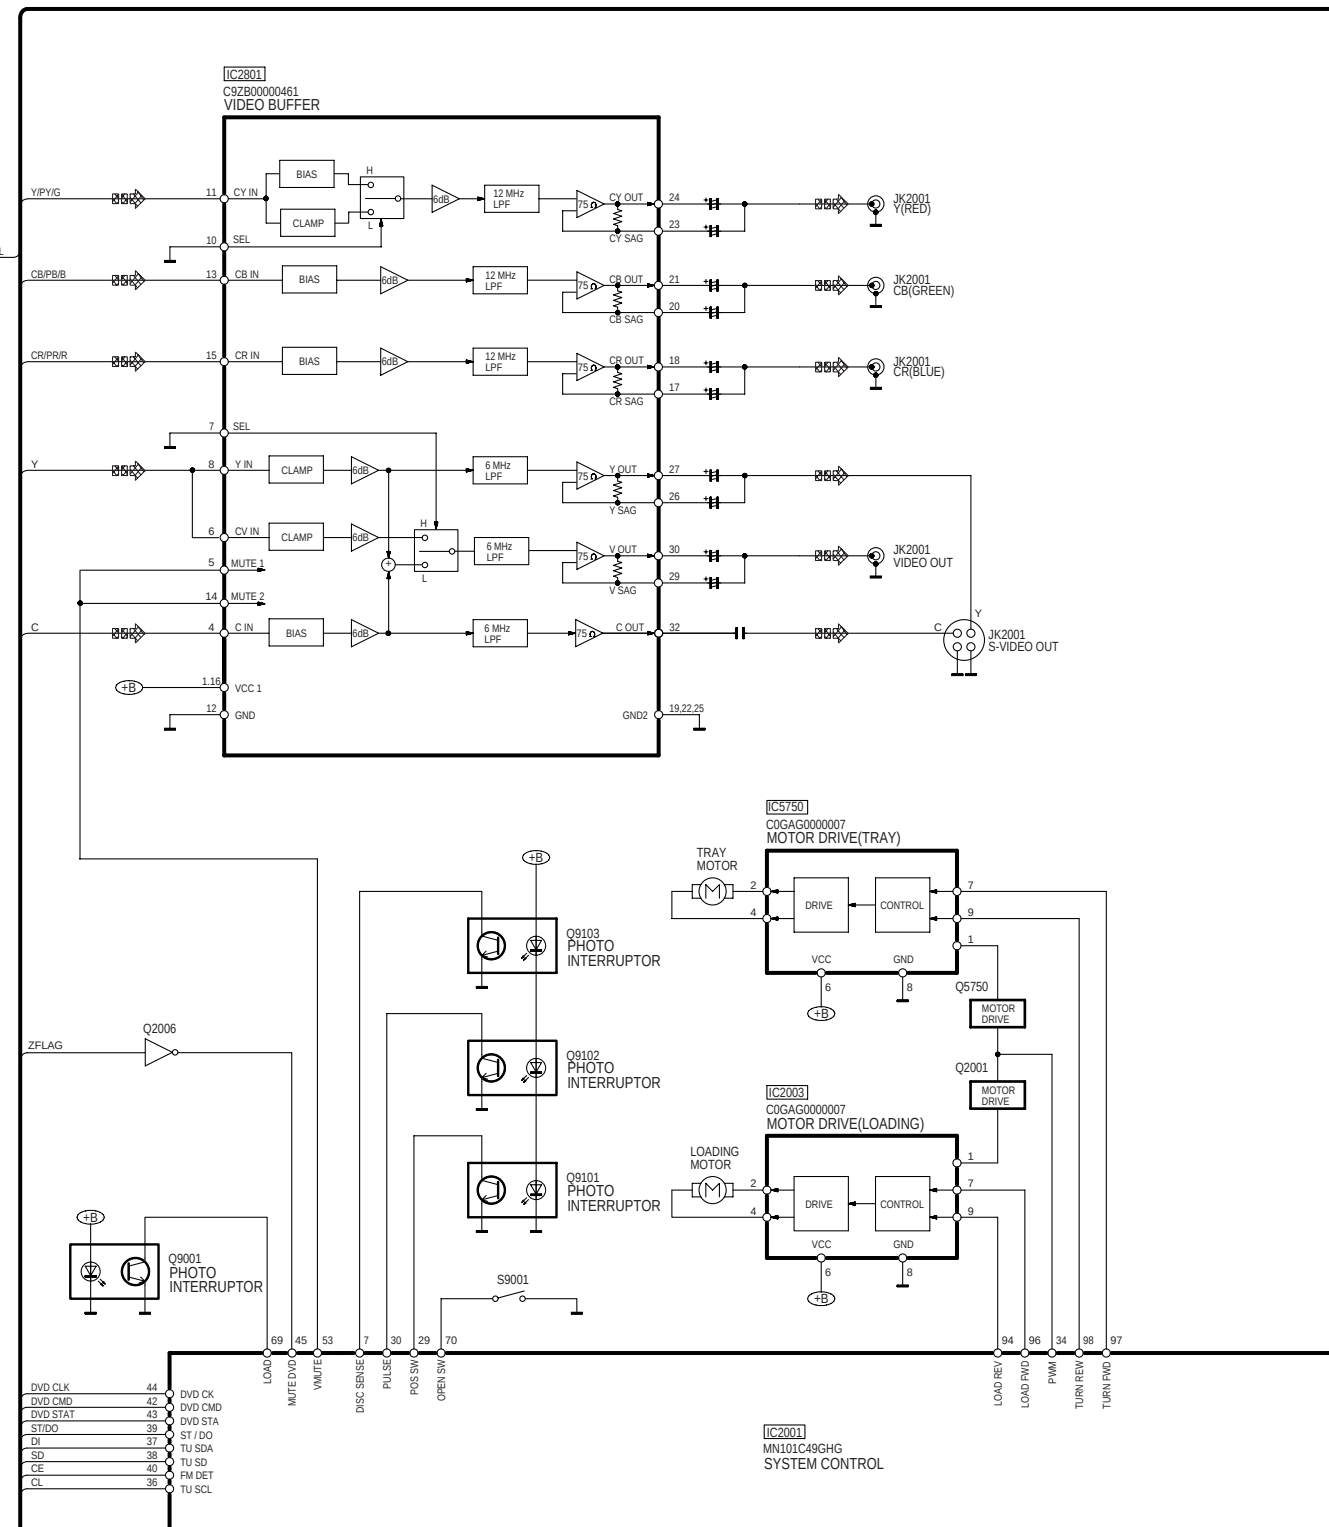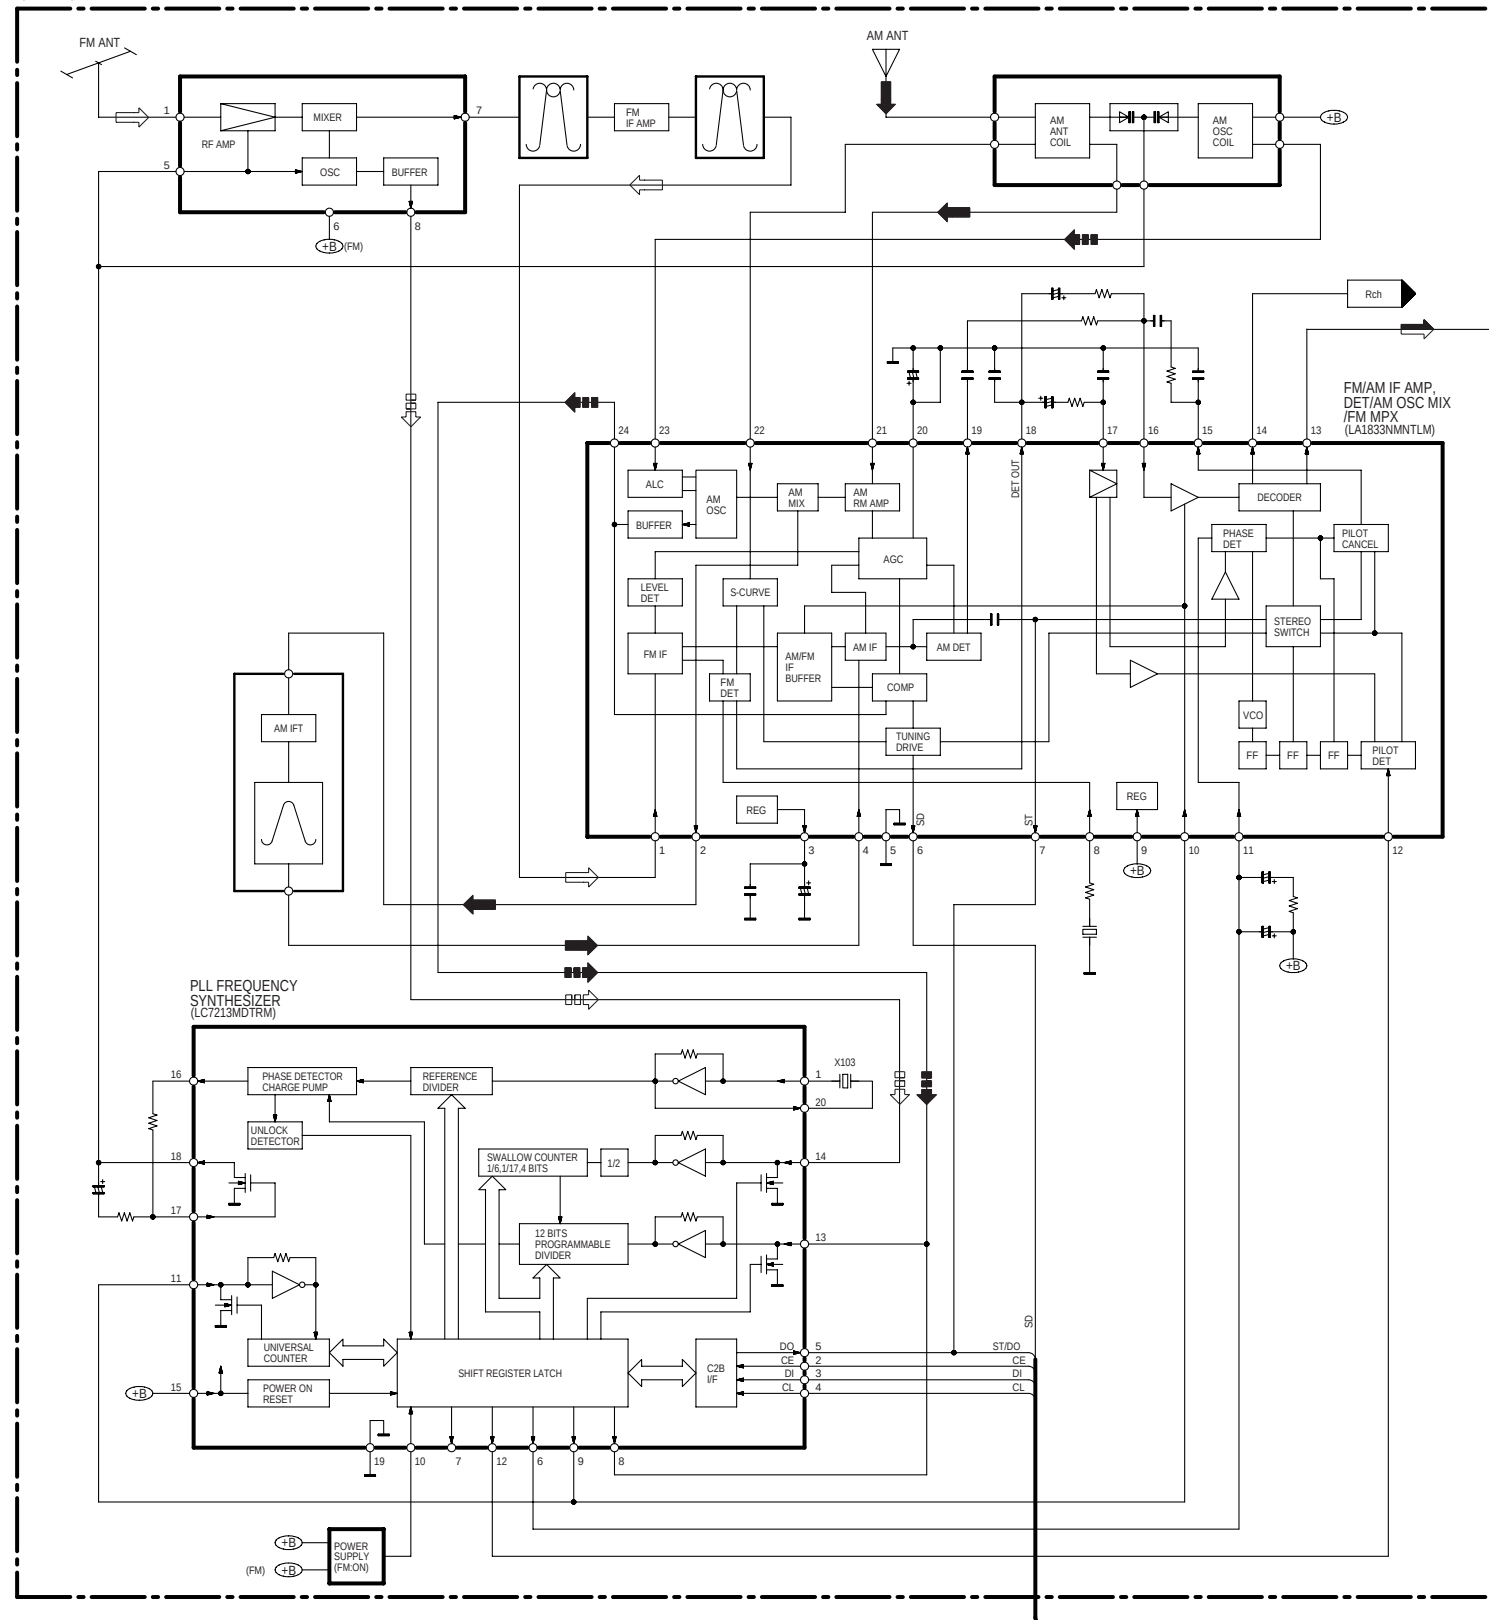


SA-HT640WPL BLOCK DIAGRAM

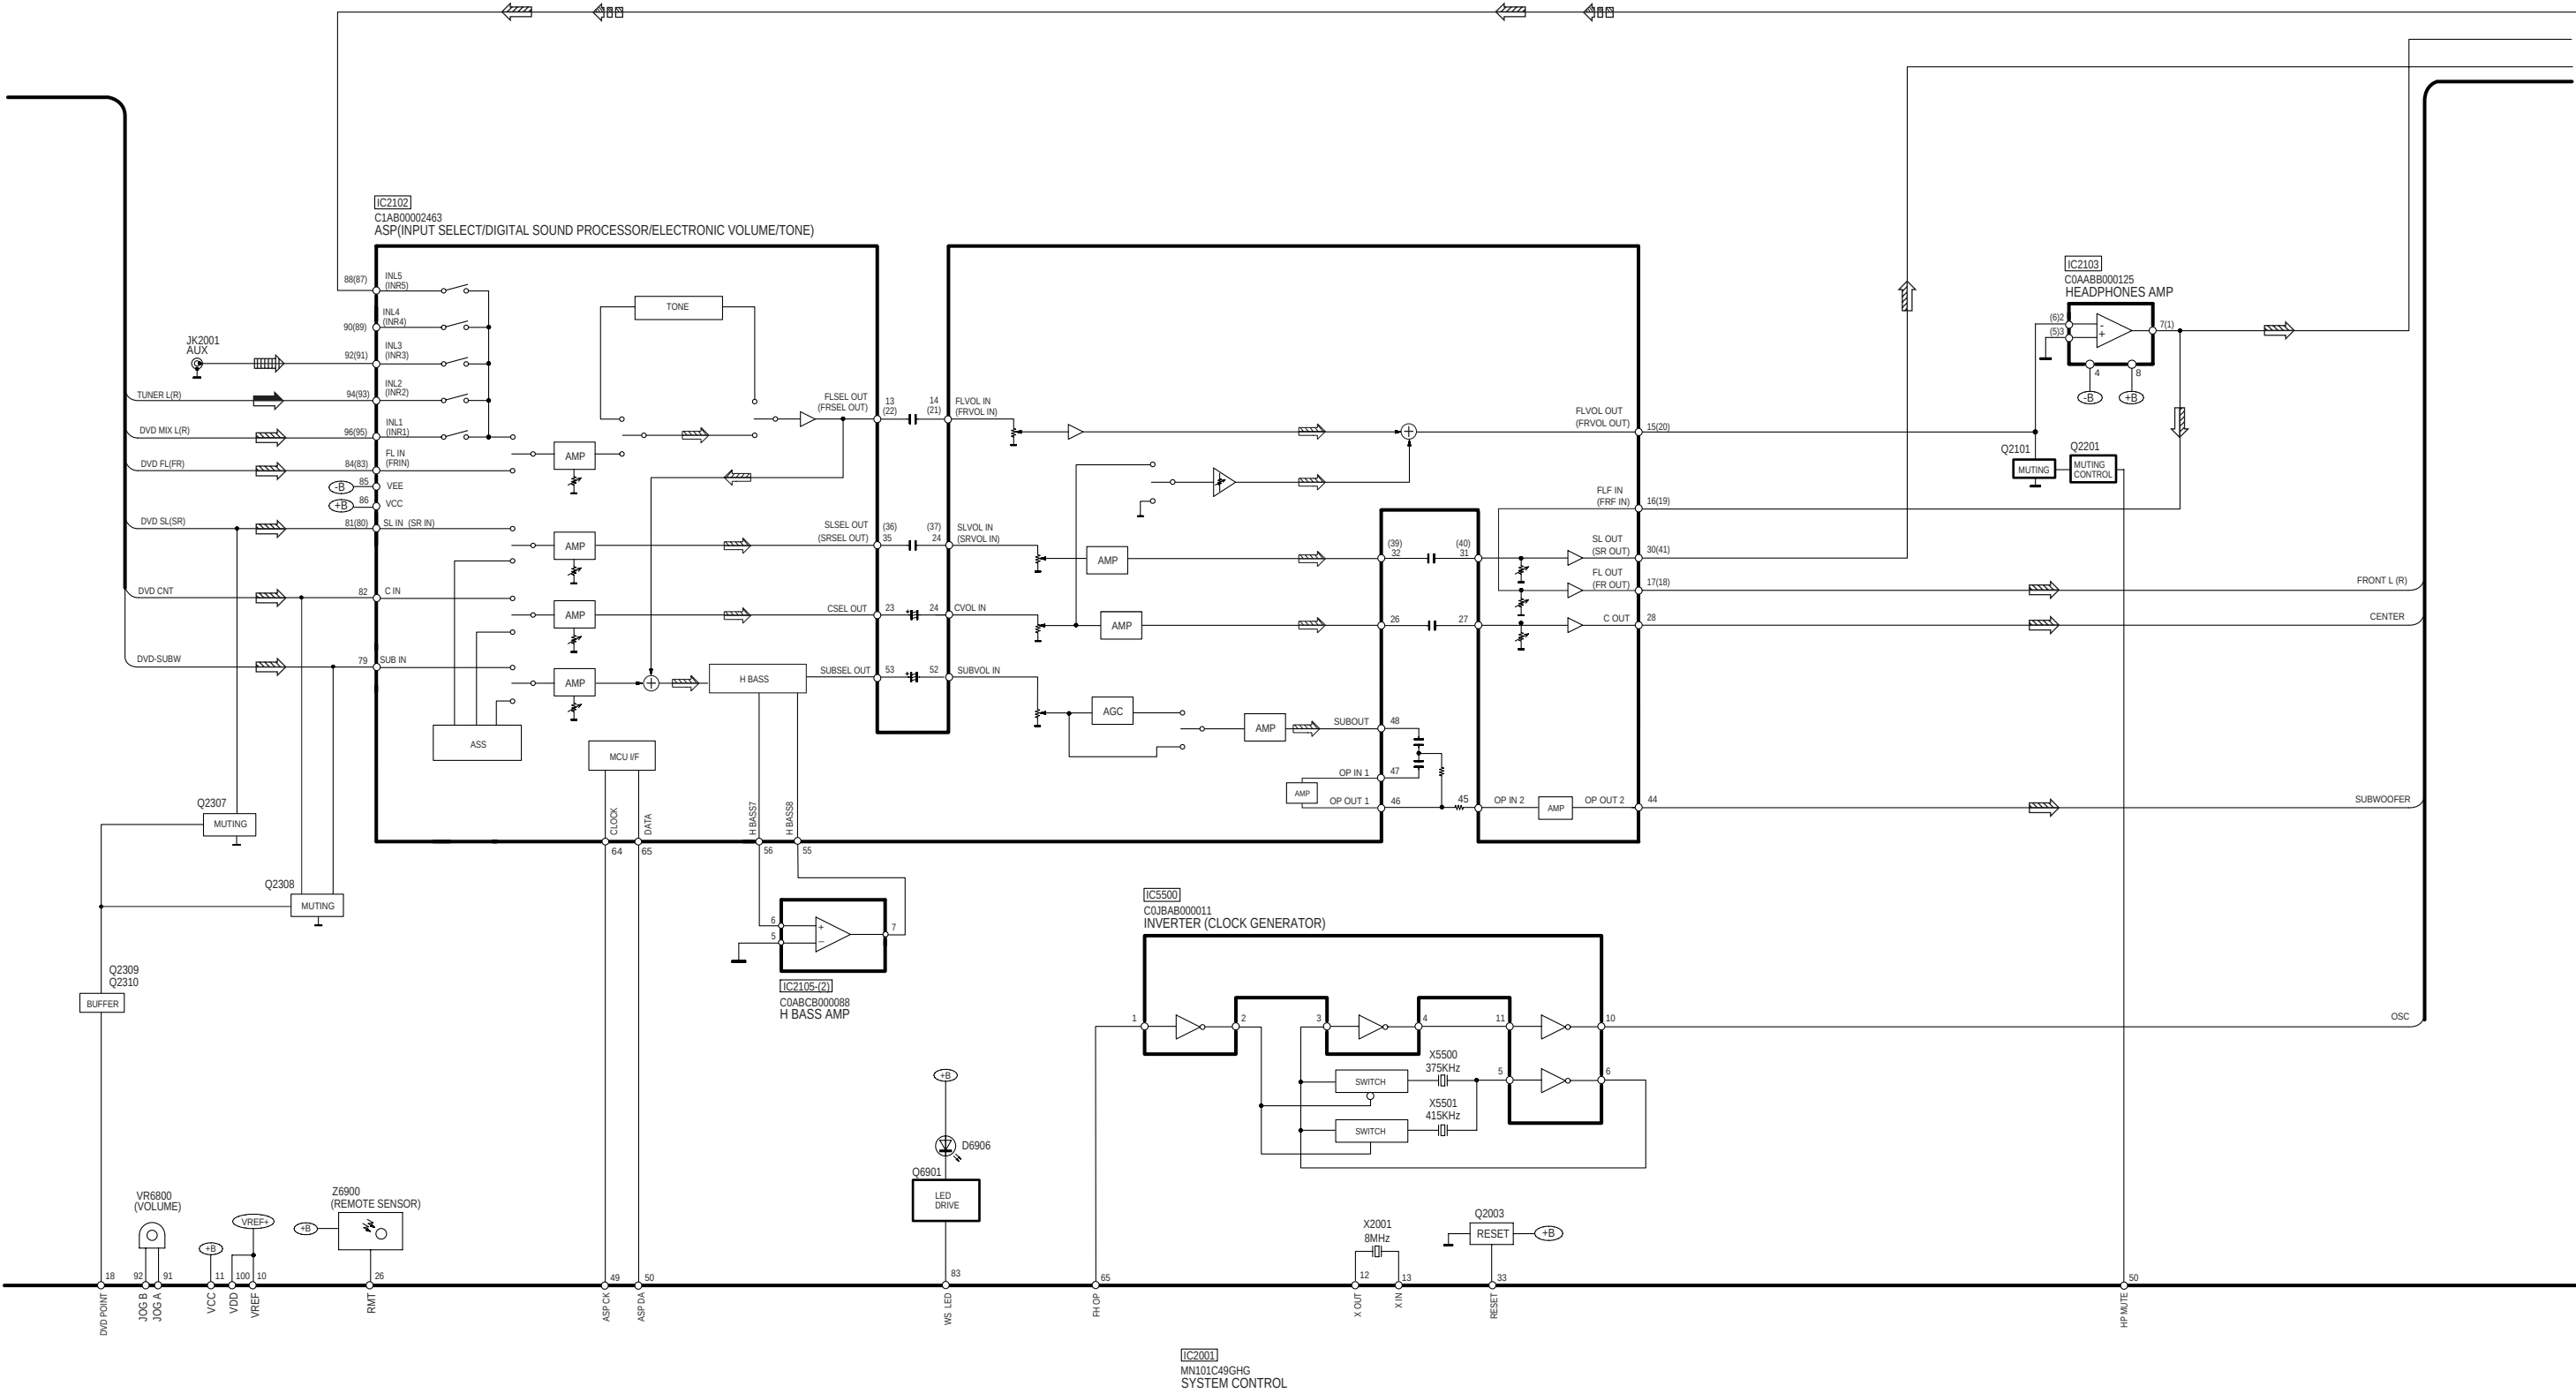


SA-HT640WPL BLOCK DIAGRAM

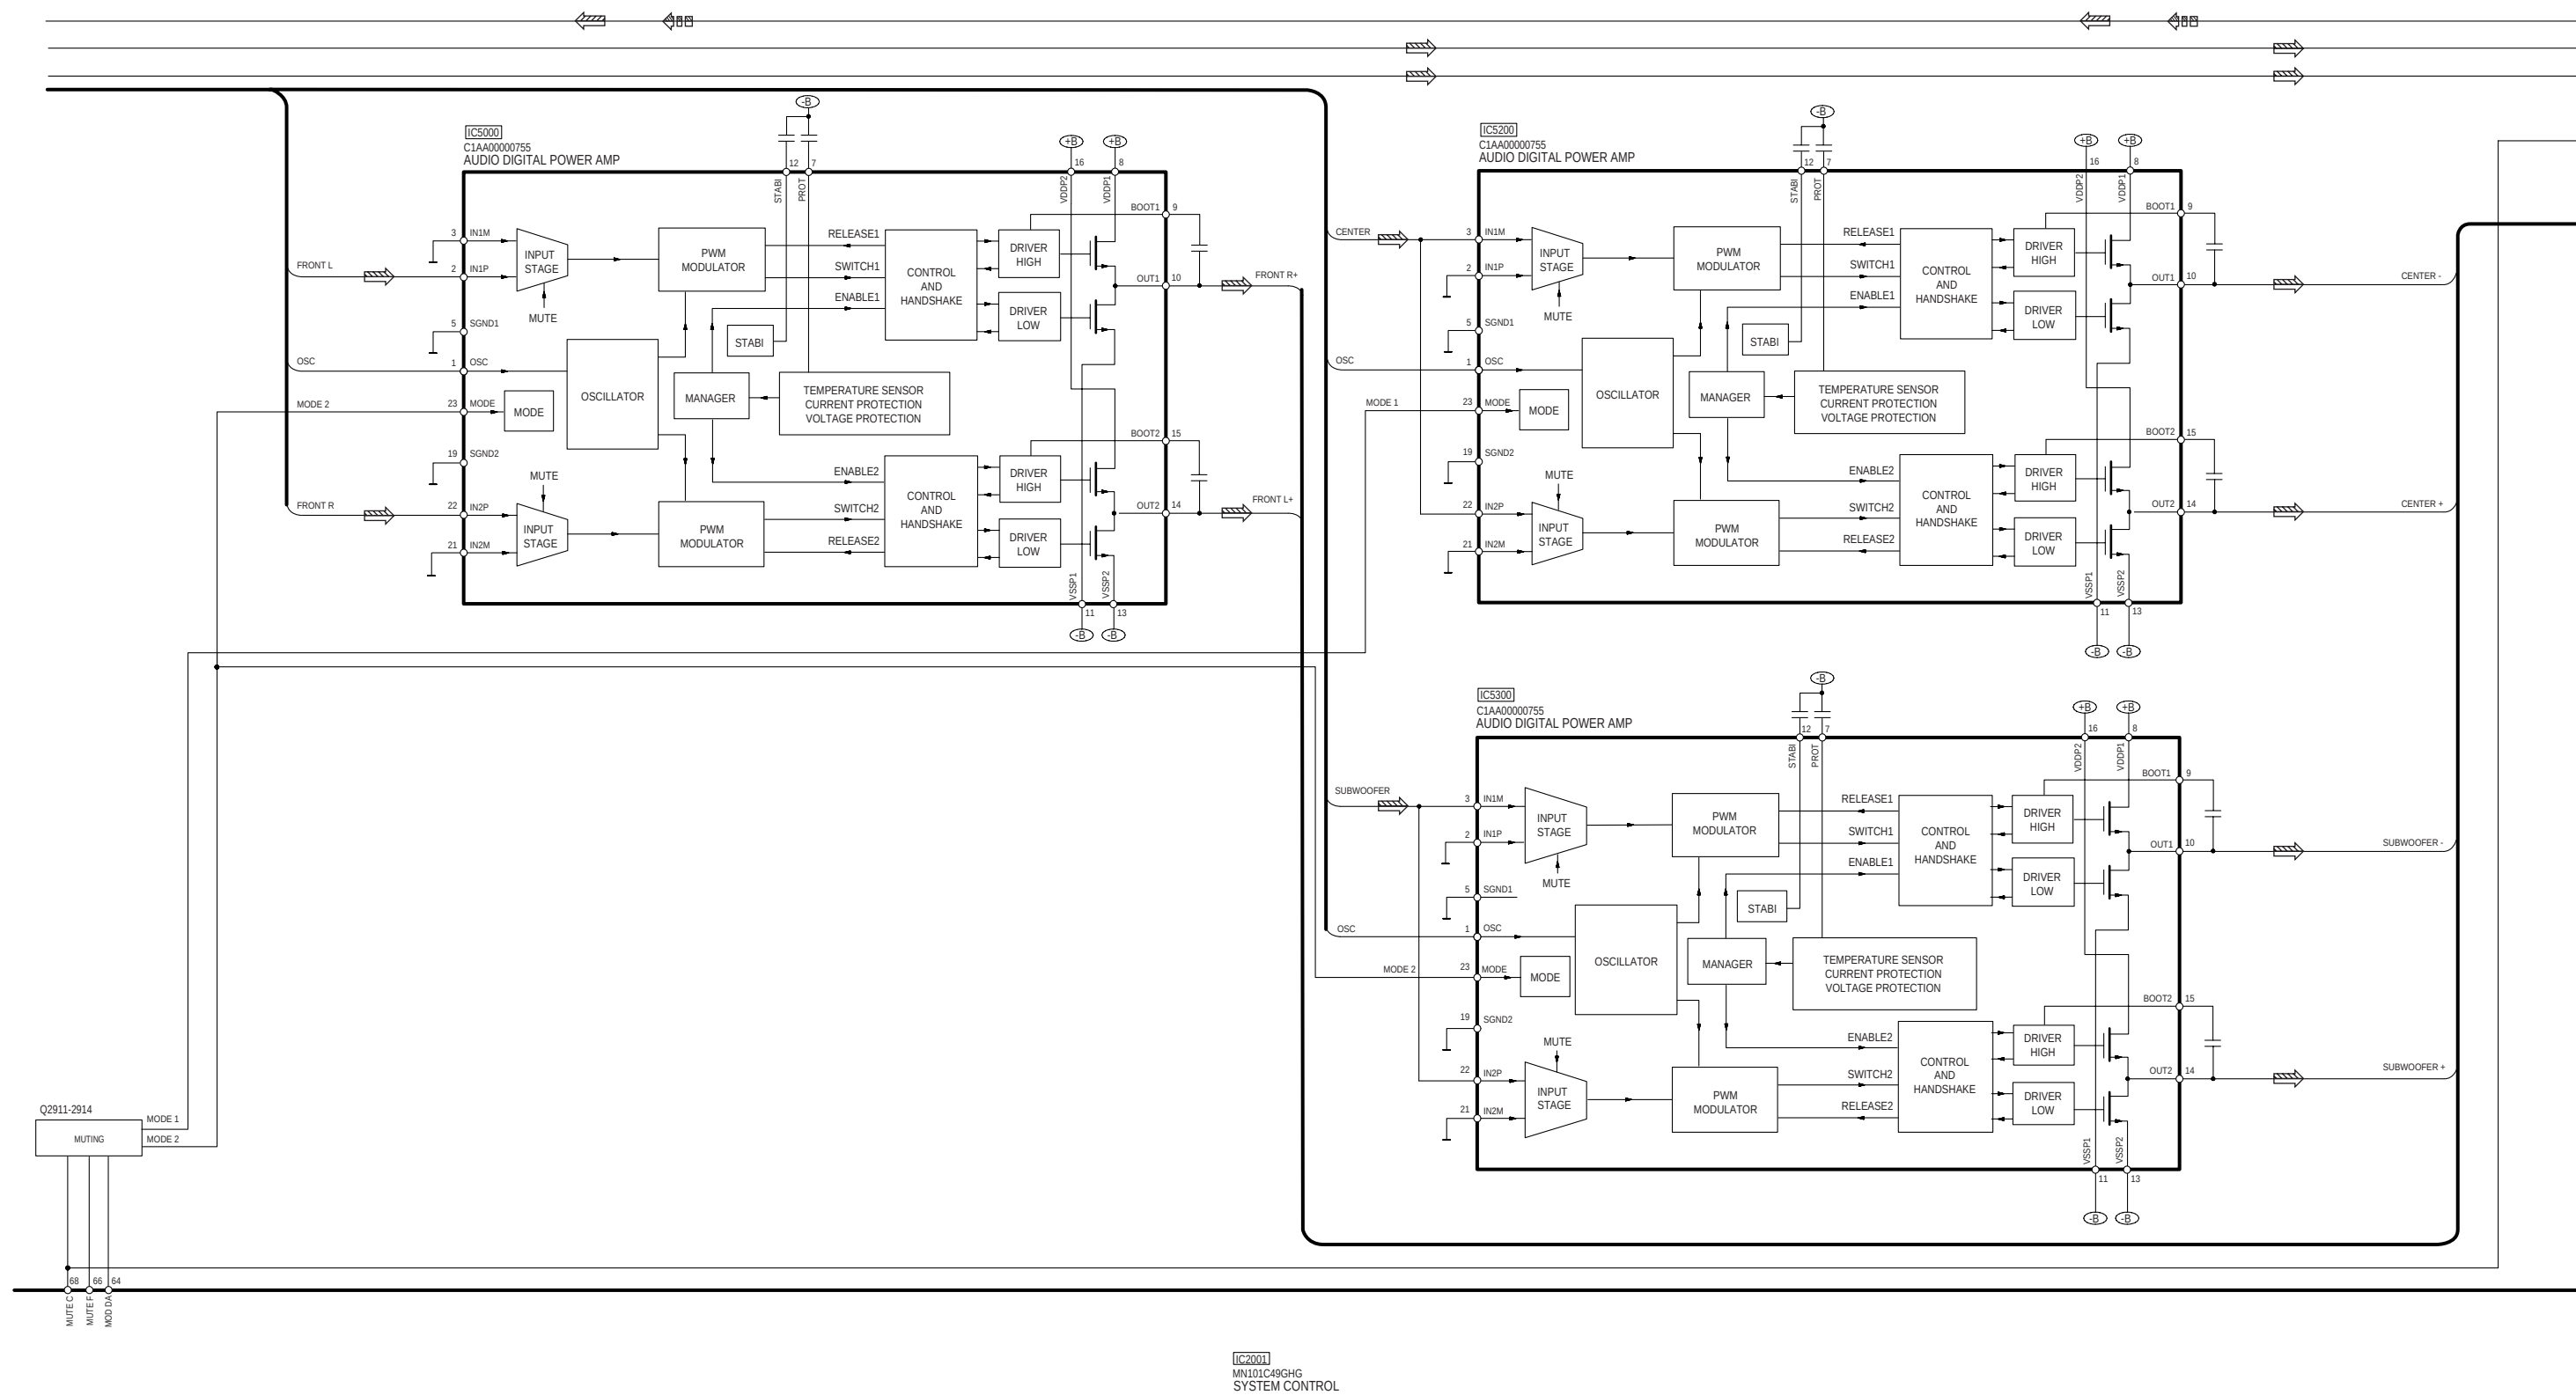

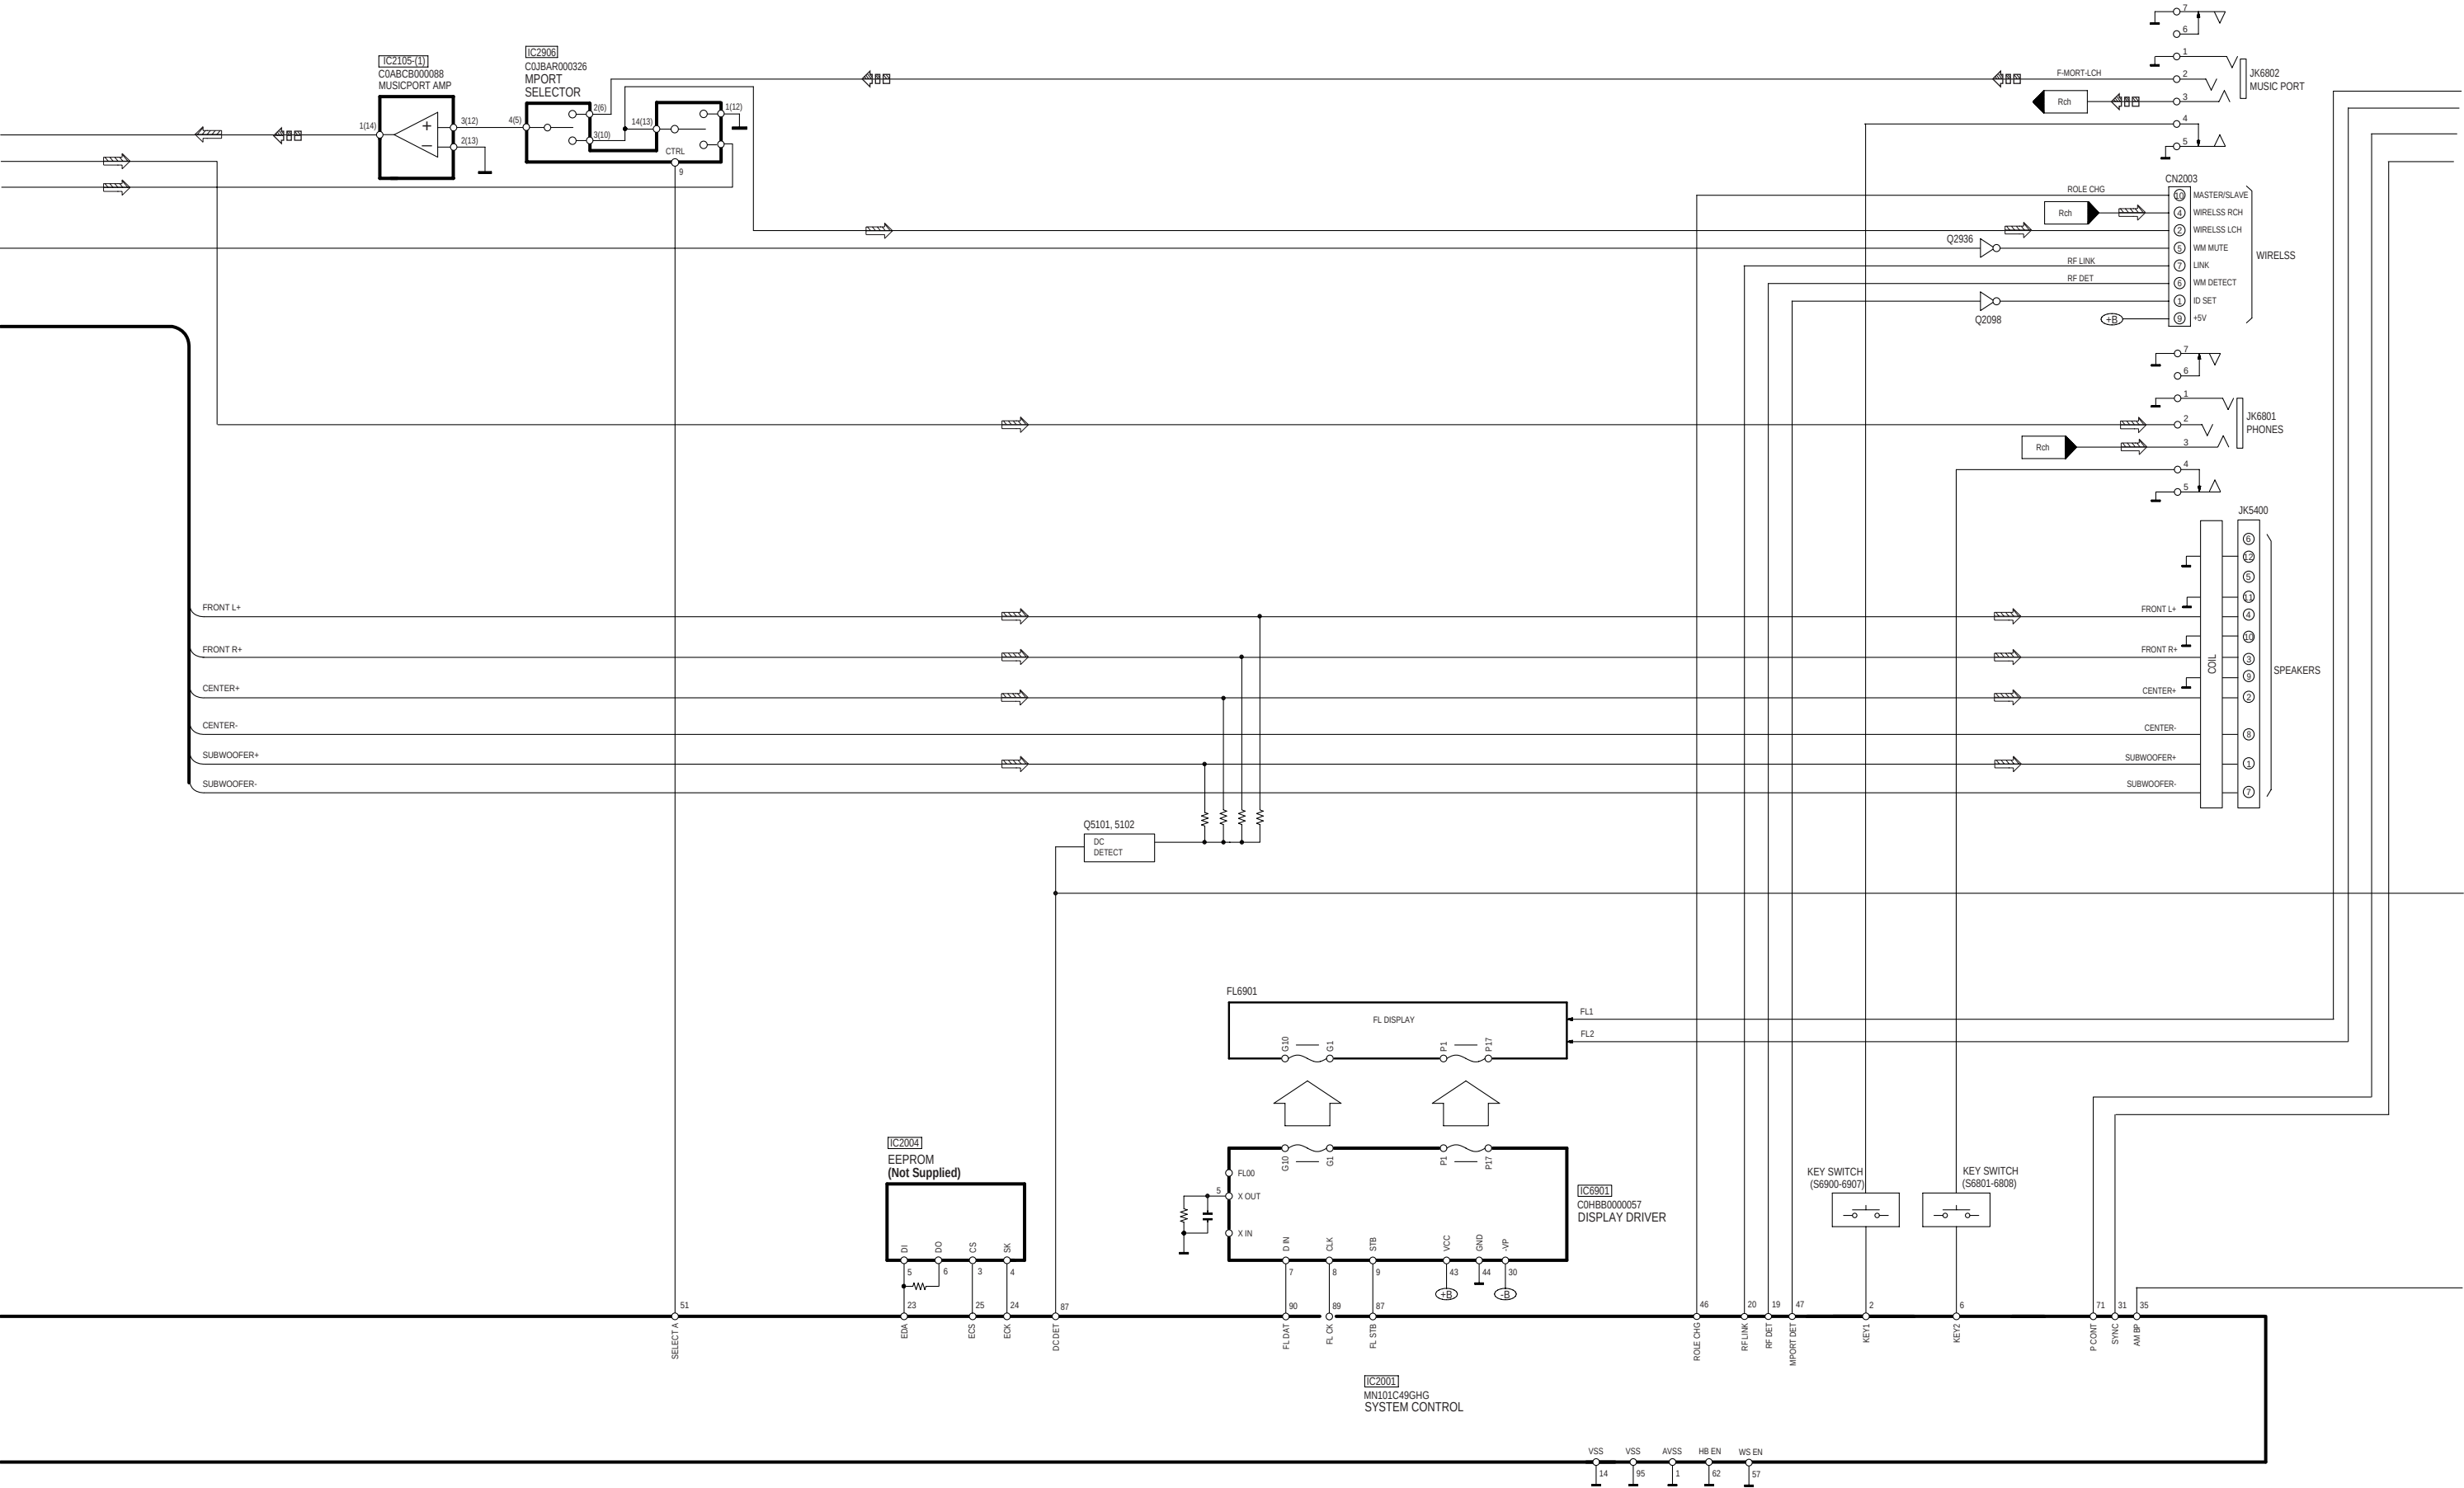

SA-HT640WPL BLOCK DIAGRAM

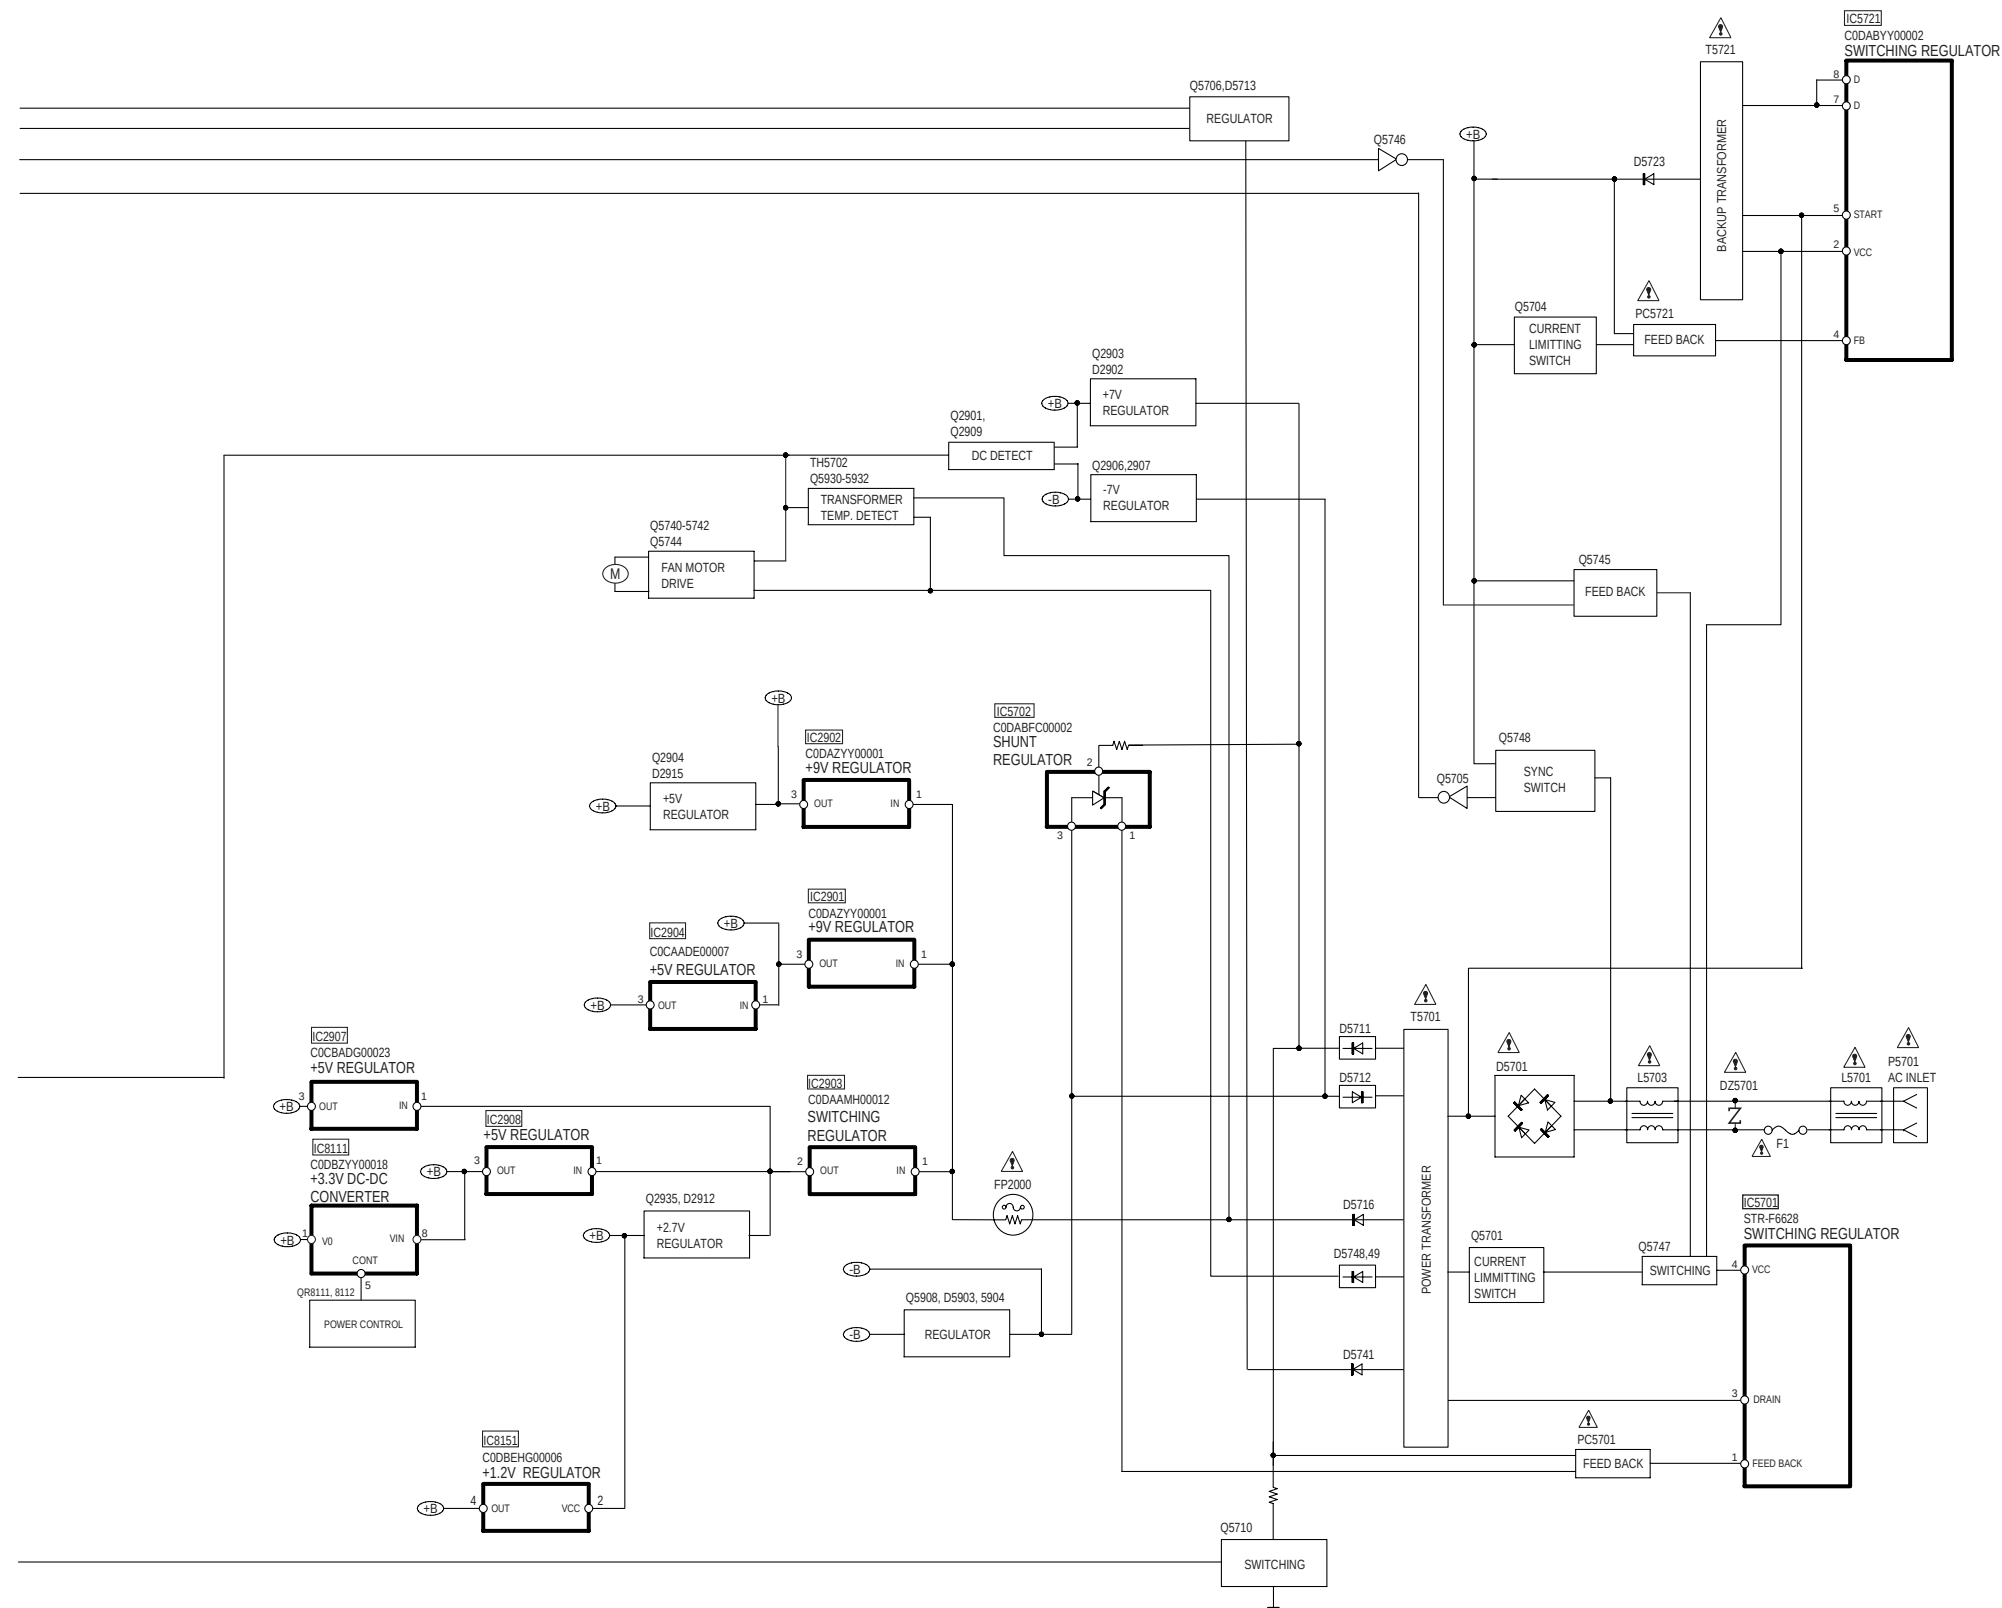

SIGNAL LINES

	: MAIN SIGNAL LINE		: AM SIGNAL LINE		: DVD AUDIO SIGNAL LINE
	: FM SIGNAL LINE		: AM OSC SIGNAL LINE		: DVD VIDEO SIGNAL LINE
	: FM OSC SIGNAL LINE		: FM /AM SIGNAL LINE		: CD-DA (AUDIO /VIDEO) SIGNAL LINE
	: AUX SIGNAL LINE		: MUSIC PORT SIGNAL LINE		

() Indicates the Pin No. of Right Channel.

NOTE : Signal Lines are applicable to the Left Channel only.

3 Schematic Diagram Notes

- This schematic diagram may be modified at any time with the development of new technology.

Notes:

S6801:	Play/ memory switch (▶ / Memory).
S6802:	Reverse/ tune down switch (◀◀ / ◀◀ / TUNING ∨).
S6803:	Forward/ tune up switch (▶▶ / ▶▶ / TUNING ∧).
S6804:	Stop/ tune mode switch (■ / -TUNE MODE / —FM MODE).
S6805:	Disc exchange switch.
S6806:	Disc skip switch.
S6808:	Tray open / close switch (▲ Open / Close).
S6900:	Power switch (POWER ⏻).
S6901:	Surround music switch.
S6907:	Selector switch.
S6902-S6906:	Disc switch (DISC1-DISC5).
S9001:	Load switch.
VR6800:	VR volume jog.

- Important safety notice:

Components identified by ⚠ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- In case of AC rated voltage Capacitor, the part no. and values will be indicated in the Schematic Diagram.

AC rated voltage capacitor:

C4891, C5701, C5706, C5714, C5736, C5737


- Capacitors values are in microfarad (μF) unless specified otherwise, F=Farad, pF=Pico-Farad

Resistance values are in ohm (Ω), unless specified otherwise, 1K=1000Ω, 1M=1000KΩ

- Voltage and signal line

	: +B Signal line
	: CD-DA signal line
	: Main signal line
	: DVD (Video) signal line
	: DVD (Audio) signal line
	: FM/AM signal line
	: -B Signal line
	: MUSIC PORT signal line
	: AUX signal line

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE F1 6.3A 125V FUSE



RISK OF FIRE-REPLACE FUSE AS MARKED.

FUSE CAUTION



These symbols located near the fuse indicates that the fuse used is a fast operating type. For continued protection against fire hazard, replace with the same type fuse. For fuse rating, refer to the marking adjacent to the symbol.




Ce symbole indique que le fusible utilisé est à rapide. Pour une protection permanente, n' utiliser que des fusibles de même type. Ce dernier est indiqué là où le présent symbole est apposé.

4 Schematic Diagram

4.1. DVD Module Circuit

SCHEMATIC DIAGRAM-1

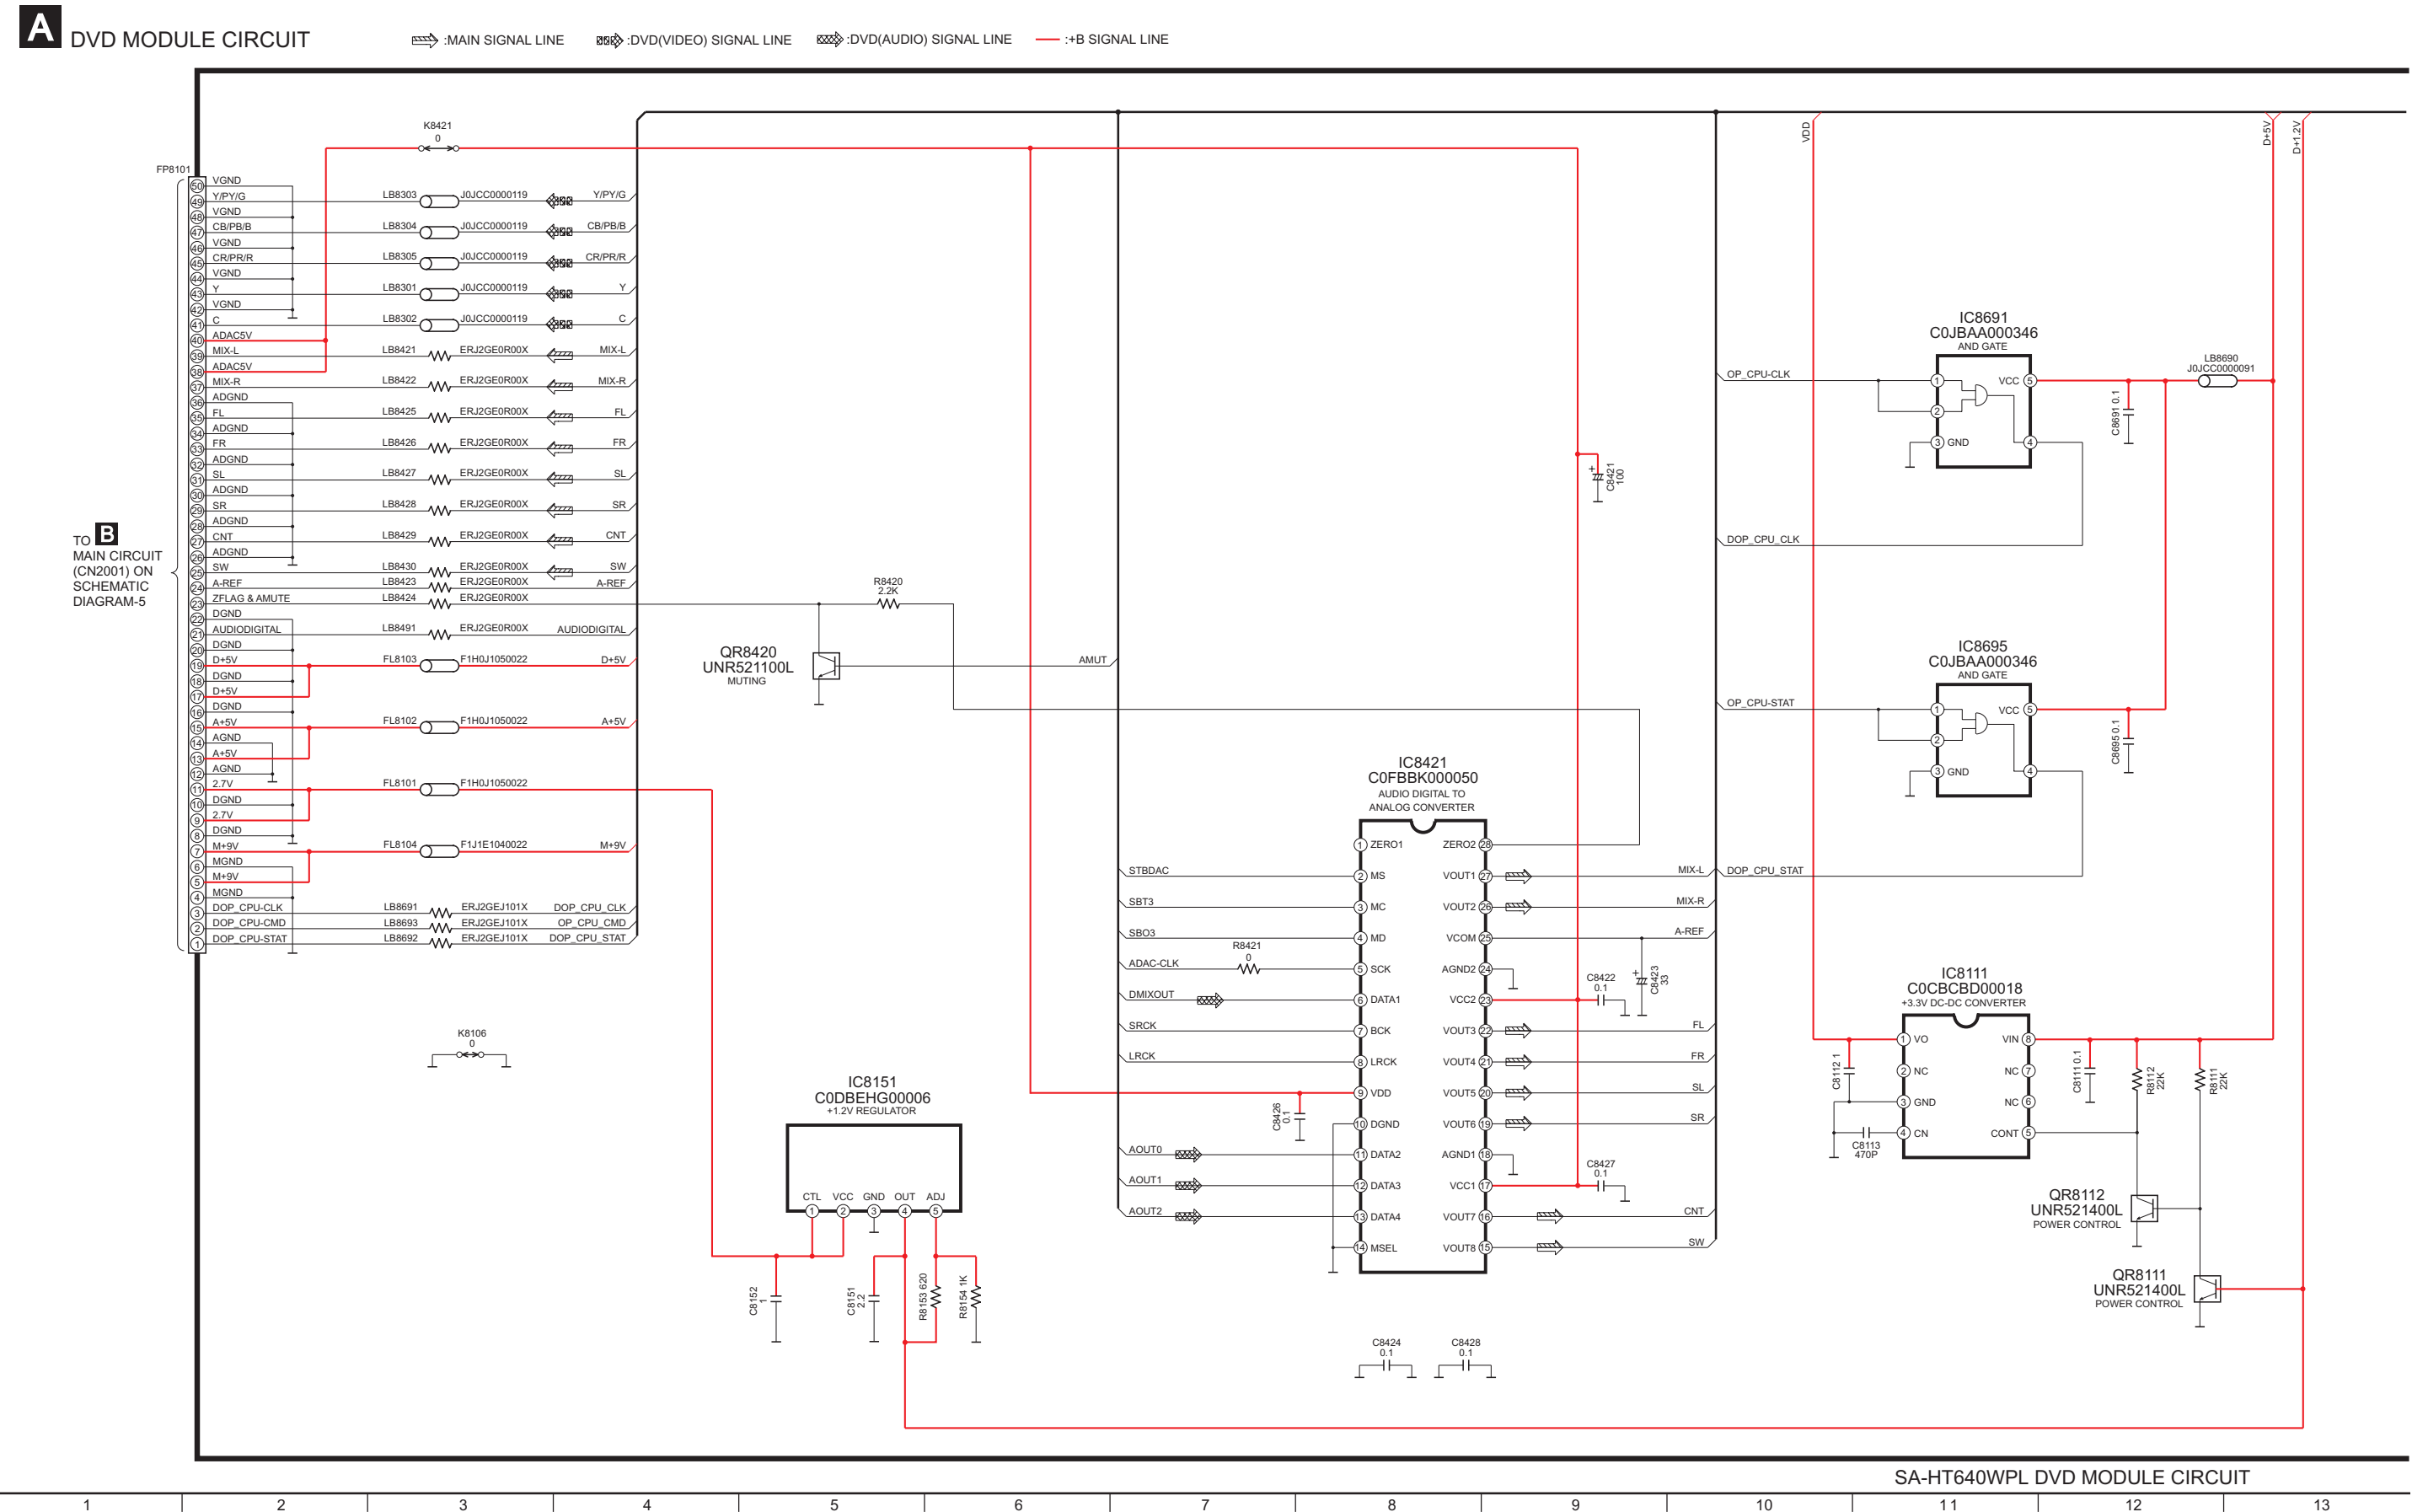

SCHEMATIC DIAGRAM-3


A DVD MODULE CIRCUIT

 :DVD(AUDIO) SIGNAL LINE

 :DVD(VIDEO) SIGNAL LINE

➡ :CD-DA SIGNAL LINE


— :+B SIGNAL LINE

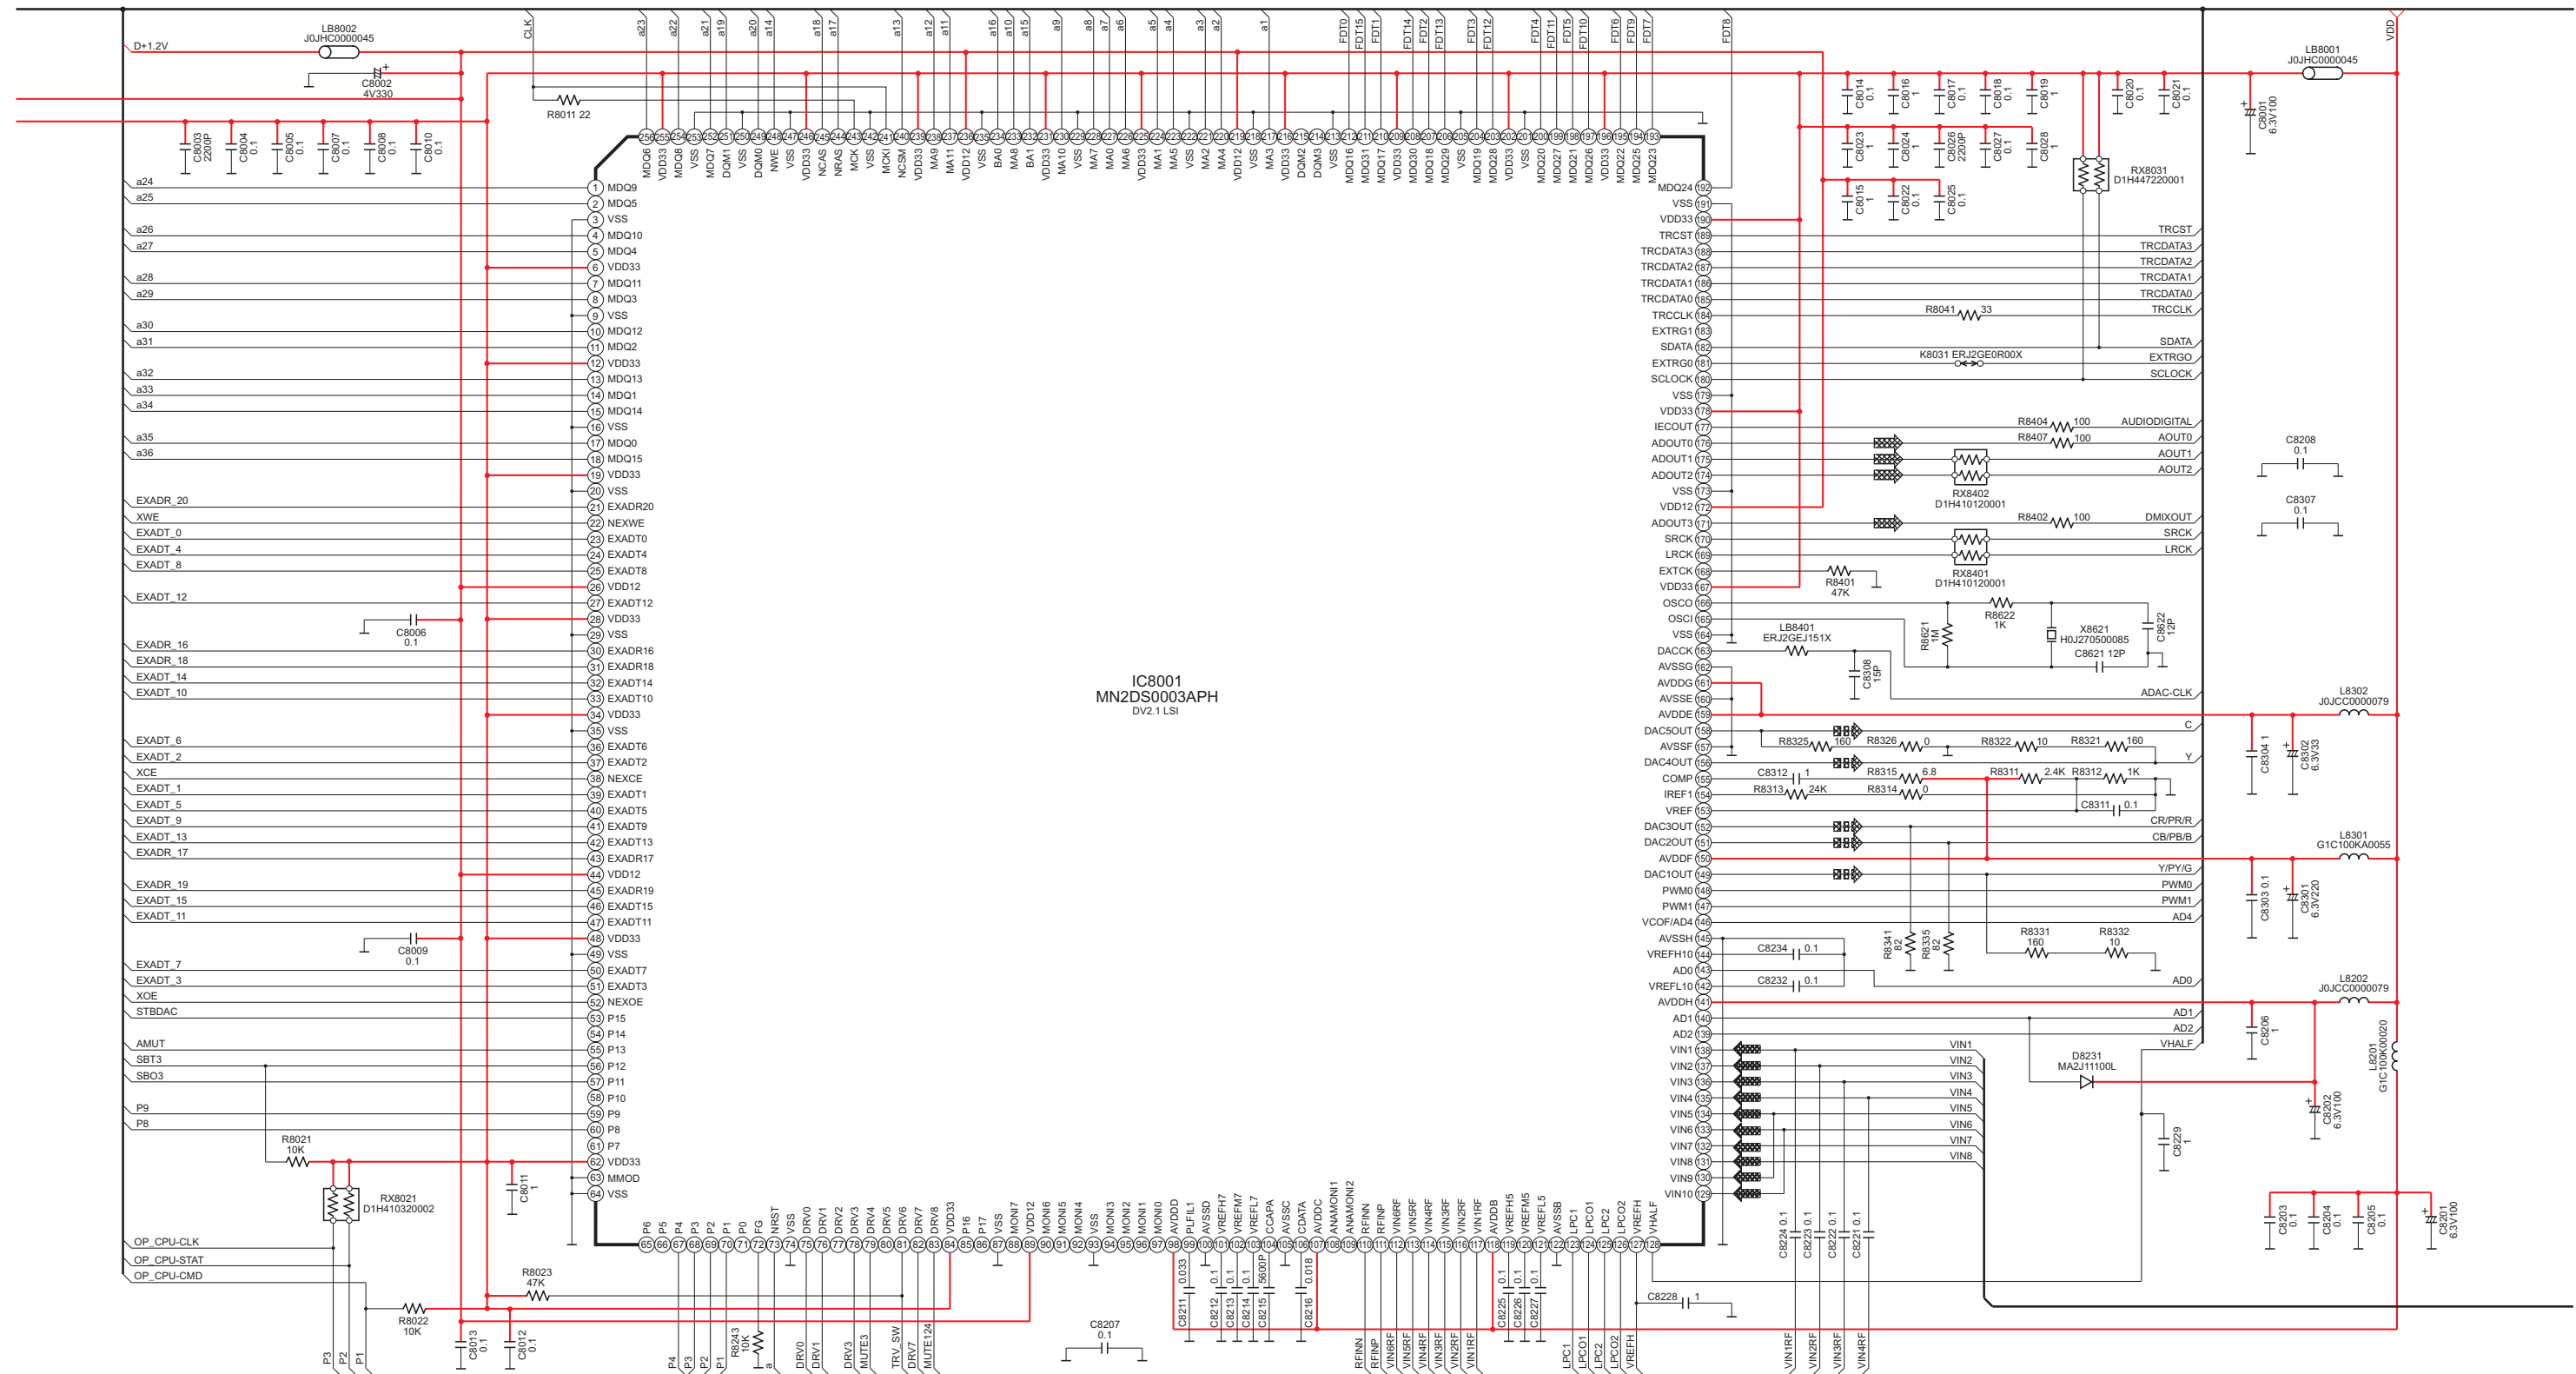

4.2. Main Circuit

SCHEMATIC DIAGRAM-5


B MAIN CIRCUIT

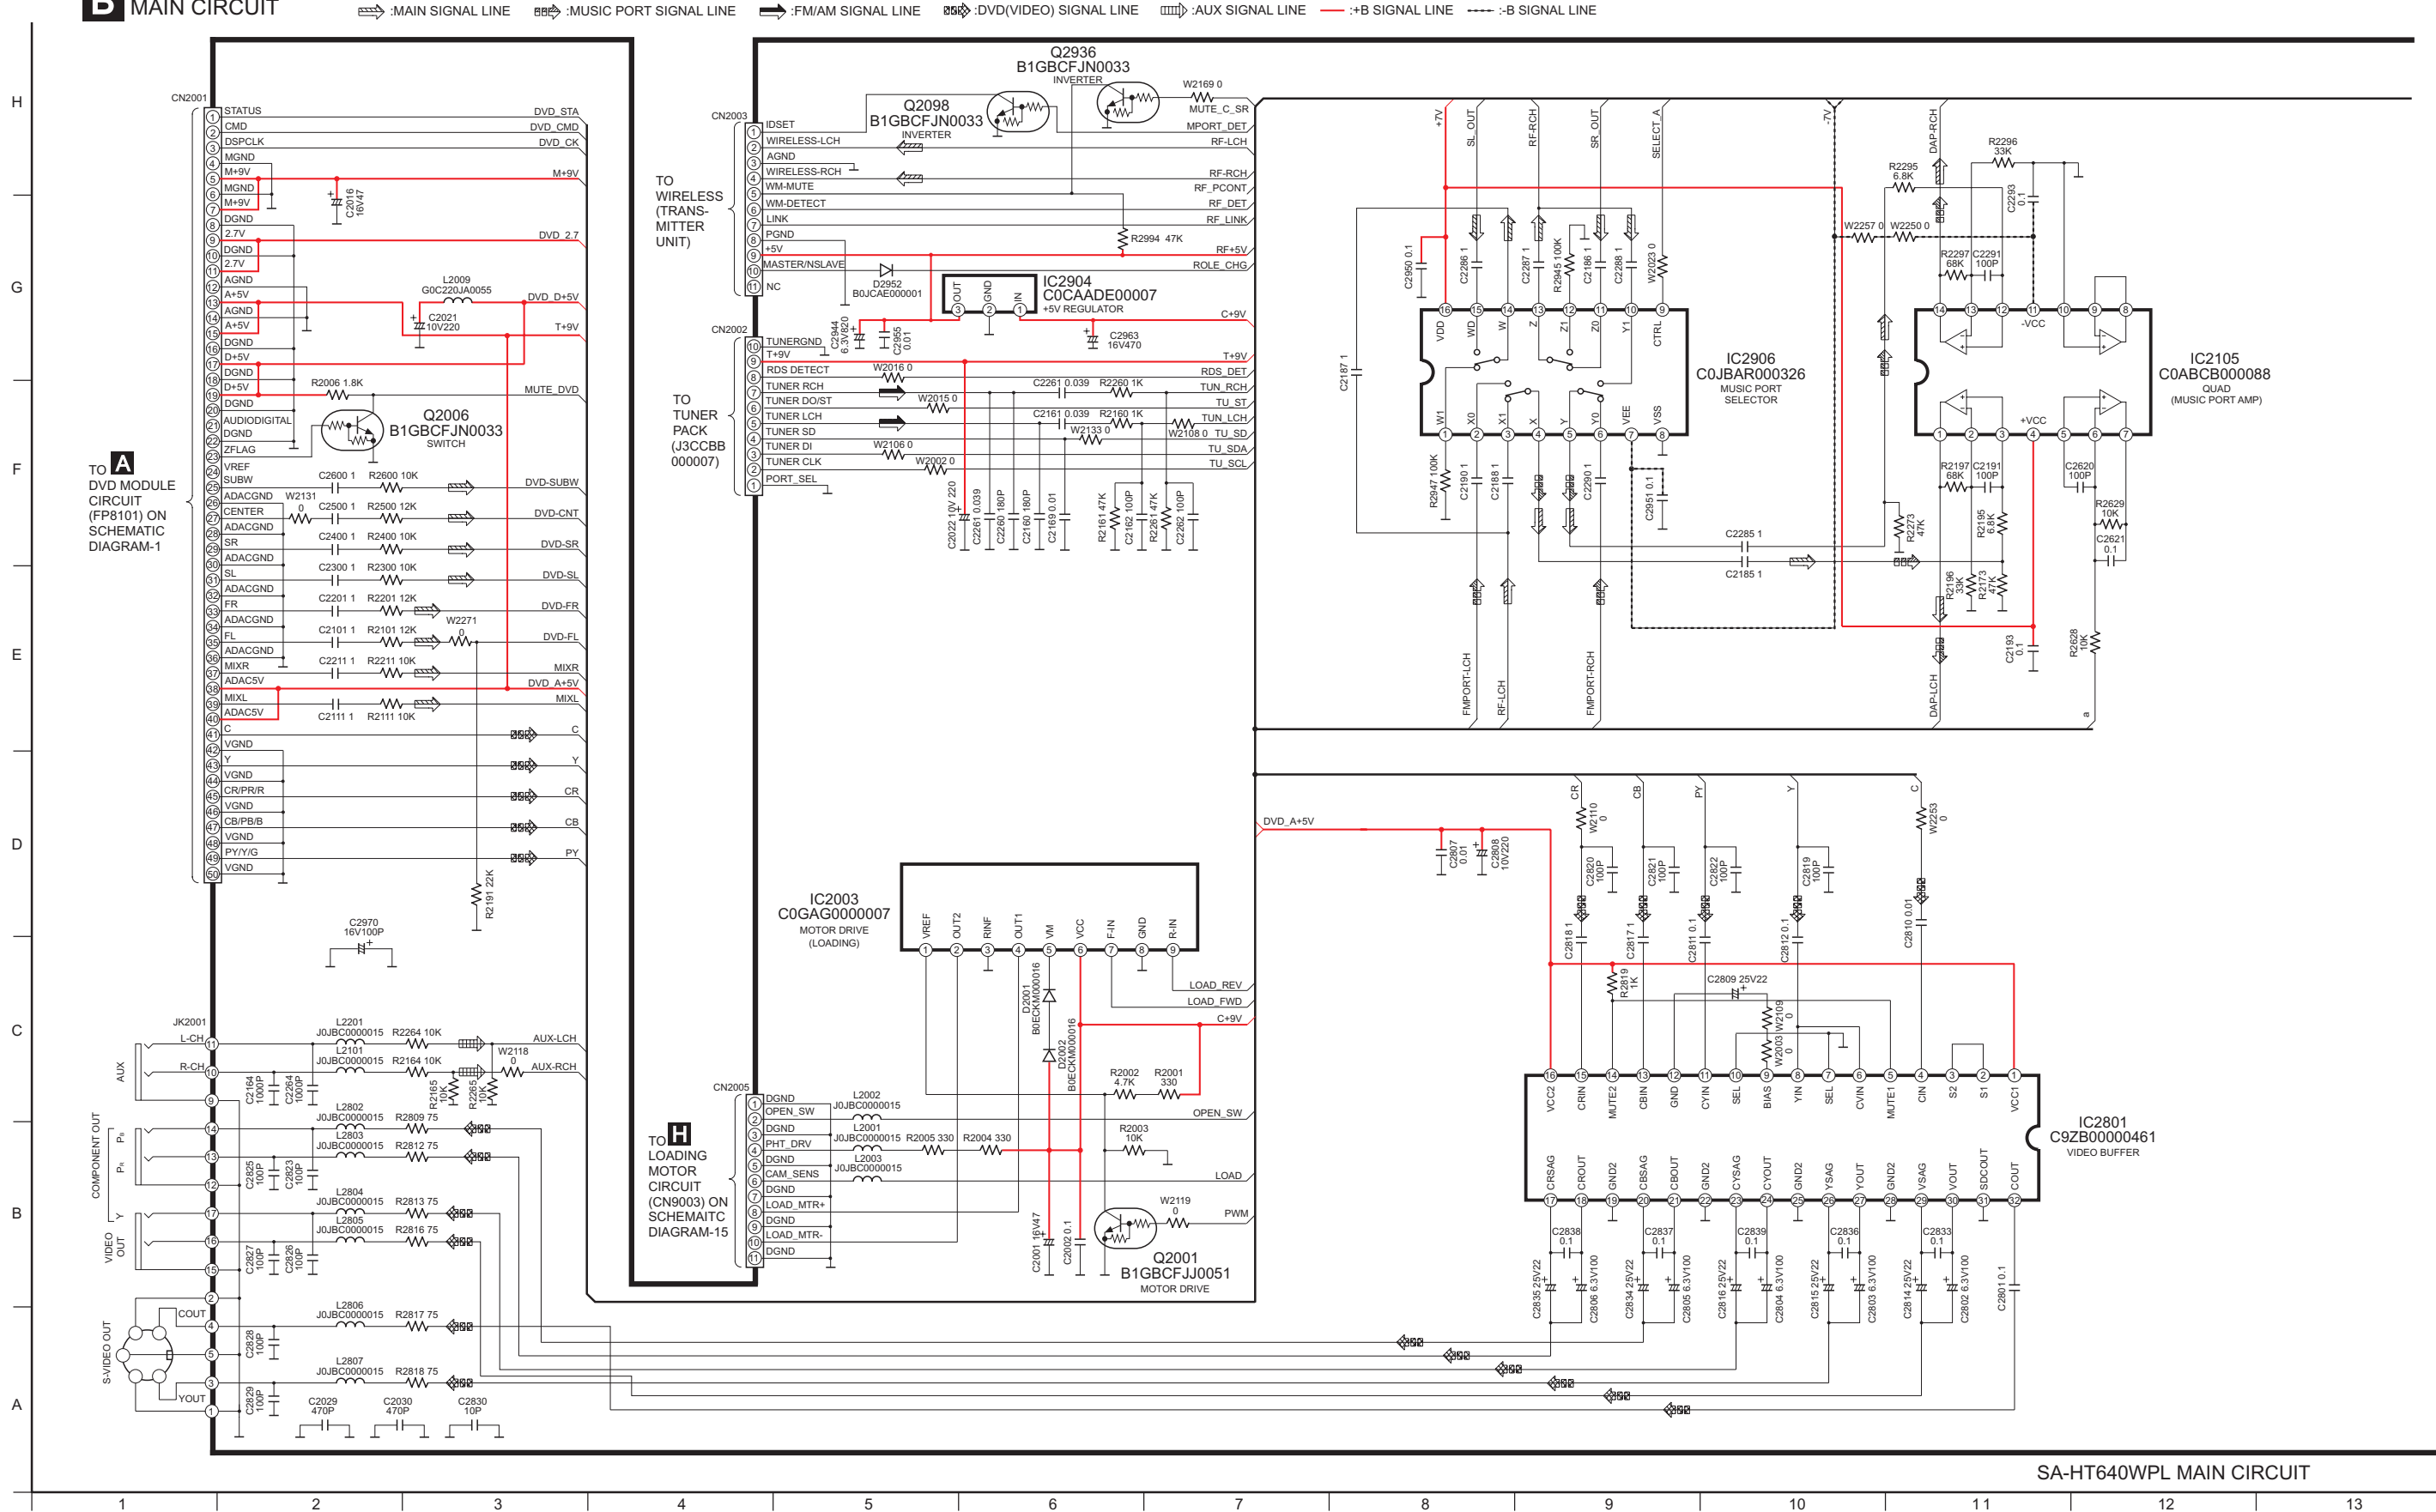

SCHEMATIC DIAGRAM-6

B MAIN CIRCUIT


— :+B SIGNAL LINE

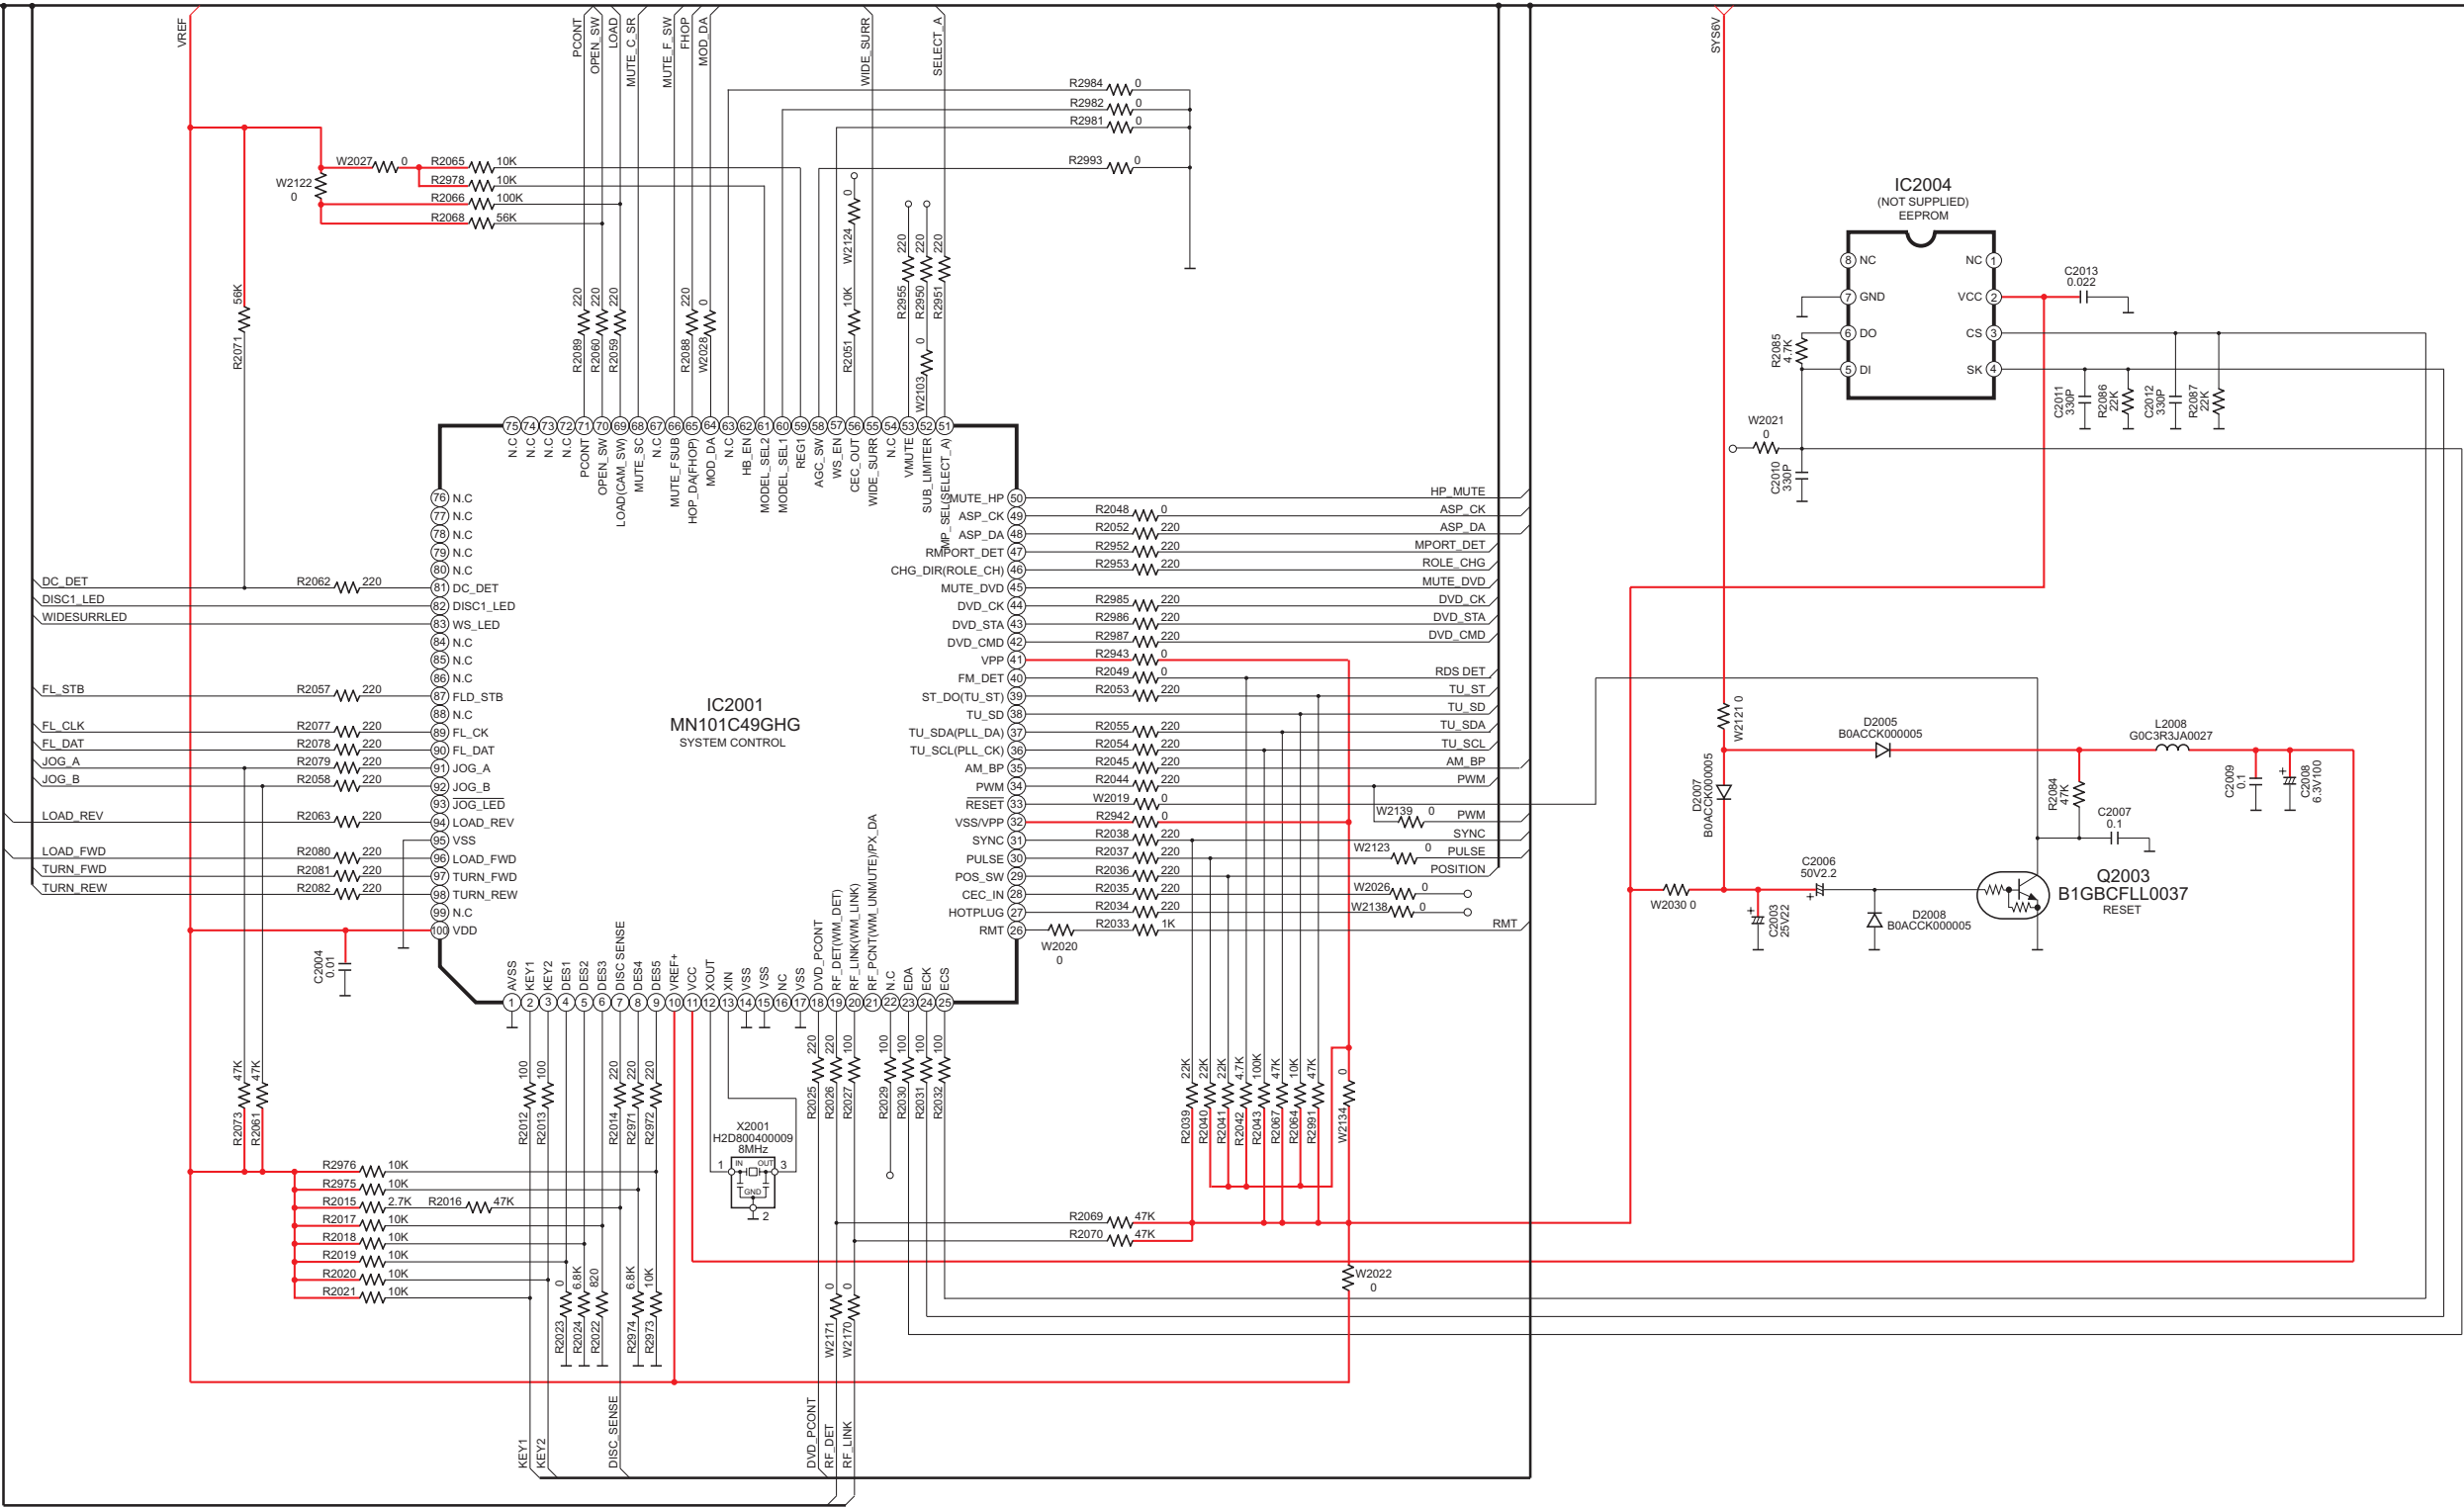

SCHEMATIC DIAGRAM-7

B MAIN CIRCUIT


 : AUX SIGNAL LINE
 : MUSIC PORT SIGNAL LINE
 : MAIN SIGNAL LINE
 : +B SIGNAL LINE
 : -B SIGNAL LINE

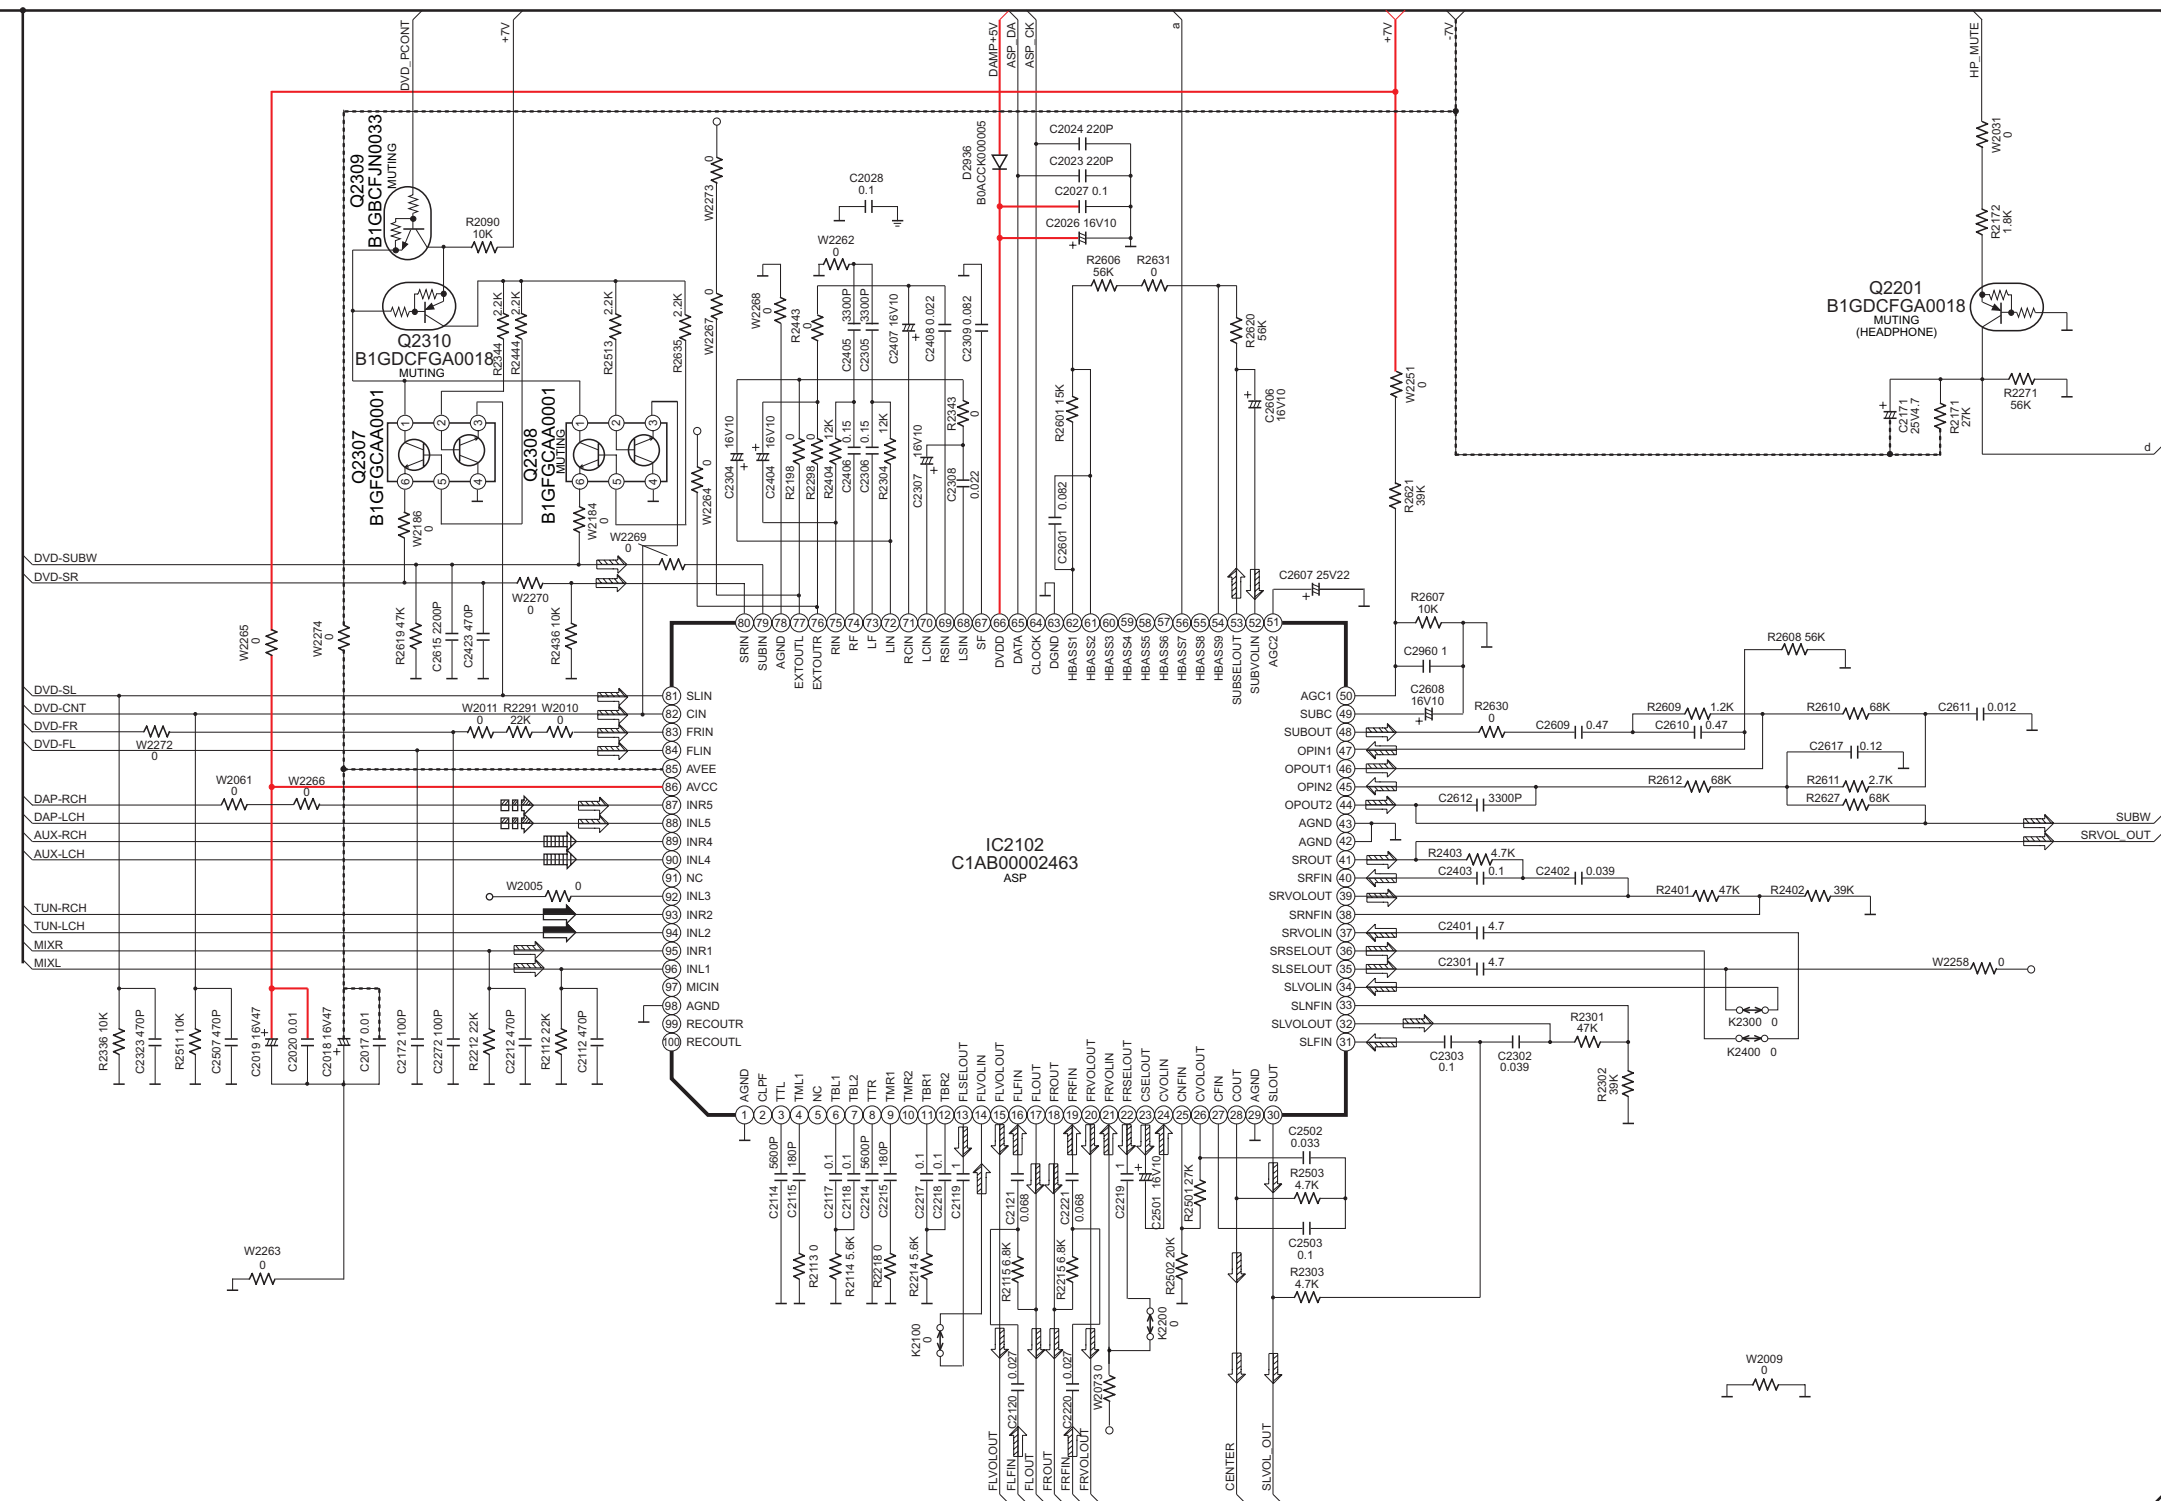

SCHEMATIC DIAGRAM-8

B MAIN CIRCUIT

➡ :MAIN SIGNAL LINE — :+B SIGNAL LINE --- :-B SIGNAL LINE

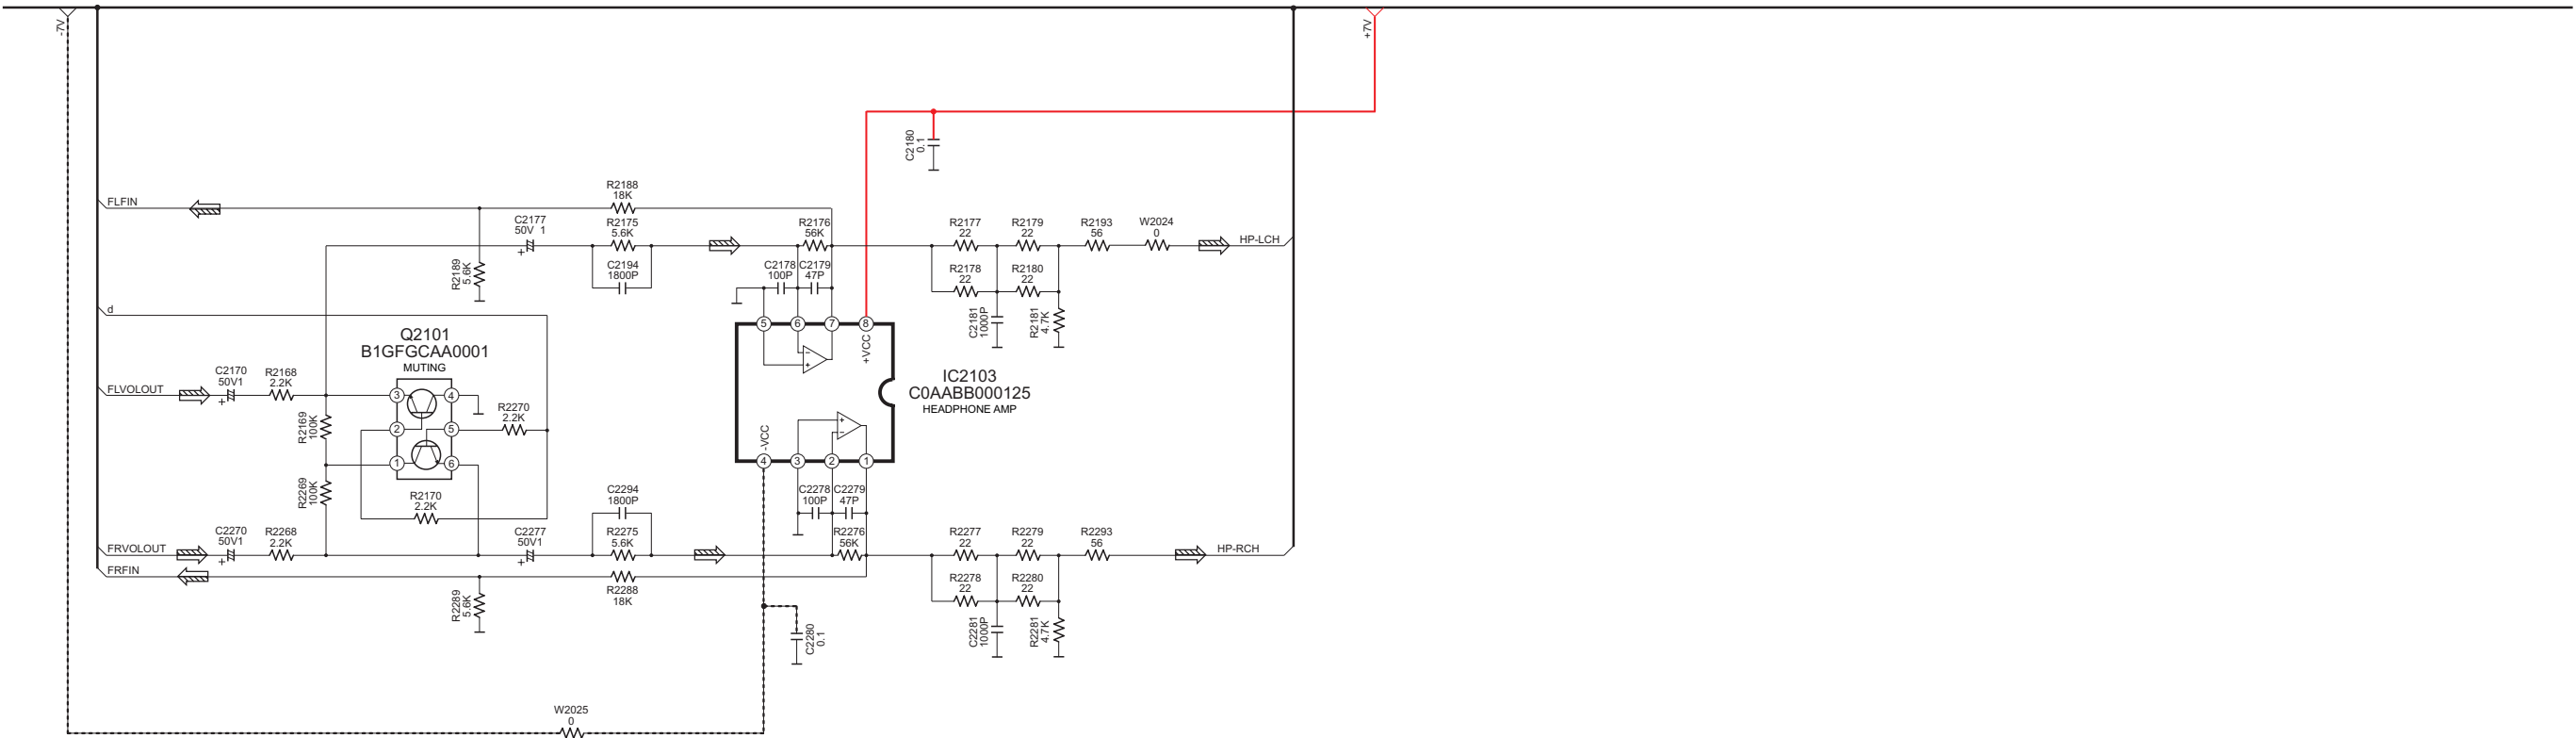

SCHEMATIC DIAGRAM-9


B MAIN CIRCUIT

→ :MAIN SIGNAL LINE

↔ : MUSIC PORT SIGNAL LINE

- - - :+B SIGNAL LINE

- - - :-B SIGNAL LINE

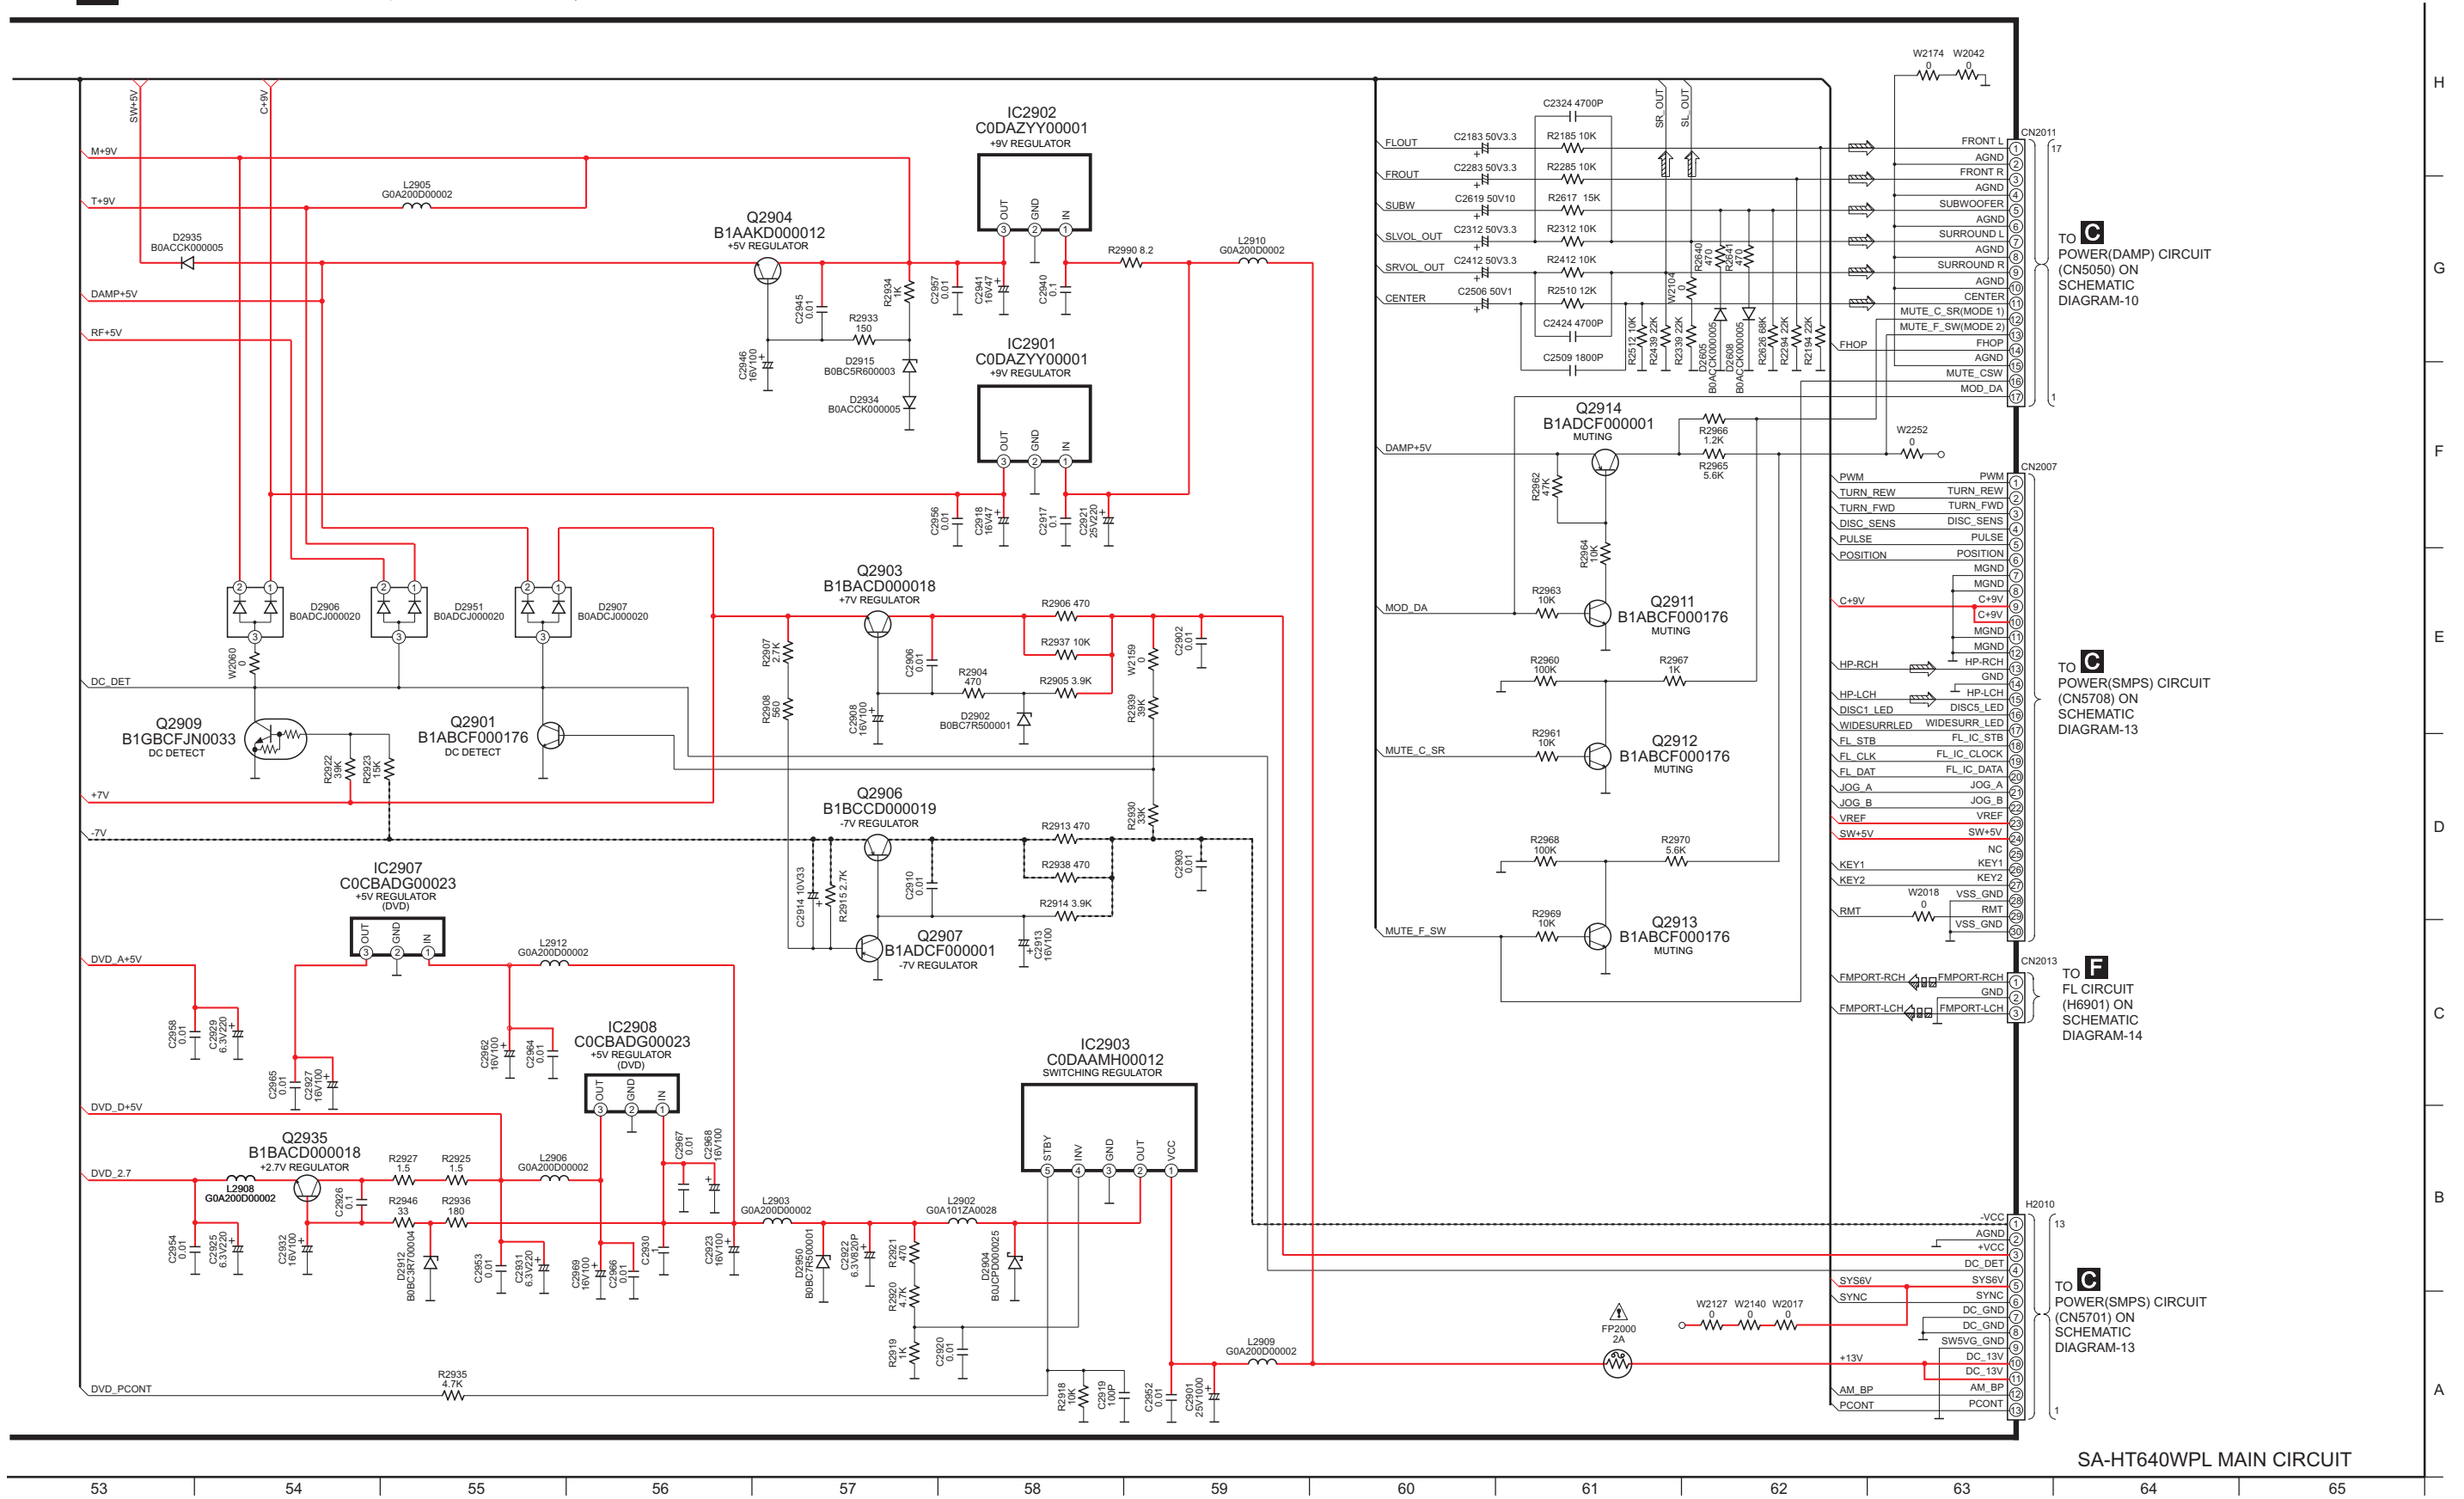

SA-HT640WPL MAIN CIRCUIT




C POWER(DIGITAL AMP) CIRCUIT



SCHEMATIC DIAGRAM-11

C POWER(DIGITAL AMP) CIRCUIT

➡ :MAIN SIGNAL LINE — :+B SIGNAL LINE --- :-B SIGNAL LINE

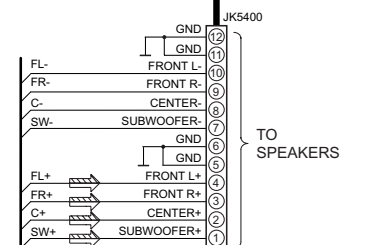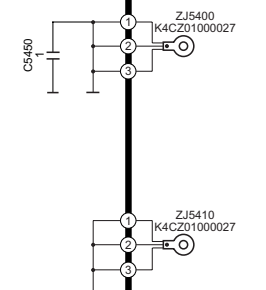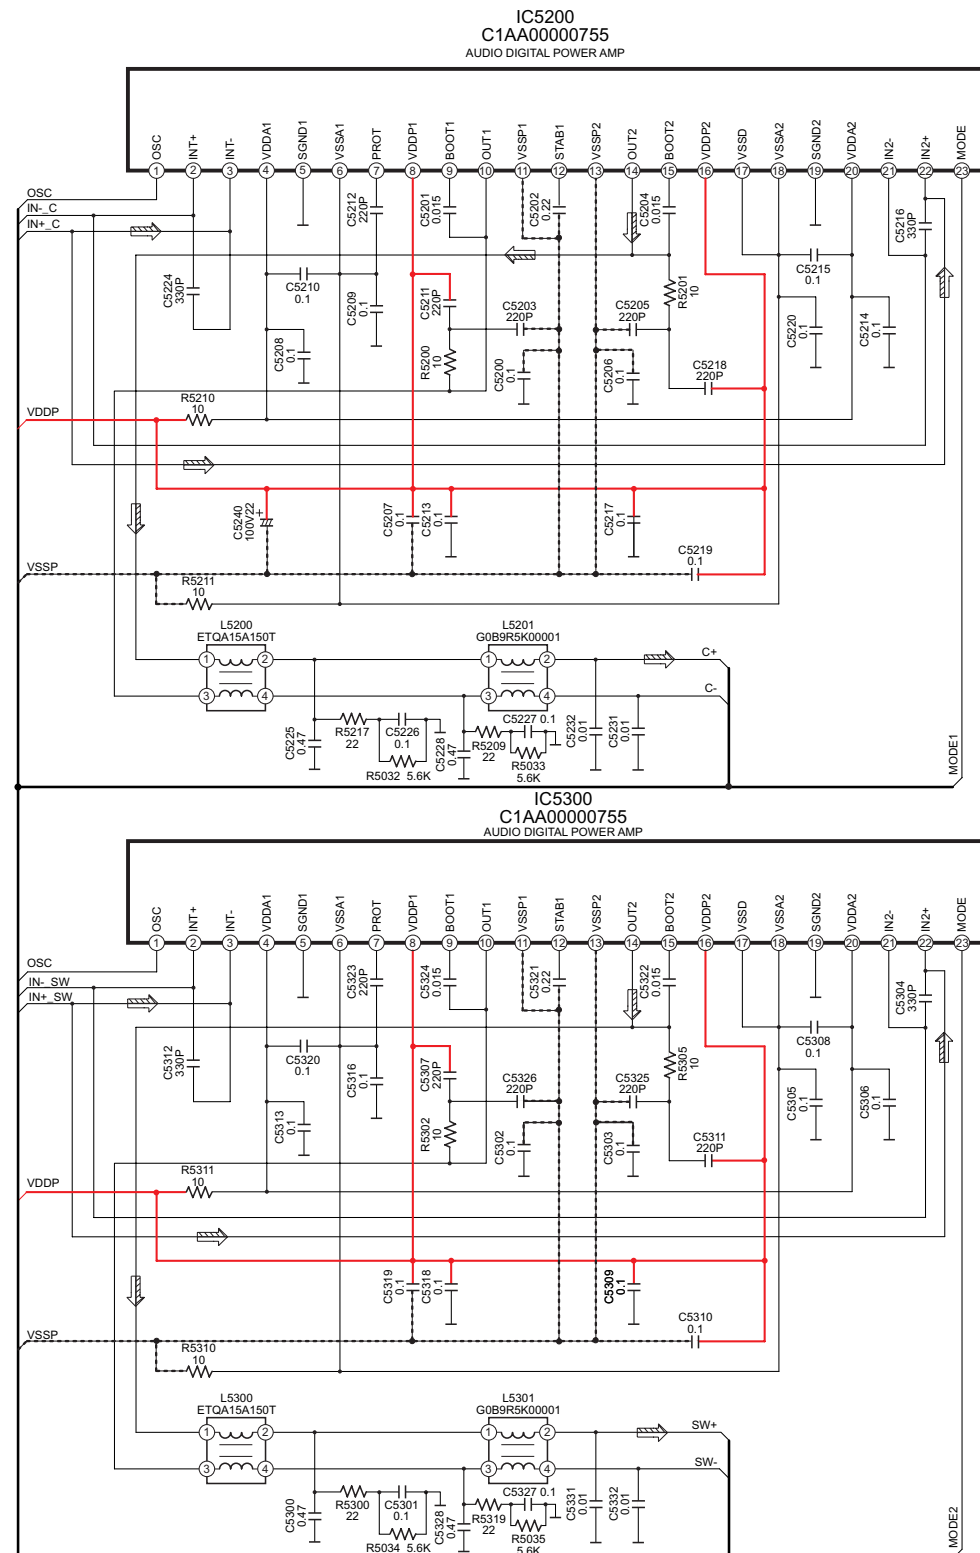


D : POWER (DIGITAL AMP) : SCHEMATIC DIAGRAM 11
S : POWER (SMPS) : SCHEMATIC DIAGRAM 12-13

SCHEMATIC DIAGRAM-12

C

POWER(SMPS) CIRCUIT


— :+B SIGNAL LINE - - - - :B SIGNAL LINE

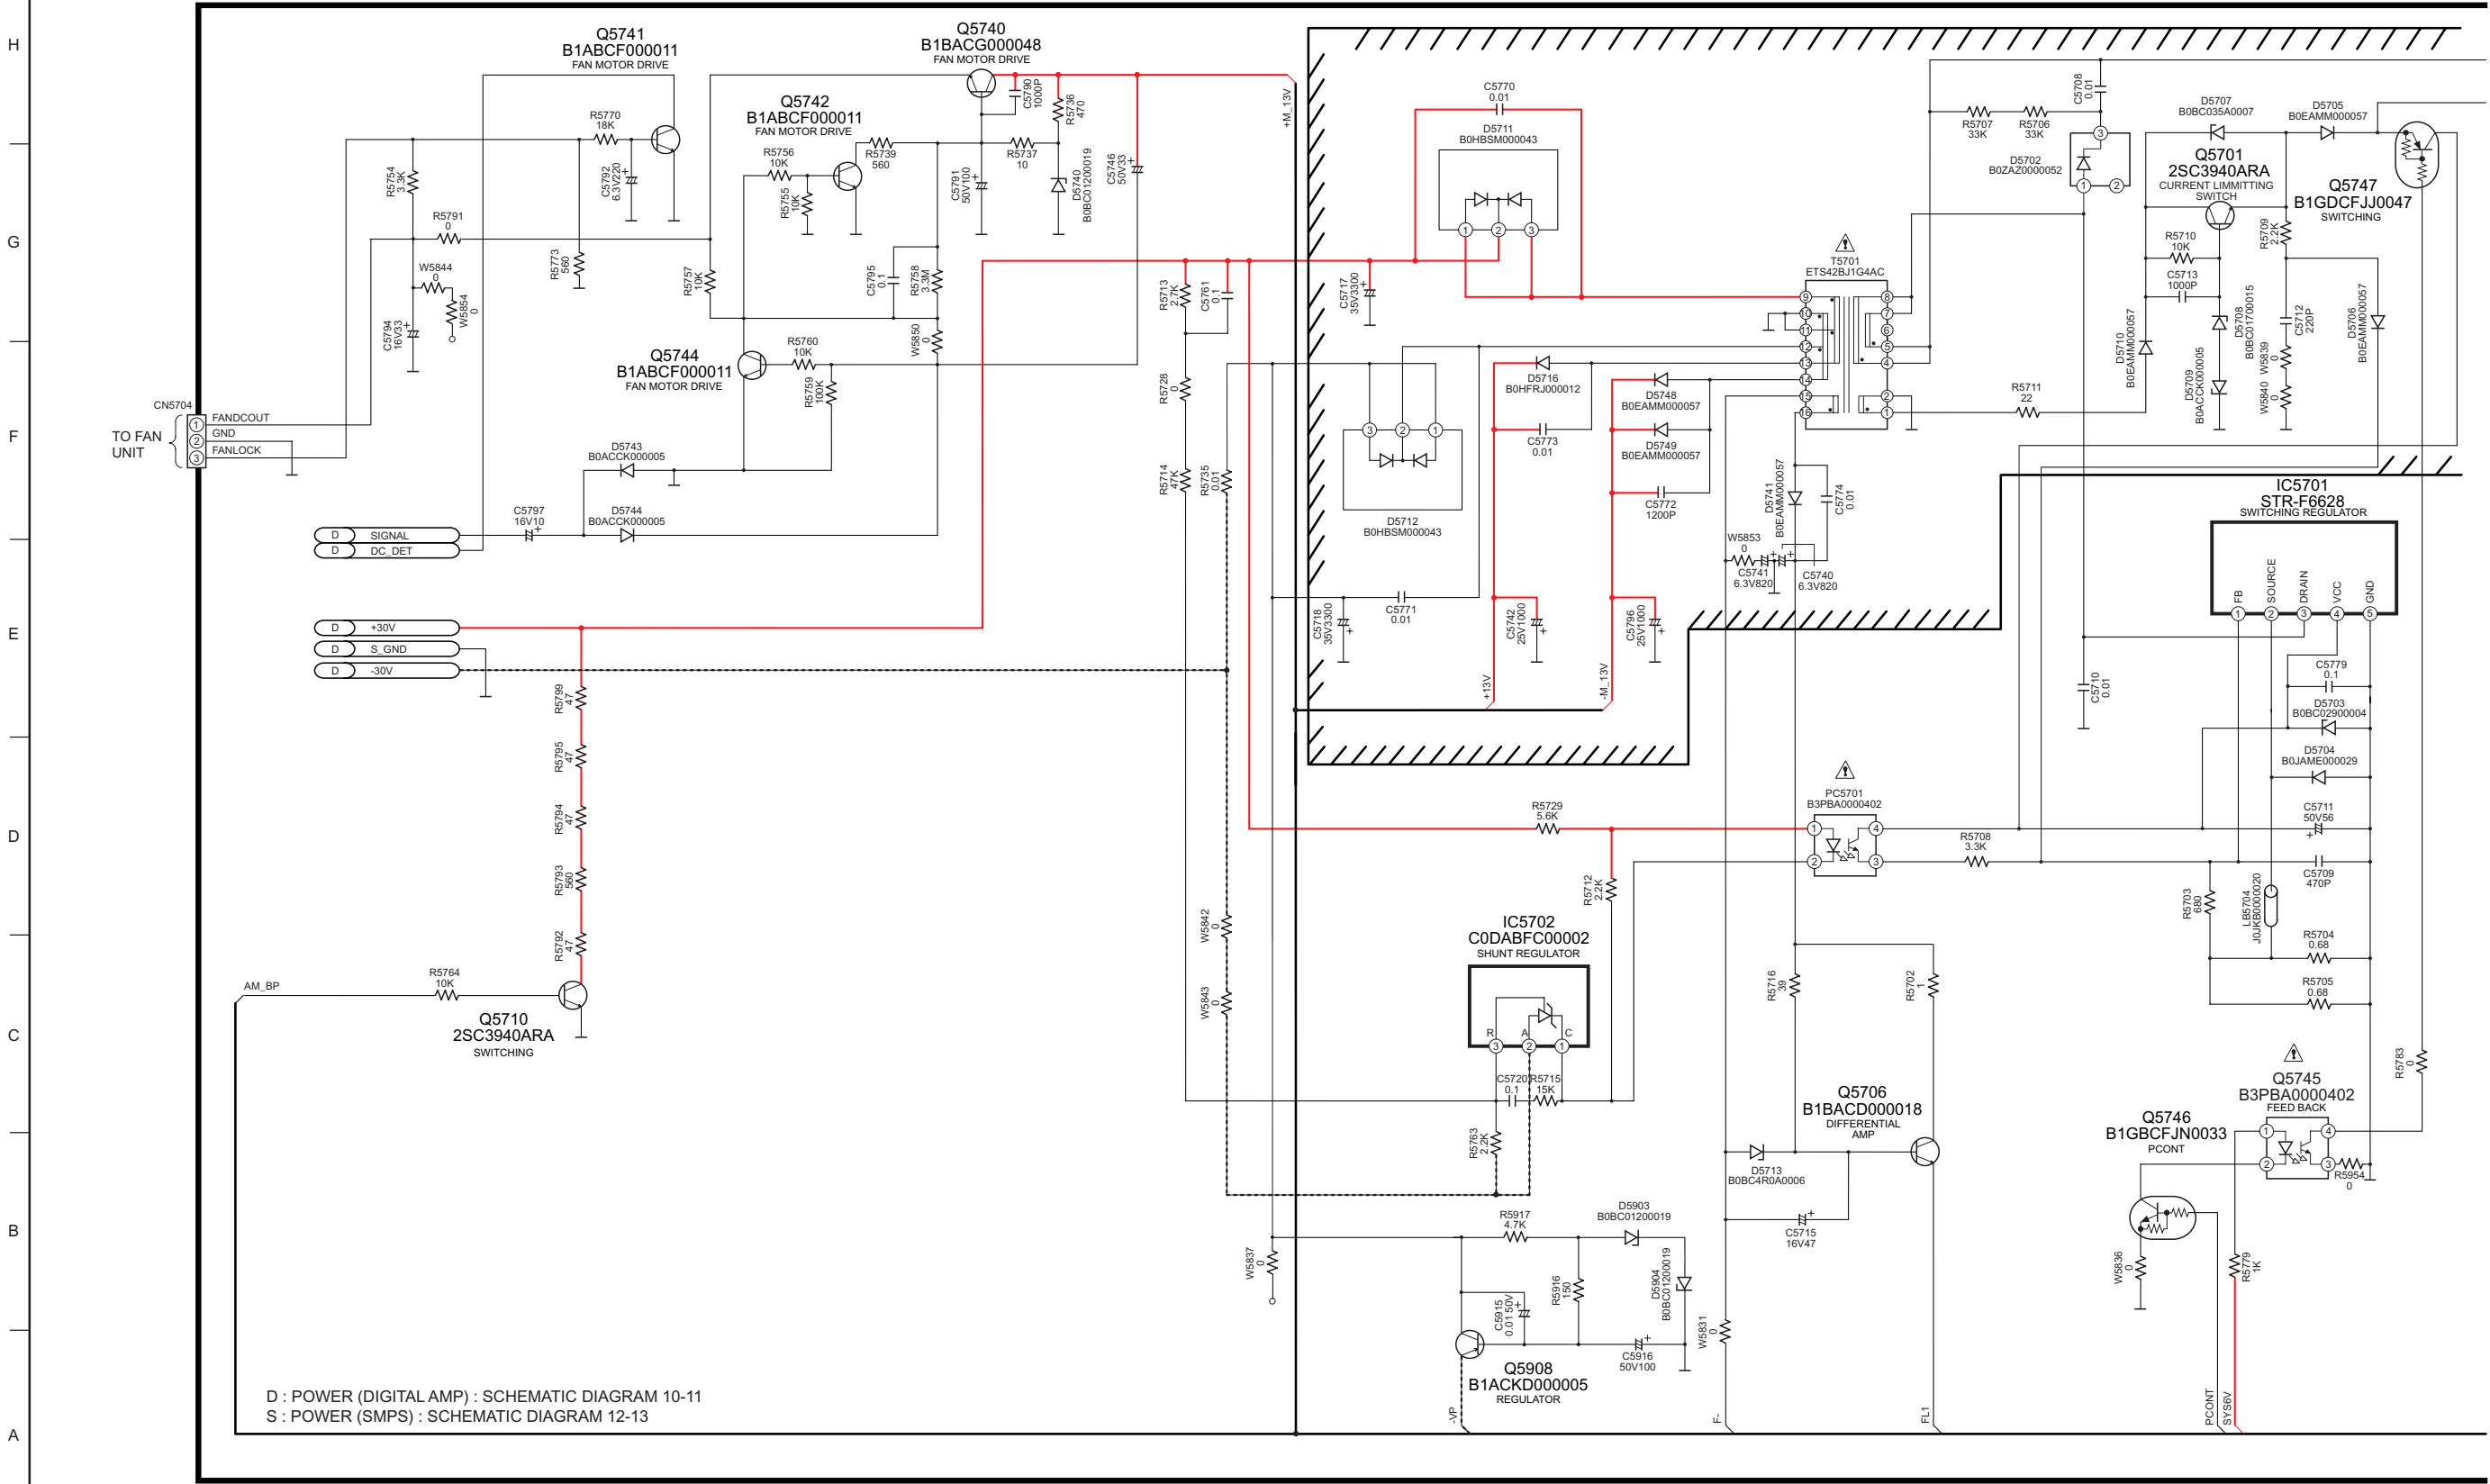

D : POWER (DIGITAL AMP) : SCHEMATIC DIAGRAM 10-11
S : POWER (SMPS) : SCHEMATIC DIAGRAM 12-13


SCHEMATIC DIAGRAM-13

C POWER(SMPS) CIRCUIT






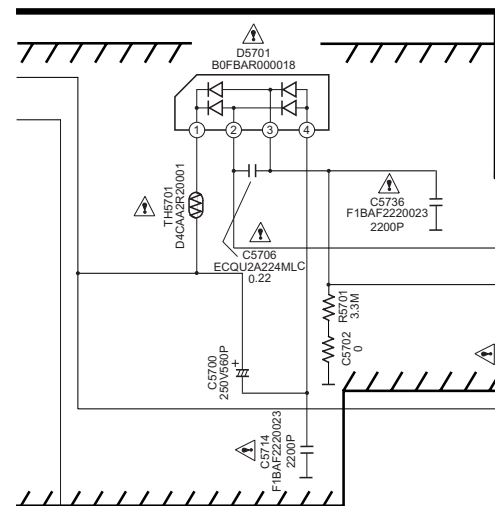


D AC-INLET CIRCUIT

— :+B SIGNAL LINE --- :-B SIGNAL LINE

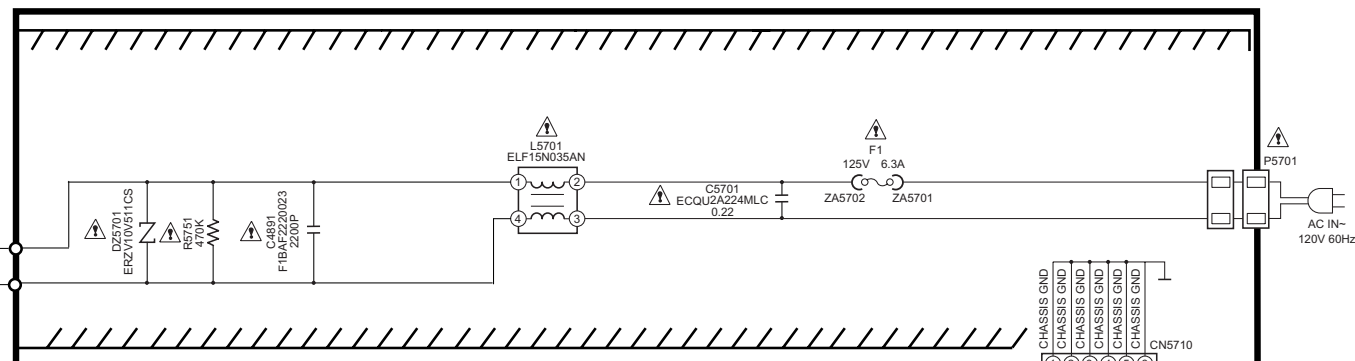

E SUB POWER CIRCUIT |

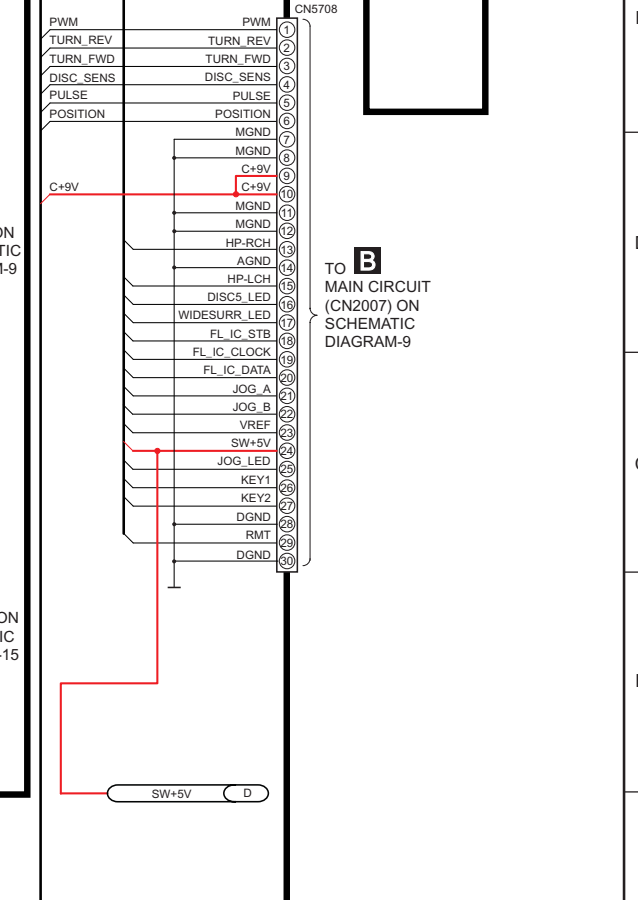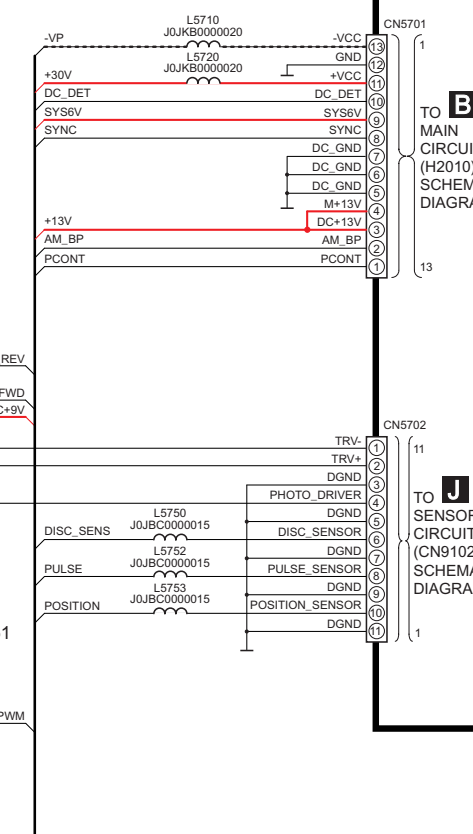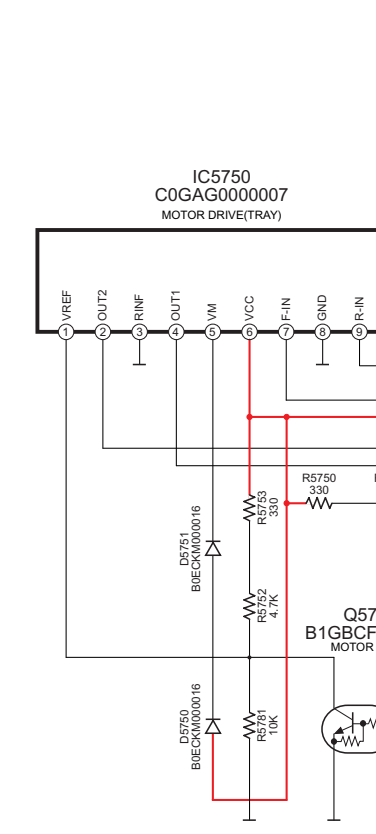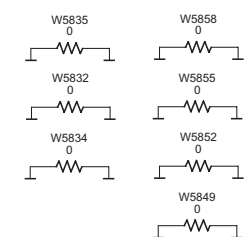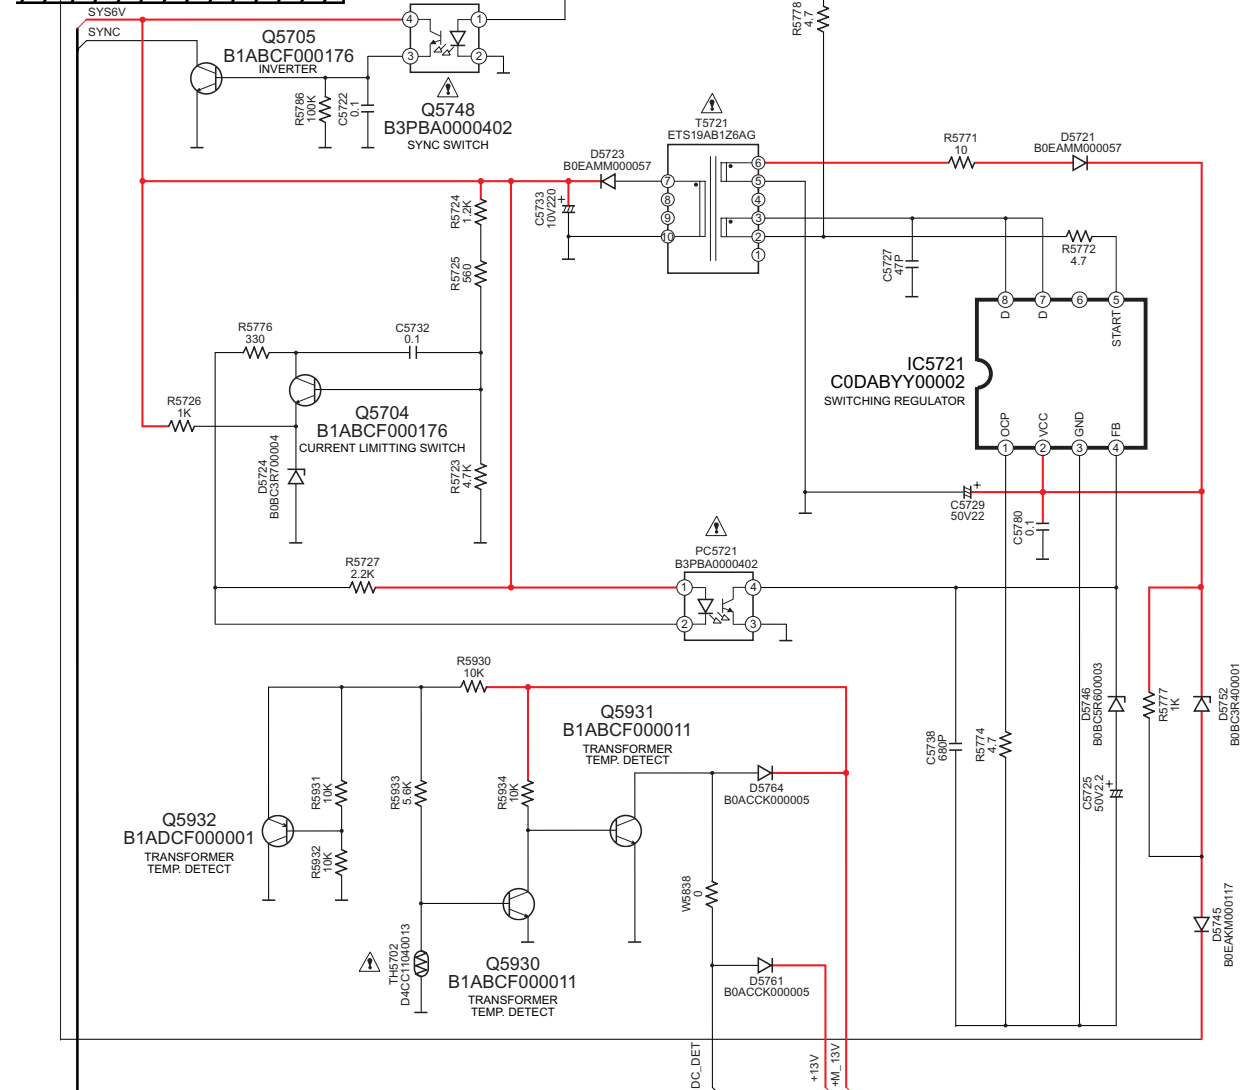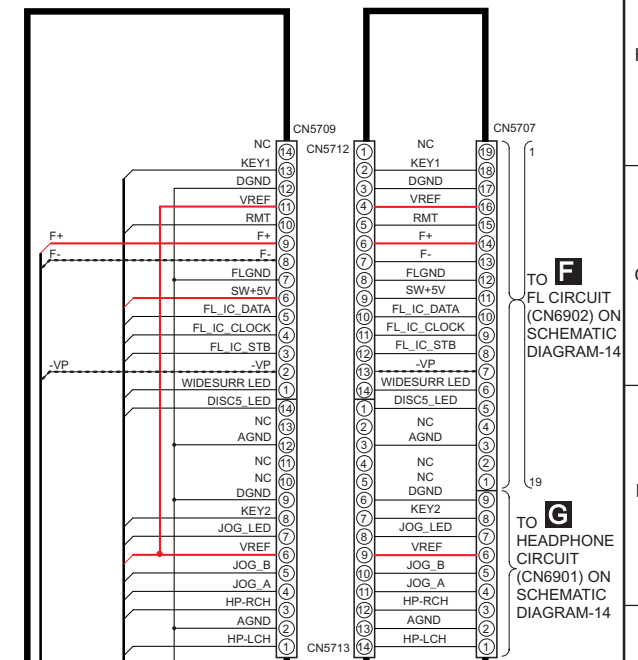

D : POWER (DIGITAL AMP) : SCHEMATIC DIAGRAM 10-11
S : POWER (SMPS) : SCHEMATIC DIAGRAM 12-13


SA-HT640WPL POWER(SMPS)/AC-INLET/SUB POWER CIRCUIT

4.4. FL, Headphone, Loading Motor, Tray Motor, Sensor & Optical Pickup Unit Circuit


SCHEMATIC DIAGRAM-14

F FL CIRCUIT

— :+B SIGNAL LINE - - - - : -B SIGNAL LINE  : MUSIC PORT SIGNAL LINE  : MAIN SIGNAL LINE

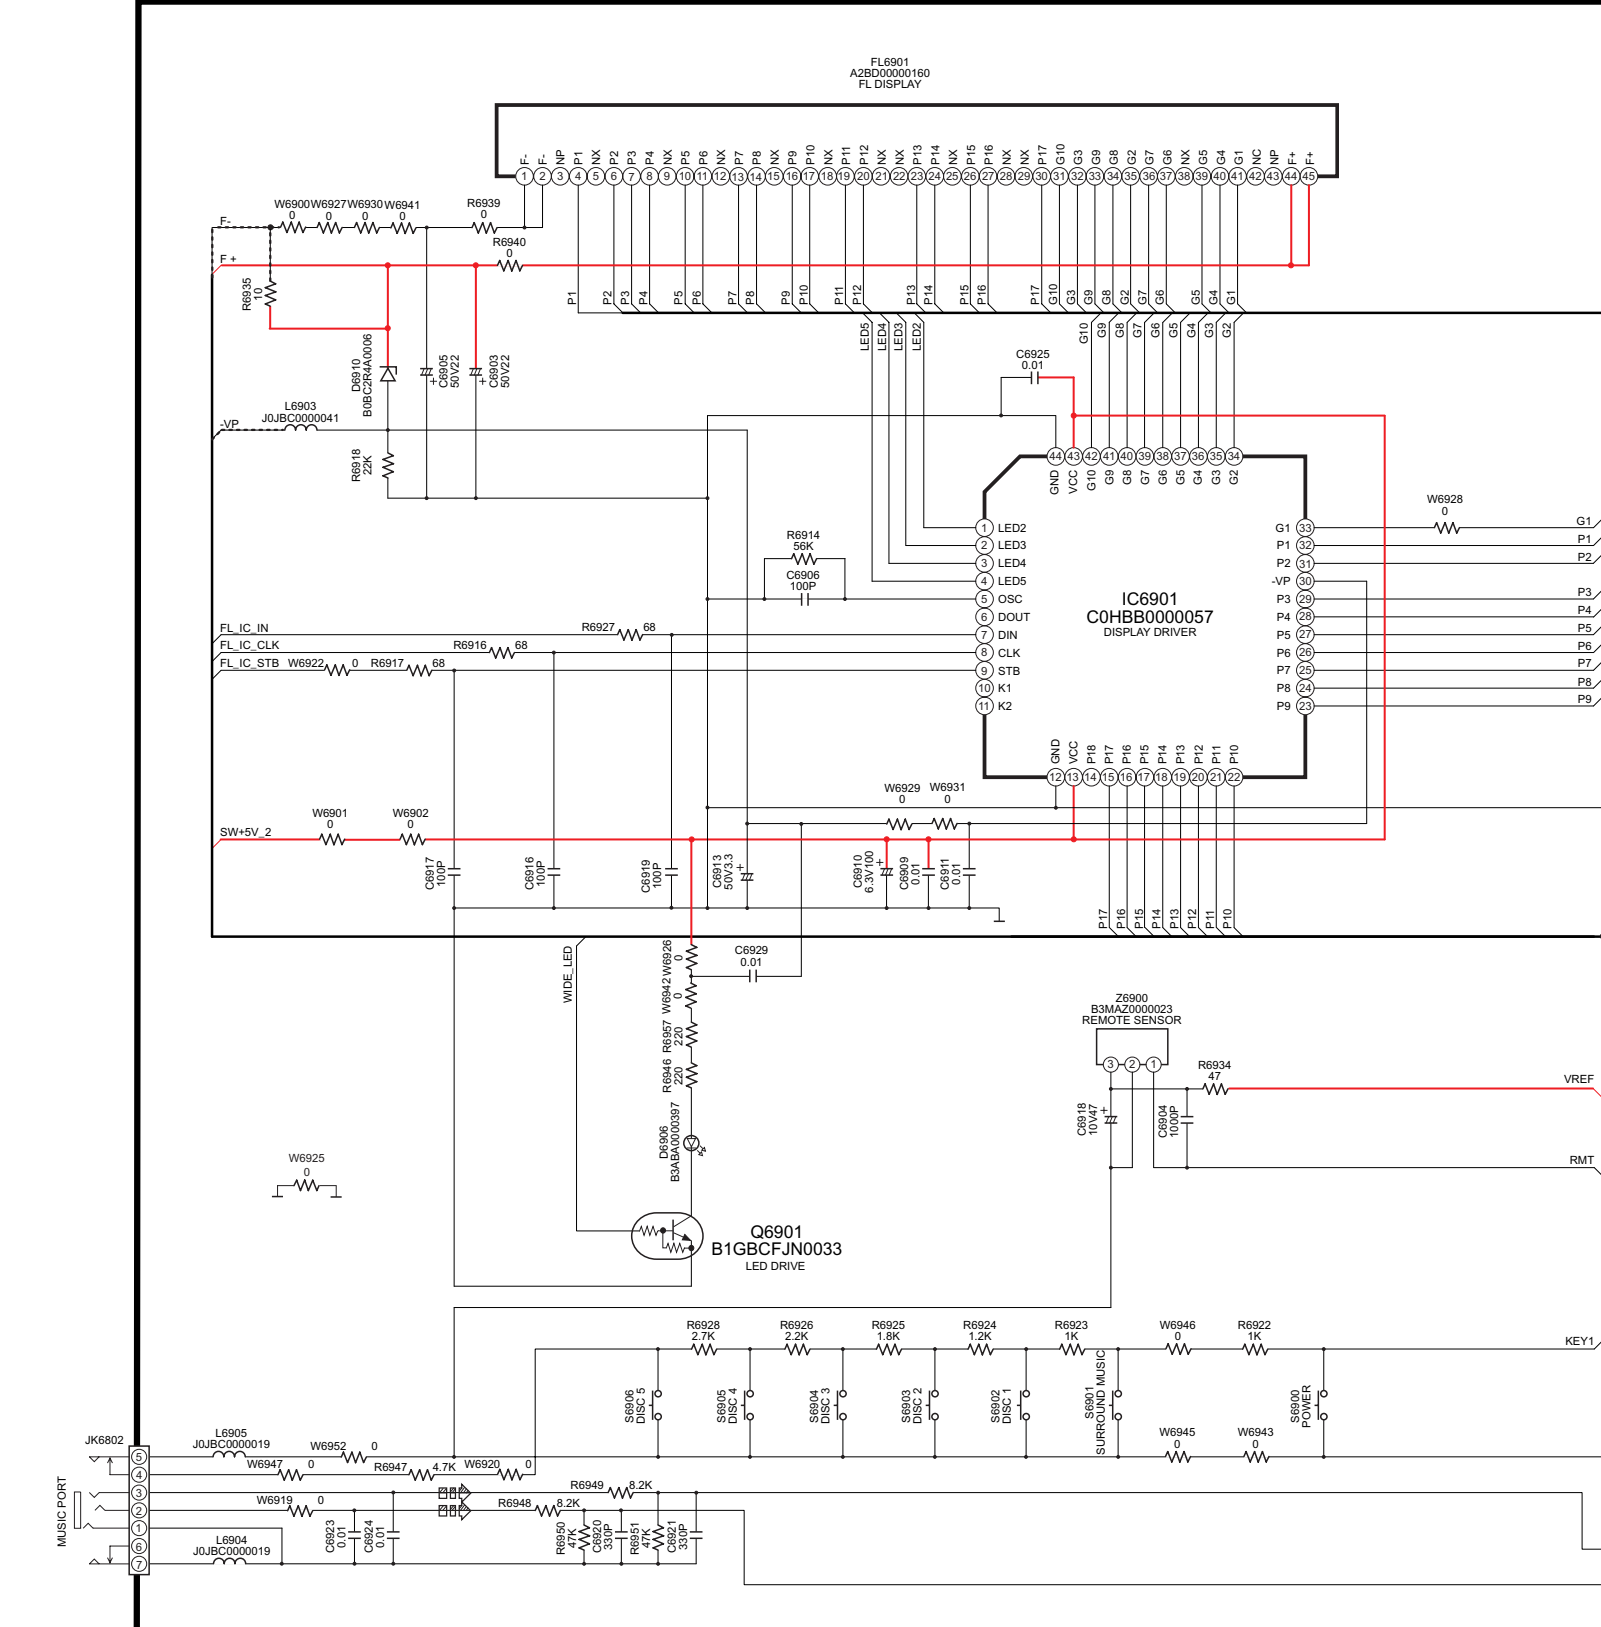


G HEADPHONE CIRCUIT

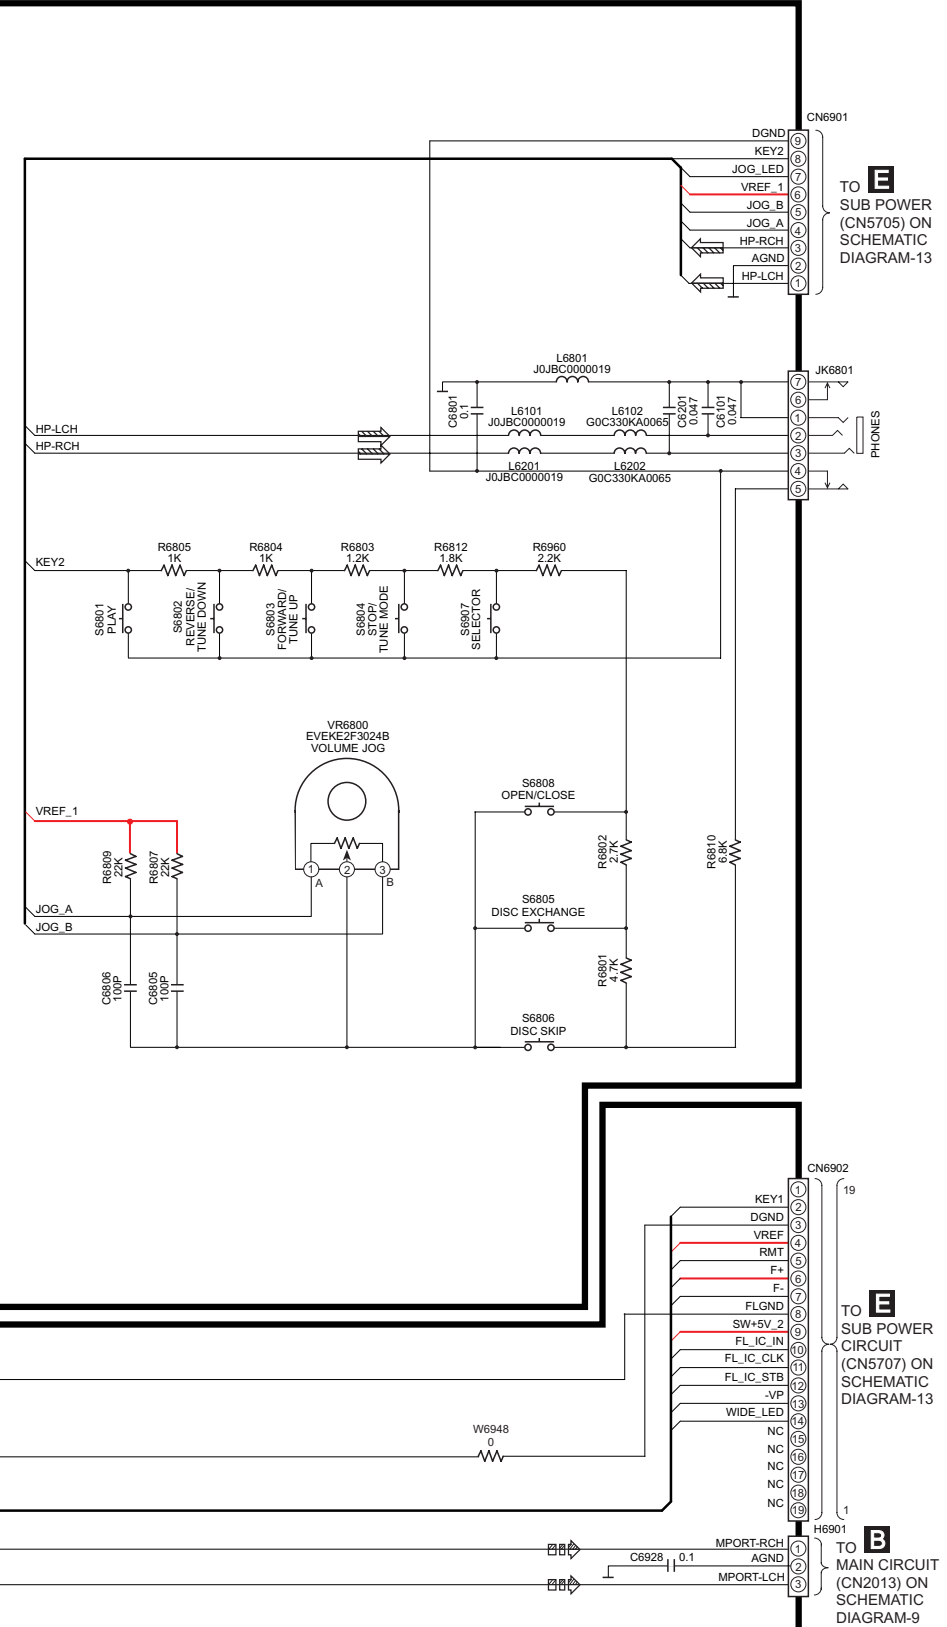


SA-HT640WPL FL/HEADPHONE CIRCUIT

SCHEMATIC DIAGRAM-15


H LOADING MOTOR CIRCUIT

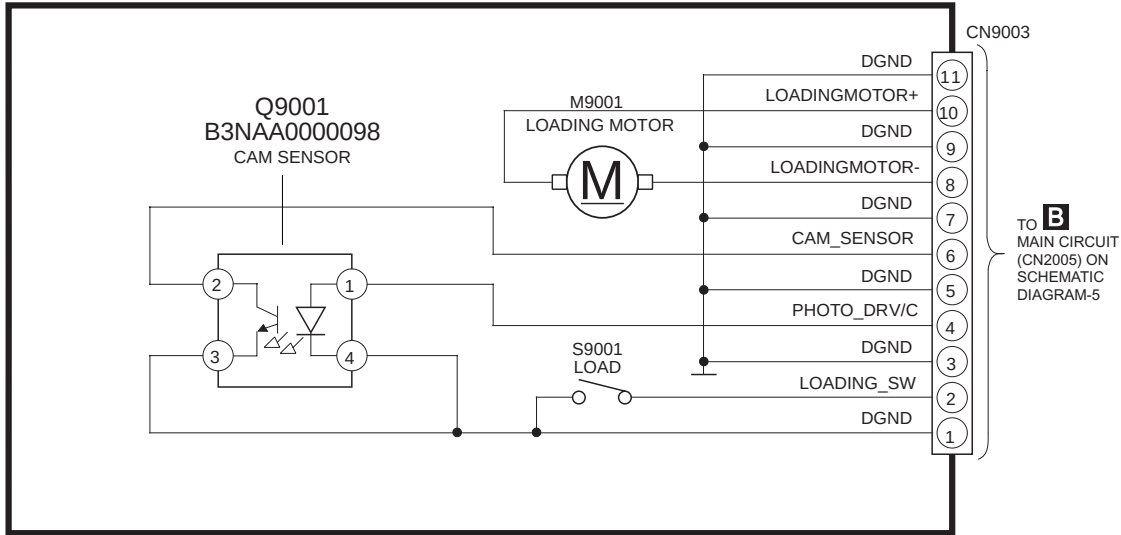


I TRAY MOTOR CIRCUIT

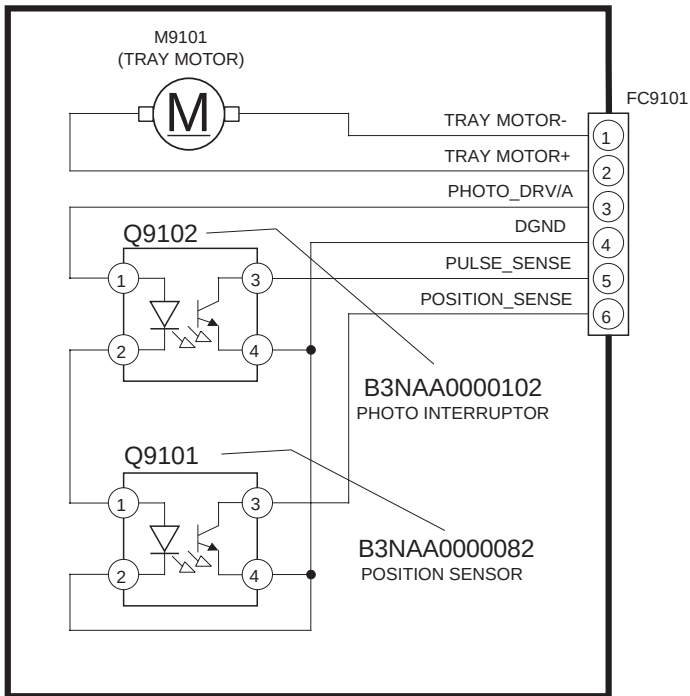

J SENSOR CIRCUIT

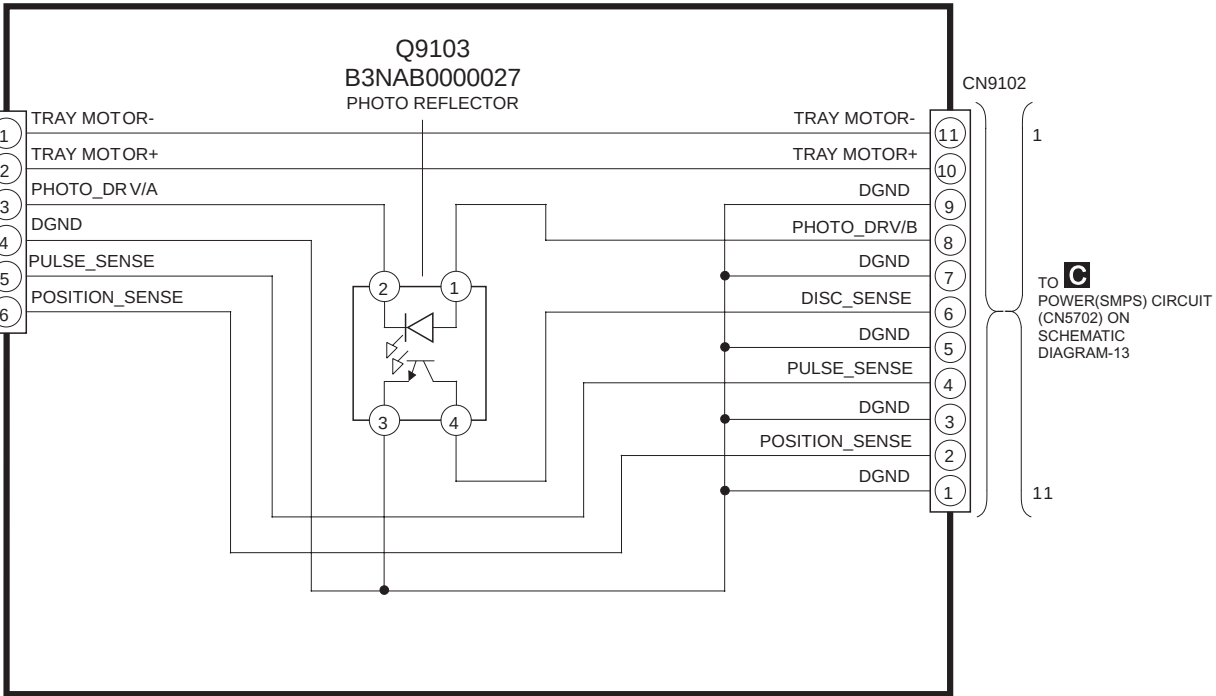


SCHEMATIC DIAGRAM-16

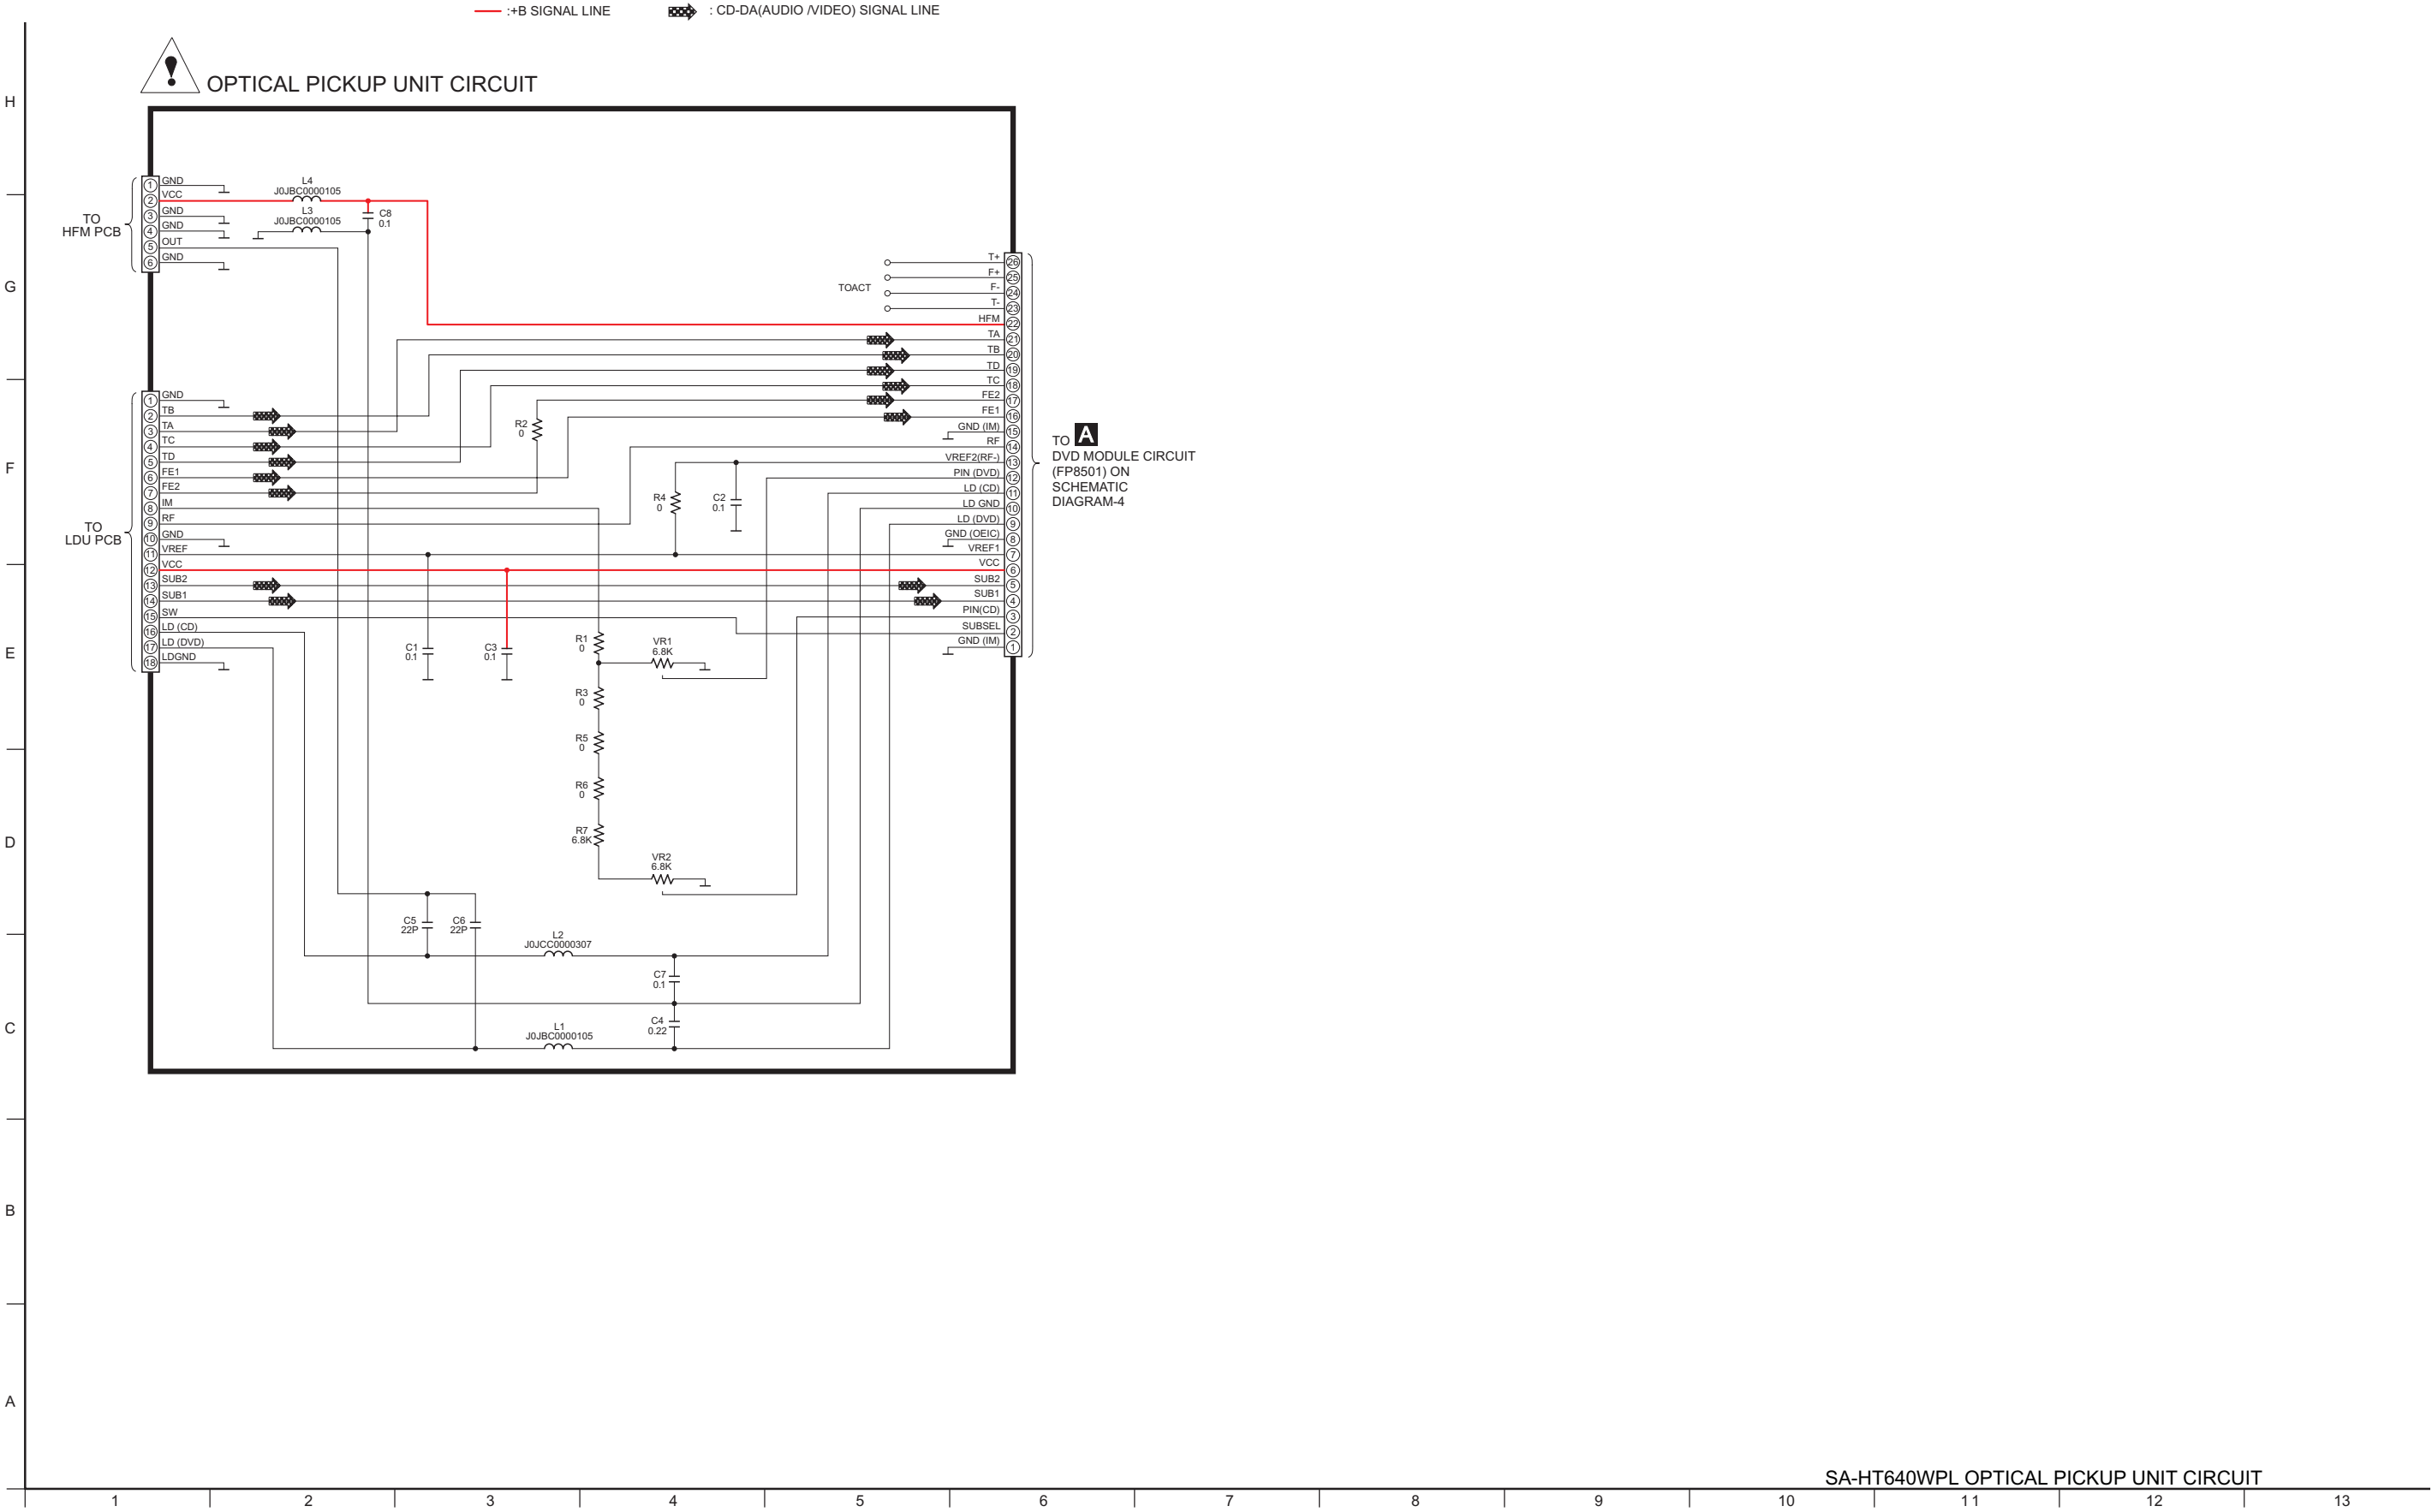


5 Printed Circuit Board

5.1. DVD Module P.C.B.

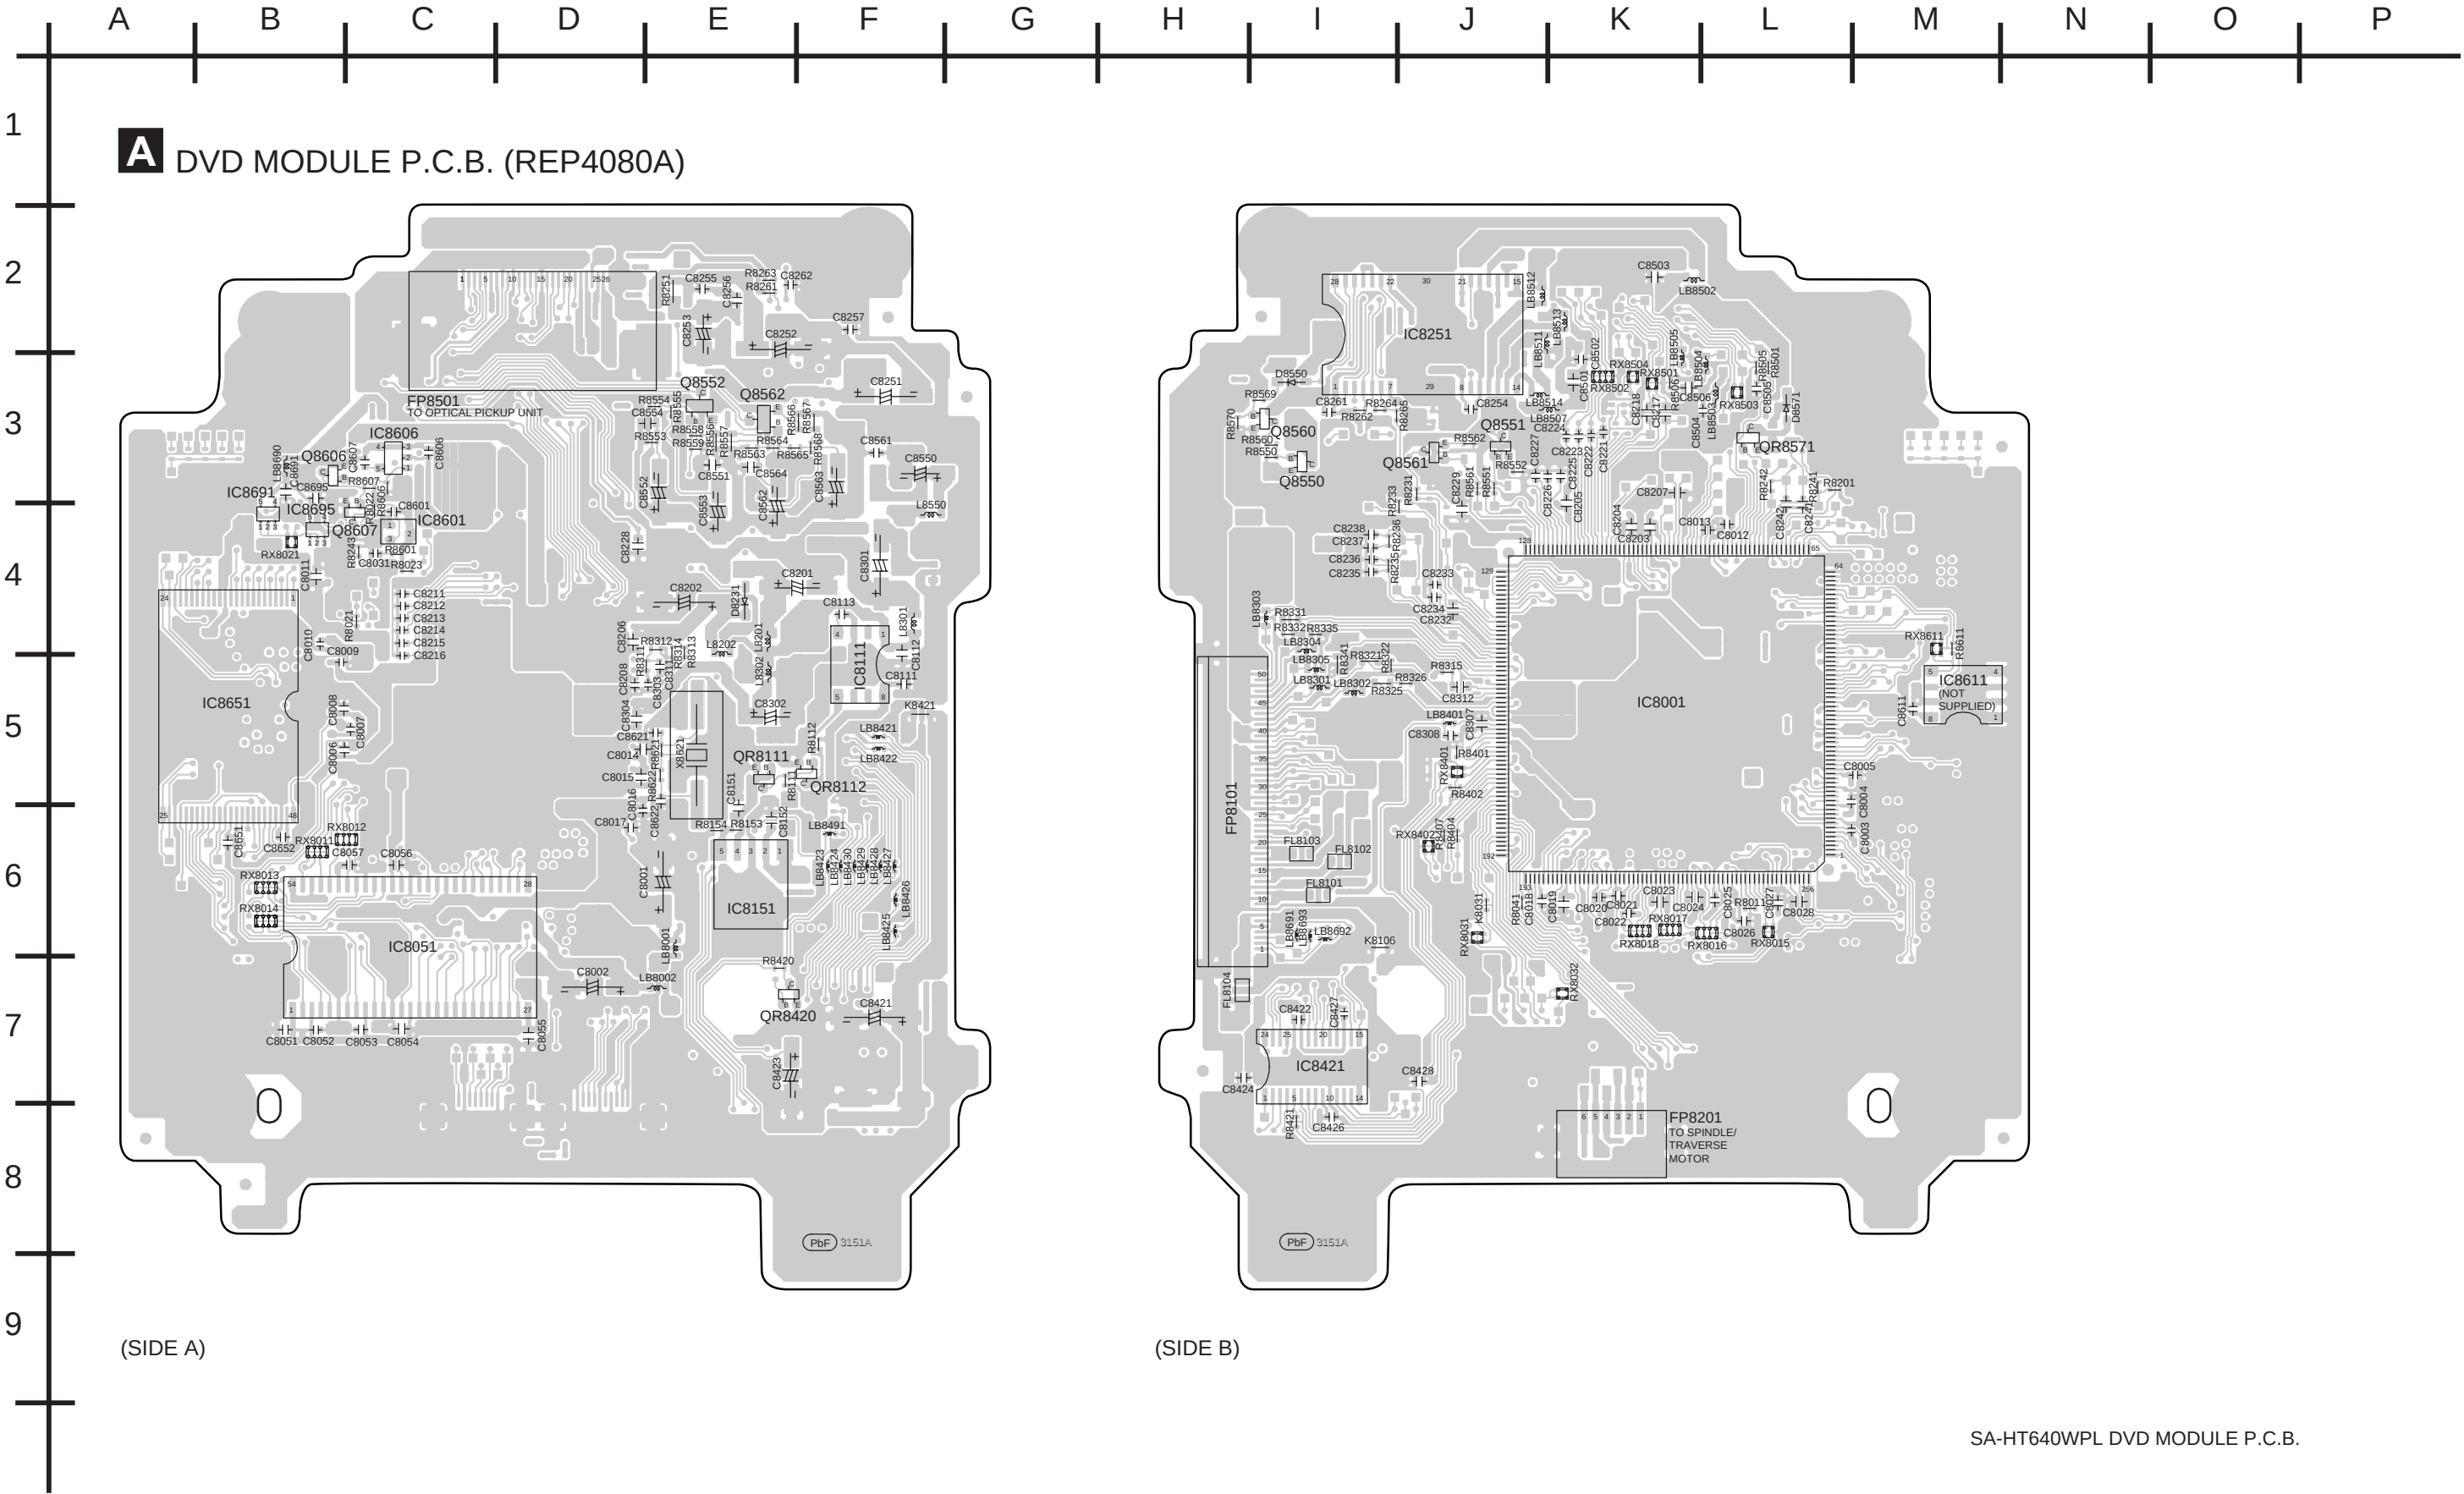




5.3. Power P.C.B.

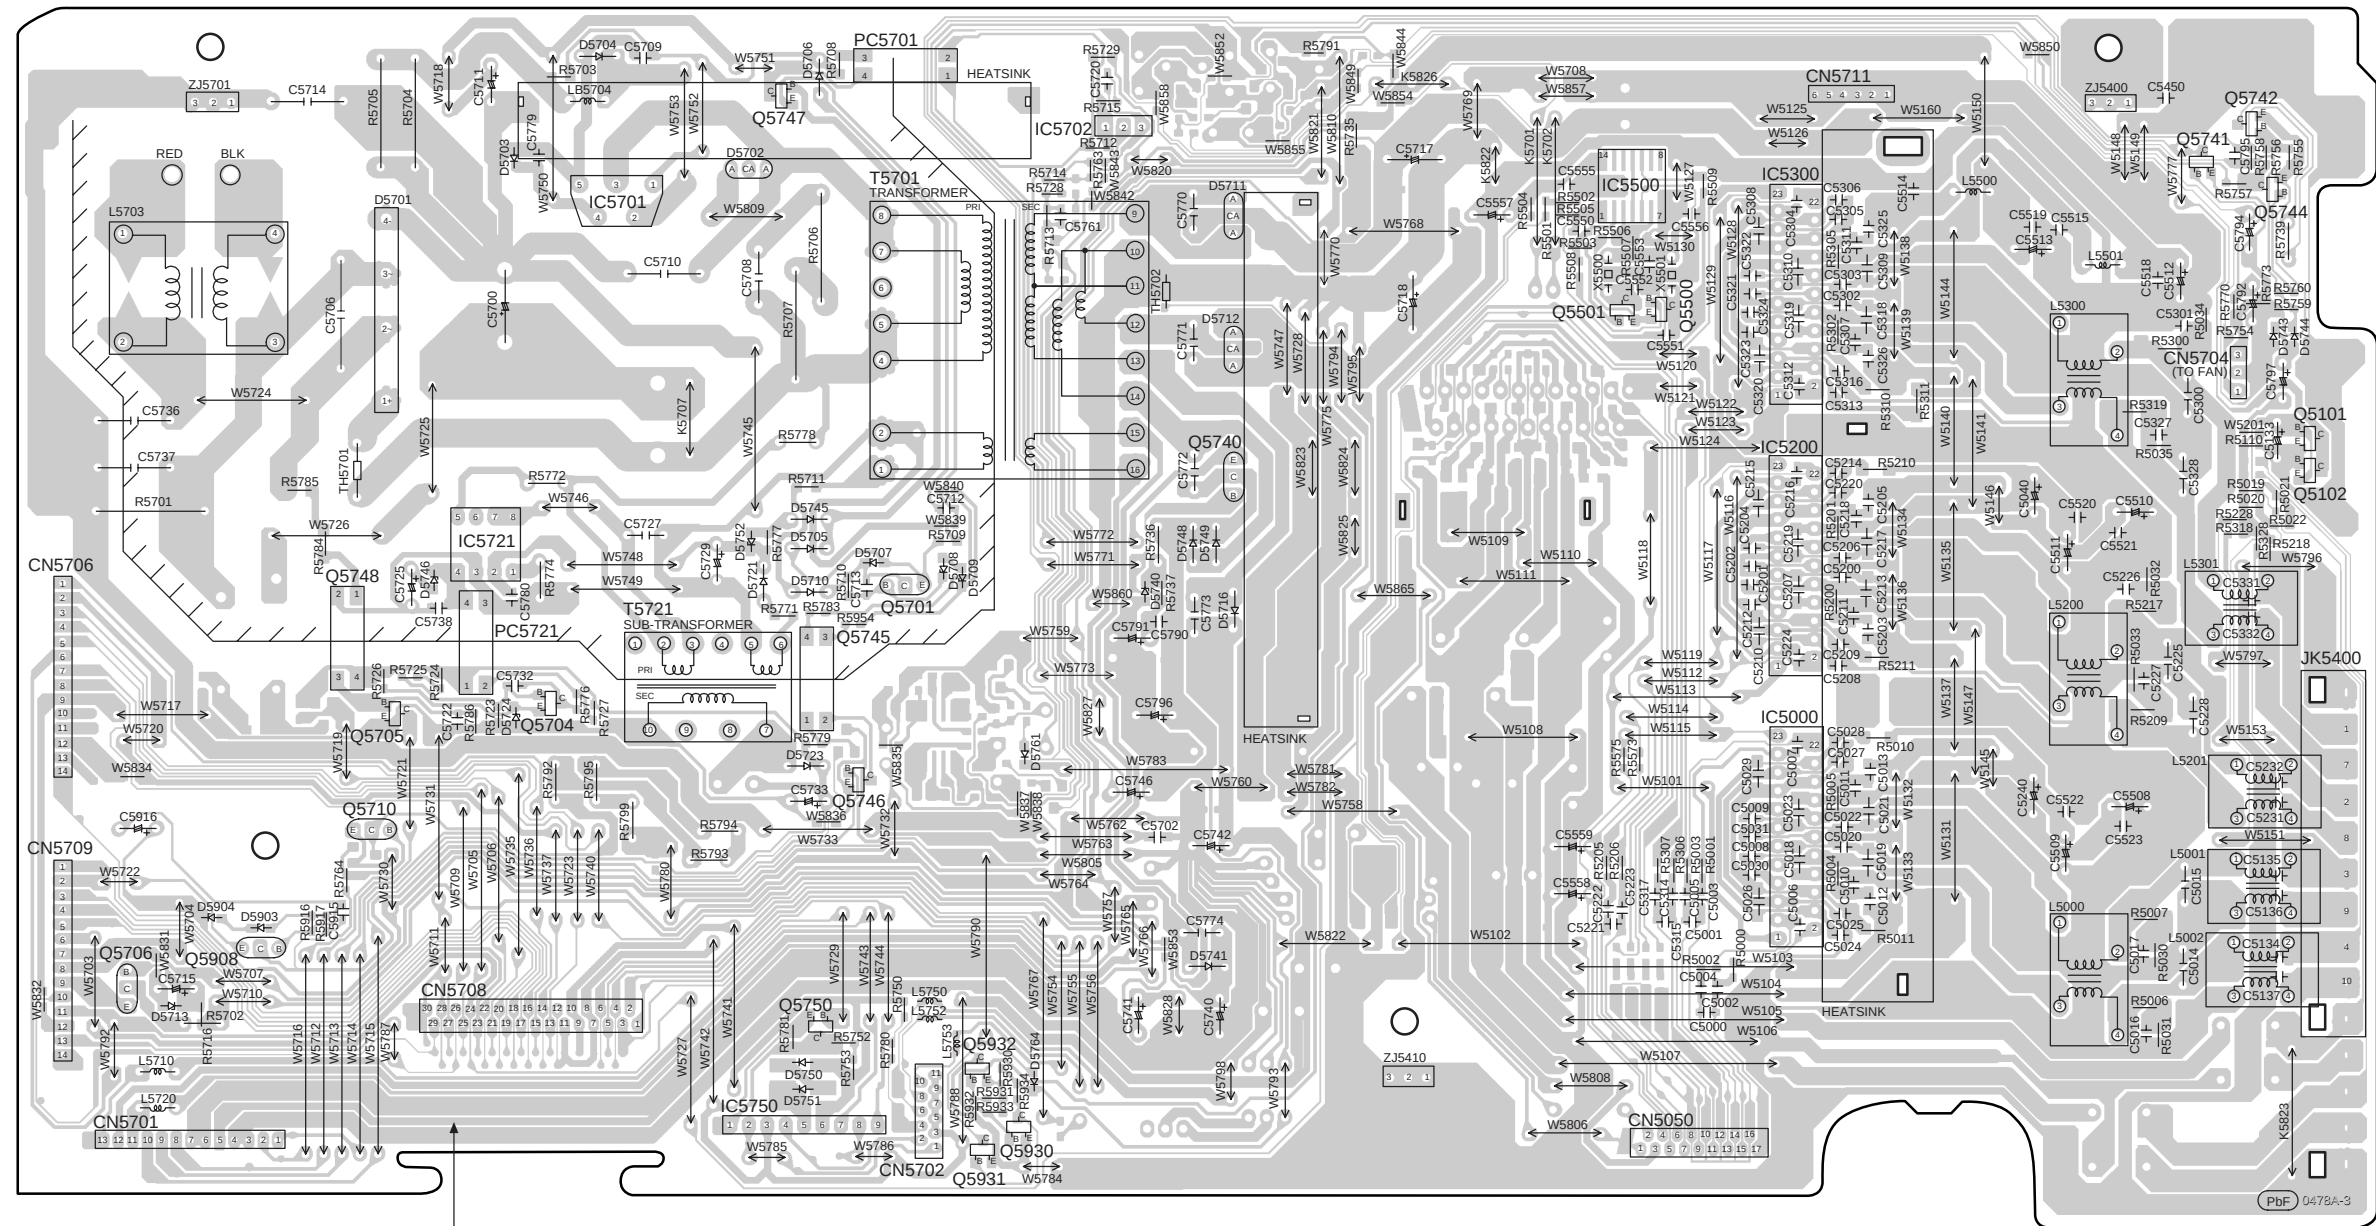C POWER P.C.B. (REPX0515A)


- SUBWOOFER
- CENTER SPEAKER
- FRONT SPEAKERS R
- FRONT SPEAKERS L



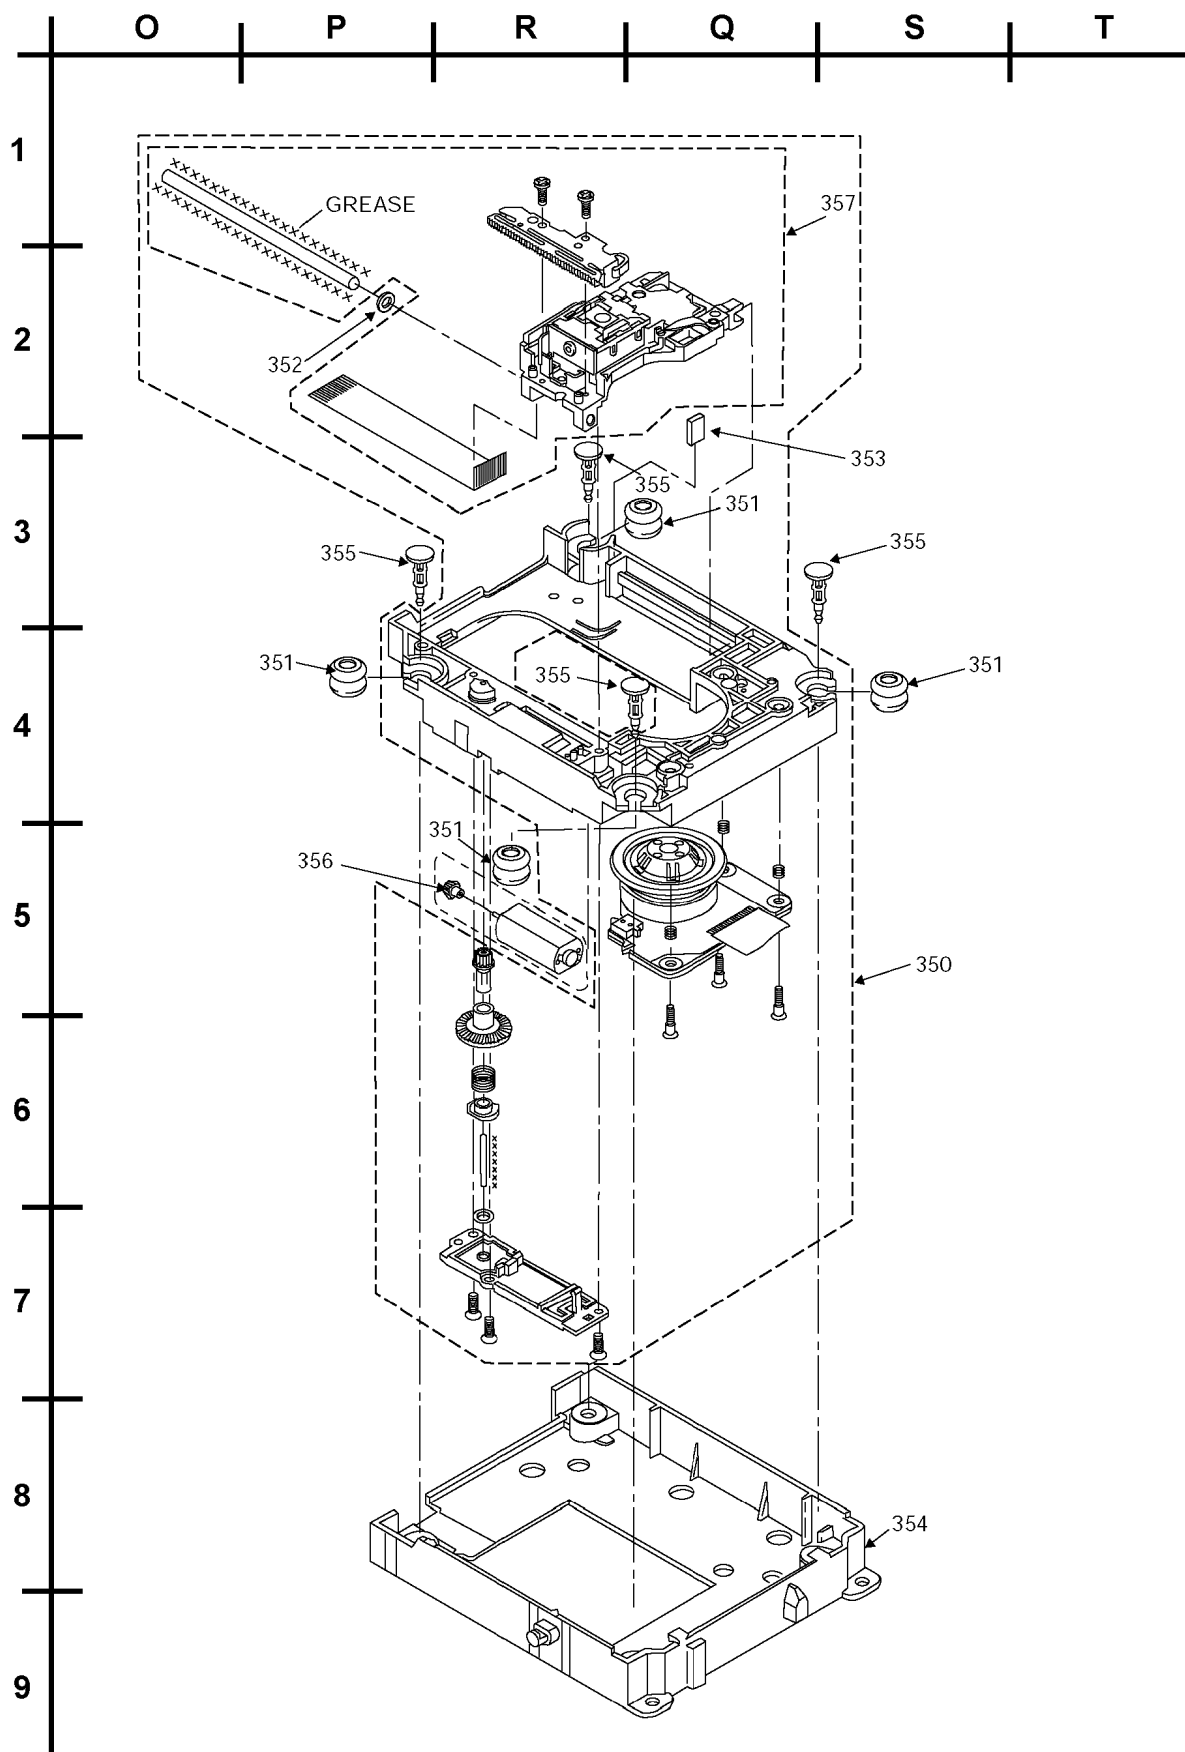

SA-HT640WPL
TRAVERSE MECHANISM DRAWINGS

6.2. Packaging

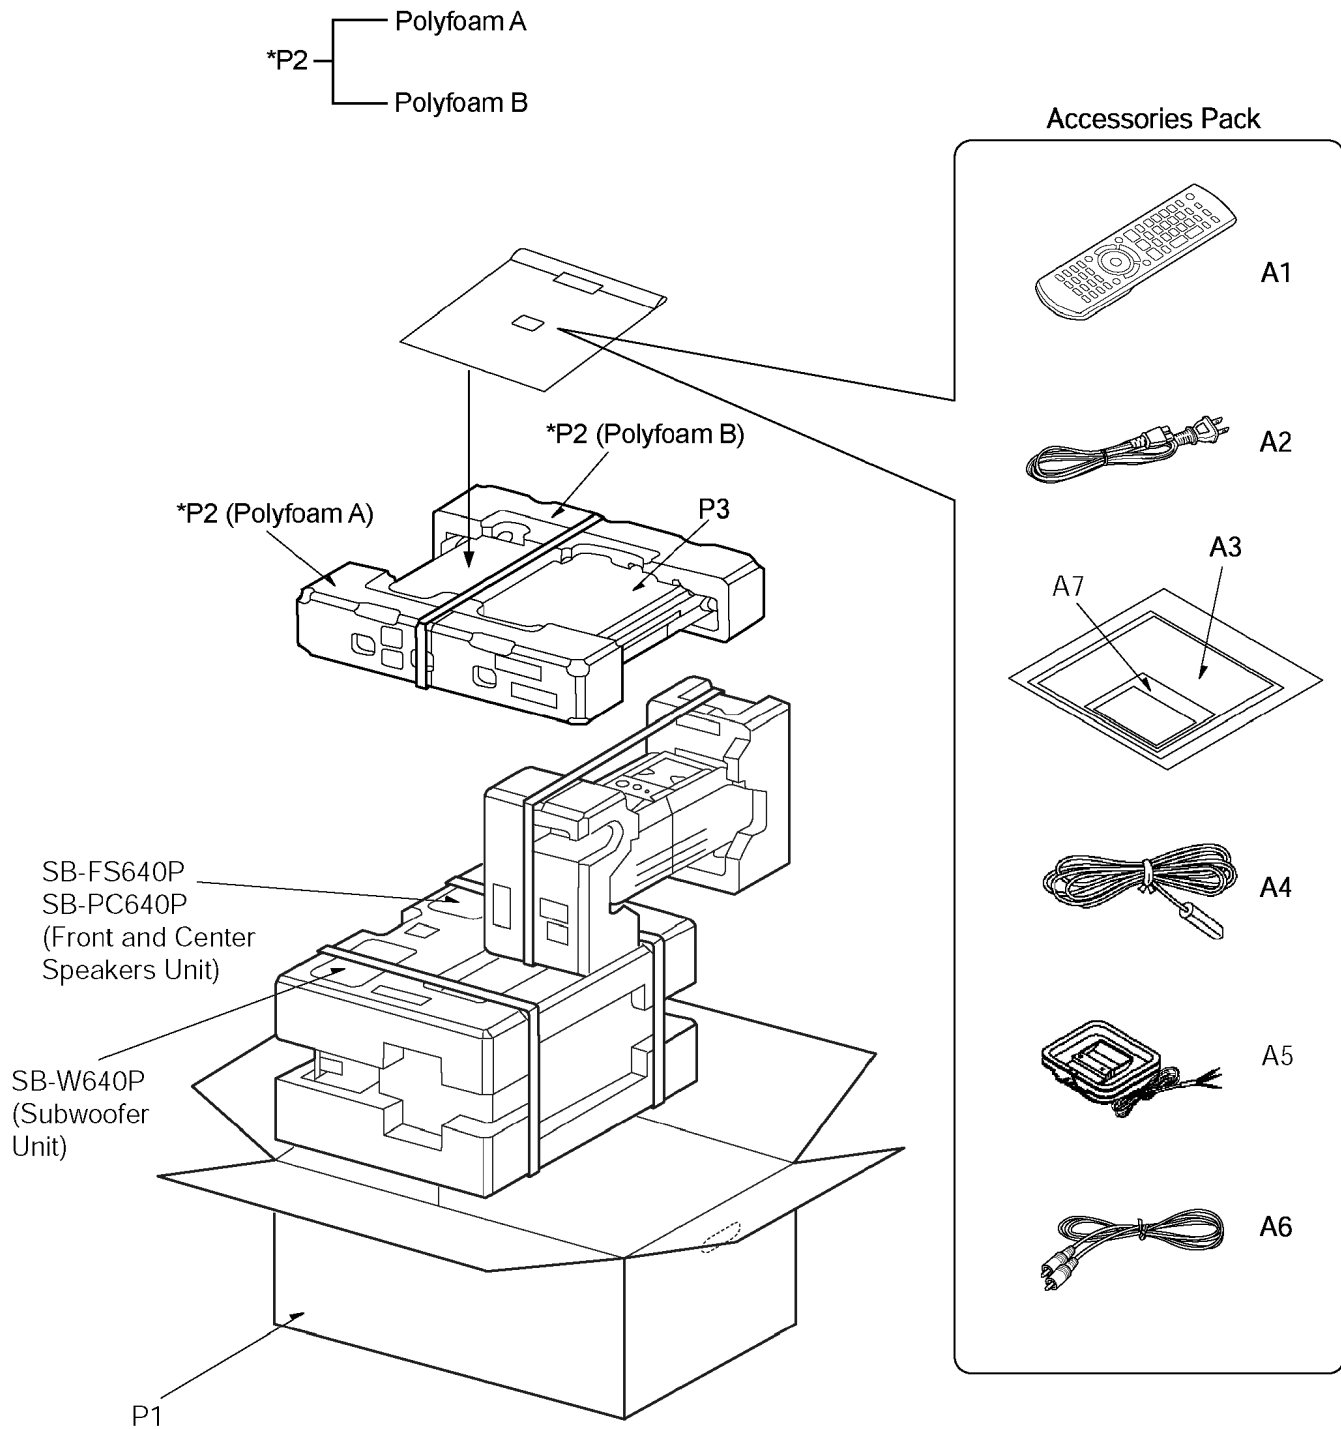

7 Replacement Parts List (Revise)

Notes:

*Important safety notice:

Components identified by $\triangle$ mark have special characteristics important for safety purpose.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

*Warning: This product uses a laser diode. Refer to caution statements.

*Capacity values are in microfarads (μ F) unless specified otherwise, P=Pico-farads (pF), F=Farads (F).

*Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000K (OHM).

*The parenthesized indications in the Remarks columns specify the model names and areas. (Refer to the cover page)

*The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.

*Reference for O/I book languages are as follows:

[Sp: Spanish]

*[M] indicates in the Remarks columns indicates parts supplied by PAVCSG.

*[SPG] indicates in the Remarks columns indicates parts supplied by SPG [PAVC].

7.1. Component Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	J3CCBB000007	TUNER PACK	[M]
2	L6FAYYYH0001	FAN UNIT	[M]
3	REEX0518-2	50P FFC WIRE	[M]
4	REEX0520	30P FFC WIRE	[M]
5	REEX0521-1	19P FFC WIRE	[M]
6	REEX0524	11P FFC WIRE	[M]
7	REEX0526	9P FFC WIRE	[M]
9	REEX0523	17P FFC WIRE	[M]
10	REXX0499-1	13P FLAT WIRE	[M]
11	REXX0500	PRIMARY WIRE	[M]
12	REXX0512-1	PRIMARY WIRE	[M]
14	RGQX0027-1	TOP FFC COVER	[M]
15	RGRX0056B-CA	REAR PANEL	[M]
16	RGWX0084-S	VOLUME KNOB	[M]
17	RHD26046	SCREW	[M]
18	RHD30007-1SJ	SCREW	[M]
19	RHD30070	EARTH TERMINAL	[M]
20	RHD30107-1	SCREW	[M]
21	RHD30111-3	SCREW	[M]
22	RHD30119-S	SCREW	[M]
23	RKA0059-K	LEG RUBBER	[M]
24	RKAX0030-K	CUSHION FELT	[M]
25	RKMX0118A-S1	TOP CABINET	[M]
26	RKWX0256-Q	FL WINDOW	[M]
27	RMAX0090	MECHA/P BRACKET	[M]
28	RMKX0115A-3	BOTTOM CHASSIS	[M]
29	RMN0730-1	TRAY GUIDE L	[M]
30	RMN0731-1	TRAY GUIDE R	[M]
31	RMNX0166	MECHA HOLDER A	[M]
32	RMNX0171	MECHA HOLDER B	[M]
33	RMQX0153-H	FAN BRACKET	[M]
34	RMX0274	TRAY SUPPORT R	[M]
35	RMX0275	TRAY SUPPORT L	[M]
36	RXXX0084	HEATSINK UNIT	[M]
37	RXXX0068-1	HEATSINK D	[M]
38	RXXX0069	HEATSINK	[M]
39	RYPX0113-X	TRANSMITTER CHASSIS	[M]
40	RYQX0231D-S2	TRAY LID ASSY	[M]
41	XTB3+10JFJ	SCREW	[M]
43	RGLX0130-Q	SURROUND LIGHT CHIP	[M]
44	RMCX0035	HEAT SINK CLIP	[M]
45	RMX0290	PLASTIC SHEET	[M]
46	RMZX0026-1	IC INSULATOR A	[M]
47	K1NA11B00004	WIRELESS CONNECTOR	[M]
50	RMNX0149	FL HOLDER	[M]
51	RGPX0210A-S4	FRONT PANEL	[M]
52	RGUX0647-S	POWER BUTTON	[M]
53	RGUX0648-S	OPEN/CLOSE BUTTON	[M]
54	RGUX0649-S	PLAY BUTTON	[M]
55	RGUX0650-S	5 DISC BUTTON	[M]
56	RGUX0667-S	SURROUND BUTTON	[M]
57	RMQX0175-2	FAN BRACKET	[M]
60	RMNX0191	PC SHEET COVER	[M]
61	RMNX0194	AC PCB COVER	[M]
64	RXQX0034	SHIELD PLATE UNIT B	[M]
		TRAVERSE DECK	
301	RDG0567	PULSE GEAR	[M]
302	RDG0568	OPEN LOCK GEAR	[M]
303	RDG0569-1	CLOSE LOCK GEAR	[M]
304	RDV0073	TRAY BELT	[M]
305	REZ1734	FFC WIRE	[M]
306	RGQ0446-K	TRAY BASE	[M]
307	RGQ0359-K1	ROTARY TRAY	[M]
308	RMM0254-2	SLIDE PLATE R	[M]
309	RMB0842	TRAY SPRING	[M]
310	RME0384	CLOSE LOCK GEAR SPRING	[M]
311	RMF0324-1	BLOCK SHEET	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
312	RMM0255	SLIDE PLATE L	[M]
313	XTB3+10JFJ	SCREW	[M]
314	XTN26+8GFJ	SCREW	[M]
315	XTWS3+10SFJ	SCREW	[M]
316	RHM0003-J	MAGNET	[M]
317	RDG0562	PULLEY GEAR	[M]
318	RDG0563-1	REALAY GEAR A	[M]
319	RDG0564	RELAY GEAR B	[M]
320	RDG0565	DRIVE GEAR A	[M]
321	RDG0566	DRIVE GEAR B	[M]
322	RDG0570	CAM GEAR	[M]
323	RDV0072	LOADING BELT	[M]
324	RMC0387	SUPPORT SPRING	[M]
325	RMG0615-K	CUSHION SHEET	[M]
326	RMG0620-K	CUSHION RUBBER	[M]
327	RMK0555-1	MECHA BASE	[M]
328	RML0646	CHANGE LEVER	[M]
329	REM0112	LOADING MOTOR ASS'Y	[M]
330	RMR1446-X	CLAMPER	[M]
331	RMR1447-X	MAGNET HOLDER	[M]
332	RMR1507-X	SUPPORT PIECE	[M]
333	RMS0802-2J	DRIVE SHAFT	[M]
334	XTN26+14JFJK	SUPPORT PIECE SCREW	[M]
335	XTV2+6GFJ	PCB SCREW	[M]
336	XWG6FFJ	WASHER	[M]
337	RMM0256-2	BLOCK BASE	[M]
338	RMS0123-1	FIXED PIN B	[M]
339	RMF0182	TRAY FELT	[M]
340	XTB3+16JFJ	SCREW	[M]
350	RAE2018W-S	DT69U3 BLOCK	[M]
351	RMG0598-A	FLOATING RUBBER	[M]
352	RMG0617-H	CUSHION RUBBER A	[M]
353	RMG0618-H	CUSHION RUBBER B	[M]
354	RMR1596-X2	MIDDLE CHASSIS	[M]
355	RMS0789	FIXED PIN	[M]
356	RXQ0946	TRAVERSE MOTOR ASS'Y	[M]
357	RXQ1389	DVD OPU SUB ASS'Y	[M]
		PRINTED CIRCUIT BOARDS	
	REP4080A	DVD MODULE P.C.B.	[M] (RTL)
	REPX0509B	MAIN P.C.B.	[M] (RTL)
	REPX0515A	POWER P.C.B.	[M] (RTL)
	REPX0515A	SUB POWER P.C.B.	[M] (RTL)
	REPX0515A	AC-INLET P.C.B.	[M] (RTL)
	REPX0515A	FL P.C.B.	[M] (RTL)
	REPX0515A	HEADPHONE P.C.B.	[M] (RTL)
	REP3465B	LOADING MOTOR P.C.B.	[M] (RTL)
	REP3466B	TRAY MOTOR P.C.B.	[M] (RTL)
	REP3466B	SENSOR MOTOR P.C.B.	[M] (RTL)
		INTEGRATED CIRCUITS	
IC2001	MN101C49GHG	IC SYSTEM CONTROL	[M]
IC2003	C0GAG0000007	IC MOTOR DRIVE (LOADING)	[M]
IC2102	C1AB00002463	IC ASP	[M]
IC2103	C0AAB0000125	IC HEADPHONE AMP	[M]
IC2105	C0ABC0000088	IC MUSIC PORT AMP	[M]
IC2801	C9ZB00000461	IC VIDEO BUFFER	[M]
IC2901	C0DAZYY00001	IC +9V REGULATOR	[M]
IC2902	C0DAZYY00001	IC +9V REGULATOR	[M]
IC2903	C0DAAMH00012	IC SWITCHING REGULATOR	[M]
IC2904	C0CAADE00007	IC +5V REGULATOR	[M]
IC2906	C0JBAR000326	IC MUSIC PORT SELECTOR	[M]
IC2907	C0CBADG00023	IC +5V REGULATOR (DVD)	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
IC2908	C0CBADG00023	IC +5V REGULATOR (DVD)	[M]
IC5000	C1AA00000755	IC AUDIO DIGITAL POWER AMP	[M]
IC5200	C1AA00000755	IC AUDIO DIGITAL POWER AMP	[M]
IC5300	C1AA00000755	IC AUDIO DIGITAL POWER AMP	[M]
IC5500	C0JBAB000011	IC INVERTER (CLOCK GENERATOR)	[M]
IC5701	STR-F6628	IC SW REGULATOR	[M]
IC5702	C0DABFC00002	IC SHUNT REGULATOR	[M]
IC5721	C0DABYY00002	IC SW REGULATOR	[M]
IC5750	C0GAG0000007	IC MOTOR DRIVE (TRAY)	[M]
IC6901	C0HBB0000057	IC DISPLAY DRIVER	[M]
IC8001	MN2DS0003APH	IC D2.1 LSI	[M]
IC8051	C3ABPG000133	IC 64M SDRAM	[M]
IC8111	C0CBCBD00018	IC +3.3V DC-DC CONVERTER	[M]
IC8151	C0DBEHG00006	IC +1.2V REGULATOR	[M]
IC8251	C0GBG0000048	IC SPINDLE MOTOR DRIVE	[M]
IC8421	C0FBBK000050	IC 24 BIT AUDIO DIGITAL TO ANALOG CONVERTER	[M]
IC8601	C0EBE0000384	IC RESET	[M]
IC8606	C0EBA0000031	IC RESET	[M]
IC8651	RFKWMH82H160	IC 16M FLASH ROM	[SPG]
IC8691	C0JBAA0000346	IC AND GATE	[M]
IC8695	C0JBAA0000346	IC AND GATE	[M]
		TRANSISTORS	
Q2001	B1GBCFJJ0051	TRANSISTOR	[M]
Q2003	B1GBCFLL0037	TRANSISTOR	[M]
Q2006	B1GBCFJN0033	TRANSISTOR	[M]
Q2098	B1GBCFJN0033	TRANSISTOR	[M]
Q2101	B1GFGCAA0001	TRANSISTOR	[M]
Q2201	B1GDCFGA0018	TRANSISTOR	[M]
Q2307	B1GFGCAA0001	TRANSISTOR	[M]
Q2308	B1GFGCAA0001	TRANSISTOR	[M]
Q2309	B1GBCFJN0033	TRANSISTOR	[M]
Q2310	B1GDCFGA0018	TRANSISTOR	[M]
Q2901	B1ABCF000176	TRANSISTOR	[M]
Q2903	B1BACD000018	TRANSISTOR	[M]
Q2904	B1AAKD000012	TRANSISTOR	[M]
Q2906	B1BCCD000019	TRANSISTOR	[M]
Q2907	B1ADCF000001	TRANSISTOR	[M]
Q2909	B1GBCFJN0033	TRANSISTOR	[M]
Q2911	B1ABCF000176	TRANSISTOR	[M]
Q2912	B1ABCF000176	TRANSISTOR	[M]
Q2913	B1ABCF000176	TRANSISTOR	[M]
Q2914	B1ADCF000001	TRANSISTOR	[M]
Q2935	B1BACD000018	TRANSISTOR	[M]
Q2936	B1GBCFJN0033	TRANSISTOR	[M]
Q5101	B1ABCF000176	TRANSISTOR	[M]
Q5102	B1ABCF000176	TRANSISTOR	[M]
Q5500	B1ADCE000012	TRANSISTOR	[M]
Q5501	B1ABCF000176	TRANSISTOR	[M]
Q5701	2SC3940ARA	TRANSISTOR	[M]
Q5704	B1ABCF000176	TRANSISTOR	[M]
Q5705	B1ABCF000176	TRANSISTOR	[M]
Q5706	B1BACD000018	TRANSISTOR	[M]
Q5710	2SC3940ARA	TRANSISTOR	[M]
Q5740	B1BACG000048	TRANSISTOR	[M]
Q5741	B1ABCF000011	TRANSISTOR	[M]
Q5742	B1ABCF000011	TRANSISTOR	[M]
Q5744	B1ABCF000011	TRANSISTOR	[M]
Q5745	B3PBA0000402	TRANSISTOR	[M] △
Q5746	B1GBCFJN0033	TRANSISTOR	[M]
Q5747	B1GDCFJJ0047	TRANSISTOR	[M]
Q5748	B3PBA0000402	TRANSISTOR	[M] △
Q5750	B1GBCFJJ0051	TRANSISTOR	[M]
Q5908	B1ACKD000005	TRANSISTOR	[M]
Q5930	B1ABCF000011	TRANSISTOR	[M]
Q5931	B1ABCF000011	TRANSISTOR	[M]
Q5932	B1ADCF000001	TRANSISTOR	[M]
Q6901	B1GBCFJN0033	TRANSISTOR	[M]
Q8550	2SB1219AHL	TRANSISTOR	[M]
Q8551	2SD1819A0L	TRANSISTOR	[M]
Q8552	2SB09700RL	TRANSISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
Q8560	2SD1819A0L	TRANSISTOR	[M]
Q8561	2SD1819A0L	TRANSISTOR	[M]
Q8562	2SB09700RL	TRANSISTOR	[M]
Q8606	2SD1819A0L	TRANSISTOR	[M]
Q8607	2SD1819A0L	TRANSISTOR	[M]
Q9001	B3NAA0000098	CAM SENSOR	[M]
Q9101	B3NAA0000082	POSITION SENSOR	[M]
Q9102	B3NAA0000102	PHOTO INTERRUPTOR	[M]
Q9103	B3NAB0000027	PHOTO REFLECTOR	[M]
QR8111	UNR521400L	CHIP TRANSISTOR	[M]
QR8112	UNR521400L	CHIP TRANSISTOR	[M]
QR8420	UNR521100L	CHIP TRANSISTOR	[M]
QR8571	UNR511V00L	CHIP TRANSISTOR	[M]
PC5701	B3PBA0000402	IC PHOTO COUPLER	[M] △
PC5721	B3PBA0000402	IC PHOTO COUPLER	[M] △
		DIODES	
D2001	B0ECKM000016	DIODE	[M]
D2002	B0ECKM000016	DIODE	[M]
D2005	B0ACCK000005	DIODE	[M]
D2007	B0ACCK000005	DIODE	[M]
D2008	B0ACCK000005	DIODE	[M]
D2605	B0ACCK000005	DIODE	[M]
D2608	B0ACCK000005	DIODE	[M]
D2902	B0BC7R500001	DIODE	[M]
D2904	B0JCPD000025	DIODE	[M]
D2906	B0ADCJ000020	DIODE	[M]
D2907	B0ADCJ000020	DIODE	[M]
D2912	B0BC3R700004	DIODE	[M]
D2915	B0BC5R600003	DIODE	[M]
D2934	B0ACCK000005	DIODE	[M]
D2935	B0ACCK000005	DIODE	[M]
D2936	B0ACCK000005	DIODE	[M]
D2950	B0BC7R500001	DIODE	[M]
D2951	B0ADCJ000020	DIODE	[M]
D2952	B0JCAE000001	DIODE	[M]
D5701	B0FBAR000018	DIODE	[M] △
D5702	B0ZAZ0000052	DIODE	[M]
D5703	B0BC02900004	DIODE	[M]
D5704	B0JAME000029	DIODE	[M]
D5705	B0EAMM000057	DIODE	[M]
D5706	B0EAMM000057	DIODE	[M]
D5707	B0BC035A0007	DIODE	[M]
D5708	B0BC01700015	DIODE	[M]
D5709	B0ACCK000005	DIODE	[M]
D5710	B0EAMM000057	DIODE	[M]
D5711	B0HBSM000043	DIODE	[M]
D5712	B0HBSM000043	DIODE	[M]
D5713	B0BC4R0A0006	DIODE	[M]
D5716	B0HFRJ000012	DIODE	[M]
D5721	B0EAMM000057	DIODE	[M]
D5723	B0EAMM000057	DIODE	[M]
D5724	B0BC3R700004	DIODE	[M]
D5740	B0BC01200019	DIODE	[M]
D5741	B0EAMM000057	DIODE	[M]
D5743	B0ACCK000005	DIODE	[M]
D5744	B0ACCK000005	DIODE	[M]
D5745	B0EAKM000117	DIODE	[M]
D5746	B0BC5R600003	DIODE	[M]
D5748	B0EAMM000057	DIODE	[M]
D5749	B0EAMM000057	DIODE	[M]
D5750	B0ECKM000016	DIODE	[M]
D5751	B0ECKM000016	DIODE	[M]
D5752	B0BC3R400001	DIODE	[M]
D5761	B0ACCK000005	DIODE	[M]
D5764	B0ACCK000005	DIODE	[M]
D5903	B0BC01200019	DIODE	[M]
D5904	B0BC01200019	DIODE	[M]
D6906	B3ABA0000397	DIODE	[M]
D6910	B0BC2R4A0006	DIODE	[M]
D8231	MA2J11100L	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D8550	MA2J11100L	DIODE	[M]
D8571	MA2J72800L	DIODE	[M]
DZ5701	ERZV10V511CS	ZENER	[M] △
		CHIP INDUCTORS	
LB5704	J0JKB0000020	EMI BEAD CORE	[M]
LB8001	J0JHC0000045	CHIP INDUCTOR	[M]
LB8002	J0JHC0000045	CHIP INDUCTOR	[M]
LB8301	J0JCC0000119	CHIP INDUCTOR	[M]
LB8302	J0JCC0000119	CHIP INDUCTOR	[M]
LB8303	J0JCC0000119	CHIP INDUCTOR	[M]
LB8304	J0JCC0000119	CHIP INDUCTOR	[M]
LB8305	J0JCC0000119	CHIP INDUCTOR	[M]
LB8401	ERJ2GEJ151X	CHIP RESISTOR	[M]
LB8421	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8422	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8423	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8424	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8425	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8426	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8427	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8428	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8429	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8430	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8491	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8502	J0JHC0000045	CHIP INDUCTOR	[M]
LB8503	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8504	J0JCC0000119	CHIP INDUCTOR	[M]
LB8505	J0JCC0000119	CHIP INDUCTOR	[M]
LB8507	J0JCC0000119	CHIP INDUCTOR	[M]
LB8511	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8512	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8513	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8514	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8690	J0JCC0000091	FILTER	[M]
LB8691	ERJ2GEJ101X	CHIP RESISTOR	[M]
LB8692	ERJ2GEJ101X	CHIP RESISTOR	[M]
LB8693	ERJ2GEJ101X	CHIP RESISTOR	[M]
		VARIABLE RESISTORS	
VR6800	EVEKE2F3024B	VR VOLUME JOG	[M]
		SWITCHES	
S6801	EVQ21405R	SW PLAY/MEMORY	[M]
S6802	EVQ21405R	SW REVERSE/TUNE DOWN	[M]
S6803	EVQ21405R	SW FORWARD/TUNE UP	[M]
S6804	EVQ21405R	SW STOP/TUNE MODE	[M]
S6805	EVQ21405R	SW DISC EXCHANGE	[M]
S6806	EVQ21405R	SW DISC SKIP	[M]
S6808	EVQ21405R	SW OPEN/CLOSE	[M]
S6900	EVQ21405R	SW POWER	[M]
S6901	EVQ21405R	SW SURROUND MUSIC	[M]
S6902	EVQ21405R	SW DISC 1	[M]
S6903	EVQ21405R	SW DISC 2	[M]
S6904	EVQ21405R	SW DISC 3	[M]
S6905	EVQ21405R	SW DISC 4	[M]
S6906	EVQ21405R	SW DISC 5	[M]
S6907	EVQ21405R	SW SELECTOR	[M]
S9001	K0L1BA000086	LOAD SWITCH	[M]
		CONNECTORS	
CN2001	K1MY50AA0029	50P CONNECTOR	[M]
CN2002	K1KA10AA0031	10P CONNECTOR	[M]
CN2003	K1MP11AA0004	11P CONNECTOR	[M]
CN2005	K1MN11AA0003	11P CONNECTOR	[M]
CN2007	K1MN30BA0005	30P CONNECTOR	[M]
CN2011	K1MN17BA0005	17P CONNECTOR	[M]
CN2013	K1KA03AA0193	17P CONNECTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
CN5050	K1MN17BA0005	17P CONNECTOR	[M]
CN5701	K1KA13BA0062	13P CONNECTOR	[M]
CN5702	K1MN11AA0003	11P CONNECTOR	[M]
CN5704	K1KA03AA0301	3P CONNECTOR	[M]
CN5705	K1MN09B00038	9P CONNECTOR	[M]
CN5706	K1KA14AA0031	14P CONNECTOR	[M]
CN5707	K1MN19B00072	19P CONNECTOR	[M]
CN5708	K1MN30AA0004	30P CONNECTOR	[M]
CN5709	K1KA14AA0031	14P CONNECTOR	[M]
CN5710	K1KB06B00038	6P CONNECTOR	[M]
CN5711	K1KA06AA0031	6P CONNECTOR	[M]
CN5712	K1KB14B00026	14P CONNECTOR	[M]
CN5713	K1KB14B00026	14P CONNECTOR	[M]
CN6901	K1MN09B00038	9P CONNECTOR	[M]
CN6902	K1MN19AA0004	19P CONNECTOR	[M]
CN9003	K1MY11BA0021	11P CONNECTOR	[M]
CN9102	K1MY11BA0021	11P CONNECTOR	[M]
FC9101	RWJ4906082SS	6P FLAT CABLE	[M]
FP8101	K1MN50BA0173	50P CONNECTOR	[M]
FP8201	K1MN06BA0148	6P CONNECTOR	[M]
FP8501	K1MY26BA0025	6P CONNECTOR	[M]
		THERMISTOR	
TH5701	D4CAA2R20001	THERMISTOR	[M] △
TH5702	D4CC11040013	THERMISTOR	[M] △
		COILS & TRANSFORMERS	
L2001	J0JBC0000015	CHIP INDUCTOR	[M]
L2002	J0JBC0000015	CHIP INDUCTOR	[M]
L2003	J0JBC0000015	CHIP INDUCTOR	[M]
L2008	G0C3R3JA0027	COIL	[M]
L2009	G0C220JA0055	COIL	[M]
L2101	J0JBC0000015	CHIP INDUCTOR	[M]
L2201	J0JBC0000015	CHIP INDUCTOR	[M]
L2802	J0JBC0000015	CHIP INDUCTOR	[M]
L2803	J0JBC0000015	CHIP INDUCTOR	[M]
L2804	J0JBC0000015	CHIP INDUCTOR	[M]
L2805	J0JBC0000015	CHIP INDUCTOR	[M]
L2806	J0JBC0000015	CHIP INDUCTOR	[M]
L2807	J0JBC0000015	CHIP INDUCTOR	[M]
L2902	G0A101ZA0028	COIL	[M]
L2903	G0A200D00002	COIL	[M]
L2905	G0A200D00002	COIL	[M]
L2906	G0A200D00002	COIL	[M]
L2908	G0A200D00002	COIL	[M]
L2909	G0A200D00002	COIL	[M]
L2910	G0A200D00002	COIL	[M]
L2912	G0A200D00002	COIL	[M]
L5000	ETQA15A150T	COIL	[M]
L5001	G0B9R5K00001	COIL	[M]
L5002	G0B9R5K00001	COIL	[M]
L5200	ETQA15A150T	COIL	[M]
L5201	G0B9R5K00001	COIL	[M]
L5300	ETQA15A150T	COIL	[M]
L5301	G0B9R5K00001	COIL	[M]
L5500	J0JKB0000020	EMI BEAD CORE	[M]
L5501	J0JKB0000020	EMI BEAD CORE	[M]
L5701	ELF15N035AN	LINE FILTER	[M] △
L5703	ELF22V035B	COIL	[M] △
L5710	J0JKB0000020	EMI BEAD CORE	[M]
L5720	J0JKB0000020	EMI BEAD CORE	[M]
L5750	J0JBC0000015	CHIP INDUCTOR	[M]
L5752	J0JBC0000015	CHIP INDUCTOR	[M]
L5753	J0JBC0000015	CHIP INDUCTOR	[M]
L6101	J0JBC0000019	CHIP INDUCTOR	[M]
L6102	G0C330KA0065	COIL	[M]
L6201	J0JBC0000019	CHIP INDUCTOR	[M]
L6202	G0C330KA0065	COIL	[M]
L6801	J0JBC0000019	CHIP INDUCTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
L6903	J0JBC0000041	CHIP INDUCTOR	[M]
L6904	J0JBC0000019	CHIP INDUCTOR	[M]
L6905	J0JBC0000019	CHIP INDUCTOR	[M]
L8201	G1C100K00020	CHIP INDUCTOR	[M]
L8202	J0JCC0000079	FILTER	[M]
L8301	G1C100KA0055	CHIP INDUCTOR	[M]
L8302	J0JCC0000079	FILTER	[M]
L8550	G1C100KA0055	CHIP INDUCTOR	[M]
T5701	ETS42BJ1G4AC	TRANSFORMER	[M] △
T5721	ETS19AB1Z6AG	TRANSFORMER	[M] △
		COMPONENT COMBINATION	
Z6900	B3MAZ0000023	REMOTE CONTROL SENSOR	[M]
		FUSE HOLDERS	
ZA5701	EYF52BCY	FUSE HOLDER	[M]
ZA5702	EYF52BCY	FUSE HOLDER	[M]
		TERMINALS	
ZJ5400	K4CZ01000027	TERMINAL	[M]
ZJ5410	K4CZ01000027	TERMINAL	[M]
ZJ5701	K9ZZ00001279	TERMINAL	[M]
		OSCILLATORS	
X2001	H2D800400009	CRYSTAL	[M]
X5500	H2A375300003	CERAMIC RESISTOR	[M]
X5501	H2A415300001	CERAMIC RESISTOR	[M]
X8621	H0J270500085	CERAMIC RESISTOR	[M]
		DISPLAY TUBE	
FL6901	A2BD00000160	FL DISPLAY	[M]
FL8101	F1H0J1050022	INDUCTOR	[M]
FL8102	F1H0J1050022	INDUCTOR	[M]
FL8103	F1H0J1050022	INDUCTOR	[M]
FL8104	F1J1E1040022	INDUCTOR	[M]
		FUSE	
F1	K5D632APA008	FUSE	[M] △
		FUSE PROTECTOR	
FP2000	K5G202AA0002	FUSE PROTECTOR	[M] △
		HOLDER	
H2010	K1YZ13000001	13P WIRE HOLDER	[M]
H6901	REXX0518	3P MUSIC PORT WIRE HOLDER	[M]
		JACKS	
JK2001	K1U717B00004	JK COMBO	[M]
JK5400	K4AC08B00008	JK 8 SPEAKER	[M]
JK6801	K2HC103A0024	JACK	[M]
JK6802	K2HC1YYA0005	JACK	[M]
P5701	K2AB2B000010	JK AC	[M] △
		PACKING MATERIALS	
P1	RPF0067-1	POLY BAG	[M]
P1	RPGX1552-1	PACKING CASE	[M]
P2	RPNX0366-1	POLYFOAM	[M]
P3	RPF0058-1J	MIRAMAT	[M]
		ACCESSORIES	

Ref. No.	Part No.	Part Name & Description	Remarks
A1	N2QAYZ000001	REMOTE CONTROL	[M]
A1-1	RKK-HTR0051K	R/C BATTERY COVER	[M]
A2	K2CB2CB00018	AC CORD	[M] △
A3	RQT8613-M	O/I BOOK (SP)	[M]
A4	RSA0007-L	FM ANTENNA	[M]
A5	N1DAAA000002	AM LOOP ANTENNA	[M]
A6	K2KA2BA00001	VIDEO CABLE	[M]
A7	RQCA0968	SPEAKER LABEL	[M]
		RESISTORS	
R2001	ERJ3GEYJ331V	330 1/16W	[M]
R2002	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2003	ERJ3GEYJ103V	10K 1/16W	[M]
R2004	ERJ3GEYJ331V	330 1/16W	[M]
R2005	ERJ3GEYJ331V	330 1/16W	[M]
R2006	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2012	ERJ3GEYJ101V	100 1/16W	[M]
R2013	ERJ3GEYJ101V	100 1/16W	[M]
R2014	ERJ3GEYJ221V	220 1/16W	[M]
R2015	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2016	ERJ3GEYJ473V	47K 1/16W	[M]
R2017	ERJ3GEYJ103V	10K 1/16W	[M]
R2018	ERJ3GEYJ103V	10K 1/16W	[M]
R2019	ERJ3GEYJ103V	10K 1/16W	[M]
R2020	ERJ3GEYJ103V	10K 1/16W	[M]
R2021	ERJ3GEYJ103V	10K 1/16W	[M]
R2022	ERJ3GEYJ821V	820 1/16W	[M]
R2023	ERJ3GEY0R00V	0 1/16W	[M]
R2024	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2025	ERJ3GEYJ221V	220 1/16W	[M]
R2026	ERJ3GEYJ221V	220 1/16W	[M]
R2027	ERJ3GEYJ101V	100 1/16W	[M]
R2029	ERJ3GEYJ101V	100 1/16W	[M]
R2030	ERJ3GEYJ101V	100 1/16W	[M]
R2031	ERJ3GEYJ101V	100 1/16W	[M]
R2032	ERJ3GEYJ101V	100 1/16W	[M]
R2033	ERJ3GEYJ102V	1K 1/16W	[M]
R2034	ERJ3GEYJ221V	220 1/16W	[M]
R2035	ERJ3GEYJ221V	220 1/16W	[M]
R2036	ERJ3GEYJ221V	220 1/16W	[M]
R2037	ERJ3GEYJ221V	220 1/16W	[M]
R2038	ERJ3GEYJ221V	220 1/16W	[M]
R2039	ERJ3GEYJ223V	22K 1/16W	[M]
R2040	ERJ3GEYJ223V	22K 1/16W	[M]
R2041	ERJ3GEYJ223V	22K 1/16W	[M]
R2042	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2043	ERJ3GEYJ104V	100K 1/16W	[M]
R2044	ERJ3GEYJ221V	220 1/16W	[M]
R2045	ERJ3GEYJ221V	220 1/16W	[M]
R2048	ERJ3GEY0R00V	0 1/16W	[M]
R2049	ERJ3GEY0R00V	0 1/16W	[M]
R2051	ERJ3GEYJ103V	10K 1/16W	[M]
R2052	ERJ3GEYJ221V	220 1/16W	[M]
R2053	ERJ3GEYJ221V	220 1/16W	[M]
R2054	ERJ3GEYJ221V	220 1/16W	[M]
R2055	ERJ3GEYJ221V	220 1/16W	[M]
R2057	ERJ3GEYJ221V	220 1/16W	[M]
R2058	ERJ3GEYJ221V	220 1/16W	[M]
R2059	ERJ3GEYJ221V	220 1/16W	[M]
R2060	ERJ3GEYJ221V	220 1/16W	[M]
R2061	ERJ3GEYJ473V	47K 1/16W	[M]
R2062	ERJ3GEYJ221V	220 1/16W	[M]
R2063	ERJ3GEYJ221V	220 1/16W	[M]
R2064	ERJ3GEYJ103V	10K 1/16W	[M]
R2065	ERJ3GEYJ103V	10K 1/16W	[M]
R2066	ERJ3GEYJ104V	100K 1/16W	[M]
R2067	ERJ3GEYJ473V	47K 1/16W	[M]
R2068	ERJ3GEYJ563V	56K 1/16W	[M]
R2069	ERJ3GEYJ473V	47K 1/16W	[M]
R2070	ERJ3GEYJ473V	47K 1/16W	[M]
R2071	ERJ3GEYJ563V	56K 1/16W	[M]
R2073	ERJ3GEYJ473V	47K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2077	ERJ3GEYJ221V	220 1/16W	[M]
R2078	ERJ3GEYJ221V	220 1/16W	[M]
R2079	ERJ3GEYJ221V	220 1/16W	[M]
R2080	ERJ3GEYJ221V	220 1/16W	[M]
R2081	ERJ3GEYJ221V	220 1/16W	[M]
R2082	ERJ3GEYJ221V	220 1/16W	[M]
R2084	ERJ3GEYJ473V	47K 1/16W	[M]
R2085	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2086	ERJ3GEYJ223V	22K 1/16W	[M]
R2087	ERJ3GEYJ223V	22K 1/16W	[M]
R2088	ERJ3GEYJ221V	220 1/16W	[M]
R2089	ERJ3GEYJ221V	220 1/16W	[M]
R2090	ERJ3GEYJ103V	10K 1/16W	[M]
R2101	ERJ3GEYJ123V	12K 1/16W	[M]
R2111	ERJ3GEYJ103V	10K 1/16W	[M]
R2112	ERJ3GEYJ223V	22K 1/16W	[M]
R2113	ERJ3GEY0R00V	0 1/16W	[M]
R2114	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2115	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2160	ERJ3GEYJ102V	1K 1/16W	[M]
R2161	ERJ3GEYJ473V	47K 1/16W	[M]
R2164	ERJ3GEYJ103V	10K 1/16W	[M]
R2165	ERJ3GEYJ103V	10K 1/16W	[M]
R2168	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2169	ERJ3GEYJ104V	100K 1/16W	[M]
R2170	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2171	ERJ3GEYJ273V	27K 1/16W	[M]
R2172	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2173	ERJ3GEYJ473V	47K 1/16W	[M]
R2175	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2176	ERJ3GEYJ563V	56K 1/16W	[M]
R2177	ERJ3GEYJ220V	22 1/16W	[M]
R2178	ERJ3GEYJ220V	22 1/16W	[M]
R2179	ERJ3GEYJ220V	22 1/16W	[M]
R2180	ERJ3GEYJ220V	22 1/16W	[M]
R2181	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2185	ERJ3GEYJ103V	10K 1/16W	[M]
R2188	ERJ3GEYJ183V	18K 1/16W	[M]
R2189	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2191	ERJ3GEYJ223V	22K 1/16W	[M]
R2193	ERJ3GEYJ560V	56 1/16W	[M]
R2194	ERJ3GEYJ223V	22K 1/16W	[M]
R2195	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2196	ERJ3GEYJ333V	33K 1/16W	[M]
R2197	ERJ3GEYJ683V	68K 1/16W	[M]
R2198	ERJ3GEY0R00V	0 1/16W	[M]
R2201	ERJ3GEYJ123V	12K 1/16W	[M]
R2211	ERJ3GEYJ103V	10K 1/16W	[M]
R2212	ERJ3GEYJ223V	22K 1/16W	[M]
R2214	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2215	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2218	ERJ3GEY0R00V	0 1/16W	[M]
R2260	ERJ3GEYJ102V	1K 1/16W	[M]
R2261	ERJ3GEYJ473V	47K 1/16W	[M]
R2264	ERJ3GEYJ103V	10K 1/16W	[M]
R2265	ERJ3GEYJ103V	10K 1/16W	[M]
R2268	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2269	ERJ3GEYJ104V	100K 1/16W	[M]
R2270	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2271	ERJ3GEYJ563V	56K 1/16W	[M]
R2273	ERJ3GEYJ473V	47K 1/16W	[M]
R2275	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2276	ERJ3GEYJ563V	56K 1/16W	[M]
R2277	ERJ3GEYJ220V	22 1/16W	[M]
R2278	ERJ3GEYJ220V	22 1/16W	[M]
R2279	ERJ3GEYJ220V	22 1/16W	[M]
R2280	ERJ3GEYJ220V	22 1/16W	[M]
R2281	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2285	ERJ3GEYJ103V	10K 1/16W	[M]
R2288	ERJ3GEYJ183V	18K 1/16W	[M]
R2289	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2291	ERJ3GEYJ223V	22K 1/16W	[M]
R2293	ERJ3GEYJ560V	56 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2294	ERJ3GEYJ223V	22K 1/16W	[M]
R2295	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2296	ERJ3GEYJ333V	33K 1/16W	[M]
R2297	ERJ3GEYJ683V	68K 1/16W	[M]
R2298	ERJ3GEY0R00V	0 1/16W	[M]
R2300	ERJ3GEYJ103V	10K 1/16W	[M]
R2301	ERJ3GEYJ473V	47K 1/16W	[M]
R2302	ERJ3GEYJ393V	39K 1/16W	[M]
R2303	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2304	ERJ3GEYJ123V	12K 1/16W	[M]
R2312	ERJ3GEYJ103V	10K 1/16W	[M]
R2336	ERJ3GEYJ103V	10K 1/16W	[M]
R2339	ERJ3GEYJ223V	22K 1/16W	[M]
R2343	ERJ3GEY0R00V	0 1/16W	[M]
R2344	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2400	ERJ3GEYJ103V	10K 1/16W	[M]
R2401	ERJ3GEYJ473V	47K 1/16W	[M]
R2402	ERJ3GEYJ393V	39K 1/16W	[M]
R2403	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2404	ERJ3GEYJ123V	12K 1/16W	[M]
R2412	ERJ3GEYJ103V	10K 1/16W	[M]
R2436	ERJ3GEYJ103V	10K 1/16W	[M]
R2439	ERJ3GEYJ223V	22K 1/16W	[M]
R2443	ERJ3GEY0R00V	0 1/16W	[M]
R2444	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2500	ERJ3GEYJ123V	12K 1/16W	[M]
R2501	ERJ3GEYJ273V	27K 1/16W	[M]
R2502	ERJ3GEYJ203V	20K 1/16W	[M]
R2503	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2510	ERJ3GEYJ123V	12K 1/16W	[M]
R2511	ERJ3GEYJ103V	10K 1/16W	[M]
R2512	ERJ3GEYJ103V	10K 1/16W	[M]
R2513	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2600	ERJ3GEYJ103V	10K 1/16W	[M]
R2601	ERJ3GEYJ153V	15K 1/16W	[M]
R2606	ERJ3GEYJ563V	56K 1/16W	[M]
R2607	ERJ3GEYJ103V	10K 1/16W	[M]
R2608	ERJ3GEYJ563V	56K 1/16W	[M]
R2609	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2610	ERJ3GEYJ683V	68K 1/16W	[M]
R2611	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2612	ERJ3GEYJ683V	68K 1/16W	[M]
R2617	ERJ3GEYJ153V	15K 1/16W	[M]
R2619	ERJ3GEYJ473V	47K 1/16W	[M]
R2620	ERJ3GEYJ563V	56K 1/16W	[M]
R2621	ERJ3GEYJ393V	39K 1/16W	[M]
R2626	ERJ3GEYJ683V	68K 1/16W	[M]
R2627	ERJ3GEYJ683V	68K 1/16W	[M]
R2628	ERJ3GEYJ103V	10K 1/16W	[M]
R2629	ERJ3GEYJ103V	10K 1/16W	[M]
R2630	ERJ3GEY0R00V	0 1/16W	[M]
R2631	ERJ3GEY0R00V	0 1/16W	[M]
R2635	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2640	ERJ3GEYJ471V	470 1/16W	[M]
R2641	ERJ3GEYJ471V	470 1/16W	[M]
R2809	ERJ3GEYJ750V	75 1/16W	[M]
R2812	ERJ3GEYJ750V	75 1/16W	[M]
R2813	ERJ3GEYJ750V	75 1/16W	[M]
R2816	ERJ3GEYJ750V	75 1/16W	[M]
R2817	ERJ3GEYJ750V	75 1/16W	[M]
R2818	ERJ3GEYJ750V	75 1/16W	[M]
R2819	ERJ3GEYJ102V	1K 1/16W	[M]
R2904	ERJ3GEYJ471V	470 1/16W	[M]
R2905	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2906	ERG2SJ471E	470 2W	[M]
R2907	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2908	ERJ3GEYJ561V	560 1/16W	[M]
R2913	ERG2SJ471E	470 2W	[M]
R2914	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2915	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2918	ERJ3GEYJ103V	10K 1/16W	[M]
R2919	ERJ3GEYJ102V	1K 1/16W	[M]
R2920	ERJ3GEYJ472V	4.7K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2921	ERJ3GEYJ471V	470 1/16W	[M]
R2922	ERJ3GEYJ393V	39K 1/16W	[M]
R2923	ERJ3GEYJ153V	15K 1/16W	[M]
R2925	ERX2SJ1R5E	1.5 2W	[M]
R2927	ERX2SJ1R5E	1.5 2W	[M]
R2930	ERJ3GEYJ333V	33K 1/16W	[M]
R2933	ERJ3GEYJ151V	150 1/16W	[M]
R2934	ERJ3GEYJ102V	1K 1/16W	[M]
R2935	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2936	ERJ3GEYJ181V	180 1/16W	[M]
R2937	ERG2SJ471E	470 2W	[M]
R2938	ERG2SJ471E	470 2W	[M]
R2939	ERJ3GEYJ393V	39K 1/16W	[M]
R2942	ERJ3GEY0R00V	0 1/16W	[M]
R2943	ERJ3GEY0R00V	0 1/16W	[M]
R2945	ERJ3GEYJ104V	100K 1/16W	[M]
R2946	ERJ3GEYJ330V	33 1/16W	[M]
R2947	ERJ3GEYJ104V	100K 1/16W	[M]
R2950	ERJ3GEYJ221V	220 1/16W	[M]
R2951	ERJ3GEYJ221V	220 1/16W	[M]
R2952	ERJ3GEYJ221V	220 1/16W	[M]
R2953	ERJ3GEYJ221V	220 1/16W	[M]
R2955	ERJ3GEYJ221V	220 1/16W	[M]
R2960	ERJ3GEYJ104V	100K 1/16W	[M]
R2961	ERJ3GEYJ103V	10K 1/16W	[M]
R2962	ERJ3GEYJ473V	47K 1/16W	[M]
R2963	ERJ3GEYJ103V	10K 1/16W	[M]
R2964	ERJ3GEYJ103V	10K 1/16W	[M]
R2965	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2966	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2967	ERJ3GEYJ102V	1K 1/16W	[M]
R2968	ERJ3GEYJ104V	100K 1/16W	[M]
R2969	ERJ3GEYJ103V	10K 1/16W	[M]
R2970	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2971	ERJ3GEYJ221V	220 1/16W	[M]
R2972	ERJ3GEYJ221V	220 1/16W	[M]
R2973	ERJ3GEYJ103V	10K 1/16W	[M]
R2974	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2975	ERJ3GEYJ103V	10K 1/16W	[M]
R2976	ERJ3GEYJ103V	10K 1/16W	[M]
R2978	ERJ3GEYJ103V	10K 1/16W	[M]
R2981	ERJ3GEY0R00V	0 1/16W	[M]
R2982	ERJ3GEY0R00V	0 1/16W	[M]
R2984	ERJ3GEY0R00V	0 1/16W	[M]
R2985	ERJ3GEYJ221V	220 1/16W	[M]
R2986	ERJ3GEYJ221V	220 1/16W	[M]
R2987	ERJ3GEYJ221V	220 1/16W	[M]
R2990	D0C18R2JA020	8.2 1W	[M]
R2991	ERJ3GEYJ473V	47K 1/16W	[M]
R2993	ERJ3GEY0R00V	0 1/16W	[M]
R2994	ERJ3GEYJ473V	47K 1/16W	[M]
R5000	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5001	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5002	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5003	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5004	ERJ8GEYJ100V	10 1/8W	[M]
R5005	ERJ8GEYJ100V	10 1/8W	[M]
R5006	ERJ1TYJ220U	22 1W	[M]
R5007	ERJ1TYJ220U	22 1W	[M]
R5010	ERJ8GEYJ100V	10 1/8W	[M]
R5011	ERJ8GEYJ100V	10 1/8W	[M]
R5019	ERJ3GEYJ683V	68K 1/16W	[M]
R5020	ERJ3GEYJ124V	120K 1/16W	[M]
R5021	ERJ3GEYJ222V	2.2K 1/16W	[M]
R5022	ERJ3GEYJ122V	1.2K 1/16W	[M]
R5030	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5031	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5032	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5033	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5034	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5035	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5110	ERJ3GEYJ223V	22K 1/16W	[M]
R5200	ERJ8GEYJ100V	10 1/8W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R5201	ERJ8GEYJ100V	10 1/8W	[M]
R5205	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5206	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5209	ERJ1TYJ220U	22 1W	[M]
R5210	ERJ8GEYJ100V	10 1/8W	[M]
R5211	ERJ8GEYJ100V	10 1/8W	[M]
R5217	ERJ1TYJ220U	22 1W	[M]
R5218	ERJ3GEYJ124V	120K 1/16W	[M]
R5228	ERJ3GEYJ124V	120K 1/16W	[M]
R5300	ERJ1TYJ220U	22 1W	[M]
R5302	ERJ8GEYJ100V	10 1/8W	[M]
R5305	ERJ8GEYJ100V	10 1/8W	[M]
R5306	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5307	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5310	ERJ8GEYJ100V	10 1/8W	[M]
R5311	ERJ8GEYJ100V	10 1/8W	[M]
R5318	ERJ3GEYJ124V	120K 1/16W	[M]
R5319	ERJ1TYJ220U	22 1W	[M]
R5328	ERJ3GEYJ124V	120K 1/16W	[M]
R5501	ERJ3GEYJ102V	1K 1/16W	[M]
R5502	ERJ3GEYJ103V	10K 1/16W	[M]
R5503	ERJ3GEYJ103V	10K 1/16W	[M]
R5504	ERJ3GEYJ220V	22 1/16W	[M]
R5505	ERJ3GEYJ104V	100K 1/16W	[M]
R5506	ERJ3GEYJ682V	6.8K 1/16W	[M]
R5507	ERJ3GEYJ105V	1M 1/16W	[M]
R5508	ERJ3GEYJ103V	10K 1/16W	[M]
R5509	ERJ3GEY0R00V	0 1/16W	[M]
R5573	ERJ3GEYJ101V	100 1/16W	[M]
R5575	ERJ3GEYJ101V	100 1/16W	[M]
R5701	ERC12UGK335D	3.3M 1/2W	[M]
R5702	ERDS1FVJ1R0T	1 1/2W	[M]
R5703	ERJ6GEYJ681V	680 1/10W	[M]
R5704	ERX2LJ68MP	0.68 2W	[M]
R5705	ERX2LJ68MP	0.68 2W	[M]
R5706	ERG2SJ333P	33K 2W	[M]
R5707	ERG2SJ333P	33K 2W	[M]
R5708	ERJ6GEYJ332V	3.3K 1/10W	[M]
R5709	ERJ6GEYJ222V	2.2K 1/10W	[M]
R5710	ERJ6GEYJ103V	10K 1/10W	[M]
R5711	ERJ6GEYJ220V	22 1/10W	[M]
R5712	ERJ6GEYJ222V	2.2K 1/10W	[M]
R5713	ERJ3GEYF272V	2.7K 1/16W	[M]
R5714	ERJ3GEYF473V	47K 1/16W	[M]
R5715	ERJ3GEYD153V	15K 1/16W	[M]
R5716	ERJ3GEYJ390V	39 1/16W	[M]
R5723	ERJ3GEYF472V	4.7K 1/16W	[M]
R5724	ERJ3GEYF122V	1.2K 1/16W	[M]
R5725	ERJ3GEYF561V	560 1/16W	[M]
R5726	ERJ3GEYJ102V	1K 1/16W	[M]
R5727	ERJ3GEYJ222V	2.2K 1/16W	[M]
R5728	ERJ3GEY0R00V	0 1/16W	[M]
R5729	ERJ6GEYJ562V	5.6K 1/10W	[M]
R5735	ERJM1WSF10MU	0.01 1W	[M]
R5736	ERDS1FVJ471T	470 1/2W	[M]
R5737	ERJ3GEYJ100V	10 1/16W	[M]
R5739	ERDS1FVJ561T	560 1/2W	[M]
R5750	ERJ3GEYJ331V	330 1/16W	[M]
R5751	ERDS1TJ474B	470K 1/2W	[M] △
R5752	ERJ3GEYJ472V	4.7K 1/16W	[M]
R5753	ERJ3GEYJ331V	330 1/16W	[M]
R5754	ERJ3GEYJ332V	3.3K 1/16W	[M]
R5755	ERJ3GEYJ103V	10K 1/16W	[M]
R5756	ERJ3GEYJ103V	10K 1/16W	[M]
R5757	ERJ3GEYJ103V	10K 1/16W	[M]
R5758	ERJ3GEYJ335V	3.3M 1/16W	[M]
R5759	ERJ3GEYJ104V	100K 1/16W	[M]
R5760	ERJ3GEYJ103V	10K 1/16W	[M]
R5763	ERJ3GEYF222V	2.2K 1/16W	[M]
R5764	ERJ3GEYJ103V	10K 1/16W	[M]
R5770	ERJ3GEYJ183V	18K 1/16W	[M]
R5771	ERJ6GEYJ100V	10 1/10W	[M]
R5772	ERDS1FVJ4R7T	4.7 1/2W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R5773	ERJ3GEYF561V	560 1/16W	[M]
R5774	ERDS1FVJ4R7T	4.7 1/2W	[M]
R5776	ERJ3GEYJ331V	330 1/16W	[M]
R5777	ERJ3GEYJ102V	1K 1/16W	[M]
R5778	ERDS1FVJ4R7T	4.7 1/2W	[M]
R5779	ERJ3GEYJ102V	1K 1/16W	[M]
R5780	ERJ3GEYJ331V	330 1/16W	[M]
R5781	ERJ3GEYJ103V	10K 1/16W	[M]
R5783	ERJ3GEY0R00V	0 1/16W	[M]
R5784	ERJ8GEYJ394V	390K 1/8W	[M]
R5785	ERJ8GEYJ394V	390K 1/8W	[M]
R5786	ERJ3GEYJ104V	100K 1/16W	[M]
R5791	ERJ3GEY0R00V	0 1/16W	[M]
R5792	ERG2SJ470E	47 2W	[M]
R5793	ERG2SJ470E	47 2W	[M]
R5794	ERG2SJ470E	47 2W	[M]
R5795	ERG2SJ470E	47 2W	[M]
R5799	ERG2SJ470E	47 2W	[M]
R5916	ERJ3GEYJ151V	150 1/16W	[M]
R5917	ERJ3GEYJ472V	4.7K 1/16W	[M]
R5930	ERJ3GEYJ103V	10K 1/16W	[M]
R5931	ERJ3GEYJ103V	10K 1/16W	[M]
R5932	ERJ3GEYJ103V	10K 1/16W	[M]
R5933	ERJ3GEYJ562V	5.6K 1/16W	[M]
R5934	ERJ3GEYJ103V	10K 1/16W	[M]
R5954	ERJ3GEY0R00V	0 1/16W	[M]
R6801	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6802	ERJ3GEYJ272V	2.7K 1/16W	[M]
R6803	ERJ3GEYJ122V	1.2K 1/16W	[M]
R6804	ERJ3GEYJ102V	1K 1/16W	[M]
R6805	ERJ3GEYJ102V	1K 1/16W	[M]
R6807	ERJ3GEYJ223V	22K 1/16W	[M]
R6809	ERJ3GEYJ223V	22K 1/16W	[M]
R6810	ERJ3GEYJ682V	6.8K 1/16W	[M]
R6812	ERJ3GEYJ182V	1.8K 1/16W	[M]
R6914	ERJ3GEYJ563V	56K 1/16W	[M]
R6916	ERJ3GEYJ680V	68 1/16W	[M]
R6917	ERJ3GEYJ680V	68 1/16W	[M]
R6918	ERJ3GEYJ223V	22K 1/16W	[M]
R6922	ERJ3GEYJ102V	1K 1/16W	[M]
R6923	ERJ3GEYJ102V	1K 1/16W	[M]
R6924	ERJ3GEYJ122V	1.2K 1/16W	[M]
R6925	ERJ3GEYJ182V	1.8K 1/16W	[M]
R6926	ERJ3GEYJ222V	2.2K 1/16W	[M]
R6927	ERJ3GEYJ680V	68 1/16W	[M]
R6928	ERJ3GEYJ272V	2.7K 1/16W	[M]
R6934	ERJ3GEYJ470V	47 1/16W	[M]
R6935	ERJ3GEYJ100V	10 1/16W	[M]
R6939	ERJ3GEY0R00V	0 1/16W	[M]
R6940	ERJ3GEY0R00V	0 1/16W	[M]
R6946	ERJ3GEYJ221V	220 1/16W	[M]
R6947	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6948	ERJ3GEYJ822V	8.2K 1/16W	[M]
R6949	ERJ3GEYJ822V	8.2K 1/16W	[M]
R6950	ERJ3GEYJ473V	47K 1/16W	[M]
R6951	ERJ3GEYJ473V	47K 1/16W	[M]
R6957	ERJ3GEYJ221V	220 1/16W	[M]
R6960	ERJ3GEYJ222V	2.2K 1/16W	[M]
R8011	ERJ2GEJ220X	22 1/32W	[M]
R8021	ERJ2GEJ103X	10K 1/32W	[M]
R8022	ERJ2GEJ103X	10K 1/32W	[M]
R8023	ERJ2GEJ473X	47K 1/32W	[M]
R8041	ERJ2GEJ330X	33 1/32W	[M]
R8111	ERJ2GEJ223X	22K 1/32W	[M]
R8112	ERJ2GEJ223X	22K 1/32W	[M]
R8153	ERJ2RHD621X	620 1/32W	[M]
R8154	ERJ2RHD102X	1K 1/32W	[M]
R8201	ERJ2GEJ222X	2.2K 1/32W	[M]
R8231	ERJ2GEJ103X	10K 1/32W	[M]
R8233	ERJ2GEJ153X	15K 1/32W	[M]
R8235	ERJ2GEJ822X	8.2K 1/32W	[M]
R8236	ERJ2GEJ822X	8.2K 1/32W	[M]
R8241	ERJ2GEJ223X	22K 1/32W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R8242	ERJ2GEJ752X	7.5K 1/32W	[M]
R8243	ERJ2GEJ103X	10K 1/32W	[M]
R8251	ERJ6GEYJ6R8V	6.8 1/10W	[M]
R8261	ERJ2GEJ823X	82K 1/32W	[M]
R8262	ERJ2GEJ472X	4.7K 1/32W	[M]
R8263	ERJ2GEJ823X	82K 1/32W	[M]
R8264	ERJ2GEJ472X	4.7K 1/32W	[M]
R8265	ERJ2GE0R00X	0 1/32W	[M]
R8311	ERJ2RHD242X	2.4K 1/32W	[M]
R8312	ERJ2RHD102X	1K 1/32W	[M]
R8313	ERJ2RHD243X	24K 1/32W	[M]
R8314	ERJ2GE0R00X	0 1/32W	[M]
R8315	ERJ2GEJ6R8X	6.8 1/32W	[M]
R8321	ERJ3RBD161V	160 1/16W	[M]
R8322	ERJ2RKD100X	10 1/32W	[M]
R8325	ERJ3RBD161V	160 1/16W	[M]
R8326	ERJ2GE0R00X	0 1/32W	[M]
R8331	ERJ3RBD161V	160 1/16W	[M]
R8332	ERJ2RKD100X	10 1/32W	[M]
R8335	ERJ3RED820V	82 1/16W	[M]
R8341	ERJ3RED820V	82 1/16W	[M]
R8401	ERJ2GEJ473X	47K 1/32W	[M]
R8402	ERJ2GEJ101X	100 1/32W	[M]
R8404	ERJ2GEJ101X	100 1/32W	[M]
R8407	ERJ2GEJ101X	100 1/32W	[M]
R8420	ERJ2GEJ222X	2.2K 1/32W	[M]
R8421	ERJ2GE0R00X	0 1/32W	[M]
R8501	ERJ2GE0R00X	0 1/32W	[M]
R8505	ERJ2GEJ222X	2.2K 1/32W	[M]
R8506	ERJ2GEJ152X	1.5K 1/32W	[M]
R8550	ERJ2GEJ752X	7.5K 1/32W	[M]
R8551	ERJ2GE0R00X	0 1/32W	[M]
R8552	ERJ2GEJ102X	1K 1/32W	[M]
R8553	ERJ2GEJ102X	1K 1/32W	[M]
R8554	ERJ2GEJ680X	68 1/32W	[M]
R8555	ERJ2GEJ2R2X	2.2 1/32W	[M]
R8556	ERJ3GEYJ560V	56 1/16W	[M]
R8557	ERJ3GEYJ510V	51 1/16W	[M]
R8558	ERJ2GEJ473X	47K 1/32W	[M]
R8559	ERJ2GEJ153X	15K 1/32W	[M]
R8560	ERJ2GEJ102X	1K 1/32W	[M]
R8561	ERJ2GE0R00X	0 1/32W	[M]
R8562	ERJ2GEJ102X	1K 1/32W	[M]
R8563	ERJ2GEJ102X	1K 1/32W	[M]
R8564	ERJ2GEJ220X	22 1/32W	[M]
R8565	ERJ2GEJ2R2X	2.2 1/32W	[M]
R8566	ERJ3GEYJ560V	56 1/16W	[M]
R8567	ERJ3GEYJ510V	51 1/16W	[M]
R8568	ERJ2GEJ473X	47K 1/32W	[M]
R8569	ERJ2GEJ123X	12K 1/32W	[M]
R8570	ERJ2GEJ104X	100K 1/32W	[M]
R8601	ERJ2GEJ102X	1K 1/32W	[M]
R8606	ERJ2GEJ104X	100K 1/32W	[M]
R8607	ERJ2GEJ103X	10K 1/32W	[M]
R8611	ERJ2GEJ101X	100 1/32W	[M]
R8621	ERJ2GEJ105X	1M 1/32W	[M]
R8622	ERJ2RHD102X	1K 1/32W	[M]
RX8011	D1H88204A024	CHIP RESISTOR	[M]
RX8012	D1H88204A024	CHIP RESISTOR	[M]
RX8013	D1H88204A024	CHIP RESISTOR	[M]
RX8014	D1H88204A024	CHIP RESISTOR	[M]
RX8015	D1H422020001	CHIP RESISTOR	[M]
RX8016	D1H88204A024	CHIP RESISTOR	[M]
RX8017	D1H88204A024	CHIP RESISTOR	[M]
RX8018	D1H88204A024	CHIP RESISTOR	[M]
RX8021	D1H410320002	CHIP RESISTOR	[M]
RX8031	D1H447220001	CHIP RESISTOR	[M]
RX8032	D1H447220001	CHIP RESISTOR	[M]
RX8401	D1H410120001	CHIP RESISTOR	[M]
RX8402	D1H410120001	CHIP RESISTOR	[M]
RX8501	D1H456020001	CHIP RESISTOR	[M]
RX8502	D1H85604A024	CHIP RESISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
RX8503	D1H456020001	CHIP RESISTOR	[M]
RX8504	D1H456020001	CHIP RESISTOR	[M]
RX8611	D1H447220001	CHIP RESISTOR	[M]
		CHIP RESISTORS	
W2002	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2003	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2005	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2009	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2010	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2011	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2015	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2016	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2017	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2018	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2019	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2020	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2021	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2022	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2023	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2024	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2025	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2026	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2027	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2028	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2030	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2031	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2037	ERX2SJ1R5E	1.5 2W	[M]
W2042	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2060	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2061	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2073	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2103	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2104	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2106	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2108	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2109	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2110	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2118	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2119	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2121	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2122	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2123	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2124	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2127	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2131	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2133	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2134	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2138	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2139	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2140	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2159	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2169	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2170	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2171	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2174	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2184	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2186	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2250	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2251	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2252	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2253	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2257	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2258	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2262	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2263	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2264	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2265	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2266	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2267	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2268	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2269	ERJ6GEY0R00V	CHIP RESISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
W2270	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2271	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2272	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2273	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2274	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2301	G0C220JA0055	COIL	[M]
W2508	G0C220JA0055	COIL	[M]
W2911	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W5201	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5831	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5832	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5834	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5835	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5836	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W5837	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5838	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5839	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5840	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5842	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5843	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5844	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W5849	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5850	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W5852	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5853	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5854	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W5855	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W5858	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6900	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6901	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6902	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6919	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6920	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6922	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6925	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6926	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6927	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6928	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6929	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6930	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6931	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6941	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6942	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6943	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6945	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W6946	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6947	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6948	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W6952	ERJ6GEY0R00V	CHIP RESISTOR	[M]
K2100	ERJ3GEY0R00V	CHIP RESISTOR	[M]
K2200	ERJ3GEY0R00V	CHIP RESISTOR	[M]
K2300	ERJ3GEY0R00V	CHIP RESISTOR	[M]
K2400	ERJ3GEY0R00V	CHIP RESISTOR	[M]
K8031	ERJ2GE0R00X	CHIP RESISTOR	[M]
K8106	ERJ3GEY0R00V	CHIP RESISTOR	[M]
K8421	ERJ3GEY0R00V	CHIP RESISTOR	[M]
		CAPACITORS	
C2001	ECEA1CKS470I	47 16V	[M]
C2002	ECJ1VB1C104K	0.1 16V	[M]
C2003	ECEA1EKS220B	22 25V	[M]
C2004	ECJ1VB1H103K	0.01 50V	[M]
C2006	ECEA1HKS2R2B	2.2 50V	[M]
C2007	ECJ1VB1C104K	0.1 16V	[M]
C2008	ECEA0JKS101B	100 6.3V	[M]
C2009	ECJ1VB1C104K	0.1 16V	[M]
C2010	ECJ1VB1H331K	330P 50V	[M]
C2011	ECJ1VB1H331K	330P 50V	[M]
C2012	ECJ1VB1H331K	330P 50V	[M]
C2013	ECJ1VB1H223K	0.022 50V	[M]
C2016	ECEA1CKS470I	47 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2017	ECJ1VB1H103K	0.01 50V	[M]
C2018	ECEA1CKS470I	47 16V	[M]
C2019	ECEA1CKS470I	47 16V	[M]
C2020	ECJ1VB1H103K	0.01 50V	[M]
C2021	ECA1AAD221XI	220 10V	[M]
C2022	ECA1AAD221XI	220 10V	[M]
C2023	ECJ1VB1H221K	220P 50V	[M]
C2024	ECJ1VB1H221K	220P 50V	[M]
C2026	ECEA1CKS100I	10 16V	[M]
C2027	ECJ1VB1C104K	0.1 16V	[M]
C2028	ECJ1VB1C104K	0.1 16V	[M]
C2029	ECJ1VB1H471K	470P 50V	[M]
C2030	ECJ1VB1H471K	470P 50V	[M]
C2101	ECJ1VB1A105K	1 10V	[M]
C2111	ECJ1VB1A105K	1 10V	[M]
C2112	ECJ1VB1H471K	470P 50V	[M]
C2114	ECJ1VB1H562K	5600P 50V	[M]
C2115	ECJ1VC1H181J	180P 50V	[M]
C2117	ECJ1VB1C104K	0.1 16V	[M]
C2118	ECJ1VB1C104K	0.1 16V	[M]
C2119	ECJ1VB1A105K	1 10V	[M]
C2120	ECJ1VB1C273K	0.027 16V	[M]
C2121	ECJ1VB1C683K	0.068 16V	[M]
C2160	ECJ1VC1H181K	180P 50V	[M]
C2161	ECJ1VB1C393K	0.039 16V	[M]
C2162	ECJ1VC1H101K	100P 50V	[M]
C2164	ECJ1VB1H102K	1000P 50V	[M]
C2169	ECJ1VB1H103K	0.01 50V	[M]
C2170	ECEA1HKS010B	1 50V	[M]
C2171	ECEA1EKS4R7B	4.7 25V	[M]
C2172	ECJ1VC1H101J	100P 50V	[M]
C2177	ECEA1HKS010I	1 50V	[M]
C2178	ECJ1VC1H101J	100P 50V	[M]
C2179	ECJ1VC1H470J	47P 50V	[M]
C2180	ECJ1VB1C104K	0.1 16V	[M]
C2181	ECJ1VB1H102K	1000P 50V	[M]
C2183	ECEA1HKS3R3B	3.3 50V	[M]
C2185	ECJ1VB1A105K	1 10V	[M]
C2186	ECJ1VB1A105K	1 10V	[M]
C2187	ECJ1VB1A105K	1 10V	[M]
C2188	ECJ1VB1A105K	1 10V	[M]
C2190	ECJ1VB1A105K	1 10V	[M]
C2191	ECJ1VC1H101J	100P 50V	[M]
C2193	ECJ1VB1C104K	0.1 16V	[M]
C2194	ECJ1VB1H182K	1800P 50V	[M]
C2201	ECJ1VB1A105K	1 10V	[M]
C2211	ECJ1VB1A105K	1 10V	[M]
C2212	ECJ1VB1H471K	470P 50V	[M]
C2214	ECJ1VB1H562K	5600P 50V	[M]
C2215	ECJ1VC1H181J	180P 50V	[M]
C2217	ECJ1VB1C104K	0.1 16V	[M]
C2218	ECJ1VB1C104K	0.1 16V	[M]
C2219	ECJ1VB1A105K	1 10V	[M]
C2220	ECJ1VB1C273K	0.027 16V	[M]
C2221	ECJ1VB1C683K	0.068 16V	[M]
C2260	ECJ1VC1H181K	180P 50V	[M]
C2261	ECJ1VB1C393K	0.039 16V	[M]
C2262	ECJ1VC1H101K	100P 50V	[M]
C2264	ECJ1VB1H102K	1000P 50V	[M]
C2270	ECEA1HKS010B	1 50V	[M]
C2272	ECJ1VC1H101J	100P 50V	[M]
C2277	ECEA1HKS010I	1 50V	[M]
C2278	ECJ1VC1H101J	100P 50V	[M]
C2279	ECJ1VC1H470J	47P 50V	[M]
C2280	ECJ1VB1C104K	0.1 16V	[M]
C2281	ECJ1VB1H102K	1000P 50V	[M]
C2283	ECEA1HKS3R3B	3.3 50V	[M]
C2285	ECJ1VB1A105K	1 10V	[M]
C2286	ECJ1VB1A105K	1 10V	[M]
C2287	ECJ1VB1A105K	1 10V	[M]
C2288	ECJ1VB1A105K	1 10V	[M]
C2290	ECJ1VB1A105K	1 10V	[M]
C2291	ECJ1VC1H101J	100P 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2293	ECJ1VB1C104K	0.1 16V	[M]
C2294	ECJ1VB1H182K	1800P 50V	[M]
C2300	ECJ1VB1A105K	1 10V	[M]
C2301	ECJ2YB0J475K	4.7 6.3V	[M]
C2302	ECJ1VB1C393K	0.039 16V	[M]
C2303	ECJ1VB1C104K	0.1 16V	[M]
C2304	ECEA1CKS100I	10 16V	[M]
C2305	ECJ1VB1H332K	3300P 50V	[M]
C2306	ECJ1VB1A154K	0.15 10V	[M]
C2307	ECEA1CKS100I	10 16V	[M]
C2308	ECJ1VB1H223K	0.022 50V	[M]
C2309	ECJ1VB1C823K	0.082 16V	[M]
C2312	ECEA1HKS3R3B	3.3 50V	[M]
C2323	ECJ1VB1H471K	470P 50V	[M]
C2324	ECJ1VB1H472K	4700P 50V	[M]
C2400	ECJ1VB1A105K	1 10V	[M]
C2401	ECJ2YB0J475K	4.7 6.3V	[M]
C2402	ECJ1VB1C393K	0.039 16V	[M]
C2403	ECJ1VB1C104K	0.1 16V	[M]
C2404	ECEA1CKS100I	10 16V	[M]
C2405	ECJ1VB1H332K	3300P 50V	[M]
C2406	ECJ1VB1A154K	0.15 10V	[M]
C2407	ECEA1CKS100I	10 16V	[M]
C2408	ECJ1VB1H223K	0.022 50V	[M]
C2412	ECEA1HKS3R3B	3.3 50V	[M]
C2423	ECJ1VB1H471K	470P 50V	[M]
C2424	ECJ1VB1H472K	4700P 50V	[M]
C2500	ECJ1VB1A105K	1 10V	[M]
C2501	ECEA1CKS100I	10 16V	[M]
C2502	ECJ1VB1C333K	0.033 16V	[M]
C2503	ECJ1VB1H104K	0.1 50V	[M]
C2506	ECEA1HKS010B	1 50V	[M]
C2507	ECJ1VB1H471K	470P 50V	[M]
C2509	ECJ1VB1H182K	1800P 50V	[M]
C2600	ECJ1VB1A105K	1 10V	[M]
C2601	ECJ1VB1C823K	0.082 16V	[M]
C2606	ECEA1CKS100I	10 16V	[M]
C2607	ECEA1EKS220B	22 25V	[M]
C2608	ECEA1CKS100I	10 16V	[M]
C2609	ECJ1VB1A474K	0.47 10V	[M]
C2610	ECJ1VB1A474K	0.47 10V	[M]
C2611	ECJ1VB1H123K	0.012 50V	[M]
C2612	ECJ1VB1H332K	3300P 50V	[M]
C2615	ECJ1VB1H222K	2200P 50V	[M]
C2617	ECJ1VB1A124K	0.12 10V	[M]
C2619	ECEA1HKA100B	10 50V	[M]
C2620	ECJ1VC1H101J	100P 50V	[M]
C2621	ECJ1VB1C104K	0.1 16V	[M]
C2801	ECJ1VB1C104K	0.1 16V	[M]
C2802	ECEA0JKS101B	100 6.3V	[M]
C2803	ECEA0JKS101B	100 6.3V	[M]
C2804	ECEA0JKS101B	100 6.3V	[M]
C2805	ECEA0JKS101B	100 6.3V	[M]
C2806	ECEA0JKS101B	100 6.3V	[M]
C2807	ECJ1VB1H103K	0.01 50V	[M]
C2808	ECA1AAD221XI	220 10V	[M]
C2809	ECEA1EKS220B	22 25V	[M]
C2810	ECJ1VB1H103K	0.01 50V	[M]
C2811	ECJ1VB1C104K	0.1 16V	[M]
C2812	ECJ1VB1C104K	0.1 16V	[M]
C2814	ECEA1EKS220B	22 25V	[M]
C2815	ECEA1EKS220B	22 25V	[M]
C2816	ECEA1EKS220B	22 25V	[M]
C2817	ECJ1VB1A105K	1 10V	[M]
C2818	ECJ1VB1A105K	1 10V	[M]
C2819	ECJ1VC1H101J	100P 50V	[M]
C2820	ECJ1VC1H101J	100P 50V	[M]
C2821	ECJ1VC1H101J	100P 50V	[M]
C2822	ECJ1VC1H101J	100P 50V	[M]
C2823	ECJ1VC1H101J	100P 50V	[M]
C2825	ECJ1VC1H101J	100P 50V	[M]
C2826	ECJ1VC1H101J	100P 50V	[M]
C2827	ECJ1VC1H101J	100P 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2828	ECJ1VC1H101J	100P 50V	[M]
C2829	ECJ1VC1H101J	100P 50V	[M]
C2830	ECJ1VC1H100D	10P 50V	[M]
C2833	ECJ1VB1H104K	0.1 50V	[M]
C2834	ECEA1EKS220B	22 25V	[M]
C2835	ECEA1EKS220B	22 25V	[M]
C2836	ECJ1VB1C104K	0.1 16V	[M]
C2837	ECJ1VB1C104K	0.1 16V	[M]
C2838	ECJ1VB1C104K	0.1 16V	[M]
C2839	ECJ1VB1C104K	0.1 16V	[M]
C2901	ECA1EM102B	1000 25V	[M]
C2902	ECJ1VB1H103K	0.01 50V	[M]
C2903	ECJ1VB1H103K	0.01 50V	[M]
C2906	ECJ1VB1H103K	0.01 50V	[M]
C2908	ECEA1CKA101B	100 16V	[M]
C2910	ECJ1VB1H103K	0.01 50V	[M]
C2913	ECEA1CKA101B	100 16V	[M]
C2914	ECEA1AKA330B	33 10V	[M]
C2917	ECJ1VB1H104K	0.1 50V	[M]
C2918	ECA1CAK470XB	47 16V	[M]
C2919	ECJ1VC1H101J	100P 50V	[M]
C2920	ECJ1VB1H103K	0.01 50V	[M]
C2921	ECA1EM221B	220 25V	[M]
C2922	EEUFC0J821B	820 6.3V	[M]
C2923	ECEA1CKA101B	100 16V	[M]
C2925	ECA0JAK221XB	220 6.3V	[M]
C2926	ECJ1VB1C104K	0.1 16V	[M]
C2927	ECEA1CKA101B	100 16V	[M]
C2929	ECA0JAK221XB	220 6.3V	[M]
C2930	ECJ1VB1A105K	1 10V	[M]
C2931	ECA0JAK221XB	220 6.3V	[M]
C2932	ECEA1CKA101B	100 16V	[M]
C2940	ECJ1VB1H104K	0.1 50V	[M]
C2941	ECEA1CKA470B	47 16V	[M]
C2944	EEUFC0J821B	820 6.3V	[M]
C2945	ECJ1VB1H103K	0.01 50V	[M]
C2946	ECEA1CKA101B	100 16V	[M]
C2950	ECJ1VB1C104K	0.1 16V	[M]
C2951	ECJ1VB1C104K	0.1 16V	[M]
C2952	ECJ1VB1H103K	0.01 50V	[M]
C2953	ECJ1VB1H103K	0.01 50V	[M]
C2954	ECJ1VB1H103K	0.01 50V	[M]
C2955	ECJ1VB1H103K	0.01 50V	[M]
C2956	ECJ1VB1H103K	0.01 50V	[M]
C2957	ECJ1VB1H103K	0.01 50V	[M]
C2958	ECJ1VB1H103K	0.01 50V	[M]
C2960	ECJ1VB1A105K	1 10V	[M]
C2962	ECEA1CKA101B	100 16V	[M]
C2963	EEUFC1C471B	470 16V	[M]
C2964	ECJ1VB1H103K	0.01 50V	[M]
C2965	ECJ1VB1H103K	0.01 50V	[M]
C2966	ECJ1VB1H103K	0.01 50V	[M]
C2967	ECJ1VB1H103K	0.01 50V	[M]
C2968	ECEA1CKA101B	100 16V	[M]
C2969	ECEA1CKA101B	100 16V	[M]
C2970	EEUFC1C101B	100P 16V	[M]
C4891	F1BAF2220023	2200P	[M] △
C5000	ECJ1VB1H102K	1000P 50V	[M]
C5001	ECJ1VB1H102K	1000P 50V	[M]
C5002	ECJ1VB1H104K	0.1 50V	[M]
C5003	ECJ1VB1H104K	0.1 50V	[M]
C5004	ECJ1VB1H104K	0.1 50V	[M]
C5005	ECJ1VB1H104K	0.1 50V	[M]
C5006	ECJ1VB1H331K	330P 50V	[M]
C5007	ECJ1VB1H331K	330P 50V	[M]
C5008	ECJ1VB1H153K	0.015 50V	[M]
C5009	ECJ1VB1H153K	0.015 50V	[M]
C5010	ECJ2VC2A221J	220P 100V	[M]
C5011	ECJ2VC2A221J	220P 100V	[M]
C5012	ECJ2VC2A221J	220P 100V	[M]
C5013	ECJ2VC2A221J	220P 100V	[M]
C5014	ECQV1H474JL3	0.47 50V	[M]
C5015	ECQV1H474JL3	0.47 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C5016	ECJ1VB1H104K	0.1 50V	[M]
C5017	ECJ1VB1H104K	0.1 50V	[M]
C5018	ECJ3YB2A104K	0.1 100V	[M]
C5019	ECJ3YB2A104K	0.1 100V	[M]
C5020	ECJ1VB1H104K	0.1 50V	[M]
C5021	ECJ3YB2A104K	0.1 100V	[M]
C5022	ECJ1VB1H104K	0.1 50V	[M]
C5023	ECJ3YB2A104K	0.1 100V	[M]
C5024	ECJ1VB1H104K	0.1 50V	[M]
C5025	ECJ1VB1H104K	0.1 50V	[M]
C5026	ECJ3YB2A104K	0.1 100V	[M]
C5027	ECJ1VB1H104K	0.1 50V	[M]
C5028	ECJ1VB1H104K	0.1 50V	[M]
C5029	ECJ3YB2A104K	0.1 100V	[M]
C5030	ECJ1VC1H221J	220P 50V	[M]
C5031	ECJ1VB1C224K	0.22 16V	[M]
C5040	ECA2AM220B	22 100V	[M]
C5133	ECA0JAK101XB	100 6.3V	[M]
C5134	ECJ1VB1H103K	0.01 50V	[M]
C5135	ECJ1VB1H103K	0.01 50V	[M]
C5136	ECJ1VB1H103K	0.01 50V	[M]
C5137	ECJ1VB1H103K	0.01 50V	[M]
C5200	ECJ1VB1H104K	0.1 50V	[M]
C5201	ECJ1VB1H153K	0.015 50V	[M]
C5202	ECJ1VB1C224K	0.22 16V	[M]
C5203	ECJ2VC2A221J	220P 100V	[M]
C5204	ECJ1VB1H153K	0.015 50V	[M]
C5205	ECJ2VC2A221J	220P 100V	[M]
C5206	ECJ1VB1H104K	0.1 50V	[M]
C5207	ECJ3YB2A104K	0.1 100V	[M]
C5208	ECJ1VB1H104K	0.1 50V	[M]
C5209	ECJ1VB1H104K	0.1 50V	[M]
C5210	ECJ3YB2A104K	0.1 100V	[M]
C5211	ECJ2VC2A221J	220P 100V	[M]
C5212	ECJ1VC1H221J	220P 50V	[M]
C5213	ECJ3YB2A104K	0.1 100V	[M]
C5214	ECJ1VB1H104K	0.1 50V	[M]
C5215	ECJ3YB2A104K	0.1 100V	[M]
C5216	ECJ1VB1H331K	330P 50V	[M]
C5217	ECJ3YB2A104K	0.1 100V	[M]
C5218	ECJ2VC2A221J	220P 100V	[M]
C5219	ECJ3YB2A104K	0.1 100V	[M]
C5220	ECJ1VB1H104K	0.1 50V	[M]
C5221	ECJ1VB1H102K	1000P 50V	[M]
C5222	ECJ1VB1H104K	0.1 50V	[M]
C5223	ECJ1VB1H104K	0.1 50V	[M]
C5224	ECJ1VB1H331K	330P 50V	[M]
C5225	ECQV1H474JL3	0.47 50V	[M]
C5226	ECJ1VB1H104K	0.1 50V	[M]
C5227	ECJ1VB1H104K	0.1 50V	[M]
C5228	ECQV1H474JL3	0.47 50V	[M]
C5231	ECJ1VB1H103K	0.01 50V	[M]
C5232	ECJ1VB1H103K	0.01 50V	[M]
C5240	ECA2AM220B	22 100V	[M]
C5300	ECQV1H474JL3	0.47 50V	[M]
C5301	ECJ1VB1H104K	0.1 50V	[M]
C5302	ECJ1VB1H104K	0.1 50V	[M]
C5303	ECJ1VB1H104K	0.1 50V	[M]
C5304	ECJ1VB1H331K	330P 50V	[M]
C5305	ECJ1VB1H104K	0.1 50V	[M]
C5306	ECJ1VB1H104K	0.1 50V	[M]
C5307	ECJ2VC2A221J	220P 100V	[M]
C5308	ECJ3YB2A104K	0.1 100V	[M]
C5309	ECJ3YB2A104K	0.1 100V	[M]
C5310	ECJ3YB2A104K	0.1 100V	[M]
C5311	ECJ2VC2A221J	220P 100V	[M]
C5312	ECJ1VB1H331K	330P 50V	[M]
C5313	ECJ1VB1H104K	0.1 50V	[M]
C5314	ECJ1VB1A474K	0.47 10V	[M]
C5315	ECJ1VB1H102K	1000P 50V	[M]
C5316	ECJ1VB1H104K	0.1 50V	[M]
C5317	ECJ1VB1A474K	0.47 10V	[M]
C5318	ECJ3YB2A104K	0.1 100V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C5319	ECJ3YB2A104K	0.1 100V	[M]
C5320	ECJ3YB2A104K	0.1 100V	[M]
C5321	ECJ1VB1C224K	0.22 16V	[M]
C5322	ECJ1VB1H153K	0.015 50V	[M]
C5323	ECJ1VC1H221J	220P 50V	[M]
C5324	ECJ1VB1H153K	0.015 50V	[M]
C5325	ECJ2VC2A221J	220P 100V	[M]
C5326	ECJ2VC2A221J	220P 100V	[M]
C5327	ECJ1VB1H104K	0.1 50V	[M]
C5328	ECQV1H474JL3	0.47 50V	[M]
C5331	ECJ1VB1H103K	0.01 50V	[M]
C5332	ECJ1VB1H103K	0.01 50V	[M]
C5450	ECJ1VB1A105K	1 10V	[M]
C5508	ECA1VM471B	470 35V	[M]
C5509	ECA1VM471B	470 35V	[M]
C5510	ECA1VM471B	470 35V	[M]
C5511	ECA1VM471B	470 35V	[M]
C5512	ECA1VM471B	470 35V	[M]
C5513	ECA1VM471B	470 35V	[M]
C5514	ECJ1VB1H104K	0.1 50V	[M]
C5515	ECJ1VB1H104K	0.1 50V	[M]
C5518	ECJ1VB1H104K	0.1 50V	[M]
C5519	ECJ1VB1H104K	0.1 50V	[M]
C5520	ECJ1VB1H104K	0.1 50V	[M]
C5521	ECJ1VB1H104K	0.1 50V	[M]
C5522	ECJ1VB1H104K	0.1 50V	[M]
C5523	ECJ1VB1H104K	0.1 50V	[M]
C5550	ECJ1VB1H471K	470P 50V	[M]
C5551	ECJ1VB1H391K	390P 50V	[M]
C5552	ECJ1VB1H391K	390P 50V	[M]
C5553	ECJ1VC1H101J	100P 50V	[M]
C5555	ECJ3YB1C106K	10 16V	[M]
C5556	ECJ1VB1H471K	470P 50V	[M]
C5557	ECA0JM331B	330 6.3V	[M]
C5558	ECA1CAK100XB	10 16V	[M]
C5559	ECEA1HKA4R7B	4.7 50V	[M]
C5700	F2B2D5610008	560 250V	[M]
C5701	ECQU2A224MLC	0.22	[M] △
C5702	ERJ6GEY0R00V	0 1/16W	[M]
C5706	ECQU2A224MLC	0.22	[M] △
C5708	ECQE6103KF	0.01 630V	[M]
C5709	ECJ1VB1H471K	470P 50V	[M]
C5710	ECQP6332JUB	0.01 630V	[M]
C5711	F2A1H5600009	56 50V	[M]
C5712	ECJ1VB1H221K	220P 50V	[M]
C5713	ECJ1VB1H102K	1000P 50V	[M]
C5714	F1BAF2220023	2200P	[M] △
C5715	ECA1CAK470XB	47 16V	[M]
C5717	F2A1V3320011	3300 35V	[M]
C5718	F2A1V3320011	3300 35V	[M]
C5720	ECJ1VB1H104K	0.1 50V	[M]
C5722	ECJ1VB1H104K	0.1 50V	[M]
C5725	ECA1HAK2R2XB	2.2 50V	[M]
C5727	ECCN3A470KGE	47P 1000V	[M]
C5729	F2A1H2200032	22 50V	[M]
C5732	ECJ1VB1H104K	0.1 50V	[M]
C5733	F2A1A2210063	220 10V	[M]
C5736	F1BAF2220023	2200P	[M] △
C5737	F1BAF2220023	2200P	[M] △
C5738	ECJ1VB1H681K	680P 50V	[M]
C5740	EEUFC0J821B	820 6.3V	[M]
C5741	EEUFC0J821B	820 6.3V	[M]
C5742	F2A1E1020049	1000 25V	[M]
C5746	F2A1H330A182	33 50V	[M]
C5761	ECJ1VB1H104K	0.1 50V	[M]
C5770	F1B2H103A060	0.01 500V	[M]
C5771	F1B2H103A060	0.01 500V	[M]
C5772	F1B3A122A009	1200P 1000V	[M]
C5773	F1B2H103A060	0.01 500V	[M]
C5774	F1B2H103A060	0.01 500V	[M]
C5779	ECJ1VB1H104K	0.1 50V	[M]
C5780	ECJ1VB1H104K	0.1 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C5790	ECJ1VB1H102K	1000P 50V	[M]
C5791	ECA1HAM101XB	100 50V	[M]
C5792	ECA1AM331B	330 10V	[M]
C5794	ECA1CAK330XB	33 16V	[M]
C5795	ECJ1VB1H104K	0.1 50V	[M]
C5796	F2A1E1020049	1000 25V	[M]
C5797	ECA1CAK100XB	10 16V	[M]
C5915	ECJ1VB1H103K	0.01 50V	[M]
C5916	ECA1HM101B	100 50V	[M]
C6101	ECJ1VB1H473K	0.047 50V	[M]
C6201	ECJ1VB1H473K	0.047 50V	[M]
C6801	ECJ1VB1H104K	0.1 50V	[M]
C6805	ECJ1VC1H101K	100P 50V	[M]
C6806	ECJ1VC1H101K	100P 50V	[M]
C6903	ECEA1HKA220B	22 50V	[M]
C6904	ECJ1VB1H102K	1000P 50V	[M]
C6905	ECEA1HKA220B	22 50V	[M]
C6906	ECJ1VC1H101K	100P 50V	[M]
C6909	ECJ1VB1H103K	0.01 50V	[M]
C6910	ECEA0JKS101B	100 6.3V	[M]
C6911	ECJ1VB1H103K	0.01 50V	[M]
C6913	ECEA1HKS3R3B	3.3 50V	[M]
C6916	ECJ1VC1H101K	100P 50V	[M]
C6917	ECJ1VC1H101K	100P 50V	[M]
C6918	ECEA1AKA470B	47 10V	[M]
C6919	ECJ1VC1H101K	100P 50V	[M]
C6920	ECJ1VB1H331K	330P 50V	[M]
C6921	ECJ1VB1H331K	330P 50V	[M]
C6923	ECJ1VB1H103K	0.01 50V	[M]
C6924	ECJ1VB1H103K	0.01 50V	[M]
C6925	ECJ1VB1H103K	0.01 50V	[M]
C6928	ECJ1VB1H104K	0.1 50V	[M]
C6929	ECJ1VB1H103K	0.01 50V	[M]
C8001	F2G0J101A066	100 6.3V	[M]
C8002	F2G0G331A012	330 4V	[M]
C8003	ECJ0EB1E222K	2200P 25V	[M]
C8004	ECJ0EF1C104Z	0.1 16V	[M]
C8005	ECJ0EF1C104Z	0.1 16V	[M]
C8006	ECJ0EF1C104Z	0.1 16V	[M]
C8007	ECJ0EF1C104Z	0.1 16V	[M]
C8008	ECJ0EF1C104Z	0.1 16V	[M]
C8009	ECJ0EF1C104Z	0.1 16V	[M]
C8010	ECJ0EF1C104Z	0.1 16V	[M]
C8011	ECJ1VB0J105K	1 6.3V	[M]
C8012	ECJ0EF1C104Z	0.1 16V	[M]
C8013	ECJ0EF1C104Z	0.1 16V	[M]
C8014	ECJ0EF1C104Z	0.1 16V	[M]
C8015	ECJ1VB0J105K	1 6.3V	[M]
C8016	ECJ1VB0J105K	1 6.3V	[M]
C8017	ECJ0EF1C104Z	0.1 16V	[M]
C8018	ECJ0EF1C104Z	0.1 16V	[M]
C8019	ECJ1VB0J105K	1 6.3V	[M]
C8020	ECJ0EF1C104Z	0.1 16V	[M]
C8021	ECJ0EF1C104Z	0.1 16V	[M]
C8022	ECJ0EF1C104Z	0.1 16V	[M]
C8023	ECJ1VB0J105K	1 6.3V	[M]
C8024	ECJ1VB0J105K	1 6.3V	[M]
C8025	ECJ0EF1C104Z	0.1 16V	[M]
C8026	ECJ0EB1E222K	2200P 25V	[M]
C8027	ECJ0EF1C104Z	0.1 16V	[M]
C8028	ECJ1VB0J105K	1 6.3V	[M]
C8031	ECJ0EF1C104Z	0.1 16V	[M]
C8051	ECJ1VB0J105K	1 6.3V	[M]
C8052	ECJ0EF1C104Z	0.1 16V	[M]
C8053	ECJ0EC1H221J	220P 50V	[M]
C8054	ECJ1VB0J105K	1 6.3V	[M]
C8055	ECJ1VB0J105K	1 6.3V	[M]
C8056	ECJ0EF1C104Z	0.1 16V	[M]
C8057	ECJ0EB1E222K	2200P 25V	[M]
C8111	ECJ0EB1A104K	0.1 10V	[M]
C8112	ECJ1VB0J105K	1 6.3V	[M]
C8113	ECJ0EB1E471K	470P 25V	[M]
C8151	ECJ2YB0J225K	2.2 6.3V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C8152	ECJ1VB1C105K	1 16V	[M]
C8201	F2H0J101A003	100 6.3V	[M]
C8202	F2G0J101A066	100 6.3V	[M]
C8203	ECJ0EF1C104Z	0.1 16V	[M]
C8204	ECJ0EF1C104Z	0.1 16V	[M]
C8205	ECJ0EF1C104Z	0.1 16V	[M]
C8206	ECJ1VB0J105K	1 6.3V	[M]
C8207	ECJ1VF1C104Z	0.1 16V	[M]
C8208	ECJ0EF1C104Z	0.1 16V	[M]
C8211	ECJ0EB1A333K	0.033 10V	[M]
C8212	ECJ0EF1C104Z	0.1 16V	[M]
C8213	ECJ0EF1C104Z	0.1 16V	[M]
C8214	ECJ0EF1C104Z	0.1 16V	[M]
C8215	ECJ0EB1E562K	5600P 25V	[M]
C8216	ECJ0EB1C183K	0.018 16V	[M]
C8217	ECJ1VB0J105K	1 6.3V	[M]
C8218	ECJ1VB0J105K	1 6.3V	[M]
C8221	ECJ0EB1A104K	0.1 10V	[M]
C8222	ECJ0EB1A104K	0.1 10V	[M]
C8223	ECJ0EB1A104K	0.1 10V	[M]
C8224	ECJ0EB1A104K	0.1 10V	[M]
C8225	ECJ0EF1C104Z	0.1 16V	[M]
C8226	ECJ0EF1C104Z	0.1 16V	[M]
C8227	ECJ0EF1C104Z	0.1 16V	[M]
C8228	ECJ1VB0J105K	1 6.3V	[M]
C8229	ECJ1VB0J105K	1 6.3V	[M]
C8232	ECJ1VF1C104Z	0.1 16V	[M]
C8233	ECJ0EB1E472K	4700P 25V	[M]
C8234	ECJ0EF1C104Z	0.1 16V	[M]
C8235	ECJ0EB1H102K	1000P 50V	[M]
C8236	ECJ0EB1H102K	1000P 50V	[M]
C8237	ECJ0EB1H102K	1000P 50V	[M]
C8238	ECJ0EB1H821K	820P 50V	[M]
C8241	ECJ0EB1A104K	0.1 10V	[M]
C8242	ECJ0EB1A104K	0.1 10V	[M]
C8251	F2G0J221A065	220 6.3V	[M]
C8252	F2G1C470A076	47 16V	[M]
C8253	F2H1C220A003	22 16V	[M]
C8254	ECJ0EF1C104Z	0.1 16V	[M]
C8255	ECJ0EF1C104Z	0.1 16V	[M]
C8256	ECJ0EF1C104Z	0.1 16V	[M]
C8257	ECJ0EF1C104Z	0.1 16V	[M]
C8261	ECJ0EF1C104Z	0.1 16V	[M]
C8262	ECJ0EF1C104Z	0.1 16V	[M]
C8301	F2H0J2210006	220 6.3V	[M]
C8302	F2H0J330A003	33 6.3V	[M]
C8303	ECJ0EF1C104Z	0.1 16V	[M]
C8304	ECJ1VB0J105K	1 6.3V	[M]
C8307	ECJ0EF1C104Z	0.1 16V	[M]
C8308	ECJ0EC1H150J	15P 50V	[M]
C8311	ECJ0EF1C104Z	0.1 16V	[M]
C8312	ECJ1VB0J105K	1 6.3V	[M]
C8421	F2G0J101A083	100 6.3V	[M]
C8422	ECJ0EF1C104Z	0.1 16V	[M]
C8423	F2G0J330A083	33 6.3V	[M]
C8424	ECJ0EF1C104Z	0.1 16V	[M]
C8426	ECJ0EF1C104Z	0.1 16V	[M]
C8427	ECJ0EF1C104Z	0.1 16V	[M]
C8428	ECJ0EF1C104Z	0.1 16V	[M]
C8501	ECJ3YB1A106M	10 10V	[M]
C8502	ECJ0EF1C104Z	0.1 16V	[M]
C8503	ECJ0EF1C104Z	0.1 16V	[M]
C8504	ECJ0EF1C104Z	0.1 16V	[M]
C8505	ECJ0EC1H221J	220P 50V	[M]
C8506	ECJ0EC1H101J	100P 50V	[M]
C8550	F2H0J330A003	33 6.3V	[M]
C8551	ECJ0EF1C104Z	0.1 16V	[M]
C8552	F2G1C100A072	10 16V	[M]
C8553	F2H0J470A003	47 6.3V	[M]
C8554	ECJ1VB0J105K	1 6.3V	[M]
C8561	ECJ0EF1C104Z	0.1 16V	[M]
C8562	F2G1C100A072	10 16V	[M]
C8563	F2H0J470A003	47 6.3V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C8564	ECJ1VB0J105K	1 6.3V	[M]
C8601	ECJ0EF1C104Z	0.1 16V	[M]
C8606	ECJ0EF1C104Z	0.1 16V	[M]
C8607	ECJ0EB0J224K	0.22 6.3V	[M]
C8611	ECJ0EF1C104Z	0.1 16V	[M]
C8621	ECJ0EC1H120J	12P 50V	[M]
C8622	ECJ0EC1H120J	12P 50V	[M]
C8651	ECJ0EF1C104Z	0.1 16V	[M]
C8652	ECJ0EF1C104Z	0.1 16V	[M]
C8691	ECJ0EF1C104Z	0.1 16V	[M]
C8695	ECJ0EF1C104Z	0.1 16V	[M]