


SCHEMAT DIAGRAM MODEL 1000

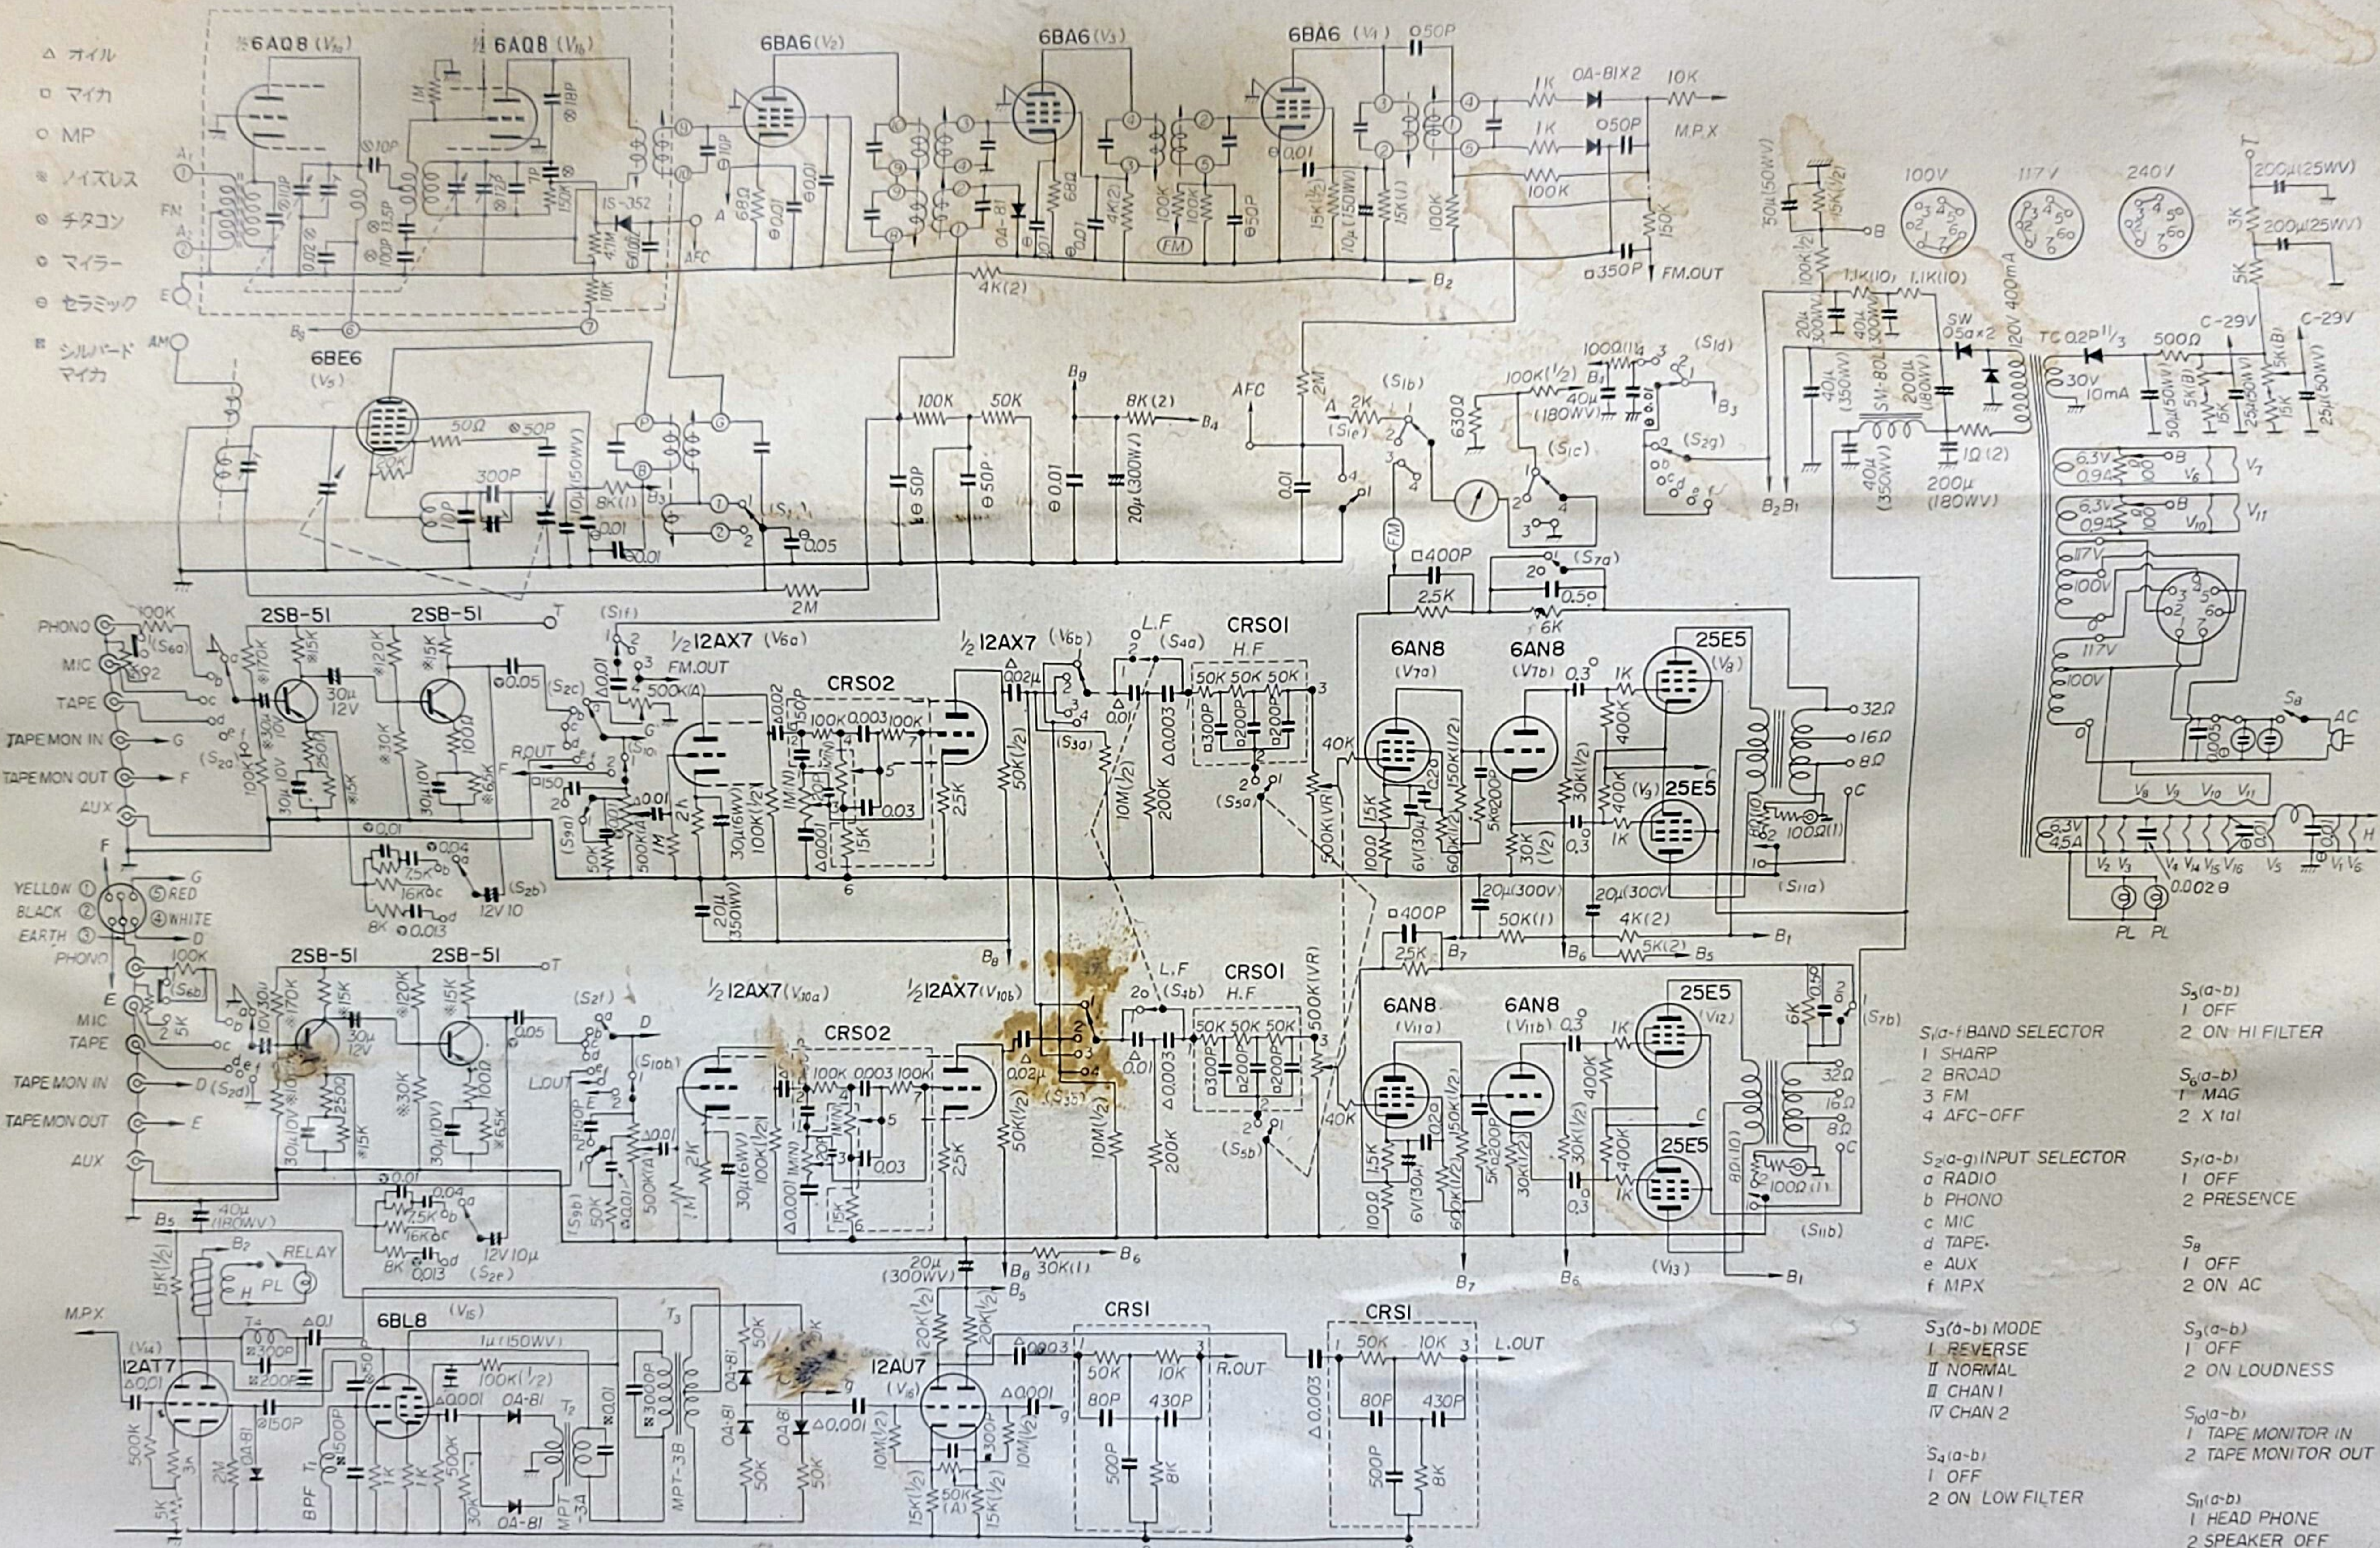

- S_{1(a-f)} BAND SELECTOR**
 1 SHARP
 2 BROAD
 3 FM
 4 AFC-OFF
- S_{2(a-g)} INPUT SELECTOR**
 a RADIO
 b PHONO
 c MIC
 d TAPE
 e AUX
 f MPX
- S_{3(a-b)} MODE**
 I REVERSE
 II NORMAL
 III CHAN I
 IV CHAN 2
- S_{4(a-b)}**
 1 OFF
 2 ON LOW FILTER
- S_{5(a-b)}**
 1 OFF
 2 ON HI FILTER
- S_{6(a-b)}**
 1 MAG
 2 X 1a
- S_{7(a-b)}**
 1 OFF
 2 ON AC
- S_{8(a-b)}**
 1 OFF
 2 ON LOUDNESS
- S_{10(a-b)}**
 1 TAPE MONITOR IN
 2 TAPE MONITOR OUT
- S_{11(a-b)}**
 1 HEAD PHONE
 2 SPEAKER OFF

(D3010M2)