


7-4. AU-717

7. SCHEMATIC DIAGRAM

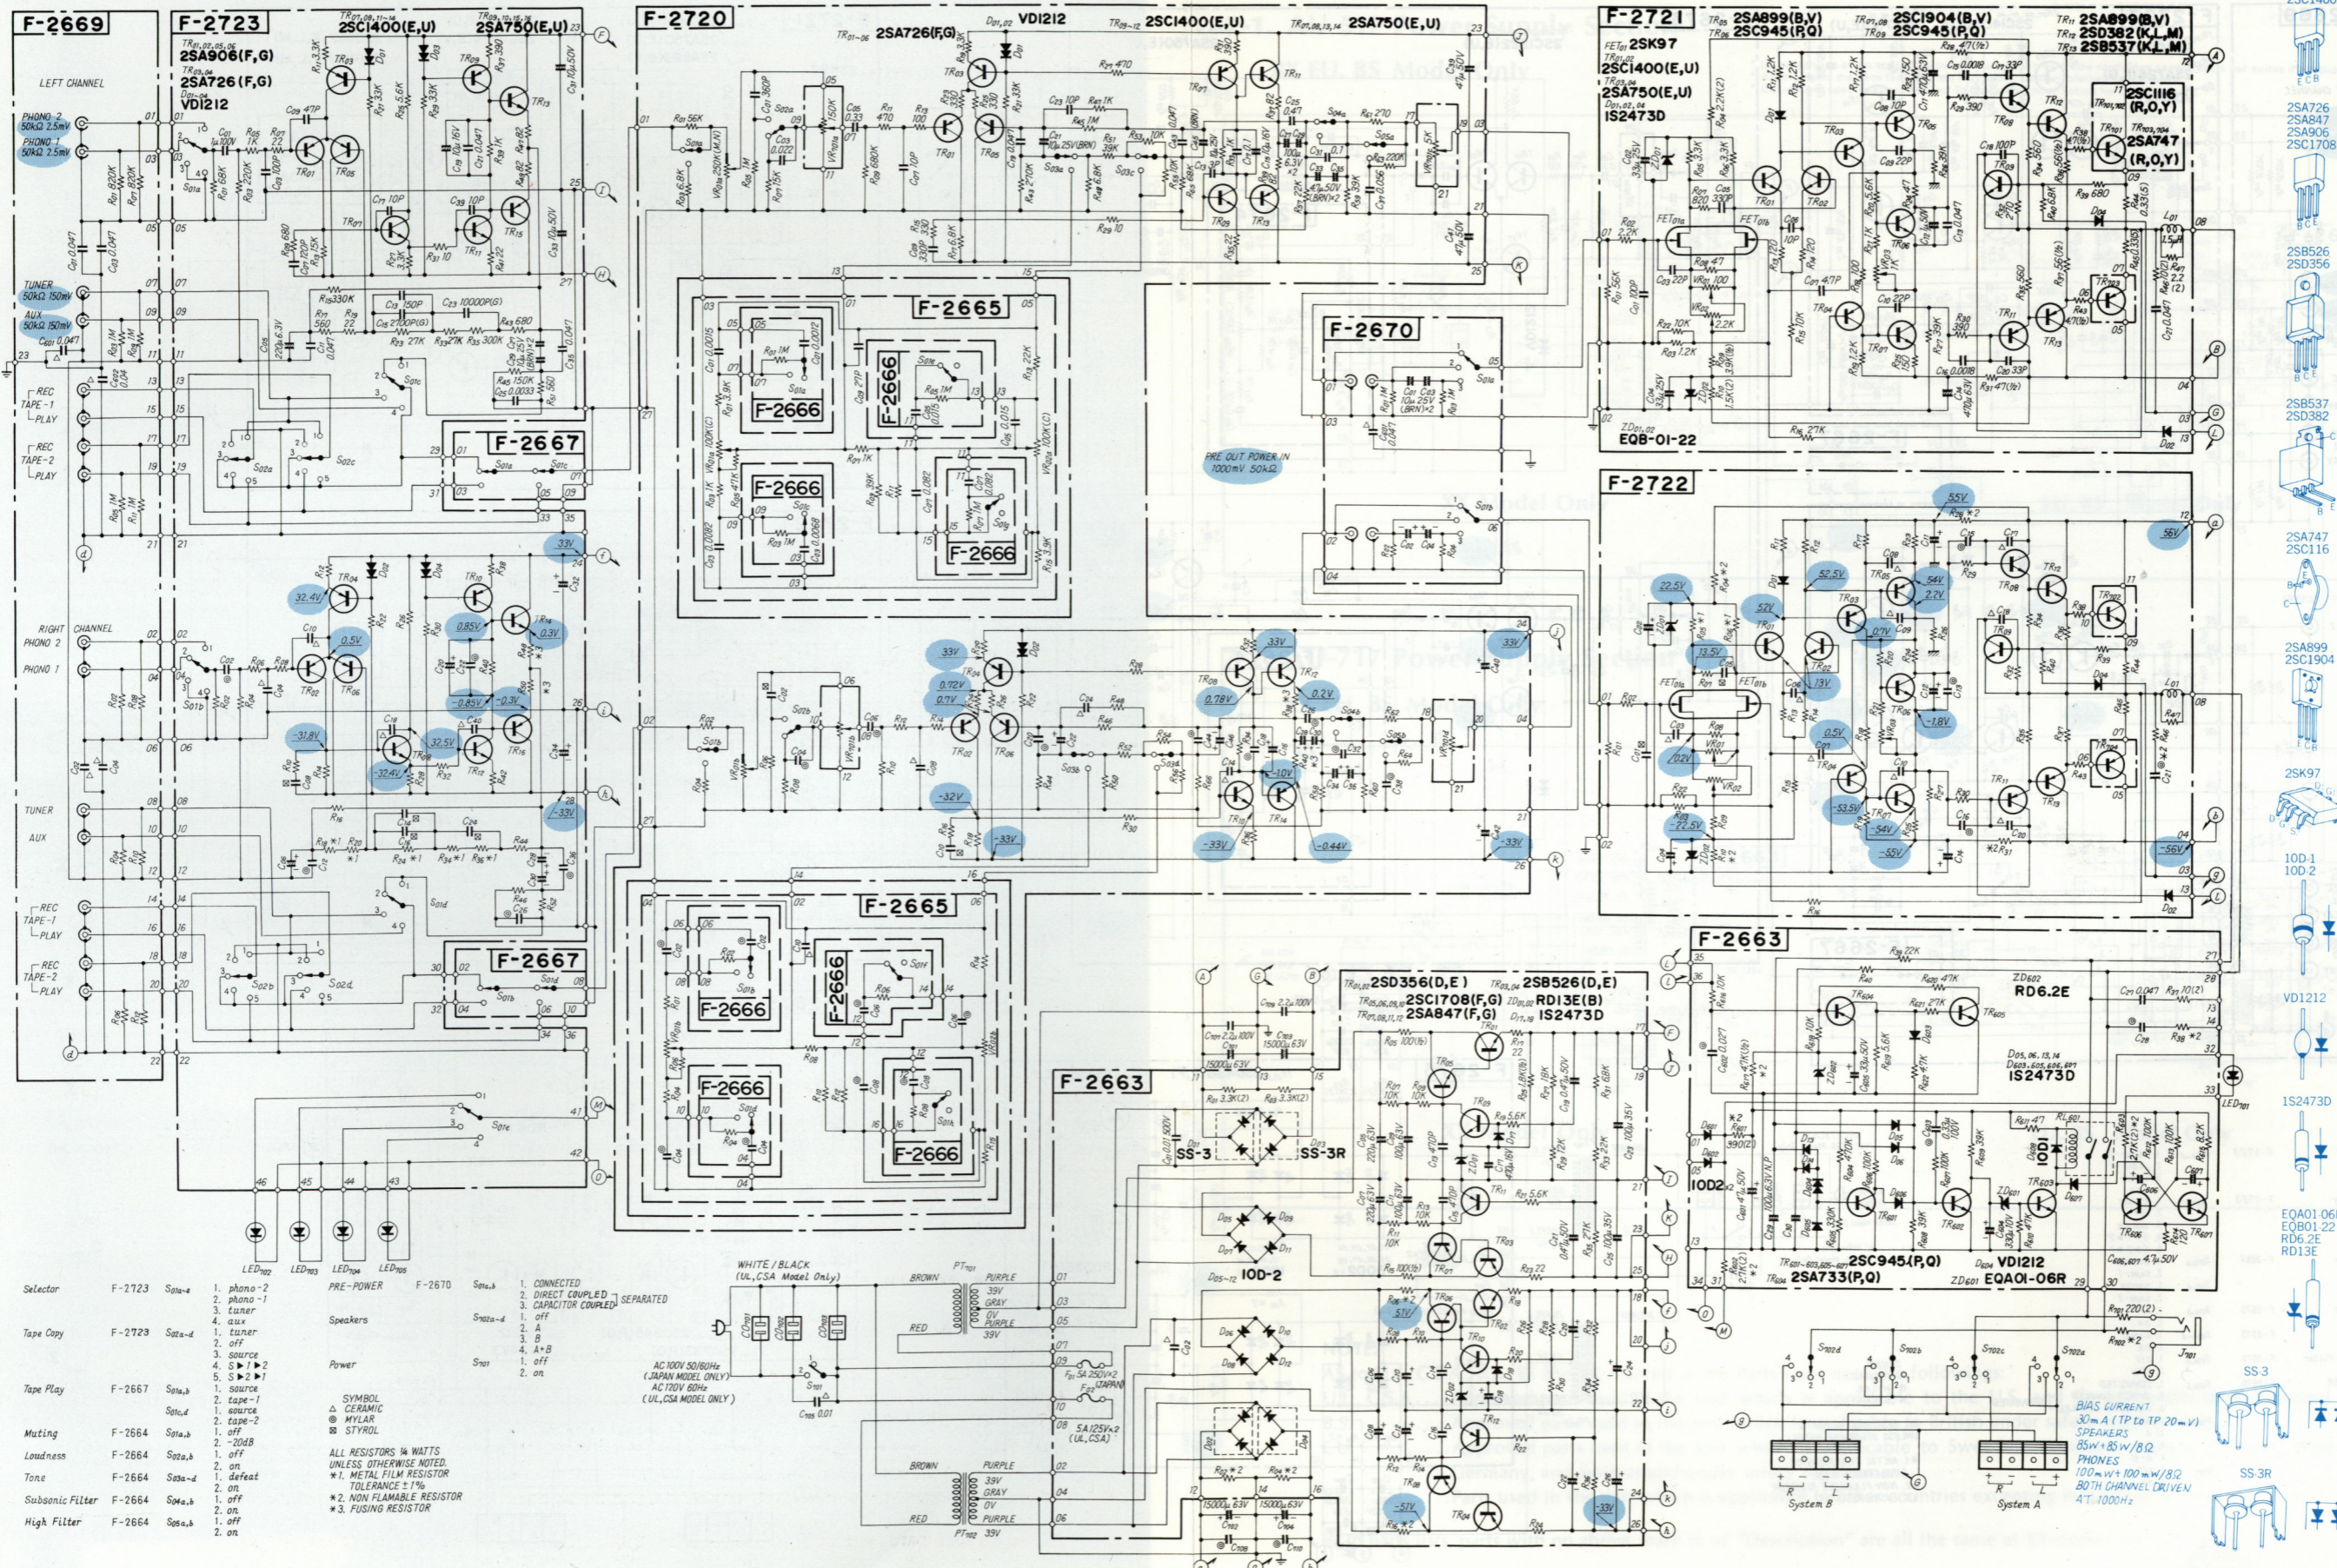

- | | | | |
|-----------------|--------|---------|---|
| Selector | F-2723 | S01-a | 1. phono-2
2. phono-1
3. tuner
4. aux |
| Tape Copy | F-2723 | S02-a-d | 1. tuner
2. off
3. source
4. S → 1
5. S → 2 |
| Tape Play | F-2667 | S03-a | 1. source
2. tape-1
3. tape-2 |
| Muting | F-2664 | S04-a,b | 1. off
2. -20dB |
| Loadness | F-2664 | S05-a,b | 1. off
2. on |
| Tone | F-2664 | S06-a-d | 1. defeat
2. on |
| Subsonic Filter | F-2664 | S07-a,b | 1. off
2. on |
| High Filter | F-2664 | S08-a,b | 1. off
2. on |
1. CONNECTED
2. DIRECT COUPLED
3. CAPACITOR COUPLED
4. SEPARATED
5. OFF
6. ON
- PRE-POWER F-2670 S09-a,b
- Speakers S09-a-d
- Power S09
- SYMBOL
 ▲ CERAMIC
 △ MYLAR
 ⊗ STYROL
- ALL RESISTORS 1/4 WATTS UNLESS OTHERWISE NOTED.
 *1. METAL FILM RESISTOR TOLERANCE ±1%
 *2. NON FLAMMABLE RESISTOR
 *3. FUSING RESISTOR

- 2SA733
- 2SA750
- 2SC945
- 2SC1222
- 2SC1400
- 2SA726
- 2SA847
- 2SA906
- 2SC1708
- 2SB526
- 2SD356
- 2SB537
- 2SD382
- 2SA747
- 2SC116
- 2SA899
- 2SC1904
- 2SK97
- 10D-1
- 10D-2
- VD1212
- IS2473D
- EQA01-06R
- EQB01-22
- RD6.2E
- RD13E
- SS-3
- SS-3R

1

2

3

4

5