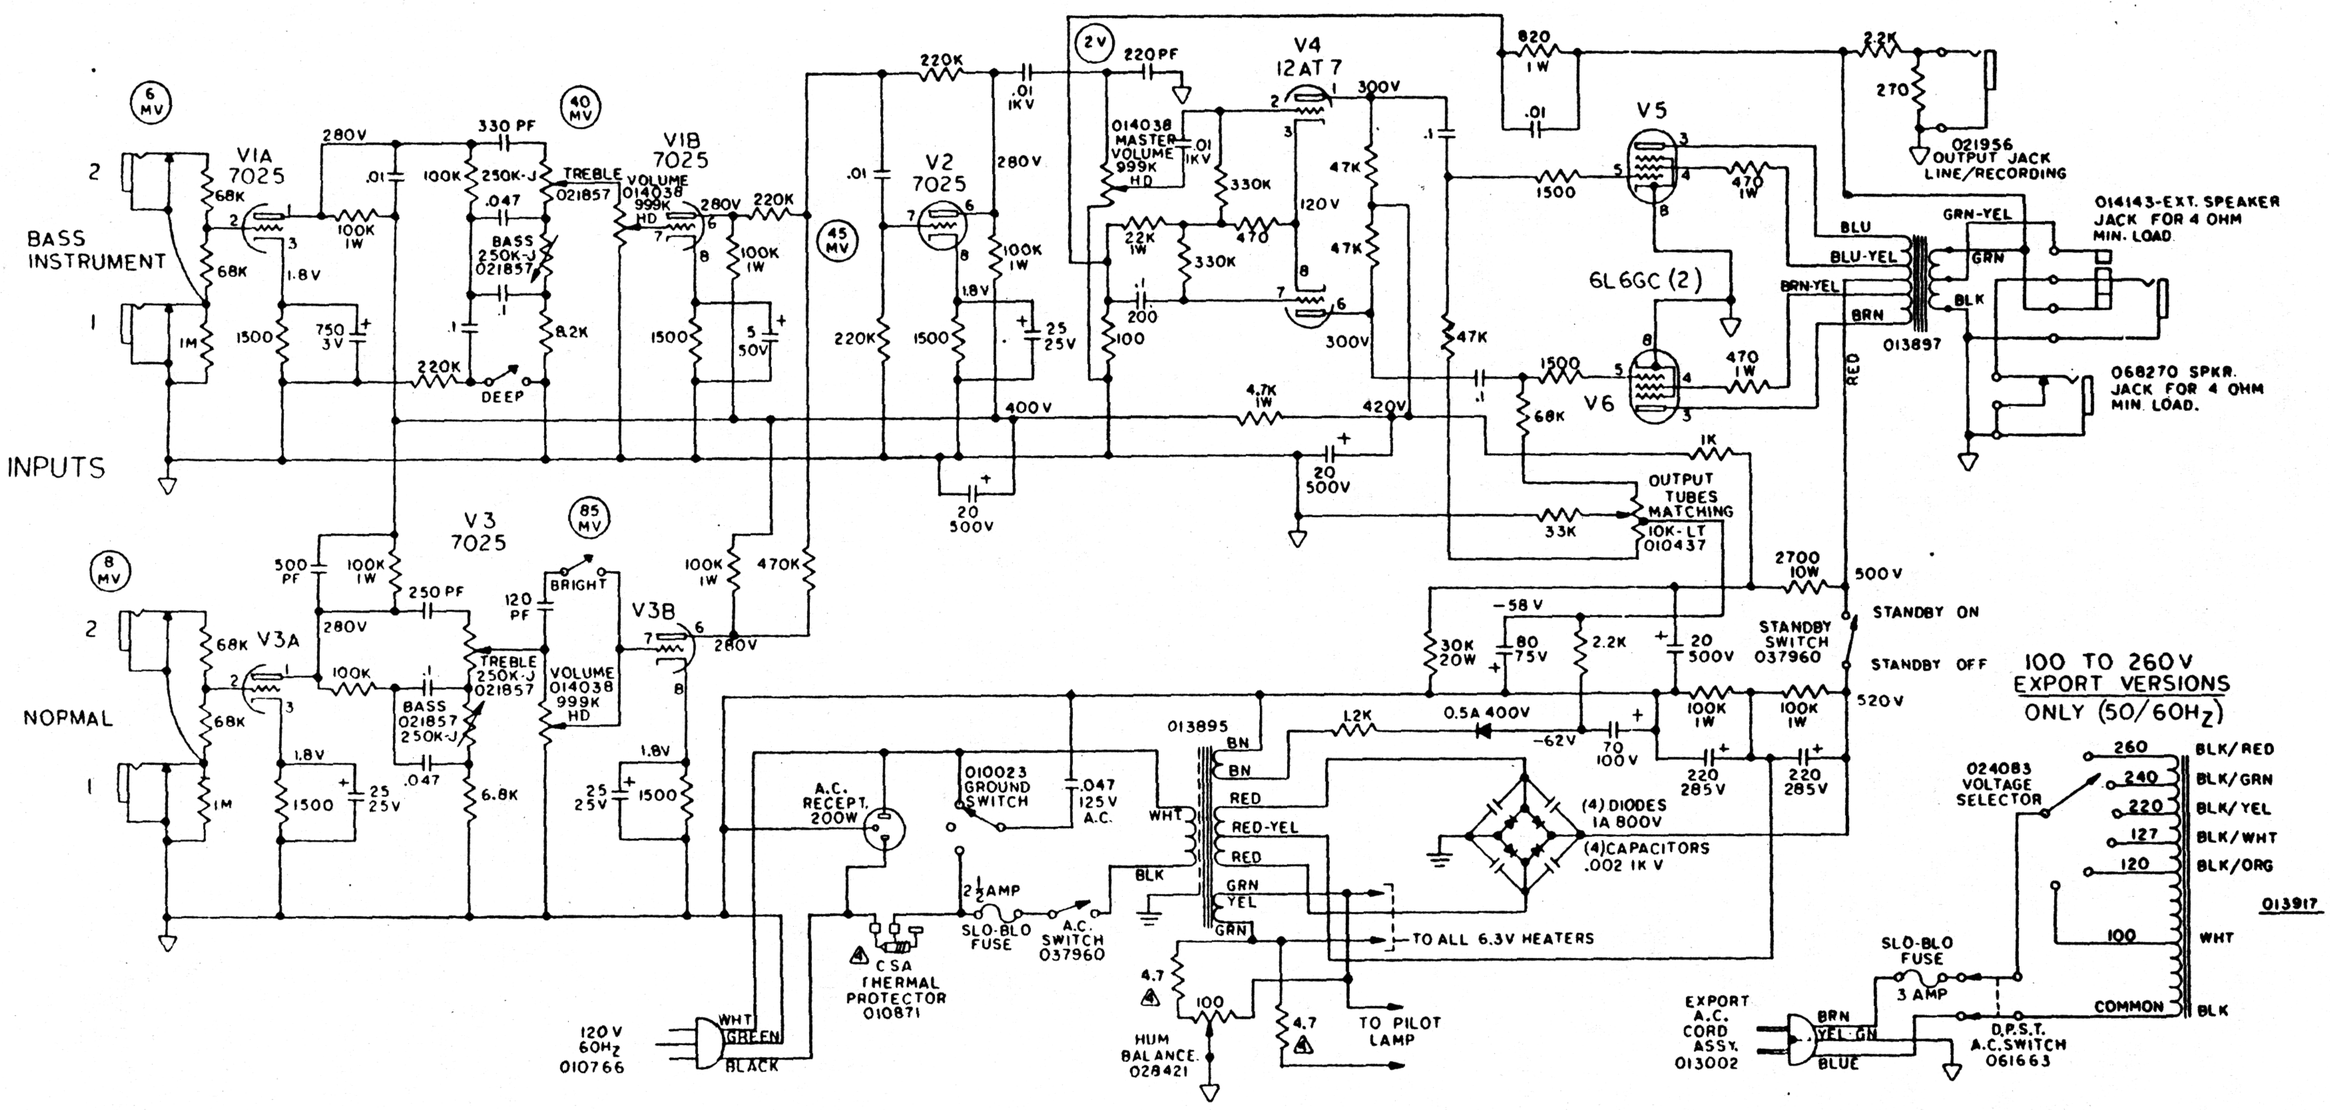

CAUTION:

500 VOLTS AVAILABLE. DISCONNECT POWER SUPPLY AND ALLOW AT LEAST 20 SECONDS FOR VOLTAGES TO BLEED OFF. BEFORE SERVICING AMPLIFIER.

NOTE GROUND SWITCH .047 125V A.C. AND A.C RECEPTACLE DELETED.

○ DENOTES TYPICAL 1KHZ SIGNAL FOR 10W OUTPUT WITH CONTROLS AT MAX.

Ⓐ USED IN SOME VERSIONS.

3. WHEN INSTALLING NEW 6L6'S RESET O.T. MATCHING FOR MIN. HUM.
2. ALL CAPACITORS AT LEAST 600 VOLT RATING IF NOT SPECIFIED.
1. ALL RESISTORS 1/2 WATT, 10% TOLERANCE IF NOT SPECIFIED.

NOTES: UNLESS OTHERWISE SPECIFIED

Fender / Rogers / Rhodes

CBS MUSICAL INSTRUMENTS — A DIVISION OF CBS, INC. FULLERTON, CALIFORNIA 92635

PART NAME			
SCHEMATIC BASSMAN 70 70 WATT RMS AMPLIFIER-DOMESTIC & EXPORT			
RELEASE	SIZE D	PART NO. 014229	REV A