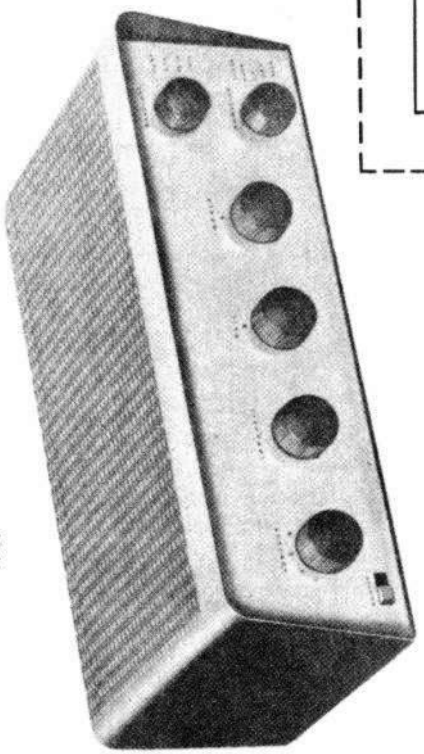

TAPE OUTPUT
TUNER
S1 RUMBLE FILTER ES621350
ON
OFF
C8 10K
C7 10K
R3 1M
ROLLOFF SWITCH-FLAT, 8, 12, 16 SWITCH SHOWN IN MOST COUNTER-CLOCKWISE POSITION
FUNCTION SWITCH-TUNER, TAPE, RIAA, AES, LP SWITCH SHOWN IN MOST COUNTER-CLOCKWISE POSITION
S3a ER621267
REAR
S2 ER621286
C6 2K
C5 1K
C4 270
C20 100
R1 220K ±10%
C1 4.7K
R2 68K
C3 100
C2 4.7K
C16 10K, GMV
VOLUME R5 1M RV621264
R4 68K
C15 4.7K
ER621286 S4
R18 47K
R19 270K ±10%
CONTOUR SWITCH-1, 2, 3, 4 SWITCH SHOWN IN MOST COUNTER-CLOCKWISE POSITION
C10 .02/200
C11 .05/200
R6 25K
TREBLE RV621262
R7 6.8K ±10%
R11 250K
RV621263 BASS
C9 .22/200V.
V1a 12AX7
C12 .05/400
R10 220K ±10%
R9 56K ±10%
R8 390 ±10%
R17 1.5K ±10%
V1b 12AX7
R12 470K
R13 270-2W ±10%
C13A 100MFD 50
R16 220K, ±10%
R15 12K ±10%
C14 .05/400
R14 470K
V2 6V6GT
V3 6V6GT
T2 FT621218
GN
RD-BK
RD
BL
YL
BN
16
8
G
R25 100K
R27 33K
R28 1K
C18 .1/200
C13B 10MFD 350
C13C 20MFD 350
C13D 40MFD 350
R22 270K ±10%
R25 270K ±10%
V4a 12AX7
V4b 12AX7
C17 10K
S3b ER621267
FRONT
R20 47K
R21 820 ±10%
R23 470K
R24 1.5K ±10%
PHONO INPUT
TAPE INPUT
117VAC 60CPS
POWER
AC OUTLET
BK
C19 .047/600
T1 FT621217
RD
RD-WH
YL
GN
V5 5Y3GT
N# 47
FIL.
R29 4.7-1W
PREAMP FIL.
R31 68
R30 68

NOTE:
UNLESS OTHERWISE SHOWN
ALL RESISTORS ½ WATT ±20%
ALL CAPACITOR VALUES WITH DECIMAL POINT TO BE PAPER, IN MFD
ALL CAPACITOR VALUES WITHOUT DECIMAL POINT TO BE GENERAL PURPOSE CERAMICS 500 WVDC, IN MMF

1957