SCHEMATIC DIAGRAM

SHERWOOD

MODEL S — 402CP
STEREO AMPLIFIER

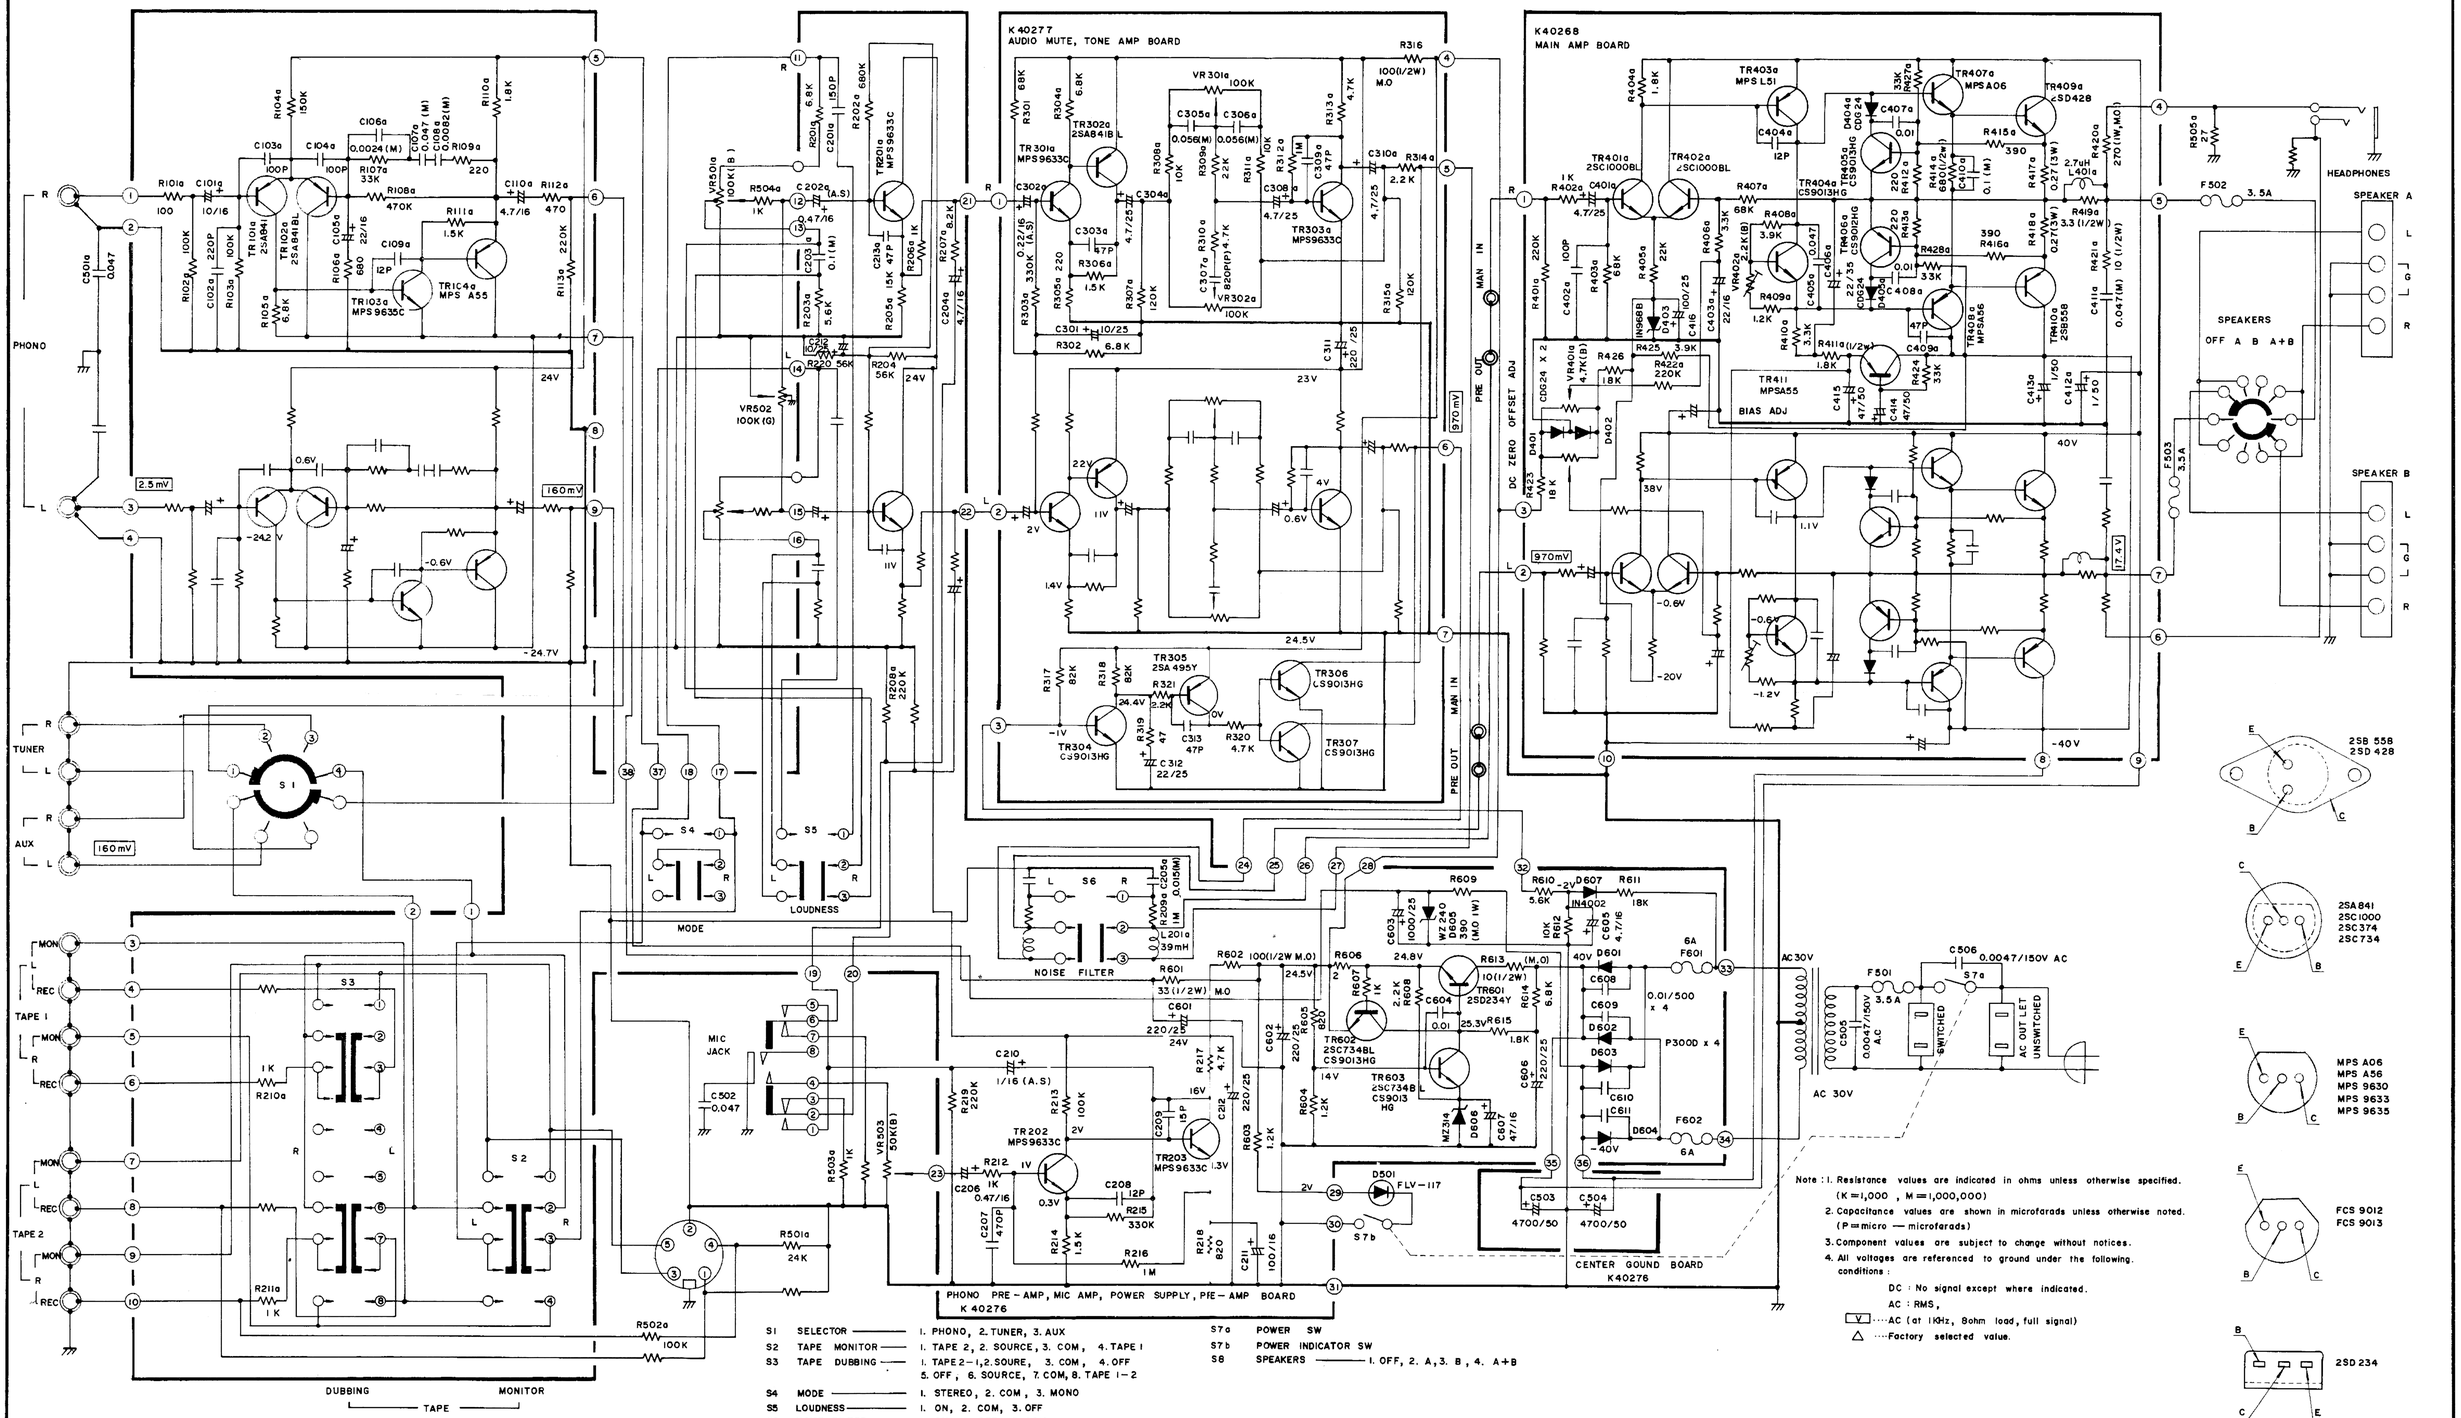

S1 SELECTOR —— 1. PHONO, 2. TUNER, 3. AUX
S2 TAPE MONITOR —— 1. TAPE 2, 2. SOURCE, 3. COM, 4. TAPE 1
S3 TAPE DUBBING —— 1. TAPE 2—1, 2. SOURE, 3. COM, 4. OFF
5. OFF, 6. SOURCE, 7. COM, 8. TAPE 1—2
S4 MODE —— 1. STEREO, 2. COM, 3. MONO
S5 LOUDNESS —— 1. ON, 2. COM, 3. OFF
S6 NOISE FILTER —— 1. ON, 2. OFF, 3. COM
S7a POWER SW
S7b POWER INDICATOR SW
S8 SPEAKERS —— 1. OFF, 2. A, 3. B, 4. A+B

Note : 1. Resistance values are indicated in ohms unless otherwise specified. (K = 1,000 , M = 1,000,000)
2. Capacitance values are shown in microfarads unless otherwise noted. (P = micro — microfarads)
3. Component values are subject to change without notices.
4. All voltages are referenced to ground under the following conditions :
DC : No signal except where indicated.
AC : RMS,
▽ ····AC (at 1KHz, 8ohm load, full signal)
△ ····Factory selected value.