

SERVICE TECHNICAL INFORMATION


ONE POINT REPAIR

UTSUNOMIYA, AUGUST 15, 1998
 REF. NO.: SI-98-019
 CUSTOMER RELATIONS & SERVICE DIV.

MODELS : XR-H3MD
 SUBJECT : MD does not operate

DESCRIPTION : In the model mentioned above, the MD will not operate when PR003 and PR004 are broken. Upon parts replacement, change PR003 and PR004 to the following parts.
 Parts replacement : PR003 / PR004 2A → 3A

REMEDIES :

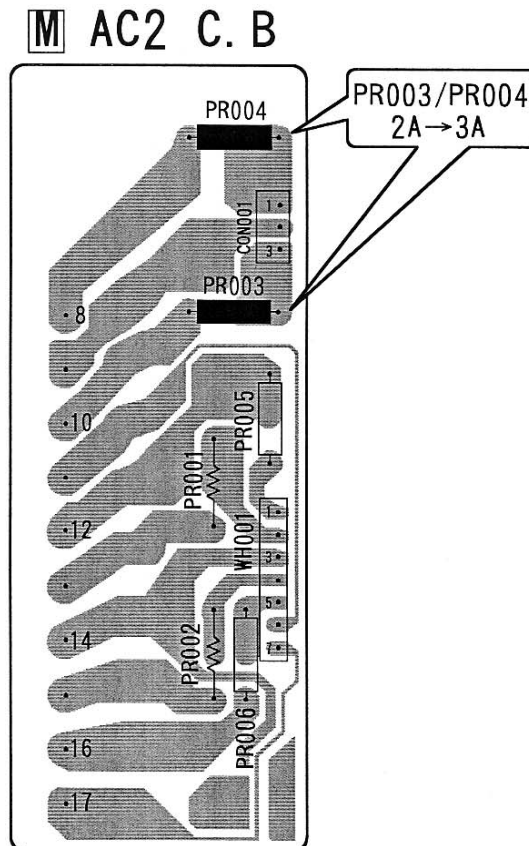

Ref.	Part name	Part No.	Remarks
PR003/PR004	PROTECTOR, 3A 491 60V	87-A90-093-080	