


CT-401/403

KXF-W1030/W1030-S


KXF-W3030/W3030E/W3030-S

SERVICE MANUAL

© 2000-2/B51-5600-00 (K/K) 3473

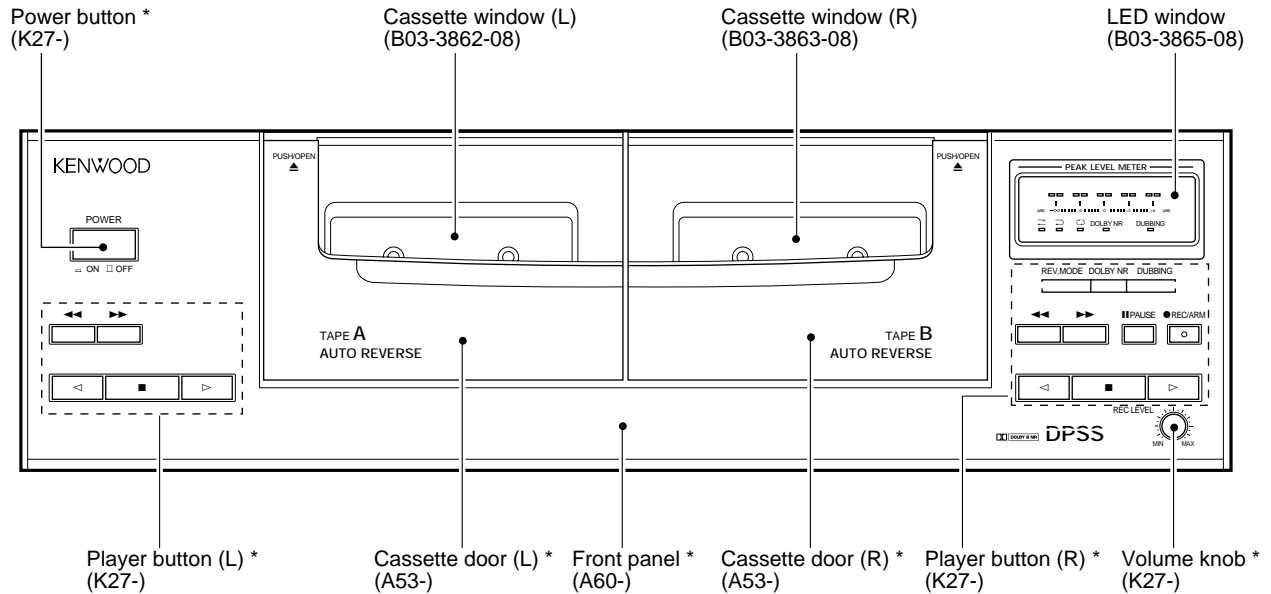

Metallic cabinet * (A01-)

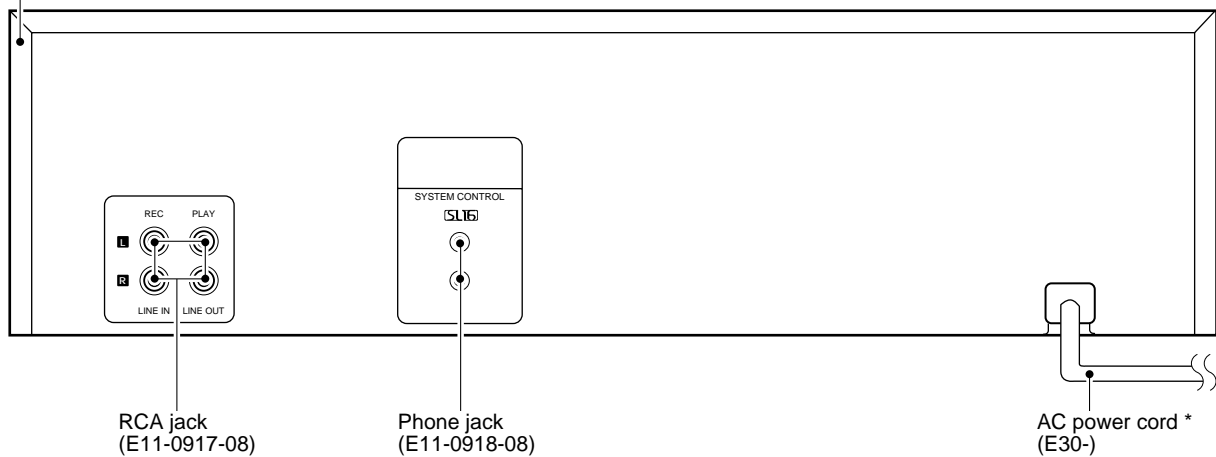

* Illustration is CT-403/KXF-W3030.

* Refer to parts list on page 13.



CT-401/403/KXF-W1030/W3030


CONTENTS / ACCESSORIES

Contents


CONTENTS / ACCESSORIES	2	SCHEMATIC DIAGRAM	7
CONTROLS	2	EXPLODED VIEW	12
CIRCUIT DESCRIPTION	3	PARTS LIST	13
ADJUSTMENT	4	SPECIFICATIONS	Back cover
PC BOARD	5		

Accessories


Audio cord..... (2)
(E30-0505-05)

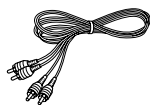

System control cord ... (1)
(E30-2816-05)

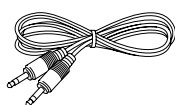


AC plug adaptor..... (1)
(E03-0115-05)

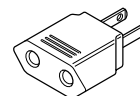

(Except for Europe and Australia)
For the unit with an European AC
plug in areas other than Europe.


CONTROLS

CT-401/KXF-W1030

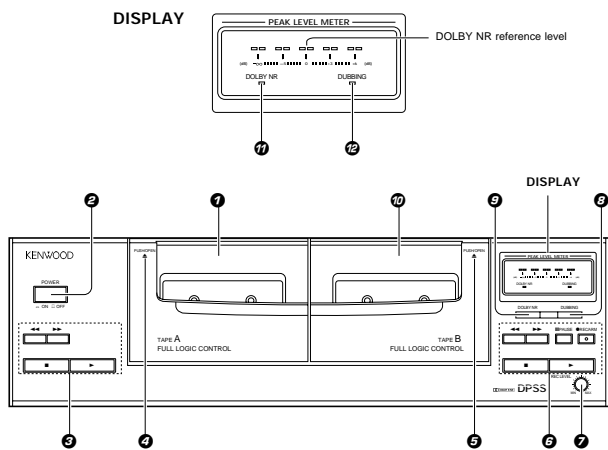

- 1 Deck A
Playback-only tape deck.
- 2 POWER switch:
Press to turn power ON and OFF.
- 3 Deck A operation keys
▶ key:
Play key.
◀ key:
Rewind key. (for fast winding of tape toward the left reel seen from you)
▶▶ key:
Fast forward key (for fast winding of tape toward the right reel seen from you)
■ key:
Stop key.
- 4 Cassette holder (Deck A)
Press the area marked "PUSH/OPEN ▲" to load or eject a tape.
- 5 Cassette holder (Deck B)
Press the area marked "PUSH/OPEN ▲" to load or eject a tape.
- 6 Deck B operation keys
▶ key:
Play key.
◀ key:
Rewind key (for fast winding of tape toward the left reel seen from you)
▶▶ key:
Fast forward key (for fast winding of tape toward the right reel seen from you)
■ key:
Stop key.
● REC/ARM key:
Press in stop mode to start recording or press in record mode to let the recording pause after leaving a non-recorded blank of 4 seconds.
- 7 Indicator : (Recording indicator)
■ PAUSE key:
Press to let recording pause temporarily.
- 8 REC LEVEL control:
Adjusts the recording level.
- 9 DUBBING key:
Press to start tape dubbing.
- 10 DOLBY NR key:
Press to select the Dolby Noise Reduction mode.
- 11 Deck B
Tape deck which is capable of both playback and recording.
- 12 DOLBY NR indicator
13 DUBBING indicator

CT-403/KXF-W3030

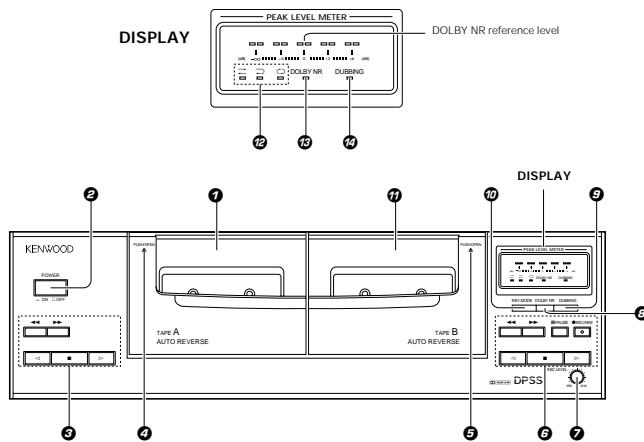

- 1 Deck A
Playback-only tape deck.
- 2 POWER switch:
Press to turn power ON and OFF.
- 3 Deck A operation keys / indicators
◀, ▶ keys : (Play keys)
◀, ▶ indicators : (direction indicators)
Tapes are played in the directions indicated by their respective indicators.
- 4 Deck B
Tape deck which is capable of both playback and recording.
- 5 DOLBY NR indicator
6 DUBBING indicator
- 7 Deck B operation keys
◀, ▶ keys : (direction indicators)
▶▶ key:
Fast forward key (for fast winding of tape toward the left reel seen from you)
▶▶▶ key:
Fast forward key (for fast winding of tape toward the right reel seen from you)
■ key:
Stop key.
● REC/ARM key:
Press in stop mode to start recording or press in record mode to let the recording pause after leaving a non-recorded blank of 4 seconds.
- 8 Indicator : (Recording indicator)
■ PAUSE key:
Press to let recording pause temporarily.
- 9 REC LEVEL control:
Adjusts the recording level.
- 10 DOLBY NR key:
Press to select the Dolby Noise Reduction mode.
- 11 DUBBING key:
Press to select the DUBBING mode.
- 12 REV.MODE key:
Press to select the REVERS mode.
- 13 Deck B
This deck is capable of both playback and recording.
- 14 Reverse mode indicators
15 DOLBY NR indicator
16 DUBBING indicator

1. Pin description of microprocessor. LC865612A(IC302)

Pin No.	Pin Name	I/O	Description	Active	
				H	L
1	AC-CHK	I	Power failure input.	AC on	AC off
2,3	VSS	I	Connected to ground.		
4	SYS-DATA	I	System control data in.		
5	SYS-BUSY	I/O	System control busy output.		
6	DOLBY	O	Dolby NR output.	off	on
7	METER-GAIN	O	Meter amplifier gain control.	other	DPSS
8	REC/PB	O	Dolby NR REC/PB control.	PB	REC
9	PB-EQ/NORMAL	O	PB EQ. switch control.	70u	120u
10	REC-EQ-TYPE 1	O	Rec EQ. switch (TYPE 1) control.	○	
11	REC-EQ-TYPE 2	O	Rec EQ. switch (TYPE 2) control.	○	
12	SYS-DO	O	Connected with system data.		
13	LED-A-FWD PLAY	O	LED control port of A FWD PLAY.		○
14	LED-A-REV PLAY	O	LED control port of A REV PLAY.		○
15	LED-B-REV PLAY	O	LED control port of B REV PLAY.		○
16-20	NC	-	Unused.		
21	SOL-A	O	A deck solenoid control.		
22	SOL-B	O	B deck solenoid control.		
23	VSS	-	Connected to ground.		
24	VDD	-	Power supply(+5.0v).		
25	MECHA-VCC	-	Control port of power supply for deck.	Play	Stop
26	REC	O	Control port of REC/PLAY.	Rec	Other
27	REC-MUTE	O	Muting control port for recording.	Other	Rec
28	A/B	O	Control port of A or B deck.	A play	Other
29	DUBBING	O	Unused.		
30	BIAS	O	Bias control port.	Other	Rec
31	INPUT-MUT	O	Input muting control.	off	on
32	LINE-MUTE	O	Line muting control.	off	on
33	A-REEL	I	Reel puls input of A deck.		
34	HALF-SW	I	Half switch input of A deck.		
35	A-MODE-SW	I	Mode switch input of A deck.	Stop	Play
36	B-REEL	I	Reel puls input of B deck.		
37	B-HALF-SW	I	Half switch input of B deck.		
38	B-MODE-SW	I	Mode switch input of B deck.		
39	B-REC-FWD-SW	I	Forward rec detection switch input.		
40	B-REC-REV-SW	I	Reverse rec detection switch input.		
41	DO	O	Data output to IC601(BU2099FV).		
42	SI	-	Unused.		
43	CLK	O	Clock output to IC601(BU2099FV).		
44	LCK	O	IC601(BU2099FV) LCK.		
45	OE	O	IC601(BU2099FV) OE.		
46	NC	-	Unused.		
47	SDA	O	EE PROM(IC304) SDA.		
48	SCL	O	EE PROM(IC304) SCL.		
49	NC	-	Unused.		
50	RESET	I	Reset signal input.		○
51	VDD	-	Power supply(+5.0v).		
52	NC	-	Unused.		
53	VSS	-	Connected to ground.		
54	CF 6.0 MHz	-	Main system clock.		
55	CF- 6.0 MHz	-	Main system clock.		
56	VDD	-	Power supply(+5.0v).		
57-59	K1-K3	I	Key(1-3) input.		
60	MODE-SW	I	Mode switch input.		
61	NC	-	Unused.		
62	A-CRO2	I	A CrO2 switch input.	CrO2	Nor
63	B-CRO2	I	B CrO2 switch input.	CrO2	Nor
64	METER	I	Input port of level meter.		

2. Pin description of LED driver. (BU2099FV ,IC601)

Pin No.	Pin Name	Description	Active		Remarks
			H	L	
6	L1	Level Meter	X	○	
7	L2	Level Meter	X	○	
8	L3	Level Meter	X	○	
9	L4	Level Meter	X	○	
10	L5	Level Meter	X	○	
11	A-REV	1 WAY/1WAY	X	○	W3030 only
12	B	1WAY/REV	X	○	W3030 only
13	C	REV/REV	X	○	W3030 only
14	B-FWD	B-FWD	X	○	W3030 only
15	REC	REC LED	X	○	
16	NR	DOLBY NR LED	off	on	
17	DUBBING	DUBBING LED	off	on	

○ : LED lights on X : LED lights off

4. Mode SW

Port	SW1	SW2	SW3
(Pin 60)	1 WAY + 1 WAY	1 WAY + REV.	REV. + REV.

() u-COM port

3. Key matrix

Port	SW1	SW2	SW3	SW4	SW5	SW6
K1 (Pin 57)	A FWD PLAY	* A REV PLAY	A STOP	A FF	A REW	-
K2 (Pin 58)	B FWD PLAY	* B REV PLAY	B STOP	B FF	B REW	REC/ ARM
K3 (Pin 59)	* REV. MODE	DUBBING	DOLBY NR	B PAUSE	-	-


* KXF-W3030 only
() u-COM port

CT-401/403/KXF-W1030/W3030


ADJUSTMENT

No.	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	CASSETTE DECK SETTINGS	ALIGNMENT POINT	ALIGN FOR	FLG.
CASSETTE DECK SECTION		TAPE: NORMAL, DOLBY: OFF, INPUT: LINE IN			0 dBs = 0.775 V		
I. REC/PLAY HEAD							
[1]	DEMAGNETIZATION	-	-	POWER OFF Remove the cassette door.	REC/PLAY head	Demagnetize the REC/PLAY head with a head demagnetizer.	
[2]	CLEANING	-	-	PLAY	REC/PLAY head, erase head, capstan pinch roller	Clean the REC/PLAY head, erase head, capstan and pinch roller using a cotton swab slightly damped with alcohol.	
[3]	AZIMUTH	(A) MTT-114, TCC-153 0 kHz, -10 dB	(B)	PLAY	Azimuth adjustment screw	Maximum output.	(a) (b)
II. DC BOARD							
[1]	TAPE SPEED	(A) MTT-111, TCC-110 3 kHz	(B)	PLAY	SFR301	Adjust the tape speed so that a 3 kHz signal is produced at the center of the tape.	
III. PC BOARD							
< 1 >	PLAYBACK LEVEL	MTT-150 400 Hz (200 nWb)	(B)	PLAY	DECK B SFR101 (L) SFR102 (R)	Output level : ± 1 dBs	
< 2 >	RECORD LEVEL	(A) 1 kHz, -20 dBs	(B)	Record 1kHz and 10kHz in alternation and playback.	SFR107 (L) SFR108 (R)	0 dBs \pm 3 dBs	
< 3 >	BIAS CURRENT	(A) 1 kHz, -20 dBs 10 kHz, -20 dBs	(B)	Record and playback at maximum REC volume position.	SFR105 (L) SFR106 (R)	Record 1 kHz and 10 kHz in alternation and adjust the variable resistors which control the bias current so that the playback level is obtained 0 dBs \pm 3 dBs.	
< 4 >	REC BIAS OSC FREQUENCY	-	-	Recording	L107	105 kHz \pm 3 kHz	(c)



SYSTEM CONNECTIONS

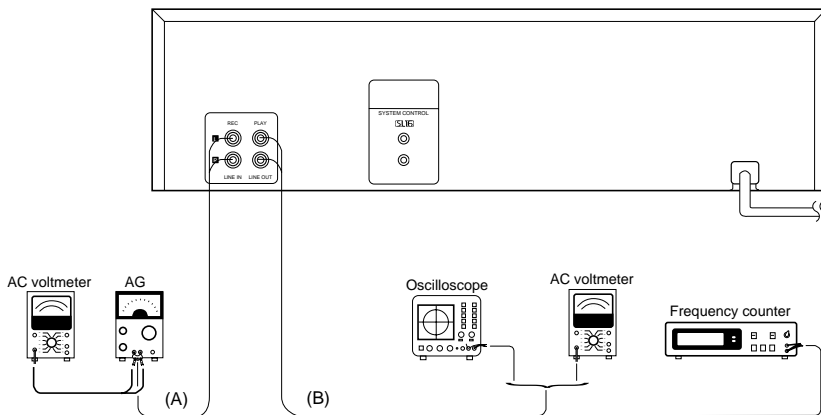


(a) AZIMUTH ADJUSTMENT

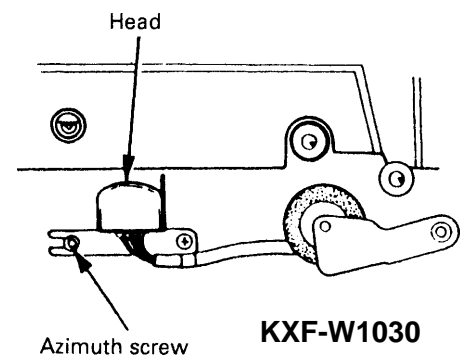

(b) AZIMUTH ADJUSTMENT

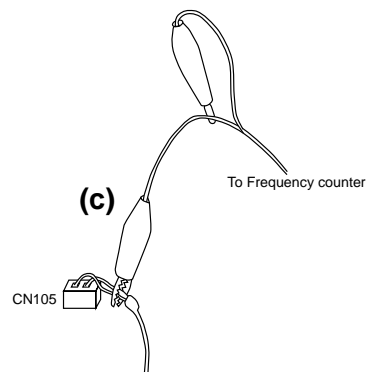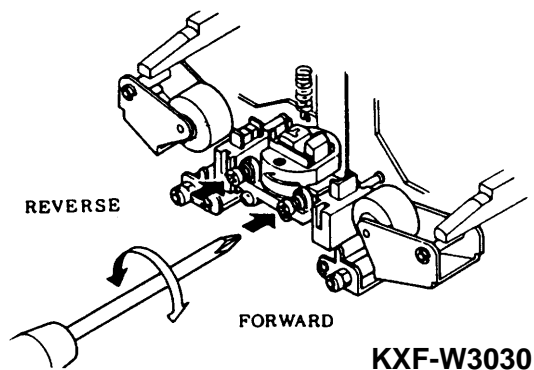


PC BOARD(Component side view)

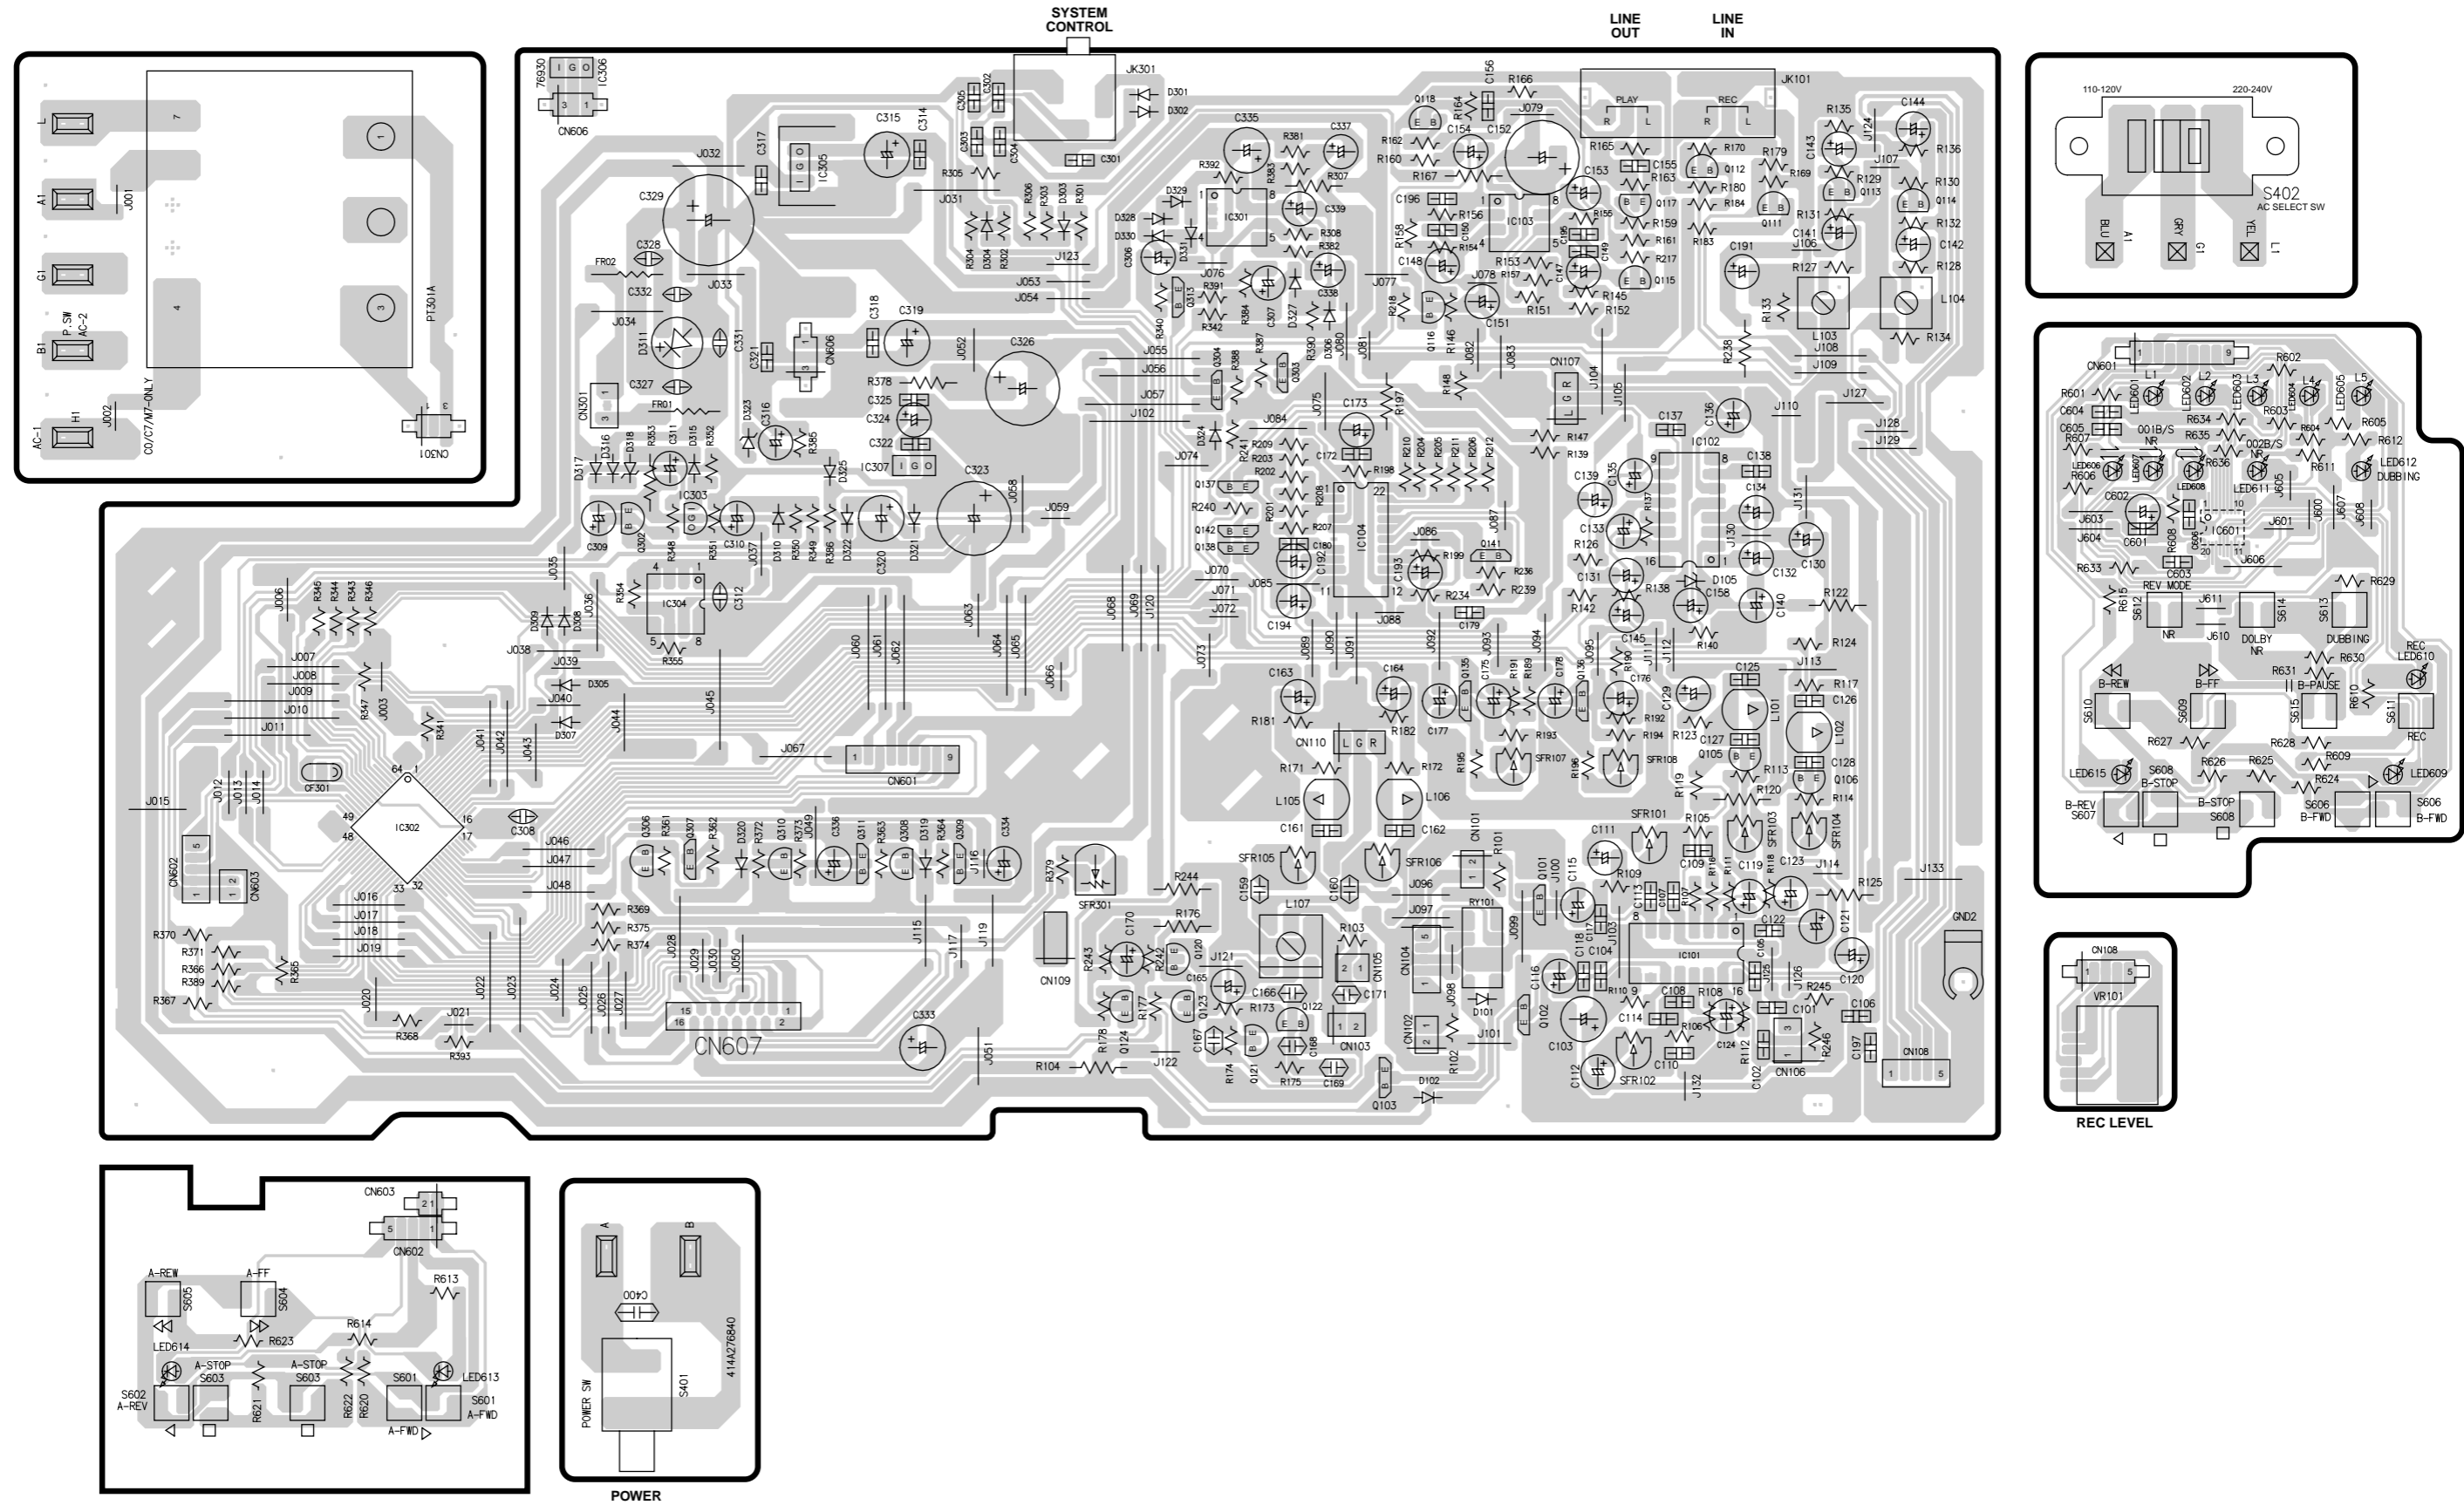




Refer to the schematic diagram for the value of resistors and capacitors.



CASSETTE DECK MECHANISM ASS'Y

MAIN PCB

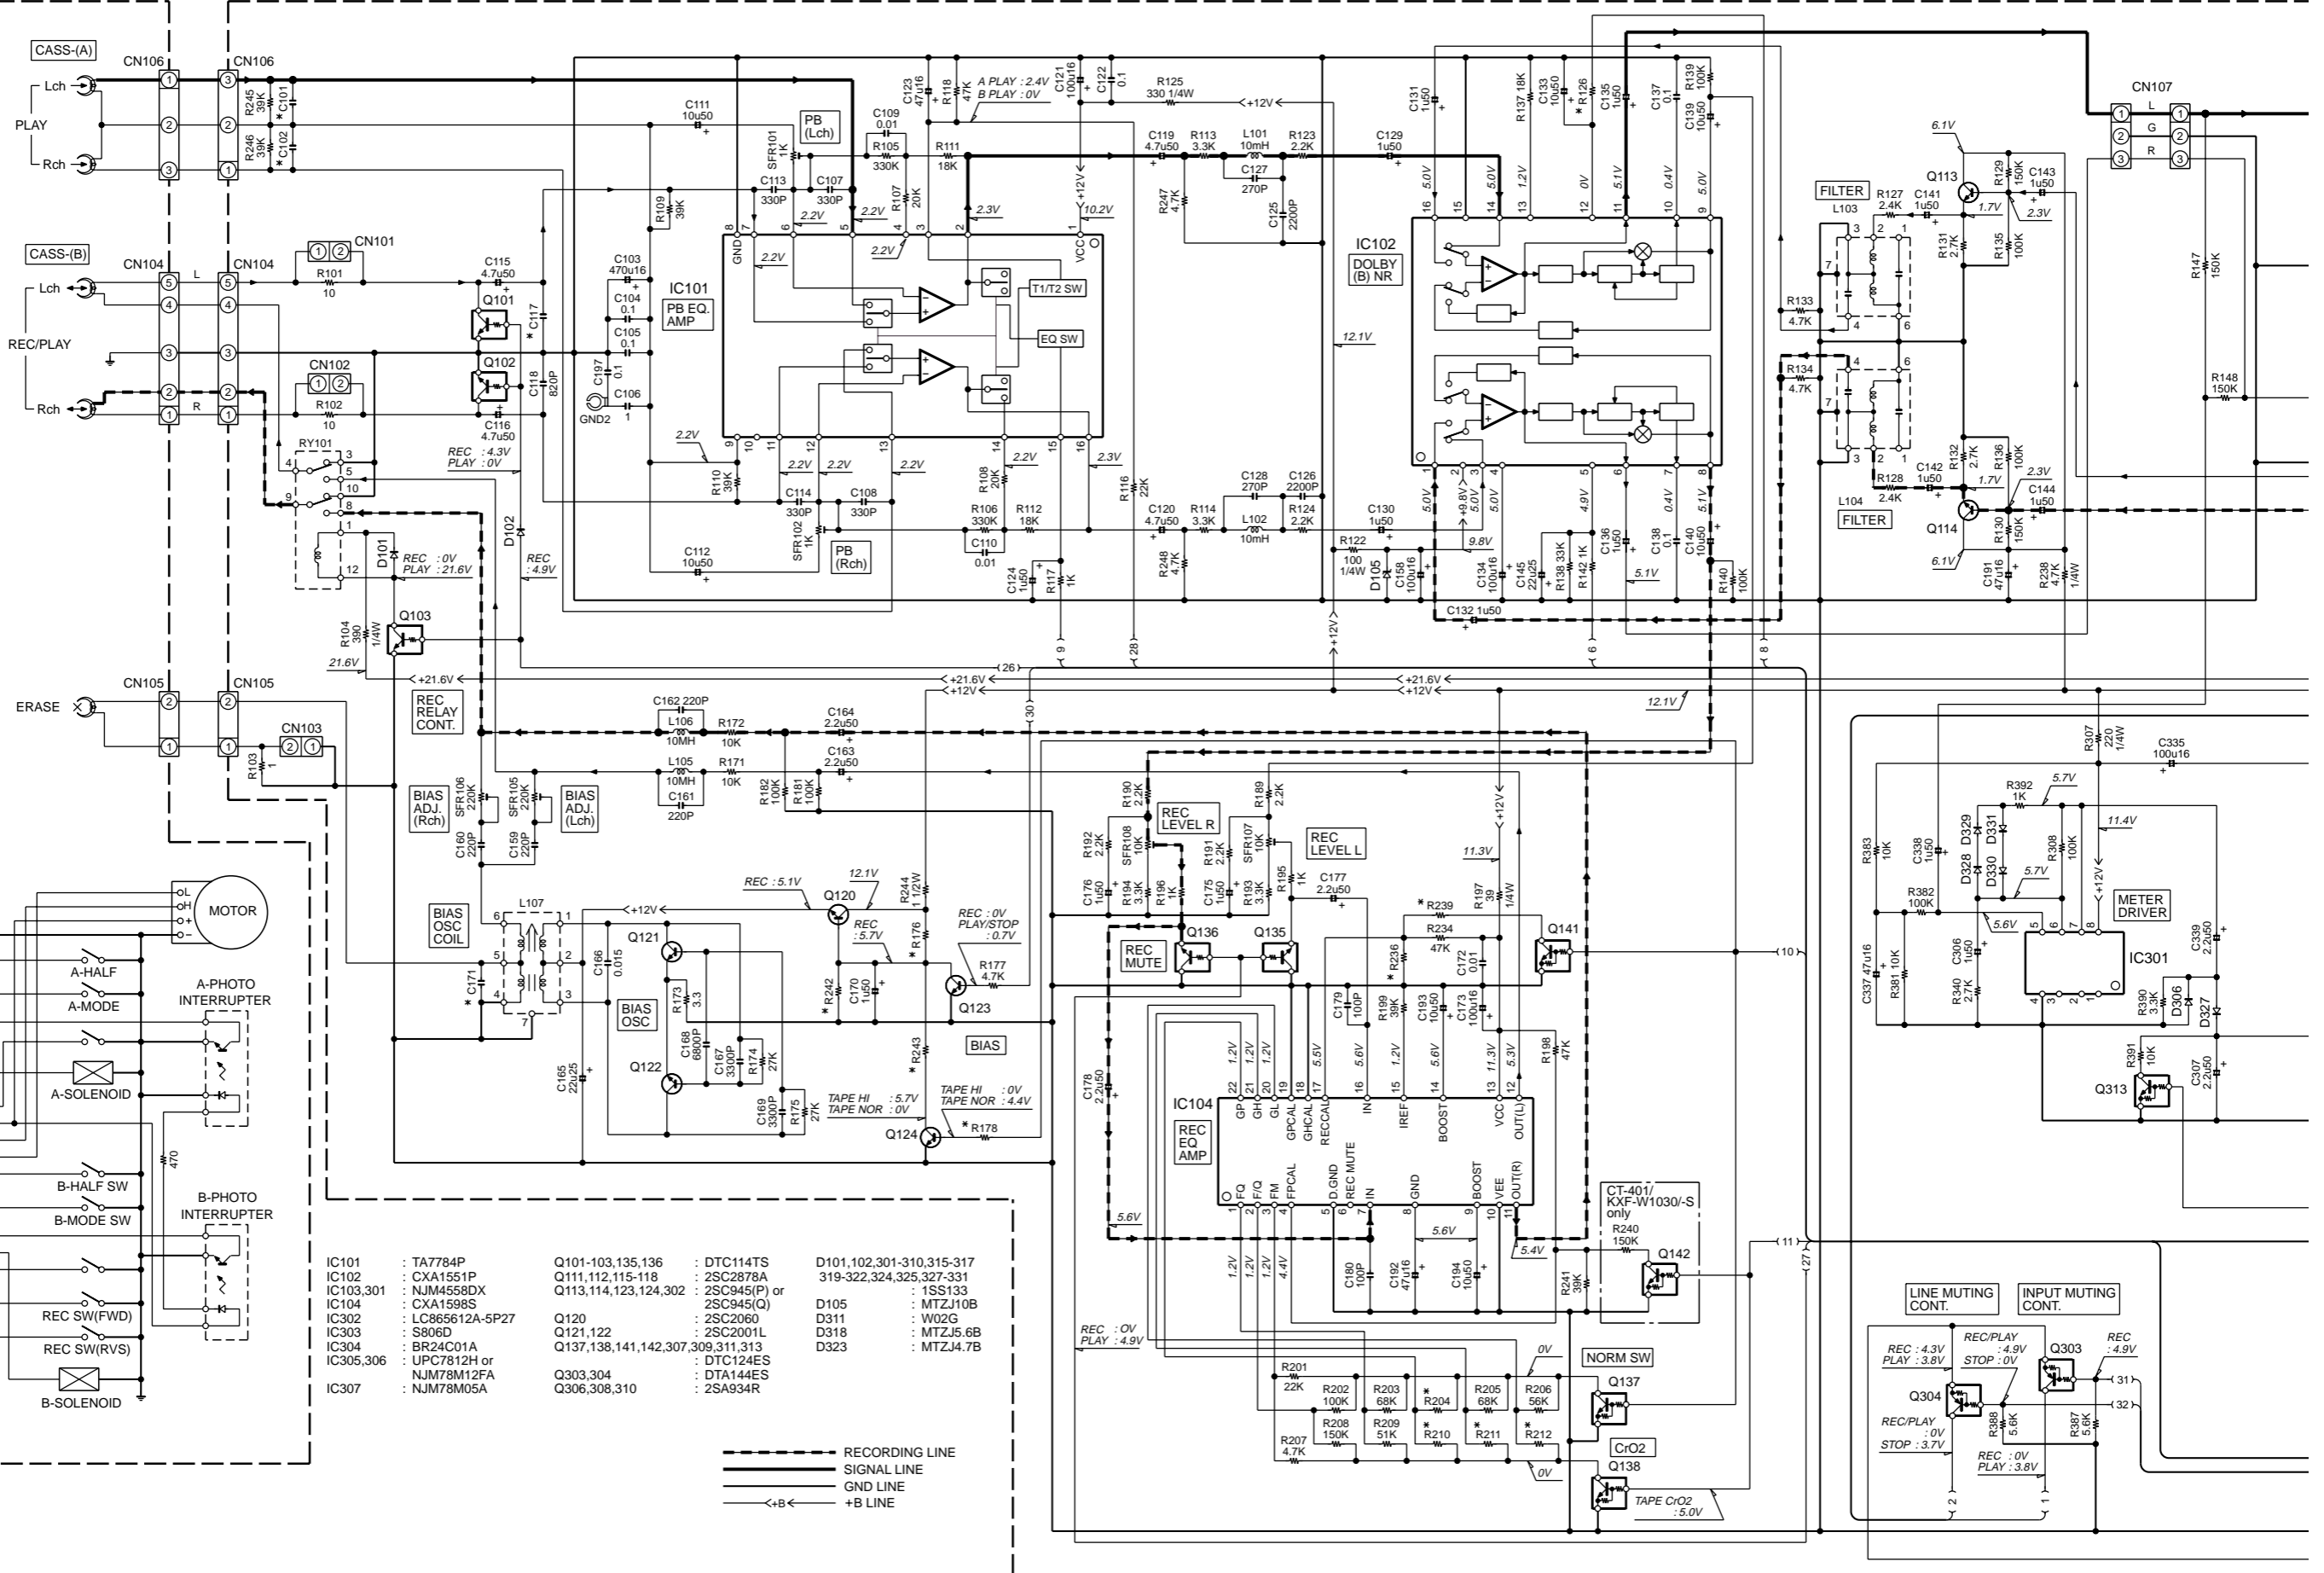



- | | | |
|------------------------------------|---|--|
| IC101 : TA7784P | Q101-103,135,136 : DTC114TS | D101,102,301-310,315-317 : 319-322,324,325,327-331 |
| IC102 : CXA1551P | Q111,112,115-118 : 2SC2878A | |
| IC103,301 : NJM4558DX | Q113,114,123,124,302 : 2SC945(P) or 2SC945(Q) | D105 : 1SS133 |
| IC104 : CXA1598S | Q120 : 2SC2060 | D311 : MTZJ10B |
| IC302 : LC865612A-5P27 | Q121,122 : 2SC2001L | D318 : W02G |
| IC303 : S806D | Q137,138,141,142,307,309,311,313 : DTC124ES | D318 : MTZJ5.6B |
| IC304 : BR24C01A | Q303,304 : DTA144ES | D323 : MTZJ4.7B |
| IC305,306 : UPC7812H or NJM78M12FA | Q306,308,310 : 2SA934R | |
| IC307 : NJM78M05A | | |

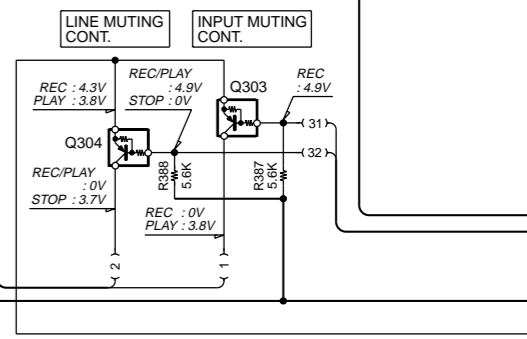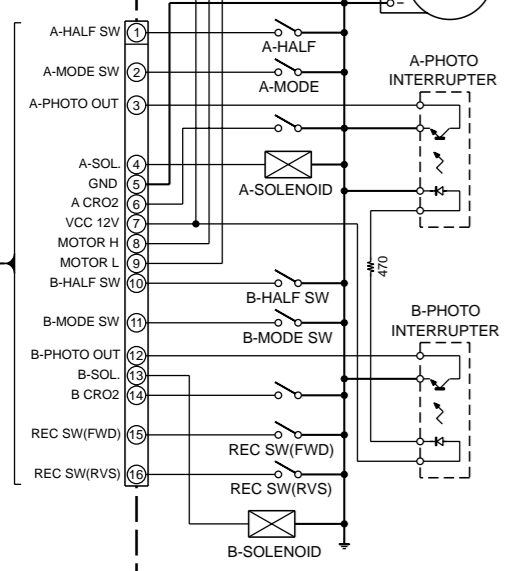

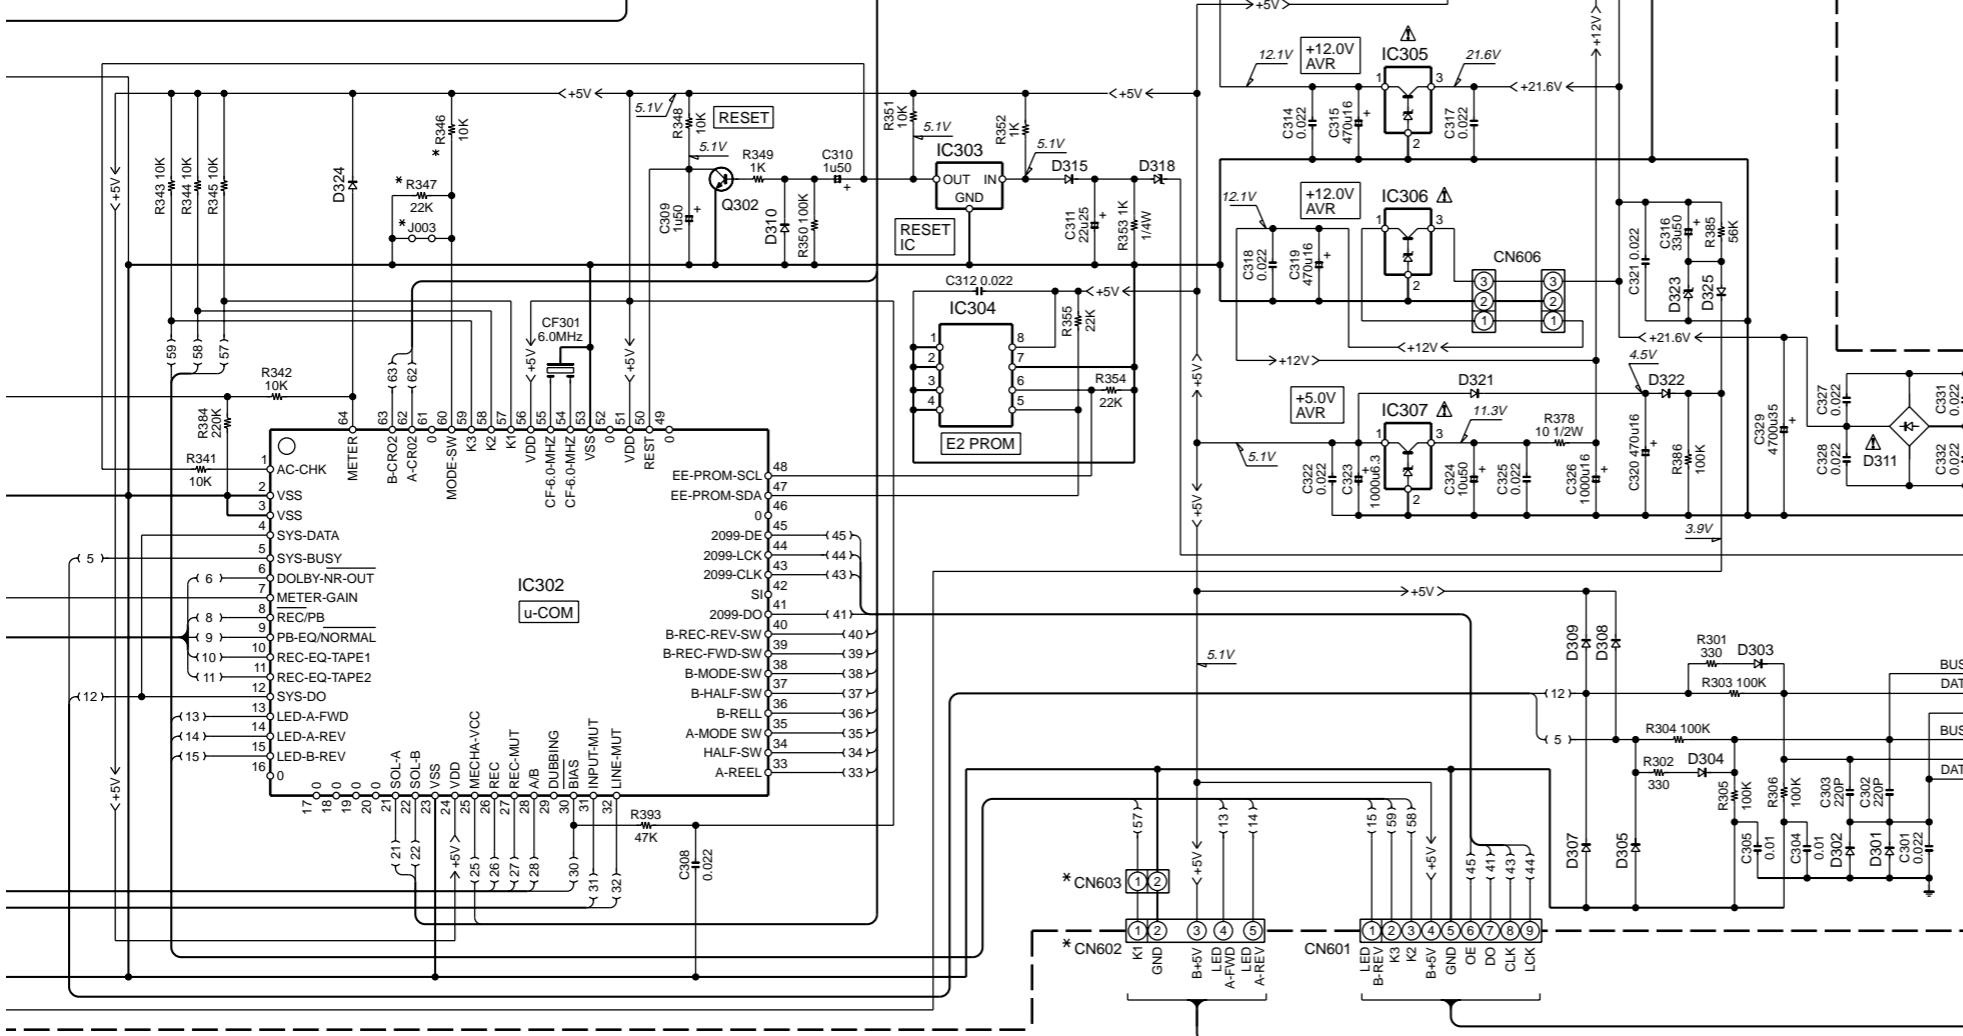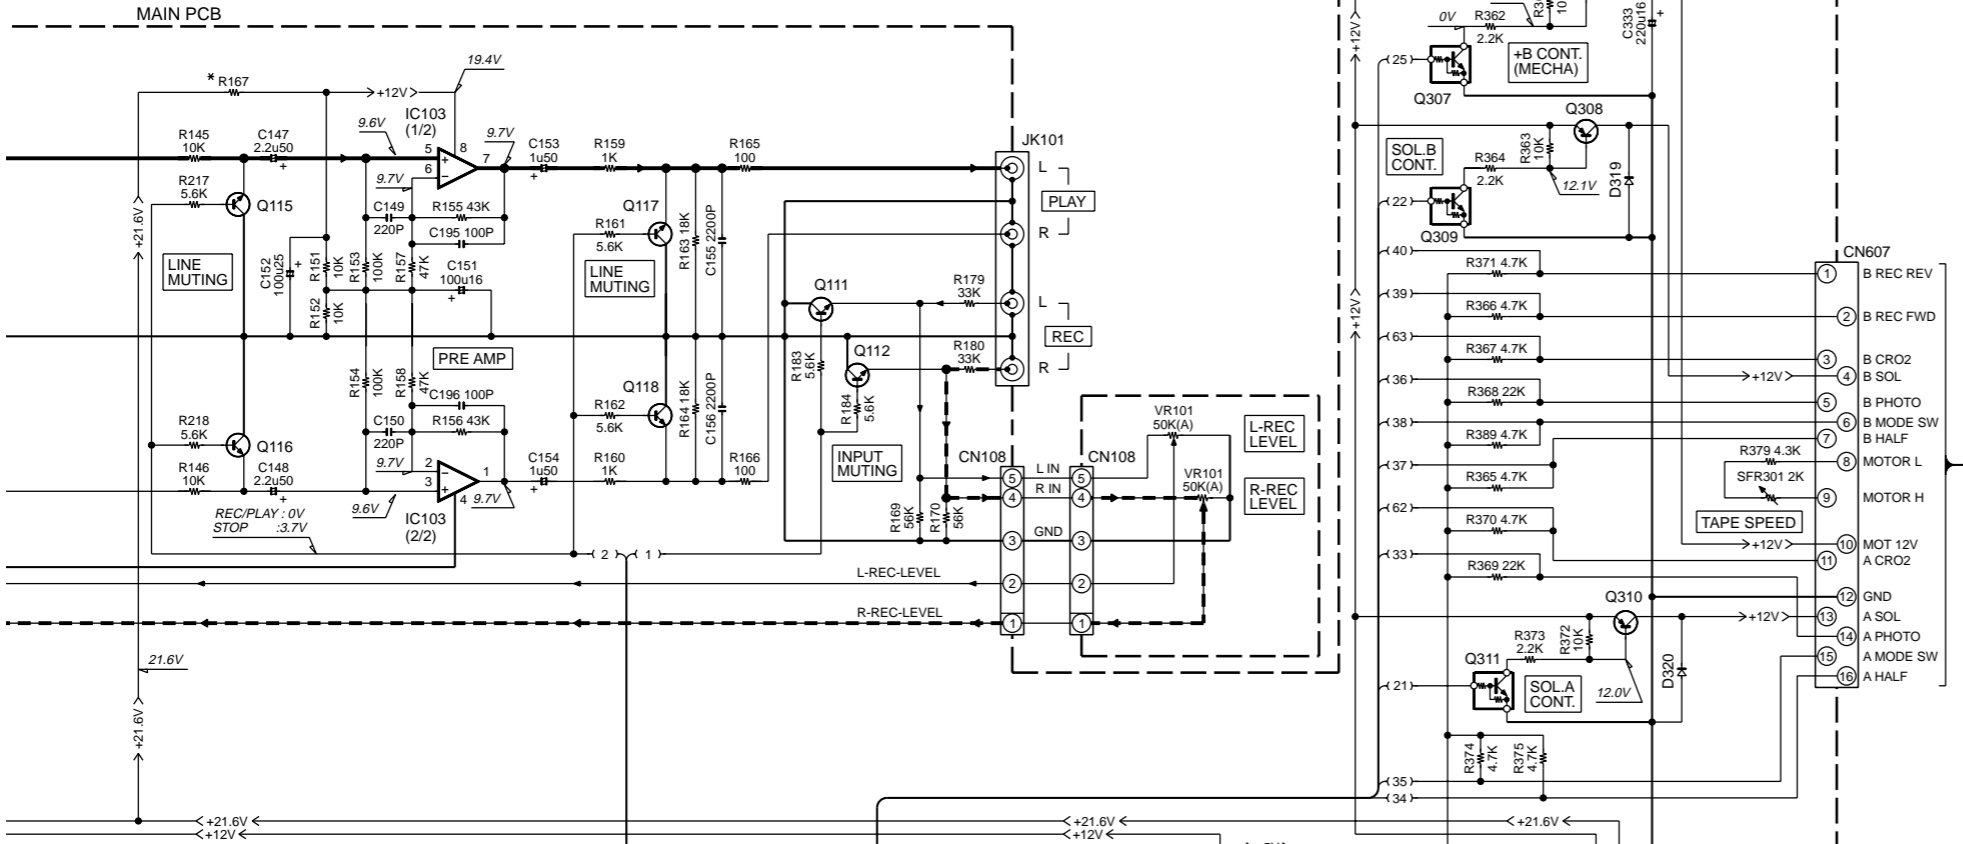

FRONT PCB

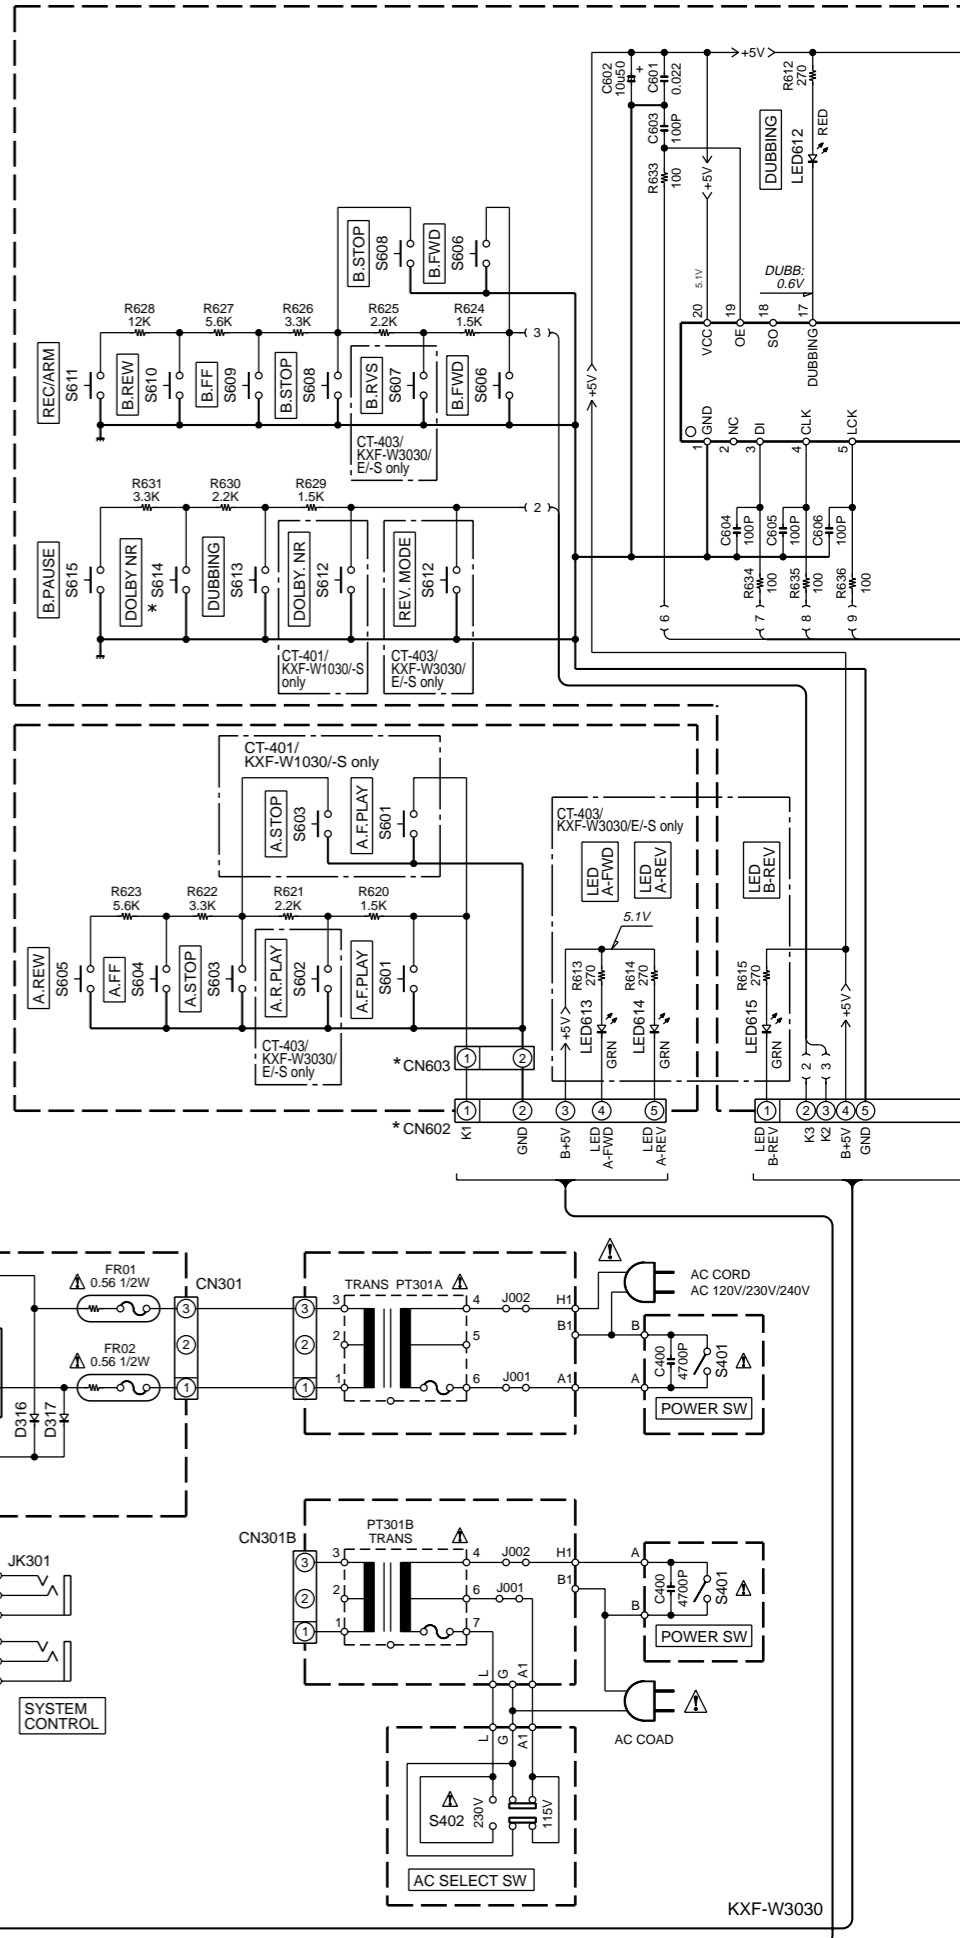


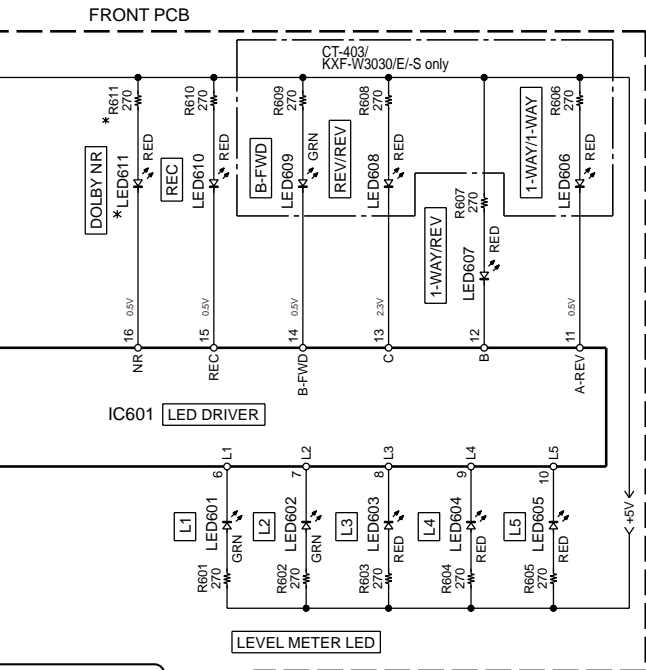

IC601 : BU2099FV
 LED601,602,609,613-615 : B30-2557-08
 LED603-608,610-612 : B30-2578-08


2SA934R
 2SC2060
 2SC2878A
 2SC945

DTA144ES
 DTC114TS
 DTC124ES

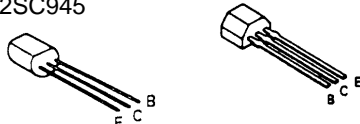

NJM4558DX


TA7784P



UPC7812H

NJM78M05A

BU2099FV

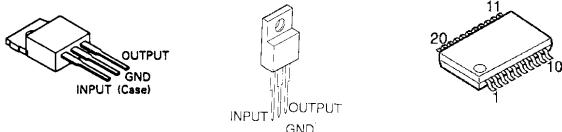

CT-401

DESTINATION	C101, 102	C117	C171	R126	R167	R176	R204	R210	R211	
COUNTRY	ABB.									
U.S.A.	K	560P	820P	3300P	10K	100 1/4W	2.7K 1/4W	13K	5.6K	15K
CANADA	P									

DESTINATION	R212	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.										
U.S.A.	K	39K	33K	82K	8.2K	3.3K	NO	YES	NO	NO	YES
CANADA	P										

KXF-W1030

DESTINATION	C101, 102	C117	C171	R126	R167	R176	R204	R210	R211	
COUNTRY	ABB.									
U.K.	T									
EUROPE	E	560P	820P	3300P	10K	100 1/4W	2.7K 1/4W	13K	5.6K	15K
PX	Y									

DESTINATION	R212	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.										
U.K.	T										
EUROPE	E	39K	33K	82K	8.2K	3.3K	NO	YES	NO	NO	YES
PX	Y										

KXF-W1030-S

DESTINATION	C101, 102	C117	C171	R126	R167	R176	R204	R210	R211	
COUNTRY	ABB.									
GENERAL MARKET	M	560P	820P	3300P	10K	100 1/4W	2.7K 1/4W	13K	5.6K	15K
AUSTRALIA	X									

DESTINATION	R212	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.										
GENERAL MARKET	M	39K	33K	82K	8.2K	3.3K	NO	YES	NO	NO	YES
AUSTRALIA	X										

CT-403

DESTINATION	C101, 102,117	C171	R126	R167	R176	R204	R210	R211, 212	
COUNTRY	ABB.								
U.S.A.	K	1000P	8200P	4.7K	470 1/4W	3.3K 1/4W	18K	10K	56K

DESTINATION	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.									
U.S.A.	K	82K	39K	3.3K	3.9K	YES	NO	YES	YES	NO

KXF-W3030

DESTINATION	C101, 102,117	C171	R126	R167	R176	R204	R210	R211, 212	
COUNTRY	ABB.								
EUROPE	E	1000P	8200P	4.7K	470 1/4W	3.3K 1/4W	18K	10K	56K
PX	Y								

DESTINATION	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.									
EUROPE	E	82K	39K	3.3K	3.9K	YES	NO	YES	YES	NO
PX	Y									

KXF-W3030E

DESTINATION	C101, 102,117	C171	R126	R167	R176	R204	R210	R211, 212	
COUNTRY	ABB.								
EUROPE	E2	1000P	8200P	4.7K	470 1/4W	3.3K 1/4W	18K	10K	56K

DESTINATION	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.									
EUROPE	E2	82K	39K	3.3K	3.9K	YES	NO	YES	YES	NO

CT-403-S

DESTINATION	C101, 102,117	C171	R126	R167	R176	R204	R210	R211, 212	
COUNTRY	ABB.								
U.S.A.	K1	1000P	8200P	4.7K	470 1/4W	3.3K 1/4W	18K	10K	56K
CANADA	P1								

DESTINATION	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.									
U.S.A.	K1	82K	39K	3.3K	3.9K	YES	NO	YES	YES	NO
CANADA	P1									

KXF-W3030-S

DESTINATION	C101, 102,117	C171	R126	R167	R176	R204	R210	R211, 212	
COUNTRY	ABB.								
EUROPE	E3	1000P	8200P	4.7K	470 1/4W	3.3K 1/4W	18K	10K	56K
GENERAL MARKET	M								

DESTINATION	R236	R239	R242	R243	R346, 347,611	J003	S614	LED611	CN602	CN603
COUNTRY	ABB.									
EUROPE	E3	82K	39K	3.3K	3.9K	YES	NO	YES	YES	NO
GENERAL MARKET	M									

CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Δ indicates safety critical components. For continued protection against risk of fire, replace only with same type and rating fuse(s). To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

The DC voltage is an actual reading measured with a high impedance type voltmeter with a cassette loaded at playback mode. The measurement value may vary depending on the measuring instruments used or on the product. Bias circuit DC voltage is measured while in the record mode.


DOLBY and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Noise reduction circuit made under license from Dolby Laboratories Licensing Corporation.

CT-401/403/KXF-W1030/W3030




KENWOOD

CT-401/403/KXF-W1030/W3030

EXPLODED VIEW (UNIT)

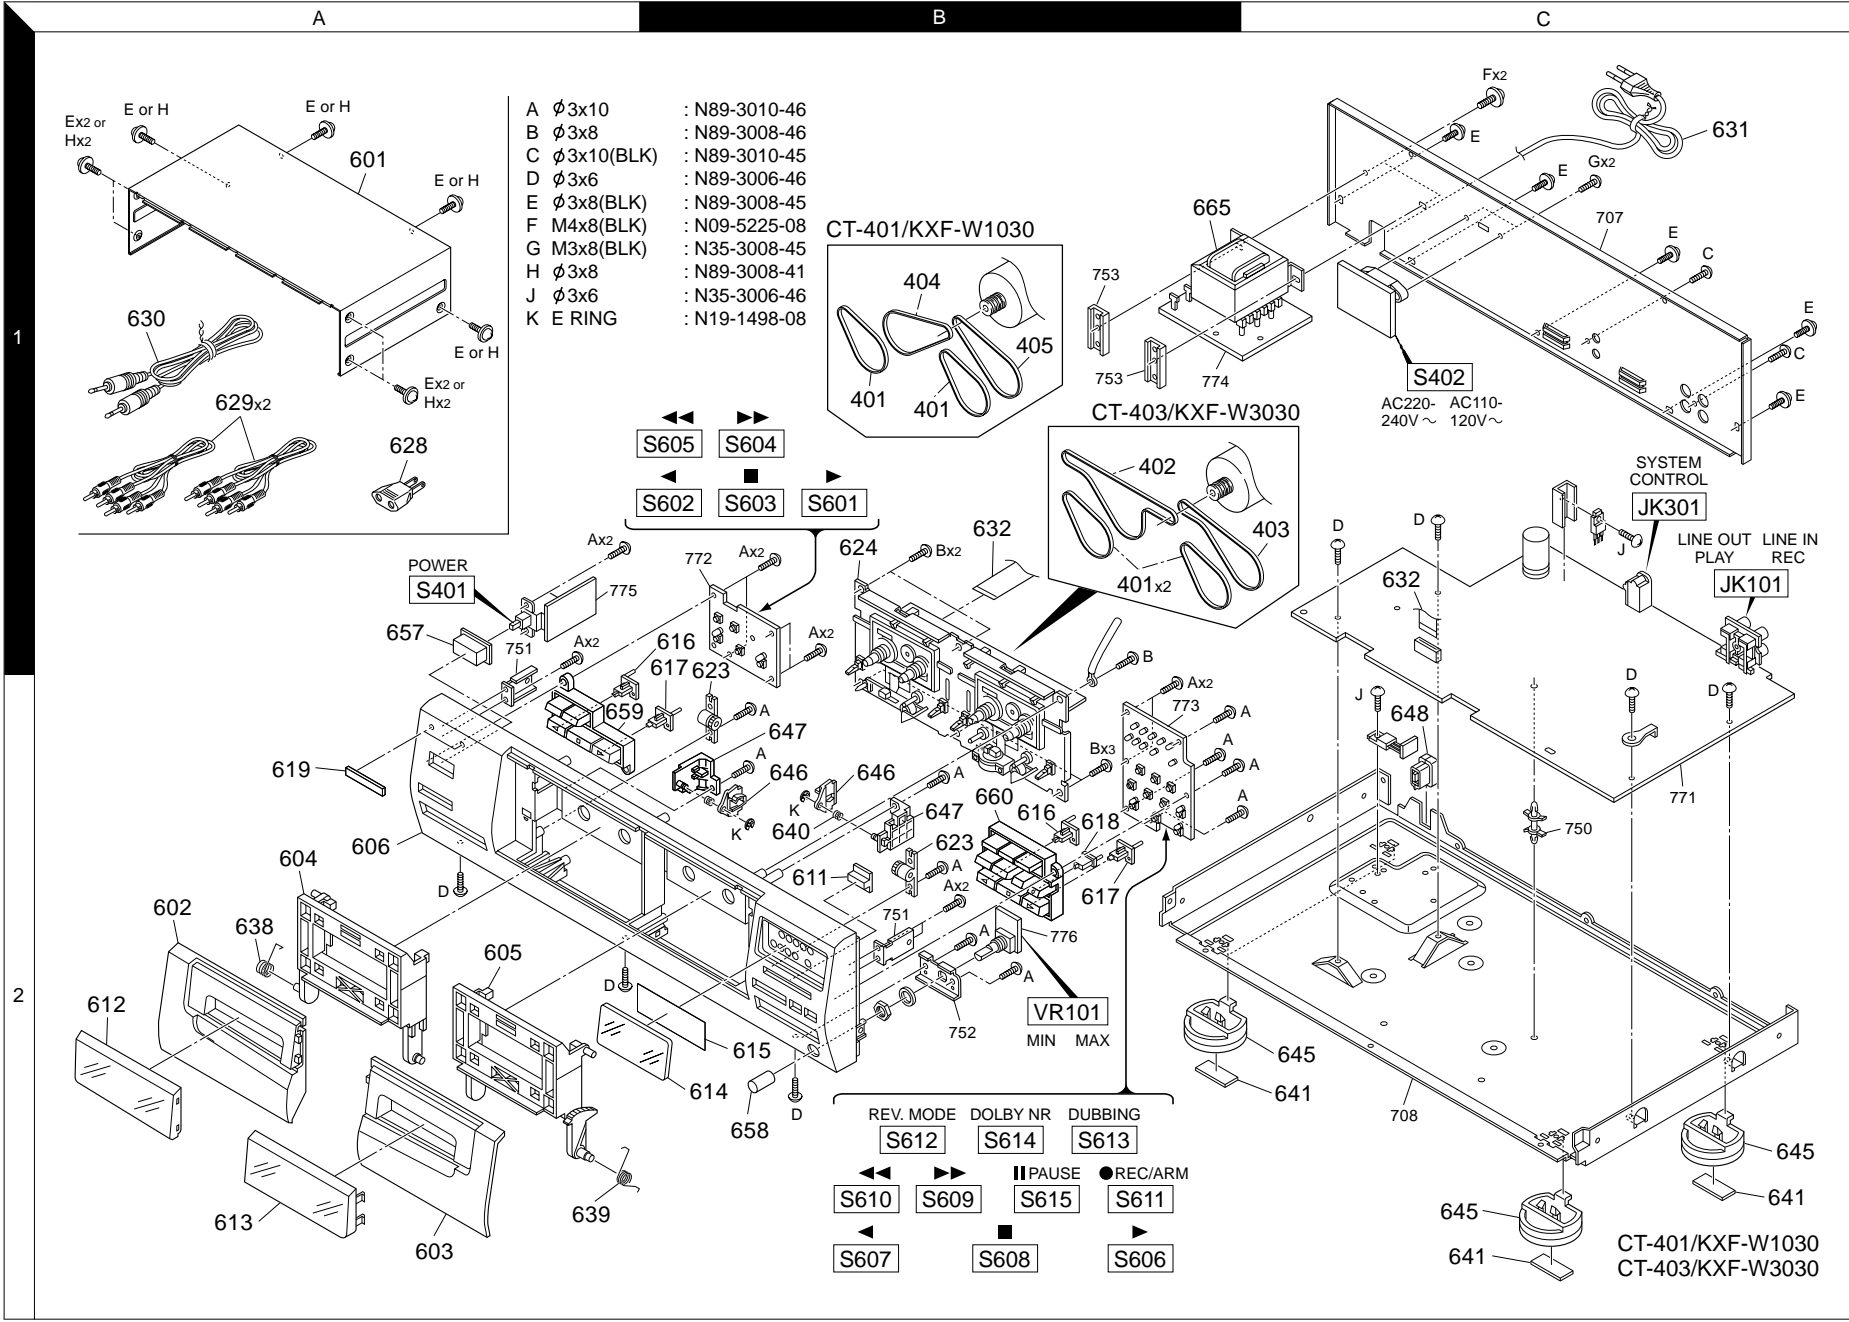

A	φ3x10	:	N89-3010-46
B	φ3x8	:	N89-3008-46
C	φ3x10(BLK)	:	N89-3010-45
D	φ3x6	:	N89-3006-46
E	φ3x8(BLK)	:	N89-3008-45
F	M4x8(BLK)	:	N09-5225-08
G	M3x8(BLK)	:	N35-3008-45
H	φ3x8	:	N89-3008-41
J	φ3x6	:	N35-3006-46
K	E RING	:	N19-1498-08

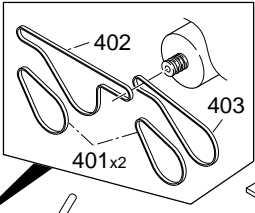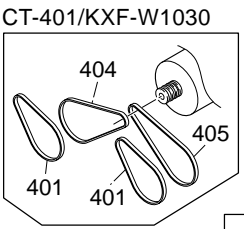

CT-401/KXF-W1030
CT-403/KXF-W3030

Parts with exploded numbers larger than 700 are not supplied.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

③

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
660	2B	*	K27-2420-08	PLAYER BUTTON(R)100204002B	KEE2Y	3
660	2B	*	K27-2422-08	PLAYER BUTTON(R)100504002S	ME3	3
△ 665	1B	*	L07-2882-08	POWER TRANS 420F542144	KP	
△ 665	1B	*	L07-2883-08	POWER TRANS 420F544257	EE2E3T	
△ 665	1B	*	L07-2884-08	POWER TRANS 420F549154	MY	
△ 665	1B	*	L07-2885-08	POWER TRANS 420F547160	X	
K			N19-1498-08	E RING 2.0Q 3130000020		

ELECTRICAL PARTS

C101,102			C91-0754-05	CERAMIC 560PF	J	1
C101,102			C91-0757-05	CERAMIC 1000PF	K	3
C103			CE04KW1C471M	ELECTRO 470UF	16WV	
C104-106			C91-1525-08	CERAMIC 0.1UF	Z	
C107,108			C91-0751-05	CERAMIC 330PF	K	
C109,110			C91-0769-05	CERAMIC 0.010UF	K	
C111,112			CE04KW1H100M	ELECTRO 10UF	50WV	
C113,114			C91-0751-05	CERAMIC 330PF	K	
C115,116			CE04KW1H4R7M	ELECTRO 4.7UF	50WV	
C117			C91-0756-05	CERAMIC 820PF	K	1
C117			C91-0757-05	CERAMIC 1000PF	K	3
C118			C91-0756-05	CERAMIC 820PF	K	
C119,120			CE04KW1H4R7M	ELECTRO 4.7UF	50WV	
C121			CE04KW1C101M	ELECTRO 100UF	16WV	
C122			C91-1525-08	CERAMIC 0.1UF	Z	
C123			CE04KW1C470M	ELECTRO 47UF	16WV	
C124			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C125,126			C91-0761-05	CERAMIC 2200PF	M	
C127,128			C91-0750-05	CERAMIC 270PF	K	
C129-132			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C133			CE04KW1H100M	ELECTRO 10UF	50WV	
C134			CE04KW1C101M	ELECTRO 100UF	16WV	
C135,136			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C137,138			C91-1525-08	CERAMIC 0.1UF	Z	
C139,140			CE04KW1H100M	ELECTRO 10UF	50WV	
C141-144			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C145			CE04KW1E220M	ELECTRO 22UF	25WV	
C147,148			CE04KW1H2R2M	ELECTRO 2.2UF	50WV	
C149,150			C91-0749-05	CERAMIC 220PF	K	
C151			CE04KW1C101M	ELECTRO 100UF	16WV	
C152			CE04DW1E102M	ELECTRO 1000UF	25WV	
C153,154			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C155,156			C91-0761-05	CERAMIC 2200PF	M	
C158			CE04KW1C101M	ELECTRO 100UF	16WV	
C159,160			CK45FB1H221K	CERAMIC 220PF	K	
C161,162			C91-0749-05	CERAMIC 220PF	K	
C163,164			CE04KW1H2R2M	ELECTRO 2.2UF	50WV	
C165			CE04KW1E220M	ELECTRO 22UF	25WV	
C166			CQ92FM1H153J	MYLAR 0.015UF	J	
C167			CQ92FM1H332J	MYLAR 3300PF	J	
C168			CQ92FM1H682J	MYLAR 6800PF	J	
C169			CQ92FM1H332J	MYLAR 3300PF	J	
C170			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C171		*	C91-1598-08	MF-C 8200PF		3
C171		*	C91-1600-08	MF-C 3300PF		1

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East,Hawaii) T : England E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas △ indicates safety critical components.

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

④

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C172			C91-0769-05	CERAMIC 0.010UF	K	
C173			CE04KW1C101M	ELECTRO 100UF	16WV	
C175,176			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C177,178			CE04KW1H2R2M	ELECTRO 2.2UF	50WV	
C179,180			C91-0745-05	CERAMIC 100PF	K	
C191,192			CE04KW1C470M	ELECTRO 47UF	16WV	
C193,194			CE04KW1H100M	ELECTRO 10UF	50WV	
C195,196			C91-0745-05	CERAMIC 100PF	K	
C197			C91-1525-08	CERAMIC 0.1UF	Z	
C301			C91-0085-05	CERAMIC 0.022UF	N	
C302,303			C91-0749-05	CERAMIC 220PF	K	
C304,305			C91-0769-05	CERAMIC 0.010UF	K	
C306			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C307			CE04KW1H2R2M	ELECTRO 2.2UF	50WV	
C308			CK45FB1H223J	CERAMIC 0.022UF	J	
C309,310			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C311			CE04KW1E220M	ELECTRO 22UF	25WV	
C312			CK45FB1H223J	CERAMIC 0.022UF	J	
C314			C91-0085-05	CERAMIC 0.022UF	N	
C315			CE04KW1C471M	ELECTRO 470UF	16WV	
C316			CE04KW1E330M	ELECTRO 33UF	50WV	
C317,318			C91-0085-05	CERAMIC 0.022UF	N	
C319,320			CE04KW1C471M	ELECTRO 470UF	16WV	
C321,322			C91-0085-05	CERAMIC 0.022UF	N	
C323			CE04KW0J102M	ELECTRO 1000UF	6.3WV	
C324			CE04KW1H100M	ELECTRO 10UF	50WV	
C325			C91-0085-05	CERAMIC 0.022UF	N	
C326			CE04DW1C102M	ELECTRO 1000UF	16WV	
C327,328			CK45FB1H223J	CERAMIC 0.022UF	J	
C329			CE04KW1V472M	ELECTRO 4700UF	35WV	
C331,332			CK45FB1H223J	CERAMIC 0.022UF	J	
C333			CE04KW1C221M	ELECTRO 220UF	16WV	
C335			CE04KW1C101M	ELECTRO 100UF	16WV	
C337			CE04KW1C470M	ELECTRO 47UF	16WV	
C338			CE04KW1H010M	ELECTRO 1.0UF	50WV	
C339			CE04KW1H2R2M	ELECTRO 2.2UF	50WV	
C400		*	C91-1599-08	SPARK C 4700PF 400V 5106472P41		
C601		*	C91-0085-05	CERAMIC 0.022UF	N	
C602			CE04EW1H100M	ELECTRO 10UF	50WV	
C603-606			C91-0745-05	CERAMIC 100PF	K	
CN607			E35-2435-08	PIN ASSY(16P)	4491600263	
JK101		*	E11-0917-08	4P RCA JACK	4500800497	
JK301		*	E11-0918-08	2P JACK(3.5Q)	4500100492	
CF301		*	L78-0716-08	RESONATOR	416090600M	
L101,102			L40-1035-29	INDUCTANCE 10MH4329210311		
L103,104			L39-1329-08	MPX TRAP COIL	4360400720	
L105,106			L40-1035-29	INDUCTANCE	4329210311	
L107		*	L32-1027-08	BIAS OSC COIL	4330801370	
△ FR01,02		*	R92-1962-08	FUSE R 1/2W 568	4180256857	
R244			RS14KB2H1R0J	FL-PROOF RS	1 J 1/2W	
R378			RS14DB2H100J	FL-PROOF RS	10 J 1/2W	
SFR101,102			R12-5652-05	SFR 1KB	5226102170	
SFR105,106			R12-1616-05	SFR 220KB	5226224170	

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East,Hawaii) T : England E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas △ indicates safety critical components.

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

5

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
SFR107,108			R12-1617-05	SFR 10KB 5226103170		
SFR301			R12-3685-05	SFR 2.2KB 5226222170		
VR101		*	R31-0106-08	VR 50KAX2 5023254335		
RY101		*	S76-0109-08	MAGNETIC REYAY 4390000068		
S401		*	S68-0041-08	SW PUSH POWER 4430102450	MY	
S401		*	S68-0129-08	SW PUSH POWER K611510101		
S402			S62-0083-08	AC SLIDE SW 4410206199		
S601			S68-0039-08	TACT SW 4400000156		
S602			S68-0039-08	TACT SW 4400000156		3
S603-605			S68-0039-08	TACT SW 4400000156		
S606			S68-0039-08	TACT SW 4400000156		
S607			S68-0039-08	TACT SW 4400000156		3
S608-613			S68-0039-08	TACT SW 4400000156		
S614			S68-0039-08	TACT SW 4400000156		3
S615			S68-0039-08	TACT SW 4400000156		
D101,102			1SS133	DIODE		
D105			MTZJ10B	ZENER DIODE		
D301-310			1SS133	DIODE		
D311			W02G	DIODE		
D315-317			1SS133	DIODE		
D318			MTZJ5.6B	ZENER DIODE		
D319-322			1SS133	DIODE		
D323			MTZJ4.7B	ZENER DIODE		
D324,325			1SS133	DIODE		
D327-331			1SS133	DIODE		
IC101			TA7784P	IC(PB AMP)		
IC102		*	CXA1551P	IC		
IC103			NJM4558DX	IC(OP AMP X2)		
IC104		*	CXA1598S	IC		
IC301			NJM4558DX	IC(OP AMP X2)		
IC302		*	LC865612A-5P27	IC		
IC303		*	S806D	IC		
IC304			BR24C01A	IC		
IC305,306			NJM78M12FA	IC(VOLTAGE REGULATOR/ +12V)		
IC305,306			UPC7812H	IC(VOLTAGE REGULATOR/ +12V)		
IC307			NJM78M05A	IC(VOLTAGE REGULATOR/+5V)		
IC601			BU2099FV	IC(OUT PUT EXPANDER)		
LED601,602		*	B30-2577-08	LED(GRN) 412061CHGE		
LED603-605		*	B30-2578-08	LED(RED) 412061CHE2		
LED606		*	B30-2578-08	LED(RED) 412061CHE2		3
LED607		*	B30-2578-08	LED(RED) 412061CHE2		
LED608		*	B30-2578-08	LED(RED) 412061CHE2		3
LED609		*	B30-2577-08	LED(GRN) 412061CHGE		3
LED610		*	B30-2578-08	LED(RED) 412061CHE2		
LED611		*	B30-2578-08	LED(RED) 412061CHE2		3
LED612		*	B30-2578-08	LED(RED) 412061CHE2		
LED613-615		*	B30-2577-08	LED(GRN) 412061CHGE		3
Q101-103			DTC114TS	TRANSISTOR		
Q111,112			2SC2878A	TRANSISTOR		
Q113,114			2SC945(P)	TRANSISTOR		
Q113,114			2SC945(Q)	TRANSISTOR		
Q115-118			2SC2878A	TRANSISTOR		
Q120			2SC2060	TRANSISTOR		

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East,Hawaii) T : England E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components .

* New Parts

Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

6

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
Q121,122			2SC2001L	TRANSISTOR		
Q123,124			2SC945(P)	TRANSISTOR		
Q123,124			2SC945(Q)	TRANSISTOR		
Q135,136			DTC114TS	TRANSISTOR		
Q137,138			DTC124ES	TRANSISTOR		
Q141			DTC124ES	TRANSISTOR		
Q142			DTC124ES	TRANSISTOR		1
Q302			2SC945(P)	TRANSISTOR		
Q302			2SC945(Q)	TRANSISTOR		
Q303,304			DTA144ES	TRANSISTOR		
Q306			2SA934R	TRANSISTOR		
Q307			DTC124ES	TRANSISTOR		
Q308			2SA934R	TRANSISTOR		
Q309			DTC124ES	TRANSISTOR		
Q310			2SA934R	TRANSISTOR		
Q311			DTC124ES	TRANSISTOR		
Q313			DTC124ES	TRANSISTOR		
CASSETTE MECHANISM						
401		*	D16-0750-08	BELT REV(A1,B1)02-083-4188		3
402		*	D16-0751-08	BELT REV(A2) 02-084-4203		3
403		*	D16-0752-08	BELT REV(B2) 02-083-4205		1
404		*	D16-0753-08	BELT 1-WAY(A2) 02-084-4202		1
405		*	D16-0754-08	BELT 1-WAY(B2) 02-084-4204		1

L : Scandinavia K : USA P : Canada R : Mexico C : China I : Malaysia
Y : PX(Far East,Hawaii) T : England E : Europe G : Germany V : China(Shanghai)
Y : AAFES(Europe) X : Australia Q : Russia H : Korea M : Other Areas Δ indicates safety critical components .

HOW TO READ THE PARTS LIST

ABBREVIATION OF MODEL AND MASS PRODUCTION'S DESTINATIONS

MODEL	ABB.	Australia	Canada	China	England	Europe	Germany	Korea	Malaysia
CT-401	1	-	P	-	-	-	-	-	-
KXF-W1030	1	-	-	-	T	E	-	-	-
KXF-W1030-S	1	X	-	-	-	-	-	-	-
CT-403	3	-	-	-	-	-	-	-	-
KXF-W3030	3	-	-	-	-	E	-	-	-
KXF-W3030E	3	-	-	-	-	E2	-	-	-
CT-403-S	3	-	P1	-	-	-	-	-	-
KXF-W3030-S	3	-	-	-	-	E3	-	-	-
MODEL	ABB.	Mexico	PX/AAFES	Russia	Scandinavia	Shanghai	USA	Other area	
CT-401	1	-	-	-	-	-	K	-	-
KXF-W1030	1	-	Y	-	-	-	-	-	-
KXF-W1030-S	1	-	-	-	-	-	-	M	-
CT-403	3	-	-	-	-	-	K	-	-
KXF-W3030	3	-	Y	-	-	-	-	-	-
KXF-W3030E	3	-	-	-	-	-	-	-	-
CT-403-S	3	-	-	-	-	-	K1	-	-
KXF-W3030-S	3	-	-	-	-	-	-	M	-

PARTS LIST

CT-401/403/KXF-W1030/W3030

CT-401/403/KXF-W1030/W3030

SPECIFICATIONS

Track System 4 track, 2 channel stereo
Recording System AC bias (Frequency: 105 kHz)
Heads A DECK
 Playback heads 1
 B DECK
 Playback / recording heads 1
 Erasing head 1
Motors A and B DECK 1
Wow and Flutter 0.3 % (W.RMS)
Frequency Response
TYPE I Tape 30 Hz to 13,000 Hz, ± 3 dB
TYPE II Tape 30 Hz to 13,000 Hz, ± 3 dB
Signal to Noise Ratio
Dolby NR OFF 57 dB
Dolby B NR ON (3rd, H.D., 3 %, TYPE II Tape) 66 dB

Input sensitivity / Impedance
LINE IN 122.8 mV / 54 k Ω
Output Level / Impedance
LINE OUT 775 mV / 1.1 k Ω

[General]

Power Consumption 14 W
Dimensions W :440mm (17-5/16")
 H :128 mm (5-1/16")
 D : 270 mm (10-5/8")
Weight (Net) 4.1 kg (9.0 lb)



1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in extremely cold location (under a water-freezing temperature).

Note:

Component and circuit are subject to modification to insure best operation under differing local conditions. This manual is based on Europe (E) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

14-6, Dogenzaka 1-chome, Shibuya-ku, Tokyo, 150-8501 Japan

KENWOOD SERVICE CORPORATION

P.O. BOX 22745, 2201 East Dominguez St., Long Beach, CA 90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O. BOX 55-2791, Piso 6 plaza Chase, Cl. 47 y Aquilino de la Guardia Panama, Republic de Panama

KENWOOD ELECTRONICS BRASIL LTDA.

Av. Moema, 170-17, Andar-Cobertura "B", Ed. Maximum Service Center, 04077-020 Moema, São Paulo-SP-Brasil

KENWOOD ELECTRONICS U.K. LIMITED

KENWOOD House, Dwight Road, Watford, Herts., WD1 8EB., United Kingdom

KENWOOD ELECTRONICS BELGIUM N.V.

Meachelsesteenweg 418, B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker Str. 15, 63150 Heusenstamm, Germany

KENWOOD ELECTRONICS FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS ITALIA S.p.A.

Via G. Sirtori, 7/9 20129, Milano, Italy

KENWOOD IBÉRICA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD.

(A.C.N. 001 499 074)
16 Giffnock Avenue, North Ryde, N.S.W. 2113, Australia

KENWOOD ELECTRONICS (HONG KONG) LTD.

Unit 3712-3724, Level 37, Tower 1, Metroplaza, 223 Hing Fong Road, Kwai Fong N.T., Hong Kong

KENWOOD ELECTRONICS GULF FZE

P.O. Box 61318, Jebel Ali, Dubai, U.A.E.

KENWOOD ELECTRONICS SINGAPORE PTE LTD.

No. 1 Genting Lane #02-02, KENWOOD Building, Singapore, 349544

KENWOOD ELECTRONICS (MALAYSIA) SDN BHD.

#4.01 Level 4, Wisma Academy Lot 4A, Jalan 19/1 46300 Petaling Jaya Selangor Darul Ehsan Malaysia

KENWOOD ELECTRONICS (THAILAND) CO., LTD.

2019 New Pechburi Road, Bangkapi, Huaykwang, Bangkok, 10320 Thailand