


SERVICE MANUAL

AUDIO VIDEO CONTROL RECEIVER

MODEL DTR-5

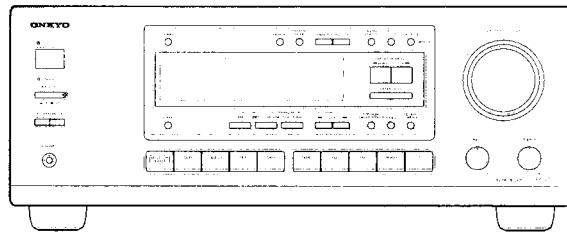

Black and Silver and Golden models

BMD	120V AC, 60Hz
BMP/BMPT/BMPA/ SMP/GMPT	230V AC, 50Hz
BMW/T/BMW/R/GMWT/ GMWR	220-230V/120V AC, 50/60Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

Specifications.....	2
Service procedures.....	3
Panel views.....	4
IC block diagrams and descriptions.....	7
Microprocessor connection diagram.....	14
Microprocessor terminal descriptions.....	15
FL tube view.....	16
Printed circuit board-part list.....	17
Adjustment and confirmation.....	23
Wiring view.....	25
Block diagram.....	27
DSP circuit schematic diagram.....	29
DSP PC board view.....	31
Video/Input PC board view.....	32
Video/Input schematic diagram.....	33
Preamplifier PC board view 1.....	35
Preamplifier schematic diagram 1.....	37
Preamplifier PC board view 2.....	39
Preamplifier schematic diagram 2.....	41
Microprocessor PC board view.....	43
Microprocessor schematic diagram.....	45
Power amplifier PC board view.....	47
Power amplifier schematic diagram.....	49
Exploded view.....	51
Parts list.....	53
Packing view.....	55

DTR-5

SPECIFICATIONS

AMPLIFIER SECTION

Continuous Average Power

output (FTC)

All channels:

70 watts per channel min. RMS at 8 ohms, 2 channels driven from 20 Hz to 20 kHz with no more than 0.08% total harmonic distortion.

90 watts min. RMS at 6 ohms, 2 channels driven from 1 kHz with no more than 0.1% total harmonic distortion.

Continuous Power output (DIN)

100 watts × 5 at 6 ohms

Maximum Power output (EIAJ)

130 watts × 5 at 6 ohms

Total Harmonic Distortion:

0.08% at rated power (Front)

IM Distortion:

0.08% at rated power (Front)

Damping Factor:

60 at 8 ohms (Front)

Input Sensitivity and Impedance

PHONO:

2.5 mV, 50 kohms

LINE (CD, TAPE, DVD,
VIDEO 1, 2, 3):

200 mV, 50 kohms

MULTICHANNEL INPUT
(FRONT L/R, SUR-
ROUND L/R, CENTER):

200 mV, 50 kohms

(SUBWOOFER):

36 mV, 50 kohms

COAXIAL 1, 2 (DIGITAL):

0.5 Vp-p, 75 ohms

Output Level and Impedance

Rec out (TAPE, VIDEO 1):

200 mV, 2.2 kohms

Pre out (SUBWOOFER):

1 V, 2.2 kohms

Phono Overload:

70 mV RMS at 1 kHz, 0.5% T.H.D.

Frequency Response:

20 Hz to 30 kHz, ±1 dB

RIAA Deviation:

20 Hz to 20 kHz, ±0.8 dB

Tone Control

Bass:

±10 dB at 100 Hz

Treble:

±10 dB at 10 kHz

Signal-to-Noise Ratio

Phono:

80 dB (IHF A, 5 mV input)

CD/Tape:

100 dB (IHF A)

VIDEO SECTION

Input sensitivity/Impedance

(DVD, VIDEO 1, 2, 3)

1 Vp-p, 75 ohms

VIDEO (Composite):

1 Vp-p, 75 ohms

Output Level/Impedance

(VIDEO 1, MONITOR)

1 Vp-p, 75 ohms

VIDEO (Composite):

1 Vp-p, 75 ohms

TUNER SECTION

FM

Tuning Range:

87.5 — 108.0 MHz

Usable Sensitivity

Mono:

11.2 dBf, 1.0 µV (75 ohms)

Stereo:

17.2 dBf, 2.0 µV (75 ohms)

50 dB Quieting Sensitivity

Mono:

17.2 dBf, 2.0 µV (75 ohms)

Stereo:

37.2 dBf, 20 µV (75 ohms)

Capture Ratio:

2.0 dB

Image Rejection Ratio

U.S.A. & Canadian models:

40 dB

Other area models:

85 dB

IF Rejection Ratio: 90 dB

Signal-to-Noise Ratio

Mono:

76 dB

Stereo:

70 dB

Alternate Channel Attenuation: 55 dB

Selectivity: 50 dB (DIN)

AM Suppression Ratio: 50 dB

Total Harmonic Distortion

Mono:

0.2%

Stereo:

0.3%

Frequency Response: 30 Hz — 15 kHz, ±1.0 dB

Stereo Separation: 45 dB at 1 kHz

30 dB at 100 Hz — 10 kHz

AM

Tuning Range

U.S.A. & Canadian models: 530—1,710 kHz (10 kHz steps)

European & Australian models: 522—1,611 kHz (9 kHz steps)

Worldwide models: 531—1,602 kHz (9 kHz steps),

530—1,710 kHz (10 kHz steps)

Usable Sensitivity: 30 µV

Image Rejection Ratio: 40 dB

IF Rejection Ratio: 40 dB

Signal-to-Noise Ratio: 40 dB

Total Harmonic Distortion: 0.7%

GENERAL

Power Supply:

AC 120 V, 60 Hz

AC 230 V, 50 Hz

AC 220-230 V and 120 V switchable,
50/60 Hz

Power Consumption:

3.9 A

325 W

Dimensions (W × H × D): 435 × 175 × 390 mm

17-1/8" × 6-7/8" × 15-3/8"

Weight:

12.3 kg, 27.1 lbs.

13.0 kg, 28.7 lbs.

12.9 kg, 28.4 lbs.

REMOTE CONTROL

Transmitter: Infrared

Signal range: Approx. 5 meters, 16 ft.

Power supply: Two "AA" batteries (1.5 V × 2)

Specifications and features are subject to change without notice.

Power supply and voltage vary depending on the area in which the unit is purchased.

SERVICE PROCEDURES

1. Replacing the fuses

 This symbol located near the fuses indicates that the fuse used is fast operating type. For continued protection against fire hazard, replace with same type fuse. For fuse rating refer to the marking adjacent to the symbol.

 Ce symbole indique que le fusible utilisé est à rapide. Pour une protection permanente, n'utiliser que fusibles de même type. Ce dernier est la qu le présent symbol est apposé.

CIRCUIT NO.	PART NO.	DESCRIPTION
F911	252198Y	8A-UL, Primary <D/W>
F922	252077 or 252243	4A-SE-EAK or 4A-SE-TL250V,Primary <P/T/W/A>
F933	252075 or 252241	2.5A-SE-EAK or 2.5A-SE-TL250V,AC outlet <P/T>

Note: <D>:120V model only
 <P>: European model only
 <T>: Asian model only
 <W>: Worldwide model only
 <A>: Australian model only

2. To initialize the unit

This device employs a microprocessor to perform various functions and operations. If interference generated by an external power supply, radio wave, or other electrical source results in accident which causes the specified operations and functions to operate abnormally.

To perform a result, please follow the procedure below.

1. Press and hold down the VIDEO-1 button, then press the SPEAKER A button.
2. After "clear" is displayed, the preset memory and each mode stored in the memory, such as surround, are initialized and will return to the factory setting.

3. Safety-check out

(Only U.S.A. model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer. Connect the insulating-resistance tester between the plug of power supply cord and screw on the back panel.

Specifications: $3.3\text{Mohm} \pm 10\% \text{ at } 500\text{V}$.

4. Memory Preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves the contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in order to charge the back-up system.

The memory preservation period after the unit has been unplugged varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of a few weeks after the last time the unit has been unplugged. This period is shorter when the unit is exposed to a highly humid climate.

5. Setting the AM tuning step frequency

(Worldwide models only)

Worldwide models are equipped with a switch that controls the AM band tuning steps. Please set this switch to match the AM band tuning step frequency in your area.


U.S.A. and Canada : 10 kHz

Other areas : 9 kHz

6. Setting the Voltage selector (Worldwide models only)

Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this switch to match the voltage of the power supply in your area before plugging in the unit.

1. Determine the proper voltage for your area: 220-230 V or 120 V.
2. If the preset voltage is not correct for your area, insert a screwdriver into the groove in the switch. Slide the switch all the way to the right (120 V) or to the left (220-230 V), whichever is appropriate.

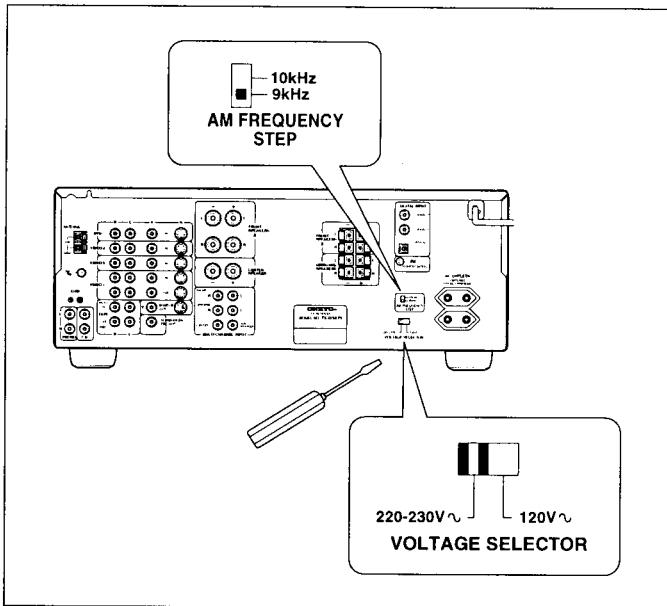


7. Changing the AM band step

With the exception of the worldwide models, a tuning step selector switch is not provided. When you change the band step, change the parts as shown below.

	To 10kHz	To 9kHz
R7077	Open	2.2k
R7130	10k	18k


MICROPROCESSOR CONNECTION DIAGRAM

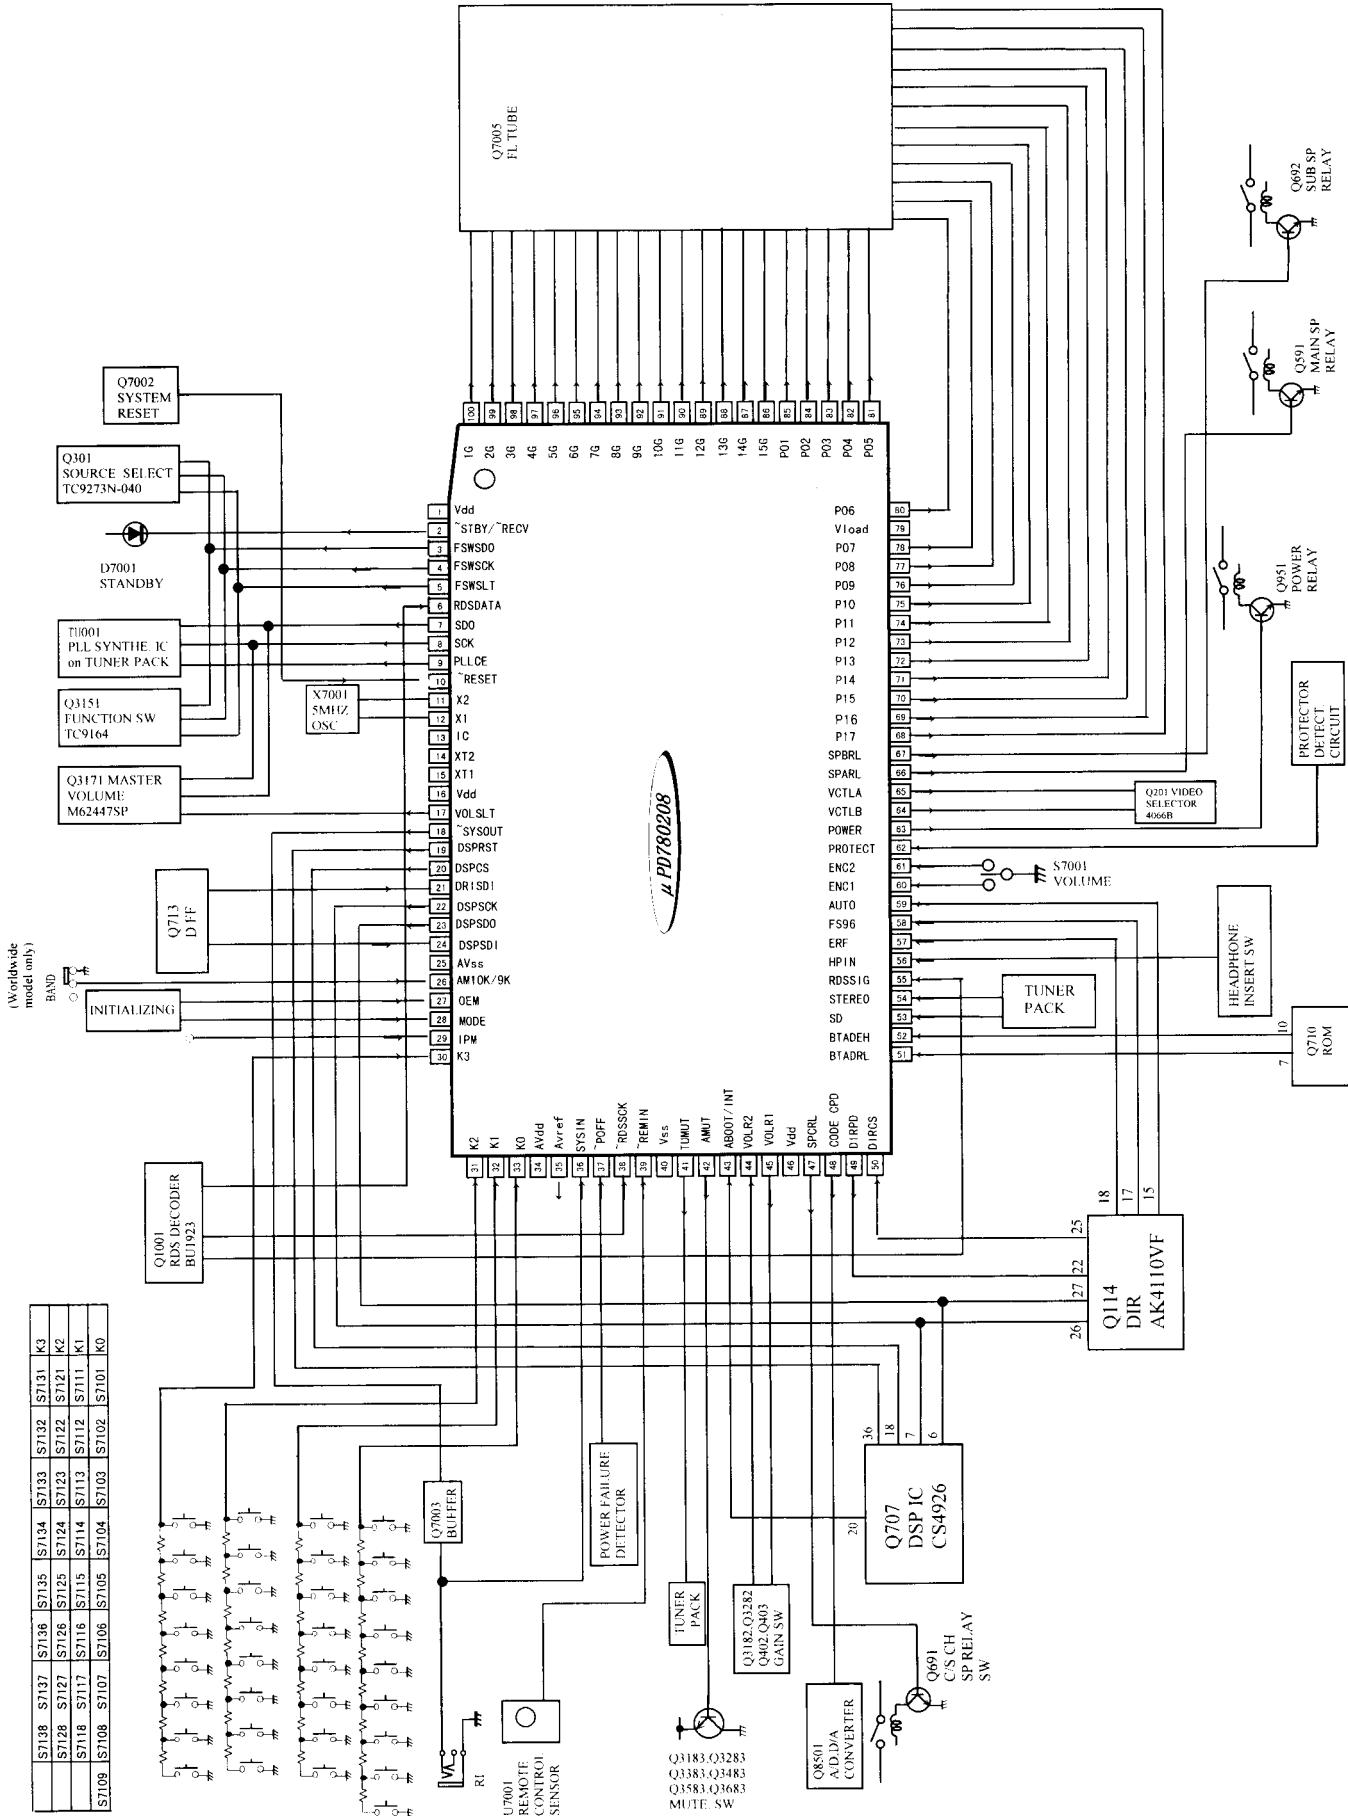

MICROPROCESSOR TERMINAL DESCRIPTION

No.	Symbol	I/O	Description	No.	Symbol	I/O	Description
1	Vdd	-	Power supply pin	39	REMIN	1	Signal input pin for remoter controller
2	STBY/RECV	O	Standby/Received indicator control output pin	40	AVSS	-	Ground pin
3	FSWSDO	O	Serial data output pin to function switch IC	41	TUMUT	O	Muting control signal output pin for tuner section
4	FSWSCK	O	Serial clock output pin to function switch IC	42	AMUT	O	Muting control signal output pin for amplifier section
5	FSWSLT	O	Serial latch output pin to function switch IC	43	ABOOT/INT	I/O	AUTOBOOT/INTREQ input/output pin
6	RDS DATA	I	Data input pin from RDS decoder	44	VOL RL2	O	Control output pin for volume selector relay 2
7	SDO	O	Serial data output pin to PLL and Electro volume ICs	45	VOL RL1	O	Control output pin for volume selector relay 1
8	SCK	O	Serial clock output pin to PLL and Electro volume ICs	46	Vdd	-	Power supply pin
9	PLLCE	O	Serial data latch output pin to PLL IC	47	SPCRIL	O	Speaker relay control output pin
10	RESET	I	System reset input pin	48	CODE CPD	O	Power down control output pin for CODEC IC
11	X2	O	Master clock connection pins.	49	DIRPD	O	Power down control output pin for AK4110
12	X1	I	Connect the ceramic oscillator across the both pins.	50	DIRCS	O	Chip select output pin for AK4110
13	IC	I	Internal connection pin.	51	BTADDRH	O	Setting input pin for LSB address of boot ROM
14	XT2	O	Sub clock connection pins. Not used.	52	BTADRL	O	Setting input pin for MSB address of boot ROM
15	XT1	I	Not used.	53	SD	I	Broadcast detection input
16	Vdd1	-	Power supply pin	54	STEREO	I	FM stereo broadcast detection input pin
17	VOLSLT	O	Serial latch output pin to Electro volume IC	55	RDSSIG	I	Signal input pin from RDS decoder
18	SYSTOUT	O	Signal output pin for system code	56	HPIN	I	Detection input pin when the headphones are inserted
19	DSPRST	O	Reset signal output pin to DSP IC CS4926	57	ERF	I	ERF signal input pin from AK4110
20	DSPCS	O	Chip select output pin to DSP IC	58	FS96	I	FS96 signal input pin from AK4110
21	DRISOL	I	Serial data input pin from the digital audio interface receiver IC AK4110	59	AUTO	I	AUTO signal input pin from AK4110
22	DSPSCK	O	Serial clock output pin to AK4110 and CS4926	60	ENCI	I	Rotary encoder input pin for volume control
23	DSPSDO	O	Serial data output pin to AK4110 and CS4926	61	ENCO2	I	Rotary encoder input pin for volume control
24	DSPSDI	I	Serial data input pin from CS4926	62	PROTECT	I	Detection input pin for protection circuit
25	Avss	I	Ground pin for A/D converter	63	POWER	O	Control output pin for power switch relay
26	AM9K/10K	I	Initializing input pin for AM band step. 9 kHz step at "H"	64	VCTRIB	O	Control output pin for video selector switch
27	OEM	I	Initializing input pin for unit setting	65	VCTRA	O	Control output pin for video selector switch
28	MODE	I	Initializing input pin for operation mode	66	SPARL	O	Control output pin for speaker relay A
29	IPM	I	IPM switch connection pin. Not used.	67	SPBRL	O	Control output pin for speaker relay B
30-33	K3-K0	I	Operation key connection pins.	68-79	P17-P07	O	Segment output pins
34	AVDD	-	Power supply pin for A/D converter	79	VLOAD	O	Power supply pin for FL controller
35	AVREF	I	Reference voltage input pin for A/D converter	80-85	P06-P01	O	Segment output pins
36	SYSIN	I	System code input pin	86-100	15G-1G	O	Grid output pins
37	POFF	I	Power failure detect input pin				
38	RDSSCK	I	Clock input pin from RDS decoder				

FL TUBE VIEW

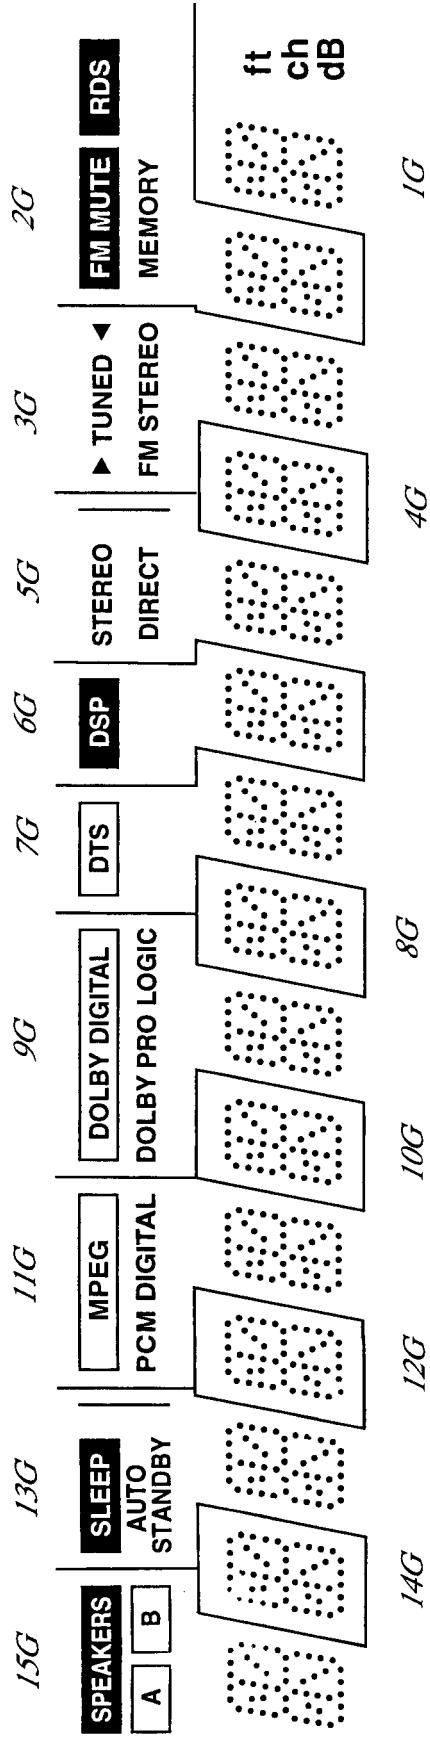

	15G	14G	13G	11G	9G	7G	6G	5G	3G	2G
SPEAKERS										
A										
B										
SLEEP										
AUTO STANDBY										
P1										
P2										
SPEAKERS	-									
A										
B										
SLEEP										
AUTO STANDBY										
P3										
P4	c	c	c	c	c	c	c	c	c	c
P5	h	h	h	h	h	h	h	h	h	h
P6	j	j	j	j	j	j	j	j	j	j
P7	k	k	k	k	k	k	k	k	k	k
P8	b	b	b	b	b	b	b	b	b	b
P9	f	f	f	f	f	f	f	f	f	f
P10	m	m	m	m	m	m	m	m	m	m
P11	g	g	g	g	g	g	g	g	g	g
P12	c	c	c	c	c	c	c	c	c	c
P13	e	e	e	e	e	e	e	e	e	e
P14	r	r	r	r	r	r	r	r	r	r
P15	p	p	p	p	p	p	p	p	p	p
P16	n	n	n	n	n	n	n	n	n	n
P17	d	d	d	d	d	d	d	d	d	d

a
 b
 c
 d
 e
 f
 g
 h
 i
 j
 k
 l
 m
 n
 o
 p
 r
 s
 t
 u
 v
 w
 x
 y
 z

PRINTED CIRCUIT BOARD PARTS LIST

PRE., AMPLIFIER PC BOARD (NAVD-6566-1A/1B/1C/1D)

CIRCUIT NO. PART NO. DESCRIPTION

	ICs	
Q203	22240373	BA7625
Q3171	22241296	M62447SP
Q3180,Q3181	22240247 or	BA15218N or
Q3281,Q3381	22240293	NJM4558L-D
Q3184	22240025	LC4966
Q3581	22240247 or	BA15218N or
	22240293	NJM4558L-D
	Transistors	
Q201,Q204	2213354 or	2SA933S-R or
	2212125	2SA1048-GR
Q202	2212286 or	2SC2878-B or
	2212285	2SC2878-A
Q205	2215830,	NP KRC105M,
	2213640 or	DTC123JS or
	2214660	RN1205
Q3182,Q3183	2213631 or	RN1241-A or
Q3282,Q3283	2213632	RN1241-B
Q3185	2215770,	NP KRA102M,
	2213510 or	DTA114ES or
	2214350	RN2202
Q3187	2215780,	NP KRA103M,
	2213580 or	RN2203 or
	2212600	DTA124ES
Q3186	2215960,	NP KRC102M,
	2213290 or	DTC114ES or
	2214230	RN1202
Q3188	221282,	DTC144ES,
	2213560 or	RN1204 or
	2215820	NP KRC104M
Q3383,Q3483	2213631 or	RN1241-A or
Q3583,Q3683	2213632	RN1241-B
Q3684	2213631 or	RN1241-A or
	2213632	RN1241-B
	Diodes	
D201,D202	223163 or	ISS133 or
D207,D208	223205	ISS270A
D3171	224470512	MTZJ5.1B
D3182	223163 or	ISS133 or
	223205	ISS270A
D3276,D3277	224470472	MTZJ4.7B
	Capacitors	
C201-C204	354780229	2.2 μ F,50V, Elect.
C205,C206	354724719	470 μ F,6.3V, Elect.
C210	354721019	100 μ F,6.3V, Elect.
C3171,C3271	354780229	2.2 μ F,50V, Elect.
C3173,C3175	354741009	10 μ F,16V, Elect.
C3177,C3186	354741009	10 μ F,16V, Elect.
C3187,C3287	374721534	0.015 μ F \pm 5%,50V,Plastic
C3189,C3195	354784709	47 μ F,50V, Elect.
C3192,C3193	354741009	10 μ F,16V, Elect.
C3194	354780479	4.7 μ F,50V, Elect.
C3196,C3296	354782209	22 μ F,50V, Elect.
C3286	354741009	10 μ F,16V, Elect.
C3289,C3295	354784709	47 μ F,50V, Elect.
C3371,C3471	354780229	2.2 μ F,50V, Elect.
C3381,C3481	354782209	22 μ F,50V, Elect.
C3384,C3484	354744709	47 μ F,16V, Elect.
C3571,C3671	354780229	2.2 μ F,50V, Elect.

NP : No spare parts

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

CIRCUIT NO.	PART NO.	DESCRIPTION
Capacitors		
C3581,C3681	354782209	22 μ F,50V, Elect.
C3586,C3684	354744709	47 μ F,16V, Elect.
C3683	374724734	0.047 μ F \pm 5%,50V,Plastic
Terminals		
P201	25045567	NPJ-1PDBL382
P202,P203	25045299	NPJ-3PDYE158
Sockets		
P204	25051233	NSCT-8P1023
P205	25051527	NSCT-16P1314
P206	25051526	NSCT-4P1313
P391	2009990554UL	NSAS-16P0734
P601	2009990541UL	NSAS-10P0712
S TERMINAL PC BOARD (NAVD-6567-1B/1C/1D)		
(Except 120V model)		
This PC board is included to NAVD-6566.		
CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q2003,Q2004	22240373	BA7625
Transistors		
Q2001,Q2002	2213354 or	2SA933S-R or
Q2005,Q2006	2212125	2SA1048-GR
Diodes		
D2001,D2002	223163 or	1SS133 or
	223205	1SS270A
Capacitors		
C2001-C2009	354780229	2.2 μ F,50V, Elect.
C2010,C2012	354724719	470 μ F,6.3V, Elect.
C2011	354780229	2.2 μ F,50V, Elect.
C2024	354741009	10 μ F,16V, Elect.
C2028,C2029	354722219	220 μ F,6.3V, Elect.
Terminals		
P2001,P2002	25051568	NSCT-12P1355
PRIMARY CIRCUIT PC BOARD (NAPS-6570-1A/1B/1C/1D)		
CIRCUIT NO.	PART NO.	DESCRIPTION
Transistor		
Q951	2215830, NP	KRC105M,
	2213640 or	DTC123JS or
	2214660	RN1205
Diodes		
D952	22380260,	RL1N4003,
	22380032 or	1SR139-100 or
	22380035	GP104003E
Power transformer		
T902	2301258 or Δ	NPT-1294D or
	2301381 Δ	NPT-1358D <D>
	2301382 Δ	NPT-1358P <P/T/A>
	2301383 Δ	NPT-1358DG <W>
Capacitors		
C902	3500196S Δ	RE275V-103M,IS
C952	354743319	330 μ F,16V, Elect.
Resistor		
R901	431533355 Δ	3.3M Ω ,1/2W, Solid <D>
Switch		
S902	25065437 Δ	NSS-22157P, Voltage <W>

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
Relay					
RL901	25065561, Δ	NRL-1P5A-DC12-127,	D101-D109	223234R2 or	ISS352 or
	25065508, Δ	NRL-1P10A-DC12-093,		223233R1	ISS355
	25065515 or Δ	NRL-1P5A-DC12-096 or			
	25065526 Δ	NRL-1P5A-DC12-102	X103	3010320	AT-49 12.288MHz,Crystal
Fuses					
F911	252198 Δ	8A-UL,Fuse <D/W>	X701	3010278	CST12.2MTW040,Ceramic
F922	252077 or Δ	4A-SE-EAK or	L108-L110	231237M022R2	NCH-1471
	252243 Δ	4A-SE-TL250V,Fuse <P/T/W/A>	L166,L168	230921R2	BLM21B222SPT<D>
F933	252075 or Δ	2.5A-SE-EAK or			To 15,100 p'cs.
	252241 Δ	2.5A-SE-TL250V,Fuse <P/T>		433123314R1	330 Ohm <D>
Fuse holders					
F901,F902	25052133 Δ	NSCT-1P2031 <D/W>	L170,L171	230921R2	BLM21B222SPT
F903,F904	25052133 Δ	NSCT-1P2031 <P/T/W/A>	L703-L705	231237M022R2	NCH-1471
F905,F906	25052133 Δ	NSCT-1P2031 <P>	L8501,L8502	231237M022R2	NCH-1471
AC outlet					
P903	25051126 Δ	NSCT-4P913 <D>	R8507,R8508	230921R2	BLM21B222SPT
	25051125 Δ	NSCT-4P912 <P/T/W>	C101,C102	356741009R2	10 μ F,16V, Elect.
	25052115 Δ	NSCT-2P2013 <A>	C108	356741009R2	10 μ F,16V, Elect.
Plug					
P901A	25055675 Δ	NPLG-2P631	C148,C158	356724709R2	47 μ F,6.3V, Elect.
Socket					
JL961B	25050267	NSCT-3P95	C701,C702	354724719S	470 μ F,6.3V, Elect.
POWER SWITCH PC BOARD (NASW-6571-1A/1B/1C/1D)					
CIRCUIT NO.	PART NO.	DESCRIPTION	C703,C704	356721019R2	100 μ F,6.3V, Elect.
C901	3500196S Δ	RE275V-103M,IS capacitor	C716,C718	356724709R2	47 μ F,6.3V, Elect.
S901	25035550 Δ	NPS-111-L512P,Push switch	C8501,C8504	356721019R2	100 μ F,6.3V, Elect.
			C8507	356721019R2	100 μ F,6.3V, Elect.
			C8509-C8514	356741009R2	10 μ F,16V, Elect.
INPUT SWITCH PC BOARD (NAETC-6572-1A/1B/1C/1D)					
CIRCUIT NO.	PART NO.	DESCRIPTION	Sockets		
ICs					
Q301	22240864	TC9273N-004	P7004B	25052049,	NSCT-40P1836,
Q302	22240247 or	BA15218N or		25050980,	NSCT-40P767,
	22240293	NJM4558L-D		25051306,	NSCT-40P1095,
Capacitors				25051847 or	NSCT-40P1634 or
C315,C316	354741009	10 μ F,16V, Elect.		25052236	NSCT-40P2133
C321,C322	354782209	22 μ F,50V, Elect.	P7205A	2009990542UL	NSAS-12P0713
Terminals					
P301,P302	25045575 or	NPJ-4PDRW389 or	DISPLAY CIRCUIT PC BOARD (NADIS-6576-1A/1B/1C/1D)		
	25045303	NPJ-4PDPL162	CIRCUIT NO.	PART NO.	DESCRIPTION
P305	25045571 or	NPJ-6PDRW386 or	Q7005	212198	FL tube
	25045300	NPJ-6PDPL159	Q1001	22241297R2	BU1923F <P>
Sockets			Q401	22240581R1	NJM4565M
P303	25051529	NSCT-18P1316	Q7001	22241398	MPD780208GF-047-3BA
P304	25051526	NSCT-4P1313	Refer to Caution 1 on page 22.		
DSP CIRCUIT PC BOARD (NADG-6575-1)			Remote sensor		
CIRCUIT NO.	PART NO.	DESCRIPTION	U7001	241330	PIC-26043TE2
ICs			Transistors		
Q101,Q102	22240581R1	NJM4565M	Q402,Q403	2215410R2	RN1441
Q114	22241338R2	AK4110VF	Q7002	2214490R2	RN1404
Q701	22278033ENE	MPC29M33HF	Q7003,Q7004	2214540R2	RN2403
Q702	22241399R2	TC7WU04F	Diodes		
Q707	22241340R9	CS492604-CL	D1001	223234R2 or	ISS352 or
Q708,Q709	22274574ER2TO	TC74VHC574FT		223233R1	ISS355 <P>
Q710	22241339R2	LC372100PT-K25-TLM	D7001	225290	SEL4110R
Q713	22274244ER2TO	TC74VHC244FT	D7002,D7003	223234R2 or	ISS352 or
Q8501	22241341R3	AK4526A-VQ	D7004	224490560R2	UDZ5.6B
Q8502-Q8504	22240581R1	NJM4565M	D7009	224490910R2	UDZ9.1B
			D7010	223234R2 or	ISS352 or
				223233R1	ISS355

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
		Oscillators			Diodes
X1001	3010203	AF6146CG,Crystal <P>	D939	224492700R2	UDZ27B
X7001	3010242	CST5.00MGW,Ceramic	D942,D943	224490750R2	UDZ7.5B
		Coils			Capacitors
L7001-L7003	231237K220R2	NCH-1477	C267,C268	354741009	10 μ F,16V, Elect.
		Capacitors	C269,C270	354721019	100 μ F,6.3V, Elect.
C1001	355780229	2.2 μ F,50V, Elect.	C273,C274	374728224	8200pF \pm 5%,50V,Plastic
C1003	355721019	100 μ F,6.3V, Elect.	C275,C276	374721824	1800pF \pm 5%,50V,Plastic
C401,C402	355744709	47 μ F,16V, Elect.	C277,C278	354744709	47 μ F,16V, Elect.
C407,C408	355741009	10 μ F,16V, Elect.	C281	354741009	10 μ F,16V, Elect.
C7001	355780229	2.2 μ F,50V, Elect.	C282,C284	354780339	3.3 μ F,50V, Elect.
C7002	3000078	DX-5R5L104,Super	C3151,C3152	354741009	10 μ F,16V, Elect.
C7004,C7005	355721019	100 μ F,6.3V, Elect.	C923	3504213S	4700 μ F,35V, Elect.
C7008	355721019	100 μ F,6.3V, Elect.	C924	354761029S	1000 μ F,35V, Elect.
C7009,C7010	355780109	1 μ F,50V, Elect.	C927,C928	354741009	10 μ F,16V, Elect.
C7014	355780109	1 μ F,50V, Elect.	C933	354742229S	2200 μ F,16V, Elect.
C7015	355741009	10 μ F,16V, Elect.	C935	354741009	10 μ F,16V, Elect.
C7018,C7019	355721019	100 μ F,6.3V, Elect.	C936	354762219	220 μ F,35V, Elect.
		Switches	C937	354772219S	220 μ F,63V, Elect.
S7101-S7109	25035652	NPS-111-S604	C942,C943	354741009	10 μ F,16V, Elect.
S7111-S7118	25035652	NPS-111-S604	C944,C945	354744709	47 μ F,16V, Elect.
S7121-S7128	25035652	NPS-111-S604			Resistors
S7131-S7138	25035652	NPS-111-S604	R921-R925	453532294	0.22 Ω \pm 5%,1/2W,Metal
		Plug	R926,R927	452630564F	5.6 Ω \pm 5%,1W,Metal
JL701B	25055624	NPLG-3P586	R929	441623304F	33 Ω \pm 5%,1W,Metal oxide
		Sockets	R932	452530224F	2.2 Ω \pm 5%,1/2W,Metal
JL702A	25051090	NSCT-6P877	R933	452630224F	2.2 Ω \pm 5%,1W,Metal
P7001A	25052086 or	NSCT-40P1873 or	R934	442522204F	22 Ω \pm 5%,1/2W,Metal oxide
P7004A	25052273	NSCT-40P2170	R937	452630334F	3.3 Ω \pm 5%,1W,Metal
		Holder	R938,R939	443523314	330 Ω \pm 5%,1/2W,Metal oxide
Q7005A	27191074	(FL)			Terminal
			P261	25045303 or	NPJ-4PDDBL162 or
				25045575	NPJ-4PDRW389
		ICs			Plugs
Q251	222780053	78L05	P204A	25055704	NPLG-8P660
Q261	22240581R1	NJM4565M	P205A	25055805	NPLG-16P761
Q3151	22241221R2	TC9164AF	P206A,P304A	25055804	NPLG-4P760
Q921	222780125	78M12HF	P242A	25055995	NPLG-9P947
Q922	222790125	79M12HF	P303A	25055807	NPLG-18P763
Q931	222780565JRC	NJM78M56FA	JL911A	25051111	NSCT-7P898
Q933,Q934	222780055	78M05HF	JL961A	25051107	NSCT-3P894
		Transistors	P101	25052024,	NSCT-15P1811,
Q244	2213510, 2215770 or 2214350	DTA114ES, NP KRA102M or RN2202		25050955, 25051281, 25051822 or	NSCT-15P742, NSCT-15P1070, NSCT-15P1609 or
Q245,Q246	2215024	2SD1468S-R		25052211	NSCT-15P2108
Q247	2215864, 2212115 or 2213284	NP KTC3199-GR, 2SC2458-GR or 2SC1740S-R <P>	P242	200A2281810UL	NSAS-18P0731
Q932	2211455	2SA1015-GR	P520	25052138	NSCT-7P2036
		Diodes	P7001B	25052049 or	NSCT-40P1836 or
D203,D204	224490620R2	UDZ6.2B		25052236	NSCT-40P2133
D901	22380285F or 22380022F	RS403M or RBV402			Pan head screws
D931	224490620R2	UDZ6.2B	Q921B,Q922B	82143010	3P+10FN(BC)
D932	223234R2 or 223233R1	ISS352 or ISS355	Q933B,Q934B	82143010	3P+10FN(BC)
D933-D938	22380260,	RL1N4003,			Heat sinks
D940,D941	22380032 or 22380035	1SR139-100 or GP104003E	Q921A	27160179	
			Q922A	27160229	
			Q933A	27160209	

DTR-5

CAUTION: Replacement of the transistor of mark *, if necessary, must be made from the same beta group (HFE) as the original type.

DIGITAL INPUT PC BOARD(NADG-6578-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
U7201	24120037	TORX178A,Photo coupler
Q7201	222740046R2TO	TC74HCU04F,IC
L7202,L7203	231237M022R2	NCH-1471,Coil
C7203	354721019	100 μ F,6.3V, Elect. Capacitor
P7201	25045504	NPJ-1PDBL319,RI
P7202,P7203	25045473	NPJ-1PDBL291,Coacial
P7205B	25055136	NPLG-6P120,Plug
P7206	2009990540UL	NSAS-4P0711,Socket
S7201	25065286	NSS-22112,Switch <W>

CIRCUIT NO. PART NO. DESCRIPTION

Transistors	
Q525,Q526	2203053,* 2SA1941-O,
	2202513,* 2SA1695-O,
	2202514,* 2SA1695-Y,
	2202516 or * 2SA1695-P or
	2203052,* 2SA1941-R,Transistor
Q529,Q530	
	2215864, NP KTC3199-GR,
	2212115 or 2SC2458-GR or
	2213284 2SC1740S-R
	Q591 2215830, NP KRC105M,
	2213640 or DTC123JS or
	2214660 RN1205

HEADPHONE TERMINAL PC BOARD

(NAETC-6579-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
JL702B	25051090	NSCT-6P877,Socket
P504B	25055445	NPLG-7P427,Plug
P7003	25045514	YKB26-5005,Headphone

D511,D512

Diodes	
	223163 or 1SS133 or
	223205 1SS270A
	D571 224470512 MTZJ5.1B
	D910 22380038 or RBV602 or
	22380274 RS603M,Diode

TONE CONTROL PC BOARD (NAETC-6580-1A/1B/1C/1D)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	L501,L502
C391,C392	374721534	0.015 μ F \pm 5%,50V,Plastic
	Resistors	C501,C502
R391,R392	5104356	N14RLC100KWT20Z,Variable
	Plug	C503,,C504
P391A	25055139	NPLG-9P123
		C505,C506
		C507-C510
		C517,C518
		C519,C520
		C521,C522
		C525,C526
		C535,C536

L501,L502

Capacitors	
	354784709 47 μ F,50V, Elect.
	374721015 100pF \pm 10%,50V,Plastic
	354742219 220 μ F,16V, Elect.
	354781009 10 μ F,50V, Elect.
	374724734 0.047 μ F \pm 5%,50V,Plastic
	374721044 0.1 μ F \pm 5%,50V,Plastic
	354744709 47 μ F,16V, Elect.
	354771019 100 μ F,63V, Elect.
	C535,C536 374721034 0.01 μ F \pm 5%,50V,Plastic

VOLUME CONTROL PC BOARD

CIRCUIT NO.	PART NO.	DESCRIPTION
S7001	25065575	EC16B2425,Rotary encoder
JL701A	25051087	NSCT-3P874,Socket

C535,C536

Resistors	
	R521-R524 443528204 82 Ω \pm 5%,1/2W,Metal oxide
	R525,R526 443526804 68 Ω \pm 5%,1/2W,Metal oxide
	R527,R528 443528204 82 Ω \pm 5%,1/2W,Metal oxide
	R529,R530 443525604 56 Ω \pm 5%,1/2W,Metal oxide
	R539-R542 453530224 2.2 Ω \pm 5%,1/2W,Metal
	R543,R544 443522214 220 Ω \pm 5%,1/2W,Metal oxide
	R547,R548 4000132 or RGC55 0.22 or
	4500245 BPR55FK0.22, Metal plate
	R555,R556 453630824 8.2 Ω \pm 5%,1W,Metal
	R557,R558 443623914 390 Ω \pm 5%,1W,Metal oxide
	R573,R574 5210259 N06HR2KBC,Trimming
	R591,R592 4500171F 2.2 Ω \pm 5%,1/4W,Metal

FRONT CHANNEL POWER AMPLIFIER PC BOARD (NAAF-6583-1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	R521-R524
Q501-Q504	2211732,* 2SC1845-F, 2211733,* 2SC1845-E, 2210755 or * 2SC1775A-E or 2210756,* 2SC1775A-F	R525,R526 R527,R528 R529,R530 R539-R542
Q505,Q506	2211732, Q527,Q528 2211733, Q581,Q582 2210755 or	443528204 443526804 443528204 443525604 453530224 443522214 4000132 or 4500245 453630824 443623914 5210259 4500171F
Q507-Q510	2215843 or	R555,R556
Q513,Q514	2211353	R557,R558
Q515,Q516	2215853 or	R573,R574
	2211633	R591,R592
Q517,Q518	2212654 or	Plugs
	2212653	P511,P512 P520A
Q519,Q520	2203010	Sockets
Q521,Q522	2203000	P504 2002381460UL
Q523,Q524	2203063,* 2SC5198-O, 2202523,* 2SC4468-O, 2202524,* 2SC4468-Y, 2202526 or * 2SC4468-P or 2203062,* 2SC5198-R	JL902B JL903A JL501A JL901A JL503A
Q583	2211792 or	NSAS-14P0710 NSCT-5P97 NSCT-4P895 NSCT-6P897 NSCT-7P898 NSCT-8P899
	2211793	25055038 25055913 NSAS-14P0710 NSCT-5P97 NSCT-4P895 NSCT-6P897 NSCT-7P898 NSCT-8P899

POWER AMPLIFIER PC BOARD (NAAF-6584-1A/1B)			CIRCUIT NO.	PART NO.	DESCRIPTION
CIRCUIT NO.	PART NO.	DESCRIPTION		Capacitors	
		Transistors			
Q1501,Q1502	2211732,	2SC1845-F,	C1501	354784709	47 μ F,50V, Elect.
Q601-Q604	2211733,	2SC1845-E,	C1502	374721015	100pF \pm 10%,50V,Plastic
	2210755 or	2SC1775A-E or	C1503	354742219	220 μ F,16V, Elect.
	2210756	2SC1775A-F	C1504,C1505	354781009	10 μ F,50V, Elect.
Q1503	2211732,	2SC1845-F,	C1510	374724734	0.047 μ F \pm 5%,50V,Plastic
Q1514	2211733,	2SC1845-E,	C1511	374721044	0.1 μ F \pm 5%,50V,Plastic
	2210755 or	2SC1775A-E or	C1512	354744709	47 μ F,16V, Elect.
	2210756	2SC1775A-F	C1526	374721034	0.01 μ F \pm 5%,50V,Plastic
Q1504-Q1507	2215843 or	NP KTA1024-O or	C1530	354780109	<P/T/W/A>
	2211353	2SA949-O	C1533,C1534	354771009	1 μ F,50V, Elect.
Q1508	2215853 or	NP KTC3206-O or	C1535	374721024	10 μ F,63V, Elect.
	2211633	2SC2229-O			1000pF \pm 5%,50V,Plastic
Q1509	2212653 or	2SC3421-O or	C601,C602	354784709	<P/T/W/A>
	2212654	2SC3421-Y	C603,C604	374721015	47 μ F,50V, Elect.
Q1510	2203010	2SC5171	C605,C606	354744709	100pF \pm 10%,50V,Plastic
Q1511	2203000	2SA1930	C607,C608	354742219	47 μ F,16V, Elect.
Q1512	2203063,	* 2SC5198-O,	C615,C616	354781009	220 μ F,16V, Elect.
Q623,Q624	2202523,	* 2SC4468-O,	C619,C620	354781009	10 μ F,50V, Elect.
	2202524,	* 2SC4468-Y,	C621,C622	374724734	0.047 μ F \pm 5%,50V,Plastic
	2202526 or	* 2SC4468-P or	C623,C624	374721044	0.1 μ F \pm 5%,50V,Plastic
	2203062	* 2SC5198-R	C625,C626	374721034	0.01 μ F \pm 5%,50V,Plastic
Q1513	2203053,	* 2SA1941-O,			<P/T/W/A>
Q625,Q626	2202513,	* 2SA1695-O,	C627,C628	354772219S	220 μ F,63V, Elect.
	2202514,	* 2SA1695-Y,	C631-C634	354774709	47 μ F,63V, Elect.
	2202516 or	* 2SA1695-P or	C639,C640	354780109	1 μ F,50V, Elect.
	2203052	* 2SA1941-R	C641,C642	374721024	1000pF \pm 5%,50V,Plastic
Q1515	2215864,	NP KTC3199-GR,			<P/T/W/A>
	2212115 or	2SC2458-GR or	C681	354781009	10 μ F,50V, Elect.
	2213284	2SC1740S-R			Resistors
Q609,Q610	2211732,	2SC1845-F,	R1512,R1513	443528204	82 Ω \pm 5%,1/2W,Metal oxide
Q627,Q628	2211733,	2SC1845-E,	R1515	443526804	68 Ω \pm 5%,1/2W,Metal oxide
	2210755 or	2SC1775A-E or	R1516	443528204	82 Ω \pm 5%,1/2W,Metal oxide
	2210756	2SC1775A-F	R1517	443525604	56 Ω \pm 5%,1/2W,Metal oxide
Q605,Q606	2215843 or	NP KTA1024-O or	R1519	443522214	220 Ω \pm 5%,1/2W,Metal oxide
Q613,Q614	2211353	2SA949-O	R1522,R1523	453530224	2.2 Ω \pm 5%,1/2W,Metal
Q611,Q612	2215864,	KTC3199-GR,	R1524	4500245 or	BPR55FK0.22 or
	2212115 or	2SC2458-GR or		4000132	RGC55 0.22,Metal plate
	2213284	2SC1740S-R	R1529	453630824	8.2 Ω \pm 5%,1W,Metal
Q615,Q616	2212653 or	2SC3421-O or	R1532	5210288	N06HR2.2KBE,Trimming
	2212654	2SC3421-Y	R1534,R1535	4500159F	0.22 Ω \pm 5%,1/4W,Metal
Q617,Q618	2215853 or	NP KTC3206-O or	R623-R626	443528204	82 Ω \pm 5%,1/2W,Metal oxide
	2211633	2SC2229-O	R629,R630	443525604	68 Ω \pm 5%,1/2W,Metal oxide
Q619,Q620	2203010	2SC5171	R633,R634	443526804	56 Ω \pm 5%,1/2W,Metal oxide
Q621,Q622	2203000	2SA1930	R635,R636	443528204	82 Ω \pm 5%,1/2W,Metal oxide
Q629,Q630	2215843 or	NP KTA1024-O or	R641,R642	443522214	56 Ω \pm 5%,1/2W,Metal oxide
	2211353	2SA949-O	R643-R646	453530224	220 Ω \pm 5%,1/2W,Metal oxide
Q691,Q692	2215830,	NP KRC105M,	R647,R648	4500245 or	2.2 Ω \pm 5%,1/2W,Metal
	2213640 or	DTC123JS or		4000132	BPR55FK0.22 or
	2214660	RN1205	R655,R656	453630824	RGC55 0.22,Metal plate
		Diodes	R659,R660	4500268	8.2 Ω \pm 5%,1W,Metal
D1501,D1506	223163 or	1SS133 or	R673,R674	5210288	2.2 Ω \pm 5%,1/2W,Metal
D607,D608	223205	1SS270A	R675-R678	4500159F	N06HR2.2KBE,Trimming
D691,D692	223163 or	1SS133 or			0.22 Ω \pm 5%,1/4W,Metal
	223205	1SS270A			Relays
		Coils	RL1501	25065574	NRL-1P5A-DC24-134
L1501	231176	S-1.3C	RL601,RL602	25065563,	NRL-2P5A-DC24-129,
L601,L602	231176	S-1.3C		25065510 or	NRL-2P5A-DC24-095 or
				25065517	NRL-2P5A-DC24-098

CIRCUIT NO.	PART NO.	DESCRIPTION	MULTI-CHANNEL INPUT TERMINAL (NAAF-6589-1A/1B)		
Plugs			CIRCUIT NO. PART NO. DESCRIPTION		
P1511	25055038	NPLG-2P29	Q241-Q243	22240247 or 22240293	ICs BA15218N or NJM4558L-D
P611,P612	25055038	NPLG-2P29	C248,C249	354741009	Capacitors 10 μ F,16V, Elect.
P601A	25055236	NPLG-5P220	P241	25045572	Terminal NPJ-6PDBRW387
Sockets			P242A	25055995	Plug NPLG-9P947
JL903B	25050268	NSCT-4P96			
JL902A	25051109	NSCT-5P896			
JL501B	25050283	NSCT-6P111			
Terminal					
P603	25060290	NTM-8PDML221			
SPEAKER TERMINAL PC BOARD (NAETC-6588-1A/1B)					
CIRCUIT NO.	PART NO.	DESCRIPTION	SECONDARY CIRCUIT PC BOARD (NAETC-6590-1A/1B)		
Diode			CIRCUIT NO. PART NO. DESCRIPTION		
D591	223163 or 223205	ISS133 or ISS270A	C992	374731044	Capacitors 0.1 μ F \pm 5%,100V,Plastic
Capacitors			C993,C994	374721044	0.1 μ F \pm 5%,50V,Plastic
CS61,C562	374721034	0.01 μ F \pm 5%,50V, Plastic <P/T/W>	R991,R992	453530104	Resistors 1 Ω \pm 5%,1/2W,Metal
C565,C566	374721024	1000pF \pm 5%,50V Plastic <P/T/W>	R993	4500229	0.1 Ω \pm 5%,1/4W,Metal
Relay			JL901B	25051111	Sockets NSCT-7P898
RL501	25065563, 25065510 or 25065517	NRL-2P5A-DC24-129, NRL-2P5A-DC24-095 or NRL-2P5A-DC24-098	JL911B	25050284	NSCT-7P112
Sockets					
JL503B	25051112	NSCT-8P899			
P502	200B010420UL	NSAS-4P0717			
Terminal					
P501	25060291	NTM-6PDMN222			

NOTE: <D>:120V model only
<P>:European model only
<T>:Asian model only
<W>:Worldwide model only
<A>:Australian model only

CAUTION 1


Replacing the microprocessor Q7001

This unit is used the microprocessor of two types.

(MPD780208GF-047-3BA or MPD780208GF-045-BA)

When you replace the microprocessor MPD780208GF-045-BA,
use the microprocessor MPD780208GF-047-3BA instead of it.

At the same time you are necessary to remove R157, Q152, and D150.

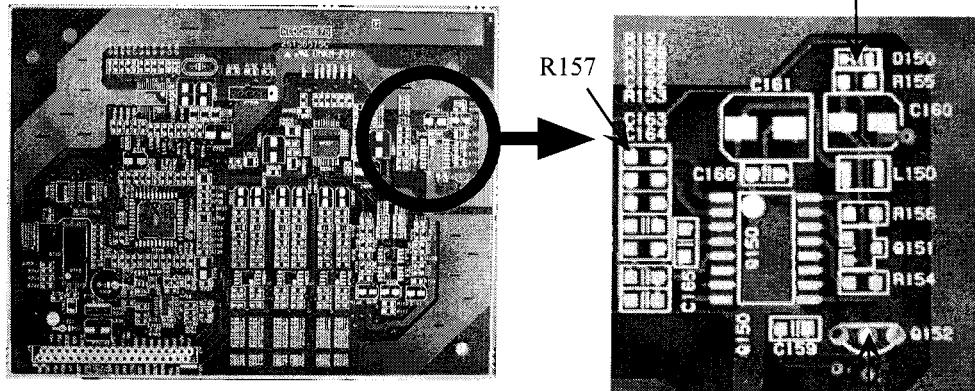

NADG-6575

ADJUSTMENT PROCEDURES AND CONFIRMATION

1. Idling current adjustment

Before Idling adjustment, turn the trimming resistors R573, R574, R673, R674 and R1532 to counter clockwise. Connect the DC voltmeter to sockets P511, P512, P611, P612 and P1511.


After turn POWER to ON, adjust the trimming resistors R573, R574, R673, R674 and R1532 so that the reading of voltmeter becomes $2.5 \pm 0.2\text{mV}$.

After adjustment, attach the top cover.

Confirm the voltage of above points after five minutes.

Readjust the above resistors so that the voltage becomes $6.5 \pm 0.2\text{mV}$.

Note: No load and No signal

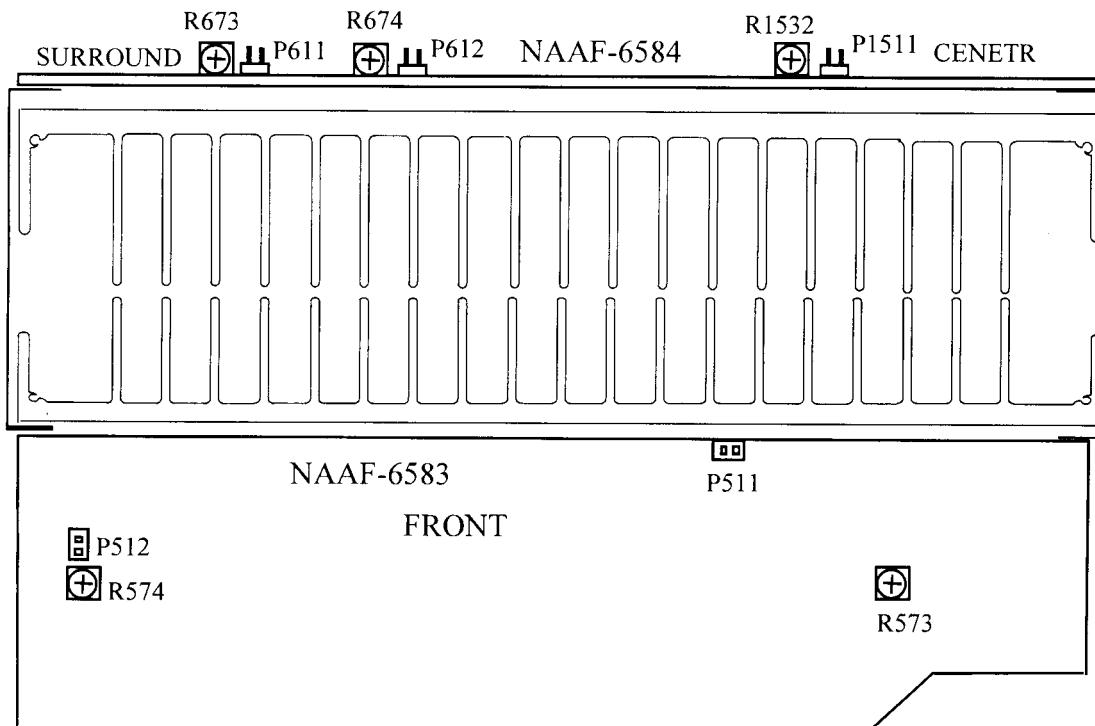

Confirmation of protection circuit

1. Confirmation of operation of speaker relay

Confirm that the speaker relay turns ON approximate. 5 seconds after the power switch is turned ON.

Confirm that the speaker relay turns OFF immediately after the power switch is turned OFF.

2. Confirmation of DC detection circuit

Press and hold down CD button, then press SPEAKERS-A and SPEAKERS-B buttons at the same time.

During "TEST-" on the FL tube is displayed, press DVD button. Next, press CD button.(Refer to Test mode.)
Apply DC $1.5 \sim 3\text{V}$ to MULTI CHANNEL INPUT terminals with no load.

Confirm that the speaker relay turns OFF.

Apply DC $-1.5 \sim -3\text{V}$ to MULTI CHANNEL INPUT terminals with no load.

Confirm that the speaker relay turns OFF.

3. Confirmation of Current detection circuit


Press and hold down CD button, then press SPEAKERS-A and SPEAKERS-B buttons at the same time.

During "TEST-" on the FL tube is displayed, press DVD button. Next, press CD button.

Connect Differentiator and apply the 50Hz square signal to the terminal of MULTI CHANNEL INPUT.

Adjust the attenuator or Volume so that the output level becomes 30V p-p.


Confirm that the speaker relay turns OFF when a 1.5 ohm load is connected.

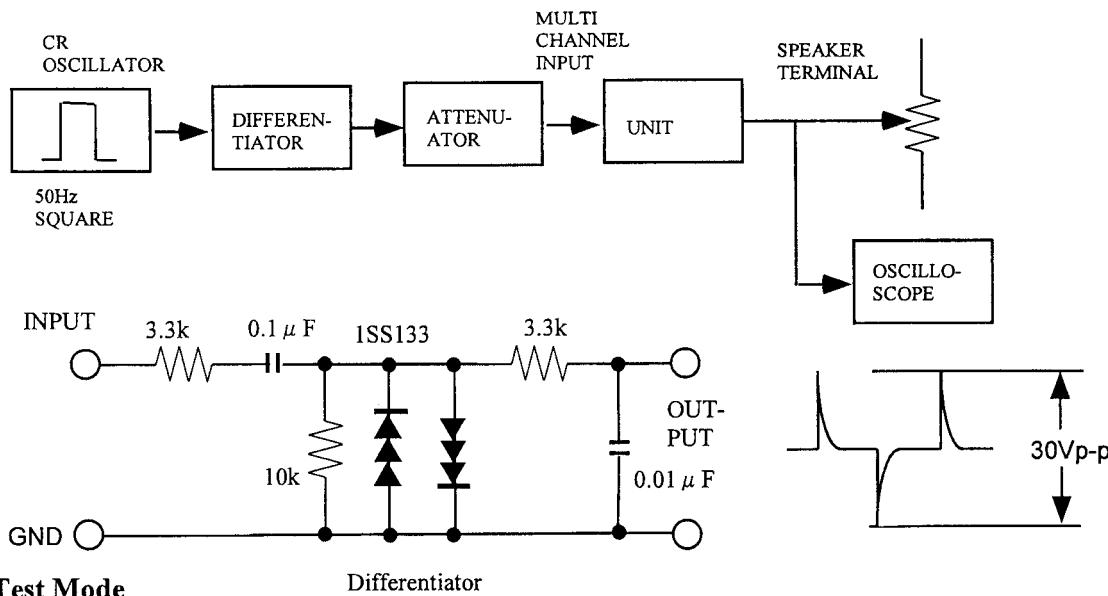**Test Mode**


1. Turn POWER button on.
2. Press and hold down CD button, then press SPEAKERS-A and SPEAKERS-B buttons at the same time.
3. During "TEST-" on the FL tube is displayed, press CD, DVD, VIDEO 1, or VIDEO 2 button to set the unit to the test mode shown below.
4. Press CD or PHONO button to select the test item.

Button Operation in the Test Mode

Button Operation	Test Mode
CD	TEST-0
DVD	TEST-1
VIDEO 1	TEST-2
VIDEO 2	TEST-3
CD	UP of item
PHONO	DOWN of item

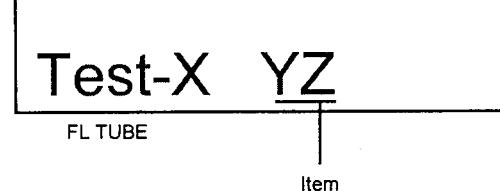


TEST-0

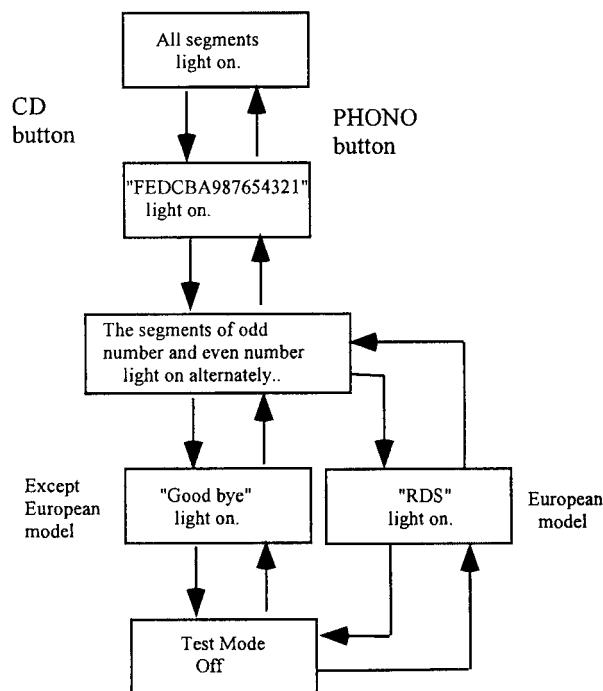


DTR-5

WIRING VIEW

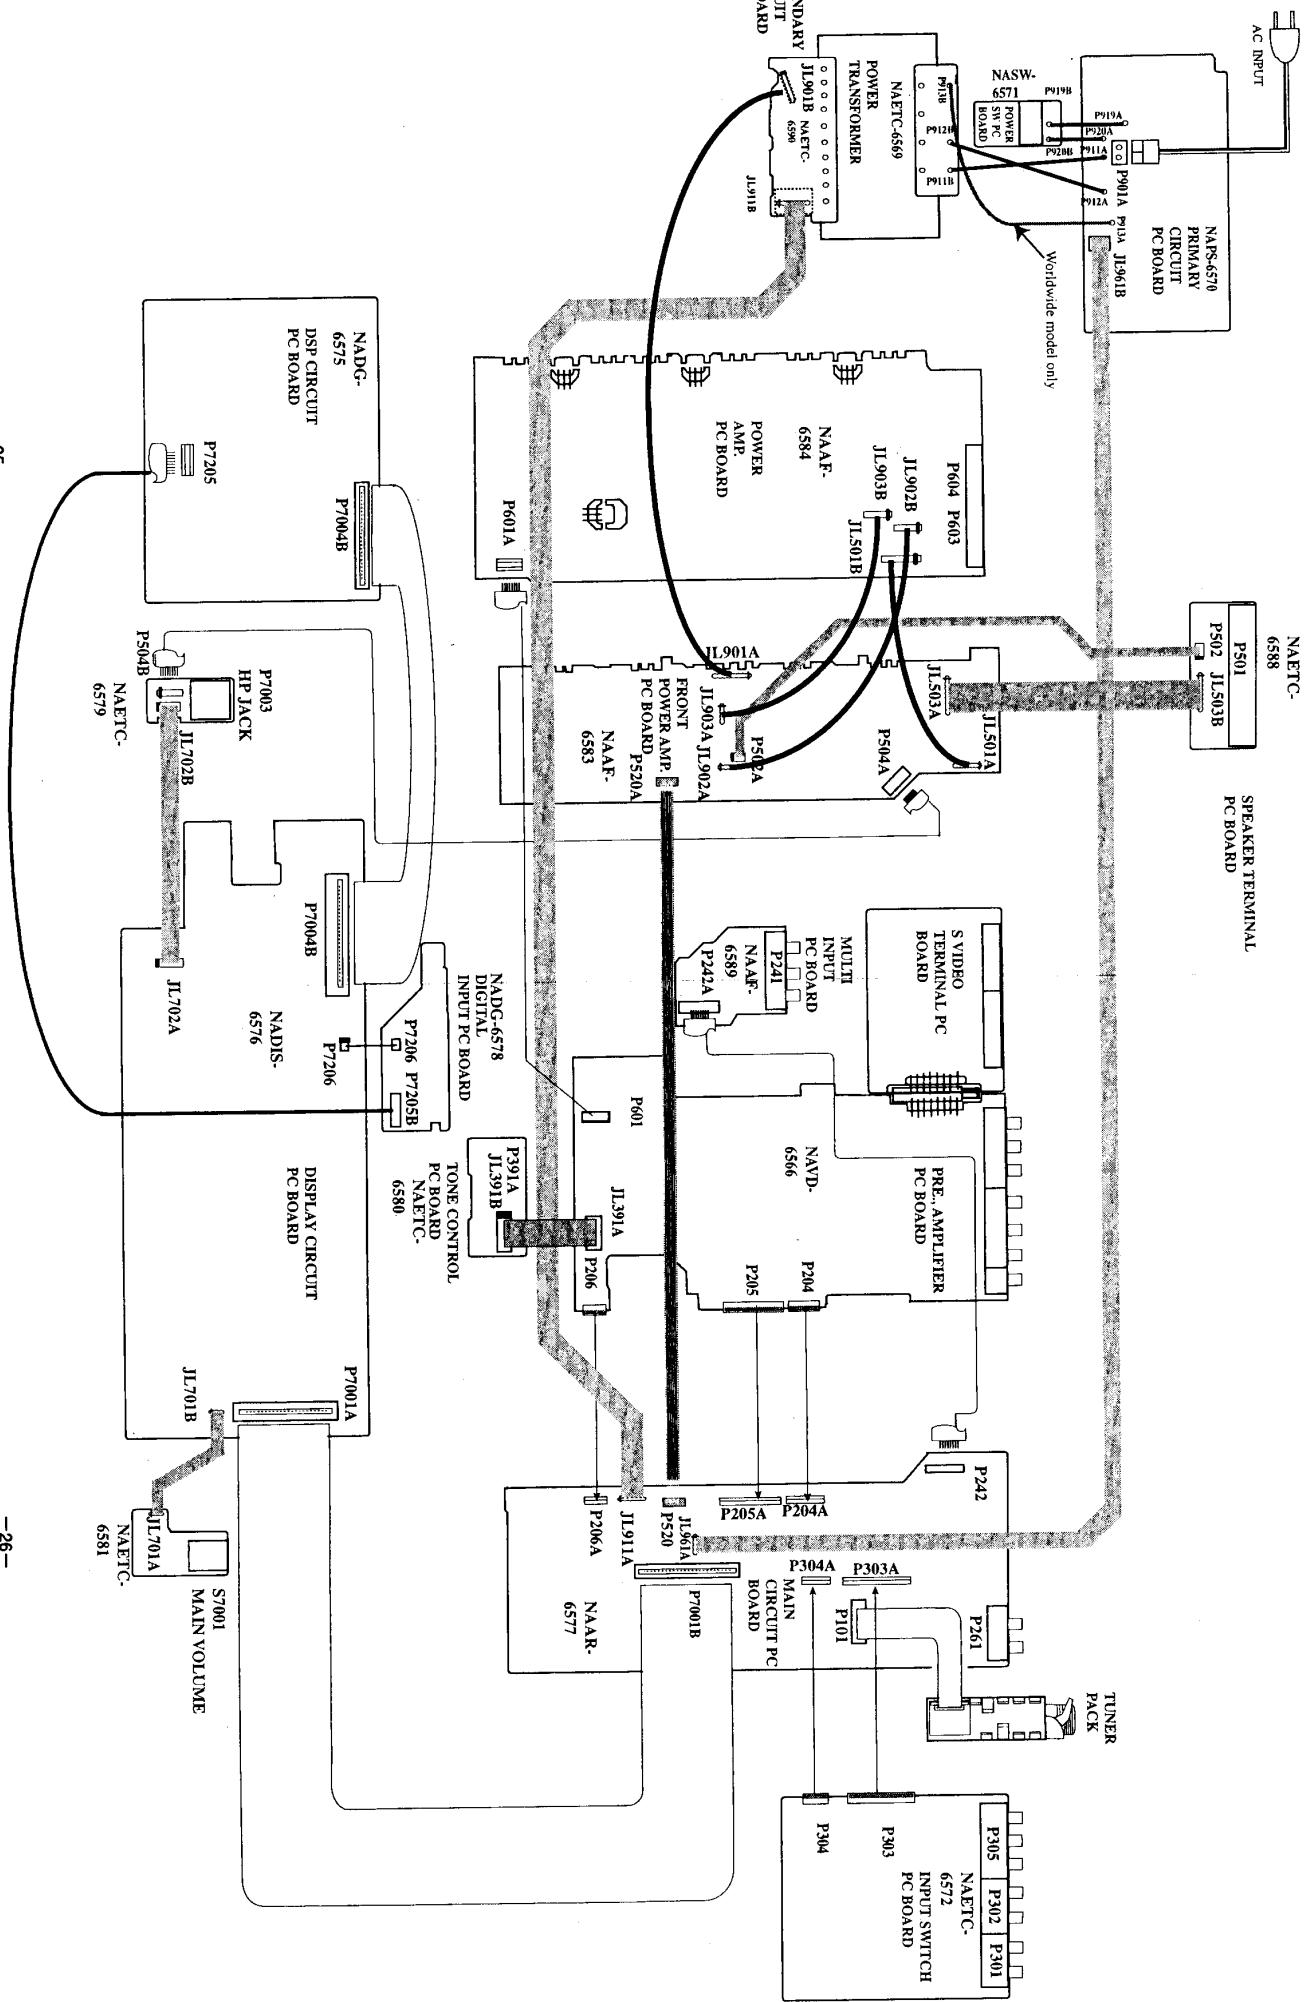


BLOCK DIAGRAM

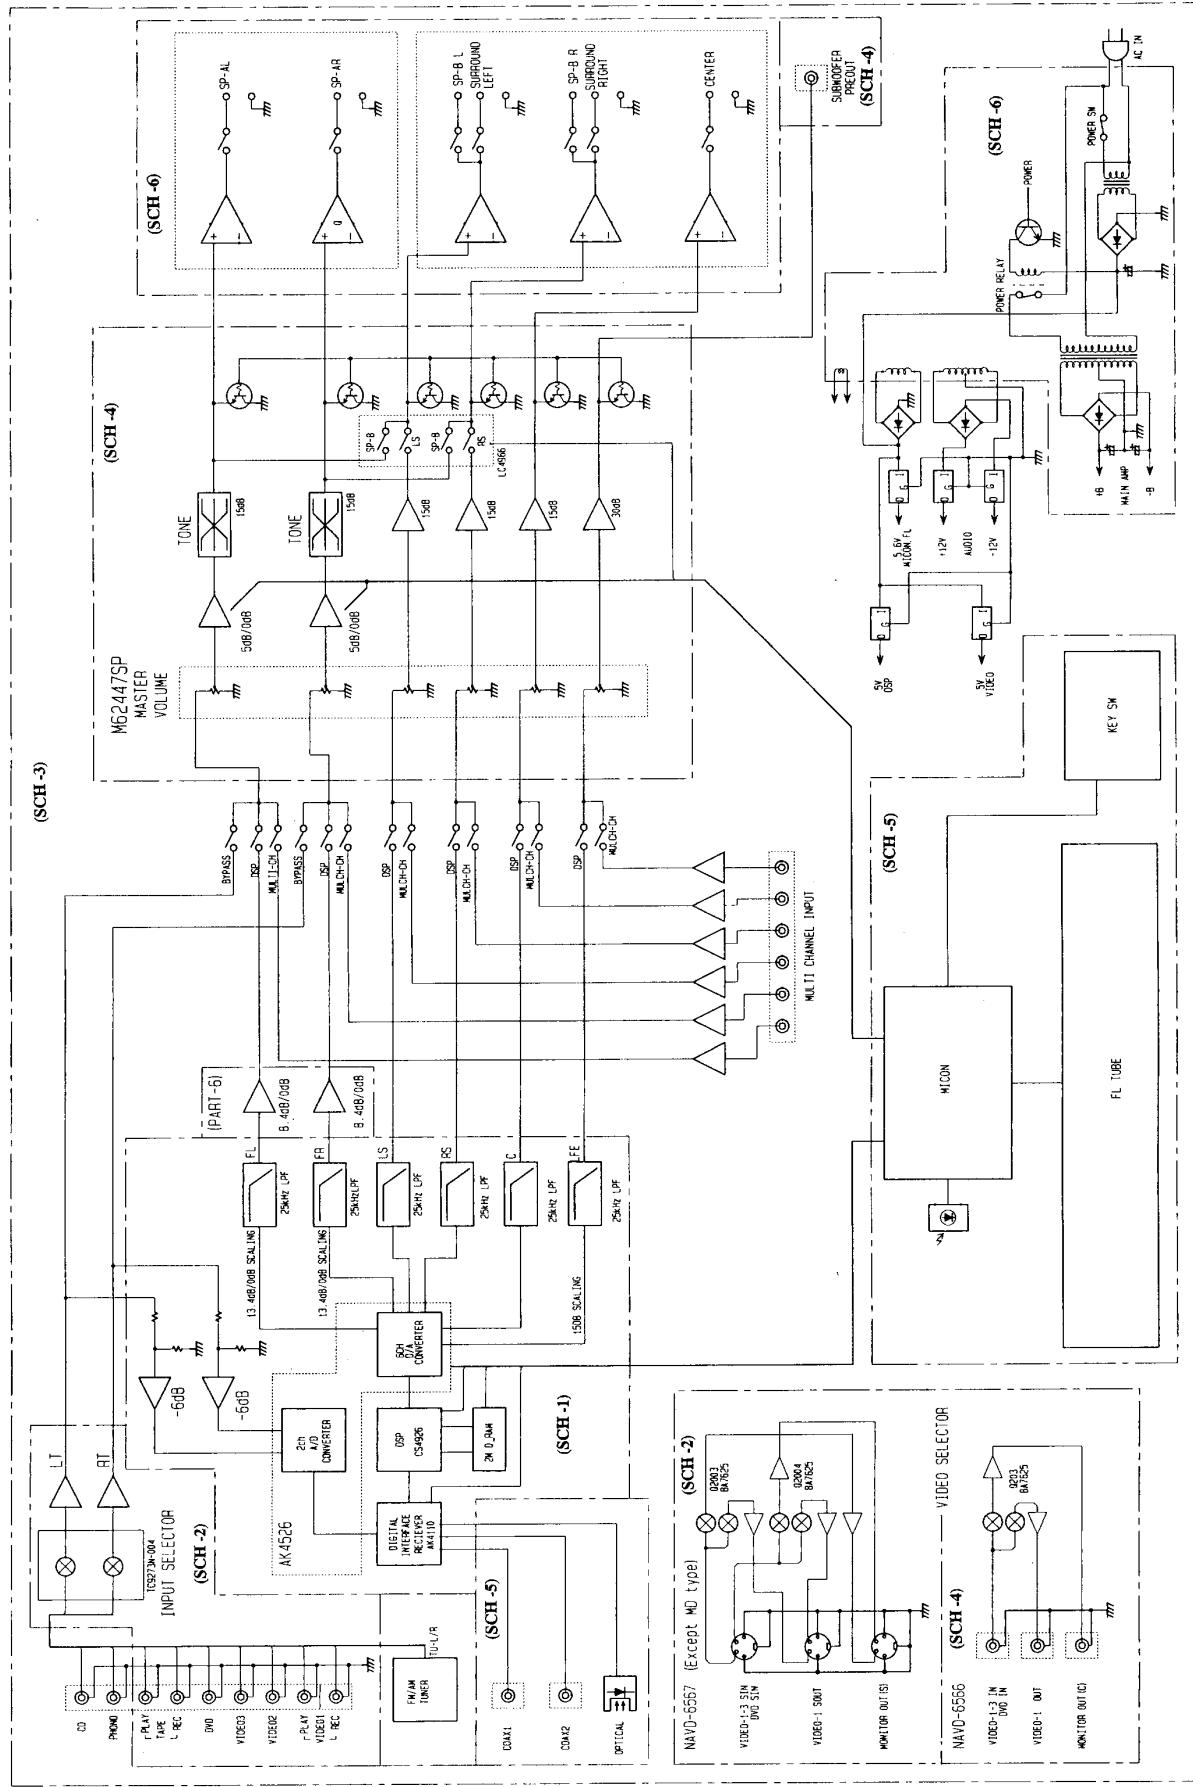


DTR-5

H
G
F
E
D
C
B
A

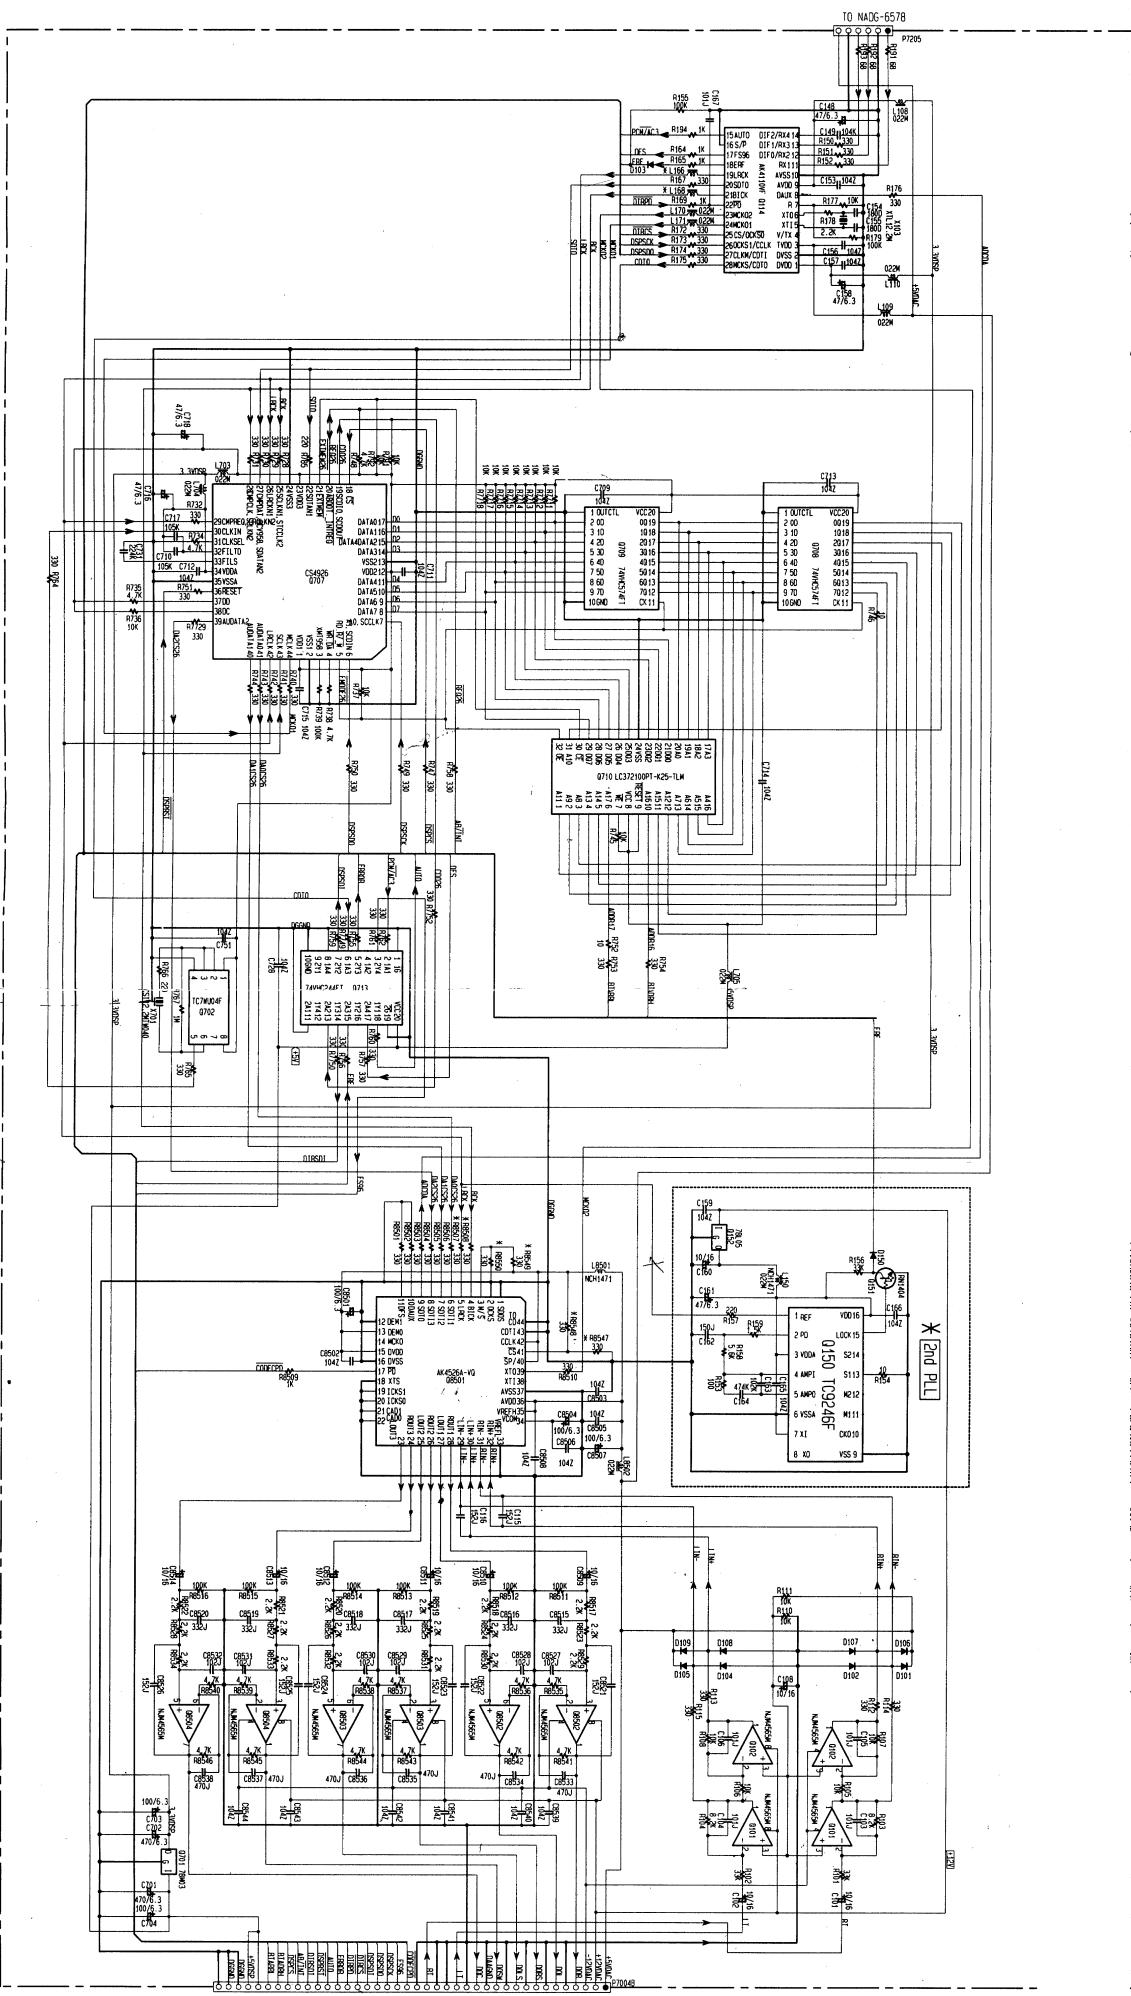


SCHEMATIC DIAGRAM 1

DSP

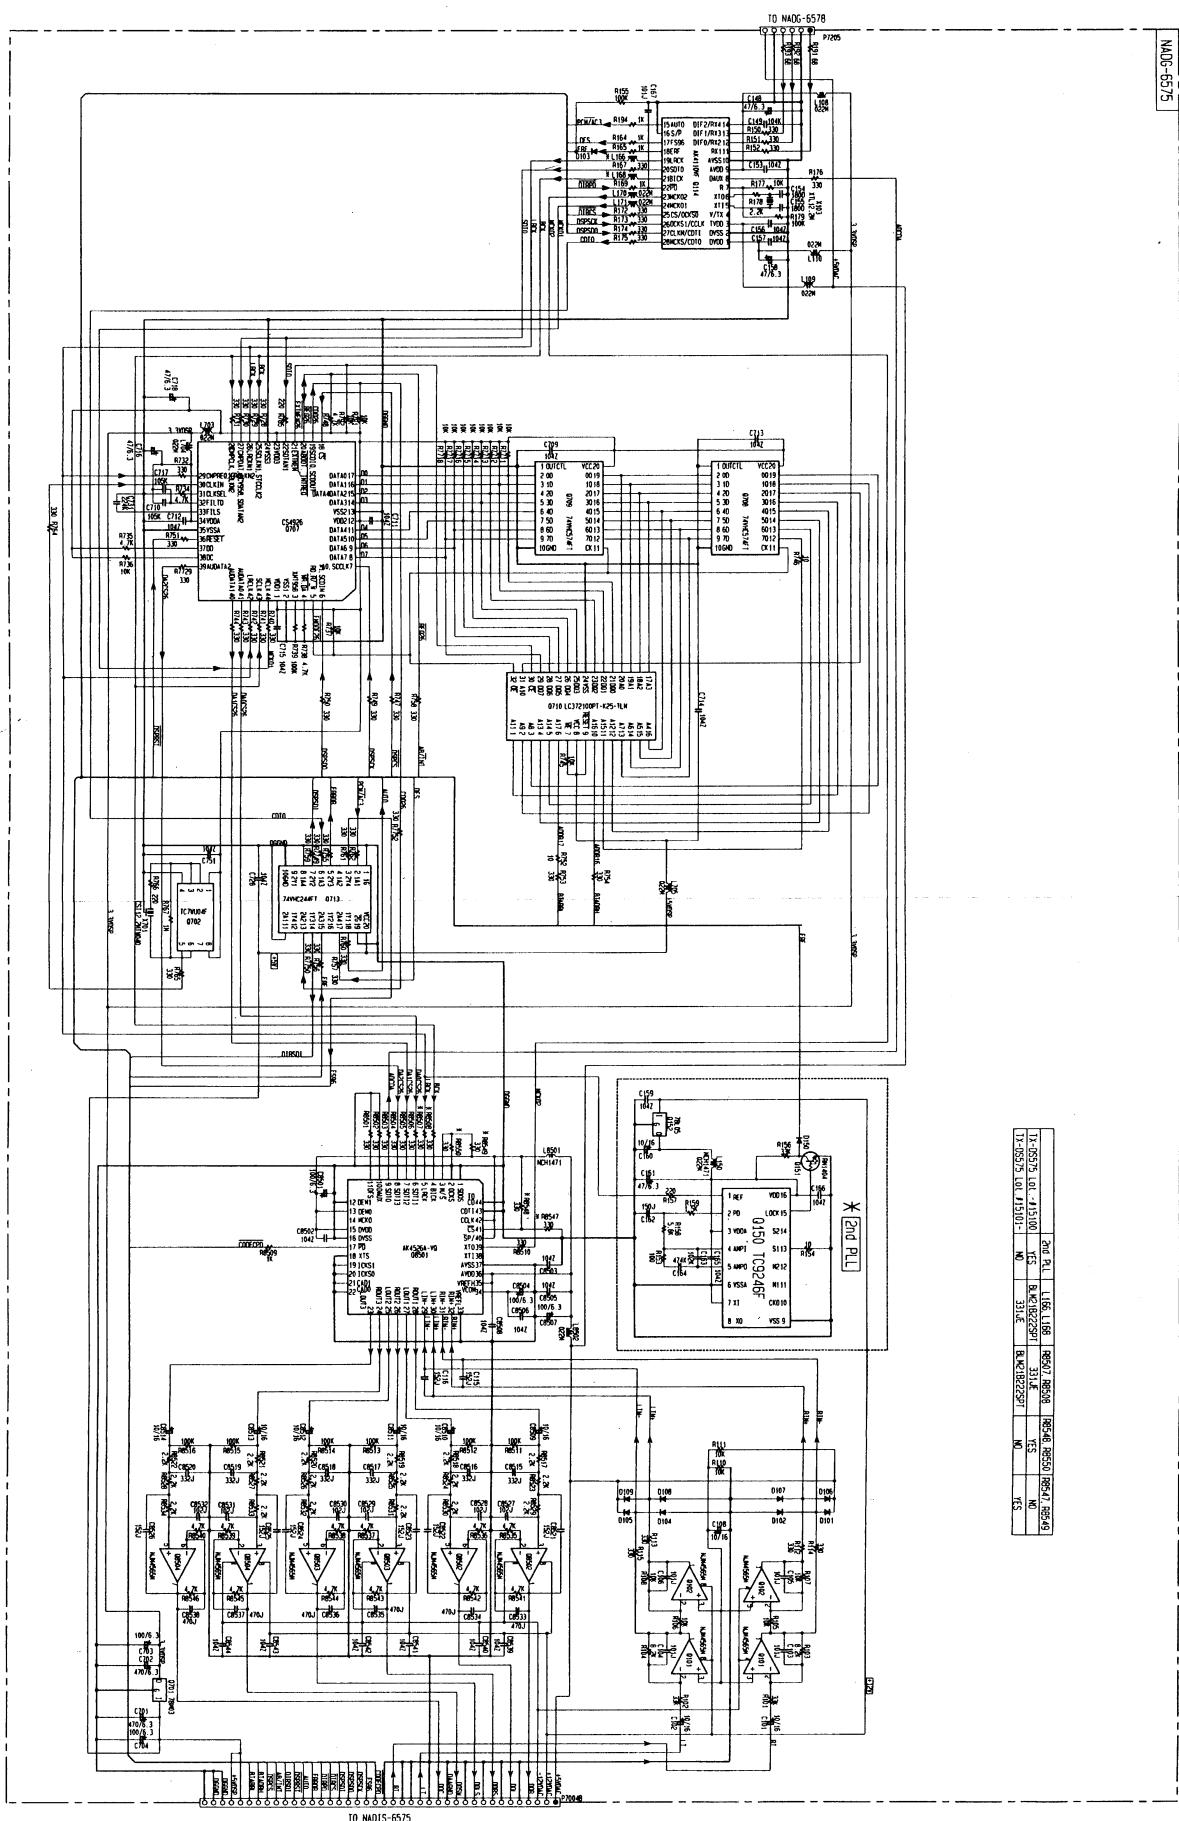


PRINTED CIRCUIT BOARD VIEW

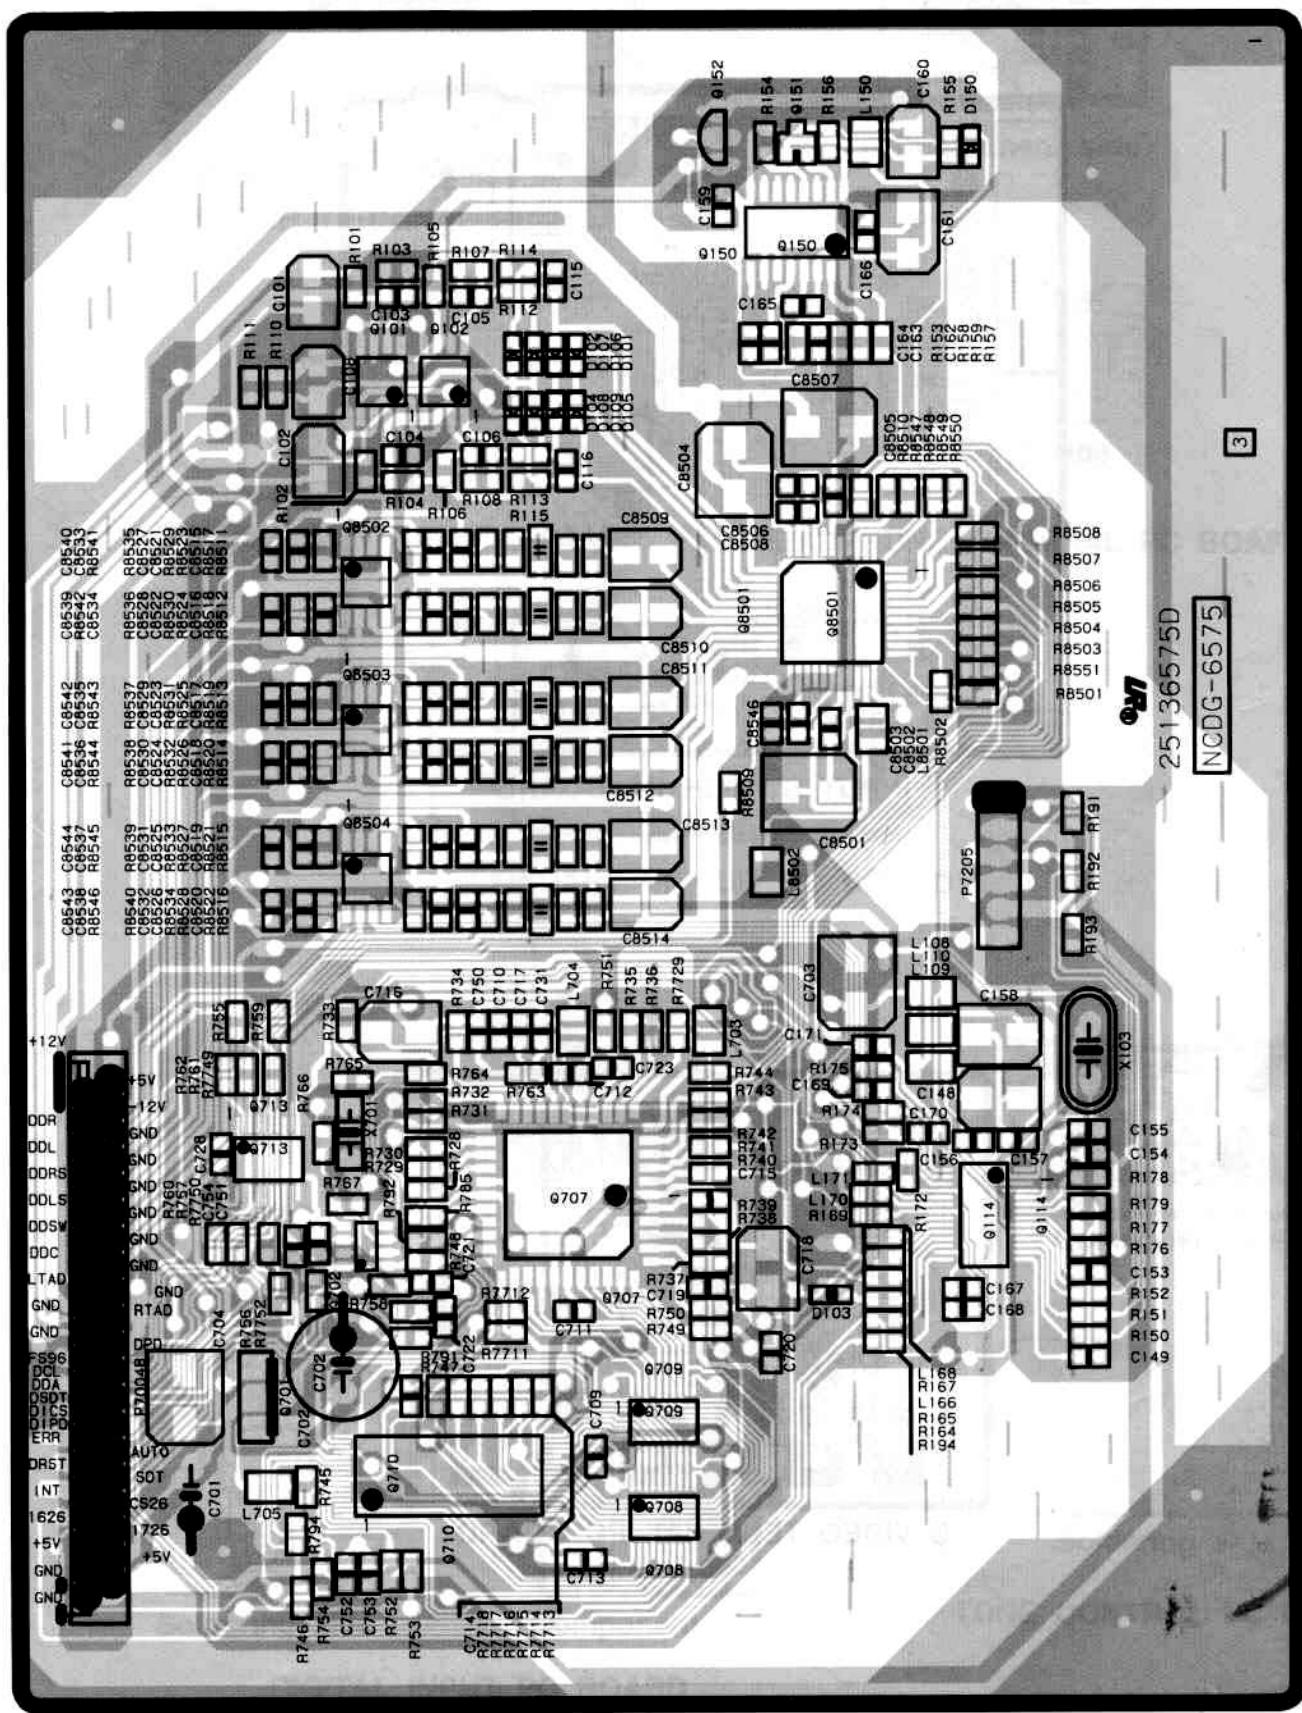


DSP CIRCUIT PC BORAD

SCHEMATIC DIAGRAM 2

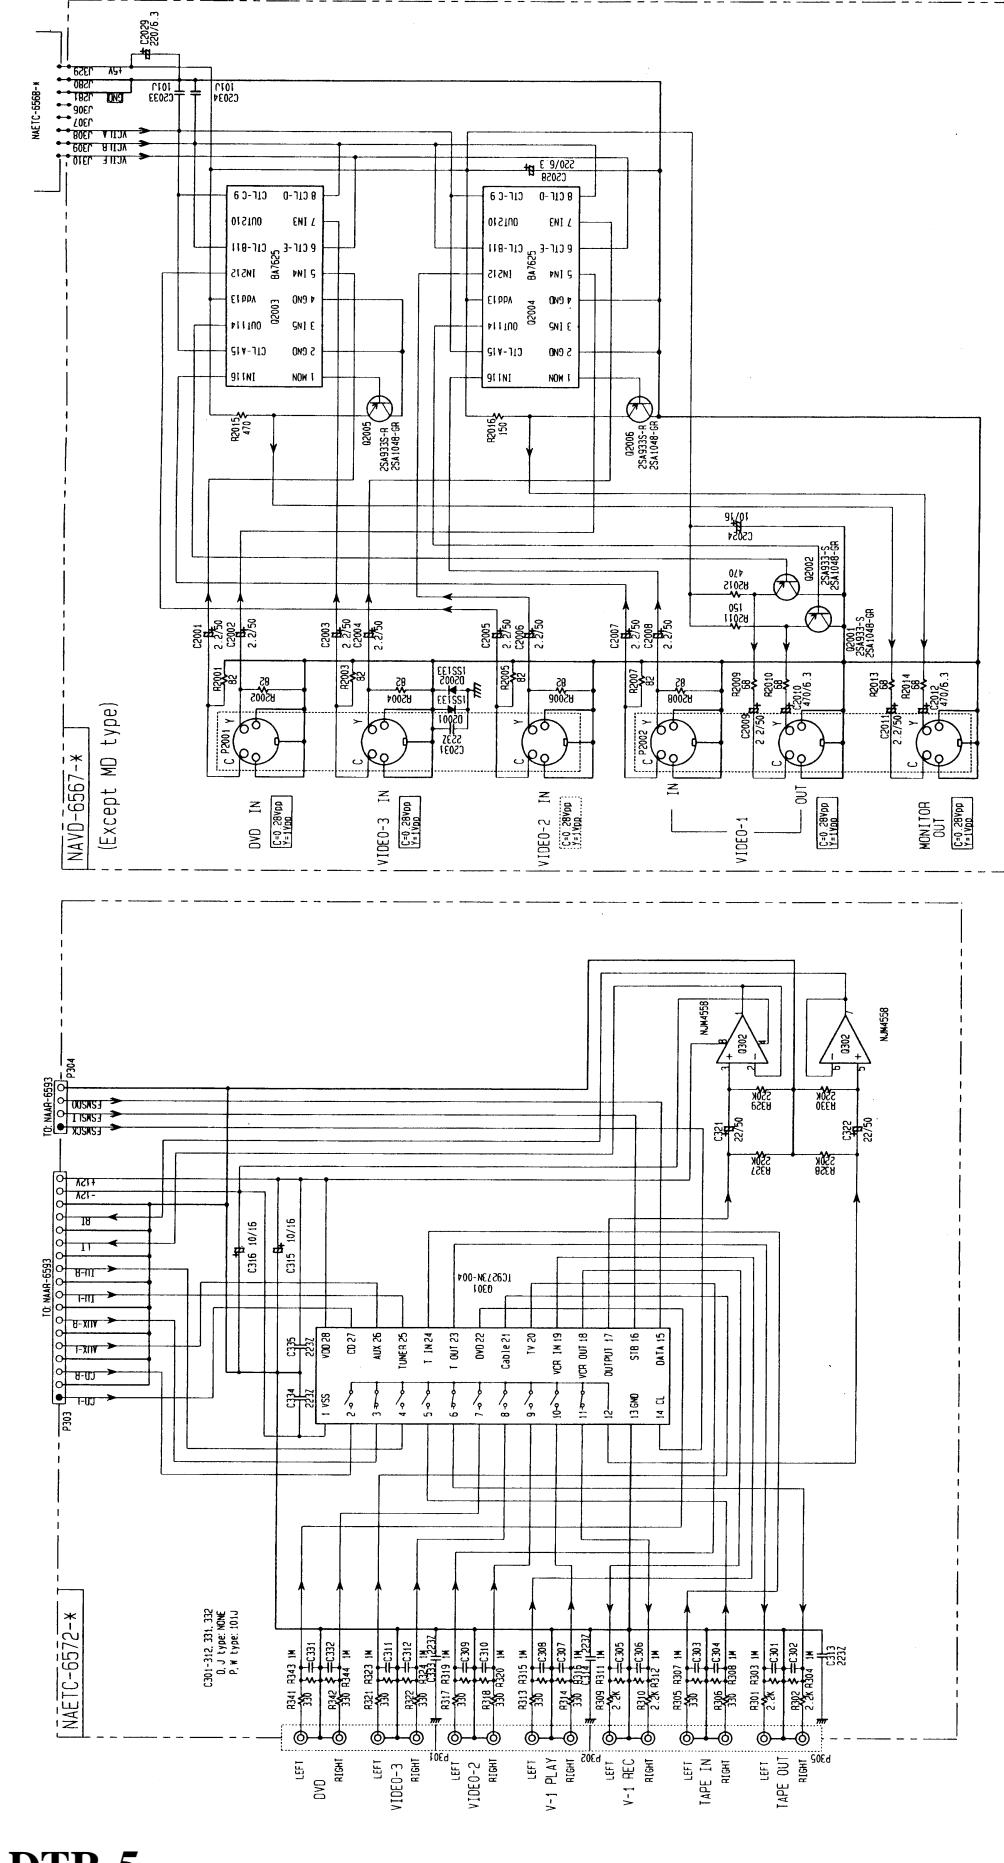

H
G
F
E
D
C
B
A


SCHEMATIC DIAGRAM 3

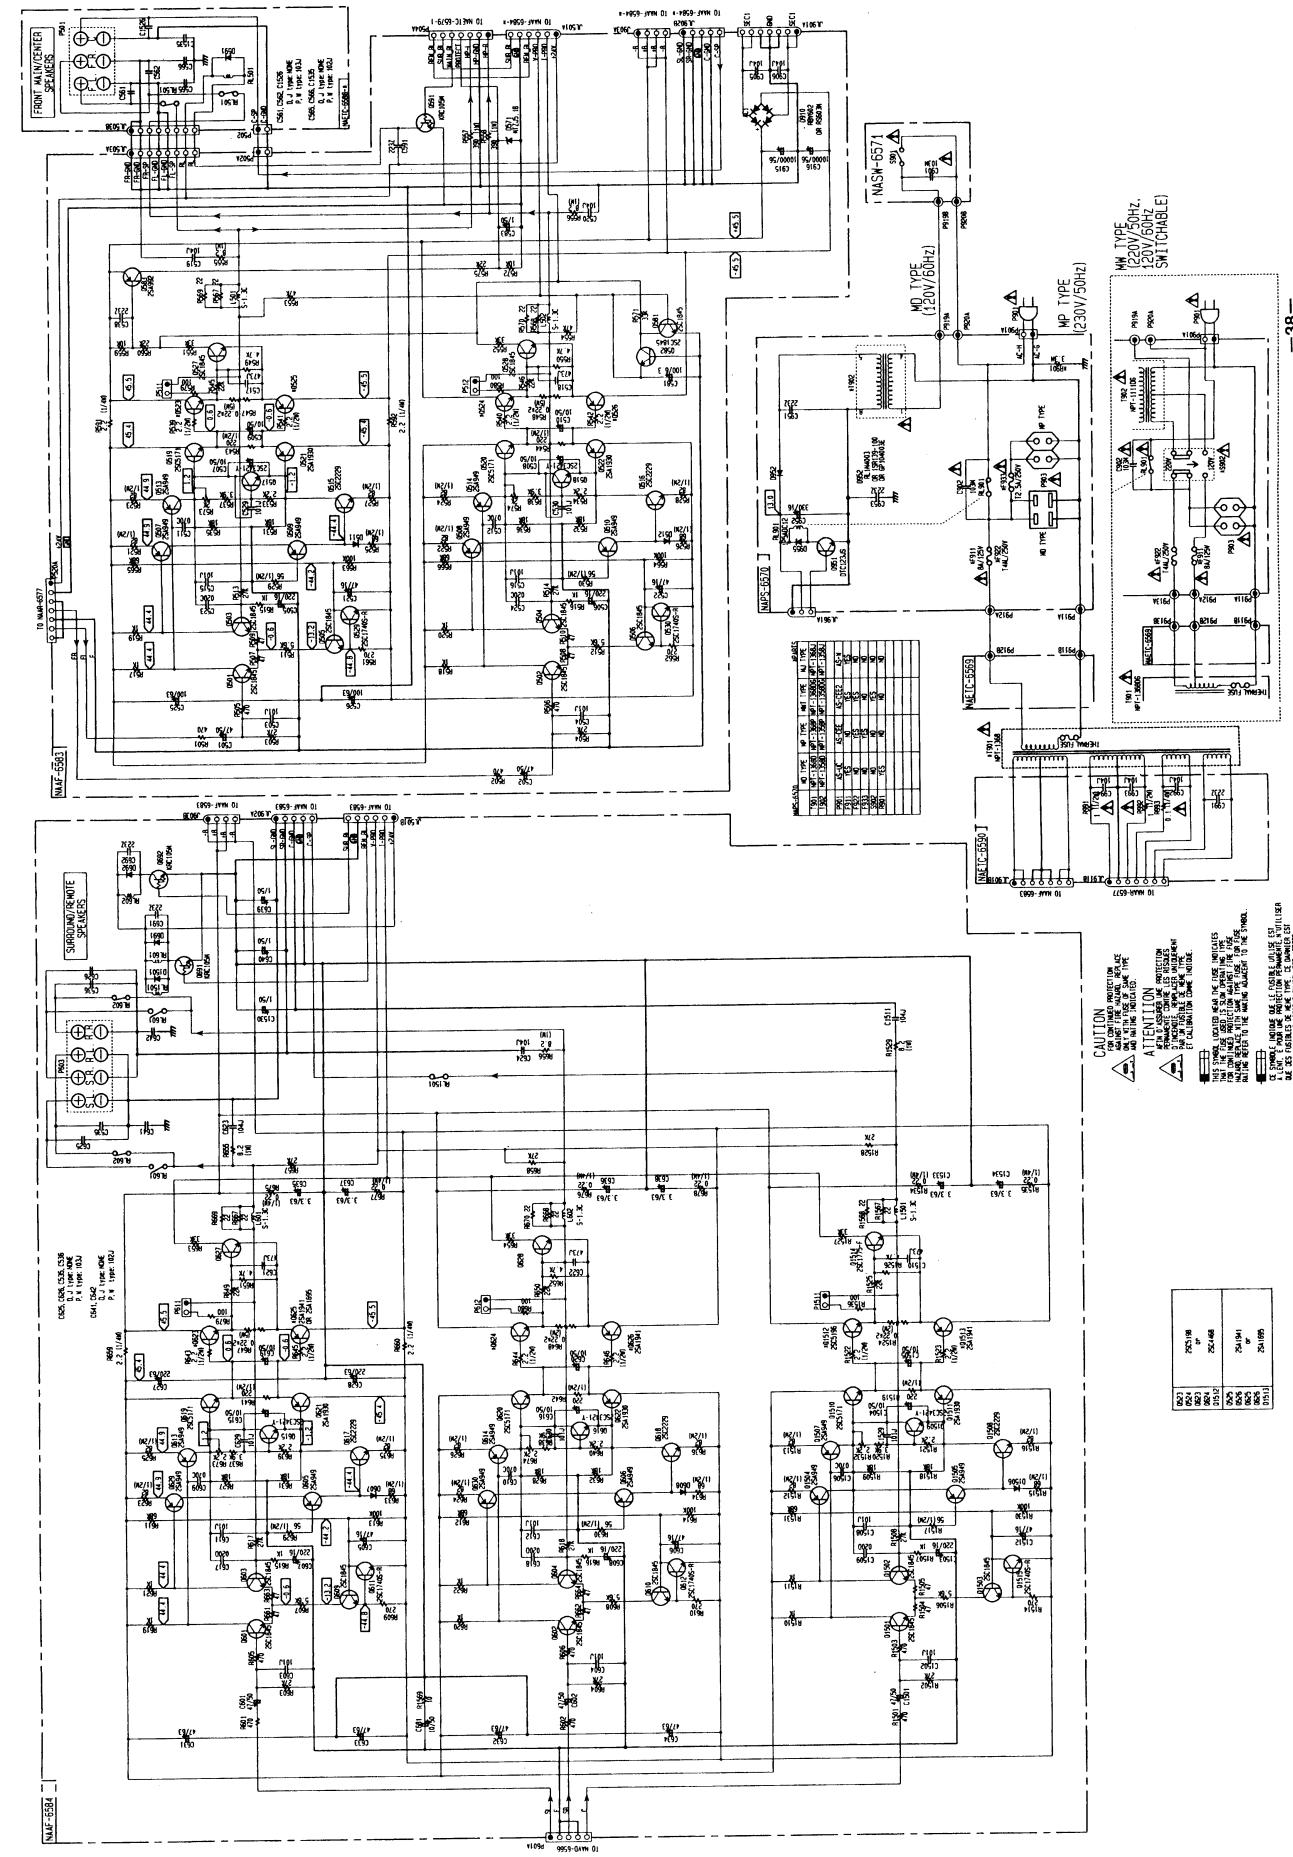

DTR-5

H
G
F
E
D
C
B
A


SCHEMATIC DIAGRAM 4

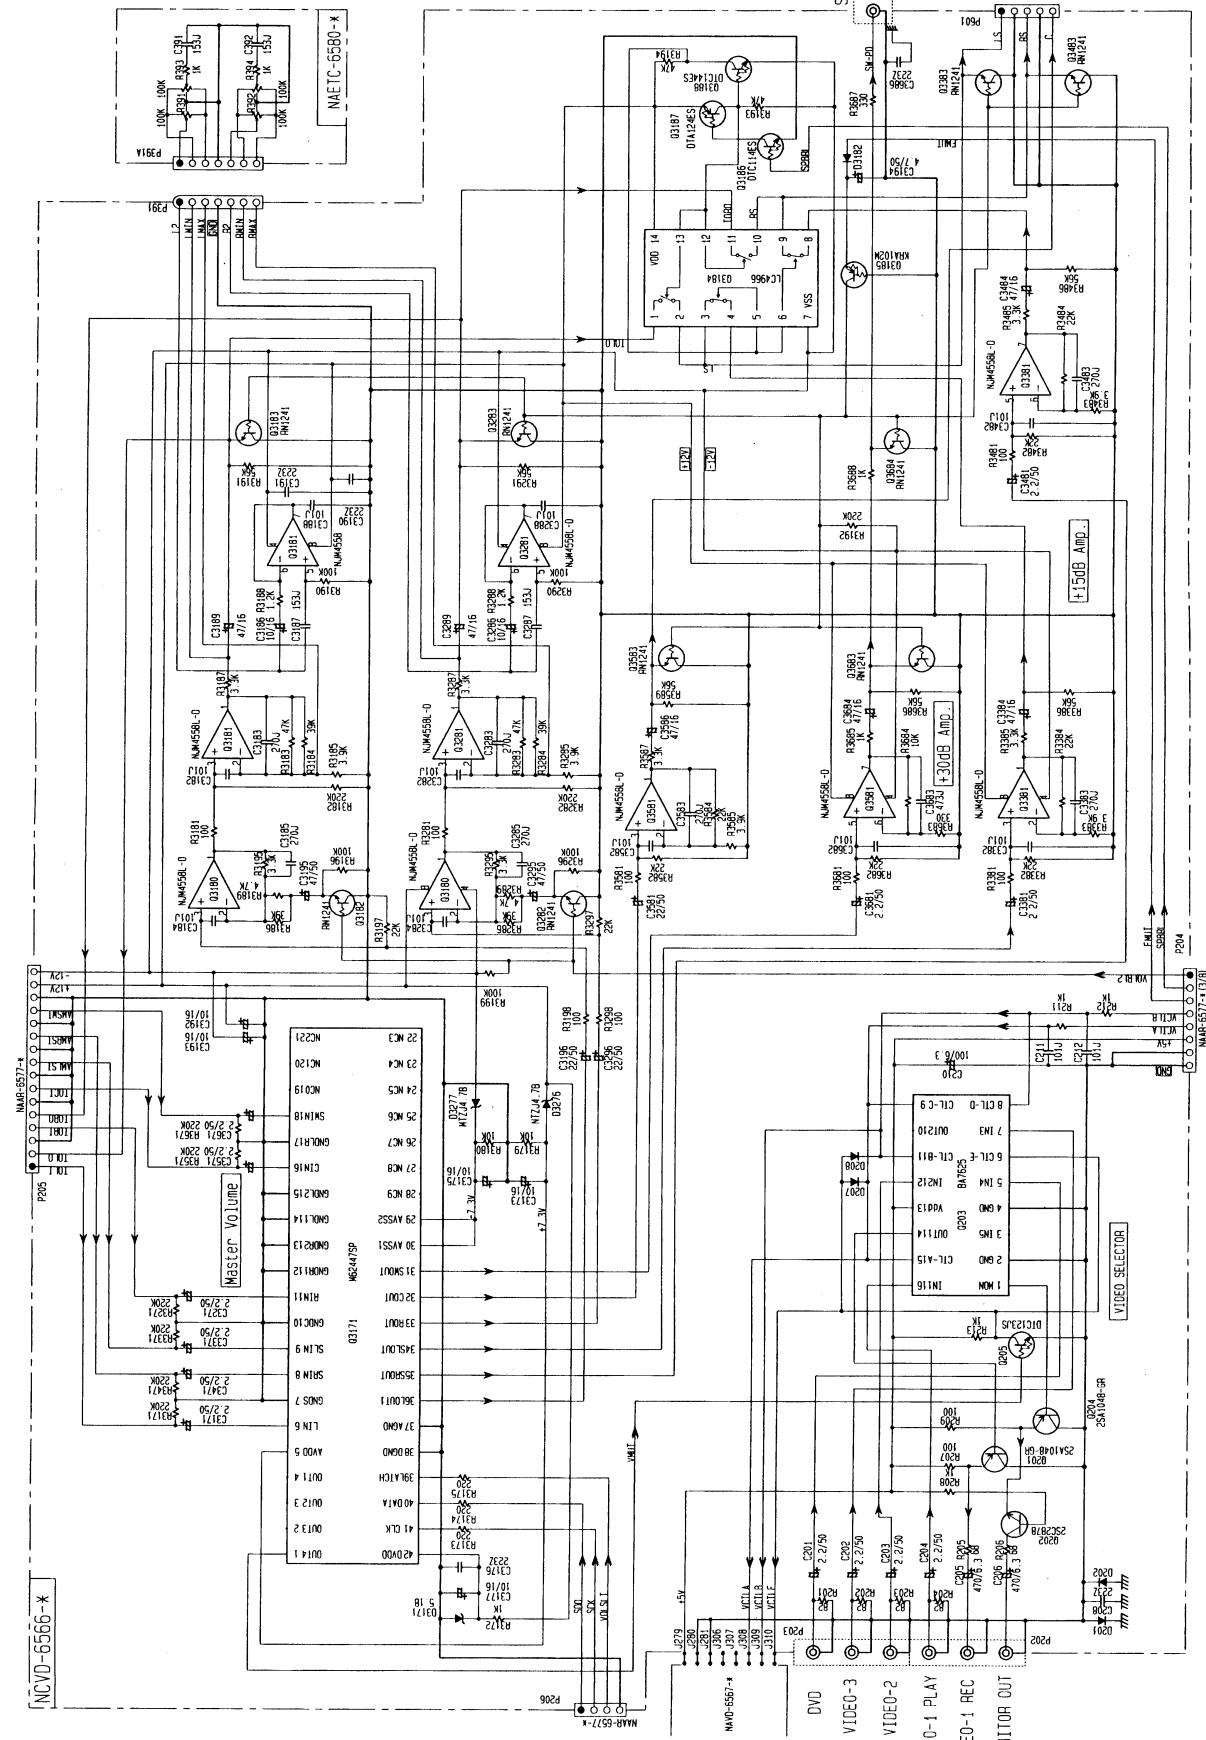

DTR-5

SCHEMATIC DIAGRAM 5

10 MDC-5575

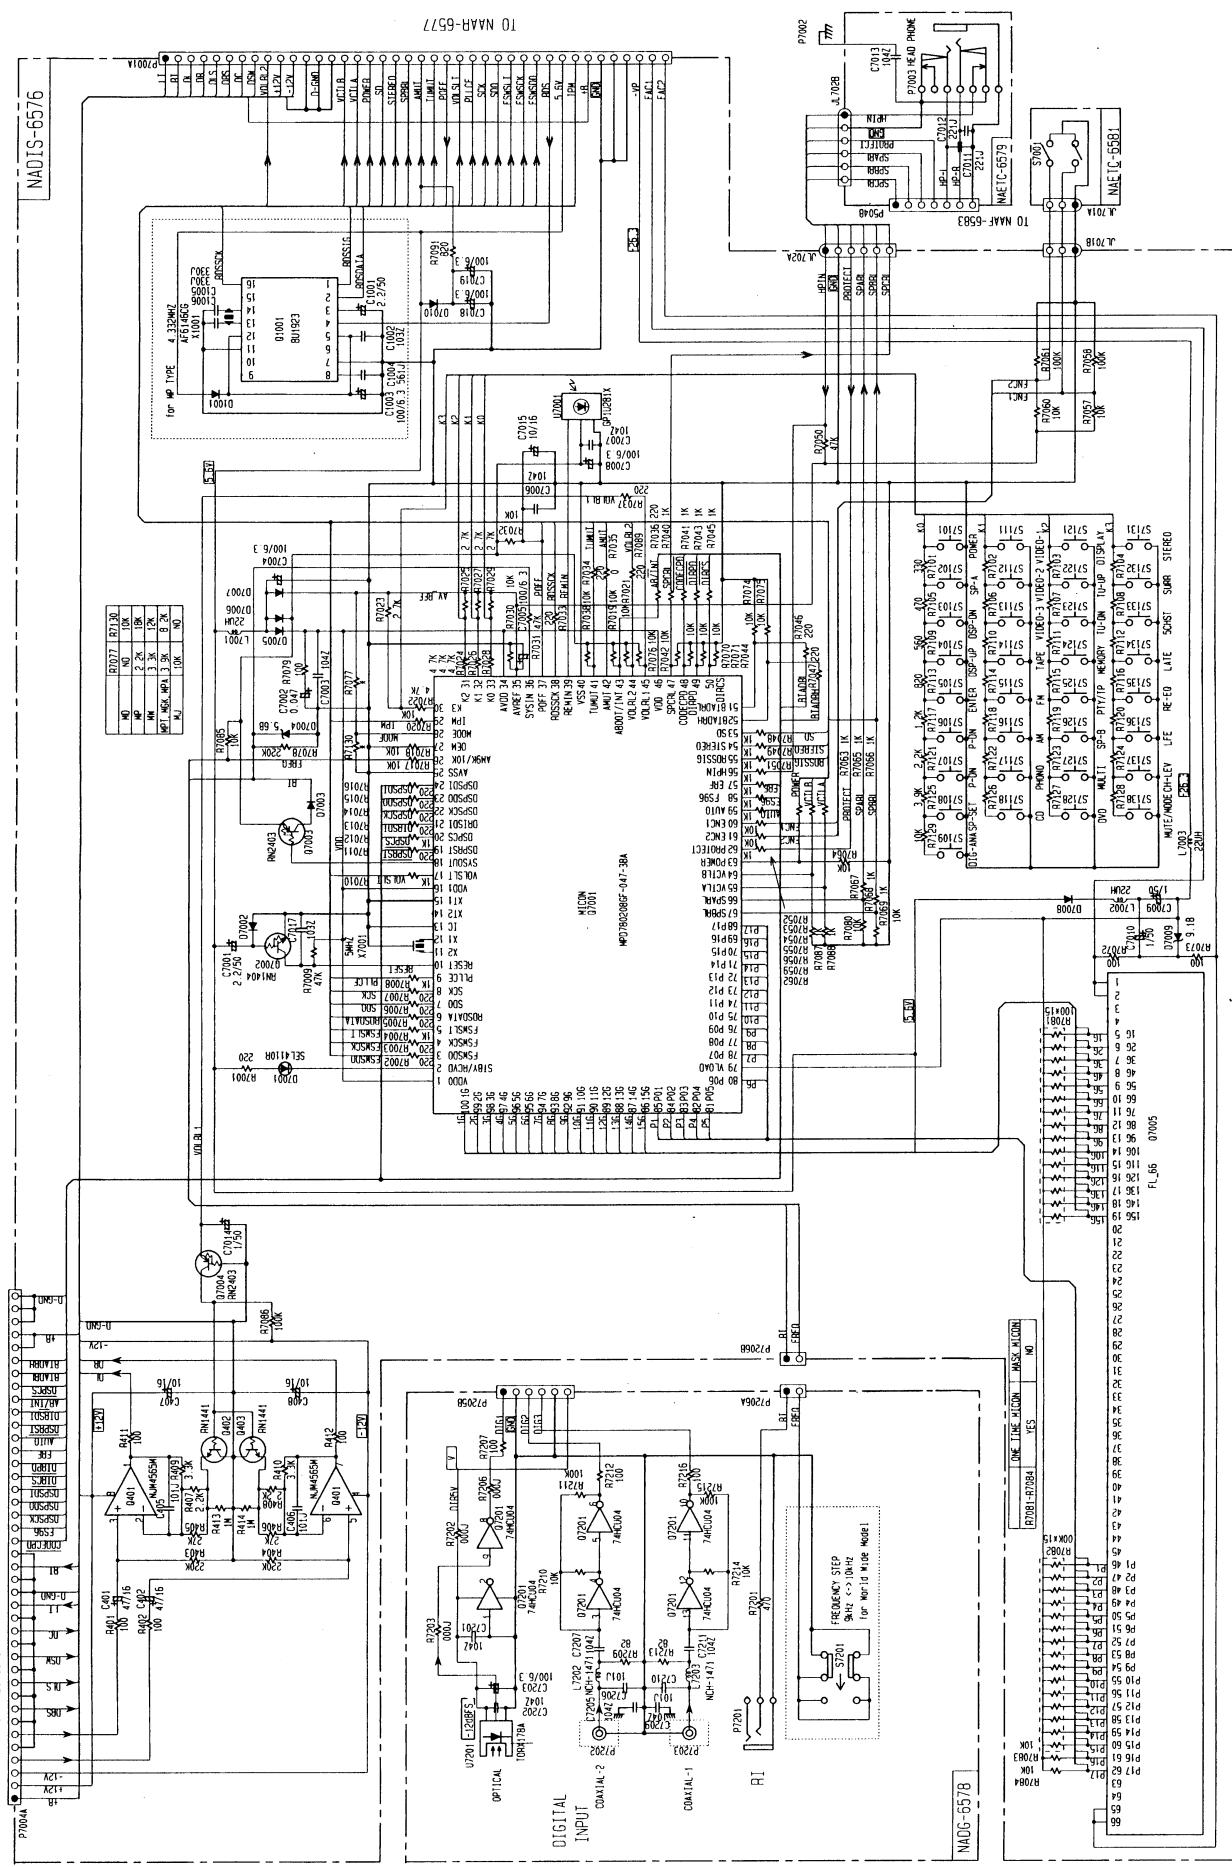

H

G

F

E

D


C

B


A

SCHEMATIC DIAGRAM 6


DTR-5

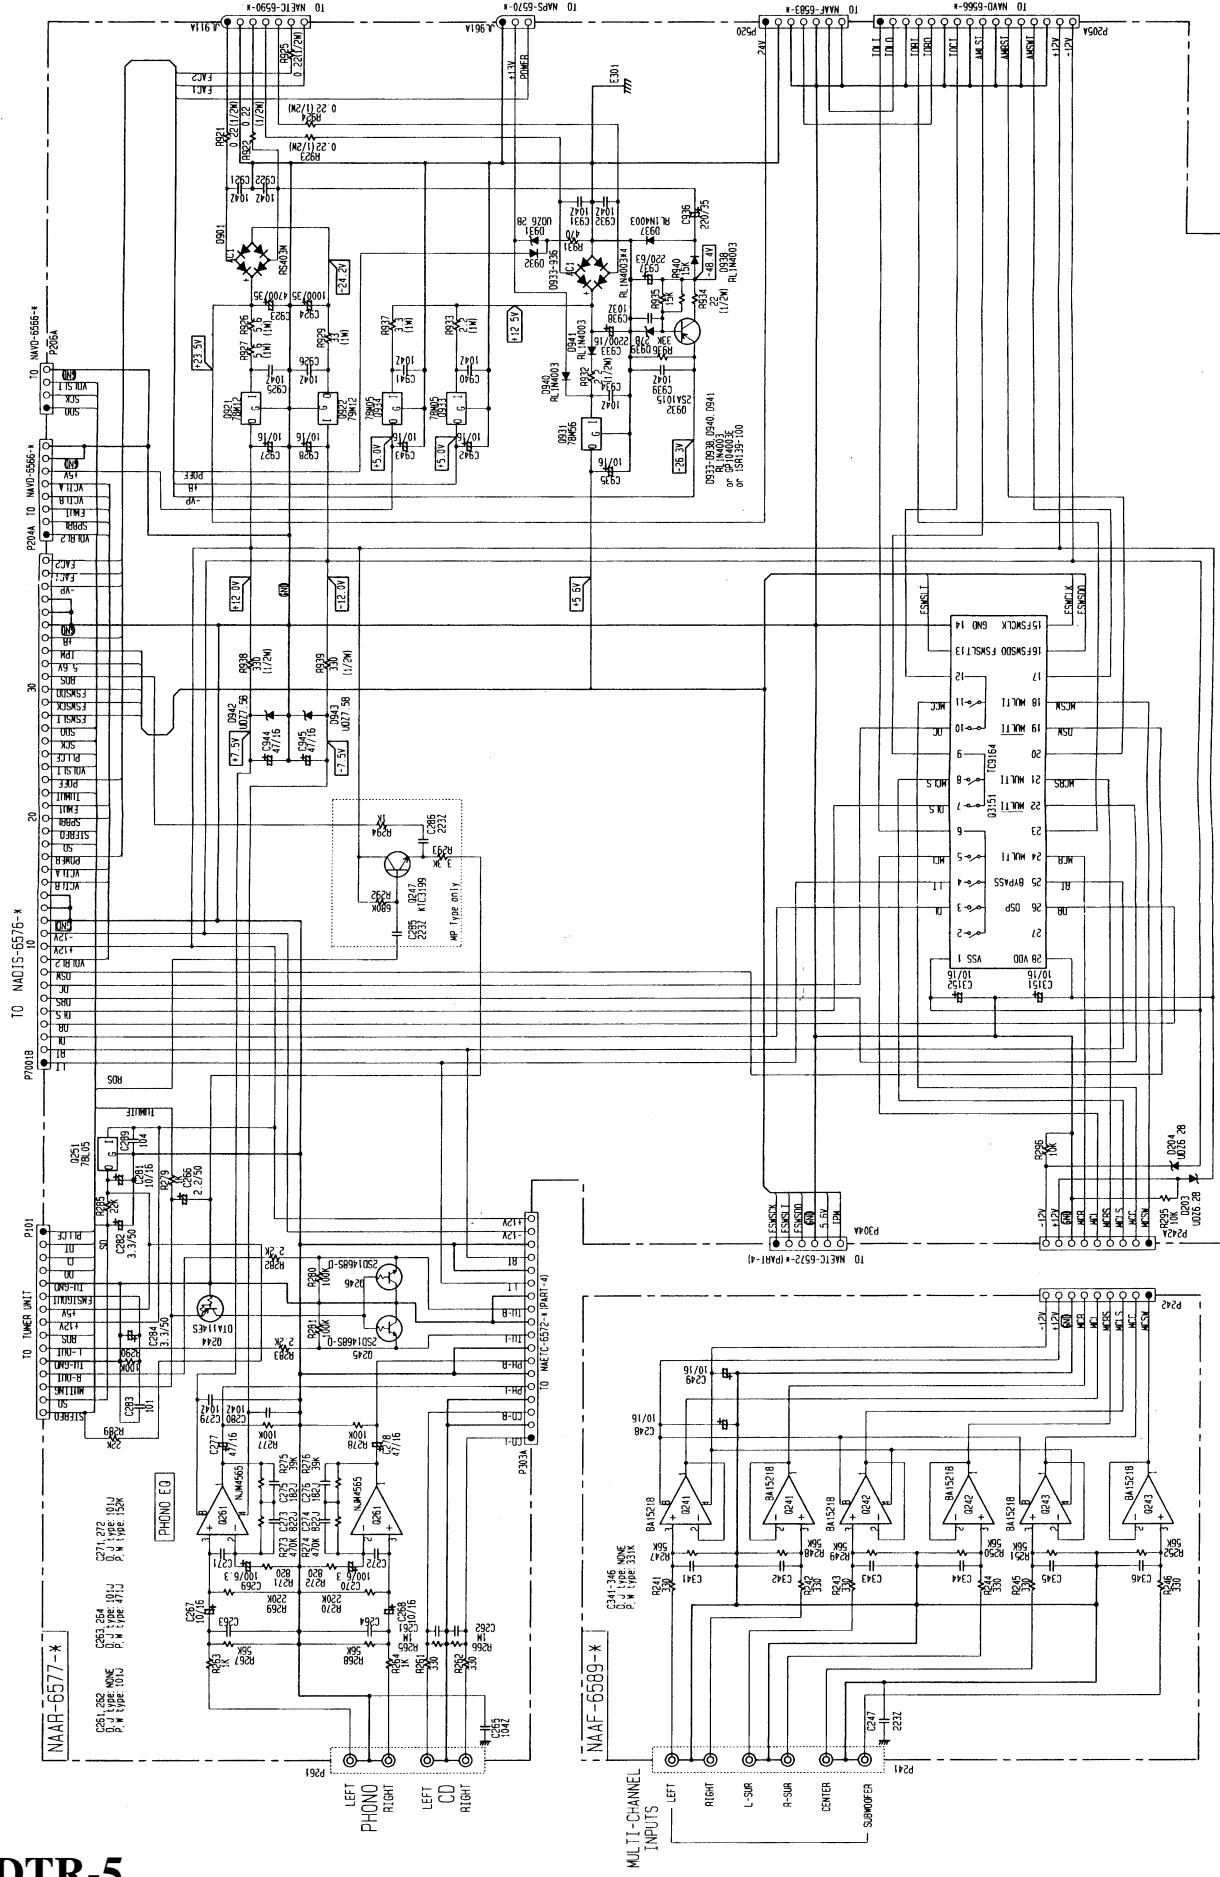

EXPLODED VIEW

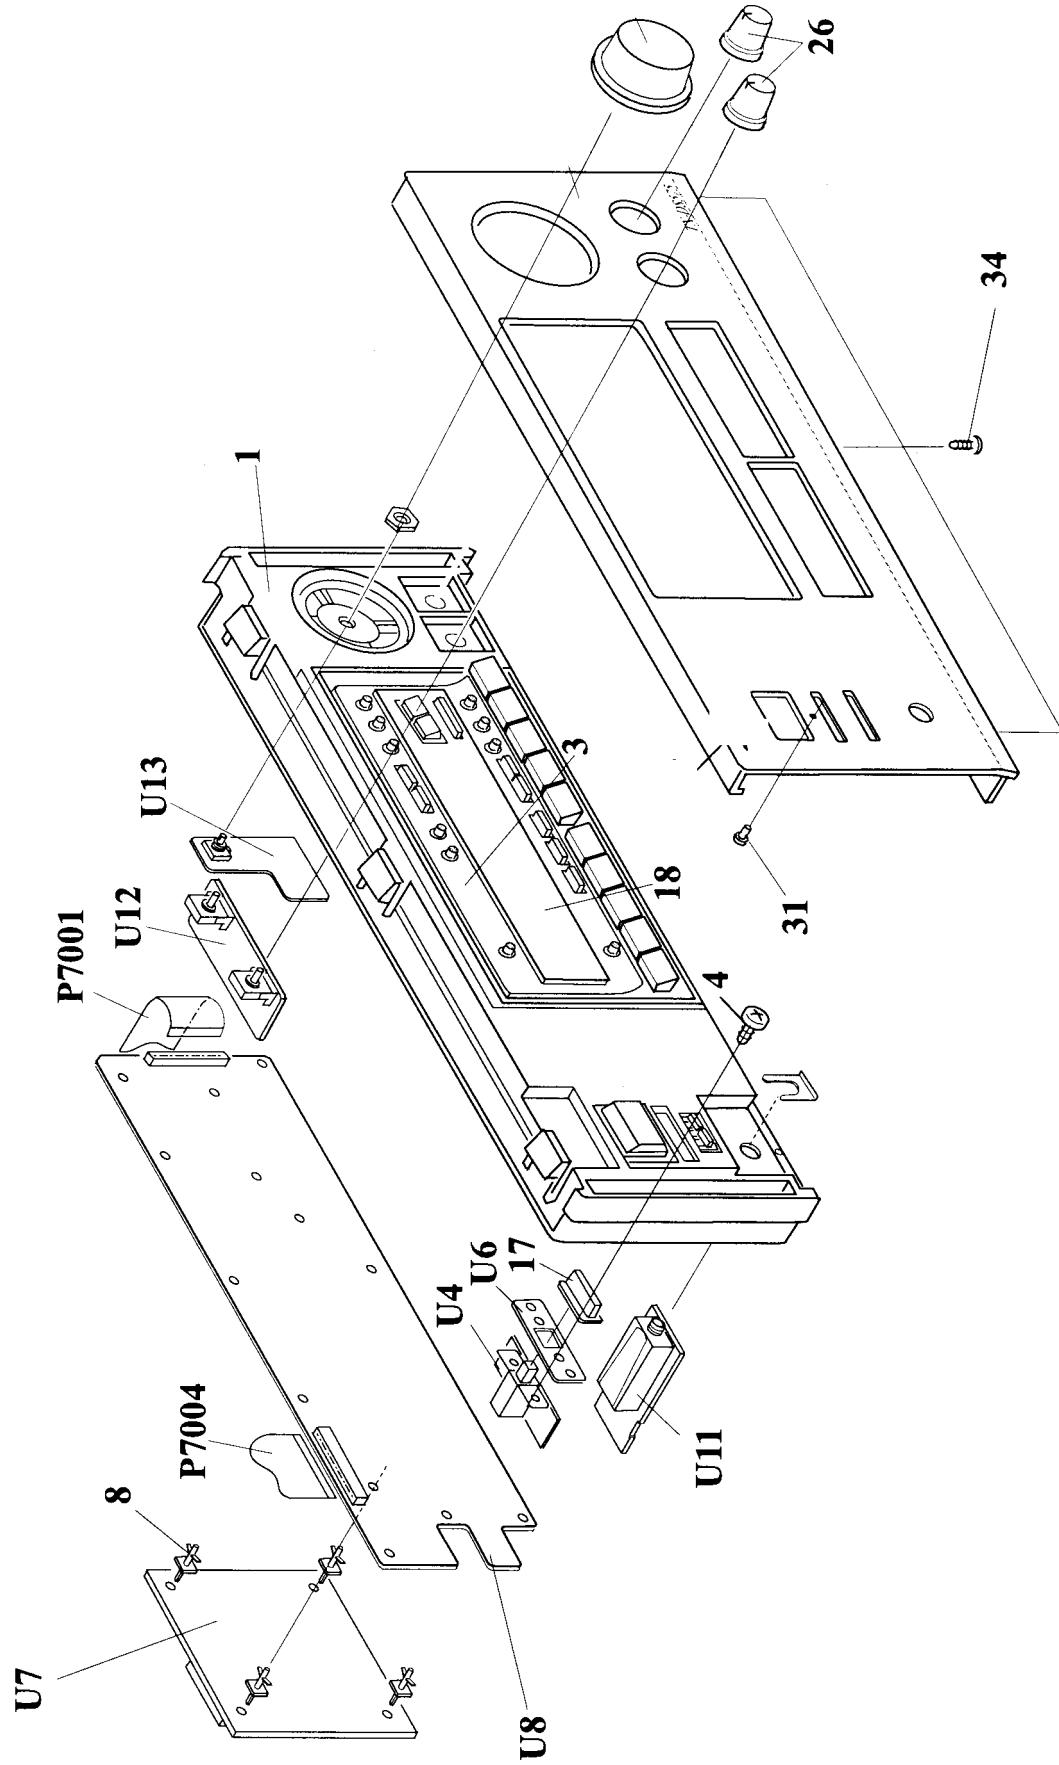

DTR-5

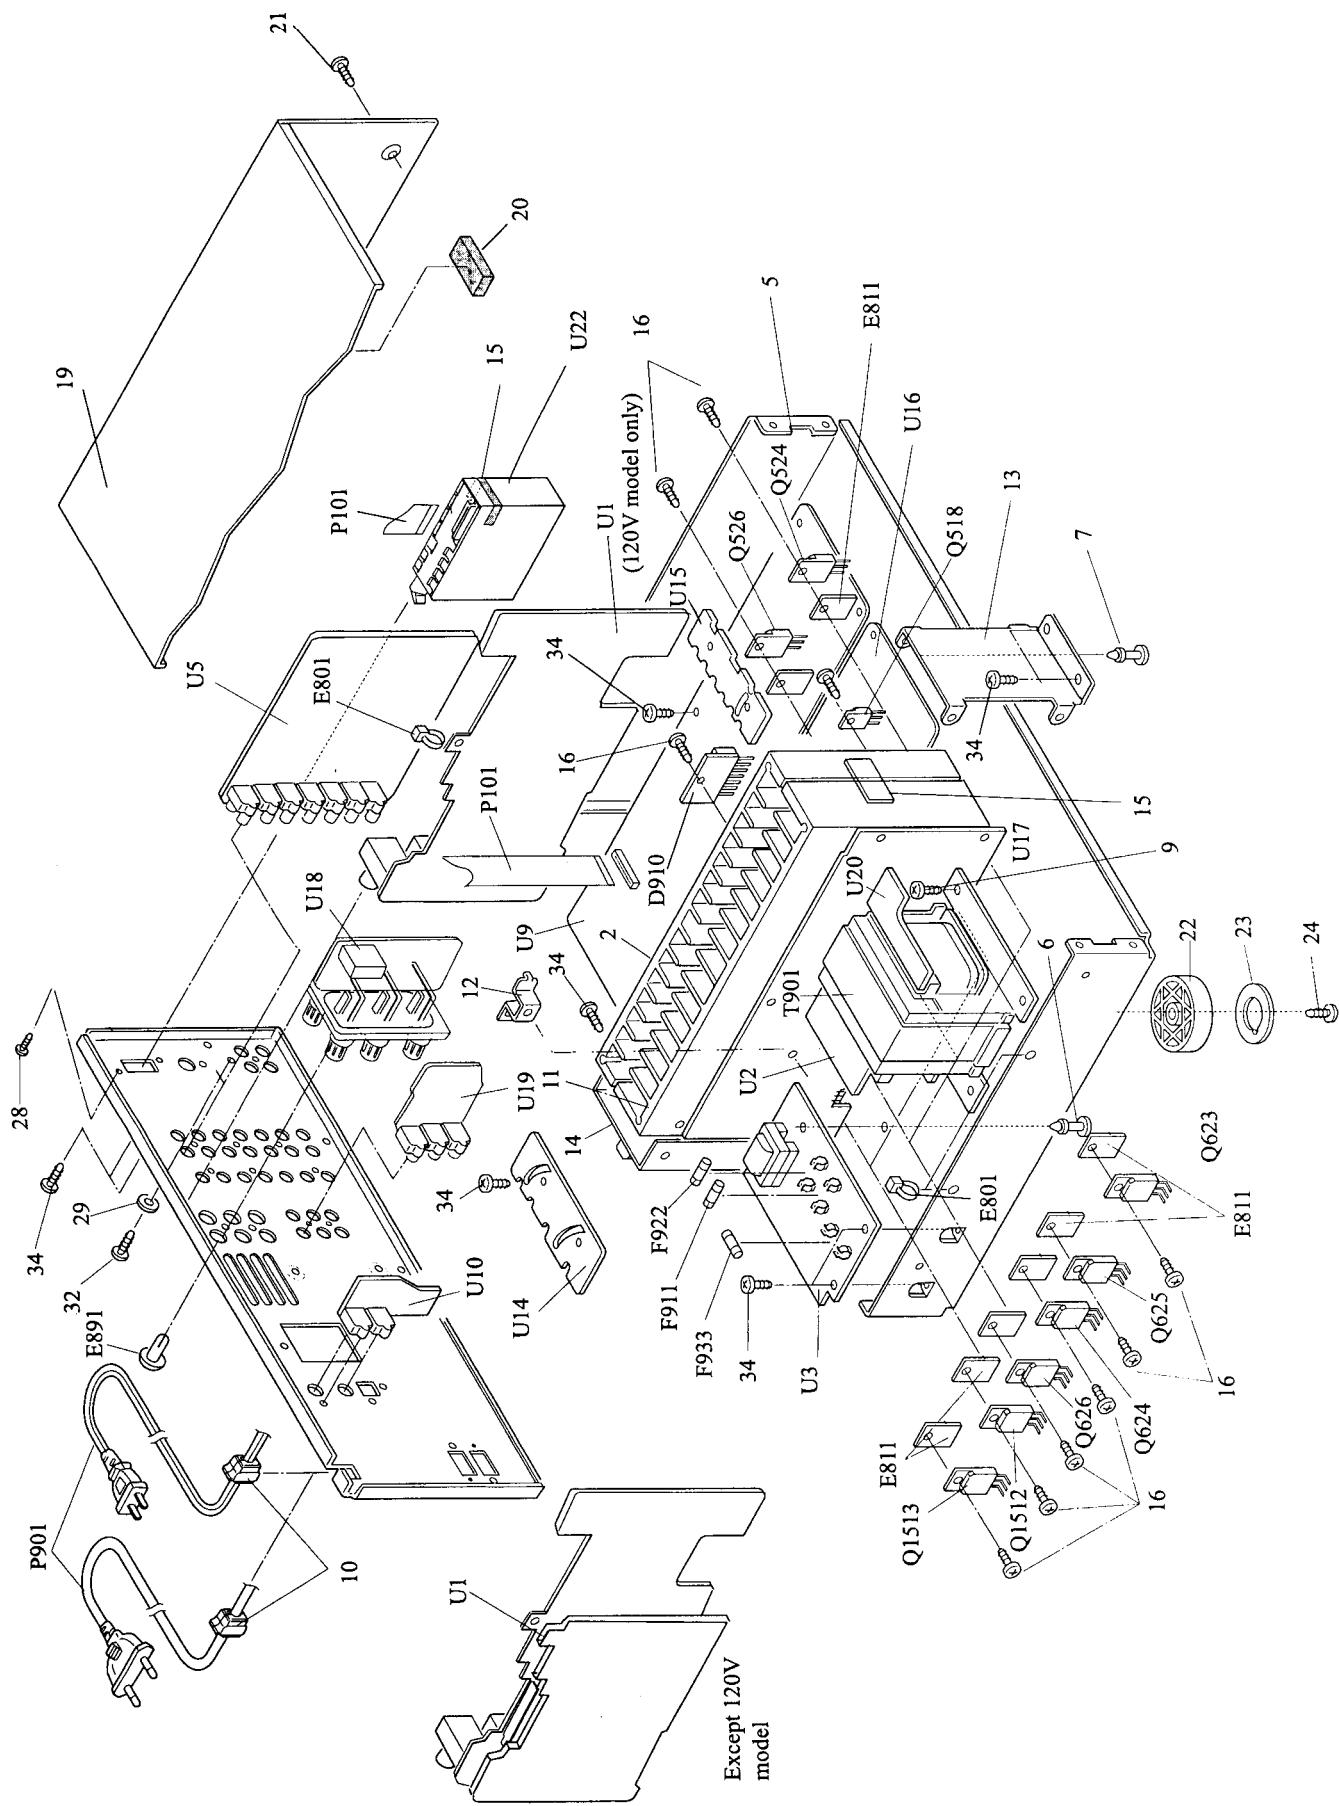


PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	27111108	Front bracket 			Note: : Black model only <S>: Silver model only <G>: Golden model only <D>: 120V model only <P>: 230V model only <T>: Asian model only <W>: Worldwide model only <A>: Australian model only <R>: Chinese model only
2	27111109	Front bracket <S>			
2	27111110	Front bracket <G>			
2	27160439	Heat sink S			
3	27215319	Decorative frame <D/T/W/A>			
3	27215320	Decorative frame <S>			
3	27215321	Decorative frame <G>			
3	27215322	Decorative frame <P>			
4	82143010	3P+10FN(BC), Pan head screw	28	833430068	3TTB+6B(BC),Self-tapping screw
5	27100371A	Chassis	29	87643010	W3*10F(BC),Flat washer
6	27190266	KGLS-12RF,Holder	31	28198778	Facet
7	27190428A	KGLS-10RF,Holder	32	838030088	3TTB+8B(UN),Self-tapping screw
8	27190896	KGLS-10S,Holder	33	28135244Y	Badge
9	830440089	4TTC+8C(BC), Self-tapping screw			Badge <S/C>
10	27300750	△ Bushing, cord			3TTB+8B,Self-tapping screw
11	27160438	Heat sink L	34	838130088	RBV602 or
12	27141681	Retainer PWB	D910	22380038 or	RS603M,Diode
13	27141736	Retainer, front			Wire tie
14	27141737	Retainer, rear	E801	260208	AC238,Isolated sheet
15	29110083	Tape	E811	223024	P-3055B-8L,Plastic rivet <P/T/A>
16	801433	3SMS8W.SW+14B(BC),Special screw	E891	880048	NCFC7-152012,Flexible flat cable
17	28325497A	Knob,Power 	P101	2047152012	NCFC7-4015212,Flexible flat cable
	28325499A	Knob,Power <G>	P7001	2047402512	NCFC7-401512,Flexible flat cable
	28325547A	Knob,Power <S>	P7004	2047401512	
18	28191846	Clear plate 	P7011	27190608-1	Clamp
	28191847	Clear plate <G/S>	Q1512	2203063,	* 2SC5198-Q,
19	28184752	Top cover 	Q523,Q524	2203062,	* 2SC5198-R,
	28184753	Top cover <G>	Q623,Q624	2202523,	* 2SC4468-Q,
	28184754	Top cover <S>		2202524 or	* 2SC4468-Y or
20	28141272Y	10x60x20,Cushion		2202526	* 2SC4468-P,Transistor
21	838430088	3TTB+8B(BC),Self-tapping screw 	Q1513	2203053,	* 2SA1941-O,
	838930088	3TTB+8B(UN),Self-tapping screw <G/S>	Q525,Q526	2203052,	* 2SA1941-R,
22	27175319A	Leg	Q625,Q626	2202513,	* 2SA1695-O,
23	28141332	Cushion		2202514 or	* 2SA1695-Y or
24	831430088	3TTW+8B(BC), Self-tapping screw	Q517,Q518	2212654 or	2SA1695-P,Transistor
25				2212653	2SC3421-Y or
			T901	2301405	△ NPT-1368D,Power transformer <D>
26	28325405	Knob, Tone 		2301406	△△ NPT-1368P,Power transformer <P/T/A>
	28325407	Knob, Tone <G>		2301407	△△ NPT-1368DDG,Power transformer <W>
	28325474Y	Knob, Tone <S>			

CAUTION: Replacement for transistor of mark *, if necessary
must be made from the same beta group (HFE) as
the original type.

PACKING VIEW

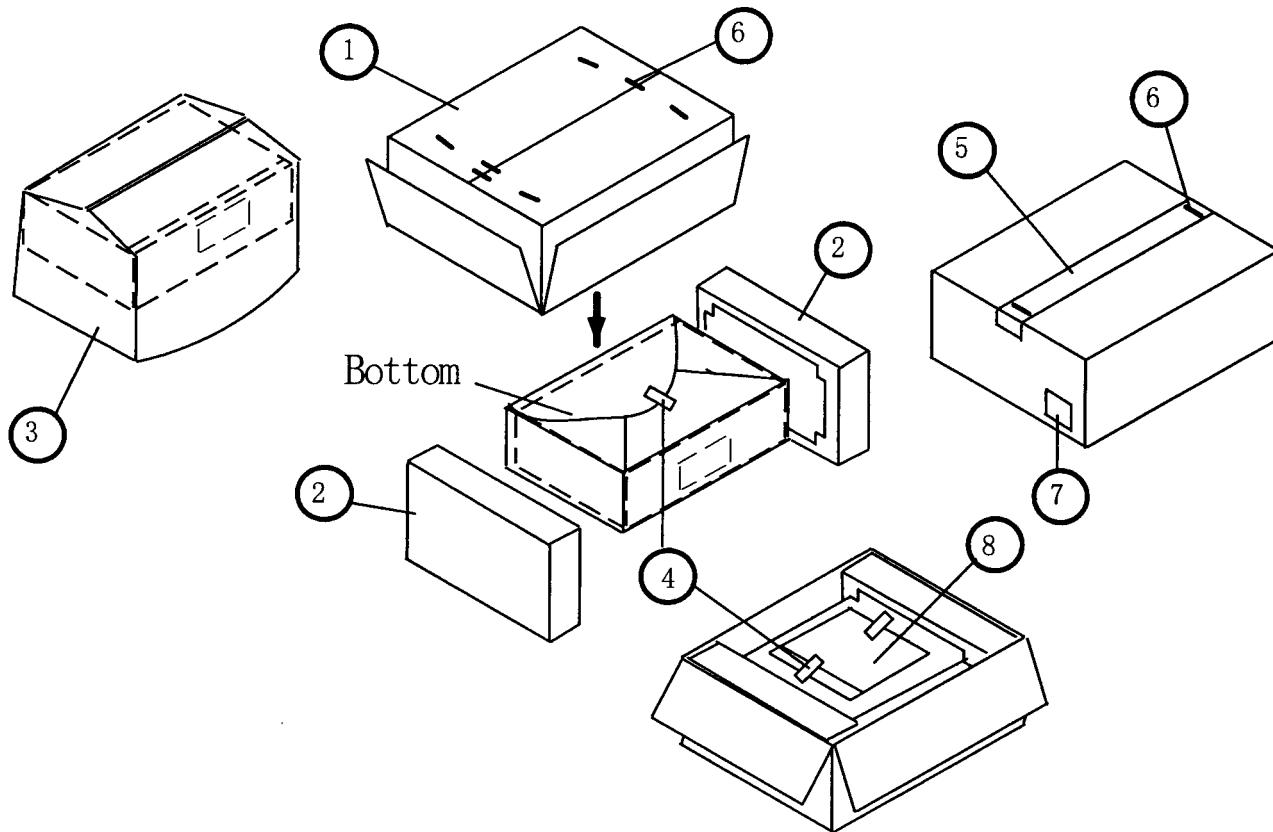

REF. NO.	PART NO.	DESCRIPTION
1	29053413	Carton box <D>
	29053414	Carton box <P>
	29053415	Carton box <T/W/A>
	29053417	Carton box <S>
	29053416	Carton box <G>
2	29091844	Pad
3	29100034-1A	850*650, Polybag
4	261504	Paper tape
5	29110071 or 29110098	PP tape
6	282301	Staple
7	29362439 29362441 29362442 29362443	Label UPC <D> Label EAN <P/T/W/A> Label EAN <S> Label EAN <G>
8	232140 25055018 25065462 29095866 29100097-1A 292115 292142 29342699A 29342700 29342701 29342702 29342709 29342760 29361786 29365083 3010054	NMA-3057,AM loop antenna CV-K-1,Conversion plug <WT> YAE21-0237,Antenna adapter <T/W/A> Sheet <D> 350*250,Polybag FM antenna <P/T/W/A> FM antenna <D> Instruction manual E-- Instruction manual U3 GDSW <P> Instruction manual U3 FSI <P> Instruction manual T <T/W>-- Instruction sheet <D> Instruction sheet, S video <P/T/W/A> Label <T/WT> Warranty card <D> UM-3, Battery

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
F911	252198Y	▲ 8A-UL,Fuse <D/W>	U9	1A832577-1A	NAAR-6577-1A,Main PC board assy <D>
F922	252077 or	▲ 4A-SE-EAK or		1A832577-1B	NAAR-6577-1B,Main PC board assy <P>
	252243	▲ 4A-SE-TL250V,Fuse <PT/W/A>		1A832577-1C	NAAR-6577-1C,Main PC board assy <T/A>
F933	252075 or	▲ 2.5A-SE-EAK or		1A832577-1D	NAAR-6577-1D,Main PC board assy <W>
	252241	▲ 2.5A-SE-TL250V,Fuse <PT>	U10	1A832578-1A	NADG-6578-1A,Digital input PC board assy <D>
P901	253279HT or	▲ AS-UC-2#18 or		1A832578-1B	NADG-6578-1B,Digital input PC board assy <P>
	253280VOL	▲ AS-UC-2#18,Power supply cord <D>		1A832578-1C	NADG-6578-1C,Digital input PC board assy <T/A>
	253193HT or	▲ AS-CEE or		1A832578-1D	NADG-6578-1D,Digital input PC board assy <W>
	253195MARY	▲ AS-CEE,Power supply cord <PT>	U11	1A832579-1A	NAETC-6579-1A,Headphone terminal PC board assy <D>
	253233KAW	▲ AS-CEE-2,Power supply cord <WT>		1A832579-1B	NAETC-6579-1B,Headphone terminal PC board assy <P>
	253197HT	▲ AS-SAA,Power supply cord <A>		1A832579-1C	NAETC-6579-1C,Headphone terminal PC board assy <T/A>
	253267KAW,	▲ AS-CCEE or		1A832579-1D	NAETC-6579-1D,Headphone terminal PC board assy <W>
	253285HT or	▲ AS-CCEE or	U12	1A832580-1A	NAETC-6580-1A,Tone control PC board assy <D>
	253286VOL	▲ AS-CCEE,Power supply cord <R>		1A832580-1B	NAETC-6580-1B,Tone control PC board assy <P>
U1	1A832566-1A	NAVD-6566-1A,Pre.,amplifier PC board assy <D>		1A832580-1C	NAETC-6580-1C,Tone control PC board assy <T/A>
	1A832566-1B	NAVD-6566-1B,Pre.,amplifier PC board assy <PT>		1A832580-1D	NAETC-6580-1D,Tone control PC board assy <W>
	1A832566-1C	NAVD-6566-1C,Pre.,amplifier PC board assy <W>	U13	1A832581-1A	NAETC-6581-1A,Volume control PC board assy <D>
	1A832566-1D	NAVD-6566-1D,Pre.,amplifier PC board assy <A>		1A832581-1B	NAETC-6581-1B,Volume control PC board assy <P/T/W/A>
	1A832569-1A	NAETC-6569-1A,Transformer terminal PC board assy <D>		1A832582-1A	NAETC-6582-1A,Holder PC board for wire <D>
	1A832569-1B	NAETC-6569-1B,Transformer terminal PC board assy <PT>		1A832582-1B	NAETC-6582-1B,Holder PC board for wire <P/T/W/A>
	1A832569-1C	NAETC-6569-1C,Transformer terminal PC board assy <W>	U15	1A832574-1A	NAETC-6574-1A,Holder PC board for wire <D>
	1A832569-1D	NAETC-6569-1D,Transformer terminal PC board assy <A>		1A832574-1B	NAETC-6574-1B,Holder PC board for wire <P/T/W/A>
	1A832570-1A	NAPS-6570-1A,Primary circuit PC board assy <D>	U16	1A832583-1A	NAAF-6583-1A,Front channel power amplifier PC board assy <D>
	1A832570-1B	NAPS-6570-1B,Primary circuit PC board assy <PT>		1A832583-1B	NAAF-6583-1B,Front channel power amplifier PC board assy <P/T/W/A>
	1A832570-1C	NAPS-6570-1C,Primary circuit PC board assy <W>	U17	1A832584-1A	NAAF-6584-1A,Power amplifier PC board assy <D>
	1A832570-1D	NAPS-6570-1D,Primary circuit PC board assy <A>		1A832584-1B	NAAF-6584-1B,Power amplifier PC board assy <P/T/W/A>
	1A832571-1A	NASW-6571-1A,Power switch PC board assy <D>	U18	1A832588-1A	NAETC-6588-1A,Speaker terminal PC board assy <D>
	1A832571-1B	NASW-6571-1B,Power switch PC board assy <PT>		1A832588-1B	NAETC-6588-1B,Speaker terminal PC board assy <P/T/W/A>
	1A832571-1C	NASW-6571-1C,Power switch PC board assy <W>	U19	1A832589-1A	NAETC-6589-1A,Multi-channel input terminal PC board assy <D>
	1A832571-1D	NASW-6571-1D,Power switch PC board assy <A>		1A832589-1B	NAETC-6589-1B,Multi-channel input terminal PC board assy <P/T/W/A>
	1A832572-1A	NAETC-6572-1A,Input switch PC board assy <D>	U20	1A832590-1A	NAETC-6590-1A,Secondary circuit PC board assy <D>
	1A832572-1B	NAETC-6572-1B,Input switch PC board assy <PT>		1A832590-1B	NAETC-6590-1B,Secondary circuit PC board assy <P/T/W/A>
	1A832572-1C	NAETC-6572-1C,Input switch PC board assy <W>	U22	240134	TFCE1U14A,Tuner unit <D>
	1A832572-1D	NAETC-6572-1D,Input switch PC board assy <A>		240135	TFCE1E512A,Tuner unit <P/T/W/A>
	1A832573-1A	NAETC-6573-1A,PC board for holder <D>			
	1A832573-1B	NAETC-6573-1B,PC board for holder <PT>			
	1A832573-1C	NAETC-6573-1C,PC board for holder <W>			
	1A832573-1D	NAETC-6573-1D,PC board for holder <A>			
U7	1A832575-1	NADG-6575-1,DSP circuit PC board assy <D>			
U8	1A832576-1A	NADIS-6576-1A,Display circuit PC board assy <D>			
	1A832576-1B	NADIS-6576-1B,Display circuit PC board assy <P>			
	1A832576-1C	NADIS-6576-1C,Display circuit PC board assy <T/A>			
	1A832576-1D	NADIS-6576-1D,Display circuit PC board assy <W>			

NOTE: THE COMPONENTS IDENTIFIED BY MARK ▲
ARE CRITICAL FOR RISK OF FIRE AND
ELECTRIC SHOCK. REPLACE ONLY WITH
PART NUMBER SPECIFIED.