

ONKYO® SERVICE MANUAL

COMPACT DISC PLAYER

MODEL DX-788F

Black and Silver models

BUDN, BUD	120V AC, 60 Hz
BUP	230V AC, 50Hz
BUW	120/220V AC, 50/60Hz
BUQA	240V AC, 50 Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PARTS NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SPECIFICATIONS

Signal readout system:	Optical non-contact
Reading rotation:	About 500~200r.p.m. (constant linear velocity)
Linear velocity:	1.2~1.4m/s
Error correction system:	Cross interleave reedsolomon code
D/A converter:	1bit PDM×2 Accu Pulse Quartz
Sampling frequency:	352.8kHz (8 times oversampling)
Number of channels:	2 (Stereo)
Frequency response:	2Hz~20kHz
Total harmonic distortion:	0.0015% (at 1kHz)
Dynamic Range:	100dB
Signal to noise ratio:	102dB
Channel separation:	102dB (at kHz)
Wow and Flutter:	Below threshold of measurability
Power consumption:	34 watts
Output level:	2 volts r.m.s.
Dimensions (W×H×D) :	455×130×364mm 17-15/16"×5-1/8"×14-5/16"
Weight:	8.9kg, 19.6lbs

Specifications are subject to change without notice.

ONKYO
AUDIO COMPONENTS

TABLE OF CONTENTS

Specifications.....	1
Service procedures.....	2
Laser warning label.....	3
Exploded view.....	4
Parts list.....	5
Mechanism-Exploded view.....	6
Parts list.....	7
Caution on replacement of pickup.....	8
Protection of eyes from laser beam during servicing.....	8
IC block diagrams and descriptions.....	9
Packing view.....	19
Adjustment procedures.....	20
Printed circuit board views from bottom side.....	23
Schematic diagram.....	25
RF and power supply section.....	25
Audio section.....	27
Block diagram.....	31
Printed circuit board-parts list.....	33

SERVICE PROCEDURES


1. How to Release the Transport Lock

To protect the optical assembly including the laser pickup from vibration related damage during shipping, this unit is equipped with a transport lock lever located on the base.

1. Loosen the screw with Phillips screwdriver.
2. Move the lock lever in the direction opposite that shown by the arrow. Move the lever up to the position where it can move no farther, and then remove the lever.

■ Tighten the screw to secure the lock lever.

- For shipping, restore the lock lever to its position in the direction of the arrow, then tighten down the screw to secure the lock lever in that position.

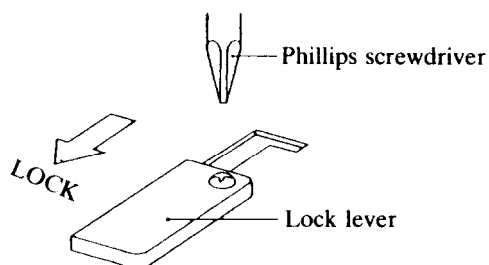

2. Use of batteries

- The remote control transmitter is powered by two batteries. Before using this unit for the first time, insert the two batteries (included).
- Average battery life is about one year. This period may be shorter depending on the frequency of use and environment (temperature and humidity) in which the remote control transmitter is used.

- If the remote control transmitter does not operate even though front panel controls function normally, the batteries should be replaced. Use only listed in the following chart.

Type	Voltage	Size
Manganese	1.5V	AA R6 UM-3

3. Safety check out

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Connect the insulating-resistance tester between the plug of power supply cable and chassis.

Specifications: more than 10Mohm at 500V.

4. Voltage selector (rear panel)

Worldwide models are equipped with a voltage selector to conform with local power supplies. Be sure to set this selector to match the voltage of the power supply in your area before turning the power switch on. Voltage is changed by turning the voltage selector with a screwdriver or similar instrument to the 120V or 220V position. Confirm that the selector has been set to the correct position before turning the power switch on. If there is no voltage selector switch on the unit you have purchased, it can only be used in areas where the power supply voltage is the same as that of the unit.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.





LASER WARNING LABELS

The label shown below are affixed.

1. Warning label

These labels are located on the rear panel and the arm of the mechanism.

- (A) **DANGER** —INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO BEAM
- CAUTION** —HAZARDOUS LASER AND ELECTROMAGNETIC RADIATION WHEN OPEN AND INTERLOCK DEFEATED
- ATTENTION** —RAYONNEMENT LASER ET ELECTROMAGNETIQUE DANGEREUX SI OUVERT AVEC L'ECLenchement DE SECURITE ANNULE.

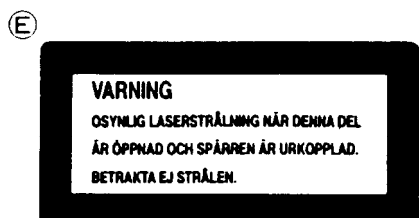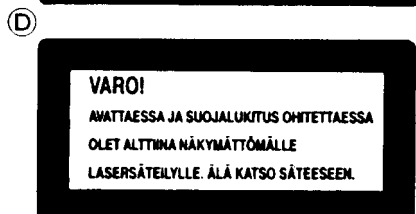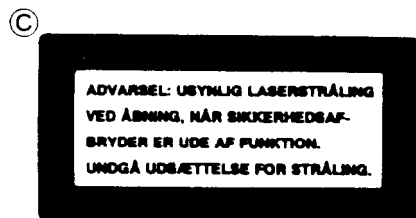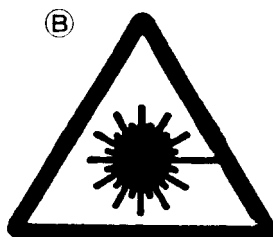


- (A) : Danger label
 (B) : Except 120V model
 (C) : Except 120V model
 (D),(E),(F) : Only 230V model

Laser Diode Properties

- Material: GaAS/GaAlAs
- Wavelength: 780nm
- Emission Duration: continuous
- Laser output: max. 0.5mW*

*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

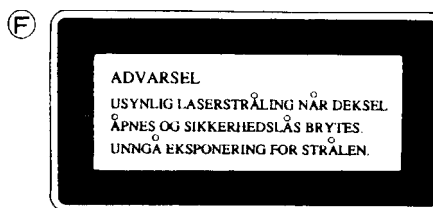

2. Certification label (120V model)


This label is located on the back panel.

PRODUCT IS CERTIFIED BY THE MANUFACTURER TO COMPLY WITH DHHS RULES 21 CFR SUBCHAPTER J APPLICABLE AT THE DATE OF MANUFACTURE.



3. Class 1 label (Except 120V model)

This label is located on the back panel.

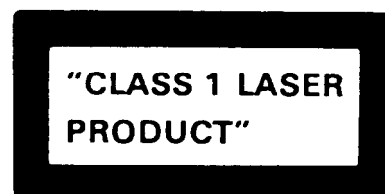

LUOKAN 1 LASERLAITE

KLASS 1 LASER APPARAT

ADVARSEL


Denna mærkning er anbragt på apparatets højre side og indikerer, at apparatet arbejder med laserstråler af klasse 1, hvilket betyder, at der anvendes laserstråler af svageste klasse, og at man ikke på apparatets yderside kan blive udsat for utilsladelig kraftig stråling.

APPARATET BØR KUN ÅBNES AF FAGFOLK MED SÆRLIGT KENDSKAB TIL APPARATER MED LASERSTRÅLERI


Indvendigt i apparatet er anbragt den her gengivne advarselmærkning, som advarer imod at foretage sådanne indgreb i apparatet, at man kan komme til at udsætte sig for laserstråling.

VAROITUS! LAITTEEN KAYTTAMINEN MUULLA KUIN TASSA KAYTTOOHJEESSA MAINTULLA TAVALLA SAATTAA ALTISTAA KAYTTAJAN TURVALLISUUSLUOKAN 1 YLITTAVALLE NÄKYMÄTTÖMÄLLE LASERSATEILYLLE.

BLOCK DIAGRAM

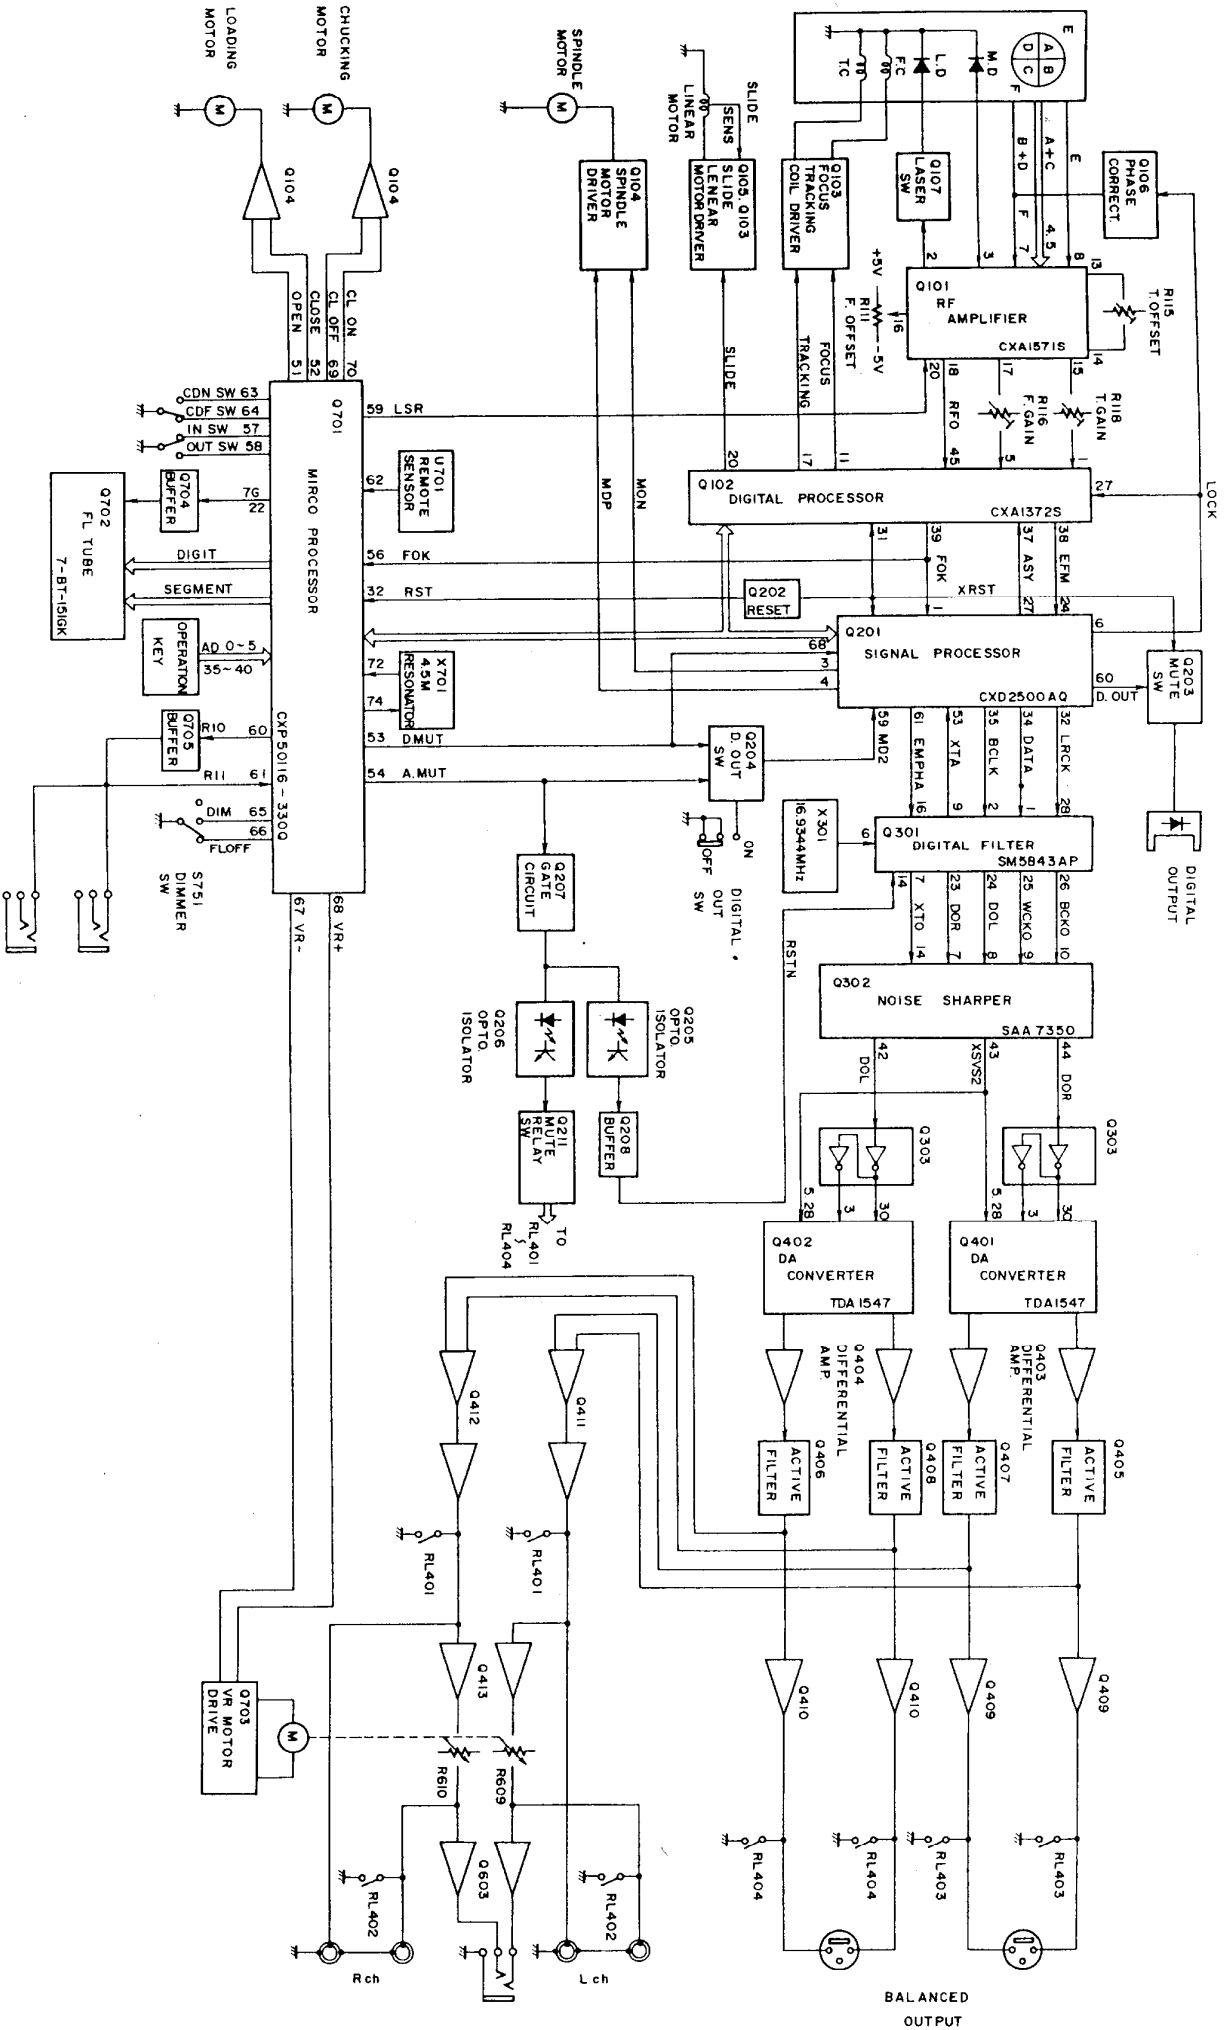

CHASSIS-EXPLODED VIEW

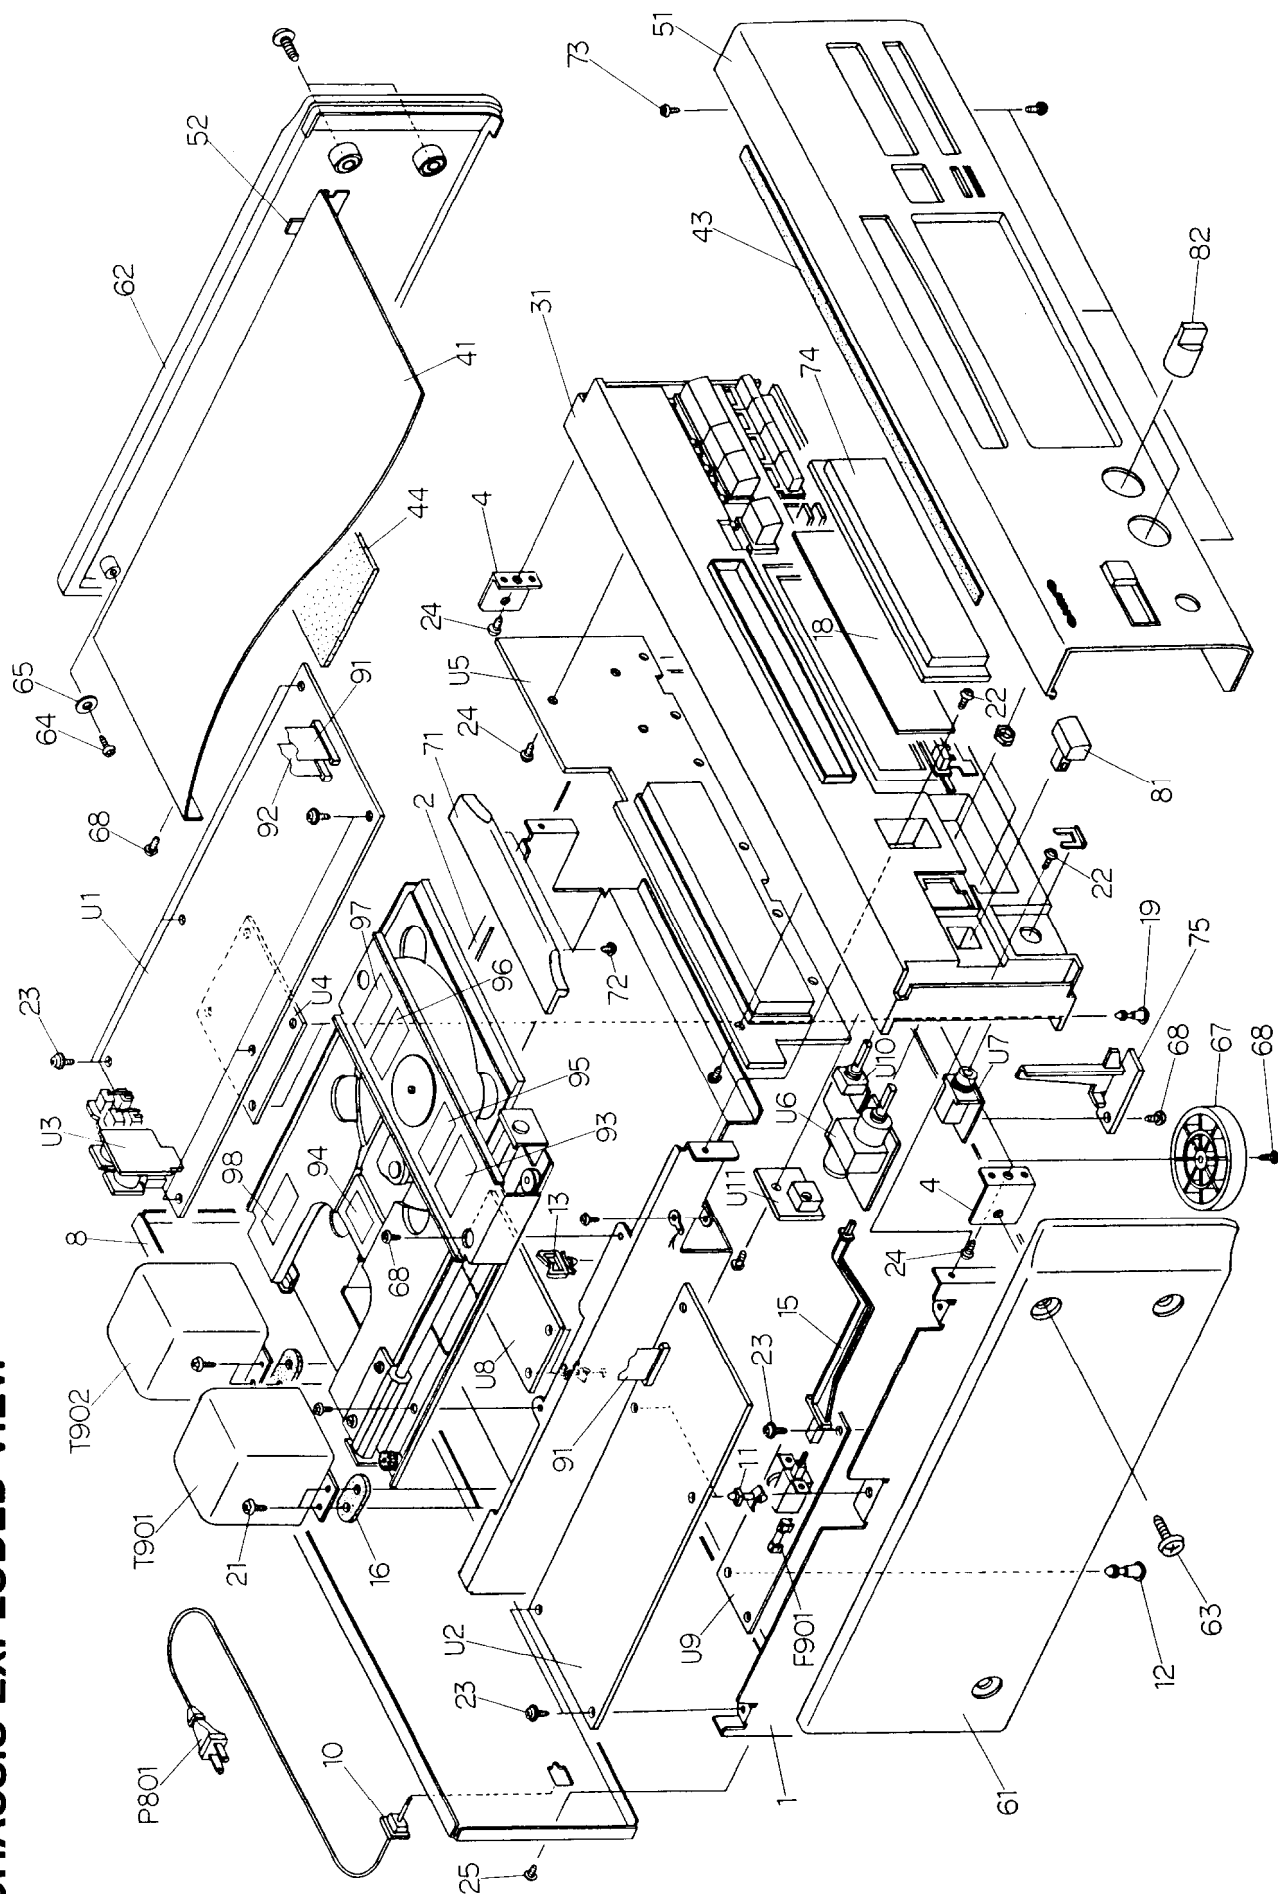


CHASSIS EXPLODED VIEW PART LIST

REF. NO.	PART NO.	DESCRIPTION	REF.NO.	PART NO.	DESCRIPTION
1	27100249B	Chassis	94	29361218	Label,laser <P/W/Q>
2	27130661B	Bracket C	95	29360811A	Label <P>
4	27141496A	Retainer S	96	29361298A	Label SEM <P>
8	27121743	Rear panel <D>	97	29361342A	Label SEM/FIN <P>
	27121744	Rear panel <P>	98	29361507	Label NOR <P>
	27121746	Rear panel <W>	99	29360687	Label CLASS 1 <P/W/Q>
	27121747	Rear panel <Q>		252075	2.5A-SE-EAK,Fuse <P>
10	27300750	△ Cord,bushing	F901	253161 or	△ AS-UC-#18,
11	27190009	KGLS-4S,Holder	P801	253168	△ Power supply cord <D>
12	27190524	KGLS-14RT,Holder		253149 or	△ AS-CEE,
13	27300833	WS-2NS,Clamp		253164	△ Power supply cord <P/W>
14	27255004	Clamp,lead		253118 or	△ AS-SAA,
15	27273142	Joint,power		253170	△ Power supply cord <Q>
16	27270327A	Spacer	S851	25065195	△ NSS-1288P, Voltage selector switch <W>
18	28133269A	Back plate	T901	2300905A	△ NPT-1174D,Power transformer <D>
19	27190693A	KGLS-6RT,Holder		2300906A	△ NPT-1174P,Power transformer <P>
21	838440109	4TTB+10C(BC),Self-tapping screw		2300907A	△ NPT-1174DG,Power transformer <W>
22	834430088	3TTS+8B(BC),Self-tapping screw		2300908A	△ NPT-1174Q,Power transformer <Q>
23	831130088	3TTW+8B,Self-tapping screw	T902	2300910A	△ NPT-1175D,Power transformer <D>
24	833430080	3TTP+8P(BC),Self-tapping screw		2300911A	△ NPT-1175P,Power transformer <P>
25	801230	3STS+8BQ(BC),Self-tapping screw		2300912A	△ NPT-1175DG,Power transformer <W>
26	833426060	2.6TTP+6P(BC),Self-tapping screw		2300913A	△ NPT-1175Q,Power transformer <Q>
28	28175205	Isolating plate	U1	1H222544-1	NAAR-4744-1,Main circuit pc board ass'y
31	27110659E	Front bracket ass'y	U2	1H222545-1	NADG-4745-1,Digital circuit pc board ass'y <D>
41	28184490B	Top cover	U3	1H222546-1	NADG-4745-1A,Digital circuit pc board ass'y <P/W/Q>
43	28140837	0.9 × 250 × 10,Cushion	U4	1H222547-1	NAAF-4746-1,Output terminal pc board ass'y
44	28141009	0.5 × 195 × 125,Cushion	U5	1H222548-1	NAPS-4747-1,Regulator circuit pc board ass'y
51	1H222701K	Front panel ass'y	U6	1H222549-1	NADIS-4748-1,Display circuit pc board ass'y
52	28175190	Isolating plate	U7	1H222550-1	NAAF-4749-1,Headphone amplifier pc board ass'y
61	28185377	Side panel L <N>	U8	1H222551-1	NAAF-4750-1,Headphone terminal pc board ass'y
	28185371	Side panel L <P/W/Q>	U9	1H222552-1	NAPS-4751-1,Rectifier circuit pc board ass'y
62	28185378	Side panel R <N>		1H222552-1A	NASW-4752-1,Power switch pc board ass'y <D/W/Q>
	28185372	Side panel R <P/W/Q>	U10	1H222553-1	NASW-4752-1A,Power switch pc board ass'y <P>
63	837440169	4TTT+16C(BC),Special screw	U11	1H222554-1	NASW-4753-1,Dimmer switch pc board ass'y
64	834440088	4TTS+8B(BC),Self-tapping screw		1H222554-1	NAETC-4754-1,Remote control sensor pc board ass'y
65	87644012	W4 × 12F(BC),Washer	Z1	260208	NCD-40M,CD mechanism ass'y
67	27175254	Leg			Wire tie
68	834430088	3TTS+8B(BC),Self-tapping screw			
71	28148271A	Door			
72	838430068	3TTB+6B(BC),Self-tapping screw			
73	834430080	3TTP+8P(BC),Self-tapping screw			
74	28191604A	Clear plate			
75	28335034A	Lever,lock			
81	28324397	Knob,power			
82	28324492	Knob,level			
91	2046296012	NCFC7-296012,Flat cable			
92	2046291512	NCFC7-291512,Flat cable			
93	29360807	Label DANGER			

NOTE: <D>: 120V model only
 <P>: 230V model only
 <Q>: 240V model only
 <W>: Worldwide model only
 <N>: U.S.A. model only

NOTE: THE COMPONENTS IDENTIFIED BY MARK △
 ARE CRITICAL FOR RISK OF FIRE AND
 ELECTRIC SHOCK. REPLACE ONLY WITH
 PART NUMBER SPECIFIED.

MECHANISM-EXPLODED VIEW

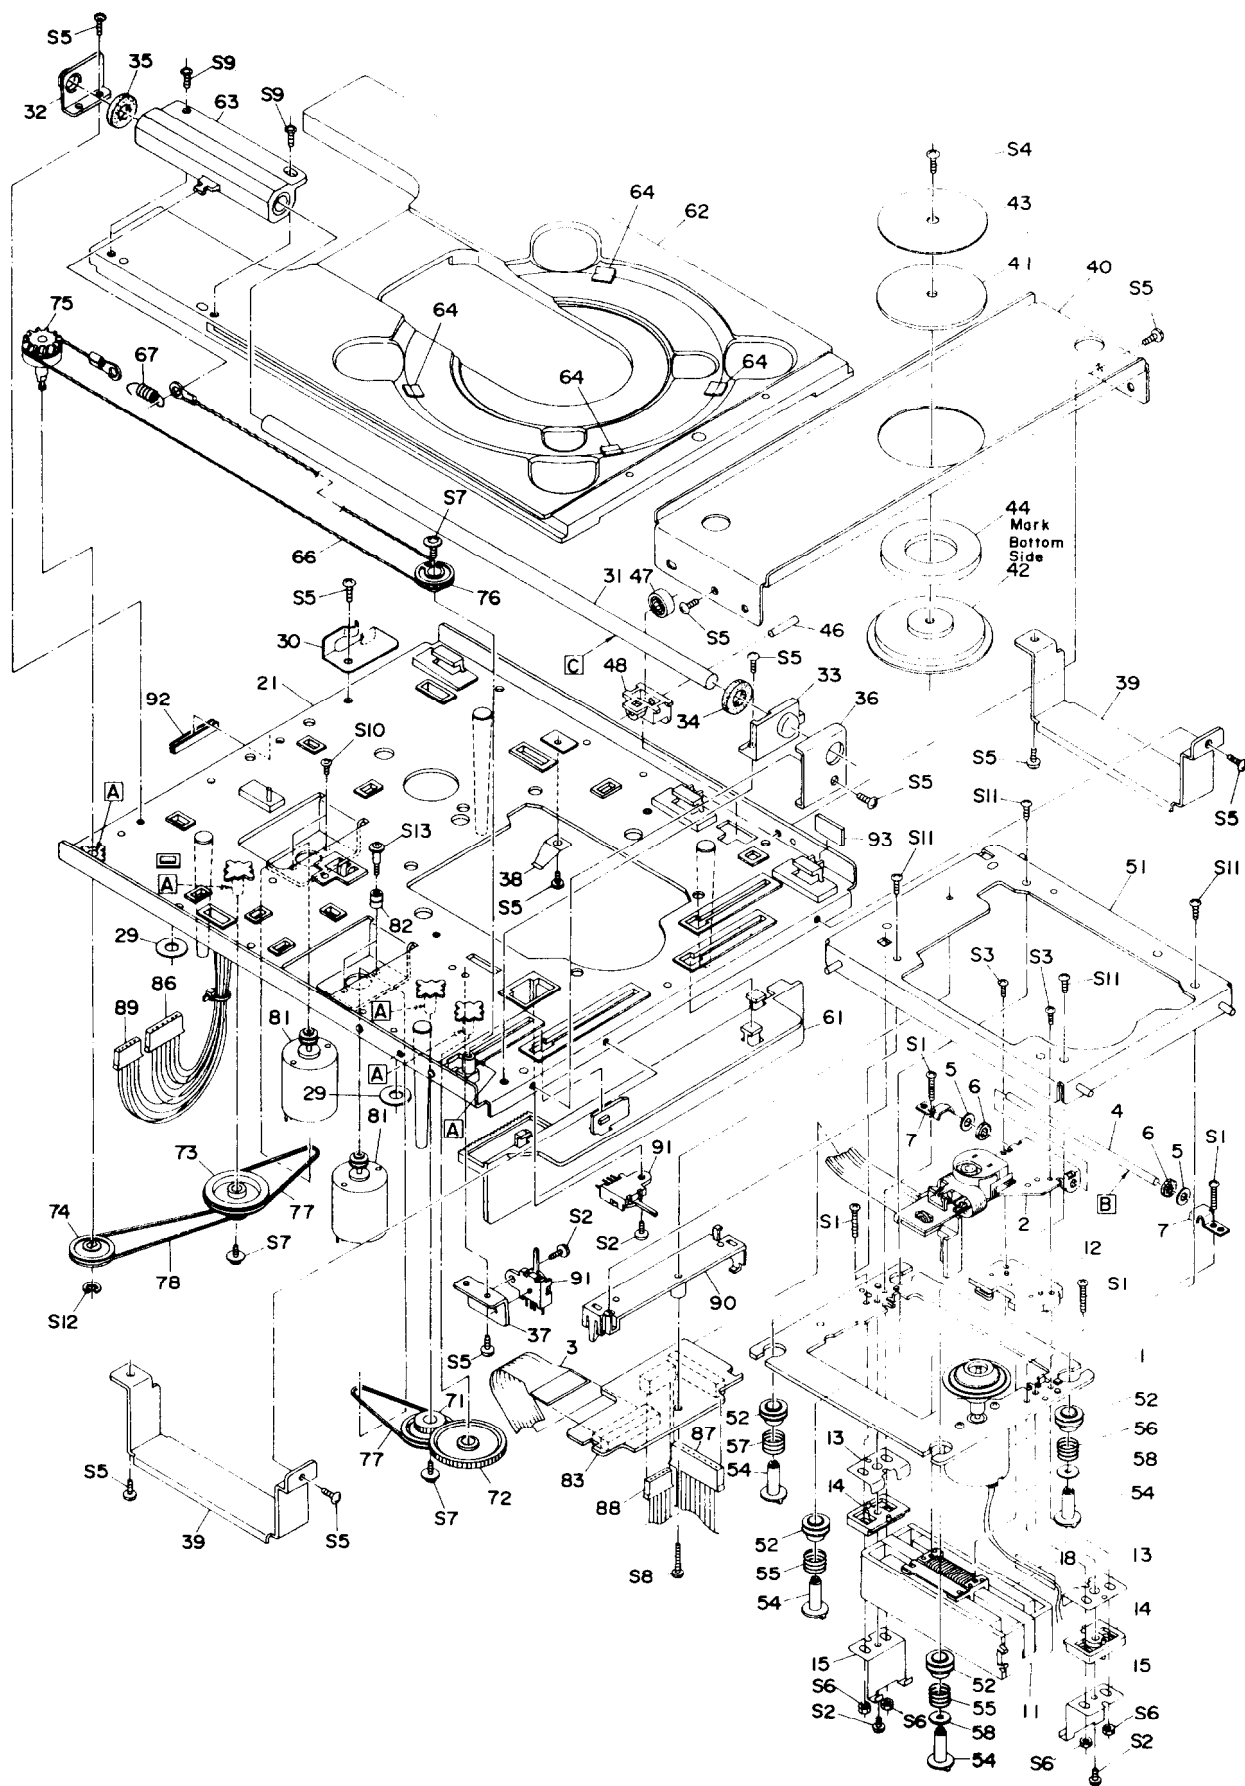

MECHANISM-PART LIST

REF. NO.	PART NO.	DESCRIPTION
1	27100219A	Chassis ass'y,pickup
2	24110012	SPU-3013,Optical pickup
3	25134076	NCETC-4076,Flexible pc board
4	24506955	Shaft
5	27270322	Spacer
6	27270323	Spacer
7	24506952	Bracket,shaft
11	24502261	SLA2002,Motor,slide
12	24506950	Block,terminal
13	24506953	Bracket LM
14	24506951	Base LM
15	24506954	Holder LM
18	29110083	Tape
21	27301335D	Chassis L
29	27270212	Spacer
30	27180467	Plate spring
31	27260297A	Shaft,guide
32	27141408	Bracket,shaft
33	27301342	Shaft,base
34	27270324	Spacer
35	27270325A	Spacer
36	27141438	Bracket,base
37	27141409	Bracket,switch
38	27180460	Spring
39	27141440A	Bracket H
40	27301343	Arm
41	28141061A	Cushion CH
42	27301352	Cap CH
43	27301344	Yoke CH
44	28181019A	Magnet CH
46	27260308	Shaft RO
47	27301465A	Roller
48	27190861A	Holder RO
51	27301345A	Chassis,sub
52	27301466A	Cushion rubber
54	27301347A	Spacer,floating
55	27180461	Spring,silver
56	27180462	Spring,green
57	27180463	Spring,yellow
58	27270330	Spacer
61	27301349B	Cam plate
62	27301331-1	Disc tray
63	27301333B	Guide,bearing
64	28141081	Cushion,tray
66	27301391	Rope
67	27180464	Spring,wire
71	27301337	Flat wheel
72	27301336	Pulley,gear

REF. NO.	PART NO.	DESCRIPTION
73	27301338	Middle pulley
74	27301339	Pulley
75	27301389	Drive pulley
76	27301341	Flat pulley
77	27301350	Rubber belt S
78	27301351	Rubber belt L
81	1H048902	Motor ass'y
82	27301468	Bush,motor
83	1H169537-2	NAETC-3937-2,Terminal pc board ass'y
86	2009990290	NSAS-6P0423,Socket
87	2009990099B	NSAS-18P0138,Socket
88	2002341435	NSAS-14P0430,Socket
89	2009990291	NSAS-5P0424,Socket
90	27190775	Holder
91	25065422	NMS-1220,Microswitch
92	29110083	Tape
93	27270342	Spacer,guide
S1	82112010	2P+10F,Pan head screw
S2	838426088	2.6TTB+8B(BC),Self-tapping screw
S3	838120080	2TTB+8P,Self-tapping screw
S4	833426050	2.6TTP+5P(BC),Self-tapping screw
S5	834430068	3TTS+6B(BC),Self-tapping screw
S6	863120	N-2F,Nut
S7	831126060	2.6TTW+6P,Self-tapping screw
S8	833326148	2.6TTP+14B,Self-tapping screw
S9	834430088	3TTS+8B(BC),Self-tapping screw
S10	82143004	3P+4FN(BC),Pan head screw
S11	838120080	2TTB+8P,Self-tapping screw
S12	8930251S	ES-2.5S, Ring E
S13	801470	Special screw
S14	838426088	2.6TTB+8B(BC),Self-tapping screw

TERMINAL PC BOARD-PARTS LIST

CIRCUIT NO.	PART NO.	DESCRIPTION
P001	25050428	NSCT-18P,Socket
P103A	25055139	NPLG-9P123,Plug
P108A	25055151	NPLG-7P135,Plug

LUBRICATION

POINT	PART NO.	DESCRIPTION
A	260447	G902S
B	260451	#331
C		G947P

CAUTION ON REPLACEMENT OF PICKUP

The laser diode in the optical pickup block is so sensitive to static electricity, surge current and etc. that the components are liable to be broken down or its reliability remarkably deteriorated.

During repair, carefully take the following precautions. (The following precautions are included in the service parts).

PRECAUTIONS

1. Ground for the work-desk.

Place a conductive sheet such as a sheet of copper (with impedance lower than $10^6 \Omega$) on the work-desk and place the set on the conductive sheet so that the chassis.

2. Grounding for the test equipment and tools.

Test equipments and toolings should be grounded in order that their ground level is the same the ground of the power source.


3. Grounding for the human body.

Be sure to put on a wrist-strap for grounding whose other end is grounded.

Be particularly careful when the workers wear synthetic fiber clothes, or air is dry.

4. Select a soldering iron that permits no leakage and have the tip of the iron well-grounded.

5. Do not check the laser diode terminals with the probe of a circuit tester or oscilloscope.

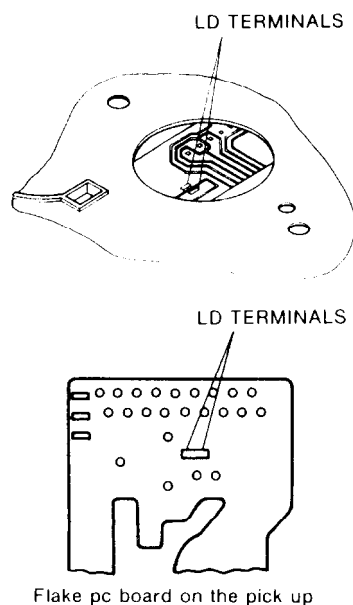

(Care should be taken with the optical pickup.)

The optical pickup is sensitive to static electricity, surge currents, and other high electrical noise, and because there is the possibility of damage to performance, in the handling of the pickup, the utmost care must be taken, particularly with regard to static electricity.

Mechanism ass'y removal

When remove the mechanism ass'y, first short the LD terminals on the pc board and remove the mechanism ass'y.

Optical pickup removal

1. When replacing the optical pickup, first short the LD terminals and remove the connector. Also, when attaching the new optical pickup, after attaching the connector, unsolder the LD terminals.
2. Do not touch the optical pickup object lens with the hands.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs a laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!


WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

Laser Diode Properties





- Material: GaAS/GaAlAs
- Wavelength: 780nm
- Emission Duration: continuous
- Laser output: max. 0.5mW*


*This output is the value measured at a distance about 1.8mm from the objective lens surface on the Optical Pick-up Block.

SCHEMATIC DIAGRAM PART 1

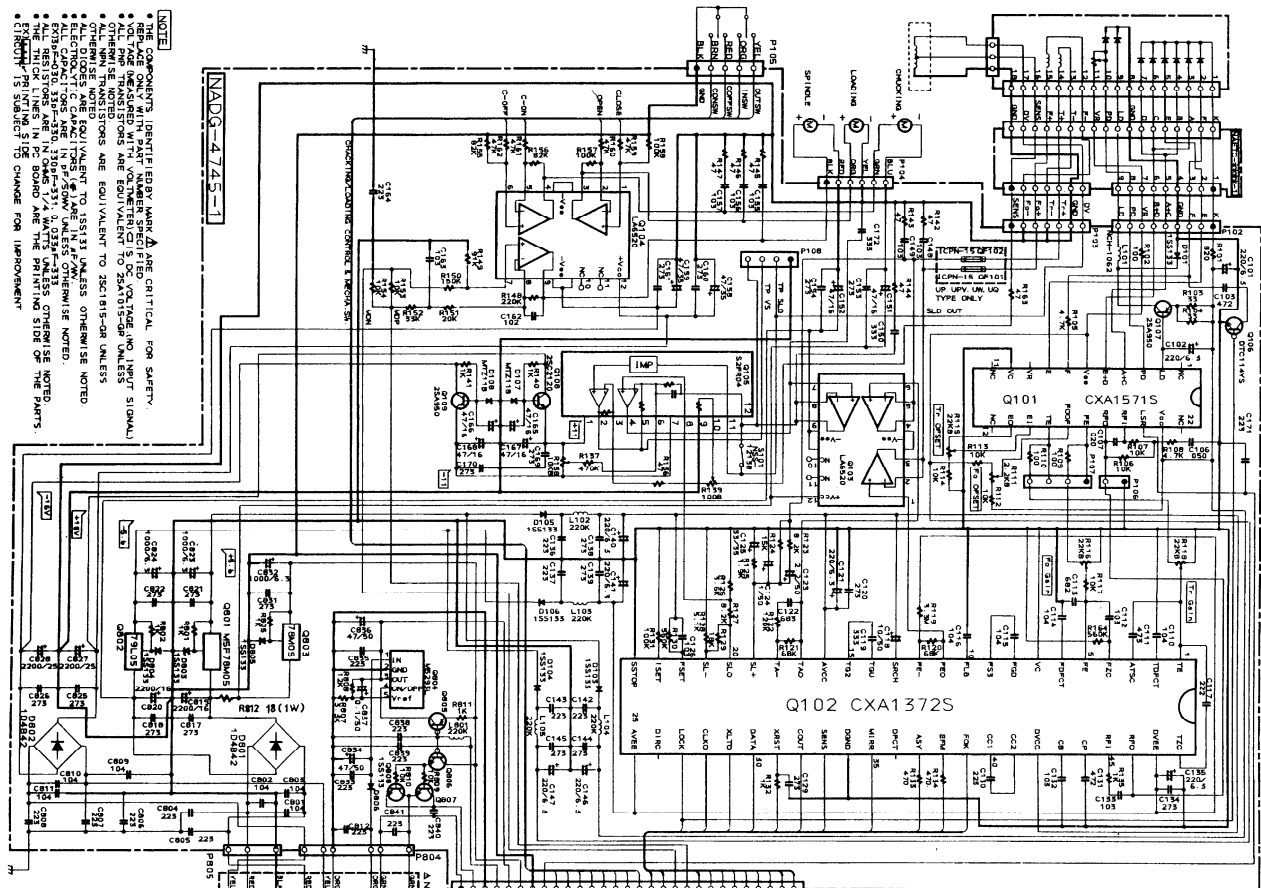

TYPE	RATING	T901	C850	P901	T902
UD	AC120V	WPT-11740	103V	AS-5A	WPT-11750
UP	AC230V	WPT-11740	103V	AS-5A	WPT-11750
UQ	AC240V	WPT-11740	103V	AS-5A	WPT-11750
UW	AC240V	WPT-11740	103V	AS-5A	WPT-11750

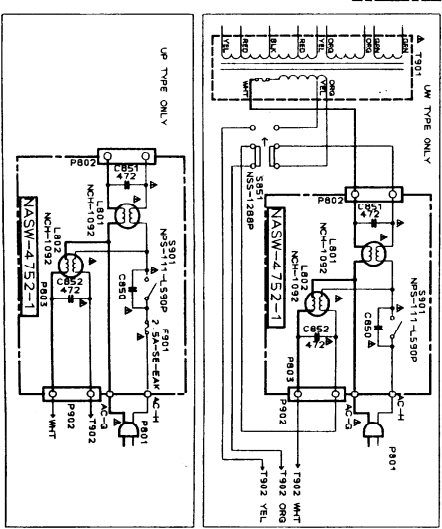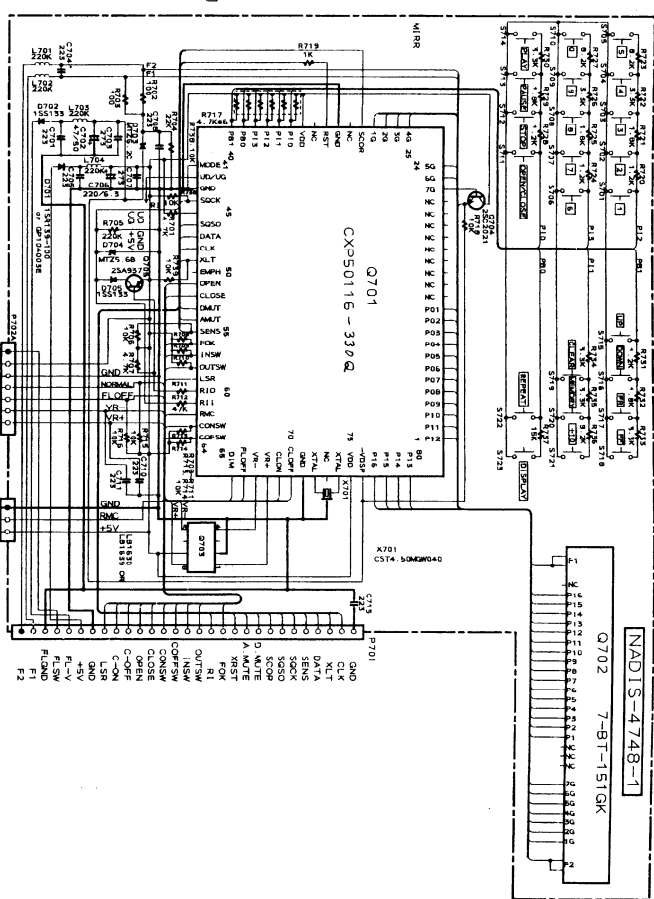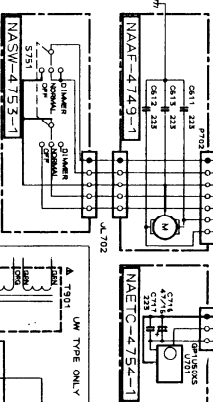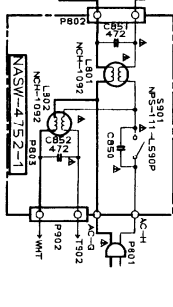


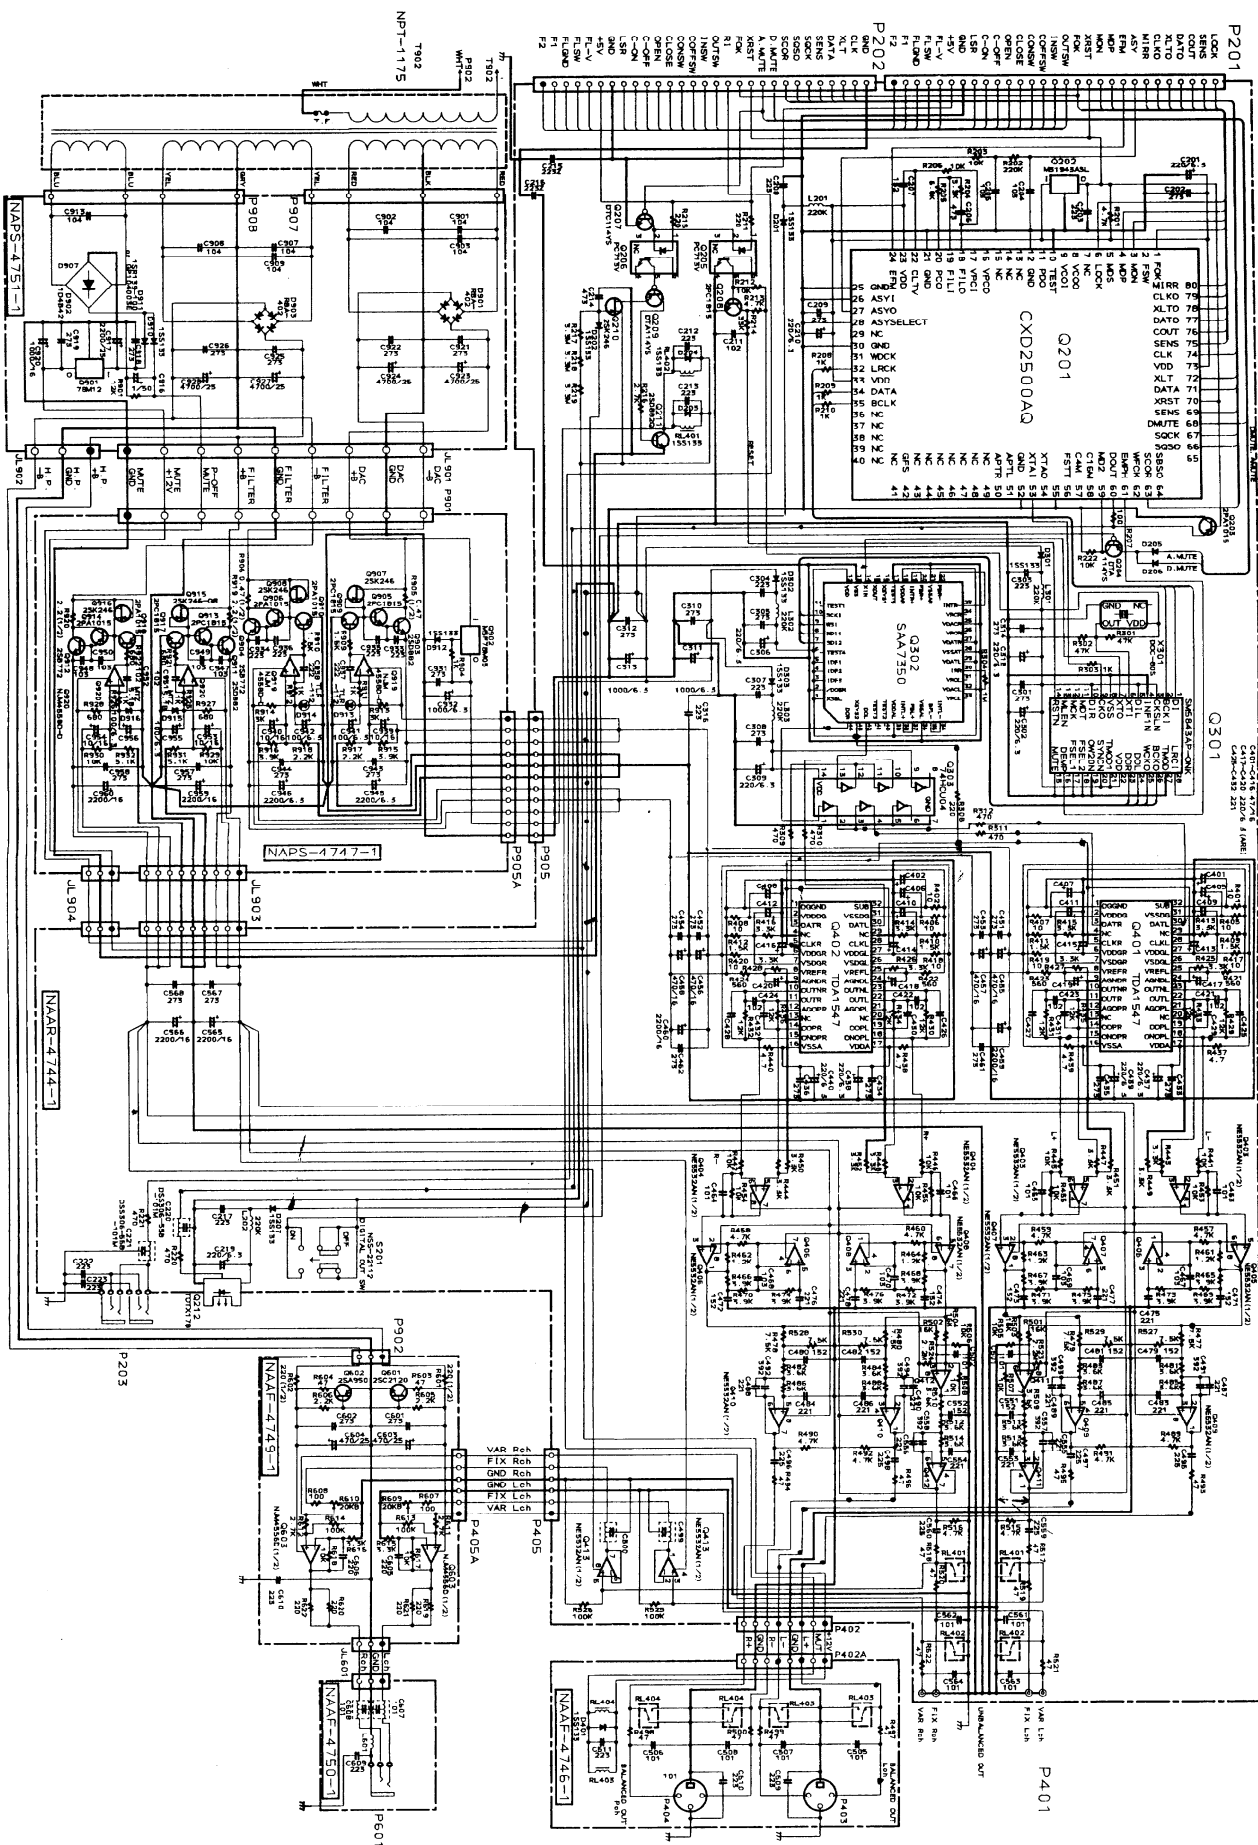

IC BLOCK DIAGRAM AND DESCRIPTIONS

Q101


CXA1571S (RF Amplifier)

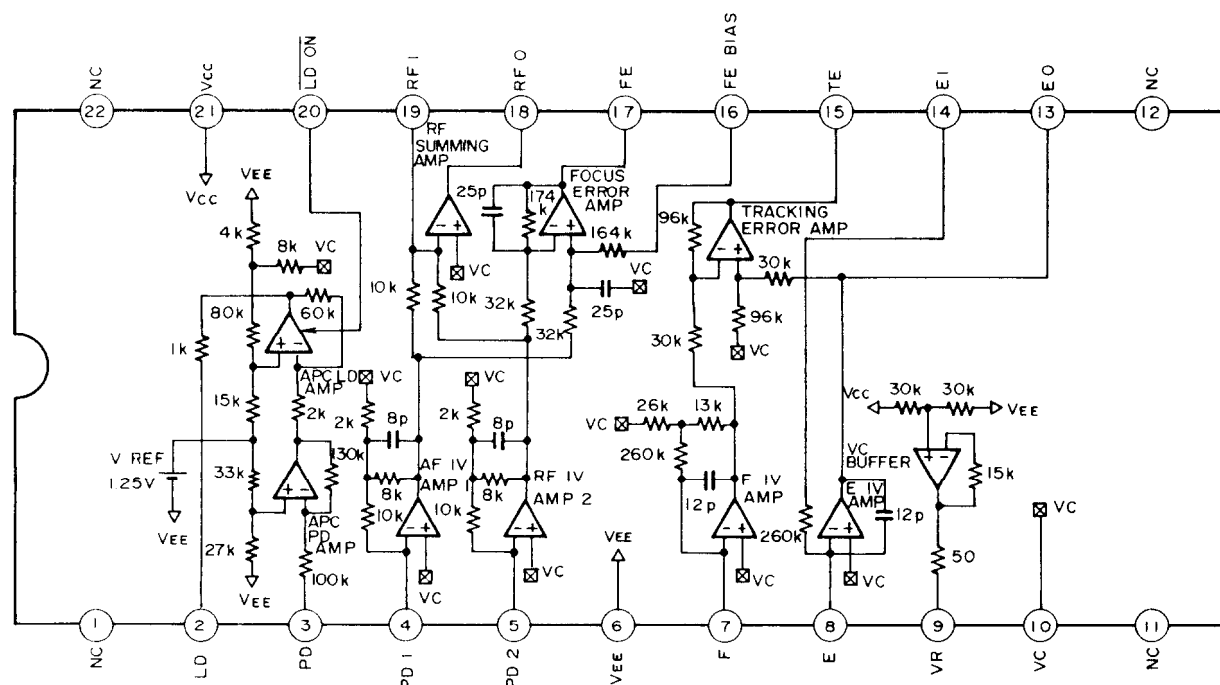

Pin No.	Symbol	I/O	Description
2	LD	O	Output terminal of APC amplifier.
3	PD	I	Input terminal of APC amplifier.
4	PD1	I	Inversion input terminal for RF I-V amplifier. Connect to photo diode A+C.
5	PD2	I	Inversion input terminal for RF I-V amplifier. Connect to photo diode B+D.
7	F-IN	I	Inversion input terminal for F I-V amplifier. Connect to photo diode F.
8	E-IN	I	Inversion input terminal for E I-V amplifier. Connect to photo diode E.
9	VR	O	DC voltage output of $(V_{CC}+V_{EE})/2$.
10	VC	I	Middle point voltage input terminal.
13	EO	O	Monitor output terminal for I-V amplifier E.
14	EI	-	Gain adjustment terminal for I-V amplifier E.
15	TE	O	Tracking error amplifier output terminal. The signal E-F is output from this terminal.
16	FE-BIAS	I	Bias adjustment terminal for non-inversion side of focus error amplifier.
17	FE	O	Focus error amplifier output terminal.
18	RFO	O	RF amplifier output terminal.
19	RFI	I	Inversion input terminal of RF amplifier.
20	LD-ON	I	Change-over terminal for APC amplifier.

Q102


CXA1372S (RF Signal Processor Servo Amplifier)

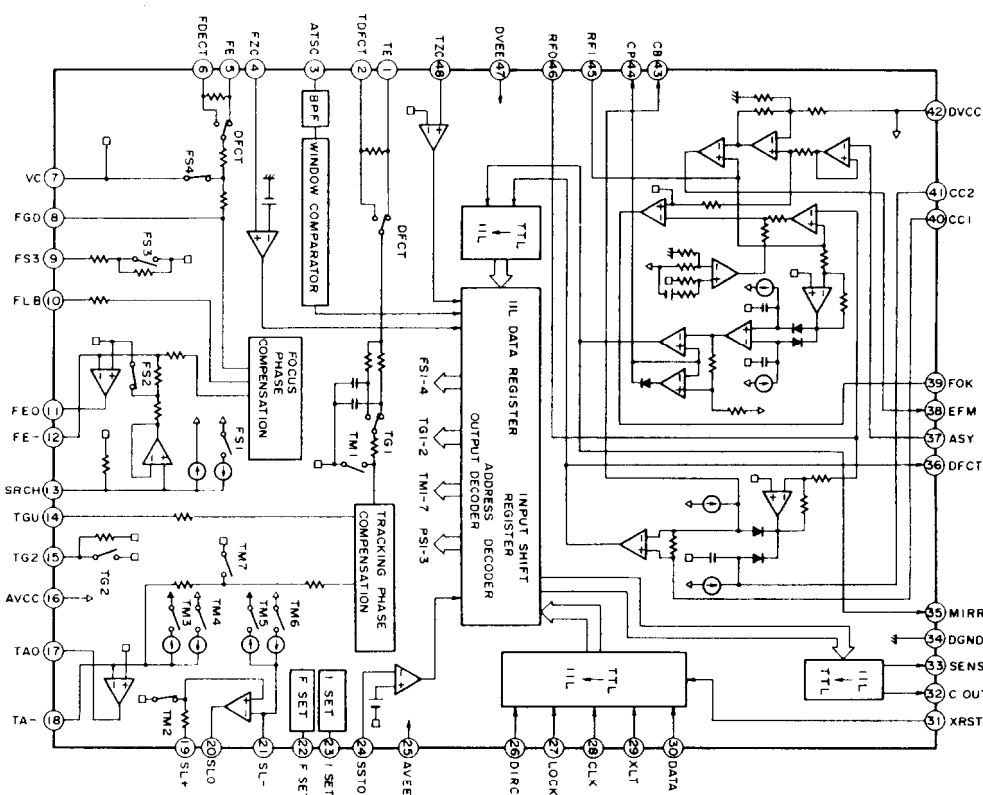

PIN. NO.	SYMBOL	I/O	DESCRIPTION	PIN. NO.	SYMBOL	I/O	DESCRIPTION
1	TE	I	Tracking error input terminal.	22	FSET	I	Peak setting input of phase correction of focus tracking.
2	TDFCT	I	Capacitor connection terminal for time constant when defect.	23	ISSET	I	This terminal is flowed the current so that the focus search, tracking jump, and sled kick height is decided.
3	ATSC	I	Window comparator input terminal for ATSC detection.	24	SSTOP	I	Inner switch selection input terminal.
4	FZC	I	Focus zero-cross comparator input terminal.	26	DIRC	I	This terminal is used when a track jump.
5	FE	I	Focus error input terminal.	27	LOCK	I	The sled runaway prevention circuit operates at the low level.
6	DFCT	I	Capacitor connection terminal for time constant when defect.	28	CLK	I	Serial data transfer clock input from microprocessor.
7	VC	I	Mid-point voltage input terminal.	29	XLT	I	Latch input from microprocessor.
8	FGD	I	Connect the capacitor between pin 9 and this pin when the high frequency gain of focus servo is dropped.	30	DATA	I	Serial data input from microprocessor.
9	FS3	I	Focus servo high frequency gain changeover input terminal.	31	XRST	I	Reset input terminal. Active low.
10	FLB	I	Input terminal for the low frequency boost of focus servo.	32	C. OUT	O	Signal output to count the track numbers.
11	FEO	O	Focus drive output terminal.	33	SENS	O	This terminal outputs FZC, and SSTOP to according command from microprocessor.
12	FE-	I	Inversion input terminal of focus amplifier.	35	MIRR	O	Mirror comparator output terminal.
13	SRCH	I	Time constant terminal to make the focus search waveform.	36	DFCT	O	Defect comparator output terminal.
14	TGU	I	Tracking high frequency gain changeover input terminal.	37	ASY	I	Auto asymmetry control input terminal.
15	TG2	I	Tracking high frequency changeover input terminal.	38	EFM	O	EFM comparator output terminal.
17	TAO	O	Tracking drive output terminal.	39	FOK	O	Focus OK comparator output terminal.
18	TA-	I	Inversion input terminal of tracking amplifier.	40	CC1	O	Defect bottom hold output terminal.
19	SL+	I	No-inversion input terminal of sled amplifier.	41	CC2	I	Defect bottom hold input terminal from CC1.
20	SLO	O	Sled(slide) drive output terminal.	43	CB	I	Defect bottom hold capacitor connection terminal.
21	SL-	I	Inversion input terminal of sled amplifier.	44	CP	I	Mirror hold capacitor connection terminal.
				45	RFI	I	RF summing amplifier input terminal.
				46	RFO	O	RF summing amplifier output terminal.
				48	TZC	I	Tracking zero-cross comparator input terminal.

Q301

SM5843AP-ONK (8 Times Oversampling Digital Filter)

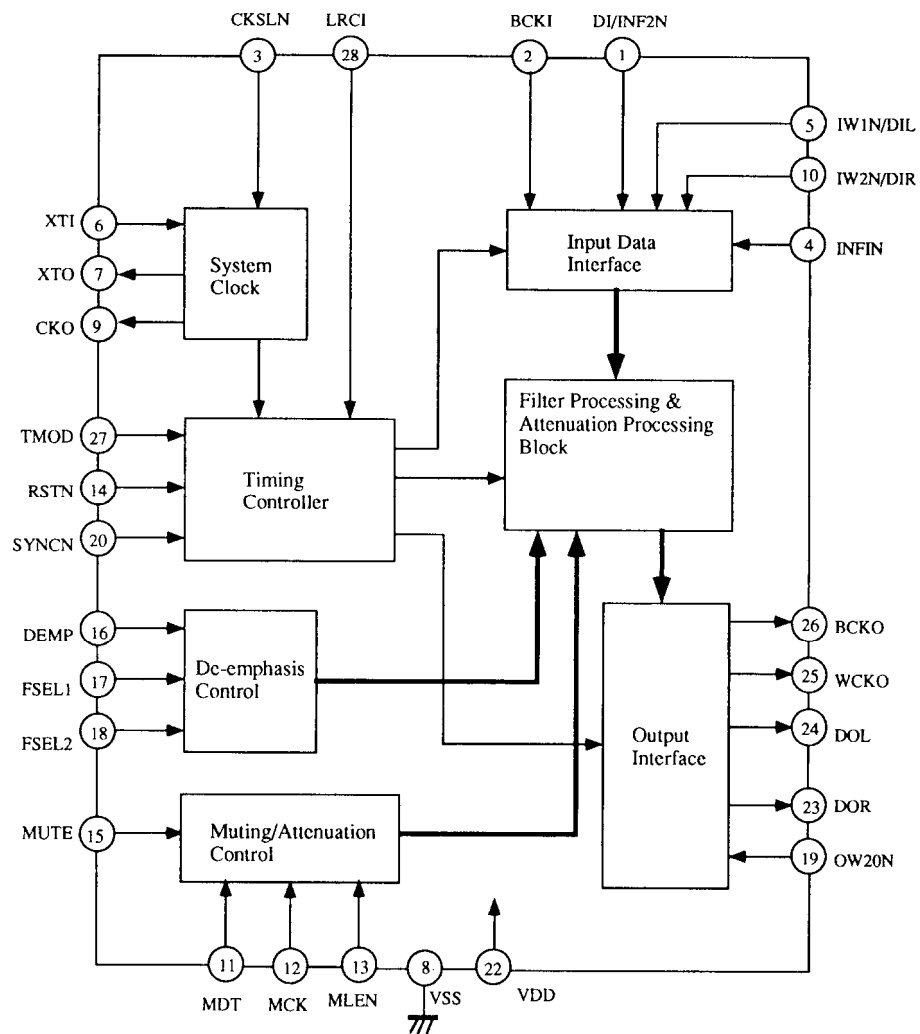


Data input	DI/INF2N	1	28	LRCI	Sample rate clock of input data
Bit clock input	BCKI	2	27	TMOD	Filter selector
Selector for resonator or input frequency	CKSLN	3	26	BCKO	Bit clock output
	INF1N	4	25	WCKO	Word clock output
	IW1N/DIL	5	24	DOL	L ch. data output
Clock input	XTI	6	23	DOR	R ch. data output
	XTO	7	22	VDD	
	VSS	8	21	NC	
Clock output	CKO	9	20	SYNCN	
	IW2N/DIR	10	19	OW20N	
	MDT	11	18	FSEL2	
	MCK	12	17	FSEL1	
	MLEN	13	16	DEMP	DE-emphasis control ON:H
System reset Reset : L	RSTN	14	15	MUTE	Muting output Mute: H

Q302


SAA7350 (Noise Sharper)

Pin No.	Mark	Function
1	XSEL	Crystal frequency select. This pin is used to select the master crystal frequency as follows:-XSEL HIGH=384fs XSEL LOW=256fs This pin defaults to XSEL HIGH when not connected.
2	DOEN	One-bit Digital Output Enable. When LOW, the one-bit code outputs are made available for DAC7. (not used.)
3	IDF3	Input data format. These three pins determine the input format the device is to operate in. If unconnected these pins will default HIGH (i.e. burst clock mode).
4	IDF2	
5	IDF1	
6	TEST4	This pin should be left open circuit.
7	SDI2	Serial Data Input. Used in simultaneous mode only (for the right channel signal). When not used, this pin will be internally pulled high.
8	SDI1	Serial Data Input. This should be a 16, 18 or 20-bit linear 2's complement PCM signal. In simultaneous mode this pin is used for the left channel signal.
9	WSI	Serial input Word Select Signal. Signifies whether data word is for the left or right channel. Can be either fs, 2fs, 4fs or 8fs where fs is the system sampling frequency. fs can lie between 16kHz and 53kHz.
10	SCKI	Bit clock input for the serial input interface.
11	TEST1	This pin should be left open circuit.
12	VDD	5V power supply for digital section.
13	VSS	Ground connection for the digital section.
14	XIN	Crystal Oscillator Input.
15	XOUT	Crystal Oscillator Output.
16	XSYS1	Buffered Oscillator Output.
17	TEST5	In normal operation this pin should be tied LOW.
18	VDDAR	Analogue 5V supply for right channel.
19	INTR+	Output from the right positive switched-capacitor integrator. Input to differential op-amp.
20	FBR+	Feedback connection for the right positive switched-capacitor integrator.
21	VSSAR	0V supply for right channel.
22	FBR-	Feedback connection for the right negative switched-capacitor integrator.
23	INTR-	Output from the right negative switched-capacitor integrator. Input to differential op-amp.
24	VRCR	High impedance voltage reference for the right channel inputs. Typically VDDAR/2.
25	VDACR	Reference voltage supply for right channel DAC's. Normally this will be connected to VSS.
26	VROR	Right channel voltage reference output. Typically VDDAR/2.
27	VDDATR	5V supply for right channel analogue timing.
28	VSSAT	0V supply for left and right channel analogue.
29	VDDATL	5V supply for left channel analogue timing.
30	IRR	24 kohm bias resistor connection for the reference current generator circuit.
31	VROR	Left channel voltage reference output. Typically VDDAL/2.
32	VDACL	Reference voltage supply for left channel DAC. Normally this will be connected to VSS.
33	VRCL	High impedance voltage reference for left channel inputs and for bias current generator. Typically VDDAL/2.
34	INTL-	Output from left negative switched capacitor integrated. Input to differential op-amp.
35	FBL-	Feedback connection for the left negative switched-capacitor integrator.
36	VSSAL	0V supply for left channel.
37	FBL+	Feedback connection for the left positive switched-capacitor integrator.
38	INTL+	Output from the left positive switched-capacitor integrator. Input to differential op-amp.
39	VDDAL	Analogue 5V supply for left channel.
40	TEST2	This pin should be left open circuit.
41	TEST3	This pin should be left open circuit.
42	DOL	Digital output left. Left channel one-bit code for DAC7, when disabled this pin will be driven LOW. (Not used.)
43	XSYS2	Output clock at a frequency of half the master clock frequency.
44	DOR	Digital output right. Right channel one-bit code for DAC7, when disabled this pin will be driven LOW. (not used.)

Q201 CXD2500AQ/BQ (Digital Signal Processor)

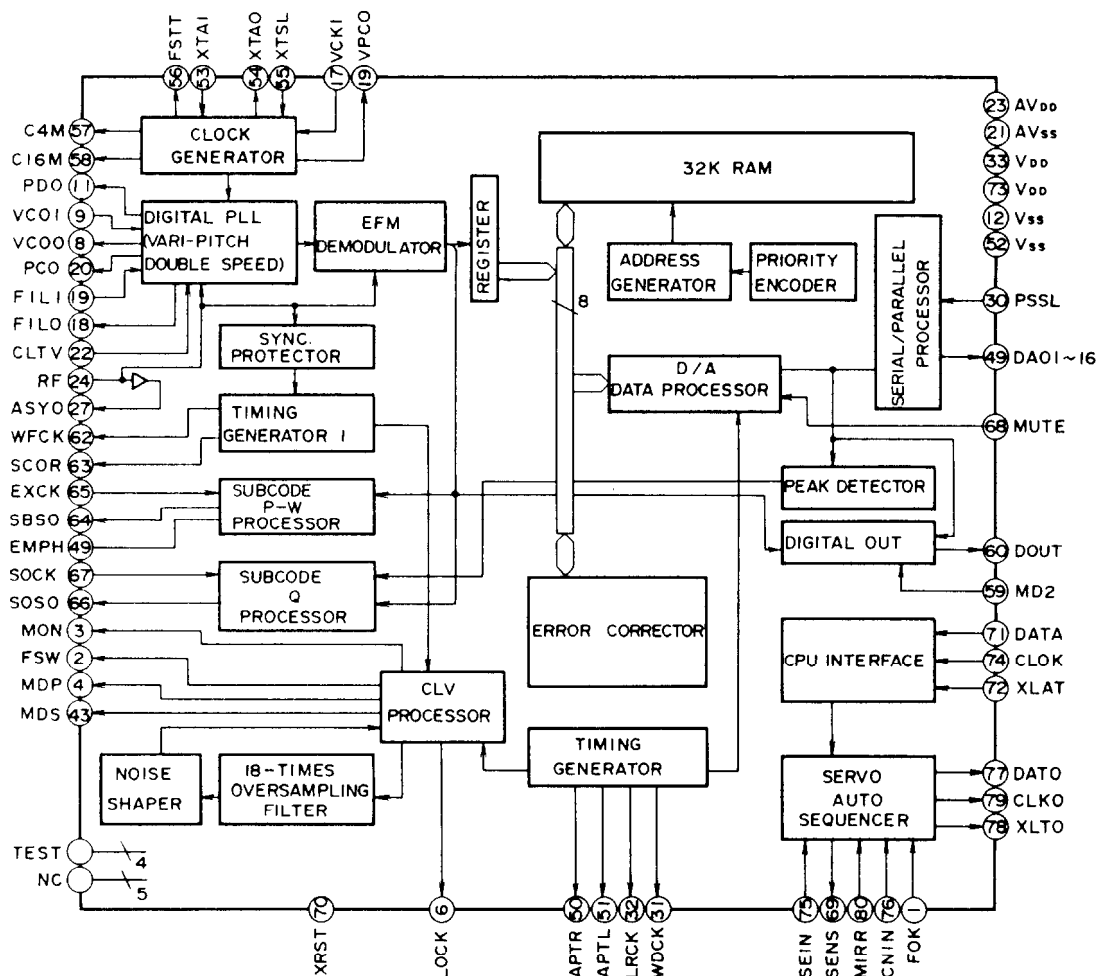


SAA7350 (Noise Sharper)

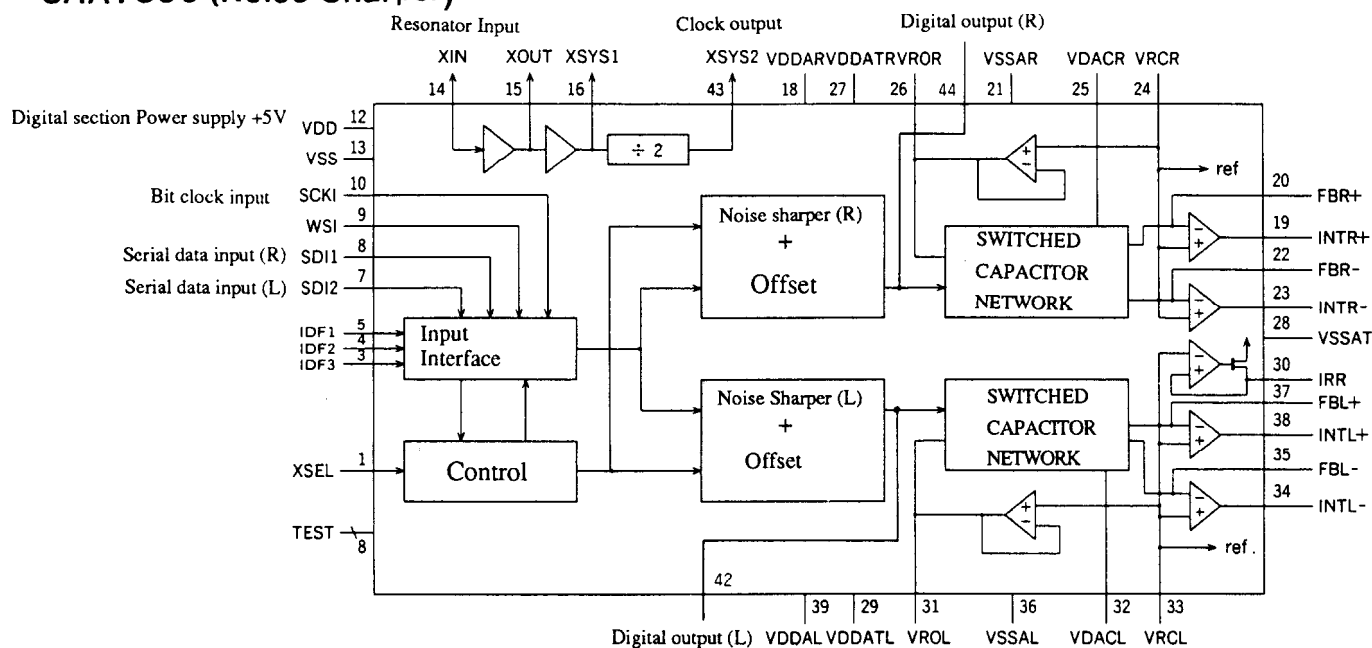

NO.	SYMBOL	I/O	DESCRIPTION	NO.	SYMBOL	I/O	DESCRIPTION
1	FOK	I	Focus OK input	42	DA08	O	DA08 GFS output
2	FSW	O	Output filter changeover output of spindle motor	43	DA07	O	DA07 RFCK output
3	MON	O	Spindle motor control output	44	DA06	O	DA06 C2P0 output
4	MDP	O	Spindle motor servo control	45	DA05	O	DA05 XRAOF output
5	MDS	O	Spindle motor servo control	46	DA04	O	DA04 MNT3 output
6	LOCK	O	H when GFS is high	47	DA03	O	DA03 MNT2 output
7	NC			48	DA02	O	DA02 MNT1 output
8	VCOO	O	Oscillation circuit output for analog FEM PLL	49	DA01	O	DA01 MNT0 output
9	VCOI	I	Oscillation circuit input for analog EFM PLL (8.6436MHz)	50	APTR	O	Control output for aperture correction. H when Rch.
10	TEST	I	Test terminal	51	APTL	O	Control output for aperture correction. H when L.ch.
11	PDO	O	Charge pump output for analog EFM PLL	52	Vss		Ground
12	Vss		Ground terminal	53	XTAI	I	Crystal oscillation circuit input of 16.9344MHz or 33.8688MHz input
13-15	NC			54	XTAO	O	Crystal oscillation circuit output of 16.9344MHz
16	VPCO	O	PLL charge pump output for variable pitch	55	XTSL	I	Crystal selection input terminal. L when 16.9344MHz. H when 33.8688MHz.
17	VCKI	I	Clock input for variable pitch from VCO (16.934MHz)	56	FSTT	O	2/3 divided output of pins 53 & 54
18	FILO	O	Filter output for master PLL	57	C4M	O	4.2336MHz output
19	FILI	I	Filter input for master PLL	58	C16M	O	16.9344MHz output
20	PCO	O	Charge pump output for master PLL	59	MD2	I	Digital output control input. On at H & Off at L.
21	AVss		Analog ground	60	DOUT	O	Digital output
22	CLTV	I	VCO control voltage input for master	61	EMPH	O	Emphasis control output. Active H.
23	AVDD		Analog section power supply (+5V)	62	WFCK	O	Write frame clock output
24	RF	I	EFM signal input	63	SCOR	O	Sub-code detection output. H when is detected S0 or S1.
25	TEST2	I	Connect to the ground.	64	SBSO	O	Serial output of sub code (P~W)
26	TEST3	I	Connect to the ground.	65	EXCK	I	Clock input for read out SBSO
27	ASYO	O	EFM full swing output	66	SQSO	O	Sub Q 80 bits. PCM peak, and level data 16 bits output
28	TEST4	I	Connect to the ground.	67	SQCK	I	Clock input for read out SQSO
29	NC			68	MUTE	O	Muting control output. Active H.
30	PSSL	I	Audio data output mode changeover input. Serial data at L and parallel data at H.	69	SENS	-	Sens output. Output to microprocessor
31	WDCK	O	D/A interface for 48 bits slot. Word clock f=2Fs.	70	XRST	I	System reset. Rest at low level.
32	LRCK	O	D/A interface for 48 bits slot. LR clock f=Fs.	70	DATA	I	Serial data input from microprocessor
33	VDD		Power supply terminal (+5V)	72	XLTA	I	Latch input from microprocessor. Latch the serial data at trailing.
34-49			Data output terminals	73	VDD		Power supply
			PSSL=1 PSSL=0	74	CLOK	I	Serial data transfer clock input from microprocessor
34	DA16	O	DA16 Serial data of 48 bits slot	75	SEIN	I	Sens input from SSP
35	DA15	O	DA15 Bit clock of 48 bits slot	76	CNCI	I	Track jump numbers count signal input
36	DA14	O	DA14 Serial data of 64 bits slot	77	DATO	O	Serial data output to SSP
37	DA13	O	DA13 Bit clock of 68 bits slot	78	XLTO	O	Serial data latch output to SSP. Latch at trailing.
38	DA12	O	DA12 LR clock of 68 bits slot	79	CLKO	O	Serial data transfer clock output to SSP
39	DA11	O	DA11 GTOP output	80	MIRR	I	Mirror signal input
40	DA10	O	DA10 XUGF output				
41	DA09	O	DA09 XPLCK output				


Note:SSP:Q102 CXA1372S

Q701
CXP50116-330Q (Microprocessor)

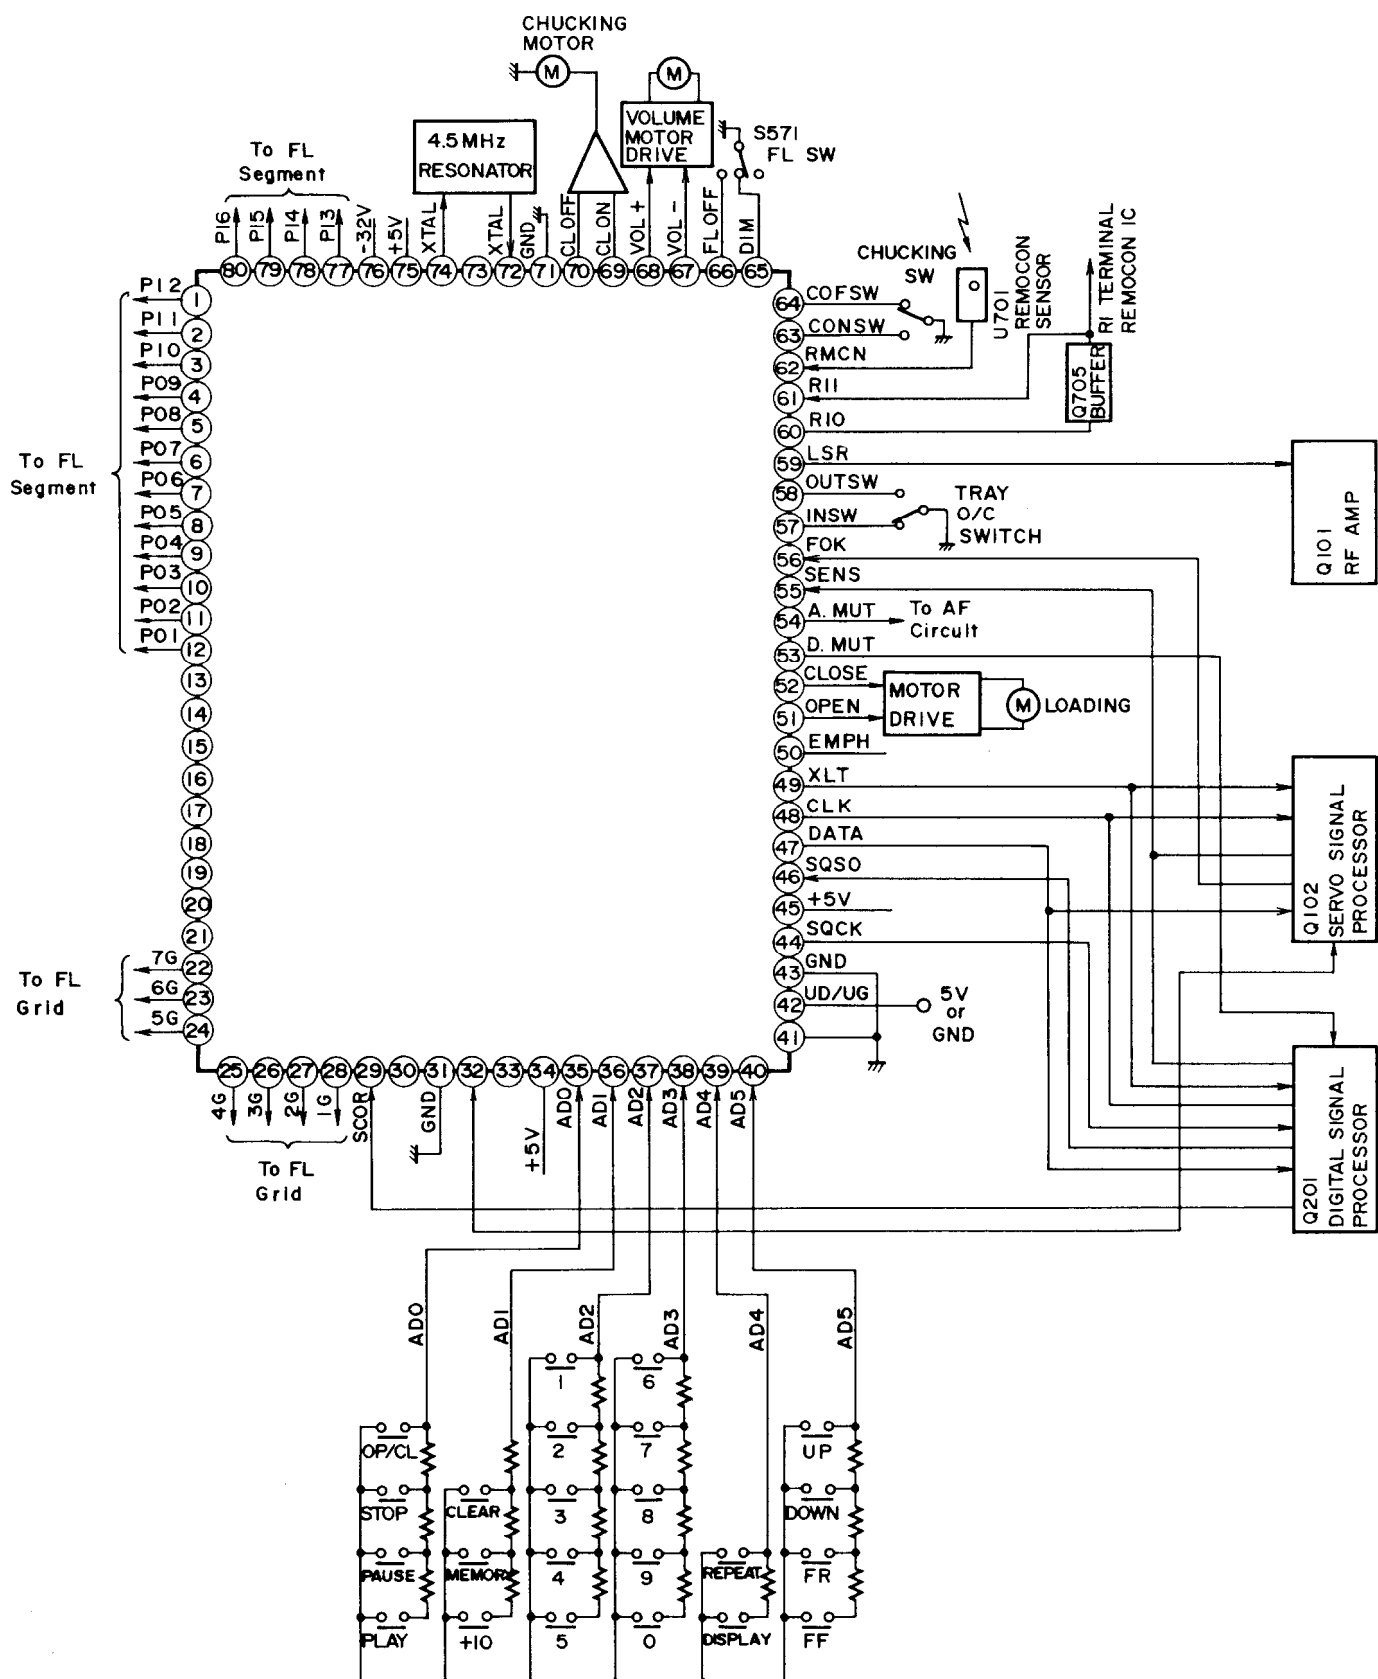


Pin No.	Symbol	I/O	Descriptions
1~12	P01~P12	O	Fluorescent indicator tube segment output terminals. Active high.
22~28	7G~1G	O	Fluorescent indicator tube grid output terminals. Active high.
29	SCOR	I	Sub code sink input terminal. Leading pulse (75Hz) is input during play.
32	XRST	I/O	Reset input terminal. Reset at low level when the power switch turns on.
34	VDD		+5V power supply.
35~40	AD0~AD5	I	A/D converter input terminals for key input.
42	UD/UG	I	Indicator method changeover input when the power switch turns on.
44	SQCK	O	Read clock output control terminal of sub code Q.
46	SQSO	I	Input terminal of sub code Q.
47	DATA	O	Data output terminal of serial command of servo system.
48	CLK	O	Clock output control terminal of serial command of servo system.
49	XLT	O	Latch command output terminal of serial command of servo system.
50	DEEMP	O	Emphasis switch control output terminal. Active high.
51	OPEN	O	Tray open operation output terminal. Open at low level.
52	CLOSE	O	Tray close operation output terminal. Close at low level.
53	D. MUT	O	Digital muting control output terminal.
54	A. MUT	O	Audio muting control output terminal. Muting turns off at low level.
55	SENSE	I	This terminal is input the conditions of servo system according serial command of servo system.
56	FOK	I	Focus OK input terminal. This terminal is the high level when focus servo operates.
57	IN SW	I	Close switch input terminal. L when the close switch turns on.
58	OUT SW	I	Open switch input terminal. L when the open switch turns on.
59	LSR	O	Laser diode ON/OFF control output terminal. ON at low level.
60	NRSC OUT	O	System code output terminal.
61	NRSC IN	I	System code input terminal.
62	RCMN	I	Input terminal from remote control sensor.
63,64	CON/ COF SW	I	Chucking switch detection input terminal
65	DIMMER SW NORMAL	I	The FL tube lights on normally when this terminal is the low level.
66	DIMMER SW OFF	I	The FL tube lights off when this terminal is the low level.
67	VOL DOWN	O	Volume control output terminal. Active "H".
68	VOL UP	O	Volume control output terminal. Active "H".
69, 70	CL ON/OFF	O	Chucking motor control output terminal
71	V _{SS}		Connect to GND.
72, 74	OSC	I	X'tal connection terminal
76	-32V		Power supply terminal for fluorescent indicator tube.
77~80	P13~P16	O	Fluorescent indicator tube segment output terminals. Active high.

Q401, Q402
TDA1547 (D/A converter)

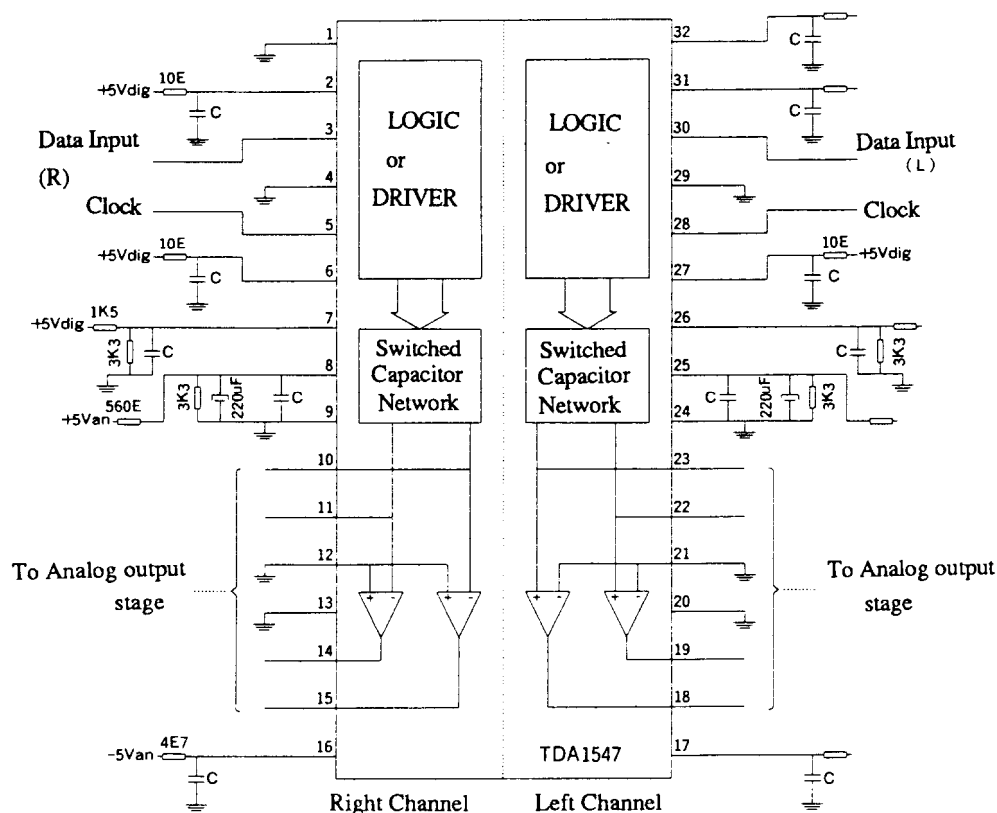


Pin No.	Symbol	Description	Pin No.	Symbol	Description
1	DGND	Digital ground	17	VDDA	Power supply +5V
2	VDDD	Digital power supply +5V	18	DNDPL	Negative output for left channel
3	DATA R	Serial 1 bit data input	19	DOPL	Positive output for left channel
4	NC		20	NC	
5	CLKR	Clock input for right channel	21	AGNDL	Analog ground
6	VDDDR	Power supply +5V	22	OUTL	Positive DAC output for left channel
7	VSSDR	Power supply -3.5V	23	OUTNL	Negative DAC output for left channel
8	VREFR	Reference power supply -4V	24	AGNDL	Analog ground
9	AGND R	Analog ground	25	VREFR	Reference power supply -4V
10	OUTNR	Negative DAC output for right channel	26	VSDGL	Power supply -3.5V
11	OUT R	Positive DAC output for right channel	27	VDDGL	Power supply +5V
12	AGND R	Analog ground	28	CLKL	Clock input for left channel
13	NC		29	NC	
14	DOPR	Positive output for right channel	30	DATAL	Serial 1 bit data input for left channel
15	DNOPR	Negative output for right channel	31	VSSDG	Power supply -5V
16	VSSA	Power supply -5V	32	SUB	Power supply -5V


Q202
M51943ASL (System reset)

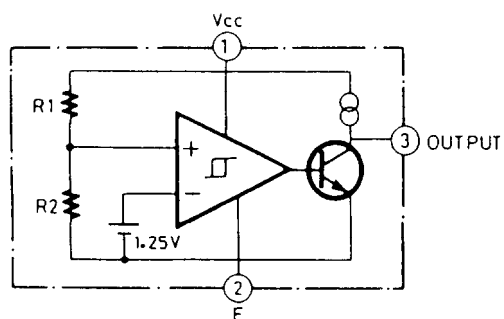


Q303
74HCU04P (Hex inverters)

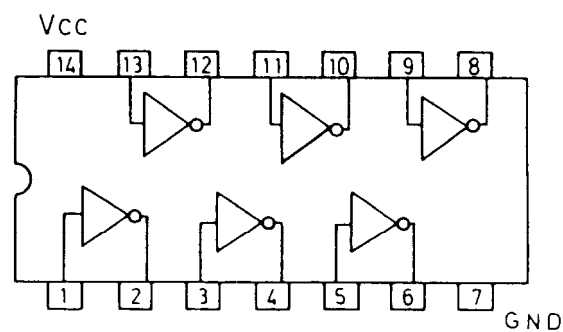

Q703
LB1639 (Volume Motor Driver)

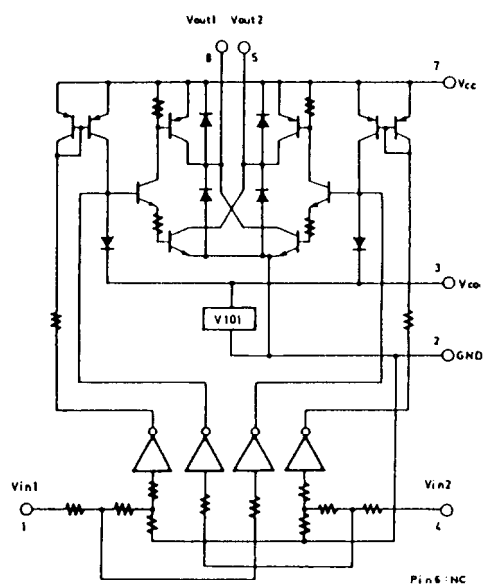

PACKING VIEW

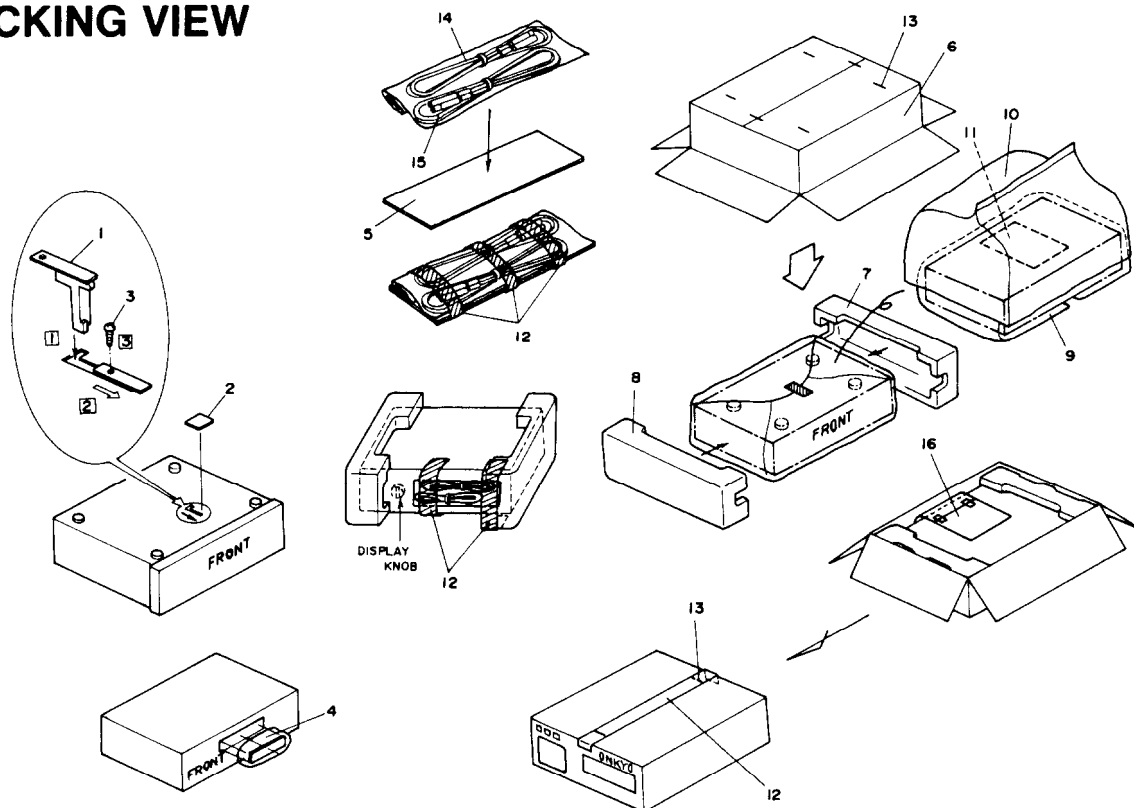

REF.NO.	PART NO.	DESCRIPTION
1	28335034A	Lock lever
2	29361360	Label
3	834430088	3TTS+8B(BC), Self-tapping screw
4	29095710	Sheet, door
5	29095705	Sheet
6	29052619	Master carton box
	29052633	Master carton box <S>
7	29091518B	Pad L
8	29091519B	Pad R
9	29095012-1	550×800mm, Protection sheet
10	29100105	620×550mm, Styrene bag
11	29355180	Caution sheet
12	29110071	PP tape
13	282301	Staple
14	2010270	NBC-150B,Balance cord L
15	2010271	NBC-150R,Balance cord R
16	Accessary bag ass'y	
	2010238	Connection cord
	2010200	Remote control cord
	24140218A	RC-218C,Remote control transmitter
	3010054	UM-3,Two batteries
	29355193	Instruction sheet
	29341828	Instruction manual <D>
	29341830	Instruction manual <C/P/W/Q>
	25055040	CV-K-2,Conversion plug <W>
	29100097	350×250mm,Styrene bag
	29365019A	Warranty card <N>
	29365024A	Warranty card <F>
	29358002J	Service station list <N>
	29100107	Styrene bag for warranty card <F>

NOTE: :Black model only
 <S>:Silver model only
 <D>:120V model only
 <P>:230V model only
 <W>:Worldwide model only
 <Q>:240V model only
 <N>:U.S.A. model only
 <F>:French model only
 <C>:Canadian model only


ADJUSTMENT PROCEDURES

Instruments required

Dual trace oscilloscope, Frequency counter, AF oscillator, Test disc (SONY YEDS-18), AC voltmeter, and Socket P4(Part no. 25050138)

1. Slide Balance Adjustment

1. Connect the audio oscillator to P112 SLD and the oscilloscope to P112 SLD and VS as shown below.
 2. Set the output of oscillator to the square wave, 5Hz, 2Vp-p.
 3. Turn the switch S101 to OPEN.
 4. Turn the power switch to ON.
 5. Confirm that the optical pickup does not move. (If it moves, control it by hand.)
 6. Adjust the semi-fixed resistor R139 so that the waveforms of channels 1 and 2 become the same phase.
- After adjustment, remove the audio oscillator and oscilloscope.

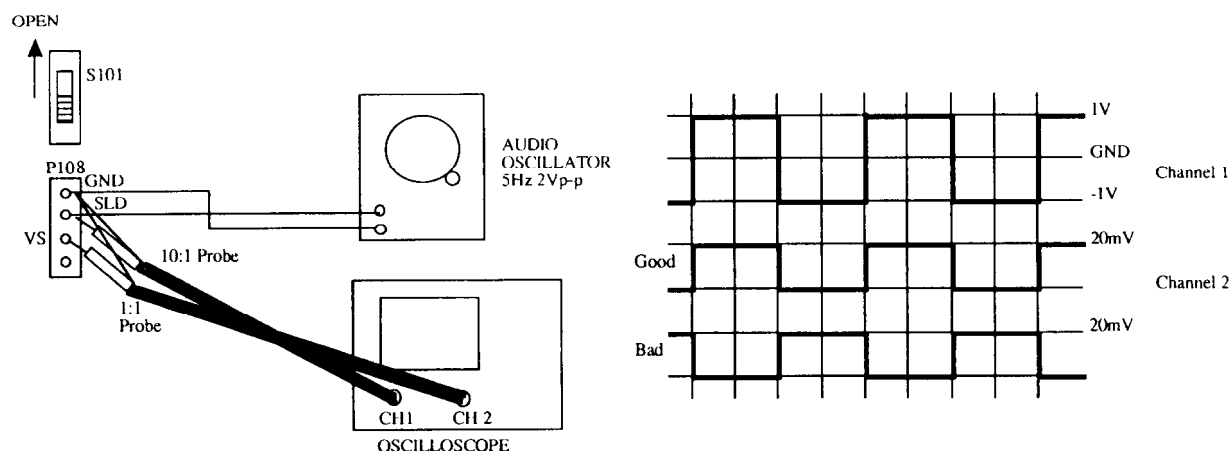

2. Slide Offset Adjustment


1. Connect the oscilloscope to P112 SLD.
2. Turn S101 to SHORT.
3. Adjust the semi-fixed resistor R138 so that the waveform on the oscilloscope becomes 0V.

3. Focus Offset Adjustment

- Load the test disc YEDS-18 on the tray and play the track 2.
- Connect the oscilloscope to the terminal P106.
- Adjust R111 so that the waveform on the oscilloscope becomes maximum.
- When the output is broad, set R111 to the mechanical center.



Photo 1

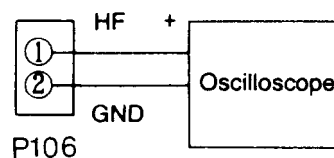

4. Tracking offset adjustment

Load the test disc YEDS-18 on the tray and play the track 2.



Turn R118 to minimum position. (Counter clockwise)

Connect the oscilloscope across pin 3 (TR) of P107 and P106.(Ground)

Adjust R115 until the center of tracking error signal on the oscilloscope becomes GND level.

Turn R118 to the mechanical center.

After adjustment, disconnect the oscilloscope.

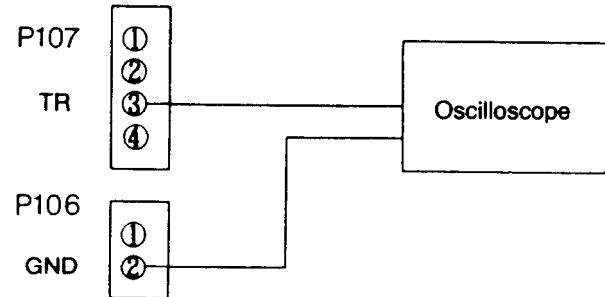
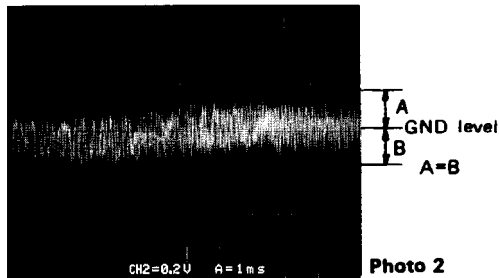


5. Focus gain adjustment

Set the output of AF oscillator to 800Hz, 1~1.5Vp-p.

Play the track 2 of test disc.

Connect the oscilloscope and the AF oscillator as shown below.

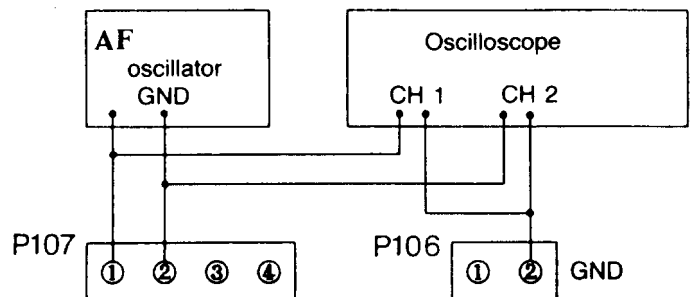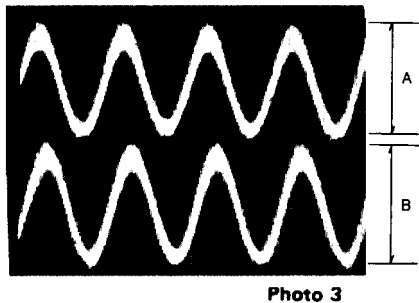

Adjust R116 until 800Hz components of channels 1 and 2 on oscilloscope become same level.

After adjustment, disconnect the AF oscillator and the oscilloscope.

6. Tracking gain adjustment

Set the output of AF oscillator to 1.2kHz, 1~1.5Vp-p.

Play the track 2 of test disc.

Connect the oscilloscope and the AF oscillator as shown below.


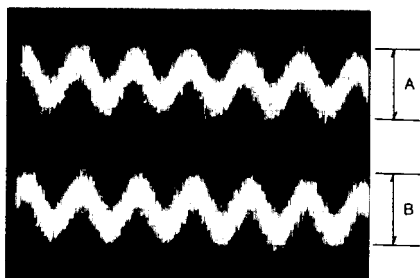



Photo 4

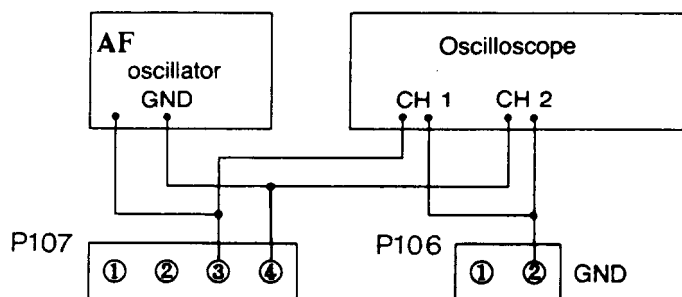

Adjust R118 until 1.2kHz components of channels 1 and 2 on oscilloscope become same level.

After adjustment, disconnect the AF oscillator and the oscilloscope.

After adjustment, confirm that the center of tracking error signal becomes GND level.

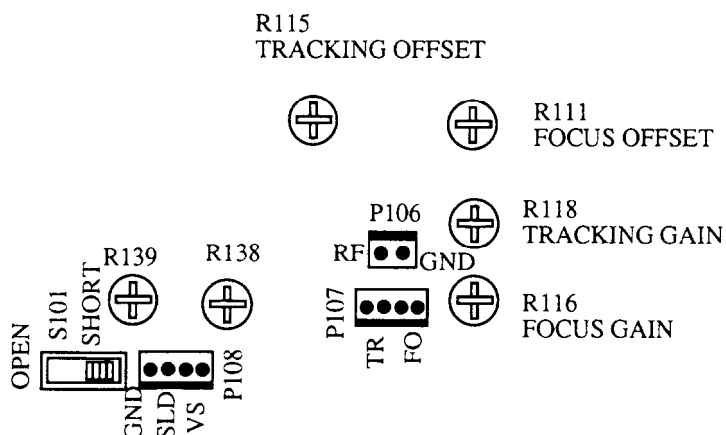

PRINTED CIRCUIT BOARD VIEW FROM BOTTOM SIDE

DISPLAY CIRCUIT PC BOARD

HEADPHONE TERMINAL PC BOARD (NAAF-4750-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
L601	230906	BL02RN2-R62,Coil
C607,C608	3030002	DSS3306-55B-101M,Filter
P601	25045221	HLJ0540-01-410,Jack

RECTIFIER CIRCUIT PC BOARD (NAPS-4751-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q901	222780122	78M12
	Diodes	
D901,D903	22380048	RBA-402
D902	22380039	1D4B42
D910	223163 or	1SS133 or
	223205	1SS270A
D911	22380032 or	1SR139-100 or
	22380035	GP104003E
	Capacitors	
C901-C903	374721044	0.1 μ F $\pm$ 5%,50V,Plastic
C907-C909	374721044	0.1 μ F $\pm$ 5%,50V,Plastic
C913	374721044	0.1 μ F $\pm$ 5%,50V,Plastic
C916	393380107	1 μ F,50V,Elect.
C917	393152227	2200 μ F,25V,Elect.
C918,C919	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C920	393141027	1000 μ F,16V,Elect.
C921,C922	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C923,C924	393154727	4700 μ F,25V,Elect.
C925,C926	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C927,C928	393154727	4700 μ F,25V,Elect.

POWER SWITCH PC BOARD (NASW-4752-1/1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
L801,L802	231051	Δ NCH-1092,Coil
C850	3500065A	Δ DE7150FZ103PAC400V/125V, IS capacitor
	27301216	Δ Cover for C850
C851,C852	3500077	Δ DE5150F472M,Plastic capacitor
S901	25035636	Δ NPS-111-L590P,Switch
F901	252075	Δ 2.5A-SE-EAK,Fuse <P>
F901a	25050065	Δ YSH403T,Fuseholder <P>

DIMMER SWITCH PC BOARD (NASW-4753-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
S751	25030367	NRSF-123-30SRBM,Switch

REMOTE CONTROL SENSOR PC BOARD (NAETC-4754-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
U701	24130003	GPIU50XS,Remote sensor
C716	393144707	47 μ F,16V,Elect. capacitor

NOTE: <P>:230V model only

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

PRINTED CIRCUIT BOARD – PARTS LIST

MAIN CIRCUIT PC BOARD (NAAR-4744-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q201	22240487 or 22240487A	CXD2500AQ or CXD2500BQ
Q202	22240018	M51943A
Q205,Q206	24120012	PC713V
Q212	24120031	TOTX178
Q301	22240680A	SM5843AP-ONK
Q302	22240655	SAA7350AGP
Q303	222755	74HCU04P
Q401,Q402	22240654	TDA1547
Q403-Q413	22240656	NE5532AN
	Transistors	
Q203	2214895 or 2214905	2SA1266-GR or 2PA1015-GR
Q204,Q209	2213090 or 2213590	DTA114YS or RN2207
Q207	221281 or 2213570	DTC114YS or RN1207
Q208	2214885 or 2214915	2SC3198-GR or 2PC1815-GR
Q210	2211945	2SK246-GR
Q211	2201285	2SD882-Q
	Diodes	
D201-D207	223163 or	1SS133 or
D301-D303	223205	1SS270A
	Coils	
L201,L202	233411K220	NCH-1387
L301-L303	233411K220	NCH-1387
	Relaies	
RL401,RL402	25065469	NRL-2P1A-DC12-078
	Resonator	
X301	3010189	DOC-80S
	Capacitors	
C201,C210	393122217	220 μ F,6.3V,Elect.
C202,C209	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C204,C205	374721034	0.01 μ F $\pm$ 5%,50V,Plastic
C206,C214	374724734	0.047 μ F $\pm$ 5%,50V,Plastic
C207	374721524	1500pF $\pm$ 5%,50V,Plastic
C211,C224	374721024	1000pF $\pm$ 5%,50V,Plastic
C219	393144707	47 μ F,16V,Elect.
C220,C221	3030002	DSS306-55B-101M,Filter
C301,C305	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C302,C306	393122217	220 μ F,6.3V,Elect.
C308,C310	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C309,C315	393122217	220 μ F,6.3V,Elect.
C311,C313	393121027	1000 μ F,6.3V,Elect.
C312,C314	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C401,C402	393344707	47 μ F,16V,Elect.
C405-C416	393344707	47 μ F,16V,Elect.
C417-C420	393022217	220 μ F,6.3V,Elect.

CIRCUIT NO.	PART NO.	DESCRIPTION
	Capacitors	
C421-C424	374721024	1000pF $\pm$ 5%,50V,Plastic
C425-C432	373302214	220pF $\pm$ 5%,125V,Plastic
C437-C440	393121027	1000 μ F,6.3V,Elect.
C451-C454	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C455-C458	393144717	470 μ F,16V,Elect.
C459,C460	393142227	2200 μ F,16V,Elect.
C461,C462	393024717	470 μ F,6.3V,Elect.
C463-C466	373301014	100pF $\pm$ 5%,125V,Plastic
C467-C470	374721034	0.01 μ F $\pm$ 5%,50V,Plastic
C471-C474	374721524	1500pF $\pm$ 5%,50V,Plastic
C475-C478	373302214	220pF $\pm$ 5%,125V,Plastic
C479-C482	374721524	1500pF $\pm$ 5%,50V,Plastic
C483-C490	373302214	220pF $\pm$ 5%,125V,Plastic
C491-C494	374723924	3900pF $\pm$ 5%,50V,Plastic
C495-C498	373722254	2.2 μ F $\pm$ 5%,50V,Plastic
C499,C500	3030002	DSS306-55B-101M,Filter
C501,C502	373301014	100pF $\pm$ 5%,125V,Plastic
C551,C552	374721524	1500pF $\pm$ 5%,50V,Plastic
C553-C556	373302214	220pF $\pm$ 5%,125V,Plastic
C557,C558	374723924	3900pF $\pm$ 5%,50V,Plastic
C559,C560	373722254	2.2 μ F $\pm$ 5%,50V,Plastic
C561-C564	373301014	100pF $\pm$ 5%,125V,Plastic
C565,C566	393144727	4700 μ F,16V,Elect.
	Switch	
S201	25065286	NSS-22112
	Sockets	
P201,P202	25050969 or 25050861	NSCT-29P756 or NSCT-29P656
	Terminals	
P203	25045172	HSJ-1003-01-020
P401	25045351	NPJ-4PDWR197
	Plugs	
P402	25055410	NPLG-8P392
P405	25055150	NPLG-6P134
P905	25055155	NPLG-11P139
	Wire traps	
P903	25050531	NSCT-9P354
P904	25050525	NSCT-3P348

DIGITAL CIRCUIT PC BOARD (NADG-4745-1/1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q101	22240404	CXA1571S
Q102	22240366	CXA1372S
Q103,Q104	22240620	LA6520
Q105	222090	S2FR04
Q801	222780055MIT	M5F78M05
Q802	222790053	79L05
Q803	222780052	78M05
Q804	22240390	M5293L

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBER SPECIFIED.

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors			Capacitors	
Q106,Q806	221281 or 2213570	DTC114YS or RN1207	C160,C161	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
Q107,Q109	2211503 or 2211504	2SA950-O or 2SA950-Y	C162	374721024	1000pF $\pm$ 5%,50V,Plastic
Q108	2211163 or 2211164	2SC2120-O or 2SC2120-Y	C163	374721034	0.01 μ F $\pm$ 5%,50V,Plastic
Q805	2213090 or 2213590	DTA114YS or RN2207	C165-C168	393144707	47 μ F,16V,Elect.
Q807,Q808	2213063 or 2213064	2SD1227M-Q or 2SD1227M-R	C169,C170	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
	Diodes		C172	374721044	0.1 μ F $\pm$ 5%,50V,Plastic
D101	223163 or	1SS133 or	C801-C803	374721044	0.1 μ F $\pm$ 5%,50V,Plastic
D103-D106	223205	1SS270A	C809-C811	374721044	0.1 μ F $\pm$ 5%,50V,Plastic
D107,D108	224451102	MTZ11B	C817,C818	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
D801,D802	22380039	1D4B42	C819	393144717	470 μ F,16V,Elect.
D803,D804	223163 or	1SS133 or	C820	393142227	2200 μ F,16V,Elect.
D806	223205	1SS270A	C821,C822	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
	Coils		C823,C824	393121027	1000 μ F,6.3V,Elect.
L101	231023	NCH-1062	C825,C826	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
L102-L105	233411K220	NCH-1387	C827,C828	393152227	2200 μ F,25V,Elect.
L801	233411K220	NCH-1387	C831	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
	Capacitors		C832	393121027	1000 μ F,6.3V,Elect.
C101,C102	393122217	220 μ F,6.3V,Elect.	C834,C836	393384707	47 μ F,50V,Elect.
C103,C131	374724724	4700pF $\pm$ 5%,50V,Plastic	C837	393381097	0.1 μ F,50V,Elect.
C110	374721044	0.1 μ F $\pm$ 5%,50V,Plastic		Resistors	
C111	374724734	0.047 μ F $\pm$ 5%,50V,Plastic	R111	5210060	N06HR2.2KBD,Trim
C112,C126	374721034	0.01 μ F $\pm$ 5%,50V,Plastic	R115,R116	5210066	N06HR22KBD,Trim
C113	374726824	6800pF $\pm$ 5%,50V,Plastic	R118	5210066	N06HR22KBD,Trim
C114-C116	374721044	0.1 μ F $\pm$ 5%,50V,Plastic	R138	5210064	N06HR10KBD,Trim
C117	374722224	2200pF $\pm$ 5%,50V,Plastic	R139	5210001	N06HR100BD,Trim
C118	393381007	10 μ F,50V,Elect.	R812	442621804	18 ohm,1W,Metal oxide
C119,C150	374723334	0.033 μ F $\pm$ 5%,50V,Plastic		Sockets	
C120	374722734	0.027 μ F $\pm$ 5%,50V,Plastic	P101	25050969 or 25050861	NSCT-29P756 or NSCT-29P656
C121,C135	393122217	220 μ F,6.3V,Elect.		Plugs	
C122	374726834	0.068 μ F $\pm$ 5%,50V,Plastic	P102	25055139	NPLG-9P123
C123	393380227	2.2 μ F,50V,Elect.	P103	25055151	NPLG-7P135
C124	393380107	1 μ F,50V,Elect.	P104	25055150	NPLG-6P134
C125	393363307	33 μ F,35V,Elect.	P105	25055149	NPLG-5P133
C129,C134	374722734	0.027 μ F $\pm$ 5%,50V,Plastic	P106	25055038	NPLG-2P29
C130	374722234	0.022 μ F $\pm$ 5%,50V,Plastic	P107,P108	25055045	NPLG-4P33
C132,C133	374721034	0.01 μ F $\pm$ 5%,50V,Plastic		Switch	
C138,C139	374722734	0.027 μ F $\pm$ 5%,50V,Plastic	S101	250650364	NSS-12138
C140,C141	393122217	220 μ F,6.3V,Elect.		IC protectors	
C144,C145	374722734	0.027 μ F $\pm$ 5%,50V,Plastic	QF101,QF102	252112	Δ ICP-N15-0.6A (Except 120V model)
C146,C147	393122217	220 μ F,6.3V,Elect.		OUTPUT TERMINAL PC BOARD (NAAF-4746-1)	
C148,C149	374721034	0.01 μ F $\pm$ 5%,50V,Plastic	CIRCUIT NO.	PART NO.	DESCRIPTION
C151,C152	393144707	47 μ F,16V,Elect.	D401	223163 or 223205	1SS133 or 1SS270A,Diode
C153,C154	374722734	0.027 μ F $\pm$ 5%,50V,Plastic	RL403,RL404	25065469	NRL-2P1A-DC12-078,Relay
C155-C157	374721034	0.01 μ F $\pm$ 5%,50V,Plastic	C505-C508	373301014	100pF $\pm$ 5%,125V,Plastic capacitor
C158,C159	393164707	47 μ F,35V,Elect.	P402A	25050676	NSCT-8P480,Socket
			P403,P404	25050776	NSCT-3P571,Socket

REGULATOR CIRCUIT PC BOARD (NAPS-4747-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q902	222780055MIT	M5F78M05
Q919,Q920	222811	NJM4558D-D
	Transistors	
Q903	2201285	2SD882-Q
Q904	2201275	2SB772-Q
Q905,Q909	2214885 or	2SC3198-GR or
Q913,Q917	2214915	2PC1815-GR
Q906,Q910	2214895 or	2SA1266-GR or
Q914,Q918	2214905	2PA1015-GR
Q907,Q908	2211945	2SK246-GR
Q911	2201285	2SD882-Q
Q912	2201275	2SB772-Q
Q915,Q916	2211945	2SK246-GR
	Diodes	
D912	223163 or	1SS133 or
	223205	1SS270A
D913,D914	225251	TLR112,LED
D915,D916	224450512	MTZ5.1B
	Capacitors	
C931	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C932	393121027	1000 μ F,6.3V,Elect.
C933-C936	374722234	0.022 μ F $\pm$ 5%,50V,Plastic
C937,C938	374722224	2200pF $\pm$ 5%,50V,Plastic
C939,C940	393341007	10 μ F,16V,Elect.
C941,C942	393321017	100 μ F,6.3V,Elect.
C943,C944	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C945,C946	393122227	2200 μ F,6.3V,Elect.
C947-C950	374721034	0.01 μ F $\pm$ 5%,50V,Plastic
C951,C952	374721024	1000pF $\pm$ 5%,50V,Plastic
C953,C954	393341007	10 μ F,16V,Elect.
C955,C956	393321017	100 μ F,6.3V,Elect.
C957,C958	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C959,C960	393142227	2200 μ F,16V,Elect.
	Resistors	
R905,R906	452534794	0.47ohm,1/2W,Metal
R919,R920	452530224	2.2ohm,1/2W,Metal
	Sockets	
P905A	2002342215	NSAS-22P0214

DISPLAY CIRCUIT PC BOARD (NADIS-4748-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
	ICs	
Q701	22240521	CXP50116-330Q
Q703	22240322	LB1639
	FL tube	
Q702	212101	7-BT-151GK

CIRCUIT NO.	PART NO.	DESCRIPTION
	Transistors	
Q704	2212132 or	2SC2021-R or
	2212133	2SC2120-S
Q705	2213183 or	2SA937-Q or
	2213184	2SA937-R
	Diodes	
D701	22380032 or	1SR139-100 or
	22380035	GP104003E
D702,D705	223163 or	1SS133 or
	223205	1SS270A
D703	224450623	MTZ6.2C
D704	224450562	MTZ5.6B
	Coils	
L701-L704	233411K220	NCH-1387
	Resonator	
X701	3010188	CST4.50MGW,Ceramic
	Capacitors	
C702	393384707	47 μ F,50V,Elect.
C703,C707	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C706	393122217	220 μ F,6.3V,Elect.
	Resistor	
R717	49163472406	4.7kohm $\times$ 6,1/10W,Array
	Switches	
S701-S723	25035548	NPS-111-S510
	Sockets	
P701	25050969 or	NSCT-29P756 or
	25050861	NSCT-29P656
P702A	20012391410	NSAS-14P0221
	Holder	
	27190778A	Display
HEADPHONE AMPLIFIER PC BOARD (NAAF-4749-1)		
CIRCUIT NO.	PART NO.	DESCRIPTION
	IC	
Q603	222654	NJM4556D
	Transistors	
Q601	2211163 or	2SC2120-O or
	2211164	2SC2120-Y
Q602	2211503 or	2SA950-O or
	2211504	2SA950-Y
	Capacitors	
C601,C602	374722734	0.027 μ F $\pm$ 5%,50V,Plastic
C603,C604	393154717	470 μ F,25V,Elect.
	Resistors	
R601,R602	442522214	220ohm,1/2W,Metal oxide film
R609,R610	5142010	N16RGM20KB30F,Variable
	Socket	
P405A	2009990191	NSAS-12P0257
	Plug	
P702	25055151	NPLG-7P135