

ONKYO SERVICE MANUAL

QUARTZ SYNTHESIZED TUNER AMPLIFIER MODEL TX-80



Black model

BHUD, BHUDN	120V AC, 60Hz
BHUG	220V AC, 50Hz
BHUQA	240V AC, 50Hz
BHUW	120 or 220V AC, 50/60Hz

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ ON THE SCHEMATIC DIAGRAM AND IN THE PARTS LIST ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE THESE COMPONENTS WITH ONKYO PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL.

MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

TABLE OF CONTENTS

- Specifications 2
- Service procedures 3
- Exploded view 4
- Parts list 5
- Block diagram -120V model- 6
- Block diagram -220V model- 7
- Circuit description 8
- Adjustment procedures 12
- Pcb view/parts list
- Tone/Headphone terminal 15
- Display/Volume control 16
- FM/AM tuner 17
- Power amplifier 21
- Schematic diagram
- 120V model- 19
- 220V model- 23
- Packing view 25



SPECIFICATIONS

AMPLIFIER SECTION

Power output:	33 watts per channel,min RMS,at 8 ohms, both channels driven,from 40Hz to 20kHz, with no more than 0.3% THD.
Music Power Output:	2 ×74 watts at 4 ohms,1kHz (DIN) 2 ×54 watts at 8 ohms,1kHz (DIN)
Continuous Power Output:	2 ×42 watts at 4 ohms,1kHz (DIN) 2 ×35 watts at 8 ohms,1kHz (DIN)
Total Harmonic Distortion:	0.1% at 25W 0.1% at 1 watt output
IM Distortion:	0.1% at 25W 0.1% at 1 watt output
Damping Factor:	35 at 8 ohms
Frequency Response:	20-30,000Hz ± 1dB
RIAA Deviation:	20-20,000Hz ±0.8dB
Sensitivity and Impedance:	Phono: 2.5mV/50kohms CD/Tape Play: 150mV/50kohms Tape Rec: 150mV/3.5kohms (Phono)
Phono overload:	120mV RMS at 1kHz,0.3% THD
Signal-to-Noise Ratio:	Phono: 85dB(at 10mV input, A weighted) 75dB(IHF A-202) CD/Tape: 95dB(A weighted) 80dB(IHF A-202)
Tone Controls:	Bass: ± 10dB at 100Hz Treble ± 10dB at 10kHz
Loudness(-30dB):	+7dB at 70Hz, +5dB at 10kHz

TUNER SECTION

FM:

	-G/W/Q models-	-120V model-
Tuning Range:	87.50-108.00MHz(50kHz steps)	87.5-108.0MHz(100kHz steps)
Usable Sensitivity:	Mono: 12.4dBf, 2.3μV, IHF 1.2 μV, 75 ohms DIN Stereo: 2.5 μV,75 ohms	Mono: 12.4dBf, 2.3μV Stereo: 19.2dBf, 5.0μV
50dB Quieting Sensitivity:	Mono: 2.2 μV,75 ohms Stereo: 22μV,75 ohms	Mono: 18.2dBf, 4.5μV Stereo: 38.2dBf, 45 μV
Capture Ratio:	1.5dB	1.5dB
Image Rejection Ratio:	80dB	40dB
IF Rejection Ratio:	90dB	90dB
Signal-to-Noise Ratio:	Mono: 70dB Stereo: 65dB	Mono: 70dB Stereo: 65dB
Selectivity:	50dB DIN (±300kHz,40kHz Devi.)	55dB
ACA:		50dB
AM Suppression Ratio:	50dB	
Harmonic Distortion:	Mono: 0.15% Stereo: 0.30%	Mono: 0.15% Stereo: 0.30%
Frequency Response:	30-15,000Hz ±1.5dB	30-15,000Hz ±1.5dB
Stereo Separation:	40dB at 1kHz 30dB at 100-10,000Hz	40dB at 1kHz 30dB at 100-10,000Hz
Muting level:	17.2dBf, 2μV	17.2dBf, 4μV
Stereo Threshold:	17.2dBf, 2μV	17.2dBf, 4μV

AM:

Tuning Range:	522-1,611kHz(9kHz steps)	520-1,710kHz(10kHz steps)
Usable Sensitivity:	30μV	30μV
Image Rejection Ratio:	40dB	40dB
IF Rejection Ratio:	30dB	30dB
Signal-to-Noise Ratio:	40dB	40dB
Harmonic Distortion:	0.8%	0.8%
Dimensions(W×H×D):	435 ×97×317mm 17-1/8" ×3-15/16"×12-1/2"	435 ×97×317mm 17-1/8" ×3-15/16"×12-1/2"
Weight:	5.7kg.,12.6lbs.	5.7kg.,12.6lbs.

Specifications and features are subject to change without notice.

SERVICE PROCEDURES

1.Replacing the fuses

For continued protection against fire hazard,replace only with same type and same rating fuse.

D (120V) model

Circuit no.	Part no.	Description
F501,F601	252059	4A(SS-2),Speaker protection
F901	252048	3A(ST-6),Primary

G (220V) and Q (240V) models

Circuit no.	Part no.	Description
F501,F601	252075	2.5A-SE-EAK,Speaker protection
F902	252073	1.6A-SE-EAK,Primary
F903,F904	252077	4A-SE-EAK,Secondary
F905	252070	1A-SE-EAK,Secondary

W (Worldwide) model

Circuit no.	Part no.	Description
F501,F601	252059	4A(SS-2),Speaker protection
F901	252048	3A(ST-6),Primary
F902	252073	1.6A-SE-EAK,Primary

2.Safety-check out

(Only U.S.A. model)

After correcting the original service problem,perform the following safety check before releasing the set to the customer.

Connect the insulating-resistance tester between the plug of power supply cord and nickel screw on the back panel.

Specifications: 3.3Mohm \pm 10% at 500V.

3.Step band selector switch

Worldwide models are equipped with a step band selector switch. This switch is located on the back panel. This switch is set to 50kHz (FM) and 9kHz (AM) at the factory, but may have to be reset to 100kHz and 10kHz depending on the area where the unit is used.

De-emphasis	FM step	AM step
Europe: 50 μ sec	50kHz	9kHz
U.S.A.: 75 μ sec	100kHz	10kHz


4.Change of voltage

Worldwide models are equipped with a voltage selector to conform with local power supplies. This switch is located on the back panel. Be sure to set this switch to match the voltage of the power supply in your area before turning the power switch on.

This switch is set to 220V at the factory. Voltage is changed by sliding the groove in the switch with the screwdriver to the right or left. Confirm that the switch has been moved all the way to the right or left before turning the power switch on.


5.Memory preservation

This unit does not require memory preservation batteries. A built-in memory power back-up system preserves contents of the memory during power failures and even when the unit is unplugged. The unit must be plugged in and the power switch turned on and off once in order to charge the back-up system. Note that since this is not a permanent memory,the power switch must be turned on and off a few times each month to keep the back-up system operative. The period of time during which memory contents are preserved after power has last been turned off varies depending on climate and placement of the unit. On the average, memory contents are protected over a period of 3 to 4 weeks (a minimum of 2 weeks) after the last time power has been turned off. This period is shorter when the unit is exposed to very high humidity or used in an area with an extremely humid climate.

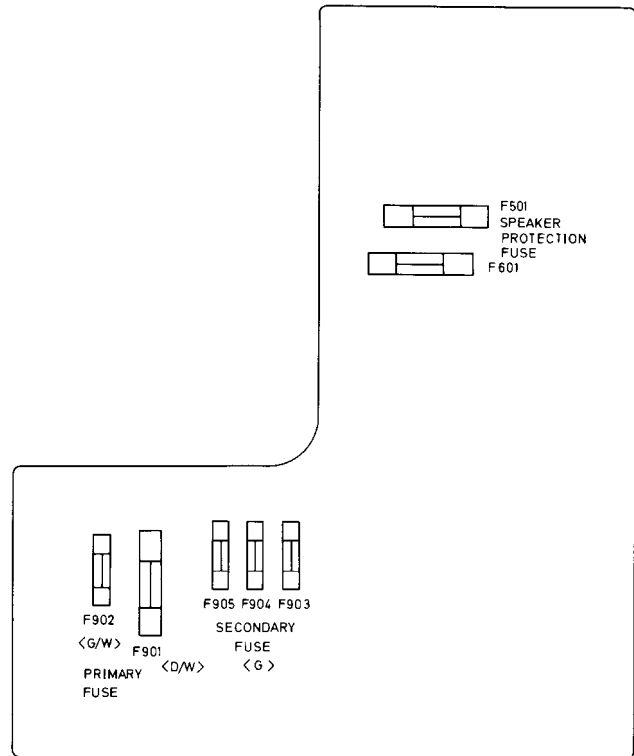

<fig.1>

EXPLODED VIEW

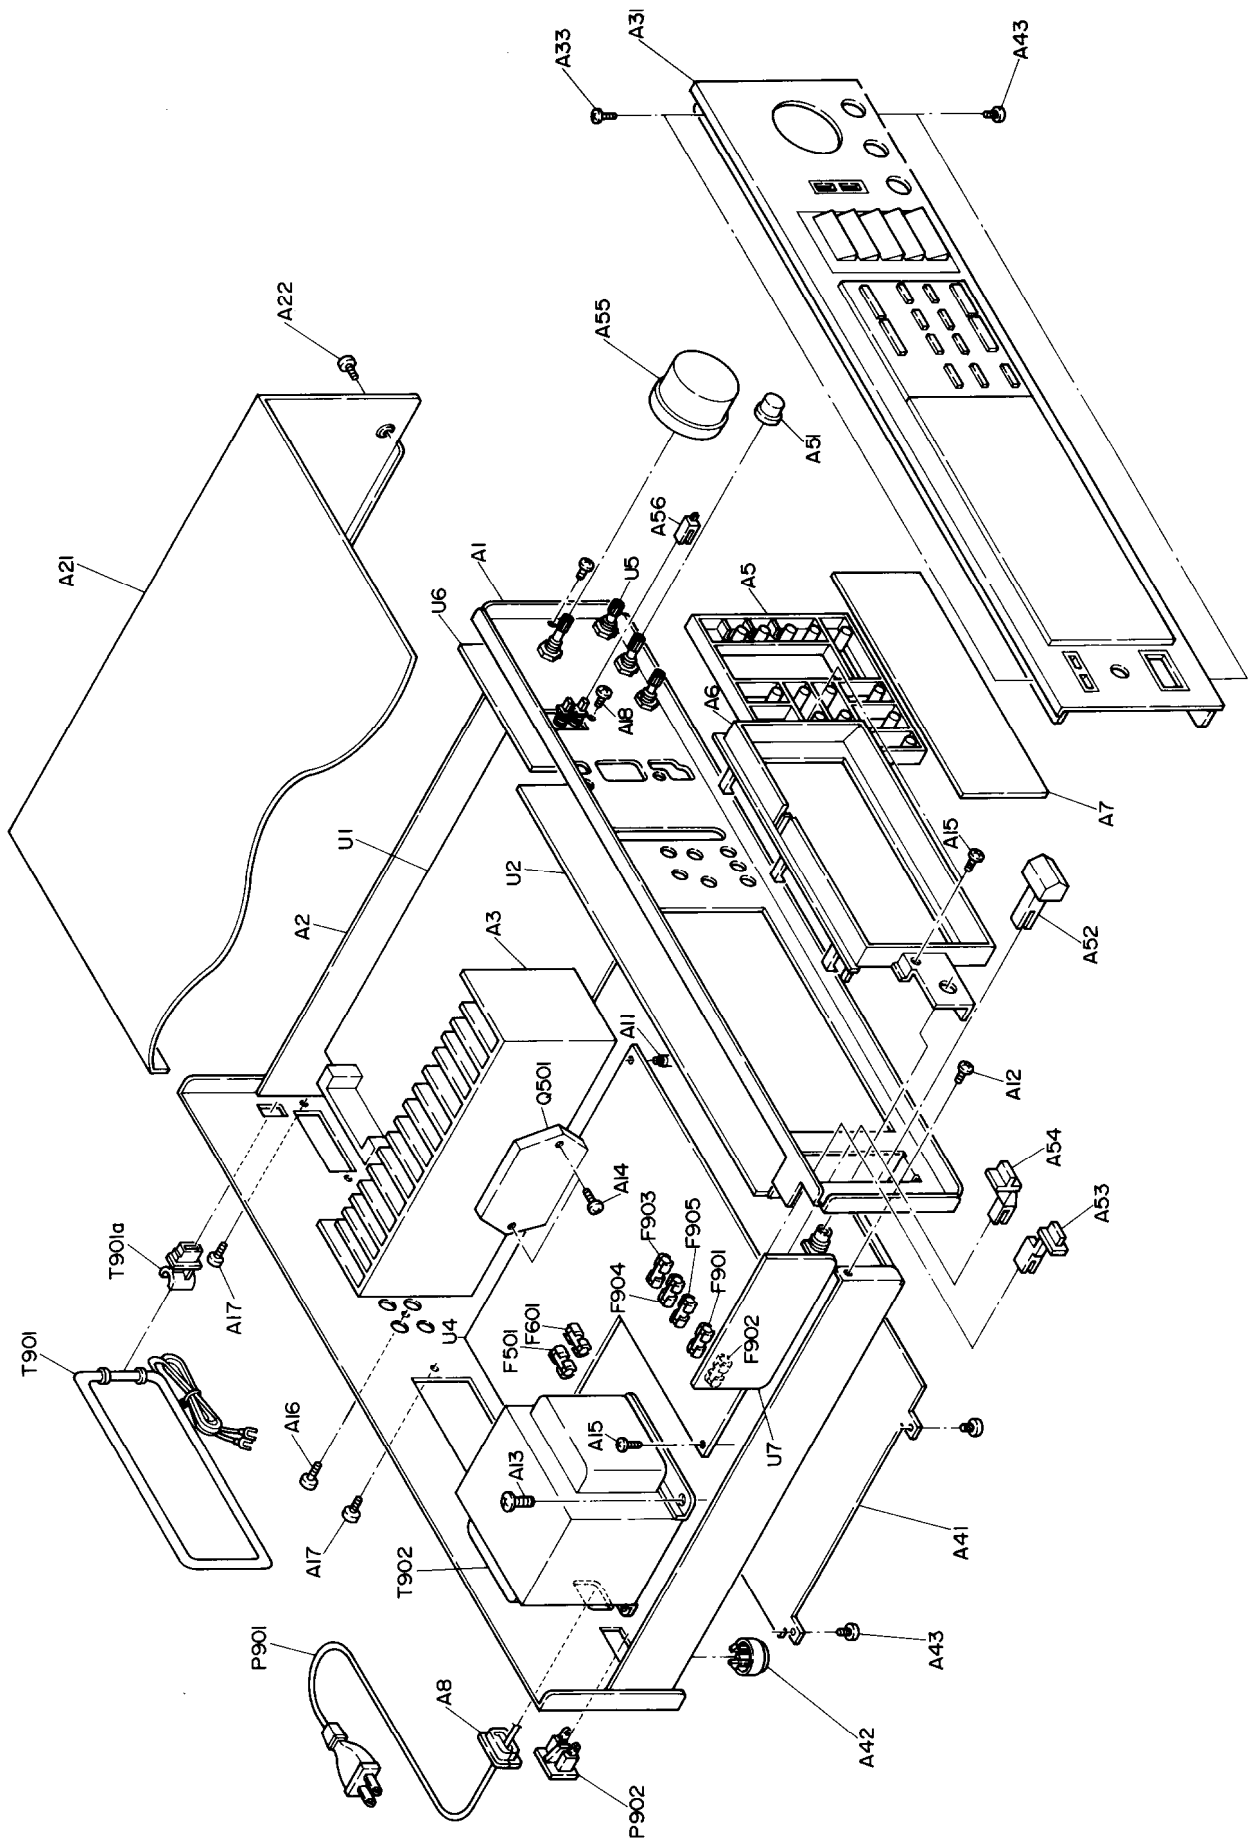

PARTS LIST


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
A1	27110273A	Front bracket	U1	18668592-1	NARF-2592-1, FM/AM tuner pc board
A2	27100125	Chassis <D>			assy <D>
	27100126	Chassis <G>		18664592-1A	NARF-2592-1A, FM/AM tuner pc board
	27100127	Chassis <W>			assy <G/Q>
	27100136	Chassis <Q>		18660592-1B	NARF-2592-1B, FM/AM tuner pc board
A3	27160183	Radiator			assy <W>
A5	28322486A	Holder, Knob	U2	18668593-1	NADIS-2593-1, Display circuit pc board
A6	2719345B	Holder			assy <D>
A7	28133161-1	Back palte		18664593-1A	NADIS-2593-1A, Display circuit pc board
A8	27300750	Strainrelief			board assy <G/Q>
A11	27190266	Holder		18660593-1B	NADIS-2593-1B, Display circuit pc board
A12	834430088	3TTS+8B(BC), Tapping screw	U3	18660594-1	NASW-2594-1, Band selector switch pc board assy <W>
A13	830440089	4TTC+8C(BC), Tapping screw			board assy <W>
A14	834430168	3TTS+16B(BC), Tapping screw	U4	18668595-1	NAAF-2595-1, Pri. and main amplifier pc board assy <D>
A15	831130088	3TTW+8B, Tapping screw			pc board assy <D>
A16	834230108	3TTS+10B(Ni), Nickel screw		18664595-1A	NAAF-2595-1A, Pri. and main amplifier pc board assy <G/Q>
A17	834430108	3TTS+10B(BC), Tapping screw			pc board assy <G/Q>
A18	82143006	3P+6FN(BC), Pan head screw	U5	18668596-1	NATC-2596-1, Tone control circuit pc board assy
A19	82143006	3P+6FN(BC), Pan head screw <W>			board assy
A20	82142604	2.6P+4F(BC), Pan head screw <W>	U6	18668597-1	NAVR-2597-1, Volume control pc board
A21	28184268-1	Top cover			assy
A22	834430068	3TTS+6B(BC), Tapping screw	U7	18668598-1	NAHP-2598-1, Headphone terminal pc board assy <G/W/Q>
A31	1A003121	Front panel assy			board assy <G/W/Q>
A33	838430068	3TTB+6B(BC), Tapping screw		18678598-1A	NAHP-2598-1A, Headphone terminal pc board assy <D>
A41	27170223	Bottom board			
A42	27175142	Leg			
A43	834430068	3TTS+6B(BC), Tapping screw			

NOTE: THE COMPONENTS IDENTIFIED BY MARK Δ ARE CRITICAL FOR RISK OF FIRE AND ELECTRIC SHOCK. REPLACE ONLY WITH PART NUMBERS SPECIFIED.

<D>: Only 120V model
 <G>: Only 220V model
 <W>: Only Worldwide model
 <Q>: Only 240V model


BLOCK DIAGRAM

-120V model-

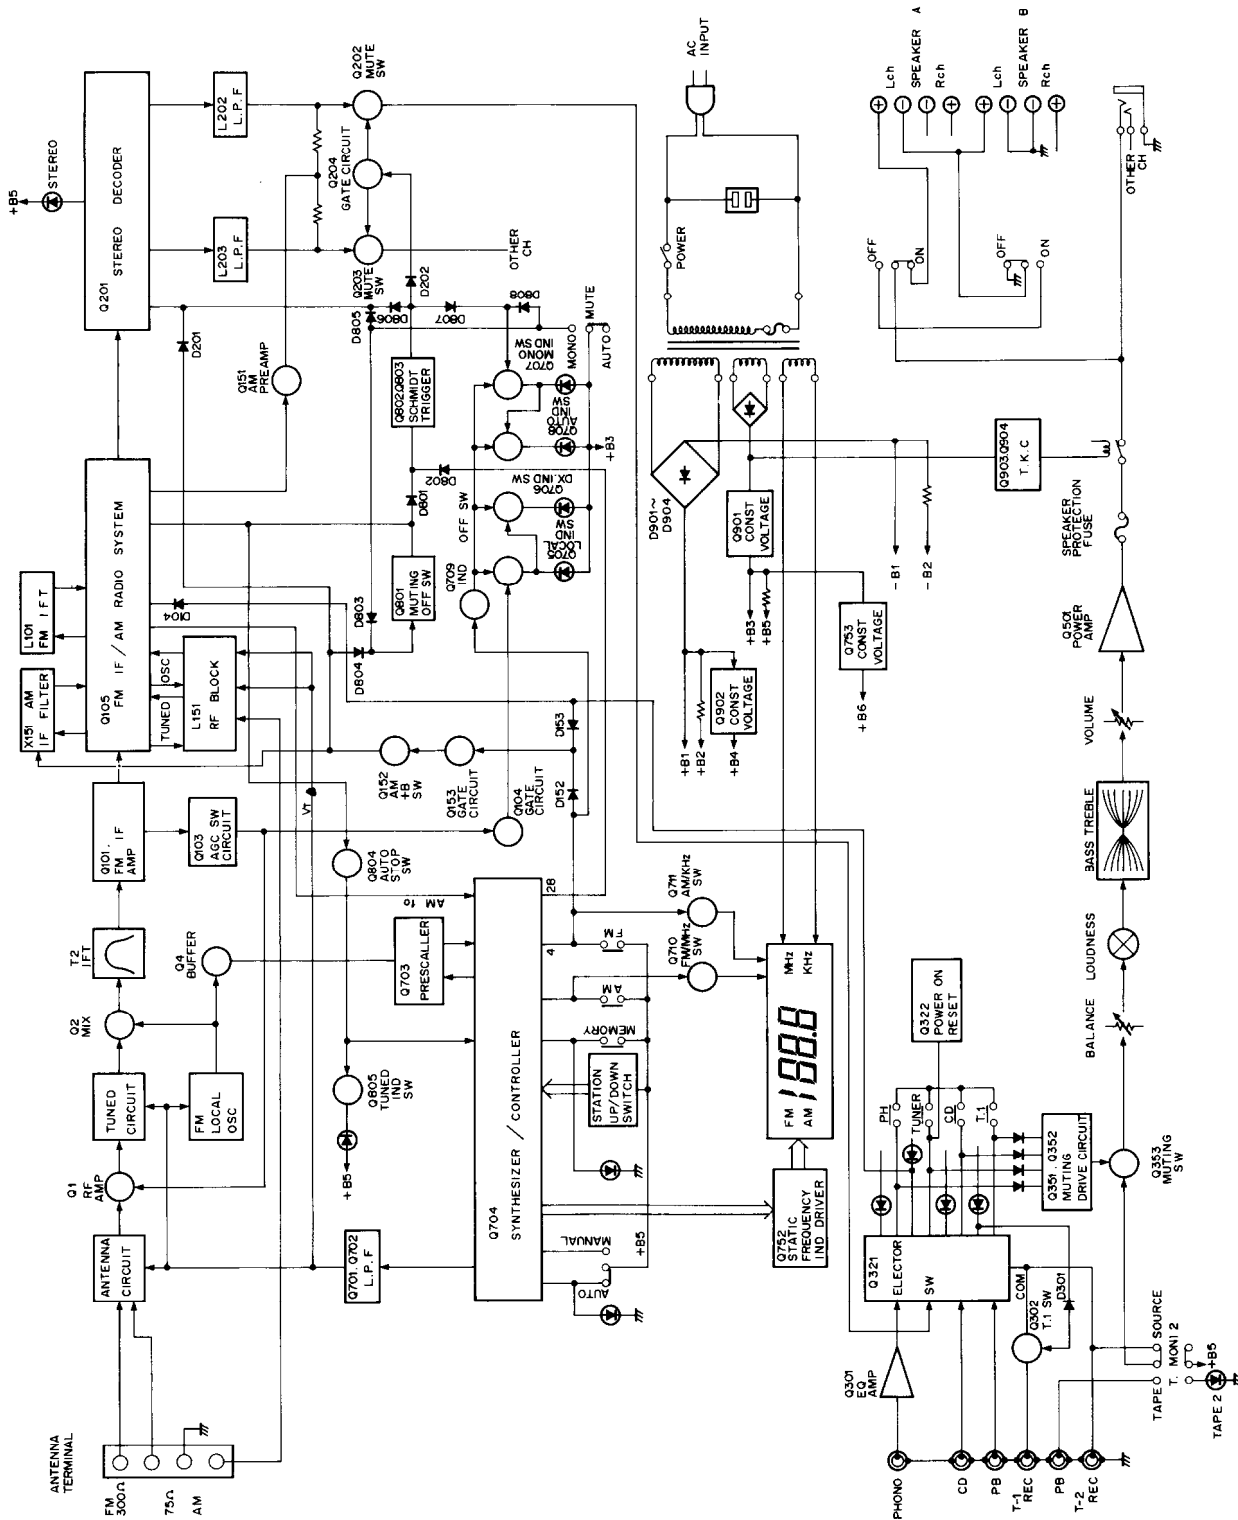

BLOCK DIAGRAM

-220/240V models-

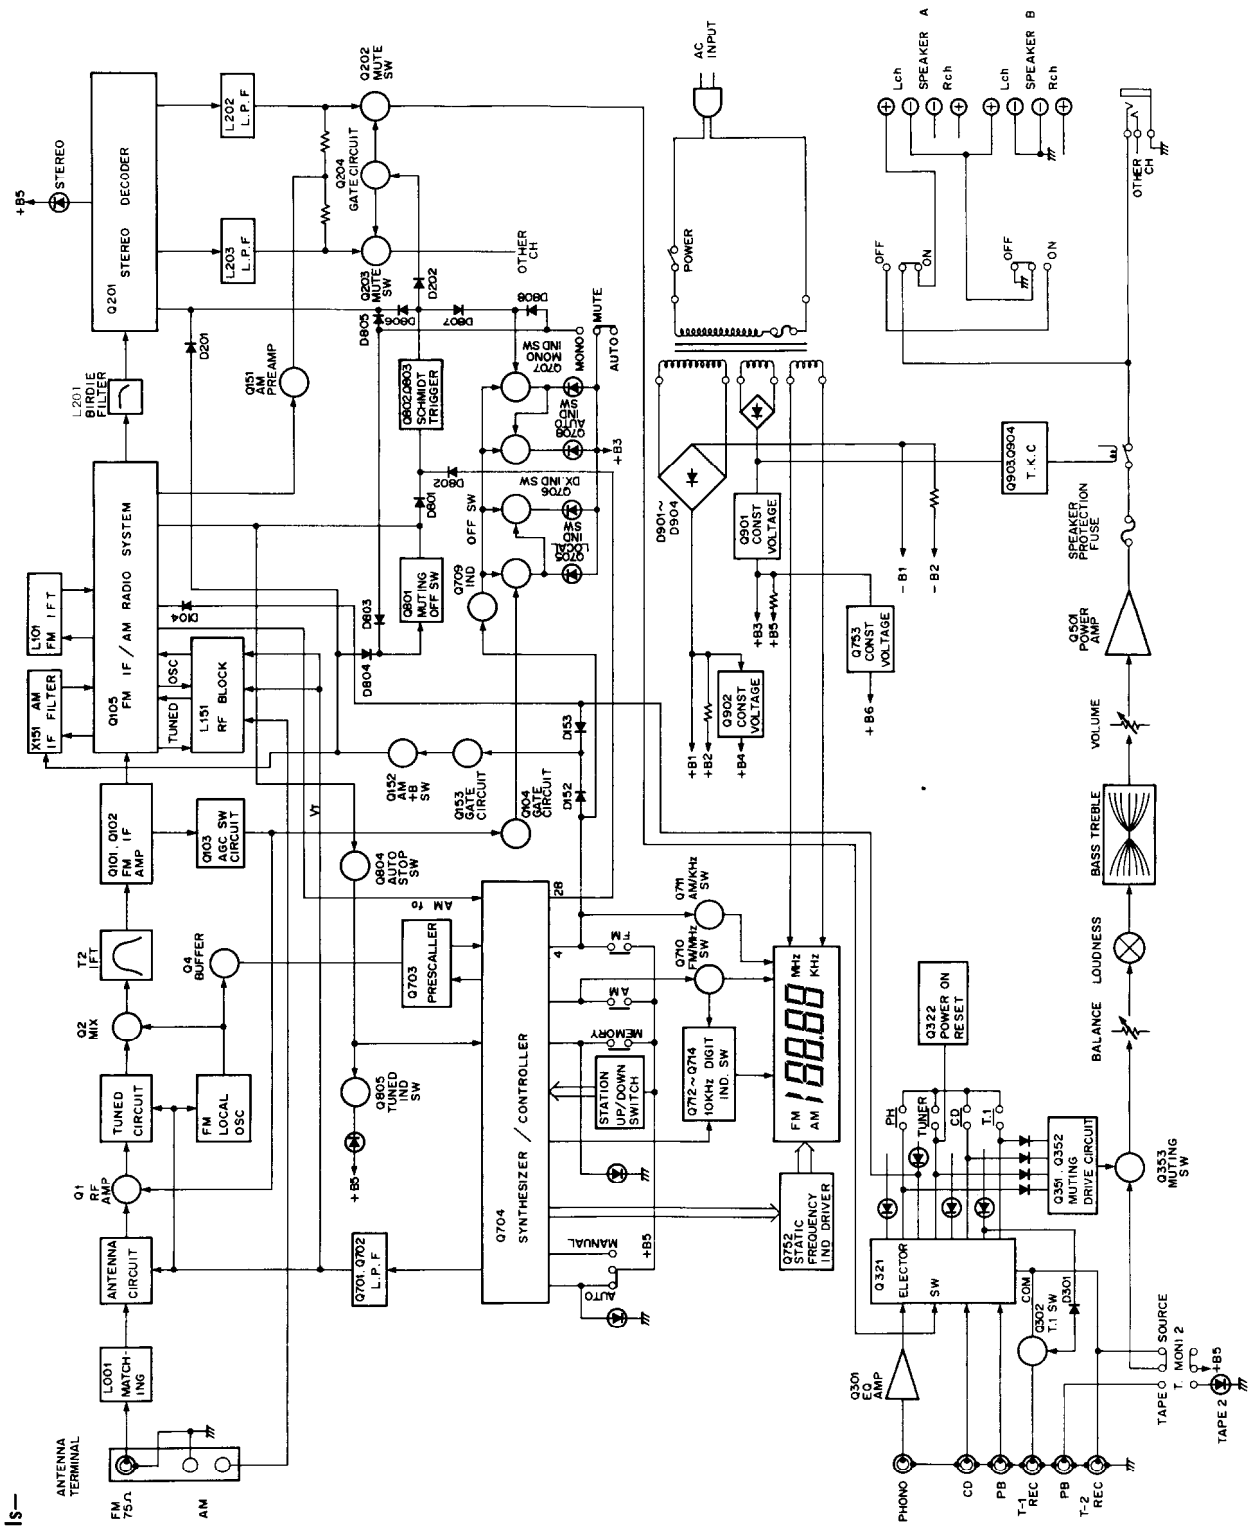

CIRCUIT DESCRIPTIONS


1.Synthesizer and controller operation

Pin No.	Symbol	Terminal	Description
1	GND	Ground	
2	XT	X'tal	Connected to the 7.2MHz crystal oscillator for the reference frequency.
3	XT		
4	FM	FM band specification input	Mutual reset type,performs switching of each band,FM/MW/LW.
5	MW	MW band specification input	
6	LW	LW band specification input	
7	MANUAL	Manual tuning mode specification input	Mutual reset type,performs auto search and manual operation mode switching during UP/DOWN tuning.
8	AUTO	Auto search tuning mode specification input	
9	UP	UP tuning key input	Connect the push key and perform UP/DOWN tuning.
10	DOWN	DOWN tuning key input	
11	STO	Memory store command input	The preset memory is set to the write mode when the key is pressed.
12~19	M1~M8	Preset memory channel specification input	Controls the write and read out of the internal 16-station preset memory along with the MC1 and MC2 input.
20	MC-1	Memory control input	Set the 16-station preset memory to the 8 FM/8 AM station mode or the FM/AM 2-band 16-station random mode.The 16-station random mode is used in this unit.
21	MC-2		
22	OSC2	AM oscillator terminal	CR connection terminal for the oscillator that determines the scan speed during the AM search mode.
23	OSC1	FM oscillator terminal	CR connection terminal for the oscillator that determines the scan speed during the FM search mode.
24	0/5	FM 50kHz output	Output that represents the 50kHz FM band tuning step for European models. Goes to the high level for the 50kHz setting.
25	CK2	Tuned frequency data output	Outputs the serial data and timing clock to the tuned frequency display driver.
26	CK1		
27	DATA		
28	MUTE	Muting signal output	Goes to the high level during muting output.
29	E2	Region specification	See table 1.
30	E1	input	
31	STOP 3	AM IF signal input	During AM reception, this counts the IF signal and stops auto search.
32	STOP 2	Auto search stop signal input	When the stop 1 input (pin 33) is at the high level and this terminal goes to the high level, auto search is stopped.
33	STOP 1	Scan speed slow input	When the high level is input at this terminal, the auto search speed is cut in half.


Pin No.	Symbol	Terminal	Description
34	DO 1	Error output	Charge pump output of the phase detector which constitutes the PLL. High level is output when the divided oscillation frequency is high than the reference frequency. In the opposite case, low level is output. Floating occurs when the frequencies match. The output is applied to the variable capacitor diode in the front end through low pass filter Q701 and Q702. The output from both terminals is the same, but only DO1 is used.
35	DO 2		
36	TEST	Test terminal	Test mode at the high level.
37	FM IN	FM programmable counter input	Connect to the prescaler output (pin 3 of Q703)
38	PSC	Pulse swallow control output	Output to the control the division ratio of the prescaler.
39	AM IN	AM local oscillator signal input	Terminal for input of AM local oscillator signal.
40	INH	Inhibit input	Operates normally at the high level. Inhibit status at the low level.
41	INT	Initialize input	Operates normally at the high level. At the low level, the internal status is initialized.
42	Vdd	Power supply	Device power terminal: supplies 5V during the normal operation and 2.5V from the super capacitor (C715) for the memory preservation.

Table 1

E1 (Pin 30)	E2 (Pin 29)	Region	Band	Frequency range	Intermediate Frequency	Scan step	Reference Frequency
0	1	U.S.A	FM	87.5 ~ 108.0 MHz	+10.7 MHz	100 kHz	25 kHz
			AM 1	520 ~ 1710 kHz	+450 kHz	10 kHz	10 kHz
1	1		AM 2	522 ~ 1710 kHz	+450 kHz	9 kHz	9 kHz
1	0	Europe	FM	87.50 ~ 108.00 MHz	+10.7 MHz	50 kHz	25 kHz
			MW	522 ~ 1611 kHz	+450 kHz	9 kHz	9 kHz
			LW	153 ~ 360 kHz	+450 kHz	1 kHz	1 kHz
0	0	Japan	FM	76.0 ~ 90.0 MHz	-10.7 MHz	100 kHz	25 kHz
			AM	522 ~ 1611 kHz	+450 kHz	9 kHz	9 kHz

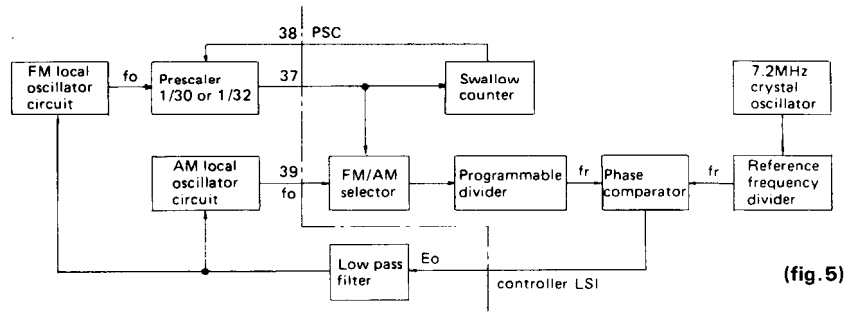

(fig. 5)

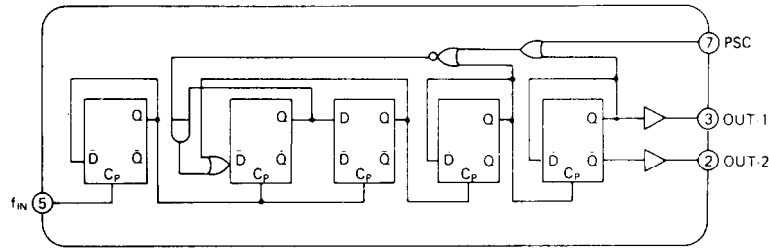

TD6104P (Prescaler)

A block diagram of the tuned of the PLL is shown in fig. 5.

Operation during AM reception

The reception frequency is applied to the programmable divider where it is divided to $1/N$ and output as f_v . This is applied to the phase comparator where it is compared with frequency reference f_r (9kHz for G/W models and 10kHz for D model). If f_r and f_v differ, E_o equal to the difference in frequency is output. Since error output E_o is a pulse waveform, it is passed through the low pass filter to change it into DC voltage V_d , which is applied to the variable capacitor diode in the front end to change the reception frequency. This continues until f_v and f_r are the same and $E_o=0$.

Operation during FM reception


The pulse swallow method is used in the prescaler of this unit. In this type of prescaler, a supplementary number

(changed according to the program code input) and the divided reception frequency from the prescaler are combined in the control counter and the prescaler's division factor is switched $1/30$ or $1/32$ according to external control ($1/32$ when the PSC terminal is "H" and $1/30$ when it is "L").

The station oscillator frequency is applied to the programmable divider, but the programmable divider has an upper frequency limit of only 30MHz, so the pulse swallow-type prescaler, which can be used up to 150MHz, is inserted for division to $1/N_p$;

The signal is applied to the programmable divider and divided to $1/N$. The result is compared with a 25kHz frequency reference in the phase detector and error is output as E_o until a match is obtained as in AM operation.

3. Frequency indicator circuit

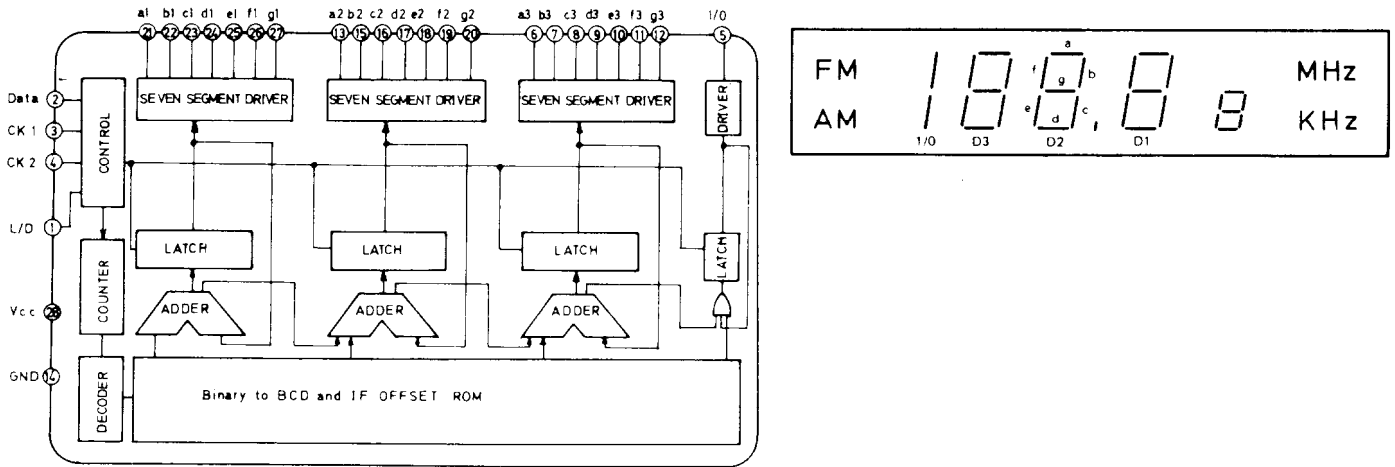

TD6301AP block diagram


Pin No.	Terminal	Description
1	L/D	Output indication switching input terminal:Fluorescent display at the low level,and LED display at the high level.
2	Data	Tuned frequency data input terminal:Input from the system controller LSI to the serial.
3,4	CK1 CK2	Tuned frequency data input control timing input terminal: Transferred simultaneously with data from the system controller LSI.
5	I/O	Segment drive output terminal:Sets the number of display digit for FM(100MHz) and AM(1000kHz) reception.
6-12	a3-g3	Seven segment drive output terminal:Sets the number of display digit for FM(10MHz) and AM(100kHz) reception.
13, 15-20	a2-g2	Seven segment drive output terminal:Sets the number of display digit for FM(1MHz) and AM(10kHz) reception.
21-27	a1-g1	Seven segment drive output terminal:Sets the number of display digit for FM(100kHz) and AM(1kHz) reception.
14	Vcc	Power source terminal
28	Gnd	Ground

ADJUSTMENT PROCEDURES

FM section

Item	Step	Connection of instrument	FM SG output	Stereo modulator output	Tuning frequency	Output indicator	Adjustment point	Adjust for	Remarks
Front end	1	Fig.1	—	—	88.0MHz	Digital DC voltmeter	T1(L5)	1.5V ± 0.4V	Usually not necessary to adjust.
	2		107.9MHz 1kHz, 75kHz devi.	—	107.9MHz	AC voltmeter	TC1, TC2(G) TC1(D)	Maximum output	
I F	1	Fig.2	99.0MHz 1kHz, 75kHz devi. 65dBf(60dB)	—	99.0MHz	DC voltmeter	L101 Primary	0V	Set the muting switch to OFF. Repeat the steps 1 and 2 until no further adjustment is necessary.
	2		—	—	99.0MHz	Distortion analyzer	L101 Secondary	Minimum	
V C O		Fig.3	99.0MHz 1kHz, 75kHz devi. 65dBf(60dB)	—	99.0MHz	Frequency counter	R215	19kHz ± 10Hz	Set the muting switch to ON.
Stereo distortion		Fig.3	99.0MHz Ext. modulation 65dBf(60dB)	L+R 1kHz 67.5kHz devi.	99.0MHz	Distortion analyzer	T2	Minimum	
		Fig.3	99.0MHz Ext. modulation 65dBf(60dB)	Lch. 1kHz Rch. 1kHz	99.0MHz	Rch. AC voltmeter Lch. AC voltmeter	R205	Minimum Minimum	Maximum and same separation
Tuning indicator level	1	Fig.2	99.0MHz 1kHz, 75kHz devi. 29.2dBf(24dB)	—	99.0MHz	Tuning indicator	R156	Light on	
	2		99.0MHz 1kHz, 75kHz devi. 28.2dBf(23dB)	—	99.0MHz	—		Light off	

Note: (G):220V model (D):120V and Worldwide models

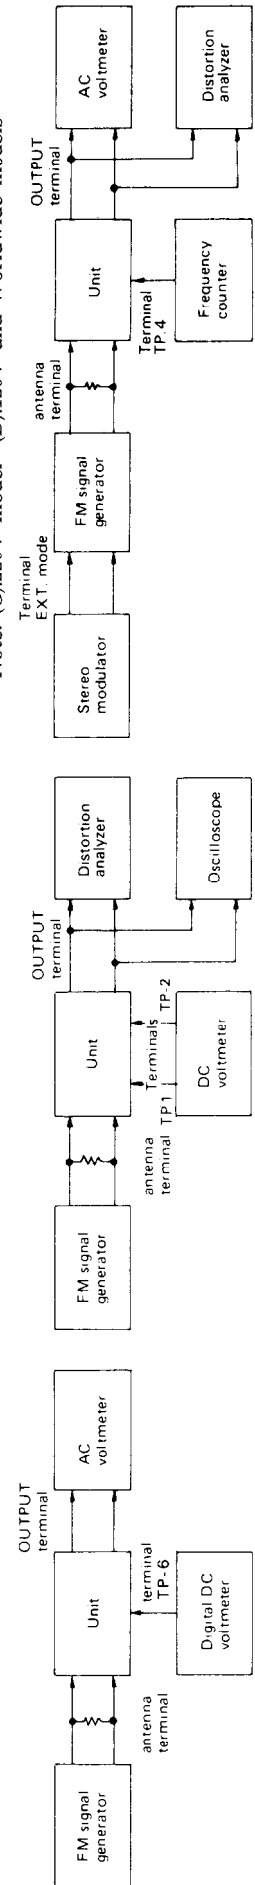


<Fig.1>

<Fig.2>


<Fig.3>

AM section

Step	AM SG output	Tuning Frequency	Output indicator	Adjustment point	Adjust for	Remarks
1	—	522kHz (520kHz)	Digital DC voltmeter	L151 OSC	1.2V ± 0.1V	Usually not necessary to adjust.
2	603kHz, 60dB/m (600kHz) 400Hz 30% mod.	603kHz (600kHz)	A C voltmeter	L151 R F	Maximum	Repeat the steps 2 and 3 until no further adjustment is necessary.
3	1404kHz, 60dB/m (1400kHz) 400Hz 30% mod.	1404kHz (1400kHz)	voltmeter	L151 T C	Maximum	
4	999kHz, 30dB/m (1000kHz) 400Hz 30% mod.	999kHz (1000kHz)	A C voltmeter	X151	Maximum	
5	999kHz, 30dB/m (1000kHz) 400Hz 30% mod.	999kHz (1000kHz)	TUNED indicator	R154	Light on	

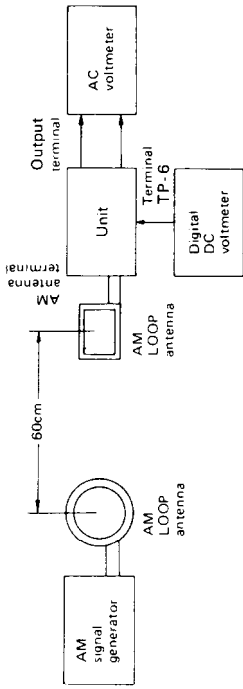


Note: () :120V model <10kHz step>

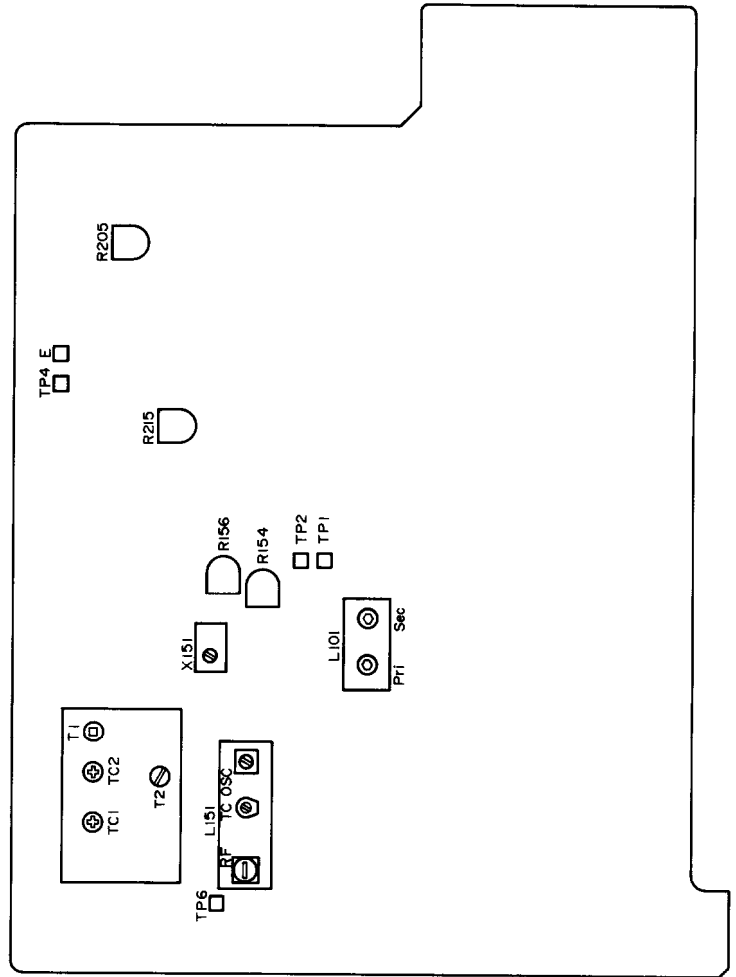


BLOCK DIAGRAM OF IC


μPC1161C3(Stereo decoder)

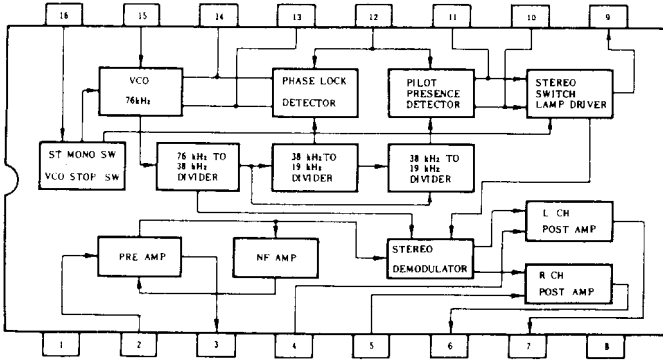

LA1265(AM radio/FM IF system)

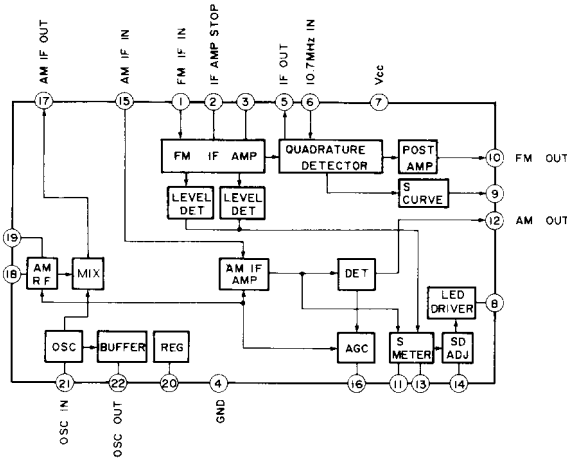


LC7816(Analog switch)

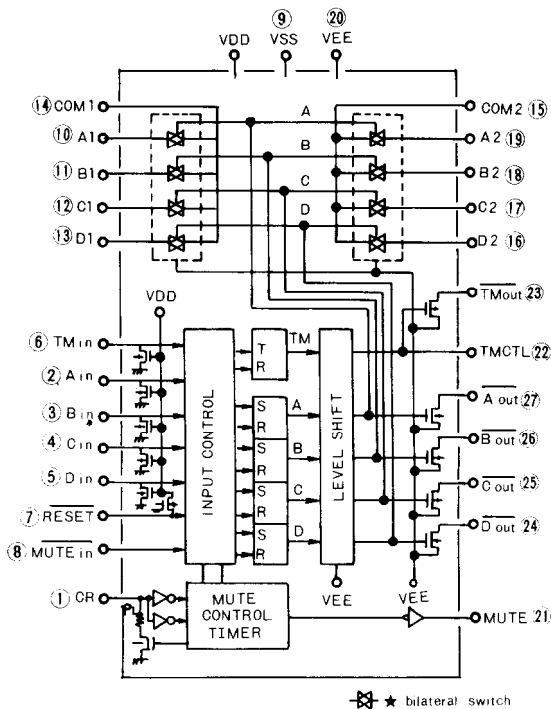


⊗ ★ bilateral switch

STK-4151V(Power amplifier)

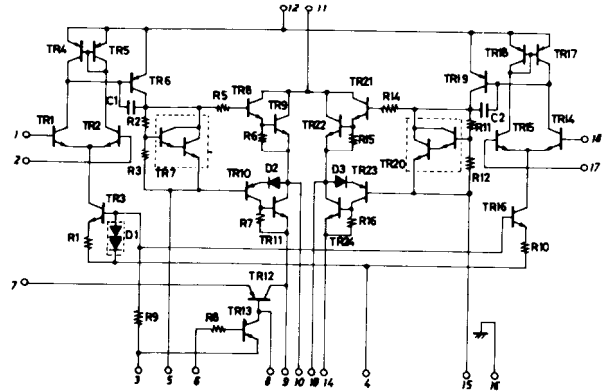

NJM4558/4559(Operational amplifier)

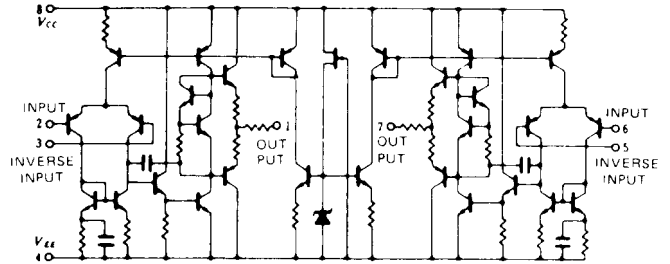

PRINTED CIRCUIT BOARD-PARTS LIST

HEADPHONE TERMINAL PC BOARD(NAHP-2598-1/1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
R551,R661	441522714	270ohm,1/2W,Metal oxide film resistor
S501,S502	25035517	NPS-222-L479,Push switch,Speaker
P502	25045184	HLJ-0520-01-010,Headphone terminal <G/W>
	25045193	HLJ-0521-01-010,Headphone terminal <D>

TONE CONTROL PC BOARD(NATC-2596-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
Transistors		
Q351	2211255,	2SC1815(GR),
	2210746 or	2SC945A(P) or
	2212485	JC501(Q)
Q352	2211455,	2SA1015(GR),
	2210803 or	2SA733(P) or
	2212495	JA101(Q)
Q353,Q354	2212285 or	2SC2878(A) or
	2212286	2SC2878(B)
Capacitors		
C361	352780109	1 μ F,50V,Elect.
C362,C462	352781099	0.1 μ F,50V,Elect.
Resistors		
R352	5146049	N16RLC250KWT30,Variable,Balance
R353,R453	5148073	N16RQMC110K180K30,Variable,Bass
R357,R457	5148102	N16RGMC219K30,Variable,Treble

DISPLAY PC BOARD(NADIS-2593-1/1A)

CIRCUIT NO.	PART NO.	DESCRIPTION
Fluorescent tube		
Q751	212016	FIP7B8CS
IC		
Q752	222673	TD6301AP
Transistor		
Q753	2211455, 2210803 or 2212495	2SA1015(GR), 2SA733(P) or JA101(Q)
L.E.Ds		
D341-D344	225137CG,	SEL2413ECG,
D751,D753	225137DG or	SEL2413EDG or
D754,D757	225137DY	SEL2413EDY
D345,D755	225142	SEL2913K
D756	225142	SEL2913K
D752,D758	225141	SEL2213C
Diodes		
D346-D348	223150,	US1040,
D759	223124 or 223145	1S2473 or 1S2076TD
D760,D761	223150, 223124 or 223145	US1040, 1S2473 or 1S2076TD <G/W>
D762	2243192 or 2239552	MTZ8.2A or RD8.2E-B2
Capacitor		
C751	352741009	10 μ F,16V,Elect.
Resistors		
R341,R342	441522024	2kohm,1/2W,Metal oxide film
R343	441628214	820ohm,1/2W,Metal oxide film
R757-R765	49121333409	33kohm \times 9,1/8W,Network
R766-R778	49121333413	33kohm \times 13,1/8W,Network
Switches		
S321-S324	25035389	NPS-111-S353
S325	25035515	NPS-142-L477
S751-S763	25035389	NPS-111-S353
Holder		
	27190434	L.E.D
Cushion		
	28140593	3.5 \times 10 \times 40mm

BAND SELECTOR SWITCH PC BOARD(NASW-2594-1)

Only Worldwide model

CIRCUIT NO.	PART NO.	DESCRIPTION
S371	25065267	NSS-22109,Slide switch

NOTE: <D>:Only 120V model
<G>:Only 220V and 240V models
<W>:Only worldwide model

VOLUME CONTROL PC BOARD(NAVR-2597-1)

CIRCUIT NO.	PART NO.	DESCRIPTION
R371,R471	5104180	N16RGH100KBT30,Variable resistor, Volume
S351,S352	25035520	NPS-222-L482,Push switch

PRINTED CIRCUIT BOARD-PARTS LIST

FM/AM TUNER PC BOARD(NARF-2592-1/1A/1B)

CIRCUIT NO.	PART NO.	DESCRIPTION	CIRCUIT NO.	PART NO.	DESCRIPTION
	Front end			Ceramic filters	
TU001	240061	FE349U14 <D/W>	X101,X102	3010071	SFE10.7MA5 <D/W>
	240059	FE416U33 <G>	X101	3010070	SFE10.7MS3GYA <G>
	ICs		X102	3010043	SFE10.7MM <G>
Q105	222912	LA-1265	X151	3010075	SFL450B3
Q201	222678	μ PC1161C3	X152	3010076	BFU450C
Q301,Q401	222502 or	NJM4558DX or		Capacitors	
	222534	NJM4559DX	C002	352780339	3.3 μ F,50V,Elect.
Q321	222923	LC7816	C107	352742209	22 μ F,16V,Elect.
Q703	222675	TD6104P	C108	352784799	0.47 μ F,50V,Elect.
Q704	222674	TC9147BP	C111	352741009	10 μ F,16V,Elect.
	Transistors		C112	352780229	2.2 μ F,50V,Elect.
Q101	2211722 or	2SC1923(R) or	C116	352782299	0.22 μ F,50V,Elect.
	2211723	2SC1923(O)	C152,C155	352741009	10 μ F,16V,Elect.
Q102	2210746	2SC945A(P) <G>	C156	352750479	4.7 μ F,25V,Elect.
Q103,Q104	2211255,	2SC1815(GR)	C157	352741009	10 μ F,16V,Elect.
Q152	2210746 or	2SC945A(P) or	C159	352780109	1 μ F,50V,Elect.
	2212485	JC501(Q)	C161	352780229	2.2 μ F,50V,Elect.
Q151,Q153	2211256	2SC1815(BL)	C162	352721019	100 μ F, 6.3V,Elect.
Q202,Q203	2212794,	2SD1468(R),	C201	352750479	4.7 μ F,25V,Elect.
	2211705 or	2SD655(E) or	C202	352744719	470 μ F,16V,Elect.
	2211706	2SD655(F)	C206,C207	352741009	10 μ F,16V,Elect.
Q204,Q322	2211455,	2SA1015(GR),	C208,C209	352780109	1 μ F,50V,Elect.
	2210803 or	2SA733(P) or	C210	352782299	0.22 μ F,50V,Elect.
	2212495	JA101(Q)	C212	352780339	3.3 μ F,50V,Elect.
Q302,Q402	2211945	2SK246(GR)	C213	352780109	1 μ F,50V,Elect.
Q701	2211255	2SC1815(GR)	C214	370134714	470pF \pm 5%,100V.APS
Q702	2212294 or	2SK108(D) or	C302	352780229	2.2 μ F,50V,Elect.
	2211293	2SK68(M)	C304	352721019	100 μ F, 6.3V,Elect.
Q705,Q707	2211255,	2SC1815(GR),	C308	352780229	2.2 μ F,50V,Elect.
Q709-Q711	2210746 or	2SC945A(P) or	C321	379122235	22,000pF \pm 10%,50V,Plastic <D/W>
Q801-Q805	2212485	JC501(Q)	C325,C326	352742219	220 μ F,16V,Elect.
Q706,Q708	2211256	2SC1815(BL)	C327	352784799	0.47 μ F,50V,Elect.
Q712,Q713	2211255,	2SC1815(GR),	C329	352750479	4.7 μ F,25V,Elect.
	2210746 or	2SC945A(P) or	C402	352780229	2.2 μ F,50V,Elect.
	2212485	JC501(Q) <G/W>	C404	352721019	100 μ F, 6.3V,Elect.
Q714	2211455,	2SA1015(GR),	C408	352780229	2.2 μ F,50V,Elect.
	2210803 or	2SA733(P) or	C702	352741009	10 μ F,16V,Elect.
	2212495	JA101(Q) <G/W>	C703	395160107	1 μ F,35V,Tantalum
	Diodes		C708	352734709	47 μ F,10V,Elect.
D101,D102	223132	1K60	C711	352780109	1 μ F,50V,Elect.
D104,D152	223150,	US1040,	C712	352780229	2.2 μ F,50V,Elect.
D153,D201	223124 or	1S2473 or	C713	352780479	0.47 μ F,50V,Elect.
D301,D401	223145	1S2076TD	C715	3020017,	0.022F,5V,
D321-D324	223150,	US1040,		3000050 or	0.047F,5.5V or
D701 D703	223124 or	1S2473 or		3000051	0.047F,5.5V,Super
D803-D808	223145	1S2076TD	C801,C802	352741009	10 μ F,16V,Elect.
D801,D802	223155 or	1SS138 or	C951	352741009	10 μ F,16V,Elect.
	223163	1SS133		Resistors	
D951	2243152 or	MTZ5.6B or	R154	5215045	N08HR10KBC,Semi-fixed
	2239472	RD5.6EB2	R156	5215062	N08HR30KBC,Semi-fixed
	Coils		R205	5215048	N08HR200KBC,Semi-fixed <D/W>
L001	233312	NMA-3051 <G>		5215049	N08HR500KBC,Semi-fixed <G>
L102	233105	NCH-1005	R215	5215044	N08HR5KBC,Semi-fixed
L201	233236	NMC-6027 <G>	R951	441521114	110ohm,1/2W,Metal oxide film
L202,L203	233291	NMC-5039 <G>		Socket	
	Transformer			25050273	NSCT-9P101
L101	233351	NFIF-4056		Terminals	
	RF block		P301-P303	25045171	NPJ-4PDBL-65,Input/Output
L151	232128	NMRF-7043	P901	25060085	NTM 4PDMN 29,Antenna <D/W>
	X'tal			25060087	NTM-2PDMN31,Antenna <G>
X701	3010073	XTL-7.2M		Bracket	
				27141059	Ground

PRINTED CIRCUIT BOARD-PARTS LIST

POWER AMPLIFIER PC BOARD (NAAF-2595-1/1A/1B)


CIRCUIT NO.	PART NO.	DESCRIPTION
ICs		
Q501,Q601	222044	STK-4151V
Q901	222780122	78M12
Transistors		
Q902-Q904	2211255	2SC1815(GR)
Diodes		
D901-D904	223897 or 22380003	P3000DL or 1N5402F
D905,D906	2243252 or 2239672	MTZ15B or RD15E-B2
D907	223892	DF02M
D908	223896 or 223880	1N4003F or GP101N4003
D909	2239733, 2243283 or 2241212	RD20E-B3, MTZ20C or GZA20Y
D910	223155	1SS138
D911	2241291	RD3.3E-B1
D912-D914	223155	1SS138
Coils		
L501,L601	231001	S-1.3B <G>

CIRCUIT NO.	PART NO.	DESCRIPTION
Capacitors		
C501,C601	352780229	2.2 μ F,50V,Elect.
C505,C605	352731019	100 μ F,10V,Elect. <G/W>
	3500080	100 μ F,10V,Elect <D>
C506	352782219	220 μ F,50V,Elect.
C507,C607	354764709	47 μ F,35V,Elect.
C509	352782219	220 μ F,50V,Elect.
C510	352781009	10 μ F,50V,Elect.
C512,C514	352781009	10 μ F,50V,Elect.
C901	3500065A	Δ DE7150FZ103PAC400V/125V,IS
C902,C903	3504171	6,800 μ F,40V,Elect.
C904,C905	354744719	470 μ F,16V,Elect.
C906	352761019	100 μ F,35V,Elect.
C907	352752229	2,200 μ F,25V,Elect.
C908	352751019	100 μ F,25V,Elect.
C911	352780109	1 μ F,50V,Elect.
C912	352751009	10 μ F,25V,Elect.
C913	352753309	33 μ F,25V,Elect.
C914	352780339	3.3 μ F,50V,Elect.
Resistors		
R506	441521014	100ohm,1/2W,Metal oxide film
R507,R607	441523324	3.3kohm,1/2W,Metal oxide film
R508,R608	441523324	3.3kohm,1/2W,Metal oxide film
R509,R609	441520474	4.7ohm,1/2W,Metal oxide film
R510	441521014	100ohm,1/2W,Metal oxide film
R512,R612	441520474	4.7ohm,1/2W,Metal oxide film <G>
R901,R902	441628214	820ohm,1W,Metal oxide film
R903	441621024	1kohm,1W,Metal oxide film
R904	441521204	12ohm,1/2W,Metal oxide film
R911	441522704	27ohm,1/2W,Metal oxide film
R913	431523355	Δ 3.3Mohm,1/2W,Solid <D>
R990	441520104	1ohm,1/2W,Metal oxide film <D>
Relay		
RL901	25065108	NRL-2P3A-DC24-05
Switch		
S901	25035398	Δ NPS-111-L362P,Power
Terminal		
P501	25060093	NTM-8P-DML-34,Speaker <D/W>
	25060094	NTM-8P-DML-35,Speaker <G>
Fuseholders		
	250113	Δ SN5051 <D/W>
	25050065	Δ YSH403T <G/W>
Sockets		
	25050269	NSCT-4P-97
	25050270	NSCT-6P-98
Radiator		
	27160176	RAD-56
Screw		
	82143006	3P+6F(BC),Pan head screw
Brackets		
	27141059	Ground <D>
	25060092	NTM-1S33 <G/W>
Label		
	29360626-1	Fuse <D>
	29360405	T2.5A/250V,Fuse rating <G>
Fuses		
F901	252048	Δ 3A(ST-6),Primary <D>
F902	252073 or 252073CC	Δ 1.6A-SE-EAK,Primary <G/W>
F903,F904	252077	Δ 4A-SE-EAK,Secondary <G>
F905	252070	Δ 1A-SE-EAK,Secondary <G>
F501,F601	252059	Δ 4A(SS-2),Speaker <D/W>
	252075	Δ 2.5A-SE-EAK,Speaker <G>

NOTE: <D>:Only 120V model
<G>:Only 220V and 240V models
<W>:Only Worldwide model

SCHEMATIC DIAGRAM
-G/O models-

1 2 3 4 5 6 7

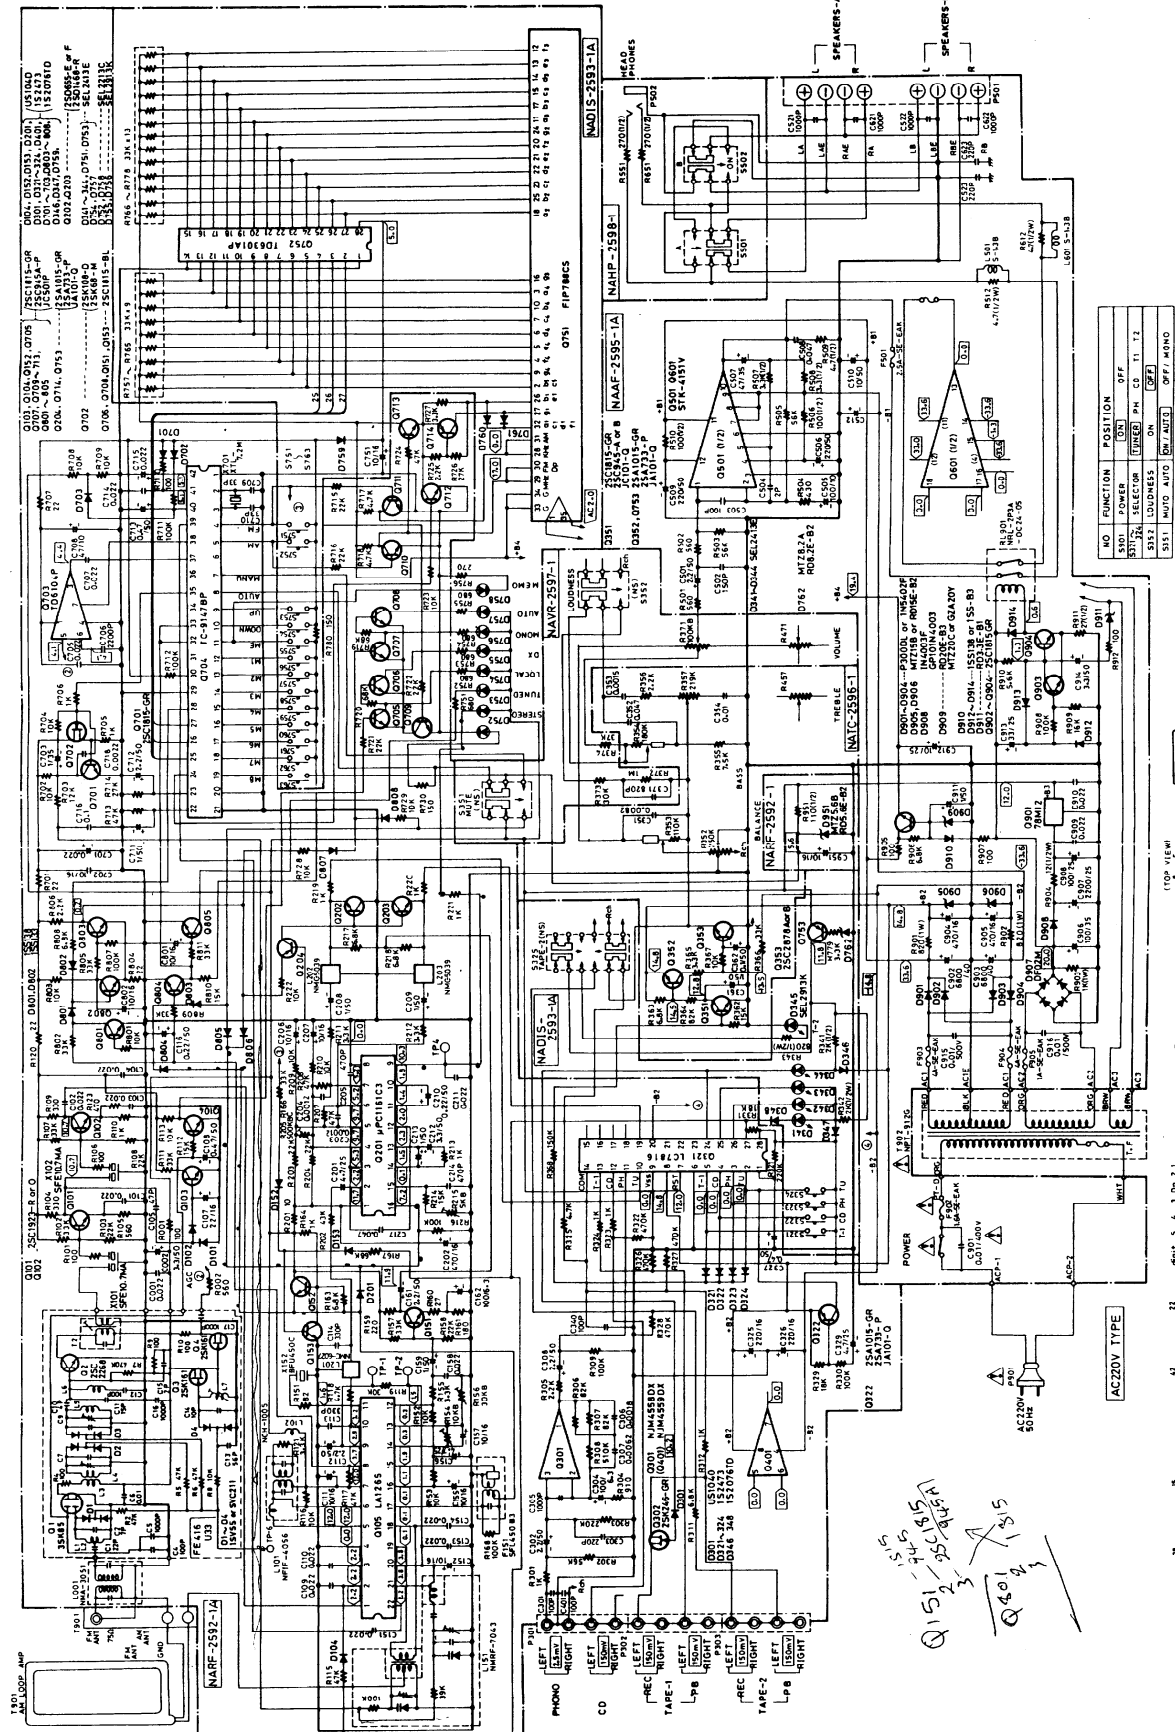


NO.	FUNCTION	POSITION
5101	POWER	ON OFF
5102	SELECTOR	TUNED PH. CD 11 12
5103	LOUDNESS	ON OFF
5104	MUTE	ON OFF
5105	AUTO MUTE	ON OFF
5106	MONO	ON OFF

NOTES:
- ALL RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN P.F. UNLESS OTHERWISE NOTED.
- VOLTAGE MEASURED WITH A.T.M. (T.M. INPUT SIGNAL).
- THE COMPONENTS IDENTIFIED WITH MARKING CRITICAL FOR SAFETY.
- REPLACE ONLY WITH IDENTICAL PARTS.




SCHEMATIC DIAGRAM

-D/W models-

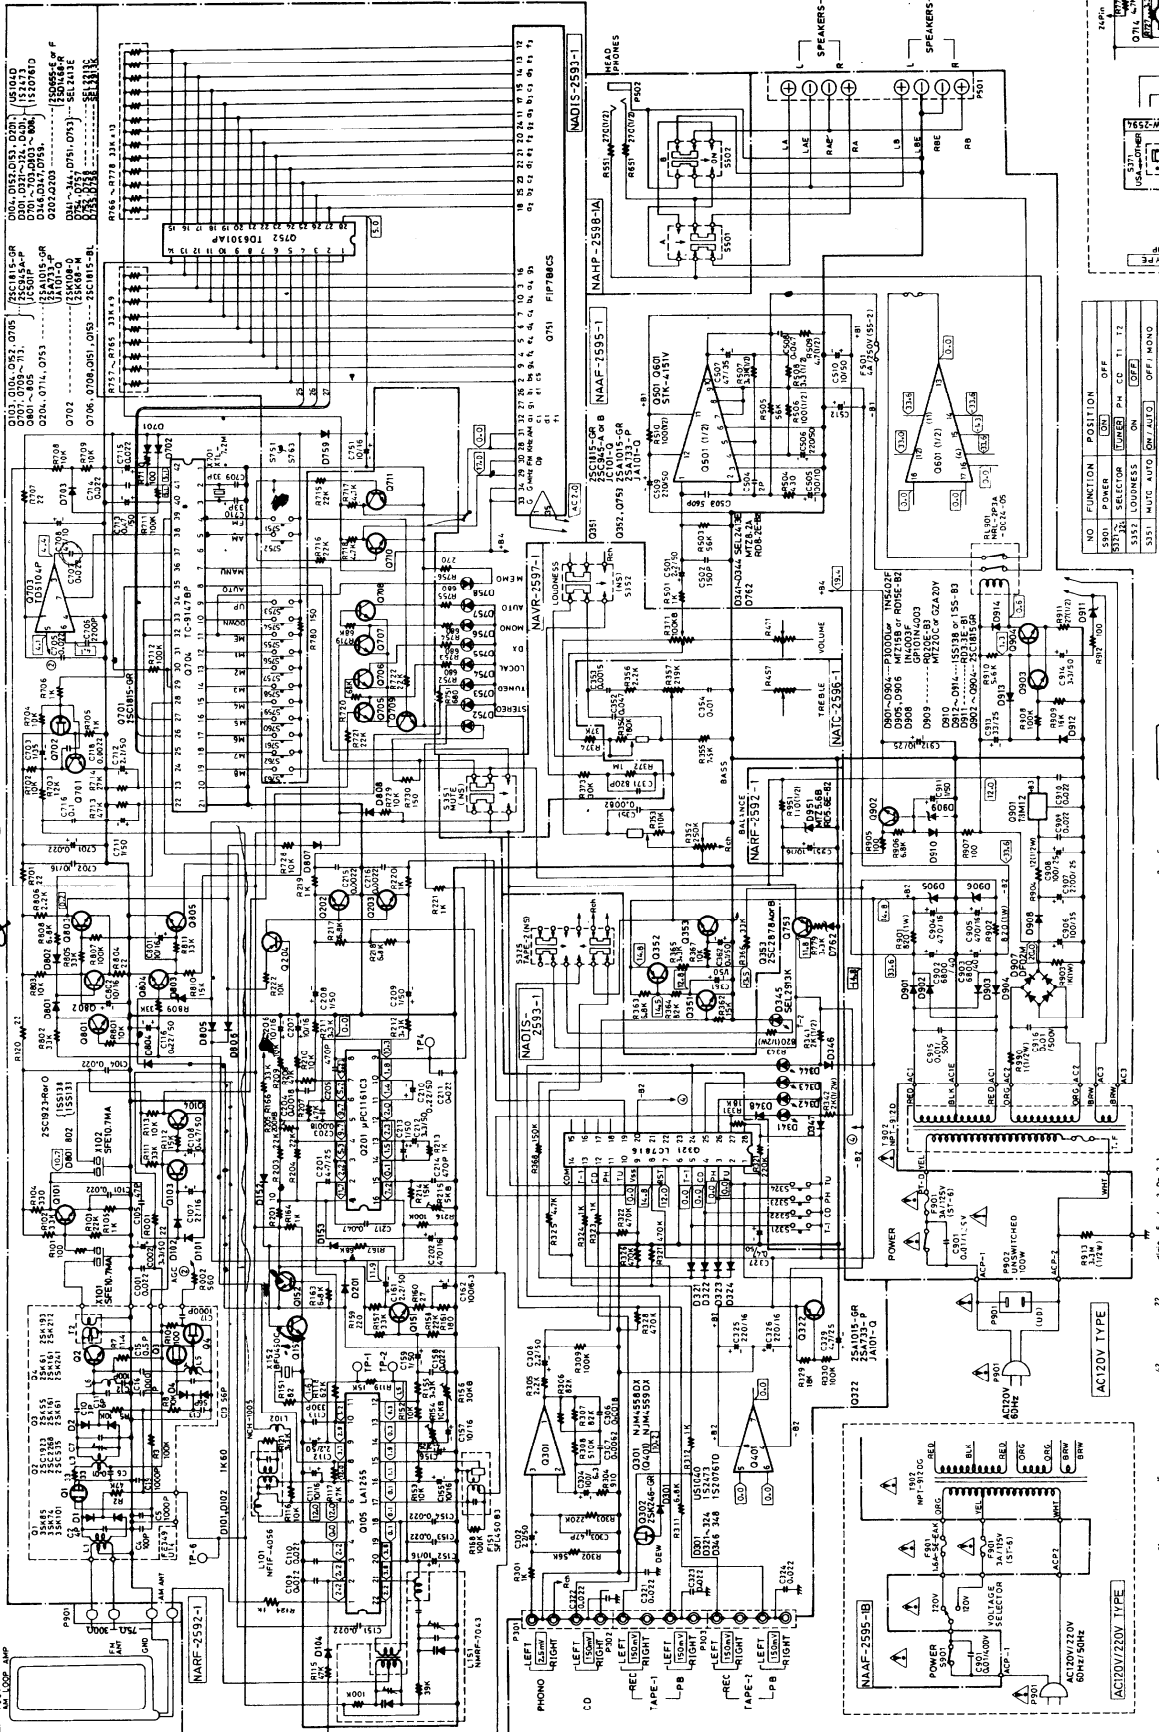


NO.	FUNCTION	POSITION
5301	POWER	ON
5302	STATION SELECTOR	UNDEF
5303	LOUDNESS	ON
5304	MUSIC AUTO	ON/OFF
5305	MONO	OFF/MONO

- RESISTORS ARE IN OHMS UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN P.F. UNLESS OTHERWISE NOTED.
- VOLTAGE MEASURED WITH P.P.M. AND INPUT SIGNAL.
- THE OPERATING POINTS ARE INDICATED BY A DOTTED LINE.
- THE OPERATING POINTS ARE CRITICAL FOR SAFETY.
- RESISTOR VALUES ARE IN OHMS UNLESS OTHERWISE NOTED.
- ALL CAPACITORS ARE IN P.F. UNLESS OTHERWISE NOTED.
- VOLTAGE MEASURED WITH P.P.M. AND INPUT SIGNAL.
- THE OPERATING POINTS ARE INDICATED BY A DOTTED LINE.
- THE OPERATING POINTS ARE CRITICAL FOR SAFETY.

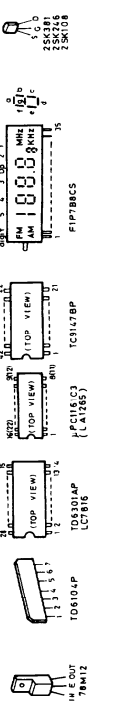

PACKING VIEW

A
B
C
D
E

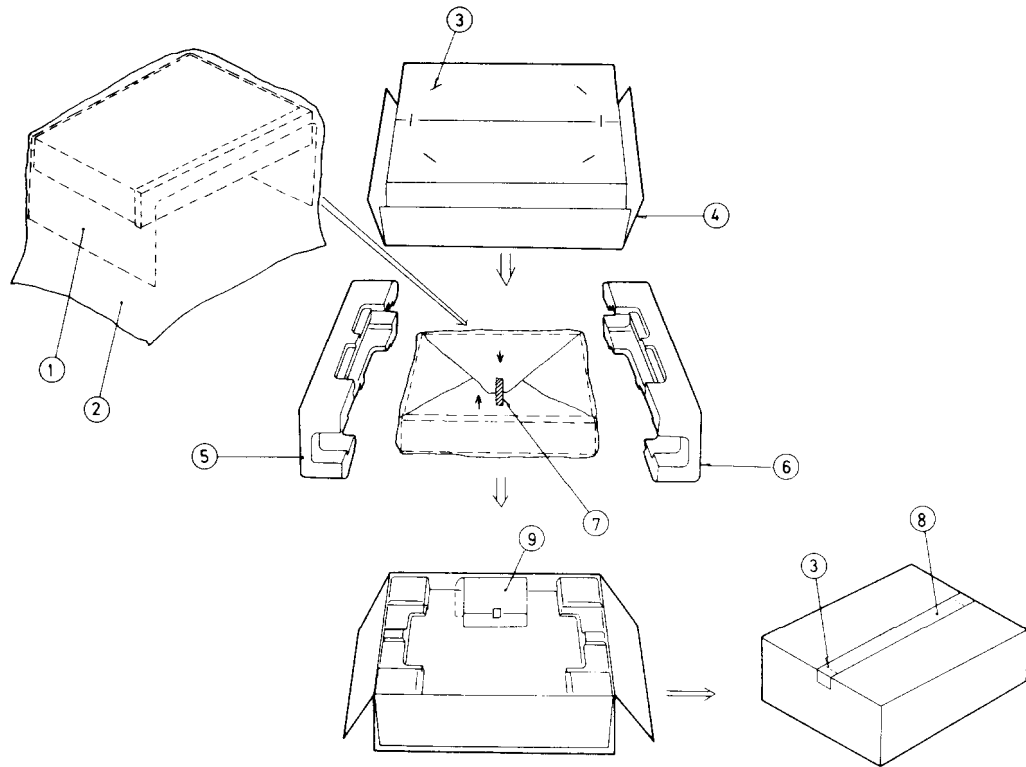

REF.NO.	PART NO.	DESCRIPTION
1	29095012-1	500 × 800mm, Protection sheet
2	29100036A	550 × 850mm, Poly-vinyl bag
3	282301	Sealing hook
4	29051524	Master carton box
5	29090690C	Pad R
6	29090691B	Pad L
7	29110032	W=15mm, Adhesive tape
8	260012	W=50mm, Damplon tape
9	Accessory bag ass'y	
	U.S.A. model	
	292064B	FM antenna
	29341151	Instruction manual
	232119	NMA-3052, AM loop antenna
	29365019	Warranty card
	29358002E	Service station list
	29100006A	250 × 350mm, Poly-vinyl bag

REF.NO.	PART NO.	DESCRIPTION
	120V model	
	292064B	FM antenna
	29341151	Instruction manual
	232119	NMA-3052, AM loop antenna
	29100006A	250 × 350mm, Poly-vinyl bag
	220V model	
	292092	FM antenna
	29341152	Instruction manual
	232119	NMA-3052, AM loop antenna
	29100006A	250 × 350mm, Poly-vinyl bag
	Worldwide model	
	292064B	FM antenna
	29341152	Instruction manual
	232119	NMA-3052, AM loop antenna
	29100006A	250 × 350mm, Poly-vinyl bag
	25055040	CV-K-2, Conversion plug
	240V model	
	292092	FM antenna
	29341152	Instruction manual
	232119	NMA-3052, AM loop antenna
	29100006A	250 × 350mm, Poly-vinyl bag
	25060088	Antenna adaptor FM