


# Service Manual

74 CD15/00G

Compact disc player

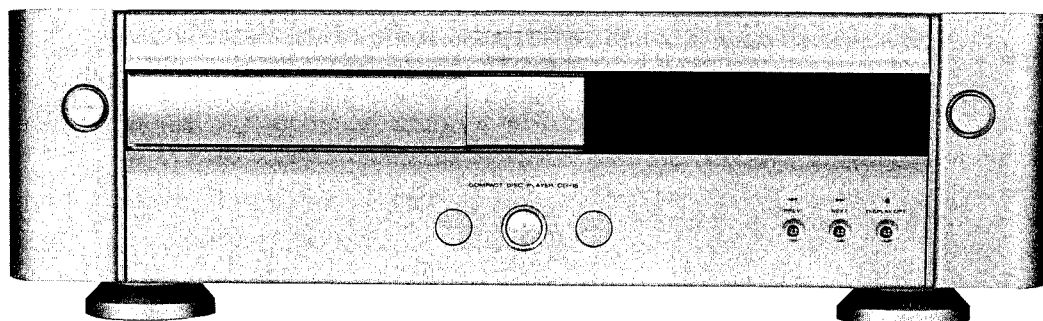

**COMPACT**  
**disc**  
**DIGITAL AUDIO**

## CONTENTS

SECTION	PAGE
1. SERVICING HINTS .....	1
2. TECHNICAL SPECIFICATIONS .....	2
3. NOTES ON BALANCED OUTPUTS CONNECTORS .....	3
4. BLOCK DIAGRAM .....	4
5. WIRING DIAGRAM .....	5
6. SCHEMATIC DIAGRAM AND PARTS LOCATIONS .....	7
7. EXPLODED VIEW AND MECHANISM PARTS LIST .....	33
8. TRAY MECHANISM LOADING PROCEDURES .....	39
9. INITIATING THE SERVICE PROGRAMME .....	41
10. ERROR TABLE .....	42
11. MEASUREMENTS AND ADJUSTMENT FOR CDM-4 (SUB CHASSIS) .....	43
12. ELECTRICAL PARTS LIST .....	44

---

# marantz®

---

model CD-15

First issue : 1993

4822 725 51017  
PCS 70 551

## MARANTZ DESIGN AND SERVICE

Using superior design and selected high grade components, MARANTZ company has created the ultimate in stereo sound. Only **original MARANTZ parts** can insure that your MARANTZ product will continue to perform to the specifications for which it is famous.

Parts for your MARANTZ equipment are generally available at our National Marantz Subsidiary or Agent.

MARANTZ EUROPE B.V.  
P.O. Box 80002  
Building SFF 2  
5600 JB Eindhoven  
The Netherlands  
Phone : +31-40-732241  
Fax : +31-40-735578

### ORDERING PARTS

Parts can be ordered either by mail or by telex. In both cases, the correct part number has to be specified. The following information must be supplied to eliminate delays in processing your order:

1. Complete address
2. Complete part numbers and quantities required
3. Description of parts
4. Model number for which the part is required
5. Way of shipment
6. Signature: any order form or telex must be signed, otherwise such part order will be considered as null and void.

### ADDRESSES

**AUSTRALIA**  
MARANTZ AUSTRALIA  
Figtree Drive  
Australia Centre  
Homebush, NSW 2140  
AUSTRALIA

**FINLAND**  
MARANTZ  
Kuortanegatan 1  
00520  
Helsingfors 52  
Finland

**ITALY**  
MARANTZ ITALIANA SPA  
Piazza IV Novembre 3  
20124 Milano  
Italy

**NORWAY**  
MARANTZ  
Postboks 7034  
Assiden  
3007 Drammen  
Norway

**SPAIN**  
MARANTZ SPAIN  
Martinez Villergas 2  
Apartado 2065  
Madrid 28027  
Spain

**AUSTRIA**  
MARANTZ  
Hietzinger Kai 137a  
1130 Wien  
Austria

**FRANCE**  
MARANTZ FRANCE  
4 Rue Bernard Palissy  
92600 Asnières  
France

**JAPAN**  
MARANTZ JAPAN INC.  
35-1, 7-chome, Sagamiono  
Sagamihara-shi, Kanagawa  
Japan

**PORTUGAL**  
COREL  
Av. da Liberdade  
211-2 Esq.  
1200 Lisboa  
Portugal

**SWEDEN**  
MARANTZ  
Box 1324  
17125 Solna  
Sweden

**BELGIUM**  
MARANTZ EUROPE B.V.  
Div. Benelux  
P.O.Box 80002  
Building SFF 2  
5600 JB Eindhoven  
The Netherlands

**GERMANY**  
MARANTZ GERMANY GmbH  
Kleine Heide 12  
Postfach 4802  
Halle-Westfalen  
Germany

**KUWAIT**  
AL ALAMIAH ELECTRONICS  
P.O.Box 8196  
Salmiah  
22052 Kuwait

**SAUDI ARABIA**  
AL ALAMIAH ELECTRONICS  
P.O.Box 5954  
University Street  
Riyadh 11432  
Saudi Arabia

**SWITZERLAND**  
MARANTZ SWITZERLAND  
Postfach  
8010 Zürich-Müllingen  
Switzerland

**CHILE**  
MARANTZ DIVISION OF  
PHILIPS S.A.  
Av.Santa Maria 0760  
Casilla 2687  
Santiago  
Chile

**GREAT BRITAIN**  
MARANTZ HiFi UK Ltd.  
Kingsbridge House  
Padbury Oaks  
575-583 Bath Road  
Longford Middlesex UB7 0EH,  
U.K.

**NETHERLANDS**  
MARANTZ EUROPE B.V.  
Div. Benelux  
P.O.Box 80002  
Building SFF 2  
5600 JB Eindhoven  
The Netherlands

**SOUTH AFRICA**  
MARANTZ S.A.  
10 Bond Street  
Randburg 2194  
P.O. Box 7703  
Johannesburg 2000  
South Africa

**TRADING**  
MARANTZ TRADING  
P.O.Box 20008  
Building SFF 2  
5600 JB Eindhoven  
The Netherlands

**DENMARK**  
MARANTZ  
Horsvinget 5  
2630 Tastrup  
Denmark

**GREECE**  
ADAMCO ELECTR. SA  
P.O.Box 21025  
Hippocrates Str. 188  
Athens 11471  
Greece

All of the above locations are fully equipped to take care of your total service needs or can advise you. Because various countries have differing configuration requirements, it is necessary that you contact the service facility in your particular country. In the event that there is no service location listed for your country, please contact the nearest facility for the necessary assistance.

In case of difficulties, do not hesitate to contact the Technical Department at above mentioned address.

## 1. SERVICING HINTS


In the set chip components have been applied.  
For disassembly and assembly of chip components see the figure below.

**CLASS 1  
LASER PRODUCT**

3122 110 03420

### SERVICE TOOLS

Audio signals disc	4822 397 30184
Disc without errors (test disc 5) + disc with DO errors, black spots and fingerprints (test disc 5A)	4822 397 30096
Disc 65 min 1 kHz without pause	4822 397 30155
Max. diameter disc(58.0 mm)	4822 397 60141
Torx screwdrivers	
Set (straight)	4822 395 50145
Set (square)	4822 395 50132
13th order filter	4822 395 30204
Service cable (4p)	4822 321 21284
Service flexfoil (14p)	4822 322 40066
Service connector (14p)	4822 267 50676
Green LED CQY G11	5322 130 32182
Insulation cover	4822 444 60655

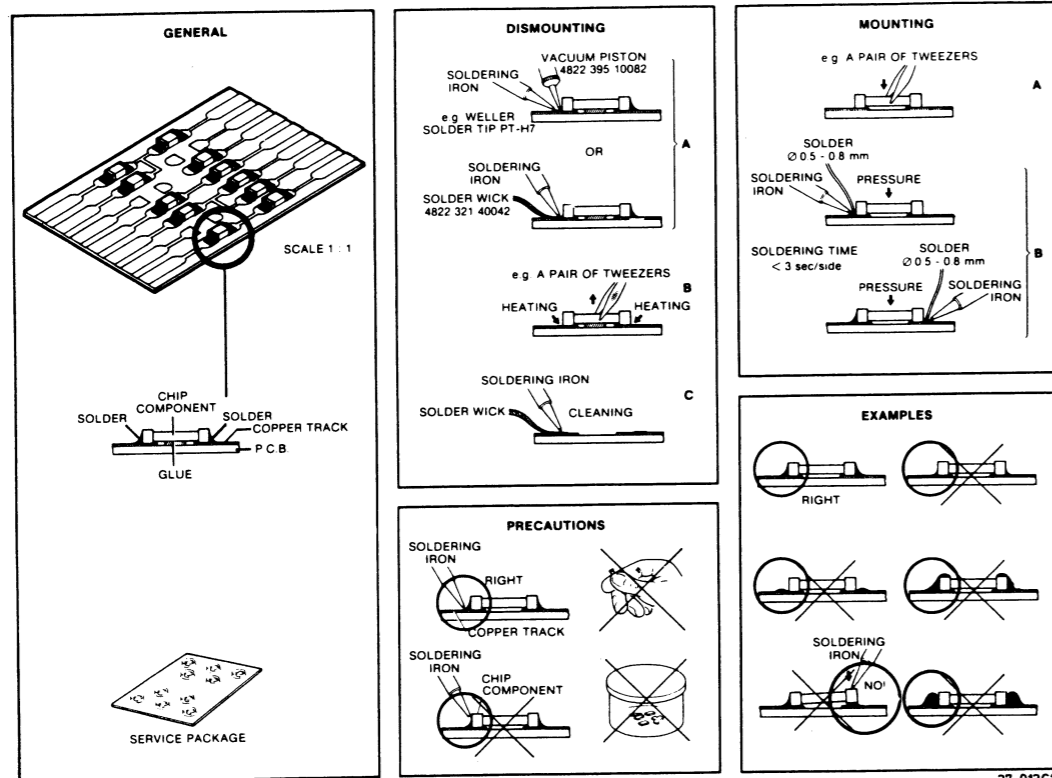

### GB WARNING

All ICs and many other semi-conductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.  
When repairing, make sure that you are connected with the same potential as the mass of the set via a wrist wrap with resistance. Keep components and tools also at this potential.

### ESD



### NL WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).  
Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.  
Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

### I AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).  
La loro longevità potrebbe essere fortemente ridatta in caso di non osservazione della più grande cauzione alla loro manipolazione.  
Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.  
Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

### F ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD).  
Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.  
Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilier le bracelet serti d'une résistance de sécurité.  
Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

### D WARNUNG

Alle ICs und viele andere Halbleiter sind empfindlich gegen elektrostatische Entladungen (ESD).  
Unvorsichtige Behandlung bei der Reparatur kann die Lebensdauer drastisch vermindern. Sorgen sie dafür, dass Sie im Reparaturfall über ein Pulsarmband mit Widerstand mit dem Massepotential des Gerätes verbunden sind. halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

## 2. TECHNICAL SPECIFICATIONS

### Audio Characteristics

Channels	2 channels
D/A conversion	1-bit linear/channel

### Frequency Characteristics

Line output jack	20 to 20,000 Hz, ± 0.2 dB
BALANCED output jack	20 to 20,000 Hz, ± 0.2 dB
Dynamic range	97.5 dB
S/N ratio	110 dB
Channel separation	100 dB (50 ~ 20 kHz)
THD	0.00135 % (1kHz)
Wow & flutter	Precision of quartz
Analog output jacks	
Line output jacks	Output level 2 V RMS
Output impedance	150 ohms
Matching load impedance	10 kohms or more
BALANCED output jack	Output level 2.4 V RMS
Output impedance	100 ohms
Matching load impedance	Balanced 600 ohms
Unbalanced	600 ohms to 50 k ohms
Digital output	Pin jack, 0.5 Vp-p/75 ohms

### Optical Readout System

Laser	AlGAs semiconductor
Wavelength	780 nm

### Signal System

Sampling frequency	44.1 kHz
Quantization	16-bit linear/channel
Error correction	Cross-interleave reed solomon code (CIRC), Bitstream D/A conversion

### Power Supply

Power Requirements	220/240 V AC 50/60 Hz
Power Consumption	20 W

### Cabinet, etc.

Dimensions	
Width	454 mm
Height	118 mm
Depth	333 mm
Weight	Approx. 16.8 kg
Operating temperatures	+ 5 °C ~ + 35 °C
Operating humidity	5 % ~ 65 % (without Dew)

### Accessories

Remote control unit (RC-15CD)	1
Dimensions (W x H x D)	44 x 17.5 x 239 mm
Weight (without batteries)	200 g
R03 Batteries	2
Stereo audio cable with RCA pins	1 Pair
Digital signal cable with RCA pins	1
AC Adapter	1


\* Improvement may result in changes in specifications and design without notice.

## 3. NOTES ON BALANCED OUTPUTS CONNECTORS


The BALANCED output connectors uses XLR connectors.

There are two types professional-type internal wiring methods for XLR connectors.

### 1. USA method (Pin 2= COLD, Pin 3=HOT)

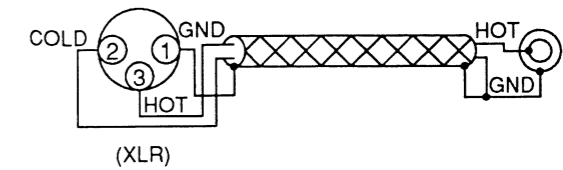

### 2. Europe method (Pin 2= HOT, Pin 3=COLD)

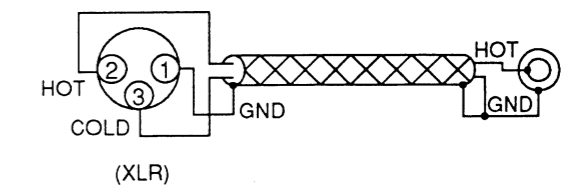


The models use the USA method described in 1 above.

When XLR connector cables are used and if your preamplifier or main amplifier uses the Europe method, the reproduced signal may be out of phase.


In this case, change the connections of pin 2 and pin 3 of one of the XLR connectors of the cable to the USA method.

Also when you use an XLR balanced cable (see illustration below) and if the preamplifier or main amplifier uses the Europe method, change the connections of pin 2 and pin 3 of one of the XLR connectors of the cable to the USA method.

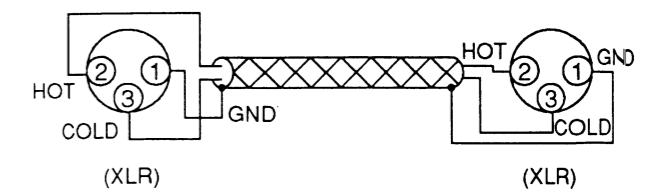


Now the signal can be reproduced in proper phase.


4. BLOCK DIAGRAM

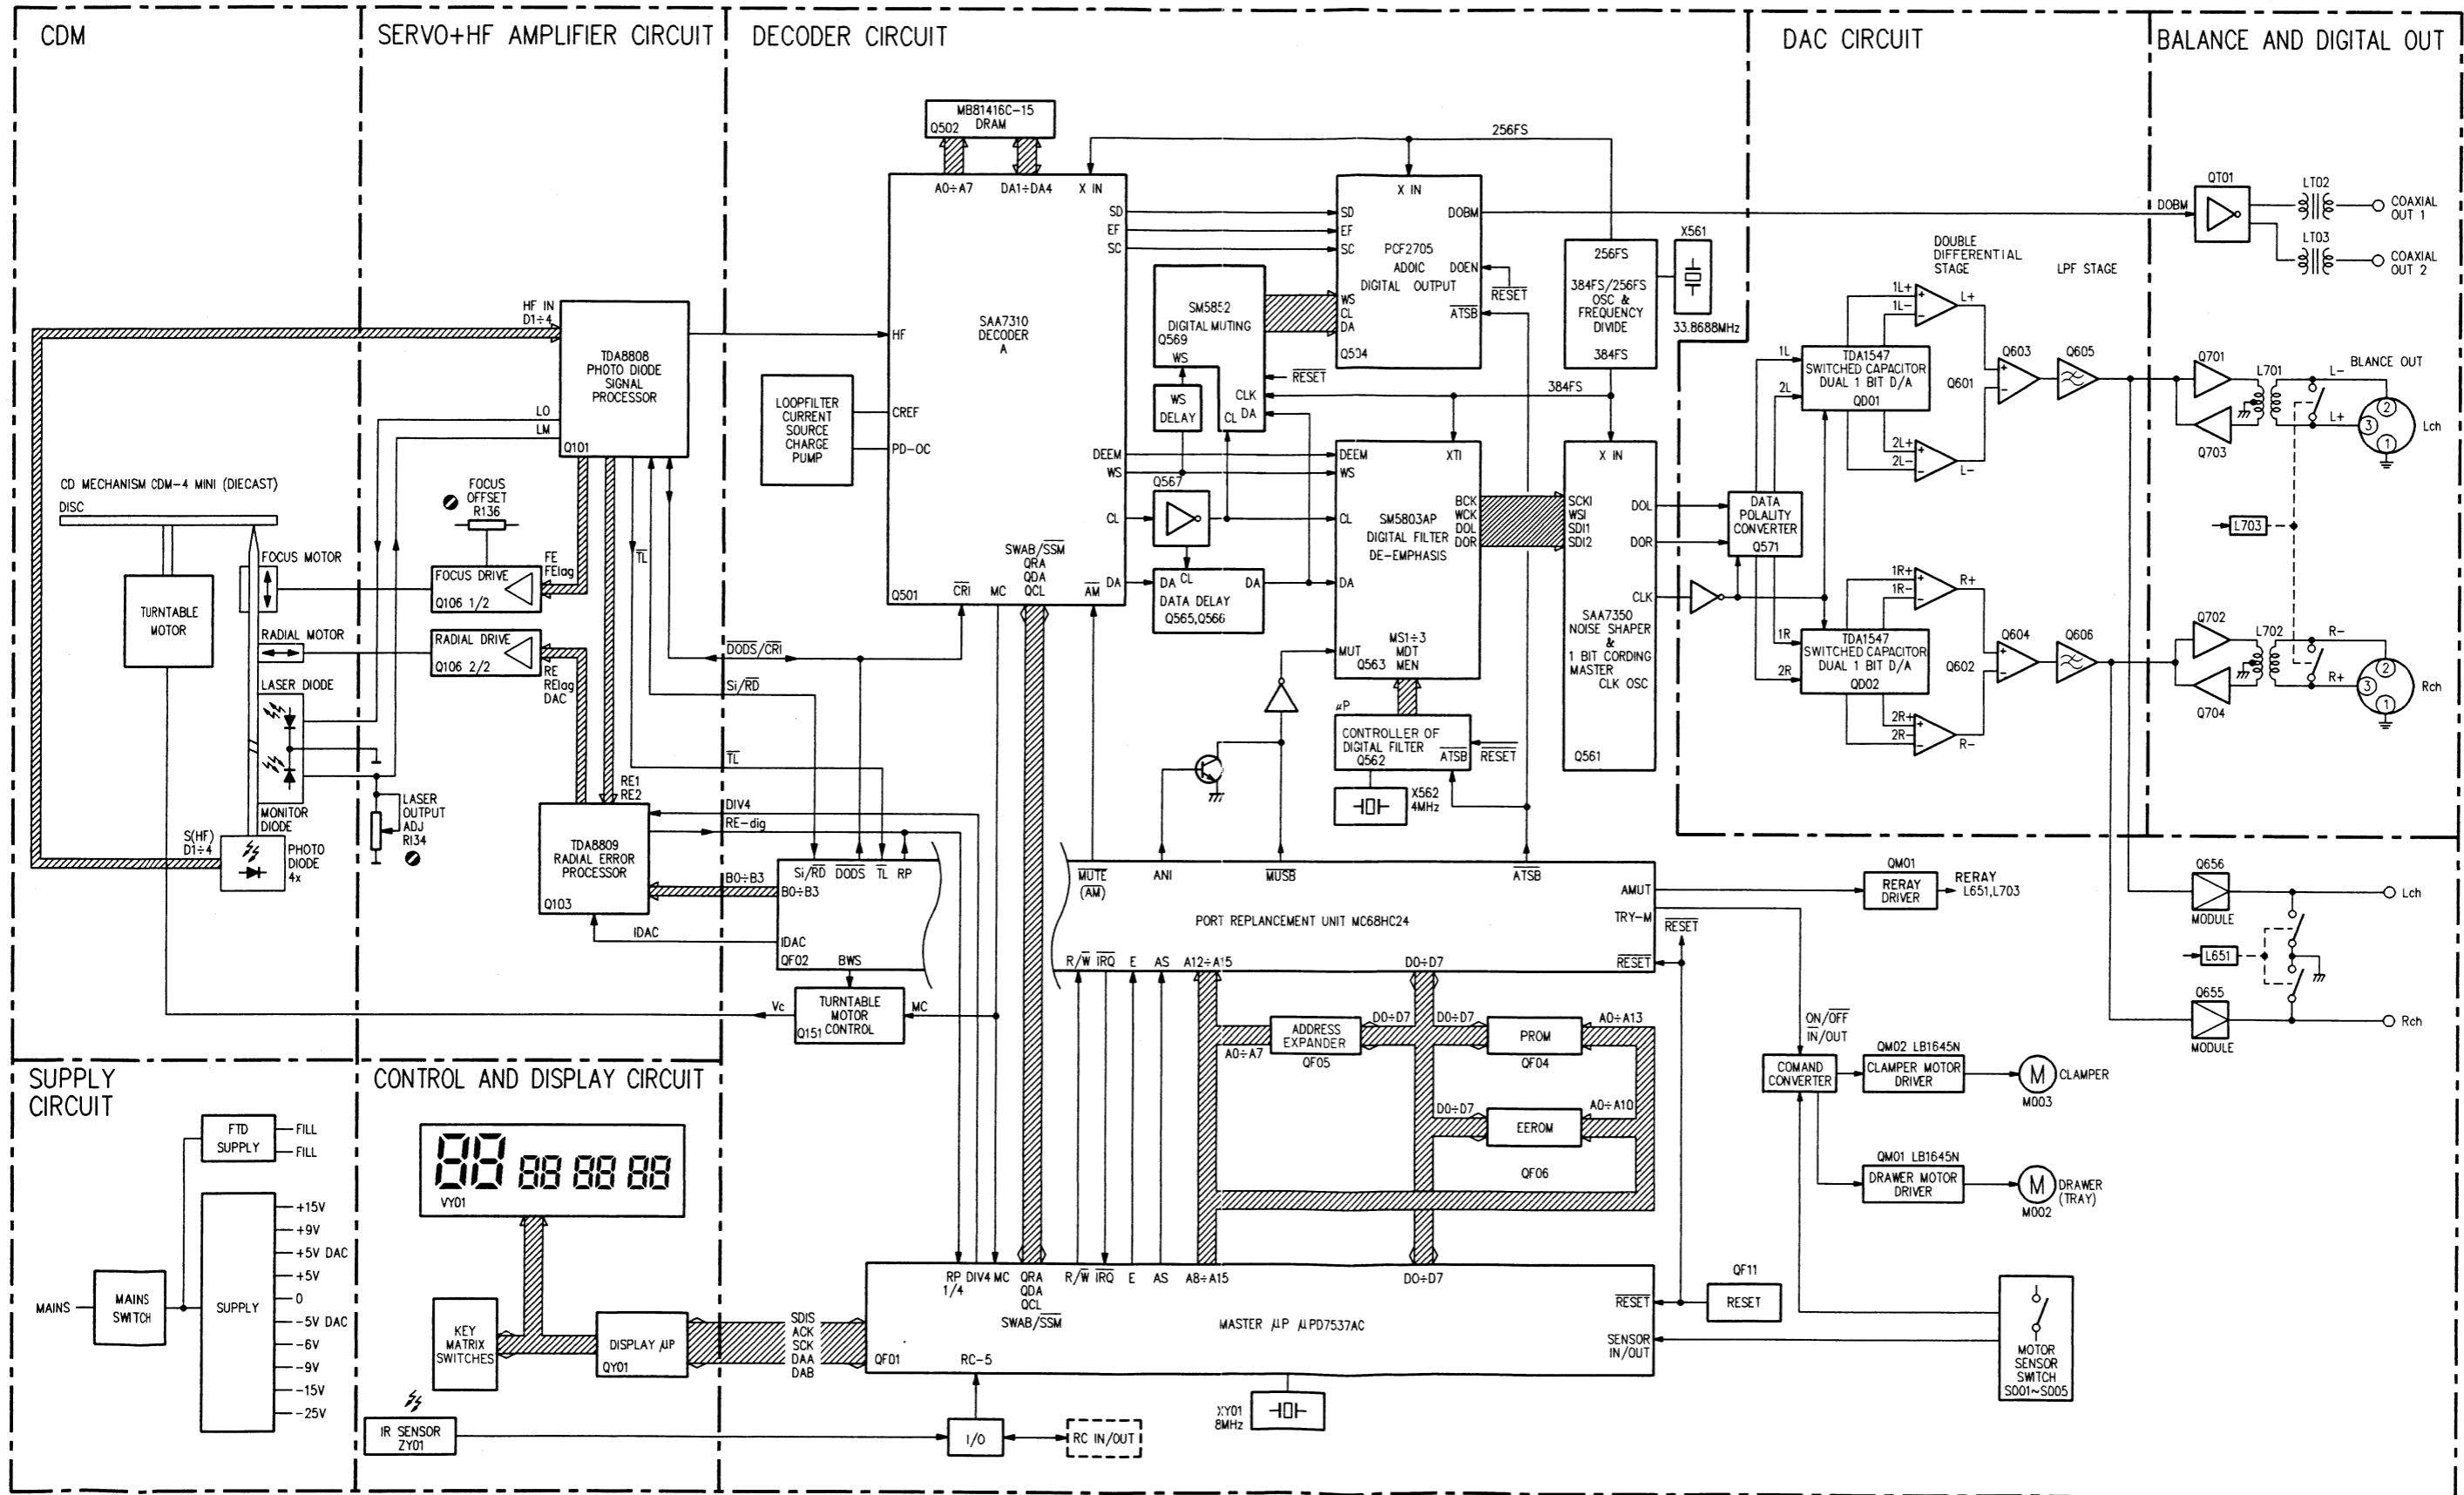






# 5. WIRING DIAGRAM

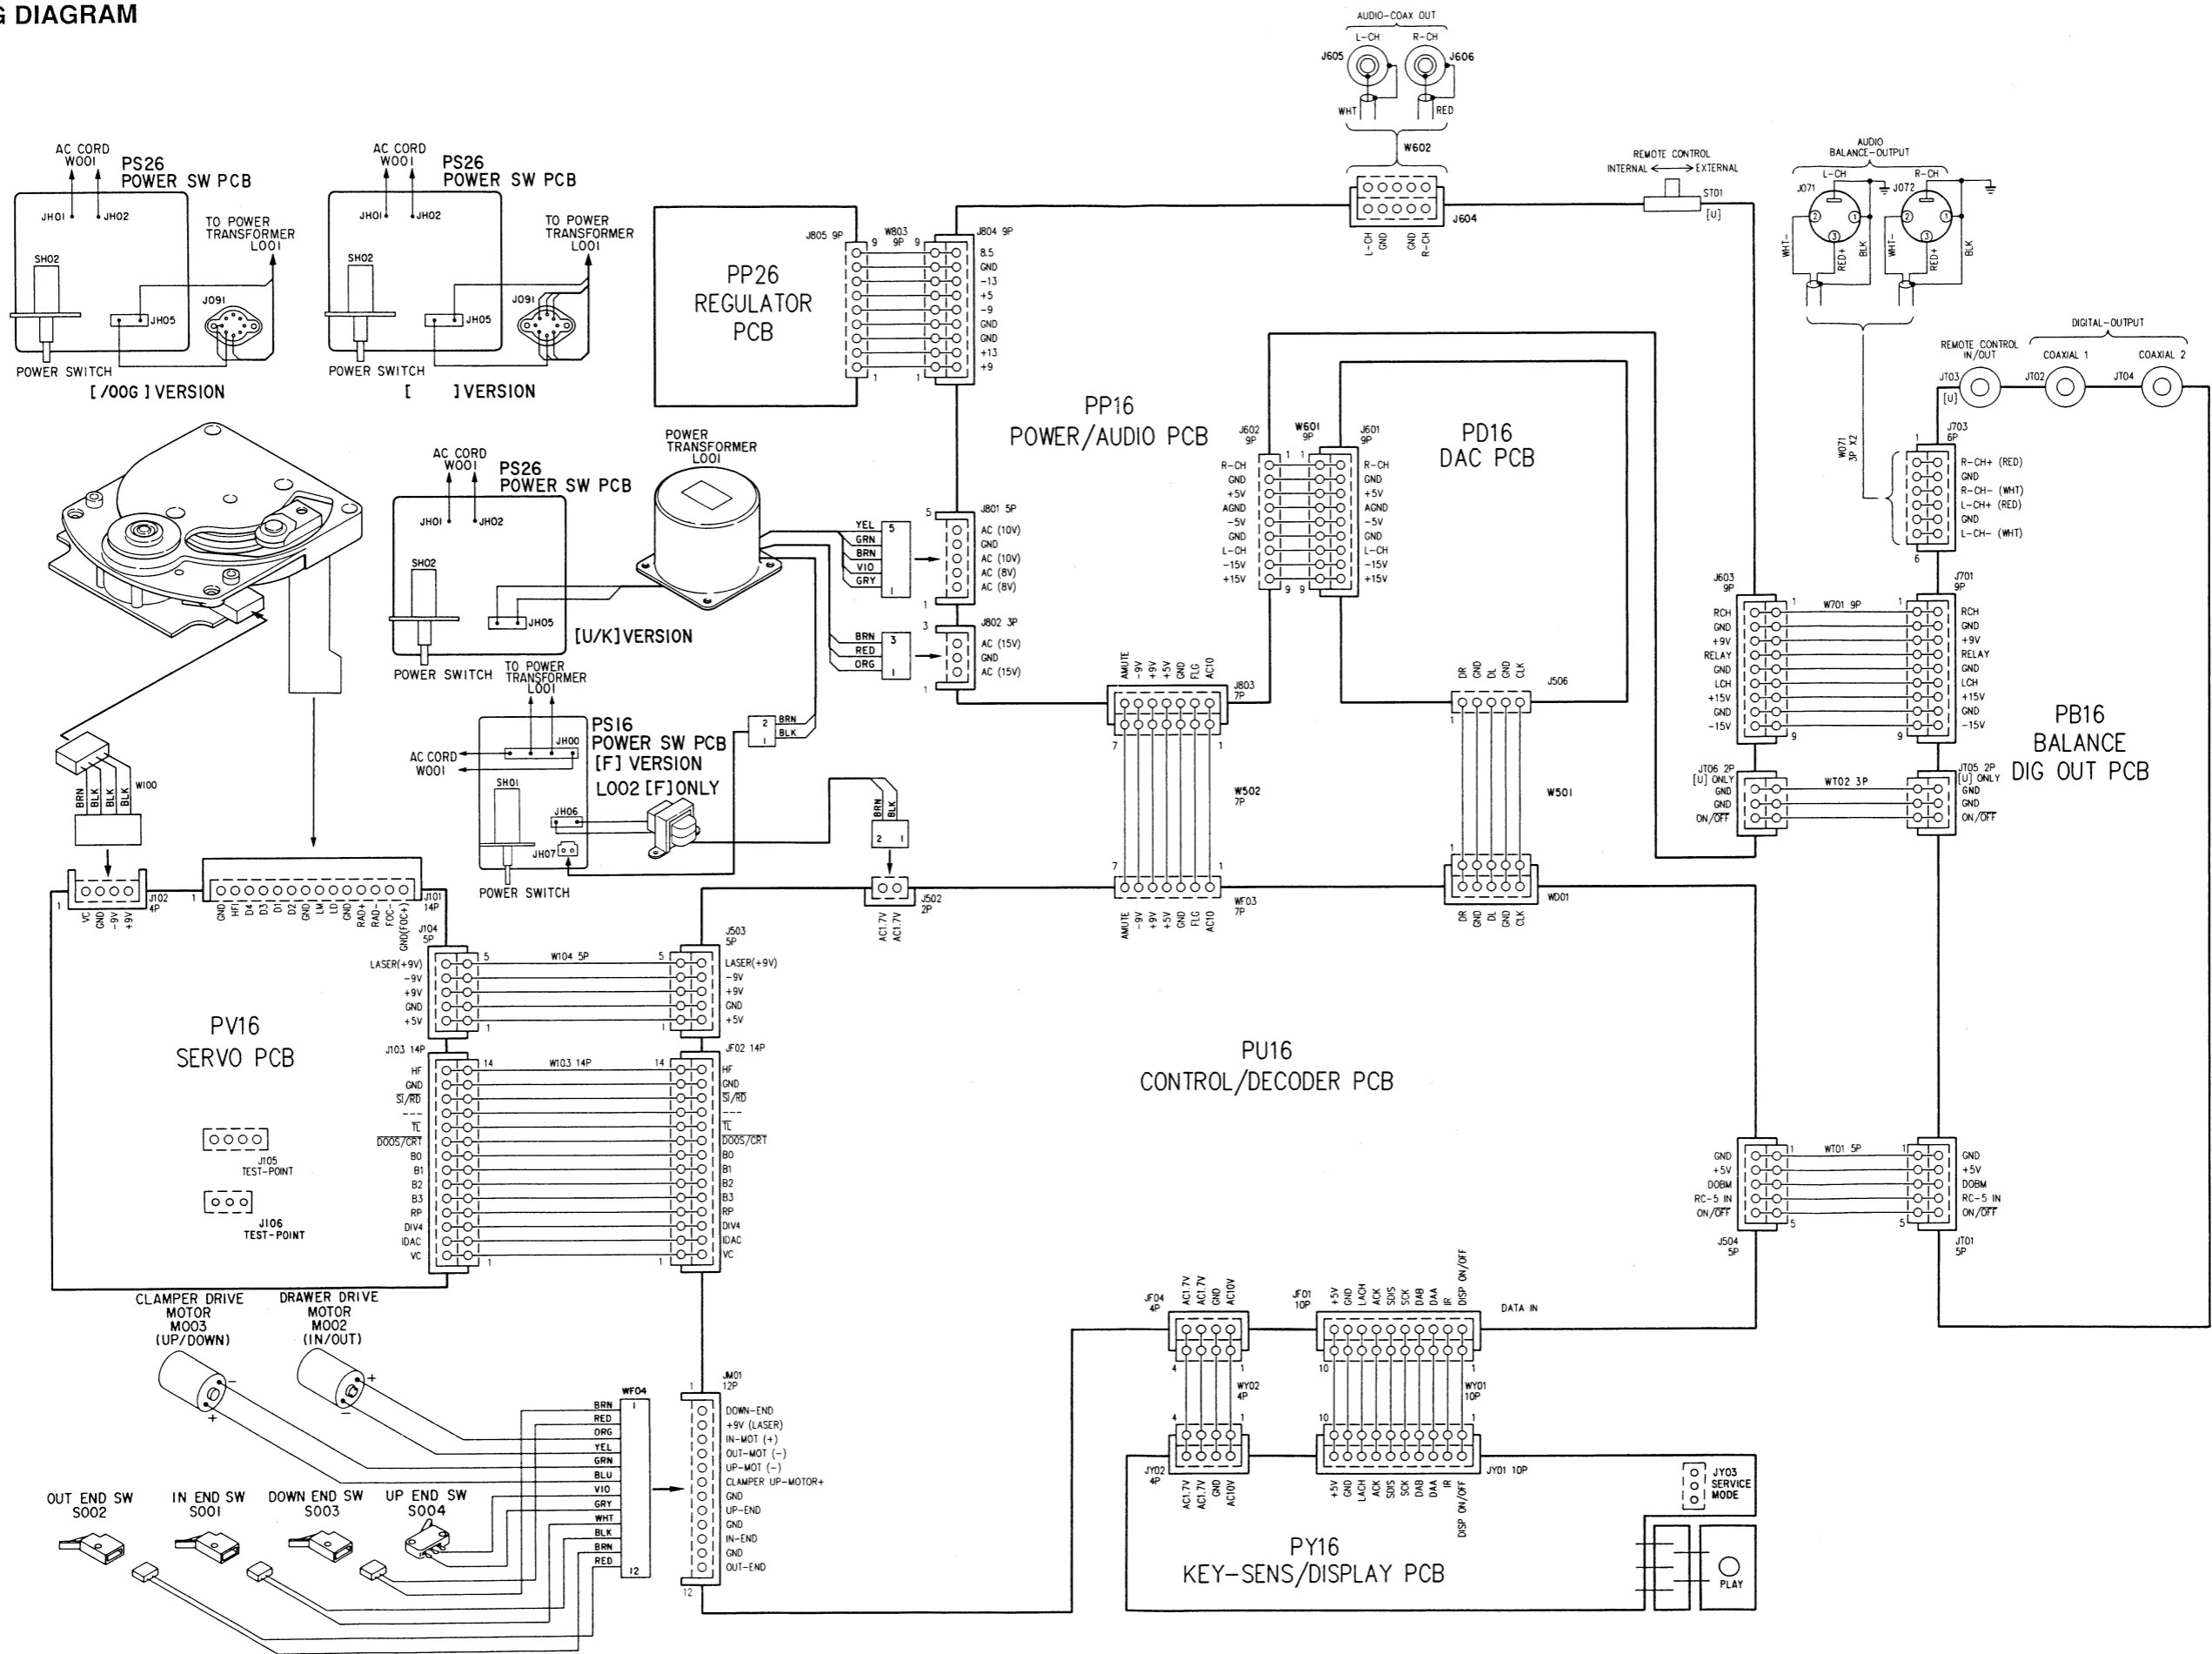

6. SCHEMATIC DIAGRAM AND PARTS LOCATIONS

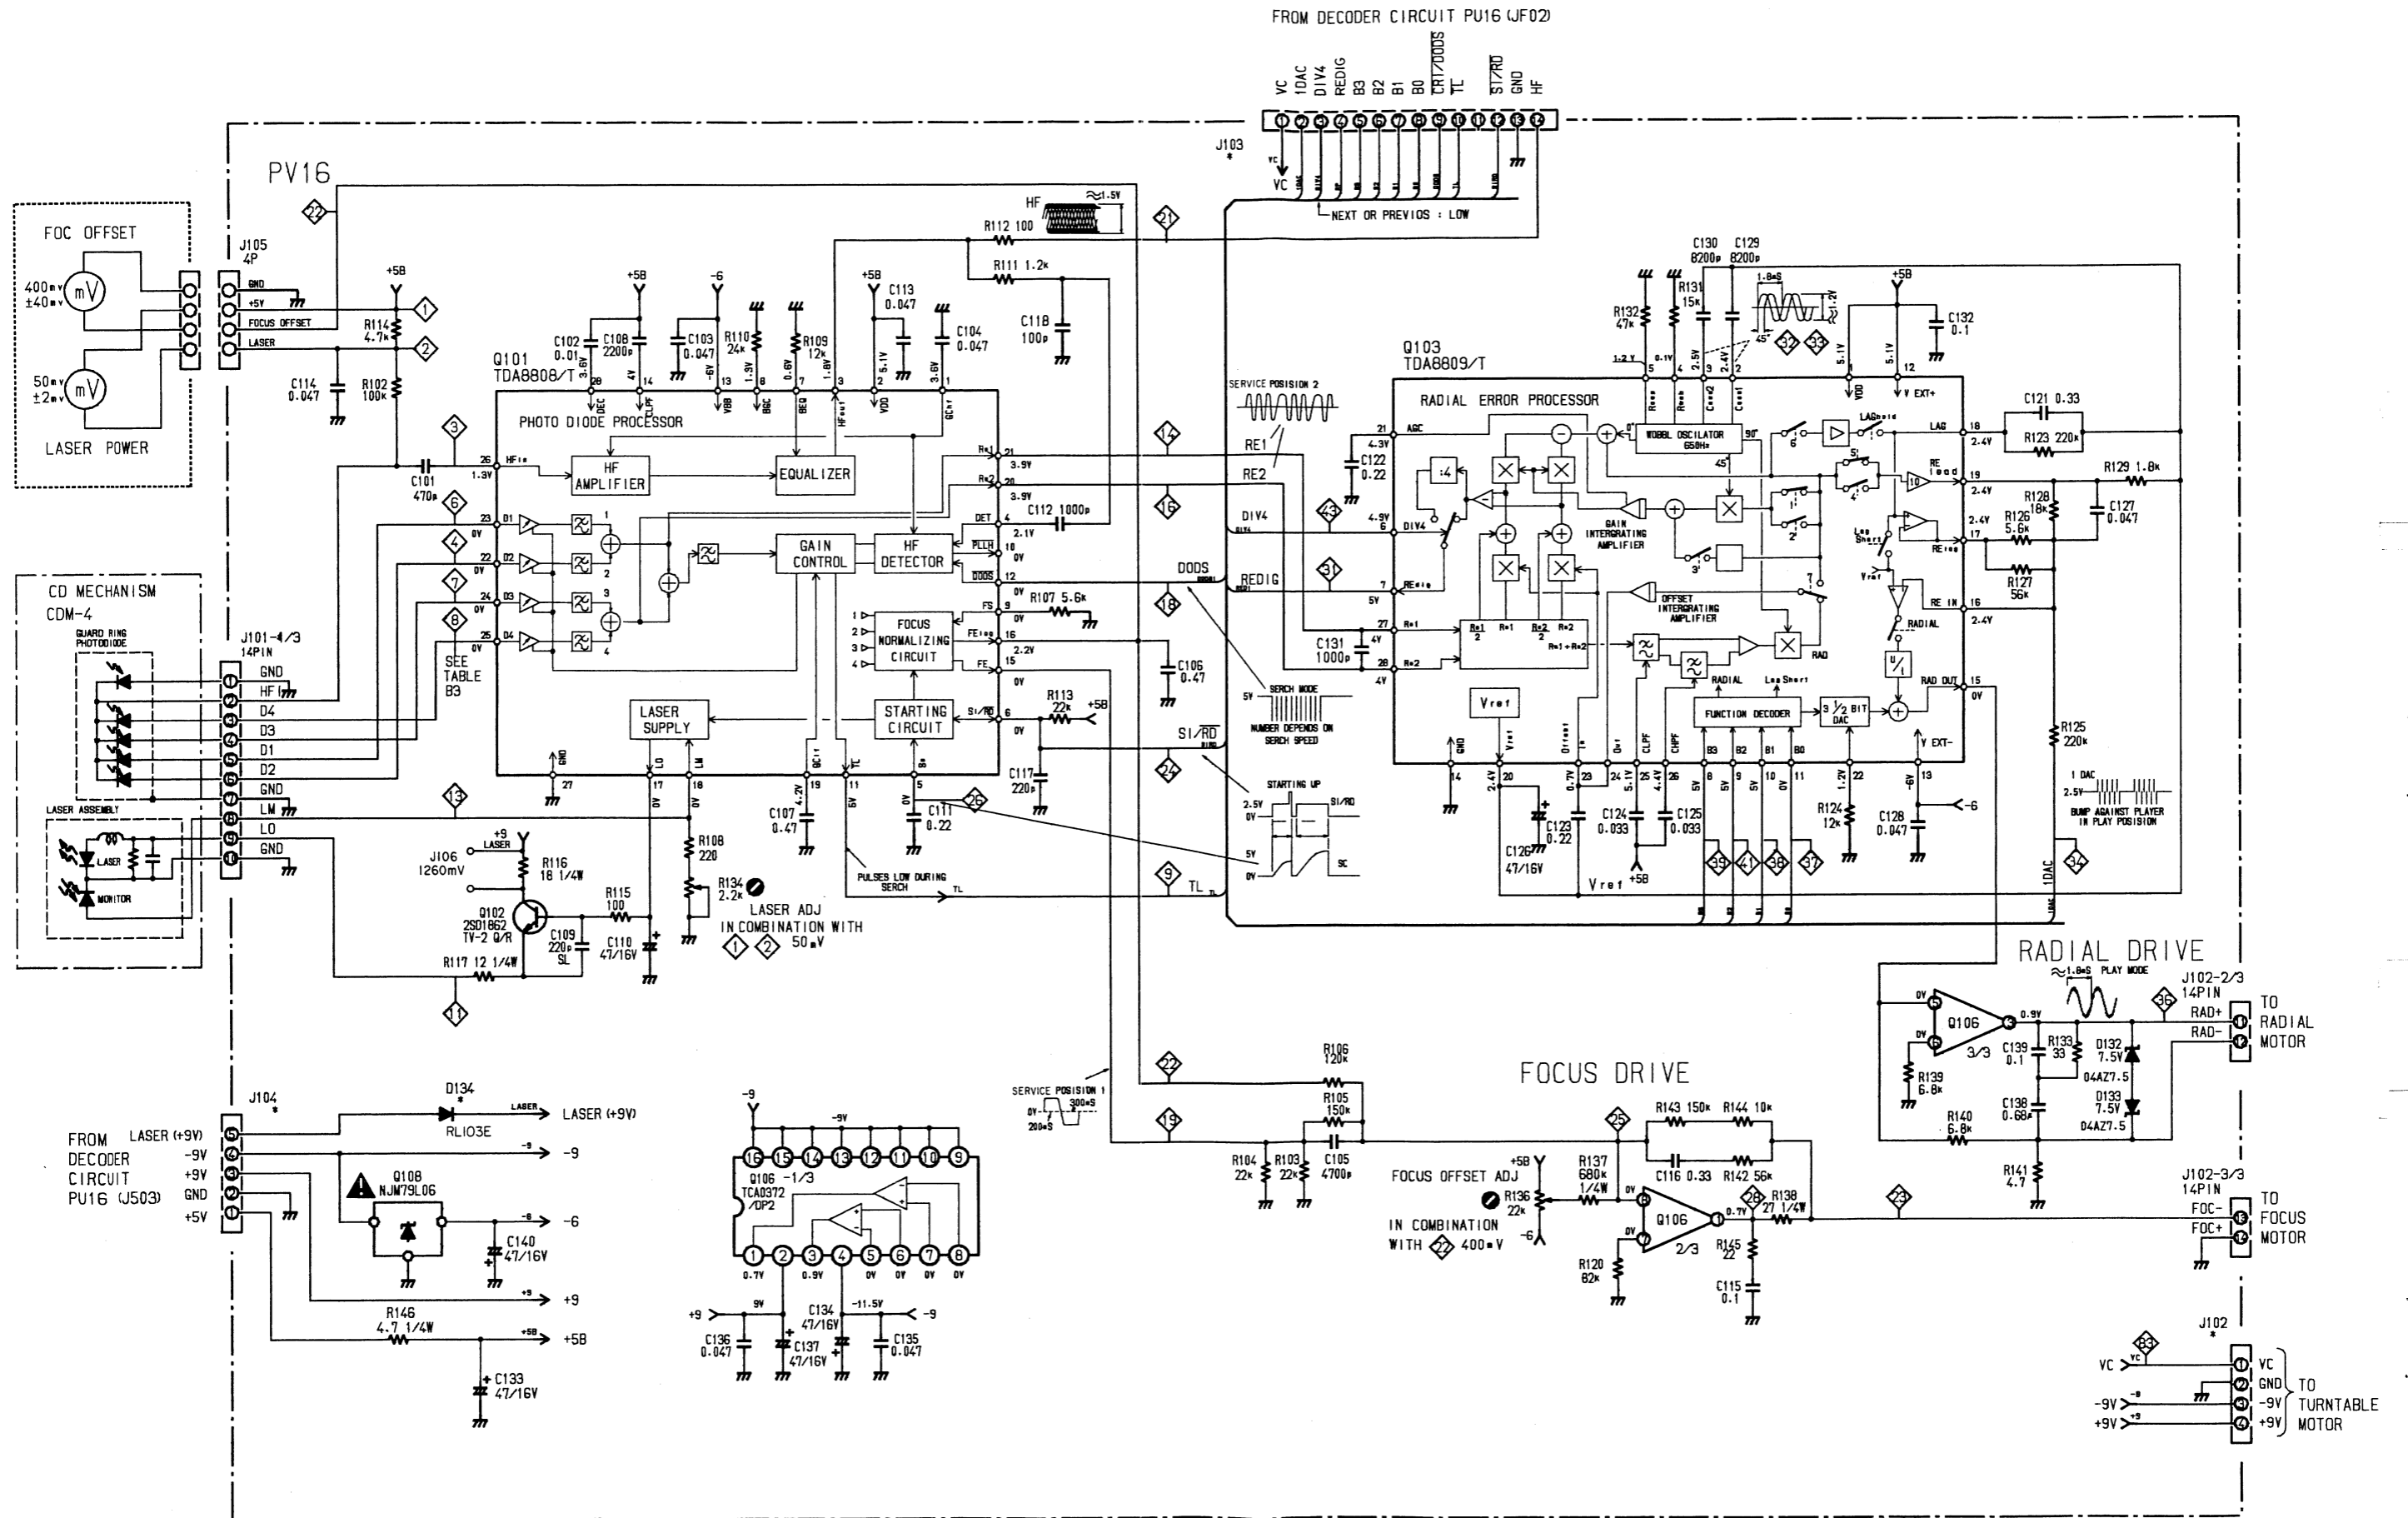

PV16 (PATTERN SIDE)

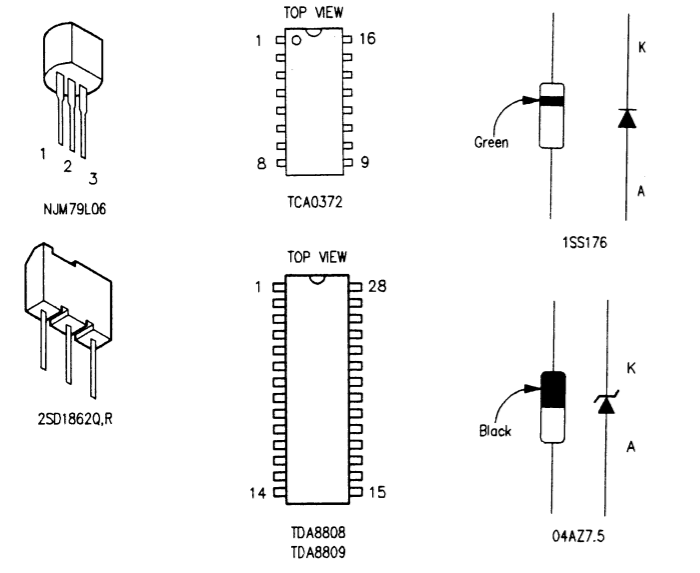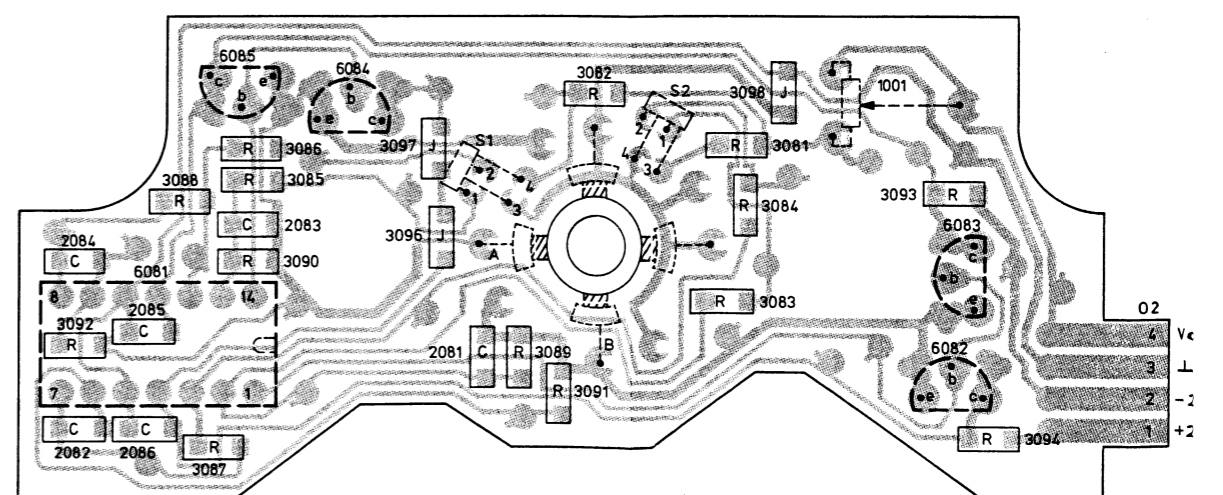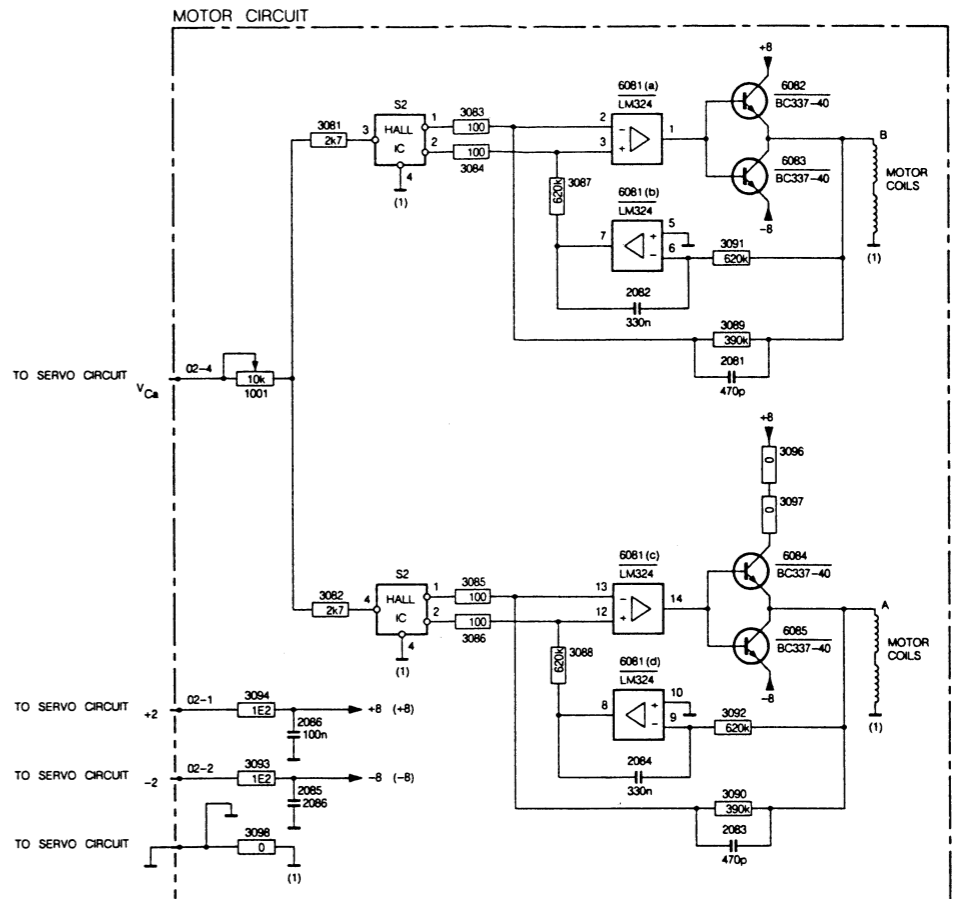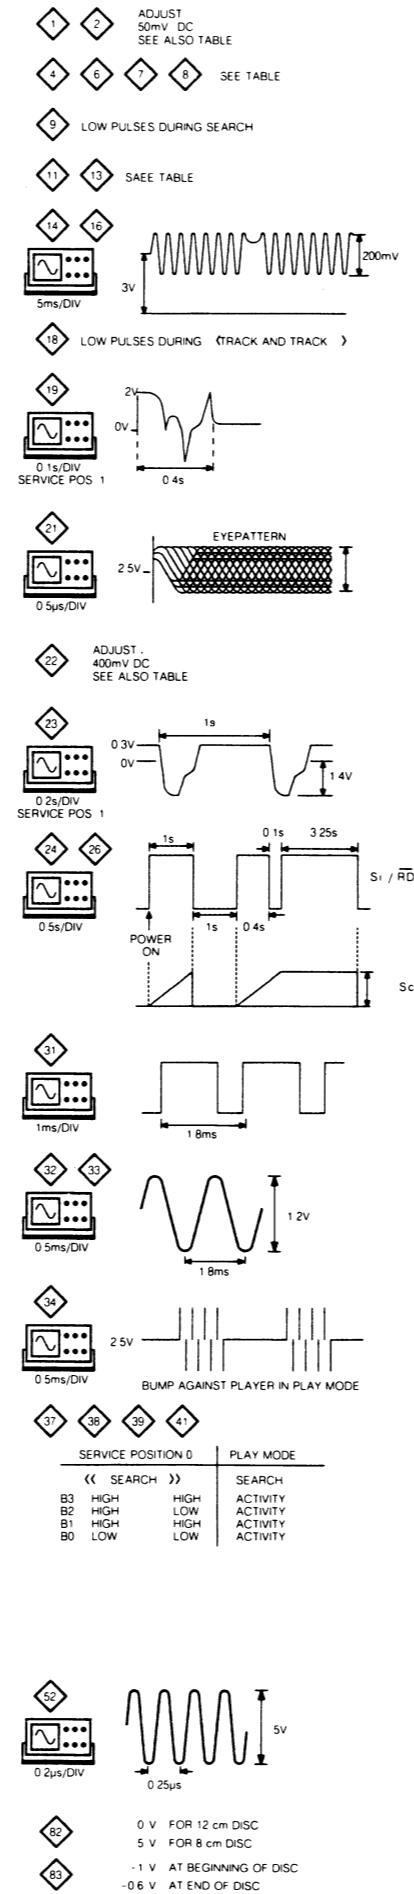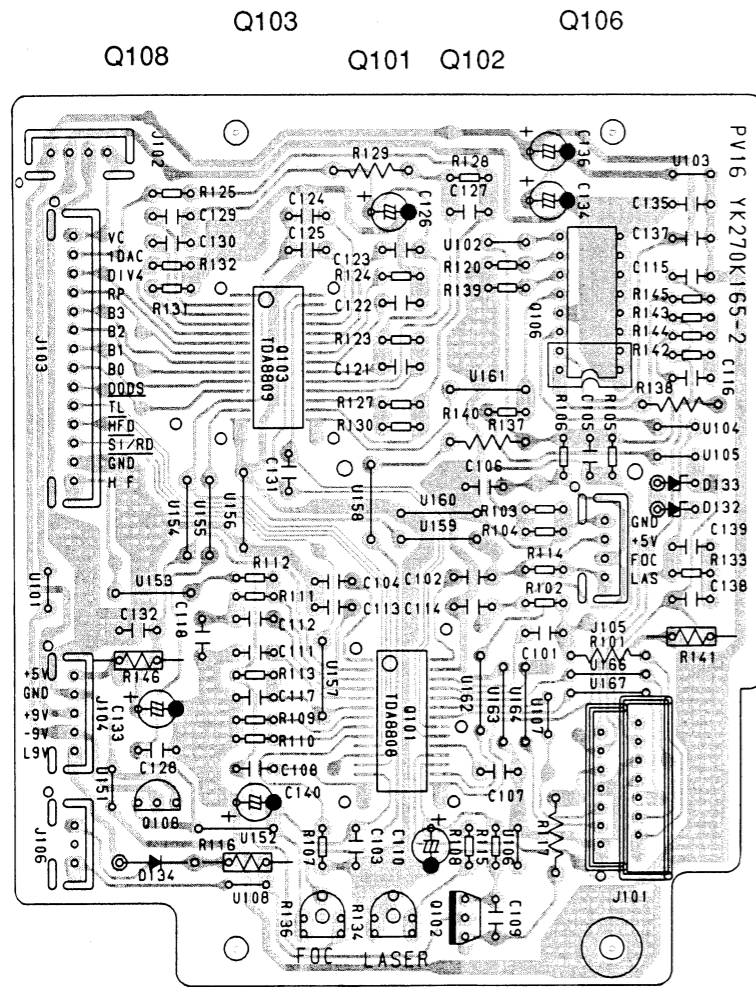



SERVICE POSITION 0		PLAY MODE	
<< SEARCH >>		SEARCH	
B3	HIGH	HIGH	ACTIVITY
B2	HIGH	LOW	ACTIVITY
B1	HIGH	HIGH	ACTIVITY
B0	LOW	LOW	ACTIVITY







PU16-1/2 CONTROL/DECODER

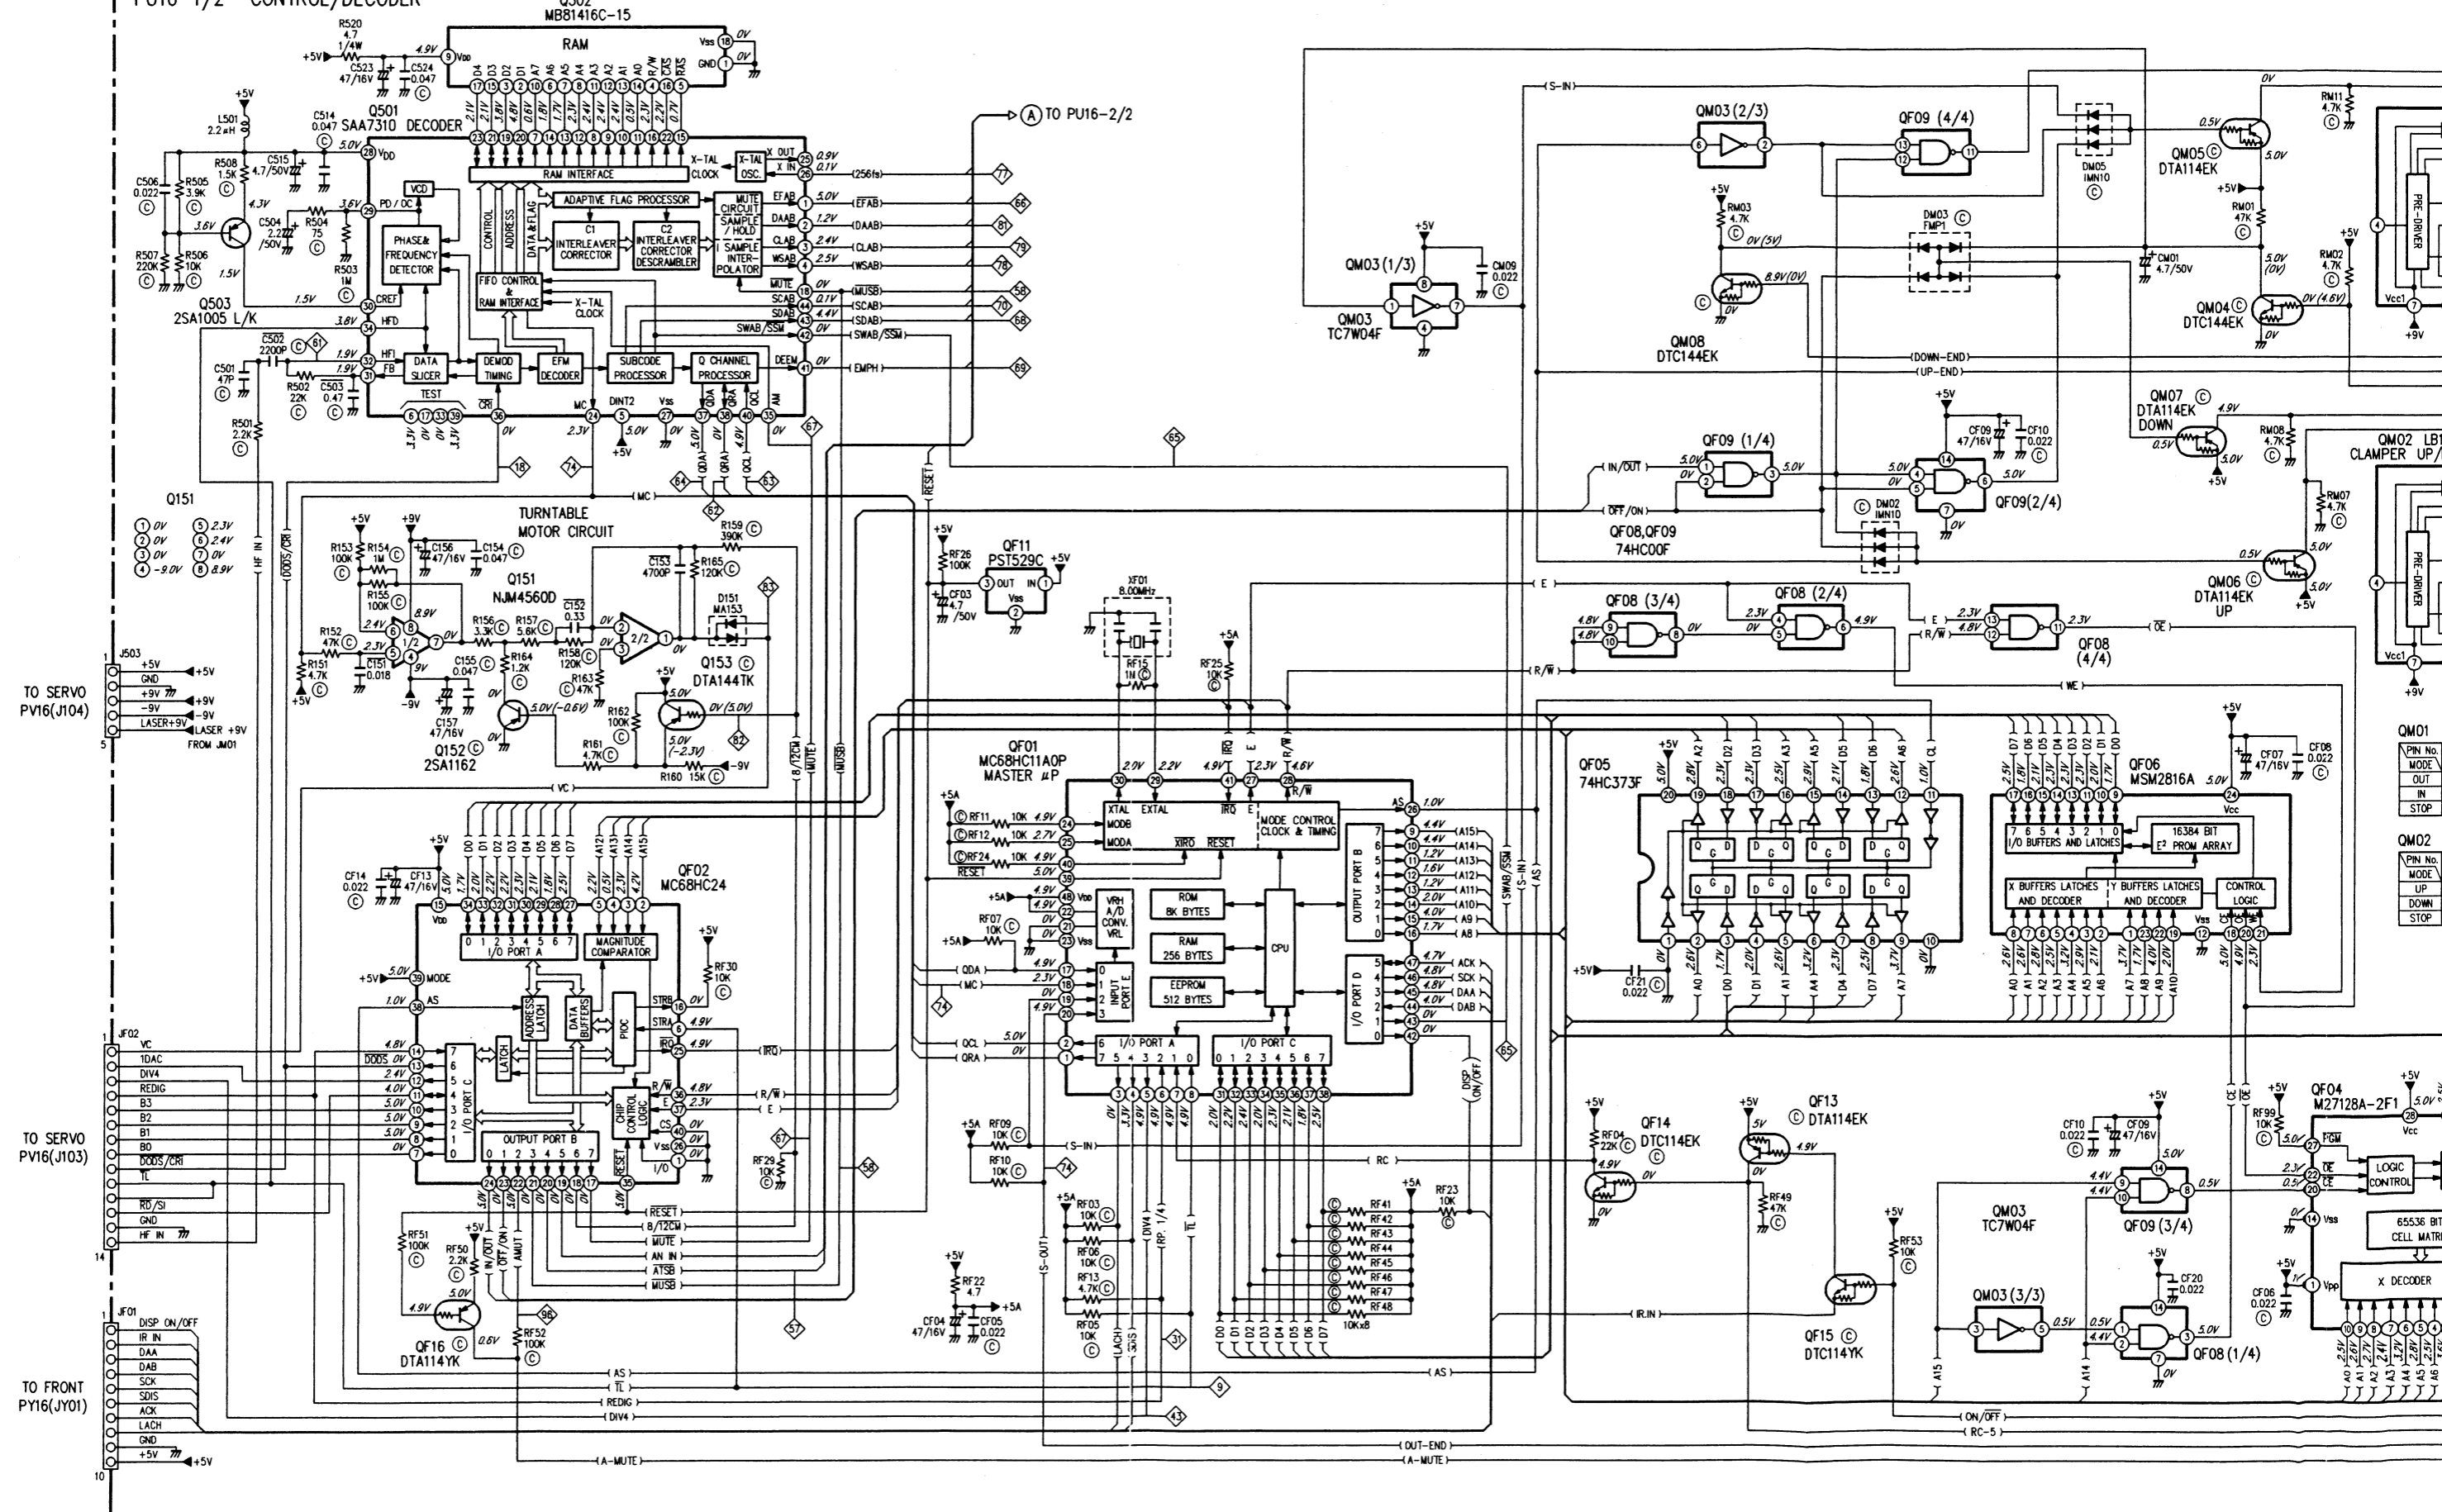

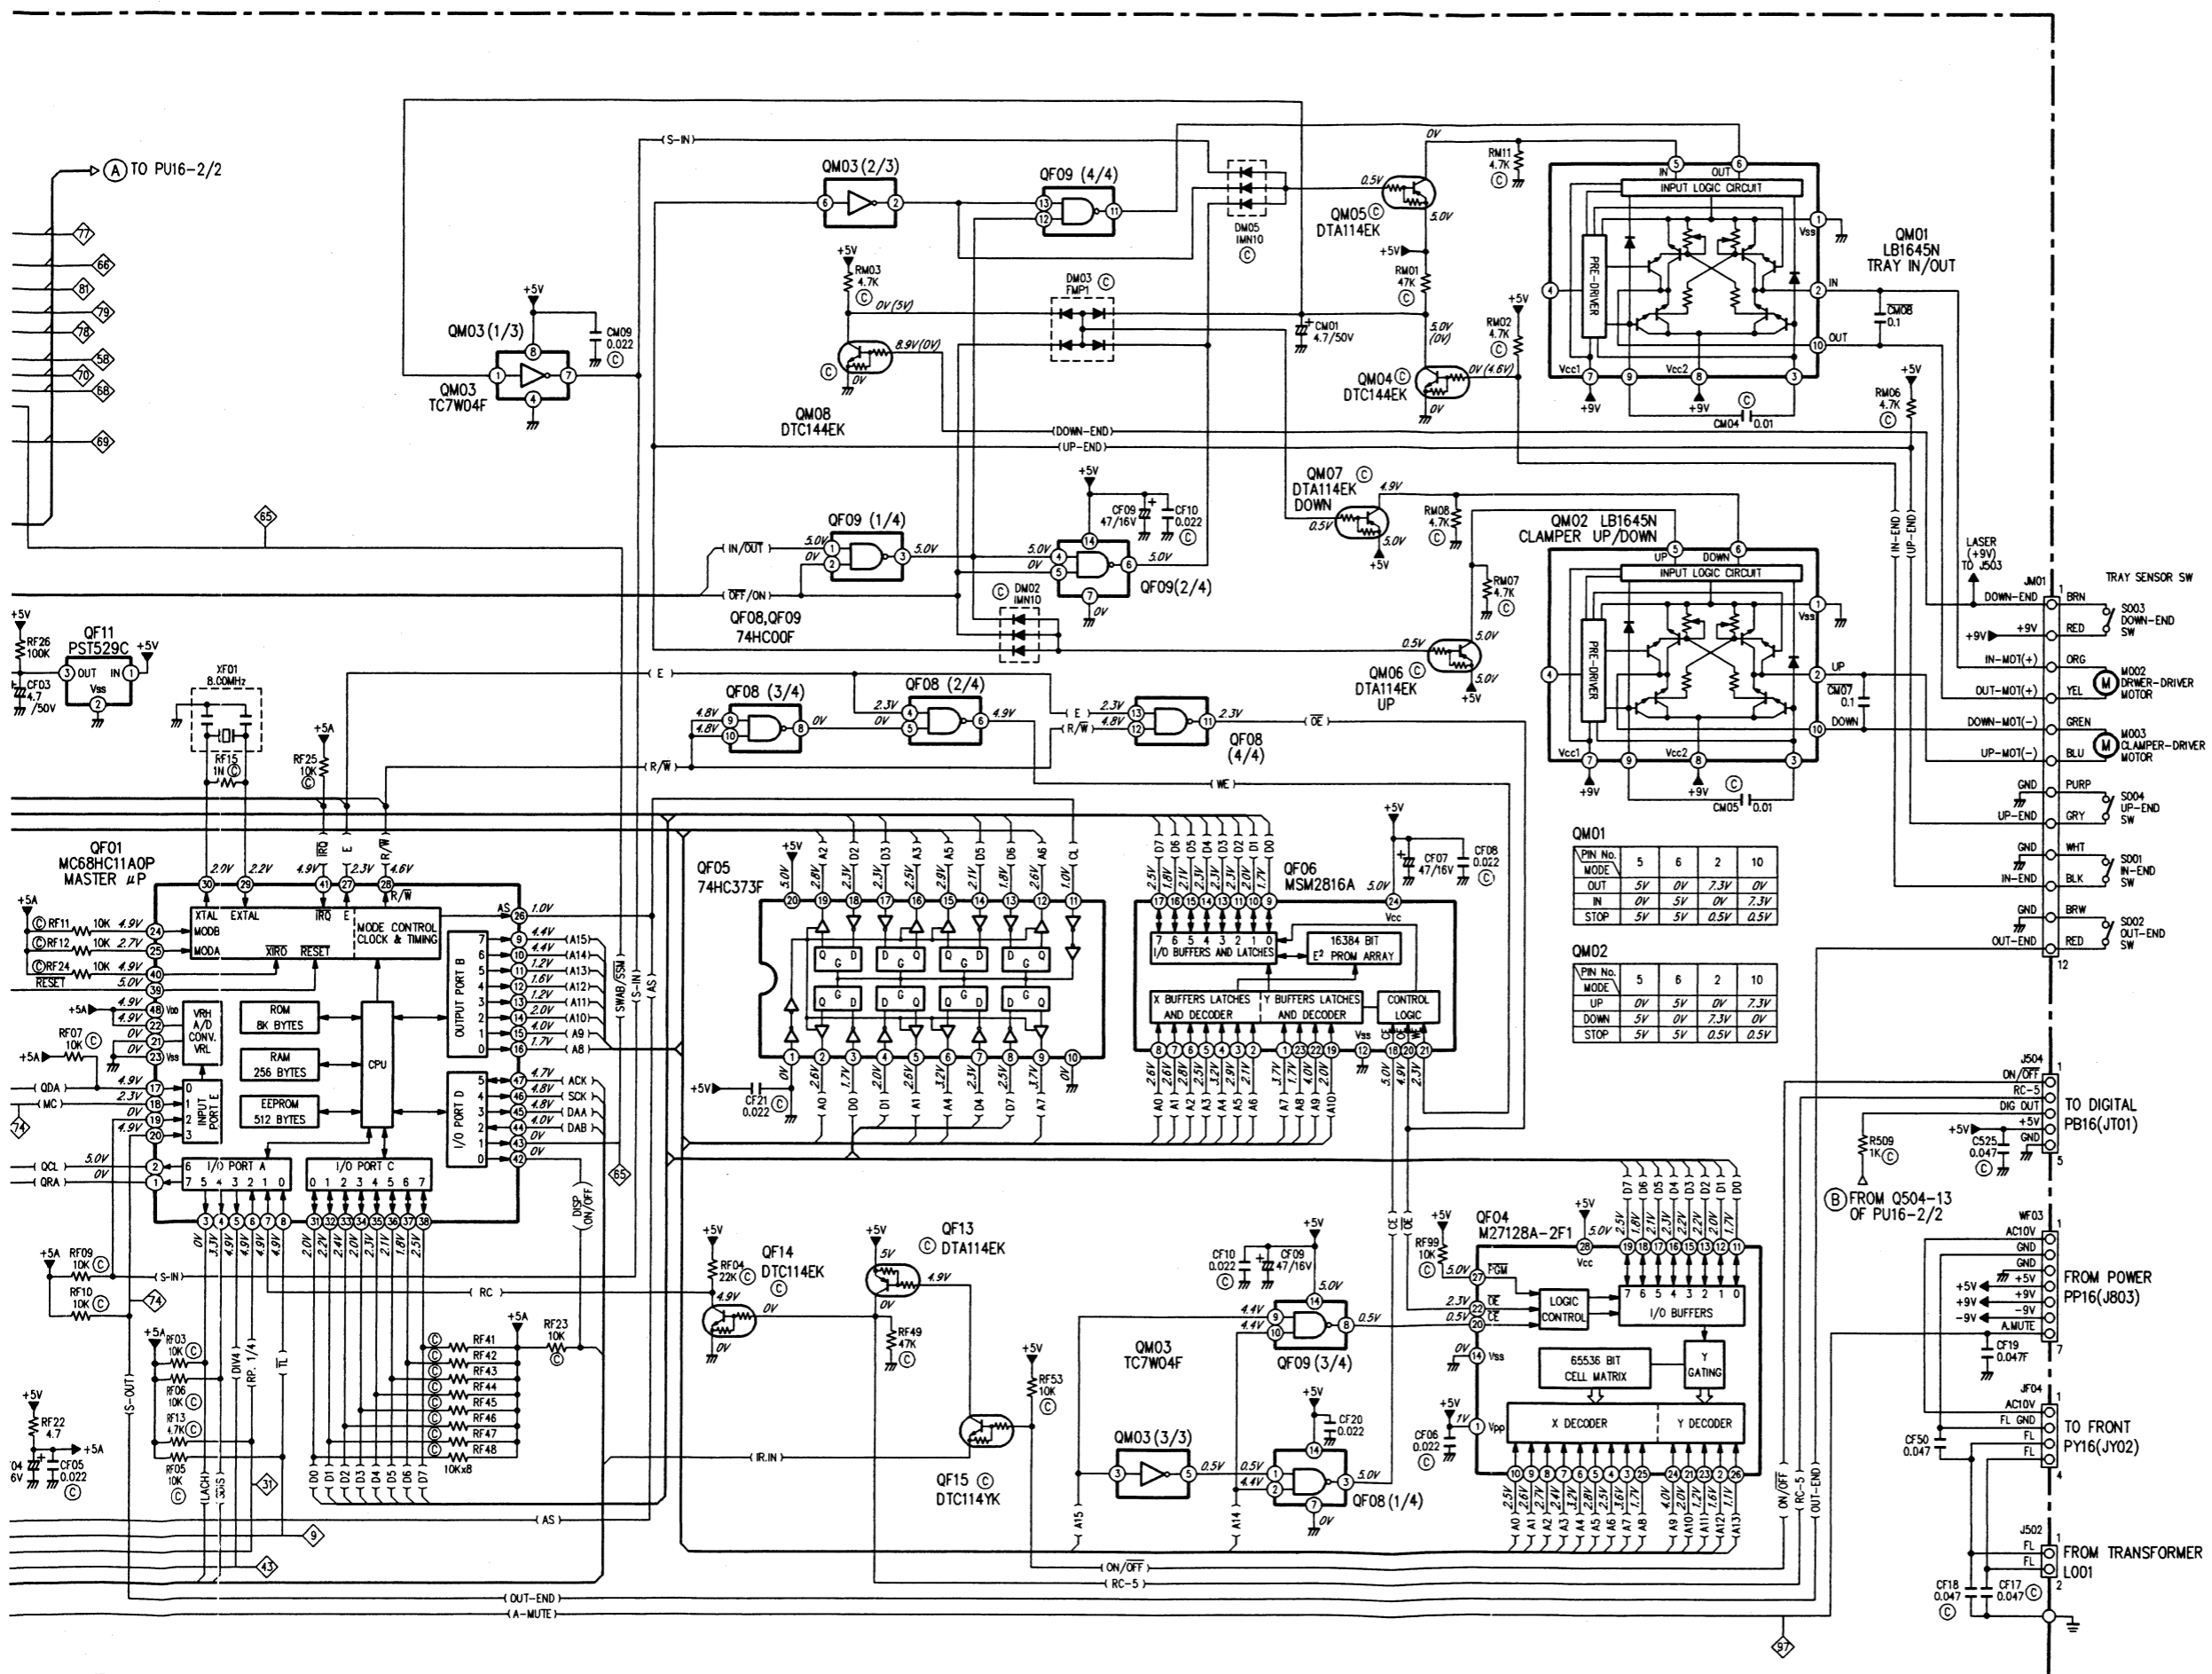



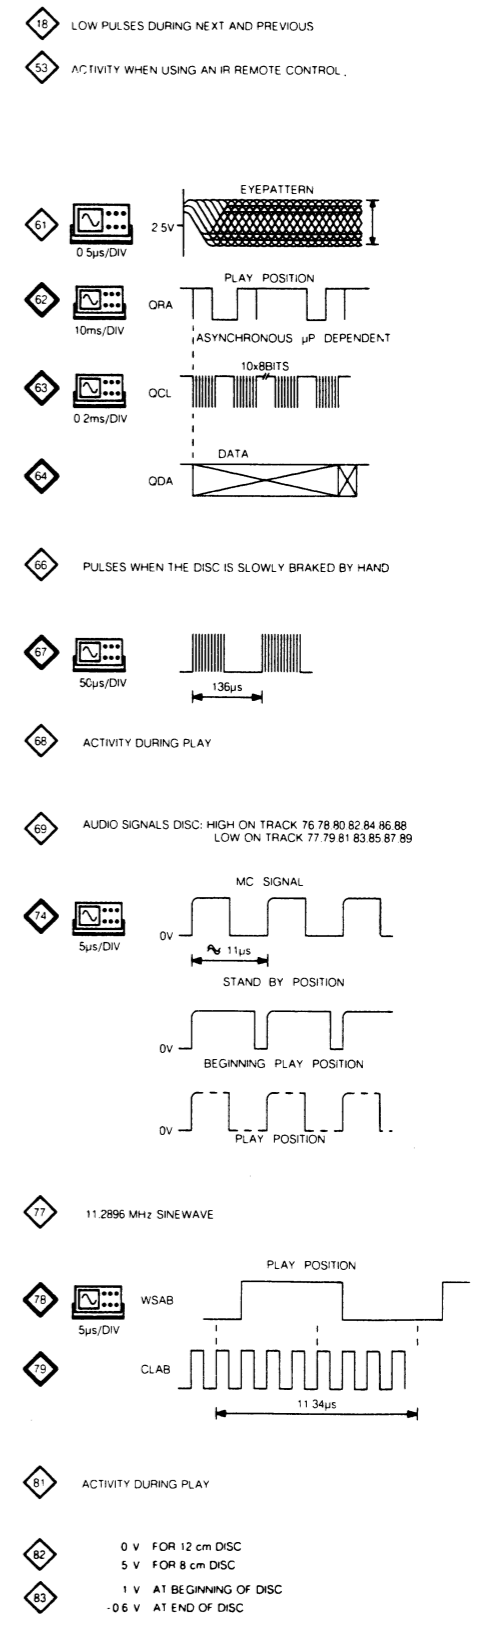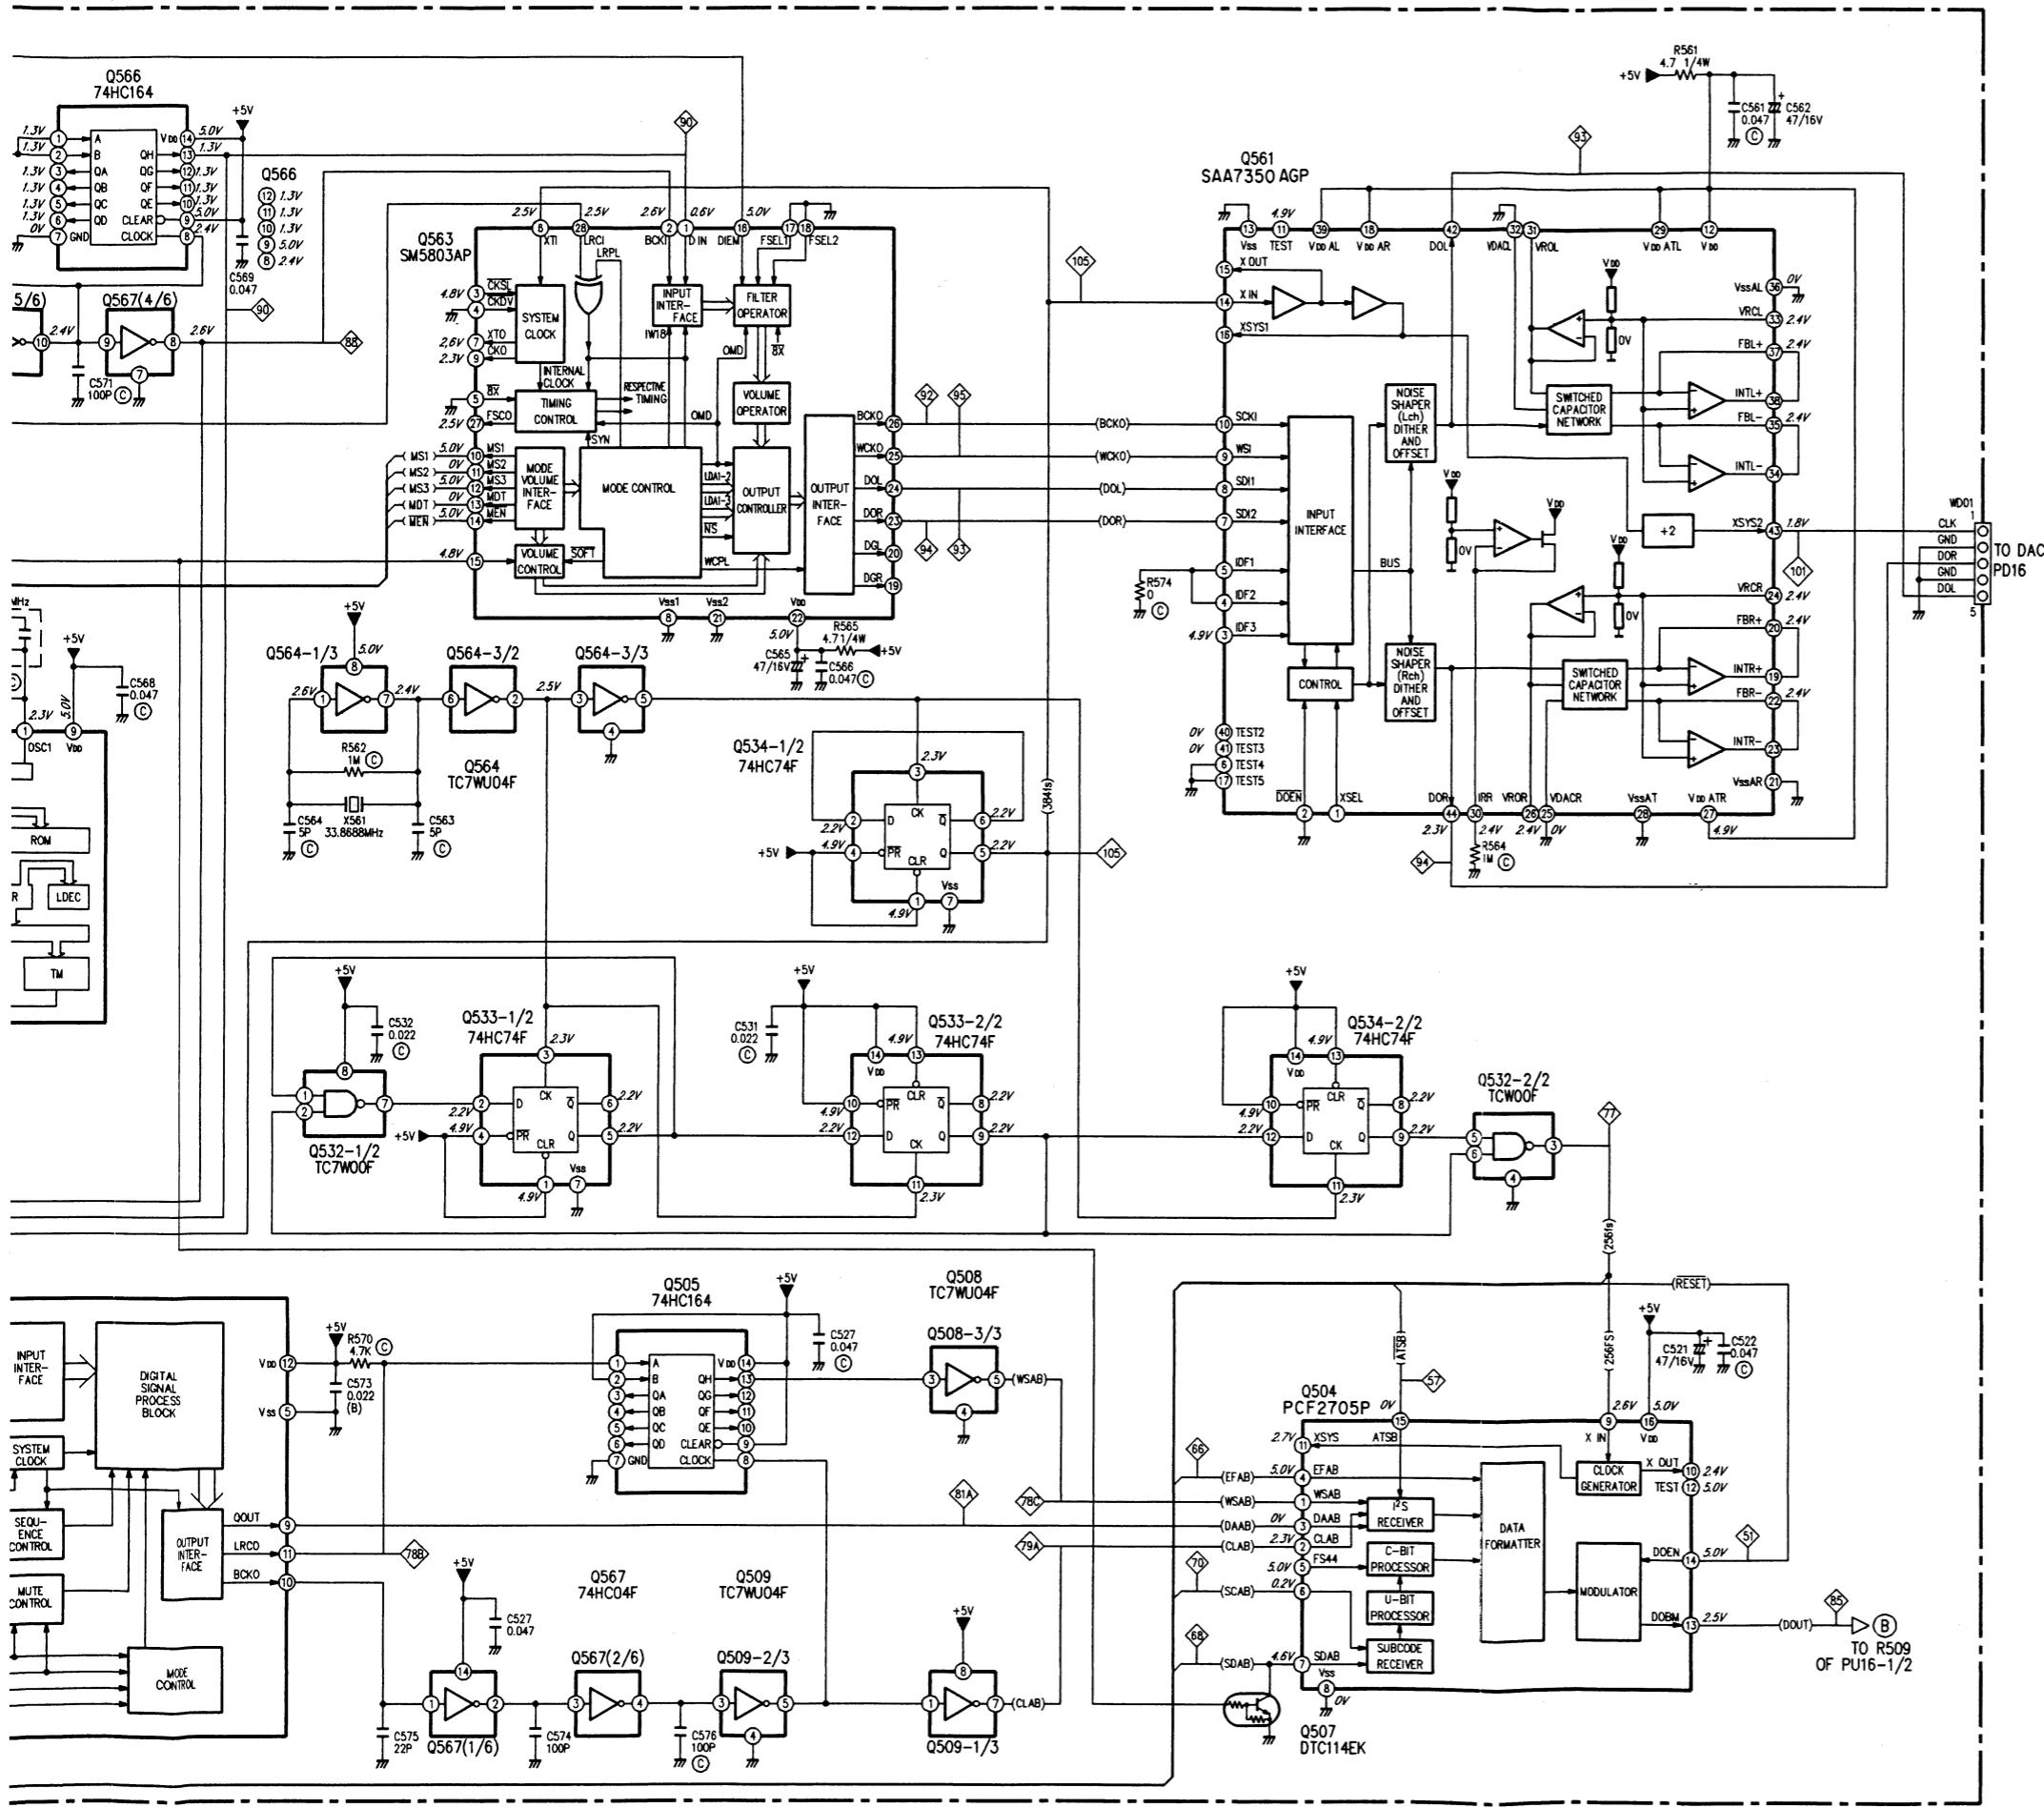

**QF01: MC68HC11AOP**

Pin No.	Port Name		I/O	ACT	Function	Pin No.	Port Name		I/O	ACT	Function
1	PA7	QRA	I	H	Q-channel Request Acknowledge	25	MOD A	MOD. A	I	H	Pull up
2	PA6	QCL	O	X	Q-channel CLK	26	AS	AS	O	X	ADDRESS STROBE
3	PA5	LACH	O	L	No use	27	E	E	O	H	Chip Enable
4	PA4	SDIS	I/O	X	Master or Slave $\mu$ PC select	28	R/W	R/W	O	X	Memory Write or Read
5	PA3	DIV4	O		DIVIDE REDIG PULS Control	29	EXTAL	XI	I		X. TAL in 8 MHz
6	PA2	RP 1/4	I	X	DIVIDED 1 or 1/4 REDIG PULS	30	XTAL	XO	O		X. TAL out
7	PA1	RC	I	X	RC-5 Pulse Data in put	31	PC0	D0	I/O	X	$\mu$ PC digital Data
8	PA0	PL	O	L	TRACK Loss out Signal input	32	PC1	D1	I/O	X	$\mu$ PC digital Data
9	PB7	A15	O	X	ADDRESS EXT Memory or IC	33	PC2	D2	I/O	X	$\mu$ PC digital Data
10	PB6	A14	O	X	ADDRESS EXT Memory or IC	34	PC3	D3	I/O	X	$\mu$ PC digital Data
11	PB5	A13	O	X	ADDRESS EXT Memory or IC	35	PC4	D4	I/O	X	$\mu$ PC digital Data
12	PB4	A12	O	X	ADDRESS EXT Memory or IC	36	PC5	D5	I/O	X	$\mu$ PC digital Data
13	PB3	A11	O	X	ADDRESS EXT Memory or IC	37	PC6	D6	I/O	X	$\mu$ PC digital Data
14	PB2	A10	O	X	ADDRESS EXT Memory or IC	38	PC7	D7	I/O	X	$\mu$ PC digital Data
15	PB1	A9	O	X	ADDRESS EXT Memory or IC	39	RESET	RESET	I	L	Reset
16	PB0	A8	O	X	ADDRESS EXT Memory or IC	40	XIRQ	XIRQ	I	H	Pull up
17	PE0	QDA	I	X	Q-channel Data input	41	IRQ	RQ	I	L	INTERRUPT REQUEST
18	PE1	MC	I	X	CLV Motor control PULS	42	PD0	DISP	O	H	Display ON/OFF
19	PE2	SIN	I	L	Loading Tray in End	43	PD1	SWAB/SSM	O	H	CLV control ON/OFF
20	PE3	SOUT	O	L	Loading Tray out End	44	PD2	DATA I	I	X	$\mu$ PC digital data in
21	VRL	VRL	I	L	Gnd	45	PD3	DATA OUT	O	X	$\mu$ PC digital data out
22	VRH	VRH	I	H	+5V	46	PD4	SCK	I/O	X	$\mu$ PC digital data CLK
23	VSS	VSS			Gnd	47	PD5	ACK	I/O	X	$\mu$ PC digital data Acknowledge
24	MOD B	MOD. B	I	H	Pull up	48	VDD	VDD			

**QY01:  $\mu$ PD7537ACU**


Pin No.	Port Name		I/O	ACT	Function	Pin No.	Port Name		I/O	ACT	Function
1	REST	REST	I	H	Reset	22	P93	P	O	H	Digital out put
2	CL1	CL1	I		OSC 590KHz in	23	P92	O	O	H	Digital out put
3	CL2	CL2	O		OSC 590KHz out	24	P91	N	O	H	Digital out put
4	V <sub>PRE</sub>	V <sub>PRE</sub>	I		PRI Driver power Source	25	P90	M	O	H	Digital out put
5	V <sub>LOAD</sub>	V <sub>LOAD</sub>	I		Power Supply for display	26	P83	L	O	H	Digital out put
6	P53	NOMAL	I	H	Pull up	27	P82	K	O	H	Digital out put
7	P52	A. PAUSEL	I	H	Pull up	28	P81	J	O	H	Digital out put
8	P51	GND	I	L	Pull down	29	P80	I	O	H	Digital out put
9	P50	GND	I	L	Pull down	30	P43	K1	I	H	Key input
10	P23	ACK	I/O	X	Acknowledge	31	P42	K2	I	H	Key input
11	P22	A. B	O	H	Segment Data	32	P41	K3	I	H	Key input
12	P21	CLK	O	H	Segment Data clock	33	P40	K4	I	H	Key input
13	P103	T	O	H	Digital out put	34	P33	H	O	H	Digital out put
14	P102	S	O	H	Digital out put	35	P32	G	O	H	Digital out put
15	P101	R	O	H	Digital out put	36	P31	F	O	H	Digital out put
16	P100	Q	O	H	Digital out put	37	P30	E	O	H	Digital out put
17	P113	D	O	H	Digital out put	38	P03	DAA	I	X	Data input from Master up
18	P112	C	O	H	Digital out put	39	P02	DAB	O	X	Data output for Master up
19	P111	B	O	H	Digital out put	40	P01	SCK	I/O	X	Data CLOCK
20	P110	A	O	H	Digital out put	41	P00	SDIS	I/O	X	Master or Slave up Select
21	VDD	VDD			+5V	42	VSS	GND			Gnd

**Q562: LC6528CH**


Pin No.	Port Name		I/O	ACT	Function	Pin No.	Port Name		I/O	ACT	Function
1	OSC1	OSC1	I		OSC 4MHz in	10	PC0	ATSB	I	L	-12dB ATT
2	TEST	GND	I	-	Gnd	11	PC1	MS1	O	X	Digital Filter Control
3	VSS	GND	-	-	Gnd	12	PC2	MS2	O	X	Digital Filter Control
4	RES	RES	I	L	Reset	13	PC3	MS3	O	X	Digital Filter Control
5	PA0	GND	I	L	Gnd	14	PD0	MDT	O	X	Digital Filter Control
6	PA1	OPEN	I	H	Open	15	PD1	MEN	O	X	Digital Filter Control
7	PA2	OPEN	I	H	Open	16	PD2	OPEN	I	H	Open
8	PA3	OPEN	I	H	Open	17	PD3	GND	I	L	Gnd
9	VDD	VDD			+5V	18	OSC2	OSC2	O		OSC 4MHz out



PD16 DAC OUT

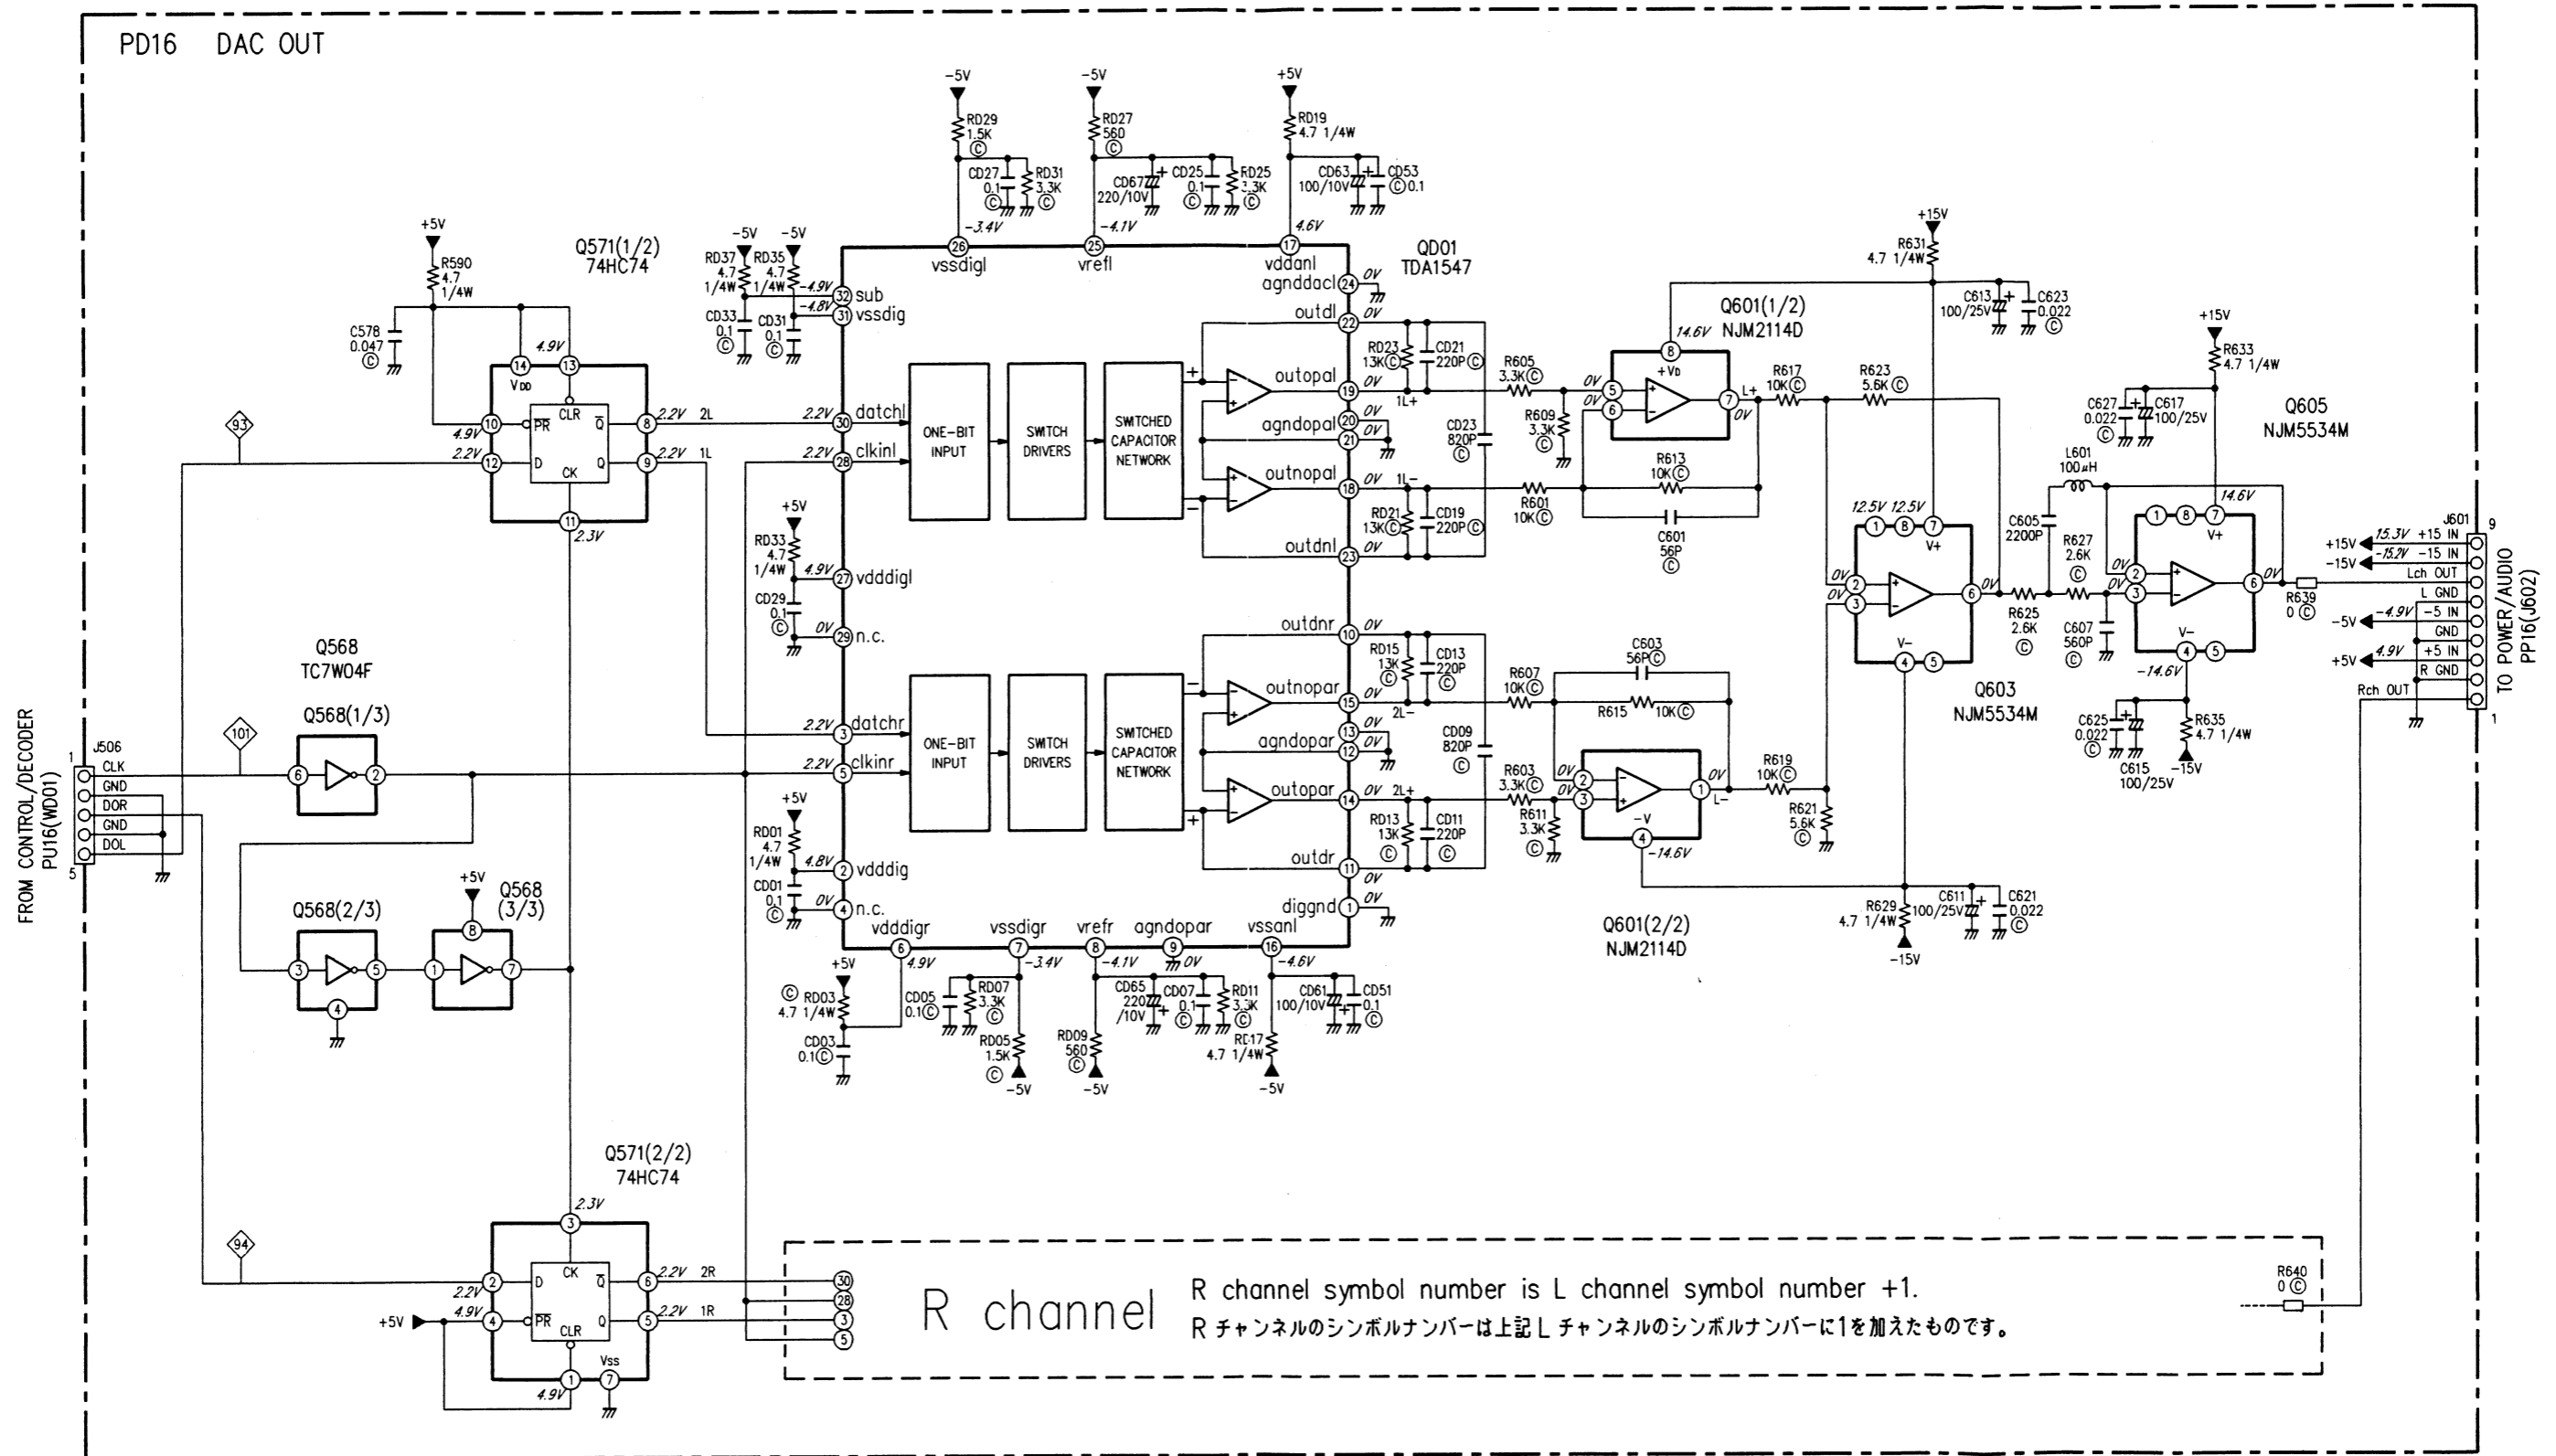


R channel R channel symbol number is L channel symbol number +1.  
 Rチャンネルのシンボルナンバーは上記Lチャンネルのシンボルナンバーに1を加えたものです。

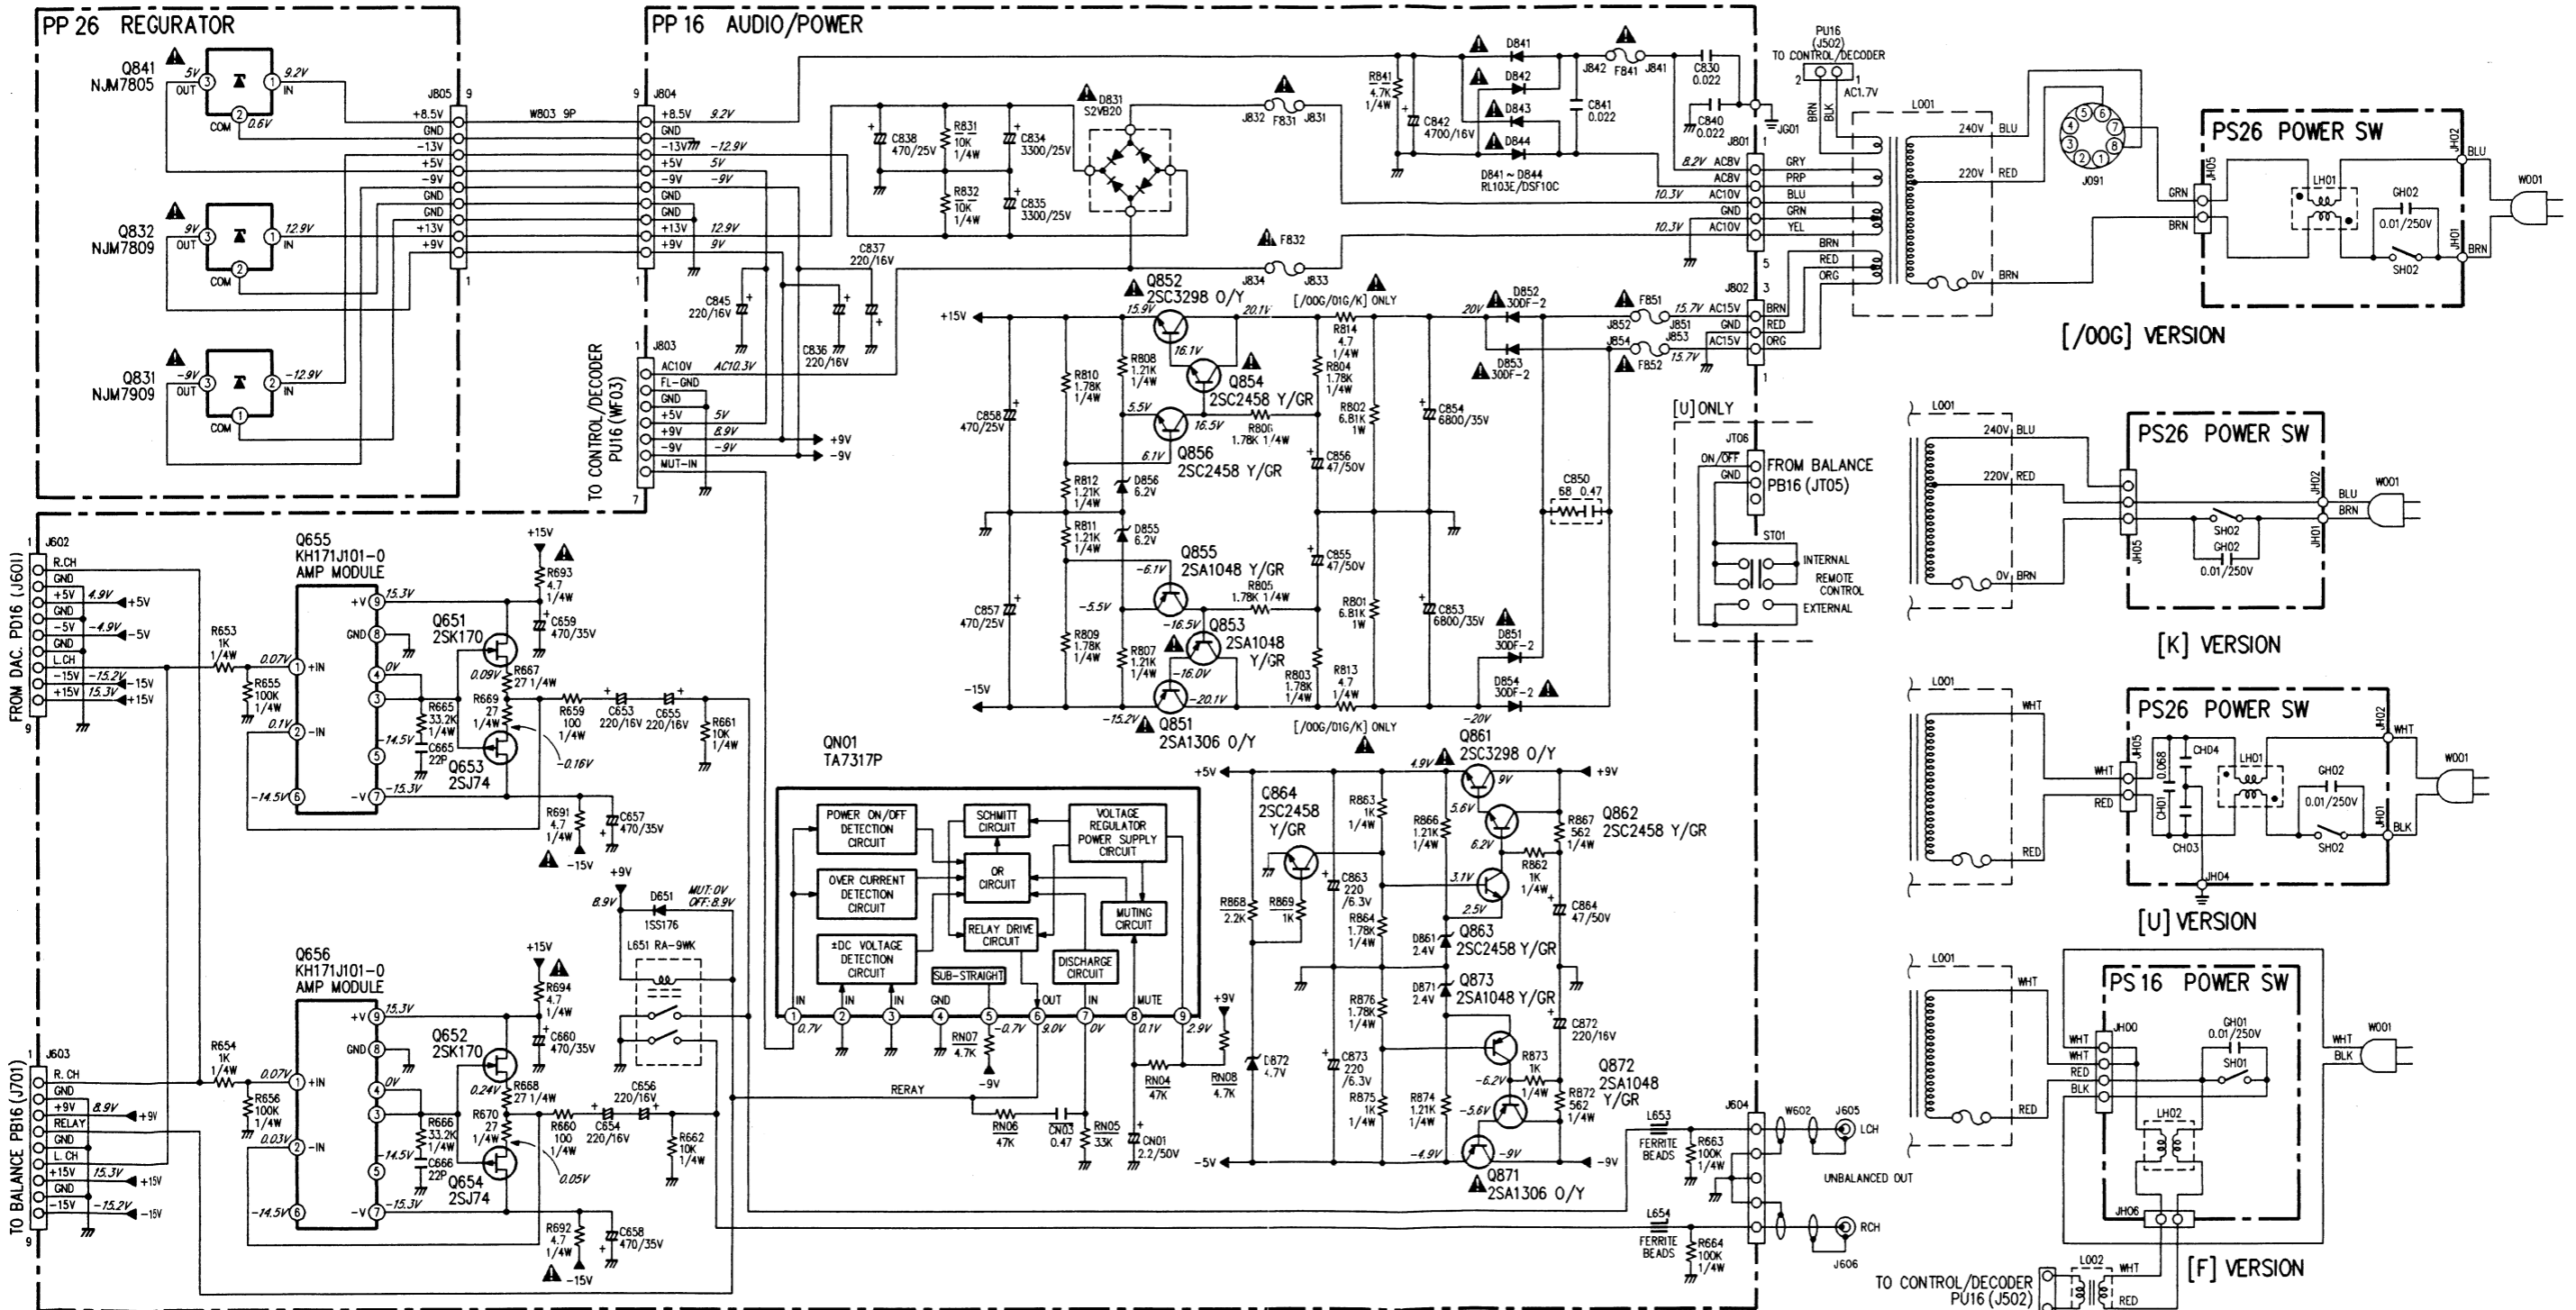





PP16 (PATTERN SIDE)

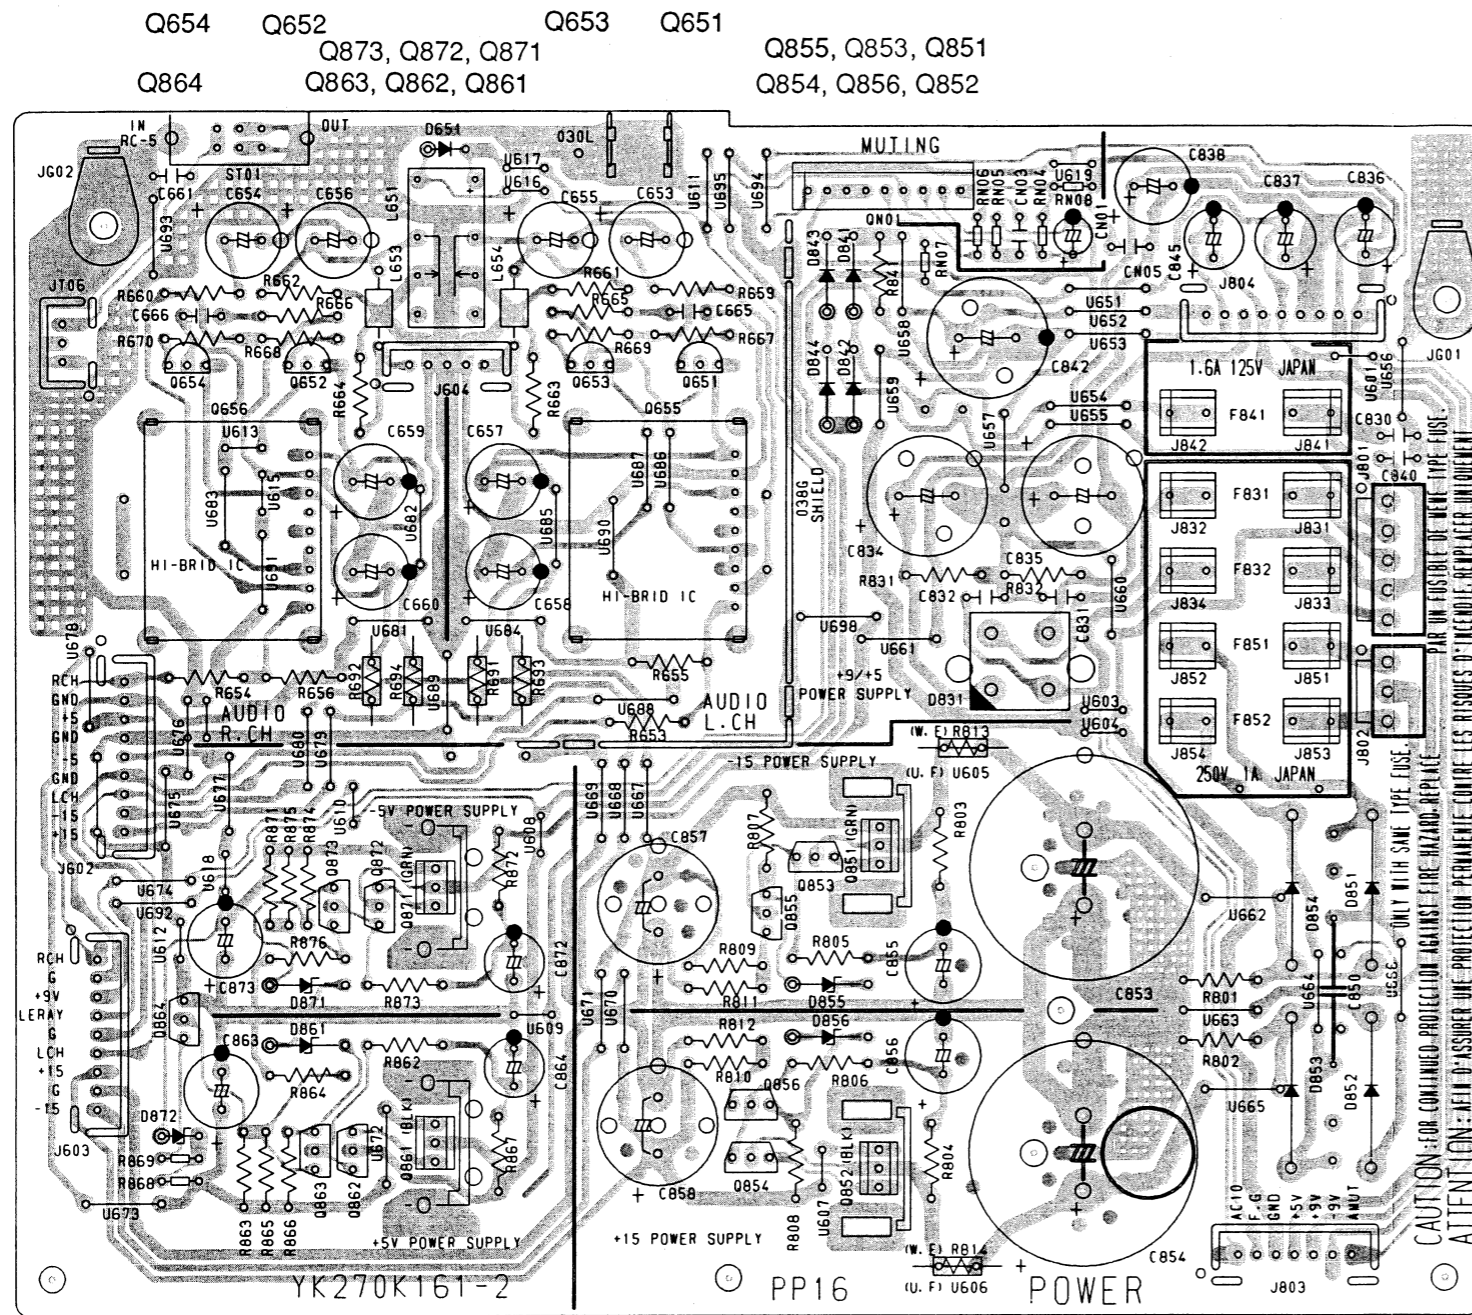





PS26 (PATTERN SIDE)

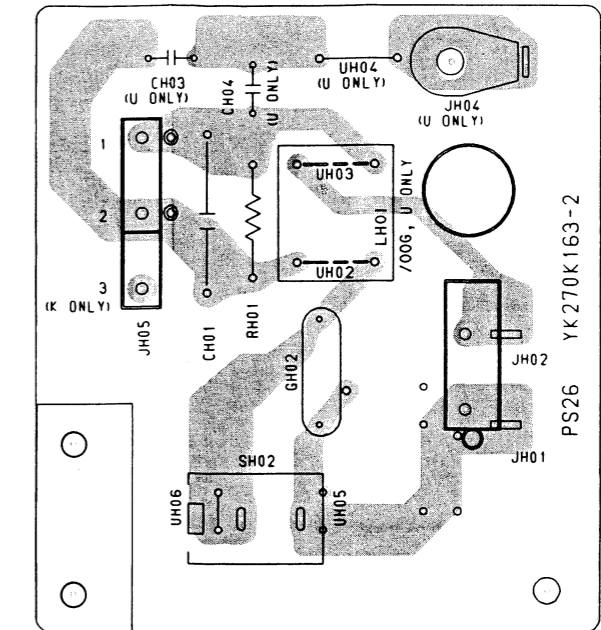

PS16 [F] VERSION

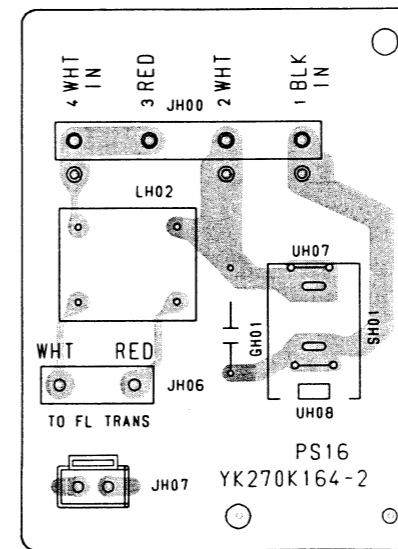


PP26 (PATTERN SIDE)

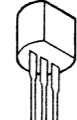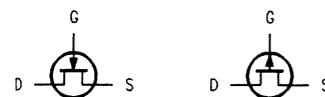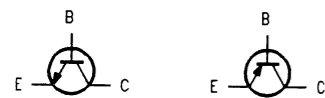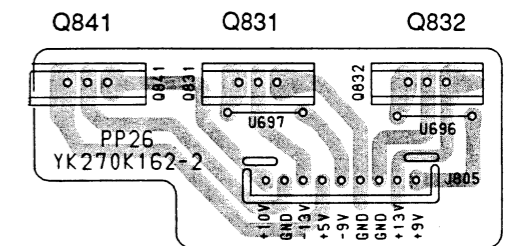


2S174 BL  
2S170 BL




2SC245B Y/GR  
2CA104B Y/GR

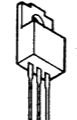


2SC3298 O/Y  
2SA1306 O/Y

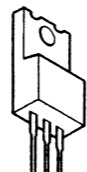


NJM7909FA  
NJM7809FA  
NJM7805FA

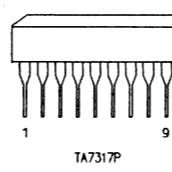


TA7317P

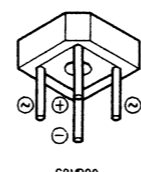


S2V820

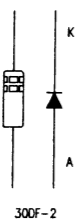


300F-2

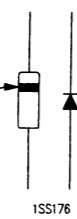


1SS176

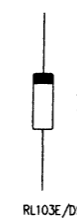

RL103E/DSF10C

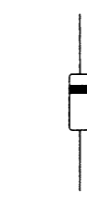



HZ6L  
HZ2CLL

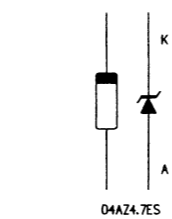

04A24.7E5

Q655 / Q656

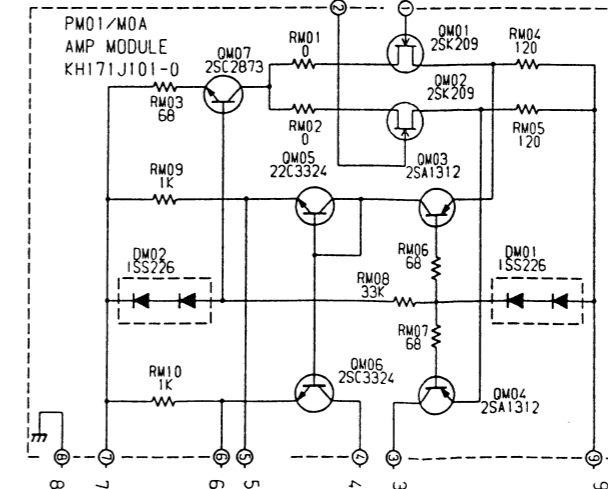

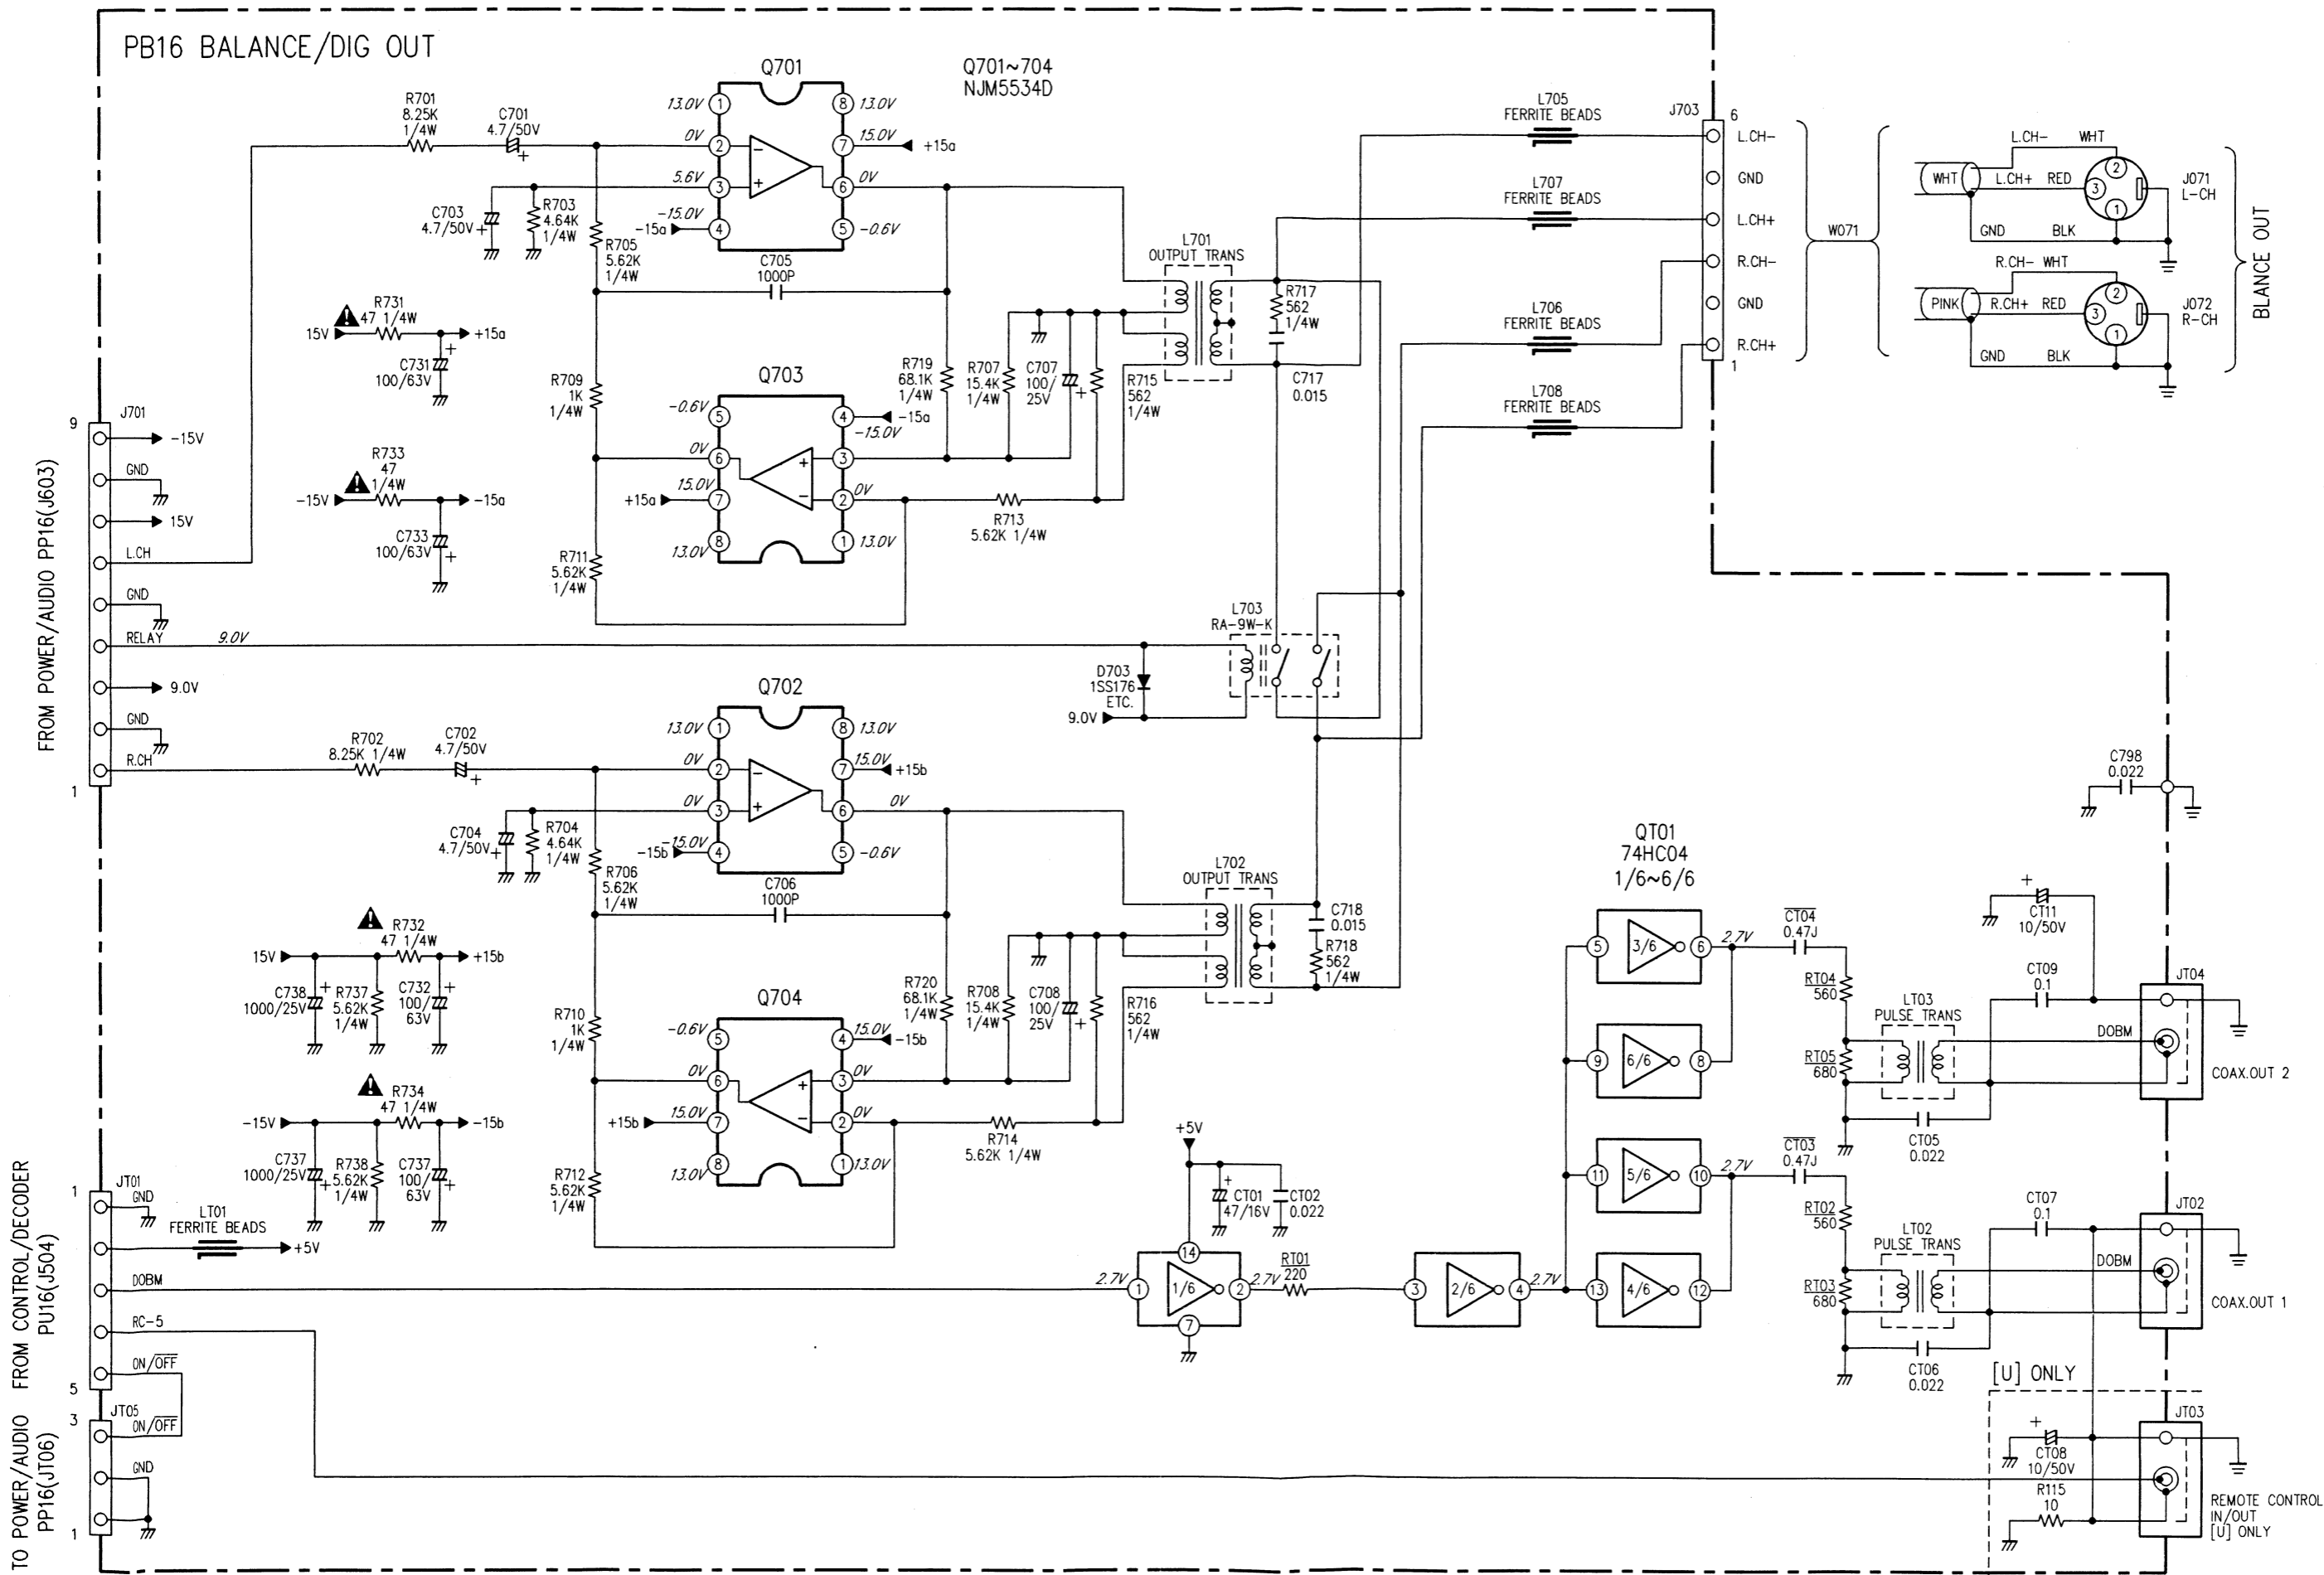

PB16 (PATTERN SIDE)

QT01, QT02


Q704

Q702

Q701



Q703

YK270K142-2  
PB16

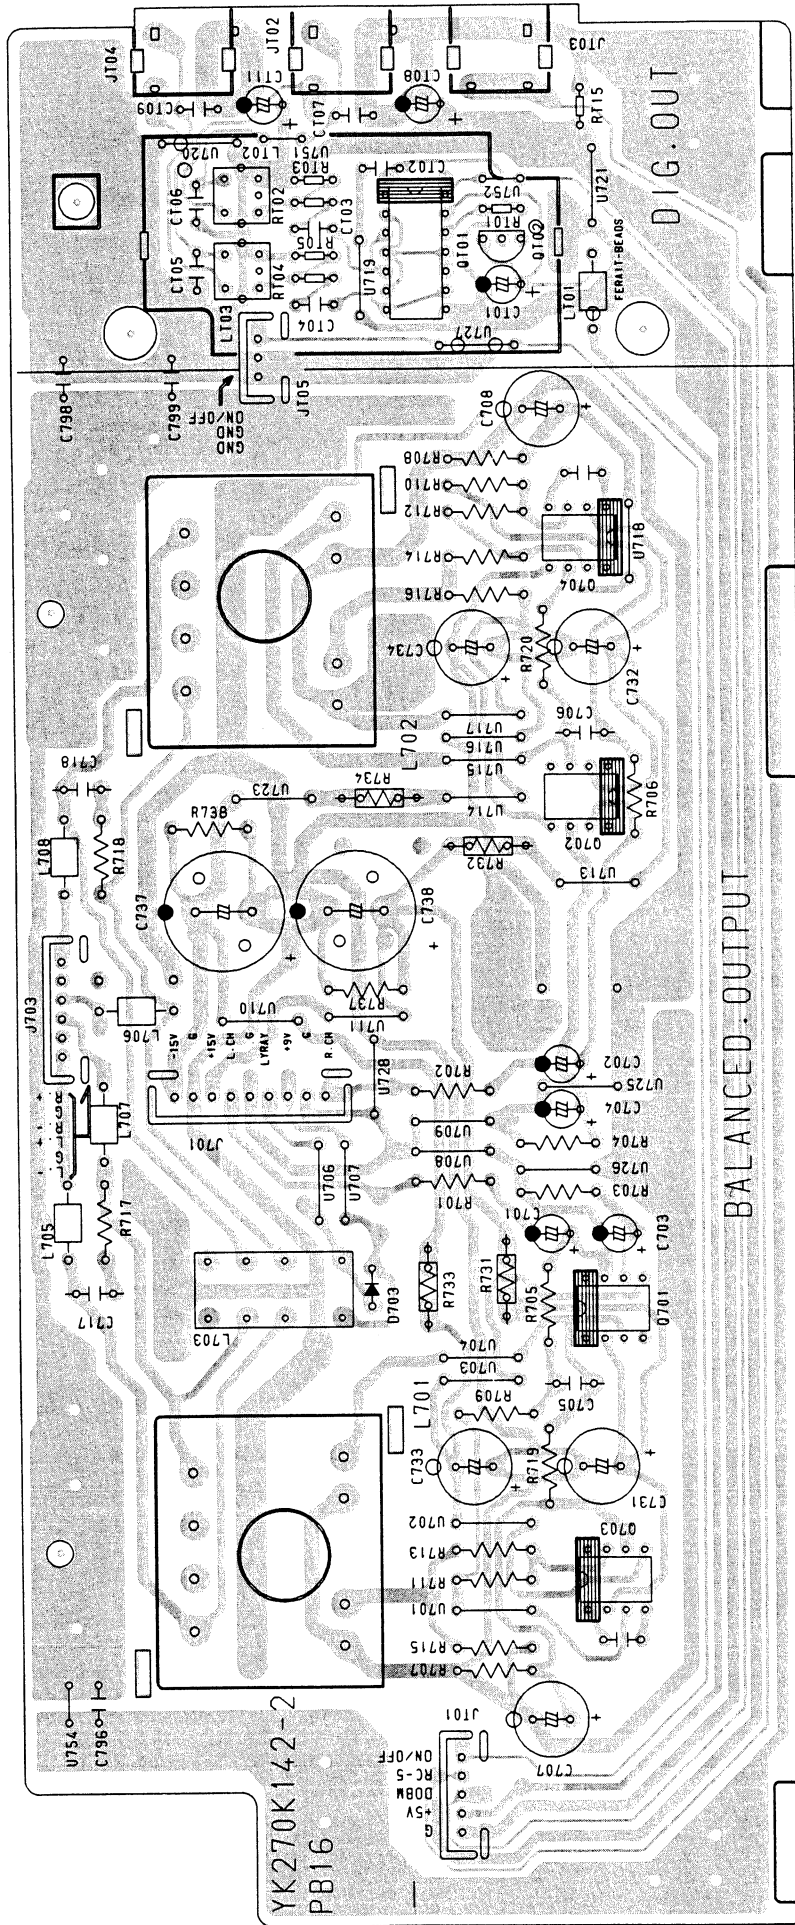

DIG. OUT


BALANCED OUTPUT

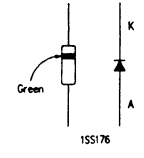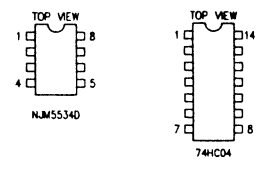



15S176



PY16 DISPLAY

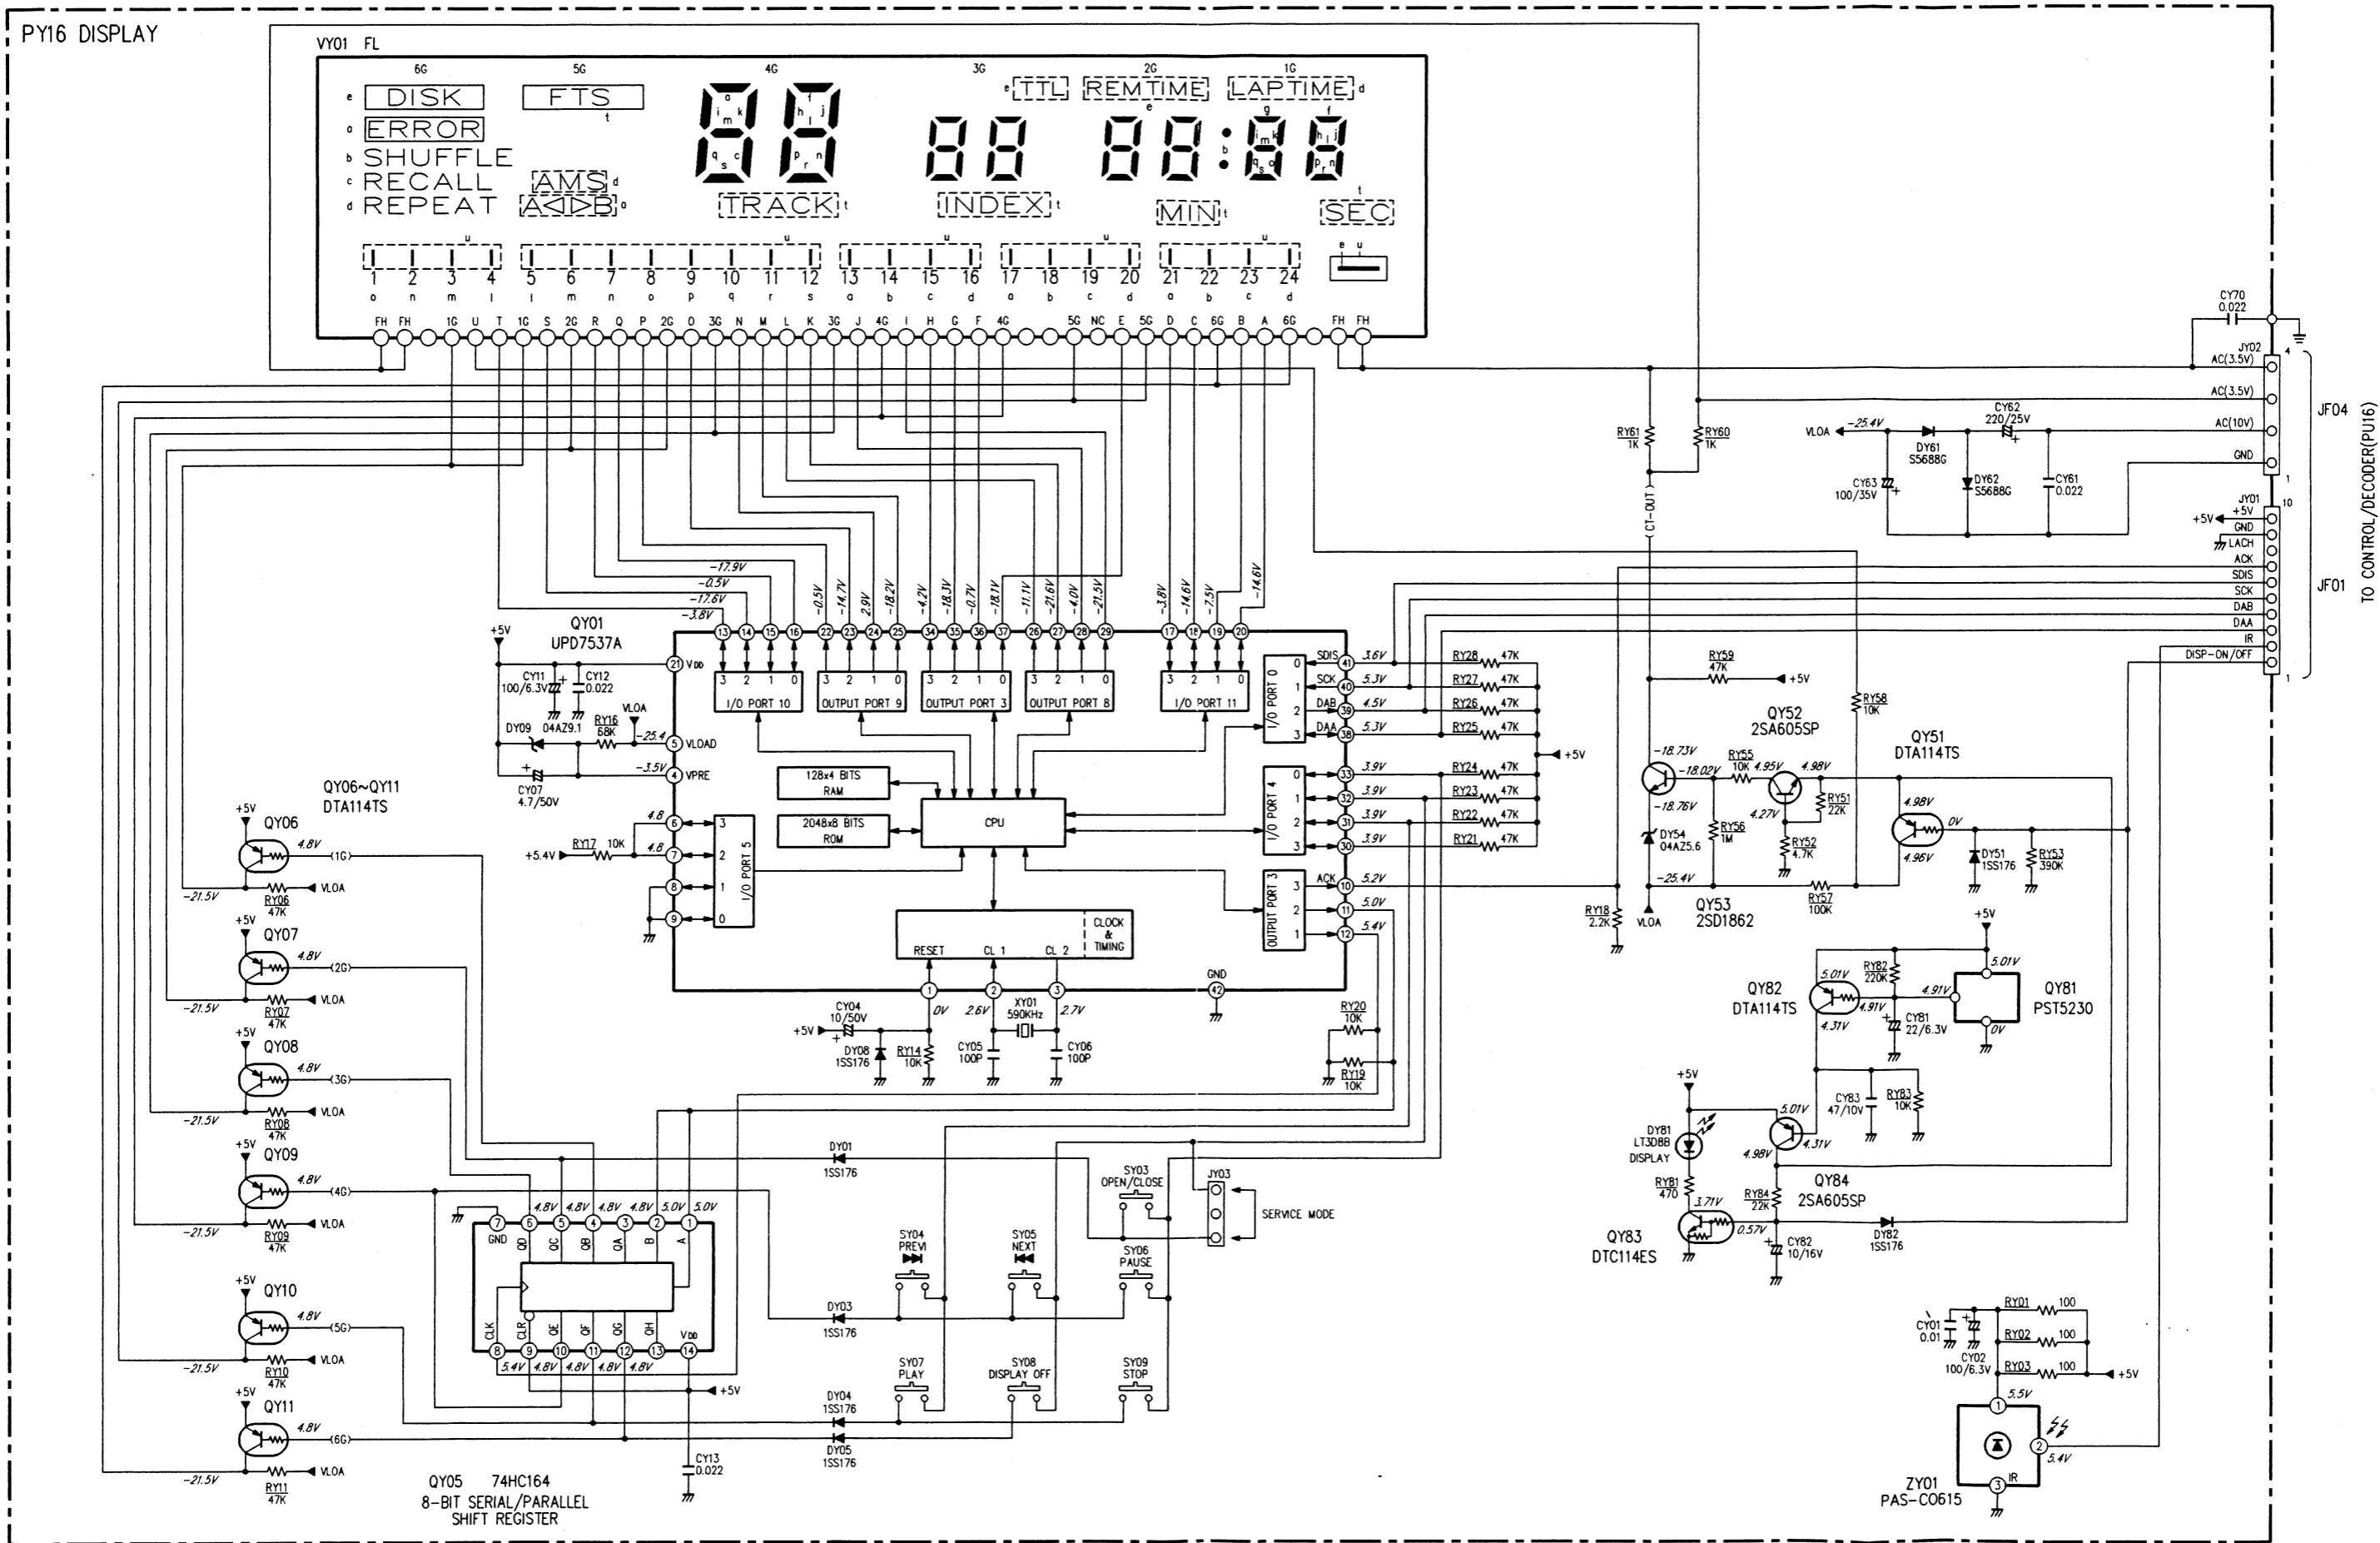

7. EXPLODED VIEW AND MECHANISM PARTS LIST

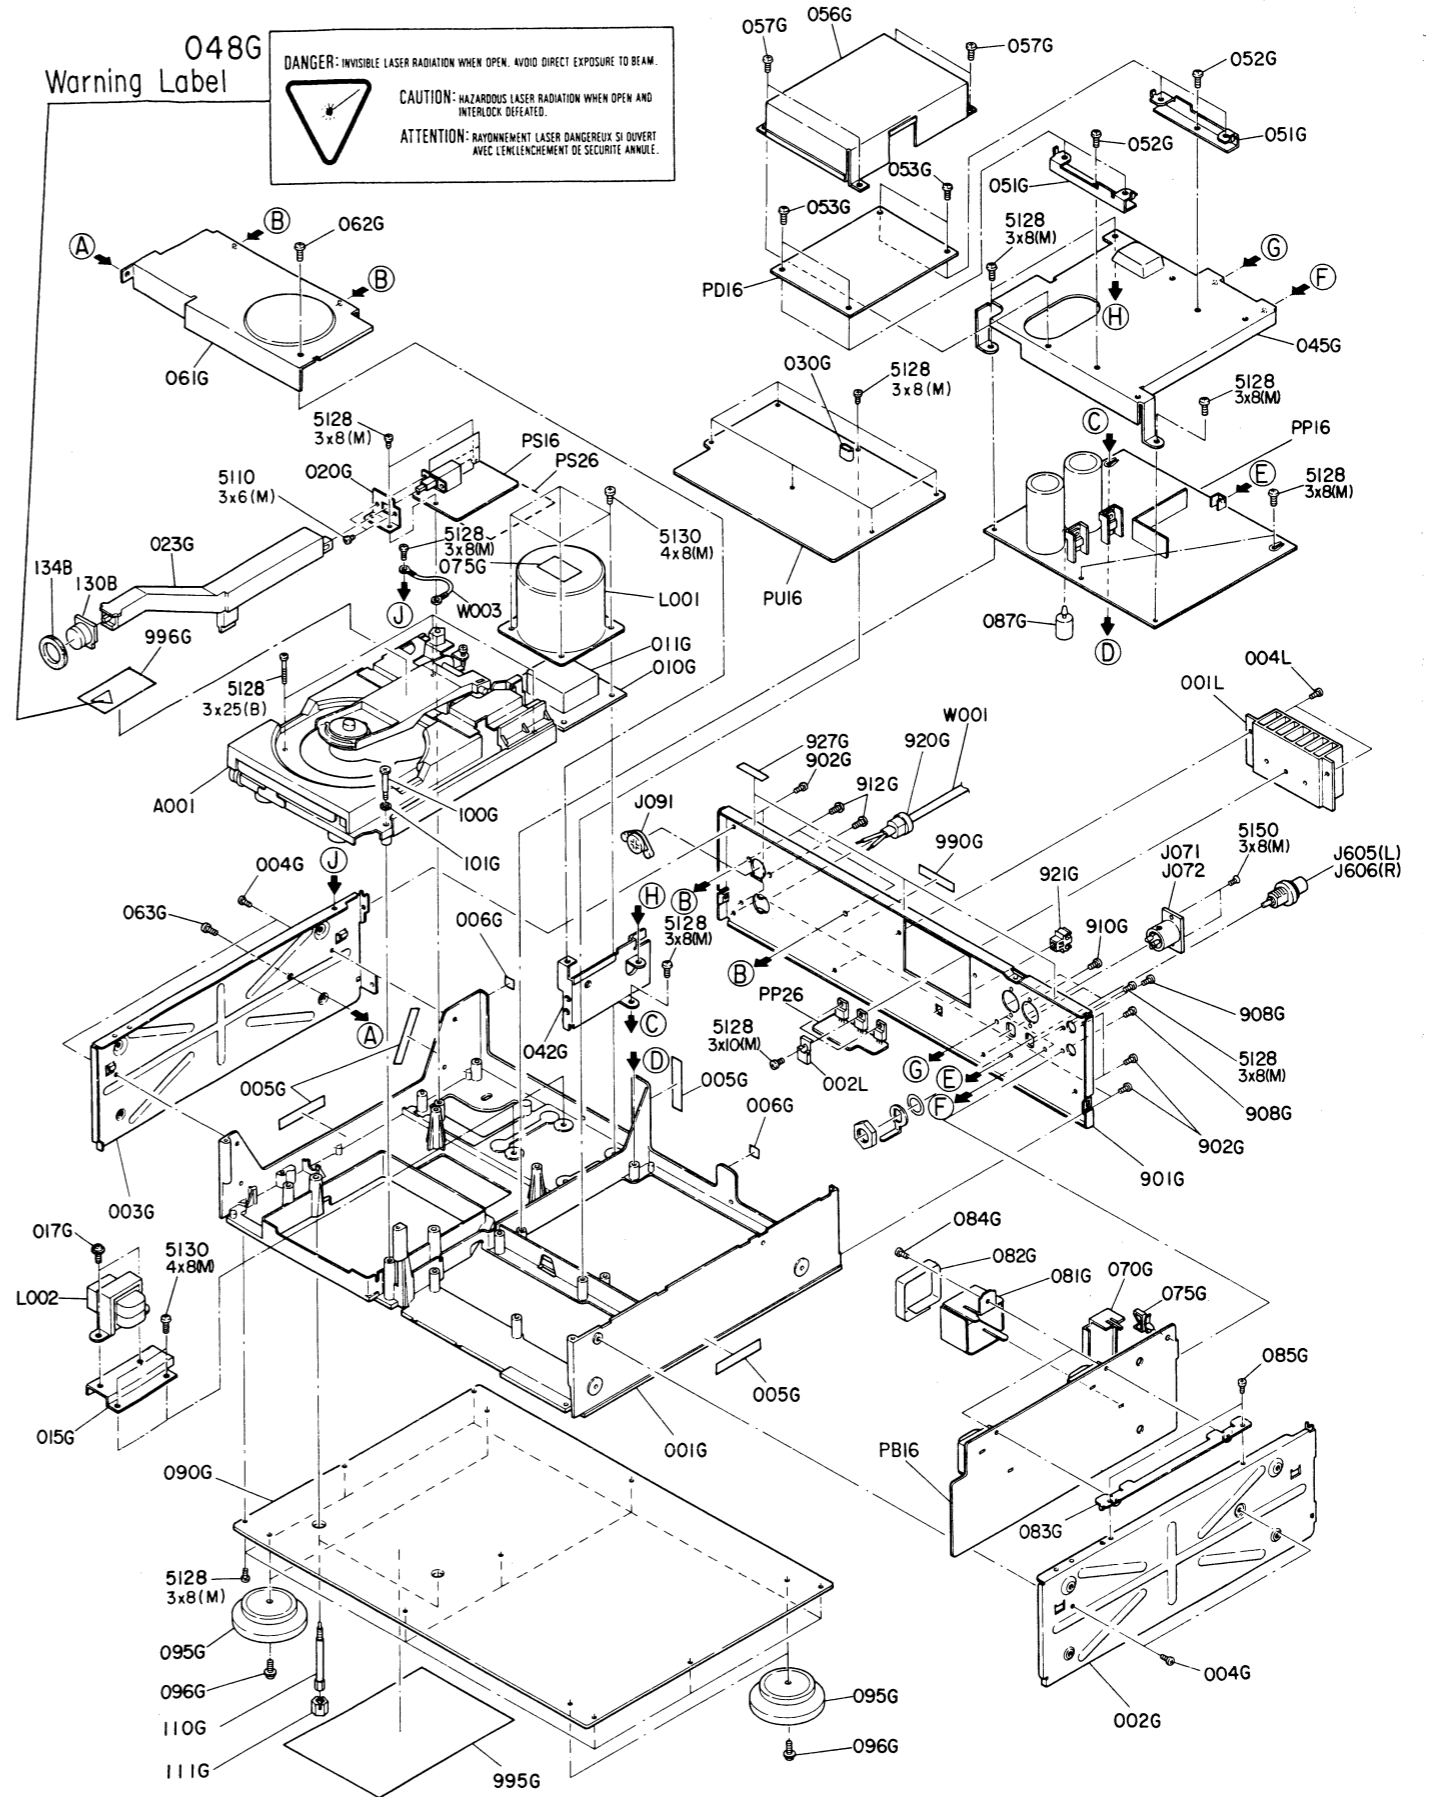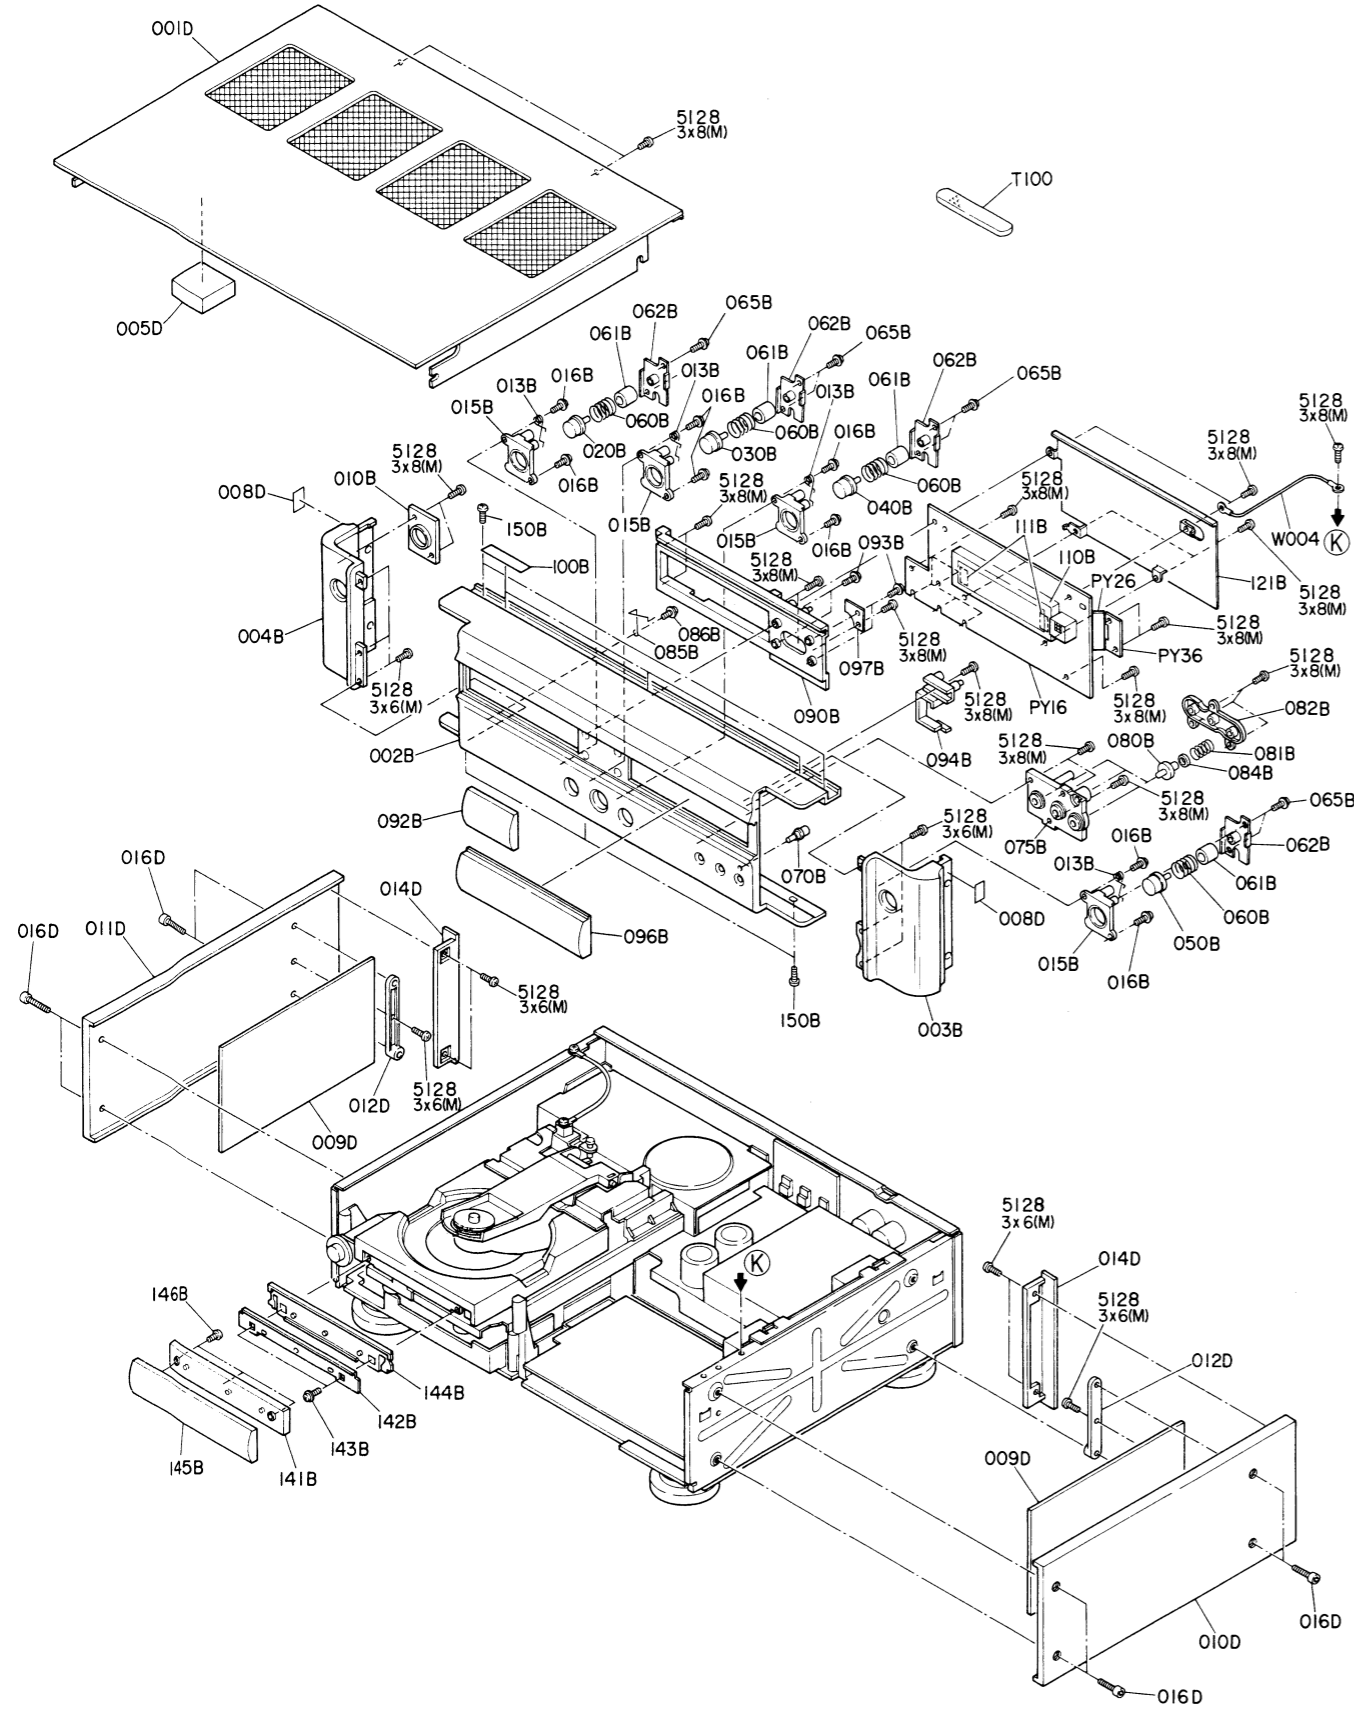

048G Warning Label

DANGER: INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.

CAUTION: HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

ATTENTION: RAYONNEMENT LASER DANGEREUX SI OUVERT AVEC L'ENCLÈCHEMENT DE SÉCURITÉ ANNULÉ.

# MECHANICAL PARTS LIST

REF. DESIG.	PART NO.	DESCRIPTION
002B	4822 444 40657	FRONT PANEL GOLD
003B	4822 454 30484	ESCUTCHEON PIECE RIGHT (GOLD)
004B	4822 454 30485	ESCUTCHEON PIECE LEFT (GOLD)
010B	4822 532 40225	BUSHING, POWER BUTTON
013B	4822 492 71359	SPRING, RETAINER(BUTTON)
015B	4822 532 40221	RETAINER BUSH, BUTTON LARGE
016B	4822 502 12511	B.T.SCREW(W/W) B3X8
020B	4822 410 62615	BUTTON ASSY, PAUSE (GOLD)
030B	4822 410 62614	BUTTON ASSY OPEN/CLOSE (GOLD)
040B	4822 410 62616	BUTTON ASSY STOP (GOLD)
050B	4822 410 62613	PLAY BUTTON ASSY (GOLD)
060B	4822 492 71357	SPRING, BUTTON LARGE
061B	4822 462 71931	BUFFER
065B	4822 502 12511	B.T.SCREW (W/W) B3X8
070B	4822 381 11417	LENS, LED, DISPLAY OFF
075B	4822 532 40222	RETAINER, FRAME FOR BUTTON SMALL
080B	4822 410 62611	BUTTON, SMALL
081B	4822 492 71358	SPRING
082B	4822 444 60917	COVER, BACK OF BUTTON SMALL
085B	4822 492 71361	SPRING
086B	4822 502 12509	B.T.SCREW (W/W) B3X6
090B	4822 444 60918	COVER, TRAY INSIDE
093B	4822 502 12512	B.T.SCREW (W/W) B3X12
094B	4822 532 40224	RETAINER, WINDOW RIGHT
096B	4822 450 62073	WINDOW, PINK SMOKE
110B	4822 256 92037	FL. HOLDER
130B	4822 410 62612	POWER BUTTON ASSY (GOLD)
134B	4822 462 71932	BUFFER
143B	4822 502 13927	F.WASHER SCREW M3X8
144B	4822 532 40223	RETAINER (GOLD)
145B	4822 454 30487	ESCUTCHEON, DRAWER (GOLD)
150B	4822 502 13636	PH.TAP.SCREW
010D	4822 444 40658	SIDE PANEL RIGHT (GOLD)
011D	4822 444 40659	SIDE PANEL LEFT (GOLD)
012D	4822 402 61503	SPACER, SIDE PANEL
014D	4822 454 30488	ESCUTCHEON, SIDE PANEL
016D	4822 502 21338	END CAP SCREW 4X20 (GOLD)
004G	4822 502 13636	PH.TAP.SCREW
023G	4822 402 61504	LINK, POWER SW
052G	4822 502 13636	PH.TAP.SCREW
057G	4822 502 13636	PH.TAP.SCREW
062G	4822 502 13636	PH.TAP.SCREW
063G	4822 502 13636	PH.TAP.SCREW
084G	4822 502 13636	PH.TAP.SCREW
085G	4822 502 13636	PH.TAP.SCREW
095G	4822 462 42031	LEG (GOLD)
096G	4822 502 21339	B.T.SCREW (W/W)
100G	4822 502 13925	SCREW
101G	4822 530 80667	WAVE WASHER
110G	4822 532 30508	SHAFT, TRANSPORT SCREW
111G	4822 462 71495	CAP, RED OF TRANSPORT SCREW
902G	4822 502 13636	PH.TAP.SCREW
908G	4822 502 13636	PH.TAP.SCREW
910G	4822 502 13636	PH.TAP.SCREW
912G	4822 502 13636	PH.TAP.SCREW
004L	4822 502 13636	PH.TAP.SCREW
J071	4822 267 31466	PLUG CANNON (L-CH)
J072	4822 267 31466	PLUG CANNON (R-CH)
J091	4822 272 10353	VOLT.SELECT. 220-240V
J100	4822 265 31069	JACK 4P
J605	4822 290 81602	TERMINAL 1P RCA PIN JACK
J606	4822 290 81602	TERMINAL 1P RCA PIN JACK
L001	4822 146 21733	POWER TRANSFORMER [/00G]

REF. DESIG.	PART NO.	DESCRIPTION
001T	4822 736 21735	<b>PACKING</b> USER MANUAL
J082	4822 321 62021	CONNECTIVE CORD RCA CABLE
J083	4822 321 22862	CONNECTIVE CORD RCA PIN 75Ω
T100	4822 218 10512	IR COMANDER RC-15CD

## LASER RADIATION SAFETY

Protection of eyes from laser beam during servicing. This set employs a laser. Therefore, be sure to carefully follow the instructions below when servicing.

### 1. Laser Diode Properties

- Material: Al Ga As
- Wave Length: 0.78μm
- Emission Duration: Continuous
- Laser Output: Max. 0.11 mW

This output is the value measures at the objective lens surface on the light pen assembly.

- Classification: Class IIIb

2. During service, do not take the subchassis block apart and do not adjust the H F amp circuit. If there is a breakdown in the H F circuit (including laser diode), replace the entire subchassis block (including H F amp circuit board).

### WARNING!!


When servicing, do not approach the laser exit with the eye too closely.

In case it is necessary to confirm laser beam emission, be sure to observe from a distance of more than 30 cm from the surface of the objective lens on the light pen assembly.

### LASER WARNING LABELS

The labels shown below are affixed.

- 1) DHHS Protective housing label  
"DANGER – INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM."
- 2) DNHW Protective housing label and laser radiation sign label  
"CAUTION \_ HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFETED."  
"ATTENTION \_ RAYONNEMENT LASER DANGEREUX SI OUVERT AVEC L'ENCLenchement DE SECURITE ANNULE."

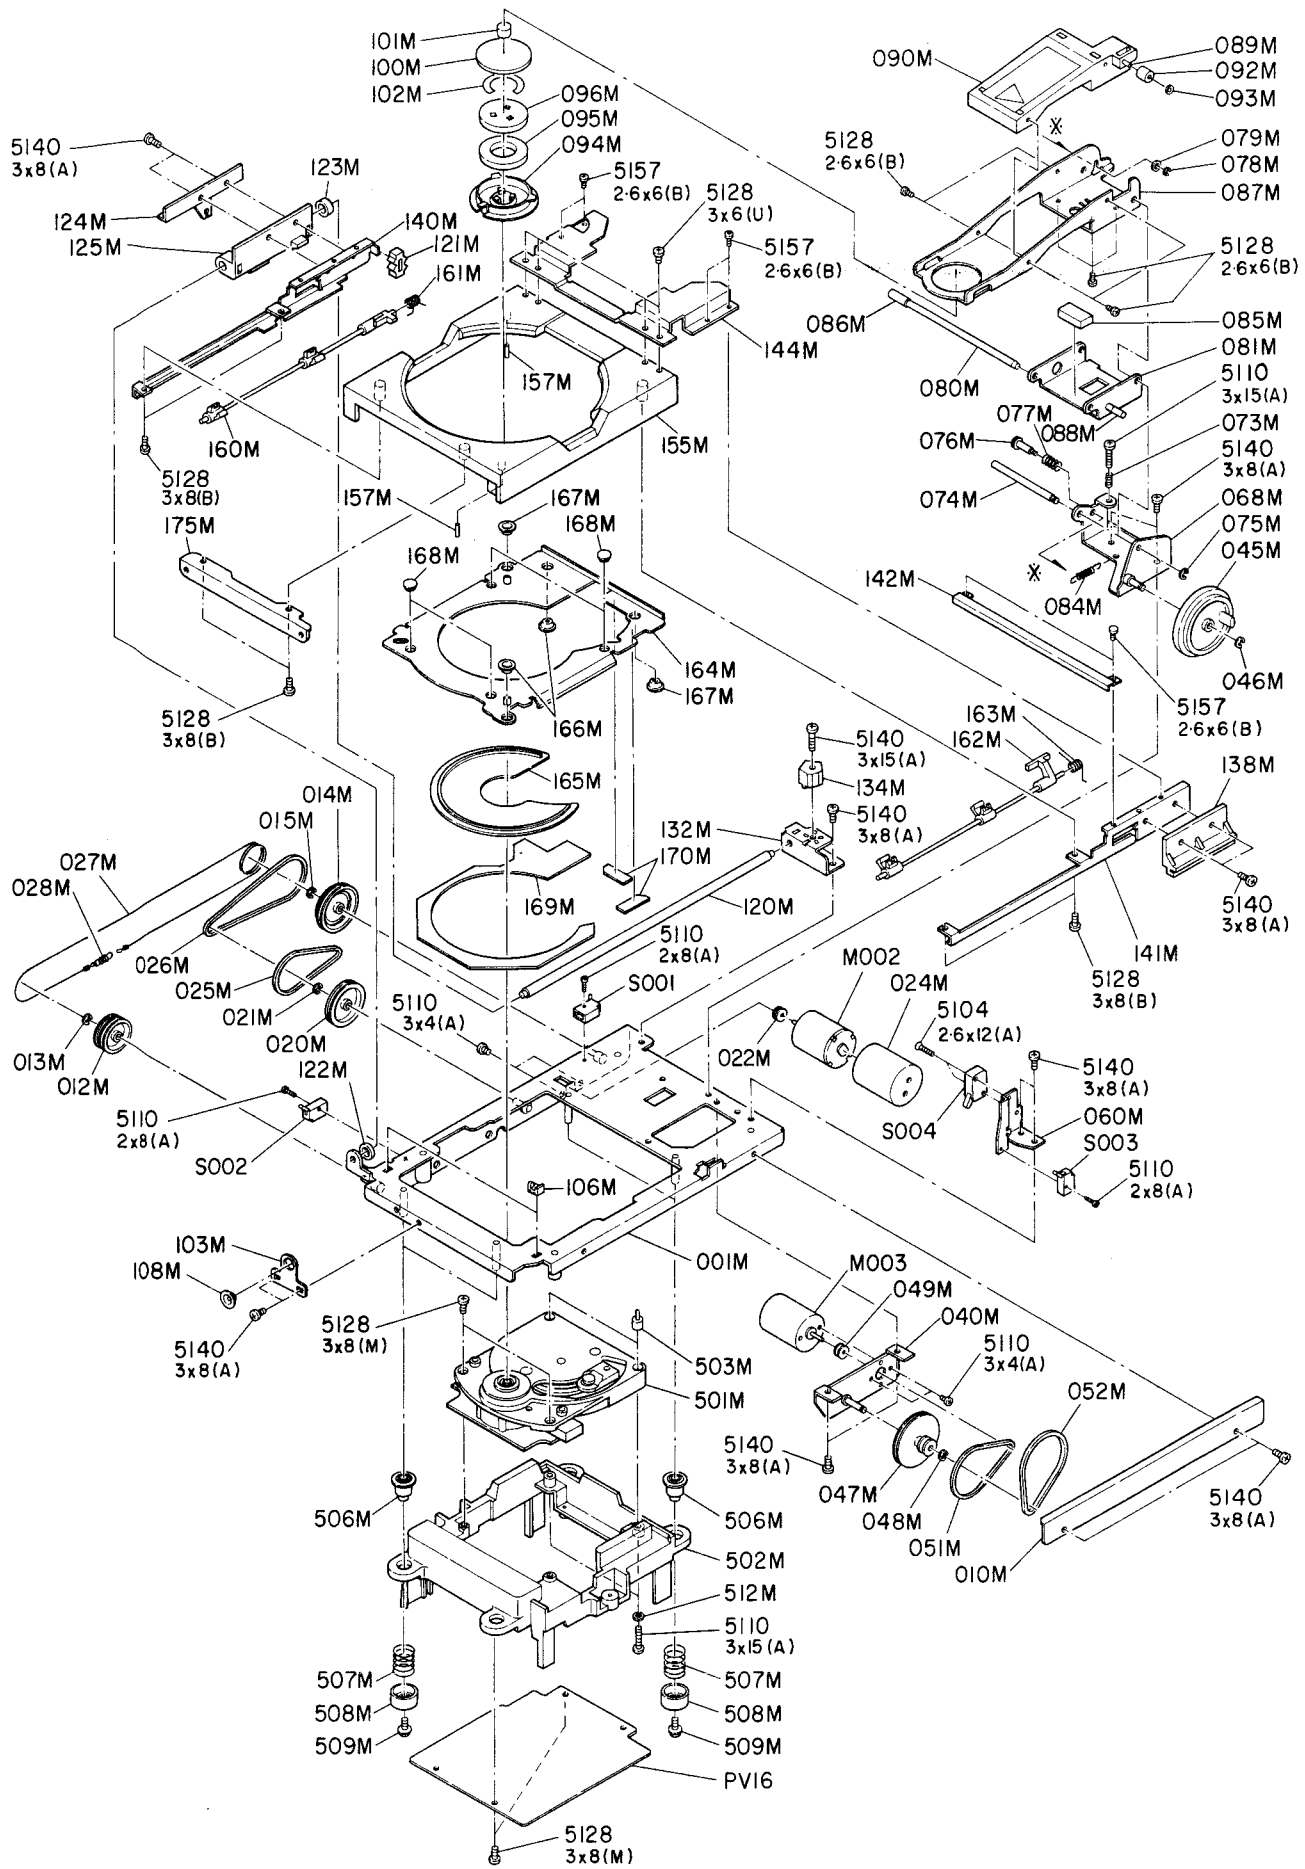



REF. DESIG.	PART NO.	DESCRIPTION
012M	4822 528 81163	PULLEY, WIRE WHEEL (F)
013M	4822 530 70043	RG RING, E FOR WHEEL (F)
014M	4822 528 81387	PULLEY, WIRE WHEEL (R)
015M	4822 530 70043	RG RING, E FOR WHEEL (R)
020M	4822 528 81238	PULLEY, MIDDLE FOR TRAY DRIVE
021M	4822 530 70043	RG RING, E FOR MIDDLE PULLEY
022M	4822 528 81166	PULLEY, MOTOR
025M	4822 358 30762	BELT, MOTOR
026M	4822 358 31065	BELT, TRAY DRIVE
027M	4822 321 30374	JOINT, WIRE ROPE
028M	4822 492 33161	SPRING, WIRE TENSION
045M	4822 528 30392	CAM, CLAMPER DRIVE
046M	4822 530 70043	RG RING, E 045M + 070M
047M	4822 528 81164	PULLEY, CLAMPER MIDDLE
048M	4822 530 70043	RG RING, E FOR MIDDLE PULLEY
051M	4822 358 30762	BELT, MOTOR
052M	4822 358 30763	BELT, CAM DRIVE
073M	4822 492 70628	SPRING, DOWN ADJUSTER
075M	4822 530 70043	RG RING, E FOR BEARING SHAFT
076M	4822 535 93105	SHAFT, L/R ADJUSTER
077M	4822 492 70631	SPRING, L/R ADJUSTER
078M	4822 530 70122	RG RING, E FOR ADJUSTER END
079M	4822 532 52236	WASHER, FOR 076M
084M	4822 492 70629	SPRING, CLAMPER PULL DOWN
088M	4822 528 90837	ROLLER
089M	4822 535 93288	SHAFT
090M	4822 256 91866	HOLDER, CLAMPER ARM
092M	4822 528 90836	ROLLER
093M	4822 532 51467	STOPPER
094M	4822 526 20174	CLAMPER, MAGNET CASE
095M	4822 526 20173	MAGNET
096M	4822 528 90783	COVER, MAGNET
100M	4822 462 71811	BUFFER, CLAMPER
101M	4822 462 71809	BUFFER
102M	4822 466 61927	BUFFER
106M	4822 256 91867	HOLDER, TRAY FRONT SUPPORT
108M	4822 532 30509	BUSHING, FRONT GUIDE
122M		BUFFER, TRAY OUT-END
125M	4822 256 91196	HOLDER, SLIDE BEARING K
138M	4822 256 91195	HOLDER, SLIDE GUIDE RIGHT
155M	4822 444 50637	CASE, TRAY (GOLD)
157M	4822 535 92576	SHAFT, TRAY GUIDE PINS
160M	4822 402 61089	LEVER, TRAY LIFT (L)
161M	4822 492 70633	SPRING, TRAY LIFT (L)
162M	4822 402 61091	LEVER, TRAY LIFT (R)
163M	4822 492 70632	SPRING, TRAY LIFT (R)
164M	4822 444 50635	TRAY, U/D DISC (BLACK)
165M	4822 444 50677	TRAY, SINGLE
166M	4822 532 11697	BUSHING, TRAY GUIDE
167M	4822 532 21323	BUSHING, TRAY GUIDE
168M	4822 532 11698	BUSHING, DISC BUFFER
501M	4822 691 30233	MECHANISM CDM-4 STEEL TURNTABLE
502M	4822 444 60906	CASE, MECHA
506M	4822 532 21452	BUSHING, SUSPENSION RUBBER
507M	4822 492 70625	SPRING, SUSPENSION
508M	4822 530 70561	RETAINER, SUSPENSION SPRING STOPPER
509M	4822 502 13926	F.WASHER SCREW, 508M + 003M
512M	4822 530 80349	SPRING, WASHER
M002	4822 361 60467	D.C.MOTOR, TRAY DRIVE
M003	4822 361 60447	D.C.MOTOR, CLAMPER DRIVE
S001	4822 277 21132	SLIDE SWITCH, TRAY IN END
S002	4822 277 21132	SLIDE SWITCH, TRAY OUT END
S003	4822 277 21132	SLIDE SWITCH, CLAMPER DOWN END
S004	4822 271 30712	MINI SWITCH, CLAMPER UP END


## 8. TRAY MECHANISM LOADING PROCEDURES

### Cautions when servicing


#### 1. When mounting tray and tray case

(When replacing tray case because of damage etc.)

- a) When the tray has been positioned improperly with a deviated clearance to the front panel window, remove the tray lid, loosen screws (A) and adjust by moving the tray within the range of the holes play.

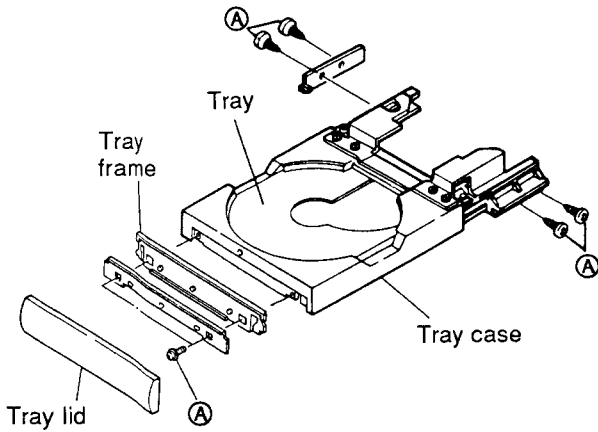


For the tray tilt adjustment, refer to the figure below.

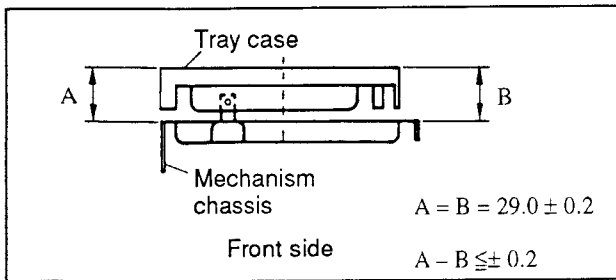


Adjust the tilt with screws (A).

- b) The operating power of the tray is set to 250 - 350gr (Power OFF).

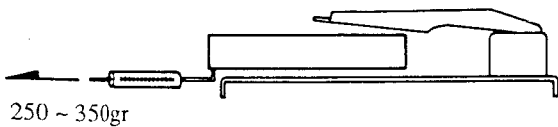

#### 2. When the tray is disengaged to the lower side

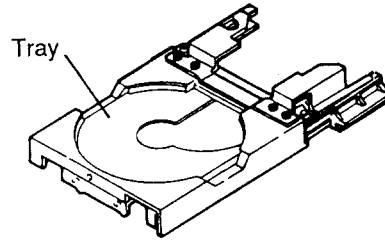


When the tray is pushed downward without the sub-chassis (CDM-4), it will be disengaged. So care will be necessary.


(Closing the tray without the sub-chassis also disengages the tray.)

Mount the tray referring to the figures below.

- a) Bring down the lever and put the tray on the protrusion of lever.

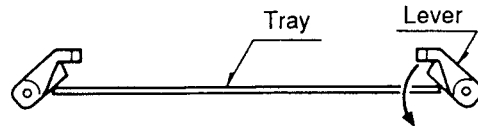

- b) While holding the tray, bring down the opposite lever and put the tray on the protrusion of the lever.

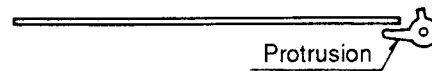



#### Note:

If both the levers are brought down at the same time, the tray cannot be raised. The levers should be brought down one by one.


If the tray is forced to move to the original position, the two pins injected into the tray case may be bent.

**3. When replacing the sub-chassis (CDM-4)**

- a) The height of the sub-chassis turn table is different one by one. Adjust each turn table height so that the magnet clumper does not touch the clumper metal strap as shown in the figure. Standard ( $1.5 \pm \begin{smallmatrix} 0.3 \\ 0 \end{smallmatrix}$  mm)

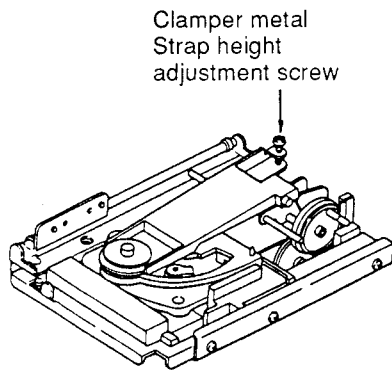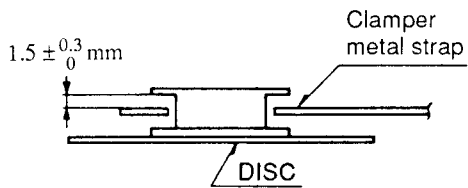


- b) After replacing the sub-chassis, readjust so that the magnet clumper does not touch the clumper metal strap at right and left sides. (The clumper metal strap should not be touched to other straps.)

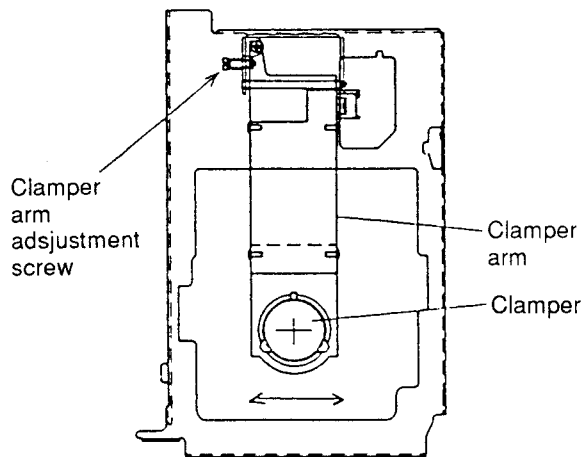

**4. Others**

- a) For the loading wire winding, refer to the figure below.

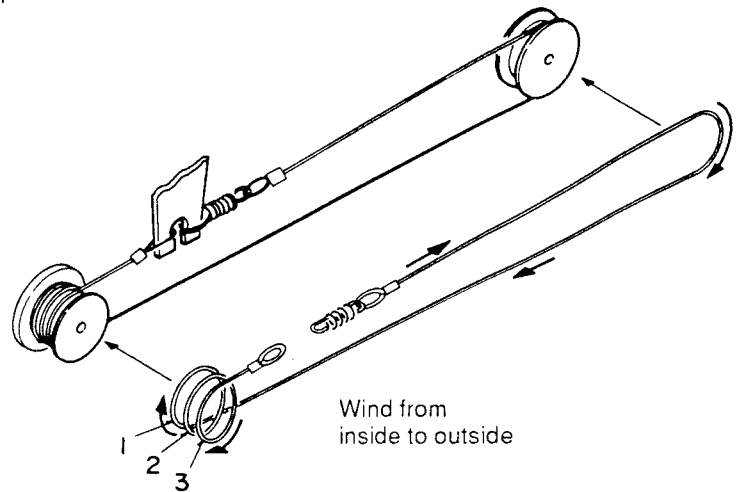

- b) When the magnet clumper (094M) is replaced, bent the narrowest tab and remove the clumper.



## 9. INITIATING THE SERVICE PROGRAMME

The player can be brought in service position "0" to "3" whether the disc is put on the turntable or not. For the service position "2", the disc should be put on the turntable.

### Service position "0"

- Make a short circuit between both ends of the terminal JY03 on the front PCB.
- Press "STOP" and "PLAY" keys simultaneously while turning the power on.  
The display shows:
  - The TRACK and INDEX field: Cd15
  - The MINUTES and SECONDS field: 00 0
- Remove the short circuit between both ends of the terminal JY03 on the front PCB.
- Quick CDM check:
  - With SEARCH keys (Remote control) "▶▶" and "◀◀", check that the radial arm moves most outward and inward. (Service position "0" to "3")
  - Laser control in.
  - Check that the focus unit jumps over the tracks.

### ATTENTION:

After the player is brought in service position "0", the laser remains driven until service position "3". Therefore, avoid direct exposure to the beam in service positions "0", "1" and "2".

### Service position "1"

- Bring the player in service position "0".  
Press SKIP key "▶▶".
- The display shows:
  - The MINUTES and SECONDS field: 00 1
- Functions:
  - Laser control in.
  - Focus start procedure is repeated unlimitedly. (If not, check SI/RD signal.)
  - With SKIP key "◀◀", one can go back to service position "0".

### Service position "2"

- Without a disc on the turntable:
  - Bring the player in service position "1" with the power turned off and the disc put on the turntable.
- With a disc on the turntable:
  - With SEARCH key "◀◀", move radial arm most inward.
- Bring the player in service position "1".
- Press SKIP key "▶▶".
- The display shows:
  - The MINUTES and SECONDS field: 00 2
- Functions:
  - Laser control in.
  - Focus control in.
  - Turntable motor control in.
  - Decoder IC generates MC signal.
  - With SKIP key "◀◀", one can go back to service position "1".

### ATTENTION:

When the radial arm is most outward with the disc on the turntable, the turntable (spindle motor) may turn reversely at high speed. In this case, with skip key bring the player in service position "1" or "3" from "2" immediately.

### Service position "3"

- Bring the player in service position "2".  
Press SKIP key "▶▶".
- The display shows:
  - The MINUTES and SECONDS field: 00 3
  - The set is the same condition as in STOP.
  - With SKIP keys "◀◀" and "▶▶", one can go to service positions "3" to "0" and vice versa.

### Service position "E"

- Bring the player in service position "3".
- Without a disc on the turntable:
  - Press "PLAY" key, and the display shows the same as when the power is turned on normally.
  - Set a disc with "OPEN/CLOSE" key, and TOC data is displayed.
- With a disc on the turntable:
  - Press "PLAY" key, and TOC data is read and displayed.
- Press "PLAY" key again, and the mode is changed to PLAY.
- Functions: all keys have their original functions. (including remote controller)
- If an error is detected, the player will stop and give an error indication on the display. For a description of the error indication: See Error table.
- If the  $\mu$ P observes a system error, a system error indication will appear on the display: Er 01 through Er 12.
- With any key pressed, system error mode (including error message) will be cleared. (With "PLAY" key, the PLAY mode will be brought again.)
- If the  $\mu$ P observes an operation error, an operating error indication will be displayed for 1.5 seconds: Er 30 through Er 56.

**The service programme can be abandoned again by turning the mains switch (POWER ON/OFF) off and on again (Hardware reset).**

The error message number will be displayed only in service programme. (In normal mode, "ERROR" indication will just appear.)

**SEARCH "▶▶"=Forward search key**

**SEARCH "◀◀"=Reverse search key**

**SKIP "▶▶"=TRACK NEXT key**

**SKIP "◀◀"=TRACK PREV key**

## 10. ERROR TABLE

### System errors

Indication*	Cause	Check
Er 01	No RD	Si, So, RD, Photodiode signal processor
Er 02	No $\overline{TL}$ pulse at start-up	$\overline{TL}$ , HF, Photodiode signal processor, CD disc present
Er 03	No lead-in track found	CD disc, radial arm position, REdig, Radial error processor
Er 04	Too many $\overline{TL}$ pulses in PLAY	CD disc, HFD
Er 05	$\overline{TL}$ pulse > 50 msec. in PLAY	CD disc, HF in, photodiodes
Er 06	No $\overline{TL}$ pulse within 0.5 sec. during track jumping	RE-lag circuit
Er 07	Subcoding error during PLAY	HF
Er 08	TOC error	CD disc, turntable motor control, radial arm position
Er 09	EEROM sel error	Replace EEROM
Er 10	Search error; selected point on disc cannot be reached	CD disc
Er 11	ROM error	Replace ROM
Er 12	RAM in $\mu$ P MC68HC11 defective	Replace $\mu$ P MC68HC11

### Operating errors

- Er 30 "▶▶" key operated during the last track, with Repeat turned off.
- Er 31 "◀◀" key operated during the first track, with Repeat turned off.
- Er 32 Index selected before a track has been selected.
- Er 34 The programme memory is full.
- Er 35 The programme track is not present on this CD disc.
- Er 36 Selected time in seconds greater than 59.
- Er 38 Wrong time programmed.
- Er 39 The selected track is not present on this CD disc.
- Er 40 The selected track does not exist.
- Er 41 FTS data storage error: memory full.
- Er 42 FTS data storage error: no programme presented.
- Er 43 FTS data storage error: no more disc number.
- Er 44 FTS playback error: no FTS programme in the memory.
- Er 45 FTS selection error: "▶▶" key actuated while FTS points towards end of the number of tracks.
- Er 46 FTS selection error: "◀◀" key actuated while the FTS points to the beginning of the number of tracks.
- Er 47 FTS selection error: "▶▶" or "◀◀" key actuated at the moment the  $\mu$ P is storing data.
- Er 48 FTS selection error: "◀◀" key actuated while the CD disc has not yet been stored in the FTS memory; or TOC of the disc has not yet been read in.
- Er 49 FTS selection error: "▶▶" key actuated.

- Er 50 FTS clear error: "CANCEL" key actuated while data are being stored in the memory.
- Er 51 "CANCEL" key actuated, but clear function has not been carried out.
- Er 52 FTS data storage error: TOC of the CD disc, of which data should be saved, has not yet been read in.
- Er 53 FTS playback error: Insufficient data of the TOC of the CD disc read in for processing in the FTS memory.
- Er 54 "A - B" key actuated while the player was not in PLAY mode.
- Er 55 "SEARCH" key actuated during Skip mode.
- Er 56 End of the "FAST FORWARD or FAST REVERSE" search motion.


## 11. MEASUREMENTS AND ADJUSTMENT FOR CDM4 (SUB CHASSIS)

### Check of the laser supply

The laser circuit generates a laser beam with LO signal at pin 17 of Q101, and the monitor diode makes LM signal. These circuits constitute a feedback system and controls the laser output.

If, in that case, the laser (= complete CDM unit) is replaced, the new laser will also become defective.

However, it is impossible to check and repair a feedback system if a link is missing. For this reason the laser supply can be checked with the circuit below. The green LED replaces the laser, the voltage across the 18-Ohm resistor is fed back as monitor voltage, the 33-Ohm resistor and the switch serve to draw more current from the laser supply.

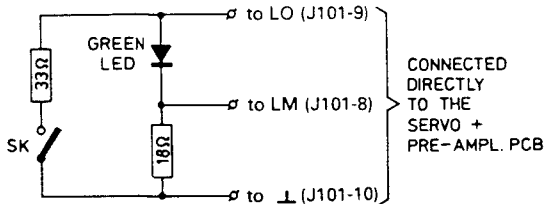

### LED GREEN e.g. COY 94 IV 5322 130 32182

The above circuit is connected to connector J101 via an extension cable instead of flex print. The normal flex print is not suited for this purpose because of its high internal resistance.

### Code no. extension cable 4622 322 40066

- The above flex print out of connector J101 on the servo + pre-amplifier PCB.
- Connect the circuit via the extension cable to connector J101.
- Select the play mode and SI/RD (pin 6 of Q101) will be "high".
- Measure the voltage LO (Laser Out) at test point 11.

#### Note:

SI/RD = 0, start initialization "high", is the play mode. At SI/RD : "low", in the STANDBY state, LO = 0 V ± 0.2 V.

SK open: 1.8 V < LO < 2.3 V

170 mV < LM < 220 mV

The green LED emits little light.

SK closed: 1.8 V < LO < 2.3 V

170 mV < LM < 220 mV

The green LED emits little light.

- During the change-over from SK closed to SK open, the LED will emit more light for a short moment.
- The control sees to it that the same amount of current flows through the LED when SK is open and when SK is closed.

### Repair procedure

Since laser, monitor diode and photodiodes are very sensitive to static charges, care should be taken that during measurements and adjustments the aids and yourself have a potential that is equal to that of the CD mechanism.

### Laser adjustment for CDM4

- Measure the resistance of R108 + R134 with an ohmmeter and adjust potentiometer R134 so that R134 + R108 have a combined value of 1 kΩ.
- Check the monitor diode connections. Measure at test point 11 and ground (⊥).
- Put test disc "5" on the turn table.
- Switch on the set and select the PLAY mode or a similar service position.
- Take a DC voltmeter and measure across R116. The voltage across this resistor should **stay smaller than 1260 mV**.
- Check if HF is present. If not, stop the measurement immediately and analyze the fault.
- If HF is present, play track no. 1 of test disc "5" and adjust R134 (4.7 k) so that the sum of HF across R114 (test points 1 and 2) becomes 50 mV ± 2 mV with a DC voltmeter.  
**Check, during the adjustment, that the voltage across R116 does not exceed 1260 mV.(J106)**
- If the adjustment is not successful within the 1260 mV margin across R116, check the angle setting.

### Adjustment of the focus off-set (FE-lag)

- **Coarse adjustment**
- A - Place potentiometer R136 approximately in mid-position.
  - Put test disc "5" on the turntable.
  - Bring the player in service position "2".
  - The focussing motor can now start focussing. Check that the disc is moving.
- B - Place with potentiometer R136 (Focus Offset) the focussing motor in optical horizontal position.
  - Hereafter the fine adjustment of the focus offset has to be carried out.
- **Fine adjustment**
- Bring the player in service position "2".
- Adjust potentiometer R106 (Focus Offset) for a voltage across R106 (test point 27) of 400 mV ± 40 mV.

#### Note:

Notice that CDM is in a horizontal position.



REF. DESIG.	PART NO.	DESCRIPTION
L705 } L708	4822 158 60605	FERRITE CORE
		<b>PD16-DAC CIRCUIT BOARD</b>
		<b>PD16-CAPACITORS</b>
CD01 }	4822 126 12061	CERAMIC 0.1μF ± 10% 25V
CD08	4822 123 30363	MICA 820PF ± 5%, CHIP
CD09	4822 123 30363	MICA 820PF ± 5%, CHIP
CD10		
CD11 }	4822 123 30359	MICA 220PF ± 5%, CHIP 100WV
CD14		
CD19 }	4822 123 30359	MICA 220PF ± 5%, CHIP 100WV
CD22		
CD23	4822 123 30363	MICA 820PF ± 5%, CHIP
CD24	4822 123 30363	MICA 820PF ± 5%, CHIP
CD25 }	4822 126 12061	CERAMIC 0.1μF ± 10% 25V
CD34		
CD51 }	4822 126 12061	CERAMIC 0.1μF ± 10% 25V
CD54		
CD61 }	4822 124 90353	ELECT 100μF 10V
CD64		
CD65 }	4822 124 90363	ELECT 220μF 10V
CD68		
C578	4822 122 32669	CERAMIC 0.047PF +80%-20%
C601 }	4822 123 30361	MICA 56PF ± 5%, CHIP 500WV
C603		
C604	4822 123 30361	MICA 56PF ± 5%, CHIP 500WV
C605	4822 123 30387	MICA 2200PF ± 5%, CHIP
C606	4822 123 30387	MICA 2200PF ± 5%, CHIP
C607	4822 123 30362	MICA 2200PF ± 5%, CHIP
C608	4822 123 30362	MICA 2200PF ± 5%, CHIP
C611 }	4822 124 22238	ELECT 100μF 25V
C618		
C621 }	5322 122 32654	CERAMIC 0.022μF ± 10%
C628		
		<b>PD16-RESISTORS</b>
RD01 }	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
RD04		
RD05	4822 111 91369	1.5KΩ ± 5% 1/10W, CHIP
RD06	4822 111 91369	1.5KΩ ± 5% 1/10W, CHIP
RD07	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
RD08	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
RD09	4822 116 83352	560Ω ± 5% 1/10W, CHIP
RD10	4822 116 83352	560Ω ± 5% 1/10W, CHIP
RD11	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
RD12	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
RD13 }	4822 111 91355	13KΩ ± 1% 1/10W, CHIP
RD16		
RD17 }	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
RD20		
RD21 }	4822 111 91355	13KΩ ± 1% 1/10W, CHIP
RD24		
RD25	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP

REF. DESIG.	PART NO.	DESCRIPTION
RD26	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
RD27 }	4822 116 83352	560Ω ± 5% 1/10W, CHIP
RD30		
RD31	4822 116 83255	3.3KΩ ± 5% 1/10W, CHIP
RD32	4822 116 83255	3.3KΩ ± 5% 1/10W, CHIP
RD33 }	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
RD38		
R590	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
R601	4822 111 90883	10KΩ ± 1% 1/10W, CHIP
R602	4822 111 90883	10KΩ ± 1% 1/10W, CHIP
R603 }	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
R606		
R607	4822 111 90883	10KΩ ± 1% 1/10W, CHIP
R608	4822 111 90883	10KΩ ± 1% 1/10W, CHIP
R609 }	4822 116 83255	3.3KΩ ± 1% 1/10W, CHIP
R612		
R613 }	4822 111 90883	10KΩ ± 1% 1/10W, CHIP
R620		
R621 }	4822 111 91366	5.6KΩ ± 1% 1/10W, CHIP
R624		
R625 }	4822 117 10183	2.61KΩ ± 1% 1/10W, CHIP
R628		
R629 }	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
R636		
R639	4822 111 90892	0Ω ± 5% 1/10W, CHIP
R640	4822 111 90892	0Ω ± 5% 1/10W, CHIP
		<b>PD16-SEMICONDUCTORS</b>
QD01	4822 209 31355	IC TDA1547 ★
QD02	4822 209 31355	IC TDA1547 ★
Q568	4822 209 31423	IC TC7W04F
Q571	4822 209 61494	IC 74HC74
Q601	4822 209 31153	IC, OP-AMP NJM2114D
Q602	4822 209 31153	IC, OP-AMP NJM2114D
Q603 }	4822 209 30062	IC NJM5534M
Q606		
		<b>PD16-MISCELLANEOUS</b>
L601	4822 157 53873	100 μH
L602	4822 157 53873	100 μH
		<b>PP16-POWER/AUDIO CIRCUIT BOARD</b>
		<b>PP16-CAPACITORS</b>
CN01	4822 124 90357	ELECT 2.2μF 50V
C653 }	4822 124 80123	ELECT 220μF 16V
C656		
C657 }	4822 124 23649	ELECT 470μF 25V
C660		
C665	4822 123 30089	MICA 22PF ± 5% 500V
C666	4822 123 30089	MICA 22PF ± 5% 500V
C830	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C834	4822 124 22239	ELECT 3300μF 25V
C835	4822 124 22239	ELECT 3300μF 25V
C836	4822 124 90364	ELECT 220μF 16V
C837	4822 124 90364	ELECT 220μF 16V



REF. DESIG.	PART NO.	DESCRIPTION
C838	4822 124 23649	ELECT 470μF 25V
C840	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C842	4822 124 80582	ELECT 4700μF 16V
C845	4822 124 90364	ELECT 220μF 16V
C850	4822 121 20263	COMP. 0.47μF +6.8Ω
C853	4822 124 42037	ELECT 6800μF 35V
C854	4822 124 42037	ELECT 6800μF 35V
C855	4822 124 23364	ELECT 47μF 50V
C856	4822 124 23364	ELECT 47μF 50V
C857	4822 124 22734	ELECT 470μF 25V
C858	4822 124 22734	ELECT 470μF 25V
C863	4822 124 23363	ELECT 220μF 6.3V
C864	4822 124 23364	ELECT 47μF 50V
C872	4822 124 23364	ELECT 47μF 50V
C873	4822 124 23363	ELECT 220μF 6.3V
<b>PP16-RESISTORS</b>		
R653	4822 050 21002	1KΩ ± 2% 1/4W
R654	4822 050 21002	1KΩ ± 2% 1/4W
R655	4822 050 21004	100KΩ ± 2% 1/4W
R656	4822 050 21004	100KΩ ± 2% 1/4W
R659	4822 050 21001	100Ω ± 2% 1/4W
R660	4822 050 21001	100Ω ± 2% 1/4W
R663	4822 050 21004	100KΩ ± 2% 1/4W
R664	4822 050 21004	100KΩ ± 2% 1/4W
R665	4822 050 23323	33.2KΩ ± 2% 1/4W
R666	4822 050 23323	33.2KΩ ± 2% 1/4W
R667	?	
?	4822 050 12749	27.4Ω ± 2% 1/4W
R670	?	
▲ R691	?	
?	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
▲ R694	?	
R801	4822 117 10229	6.81KΩ ± 2% 1/4W
R802	4822 117 10229	6.81KΩ ± 2% 1/4W
R803	?	
?	4822 050 21782	1.78KΩ ± 2% 1/4W
R806	?	
R807	4822 050 21212	1.21KΩ ± 2% 1/4W
R808	4822 050 21212	1.21KΩ ± 2% 1/4W
R809	4822 050 21782	1.78KΩ ± 2% 1/4W
R810	4822 050 21782	1.78KΩ ± 2% 1/4W
R811	4822 050 21212	1.21KΩ ± 2% 1/4W
R812	4822 050 21212	1.21KΩ ± 2% 1/4W
▲ R813	4822 111 90967	4.7Ω 1/4W, FUSE
▲ R814	4822 111 90967	4.7Ω 1/4W, FUSE
R862	4822 050 21002	1KΩ ± 2% 1/4W
R863	4822 050 21002	1KΩ ± 2% 1/4W
R864	4822 050 21782	1.78KΩ ± 2% 1/4W
R866	4822 050 21212	1.21KΩ ± 2% 1/4W
R867	4822 050 25621	562Ω ± 2% 1/4W
R872	4822 050 25621	562Ω ± 2% 1/4W
R873	4822 050 21002	1KΩ ± 2% 1/4W
R874	4822 050 21212	1.21KΩ ± 2% 1/4W
R875	4822 050 21002	1KΩ ± 2% 1/4W
R876	4822 050 21782	1.78KΩ ± 2% 1/4W
<b>PP16-SEMICONDUCTORS</b>		
D651	4822 130 33305	DIODE 1SS176, MA165, 1SS254 30V 0.1A
▲ D831	4822 130 80907	DIODE S2VB
▲ D841	?	
?	4822 130 32508	DIODE RL103E/DSF10C
▲ D844	?	
▲ D851	?	
?	4822 130 33074	DIODE 30DF-2 200V 3A
▲ D854	?	
D855	4822 130 33664	ZENER DIODE HZ6L(3) 6.2V
D856	4822 130 33664	ZENER DIODE HZ6L(3) 6.2V
D861	4822 130 82956	ZENER DIODE HZ2CLL 2.4V
D871	4822 130 82956	ZENER DIODE HZ2CLL 2.4V

REF. DESIG.	PART NO.	DESCRIPTION
D872	4822 130 33759	ZENER DIODE 04AZ4.7ES, MTZJ4.7B, RD4.7ES
QN01	4822 209 83312	IC, RELAY DRIVE TA7317P
Q651	5322 130 41844	F.E.T. 2SK170 BL VGDS=-40V PD=0.4V
Q652	5322 130 41844	F.E.T. 2SK170 BL VGDS=-40V PD=0.4V
Q653	4822 130 62649	F.E.T. 2SJ74 BL VGDS=25V PD=24W
Q654	4822 130 62649	F.E.T. 2SJ74 BL VGDS=25V PD=24W
Q655	4822 209 32385	AMP MODULE
Q656	4822 209 32385	AMP MODULE
▲ Q851	4822 130 43023	TRANSISTOR 2SA1306 (O, Y)
▲ Q852	4822 130 43311	TRANSISTOR 2SC3298 (O, Y)
▲ Q853	4822 130 60107	TRANSISTOR 2SA1048 (Y, GR)
▲ Q854	4822 130 60839	TRANSISTOR 2SC2458 (Y, GR)
Q855	4822 130 60107	TRANSISTOR 2SA1048 (Y, GR)
Q856	4822 130 60839	TRANSISTOR 2SC2458 (Y, GR)
▲ Q861	4822 130 43311	TRANSISTOR 2SC3298 (O, Y)
Q862	?	
?	4822 130 60839	TRANSISTOR 2SC2458 (Y, GR)
Q864	?	
▲ Q871	4822 130 43023	TRANSISTOR 2SA1306 (O, Y)
Q872	4822 130 60107	TRANSISTOR 2SA1048 (Y, GR)
Q873	4822 130 60107	TRANSISTOR 2SA1048 (Y, GR)
<b>PP16-MISCELLANEOUS</b>		
▲ F831	4822 253 30402	FUSE T 800MA.BS.SEMKO.ETC
▲ F832	4822 253 30402	FUSE 800MA.BS.SEMKO.ETC
▲ F841	4822 070 31002	FUSE 1A 250V
▲ F851	4822 253 30402	FUSE T 800MA.BS.SEMKO.ETC
▲ F852	4822 253 30402	FUSE T 800MA.BS.SEMKO.ETC
▲ J831	4822 256 30329	JACK, FUSE HOLDER
▲ J832	4822 267 30978	JACK, FUSE HOLDER
▲ J833	4822 256 30329	JACK, FUSE HOLDER
▲ J834	4822 267 30978	JACK, FUSE HOLDER
▲ J841	4822 256 30329	JACK, FUSE HOLDER
▲ J842	4822 267 30978	JACK, FUSE HOLDER
▲ J851	4822 256 30329	JACK, FUSE HOLDER
▲ J852	4822 267 30978	JACK, FUSE HOLDER
▲ J853	4822 256 30329	JACK, FUSE HOLDER
▲ J854	4822 267 30978	JACK, FUSE HOLDER
L651	4822 280 20448	RELAY DC9V RA-9W-K FOR MUTING
L653	4822 158 60605	FERITE CORE
L654	4822 158 60605	FERITE CORE
<b>PP26-REGULATOR CIRCUIT BOARD</b>		
<b>PP26-SEMICONDUCTORS</b>		
▲ Q831	4822 209 62762	IC, REG NJN7909FA -9V 1A
▲ Q832	4822 209 62761	IC, REG NUM7809FA +9V 1A
▲ Q841	4822 209 31631	IC, REG NJM7805FA +5V 1A
<b>PS26-POWER SW CIRCUIT BOARD</b>		
<b>PS26-CAPACITOR</b>		
GH02	4822 121 43732	FILM 0.01μF ± 20% 250V
<b>PS26-MISCELLANEOUS</b>		
LH01	4822 157 70419	LF-4D-102
SH02	4822 276 11141	PUSH SWITCH, POWER SW

REF. DESIG.	PART NO.	DESCRIPTION
		<b>PU16 -<math>\mu</math>-COM AND DECODER CIRCUIT BOARD</b>
		<b>PU16-CAPACITORS</b>
CF03	4822 124 22274	ELECT 4.7 $\mu$ F 50V
CF04	4822 124 41539	ELECT 47 $\mu$ F 16V
CF05	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF06	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF07	4822 124 41539	ELECT 47 $\mu$ F 16V
CF08	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF09	4822 124 41539	ELECT 47 $\mu$ F 16V
CF10	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF13	4822 124 41539	ELECT 47 $\mu$ F 16V
CF14	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF17		
}	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
CF19		
CF20	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF21	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
CF50	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
CM01	4822 124 22274	ELECT 4.7 $\mu$ F 50V
CM04	5322 122 34098	CERAMIC 0.01 $\mu$ F $\pm$ 10%
CM05	5322 122 34098	CERAMIC 0.01 $\mu$ F $\pm$ 10%
CM07	4822 122 33714	CERAMIC 0.1 $\mu$ F +80%-20%
CM08	4822 122 33714	CERAMIC 0.1 $\mu$ F +80%-20%
CM09	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
C154	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C155	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C156	4822 124 41539	ELECT 47 $\mu$ F 16V
C157	4822 124 41539	ELECT 47 $\mu$ F 16V
C501	5322 122 32452	CERAMIC 47PF $\pm$ 5%
C502	4822 122 33127	CERAMIC 2200PF $\pm$ 10%
C504	4822 124 90357	ELECT 2.2 $\mu$ F 50V
C506	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
C514	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C515	4822 124 22274	ELECT 4.7 $\mu$ F 50V
C521	4822 124 41539	ELECT 47 $\mu$ F 16V
C522	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C523	4822 124 41539	ELECT 47 $\mu$ F 16V
C524	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C525	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C526	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
C527	4822 122 32669	CERAMIC 0.047 $\mu$ F +80%-20%
C531	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
C532	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
C561	4822 122 32669	CERAMIC 0.047PF +80%-20%
C562	4822 124 41539	ELECT 47 $\mu$ F 16V
C563	4822 126 12731	CERAMIC 5PF $\pm$ 0.25PF
C564	4822 126 12731	CERAMIC 5PF $\pm$ 0.25PF
C565	4822 124 41539	ELECT 47 $\mu$ F 16V
C566	4822 122 32669	CERAMIC 0.047PF +80%-20%
C568	4822 122 32669	CERAMIC 0.047PF +80%-20%
C569	4822 122 32669	CERAMIC 0.047PF +80%-20%
C570	5322 122 32531	CERAMIC 100PF $\pm$ 5%
C571	5322 122 32531	CERAMIC 100PF $\pm$ 5%
C572	4822 122 32669	CERAMIC 0.047PF +80%-20%
C573	5322 122 32654	CERAMIC 0.022 $\mu$ F $\pm$ 10%
C574	5322 122 32531	CERAMIC 100PF $\pm$ 5%
C575	5322 122 32658	CERAMIC 22PF $\pm$ 5%
C576	5322 122 32531	CERAMIC 100PF $\pm$ 10%
		<b>PU16-RESISTORS</b>
RF03	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF04	4822 111 90907	22K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF05		
}	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF07		
RF09		
}	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF12		

REF. DESIG.	PART NO.	DESCRIPTION
RF13	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF15	4822 111 90897	1M $\Omega$ $\pm$ 5% 1/10W, CHIP
RF22	4822 111 90967	4.7 $\Omega$ $\pm$ 5% 1/4W, FUSE
RF23		
}	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF25		
RF26	4822 111 90896	100K $\Omega$ $\pm$ 5% 1/4W, CHIP
RF29	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF30	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF41		
}	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF48		
RF49	4822 111 90919	47K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF50	4822 111 90906	2.2K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF51	4822 111 90896	100K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF52	4822 111 90896	100K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF53	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RF55	4822 111 90892	0 $\Omega$ $\pm$ 5% 1/10W, CHIP
RF99	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
RM01	4822 111 90919	47K $\Omega$ $\pm$ 5%, CHIP
RM02	4822 111 90918	4.7K $\Omega$ $\pm$ 5%, CHIP
RM03	4822 111 90918	4.7K $\Omega$ $\pm$ 5%, CHIP
RM06		
}	4822 111 90918	4.7K $\Omega$ $\pm$ 5%, CHIP
RM08		
RM11	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
R151	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
R152	4822 111 90919	47K $\Omega$ $\pm$ 5% 1/10W, CHIP
R153	4822 111 90896	100K $\Omega$ $\pm$ 5% 1/10W, CHIP
R154	4822 111 90897	1M $\Omega$ $\pm$ 5% 1/10W, CHIP
R155	4822 111 90896	100K $\Omega$ $\pm$ 5% 1/10W, CHIP
R156	4822 116 83255	3.3K $\Omega$ $\pm$ 5% 1/10W, CHIP
R157	4822 111 90922	5.6K $\Omega$ $\pm$ 5% 1/10W, CHIP
R158	4822 111 91368	120K $\Omega$ $\pm$ 5% 1/10W, CHIP
R159	4822 116 83609	390K $\Omega$ $\pm$ 5% 1/10W, CHIP
R160	4822 111 90899	15K $\Omega$ $\pm$ 5% 1/10W, CHIP
R161	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
R162	4822 111 90896	100K $\Omega$ $\pm$ 5% 1/10W, CHIP
R163	4822 111 90919	47K $\Omega$ $\pm$ 5% 1/10W, CHIP
R164	4822 111 91075	1.2K $\Omega$ $\pm$ 5% 1/10W, CHIP
R165	4822 111 91368	120K $\Omega$ $\pm$ 5% 1/10W, CHIP
R501	4822 111 90906	2.2K $\Omega$ $\pm$ 5% 1/10W, CHIP
R502	4822 111 90907	22K $\Omega$ $\pm$ 5% 1/10W, CHIP
R503	4822 111 90897	1M $\Omega$ $\pm$ 5% 1/10W, CHIP
R504	4822 116 81011	75 $\Omega$ $\pm$ 5% 1/10W, CHIP
R505	4822 111 90916	3.9K $\Omega$ $\pm$ 5% 1/10W, CHIP
R506	4822 111 90895	10K $\Omega$ $\pm$ 5% 1/10W, CHIP
R507	4822 111 90908	220K $\Omega$ $\pm$ 5% 1/10W, CHIP
R508	4822 111 91369	1.5K $\Omega$ $\pm$ 5% 1/10W, CHIP
R509	4822 111 90894	1K $\Omega$ $\pm$ 5% 1/10W, CHIP
R520	4822 111 90967	4.7 $\Omega$ $\pm$ 5% 1/4W, FUSE
R561	4822 111 90967	4.7 $\Omega$ $\pm$ 5% 1/4W, FUSE
R562	4822 111 90897	1M $\Omega$ $\pm$ 5% 1/10W, CHIP
R564	4822 111 90897	1M $\Omega$ $\pm$ 5% 1/10W, CHIP
R565	4822 111 90967	4.7 $\Omega$ $\pm$ 5% 1/4W, FUSE
R566	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
R567	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
R569	4822 111 90897	1M $\Omega$ $\pm$ 5% 1/10W, CHIP
R570	4822 111 90918	4.7K $\Omega$ $\pm$ 5% 1/10W, CHIP
R574	4822 111 90892	0 $\Omega$ $\pm$ 5% 1/10W, CHIP
		<b>PU16-SEMICONDUCTORS</b>
DM02	4822 130 81148	DIODE IMN10, CHIP
DM03	4822 130 83401	DIODE FMP1, CHIP
DM05	4822 130 81148	DIODE IMN10, CHIP
D151	4822 130 32868	DIODE MA153, CHIP
QF01	4822 209 62768	MICROPROCESSOR MC68HC11A0P MAIN $\mu$ -COM

REF. DESIG.	PART NO.	DESCRIPTION
QF02	4822 209 62756	IC MC68HC24
QF04	4822 209 52387	IC, 128K CMOS EPROM (CD-15)
QF05	5322 209 71555	IC MB74HC373
QF06	4822 209 51273	IC, EE PROM MSM2816A
QF08	4822 209 31928	IC 74HC00
QF09	4822 209 31928	IC 74HC00
QF11	4822 209 31012	IC, RESET PST529C 4.5V LOW
QF13	4822 130 60941	DIGITAL TRANSISTOR DTA114EK
QF14	4822 130 90451	DIGITAL TRANSISTOR DTC114EK
QF15	4822 130 61437	DIGITAL TRANSISTOR DTC114YK
QF16	4822 130 61436	DIGITAL TRANSISTOR DTA114EK
QM01	4822 209 83803	IC LB1645N
QM02	4822 209 83803	IC LB1645N
QM03	4822 209 32442	IC TC7WU04F
QM04	4822 130 90449	DIGITAL TRANSISTOR DTC-144EK
QM05	4822 130 60941	DIGITAL TRANSISTOR DTA114EK
QM07		
QM08	4822 130 90449	DIGITAL TRANSISTOR DTC-144EK
Q151	4822 209 83357	IC NJM4560M
Q152	4822 130 42733	TRANSISTOR 2SA1162 (G), CHIP
Q153	4822 130 61799	DIGITAL TRANSISTOR DTA144TK
Q501	4822 209 63453	IC SAA7310
Q502	4822 209 73952	IC, D-RAM MB81416C-15/ MN4264P-15
Q503	4822 130 61438	TRANSISTOR 2SA1005 (L, R)
Q504	4822 209 62588	IC ADC PCF2705P
Q505	4822 209 62764	IC 74HC164F
Q507	4822 130 90451	DIGITAL TRANSISTOR DTC114EK
Q508	4822 209 32442	IC TC7WU04F
Q509	4822 209 32442	IC TC7WU04F
Q532	4822 209 31442	IC TC7W00F
Q533	4822 209 61494	IC 74HC74F
Q534	4822 209 61494	IC 74HC74F
Q561	4822 209 31356	IC, BS DAC SAA7350
Q562	4822 209 31016	MICROPROCESSOR, LC6528CH QFP
Q563	4822 209 31011	IC, DIGITAL FIL SM5803APT
Q564	4822 209 32442	IC TC7WU04F
Q565	4822 209 62764	IC 74HC164F
Q566	4822 209 62764	IC 74HC164F
Q567	5322 209 73187	IC 74HC04
Q569	4822 209 32443	IC, DSP SM5852
Q572	4822 130 90323	DIGITAL TRANSISTOR DTC114TK
Q573	4822 130 90323	DIGITAL TRANSISTOR DTC114TK
L501	4822 152 20647	<b>PU16-MISCELLANEOUS</b> CHOKE COIL 2.2μH
XF01	4822 242 72066	CERAMIC VIBRATOR CST8.00MHZ(MT)
X561	4822 242 81524	CRYSTAL 33.8688MHZ MF
X562	4822 242 72223	CERAMIC VIBRATOR CST4.00MGW
C101	4822 121 42327	<b>PV16-SERVO CIRCUIT BOARD</b> <b>PV16-CAPACITORS</b> FILM 470PF ± 5% 50V
C103	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C110	4822 124 41539	ELECT 47μF 16V
C113	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C114	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C126	4822 124 41539	ELECT 47μF 16V
C128	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C132	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C133	4822 124 41539	ELECT 47μF 16V
C134	4822 124 41539	ELECT 47μF 16V

REF. DESIG.	PART NO.	DESCRIPTION
C135	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C136	4822 124 41539	ELECT 47μF 16V
C137	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
C140	4822 124 41539	ELECT 47μF 16V
R116	4822 115 90194	<b>PV16-RESISTORS</b> 15Ω ± 2% 1/4W, FUSE
R134	4822 100 20681	2.2KΩ TRIMMING
R136	4822 100 11352	22KΩ TRIMMING
R141	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
R146	4822 111 90967	4.7Ω ± 5% 1/4W, FUSE
D132	4822 130 80272	<b>PV16-SEMICONDUCTORS</b> ZENER DIODE 7.5V 04AZ7.5, RD7.5ES, MTZJ7.5C
D133	4822 130 80272	ZENER DIODE 7.5V 04AZ7.5, RD7.5ES, MTZJ7.5C
D134	4822 130 32508	DIODE RL103E/DSF10C
Q101	4822 209 30436	IC, HF& FOC QFP TDA8808
Q102	4822 130 61441	TRANSISTOR 2SD1862 (Q,R)
Q103	4822 209 30437	IC, RAD QFP TDA8809
Q106	4822 209 62755	IC, DUAL POWER OP AMP TCA0372
▲Q108	4822 209 30442	IC NJM79L06A
J101	4822 267 31465	<b>PV16-MISCELLANEOUS</b> JACK FPC CONNECT
J102	4822 267 41094	PLUG 4P
CY01	4822 122 32486	<b>PY16-DISPLAY AND KEY-SENS CIRCUIT BOARD</b> <b>PY16-CAPACITORS</b> CERAMIC 0.01μF +80%-20% 50V
CY02	4822 124 21737	ELECT 100μF 6.3V
CY04	4822 124 21894	ELECT 10μF 16V
CY05	5322 122 32265	CERAMIC 100PF ± 5% 50V
CY06	5322 122 32265	CERAMIC 100PF ± 5% 50V
CY07	4822 124 21983	ELECT 4.7μF 50V
CY11	4822 124 21737	ELECT 100μF 6.3V
CY12	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
CY13	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
CY61	4822 122 30103	CERAMIC 0.022μF +80%-20% 50V
CY62	4822 124 90365	ELECT 220μF 25V
CY63	4822 124 41536	ELECT 100μF 35V
CY81	4822 122 32678	ELECT 22μF 6.3V
CY82	4822 124 21894	ELECT 10μF 16V
CY83	4822 124 21902	ELECT 47μF 10V
DY01	4822 130 33305	<b>PY16-SEMICONDUCTORS</b> DIODE 1SS176.MA165,1SS254 30V 0.1A
DY03	4822 130 33305	DIODE 1SS176.MA165,1SS254 30V 0.1A
DY05	4822 130 33305	DIODE 1SS176.MA165,1SS254 30V 0.1A
DY08	4822 130 33305	DIODE 1SS176.MA165,1SS254 30V 0.1A
DY09	4822 130 80319	ZENER DIODE 04AZ9.1, RD9.1ES, MTZJ9.1C
DY51	4822 130 33305	DIODE 1SS176.MA165,1SS254 30V 0.1A
DY54	4822 130 33948	ZENER DIODE 04AZ5.6-Y
DY61	4822 130 80839	DIODE S5688G VRM=400V IO=1A
DY62	4822 130 80839	DIODE S5688G VRM=400V IO=1A
DY81	4822 130 80326	L.E.D. LT3D8B RED 30
DY82	4822 130 33305	DIODE 1SS176.MA165,1SS254
QY01	4822 209 62769	MICROPROCESSOR μPD7537A FRONT CPU

REF. DESIG.	PART NO.	DESCRIPTION
QY05	4822 209 62763	IC TC74HC164BP
QY06	4822 130 63211	DIGITAL TRANSISTOR DTA114TS
QY11	4822 130 63211	DIGITAL TRANSISTOR DTA114TS
QY51	4822 130 63211	DIGITAL TRANSISTOR DTA114TS
QY52	4822 130 42715	TRANSISTOR 2SA608SP, 2SA1048, 2SA1309, 2SA933S
QY53	4822 130 42298	TRANSISTOR 2SC536SP, 2SC2458, 2SC3311, 2SC1740S
QY81	4822 209 73951	IC, RESET PST523D (4.2V) LOW
QY82	4822 130 63211	DIGITAL TRANSISTOR DTA114TS
QY83	4822 130 60588	DIGITAL TRANSISTOR DTC114ES
QY84	4822 130 42715	TRANSISTOR 2SA608SP, 2SA1048, 2SA1309, 2SA933S
		<b>PY16-MISCELLANEOUS</b>
SY03	4822 276 13408	PUSH SWITCH
SY04	4822 276 20508	PUSH SWITCH
SY05	4822 276 20508	PUSH SWITCH
SY06	4822 276 13408	PUSH SWITCH
SY08	4822 276 20508	PUSH SWITCH
SY09	4822 276 13408	PUSH SWITCH
XY01	4822 242 73695	CERAMIC VIBRATOR CSB590P 590KHZ
ZY01	4822 130 82393	PHOTO UNIT GP1U720R 36KHZ
		<b>PY36-DISPLAY 3 CIRCUIT BOARD</b>
		<b>PY36-MISCELLANEOUS</b>
SY07	4822 276 13408	PUSH SWITCH PLAY

**NOTE ON SAFETY**

Symbol ▲ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol ▲ . Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.