


Service Manual

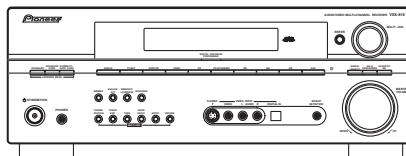

VSX-816-K

ORDER NO.
RRV3328

AUDIO/VIDEO MULTI-CHANNEL RECEIVER

VSX-816-K

VSX-816-S

VSX-916-K

VSX-916-S

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-816-K	KUXJ/CA	AC 120 V	
VSX-816-S	KUXJ/CA	AC 120 V	
VSX-916-K	MYXJ5	AC 220 V to 230 V	
VSX-916-S	MYXJ5	AC 220 V to 230 V	



For details, refer to "Important Check Points for Good Servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2006

SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

- **Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.**

WARNING

- B This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 – Proposition 65

NOTICE

(FOR CANADIAN MODEL ONLY)

- Fuse symbols (fast operating fuse) and/or (slow operating fuse) on PCB indicate that replacement parts must be of identical designation.

REMARQUE

(POUR MODÈLE CANADIEN SEULEMENT)

- C Les symboles de fusible (fusible de type rapide) et/ou (fusible de type lent) sur CCI indiquent que les pièces de remplacement doivent avoir la même désignation.


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

- The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

- D Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

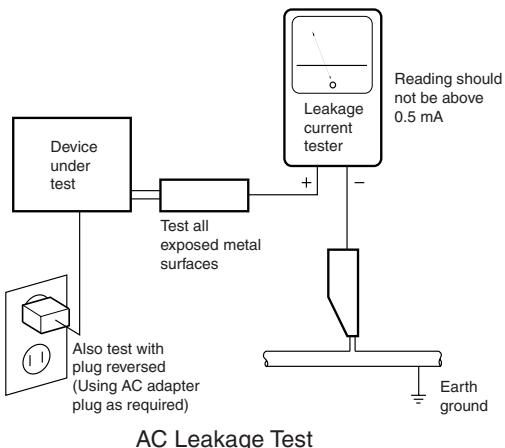

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a Δ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.
- Use genuine parts. Be sure to use important parts for safety.
- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.

Please be sure that all screws are fastened, and that there are no loose screws.

- ⑤ Make sure each connectors are correctly inserted.

Please be sure that all connectors are inserted, and that there are no imperfect insertion.

- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.

Please check that neither solder debris nor screws remain inside the product.

- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.

Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.

- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

A

B

C

D

E

F

CONTENTS

SAFETY INFORMATION	2
A 1. SPECIFICATIONS	5
2. EXPLODED VIEWS AND PARTS LIST	6
2.1 PACKING	6
2.2 EXTERIOR SECTION.....	8
2.3 FRONT PANEL SECTION	10
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM.....	12
3.1 BLOCK DIAGRAM	12
3.2 OVERALL WIRING CONNECTION DIAGRAM.....	14
3.3 MAIN ASSY (1/3)	16
3.4 MAIN ASSY (2/3)	18
3.5 MAIN ASSY (3/3)	20
3.6 DSP ASSY (1/2) (for VSX-816)	22
3.7 DSP ASSY (2/2) (for VSX-816)	24
B 3.8 DSP ASSY (1/2) (for VSX-916)	26
3.9 DSP ASSY (2/2) (for VSX-916)	28
3.10 POWER PACK (1/2), TRANS 2 and TRANS 3 ASSYS	30
3.11 POWER PACK ASSY (2/2)	32
3.12 COMPONENT ASSY	34
3.13 HEADPHONE, PRE-OUT and 5.1CHIN ASSYS	35
3.14 FRONT DISPLAY, R. ENCODER and POWER KEY ASSYS	36
3.15 S. VIDEO, TRANS 4 and REGULATOR ASSYS	38
3.16 VIDEO, DIGITAL IN, FRONT VIDEO, PRIMARY and TRANS 1 ASSYS.....	40
3.17 USB ASSY	42
3.18 USB IN ASSY	44
C 4. PCB CONNECTION DIAGRAM	46
4.1 USB IN ASSY	47
4.2 MAIN ASSY	48
4.3 DSP ASSY (FOR VSX-916)	52
4.4 DSP ASSY (FOR VSX-816)	56
4.5 POWER PACK ASSY	60
4.6 TRANS2, TRANS3, TRANS4 and TRANS1 ASSYS	64
4.7 COMPONENT ASSY	66
4.8 HEADPHONE and 5.1 CHIN ASSYS	67
4.9 FRONT DISPLAY, R. ENCODER and POWER KEY ASSYS	68
4.10 S. VIDEO and FRONT VIDEO ASSYS	72
4.11 PRE-OUT ASSY	74
D 4.12 REGULATOR and DIGITAL IN ASSYS	75
4.13 PRIMARY ASSY	76
4.14 VIDEO ASSY	78
4.15 USB ASSY	79
5. PCB PARTS LIST	80
6. ADJUSTMENT	108
E 7. GENERAL INFORMATION	109
7.1 DIAGNOSIS	109
7.1.1 DISASSEMBLY	109
7.2 PARTS.....	112
7.2.1 IC	112
7.3 EXPLANATION	127
7.3.1 DETECTION CIRCUIT	127
7.3.2 AMPLIFIER SYSTEM PROTECTION OPERATION SPECIFICATION.....	129
7.3.3 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART	131
7.3.4 USB Module	132
8. PANEL FACILITIES	138

1. SPECIFICATIONS

VSX-816/KUXJ/CA

Amplifier section

- **Continuous power output (stereo)**
Front. . 110 W (20 to 20 000 Hz, THD 0.7 %, 8 Ω)¹

- **Continuous power output (surround)**
Front. 110 W per channel (1 kHz, 1.0 %, 8 Ω)
Center 110 W (1 kHz, 1.0 %, 8 Ω)
Surround 110 W per channel
(1 kHz, 1.0 %, 8 Ω)
Surround Back 110 W per channel
(1 kHz, 1.0 %, 8 Ω)

Audio section

- **Input (Sensitivity/Impedance)**

CD, DVR/VCR, CD-R/TAPE/MD,
DVD/LD, TV/SAT 200 mV/47 kΩ

- **Frequency response**

CD, DVR/VCR, CD-R/TAPE/MD, DVD/LD,
TV/SAT 5 Hz to 100,000 Hz^{±3} dB

- **Output (Level/Impedance)**

DVR/VCR REC, CD-R/TAPE/
MD REC 200 mV/2.2 kΩ

- **Tone control**

Bass. ± 6 dB (100 Hz)

Treble. ± 6 dB (10 kHz)

Loudness. +10 dB/+5 dB (100 Hz/10 kHz)
(at volume level -50 dB)

- **Signal-to-Noise Ratio (IHF, short circuited, A network)**

CD, DVR/VCR, CD-R/TAPE/MD,
DVD/LD, TV/SAT 96 dB

- **Signal-to Noise Ratio [EIA, at 1 W (1 kHz)]**

CD, DVR/VCR, CD-R/TAPE/MD,
DVD/LD, TV/SAT 79 dB

Video Section

- **Input (Sensitivity/Impedance)**

DVR/VCR, DVD/LD, TV/SAT 1 Vp-p/75 Ω

- **Output (Level/Impedance)**

DVR/VCR, MONITOR OUT 1 Vp-p/75 Ω

- **Frequency response**

DVR/VCR, DVD/LD,
TV/SAT ⇒ MONITOR 5 Hz to 7 MHz^{±3} dB

Signal-to-Noise Ratio. 55 dB

Crosstalk. 50 dB

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "Surround EX", and the double-D symbol are trademarks of Dolby Laboratories.


"DTS", "DTS-ES", "DTS 96/24" and "Neo:6" are trademarks of Digital Theater Systems, Inc.

Accessories


AM loop antenna
(ATB7013)




FM wire antenna
(ADH7030)

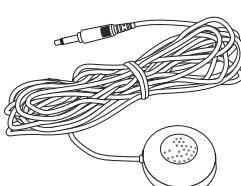

Microphone
(for Auto MCACC setup)
(APM7008)

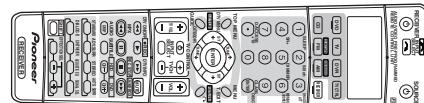

Remote control
(KUXJ/CA : XXD3105)
(MYXJ5 : XXD3107)

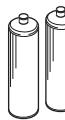

AA size IEC R6
Dry cell batteries (x2)

Component video section

- **Input (Sensitivity)**

DVD/LD, TV/SAT, DVR/VCR 1 Vp-p/75 Ω

- **Output (Level/Impedance)**

MONITOR OUT 1 Vp-p/75 Ω

- **Frequency response**

DVD/LD, TV/SAT,

DVR/VCR ⇒ MONITOR 5 Hz to 40 MHz^{±3} dB

Signal-to-Noise Ratio. 60 dB

- **FM Tuner Section**

Frequency Range 87.5 MHz to 108 MHz

Usable Sensitivity Mono: 13.2 dBf, IHF
(1.3 μV/ 75 Ω)

50 dB Quieting Sensitivity. Mono: 20.2 dB

Stereo: 38.6 dBf

Signal-to-Noise Ratio. Mono: 73 dB (at 85 dBf)

Stereo: 70 dB (at 85 dBf)

Distortion Stereo: 0.5 % (1 kHz)

Alternate Channel Selectivity 60 dB

(400 kHz)

Stereo Separation 40 dB (1 kHz)

Frequency Response 30 Hz to 15 kHz

(±1 dB)

Antenna Input (DIN) 75 Ω unbalanced

AM Tuner Section

Frequency Range 530 kHz to 1700 kHz

Sensitivity (IHF, Loop antenna). 350 μV/m

Signal-to-Noise Ratio. 50 dB

Antenna Loop antenna

Miscellaneous

Power requirements AC 120V / 60Hz

Power consumption 370 W / 480 VA

In standby 0.5 W

Dimensions

..... 16^{9/16} (W) in. x 6^{1/4} (H) in. x 13^{7/8} (D) in.

420 (W) mm x 158 (H) mm x 352.5 (D) mm

Weight (without package). 20.3 lb (9.2 kg)

Furnished Parts

Microphone (for Auto MCACC setup). 1

Dry cell batteries (AA size IEC R6) 2

Remote control 1

AM loop antenna. 1

FM wire antenna 1

Operating instructions

**Note**

- Specifications and the design are subject to possible modifications without notice, due to improvements.

Note

1 Continuous average power output of 110 watts* per channel, min., at 8ohms, from 20 Hz to 20 000 Hz with no more than 0.7 %** total harmonic distortion (front).


* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers.

** Measured by Audio Spectrum Analyzer.

2. EXPLODED VIEWS AND PARTS LIST

- A**
- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screws adjacent to ∇ mark on product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

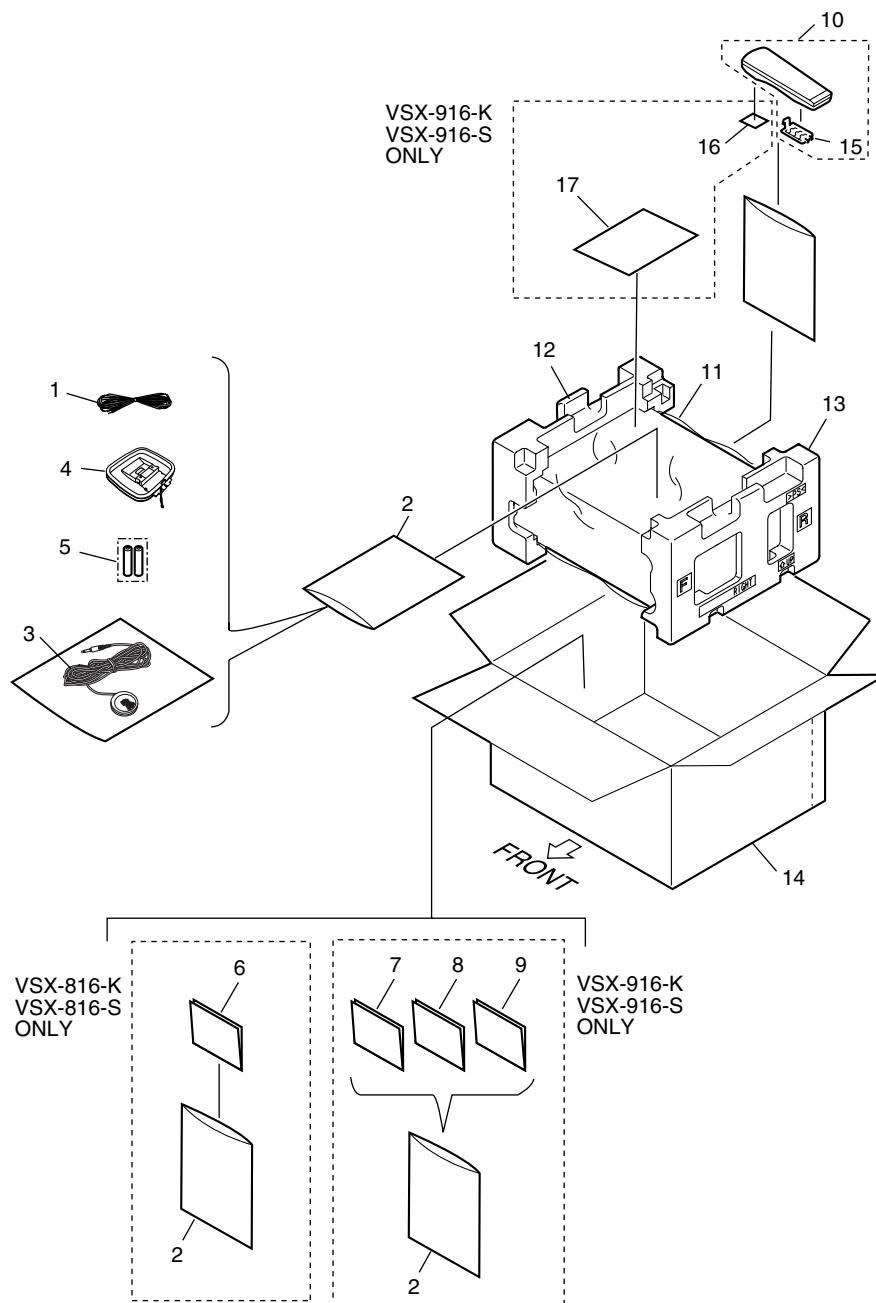

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	FM Antenna	ADH7030	11	Packing Sheet	AHG7069
NSP 2	Polyethylene Bag	See Contrast table(2)	12	Left Pad V3	XHA3158
3	Microphone Assy	APM7008	13	Right Pad V3	XHA3159
4	AM Loop Antenna	ATB7013	14	Packing Case	See Contrast table(2)
NSP 5	Battery (AA/R6) 2P	XEX3001	15	Battery Cover	XZN3140
6	Operating Instructions (English)	See Contrast table(2)	16	Label (WEEE)	See Contrast table(2)
7	Operating Instructions (English/Italian)	See Contrast table(2)	NSP 17	Warranty Card	See Contrast table(2)
8	Operating Instructions (French/German)	See Contrast table(2)			
9	Operating Instructions (Dutch/Spanish)	See Contrast table(2)			
10	Remote control	See Contrast table(2)			

(2) CONTRAST TABLE

VSX-816-S/KUXJ/CA, VSX-916-K/MYXJ5, VSX-916-S/MYXJ5 and VSX-816-K/KUXJ/CA are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-816-K /KUXJ/CA	VSX-816-S /KUXJ/CA	VSX-916-K /MYXJ5	VSX-916-S /MYXJ5
NSP	2	Polyethylene Bag	AHG7117	AHG7117	Z21-038	Z21-038
	6	Operating Instructions (English)	XRB3056	XRB3056	Not used	Not used
	7	Operating Instructions (English/Italian)	Not used	Not used	XRE3117	XRE3117
	8	Operating Instructions (French/German)	Not used	Not used	XRC3226	XRC3226
	9	Operating Instructions (Dutch/Spanish)	Not used	Not used	XRC3225	XRC3225
	10	Remote control	XXD3105	XXD3105	XXD3107	XXD3107
	14	Packing Case	XHD3576	XHD3583	XHD3587	XHD3588
	16	Label (WEEE)	Not used	Not used	ARW7322	ARW7322
NSP	17	Warranty Card	Not used	Not used	ARY7065	ARY7065


C

D

E

F

2.2 EXTERIOR SECTION

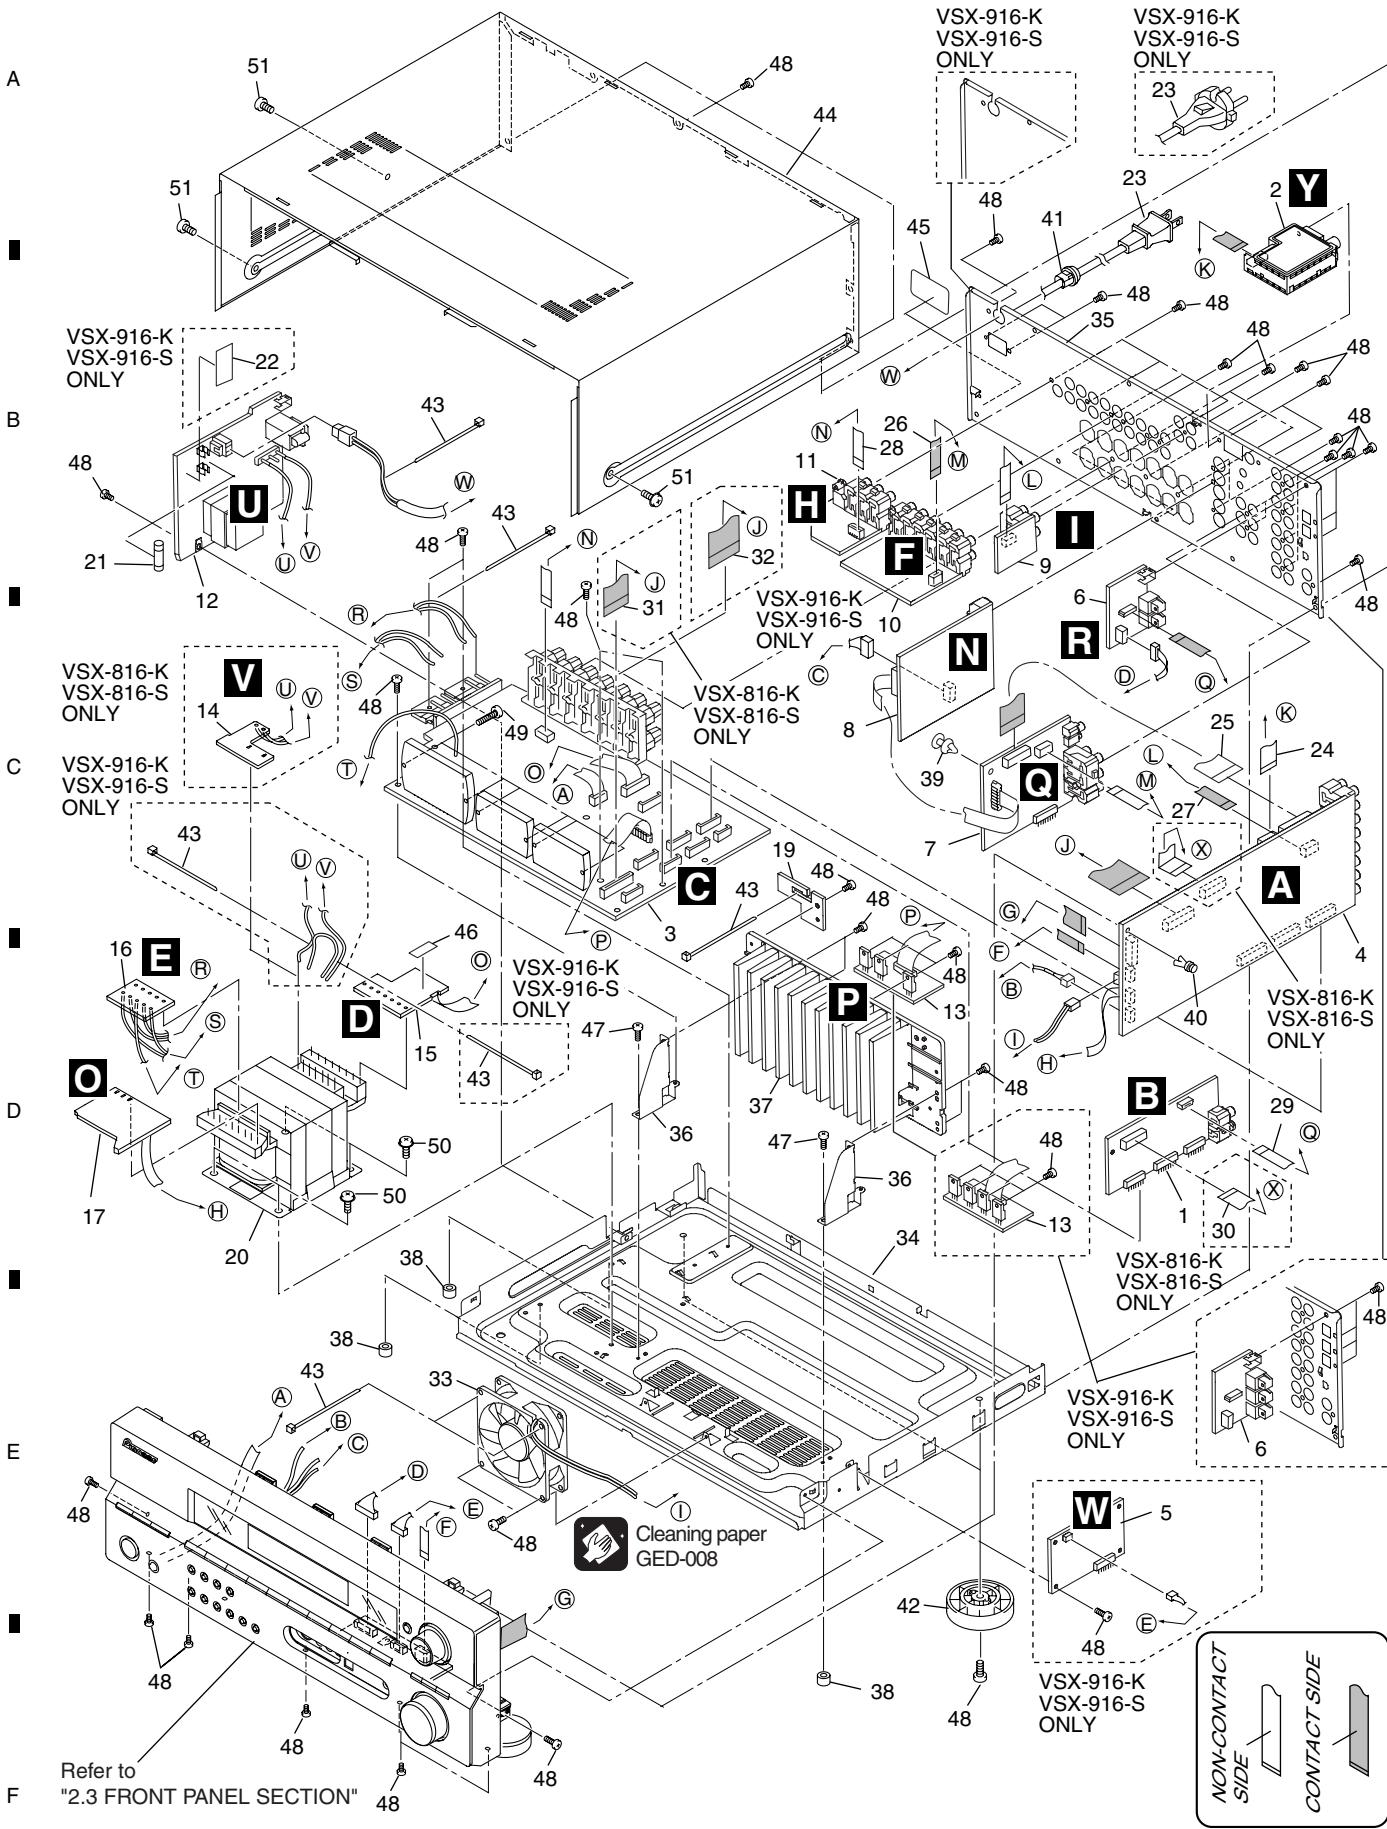

(1) EXTERIOR SECTION PARTS LIST



Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	DSP ASSY	See Contrast table(2)	26	7P F. F. C/30V	XDD3192
2	FM/AM TUNER UNIT	See Contrast table(2)	27	7P F. F. C/30V	XDD3191
3	POWER PACK ASSY	See Contrast table(2)	28	8P F. F. C/30V	XDD3195
4	MAIN ASSY	See Contrast table(2)	29	10P F. F. C/30V	XDD3196
5	USB ASSY	See Contrast table(2)	30	12P F. F. C/30V	See Contrast table(2)
6	DIGITAL IN ASSY	See Contrast table(2)	31	17P F. F. C/30V	See Contrast table(2)
7	VIDEO ASSY	XWZ4062	32	25P F. F. C/30V	See Contrast table(2)
8	S VIDEO ASSY	XWZ4065	33	DC Fan Motor	XXM3012
9	5.1 CH IN ASSY	XWZ4069	NSP 34	Chassis	XNA3026
10	COMPONENT VIDEO ASSY	XWZ4097	35	R Panel	See Contrast table(2)
11	PRE-OUT ASSY	See Contrast table(2)	36	H/S Angle V3	XNG3145
12	PRIMARY ASSY	See Contrast table(2)	NSP 37	H/Sink	XNH3043
13	REGULATOR ASSY	See Contrast table(2)	NSP 38	Spacer	AEB7092
14	TRANS 1 ASSY	See Contrast table(2)	NSP 39	PCB Spacer	AEC7156
15	TRANS 2 ASSY	See Contrast table(2)	40	Push Rivet	AEC7205
16	TRANS 3 ASSY	XWZ4079	41	Cord Stopper	See Contrast table(2)
17	TRANS 4 ASSY	XWZ4093	42	Insulator	PNW2766
18	•••••		NSP 43	Binder (BK-1)	ZCA-BK1
19	BINDER ASSY	XWZ4199	44	Bonnet	See Contrast table(2)
△ 20	Transformer	See Contrast table(2)	NSP 45	Label	VRW1629
△ 21	Fuse	See Contrast table(2)	46	ICP Label	See Contrast table(2)
22	Fuse Card	See Contrast table(2)	47	Screw	BBZ30P060FCC
△ 23	AC Power Cord	See Contrast table(2)	48	Screw	BBZ30P080FNI
24	11P F. F. C/30V	XDD3189	49	Screw	BBZ30P140FTC
25	19P F. F. C/30V	XDD3190	50	Screw	BBZ40P080FNI
			51	Screw	See Contrast table(2)

(2) CONTRAST TABLE

VSX-816-S/KUXJ/CA, VSX-916-K/MYXJ5, VSX-916-S/MYXJ5 and VSX-816-K/KUXJ/CA are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-816-K /KUXJ/CA	VSX-816-S /KUXJ/CA	VSX-916-K /MYXJ5	VSX-916-S /MYXJ5
	1	DSP ASSY	AWX8699	AWX8699	AWX8572	AWX8572
	2	FM/AM TUNER UNIT	AXX7210	AXX7210	AXX7170	AXX7170
	3	POWER PACK ASSY	XWZ4087	XWZ4087	XWZ4088	XWZ4088
	4	MAIN ASSY	XWK3233	XWK3233	XWK3234	XWK3234
	5	USB ASSY	Not used	Not used	AWX8704	AWX8704
	6	DIGITAL IN ASSY	XWZ4067	XWZ4067	XWZ4068	XWZ4068
	11	PRE-OUT ASSY	XWZ4098	XWZ4098	XWZ4200	XWZ4200
	12	PRIMARY ASSY	XWZ4072	XWZ4072	XWZ4073	XWZ4073
	13	REGULATOR ASSY	XWZ4129	XWZ4129	XWZ4116	XWZ4116
	14	TRANS 1 ASSY	XWZ4078	XWZ4078	Not used	Not used
△	15	TRANS 2 ASSY	XWZ4166	XWZ4166	XWZ4092	XWZ4092
△	20	Transformer	XTS3101	XTS3101	XTS3102	XTS3102
△	21	Fuse (10A)	REK1154	REK1154	Not used	Not used
△	21	Fuse (T3.15A)	Not used	Not used	REK1027	REK1027
△	22	Fuse Card	Not used	Not used	AAX7493	AAX7493
△	23	AC Power Cord	ADG7024	ADG7024	VDG1080	VDG1080
	30	12P F. F. C/30V	XDD3198	XDD3198	Not used	Not used
	31	17P F. F. C/30V	XDD3203	XDD3203	Not used	Not used
	32	25P F. F. C/30V	Not used	Not used	XDD3201	XDD3201
	35	R Panel	XNC3409	XNC3426	XNC3410	XNC3428
	41	Cord Stopper	CM-22-C	CM-22-C	CM-22-B	CM-22-B
	44	Bonnet	XZN3183	XZN3184	XZN3183	XZN3184
	46	ICP Label	XAX3120	XAX3120	XAX3121	XAX3121
	51	Screw	BBZ30P080FTB	BBZ30P080FNI	BBZ30P080FTB	BBZ30P080FNI

2.3 FRONT PANEL SECTION

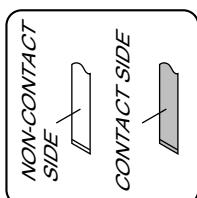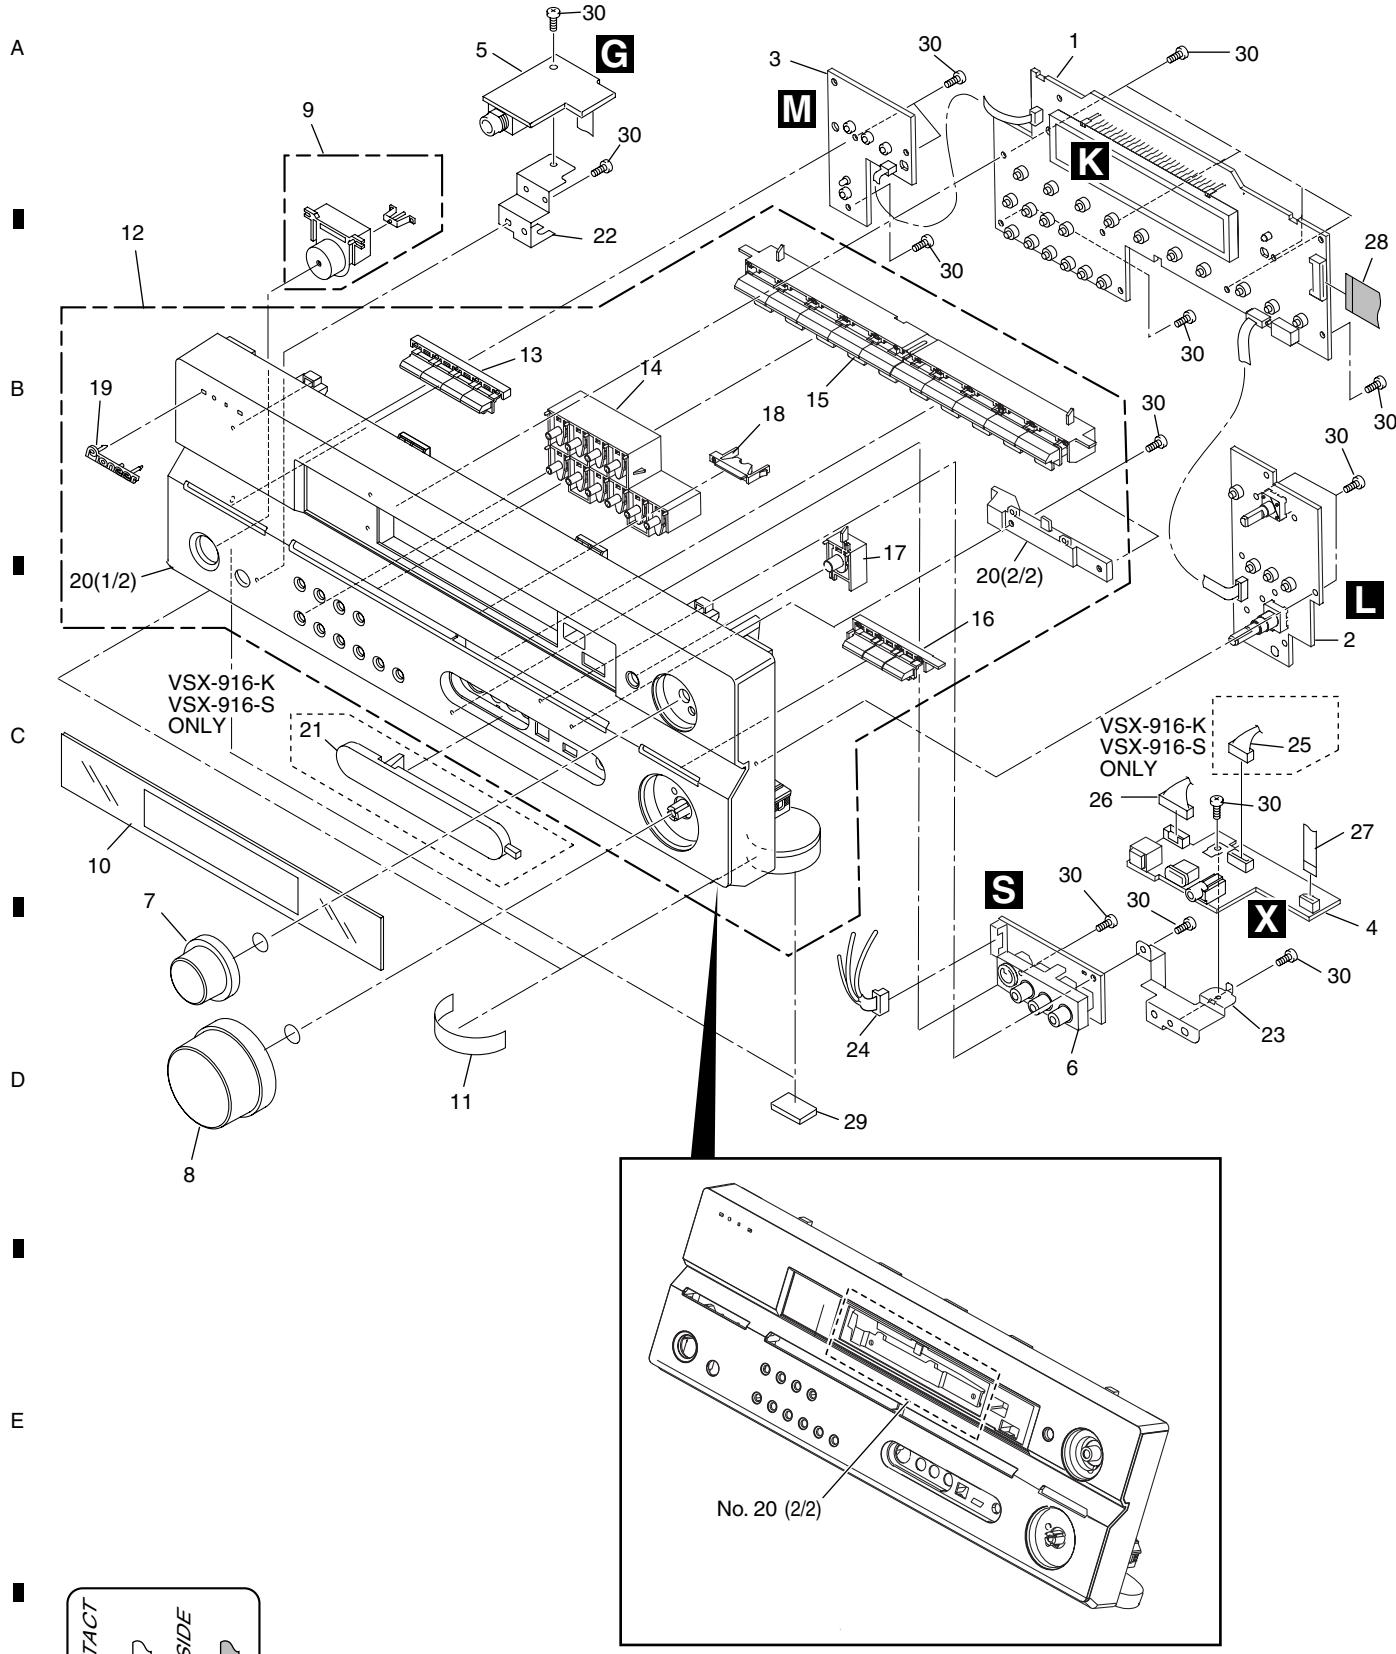

(1) FRONT PANEL SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	FRONT DISPLAY ASSY	XWZ4054	18	C Lens V3 (PLS)	XAK3534
2	R. ENCODER ASSY	XWZ4055	19	PIONEER Badge	See Contrast table(2)
3	POWER KEY ASSY	XWZ4057	20	FRT Panel	See Contrast table(2)
4	USB IN ASSY	See Contrast table(2)			
5	HP ASSY	XWZ4095	21	Input Cover	See Contrast table(2)
6	FRONT VIDEO ASSY	XWZ4109	22	Earth Plate HP V2	XNG3131
7	JOG Knob	See Contrast table(2)	23	Earth Plate FR V3	XNG3144
8	VOL Knob	See Contrast table(2)	24	8P Shield Cable	XDX3026
9	STDBY BTN Assy	See Contrast table(2)	25	4P Shield Cable	See Contrast table(2)
10	D Panel V3MCACC	XAK3528	26	5P Shield Cable	XDX3027
			27	5P F.F.C/30V	XDD3199
NSP	11 Gold Foil Lavel	XAX3487	28	17P F.F.C/30V	XDD3200
NSP	12 F PANEL Assy	See Contrast table(2)	29	Rubber Sheet	AEB1111
	13 Tuner BTN	See Contrast table(2)	30	Screw	BPZ30P080FTC
	14 SUB BTN	See Contrast table(2)			
	15 FUNC BTN	See Contrast table(2)			
	16 LISTEN BTN	See Contrast table(2)			
	17 JOG Button	See Contrast table(2)			

(2) CONTRAST TABLE

VSX-816-S/KUXJ/CA, VSX-916-K/MYXJ5, VSX-916-S/MYXJ5 and VSX-816-K/KUXJ/CA are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-816-K /KUXJ/CA	VSX-816-S /KUXJ/CA	VSX-916-K /MYXJ5	VSX-916-S /MYXJ5
NSP	4	USB IN ASSY	XWK3249	XWK3249	XWK3250	XWK3250
	7	JOG Knob	XAB3046	XAB3047	XAB3046	XAB3047
	8	VOL Knob	XAB3049	XAB3050	XAB3049	XAB3050
	9	STDBY BTN Assy	XAD3216	XAD3217	XAD3216	XAD3217
	12	F Panel Assy	XXG3240	XXG3241	XXG3242	XXG3243
	13	Tuner BTN	XAD3230	XAD3248	XAD3230	XAD3248
	14	SUB BTN	XAD3231	XAD3249	XAD3231	XAD3249
	15	FUNC BTN	XAD3232	XAD3250	XAD3232	XAD3250
	16	LISTEN BTN	XAD3233	XAD3251	XAD3233	XAD3251
	17	JOG Button	XAD3240	XAD3252	XAD3240	XAD3252
	19	PIONEER Badge	XAM3006	VAM1129	XAM3006	VAM1129
	20	FRT Panel	XMB3218	XMB3219	XMB3220	XMB3221
	21	Input Cover	Not used	Not used	XAK3532	XAK3533
	25	4P Shield Cable	Not used	Not used	XDX3028	XDX3028

C


D


E

F


3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

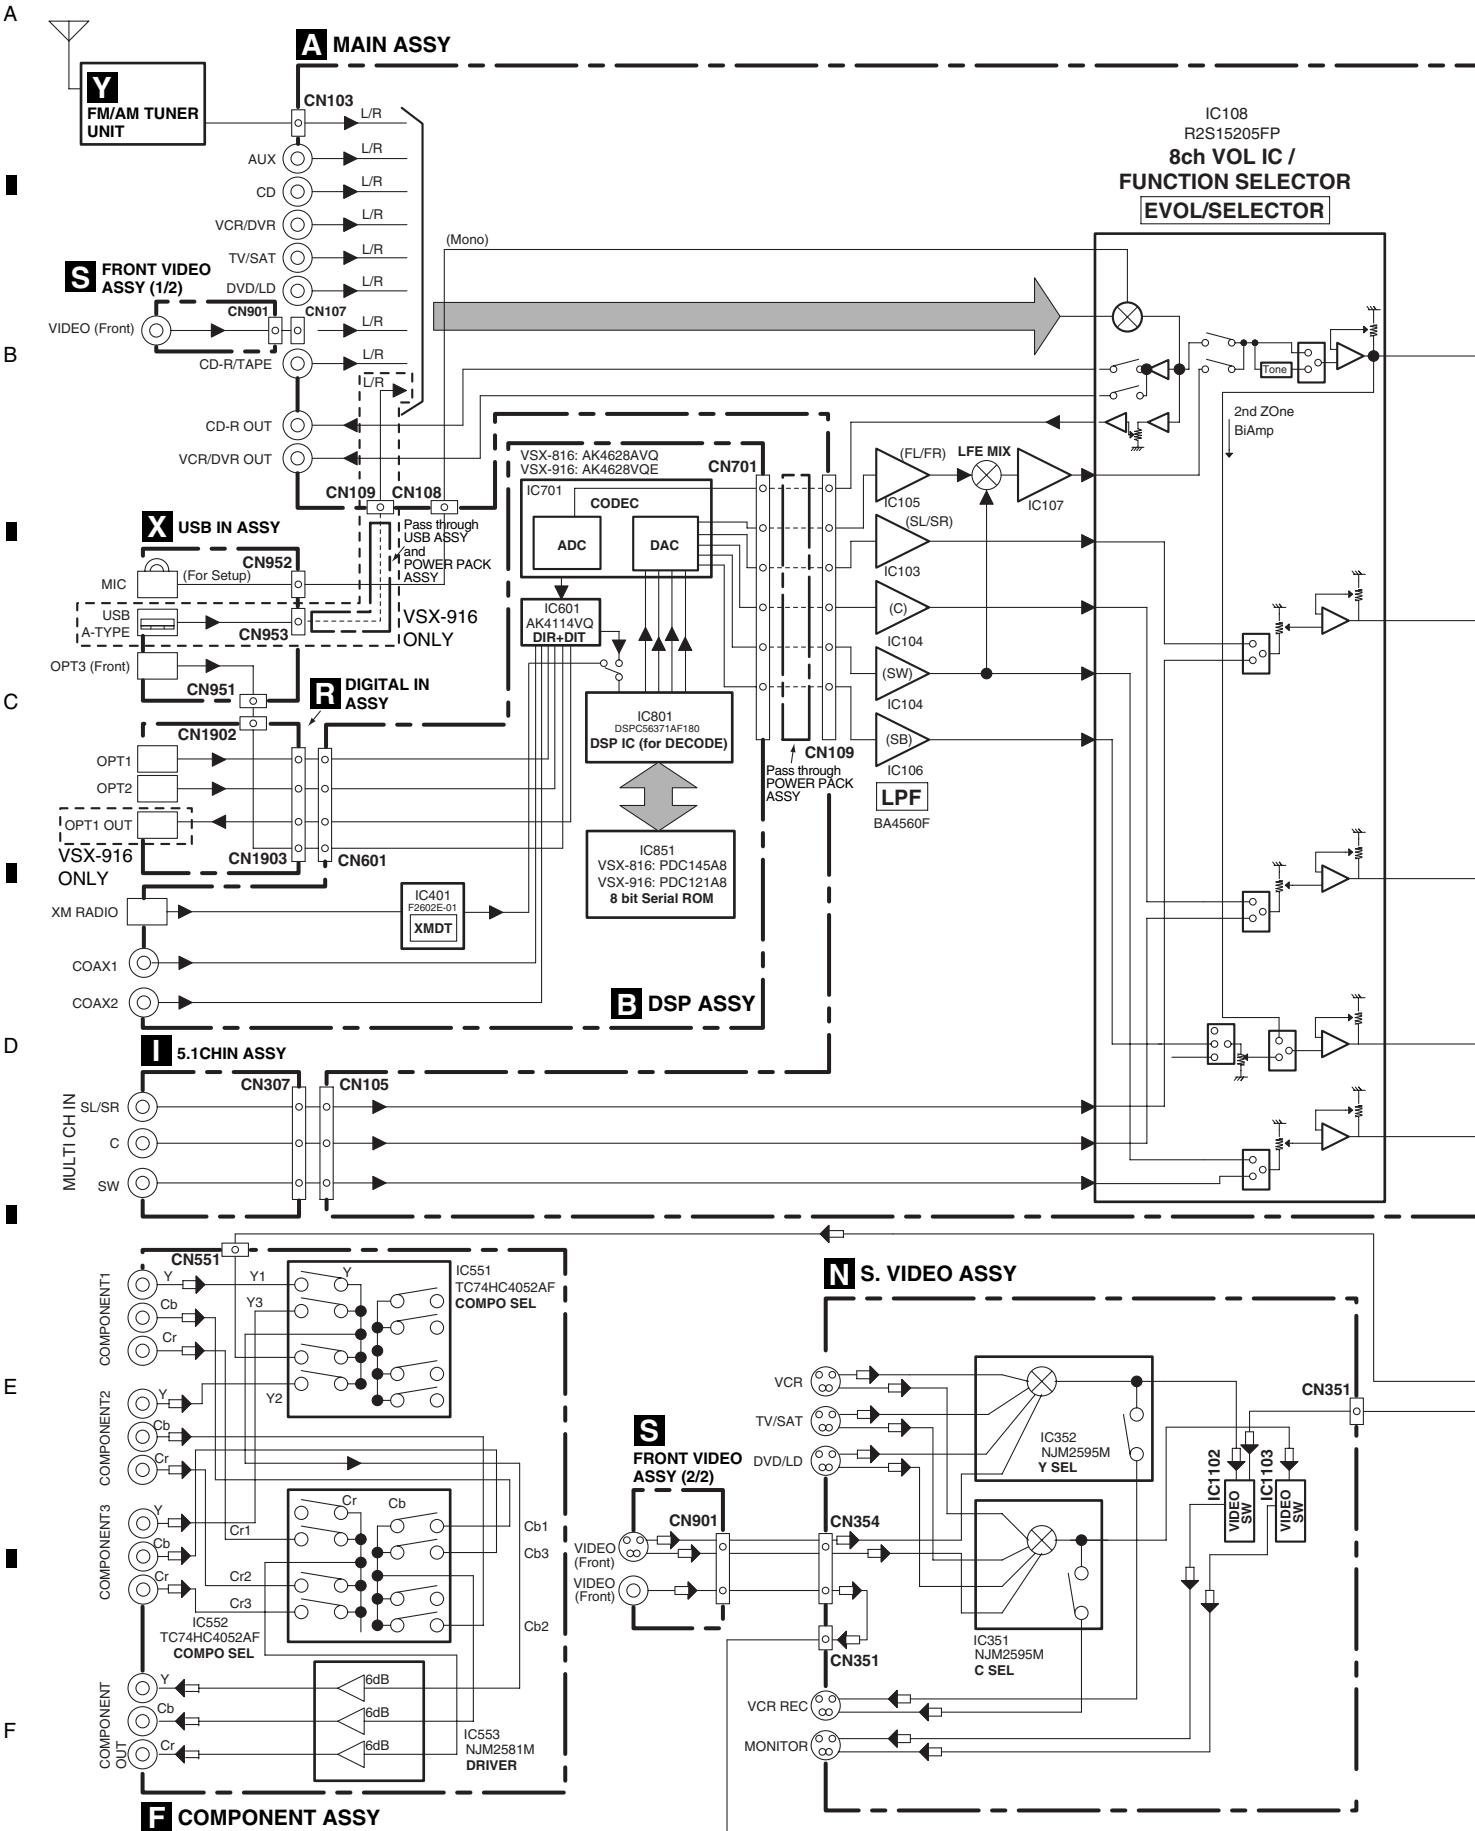


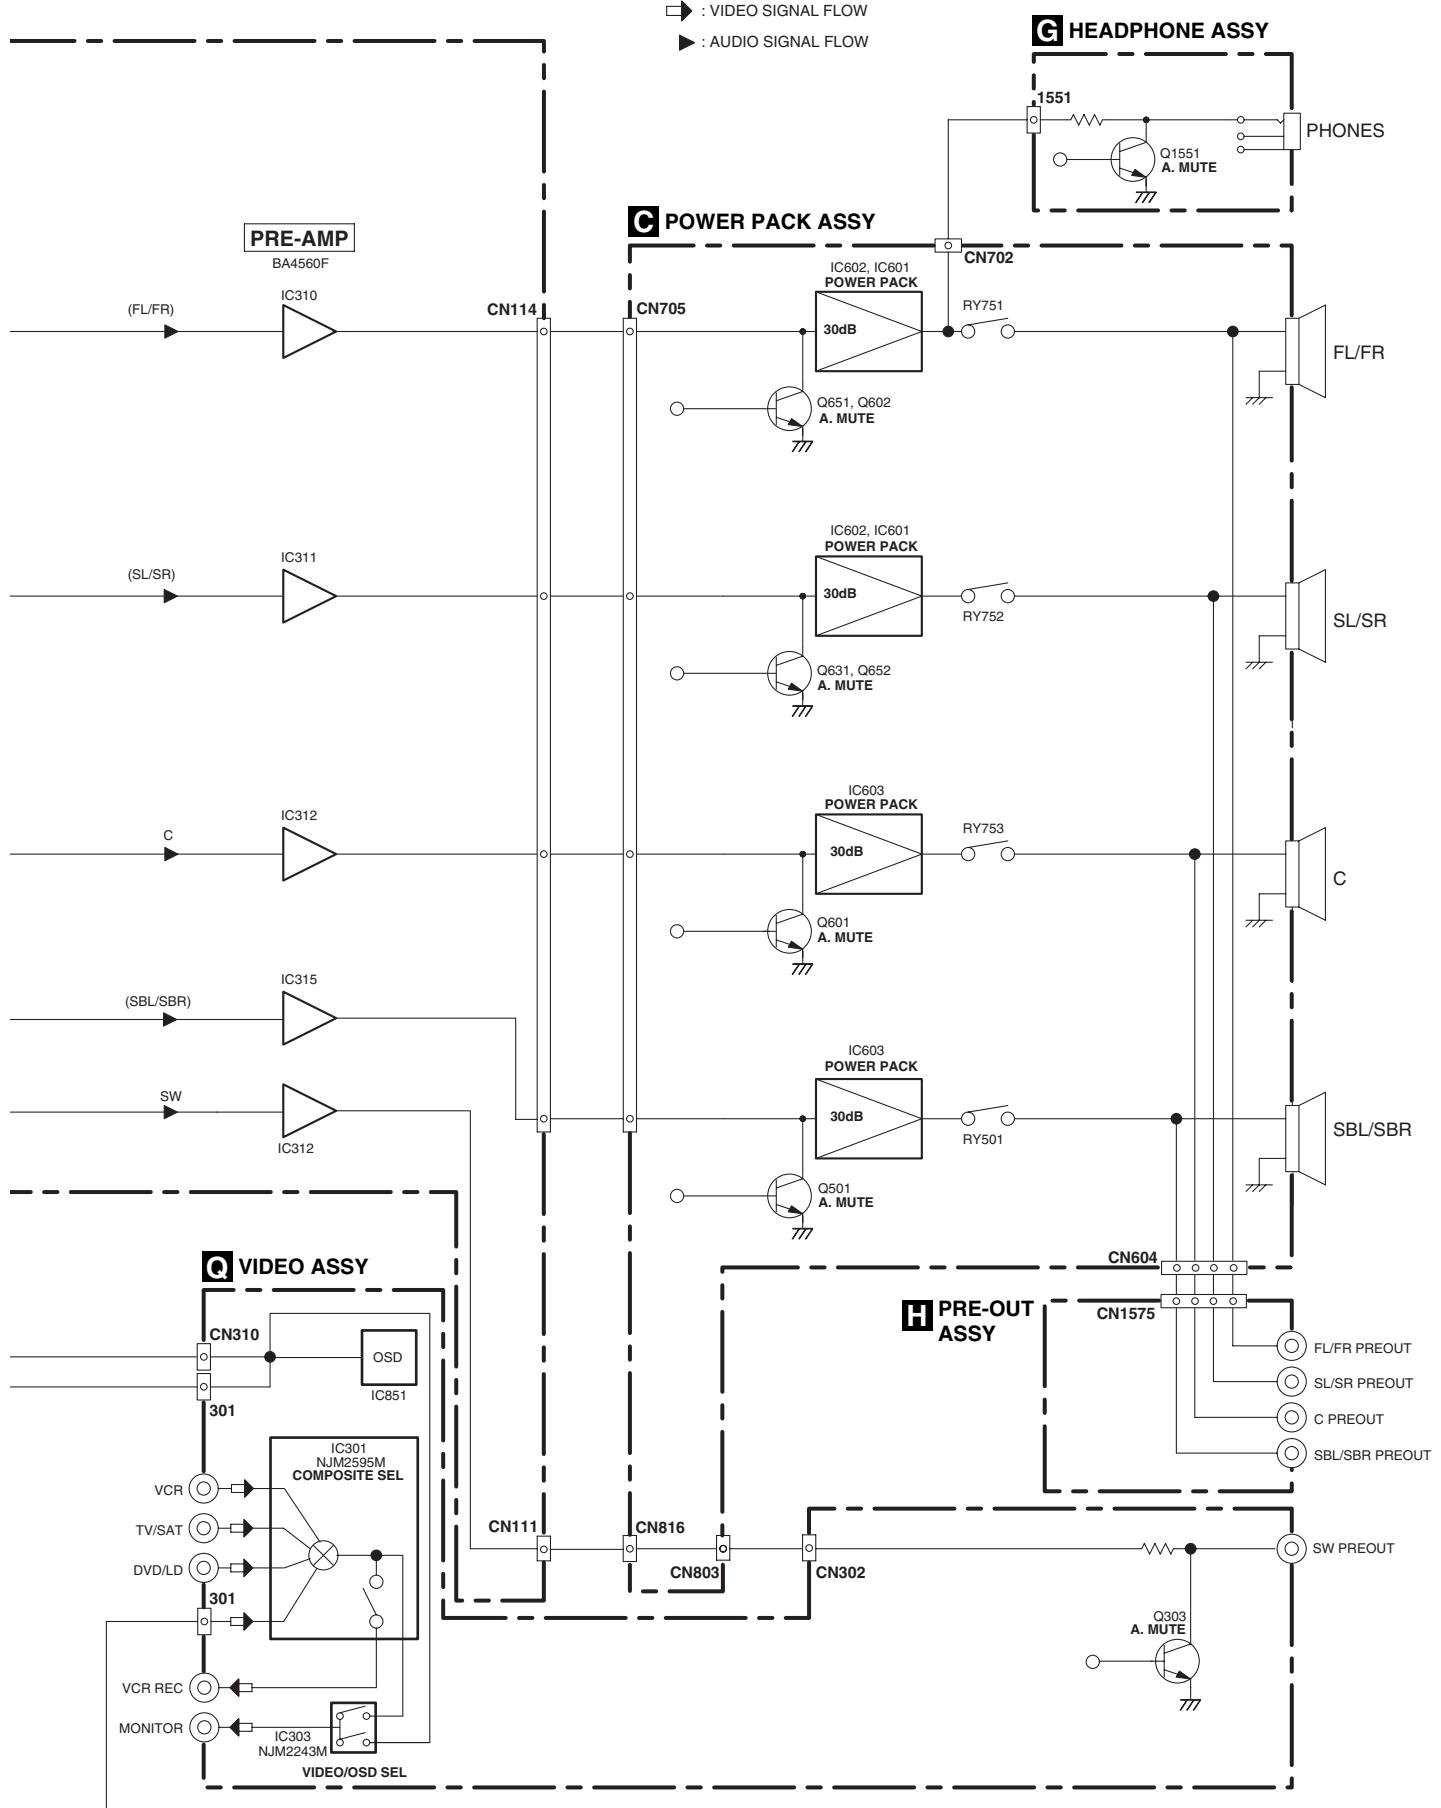


3.2 OVERALL WIRING CONNECTION DIAGRAM

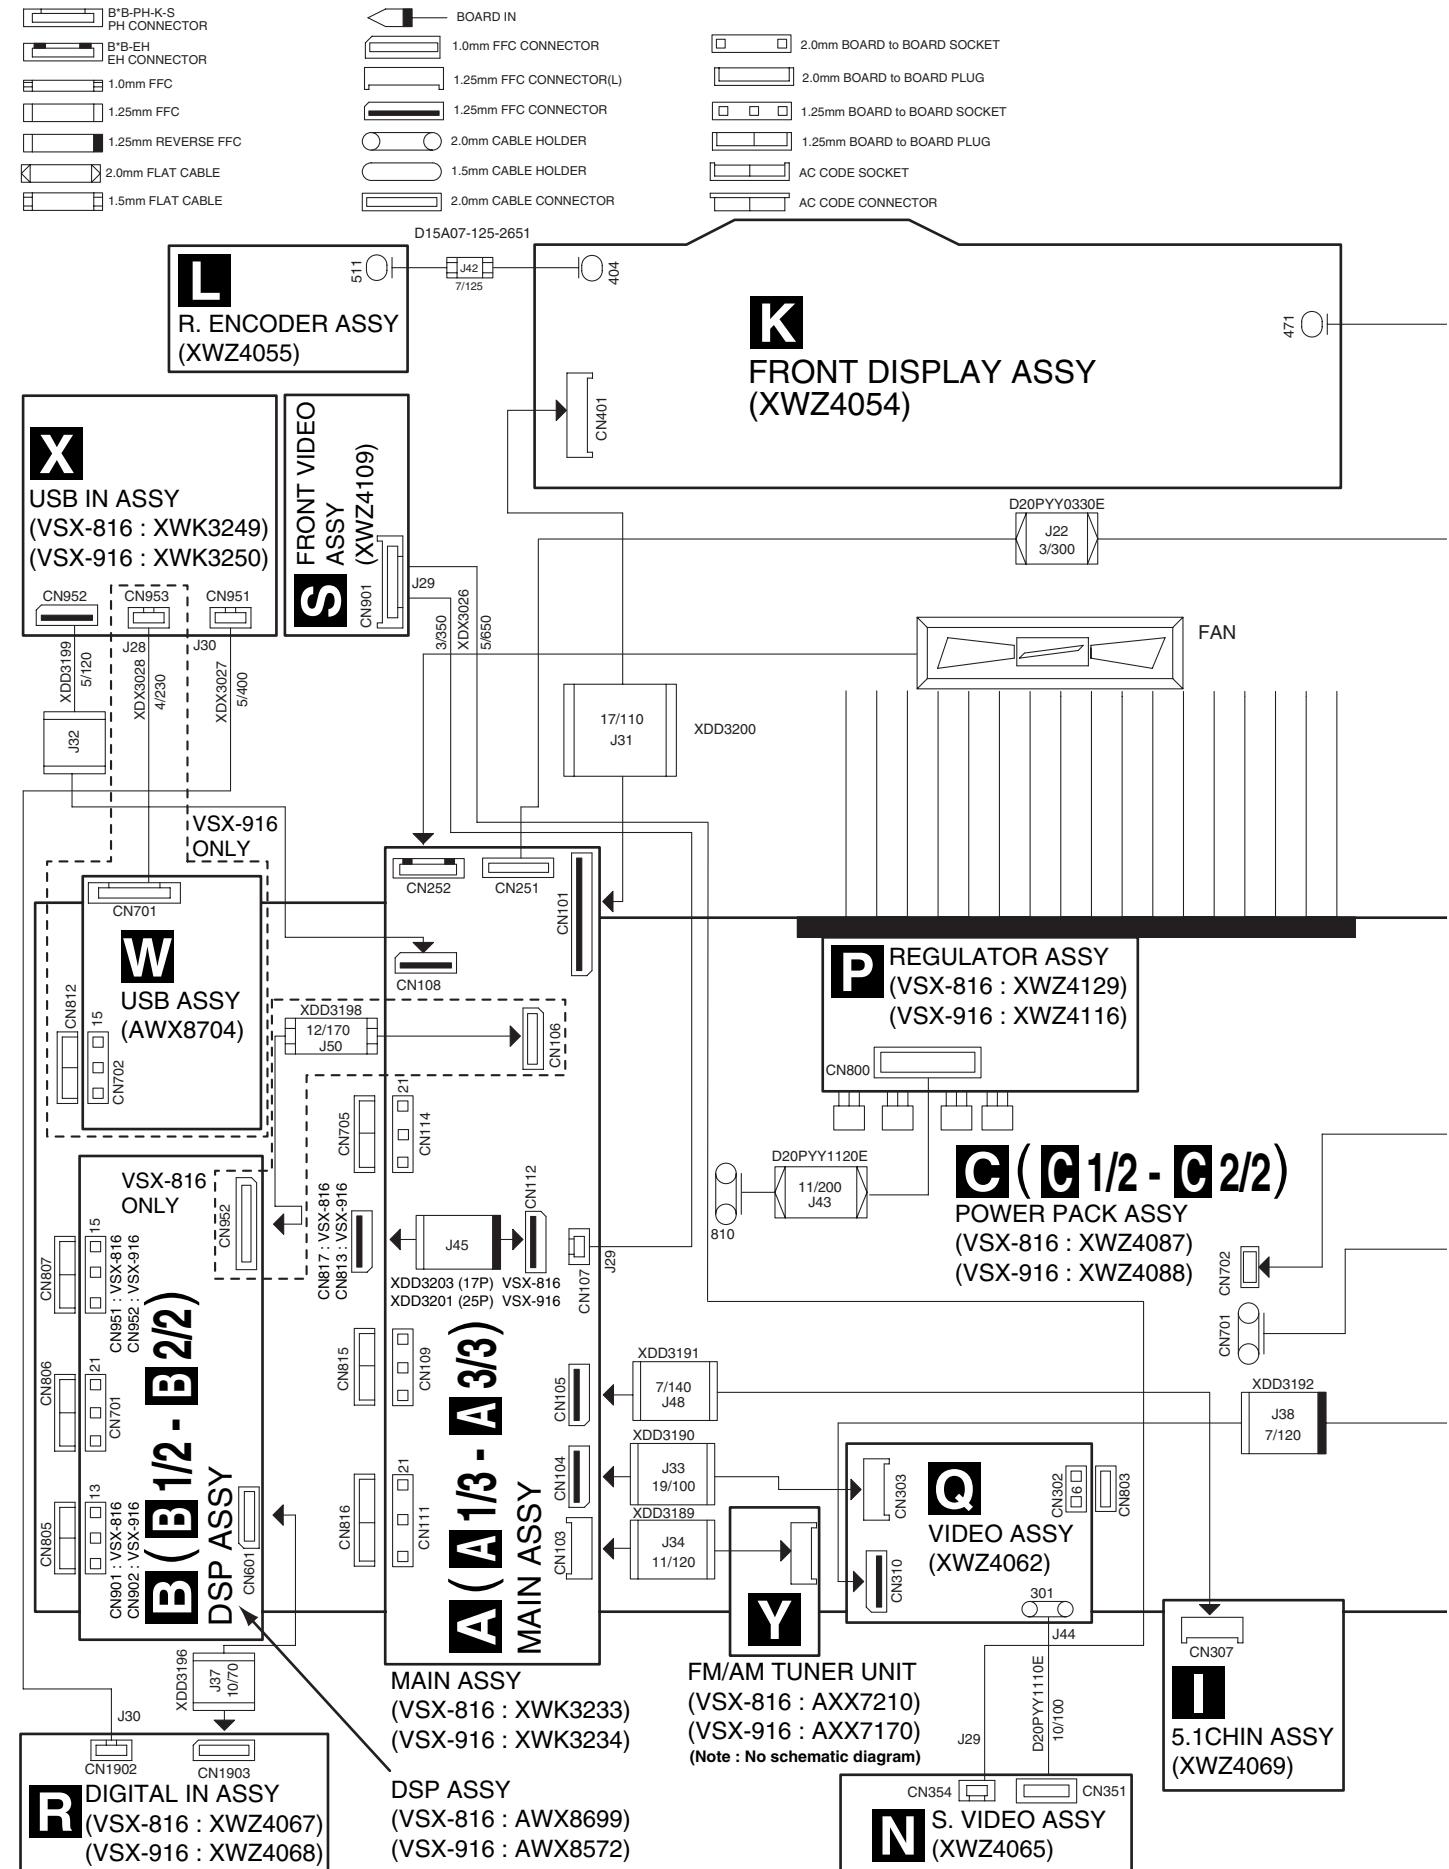

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 -  : The power supply is shown with the marked box.

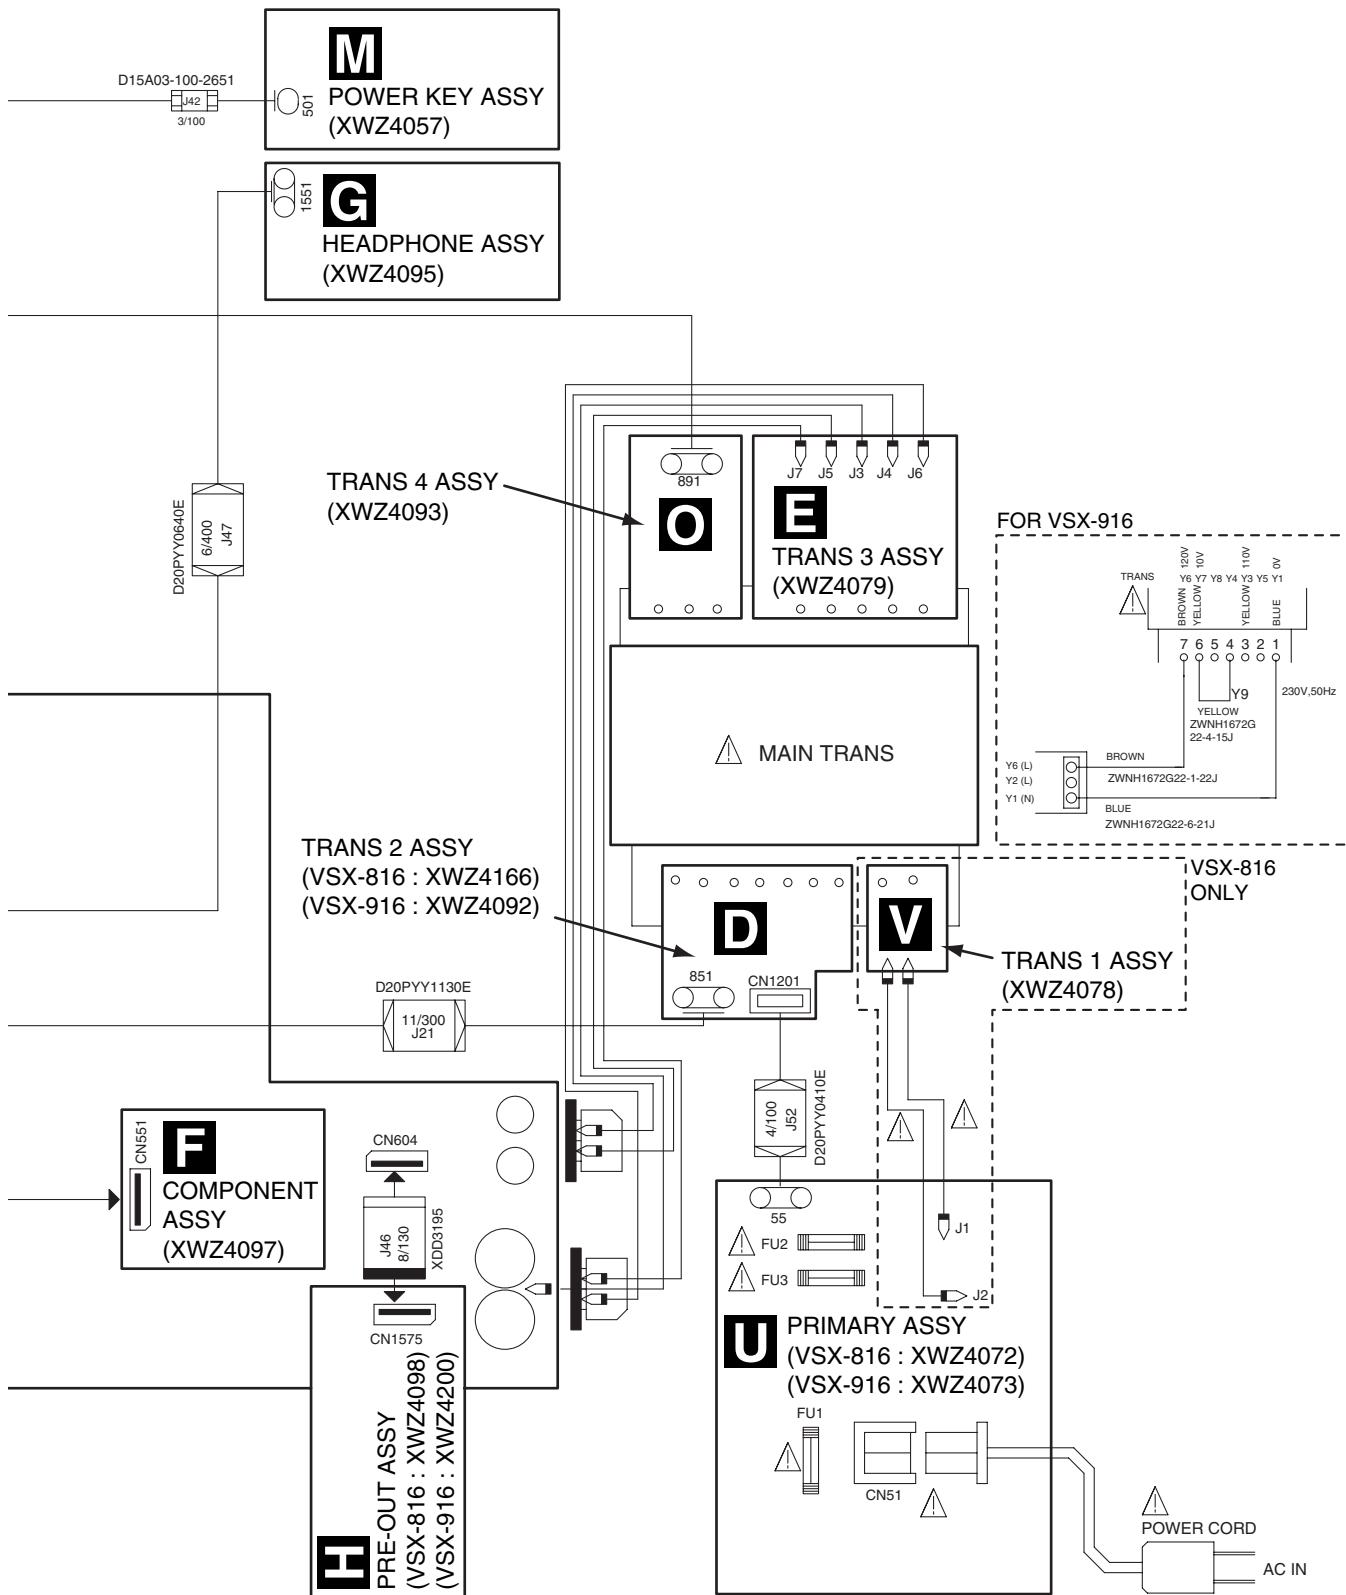


- (L) : Audio Signal Route (L ch)
 (M) : Audio Signal Route (Mic ch)
 (FL) : Audio Signal Route (Front L ch)
 (SL) : Audio Signal Route (Surround L ch)
 (C) : Audio Signal Route (Center ch)
 (SBL) : Audio Signal Route (Surround Back L ch)
 (SW) : Audio Signal Route (SubWoofer ch)

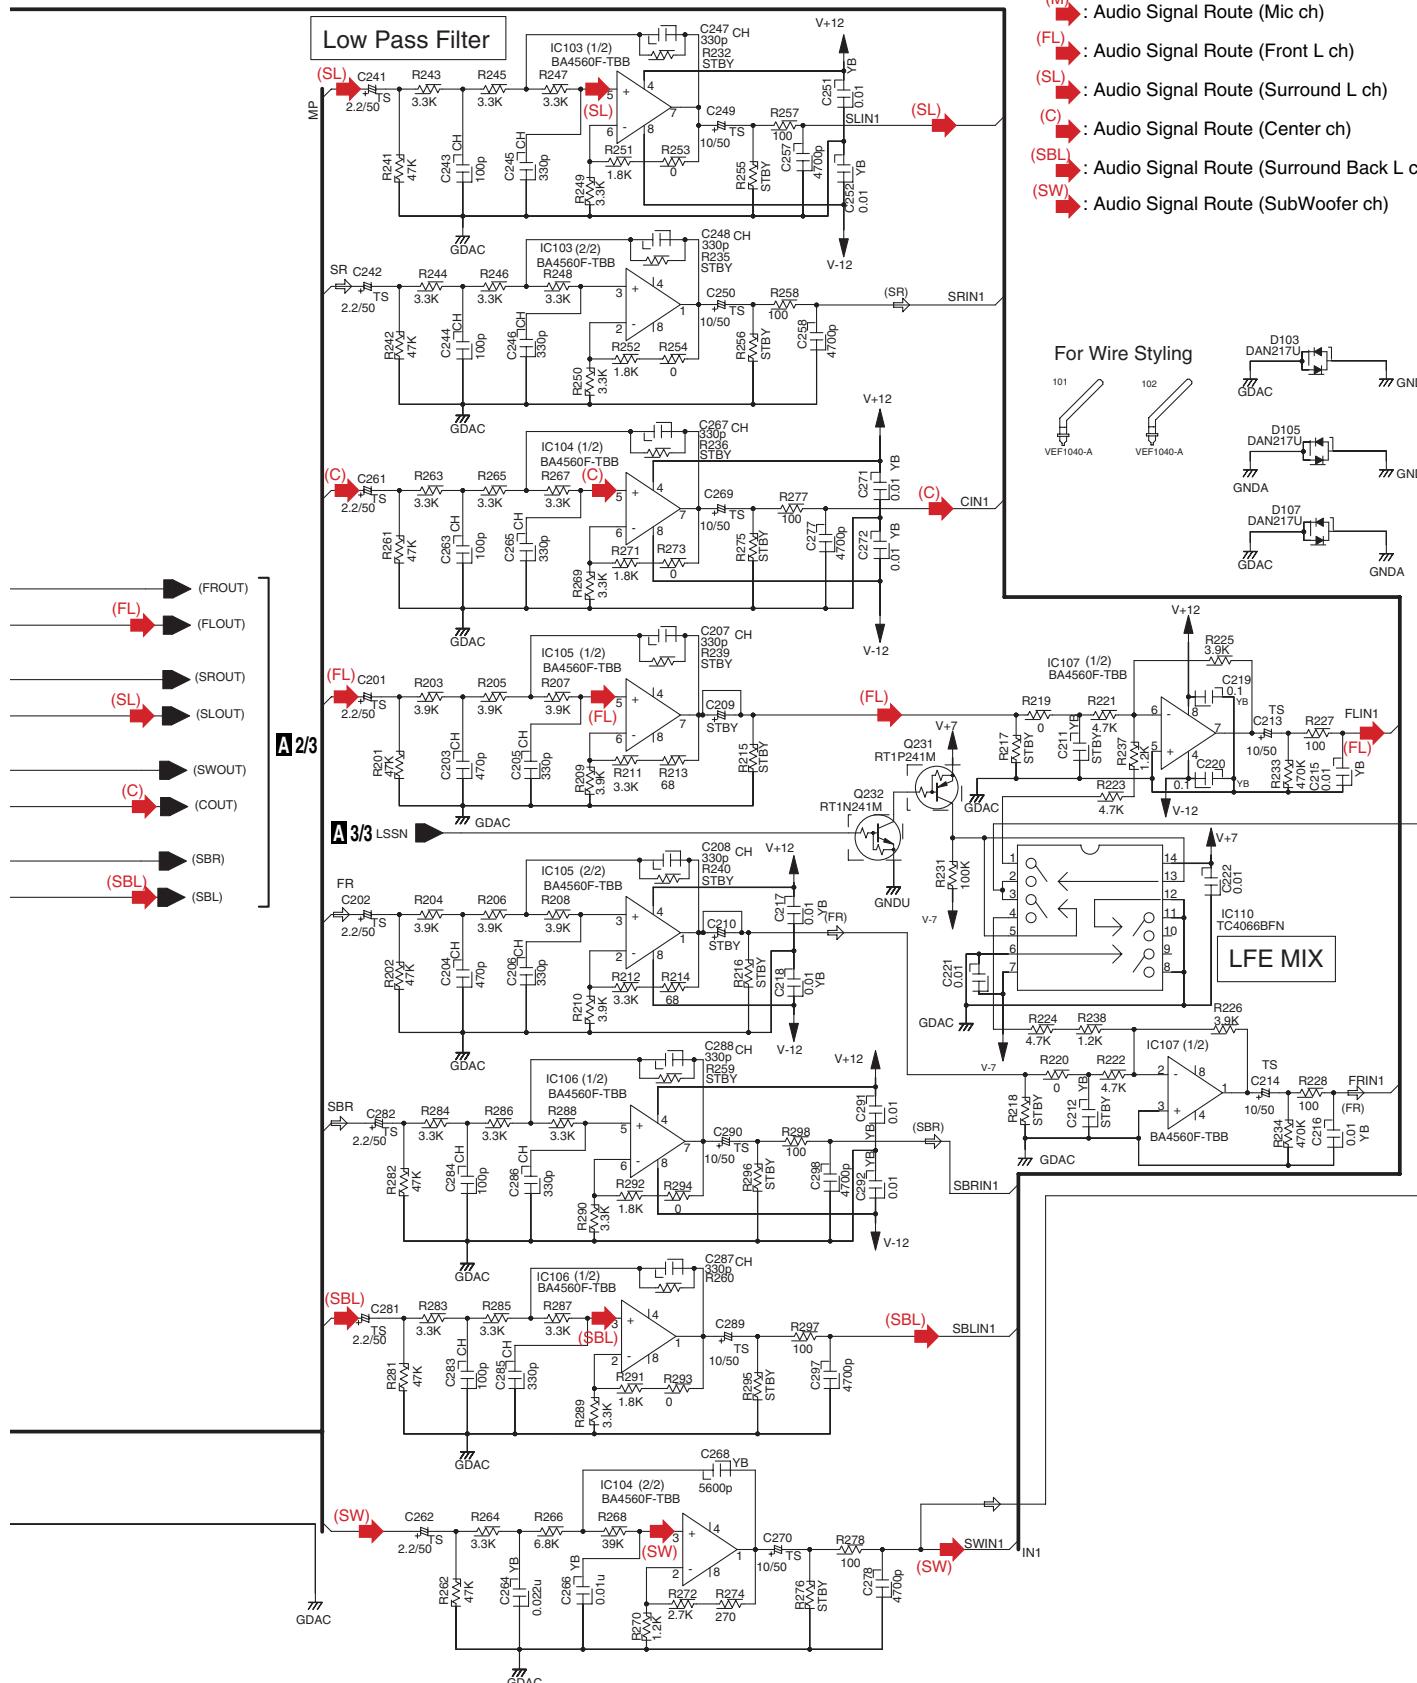

3.4 MAIN ASSY (2/3)


A 2/3 MAIN ASSY
(VSX-816 -)

(VSX-816 : XWK3233)
(VSX-916 : XWK3234)

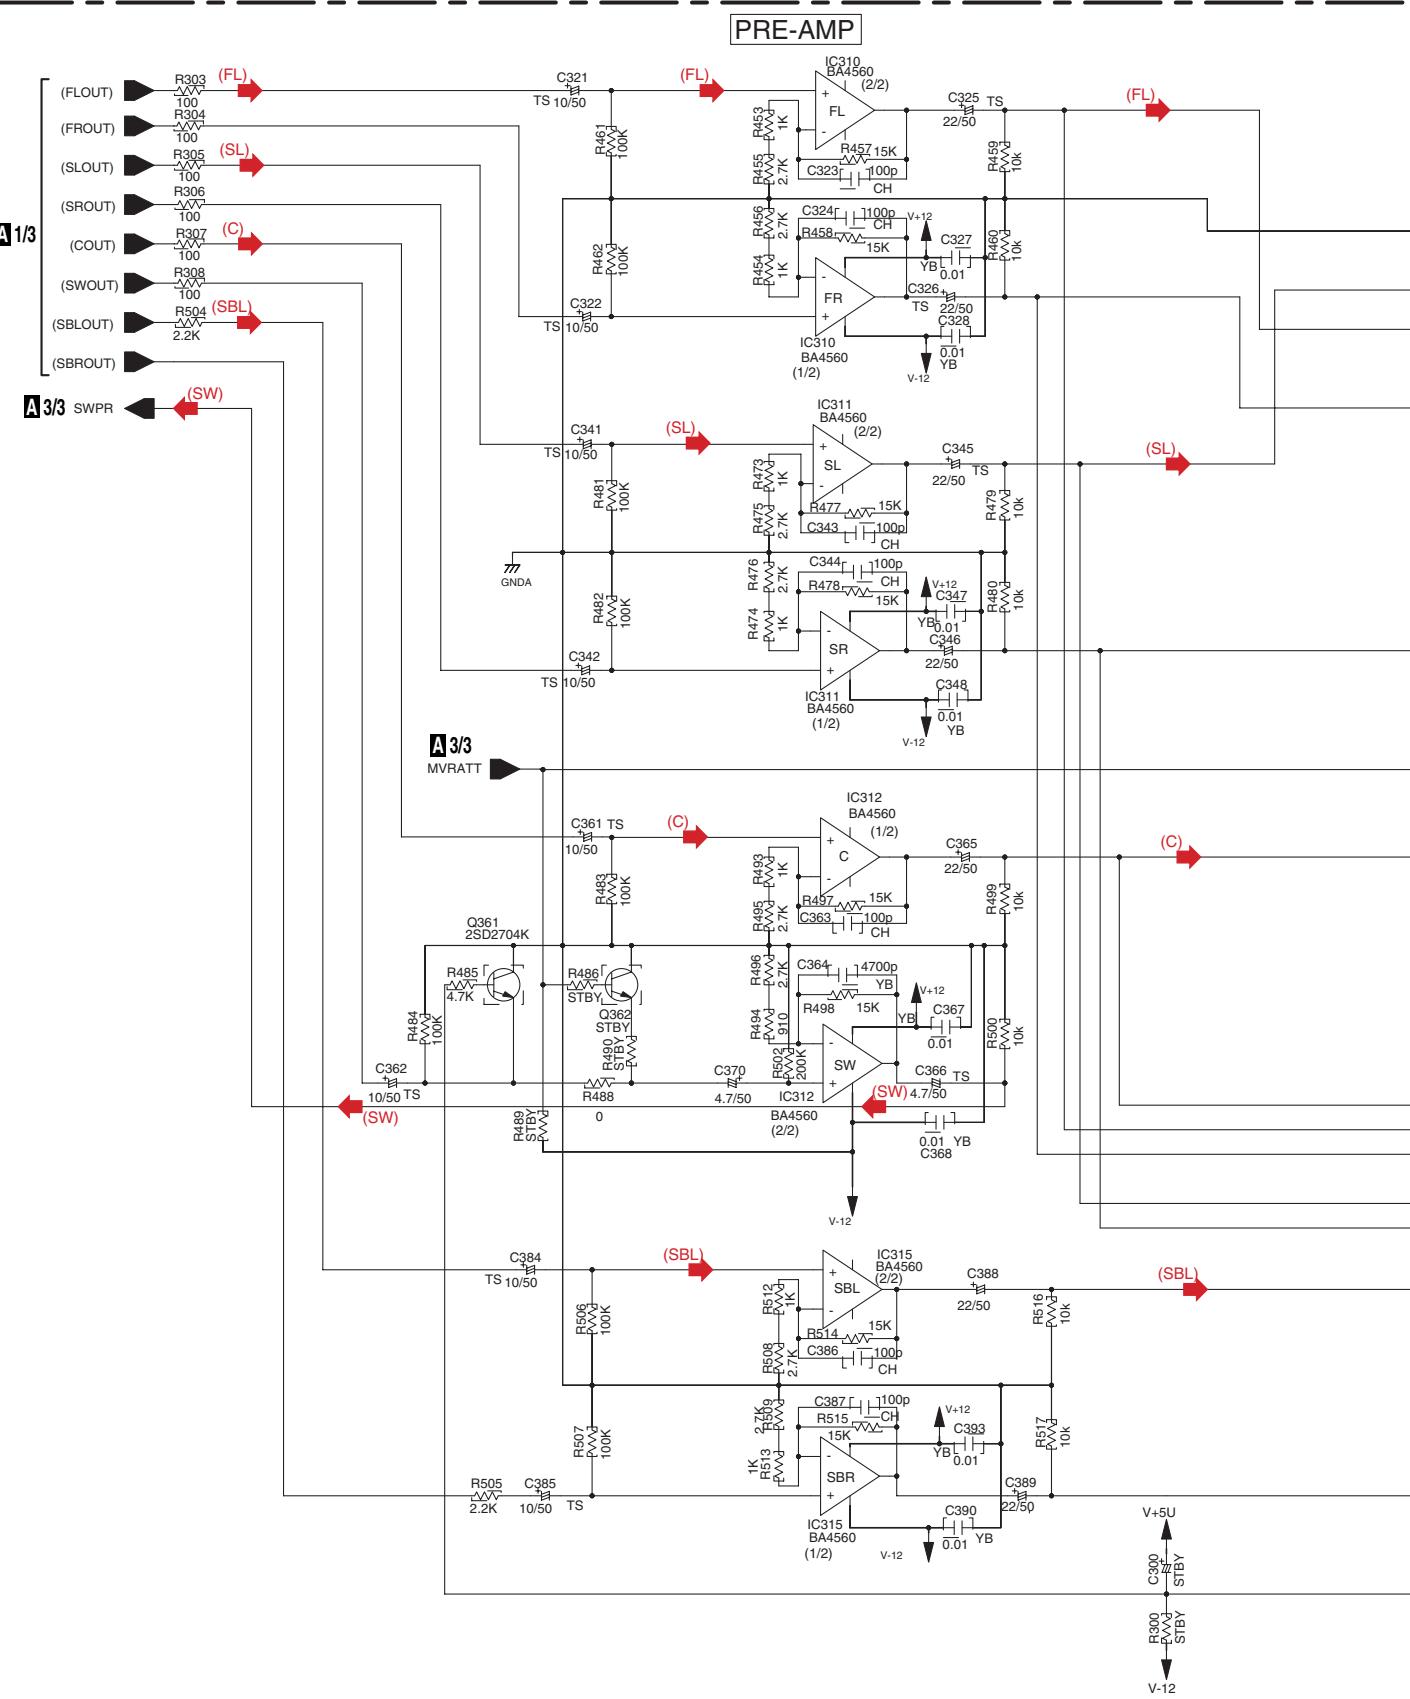

A 2/3


- (FL) : Audio Signal Route (Front L ch)
 (SL) : Audio Signal Route (Surround L ch)
 (C) : Audio Signal Route (Center ch)
 (SBL) : Audio Signal Route (Surround Back L ch)
 (SW) : Audio Signal Route (SubWoofer ch)

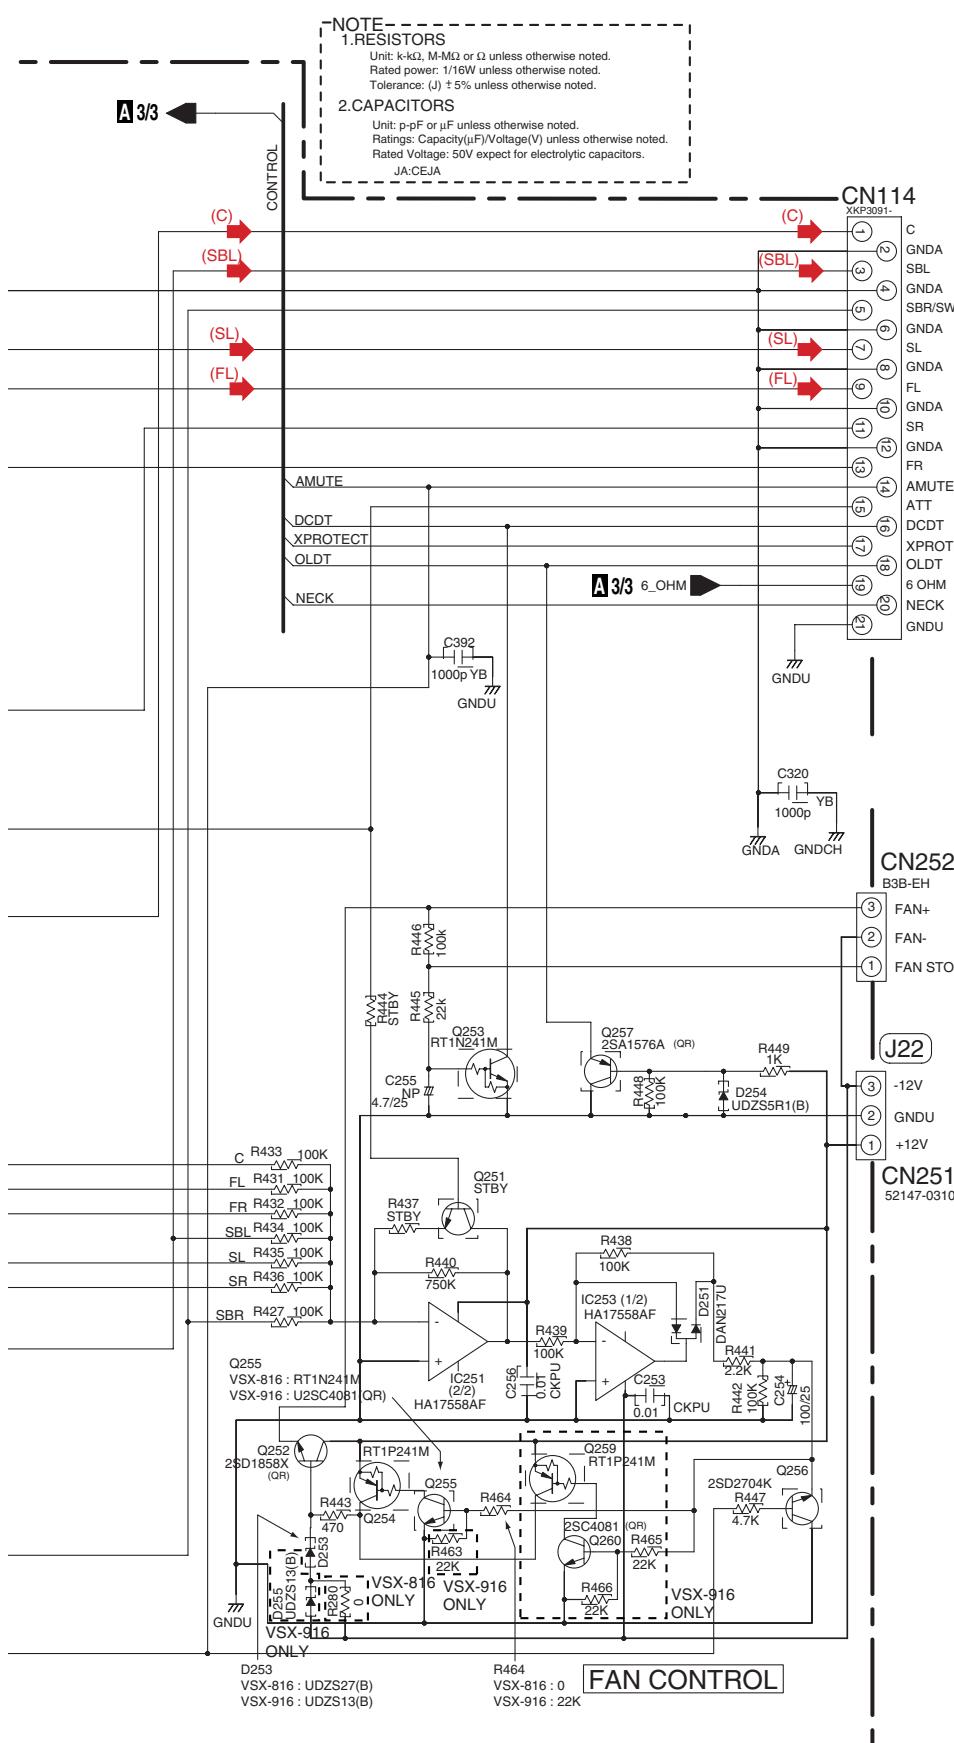

1 2 3 4
3.5 MAIN ASSY (3/3)


A 3/3 MAIN ASSY

(VSX-816 : XWK3233)
(VSX-916 : XWK3234)

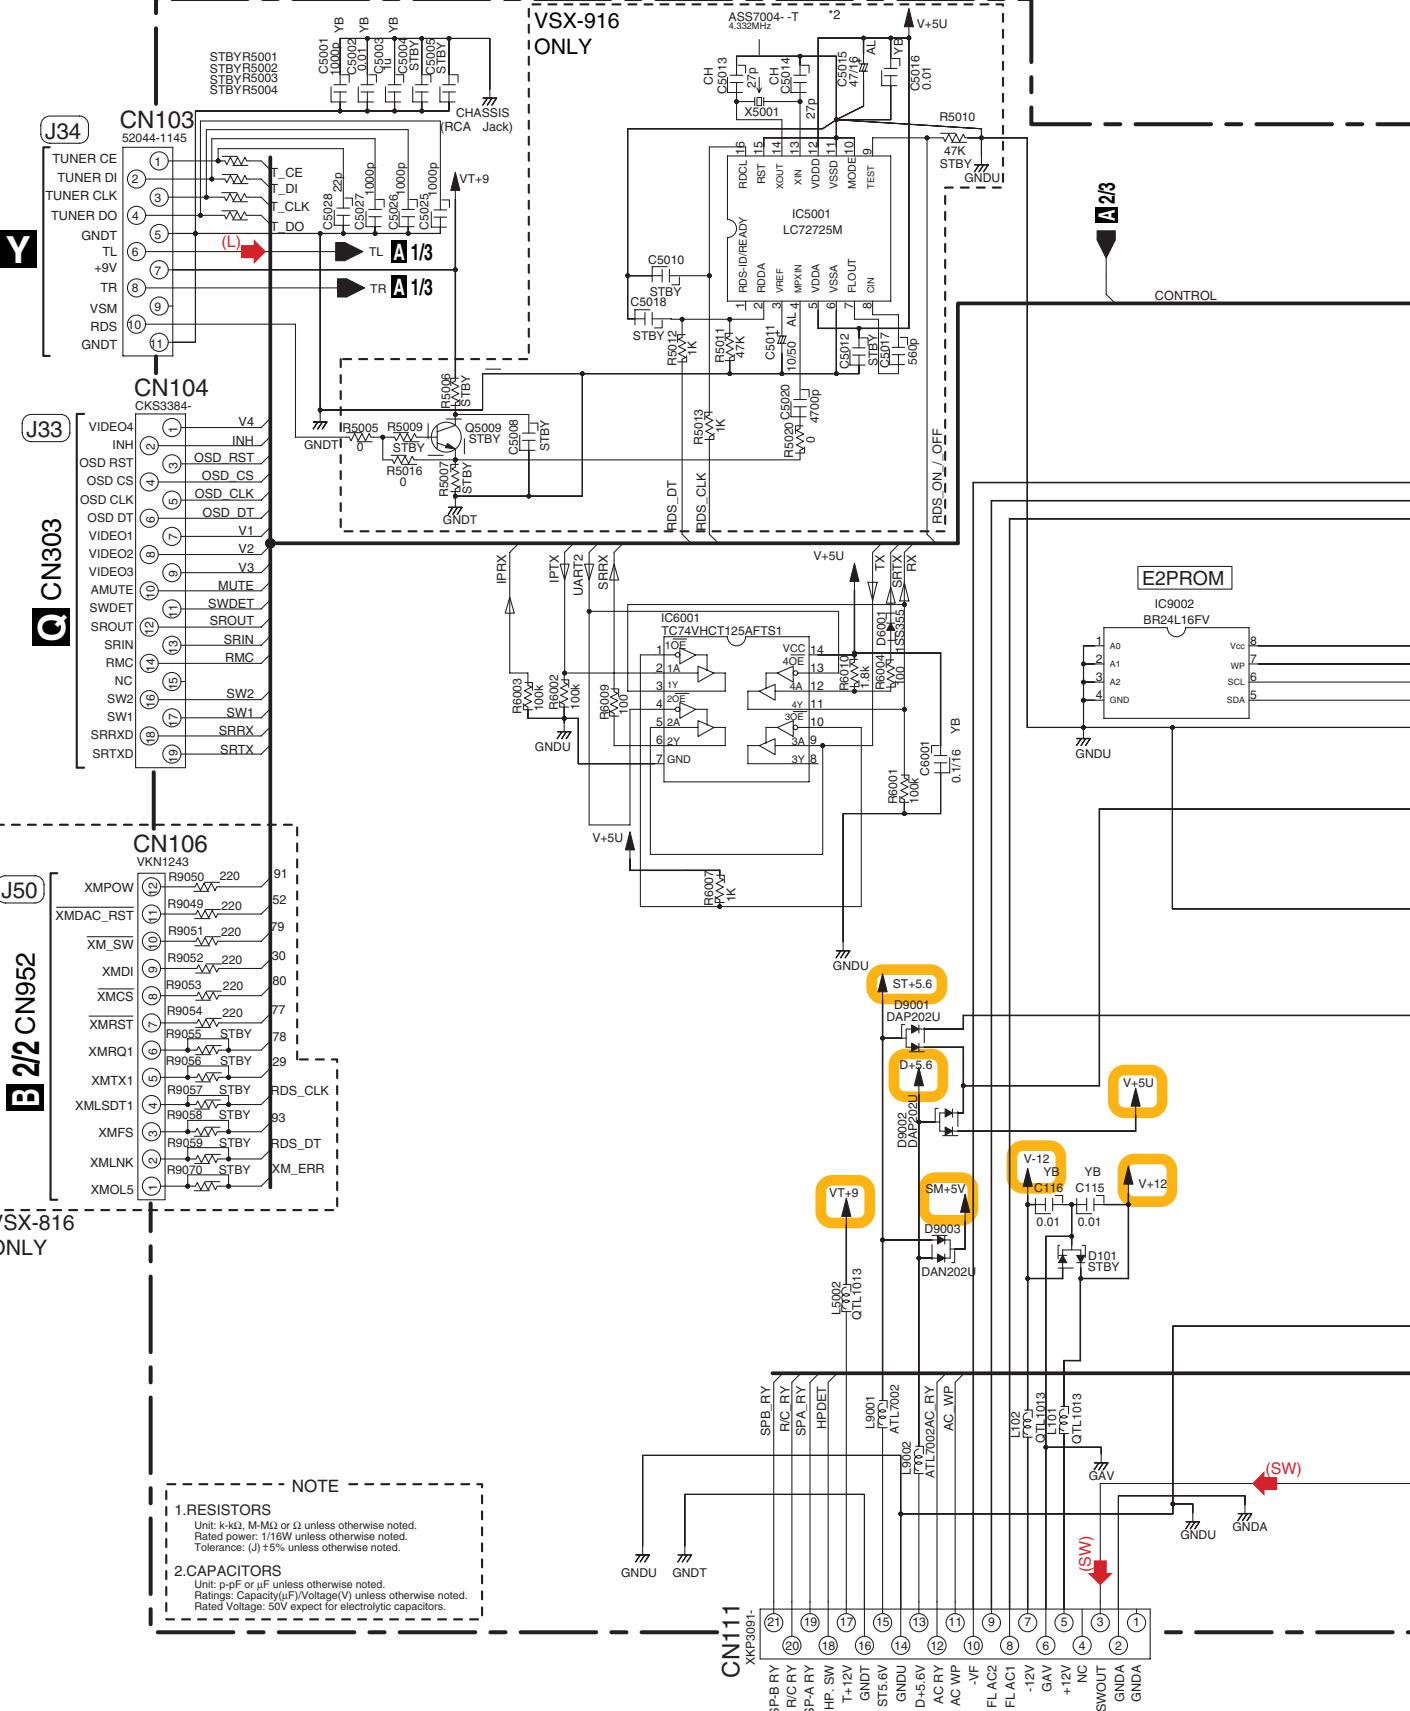


(L) : Audio Signal Route (L ch)
 (SW) : Audio Signal Route (SubWoofer ch)
 (V) : Video Signal Route


K CN401

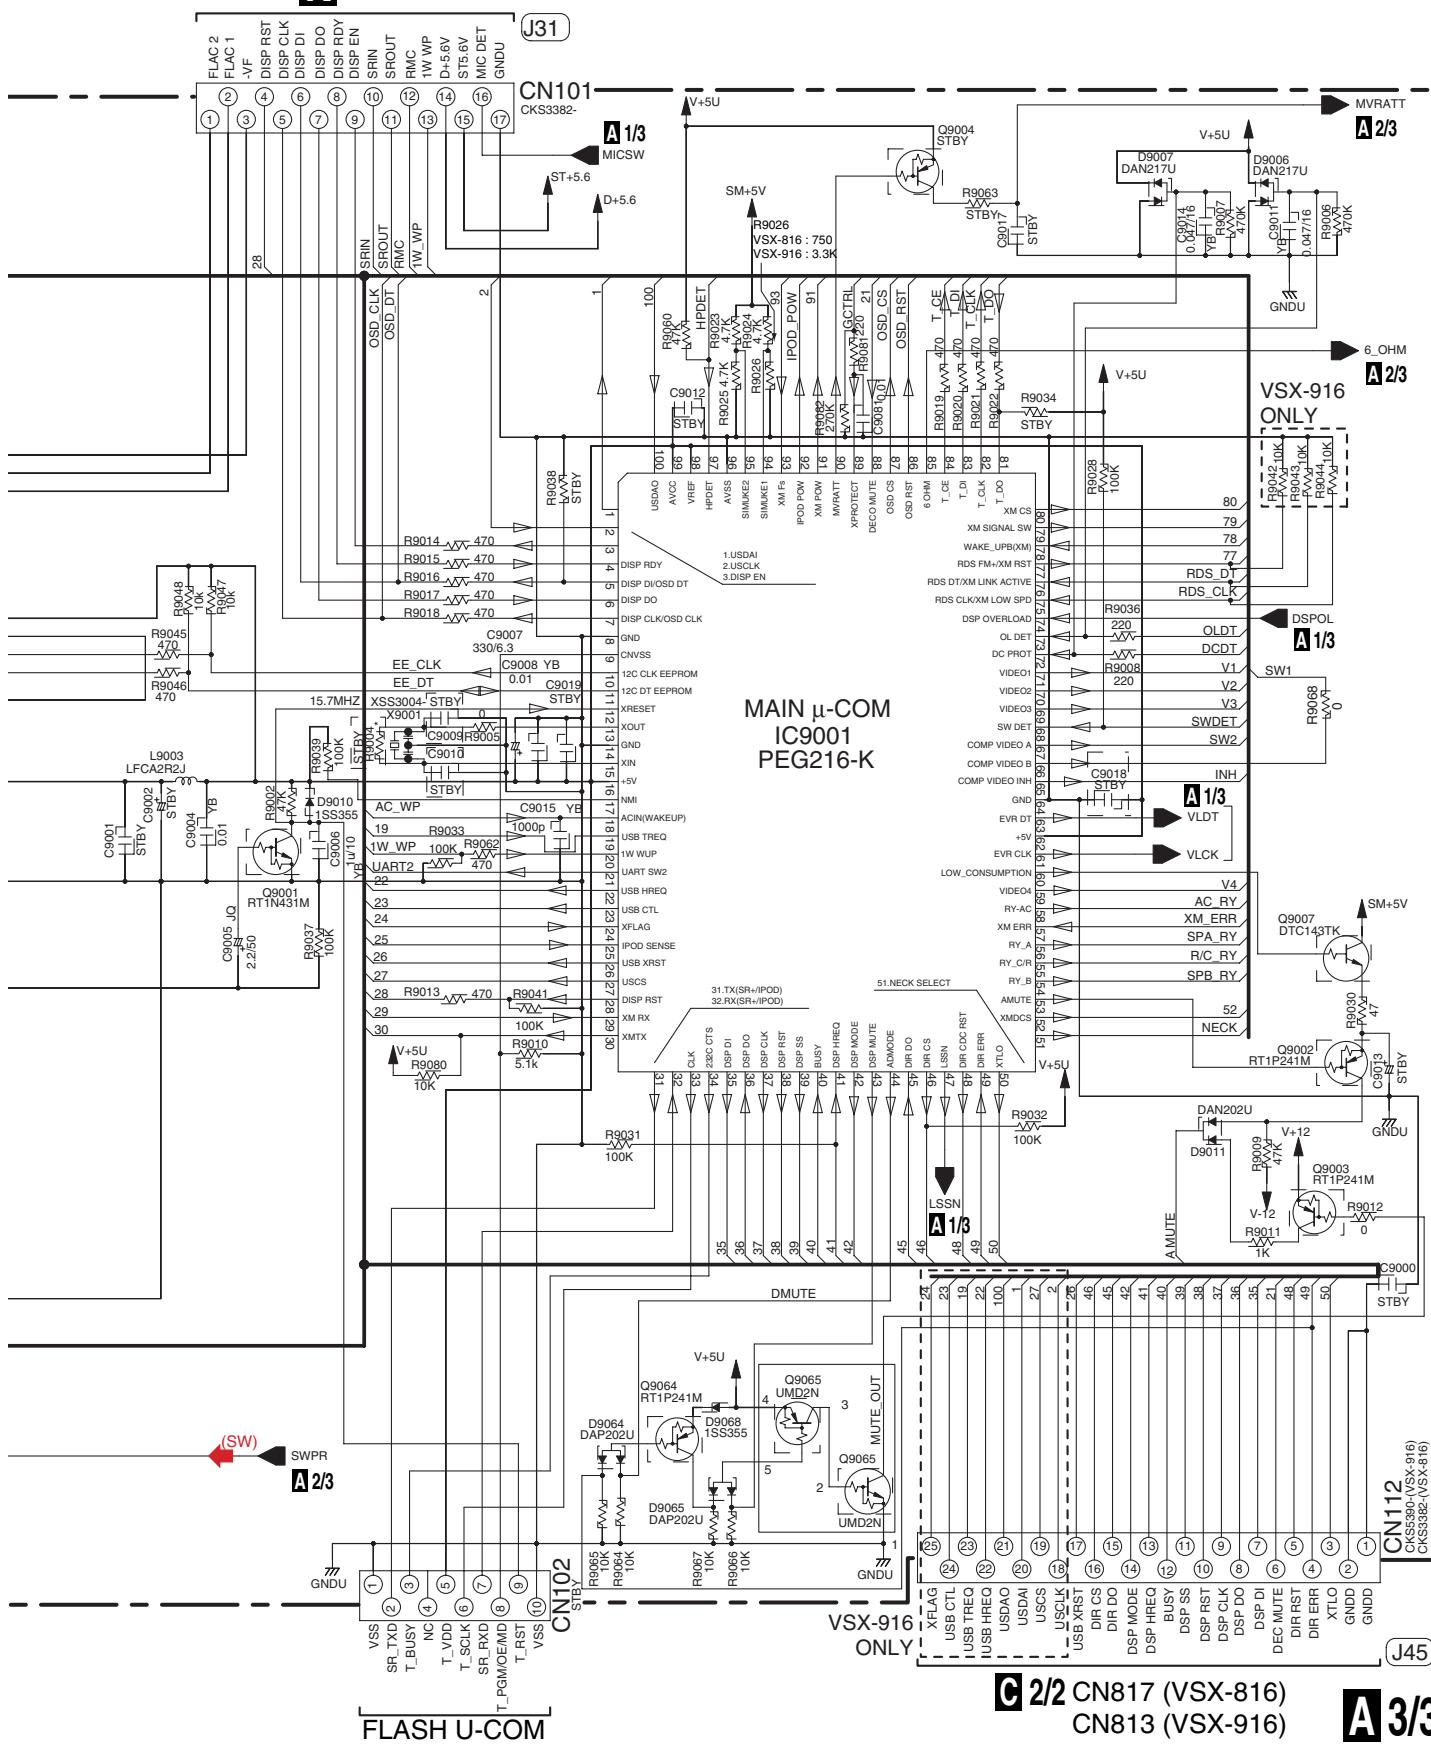

1 2 3 4
3.6 DSP ASSY (1/2) (for VSX-816)

B 1/2 DSP ASSY (AWX8699)

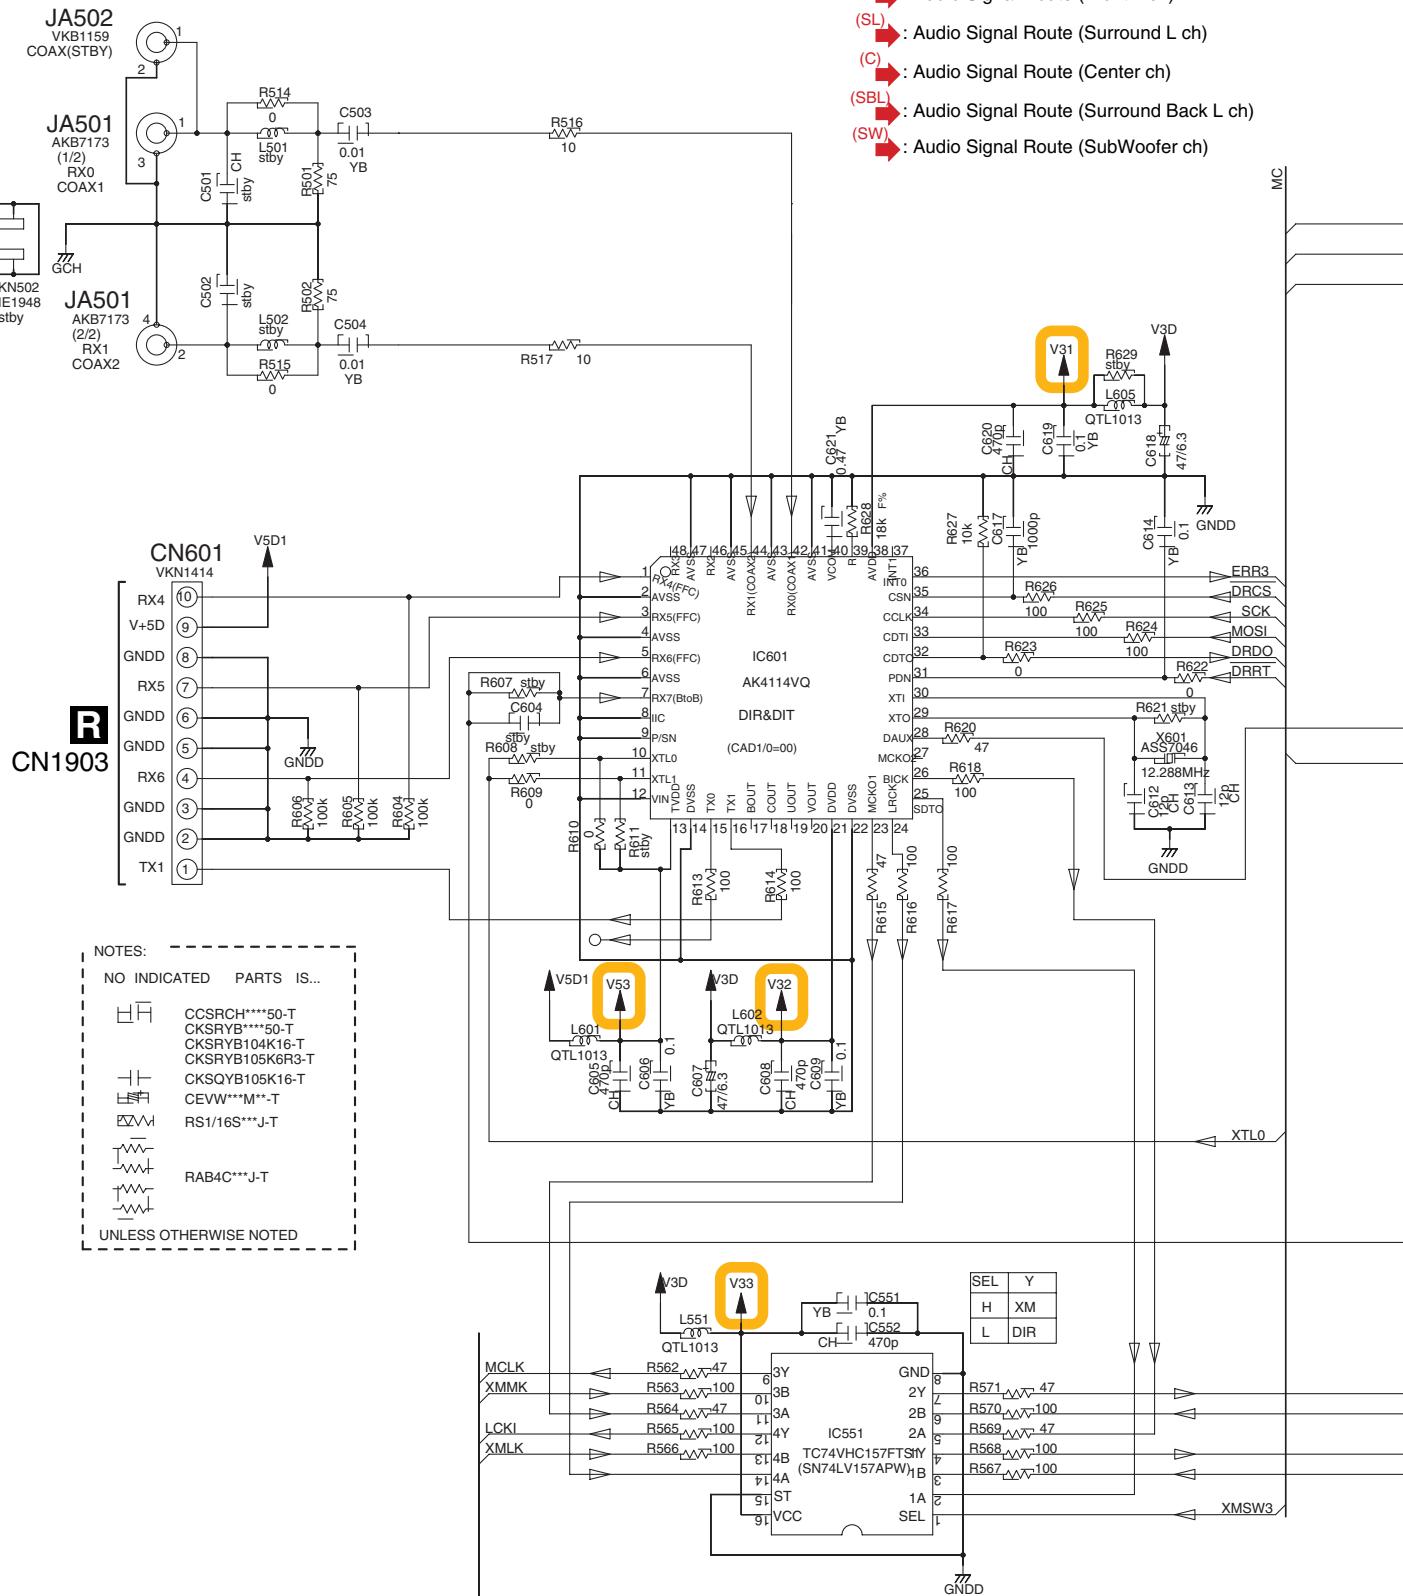

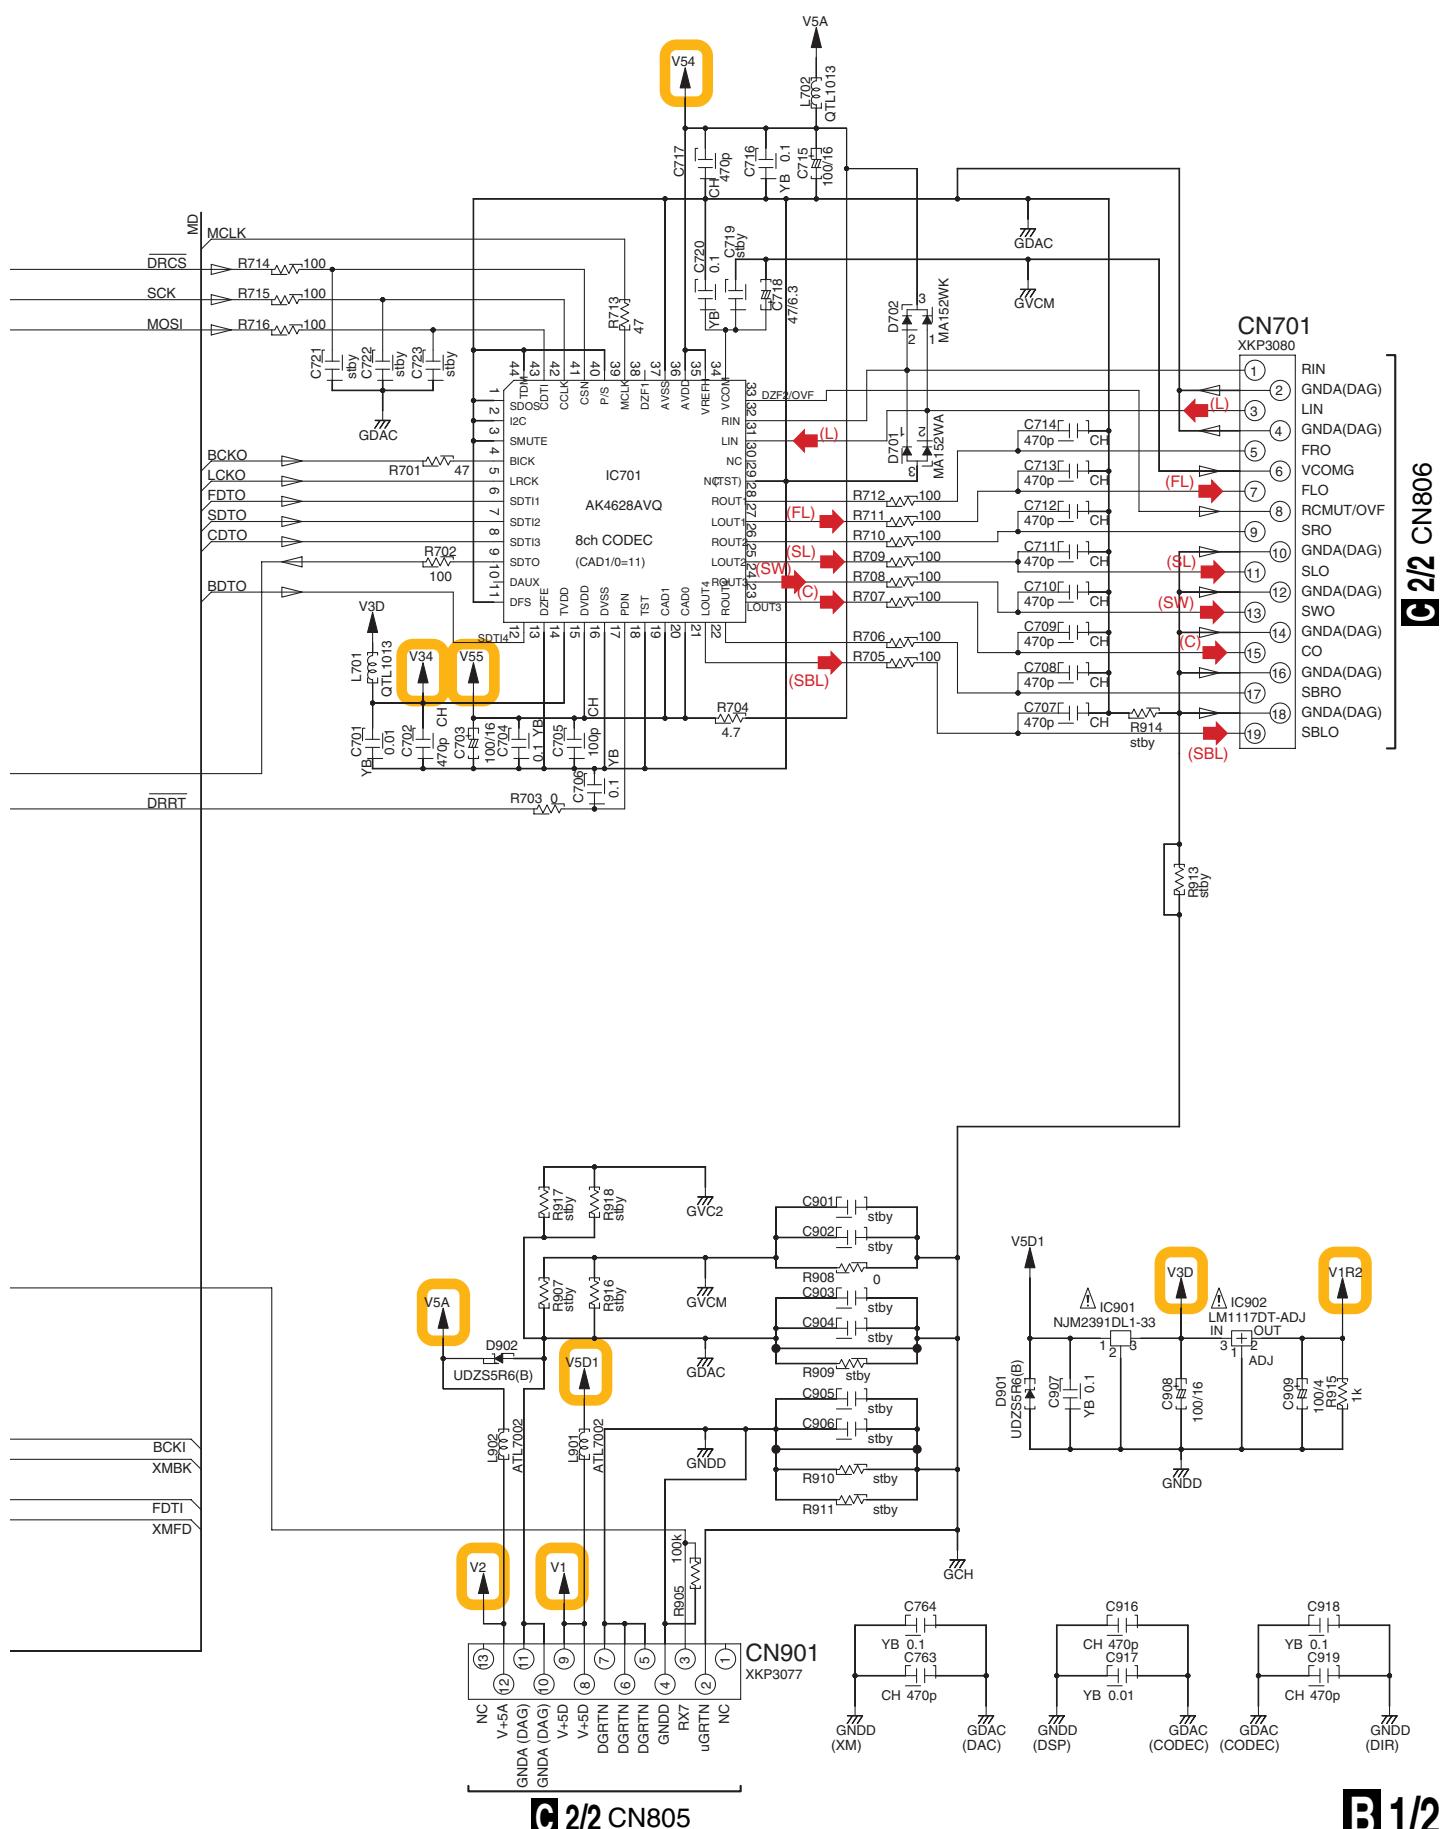

C 2/2 CN806

C


D

E

F

3.7 DSP ASSY (2/2) (for VSX-816)


B 2/2 DSP ASSY (AWX8699)

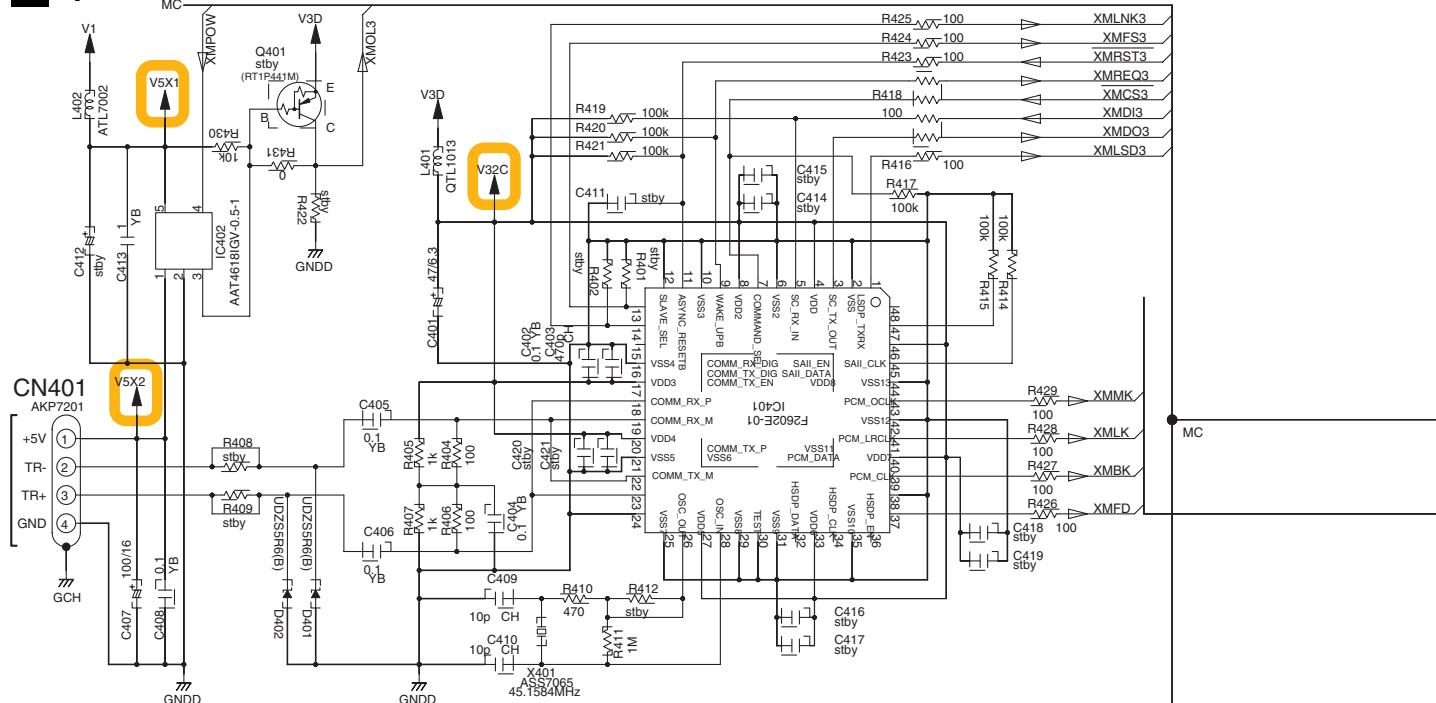

B 2/2

A 3/3 CN106


C 2/2 CN807

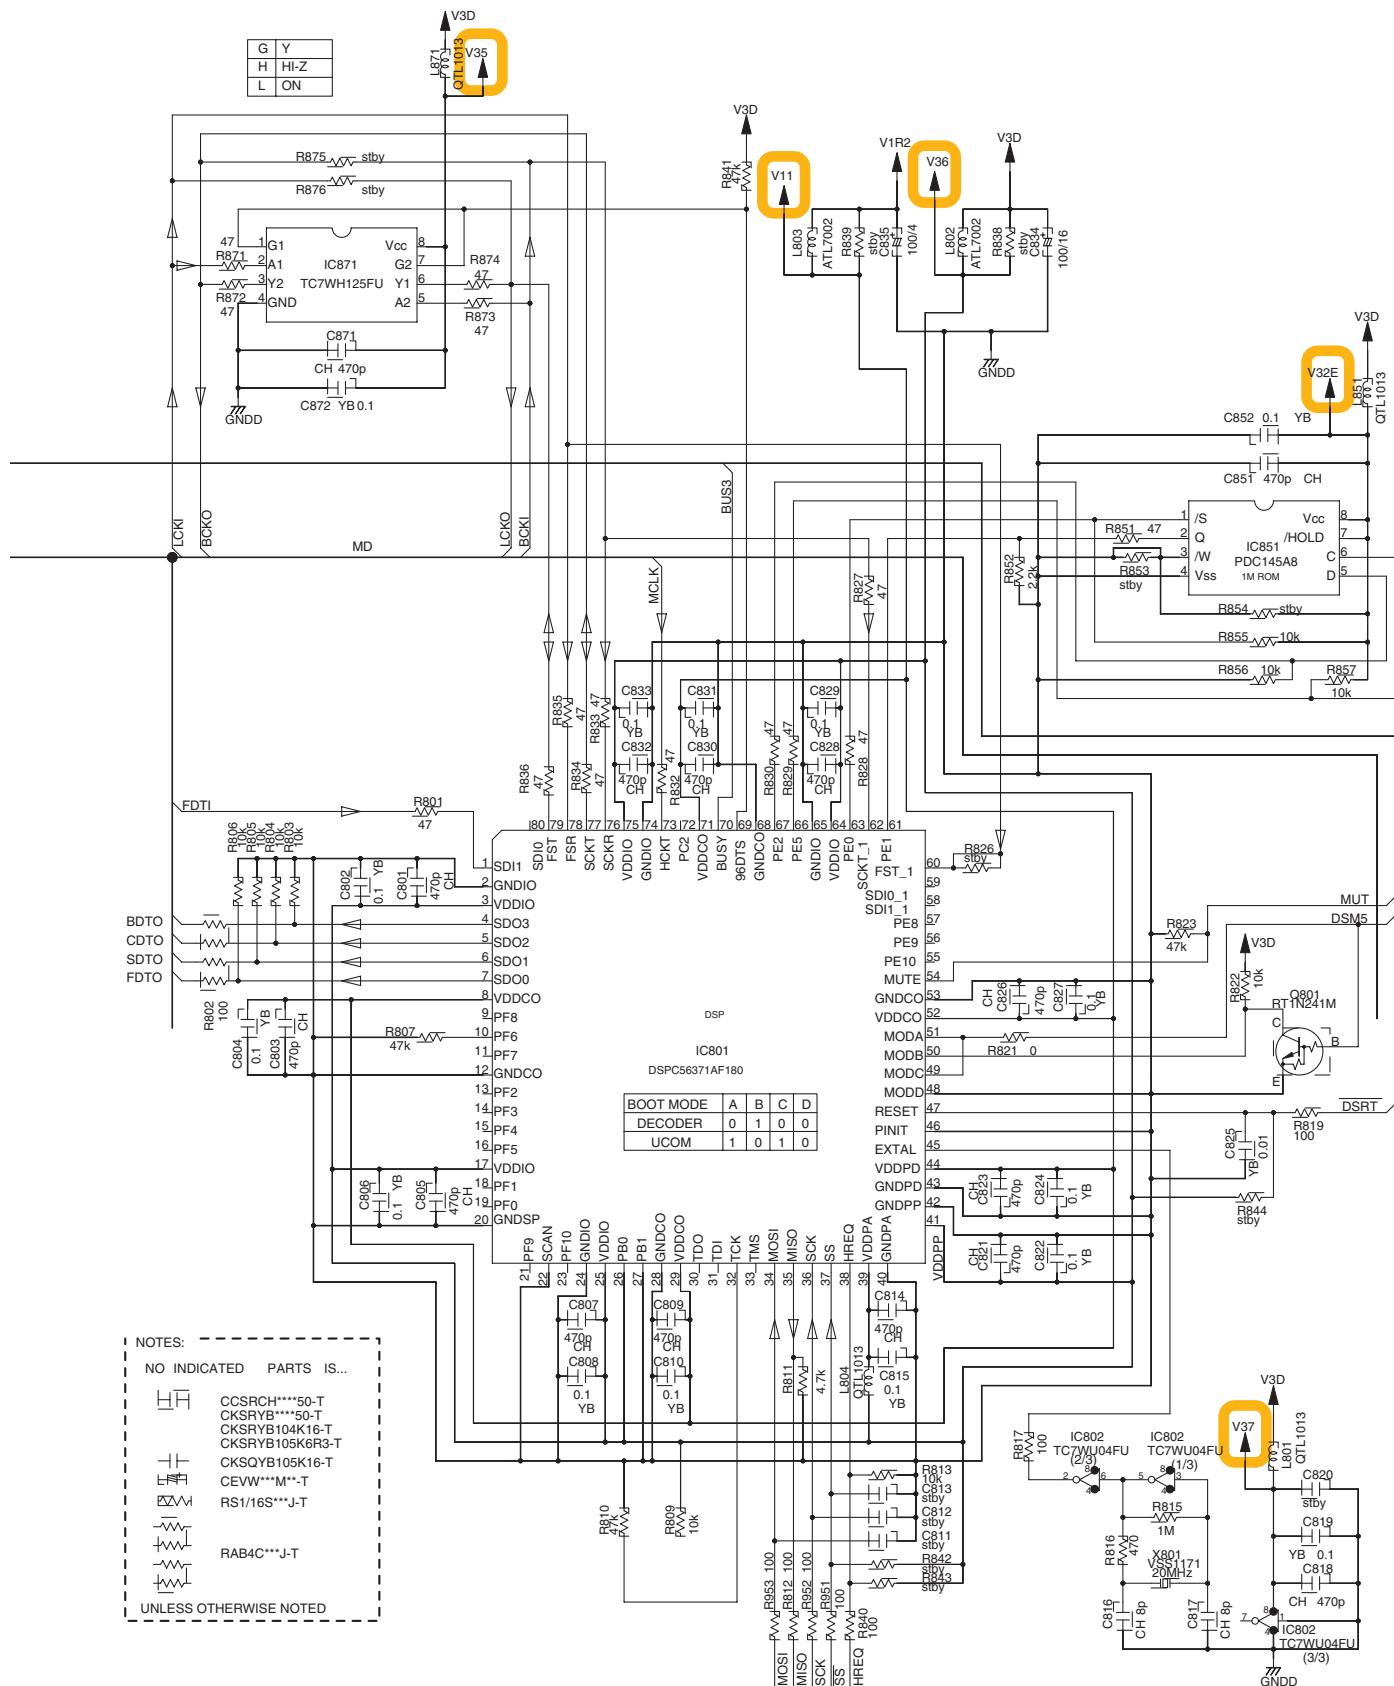


3.8 DSP ASSY (1/2) (for VSX-916)

B 1/2 DSP ASSY (AWX8572)


A

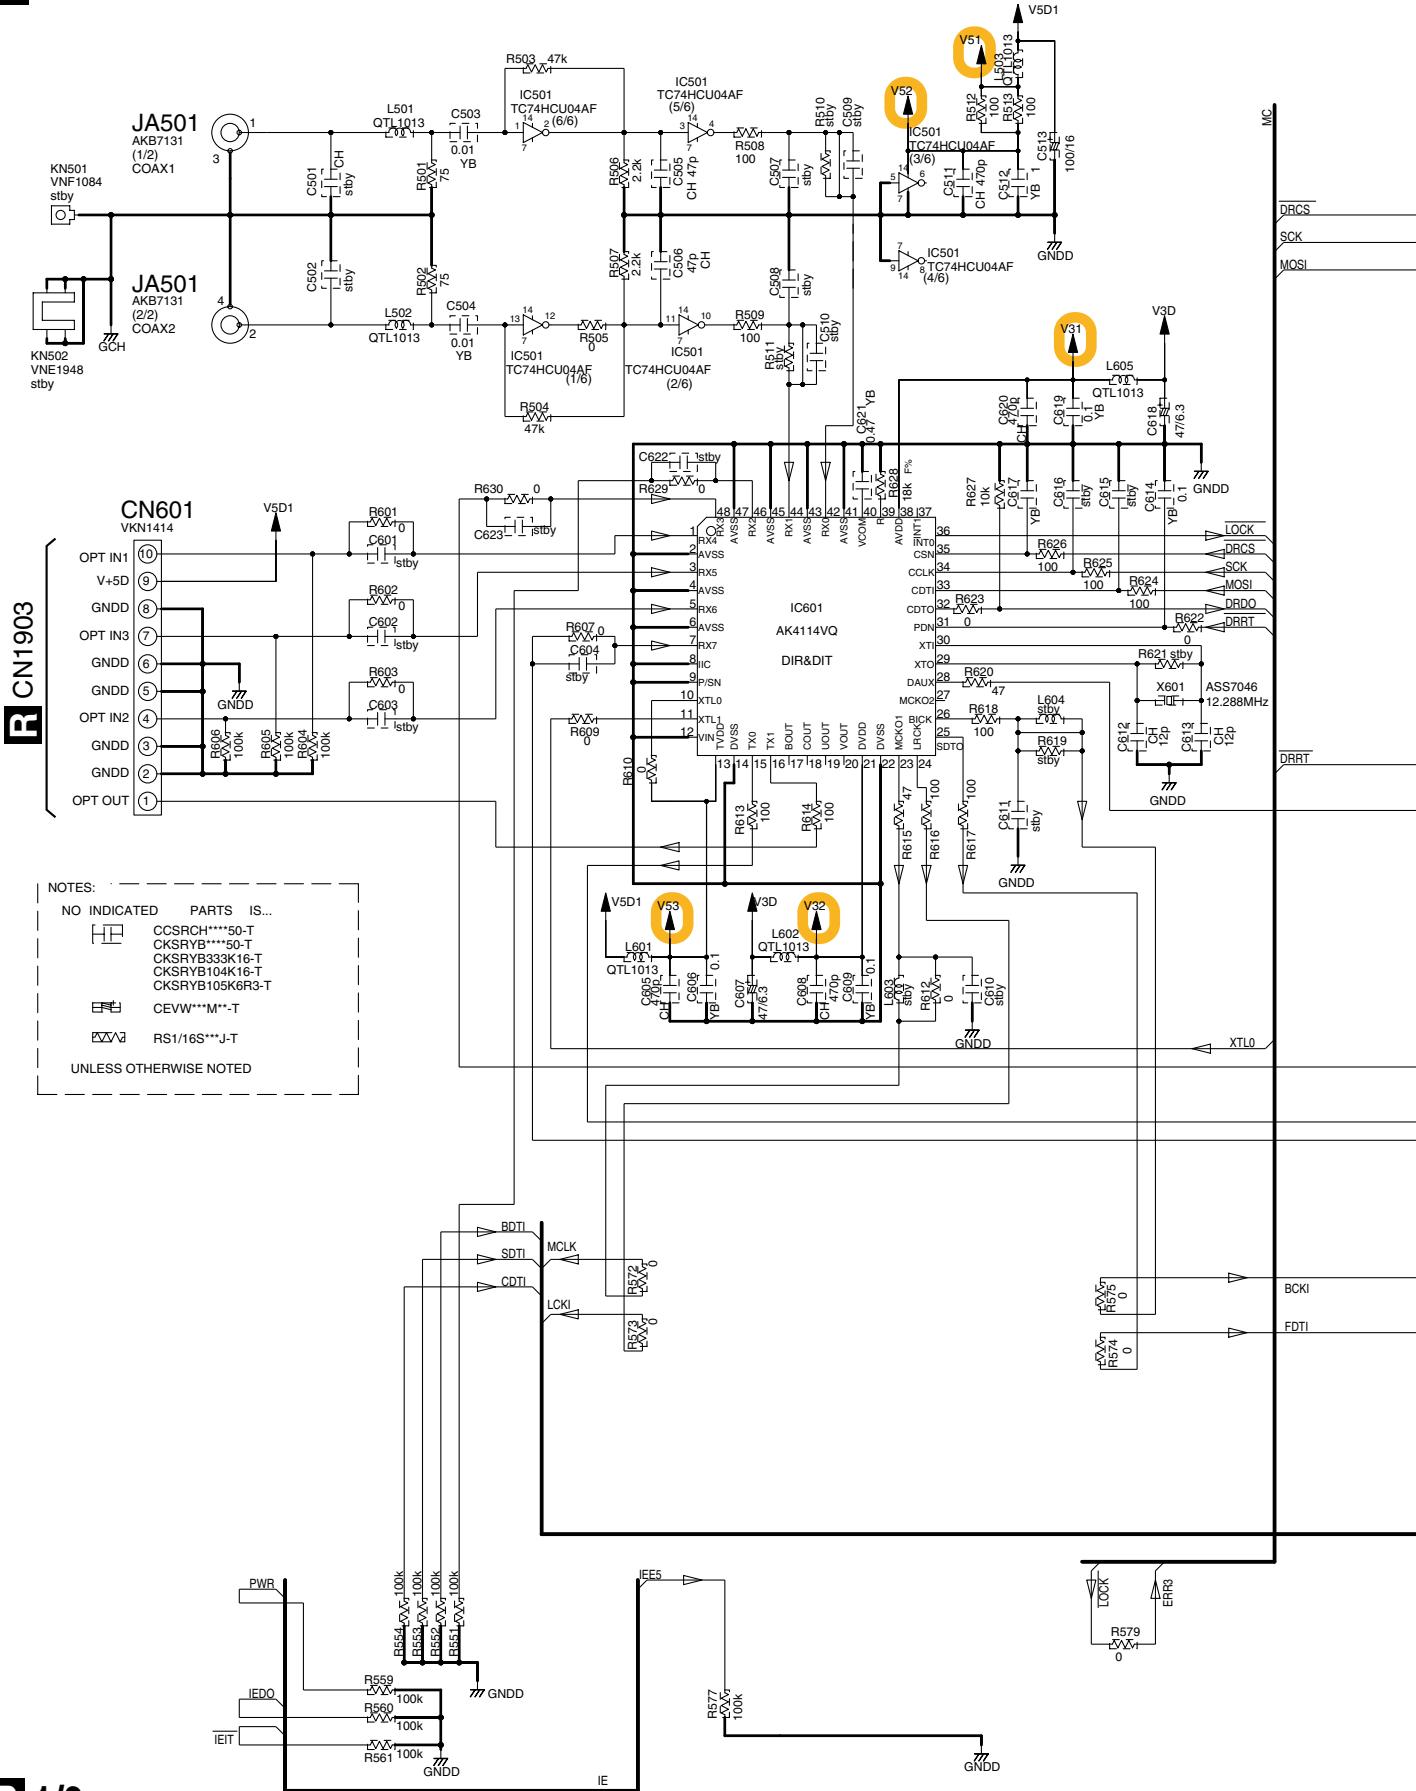

B 1/2

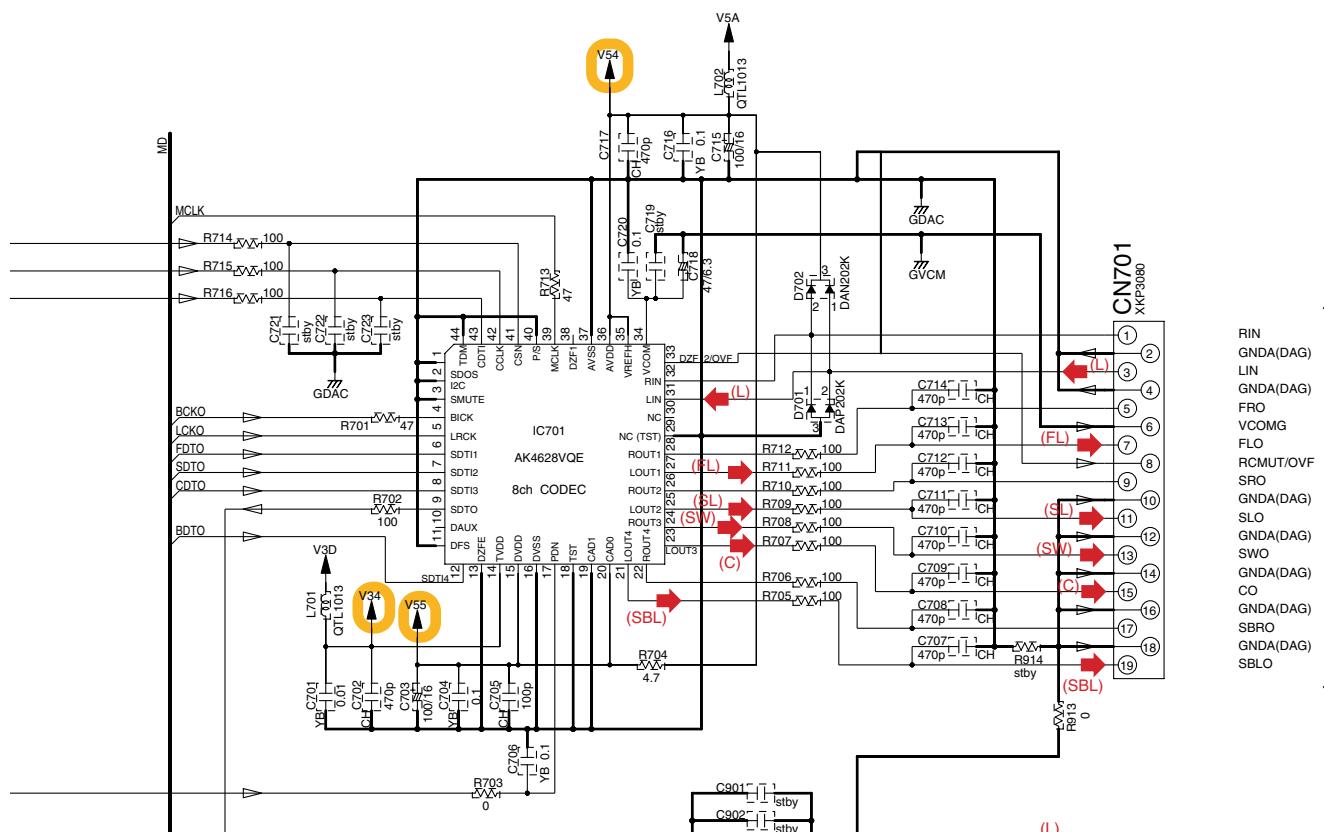C 2/2
CN806

- (L) : Audio Signal Route (L ch)
- (FL) : Audio Signal Route (Front L ch)
- (SL) : Audio Signal Route (Surround L ch)
- (C) : Audio Signal Route (Center ch)
- (SBL) : Audio Signal Route (Surround Back L ch)
- (SW) : Audio Signal Route (SubWoofer ch)

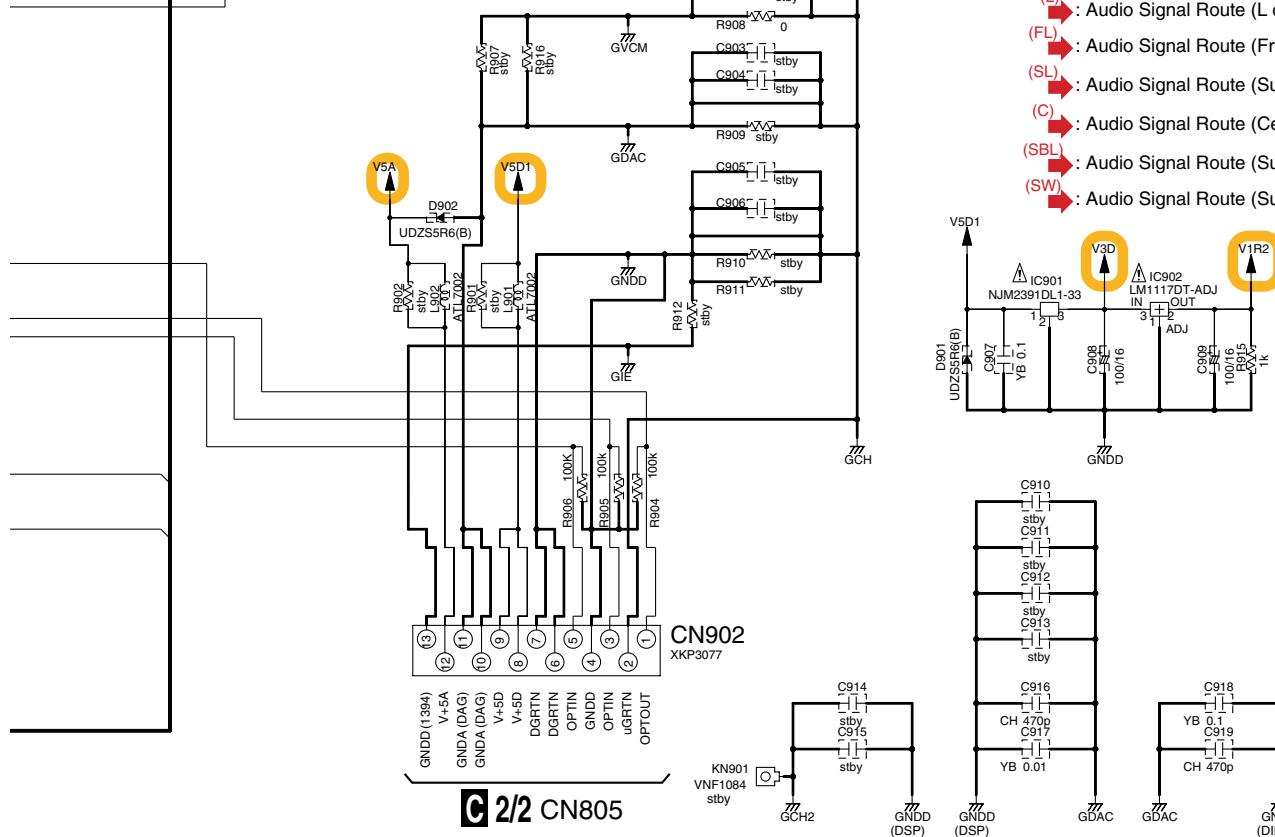


C 2/2 CN805

B 1/2

1 2 3 4
3.9 DSP ASSY (2/2) (for VSX-916)

A **B 2/2** DSP ASSY (AWX8572)


B

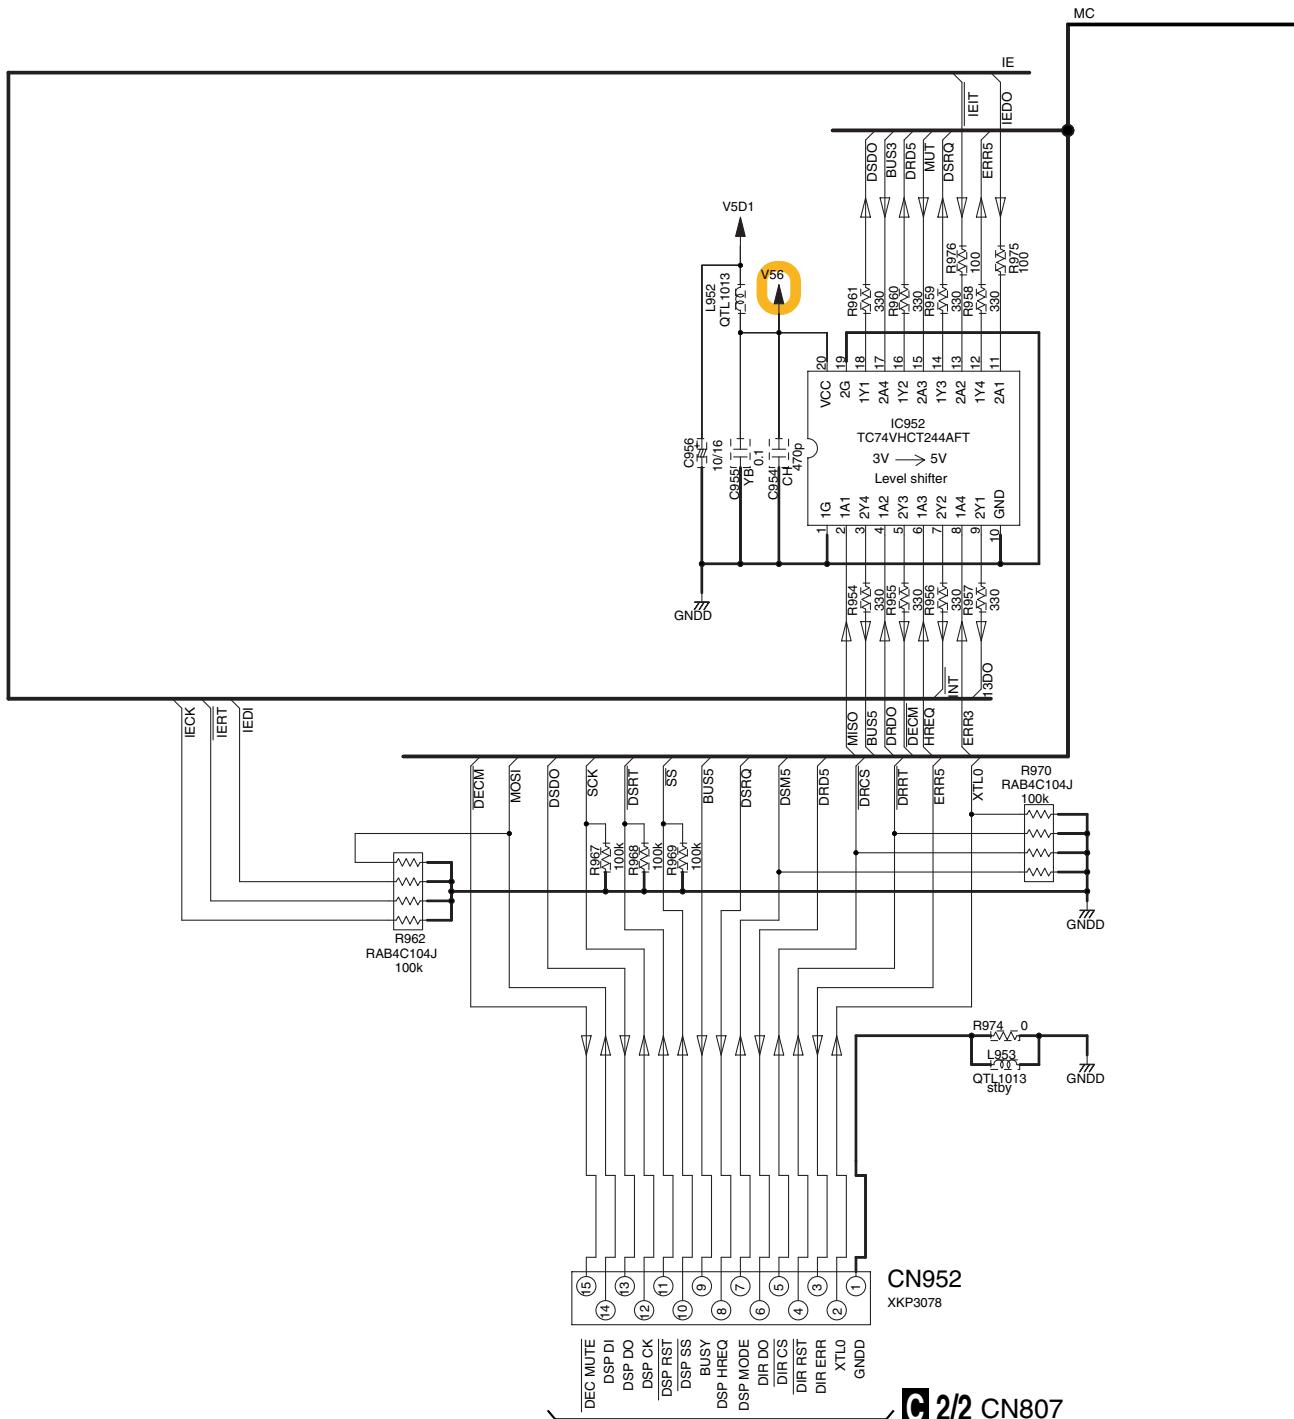


B 2/2

C 2/2 CN807

A

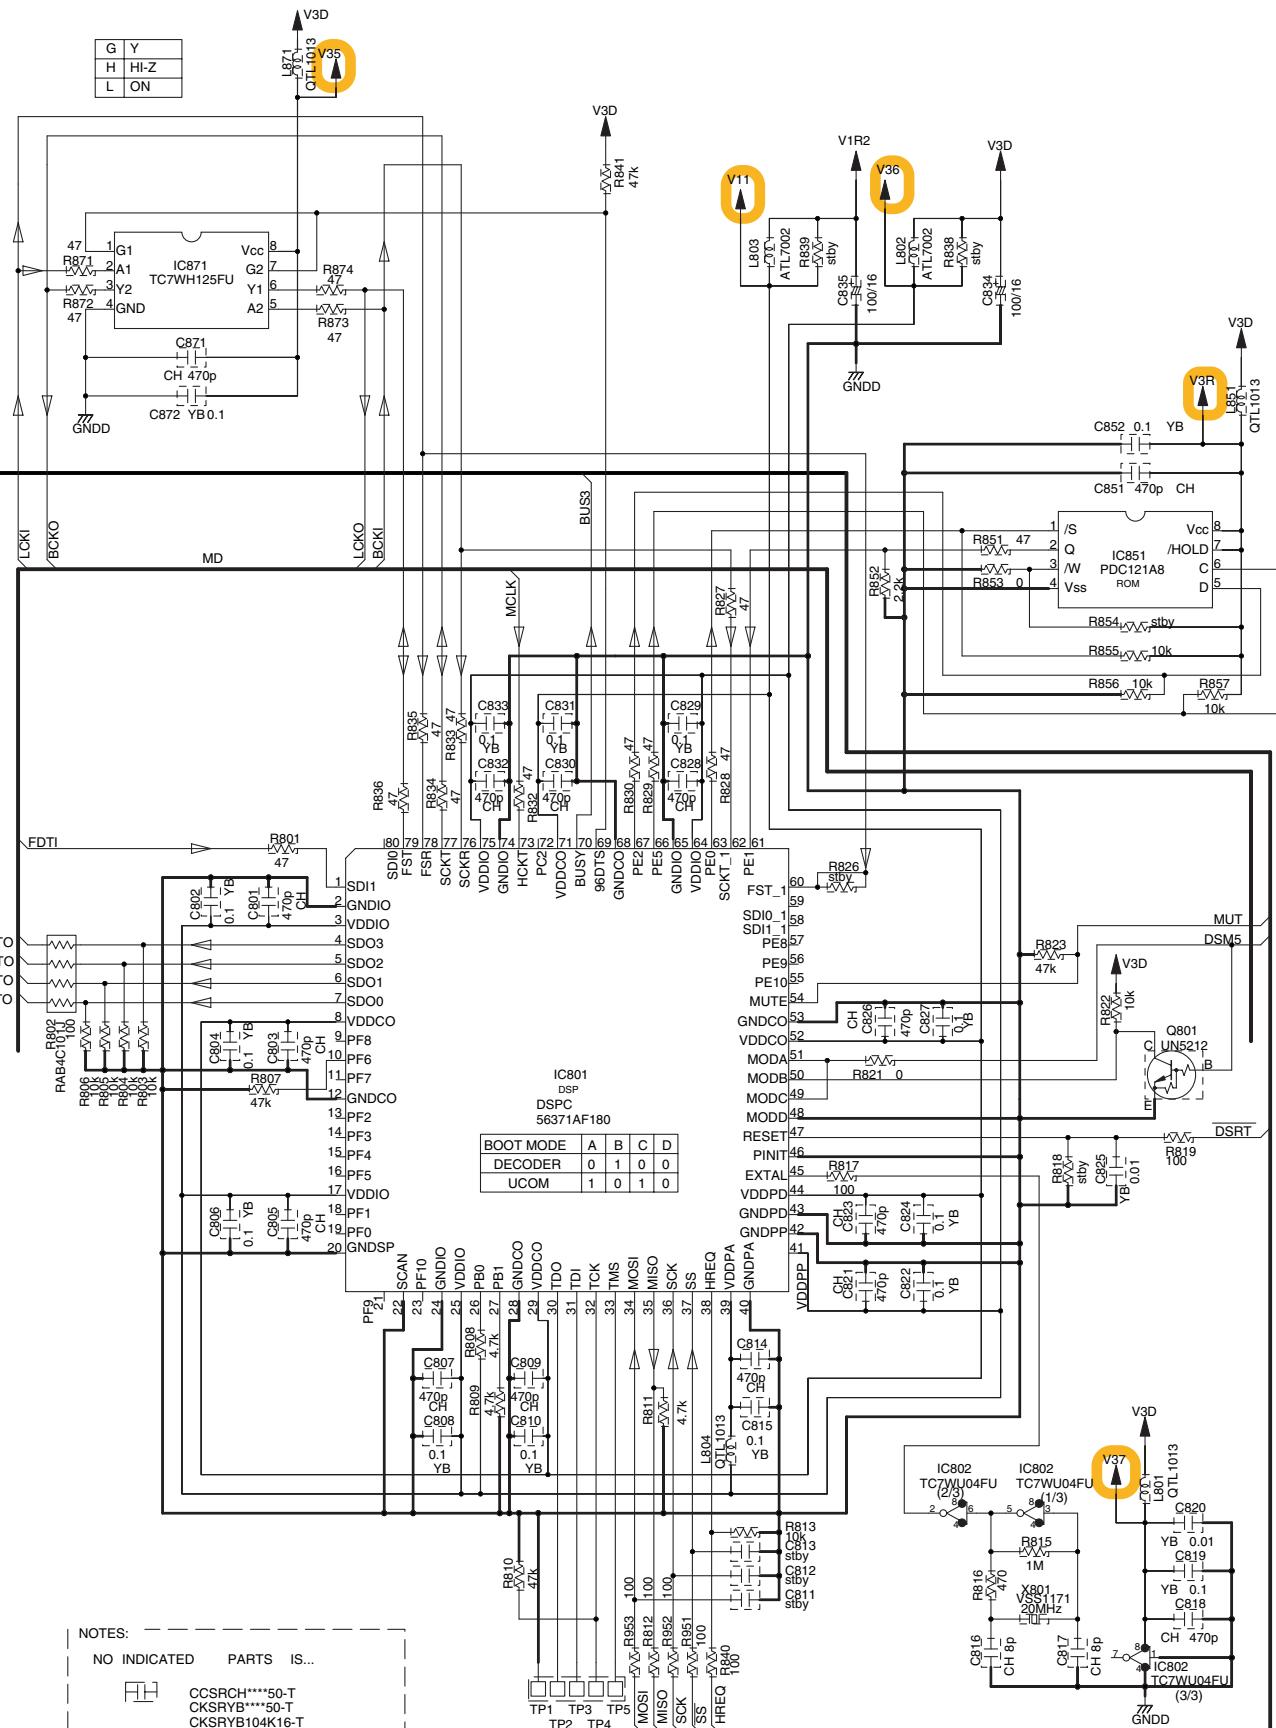
**B 2/2**

C 1/2 POWER PACK ASSY (VSX-816 : XWZ4087) (VSX-916 : XWZ4088)

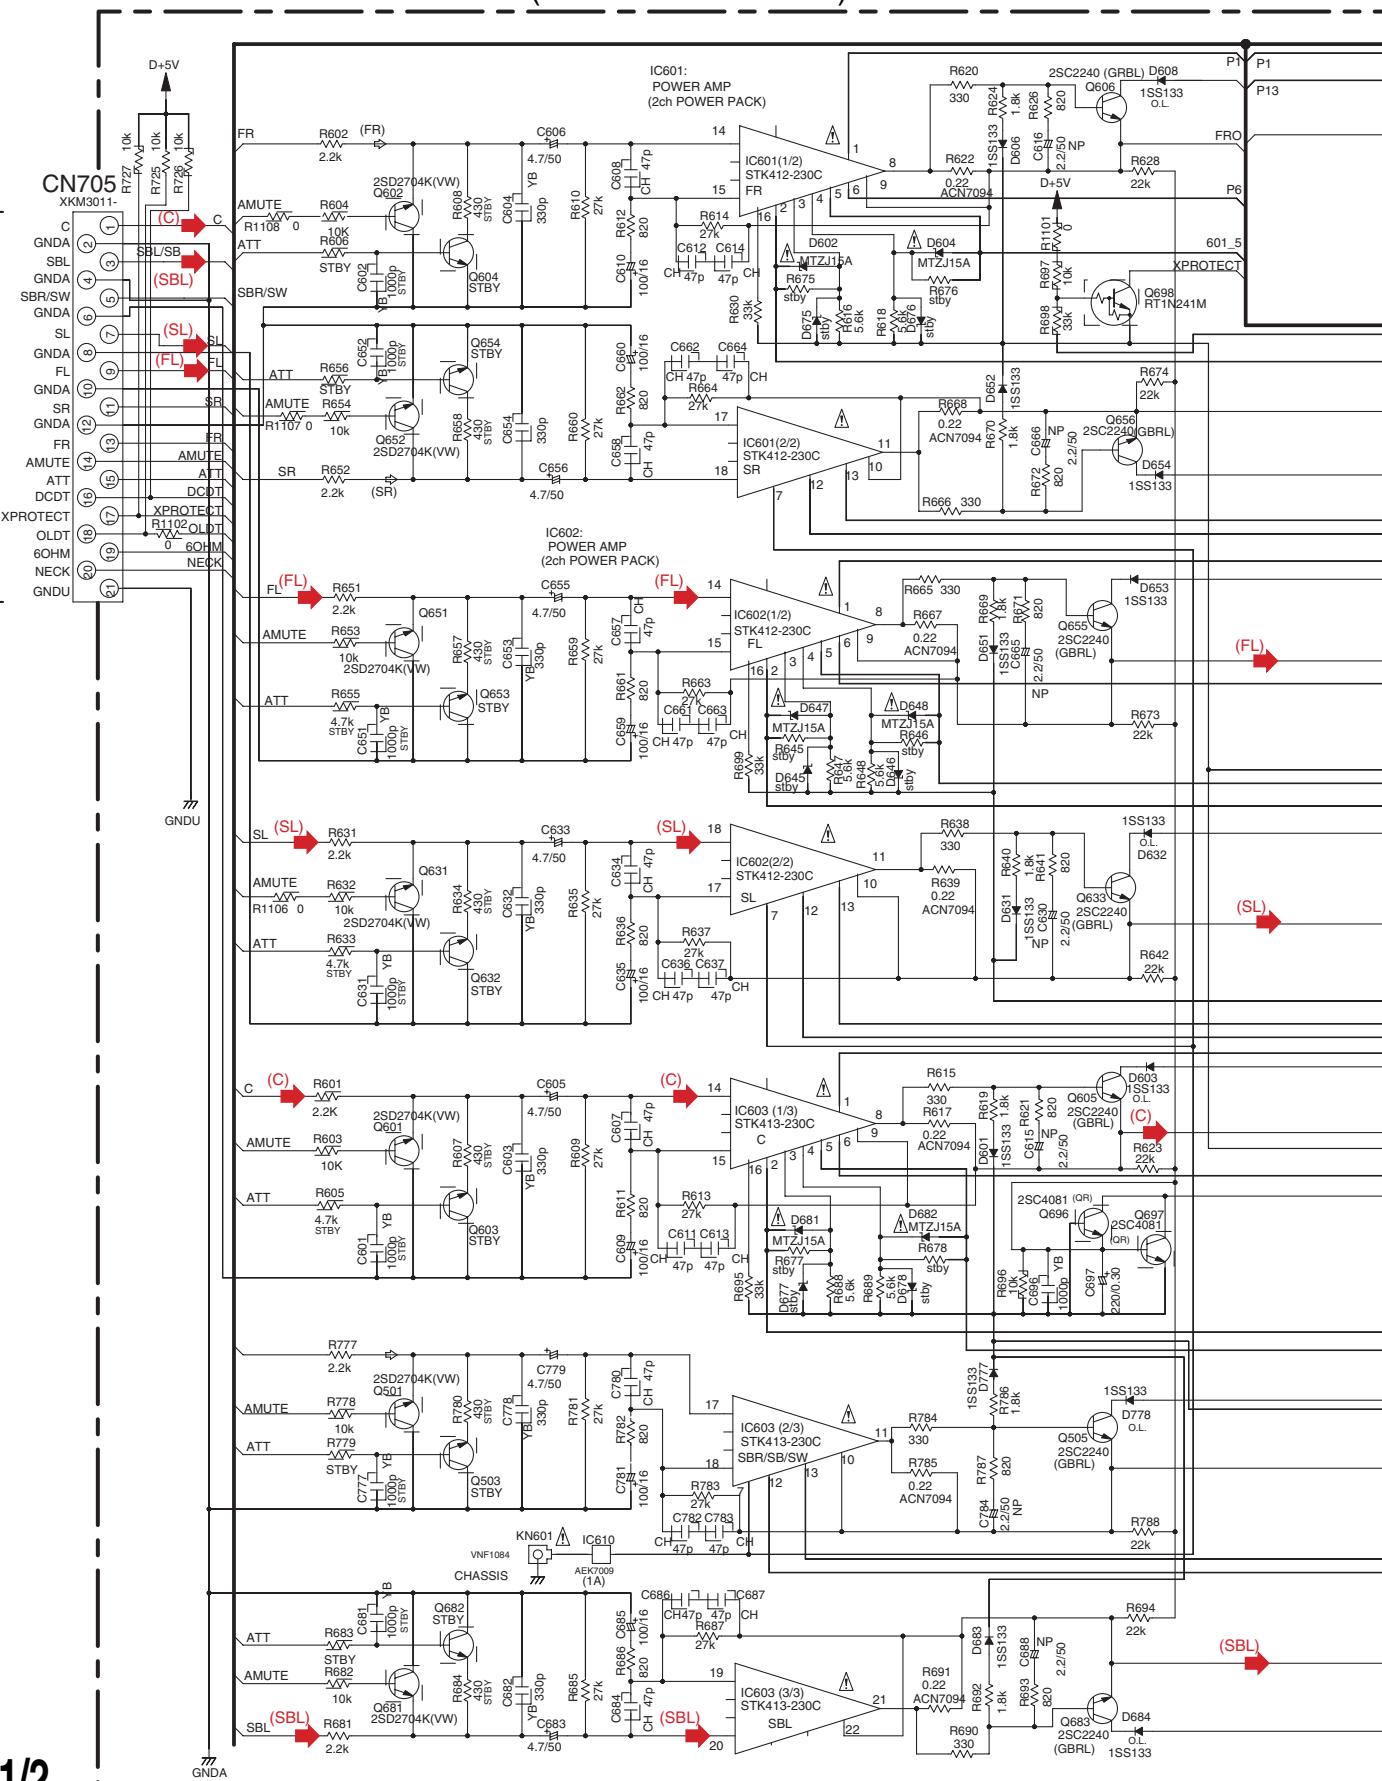

3.11 POWER PACK ASSY (2/2)

C 2/2 POWER PACK ASSY (VSX-816 : XWZ4087) (VSX-916 : XWZ4088)

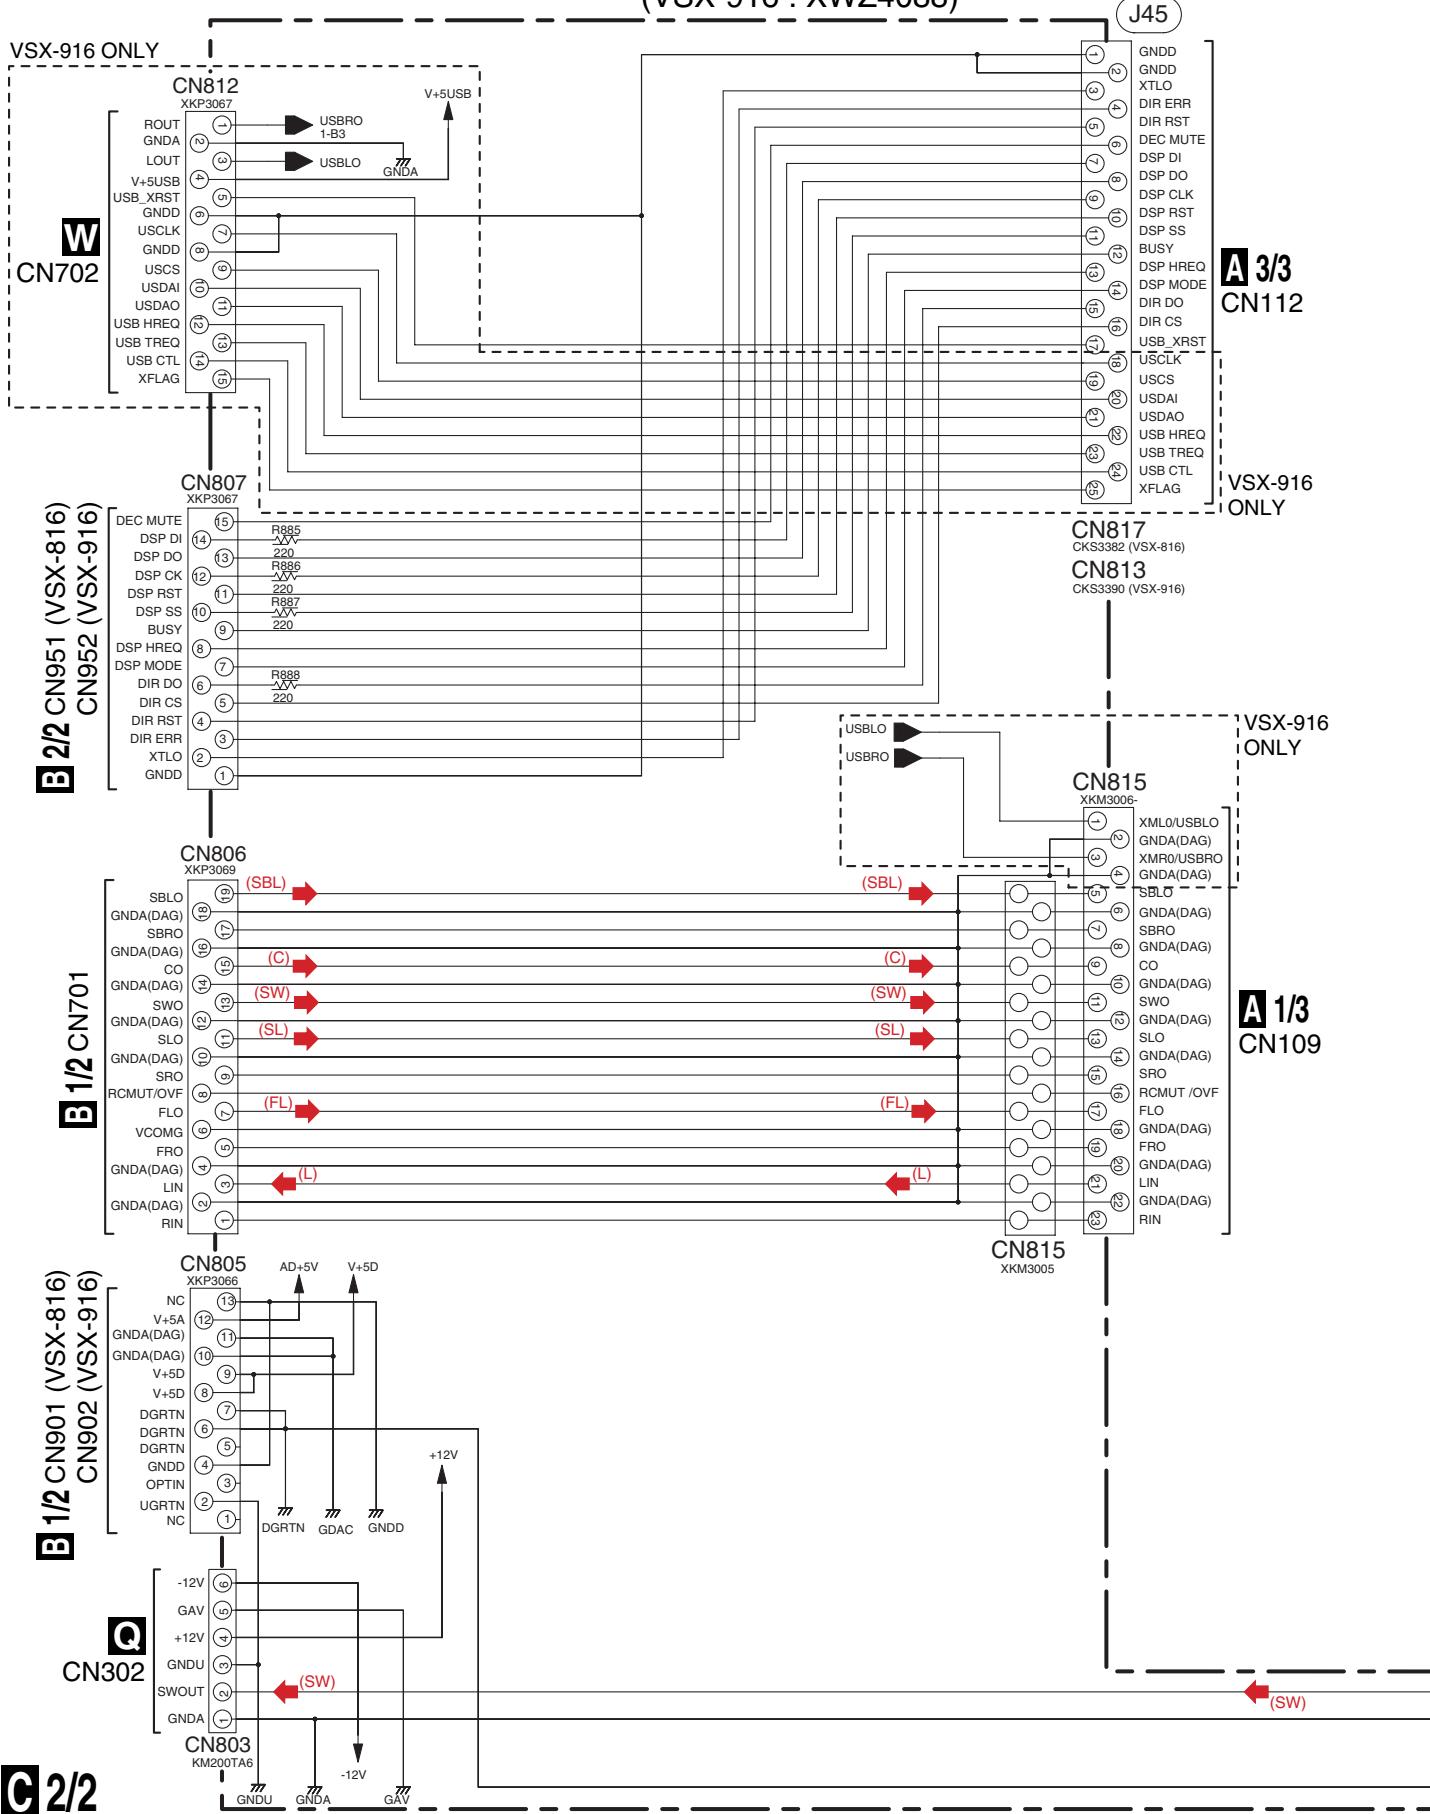


- (L) : Audio Signal Route (L ch)
- (FL) : Audio Signal Route (Front L ch)
- (SL) : Audio Signal Route (Surround L ch)
- (C) : Audio Signal Route (Center ch)
- (SBL) : Audio Signal Route (Surround Back L ch)
- (SW) : Audio Signal Route (SubWoofer ch)

NOTE

1. RESISTORS
Unit:k Ω , M Ω or unless otherwise noted.
Rated power: 1/4W unless otherwise noted.
Tolerance: (J) $\pm 5\%$ unless otherwise noted.

2. CAPACITORS
Unit: pF or μ F unless otherwise noted.
Ratings: Capacity(μ F)/Voltage(V)
unless otherwise noted.
Rated Voltage: 50V except for
electrolytic capacitors.

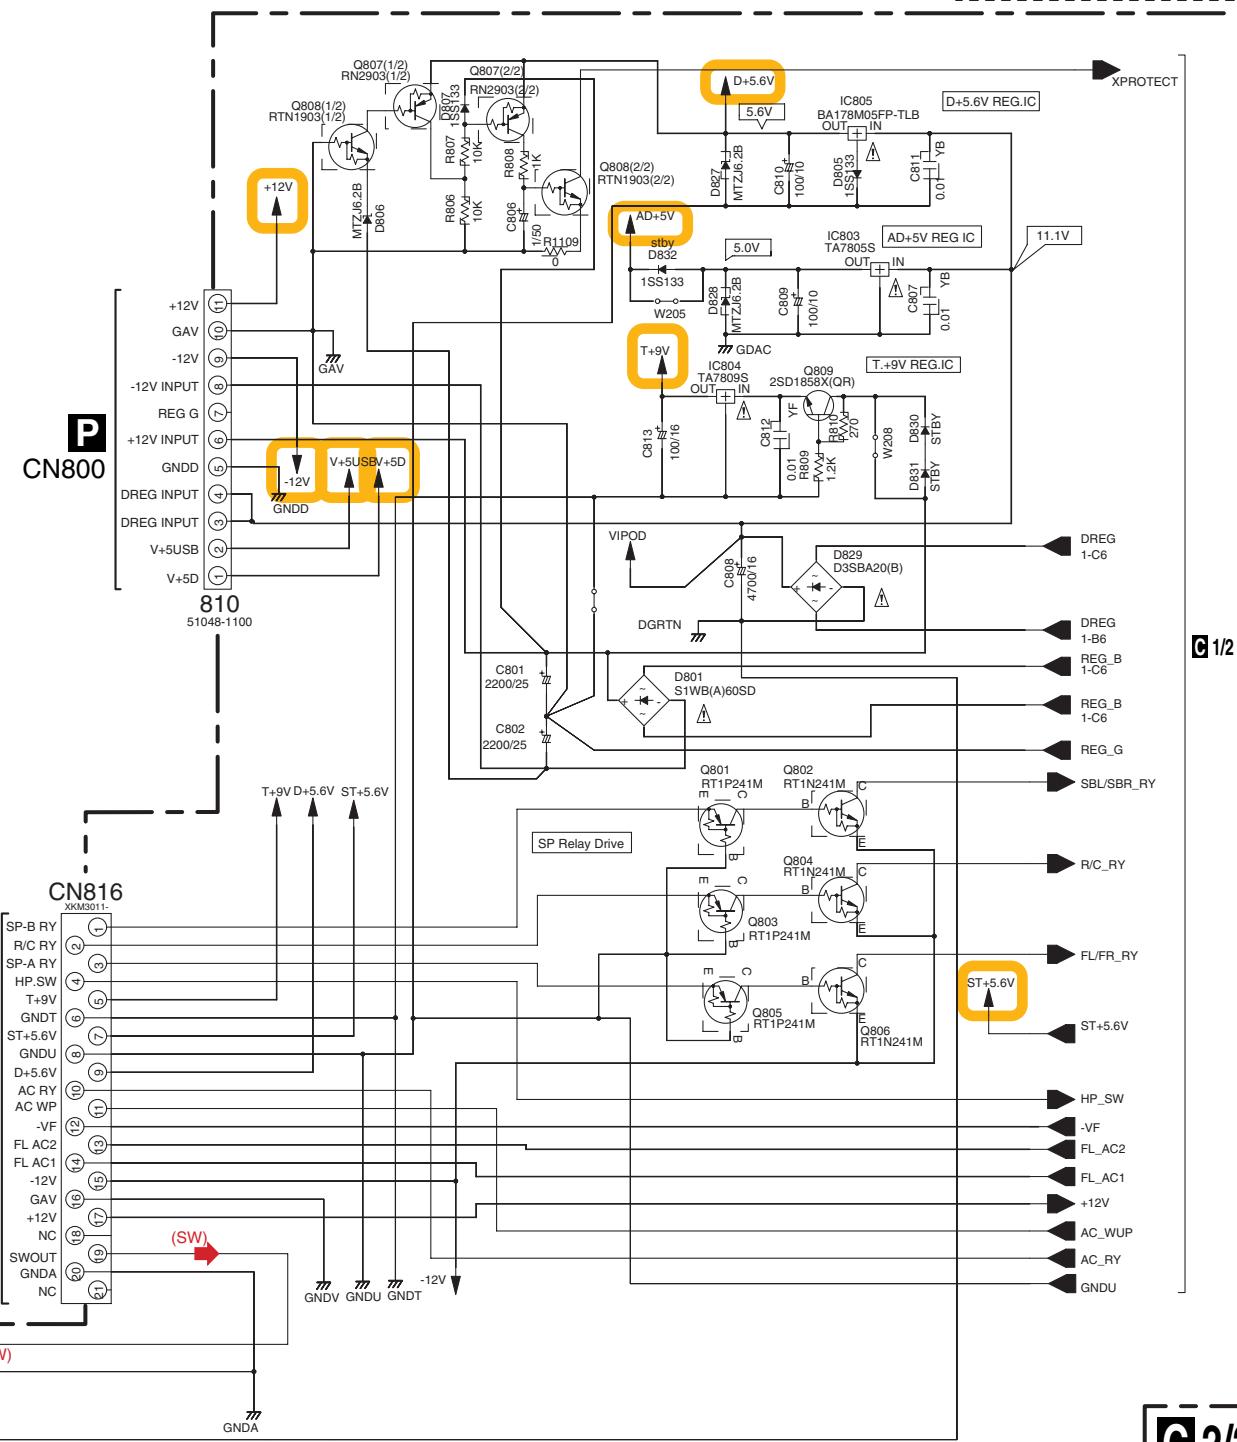

3.12 COMPONENT ASSY

1

2

3





4

A

F COMPONENT ASSY (XWZ4097)

(Y) : Video Signal Route (Component Y ch)
 (Cb) : Video Signal Route (Component Cb ch)
 (Cr) : Video Signal Route (Component Cr ch)

B

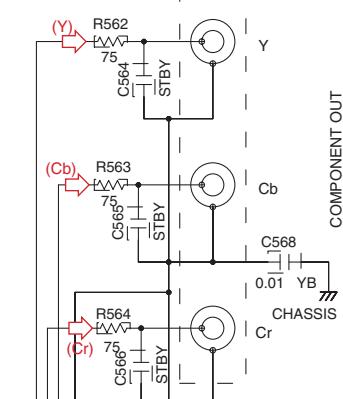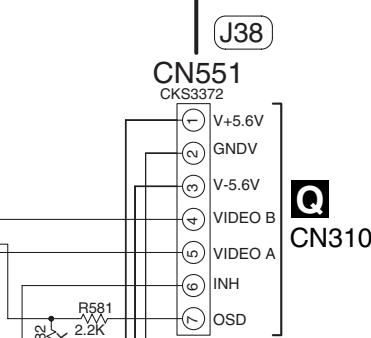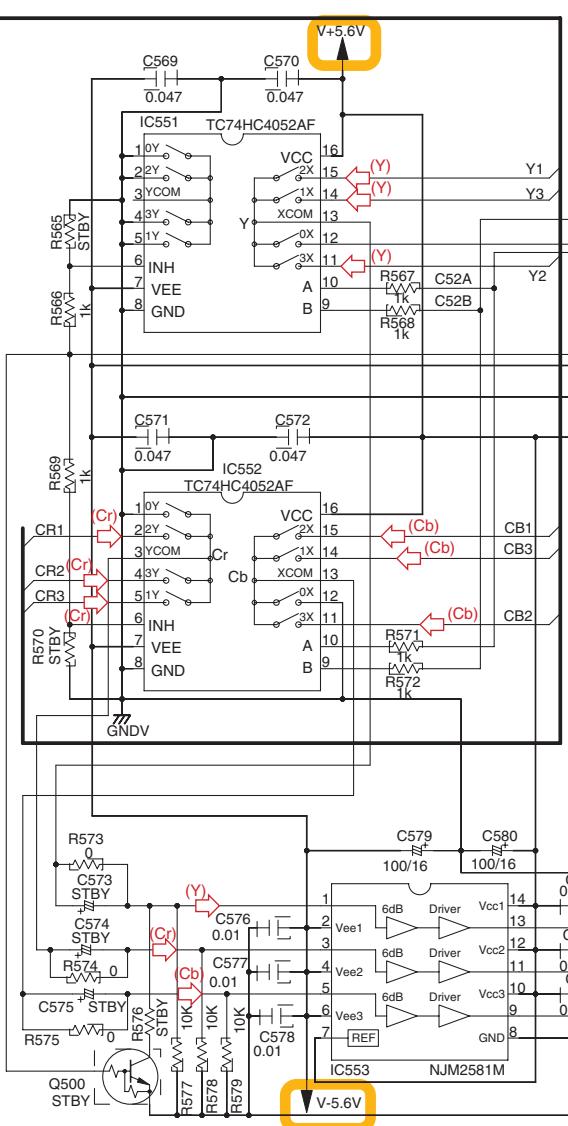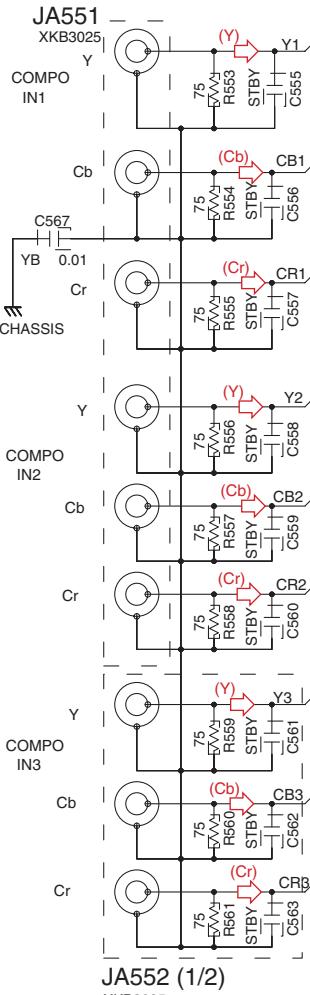

TC74HC4052			OUT
INH	C52B	C52A	
L	L	L	0X,0Y (OSD)
L	L	H	1X,1Y (IN3)
L	H	L	2X,2Y (IN1)
L	H	H	3X,3Y (IN2)
H	*	*	NONE (MUTE)

NOTE

1. RESISTORS
 Unit: kΩ or MΩ or Ω unless otherwise noted.
 Rated power: 1/16W unless otherwise noted.
 Tolerance: (±) 5% unless otherwise noted.

2. CAPACITORS
 Unit: pF or μF unless otherwise noted.
 Ratings: Capacity(μF)/Voltage(V) unless otherwise noted.
 Rated Voltage: 50V except for electrolytic capacitors.

34

1

VSX-816-K

3


4

3.13 HEADPHONE, PRE-OUT and 5.1CHIN ASSYS

8


A

G HEADPHONE ASSY (XWZ4095)

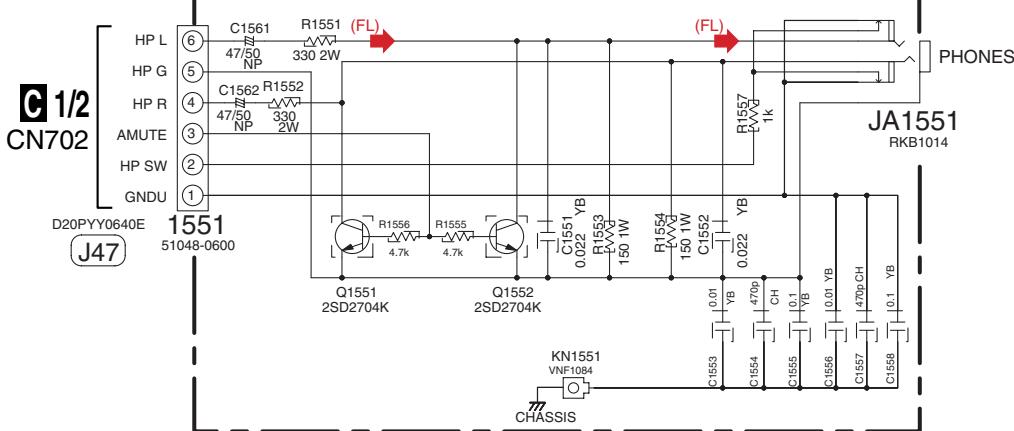


- (FL) : Audio Signal Route (Front L ch)
- (SL) : Audio Signal Route (Surround L ch)
- (C) : Audio Signal Route (Center ch)
- (SBL) : Audio Signal Route (Surround Back L ch)
- (SW) : Audio Signal Route (SubWoofer ch)

H PRE-OUT ASSY (VSX-816 : XWZ4098) (VSX-916 : XWZ4200)

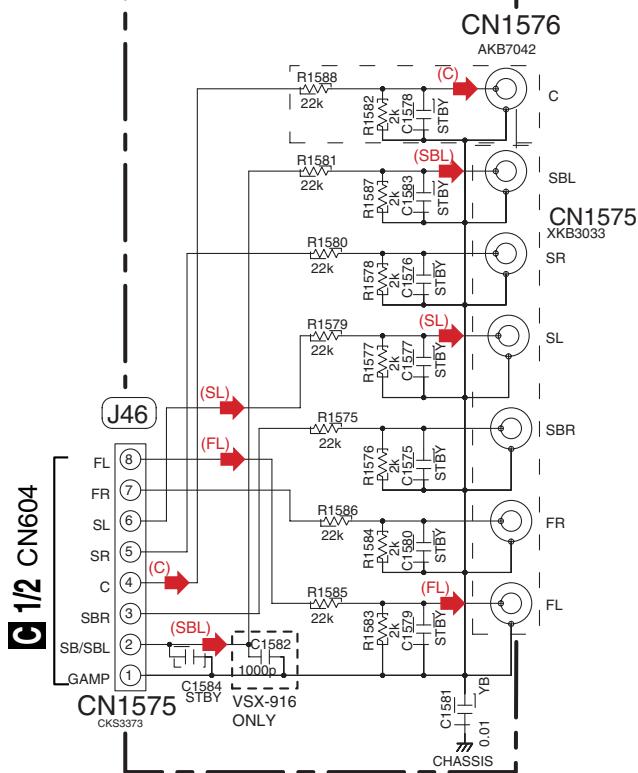


I 5.1CHIN ASSY (XWZ4069)

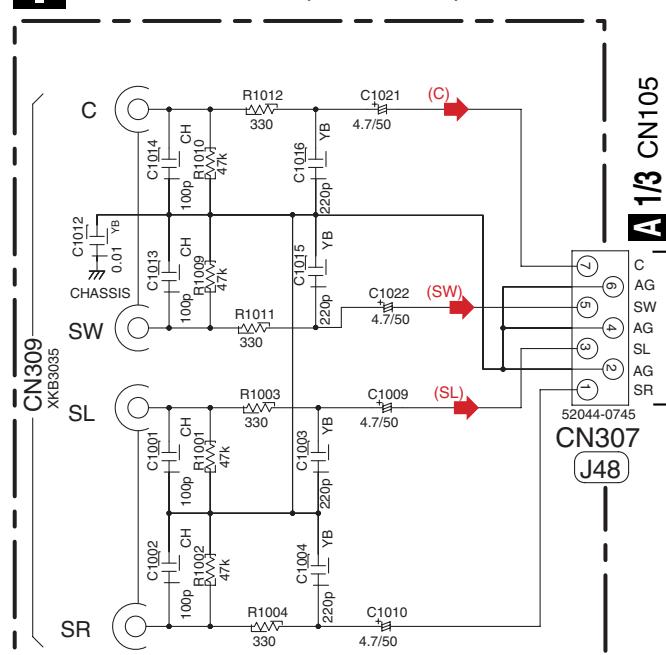
G H I


3.14 FRONT DISPLAY, R. ENCODER and POWER KEY ASSYS

A

L R. ENCODER ASSY
(XWZ4055) D15A07

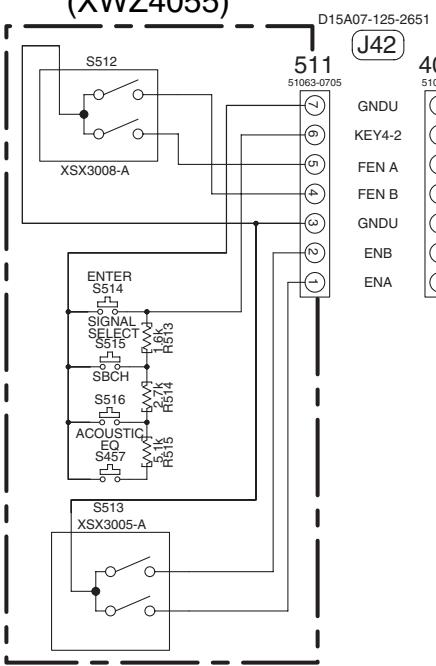

K FRONT DISPLAY ASSY (XWZ4054)

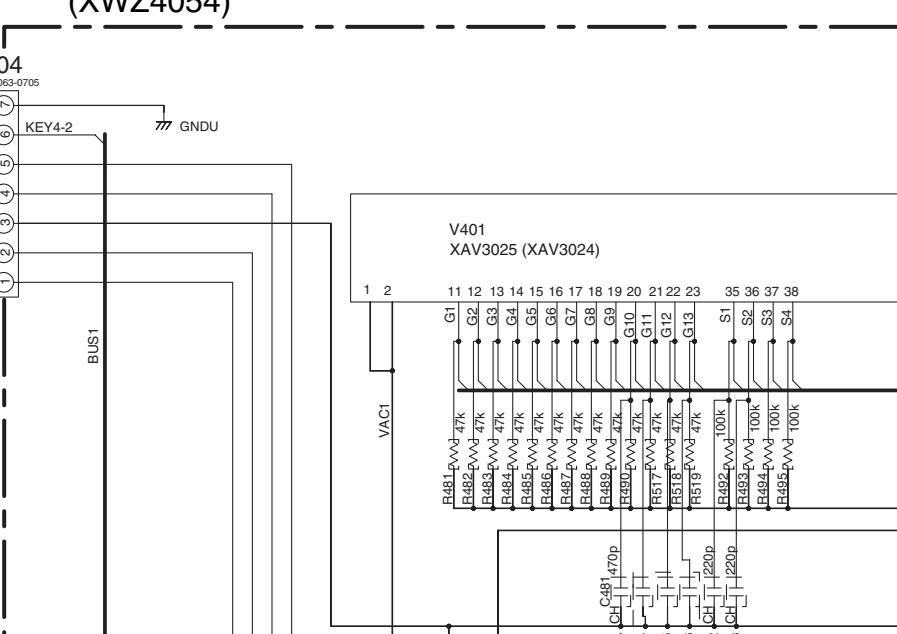

B



C

D


E

F

A 3/3 CN101

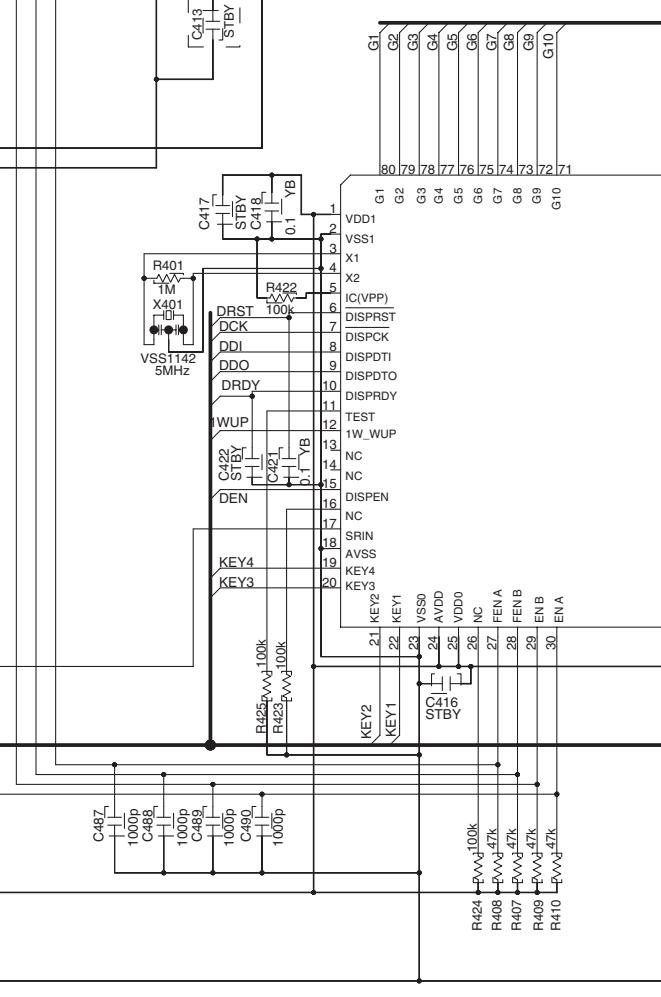
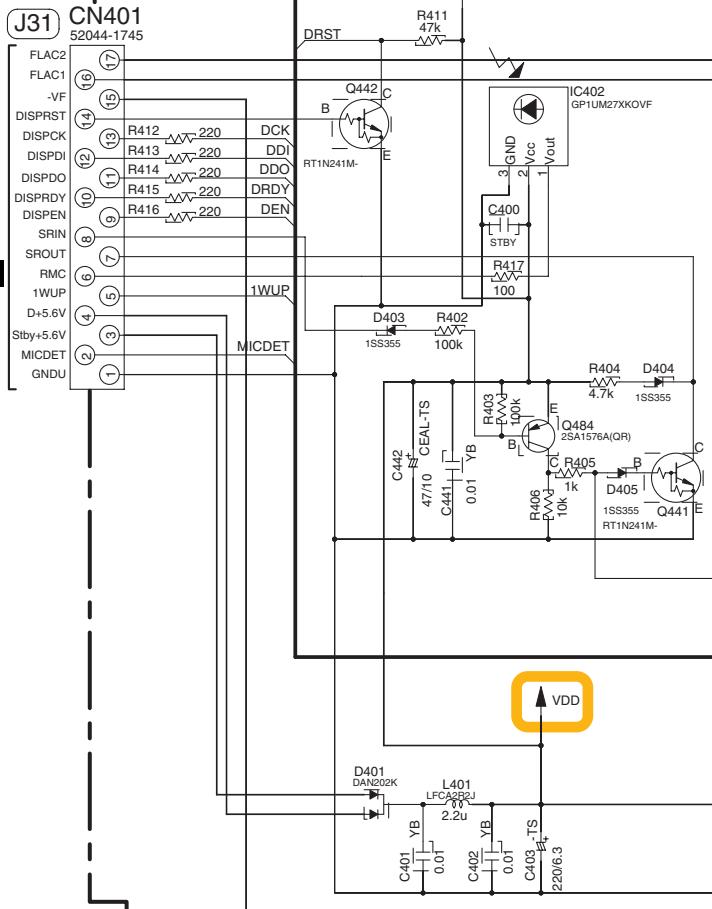



36

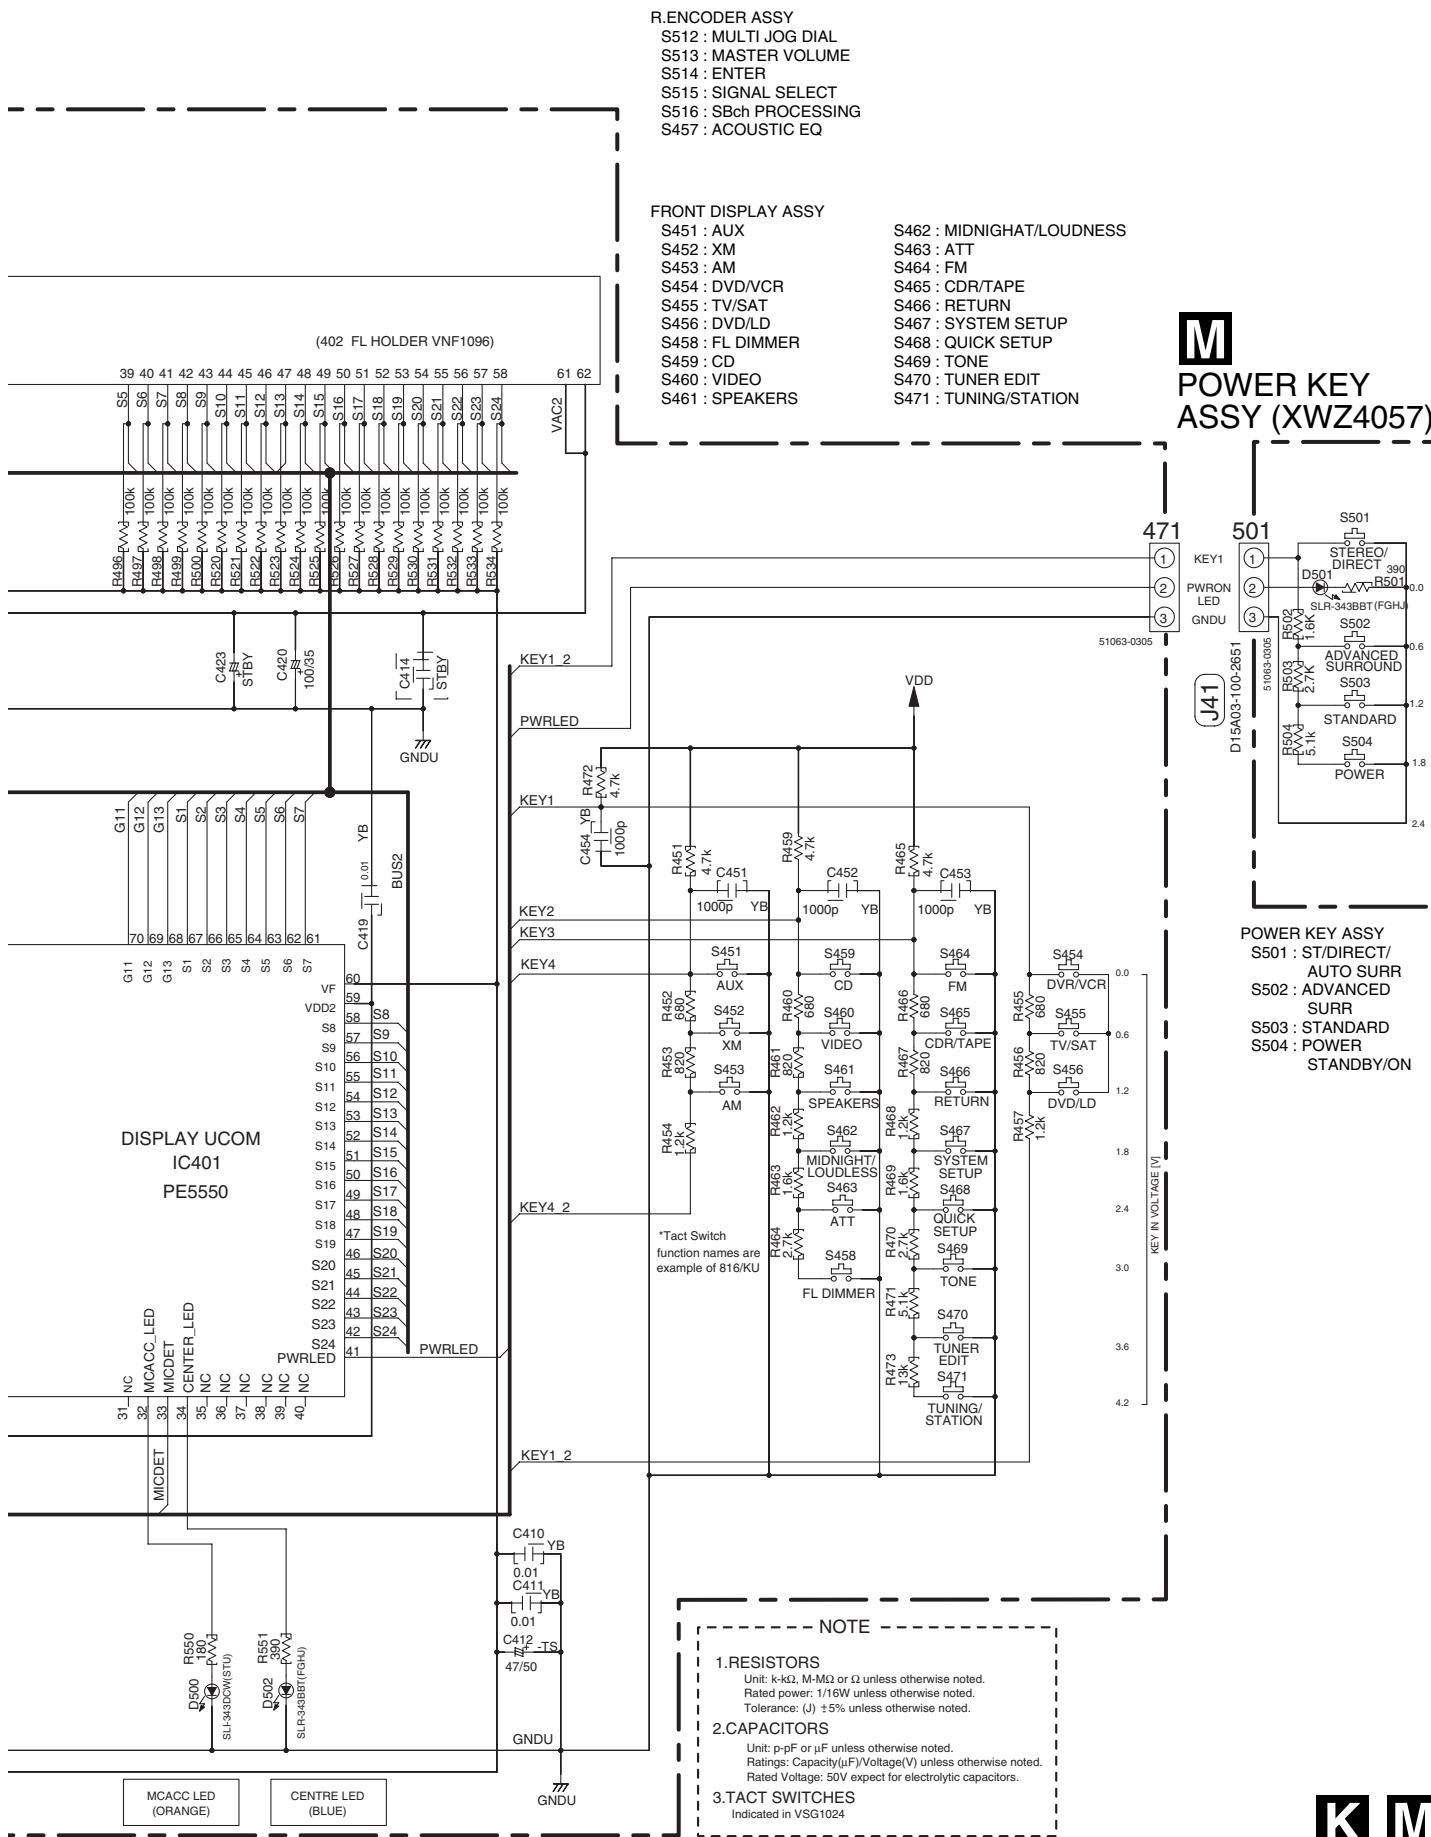

3.15 S. VIDEO, TRANS 4 and REGULATOR ASSYS

N S. VIDEO ASSY (XWZ4065)

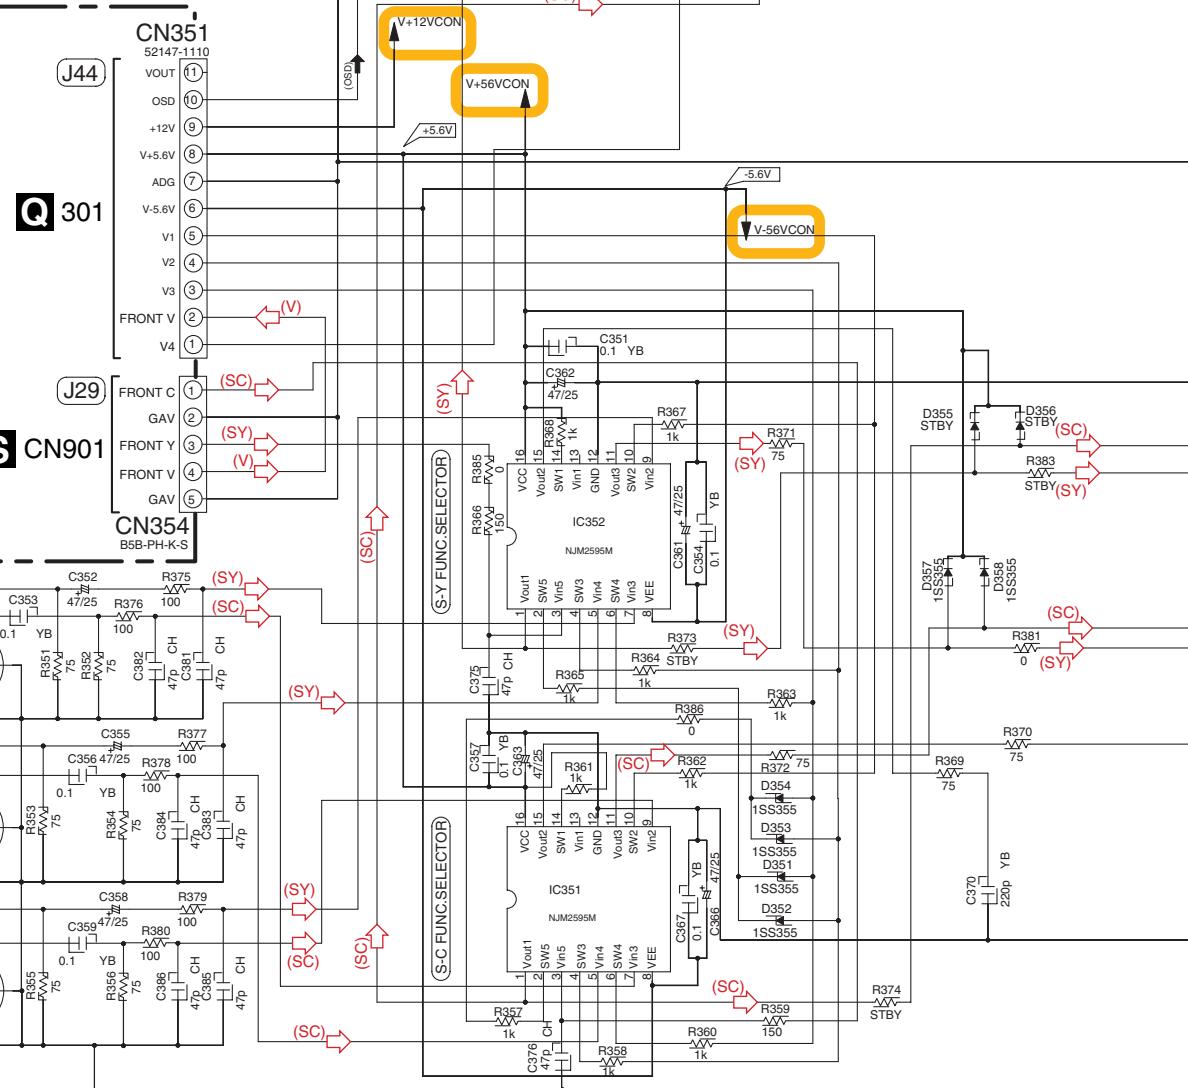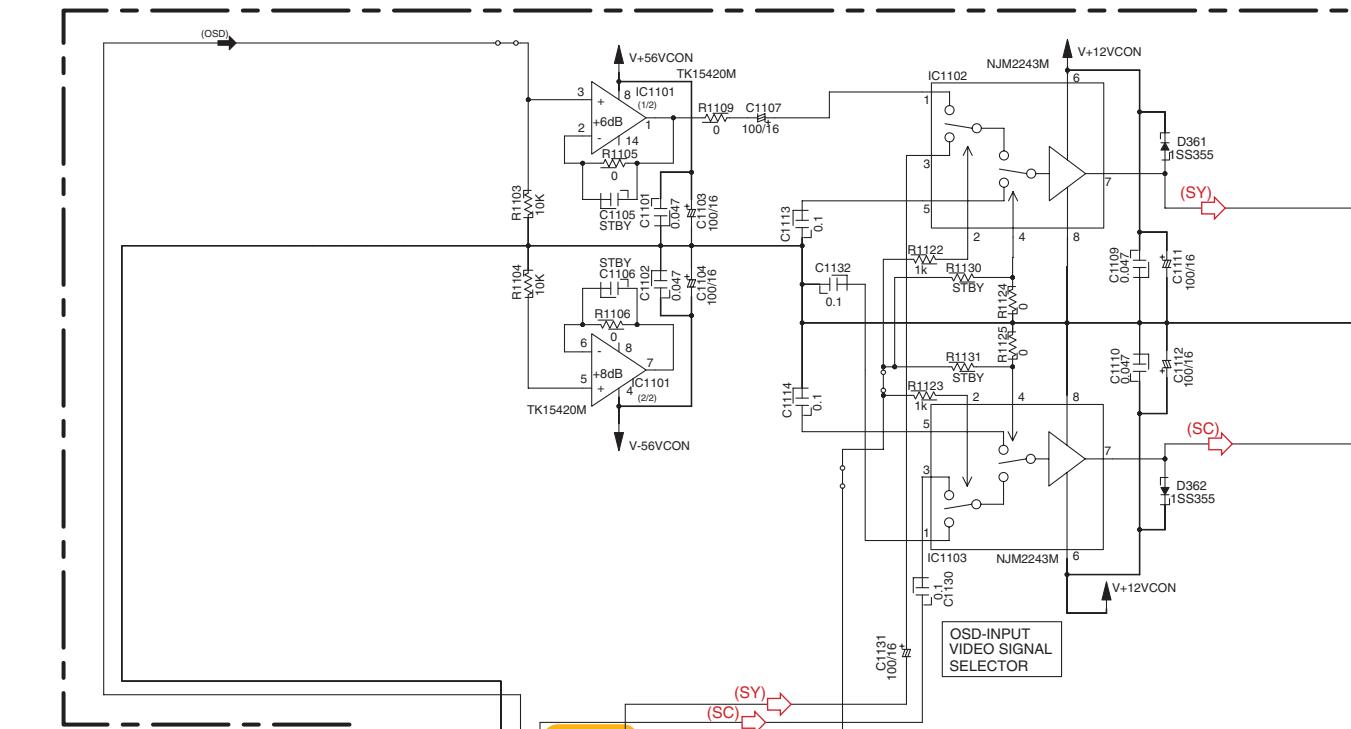

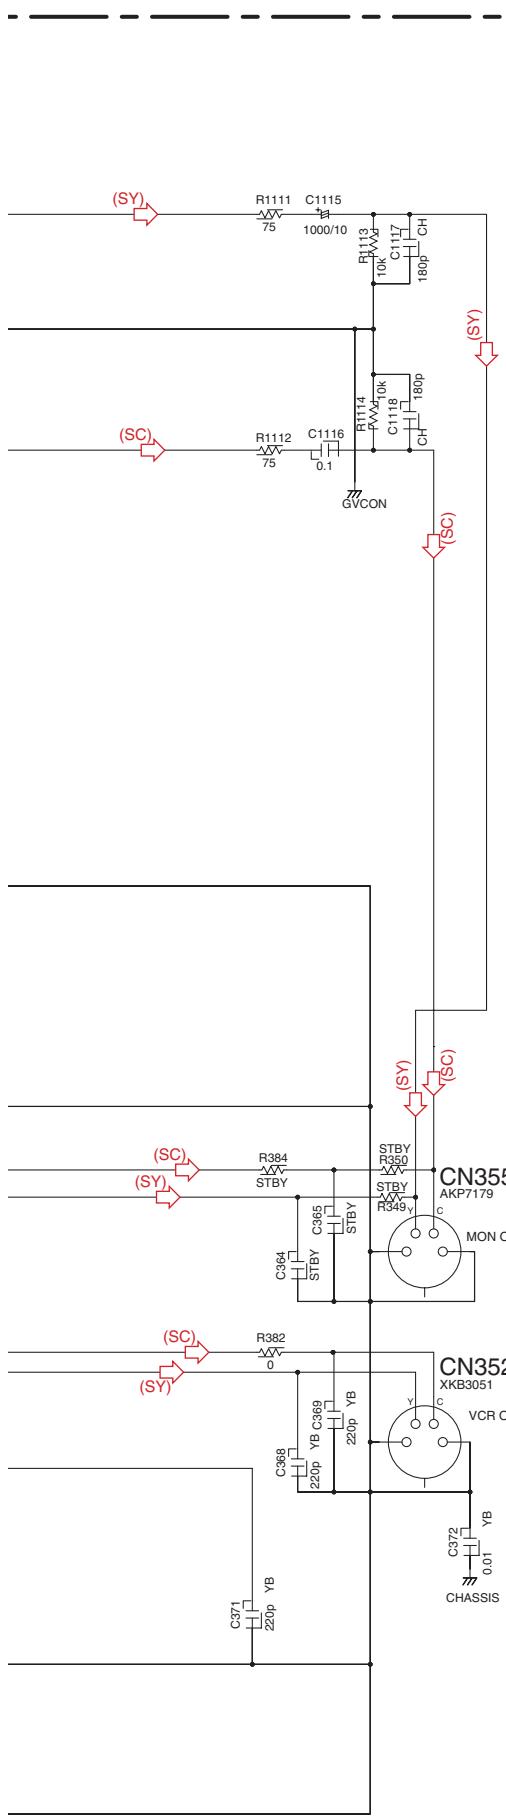


- (V)  : Video Signal Route
- (SY)  : S-Video Signal Route (Y ch)
- (SC)  : S-Video Signal Route (C ch)

• • NOTE

- 1.RESISTORS**
Unit: k Ω , M Ω or Ω unless otherwise noted.
Rated power: 1/16W unless otherwise noted.
Tolerance: (J) $\pm 5\%$ unless otherwise noted.

2.CAPACITORS
Unit: pF or μ F unless otherwise noted.
Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted
Rated Voltage: 50V except for electrolytic capacitors.


A 2/3 CN251

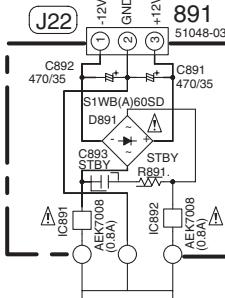

TRANS 4 ASSY
(XWZ4093)


**CAUTION : FOR CONTINUED PROTECTION AGAINST
RISK OF FIRE. REPLACE ONLY WITH
SAME TYPE NO. AEK7008 MFD, BY
LITTELFUSE INC. FOR IC891 and IC892.**

P REGULATOR ASSY
(VSX-816 : XWZ4129)
(VSX-916 : XWZ4116)

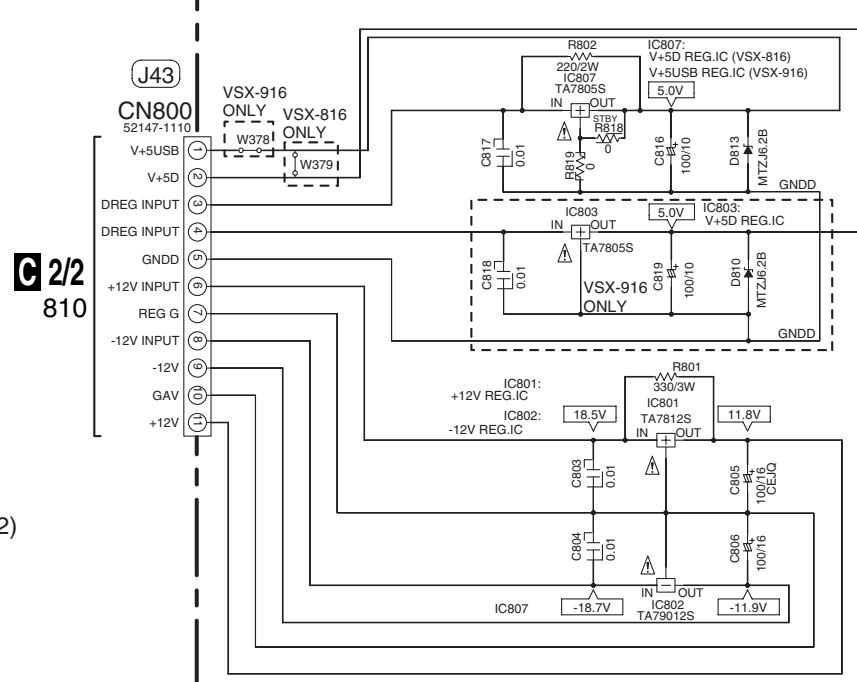

N O P

Q VIDEO ASSY (XWZ4062)

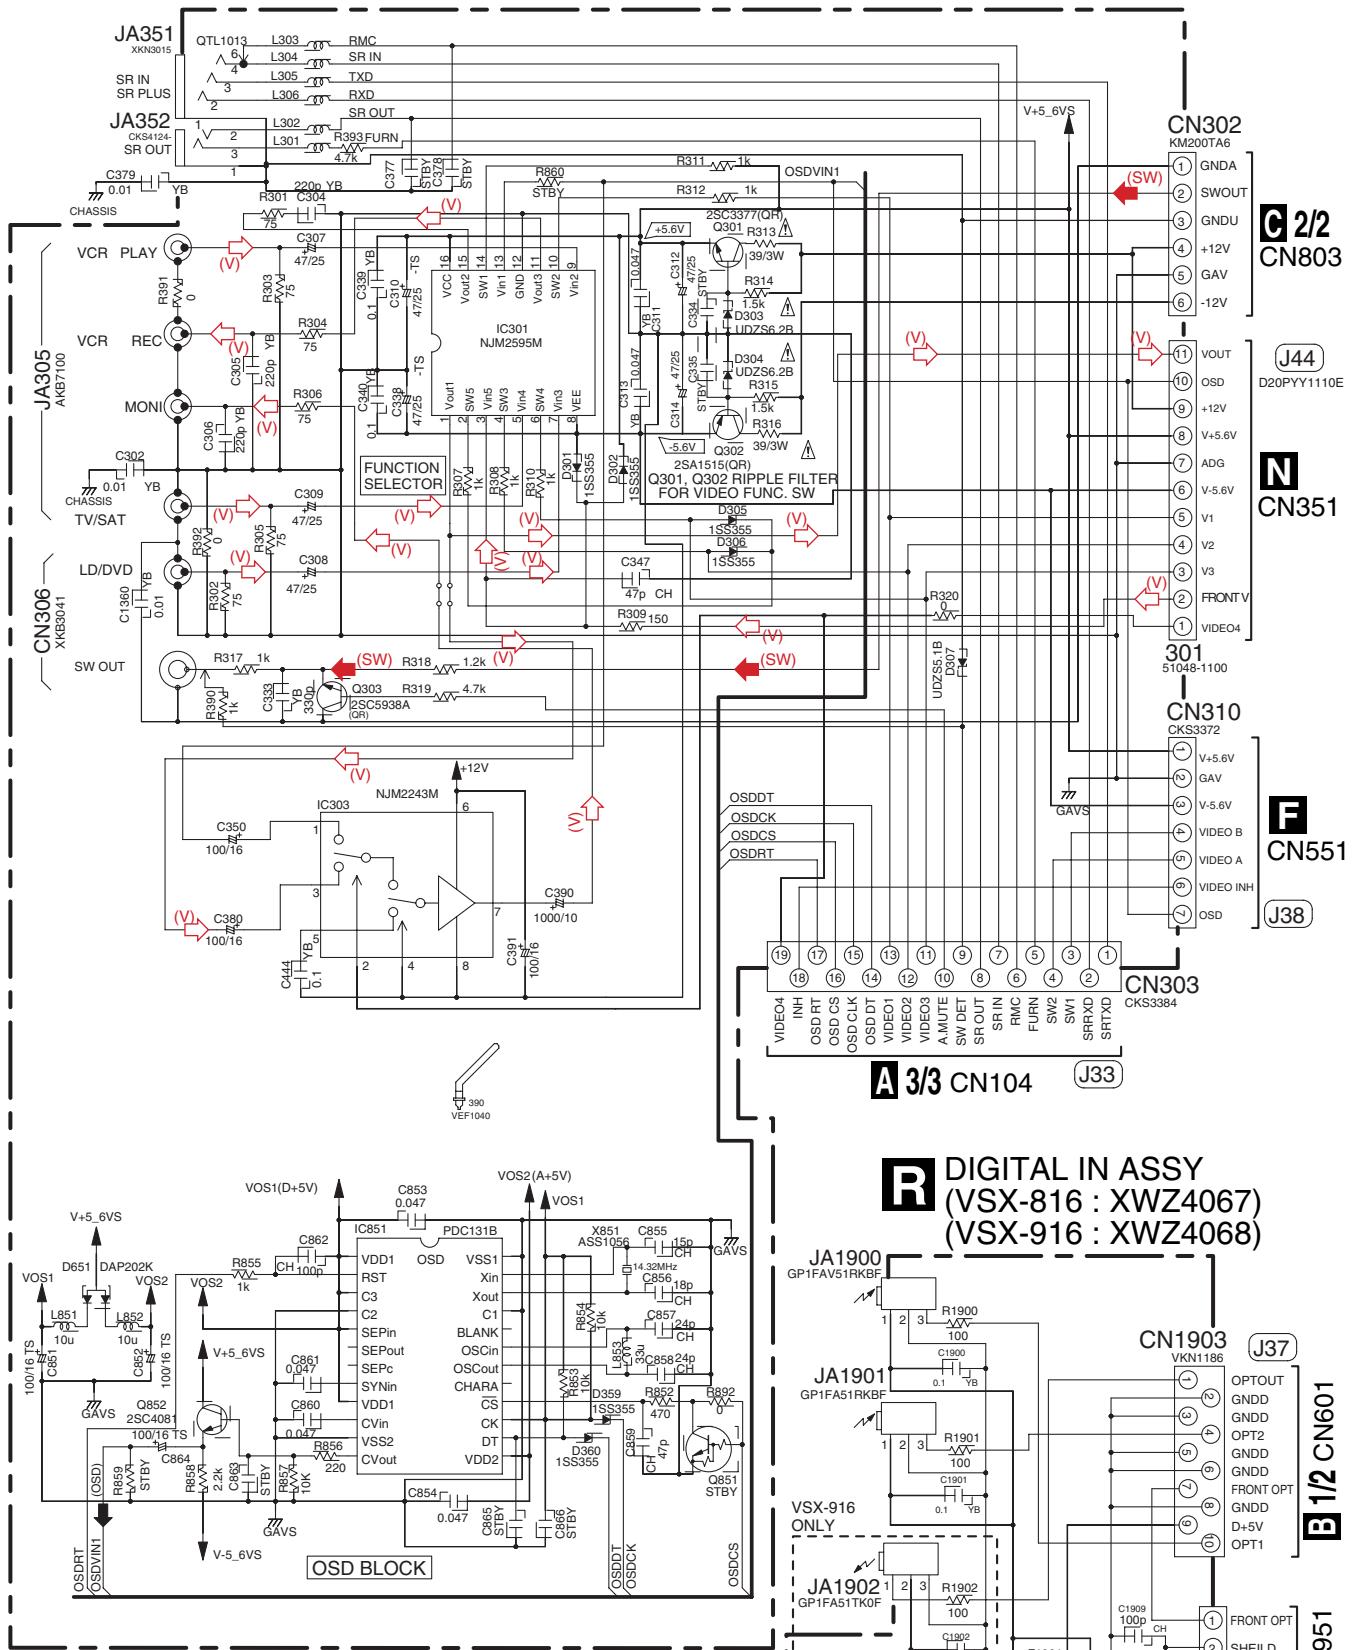


----- NOTE -----


1.1. RESISTORS

| Unit: k- Ω , M- Ω or Ω unless otherwise noted
| Rated power: 1/16W unless otherwise noted.
| Tolerance: (J) $\pm 5\%$ unless otherwise noted.

2. CAPACITORS
Unit: p-pF or μ F unless otherwise noted.
Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted.
Rated Voltage: 50V except for electrolytic capacitors.

R DIGITAL IN ASSY
(VSX-816 : XWZ4067)
(VSX-916 : XWZ4068)

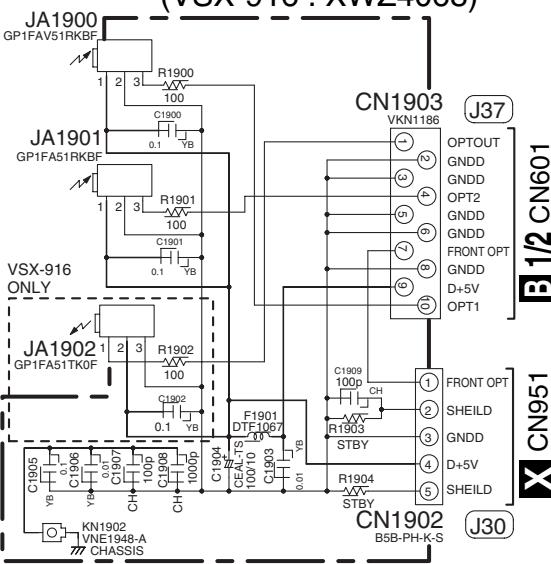


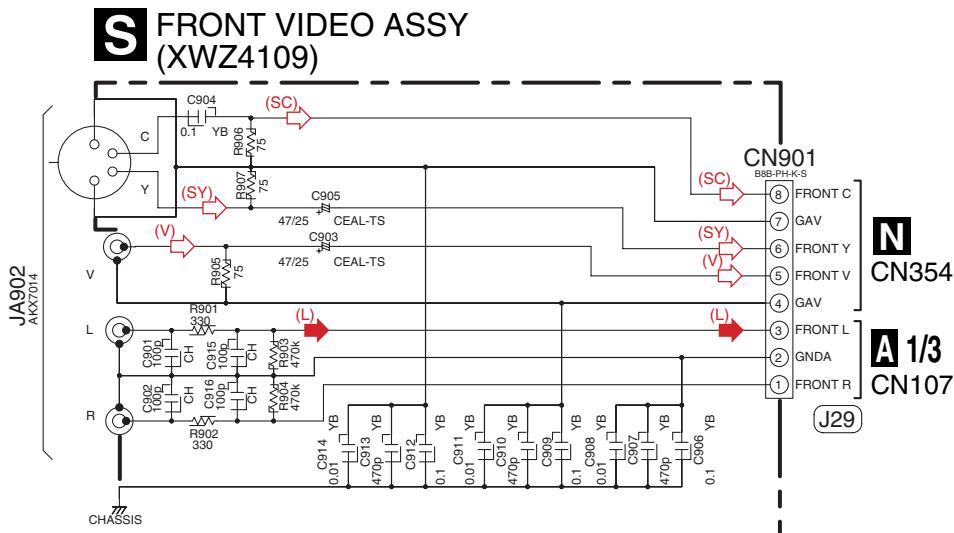

• NOTE FOR FUSE REPLACEMENT

**CAUTION -FOR CONTINUED PROTECTION AGAINST RISK OF FIRE.
REPLACE WITH SAME TYPE AND RATINGS ONLY.**


**U PRIMARY ASSY
(VSX-816 : XWZ4072)
(VSX-916 : XWZ4073)**

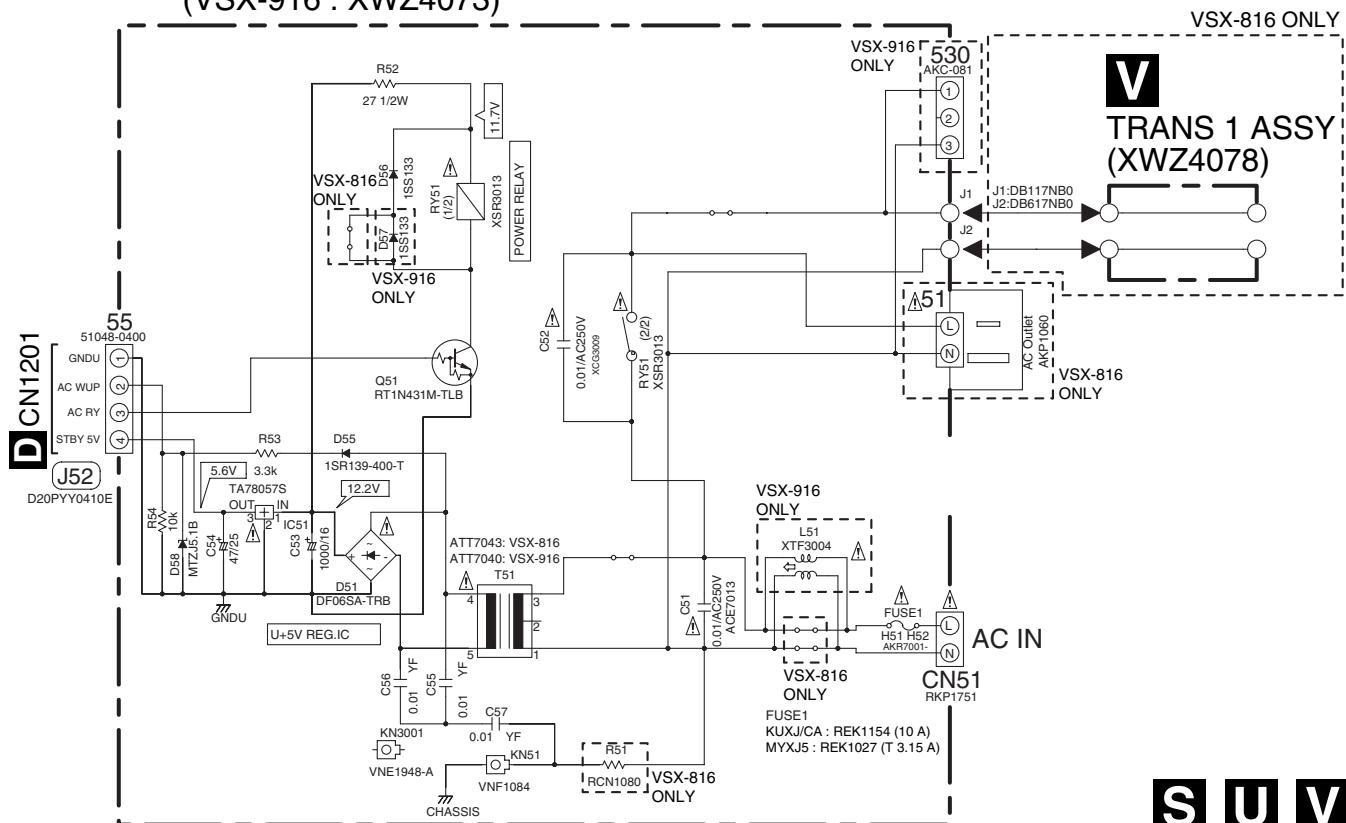


S U V

3.17 USB ASSY

W USB ASSY (AWX8704)

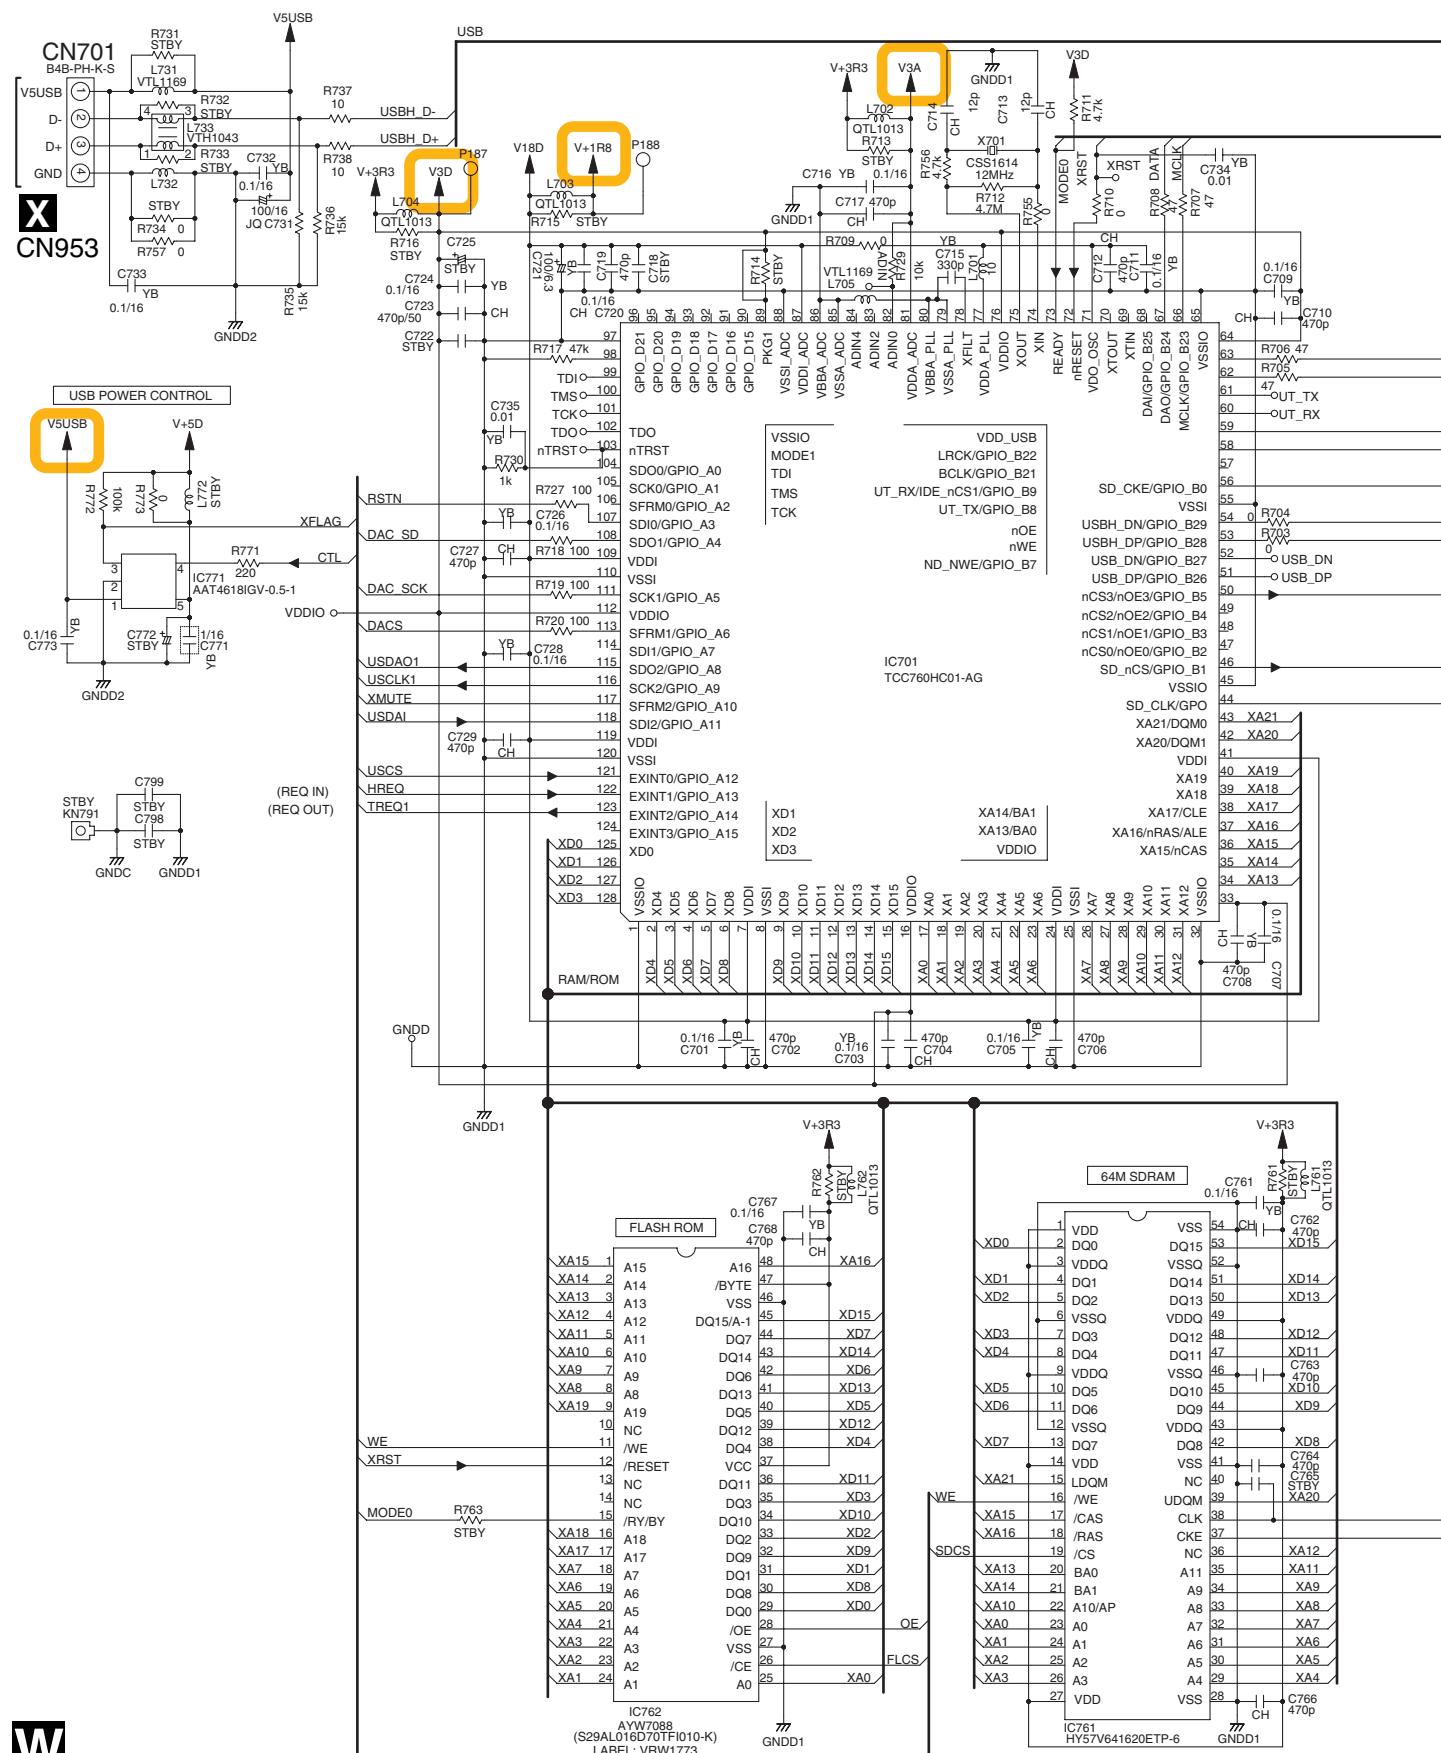

A

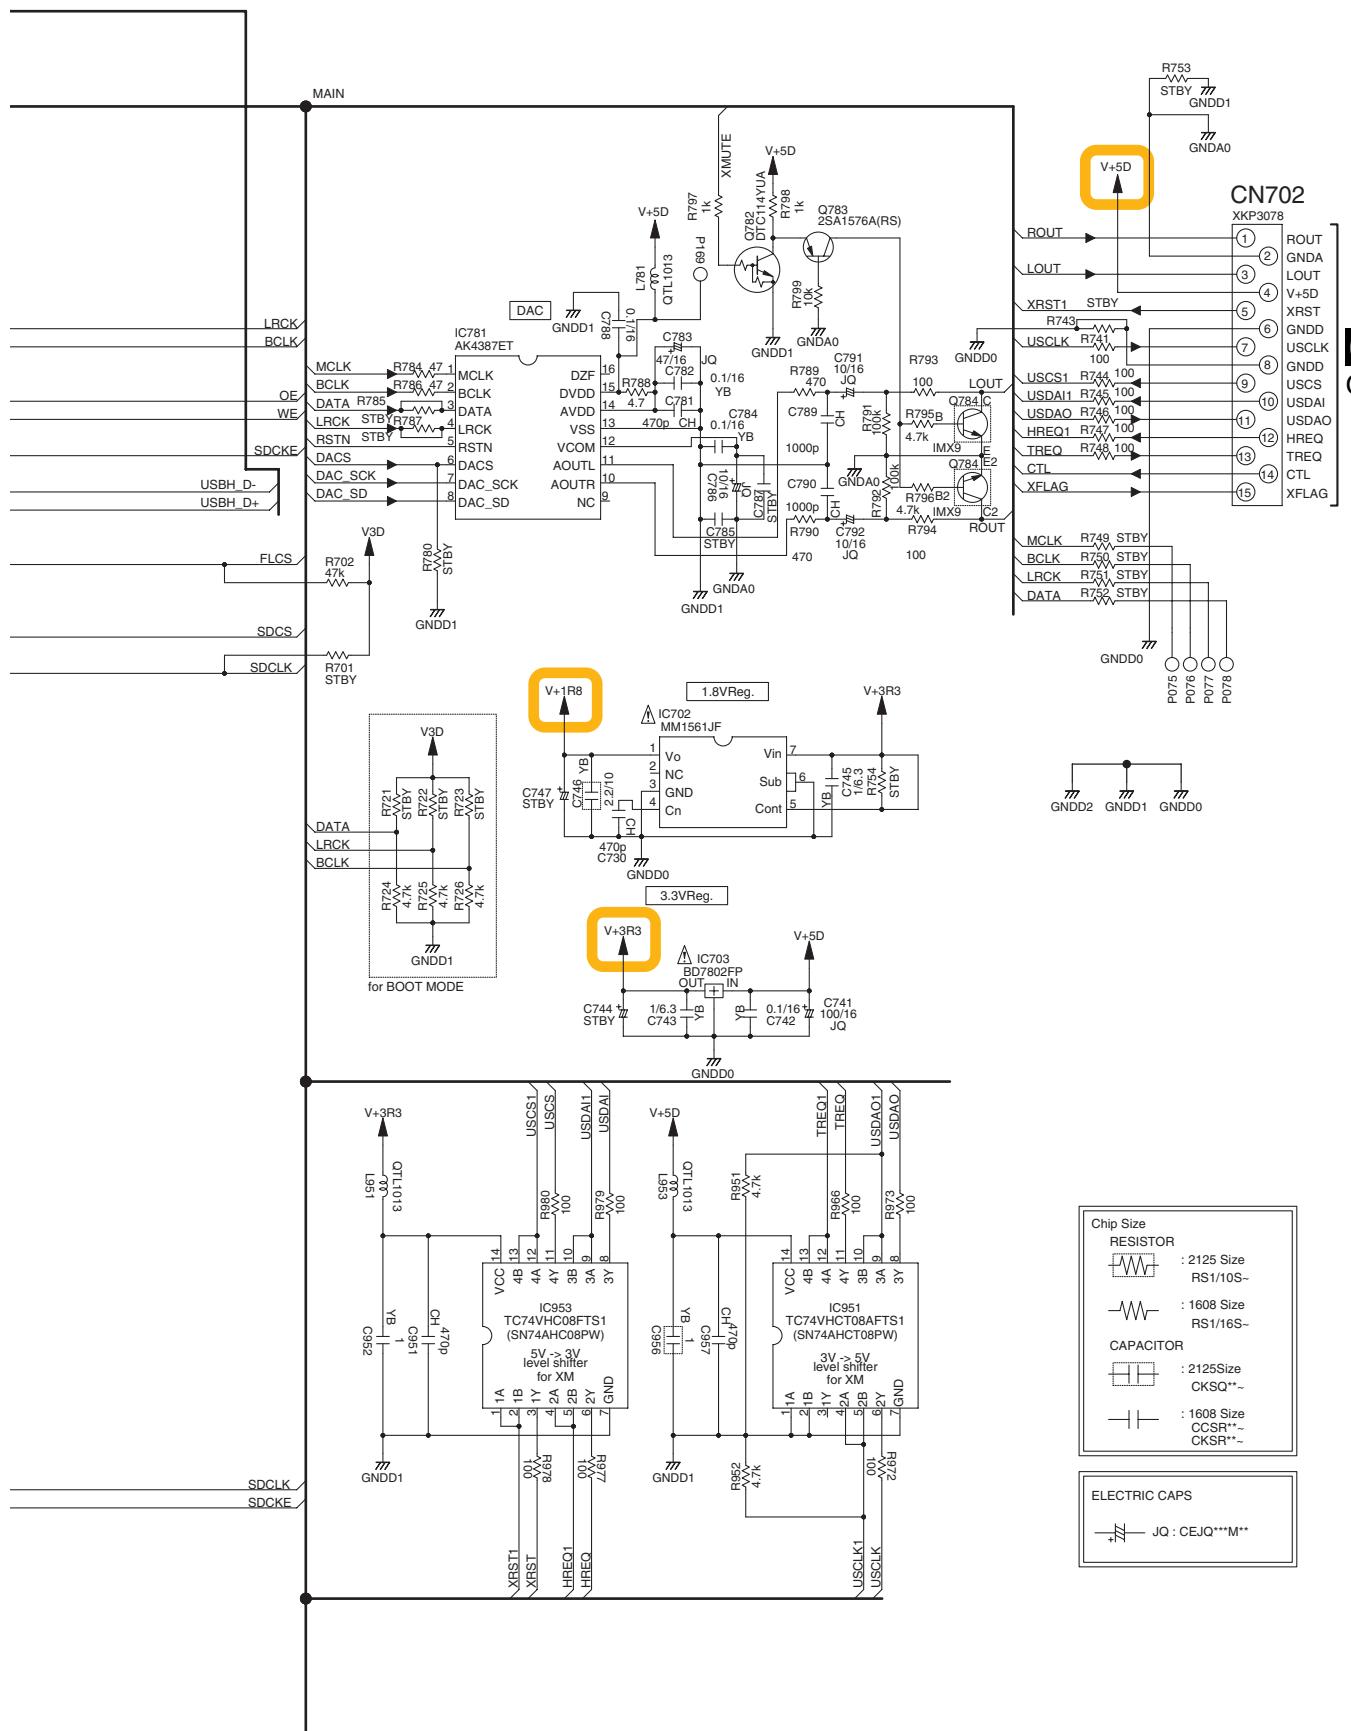

C 2/2
CN812

B

C


D

E

F

3.18 USB IN ASSY


X USB IN ASSY (VSX-816 : XWK3249)
(VSX-916 : XWK3250)

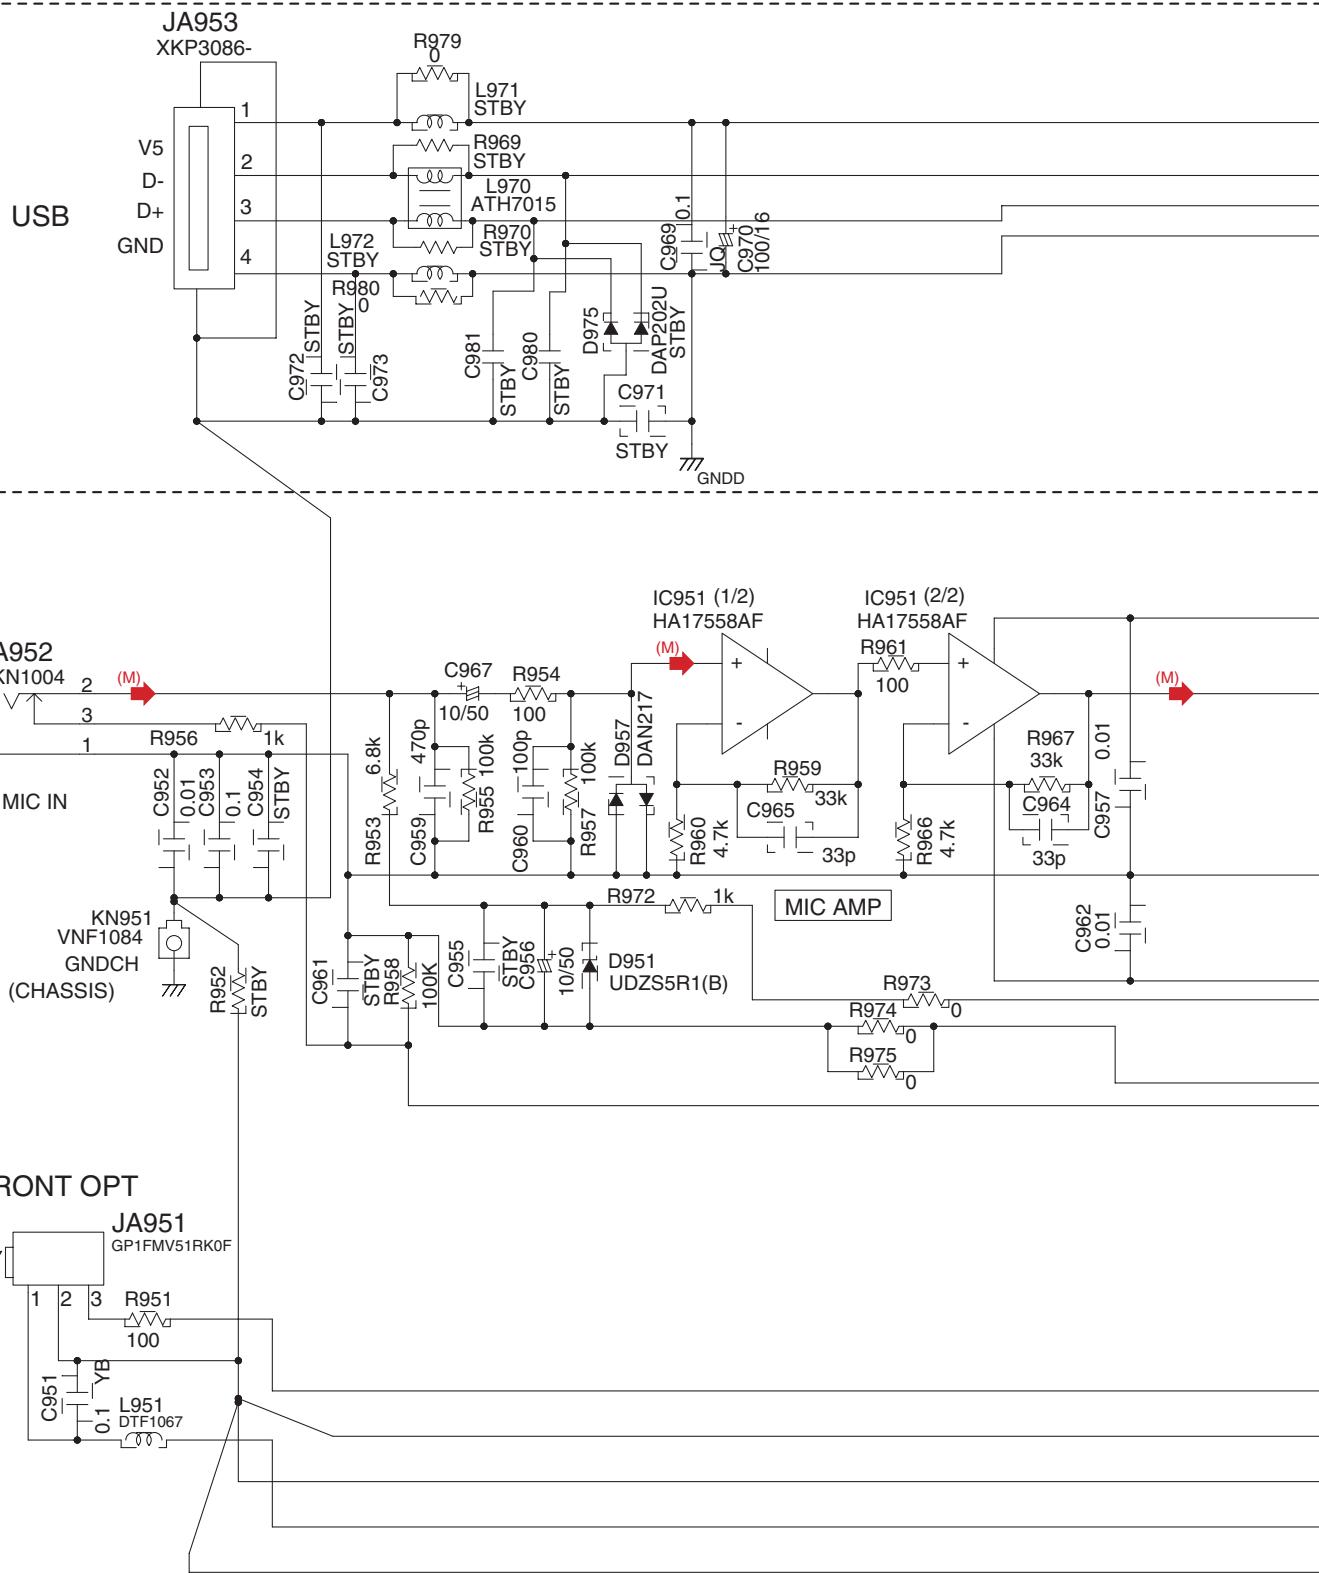


A

(M) Audio Signal Route (Mic ch)


A

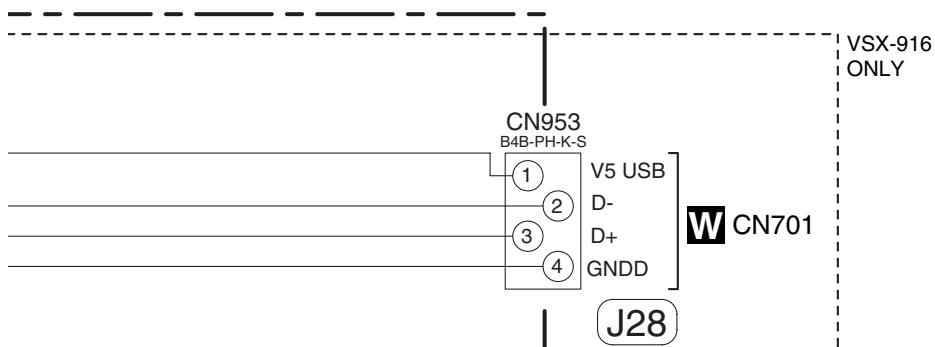

B

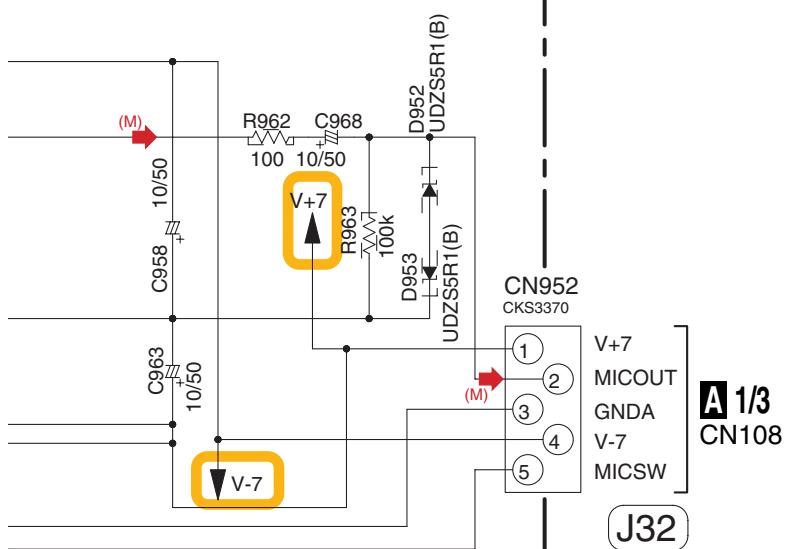

C

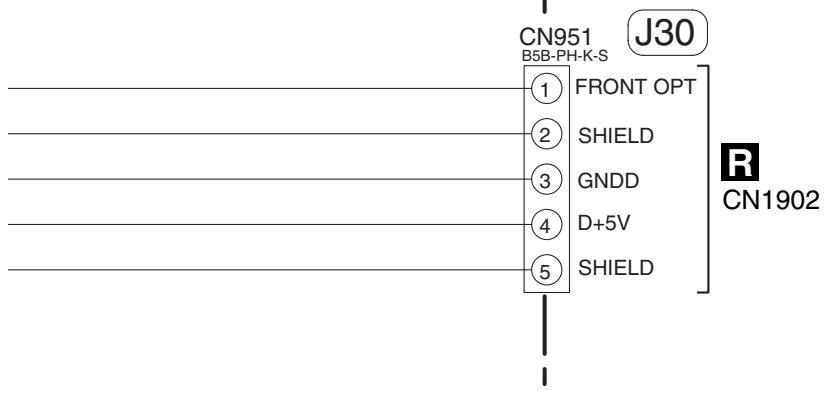

D

NOTE

1. RESISTORS

- Unit: k- Ω , M- Ω or Ω unless otherwise noted.
- Rated power: 1/16W unless otherwise noted.
- Tolerance: (J) $\pm 5\%$ unless otherwise noted.

2. CAPACITORS

- Unit: p-pF or μ F unless otherwise noted.
- Ratings: Capacity(μ F)/Voltage(V) unless otherwise noted.
- Rated Voltage: 50V expect for electrolytic capacitors.

E

F

X


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

1. Part numbers in PCB diagrams match those in the schematic diagrams.
2. A comparison between the main parts of PCB and schematic diagrams is shown below.

Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
	B C E B C E 	Transistor
	B C E B C E 	Transistor with resistor
	D G S D G S 	Field effect transistor
		Resistor array
		3-terminal regulator

3. The parts mounted on this PCB include all necessary parts for several destinations.
For further information for respective destinations, be sure to check with the schematic diagram.
4. View point of PCB diagrams.

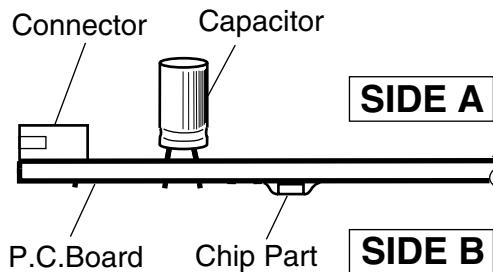

A

B

C

D


E

F

4.1 USB IN ASSY


SIDE A

SIDE A

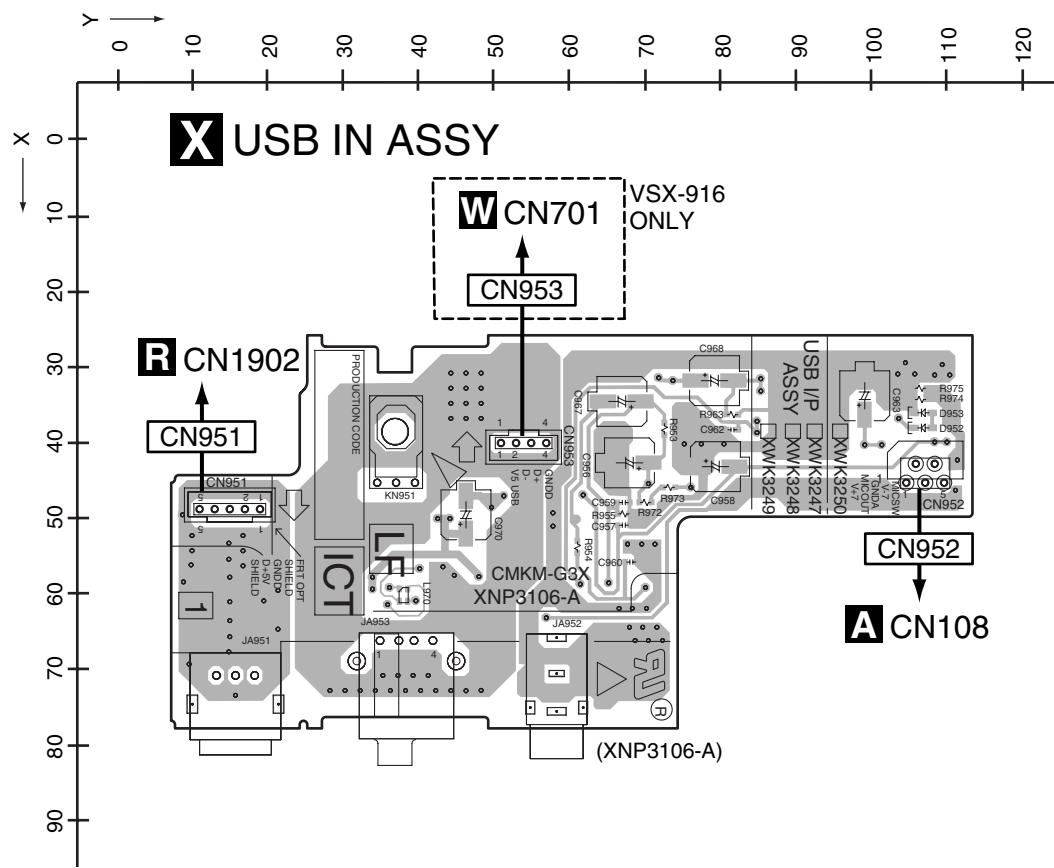

SIDE B

SIDE B

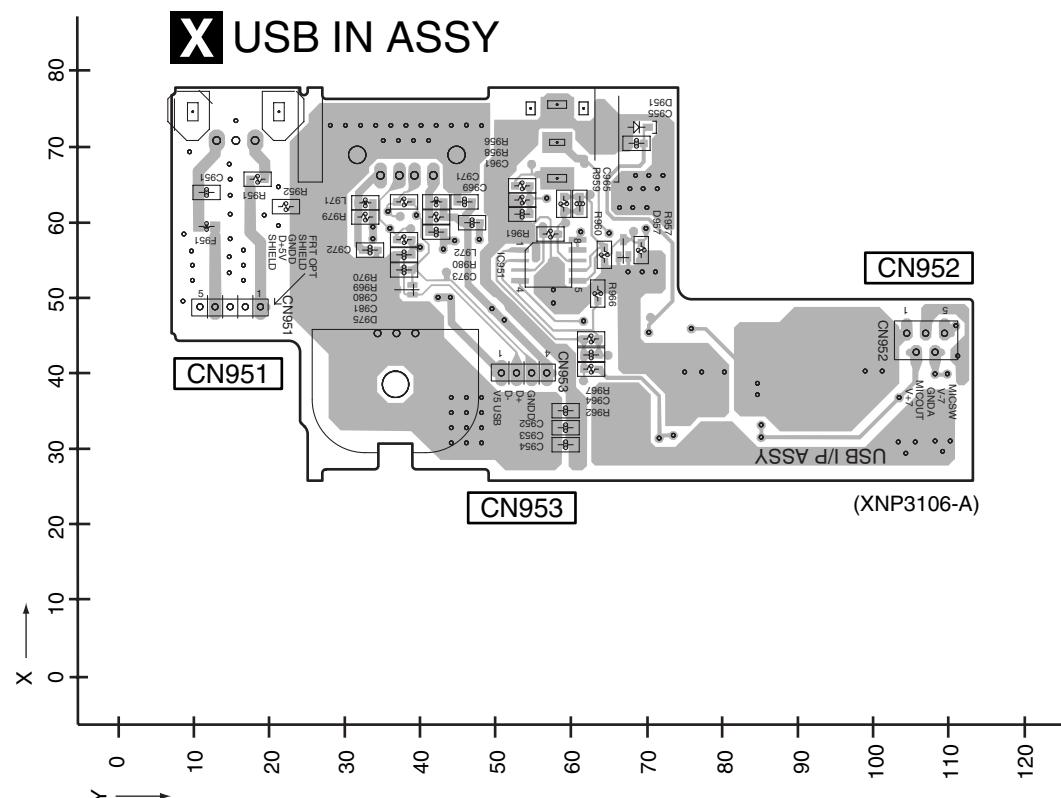

X

X

1 2 3 4
4.2 MAIN ASSY

SIDE A

A

B

C


D

E

F

C


A MAIN ASSY

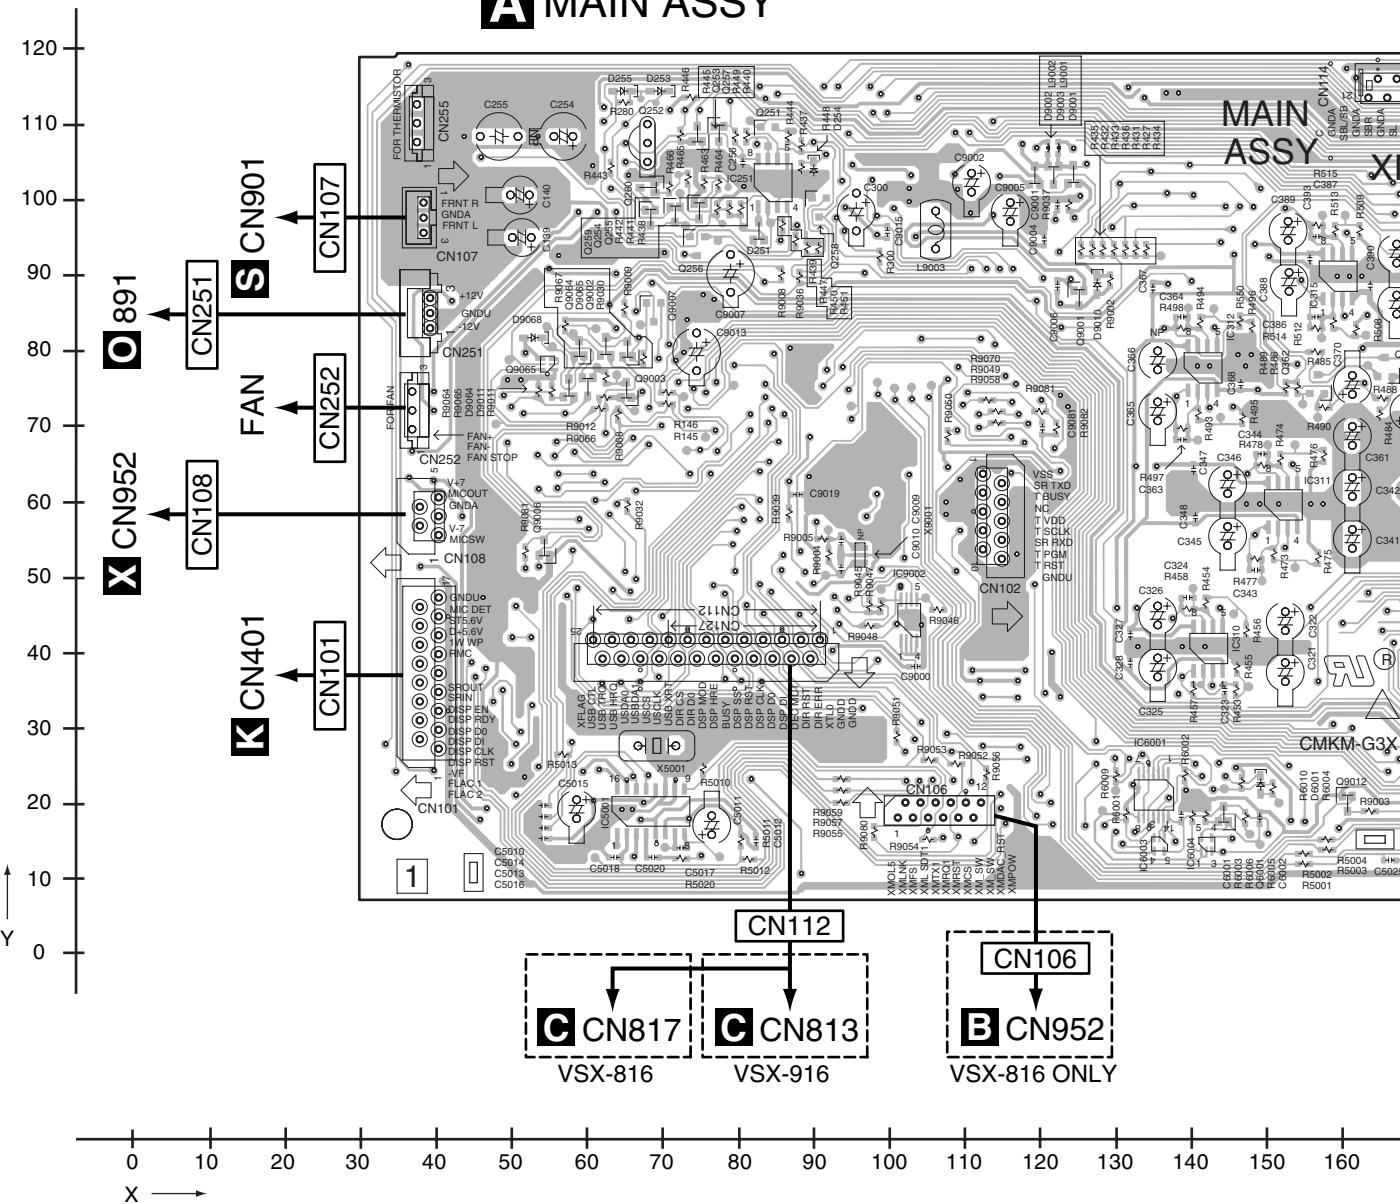

A

SIDE A

A

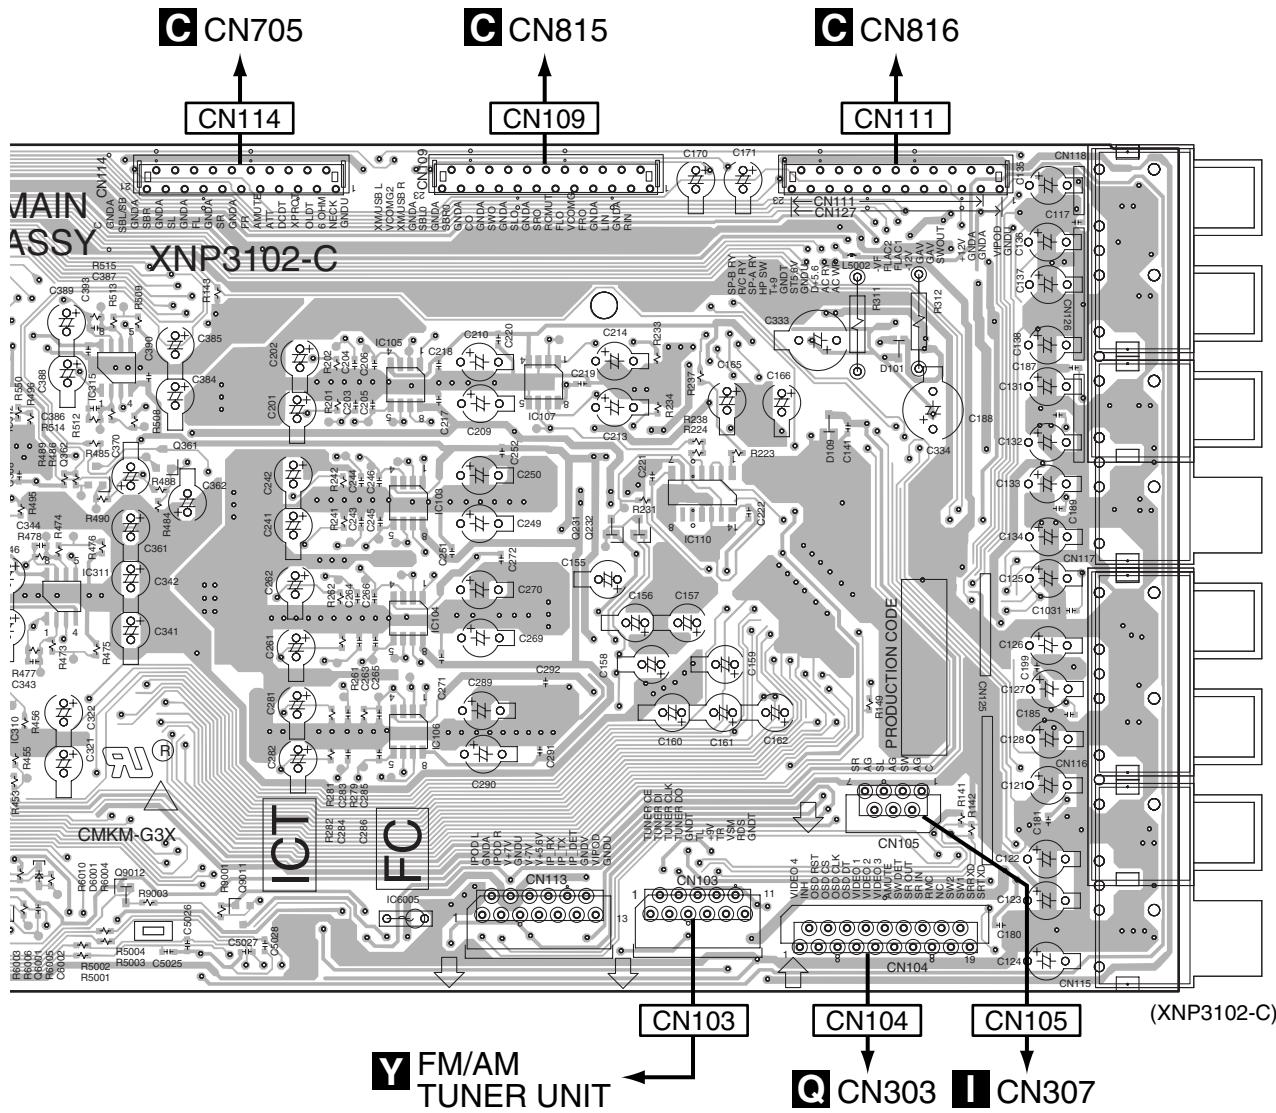

150 160 170 180 190 200 210 220 230 240 250 260 270 280 290 300 310 320

B

C

D

E

F

A

SIDE B

A


B

C

D

E

F

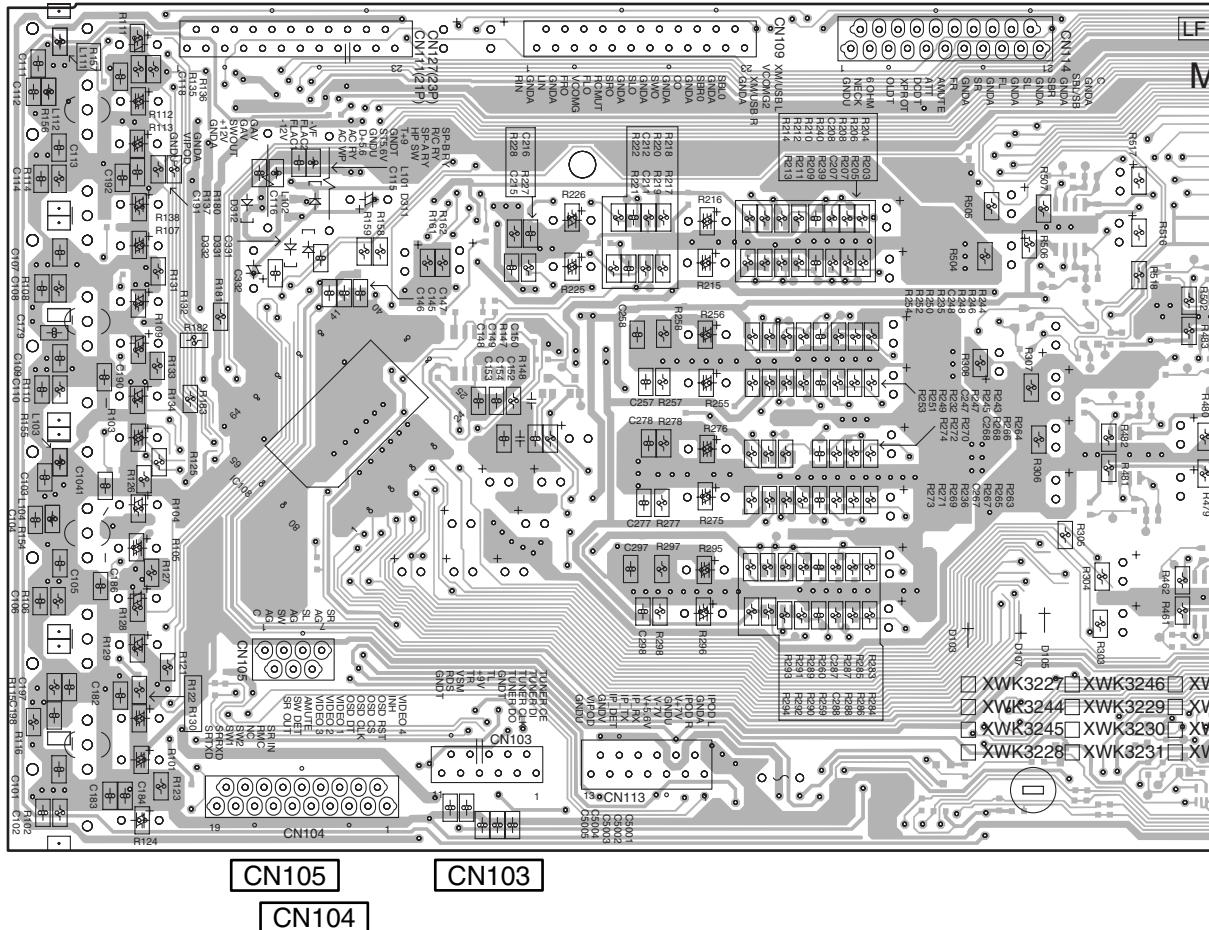
A MAIN ASSY**CN111****CN109****CN114**

300 290 280 270 260 250 240 230 220 210 200 190 180 170 160 150 140

A

SIDE B

A

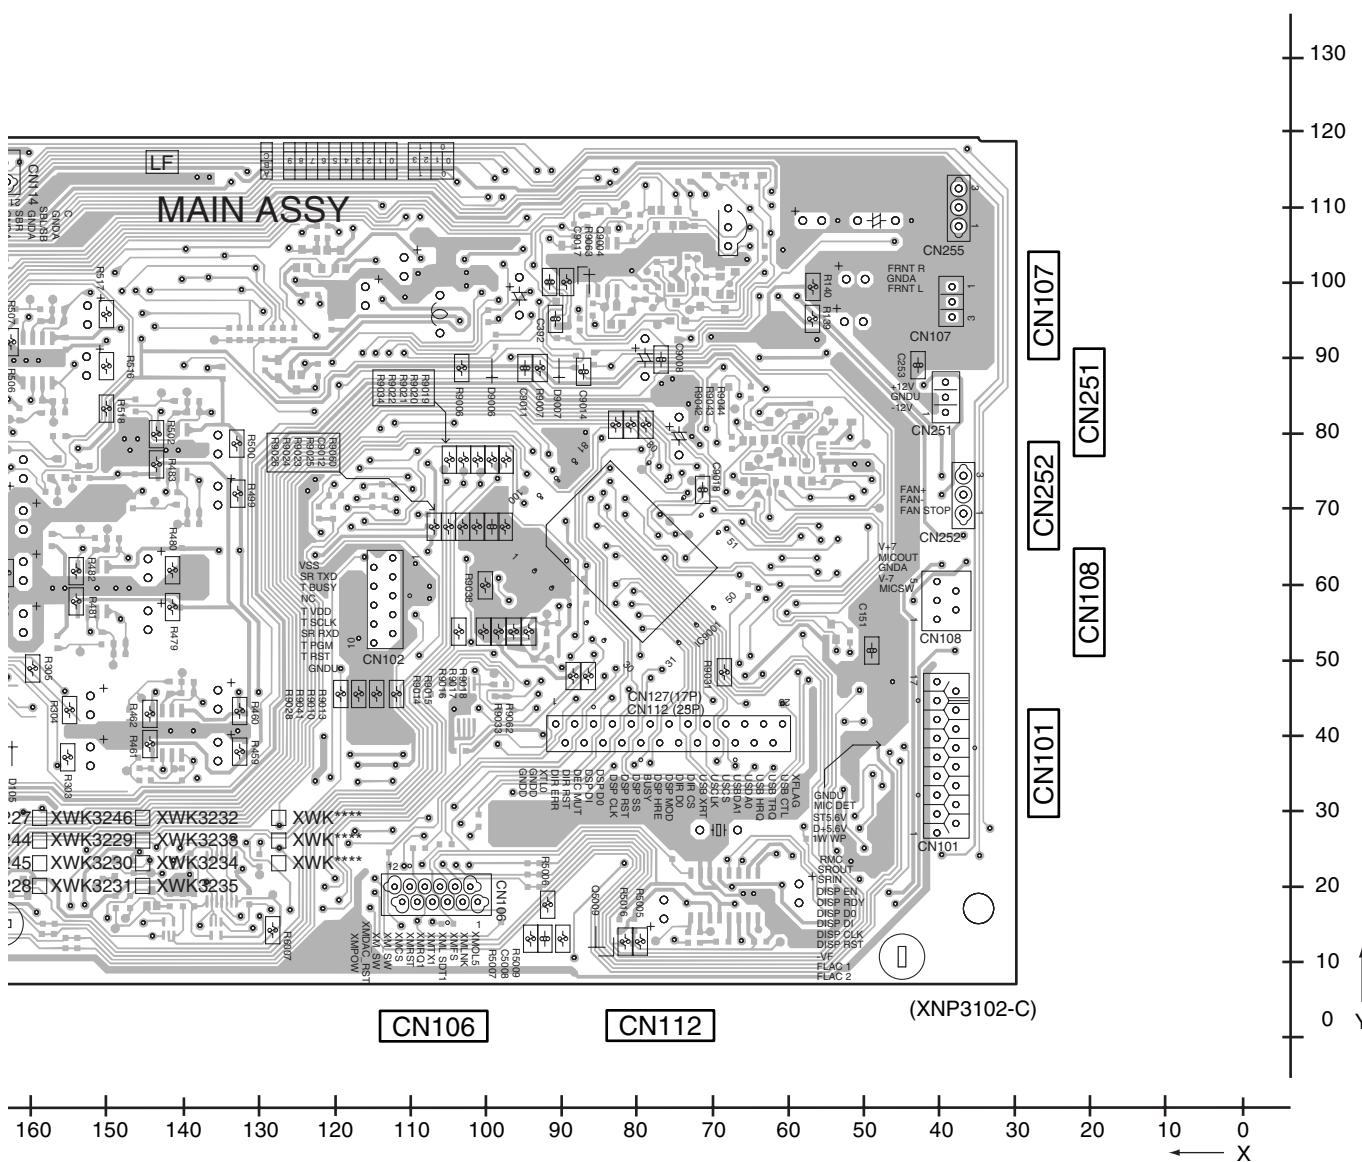

B

C

D

E

F

A

4.3 DSP ASSY (FOR VSX-916)


SIDE A

A

A vertical scale with numerical markings at intervals of 10, ranging from 0 at the bottom to 80 at the top. The scale is marked with horizontal grid lines extending across the page.

Value
0
10
20
30
40
50
60
70
80

B DSP ASSY

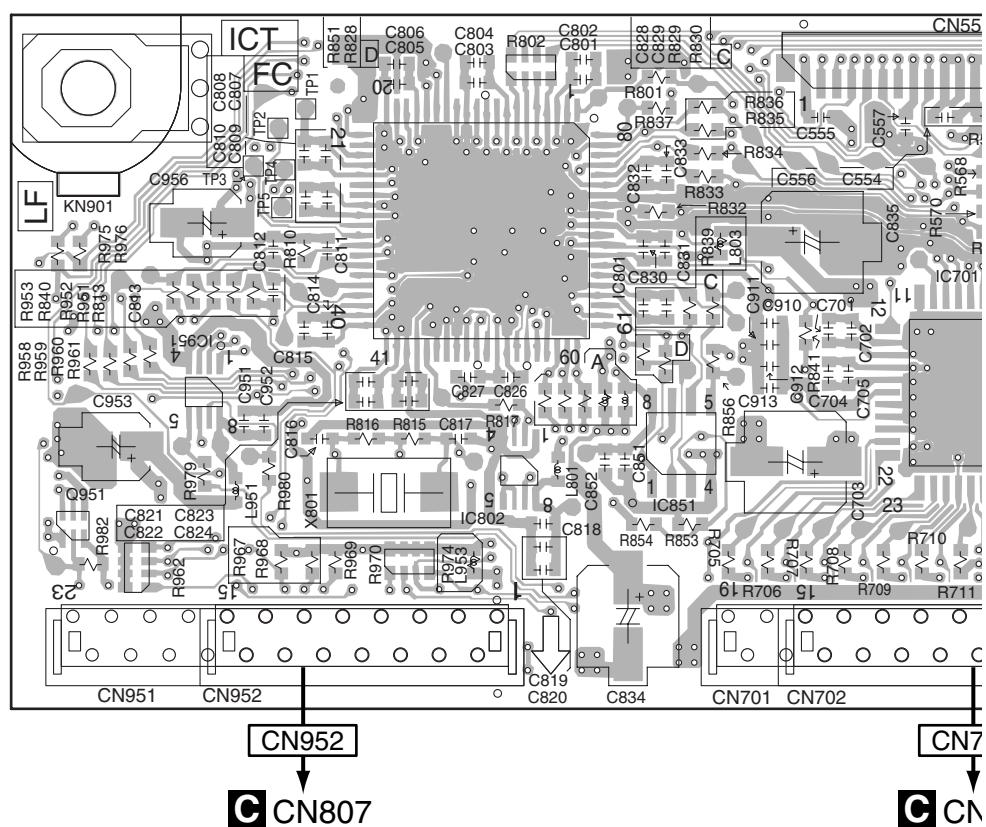


C CN807

CCN

B

SIDE A

A

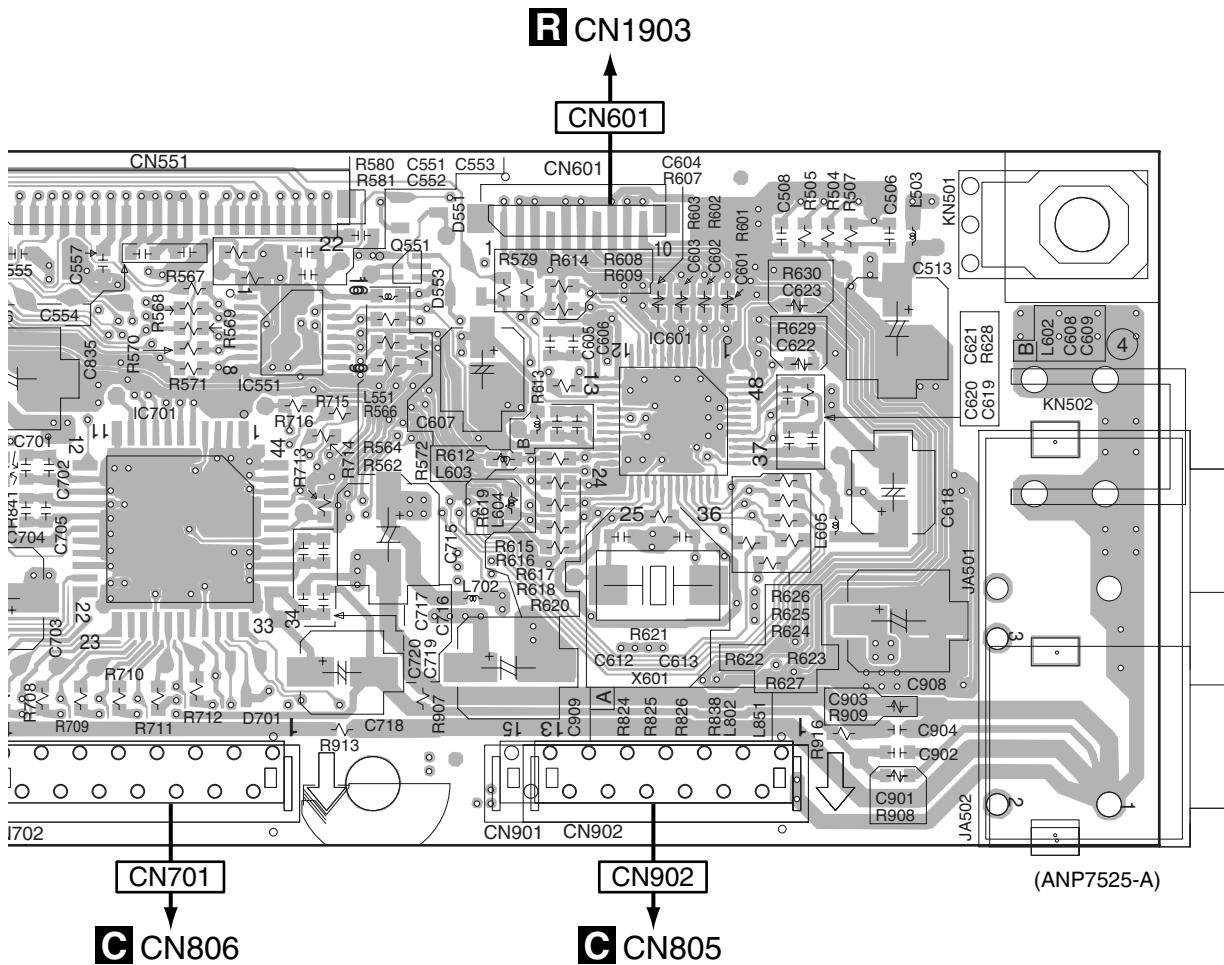**B**

53

F

E

D

C


B

SIDE B

A

B DSP ASSY


B

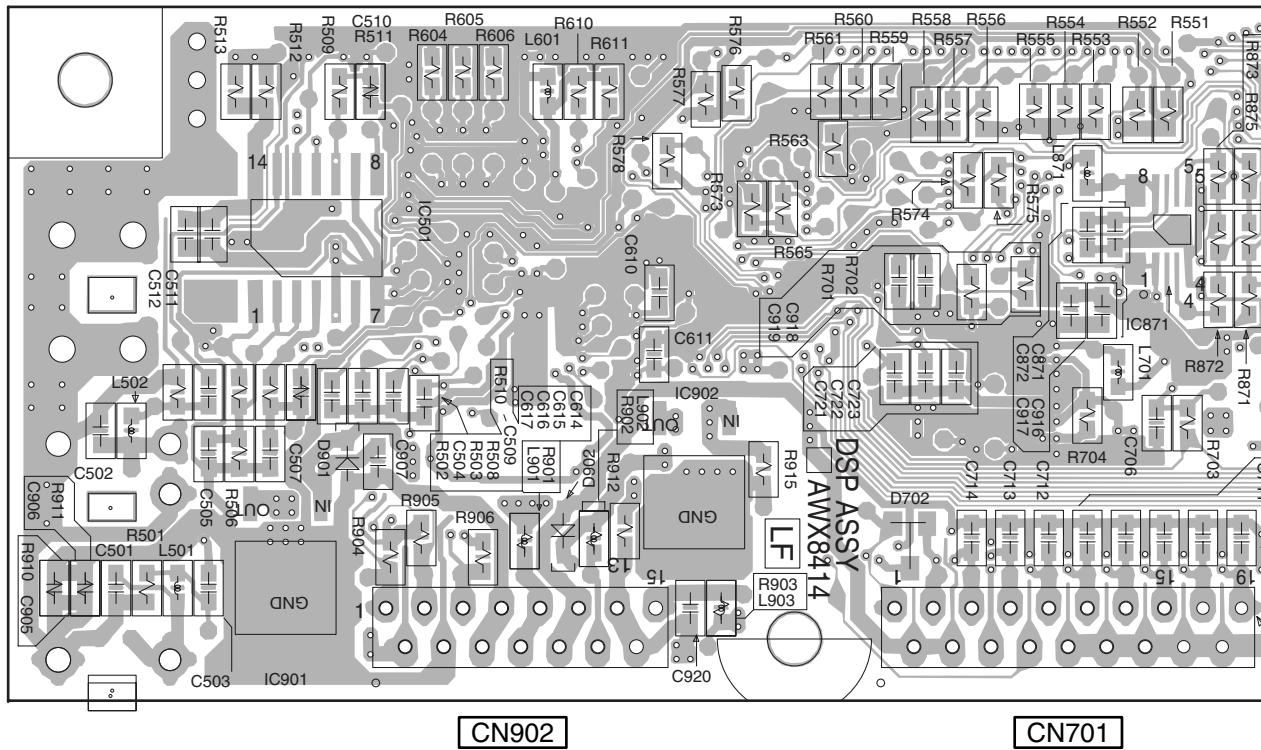

C

D

E

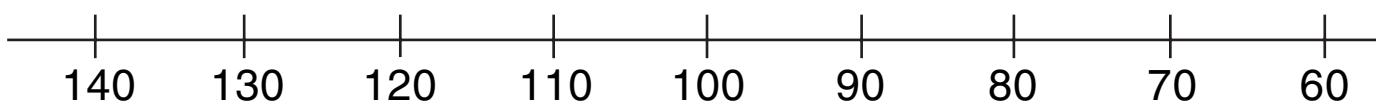


F

B

SIDE B


A

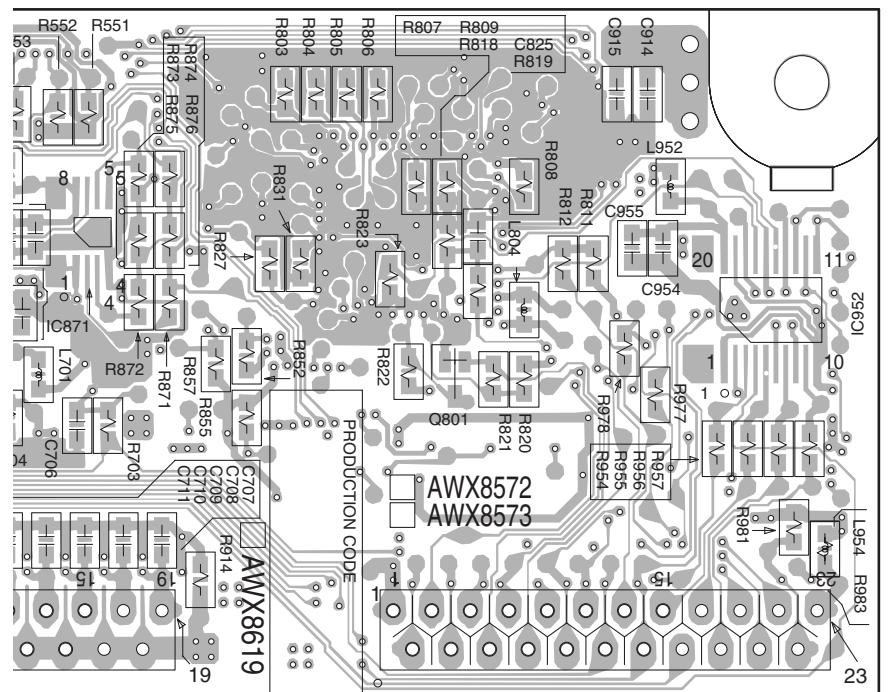

1

CN952

(ANP7525-A)

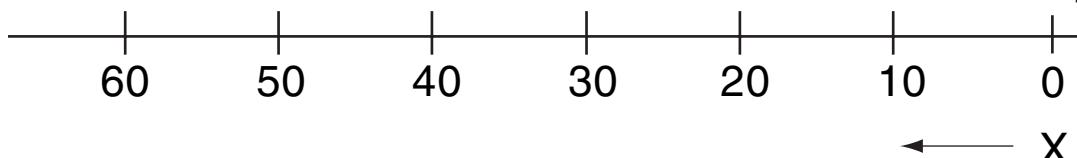

B

55

VSX-816-K

F

8

7

6

6

5


8

5

4.4 DSP ASSY (FOR VSX-816)

SIDE A


A

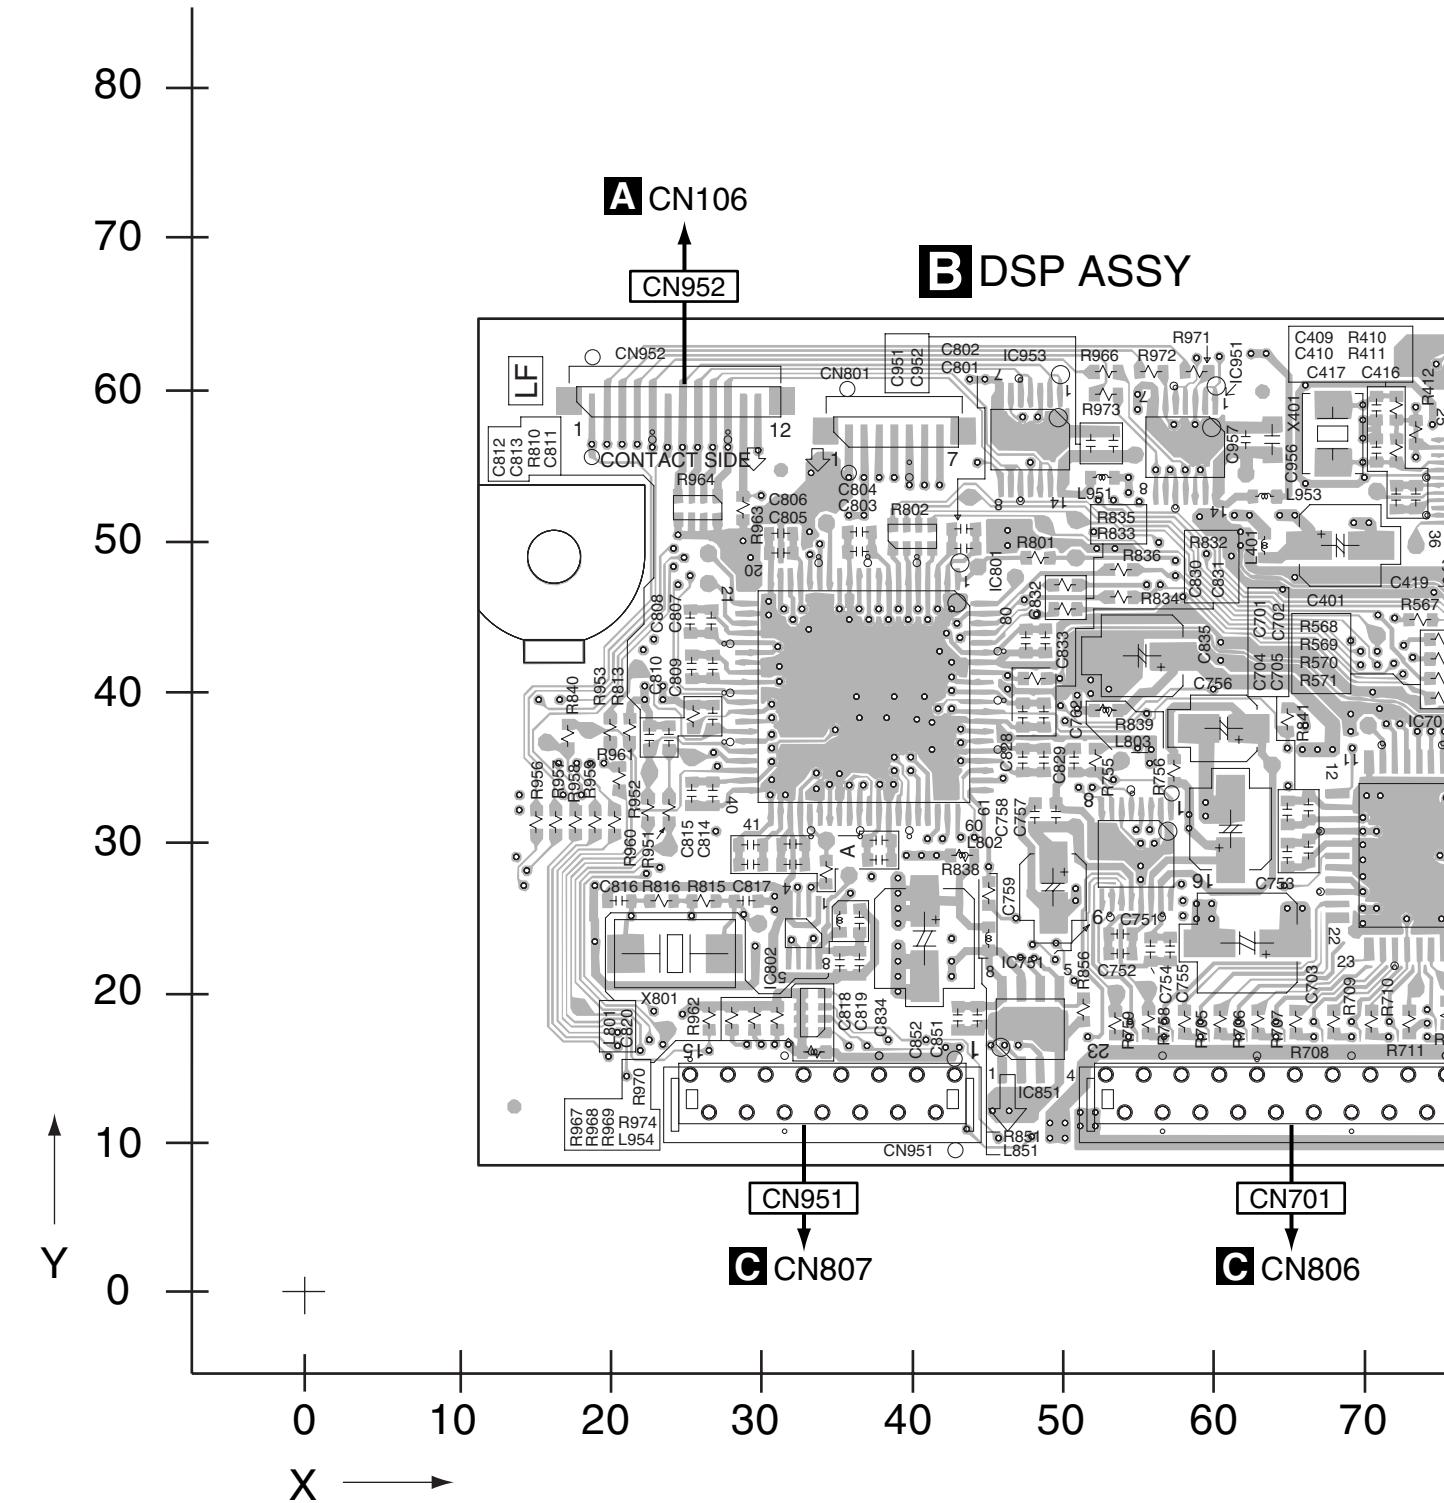

B

SIDE A

A

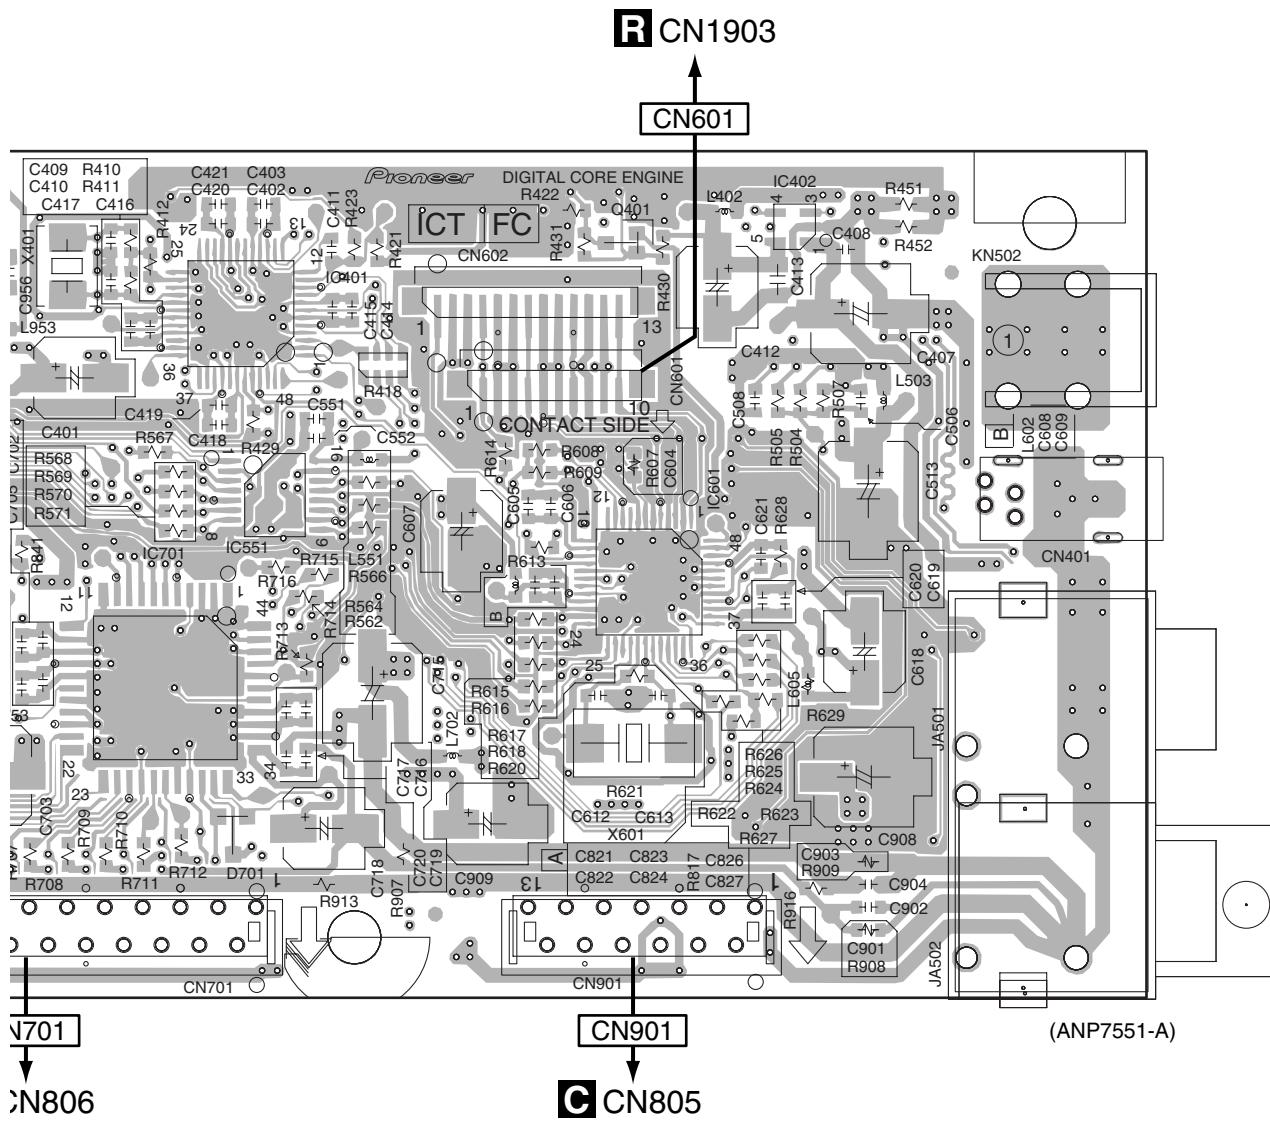

四

C

D

6

6

VSX-816-K

1

2

3

4

SIDE B

A



B

C

D

E

F

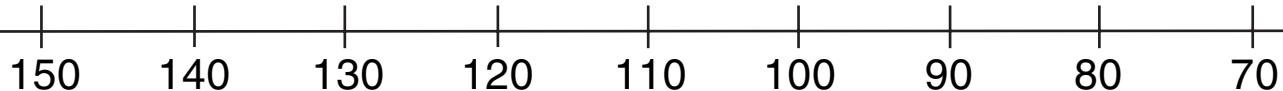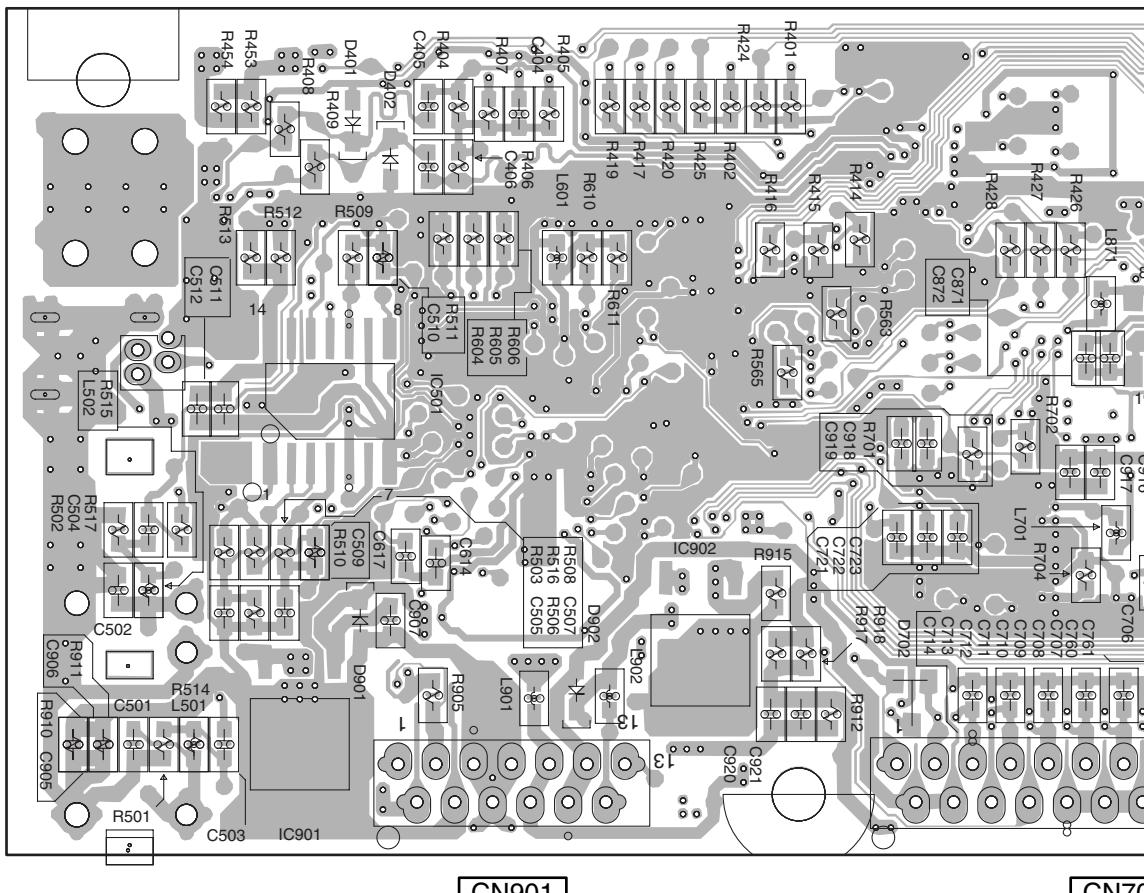B DSP ASSY**B**

58

VSX-816-K

1


2

3

4

SIDE B

A

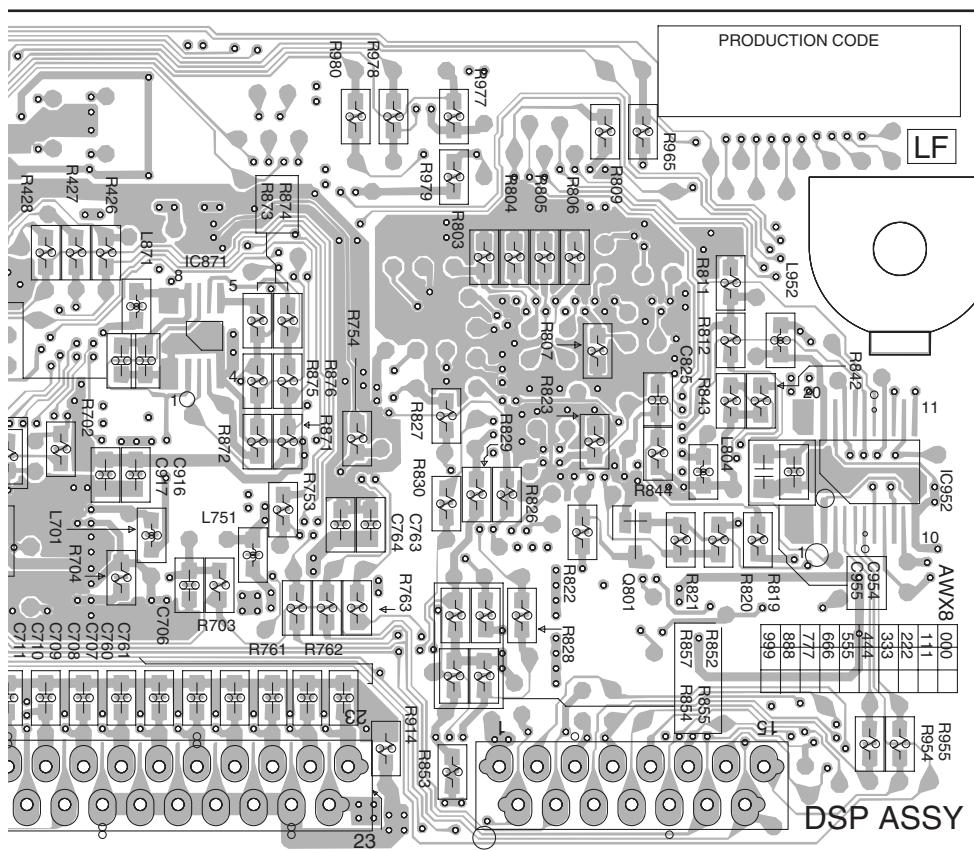

80

70

60

50

40

30

20

10

0

B

59

F

VSX-816-K

6


7

5


8

4.5 POWER PACK ASSY

SIDE A

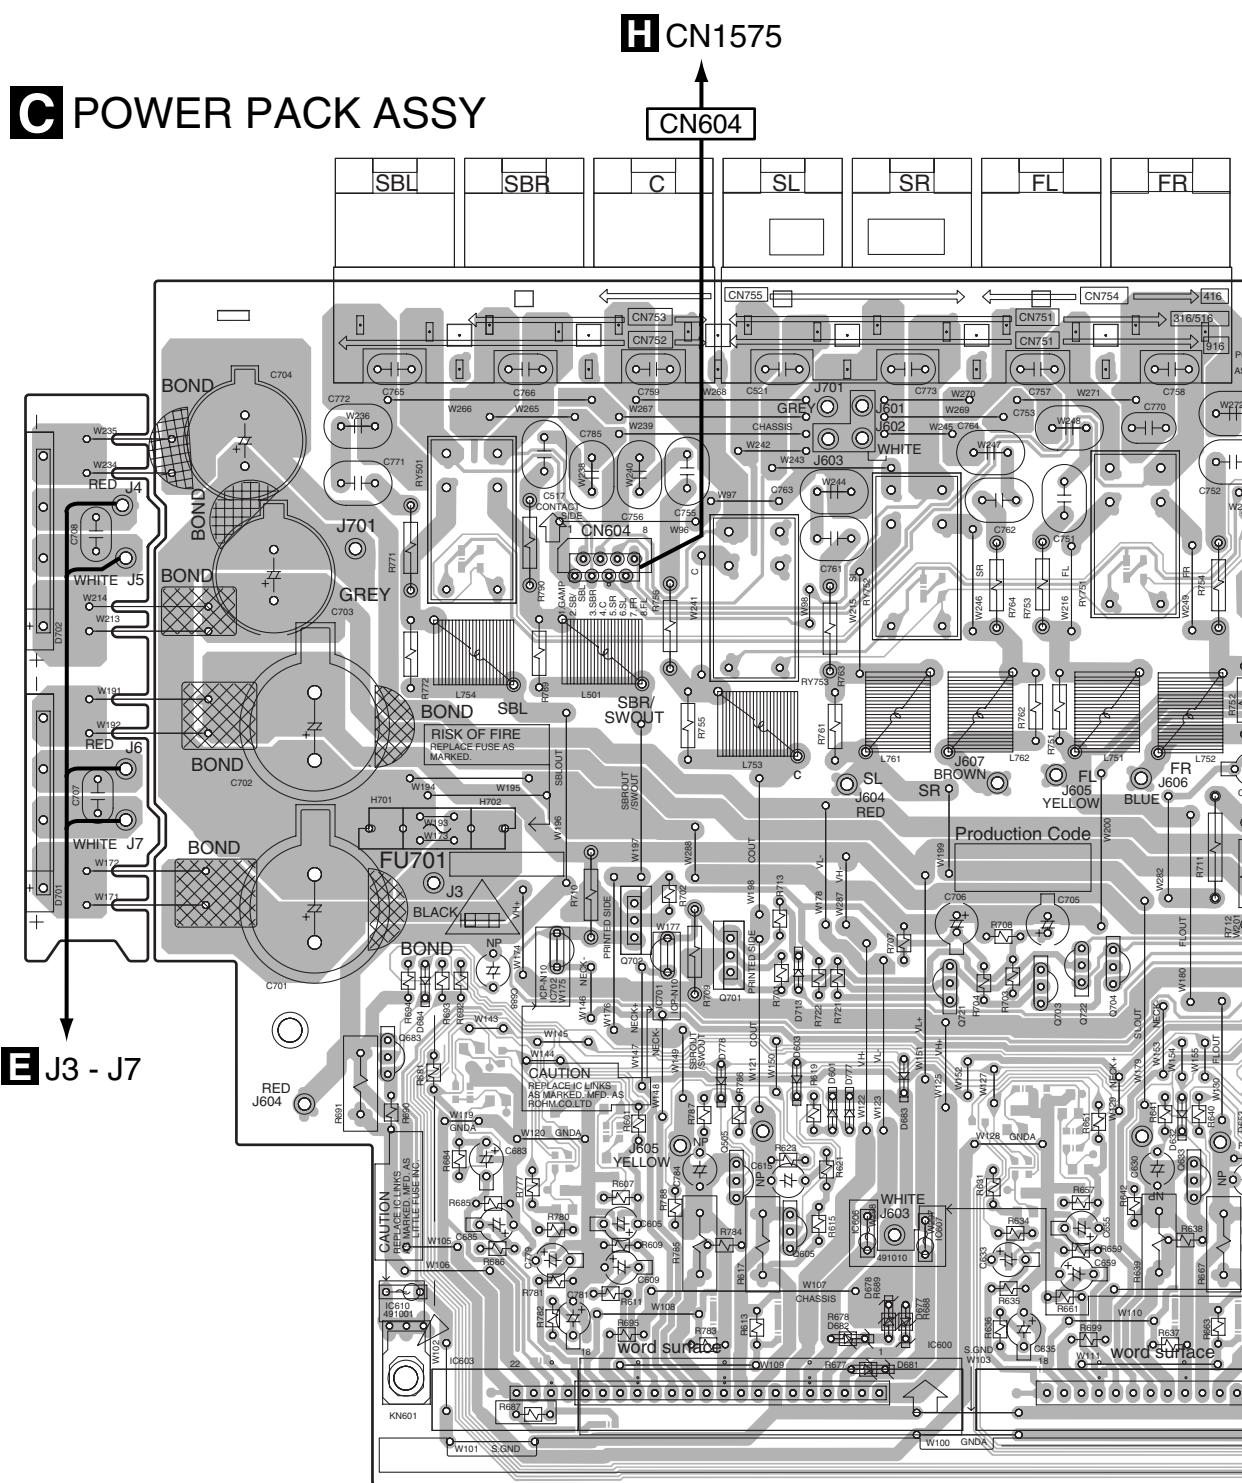

A

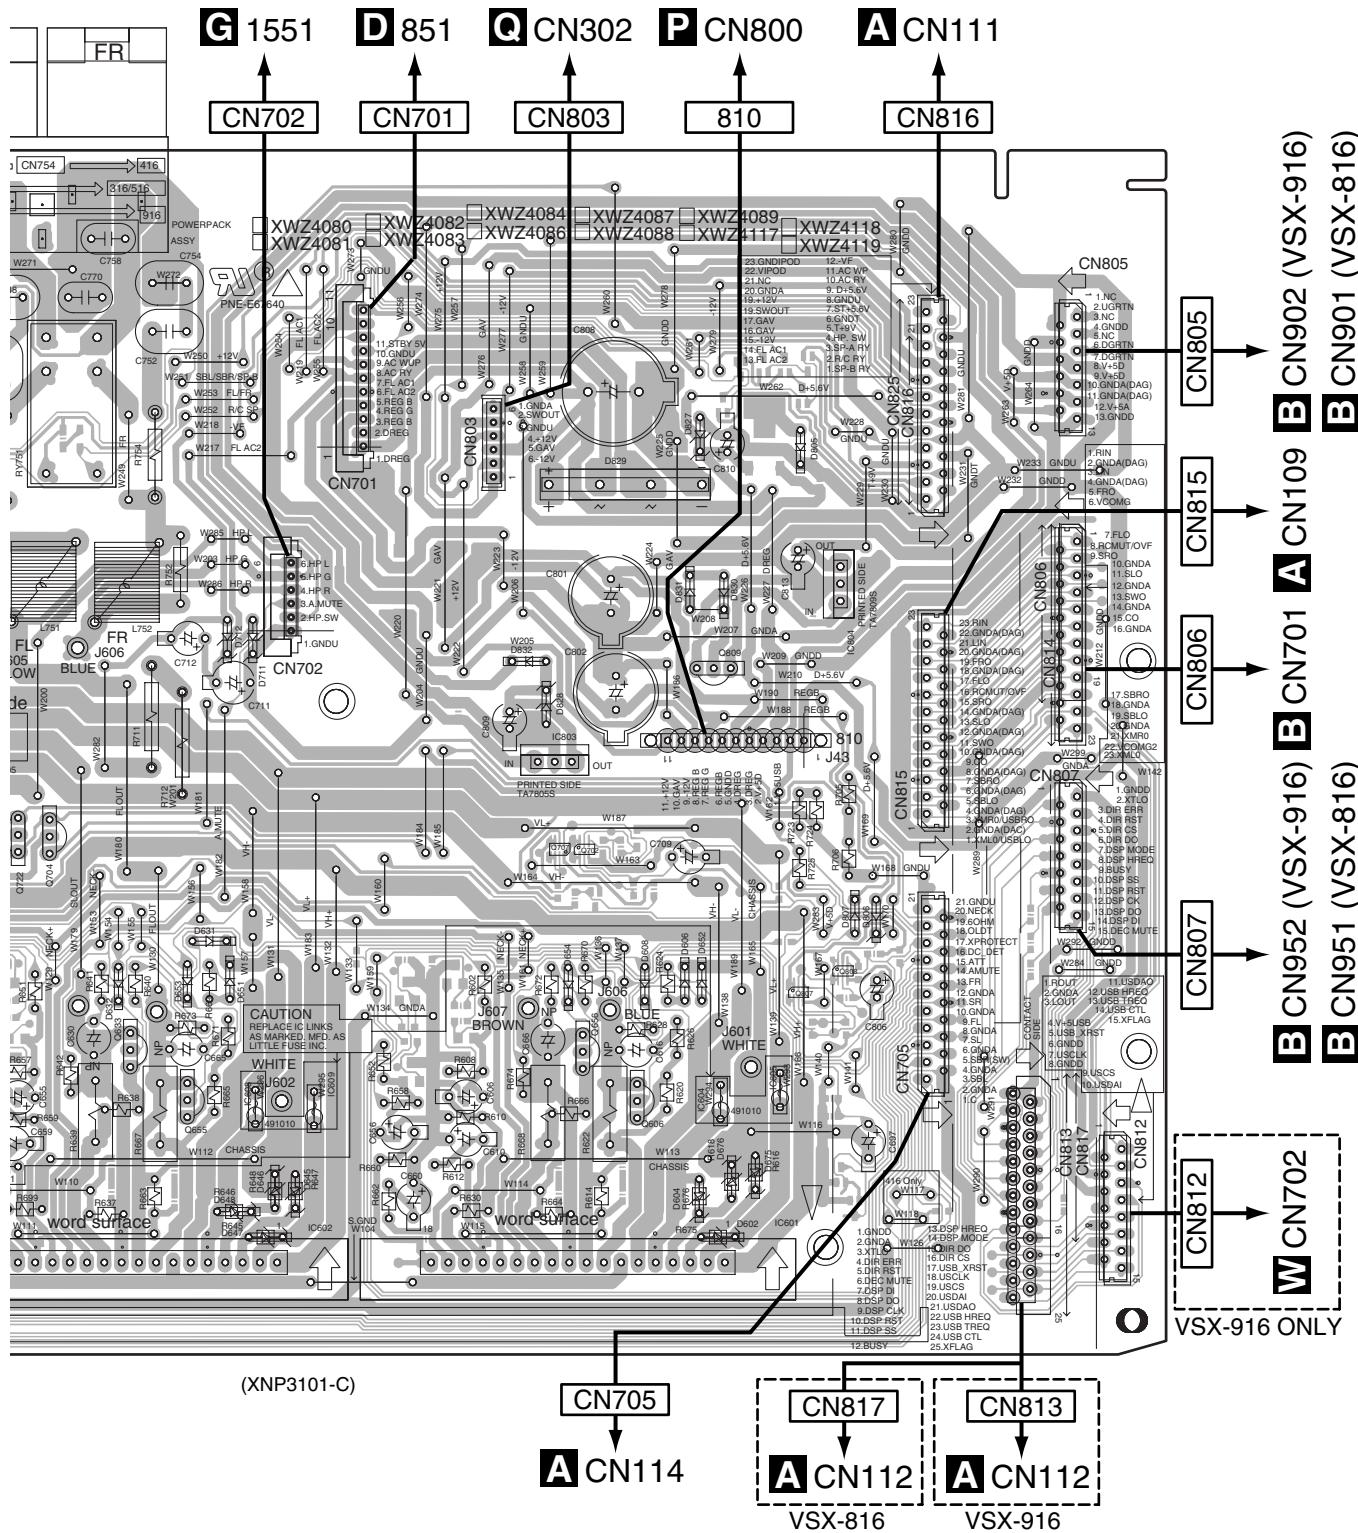

5 6 7 8

SIDE B

A


C POWER PACK ASSY

810

CN803

CN701

CN702

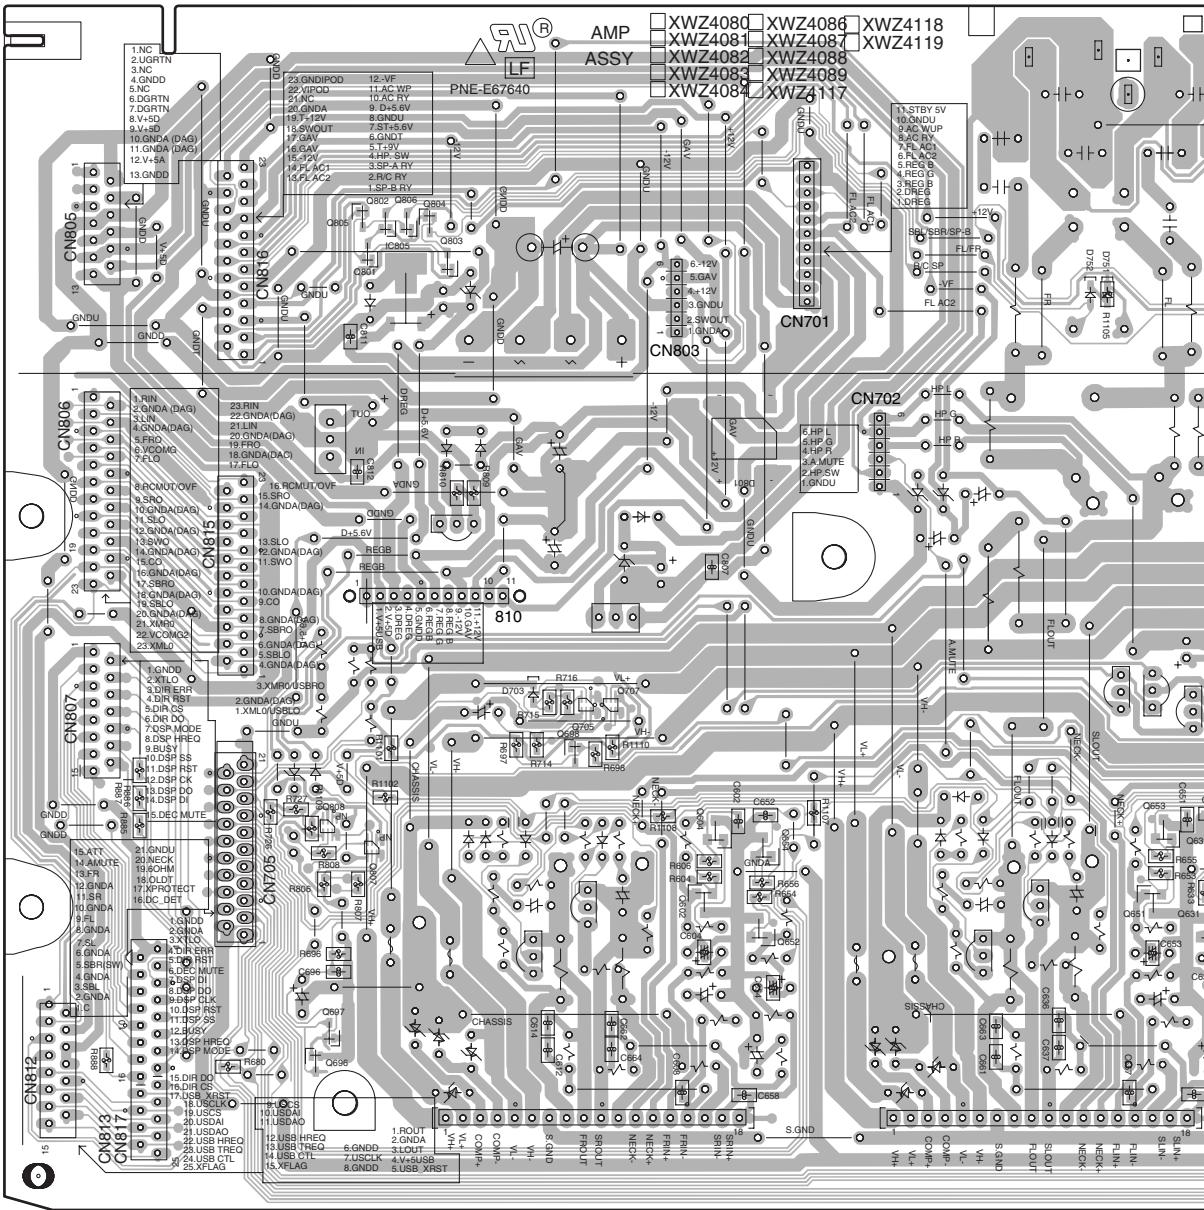

330 320 310 300 290 280 270 260 250 240 230 220 210 200 190 180 170 160

VSX-816-K

2

4


62

C

SIDE B

A

CN604

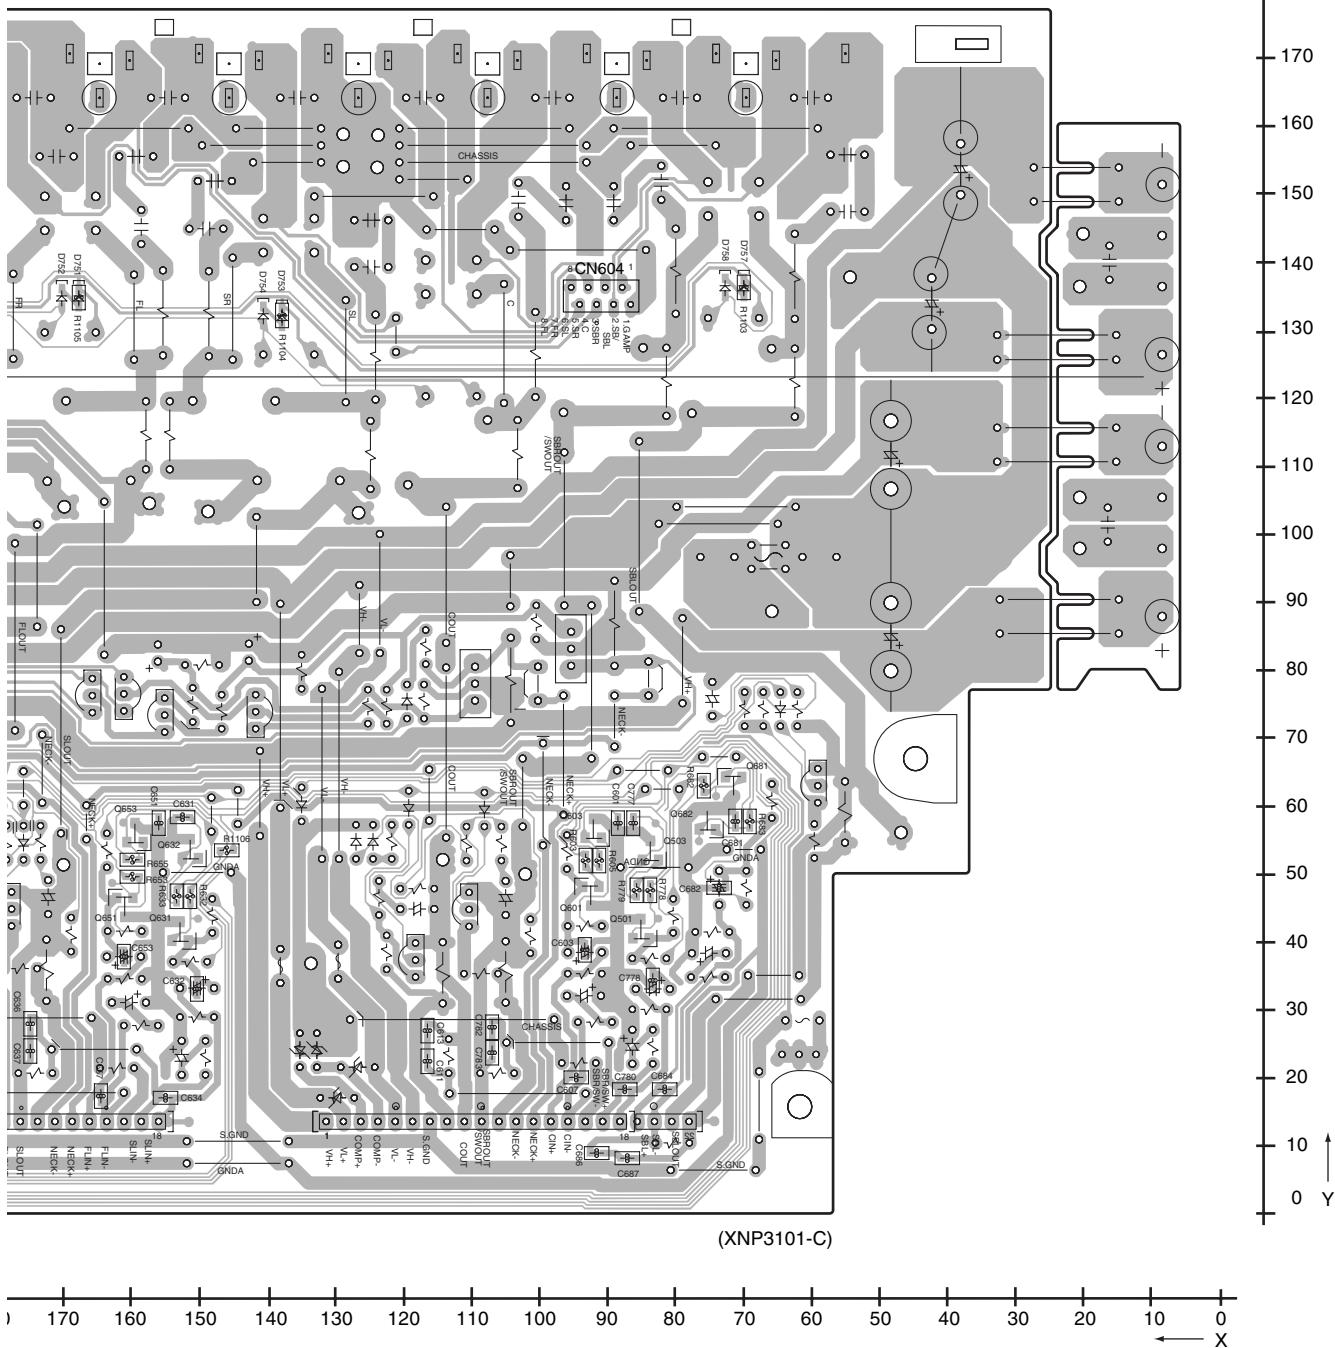

B

C

D



F





F

4.6 TRANS2, TRANS3, TRANS4 and TRANS1 ASSYS

SIDE A

SIDE A

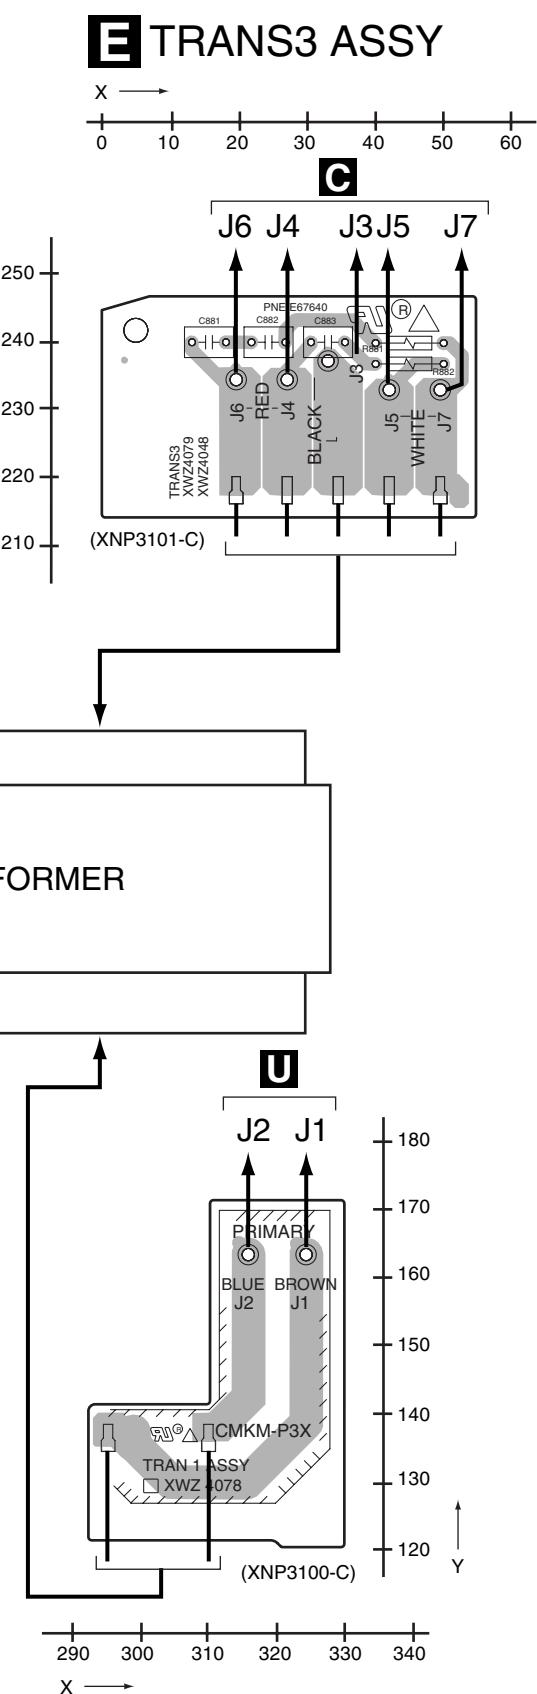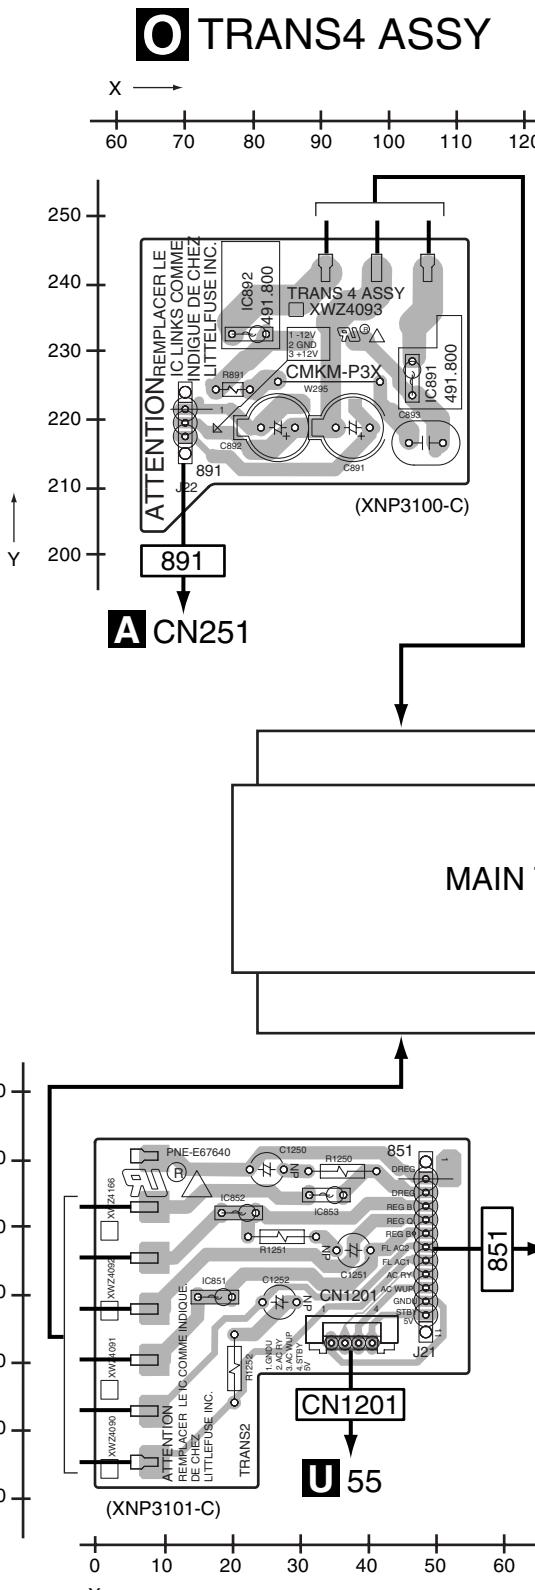

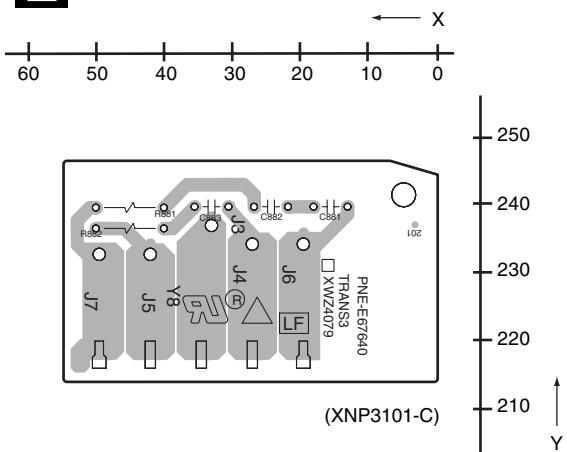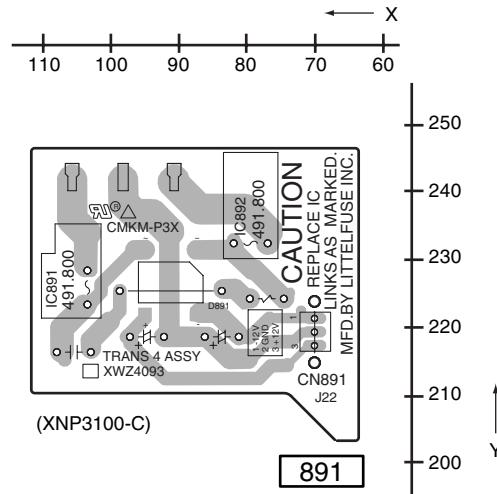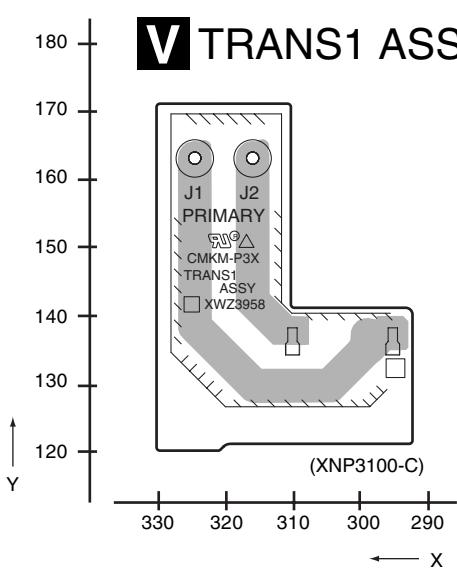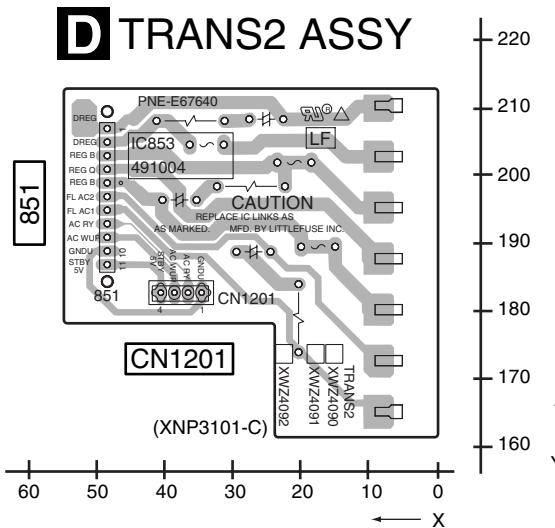
SIDE B**SIDE B****E TRANS3 ASSY****O TRANS4 ASSY****V TRANS1 ASSY****D TRANS2 ASSY****D E O V****D E O V**

SIDE A

SIDE A

A

F COMPONENT ASSY

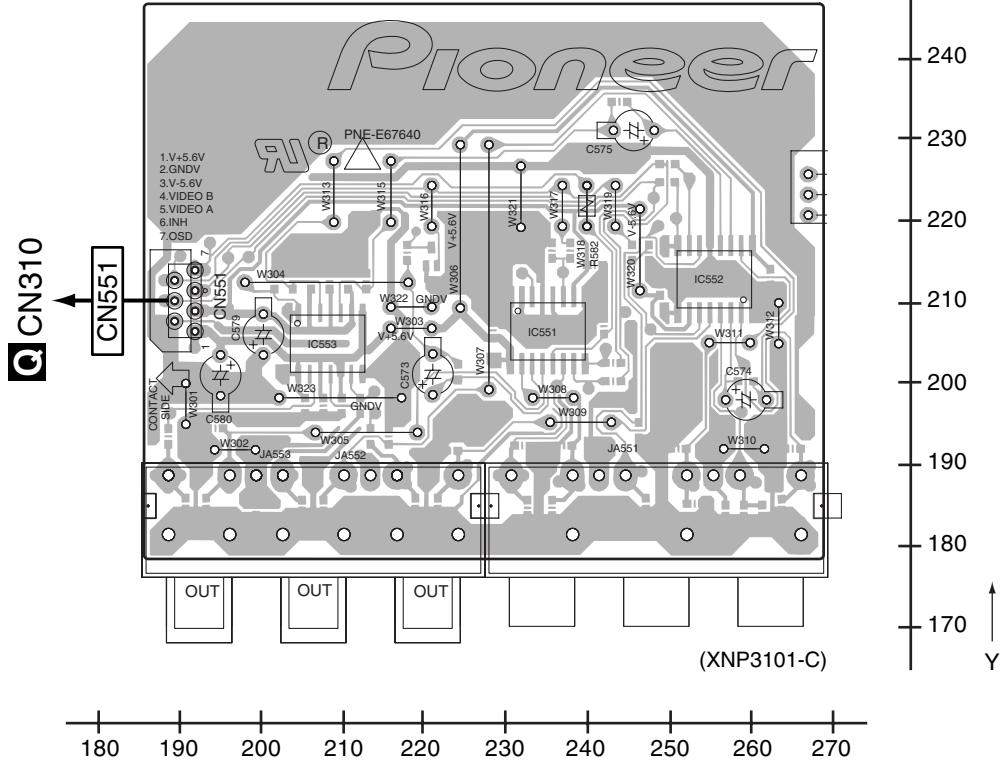

SIDE B

SIDE B


1

X →

A horizontal number line starting at 180 and ending at 270. The numbers are labeled above the line at intervals of 10: 180, 190, 200, 210, 220, 230, 240, 250, 260, and 270. There are tick marks on the line corresponding to each labeled number.

1

F COMPONENT ASSY

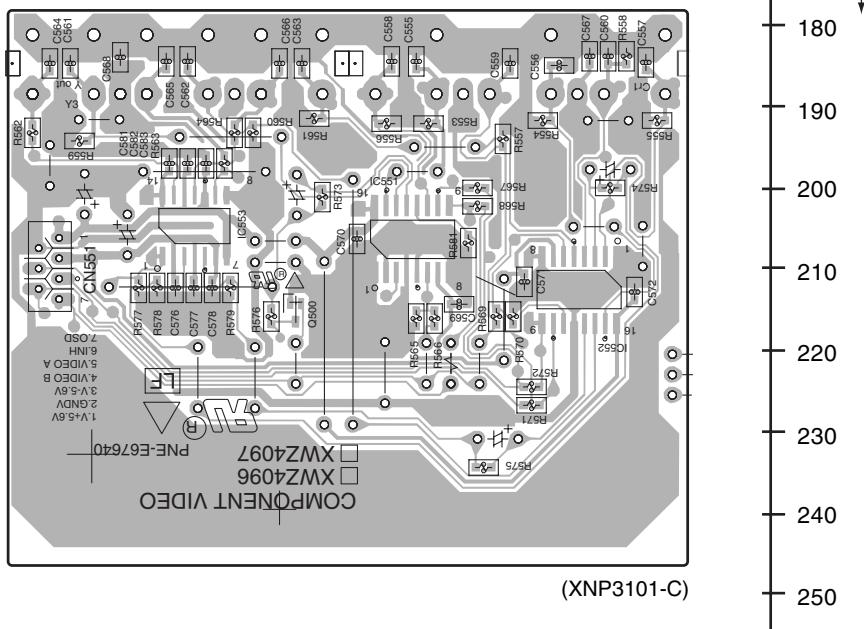

□

F

F


4.8 HEADPHONE and 5.1 CHIN ASSYS

SIDE A


SIDE A

1

G HEADPHONE ASSY

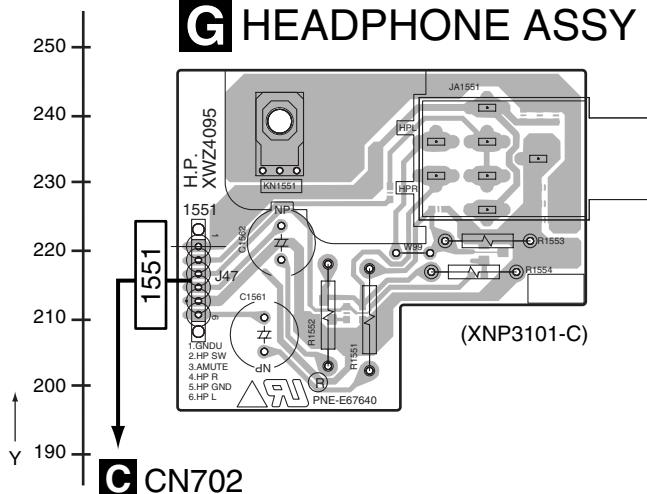

I 5.1 CHIN ASSY

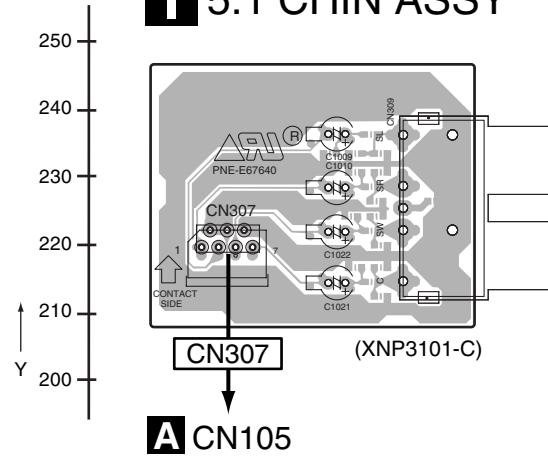

1

9


SIDE B

SIDE B

1

1

G HEADPHONE ASSY

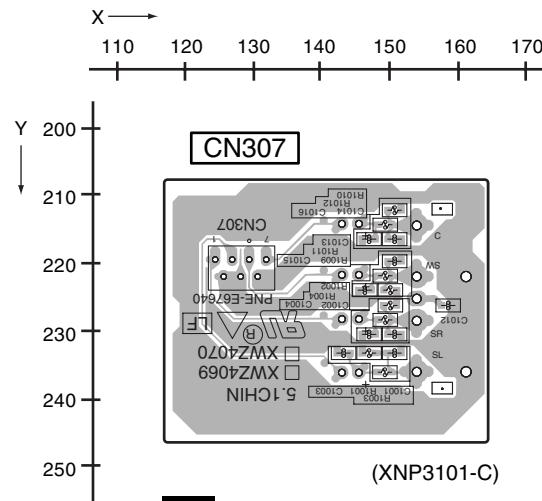

| 5.1 CHIN ASSY


G1

G I


1 2 3 4
4.9 FRONT DISPLAY, R. ENCODER and POWER KEY ASSYS

SIDE A

A

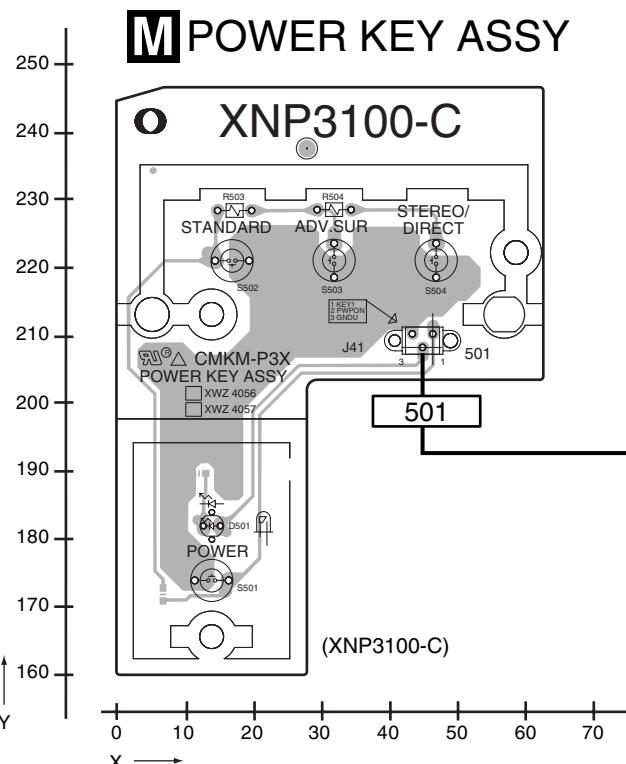

B

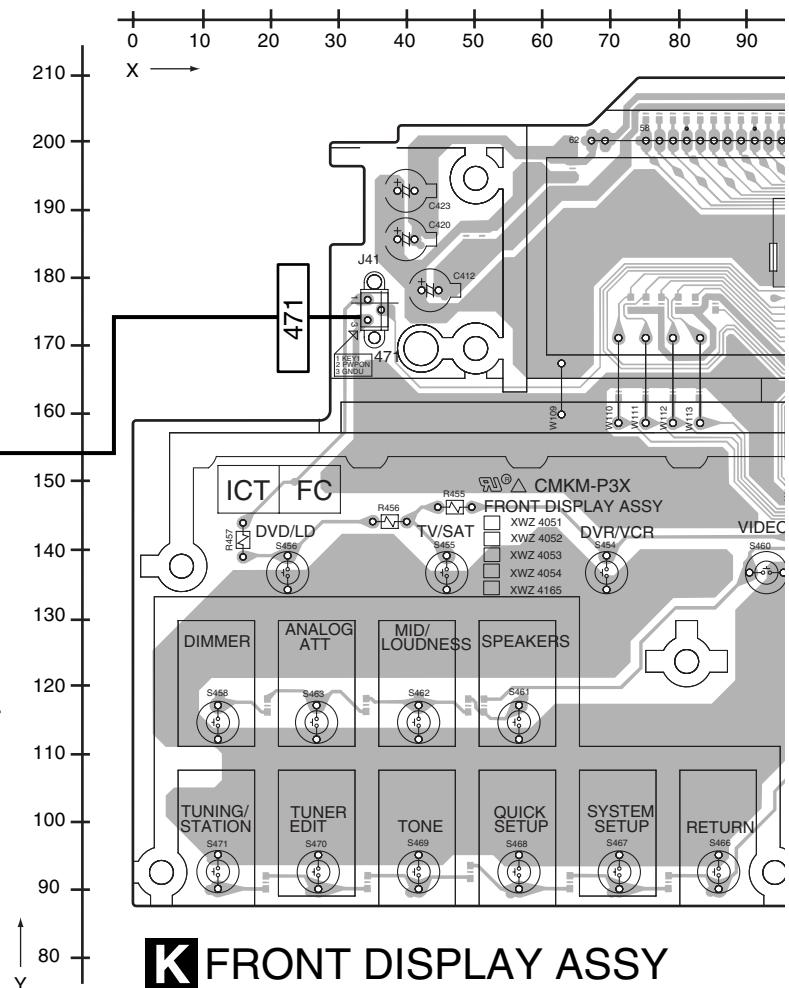

D


E

F

K M


SIDE A

0 80 90 100 110 120 130 140 150 160 170 180 190 200 210 220 230 240 250 260

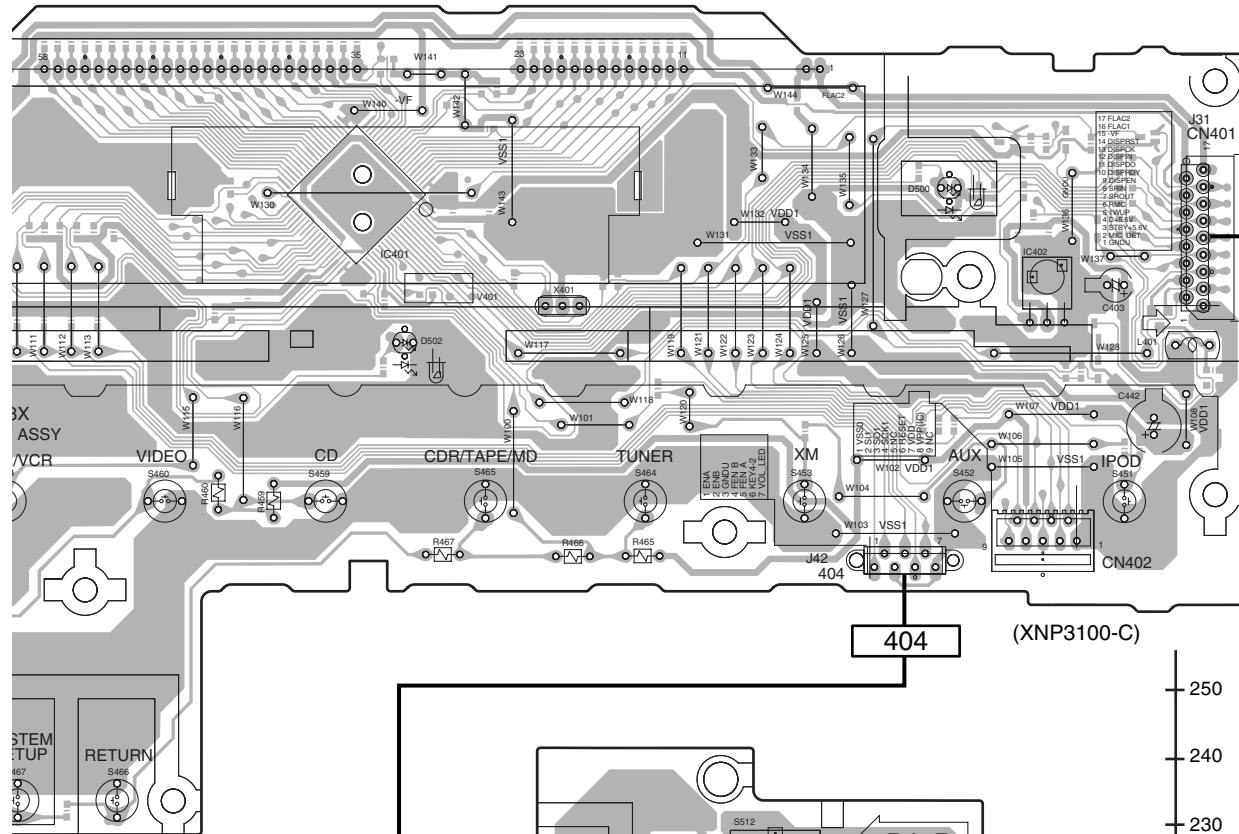

A CN101

SY

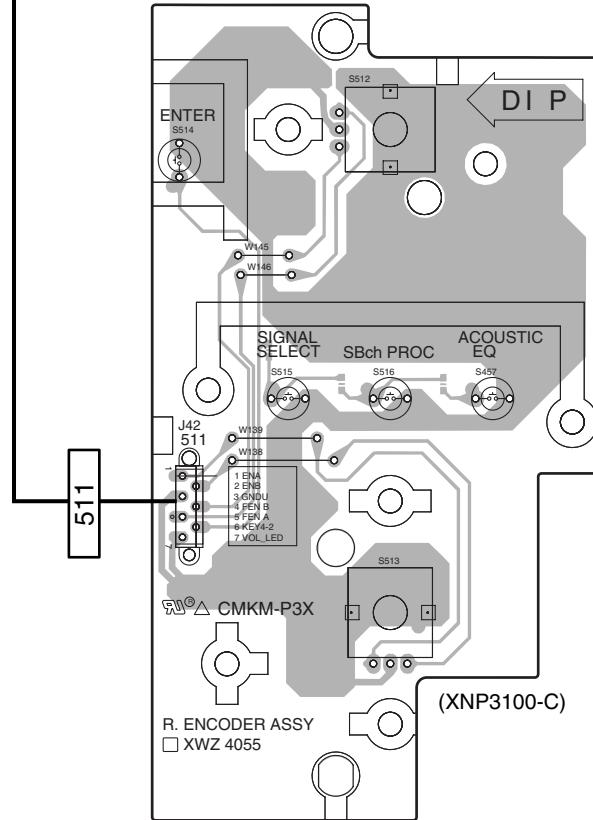

L R. ENCODER ASSY

250 260 270 280 290 300 310 320 330 340
X →

250
240
230
220
210
200
190
180
170
160
150
140
130
120
Y ↑

K L

SIDE B

A


2

3

4

K FRONT DISPLAY ASSY

CN401

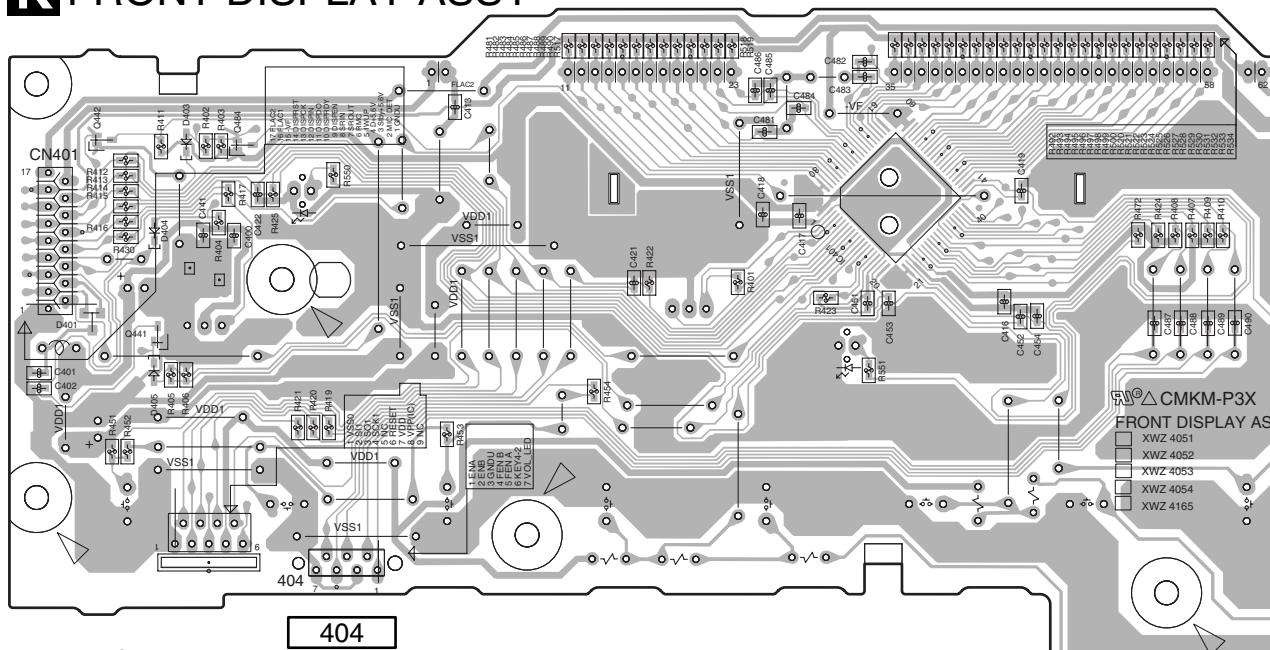

404

B

250

240

230

220

210

200

190

180

170

160

150

140

130

120

Y

L R. ENCODER ASSY

511

F

(XNP3100-C)

2

3

4

VSX-816-K


K L

70


1

3

4

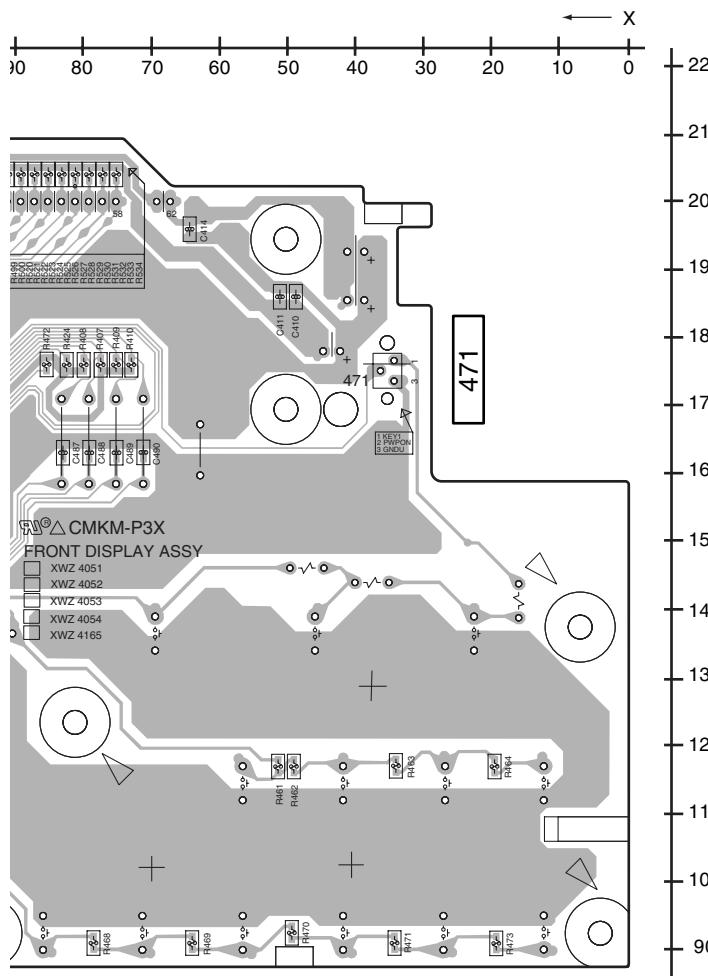

M POWER KEY ASSY

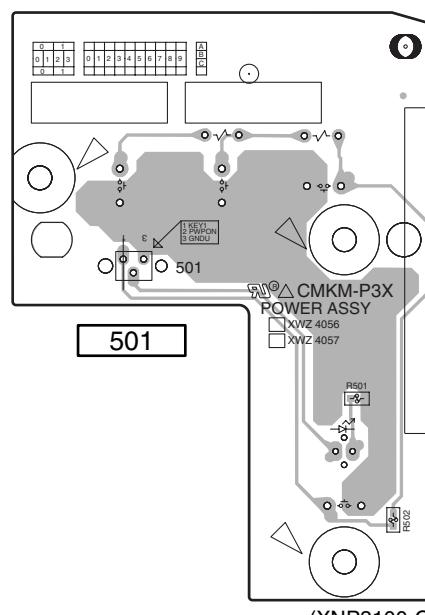

SIDE B

A

K M

F

E



G

H

4.10 S. VIDEO and FRONT VIDEO ASSYS

SIDE A

SIDE A

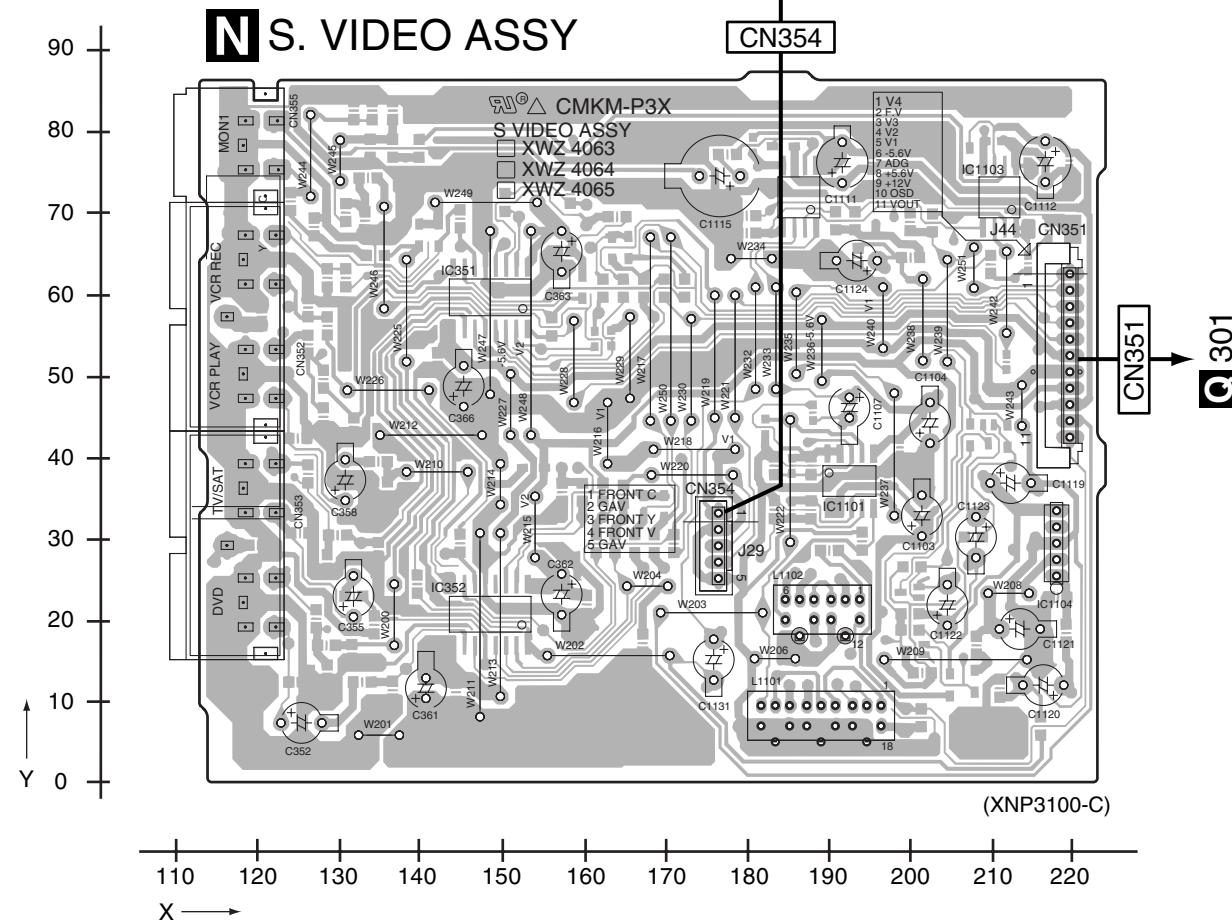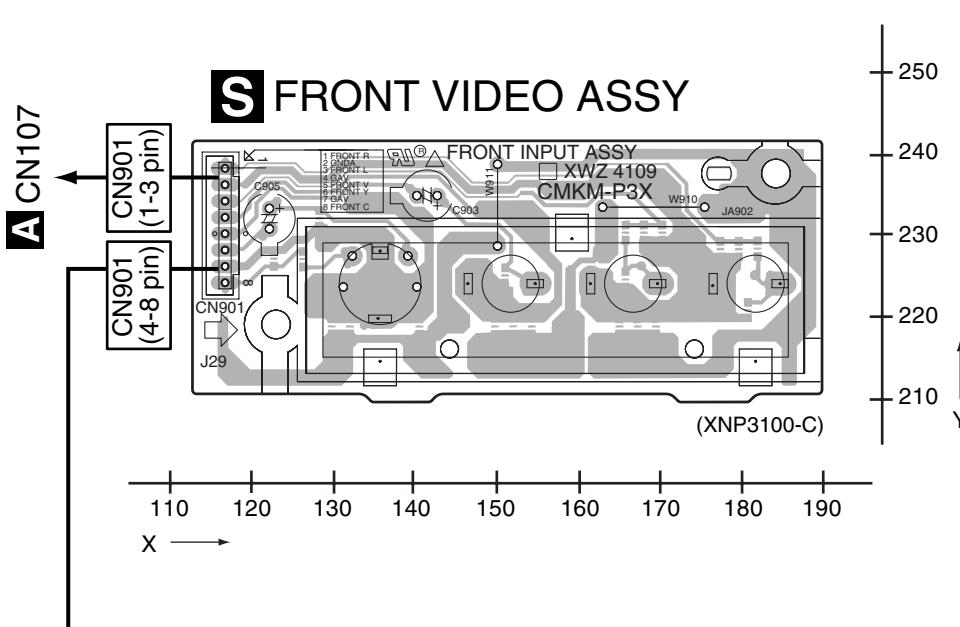


S N


S N

SIDE B**SIDE B**

A

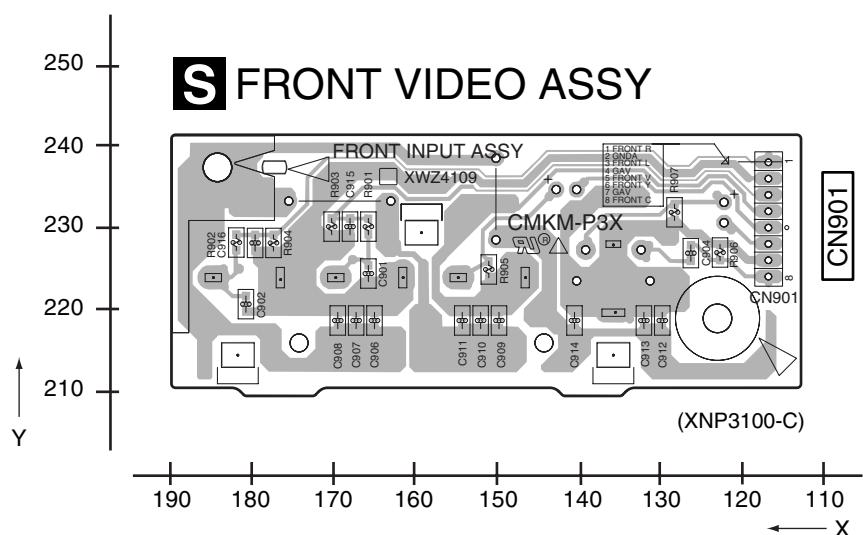

B


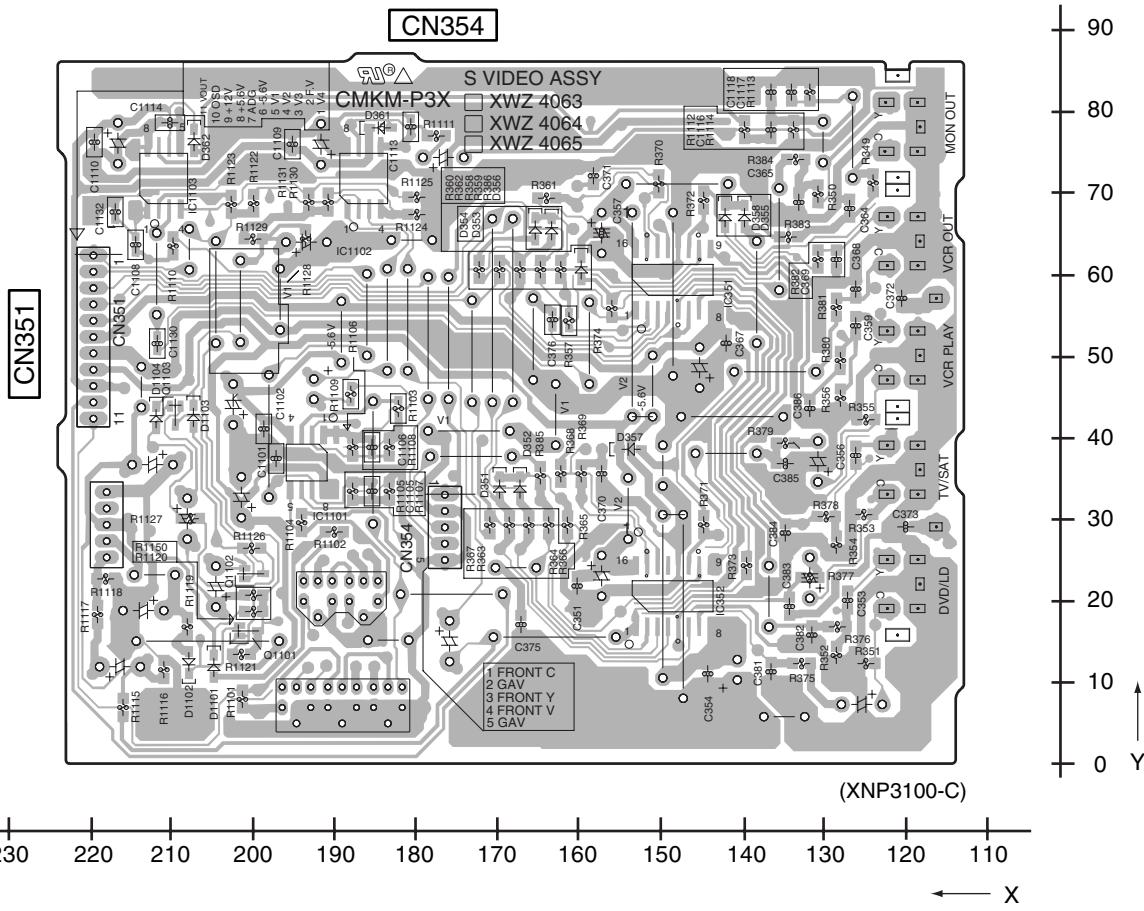
N S. VIDEO ASSY**S N****S N**

A

C CN604

CN1575

H PRE-OUT ASSY

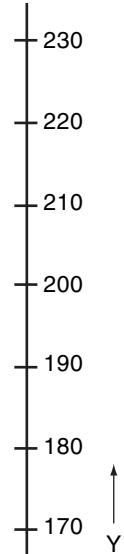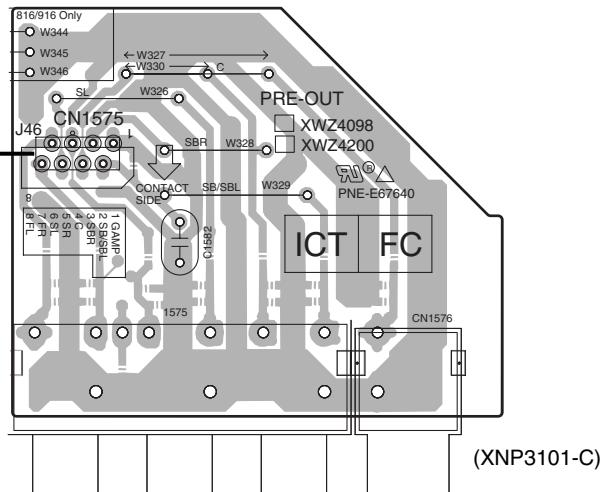

B

C

SIDE B

SIDE B

1

□


F

X →
270

27.5 280 285 300 310 320 330


CN1575

H PRE-OUT ASSY

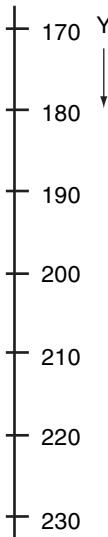

■ 4.12 REGULATOR and DIGITAL IN ASSYS


SIDE A

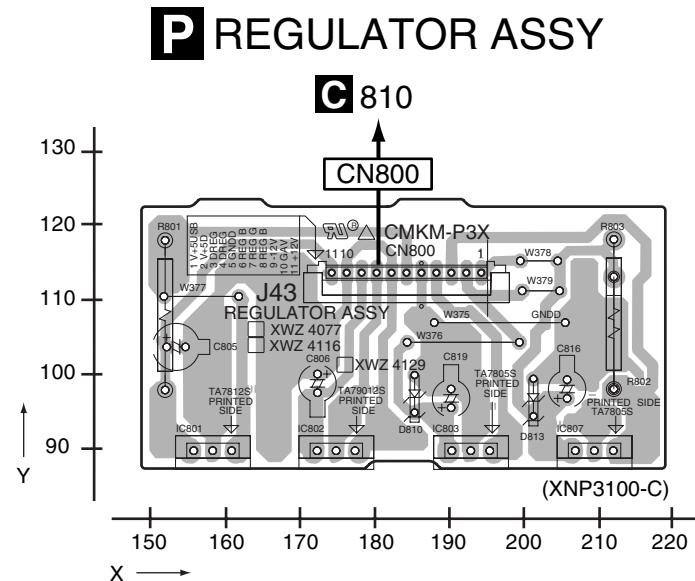

SIDE A


R DIGITAL IN ASSY

X CN951 B CN601

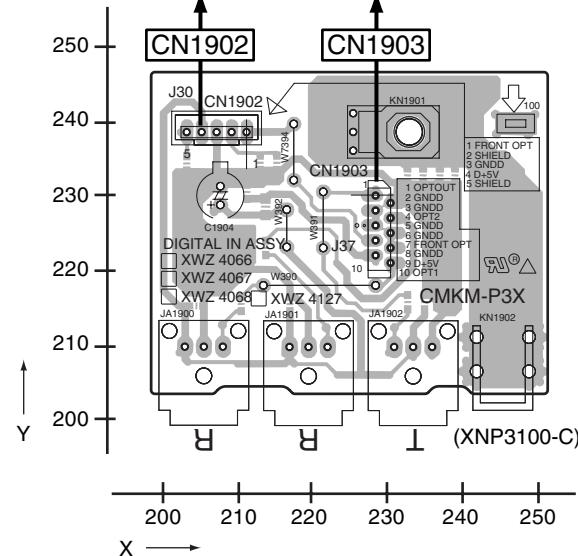


SIDE B

P REGULATOR ASSY

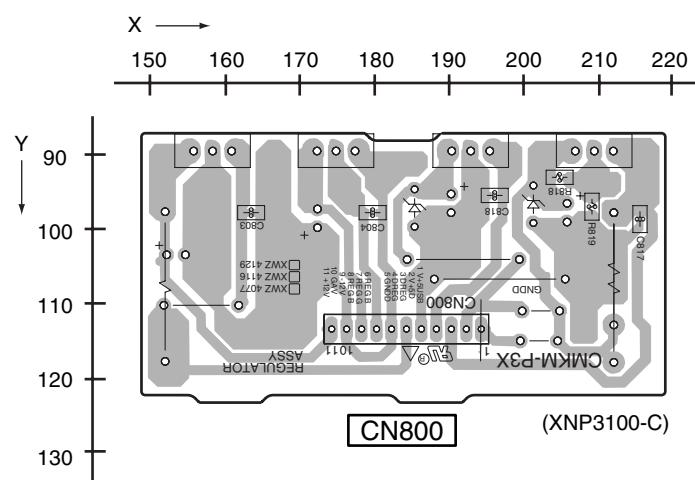

SIDE B

R DIGITAL IN ASSY

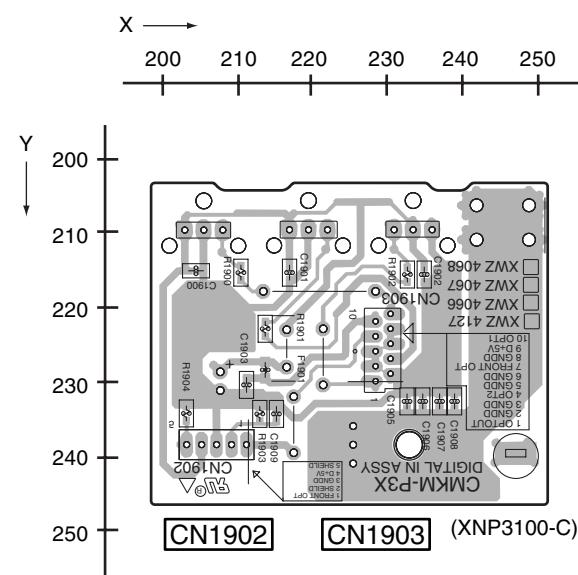


P R

P R

■ 1 ■ 2 ■ 3 ■ 4
4.13 PRIMARY ASSY

SIDE A

SIDE A

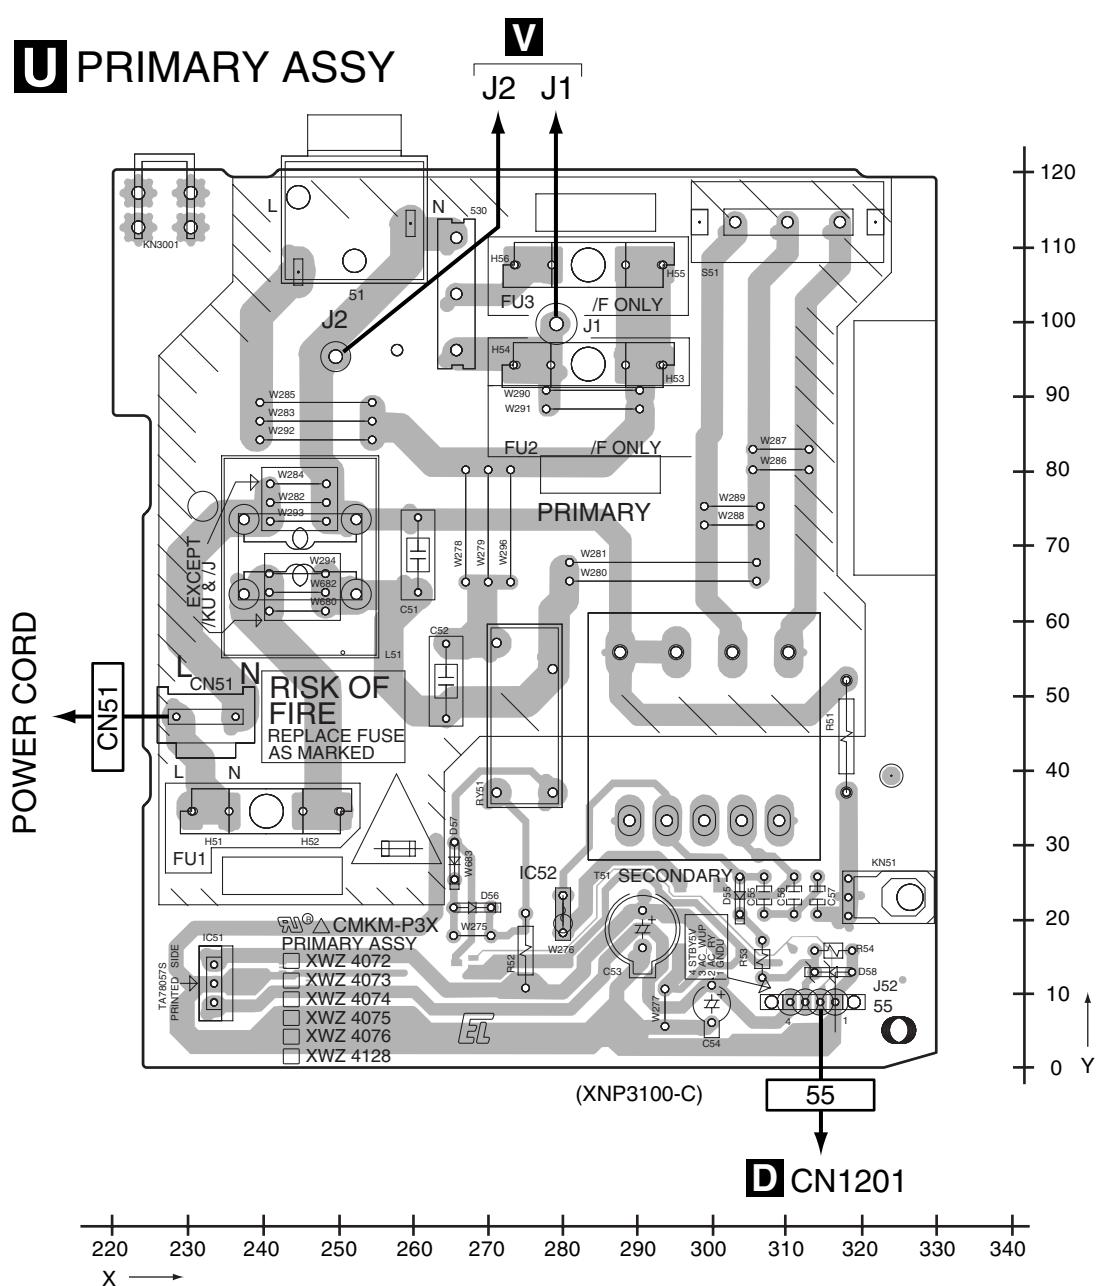


U

U

SIDE B**SIDE B**

A

U PRIMARY ASSY

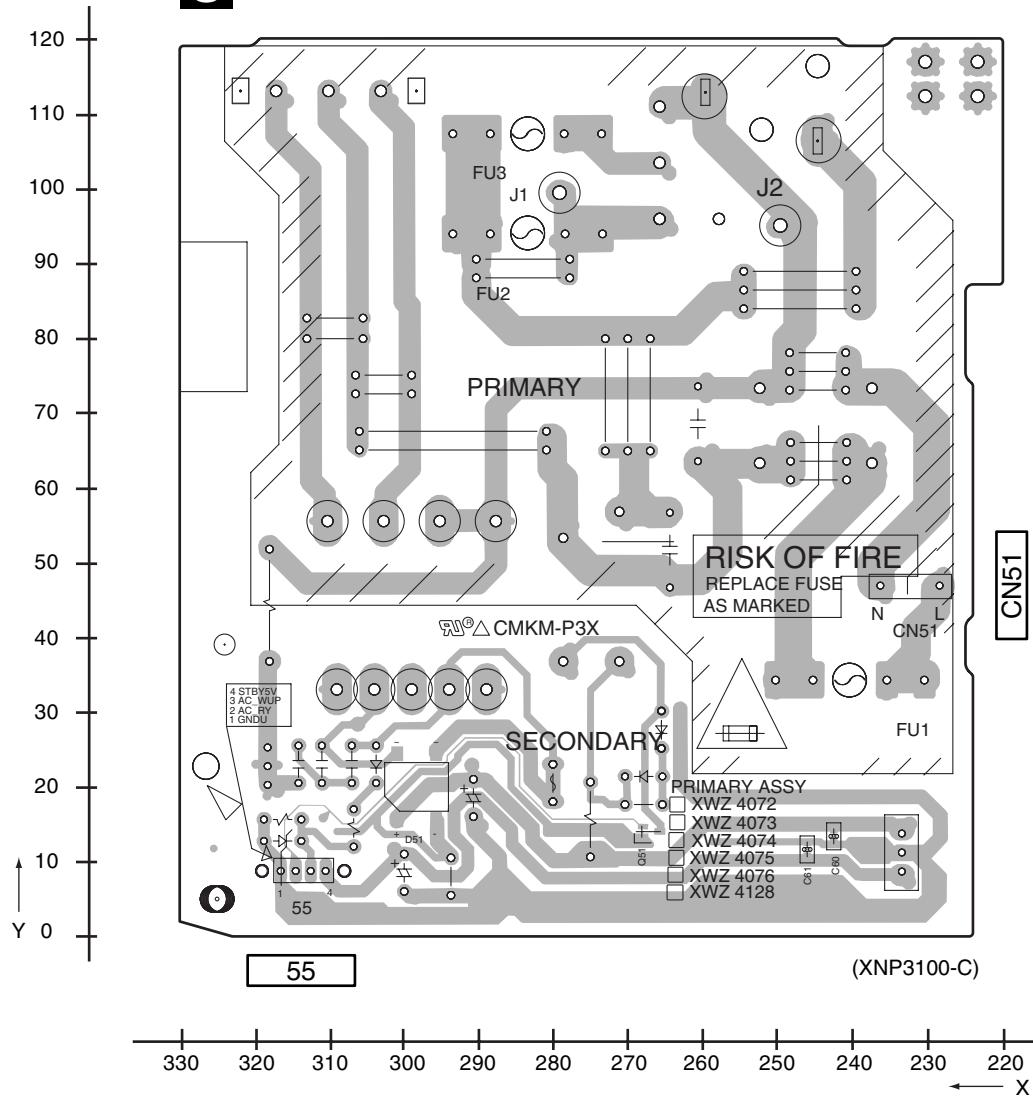

B

C

D


E

F

U**U**


4.15 USB ASSY

SIDE A

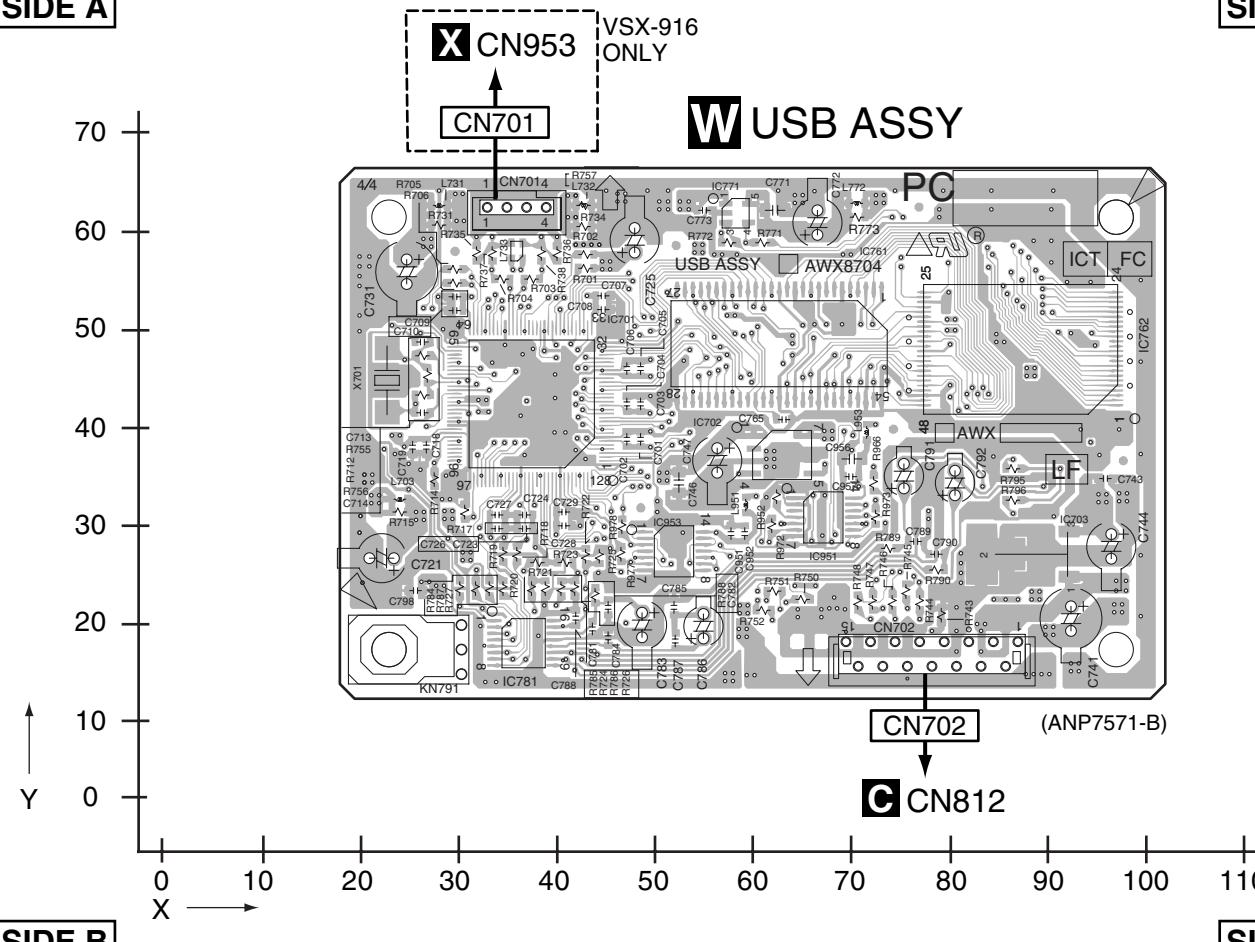

SIDE A

SIDE B

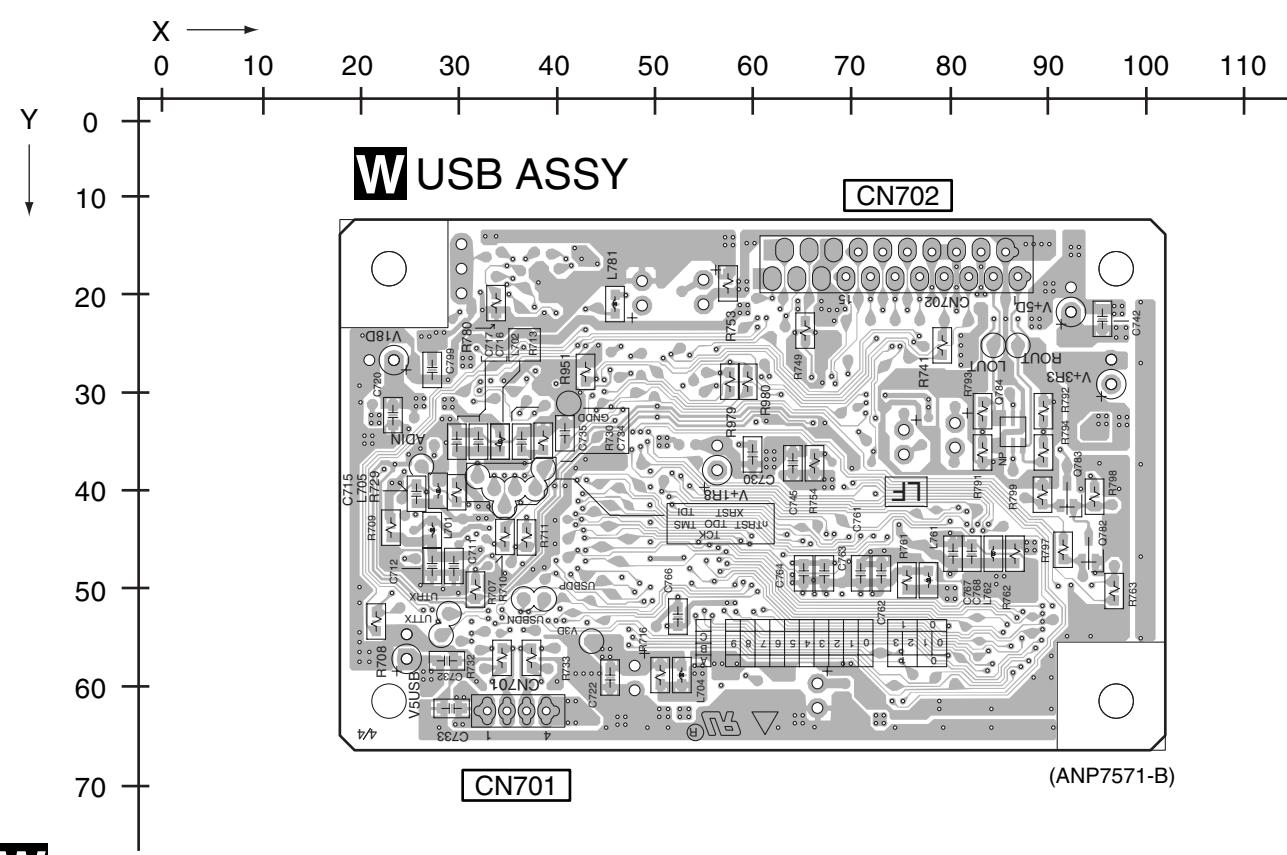

SIDE B

W

W

5. PCB PARTS LIST

- A**
- NOTES:
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→ 56 × 10 ¹ → 561 RD1/4PU[5][6][1]J
47k Ω	→ 47 × 10 ³ → 473 RD1/4PU[4][7][3]J
0.5 Ω	→ R50 RN2H[R][5][0]K
1 Ω	→ 1R0 RS1P[1][R][0]K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→ 562 × 10 ¹ → 5621 RN1/4PC[5][6][2][1]F
---------	--------------------------------	----------------------------

- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

LIST OF ASSEMBLIES

Mark	Symbol and Description	VSX-816 /KUXJ/CA	VSX-916 /MYXJ5
C NSP	1..MAIN ASSY	XWK3233	XWK3234
	1..DSP ASSY	AWX8699	AWX8572
	1..AMP ASSY	XWK3224	XWK3225
	2..POWER PACK ASSY	XWZ4087	XWZ4088
	2..TRANS2 ASSY	XWZ4166	XWZ4092
	2..TRANS3 ASSY	XWZ4079	XWZ4079
	2..HEADPHONE ASSY	XWZ4095	XWZ4095
	2..COMPONENT ASSY	XWZ4097	XWZ4097
	2..PRE-OUT ASSY	XWZ4098	XWZ4200
	2..5.1CH INPUT ASSY	XWZ4069	XWZ4069
D NSP	2..BINDER ASSY	XWZ4199	XWZ4199
	1..COMPLEX ASSY	XWK3214	XWK3215
	2..FRONT DISPLAY ASSY	XWZ4054	XWZ4054
	2..R. ENCODER ASSY	XWZ4055	XWZ4055
	2..POWER KEY ASSY	XWZ4057	XWZ4057
	2..VIDEO ASSY	XWZ4062	XWZ4062
	2..S. VIDEO ASSY	XWZ4065	XWZ4065
	2..DIGITAL IN ASSY	XWZ4067	XWZ4068
	2..FRONT VIDEO ASSY	XWZ4109	XWZ4109
	2..PRIMARY ASSY	XWZ4072	XWZ4073
E	2..REGULATOR ASSY	XWZ4129	XWZ4116
	2..TRANS1 ASSY	XWZ4078	Not used
	2..TRANS4 ASSY	XWZ4093	XWZ4093
	1..USB IN ASSY	XWK3249	XWK3250
F	1..USB ASSY	Not used	AWX8704
	1..FM/AM TUNER UNIT	AXX7210	AXX7170

■ CONTRAST OF PCB ASSEMBLIES

D TRANS2 ASSY

XWZ4092 and XWZ4166 are constructed the same except for the following:

Mark	Symbol and Description	XWZ4166	XWZ4092
	IC853 PROTECTOR(5A)	AEK7019	Not used
	IC853 PROTECTOR(7A)	Not used	AEK7021

H PRE-OUT ASSY

XWZ4200 and XWZ4098 are constructed the same except for the following:

Mark	Symbol and Description	XWZ4098	XWZ4200
	C1582	Not used	CQMBA102J50

A

P REGULATOR ASSY

XWZ4116 and XWZ4129 are constructed the same except for the following:

Mark	Symbol and Description	XWZ4129	XWZ4116
△	D810	Not used	MTZJ6.2B
	IC803	Not used	TA7805S
	C818	Not used	CKSRYB103K25
	C819	Not used	CEAT101M10

B

R DIGITAL IN ASSY

XWZ4068 and XWZ4067 are constructed the same except for the following:

Mark	Symbol and Description	XWZ4067	XWZ4068
	JA1902 OPT. LINK OUT	Not used	GP1FAV51TK0F
	R1902	Not used	RS1/16S101J
	C1902	Not used	CQMBA102J50

C

U PRIMARY ASSY

XWZ4073 and XWZ4072 are constructed the same except for the following:

Mark	Symbol and Description	XWZ4072	XWZ4073
△	D57	Not used	1SS133
△	L51	Not used	XTF3004
△	T51 STANDBY TRANSFORMER	ATT7043	ATT7040
△	51 AC SOCKET 1-P	AKP1060	Not used
△	530 3P TERMINAL	Not used	AKC-081
△	R51 (2.2M, 1/2W)	RCN1080	Not used

C

X USB IN ASSY

XWK3250 and XWK3249 are constructed the same except for the following:

Mark	Symbol and Description	XWK3249	XWK3250
	L970	Not used	ATH7015
	CN953 KR CONNECTOR	Not used	B4B-PH-K-S
	JA953 USB CONNECTOR	Not used	XKP3086
	R979, R980	Not used	RS1/16S0R0J
	C969	Not used	CKSRYB104K16
	C970	Not used	CEVW101M16

D

■ PCB PARTS LIST FOR VSX-816/KUXJ/CA UNLESS OTHER WISE NOTED

Mark No.	Description	Part No.	Mark No.	Description	Part No.
COMPLEX ASSY					
MISCELLANEOUS					
J 41	JUMPER WIRE	D15A03-100-2651	IC 108 (B,255,64) 8CH E-VOL	IC 106 (A,198,41) OP-AMP IC	BA4560RF
J 42	JUMPER WIRE	D15A07-125-2651	IC 110 (A,237,73) IC	IC 107 (A,216,88) OP-AMP IC	BA4560RF
A MAIN ASSY (XWK3233)					
MISCELLANEOUS					
IC 103 (A,198,72)	OP-AMP IC	BA4560RF	IC 312 (A,142,77) OP-AMP IC	IC 315 (A,160,90) OP-AMP IC	BA4560RF
IC 104 (A,198,56)	OP-AMP IC	BA4560RF	IC 6001(A,135,21) IC	IC 9001(B,82,64) CPU	TC74VHCT125AFTS1
IC 105 (A,198,87)	OP-AMP IC	BA4560RF	IC 9002(A,103,44) EEPROM	PEG216A	BR24L16FV-W

E

F

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	Q 231 (A,225,69) DIGITAL TR(SC-70)	RT1P241M	RESISTORS	CN252 (A,37,69) 3P TOP POST	B3B-EH
	Q 232 (A,229,69) TRANSISTOR	RT1N241M		101 PCB BINDER	VEF1040
	Q 252 (A,68,105) TRANSISTOR	2SD1858X		102 PCB BINDER	VEF1040
	Q 253 (A,75,108) TRANSISTOR	RT1N241M			
	Q 254 (A,72,98) DIGITAL TR(SC-70)	RT1P241M			
	Q 255 (A,75,98) TRANSISTOR	RT1N241M		R 101 (B,282,19)	RS1/16S331J
	Q 256 (A,75,94) CHIP TRANSISTOR	2SD2704K		R 102 (B,293,12)	RS1/16S331J
	Q 257 (A,78,108) TRANSISTOR	2SA1576A		R 103 (B,283,62)	RS1/16S222J
	Q 361 (A,166,78) CHIP TRANSISTOR	2SD2704K		R 104 (B,283,52)	RS1/16S222J
	Q 9001(A,125,87) DIGITAL TR(SC-70)	RT1N431M		R 105 (B,283,47)	RS1/16S331J
B	Q 9002(A,66,80) DIGITAL TR(SC-70)	RT1P241M		R 106 (B,293,40)	RS1/16S331J
	Q 9003(A,65,75) DIGITAL TR(SC-70)	RT1P241M		R 107 (B,283,87)	RS1/16S331J
	Q 9007(A,69,85) TRANSISTOR	DTC143TK		R 108 (B,293,81)	RS1/16S331J
	Q 9064(A,59,80) DIGITAL TR(SC-70)	RT1P241M		R 109 (B,283,73)	RS1/16S331J
	Q 9065(A,55,78) TRANSISTOR	UMD2N		R 110 (B,293,68)	RS1/16S331J
	D 103 (B,173,35) DIODE	DAN217U		R 111 (B,283,115)	RS1/16S222J
	D 105 (B,163,37) DIODE	DAN217U		R 112 (B,283,106)	RS1/16S222J
	D 107 (B,166,37) DIODE	DAN217U		R 113 (B,283,101)	RS1/16S331J
	D 251 (A,83,96) DIODE	DAN217U		R 114 (B,293,96)	RS1/16S331J
	D 253 (A,70,114) DIODE	UDZS27(B)		R 129 (B,283,34)	RS1/16S331J
C	D 254 (A,90,104) DIODE	UDZS5R1(B)		R 130 (B,283,25)	RS1/16S331J
	D 311 (B,259,93) DIODE	1SS355		R 145 (A,71,73)	RS1/16S102J
	D 312 (B,268,93) DIODE	1SS355		R 146 (A,71,74)	RS1/16S102J
	D 331 (B,260,87) DIODE	UDZS6R8(B)		R 147 (B,233,67)	RS1/16S472J
	D 332 (B,263,87) DIODE	UDZS6R8(B)		R 148 (B,228,62)	RS1/16S472J
	D 6001(A,149,22) DIODE	1SS355		R 149 (A,259,45)	RS1/16S104J
	D 9001(A,125,103) DIODE	DAP202U		R 154 (B,294,51)	RS1/16S0R0J
	D 9002(A,119,103) DIODE	DAP202U		R 155 (B,293,58)	RS1/16S0R0J
	D 9003(A,122,103) DIODE	DAN202U		R 156 (B,295,107)	RS1/16S0R0J
	D 9006(B,99,89) DIODE	DAN217U		R 157 (B,293,114)	RS1/16S0R0J
D	D 9007(B,91,89) DIODE	DAN217U		R 180 (B,278,97)	RS1/16S0R0J
	D 9010(A,128,88) DIODE	1SS355		R 181 (B,272,78)	RS1/16S0R0J
	D 9011(A,60,75) DIODE	DAN202U		R 182 (B,275,75)	RS1/16S0R0J
	D 9064(A,58,75) DIODE	DAP202U		R 183 (B,276,67)	RS1/16S0R0J
	D 9065(A,63,80) DIODE	DAP202U		R 201 (A,189,85)	RS1/16S473J
	D 9068(A,53,81) DIODE	1SS355		R 202 (A,189,90)	RS1/16S473J
	L 101 (B,260,98) CHIP SOLID INDUCTOR	QTL1013		R 203 (B,187,85)	RS1/16S392J
	L 102 (B,265,97) CHIP SOLID INDUCTOR	QTL1013		R 204 (B,187,91)	RS1/16S392J
	L 5002(A,257,104) CHIP SOLID INDUCTOR	QTL1013		R 205 (B,189,85)	RS1/16S392J
	L 9001(A,123,107) CHIP SOLID INDUCTOR	ATL7002		R 206 (B,189,91)	RS1/16S392J
E	L 9002(A,121,107) CHIP SOLID INDUCTOR	ATL7002		R 207 (B,191,85)	RS1/16S392J
	L 9003(A,106,98) RADIAL INDUCTOR	LFCA2R2J		R 208 (B,191,91)	RS1/16S392J
	X 9001(A,96,53) CERAMIC RESONATOR (15.7 MHz)	XSS3004		R 209 (B,198,85)	RS1/16S392J
	CN101 (A,41,27) CONNECTOR	CKS3382		R 210 (B,198,91)	RS1/16S392J
	CN103 (A,230,17) 11P CONNECTOR	52044-1145		R 211 (B,200,85)	RS1/16S332J
	CN104 (A,250,13) CONNECTOR	CKS3384		R 212 (B,200,91)	RS1/16S332J
	CN105 (A,266,34) CONNECTOR	CKS3372		R 213 (B,202,85)	RS1/16S680J
	CN106 (A,101,18) 12P CONNECTOR	VKN1243		R 214 (B,202,91)	RS1/16S680J
	CN107 (A,39,99) CONNECTOR POST	B3B-PH		R 219 (B,216,84)	RS1/16S0R0J
	CN108 (A,41,55) CONNECTOR	CKS3370		R 220 (B,215,91)	RS1/16S0R0J
F	CN109 (A,230,113) 19P SOCKET	XKP3054		R 221 (B,220,84)	RS1/16S472J
	CN111 (A,276,113) 21P SOCKET	XKP3091		R 222 (B,219,91)	RS1/16S472J
	CN112 (A,91,41) CONNECTOR	CKS3382		R 223 (A,242,78)	RS1/16S472J
	CN114 (A,189,113) 21P SOCKET	XKP3091		R 224 (A,236,78)	RS1/16S472J
	CN115 (A,302,21) PIN JACK(4P)	AKB7114		R 225 (B,225,84)	RS1/16S392J
	CN116 (A,302,49) PIN JACK(4P)	AKB7114		R 226 (B,225,91)	RS1/16S392J
	CN117 (A,302,77) PIN JACK(4P)	AKB7114		R 227 (B,231,84)	RS1/16S101J
	CN118 (A,302,105) PIN JACK(4P)	AKB7114		R 228 (B,233,89)	RS1/16S101J
	CN251 (A,39,83) 3P JUMPER CONNECTOR	52147-0310		R 231 (A,229,72)	RS1/16S104J
				R 233 (A,231,91)	RS1/16S474J

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
R 234 (A,231,84)		RS1/16S474J	R 427 (A,133,93)		RS1/16S104J
R 237 (A,237,88)		RS1/16S122J	R 431 (A,131,93)		RS1/16S104J
R 238 (A,236,80)		RS1/16S122J	R 432 (A,127,93)		RS1/16S104J
R 241 (A,190,69)		RS1/16S473J	R 433 (A,128,93)		RS1/16S104J
R 242 (A,190,74)		RS1/16S473J	R 434 (A,134,93)		RS1/16S104J
R 243 (B,186,69)		RS1/16S332J	R 435 (A,126,93)		RS1/16S104J
R 244 (B,186,75)		RS1/16S332J	R 436 (A,130,93)		RS1/16S104J
R 245 (B,188,69)		RS1/16S332J	R 438 (A,81,98)		RS1/16S104J
R 246 (B,188,75)		RS1/16S332J	R 439 (A,86,96)		RS1/16S104J
R 247 (B,190,69)		RS1/16S332J	R 440 (A,81,108)		RS1/16S754J
R 248 (B,190,75)		RS1/16S332J	R 441 (A,79,98)		RS1/16S222J
R 249 (B,197,69)		RS1/16S332J	R 442 (A,77,98)		RS1/16S104J
R 250 (B,197,75)		RS1/16S332J	R 443 (A,63,104)		RS1/16S471J
R 251 (B,199,69)		RS1/16S182J	R 445 (A,73,108)		RS1/16S223J
R 252 (B,199,75)		RS1/16S182J	R 446 (A,74,113)		RS1/16S104J
R 253 (B,202,69)		RS1/16S0R0J	R 447 (A,88,94)		RS1/16S472J
R 254 (B,202,75)		RS1/16S0R0J	R 448 (A,89,104)		RS1/16S104J
R 257 (B,213,69)		RS1/16S101J	R 449 (A,80,108)		RS1/16S102J
R 258 (B,213,75)		RS1/16S101J	R 453 (A,146,35)		RS1/16S102J
R 261 (A,189,53)		RS1/16S473J	R 454 (A,142,46)		RS1/16S102J
R 262 (A,189,59)		RS1/16S473J	R 455 (A,146,38)		RS1/16S272J
R 263 (B,186,53)		RS1/16S332J	R 456 (A,147,43)		RS1/16S272J
R 264 (B,186,60)		RS1/16S332J	R 457 (A,140,35)		RS1/16S153J
R 265 (B,188,53)		RS1/16S332J	R 458 (A,140,46)		RS1/16S153J
R 266 (B,188,60)		RS1/16S682J	R 459 (B,133,38)		RS1/16S103J
R 267 (B,190,53)		RS1/16S332J	R 460 (B,133,43)		RS1/16S103J
R 268 (B,190,60)		RS1/16S393J	R 461 (B,145,39)		RS1/16S104J
R 269 (B,197,53)		RS1/16S332J	R 462 (B,145,43)		RS1/16S104J
R 270 (B,197,60)		RS1/16S122J	R 464 (A,78,102)		RS1/16S0R0J
R 271 (B,199,53)		RS1/16S182J	R 473 (A,151,53)		RS1/16S102J
R 272 (B,199,60)		RS1/16S272J	R 474 (A,152,65)		RS1/16S102J
R 273 (B,202,53)		RS1/16S0R0J	R 475 (A,157,52)		RS1/16S272J
R 274 (B,202,60)		RS1/16S271J	R 476 (A,158,66)		RS1/16S272J
R 277 (B,214,53)		RS1/16S101J	R 477 (A,149,52)		RS1/16S153J
R 278 (B,213,61)		RS1/16S101J	R 478 (A,150,65)		RS1/16S153J
R 280 (A,65,113)		RS1/16S0R0J	R 479 (B,142,57)		RS1/16S103J
R 281 (A,188,44)		RS1/16S473J	R 480 (B,142,62)		RS1/16S103J
R 282 (A,188,38)		RS1/16S473J	R 481 (B,154,58)		RS1/16S104J
R 283 (B,186,45)		RS1/16S332J	R 482 (B,154,62)		RS1/16S104J
R 284 (B,186,38)		RS1/16S332J	R 483 (B,144,76)		RS1/16S104J
R 285 (B,188,45)		RS1/16S332J	R 484 (A,165,71)		RS1/16S104J
R 286 (B,188,38)		RS1/16S332J	R 485 (A,157,80)		RS1/16S472J
R 287 (B,191,45)		RS1/16S332J	R 488 (A,165,73)		RS1/16S0R0J
R 288 (B,191,38)		RS1/16S332J	R 493 (A,141,71)		RS1/16S102J
R 289 (B,197,45)		RS1/16S332J	R 494 (A,141,83)		RS1/16S911J
R 290 (B,197,38)		RS1/16S332J	R 495 (A,147,71)		RS1/16S272J
R 291 (B,200,45)		RS1/16S182J	R 496 (A,148,83)		RS1/16S272J
R 292 (B,199,39)		RS1/16S182J	R 497 (A,139,69)		RS1/16S153J
R 293 (B,202,45)		RS1/16S0R0J	R 498 (A,139,83)		RS1/16S153J
R 294 (B,202,39)		RS1/16S0R0J	R 499 (B,133,72)		RS1/16S103J
R 297 (B,214,44)		RS1/16S101J	R 500 (B,133,79)		RS1/16S103J
R 298 (B,214,39)		RS1/16S101J	R 502 (B,144,80)		RS1/16S204J
R 303 (B,156,37)		RS1/16S101J	R 504 (B,171,86)		RS1/16S222J
R 304 (B,155,43)		RS1/16S101J	R 505 (B,170,92)		RS1/16S222J
R 305 (B,160,49)		RS1/16S101J	R 506 (B,165,87)		RS1/16S104J
R 306 (B,164,61)		RS1/16S101J	R 507 (B,163,92)		RS1/16S104J
R 307 (B,165,68)		RS1/16S101J	R 508 (A,162,82)		RS1/16S272J
R 308 (B,171,72)		RS1/16S101J	R 509 (A,162,96)		RS1/16S272J
R 311 (A,258,102) METAL OXIDE RESISTOR	RS1LMF101J		R 512 (A,159,83)		RS1/16S102J
R 312 (A,266,102) METAL OXIDE RESISTOR	RS1LMF101J		R 513 (A,159,96)		RS1/16S102J

Mark No.**Description****Part No.****Mark No.****Description****Part No.**

A	R 514 (A,157,83)	RS1/16S153J	R 9066(A,62,72)	RS1/16S103J
	R 515 (A,157,96)	RS1/16S153J	R 9067(A,57,83)	RS1/16S103J
	R 516 (B,150,89)	RS1/16S103J	R 9068(A,64,71)	RS1/16S0R0J
	R 517 (B,150,96)	RS1/16S103J	R 9080(A,98,16)	RS1/16S103J
	R 6001(A,132,18)	RS1/16S104J	R 9081(A,120,72)	RS1/16S221J
B	R 6002(A,139,24)	RS1/16S104J	R 9082(A,122,69)	RS1/16S274J
	R 6003(A,140,18)	RS1/16S104J		
	R 6004(A,151,22)	RS1/16S101J		
	R 6007(B,128,14)	RS1/16S102J		
	R 6009(A,130,23)	RS1/16S101J		
C	R 6010(A,147,23)	RS1/16S182J	C 115 (B,262,98)	CKSRYB103K50
	R 9002(A,129,89)	RS1/16S473J	C 116 (B,267,97)	CKSRYB103K50
	R 9005(A,91,55)	RS1/16S0R0J	C 117 (A,287,109)	CCSRCH220J50
	R 9006(B,103,89)	RS1/16S474J	C 118 (B,285,109)	CCSRCH220J50
	R 9007(B,93,89)	RS1/16S474J	C 121 (A,280,34)	CEAT100M50
D	R 9008(A,86,90)	RS1/16S221J	C 122 (A,280,25)	CEAT100M50
	R 9009(A,65,85)	RS1/16S473J	C 123 (A,280,19)	CEAT100M50
	R 9010(B,115,45)	RS1/16S512J	C 124 (A,280,11)	CEAT100M50
	R 9011(A,63,76)	RS1/16S102J	C 125 (A,280,62)	CEAT100M50
	R 9012(A,63,73)	RS1/16S0R0J	C 126 (A,280,53)	CEAT100M50
E	R 9013(B,112,45)	RS1/16S471J	C 127 (A,280,47)	CEAT100M50
	R 9014(B,104,54)	RS1/16S471J	C 128 (A,280,40)	CEAT100M50
	R 9015(B,101,54)	RS1/16S471J	C 131 (A,280,87)	CEAT100M50
	R 9016(B,99,54)	RS1/16S471J	C 132 (A,280,80)	CEAT100M50
	R 9017(B,97,54)	RS1/16S471J	C 133 (A,280,74)	CEAT100M50
F	R 9018(B,95,54)	RS1/16S471J	C 134 (A,280,67)	CEAT100M50
	R 9019(B,98,76)	RS1/16S471J	C 135 (A,280,114)	CEAT100M50
	R 9020(B,99,76)	RS1/16S471J	C 136 (A,280,106)	CEAT100M50
	R 9021(B,101,76)	RS1/16S471J	C 137 (A,280,101)	CEAT100M50
	R 9022(B,103,76)	RS1/16S471J	C 138 (A,280,93)	CEAT100M50
G	R 9023(B,103,68)	RS1/16S472J	C 139 (A,53,95)	CEAT100M50
	R 9024(B,105,68)	RS1/16S472J	C 140 (A,53,100)	CEAT100M50
	R 9025(B,101,68)	RS1/16S472J	C 141 (A,256,82)	CKSRYB104K50
	R 9026(B,107,68)	RS1/16S751J	C 145 (B,256,81)	CCSRCH101J50
	R 9028(B,119,45)	RS1/16S104J	C 146 (B,258,81)	CCSRCH101J50
H	R 9030(A,68,79)	RS1/16S470J	C 147 (B,253,81)	CKSRYB103K50
	R 9031(B,69,48)	RS1/16S104J	C 148 (B,238,67)	CKSRYB223K25
	R 9032(A,66,59)	RS1/16S104J	C 149 (B,235,67)	CKSRYB473K25
	R 9033(B,89,48)	RS1/16S104J	C 150 (B,231,67)	CKSRYB154K16
	R 9036(A,88,89)	RS1/16S221J	C 151 (B,49,51)	CKSRYB103K50
I	R 9037(A,124,99)	RS1/16S104J	C 152 (B,230,62)	CKSRYB223K25
	R 9039(A,87,58)	RS1/16S104J	C 153 (B,234,62)	CKSRYB473K25
	R 9041(B,117,45)	RS1/16S104J	C 154 (B,232,62)	CKSQYB154K16
	R 9042(B,83,81)	RS1/16S103J	C 155 (A,226,62)	CEAT101M16
	R 9043(B,81,81)	RS1/16S103J	C 156 (A,229,56)	CEAT101M16
J	R 9044(B,79,81)	RS1/16S103J	C 157 (A,236,56)	CEAT101M16
	R 9045(A,98,46)	RS1/16S471J	C 158 (A,232,50)	CEAT101M16
	R 9046(A,107,45)	RS1/16S471J	C 159 (A,241,50)	CEAT101M16
	R 9047(A,99,46)	RS1/16S103J	C 160 (A,234,44)	CEAT101M16
	R 9048(A,98,43)	RS1/16S103J	C 161 (A,241,44)	CEAT101M16
K	R 9049(A,114,72)	RS1/16S221J	C 162 (A,248,44)	CEAT101M16
	R 9050(A,108,68)	RS1/16S221J	C 165 (A,240,86)	CEAT1R0M50
	R 9051(A,101,29)	RS1/16S221J	C 166 (A,248,86)	CEAT1R0M50
	R 9052(A,109,25)	RS1/16S221J	C 179 (B,294,76)	CKSRYB103K50
	R 9053(A,106,26)	RS1/16S221J	C 180 (A,277,16)	CKSRYB103K50
L	R 9054(A,105,15)	RS1/16S221J	C 199 (A,281,50)	CKSRYB103K50
	R 9060(B,98,68)	RS1/16S473J	C 201 (A,183,85)	CEAT2R2M50
	R 9062(B,87,48)	RS1/16S471J	C 202 (A,184,92)	CEAT2R2M50
	R 9064(A,54,74)	RS1/16S103J	C 203 (A,191,85)	CCSRCH471J50
	R 9065(A,56,74)	RS1/16S103J	C 204 (A,191,90)	CCSRCH471J50

Mark No.**Description****Part No.**

C 206 (A,194,90)
 C 207 (B,193,85)
 C 208 (B,193,91)
 C 213 (A,223,84)

CCSRCH331J50
 CCSRCH331J50
 CCSRCH331J50
 CEAT100M50

Mark No.**Description****Part No.**

C 322 (A,153,45)
 C 323 (A,145,35)
 C 324 (A,140,47)
 C 325 (A,136,39) ELECT. CAPACITOR

CEAT100M50
 CCSRCH101J50
 CCSRCH101J50
 CEAT220M50

C 214 (A,223,90)
 C 215 (B,233,84)
 C 216 (B,231,89)
 C 217 (A,202,85)
 C 218 (A,202,90)

CEAT100M50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB103K50

C 326 (A,136,46) ELECT. CAPACITOR
 C 327 (A,132,42)
 C 328 (A,132,38)
 C 333 (A,255,93)
 C 334 (A,268,81)

CEAT220M50
 CKSRYB103K50
 CKSRYB103K50
 CEAT101M10
 CEAT101M10

C 219 (A,221,87)
 C 220 (A,210,93)
 C 221 (A,230,75)
 C 222 (A,243,70)
 C 241 (A,183,70)

CKSRYB104K16
 CKSRYB104K16
 CKSRYB103K50
 CKSRYB103K50
 CEAT2R2M50

C 341 (A,161,56)
 C 342 (A,161,63)
 C 343 (A,149,51)
 C 344 (A,150,66)
 C 345 (A,145,56) ELECT. CAPACITOR

CEAT100M50
 CEAT100M50
 CCSRCH101J50
 CCSRCH101J50
 CEAT220M50

C 242 (A,183,77)
 C 243 (A,192,69)
 C 244 (A,192,74)
 C 245 (A,194,69)
 C 246 (A,194,74)

CEAT2R2M50
 CCSRCH101J50
 CCSRCH101J50
 CCSRCH331J50
 CCSRCH331J50

C 346 (A,145,63) ELECT. CAPACITOR
 C 347 (A,140,64)
 C 348 (A,141,58)
 C 361 (A,161,70)
 C 362 (A,169,70)

CEAT220M50
 CKSRYB103K50
 CKSRYB103K50
 CEAT100M50
 CEAT100M50

C 247 (B,193,69)
 C 248 (B,193,75)
 C 249 (A,205,69)
 C 250 (A,205,75)
 C 251 (A,204,65)

CCSRCH331J50
 CCSRCH331J50
 CEAT100M50
 CEAT100M50
 CKSRYB103K50

C 363 (A,139,68)
 C 364 (A,139,84)
 C 365 (A,136,73) ELECT. CAPACITOR
 C 366 (A,136,80) ELECT. CAPACITOR
 C 367 (A,135,88)

CCSRCH101J50
 CKSRYB472K50
 CEAT220M50
 CEANP4R7M50
 CKSRYB103K50

C 252 (A,211,78)
 C 253 (B,43,89)
 C 254 (A,58,108) ELECT. CAPACITOR
 C 255 (A,51,108) ELECT. CAPACITOR
 C 256 (A,81,105)

CKSRYB103K50
 CKSRYB103K50
 CEAT101M25
 CEANP470M25
 CKSRYB103K50

C 368 (A,147,75)
 C 370 (A,161,74)
 C 384 (A,167,87)
 C 385 (A,167,94)
 C 386 (A,157,84)

CKSRYB103K50
 CEAT4R7M50
 CEAT100M50
 CEAT100M50
 CCSRCH101J50

C 257 (B,216,69)
 C 258 (B,217,75)
 C 261 (A,183,54)
 C 262 (A,183,62)
 C 263 (A,192,53)

CKSRYB472K50
 CKSRYB472K50
 CEAT2R2M50
 CEAT2R2M50
 CCSRCH101J50

C 387 (A,157,95)
 C 388 (A,153,90) ELECT. CAPACITOR
 C 389 (A,153,97) ELECT. CAPACITOR
 C 390 (A,164,88)
 C 392 (B,91,95)

CCSRCH101J50
 CEAT220M50
 CEAT220M50
 CKSRYB103K50
 CKSRYB102K50

C 264 (A,191,59)
 C 265 (A,194,53)
 C 266 (A,194,59)
 C 267 (B,193,53)
 C 268 (B,193,60)

CKSRYB223K25
 CCSRCH331J50
 CKSRYB103K50
 CCSRCH331J50
 CKSRYB562K50

C 393 (A,156,92)
 C 1031(A,286,57)
 C 1041(B,287,55)
 C 5001(B,233,10)
 C 5002(B,235,10)

CKSRYB103K50
 CCSRCH220J50
 CCSRCH220J50
 CKSRYB102K50
 CKSRYB103K50

C 269 (A,205,54)
 C 270 (A,205,60)
 C 271 (A,203,51)
 C 272 (A,210,64)
 C 277 (B,216,53)

CEAT100M50
 CEAT100M50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB472K50

C 5003(B,237,10)
 C 5025(A,166,12)
 C 5026(A,169,13)
 C 5027(A,177,12)
 C 5028(A,179,13)

CKSRYB105K10
 CKSRYB102K50
 CKSRYB102K50
 CKSRYB102K50
 CCSRCH220J50

C 278 (B,215,61)
 C 281 (A,183,46)
 C 282 (A,184,39)
 C 283 (A,190,44)
 C 284 (A,190,38)

CKSRYB472K50
 CEAT2R2M50
 CEAT2R2M50
 CCSRCH101J50
 CCSRCH101J50

C 6001(A,139,18)
 C 9004(A,121,94)
 C 9005(A,116,99)
 C 9006(A,122,88)
 C 9007(A,79,92) ELECT. CAPACITOR

CKSRYB104K16
 CKSRYB103K50
 CEJO2R2M50
 CKSRYB105K10
 CEAT331M6R3

C 285 (A,194,44)
 C 286 (A,194,38)
 C 287 (B,193,45)
 C 288 (B,193,38)
 C 289 (A,205,44)

CCSRCH331J50
 CCSRCH331J50
 CCSRCH331J50
 CCSRCH331J50
 CEAT100M50

C 9008(B,77,90)
 C 9011(B,95,89)
 C 9014(B,87,88)
 C 9015(A,100,95)
 C 9018(B,72,72)

CKSRYB103K50
 CKSRYB473K16
 CKSRYB473K16
 CKSRYB102K50
 CKSRYB104K50

C 290 (A,206,38)
 C 291 (A,216,39)
 C 292 (A,216,48)
 C 297 (B,218,44)
 C 298 (B,216,39)

CEAT100M50
 CKSRYB103K50
 CKSRYB103K50
 CKSRYB472K50
 CKSRYB472K50

C 9081(A,120,69)

CKSRYB103K50

C 321 (A,153,38)

CEAT100M50

**A MAIN ASSY (XWK3234)
MISCELLANEOUS**

Mark No. **Description**
Part No.
Mark No. **Description**
Part No.

A	IC 103 (A,198,72) OP-AMP IC	BA4560RF	L 9003(A,106,98) RADIAL INDUCTOR	LFCA2R2J
	IC 104 (A,198,56) OP-AMP IC	BA4560RF	X 5001(A,67,27) CRYSTAL RESONATOR (4.332 MHz)	ASS7004
	IC 105 (A,198,87) OP-AMP IC	BA4560RF	X 9001(A,96,53) CERAMIC RESONATOR (15.7 MHz)	XSS3004
	IC 106 (A,198,41) OP-AMP IC	BA4560RF	CN101 (A,41,27) CONNECTOR	CKS3382
	IC 107 (A,216,88) OP-AMP IC	BA4560RF	CN103 (A,230,17) 11P CONNECTOR	52044-1145
	IC 108 (B,255,64) 8CH E-VOL	R2S15205FP		
	IC 110 (A,237,73) IC	TC4066BFN		
	IC 251 (A,85,102) OP-AMP IC	HA17558AF	CN104 (A,250,13) CONNECTOR	CKS3384
	IC 310 (A,142,40) OP-AMP IC	BA4560RF	CN105 (A,266,34) CONNECTOR	CKS3372
	IC 311 (A,152,59) OP-AMP IC	BA4560RF	CN107 (A,39,99) CONNECTOR POST	B3B-PH
B	IC 312 (A,142,77) OP-AMP IC	BA4560RF	CN108 (A,41,55) CONNECTOR	CKS3370
	IC 315 (A,160,90) OP-AMP IC	BA4560RF	CN109 (A,230,113) 23P SOCKET	XKP3055
	IC 5001(A,69,19) RDS DECODER IC	LC72725M	CN111 (A,276,113) 21P SOCKET	XKP3091
	IC 6001(A,135,21) IC	TC74VHCT125AFTS1	CN112 (A,91,41) CONNECTOR	CKS3390
	IC 9001(B,82,64) CPU	PEG216A	CN114 (A,189,113) 21P SOCKET	XKP3091
	IC 9002(A,103,44) EEPROM	BR24L16FV-W	CN115 (A,302,21) PIN JACK(4P)	AKB7114
	Q 231 (A,225,69) DIGITAL TR(SC-70)	RT1P241M	CN116 (A,302,49) PIN JACK(4P)	AKB7114
	Q 232 (A,229,69) TRANSISTOR	RT1N241M		
	Q 252 (A,68,105) TRANSISTOR	2SD1858X	CN117 (A,302,77) PIN JACK(4P)	AKB7114
	Q 253 (A,75,108) TRANSISTOR	RT1N241M	CN118 (A,302,105) PIN JACK(4P)	AKB7114
C	Q 254 (A,72,98) DIGITAL TR(SC-70)	RT1P241M	CN251 (A,39,83) 3P JUMPER CONNECTOR	52147-0310
	Q 255 (A,75,98) TRANSISTOR	2SC4081	CN252 (A,37,69) 3P TOP POST	B3B-EH
	Q 256 (A,75,94) CHIP TRANSISTOR	2SD2704K	101 PCB BINDER	VEF1040
	Q 257 (A,78,108) TRANSISTOR	2SA1576A	102 PCB BINDER	VEF1040
	Q 259 (A,69,97) DIGITAL TR(SC-70)	RT1P241M		
	Q 260 (A,68,101) TRANSISTOR	2SC4081	RESISTORS	
	Q 361 (A,166,78) CHIP TRANSISTOR	2SD2704K	R 101 (B,282,19)	RS1/16S331J
	Q 9001(A,125,87) DIGITAL TR(SC-70)	RT1N431M	R 102 (B,293,12)	RS1/16S331J
	Q 9002(A,66,80) DIGITAL TR(SC-70)	RT1P241M	R 103 (B,283,62)	RS1/16S222J
	Q 9003(A,65,75) DIGITAL TR(SC-70)	RT1P241M	R 104 (B,283,52)	RS1/16S222J
D	Q 9007(A,69,85) TRANSISTOR	DTC143TK	R 105 (B,283,47)	RS1/16S331J
	Q 9064(A,59,80) DIGITAL TR(SC-70)	RT1P241M	R 106 (B,293,40)	RS1/16S331J
	Q 9065(A,55,78) TRANSISTOR	UMD2N	R 107 (B,283,87)	RS1/16S331J
	D 103 (B,173,35) DIODE	DAN217U	R 108 (B,293,81)	RS1/16S331J
	D 105 (B,163,37) DIODE	DAN217U	R 109 (B,283,73)	RS1/16S331J
	D 107 (B,166,37) DIODE	DAN217U	R 110 (B,293,68)	RS1/16S331J
	D 251 (A,83,96) DIODE	DAN217U	R 111 (B,283,115)	RS1/16S222J
	D 253 (A,70,114) DIODE	UDZS13(B)	R 112 (B,283,106)	RS1/16S222J
	D 254 (A,90,104) DIODE	UDZS5R1(B)	R 113 (B,283,101)	RS1/16S331J
	D 255 (A,65,114) DIODE	UDZS13(B)	R 114 (B,293,96)	RS1/16S331J
E	D 311 (B,259,93) DIODE	1SS355	R 115 (B,283,34)	RS1/16S331J
	D 312 (B,268,93) DIODE	1SS355	R 130 (B,283,25)	RS1/16S331J
	D 331 (B,260,87) DIODE	UDZS6R8(B)	R 145 (A,71,73)	RS1/16S102J
	D 332 (B,263,87) DIODE	UDZS6R8(B)	R 146 (A,71,74)	RS1/16S102J
	D 6001(A,149,22) DIODE	1SS355	R 147 (B,233,67)	RS1/16S472J
	D 9001(A,125,103) DIODE	DAP202U	R 148 (B,228,62)	RS1/16S472J
	D 9002(A,119,103) DIODE	DAP202U	R 149 (A,259,45)	RS1/16S104J
	D 9003(A,122,103) DIODE	DAN202U	R 154 (B,294,51)	RS1/16S0R0J
	D 9006(B,99,89) DIODE	DAN217U	R 155 (B,293,58)	RS1/16S0R0J
	D 9007(B,91,89) DIODE	DAN217U	R 156 (B,295,107)	RS1/16S0R0J
F	D 9010(A,128,88) DIODE	1SS355	R 157 (B,293,114)	RS1/16S0R0J
	D 9011(A,60,75) DIODE	DAN202U	R 180 (B,278,97)	RS1/16S0R0J
	D 9064(A,58,75) DIODE	DAP202U	R 181 (B,272,78)	RS1/16S0R0J
	D 9065(A,63,80) DIODE	DAP202U	R 182 (B,275,75)	RS1/16S0R0J
	D 9068(A,53,81) DIODE	1SS355	R 183 (B,276,67)	RS1/16S0R0J
	L 101 (B,260,98) CHIP SOLID INDUCTOR	QTL1013	R 201 (A,189,85)	RS1/16S473J
	L 102 (B,265,97) CHIP SOLID INDUCTOR	QTL1013	R 202 (A,189,90)	RS1/16S473J
	L 5002(A,257,104) CHIP SOLID INDUCTOR	QTL1013	R 203 (B,187,85)	RS1/16S392J
	L 9001(A,123,107) CHIP SOLID INDUCTOR	ATL7002	R 204 (B,187,91)	RS1/16S392J
	L 9002(A,121,107) CHIP SOLID INDUCTOR	ATL7002	R 205 (B,189,85)	RS1/16S392J
			R 206 (B,189,91)	RS1/16S392J

Mark No.**Description****Part No.**

R 207 (B,191,85)	RS1/16S392J	R 286 (B,188,38)	RS1/16S332J
R 208 (B,191,91)	RS1/16S392J	R 287 (B,191,45)	RS1/16S332J
R 209 (B,198,85)	RS1/16S392J	R 288 (B,191,38)	RS1/16S332J
R 210 (B,198,91)	RS1/16S392J	R 289 (B,197,45)	RS1/16S332J
R 211 (B,200,85)	RS1/16S332J	R 290 (B,197,38)	RS1/16S332J
R 212 (B,200,91)	RS1/16S332J	R 291 (B,200,45)	RS1/16S182J
R 213 (B,202,85)	RS1/16S680J	R 292 (B,199,39)	RS1/16S182J
R 214 (B,202,91)	RS1/16S680J	R 293 (B,202,45)	RS1/16S0R0J
R 219 (B,216,84)	RS1/16S0R0J	R 294 (B,202,39)	RS1/16S0R0J
R 220 (B,215,91)	RS1/16S0R0J	R 297 (B,214,44)	RS1/16S101J
R 221 (B,220,84)	RS1/16S472J	R 298 (B,214,39)	RS1/16S101J
R 222 (B,219,91)	RS1/16S472J	R 303 (B,156,37)	RS1/16S101J
R 223 (A,242,78)	RS1/16S472J	R 304 (B,155,43)	RS1/16S101J
R 224 (A,236,78)	RS1/16S472J	R 305 (B,160,49)	RS1/16S101J
R 225 (B,225,84)	RS1/16S392J	R 306 (B,164,61)	RS1/16S101J
R 226 (B,225,91)	RS1/16S392J	R 307 (B,165,68)	RS1/16S101J
R 227 (B,231,84)	RS1/16S101J	R 308 (B,171,72)	RS1/16S101J
R 228 (B,233,89)	RS1/16S101J	R 311 (A,258,102) METAL OXIDE RESISTOR	RS1/LMF101J
R 231 (A,229,72)	RS1/16S104J	R 312 (A,266,102) METAL OXIDE RESISTOR	RS1/LMF101J
R 233 (A,231,91)	RS1/16S474J	R 427 (A,133,93)	RS1/16S104J
R 234 (A,231,84)	RS1/16S474J	R 431 (A,131,93)	RS1/16S104J
R 237 (A,237,88)	RS1/16S122J	R 432 (A,127,93)	RS1/16S104J
R 238 (A,236,80)	RS1/16S122J	R 433 (A,128,93)	RS1/16S104J
R 241 (A,190,69)	RS1/16S473J	R 434 (A,134,93)	RS1/16S104J
R 242 (A,190,74)	RS1/16S473J	R 435 (A,126,93)	RS1/16S104J
R 243 (B,186,69)	RS1/16S332J	R 436 (A,130,93)	RS1/16S104J
R 244 (B,186,75)	RS1/16S332J	R 438 (A,81,98)	RS1/16S104J
R 245 (B,188,69)	RS1/16S332J	R 439 (A,86,96)	RS1/16S104J
R 246 (B,188,75)	RS1/16S332J	R 440 (A,81,108)	RS1/16S754J
R 247 (B,190,69)	RS1/16S332J	R 441 (A,79,98)	RS1/16S222J
R 248 (B,190,75)	RS1/16S332J	R 442 (A,77,98)	RS1/16S104J
R 249 (B,197,69)	RS1/16S332J	R 443 (A,63,104)	RS1/16S471J
R 250 (B,197,75)	RS1/16S332J	R 445 (A,73,108)	RS1/16S223J
R 251 (B,199,69)	RS1/16S182J	R 446 (A,74,113)	RS1/16S104J
R 252 (B,199,75)	RS1/16S182J	R 447 (A,88,94)	RS1/16S472J
R 253 (B,202,69)	RS1/16S0R0J	R 448 (A,89,104)	RS1/16S104J
R 254 (B,202,75)	RS1/16S0R0J	R 449 (A,80,108)	RS1/16S102J
R 257 (B,213,69)	RS1/16S101J	R 453 (A,146,35)	RS1/16S102J
R 258 (B,213,75)	RS1/16S101J	R 454 (A,142,46)	RS1/16S102J
R 261 (A,189,53)	RS1/16S473J	R 455 (A,146,38)	RS1/16S272J
R 262 (A,189,59)	RS1/16S473J	R 456 (A,147,43)	RS1/16S272J
R 263 (B,186,53)	RS1/16S332J	R 457 (A,140,35)	RS1/16S153J
R 264 (B,186,60)	RS1/16S332J	R 458 (A,140,46)	RS1/16S153J
R 265 (B,188,53)	RS1/16S332J	R 459 (B,133,38)	RS1/16S103J
R 266 (B,188,60)	RS1/16S682J	R 460 (B,133,43)	RS1/16S103J
R 267 (B,190,53)	RS1/16S332J	R 461 (B,145,39)	RS1/16S104J
R 268 (B,190,60)	RS1/16S393J	R 462 (B,145,43)	RS1/16S104J
R 269 (B,197,53)	RS1/16S332J	R 463 (A,76,102)	RS1/16S223J
R 270 (B,197,60)	RS1/16S122J	R 464 (A,78,102)	RS1/16S223J
R 271 (B,199,53)	RS1/16S182J	R 465 (A,74,102)	RS1/16S223J
R 272 (B,199,60)	RS1/16S272J	R 466 (A,71,101)	RS1/16S223J
R 273 (B,202,53)	RS1/16S0R0J	R 473 (A,151,53)	RS1/16S102J
R 274 (B,202,60)	RS1/16S271J	R 474 (A,152,65)	RS1/16S102J
R 277 (B,214,53)	RS1/16S101J	R 475 (A,157,52)	RS1/16S272J
R 278 (B,213,61)	RS1/16S101J	R 476 (A,158,66)	RS1/16S272J
R 281 (A,188,44)	RS1/16S473J	R 477 (A,149,52)	RS1/16S153J
R 282 (A,188,38)	RS1/16S473J	R 478 (A,150,65)	RS1/16S153J
R 283 (B,186,45)	RS1/16S332J	R 479 (B,142,57)	RS1/16S103J
R 284 (B,186,38)	RS1/16S332J	R 480 (B,142,62)	RS1/16S103J
R 285 (B,188,45)	RS1/16S332J	R 481 (B,154,58)	RS1/16S104J

Mark No. **Description**
Part No.
Mark No. **Description**
Part No.

A	R 482 (B,154,62)	RS1/16S104J	R 9024(B,105,68)	RS1/16S472J
	R 483 (B,144,76)	RS1/16S104J	R 9025(B,101,68)	RS1/16S472J
	R 484 (A,165,71)	RS1/16S104J	R 9026(B,107,68)	RS1/16S332J
	R 485 (A,157,80)	RS1/16S472J	R 9028(B,119,45)	RS1/16S104J
	R 488 (A,165,73)	RS1/16S0R0J	R 9030(A,68,79)	RS1/16S470J
	R 493 (A,141,71)	RS1/16S102J	R 9031(B,69,48)	RS1/16S104J
	R 494 (A,141,83)	RS1/16S911J	R 9032(A,66,59)	RS1/16S104J
	R 495 (A,147,71)	RS1/16S272J	R 9033(B,89,48)	RS1/16S104J
	R 496 (A,148,83)	RS1/16S272J	R 9036(A,88,89)	RS1/16S221J
	R 497 (A,139,69)	RS1/16S153J	R 9037(A,124,99)	RS1/16S104J
B	R 498 (A,139,83)	RS1/16S153J	R 9039(A,87,58)	RS1/16S104J
	R 499 (B,133,72)	RS1/16S103J	R 9041(B,117,45)	RS1/16S104J
	R 500 (B,133,79)	RS1/16S104J	R 9042(B,83,81)	RS1/16S103J
	R 502 (B,144,80)	RS1/16S204J	R 9043(B,81,81)	RS1/16S103J
	R 504 (B,171,86)	RS1/16S222J	R 9044(B,79,81)	RS1/16S103J
	R 505 (B,170,92)	RS1/16S222J	R 9045(A,98,46)	RS1/16S471J
	R 506 (B,165,87)	RS1/16S104J	R 9046(A,107,45)	RS1/16S471J
	R 507 (B,163,92)	RS1/16S104J	R 9047(A,99,46)	RS1/16S103J
	R 508 (A,162,82)	RS1/16S272J	R 9048(A,98,43)	RS1/16S103J
	R 509 (A,162,96)	RS1/16S272J	R 9060(B,98,68)	RS1/16S473J
C	R 512 (A,159,83)	RS1/16S102J	R 9062(B,87,48)	RS1/16S471J
	R 513 (A,159,96)	RS1/16S102J	R 9064(A,54,74)	RS1/16S103J
	R 514 (A,157,83)	RS1/16S153J	R 9065(A,56,74)	RS1/16S103J
	R 515 (A,157,96)	RS1/16S153J	R 9066(A,62,72)	RS1/16S103J
	R 516 (B,150,89)	RS1/16S103J	R 9067(A,57,83)	RS1/16S103J
	R 517 (B,150,96)	RS1/16S103J	R 9068(A,64,71)	RS1/16S0R0J
	R 5005(B,80,13)	RS1/16S0R0J	R 9081(A,120,72)	RS1/16S221J
	R 5010(A,76,24)	RS1/16S473J	R 9082(A,122,69)	RS1/16S274J
	R 5011(A,81,15)	RS1/16S473J		
	R 5012(A,82,12)	RS1/16S102J		
D	R 5013(A,57,26)	RS1/16S102J	C 101 (B,293,18)	CCSRCH101J50
	R 5016(B,82,13)	RS1/16S0R0J	C 102 (B,295,12)	CCSRCH101J50
	R 5020(A,73,13)	RS1/16S0R0J	C 103 (B,295,56)	CCSRCH101J50
	R 6001(A,132,18)	RS1/16S104J	C 104 (B,296,51)	CCSRCH101J50
	R 6002(A,139,24)	RS1/16S104J	C 105 (B,293,45)	CCSRCH101J50
	R 6003(A,140,18)	RS1/16S104J	C 106 (B,296,40)	CCSRCH101J50
	R 6004(A,151,22)	RS1/16S101J	C 107 (B,293,86)	CCSRCH101J50
	R 6007(B,128,14)	RS1/16S102J	C 108 (B,296,81)	CCSRCH101J50
	R 6009(A,130,23)	RS1/16S101J	C 109 (B,293,72)	CCSRCH101J50
	R 6010(A,147,23)	RS1/16S182J	C 110 (B,296,68)	CCSRCH101J50
E	R 9002(A,129,89)	RS1/16S473J	C 111 (B,296,111)	CCSRCH101J50
	R 9005(A,91,55)	RS1/16S0R0J	C 112 (B,297,107)	CCSRCH101J50
	R 9006(B,103,89)	RS1/16S474J	C 113 (B,293,100)	CCSRCH101J50
	R 9007(B,93,89)	RS1/16S474J	C 114 (B,296,96)	CCSRCH101J50
	R 9008(A,86,90)	RS1/16S221J	C 115 (B,262,98)	CKSRYB103K50
	R 9009(A,65,85)	RS1/16S473J	C 116 (B,267,97)	CKSRYB103K50
	R 9010(B,115,45)	RS1/16S512J	C 117 (A,287,109)	CCSRCH220J50
	R 9011(A,63,76)	RS1/16S102J	C 118 (B,285,109)	CCSRCH220J50
	R 9012(A,63,73)	RS1/16S0R0J	C 121 (A,280,34)	CEAT100M50
	R 9013(B,112,45)	RS1/16S471J	C 122 (A,280,25)	CEAT100M50
F	R 9014(B,104,54)	RS1/16S471J	C 123 (A,280,19)	CEAT100M50
	R 9015(B,101,54)	RS1/16S471J	C 124 (A,280,11)	CEAT100M50
	R 9016(B,99,54)	RS1/16S471J	C 125 (A,280,62)	CEAT100M50
	R 9017(B,97,54)	RS1/16S471J	C 126 (A,280,53)	CEAT100M50
	R 9018(B,95,54)	RS1/16S471J	C 127 (A,280,47)	CEAT100M50
	R 9019(B,98,76)	RS1/16S471J	C 128 (A,280,40)	CEAT100M50
	R 9020(B,99,76)	RS1/16S471J	C 131 (A,280,87)	CEAT100M50
	R 9021(B,101,76)	RS1/16S471J	C 132 (A,280,80)	CEAT100M50
	R 9022(B,103,76)	RS1/16S471J	C 133 (A,280,74)	CEAT100M50
	R 9023(B,103,68)	RS1/16S472J	C 134 (A,280,67)	CEAT100M50

Mark No.	Description	Part No.	Mark No.	Description	Part No.
C 135 (A,280,114)	CEAT100M50	C 219 (A,221,87)	CKSRYB104K16		
C 136 (A,280,106)	CEAT100M50	C 220 (A,210,93)	CKSRYB104K16		
C 137 (A,280,101)	CEAT100M50	C 221 (A,230,75)	CKSRYB103K50		
C 138 (A,280,93)	CEAT100M50	C 222 (A,243,70)	CKSRYB103K50		
C 139 (A,53,95)	CEAT100M50	C 241 (A,183,70)	CEAT2R2M50		A
C 140 (A,53,100)	CEAT100M50	C 242 (A,183,77)	CEAT2R2M50		
C 141 (A,256,82)	CKSRYB104K50	C 243 (A,192,69)	CCSRCH101J50		
C 145 (B,256,81)	CCSRCH101J50	C 244 (A,192,74)	CCSRCH101J50		
C 146 (B,258,81)	CCSRCH101J50	C 245 (A,194,69)	CCSRCH331J50		
C 147 (B,253,81)	CKSRYB103K50	C 246 (A,194,74)	CCSRCH331J50		
C 148 (B,238,67)	CKSRYB223K25	C 247 (B,193,69)	CCSRCH331J50		
C 149 (B,235,67)	CKSRYB473K25	C 248 (B,193,75)	CCSRCH331J50		
C 150 (B,231,67)	CKSQYB154K16	C 249 (A,205,69)	CEAT100M50		
C 151 (B,49,51)	CKSRYB103K50	C 250 (A,205,75)	CEAT100M50		
C 152 (B,230,62)	CKSRYB223K25	C 251 (A,204,65)	CKSRYB103K50		B
C 153 (B,234,62)	CKSRYB473K25	C 252 (A,211,78)	CKSRYB103K50		
C 154 (B,232,62)	CKSQYB154K16	C 253 (B,43,89)	CKSRYB103K50		
C 155 (A,226,62)	CEAT101M16	C 254 (A,58,108)	ELECT. CAPACITOR		
C 156 (A,229,56)	CEAT101M16	C 255 (A,51,108)	ELECT. CAPACITOR		
C 157 (A,236,56)	CEAT101M16	C 256 (A,81,105)	CEANP470M25		
C 158 (A,232,50)	CEAT101M16	C 257 (B,216,69)	CKSRYB472K50		
C 159 (A,241,50)	CEAT101M16	C 258 (B,217,75)	CKSRYB472K50		
C 160 (A,234,44)	CEAT101M16	C 261 (A,183,54)	CEAT2R2M50		
C 161 (A,241,44)	CEAT101M16	C 262 (A,183,62)	CEAT2R2M50		
C 162 (A,248,44)	CEAT101M16	C 263 (A,192,53)	CCSRCH101J50		
C 165 (A,240,86)	CEAT1R0M50	C 264 (A,191,59)	CKSRYB223K25		
C 166 (A,248,86)	CEAT1R0M50	C 265 (A,194,53)	CCSRCH331J50		
C 170 (A,236,116)	CEAT100M50	C 266 (A,194,59)	CKSRYB103K50		
C 171 (A,242,116)	CEAT100M50	C 267 (B,193,53)	CCSRCH331J50		
C 179 (B,294,76)	CKSRYB103K50	C 268 (B,193,60)	CKSRYB562K50		
C 180 (A,277,16)	CKSRYB103K50	C 269 (A,205,54)	CEAT100M50		
C 181 (A,283,30)	CCSRCH101J50	C 270 (A,205,60)	CEAT100M50		
C 182 (B,285,28)	CCSRCH101J50	C 271 (A,203,51)	CKSRYB103K50		
C 183 (B,287,14)	CCSRCH101J50	C 272 (A,210,64)	CKSRYB103K50		
C 184 (B,285,14)	CCSRCH101J50	C 277 (B,216,53)	CKSRYB472K50		
C 185 (A,286,44)	CCSRCH101J50	C 278 (B,215,61)	CKSRYB472K50		D
C 186 (B,288,42)	CCSRCH101J50	C 281 (A,183,46)	CEAT2R2M50		
C 187 (A,286,90)	CCSRCH101J50	C 282 (A,184,39)	CEAT2R2M50		
C 188 (A,284,83)	CCSRCH101J50	C 283 (A,190,44)	CCSRCH101J50		
C 189 (A,284,71)	CCSRCH101J50	C 284 (A,190,38)	CCSRCH101J50		
C 190 (B,287,70)	CCSRCH101J50	C 285 (A,194,44)	CCSRCH331J50		
C 191 (B,283,97)	CCSRCH101J50	C 286 (A,194,38)	CCSRCH331J50		
C 192 (B,285,96)	CCSRCH101J50	C 287 (B,193,45)	CCSRCH331J50		
C 197 (B,292,29)	CCSRCH101J50	C 288 (B,193,38)	CCSRCH331J50		
C 198 (B,294,25)	CCSRCH101J50	C 289 (A,205,44)	CEAT100M50		
C 199 (A,281,50)	CKSRYB103K50	C 290 (A,206,38)	CEAT100M50		E
C 201 (A,183,85)	CEAT2R2M50	C 291 (A,216,39)	CKSRYB103K50		
C 202 (A,184,92)	CEAT2R2M50	C 292 (A,216,48)	CKSRYB103K50		
C 203 (A,191,85)	CCSRCH471J50	C 297 (B,218,44)	CKSRYB472K50		
C 204 (A,191,90)	CCSRCH471J50	C 298 (B,216,39)	CKSRYB472K50		
C 205 (A,193,85)	CCSRCH331J50	C 321 (A,153,38)	CEAT100M50		
C 206 (A,194,90)	CCSRCH331J50	C 322 (A,153,45)	CEAT100M50		
C 207 (B,193,85)	CCSRCH331J50	C 323 (A,145,35)	CCSRCH101J50		
C 208 (B,193,91)	CCSRCH331J50	C 324 (A,140,47)	CCSRCH101J50		
C 213 (A,223,84)	CEAT100M50	C 325 (A,136,39)	ELECT. CAPACITOR		
C 214 (A,223,90)	CEAT100M50	C 326 (A,136,46)	ELECT. CAPACITOR		
C 215 (B,233,84)	CKSRYB103K50	C 327 (A,132,42)	CEAT220M50		
C 216 (B,231,89)	CKSRYB103K50	C 328 (A,132,38)	CKSRYB103K50		
C 217 (A,202,85)	CKSRYB103K50	C 333 (A,255,93)	CKSRYB103K50		
C 218 (A,202,90)	CKSRYB103K50	C 334 (A,268,81)	CEAT101M10		
					F

1	2	3	4		
Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	C 341 (A,161,56)	CEAT100M50	IC 601 (A,107,36) DA I/F TRANSCIEVER	AK4114VQ	
	C 342 (A,161,63)	CEAT100M50	IC 701 (A,75,29) CODEC IC	AK4628AVQ	
	C 343 (A,149,51)	CCSRCH101J50			
	C 344 (A,150,66)	CCSRCH101J50	IC 801 (A,37,39) DSP IC	DSPC56371AF180	
	C 345 (A,145,56) ELECT. CAPACITOR	CEAT220M50	IC 802 (A,33,24) IC	TC7WU04FU	
	C 346 (A,145,63) ELECT. CAPACITOR	CEAT220M50	IC 851 (A,48,17) FLASH ROM IC	PDC145A8	
	C 347 (A,140,64)	CKSRYB103K50	FLASH ROM IC	LE25FW106M	
	C 348 (A,141,58)	CKSRYB103K50	IC 871 (B,63,43) IC	TC7WH125FU	
	C 361 (A,161,70)	CEAT100M50	△ IC 901 (B,120,16) IC	NJM2391DL1-33	
	C 362 (A,169,70)	CEAT100M50			
B	C 363 (A,139,68)	CCSRCH101J50	△ IC 902 (B,94,22) REGULATOR IC	LM1117DT-ADJ	
	C 364 (A,139,84)	CKSRYB472K50	IC 951 (A,58,56) IC	TC74VHCT08AFTS1	
	C 365 (A,136,73) ELECT. CAPACITOR	CEAT220M50	IC 952 (B,19,34) OCTAL BUS BUFFER IC	TC74VHCT244AFTS1	
	C 366 (A,136,80) ELECT. CAPACITOR	CEANP4R7M50	IC 953 (A,48,56) IC	TC74VHC08FTS1	
	C 367 (A,135,88)	CKSRYB103K50	Q 801 (B,34,29) TRANSISTOR	RT1N241M	
	C 368 (A,147,75)	CKSRYB103K50	D 401 (B,117,57) DIODE	UDZS5R6(B)	
	C 370 (A,161,74)	CEAT4R7M50	D 402 (B,114,54) DIODE	UDZS5R6(B)	
	C 384 (A,167,87)	CEAT100M50	D 701 (A,79,19) DIODE	MA152WA	
	C 385 (A,167,94)	CEAT100M50	D 702 (B,80,18) DIODE	MA152WK	
C	C 386 (A,157,84)	CCSRCH101J50	D 901 (B,116,24) DIODE	UDZS5R6(B)	
	C 387 (A,157,95)	CCSRCH101J50	D 902 (B,102,19) DIODE	UDZS5R6(B)	
	C 388 (A,153,90) ELECT. CAPACITOR	CEAT220M50	L 401 (A,64,49) CHIP SOLID INDUCTOR	QTL1013	
	C 389 (A,153,97) ELECT. CAPACITOR	CEAT220M50	L 402 (A,112,60) CHIP SOLID INDUCTOR	ATL7002	
	C 390 (A,164,88)	CKSRYB103K50	L 551 (A,88,44) CHIP SOLID INDUCTOR	QTL1013	
	C 392 (B,91,95)	CKSRYB102K50	L 601 (B,103,48) CHIP SOLID INDUCTOR	QTL1013	
	C 393 (A,156,92)	CKSRYB103K50	L 602 (A,98,36) CHIP SOLID INDUCTOR	QTL1013	
	C 1031(A,286,57)	CCSRCH220J50	L 605 (A,117,29) CHIP SOLID INDUCTOR	QTL1013	
	C 1041(B,287,55)	CCSRCH220J50	L 701 (B,66,30) CHIP SOLID INDUCTOR	QTL1013	
D	C 5001(B,233,10)	CKSRYB102K50	L 702 (A,94,24) CHIP SOLID INDUCTOR	QTL1013	
	C 5002(B,235,10)	CKSRYB103K50	L 801 (A,35,25) CHIP SOLID INDUCTOR	QTL1013	
	C 5003(B,237,10)	CKSRYB105K10	L 802 (A,44,29) CHIP SOLID INDUCTOR	ATL7002	
	C 5011(A,77,16)	CEJQ100M50	L 803 (A,53,38) CHIP SOLID INDUCTOR	ATL7002	
	C 5013(A,54,17)	CCSRCH270J50	L 804 (B,30,34) CHIP SOLID INDUCTOR	QTL1013	
	C 5014(A,54,18)	CCSRCH270J50	L 851 (A,45,23) CHIP SOLID INDUCTOR	QTL1013	
	C 5015(A,59,20)	CEJQ470M16	L 871 (B,67,45) CHIP SOLID INDUCTOR	QTL1013	
	C 5016(A,54,15)	CKSRYB103K50	L 901 (B,105,19) CHIP SOLID INDUCTOR	ATL7002	
	C 5017(A,73,14)	CCSRCH561J50	L 902 (B,100,19) CHIP SOLID INDUCTOR	ATL7002	
E	C 5020(A,69,13)	CKSRYB472K50	L 951 (A,53,54) CHIP SOLID INDUCTOR	QTL1013	
	C 5025(A,166,12)	CKSRYB102K50	L 952 (B,24,43) CHIP SOLID INDUCTOR	QTL1013	
	C 5026(A,169,13)	CKSRYB102K50	L 953 (A,64,53) CHIP SOLID INDUCTOR	QTL1013	
	C 5027(A,177,12)	CKSRYB102K50	JA501 (A,140,22) PIN JACK(2P)	AKB7173	
	C 5028(A,179,13)	CCSRCH220J50	X 401 (A,68,57) CRYSTAL RESONATOR (145.1584MHz)	ASS7065	
	C 6001(A,139,18)	CKSRYB104K16	X 601 (A,106,25) CRYSTAL RESONATOR (12.288MHz)	ASS7046	
	C 9004(A,121,94)	CKSRYB103K50	X 801 (A,25,22) CRYSTAL RESONATOR (20 MHz)	VSS1171	
	C 9005(A,116,99)	CEJQ2R2M50	CN401 (A,141,41) 4P SOCKET	AKP7201	
	C 9006(A,122,88)	CKSRYB105K10			
F	C 9007(A,79,92) ELECT. CAPACITOR	CEAT331M6R3	CN601 (A,100,49) 10P CONNECTOR	VKN1414	
	C 9008(B,77,90)	CKSRYB103K50	CN701 (A,81,14) 19P SOCKET	XKP3080	
	C 9011(B,95,89)	CKSRYB473K16	CN901 (A,114,14) 13P SOCKET	XKP3077	
	C 9014(B,87,88)	CKSRYB473K16	CN951 (A,43,14) 15P SOCKET	XKP3078	
	C 9015(A,100,95)	CKSRYB102K50	CN952 (A,25,59) 12P CONNECTOR	VKN1416	
	C 9018(B,72,72)	CKSRYB104K50			
	C 9081(A,120,69)	CKSRYB103K50			

B DSP ASSY (AWX8699)

MISCELLANEOUS

IC 401 (A,80,54) XM/DT IC
 IC 402 (A,116,59) LOAD SWITCHING
 IC 551 (A,82,42) IC

F2602E-01
 AAT4618IGV-0.5-1
 TC74VHC157FTS1

RESISTORS

R 404 (B,110,58)
 R 405 (B,104,57)
 R 406 (B,110,54)
 R 407 (B,108,57)
 R 410 (A,72,58)

RS1/16S101J
 RS1/16S102J
 RS1/16S101J
 RS1/16S102J
 RS1/16S471J

Mark No.	Description	Part No.	Mark No.	Description	Part No.
R 416 (B,89,48)		RS1/16S101J	R 711 (A,73,18)		RS1/16S101J
R 417 (B,98,58)		RS1/16S104J	R 712 (A,76,18)		RS1/16S101J
R 418 (A,89,50)		RAB4C101J	R 713 (A,84,30)		RS1/16S470J
R 419 (B,100,58)		RS1/16S104J	R 714 (A,84,35)		RS1/16S101J
R 420 (B,96,58)		RS1/16S104J	R 715 (A,85,36)		RS1/16S101J
R 421 (A,89,58)		RS1/16S104J	R 716 (A,82,37)		RS1/16S101J
R 423 (A,87,58)		RS1/16S101J	R 801 (A,49,49)		RS1/16S470J
R 424 (B,90,58)		RS1/16S101J	R 802 (A,40,50)		RAB4C101J
R 425 (B,94,58)		RS1/16S101J	R 803 (B,44,48)		RS1/16S103J
R 426 (B,69,48)		RS1/16S101J	R 804 (B,42,48)		RS1/16S103J
R 427 (B,71,48)		RS1/16S101J	R 805 (B,40,48)		RS1/16S103J
R 428 (B,73,48)		RS1/16S101J	R 806 (B,38,48)		RS1/16S103J
R 429 (A,80,46)		RS1/16S101J	R 807 (B,37,42)		RS1/16S473J
R 430 (A,107,58)		RS1/16S103J	R 810 (A,26,38)		RS1/16S473J
R 431 (A,102,58)		RS1/16S0R0J	R 811 (B,28,46)		RS1/16S472J
R 501 (B,129,16)		RS1/16S750J	R 812 (B,28,43)		RS1/16S101J
R 502 (B,132,30)		RS1/16S750J	R 813 (A,22,37)		RS1/16S103J
R 514 (B,127,16)		RS1/16S0R0J	R 815 (A,26,26)		RS1/16S105J
R 515 (B,130,26)		RS1/16S0R0J	R 816 (A,24,26)		RS1/16S471J
R 516 (B,123,28)		RS1/16S100J	R 817 (A,35,28)		RS1/16S101J
R 517 (B,128,30)		RS1/16S100J	R 819 (B,26,29)		RS1/16S101J
R 562 (A,88,39)		RS1/16S470J	R 821 (B,31,29)		RS1/16S0R0J
R 563 (B,85,44)		RS1/16S101J	R 822 (B,38,30)		RS1/16S103J
R 564 (A,88,41)		RS1/16S470J	R 823 (B,37,36)		RS1/16S473J
R 565 (B,88,40)		RS1/16S101J	R 827 (B,47,38)		RS1/16S470J
R 566 (A,88,42)		RS1/16S101J	R 828 (B,42,24)		RS1/16S470J
R 567 (A,74,44)		RS1/16S101J	R 829 (B,45,32)		RS1/16S470J
R 568 (A,75,43)		RS1/16S101J	R 830 (B,47,32)		RS1/16S470J
R 569 (A,75,42)		RS1/16S470J	R 832 (A,48,41)		RS1/16S470J
R 570 (A,75,41)		RS1/16S101J	R 833 (A,50,45)		RS1/16S470J
R 571 (A,75,39)		RS1/16S470J	R 834 (A,54,46)		RS1/16S470J
R 604 (B,111,49)		RS1/16S104J	R 835 (A,50,47)		RS1/16S470J
R 605 (B,109,49)		RS1/16S104J	R 836 (A,54,48)		RS1/16S470J
R 606 (B,107,49)		RS1/16S104J	R 840 (A,17,37)		RS1/16S101J
R 609 (A,99,43)		RS1/16S0R0J	R 841 (A,65,38)		RS1/16S473J
R 610 (B,101,48)		RS1/16S0R0J	R 851 (A,45,26)		RS1/16S470J
R 613 (A,99,38)		RS1/16S101J	R 852 (B,44,24)		RS1/16S222J
R 614 (A,97,44)		RS1/16S101J	R 855 (B,44,20)		RS1/16S103J
R 615 (A,99,33)		RS1/16S470J	R 856 (A,52,19)		RS1/16S103J
R 616 (A,99,32)		RS1/16S101J	R 857 (B,46,24)		RS1/16S103J
R 617 (A,99,30)		RS1/16S101J	R 871 (B,57,36)		RS1/16S470J
R 618 (A,99,29)		RS1/16S101J	R 872 (B,59,36)		RS1/16S470J
R 620 (A,99,28)		RS1/16S470J	R 873 (B,59,44)		RS1/16S470J
R 622 (A,111,28)		RS1/16S0R0J	R 874 (B,57,44)		RS1/16S470J
R 623 (A,114,28)		RS1/16S0R0J	R 905 (B,111,19)		RS1/16S104J
R 624 (A,114,29)		RS1/16S101J	R 908 (A,121,13)		RS1/16S0R0J
R 625 (A,114,31)		RS1/16S101J	R 915 (B,89,26)		RS1/16S102J
R 626 (A,114,32)		RS1/16S101J	R 951 (A,24,32)		RS1/16S101J
R 627 (A,113,27)		RS1/16S103J	R 952 (A,23,32)		RS1/16S101J
R 628 (A,115,38)		RS1/16S1802F	R 953 (A,20,37)		RS1/16S101J
R 701 (B,76,35)		RS1/16S470J	R 954 (B,19,16)		RS1/16S101J
R 702 (B,72,35)		RS1/16S101J	R 955 (B,17,16)		RS1/16S101J
R 703 (B,62,26)		RS1/16S0R0J	R 956 (A,15,31)		RS1/16S101J
R 704 (B,68,27)		RS1/16S4R7J	R 957 (A,17,31)		RS1/16S101J
R 705 (A,58,18)		RS1/16S101J	R 958 (A,18,31)		RS1/16S101J
R 706 (A,61,18)		RS1/16S101J	R 959 (A,19,31)		RS1/16S101J
R 707 (A,63,18)		RS1/16S101J	R 960 (A,21,31)		RS1/16S101J
R 708 (A,66,18)		RS1/16S101J	R 961 (A,21,34)		RS1/16S101J
R 709 (A,68,18)		RS1/16S101J	R 962 (A,27,18)		RS1/16S104J
R 710 (A,71,18)		RS1/16S101J	R 963 (A,29,52)		RS1/16S104J

Mark No.	Description	Part No.	Mark No.	Description	Part No.
R 964 (A,26,52)	RESISTOR ARRAY	RAB4C104J	C 717 (A,83,27)		CCSRCH471J50
R 965 (B,34,56)		RS1/16S104J	C 718 (A,85,20)		CEVW470M6R3
A R 966 (A,53,61)		RS1/16S331J	C 720 (A,83,24)		CKSRYB104K16
R 967 (A,28,18)		RS1/16S104J	C 763 (B,52,30)		CCSRCH471J50
R 968 (A,30,18)		RS1/16S104J	C 764 (B,54,30)		CKSRYB104K16
R 969 (A,31,18)		RS1/16S104J	C 801 (A,44,49)		CCSRCH471J50
R 970 (A,34,18) RESISTOR ARRAY		RAB4C104J	C 802 (A,44,50)		CKSRYB104K16
R 971 (A,59,61)		RS1/16S331J	C 803 (A,37,49)		CCSRCH471J50
R 972 (A,56,61)		RS1/16S331J	C 804 (A,37,50)		CKSRYB104K16
R 973 (A,53,59)		RS1/16S331J	C 805 (A,32,49)		CCSRCH471J50
R 977 (B,46,57)		RS1/16S101J	C 806 (A,32,50)		CKSRYB104K16
R 978 (B,50,57)		RS1/16S101J	C 807 (A,27,44)		CCSRCH471J50
B R 979 (B,46,53)		RS1/16S101J	C 808 (A,26,44)		CKSRYB104K16
R 980 (B,53,57)		RS1/16S101J	C 809 (A,27,41)		CCSRCH471J50
CAPACITORS			C 810 (A,26,41)		CKSRYB104K16
C 401 (A,69,49)		CEVW470M6R3	C 814 (A,27,33)		CCSRCH471J50
C 402 (A,81,60)		CKSRYB104K16	C 815 (A,26,33)		CKSRYB104K16
C 403 (A,81,61)		CCSRCH471J50	C 816 (A,21,26)		CCSRCH8R0D50
C 404 (B,106,57)		CKSRYB104K16	C 817 (A,29,26)		CCSRCH8R0D50
C 405 (B,112,58)		CKSRYB104K16	C 818 (A,35,22)		CCSRCH471J50
C 406 (B,112,54)		CKSRYB104K16	C 819 (A,37,22)		CKSRYB104K16
C 407 (A,121,54)		CEVW101M16	C 821 (A,30,30)		CCSRCH471J50
C 408 (A,120,58)		CKSRYB104K16	C 822 (A,30,28)		CKSRYB104K16
C 409 (A,71,58)		CCSRCH100D50	C 823 (A,32,30)		CCSRCH471J50
C 410 (A,71,56)		CCSRCH100D50	C 824 (A,32,28)		CKSRYB104K16
C 413 (A,115,56)		CKSQYB105K16	C 825 (B,33,39)		CKSRYB103K50
C 503 (B,125,16)		CKSRYB103K50	C 826 (A,38,30)		CCSRCH471J50
C 504 (B,130,30)		CKSRYB103K50	C 827 (A,38,29)		CKSRYB104K16
C 551 (A,85,47)		CKSRYB104K16	C 828 (A,48,35)		CCSRCH471J50
C 552 (A,85,45)		CCSRCH471J50	C 829 (A,49,35)		CKSRYB104K16
C 605 (A,99,41)		CCSRCH471J50	C 830 (A,48,38)		CCSRCH471J50
C 606 (A,100,41)		CKSRYB104K16	C 831 (A,49,38)		CKSRYB104K16
C 607 (A,94,39)		CEVW470M6R3	C 832 (A,48,43)		CCSRCH471J50
C 608 (A,99,36)		CCSRCH471J50	C 833 (A,49,43)		CKSRYB104K16
D C 609 (A,100,36)		CKSRYB104K16	C 834 (A,41,23)		CEVW101M16
C 612 (A,103,28)		CCSRCH120J50	C 835 (A,55,42) CHIP ELECT.CAPACITOR		CEVW101M4
C 613 (A,107,28)		CCSRCH120J50	C 851 (A,45,18)		CCSRCH471J50
C 614 (B,111,28)		CKSRYB104K16	C 852 (A,43,18)		CKSRYB104K16
C 617 (B,113,28)		CKSRYB102K50	C 871 (B,66,41)		CCSRCH471J50
C 618 (A,121,31)		CEVW470M6R3	C 872 (B,68,41)		CKSRYB104K16
C 619 (A,116,35)		CKSRYB104K16	C 907 (B,114,24)		CKSRYB104K16
C 620 (A,114,35)		CCSRCH471J50	C 908 (A,121,23)		CEVW101M16
C 621 (A,114,38)		CKSRYB474K10	C 909 (A,96,20) CHIP ELECT.CAPACITOR		CEVW101M4
C 701 (A,65,32)		CKSRYB103K50	C 916 (B,67,34)		CCSRCH471J50
C 702 (A,66,32)		CCSRCH471J50	C 917 (B,69,34)		CKSRYB103K50
E C 703 (A,62,23)		CEVW101M16	C 918 (B,79,36)		CKSRYB104K16
C 704 (A,65,29)		CKSRYB104K16	C 919 (B,80,36)		CCSRCH471J50
C 705 (A,66,29)		CCSRCH101J50	C 951 (A,52,56)		CCSRCH471J50
C 706 (B,64,26)		CKSRYB104K16	C 952 (A,54,56)		CKSRYB105K6R3
C 707 (B,58,19)		CCSRCH471J50	C 954 (B,24,34)		CCSRCH471J50
C 708 (B,61,19)		CCSRCH471J50	C 955 (B,26,34)		CKSQYB105K16
C 709 (B,63,19)		CCSRCH471J50	C 956 (A,64,56)		CKSQYB105K16
C 710 (B,66,19)		CCSRCH471J50	C 957 (A,62,56)		CCSRCH471J50
C 711 (B,68,19)		CCSRCH471J50			
C 712 (B,71,19)		CCSRCH471J50			
F C 713 (B,73,19)		CCSRCH471J50			
C 714 (B,76,19)		CCSRCH471J50			
C 715 (A,88,29)		CEVW101M16			
C 716 (A,84,27)		CKSRYB104K16			

**B DSP ASSY (AWX8572)
MISCELLANEOUS**

IC 501 (B,118,52) IC
IC 601 (A,107,50) DA I/F TRANSCEIVER

TC74HCU04AF
AK4114VQ

Mark No.	Description	Part No.	Mark No.	Description	Part No.
IC 701 (A,75,43)	CODEC IC	AK4628AVQ	R 559 (B,81,62)		RS1/16S104J
IC 801 (A,42,53)	DSP IC	DSPC56371AF180	R 560 (B,83,62)		RS1/16S104J
IC 802 (A,44,38)	IC	TC7WU04FU	R 561 (B,85,62)		RS1/16S104J
IC 851 (A,55,39)	FLASH ROM IC	PDC145A8	R 572 (A,90,54)		RS1/16S0R0J
FLASH ROM IC		LE25FW106M	R 573 (B,90,54)		RS1/16S0R0J
IC 871 (B,63,53)	IC	TC7WH125FU	R 574 (B,76,56)		RS1/16S0R0J
△ IC 901 (B,120,30)	IC	NJM2391DL1-33			A
△ IC 902 (B,94,36)	REGULATOR IC	LM1117DT-ADJ	R 575 (B,74,56)		RS1/16S0R0J
IC 952 (B,19,48)	OCTAL BUS BUFFER IC	TC7VHCT244AFTS1	R 577 (B,93,61)		RS1/16S104J
Q 801 (B,39,43)	TRANSISTOR	UN5212	R 579 (A,96,58)		RS1/16S0R0J
D 701 (A,79,33)	DIODE	DAP202K	R 601 (A,110,57)		RS1/16S0R0J
D 702 (B,80,32)	DIODE	DAN202K	R 602 (A,109,57)		RS1/16S0R0J
D 901 (B,116,38)	DIODE	UDZS5R6(B)	R 603 (A,107,57)		RS1/16S0R0J
D 902 (B,102,33)	DIODE	UDZS5R6(B)	R 604 (B,111,63)		RS1/16S104J
R 605 (B,109,63)			R 605 (B,109,63)		RS1/16S104J
L 501 (B,127,29)	CHIP SOLID INDUCTOR	QTL1013	R 606 (B,107,63)		RS1/16S104J
L 502 (B,130,40)	CHIP SOLID INDUCTOR	QTL1013	R 607 (A,106,57)		RS1/16S0R0J
L 503 (A,122,62)	CHIP SOLID INDUCTOR	QTL1013			B
L 601 (B,103,62)	CHIP SOLID INDUCTOR	QTL1013	R 609 (A,99,57)		RS1/16S0R0J
L 602 (A,98,49)	CHIP SOLID INDUCTOR	QTL1013	R 610 (B,101,62)		RS1/16S0R0J
L 605 (A,117,43)	CHIP SOLID INDUCTOR	QTL1013	R 612 (A,96,47)		RS1/16S0R0J
L 701 (B,66,43)	CHIP SOLID INDUCTOR	QTL1013	R 613 (A,99,52)		RS1/16S101J
L 702 (A,94,38)	CHIP SOLID INDUCTOR	QTL1013	R 614 (A,97,58)		RS1/16S101J
L 801 (A,47,38)	CHIP SOLID INDUCTOR	QTL1013	R 615 (A,99,47)		RS1/16S470J
L 802 (A,50,42)	CHIP SOLID INDUCTOR	ATL7002	R 616 (A,99,46)		RS1/16S101J
L 803 (A,58,52)	CHIP SOLID INDUCTOR	ATL7002	R 617 (A,99,44)		RS1/16S101J
L 804 (B,35,48)	CHIP SOLID INDUCTOR	QTL1013	R 618 (A,99,43)		RS1/16S470J
L 851 (A,51,42)	CHIP SOLID INDUCTOR	QTL1013	R 620 (A,99,41)		C
L 871 (B,68,56)	CHIP SOLID INDUCTOR	QTL1013	R 622 (A,111,42)		RS1/16S0R0J
L 901 (B,105,32)	CHIP SOLID INDUCTOR	ATL7002	R 623 (A,114,42)		RS1/16S0R0J
L 902 (B,100,33)	CHIP SOLID INDUCTOR	ATL7002	R 624 (A,114,43)		RS1/16S101J
L 952 (B,25,56)	CHIP SOLID INDUCTOR	QTL1013	R 625 (A,114,44)		RS1/16S101J
JA501 (A,140,35)	JACK	AKB7131	R 626 (A,114,46)		RS1/16S101J
X 601 (A,106,39)	CRYSTAL RESONATOR (12.288MHz)	ASS7046	R 627 (A,113,40)		RS1/16S103J
X 801 (A,36,36)	CRYSTAL RESONATOR (20 MHz)	VSS1171	R 628 (A,115,51)		RS1/16S1802F
CN601 (A,100,63)	10P CONNECTOR	VKN1414	R 629 (A,115,53)		RS1/16S0R0J
CN701 (A,81,28)	19P SOCKET	XKP3080	R 630 (A,115,57)		RS1/16S0R0J
CN902 (A,114,28)	13P SOCKET	XKP3077	R 701 (B,76,49)		D
CN952 (A,43,28)	15P SOCKET	XKP3078	R 702 (B,72,49)		RS1/16S101J
R 703 (B,62,40)			R 703 (B,62,40)		RS1/16S0R0J
R 704 (B,68,41)			R 704 (B,68,41)		RS1/16S4R7J
R 705 (A,58,32)			R 705 (A,58,32)		RS1/16S101J
R 706 (A,61,32)			R 706 (A,61,32)		RS1/16S101J
RESISTORS					
R 501 (B,129,29)		RS1/16S750J	R 707 (A,63,32)		RS1/16S101J
R 502 (B,127,42)		RS1/16S750J	R 708 (A,66,32)		RS1/16S101J
R 503 (B,123,42)		RS1/16S473J	R 709 (A,68,32)		RS1/16S101J
R 504 (A,117,62)		RS1/16S473J	R 710 (A,71,32)		RS1/16S101J
R 505 (A,115,62)		RS1/16S0R0J	R 711 (A,73,32)		RS1/16S101J
R 506 (B,123,38)		RS1/16S222J	R 712 (A,76,32)		E
R 507 (A,118,62)		RS1/16S222J	R 713 (A,84,44)		RS1/16S101J
R 508 (B,121,42)		RS1/16S101J	R 714 (A,84,49)		RS1/16S470J
R 509 (B,117,62)		RS1/16S101J	R 715 (A,85,50)		RS1/16S101J
R 512 (B,121,62)		RS1/16S101J	R 716 (A,82,51)		RS1/16S101J
R 513 (B,123,62)		RS1/16S101J	R 801 (A,54,63)		RS1/16S470J
R 551 (B,63,60)		RS1/16S104J	R 802 (A,45,64)		RAB4C101J
R 552 (B,65,60)		RS1/16S104J	R 803 (B,50,62)		RS1/16S103J
R 553 (B,67,60)		RS1/16S104J	R 804 (B,48,62)		RS1/16S103J
R 554 (B,69,60)		RS1/16S104J	R 805 (B,46,62)		RS1/16S103J
R 555 (B,71,60)		RS1/16S104J	R 806 (B,44,62)		F
R 556 (B,75,60)		RS1/16S104J	R 807 (B,42,56)		RS1/16S103J
R 557 (B,77,60)		RS1/16S104J	R 808 (B,35,56)		RS1/16S472J
R 558 (B,79,60)		RS1/16S104J	R 809 (B,40,56)		RS1/16S472J

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	R 810 (A,31,52)	RS1/16S473J	C 503 (B,125,29)	CKSRYB103K50	
	R 811 (B,30,51)	RS1/16S472J	C 504 (B,125,42)	CKSRYB103K50	
	R 812 (B,32,51)	RS1/16S101J	C 505 (B,125,38)	CCSRCH470J50	
	R 813 (A,27,49)	RS1/16S103J	C 506 (A,121,62)	CCSRCH470J50	
	R 815 (A,38,40)	RS1/16S105J	C 511 (B,125,52)	CCSRCH471J50	
	R 816 (A,35,40)	RS1/16S471J	C 512 (B,127,52)	CKSRYB105K6R3	
	R 817 (A,44,42)	RS1/16S101J	C 513 (A,121,56)	CEVV101M16	
	R 819 (B,38,49)	RS1/16S101J	C 605 (A,99,55)	CCSRCH471J50	
	R 821 (B,37,43)	RS1/16S0R0J	C 606 (A,100,55)	CKSRYB104K16	
	R 822 (B,42,44)	RS1/16S103J	C 607 (A,94,53)	CEVV470M6R3	
	R 823 (B,43,50)	RS1/16S473J	C 608 (A,99,49)	CCSRCH471J50	
B	R 827 (B,51,51)	RS1/16S470J	C 609 (A,100,49)	CKSRYB104K16	
	R 828 (A,54,44)	RS1/16S470J	C 612 (A,103,42)	CCSRCH120J50	
	R 829 (A,56,48)	RS1/16S470J	C 613 (A,107,42)	CCSRCH120J50	
	R 830 (A,57,48)	RS1/16S470J	C 614 (B,111,41)	CKSRYB104K16	
	R 832 (A,53,54)	RS1/16S470J	C 617 (B,117,42)	CKSRYB102K50	
C	R 833 (A,57,57)	RS1/16S470J	C 618 (A,121,45)	CEVV470M6R3	
	R 834 (A,57,58)	RS1/16S470J	C 619 (A,116,48)	CKSRYB104K16	
	R 835 (A,57,60)	RS1/16S470J	C 620 (A,114,48)	CCSRCH471J50	
	R 836 (A,57,61)	RS1/16S470J	C 621 (A,114,51)	CKSRYB474K10	
	R 840 (A,23,49)	RS1/16S101J	C 701 (A,65,47)	CKSRYB103K50	
D	R 841 (A,63,46)	RS1/16S473J	C 702 (A,66,47)	CCSRCH471J50	
	R 851 (A,53,45)	RS1/16S470J	C 703 (A,62,38)	CEVV101M16	
	R 852 (B,53,45)	RS1/16S222J	C 704 (A,65,44)	CKSRYB104K16	
	R 853 (A,56,34)	RS1/16S0R0J	C 705 (A,66,44)	CCSRCH101J50	
	R 855 (B,53,41)	RS1/16S103J	C 706 (B,64,40)	CKSRYB104K16	
E	R 856 (A,57,45)	RS1/16S103J	C 707 (B,58,33)	CCSRCH471J50	
	R 857 (B,55,44)	RS1/16S103J	C 708 (B,61,33)	CCSRCH471J50	
	R 871 (B,58,48)	RS1/16S470J	C 709 (B,63,33)	CCSRCH471J50	
	R 872 (B,60,48)	RS1/16S470J	C 710 (B,66,33)	CCSRCH471J50	
	R 873 (B,60,56)	RS1/16S470J	C 711 (B,68,33)	CCSRCH471J50	
F	R 874 (B,58,56)	RS1/16S470J	C 712 (B,71,33)	CCSRCH471J50	
	R 904 (B,113,31)	RS1/16S104J	C 713 (B,73,33)	CCSRCH471J50	
	R 905 (B,111,33)	RS1/16S104J	C 714 (B,76,33)	CCSRCH471J50	
	R 906 (B,107,31)	RS1/16S104J	C 715 (A,88,42)	CEVV101M16	
	R 908 (A,121,27)	RS1/16S0R0J	C 716 (A,84,41)	CKSRYB104K16	
G	R 913 (A,85,30)	RS1/16S0R0J	C 717 (A,83,41)	CCSRCH471J50	
	R 915 (B,89,37)	RS1/16S102J	C 718 (A,85,33)	CEVV470M6R3	
	R 951 (A,26,49)	RS1/16S101J	C 720 (A,83,38)	CKSRYB104K16	
	R 952 (A,25,49)	RS1/16S101J	C 801 (A,49,63)	CCSRCH471J50	
	R 953 (A,22,49)	RS1/16S101J	C 802 (A,49,64)	CKSRYB104K16	
H	R 954 (B,22,39)	RS1/16S331J	C 803 (A,42,63)	CCSRCH471J50	
	R 955 (B,20,39)	RS1/16S331J	C 804 (A,42,64)	CKSRYB104K16	
	R 956 (B,18,39)	RS1/16S331J	C 805 (A,37,63)	CCSRCH471J50	
	R 957 (B,16,39)	RS1/16S331J	C 806 (A,37,64)	CKSRYB104K16	
	R 958 (A,17,44)	RS1/16S331J	C 807 (A,32,58)	CCSRCH471J50	
I	R 959 (A,18,44)	RS1/16S331J	C 808 (A,31,58)	CKSRYB104K16	
	R 960 (A,19,45)	RS1/16S331J	C 809 (A,32,55)	CCSRCH471J50	
	R 961 (A,21,45)	RS1/16S331J	C 810 (A,31,55)	CKSRYB104K16	
	R 962 (A,20,31)	RESISTOR ARRAY	RAB4C104J	C 814 (A,32,47)	CCSRCH471J50
	R 967 (A,29,32)	RS1/16S104J	C 815 (A,31,47)	CKSRYB104K16	
J	R 968 (A,31,32)	RS1/16S104J	C 816 (A,32,40)	CCSRCH8R0D50	
	R 969 (A,33,32)	RS1/16S104J	C 817 (A,41,40)	CCSRCH8R0D50	
	R 970 (A,37,32)	RESISTOR ARRAY	RAB4C104J	C 818 (A,46,34)	CCSRCH471J50
	R 974 (A,42,32)	RS1/16S0R0J	C 819 (A,46,33)	CKSRYB104K16	
	R 975 (A,15,52)	RS1/16S101J	C 820 (A,46,31)	CKSRYB103K50	
K	R 976 (A,16,52)	RS1/16S101J	C 821 (A,35,43)	CCSRCH471J50	
	R 983 (B,15,32)	RS1/16S0R0J	C 822 (A,35,42)	CKSRYB104K16	
			C 823 (A,37,43)	CCSRCH471J50	

Mark No.	Description	Part No.	Mark No.	Description	Part No.
C 824 (A,37,42)		CKSRYB104K16	Q 721 (A,142,71)	TRANSISTOR	2SA1145
C 825 (B,38,52)		CKSRYB103K50	Q 722 (A,161,74)	TRANSISTOR	2SC2240
C 826 (A,44,44)		CCSRCH471J50	Q 801 (B,277,141)	DIGITAL TR(SC-70)	RT1P241M
C 827 (A,41,44)		CKSRYB104K16	Q 802 (B,274,145)	TRANSISTOR	RT1N241M
C 828 (A,53,48)		CCSRCH471J50	Q 803 (B,265,140)	DIGITAL TR(SC-70)	RT1P241M
C 829 (A,54,48)		CKSRYB104K16	Q 804 (B,268,145)	TRANSISTOR	RT1N241M
C 830 (A,53,52)		CCSRCH471J50	Q 805 (B,277,146)	DIGITAL TR(SC-70)	RT1P241M
C 831 (A,54,52)		CKSRYB104K16	Q 806 (B,271,145)	TRANSISTOR	RT1N241M
C 832 (A,53,57)		CCSRCH471J50	Q 807 (B,276,53)	CHIP TR(2*PNP)	RN2903
C 833 (A,54,57)		CKSRYB104K16	Q 808 (B,283,56)	CHIP TRANSISTOR	RN1903
C 834 (A,52,28)		CEVV101M16	Q 809 (A,266,101)	TRANSISTOR	2SD1858X
C 835 (A,63,52)		CEVV101M16	D 601 (A,125,57)	DIODE	1SS133
C 851 (A,51,38)		CCSRCH471J50	D 602 (A,267,17)	ZENER DIODE	MTZJ15A
C 852 (A,50,38)		CKSRYB104K16	D 603 (A,119,57)	DIODE	1SS133
C 871 (B,66,52)		CCSRCH471J50	D 604 (A,261,21)	ZENER DIODE	MTZJ15A
C 872 (B,68,52)		CKSRYB104K16	D 606 (A,259,57)	DIODE	1SS133
C 907 (B,114,38)		CKSRYB104K16	D 608 (A,253,52)	DIODE	1SS133
C 908 (A,121,37)		CEVV101M16	D 631 (A,192,61)	DIODE	1SS133
C 909 (A,96,34)		CEVV101M16	D 632 (A,176,52)	DIODE	1SS133
C 916 (B,67,47)		CCSRCH471J50	D 647 (A,200,17)	ZENER DIODE	MTZJ15A
C 917 (B,69,47)		CKSRYB103K50	D 648 (A,196,21)	ZENER DIODE	MTZJ15A
C 918 (B,79,49)		CKSRYB104K16	D 651 (A,192,57)	DIODE	1SS133
C 919 (B,80,49)		CCSRCH471J50	D 652 (A,262,57)	DIODE	1SS133
C 954 (B,26,52)		CCSRCH471J50	D 653 (A,186,52)	DIODE	1SS133
C 955 (B,28,52)		CKSRYB104K16	D 654 (A,242,52)	DIODE	1SS133
C 956 (A,24,54)		CEVV100M16	D 681 (A,132,17)	ZENER DIODE	MTZJ15A
			D 682 (A,129,22)	ZENER DIODE	MTZJ15A
			D 683 (A,135,58)	DIODE	1SS133
			D 684 (A,65,72)	DIODE	1SS133
			△ D 701 (A,9,88)	DIODE	D5SBA20(B)
			△ D 702 (A,9,126)	DIODE	D5SBA20(B)
			D 703 (B,252,76)	DIODE	1SS355
			D 711 (A,196,103)	ZENER DIODE	MTZJ22D
			D 712 (A,192,103)	DIODE	MTZJ6R8(B)
			D 713 (A,120,78)	DIODE	1SS133
			D 752 (B,170,135)	DIODE	1SS355
			D 754 (B,141,132)	DIODE	1SS355
			D 758 (B,73,136)	DIODE	1SS355
			D 777 (A,127,57)	DIODE	1SS133
			D 778 (A,108,57)	DIODE	1SS133
			△ D 801 (B,221,113)	BRIDGE DIODE	S1WB(A)60SD
			D 805 (A,276,131)	DIODE	1SS133
			D 806 (A,287,62)	DIODE	MTZJ6R2(B)
			D 807 (A,284,67)	DIODE	1SS133
			D 827 (A,262,133)	DIODE	MTZJ6R2(B)
			D 828 (A,239,98)	DIODE	MTZJ6R2(B)
			△ D 829 (A,239,128)	DIODE	D3SBA20(B)
			L 501 (A,97,118)	COIL	ATH1004
			L 751 (A,160,108)	COIL	ATH1004
			L 752 (A,173,108)	COIL	ATH1004
			L 753 (A,120,107)	COIL	ATH1004
			L 754 (A,78,118)	COIL	ATH1004
			L 761 (A,130,108)	COIL	ATH1004
			L 762 (A,142,108)	COIL	ATH1004
			J 43 JUMPER WIRE 11P		D20PYY1120E
			KN601 (A,65,23)	WRAPPING TERMINAL	VNF1084
			RY501 (A,75,132)	RELAY	XSR3012
			RY751 (A,173,130)	RELAY	XSR3012
			RY752 (A,141,126)	RELAY	XSR3012
			RY753 (A,117,120)	RELAY	XSR3012

C POWER PACK ASSY (XWZ4087)

MISCELLANEOUS

△ IC 601 (A,265,14)	POWER PACK 2CH	STK412-230C	△ D 701 (A,9,88)	DIODE	D5SBA20(B)
△ IC 602 (A,199,14)	POWER PACK 2CH	STK412-230C	△ D 702 (A,9,126)	DIODE	D5SBA20(B)
△ IC 603 (A,132,14)	POWER PACK 3CH	STK413-230C	D 703 (B,252,76)	DIODE	1SS355
△ IC 610 (A,59,28)	PROTECTOR(1A)	AEK7009	D 711 (A,196,103)	ZENER DIODE	MTZJ22D
△ IC 803 (A,238,87)	IC	TA7805S	D 712 (A,192,103)	DIODE	MTZJ6R8(B)
△ IC 804 (A,282,111)	REGULATOR IC	TA7809S	D 713 (A,120,78)	DIODE	1SS133
△ IC 805 (B,271,135)	IC	BA178M05FP	D 752 (B,170,135)	DIODE	1SS355
Q 501 (B,85,42)	CHIP TRANSISTOR	2SD2704K	D 754 (B,141,132)	DIODE	1SS355
Q 505 (A,111,47)	TRANSISTOR	2SC2240	D 758 (B,73,136)	DIODE	1SS355
Q 601 (B,93,47)	CHIP TRANSISTOR	2SD2704K	D 777 (A,127,57)	DIODE	1SS133
Q 602 (B,227,45)	CHIP TRANSISTOR	2SD2704K	D 778 (A,108,57)	DIODE	1SS133
Q 605 (A,118,40)	TRANSISTOR	2SC2240	△ D 801 (B,221,113)	BRIDGE DIODE	S1WB(A)60SD
Q 606 (A,252,40)	TRANSISTOR	2SC2240	D 805 (A,276,131)	DIODE	1SS133
Q 631 (B,153,42)	CHIP TRANSISTOR	2SD2704K	D 806 (A,287,62)	DIODE	MTZJ6R2(B)
Q 633 (A,178,47)	TRANSISTOR	2SC2240	D 807 (A,284,67)	DIODE	1SS133
Q 651 (B,161,45)	CHIP TRANSISTOR	2SD2704K	D 827 (A,262,133)	DIODE	MTZJ6R2(B)
Q 652 (B,219,42)	CHIP TRANSISTOR	2SD2704K	D 828 (A,239,98)	DIODE	MTZJ6R2(B)
Q 655 (A,186,40)	TRANSISTOR	2SC2240	△ D 829 (A,239,128)	DIODE	D3SBA20(B)
Q 656 (A,244,47)	TRANSISTOR	2SC2240	L 501 (A,97,118)	COIL	ATH1004
Q 681 (B,72,63)	CHIP TRANSISTOR	2SD2704K	L 751 (A,160,108)	COIL	ATH1004
Q 683 (A,59,65)	TRANSISTOR	2SC2240	L 752 (A,173,108)	COIL	ATH1004
Q 696 (B,284,22)	TRANSISTOR	2SC4081	L 753 (A,120,107)	COIL	ATH1004
Q 697 (B,282,26)	TRANSISTOR	2SC4081	L 754 (A,78,118)	COIL	ATH1004
Q 698 (B,246,67)	TRANSISTOR	RT1N241M	L 761 (A,130,108)	COIL	ATH1004
△ Q 701 (A,110,75)	TRANSISTOR	2SC5511	L 762 (A,142,108)	COIL	ATH1004
△ Q 702 (A,96,86)	TRANSISTOR	2SA2005	J 43 JUMPER WIRE 11P		D20PYY1120E
Q 703 (A,155,76)	TRANSISTOR	2SA1145	KN601 (A,65,23)	WRAPPING TERMINAL	VNF1084
Q 704 (A,166,79)	TRANSISTOR	2SC2240	RY501 (A,75,132)	RELAY	XSR3012
Q 705 (B,245,74)	CHIP TRANSISTOR	RN4903	RY751 (A,173,130)	RELAY	XSR3012
Q 707 (B,241,74)	CHIP TRANSISTOR	RN4903	RY752 (A,141,126)	RELAY	XSR3012
			RY753 (A,117,120)	RELAY	XSR3012

Mark No.**Description****Part No.****Mark No.****Description****Part No.**

A	CN604 (A,87,134) CONNECTOR	CKS3373	R 664 (A,238,21)	RD1/4PU273J
	CN701 (A,212,134) 11PJUMPER CONNECTOR	52147-1110	R 665 (A,190,36)	RD1/4PU331J
	CN702 (A,201,106) 6P JUMPER CONNECTOR	52147-0610	R 666 (A,240,35)	RD1/4PU331J
	CN705 (A,295,40) 21P PLUG	XKM3011	⚠ R 667 (A,182,31) RESISTOR (0.22, 5W)	ACN7094
	CN751 SP TERMINAL 8-P(V0)	XKE3039	⚠ R 668 (A,239,31) RESISTOR (0.22, 5W)	ACN7094
	CN752 SP TERMINAL 6-P(V0)	XKE3040	R 669 (A,189,52)	RD1/4PU182J
B	CN803 (A,231,129) 6P PLUG	KM200TA6	R 670 (A,245,52)	RD1/4PU182J
	CN805 (A,317,153) 13P PLUG	XKP3066	R 671 (A,192,49)	RD1/4PU821J
	CN806 19P PLUG	XKP3069	R 672 (A,240,57)	RD1/4PU821J
	CN807 (A,317,82) 15P PLUG	XKP3067	R 673 (A,184,48)	RD1/4PU223J
	CN815 (A,295,79) 19P PLUG	XKM3005	R 674 (A,236,38)	RD1/4PU223J
	CN816 (A,295,126) 21P PLUG	XKM3011	R 681 (A,66,63)	RD1/4PU222J
C	CN817 (A,308,38) CONNECTOR	CKS3382	R 682 (B,76,63)	RS1/16S103J
	810 (A,277,90) 11P CABLE HOLDER	51048-1100	R 685 (A,77,41)	RD1/4PU273J
	RESISTORS		R 686 (A,79,35)	RD1/4PU821J
	R 601 (A,96,56)	RD1/4PU222J	R 687 (A,83,10)	RD1/4PU273J
	R 602 (A,230,52)	RD1/4PU222J	R 688 (A,135,27)	RD1/4PU562J
	R 603 (B,93,52)	RS1/16S103J	R 689 (A,133,27)	RD1/4PU562J
D	R 604 (B,226,49)	RS1/16S103J	R 690 (A,60,52)	RD1/4PU331J
	R 609 (A,91,35)	RD1/4PU273J	⚠ R 691 (A,55,55) RESISTOR (0.22, 5W)	ACN7094
	R 610 (A,225,35)	RD1/4PU273J	R 692 (A,70,72)	RD1/4PU182J
	R 611 (A,90,28)	RD1/4PU821J	R 693 (A,67,77)	RD1/4PU821J
	R 612 (A,223,28)	RD1/4PU821J	R 694 (A,62,72)	RD1/4PU223J
	R 613 (A,114,21)	RD1/4PU273J	R 695 (A,97,22)	RD1/4PU333J
E	R 614 (A,247,21)	RD1/4PU273J	R 696 (B,281,38)	RS1/16S103J
	R 615 (A,123,36)	RD1/4PU331J	R 697 (B,255,68)	RS1/16S103J
	R 616 (A,270,29)	RD1/4PU562J	R 698 (B,243,67)	RS1/16S333J
	⚠ R 617 (A,114,31) RESISTOR (0.22, 5W)	ACN7094	R 699 (A,165,21)	RD1/4PU333J
	R 618 (A,266,28)	RD1/4PU562J	R 701 (A,117,78)	RD1/4PU562J
	R 619 (A,122,52)	RD1/4PU182J	R 702 (A,101,84)	RD1/4PU562J
F	R 620 (A,257,36)	RD1/4PU331J	R 703 (A,151,72)	RD1/4PU203J
	R 621 (A,124,49)	RD1/4PU821J	R 704 (A,147,76)	RD1/4PU203J
	⚠ R 622 (A,248,31) RESISTOR (0.22, 5W)	ACN7094	R 705 (A,283,85)	RD1/4PU473J
	R 623 (A,116,48)	RD1/4PU223J	R 706 (A,283,75)	RD1/4PU473J
	R 624 (A,257,52)	RD1/4PU182J	R 707 (A,135,77)	RD1/4PU184J
	R 626 (A,258,49)	RD1/4PU821J	R 708 (A,147,81)	RD1/4PU184J
G	R 628 (A,250,48)	RD1/4PU223J	R 709 (A,104,72) METAL OXIDE RESISTOR	RS1LMF272J
	R 630 (A,230,21)	RD1/4PU333J	⚠ R 710 (A,89,93) METAL OXIDE RESISTOR	RS1LMF272J
	R 631 (A,148,46)	RD1/4PU222J	⚠ R 711 (A,181,86) METAL OXIDE RESISTOR	RS2LMF242J
	R 632 (B,152,47)	RS1/16S103J	R 713 (A,117,81)	RD1/4PU102J
	R 635 (A,153,29)	RD1/4PU273J	R 714 (B,252,68)	RS1/16S102J
	R 636 (A,149,25)	RD1/4PU821J	R 715 (B,250,75)	RS1/16S103J
H	R 637 (A,172,21)	RD1/4PU273J	R 716 (B,247,75)	RS1/16S103J
	R 638 (A,174,36)	RD1/4PU331J	R 721 (A,125,77)	RD1/4PU682J
	⚠ R 639 (A,173,31) RESISTOR (0.22, 5W)	ACN7094	R 722 (A,123,77)	RD1/4PU682J
	R 640 (A,179,57)	RD1/4PU182J	R 723 (A,276,78)	RD1/4PU473J
	R 641 (A,174,52)	RD1/4PU821J	R 724 (A,279,83)	RD1/4PU473J
	R 642 (A,169,39)	RD1/4PU223J	R 725 (A,276,74)	RD1/4PU103J
I	R 647 (A,202,27)	RD1/4PU562J	R 726 (B,291,59)	RS1/16S103J
	R 648 (A,199,27)	RD1/4PU562J	R 727 (B,287,59)	RS1/16S103J
	R 651 (A,164,56)	RD1/4PU222J	⚠ R 751 (A,158,119) CARBON FILM RESISTOR	RD1/4PUF101J
	R 652 (A,215,41)	RD1/4PU222J	⚠ R 752 (A,185,120) CARBON FILM RESISTOR	RD1/4PUF101J
	R 653 (B,160,50)	RS1/16S103J	⚠ R 753 (A,156,126) METAL OXIDE RESISTOR	RS1LMF4R7J
	R 654 (B,219,46)	RS1/16S103J	⚠ R 754 (A,181,126) METAL OXIDE RESISTOR	RS1LMF4R7J
J	R 659 (A,159,35)	RD1/4PU273J	⚠ R 755 (A,103,117) CARBON FILM RESISTOR	RD1/4PUF101J
	R 660 (A,220,29)	RD1/4PU273J	⚠ R 756 (A,101,120) METAL OXIDE RESISTOR	RS1LMF4R7J
	R 661 (A,156,28)	RD1/4PU821J	⚠ R 761 (A,125,117) CARBON FILM RESISTOR	RD1/4PUF101J
	R 662 (A,216,20)	RD1/4PU821J	⚠ R 762 (A,155,119) CARBON FILM RESISTOR	RD1/4PUF101J
	R 663 (A,181,21)	RD1/4PU273J	⚠ R 763 (A,124,132) METAL OXIDE RESISTOR	RS1LMF4R7J
	R 664 (A,149,28)	RD1/4PU273J	⚠ R 764 (A,149,139) METAL OXIDE RESISTOR	RS1LMF4R7J

Mark No.	Description	Part No.	Mark No.	Description	Part No.
△ R 771 (A,63,144)	METAL OXIDE RESISTOR	RS1LMF4R7J	C 656 (A,215,33)		CEAT4R7M50
△ R 772 (A,63,127)	CARBON FILM RESISTOR	RD1/4PUF101J	C 657 (B,165,17)		CCSRCH470J50
R 777 (A,81,41)		RD1/4PU222J	C 658 (B,221,17)		CCSRCH470J50
R 778 (B,84,48)		RS1/16S103J	C 659 (A,158,31)		A CEAT101M16
R 781 (A,87,30)		RD1/4PU273J	C 660 (A,219,25)		CEAT101M16
R 782 (A,84,22)		RD1/4PU821J	C 661 (B,184,23)		CCSRCH470J50
R 783 (A,104,21)		RD1/4PU273J	C 662 (B,241,27)		CCSRCH470J50
R 784 (A,111,35)		RD1/4PU331J	C 663 (B,184,27)		CCSRCH470J50
△ R 785 (A,105,31)	RESISTOR (0.22, 5W)	ACN7094	C 664 (B,241,24)		CCSRCH470J50
R 786 (A,111,57)		RD1/4PU182J	C 665 (A,184,45)		CEANP2R2M50
R 787 (A,106,57)		RD1/4PU821J	C 666 (A,239,49)		CEANP2R2M50
R 788 (A,102,38)		RD1/4PU223J	C 682 (B,74,48)		CKSRYB331K50
R 789 (A,82,127)	CARBON FILM RESISTOR	RD1/4PUF101J	C 683 (A,74,50)		CEAT4R7M50
△ R 790 (A,80,145)	METAL OXIDE RESISTOR	RS1LMF4R7J	C 684 (B,82,18)		CCSRCH470J50
R 806 (B,283,48)		RS1/16S103J	C 685 (A,78,38)		B CEAT101M16
R 807 (B,278,48)		RS1/16S103J	C 686 (B,92,9)		CCSRCH470J50
R 808 (B,283,52)		RS1/16S102J	C 687 (B,87,8)		CCSRCH470J50
R 809 (B,261,105)		RS1/16S122J	C 688 (A,75,78)		CEANP2R2M50
R 810 (B,264,105)		RS1/16S271J	C 696 (B,281,35)		CKSRYB102K50
R 885 (B,310,57)		RS1/16S221J	C 697 (A,286,34)		CEAT221M6R3
R 886 (B,310,61)		RS1/16S221J	C 701 (A,49,80) ELECT.CAPACITOR	XCH3026	
R 887 (B,310,65)		RS1/16S221J	C 702 (A,49,107) ELECT.CAPACITOR	XCH3026	
R 888 (B,315,22)		RS1/16S221J	C 703 (A,43,130) ELECT.CAPACITOR	XCH3012	
R 1101(B,273,68)		RS1/16S0R0J	C 704 (A,38,150) ELECT.CAPACITOR	XCH3012	
R 1102(B,274,61)		RS1/16S0R0J	C 705 (A,156,81) ELECT. CAPACITOR	CEAT100M2A	C
R 1103(B,70,136)		RS1/16S0R0J	C 706 (A,143,84) ELECT. CAPACITOR	CEAT100M2A	
R 1104(B,138,132)		RS1/16S0R0J	C 707 (A,17,99) MYLAR FILM CAPACITOR	CQMA103K2E	
R 1105(B,168,135)		RS1/16S0R0J	C 708 (A,16,137) MYLAR FILM CAPACITOR	CQMA103K2E	
R 1106(B,146,53)		RS1/16S0R0J	C 709 (A,257,73)	CEAT100M50	
R 1107(B,211,58)		RS1/16S0R0J	C 711 (A,195,99) ELECT. CAPACITOR	CEAT101M35	
R 1108(B,233,58)		RS1/16S0R0J	C 712 (A,189,105)	CEAT101M10	
R 1109(B,285,56)		RS1/16S0R0J	C 751 (A,159,143) FILM CAPACITOR	CQMBA104J50	
R 1110(B,241,68)		RS1/16S0R0J	C 752 (A,181,150) FILM CAPACITOR	CQMBA104J50	
CAPACITORS					
C 517 (A,82,154)	FILM CAPACITOR	CQMBA104J50	C 755 (A,103,147) FILM CAPACITOR	CQMBA104J50	
C 603 (B,94,39)		CKSRYB331K50	C 761 (A,122,139) FILM CAPACITOR	CQMBA104J50	
C 604 (B,227,38)		CKSRYB331K50	C 762 (A,152,145) FILM CAPACITOR	CQMBA104J50	
C 605 (A,96,38)		CEAT4R7M50	C 771 (A,52,147) FILM CAPACITOR	CQMBA104J50	
C 606 (A,230,38)		CEAT4R7M50	C 778 (B,84,34)	CKSRYB331K50	
C 607 (B,95,20)		CCSRCH470J50	C 779 (A,81,33)	CEAT4R7M50	
C 608 (B,230,17)		CCSRCH470J50	C 780 (B,88,18)	CCSRCH470J50	
C 609 (A,91,32)		CEAT101M16	C 781 (A,87,27)	CEAT101M16	
C 610 (A,225,32)		CEAT101M16	C 782 (B,107,27)	CCSRCH470J50	
C 611 (B,117,22)		CCSRCH470J50	C 783 (B,107,24)	CCSRCH470J50	
C 612 (B,250,24)		CCSRCH470J50	C 784 (A,105,49)	CEANP2R2M50	
C 613 (B,117,27)		CCSRCH470J50	C 801 (A,248,114) ELECT. CAPACITOR	CEAT222M25	E
C 614 (B,250,28)		CCSRCH470J50	C 802 (A,249,100) ELECT. CAPACITOR	CEAT222M25	
C 615 (A,116,45)		CEANP2R2M50	C 806 (A,288,55)	CEAT100M50	
C 616 (A,250,45)		CEANP2R2M50	C 807 (B,226,95)	CKSRYB103K25	
C 630 (A,172,44)		CEANP2R2M50	C 808 (A,245,142) ELECT. CAPACITOR	CEAT472M16	
C 632 (B,151,33)		CKSRYB331K50	C 809 (A,234,95)	CEAT101M10	
C 633 (A,148,33)		CEAT4R7M50	C 810 (A,266,133)	CEAT101M10	
C 634 (B,155,17)		CCSRCH470J50	C 811 (B,279,128)	CKSRYB103K25	
C 635 (A,153,25)		CEAT101M16	C 812 (B,278,109)	CKSRYB103K25	
C 636 (B,175,28)		CCSRCH470J50	C 813 (A,276,118)	CEAT101M16	
C 637 (B,175,24)		CCSRCH470J50			
C 653 (B,161,38)		CKSRYB331K50			
C 654 (B,217,33)		CKSRYB331K50			
C 655 (A,164,38)		CEAT4R7M50			
C POWER PACK ASSY (XWZ4088) MISCELLANEOUS					
△ IC 601 (A,265,14)	POWER PACK 2CH	STK412-230C			

C POWER PACK ASSY (XWZ4088)
MISCELLANEOUS

△ IC 601 (A,265,14) POWER PACK 2CH

Mark No.**Description****Part No.****Mark No.****Description****Part No.**

A	IC 602 (A,199,14) POWER PACK 2CH IC 603 (A,132,14) POWER PACK 3CH IC 610 (A,59,28) PROTECTOR(1A) IC 701 (A,100,75) IC PROTECTOR	STK412-230C STK413-230C AEK7009 ICP-N10
---	--	--

	IC 702 (A,84,81) IC PROTECTOR IC 803 (A,238,87) IC IC 804 (A,282,111) REGULATOR IC IC 805 (B,271,135) IC Q 501 (B,85,42) CHIP TRANSISTOR	ICP-N10 TA7805S TA7809S BA178M05FP 2SD2704K
--	--	---

B	Q 505 (A,111,47) TRANSISTOR Q 601 (B,93,47) CHIP TRANSISTOR Q 602 (B,227,45) CHIP TRANSISTOR Q 605 (A,118,40) TRANSISTOR Q 606 (A,252,40) TRANSISTOR	2SC2240 2SD2704K 2SD2704K 2SC2240 2SC2240
---	--	---

	Q 631 (B,153,42) CHIP TRANSISTOR Q 633 (A,178,47) TRANSISTOR Q 651 (B,161,45) CHIP TRANSISTOR Q 652 (B,219,42) CHIP TRANSISTOR Q 655 (A,186,40) TRANSISTOR	2SD2704K 2SC2240 2SD2704K 2SD2704K 2SC2240
--	--	--

	Q 656 (A,244,47) TRANSISTOR Q 681 (B,72,63) CHIP TRANSISTOR Q 683 (A,59,65) TRANSISTOR Q 696 (B,284,22) TRANSISTOR Q 697 (B,282,26) TRANSISTOR	2SC2240 2SD2704K 2SC2240 2SC4081 2SC4081
--	--	--

C	Q 698 (B,246,67) TRANSISTOR Q 701 (A,110,75) TRANSISTOR Q 702 (A,96,86) TRANSISTOR Q 703 (A,155,76) TRANSISTOR Q 704 (A,166,79) TRANSISTOR	RT1N241M 2SC5511 2SA2005 2SA1145 2SC2240
---	--	--

	Q 705 (B,245,74) CHIP TRANSISTOR Q 707 (B,241,74) CHIP TRANSISTOR Q 721 (A,142,71) TRANSISTOR Q 722 (A,161,74) TRANSISTOR Q 801 (B,277,141) DIGITAL TR(SC-70)	RN4903 RN4903 2SA1145 2SC2240 RT1P241M
--	---	--

D	Q 802 (B,274,145) TRANSISTOR Q 803 (B,265,140) DIGITAL TR(SC-70) Q 804 (B,268,145) TRANSISTOR Q 805 (B,277,146) DIGITAL TR(SC-70) Q 806 (B,271,145) TRANSISTOR	RT1N241M RT1P241M RT1N241M RT1P241M RT1N241M
---	--	--

	Q 807 (B,276,53) CHIP TR(2*PNP) Q 808 (B,283,56) CHIP TRANSISTOR Q 809 (A,266,101) TRANSISTOR D 601 (A,125,57) DIODE D 602 (A,267,17) ZENER DIODE	RN2903 RN1903 2SD1858X 1SS133 MTZJ15A
--	---	---

E	D 603 (A,119,57) DIODE D 604 (A,261,21) ZENER DIODE D 606 (A,259,57) DIODE D 608 (A,253,52) DIODE D 631 (A,192,61) DIODE	1SS133 MTZJ15A 1SS133 1SS133 1SS133
---	--	---

	D 632 (A,176,52) DIODE D 647 (A,200,17) ZENER DIODE D 648 (A,196,21) ZENER DIODE D 651 (A,192,57) DIODE D 652 (A,262,57) DIODE	1SS133 MTZJ15A MTZJ15A 1SS133 1SS133
--	--	--

F	D 653 (A,186,52) DIODE D 654 (A,242,52) DIODE D 681 (A,132,17) ZENER DIODE D 682 (A,129,22) ZENER DIODE D 683 (A,135,58) DIODE	1SS133 1SS133 MTZJ15A MTZJ15A 1SS133
---	--	--

	D 684 (A,65,72) DIODE	1SS133
--	-----------------------	--------

Mark No.**Description**

△ D 701 (A,9,88) DIODE △ D 702 (A,9,126) DIODE D 703 (B,252,76) DIODE D 711 (A,196,103) ZENER DIODE	D 5SBA20(B) D 5SBA20(B) 1SS355 MTZJ22D
--	---

D 712 (A,192,103) DIODE D 713 (A,120,78) DIODE D 751 (B,168,135) DIODE D 752 (B,170,135) DIODE D 753 (B,138,132) DIODE	MTZJ6R8(B) 1SS133 1SS355 1SS355 1SS355
--	--

D 754 (B,141,132) DIODE D 757 (B,70,136) DIODE D 758 (B,73,136) DIODE D 777 (A,127,57) DIODE D 778 (A,108,57) DIODE	1SS355 1SS355 1SS355 1SS133 1SS133
---	--

△ D 801 (B,221,113) BRIDGE DIODE D 805 (A,276,131) DIODE D 806 (A,287,62) DIODE D 807 (A,284,67) DIODE D 827 (A,262,133) DIODE	S1WB(A)60SD 1SS133 MTZJ6R2(B) 1SS133 MTZJ6R2(B)
--	---

△ D 828 (A,239,98) DIODE △ D 829 (A,239,128) DIODE L 501 (A,97,118) COIL L 751 (A,160,108) COIL L 752 (A,173,108) COIL	MTZJ6R2(B) D3SBA20(B) ATH1004 ATH1004 ATH1004
--	---

L 753 (A,120,107) COIL L 754 (A,78,118) COIL L 761 (A,130,108) COIL L 762 (A,142,108) COIL J 43 JUMPER WIRE 11P	ATH1004 ATH1004 ATH1004 ATH1004 D20PYY1120E
---	---

RN601 (A,65,23) WRAPPING TERMINAL RY501 (A,75,132) RELAY RY751 (A,173,130) RELAY RY752 (A,141,126) RELAY RY753 (A,117,120) RELAY	VNF1084 XSR3012 XSR3012 XSR3012 XSR3012
--	---

CN604 (A,87,134) CONNECTOR CN701 (A,212,134) 11P JUMPER CONNECTOR CN702 (A,201,106) 6P JUMPER CONNECTOR CN705 (A,295,40) 21P PLUG CN751 SP TERMINAL 8-P(V0)	CKS3373 52147-1110 52147-0610 XKM3011 XKE3042
---	---

CN752 SP TERMINAL 6-P(V0) CN803 (A,231,129) 6P PLUG CN805 (A,317,153) 13P PLUG CN806 19P PLUG CN807 (A,317,82) 15P PLUG	XKE3043 KM200TA6 XKP3066 XKP3069 XKP3067
---	--

CN812 (A,323,30) 15P PLUG CN813 (A,308,38) CONNECTOR CN815 (A,295,79) 23P PLUG CN816 (A,295,126) 21P PLUG 810 (A,277,90) 11P CABLE HOLDER	CKS3390 XKM3006 XKM3011 XKM3011 51048-1100
---	--

R 601 (A,96,56) R 602 (A,230,52) R 603 (B,93,52) R 604 (B,226,49) R 609 (A,91,35)	RD1/4PU222J RD1/4PU222J RS1/16S103J RS1/16S103J RD1/4PU273J
---	---

R 610 (A,225,35) R 611 (A,90,28) R 612 (A,223,28) R 613 (A,114,21) R 614 (A,247,21)	RD1/4PU273J RD1/4PU821J RD1/4PU821J RD1/4PU273J RD1/4PU273J
---	---

RESISTORS

VSX-816-K	4
-----------	---

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
R 615 (A,123,36)	RD1/4PU331J	R 698 (B,243,67)	RS1/16S333J		
R 616 (A,270,29)	RD1/4PU562J	R 699 (A,165,21)	RD1/4PU333J		
△ R 617 (A,114,31) RESISTOR (0.22, 5W)	ACN7094	R 701 (A,117,78)	RD1/4PU682J	A	
R 618 (A,266,28)	RD1/4PU562J	R 702 (A,101,84)	RD1/4PU682J		
R 619 (A,122,52)	RD1/4PU182J	R 703 (A,151,72)	RD1/4PU683J		
R 620 (A,257,36)	RD1/4PU331J	R 704 (A,147,76)	RD1/4PU683J		
R 621 (A,124,49)	RD1/4PU821J	R 705 (A,283,85)	RD1/4PU473J		
△ R 622 (A,248,31) RESISTOR (0.22, 5W)	ACN7094	R 706 (A,283,75)	RD1/4PU473J		
R 623 (A,116,48)	RD1/4PU223J	R 707 (A,135,77)	RD1/4PU124J		
R 624 (A,257,52)	RD1/4PU182J	R 708 (A,147,81)	RD1/4PU124J		
R 626 (A,258,49)	RD1/4PU821J	△ R 711 (A,181,86) METAL OXIDE RESISTOR	RS2LMF222J		
R 628 (A,250,48)	RD1/4PU223J	R 713 (A,117,81)	RD1/4PU102J		
R 630 (A,230,21)	RD1/4PU333J	R 714 (B,252,68)	RS1/16S102J		
R 631 (A,148,46)	RD1/4PU222J	R 715 (B,250,75)	RS1/16S103J	B	
R 632 (B,152,47)	RS1/16S103J	R 716 (B,247,75)	RS1/16S103J		
R 635 (A,153,29)	RD1/4PU273J	R 721 (A,125,77)	RD1/4PU822J		
R 636 (A,149,25)	RD1/4PU821J	R 722 (A,123,77)	RD1/4PU822J		
R 637 (A,172,21)	RD1/4PU273J	R 723 (A,276,78)	RD1/4PU473J		
R 638 (A,174,36)	RD1/4PU331J	R 724 (A,279,83)	RD1/4PU473J		
△ R 639 (A,173,31) RESISTOR (0.22, 5W)	ACN7094	R 725 (A,276,74)	RD1/4PU103J		
R 640 (A,179,57)	RD1/4PU182J	R 726 (B,291,59)	RS1/16S103J		
R 641 (A,174,52)	RD1/4PU821J	R 727 (B,287,59)	RS1/16S103J		
R 642 (A,169,39)	RD1/4PU223J	△ R 751 (A,158,119) CARBON FILM RESISTOR	RD1/4PUF101J		
R 647 (A,202,27)	RD1/4PU562J	△ R 752 (A,185,120) CARBON FILM RESISTOR	RD1/4PUF101J		
R 648 (A,199,27)	RD1/4PU562J	△ R 753 (A,156,126) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 651 (A,164,56)	RD1/4PU222J	△ R 754 (A,181,126) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 652 (A,215,41)	RD1/4PU222J	△ R 755 (A,103,117) CARBON FILM RESISTOR	RD1/4PUF101J		
R 653 (B,160,50)	RS1/16S103J	△ R 756 (A,101,120) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 654 (B,219,46)	RS1/16S103J	△ R 761 (A,125,117) CARBON FILM RESISTOR	RD1/4PUF101J		
R 659 (A,159,35)	RD1/4PU273J	△ R 762 (A,155,119) CARBON FILM RESISTOR	RD1/4PUF101J		
R 660 (A,220,29)	RD1/4PU273J	△ R 763 (A,124,132) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 661 (A,156,28)	RD1/4PU821J	△ R 764 (A,149,139) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 662 (A,216,20)	RD1/4PU821J	△ R 771 (A,63,144) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 663 (A,181,21)	RD1/4PU273J	△ R 772 (A,63,127) CARBON FILM RESISTOR	RD1/4PUF101J		
R 664 (A,238,21)	RD1/4PU273J	R 777 (A,81,41)	RD1/4PU222J		
R 665 (A,190,36)	RD1/4PU331J	R 778 (B,84,48)	RS1/16S103J		
R 666 (A,240,35)	RD1/4PU331J	R 781 (A,87,30)	RD1/4PU273J		
△ R 667 (A,182,31) RESISTOR (0.22, 5W)	ACN7094	R 782 (A,84,22)	RD1/4PU821J		
△ R 668 (A,239,31) RESISTOR (0.22, 5W)	ACN7094	R 783 (A,104,21)	RD1/4PU273J		
R 669 (A,189,52)	RD1/4PU182J	R 784 (A,111,35)	RD1/4PU331J		
R 670 (A,245,52)	RD1/4PU182J	△ R 785 (A,105,31) RESISTOR (0.22, 5W)	ACN7094		
R 671 (A,192,49)	RD1/4PU821J	R 786 (A,111,57)	RD1/4PU182J		
R 672 (A,240,57)	RD1/4PU821J	R 787 (A,106,57)	RD1/4PU821J		
R 673 (A,184,48)	RD1/4PU223J	R 788 (A,102,38)	RD1/4PU223J		
R 674 (A,236,38)	RD1/4PU223J	R 789 (A,82,127) CARBON FILM RESISTOR	RD1/4PUF101J		
R 681 (A,66,63)	RD1/4PU222J	△ R 790 (A,80,145) METAL OXIDE RESISTOR	RS1LMF4R7J		
R 682 (B,76,63)	RS1/16S103J	R 806 (B,283,48)	RS1/16S103J		
R 685 (A,77,41)	RD1/4PU273J	R 807 (B,278,48)	RS1/16S103J		
R 686 (A,78,35)	RD1/4PU821J	R 808 (B,283,52)	RS1/16S102J		
R 687 (A,83,10)	RD1/4PU273J	R 809 (B,261,105)	RS1/16S122J		
R 688 (A,135,27)	RD1/4PU562J	R 810 (B,264,105)	RS1/16S271J		
R 689 (A,133,27)	RD1/4PU562J	R 885 (B,310,57)	RS1/16S221J		
R 690 (A,60,52)	RD1/4PU331J	R 886 (B,310,61)	RS1/16S221J		
△ R 691 (A,55,55) RESISTOR (0.22, 5W)	ACN7094	R 887 (B,310,65)	RS1/16S221J		
R 692 (A,70,72)	RD1/4PU182J	R 888 (B,315,22)	RS1/16S221J		
R 693 (A,67,77)	RD1/4PU821J	R 1101(B,273,68)	RS1/16S0R0J	F	
R 694 (A,62,72)	RD1/4PU223J	R 1102(B,274,61)	RS1/16S0R0J		
R 695 (A,97,22)	RD1/4PU333J	R 1106(B,146,53)	RS1/16S0R0J		
R 696 (B,281,38)	RS1/16S103J	R 1107(B,211,58)	RS1/16S0R0J		
R 697 (B,255,68)	RS1/16S103J	R 1108(B,233,58)	RS1/16S0R0J		

Mark No. **Description**
Part No.
Mark No. **Description**
Part No.

R 1109(B,285,56)
R 1110(B,241,68)

RS1/16S0R0J
RS1/16S0R0J

C 711 (A,195,99) ELECT. CAPACITOR
C 712 (A,189,105)
C 751 (A,159,143) FILM CAPACITOR
C 752 (A,181,150) FILM CAPACITOR
C 753 (A,157,155) FILM CAPACITOR

CEAT101M35
CEAT101M10
CQMBA224J50
CQMBA224J50
CQMBA224J50

CAPACITORS

C 517 (A,82,154) FILM CAPACITOR
C 521 (A,120,164) FILM CAPACITOR
C 603 (B,94,39)
C 604 (B,227,38)
C 605 (A,96,38)

CQMBA224J50
CQMBA123J50
CKSRYB331K50
CKSRYB331K50
CEAT4R7M50

C 754 (A,181,158) FILM CAPACITOR
C 755 (A,103,147) FILM CAPACITOR
C 756 (A,96,151) FILM CAPACITOR
C 757 (A,157,164) FILM CAPACITOR
C 758 (A,177,164) FILM CAPACITOR

CQMBA224J50
CQMBA224J50
CQMBA224J50
CQMBA123J50
CQMBA123J50

C 606 (A,230,38)
C 607 (B,95,20)
C 608 (B,230,17)
C 609 (A,91,32)
C 610 (A,225,32)

CEAT4R7M50
CCSRCH470J50
CCSRCH470J50
CEAT101M16
CEAT101M16

C 759 (A,101,164) FILM CAPACITOR
C 761 (A,122,139) FILM CAPACITOR
C 762 (A,152,145) FILM CAPACITOR
C 763 (A,122,146) FILM CAPACITOR
C 764 (A,150,152) FILM CAPACITOR

CQMBA123J50
CQMBA224J50
CQMBA224J50
CQMBA224J50
CQMBA224J50

C 611 (B,117,22)
C 612 (B,250,24)
C 613 (B,117,27)
C 614 (B,250,28)
C 615 (A,116,45)

CCSRCH470J50
CCSRCH470J50
CCSRCH470J50
CCSRCH470J50
CEANP2R2M50

C 765 (A,63,164) FILM CAPACITOR
C 766 (A,82,164) FILM CAPACITOR
C 771 (A,52,147) FILM CAPACITOR
C 772 (A,52,156) FILM CAPACITOR
C 773 (A,138,164) FILM CAPACITOR

CQMBA123J50
CQMBA123J50
CQMBA224J50
CQMBA224J50
CQMBA123J50

C 616 (A,250,45)
C 630 (A,172,44)
C 632 (B,151,33)
C 633 (A,148,33)
C 634 (B,155,17)

CEANP2R2M50
CEANP2R2M50
CKSRYB331K50
CEAT4R7M50
CCSRCH470J50

C 778 (B,84,34)
C 779 (A,81,33)
C 780 (B,88,18)
C 781 (A,87,27)
C 782 (B,107,27)

CKSRYB331K50
CEAT4R7M50
CCSRCH470J50
CEAT101M16
CCSRCH470J50

C 635 (A,153,25)
C 636 (B,175,28)
C 637 (B,175,24)
C 653 (B,161,38)
C 654 (B,217,33)

CEAT101M16
CCSRCH470J50
CCSRCH470J50
CKSRYB331K50
CKSRYB331K50

C 783 (B,107,24)
C 784 (A,105,49)
C 785 (A,89,146) FILM CAPACITOR
C 801 (A,248,114) ELECT. CAPACITOR
C 802 (A,249,100) ELECT. CAPACITOR

CCSRCH470J50
CEANP2R2M50
CQMBA224J50
CEAT222M25
CEAT222M25

C 655 (A,164,38)
C 656 (A,215,33)
C 657 (B,165,17)
C 658 (B,221,17)
C 659 (A,158,31)

CEAT4R7M50
CEAT4R7M50
CCSRCH470J50
CCSRCH470J50
CEAT101M16

C 806 (A,288,55)
C 807 (B,226,95)
C 808 (A,245,142) ELECT. CAPACITOR
C 809 (A,234,95)
C 810 (A,266,133)

CEAT1R0M50
CKSRYB103K25
CEAT472M16
CEAT101M10
CEAT101M10

C 660 (A,219,25)
C 661 (B,184,23)
C 662 (B,241,27)
C 663 (B,184,27)
C 664 (B,241,24)

CEAT101M16
CCSRCH470J50
CCSRCH470J50
CCSRCH470J50
CCSRCH470J50

C 811 (B,279,128)
C 812 (B,278,109)
C 813 (A,276,118)

CKSRYB103K25
CKSRYB103K25
CEAT101M16

C 665 (A,184,45)
C 666 (A,239,49)
C 682 (B,74,48)
C 683 (A,74,50)
C 684 (B,82,18)

CEANP2R2M50
CEANP2R2M50
CKSRYB331K50
CEAT4R7M50
CCSRCH470J50

△ IC 853 (A,32,204) PROTECTOR(5A)
J 21 JUMPER WIRE 11P
CN1201(A,35,183) 4P JUMPER CONNECTOR
851 (A,49,207) 11P CABLE HOLDER

AEK7019
D20PYY1130E
52147-0410
51048-1100

C 685 (A,78,38)
C 686 (B,92,9)
C 687 (B,87,8)
C 688 (A,75,78)
C 696 (B,281,35)

CEAT101M16
CCSRCH470J50
CCSRCH470J50
CEANP2R2M50
CKSRYB102K50

E TRANS3 ASSY

TRANS3 ASSY has no service part.

C 697 (A,286,34)
C 701 (A,49,80) ELECT.CAPACITOR
C 702 (A,49,107) ELECT.CAPACITOR
C 703 (A,43,130) ELECT.CAPACITOR
C 704 (A,38,150) ELECT.CAPACITOR

CEAT221M6R3
XCH3026
XCH3026
XCH3012
XCH3012

IC 551 (B,235,206) LOGIC IC
IC 552 (B,256,212) LOGIC IC
IC 553 (B,209,204) VIDEO IC
JA551 (A,249,176) 6P RCA PINJACK
JA552 (A,207,176) 6P RCA PINJACK

TC74HC4052AF
TC74HC4052AF
NJM2581M
XKB3025
XKB3025

C 705 (A,156,81) ELECT. CAPACITOR
C 706 (A,143,84) ELECT. CAPACITOR
F C 707 (A,17,99) MYLAR FILM CAPACITOR
C 708 (A,16,137) MYLAR FILM CAPACITOR
C 709 (A,257,73)

CEAT100M2A
CEAT100M2A
CQMA103K2E
CQMA103K2E
CEAT1R0M50

CN551 (A,192,206) CONNECTOR

CKS3372

F COMPONENT ASSY
MISCELLANEOUS

Mark No. **Description****Part No.****RESISTORS**

R 553 (B,237,192)	RS1/16S750J
R 554 (B,251,191)	RS1/16S750J
R 555 (B,265,191)	RS1/16S750J
R 556 (B,232,192)	RS1/16S750J
R 557 (B,246,194)	RS1/16S750J
R 558 (B,262,184)	RS1/16S750J
R 559 (B,195,194)	RS1/16S750J
R 560 (B,216,193)	RS1/16S750J
R 561 (B,223,191)	RS1/16S750J
R 562 (B,189,193)	RS1/16S750J
R 563 (B,212,197)	RS1/16S750J
R 564 (B,214,193)	RS1/16S750J
R 566 (B,238,216)	RS1/16S102J
R 567 (B,243,200)	RS1/16S102J
R 568 (B,243,202)	RS1/16S102J
R 569 (B,246,216)	RS1/16S102J
R 571 (B,250,226)	RS1/16S102J
R 572 (B,250,224)	RS1/16S102J
R 573 (B,224,201)	RS1/16S0R0J
R 574 (B,260,200)	RS1/16S0R0J
R 575 (B,244,234)	RS1/16S0R0J
R 577 (B,202,212)	RS1/16S103J
R 578 (B,204,212)	RS1/16S103J
R 579 (B,213,212)	RS1/16S103J
R 581 (B,242,207)	RS1/16S222J
R 582 (A,240,219)	RD1/4PU222J

CAPACITORS

C 567 (B,257,184)	CKSRYB103K50
C 568 (B,200,184)	CKSRYB103K50
C 569 (B,241,214)	CKSRYB473K50
C 570 (B,229,206)	CKSRYB473K50
C 571 (B,249,211)	CKSRYB473K50
C 572 (B,263,212)	CKSRYB473K50
C 576 (B,206,212)	CKSRYB103K50
C 577 (B,209,212)	CKSRYB103K50
C 578 (B,211,212)	CKSRYB103K50
C 579 (A,200,203)	CEAT101M16
C 580 (A,195,203)	CEAT101M16
C 581 (B,206,197)	CKSRYB103K50
C 582 (B,208,197)	CKSRYB103K50
C 583 (B,210,197)	CKSRYB103K50

G HEAD PHONE ASSY MISCELLANEOUS

Q 1551(B,78,211) CHIP TRANSISTOR	2SD2704K
Q 1552(B,102,219) CHIP TRANSISTOR	2SD2704K
J 47 JUMPER WIRE	D20PYY0640E
JA1551(A,117,233) HEADPHONE JACK	RKB1014
KN1551(A,69,231) WRAPPING TERMINAL	VNF1084
1551(A,59,220) 6P CABLE HOLDER	51048-0600

RESISTORS

△ R 1551(A,84,202) METAL OXIDE RESISTOR	RS2LMF331J
△ R 1552(A,78,203) METAL OXIDE RESISTOR	RS2LMF331J
△ R 1553(A,108,221) METAL OXIDE RESISTOR	RS1LMF151J
△ R 1554(A,93,216) METAL OXIDE RESISTOR	RS1LMF151J
R 1555(B,100,216)	RS1/16S472J

Part No.**Mark No.** **Description**

R 1556(B,81,210)
R 1557(B,87,228)

CAPACITORS

C 1551(B,94,226)
C 1552(B,83,210)
C 1553(B,110,224)
C 1554(B,110,226)
C 1555(B,110,229)

C 1556(B,112,239)
C 1557(B,109,239)
C 1558(B,107,239)
C 1561(A,69,205) ELECT. CAPACITOR
C 1562(A,71,223) ELECT. CAPACITOR

RS1/16S472J
RS1/16S102J

CKSRYB223K50
CKSRYB223K50
CKSRYB103K50
CCSRCH471J50
CKSRYB104K16
CEANP470M50
CEANP470M50

A

B

H PRE-OUT ASSY MISCELLANEOUS

CN1575(A,282,211) CONNECTOR
CN1576(A,318,176) PIN JACK 1-P
1575(A,290,176) PIN JACK(6P)

CKS3373
AKB7042
XKB3033

RESISTORS

R 1575(B,301,198)
R 1576(B,302,194)
R 1577(B,293,194)
R 1578(B,286,194)
R 1579(B,294,198)

R 1580(B,287,197)
R 1581(B,308,198)
R 1582(B,316,194)
R 1583(B,279,194)
R 1584(B,275,194)

R 1585(B,281,198)
R 1586(B,274,198)
R 1587(B,307,194)
R 1588(B,317,197)

RS1/16S223J
RS1/16S202J
RS1/16S202J
RS1/16S202J
RS1/16S223J
RS1/16S202J
RS1/16S202J
RS1/16S202J
RS1/16S223J
RS1/16S223J
RS1/16S202J
RS1/16S202J
RS1/16S223J

C

CAPACITORS

C 1581(B,283,184)

CKSRYB103K50

I 5.1CH INPUT ASSY MISCELLANEOUS

CN307 (A,125,219) 7P CONNECTOR
CN309 (A,167,225) PIN JACK(4P)

52044-0745
XKB3035

RESISTORS

R 1001(B,147,233)
R 1002(B,150,226)
R 1003(B,149,236)
R 1004(B,150,228)
R 1009(B,150,224)

R 1010(B,151,212)
R 1011(B,150,222)
R 1012(B,150,214)

RS1/16S473J
RS1/16S473J
RS1/16S331J
RS1/16S331J
RS1/16S473J
RS1/16S473J
RS1/16S331J
RS1/16S331J
RS1/16S331J

E

CAPACITORS

C 1001(B,151,233)
C 1002(B,151,230)
C 1003(B,143,233)
C 1004(B,147,230)
C 1009(A,146,236)

CCSRCH101J50
CCSRCH101J50
CKSRYB221K50
CKSRYB221K50
CEAT4R7M50

F

Mark No. **Description**
Part No.
Mark No. **Description**
Part No.

A	C 1010(A,146,228)	CEAT4R7M50	R 409 (B,75,176)	RS1/16S473J
	C 1012(B,159,226)	CKSRYB103K50	R 410 (B,73,176)	RS1/16S473J
	C 1013(B,151,219)	CCSRCH101J50		
	C 1014(B,151,216)	CCSRCH101J50	R 411 (B,229,189)	RS1/16S473J
	C 1015(B,147,224)	CKSRYB221K50	R 412 (B,234,187)	RS1/16S221J
	C 1016(B,147,216)	CKSRYB221K50	R 413 (B,234,184)	RS1/16S221J
	C 1021(A,146,214)	CEAT4R7M50	R 414 (B,234,182)	RS1/16S221J
	C 1022(A,146,221)	CEAT4R7M50	R 415 (B,234,180)	RS1/16S221J
			R 416 (B,234,178)	RS1/16S221J
			R 417 (B,219,182)	RS1/16S101J
B	IC 401 (B,121,181) DISPLAY U-COM	PE5550A	R 422 (B,157,169)	RS1/16S104J
	IC 402 (A,223,169) REMOTE RECEIVER UNIT	GP1UM27XK0VF	R 423 (B,131,167)	RS1/16S104J
	Q 441 (B,230,161) TRANSISTOR	RT1N241M	R 424 (B,83,176)	RS1/16S104J
	Q 442 (B,238,190) TRANSISTOR	RT1N241M		
	Q 484 (B,217,189) TRANSISTOR	2SA1576A		
	D 401 (B,239,163) DIODE	DAN202K		
	D 403 (B,226,189) DIODE	1SS355	R 455 (A,45,146)	RD1/4PU681J
	D 404 (B,230,176) DIODE	1SS355	R 456 (A,35,144)	RD1/4PU821J
	D 405 (B,230,156) DIODE	1SS355	R 457 (A,16,139)	RD1/4PU122J
	D 500 (A,210,182) LED(ORANGE)	SLI-343DCW	R 459 (A,109,134)	RD1/4PU472J
			R 460 (A,101,135)	RD1/4PU681J
C	D 502 (A,130,160) LED(BLUE)	SLR-343BBT		
	L 401 (A,242,159) RADIAL INDUCTOR	LFCA2R2J	R 461 (B,52,117)	RS1/16S821J
	V 401 (A,189,200) FL TUBE	XAV3025	R 462 (B,49,117)	RS1/16S122J
	S 451 (A,234,139) SWITCH	VSG1024	R 463 (B,34,117)	RS1/16S162J
	S 452 (A,213,136) SWITCH	VSG1024	R 464 (B,20,117)	RS1/16S272J
	S 453 (A,187,134) SWITCH	VSG1024	R 465 (A,161,128)	RD1/4PU472J
	S 454 (A,70,134) SWITCH	VSG1024		
	S 455 (A,46,134) SWITCH	VSG1024	R 466 (A,151,128)	RD1/4PU681J
	S 456 (A,23,134) SWITCH	VSG1024	R 467 (A,131,128)	RD1/4PU821J
	S 458 (A,13,112) SWITCH	VSG1024	R 468 (B,79,91)	RS1/16S122J
D	S 459 (A,114,136) SWITCH	VSG1024	R 469 (B,64,91)	RS1/16S162J
	S 460 (A,91,136) SWITCH	VSG1024	R 470 (B,50,92)	RS1/16S272J
	S 461 (A,57,112) SWITCH	VSG1024		
	S 462 (A,42,112) SWITCH	VSG1024	R 471 (B,34,91)	RD1/4PU681J
	S 463 (A,27,112) SWITCH	VSG1024	R 472 (B,86,176)	RD1/4PU821J
	S 464 (A,164,134) SWITCH	VSG1024	R 473 (B,19,91)	RS1/16S133J
	S 465 (A,140,134) SWITCH	VSG1024	R 481 (B,169,204)	RS1/16S473J
	S 466 (A,86,90) SWITCH	VSG1024	R 482 (B,167,204)	RS1/16S473J
	S 467 (A,72,90) SWITCH	VSG1024		
	S 468 (A,57,90) SWITCH	VSG1024	R 483 (B,165,204)	RS1/16S473J
E	S 469 (A,42,90) SWITCH	VSG1024	R 484 (B,163,204)	RS1/16S473J
	S 470 (A,27,90) SWITCH	VSG1024	R 485 (B,161,204)	RS1/16S473J
	S 471 (A,13,90) SWITCH	VSG1024	R 486 (B,159,204)	RS1/16S473J
	X 401 (A,149,165) CERAMIC RESONATOR (5.00 MHz)	VSS1142	R 487 (B,157,204)	RS1/16S473J
	CN401 (A,246,165) 17P CONNECTOR	52044-1745	S 490 (A,42,90) SWITCH	RS1/16S473J
			R 488 (B,155,204)	RS1/16S473J
	471 (A,35,176) CABLE HOLDER(3P)	51063-0305	R 489 (B,153,204)	RS1/16S473J
	404 (A,197,127) CABLE HOLDER(7P)	51063-0705	R 490 (B,151,204)	RS1/16S473J
	402 FL HOLDER(FE)	VNF1096	R 492 (B,121,204)	RS1/16S104J
			R 493 (B,119,204)	RS1/16S104J
F	RESISTORS			
	R 401 (B,144,169)	RS1/16S105J	R 494 (B,117,204)	RS1/16S104J
	R 402 (B,223,189)	RS1/16S104J	R 495 (B,115,204)	RS1/16S104J
	R 403 (B,220,189)	RS1/16S104J	R 496 (B,113,204)	RS1/16S104J
	R 404 (B,221,178)	RS1/16S472J	R 497 (B,111,204)	RS1/16S104J
	R 405 (B,228,155)	RS1/16S102J	R 498 (B,109,204)	RS1/16S104J
			R 499 (B,107,204)	RS1/16S104J
	R 406 (B,226,155)	RS1/16S103J	R 500 (B,105,204)	RS1/16S104J
	R 407 (B,78,176)	RS1/16S473J	R 517 (B,149,204)	RS1/16S473J
	R 408 (B,80,176)	RS1/16S473J	R 518 (B,147,204)	RS1/16S473J
			R 519 (B,145,204)	RS1/16S473J

Mark No. **Description**

R 523 (B,97,204)

R 524 (B,95,204)

R 525 (B,93,204)

R 526 (B,91,204)

R 527 (B,89,204)

R 528 (B,87,204)

R 529 (B,85,204)

R 530 (B,83,204)

R 531 (B,81,204)

R 532 (B,79,204)

R 533 (B,77,204)

R 534 (B,75,204)

R 550 (B,204,185)

R 551 (B,125,156)

CAPACITORS

C 401 (B,247,155)

C 402 (B,247,153)

C 403 (A,234,168)

C 410 (B,49,186)

C 411 (B,51,186)

C 412 (A,42,178)

C 418 (B,141,179)

C 419 (B,103,182)

C 420 (A,39,185) ELECT. CAPACITOR

C 421 (B,160,169)

C 441 (B,223,176)

C 442 (A,239,146)

C 451 (B,125,166)

C 452 (B,103,164)

C 453 (B,122,166)

C 454 (B,100,164)

C 481 (B,140,191)

C 482 (B,126,201)

C 483 (B,126,199)

C 487 (B,83,163)

C 488 (B,79,163)

C 489 (B,75,163)

C 490 (A,241,34)

Part No.

RS1/16S104J

RS1/16S181J

RS1/16S391J

Mark No.**Description**

S 502 (A,20,221) SWITCH

S 503 (A,32,218) SWITCH

S 504 (A,47,218) SWITCH

501 (A,47,210) CABLE HOLDER(3P)

VSG1024

VSG1024

VSG1024

51063-0305

A

RESISTORS

R 501 (B,12,189)

R 502 (B,7,171)

R 503 (A,15,228)

R 504 (A,30,228)

RS1/16S391J

RS1/16S162J

RD1/4PU272J

RD1/4PU512J

B

N S. VIDEO ASSY MISCELLANEOUS

IC 351 (B,149,59) VIDEO SW IC

IC 352 (B,149,21) VIDEO SW IC

IC 1101(B,194,37) VIDEO AMP IC

IC 1102(B,186,72) VIDEO SW IC

IC 1103(B,211,72) VIDEO SW IC

NJM2595M

NJM2595M

TK15420M

NJM2243M

NJM2243M

D 351 (B,170,34) DIODE

D 352 (B,167,34) DIODE

D 353 (B,164,65) DIODE

D 354 (B,166,65) DIODE

D 357 (B,154,39) DIODE

1SS355

1SS355

1SS355

1SS355

1SS355

D 358 (B,142,67) DIODE

D 361 (B,184,78) DIODE

D 362 (B,207,76) DIODE

CN351 (A,220,42) 11PJUMPER CONNECTOR

CN352 (A,111,57) SOCKET

52147-1110

XKB3051

CN353 (A,111,29) SOCKET

CN354 (A,177,33) CONNECTOR POST

XKB3051

B5B-PH

CN355 (A,111,78) SOCKET

AKP7179

C

RESISTORS

R 351 (B,125,12)

R 352 (B,129,13)

R 353 (B,125,31)

R 354 (B,129,27)

R 355 (B,125,42)

RS1/16S750J

RS1/16S750J

RS1/16S750J

RS1/16S750J

RS1/16S750J

R 356 (B,128,45)

R 357 (B,161,54)

R 358 (B,167,61)

R 359 (B,165,61)

R 360 (B,172,61)

RS1/16S750J

RS1/16S102J

RS1/16S102J

RS1/16S151J

RS1/16S102J

D

R 361 (B,164,69)

R 362 (B,170,61)

R 363 (B,169,29)

R 364 (B,166,29)

R 365 (B,162,29)

RS1/16S102J

RS1/16S102J

RS1/16S102J

RS1/16S102J

RS1/16S102J

R 366 (B,164,29)

R 367 (B,171,29)

R 368 (B,162,36)

R 369 (B,160,36)

R 370 (B,150,71)

RS1/16S151J

RS1/16S102J

RS1/16S102J

RS1/16S750J

RS1/16S750J

R 371 (B,145,29)

R 372 (B,145,69)

R 375 (B,133,12)

R 376 (B,129,17)

R 377 (B,132,23)

RS1/16S750J

RS1/16S750J

RS1/16S101J

RS1/16S101J

RS1/16S101J

E

R 378 (B,130,30)

R 379 (B,135,39)

RS1/16S101J

RS1/16S101J

R.ENCODER ASSY**MISCELLANEOUS**

S 457 (A,300,183) SWITCH

S 512 (A,288,223) ROTARY ENCODER (JOG)

S 513 (A,288,152) ROTARY ENCODER

S 514 (A,257,216) SWITCH

S 515 (A,270,183) SWITCH

S 516 (A,285,183) SWITCH

511 (A,257,172) CABLE HOLDER(7P)

RESISTORS

R 513 (B,270,190)

R 514 (B,280,185)

R 515 (B,295,185)

RS1/16S162J

RS1/16S272J

RS1/16S512J

R 366 (B,164,29)

R 367 (B,171,29)

R 368 (B,162,36)

R 369 (B,160,36)

R 370 (B,150,71)

RS1/16S151J

RS1/16S102J

RS1/16S102J

RS1/16S750J

RS1/16S750J

M POWER KEY ASSY**MISCELLANEOUS**

D 501 (A,13,182) LED(BLUE)

S 501 (A,12,174) SWITCH

SLR-343BBT

VSG1024

R 378 (B,130,30)

R 379 (B,135,39)

RS1/16S101J

RS1/16S101J

Mark No. **Description**
Part No.
Mark No. **Description**
Part No.

A R 380 (B,128,49)
R 381 (B,129,56)
R 382 (B,131,62)

R 385 (B,165,35)
R 386 (B,162,61)
R 1103(B,182,44)
R 1104(B,194,30)
R 1105(B,188,33)

RS1/16S101J
RS1/16S0R0J
RS1/16S0R0J

RS1/16S0R0J
RS1/16S0R0J
RS1/16S103J
RS1/16S103J
RS1/16S0R0J

C 1116(B,137,78)
C 1117(B,134,82)
C 1118(B,137,82)
C 1130(B,212,51)
C 1131(A,176,18)

C 1132(B,217,68)

CKSRYB104K25
CCSRCH181J50
CCSRCH181J50
CKSRYB104K25
CEAT101M16

CKSRYB104K25

R 1106(B,188,39)
R 1109(B,188,45)
R 1111(B,178,77)
R 1112(B,140,78)
R 1113(B,132,82)

RS1/16S0R0J
RS1/16S0R0J
RS1/16S750J
RS1/16S750J
RS1/16S103J

O TRANS4 ASSY
MISCELLANEOUS

⚠ IC 891 (A,104,223) PROTECTOR(800MA) AEK7008
⚠ IC 892 (A,77,232) PROTECTOR(800MA) AEK7008
⚠ D 891 (B,91,226) BRIDGE DIODE S1WB(A)60SD
J 22 JUMPER WIRE D20PYY0330E
891 (A,70,221) 3P CABLE HOLDER 51048-0300

B R 1114(B,134,78)
R 1122(B,200,69)
R 1123(B,203,69)
R 1124(B,180,67)
R 1125(B,180,69)

RS1/16S103J
RS1/16S102J
RS1/16S102J
RS1/16S0R0J
RS1/16S0R0J

CAPACITORS

C 891 (A,97,218) ELECT. CAPACITOR CEAT471M35
C 892 (A,86,218) ELECT. CAPACITOR CEAT471M35

CAPACITORS

C 351 (B,160,22)
C 352 (A,123,7)
C 353 (B,127,20)
C 354 (B,144,11)
C 355 (A,132,20)

CKSRYB104K25
CEAT470M25
CKSRYB104K25
CKSRYB104K25
CEAT470M25

C C 356 (B,126,38)
C 357 (B,157,65)
C 358 (A,131,35)
C 359 (B,126,54)
C 361 (A,141,10) ELECT. CAPACITOR

CKSRYB104K25
CKSRYB104K25
CEAT470M25
CKSRYB104K25
CEAT470M25

C 362 (A,157,26)
C 363 (A,157,68)
C 366 (A,145,46)
C 367 (B,142,52)
C 368 (B,126,58)

CEAT470M25
CEAT470M25
CEAT470M25
CKSRYB104K25
CKSRYB221K50

D C 369 (B,129,62)
C 370 (B,157,36)
C 371 (B,158,72)
C 372 (B,121,57)
C 373 (B,120,29)

CKSRYB221K50
CKSRYB221K50
CKSRYB221K50
CKSRYB103K50
CKSRYB103K50

C 375 (B,167,17)
C 376 (B,163,54)
C 381 (B,137,11)
C 382 (B,132,16)
C 383 (B,134,19)

CCSRCH470J50
CCSRCH470J50
CCSRCH470J50
CCSRCH470J50
CCSRCH470J50

E C 384 (B,135,28)
C 385 (B,135,37)
C 386 (B,132,44)
C 1101(B,197,37)
C 1102(B,199,41)

CCSRCH470J50
CCSRCH470J50
CCSRCH470J50
CKSRYB473K25
CKSRYB473K25

C 1103(A,202,30)
C 1104(A,203,42)
C 1107(A,193,47)
C 1109(B,195,76)
C 1110(B,220,76)

CEAT101M16
CEAT101M16
CEAT101M16
CKSRYB473K25
CKSRYB473K25

F C 1111(A,192,73)
C 1112(A,217,79)
C 1113(B,181,78)
C 1114(B,210,79)
C 1115(A,179,74) ELECTR.CAPACITOR

CEAT101M16
CEAT101M16
CKSRYB104K25
CKSRYB104K25
CEAT102M10

P REGULATOR ASSY
MISCELLANEOUS

⚠ IC 801 (A,161,89) REGULATOR IC TA7812S
⚠ IC 802 (A,178,89) REGULATOR IC TA79012S
⚠ IC 807 (A,212,89) IC TA7805S
D 813 (A,201,94) ZENER DIODE MTZJ6.2B
CN800 (A,194,113) 11PJUMPER CONNECTOR 52147-1110

RESISTORS

⚠ R 801 (A,152,97) METAL OXIDE RESISTOR RS3LMF331J
⚠ R 802 (A,212,98) METAL OXIDE RESISTOR RS2LMF221J
R 819 (B,209,97) RS1/16S0R0J

CAPACITORS

C 803 (B,164,98)
C 804 (B,180,98)
C 805 (A,152,103)
C 806 (A,173,100)
C 816 (A,206,96)

C 817 (B,216,98)
CKSRYB103K25
CKSRYB103K25
CEQJ101M16
CEAT101M16
CEAT101M10
CKSRYB103K25

Q VIDEO
MISCELLANEOUS

IC 301 (B,46,32) VIDEO SW IC NJM2595M
IC 303 (B,37,73) VIDEO SW IC NJM2243M
IC 851 (B,100,70) CHARACTER GENERATOR PDC131A
⚠ Q 301 (A,86,47) TRANSISTOR 2SC3377
⚠ Q 302 (A,66,52) TRANSISTOR 2SA1515

Q 303 (B,25,83) TRANSISTOR 2SC5938A
Q 852 (B,73,79) TRANSISTOR 2SC4081
D 301 (B,45,41) DIODE 1SS355
D 302 (B,41,46) DIODE 1SS355
D 303 (B,81,61) DIODE UDZS6R2(B)

D 304 (B,73,59) DIODE UDZS6R2(B)
D 305 (B,69,20) DIODE 1SS355
D 306 (B,61,23) DIODE 1SS355
D 307 (B,96,7) DIODE UDZS5R1(B)
D 359 (B,93,53) DIODE 1SS355

D 360 (B,96,48) DIODE 1SS355
D 651 (B,84,75) DIODE DAP202K

Mark No. **Description**
Part No.
Mark No. **Description**
Part No.
S FRONT VIDEO ASSY
MISCELLANEOUS

- A JA902 (A,152,231) PIN JACK(4P)
CN901 (A,117,238) CONNECTOR

AKX7014
B8B-PH

- C 53 (A,291,21) ELECT. CAPACITOR
C 54 (A,300,11)
C 55 (A,307,21)

CEAT102M16
CEAT470M25
CKPUYF103Z25

RESISTORS

- R 901 (B,166,230)
R 902 (B,182,228)
R 903 (B,170,230)
R 904 (B,178,228)
R 905 (B,151,225)
- R 906 (B,123,227)
R 907 (B,128,232)

RS1/16S331J
RS1/16S331J
RS1/16S474J
RS1/16S474J
RS1/16S750J

RS1/16S750J
RS1/16S750J

V TRANS1 ASSY

TRANS1 ASSY has no service part.

CAPACITORS

- C 901 (B,166,224)
C 902 (B,181,220)
C 903 (A,143,234) ELECTR. CAPACITOR
C 904 (B,126,227)
C 905 (A,122,233) ELECTR. CAPACITOR
- C 906 (B,165,218)
C 907 (B,167,218)
C 908 (B,170,218)
C 909 (B,150,218)
C 910 (B,152,218)

CCSRCH101J50
CCSRCH101J50
CEAL470M25
CKSRYB104K25
CEAL470M25

W USB ASY (VSX-916/MYXJ5)
MISCELLANEOUS

- IC 701 (A,37,40) USB MEDIA CONTROL IC
 ▲ IC 702 (A,63,35) REGULATOR IC
 ▲ IC 703 (A,87,25) REGULATOR IC
 IC 761 (A,63,46) SD-RAM(64M)
 IC 762 (A,87,46) FLASH ROM
 IC9762 FLASH MEMORY IC

TCC760HC01-AG
MM1561JF
BD7802FP
HY57V641620ETP-6
AYW7088
S29AL016D70TFI010

- IC 771 (A,58,59) LOAD SWITCHING
 IC 781 (A,37,16) AUDIO DAC
 IC 951 (A,67,28) IC
 IC 953 (A,52,25) IC
 Q 782 (B,94,44) CHIP TRANSISTOR

AAT4618IGV-0.5-1
AK4387ET
TC74VHCT08AFTS1
TC74VHCO8FTS1
DTC114YUA

- C C 911 (B,154,218)
C 912 (B,130,218)
C 913 (B,132,218)
C 914 (B,141,218)
C 915 (B,168,230)

CKSRYB103K25
CKSRYB104K25
CKSRYB471K50
CKSRYB103K25
CCSRCH101J50

- Q 783 (B,92,38) TRANSISTOR
 Q 784 (B,87,32) TRANSISTOR
 L 701 (B,27,42) INDUCTOR
 L 702 (B,34,33) CHIP SOLID INDUCTOR
 L 703 (A,24,30) CHIP SOLID INDUCTOR

2SA1576A
IMX9
LCTC100K1608
QTL1013
QTL1013

- C 916 (B,180,228)

CCSRCH101J50

- L 704 (B,53,56) CHIP SOLID INDUCTOR
 L 705 (B,28,38) CHIP FERRITE BEADS
 L 731 (A,28,60) CHIP FERRITE BEADS
 L 733 (A,36,56) COIL
 L 761 (B,78,47) CHIP SOLID INDUCTOR

QTL1013
VTL1169
VTL1169
VTH1043
QTL1013

U PRIMARY ASSY
MISCELLANEOUS

- D ▲ IC 51 (A,234,14) REGULATOR IC
 Q 51 (B,267,14) DIGITAL TR(SC-70)
 ▲ D 51 (B,298,20) BRIDGE DIODE
 D 55 (A,304,21) DIODE
 D 56 (A,271,21) DIODE

TA78057S
RT1N431M
DF06SA
1SR139-400
1SS133

- L 762 (B,85,44) CHIP SOLID INDUCTOR
 L 781 (B,46,19) CHIP SOLID INDUCTOR
 L 951 (A,59,30) CHIP SOLID INDUCTOR
 L 953 (A,72,37) CHIP SOLID INDUCTOR
 X 701 (A,23,42) CRYSTAL OSCILLATOR

QTL1013
QTL1013
QTL1013
QTL1013
CSS1614

- D 58 (A,314,13) ZENER DIODE
 H 51 (A,231,34) FUSE CLIP
 H 52 (A,250,34) FUSE CLIP
 J 52 JUMPER WIRE
 KN51 (A,318,25) WRAPPING TERMINAL

MTZJ5.1B
AKR7001
AKR7001
D20PY0410E
VNF1084

- CN701 (A,33,60) CONNECTOR
 CN702 (A,87,16) 15P SOCKET

B4B-PH
XKP3078

RESISTORS

- R 702 (A,43,55)
 R 703 (A,38,53)
 R 704 (A,35,53)
 R 705 (A,30,54)
 R 706 (A,30,52)
- R 707 (B,32,48)
 R 708 (B,22,51)
 R 709 (B,23,41)
 R 710 (B,35,42)
 R 711 (B,37,42)

RS1/16S473J
RS1/16S0R0J
RS1/16S0R0J
RS1/16S470J
RS1/16S470J

- R 712 (A,27,43)
 R 717 (A,31,29)
 R 718 (A,36,25)
 R 719 (A,35,25)
 R 720 (A,35,21)

RS1/16S475J
RS1/16S473J
RS1/16S101J
RS1/16S101J
RS1/16S101J

RESISTORS

- ▲ R 51 (A,318,37) RESISTOR(2.2M, 1/2W)
 R 52 (A,275,11)
 R 53 (A,307,12)
 R 54 (A,319,16)

RCN1080
RD1/2PM270J
RD1/4PU332J
RD1/4PU103J

- R 724 (A,39,21)
 R 725 (A,44,25)

RS1/16S472J
RS1/16S472J

CAPACITORS

- ▲ C 51 (A,261,64) FILM CAPACITOR
 ▲ C 52 (A,265,57) SAFETY CAPACITOR

ACE7013
XCG3009

Mark No.	Description	Part No.	Mark No.	Description	Part No.
R 726 (A,42,21)	RS1/16S472J	C 715 (B,26,38)	CKSRYB331K50		
R 727 (A,33,21)	RS1/16S101J	C 716 (B,32,33)	CKSRYB104K16		
R 729 (B,30,38)	RS1/16S103J	C 717 (B,30,33)	CCSRCH471J50	A	
R 730 (B,39,33)	RS1/16S102J	C 719 (A,25,36)	CCSRCH471J50		
R 734 (A,43,58)	RS1/16S0R0J	C 720 (B,23,30)	CKSRYB104K16		
R 735 (A,32,55)	RS1/16S153J	C 721 (A,24,24)	CEJQ101M6R3		
R 736 (A,40,55)	RS1/16S153J				
R 737 (A,34,55)	RS1/16S100J	C 723 (A,37,27)	CCSRCH471J50		
R 738 (A,39,55)	RS1/16S100J	C 724 (A,37,29)	CKSRYB104K16		
R 741 (B,79,23)	RS1/16S101J	C 726 (A,34,27)	CKSRYB104K16		
R 744 (A,77,20)	RS1/16S101J	C 727 (A,34,29)	CCSRCH471J50		
R 745 (A,76,21)	RS1/16S101J	C 728 (A,41,28)	CKSRYB104K16		
R 746 (A,74,20)	RS1/16S101J	C 729 (A,41,29)	CCSRCH471J50		
R 747 (A,72,20)	RS1/16S101J	C 730 (B,60,34)	CCSRCH471J50		
R 748 (A,71,20)	RS1/16S101J	C 731 (A,25,55)	CEJQ101M16	B	
R 755 (A,26,45)	RS1/16S0R0J	C 732 (B,29,55)	CKSRYB104K16		
R 756 (A,26,41)	RS1/16S472J	C 733 (B,29,60)	CKSRYB104K16		
R 757 (A,43,60)	RS1/16S0R0J	C 734 (B,41,32)	CKSRYB103K50		
R 771 (A,61,56)	RS1/16S221J	C 735 (B,37,33)	CKSRYB103K50		
R 772 (A,58,56)	RS1/16S104J	C 741 (A,92,19)	CEJQ101M16		
R 773 (A,71,59)	RS1/16S0R0J	C 742 (B,96,20)	CKSRYB104K16		
R 784 (A,30,21)	RS1/16S470J	C 743 (A,96,32)	CKSRYB105K6R3		
R 786 (A,41,21)	RS1/16S470J	C 745 (B,64,35)	CKSRYB105K6R3		
R 788 (A,44,21)	RS1/16S4R7J	C 746 (A,53,32)	CKSQYB225K10		
R 789 (A,74,25)	RS1/16S471J	C 761 (B,71,46)	CKSRYB104K16		
R 790 (A,79,23)	RS1/16S471J	C 762 (B,73,46)	CCSRCH471J50		
R 791 (B,83,34)	RS1/16S104J	C 763 (B,67,46)	CCSRCH471J50		
R 792 (B,90,30)	RS1/16S104J	C 764 (B,65,46)	CCSRCH471J50		
R 793 (B,83,30)	RS1/16S101J	C 766 (B,52,50)	CCSRCH471J50		
R 794 (B,90,34)	RS1/16S101J	C 767 (B,80,44)	CKSRYB104K16		
R 795 (A,87,33)	RS1/16S222J	C 768 (B,82,44)	CCSRCH471J50		
R 796 (A,87,30)	RS1/16S222J	C 771 (A,62,60)	CKSQYB105K16		
R 797 (B,92,44)	RS1/16S102J	C 773 (A,55,60)	CKSRYB104K16		
R 798 (B,95,38)	RS1/16S102J	C 781 (A,44,17)	CCSRCH471J50		
R 799 (B,90,38)	RS1/16S103J	C 782 (A,45,19)	CKSRYB104K16		
R 951 (B,43,26)	RS1/16S472J	C 783 (A,49,19)	CEJQ470M16	D	
R 952 (A,62,31)	RS1/16S472J	C 784 (A,45,16)	CKSRYB104K16		
R 966 (A,72,32)	RS1/16S101J	C 786 (A,55,16)	CEJQ100M16		
R 972 (A,62,28)	RS1/16S101J	C 788 (A,42,18)	CKSRYB104K16		
R 973 (A,73,29)	RS1/16S101J	C 789 (A,77,26)	CKSRYB102K50		
R 977 (A,47,25)	RS1/16S101J	C 790 (A,79,25)	CKSRYB102K50		
R 978 (A,47,28)	RS1/16S101J	C 791 (A,75,31)	CEJQ100M16		
R 979 (B,58,27)	RS1/16S101J	C 792 (A,81,31)	CEJQ100M16		
R 980 (B,60,27)	RS1/16S101J	C 951 (A,58,27)	CCSRCH471J50	E	
CAPACITORS		C 952 (A,59,27)	CKSRYB105K10		
C 701 (A,49,36)	CKSRYB104K16	C 956 (A,70,34)	CKSQYB105K10		
C 702 (A,47,36)	CCSRCH471J50	C 957 (A,70,33)	CCSRCH471J50		
C 703 (A,49,40)	CKSRYB104K16				
C 704 (A,47,40)	CCSRCH471J50				
C 705 (A,49,44)	CKSRYB104K16				
C 706 (A,47,44)	CCSRCH471J50	IC 951 (B,55,57) OP-AMP IC	HA17558AF		
C 707 (A,45,51)	CKSRYB104K16	D 951 (B,73,69) DIODE	UDZS5R1(B)		
C 708 (A,45,50)	CCSRCH471J50	D 952 (A,38,107) DIODE	UDZS5R1(B)		
C 709 (A,30,51)	CKSRYB104K16	D 953 (A,36,107) DIODE	UDZS5R1(B)		
C 710 (A,30,50)	CCSRCH471J50	D 957 (B,57,67) DIODE	DAN217U		
C 711 (B,30,45)	CKSRYB104K16	F 951 (B,60,12) INDUCTOR	CTF1295	F	
C 712 (B,27,45)	CCSRCH471J50	JA951 (A,80,16) OPTICAL IN MOD.	GP1FMV51RK0F		
C 713 (A,26,46)	CCSRCH120J50	JA952 (A,78,58) JACK	RKN1004		
C 714 (A,26,39)	CCSRCH120J50	KN951 (A,46,34) WRAPPING TERMINAL	VNF1084		
		CN951 (A,49,19) CONNECTOR POST	B5B-PH		

X USB IN ASSY MISCELLANEOUS

IC 951 (B,55,57) OP-AMP IC

D 951 (B,73,69) DIODE

D 952 (A,38,107) DIODE

D 953 (A,36,107) DIODE

D 957 (B,57,67) DIODE

F 951 (B,60,12) INDUCTOR

JA951 (A,80,16) OPTICAL IN MOD.

JA952 (A,78,58) JACK

KN951 (A,46,34) WRAPPING TERMINAL

CN951 (A,49,19) CONNECTOR POST

6. ADJUSTMENT

Mark No. Description

Part No.

CN952 (A,46,104) CONNECTOR

CKS3370

There is no information to be shown in this chapter.

A **RESISTORS**

R 951 (B,66,18)	RS1/16S101J
R 953 (A,38,72)	RS1/16S682J
R 954 (A,54,61)	RS1/16S101J
R 955 (A,50,67)	RS1/16S104J
R 956 (B,65,53)	RS1/16S102J

R 957 (B,57,69)	RS1/16S104J
R 958 (B,63,53)	RS1/16S104J
R 959 (B,63,59)	RS1/16S333J
R 960 (B,56,64)	RS1/16S472J
R 961 (B,59,57)	RS1/16S101J

B R 962 (B,41,63)	RS1/16S101J
R 963 (A,37,81)	RS1/16S104J
R 966 (B,51,63)	RS1/16S472J
R 967 (B,45,63)	RS1/16S333J
R 972 (A,48,70)	RS1/16S102J

R 973 (A,46,73)	RS1/16S0R0J
R 974 (A,35,106)	RS1/16S0R0J
R 975 (A,33,106)	RS1/16S0R0J

CAPACITORS

C 951 (B,64,12)	CKSRYB104K50
C 952 (B,35,59)	CKSRYB103K50
C 953 (B,33,59)	CKSRYB104K50
C 956 (A,43,68) CHIP ELECT.CAPACITOR	CEVW100M50
C 957 (A,51,67)	CKSRYB103K50
C 958 (A,43,79) CHIP ELECT.CAPACITOR	CEVW100M50
C 959 (A,48,67)	CKSRYB471K50
C 960 (A,56,68)	CCSRCH101J50
C 962 (A,39,81)	CKSRYB103K50
C 963 (A,34,99) CHIP ELECT.CAPACITOR	CEVW100M50
C 964 (B,43,63)	CCSRCH330J50
C 965 (B,63,61)	CCSRCH330J50
D C 967 (A,35,67) CHIP ELECT.CAPACITOR	CEVW100M50
C 968 (A,32,79) CHIP ELECT.CAPACITOR	CEVW100M50

Y FM/AM TUNER UNIT

FM/AM TUNER UNIT has no service part.

E

F




7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY


Note: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

- ① Remove the top cover (five screws).

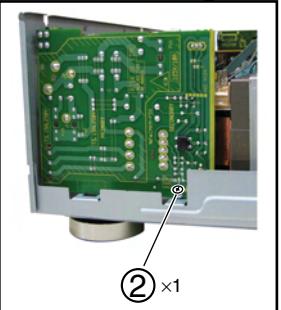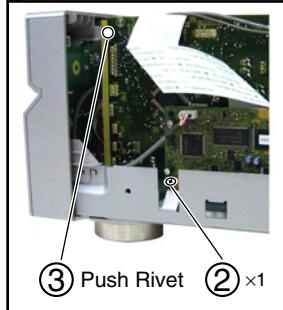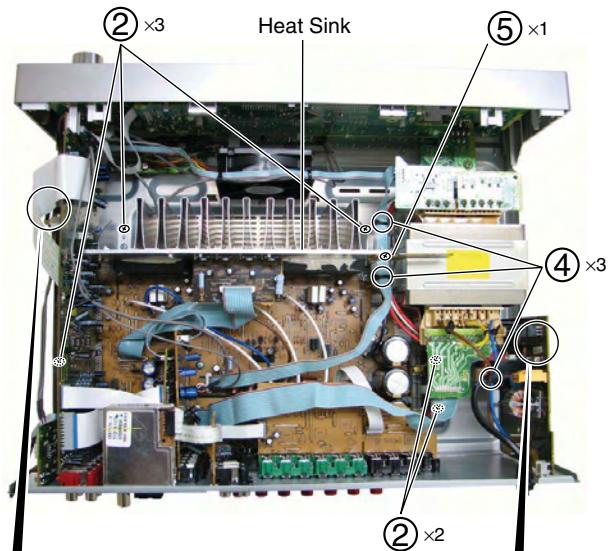

- ④ Cut 3 cable ties.



- ⑤ Remove PCB holder(one screw).

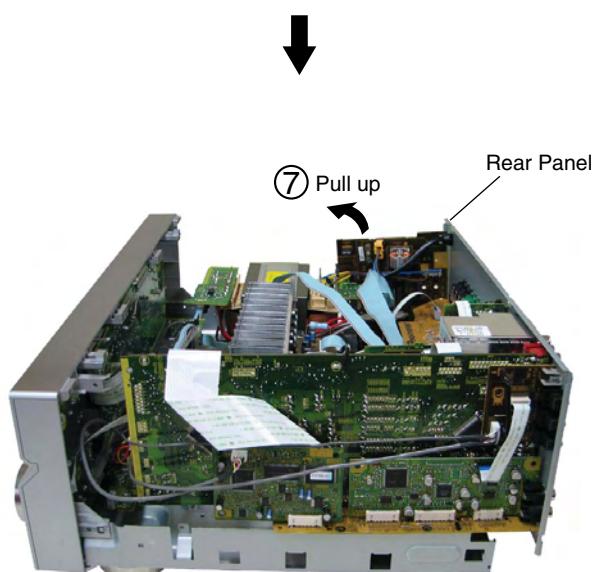

Note : The unit does not operate when the screws of Speaker Terminal are taken off from Rear Panel.


Heat-sink caution when disassembling : The Heat-sink becomes hot; please take care.

A **Note:** Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.

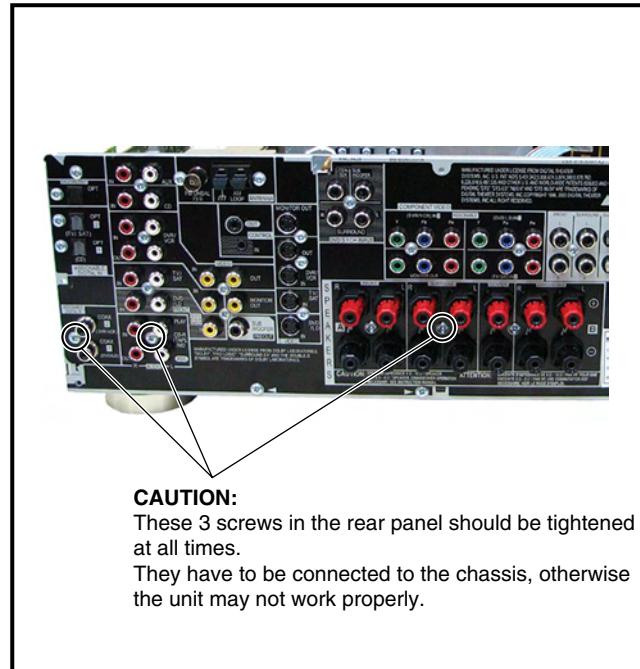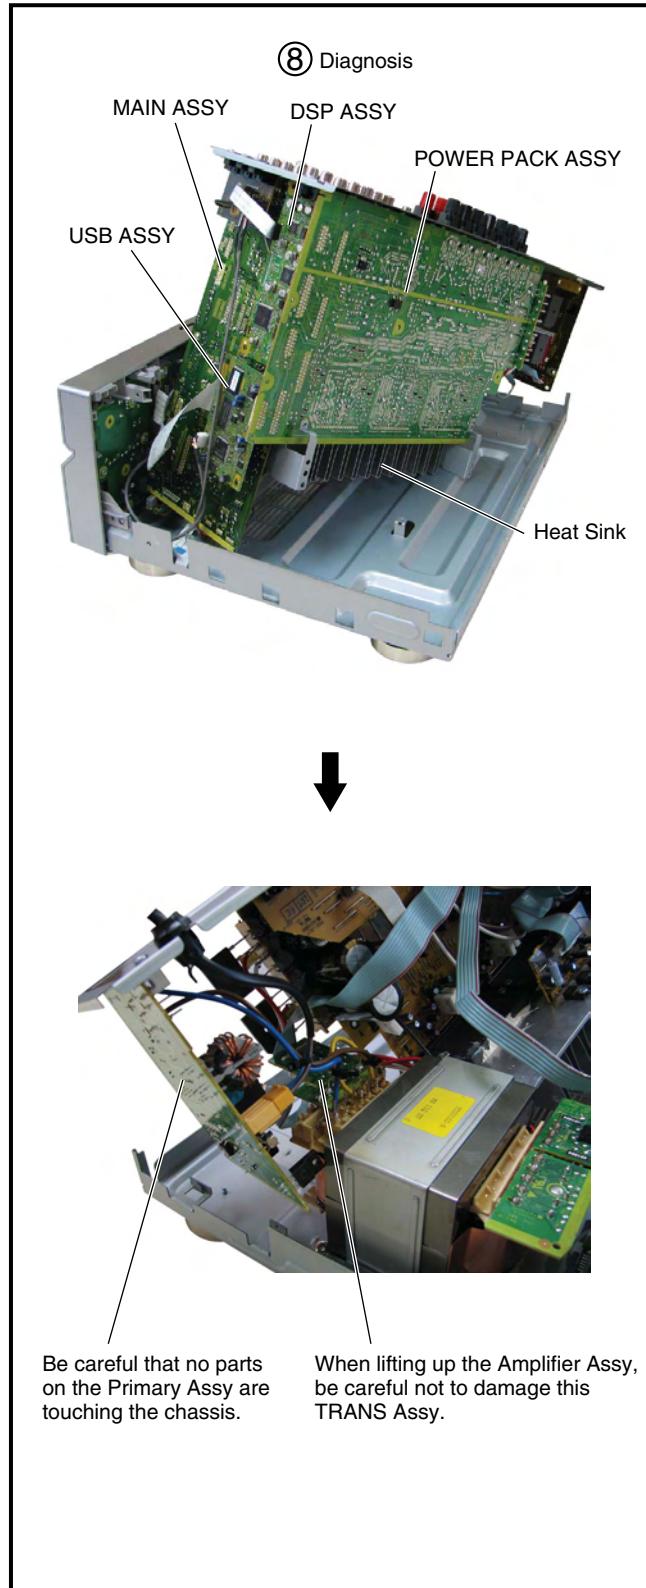

Note : The unit does not operate when the screws of Speaker Terminal are taken off from Rear Panel.

F **Heat-sink caution when disassembling :** The Heat-sink becomes hot; please take care.

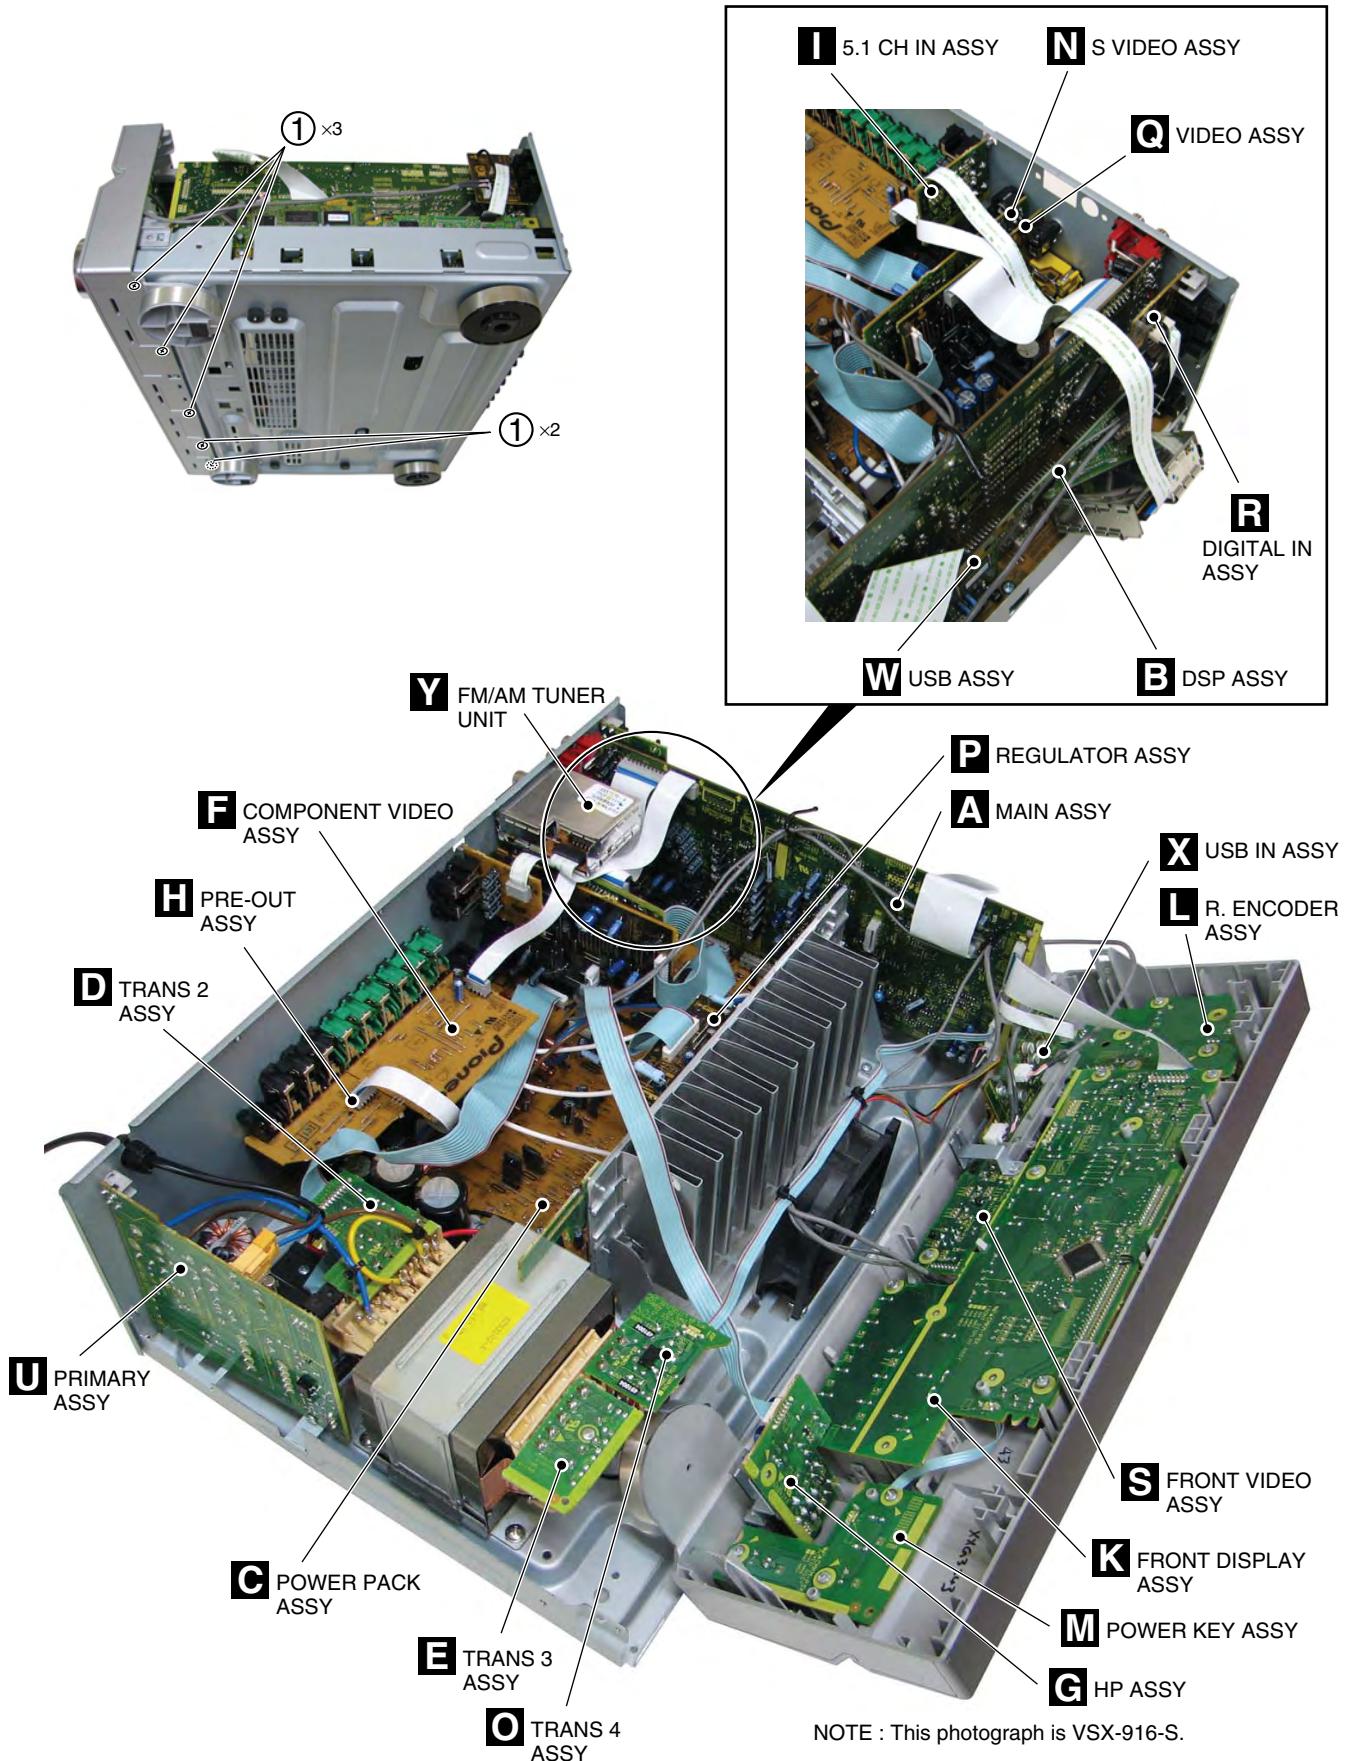

7.2 PARTS

7.2.1 IC

A

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

• List of IC


PEG216A, PE5550A, NJM2243M, NJM2595M, R2S15205FP, STK413-230C, TCC760HC01-AG, AAT4618IGV-0.5-1

■ PEG216A (MAIN ASSY : IC9001)

• System Control MCU

■ Pin Arrangement (Top View)

B

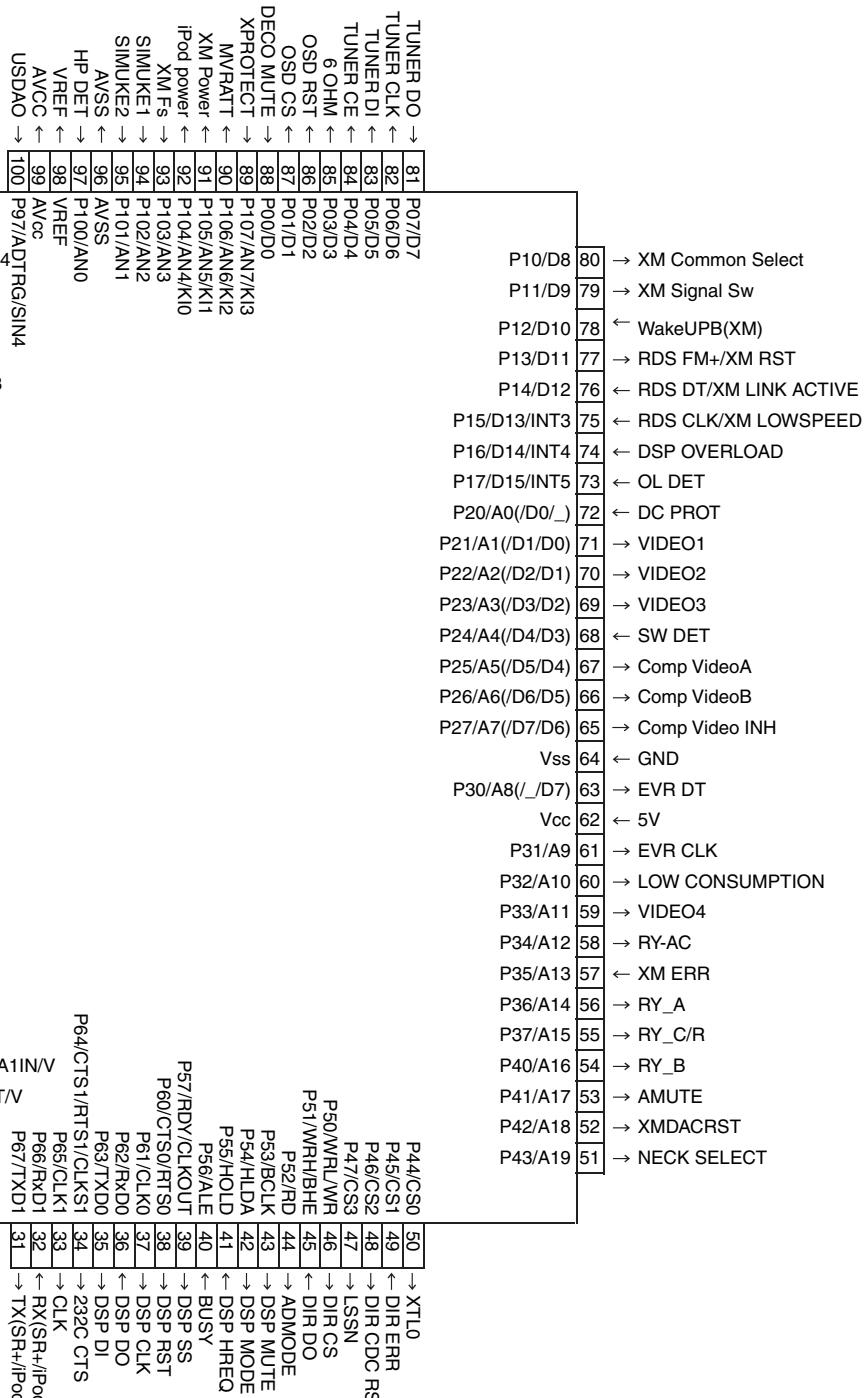

E

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
1	P96/ANEX1/SOUT4	USB DAI	I/O	data out to USB
2	P95/ANEX0/CLK4	USCLK	I/O	clock signal from USB
3	P94/DA1/TB4IN	DISP EN	I/O	enable signal to display u-com
4	P93/DA0/TB3IN	DISP RDY	I/O	ready signal from display u-com
5	P92/TB2IN/SOUT3	DISP DI/OSD DT	I/O	data out to display u-com/OSD IC
6	P91/TB1IN/SIN3	DISP DO	I/O	data in from display u-com
7	P90/TB0IN/CLK3	DISP CLK/OSD CLK	I/O	clock signal to display u-com/OSD IC
8	BYTE	GND		
9	CNVss	CNVSS		
10	P87/XCIN	I2C CK	I/O	clock for I2C communication with EEPROM IC
11	P86/XCOUT	I2C DT	I/O	data for I2C communication with EEPROM IC
12	RESET	XRESET		
13	XOUT	XOUT		
14	VSS	GND		
15	XIN	XIN		
16	VCC	5V		
17	P85/NMI	NMI	I	no use
18	P84/INT2	ACIN(WAKEUP)	I/O	AC pulse in
19	P83/INT1 P85/NMI	USB TREQ	I/O	Request from TCC760 to main u-com
20	P82/INT0	1W WUP	I/O	wake up signal from display u-com
21	P81/TA4IN/U	UART SW2	I/O	L:SR + route and H:iPod or XM route are selected.
22	P80/TA4OUT/U	USB HREQ	I/O	Request from main u-com to TCC760
23	P77/TA3IN	USB CTL	I/O	From main u-com to USB power switch IC
24	P76/TA3OUT	USB XFLAG	I/O	From USB power switch IC to main u-com
25	P75/TA2IN/W	iPod Sense	I/O	iPod Sense
26	P74/TA2OUT/W	USB XRST	I/O	reset signal to USB
27	P73/CTS2/RTS2/TA1IN/V	USCS	I/O	From main u-com to TCC760
28	P72/CLK2/TA1OUT/V	DISP RST	I/O	reset signal to display u-com
29	P71/RxD2/SCL/TA0IN/TB5IN	XM RX	I/O	XM communication
30	P70/TxD2/SDA/TA0OUT	XM TX	I/O	XM communication
31	P67/TxD1	TXD(SR+/iPod)	I/O	SR+/iPod communication
32	P66/RxD1	RXD(SR+/iPod)	I/O	SR+/iPod communication
33	P65/CLK1	CLK	I/O	It is necessary when writing for JIG
34	P64/CTS1/RTS1/CLKS1	232C CTS	I/O	For rewriting 232C (Admit communication)
35	P63/TxD0	DSP DI	I/O	Data output signal for communication with DSP and DIR
36	P62/RxD0	DSP DO	I/O	Data input signal for communication with DSP
37	P61/CLK0	DSP CLK	I/O	Clock signal for communication with DSP and DIR
38	P60/CTS0/RTS0	DSP RST	I/O	Reset signal for DSP
39	P57/RDY/CLKOUT	DSP SS	I/O	Strobe select signal to DSP
40	P56/ALE	BUSY	I/O	Use it in MCACC
41	P55/HOLD	DSP HREQ	I/O	DSP error detect signal
42	P54/HLDA	DSP MODE	I/O	Mode select of DSP (ROM/RAM)
43	P53/BCLK	DSP MUTE	I/O	DSP ASSY mute
44	P52/RD	ADMODE	I/O	DSP ASSY
45	P51/WRH/BHE	DIR DO	I/O	Data input signal for communication with DIR/DAC
46	P50/WRL/WR	DIR CS	I/O	Chip select signal for communication with DIR/DAC
47	P47/CS3	LSSN	I/O	DSP ASSY
48	P46/CS2	DIR CDC RST	I/O	Reset signal for DIR CODEC
49	P45/CS1	DIR ERR	I/O	lock/unlock signal
50	P44/CS0	XTL0	I/O	DIR X'tal change


• Pin Function

No.	Port	Pin Name	I/O	Pin Function
51	P43/A19	NECK_SEL	I/O	For 8ohm spk impedance: "H" at Adv Surr,Standard,5.1Multich.speaker A+B(7ch model). For 6 ohm spk impedance: L.
52	P42/A18	XMDACRST	I/O	RESET of 2chDAC for XM
53	P41/A17	AMUTE	I/O	System mute
54	P40/A16	RY_B	I/O	Speaker B relay-on / OFF at 916, 816 and 516. This RY_B is used for SW relay at 316.
55	P37/A15	RY_C/R	I/O	Rear one / center relay-on / OFF
56	P36/A14	RY_A	I/O	Speaker A relay-on / OFF
57	P35/A13	XM ERR	I/O	
58	P34/A12	RY-AC	I/O	AC relay on/off
59	P33/A11	VIDEO4	I/O	NJM2296 control (VIDEO input select) (SX316 no connect)
60	P32/A10	LOW_CONSUMPTION	I/O	When 1 minutes passed after power off and then go into stop mode and port L, else H.
61	P31/A9	EVR CLK	I/O	Clock signal for Function and E-volume
62	Vcc	5V		
63	P30/A8(/_D7)	EVR DT	I/O	Data signal for Function and E-volume
64	Vss	GND		
65	P27/A7(/D7/D6)	COMP VIDEO INH	I/O	Component terminal control
66	P26/A6(/D6/D5)	COMP VIDEOB	I/O	Component terminal control
67	P25/A5(/D5/D4)	COMP VIDEOA	I/O	Component terminal control
68	P24/A4(/D4/D3)	SWDET	I/O	"H": SW YES, "L": SW NO (SX316 no connect)
69	P23/A3(/D3/D2)	VIDEO3	I/O	NJM2296 control (VIDEO input select) (SX316 no connect)
70	P22/A2(/D2/D1)	VIDEO2	I/O	NJM2296 control (VIDEO input select) (SX316 no connect)
71	P21/A1(/D1/D0)	VIDEO1	I/O	NJM2296 control (VIDEO input select) (SX316 no connect)
72	P20/A0(/D0/_)	DC PROTECT	I/O	Amplifier DC detection. H:Normal, L:Abnormal
73	P17/D15/INT5	OL DET	I/O	Amplifier overload detection. H:Normal, L:Abnormal
74	P16/D14/INT4	DSP OVERLOAD	I/O	ANALOG OVER LOAD detect (H : detect)
75	P15/D13/INT3	RDS CLK/XM LOWSPEED	I/O	RDS clock in signal/XM Lowspeed
76	P14/D12	RDS DT/Link ACTIVE(XM)	I/O	RDSdata in signal/XM Link Active
77	P13/D11	RDS FM+/XM RST	I/O	RDS power supply/XM reset. FM : Low, AM:High
78	P12/D10	WAKE UPB(XM)	I/O	XMDT for communication
79	P11/D9	XM Signal Sw	I/O	CLK,DT, etc. XM/DIR selector (XM : High)
80	P10/D8	XM Common Select	I/O	XM
81	P07/D7	TUNER DO	I/O	Data input signal for tuner control
82	P06/D6	TUNER CLK	I/O	Clock signal for tuner control
83	P05/D5	TUNER DI	I/O	Data output signal for tuner control
84	P04/D4	TUNER CE	I/O	Chip select signal for tuner control
85	P03/D3	6 OHM	I/O	if stop mode, port L, else according to setting(J model No connect)
86	P02/D2	OSD RST	I/O	
87	P01/D1	OSD CS	I/O	
88	P00/D0	DECO MUTE	I/O	1st DSP detect port
89	P107/AN7/KI3	XPROTECT	I/O	Power supply abnormal condition detection. H: Normal, L: Abnormal.
90	P106/AN6/KI2	MVRATT	I/O	Master volume ATT control (-15dB or less : L)
91	P105/AN5/KI1	XM POW	I/O	XM antenna power supply. H always. When abnormally detecting it, it makes it to L.
92	P104/AN4/KI0	iPod POW	I/O	iPod power supply. H always. When abnormally detecting it, it makes it to L.
93	P103/AN3	XM Fs	I/O	XM
94	P102/AN2	SIMUKE1	I/O	Input 1 to switch region
95	P101/AN1	SIMUKE2	I/O	Input 2 to switch region
96	AVSS	AVSS		connects with VCC.
97	P100/AN0	HP DET	I/O	HP detection H:detected.
98	VREF	VREF		connects with VCC.
99	AVcc	AVCC		connects with VCC.
100	P97/ADTRG/SIN4	USDAO	I/O	data input from USB

■ PE5550A (FRONT DISPLAY ASSY : IC401)

- System Control MCU

■ Pin Arrangement (Top View)

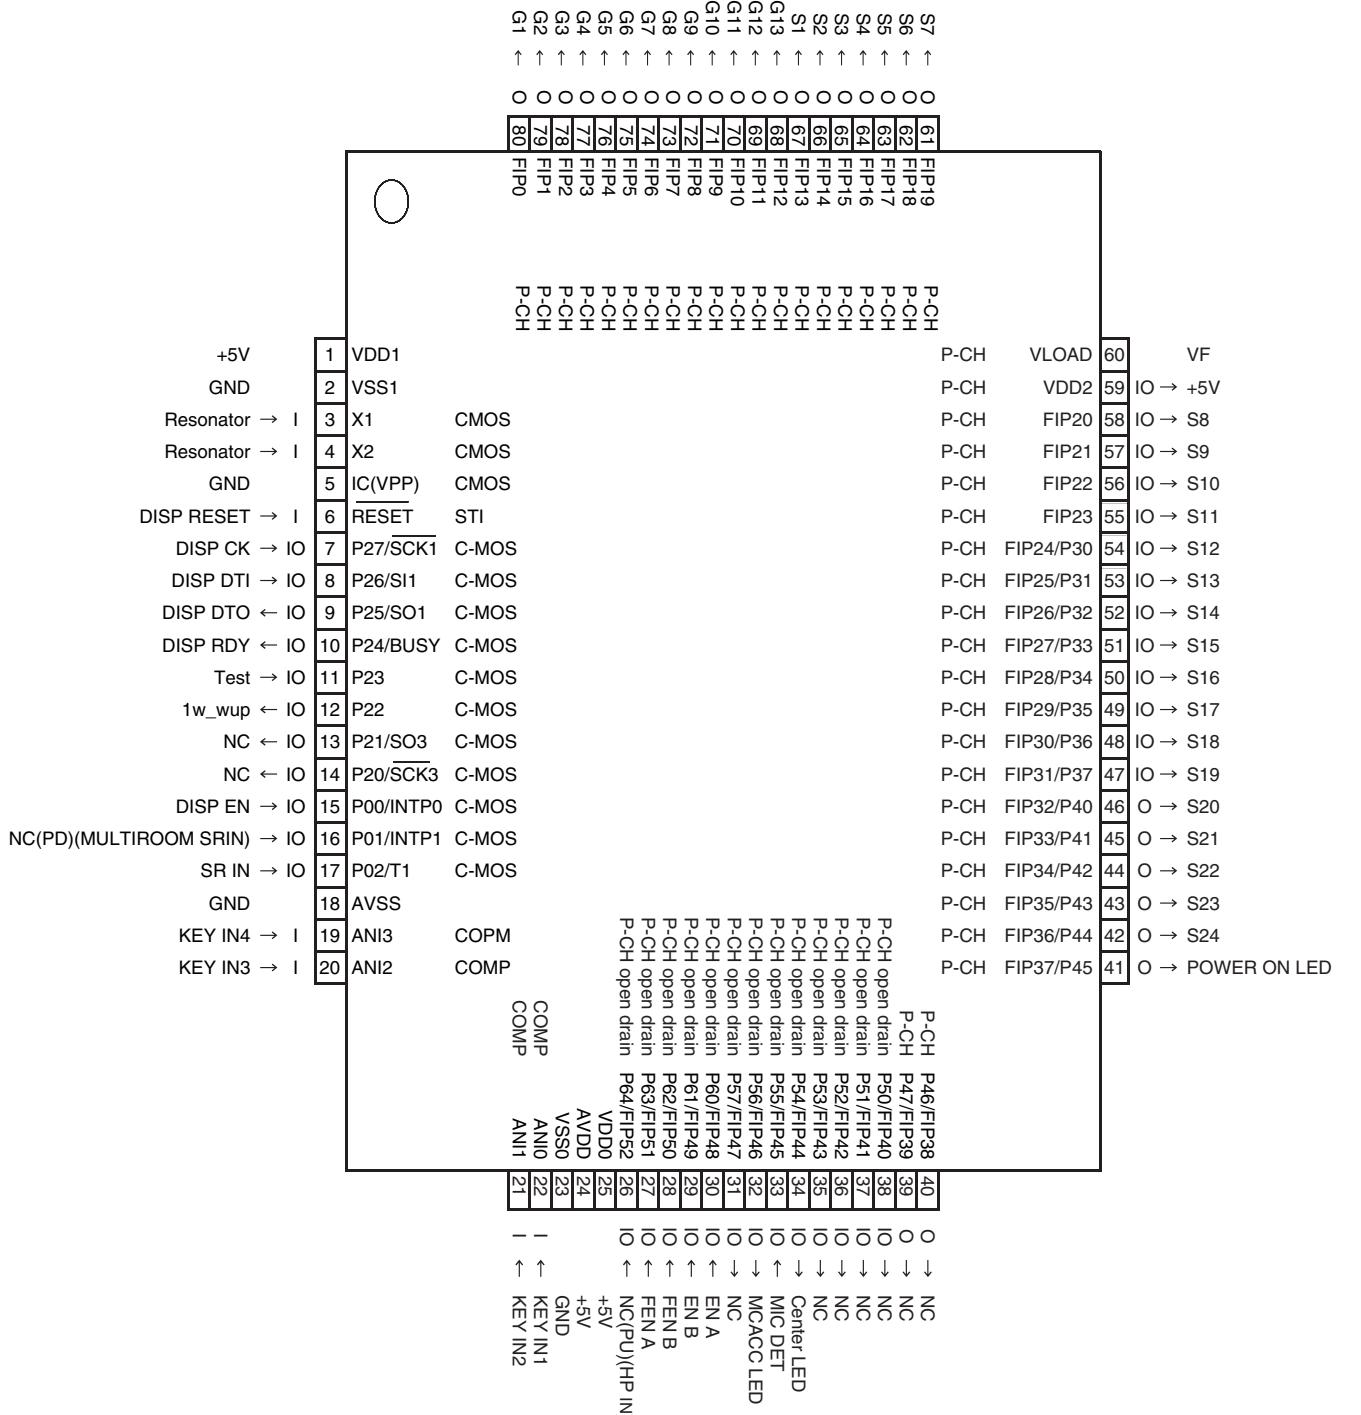

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
1	VDD1	+5V	-	positive power supply
2	VSS1	GND	-	ground potential
3	X1	Resonator	I	crystal connection for system clock oscillation
4	X2	Resonator	-	crystal connection for system clock oscillation
5	IC(VPP)	GND	-	
6	RESET	DISP RESET	I	receive reset signal from main u-com
7	P27/SCK1	DISP CK	I/O	clock signal from main u-com
8	P26/SI1	DISP DTI	I/O	datain from main u-com
9	P25/SO1	DISP DTO	I/O	data out to main u-com
10	P24/BUSY	DISP RDY	I/O	ready signal from main u-com
11	P23	Test	I/O	test mode input for checker
12	P22	1w_wup	I/O	output wakeup signal to main u-com
13	P21/SO3	NC	I/O	
14	P20/SCK3	NC	I/O	
15	P00/INTP0	DISP EN	I/O	enable signal from main u-com
16	P01/INTP1	NC	I/O	
17	P02/T1	SR IN	I/O	remote control signal input from main room
18	AVSS	GND	-	ground potential for A/D converter
19	ANI3	KEY IN4	I	
20	ANI2	KEY IN3	I	
21	ANI1	KEY IN2	I	
22	ANI0	KEY IN1	I	
23	VSS0	GND	-	ground potential for ports
24	AVDD	+5V	-	analog power voltage input to A/D converter
25	VDD0	+5V	-	positive power supply to ports
26	P64/FIP52	NC	I/O	
27	P63/FIP51	FEN A	I/O	MULTI JOG(Right)
28	P62/FIP50	FEN B	I/O	MULTI JOG(Left)
29	P61/FIP49	EN B	I/O	VOLUME JOG1(-)
30	P60/FIP48	EN A	I/O	VOLUME JOG1(+)
31	P57/FIP47	NC	I/O	NC
32	P56/FIP46	MCACC LED	I/O	MCACC LED output
33	P55/FIP45	MIC DET	I/O	MIC detection. L:detected, H:No detect
34	P54/FIP44	Center LED	I/O	Digital Precision Processing LED. H:ON, L:OFF. Only for 816KU, 816SF, 916MY, 516J
35	P53/FIP43	NC	I/O	NC
36	P52/FIP42	NC	I/O	NC
37	P51/FIP41	NC	I/O	NC
38	P50/FIP40	NC	I/O	NC
39	P47/FIP39	NC	O	NC
40	P46/FIP38	NC	O	NC
41	FIP37/P45	POWER ON LED	I/O	POWER LED output
42	FIP36/P44	S24	O	Display
43	FIP35/P43	S23	O	Display
44	FIP34/P42	S22	O	Display
45	FIP33/P41	S21	O	Display
46	FIP32/P40	S20	O	Display
47	FIP31/P37	S19	O	Display
48	FIP30/P36	S18	O	Display
49	FIP29/P35	S17	O	Display
50	FIP28/P34	S16	O	Display

• Pin Function

No.	Port	Pin Name	I/O	Pin Function
51	FIP27/P33	S15	O	Display
52	FIP26/P32	S14	O	Display
53	FIP25/P31	S13	O	Display
54	FIP24/P30	S12	O	Display
55	FIP23	S11	O	Display
56	FIP22	S10	O	Display
57	FIP21	S9	O	Display
58	FIP20	S8	O	Display
59	VDD2	+5V	-	positive power supply to FIP controller.
60	VLOAD	VF	-	pull down resistor connection of FIP controller
61	FIP19	S7	O	Display
62	FIP18	S6	O	Display
63	FIP17	S5	O	Display
64	FIP16	S4	O	Display
65	FIP15	S3	O	Display
66	FIP14	S2	O	Display
67	FIP13	S1	O	Display
68	FIP12	G13	O	Display
69	FIP11	G12	O	Display
70	FIP10	G11	O	Display
71	FIP9	G10	O	Display
72	FIP8	G9	O	Display
73	FIP7	G8	O	Display
74	FIP6	G7	O	Display
75	FIP5	G6	O	Display
76	FIP4	G5	O	Display
77	FIP3	G4	O	Display
78	FIP2	G3	O	Display
79	FIP1	G2	O	Display
80	FIP0	G1	O	Display

A

B

C

D


E

F


■ NJM2243M (VIDEO ASSY : IC303) (S. VIDEO ASSY : IC1102, IC1103)

- 3-INPUT VIDEO SWITCH WITH 75Ω DRIVER

● Pin Configuration (Top view)

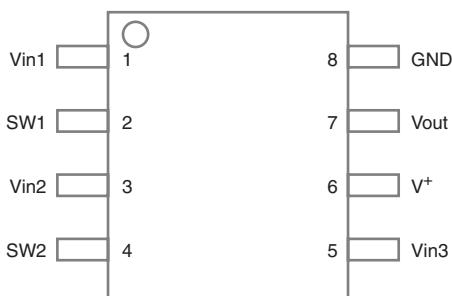

● Block Diagram

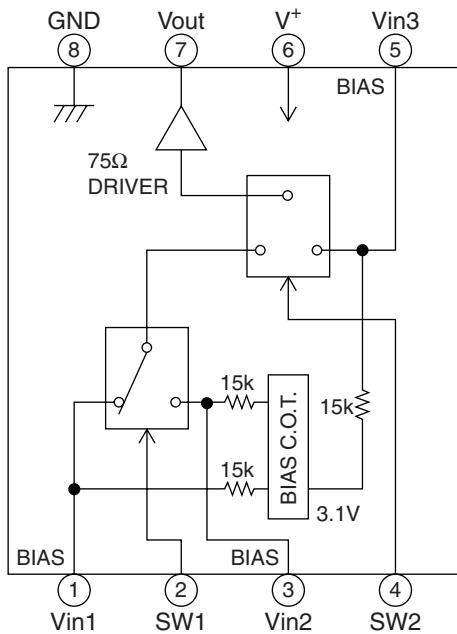

A

B

C

D


E

F


■ NJM2595M (VIDEO ASSY : IC301) (S. VIDEO ASSY : IC351, IC352)

• 5-INPUT 3-OUTPUT VIDEO SWITCH

● Pin Configuration (Top view)

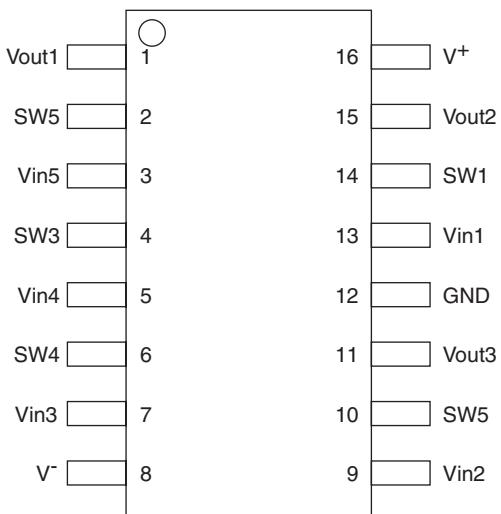


● Block Diagram

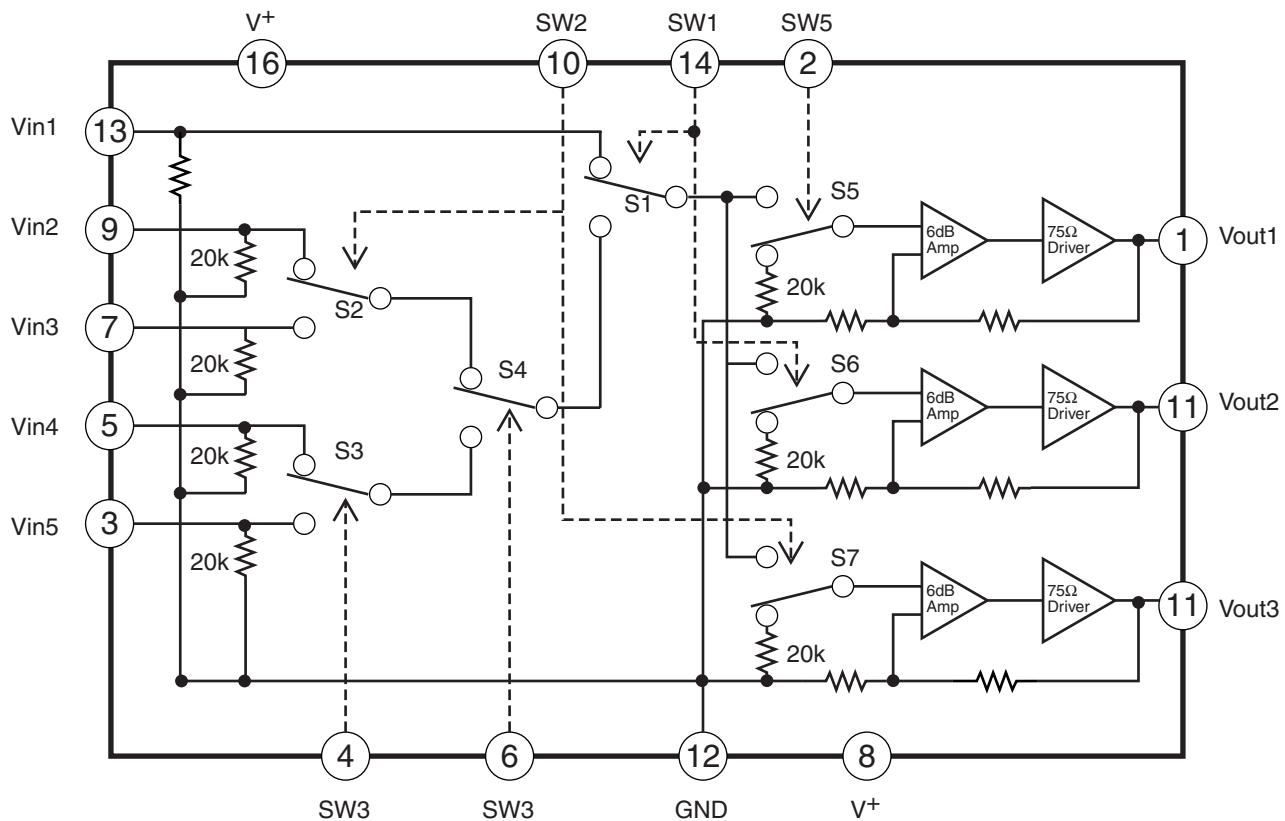

■ R2S15205FP (MAIN ASSY : IC108)

- 8ch electronic volume with 11 input selectors and tone control

● Block Diagram

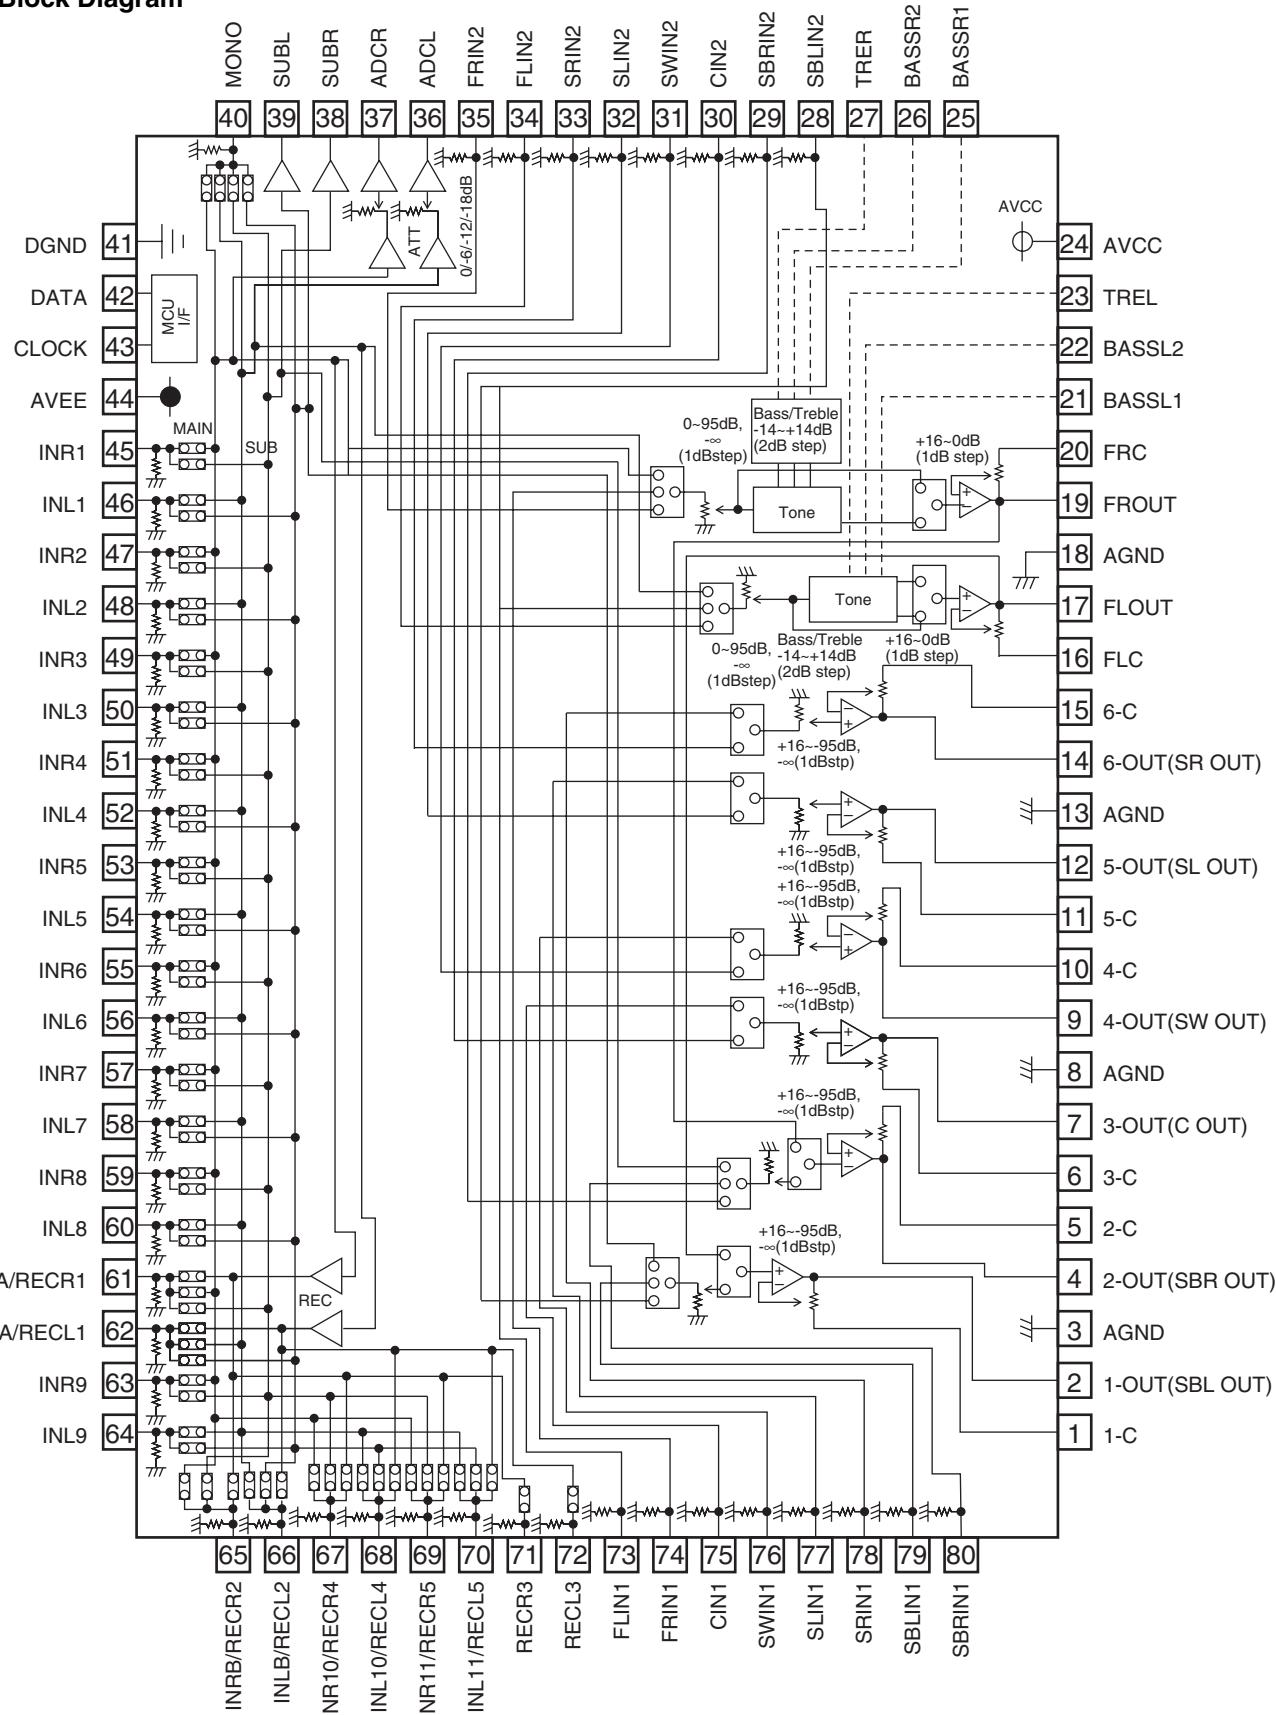

● Pin Function

PIN No.	Name	Function
19,17, 14,12, 9,7, 4,2	FROUT,FLOUT, 6-OUT,5-OUT, 4-OUT,3-OUT, 2-OUT,1-OUT	Output pin of FL/FR/C/SW/SL/SR/SBL/SBR channel
20,16, 15,11, 10,6, 5,1	FRC,FLC, 6-C,5-C, 4-C,3-C, 2-C,1-C	Connects capacitor for reducing click noise of L/R/C/SW/SL/SR/SBL/SBR channel volume
3,8, 13,18	AGND	Analog ground of internal circuit
23,27	TREL,TRER	Frequency characteristic setting pin of L/R channel tone control(Treble)
21,22, 25,26	BASSL1,BASSL2, BASSR1,BASSR2,	Frequency characteristic setting pin of L/R channel tone control(Bass)
24	AVCC	Positive power supply to internal circuit
35,34, 33,32, 31,30, 29,28	FRIN2,FLIN2, SRN2,SLIN2, SWN2,CIN2, SBRIN2,SBLIN2,	Input pin of L/R/C/SW/SL/SR/SBL/SBR channel(Multi IN 1/2)
73,74, 75,76, 77,78, 79,80	FLIN1,FRIN1, CIN1,SWIN1, SLIN1SRIN1, SBLIN1,SBRIN1	
41	DGND	Digital ground of internal circuit
42	DATA	Input pin of control data
43	CLOCK	Input pin of control clock
44	AVEE	Negative power supply to internal circuit
46,48,50, 52,54,56, 58,60,64	INL1,INL2,INL3, INL4,INL5,INL6, INL7,INL8,INL9	Input pin of L/R channel(Input Selector)
45,47,49, 51,53,55, 57,59,63	INR1,INR2,INR3, INR4,INR5,INR6, INR7,INR8,INR9	
40	MONO	Input pin of monaural(Input Selector)
38,39	SUBL,SUBR	Output pin for L/R channel SUB Output
36,37	ADCL,ADCR	Output pin for L/R channel ADC
72	RECL3	Output pin for L/R channel REC Output
71	RECR3	Input pin of L/R channel(Input Selector)/ Output pin for L/R channel REC Output
61,62, 65,66, 67,68, 69,70	INRA/RECR1,INLA/RECL1, INRB/RECR2,INLB/RECL2, INR10/RECR4,INL10/RECL4, INR11/RECR5,INL11/RECL5,	

1

2


3

4


■ STK413-230C (POWER PACK ASSY : IC603)

- 3-channel high efficiency AF power amplifier

● Pin Configuration

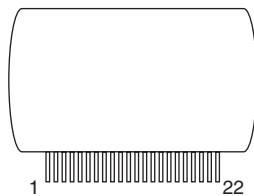

● Block Diagram

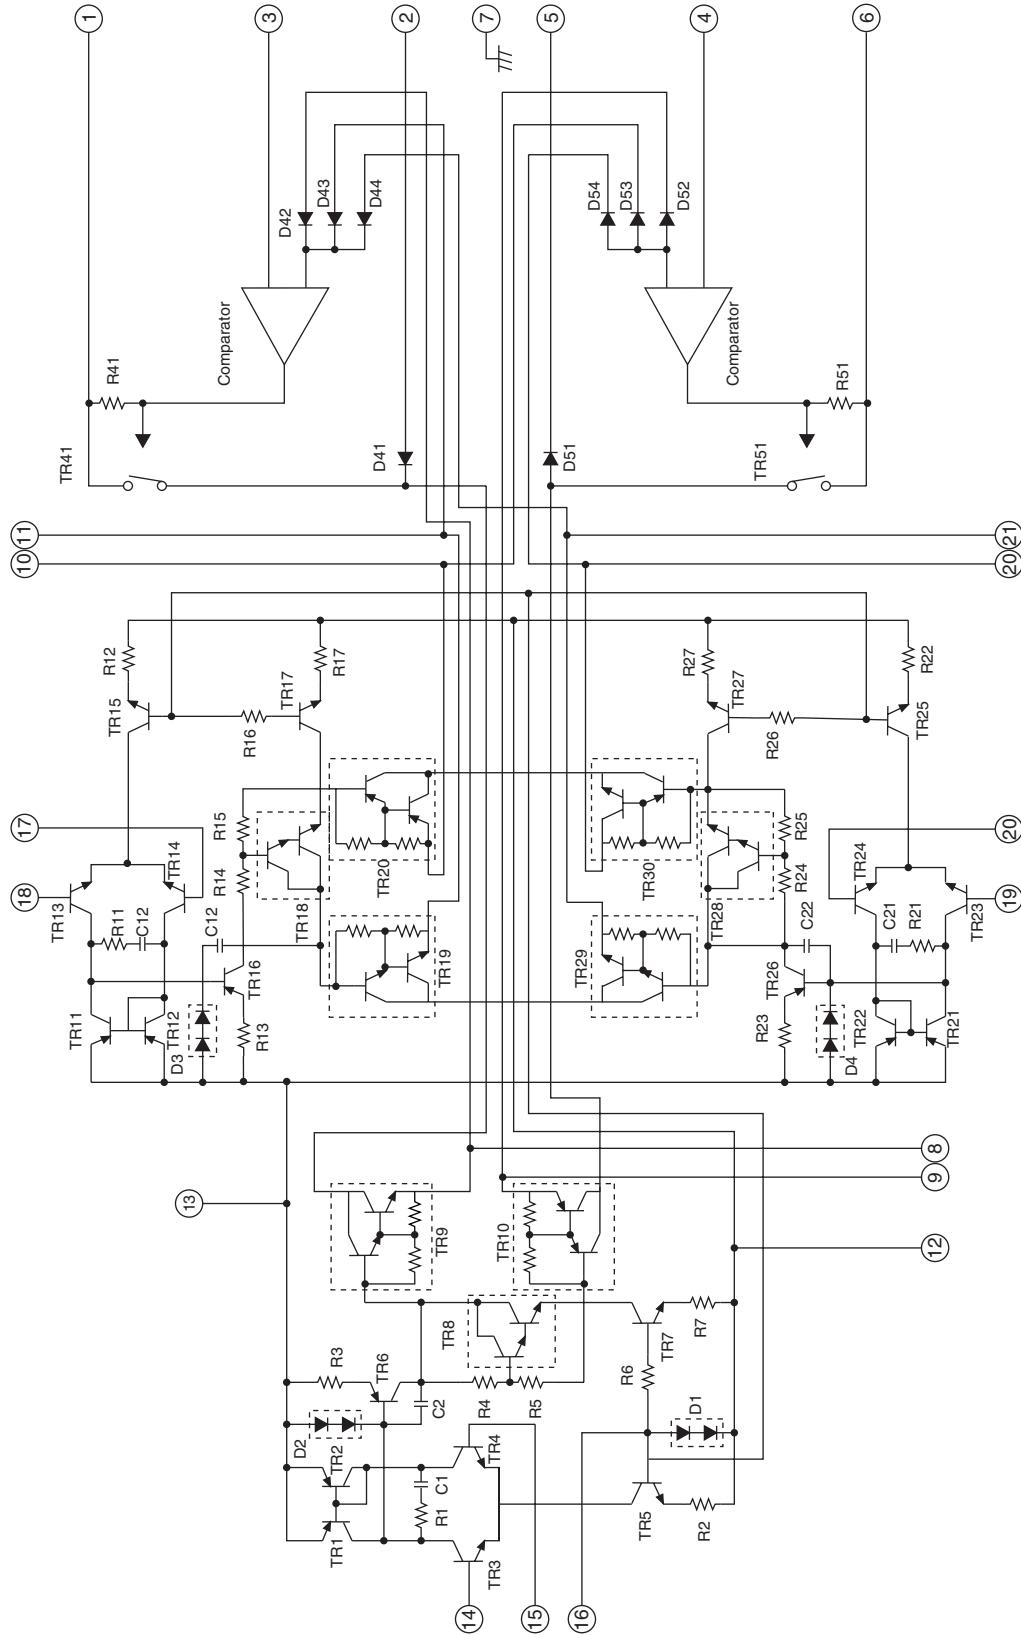


F


■ TCC760HC01-AG (USB ASSY : IC701)

• USB Media Control IC

● Pin Arrangement (Top view)

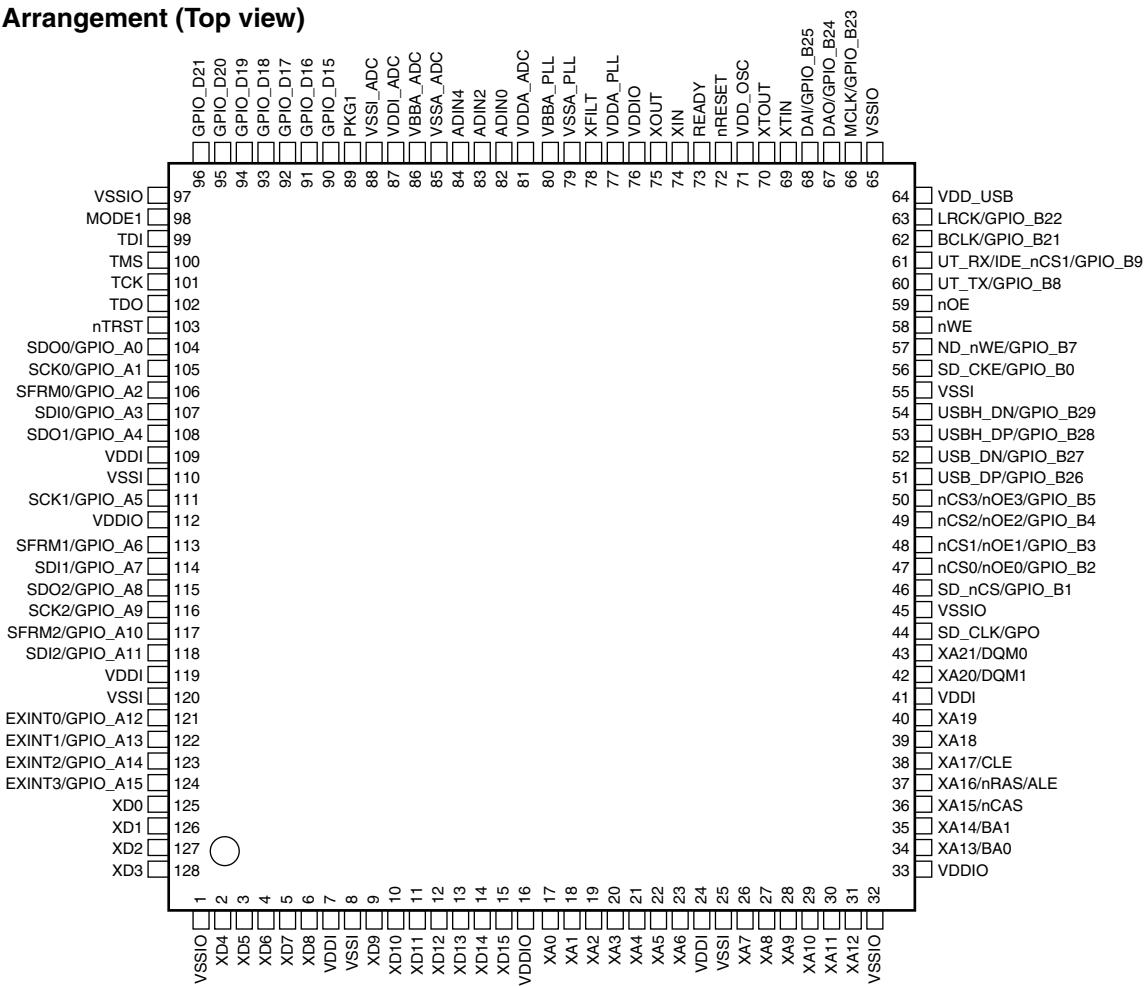

● Block Diagram

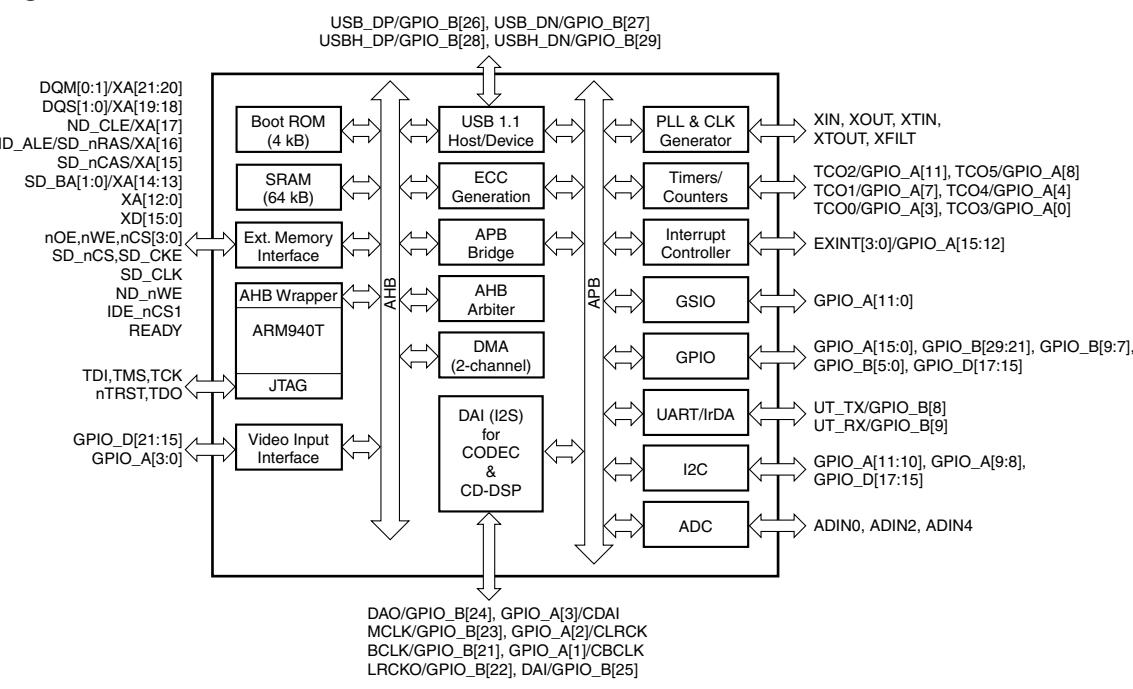

● Pin Functions

No.	Pin Name	I/O	Pin Function
1	VSSIO	—	Digital ground for I/O
2	XD4	I/O	External bus data bit [4]
3	XD5	I/O	External bus data bit [5]
4	XD6	I/O	External bus data bit [6]
5	XD7	I/O	External bus data bit [7]
6	XD8	I/O	External bus data bit [8]
7	VDDI	—	Digital power supply for internal core (1.8 V)
8	VSSI	—	Digital ground for internal
9	XD9	I/O	External bus data bit [9]
10	XD10	I/O	External bus data bit [10]
11	XD11	I/O	External bus data bit [11]
12	XD12	I/O	External bus data bit [12]
13	XD13	I/O	External bus data bit [13]
14	XD14	I/O	External bus data bit [14]
15	XD15	I/O	External bus data bit [15]
16	VDDIO	—	Digital power supply for I/O (1.8 V to 3.3 V)
17	XA0	I/O	External bus address bit [0]
18	XA1	I/O	External bus address bit [1]
19	XA2	I/O	External bus address bit [2]
20	XA3	I/O	External bus address bit [3]
21	XA4	I/O	External bus address bit [4]
22	XA5	I/O	External bus address bit [5]
23	XA6	I/O	External bus address bit [6]
24	VDDI	—	Digital power supply for internal core (1.8 V)
25	VSSI	—	Digital ground for internal
26	XA7	I/O	External bus address bit [7]
27	XA8	I/O	External bus address bit [8]
28	XA9	I/O	External bus address bit [9]
29	XA10	I/O	External bus address bit [10]
30	XA11	I/O	External bus address bit [11]
31	XA12	I/O	External bus address bit [12]
32	VSSIO	—	Digital ground for I/O
33	VDDIO	—	Digital power supply for I/O (1.8 V to 3.3 V)
34	XA13/BA0	I/O	External bus address bit [13] / SDRAM bank address 0
35	XA14/BA1	I/O	External bus address bit [14] / SDRAM bank address 1
36	XA15/nCAS	I/O	External bus address bit [15] / SDRAM CAS signal
37	XA16/nRAS/ALE	I/O	External bus address bit [16] / SDRAM RAS signal / ALE for NAND flash
38	XA17/CLE	I/O	External bus address bit [17] / CLE for NAND flash
39	XA18	I/O	External bus address bit [18]
40	XA19	I/O	External bus address bit [19]
41	VDDI	—	Digital power supply for internal core (1.8 V)
42	XA20/DQM1	I/O	External bus address bit [20] / Data I/O mask 1
43	XA21/DQM0	I/O	External bus address bit [21] / Data I/O mask 0
44	SD_CLK/GPO	I/O	SDRAM clock / GPO, SD_CLK can be used as a general purpose output.
45	VSSIO	—	Digital ground for I/O
46	SD_nCS/GPIO_B1	I/O	Chip select signal for SDRAM, active low / GPIO_B[1]
47	nCS0/nOE0/GPIO_B2	I/O	External bus chip select [0] / NAND flash output enable [0] / GPIO_B[2]
48	nCS1/nOE1/GPIO_B3	I/O	External bus chip select [1] / NAND flash output enable [1] / GPIO_B[3]
49	nCS2/nOE2/GPIO_B4	I/O	External bus chip select [2] / NAND flash output enable [2] / GPIO_B[4]
50	nCS3/nOE3/GPIO_B5	I/O	External bus chip select [3] / NAND flash output enable [3] / GPIO_B[5]

No.	Pin Name	I/O	Pin Function
51	USB_DP/GPIO_B26	I/O	USB function D+ signal / GPIO_B[26]
52	USB_DN/GPIO_B27	I/O	USB function D- signal / GPIO_B[27]
53	USBH_DP/GPIO_B28	I/O	USB host D+ signal / GPIO_B[28]
54	USBH_DN/GPIO_B29	I/O	USB host D- signal / GPIO_B[29]
55	VSSI	-	Digital ground for internal
56	SD_CKE/GPIO_B0	I/O	SDRAM clock enable signal, active high / GPIO_B[0]
57	ND_nWE/GPIO_B7	I/O	NAND flash WE, active low / GPIO_B[7]
58	nWE	I/O	Static memory write enable signal, active low
59	nOE	I/O	Static memory output enable signal, active low
60	UT_TX/GPIO_B8	I/O	UART or IrDA TX data / GPIO_B[8]
61	UT_RX/IDE_nCS1/GPIO_B9	I/O	UART or IrDA RX data / IDE chip select 1 / GPIO_B[9]
62	BCLK/GPIO_B21	I/O	I2S bit clock / GPIO_B[21]
63	LRCK/GPIO_B22	I/O	I2S word clock / GPIO_B[22]
64	VDD_USB	-	Power supply for USB I/O (3.3 V)
65	VSSIO	-	Digital ground for I/O
66	MCLK/GPIO_B23	I/O	I2S system clock / GPIO_B[23]
67	DAO/GPIO_B24	I/O	I2S digital audio data output / GPIO_B[24]
68	DAI/GPIO_B25	I/O	I2S digital audio data input / GPIO_B[25]
69	XTIN	I	Sub crystal oscillator input (32.768 kHz)
70	XTOUT	O	Sub crystal oscillator output (32.768 kHz)
71	VDD_OSC	-	Digital power supply for oscillators (1.8 V)
72	nRESET	I	System reset, active low
73	READY	I	Ready information from external device
74	XIN	I	Main crystal oscillator input for PLL (12 MHz)
75	XOUT	O	Main crystal oscillator output for PLL (12 MHz)
76	VDDIO	-	Digital power supply for I/O (1.8 V to 3.3 V)
77	VDDA_PLL	-	Analog and digital power supply for PLL (1.8 V)
78	XFILT	AO	PLL filter output
79	VSSA_PLL	-	Analog ground for PLL
80	VBBA_PLL	-	Analog ground for PLL
81	VDDA_ADC	-	Analog power supply for ADC (3.3 V)
82	ADIN0	AI	General purpose multi-channel ADC input 0
83	ADIN2	AI	General purpose multi-channel ADC input 2
84	ADIN4	AI	General purpose multi-channel ADC input 4
85	VSSA_ADC	-	Analog ground for ADC
86	VBBA_ADC	-	Analog ground for ADC
87	VDDI_ADC	-	Digital power supply for ADC (1.8 V)
88	VSSI_ADC	-	Digital ground for ADC
89	PKG1	I	Package ID 1, pull-up for normal operation
90	GPIO_D15	I/O	GPIO_D[15]
91	GPIO_D16	I/O	GPIO_D[16]
92	GPIO_D17	I/O	GPIO_D[17]
93	GPIO_D18	I/O	GPIO_D[18]
94	GPIO_D19	I/O	GPIO_D[19]
95	GPIO_D20	I/O	GPIO_D[20]
96	GPIO_D21	I/O	GPIO_D[21]
97	VSSIO	-	Digital ground for I/O
98	MODE1	I	Mode select input 1, Pull-down for normal operation.
99	TDI	I	JTAG serial data input for ARM940T
100	TMS	I	JTAG test mode select for ARM940T

A

B

C

D

E

F

No.	Pin Name	I/O	Pin Function
101	TCK	I	JTAG test clock for ARM940T
102	TDO	I/O	JTAG serial data output for ARM940T
103	nTRST	I	JTAG reset signal for ARM940T, active low
104	SDO0(GPIO_A0)	I/O	Serial data output 0 / GPIO_A[0]
105	SCK0(GPIO_A1)	I/O	Serial clock input 0 / GPIO_A[1]
106	SFRM0(GPIO_A2)	I/O	Serial frame 0 / GPIO_A[2]
107	SDI0(GPIO_A3)	I/O	Serial data input 0 / GPIO_A[3]
108	SDO1(GPIO_A4)	I/O	Serial data output 1 / GPIO_A[4]
109	VDDI	-	Digital power supply for internal core (1.8 V)
110	VSSI	-	Digital ground for internal
111	SCK1(GPIO_A5)	I/O	Serial clock input 1 / GPIO_A[5]
112	VDDIO	-	Digital power supply for I/O (1.8 V to 3.3 V)
113	SFRM1(GPIO_A6)	I/O	Serial frame 1 / GPIO_A[6]
114	SDI1(GPIO_A7)	I/O	Serial data input 1 / GPIO_A[7]
115	SDO2(GPIO_A8)	I/O	Serial data output 2 / GPIO_A[8]
116	SCK2(GPIO_A9)	I/O	Serial clock input 2 / GPIO_A[9]
117	SFRM2(GPIO_A10)	I/O	Serial frame 2 / GPIO_A[10]
118	SDI2(GPIO_A11)	I/O	Serial data input 2 / GPIO_A[11]
119	VDDI	-	Digital power supply for internal core (1.8 V)
120	VSSI	-	Digital ground for internal
121	EXINT0(GPIO_A12)	I/O	External interrupt request [0] / GPIO_A[12]
122	EXINT1(GPIO_A13)	I/O	External interrupt request [1] / GPIO_A[13]
123	EXINT2(GPIO_A14)	I/O	External interrupt request [2] / GPIO_A[14]
124	EXINT3(GPIO_A15)	I/O	External interrupt request [3] / GPIO_A[15]
125	XD0	I/O	External bus data bit [0]
126	XD1	I/O	External bus data bit [1]
127	XD2	I/O	External bus data bit [2]
128	XD3	I/O	External bus data bit [3]

A

B


C

D

■ AAT4618IGV-0.5-1 (USB ASSY : IC771)

- Load Switching IC

● Pin Arrangement (Top view)

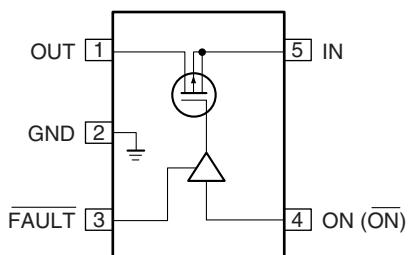

● Pin Function


No.	Pin Name	I/O	Pin Function
1	OUT	O	P-channel MOS FET drain
2	GND	-	Ground
3	FAULT	O	Open-drain FAULT output
4	ON (ON)	I	Enable input: 4618 active low, 4618- active high
5	IN	I	P-channel MOS FET source

E


7.3 EXPLANATION

7.3.1 DETECTION CIRCUIT


1. DC Detection Circuit Diagram : Example of VSX-816/KUXJ/CA

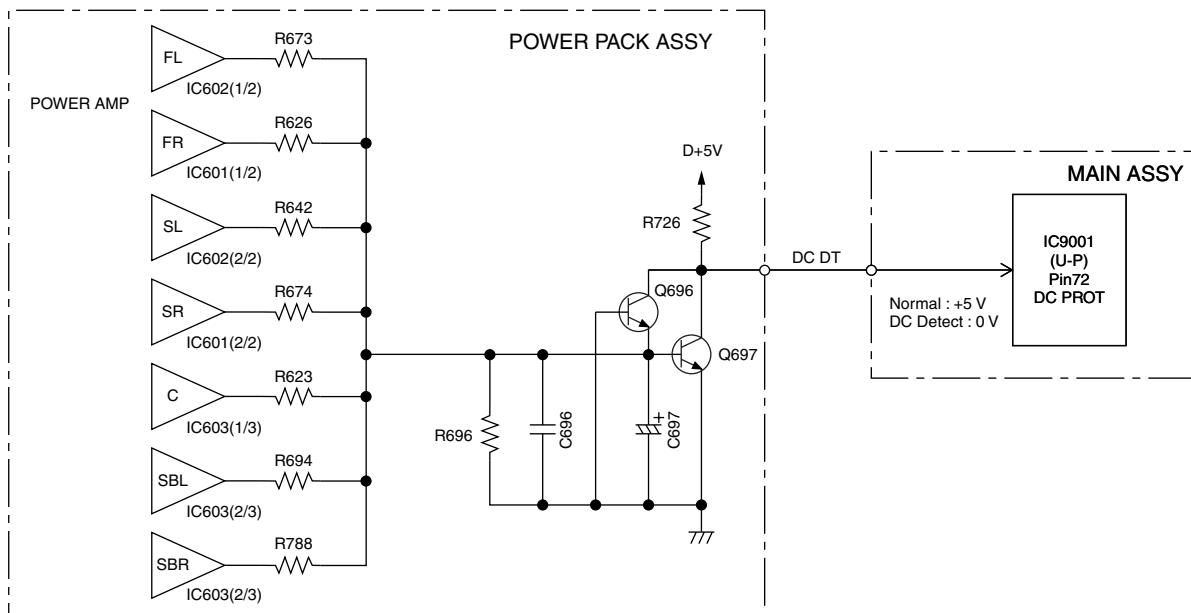

2. Overload Detection Circuit Diagram: Example of VSX-816/KUXJ/CA FRONT Channel

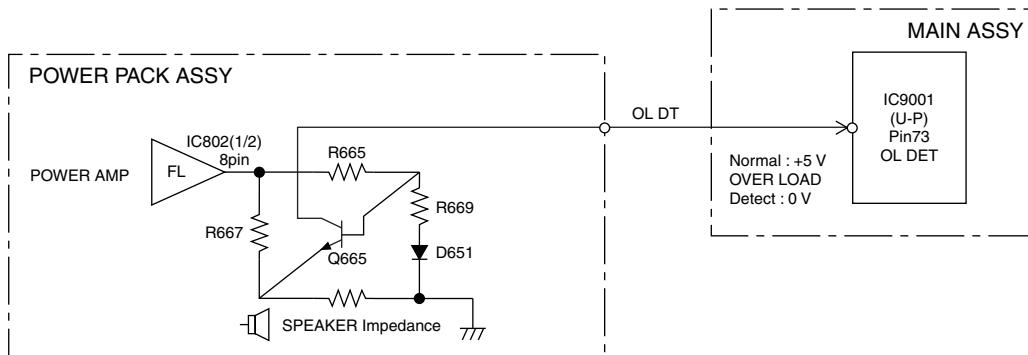



3. Fan Stop Protection Circuit Diagram

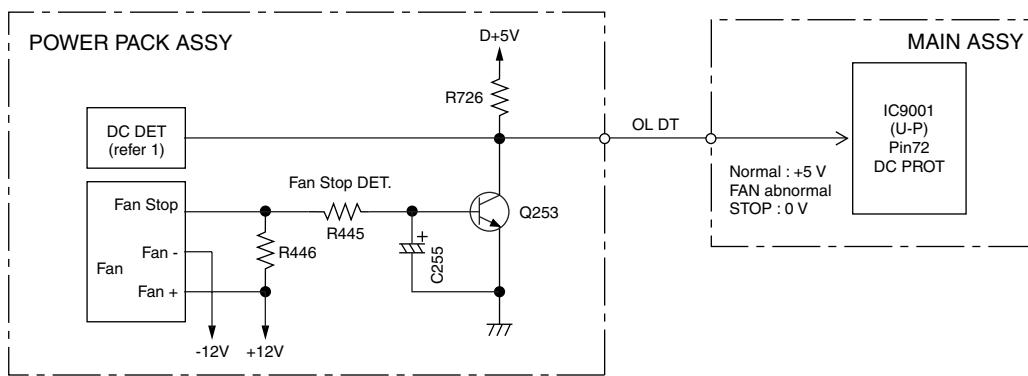

4. XPROTECT Detection Circuit Diagram

A When below 6 kind of voltage supply become to be short circuit to GND, XPROTECT circuit work and U-P input port voltage change from +5 V to 0 V. The U-P detect this condition as ERROR.

- Voltage supply to POWER AMP IC (V neck+)
- Voltage supply to POWER AMP IC (V neck-)
- Voltage supply to POWER AMP IC (VH+)
- Voltage supply to POWER AMP IC (VH-)
- Voltage supply to +12 V REGULATOR IC
- Voltage supply to -12 V REGULATOR IC

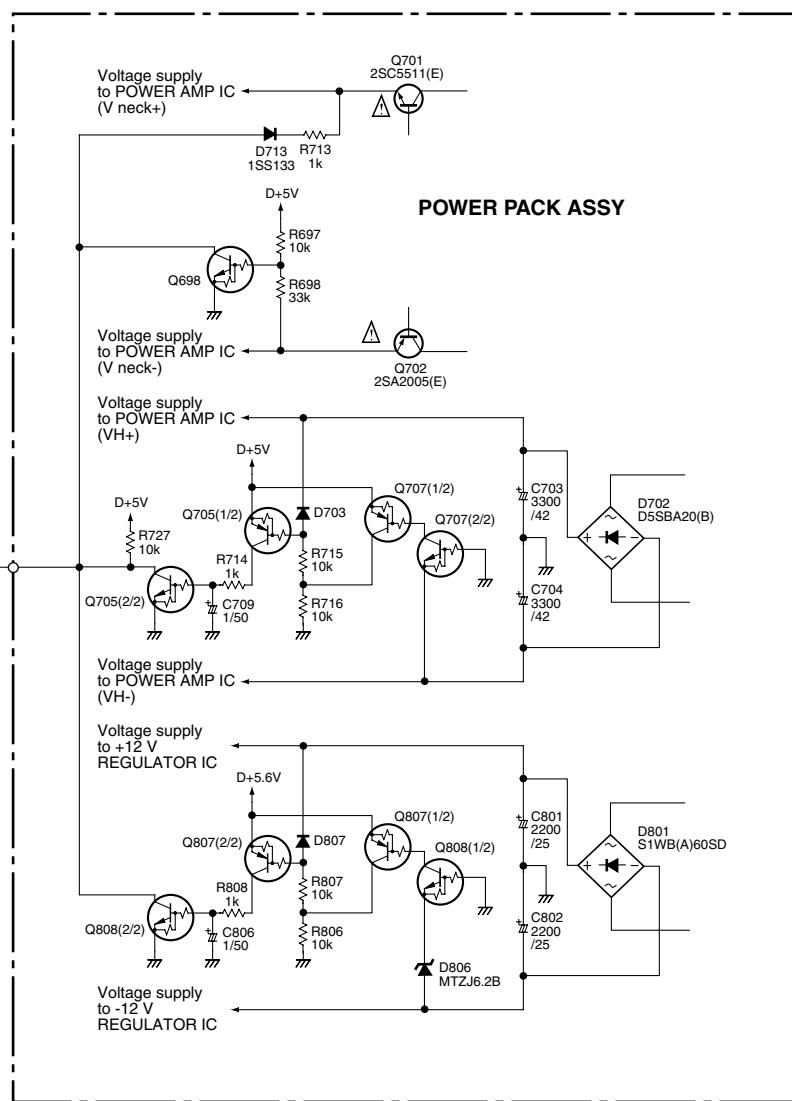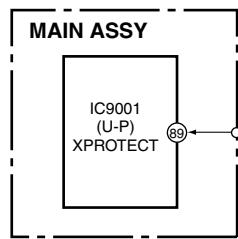

B

C

D

E

F

7.3.2 AMPLIFIER SYSTEM PROTECTION OPERATION SPECIFICATION

1. DC-abnormality detection

DC detection is only enabled 2 seconds after power-on.

If there is a fault in the power amplifier or a high-level signal lower than 5 Hz is input, the DC_DET port becomes "L".

If the "L" is detected, the microprocessor will perform as following flow chart.

In the case of simultaneous detection with the overload protection circuit, DC-abnormality detection is performed preferentially to overload detection.

When a DC abnormality is detected, A.MUTE* is turned on, speaker relay is turned off, then "AMP_ERR" flashes on the display.

*A.MUTE : Audio mute command



The abnormality continues for 3 seconds.

↓ Continues.

↓ Recovery

The power is shut off.

The program restarts.



Power key not effective and POWER LED blinks.

However, when the following keys are pushed so that the key input of a line and the service can be carried out, power can be on.

- ① TESTMODE ON (A55F+A55F)
 - ② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.
(②: When a DC abnormality is detected and the power is shut off.)
- Any other key input from front panel or remote control will not be detected.

A

B

C

D

E

F

2. Overload detection

If the speaker terminals are short-circuited or low-load driving is detected, the OL_DET port becomes "L". If the "L" is detected, the microprocessor will perform as following flow chart.

When an overload is detected, A.MUTE* is turned on, speaker relay is turned off, then "OVERLOAD" flashes on the display.



The abnormality continues for 3 seconds.

↓ Continues.

↓ Recovery

The power is shut off.

The power is shut off even if the unit recovers.


3. XPROTECT detection

XPROTECT is started to be monitored 200msec after power on.

XPROTECT port is checked every 20msec.

If Low level (ERROR) is recognized during consecutive 9 times, micon judge it as XPROTECT ERROR.

It processes more preferentially than DC abnormal detection and overload detection.

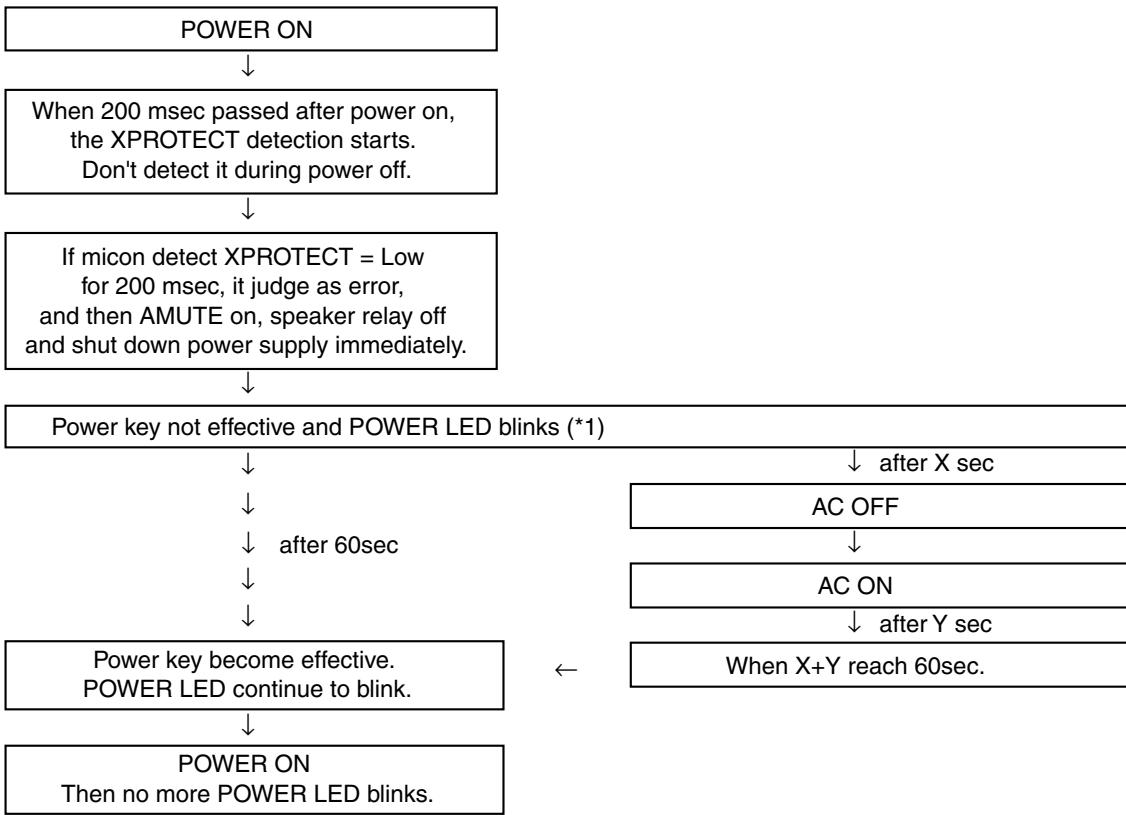

(*1) However, when the following keys are pushed so that the key input of a line and the service can be carried out, power can be on.

- D ① TESTMODE ON (A55F+A55F)
 - ② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.
(Effective, only when power-off is carried out by DC detection / XPROTECT detection)
- Any other key input from front panel or remote control will not be detected.

4. Fan stop detection operation flow in the DC abnormality detection

If the fan is forcibly stopped, the 'DC PROT' port becomes "L". Then an abnormality of fan is detected.

When an abnormality of fan is detected,
A.MUTE* is turned on, speaker relay is turned off,
the "AMP_ERR" flashes on the display.

*A.MUTE : Audio mute command

The abnormality continues for 3 seconds.

↓ Continues.

↓ Recovery

The power is shut off.

The program restarts.

Power key not effective and POWER LED blinks.

However, when the following keys are pushed so that the key input of a line and the service can be carried out, power can be on.

- F ① TESTMODE ON (A55F+A55F)
- ② When power off, push FRONT ENTER key + ADVANCED SURROUND key continuously 2sec.
(Effective, only when power-off is carried out by DC detection)

7.3.3 AMPLIFIER FAILURE DIAGNOSIS FLOW CHART

■ Amplifier failure diagnosis flow chart

A

When DC detection is activated ("AMP_ERR" flashes on the display), failure (damage) of the power amplifier section is considered.

As DC detection and fan stop protection circuits commonly use same abnormality detection port in microprocessor, please make sure that the operation of fan motor is in normal condition before proceeding to the troubleshooting of amplifier.

Caution:

When releasing the lock state of power key before repair, please be careful because there is the possibility that more damages will occur when turning on the power once again!

B

- According to a symptom, perform the following confirmation beforehand.

1) Is the operation of fan motor in normal condition?
↓

2) Are there any Fuses and IC protectors open?
↓

3) After turn on the power, confirm that the supply voltage of the point that can be measured is appropriate.
(Particularly the supply voltage of the power Tr and drive step)
↓

4) Whether the voltage of pin3 of IC600, IC601, IC602 or IC603 is equal to (VL-0.7V). If not (eg, equal to VH),
then change the corresponding power pack IC600, IC601, IC602 or IC603.
↓

5) Furthermore, check the output DC voltage of each channel of power pack IC600, IC601, IC602 and IC603
to limit the failure channel and identify the defect power pack.

C

↓
• After identify the failure channel, check that each part is not damaged (resistor, diode... etc. value / open / short)


D

E

F

7.3.4 USB Module

7.3.4.1 Block Diagram

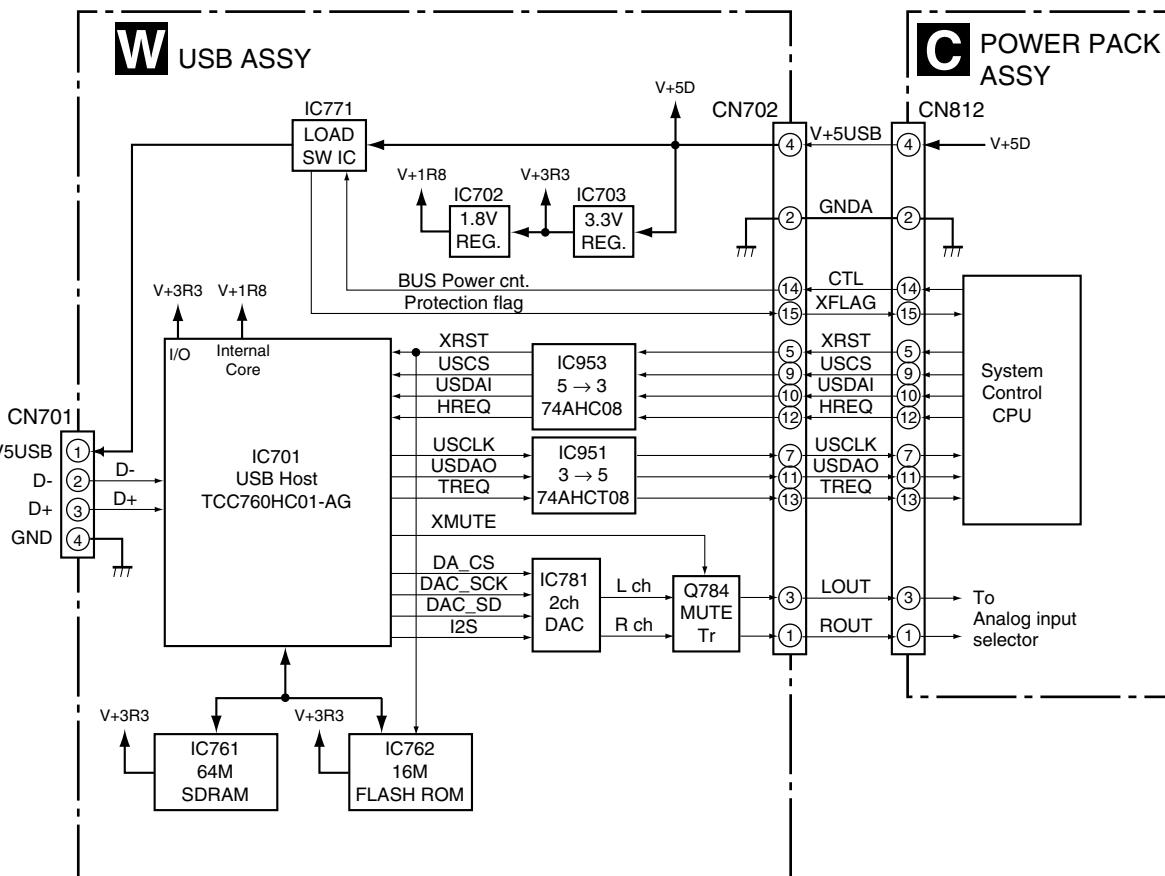

Main parts	Purpose
TCC760HC01-AG	: USB Host control decoder (MP3/WMA/MPEG-4AAC)
16M FLASH ROM	: Firmware is stored
64M SDRAM	: Temporary storage area of decoding music file
LOAD SWITCH	: Current limitation to USB device power
2ch DAC	: D/A converter for analog output

7.3.4.2 Error Display

■ Description of Error Indications

FL Display	Error Content	Possible causes and actions to be taken
USB ERROR1 USB ERR1	Detection of overcurrent to a USB device	Overcurrent (500 mA or more) is consumed at the connected USB device. • Some USB devices, such as a portable HDD, need more current than that this unit supplies. (Use the AC adaptor for the connected USB device.) • The USB power is short-circuited.
USB ERROR2 USB ERR2	Detection of a medium not supported	A USB device that this unit does not support (other than the MSC Class) is connected (such as a mouse, printer, or digital camera). • Connect a mass storage class USB device.
USB ERROR3 USB ERR3	Communication error with the system microcomputer	Communication between TCC760HC01-AG (IC701) and PDC**** (IC****) failed. • Defective connection (connectors) inside this unit • See STEP 3 of Troubleshooting.


■ Operations when overcurrent to a USB device is detected

(1) Overcurrent to a USB device is detected at the port for the microcomputer.

(2) The power supply to the USB device is stopped.

(3) Control of 5 V power is disabled at the port for the microcomputer.

(4) Change of indications on the FL display

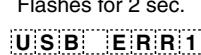V3 Low usage  In a case of an 8-digit FL display

 Lights up after flashing for 2 sec.
 In a case of an 8-digit FL display

(5) To supply power to the USB module again:

- Turn the power to the unit off then back on.
- Set the function setting to anything other than USB then back to USB.
- Press the USB play key on the remote control unit.

(6) After overcurrent is detected, if the USB play key is pressed while the error indication is displayed, power supply to the USB module is restored. If overcurrent is no longer detected, the indications shown below are displayed (normal indication):

 In a case of an 8-digit FL display

In this state, flashing of "USB ERROR1" stops, but playback will not start. To start playback, press the USB play key again.

In the above case, if overcurrent is detected again, the above procedures 1 through 4 are repeated.

■ In a case where a medium not supported is connected

(1) Change of indications on the FL displays

 In a case of an 8-digit FL display

 Lights up after flashing for 2 sec.
 In a case of an 8-digit FL display

If overcurrent is detected before detection of a non-supported medium, the error indication "USB ERROR1" remains, as the power supply to the USB module is stopped.


On supported media

The formats of supported media that can be played back on this unit are MP3, WMA, and AAC.



Some media in MPEG4 can also be played back. As AAC derives from MPEG4 codec, playback of media in AAC codec of MPEG4 is possible.


7.3.4.3 Troubleshooting

Step 1: Connectors

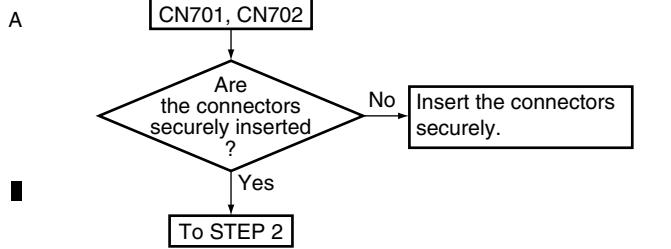

Step 2: Power supply

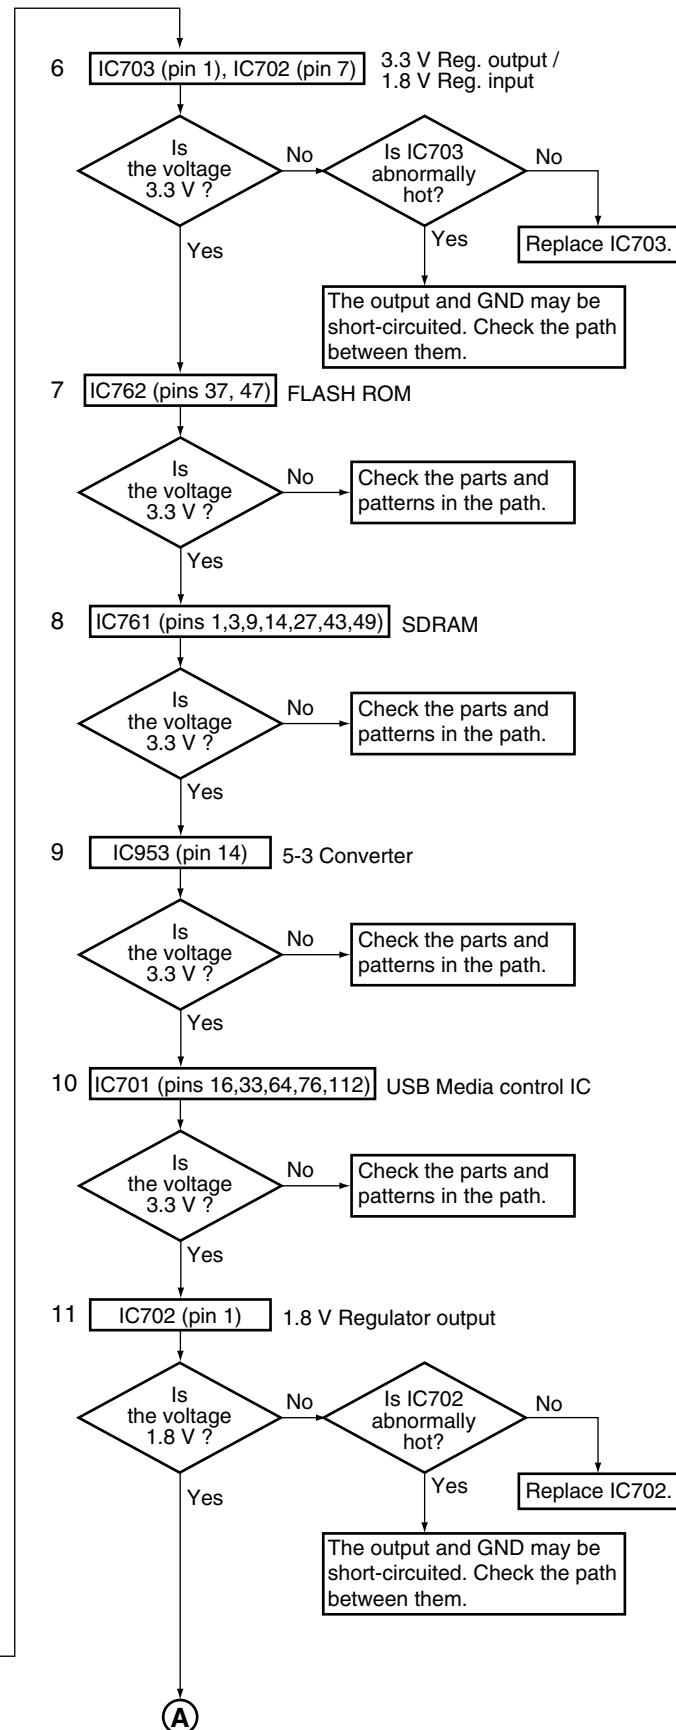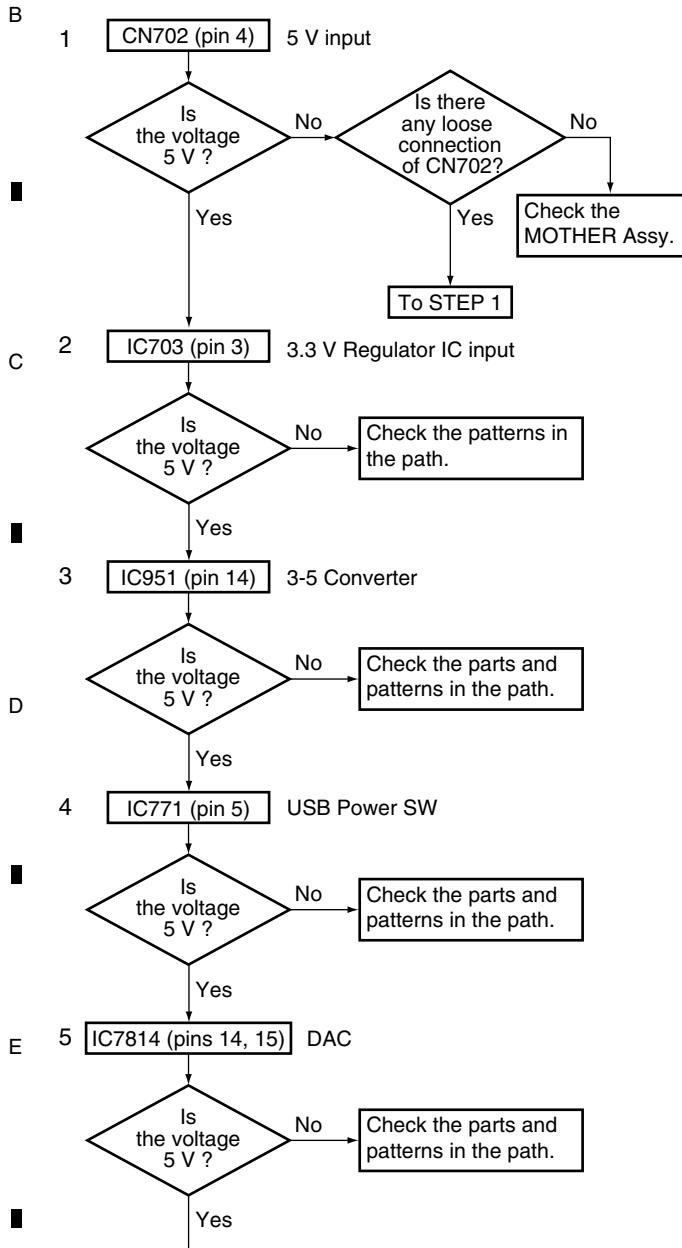

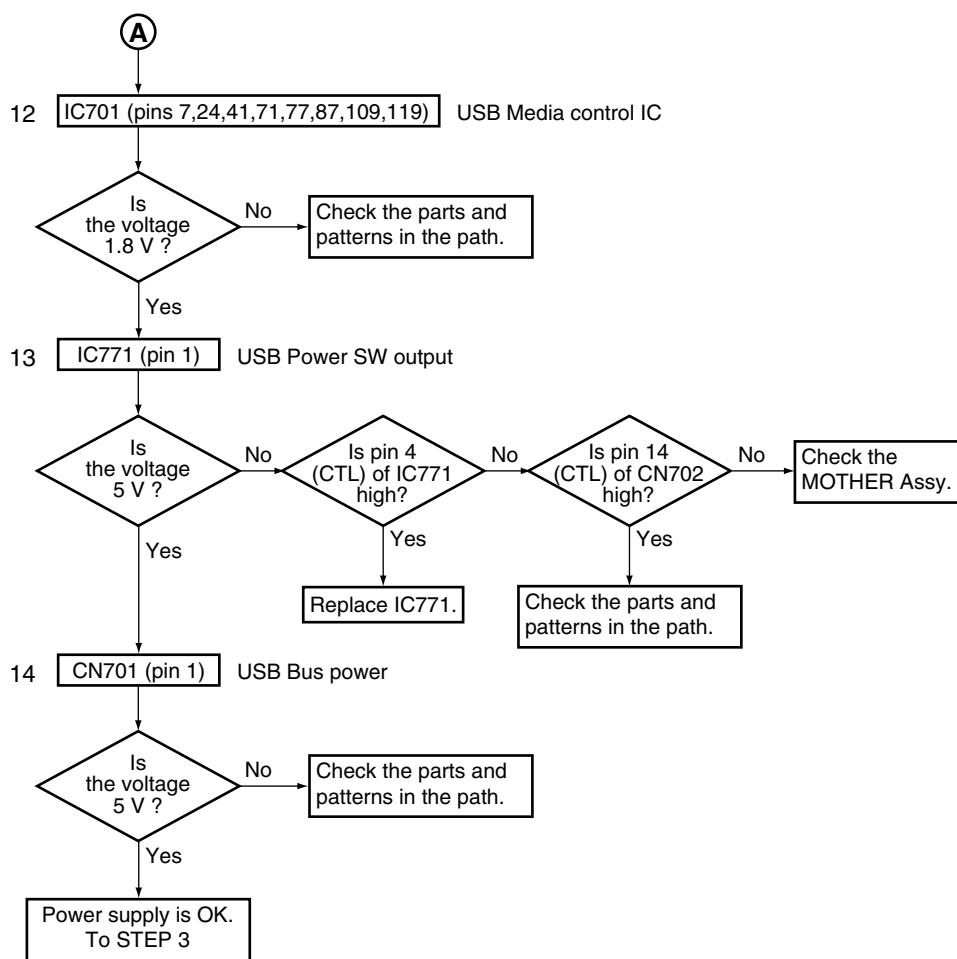

Step 3: Operation of USB Media control IC

Note: Please confirm it with the USB memory connected for the content.

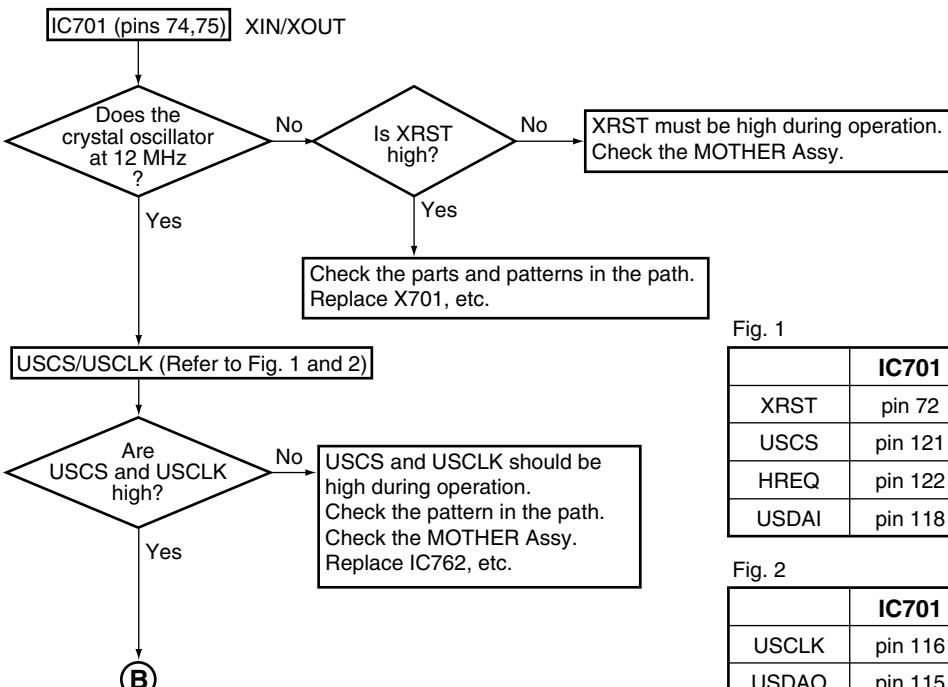


Fig. 1

	IC701	IC953 (5 V → 3 V)	CN702
XRST	pin 72	pin 3	pins 1,2
USCS	pin 121	pin 11	pins 12,13
HREQ	pin 122	pin 6	pins 4,5
USDAI	pin 118	pin 8	pins 9,10

Fig. 2

	IC701	IC951 (3 V → 5 V)	CN702
USCLK	pin 116	pins 4,5	pin 6
USDAO	pin 115	pins 9,10	pin 8
TREQ	pin 123	pins 12,13	pin 11

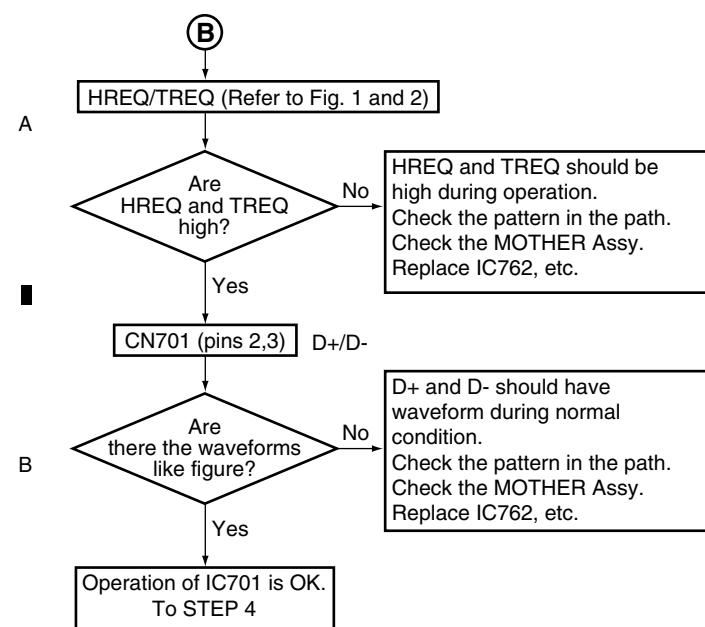


Fig. D+


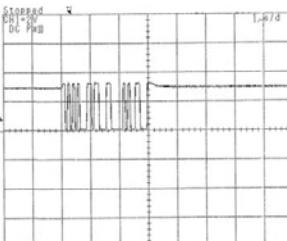




Fig. D-

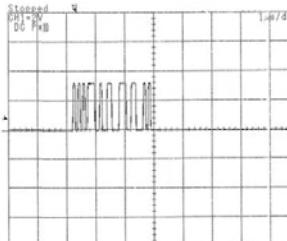

X: 1 μsec/div, Y: 2 V/div

X: 1 μsec/div, Y: 2 V/div

Step 4: Audio Out check

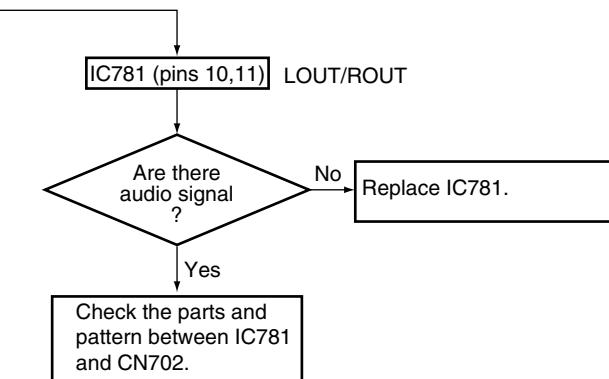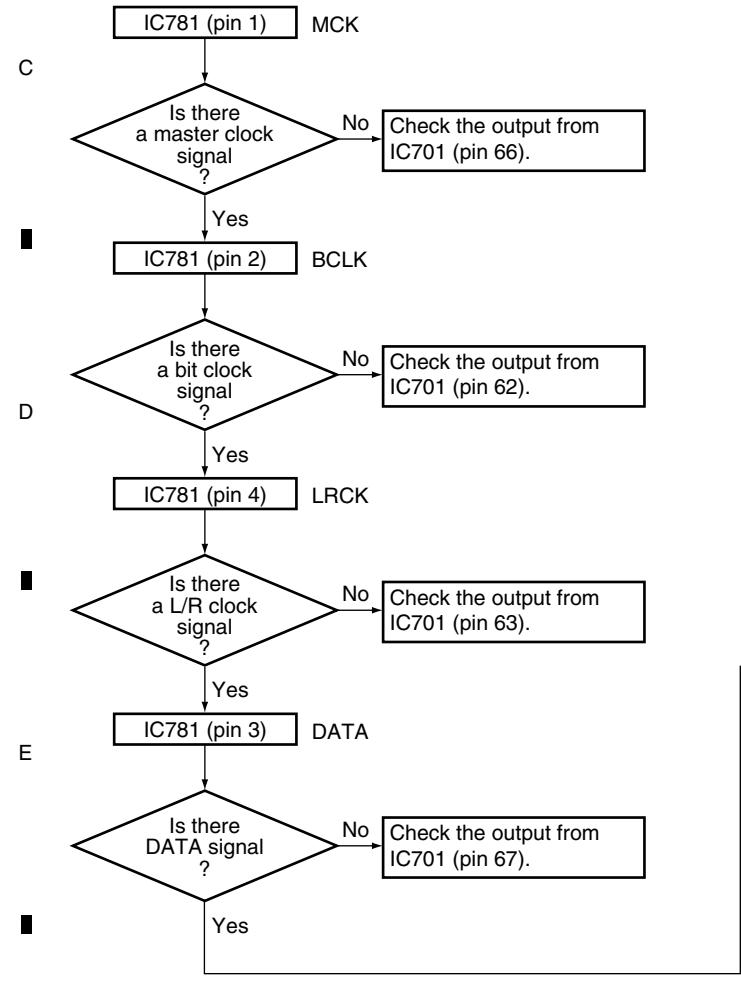

7.3.4.4 How to Update the Firmware

■ Explanation

With this unit, updating of the firmware of the USB module can be performed, using a USB memory stick. However, if the hardware of the flash memory that stores the firmware or the firmware itself has a problem, updating cannot be performed in a manner described below. In such a case, replacement of the flash memory is required.

■ Procedures

1. Turn the unit on then set the function setting to USB function.
2. Insert the USB memory stick that contains the "player.rom" file.*
3. "LOADING" is indicated on the FL display.
4. "UPDATE" is indicated on the FL display.
5. Wait until "FINISH" is indicated on the FL display.
6. Remove the USB memory stick then set the function setting to anything other than USB.
7. Return the function setting to USB function and wait for about 5 seconds in order to obtain the version data of the USB firmware.
8. Turn the unit off (Standby mode).
9. Check the version ("U_xxxxxx" is suffixed to the version indication).
If the version is not updated, the data for the new version may not have been obtained in Step 7. Repeat Step 7 and the subsequent steps.

Notes * :

- Never reinsert the USB memory stick that contains the "player.rom" file.
- In a rare case, depending on the type of USB memory stick, the above-mentioned updating procedures are not possible.
In such a case, try with other type of USB memory stick.

Importance:

- Never change the function setting or turn the power off during the process of Steps 3 through 5. If you do, loading of the firmware will fail, and updating procedures cannot be continued. In such a case, replacement of the flash memory is required.

A

B

C


D

E

F

8. PANEL FACILITIES

Front panel VSX-816/KUXJ/CA

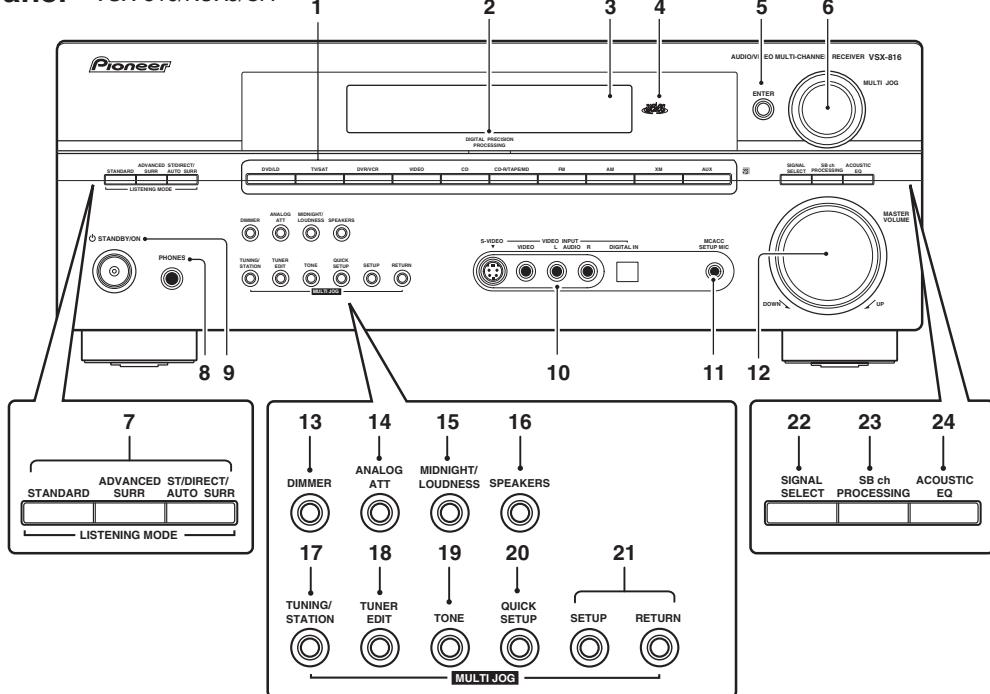

A

B

C

D

E

F

1

2

3

4

1 Input select buttons

Press to select an input source.

2 Digital Precision Processing indicator

Lights to indicate digital processing.

3 Character display

See Display.

4 MCACC indicator

Lights when Acoustic Calibration EQ is on (Acoustic Calibration EQ is automatically set to **ALL CH ADJUST** after the Auto MCACC Setup or EQ Auto Setup).

5 ENTER

6 MULTI JOG dial

Use the **MULTI JOG** dial to select various settings and menu options.

7 LISTENING MODE buttons

STANDARD - Press for Standard decoding and to switch between the various Pro Logic IIx and Neo:6 options.

ADVANCED SURR - Use to switch between the surround modes.

ST/DIRECT/AUTO SURR

Selects stereo/direct playback.

Also selects Auto Surround (Auto playback) and XM Surround.

8 PHONES jack

Use to connect headphones (when connected, there is no sound output from the speakers).

9 STANDBY/ON

Switches the receiver between on and standby.

10 VIDEO INPUT

See Connecting to the front panel video terminal.

11 MCACC SETUP MIC jack

Use to connect the supplied microphone.

12 MASTER VOLUME dial

13 DIMMER

Dims or brightens the display.

14 ANALOG ATT

Attenuates (lowers) the level of an analog input signal to prevent distortion.

15 MIDNIGHT/LOUDNESS

Switches between Midnight and Loudness listening.

16 SPEAKERS

Use to change the speaker system and the impedance setting.

17 TUNING / STATION

Selects the frequency and station presets when using the tuner.

18 TUNER EDIT

Press to memorize and name a station for recall.

19 TONE

Press this button to access the bass and treble controls, which you can then adjust with the **MULTI JOG** dial.

20 QUICK SETUP

See Using the Quick Setup.

21 System Setup menu controls

SETUP - Use with the **MULTI JOG** dial to access the System Setup menu.

RETURN - Press to confirm and exit the current menu.

22 SIGNAL SELECT

Use to select an input signal.


23 SB ch PROCESSING

Selects surround back channel processing or the virtual surround back mode.

24 ACOUSTIC EQ

Press to select an Acoustic Calibration EQ setting.

Display VSX-816/KUXJ/CA

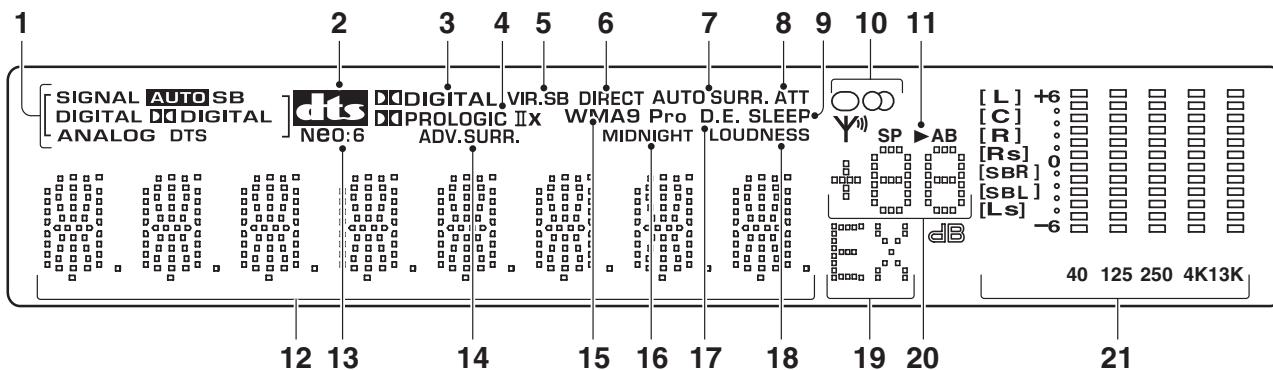

1 SIGNAL indicators

Lights to indicate the type of input signal:

AUTO – Lights when **AUTO** signal select is on.

SB – Depending on the source, this lights when a signal with surround back channel encoding is detected.

DIGITAL – Lights when a digital audio signal is detected.

DD DIGITAL – Lights when a Dolby Digital encoded signal is detected.

ANALOG – Lights when an analog signal is detected.

DTS – Lights when a source with DTS encoded audio signals is detected.

2 dts

When the **STANDARD** mode is on, this lights to indicate decoding of a DTS multichannel signal.

3 DD DIGITAL

When the **STANDARD** mode of the receiver is on, this lights to indicate decoding of a Dolby Digital multichannel signal.

4 DD PRO LOGIC IIx

When the **(STANDARD)** Pro Logic II mode of the receiver is on, **DD PRO LOGIC II** lights to indicate Pro Logic II decoding. **DD PRO LOGIC IIx** lights to indicate Pro Logic IIx decoding (see Listening in surround sound).

5 VIR.SB

Lights during Virtual surround back processing.

6 DIRECT

Lights when source direct playback is in use. Direct playback bypasses the tone controls for the most accurate reproduction of a source.

7 AUTO SURR.

Lights when Auto Surround (see Auto playback) or XM Surround is on.

8 ATT

Lights when **ANALOG ATT** is used to attenuate (reduce) the level of the analog input signal.

9 SLEEP

Lights when the sleep mode is active (see Remote control below).

10 Tuner indicators

O – Lights when the mono mode is set using the **MPX** button.

CD – Lights when a stereo FM broadcast is being received in auto stereo mode.

FM – Lights when a broadcast is being received.

11 Speaker indicators

Lights to indicate the current speaker system, **A** and/or **B**.

12 Character display

13 Neo:6

When the **(STANDARD)** Neo:6 mode of the receiver is on, this lights to indicate Neo:6 processing.

14 ADV.SURR. (Advanced Surround)

Lights when one of the Advanced Surround modes has been selected.

15 WMA9 Pro

Lights to indicate decoding of a WMA9 Pro signal.

16 MIDNIGHT

Lights during Midnight listening.

17 D.E.

Lights when Dialog Enhancement (**DIALOG E**) is switched on.

18 LOUDNESS

Lights during Loudness listening .

19 EX

Lights when a Dolby Digital Surround EX encoded signal is detected.

20 Master volume level

Shows the overall volume level.

21 MCACC channel EQ / Sound Retriever indicators

These indicators show the EQ balance for each channel in Checking your Acoustic Calibration EQ settings. Also, **L** and **R** light when the Sound Retriever is active.

A

B


C

D

E

F

Remote control VSX-816/KUXJ/CA

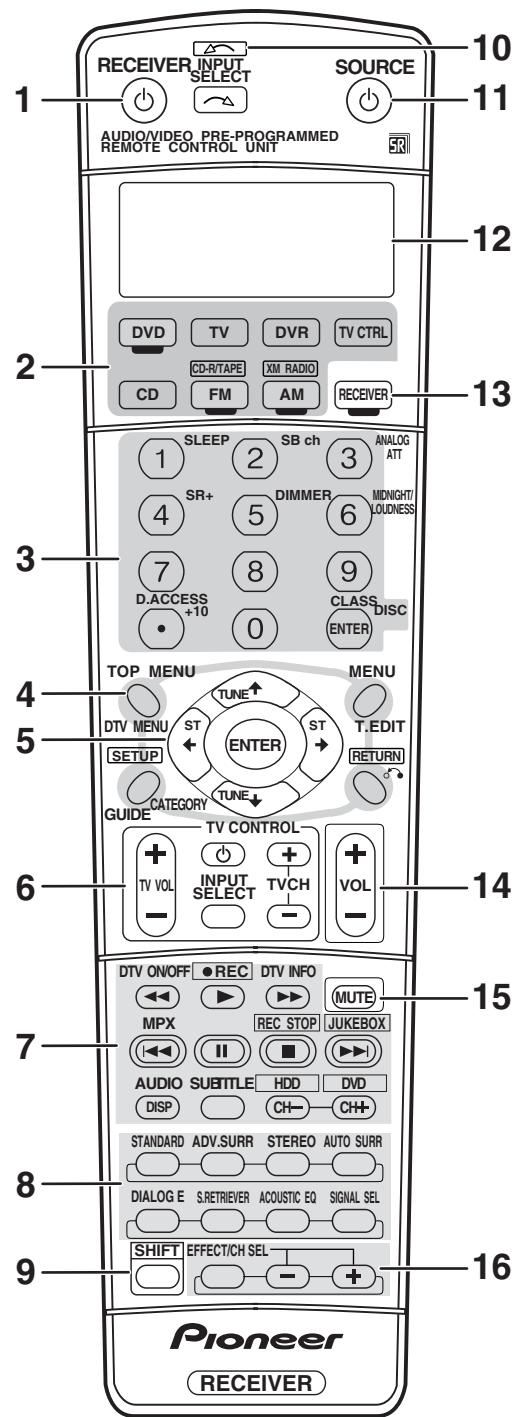

1 RECEIVER

This switches between standby and on for this receiver.

2 MULTI CONTROL buttons

Press to select control of other components (see Controlling the rest of your system).

3 Number buttons and other receiver/component controls

Use the number buttons to directly select a radio frequency or the tracks on a CD, DVD, etc.

DISC (ENTER) can be used to enter commands for TV or DTV, and can also be used to select a disc in a multi-CD player.

The following are accessed by pressing the **RECEIVER** button first:

SLEEP - Press to change the amount of time before the receiver switches into standby (90 min – 60 min – 30 min – Off).

You can check the remaining sleep time at any time by pressing **SLEEP** once.

SB ch - Selects the surround back channel mode or virtual surround back mode.

ANALOG ATT - Attenuates (lowers) the level of an analog input signal to prevent distortion.

SR + - Switches the SR+ mode on/off.

DIMMER - Dims or brightens the display.

MIDNIGHT/LOUDNESS - Use Midnight when listening to movie soundtracks at low volume. Use Loudness to boost the bass and treble at low volume.

D.ACCESS - After pressing, you can access a radio station directly using the number buttons.

CLASS - Switches between the three banks (classes) of radio station presets.

4 Tuner/component control buttons/SETUP

The following button controls (except **SETUP**) can be accessed after you have selected the corresponding **MULTI CONTROL** button (DVD, FM, AM, TV, etc.)

TOP MENU - Displays the disc 'top' menu of a DVD.

DTV MENU - Displays menus on a digital TV.

MENU - Displays the disc menu of DVD-Video discs. It also displays TV and DTV menus.

T.EDIT - Press to memorize and name a station for recall.

SETUP (Press **RECEIVER** first to access) Use to access the System Setup menu.

GUIDE - Displays the guides on a digital TV.

RETURN - Press to confirm and exit the current menu (also use to return to the previous menu with DVDs or to select closed captioning with DTV).

5 $\leftrightarrow \downarrow \uparrow$ (TUNE/ST +/-) /ENTER

Use the arrow buttons when setting up your surround sound system. Also used to control DVD menus/options and for deck 1 of a double cassette deck player. Use the **TUNE** $\downarrow \uparrow$ buttons to find radio frequencies and use **ST** $\leftrightarrow \rightarrow$ to find preset stations.

6 TV CONTROL buttons

These buttons are dedicated to control the TV assigned to the **TV CTRL** button. Thus if you only have one TV to hook up to this system assign it to the **TV CTRL MULTI CONTROL** button. If you have two TVs, assign the main TV to the **TV CTRL** button.

TV - Use to turn on/off the TV power.

TV VOL +/– - Use to adjust the TV volume.

INPUT SELECT - Use to select the TV input signal.

TV CH +/– - Use to select channels.

7 Component control buttons

The main buttons (► , ■ , etc.) are used to control a component after you have selected it using the **MULTI CONTROL** buttons.

The controls above these buttons can be accessed after you have selected the corresponding **MULTI CONTROL** button (for example **DVD**, **DVR** or **TV** (when connected to a DTV)).

DTV ON/OFF - Switches a digital TV on/off.

DTV INFO - Use to bring up information screens on a digital TV.

MPX - Switches between stereo and mono reception of FM broadcasts. If the signal is weak then switching to mono will improve the sound quality.

AUDIO - Changes the audio language or channel on DVD discs.

DISP - Switches between named station presets and radio frequencies.

SUBTITLE - Displays/changes the subtitles included in multilingual DVD-Video discs.

CH +/– - Use to select channels when using a TV, VCR, DVR, etc.

The following DVR controls can be accessed by pressing **SHIFT**:

●REC - Starts recording.

REC STOP - Stops recording.

JKUKEBOX - Switches to the Jukebox feature.

HDD/DVD - These buttons switch between the hard disk and DVD controls for DVD/HDD recorders.

8 RECEIVER CONTROL buttons

STANDARD - Press for Standard decoding and to switch between the various Pro Logic IIx and Neo:6 options.

ADV.SURR. - Use to switch between the various surround modes.

STEREO - Switches between direct and stereo playback. Direct playback bypasses the tone controls and any other signal processing for the most accurate reproduction of a source.

AUTO SURR - Selects Auto Surround (Auto playback) and XM Surround.

DIALOG E - Use to make dialog stand out when watching TV or a movie.

S. RETRIEVER - Press to restore CD quality sound to compressed audio sources.

ACOUSTIC EQ - Press to select an Acoustic Calibration EQ setting.

SIGNAL SEL - Use to select an input signal.

9 SHIFT

Press to access the DVR controls (above the component control buttons) as well as some receiver controls.

10 INPUT SELECT

Use to select the input source (use **SHIFT** for **INPUT SELECT**).

11 SOURCE

Press to turn on/off other components connected to the receiver.

12 Character display (LCD)

This display shows information when transmitting control signals.

The following commands are shown when you're setting the remote to control other components (see Controlling the rest of your system):

SETUP - Indicates the setup mode, from which you choose the options below.

PRESET - See Selecting preset codes directly.

DIRECT F - See Direct function.

ERASE - See Erasing one of the remote control button settings.

RESET - See Erasing all of the remote control presets.

READ ID - See Confirming preset codes.

13 RECEIVER

Switches the remote to control the receiver (used to select the green commands above the number buttons (**DIMMER**, etc). Also use this button to set up surround sound.

14 VOL +/–

Use to set the listening volume.

15 MUTE

Mutes the sound or restores the sound if it has been muted (adjusting the volume also restores the sound).

16 EFFECT/CH SEL


Press repeatedly to select a channel, then use +/– to adjust the level.

Also adjusts the level of the Advanced Surround effects, Dolby Pro Logic IIx Music, and Neo:6 Music parameters. You can then use the +/– buttons to make these adjustments.

Operating range of remote control

The remote control may not work properly if:

- There are obstacles between the remote control and the receiver's remote sensor.
- Direct sunlight or fluorescent light is shining onto the remote sensor.
- The receiver is located near a device that is emitting infrared rays.
- The receiver is operated simultaneously with another infrared remote control unit.

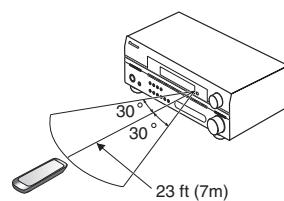


Using this receiver with a Pioneer plasma display

If you have a Pioneer plasma display², you can use an SR+ cable to connect it to this unit and take advantage of various convenient features, such as automatic video input switching of the plasma display when the input is changed.

SERVICE PARTS


- SR+ mini-plug cable (ADE7095)
- 

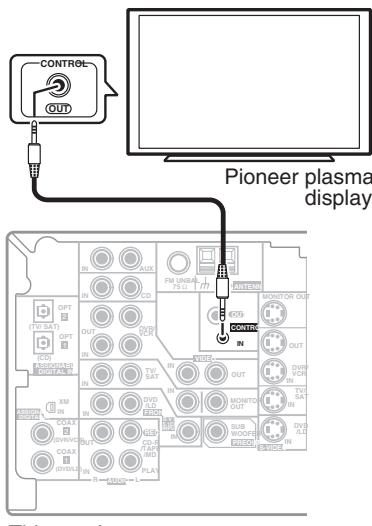

This receiver

- C** • Use a 3-ringed miniplug SR+ cable to connect the CONTROL IN jack of this receiver with the CONTROL OUT of your plasma display.

Before you can use the extra SR+ features, you need to make a few settings in the receiver. See SR+ Setup for Pioneer plasma displays for detailed instructions.

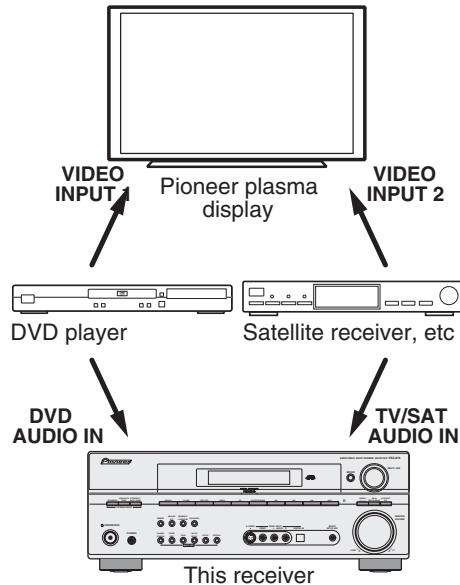

E To make the most of the SR+ features, you should connect your source components (DVD player, etc.) in a slightly different way to that described in this chapter. For each component, connect the video output directly to the plasma display, and just connect the audio (analog and/or digital) to this receiver.

Note

1 The 3-ringed SR+ cable from Pioneer is commercially available under the part number ADE7095. Contact the Pioneer Customer Support division for more information on obtaining an SR+ cable (you can also use a commercially available 3-ringed mini phone plug for the connection).

If you connect to a Pioneer plasma display using an SR+ cable, you will need to point the remote control at the plasma display remote sensor to control the receiver. In this case, you won't be able to control the receiver using the remote control if you switch the plasma display off.


2 The automatic volume muting feature is enabled separately; see SR+ Setup for Pioneer plasma displays.

Using the SR+ mode with a Pioneer plasma display

When connected using an SR+ cable, a number of features become available to make using this receiver with your Pioneer plasma display even easier. These features include:

- On-screen volume display.
- On-screen display of listening mode.
- Automatic video input switching on the plasma display.
- Automatic volume muting on the plasma display.²

See also SR+ Setup for Pioneer plasma displays for more on setting up the receiver.

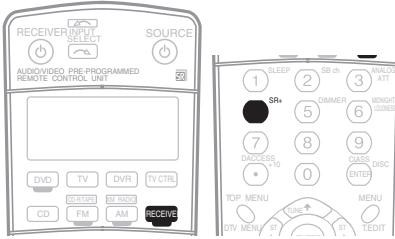


- 1** Make sure that the plasma display and this receiver are switched on and that they are connected with the SR+ cable.

See Using this receiver with a Pioneer plasma display above for more on this.

- 2** To switch SR+ mode on/off, press RECEIVER, then the SR+ button.

The front panel display shows SR+ ON or OFF.

VSX-816/KUXJ/CA

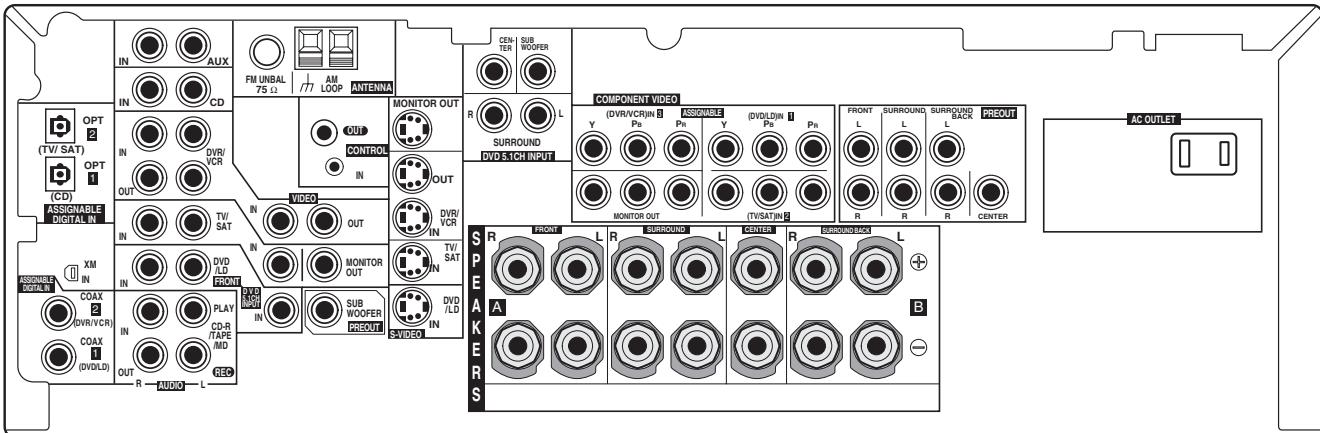

A

B

C

D

E

F

■ CLEANING



A Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

B

C

D

E

F