

Quality. Uncompromised.

ROTEL®

Technical Manual

MICRO COMPONENT 80 SYSTEM

STEREO CASSETTE DECK

RMD-80

STEREO INTEGRATED AMPLIFIER

RMA-80

AM/FM STEREO TUNER

RMT-80/-80L

TABLE OF CONTENTS

INTRODUCTION	2
ADDENDA	2
I. CASSETTE DECK RMD-80	
Adjustment	4
Troubleshooting Guide	5
Block Diagram	6
Record/Playback Level Diagram	7
Disassembly Diagram	8
II. TUNER RMT-80/-80L	
Adjustment	11
Dial Stringing Diagram	14
SPECIFICATIONS	15
REPAIR PARTS LIST	16
CHASSIS LAYOUT	19
SCHEMATIC DIAGRAM	21
CIRCUIT BOARD DIAGRAMS	25

TABLE DES MATIERES

INTRODUCTION	2
ADDENDA	2
I. MAGNETOCASSETTE RMD-80	
Réglage	4
Guide de dépannage	5
Schéma synoptique	6
Diagramme du niveau d'enregistrement/lecture	7
Schéma de démontage	8
II. TUNER RMT-80/-80L	
Réglage	11
Diagramme du câble d'entraînement	14
CARACTERISTIQUES	15
LISTE DES PIÈCES DE RECHANGE	16
INSTALLATION DU CHASSIS	19
DIAGRAMME SCHEMATIQUE	21
DIAGRAMMES DES PLAQUETTES DES CIRCUITS	
IMPRIMÉS	25

Serial Nos. Beginning
NC89755

**THE ROTEL CO., LTD.
ROTEL ELECTRONICS CO., LTD.
ROTEL OF AMERICA, INC.
ROTEL HI FI LIMITED.**

1-36-8 OHOKAYAMA, MEGURO-KU, TOKYO 152, JAPAN
2ND FLOOR, EVERGLORY BLDG., NO. 305, SECTION 3,
NANKING E. ROAD, TAIPEI, TAIWAN, REPUBLIC OF CHINA

13528 SO. NORMANDIE, GARDENA, CALIF. 90249, U.S.A.
2-4 ERICA ROAD, STACEY BUSHES, MILTON KEYNES,
BUCKINGHAMSHIRE, ENGLAND

Introduction

This booklet contains technical instructions for Rotel Micro-80 system: RMA-80, RMD-80 and RMT-80/-80L. Among the models, RMD-80 and RMT-80/-80L are not equipped with their own power supply section. They are designed to receive power from RMA-80. Therefore, when repairing RMD-80 or RMT-80/-80L, power should be supplied through RMA-80. If a separate power supply is used instead of RMA-80, the voltage applied and connections should be the same as with RMA-80.

Introduction

La présente brochure contient des instructions techniques relatives à Système Micro-80 de Rotel: RMA-80, RMD-80 et RMT-80/-80L. Parmi ces modèles, RMD-80 et RMT-80/-80L ne comportent pas en propre de section d'alimentation. Ils sont conçus pour être alimentés à partir du RMA-80. En conséquence, lors de la réparation de RMD-80 ou de RMT-80/-80L, l'alimentation doit être fournie par le RMA-80. Dans le cas où une source d'alimentation séparée est utilisée à la place du RMA-80, la tension fournie et les branchements doivent être les mêmes que pour le RMA-80.

ADDENDA

I. RMA-80

A. Power transformer for Europe and U.K. units has been changed from the conventional toroidal type (T-132E) to 2L type (T-143E). Toroidal type (T-132 E) is available for repair purpose only.

II. RMD-80

A. Auto-shut-off circuit has been partially modified as follows:

- a) Stop-sensor is changed from hall-IC to reed-switch type (see Fig. A) because of short supply of hall ICs.
- b) Accordingly, p-c board designation has been changed from X-386A to X-413. The size and terminal locations of the new p-c board remain the same as in X-386A, so that those two types are interchangeable.
- c) No circuit constant has been changed. (See p-c board diagrams on page 25).
- d) If constant supply of hall-ICs becomes available, the X-386A p-c board assembly may be used again.

ADDENDA

I. RMA-80

A. Le transformateur de puissance pour les modèles à destination de l'Europe et du Royaume Uni est modifié: le type toroidal conventionnel (T-132E) est remplacé par le type 2L (T-143E). Le type toroïdal (T-132E) n'est disponible qu'aux fins de réparation.

II. RMD-80

A. Le circuit d'arrêt automatique a été modifié comme suit:

- a) Le détecteur d'arrêt, auparavant un CI-Hall est remplacé par un commutateur à lame (voir Fig. A), du fait du manque de CI Hall.
- b) En conséquence, la désignation de la plaquette de circuit imprimé est modifiée de X-386A à X-413. Les dimensions et les emplacements des bornes de la nouvelle plaquette restent les mêmes que pour la plaquette X-386A, de sorte que les deux types sont interchangeables.
- c) Aucune constante du circuit n'a été changée. (Voir les schémas de plaquettes de circuits page 25.)
- d) Dans le cas où il devient possible d'obtenir de façon stable des CI-Hall à nouveau, la plaquette X-386A peut être utilisée à nouveau.


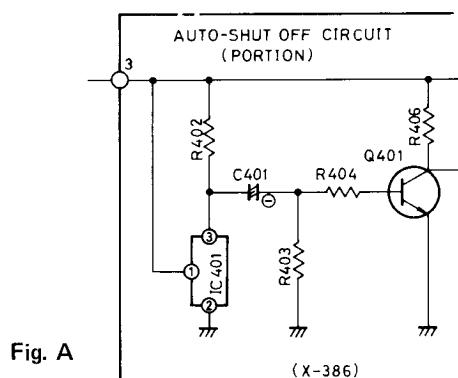


Fig. A

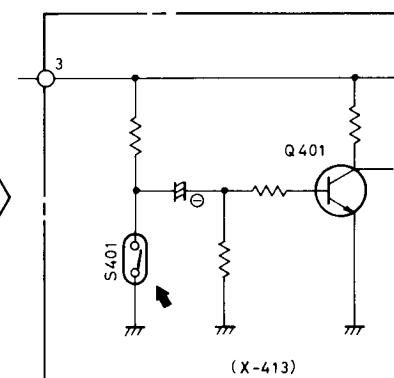

III. RMT-80L

A. Specification for AM antenna coil has been changed: Symbol No. for this coil has been altered from RL-209 to RL-209A. Part No. remains the same. For a repair purpose, only new type coil will be supplied. Because of this change, L002 and C251 have been removed as shown in Fig. B. Therefore, when replacing conventional coil with a new one, L002, 1mH and C251, 10pF should be removed. Circuit diagrams in this booklet are drawn based on new circuitry.

A. La spécification de la bobine d'antenne MA est modifiée: le No. de symbole de cette bobine, RL-209, est remplacé par le No. RL-209A. Le No. de Pièce reste le même. Pour les réparations, seul le nouveau type de bobine sera fourni. En raison de cette modification, L002 et C251 ont été supprimés, comme indiqué sur la Fig. B. En conséquence, lors du remplacement de la bobine conventionnelle par une neuve, L002, 1mH et C251, 10pF, doivent être enlevés. Les schémas de cir-

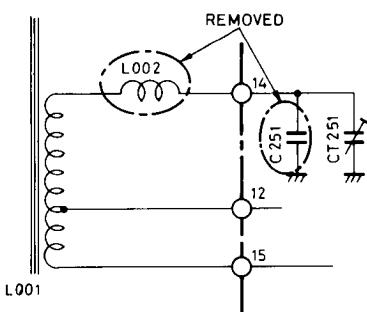


Fig. B

cuit de la présente brochure sont basés sur les nouveaux types de pièces.

IV. RMT-80/-80L

A. Transistor Q204 for AM tuning indicator driver has been changed from 2SC1684 to 2SC2634. Together with this change, the decoupling capacitor C220 at collector side of Q204 has been changed from 1mfd to 100mfd. Circuit diagrams in this booklet are drawn based on new circuitry.

B. Circuit constant of FM OSC has been changed:

1. CT102 has been changed from 20pF max. ($N800 \pm 300 \times 10^{-6}$) to 10pF max. ($NPO \pm 200 \times 10^{-6}$) (Part No. 490110124). Together with this change, capacitor C105 connected in parallel with this trimmer has been changed from mica type, 20pF to ceramic type, 24pF PH(N150) (Part No. 443241237).

For the units destined for South Africa, the following change has been made:

CT102: Same as STD spec.

C105: 10pF → 15pF RH (Part No. 443151232)

The reason for the above change: to prevent frequency drift due to temperature change.

The change given above is applicable to the units with Serial No. beginning ND75906.

V. RMA-80, RMD-80 and RMT-80/-80L

A. Front panel assembly has been changed:

1. Push button assembly conventionally installed on the front panel has been separated from the front panel module. Front panel assembly for repair is supplied without push buttons. New push buttons are supplied for each function separately.

a) Part No. for new front panel:

for RMA-80	111911548
for RMD-80	111911549
for RMT-80	111911550
for RMT-80L	111911551

b) Part No. for new push buttons

for Function, Power, etc. (14 x 4) . . .	116210092
for Loudness, Muting,	
Dolby NR (5)	116210094

IV. RMT-80/-80L

A. Le transistor Q204 pour le driver de l'indicateur d'accord MA est modifié de 2SC1684 à 2SC2634. En fonction de cette modification, le condensateur de découplage C220 du côté collecteur de Q204 passe de 1mfd à 100mfd. Les schémas de circuit de la présente brochure sont basés sur les nouveaux types de pièces.

B. La constante de circuit de FM OSC a été modifiée:

1. CT102 passe de 20pF max. ($N800 \pm 300 \times 10^{-6}$) à 10 pF max. ($NPO \pm 200 \times 10^{-6}$) (No. de Pièce 490110124). En fonction de cette modification, le condensateur C105 branché en parallèle avec ce condensateur d'appoint, jusqu'à présent de type mica, 20pF, est remplacé par le type céramique, 24pF PH(N150) (No. de Pièce 443241237). Pour les modèles destinés à l'Afrique du Sud, la modification suivante a été apportée:

CT102: Identique au type STD.

C105: 10pF → 15pF RH (No. de Pièce 443151232)

Cette modification a été effectuée afin d'obtenir une meilleure tenue en matière d'excursion de fréquence due aux variations de température.

Cette modification s'applique aux unités dont le No. de série commence à ND75906.

V. RMA-80, RMD-80 et RMT-80/-80L

A. Le panneau de façade fait l'objet d'une modification:

1. Le groupe bouton-poussoir figurant auparavant sur le panneau est séparé du panneau de façade. En conséquence, le panneau de façade pour réparation est fourni sans boutons-poussoirs. Les boutons-poussoirs sont fournis séparément.

a) No. de Pièce du nouveau panneau de façade:

pour RMA-80	111911548
pour RMD-80	111911549
pour RMT-80	111911550
pour RMT-80L	111911551

b) No. de Pièce des nouveaux boutons-poussoirs:

pour Fonction, Général, etc (14 x 4) . . .	116210092
pour Correction Physiologique, Amortissement,	
Dolby NR (5)	116210094

RMD-80

I. CASSETTE DECK

ADJUSTMENT

Instruments: Audio Generator, AC VTVM, Oscilloscope, Test Tape (LCT-3004-C and LCT-7001 or equivalent), Metal Blank Tape (SONY Metallic Tape)

A. Azimuth Adjustment

- Set Tape Selector to NORMAL and Dolby NR switch to OFF.
- Insert Test Tape (LCT-3004-C or equivalent) into deck and play it back. Adjust azimuth screw (Fig. 1) to increase the output levels of both channels at playback to maximum and reduce the difference in output between left and right channels to minimum.
- After adjustment, fix the azimuth screw with paint.

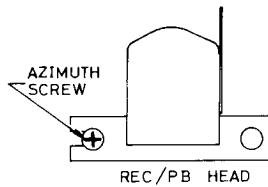


Fig. 1

B. Rec Bias Adjustment

- Insert metal blank tape into the deck. Set Tape Selector to METAL, Dolby NR switch to OFF, Bias Control to mid-position, and Rec Level control to maximum.
- Apply 400Hz signal into LINE IN (L-ch) from Audio Generator (AG). Adjust output of AG so that Line output level is 58mV. Record this signal. Change the frequency of AG to 10,000Hz (with the input at the same level). Then record the signal. Adjust potentiometer VR105 on REC/PB p-c board (Fig. 2), by recording and playing back, until outputs for 10,000Hz and 400Hz signals reach the same level.
- Carry out this adjustment for R-ch, using potentiometer VR106 on REC/PB p-c board.

C. Playback Level Adjustment

- Set Tape Selector to NORMAL and Dolby NR switch to OFF. Connect AC Voltmeter to Line Out.
- Play back Test Tape LCT-7001 (or equivalent), and adjust potentiometer VR101 (VR102 for R-ch) on REC/PB p-c board (Fig. 2) so that AC Voltmeter reads 580mV.

D. Record Level Adjustment

- Set Tape Selector to METAL, Dolby NR switch to OFF and Rec Level Control to maximum. Connect Audio Generator (AG) to Line In and AC Voltmeter and Oscilloscope to Line Out.
- Insert metal tape (SONY's Metallic Tape) into the deck, and depress REC, PLAY and PAUSE buttons. Apply 400Hz (sine wave) signal from AG. Adjust output of AG so that AC Voltmeter reads 580mV.
- Record this signal. Check to see that AC Voltmeter reads 580mV when playing back the recorded tape.
- If recording and playback levels differ from each other, repeat the step 3 until the two levels become almost equal, by adjusting potentiometer VR103 (VR104 for R-ch) on REC/PB p-c board (Fig. 2) while recording.

I. MAGNETOCASSETTE

REGLAGE

Instruments: Générateur d'audio-fréquences, VTVM CA, Bande d'essai (LCT-3004-C et LCT-7001 ou équivalente), Bande au métal (Metallic tape de SONY)

A. Réglage de l'azimut

- Régler le sélecteur de bande sur la position NORMAL et mettre l'interrupteur Dolby NR sur OFF.
- Mettre en place et passer la bande d'essai (LCT-3004-C ou équivalente). Régler la vis d'azimut (Fig. 1) pour augmenter le niveau de sortie des deux canaux à la reproduction au maximum et pour réduire au minimum la différence entre les niveaux de sortie des canaux droite et gauche.
- Après avoir effectué le réglage, enduire la vis d'azimut de peinture.

B. Réglage de polarisation d'enregistrement

- Insérer une bande vierge au métal dans la platine de magnétophone. Régler le Sélecteur de bande sur METAL, l'interrupteur Dolby NR sur OFF, la commande de polarisation en position médiane et la commande de niveau d'enregistrement sur la position maximum.
- Injecter un signal de 400Hz sur la borne LINE IN (Canal de gauche) à l'aide d'un générateur de signaux. Ajuster la sortie du générateur de façon à obtenir un niveau de sortie de ligne de 58mV. Enregistrer le signal sur la bande. Modifier le réglage du générateur audio, sur 10.000Hz (l'entrée restant au même niveau). Enregistrer le signal. Ajuster ensuite le potentiomètre VR105 de la plaquette de circuit REC/PB (voir Fig. 2) tout en répétant les opérations d'enregistrement et d'écoute, jusqu'à ce que les sorties correspondant aux signaux de 10.000Hz et 400Hz atteignent le même niveau.
- Effectuer le même réglage pour le canal de droite également, à l'aide du potentiomètre VR106 de la plaquette de circuit REC/PB.

C. Réglage du niveau de lecture

- Régler le sélecteur de bande sur NORMAL et l'interrupteur Dolby NR sur OFF. Brancher un voltmètre CA sur la borne de sortie de ligne.
- Procéder à l'écoute de la bande d'essai LCT-7001 ou un équivalent et ajuster le potentiomètre VR101 (VR102 pour le canal de droite) sur la plaquette de circuit REC/PB (voir Fig. 2) de façon à obtenir sur le voltmètre CA un affichage de 580mV.

D. Réglage du niveau d'enregistrement

- Régler le sélecteur de bande sur la position METAL, l'interrupteur Dolby NR sur la position OFF et la commande de niveau d'enregistrement sur la position maximum. Brancher un générateur de signaux audio sur l'entrée de ligne et un voltmètre CA ainsi qu'un oscilloscope sur la sortie de ligne.
- Insérer une bande au métal (Metallic Tape de Sony) dans la platine et presser les commandes REC, PLAY et PAUSE. Injecter un signal de 400Hz (onde sinusoïdale) à partir du Générateur audio. Ajuster la sortie du générateur de signaux de façon que le voltmètre CA affiche la valeur 580mV.

3. Enregistrer le signal sur la bande. Vérifier que le voltmètre CA affiche bien 580mV lors de la lecture de la bande précédemment enregistrée.
4. Si une différence est relevée entre les niveaux d'enregistrement et de lecture, répéter l'opération du point 3 en ajustant le potentiomètre VR103 (VR104 pour le canal de droite) de la plaquette de circuit REC/PB (voir Fig. 2) lors de l'enregistrement.

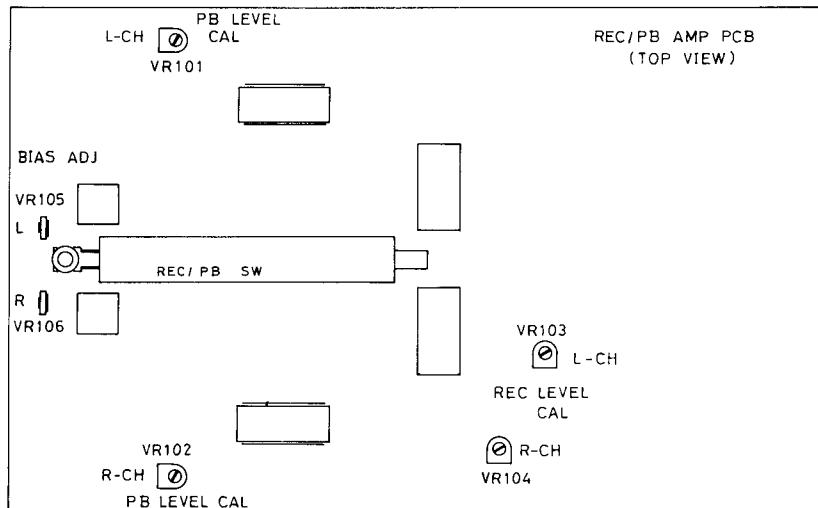


Fig. 2

Troubleshooting Guide RMD-80

A. Tape does not feed at constant speed on PLAY.

1. Failure of pinch roller, or
2. Pinch roller is dirty with oil, dirt or other foreign matters, or
3. Inadequate pressure from pinch roller,
 - a) Failure of pressure spring, or
4. Capstan or belt is oily, or
5. Take-up reel pulley is dirty, or
6. Inadequate back tension.

B. Too much wow on PLAY

1. Check items 1 through 6 in phase A.
2. Capstan is bent, or
3. Belt deformation.

C. Neither recording nor playback can be made.

1. Transistor Q101 or Q103 (Q102 or Q104 for R-ch) on REC/PB p-c board may be faulty, or
2. IC101 (IC102 for R-ch) on REC/PB p-c board may be faulty, or
3. REC/PB switch may be faulty, or
4. REC/PB head may be faulty.

D. Recording alone cannot be made.

1. Transistor Q105 or Q107 (Q106 or Q108 for R-ch) may be faulty, or
2. Rec Bias circuit may be faulty.

NOTE:

When replacing REC/PB switch, take note of the following items.

1. Make sure the orientation of the switch is correct. (Longer one of the movable projections should be toward the center of p-c board.)
2. Attach the pulley to the shorter projection of the switch (Fig. C). When attaching the pulley mount-

Guide de dépannage RMD-80

A. En reproduction (PLAY), la bande ne défile pas à vitesse constante.

1. Galet presseur défectueux, ou
2. Galet presseur sale ou recouvert d'huile ou autres corps étrangers, ou
3. Pression inadéquate du galet presseur,
 - a) Ressort de pression défectueux, ou
4. Cabestan ou courroie enduit d'huile, ou
5. Roue de la bobine réceptrice sale, ou
6. Tension arrière inadéquate.

B. Trop de pleurage à la lecture.

1. Vérifier chaque point de 1 à 6 de la phase A.
2. Le cabestan est tordu, ou
3. La courroie est déformée.

C. Ni l'enregistrement ni la lecture ne sont obtenus.

1. Transistor Q101 ou Q103 (Q102 ou Q104 pour le canal de droite) de la plaquette de circuit REC/PB défectueux, ou
2. IC101 (IC102 pour le canal de droite) de la plaquette de circuit REC/PB défectueux, ou
3. Commutateur REC/PB défaillant, ou
4. Tête REC/PB défaillante.

D. Seul l'enregistrement ne peut être obtenu.

1. Les transistors Q105 ou Q107 (Q106 ou 108 pour le canal de droite) sont défectueux, ou
2. Le circuit de polarisation d'enregistrement est défaillant.

NOTE:

Lors de la pose du commutateur Enreg./Lecture, suivre la séquence suivante.

1. Veiller à bien orienter le commutateur. (La saillie la plus longue doit être orientée vers le centre de la plaquette.)

ing plate to the switch, be careful not to tighten the mounting screw excessively (Fig. C).

3. The tension of the wire for switching the REC button should be adjusted carefully: neither too loose or too tight setting allows correct switching. Adjust the tension with the switch set in the playback mode. Loosen the screw on tension adjuster, and operate the adjuster in either direction indicated by arrow as shown in Fig. D. When making adjustment, do not let the switch turn into the record mode (i.e. the projection of the switch should not move toward the adjuster). Optimal tension should be obtained when the wire is in a slightly loose condition, but not to the extent of slackening.

- a) If the tension of wire is too tight, the switch will be incapable of returning to playback mode on switching from REC to PB, resulting in unstable playback action.
- b) If too loose, switching into the REC mode will not be made correctly.

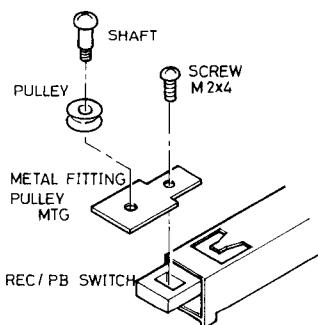


Fig. C

2. Fixer la poulie sur la saillie la plus courte du commutateur (Fig. C). Prendre soin de ne pas serrer trop la vis de fixation de la plaque de montage de la poulie sur le commutateur (Fig. C).

3. La tension du fil du commutateur de commande d'Enregis. doit faire l'objet d'un réglage précis: ni trop lâche ni trop tendue, de façon à permettre un mouvement correct. Ajuster la tension lorsque le commutateur est en position de lecture. Desserrer la vis du tendeur et décaler celui-ci dans l'une des directions indiquées par la flèche, comme illustré sur la Fig. D. Lors de ce réglage, le commutateur ne doit pas passer en mode d'enregistrement (la saillie du commutateur ne doit pas se déplacer vers le tendeur). La tension optimale est obtenue lorsque le fil est quelque peu lâche, mais sans accuser de flèche.

- a) Si la tension du fil est trop élevée, le commutateur ne peut revenir en mode de lecture lors du passage de REC à PB, ce qui provoque un mouvement instable lors du passage à la lecture.
- b) Si la tension est trop faible, le passage en mode REC ne peut s'effectuer correctement.


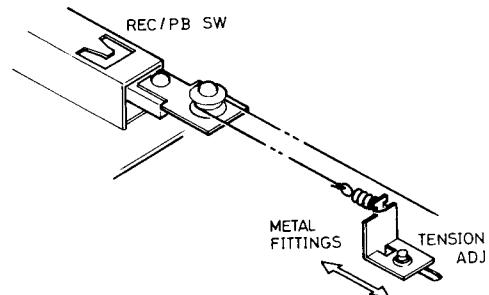


Fig. D

Block Diagram

Schéma synoptique



RMD-80

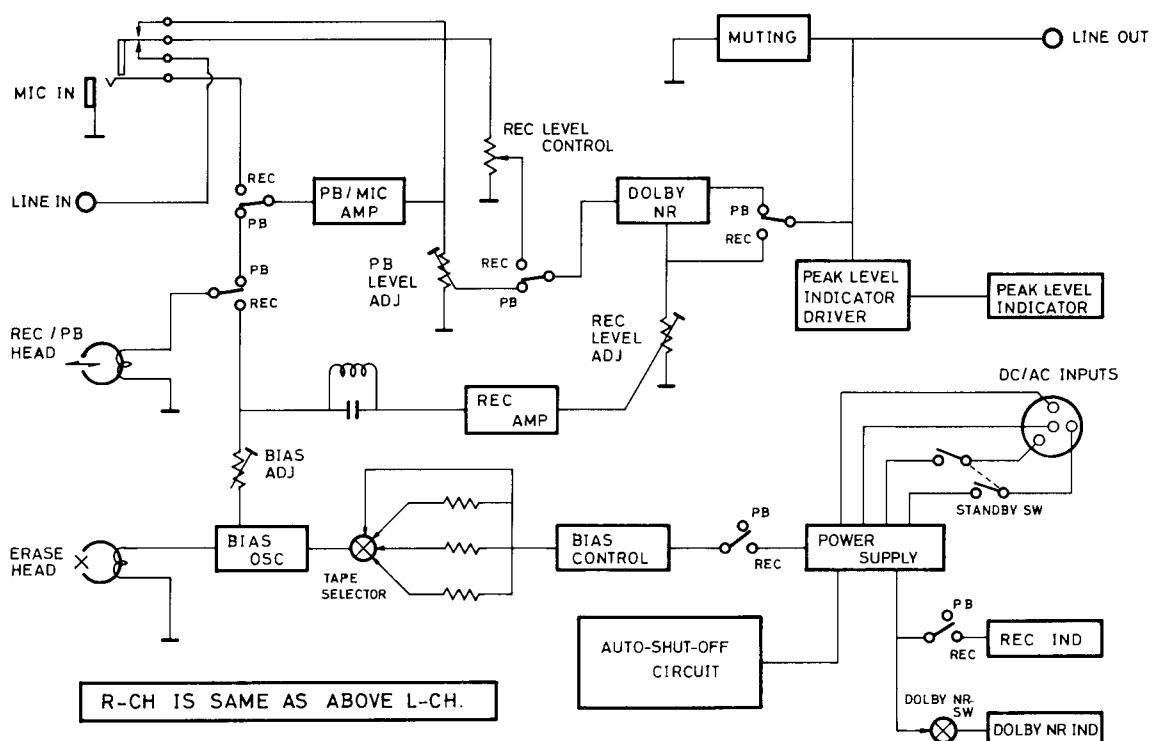



RECORD/PLAYBACK LEVEL DIAGRAM
DIAGRAMME DU NIVEAU D'ENREGISTREMENT/LECTURE

PLAYBACK MODE
MODE DE LECTURE

RMD-80

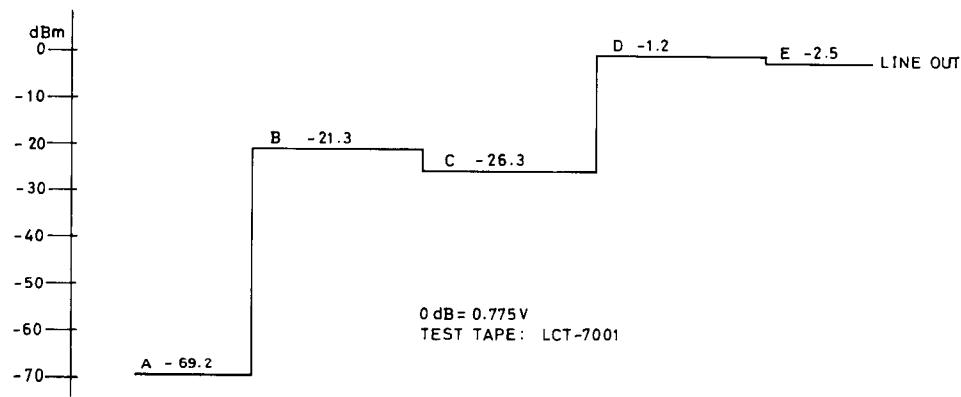


RECORDING MODE
MODE D'ENREGISTREMENT RMD-80

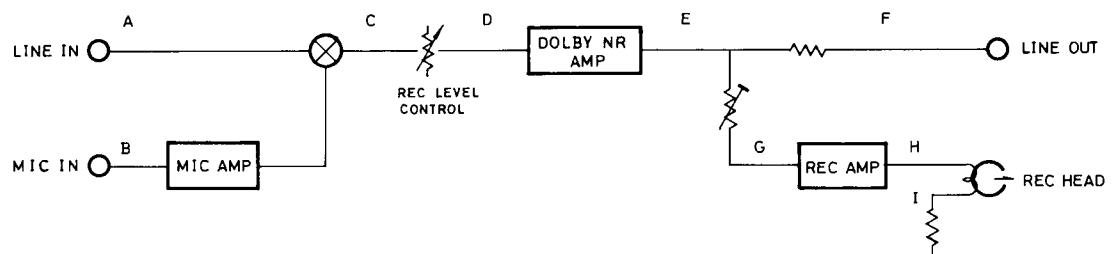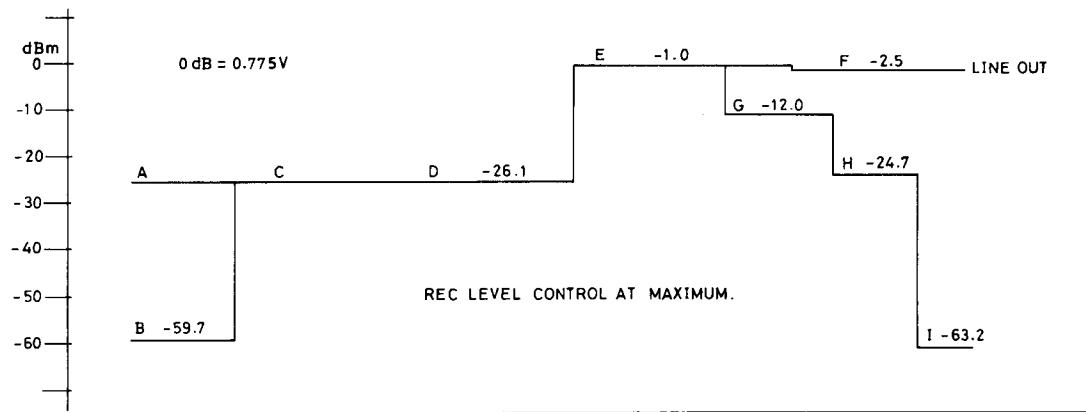


Disassembly Diagram

Schéma de démontage

No.	Description	Part No.	No.	Description	Part No.
1.	Chassis Ass'y	090221101	63.	Dust Cover (B)	090221121
2.	Eject Lever Ass'y	090221102	64.	Lamp Window	090221122
3.	Lever Spring (B)	090226151	65.	Lamp (12V, 63mA)	350120006
4.	Rec Lever	090221103	66.	Eject Lever (C)	090221123
5.	Play Lever	090221104	67.	Eject Lever Spring (B)	090226182
6.	Brake Lever	090221105	68.	Button Holder (L)	090221124
7.	Brake Shoe	090226152	69.	Button Holder (R)	090221125
8.	Brake Spring	090226153	70.	Cassette Case Ass'y	090221126
9.	Play Idler Arm	090221106	71.	Case Clamp Spring	090226182
10.	Idler Arm Srping	090226154	72.	Not used	—
11.	FF Tension Spring	090226155	73.	Button Lever	116210075
12.	FF Lever	090221107	74.	Button Shaft (B)	090226183
13.	FF Lever Spring	090226156	75.	Button Collar	090227204
14.	Cassette Guide	090221108	76.	Case Up Spring	090226184
15.	Review Lever	090221109	77.	Damper Holder	090221127
16.	Rew Lever Spring (B)	090226157	78.	Damper Ass'y	090221128
17.	Pause Lever Ass'y	090221110	79.	Damper Link Ass'y	090221129
18.	Pause Lever Spring	090226158	80.	Solenoid Holder Ass'y	090221130
19.	Cam Plate (C)	090221111	81.	Solenoid	240111249
20.	Not used	—	82.	Solenoid Spring	090226185
21.	Cam Plate Spring (A)	090226159	83.	Auto Arm (C)	090221131
22.	Leaf Switch, Play	615212286	84.	Switch Holder	090221132
23.	Center Pulley Arm Ass'y	090221112	85.	Leaf Switch, Pause	615212288
24.	Center Arm Spring	090226160	86.	Center Arm Collar	090227205
25.	Motor Holder (B)	090221113	87.	Motor	260101130
26.	Motor Cushion	090226161	88 to 111	Not used	—
27.	Motor Ring	090227201	112.	Polyslider Washer, $\phi 1.6 \times \phi 1.3 \times t0.25$	770500079
28.	Motor Pulley	090226162	113.	Oil-seal Washer, $\phi 1.9 \times \phi 5 \times t0.5$	090227206
29.	Flywheel (B)	090226163	114.	Polyslider Washer, $\phi 2.1 \times \phi 4 \times t0.25$	770500080
30.	Belt	090226164	115.	Washer (A), $\phi 4.1 \times \phi 8 \times t0.25$	090227207
31.	Flywheel Bracket	090221114	116.	Not used	—
32.	Capstan Screw	090227202	117.	Not used	—
33.	Not used	—	118.	Plain Washer (L), $\phi 2$	090227208
34.	FF Idler	090226165	119.	Plain Washer (S), $\phi 2$	090227209
35.	Takeup Reel Ass'y	090226166	120.	Plain Washer (L), $\phi 2.6$	090227210
36.	Supply Reel Ass'y	090226167	121.	Plain Washer (S), $\phi 2.6$	090227211
37.	Back Tension Spring	090226168	122.	Plain Washer (L), $\phi 3$	090227212
38.	Pause Arm	090221115	123.	Not used.	—
39.	Play Idler	090226169	124.	Screw, M2 x 4, Pan	703202004
40.	Idler Bush	090226170	125.	Screw, M2 x 6, Pan	703202006
41.	Pause Cam	090221116	126.	Screw, M2.6 x 3, (BLK), Pan	703222603
42.	Pause Cam Spring	090226171	127.	Screw, M2.6 x 5, Pan	703202605
43.	Pack Clamp Spring	090226172	128.	Not used	—
44.	Rec Sensor	090221117	129.	Screw, M3 x 5, Pan	703203005
45.	Rec Sensor Spring	090226173	130.	Not used	—
46.	Sub-chassis Ass'y	090221118	131.	Screw, M2.6 x 5 w/SPW	713202605
47.	Sub-chassis Spacer	090226174	132.	Screw, M2.6 x 8 w/SPW	713202608
48.	Not used	—	133.	Screw, M3 x 5 w/SPW	713203005
49.	Not used.	—	134.	Not used	—
50.	Cord Clamp	090227203	135.	Screw, 2.6 x 4, Tap-tight	763202604
51.	Rec/PB Head	241001118	136.	Screw, 2.6 x 6, Tap-tight	763202606
52.	Erase Head	241001121	137.	Screw, 2.6 x 8, Tap-tight	763202608
53.	Head Spring	090226175	138.	Not used	—
54.	Panel Tension Spring	090226176	139.	Screw, M2 x 6, Bind	705002006
55.	Panel Spring (L)	090226177	140.	Screw, 2 x 6, Tapping	723202006
56.	Panel Spring (R)	090226178	141.	Not used	—
57.	Pinch Roller Arm Ass'y	090221119	142.	E-ring, $\phi 1.5$	770500026
58.	Pinch Roller Arm Spring	090226179	143.	E-ring, $\phi 2.5$	770500027
59.	Counter Holder (D)	090221120	144.	E-ring, $\phi 3$	770500039
60.	Counter Belt	090226180	145.	E-ring, $\phi 4$	770500040
61.	Counter	650901118	146.	Not used	—
62.	Leaf Switch, Muting	615212287	147.	Spring Pin	090227215

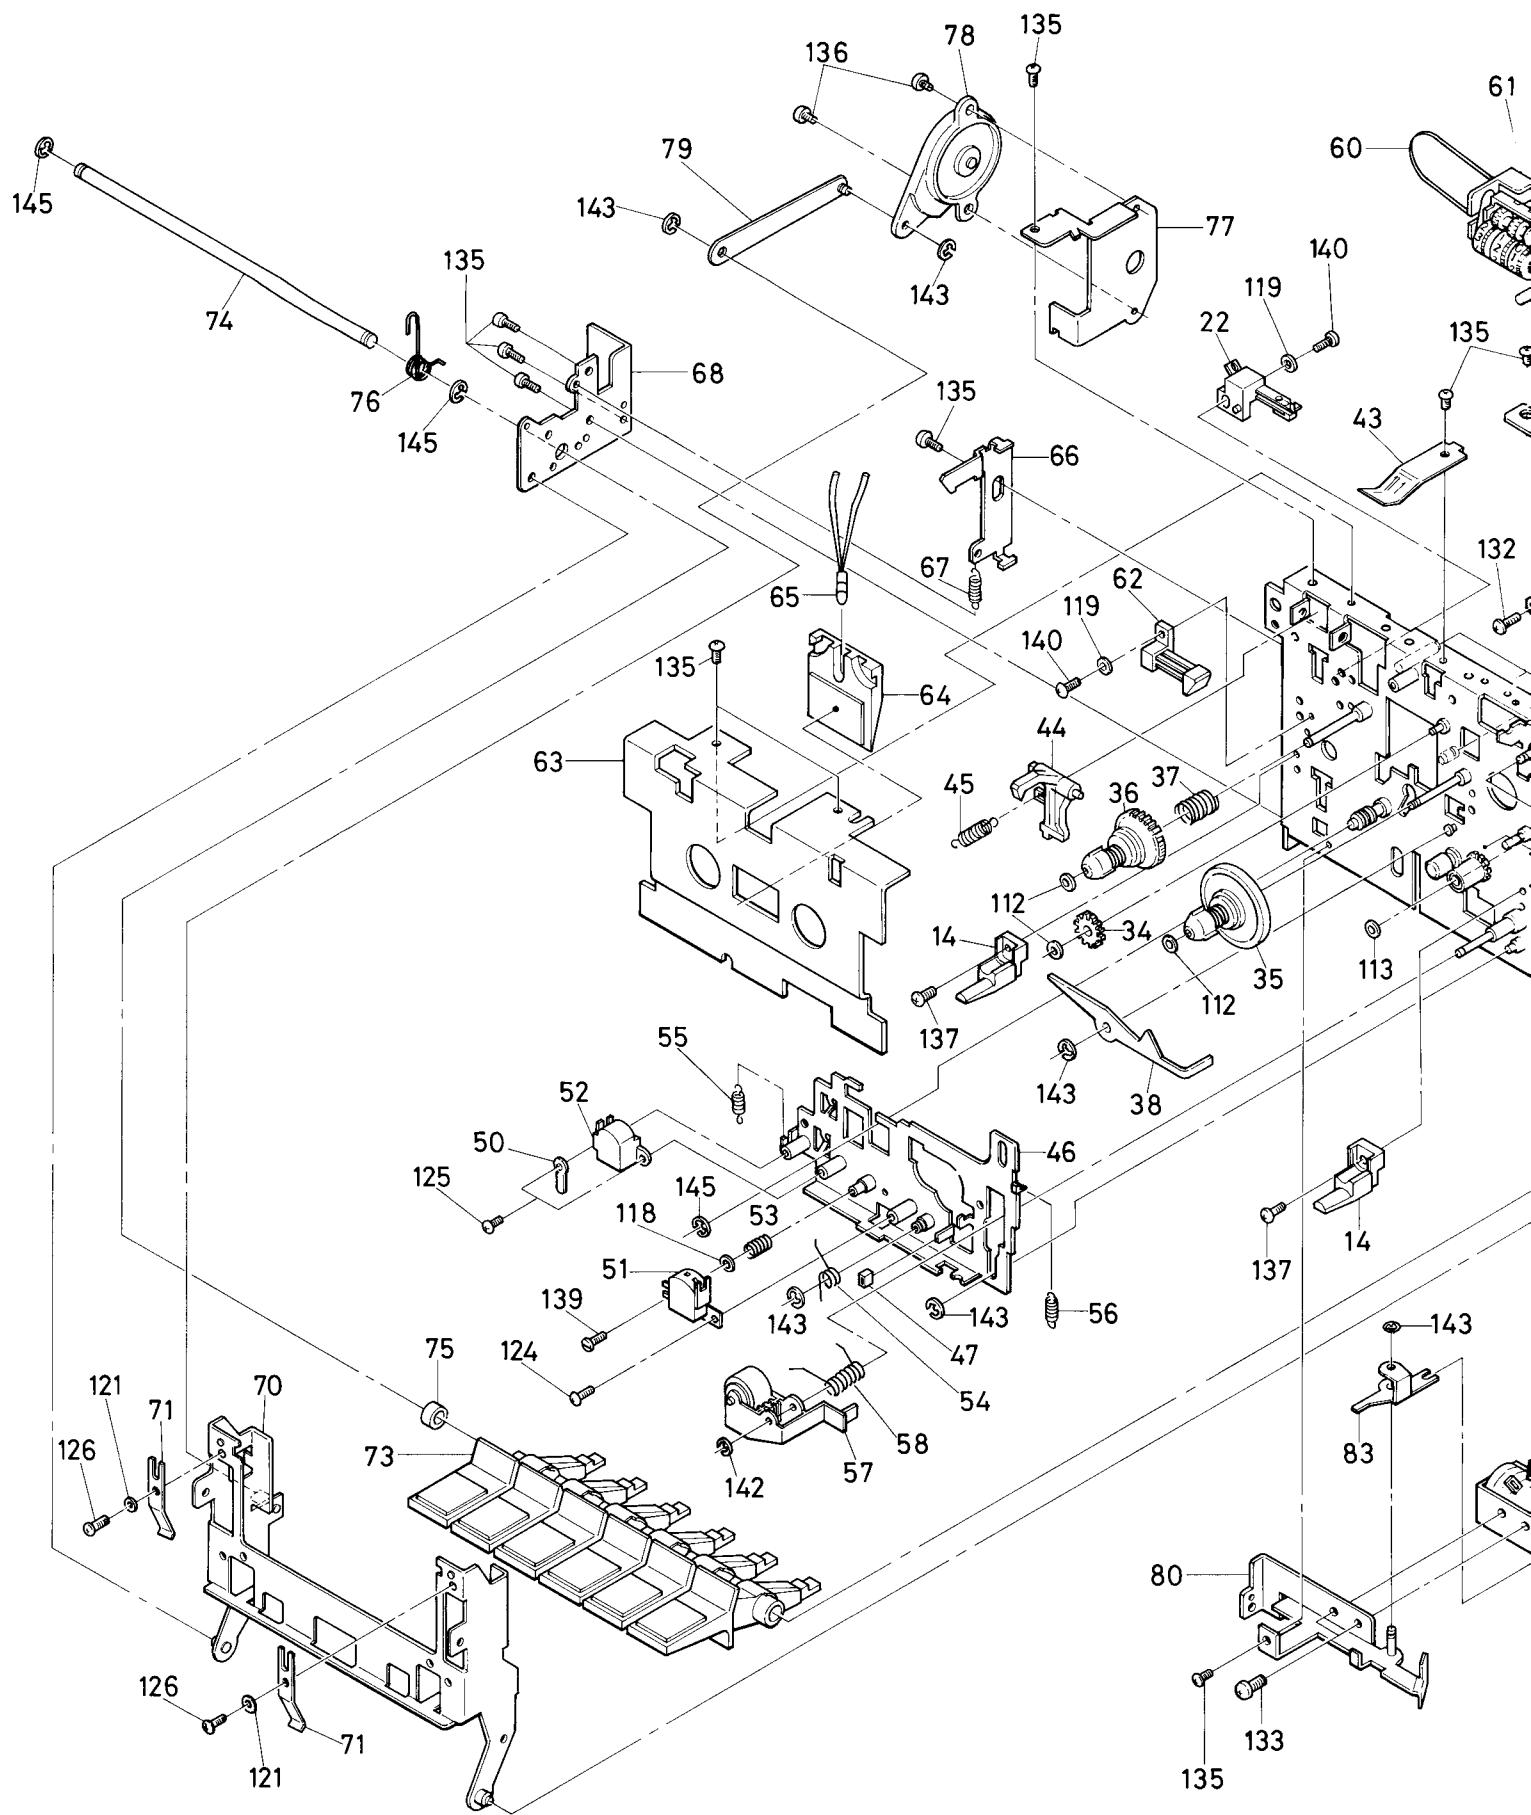

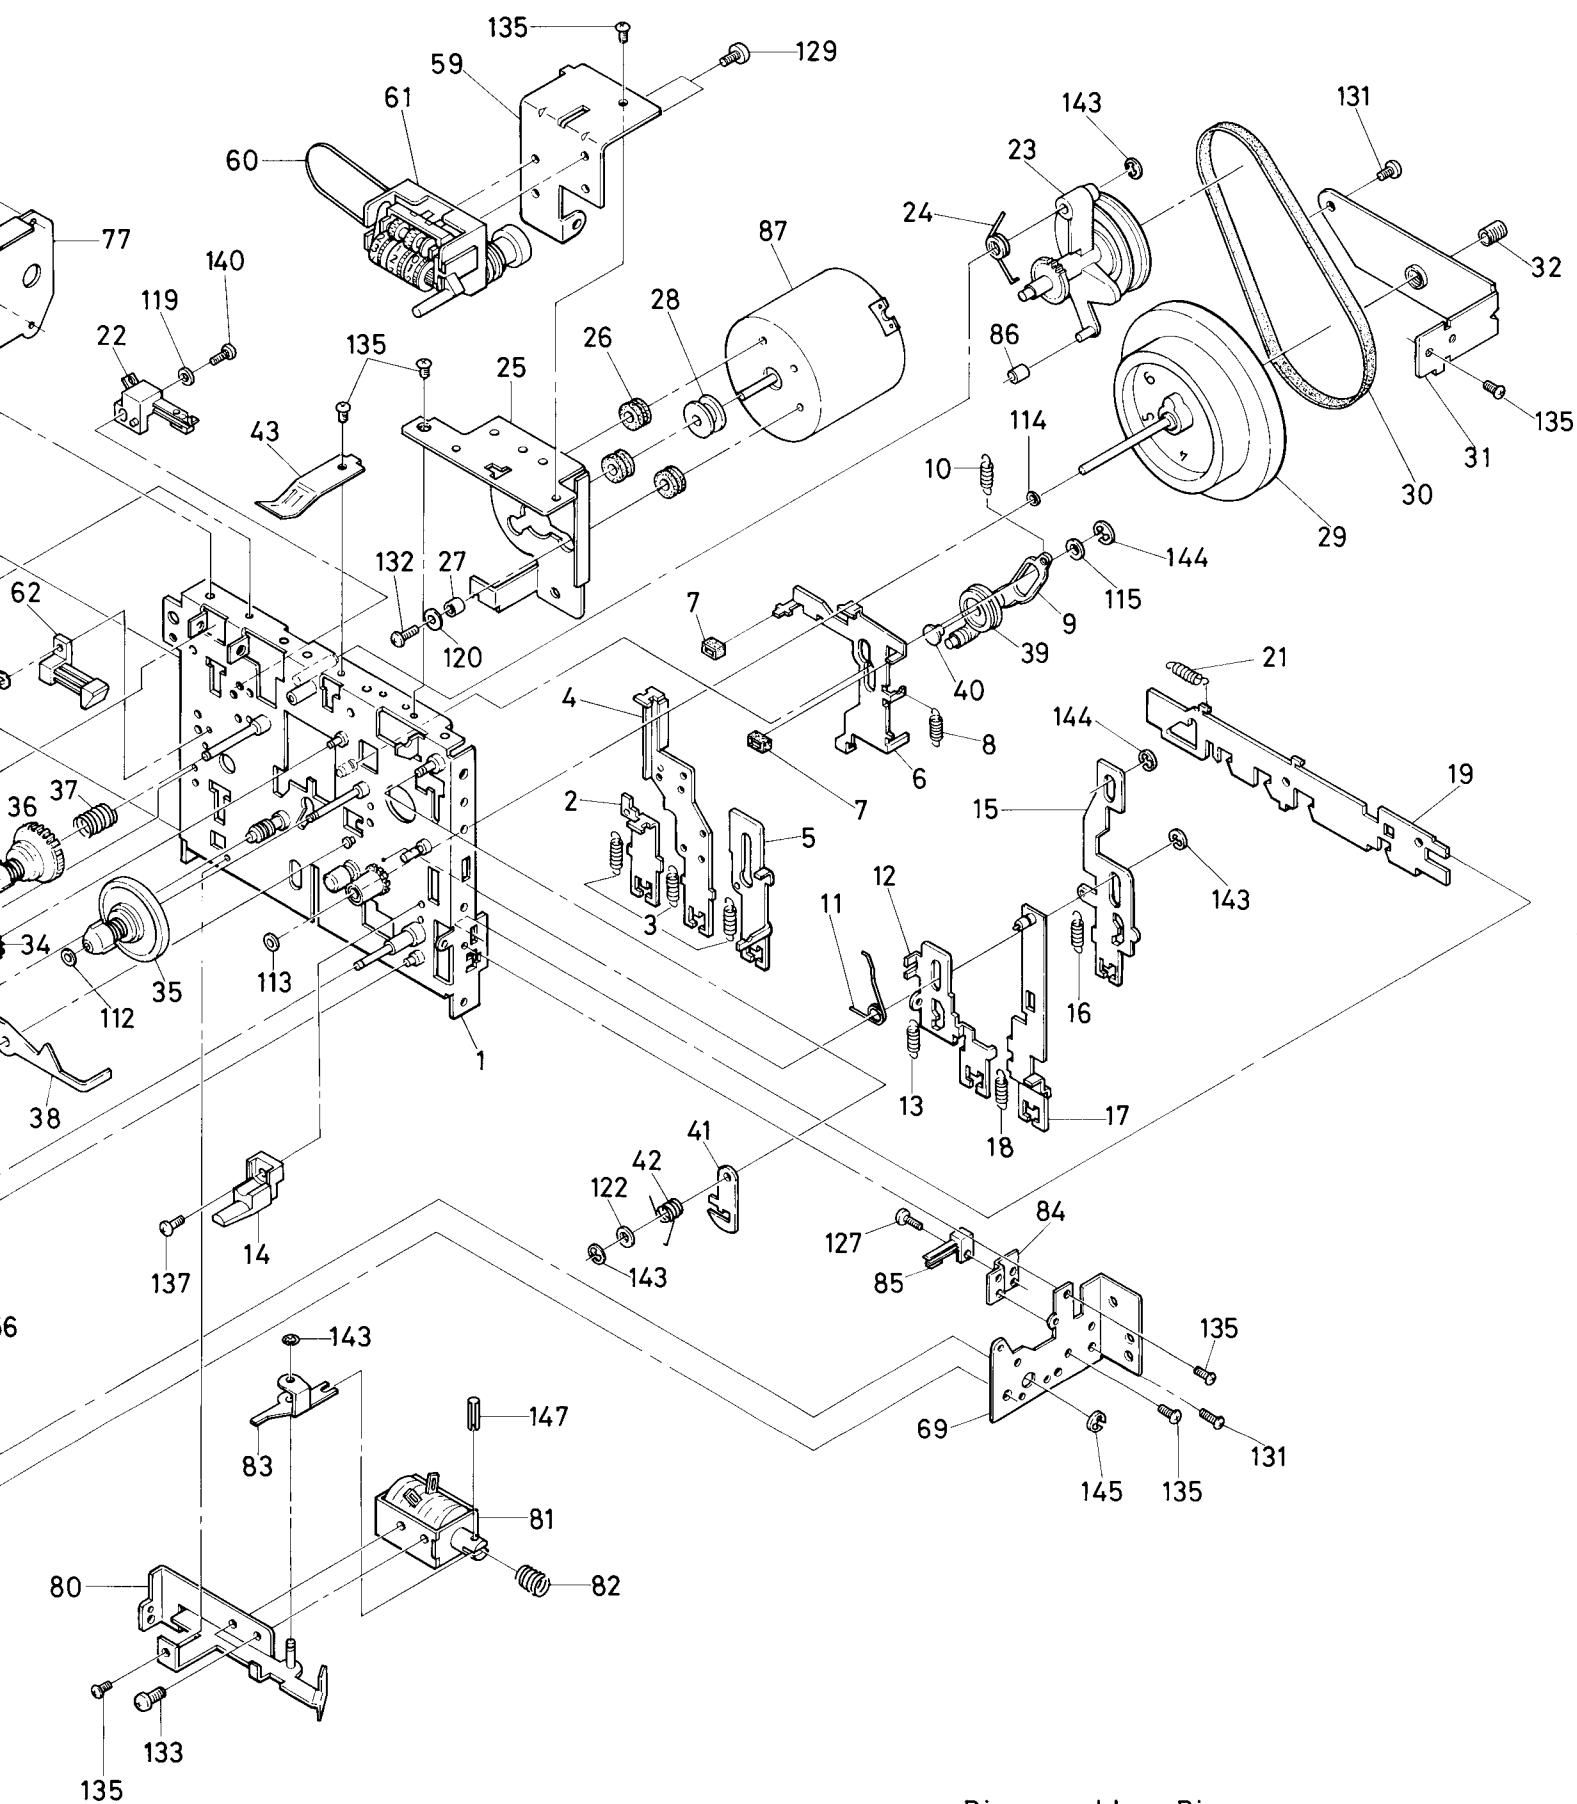

Disassembly Diagram
MODEL NO. RMD-80
1980.7.9 YORIKO TERAYAMA

RMT-80/-80L

II. TUNER

A. FM IF and RF Alignment

Instruments: FM Signal Generator, Oscilloscope, HD Analyzer, Zero-center Meter

- Set Function Selector to FM position beforehand.
1. Connect Zero-center Meter to test point (plus lead to pin 8 and minus lead to pin 7). *¹
Connect Oscilloscope and HD Analyzer to OUTPUT (L-ch or R-ch).
 2. Receive white noise, and adjust the bottom core of FM IFT L109 so that Zero-center Meter needle falls on mid-position.
 3. Receive 90MHz signal from FM Signal Generator. Antenna input should be set to the optimal level where adjustment can be carried out satisfactorily with the appropriate amount of noise contained in the signal wave (3μV-5μV). Adjust FM IFT L105 so that the waveform is largest and contains noise uniformly on the top and bottom of the waveform. (See Fig. 3.)

Note: Although two synchronizing points are available, be sure to synchronize at the upper point.

4. Repeat steps 2 and 3 until no further improvement is noticed.
5. Set the dial to 90MHz position precisely. Adjust FM OSC coil L102 to obtain 90MHz signal from FM SG, and adjust RF coils L103 and 101 to obtain maximum sensitivity at 90MHz.
6. Next, set the dial to 106MHz and switch the frequency of FM SG to 106MHz. Adjust FM OSC trimmer capacitor CT102 to receive 106MHz signal, and adjust RF trimmer capacitors CT103 and 101 for maximum sensitivity at 106MHz.
7. Repeat steps 5 and 6 until no further improvement is noticed.
8. Receive 90MHz (400Hz, 100% modulated, 1mV input) signal from FM SG. Adjust top core of FM IFT L109 to minimize distortion.

If Zero-center Meter needle deviates from mid-position after adjustment in step 8, fine-adjust the bottom core of FM IFT L109.

9. Receive 90MHz, 1mV signal from FM SG in a manner that center indicator LED 2 (green) alone glows. (Needle of Zero-center Meter should fall on mid-position.)

Maintaining this state;

- a) Set the SG to a position 50kHz higher than 90 MHz, and adjust potentiometer VR172*² so that LED 1 dimly glows.
- b) Set the SG to a position 50kHz lower than 90MHz, and adjust potentiometer VR171*³ so that LED 3 dimly glows. See Fig. 3.

II. TUNER

A. Alignement FI MF et HF

Instruments: Générateur de signal MF, oscilloscope, analyseur à distorsion non-linéaire et compteur à centre zéro

- Placer le sélecteur de fonction à la position FM d'avance.
1. Brancher le compteur à centre zéro sur le point d'épreuve (conducteur positif à la broche 8 et conducteur négatif à la broche 7). Brancher l'oscilloscope et l'analyseur à distorsion non-linéaire sur OUTPUT (au canal droit ou gauche).
 2. Recevoir le bruit blanc, et régler l'âme inférieure de FM IFT L109 de sorte que l'aiguille du compteur à centre zéro tombe sur la position moyenne.
 3. Recevoir le signal de 90MHz du générateur de signal MF. L'entrée de l'antenne doit être réglée au niveau optimal où le réglage peut être mis à exécution d'une manière satisfaisante avec la quantité appropriée de bruit contenue dans l'onde de signal (3μV-5μV). Régler FM IFT L105 de sorte que la forme d'onde soit plus grande et contienne le bruit uniformément sur le sommet et le fond de la forme d'onde. (Fig. 3)
- Note:** Quoique les deux points d'accord soient disponibles, s'assurer de synchroniser dans le point supérieur.
4. Répéter les points 2 et 3 jusqu'à ce qu'aucune amélioration additionnelle ne soit plus observée.
 5. Placer le cadran à la position de 90MHz précisément. Régler la bobine FM OSC L102 pour obtenir le signal de 90MHz du générateur de signal MF, et régler les bobines RF L103 et 101 pour obtenir la sensibilité maximale à 90MHz.
 6. Ensuite, placer le cadran à 106MHz et commuter la fréquence du générateur de signal MF à 106MHz. Régler le condensateur de réglage FM OSC CT102 pour recevoir le signal de 106MHz, et régler les condensateurs de réglage RF CT103 et 101 pour la sensibilité maximale à 106MHz.
 7. Répéter les points 5 et 6 jusqu'à ce qu'aucune amélioration additionnelle ne soit plus observée.
 8. Recevoir le signal de 90MHz (Mod. du 100% de 400 Hz, entrée de 1mV) du générateur de signal MF. Régler l'âme supérieure de FM IFT L109 pour minimiser la distorsion.
- Si l'aiguille du compteur à centre zéro s'écarte de la position moyenne après le réglage dans le point 8, régler finement l'âme inférieure de FM IFT L109.
9. Recevoir le signal de 90MHz et 1mV du générateur de signal MF de sorte que la LED 2 (vert) s'allume seulement. (L'aiguille du compteur à centre zéro doit tomber sur la position moyenne).
- En maintenant cet état:
- a) Placer le générateur de signal à une position de 50kHz plus haute que 90MHz, et régler le potentiomètre VR172 de sorte que la LED 1 s'allume légèrement.
 - b) Placer le générateur de signal à une position de 50 kHz plus basse que 90MHz, et régler le potentiomètre VR171 de sorte que la LED 3 s'allume légèrement. Voir la Fig. 3.

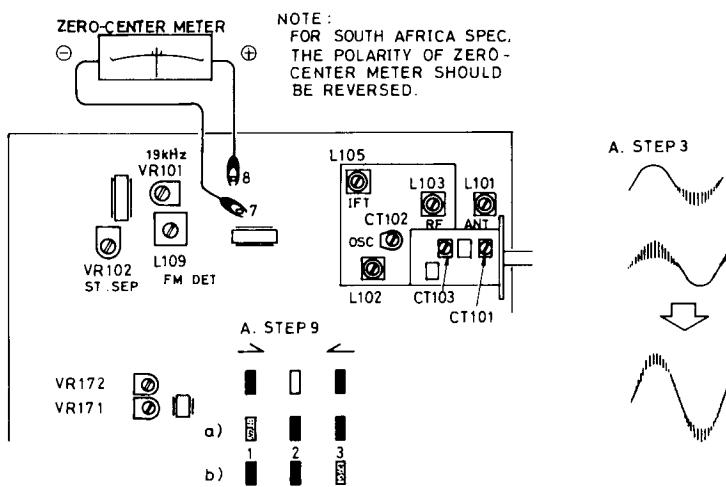


Fig. 3

B. FM Stereo Adjustment

Instruments: FM Stereo SG, Oscilloscope, AC Voltmeter, MPX Filter Coil (RL-86B).

- Set Function Selector to FM position beforehand.
- 1. Connect Oscilloscope and AC Voltmeter to R-ch OUTPUT through MPX Filter Coil.
- 2. Receive stereo signal from FM Stereo Signal Generator (with antenna input level set at 1mV).
Pilot tone 9% mod.
Audio signal 1,000Hz, L-ch only 90% mod.
Turn potentiometer VR101 to the mid-position of the range where Stereo Indicator illuminates.
- 3. Adjust potentiometer VR102 to minimize leakage of signal from L-ch into R-ch.
- 4. Next, connect Oscilloscope and AC Voltmeter to L-ch OUTPUT and switch the modulation of the FM Stereo Signal Generator to R-ch signal. Check to make sure leakage of signal from R-ch into L-ch is almost the same as that from L-ch into R-ch.
If there is a marked difference, fine-adjust VR102.

Notes for South African Specs:

*¹ Plus lead to pin 7 and minus lead to 8.

*² Adjust potentiometer VR171.

*³ Adjust potentiometer VR172.

- For South African specs., Tuning Indicator LEDs 1 and 3 have been connected properly to give correct indication, when supplied.

B. Réglage stéréophonique MF

Instruments: Générateur de signal stéréophonique MF, oscilloscope, voltmètre à courant alternatif et bobine filtre MPX (RL-86B)

- Placer le sélecteur de fonction à la position FM au préalable.
- 1. Brancher l'oscilloscope et le voltmètre à courant alternatif au OUTPUT au canal droit à travers la bobine filtre MPX.
- 2. Recevoir le signal stéréophonique du générateur de signal stéréophonique MF (niveau d'entrée de l'antenne placé à 1mV).
Signal d'identification 9% mod.
Signal audio 1.000Hz (canal gauche seul) . . . 90% mod.
Tourner le potentiomètre VR101 à la position moyenne de l'étendue où l'indicateur stéréo s'illumine.
- 3. Réglar le potentiomètre VR102 pour minimiser la fuite du signal du canal gauche au canal droit.
- 4. Ensuite, brancher l'oscilloscope et le voltmètre à courant alternatif au OUTPUT de canal droit, et commuter la modulation du générateur de signal stéréophonique MF au signal de canal droit. Vérifier pour assurer que la fuite du signal du canal droit au canal gauche est presque la même que cela du canal gauche au canal droit. S'il y a une différence marquée, régler finement le VR102.

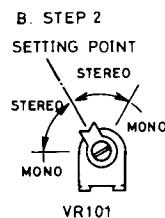


Fig. 4

C. AM(MW and LW) Alignment

Instruments: AM Signal Generator and AC Voltmeter

Input signal must be kept as low as possible to avoid AGC action.

Step	Generator		Tuning Dial Setting	Output Indicator Connected to	Adjust	Adjust for		
	Coupling	Frequency						
1	Set Function Selector switch to AM (AM-MW).							
2	Pin No.9 through a 0.01mfd capacitor.	455kHz (400Hz, 30% mod.)	Non interfering at low end of scale.	AC VTVM to OUTPUT.	L202, 203, 204	Maximum reading on AC voltmeter		
3	Test Loop Radiate signal into ferrite loopstick antenna.	600kHz (400Hz, 30% mod.)	600kHz		L201 (OSC) and L001 ANT. Coil (MW).			
4		1,400kHz (400Hz, 30% mod.)	1,400kHz		CT202 (OSC) and CT201 (ANT) Trim. (on AM VC).			
5	Repeat steps 3 and 4 until no further improvement is noticed.							
6	Set Function Selector switch to AM-LW.							
7	Same as Step 3	160kHz (100Hz, 30% mod.)	160kHz	Same as Step 2	L252 (OSC) and L001 ANT Coil (LW.)	Same as Step 2		
8		320kHz (100Hz, 30% mod.)	320kHz		CT252 (OSC) CT251 (ANT) Trim.			
9	Repeat Steps 7 and 8 until no further improvement is noticed.							

Note: Steps 7 through 9 apply to 3-band models (with LW) only.

C. Alignement MA (PO et GO)

Instruments: Générateur de signal MA et voltmètre à courant alternatif

Le signal d'entrée doit être maintenu aussi bas que possible afin d'éviter l'action AGC.

Point	Générateur		Ecran d'accord	Indicateur de sortie connecté à	Réglage	Réglage pour		
	Couplage	Fréquence						
1	Régler le commutateur sélecteur de fonction sur AM (AM-MW).							
2	Broche No.9 par l'intermédiaire d'un condensateur de 0,01mfd.	455kHz (400Hz, 30% mod.)	Non interférence à l'extrémité inférieure de l'échelle.	Voltmètre électronique au OUTPUT	L202, 203, 204	Lecture maximum sur le voltmètre à courant alternatif		
3	Boucle de mesure Envoie le signal sur l'antenne ferrite à boucle.	600kHz (400Hz, 30% mod.)	600kHz		L201 (OSC) et L001 (PO) ANT. bobine.			
4		1.400kHz (400Hz, 30% mod.)	1.400kHz		CT202 (OSC) et CT201 (ANT) de correction (sur AM VC)			
5	Répéter les points 3 et 4 jusqu'à ce qu'il ne puisse être remarqué d'amélioration supplémentaire.							
6	Régler le commutateur sélecteur de fonction sur AM-LW.							
7	Identique au point 3.	160kHz (100Hz, 30% mod.)	160kHz	Identique au point 2.	L252 (OSC) et L001 ANT (GO) bobine.	Identique au point 2.		
8		320kHz (100Hz, 30% mod.)	320kHz		CT252 (OSC) et CT251 (ANT) de correction			
9	Répéter les points 7 et 8 jusqu'à ce qu'il ne puisse être remarqué d'amélioration supplémentaire.							

Note: Les points 7 à 9 s'appliquent aux modèles de 3 bandes (avec GO) seulement.


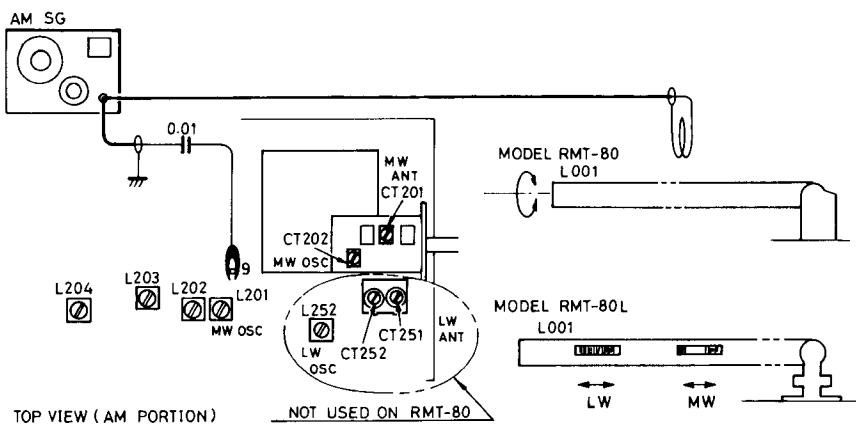


Fig. 5

Dial Stringing Diagram Diagramme des câble d'entraînement

RMT-80/-80L

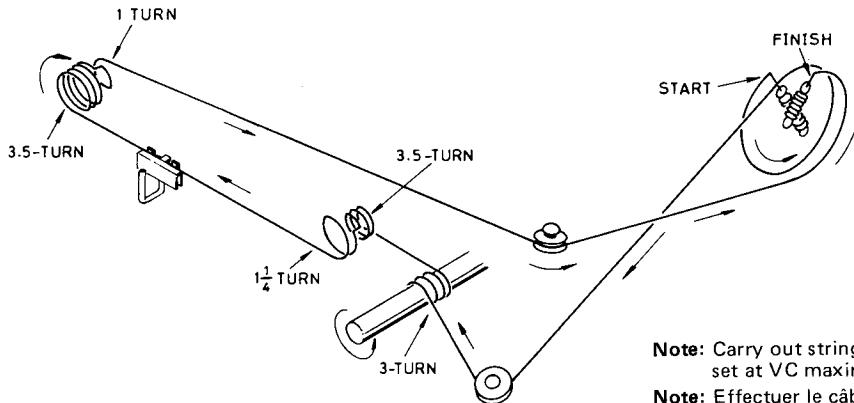

Note: Carry out stringing with the front end set at VC maximum.

Note: Effectuer le câblage avec le condensateur réglable de l'étage d'entrée réglé au maximum.

Specifications

RMD-80

HeadsHigh B Permalloy Laminated (REC/PB)
	Ferrite Core (ERASE)
Track4-track/2-channel
Tape Speed4.8cm/sec.
MotorElectronic DC Governor
Wow and Flutter0.15% (DIN) 0.05% (WRMS)
Distortion (REC/PB, 400Hz)0.6% (METAL)
Frequency Response:	
Normal, LH30 to 14,000Hz±3dB
Chromium30 to 15,000Hz±3dB
FeCr30 to 16,000Hz±3dB
Metal30 to 17,000Hz±3dB
Signal-to-Noise Ratio	
(Chromium)Dolby NR in: 64dB Dolby NR out: 55dB
Input Sensitivity/Impedance:	
MIC0.3mV/10 kohms
LINE40mV/47 kohms

RMA-80

Continuous Power Output25 watts* per channel, min.
	RMS both channels driven into 8 ohms from 20 to 20,000Hz with no more than 0.08% total harmonic distor- tion.
Total Harmonic DistortionNo more than 0.08% (conti- nuous rated power output)
(20 to 20,000Hz, from AUX)	No more than 0.08% (conti- nuous 1/2 watt power output)
	No more than 0.09% (1 watt per channel power output, 8 ohms)
Intermodulation DistortionNo more than 0.05% (conti- nuous rated power output)
(60Hz : 7kHz = 4 : 1)	No more than 0.04% (conti- nuous 1/2 watt power output)
	No more than 0.04% (1 watt per channel power output, 8 ohms)
Damping Factor35 (20 to 20,000Hz, 8 ohms)
Output: Speaker8-16 ohms
Headphone.8-16 ohms
Input Sensitivity/Impedance:	
PHONO2.5mV/47 kohms
TUNER150mV/42 kohms
TAPE IN150mV/42 kohms

RMT-80/-80L

FM SECTION

Usable Sensitivity: Mono11.2dBf (2.0μV/300 ohms)
Stereo20.0dBf (5.5μV/300 ohms)
50dB Quieting Sensitivity:	
Mono15.2dBf (3.2μV/300 ohms)
Stereo36.0dBf (35μV/300 ohms)
Signal-to-Noise Ratio (at 65dBf):	
Mono75dB
Stereo65dB
Distortion (at 65dBf):	
100Hz0.1% (mono), 0.25% (stereo)
1kHz0.1% (mono), 0.25% (stereo)
6kHz0.2% (mono), 0.35% (stereo)
Frequency Response30 to 15,000Hz +1.0dB, -1.5dB
Capture Ratio1.0dB
Alternate Channel Selectivity60dB
Spurious Response Ratio70dB
Image Response Ratio40dB
IF Response Ratio75dB
AM Suppression Ratio55dB

Caractéristiques

Output Level580mV/1 kohms	
Fast Wind Time (C-60)90 seconds	
Tape SelectorBIAS	EQUALIZER
Normal, LH100%	.120μs
Chromium150%	.70μs
FeCr110%	.70μs
Metal200%	.70μs

MISCELLANEOUS

- Power RequirementPower supplied from the amplifier RMA-80.
- Specifications and design subject to possible modification without notice.
 - Dolby, Dolbyized and the double-D symbol are trade marks of Dolby Laboratories.
 - Noise reduction system manufactured under license from Dolby Laboratories.

Overload Level (T.H.D. 0.1% 1 kHz):

PHONO185mV
TUNERNot less than 5V

Frequency Response:

PHONO30 to 15,000Hz ±0.5dB
(RIAA STD)	

TUNER, TAPE IN5 to 70,000Hz, +0dB, -1.0dB

Tone Control:

BASS±10dB (50Hz)
TREBLE±10dB (15kHz)

Loudness Contour+10dB (100Hz),
+4dB (10kHz)

(volume control set at -40dB position)

Signal-to-Noise Ratio (IHF, A network):

PHONO75dB
TUNER, TAPE IN95dB

Power Requirement120V/60Hz, 220V/50Hz,
240V/50Hz

120, 220, 240V/50-60Hz

Power Consumption150 watts

- Specifications and design subject to possible modification without notice.

- *Measured pursuant to the Federal Trade Commission's Trade Regulation Rule on Power Claims for Amplifiers (applicable to the U.S.A. only).

Stereo Separation45dB (1kHz),
35dB (30 to 15,000Hz)

Subcarrier Product Ratio45dB

SCA Rejection Ratio70dB

Antenna Input300 ohms balanced,
75 ohms unbalanced

AM SECTION

Sensitivity: MW200μV/m (IHF, ferrite antenna)
LW600μV/m (RMT-80L)

Selectivity35dB

Signal-to-Noise Ratio50dB

Image Response Ratio50dB

IF Response Ratio40dB

AntennaBuilt-in ferrite loopstick antenna

MISCELLANEOUS

Power RequirementPower supplied from the amplifier RMA-80.

- Specifications and design subject to possible modification without prior notice.

Repair Parts List

Liste des pièces de rechange

RMD-80

Schematic Location	Description	Part No.	Schematic Location	Description	Part No.
TRANSISTORS, DIODES AND IC'S					
Q101 to 104	2SC2634 (S, T), PB/MIC Amp	301201222		Bias OSC and Level Ind Driver	
Q105, 106	2SA564A (R, S), Rec Amp	301001132	PCB Ass'y	141811133	
Q107, 108, 401 402	2SC1684 (R, S), Rec Amp, Shut-off	301201209	Level Ind PCB Ass'y for L-ch	141811134	
Q901	2SC1913 (Q, R), Stabilizer	301201199	Level Ind PCB Ass'y for R-ch	141811135	
Q902	2SC2590 (R, S), Bias OSC	301201223	Connector, 13P	628111180	
D401	MA150	300111016	Socket Ass'y, LED	6482111265	
D402	2P05M, Thyristor	300515003	Connector, 6P	628111173	
D701, 702, 001	LN324GP, LED (GRN)	300414040	Holder, LED, (6)	114902322	
D703, 704, 705 002	LN224RP, LED (RED)	300414042	Holder, LED, (9-3)	114902353	
D901	WZ-210, Zener, 21V, 0.5W	300313007	Cord Stopper, Signal	675201114	
D902	RB-152, Rectifier	300919038	Cord Stopper, Power Supply	675201116	
IC101, 102	LM1011AN, Dolby NR System	303452254	Signal Cord Ass'y	791001153	
IC401	DN6839, Hall IC, Stop Sensor	303452217	Power Supply Cord w/4P Plug	791001154	
IC901, 902	LB1416, Indicator Driver	303452232	Front Panel Ass'y	1119111540	
COILS AND TRANSFORMER					
L101, 102	Low Pass Filter	228641181	Cassette Lid	114902325	
L103, 104	Bias Trap	228641182	Panel, Cassette Lid	114902353	
L105, to 108	Choke, 12mH	228641184	Bottom Cover, Cassette Mech	114902324	
L901	Choke, 560µH	228641185	Top Cover	138011315	
L902	Bias OSC Trans	228641183	Knob, Rec Level Cont, R-ch	116310326	
VARIABLE RESISTORS					
VR101, 102	100KB, PB Level Cal	510502197	Knob, Rec Level Cont, L-ch	116310328	
VR103, 104	10KB, Rec Level Cal	510502186	Bush, Top Cover	672200884	
VR105, 106	50KB, Bias Adj	510502194	Push Button Ass'y,		
VR301	50KA x 2, Rec Level Control	525101172	Tape Selector, etc.	116210083	
SWITCHES					
S101	Slide, Rec/PB	613000036	Push Button Ass'y, Dolby NR	116210090	
S201	Push 1-key, Dolby NR	614010149	Piano Key, Cassette Control	116210075	
S301	Push 4-key, Tape Selector	614040833	Spring, Tension	658601133	
S401	Reed Switch, Stop Sensor	615212262	String, Tension, L=300mm	787121130	
S501	Push 1-key, Power (Standby)	614010150	Screws:		
OTHERS					
J101, 102	MIC Jack	626110036	M3 x 6 (Ni), Bind	705213006	
	Cassette Mech Ass'y	900111035	M2.6 x 4 (Ni), Bind	705212604	
	Rec/PB Amp PCB Ass'y	141811127	M3 x 10 (Ni), Bind	705213010	
	Tape Selector & Dolby NR SW		M3 x 8 (BLZ), Bind	705223008	
	PCB Ass'y (incl. X-377 Ass'y)		M3 x 6 (Ni), Oval-countersunk	702213006	
	X-380 Ass'y & X-382 Ass'y)	141811105	3 x 6 (Ni), TP, Oval-countersunk	722213006	
	Auto Shut-off PCB Ass'y	141811122	3 x 8 (Ni), TP	726213008	
			3 x 8 (Ni), Tap-tight	765213008	
			3 x 8 (BLZ), TP	726223008	
			3 x 12 (Ni), TP	726213012	
			3 x 8 (Ni), TP, Oval-countersunk	722213008	
			M3 x 9 (Ni), Pulley Mtg	770911130	
			M3 x 17, Ornamental Cassette		
			Lid	770911280	
			Stopper, MIC Jack	770911278	
			Nut, M3, Square	770911144	
			Nut, M3, Hex	770402201	
			Nut, M9, Hex	770402207	
			Washer, Plain, M3	770500003	
			Washer, Spring, M3	770500010	
			Collar, Indication, Tr. Mtg	992001111	

Parts listed in the disassembly diagram are excluded.

RMA-80

Schematic Location	Description	Part No.	Schematic Location	Description	Part No.
DIODES AND IC'S					
D601	RB-152, Rectifier	300919038		Phono Amp Circuit PCB Ass'y	141510180
D602, 603	SR1K-4, Rectifier	300919024		Tone Amp and Power Supply PCB Ass'y w/Volume Control PCB Ass'y	141710335
D604, 605	BZ-192, Zener, 19.2V, 1W	300313022		Power Amplifier PCB Ass'y	141610347
D606, 607	WZ-140, Zener, 14V, 0.5W	300313018		Level Indicator PCB Ass'y	141811142
D701	WZ-063, Zener, 6.2V, 0.5W	300313038		Level Ind Driver PCB Ass'y	141811143
D801	BZ-090, Zener, 9V, 1W	300313042		Fuse PCB Ass'y, 120V Area	141811144
D802, 803	1K188	300111008		Fuse PCB Ass'y, Europe, UK	141811145
D901 to 906	LN224RP, LED, Level Ind	300414042		Push Terminal, 4P, Speaker	642400115
IC401, 402	HA1457W-02, Phono Amp	303452192		Fuse Holder, 2P, Long	648211157
IC501	NJM4558DD, Tone Amp	303452152		Fuse Holder, 2P, Midget	648211162
IC701	SI-1125HD, Power Amp	303452185		Socket, 4P, Power Supply	648211212
IC801	LB1416, Level Ind Driver	303452232		Pin Jack, 4P, Inputs	624200204
COILS AND TRANSFORMERS					
L701, 702	Anti-parasitic Coil	228641105		Phone Jack	626110036
T001	Power Transformer			Holder, LED, (6)	114902332
	T-132G (Toroidal Type), 120V Area, S. Africa	207001510		Connector, 8P, Type S	628111175
	T-132E (Toroidal Type), Europe, UK	206001510		Fuse Holder, 2P, Long, PCB Mounting	648211259
	T-143E (2L-Type), Europe, UK	206001519		Fuse Holder, 1P, Long, PCB Mounting	648211260
VARIABLE RESISTORS					
VR501	250KW, Balance Control	515121130		Fuse Holder, 2P, Midget, PCB Mounting	648211266
VR502	100KBT x 2, Volume Control	525121149		Fuse Holder, 1P, Midget, PCB Mounting	648211267
VR503, 504	100KC x 2, Bass, Treble Controls	525101166		Voltage Selector*	648211247
SWITCHES					
S1, 2, 3 (1 set)	Push, 4-key, Function, Loudest, etc.	614040835		Power Supply Cord, (U.S.A., etc.)	796301115
S4	Push, 1-key, Power, 120V Area	614010139		Power Supply Cord, (UK, S.A.)	796301138
	" Europe, UK	614010138		Power Supply Cord, (Australia)	796301140
OTHERS					
C001	Noise Canceller for 120V Area	470101118		Power Supply Cord, (Europe)	796301148
	Noise Canceller for Europe, UK	470101122		Cord Stopper, (not for UK, S.A.)	675201114
F301	2.5A (120V Area)	341222250		Cord Stopper, (for UK, S.A.)	675201116
	T1.25A (Europe, UK)	345952125		Foot	673402021
F302, 303	3.5A (120V Area)	341222350		Front Panel Ass'y	111911546
	T3.15A (Europe, UK)	345952315		Top Cover	138011317
F304	1A (120V Area)	341222100		Knob, Balance, etc.	116310304
	T1.25A (Europe, UK)	345952125		Knob, Volume Control	116310332
F305	0.5A (120V Area)	341222050		Push Button, Function, etc.	116210083
	T500mA (Europe, UK)	345952050		Push Button, Loudness	116210090
F001, 002	3A (120V Area)	341222300		Screws:	
	3.15A (Europe, UK)	345252315		M3 x 6 (Ni), Oval-countersunk, Push SW Mtg, etc.	702213006
				M4 x 8 (Ni), ⊖ Bind, GND	705014008
				M3 x 8 (BLZ), Bind, Fuse Cover Mtg	705223008
				M3 x 6 (Ni), Bind, PCB Mtg, etc.	705213006
				M3 x 15 (Ni), Bind, Power IC Mtg	705213015
				M3 x 4 (Ni), Bind, Fuse PCB Mtg	705213004
				3 x 8 (Ni), TP	726213008
				3 x 8 (BLZ), Top Cover Mtg, etc.	726223008
				3 x 12 (Ni), TP, Foot Mtg	726213012
				4 x 8 (Ni), TP, Bind, Trans Mtg	725214008
				3 x 6 (Ni), TP, Countersunk, Panel Mtg	721213006
				Insert Screw, Fuse Mtg	770911133
				Nut, M7, Hex	770402205
				Washer, M7	770500006
				Washer, M4	770500004
				Stopper, Jack Mtg	770911278

*Not used for Europe and UK.

RMT-80/-80L


Schematic Location	Description	Part No.	Schematic Location	Description	Part No.
TRANSISTORS, DIODES AND IC'S					
Q101	2SK168 (F), FMRF Amp	302001122	PL001	Lamp, 8V, 150mA, Dial Light	359101127
Q102, 103	2SC1674 (K, L), FM OSC, Mix	301201163		PCB Ass'y for RMT-80 (STD)	141311401
Q104, 201, 202 203, 251*	{ 2SC829 (C), FM IF Amp, AM Conv, etc.	301201117		" for RMT-80 (S. Africa)	141311403
Q105, 106, 107	2SC1684 (R, S), FM MPX, etc.	301201209		" for RMT-80L	141311404
Q108, 109, 204 205	{ 2SC2634 (S, T), FM Audio Amp, AM Audio Amp, etc.	301201222	X101, 102	Variable Capacitor, AM/FM	322420019
Q171	2SA921 (S, T), FM Tuning Ind Driver	301001145	X201	Ceramic Filter, FM IF, 10.7MHz	229101171
Q401	2SC1826 (O, Y), Stabilizer	301201169		Ceramic Filter, AM IF, 455kHz	229101205
D101, 102, 103 201, 204, 205	{ 1K188, FM AGC, AM Det, etc.	300111008		Connector Socket, 8P	628111175
D171, 172, 202 203, 251*	{ MA150	300111016		LED Holder, 6P	114902322
D301, 302, 304	LN224RP, LED (Red), FM Stereo Ind, etc.	300414042		Antenna Terminal Strip, 4P	649201115
D303	LN324GP, LED (GRN), Tuning Ind	300414040		Coaxial FM Ant Socket*	628111166
D401	WZ-162, Zener, 16.2V, 0.5W	300313017		Signal Cord Ass'y	791001153
IC101	HA1137W, FM Det	303452156		Power Supply Cord Ass'y	791001154
IC102	AN363N, FM MPX Dec	303452197		Rubber Bush, Lamp Mtg	672200813
IC171	NJM4558D, Indicator Driver	303452215		Cord Stopper, Signal Cord Mtg	675201114
COILS					
L101	FM Ant	226501153		Cord Stopper, Power Cord Mtg	675201116
L102	FM OSC, (STD)	226501160		Bush, Top Cover	672200884
	FM OSC, (South Africa only)	226501162		Foot	673402021
L103	FM RF	226501154		Shaft Ass'y, Tuning	654911299
L104	Choke, 2.2μH	226501143		Dial Drum	651300013
L105	FM IFT	225501131		Pulley	65110022
L107	Choke, 18μH, Phase Shifter	226501152		String, Dial, L=1.4m	787121131
L108, 205, 401	Choke, 47μH	226501123		Spring, Dial String	658601121
L109	FM IFT, Det	225501132		Front Panel Ass'y for RMT-80	111911542
L201	MW OSC	223301124		Front Panel Ass'y for RMT-80L	111911544
L202	AM IFT, 1st	225301125		Top Cover	138011316
L203	AM IFT, 2nd	225301126		Dial Pointer	151691150
L204	AM IFT, 3rd	225301127		Dial Board, for RMT-80 (STD)	112011387
L251*	Bandpass Filter	228641120		" , for RMT-80 (S. Africa only)	112011390
L252*	LW OSC	223301129		" , for RMT-80L	112011388
L001	AM Antenna, for RMT-80 only	222391150		Knob, Tuning	116310330
	AM Antenna, for RMT-80L only	222391149		Push Button Ass'y, Power, etc.	116210083
VARIABLE RESISTORS					
VR101	5KB, MPX 19kHz Adj	510502140		" , Muting	116210090
VR102	50KB, Stereo Separation Adj	510502142		Screws:	
VR171, 172	10KB, FM Tuning Ind Adj	510502186		M3 x 6 (Ni), Oval-countersunk, Power SW Mtg	702213006
OTHERS					
CT102	10pF max, Trimmer, FM OSC Adj	490110124		M2.6 x 4 (BLZ)*, Pan Head, Coaxial Socket	
CT251*, 252*	15pF max x 2, Trimmer, LW OSC, LW RF Adj	490110113		Mtg	703222604
S1, 2, 3 (1 set)	Push 3-key, Function and FM Muting/Mode, for RMT-80	614030840		M2.6 x 8 (BLZ), Bind Head, Dial Board Mtg	705222608
	" for RMT-80L	614030841		3 x 8 (Ni), TP, PCB Mtg, etc.	726213008
S4	Push 1-key, Standby	614010150		3 x 12 (Ni), TP, Foot Mtg	726213012
				3 x 8 (BLZ), TP, Ant Terminal Mtg, etc.	726223008
				3 x 6 (Ni), TP, Oval-countersunk	722213006
				3 x 6 (Ni), TP, Countersunk, Front Panel Mtg	721213006
				M3 x 9 (Ni), Pulley Mtg	770911130
				M3 x 13 (Ni), W-pulley Mtg	770911131
				Nut, M9, Hex, T-Shaft Mtg	770402207

* Used for RMT-80L only.

Chassis Layout (Top View)

Installation du châssis (vue de dessus)


RMD-80

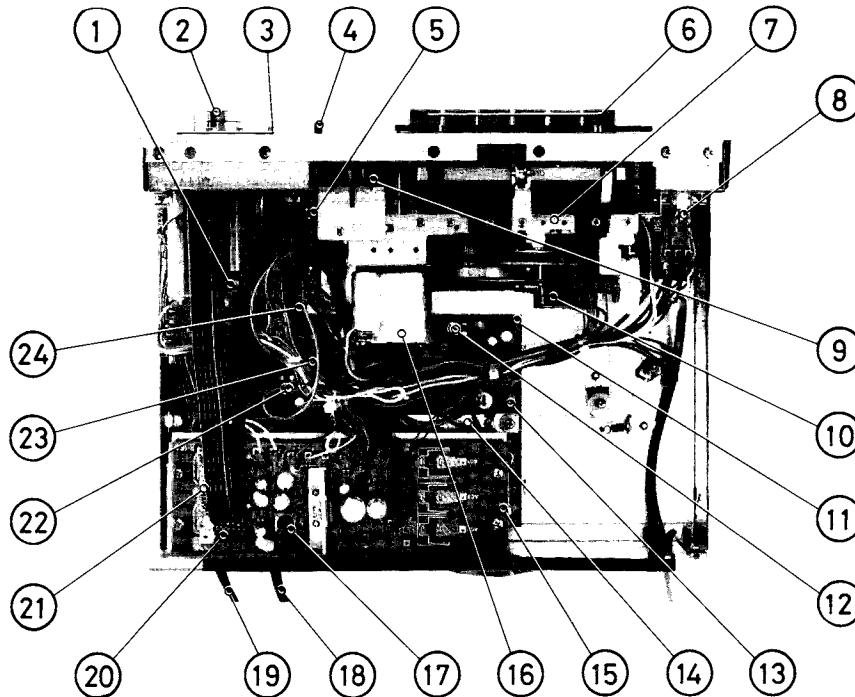

- 1. TAPE SELECTOR PCB (X-375)
- 2. RECORDING LEVEL CONTROL
- 3. TAPE SELECTOR
- 4. COUNTER RESET BUTTON
- 5. AUTO SHUT-OFF PCB (X-386 or X-413)
- 6. MECHANISM CONTROL KEYS
- 7. CASSETTE MECH
- 8. STANDBY SWITCH
- 9. TAPE COUNTER
- 10. PLUNGER SOLENOID
- 11. REC/PB AMP PCB (X-374)
- 12. VR102, PB LEVEL CAL, R-CH
- 13. VR106, BIAS ADJ, R-CH
- 14. S101, REC/PB SWITCH
- 15. RECT/BIAS OSC/LEVEL IND DRIVER PCB (B-154)
- 16. MOTOR
- 17. BIAS OSC TRANS
- 18. LINE OUT CORD
- 19. LINE IN CORD
- 20. LEVEL IND DRIVER IC, R-CH
- 21. LEVEL IND DRIVER IC, L-CH
- 22. VR103, REC LEVEL CAL, L-CH
- 23. VR104, REC LEVEL CAL, R-CH
- 24. DOLBY* NR SWITCH PCB (X-376)

*Dolby and Dolbized are trademarks of Dolby Laboratories.
Noise reduction system manufactured under license from Dolby Laboratories.


RMA-80

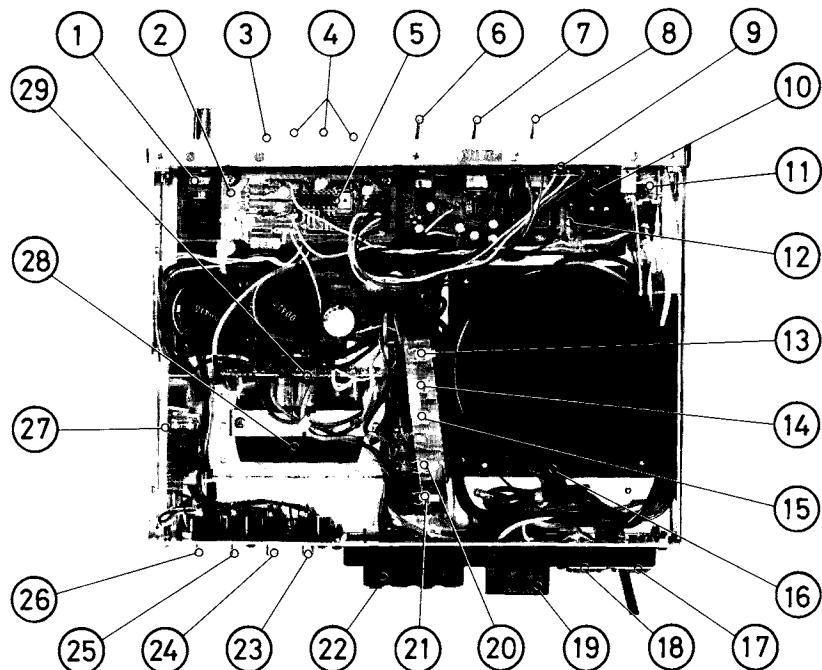

- 1. VOLUME CONTROL
- 2. LEVEL IND DRIVER PCB (X-391)
- 3. LOUDNESS SWITCH
- 4. FUNCTION SWITCH
- 5. IND DRIVER IC
- 6. BALANCE CONTROL
- 7. TREBLE CONTROL
- 8. BASS CONTROL
- 9. LEVEL INDICATOR PCB
- 10. PHONE JACK
- 11. POWER SWITCH
- 12. TONE AMP & POWER SUPPLY PCB (TC-157)
- 13. F305, FUSE
- 14. F304, FUSE
- 15. F303, FUSE
- 16. POWER TRANSFORMER*
- 17. POWER SUPPLY SOCKET
- 18. POWER SUPPLY SOCKET
- 19. SPEAKER FUSE
- 20. F302, FUSE
- 21. F301, FUSE
- 22. SPEAKER TERMINAL
- 23. TAPE OUT JACKS
- 24. TAPE IN JACKS
- 25. TUNER JACKS
- 26. PHONO JACKS
- 27. PHONO AMP PCB (PR-121)
- 28. POWER AMP IC
- 29. POWER AMP PCB (AF-117)

* The photo shows toroidal type.
Units incorporating 2L (square) type are also supplied.

RMT-80/-80L

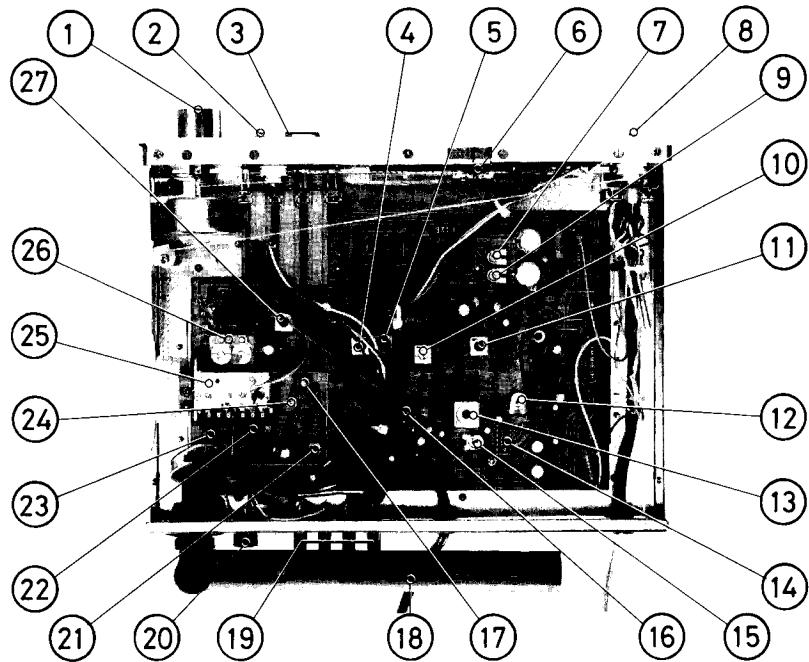

1. TUNING KNOB
2. MUTING/MODE SWITCH
3. FUNCTION SWITCH
4. L201, MW OSC COIL
5. L202, AM IFT, 1st
6. DIAL POINTER
7. VR171, FM TUNING IND ADJ
8. STANDBY SWITCH
9. VR172, FM TUNING IND ADJ
10. L203, AM IFT, 2nd
11. L204, AM IFT, DET
12. VR102, FM STEREO SEPARATION ADJ
13. L109, FM IFT, DET
14. IC102, MPX DEC
15. VR101, 19kHz ADJ
16. IC101, FM IF AMP
17. L102, FM OSC COIL
18. L001, AM ANT COIL
19. ANTENNA TERMINAL STRIP
20. FM 75-OHM ANTENNA SOCKET*
21. L105, FM IFT, 1st
22. L103, FM RF COIL
23. L101, FM ANT COIL
24. CT102, FM OSC TRIMMER CAP
25. VARIABLE CAPACITOR, AM/FM
26. CT251, 252, LW ANT/OSC TRIMMER CAP*
27. L251, LW OSC COIL*


*Used for 3-band model (RMT-80L) only.

Note: The photo shows Model RMT-80L. Model RMT-80 is slightly different from the photo.


Schematic Diagram

Diagramme schématique


RMD-80

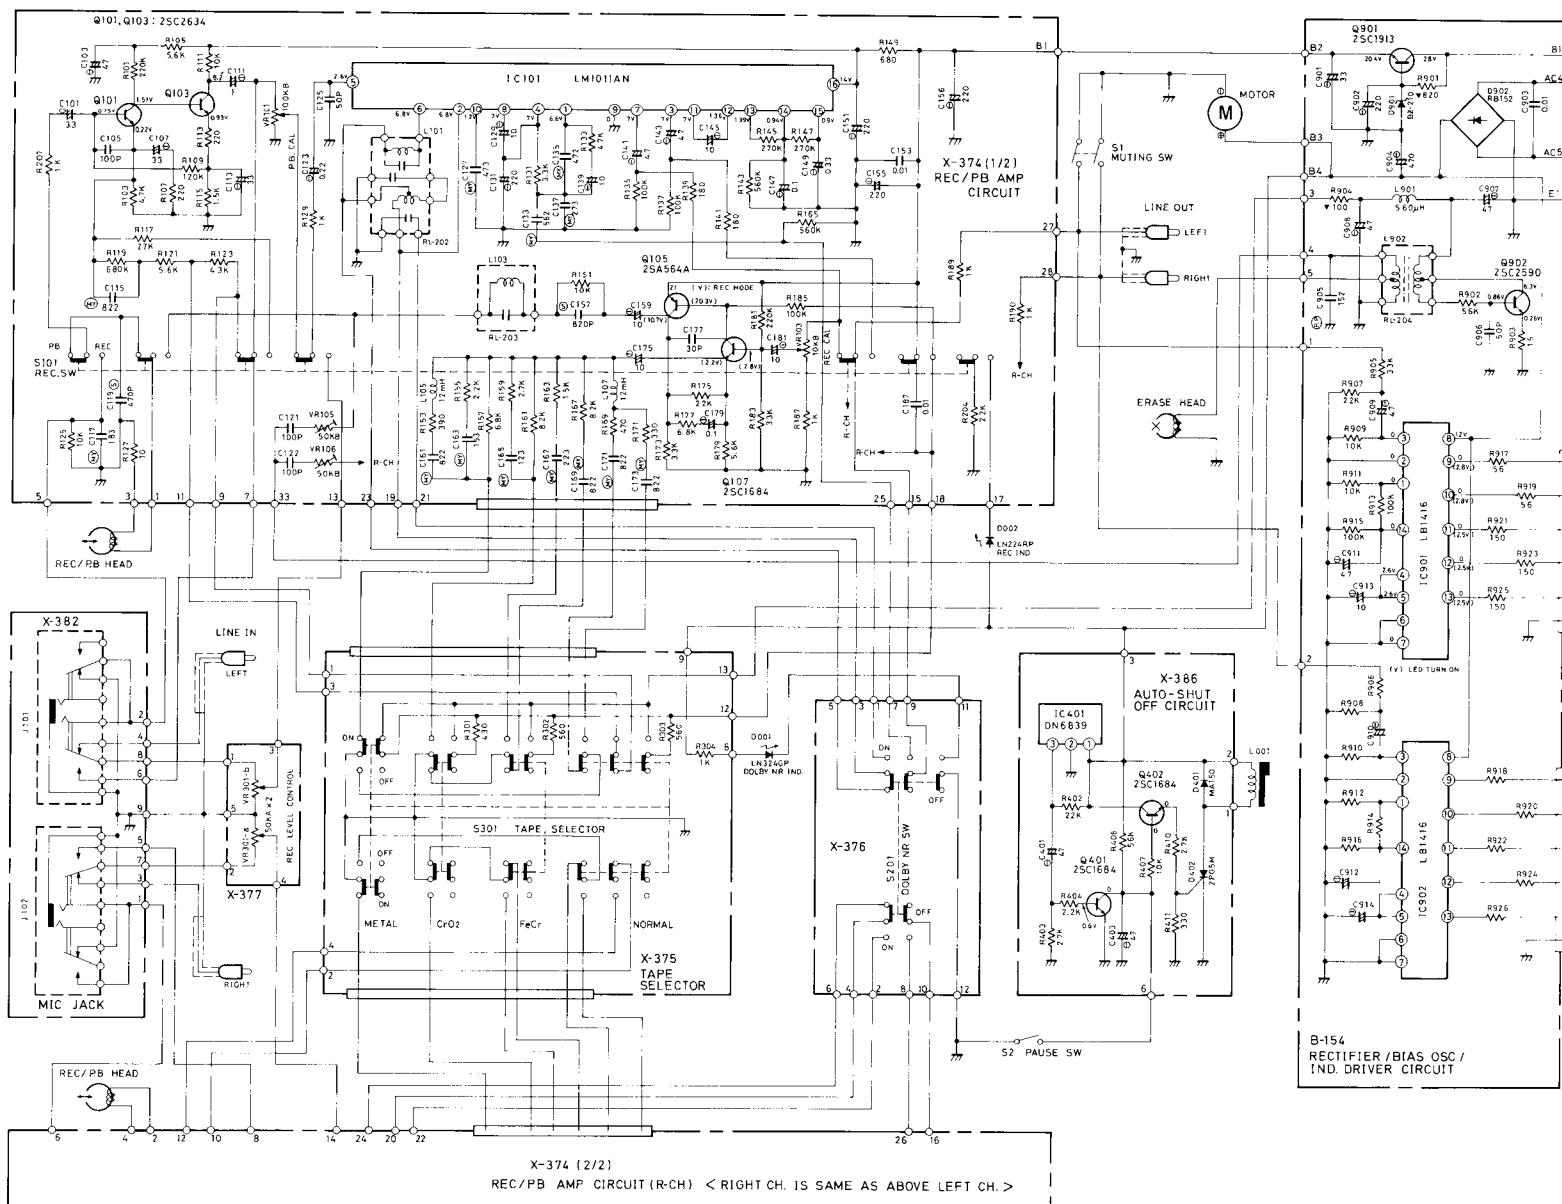


MODEL RMD-80 1980.11.14 YORIKO TE-2-A




2SC1684
2SC2634
2SA564A




2SC1913

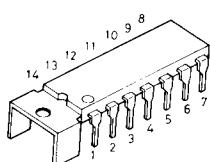

2SC2590

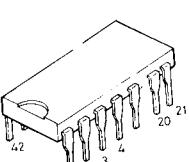

LB1416



LM1011AN

**IN 1 2 3
GND
OUT**

DN6839

RESISTORS

Unless otherwise specified, tolerance is 5%.

K Kilohm

M Megohm

▼ Uninflammable carbon film resistor, 1/2 watt

Non mark . . . Low noise type carbon resistor, 1/4 watt

- Unless otherwise specified, all capacitance values are expressed in MFD.

- Voltage read with VTVM across the point shown and the chassis ground (line voltage: 120V)

- Voltage reading tolerance: ±20%

CAPACITORS

S Polystyrene film capacitor

MY Mylar film capacitor


LN Low noise type capacitor

PP Polypropylene film capacitor

H Electrolytic capacitor

Non mark . . . Ceramic capacitor

RMA-80

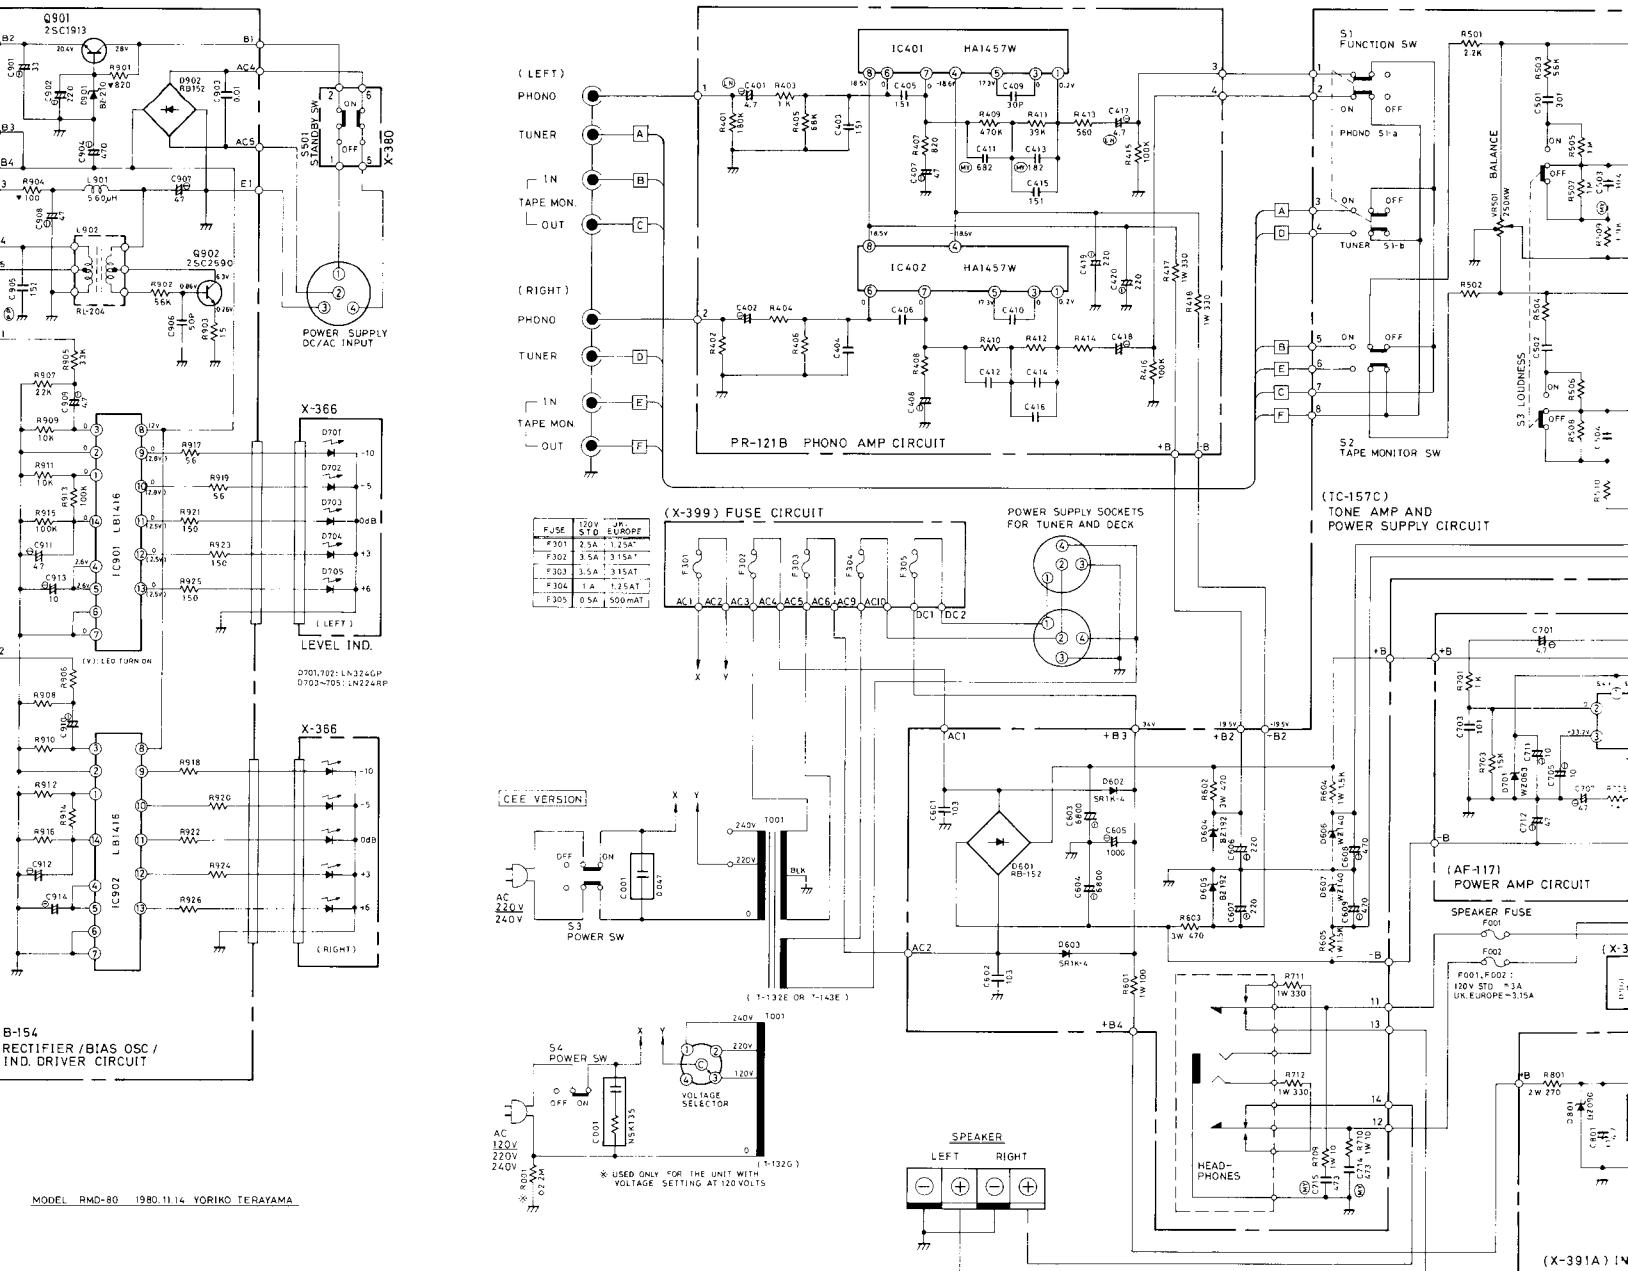

MODIFICATION:

Capacitors C709 and C710 on Power Amp Circuit have been modified from 100mfd type to 220mfd. (Reason: To prevent possible breakdown of Power IC due to shocks when power is turned on or Function Selector is switched.) This modification is applicable to the units with serial number beginning ND 65868.

The related circuit diagrams in this manual are drawn on the basis of new circuitry.

RESISTORS

Unless otherwise specified, tolerance is 5%.

K Kilohm

M Megohm

◇ Composition carbon resistor, 1/2 watts

Non mark . . . Low noise type carbon resistor, 1/4 watts

CAPACITORS

MY Mylar film capacitor

LN Low noise type capacitor

-P Electrolytic capacitor




Non mark . . . Ceramic capacitor

- Unless otherwise specified, all capacitance values are expressed in MFD.


- Voltage read with VTVM across the point shown and the chassis ground (line voltage: 120V)

- Voltage reading tolerance: ±20%


RMT-80/-80L

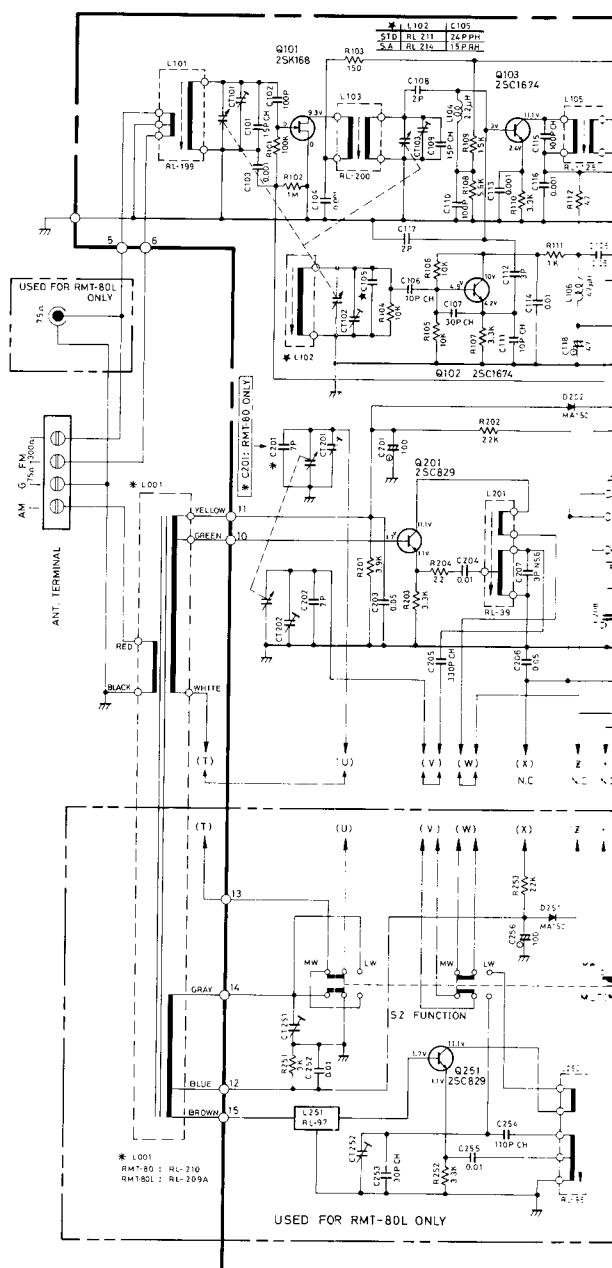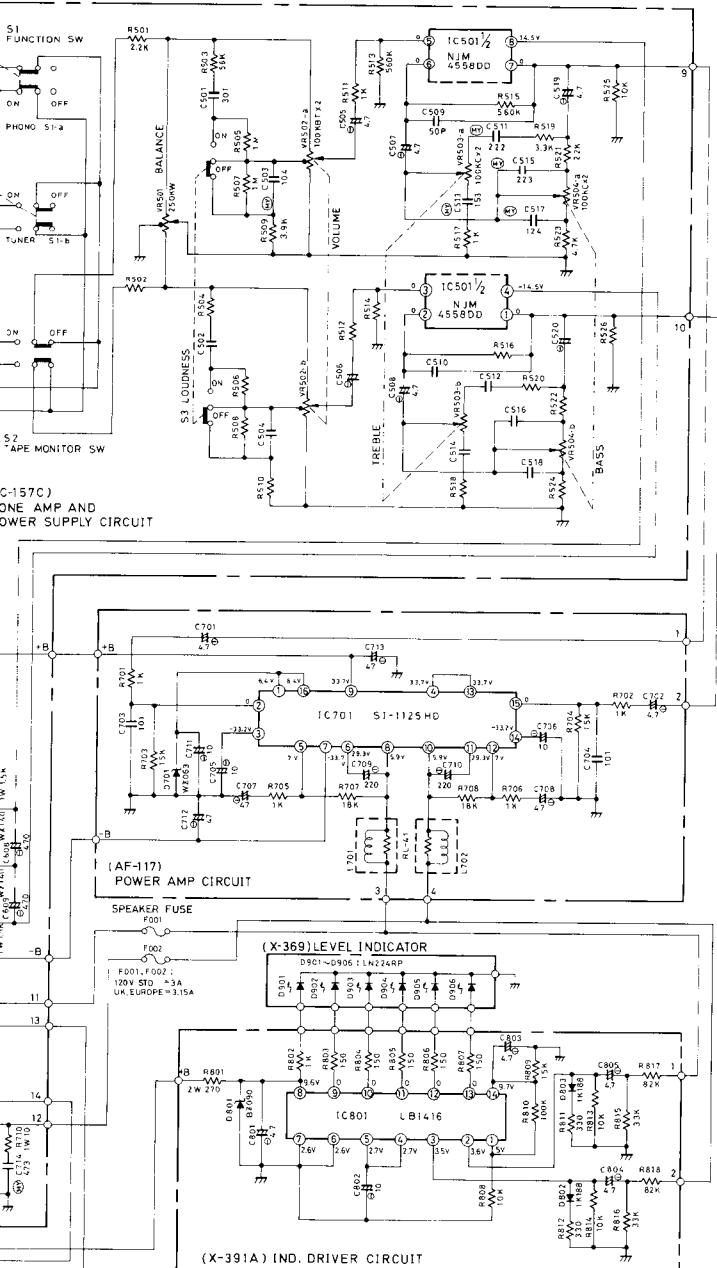


NJM4558DD

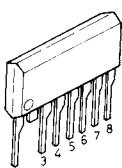

HA1457W

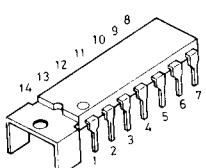

LB1416

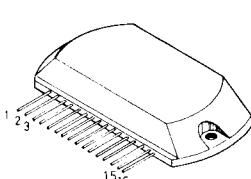

SI-1125HD

capacitor
type capacitor
tic capacitor
capacitor

fied, all capacitance values are

VM across the point shown and
e voltage: 120V
nce: ±20%


RESISTORS

Unless otherwise specified, tolerance
K Kilohm
M Megohm
▼ Uninflammable carbon
Non mark . . . Low noise type carbon

CAPACITORS

S Polystyrene film capacitor
MY Mylar film capacitor
- Electrolytic capacitor
Non mark . . . Ceramic capacitor

- Unless otherwise specified, all capacitors expressed in MFD.
- Voltage read with VTVM across the chassis ground (line voltage: 120V)
- Voltage reading tolerance: ±20%

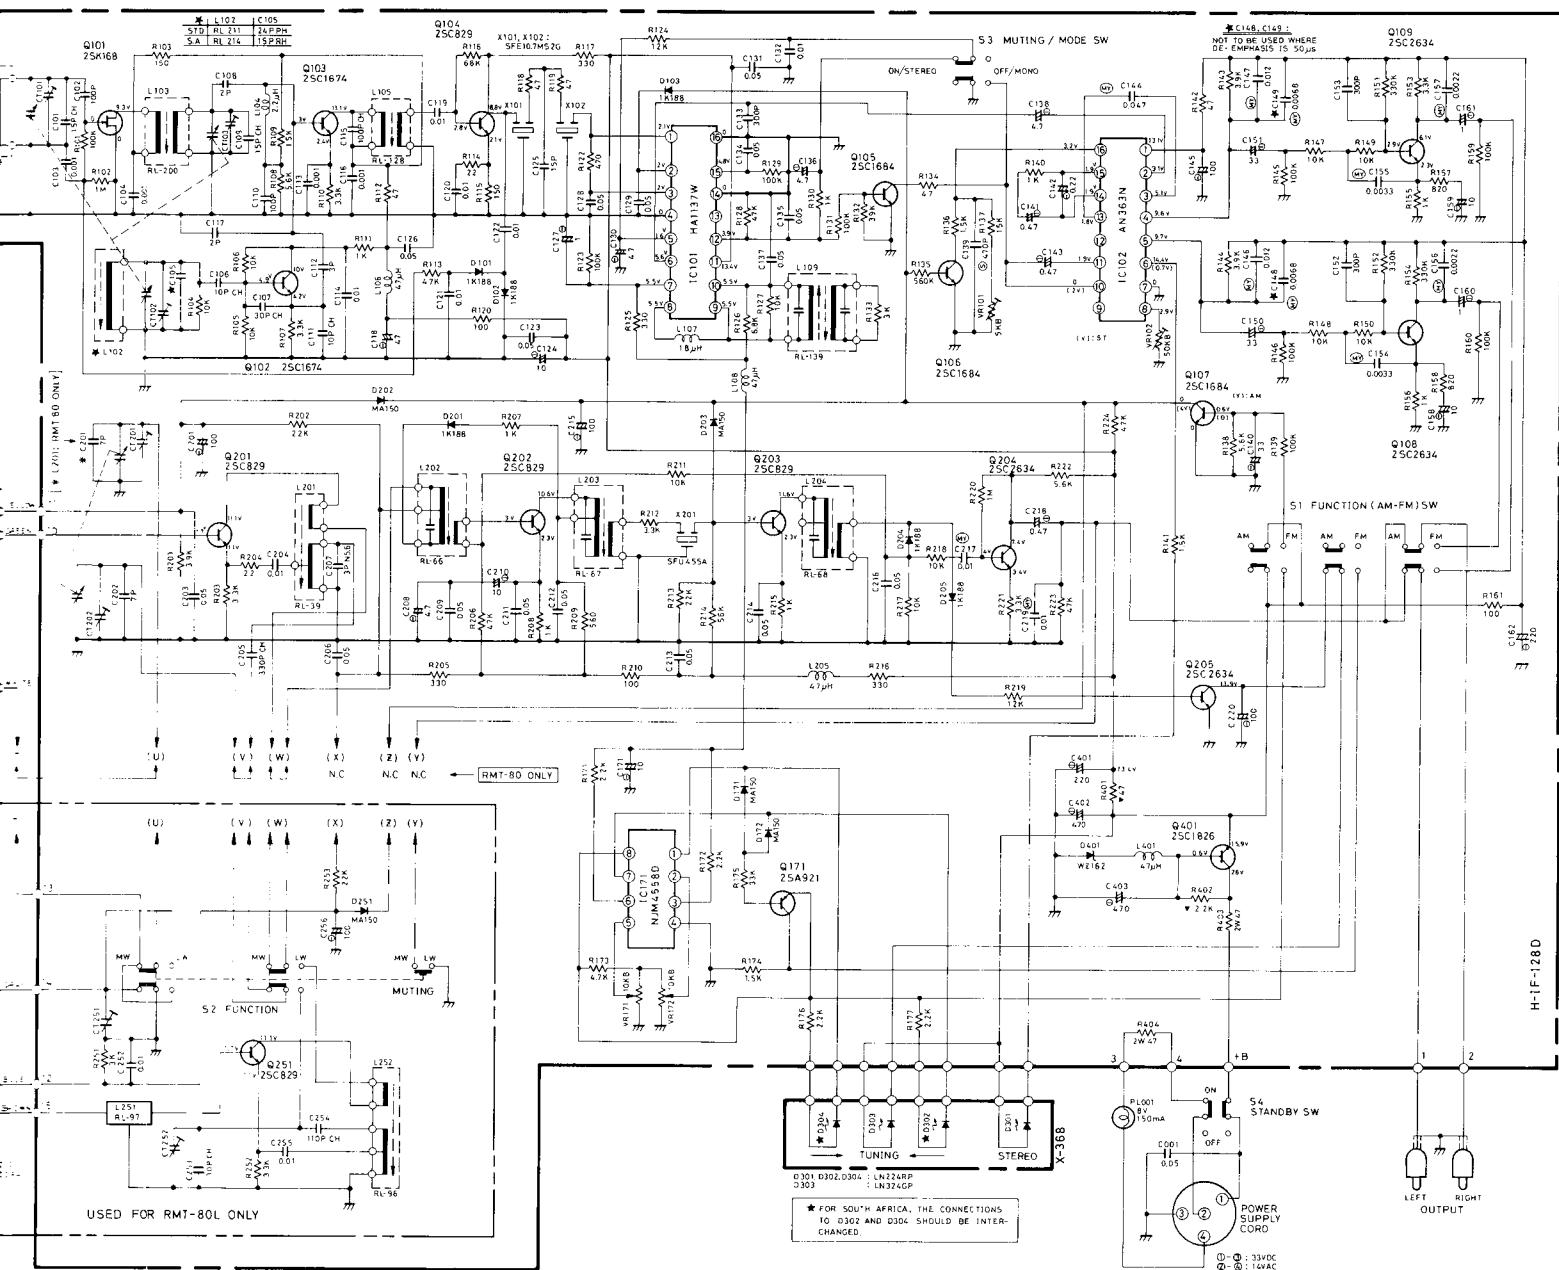**RESISTORS**

Unless otherwise specified, tolerance is 5%.

K Kilohm

M Megohm

▼ Uninflammable carbon film resistor, 1/2 watt

Non mark . . . Low noise type carbon resistor, 1/4 watt

CAPACITORS

S Polystyrene film capacitor

MY Mylar film capacitor



■ Electrolytic capacitor

Non mark . . . Ceramic capacitor

- Unless otherwise specified, all capacitance values are expressed in MFD.

- Voltage read with VTVM across the point shown and the chassis ground (line voltage: 120V)

- Voltage reading tolerance: ±20%

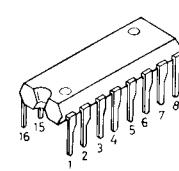


2SC829 **2SC1826**
2SA921
2SC1674
2SC1684
2SC2634
2SA564A

AN363N
HA1137W



RMD-80

REC/PB AMP CIRCUIT CIRCUIT D'AMPLI ENREGIST/LECTURE

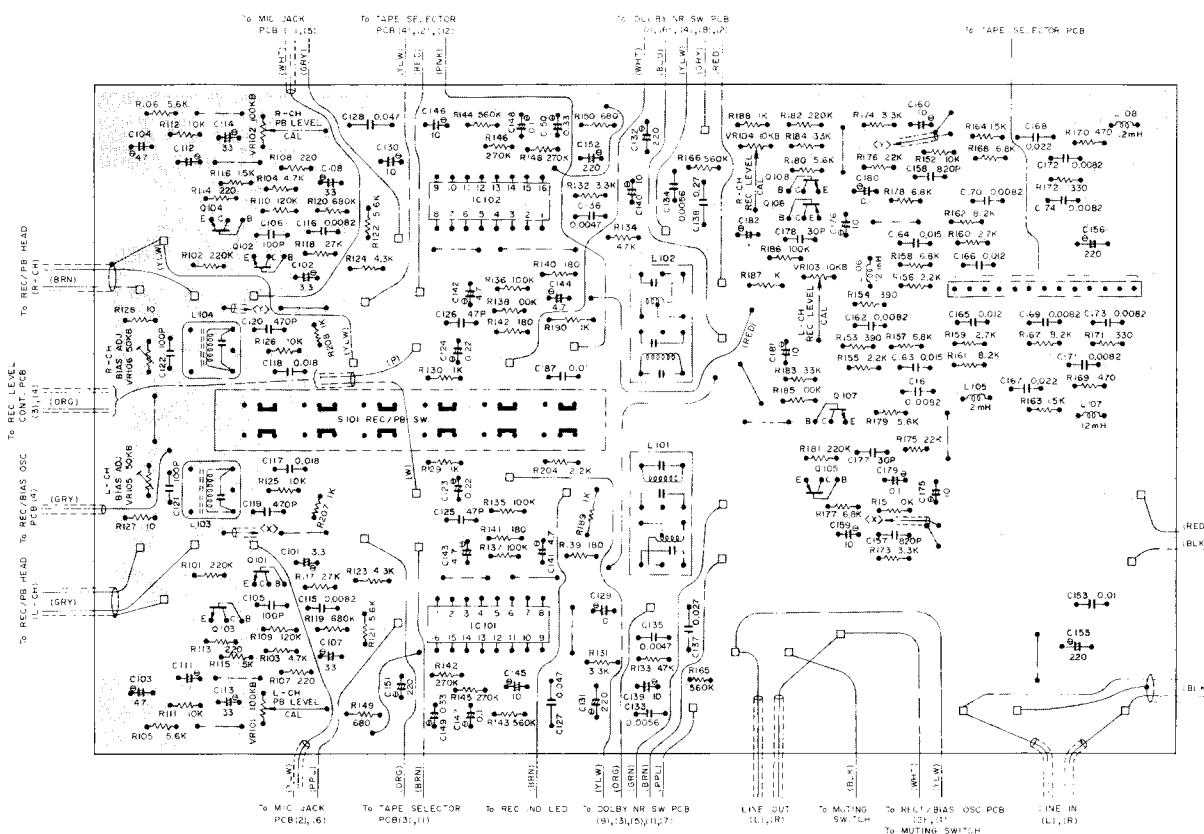


TAPE SELECTOR CIRCUIT CIRCUIT DE SÉLECTEUR DE LA BOUCLE


RECTIFIER AND INDICATOR DRIVER CIRCUIT CIRCUIT DE REDRESSEUR ET D'ATTAQUE DE L'INDICATEUR

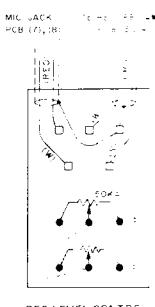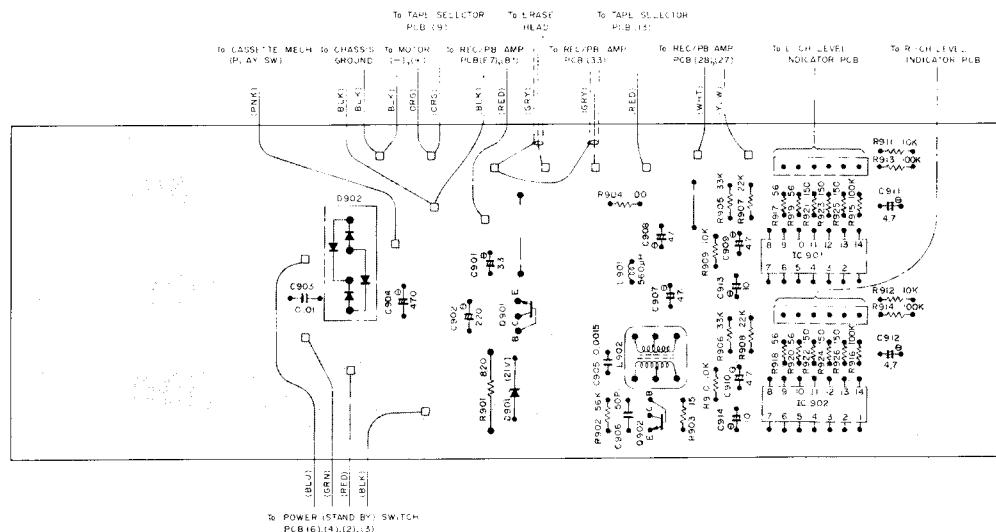


AUTO SHUT-OFF CIRCUIT CIRCUIT D'ARRET AUTOMATIQUE

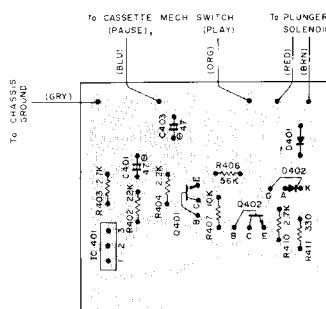

MODIFIED CIRCUIT PATTERN

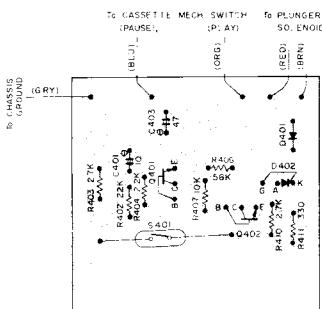



LEVEL INDICATOR CIRCUIT CIRCUIT DE L'INDICATEUR DE NIVEAU

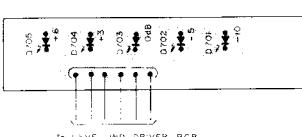



RMA-80

TAPE SELECTOR AND DOLBY NR CIRCUIT CIRCUIT DE SELECTEUR DE BAND ET DOLBY NR


TONE AMPLIFIER AND POWER SUPPLY CIRCUIT CIRCUIT D'AMPLI DE TONALITE ET D'ALIMENTATION

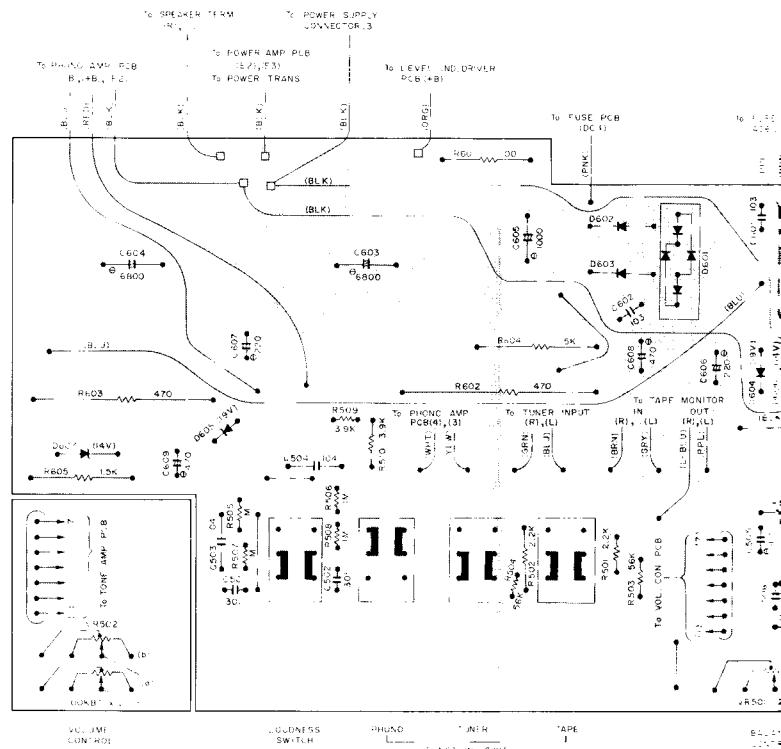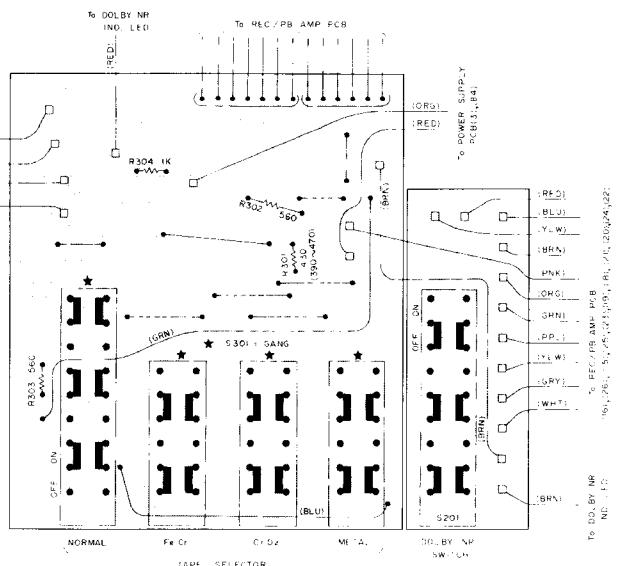

PHONO AMPLIFIER CIRCUIT CIRCUIT D'AMPLI PHONOGRAPHIQUE

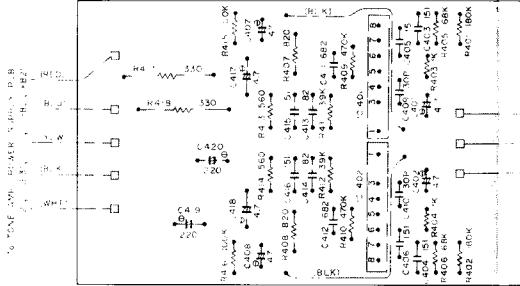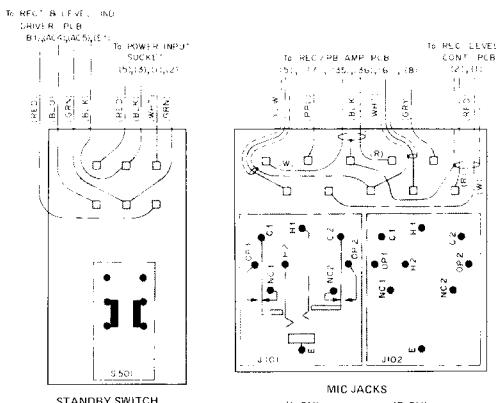


POWER AMPLIFIER CIRCUIT CIRCUIT D'AMPLI PRINCIPALE

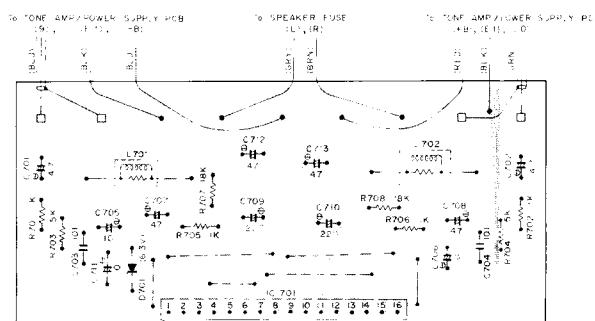


TUNER CIRCUIT CIRCUIT TUNER


CIRCUIT
MENTATION

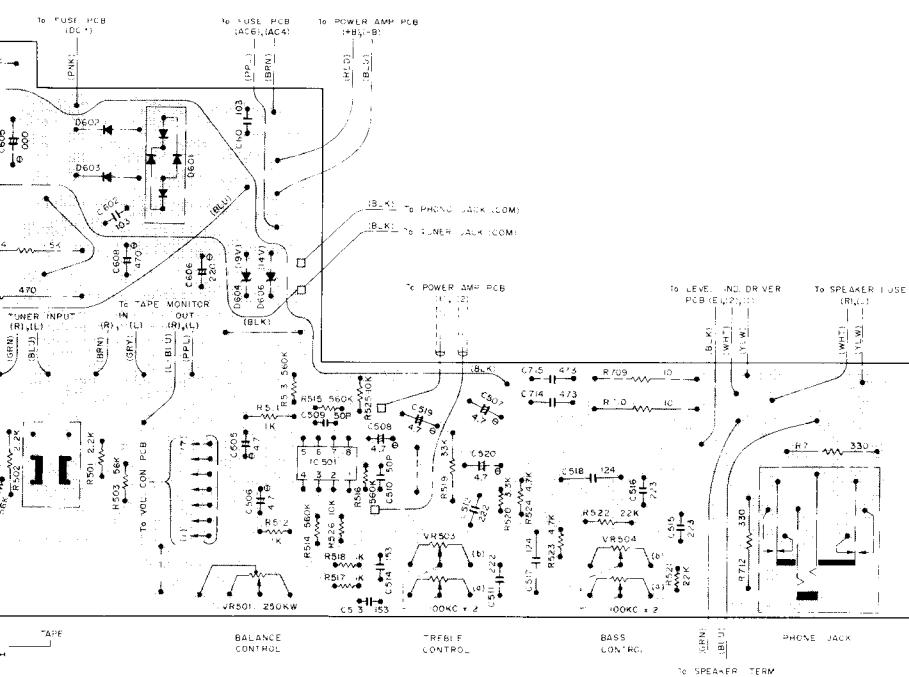

LEVEL INDICATOR DRIVER CIRCUIT CIRCUIT D'ATTAQUE DE L'INDICATEUR DE NIVEAU

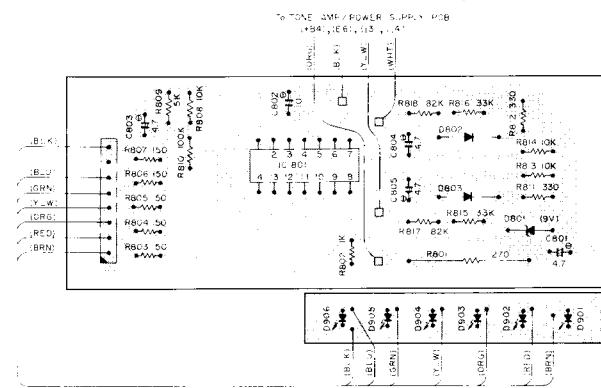


FUSE CIRCUIT CIRCUIT DE FUSIBLE

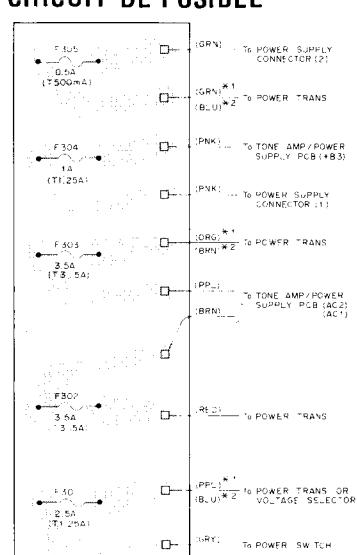

*1: Indicates lead color for 2L type transformer.

*2: Indicates lead color for toroidal type transformer.

Note: Values in parentheses are for 220V/240V area (Europe, UK, etc.)

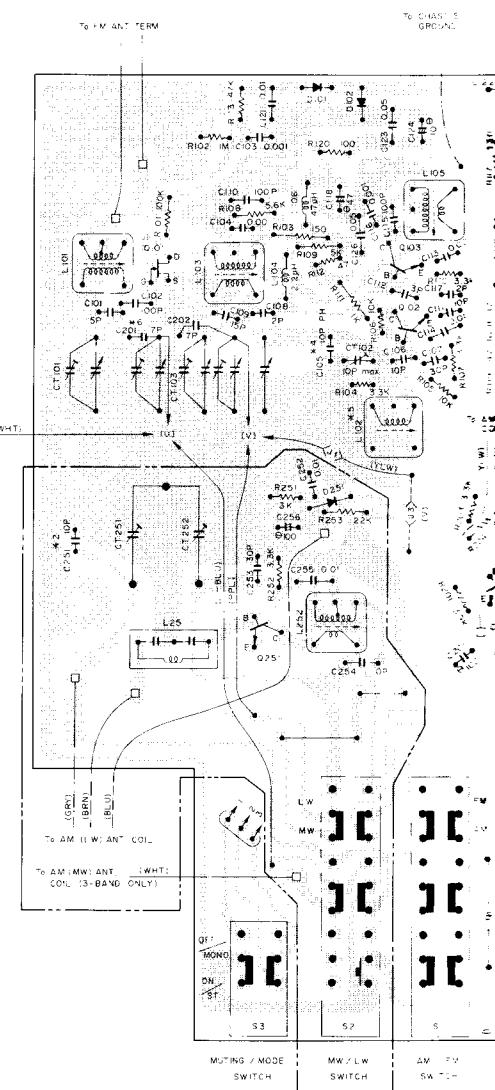

[] applicable to RMT-80L only.

J1 and J2 are for Model RMT-80 only.

J3, J4, J5, J6, J7, and J8 are for Model RMT-80L.

*1: C148 and C149 are not used in the case of 50 Hz.

*2: For RMT-80L only.

Not used when RL-209A is used for AM Ant when RL-209 is used.

*3: For South African Specs, connections are diff

Pin 1 → (ORG) Pin 2 → (YLW) Pin 3 → (BLU)

*4: For South African Specs, 15pF RH is used for

*5: FM OSC coil L102 –


STD: RL211

South Africa: RL-214

*6: Not used for RMT-80L

RMT-80/80L

TUNER CIRCUIT CIRCUIT TUNER

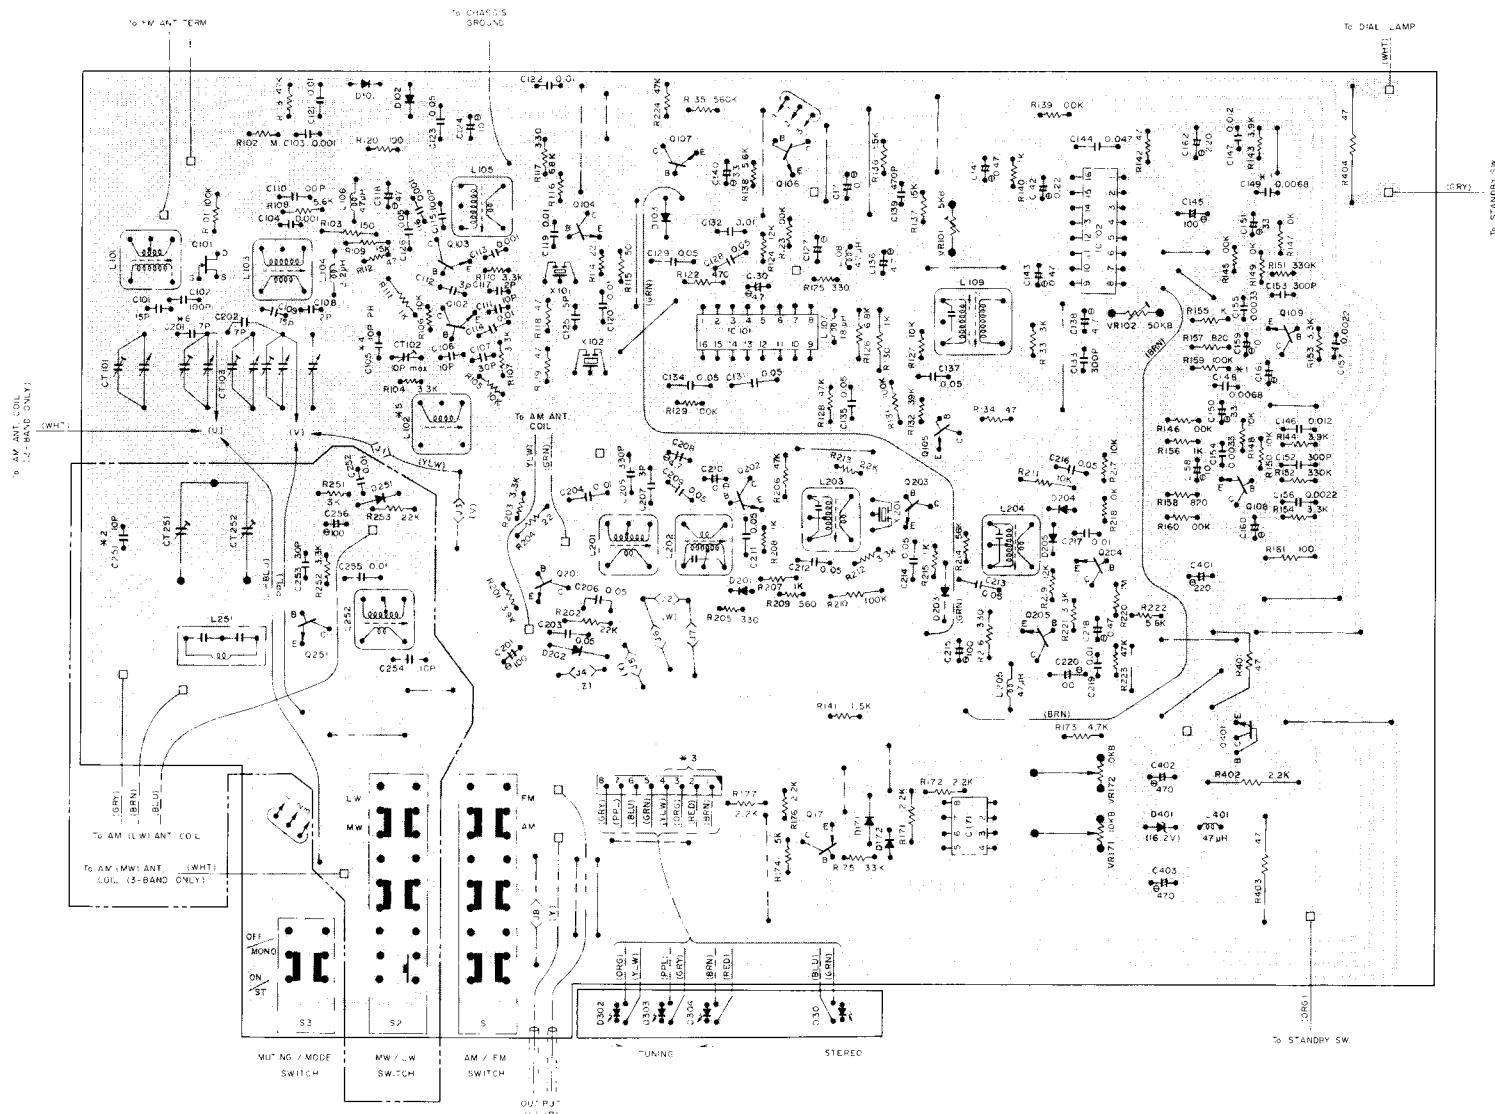

[] applicable to RMT-80L only.

J1 and J2 are for Model RMT-80 only.

J3, J4, J5, J6, J7, and J8 are for Model RMT-80L only.

*1: C148 and C149 are not used in the case of 50μs de-emphasis.

*2: For RMT-80L only.

Not used when RL-209A is used for AM Ant Coil L001, but used when RL-209 is used.

*3: For South African Specs, connections are different from the diagrams:

Pin 1 → (ORG) Pin 2 → (YLW) Pin 3 → (BRN) Pin 4 → (RED)

*4: For South African Specs, 15pF RH is used for C105.

*5: FM OSC coil L102 —

STD: RL211

South Africa: RL-214

*6: Not used for RMT-80L