
The Harman Kardon Model TL8600

Manual 170A

COMPACT DISC CHANGER

Technical Manual

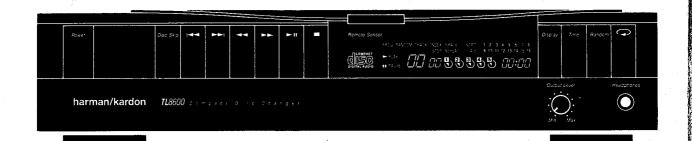

The following marks found in the parts list of this manual identify the models as follows.

: North America area model Black version

: Asia / Oceania model Black version

CLASS 1 LASER PRODUCT

Product complies with DHHS rules CFR subchapter J part 1040: 10 at date of manufacture.

DANGER-invisible laser radiation when opened and interlock failed or defeated. Avoid direct exposure to beam.

CAUTION-use of all controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

> CLASS 1 LASER PRODUCT

Care of the Laser Pickup.

The laser pickup that detects the music recorded on a CD is located under the compact disc carousel. The laser pickup, especially its precision lens, is particularly sensitive to dust. Keep the top cover closed when the unit is not in use.

ADVARSEL:

åbning når Usynlig Laserstråling ved sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laite sisältää laserdiodin, joka lähettää näkymätöntä silmille vaarallista lasersäteilyä.

SPECIFICATION

Line Output Level

: 2.0V/10kΩ

Frequency Response

: 4Hz to 20kHz +0dB/-0.2dB

Dynamic Range

: 98dB

Signal to Noise Ratio

: 104dB

Total Harmonic Distortion (THD) : 0.003%

Channel Separation D/A Converter

: 96dB

: Dual, Linear, Pulse Width

Modulated Bit Stream

Clock Rate

: 33.8688MHz (33,868.8kHz)

Power Supply

U. S. A. and Canada models: AC120V, 60Hz

Asia / Oceania models

: AC220/240V, 50/60Hz

Power Consumption

: 20 Watts

Dimensions

: 17-3/8" x 4" x 16-1/8" (443 x 100 x 410 mm)

Weight

: 14.9 lbs (6.8 kg)

Specifications and components subject to change without notice. Overall performance will be maintained or improved.

Equipment and tools used for adjustment

- Servo gain adjuster (See page 12)
- Test disc (EIAJ CD-1, Philips Test Sample 5A814 126-2)
- Commercial music disc
- Dual channel oscilloscope (minimum frequency 30MHz, with EXT trigger and 1:1 probe)
- Low-frequency oscillator
- Hex wrench (M2.0)
- Hex wrench (M1.27)
- Feeler gauge 0.9mm


SAFETY PRECAUTIONS

Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:

- Be sure that no built-in protective devices are defective and/or have been defeated during servicing.
 - (1) Protective shields are provided to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience.
 - (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including, but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks.

Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning.

- b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, both are not limited to excessively wide cabinet ventilation slots, and an improperly fitted and/or incorrectly secured cabinet back over.
- c. Leakage Current Hot Check With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.1 "Leakage Current for Appliances" and Underwriters Laboratories (UL) 1270, (34.6). With the instrument AC switch first in the ON position and then in the OFF position, measure from a known earth ground (metal waterpipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle bracket, metal cabinet, screwheads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milliamp. Reverse the instrument power cord plug in the outlet and repeat test. ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER.

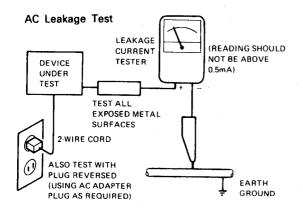


d. Insulation Resistance Test

- Unplug the power supply cord and connect a jumper wire between the two prongs of the plug.
- (2) Turn on the power switch of the instrument.
- (3) Measure the resistance with an ohmmeter between the jumpered AC plug and each exposed metallic cabinet part on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. The reading should be as shown below. If it is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be repaired and rechecked before it is returned to the customer.

e. Insulation Resistance Test Cold Check

- (1) Unplug the power supply cord and connect a jumper wire between the two prongs of the plug.
- (2) Turn on the power switch of the instrument.
- (3) Measure the resistance with an ohmmeter between the jumpered AC plug and each exposed metallic cabinet part on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1 and 5.2 Megohm. When there is no return path to the chassis, the reading must be "infinite". If it is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be repaired and rechecked before it is returned to the customer.

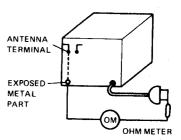

PRODUCT SAFETY NOTICE

Some electrical and mechanical parts have special safety related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by shading, by (Δ) on schematics and parts listed. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. Products Safety is under review continuously and new instructions are issued whenever appropriate.

SERVICING PRECAUTIONS

CAUTION: Before servicing instruments covered by this manual and its supplements, read and follow the SAFETY PRECAUTIONS on this page.

NOTE: If unforeseen circumstances created conflict between the following servicing precautions and any of the safety precautions, always follow the safety precautions.

Remember: Safety First.

General Servicing Precautions

- a. Always unplug the instrument AC power cord from the AC power source before:
 - Removing or reinstalling any component, circuit board, module, or any other instrument assembly.
 - (2) Disconnecting or reconnecting any instrument slectrical plug or other electrical connection.
 - (3) Connecting a test substitute in parallel with an electrolytic capacitor in the instrument.
 - **Caution:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
- Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this manual might be equipped.
- c. Do **not** apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- d. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

NOTE: Refer to Safety Precautions on page 3.

- (1) The service precautions are indicated or printed on the cabinet, chassis or components. When servicing, follow the printed or indicated service precautions and service materials.
- (2) The Components used in the unit has a specified conflammability and dielectric strength. When replacing any components, use components which has the same ratings. Components marked (\(\Delta\)) in the circuit diagram are important for safety or for the characteristics of the unit. Always replace with the appointed components.
- (3) An insulation tube or tape is sometimes used and some components are raised above the printed wiring board for safety. The internal wiring is sometimes clamped to prevent contact with heating components. Install them as they were.
- (4) After servicing, always check that the removed screws, components and wiring have been installed correctly and that the portion around the service part have not been damaged and so on. Further check the insulation between the blades of attachment plug and accessible conductive parts.

Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power on. Connect the insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between the each blade of the attachment plug and accessible conductive parts (Note 1) should be more than 1M-ohm.


Note 1: Accessible Conductive Parts including Metal panels, Output jacks, etc.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES


Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some fieldeffect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damege caused by static electricity.

- Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
- After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
- 3. Use only a grounded-tip soldering iron to solder or unsolder ES devices
- Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
- 5. Do not use freon-propelled chemicals. These can generate electrical charge sufficient to damage ES devices.
- 6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
- Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
 - CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
- Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device).


CONTROLS

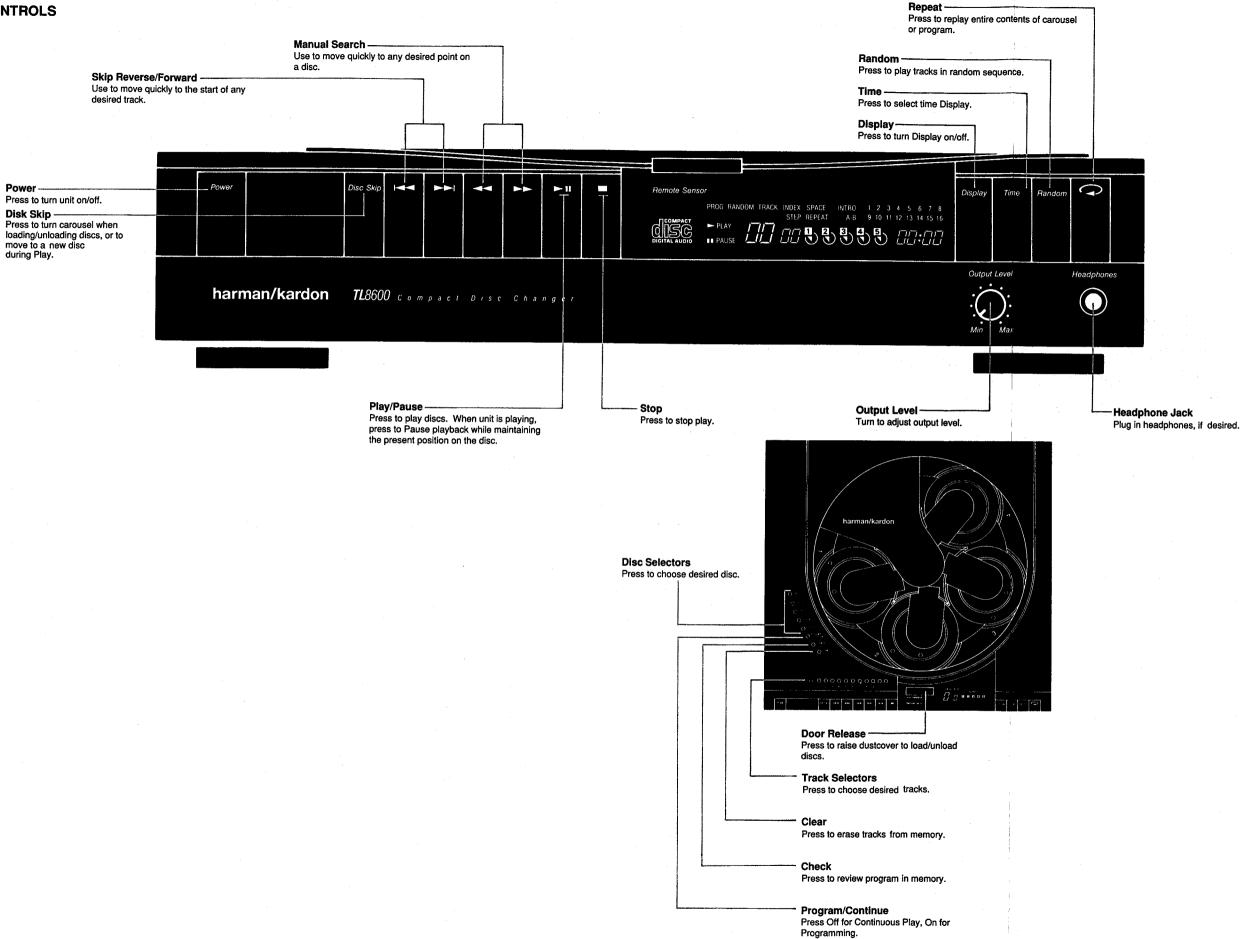

CONTROLS

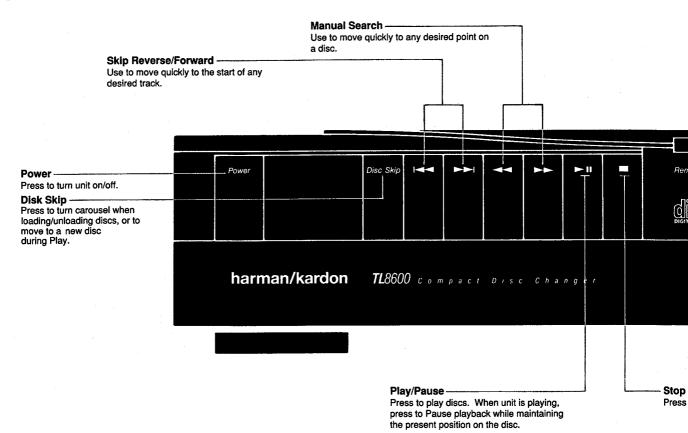


Disc Sele Press to c

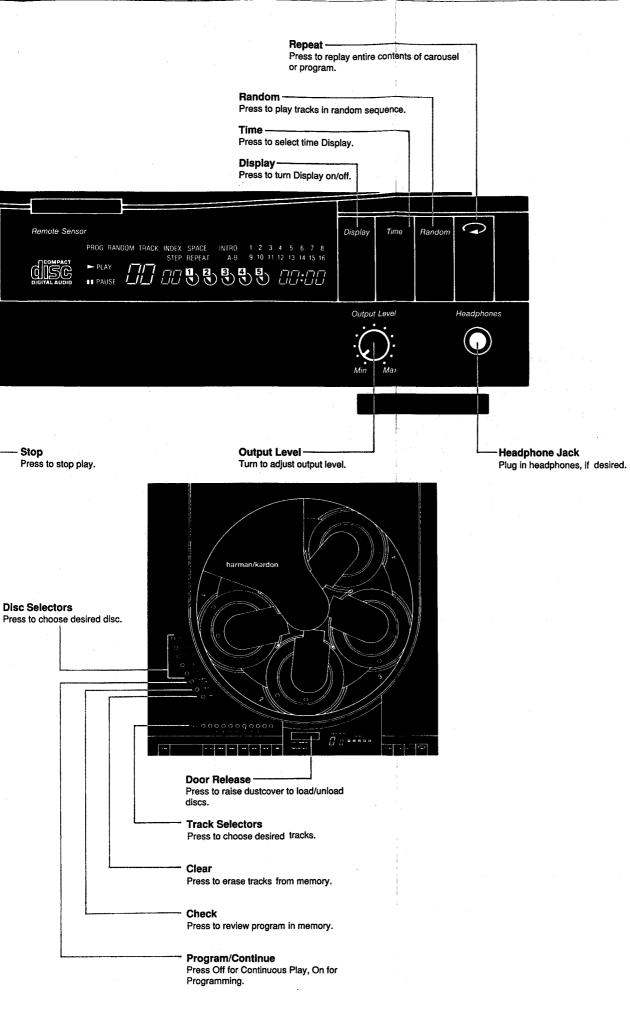

DISPLAYS

REMOTE CONTROL

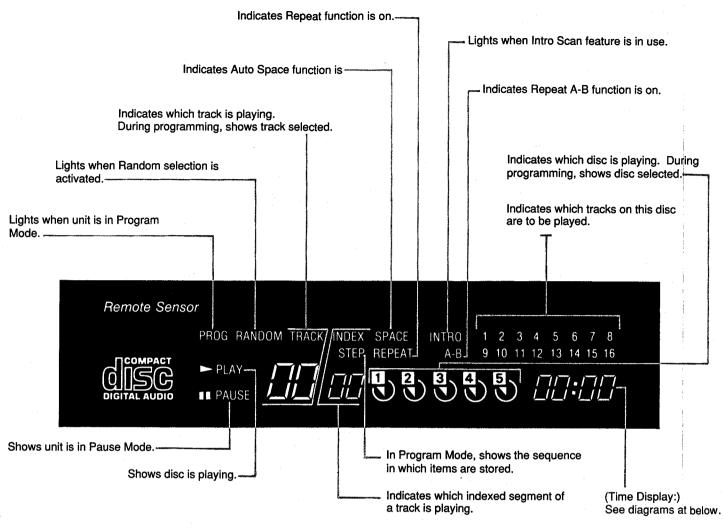

Time Display:

Press the time button to select among the following displays:



a. Elapsed time since the start of the track.



b. Time remaining until the end of the track.



c. Time remaining until the end of the disc.



d. Total time of the disc (number of tracks is also displayed).

TOP DISPLAY (not shown)

Track, Index/Step and Disc indicators function exactly as in the front panel display.

Function Buttons

The Remote Control provides the same functions as the CD changer, with the following exceptions:

- a. There is no Power switch on the Remote Control.
- b. The Remote Control provides two buttons, rather than a dial, to control Output Level. Press ▲ to raise, and ▼ to lower Output Level.
- The Remote Control provides five keys not found on the CD changer. These features are described below.

Previewing Disc(s) Using Intro Scan

When Intro is pressed, the CD changer automatically plays the first 15 seconds of each track on each disc, in order. In Program Mode, Intro Scan plays only the selected tracks, in the sequence programmed.

To cancel, press Intro again, if you wish the disc to continue playing from its present position. Or press Stop.


Repeating Selected Segments Using A-B

To repeat any desired segment:

- With unit playing, Press A-B key at the start of the desired segment. ("Repeat" and "A-" light up on the display.)
- Press key again at the end of the desired segment. ("B" also lights on display.) The designated section will be repeated continuously.

To cancel repeat and continue playing the disc, press Repeat or A-B. To stop play, press Stop.

The designated segment may be part of a single track, or may extend through several tracks on a single disc (Continuous Mode only). If no point B is set, the player will set point B at the end of the current disc in Continuous Mode; at the end of the current track in Program Mode.

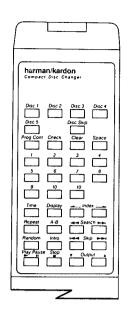

Using Index Search

Some CDs contain long tracks that are subdivided into shorter segments, each identified by an Index number. When you are playing such a track, you may skip forward or back to the start of any desired index segment.

Press the Index ____ key to skip to a higher index segment; press ___ to skip to a previous segment.

Using Auto Space


Some tape cassette players use the time interval between tracks to locate the beginning of a desired track. On many CDs, however, such spaces may not be present. If you wish to play a disc with spaces inserted, press the Space key on the Remote Control before or during playback. ("Space" will light up on display panel.) The player will automatically insert 4-second spaces between each track. To cancel Auto Space, re-press the Space key. This feature is also canceled when Stop is pressed.

Operating Conditions

The control unit operates effectively within a distance of 7 meters (23 feet) and an angle of 30° from the CD changer. Using the control near fluorescent lights may shorten this range, as will any dust or dirt that accumulates on the front of the remote control, or the "Remote Sensor" area of the CD changer. Also avoid blocking the line of sight between the unit and the remote.

The control unit is powered by two AA batteries, included with your CD changer. When you replace weak batteries, replace both at the same time. When the remote is to be unused for an extended period, remove the batteries to prevent damage from corrosion.

DISPLAYS

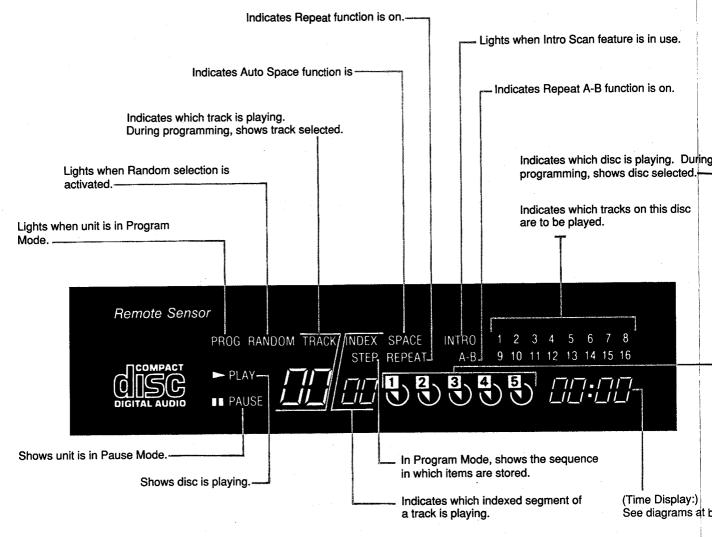

Time Display:

Press the time button to select among the following displays:



a. Elapsed time since the start of the track.



b. Time remaining until the end of the track.



c. Time remaining until the end of the disc.



d. Total time of the disc (number of tracks is also displayed).

TOP DISPLAY (not shown)

Track, Index/Step and Disc indication exactly as in the front padisplay.

REMOTE CONTROL

olay:)

ams at below.

. During

disc

Function Buttons

The Remote Control provides the same functions as the CD changer, with the following exceptions:

- There is no Power switch on the Remote Control.
- b. The Remote Control provides two buttons, rather than a dial, to control Output Level. Press ▲ to raise, and ▼ to lower Output Level.
- The Remote Control provides five keys not found on the CD changer. These features are described below.

Previewing Disc(s) Using Intro Scan When Intro is pressed, the CD changer automatically plays the first 15 seconds of each track on each disc, in order. In Program Mode, Intro Scan plays only the selected tracks, in the sequence programmed.

To cancel, press Intro again, if you wish the disc to continue playing from its present position. Or press Stop.


Repeating Selected Segments Using A-B

To repeat any desired segment:

- With unit playing, Press A-B key at the start of the desired segment. ("Repeat" and "A-" light up on the display.)
- Press key again at the end of the desired segment. ("B" also lights on display.) The designated section will be repeated continuously.

To cancel repeat and continue playing the disc, press Repeat or A-B. To stop play, press Stop.

The designated segment may be part of a single track, or may extend through several tracks on a single disc (Continuous Mode only). If no point B is set, the player will set point B at the end of the current disc in Continuous Mode; at the end of the current track in Program Mode.

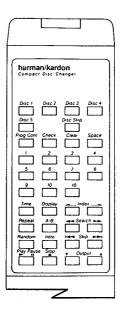

Using Index Search

Some CDs contain long tracks that are subdivided into shorter segments, each identified by an Index number. When you are playing such a track, you may skip forward or back to the start of any desired index segment.

Press the Index ____ key to skip to a higher index segment; press ___ to skip to a previous segment.

Using Auto Space

Some tape cassette players use the time interval between tracks to locate the beginning of a desired track. On many CDs, however, such spaces may not be present. If you wish to play a disc with spaces inserted, press the Space key on the Remote Control before or during playback. ("Space" will light up on display panel.) The player will automatically insert 4-second spaces between each track. To cancel Auto Space, re-press the Space key. This feature is also canceled when Stop is pressed.

Operating Conditions

The control unit operates effectively within a distance of 7 meters (23 feet) and an angle of 30° from the CD changer. Using the control near fluorescent lights may shorten this range, as will any dust or dirt that accumulates on the front of the remote control, or the "Remote Sensor" area of the CD changer. Also avoid blocking the line of sight between the unit and the remote.

The control unit is powered by two AA batteries, included with your CD changer. When you replace weak batteries, replace both at the same time. When the remote is to be unused for an extended period, remove the batteries to prevent damage from corrosion.

nown) sc indicators front panel

DISASSEMBLY PROCEDURES (REFER TO PAGES 39, 40 AND 42)

[1] CABINET BOTTOM ASSEMBLY (AE) REMOVAL

- 1. Remove special Boss (230).
- Remove 4 screws (A) and then remove the 4 Legs (133 and AA)
- 3. Remove 2 screws (B) and then remove the Bracket (203).
- 4. Remove 14 screws (C) and then remove the Cabinet Bottom (138).

[2] MAIN P. C. BOARD (PCB-1) REMOVAL

- Remove the Cabinet Bottom Assembly (AE), referring to the previous step [1].
- Disconnect the jumper leads (W111 and W112) connected to the connectors (CN111 and CN112) on the Main P. C. Board (PCB-1).
- Disconnect the connector with lead wires (W104, LCN103, LCN104, LCN107, LCN108, LCN109, W501, W502, W504, W1, LCN121 and W503) connected to the connectors (CN101, CN103, CN104, CN107, CN108, CN109, CN117, CN118, CN119, CN120, CN121 and CN122) on the Main P. C. Board (PCB-1).
- Disconnect the connector with lead wire (LCN102) connected to the connector (CN102) on the Disc Sensor P. C Board (PCB-5).
- Remove 9 screws (D) and then remove the Main P. C. Board (PCB-1).

[3] FRONT PANEL ASSEMBLY (AB) REMOVAL

- 1. Remove the Cabinet Bottom Assembly (AE), referring to the previous step [1].
- Disconnect the jumper leads (W111 and W112) connected to the connectors (CN111 and CN112) on the Main P. C. Board (PCB-1).
- Disconnect the jumper lead (W110) connected to the connector (CN113) on the 10 key P. C. Board (PCB-13).
- Remove 2 screws (E) and then remove the Open Lever Holder (224).
- Remove 7 screws (F) and then, while pressing the Lid Open Button, remove the Front Panel Assembly (AB) with Front Chassis (183) and Power Switch P. C. Board (PCB-9).
- Remove 13 screws (G) and then separate the Front Panel Assembly (AB) and Front Chassis (183) with P. C. Board.

[4] CD MECHANISM ASSEMBLY (308) REMOVAL

- Remove the Cabinet Bottom Assembly (AE), referring to the previous step [1].
- Disconnect the jumper lead (W104) connected to the connector (CN103) on the Servo P. C. Board. Disconnect the connector with lead wire (LCN121) connected to the connector (CN121) on the Main P. C Board (PCB-1).
- 3. Remove a screw (H) and then remove the Stopper (253).
- Remove a screw (I) and then remove the CD Mechanism Assembly (308) with Holder Assembly (AK) and Slider Assembly (AL).
- Remove 3 screws (J) and then separate the CD Mechanism Assembly (308) and Holder Assembly (AK) and Slider Assembly (AL).

Note: When fitting the CD Mechanism Assembly, make certain that the Up/Down Cam (247) is inserted between the holder (221) and the Up/Down Slider (248).

[5] TURN TABLE (142) REMOVAL

- Remove 4 screws (K) and then remove Dust Cover (140) with the Metal Fittings and Hinges.
- 2. Remove the Pick Up Cover (141).
- Remove 3 screws (L) and then remove the Bracket Assembly (AG) and Turn Table (142).
- Disconnect the connector with lead wire (LCN102) to the connector (CN102) on the Disc Sensor P. C. Board (PCB-5).

Note: When putting the Turntable on the Cabinet Top, make certain that the Cabinet Top is flush with the Turntable. They will not be flush with each other if the external gear of the Turntable is resting on the Guide Roller. In such a case, turn the Turntable a few times to make them flush before assembling them.

[6] CLAMPER (239) REMOVAL

- 1. Remove the Bracket Assembly (AG), referring to the previous step [5].
- Steadying the Clamper (239) by hand, turn the Bracket (193) using a screwdriver or the like, align 3 lugs of the Clamper (239) with notches on the Bracket (193), and then remove the Bracket (193).
- Pry open 3 lugs of the Clamper (239) and remove the Magnet (309).


Note: When assembling the Magnet (309), make certain that the dented side faces down.

4. Pulling the Clamper (239) toward either side of the Bracket (191), press one of the Clamper lugs to the center of the Clamper to disengage it. Disengage another lug by the same method to separate the Clamper from the Bracket.




TROUBLE SHOOTING


When a trouble has occurred, first check the pick-up lens for dirt and each connector for tight and secure connection. If the problem persists after checking both of these items, use the following check procedures.

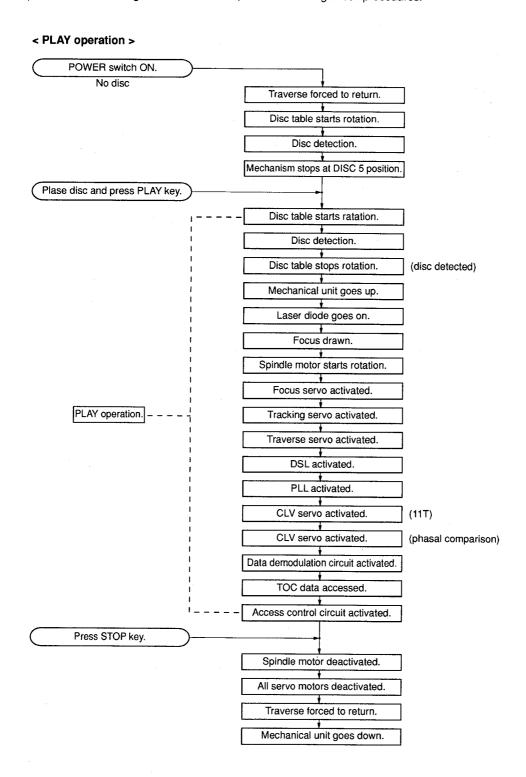

< Operation after POWER switch ON (without discs). >

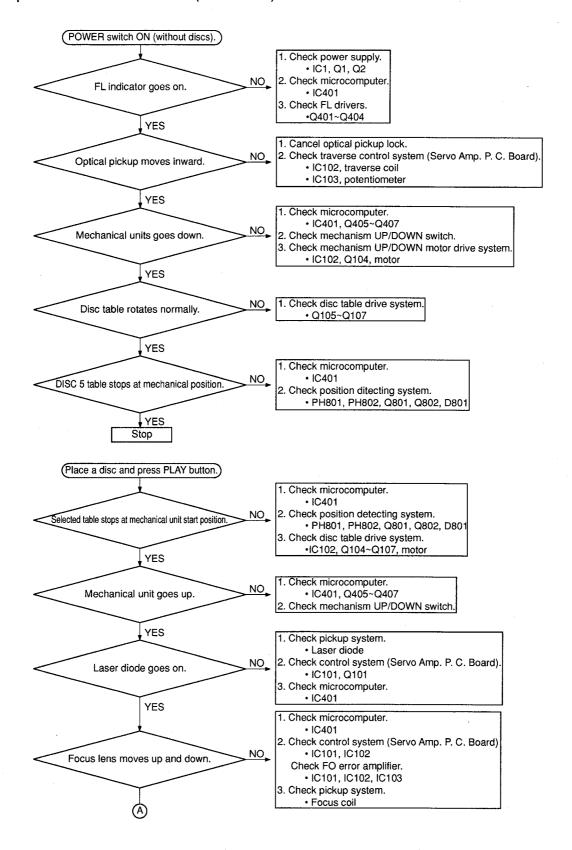


< TOC access to PLAY operation. >

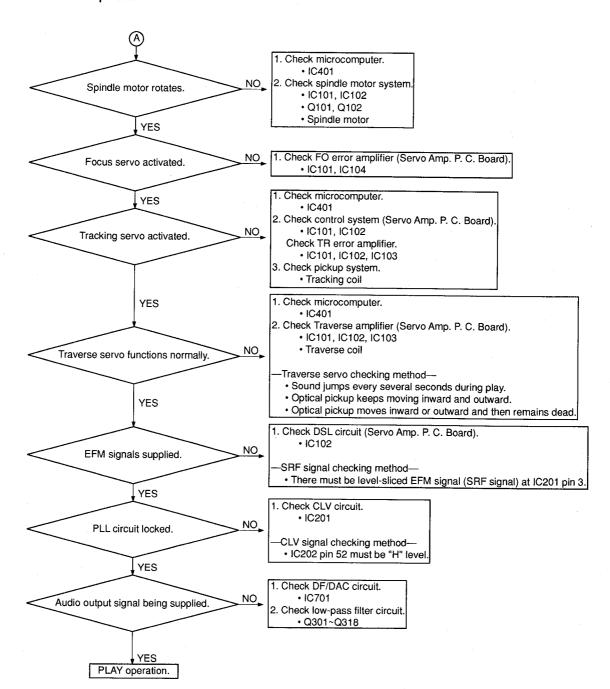

POWER CORD REPLACEMENT (FOR SERVICE ENGINEERS OTHER THAN NORTH AMERICA)

In order to prevent fire or shock hazard when replacing the power cord, follow the procedure below to replace the part with the standard supply parts.

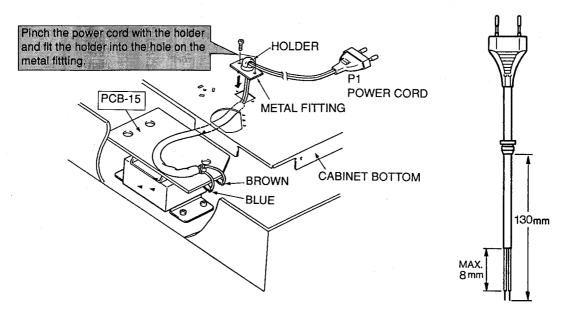


ALIGNMENT PROCEDURES

Caution: Laser beams are irradiated at power on from the pickup lens. Avoid direct eye or body contact with laser beams to protect yourself from danger.

■ Crucial Points of Adjustment

VR106
VR101
VR105
VR104
VR102
Grounding TJ102
GND
RF output TJ101
Jig connection CN102
Fig. A

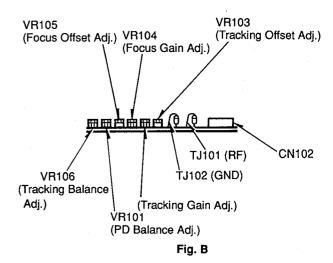

 Temporary VR settings (VR need to be adjusted temporarily when they are replaced or when they need major readjustment.)

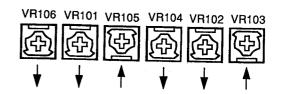



Fig. C

Alignment with TECHNICS SZZP1094C-1 Servo Adjuster.

TECHNICS SERVO GAIN ADJUSTER

■ Controls and their functions

Front View

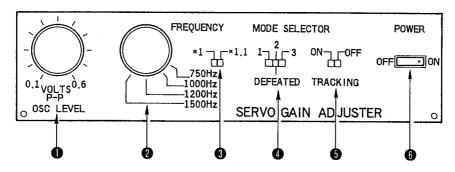

OSC LEVEL KNOB

Used to adjust the output level of the built-in low frequency oscillator.

At minimum position (fully-counterclockwise rotated position):

A 0.1 Vp-p level signal is delivered.

At maximum position (fully-clockwise rotated position):
A 0.6 Vp-p level signal is delivered.

23 FREQUENCY KNOB AND SWITCH

x1 AND x1.1

Used to select the oscillation frequency.

FREQUENCY	Oscillation Frequency	
	x1	x1.1
750Hz	750Hz	825Hz
1,000Hz	1,000Hz	1,100Hz
1,200Hz	1,200Hz	1,320Hz
1,500Hz	1,500Hz	1,650Hz

MODE SELECTION SWITCH

Used to set the modes for tracking and focus servo adjustments.

- 1. Setting for tracking servo adjustment.
- 2. DEFEATED (through)
- 3. Setting for focus servo adjustment.

Note: The adjustment settings (1, 2 or 3) will depend on the model being used.


Please refer to respective Service Manual.

6 TRACKING SWITCH

Used to turn on and off the tracking servo.

6 POWER SWITCH

Top View

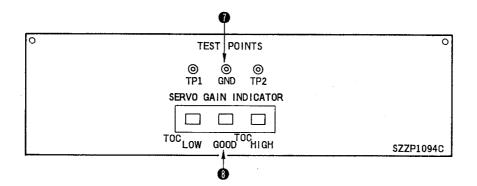

1 TEST POINTS

These are the in/output terminals for monitoring the servo amplifier. (Same T. P. s in the original Servo Gain Adjuster.)

® SERVO GAIN INDICATOR

Displays the condition of the servo amplifier's gain during adjustment.

LED Status	Condition of the Servo Amplifier's Gain	
LOW	Gain is low	
GOOD	Gain is correct	
HIGH	Gain is high	

Alignment with TECHNICS SZZP1094C-1 Servo Adjuster.

For adjustment with Alternate Servo Adjuster see page 17.

Equipment and tools used for adjustment


- Servo gain adjuster (TECHNICS P/N : SZZP1094C or SZZP1094C-1) (See page 12)
- Test disc (EIAJ CD-1, Philips Test Sample 5A814 126-2, ABEX TCD-731R)
- · Commercial music disc
- Dual channel oscilloscope (minimum frequency 30MHz, with EXT trigger and 1:1 probe)
- Low-frequency oscillator
- · Hex wrench (M2.0)
- · Hex wrench (M1.27)
- Feeler gauge 0.9mm (P/N: RZZ0297)

■ Steps of Adjustment

The CD changer needs to be adjusted as shown below when the optical pickup, the spindle motor, or the turntable is replaced.

■ Set Up instructions for Adjustment.

 Defeat the Disc Detect Sensor by placing none transparent tape over 2 Disc Detect holes in one of the disc trays in Turntable Ref. No. 142. (See Fig. a)

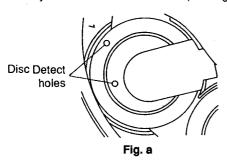

2. Place the unit upside down on small support blocks.


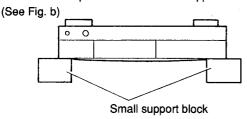


Fig. b

Remove bottom cover and remove CD transport. Do not disconnect any wires. (See Fig. c)

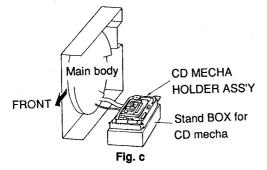

 Lift stopper ass'y Ref. No. 253 and insert a 13 mm jam between stopper ass'y and chassis. This jam will allow the Turntable to rotate freely. (See Fig. d)


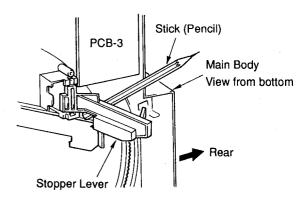


Fig. d

- 5. Turn on the power switch and wait until the Turntable stops rotating.
- 6. Place test disc on the disc spindle and hold the disc in place with a round magnet. (See Fig. e)

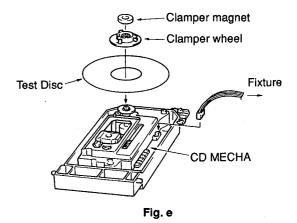

- 7. Press the Play button on front panel and wait until the Turntable stops rotating.
- 8. The CD transport in now in the play mode and ready for alignment.

[1]Turntable height check and adjustment

- Put a 0.9mm feeler gauge between the turntable and the loading base (see Fig. D).
- 2. Tighten the turntable retaining screw using a hex wrench (M1.27).
- Connect CH1 of the oscilloscope across VR104 (FEG)
 (+) and VR106 (V.REF)(-) of the servo P. C. Board.


Caution: Voltage (2.5V) is present at the V.REF terminal. Be certain that the changer chassis never touches the oscilloscope chassis.

Oscilloscope setting: VOLT50mV SWEEP....1msec. INPUT.....DC

- 4. Set the DC Zero Balance of the oscilloscope.
- 5. Turn on the power switch, and play a test disc.
- 6. Check the voltage of the oscilloscope waveform.

Note 1: The turntable height is correct if the measured voltage is ±15mV. If necessary, fine-adjust the turntable height (tilting the feeler gauge, etc.).

Over +15mV Over -15mV Decrease the turntable height. Increase the turntable height.

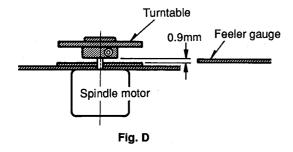

Note 2: If the measured voltage is beyond the range of target voltage even after fine-adjustment described in Note 1, set VR105 to a middle point and check the turntable height again. (In this case, the focus offset needs to adjusted later.)

[2]Pulsation adjustment

 Connect CH1 of the oscilloscope across TJ101 (+) and TJ102 (-) of the servo P. C. Board.

Oscilloscope setting: VOLT100mV SWEEP....0.5µsec. INPUT.....AC

- 2. Turn on the power switch and play the test disc.
- 3. While playing the test disc, raise the player as shown.
- Using a hex wrench (M2.0mm), turn the two pulsation adjusting screw alternately to minimize the amplitude fluctuation of the oscilloscope waveform (RF signal).
- 5. When adjustment is completed, apply liquid bond to fix the adjusting screws.


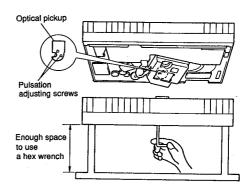


Fig. E

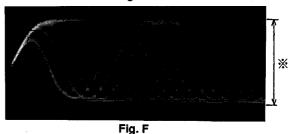

*Minimize the amplitude fluctuation in this area.

[3] BEST EYE (PD balance) adjustment

1. Connect CH1 of the oscilloscope across TJ101 (+) and TJ102 (-) of the servo P. C. Board.

Oscilloscope setting: VOLT100mV SWEEP....0.5µsec.

INPUT.....AC

- Turn on the power switch and play the test disc. (Philips Test Sample 5A814 126-2, Scratched) (track number 15)
- Adjust VR101 to maximize the amplitude of the RF signal eye patterns. (See figure G.)



Fig. G

* Maximize the amplitude in this area.

Alignment with TECHNICS SZZP1094C-1 Servo Adjuster.

[4]Focus gain adjustment

- 1. Connect the servo gain adjuster (see page 16).
- Set the mode selector switch to 2 (maintaining the adjuster tracking switch in the ON position).
- Adjust the low-frequency oscillator to 825Hz (frequency) and 150mVp-p (output level).
- 4. Play a test disc. (EIAJ CD-1)
- Set the mode selector switch on the panel of the unit to position "3" and adjust the semi fixed volume (VR104) for Focus Gain control on the CD player so that the LED "GOOD" on the SERVO GAIN INDICATOR Panel lights up.

Note: First adjust the volume for Focus Gain Control so that the LOW LED on the SERVO GAIN INDICATOR Panel lights up and then make further adjustments until the GOOD LED lights up.

[5]Tracking gain adjustment

- Adjust the low-frequency oscillator to 1.1kHz (frequency) and 150mVp-p (output level).
- 2. Set the mode selector switch to 2 (maintaining the adjuster tracking switch in the ON position).
- 3. Turn on the power switch and play a test disc. (EIAJ CD-1)
- 4. Set the Mode Selector Switch on the unit panel to position "1" (for tracking servo adjustment) and adjust the semi fixed volume (VR102) for the tracking gain of the CD player until the GOOD LED of the Servo Gain Indicator lights up.

Note: First adjust the semi fixed volume for Tracking Gain control so that the LOW LED on the SERVO GAIN INDICATOR Panel lights up and then make further adjustments until the GOOD LED lights up.

[6]Focus offset adjustment

 Connect CH1 of the oscilloscope to TJ101 (+) and TJ102 (-) of the servo P. C. Board; connect CH2 to VR104 (FEG) (+).


Oscilloscope setting: VOLT100mV (CH1 and CH2)

SWEEP....0.5msec.


INPUT.....AC (CH1 and CH2)

MODE.....NORM (CH1 trigger)

Play track number 6 of the EIAJ CD-1 test disc with a 0.6mm width of tape.

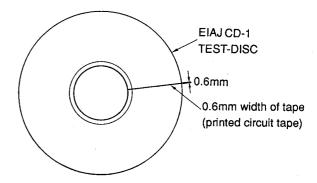

 Trigger the oscilloscope to get the waveforms shown below. Then adjust VR105 so that the RF dimple in CH1 is smoothly enveloped and the amplitude of CH2 is minimized, or so that A equals to B.

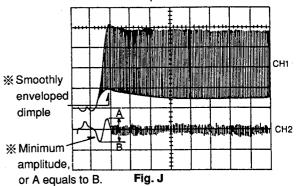

[7] Tracking offset adjustment

1. Connect CH1 of the oscilloscope to TJ101 (+) and TJ102 (-) of the servo P. C. Board; connect CH2 to VR102 (TEG) (+).

Oscilloscope setting: VOLT100mV (CH1 and CH2)

SWEEP....0.5msec.

INPUT.....AC (CH1 and CH2)

MODE......NORM (CH1 trigger)
2. Turn on the power switch and play the test disc. (EIAJ

 Trigger the oscilloscope to get the waveforms shown below. Then adjust VR103 so that the RF dimple in CH1 is smoothly enveloped and the amplitude of CH2 is

CD-1 with putting a 0.6mm width of tape, track number

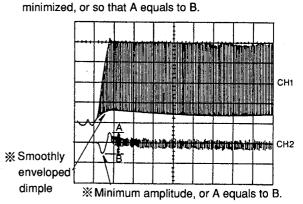


Fig. K

Alignment with TECHNICS SZZP1094C-1 Servo Adjuster.

[8] Tracking balance adjustment

- 1. Make certain that the mode selector switch is set to 2.
- Adjust the low-frequency oscillator to 1.1kHz (frequency) and 600mVp-p (output level).
- Connect CH1 of the oscilloscope to TJ101 (+) and TJ102 (-) of the servo P. C. Board; connect CH2 to OSC of the servo gain adjuster.

Oscilloscope setting: VOLT100mV (CH1)

SWEEP....1msec.

INPUT.....AC (CH1 and CH2)

MODE.....NORM (CH2 trigger)

- Turn on the power switch and play a test disc. (EIAJ CD-1)
- Set the mode selector switch to 1, and adjust VR106 to get the waveforms for CH1 output as shown below (minimum jitter).
- 6. Disconnect the servo gain adjuster.

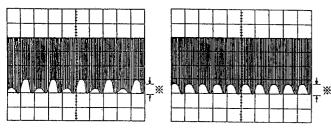


Fig. L

* Align for minimum jitter.

Fig. L1

Minimum jitter.

[9]Play confirmation after adjustment

- · Skip search confirmation
- 1. Play a commercial music disc.
- 2. Operate the skip button to check the skip search function (forward and reverse).

· Manual search confirmation

- 1. Play a commercial music disc.
- Push the manual search button to check smooth manual search operation at low and high speeds (forward and reverse).

· Defect check

- Play the test disc. (ABEX Vertical Deviation Test Disc TCD-731R, track number 1)
- Play the middle sections of Vertical Deviation test disc and check the player operation for track jumping and noise.

Wiring diagram of the Technics servo gain adjuster

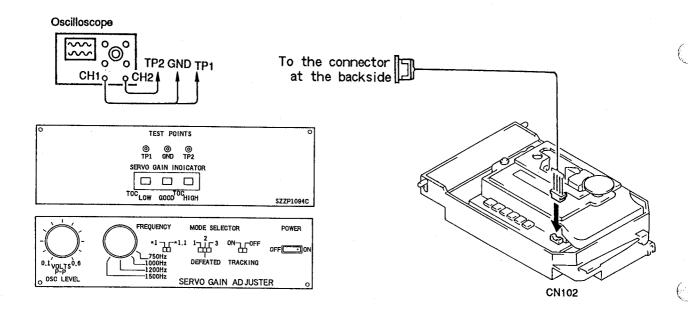


Fig. M

Alignment with Alternate Servo Adjuster.

Equipment and tools used for adjustment


- · Servo gain adjuster (See page 20)
- Test disc (EIAJ CD-1, Philips Test Sample 5A814 126-2, ABEX TCD-731R)
- · Commercial music disc
- Dual channel oscilloscope (minimum frequency 30MHz, with EXT trigger and 1:1 probe)
- Low-frequency oscillator
- · Hex wrench (M2.0)
- · Hex wrench (M1.27)
- · Feeler gauge 0.9mm (P/N: RZZ0297)

■ Steps of Adjustment

The CD changer needs to be adjusted as shown below when the optical pickup, the spindle motor, or the turntable is replaced.

Set Up instructions for Adjustment.

 Defeat the Disc Detect Sensor by placing none transparent tape over 2 Disc Detect holes in one of the disc trays in Turntable Ref. No. 142. (See Fig. a)

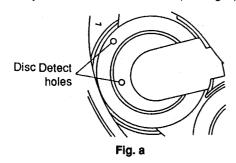

2. Place the unit upside down on small support blocks. (See Fig. b)

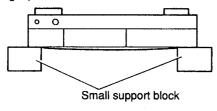


Fig. b

Remove bottom cover and remove CD transport. Do not disconnect any wires. (See Fig. c)

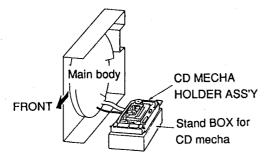


Fig. c

4. Lift stopper ass'y Ref. No. 253 and insert a 13 mm jam between stopper ass'y and chassis. This jam will allow the Turntable to rotate freely. (See Fig. d)


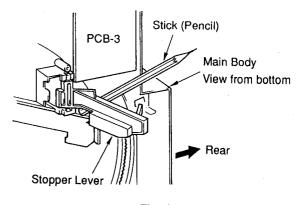


Fig. d

- Turn on the power switch and wait until the Turntable stops rotating.
- 6. Place test disc on the disc spindle and hold the disc in place with a round magnet. (See Fig. e)

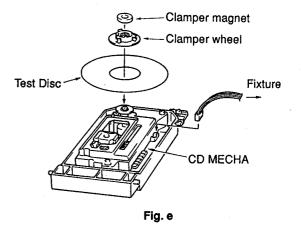

- 7. Press the Play button on front panel and wait until the Turntable stops rotating.
- 8. The CD transport in now in the play mode and ready for alignment.

[1]Turntable height check and adjustment

- Put a 0.9mm feeler gauge between the turntable and the loading base (see Fig. N).
- Tighten the turntable retaining screw using a hex wrench (M1.27).
- Connect CH1 of the oscilloscope across VR104 (FEG)
 (+) and VR106 (V.REF)(-) of the servo P. C. Board.
 Caution: Voltage (2.5V) is present at the V.REF


terminal. Be certain that the changer chassis never touches the oscilloscope chassis.

Oscilloscope setting: VOLT50mV SWEEP....1msec. INPUT.....DC

- 4. Set the DC Zero Balance of the oscilloscope.
- 5. Turn on the power switch, and play a test disc.
- 6. Check the voltage of the oscilloscope waveform.

Note 1: The turntable height is correct if the measured voltage is ±15mV. If necessary, fine-adjust the turntable height (tilting the feeler gauge, etc.).

Over +15mV Over -15mV Decrease the turntable height. Increase the turntable height.

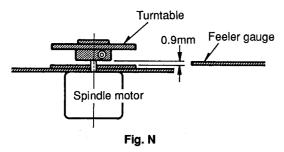

Note 2: If the measured voltage is beyond the range of target voltage even after fine-adjustment described in Note 1, set VR105 to a middle point and check the turntable height again. (In this case, the focus offset needs to adjusted later.)

[2]Pulsation adjustment

 Connect CH1 of the oscilloscope across TJ101 (+) and TJ102 (-) of the servo P. C. Board.

Oscilloscope setting: VOLT100mV

SWEEP....0.5µsec.

- INPUT.....AC
- 2. Turn on the power switch and play the test disc.
- 3. While playing the test disc, raise the player as shown.
- Using a hex wrench (M2.0mm), turn the two pulsation adjusting screw alternately to minimize the amplitude fluctuation of the oscilloscope waveform (RF signal).
- When adjustment is completed, apply liquid bond to fix the adjusting screws.

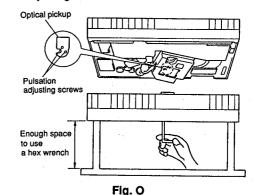




Fig. P

Minimize the amplitude fluctuation in this area.

[3]BEST EYE (PD balance) adjustment

 Connect CH1 of the oscilloscope across TJ101 (+) and TJ102 (-) of the servo P. C. Board.

Oscilloscope setting: VOLT100mV

SWEEP....0.5µsec.

INPUT.....AC

- Turn on the power switch and play the test disc. (Philips Test Sample 5A814 126-2, Scratched) (track number 15)
- Adjust VR101 to maximize the amplitude of the RF signal eye patterns. (See figure Q.)



Fig. Q

Maximize the amplitude in this area.

Alignment with Alternate Servo Adjuster.


[4]Focus gain adjustment

- 1. Connect the servo gain adjuster (see figure W).
- 2. Adjust the low-frequency oscillator to 825Hz (frequency) and 150mVp-p (output level), and connect it to OSC and GND terminals of the servo gain adjuster.
- Connect CH1 and CH2 of the oscilloscope to TP1 and TP2 of the servo gain adjuster (TP3 is ground).

Oscilloscope setting: VOLT100mV (CH1 and CH2) SWEEP....0.5msec.

INPUT.....AC


- 4. Play a test disc. (EIAJ CD-1)
- 5. Adjust VR104 to equalize the amplitude in CH1 and CH2.

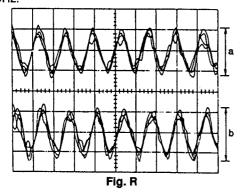

※ Adjust until a equals to b.

[5]Tracking gain adjustment

- Adjust the low-frequency oscillator to 1.1kHz (frequency) and 150mVp-p (output level), and connect it to OSC and GND terminals of the servo gain adjuster.
- 2. Connect the servo gain adjuster (see figure X).
- 3. Turn on the power switch and play a test disc. (EIAJ CD-1)
- Adjust VR102 to equalize the amplitude in CH1 and CH2.

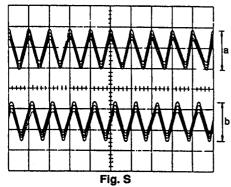

X Adjust until a equals to b.


[6]Focus offset adjustment

 Connect CH1 of the oscilloscope to TJ101 (+) and TJ102 (-) of the servo P. C. Board; connect CH2 to VR104 (FEG) (+).


Oscilloscope setting: VOLT100mV (CH1 and CH2)

SWEEP....0.5msec.

INPUT.....AC (CH1 and CH2) MODE.....NORM (CH1 trigger) Play track number 6 of the EIAJ CD-1 test disc with a 0.6mm width of tape.

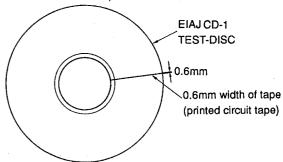

 Trigger the oscilloscope to get the waveforms shown below. Then adjust VR105 so that the RF dimple in CH1 is smoothly enveloped and the amplitude of CH2 is minimized, or so that A equals to B.

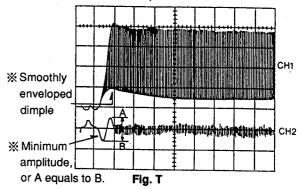

[7] Tracking offset adjustment

1. Connect CH1 of the oscilloscope to TJ101 (+) and TJ102 (-) of the servo P. C. Board; connect CH2 to VR102 (TEG) (+).

Oscilloscope setting: VOLT100mV (CH1 and CH2)

SWEEP....0.5msec.

INPUT.....AC (CH1 and CH2)

MODE.....NORM (CH1 trigger)

- Turn on the power switch and play the test disc. (EIAJ CD-1 with putting a 0.6mm width of tape, track number
 6)
- Trigger the oscilloscope to get the waveforms shown below. Then adjust VR103 so that the RF dimple in CH1 is smoothly enveloped and the amplitude of CH2 is minimized, or so that A equals to B.

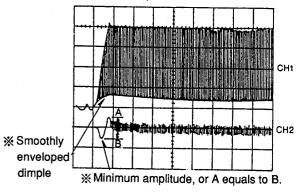


Fig. U

Alignment with Alternate Servo Adjuster.

[8] Tracking balance adjustment

- 1. Connect the servo gain adjuster (see figure X).
- Adjust the low-frequency oscillator to 1.1kHz (frequency) and 600mVp-p (output level), and connect it to OSC and GND terminals of the servo gain adjuster.
- Connect CH1 of the oscilloscope to TJ101 (+) and TJ102 (-) of the servo P. C. Board; connect CH2 to OSC of the servo gain adjuster.


Oscilloscope setting: VOLT100mV (CH1)

SWEEP....1msec.

INPUT.....AC (CH1 and CH2)

MODE.....NORM (CH2 trigger)

- Turn on the power switch and play a test disc. (EIAJ CD-1)
- 5. Adjust VR106 to get the waveforms for CH1 output as shown below (minimum jitter).

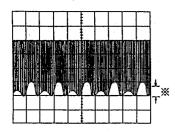

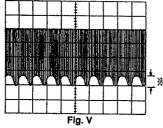


Fig. V

* Align for minimum jitter.

Fig. V1

Minimum jitter.

[9]Play confirmation after adjustment

- · Skip search confirmation
- 1. Play a commercial music disc.
- 2. Operate the skip button to check the skip search function (forward and reverse).


· Manual search confirmation

- 1. Play a commercial music disc.
- Push the manual search button to check smooth manual search operation at low and high speeds (forward and reverse).

Defect check

- Play the test disc. (ABEX Vertical Deviation Test Disc TCD-731R, track number 1)
- Play the middle sections of Vertical Deviation test disc and check the player operation for track jumping and noise.

■ Connections for Focus Gain alignment

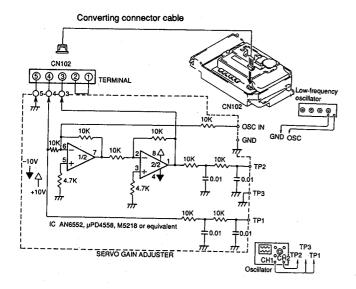

■ Connections for Tracking Balance alignment

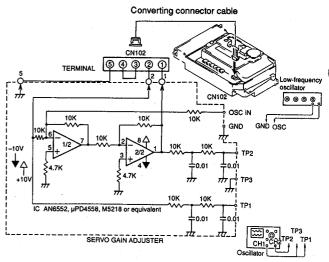


Fig. W

Fig. X

CIRCUIT DESCRIPTION

1. APC CIRCUIT

A semiconductor laser is used as the light source for the optical pickup. As the output from the semiconductor laser changes radically with changes in temperature, a circuit must be provided to stabilize this output. For this purpose, a monitor diode which detects the optical output of the laser diode is used in the semiconductor laser.

As the laser diode emits light from its bonded surface, light is emitted both in front and behind. The light emitted behind is monitored with the monitor diode installed on its rear surface, and the optical output is thus controlled. The light emitted in front becomes the light source for the pickup.

Fig. 1 shows the APC circuit.

When the temperature rises and the optical output decreases, the monitor diode current (IS) decreases, the electric potential of IC101 pin 7 rises, the base current of the driving transistor increases, and the laser diode current increases. This causes the reduced optical output to return to its former level.

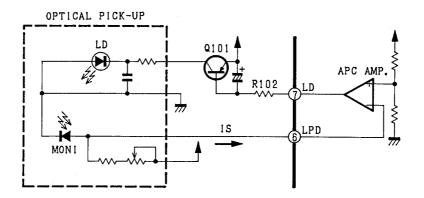


Fig. 1

2. FOCUS SERVO

2-1 Optical pickup

This set employs a one-beam optical pickup comprised of four division photodiodes, A through D as shown in Fig. 2. The four photodiodes (A through D) at the center provide focus error detection by using their property to allow the beam to focus into a round image only at a certain point.

The sums of outputs from diagonal two elements of four division photodiodes (A+C and B+D) are compared by the differential amplifier in IC101 to detect the shape of the beam image.

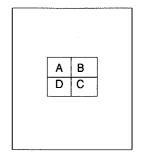


Fig. 2

2-2. Focus error detecting operation

The reflected laser beam from a disc is polarized 90° with the half mirror and sent to the concave lens. The beam passed through this concave lens is then sent to the four division photodiodes and focuses into an image whose shape varies with the distance between the disc and the objective lens. Such change in the beam shape causes the current flowing from the photodiodes to vary.

Shown in Fig. 3 is the principle of the focus error detection.

The currents from the photodiodes (A+C and B+D) are applied to pins 7 and 8 of IC101 and converted to voltage by RF I-V amplifiers (1) and (2) included in IC101.

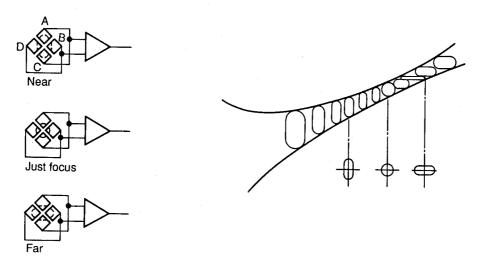



Fig. 3

2-3. Focus servo control operation

The focus error signal, after begin converted to voltage by the RF I-V amplifier, is transmitted to the operation amplifier in the IC and output from pin 15.

When the disc to objective lens distance is in just focus, the beam forms a true round. In this state, the beams applied to four elements of four division photodiodes becomes equal and thus the output provided then is 0 (zero). When the disc to objective lens distance is too close (near focus), the beam is reflected divergently to form an oval in crosswise direction. In this state, the outputs provided from photodiodes A and C are higher than those from B and D, resulting in negative (–) output voltage. On the other hand, when the distance is too far (far focus), the beam is reflected convergently to form an oval in longitudinal direction. Then the outputs from photodiodes B and D are higher, resulting in positive (+) output.

The output voltage (focus error signal) from pin 15 of IC101 passes through IC102, in from pin 8 and out from pin 9, and IC101, in from pin 16 out from pin 23, and IC103, in from pin 6 out from pin 12 as shown in Fig. 4. It is amplified in each IC and fed to the focus coil which then drives the objective lens of the pickup.

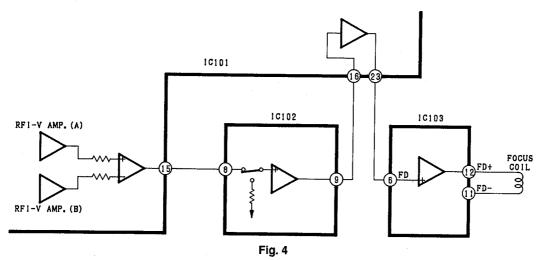

2-4. CD Tracking Requirements

The Compact Disc does not have grooves like an ordinary phonograph record. Instead, its information is contained in the pattern of indentations called "pits" that run in a spiral "track" from the inside to the outer edge of the disc. The information is read by detecting the presence and absence of pits using laser beam light reflected off the pit area. Since there is no physical contact, a sophisticated detection and servo system must be used to keep the laser beam focused on the pit track. It is this "tracking system" that will be discussed in these pages.

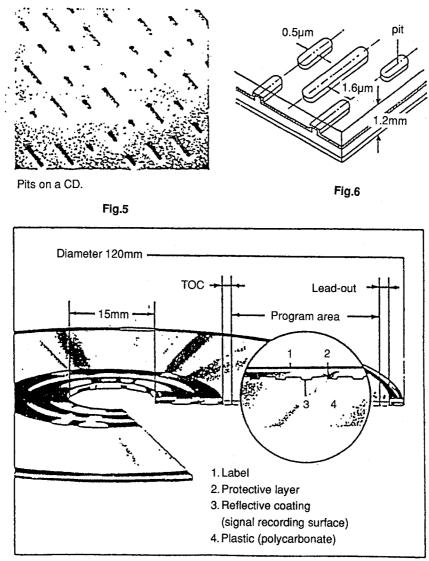


Fig.7

2-5. Precision Required for Tracking


The pit tracks are extremely narrow and close together. If a CD was magnified to the size of a baseball field, the pit tracks would be about 1.6mm apart. The tracking system must be able to keep the laser beam on the correct track in this microscopic world even when matters are complicated by external vibrations, scratches, fingerprints, and so on.

Certainly the method of detecting the pit track is basic to a tracking servo system. But specialized servo technology, lens drive technology, and chassis construction technology also help determine the system's ability to overcome obstacles such as disc defects, fingerprints, and vibrations.


Outstanding "playability" has been achieved in CD changer by just such a blend of technologies. One could call it a crystallization of the development and manufacturing know-how gained from experience.

• 1-Beam methods

1-beam optical pickup construction

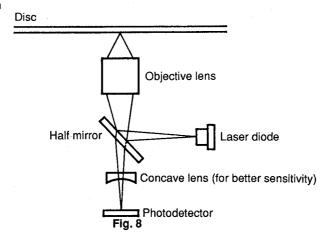

Principle of time difference detection method of single-beam tracking

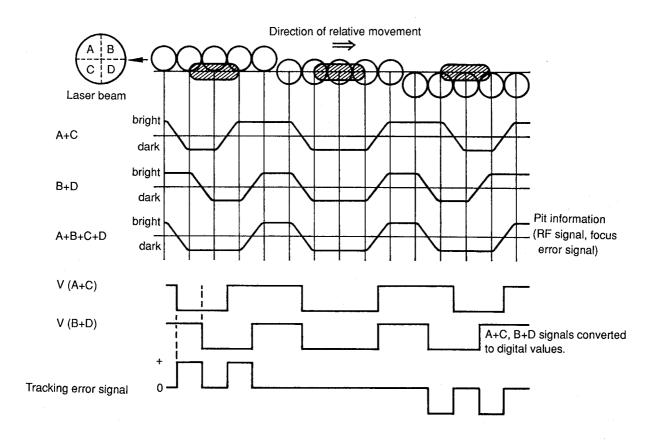

A positive directional pulse is generated if V (A+C) comes before V (B+D). A negative directional pulse is generated if V (A+C) comes after V (B+D).

Beam is too far left.

Main beam is centered on pit track.

Move beam right.


Move beam left.

Fig. 9

2-6. Tracking servo control operation

When a tracking error signal is detected by photodiodes A through D, it is fed to pins 2 through 5 of IC101 respectively as shown in Fig. 10. In IC101, the signal is converted into voltage by the I-V amplifier, transmitted to the tracking error amplifier and output through pin 13 and 14.

While it passes through IC102, in from pin 1 and 2 and out from pin 6 and IC101, in from pin 17 and out from pin 22, and IC103, in from pin 7 and out from 9 and 10, it is amplified in each IC and sent to the tracking coil to adjust pickup so that the amount of track shift is reduced as closely to none as possible.

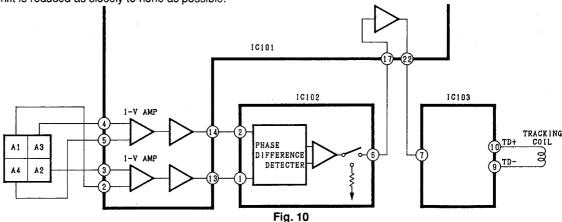

3. REGENERATIVE CIRCUIT

3-1. RF circuit

RF signal from optical pickup are applied to pin 1 of IC101 and amplified, and out from pin 40.

While it passes through IC101, in from pin 39 and out from pin 35, and IC102 in from pin 12 and out from pin 21, it is amplified in each IC and sent to the Digital Signal Processor IC201.

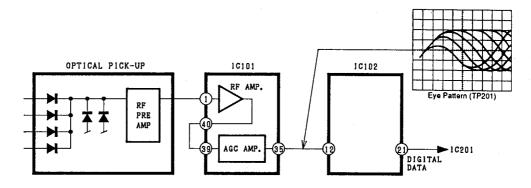


Fig. 11

3-2. EFM demodulation, error correction, serial/parallel conversion

EFM demodulation, error correction and serial/parallel conversion are performed by the internal circuitry of IC201. The digital signal from pin 21 of IC102 are sent to pin 3 of IC201, then demodulated from 14 bits to 8 bits by EFM readjustment. At the same time any error, if found, is corrected (CIRC) and the signals are sent to the D/A converter interface. After that, they are output as 18-bit digital signals from pins 26, 27 and 28 of IC201 and fed to the D/A converter of IC701.

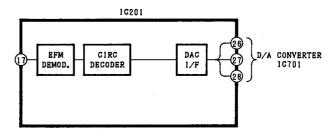


Fig. 12

3. 1-bit D/A Converter

Conventionally, high-precision D/A conversion was mainly carried out using resistor ladder systems. There was, however, one main drawback with these systems, which was that zero cross distortion was likely to be generated. To achieve production of a high-precision D/A converter with a minimum amount of zero cross distortion, it would be necessary to carry out complicated and bothersome processes such as laser trimming processing. In addition, use of such D/A converter would require a sampling-and-hold circuits(or de-glitcher circuit) and an intricate analog filter with special characteristics when mounting it. To solve these difficulties, we used a 1-bit D/A converter with 3rd order noise shaping technology (IC701: MN 6471M).

3-1. Features and Configuration of MN6471M

- Features 1. No zero cross distortion
 - 2. No non linear distortion
 - 3. Built-in 4 times oversampling digital filter
 - 4. 2 channels (left and right) built in
 - 5. 4DAC configuration possible
 - 6. Single 5V power supply operation

The block diagram is shown in Fig. 13. The MN6471M is configured of a digital filter, a 3rd order noise shaping circuit, and a PWM.

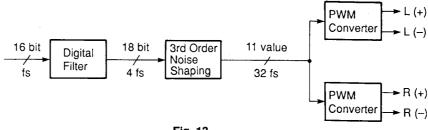


Fig. 13

3-2. Configuration of MN6471M

Fig. 14 shows the configuration of the MN6471. The sampling frequency of the input data is expressed in fs, so the 3rd order noise shaping circuit operates at 32fs. This means that a 32-times oversampling filter is required. In this LSI, however, oversampling is carried out first at 4fs in the first digital filter, and following that, a 0 order hold takes place in the 3rd order noise shaping circuit. This enables conversion of the 4fs signal to a 32fs signal.

The digital filter, using 384fs as clock signals, and the noise shaping section, uses 64fs, carry out time division processing on the data for the left and right channels. The PWM section, using 768fs as a clock signal, carries out signal processing for the left and right channels independently.

In the noise shaping section, the 19-bit 32fs signal is converted to 11 values and pulse width modulation (PWM) in carried out on these signals in the PWM section. D/A conversion is carried out in this way. Following are the descriptions of the various blocks.

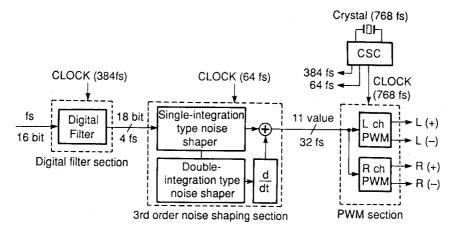


Fig. 14

4. Digital filter

Fig. 15 shows the signal data of an audio signal up to 20kHz that has been digitalized, along with the frequency distribution of the signal data. The graphs show the conditions for a sampling frequency of 44.1kHz, plus its doubled frequency, 88.2kHz, and its quadrupled frequency, 176.4kHz.

As the figure shows, for the same signal up to 20kHz, the noise portion of the digitalized signal component tends to shift toward the higher range of the signal if the sampling frequency is increased. However, at any sampling frequency, the volume of necessary audio signal information remains constant up to 20kHz. This allows certain important results to be derived; that is, if the information represented in section (a) is obtained, then it should be possible to create a signal in the form shown in (b) or (c).

When the noise caused by sampling shifts to the higher frequency range, as shown in (b) or (c), the low pass filter characteristic to eliminate noise during re-conversion to an audio signal need not be steep but can be rather gradual as shown. It is comparatively simple to provide a high audio quality low pass filter of such characteristic with little phase fluctuation or distortion.

The question now becomes how to make a signal sampled at 44.1kHz resemble one sampled at a much higher frequency. Fig. 16 shows the signal sequence sampled at the same 44.1kHz as in Fig. 15 and its frequency distribution.

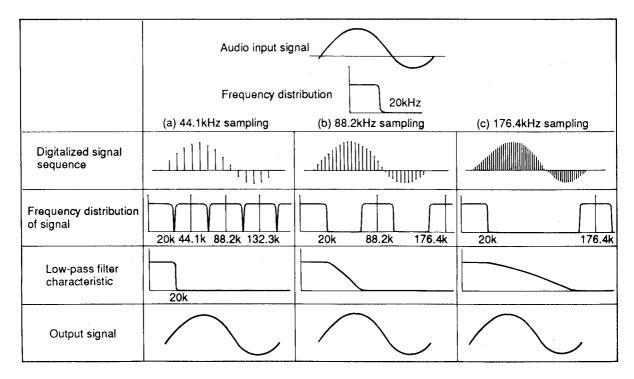


Fig. 15


If the frequency is to be doubled as the first step in increasing the sampling frequency of the signal, zero-level data is added between the data marked with X in Fig. 16(b). In the original signal sequence sampled at 44.1kHz, there are data only at the points of the sampling timing, while the intervals between those points have all been made zero-level. Introducing zero data in these intervals does not change the original data in any way, nor is the frequency distribution altered. Only the sampling frequency is doubled.

Passing this data in its modified form through a digital filter with the characteristic shown in Fig.16(c) causes the portion corresponding to N1 to be eliminated, resulting in a signal sequence with the frequency distribution shown in Fig.16 (d). This signal sequence possesses exactly the same shape as that obtained for the signal in Fig. 15(b), sampled at 88.2kHz. In other words, this method enables the sampling frequency to be doubled.


The digital filter used in this unit is a Finite Inpulse Response type. Its circuit diagram is shown in Fig. 17.

The sampling frequency of this unit has been quadrupled, and the phase characteristic has been improved by using a softer analog low-pass filter.

(a) Signal sampled at 44.1kHz

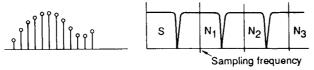

(b) Zero-level signals at the X marks increase the sampling frequency only, without changing the energy distribution of the frequency.

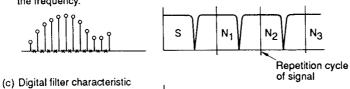



(d) Signal sequence that has passed through a digital filter

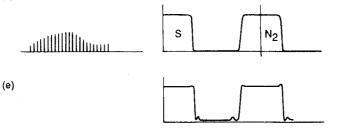


Fig. 16

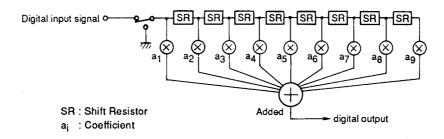


Fig. 17

5. Noise shaper

a) Single-integration noise shaper The block diagram is shown in Fig. 18.


According to the figure, the relation between input X and output Y is as follows:

$$Y = X + (1 - Z^{-1}) Vq \dots (1)$$

The quantization error Vq is a random value, and (1-Z-1) expresses the differential characteristic. Thus, according to equation (1), the spectrum of the quantization error Vq for the single-integration noise shaper has a characteristic of 6dB/oct, and the lower the frequency is, the greater the attenuation becomes. (This is because the noise distribution can be changed by the noise shaper).

b) Double-integration noise shaper

The block diagram is shown in Fig. 19.

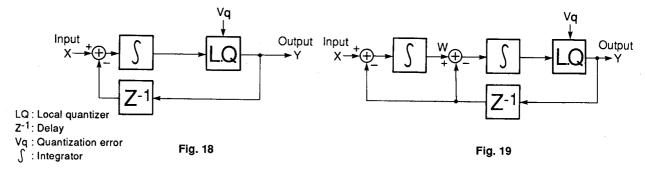

In Fig. 19, the path to the output seen from W has a configuration identical to that of the single-integration noise shaper, so that relation between W and Y is:

$$Y = W + (1 - Z^{-1}) Vq \dots (2)$$

The relation between X and Y is:


$$W = \frac{1}{1 - Z^{-1}}(X - Z^{-1}Y) \dots (3)$$

And the result obtained from above equations (2) and (3) is:

$$Y = X + (1 - Z^{-1})^2 Vq \dots (4)$$

Comparison with equation (1) shows that the term $(1 - Z^{-1})$ is a square of itself. In other words, with the double-integration noise shaper, the spectrum of the quantization error Vq is attenuated at a slope of 12dB/oct.

Fig. 20 shows the output spectrum of the noise shaper.

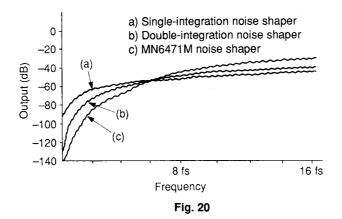

5-2. 3rd order noise shaper

The block diagram of the 3rd order noise shaper is shown in Fig. 21.

This configuration shows that the first stage uses a single-integration noise shaper and the following stage uses a double-integration noise shaper. The quantization error of the first stage is input at the second stage.


In this configuration, single-integration and double-integration noise shapers are connected at several stages, and the quantization error of the previous stage is quantified again at the following stage, so that the quantization error included in the output of the previous stage is negated. In this way, compensation is carried out.

In this noise shaping circuit, the input is expressed as X, the output as Y, and the re-quantized error as Vq, and their relation for each order is shown in the following equations.

(1st order)
$$Y = X + (1 - Z^{-1}) Vq$$

(2nd order) $Y = X + (1 - Z^{-1})^2 Vq$
(3rd order) $Y = X + (1 - Z^{-1})^3 Vq$

In noise shaping, as the order of the transfer coefficient called $(1 - Z^{-1})$ becomes larger, the noise in the 1/2 fs audio band moves higher in the frequency range. The result is that, within a narrow audio band, an 18-bit performance can be obtained even from a 1-bit DAC.

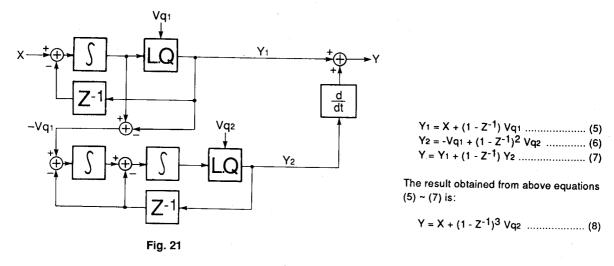

6. PWM Output Section

In the output from the MN6471M noise shaper, the 11 value data of the 32fs is output. In the PWM section, pulse width modulation (PWM) is carried out on that signal, enabling D/A conversion. Fig. 22 shows the PWM section of the MN6471M.

The 11 value digital data output from the noise shaper is converted (1-bit data stream) to pulse signal with 11 pulse widths precisely controlled by the crystal OSC and output as an analog signal. In the PWM output section, signals from both left and right channels are output as differential output so that the synchronous-phase noise is eliminated and the 2nd order high-frequency distortion is reduced.


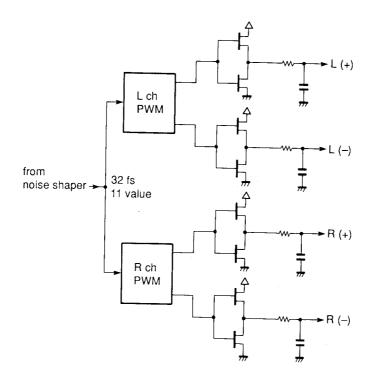



Fig. 22

7. Audio Circuit

Fig. 23 shows a block diagram of the audio circuit.

The outputs from Pin 14 (OUT L (+)) and Pin 11 OUT (-)) pass through the 2-step LPF which consists of C601, R601 and R603 for one and C603, and R607 for the other, and the high frequency component of the PWM output from DAC is removed. Then the (+) side component of the PWM is inputted directly, and its (-) side component through the inverted darligton buffer circuit consisting of Q301 and Q303 to the discrete circuit amplifier consisting of Q305, Q307, Q309 and Q311, where they are synthesized into an approximately 2V signal voltage which is then output to the LPF circuit of the next stage.

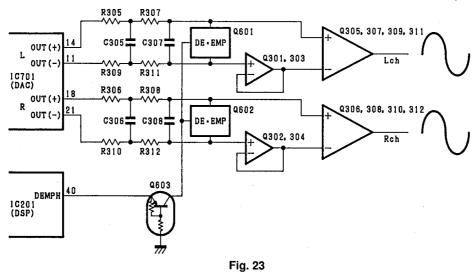

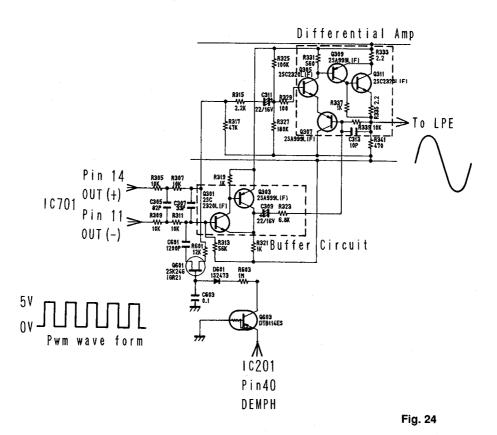


The emphasis data from the disc is output through the terminal (Pin 40) of IC201. When a disc to which emphasis is applied is playback, this terminal is set high and Q603 turns ON. Following this, Q601 is also turned ON. Then connected C601 and R601 provide the DE-Emphasis characteristics. Fig. 24 shows the buffer circuit and the differential amplifier. (Light channel only)

8. Low-pass filter


Fig. 25 shows a final-stage circuit which includes a low-pass filter and other elements.

The portion of Fig. 25 enclosed by the broken line is 3rd-other active LPF. This LPF causes noise in the high range to be cut. Q313 and Q315 (Left channel) and Q314 and Q316 (Right channel) are buffer circuit of inverted darlington configuration. Q317 and Q318 are FET controlled constant current circuits. Q50 and Q51 are power muting circuit.

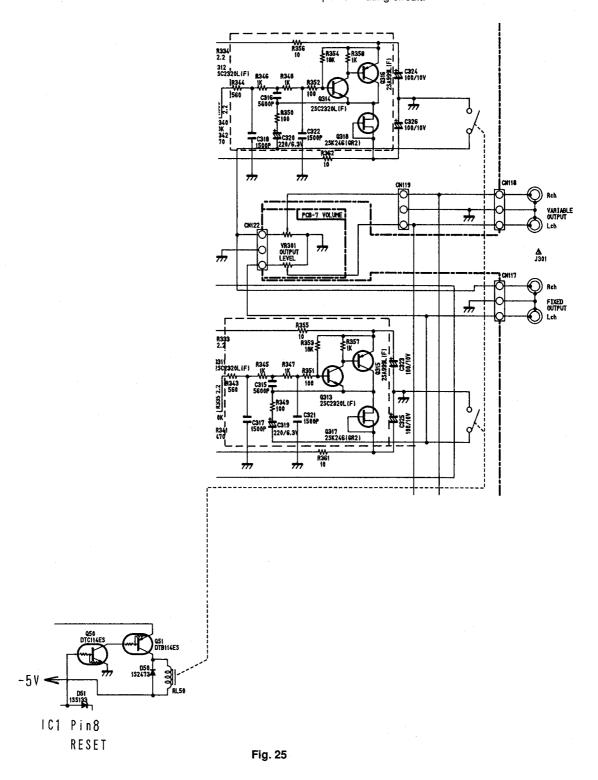


IC BLOCK DIAGRAM


IC1: M5290P Voltage Regulator

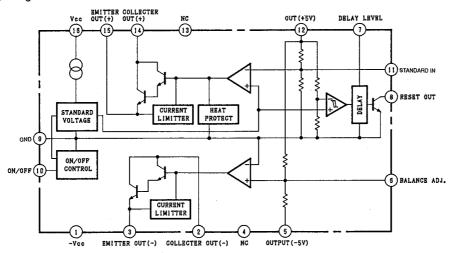


IC101, 501: NJM4565D OP-Amp., Headphones Amp.

IC102: BA6247N Reversible Motor Driver

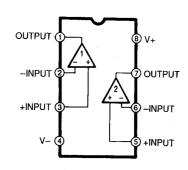

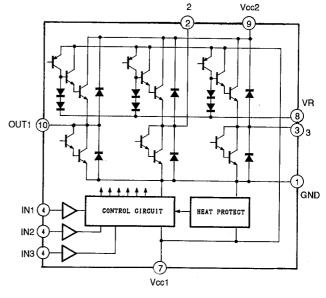


IC103: LA6515 Power OP-Amp.

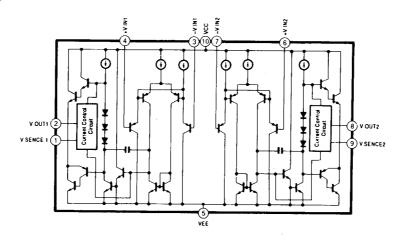


IC201: MN6626


Digital Signal Processor

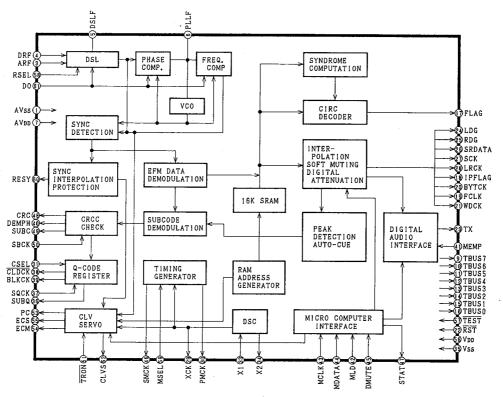

IC401: MN187124L Microcomputer, System Control and FL Drive

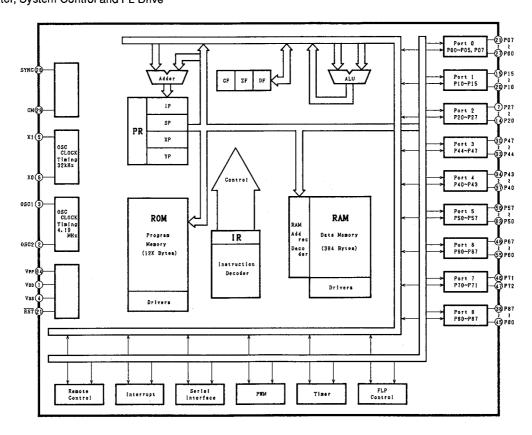


IC402: T74HC04F Hex Inverter

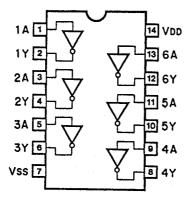


IC701: MN6471M

Digital Filter & D/A Converter

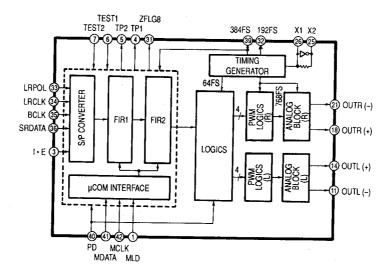


IC BLOCK DIAGRAM IN CD MECHANISM


IC101: AN8373S Servo Amp.

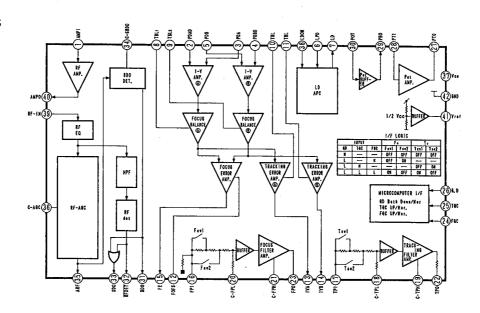

IC102: AN8374S Servo Processor

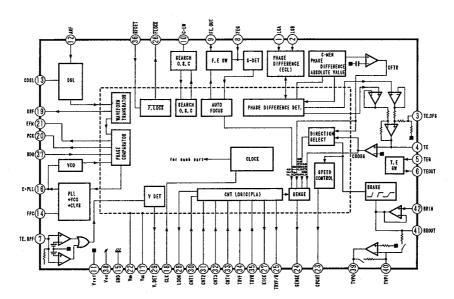



IC103: AN8377N Focus/Tracking/Traverse Coil Drive

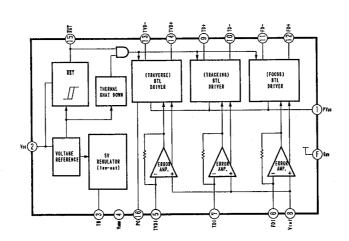



GENERAL UNIT PARTS LIST


Ref. No.	Part No.	<u>Description</u>	Ref. No.	Part No.	Description
AA	A412-TL8600A	CABINET TOP ASSEMBLY	223	2240-7381	HOLDER, DUST COVER
AA	A412-TL8600B	CABINET TOP ASSEMBLY	224	2240-7382	HOLDER, OPEN LEVER
AB	A442-TL8600A	CABINET FRONT ASSEMBLY	225	2240-7383	HOLDER, FRONT FL (x2)
AC	A319-TL8600A	LEG ASSEMBLY	226	2240-7383	HOLDER, TOP FL (x2)
AD	B622-TL8600A	GEAR ASSEMBLY, DAMPER	227	2240-7384	HOLDER, AC CORD
AE AE	A424-TL8600A	CABINET BOTTOM ASSEMBLY	228 230	2240-R0101	HOLDER, WIRING (x11)
AE AG	A424-TL8600B B219-TL8600A	CABINET BOTTOM ASSEMBLY COM	231	2360-7024 2402-055	SPECIAL BOSS, MECHA LOCK PLASTIC WASHER, GEAR (x4)
AH	B601-TL8600A	METAL FITTING ASSEMBLY, PICK-UP ARM SHAFT ASSEMBLY	232	2403-702	WASHER, POLY
Al	B211-TL8600A	CHASSIS ASSEMBLY	233	2403-401	POLY WASHER, PLANETARY GEAR
AJ	B219-TL8600B	METAL FITTING ASSEMBLY, HINGE	234	2403-702	POLY WASHER (x3)
AK	B240-TL8600A	HOLDER ASSEMBLY ®	235	2601-7194	SHAFT, GEAR
AK	B240-TL8600B	HOLDER ASSEMBLY	236 238	2601-7198 2611-00301	SHAFT, ROLLER (x5)
AL 022	B674-TL8600A 2132-R0131044	SLIDER ASSEMBLY SPACER (x2)	239	2617-065	DRUM, PULLEY WHEEL, CLAMPER
023	2327-301649	SCREW, BND+ (3x16mm)(x2)	240	2618-00101	MOTOR PULLEY, MOTOR
024	2440-7017	NUT, SPECIAL	241	2622-062	PLASTIC GEAR, PLANETARY
129	1756-21301	LABEL, TRANSPORT LOCKFNG	242	2622-063	PLASTIC GEAR, PULLEY
130	1756-11123	LABEL, TRANSPORT LOCKFNG	243	2622-064	PLASTIC GEAR, IDLER (x2)
133	1319-02301	LEG, SHORT	244 246	2622-065 2642-01468	PLASTIC GEAR, DUST COVER
134 136	1319-03401 1412-19202	LEG, LONG (x3) CABINET CABINET	247	2671-001	BELT, MOTOR PULLEY CAM, UP/DOWN
136	1412-19204	CABINET ®	248	2674-7021	SLIDER, UP/DOWN
137	1742-07501	ORNAMENT, CABINET	251	2672-7046	LEVER, GEAR
138	1424-33401	CABINET BÁCK, BOTTOM	252	2672-7047	LEVER, ROLLER
139	1442-25902	PANEL, FRONT	253	2672-7048	LEVER, STOPPER
140	1472-02301	DUST COVER, TOP	254 255	2672-7049 2672-7050	LEVER, DOOR OPEN
141	1472-02401	DUST COVER, PICK-UP ARM	255 257	2672-7050 2651-2101737	LEVER, OPEN BUTTON SPRING, BASE MECHA (x2)
142 144	1512-07102 1511-21701	PLATE, TURN TABLE PLATE, FRONT FL	258	2651-2101738	SPRING, BASE MECHA
145	1511-21802	PLATE, TOP FL	259	2651-2101710	SPRING, GEAR
147	1532-20301	WINDOW, FRONT	261	2651-2101727	SPRING, OPEN BUTTON
149	1632-20401	ROTARY KNOB, OUTPUT LEVEL	262	2651-053	SPRING, OPEN LEVER
151	1662-63001	PUSH BUTTON, POWER	263	2651-054	SPRING, STOPPER LEVER
152	1662-63101	PUSH BUTTON, DOOR RELEASE	264 265	2651-055 2651-060	SPRING, ROLLER LEVER
153 154	1662-63202 1662-63301	PUSH BUTTON, DISC NO. PUSH BUTTON, TRACK NO.	266	2652-136	SPRING, POWER BUTTON LEAF SPRING, PICK-UP ARM
155	1662-63401	PUSH BUTTON, DISPLAY	267	2652-129	LEAF SPRING, UP/DOWN
156	1662-63501	PUSH BUTTON, DISC SKIP	268	2401-033	METAL WASHER (x3)
159	1744-06701	ORNAMENT, LONG LEG (x3)	269	2401-035	METAL WASHER (x5)
160	1742-07601	ORNAMENT, FRONT	270	2401-068	METAL WASHER
161	1341-**568	NAME PLATE, PRODUCTION DATE	271 272	2459-3006511 2459-3004511	PLASTIC RIVET PLASTIC RIVET, LED P.C.B
162 163	1756-03305 1756-09602	LABEL, LASER CAUTION LABEL, LASER CAUTION	273	2461-402	E-STOPPER (x4)
164	1756-CSA	LABEL ®	274	2461-302	E-STOPPER
167	1756-11801	LABEL, LASER WARNING	275	2461-604	E-STOPPER (x2)
168	1751-01018	LABEL, UL ®	281	2327-R0126064	, , , , , , , , , , , , , , , , , , , ,
170	2111-11774	FELT, DUST COVER	282		SCREW, BND+ (3x5mm)(x2)
172	2111-1388	FELT, MAGNET	283 285	2347-261027	SCREW, BND+ (3x8mm) SCREW, BND T+ (2.6x10mm)
173 174	2111-245 2114-017	FELT, LONG LEG (x3) BUSHING, GUIDE ROLLER (x5)	287	2347-300547	SCREW, BND T+ (3x5mm)(x5)
175	2114-018	BUSHING, BASE MECHA (x3)	288	2347-301047	SCREW, BND T+ (3x10mm)(x2)
176	2114-019	BUSHING, GEAR CHASSIS (x3)	290		SCREW, BND T+ (2.6x5mm)(x2)
178	2132-R0131044		291	2347-R0126082	SCREW, BND T+ (2.6x8mm)(x3)
179	2132-7119	SPACER, LED	292		SCREW, BND T+ (2.6x12mm)(x20)
180	2132-7119	SPACER, PHOTE SENSOR	293 294		SCREW, BND T+ (3x10mm)(x27) SCREW, BND T+ (3x16mm)(x6)
181 182	2132-7168 2132-R0131035	SPACER, MOTOR SPACER	296		SCREW, BND T+ (3.76mm)(x6)
183	2211-7315	CHASSIS, FRONT	297	2347-R0130084	
184	2211-7316	CHASSIS, GEAR	300		SCREW, BND T+ (4x16mm)(x8)
185	2216-7192	SHIELD PLATE, HEADPHONES	302	2557-300629	SCREW, B SPW+
186	2216-7193	SHIELD PLATE, OUTPUT	303 304		SCREW, BND T+ (2.6x8mm)(x6) SCREW, BND T+ (3x6mm)(x9)
187 189	2216-7196 2218-R0130	SHIELD PLATE, CABINET FIX BRACKET (x4)	304 308		_CD MECHA ASSEMBLY
190	2218-7038	FIX BRACKET, TOP FL	309	4291-028	MAGNET, CRAMPER
191	2219-8306	METAL FITTING, PICK-UP ARM	832	2440-62	NUT, HEX
192	2219-8307	METAL FITTING, TABLE SHAFT	Δ P1		AC CORD W/PLUG, AC120V
193	2219-8308	METAL FITTING, MAGNET	∆ P1	4161-03701220	AC CORD W/PLUG, AC220V/240V
194	2219-8309	METAL FITTING, OUTPUT LEVEL	NOTE		
195 196	2219-8310 2219-8311	METAL FITTING, PANEL CABINET METAL FITTING, FRONT CHASSIS		RELATED COMPO	NENT. USE ONLY EXACT
197	2219-8312	METAL FITTING, MAIN P.C.BOARD (x2)		EMENT PART AS S	
199	2219-8313	METAL FITTING, DUST COVER, L			
200	2219-8314	METAL FITTING, DUST COVER, R			
201	2219-8315	METAL FITTING, HINGE (x2)			
202	2219-8316	METAL FITTING, HINGE BASE (x2)			
203 205	2219-8337 2401-0841	METAL FITTING, AC CORD METAL WASHER, HINGE (x4)			
205 206	2419-800	WAVE WASHER, HINGE (x4)			
207	2601-7193	SHAFT, HINGE (x2)			
208	2651-052	SPRING, HINGE (x2)			
214	2222-7217	HEAT SINK			
217 219	2240-7378 2622-066	HOLDER, DAMPER BASE GEAR, PLASTIC, DAMPER			
221	2240-7377	HOLDER, CD MECHA			
222	2240-7380	HOLDER, MECHA LOCK			

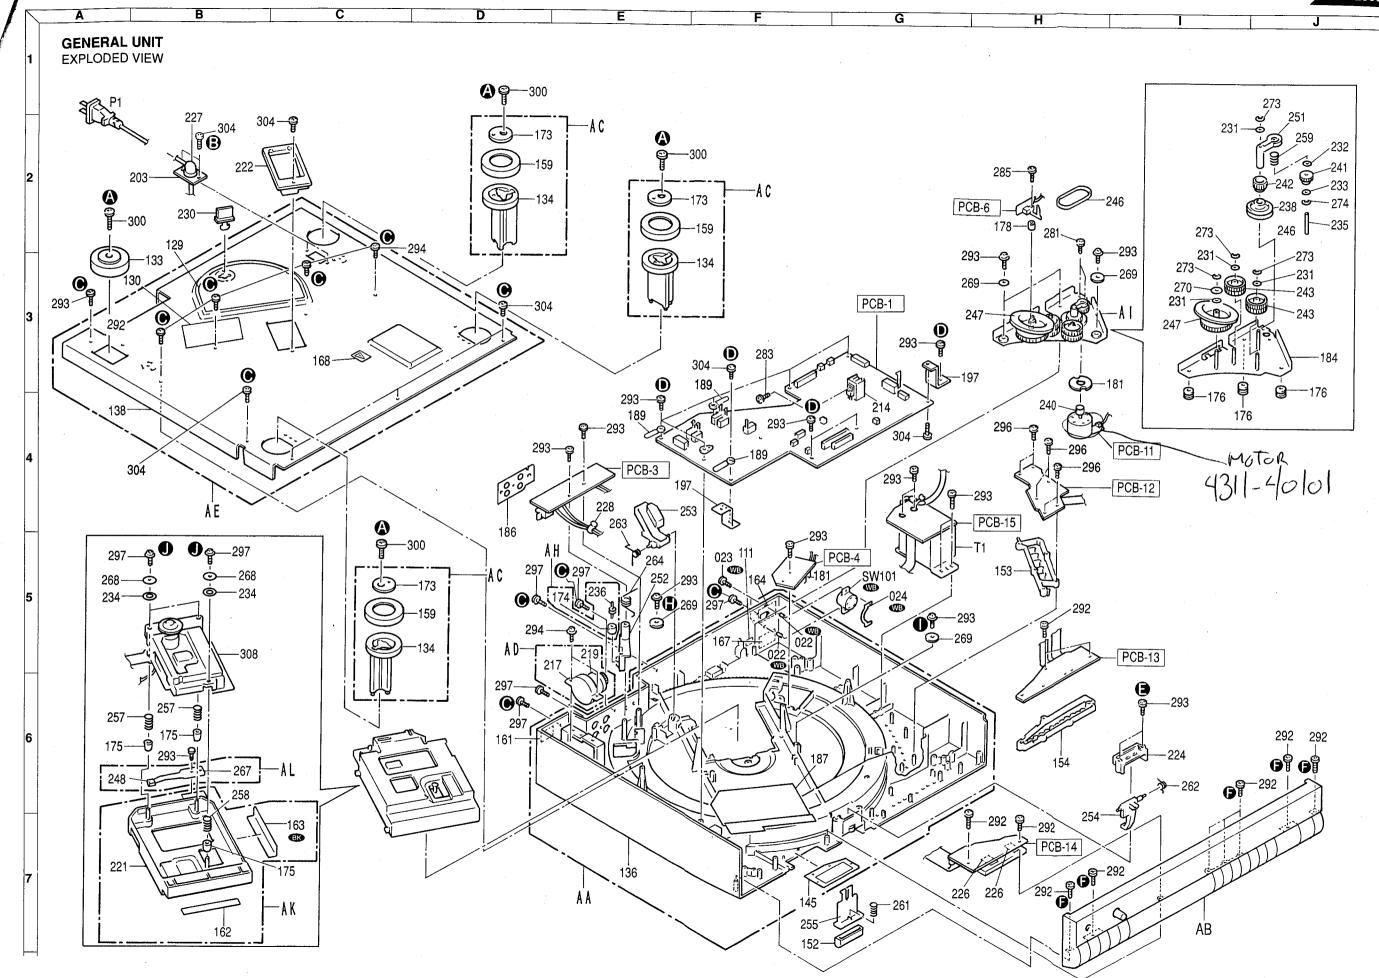

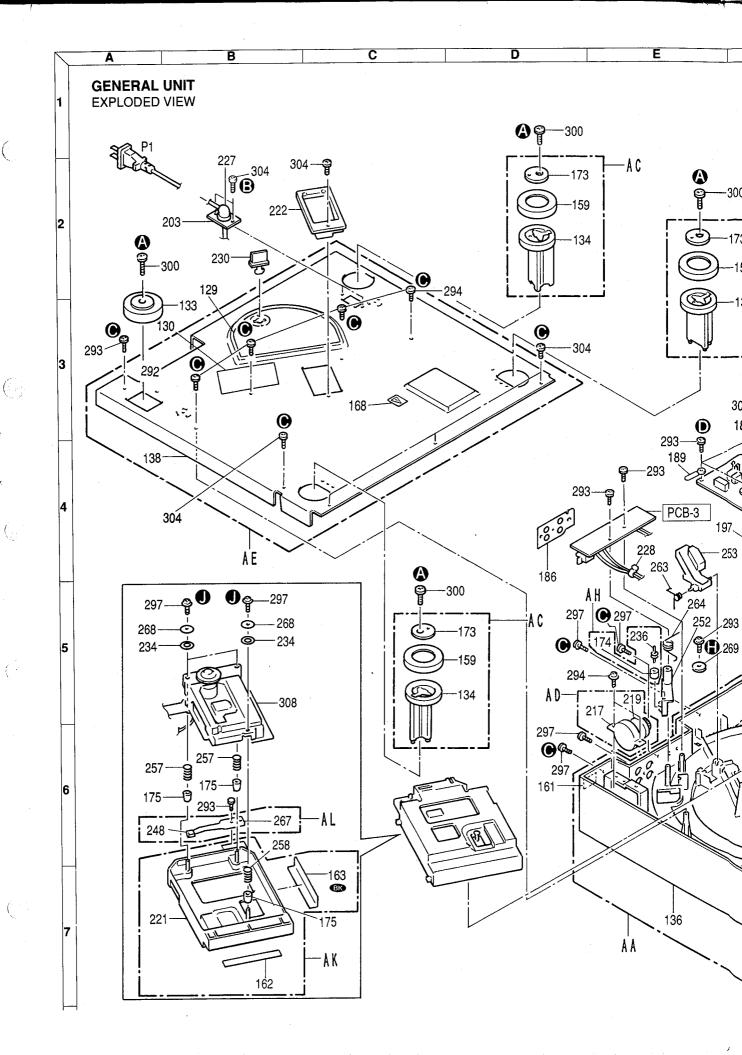


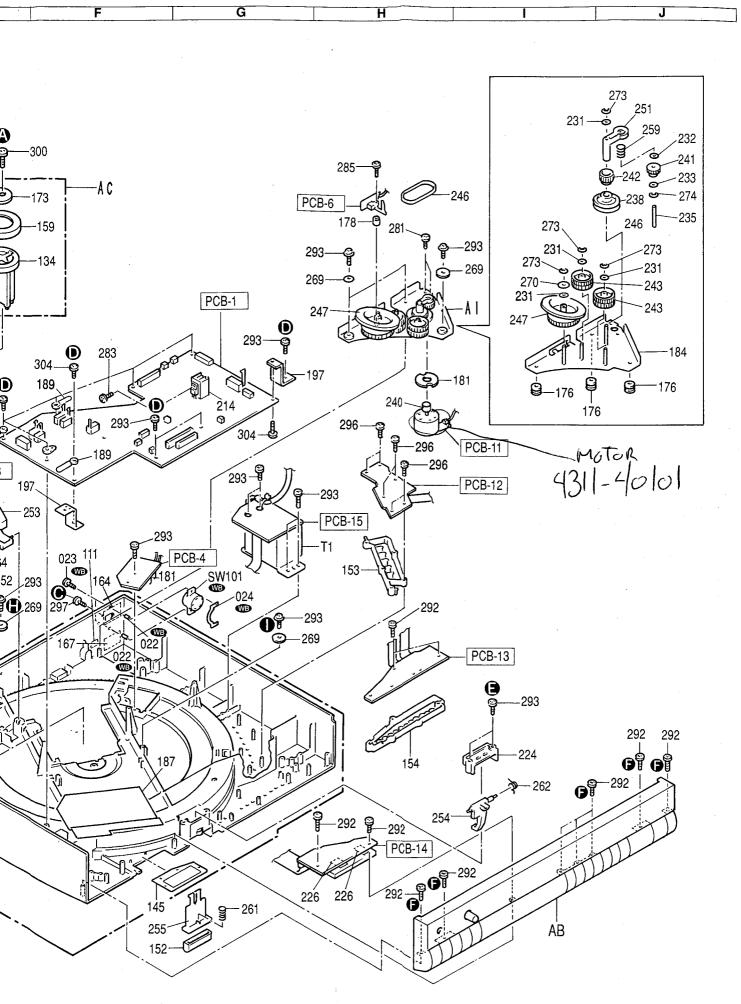


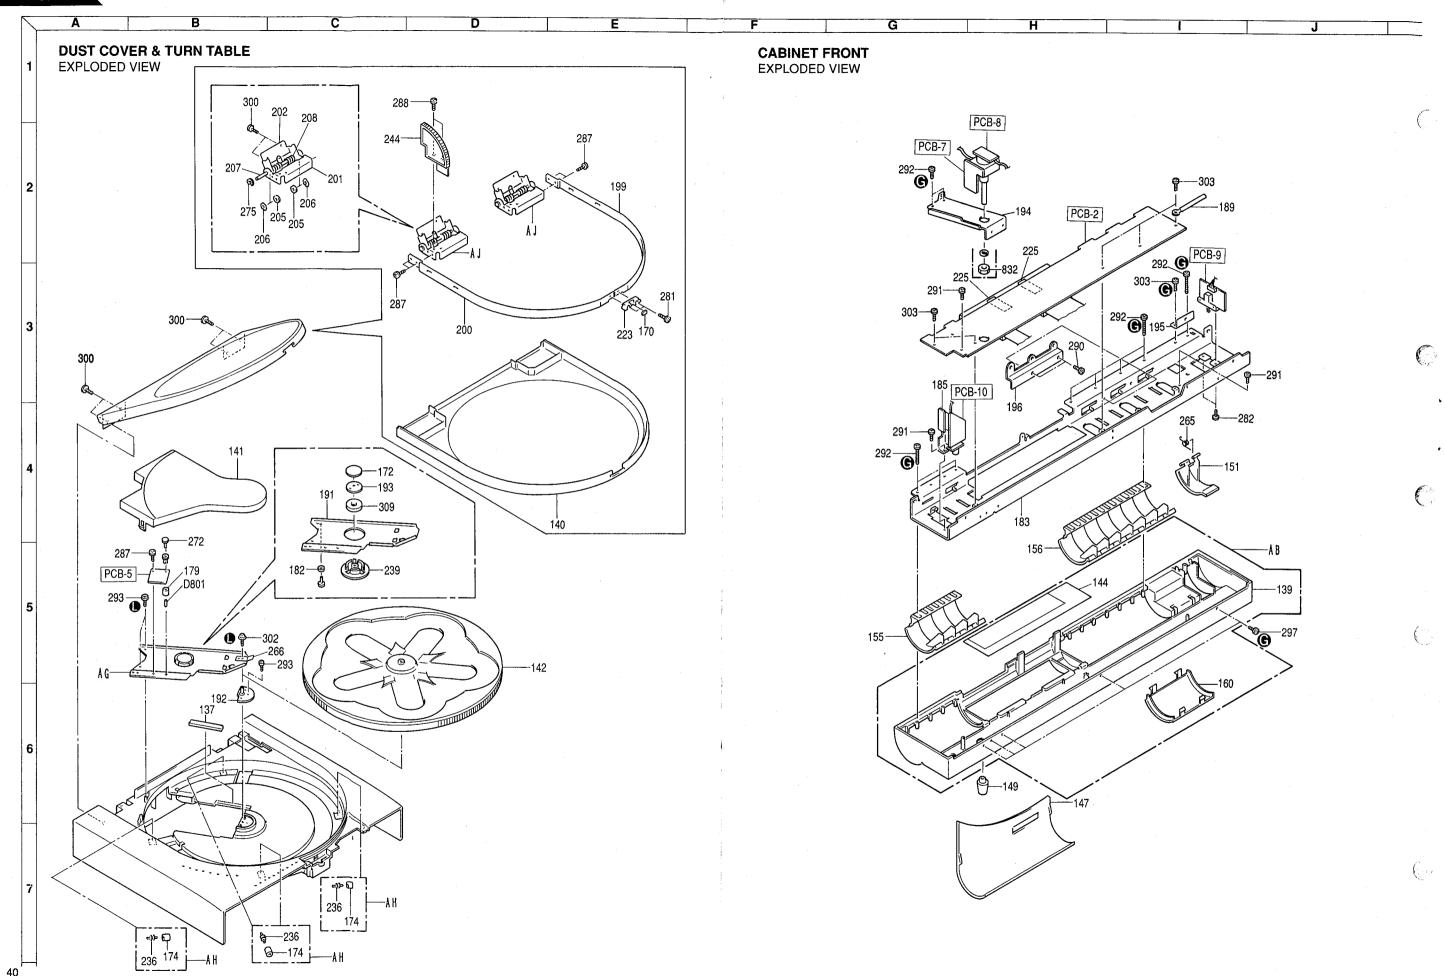

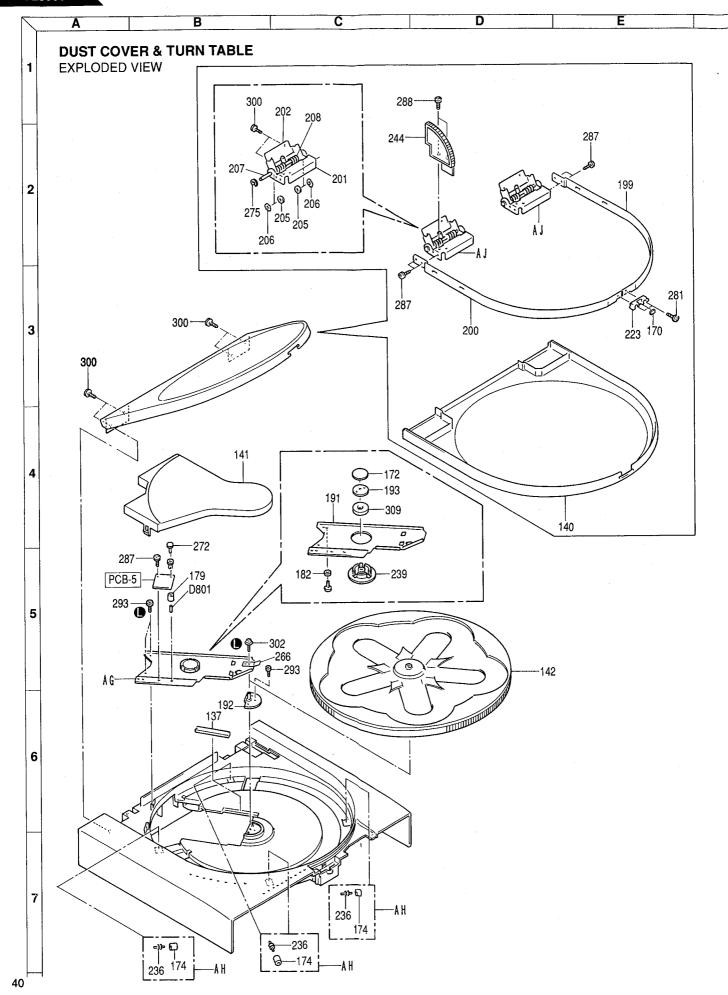


G

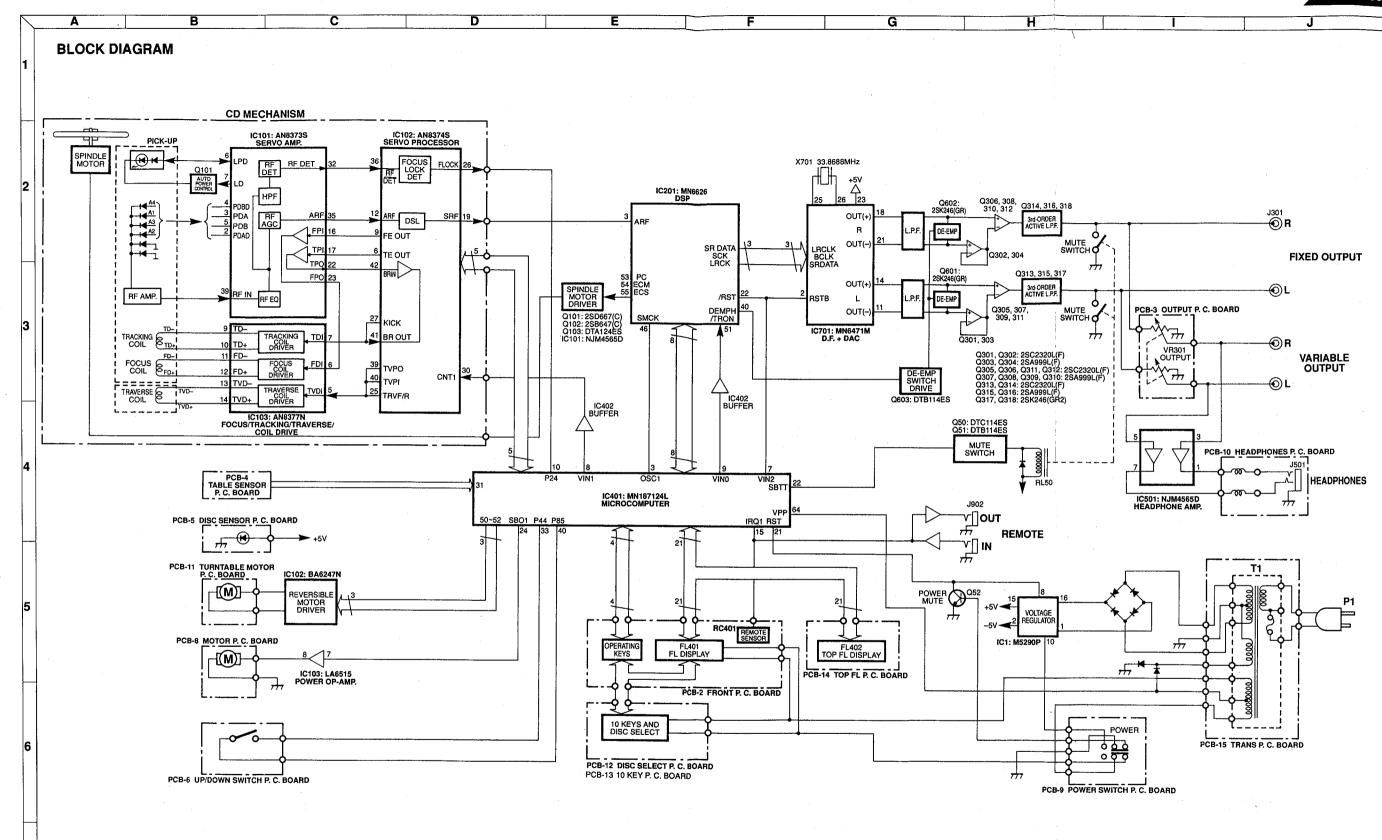


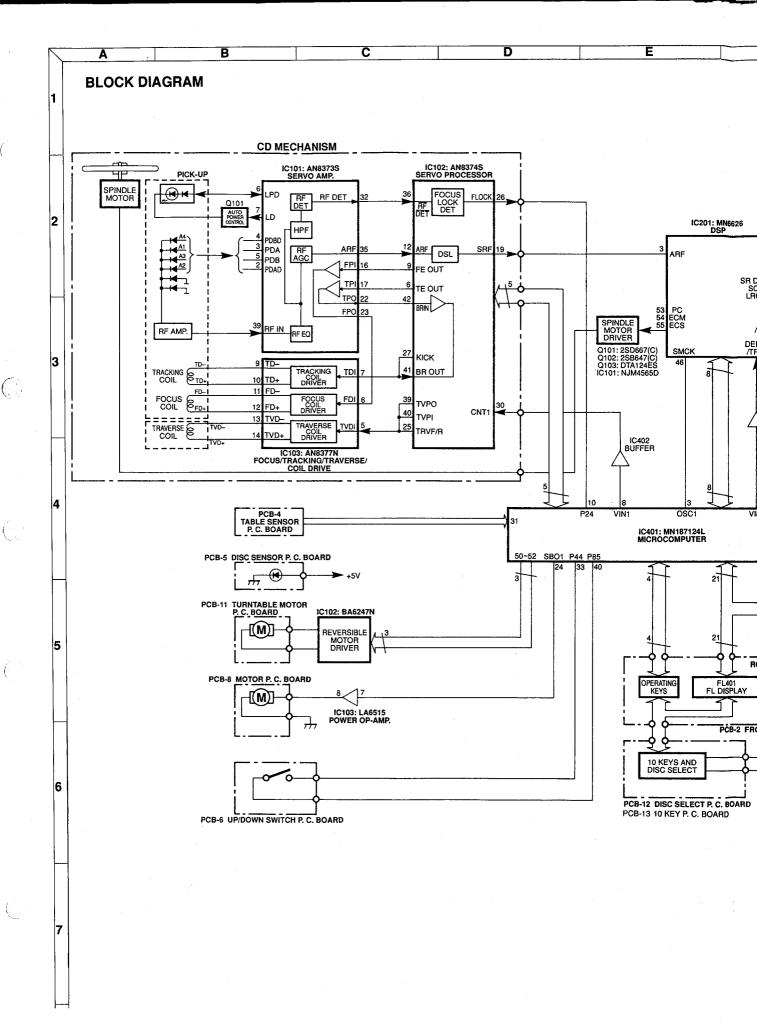



PCB-9 POWER SWITCH P. C. BOARD


G

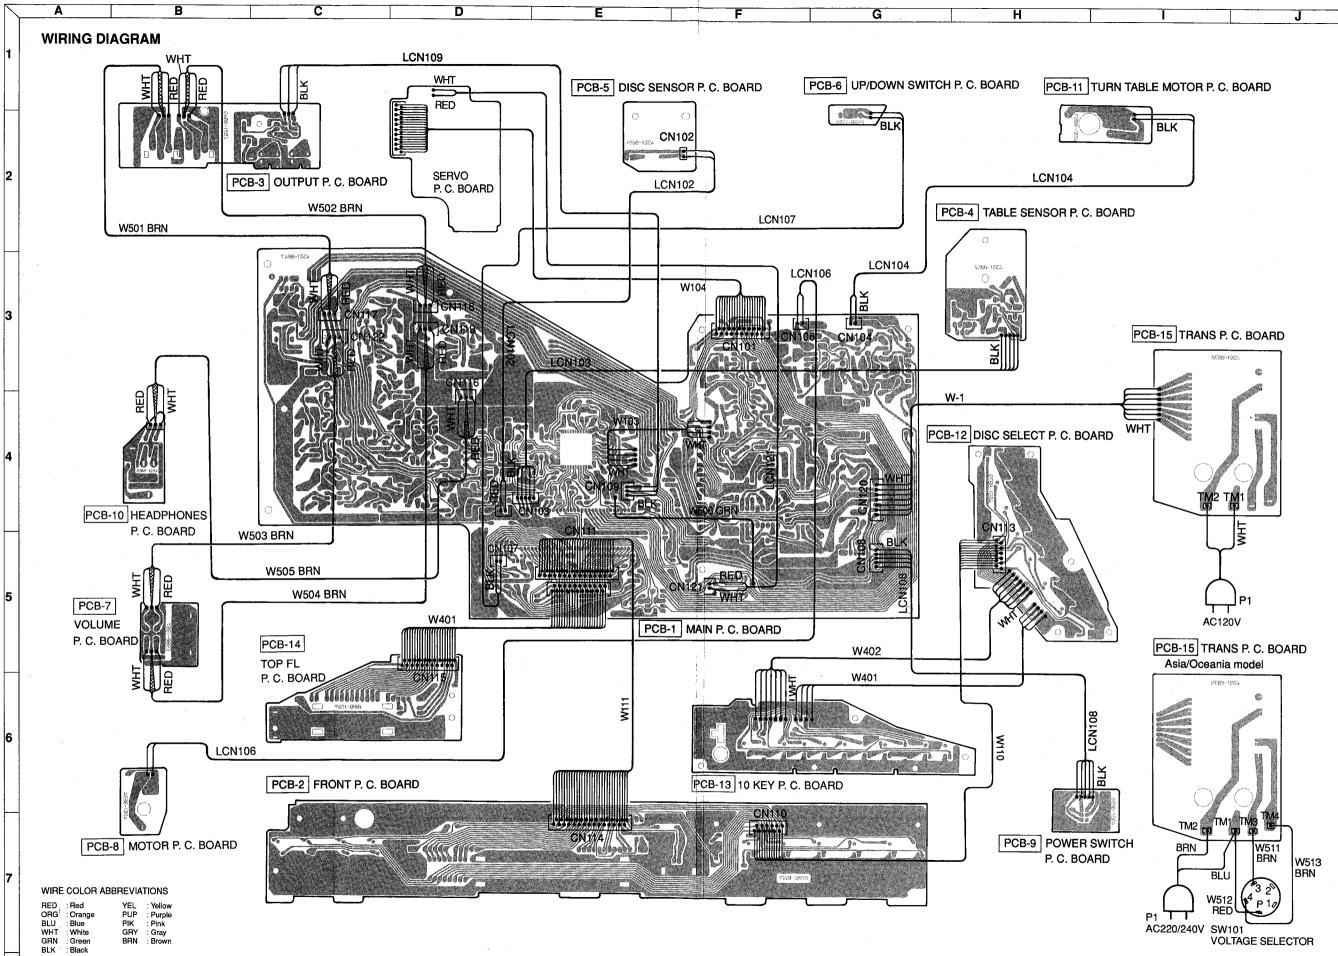

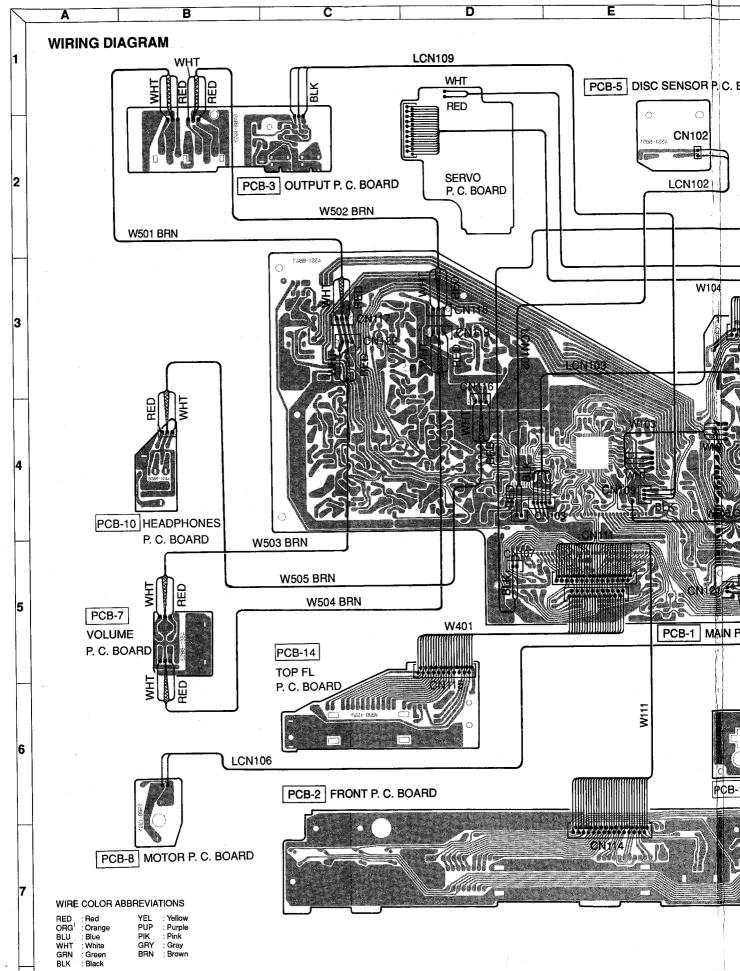

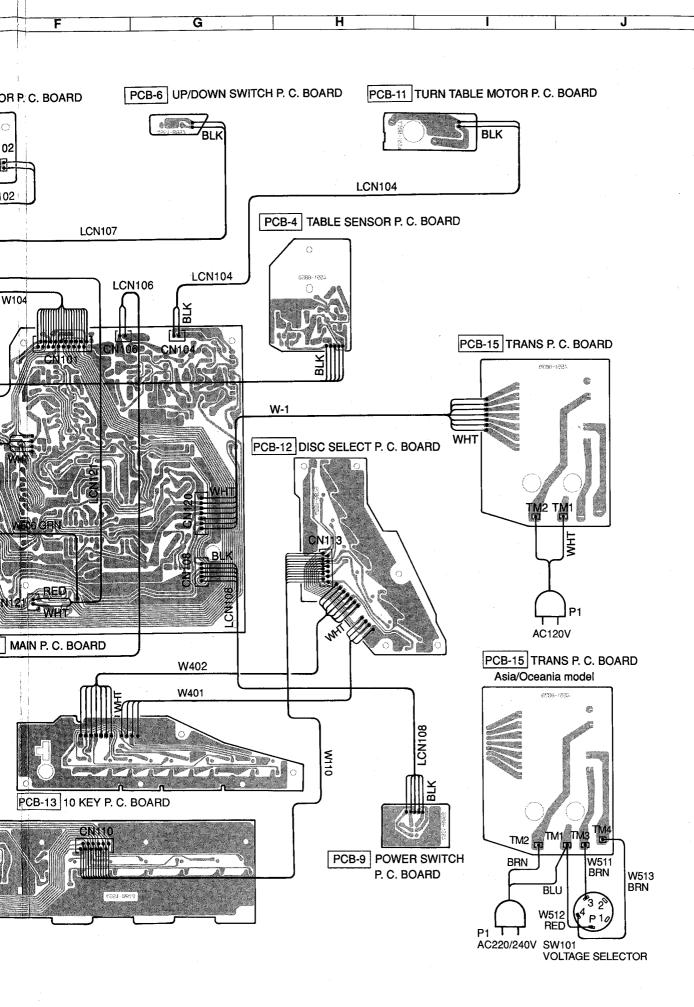


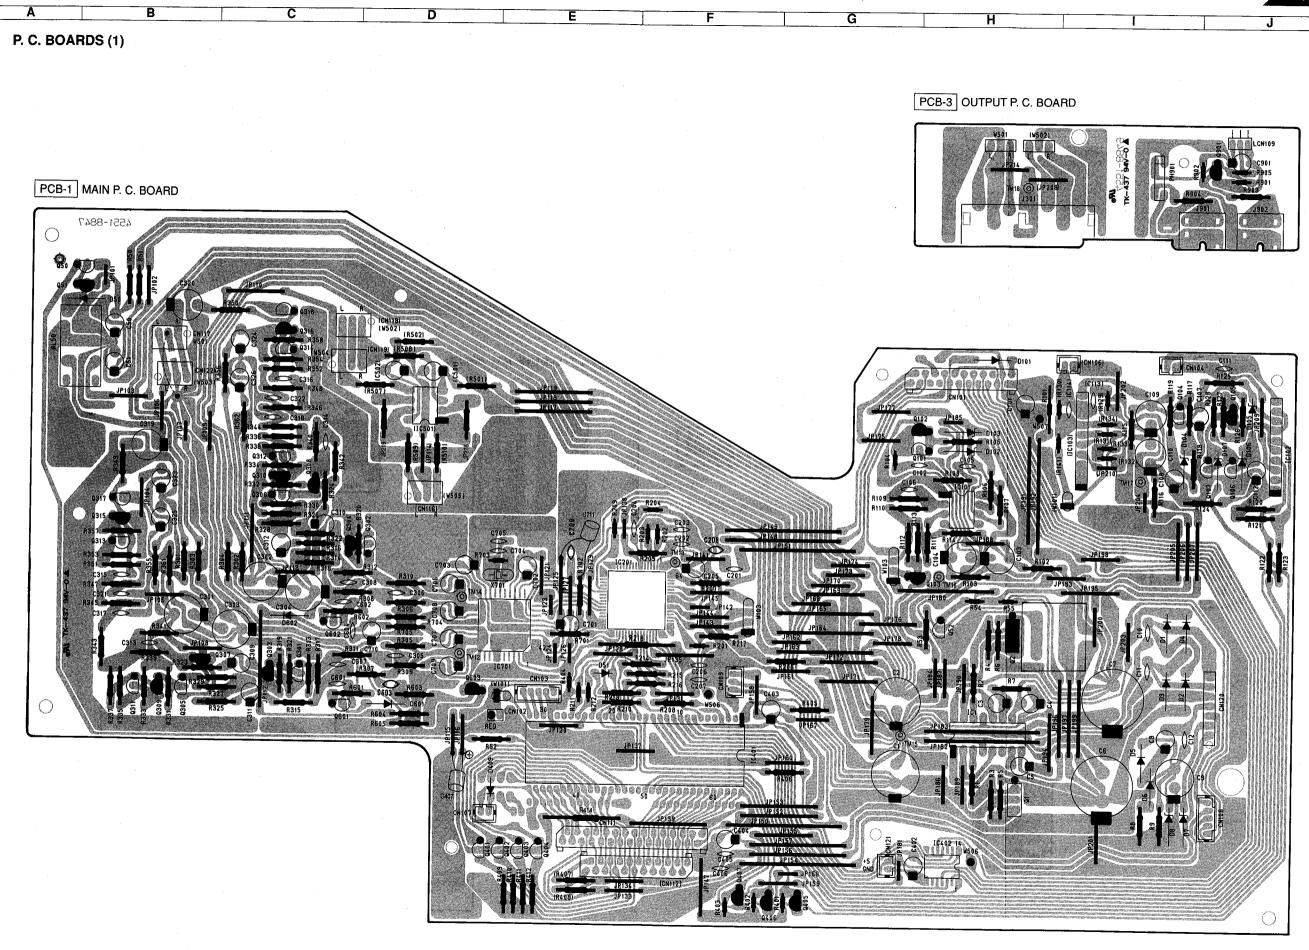


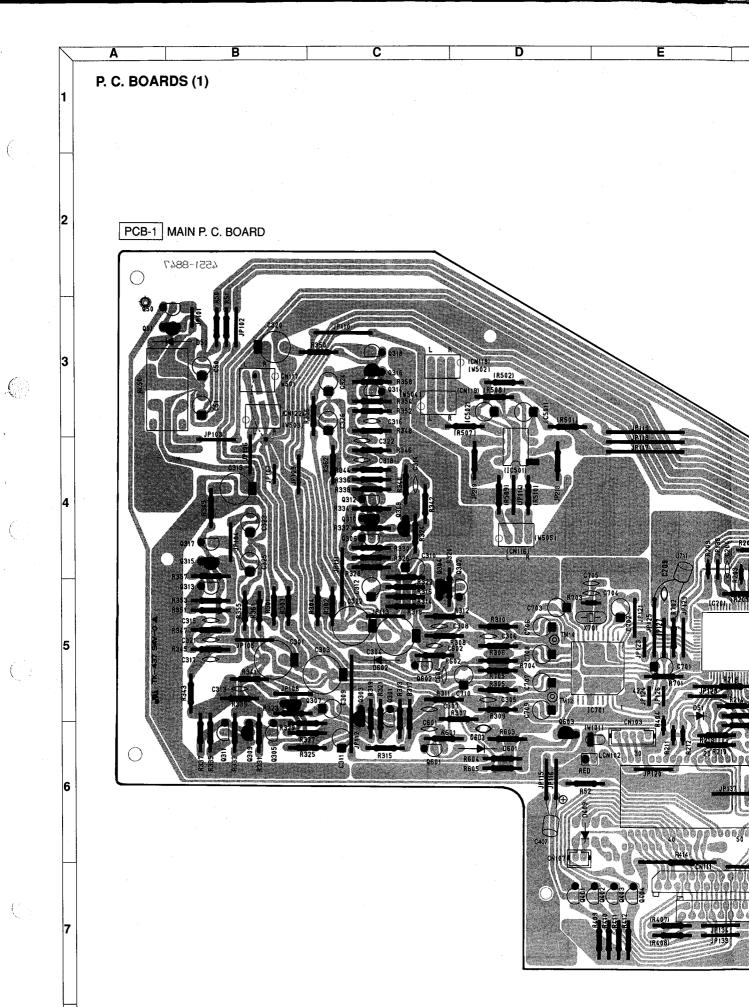



G H

PCB-3 OUTPUT P. C. BOARD

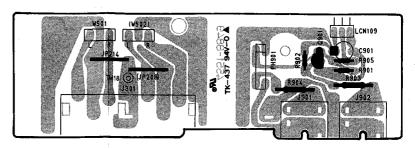


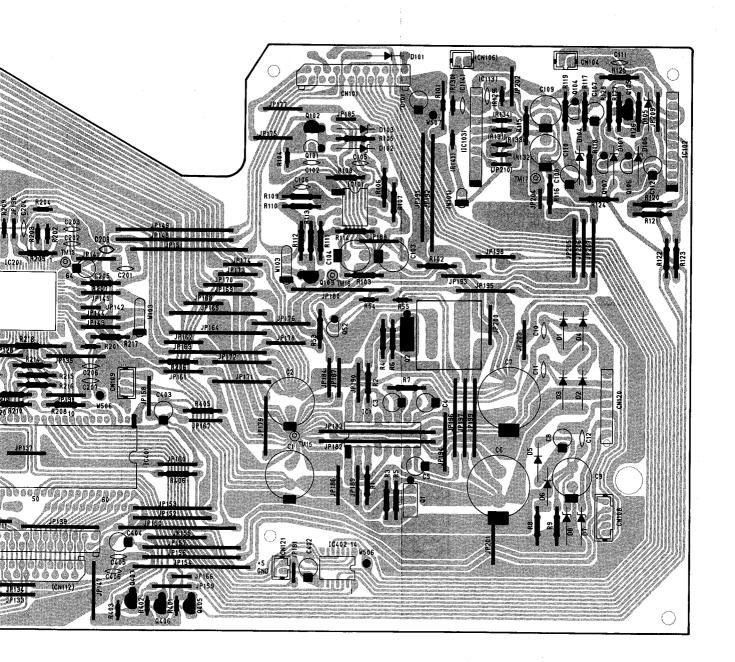

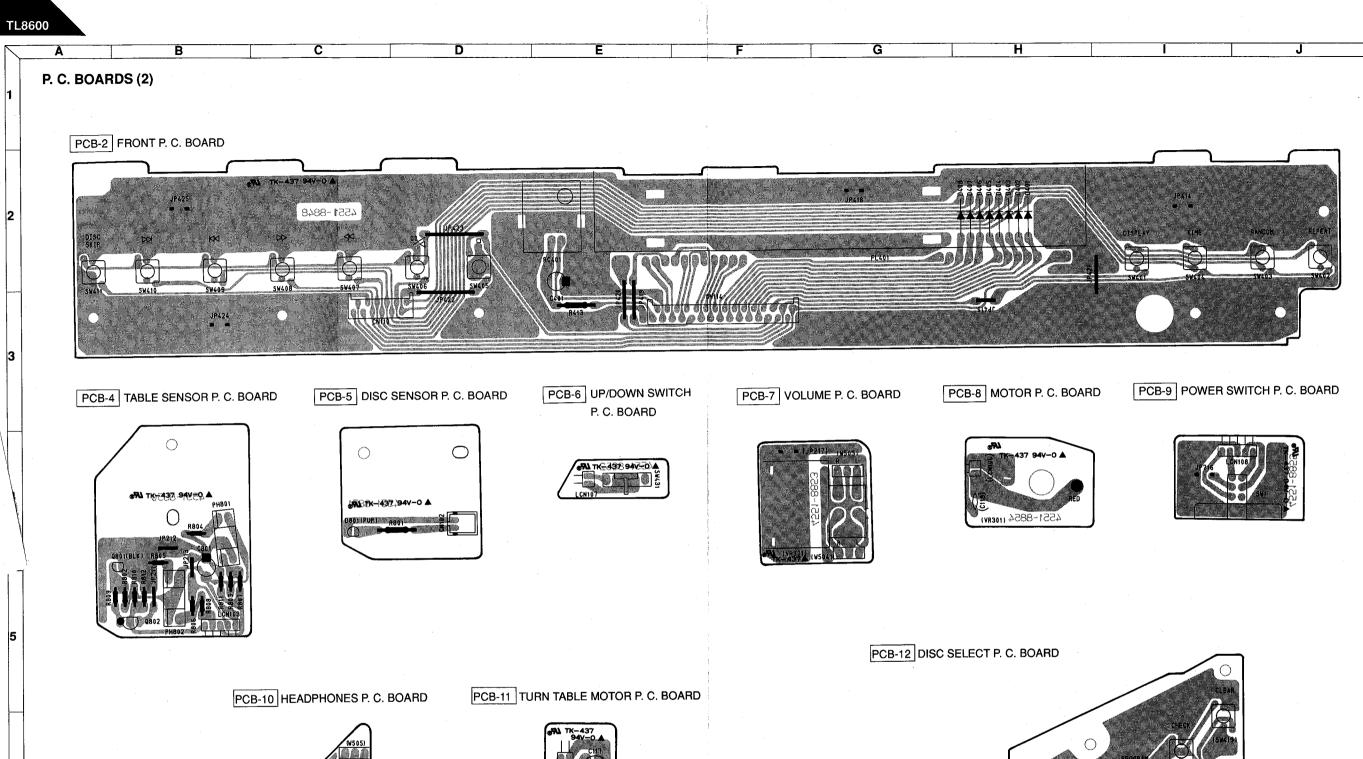

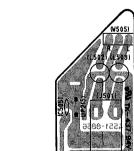



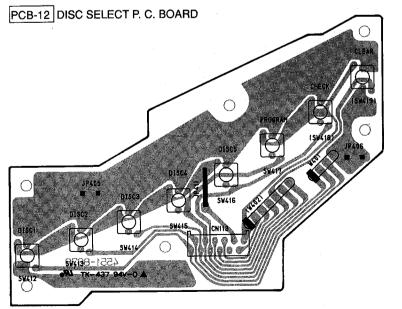


TL8600 P. C. BOARDS (2) PCB-2 FRONT P. C. BOARD 4551-8848 PCB-5 DISC SENSOR P. C. BOARD PCB-6 UP/DOWN SWITCH PCB-4 TABLE SENSOR P. C. BOARD P. C. BOARD # 1K-487 94V-0\ #¥£®k-|437,|94V-0 ▲ PCB-11 TURN TABLE MOTOR P. C. BOARD PCB-10 HEADPHONES P. C. BOARD





G

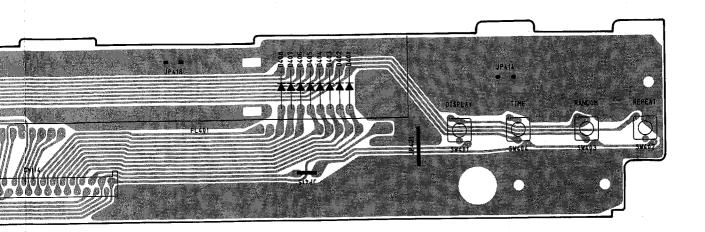


PCB-7 VOLUME P. C. BOARD


PCB-8 MOTOR P. C. BOARD

PCB-9 POWER SWITCH P. C. BOARD



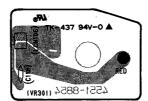



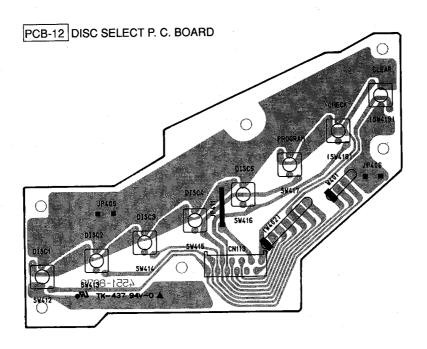

٩RD

E P. C. BOARDS (3) PCB-13 10 KEY P. C. BOARD PCB-14 TOP FL P. C. BOARD PCB-15 TRANS P. C. BOARD 4551-8878 TI

ELECTRICAL PARTS LIST

CAPACITORS C1 S45-1080082 CAPMINI ELE 1000µ1eV CAPACITORS C2 S45-1080082 CAPMINI ELE 1000µ1eV CAPACITORS C2 S45-1080082 CAPMINI ELE 1000µ1eV CAPACITORS C2 S45-1080082 CAPMINI ELE 100µ1eV CAPACITORS C2 S45-1080082 CAPMINI ELE 100µ1eV CAPACITORS CAPACITOR	Ser. No	. <u>Ref. No.</u>	Part No.	<u>Description</u>	Ser. No	. <u>Ref. No.</u>	Part No.	Description
CAPACHTORS CAPAMINI ELE: 1000/16V 28345-10800882 CAPMINI ELE: 1000/16V 28345-10800883	tig like s		PCR-1 MAIN	Lice Board				CAP,MINI ELE 100µ/10V
APAMIN ELE 1000/180			reniring the Printing of the					CAP,MINI ELE 100µ/10V
789 C2 5345-1060062 CAPMINI ELE 100p/16V 788 A F1 5102-101516 RES. FURS. 100	780	Ct		CARMINI ELE 1000m/16V	000	07.10		OAI , WINTELL TOOP/TOV
792 C3 594-51697692 CAPMINI EE 10µ50V 798 A 72 1032-101116 RES_FUSE 10 72 727 727 C4 S45-1087092 CAPMINI EE 10µ50V 798 A 72 1032-101116 RES_FUSE 10 72 727 728 C4 S45-1087093 CAPMINI EE 10µ50V 798 A 72 8 73 5134-17522 RES_GRI 1024 72 72 72 72 72 72 72 72 72 72 72 72 72					796 A	D1		DEC THOT 400
780 CP 354-1086982 CAPMIN ELE 10,9507 782 R3 5135-471522 R55,081 1/29 470 R57-878 CP 354-47806983 CAPMIN ELE 4709/18V 770 R6 8135-471522 R55,081 1/29 470 R57-878 CP 354-47806983 CAPMIN ELE 4709/18V 770 R6 8135-471522 R55,081 1/29 470 R57-878 CP 354-47806983 CAPMIN ELE 4709/18V 770 R6 8135-471522 R55,081 1/29 1/20 R57-879 CP 354-47806982 CAPMIN ELE 4709/18V 770 R6 8135-471522 R55,081 1/29 1/20 R55,081 1/29				CAP,MINI ELE 10µ/50V				
788							5135-471522	RES,CBN 1/2P 470
788 C7 5345-7800803 CAP,MM ELE 24,950 770 785 785 5135-763222 RES.GRN 1929 120 7870 C8 3545-2265082 CAP,MM ELE 24,950 785 787 5135-15322 RES.GRN 1929 120 7870 C8 3545-2265082 CAP,MM ELE 24,950 785 787 5135-15322 RES.GRN 1929 120 7870 7870 7870 7870 7870 7870 7870 78	788			·				
200 3384-7750002	788		5345-478C0963	CAP,MINI ELE 4700µ/16V				
794 C10 5384-224993 CAPMIN 22µ 774 R8 5138-223852 RES CRIP 1679 R8 174 R8 174 R8 5138-223852 RES CRIP 1679 R8 174 R8					785	R7		RES,CBN 1/2P 15K
794 C11 5854-224593 CAP,MM, 22µ 586 R50 5135-100522 RES,CBN 12P 10 881 C30 8345-046591 CAP,MM, 12P 10 10 881 C30 8345-046591 CAP,MM ELE 100µ10V 586 R51 5135-100522 RES,CBN 12P 10 881 C30 8345-046591 CAP,MM ELE 100µ10V 587 R63 5154-300522 RES,CBN 12P 10 882 C310 8345-046592 CAP,MM ELE 100µ10V 587 R63 5154-300522 RES,CBN 12P 10 882 C310 8345-046592 CAP,MM ELE 100µ10V 587 R63 5154-300522 RES,CBN 12P 10 883 C310 8345-10760982 CAP,MM ELE 100µ10V 598 R64 5282-231-16P RES,CBN 14P 33 M 884 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 33 M 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 33 M 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 33 M 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 33 M 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 100µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R10 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RES,CBN 14P 10 885 CAP,MM ELE 20µ10V 705 A, R11 5100_AP8511 RE	794							
196	794			CAP,MYL .22µ				
861 C51 534-5908M107 CAPMINI ELE 100µ10V SE7 RS3 5155-308222 RES.CBM 1767 D867 RS722 C102 5354-104503 CAPMINI ELE 47µ10V SE7 RS5 5155-308222 RES.CBM 1767 D867 RS722 C103 5354-104503 CAPMINI ELE 47µ10V SE7 RS5 5155-308222 RES.CBM 1767 D867 RS722 C105 5354-104503 CAPMINI ELE 100µ10V 705 A R102 5102-4875116 RES.CBM 1767 D867 RS722 C105 5354-585033 CAPMINI ELE 100µ10V 705 A R102 5102-4875116 RES.CBM 1767 D867 RS722 C105 5354-585033 CAPMINI ELE 47µ20V SE7 RS722 C105 5354-585032 CAPMINI ELE 47µ20V SE7 RS722 C105 5354-104503 CAPMINI ELE 40µ20V SE7 RS722 C105 S354-104503 CAPMINI ELE 20µ20V SE7 RS722 C100 S354-104503 CAPMINI ELE 20µ20V SE7 RS722 C105 S354-104503 CAPM					656	R51		
7289 C101 5345-47600682 CAPMINI ELE 47µ16V 659 F55 5323-031.16p F65.08h 1/p9 130 CAPMINI ELE 100µ16V 707 /A R101 5102-2R25117F R65.08h 1/p9 130 CAPMINI ELE 100µ16V 707 /A R101 5102-2R25117F R65.08h 1/p9 130 CAPMINI ELE 100µ16V 707 /A R101 5102-2R25117F R65.7USE 2.2 CAPMINI ELE 100µ16V 707 /A R101 5102-2R25117F R65.7USE 2.2 CAPMINI ELE 100µ16V 707 /A R101 5102-2R25117F R65.7USE 2.2 CAPMINI ELE 100µ16V 706 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5102-4R75116 R65.7USE 2.2 CAPMINI ELE 47µ25V 60 A R103 5103-103522 R65.08h 1/p9 10 A R103 5103-5103-5103-5103-5103-5103-5103-5103-	661							
722 C102 5354-104533 CAPMIN 19 680 FISS 223-103118P FISS, C8M INP 10K FISS C103 5364-10705682 CAPMIN ELE 100Jr16V 707 A R110 5102-2282117F FISS, C8M INP 10K FISS C103 5364-10705682 CAPMIN ELE 100Jr16V 707 A R110 5102-2282117F FISS, C8M INP 10K FISS C103 5364-5363032 CAPMIN ELE 47µ25V 708 A R110 5102-47875116 FISS, C8M INP 10K FISS, C8	728	C101	5345-476C0962	CAP,MINI ELE 47µ/16V				
2786 C104 534-50700692					660	R55		
Total Tot								
7272 C105 S355-570L222 CAPPPP 2009 709 R104 5222-100.146P 10	721							
147 101	723							
2725 C109 5345-27C0982 CAPMINI ELE 20µ16V 588 1107 5135-58D522 RES. GBB 1/PP 0.2								RES,CBN 1/2P 100
7250 C110 5345-227C0082 CAPMIN ELE 220U16V 702 R100 5183-103522 RES CBN 1/2 P3/C 7270 C111 5395-9510/220 CAPPPP 022µ 708 R100 5183-103522 RES CBN 1/2 P3/C 7270 C112 5395-910/102 CAPPPP 1000P 705 R110 5183-123522 RES CBN 1/2 P3/C 7270 C112 5381-104522 CAPPP 1000P 705 R111 5185-103522 RES CBN 1/2 P3/C 7270 C112 5381-104523 CAPPP 1000P 705 R113 5185-103522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5185-103522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5185-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5185-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R114 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R113 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R114 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R114 5138-303522 RES CBN 1/2 P3/C 7370 C202 5389-910/L223 CAPPPP 020µ 705 R112 5138-101522 RES CBN 1/2 P3/C 7370 C202 5384-104533 CAPPW1 1 P3/C 7370 R100 5138-101522 RES CBN 1/2 P3/C 7370 R100 51	725							
729 C111 5359-9610/223	725	C110	5345-227C0962	CAP,MINI ELE 220µ/16V				
172	720				708	R109		
7.19 C114 9381-220/SIL CAPCER 2P	729 722							RES,CBN 1/2P 12K
572 C201 5399-5010.1022 CAP.PPP 1000P 705 R113 5195-333552 RES. CBN 1/2P 31K 573 C202 5399-5010.1023 CAP.PPP .022µ 705 R114 5195-333552 RES. CBN 1/2P 31K 573 C202 5399-5010.1023 CAP.PPP .022µ 706 A R115 5102-4R75116 RES. FLUSE 4.7 C204 5394-5010.1023 CAP.PMT. 1/µ 706 A R115 5102-4R75116 RES. FLUSE 4.7 C205 5394-704533 CAP.MT. 1/µ 699 R115 5102-4R75116 RES. FLUSE 4.7 C205 5394-704533 CAP.MT. 1/µ 699 R115 5102-4R75116 RES. FLUSE 4.7 C207 5394-104533 CAP.MT. 1/µ 699 R115 5105-471522 RES. CBN 1/2P 470 C207 5394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 470 C207 5394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 470 C209 5394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 12K 576 C208 5394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 12K 576 C209 5394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 12K 576 C209 5394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 12K 576 C209 S394-104533 CAP.MT. 1/µ 703 R120 5135-123522 RES. CBN 1/2P 12K 576 C209 S394-5080M227 CAP.MINI ELE 220µ/10V 704 R122 5135-123522 RES. CBN 1/2P 12K 576 C209 S394-5080M227 CAP.MINI ELE 220µ/10V 704 R122 5135-123522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R124 5135-123522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R124 5135-123522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10V 701 R125 5135-103522 RES. CBN 1/2P 12K 576 C208 5394-5080M227 CAP.MINI ELE 220µ/10	719							
9.39 2/02 3359-951010223 CAP,PPP 0/22	572							
574 C204 5364-4745939 CAP.MNI. 47µ 706 Δ. R118 5102-CR13118 RES. CBB 1/2P L77 575 C205 5345-104593 CAP.MNI. 1µ 688 R117 735-71522 RES. CBB 1/2P 470 576 C206 5354-104593 CAP.MNI. 1µ 689 R118 5133-71522 RES. CBB 1/2P 470 576 C208 5354-104593 CAP.MNI. 1µ 703 R121 5135-71522 RES. CBB 1/2P 470 576 C209 5354-104593 CAP.MNI. 1µ 703 R121 5135-713222 RES. CBB 1/2P 12P 12P 12P 12P 12P 12P 12P 12P 12P 1							5135-333522	
575 C205 5345-S06BM107 CAPMIN ELE 100µ10V 686 R118 5135-101522 RES, CBN 1/2P 1/2P 100 F576 C206 5345-104593 CAPMIN. 1µ 689 R118 5135-471522 RES, CBN 1/2P 1470 689 R11	574							
576 C206 5354-104593 CAP,MYL.1µ 699 R118 5135-471522 RES.CBN 1/2P 470 F576 C207 5354-104593 CAP,MYL.1µ 699 R119 5135-471522 RES.CBN 1/2P 470 F576 C208 5354-104593 CAP,MYL.1µ 703 R120 5135-123522 RES.CBN 1/2P 1/2K F576 C209 5354-104593 CAP,MYL.1µ 703 R120 5135-123522 RES.CBN 1/2P 1/2K F576 C209 5345-506BM227 CAP,MNI ELE 220µ10V 704 R122 5135-123522 RES.CBN 1/2P 1/2K F576 C209 5345-506BM227 CAP,MNI ELE 220µ10V 704 R123 5135-223522 RES.CBN 1/2P 2/2K F576 C209 5345-506BM227 CAP,MNI ELE 220µ10V 701 R124 5135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-506BM227 CAP,MNI ELE 220µ10V 701 R124 5135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-506BM227 CAP,MNI ELE 220µ10V 701 R124 5135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-506BM227 CAP,MNI ELE 220µ10V 701 R124 5135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-506BM227 CAP,MNI ELE 220µ10V 701 R124 5135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-226C934 CAP,MCA 82P 702 R127 S135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-226C934 CAP,MCA 82P 702 R127 S135-123522 RES.CBN 1/2P 1/2K F576 C209 S345-226C9351 CAP,MNI ELE 22µ16V 717 R130 5232-120116P RES.CBN 1/2P 10K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 712 R131 5232-120116P RES.CBN 1/6P 1/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-233116P RES.CBN 1/6P 3/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-233116P RES.CBN 1/6P 3/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-233116P RES.CBN 1/6P 3/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-233116P RES.CBN 1/6P 3/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-233116P RES.CBN 1/6P 3/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-233116P RES.CBN 1/6P 2/2K F576 C209 S345-226C9051 CAP,MNI ELE 22µ16V 715 R132 5232-223116P RES.CBN 1/6P 2/2K F576 C209 S345-226C9051 CAP,MNI ELE 20µ16V 715 R132 5232-223116P RES.CBN 1/6P 2/2K F576 C209 S345-226C9051 CAP,MNI ELE 20µ16V 715 R132 5232-22316P RES.CBN 1/6P 1/6K F576 C209 S345-226C9051 CAP,MNI ELE 20µ16V 715 R132 5232-22316P RES.CBN 1/6P 1/6K F576 C209 S345-226C9051 CAP,MNI ELE 20µ	575	C205						
576 C208 \$354-104593 CAPMVI. 1μ 703 R12p \$138-12352 RES.CBN 1/2P 12K								
576 C209 \$554-104593 CAPMYL.1µ								
615 G301 5345-S06BM227 CAP.MINI ELE 220µ10V 704 R122 5136-223522 RES. CBN 1/2P 22K 615 C303 5345-S06BM227 CAP.MINI ELE 220µ10V 701 R123 5135-223522 RES. CBN 1/2P 22K 615 C303 5345-S06BM227 CAP.MINI ELE 220µ10V 701 R124 5135-102522 RES. CBN 1/2P 11K 613 C305 5345-S06BM227 CAP.MINI ELE 220µ10V 701 R125 5135-102522 RES. CBN 1/2P 11K 613 C305 5353-820534 CAP.MCA 82P 695 R126 5135-287522 RES. CBN 1/2P 12K 613 C305 5353-820534 CAP.MCA 82P 702 R127 5135-103522 RES. CBN 1/2P 10K 616 C307 5353-330534 CAP.MCA 82P 702 R127 5135-103522 RES. CBN 1/2P 10K 616 C307 5353-330534 CAP.MCA 83P 702 R128 5135-103522 RES. CBN 1/2P 10K 616 C309 5345-228C0951 CAP.MINI ELE 22µ16V 717 R130 5232-27316P RES. CBN 1/2P 10K 616 C310 5345-228C0951 CAP.MINI ELE 22µ16V 712 R131 5232-100.116P RES. CBN 1/6P 10K 616 C311 5345-228C0951 CAP.MINI ELE 22µ16V 715 R132 5232-333.116P RES. CBN 1/6P 33K 616 C312 5345-228C0951 CAP.MINI ELE 22µ16V 715 R132 5232-333.116P RES. CBN 1/6P 33K 616 C312 5345-228C0951 CAP.MINI ELE 22µ16V 715 R132 5232-333.116P RES. CBN 1/6P 33K 616 C313 5345-228C0951 CAP.MINI ELE 22µ16V 715 R132 5232-333.116P RES. CBN 1/6P 33K 616 C312 5345-228C0951 CAP.MINI ELE 22µ16V 715 R132 5232-233.116P RES. CBN 1/6P 33K 616 C312 5345-228C0951 CAP.MINI ELE 22µ16V 715 R132 5232-233.116P RES. CBN 1/6P 33K 616 C313 5355-105254 CAP.MPP 5000P 564 R202 5232-104.116P RES. CBN 1/6P 27K 636 C315 5359-5625861 CAP.MPP 5000P 564 R202 5232-104.116P RES. CBN 1/6P 27K 636 C315 5359-5625861 CAP.MPP 5000P 564 R202 5232-104.116P RES. CBN 1/6P 10K 635 C318 5359-1525861 CAP.MPP 1500P 560 R202 5232-104.116P RES. CBN 1/6P 10K 635 C318 5359-1525861 CAP.MPP 1500P 560 R202 5232-104.116P RES. CBN 1/6P 10K 635 C318 5359-1525861 CAP.MPP 1500P 560 R202 5232-104.116P RES. CBN 1/6P 10K 635 C318 5359-1525861 CAP.MPP 1500P 560 R202 5232-104.116P RES. CBN 1/6P 10K 635 C318 5359-1525861 CAP.MPP 1500P 560 R202 5345-5206801 RES. CBN 1/6P 12K 635 C322 5355-1525861 CAP.MPP 1500P 560 R202 5355-21522 RES. CBN 1/2P 22K 635 C322 5355-1525861 CAP.MPP 1500P 560 R202 5355-21522 RES. CBN 1/2	576							
615 C303 5345-S06BM227 CAP,MINI ELE 220µ/10V 701 R124 5135-102522 RES,CBN 1/2P 1K 613 C305 5345-S06BM227 CAP,MINI ELE 220µ/10V 701 R125 5135-102522 RES,CBN 1/2P 1K 613 C305 5345-S06BM227 CAP,MINI ELE 20µ/10V 701 R125 5135-102522 RES,CBN 1/2P 1K 613 C305 5345-S02534 CAP,MCA 82P 702 R127 5135-103522 RES,CBN 1/2P 1C 612 C307 5353-330534 CAP,MCA 82P 702 R127 5135-103522 RES,CBN 1/2P 10K 612 C308 5353-330534 CAP,MCA 33P 702 R128 5135-103522 RES,CBN 1/2P 10K 616 C303 5345-228C0951 CAP,MINI ELE 22µ/16V 717 R130 5232-273116P RES,CBN 1/6P 27K 616 C310 5345-228C0951 CAP,MINI ELE 22µ/16V 712 R131 5232-733116P RES,CBN 1/6P 10K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R132 5232-3333116P RES,CBN 1/6P 10K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-2333116P RES,CBN 1/6P 10K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-2333116P RES,CBN 1/6P 10K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-2333116P RES,CBN 1/6P 10K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-2333116P RES,CBN 1/6P 27K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-2333116P RES,CBN 1/6P 27K 616 C315 5345-228C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-2333116P RES,CBN 1/6P 27K 616 C315 5359-5825851 CAP,PPP 5800P 514 R141 5232-223116P RES,CBN 1/6P 27K 616 C315 5359-5825851 CAP,PPP 5800P 514 R141 5232-223116P RES,CBN 1/6P 27K 616 C315 5359-5825851 CAP,PPP 5800P 564 R203 5323-104J16P RES,CBN 1/6P 27K 636 C315 5359-5825851 CAP,PPP 5800P 564 R203 5232-104J16P RES,CBN 1/6P 10K 635 C315 5359-1525851 CAP,PPP 1500P 564 R203 5332-104J16P RES,CBN 1/6P 4/7K 6355 C317 5359-1525851 CAP,PPP 1500P 564 R203 5332-104J16P RES,CBN 1/6P 4/7K 6333 C324 5345-5086M107 CAP,MINI ELE 20µ/63V 570 R205 5135-220522 RES,CBN 1/2P 27C 6335 5359-1525851 CAP,PPP 1500P 568 R207 5359-522522 RES,CBN 1/6P 2/2K 6345 5086M107 CAP,MINI ELE 10µ/10V 569 R207 5359-522522 RES,CBN 1/6P 2/2K 6345 5086M	615							
615 C304 5345-S06BM227 CAP,MIN ELE 220µ10V 701 R125 5135-102522 RES,CBN 1/2P IK 616 C305 5353-805334 CAP,MCA 82P 695 R126 5135-2R7522 RES,CBN 1/2P IX 617 C307 5353-805334 CAP,MCA 82P 702 R127 5135-103522 RES,CBN 1/2P 10K 618 C307 5353-805334 CAP,MCA 33P 702 R128 5135-103522 RES,CBN 1/2P 10K 619 C307 5353-380534 CAP,MCA 33P 702 R128 5135-103522 RES,CBN 1/2P 10K 610 C309 5345-228C0951 CAP,MIN ELE 22µ16V 717 R130 5232-103,116P RES,CBN 1/6P 10K 611 C313 5345-228C0951 CAP,MIN ELE 22µ16V 715 R132 5232-233,116P RES,CBN 1/6P 10K 611 C314 5353-100534 CAP,MCA 10P 717 R134 5232-233,116P RES,CBN 1/6P 37K 611 C314 5353-100534 CAP,MCA 10P 717 R134 5232-233,116P RES,CBN 1/6P 27K 611 C314 5353-100534 CAP,MCA 10P 717 R134 5232-233,116P RES,CBN 1/6P 27K 636 C315 5359-682851 CAP,PPP 5600P 714 R141 5232-223,116P RES,CBN 1/6P 27K 636 C315 5359-682851 CAP,PPP 5600P 564 R202 5232-104,116P RES,CBN 1/6P 1/7K 635 C317 5359-152851 CAP,PPP 1500P 564 R202 5232-104,116P RES,CBN 1/6P 1/7K 636 C318 5359-152851 CAP,PPP 1500P 564 R202 5232-104,116P RES,CBN 1/6P 1/7K 637 C318 5359-152851 CAP,PPP 1500P 564 R202 5232-104,116P RES,CBN 1/6P 1/7K 638 C318 5359-152851 CAP,PPP 1500P 564 R203 5232-104,116P RES,CBN 1/6P 1/7K 638 C318 5359-152851 CAP,PPP 1500P 564 R203 5232-104,116P RES,CBN 1/6P 1/7K 638 C318 5359-1528551 CAP,PPP 1500P 564 R203 5232-104,116P RES,CBN 1/6P 1/7K 638 C318 5359-1528551 CAP,PPP 1500P 564 R203 5232-104,116P RES,CBN 1/6P 1/7K 638 C320 5345-5227A0951 CAP,MIN ELE 20µ/6.3V 570 R205 5135-820522 RES,CBN 1/2P 2/2K 635 C312 5359-1528551 CAP,PPP 1500P 568 R203 5232-104,116P RES,CBN 1/6P 1/7K 633 C322 5359-1528551 CAP,PPP 1500P 568 R203 5232-104,116P RES,CBN 1/6P 1/7K 633 C322 5359-1528551 CAP,PPP 1500P 568 R203 5232-104,116P RES,CBN 1/6P 1/7K 635 C322 5359-1528551 CAP,PPP 1500P 568 R203 5232-104,116P RES,CBN 1/6P 1/7K 635 C322 5359-1528551 CAP,PPP 1500P 568 R203 5232-104,116P RES,CBN 1/6P 1/7K 635 C322 5359-1528551 CAP,PPP 1500P 568 R203 5359-1528522 RES,CBN 1/2P 2/2K 635 C322 5359-1528551 CAP,PPP 1500P 568 R203 5359-1528522 RES,CBN 1/2P	615							
613 G305 5353-820534 CAP,MCA 82P 695 R126 5135-287522 RES,CBN 1/2P 2.7 6135 G353-820534 CAP,MCA 82P 702 R127 5135-103522 RES,CBN 1/2P 10K 6161 C307 5353-330534 CAP,MCA 33P 702 R128 5135-103522 RES,CBN 1/2P 10K 6161 C309 5345-226C0951 CAP,MINI ELE 22µ/16V 717 R130 5232-100.116P RES,CBN 1/6P 10K 6161 C310 5345-226C0951 CAP,MINI ELE 22µ/16V 717 R130 5232-273.116P RES,CBN 1/6P 10K 6161 C311 5345-226C0951 CAP,MINI ELE 22µ/16V 715 R131 5232-233.116P RES,CBN 1/6P 10K 6161 C312 5345-226C0951 CAP,MINI ELE 22µ/16V 715 R132 5232-233.116P RES,CBN 1/6P 33K 6161 C313 5345-226C0951 CAP,MINI ELE 22µ/16V 715 R133 5232-233.116P RES,CBN 1/6P 33K 6161 C313 5353-100534 CAP,MCA 10P 717 R134 5232-273.116P RES,CBN 1/6P 33K 6161 C313 5353-100534 CAP,MCA 10P 717 R134 5232-273.116P RES,CBN 1/6P 22K 636 C315 5359-5625851 CAP,PPP 5600P 563 R201 5232-472.116P RES,CBN 1/6P 22K 636 C315 5359-5625851 CAP,PPP 1500P 564 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 564 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 564 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 564 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 564 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 564 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 568 R202 5232-104.116P RES,CBN 1/6P 10K 635 C318 5359-1525851 CAP,PPP 1500P 560 R208 5232-104.116P RES,CBN 1/6P 120K 635 C318 5359-1525851 CAP,PPP 1500P 560 R208 5232-104.116P RES,CBN 1/6P 120K 635 C321 5359-1525851 CAP,PPP 1500P 560 R208 5232-104.116P RES,CBN 1/6P 120K 635 C321 5359-1525851 CAP,PPP 1500P 560 R208 5232-104.116P RES,CBN 1/6P 120K 635 C322 S345-S06BM107 CAP,MINI ELE 100µ/10V 569 R201 5135-22552 RES,CBN 1/2P 22K 642 C403 5345-S06BM107 CAP,MINI ELE 100µ/10V 569 R201 5135-22552 RES,CBN 1/2P 22K 644 C402 5345-S06BM107 CAP,MINI ELE 100µ/10V 569 R201 5135-22552 RES,CBN 1/2P 22K 644 C402 5345-S06BM107 CAP,MINI ELE 100µ/10V 569 R301 5135-22552 RES,CBN 1/2P 22K 645 C406 5359-S010.	615	C304						
612 C 2307 S333-330534 CAP.MCA 339 702 F1125 5135-103522 RES.CBN 1/2P 10K 6161 C 2309 5345-226C0951 CAP.MINI ELE 22µ/16V 717 R130 5232-273116P RES.CBN 1/6P 10 616 C 3310 5345-226C0951 CAP.MINI ELE 22µ/16V 717 R130 5232-273116P RES.CBN 1/6P 10K 616 C 3310 5345-226C0951 CAP.MINI ELE 22µ/16V 715 R132 5232-2333116P RES.CBN 1/6P 10K 616 C 3312 5345-226C0951 CAP.MINI ELE 22µ/16V 715 R132 5232-2333116P RES.CBN 1/6P 30K 616 C 3312 5345-226C0951 CAP.MINI ELE 22µ/16V 715 R133 5232-2333116P RES.CBN 1/6P 30K 616 C 3312 5345-226C0951 CAP.MINI ELE 22µ/16V 715 R133 5232-2333116P RES.CBN 1/6P 30K 616 C 3312 5345-226C0951 CAP.MINI ELE 22µ/16V 715 R133 5232-2333116P RES.CBN 1/6P 30K 616 C 3312 5345-226C0951 CAP.MINI ELE 22µ/16V 715 R133 5232-233116P RES.CBN 1/6P 2/K 616 C 3315 5359-5625851 CAP.PPP 5600P 714 R141 5232-223116P RES.CBN 1/6P 2/K 636 C 315 5359-5625851 CAP.PPP 5600P 564 R202 5232-104.116P RES.CBN 1/6P 2/K 636 C 315 5359-5625851 CAP.PPP 1500P 564 R202 5232-104.116P RES.CBN 1/6P 100K 635 C 318 5359-1528851 CAP.PPP 1500P 564 R202 5232-104.116P RES.CBN 1/6P 100K 632 C 319 5345-227A0951 CAP.MINI ELE 220µ/6.3V 570 R205 5135-823522 RES.CBN 1/6P 470 RES.CBN 1/6P 100K 632 C 321 5359-1528851 CAP.PPP 1500P 568 R207 5135-271522 RES.CBN 1/6P 100K 633 C 321 5359-1528851 CAP.PPP 1500P 568 R207 5135-271522 RES.CBN 1/2P 82K 635 C 321 5359-1528851 CAP.PPP 1500P 560 R208 5135-102522 RES.CBN 1/2P 82K 635 C 322 5345-506BM107 CAP.MINI ELE 100µ/10V 569 R210 5135-271522 RES.CBN 1/2P 1/2 RES.CBN 1/2P 2/2 RES.CBN 1/2P 2/2 RES.CBN 1/2P 1/2 RES.CBN 1/2P 2/2 RES.CBN 1/2P 1/2 R	613							
616 C 309 S 345-226C0951 CAP MINI ELE 22µ/16V 710 R129 S 323-210J16P RES, CBN 1/6P 10 R166 C 3010 S 345-226C0951 CAP MINI ELE 22µ/16V 712 R131 S 232-233J16P RES, CBN 1/6P 2TK 715 R132 S 323-33J16P RES, CBN 1/6P 3TK 715 R133 S 353-105354 CAP MINI ELE 22µ/16V 715 R133 S 323-233J16P RES, CBN 1/6P 3TK 715 R133 S 353-105354 CAP MICA 10P 717 R134 S 323-233J16P RES, CBN 1/6P 3TK 716 R135 S 353-105354 CAP MCA 10P 717 R134 S 323-233J16P RES, CBN 1/6P 3TK 716 R135 S 353-105354 CAP MCA 10P 717 R134 S 323-247J16P RES, CBN 1/6P 2TK 716 R135 S 353-105354 CAP MCA 10P 717 R134 S 323-247J16P RES, CBN 1/6P 2TK 716 R135 S 353-105354 CAP MCA 10P 717 R134 S 323-247J16P RES, CBN 1/6P 2TK 717 R134 S 323-247J16P RES, CBN 1/6P 10K 717 R134 S 323-247J14P RES, CBN 1/6P 10K 717 R134 S 323-247J14P RES, CBN 1/6P 10K 717 R134 S 323-247J14P								
616 C 309	612							
616 C311 5345-226C0951 CAP,MINI ELE 22μ/16V 715 R133 5232-2033)16P RES,CBN 1/6P 93K 611 C313 5353-100534 CAP,MCA 10P 717 R134 5232-2233)16P RES,CBN 1/6P 27K 611 C313 5353-100534 CAP,MCA 10P 717 R134 5232-223)16P RES,CBN 1/6P 27K 636 C315 5359-5625851 CAP,PPP 5600P 563 R201 5232-472,116P RES,CBN 1/6P 27K 636 C315 5359-5625851 CAP,PPP 5600P 564 R202 5232-104,116P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 564 R203 5232-104,116P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 564 R203 5232-104,116P RES,CBN 1/6P 100K 632 C319 5345-227A0951 CAP,MINI ELE 220μ/6.3V 570 R205 5135-823522 RES,CBN 1/2P 22 RES,CBN 1/2P 1/2P 1/2P 1/2P 1/2P 1/2P 1/2P 1/2P	616							
616 C312 5345-226C0951 CAP.MINI ELE 22\(\mu\)16V 715 R133 5232-333J16P RES, CBN 1/6P 33K 611 C314 5353-100534 CAP.MCA 10P 717 R134 5232-223J16P RES, CBN 1/6P 27K 635 C314 5353-100534 CAP.MCA 10P 714 R134 5232-223J16P RES, CBN 1/6P 27K 635 C315 5359-5625851 CAP.PPP 5600P 563 R201 5232-472J16P RES, CBN 1/6P 27K 635 C316 5359-5625851 CAP.PPP 5600P 564 R202 5232-104J16P RES, CBN 1/6P 4.7K 635 C316 5359-5625851 CAP.PPP 1500P 564 R203 5232-104J16P RES, CBN 1/6P 100K 635 C318 5359-1525851 CAP.PPP 1500P 564 R203 5232-104J16P RES, CBN 1/6P 4.7K 635 C316 5359-5625851 CAP.PPP 1500P 564 R203 5232-104J16P RES, CBN 1/6P 4.7K 635 C316 5359-1525851 CAP.PPP 1500P 564 R203 5232-104J16P RES, CBN 1/6P 4.7K 635 C312 5359-1525851 CAP.PPP 1500P 564 R203 5232-104J16P RES, CBN 1/6P 4.7K 635 C322 5359-1525851 CAP.PPP 1500P 568 R203 5359-1525851 CAP.PPP 1500P 568 R203 5359-1525851 CAP.PPP 1500P 568 R205 5135-220522 RES, CBN 1/2P 22 RES, CBN 1/2P 24 RES, CBN 1/2P 1/2P 24 RES, CBN 1/2P 1/2								
611 C313 5353-100534 CAP.MCA 10P 717 R134 5232-273J16P RES.CBN 1/6P 27K 636 C315 5359-5825851 CAP.PPP 5600P 563 R201 5232-472J16P RES.CBN 1/6P 27K 636 C315 5359-5825851 CAP.PPP 5600P 564 R202 5232-104J16P RES.CBN 1/6P 4.7K 636 C316 5359-5825851 CAP.PPP 1500P 564 R202 5232-104J16P RES.CBN 1/6P 100K 635 C317 5359-1525851 CAP.PPP 1500P 564 R203 5232-104J16P RES.CBN 1/6P 100K 635 C318 5359-1525851 CAP.PPP 1500P 564 R203 5232-104J16P RES.CBN 1/6P 100K 632 C319 5345-227A0951 CAP.MINI ELE 220µ/6.3V 570 R205 5135-823522 RES.CBN 1/2P 28K 635 C321 5359-1525851 CAP.PPP 1500P 568 R207 5135-823522 RES.CBN 1/2P 220 635 C322 5359-1525851 CAP.PPP 1500P 560 R205 5135-220522 RES.CBN 1/2P 270 635 C322 5359-1525851 CAP.PPP 1500P 560 R205 5135-220522 RES.CBN 1/2P 270 635 C322 5359-1525851 CAP.PPP 1500P 560 R205 5135-220522 RES.CBN 1/2P 270 633 C323 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R209 5232-121J16P RES.CBN 1/6P 120 RES.CBN 1/2P 270 633 C325 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R209 5232-121J16P RES.CBN 1/2P 270 633 C326 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R211 5232-222J16P RES.CBN 1/2P 27K 633 C326 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R212 5232-22J16P RES.CBN 1/2P 27K 633 C326 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R211 5232-222J16P RES.CBN 1/2P 27K 634 C402 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R212 5232-22J16P RES.CBN 1/2P 22K 644 C402 5345-S06BM107 CAP.MINI ELE 100µ/10V 566 R212 5232-222J16P RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R215 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R215 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R216 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R216 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R216 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R216 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R216 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.PP 0/1µ 571 R216 5135-222522 RES.CBN 1/2P 22K 645 C405 5359-S010J103 CAP.P	616							
636 C315 5359-5625851 CAP,PPP 5600P 563 R201 5232-472J16P RES,CBN 1/6P 100K 635 C317 5359-1525851 CAP,PPP 1500P 564 R202 5232-104J16P RES,CBN 1/6P 100K 635 C317 5359-1525851 CAP,PPP 1500P 564 R203 5232-104J16P RES,CBN 1/6P 100K 635 C317 5359-1525851 CAP,PPP 1500P 564 R203 5232-104J16P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 562 R204 5232-471J16P RES,CBN 1/6P 470 632 C320 5345-227A0951 CAP,MINI ELE 220µ/6.3V 570 R205 5135-823522 RES,CBN 1/2P 82K 635 C321 5359-1525851 CAP,PPP 1500P 568 R207 5135-271522 RES,CBN 1/2P 22 RES,CBN 1/2P 1/2 RES,CBN 1/2P 22 RES,CBN 1/2P 1/2 RES	611							
636 C316 5359-5625851 CAP,PPP 5600P 564 R202 5232-104J16P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 564 R203 5232-104J16P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 562 R204 5232-471J16P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 562 R204 5232-471J16P RES,CBN 1/6P 100K 635 C318 5359-1525851 CAP,PPP 1500P 562 R204 5232-471J16P RES,CBN 1/6P 470 R205 5345-227A0951 CAP,MINI ELE 20μ/6.3V 570 R205 5135-823522 RES,CBN 1/2P 82K 635 C321 5359-1525851 CAP,PPP 1500P 568 R207 5135-220522 RES,CBN 1/2P 22 RES,CBN 1/2P 100 R205 S345-S06BM107 CAP,MINI ELE 100μ/10V 569 R206 5135-221522 RES,CBN 1/2P 100 RES,CBN 1/6P 120 R205 S345-S06BM107 CAP,MINI ELE 100μ/10V 569 R210 5135-135-102522 RES,CBN 1/2P 100 RES,CBN 1/6P 120 RES,CBN 1/2P 100 RES,CBN 1								
635 C317 5359-1525851 CAP.PPP 1500P 564 R203 5232-104J16P RES,CBN 1/6F 100K 635 C318 5359-1525851 CAP.PPP 1500P 562 R204 5232-47J16P RES,CBN 1/6F 100K 635 C319 5345-227A0951 CAP,MINI ELE 220μ/6.3V 570 R205 5135-823522 RES,CBN 1/2P 82K 635 C320 5345-227A0951 CAP,MINI ELE 220μ/6.3V 570 R205 5135-22522 RES,CBN 1/2P 82K 635 C321 5359-1525851 CAP.PPP 1500P 568 R207 5135-271522 RES,CBN 1/2P 22 6355 C322 5359-1525851 CAP.PPP 1500P 568 R207 5135-271522 RES,CBN 1/2P 270 R33 C322 5359-1525851 CAP.PPP 1500P 560 R208 5135-102522 RES,CBN 1/2P 170 R533 C323 5345-S06BM107 CAP,MINI ELE 100μ/10V 565 R209 5232-121J16P RES,CBN 1/2P 170 R533 C325 5345-S06BM107 CAP,MINI ELE 100μ/10V 569 R210 5135-472522 RES,CBN 1/2P 4.7K 633 C326 5345-S06BM107 CAP,MINI ELE 100μ/10V 569 R210 5135-472522 RES,CBN 1/2P 2.2K 642 C402 5345-S06BM107 CAP,MINI ELE 100μ/10V 569 R210 5135-222521 RES,CBN 1/2P 2.2K 643 C404 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 643 C404 5345-306BM107 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP.01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP.01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP.01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 645 C406 5359-S010J103 CAP,PPP.01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 2.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 2.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 575 R315 S35-220522 RES,CBN 1/2P 2.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 575 R315 S35-220522 RES,CBN 1/2P 2.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 575 R315 S35-220522 RES,CBN 1/2P 2.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 575 R315 S35-220522 RES,CBN 1/2P 10K 641 C501 5345-S06BM107 CAP,MINI ELE 10μ/16V 595 R303 5135-220522 RES,CBN 1/2P 10K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 595 R303 5135-220522 RES,CBN 1/2P 10K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/16V 60	636							
635 C318 5359-1528851 CAP,PPP 1500P 562 R204 5232-471J16P RES,CBN 1/6P 470 632 C319 5345-227A0951 CAP,MINI ELE 220μ/6.3V 570 R205 5135-823522 RES,CBN 1/2P 28K 635 C321 5359-1525851 CAP,PPP 1500P 568 R207 5135-271522 RES,CBN 1/2P 270 635 C321 5359-1525851 CAP,PPP 1500P 568 R207 5135-271522 RES,CBN 1/2P 170 633 C323 5345-506BM107 CAP,MINI ELE 100μ/10V 565 R208 5135-102552 RES,CBN 1/2P 170 633 C324 5345-506BM107 CAP,MINI ELE 100μ/10V 565 R209 5232-121J16P RES,CBN 1/2P 170 633 C324 5345-506BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-2221J16P RES,CBN 1/2P 2.0K 633 C326 5345-506BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-2221J16P RES,CBN 1/2P 2.0K 633 C326 5345-506BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-2221J16P RES,CBN 1/2P 2.2K 632 C324 S345-506BM107 CAP,MINI ELE 100μ/10V 566 R211 535-22552 RES,CBN 1/2P 2.2K 634 C402 5345-506BM107 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 634 C404 5345-476E0962 CAP,MINI ELE 100μ/10V 571 R214 5135-222522 RES,CBN 1/2P 2.2K 634 C404 5345-476E0962 CAP,MINI ELE 47μ/35V 571 R215 5135-222522 RES,CBN 1/2P 2.2K 6359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-220522 RES,CBN 1/2P 2.2K 634 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C405 5345-506BM107 CAP,MINI ELE 10μ/10V 595 R302 5135-20522 RES,CBN 1/2P 2.2K 634 C406 5359-S010J103 CAP,PPP .01μ 571 R217 5135-222522 RES,CBN 1/2P 2.2K 634 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 634 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 10K 635 C406 5359-1225851 CAP,PPP 1200P 595 R303 5135-102522 RES,CBN 1/2P 10K 636 C406	635	C317		CAP,PPP 1500P				
632 C320 5345-227A0951 CAP,MINI ELE 220μ/6.9V 567 R206 5135-220522 RES,CBN 1/2P 22 C3559-1525851 CAP,PPP 1500P 568 R207 5135-271522 RES,CBN 1/2P 27 C3535-1525851 CAP,PPP 1500P 560 R208 5135-102522 RES,CBN 1/2P 1K C323 5359-1525851 CAP,PPP 1500P 560 R208 5135-102522 RES,CBN 1/2P 1K C323 5359-1525851 CAP,PPP 1500P 560 R208 5135-102522 RES,CBN 1/2P 1K C323 5345-S06BM107 CAP,MINI ELE 100μ/10V 565 R209 5232-1211/16P RES,CBN 1/2P 4.7K C323 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-2221/16P RES,CBN 1/2P 2.2K C402 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R212 5232-2221/16P RES,CBN 1/6P 2.2K C402 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R212 5232-2221/16P RES,CBN 1/2P 2.2K C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R214 5135-222522 RES,CBN 1/2P 2.2K C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R215 5135-222522 RES,CBN 1/2P 2.2K C403 5359-S010J103 CAP,PPP .01μ 571 R215 5135-222522 RES,CBN 1/2P 2.2K C405 5359-S010J103 CAP,PPP .01μ 571 R215 5135-222522 RES,CBN 1/2P 2.2K C407 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R216 5135-222522 RES,CBN 1/2P 2.2K C407 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 2.2K C407 5345-S06BM107 CAP,MINI ELE 10μ/10V 595 R301 5135-220522 RES,CBN 1/2P 2.2K C407 5345-S06BM107 CAP,MINI ELE 10μ/10V 595 R301 5135-220522 RES,CBN 1/2P 2.2K C407 5345-S06BM107 CAP,MINI ELE 10μ/10V 595 R303 5135-103522 RES,CBN 1/2P 22 RES,CBN 1/2P 10K 633 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 636 C701 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 636 C701 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 636 C701 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 636 C701 5345-S06BM107 CAP,MINI ELE 10					562	R204	5232-471J16P	
C321 5359-1525851 CAP,PPP 1500P 568 R207 5135-220322 RES,CBN 1/2P 270	632							
635 C322 5359-1525851 CAP,PPP 1500P 560 R208 5135-102522 RES,CBN 1/2P 1K 633 C324 5345-S06BM107 CAP,MINI ELE 100μ/10V 565 R209 5232-121/16P RES,CBN 1/6P 120 633 C324 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R210 5135-472522 RES,CBN 1/6P 2.2K 633 C326 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-222J16P RES,CBN 1/6P 2.2K 634 C402 5345-S06FM106 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/6P 2.2K 634 C402 5345-S06FM106 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 642 C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 643 C404 5345-476E0962 CAP,MINI ELE 47μ/35V 571 R215 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP .01μ 571 R215 5135-222522 RES,CBN 1/2P 2.2K 645 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 6135-102522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 6135-102522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 2.2 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 22 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 22 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 22 CAP,MINI ELE 100μ/10V 595 R303 5135-220522 RES,CBN 1/2P 22 CAP,MINI ELE 100μ/10V 595 R303 5135-220522 RES,CBN 1/2P 10K 686 C701 5345-S06BM107 CAP,MINI ELE 20μ/10V 603 R306 5135-103522 RES,CBN 1/2P 10K 686 C701 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 686 C705 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 686 C705 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 686 C705 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 686 C705 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 686 C705 5345-S06BM107 CAP,MI	635	C321	5359-1525851	CAP,PPP 1500P				
633 C324 5345-S06BM107 CAP,MINI ELE 100μ/10V 569 R210 5135-472522 RES,CBN 1/2P 4.7K 633 C325 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-222J16P RES,CBN 1/2P 4.7K 633 C326 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-222J16P RES,CBN 1/6P 2.2K 644 C402 5345-S06FM106 CAP,MINI ELE 10μ/50V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 642 C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R214 5135-222522 RES,CBN 1/2P 2.2K 643 C404 5345-476E0962 CAP,MINI ELE 47μ/35V 571 R215 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R217 5135-222522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 10μ/10V 595 R301 5135-20522 RES,CBN 1/2P 22 CK 641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-20522 RES,CBN 1/2P 22 CK 641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-20522 RES,CBN 1/2P 22 CK 641 C502 5359-1225851 CAP,PPP 1200P 595 R303 5135-20522 RES,CBN 1/2P 22 CK 645 C603 5354-104593 CAP,PPP 1200P 595 R303 5135-20522 RES,CBN 1/2P 22 CK 646 C603 5354-104593 CAP,PPP 1200P 595 R303 5135-20522 RES,CBN 1/2P 22 CAP, MINI ELE 10μ/50V 603 R306 5135-103522 RES,CBN 1/2P 10K 658 C701 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R306 5135-103522 RES,CBN 1/2P 10K 658 C704 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 658 C704 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 658 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 658 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 658 C706 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 658 C706 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 658 C706 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 658 C706 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 658 C706 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R311 5135-10352	635				560	R208	5135-102522	
633 C325 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R211 5232-222J16P RES,CBN 1/6P 2.2K 6345 C326 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R212 5232-222J16P RES,CBN 1/6P 2.2K 644 C402 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R213 5135-22522 RES,CBN 1/2P 2.2K 645 C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R214 5135-22522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP .01μ 571 R215 5135-222522 RES,CBN 1/2P 2.2K 645 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 645 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 641 C501 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 1.2K 641 C502 5345-S06BM107 CAP,MINI ELE 10μ/10V 595 R301 5135-220522 RES,CBN 1/2P 1.2 RES,CBN 1	633 633							
\$634 C326 5345-S06BM107 CAP,MINI ELE 100μ/10V 566 R212 5232-222J16P RES,CBN 1/6P 2.2K 544 C402 5345-S06FM106 CAP,MINI ELE 100μ/10V 571 R213 5135-222522 RES,CBN 1/2P 2.2K 545 C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R214 5135-222522 RES,CBN 1/2P 2.2K 545 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 545 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-22522 RES,CBN 1/2P 2.2K 545 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 545 C405 5359-S010J103 CAP,PPP .01μ 571 R217 5135-222522 RES,CBN 1/2P 2.2K 545 C405 5359-S010J103 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 1.2K 544 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 1.2K 544 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 22 C675 C601 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 C675 C602 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 C675 C603 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 22 C676 C604 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 568 C701 5345-S06BM106 CAP,MINI ELE 200μ/10V 603 R306 5135-103522 RES,CBN 1/2P 10K 568 C704 5353-050534 CAP,MYL .1μ 603 R306 5135-103522 RES,CBN 1/2P 10K 568 C704 5353-050534 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 568 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 568 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 566	633	C325						
542 C403 5345-S06BM107 CAP,MINI ELE 100μ/10V 571 R215 5135-222522 RES,CBN 1/2P 2.2K 543 C404 5345-476E0962 CAP,MINI ELE 47μ/35V 571 R215 5135-222522 RES,CBN 1/2P 2.2K 545 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 545 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 545 C406 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 545 C407 5345-108C0951 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 2.2K 541 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 22 641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 22 665 C602 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 6576 C602 5359-1225851 CAP,PPP 1200P 595 R304 5135-220522 RES,CBN 1/2P 22 6576 C603 5354-104593 CAP,MYL .1μ 603 R306 5135-103522 RES,CBN 1/2P 10K 588 C701 5345-S06BM107 CAP,MINI ELE 220μ/10V 603 R306 5135-103522 RES,CBN 1/2P 10K 587 C702 5345-S06BM106 CAP,MINI ELE 220μ/10V 603 R306 5135-103522 RES,CBN 1/2P 10K 587 C702 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R308 5135-103522 RES,CBN 1/2P 10K 589 C704 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 588 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 10μ/50V 603 R311 5135-103522 RES,CBN	633				566	R212		
643 C404 5345-476E0962 CAP,MINI ELE 47μ/35V 571 R215 5135-222522 RES,CBN 1/2P 2.2K 645 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 6557 C407 5345-106C0951 CAP,MINI ELE 10μ/16V 571 R217 5135-222522 RES,CBN 1/2P 2.2K 6641 C501 5345-S06BM107 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 1K 641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 1K 641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 22 675 C601 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 676 C602 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 676 C603 5354-104593 CAP,MYL .1μ 603 R304 5135				•				
645 C405 5359-S010J103 CAP,PPP .01μ 571 R216 5135-222522 RES,CBN 1/2P 2.2K 645 C406 5359-S010J103 CAP,PPP .01μ 571 R217 5135-222522 RES,CBN 1/2P 2.2K 657 C407 5345-106C0951 CAP,MINI ELE 10μ/16V 577 R218 5135-222522 RES,CBN 1/2P 1.2K 641 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 22 641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 22 675 C601 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 676 C602 5359-1225851 CAP,PPP 1200P 595 R304 5135-220522 RES,CBN 1/2P 22 676 C603 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 588 C701 5345-S06FM106 CAP,MINI ELE 20μ/10V 603 R305 5135-103522 </td <td>543</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>	543							
645 C406 5359-S010J103 CAP,PPP .01μ 571 R217 5135-222522 RES,CBN 1/2P 2.2K 6547 C407 5345-106C0951 CAP,MINI ELE 10μ/16V 577 R218 5135-102522 RES,CBN 1/2P 1K 641 C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 22 675 C601 5359-1225851 CAP,PPP 1200P 595 R302 5135-220522 RES,CBN 1/2P 22 675 C602 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 676 C603 5354-104593 CAP,PPP 1200P 595 R304 5135-20522 RES,CBN 1/2P 22 676 C603 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 588 C701 5345-S06BM227 CAP,MINI ELE 220μ/10V 603 R305 5135-103522 RES,CBN 1/2P 10K 587 C702 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R308 5135-103522	545 545			CAP,PPP .01µ	571			
C501 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R301 5135-220522 RES,CBN 1/2P 22								RES,CBN 1/2P 2.2K
641 C502 5345-S06BM107 CAP,MINI ELE 100μ/10V 595 R302 5135-220522 RES,CBN 1/2P 22 675 C601 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 675 C602 5359-1225851 CAP,PPP 1200P 595 R304 5135-220522 RES,CBN 1/2P 22 676 C603 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 603 R306 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R309 F135-103522 RES,CBN 1/2P 10K 603 R309 R309 R309 R309 R309 R309 R309 R3	641							
675 C601 5359-1225851 CAP,PPP 1200P 595 R303 5135-220522 RES,CBN 1/2P 22 675 C602 5359-1225851 CAP,PPP 1200P 595 R304 5135-220522 RES,CBN 1/2P 22 676 C603 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 603 R306 5135-103522 RES,CBN 1/2P 10K 603 R306 5135-103522 RES,CBN 1/2P 10K 603 R306 5135-103522 RES,CBN 1/2P 10K 603 R307 5135-103522 RES,CBN 1/2P 10K 603 R307 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R309 R309 R30	641	C502	5345-S06BM107	CAP,MINI ELE 100µ/10V				
576 C603 5354-104593 CAP,MYL .1μ 603 R305 5135-103522 RES,CBN 1/2P 10K 588 C701 5345-S06BM227 CAP,MINI ELE 220μ/10V 603 R306 5135-103522 RES,CBN 1/2P 10K 587 C702 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R308 5135-103522 RES,CBN 1/2P 10K 587 C703 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R308 5135-103522 RES,CBN 1/2P 10K 589 C704 5353-050534 CAP,MCA 5P 603 R309 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 586 C707 5365-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 586 C707 5365-S06BM107 CAP,MINI ELE 100μ/10V					595	R303	5135-220522	RES,CBN 1/2P 22
576 C604 5354-104593 CAP,MYL .1μ 603 R306 5135-103522 RES,CBN 1/2P 10K 658 C701 5345-S06BM227 CAP,MINI ELE 220μ/10V 603 R307 5135-103522 RES,CBN 1/2P 10K 6587 C702 5345-S06FM106 CAP,MINI ELE 10μ/50V 603 R308 5135-103522 RES,CBN 1/2P 10K 6589 C704 5353-050534 CAP,MCA 5P 603 R309 5135-103522 RES,CBN 1/2P 10K 6589 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 6580 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 6580 C706 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R311 5135-103522 RES,CBN 1/2P 10K 6580 C706 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C706 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C706 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 5345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 6345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 6580 C707 6345-S06BM107 CAP,MINI ELE 100μ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K	576			•				
588 C701 5345-S06BM227 CAP,MINI ELE 220µ/10V 603 R307 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R308 5135-103522 RES,CBN 1/2P 10K 603 R309 603 R309 5135-103522 RES,CBN 1/2P 10K 603 R309 603	576	C604	5354-104593	CAP,MYL.1µ				
587 C703 5345-S06FM106 CAP,MINI ELE 10µ/50V 603 R309 5135-103522 RES,CBN 1/2P 10K 589 C704 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 100µ/10V 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C707 5345-S06BM107 CAP,MINI ELE 100µ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K	588 587				603	R307	5135-103522	RES,CBN 1/2P 10K
589 C704 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 589 C705 5353-050534 CAP,MCA 5P 603 R310 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S08BM107 CAP,MINI ELE 100µ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K 586 C707 5345-\$08BM107 CAP,MINI ELE 100µ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K	587 587							
589 C705 5353-050534 CAP,MCA 5P 603 R311 5135-103522 RES,CBN 1/2P 10K 586 C706 5345-S06BM107 CAP,MINI ELE 100µ/10V 603 R312 5135-103522 RES,CBN 1/2P 10K	589	C704	5353-050534	CAP,MCA 5P				
000 C/00 5345-S06BM107 CAP,MINI ELE 1001/10V 603 R312 5135-103522 RES,CBN 1/2P 10K	589 586				603	R311	5135-103522	RES,CBN 1/2P 10K
605 H313 5135-563522 RES,CBN 1/2P 56K	586 586							RES,CBN 1/2P 10K
	-			,	605	noid	J130-003022	MED, UBIN 1/2P 56K

Ser No	Ref No.	Part No.	Description	Ser. No	o. Ref. No.	Part No.	<u>Description</u>
605	R314	5135-563522	RES,CBN 1/2P 56K	578	IC701	5654-MN6471M	IC,DIGITAL
601	R315	5135-222522	RES,CBN 1/2P 2.2K	370	10701	3034-10111047 1101	IO,DIGITAL
601	R316	5135-222522	RES,CBN 1/2P 2.2K			TRANSISTORS	
604	R317	5135-473522	RES,CBN 1/2P 47K	773	Q1	5614-2012	XISTOR,NPN A
604 600	R318 R319	5135-473522 5135-102522	RES,CBN 1/2P 47K RES,CBN 1/2P 1K	772 651	Q2 Q50	5612-1375 5613-C114ES	XISTOR,PNP A XISTOR,NPN R
600	R320	5135-102522	RES,CBN 1/2P 1K	652	Q51	5612-B114ES	XISTOR, PNP A
600	R321	5135-102522	RES,CBN 1/2P 1K	653	Q52	5613-2320L(F)	XISTOR,NPN R
600	R322	5135-102522	RES,CBN 1/2P 1K	685	Q101	5614-667(C)	XISTOR,NPN A
602 602	R323 R324	5135-682522 5135-682522	RES,CBN 1/2P 6.8K RES,CBN 1/2P 6.8K	686 688	Q102 Q103	5612-647(C) 5611-A124ES	XISTOR,PNP A XISTOR,PNP R
607	R325	5135-104522	RES,CBN 1/2P 100K	685	Q104	5614-667(C)	XISTOR,NPN A
607	R326	5135-104522	RES,CBN 1/2P 100K	689	Q105	5611-999L(F)	XISTOR, PNP R
608 608	R327 R328	5135-184522 5135-184522	RES,CBN 1/2P 180K RES,CBN 1/2P 180K	687 687	Q106 Q107	5613-C124ES	XISTOR,NPN R
596	R329	5135-101522	RES,CBN 1/2P 100	591	Q301	5613-C124ES 5613-2320L(F)	XISTOR,NPN R XISTOR,NPN R
596	R330	5135-101522	RES,CBN 1/2P 100	591	Q302	5613-2320L(F)	XISTOR,NPN R
598	R331	5135-561522	RES,CBN 1/2P 560	592	Q303	5611-999L(F)	XISTOR, PNP R
598 594	R332 R333	5135-561522 5135-2R2522	RES,CBN 1/2P 560 RES,CBN 1/2P 2.2	592 591	Q304 Q305	5611-999L(F) 5613-2320L(F)	XISTOR,PNP R XISTOR,NPN R
594	R334	5135-2R2522	RES,CBN 1/2P 2.2	591	Q306	5613-2320L(F)	XISTOR,NPN R
594	R335	5135-2R2522	RES,CBN 1/2P 2.2	592	Q307	5611-999L(F)	XISTOR,PNP R
594 600	R336 R337	5135-2R2522 5135-102522	RES,CBN 1/2P 2.2	592	Q308	5611-999L(F)	XISTOR, PNP R
600	R338	5135-102522	RES,CBN 1/2P 1K RES,CBN 1/2P 1K	592 592	Q309 Q310	5611-999L(F) 5611-999L(F)	XISTOR,PNP R XISTOR,PNP R
603	R339	5135-103522	RES,CBN 1/2P 10K	591	Q311	5613-2320L(F)	XISTOR,NPN R
603	R340	5135-103522	RES,CBN 1/2P 10K	591	Q312	5613-2320L(F)	XISTOR,NPN R
597 597	R341 R342	5135-471522 5135-471522	RES,CBN 1/2P 470 RES,CBN 1/2P 470	621	Q313	5613-2320L(F)	XISTOR,NPN R
631	R343	5135-561522	RES,CBN 1/2P 560	621 622	Q314 Q315	5613-2320L(F) 5611-999L(F)	XISTOR,NPN R XISTOR,PNP R
631	R344	5135-561522	RES,CBN 1/2P 560	622	Q316	5611-999L(F)	XISTOR,PNP R
628	R345	5135-102522	RES,CBN 1/2P 1K	623	Q317	5616-SK246GR2	FET,N-CH
628 628	R346 R347	5135-102522 5135-102522	RES,CBN 1/2P 1K RES,CBN 1/2P 1K	623 533	Q318	5616-SK246GR2	FET,N-CH
628	R348	5135-102522	RES,CBN 1/2P 1K	533	Q401 Q402	5613-2320L(F) 5613-2320L(F)	XISTOR,NPN R XISTOR,NPN R
627	R349	5135-101522	RES,CBN 1/2P 100	533	Q403	5613-2320L(F)	XISTOR,NPN R
627	R350	5135-101522	RES,CBN 1/2P 100	533	Q404	5613-2320L(F)	XISTOR,NPN R
627 627	R351 R352	5135-101522 5135-101522	RES,CBN 1/2P 100 RES,CBN 1/2P 100	534 534	Q405 Q406	5611-A124ES 5611-A124ES	XISTOR, PNP R
630	R353	5135-183522	RES,CBN 1/2P 18K	534	Q407	5611-A124ES	XISTOR,PNP R XISTOR,PNP R
630	R354	5135-183522	RES,CBN 1/2P 18K	668	Q601	5616-SK246GR2	FET,N-CH
626	R355	5135-100522	RES,CBN 1/2P 10	668	Q602	5616-SK246GR2	FET,N-CH
626 628	R356 R357	5135-100522 5135-102522	RES,CBN 1/2P 10 RES,CBN 1/2P 1K	669	Q603	5612-B114ES	XISTOR,PNP A
628	R358	5135-102522	RES,CBN 1/2P 1K			DIODES	
626	R361	5135-100522	RES,CBN 1/2P 10	775 ₫		5632-S5566B	DIODE,RECT
626 537	R362 R401	5135-100522 5232-473J16P	RES,CBN 1/2P 10 RES,CBN 1/6P 47K	775 <u>∧</u>		5632-S5566B	DIODE,RECT
537	R402	5232-473J16P	RES,CBN 1/6P 47K	775 <u>∧</u> 775 <u>∧</u>		5632-S5566B 5632-S5566B	DIODE,RECT DIODE,RECT
537	R403	5232-473J16P	RES,CBN 1/6P 47K	775 ⚠		5632-S5566B	DIODE,RECT
537	R404	5232-473J16P	RES,CBN 1/6P 47K	775 ⚠		5632-S5566B	DIODE,RECT
538 540	R405 R406	5135-100522 5135-331522	RES,CBN 1/2P 10 RES,CBN 1/2P 330	776 777	D7 D8	5635-HZ5B-2 5635-HZ27P-B	DIODE,ZENER DIODE,ZENER
539	R407	5135-120522	RES,CBN 1/2P 12	654	D50	5631-1S2473	DIODE, DET
539	R408	5135-120522	RES,CBN 1/2P 12	662	D51	5631-1SS133	DIODE, DET
541 541	R409 R410	5135-473522 5135-473522	RES,CBN 1/2P 47K RES,CBN 1/2P 47K	693	D101	5631-182473	DIODE, DET
541	R411	5135-473522	RES,CBN 1/2P 47K	690 690	D102 D103	5635-HZ5C-2 5635-HZ5C-2	DIODE,ZENER DIODE,ZENER
541	R412	5135-473522	RES,CBN 1/2P 47K	694	D104	5635-HZ18-2L	DIODE,ZENER
538	R414	5135-100522	RES,CBN 1/2P 10	691	D105	5635-HZ3B-2	DIODE,ZENER
642 642	R501 R502	5135-220522 5135-220522	RES,CBN 1/2P 22 RES,CBN 1/2P 22	692 693	D106 D107	5635-HZ3C-2 5631-152473	DIODE,ZENER
644	R502	5135-103522	RES,CBN 1/2P 10K	535	D107 D409	5631-1S2473 5631-1SS133	DIODE,DET DIODE,DET
644	R508	5135-103522	RES,CBN 1/2P 10K	670	D601	5631-1S2473	DIODE,DET
643	R509	5135-560522	RES,CBN 1/2P 56	670	D602	5631-1S2473	DIODE,DET
643 671	R510 R601	5135-560522 5135-123522	RES,CBN 1/2P 56 RES,CBN 1/2P 12K			MISCELLANEOUS	
671	R602	5135-123522	RES,CBN 1/2P 12K	736	CN101	4443-05501022	CONNECTOR, 22 PIN
673	R603	5135-105522	RES,CBN 1/2P 1M	547		4443-0501140	CONNECTOR, 5 PIN
673	R604	5135-105522	RES,CBN 1/2P 1M	734		4443-0201140	CONNECTOR, 2 PIN
672 581	R605 R701	5135-154522 5135-121522	RES,CBN 1/2P 150K RES,CBN 1/2P 120	734 549		4443-0201140 4443-0201140	CONNECTOR, 2 PIN CONNECTOR, 2 PIN
580	R702	5135-100522	RES,CBN 1/2P 10	796		4443-0501140	CONNECTOR, 5 PIN
584	R703	5232-472J16P	RES,CBN 1/6P 4.7K	548		4443-0301140	CONNECTOR, 3 PIN
582 582	R704 R705	5135-101522	RES,CBN 1/2P 100	550	CN111	4443-05501030	CONNECTOR, 30 PIN
JU2	. 17 00	5135-101522	RES,CBN 1/2P 100	551 836		4443-05501022 4443-030185	CONNECTOR, 22 PIN CONNECTOR, 3 PIN
		INTEGRATED CIRCUI		836	CN117	4443-030185	CONNECTOR, 3 PIN
771	IC1	5653-M5290P	IC,LINEAR	836		4443-030185	CONNECTOR, 3 PIN
681 683	IC101 IC102	5653-NJM4565D 5653-BA6247N	IC,LINEAR IC,LINEAR	836 837		4443-030185 4443-070185	CONNECTOR, 3 PIN
682	IC102	5653-LA6515	IC,LINEAR	549		4443-0201140	CONNECTOR, 7 PIN CONNECTOR, 2 PIN
561	IC201	5654-MN6626	IC,DIGITAL	836	CN122	4443-030185	CONNECTOR, 3 PIN
531	IC401	5654-MN18724L	IC,DIGITAL	555		4163-S0202451	CONNECTOR, W/W
532 639	IC402 IC501	5654-T74HC04F 5653-NJM4565D	IC,DIGITAL IC,LINEAR	655 842	RL50 W101	4331-02001 4132-R0102201	RELAY,DC CORD,2C
			,	~ **			

Ser. No. Ref. No. Part No. Ser. No. Ref. No. Part No. **Description** Description 4242-R0104800 JUMPER LEAD, 5 WIRE 839 W103 Q802 5613-2320L(F) XISTOR, NPN R 5691-S0901343 XTAL,OSC, 33.8688MHz 579 X701 TERMINAL (X7) 844 TM11-17 4214-132 **MISCELLANEOUS** 753 LCN103 4163-S0105301 CONNECTOR W/W, 5 PIN 741 PH801 5624-GP1S53V PHOTO COUPLER, SENSOR PCB-2 FRONT P. C. BOARD 741 PH802 5624-GP1S53V PHOTO COUPLER, SENSOR CAPACITOR C401 5345-107B0356 CAP,MINI ELE 100µ/10V 510 PCB-5 DISC SENSOR P. C. BOARD RESISTOR RESISTOR 755 R801 5135-331522 RES,CBN 1/2P 330 509 R413 5135-100522 RES.CBN 1/2P 10 DIODE DIODES 743 D801 5637-GL380 LED, SENSOR 5631-152473 504 D401 DIODE, DET D402 504 5631-1S2473 DIODE.DET **MISCELLANEOUS** DIODE, DET D403 504 5631-152473 756 CN102 4443-0201141 CONNECTOR D404 504 5631-1S2473 DIODE.DET D405 504 5631-152473 DIODE.DET 504 D406 5631-152473 DIODE.DET PCB-6 UP/DOWN SWITCH P. C. BOARD 504 D407 5631-182473 DIODE DET 5631-1S2473 504 D408 DIODE, DET MISCELLANEOUS 552 LCN107 4163-S0102501 CONNECTOR W/W, 2 PIN MISCELLANEOUS 553 SW431 4438-00201 PU-MI SWITCH, UP/DOWN CN110 CONNECTOR, 12 PIN CONNECTOR, 30 PIN 513 4443-05401012 4443-05401030 CN114 514 TUBE DISPLAY, TRACK NO.
RECEIVER BLOCK, REMOTE SENSOR 5722-055 501 FL401 PCB-7 VOLUME P. C. BOARD RC401 6143-00802 503 SW401 4437-00610 PU-TC SWITCH, DISPLAY 506 CONTROL SW402 4437-00610 PU-TC SWITCH, REPEAT 506 831 VR301 6161-00602 VR BLOCK 5K, (w/MVR), OUTPUT LEVEL PU-TC SWITCH, RANDOM SW403 4437-00610 506 PU-TC SWITCH, TIME 506 SW404 4437-00610 SW405 PU-TC SWITCH, STOP 506 4437-00610 PCB-8 MOTOR P. C. BOARD 506 SW406 4437-00610 PU-TC SWITCH, PLAY/PAUSE 506 SW407 4437-00610 PU-TC SWITCH, SEARCH FORWARD CAPACITOR SW408 506 4437-00610 PU-TC SWITCH, SEARCH BACK 718 C118 5359-S010J223 CAP,PPP .022µ 506 SW409 4437-00610 PU-TC SWITCH, SKIP FORWARD SW410 4437-00610 PU-TC SWITCH, SKIP BACK 506 **MISCELLANEOUS** PU-TC SWITCH, DISC SKIP SW411 4437-00610 739 LCN106 4163-S0102301 CONNECTOR W/W, 2 PIN PCB-3 OUTPUT P. C. BOARD PCB-9 POWER SWITCH P. C. BOARD CAPACITOR **MISCELLANEOUS** 810 C901 5345-226C0962 CAP, MINI ELE 22µ/16V LCN108 4163-S0105141 CONNECTOR W/W, 5 PIN 797 834 SW₁ 4431-S0508102 PUSH SWITCH, POWER **RESISTORS** 806 R901 5232-101J16P RES,CBN 1/6P 100 807 R902 5232-473J16P RES, CBN 1/6P 47K PCB-10 HEADPHONES P. C. BOARD RES, CBN 1/2P 47 804 R903 5135-470522 805 R904 5135-331522 RES, CBN 1/2P 330 CAPACITOR R905 5232-392J16P RES, CBN 1/6P 3.9K C505 808 649 5354-104593 CAP, MYL.1µ **TRANSISTOR MISCELLANEOUS** XISTOR, PNP R 801 Q901 5611-A143ES 648 J501 4451-51501 1P JACK, HEADPHONES 647 L501 5995-1R0J107 COIL W/CORE **MISCELLANEOUS** 647 L502 5995-1R0J107 COIL W/CORE 4P PIN JACK, OUTPUT FIXED/VARIABLE 835 A J301 4484-40 L503 5995-1R0J107 647 COIL W/CORE 4451-00184 1P JACK, REMOTE IN 812 J901 1P JACK, REMOTE OUT 812 J902 4451-00184 813 LCN109 4163-S0103301 CONNECTOR W/W, 3 PIN PCB-11 TURN TABLE MOTOR P. C. BOARD 802 PH901 5624-ON3161 PHOTO COUPLER 4214-132 TERMINAL 848 TM18 CAPACITOR 5359-S010J223 CAP, PPP .022µ PCB-4 TABLE SENSOR P. C. BOARD **MISCELLANEOUS** 738 LCN104 4163-S0102251 CONNECTOR W/W, 2 PIN CAPACITOR 751 C801 5345-476C0356 CAP,MINI ELE 47µ/16V PCB-12 DISC SELECT P. C. BOARD RESISTORS 749 R802 5232-223J16P RES,CBN 1/6P 22K **MISCELLANEOUS** 748 R803 5232-103J16P RES,CBN 1/6P 10K 520 CN113 4443-05401012 CONNECTOR, 12 PIN 746 R804 5232-331J16P RES,CBN 1/6P 330 SW412 4437-00610 PU-TC SWITCH, DISC 1 519 746 R805 5232-331J16P RES, CBN 1/6P 330 SW413 4437-00610 519 PU-TC SWITCH, DISC 2 748 R806 5232-103J16P RES,CBN 1/6P 10K 519 SW414 4437-00610 PU-TC SWITCH, DISC 3 748 R807 5232-103J16P RES,CBN 1/6P 10K 519 SW415 4437-00610 PU-TC SWITCH, DISC 4 748 R808 5232-103J16P **RES,CBN 1/6P 10K** SW416 4437-00610 PU-TC SWITCH, DISC 5 519 745 R809 5232-101J16P RES,CBN 1/6P 100 519 SW417 4437-00610 PU-TC SWITCH, PROGRAM/CONTINUE 747 R810 5232-472J16P RES, CBN 1/6P 4.7K 519 SW418 4437-00610 PU-TC SWITCH, CHECK 750 R811 5232-104J16P RES, CBN 1/6P 100K SW419 4437-00610 PU-TC SWITCH, CLEAR 750 R812 5232-104J16P RES,CBN 1/6P 100K

742

Q801

TRANSISTORS

PHOTO XISTOR

5621-PT380F

Ser. No. Ref. No. Part No.

Description

PCB-13 10 KEY P. C. BOARD

		MISCELLANEOUS	
518	SW420	4437-00610	PU-TC SWITCH, TRACK +10
518	SW421	4437-00610	PU-TC SWITCH, TRACK 1
518	SW422	4437-00610	PU-TC SWITCH, TRACK 2
518	SW423	4437-00610	PU-TC SWITCH, TRACK 3
518	SW424	4437-00610	PU-TC SWITCH, TRACK 4
518	SW425	4437-00610	PU-TC SWITCH, TRACK 5
518	SW426	4437-00610	PU-TC SWITCH, TRACK 6
518	SW427	4437-00610	PU-TC SWITCH, TRACK 7
518	SW428	4437-00610	PU-TC SWITCH, TRACK 8
518	SW429	4437-00610	PU-TC SWITCH, TRACK 9
518	SW430	4437-00610	PU-TC SWITCH, TRACK 10

POB-14 TOP FL.P. C. BOARD

MISCELLANEOUS

522 CN115 4443-05501022 CONNECTOR, 22 PIN 517 FL402 5722-056 TUBE DISPLAY, DISC NO.

PCB-15 TRANS P. C. BOARD

	MISCELLANEOUS	
847 <u></u> ∆ T1	5584-S9301	XFORMER, POWER
847B <u></u> ▲ T1	5584-S9302	XFORMER, POWER @
845 ∆TM 1	4214-122	TERMINAL
845 <u></u> ∆TM2	4214-122	TERMINAL 🕮
845B ▲TM3	4214-122	TERMINAL 🗫
845B ∆TM 4	4214-122	TERMINAL 🗫
838 W1	4242-R0207201	JUMPER LEAD, 7 WIRE

CHASSIS MISCELLANEOUS

MISCELLANEOUS

554 LCN121	4163-06209002	CONNECTOR W/W
840 LUG	4211-4	LUG, W508
735 M101	4311-40101	DC MOTOR, TABLE
833 <u>∧</u> P1	4161-03601202	AC CORD W/PLUG, AC120V 🚳
833B <u>∧</u> P1	4161-03701220	AC CORD W/PLUG, AC220V/240V W
700 R142	5135-150522	RES,CBN 1/2P 15
025B ∆SW 101	4411-102729	ROTARY SWITCH, VOLTAGE SELECTOR
733 W103	4242-S0322201	JUMPER LEAD, 2 WIRE
733 W104	4242-S0322201	JUMPER LEAD
512 W110	4242-S0312251	JUMPER LEAD
546 W111	4242-S0330900	JUMPER LEAD
521 W112	4242-S0322201	JUMPER LEAD
846 W401	4242-R0104161	JUMPER LEAD, 8 WIRE
841 W402	4242-R0107161	JUMPER LEAD, 1 WIRE

ABBREVIATIONS IN PARTS LIST

^		n	1	TA	RS	
L.	м	г,	1	ILU	л.	

RESISTORS RES, CBN 1/6P :Carbon 1/6W RES, FUSE :Fuse CAP, MINI ELE :Electrolytic
CAP, CER :Ceramic
CAP, PPP :Polypropyle :Fuse :Polypropylene RES, CEM 5P :Cement 5W CAP, MYL CAP, MTL :Mylar :Metal RES, MTL 1P :Metal 1W 2.2K :2.2kΩ :Mica :220Ω 220

CAP, MCA CAP, MINI BP :Bipolar

:Electrolytic Bipolar :Polystyrene Film CAP, ELE BP **TRANSISTORS** CAP, STY


CAP, SPE :Special CAP, TAN :Tantalum XISTOR :Transistor FET :Field Effect Transistor

470µ :470µF :6800pF 6800p .047µ :0.047µF

CONTROLS

RES, V CBN :Variable Carbon Resistor RES, SEMI FIX :Semi-fixed Resistor

SAFETY RELATED COMPONENT. USE ONLY EXACT SAFETY RELATED COMPONENT. SPECIFIED.

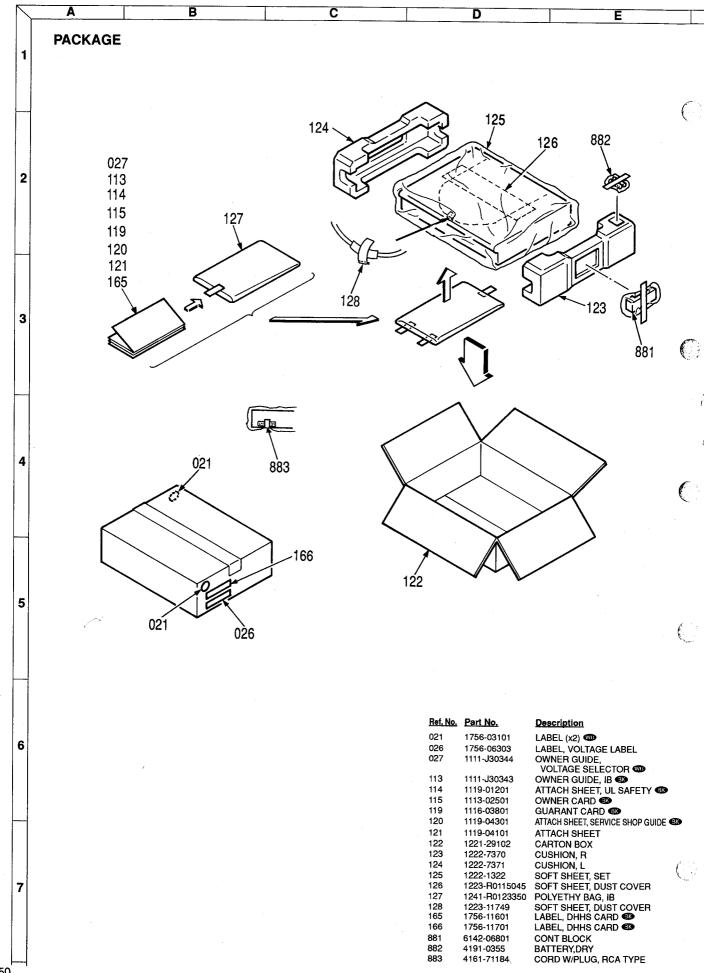

IC TERMINAL FUNCTIONS IN CD MECHANISM

IC101: AN8373S (Servo Amp.)

Terminal	Pon	1/0	Outline of functions
number	name		
1	AMPI	I	RF amp.input.
2	PDAD		Current input from PD.
3	PDA	Т	
4	PDBD	T	
5	PDB	T	·
6	LPD	1	LD-APC amp. input.
7	LD	0	LD-APC amp. output.
8	FBL₁	T	Connect VR terminal for PD balance.
9	FBL₂		
10	TBL	1	Connect VR terminal for tracking balance.
11	TBL₂	_	•
12	FOOFS	1	Connect VR terminal for focus offset.
13	IVA	0	Current/Voltage convert output (A).
14	IVB	0	Current/Voltage convert output (B).
15	FE	0	Focus error output.
16	FPI	ı	Focus phase amp. input.
17	TPI	1.	Tracking phase amp. input.
18	C-TPL	II .	Connect capacitor terminal for tracking (low).
19	C-TPH	T	Connect capacitor terminal for tracking (high).
20	C-FPL	Ī	Connect capacitor terminal for focus (low).
21	C-FPH	1	Connect capacitor terminal for focus (high).
22	TPO	0	Tracking phase amp. output.
23	FPO	0	Focus phase amp. output.
24	FGC	ı	Focus gain control (UP/Nor) input.
25	TGC	1	Tracking gain control (UP/Nor) input.
26	GD	П	Focus and tracking gain control (Down/Nor) input.
27	PTO	0	Potencial detect amp. output.
28	PTI	1	Potencial detect amp. input.
29	PBO	0	Potencial detect baffer output.
30	POT	ı	Potencial detect baffer input.
31	BDO	0	BDO output.
32	RFDET	0	RF detect output.
33	SDO	0	System DO output.
34	C-sago	T	Connect detection capacitor for BDO detect.
35	ARF	0	RF signal output.
36	C-AGC	T	Connect capacitor for AGC loop phase.
37	Vcc	II	Power supply (typ+5V).
38	LDON	T .	LD on/off select switch.
39	RFin	1	RF signal input.
40	AMPO	0	RF signal output.
41	VREF	0	Voltage output for servo amp.
42	Gnd	1	GND.

IC102: AN8374S (Servo Control)

Terminal number	Port name	1/0-	Outline of functions
1	LSA	ı	1-beam phase difference signal input. (A)
2	LSB	T	1-beam phase difference signal input. (B)
3	TE OFS	0	Offset adj. terminal for tracking servo.
4	TE	0	Tracking error voltage output.
5	TEG	ı	SW-Buff input for tracking servo.
6	TE OUT	0	SW-Buff output for tracking servo.
7	TE BPF	1	Window comparator input.
8	FEG	1	Focus servo input.
9	FE.OUT	0	Focus servo amp. output.
10	C.LW	ī	Focus servo search oscillation terminal.
11	Vref	1	Vref input.
12	ARF	1	RF signal input.
13	C.DSL	1	Connect loop filter of auto slice level control.
14	FPC	ı	PLL frequency input.
15	GND		GND.
16	C.PLL	-	Connect PLL loop filter.
17	VSS	1	GND.
18	CLK		Clock input. 88.2kHz
19	SRF	0	PCK synchronous ARF digital signal output.
20	PCK	0	Clock output.
21	EFM	0	EFM signal output.
22	Voo		Power supply.
23	SPCNT	0	Track cross speed control output.
24	SENSE	0	CROSS, SCROSS and OFTR output.
25	TRV F/R	0	Traverse output.
26	FLOCK	0	RFDET output.
27	KICK	0	Track jump control signal output.
28	LDON	0	LDON signal output.
29	VDET	0	When oscillation detecting, output level to H.
30	CNT1		Control input (FOON : Focus servo)
31	CNT2	1	Control input (TRON : Tracking servo)
32	CNT3	1	Control input (KICKF : Kick)
33	CNT4		Control input (KICKF : Kick)
34	TRV F		Servo mode of traverse select, forword side.
35	TRV R	1	Servo mode of traverse select, reverse side.
36	RFDET	ı	RF DET interface input.
37	BDO	1	BDO input.
38	Vcc		Power supply.
39	TRVO	0	TRV amp. output.
40	TRVI	1	TRV amp.reverse input.
41	BROUT	0	Break circuit output.
42	BRIN	1	Break circuit input.

IC103: AN8377N (3-channel Lenear Driver)

Terminal number	Port name	10	Outline of functions
1	PVcc	1	Power supply for power transistors.
2	Vcc	1	Power supply.
3	TB	0	Connect base of external transistor (PNP).
4	VMON	0	Connect collecter of external transistor (PNP).
5	TVDI	T	Traverse error input.
6	FDI		Focus error input.
7	TDI	1	Tracking error input.
8	VREF	1	VREF input.
9	TD-	0	Tracking BTL driver reverse output.
10	TD+	0	Tracking BTL driver output.
11	FD-	0	Focus BTL driver reverse output.
12	FD+	0	Focus BTL driver output.
13	TVD-	0	Traverse BTL driver reverse output.
14	TVD+	0	Traverse BTL driver output.
15	RESET	0	Reset output.
16	PC	1	Power cut input.

IC TERMINAL FUNCTIONS

IC201: MN6626 (Digital Signal Processor)

IC201:	MN662	6 (DI	gital Signal Processor)
Terminal number	name	170	Cutline of functions
1 2	AVSS		GND (0V) for DSL and PLL circuits. Standard current input.
3	ARF	l-i-	RF signal input.
4	DRF	H	Bias terminal for DSL.
5	DSLF	0	Loop filter terminal for DSL.
6	PLLF	1/0	Loop filter terminal for PLL.
7	AVDD	1	Power supply (+5V) for DSL and PLL.
8	RSEL	1	RF signal polarity select.
9	TBUS7	0	Test terminal. (Common: open)
10	TBUS6	0	Test terminal. (Common: open)
11	TBUS5	0	Test terminal. (Common: open)
12	TBUS4	0	Test terminal. (Common: open)
13	TBUS3	0	Test terminal. (Common: open) Test terminal. (Common: open)
15	TBUS1	0	Test terminal. (Common: open)
16	TBUSO	0	Test terminal. (Common: open)
17	FLAG	ō	Flag output.
18	IPFLAG	0	Interplation flag. H: Interplation
19	FCLK	0	Crystal frame clock. 7.35kHz
20	ВҮТСК	0	Bite clock.
21	WDCK	0	Word clock.
22	/RST	!	Reset input.
23	TX	0	Digital audio interface output signal.
24	LDG	0	L ch deglitch signal.
25	RDG SRDATA	0 0	R ch deglitch signal. Serial data output.
26 27	SCK	0	Bit clock for SRDATA.
28	LRCK		L ch and R ch discriminate signal.
29	XCK	0	Crystal oscillator clock output. 16.9344MHz
30	PMCK	ō	1/192 divider clock signal. 88.2kHz
31	CSEL	1	Test terminal. (Common: low level)
32	PSEL	ŀ	Test terminal. (Common: low level)
33	X1	-	Crystal oscillator input. 16.9344MHz
34	X2	0	Crystal oscillator output. 16.9344MHz
35	VSS		Power supply (0V).
36	SUBQ	0	Subcode Q code output.
37	SQCK /CLDCK	0	Subcode Q register clock output. Subcode frame clock signal. 7.35kHz
39	BLKCK	0	Subcode frame clock signal. 7.55kHz
40	DEMPH	0	De-emphasis signal. H: on
41	MEMP	1	Emphasis input for digital audio interface.
42	MLD	1	μ-com command load input. L: load
43	MCLK	1	μ-com command clock input.
44	MDATA	1	μ-com command data input.
45	DMUTE	1	Muting input. H: mute
46	SMCK	0	MSEL=H: 1/2 divider clock signal. 8.4672MHz
			MSEL=L: 1/4 divider clock signal. 4.239MHz
47	STAT	0	Status signal.
48	CRC SUBC	0	Subcode CRC check result output. Subcode serial output data.
49 50	SBCK	0 -	Clock input for SUBC.
51	/TRON	-	Tracking servo ON signal. L: ON
52	CLVS	-	Spindle servo phase synchronous signal.
53	PC	0	Spindle motor ON signal. L: ON
54	ECM	0	Spindle motor drive signal.
55	ECS	0	Spindle motor drive signal.
56	VDD	1	Power supply (+5V).
57	/TEST		Test terminal. (Common: low level)
58	SSEL		SUBQ terminal. Output mode select.
59	MSEL		SMCK terminal. Output frequency select.
60	RESY	0	Frame synchronous signal.
61 62	DO EFM	- 0	Drop out signal. EFM signal output.
63	PCK	0	PLL clock output. 4.3218MHz
64	PDO	0	Phase comparete EFM with PCK.
<u> </u>			The standard of the standard o

IC401: MN187124L (Microcomputer)

	. 1411 4 1 0 7 1		(Microcomputer)
Terminal number	Set more	1/0	Quitiline of functions Power supply (+5V).
2	OSC2	0	System clock output.
3	OSC1	1	System clock input. 4.23MHz
4	VSS	Ħ	GND
5	XI	Ť	NC
6	XO	ö	NC
7	VIN2	1/0	System reset output.
8	CNT1	1/0	Servo mode output 1.
9	CNT2	1/0	Servo mode output 2.
10	FLOCK	1/0	RF detector input.
11	CNT3	1/0	Servo mode output 3.
12	CNT4	1/0	Servo mode output 4.
13	TRV-F	1/0	Traverse servo mode output 1.
14	TRV-R	1/0	Traverse servo mode output 2.
15	REMO	T	Rimote control input.
16	BLKCK	T	Subcode block clock signal. 75Hz
17	MCLK	1/0	μ-com command clock signal.
18	MLD	1/0	μ-com command load signal.
19	BUZZER	1/0	μ-com command data signal.
20	SENSE	1/0	Servo signal.
21	RST	1/0	μ-com reset signal input. L: reset
22	DMUTE	1/0	DSP mute signal. L: mute
23	STAT	1/0	Status signal.
24	VOL UP/DOWN	1/0	Volume up/down 3 state output.
25	SQCK	10	Subcode Q register result clock.
26	SUBQ	1/0	Subcode Q code input.
27	SBOO	1/0	NC
28	SYNC	0	NC
29	CM	ī	GND
30	POS	1/0	
31	DNO		Photo sensor input. (Position det.)
-		<u> </u>	Photo sensor input. (Disc number det.)
32	DCHK	1/0	Photo sensor input. (Disc det.)
34	KEY4	20	Key input.
	KEY3		Key input.
35	KEY2	1/0	Key input.
36	KEY1	1/0	Key input.
37	KEY0	1/0	Key input.
38	G10	0	Display output. Key scan output.
39	G9	0	Display output. Key scan output.
40	G8	0	Display output. Key scan output.
41	G7	0	Display output. Key scan output.
42	G6	0	Display output. Key scan output.
43	G5	0	Display output. Key scan output.
44	G4	0	Display output. Key scan output.
45	G3	0	Display output. Key scan output.
46	G2	1/0	Display output.
47	G1	1/0	Display output.
48		1/0	Loading motor out
49		1/0	Loading motor in
50	SPEED	1/0	Disc table rotate signal. H: low rotate
51	MCON2	1/0	Disc table up/down control signal.
52	MCON1	1/0	Disc table up/down control signal.
53	k	1/0	Display output.
54		I/O	Display output.
55	i	I/O	Display output.
56	h	0	Display output.
57	g	0	Display output.
58	f	0	Display output.
59	е	0	Display output.
60	ď	0	Display output.
61	С	0	Display output.
62	b	0	Display output.
63	a	0	Display output.
64	Vpp	T	Negative power supply.

IC701: MN6471M (Digital Filter & D/A Converter)

Terminal number	Port name	I/O	Outline of functions
1	MLD	ı	μ-com command load input. (L: load)
2	RSTB	ı	Reset terminal. (L: reset)
3	ΙE	ı	L: DSP format. H: I°S format.
4	TP1	0	Digital filter test output 1.
5	TP2	0	Digital filter test output 2.
6	TEST1	1	Digital filter test input 1. (Common: low level)
7	TEST2	1	Digital filter test input 2. (Common: low level)
8			NC
9		_	NC
10	AV _{DD} 4	1	Analog power supply 4 (+5V).
11	OUTL(-)	0	Negative L ch PWM output.
12	AVss4	ı	Analog GND terminal 4.
13	AVss3	1	Analog GND terminal 3.
14	OUTL(-)	0	Positive L ch PWM output.
15	AV _{DD} 3	ı	Analog power supply 3 (+5V).
16			NC
17	AV _{DD} 2	١	Analog power supply 2 (+5V).
18	OUTR(+)	0	Positive R ch PWM output.
19	AVss2	1	Analog GND terminal 2.
20	AVss1	1	Analog GND terminal 1.
21	OUTR(-)	0	Positive R ch PWM output.
22	AV _{DD} 1	1	Analog power supply 1 (+5V).
23	DV _{0D} 1	1	Digital power supply 1 (+5V) for OSC.
24	DVss1	1	Digital GND 1 for OSC.
25	X2	0	Crystal oscillator.
26	X1	1	Cryatal oscillator. (Clock input)
27		_	NC
28	DV _{DD} 2	1	Digital power supply 2 (+5V).
29	DVss2	1	Digital GND 2.
30	NSUB	1	Connect to D-V _{DD} .
31	ZFLGB	0	Zero detect output. L: zero
32	192fs	0	192fs output. 8.4672MHz
33	LRPOL		LRCLK polarized select.
34	LRCLK	1	LRCLK input.
			When LR-POL is high level;
		i [H: L ch data input. L: R ch data input.
			When LR-POL is low level;
			H: R ch data input. L: L ch data input.
35	BCLK	1	Serial input bit clock.
36	SRDATA	1	Serial data (digital) input.
37	DVss3	!	Digital GND 3.
38	DVDD	<u> </u>	Digital power supply (+5V).
39	384fs	0	384fs output. 16.9344MHz
40	PD	1	Power down. H: power down mode
41	MDATA	1	μ-com command data input.
42	MCLK		μ-com command clock input.

