



Service Bulletin

No.: MZ08-US05

Date: November 30, 2009

Model: SR4003, SR5003, SR6003, SR5004, SR6004


Subject: Reset Procedure

Symptom: These units have been modified to never be powered ON by any means once they go into standby with the standby led flickering every 125m sec., unless the specialized procedure (*1) described below is performed.

Solution: *1: If the unit cannot be powered on after being plugged in again (with the STANDBY LED flickering every 125m seconds), the power amp has failed. The unit still can be powered on again through the following method, but it can further damage the power amplifier. Never give this information to customers, or allow the end-user to perform this reset procedure.

SR4003, SR5003, SR6003, SR5004, SR6004:

Press and hold the SURROUND + EXIT + CLEAR to reset.

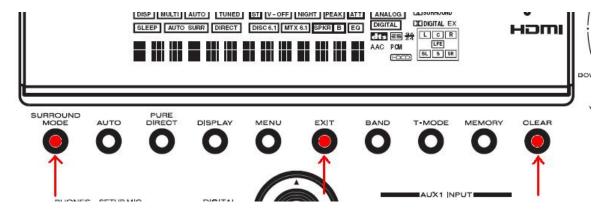

CONFIDENTIALITY NOTICE:

The information contained in this document is intended for the exclusive use by MARANTZ Authorized Service Centers and their employees. This document may contain information that is privileged, confidential and may be protected from disclosure under applicable laws and terms of the MARANTZ Service Agreement. Any distribution, disclosure, dissemination or copying of this document and the information it contains is prohibited. No responsibility will be accepted by MARANTZ for any damage, injury or loss resulting from the misuse of the information contained in this document.

Serial Number Range: ΑII