
SERVICE MANUAL

COMPU-REVERSE CASSETTE DECK

SANSUI D-905R

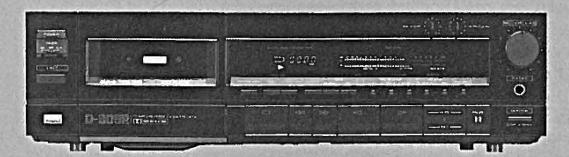

CAUTION

- Parts identified by the Asymbol on the schematic diagram and the parts list are critical for safety. Use only replacement parts that have critical characteristics recommended by the manufacturer.
- Make leakage-current or resistance measurements to determine that exposed parts are acceptably insulated from the supply circuit before returning the appliance to the customer.

SPECIFICATIONS

Track format 4-track/2-channel system Tape speed...... 4.8 cm/sec. Heads (3-head configuration) Rec/pb head Dioxide titanum coating HIGH-Bs ferrite Erase head...... Double-gap HIGH-Bs ferrite Motor Capstan: Electronically Controlled DC Motor Reels: DC Motor Wow/flutter 0.034% max (WRMS) ±0.7%W.Peak Fast forwarding (rewinding) time Approx. 85 sec. (for C-60 tape) Frequency response (-20 VU recording/playback) Normal tape (LH) 20 to 18,000 Hz $(30 \text{ to } 17,000 \text{ Hz } \pm 3 \text{ dB})$ Chrome tape 20 to 20,000 Hz $(30 \text{ to } 18.000 \text{ Hz } \pm 3 \text{ dB})$ Metal tape...... 20 to 21,000 Hz $(30 \text{ to } 19,000 \text{ Hz } \pm 3 \text{ dB})$ Signal to noise ratio (recording/playback with metal tape) (3% T.H.D.) DOLBY NR OFF Better than 60 dB DOLBY-B NR ON Better than 68 dB DOLBY-C NR ON..... Better than 74 dB Erasure factor (Metal Tape) more than 65 dB at (1 kHz) Recording bias frequency 85 kHz Input sensitivity/impedance LINE IN (REC)...... 80 mV/50 kohms Power requirements 110~120V/220~240 V 50/60 Hz For U.S.A. and Canada 120V (60 Hz)

* Design and specifications subject to changes without notice for im-

...... 4.9 kg (10.8 lbs) net

115 mm (4-1/2")H

282 mm (11-1/8*)D

Power consumption 32 watts

For U.S.A. and Canada

Weight 5.4 kg (11.9 lbs) net

- Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation.
- "Dolby" and the double D symbol are trade marks of Dolby Laboratories Licensing Corporation.



SANSUI ELECTRIC CO., LTD.


CAUTION

1. The symbols, UL, CSA, SA, BS, UK, EU, AS and XX on the parts list and the schematic diagram mean followings respectively.

mot and the bollon	natio diagram mount followings respectively.
UL	Manufactured for U.S.A market.
	(Underwriters Laboratories approved model.)
CSA	Manufactured for Canadian market.
	Manufactured for South African market.
	Manufactured for United Kingdom market.
	Manufactured for European market.
	Manufactured for Australian market.
	Standard Version.
NON MARK	


- 2. Some printed circuit boards are not supplied as the assembled. To separate these in this service manual, the stock No's are not indicated at the ends of the board names. However, the individual parts on the circuit boards are provided by orders.
- 3. Since some of capacitors and resistors are omitted from parts lists in this service manual, refer to the Common Parts List for capacitors & resistors, which was issued on February 1983.

1. BLOCK DIAGRAM

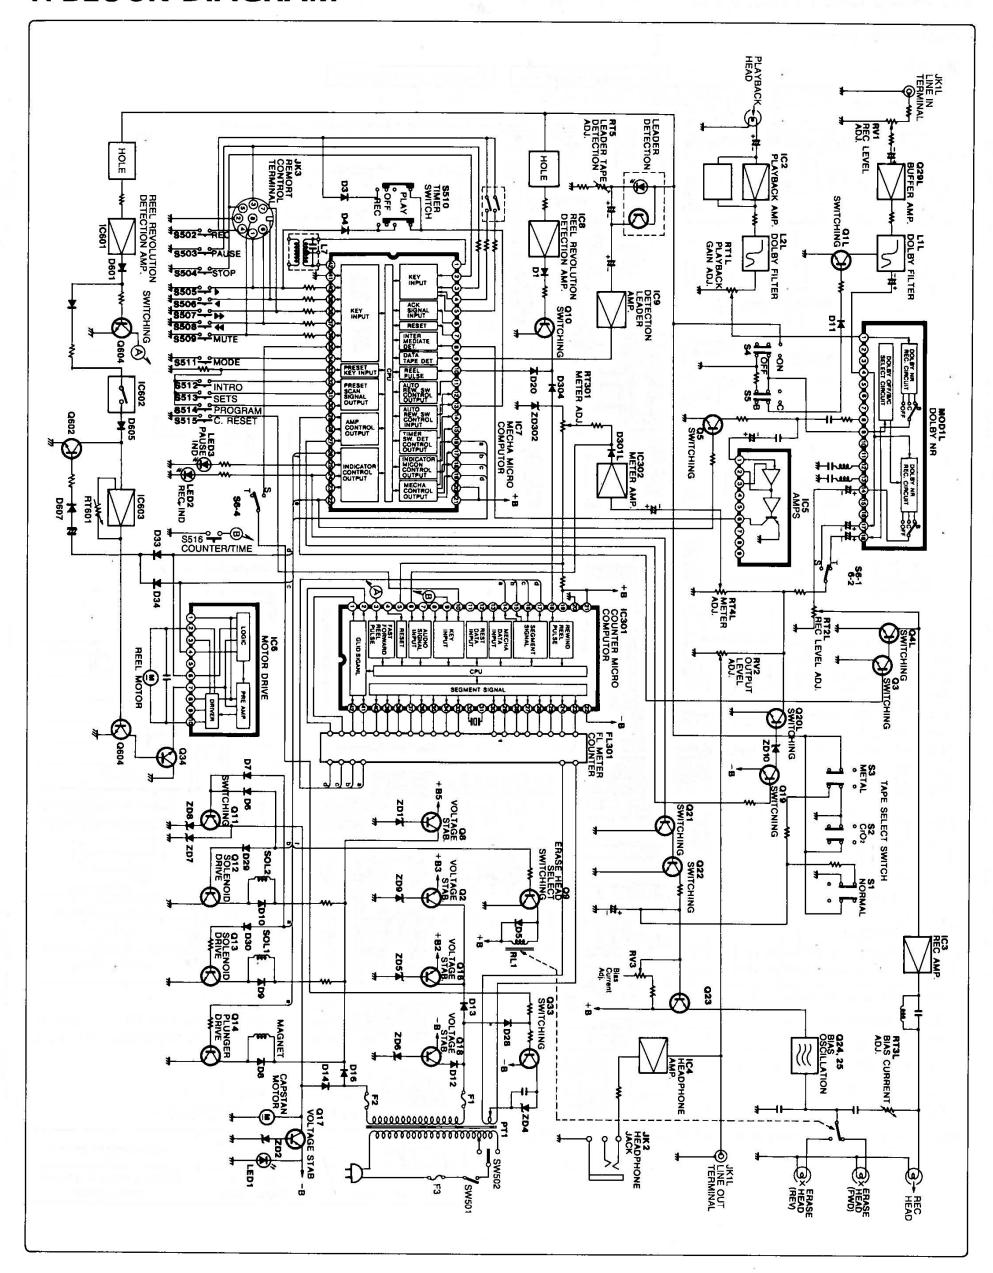

2. ADJUSTMENTS

Adjustment Points

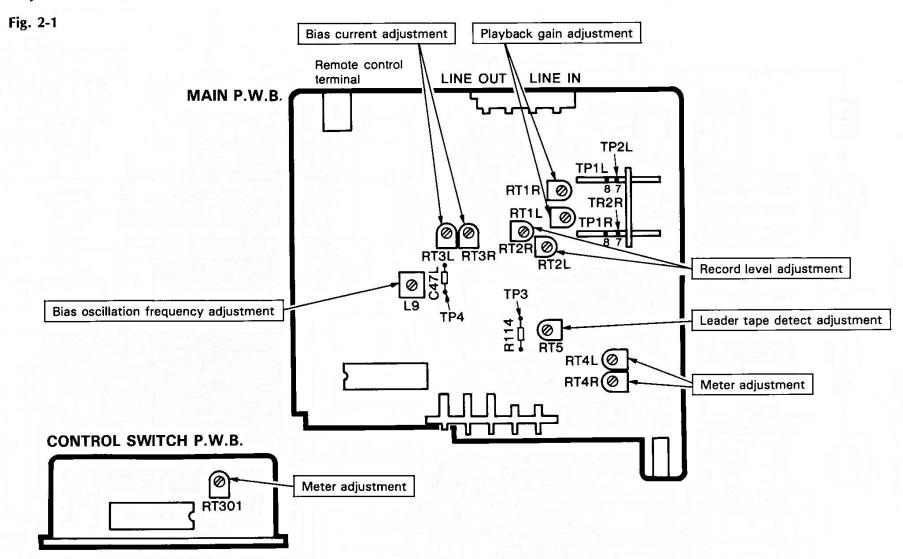

• Tools, Test Tape, Check Tape

- 1. Head Attachment Tools
- 2. 400 Hz, Dolby Standard Tape
- 3. 10 kHz, Azimuth Adjustment Tape
- 4. 3,000 Hz, Tape Speed Adjustment Tape
- 5. Mirror Tape (Tape Run Check)
- 6. Normal "Standard" Tape (TDK AD Tape)
- 7. Chrome "Standard" Tape (TDK SA Tape)
- 8. Metal Tape (TDK MA Tape)

Measuring Instruments

- 1. Standard wave Oscillator
- 2. Electronic Voltmeter
- 3. Attenuator
- 4. Wave Frequency Counter

Knob Position

Adjust the position of the knobs and switches to the positions on the table below if no other indication is given.

Recording level adjustment (RV1)	Maxm.
Output adjustment (RV2)	Maxm.
Dolby NR switch (S4)	OFF
Tape changeover switch (S1~3)	See Note 1.
Monitor switch (S6)	TAPE
Bias fine adjustment (RV3)	CENTER

Note 1: Switch the changeover switch as follows for tape where it is used.

Tape used	Changeover switch (S1 ~ 3)
No tape used	NOR-I
Test tape	NOR-I
Normal "standard" tape	NOR-I
Chrome "standard" tape	CrO ₂ -II
METAL tape	METAL-IV

Remove the cassette lid and then clean the heads, pressure roller and capstan using alcohol; then perform adjustment according to the following procedure.

2-1. Tape Speed Adjustment

Input	Adjustment value	Adjustment point
Tape speed adjustment tape	+30 3,000 Hz -10	Semi-variable volume inside motor

• Adjustment Procedure

Connect the wave frequency counter to the LINE OUT terminal and playback the test tape after heat running for 20 minutes, Set to the intermediate position of the tape.


2-2. Azimuth Adjustment of Recording/Playback Head

Input	Adjustment value	Adjustment point
Azimuth adjust-	Output	Head azimuth adjust-
ment tape	Maximum	ment screw

• Adjustment Procedure

- 1) Connect the electronic voltmeter to the LINE OUT terminal, play-back the test tape and proceed to adjustment.
 - Adjust the section (a) at forward, and the screw at the section (a) at reverse. (See Fig. 2-2)
 - When the maximum value differs between both channels, adjust to the maximum value of L channel. At this time make sure that the difference of the maximum value between both channels is within 2 dB. When the difference is excessive, proceed to readjustment.
- 2) If the azimuth has been off considerably, readjust by means of the head attachment tools.

Fig. 2-2

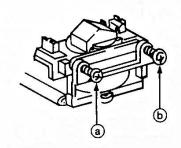

2-3. Adjustment of Playback Gain and Meter 1) Adjustment of Playback Gain

Input	Adjustment value	Adjustment point
400 Hz Dolby standard tape	500 mV±0.2 dB	RT1L, R

Adjustment Procedure

Connect the electronic voltmeter to the LINE OUT terminal, play back the Dolby standard tape, and perform adjustment so that reading on the electronic voltmeter is the adjustment value.

2) Adjustment of Meter

Input	Adjustment value	Adjustment point
400 Hz Dolby	500 mV – 0.5 dB	RT4L, R
standard tape	500 mV – 37 dB	RT301

• Adjustment Procedure


1. Connect the low frequency oscillator to the recording terminal through the attenuator, and set the mode to recording.

- 2. Set the monitor switch to SOURCE, apply a signal of 400 Hz, and adjust the attenuator so that the output voltage of the LINE OUT terminal is 500 mV 0.5 dB.
- 3. Adjust the RT4L, R at this time so the point of 0 dB on the meter changes from OFF to ON. (At this time, adjust RT301 at the center.)
- 4. Then, adjust the attenuator so that the output voltage of the LINE OUT terminal is 500 mV 37 dB for both L, R ch.
- 5. Adjust the RT301 at this time so that the point of 40 dB of the meter changes from ON to OFF for both L, R ch.

2-4. Adjustment of Bias Oscillation Frequency

Set the changeover switch to the metal position. Then, set the forward and reverse sides to a recording status, and adjust L9 so that the lower side of the oscillation frequency of TP4 is 85 kHz ± 0.5 kHz. At this time, confirm one side is 85 kHz ± 5 kHz. If off positioned, drop the lower side so that both are 85 kHz ± 5 kHz by adjusting L9.

Fig. 2-3

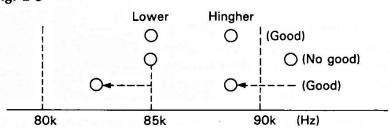

2-5. Coarse Adjustment of Recording level

Input	Adjustment value	Adjustment point	
1.2 kHz	500 mV – 10 dB	RT2L, R	

• Adjustment Procedure

Connect the low frequency oscillator to the LINE IN terminal, apply a signal of 1.2 kHz, and set the mode to recording. Then, set the MONITOR switch to SOURCE, and adjust the output of the low frequency oscillator so that the voltage of the LINE OUT terminal is 500 mV - 10 dB. Further, change the MONITOR switch to TAPE, and adjust RT2L, R so that the voltage at the LINE OUT terminal is 500 mV - 10 dB.

2-6. Adjustment of Bias Current and Recording/Playback Output Level

Set RT3L, R to the middle positions and perform playback checks and adjustments for the tapes and recording levels indicated in the following table.

Proce-	Proce-	_	Tape select		Recording level			ck level	Adjustment
dure	Таре	switch	Frequency (Hz)			Level	Adjustment	procedure (next page)	
1	Normal ''standard'' tape	NOR	1.2k/12k	500 mV – 23 dB	ATT	within +2±0.5 dB	RT3L, R	1)	
2	Normal ''standard'' tape	NOR	1.2k	500 mV – 10 dB	ATT	within +1±0.5 dB	RT2L, R	2)	
3	Normal ''standard'' tape	NOR	1.2k/12k	500 mV – 23 dB	ATT	within +2±0.5 dB	Confirm	1)	
4	Chrome ''standard'' tape	CrO₂	1.2k/12k	500 mV – 23 dB	ATT	within ± 3 dB	Confirm	1)	
5	METAL tape	METAL	1.2k/12k	500 mV – 23 dB	ATT	within±3 dB	Confirm	1)	

• Adjustment Procedure

1) Fine Adjustment of Bias Current

- 1. Connect the low frequency oscillator to the LINE IN terminal through the attenuator. Connect the electronic voltmeter to the LINE OUT terminal. Apply a signal of 1.2 kHz from the LINE IN terminal, and set the mode to recording. Then set the MONITOR switch to SOURCE, adjust the output of the low frequency oscillator so that the voltage at the LINE OUT terminal is 500 mV 10 dB and then, by adjusting the attenuator, adjust it to 500 mV 23 dB.
- 2. Change the MONITOR switch to TAPE. Then change the frequency of the low frequency oscillator to 1.2 kHz and 12 kHz alternately, and adjust RT3L, R so that the difference in output between the two frequencies is within $+2 \pm 0.5$ dB. In this case, make adjustment so that the output at 12 kHz is sure to be greater than that at 1.2 kHz.
- * Just a check is carried out for chrome and metal tapes. If the specification of ± 3 dB is not satisfied, carry out readjustment with a normal tape.

2) Adjustment of Recording Level

- 1. Connect the low frequency oscillator to the LINE IN terminal, apply a signal of 1.2 kHz, and set the mode to recording. Then set the MONITOR switch to SOURCE, and adjust the output of the low frequency oscillator so that the voltage at the LINE OUT terminal is 500 mV 10 dB.
- 2. Change the MONITOR switch to TAPE, and adjust RT2L, R so that the voltage at the LINE OUT terminal is 500 mV 9 dB.

2-7. Dolby NR Operation Check

• Dolby B-Type

- 1) Record on a metal tape at a Dolby level of 5 kHz, -40 dB. Continue recording with "Dolby OFF" and "Dolby B".
- 2) Playback the "Dolby OFF" portion and confirm that the output difference between "Dolby OFF" and "Dolby B" is within 10 dB.

• Dolby C-Type

- 1) Record on a metal tape at a Dolby level of 1 kHz, -40 dB. Continue recording with "Dolby OFF" and "Dolby C".
- 2) Playback the "Dolby OFF" portion and confirm that the output difference between "Dolby OFF" and "Dolby C" is within 16 dB.

2-8. Operation Check of Fine Adjustment of Bias

Connect the low frequency oscillator to the LINE IN terminal, apply a signal of 12 kHz, and adjust the voltage at the LINE OUT terminal to 500 mV - 23 dB. Record a normal tape at that level and then play it back. Suppose the level is 0 dB when the fine adjustment knob for bias current is set at middle. Confirm the level is beyond + 2 dB when the knob is turned counterclockwise all the way, and beyond - 2 dB when clockwise all the way.

2-9. Adjustment of Leader Tape Detector Circuit

Position RT5 at 12 o'clock in terms of the clock pointers. Play back reversely the magnetic portion of Normal "standard" tape, and adjust RT5 so that the DC voltmeter connected between TP3 and chassis ground indicates 1.5 ~ 2.0V. Then confirm with the same tape that the head reverses in the reverse mode.

2-10. Inspection and Adjustment of Cassette Mechanism

NO.	Inspection item		Inspection item Measurement procedure		
-	Pinch roller compression (for L, R)		Measure by tension gauge (Fig. 2-4)	450g min.	
, [Tape drive force	term and the contract of the c	Measure by torque cassette (Fig. 2-4)	90g min.	
2	Reel motor swing torque		Reel motor swing torque Measure by tension gauge (Fig. 2-5)		3.0—8.0 g-cm
3	FF/REW torque		FF/REW torque		
4	Wind torque		Wind torque Measure by torque cassette		
	Rewind torque AT PLAY AT FF/REW		Measure by torque cassette	3.5—7.0 g-cm	
5			Measure by tension gauge	6.0—9.5 g-cm	
6	Erase head lock force allowance (for both L, R)		Measure by tension gauge (Fig. 2-6)	80g min.	

Fig. 2-4

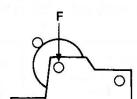


Fig. 2-5




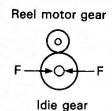



Fig. 2-6

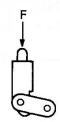



3. DISASSEMBLY

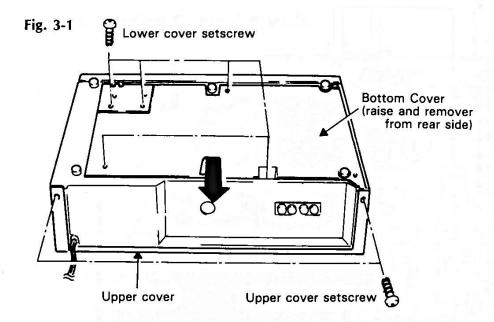


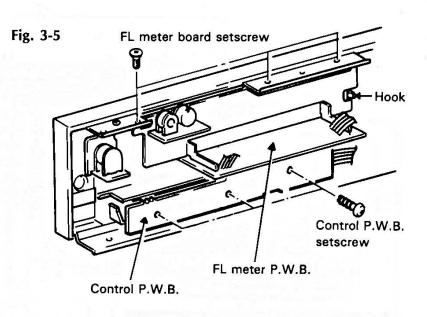

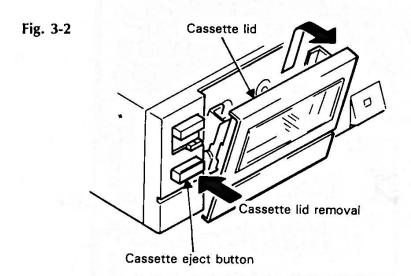

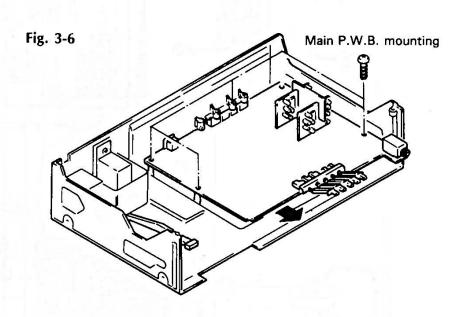


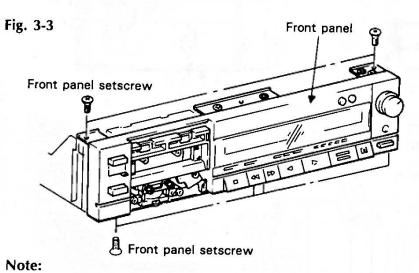

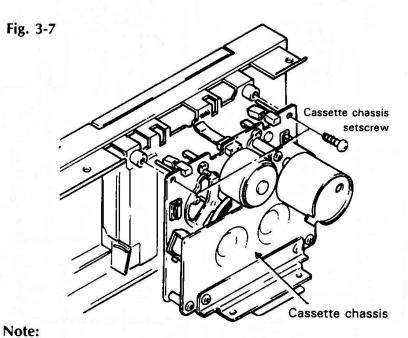


Before extracting the front panel, detach the leads of the cassette chassis from the hooks (4 positions) on the cabinet. (Fig. 3-4)

The leads for the recording/playback head and those for the erasing head are engaged with hooks on the mold chassis under the mechanism and front panel, respectively. Before taking out the cassette chassis from the chassis, detach the leads for the heads.

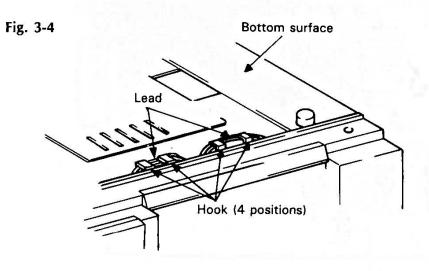

4. WIRING DIAGRAM

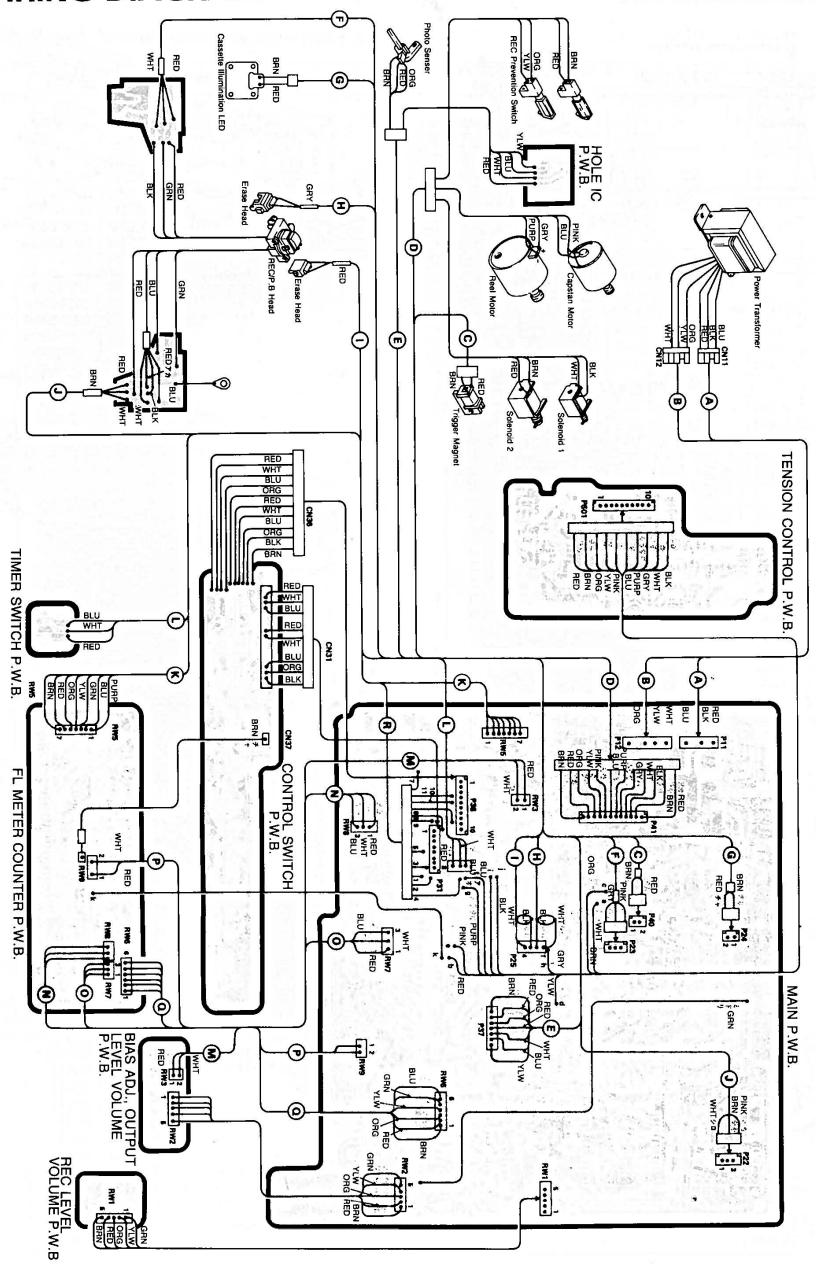

METER LEVEL ADJ.

PLAYBACK GAIN ADJ.

*Axial lead cylindrical ceramic capacitor


REC LEVEL ADJ.

BIAS CURRENT ADJ.


LEADER ADJ.

D


5-4. Tension Control P.W.B.

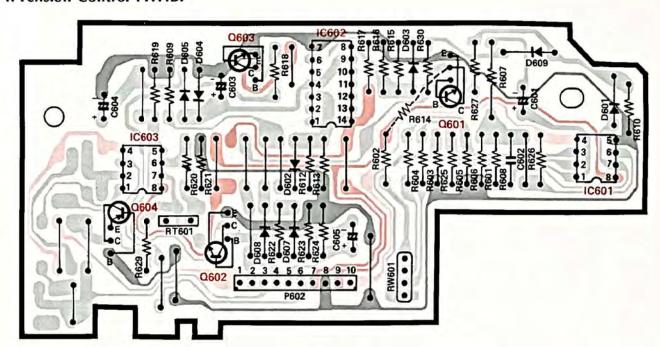


5-5. Hole IC P.W.B.

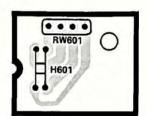


5-6. Timer Switch P.W.B.

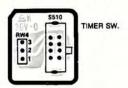


5-7. BIAS ADJUST, **OUTPUT LEVEL Volume P.W.B.**

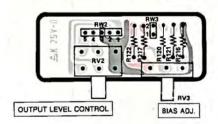


5-8. REC LEVEL Volume P.W.B.

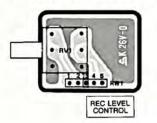

5-9. Power Supply P.W.B. (XX)

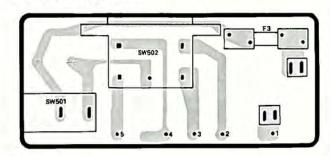

5-10. Power Supply P.W.B. (UL & CSA)

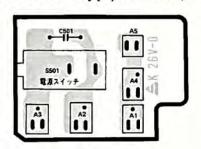

6. ELECTRICAL PARTS LIST

6-1. Main Board Assembly (Stock No. 58190100)

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
		ICs	
IC2	58185500	NJM4562	
IC3	46580100	M5218P	
IC4	46580100	M5218P	
IC5	07252300	BA335	
IC6	58185200	BA6107	
IC7	58185400	μPD553C-342	
IC8	46580100	M5218P	
IC9	46580100	M5218P	
		TRANSISTORS	
Q1L,R	48058701	2SC1740LNS	
Q2	46546701	2SD880	
03	48058701	2SC1740LNS	
Q4L,R	48055901	2SD1468	
Q5	48058701	2SC1740LNS	
Q8	58183500	2SD468	
Q9	48058701	2SC1740LNS	
Q10	48058701	2SC1740LNS	
Q11	48058701	2SC1740LNS	
Q12	46134200	2SD1111	
013	46134200	2SD1111	
Q14	48058701	2SC1740LNS	
Q15	48058701	2SC1704LNS	
Q16	58183400	2SD1266	
Q17	58183600	2SB605LA	
018	58183600	2SB605LA	
Q19	48058701	2SC1740LNS	
Q20L,R	48055901	2SD1468	
Q21	48058701	2SC1740LNS	
Q22	48058701	2SC1740LNS	
Q23	58183500	2SD468	
Q24	48058701	2SC1740LNS	
Q25	48058701	2SC1740LNS	
026	48058701	2SC1740LNS	
Q27	48058701	2SC1740LNS	
Q28	48058701	2SC1740LNS	
Q29L,R	48058701	2SC1740LNS	
Q33	48058701	2SC1740LNS	
Q34	48058701	2SC1740LNS	
	IC STATE OF	DIODES	
D1	03111600	1S2473	
D3		1S2473	
D4	03111600	152473	
D5	03111600	152473	
D6	03111600	152473	
D7	03111600	1S2473	
D8 D9	03111600	1S2473	
		152473	
D10	03111600	1S2473	E
D11	03111600	1S2473	
D12	58184600	ERB12-01R	
D13	58184600	ERB12-01R	
D14	58184600	ERB12-01R	
D15	03111600	152473	
D16	58184600	ERB12-01R	
D17	03111600	1S2473	
D18	03111600	1S2473	
D20	03111600	1S2473	
D21	03111600	1S2473	
D22	03111600	1S2473	
D26	03111600	152473	
D28	03111600	1S2473	
D29	03111600	152473	
D30	03111600	1S2473	
D31	03111600	1S2473	
	00111000	400400	I .
D32	03111600	1S2473	
D32 D33 D34	03111600 03111600 03111600	1S2473 1S2473 1S2473	

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
ZD1	58184300	HZ11(B)-2	Zener
ZD2	58184300	HZ11(B)-2	Zener
ZD3	58183700	HZ7(A)	Zener
ZD4	58183800	HZ6(B)	Zener
ZD5	58184100	HZ15-2	Zener
ZD6	58184100	HZ15-2	Zener
ZD7	58183900	HZ99B-3	Zener
ZD8	58184500	HZ5B-1	Zener
ZD9 ZD10	58184100 58184200	HZ15-2 HZ7C-3	Zener Zener
2010	5574-1544	-VARIABLE RESIST	Les St.
RT1L,R	58181800	10kΩ (B)	Playback Gain Adj.
RT2L,R	58181800	10kΩ (B)	REC Level Adj.
RT3L,R	58182000	50kΩ (B)	BIAS Current Adj.
RT4L,R		20kΩ (B)	Meter Level Adj.
RT5	58181700	5kΩ (B)	Leader Adj.
A 4 7 E 1		RESISTORS	
△ R15	58182200	10Ω 1/4W	Fusing
R97	46903000	56Ω 3W	Non-Inflammable
R98	46903000	56Ω 3W	Non-Inflammable
R156	00146800	220 2W	Non-Inflammable
⚠ R230	58182300	82Ω 1/4W	Fusing
C1L,R	46550800	10µF 16V	Electrolytic
C3L,R	46550800	10µF 16V	Electrolytic
C4L,R	58180600	180pF 50V	Ceramic, cylindrica
C17L,R	46550800	10µF 16V	Electrolytic
C18L,R	48363800	0.1µF 50V	Electrolytic
C19L,R	46550800	10µF 16V	Electrolytic
C27	46550800	10μF 16V	Electrolytic
C30	58181000	0.15µF 50V	Electrolytic
C34	58180900	47µF 10V	Electrolytic
C35L,R	46550800	10μF 16V	Electrolytic
C36	48176100	2200µF 25V	Electrolytic
C39	48176100	2200µF 25V	Electrolytic
C40	48176100	2200µF 25V	Electrolytic
C47L,R	58180500	150pF 50V	Ceramic, cylindrica
C50	58182400	8200pF 100V	Film (Mylar)
C55	58180300	4700pF 50V	Ceramic, cylindrica
C60	58180900	47μF 10V	Electrolytic
C67	48364200	0.47µF 50V	Electrolytic
C71	58180900	47µF 50V	Electrolytic
C72	46550600	33µF 10V	Electrolytic
C101	58180400	0.01µF 50V	Ceramic, discal
C103	46551300	10μF 25V	Electrolytic
C106L,R		4.7μF 25V	Electrolytic
C108L,R		470pF 50V	Ceramic, discal
C109L,R		680pF 50V	Ceramic, discal
C112	48364000	0.22µF 50V	Electrolytic
C113L,R	58180100	470pF 50V	Ceramic, discal
C114	58180400	0.01µF 50V	Ceramic, discal
121 - 1		OTHER PARTS	T
L1L,R	58183100	Dolby Filter	
L2L,R	58183100	Dolby Filter	10 0611-
L3L,R	58182500	Trap Coil Trap Coil	19.8kHz
L4L,R L5L,R	58182500 58182700	Trap Coil	19.8kHz 85kHz
L6L,R	58185100	Choke Coil	3.3mH
L7	58182800	AM IF Trans	3,31111
L9	58182600	Bias OSC Coil	
1600 U	58185300	TM3506 Module Ass'y	
RL1	58186500	Relay	
57 CV	58185900	Push Switch	TAPE SELECTOR,
S1-5			

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
S6	58186200	Push Switch	MONITOR
JK1	58186800	4P Pin Jack	
JK2	58186700	Headphone Jack	
JK3	58186600	8P DIN Jack	
F1	58187100	T1A Fuse	xx
	46201500	1A Fuse	UL & CSA
F2	58187200	T1.25A Fuse	XX
	46201700	1.6A Fuse	UL & CSA

6-2. Control Switch Board Assembly (Stock No. 58190300)

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
		LEDs	
LED2	58184700	GL-3PR2 (Red)	REC
LED3	58184900	SLH54YC(3) (Ylw)	PAUSE
- 24		SWITCHES	
S502	58186300	Tact Switch	REC
S503	58186300	Tact Switch	PAUSE
S504	58186300	Tact Switch	STOP
S505	58186300	Tact Switch	F. PLAY
S506	58186300	Tact Switch	R. PLAY
S507	58186300	Tact Switch	F.F.
S508	58186300	Tact Switch	REW
S509	58186300	Tact Switch	MUTE
S511	58186300	Tact Switch	REVERSE MODE
S512	58186300	Tact Switch	INTROSKIP
S513	58186300	Tact Switch	RMPS SET
S514	58186300	Tact Switch	RMPS PROGRAM
S515	58186300	Tact Switch	RESET
S516	58186300	Tact Switch	COUNTER/TIME

6-3. FL Meter Board Assembly (Stock No. 58190200)

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
		ICs	
IC301	58185400	M8845-400P	
IC302	46580100	M5218P	
		TRANSISTORS	
Q301	48058701	2SC1740LNS	
		DIODES	
D301L,R	03111600	1S2473	
D302	03111600	1S2473	
D303	03111600	1S2473	
ZD301	58184300	HZ11(B)-2	Zener
ZD301	58184000	HZ9C-1	Zener
ZD303L,R		HZ12C-03	Zener
		RESISTORS	
RT301	58181600	200Ω (Β)	Semi-Variable, meter adj.
R318	58182100	68kΩx7	Resistor Array
		CAPACITORS	
C302L,R	46551200	4.7µF 25V	Electrolytic
C304	58180000	68pF 50V	Ceramic, discal
C305L,R	46551200	4.7µF 25V	Electolytic
		OTHER PARTS	
CE301	58182900	Ceramic Osillator	600kHz
FL301	58185700	FL Display Tube	

6-4. Tension Control Board Assembly (Stock No. 58190400)

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
		ICs	
IC601	46580100	M5218P	
IC602	48063800	BU4066B	
IC603	46580100	M5218P	
		TRANSISTORS	
Q601	48058701	2SC1740LNS	
0602	48058701	2SC1740LNS	
Q603	48058701	2SC1740LNS	
Q604	48058501	2SA933	
		DIODES	
D601	03111600	1S2473	
D602	03111600	1S2473	
D603	03111600	1S2473	
D604	03111600	1S2473	
D605	03111600	1S2473	
D606	03111600	1S2473	
D607	03111600	1S2473	
D608	03111600	1S2473	
D609	03111600	152473	
	SEM	-VARIABLE RESIST	OR
RT601	58181500	10kΩ (B)	

6-5. Hole IC Board

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
H601	58185000	VHE-711H	Hole IC

6-6. TIMER Switch Board

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
S510	58186000	Slide Switch	

6-7. BIAS ADJUST, OUTPUT LEVEL Volume Board

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
RV2	58181400		OUTPUT LEVEL
RV3	58181200	2kΩ (B)	BIAS ADJUST

6-8. REC LEVEL Volume Board

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
RV1	58181300	50kΩ (A)	Variable Resistor


6-9. Power Supply Board (XX)

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
∆ SW501 ∆ SW502	58186400 58186100	Power Switch Voltage Selector Switch	
 ∆ F3	58187300	500mA Fuse	

6-10. Power Supply Board (UL & CSA)

SYMBOL No.	STOCK No.	PART NAME	DESCRIPTION
∆ SW501	58186400	Power Switch	
∆ C501	46425800	0.01µF 400V	Ceramic, discal

XX Model

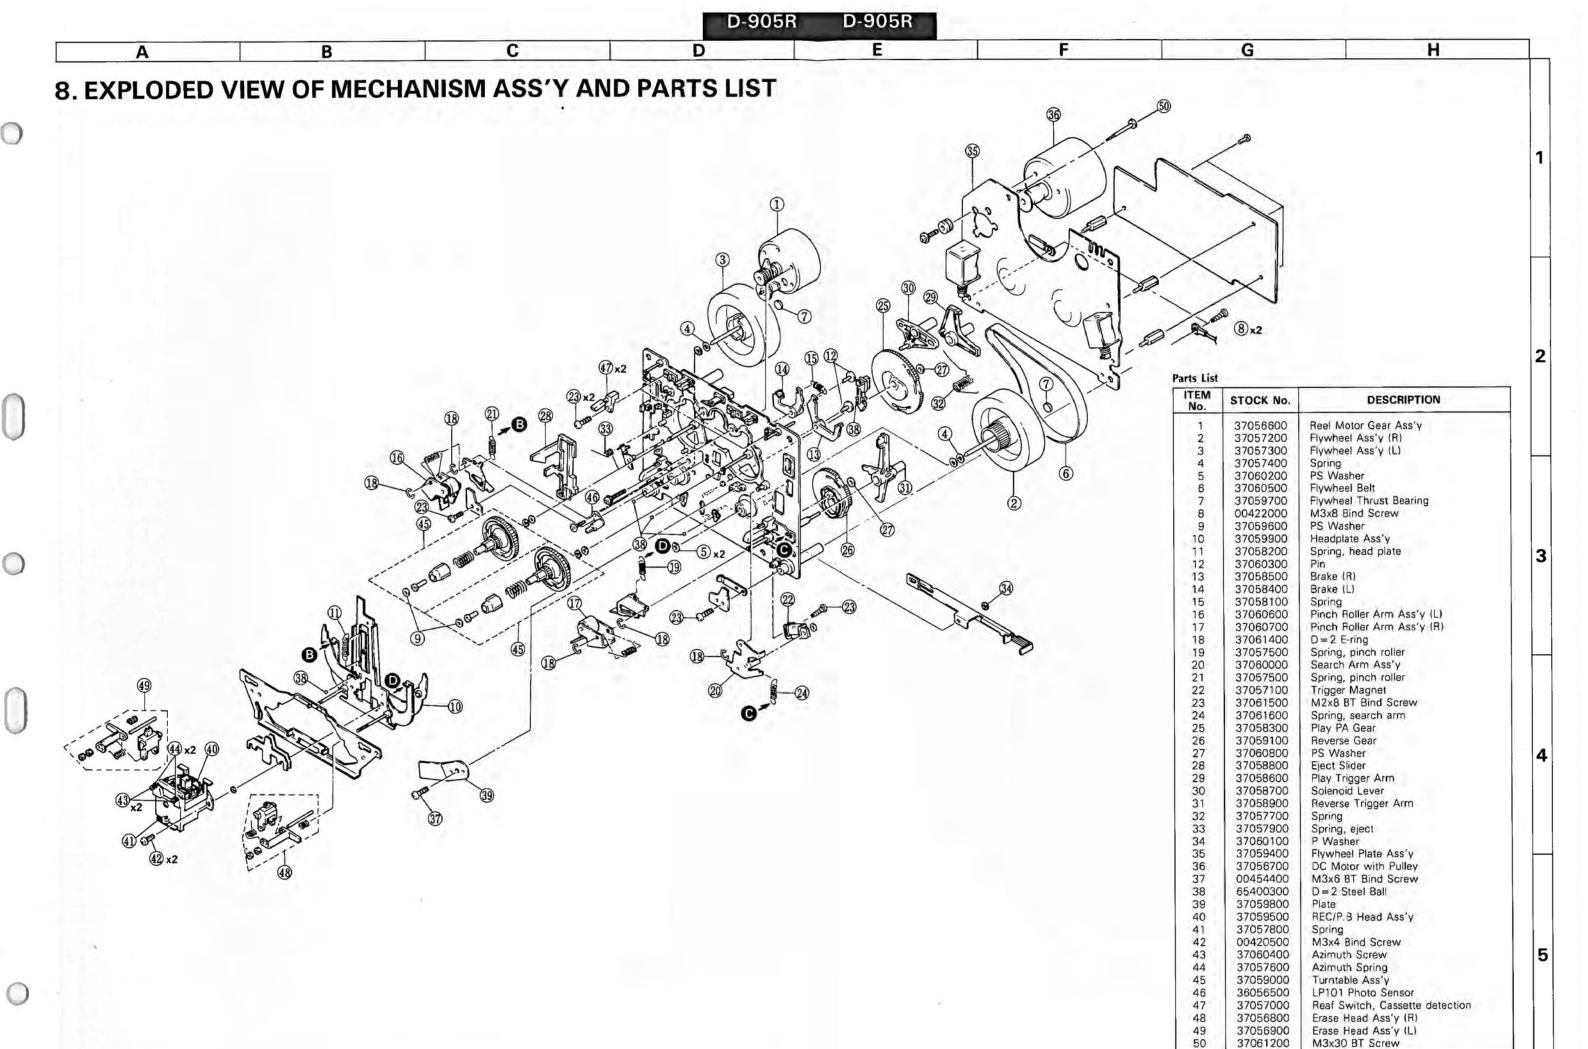


37056800

37056900 37061200

Erase Head Ass'y (R)


Erase Head Ass'y (L) M3x30 BT Screw

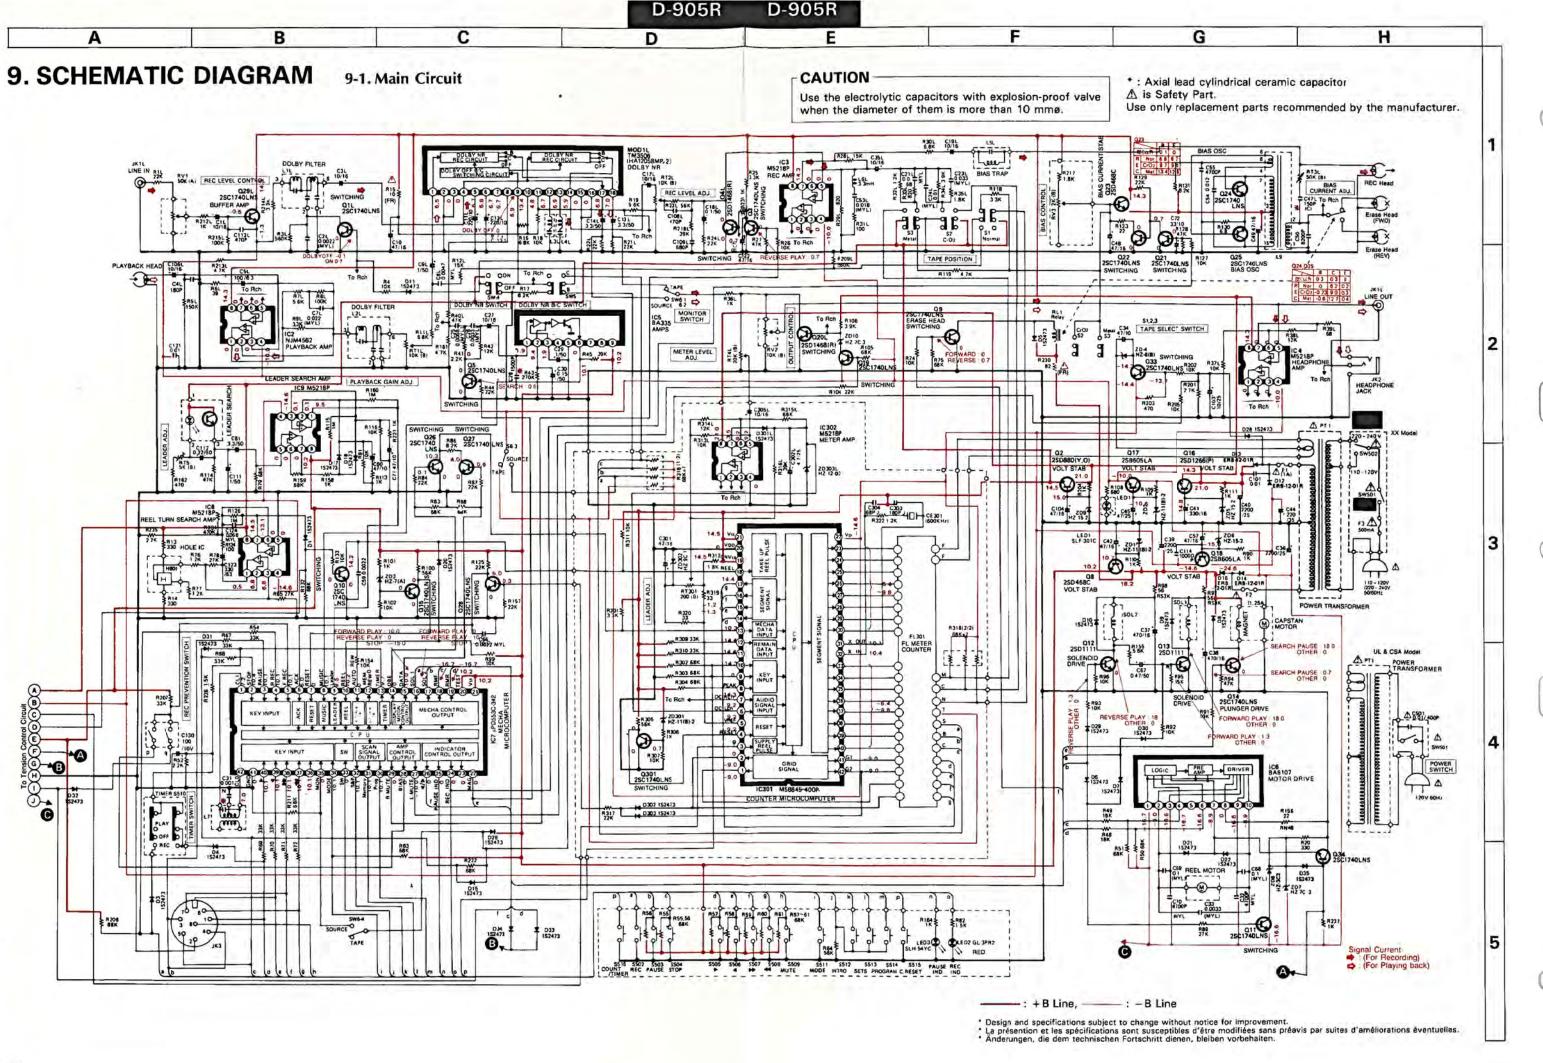

2

A B C D

9-2. Tension Control Circuit

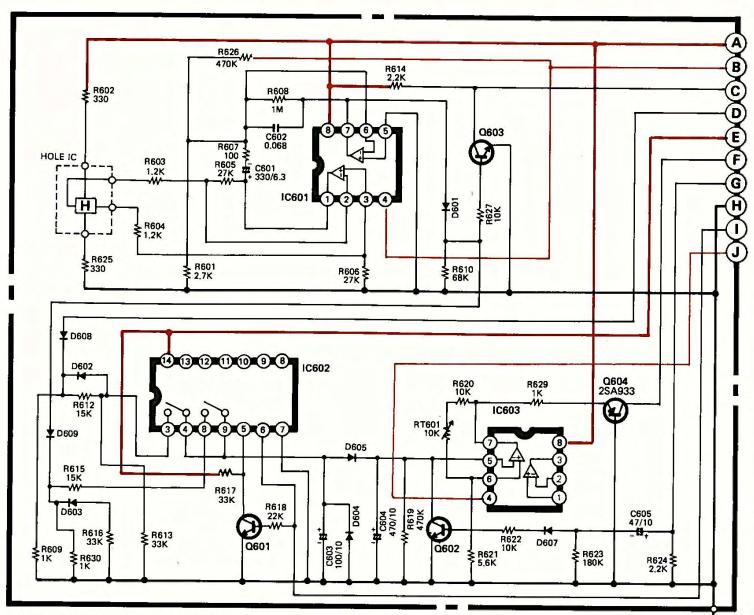

* Design and specifications subject to change without notice for improvement.

* La présention et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles. * Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.

NOTE-

*RESISTORS

All resistors are in ohms, 1/4W, $\pm 5\%$ tolerance unless otherwise noted.

K : Kohm M : Mohm

no mark: Carbon Resistor

RS : Oxied Metal Film Resistor

RN : Metal Film Resistor
FR : Fusing Resistor

*CAPACITORS

All capacitors are in μF , 50WV unless otherwise noted.

: pF

no mark: Ceramic Capacitor or Electro-

lytic Capacitor capacitance

 $(\mu F)/\text{volt}(V)$


MYL : Mylar (Film) Capacitor

5

4

10. PACKING LIST

ITEM No.	STOCK No.	DESCRIPTION
1	58190500	Carton Case
2	58190600	Styrofoam Packing (R)
3	58190700	Styrofoam Packing (L)
4		Cover

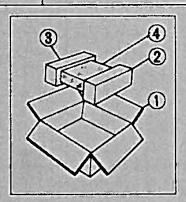

11. ACCESSORY LIST

STOCK No.	DESCRIPTION
46988900 58185800	Operating Instruction Patch Cord Remote Control Unit

