

**Memorex**


CLASS 1  
LASER PRODUCT

**MVD4540B**

# **SERVICE MANUAL**

---

**DVD VIDEO PLAYER & VHS VIDEO CASSETTE RECORDER**

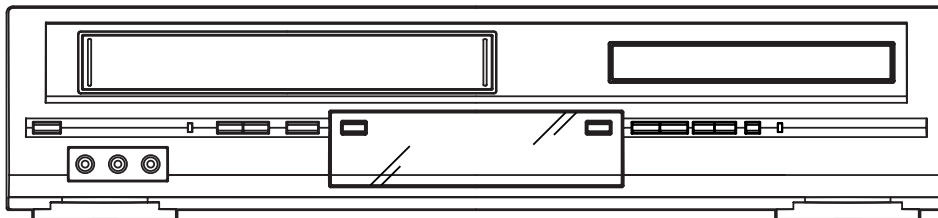


**ORIGINAL  
MFR'S VERSION B**

## IMPORTANT WARNING

### CAUTION:

DVD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THIS PLAYER USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED.

THE FOLLOWING CAUTION LABEL IS LOCATED ON THE REAR PANEL OF THE PLAYER.

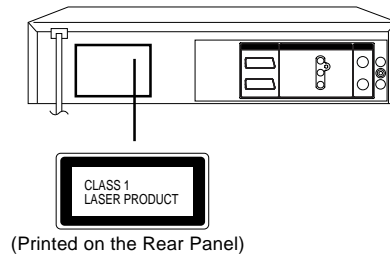

WHEN THIS PLAYER IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENING OF THE DISC TRAY AND OTHER OPENINGS TO LOOK INTO THE INSIDE OF THIS PLAYER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.


## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a  mark, the designated parts must be used.

### 3. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 4. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## TAPE REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Top Cabinet, Front Cabinet and DVD Block. (Refer to item 1 of the **DISASSEMBLY INSTRUCTIONS.**)
2. Remove the screw ① of the Deck Chassis and remove the Loading Motor. (Refer to Fig. 2)
3. Rotate the Pinch Roller Cam in the direction of the arrow by hand to slacken the Video Tape.
4. Rotate the Clutch Ass'y either of the derections to wind the Video Tape in the Cassette Case.
5. Repeat the above step 3~4. Then take out the Video Cassette from the Deck Chassis. Be careful not to scratch on the tape.

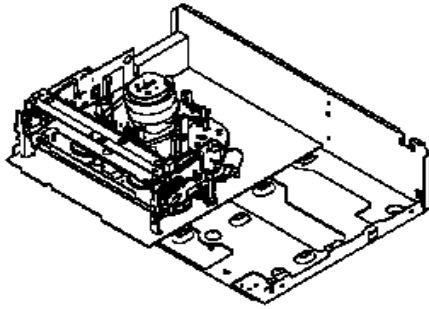


Fig. 1

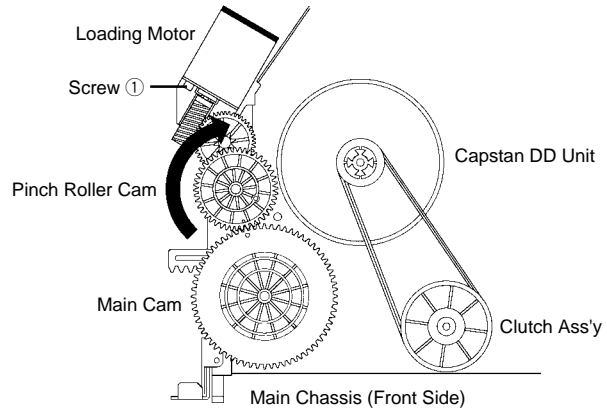


Fig. 2

## DISC REMOVAL METHOD AT NO POWER SUPPLY

1. Remove the Top Cabinet and Front Cabinet. (Refer to item 1 of the **DISASSEMBLY INSTRUCTIONS.**)
2. Slide the Rack Loading (White) toward the arrow direction by using a minus driver to release the lock. (Refer to Fig. 1)
3. Draw the Tray.

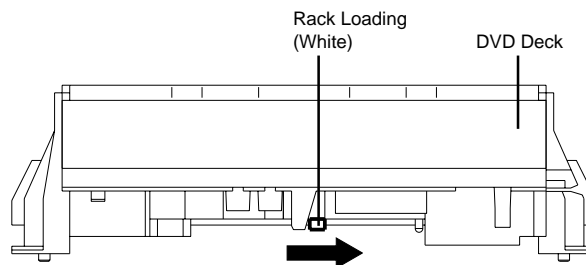


Fig. 1

## PARENTAL CONTROL - RATING LEVEL 4 DIGIT PASSWORD CANCELLATION

If the stored 4 digit password in the Rating Level menu needs to be cancelled, please follow the steps below.

1. Turn Unit ON.
2. Press and hold the '7' key on the remote control unit.
3. Simultaneously press and hold the 'STOP' key on the front panel.
4. Hold both keys for more than 3 seconds.
5. The On Screen Display message 'PASSWORD CLEAR' will appear.
6. The 4 digit password has now been cleared

# TABLE OF CONTENTS

<b>IMPORTANT WARNING</b> .....	A1-1
<b>SETVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>TAPE REMOVAL METHOD AT NO POWER SUPPLY</b> .....	A1-2
<b>DISC REMOVAL METHOD AT NO POWER SUPPLY</b> .....	A1-2
<b>TABLE OF CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-7
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF MECHANICAL PARTS AND P. C. BOARDS .....	B1-1, B1-2
2. REMOVAL OF VCR PARTS .....	B2-1~B2-6
3. REMOVAL OF DVD DECK PARTS .....	B3-1~B3-4
4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B4-1, B4-2
<b>KEY TO ABBREVIATIONS</b> .....	C1-1, C1-2
<b>SERVICE MODE LIST</b> .....	C2-1
<b>PREVENTIVE CHECKS AND SERVICE INTERVALS</b> .....	C3-1, C3-2
<b>WHEN REPLACING EEPROM (MEMORY) IC</b> .....	C4-1
<b>SERVICING FIXTURES AND TOOLS</b> .....	D1-1
<b>PREPARATION FOR SERVICING</b> .....	D1-1
<b>MECHANICAL ADJUSTMENTS</b> .....	D2-1~D2-4
<b>ELECTRICAL ADJUSTMENTS</b> .....	D3-1, D3-2
<b>BLOCK DIAGRAMS</b>	
DVD .....	E-1, E-2
Y/C/AUDIO/CCD/HEAD AMP .....	E-3, E-4
SYSCON .....	E-5, E-6
OPERATION/DISPLAY .....	E-7, E-8
HI-FI/DEMODULATOR .....	E-9, E-10
TUNER/JACK .....	E-11, E-12
POWER .....	E-13, E-14
<b>PRINTED CIRCUIT BOARDS</b>	
DVD .....	F-1, F-2
VCR/OPERATION .....	F-3, F-4
VCR .....	F-5, F-6
<b>SCHEMATIC DIAGRAMS</b>	
MPEG/MICON .....	G-1, G-2
MEMORY .....	G-3, G-4
RF AMP/DSP .....	G-5, G-6
AUDIO/VIDEO .....	G-7, G-8
Y/C/AUDIO/CCD/HEAD AMP .....	G-9, G-10
SYSCON .....	G-11, G-12
TUNER/JACK .....	G-13, G-14
OPERATION/DISPLAY .....	G-15, G-16
HI-FI/DEMODULATOR .....	G-17, G-18
POWER .....	G-19, G-20
OPERATION/LED .....	G-21, G-22
<b>INTERCONNECTION DIAGRAM</b> .....	G-23, G-24
<b>WAVEFORMS</b> .....	H-1, H-2
<b>MECHANICAL EXPLODED VIEW</b> .....	I1-1
<b>CHASSIS EXPLODED VIEWS</b> .....	I2-1, I2-2
<b>DVD DECK EXPLODED VIEW</b> .....	I3-1
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1
<b>CHASSIS REPLACEMENT PARTS LIST</b> .....	J2-1
<b>DVD DECK REPLACEMENT PARTS LIST</b> .....	J3-1
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J4-1, J4-2

# GENERAL SPECIFICATIONS

<b>G-1</b>	<b>Outline of the product</b>		DVD VIDEO PLAYER & VHS Player / Recorder	
<b>G-2</b>	<b>DVD System</b>	Color System	NTSC	
		Disc	DVD, CD-DA, CD-R/RW	
		Disc Diameter	120 mm , 80 mm	
		Deck	Disc Loading System	
			Motor	Front Disc Loading
		Pick up		2 Motors
		Playback time (Max)	DVD 1-Layer	1-Lens 2-Beams System
			DVD 2-Layer	135min (4.7GB)
			CD	245min (8.5GB)
			VIDEO CD	74min
				--min
			Search speed	Fwd 2-20 times / 4 steps
		Actual 2-45 times (DVD)		
		4-40 times (CD)		
		Rev 2-20 times / 4 steps		
		Actual 2-45 times (DVD)		
		4-40 times (CD)		
	Slow speed	Fwd 1/7-1/2 times		
		Actual --		
		Rev --		
		Actual --		
<b>G-3</b>	<b>VCR System</b>	System	VHS Player / Recorder	
		Video System	NTSC	
		Hi-Fi STEREO	Yes	
		NTSC PB(PAL60Hz)	No	
		Deck	DECK	
			Loading System	
			Motor	OVD-7
		Heads	Video Head	Front
				3
			FM Audio Head	4Head
				2Head
			Audio / Control	Mono/Yes
			Erase (Full Track Erase)	Yes
		Tape Speed	Rec PAL	-
			NTSC	SP/SLP
	Play PAL	-		
	NTSC	SP/LP/SLP		
Fast Forward / Rewind Time (Approx.) at 25oC		FF:1'48"/REW:1'48"		
	with Cassette	T-120		
Forward/Reverse	NTSC or PAL-M	SP/LP/SLP = 3x,5x / 7x,9x / 9x,15x		
Picture Search	PAL or SECAM	-		
Frame Advance		Yes		
Slow Speed		1/10		
<b>G-4</b>	<b>Tuning System</b>	Broadcasting System	US System M	
		Tuner and	System	
		Receive CH	Destination	
			Tuning System	
			Input Impedance	
			CH Coverage	
		Intermediate	Picture (FP)	45.75 MHz
		Frequency	Sound (FS)	41.25 MHz
			FP-FS	4.50 MHz
		Preset CH		-
		RF Converter Output		Yes
			Channel	3 or 4 ch
			Level / Impedance	66 dBu / 75 Ohm
			Sound Selector	No
		Stereo / Dual TV Sound		US-ST
Tuner Sound Muting		Yes		
<b>G-5</b>	<b>Power</b>	Power Source	AC	
			DC	
		Power Consumption	Stand by	
			Per Year	
Protector	Power Fuse	Yes		
<b>G-6</b>	<b>Regulation</b>	Safety	UL	
		Radiation	FCC	
		Laser	DHHS	
<b>G-7</b>	<b>Temperature</b>	Operation	5°C - 40°C	
		Storage	-20°C - 60°C	
<b>G-8</b>	<b>Operating Humidity</b>		Less than 80% RH	



## GENERAL SPECIFICATIONS

G-10	On Screen Display (DVD) Menu	Menu Type	Yes	
		Character	Yes	
		Language	Yes	
		Menu	Yes	
		Sub Title	Yes	
		Audio	Yes	
		Picture	Yes	
		TV Screen Size	Yes	
		OSD Display On/Off	Yes	
		JPEG Interval	No	
		Select Files	No	
		Sound	Yes	
		DRC (Dynamic Range Control)	Yes	
		dts Decode	No	
		Output (5.1ch/2ch)	No	
		Surround On/Off	No	
		Center On/Off	No	
		Sub Woofer On/Off	No	
		Parental	Yes	
		Password Lock/Unlock	Yes	
		Rating Level	Yes	
		Other	Yes	
		OSD Language (Set up Language)	Yes	
		Output (RGB / Composite)	No	
		Open	Yes	
		Close	Yes	
		No disc	Yes	
		Reading	Yes	
		Play	Yes	
		Still/Pause	Yes	
		Stop	Yes	
		Prohibit Mark	Yes	
		Step	Yes	
		Skip (>> )	Yes	
		Skip ( <<)	Yes	
		Random	Yes (CD, MP3)	
		Repeat	Yes	
		Slow+ ##	Yes	
		Slow- ##	No	
		Search+ ##	Yes	
		Search- ##	Yes	
		Jump	Yes	
		Resume	Yes	
		Title No.	Yes	
		Chapter No.	Yes	
		Track No.	Yes	
		Time	Yes	
		Sub Title No.	Yes	
		Angle No.	Yes	
		Vocal On/Off	Yes	
		Audio No.	Yes	
		Audio Stereo L/R	No	
		Zoom	Yes	
		Marker No.	Yes	
		Spatializer (N-2-2)	No	
		Program Play Back	Yes (CD, MP3)	
		MP3	Folder Name	Yes
			File Name	Yes
			File No	Yes
			Time	Yes
			Track No	Yes
		Progressive Scan Out ON/OFF	Yes	

## GENERAL SPECIFICATIONS

	<b>On Screen Display(VCR)</b>	Menu	Menu Type	Yes	
		Character			
		Timer Rec Set		Yes	
		Auto Repeat On/Off		Yes	
		SAP On/Off		Yes	
		CH Set-Up		Yes	
		TV/CATV		Yes	
		Auto CH Memory		Yes	
		Add/Delete		Yes	
		System Set Up		Yes	
		Clock Set		Yes (Calendar 12H)	
		Language		Yes	
		No Noise Back Ground		Yes	
		Auto Clock		No	
		Standard Time		No	
		Daylight Saving Time		No	
		G-CODE(or SHOWVIEW or PLUSCODE)No. Entry		No	
		Stereo, Audio Output, SAP		Yes	
		Play/Stop/FF/Rew/Rec/OTR/T-Rec/Pause/Eject/Tape In/Repeat (Symbol Mark)		Yes	
		CH/AV(LINE)		Yes	
		Clock		Yes	
		Repeat		Yes	
		Tape Counter		Yes	
		Index		Yes	
Tape Speed		Yes			
ATR / Manual Tracking		Yes			
ZERO Return		Yes			
Hi-Fi		Yes			
<b>G-11</b>	<b>OSD Language</b>	DVD OSD		English / French / Spanish	
		VCR OSD		English / French / Spanish	
<b>G-12</b>	<b>Clock,Timer and Timer Back-up</b>	Calendar		1990/1/1 ~ 2081/12/31	
		Timer Events		8 Program/ 1 Month	
		One Touch Recording Max Time		6 Hours	
		OTPB Valid Time		No	
		Timer Back-up (at Power Off Mode)		5sec	
<b>G-13</b>	<b>Display</b>	DISPLAY		Yes	
		DISPLAY type		LED Module (Green, "Rec" & Timer symbol = Red)	
		Clock/Counter,CH,Timer Rec,OTR, Play Rec,FF(Cue),Rew(Rev),Stop,ATR,Eject		No	
		VCR		Yes	
		DVD		Yes	
		CD		Yes	
		Clock		Yes (12h)	
			AM		No
			PM	Yes	
		Counter	VCR	Yes (hour:min)	
			DVD	Yes (hour:min)	
			CD	Yes (min:sec)	
		Eject		Yes	
		Counter Remain			No
		Play		Yes	
		Stop			No
		Rec		Yes	
		FF / Cue			No
		REW / Review			No
		Pause / Still		Yes	
		OTR (ITR)			No
		T-Rec		Yes	
		Chapter			No
		TITLE			No
		TRACK		Yes	
		Repeat			No
		Hi-Fi			No
		SP			No
		LP			No
		SLP			No
		CH		Yes	
		RF Output CH		Yes	
Tape In		Yes			
Progressive Scan Out		Yes			



## GENERAL SPECIFICATIONS

G-14	Remote Control	Unit	RC-ET		
		Glow in Dark Remocon		No	
		Power Source	Voltage(D.C) UM size x pcs	3V UM-4 x 2 pcs	
		Total Keys		46 Keys	
		Keys	Power	Yes	
			DISPLAY/CALL	Yes	
			1	Yes	
			2	Yes	
			3	Yes	
			4	Yes	
			5	Yes	
			6	Yes	
			7	Yes	
			8	Yes	
			9	Yes	
			0	Yes	
			Input Select		No
			Input Select / PROGRESSIVE	Yes	
			UP/CH+	Yes	
			DOWN/CH-	Yes	
			LEFT/ SET- / TRACKING-	Yes	
			RIGHT/ SET+ / TRACKING+	Yes	
			VCR/DVD	Yes	
			TV/VCR	Yes	
			DVD MENU	Yes	
			TITLE	Yes	
			SET UP MENU/VCR MENU	Yes	
			SELECT/ENTER	Yes	
			CLEAR/CANCEL	Yes	
			RETURN	Yes	
			PLAY	Yes	
			STOP	Yes	
			PAUSE/STILL/STEP	Yes	
	FF(Cue)/SEARCH+	Yes			
	REW(Review)/SEARCH-	Yes			
	REC/OTR	Yes			
	SKIP+ / INDEX+	Yes			
	SKIP- / INDEX-	Yes			
	AUDIO / AUDIO SELECT	Yes			
	ANGLE/COUNTER RESET	Yes			
	SUB TITLE/ATR	Yes			
	PLAY MODE/SPEED	Yes			
	T-REC	Yes			
	CLOCK / COUNTER	Yes			
	JUMP/ZERO RETURN	Yes			
	ZOOM	Yes			
	REPEAT A-B	Yes			
	SLOW (Forward)	Yes			
	MARKER	Yes			
	OPEN/CLOSE	Yes			
	EJECT	Yes			
G-15	Features (DVD)	Auto Power Off		No	
		Parental Lock	Yes		
		Video CD Playback		No	
		MP3 Playback	Yes		
		WMA Playback		No	
		JPEG Playback		No	
		Progressive Scan Out	Yes		
		Digital Out	Dolby Digital	Yes	
			MPEG	Yes	
			PCM	Yes	
			DTS	Yes	
		Down Mix Out	(Dolby Digital)	Yes	
			(DTS)		No
		Spatializer (N-2-2)			No
		Screen Saver			No
Auto Stop		Yes (5min.)			
Audio DAC		192kHz / 24bit			

## GENERAL SPECIFICATIONS

	<b>Features (VCR)</b>	Auto Head Cleaning	Yes	
		Auto Tracking	Yes	
		HQ (VHS Standard High Quality)	Yes	
		Auto Power On, Auto Play, Auto Rewind, Auto Eject	Yes	
		Auto Power Off	No	
		Forward/Reverse Picture Search	Yes	
		VIDEO PLUS+ (SHOWVIEW, G-CODE)	No	
		One Touch Playback	No	
		Auto CH Memory	Yes	
		AREA CODE	No	
		Auto Clock Set	No	
		Index Search	Yes	
		SQPB	No	
		CATV	Yes	
		Energy Star	No	
		MTS (SAP)	Yes	
		CM Skip (30sec x 6 Times)	No	
Copy (Disc to Tape)	No			
<b>G-16</b>	<b>Accessories</b>	Owner's Manual	Language	English / Spanish
			w/Guarantee Card	No
			Buyer Model No.	MVD4540B
		Remote Control Unit		Yes
		Guarantee Card		Yes
		Registration Card		No
		Warning Sheet		No
		Service Station List		No
		Important Tag		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		No
			UM size x pcs	--
		AC Cord		No
		AV Cord		Yes (1.2m)
		75 Ohm Coaxial Cable		Yes (0.9m)
		S-Video Cable		No
		21pin cable		No
		800 No Sticker		No
		Toll Free Insert Sheet		No
Safety Tip		No		

## GENERAL SPECIFICATIONS

<b>G-17</b>	<b>Interface</b>	Switch	Front	Power	Yes	
				Play	Yes	
				Eject (VCR)	Yes	
				Stop	Yes	
				Rec/OTR	Yes	
				Open/Close (DVD)	Yes	
				CH +	Yes	
				CH -	Yes	
				FF/ Search(>>)	Yes	
				Rew/Search(<<)	Yes	
				Still/Pause	No	
				Shuttle (Search/REV/FWD)	No	
				DVD/VCR	Yes	
				Main Power SW	No	
				Rear	Attenuator	No
		S-Video/Component Video Selector	Yes			
		RF Out (Slide SW)	No			
		Volume	Main Power SW	No		
			Phones Volume	No		
			Mic Volume	No		
			Echo Volume	No		
			Rec/OTR	No		
		Terminals	Front	Video In	RCA x1 (Yellow)	
				Audio In	RCA x 2 (Stereo, White/Red)	
			Rear	Video Output	RCA x1 (Yellow) S-Video x 1 (DVD Signal Only) Component x1 (RCA 3pin,DVD Signal Only)	
				Audio Output	RCA x 4 (Stereo, White/Red) Coaxial x 1 (Digital Audio,DVD Signal Only)	
				Optical Out (Option)	Yes (Digital Audio,DVD Signal Only)	
				Video Input (Option)	No	
				Audio Input (Option)	No	
				RF Input / Output	Yes	
				Euro Scart	No	
			Indicator	LED	AC Inlet	No
					Power	No
Rec	No					
T-Rec	No					
TV/VCR	No					
DVD	Yes (RED)					
VCR	Yes (RED)					
Surround	No					
Level Meter	No					
<b>G-18</b>	<b>Set Size</b>	Approx.	W x D x H (mm)	430 x 253 x 99		
<b>G-19</b>	<b>Weight</b>	Net (Approx.)		3.6 kg( 7.9lbs)		
		Gross (Approx.)		4.7 kg( 10.4lbs)		
<b>G-20</b>	<b>Carton</b>	Master Carton		No		
			Content	--- Sets		
			Material	--- / ---		
			Dimensions W x D x H(mm)	---		
			Description of Origin	---		
		Gift Box		Yes		
			Material	Double/White		
			W/Color Photo Label	No		
			Dimensions W x D x H(mm)	497 x 360 x 180		
			Design	As Per BUYER 's		
		Drop Test		Yes		
Height (cm)	Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces 80 cm					
	Container Stuffing	1,985 Sets/40' container				
<b>G-21</b>	<b>Material</b>	Cabinet	Front	PS 94V2 or More / DECABROM		
		PCB	Non-Halogen Demand	No		
			Eyelet Demand	No		
<b>G-22</b>	<b>Environment</b>	Pb Free	Lead-free Solder	No		
			Other	No		
		Cd Free		No		

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF MECHANICAL PARTS AND P.C. BOARDS

### 1-1: TOP CABINET, OPERATION PCB AND FRONT CABINET (Refer to Fig. 1-1)

1. Remove the 5 screws (1).
2. Remove the Top Cabinet in the direction of arrow (A).
3. Disconnect the following connector: (CP651).
4. Unlock the 8 supports (2).
5. Remove the Front Cabinet in the direction of arrow (B).
6. Remove the 2 screws (3).
7. Remove the Operation PCB in the direction of arrow (C).

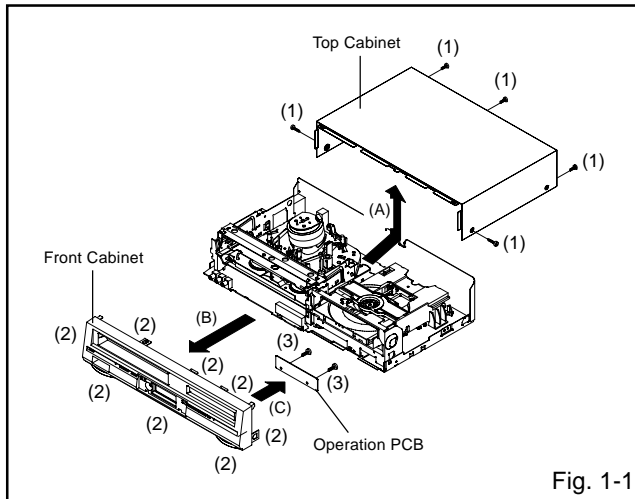


Fig. 1-1

### 1-2: FLAP (Refer to Fig. 1-2)

1. Open Flap to 90° and flex in direction of arrow (A), at the same time slide in direction of arrow (B).
2. Then lift in direction of arrow (C).

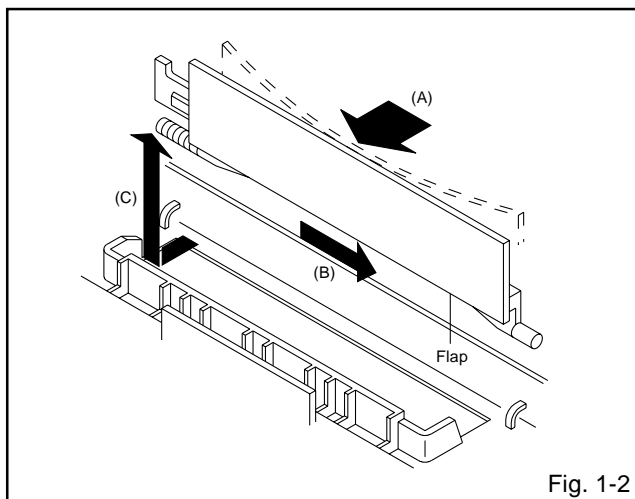


Fig. 1-2

### 1-3: DVD DECK (Refer to Fig. 1-3)

1. Make the short circuit on the position as shown Fig. 1-3 using a soldering. If you remove the DVD Deck with no soldering, the Laser may be damaged.
2. Unlock the support (1) and remove the Deck Top Holder in the direction of arrow (A).
3. Remove the 3 screws (2).
4. Remove the screw (3).
5. Disconnect the following connectors: (CP2601, CP2602 and CP2603).
6. Remove the DVD Deck in the direction of arrow (B).
7. Remove the 3 screws (4).
8. Remove the Front Angle in the direction of arrow (C).
9. Remove the screw (5).
10. Remove the DVD Angle.

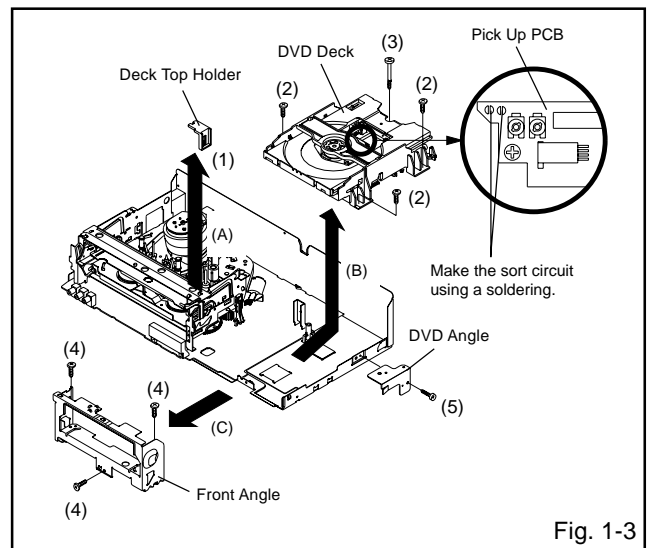


Fig. 1-3


### NOTE

When the installation of the DVD Deck, remove all the soldering on the short circuit position after the connection of Pick Up PCB and DVD PCB connector.

# DISASSEMBLY INSTRUCTIONS


## 1-4: DVD PCB (Refer to Fig. 1-4)

1. Remove the 3 screws (1).
2. Remove the 4 screws (2).
3. Disconnect the following connectors: (CP4002 and CP8102).
4. Remove the DVD PCB in the direction of arrow.

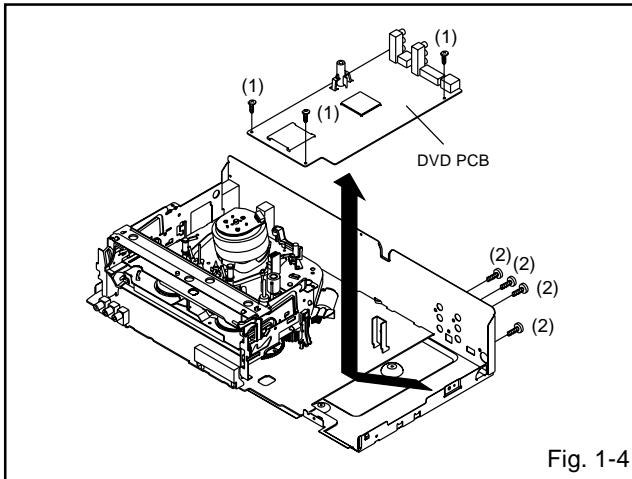

## 1-6: VCR PCB (Refer to Fig. 1-6)

1. Remove the screw (1).
2. Remove the screw (2).
3. Remove the screw (3).
4. Remove the 3 Pin Shield.
5. Remove the VCR PCB in the direction of arrow.

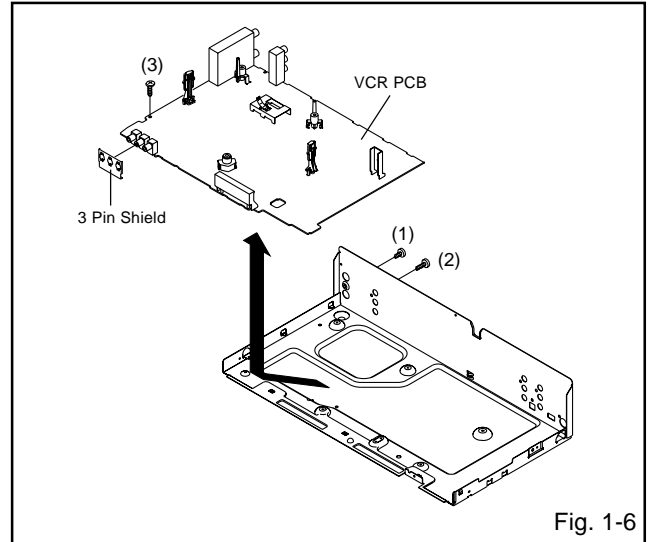


## 1-5: VCR DECK (Refer to Fig. 1-5)

### NOTE

Do not remove the cable at the FE Head section. The FE Head may be damaged if you remove the cable by force.

1. Move the Cassette Holder Ass'y to the back side.
2. Remove the screw (1).
3. Remove the FE Head.
4. Remove the 3 screws (2).
5. Disconnect the following connectors: (CP101, CP102, and CP3001).
6. Remove the AC Head Cover and VCR Deck in the direction of arrow.

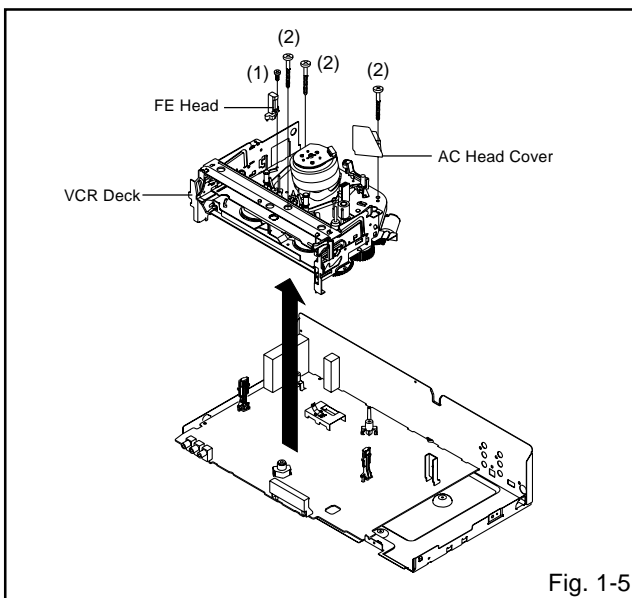

# DISASSEMBLY INSTRUCTIONS

## 2. REMOVAL OF VCR DECK PARTS

### 2-1: TOP BRACKET (Refer to Fig. 2-1)

1. Extend the 2 supports (1).
2. Slide the 2 supports (2) and remove the Top Bracket.

#### NOTE

1. After the installation of the Top Bracket, bend the support (1) so that the Top Bracket is fixed.

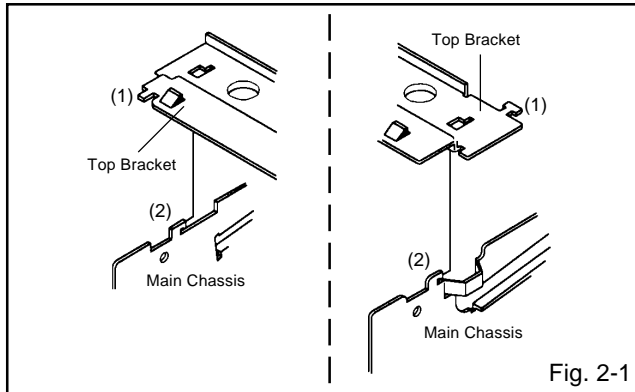


Fig. 2-1

### 2-2: CASSETTE HOLDER ASS'Y (Refer to Fig. 2-2)

1. Move the Cassette Holder Ass'y to the front side.
2. Push the Locker R to remove the Cassette Side R.
3. Remove the Cassette Side L.

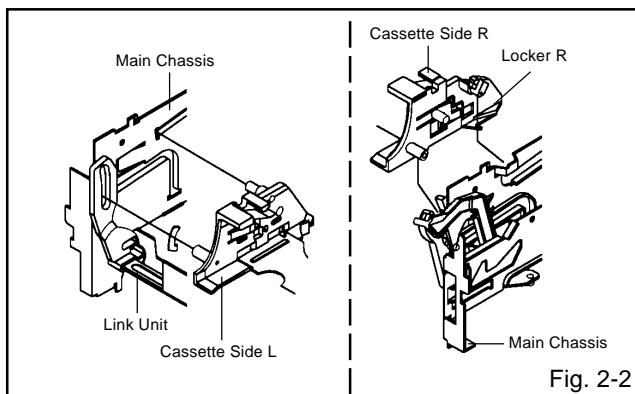


Fig. 2-2

### 2-3: CASSETTE SIDE L/R (Refer to Fig. 2-3-A)

1. Remove the Locker Spring.
2. Unlock the 4 supports (1) and then remove the Cassette Side L/R.
3. Unlock the support (2) and then remove the Locker R.

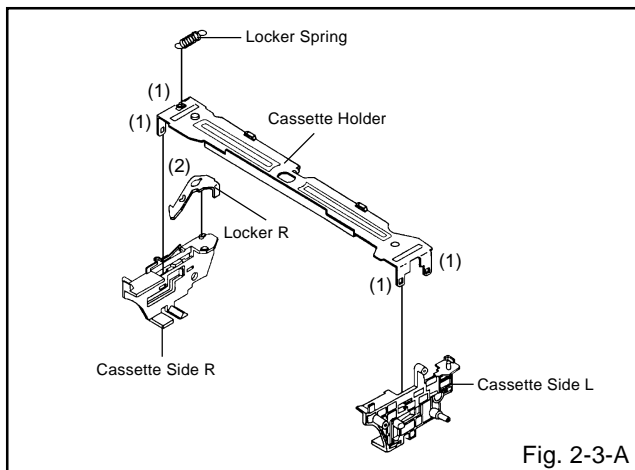


Fig. 2-3-A

#### NOTE

1. In case of the Locker R installation, check if the one position of Fig.2-3-B are correctly locked.
2. When you install the Cassette Side R, be sure to move the Locker R after installing.

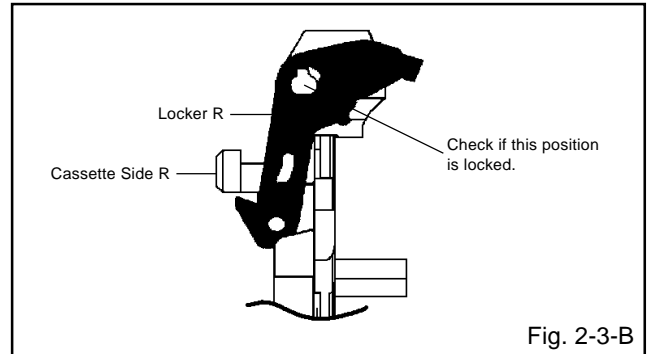


Fig. 2-3-B

### 2-4: LINK UNIT (Refer to Fig. 2-4)

1. Set the Link Unit to the Eject position.
2. Unlock the support (1).
3. Remove the (A) side of the Link Unit first, then remove the (B) side.

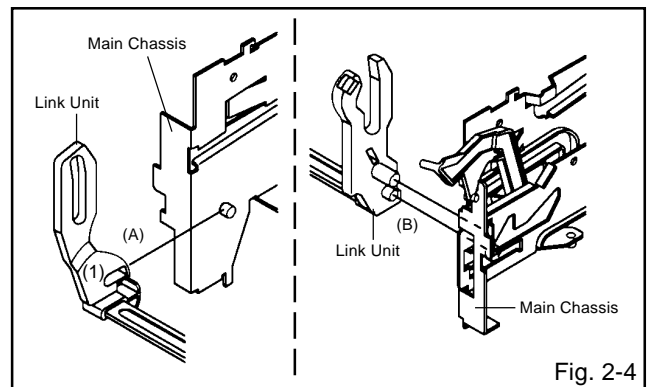


Fig. 2-4

### 2-5: LINK LEVER/FLAP LEVER (Refer to Fig. 2-5)

1. Extend the support (1).
2. Remove the Link Lever.
3. Remove the Flap Lever.

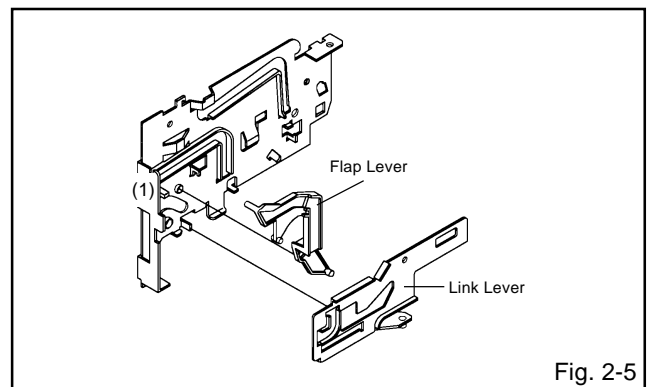


Fig. 2-5

# DISASSEMBLY INSTRUCTIONS

## 2-6: LOADING MOTOR/WORM (Refer to Fig. 2-6-A)

1. Remove the screw (1).
2. Remove the Loading Motor.
3. Remove the Worm.

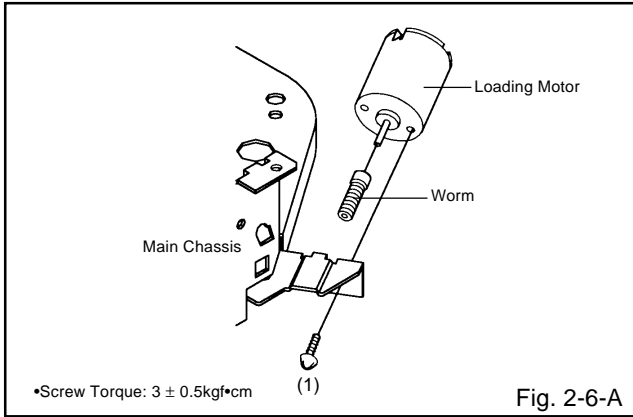


Fig. 2-6-A

### NOTE

1. In case of the Worm installation, check if the value of the Fig. 2-6-B is correct.
2. In case of the Loading Motor installation, hook the wire on the Cassette Opener as shown Fig. 2-6-C.
3. When installing the wires between Capstan DD Unit and Loading Motor, connect them correctly as shown Fig. 2-6-D.

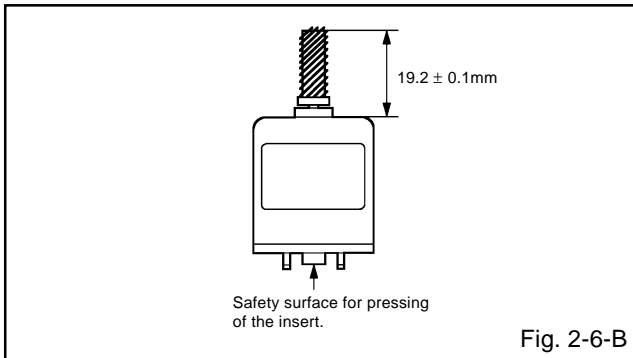


Fig. 2-6-B

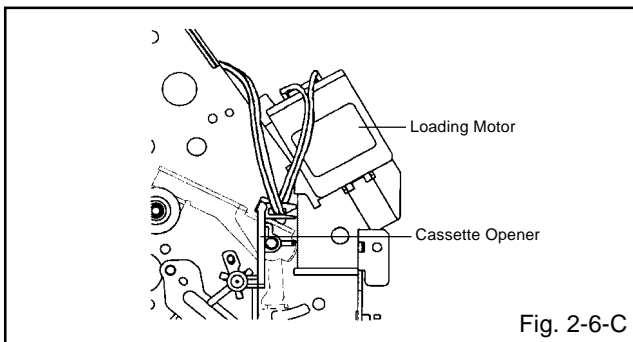


Fig. 2-6-C

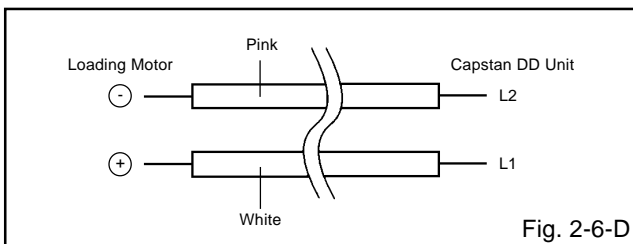


Fig. 2-6-D

## 2-7: TENSION ASS'Y (Refer to Fig. 2-7-B)

1. Turn the Pinch Roller Cam clockwise so that the Tension Holder hook is set to the position of Fig. 2-7-A to move the Tension Arm Ass'y.
2. Remove the Tension Spring.
3. Unlock the 2 supports (1) and remove the Tension Band.
4. Unlock the support (2) and remove the Tension Arm Ass'y.
5. Unlock the support (3) and remove the Tension Connect.
6. Float the hook (4) and turn it clockwise then remove the Tension Holder.

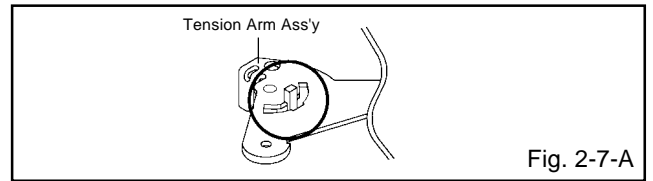


Fig. 2-7-A

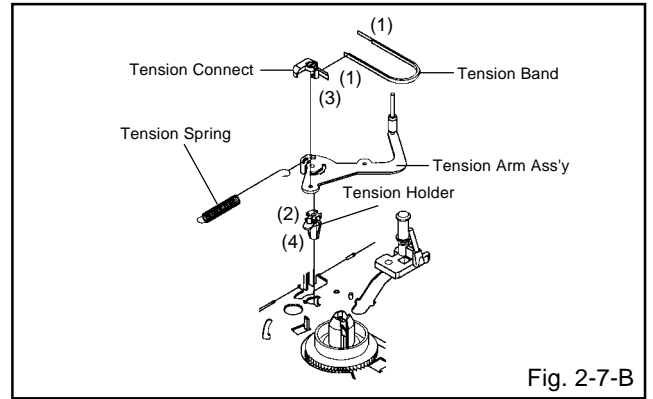


Fig. 2-7-B

### NOTE

1. In case of the Tension Band installation, note the direction of the installation. (Refer to Fig. 2-7-C)
2. In case of the Tension Band installation, install correctly as Fig. 2-7-D.
3. In case of the Tension Connect installation, install as the circled section of Fig. 2-7-E.

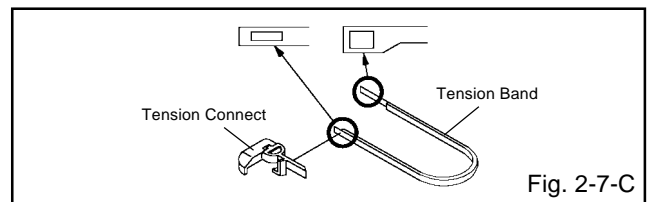


Fig. 2-7-C

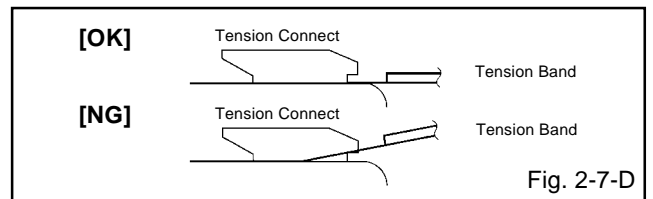


Fig. 2-7-D

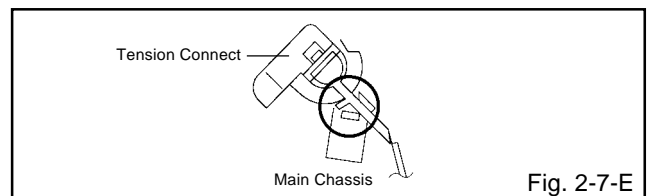


Fig. 2-7-E

# DISASSEMBLY INSTRUCTIONS

## 2-8: T BRAKE ARM/T BRAKE BAND (Refer to Fig. 2-8-A)

1. Remove the T Brake Spring.
2. Turn the T Brake Arm clockwise and bend the hook section to remove it.
3. Unlock the 2 supports (1) and remove the T Brake Band.

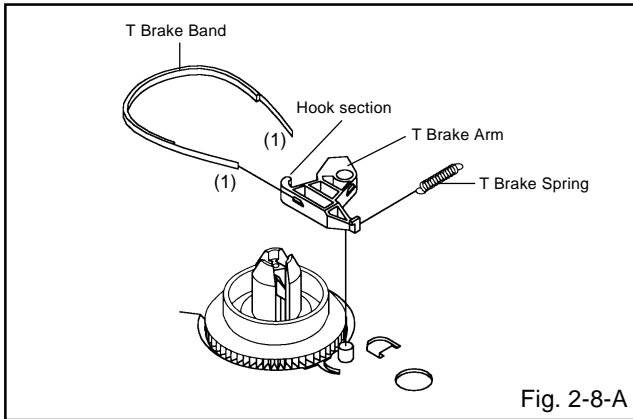


Fig. 2-8-A

### NOTE

1. In case of the T Brake Band installation, install correctly as Fig. 2-8-B.

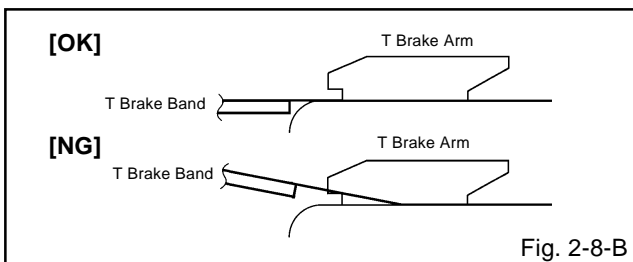


Fig. 2-8-B

## 2-9: S REEL/T REEL/IDLER ARM ASS'Y/IDLER GEAR (Refer to Fig. 2-9-A)

1. Remove the S Reel and T Reel.
2. Remove the 2 Polyslider Washers (1).
3. Remove the Idler Arm Ass'y and Idler Gear.

### NOTE

1. Take care not to damage the gears of the S Reel and T Reel.
2. The Polyslider Washer may be remained on the back of the reel.
3. Take care not to damage the shaft.
4. Do not touch the section "A" of S Reel and T Reel. (Use gloves.) (Refer to Fig. 2-9-A) Do not adhere the stains on it.
5. When you install the reel, clean the shaft and grease it (FG-84M). (If you do not grease, noise may be heard in FF/REW mode.)
6. After installing the reel, adjust the height of the reel. (Refer to MECHANICAL ADJUSTMENT)

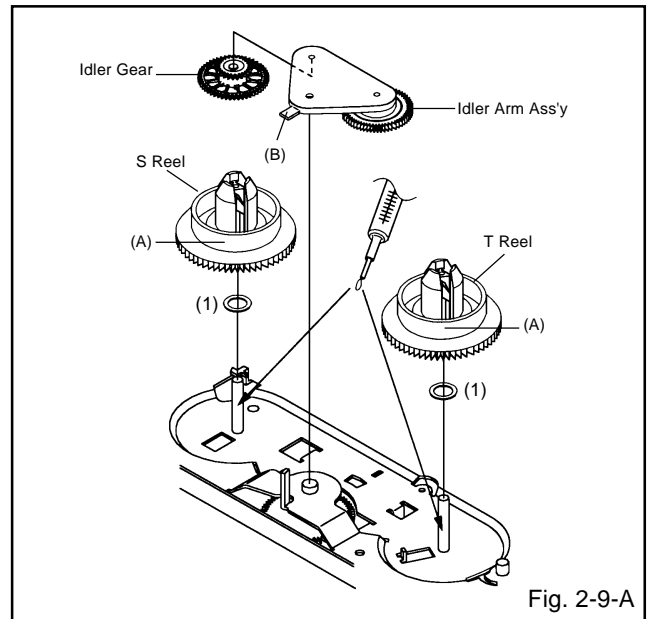


Fig. 2-9-A

### NOTE

1. In case of the S Reel and T Reel installation, check if the correct parts are installed. (Refer to Fig. 2-9-B)
2. In case of the Idler Arm Ass'y installation, install correctly as Fig. 2-9-C. And also set it so that the section "B" of Fig. 2-9-A is placed under the Main Chassis tab.

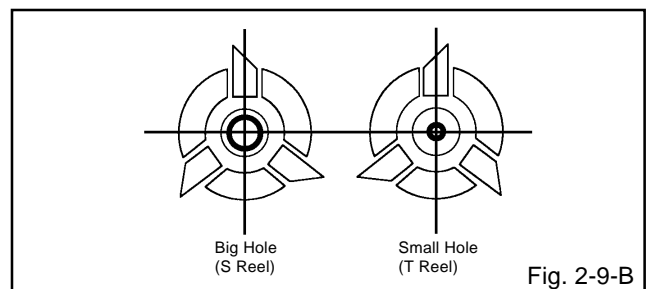


Fig. 2-9-B

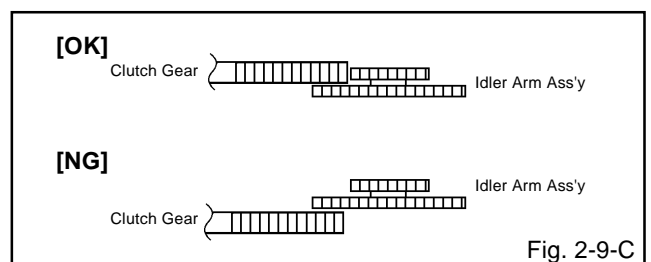



Fig. 2-9-C



# DISASSEMBLY INSTRUCTIONS


## 2-10: CASSETTE OPENER/PINCH ROLLER BLOCK/ P5 ARM ASS'Y (Refer to Fig. 2-10-A)

1. Unlock the support (1) and remove the Cassette Opener.
2. Remove the Pinch Roller Block and P5 Arm Ass'y.

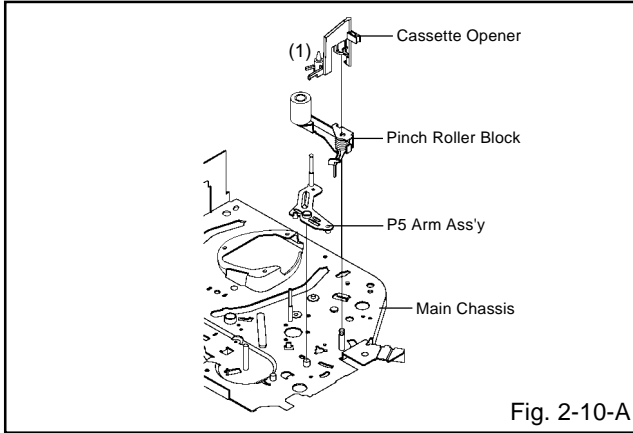

### NOTE

1. Do not touch the Pinch Roller. (Use gloves.)
2. In case of the Pinch Roller Block and the Pinch Roller Cam installation, install correctly as Fig. 2-10-B.


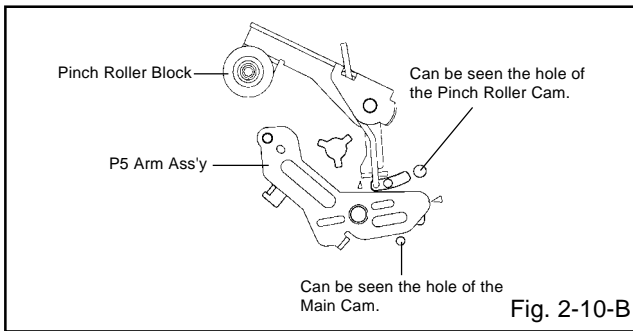


## 2-11: A/C HEAD (Refer to Fig. 2-11-A)

1. Remove the screw (1).
2. Remove the A/C Head Base.
3. Remove the 3 screws (2).
4. Remove the A/C Head and A/C Head Spring.


### NOTE

1. Do not touch the A/C Head. (Use gloves.)
2. When you install the A/C Head Spring, install as shown in Fig. 2-11-B.
3. When you install the A/C Head, tighten the screw (1) first, then tighten the screw (2), finally tighten the screw (3).

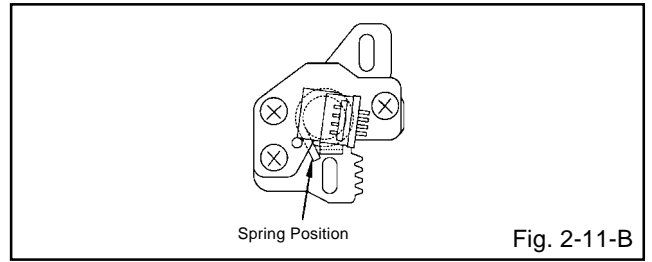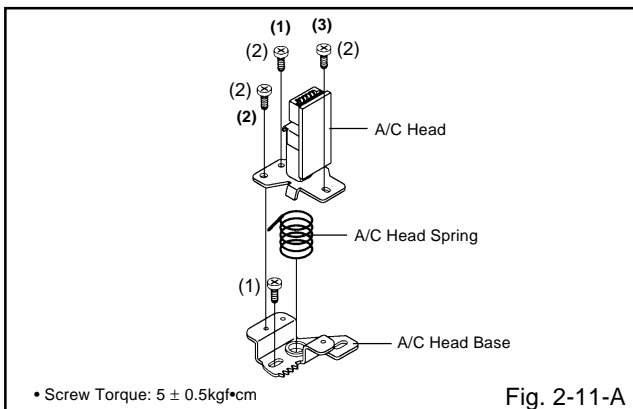

## 2-12: FE HEAD (RECORDER ONLY) (Refer to Fig. 2-12)

1. Remove the screw (1).
2. Remove the FE Head.

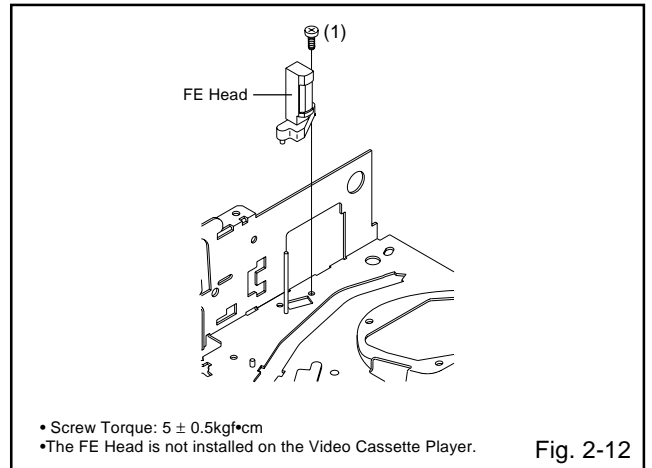


## 2-13: AHC ASS'Y/CYLINDER UNIT ASS'Y (Refer to Fig. 2-13)

1. Unlock the support (1) and remove the AHC Ass'y.
2. Disconnect the following connector:  
(CD2001)
3. Remove the 3 screws (2).
4. Remove the Cylinder Unit Ass'y.

### NOTE


1. When you install the Cylinder Unit Ass'y, tighten the screws from (1) to (3) in order while pulling the Ass'y toward the left front direction.

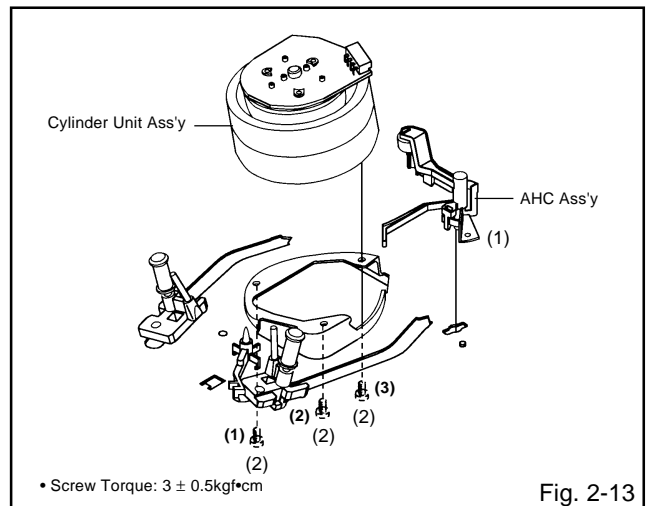

# DISASSEMBLY INSTRUCTIONS



## 2-14: CAPSTAN DD UNIT (Refer to Fig. 2-14-A)

1. Remove the Capstan Belt.
2. Remove the 3 screws (1).
3. Remove the Capstan DD Unit.

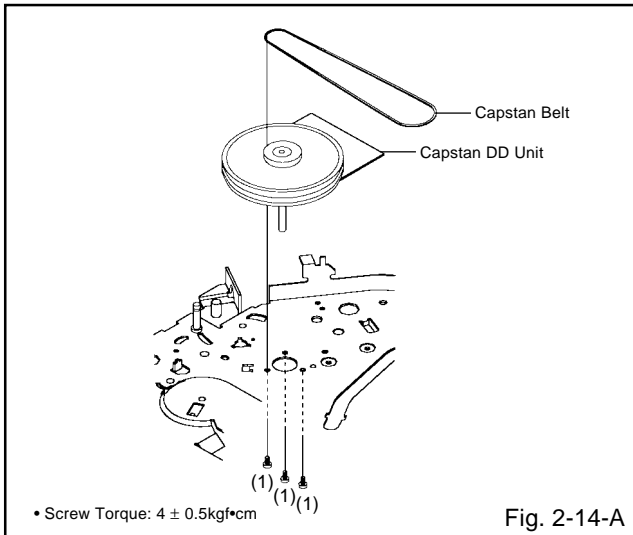


### NOTE

1. In case of the Capstan DD Unit installation, apply the silicon bond (TSE3843-W) on the position Fig. 2-14-B correctly. (If no silicon bond applied, abnormal noise will be heard on the deck operation.)  
(Refer to Fig. 2-14-B, C)

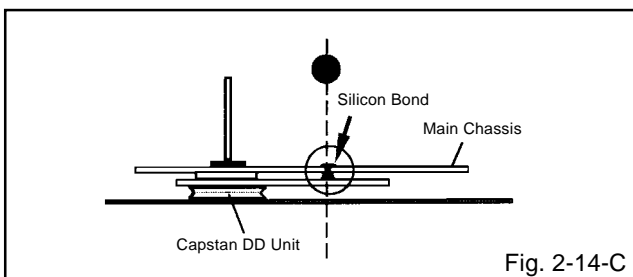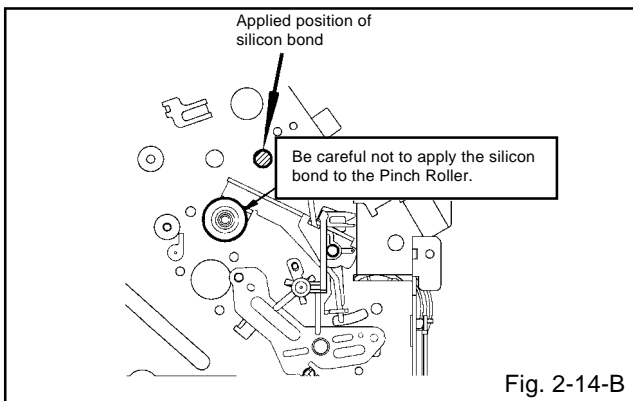


## 2-15: MAIN CAM/PINCH ROLLER CAM/JOINT GEAR (Refer to Fig. 2-15-A)

1. Remove the E-Ring (1), then remove the Main Cam.
2. Remove the E-Ring (2), then remove the Pinch Roller Cam and Joint Gear.

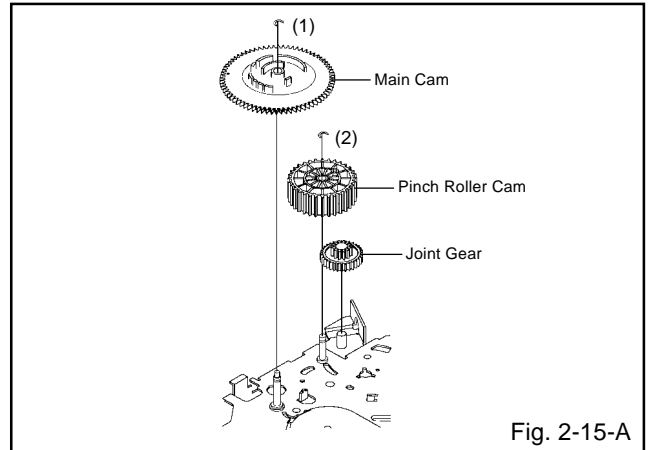


### NOTE

1. In case of the Pinch Roller Cam and Main Cam installation, install them as the circled section of Fig. 2-15-B so that the each markers are met. (Refer to Fig. 2-15-B)

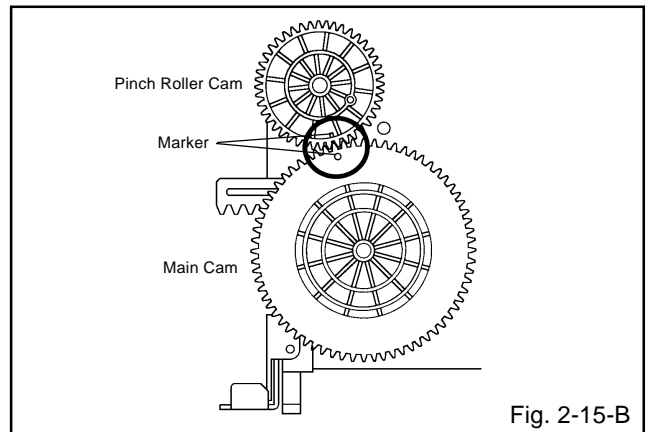

## 2-16: LOADING GEAR S/T UNIT (Refer to Fig. 2-16-A)


1. Remove the E-Ring (1) and remove the Main Loading Gear.
2. Remove the Main Rod, Tension Lever, Loading Arm S Unit and Loading Arm T Unit.

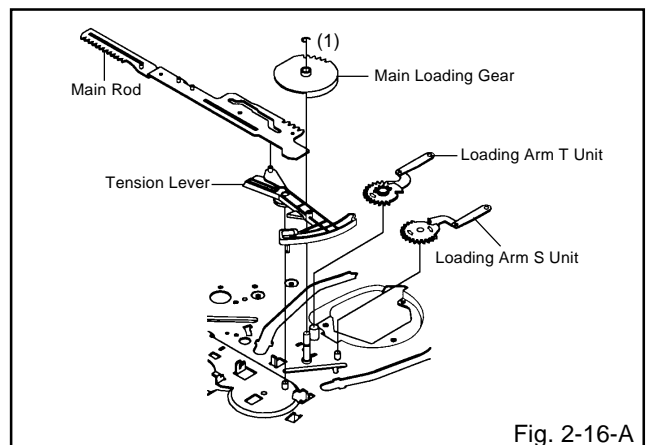

# DISASSEMBLY INSTRUCTIONS


## NOTE

1. When you install the Loading Arm S Unit, Loading Arm T Unit and Main Loading Gear, align each marker. (Refer to Fig. 2-16-B)

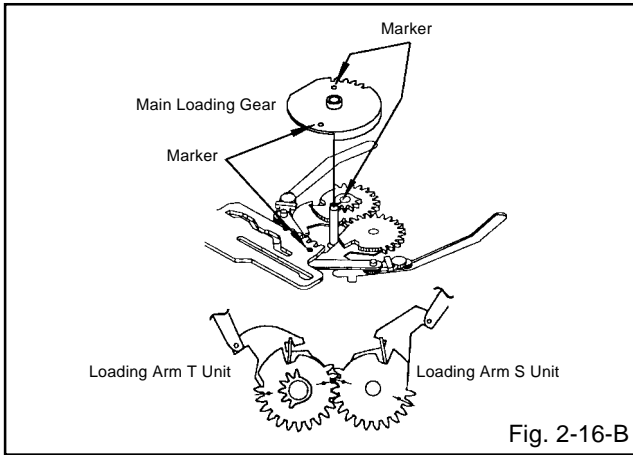


## 2-17: CLUTCH ASS'Y/RING SPRING/CLUTCH LEVER/CLUTCH GEAR (Refer to Fig. 2-17-A)

1. Remove the Polyslider Washer (1).
2. Remove the Clutch Ass'y and Ring Spring.
3. Remove the Clutch Lever.
4. Remove the Coupling Gear, Coupling Spring and Clutch Gear.

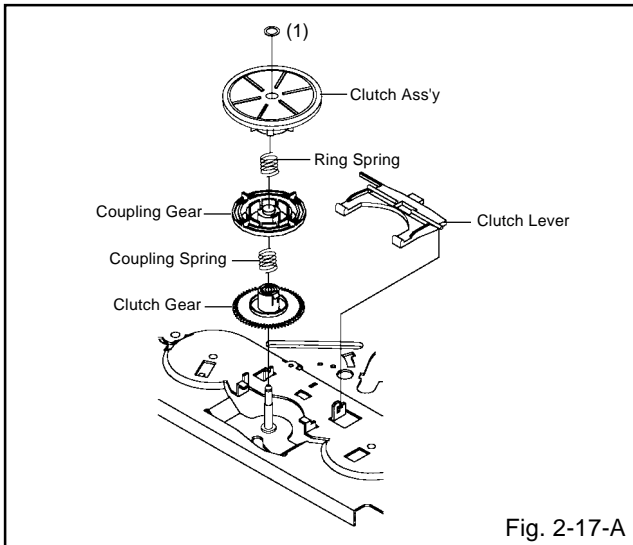


## NOTE

1. In case of the Clutch Ass'y installation, install it with inserting the spring of the Clutch Ass'y into the dent of the Coupling Gear. (Refer to Fig. 2-17-B)

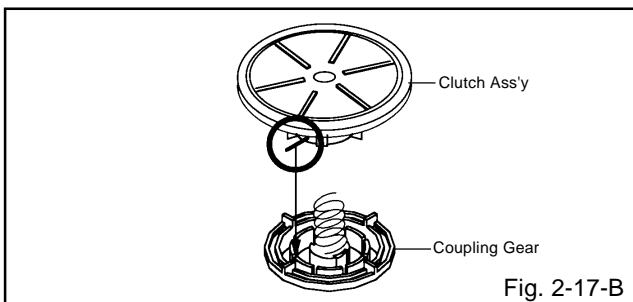



## 2-18: CASSETTE GUIDE POST/INCLINED BASE S/T UNIT/P4 CAP/LED REFLECTOR (Refer to Fig. 2-18-A)

1. Remove the P4 Cap.
2. Unlock the support (1) and remove the Cassette Guide Post.
3. Remove the Inclined Base S/T Unit.
4. Remove the screw (2).
5. Remove the LED Reflector.

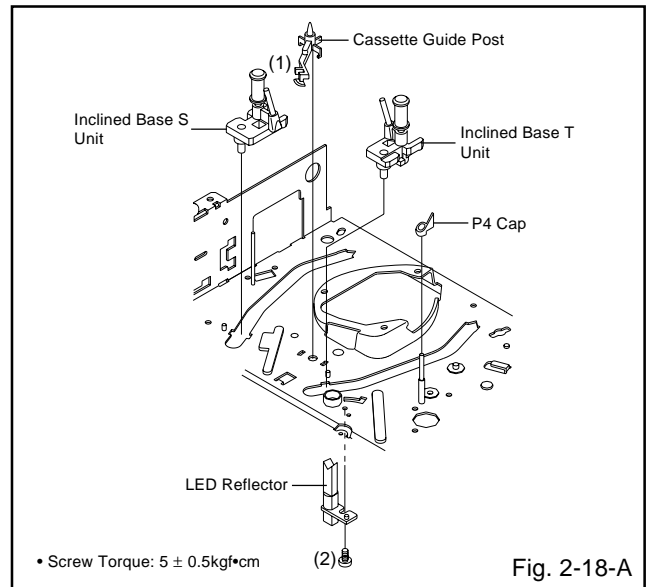

## NOTE

1. Do not touch the roller of Guide Roller.
2. In case of the P4 Cap installation, install it with parallel for "A" and "B" of Fig. 2-18-B.
3. In case of the Cassette Guide Post installation, install correctly as the circled section of Fig. 2-18-C.

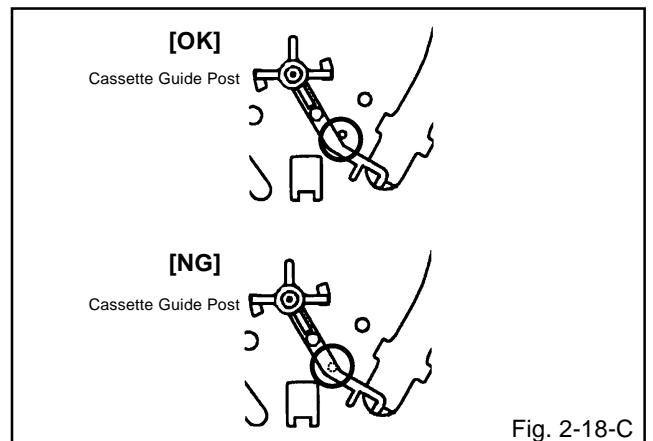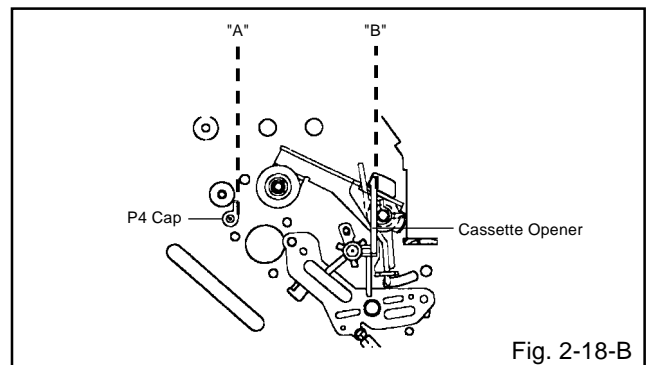

# DISASSEMBLY INSTRUCTIONS

## 3. REMOVAL OF DVD DECK PARTS

### NOTE

1. Do not disassemble the DVD DECK PARTS except listed parts here. Minute adjustments are needed if the disassemble is done. If the repair is needed except listed parts, replace the DVD MECHA ASS'Y.

### 3-1: TRAY (Refer to Fig. 3-1-A)

1. Set the Tray opened. (Refer to the DISC REMOVAL METHOD AT NO POWER SUPPLY)
2. Unlock the support (1) and remove the Tray.

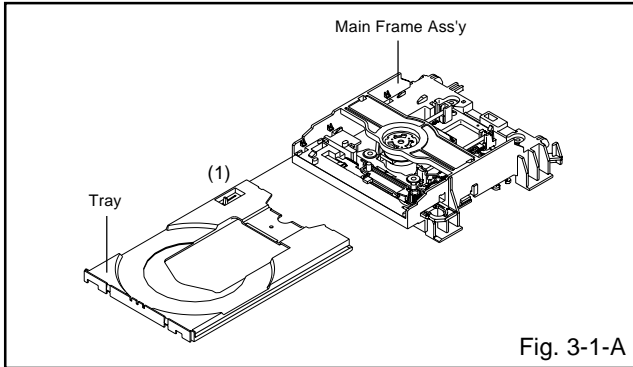


Fig. 3-1-A

### NOTE

1. In case of the Tray installation, install them as the circled section of Fig. 3-1-B so that the each markers are met.

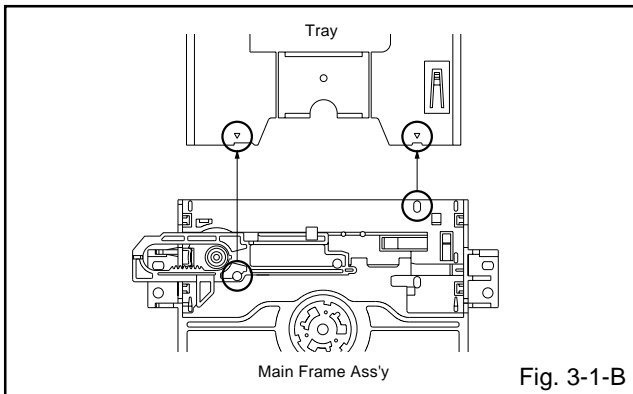


Fig. 3-1-B

### 3-2: MAIN CHASSIS ASS'Y (Refer to Fig. 3-2-A)

1. Remove the Main Chassis Ass'y from the Insulator (R).
2. Unlock the support (1).
3. Remove the Main Chassis Ass'y.

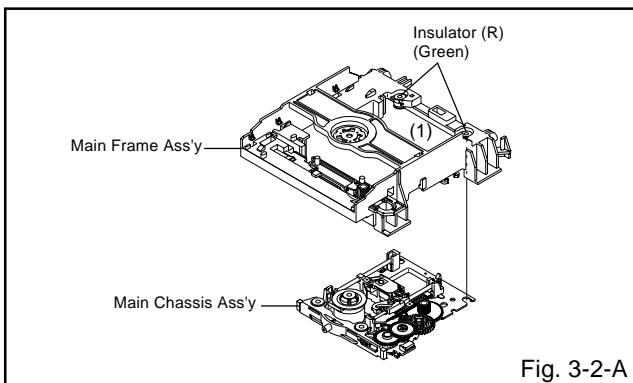


Fig. 3-2-A

### NOTE

1. In case of the Main Chassis Ass'y, install it from (1) to (6) in order. (Refer to Fig. 3-2-B)

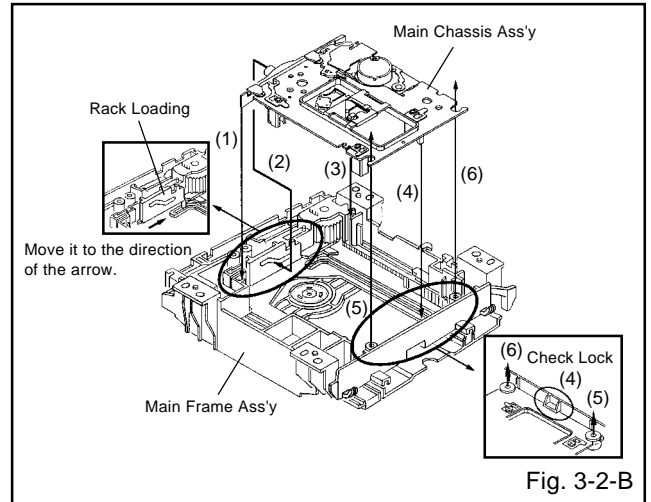


Fig. 3-2-B

### 3-3: RACK LOADING/MAIN GEAR/ RACK LOADING SPRING (Refer to Fig. 3-3)

1. Remove the Rack L Spring.
2. Press down the catcher (1) and slide the Rack Loading.
3. Remove the Rack Loading, Rack Loading Spring and Main Gear.

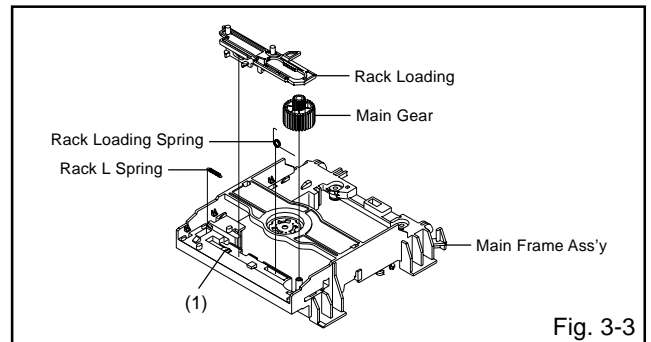


Fig. 3-3

### 3-4: CLAMPER ASS'Y/INSULATOR(R)/LEVER SWITCH (Refer to Fig. 3-4-A)

1. Remove the screw (1).
2. Remove the Lever Switch.
3. Remove the 2 Insulator (R).
4. Press the Clamper and rotate the Clamper Plate clockwise, then unlock the 3 supports (2).
5. Remove the Clamper Plate, Clamper Magnet and Clamper.




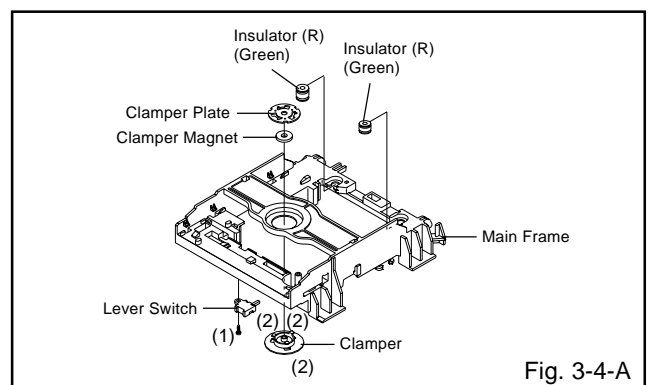


Fig. 3-4-A

# DISASSEMBLY INSTRUCTIONS


## NOTE

1. When installing the Clamper Magnet, install it with the green face up.
2. When installing the wire of the Lever Switch, install it correctly as Fig. 3-4-B.
3. When installing the Lever Switch, install it correctly as Fig. 3-4-C.
4. In case of the Lever Switch installation, hook the wire on the Main Frame as shown Fig. 3-4-D.

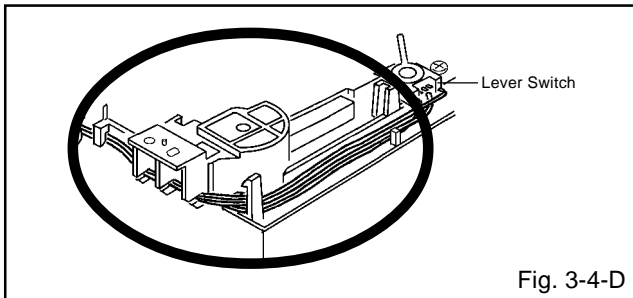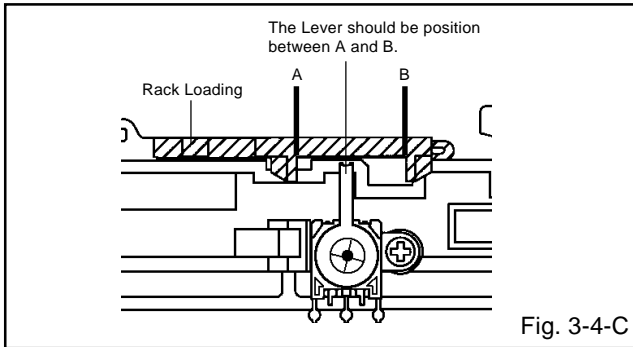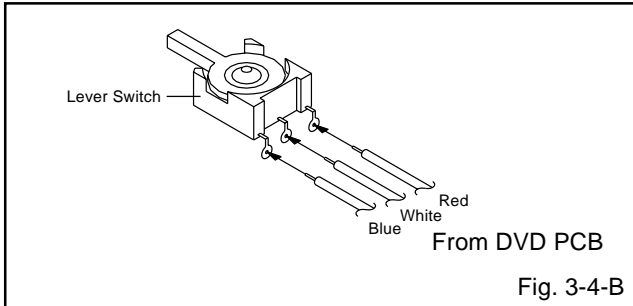


## 3-5: TRAVERSE HOLDER/INSULATOR (F) (Refer to Fig. 3-5-A)

1. Remove the Traverse Holder.
2. Remove the 2 Insulator (F).

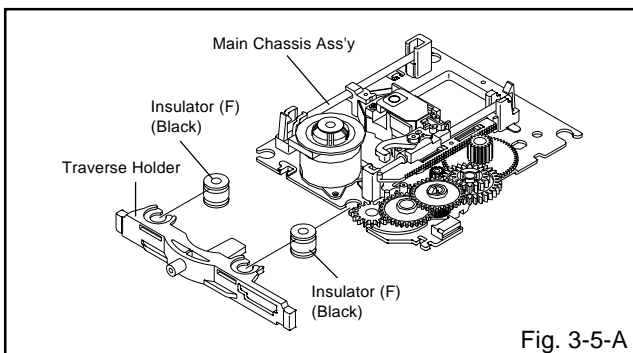


## NOTE

1. After the installing of the Traverse Holder, check if the wire is like Fig. 3-5-B.

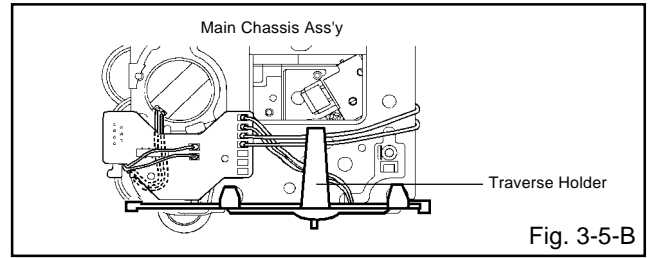


## 3-6: SWITCH PCB ASS'Y (Refer to Fig. 3-6-A)

1. Remove the screw (1).
2. Remove the Switch PCB Ass'y.

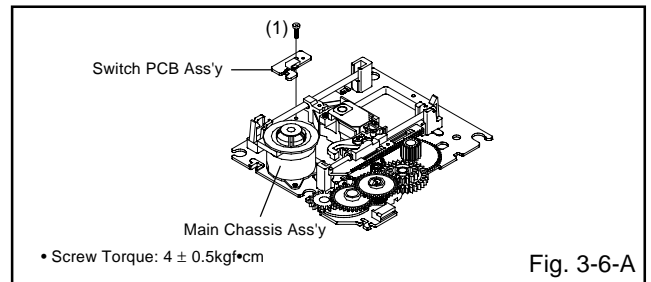


## NOTE

1. When installing the wire of the Switch PCB, install it correctly as Fig. 3-6-B.

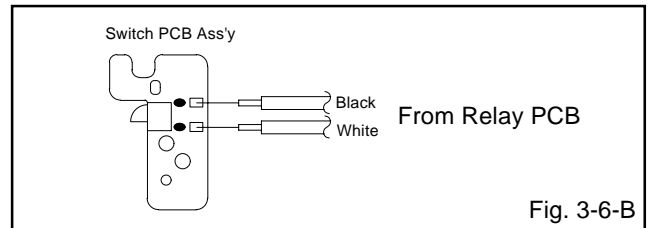

## 3-7: RACK FEED ASS'Y (Refer to Fig. 3-7-A)

1. Remove the screw (1).
2. Remove the Rack Feed 1A Spring, Rack Feed 1/2 and Rack Feed Lever.

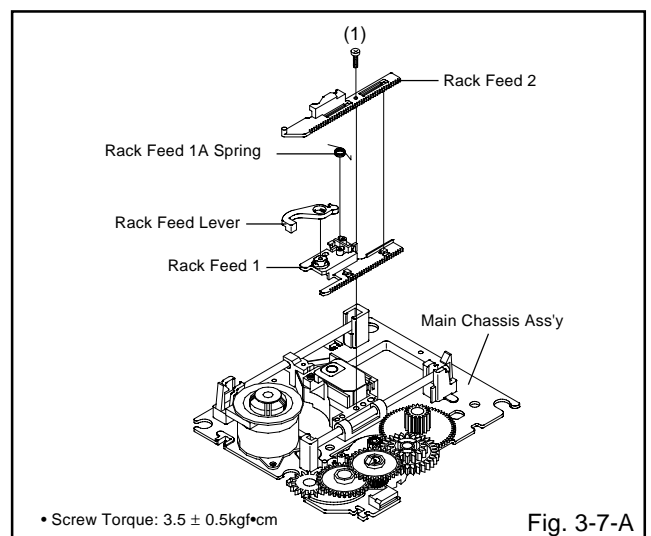

# DISASSEMBLY INSTRUCTIONS

## NOTE

1. After the assembly of the Rack Feed, check if the Rack Feed 1/2 is moving smoothly. (Refer to Fig. 3-7-B)
2. In case of the Rack Feed Ass'y installation, install correctly as Fig. 3-7-C.

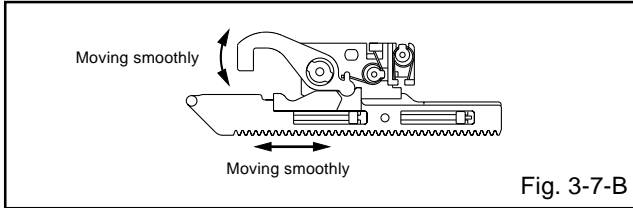


Fig. 3-7-B

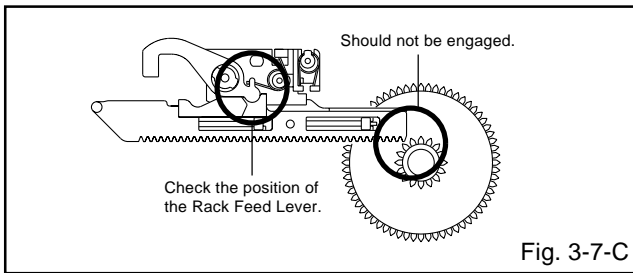


Fig. 3-7-C

## 3-8: RELAY PCB ASS'Y (Refer to Fig. 3-8-A)

1. Remove the screw (1).
2. Remove the Relay PCB Ass'y.

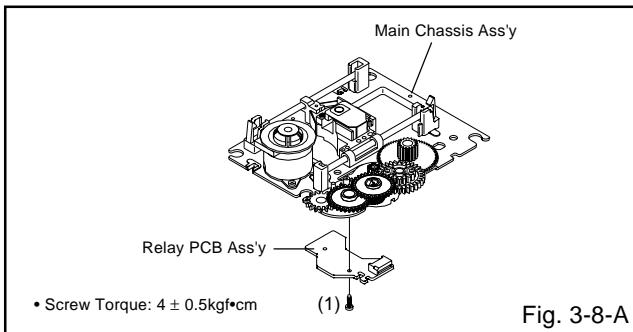


Fig. 3-8-A

## NOTE

1. When installing the wire of the Relay PCB, install it correctly as Fig. 3-8-B.

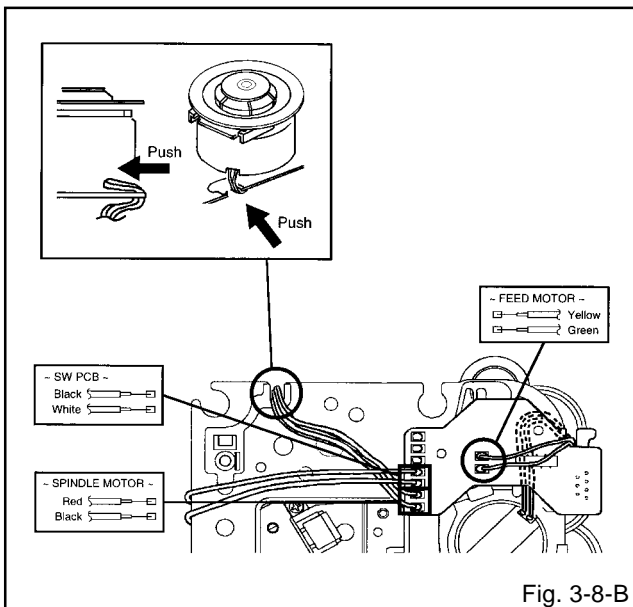


Fig. 3-8-B

## 3-9: GEAR (Refer to Fig. 3-9-A)

1. Unlock the support (1).
2. Remove the Middle Gear 1/2/3, Idler Gear and Feed Gear.

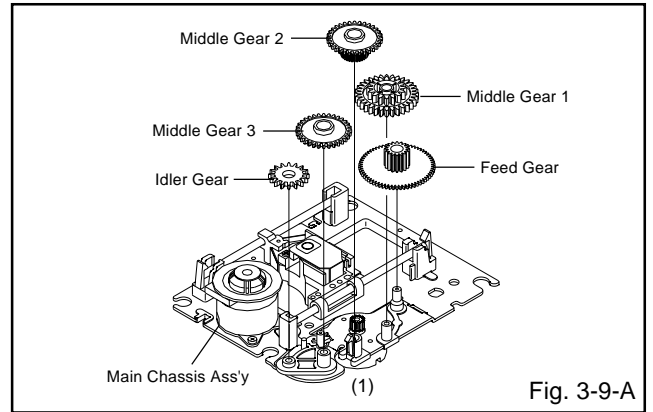


Fig. 3-9-A

## NOTE

1. In case of the Idler Gear installation, install correctly as Fig. 3-9-B.
2. When installing the Middle Gear 2, check if the Middle Gear 2 is locked correctly as Fig. 3-9-C.

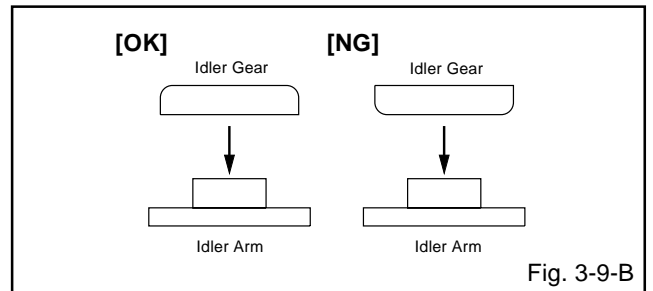


Fig. 3-9-B

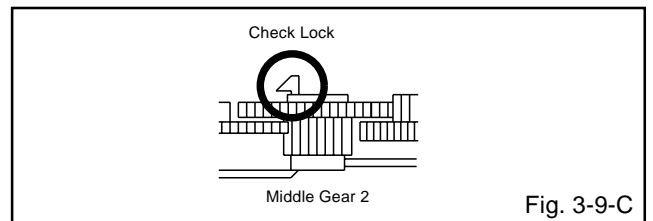


Fig. 3-9-C

## 3-10: IDLER ARM 2 (Refer to Fig. 3-10-A)

1. Remove the Idler Arm 2.


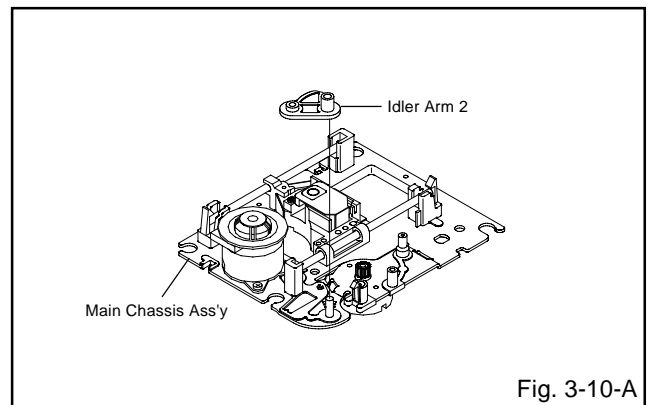


Fig. 3-10-A

## DISASSEMBLY INSTRUCTIONS



### 3-11: FEED MOTOR (Refer to Fig. 3-11-A)

1. Remove the 2 screws (1).
2. Remove the Feed Motor.
3. Remove the Motor Gear.

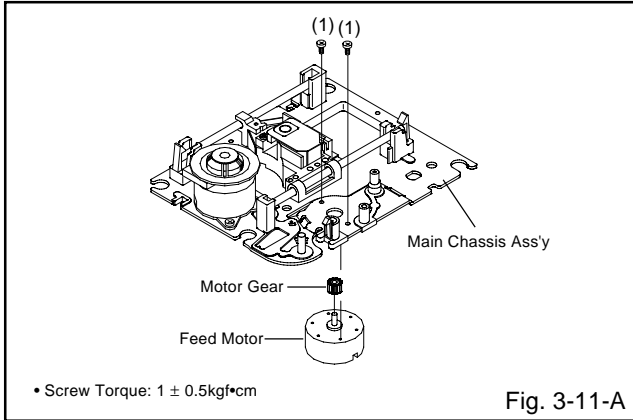

### NOTE

1. In case of the Motor Gear installation, check if the value of the Fig. 3-11-B is correct.
2. When installing the Feed Motor, check if the cable is positioned as Fig. 3-11-C.

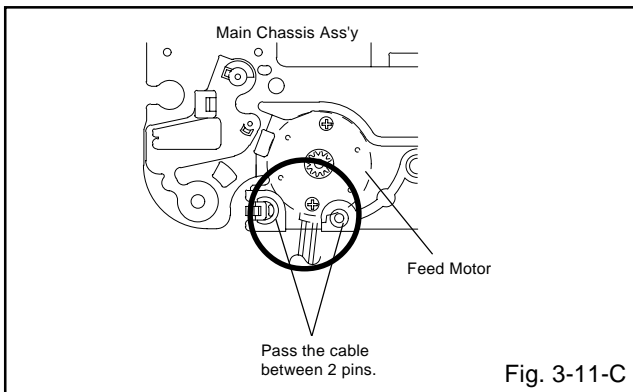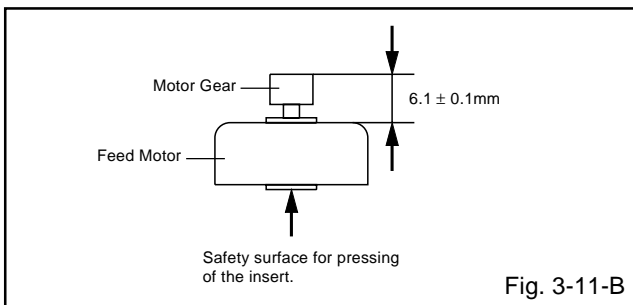

# DISASSEMBLY INSTRUCTIONS


## 4. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 4-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

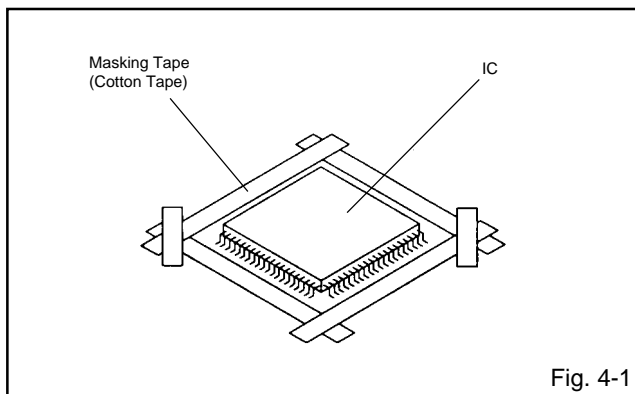

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 4-2.)

#### NOTE


Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

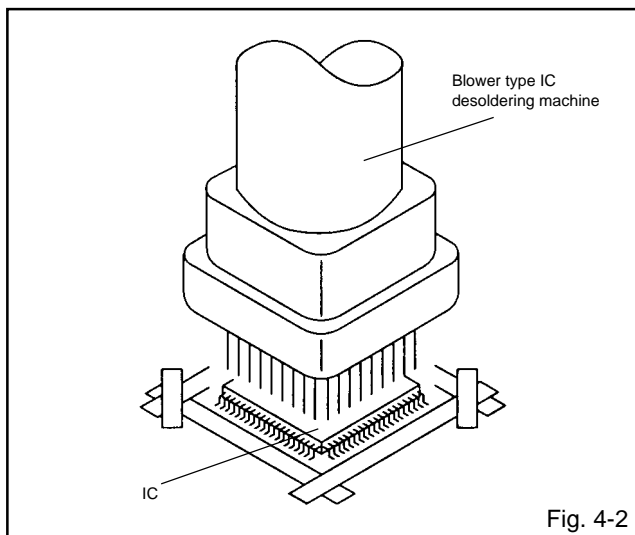

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 4-3.)

#### NOTE


Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

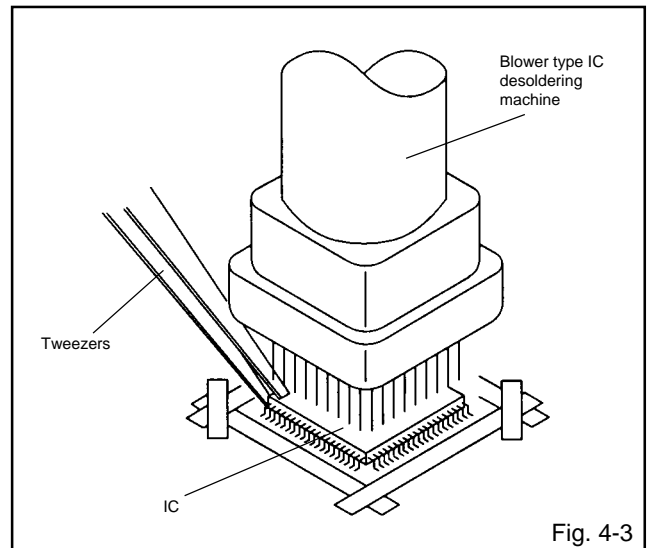

4. Peel off the Masking Tape.
5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 4-4.)

#### NOTE

Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

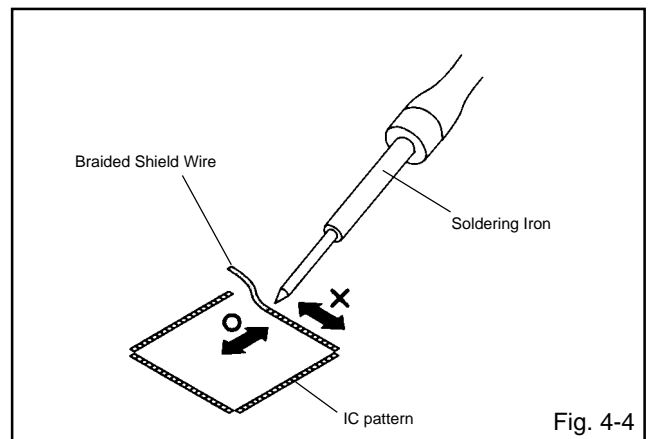





# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 4-5.)**

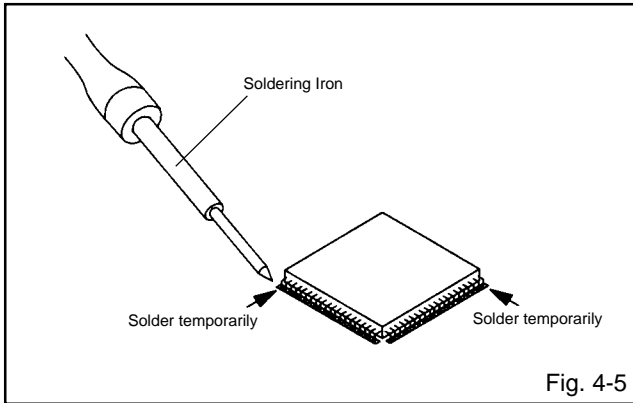


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 4-6.)**

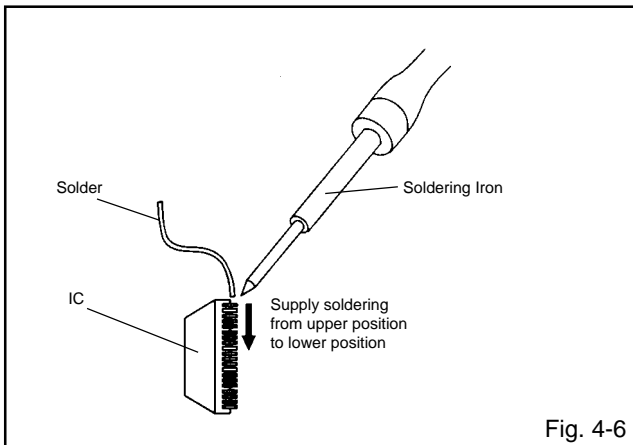


3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 4-7.)**

### NOTE

Do not absorb the solder to excess.

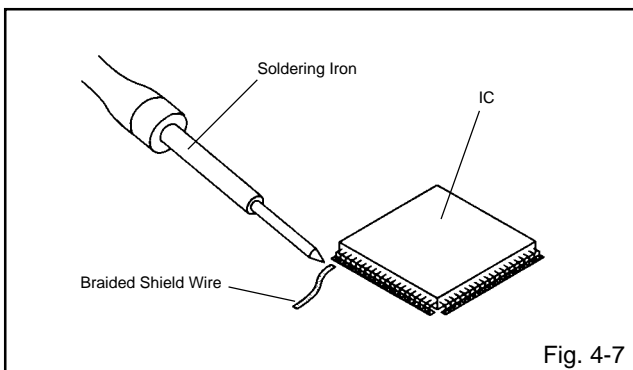

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 4-8.)**

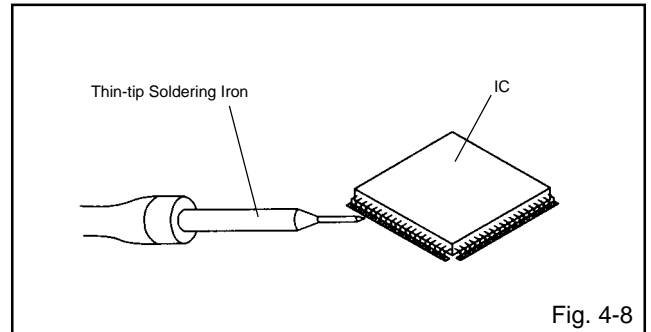

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

## KEY TO ABBREVIATIONS

<b>A</b>	<b>A/C</b>	: Audio/Control	<b>H.SW</b>	: Head Switch	
	<b>ACC</b>	: Automatic Color Control	<b>Hz</b>	: Hertz	
	<b>AE</b>	: Audio Erase	<b>I</b>	<b>IC</b>	: Integrated Circuit
	<b>AFC</b>	: Automatic Frequency Control		<b>IF</b>	: Intermediate Frequency
	<b>AFT</b>	: Automatic Fine Tuning		<b>IND</b>	: Indicator
	<b>AFT DET</b>	: Automatic Fine Tuning Detect		<b>INV</b>	: Inverter
	<b>AGC</b>	: Automatic Gain Control	<b>K</b>	<b>KIL</b>	: Killer
	<b>AMP</b>	: Amplifier	<b>L</b>	<b>L</b>	: Left
	<b>ANT</b>	: Antenna		<b>LED</b>	: Light Emitting Diode
	<b>A.PB</b>	: Audio Playback		<b>LIMIT AMP</b>	: Limiter Amplifier
	<b>APC</b>	: Automatic Phase Control		<b>LM, LDM</b>	: Loading Motor
	<b>ASS'Y</b>	: Assembly		<b>LP</b>	: Long Play
	<b>AT</b>	: All Time		<b>L.P.F</b>	: Low Pass Filter
	<b>AUTO</b>	: Automatic		<b>LUMI.</b>	: Luminance
	<b>A/V</b>	: Audio/Video	<b>M</b>	<b>M</b>	: Motor
<b>B</b>	<b>BGP</b>	: Burst Gate Pulse		<b>MAX</b>	: Maximum
	<b>BOT</b>	: Beginning of Tape		<b>MINI</b>	: Minimum
	<b>BPF</b>	: Bandpass Filter		<b>MIX</b>	: Mixer, mixing
	<b>BRAKE SOL</b>	: Brake Solenoid		<b>MM</b>	: Monostable Multivibrator
	<b>BUFF</b>	: Buffer		<b>MOD</b>	: Modulator, Modulation
	<b>B/W</b>	: Black and White		<b>MPX</b>	: Multiplexer, Multiplex
<b>C</b>	<b>C</b>	: Capacitance, Collector		<b>MS SW</b>	: Mecha State Switch
	<b>CASE</b>	: Cassette	<b>N</b>	<b>NC</b>	: Non Connection
	<b>CAP</b>	: Capstan		<b>NR</b>	: Noise Reduction
	<b>CARR</b>	: Carrier	<b>O</b>	<b>OSC</b>	: Oscillator
	<b>CH</b>	: Channel		<b>OPE</b>	: Operation
	<b>CLK</b>	: Clock	<b>P</b>	<b>PB</b>	: Playback
	<b>CLOCK (SY-SE)</b>	: Clock (Syscon to Servo)		<b>PB CTL</b>	: Playback Control
	<b>COMB</b>	: Combination, Comb Filter		<b>PB-C</b>	: Playback-Chrominance
	<b>CONV</b>	: Converter		<b>PB-Y</b>	: Playback-Luminance
	<b>CPM</b>	: Capstan Motor		<b>PCB</b>	: Printed Circuit Board
	<b>CTL</b>	: Control		<b>P. CON</b>	: Power Control
	<b>CYL</b>	: Cylinder		<b>PD</b>	: Phase Detector
	<b>CYL-M</b>	: Cylinder-Motor		<b>PG</b>	: Pulse Generator
	<b>CYL SENS</b>	: Cylinder-Sensor		<b>P-P</b>	: Peak-to Peak
<b>D</b>	<b>DATA (SY-CE)</b>	: Data (Syscon to Servo)	<b>R</b>	<b>R</b>	: Right
	<b>dB</b>	: Decibel		<b>REC</b>	: Recording
	<b>DC</b>	: Direct Current		<b>REC-C</b>	: Recording-Chrominance
	<b>DD Unit</b>	: Direct Drive Motor Unit		<b>REC-Y</b>	: Recording-Luminance
	<b>DEMOD</b>	: Demodulator		<b>REEL BRK</b>	: Reel Brake
	<b>DET</b>	: Detector		<b>REEL S</b>	: Reel Sensor
	<b>DEV</b>	: Deviation		<b>REF</b>	: Reference
<b>E</b>	<b>E</b>	: Emitter		<b>REG</b>	: Regulated, Regulator
	<b>EF</b>	: Emitter Follower		<b>REW</b>	: Rewind
	<b>EMPH</b>	: Emphasis		<b>REV, RVS</b>	: Reverse
	<b>ENC</b>	: Encoder		<b>RF</b>	: Radio Frequency
	<b>ENV</b>	: Envelope		<b>RMC</b>	: Remote Control
	<b>EOT</b>	: End of Tape		<b>RY</b>	: Relay
	<b>EQ</b>	: Equalizer	<b>S</b>	<b>S. CLK</b>	: Serial Clock
	<b>EXT</b>	: External		<b>S. COM</b>	: Sensor Common
<b>F</b>	<b>F</b>	: Fuse		<b>S. DATA</b>	: Serial Data
	<b>FBC</b>	: Feed Back Clamp		<b>SEG</b>	: Segment
	<b>FE</b>	: Full Erase		<b>SEL</b>	: Select, Selector
	<b>FF</b>	: Fast Forward, Flipflop		<b>SENS</b>	: Sensor
	<b>FG</b>	: Frequency Generator		<b>SER</b>	: Search Mode
	<b>FL SW</b>	: Front Loading Switch		<b>SI</b>	: Serial Input
	<b>FM</b>	: Frequency Modulation		<b>SIF</b>	: Sound Intermediate Frequency
	<b>FSC</b>	: Frequency Sub Carrier		<b>SO</b>	: Serial Output
	<b>FWD</b>	: Forward		<b>SOL</b>	: Solenoid
<b>G</b>	<b>GEN</b>	: Generator		<b>SP</b>	: Standard Play
	<b>GND</b>	: Ground		<b>STB</b>	: Serial Strobe
<b>H</b>	<b>H.P.F</b>	: High Pass Filter		<b>SW</b>	: Switch

## KEY TO ABBREVIATIONS

<b>S</b>	<b>SYNC</b>	:	Synchronization
	<b>SYNC SEP</b>	:	Sync Separator, Separation
<b>T</b>	<b>TR</b>	:	Transistor
	<b>TRAC</b>	:	Tracking
	<b>TRICK PB</b>	:	Trick Playback
	<b>TP</b>	:	Test Point
<b>U</b>	<b>UNREG</b>	:	Unregulated
<b>V</b>	<b>V</b>	:	Volt
	<b>VCO</b>	:	Voltage Controlled Oscillator
	<b>VIF</b>	:	Video Intermediate Frequency
	<b>VP</b>	:	Vertical Pulse, Voltage Display
	<b>V.PB</b>	:	Video Playback
	<b>VR</b>	:	Variable Resistor
	<b>V.REC</b>	:	Video Recording
	<b>VSF</b>	:	Visual Search Fast Forward
	<b>VSR</b>	:	Visual Search Rewind
	<b>VSS</b>	:	Voltage Super Source
	<b>V-SYNC</b>	:	Vertical-Synchronization
	<b>VT</b>	:	Voltage Tuning
<b>X</b>	<b>X'TAL</b>	:	Crystal
<b>Y</b>	<b>Y/C</b>	:	Luminance/Chrominance

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.

To enter to the SERVICE MODE function, press and hold both buttons simultaneously on the main unit or on the main unit and on the remote control for more than a standard time (second).

Set Key	Set Key	Standard Time (seconds)	Operations
CH UP	FF	2	PLAY/REC total hours are displayed on the TV Monitor. Refer to the "PREVENTIVE CHECKS AND SERVICE INTERVALS" (CONFIRMATION OF HOURS USED).  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
CH UP	STOP	2	Adjust the PG SHIFTER automatically. Refer to the "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
CH UP	PLAY	2	Initialization of the factory on VCR. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the clock setting, the channel setting, and PLAY/REC total hours.
CH DOWN	POWER	2	VCR operation mode at no connection of DVD. Refer to the "PREPARATION FOR SERVICING" NOTE: Although the DVD is connected, the DVD mode cannot be selected.

Set Key	Remocon Key	Standard Time (seconds)	Operations
REC	4	2	Initialization of the factory on DVD. NOTE: Do not use this for the normal servicing. The function will only work without the setting of DVD disc at DVD mode. While pressing the Remocon Key for more than the Standard Time, press the Set Key simultaneously.
STOP	7	3	Releasing of PARENTAL LOCK. Refer to the "PARENTAL CONTROL - RATING LEVEL". NOTE: The function will only work without the setting of DVD disc at DVD mode.

Method	Operations
Press the ATR button on the remote control for more than 2 seconds during PLAY.	Adjusting of the Tracking to the center position. Refer to the "MECHANICAL ADJUSTMENT" (GUIDE ROLLER) and "ELECTRICAL ADJUSTMENT" (PG SHIFTER).
Make the short circuit between the test point of SERVICE and the GND.	The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape. Refer to the "PREPARATION FOR SERVICING"

# PREVENTIVE CHECKS AND SERVICE INTERVALS

The following standard table depends on environmental conditions and usage.

Parts replacing time does not mean the life span for individual parts.

Also, long term storage or misuse may cause transformation and aging of rubber parts.

The following list means standard hours, so the checking hours depends on the conditions.

Time Parts Name	500 hours	1,000 hours	1,500 hours	2,000 hours	2,500 hours	Notes
Audio Control Head	■	■	■	●	●	Clean those parts in contact with the tape.
Full Erase Head (Recorder only)	■	■	■	●	●	
Capstan Belt		●	●	●	●	Clean the rubber, and parts which the rubber touches.
Pinch Roller	■	●	●	●	●	
Capstan DD Unit		●	●	●	●	
Loading Motor					●	
Tension Band		●	●	●	●	
T Brake Band		●	●	●	●	
Clutch Ass'y		●	●	●	●	
Idler Arm Ass'y		●	●	●	●	
Capstan Shaft	■	■	■	■	■	
Tape Running Guide Post	■	■	■	■	■	
Cylinder Unit	■	●	●	●	●	Clean the Head

■ : Clean

● : Check it and if necessary, replace it.

## CONFIRMATION OF HOURS USED

PLAY/REC total hours can be checked on the screen.

Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

1. Connect the set to TV Monitor.
2. Turn on the POWER.
3. Press both CH UP button on the set and the FF button on the set for more than 2 seconds.  
The Fig. 1 screen will appear on TV Monitor.
4. After the confirmation of using hours, turn off the power.

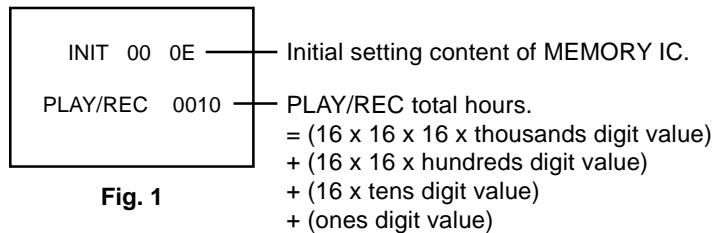


Fig. 1

# PREVENTIVE CHECKS AND SERVICE INTERVALS


## CLEANING

### NOTE

After cleaning the heads with isopropyl alcohol, do not run a tape until the heads dry completely. If the heads are not completely dry and alcohol gets on the tape, damage may occur.

### 1. AUDIO CONTROL HEAD

Clean the Audio Control Head with the cotton stick soaked by alcohol. Clean the full erase head in the same manner. **(Refer to the figure below.)**

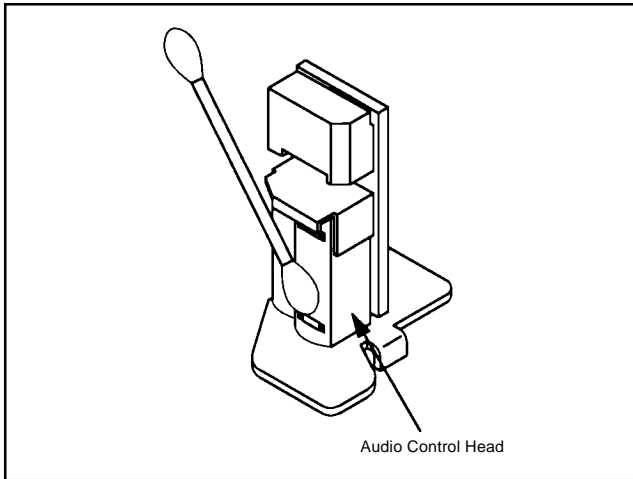

### 2. TAPE RUNNING SYSTEM


When cleaning the tape transport system, use the gauze moistened with isopropyl alcohol.

### 3. CYLINDER

Wrap a piece of chamois around your finger. Dip it in isopropyl alcohol. Hold it to the cylinder head softly. Turn the cylinder head counterclockwise to clean it (in the direction of the arrow). **(Refer to the figure below.)**

### NOTE

Do not exert force against the cylinder head. Do not move the chamois upward or downward on the head. Use the chamois one by one.

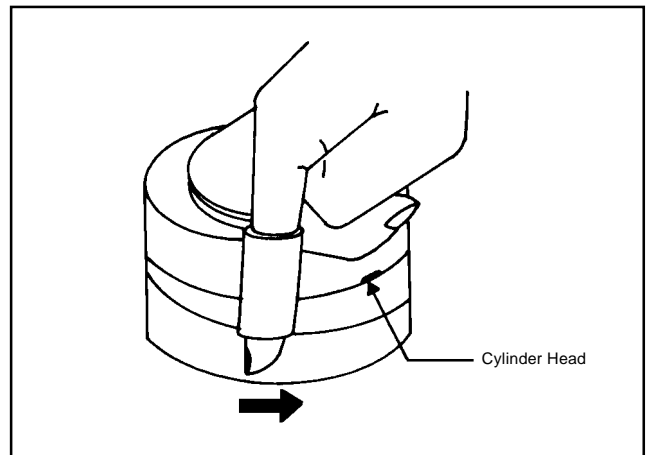

## WHEN REPLACING EEPROM (MEMORY) IC


If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

**NOTE: INI 34 and INI 35 cannot be set. Because, the total time for the PLAY/REC of the main unit is recorded.**

INIT	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	0E	00	BC	60	64	64	4A	26	0B	2B	86	32	0A	08	0A	0F
10	AF	97	95	8A	A0	90	31	04	88	A5	9F	3A	00	10	BF	00
20	3A	11	22	70	61	2A	3A	00	0B	00	00	C5	A2	B0	00	---

**Table 1**

1. Connect the set to TV Monitor.
2. Turn on the POWER.
3. Press both CH UP button on the set and the FF button on the set for more than 2 seconds.  
ADDRESS and DATA will appear on TV Monitor as **Fig 1** .

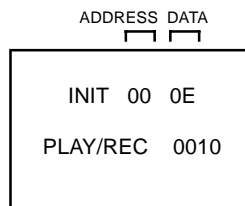











**Fig. 1**

4. ADDRESS is now selected and should blink. Using the SET + or - button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
5. Press ENTER to select DATA. When DATA is selected, it will blink.
6. Again, step through the DATA using SET + or - button until required DATA value has been selected.
7. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
8. Repeat steps 4 to 7 until all data has been checked.
9. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

**After the data input, set to the initializing of shipping.**

10. Turn POWER on.
11. Press both CH UP button on the set and the PLAY button on the set for more than 2 seconds.
12. After the finishing of the initializing of shipping, the unit will turn off automatically.  
The unit will now have the correct DATA for the new MEMORY IC.

## SERVICING FIXTURES AND TOOLS
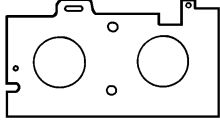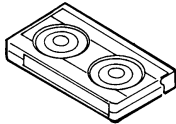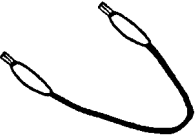
<p><b>(For 2 heads model)</b> VHS Alignment Tape JG001 (VN<sub>2</sub>S-LI6<sup>3</sup>) JG001A (VN<sub>2</sub>S-CO<sup>13</sup>) JG001Q (VN<sub>2</sub>S-LI6<sup>3</sup>H) JG001T (VN<sub>2</sub>S-X6<sup>3</sup>)</p> 	<p><b>(For 4 heads model)</b> VHS Alignment Tape JG001B (VN<sub>1</sub>S-LI6<sup>3</sup>) JG001I (VN<sub>1</sub>S-CO<sup>13</sup>) JG001P (VN<sub>1</sub>S-LI6<sup>3</sup>H) JG001S (VN<sub>1</sub>S-X6<sup>3</sup>)</p> 	<p>JG002B Adapter JG002E Dial Torque Gauge (10~90gf·cm) JG002F (60~600gf·cm)</p> 	<p>JG005 Post Adjustment Screwdriver Part No. SV-TG0-030-000 (small)</p> 
<p>JG153 X Value Adjustment Screwdriver</p> 	<p>JG022 Master Plane</p> 	<p>JG024A Reel Disk Height Adjustment Jig</p> 	<p>JG100A Torque Tape (VHT-063)</p> 
<p>JG154 Cable</p> 	<p>Tentelometer</p> 		

Ref. No.	Part No.	Parts Name	Remarks
JG001	APJG001000	VHS Alignment Tape	Monoscope, 6KHz <b>(For 2 heads model)</b>
JG001A	APJG001A00	VHS Alignment Tape	Color Bar, 1KHz <b>(For 2 heads model)</b>
JG001Q	APJG001Q00	VHS Alignment Tape	Hi-Fi Audio <b>(For 2 heads model)</b>
JG001T	APJG001T00	VHS Alignment Tape	X Value Adjustment <b>(For 2 heads model)</b>
JG001B	APJG001B00	VHS Alignment Tape	Monoscope, 6KHz <b>(For 4 heads model)</b>
JG001I	APJG001I00	VHS Alignment Tape	Color Bar, 1KHz <b>(For 4 heads model)</b>
JG001P	APJG001P00	VHS Alignment Tape	Hi-Fi Audio <b>(For 4 heads model)</b>
JG001S	APJG001S00	VHS Alignment Tape	X Value Adjustment <b>(For 4 heads model)</b>
JG002B	APJG002B00	Adapter	VSR Torque, Brake Torque (S Reel/T Reel Ass'y)
JG002E	APJG002E00	Dial Torque Gauge (10~90gf·cm)	Brake Torque (T Reel Ass'y)
JG002F	APJG002F00	Dial Torque Gauge (60~600gf·cm)	VSR Torque, Brake Torque (S Reel)
JG005	APJG005000	Post Adjustment Screwdriver	Guide Roller Adjustment
JG153	APJG153000	X Value Adjustment Screwdriver	X Value Adjustment
JG022	APJG022000	Master Plane	Reel Disk Height Adjustment
JG024A	APJG024A00	Reel Disk Height Adjustment Jig	Reel Disk Height Adjustment
JG100A	APJG100A00	Torque Tape (VHT-063)	Playback Torque, Back Tension Torque During Playback
JG154	APJG154000	Cable	Used to connect the test point of SERVICE and GROUND

## PREPARATION FOR SERVICING

### How to use the Servicing Fixture

- While pressing the POWER button on the set for more than 2 seconds, press the CH DOWN button on the set simultaneously at the Power OFF. Although the DVD is connected, the DVD mode cannot be selected.
- Short circuit between **TP3001** and **Ground** with the cable JG154.  
(The BOT, EOT, and the Reel Sensor do not work and the VCR deck can be operated without a cassette tape.)
- In case of using a cassette tape, press the TAPE EJECT button to insert or eject a cassette tape.  
Turn on the power and re-check the cable before checking the trouble points.

**When you servicing with connection of DVD, perform the operations above step 2 to step 3.**



# MECHANICAL ADJUSTMENTS



## 1. CONFIRMATION AND ADJUSTMENT

Read the following NOTES before starting work.

- Place an object which weighs between 450g~500g on the Cassette Tape to keep it steady when you want to make the tape run without the Cassette Holder. (Do not place an object which weighs over 500g.)



### 1-1: CONFIRMATION AND ADJUSTMENT OF REEL DISK HEIGHT

- Turn on the power and set to the STOP mode.
- Set the master plane (**JG022**) and reel disk height adjustment jig (**JG024A**) on the mechanism framework, taking care not to scratch the drum, as shown in **Fig. 1-1-A**.
- While turning the reel and confirm the following points. Check if the surface "A" of reel disk is lower than the surface "B" of reel disk height adjustment jig (**JG024A**) and is higher than the surface "C". If it is not passed, place the height adjustment washers and adjust to  $10(+2, -0)$ mm.
- Adjust the other reel in the same way.

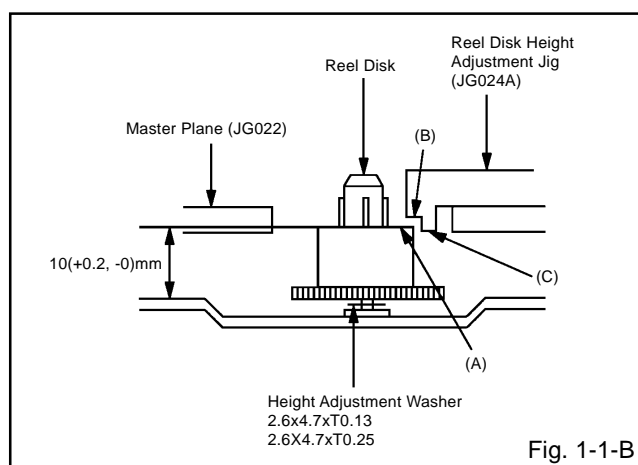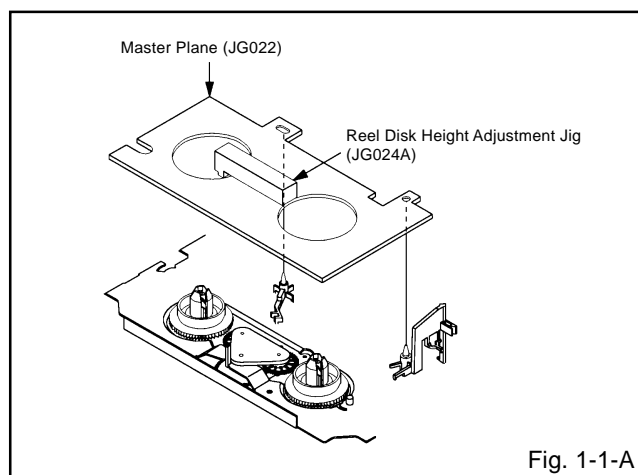

### 1-2: CONFIRMATION AND ADJUSTMENT OF TENSION POST POSITION

- Set to the PLAY mode.
- Adjust the adjusting section for the Tension Arm position so that the Tension Arm top is within the standard line of Main Chassis.
- While turning the S Reel clockwise, confirm that the edge of the Tension Arm is located in the position described above.

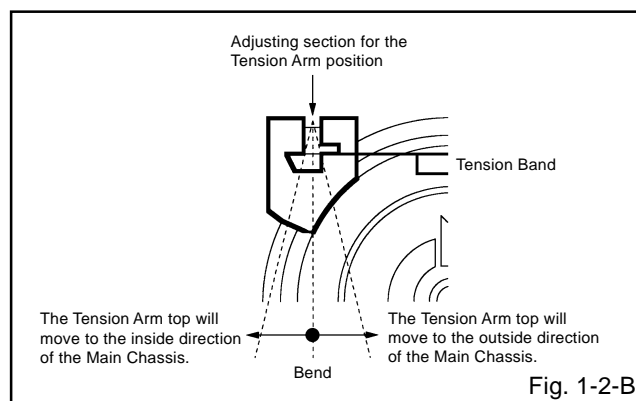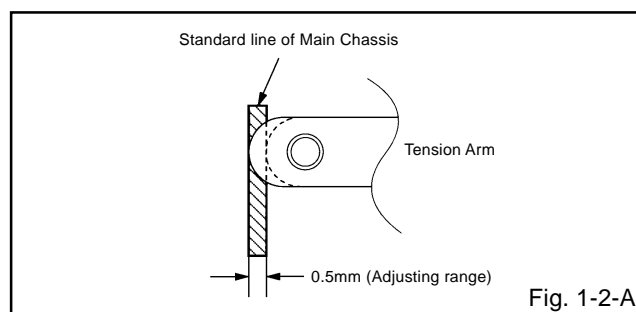


### 1-3: CONFIRMATION OF PLAYBACK TORQUE AND BACK TENSION TORQUE DURING PLAYBACK

- Load a video tape (T-120) recorded in standard speed mode. Set the unit to the PLAY mode.
- Install the tentelometer as shown in **Fig. 1-3**. Confirm that the meter indicates  $20 \pm 2$ gf in the beginning of playback.

#### • USING A CASSETTE TYPE TORQUE TAPE (**JG100A**)

- After confirmation and adjustment of Tension Post position (**Refer to item 1-2**), load the cassette type torque tape (**JG100A**) and set to the PLAY mode.
- Confirm that the right meter of the torque tape indicates 50~90gf·cm during playback in SP mode.
- Confirm that the left meter of the torque tape indicates 25~40gf·cm during playback in SP mode.

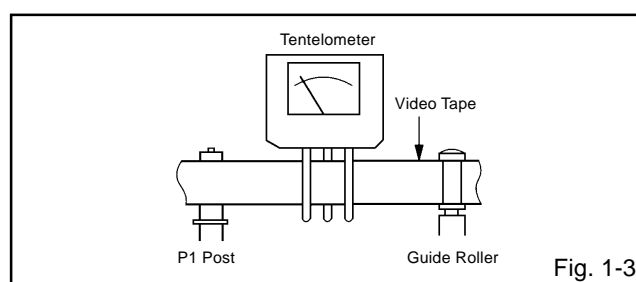

# MECHANICAL ADJUSTMENTS

## 1-4: CONFIRMATION OF VSR TORQUE

1. Install the Torque Gauge (**JG002F**) and Adapter (**JG002B**) on the S Reel. Set to the Picture Search (Rewind) mode. (Refer to Fig.1-4-B)
2. Then, confirm that it indicates 120~180gf·cm.

### NOTE

Install the Torque Gauge on the reel disk firmly. Press the REW button to turn the reel disk.



## 1-5: CONFIRMATION OF REEL BRAKE TORQUE

(S Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Ass'y from the S Reel.
3. Install the Torque Gauge (**JG002F**) and Adapter (**JG002B**) on the S Reel. Turn the Torque Gauge (**JG002F**) clockwise.
4. Then, confirm that it indicates 60~100gf·cm.

(T Reel Brake) (Refer to Fig. 1-4-B)

1. Once set to the Fast Forward mode then set to the Stop mode. While, unplug the AC cord when the Pinch Roller Block is on the position of Fig. 1-4-A.
2. Move the Idler Ass'y from the T Reel.
3. Install the Torque Gauge (**JG002E**) and Adapter (**JG002B**) on the T reel. Turn the Torque Gauge (**JG002E**) counterclockwise.
4. Then, confirm that it indicates 30~50gf·cm.

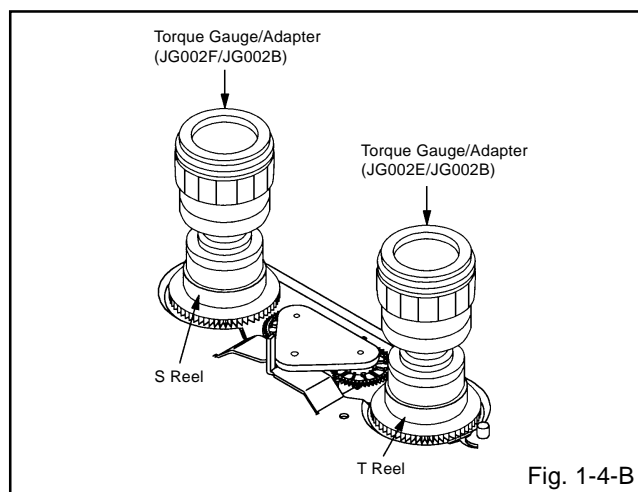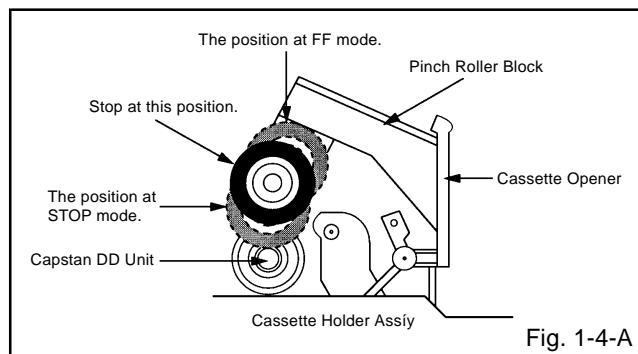

### NOTE

If the torque is out of the range, replace the following parts.

Check item	Replacement Part
1-4	Idler Ass'y/Clutch Ass'y
1-5	S Reel side: S Reel/Tension Band/Tension Connect/Tension Arm Ass'y T Reel side: T Reel/T Brake Band//T Brake Spring/T Brake Arm

## 2. CONFIRMATION AND ADJUSTMENT OF TAPE RUNNING MECHANISM



Tape Running Mechanism is adjusted precisely at the factory. Adjustment is not necessary as usual. When you replace the parts of the tape running mechanism because of long term usage or failure, the confirmation and adjustment are necessary.

### 2-1: GUIDE ROLLER

1. Playback the VHS Alignment Tape (**JG001** or **JG001B**). (Refer to **SERVICING FIXTURE AND TOOLS**)
2. Connect CH-1 of the oscilloscope to **TP101 (Envelope)** and CH-2 to **TP3002 (SW Pulse)**.
3. Press and hold the ATR button on the remote control more than 2 seconds to set tracking to center.
4. Trigger with SW Pulse and observe the envelope. (Refer to Fig. 2-1-A)
5. When observing the envelope, adjust the Adjusting Driver (**JG005**) slightly until the envelope will be flat. Even if you press the Tracking Button, adjust so that flatness is not moved so much.
6. Adjust so that the A : B ratio is better than 3 : 2 as shown in Fig. 2-1-B, even if you press the Tracking Button to move the envelope (The envelope waveform will begin to decrease when you press the Tracking Button).
7. Adjust the PG shifter during playback. (Refer to the **ELECTRICAL ADJUSTMENTS**)

### NOTE

After adjustment, confirm and adjust A/C head. (Refer to item 2-2)


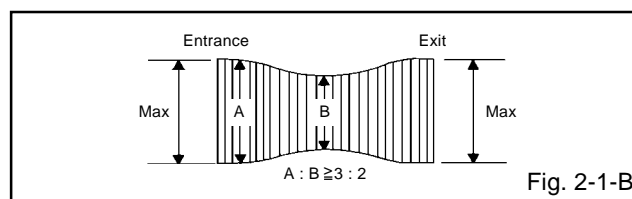
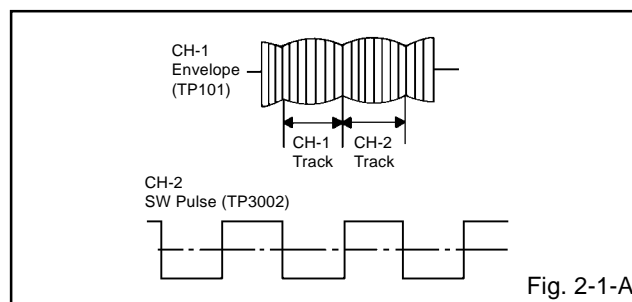


## MECHANICAL ADJUSTMENTS

### 2-2: CONFIRMATION AND ADJUSTMENT OF AUDIO/CONTROL HEAD


When the Tape Running Mechanism does not work well, adjust the following items.

1. Playback the VHS Alignment Tape (**JG001 or JG001B**). **(Refer to SERVICING FIXTURE AND TOOLS)**
2. Confirm that the reflected picture of stamp mark is appeared on the tape prior to P4 Post as shown in **Fig. 2-2-A**.
  - a) When the reflected picture is distorted, turn the screw (1) clockwise until the distortion is disappeared.
  - b) When the reflected picture is not distorted, turn the screw (1) counterclockwise until little distortion is appeared, then adjust the a).
3. Turn the screw (2) to set the audio level to maximum.
4. Confirm that the bottom of the Audio/Control Head and the bottom of the tape is shown in **Fig. 2-2-C**.
  - a) When the height is not correct, turn the screw (3) to adjust the height. Then, adjust the 1~3 again.

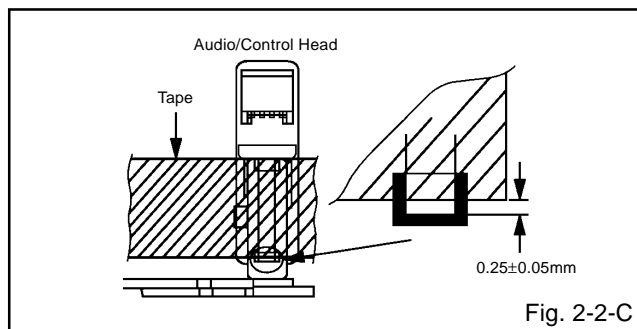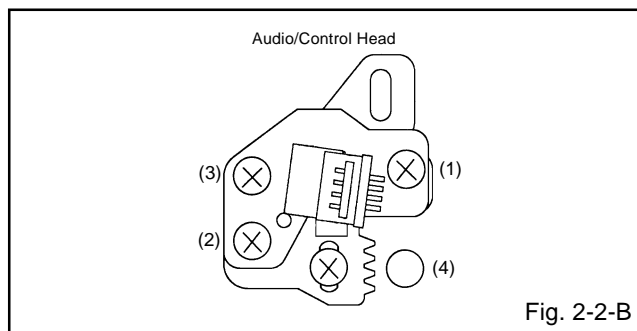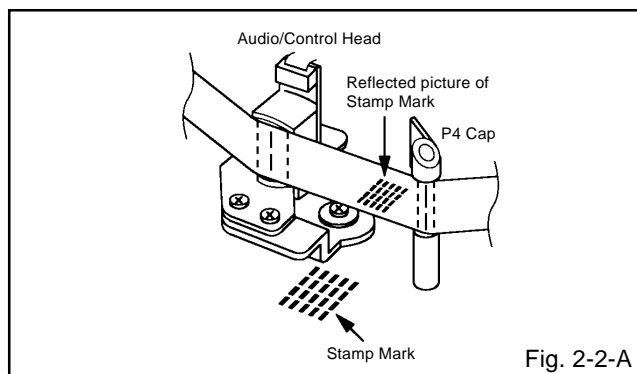

### 2-3: TAPE RUNNING ADJUSTMENT (X VALUE ADJUSTMENT)

1. Confirm and adjust the height of the Reel Disk. **(Refer to item 1-1)**
2. Confirm and adjust the position of the Tension Post. **(Refer to item 1-2)**
3. Adjust the Guide Roller. **(Refer to item 2-1)**
4. Confirm and adjust the Audio/Control Head. **(Refer to item 2-2)**
5. Connect CH-1 of the oscilloscope to **TP3002**, CH-2 to **TP101** and CH-3 to **HOT side of Audio Out Jack**.
6. Playback the VHS Alignment Tape (**JG001S or JG001T**). **(Refer to SERVICING FIXTURE AND TOOLS)**
7. Press and hold the ATR button on the remote control more than 2 seconds to set tracking to center.
8. Set the X Value adjustment driver (**JG153**) to the (4) of **Fig. 2-2-B**. Adjust X value so that the envelope waveform output becomes maximum. Check if the relation between Audio and Envelope waveform becomes (1) or (2) of **Fig. 2-3**.

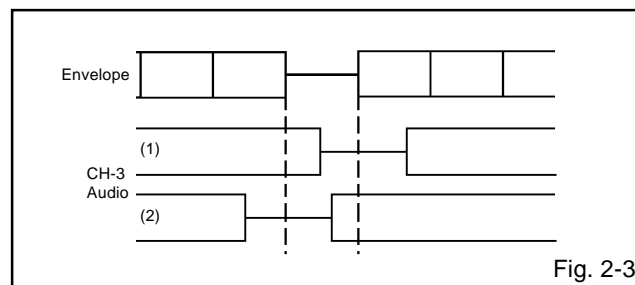


### 2-4: CONFIRM HI-FI AUDIO (Hi-Fi model only)

1. Connect CH-1 of the oscilloscope to **TP101** and CH-2 to the **Hi-Fi Audio Out Jack**.
2. Playback the VHS Alignment Tape (**JG001P or JG001Q**). **(Refer to SERVICING FIXTURE AND TOOLS)**
3. Press and hold the ATR button on the remote control more than 2 seconds to set tracking to center.
4. Press the Tracking Up button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
5. Press and hold the ATR button on the remote control more than 2 seconds to set tracking to center.
6. Press the Tracking Down button and count number of steps which the audio output is changed from Hi-Fi (10KHz) to MONO (6KHz).
7. If the difference are more than 3 steps, set the X Value adjustment driver (**JG153**) to (4) of **Fig. 2-2-B**. Change the X Value and adjust it so that the value becomes within 2 steps.

# MECHANICAL ADJUSTMENTS

## 3. MECHANISM ADJUSTMENT PARTS LOCATION GUIDE

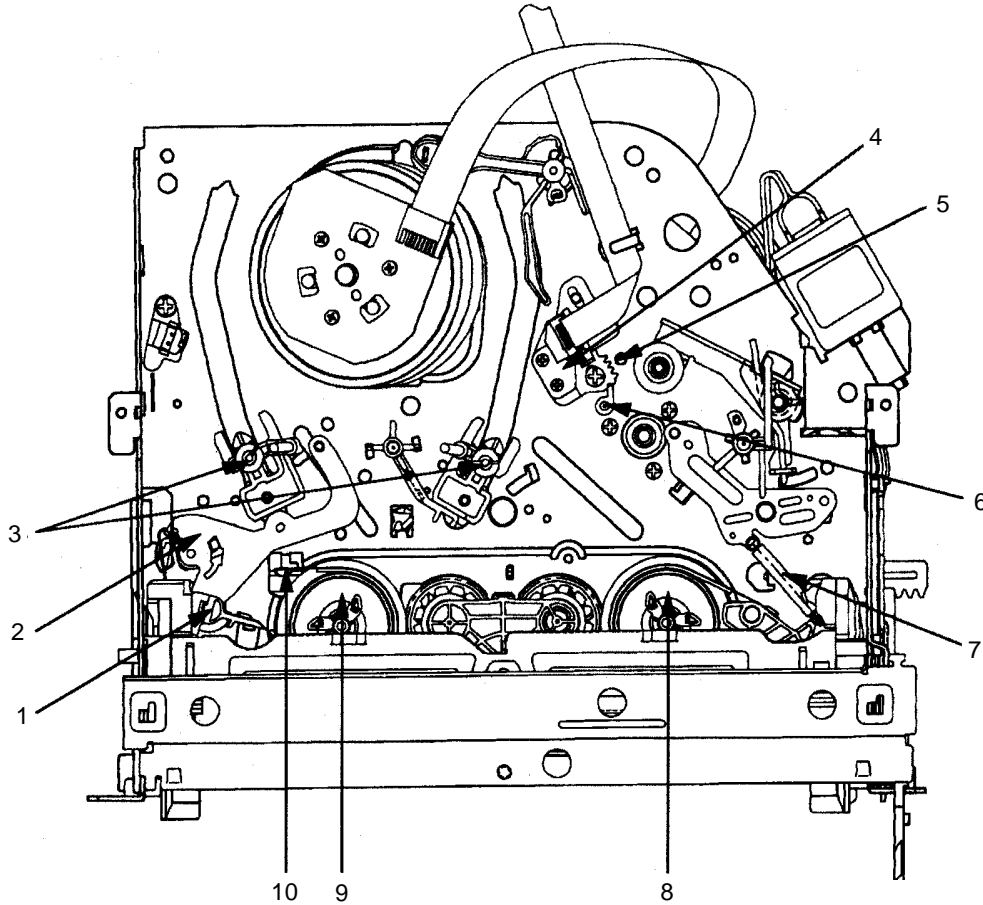

- |                                   |  |
|-----------------------------------|--|
| 1. Tension Connect                | 6. P4 Post   |
| 2. Tension Arm                    | 7. T Brake Spring                                  |
| 3. Guide Roller                   | 8. T Reel  |
| 4. Audio/Control Head             | 9. S Reel  |
| 5. X value adjustment driver hole | 10. Adjusting section for the Tension Arm position |

# ELECTRICAL ADJUSTMENTS

Read and perform this adjustment when repairing the circuits or replacing electrical parts or PCB assemblies.

## 1. BASIC ADJUSTMENT

### CAUTION

- When you exchange IC and Transistor for a heat sink, apply the silicon grease (**YG6260M**) on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

### 1-1: PG SHIFTER



#### CONDITIONS

MODE-PLAYBACK

Input Signal-Alignment Tape (**JG001P**)


#### INSTRUCTIONS

- Connect CH-1 on the oscilloscope to **TP3002** and CH-2 to **TP8001**.
- Playback the alignment tape. (**JG001P**)
- Press and hold the Tracking-Auto button on the remote control more than 2 seconds to set tracking to center.
- Press both CH UP button on the set and the STOP button on the set for more than 2 seconds.

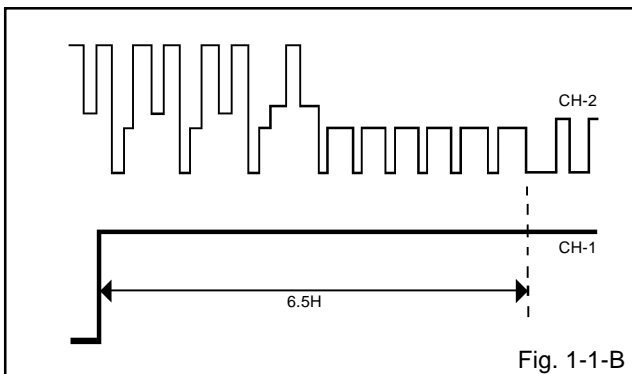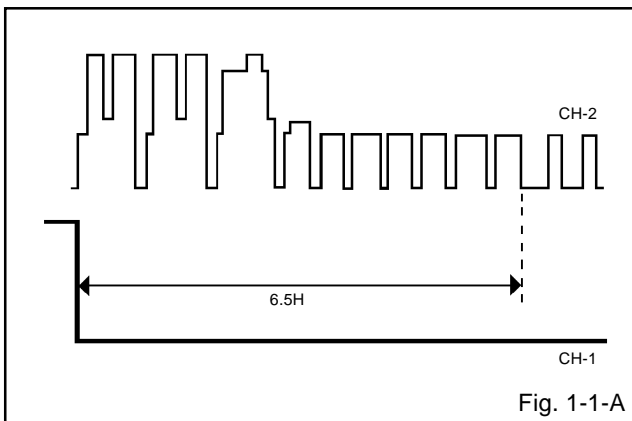


# ELECTRICAL ADJUSTMENTS


## 2. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

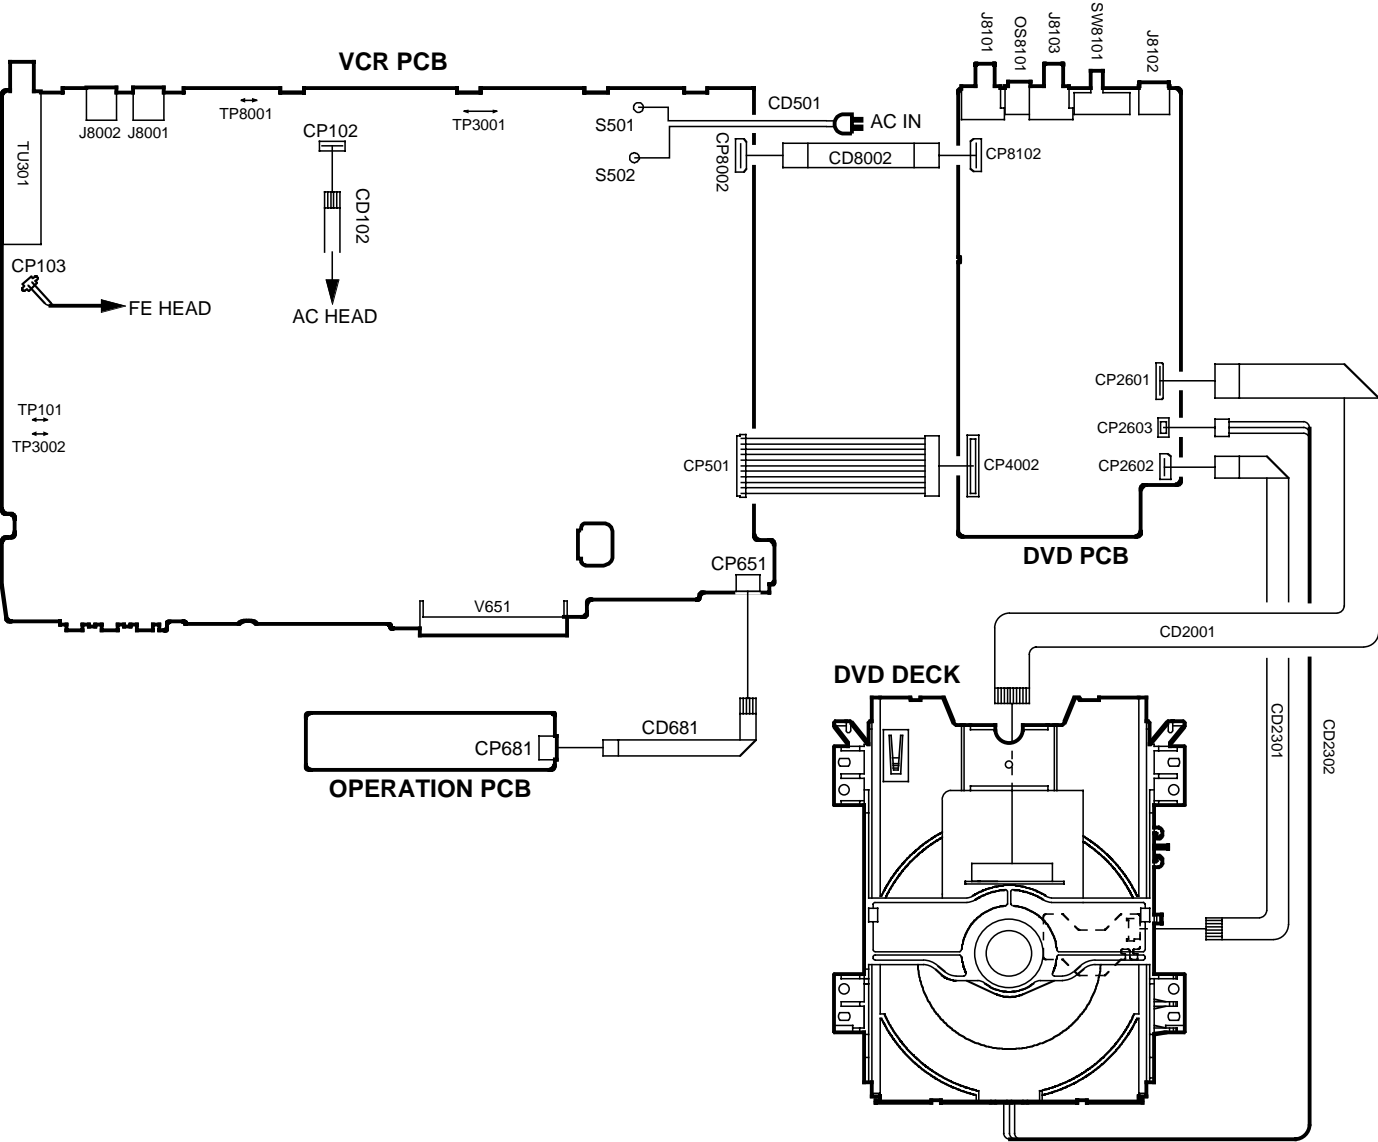

# DVD BLOCK DIAGRAM

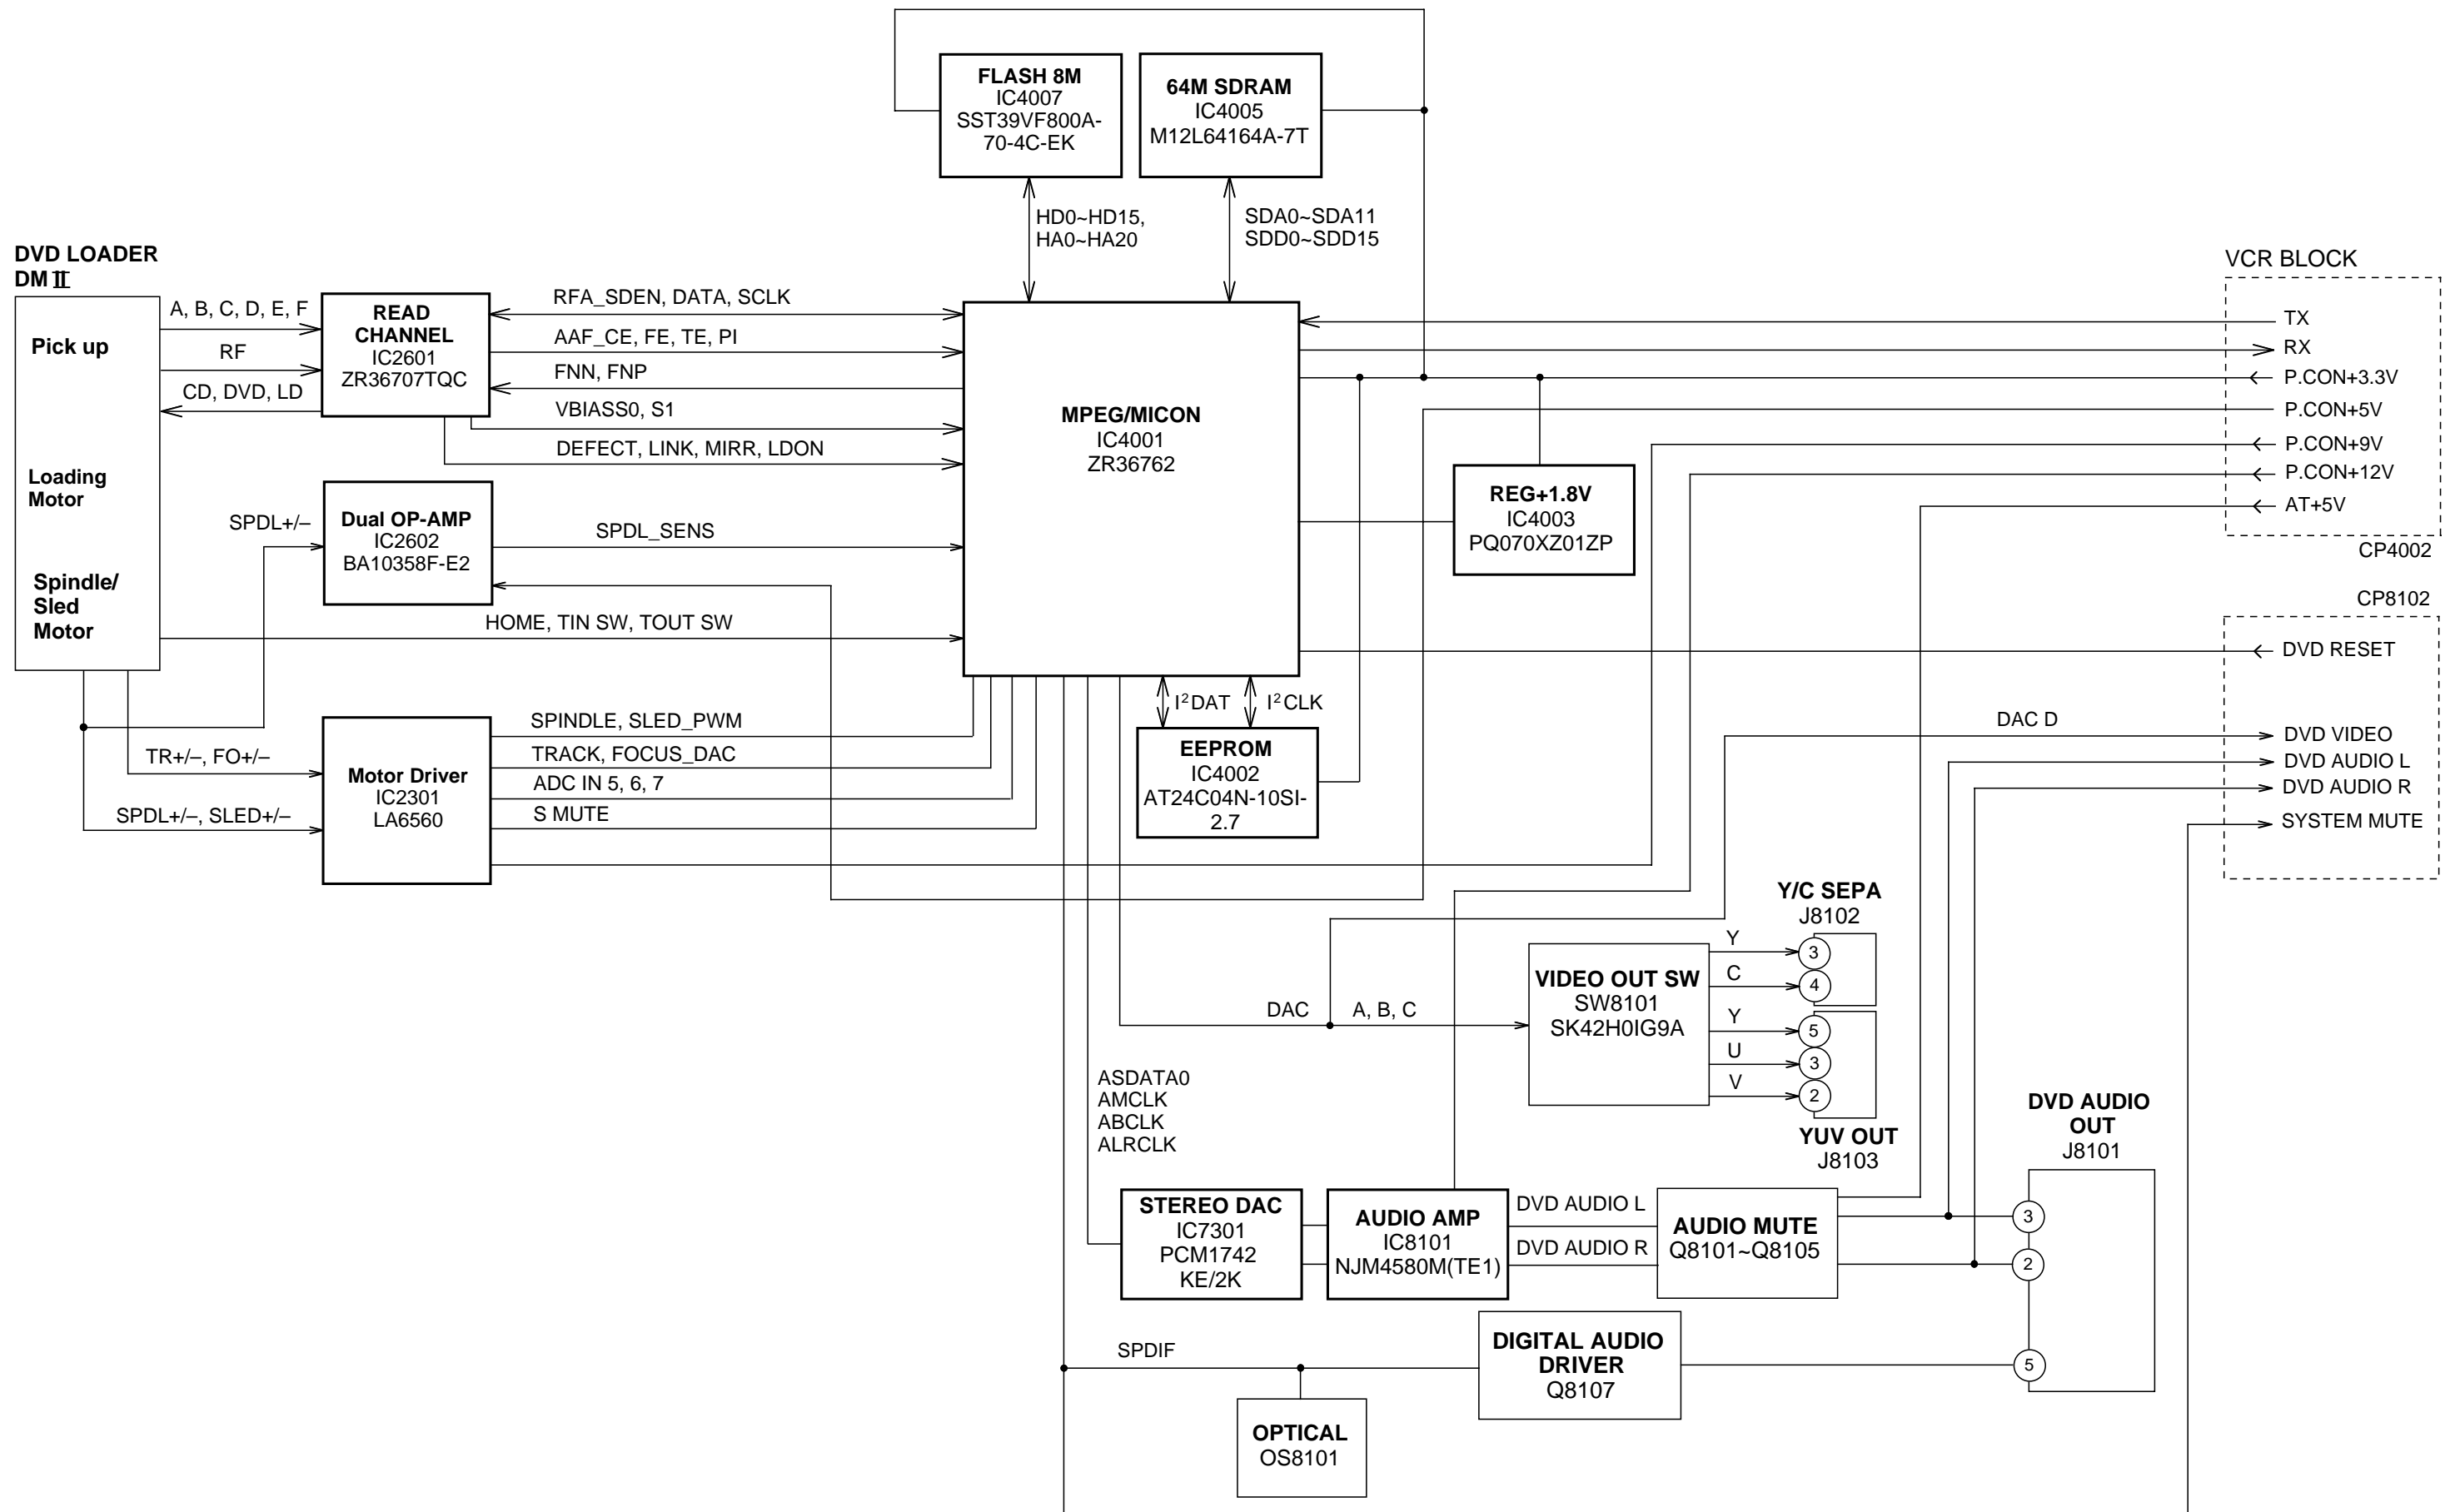


# Y/C/AUDIO/CCD/HEAD AMP BLOCK DIAGRAM

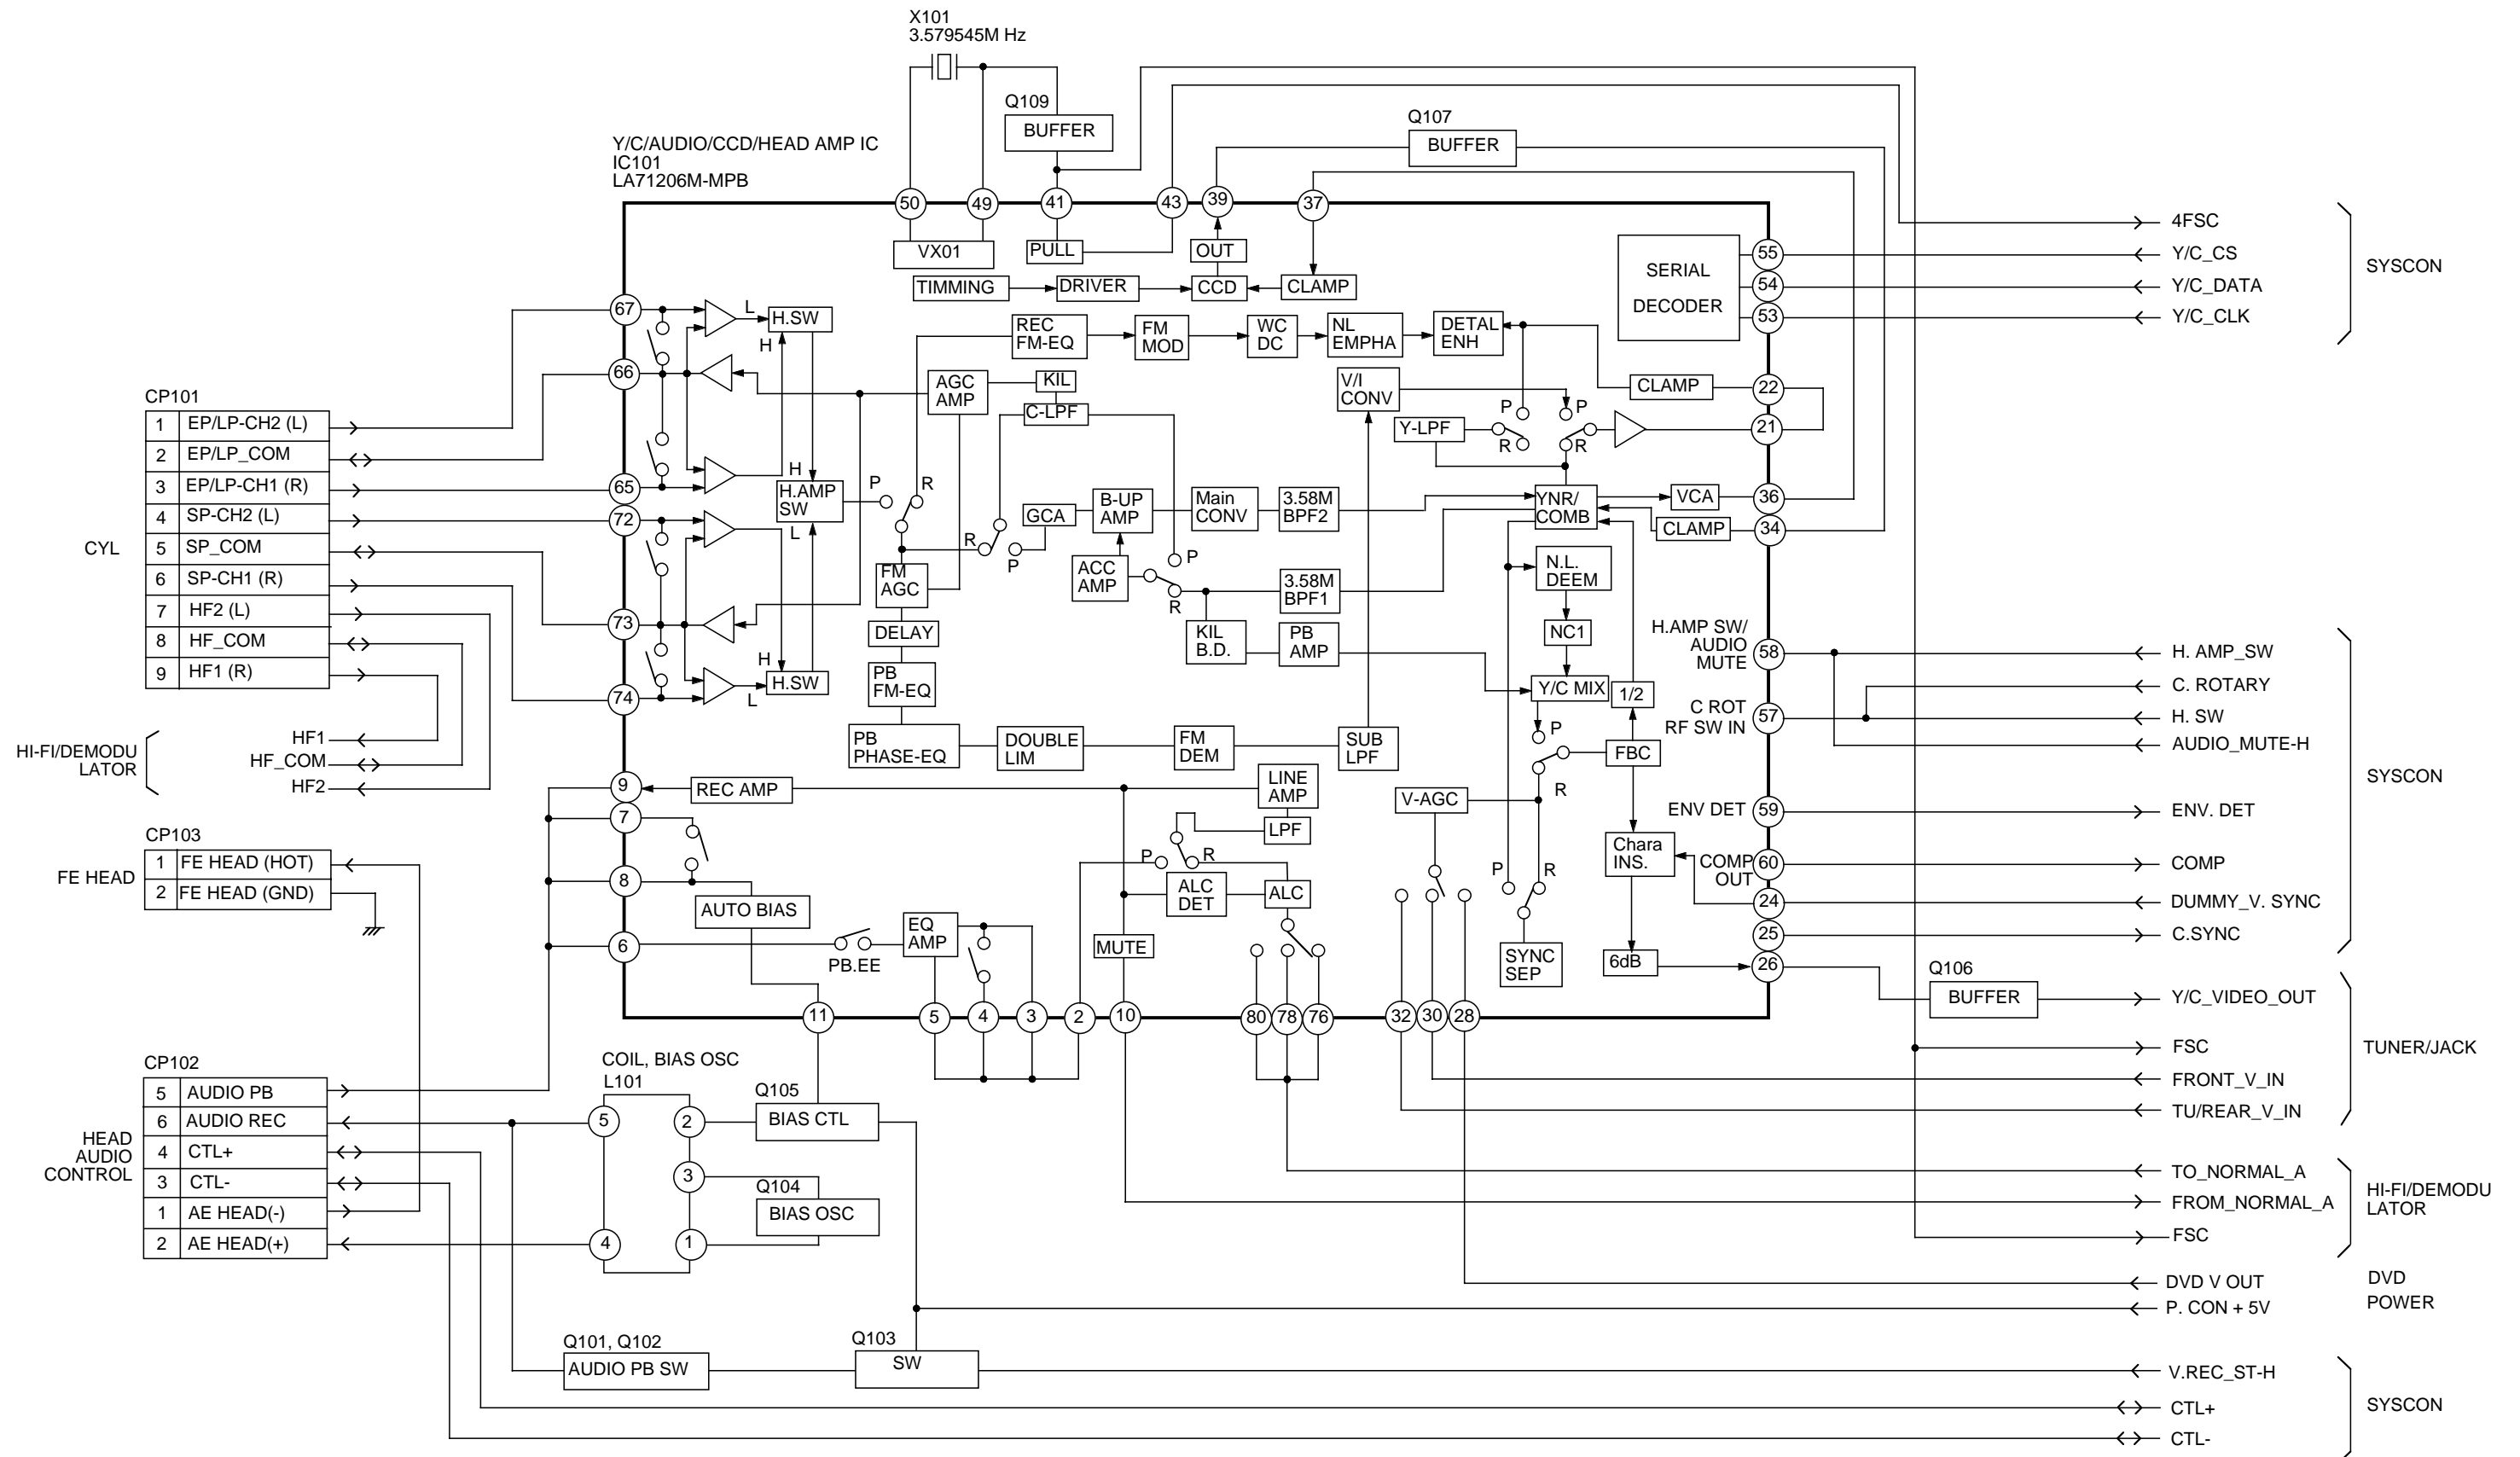





# SYSCON BLOCK DIAGRAM

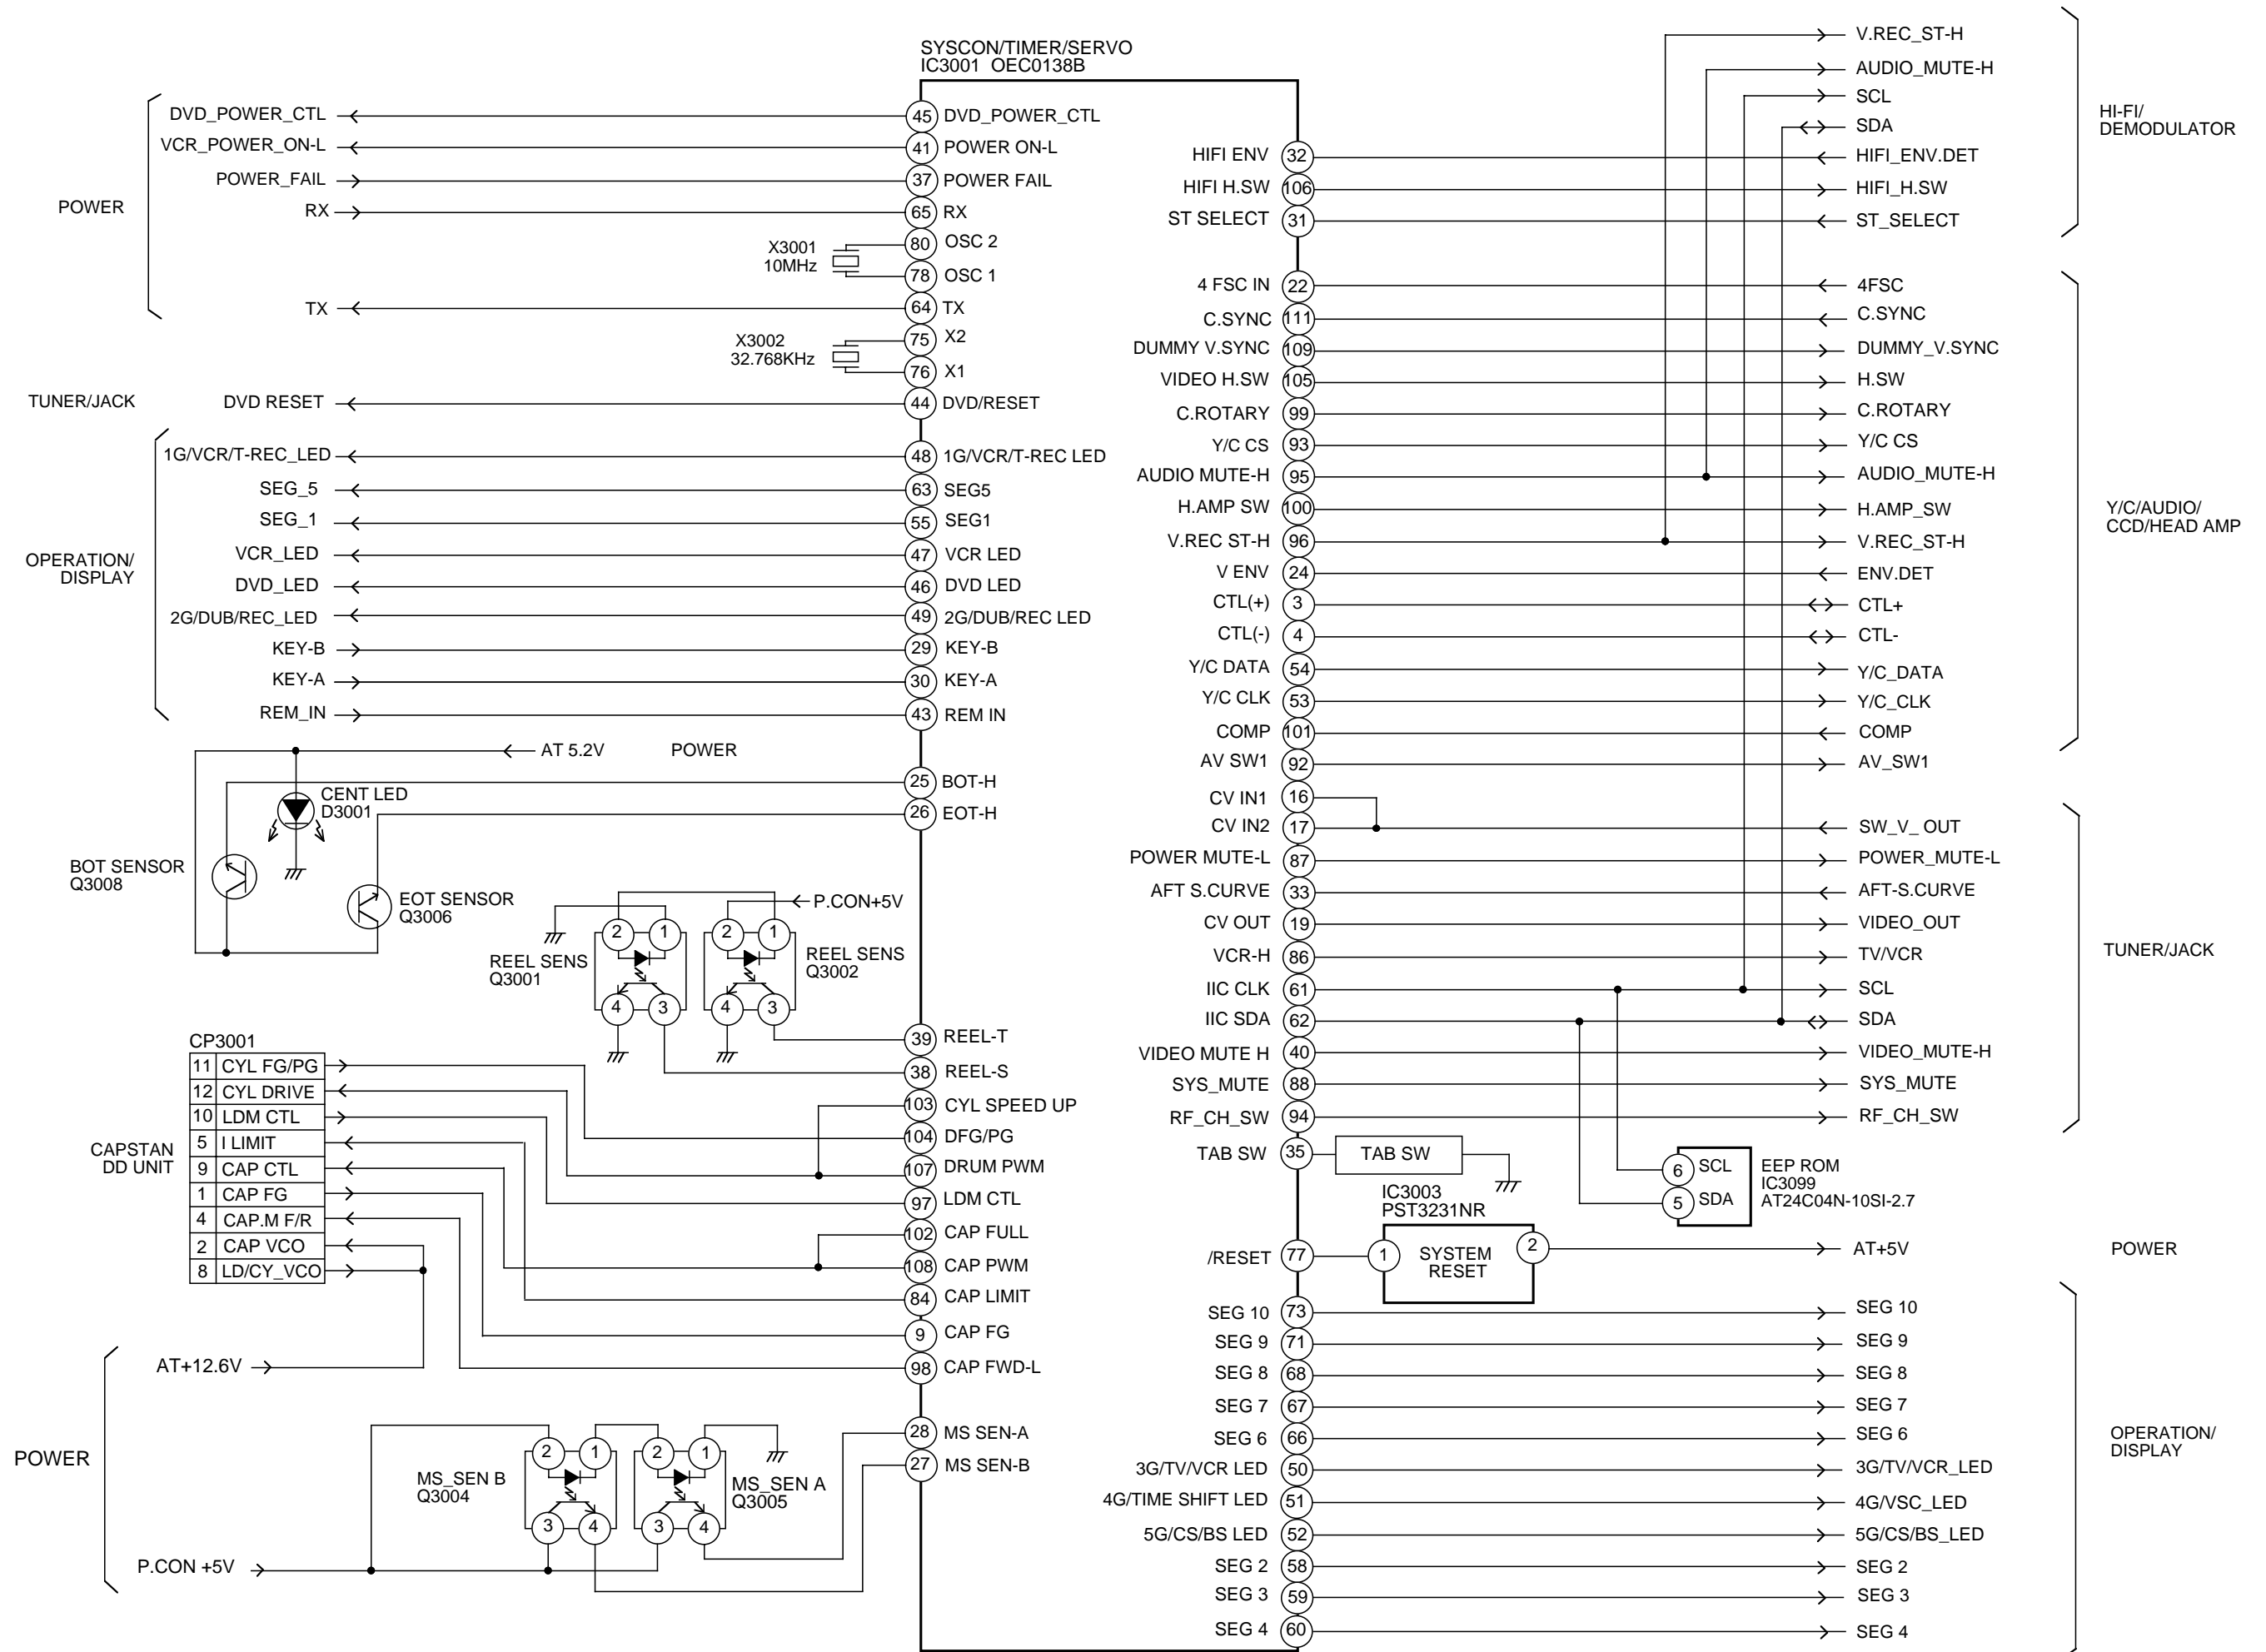


# OPERATION/DISPLAY BLOCK DIAGRAM

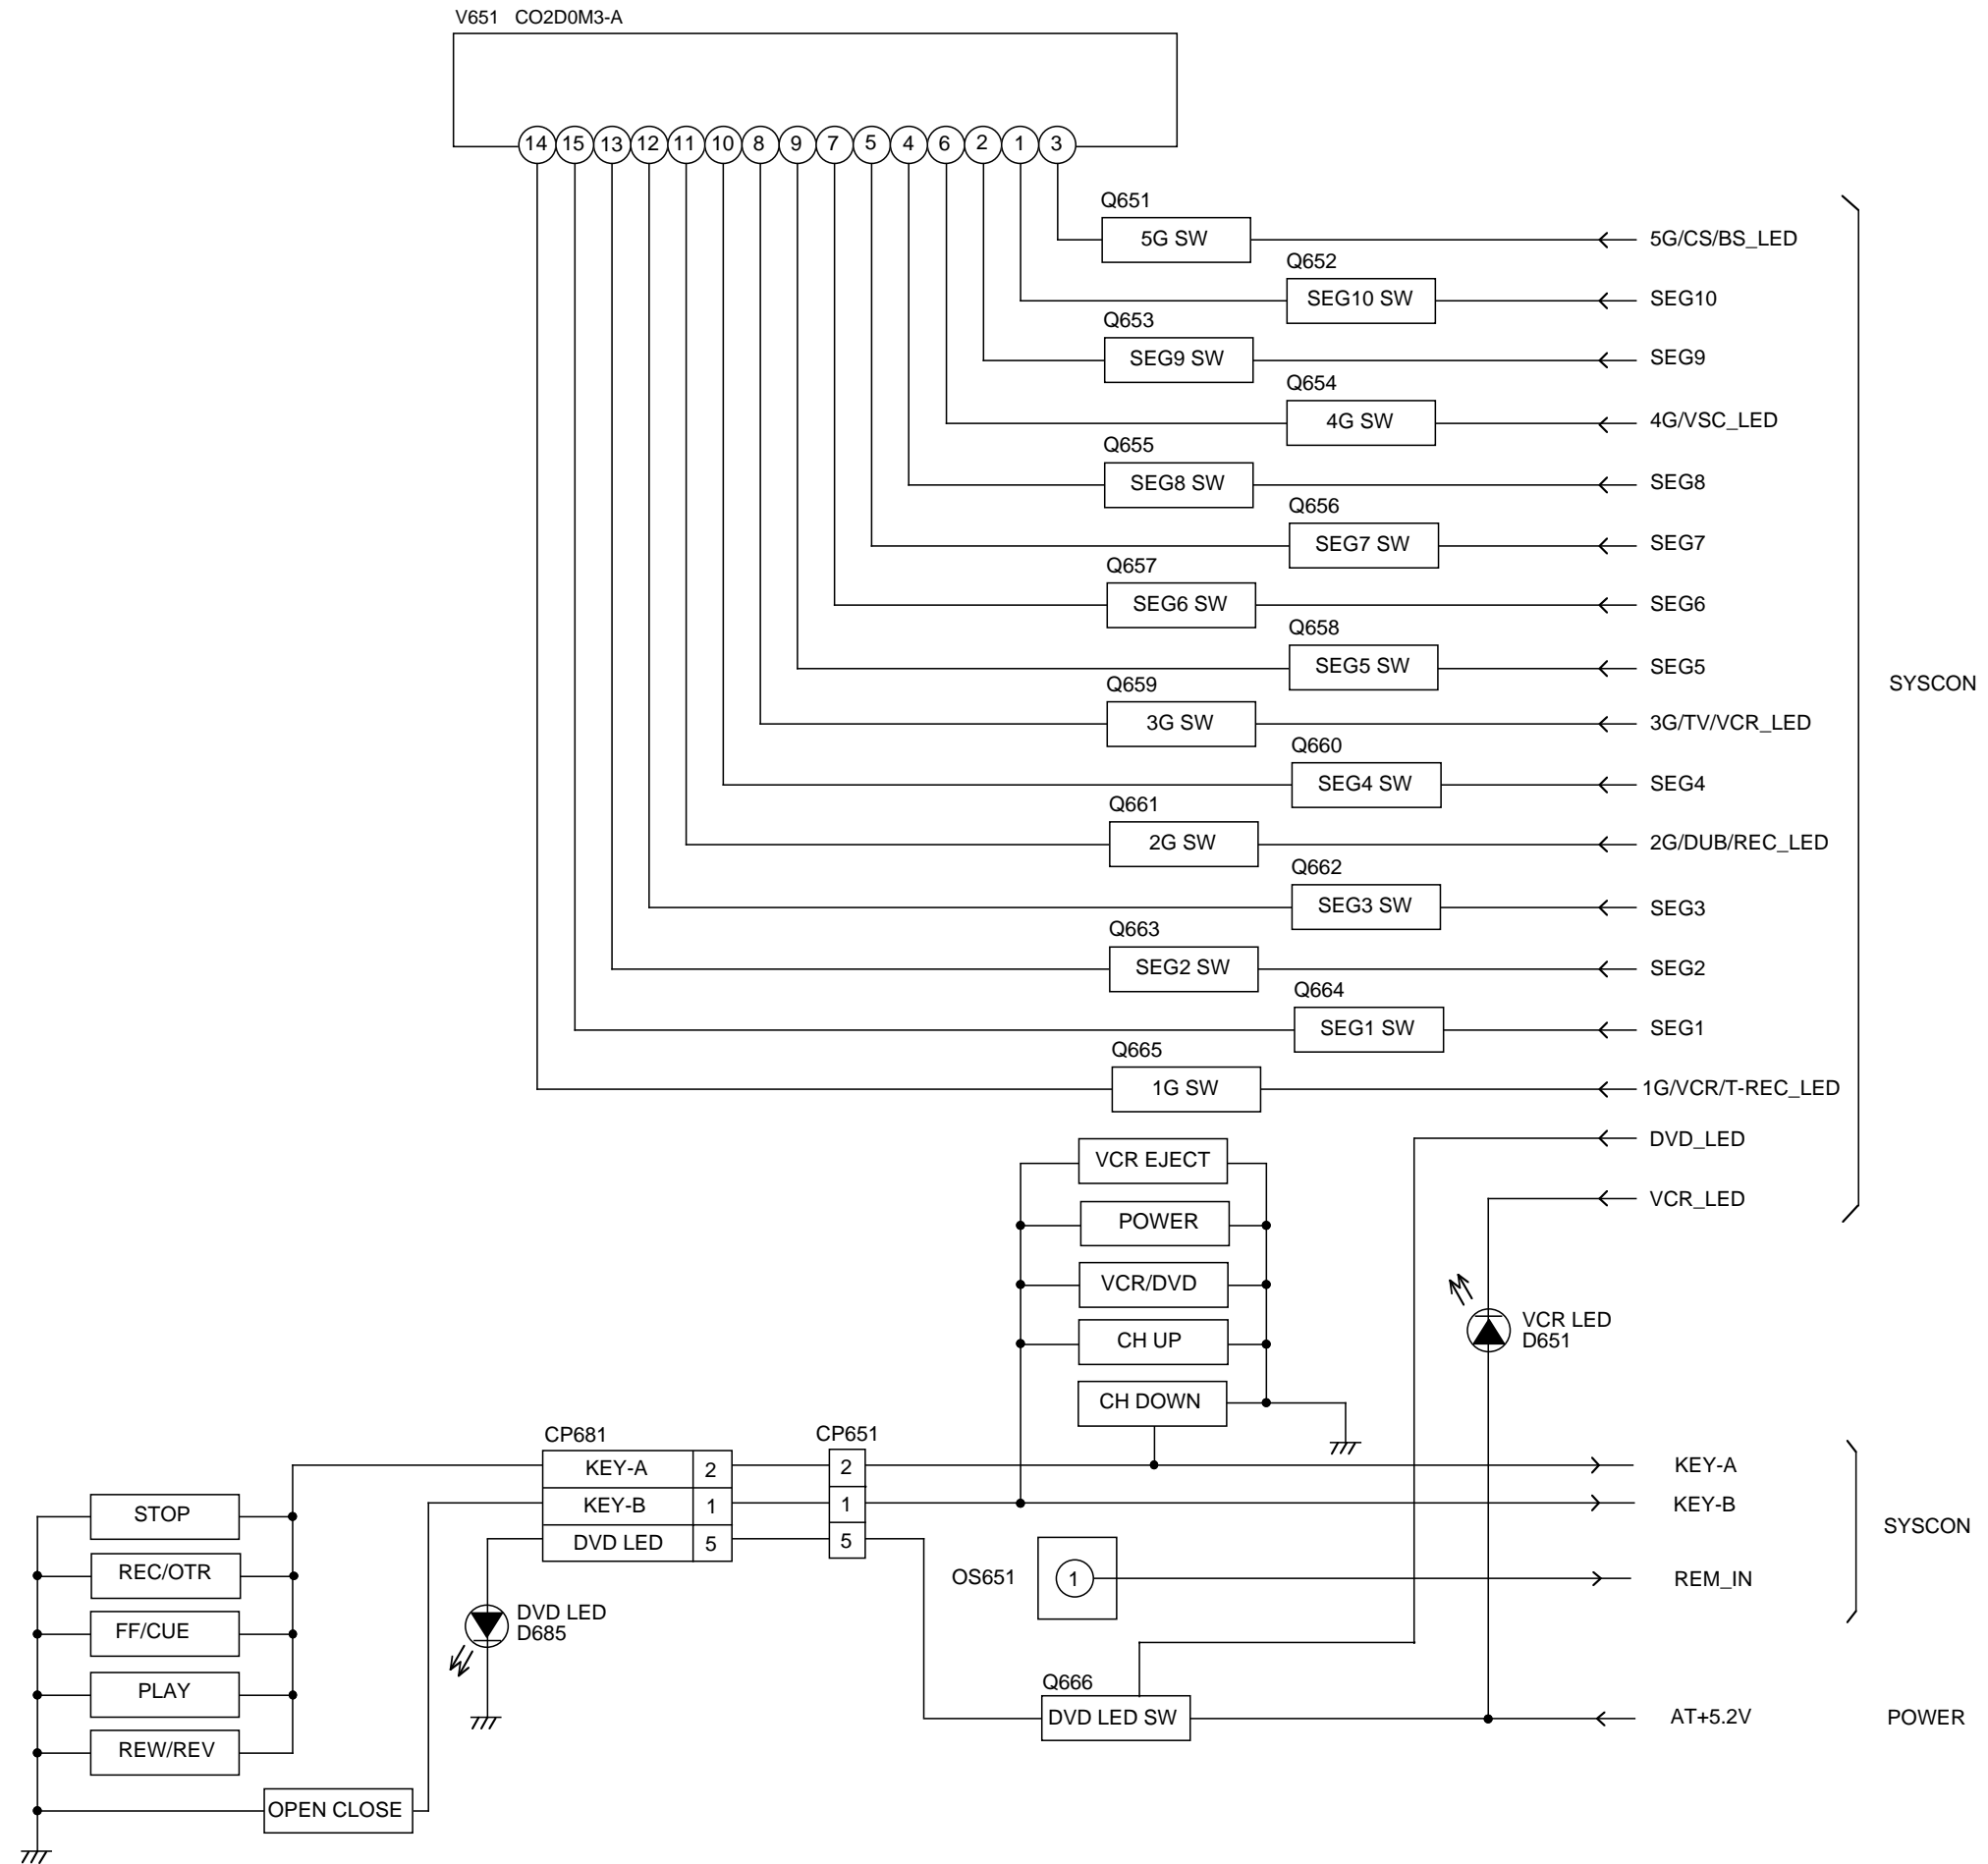


# HI-FI/DEMODULATOR BLOCK DIAGRAM

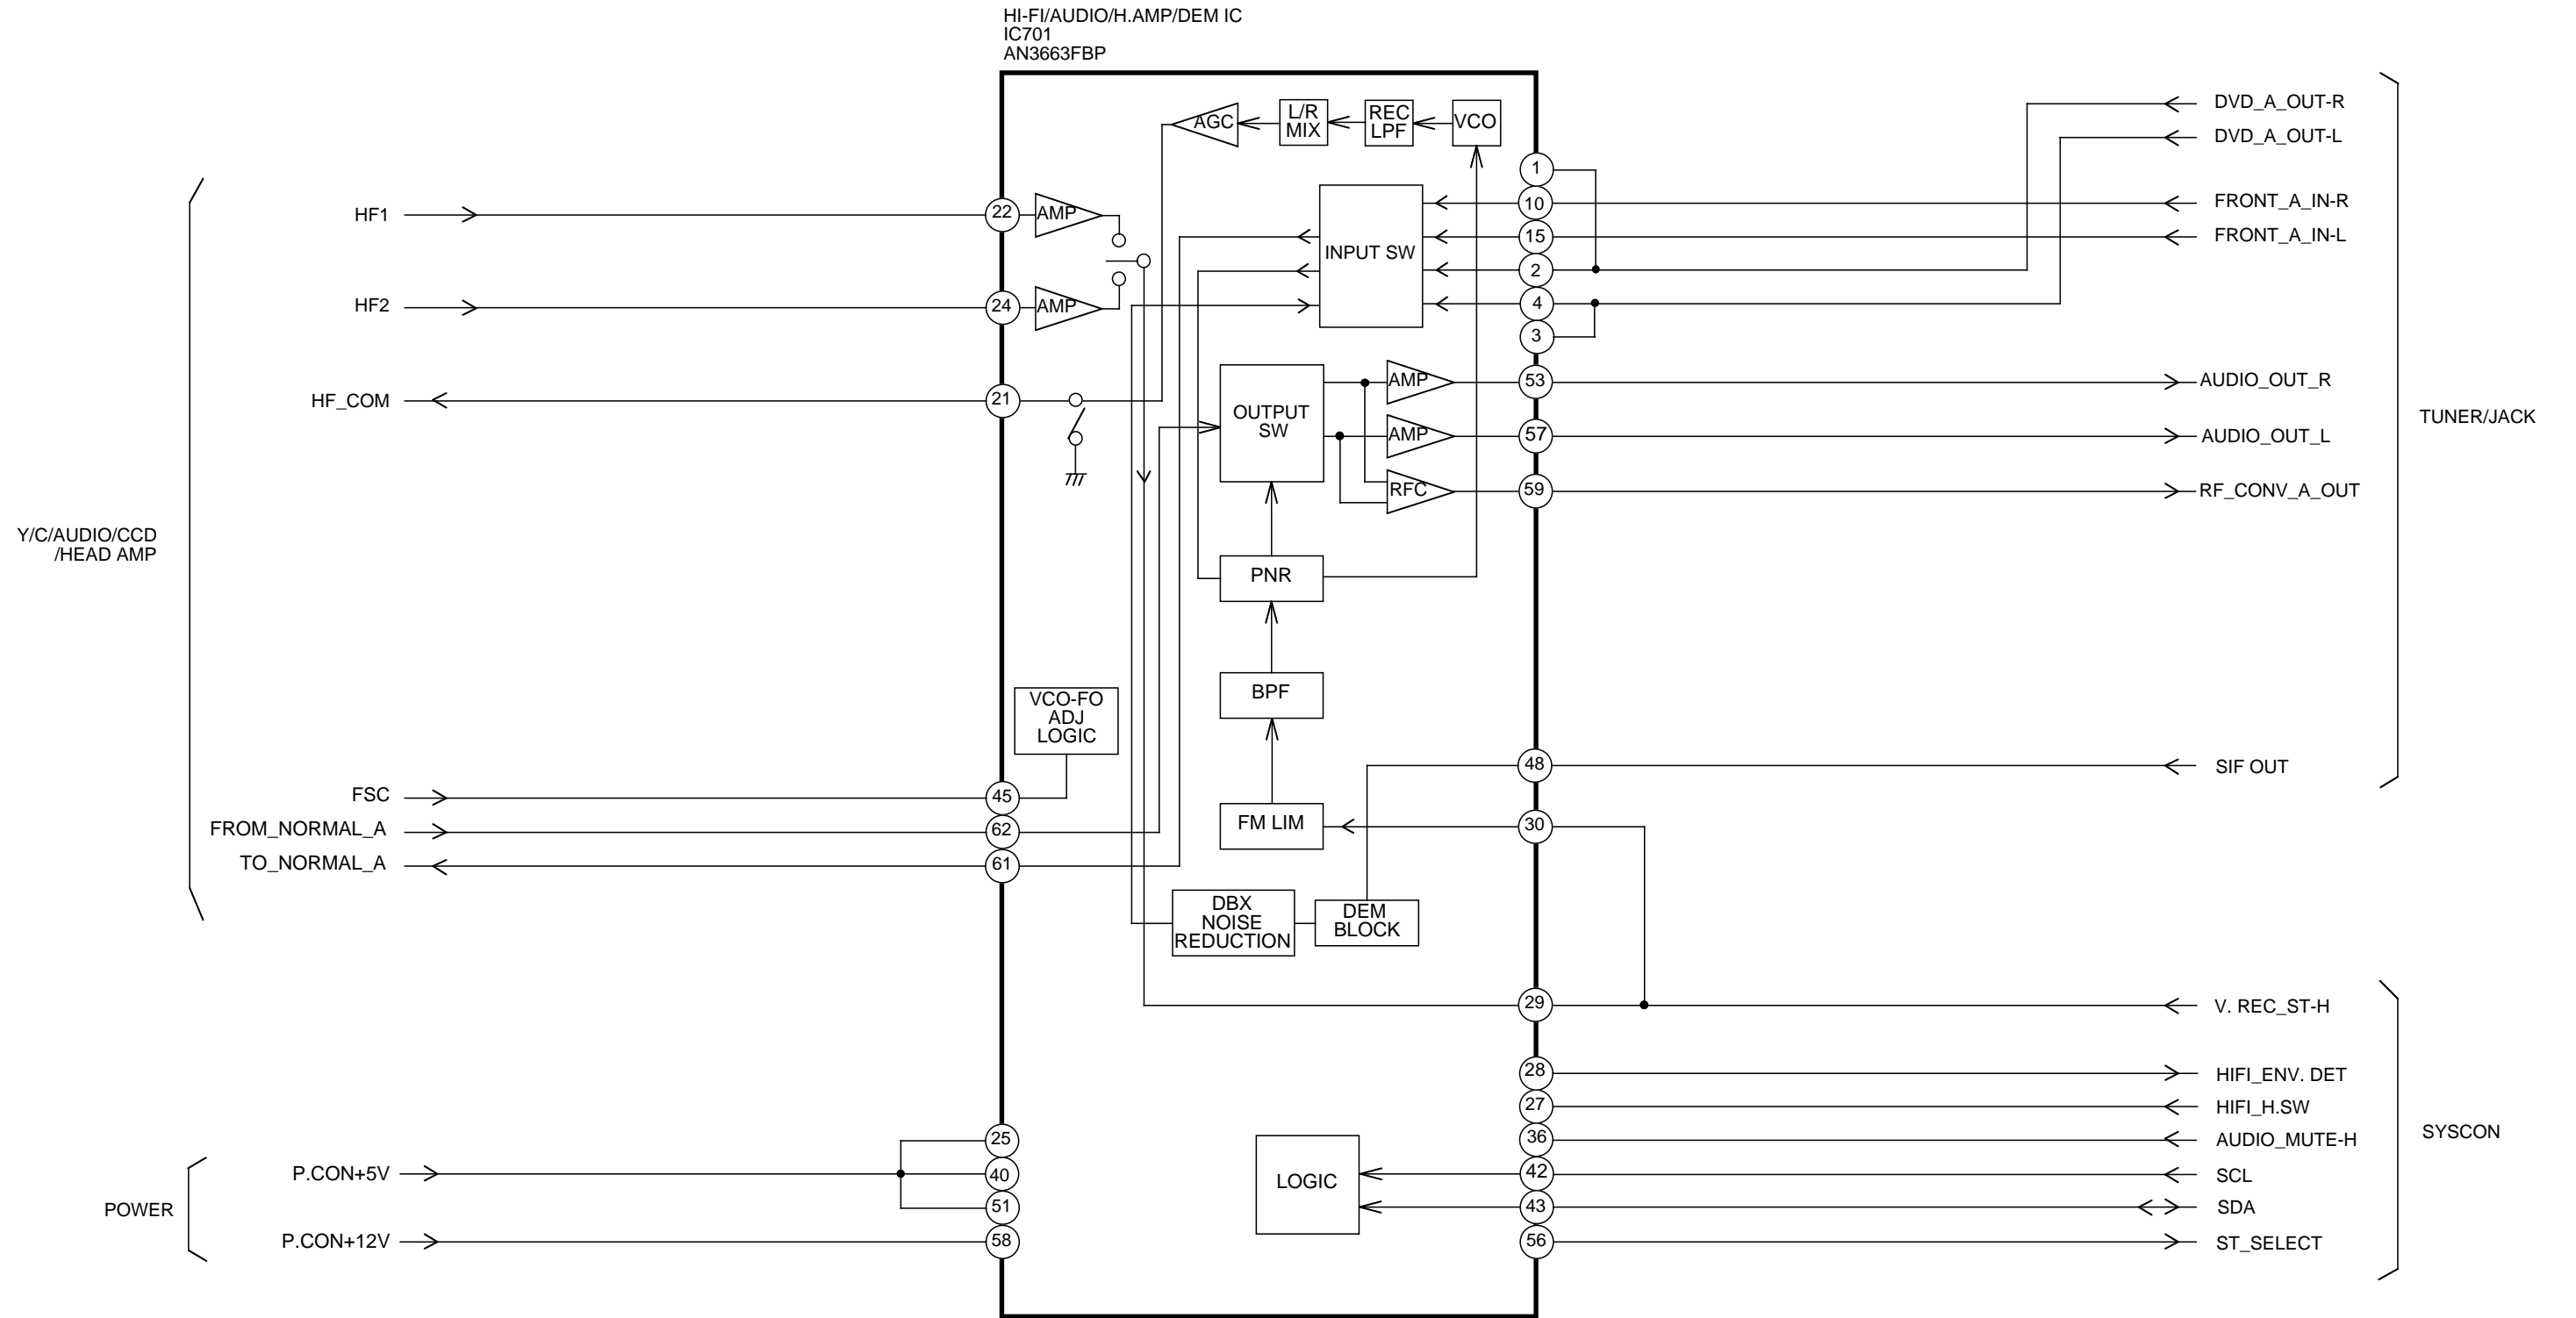

# TUNER/JACK BLOCK DIAGRAM

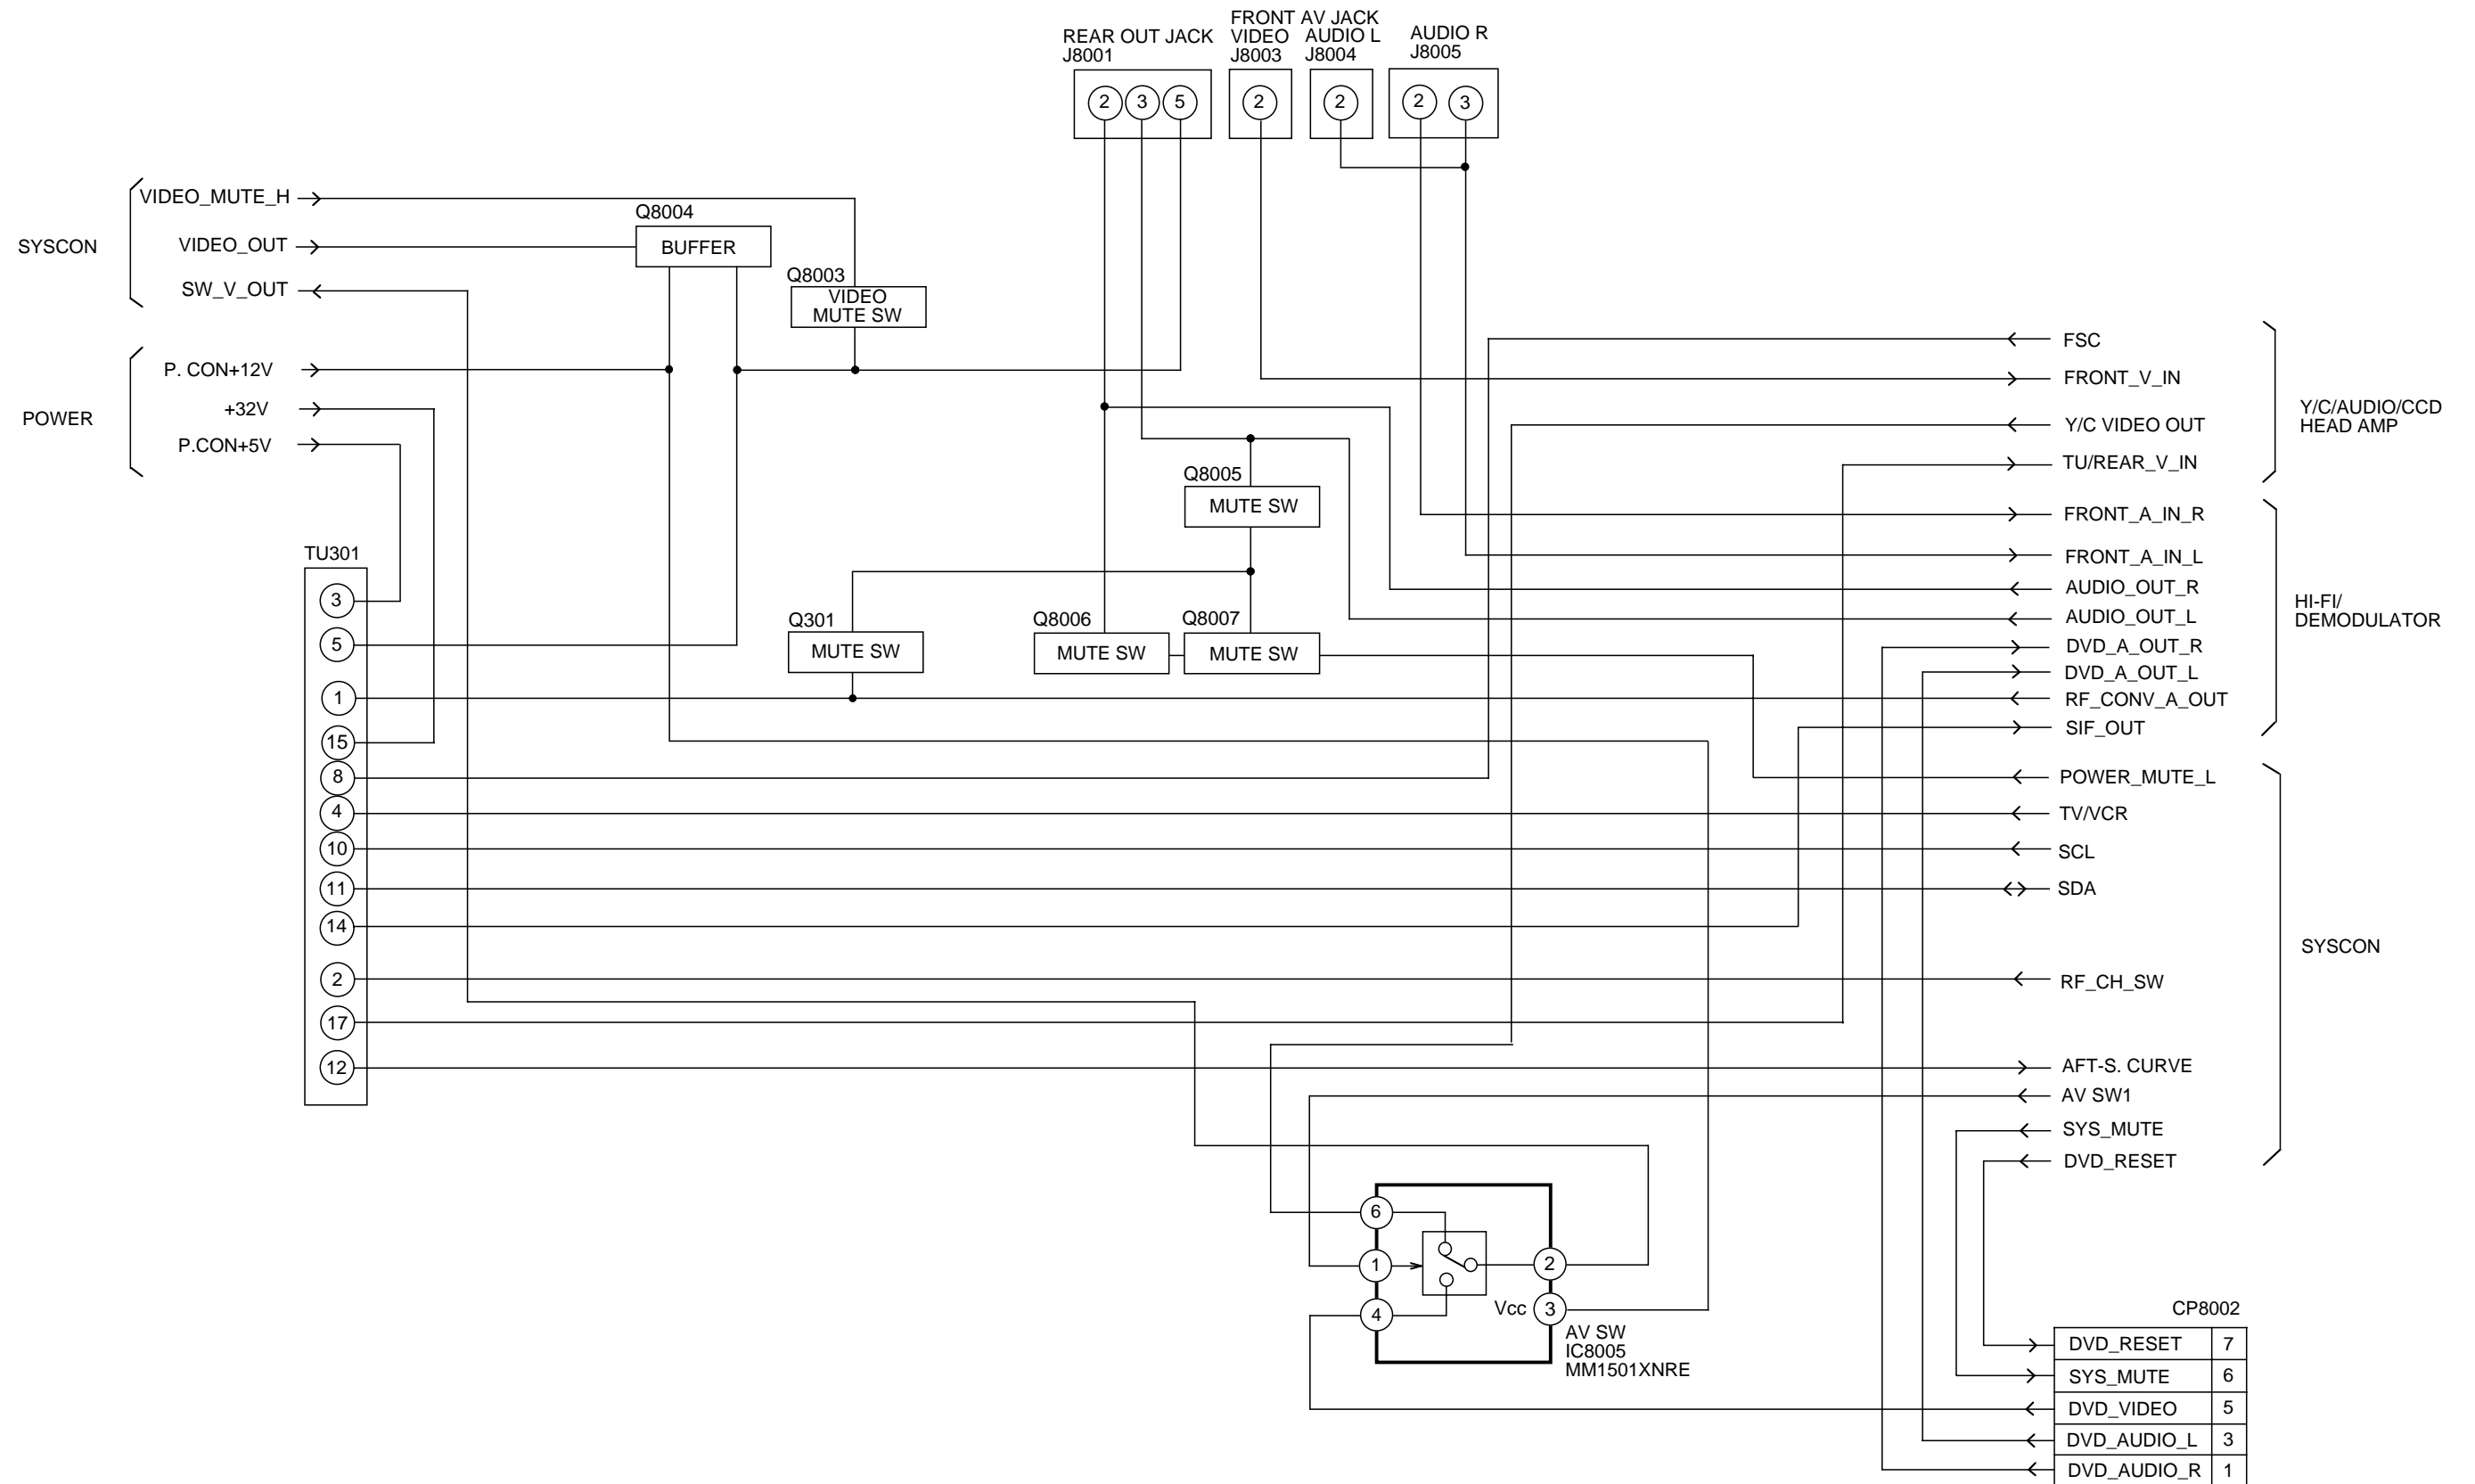



# POWER BLOCK DIAGRAM

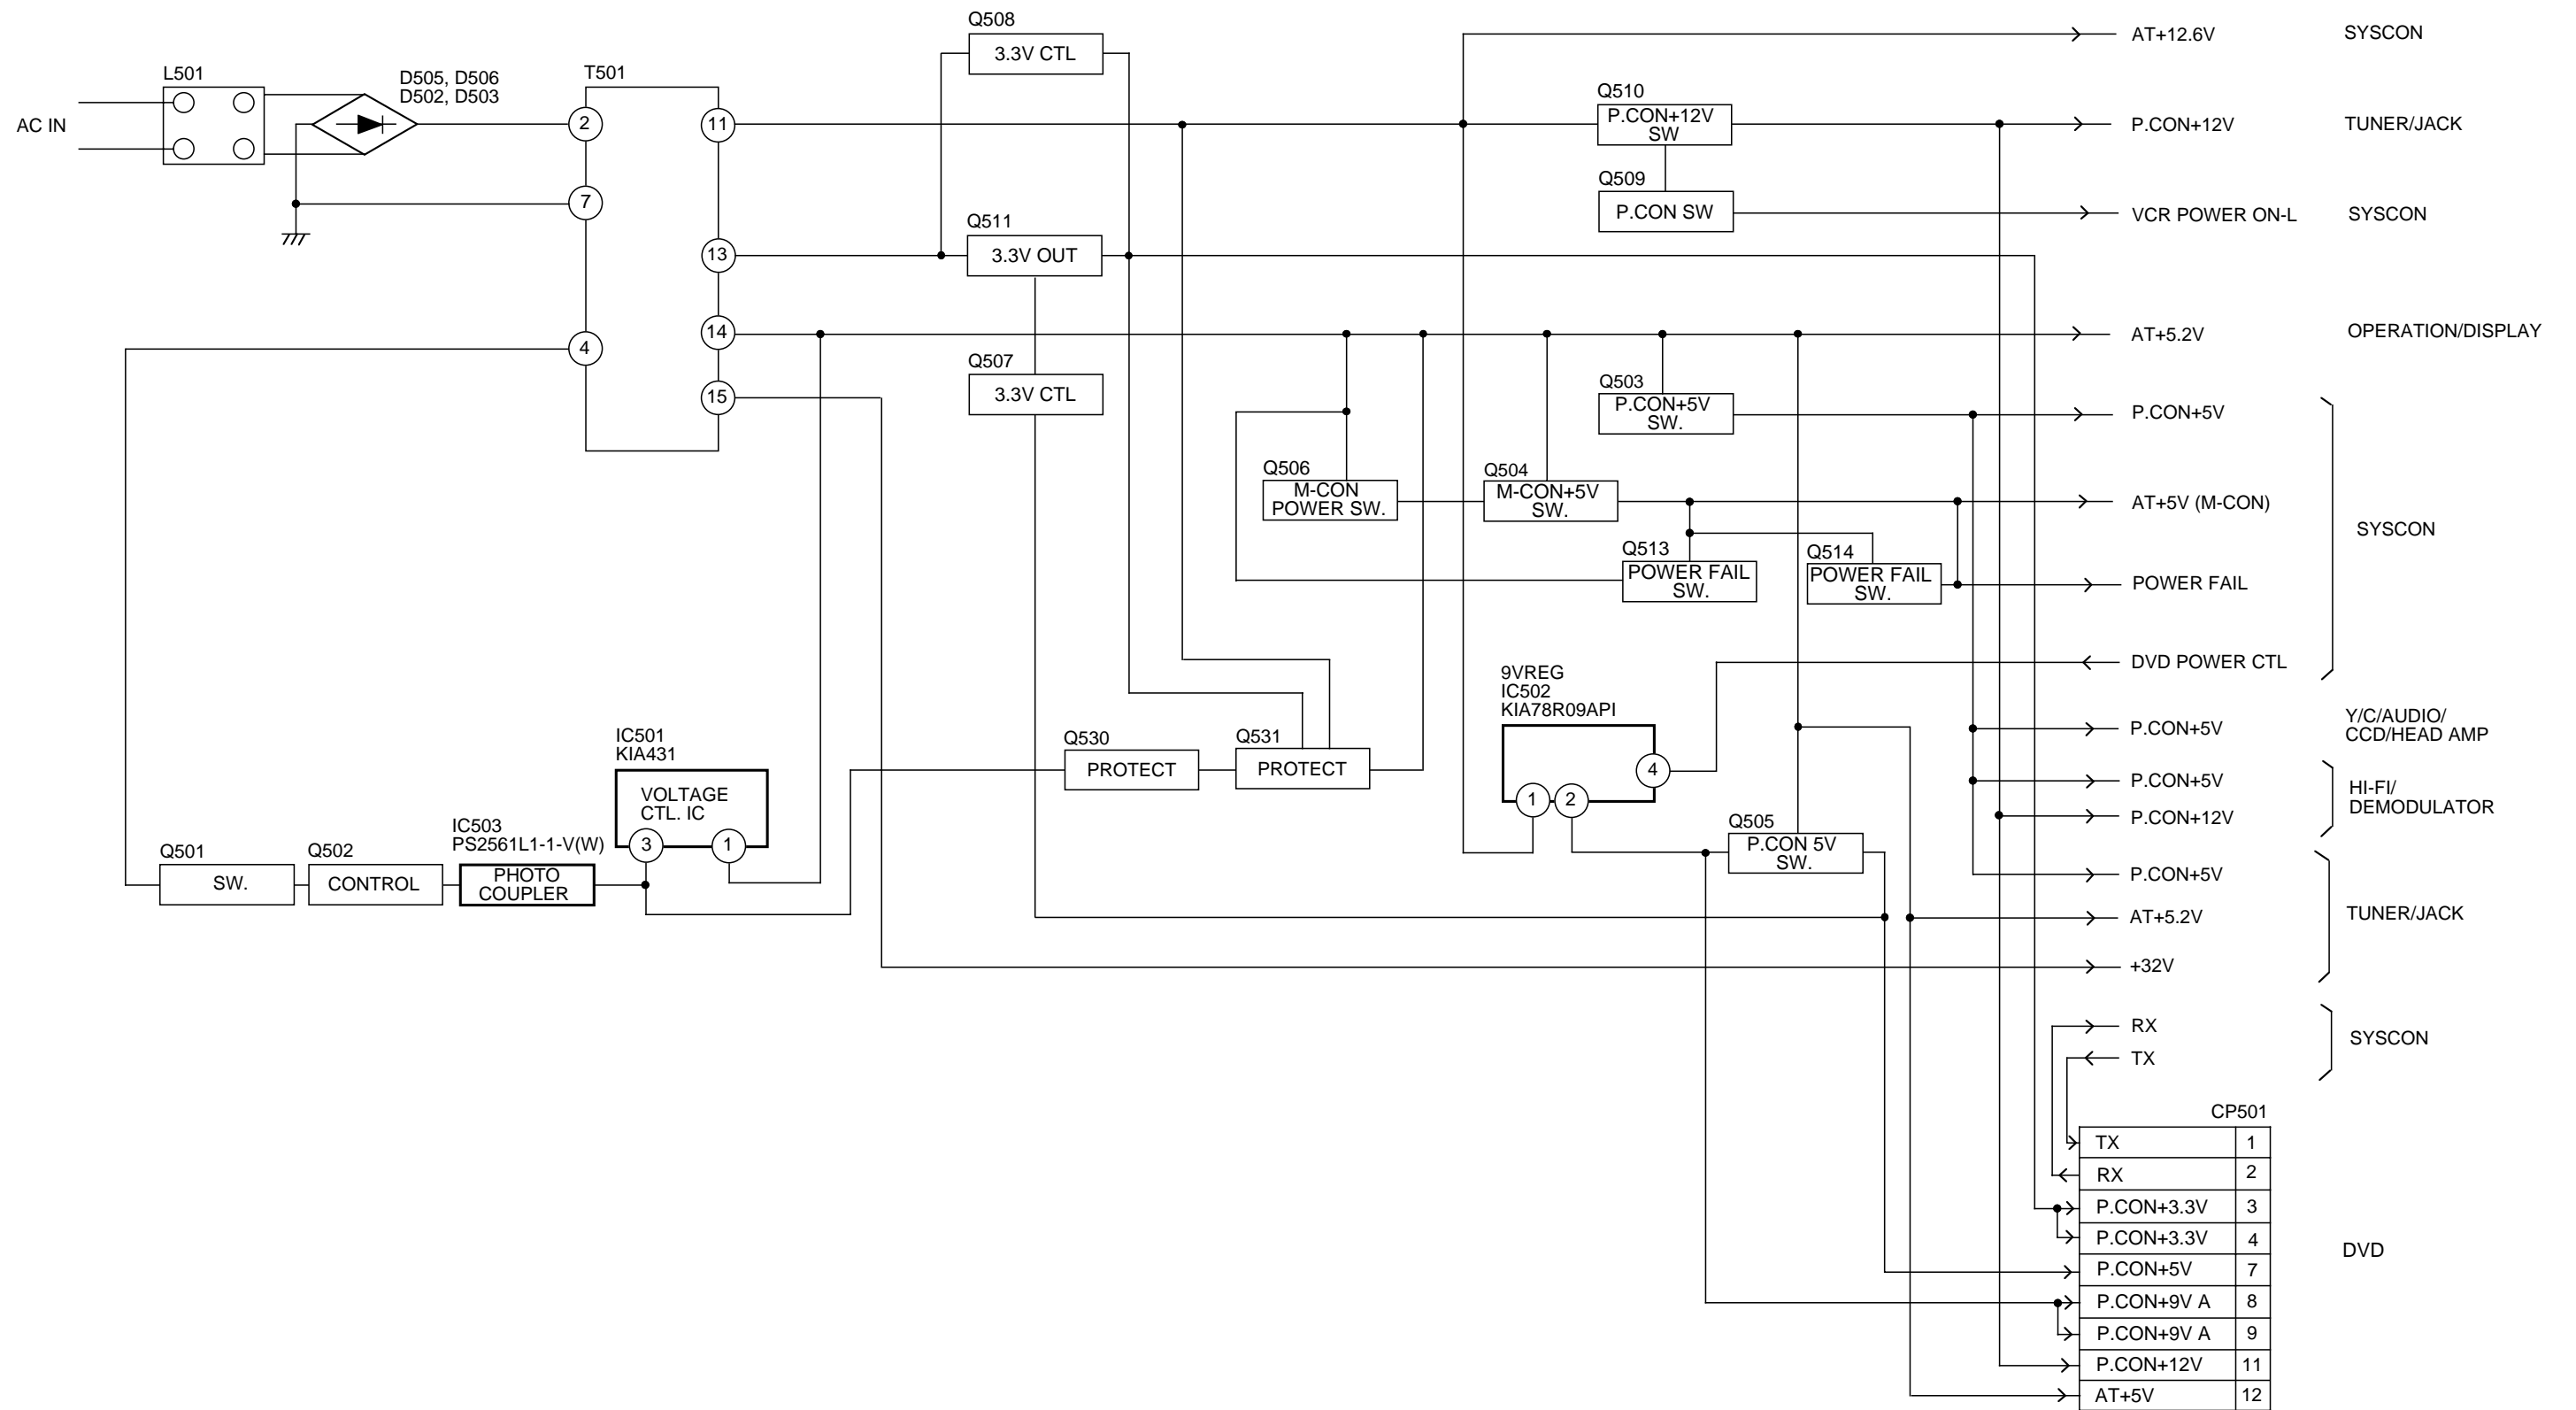




**PRINTED CIRCUIT BOARDS**  
**VCR (INSERTED PARTS)**  
**SOLDER SIDE**

**OPERATION**  
**SOLDER SIDE**

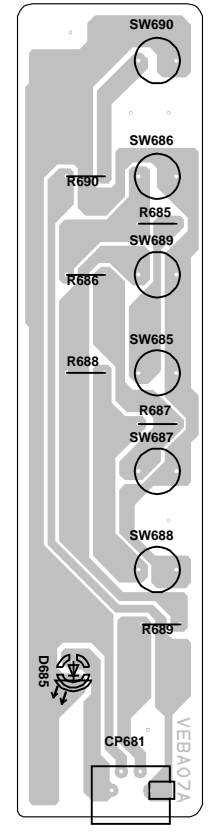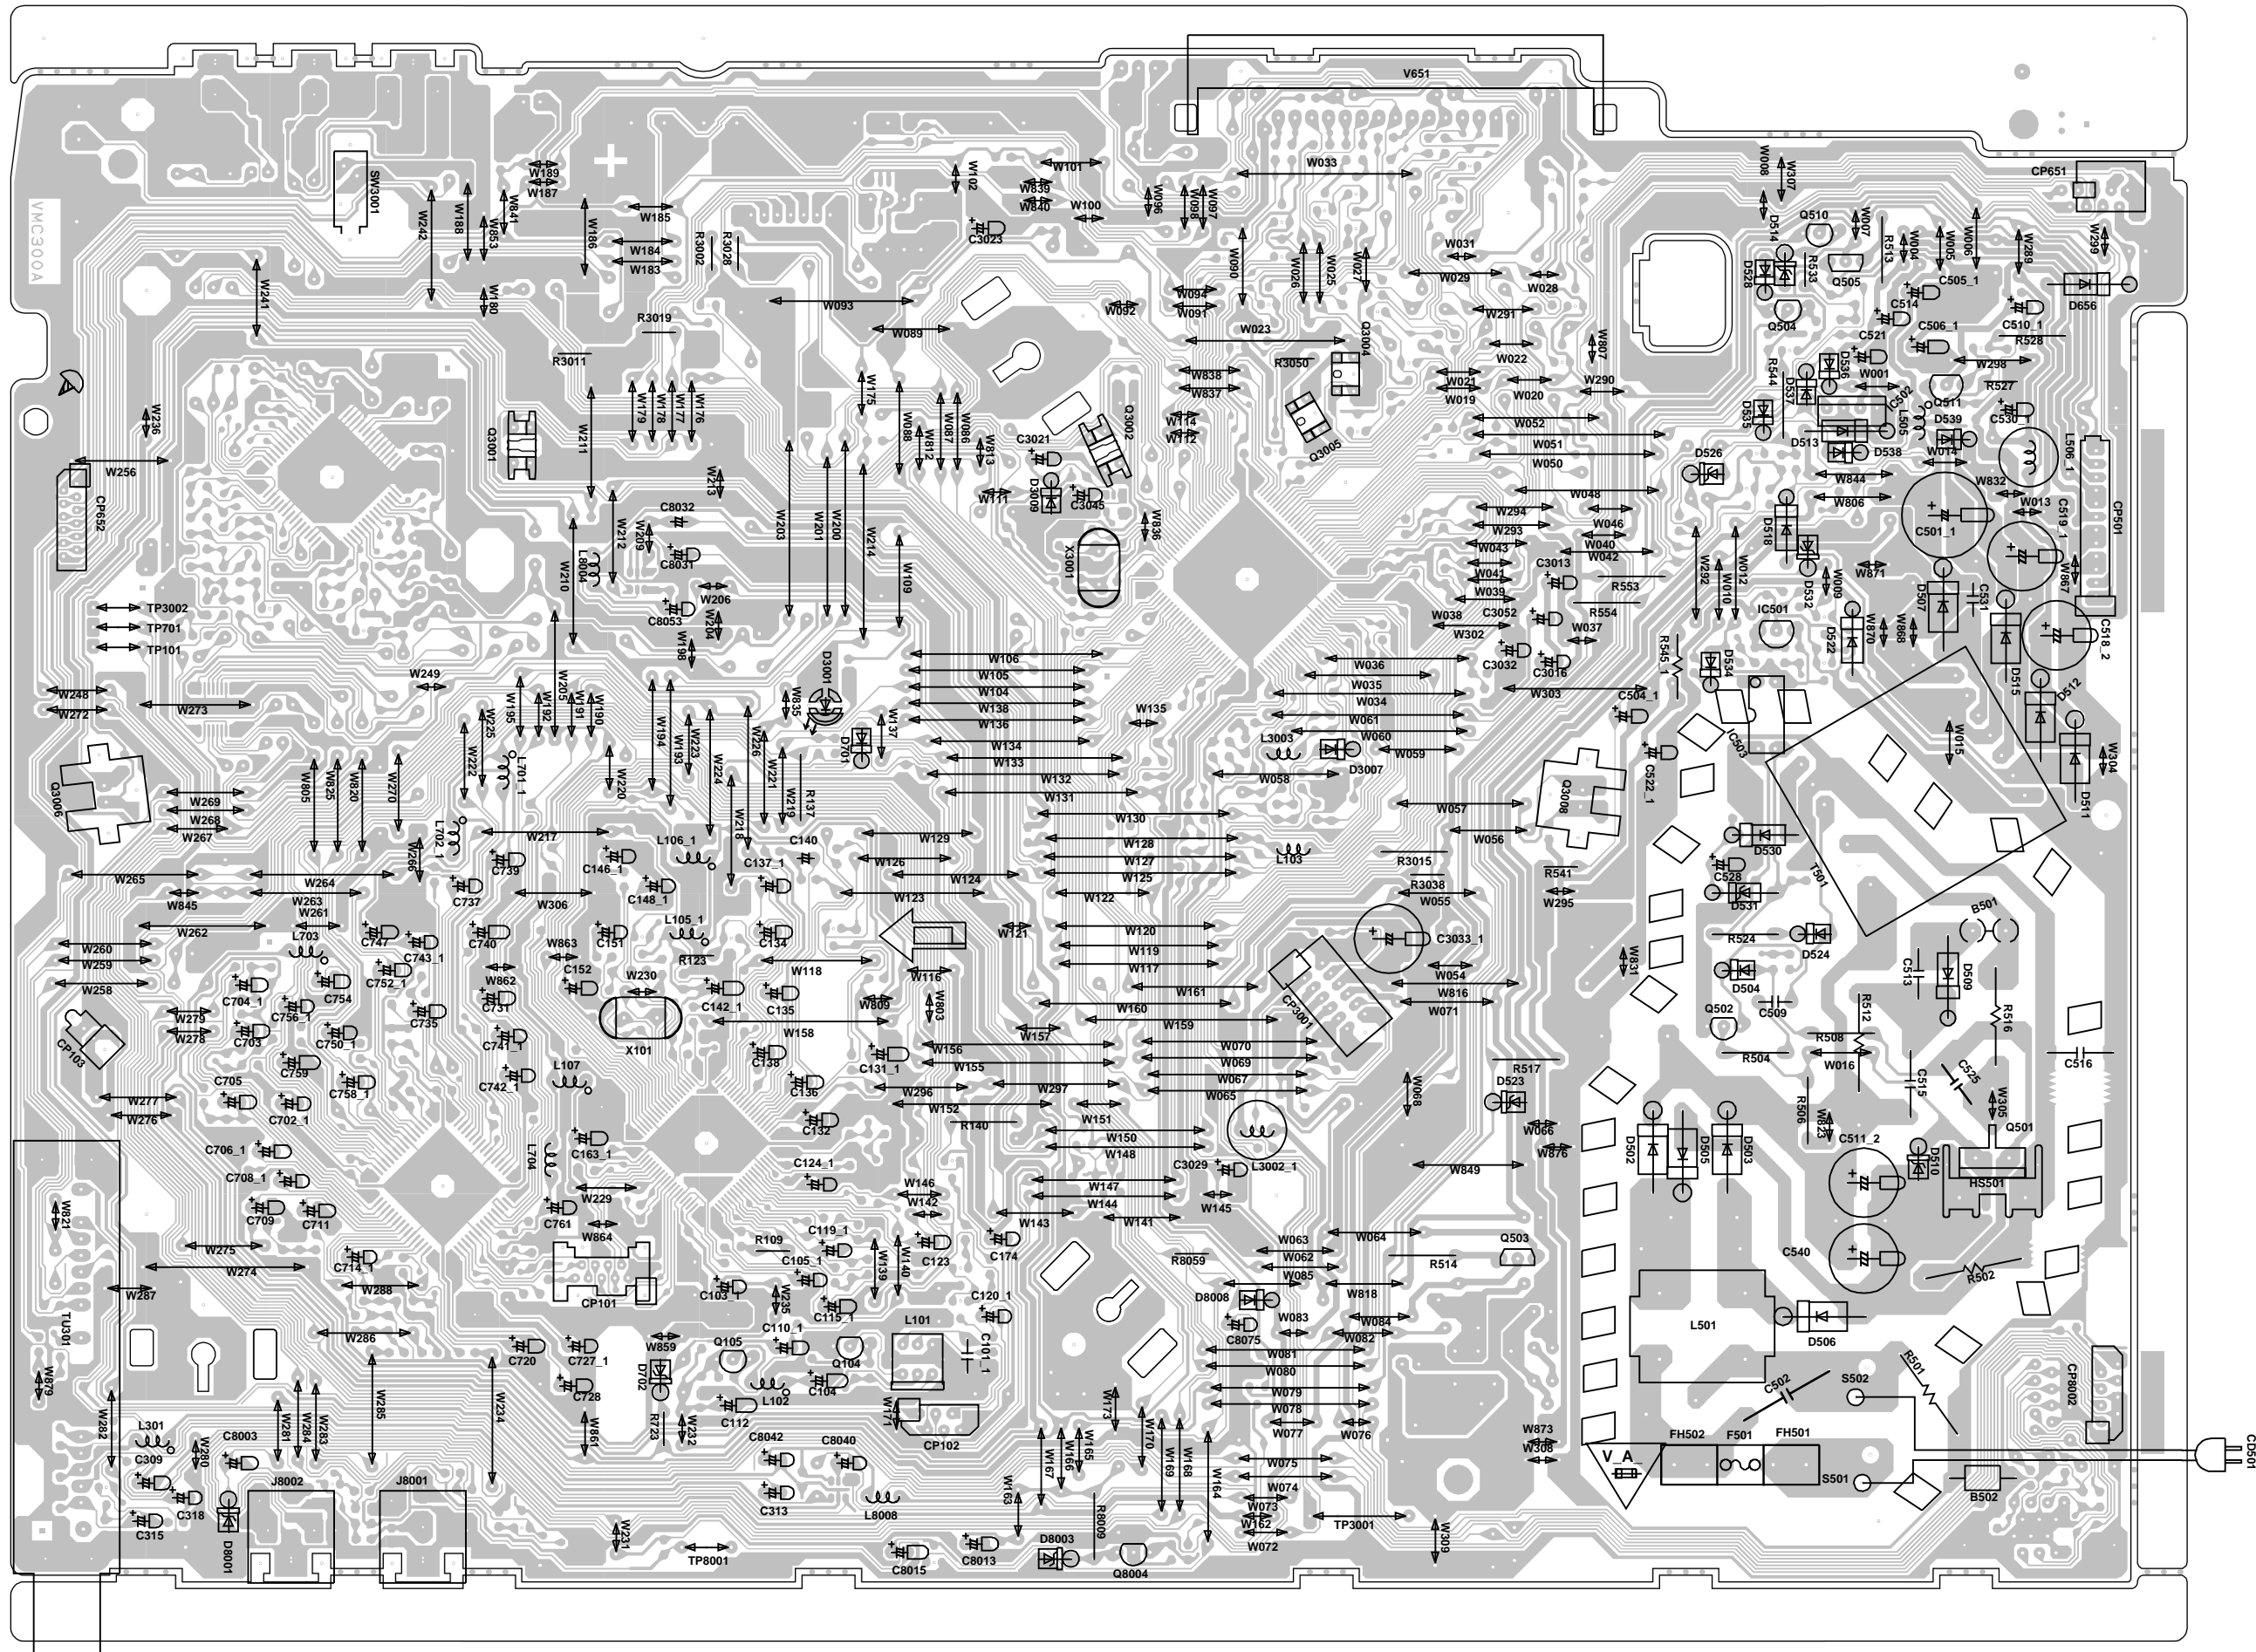


PRINTED CIRCUIT BORDS  
VCR (CHIP MONTED PARTS)  
SOLDER SIDE

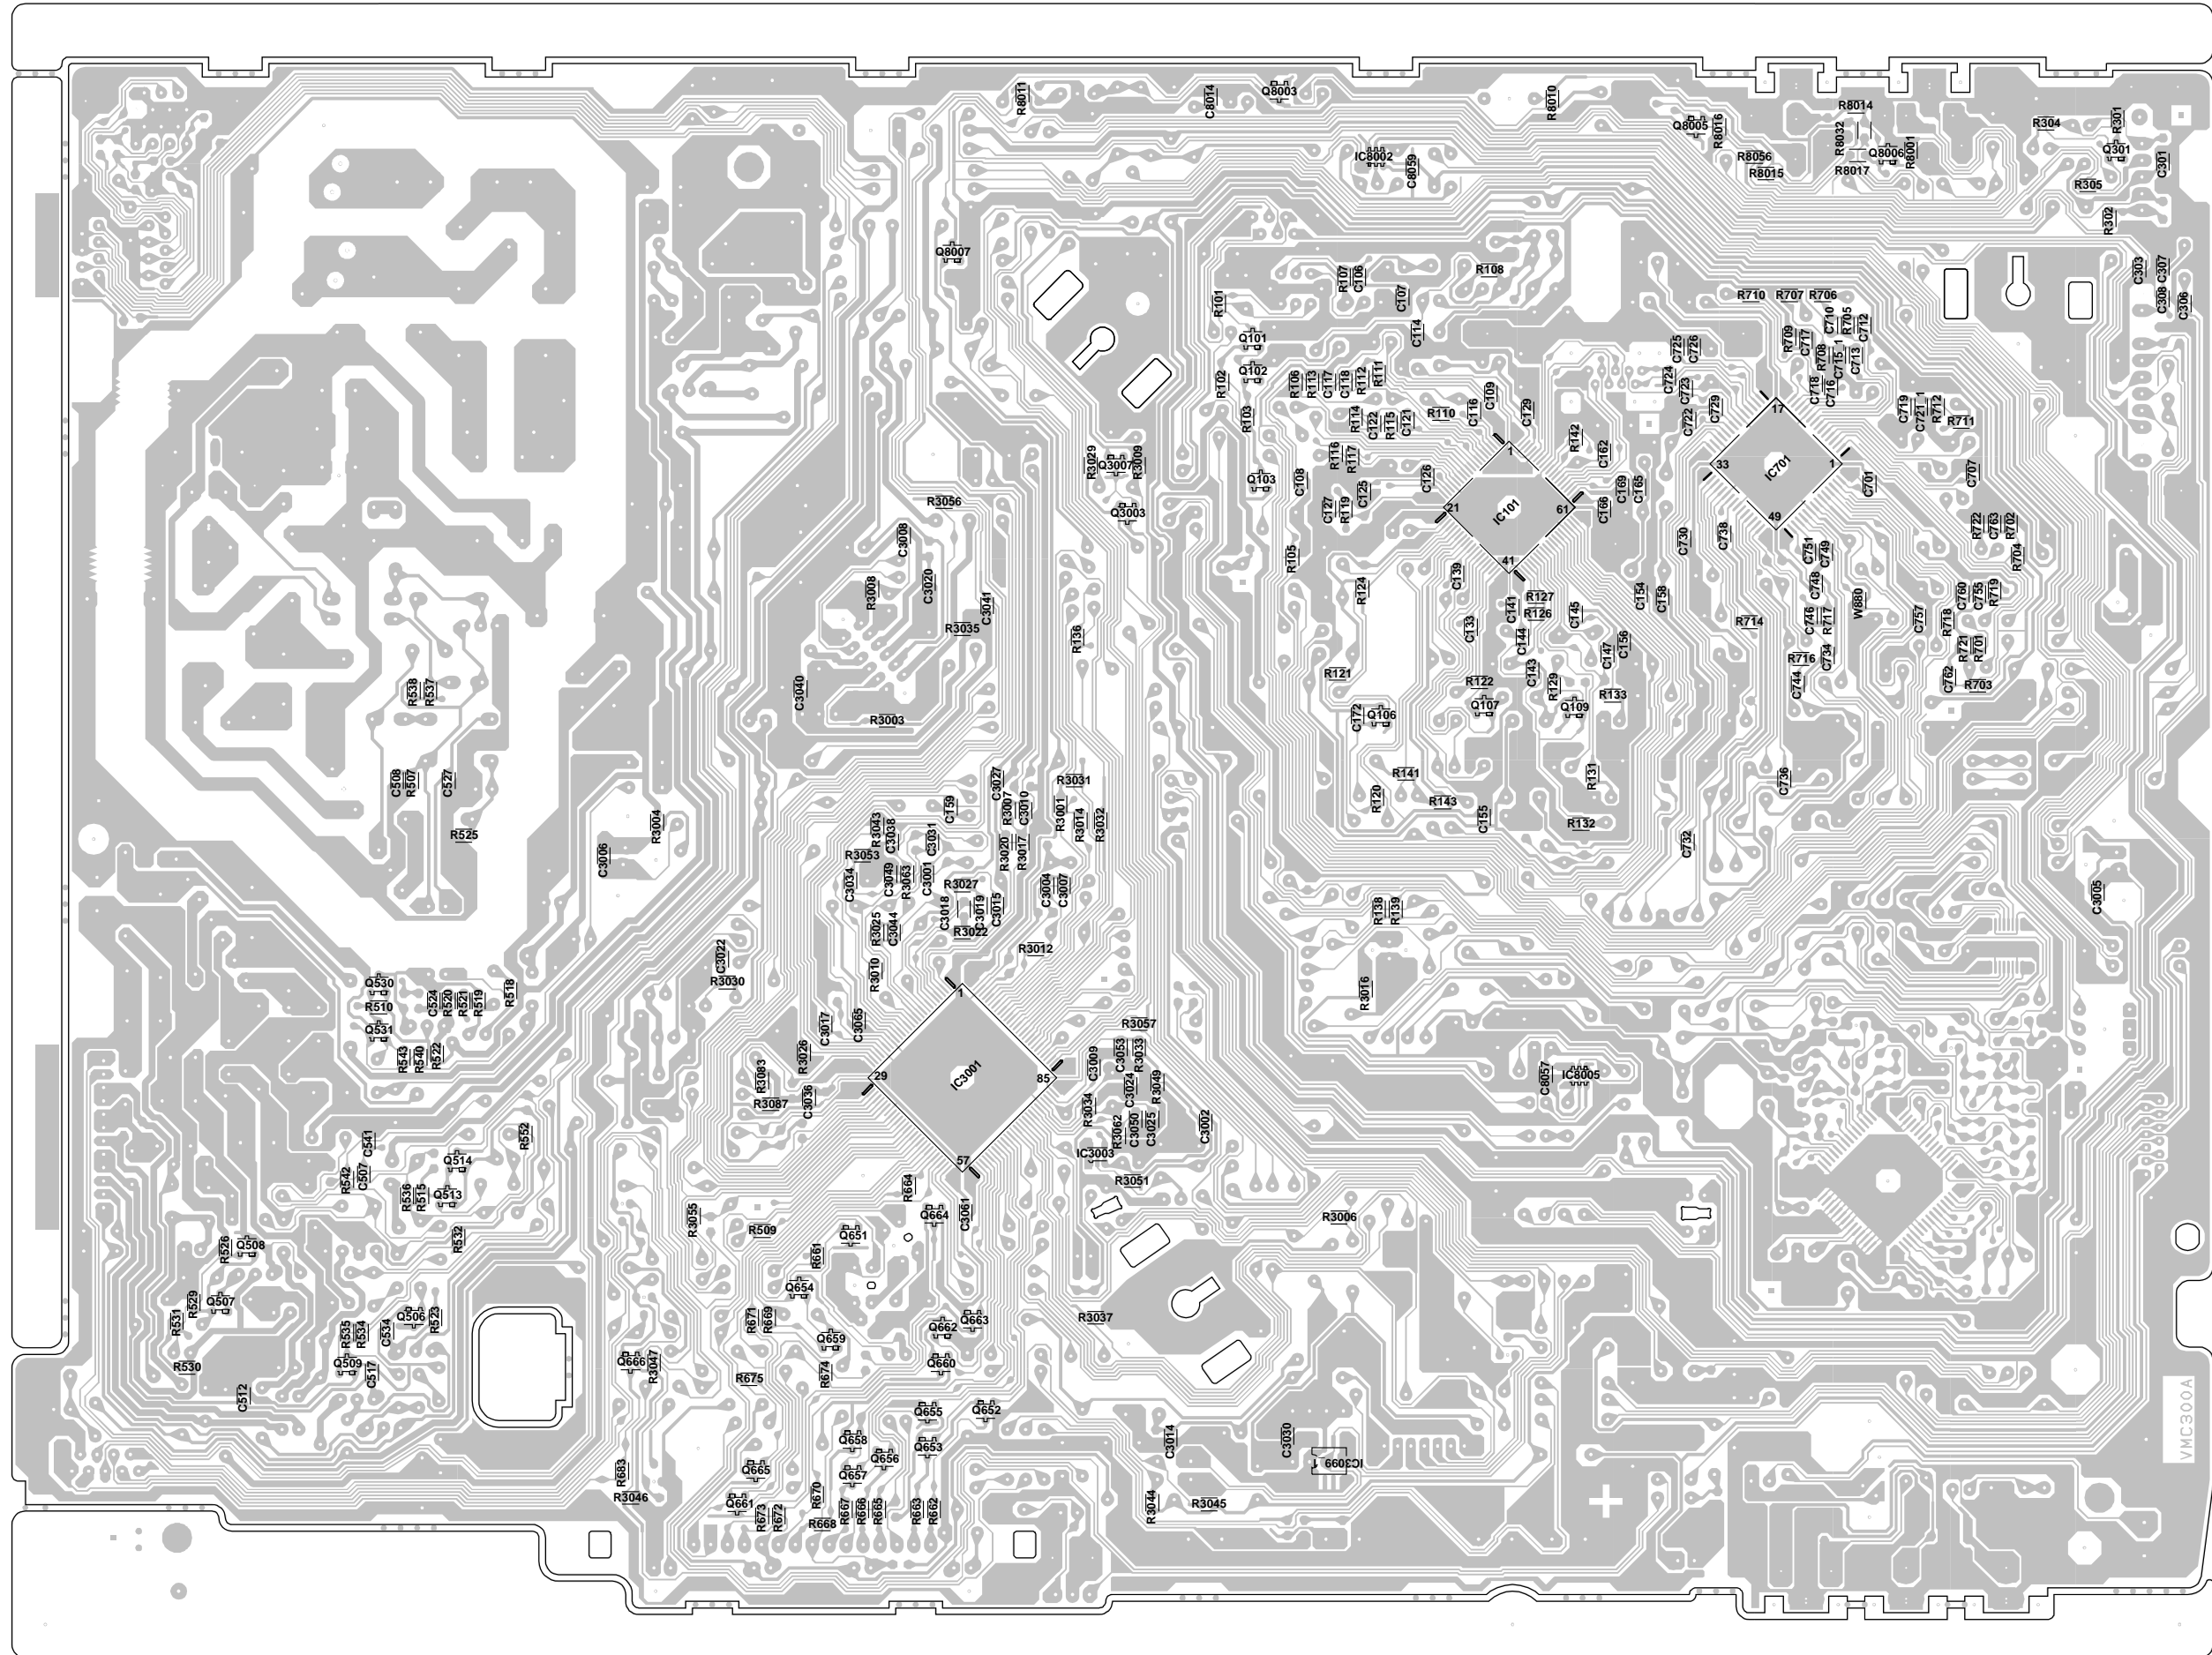



# MPEG/MICON SCHEMATIC DIAGRAM (DVD PCB)

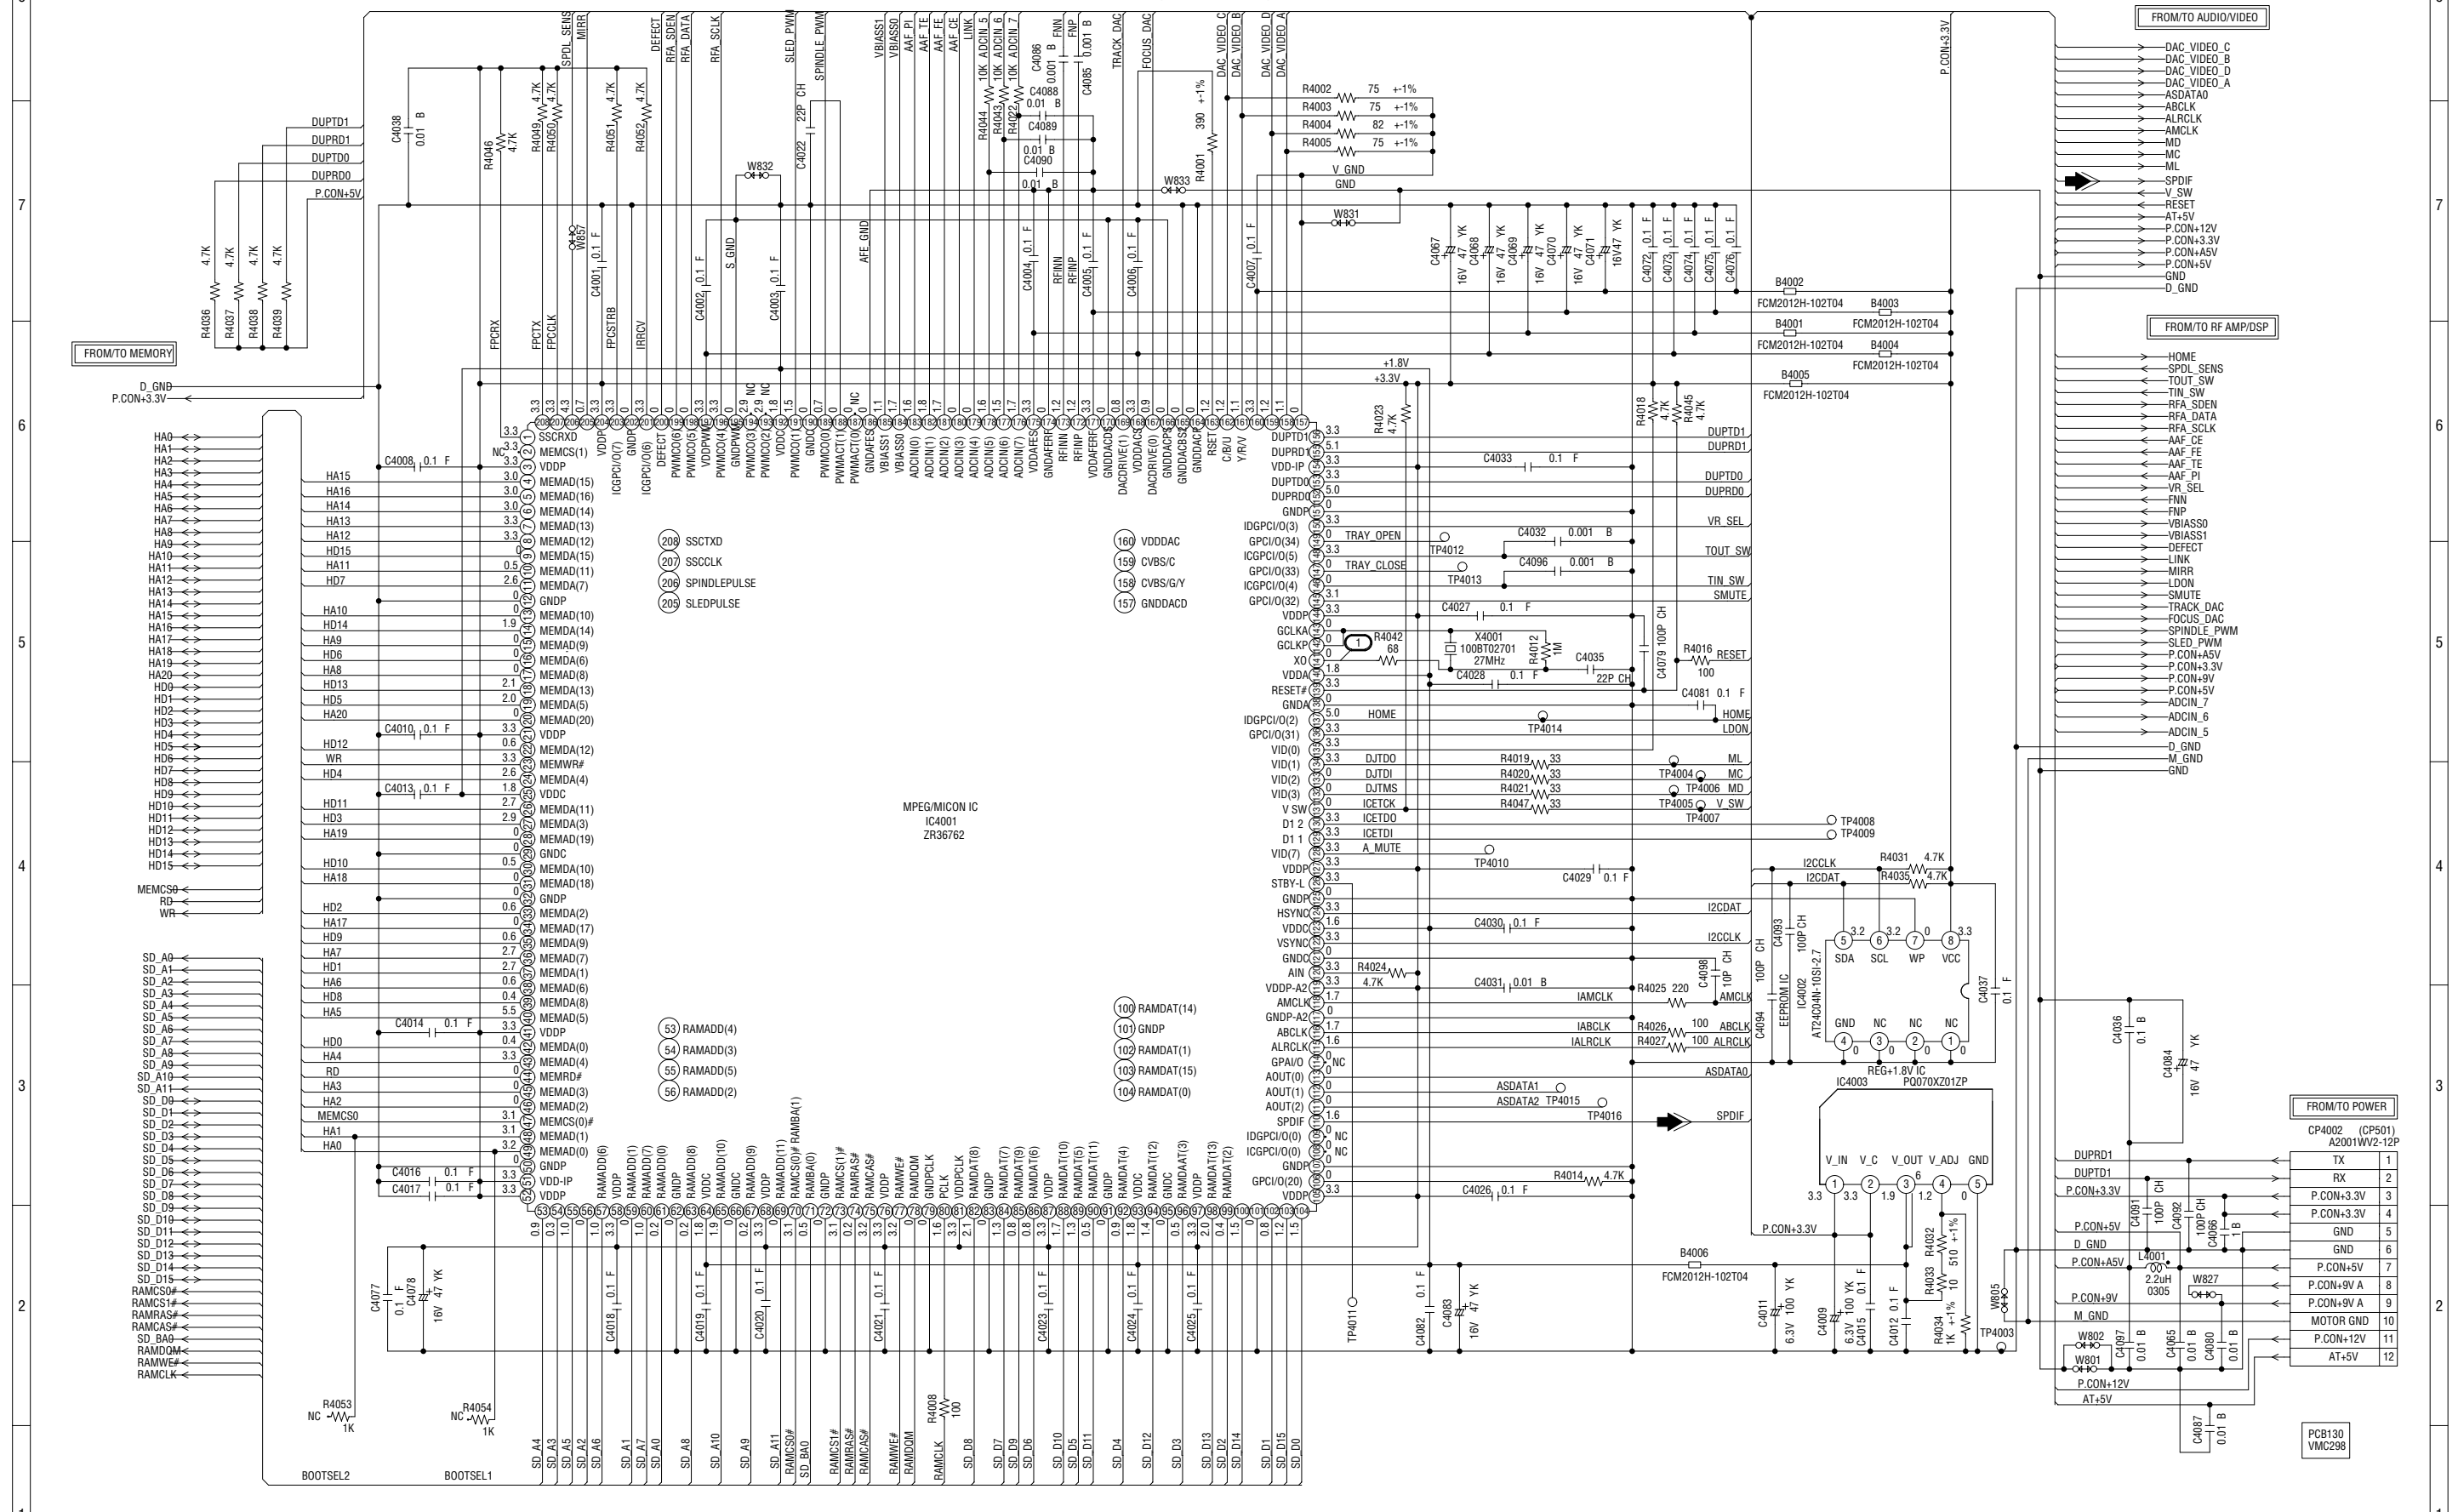

← DIGITAL AUDIO SIGNAL(PB)


NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

FROM/TO POWER	
CP4002 (CP501)	
A2001WV2-12P	
TX	1
RX	2
P.CON+3.3V	3
P.CON+3.3V	4
GND	5
GND	6
P.CON+5V	7
P.CON+9V A	8
P.CON+9V A	9
MOTOR GND	10
P.CON+12V	11
AT+5V	12

PCB130 VMC298

# MEMORY SCHEMATIC DIAGRAM (DVD PCB)

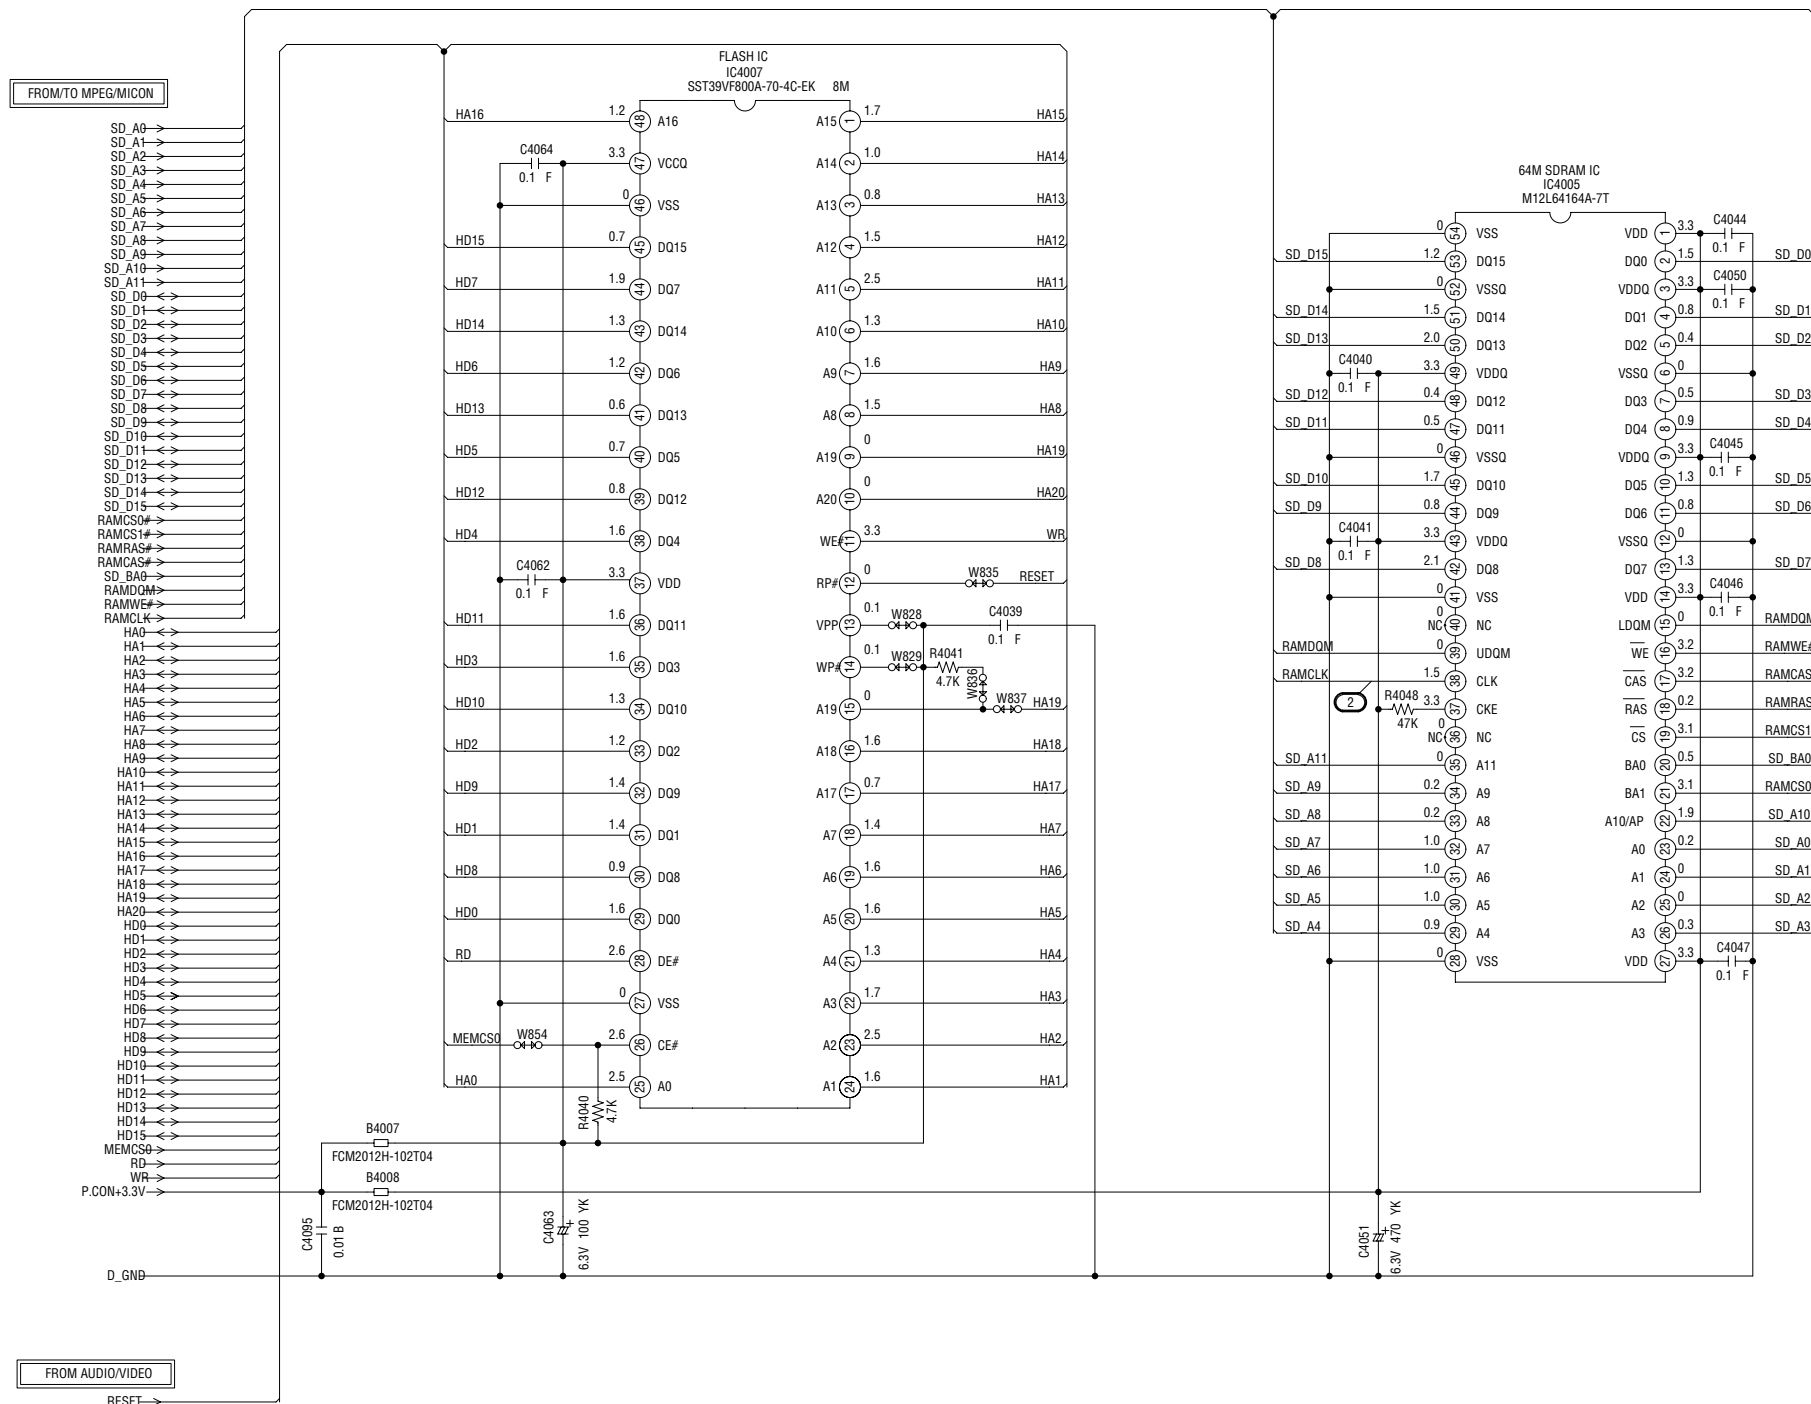


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

PCB130  
VMC298



# AUDIO/VIDEO SCHEMATIC DIAGRAM (DVD PCB)

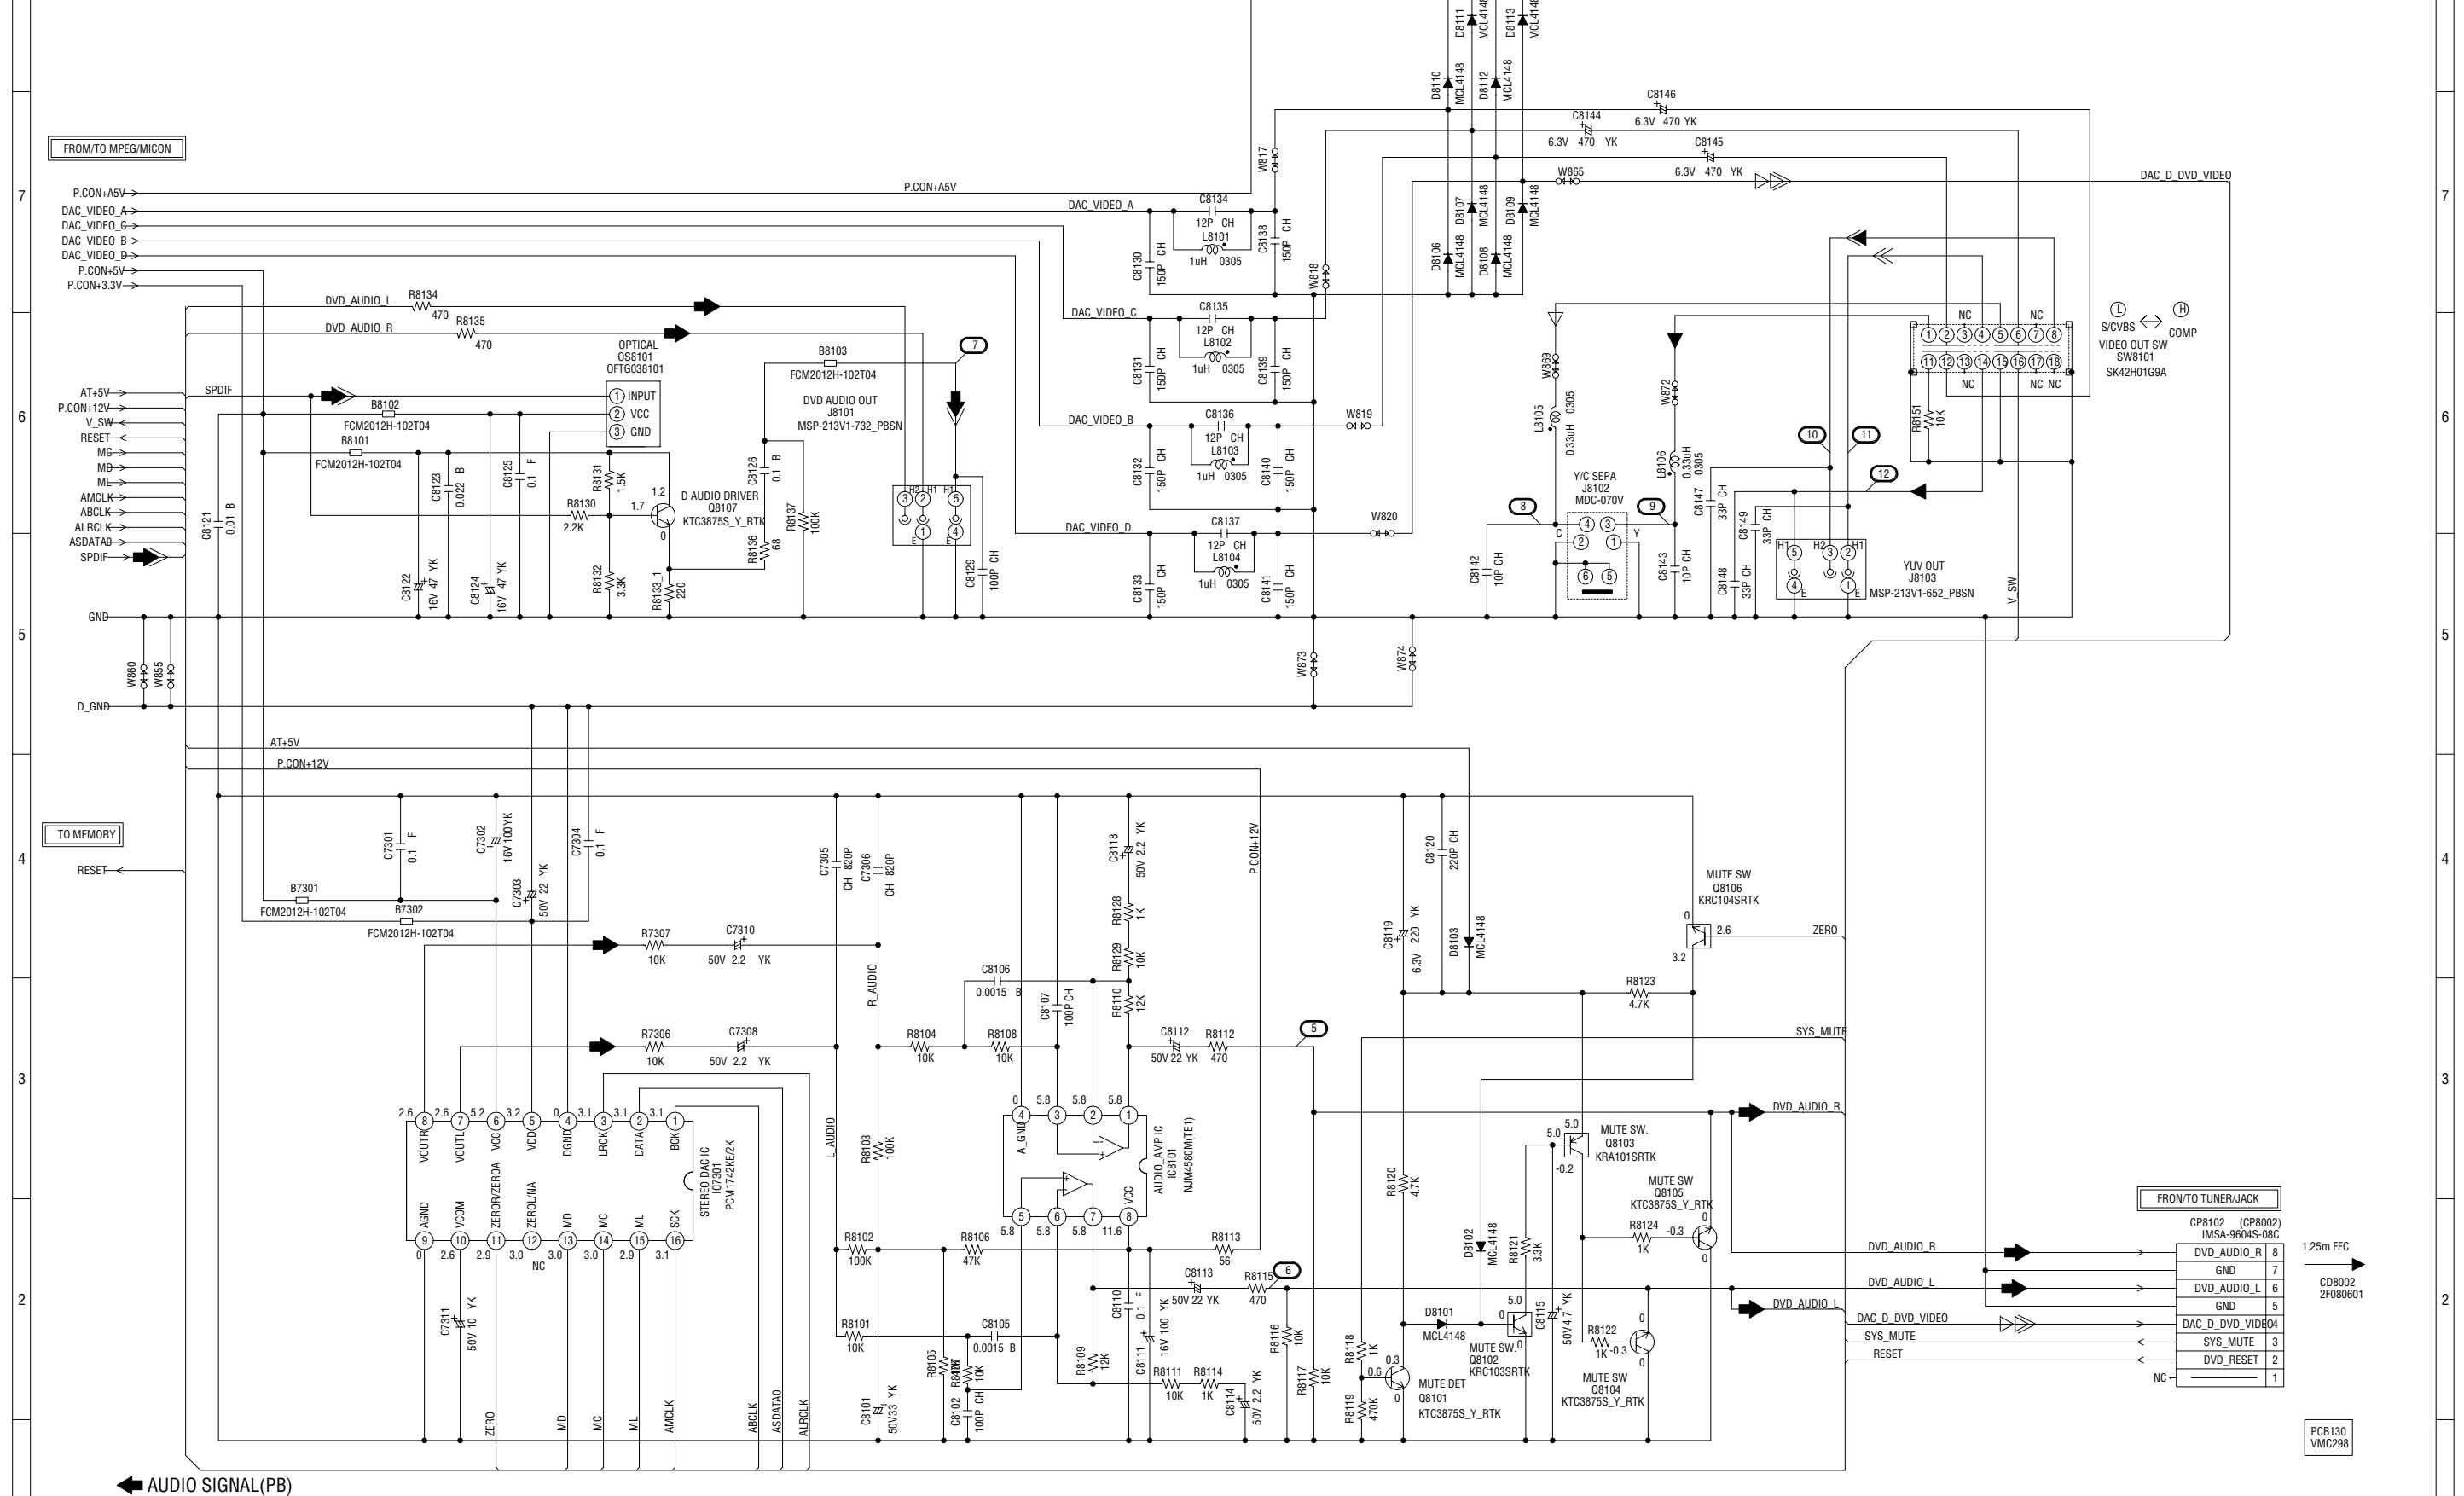



- ◀ AUDIO SIGNAL(PB)
- ▶ PLAYBACK LUMINANCE SIGNAL
- ◀▶ PLAYBACK COLOR SIGNAL
- ◀▶▶ PLAYBACK VIDEO SIGNAL
- ◀▶▶▶ DIGITAL AUDIO SIGNAL(PB)
- ◀▶ R.SIGNAL + COMPONENT SIGNAL(U)
- ◀▶▶ B.SIGNAL + COMPONENT SIGNAL(V)

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR




FROM/TO TUNER/JACK	
CP8102 (CP8002)	8
IMS9-9604S-08C	7
DVD_AUDIO_R	6
GND	5
DVD_AUDIO_L	4
GND	3
DAC_D_DVD_VIDEO4	2
SYS_MUTE	1
DVD_RESET	0
NC	-

1.25m FFC  
CD8002 2F080601

PCB130 VMC298



# SYSCON SCHEMATIC DIAGRAM (VCR PCB)

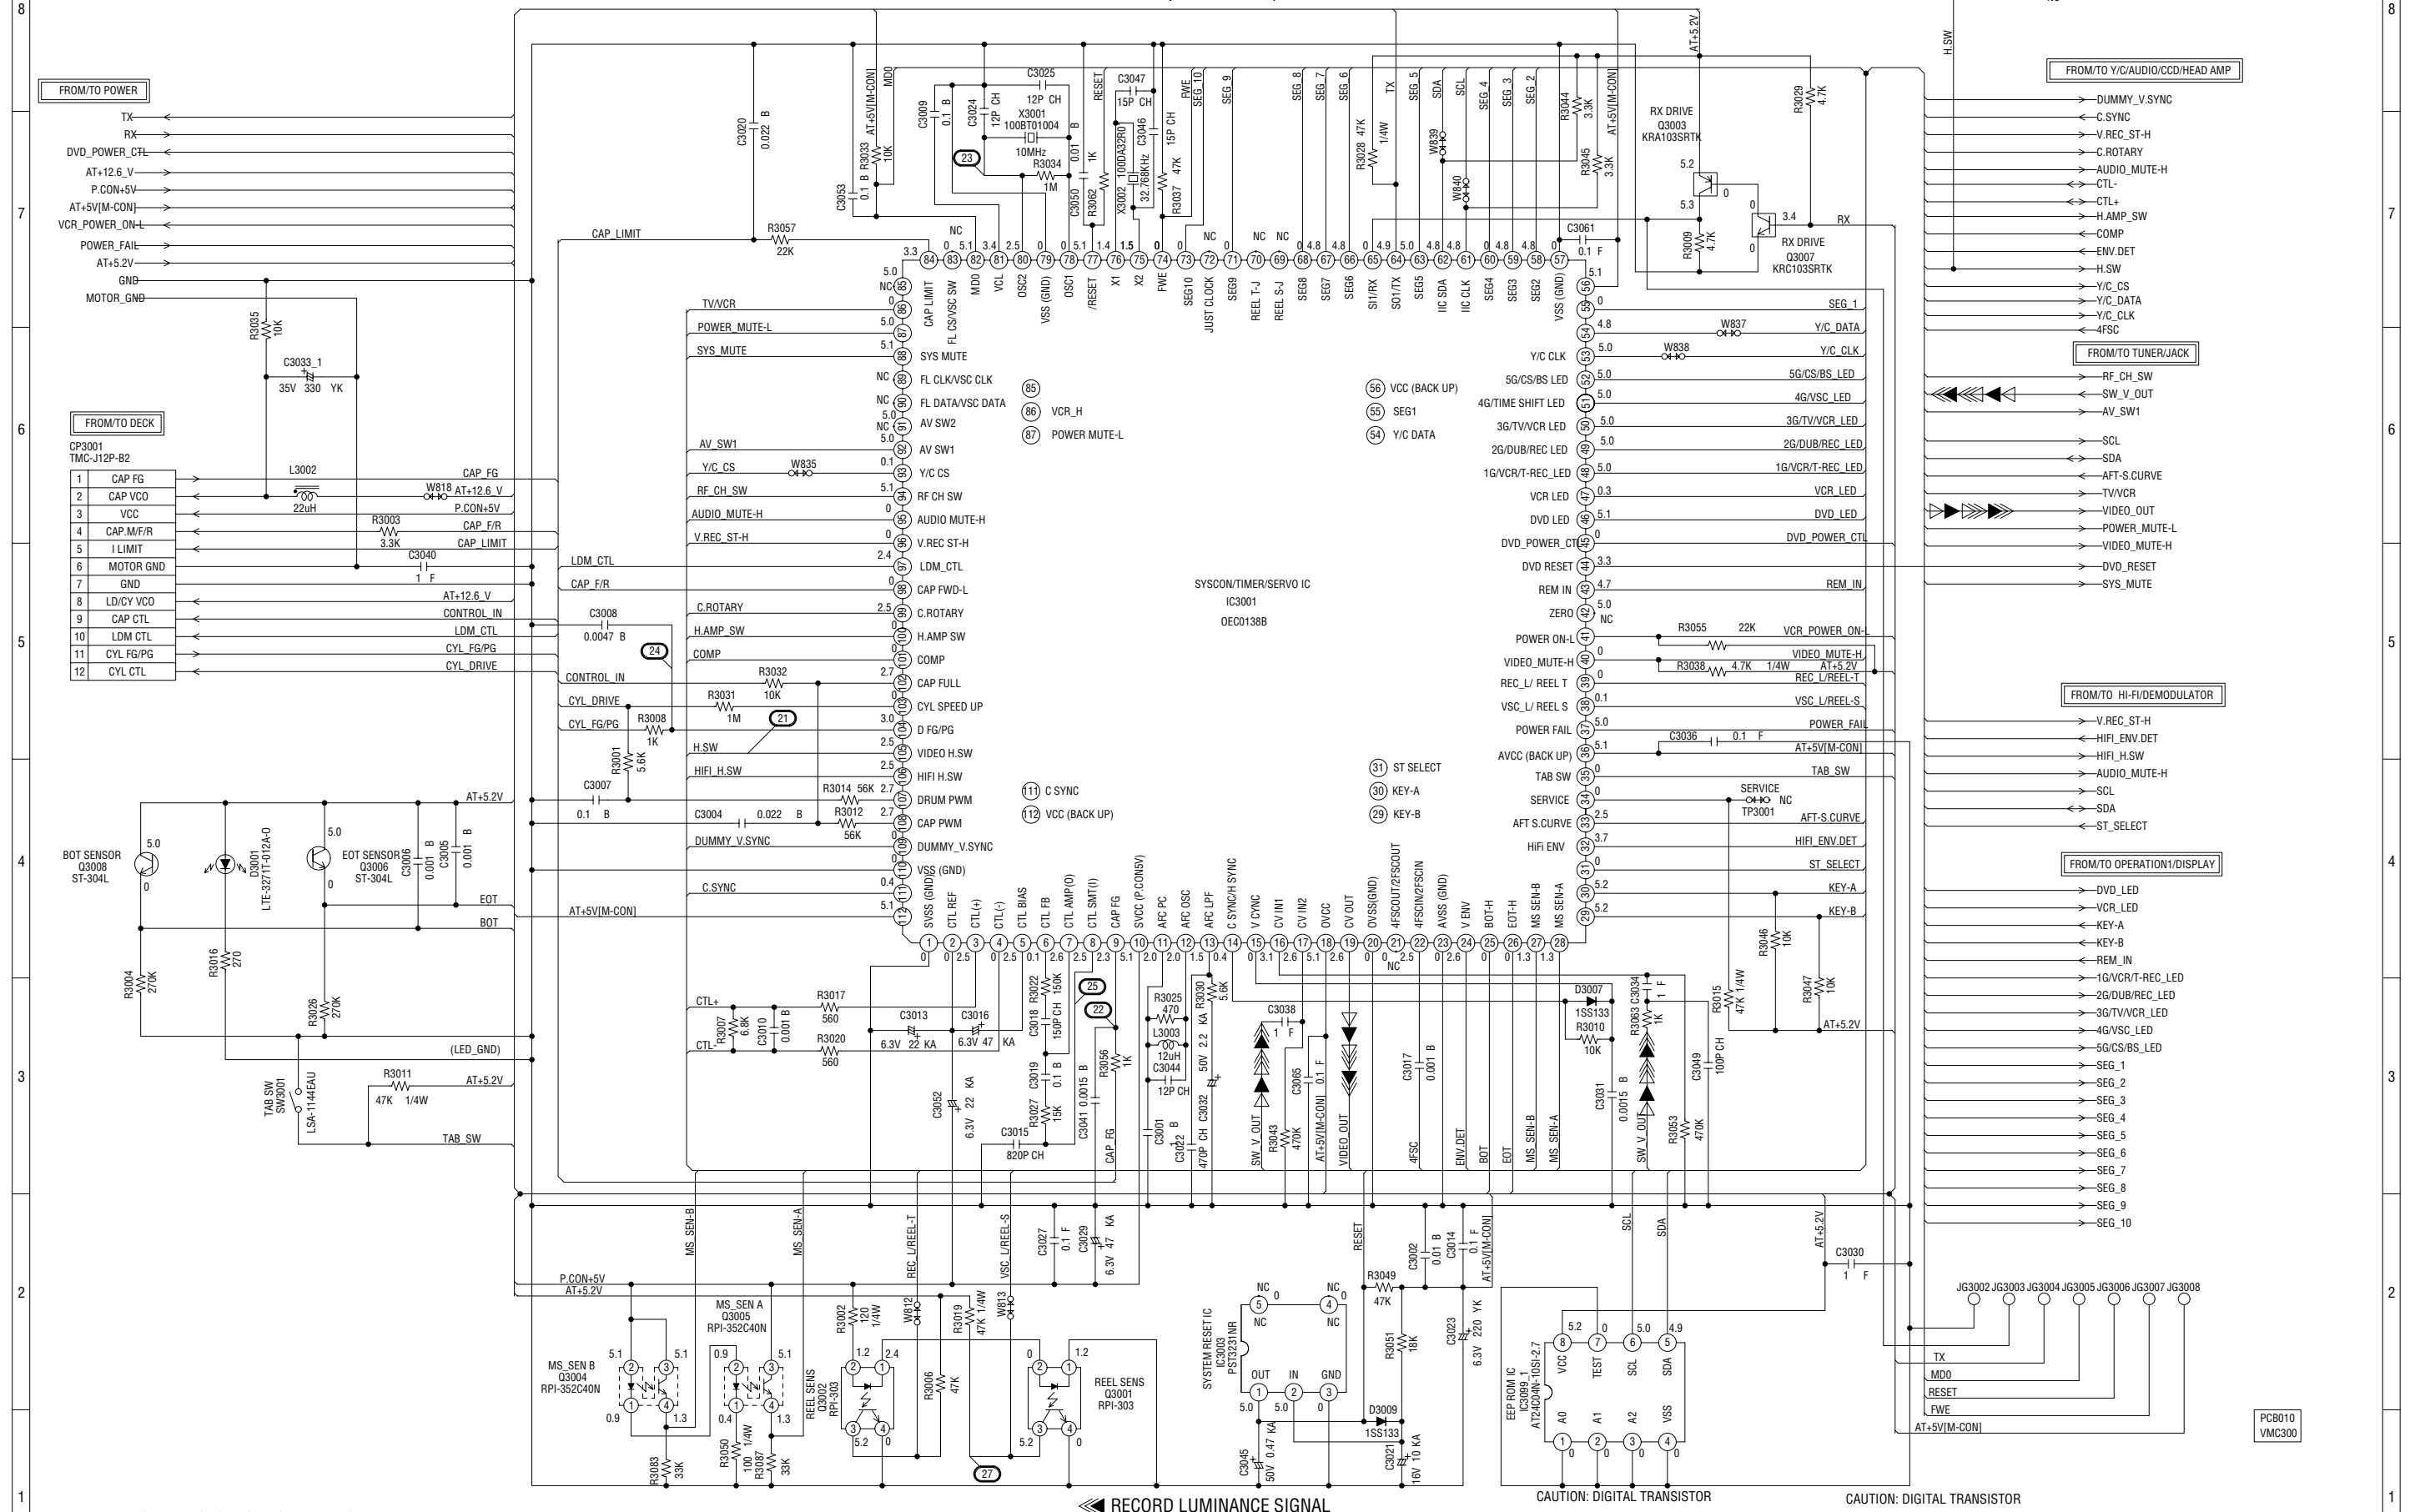

**FROM/TO POWER**

TX	←
RX	←
DVD_POWER_CTL	←
AT+12.6_V	←
P.CON+5V	←
AT+5V(M-CON)	←
VCR_POWER_ON-L	←
POWER_FAIL	←
AT+5.2V	←
GND	←
MOTOR_GND	←

**FROM/TO DECK**

CP3001	←
TMC-J12P-B2	←
1 CAP FG	←
2 CAP VCO	←
3 VCC	←
4 CAP.M/F/R	←
5 I LIMIT	←
6 MOTOR GND	←
7 GND	←
8 LD/CY VCO	←
9 CAP CTL	←
10 LDM CTL	←
11 CYL FG/PG	←
12 CYL CTL	←

**FROM/TO Y/C/AUDIO/CCD/HEAD AMP**

DUMMY_V.SYNC	←
C.SYNC	←
V.REC_ST-H	←
C.ROTARY	←
AUDIO_MUTE-H	←
CTL-	←
CTL+	←
H.AMP_SW	←
COMP	←
ENV_DET	←
H.SW	←
Y/C_CS	←
Y/C_DATA	←
Y/C_CLK	←
4FSC	←

**FROM/TO TUNER/JACK**

RF_CH_SW	←
SW_V_OUT	←
AV_SW1	←
SCL	←
SDA	←
AFT-S.CURVE	←
TV/VCR	←
VIDEO_OUT	←
POWER_MUTE-L	←
VIDEO_MUTE-H	←
DVD_RESET	←
SYS_MUTE	←

**FROM/TO HI-FI/DEMODULATOR**

V.REC_ST-H	←
HIFI_ENV_DET	←
HIFI_H.SW	←
AUDIO_MUTE-H	←
SCL	←
SDA	←
ST_SELECT	←

**FROM/TO OPERATION1/DISPLAY**

DVD_LED	←
VCR_LED	←
KEY-A	←
KEY-B	←
REM_IN	←
1G/VCR/T-REC_LED	←
2G/DUB/REC_LED	←
3G/TV/VCR_LED	←
4G/VSC_LED	←
5G/CS/BS_LED	←
SEG_1	←
SEG_2	←
SEG_3	←
SEG_4	←
SEG_5	←
SEG_6	←
SEG_7	←
SEG_8	←
SEG_9	←
SEG_10	←

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

- ▶ RECORD LUMINANCE SIGNAL
- ▶ RECORD COLOR SIGNAL
- ▶ PLAYBACK LUMINANCE SIGNAL
- ▶ PLAYBACK COLOR SIGNAL

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

# TUNER/JACK SCHEMATIC DIAGRAM (VCR PCB)

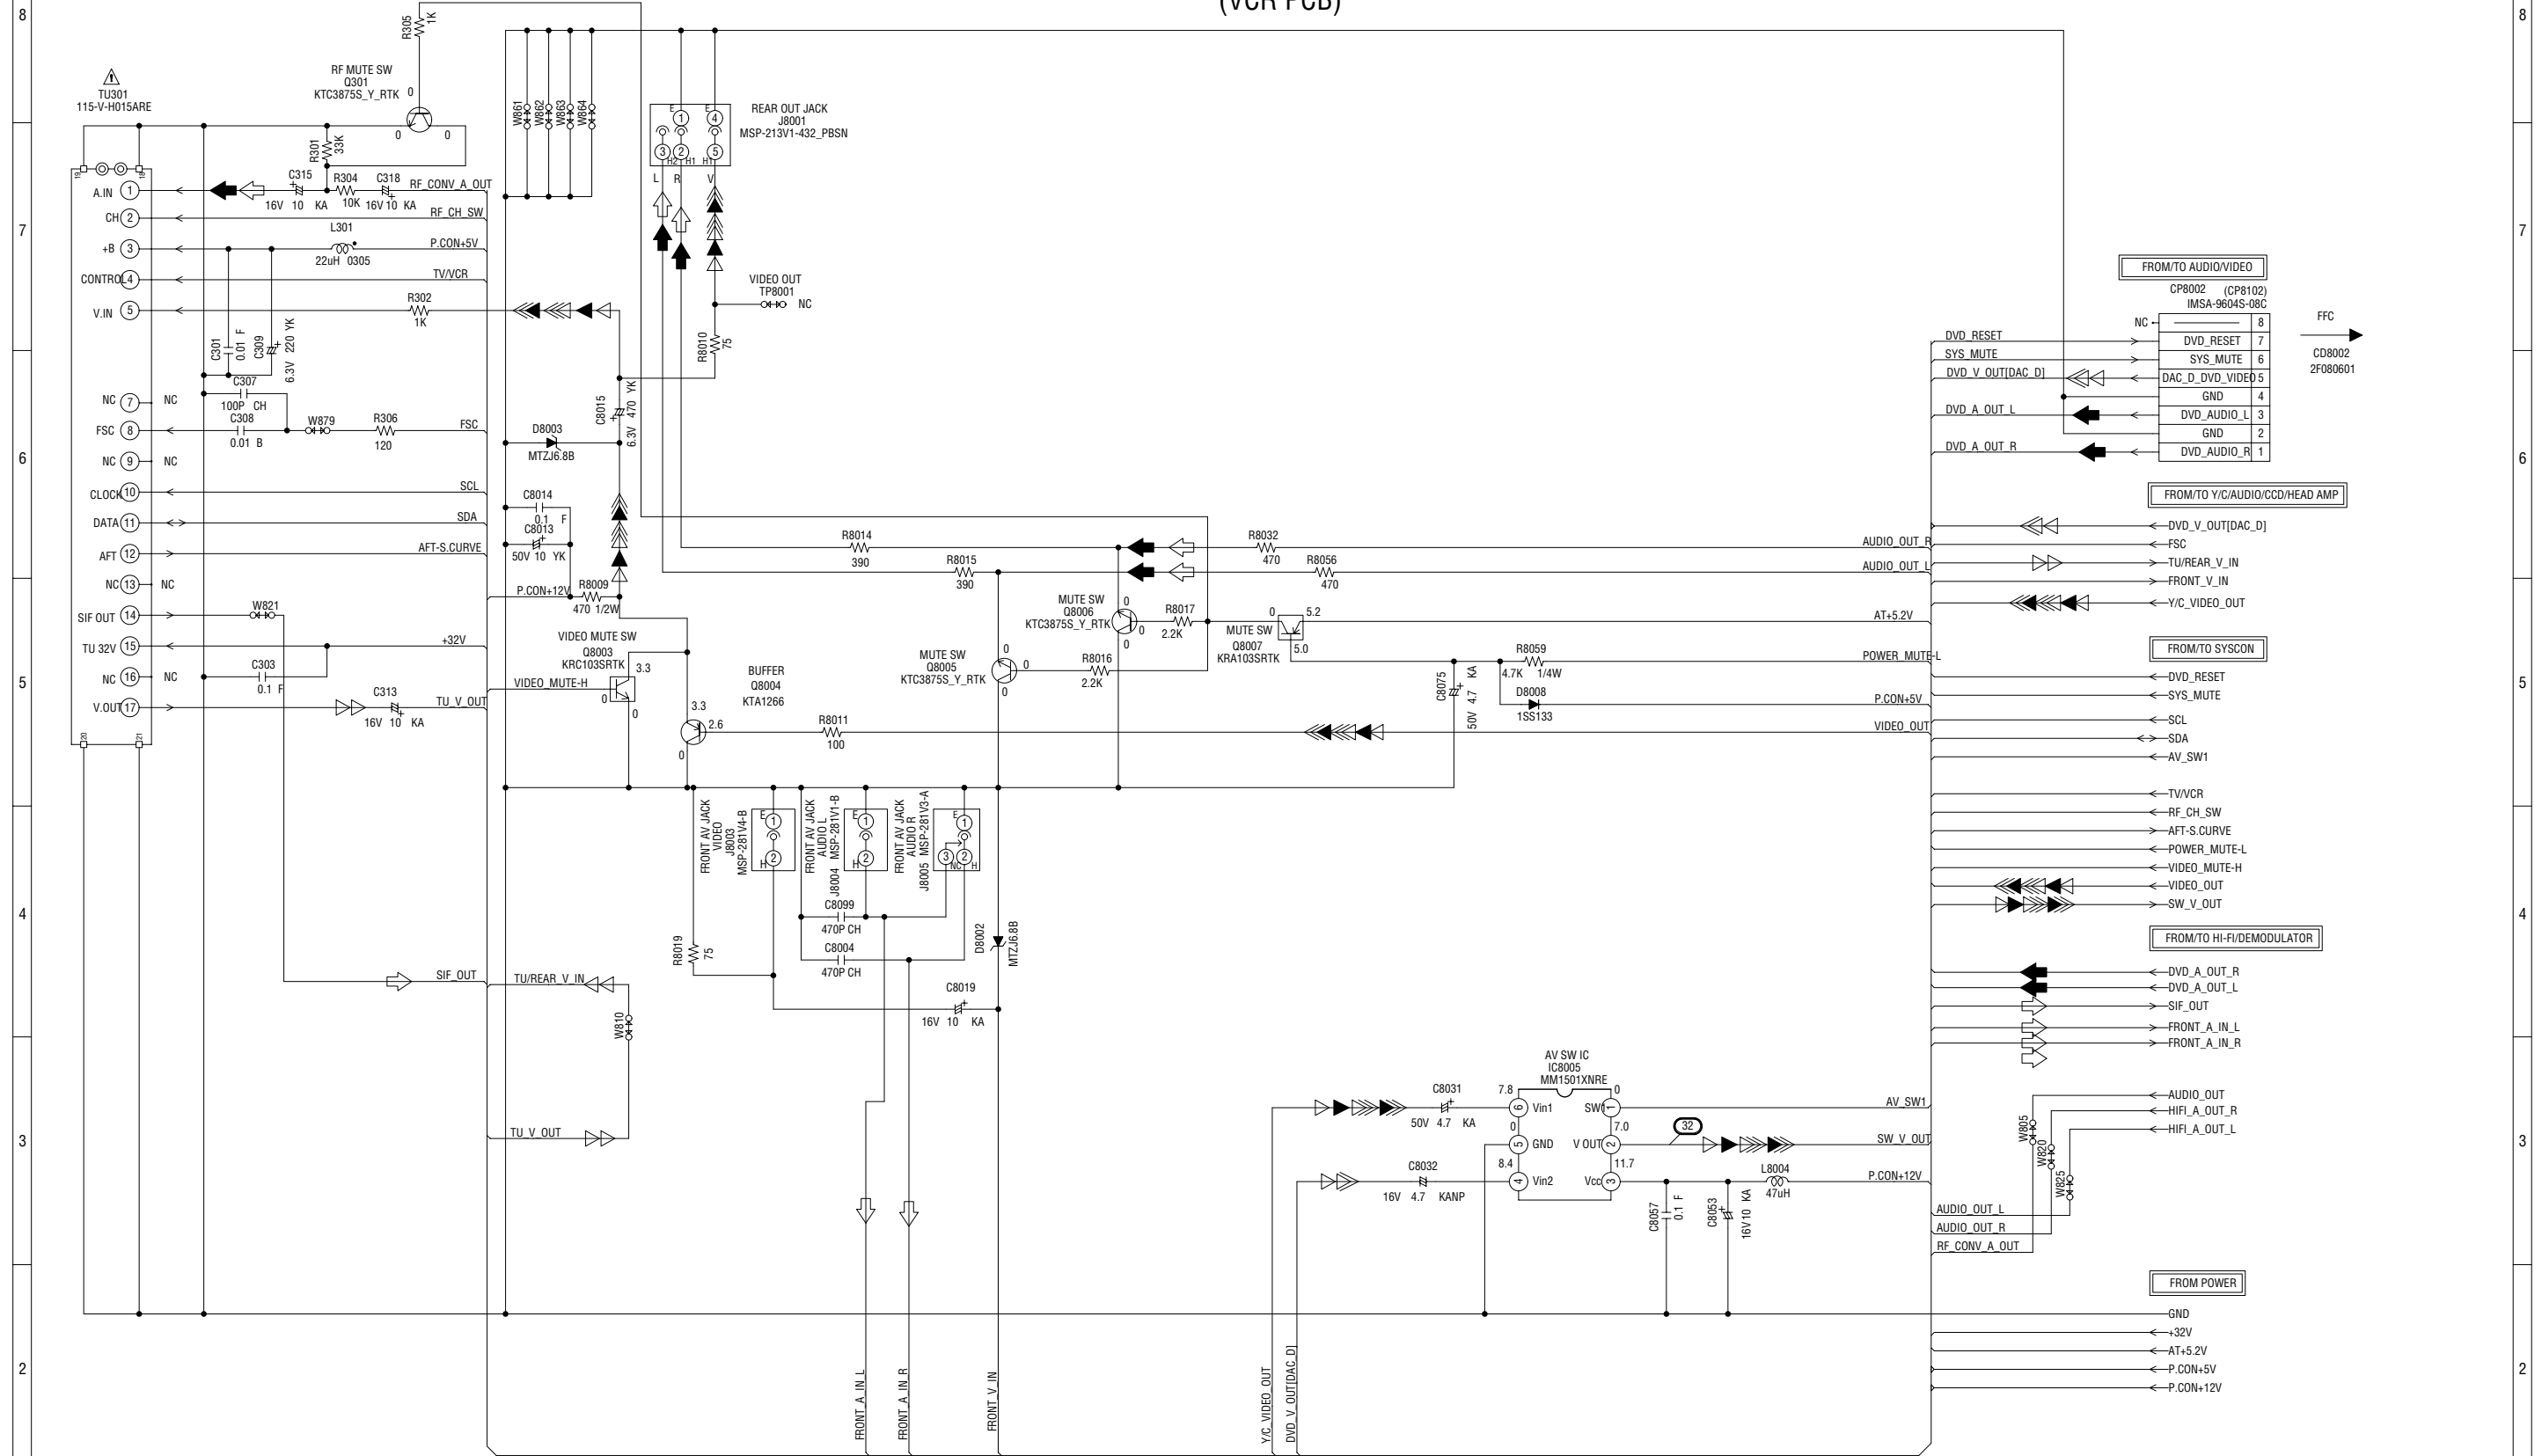

CAUTION: DIGITAL TRANSISTOR

CAUTION: DIGITAL TRANSISTOR

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLES DECRITES DANS LA NOMENCLATURE DES PIECES.


- PLAYBACK VIDEO SIGNAL
- TUNER VIDEO SIGNAL
- AUDIO SIGNAL(PB)
- AUDIO SIGNAL(REC)
- PLAYBACK COLOR SIGNAL
- PLAYBACK LUMINANCE SIGNAL
- RECORD COLOR SIGNAL
- RECORD LUMINANCE SIGNAL

PC8010  
VMC300





# HI-FI/DEMODULATOR SCHEMATIC DIAGRAM (VCR PCB)

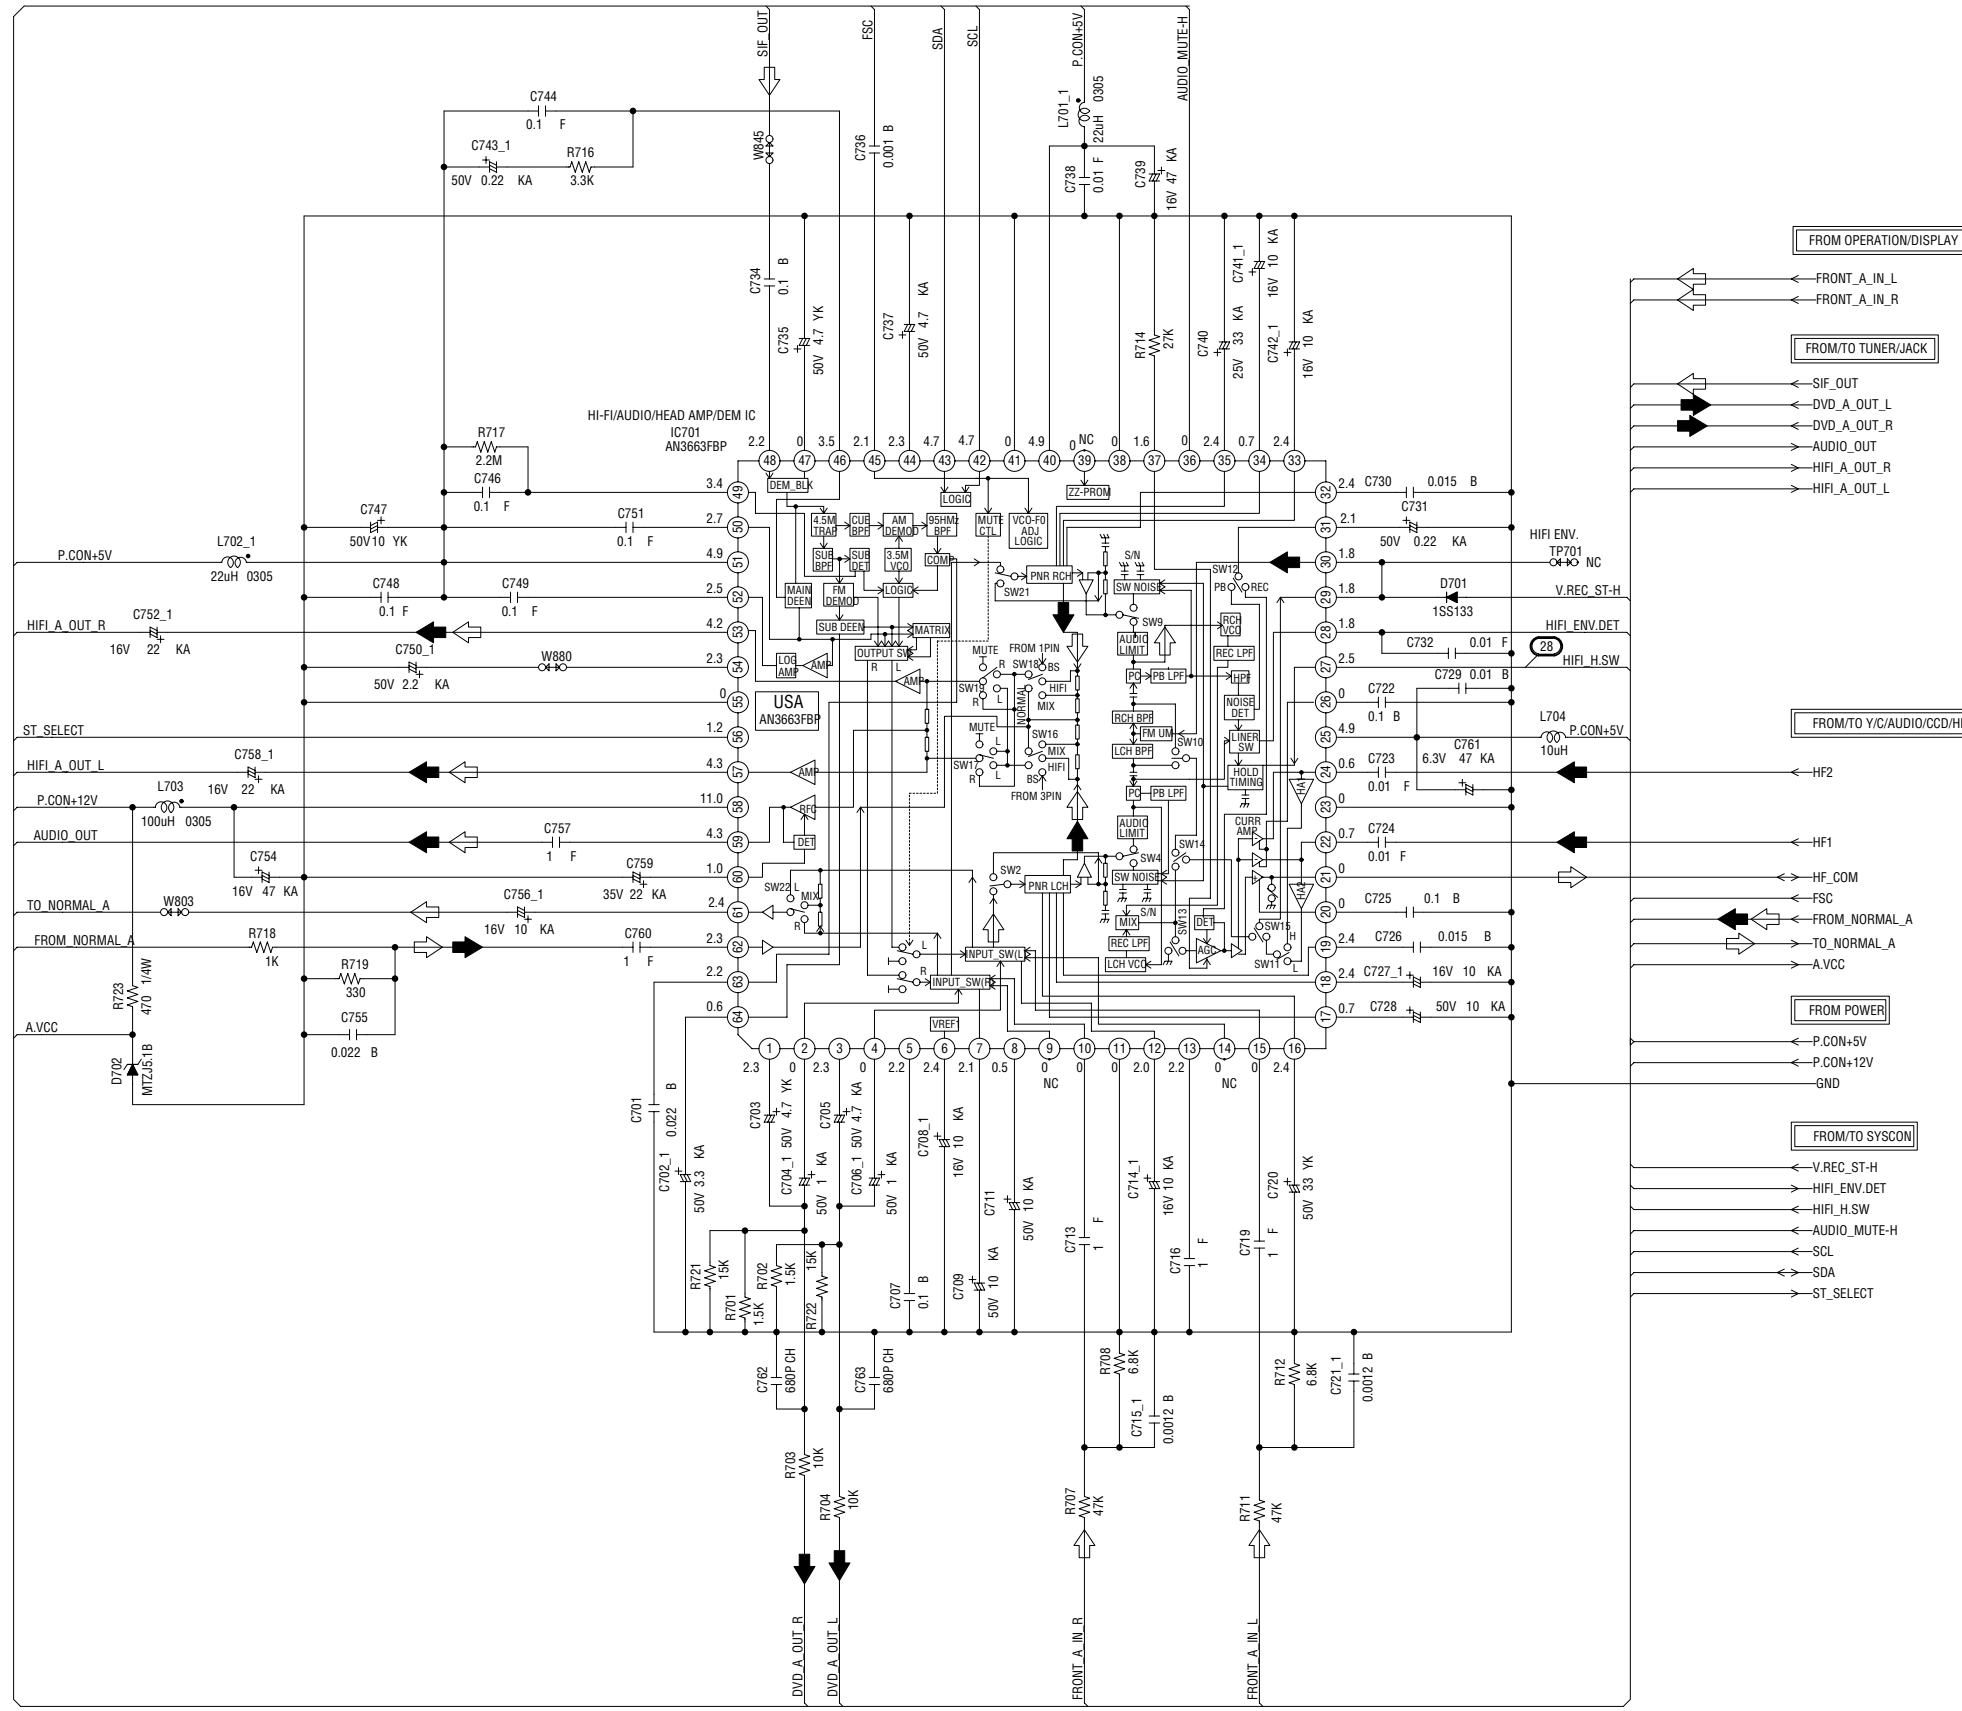


NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

◁ AUDIO SIGNAL (REC)  
 ◀ AUDIO SIGNAL (PB)

PCB010  
VMC300

# POWER SCHEMATIC DIAGRAM (VCR PCB)

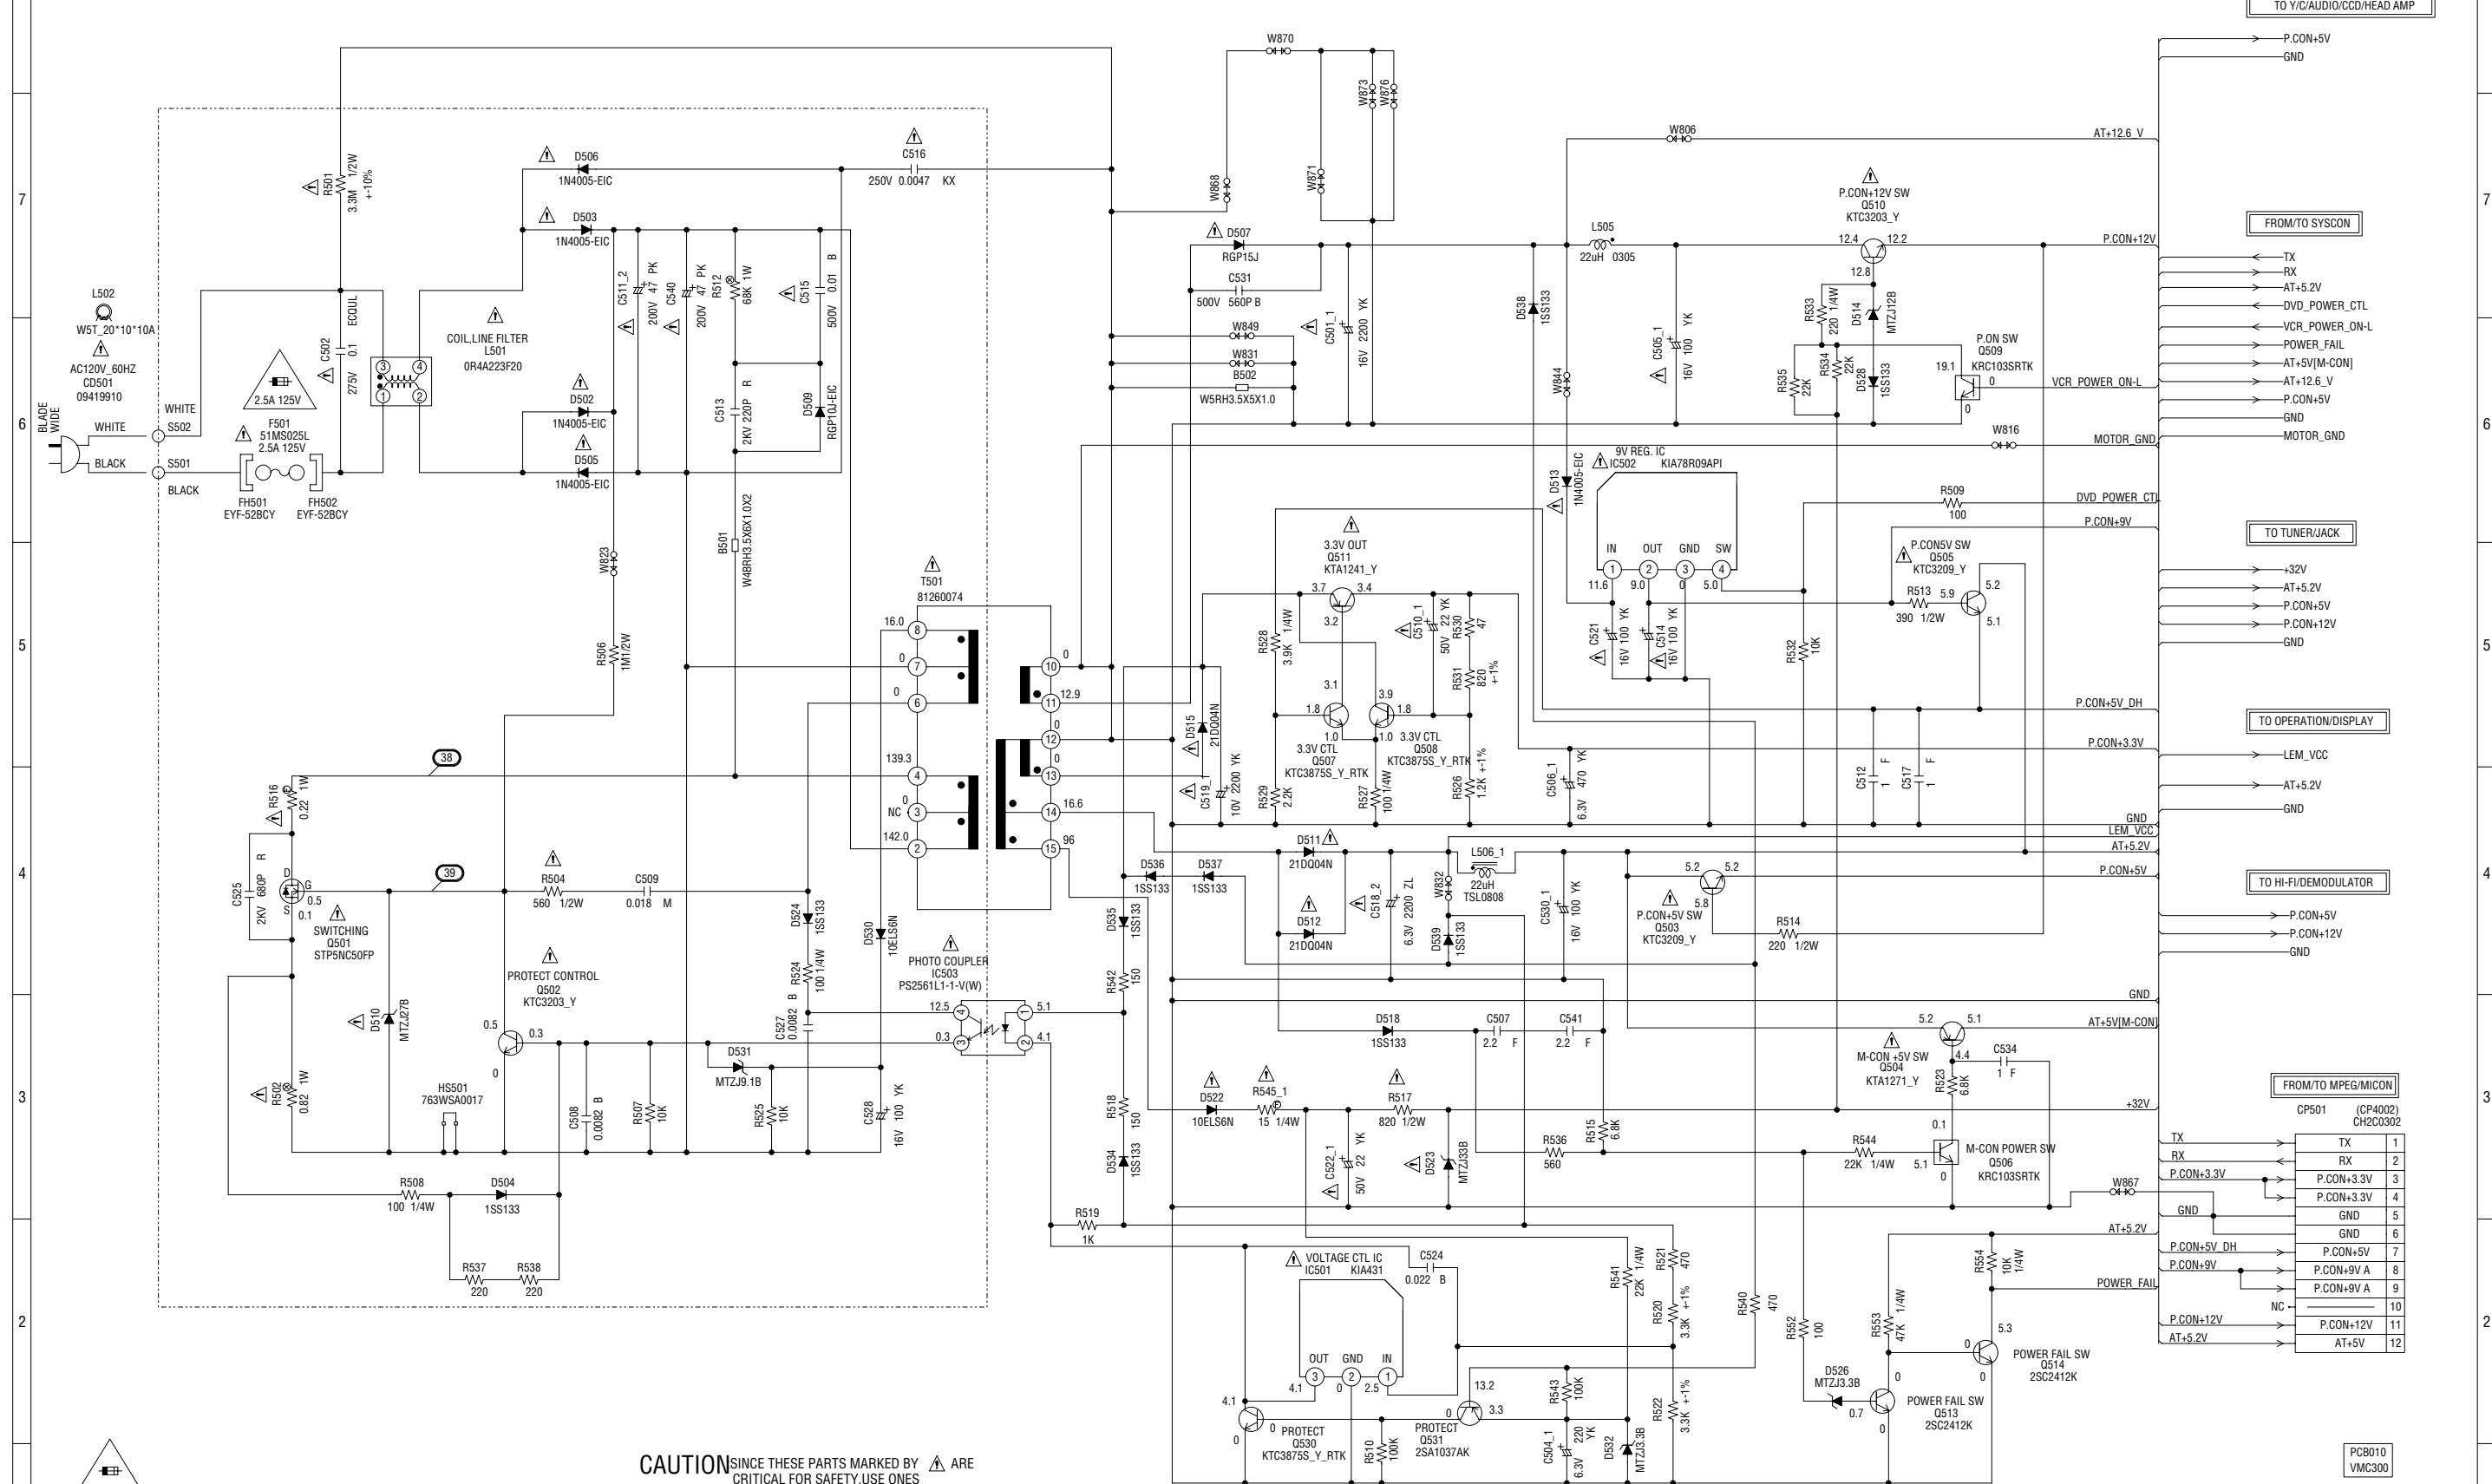

**CAUTION** FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 2.5A 125V(F501).

**ATTENTION** POUR UNE PROTECTION CONTINUE LES RISQUES D'INCIE N'UTILISER QUE DES FUSIBLE DE MEME TYPE 2.5A 125V(F501).


**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.


CAUTION: DIGITAL TRANSISTOR



TO Y/C/AUDIO/CCD/HEAD AMP		P.CON+5V	
		GND	
FROM/TO SYSCON		AT+12.6 V	
		P.CON+12V	
		GND	
		TX	
		RX	
		AT+5.2V	
		DVD_POWER_CTL	
		VCR_POWER_ON-L	
		POWER_FAIL	
		AT+5V[M-CON]	
		AT+12.6 V	
		P.CON+5V	
		GND	
		MOTOR_GND	
		MOTOR_GND	
TO TUNER/JACK		DVD_POWER_CTL	
		P.CON+9V	
		GND	
		-3.2V	
		AT+5.2V	
		P.CON+5V	
		P.CON+12V	
		GND	
TO OPERATION/DISPLAY		P.CON+5V_DH	
		P.CON+3.3V	
		LEM_VCC	
		AT+5.2V	
		GND	
		LEM_VCC	
		AT+5.2V	
TO HI-FI/DEMODULATOR		P.CON+5V	
		P.CON+12V	
		GND	
		GND	
		AT+5V[M-CON]	
		+32V	
FROM/TO MPEG/MICON		GND	
		TX	
		RX	
		P.CON+3.3V	
		P.CON+3.3V	
		GND	
		GND	
		P.CON+5V	
		P.CON+9V A	
		P.CON+9V A	
		NC	
		P.CON+12V	
		AT+5V	

PCB010 VMC300


# OPERATION/LED SCHEMATIC DIAGRAM (OPERATION PCB)

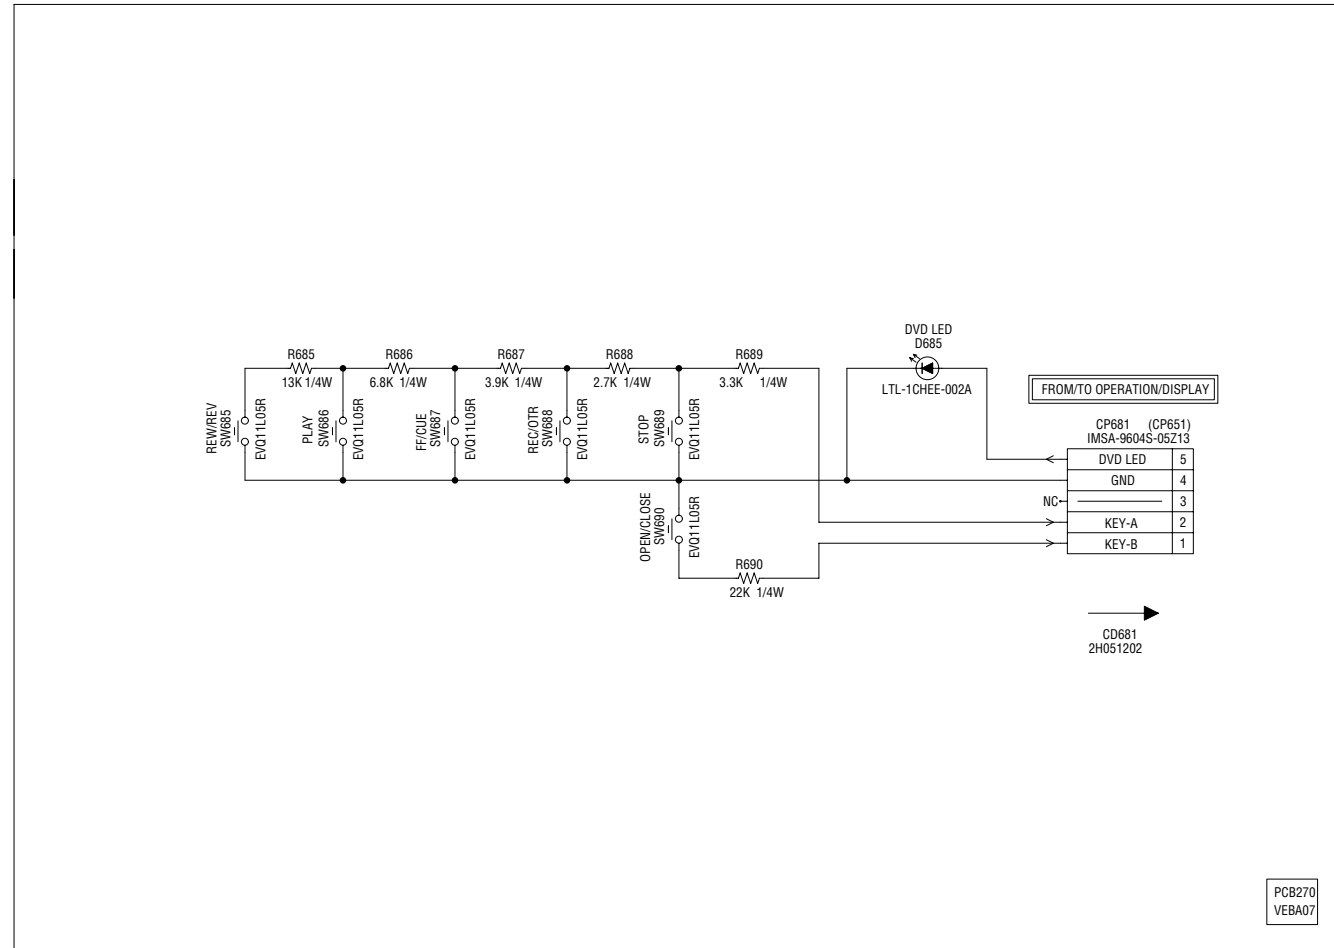

NOTE: THE DC VOLTAGE EACH PART WAS MEASURED WITH THE DIGITAL TESTER DURING PLAYBACK.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

# INTERCONNECTION DIAGRAM

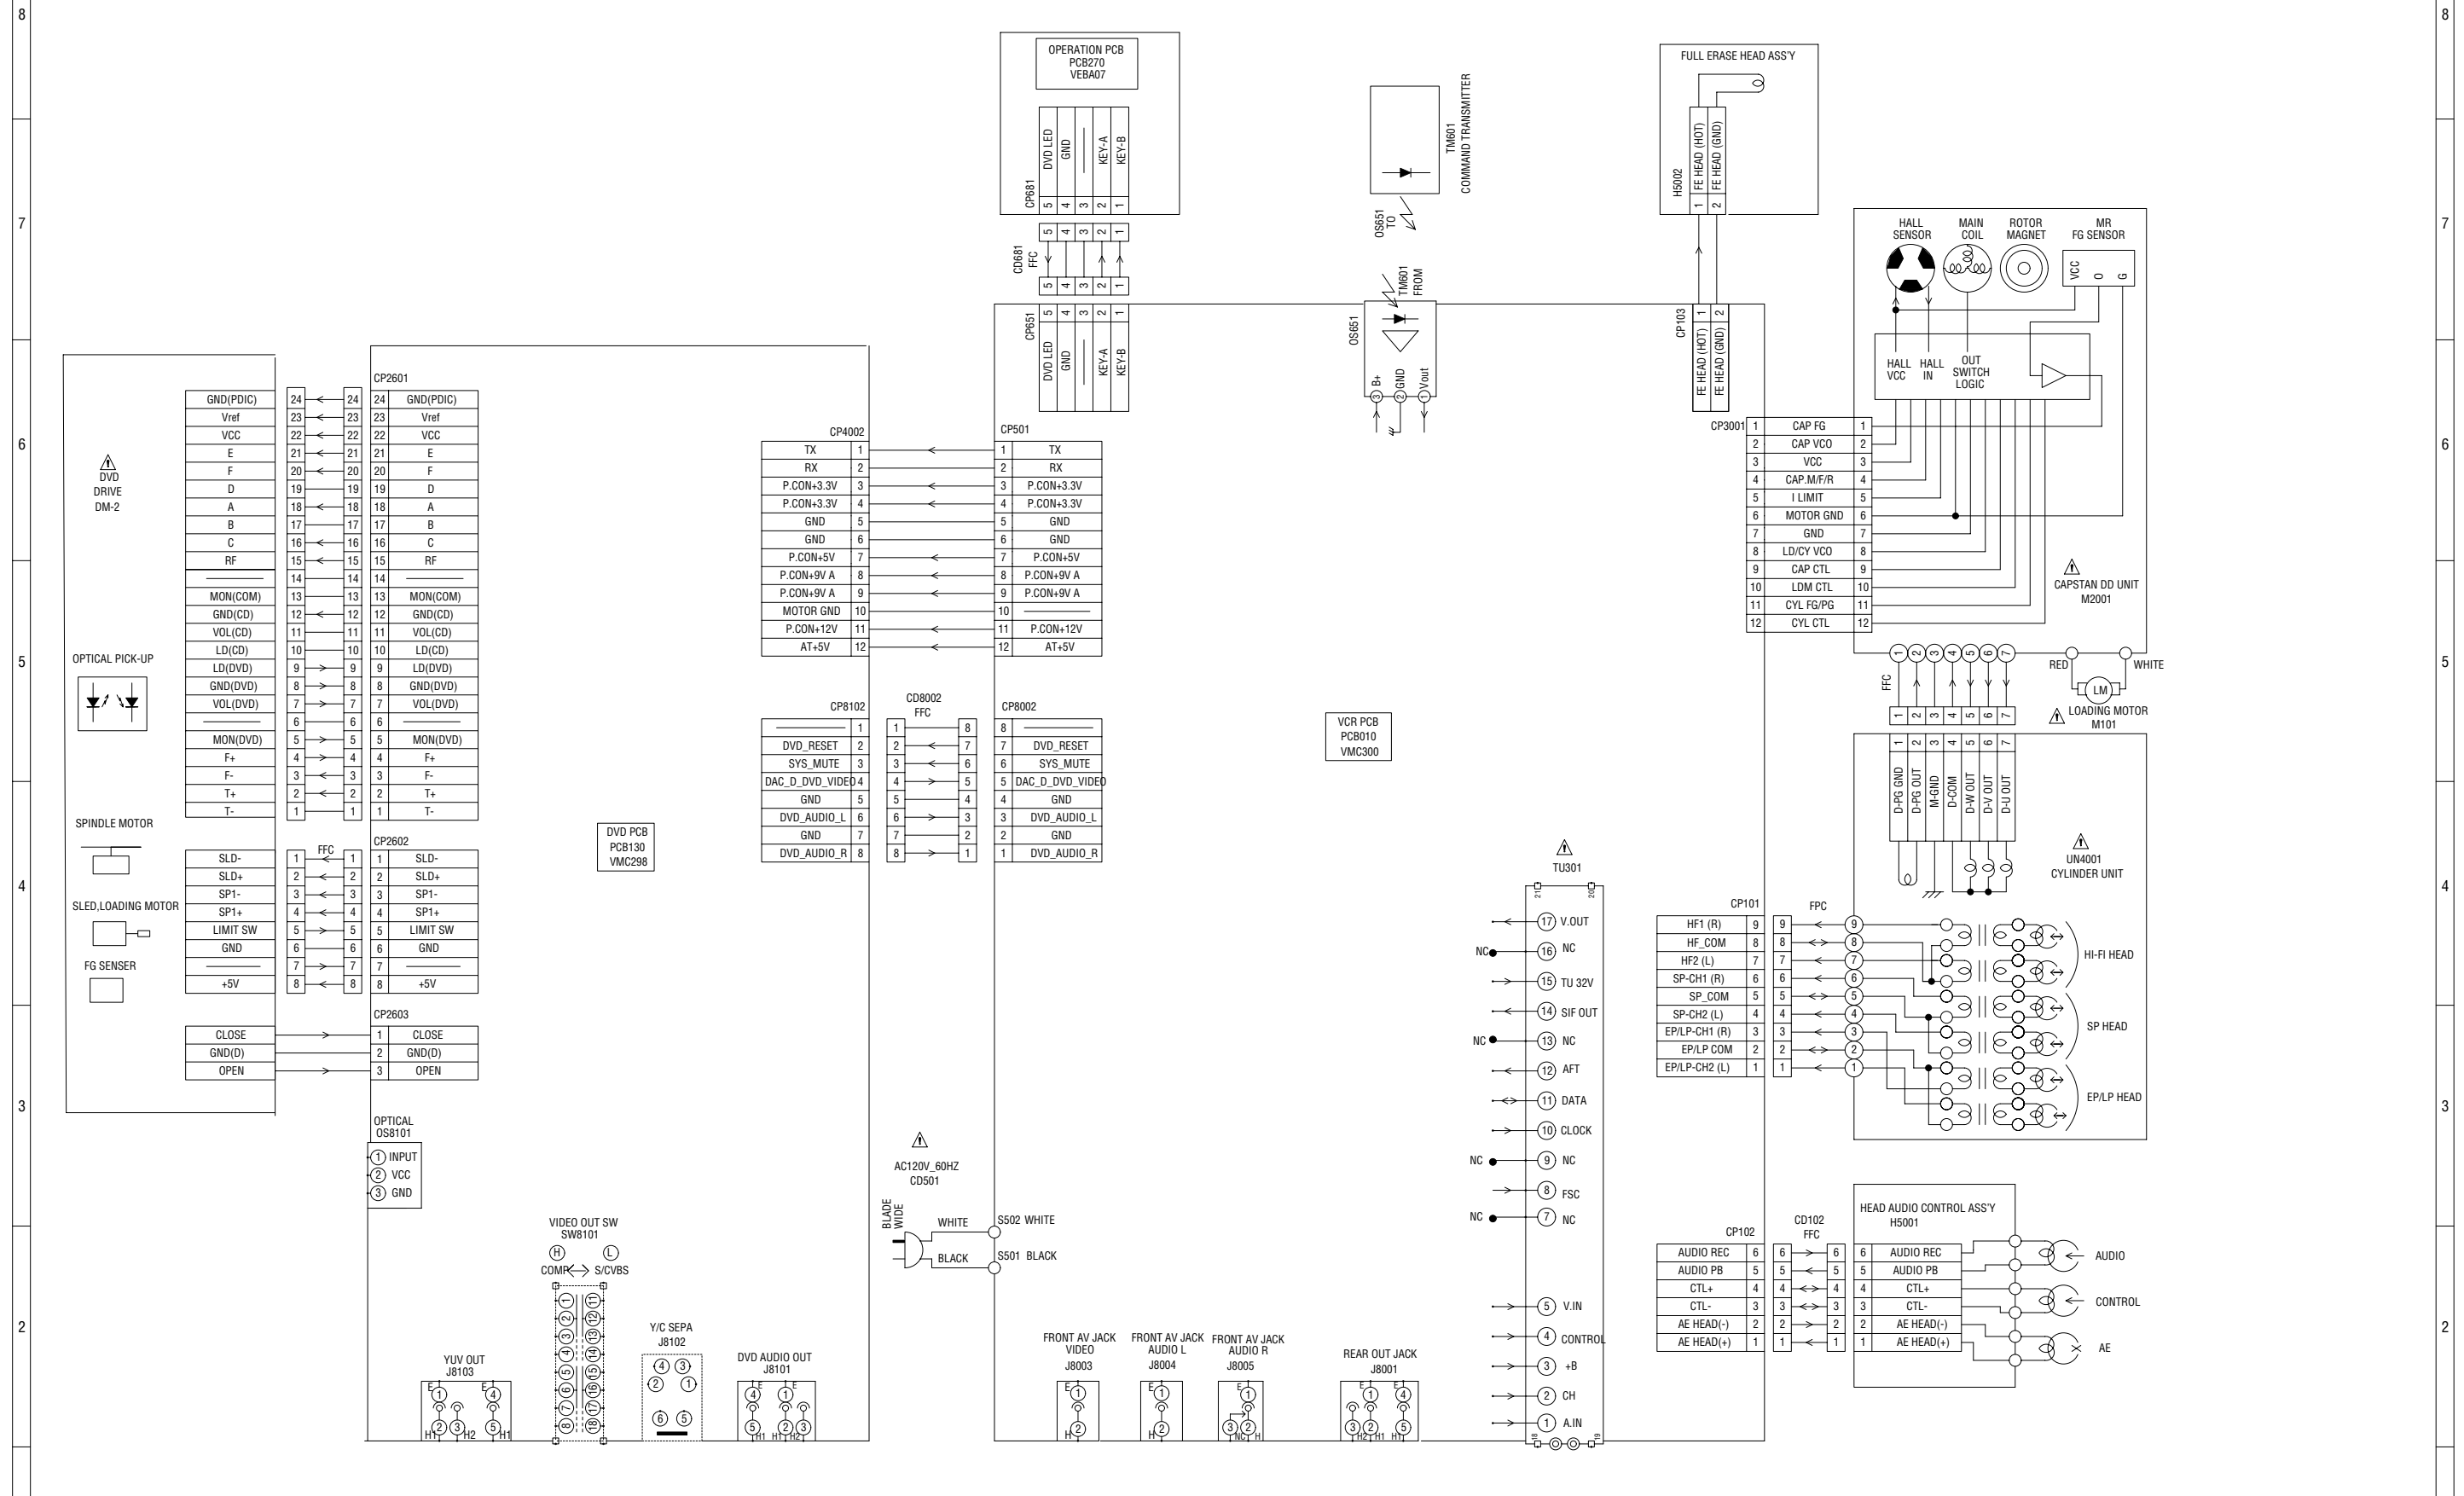




**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ, N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.




NOTE: THIS INTERCONNECTION DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

# WAVEFORMS



## MPEG/MICON

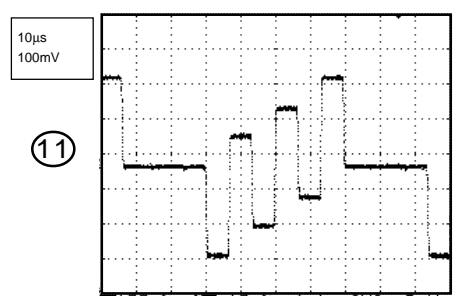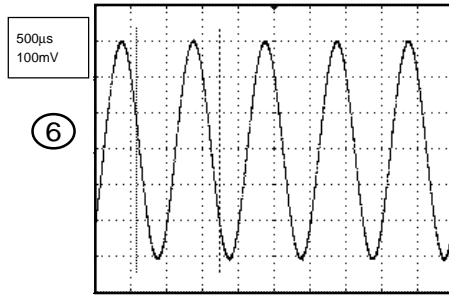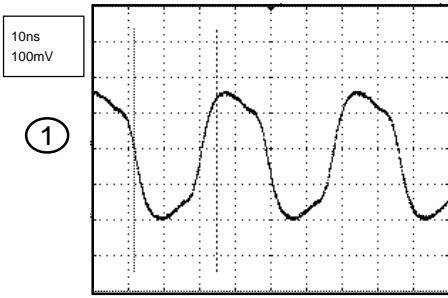





## MEMORY

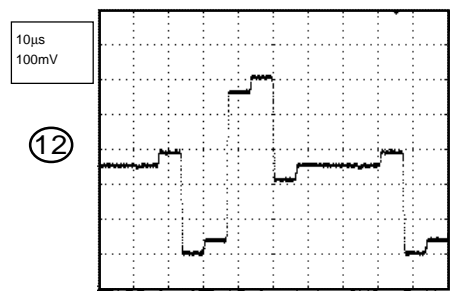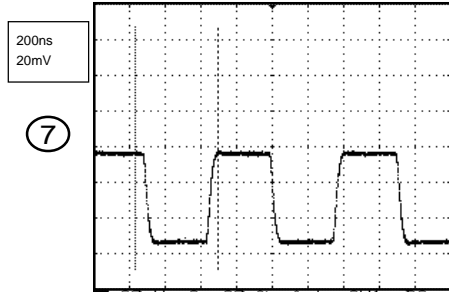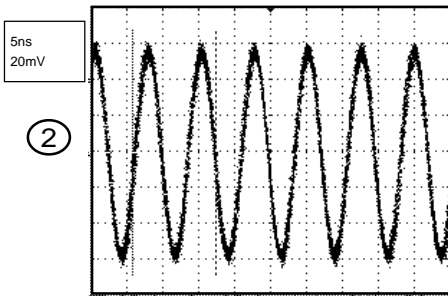




## RF AMP/DSP

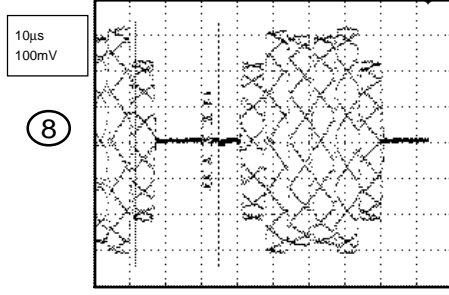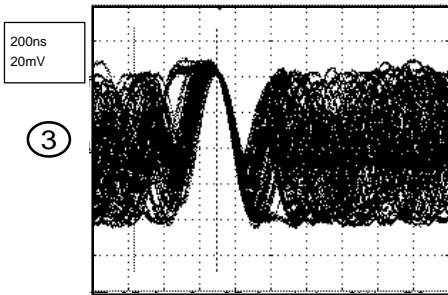

## Y/C/AUDIO/CCD/HEAD AMP

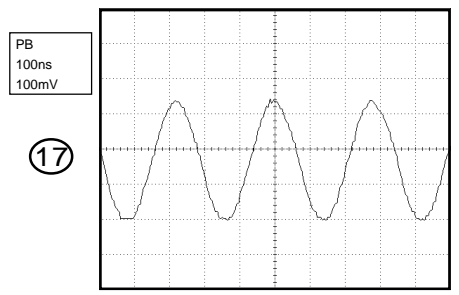
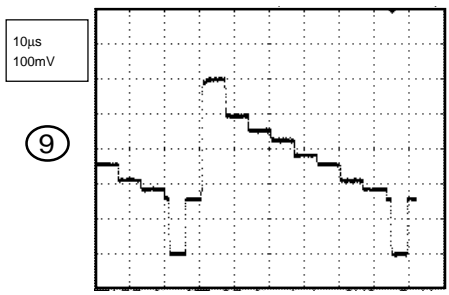
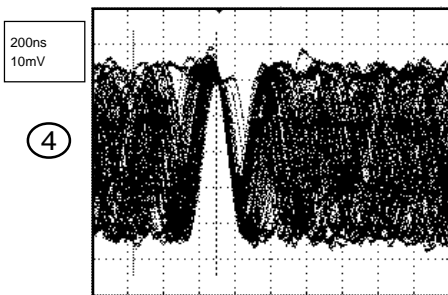
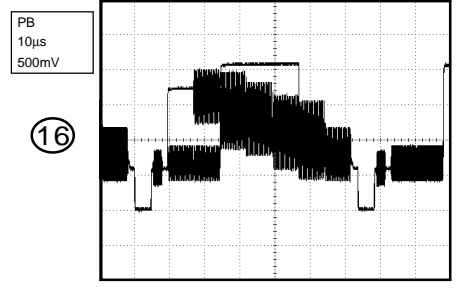


## AUDIO/VIDEO



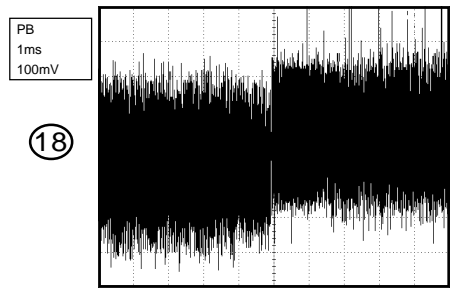
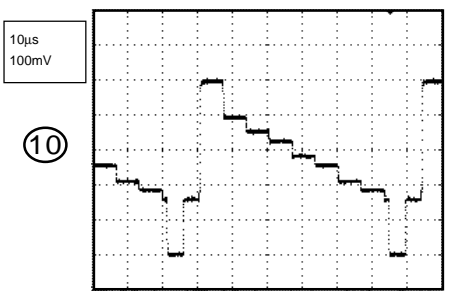
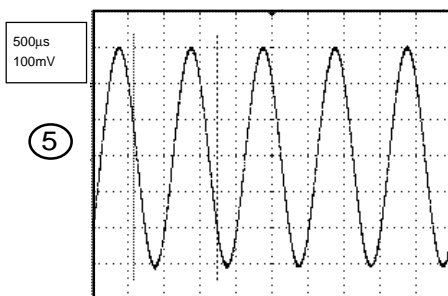


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.


# WAVEFORMS

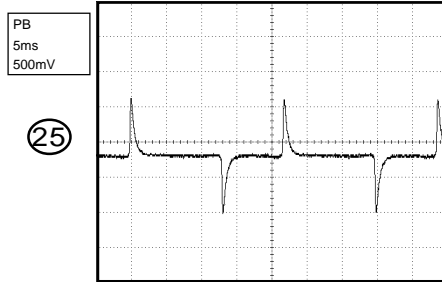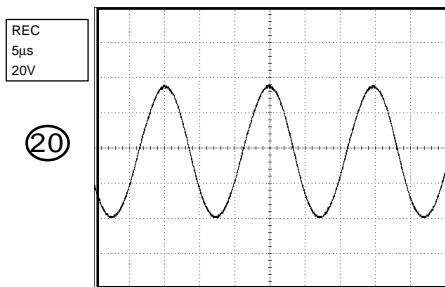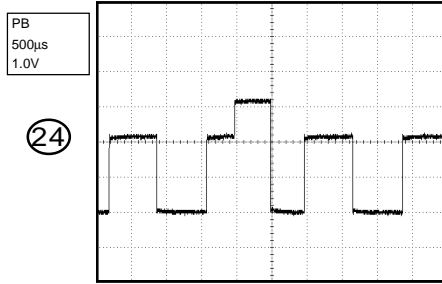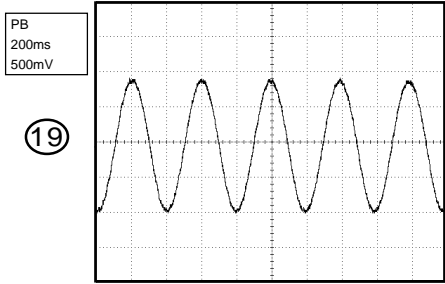



## SYSCON

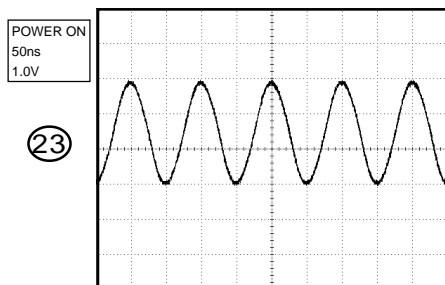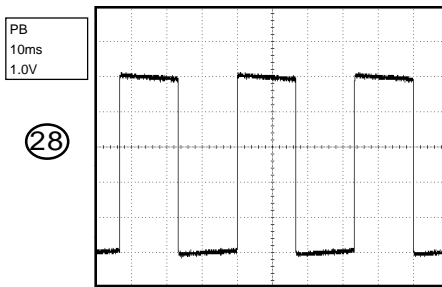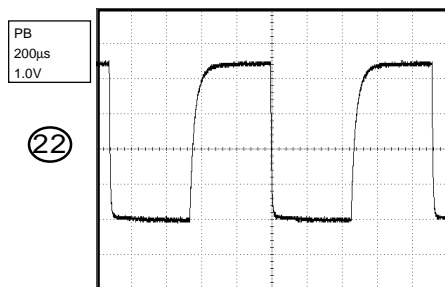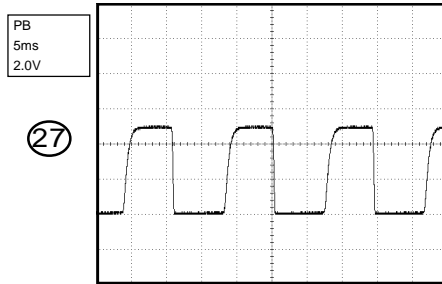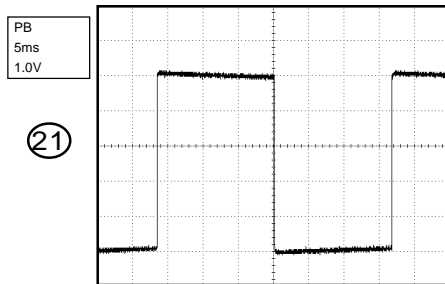

## TUNER/JACK

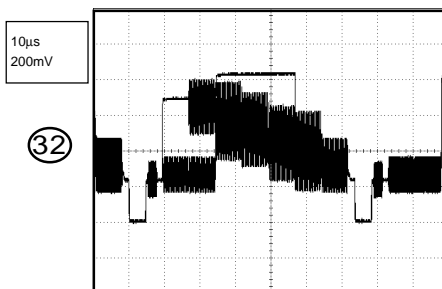


## POWER

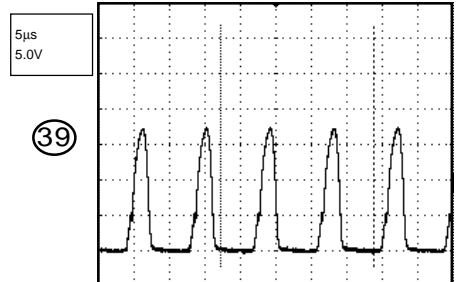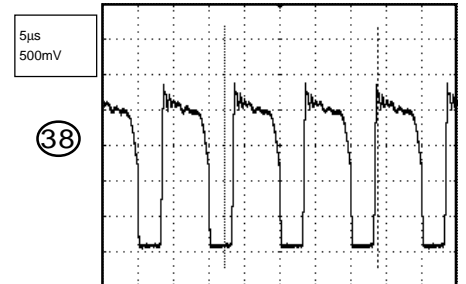


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# MECHANICAL EXPLODED VIEW

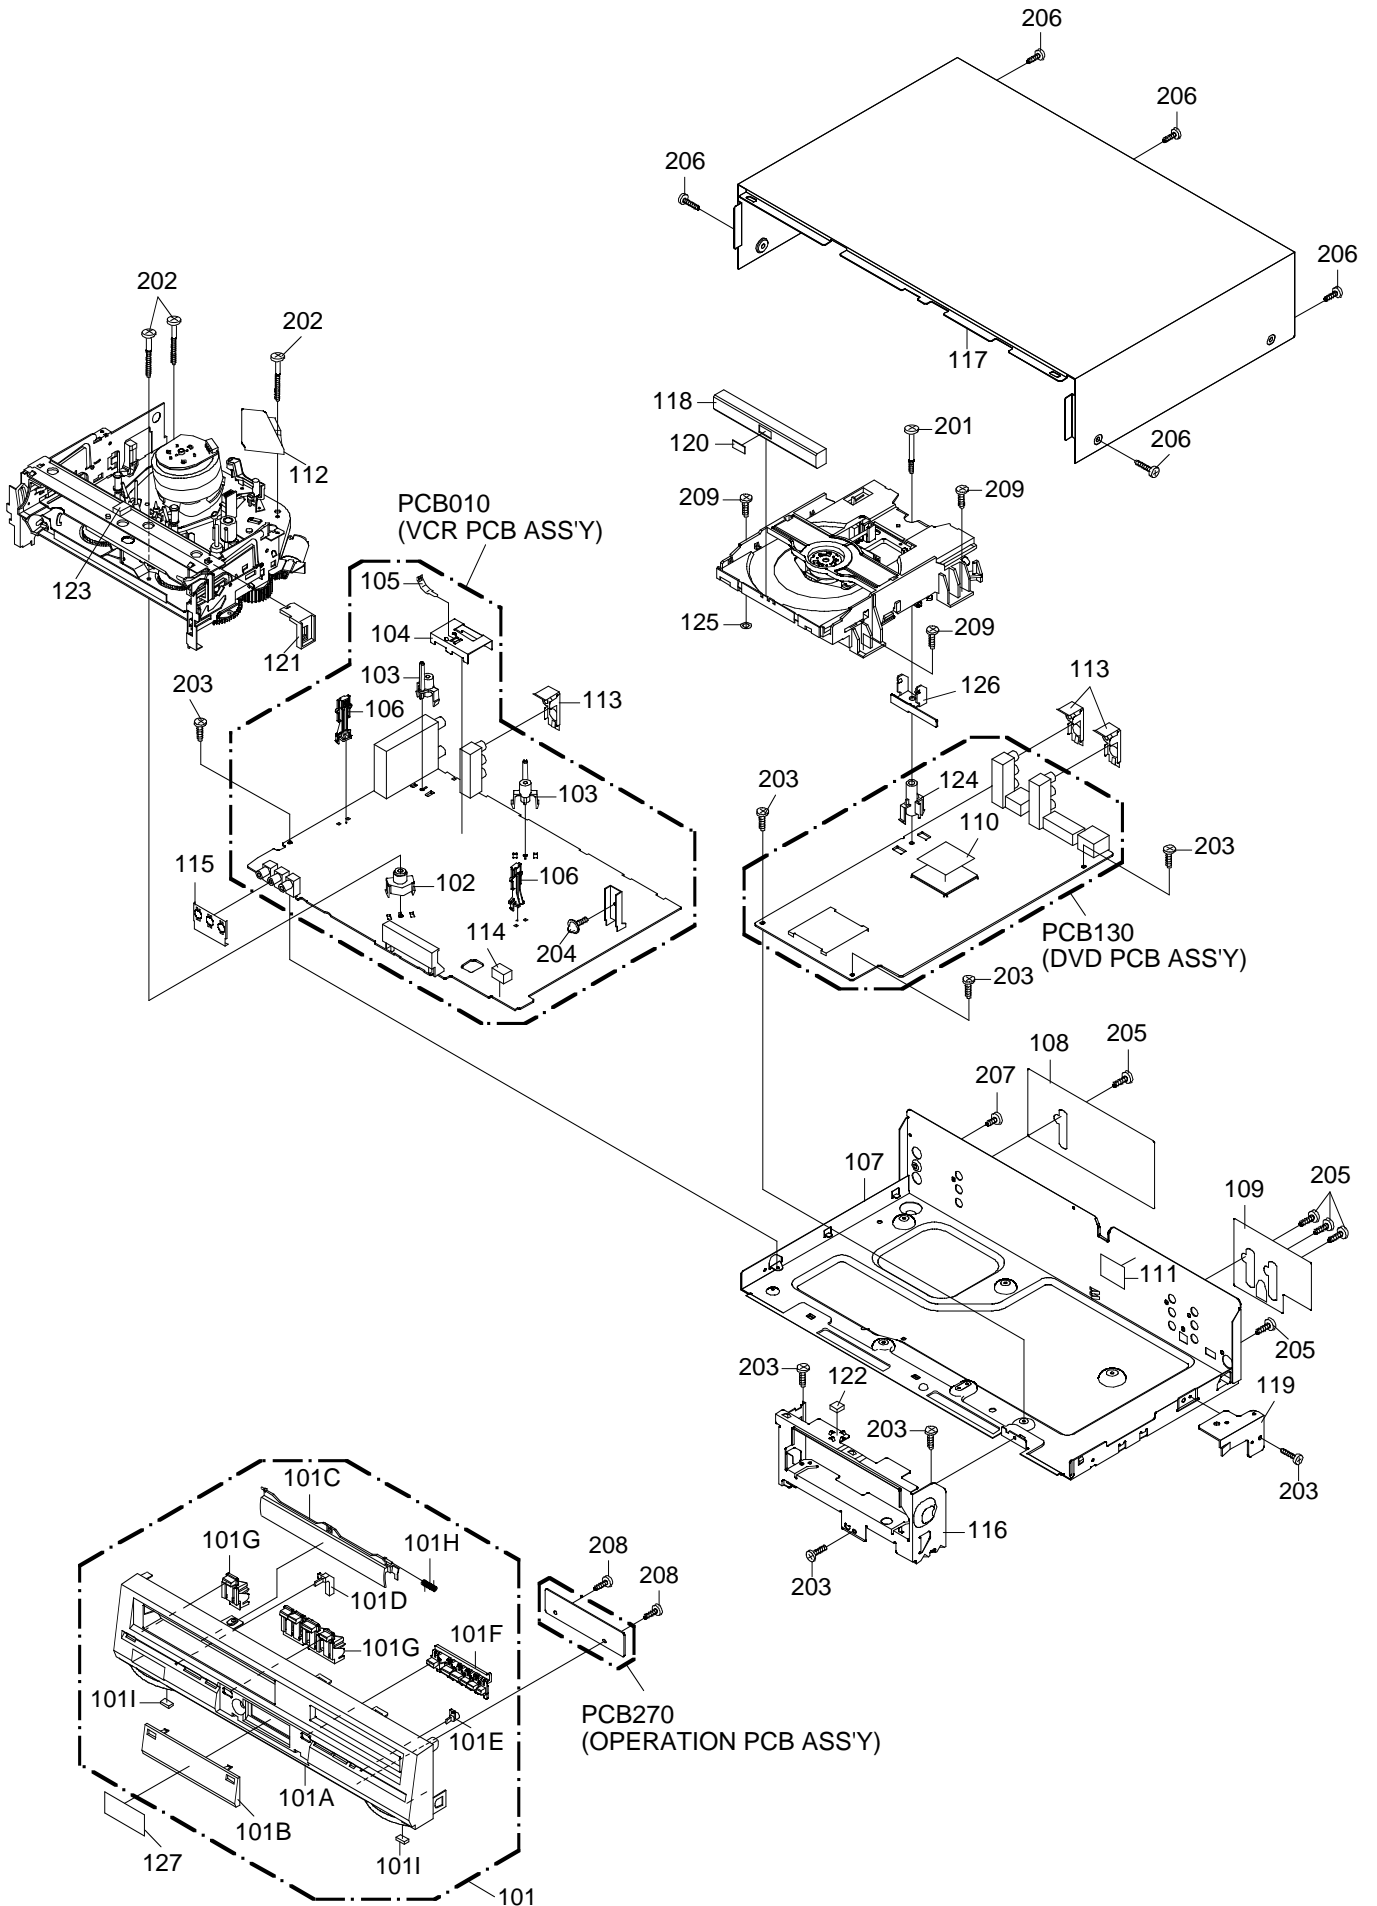

# CHASSIS EXPLODED VIEW (TOP VIEW)

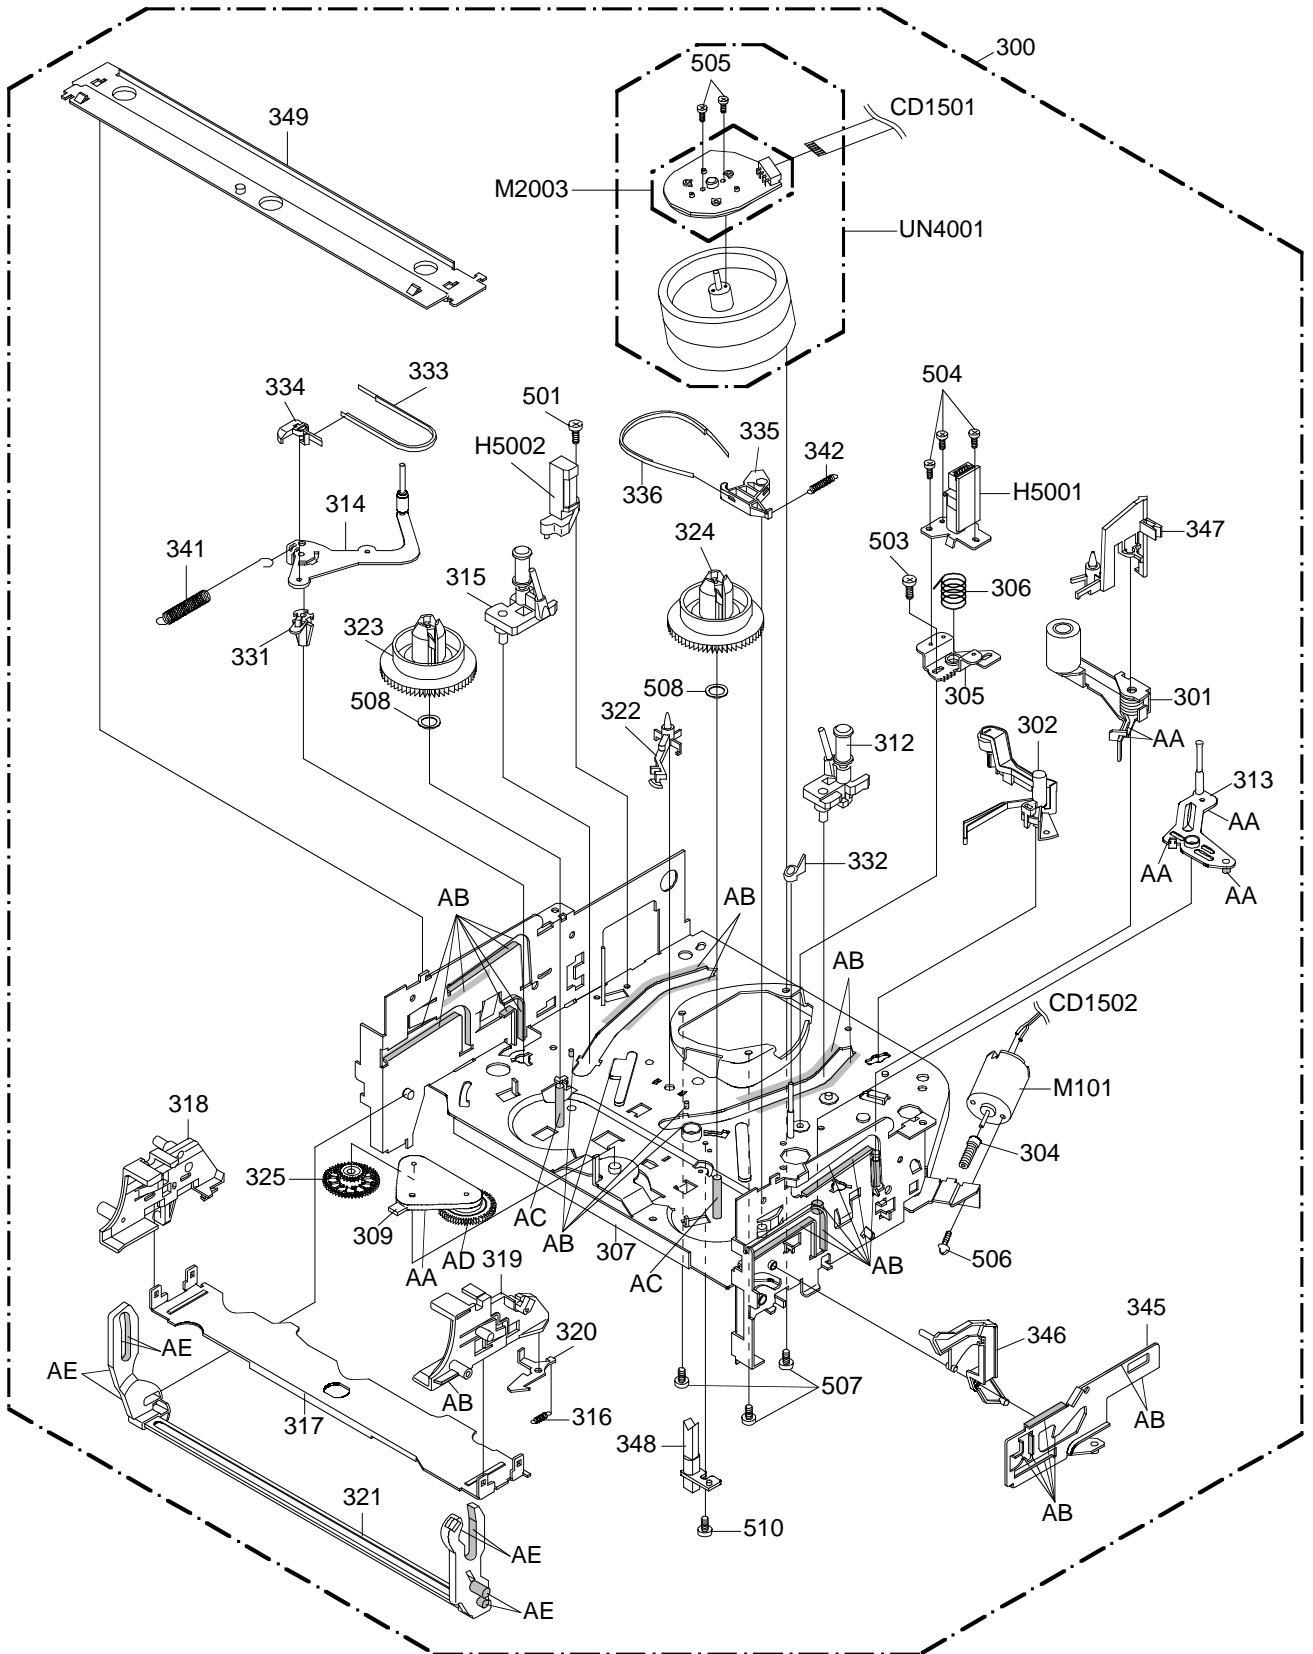


CLASS	PART NO.	PART NAME	MARK
GREASE	Y315061000	G-555G	AA
	Y315071000	MG-33	AB
	Y31D011000	FG-84M	AC
	Y315041000	FL-721	AD
	Y315141000	G-313Y	AE

**NOTE:** Applying positions AA, AB, AC, AD and AE for the grease are displayed for this section. Check if the correct grease is applied for each position.




## CHASSIS EXPLODED VIEW (BOTTOM VIEW)

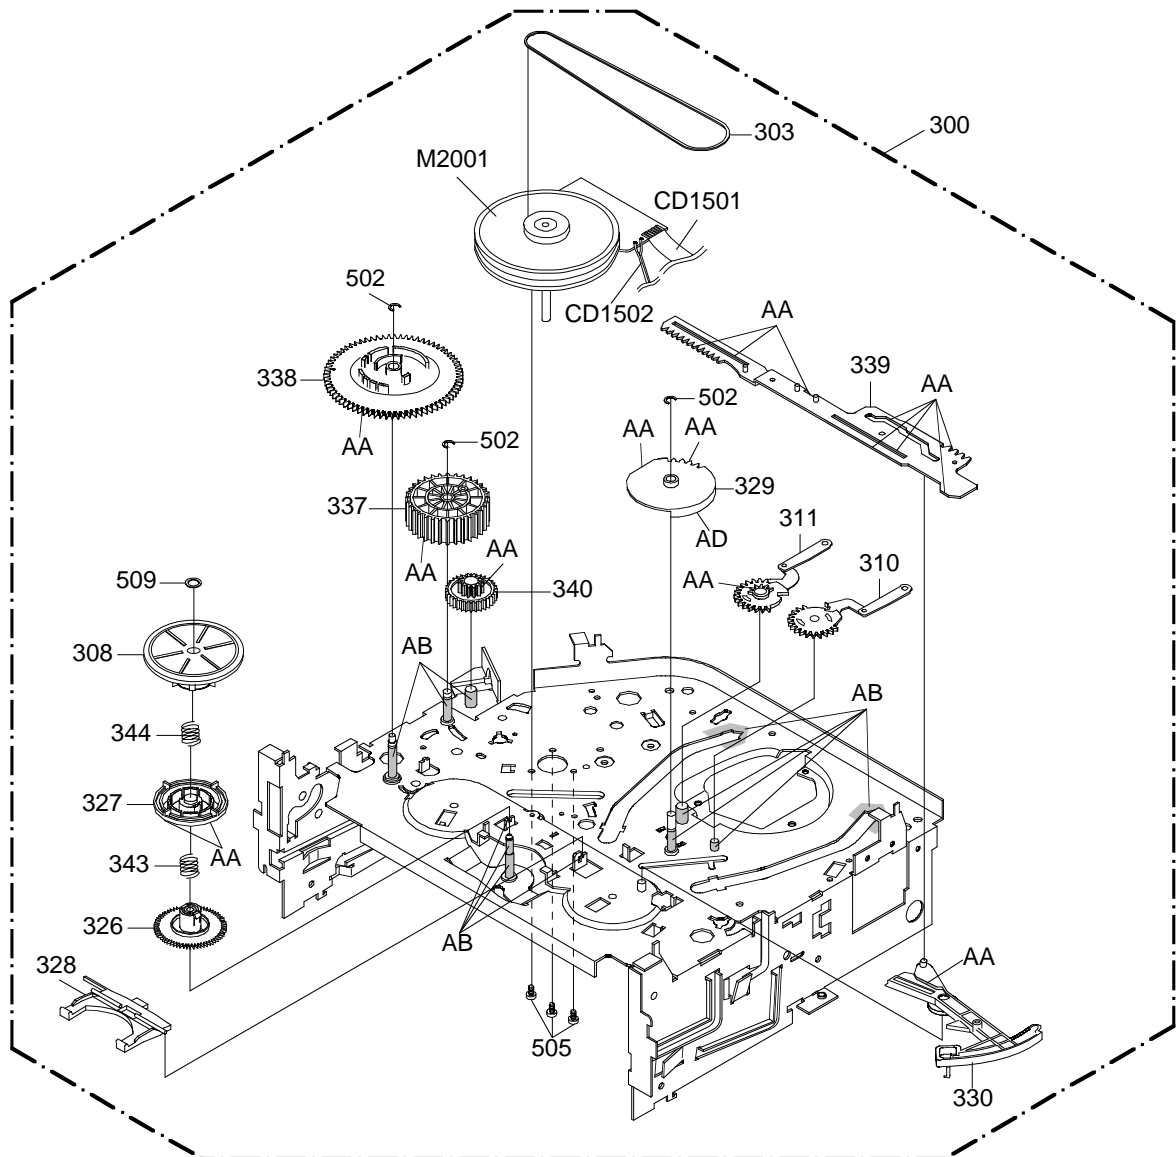

CLASS	PART NO.	PART NAME	MARK
GREASE	Y315061000	G-555G	AA
	Y315071000	MG-33	AB
	Y31D011000	FG-84M	AC
	Y315041000	FL-721	AD
	Y315141000	G-313Y	AE

**NOTE:** Applying positions AA, AB, AC, AD and AE for the grease are displayed for this section. Check if the correct grease is applied for each position.

# DVD DECK EXPLODED VIEW

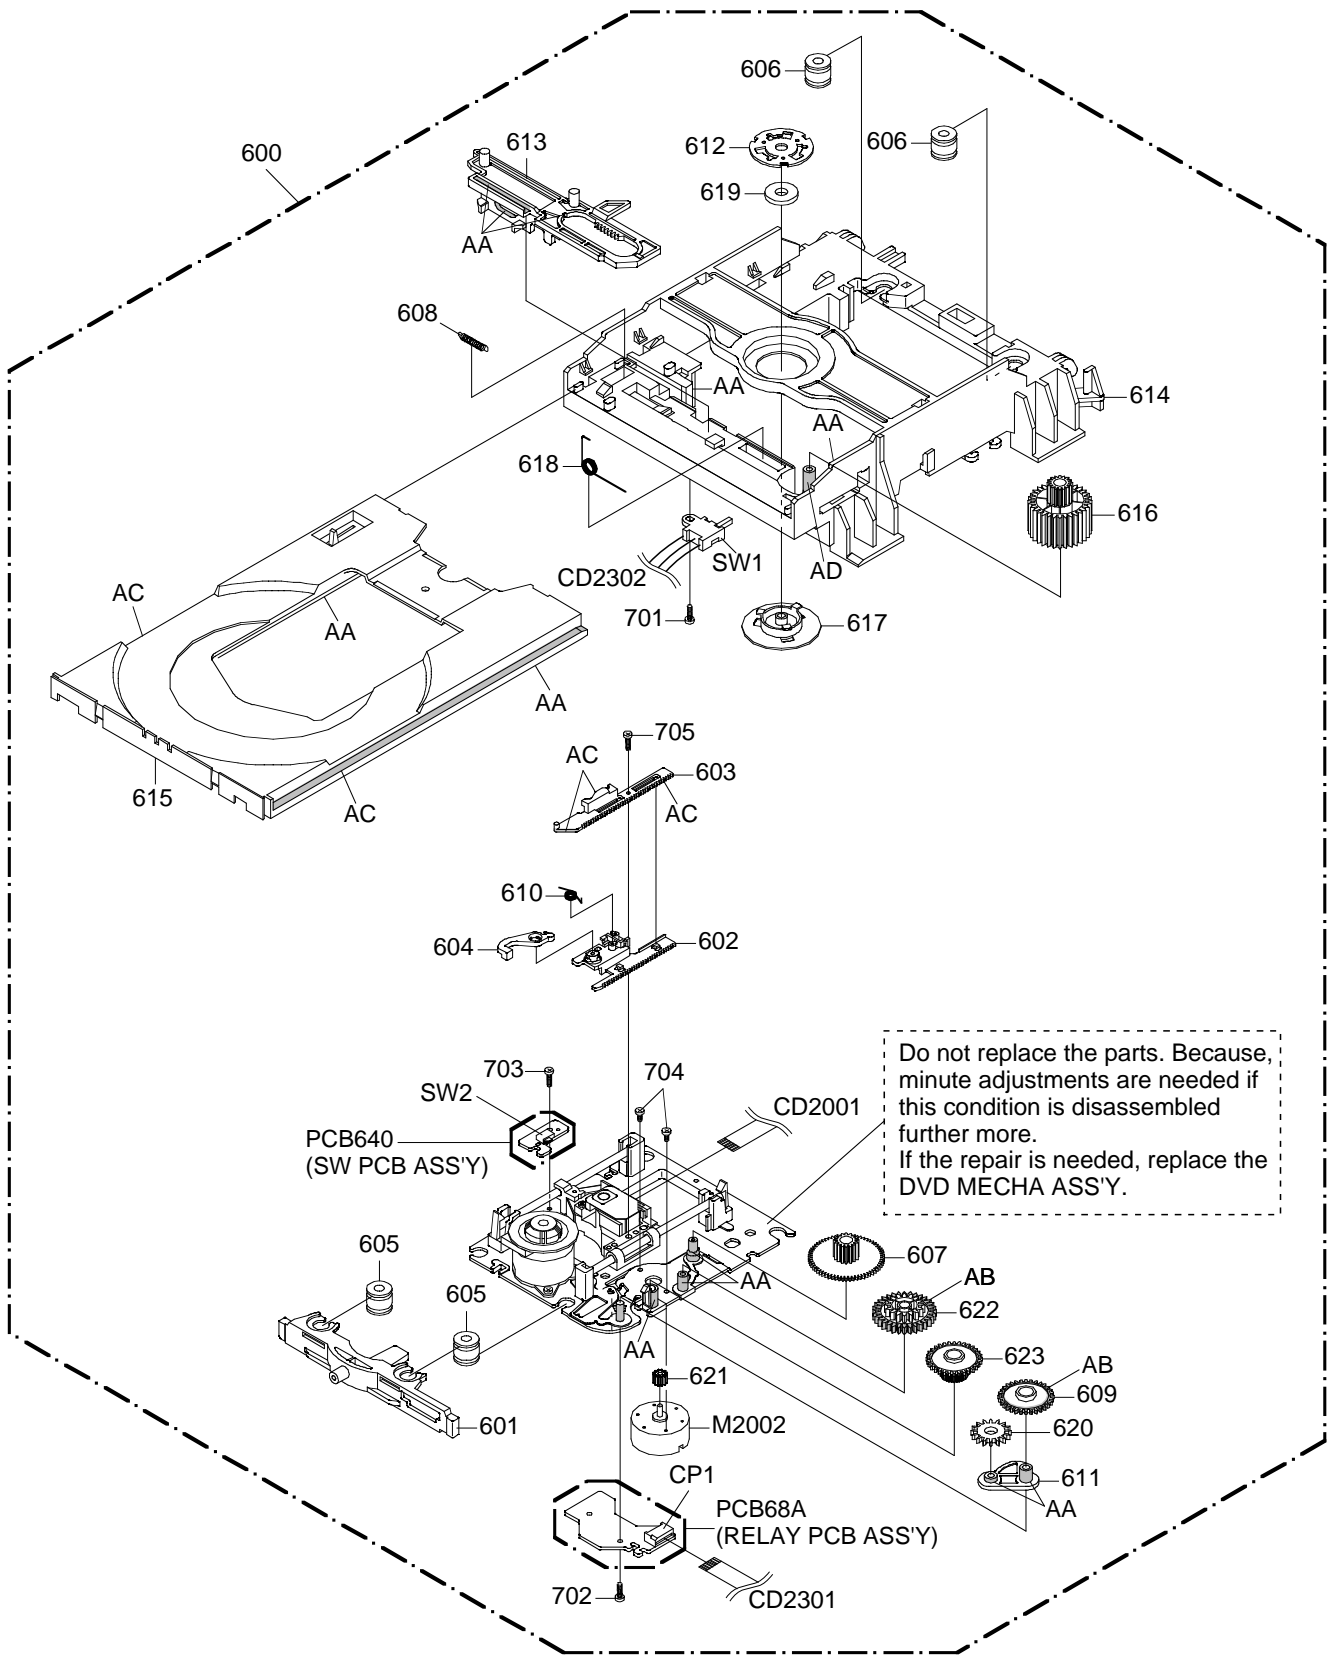

CLASS	PART NO.	PART NAME	MARK
GREASE	Y315061000	G-555G	AA
	Y315121000	G-337F	AB
	Y315131000	SF-112	AC
	Y31D031000	ORG-102	AD

**NOTE:** Applying positions AA, AB, AC and AD for the grease are displayed for this section. Check if the correct grease is applied for each position.

## MECHANICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION
101	A2C510H720	CABINET,FRONT ASS'Y
101A	701WPJC393	CABINET,FRONT
101B	711WPPA628	PLATE,DISPLAY
101C	712WPJB882	FLAP
101D	713WPA0193	GLASS,LED-VCR
101E	713WPA0194	GLASS,LED-DVD
101F	735WPB0258	BUTTON,FRAME-DVD
101G	735WPB0259	BUTTON,FRAME-VCR
101H	743WKA0042	SPRING,FLAP
101I	800WFA0051	CUSHION,LEG
102	701WPA0686	HOLDER,DECK
103	701WPA0751	HOLDER,DECK
104	752WSA0230	SHIELD,CASE HEAD AMP
105	753WUAA006	SPRING,EARTH HEAD AMP
106	85OP700038	HOLDER,END SENSOR
107	702WSA0183	PLATE,BOTTOM
	702WSAA073	PLATE,BOTTOM
108	722A08A142	SHEET,RATING
109	7230007673	SHEET,JACK
110	7232020748	SHEET,IC
111	7260000341	SHEET,CAUTION
112	752WSA0275	COVER,AC HEAD
113	752WSA0290	SHIELD,COMPO
114	800WFA0046	CUSHION
		10x15xT10
115	752WUAA001	SHIELD,3PIN
116	761WSA0127	ANGLE,FRONT
117	702WSB0086	CABINET, TOP
118	712WPB0162	PLATE,TRAY-FRONT
119	761WSA0130	ANGLE,DVD
120	7235630001	SHEET,DVD(NEW)
121	761WPA0262	HOLDER,DECK TOP
122	8965TS1010	CUSHION
		65TS 10-10H L=10
123	8965TS1017	CUSHION
		65TS 10-10H
124	761WPA0292	HOLDER,DVD
125	800WB00004	FIBER,WASHER
		7x3.2xT0.5
126	752WSA0359	ANGLE,DVD 2
127	723000A698	SHEET,DISPLAY
201	8154730414	SCREW,TAP TITE(B)
		M3x41R
202	8109130B94	SCREW,TAP TITE(B)R
		PAN 3x29
203	8109230704	SCREW,TAP TITE(B)R
		BIND 3x7
204	8109130A04	SCREW,TAP TITE(B)
		WH7 3x10
205	8109230804	SCREW,TAP TITE(B)
		BIND 3x8
206	8109K30601	SCREW,TAP TITE(B)
		BIND(3D) 3x6
207	8107130404	SCREW,TAP TITE(S)
		PAN 3x4
208	8110226804	SCREW,TAP TITE(P)
		BIND 2.6x8
209	810F130804	SEMS(F)
		3x8
---	A2C510H975	INSTRUCTION BOOK KIT
---	723000C229	LABEL BOOMERANGIT
---	791WHA0100	GIFT,SHEET
---	792WHA0489	PACKAGE,FRONT
---	792WHA0515	PACKAGE,BACK
---	793WCDB930	GIFT BOX
---	795WCA0662	PAD,DVD/VR
		155x250
---	795WCAA181	PAD,L
		(340x480x160)

## CHASSIS REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	A2C303N420K	DECK ASSY A2C303N420K	501	8107226804	SCREW,TAP TITE(S) BIND 2.6x8
			502	83ETW30000	E-RING 3
301	85OA400240	PINCH ROLLER BLOCK (VA)	503	8107226404	SCREW,TAP TITE(S) BIND 2.6x4
302	85OA500026	AHC ASS'Y	504	8102120604	SCREW,PAN M2x6
303	85OP200290	BELT,CAPSTAN (S)	505	8109126604	SCREW,TAP TITE(B) PAN 2.6x6
304	85OP600581	WORM	506	810A130404	SCREW/WASHER(A) M3x4
305	85OP500083	BASE,AC HEAD	507	810A126504	SCREW/WASHER(A) M2.6x5
306	85OP800324	SPRING,AC HEAD	508	82Q264713N	POLYSLIDER WASHER 2.6x4.7xT0.13
307	85OA000459	MAIN CHASSIS ASS'Y	509	82P184505N	POLYSLIDER WASHER(CUT) 1.8x4.5xT0.5
308	85OA200089	CLUTCH ASS'Y			
309	85OA200090	ARM IDLER ASS'Y	510	8107226604	SCREW,TAP TITE(S) BIND 2.6x6
310	85OA300065	LOADING ARM S UNIT	CD1501	122H071704	CORD JUMPER 2H071704
311	85OA300066	LOADING ARM T UNIT	CD1502	122Y021902	CORD JUMPER 2Y021902
312	85OA400223	INCLINED BASE T UINT 3S	H5001	1523Q91003	HEAD (AUDIO CONTROL) VTR-1X2RPE22-756
313	85OA400232	P5 ARM ASS'Y 2	H5002	1543Q02014	HEAD (FULL ERASE) VTR-1X2ERS11-154
314	85OA400235	TENSION ARM ASS'Y 2	△ M101	1596P98001	MOTOR (LOADING) MXN13FB12K3 or
315	85OA400231	INCLINED BASE S UNIT		1596S98001	MOTOR (LOADING) MDB2B66
316	85OP800367	SPRING LOCKER	△ M2001	1510S98038	CAPSTAN DD UNIT F2QVB33 or
317	85OP900736	CASS,HOLDER		1510S98040	CAPSTAN DD UNIT F2QVB33B
318	85OP900748	CASS,SIDE L	M2003	1589S11017	MICRO MOTOR I2OAL05
319	85OP900749	CASS,SIDE R	△ UN4001	A2C301N500	CYLINDER UNIT ASS'Y A2C301N500
320	85OP900739	LOCKER,R			
321	85OA900228	LINK UNIT			
322	85OP000496	POST,CASS GUIDE			
323	85OP200316	REEL,S (S)			
324	85OP200317	REEL,T (S)			
325	85OP200308	GEAR,IDLER			
326	85OP200311	GEAR,CLUTCH			
327	85OP200312	GEAR,COUPLING			
328	85OP200313	LEVER,CLUTCH			
329	85OP300194	GEAR,MAIN LOADING			
330	85OP400490	LEVER,TENSION			
331	85OP400492	HOLDER,TENSION			
332	85OP400520	CAP.P4			
333	85OP400542	BAND,TENSION			
334	85OP400533	CONNECT,TENSION			
335	85OP600573	ARM,BRAKE T			
336	85OP600584	BAND,BRAKE T			
337	85OP600577	CAM,PINCH ROLLER			
338	85OP600578	CAM,MAIN			
339	85OP600579	ROD,MAIN			
340	85OP600582	GEAR,JOINT			
341	85OP800322	SPRING,TENSION			
342	85OP800360	SPRING,BRAKE T			
343	85OP800355	SPRING,COUPLING			
344	85OP800356	SPRING,RING			
345	85OP900750	LEVER,LINK 2			
346	85OP900744	LEVER,FLAP			
347	85OP900745	CASS,OPENER			
348	85OP700035	REFLECTOR,LED			
349	85OP900746	BRACKET, TOP 3V			

## DVD DECK REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	
600	A5E602V650P	DVD MECHA ASS'Y	A5E602V650P
601	92P100022A	TRAVERSE HOLDER	
602	92P100080A	RACK,FEED 1A	
603	92P100081A	RACK,FEED 2A	
604	92P100035A	LEVER,RACK FEED	
605	92P200006A	INSULATOR(F)	
606	92P200007A	INSULATOR(R)	
607	92P100029A	GEAR,FEED	
608	92P300009A	SPRING,RACK L	
609	92P100028A	GEAR,MIDDLE 3	
610	92P300019A	SPRING,RACK FEED 1A	
611	92P100040A	ARM,IDLER 2	
612	92P000001A	CLAMPER PLATE	
613	92P100019A	RACK,LOADING	
614	92P100020A	MAIN FRAME M	
615	92P100021A	TRAY	
616	92P100023A	GEAR,MAIN	
617	92P100082A	CLAMPER 2	
618	92P300002A	SPRING,RACK LOADING	
619	92P400002A	MAGNET,CLAMPER	
620	92P100030A	GEAR,IDLER	
621	92P100025A	GEAR,MOTOR	
622	92P100083A	GEAR,MIDDLE 1	
623	92P100027A	GEAR,MIDDLE 2	
701	8110226804	SCREW,TAP TITE(P) BIND	2.6x8
702	8110120604	SCREW,TAP TITE(P) PAN	2x6
703	8107220504	SCREW,TAP TITE(S) BIND	2x5
704	8140117254	SCREW,PAN	M1.7x2.5 P3
705	8110220804	SCREW,TAP TITE(P) BIND	2x8
CD2001	122H001901	CORD JUMPER	2H001901
CD2301	122H080701	CORD JUMPER	2H080701
CD2302	06CH232101	CORD CONNECTOR	232101
CP1	069JV80180	CONNECTOR PCB SIDE	IMSA-9615S-08C-PP
△ M2602	1515S98001	FEED MOTOR	BCD3B81
PCB640	A5E601V640	PCB ASS'Y	BEC001A
PCB68A	A5E601V680	PCB ASS'Y	BEC002A
SW1	0515S32001	SWITCH	SSS-23-6
SW2	0500101036	PUSH SWITCH	ESE22MH22

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>RESISTORS</b>			<b>ICs</b>		
△ R501	R0G3K2335K	RC 3.3M OHM 1/2W	△ IC502	I1KA98R09A	IC KIA78R09API
△ R502	R3X181R82J	R,METAL OXIDE 0.82 OHM 1W	△ IC503	000220001W	PHOTO COUPLER PS2561L1-1-V(W)
△ R512	R3X181688J	R,METAL OXIDE 68K OHM 1W	IC701	I01F63FBP0	IC AN3663FBP
△ R516	R63581R22J	R,FUSE 0.22 OHM 1W	IC2301	I03F065600	IC LA6560
△ R517	R002T2821J	RC 820 OHM 1/2W	IC2601	ICQK067070	IC ZR36707TQC
△ R545	R65584150J	R,FUSE 15 OHM 1/4W	IC2602	I07E00358F	IC BA10358F-E2
<b>CAPACITORS</b>			IC3001	I54F50138B	IC OEC0138B
△ C501	E02LF2222M	CE 2200 UF 16V	IC3003	I9UF032310	IC PST3231NR
△ C502	P2122B104M	CMP 0.1 UF 275V ECQUL	IC3099	A2C509K015	IC AT24C04N-10SI-2.7
△ C505	E02LU2101M	CE 100 UF 16V	IC4001	ICQK067620	IC ZR36762
△ C511	E62QFC470M	CE 47 UF 200V	IC4002	ICRJ0C04N0	IC AT24C04N-10SI-2.7 or
C513	COPLRR7H2K	CC 220 PF 2KV R		I5HJ004BF0	IC S-24C04BFJ-TB
△ C514	E02LU2101M	CE 100 UF 16V	IC4003	I0GF9XZ010	IC PQ070XZ012P
△ C515	COJ0B0514K	CC 0.01 UF 500V B	IC4005	IF9J0164A7	IC M12L64164A-7T or
△ C516	CD39E0MQ3M	CC 0.0047UF 250V		IF9J0164A6	IC M12L64164A-6T or
△ C518	E62F00222M	CE 2200 UF 6.3V		IF3J00HGT7	IC HY57V641620HGT-7
△ C519	E02L01222M	CE 2200 UF 10V	IC4007	ICMJ0800A7	IC SST39VF800A-70-4C-EK or
△ C521	E02LU2101M	CE 100 UF 16V		ICMJ0800A8	IC SST39VF800A-70-4C-EK-D
△ C522	E02LU5220M	CE 22 UF 50V	IC7301	I17F0742K0	IC PCM1742KE/2K
C525	COPLRR7U2K	CC 680 PF 2KV R	IC8005	I0UF015010	IC MM1501XNRE
△ C540	E62QFC470M	CE 47 UF 200V	IC8101	I0QJ045800	IC NJM4580M(TE1)
<b>DIODES</b>			<b>TRANSISTORS</b>		
△ D502	D2WXN40050	DIODE SILICON 1N4005-EIC	Q101	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
△ D503	D2WXN40050	DIODE SILICON 1N4005-EIC	Q102	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
D504	D1VT001330	DIODE,SILICON 1SS133T-77	Q103	TPAAC05002	COMPOUND TRANSISTOR
△ D505	D2WXN40050	DIODE SILICON 1N4005-EIC	Q104	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ D506	D2WXN40050	DIODE SILICON 1N4005-EIC	Q105	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
△ D507	D23TGP15J0	DIODE SILICON RGP15J-G23	Q106	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
D509	D2WXGP10J0	DIODE RECTIFIER RGP10J-EIC	Q107	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
△ D510	D97U02701B	DIODE,ZENER MTZJ27B T-77 or	Q109	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
	D97T02701D	DIODE,ZENER MTZJ27D T-77	Q301	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
△ D511	D28T21DQN4	DIODE SCHOTTKY 21DQ04N-TA2B1	△ Q501	TJXG5NC500	FET STP5NC50FP
△ D512	D28T21DQN4	DIODE SCHOTTKY 21DQ04N-TA2B1	△ Q502	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
△ D513	D2WXN40050	DIODE SILICON 1N4005-EIC	△ Q503	TCAT03209Y	TRANSISTOR SILICON KTC3209_Y-AT
D514	D97U01201B	DIODE,ZENER MTZJ12B T-77	△ Q504	TAAT012714	TRANSISTOR, SILICON KTA1271_Y-AT
△ D515	D28T21DQN4	DIODE SCHOTTKY 21DQ04N-TA2B1	△ Q505	TCAT03209Y	TRANSISTOR SILICON KTC3209_Y-AT
D518	D1VT001330	DIODE,SILICON 1SS133T-77	Q506	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
△ D522	D28TELS6N6	DIODE RECTIFIER 10ELSGN-TA1B2	Q507	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
△ D523	D97U03301B	DIODE,ZENER MTZJ33B T-77	Q508	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
D524	D1VT001330	DIODE,SILICON 1SS133T-77	Q509	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D526	D97U03R31B	DIODE,ZENER MTZJ3.3B T-77	△ Q510	TCAT032034	TRANSISTOR, SILICON KTC3203_Y-AT
D528	D1VT001330	DIODE,SILICON 1SS133T-77	△ Q511	TAAT01241Y	TRANSISTOR SILICON KTA1241_Y-AT
D530	D28TELS6N6	DIODE RECTIFIER 10ELSGN-TA1B2	Q513	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S
D531	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77	Q514	T8YJ2412K0	TRANSISTOR SILICON 2SC2412KT146 R,S
D532	D97U03R31B	DIODE,ZENER MTZJ3.3B T-77	Q530	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK
D534	D1VT001330	DIODE,SILICON 1SS133T-77	Q531	T6YJ1037K0	TRANSISTOR,SILICON KTA15037AKT146R,S
D535	D1VT001330	DIODE,SILICON 1SS133T-77	Q651	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
D536	D1VT001330	DIODE,SILICON 1SS133T-77	Q652	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D537	D1VT001330	DIODE,SILICON 1SS133T-77	Q653	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D538	D1VT001330	DIODE,SILICON 1SS133T-77	Q654	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
D539	D1VT001330	DIODE,SILICON 1SS133T-77	Q655	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D651	0021E2Q140	LED LTL-1CHEE-002A	Q656	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D656	D2WXN40050	DIODE SILICON 1N4005-EIC	Q657	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D685	0021E2Q140	LED LTL-1CHEE-002A	Q658	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D701	D1VT001330	DIODE,SILICON 1SS133T-77	Q659	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
D702	D97U05R11B	DIODE,ZENER MTZJ5.1B T-77	Q660	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D2601	DDARDS1200	DIODE SILICON KDS120RTRK	Q661	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
D3001	0010E00330	INFRARED LED LTE-3271T-012A-O	Q662	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D3007	D1VT001330	DIODE,SILICON 1SS133T-77	Q663	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D3009	D1VT001330	DIODE,SILICON 1SS133T-77	Q664	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
D8002	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	Q665	TAAA1504SY	TRANSISTOR SILICON KTA1504S_Y_RTK
D8003	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77	Q666	TPAAC05002	COMPOUND TRANSISTOR KRA103SRTK
D8008	D1VT001330	DIODE,SILICON 1SS133T-77	Q2601	T67J1036K0	TRANSISTOR SILICON 2SA1036KT146
D8101	DDDRL41480	DIODE SILICON MCL4148	Q2602	T67J1036K0	TRANSISTOR SILICON 2SA1036KT146
D8102	DDDRL41480	DIODE SILICON MCL4148	Q2603	T27T030180	FET 2SK3018
D8103	DDDRL41480	DIODE SILICON MCL4148	Q2604	T27T030180	FET 2SK3018
D8106	DDDRL41480	DIODE SILICON MCL4148	Q2605	T27T030180	FET 2SK3018
D8107	DDDRL41480	DIODE SILICON MCL4148	Q3001	0002700690	PHOTO COUPLER RPI-303
D8108	DDDRL41480	DIODE SILICON MCL4148	Q3002	0002700690	PHOTO COUPLER RPI-303
D8109	DDDRL41480	DIODE SILICON MCL4148	Q3003	TPAAC05002	COMPOUND TRANSISTOR KRA103SRTK
D8110	DDDRL41480	DIODE SILICON MCL4148	Q3004	0002700680	PHOTO COUPLER RPI-352C40N
D8111	DDDRL41480	DIODE SILICON MCL4148	Q3005	0002700680	PHOTO COUPLER RPI-352C40N
D8112	DDDRL41480	DIODE SILICON MCL4148	Q3006	0000M00390	PHOTO TRANSISTOR ST-304L
D8113	DDDRL41480	DIODE SILICON MCL4148	Q3007	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
<b>ICs</b>			Q3008	0000M00390	PHOTO TRANSISTOR ST-304L
IC101	I03F3206M0	IC LA71206M-MPB	Q8003	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK
△ IC501	I1KJ9A4310	IC KIA431	Q8004	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)

# ELECTRICAL REPLACEMENT PARTS LIST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>TRANSISTORS</b>			<b>MISCELLANEOUS</b>		
Q8005	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK	B4006	024HC31022	CORE,BEADS FCM2012H-102T04
Q8006	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK	B4007	024HC31022	CORE,BEADS FCM2012H-102T04
Q8007	TPAAC05002	COMPOUND TRANSISTOR KRA103SRTK	B4008	024HC31022	CORE,BEADS FCM2012H-102T04
Q8101	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK	B7301	024HC31022	CORE,BEADS FCM2012H-102T04
Q8102	TNAAC05002	COMPOUND TRANSISTOR KRC103SRTK	B7302	024HC31022	CORE,BEADS FCM2012H-102T04
Q8103	TPAAA05001	COMPOUND TRANSISTOR KRA101SRTK	B8101	024HC31022	CORE,BEADS FCM2012H-102T04
Q8104	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK	B8102	024HC31022	CORE,BEADS FCM2012H-102T04
Q8105	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK	B8103	024HC31022	CORE,BEADS FCM2012H-102T04
Q8106	TNAAD05001	COMPOUND TRANSISTOR KRC104SRTK	CD102	122H061504	CORD JUMPER 2H061504
Q8107	TCAA3875SY	TRANSISTOR SILICON KTC3875S_Y_RTK	△ CD501	1209419910	CORD AC BUSH 9419910
<b>COILS &amp; TRANSFORMER</b>			CD681	122H051202	CORD JUMPER 2H051202
L101	031626009R	COIL,BIAS OSC 1626009	CP101	0697290620	CONNECTOR PCB SIDE TOC-C09X-A1
L102	02167F101J	COIL 100 UH	CP102	069J760599	CONNECTOR PCB SIDE IMSA-9604S-06C
L103	0216A65R6K	COIL 5.6 UH	CP103	067U002019	WIRE HOLDER B2013H02-2P
L105	02167F101J	COIL 100 UH	CP501	06CH2C0302	CORD CONNECTOR CH2C0302
L106	02167F220J	COIL 22 UH	CP651	069J750019	CONNECTOR PCB SIDE IMSA-9604S-05Z13
L107	02167F220J	COIL 22 UH	CP681	069J750019	CONNECTOR PCB SIDE IMSA-9604S-05Z13
L301	02167F220J	COIL 22 UH	CD6002	06CPL02006	CABLE CPL02006
△ L501	029T000107	COIL,LINE FILTER 0R4A223F20	CD6003	06CPBA2003	CORD,RCA PIN TD-020301-3
L502	02AHB0A0A4	CORE,FERRITE W5T_20*10*10A	CD8002	122F080601	CORD JUMPER 2F080601
L505	02167F220J	COIL 22 UH	CP2601	069GY0T079	CONNECTOR PCB SIDE 09-5000-024-001-006
△ L506	02167E220K	COIL 22 UH	CP2602	069EV83010	CONNECTOR PCB SIDE 00_6232_008_006_800
L701	02167F220J	COIL 22 UH	CP2603	069S230629	CONNECTOR PCB SIDE A2001WV2-3P
L702	02167F220J	COIL 22 UH	CP3001	06972C0010	CONNECTOR PCB SIDE TMC-J12P-B2
L703	02167F101J	COIL 100 UH	CP4002	069S2C0629	CONNECTOR PCB SIDE A2001WV2-12P
L704	0216A6100K	COIL 10 UH	CP8002	069J780599	CONNECTOR PCB SIDE IMSA-9604S-08C
L3002	021W7A220K	COIL 22 UH	CP8102	069J780599	CONNECTOR PCB SIDE IMSA-9604S-08C
L3003	0216A6120K	COIL 12 UH	△ F501	081PC2R505	FUSE 51MS025L
L4001	02167F2R2J	COIL 2.2 UH	FH501	06710T0009	HOLDER,FUSE EYF-52BCY or
L8004	0216A6470K	COIL 47 UH		06710T0006	HOLDER,FUSE EYF-52BC
L8101	02167F1R0K	COIL 1 UH	FH502	06710T0009	HOLDER,FUSE EYF-52BCY or
L8102	02167F1R0K	COIL 1 UH		06710T0006	HOLDER,FUSE EYF-52BC
L8103	02167F1R0K	COIL 1 UH	OS651	077Q037009	REMOTE RECEIVER PIC-37043LO-H or
L8104	02167F1R0K	COIL 1 UH		077Q037001	REMOTE RECEIVER PIC-37043LO
L8105	02167FR33K	COIL 0.33 UH	OS8101	07AQ000009	OPTICAL DEVICE OFTG038101 or
L8106	02167FR33K	COIL 0.33 UH		07A9000006	OPTICAL DEVICE GP1FA553TZ
△ T501	0481260074	TRANSFORMER,SWITCHING 81260074	TM601	076R0ET050	TRANSMITTER R25-1941
<b>JACKS</b>			△ TU301	0162300038	RF UNIT 115-V-H015ARE
J8001	060J411018	RCA JACK MSP-213V1-432 PBSN	V651	0040H54010	LED DISPLAY CO2DOM3-A or
J8003	060J401079	RCA JACK MSP-281V4-B		0040F54009	LED DISPLAY ELF-4M6SDRVGWB/S423
J8004	060J401080	RCA JACK MSP-281V1-B	X101	100DT3R528	CRYSTAL HC-49/U
J8005	060J421023	RCA JACK MSP-281V3-A	X3001	100BT01004	CRYSTAL HC-49U/S
J8101	060J411029	RCA JACK MSP-213V1-732_PBSN	X3002	100DA32R01	CRYSTAL DT-26
J8102	063D700005	JACK MDC-070V	X4001	100BT02701	CRYSTAL HC-49U/S
J8103	060J411024	RCA JACK MSP-213V1-652 PBSN	<b>RESISTOR</b>		
<b>SWITCHES</b>			RC..... CARBON RESISTOR		
SW651	0504101T34	SWITCH,TACT EVQ21505R	<b>CAPACITORS</b>		
SW652	0504101T34	SWITCH,TACT EVQ21505R	CC..... CERAMIC CAPACITOR		
SW653	0504101T34	SWITCH,TACT EVQ21505R	CE..... ALUMI ELECTROLYTIC CAPACITOR		
SW654	0504101T34	SWITCH,TACT EVQ21505R	CP..... POLYESTER CAPACITOR		
SW655	0504101T34	SWITCH,TACT EVQ21505R	CPP..... POLYPROPYLENE CAPACITOR		
SW685	0504R01T38	SWITCH TACT EVQ11L05R	CPL..... PLASTIC CAPACITOR		
SW686	0504R01T38	SWITCH TACT EVQ11L05R	CMP..... METAL POLYESTER CAPACITOR		
SW687	0504R01T38	SWITCH TACT EVQ11L05R	CML..... METAL PLASTIC CAPACITOR		
SW688	0504R01T38	SWITCH TACT EVQ11L05R	CMPP..... METAL POLYPROPYLENE CAPACITOR		
SW689	0504R01T38	SWITCH TACT EVQ11L05R			
SW690	0504R01T38	SWITCH TACT EVQ11L05R			
SW3001	0508S11001	SWITCH (LEAF) LSA-1144EAU			
SW8101	0510Y24001	SWITCH SLIDE SK42H01G9A			
<b>P.C. BOARD ASSEMBLIES</b>					
PCB010	A2C505H010	PCB ASSY VMC300A			
PCB130	A2C505H130	PCB ASSY VMC298A			
PCB270	A2C503X270	PCB ASSY VEBA07A			
<b>MISCELLANEOUS</b>					
B501	024HT03563	CORE,BEADS W4BRH3.5X6X1.0X2			
B502	024HT03553	CORE,BEADS W5RH3.5X5X1.0			
B2601	024HC31022	CORE,BEADS FCM2012H-102T04			
B2602	024HC31022	CORE,BEADS FCM2012H-102T04			
B2603	024HC31022	CORE,BEADS FCM2012H-102T04			
B2604	024HC31022	CORE,BEADS FCM2012H-102T04			
B2605	024HC31022	CORE,BEADS FCM2012H-102T04			
B4001	024HC31022	CORE,BEADS FCM2012H-102T04			
B4002	024HC31022	CORE,BEADS FCM2012H-102T04			
B4003	024HC31022	CORE,BEADS FCM2012H-102T04			
B4004	024HC31022	CORE,BEADS FCM2012H-102T04			
B4005	024HC31022	CORE,BEADS FCM2012H-102T04			

SPEC.NO.	M2C5-10H
O/R NO.	K3Z2007