

Service
Service
Service



Service Manual



Table of Contents

Technical Specification1-1
 Location of Printed Circuit Boards1-2
 Safety Instructions2-1
 Instruction for use (excerpt)3-1
 Mechanical Instructions4-1
 Service Tools5-1
 Service Test Program5-2
 Blockdiagram5-3
 Wiring Diagram6-1

AF BOARD

Circuit Diagram Supply Part7-1
 Component Layout7-2
 Circuit Diagram DAC Part7-3
 Component Layout7-4

FRONT BOARD

Circuit Diagram7-5
 Component Layout7-6

HEADPHONE BOARD

Circuit Diagram7-6
 Component Layout7-6

CD BOARD

Circuit Diagram7-7
 Component Layout7-8
 Fault Finding Tree CD7-9

EXPLODED VIEW

Set10-1
 CD Short Loader10-2

Electrical Partslist10-3

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

© Copyright 1997 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
 All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by HB 9823 Service Audio Printed in The Netherlands Subject to modification

GB 4822 725 26026



TECHNICAL SPECIFICATION

General

Dimensions (WxHxD) : 435 x 86 x 265mm
 Weight : 2,9kg

Accessories

Instruction for use : 4822 736 16255 for /00
 : 4822 736 16256 for /01
 : 4822 736 16257 for /14

Remote control : 4822 219 10538

Mains voltage

/00 : 220-230V(±10%) 50Hz
 /01 : 120/230V(±15%) 50/60Hz
 /14 : 220-230V(±10%) 50Hz

Power consumption

stand by : ≤5W
 operating : approx. 8W

Audio performance

Number of channels : 2
 Output voltage (Line out) : 2VRMS ±3dB
 Unbalance left-right : ≤1dB
 Frequency response : 20Hz-20kHz ≤0,4dB
 Signal to noise ratio : 108 dB typ.
 Dynamic range : 105dB typ. at 1kHz
 THD : ≤0,0063% at 1kHz
 Channel separation : 98dB typ. at 1kHz

Headphone output


Output level (1kHz, 0dB) : ≥5VRMS
 Unbalance left-right : ≤1,2dB
 Output impedance : 120Ω
 Load impedance : 32Ω - 600Ω
 Output power : 25mW at 32Ω
 : 52mW at 120Ω
 : 29mW at 600Ω

Laser

Output power : <5mW (3mW typ.)
 Wavelength : 780nm

Measurement setup

Use Audio Signal disc SBC429 4822 397 30184

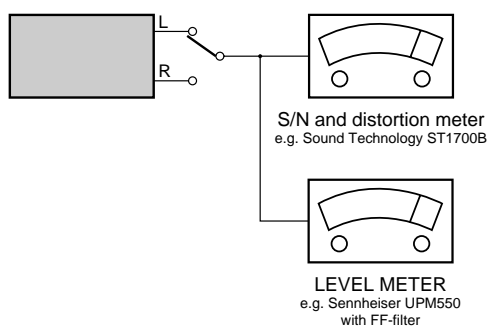


RC 5 Commands

System code = 20

Command	Code	Command	Code	Command	Code
KEY "0"	0	DISPLAY SCROLL	15	SHUFFLE	28
KEY "1"	1	PLAY	53	HIGHLIGHT	43
KEY "2"	2	STOP	54	REPEAT	29
KEY "3"	3	PAUSE	48	FADE	120
KEY "4"	4	TIME	11	VOLUME UP	16
KEY "5"	5	PREVIOUS	33	VOLUME DOWN	17
KEY "6"	6	REVIEW	50	STAND BY	12
KEY "7"	7	CUE	52	CD TEXT	88
KEY "8"	8	PROGRAM	36	NEXT	32
KEY "9"	9	REPEAT A/B	59		

LOCATION OF PRINTED CIRCUIT BOARDS

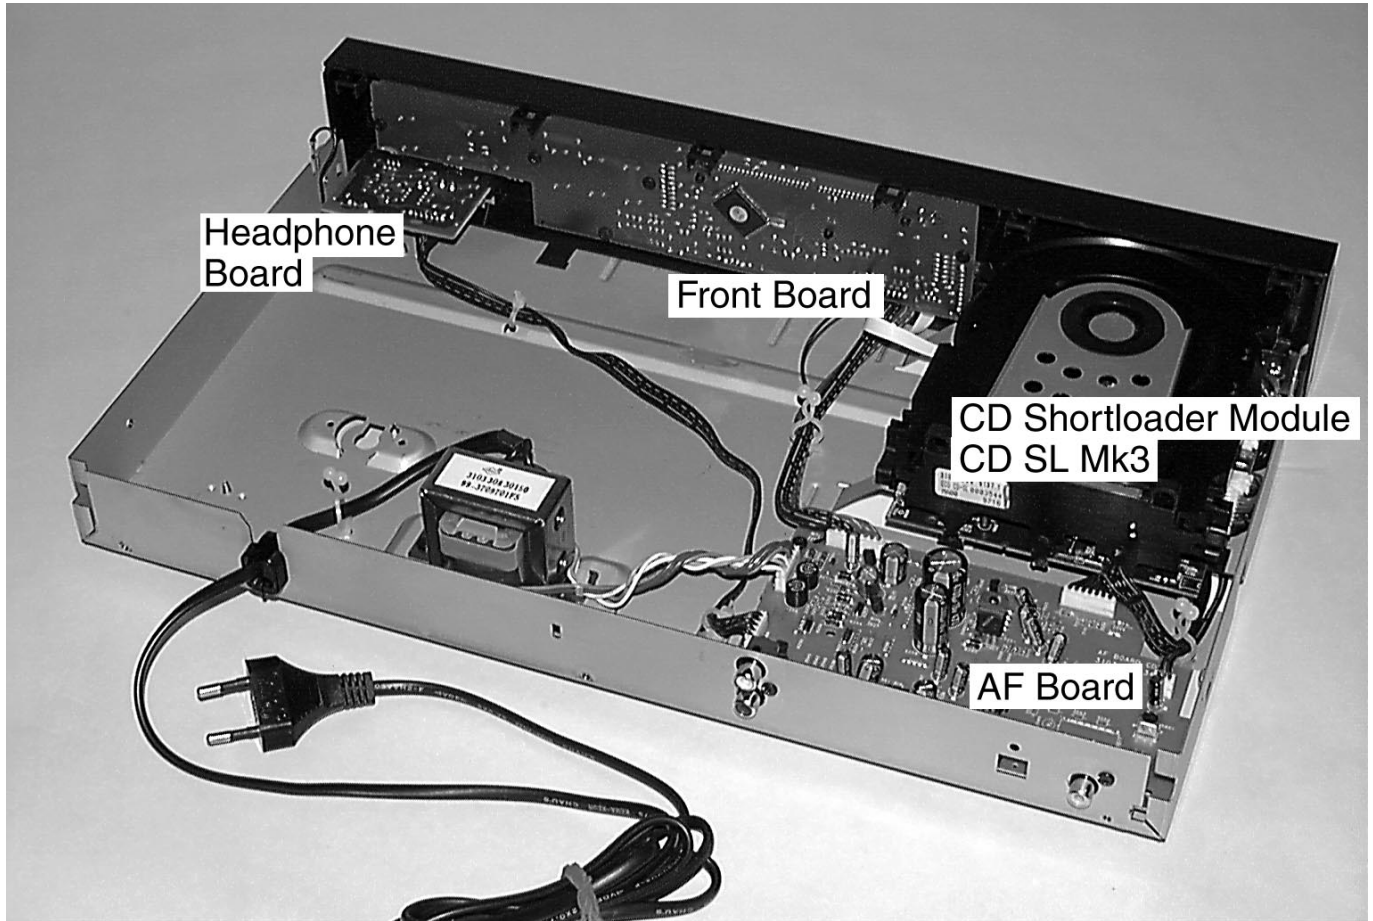

(GB) WARNING

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.


When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

(F) ATTENTION

Tous les IC et beaucoup d'autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévité pourrait être considérablement écourtée par le fait qu'aucune précaution n'est prise à leur manipulation.

Lors de réparations, s'assurer de bien être relié au même potentiel que la masse de l'appareil et enfilez le braceleterti d'une résistance de sécurité.

Veiller à ce que les composants ainsi que les outils que l'on utilise soient également à ce potentiel.

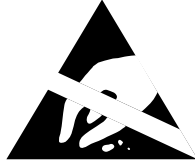ESD**(D) WARNUNG**

Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatichen Entladungen (ESD).

Unvorsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.

Sorgen Sie dafür, daß sie im Reparaturfall über ein Puls-armband mit Widerstand mit dem Massepotential des Gerätes verbunden sind.

Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

(NL) WAARSCHUWING

Alle IC's en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladungen (ESD).

Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen verminderen. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.

Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(I) AVVERTIMENTO

Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).

La loro longevità potrebbe essere fortemente ridotta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparazioni occorre quindi essere collegato allo stesso potenziale che quello della massa dell'apparecchio tramite un braccialetto a resistenza.

Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB) AVAILABLE ESD PROTECTION EQUIPMENT :

anti-static table mat large 1200x650x1.25mm
small 600x650x1.25mm

anti-static wristband

connection box (3 press stud connections, 1MΩ)

extendible cable (2m, 2MΩ, to connect wristband to connection box)

connecting cable (3m, 2MΩ, to connect table mat to connection box)

earth cable (1MΩ, to connect any product to mat or to connection box)

KIT ESD3 (combining all 6 prior products - small table mat)

wristband tester

4822 466 10953

4822 466 10958

4822 395 10223

4822 320 11307

4822 320 11305

4822 320 11306


4822 320 11308

4822 310 10671

4822 344 13999


(GB)

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Safety components are marked by the symbol 


(F)

Les normes de sécurité exigent que l'appareil soit remis à l'état d'origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.


Les composants de sécurité sont marqués 

SAFETY**(D)**

Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden.


Sicherheitsbauteile sind durch das Symbol  markiert.

(NL)

Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkelijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast. De Veiligheidsonderdelen zijn aangeduid met het symbool 

(I)

Le norme di sicurezza estigono che l'apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambio identici a quelli specificati.

Componenty di sicurezza sono marcati con 

(GB)

DANGER: Invisible laser radiation when open.
AVOID DIRECT EXPOSURE TO BEAM.

**(S) Varning !**

Osynlig laserstrålning när apparaten är öppnad och spårren är urkopplad. Betrakta ej strålen.

(DK) Advarsel !

Usynlig laserstrålning ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for strålning.

(SF) Varoitus !

Avatussa laitteessa ja suojalukituksen ohitettaessa olet alttiina näkymättömälle laserisäteilylle. Älä katso säteeseen !

(GB)

After servicing and before returning the set to customer perform a leakage current measurement test from all exposed metal parts to earth ground, to assure no shock hazard exists.

The leakage current must not exceed 0.5mA.

(F)

"Pour votre sécurité, ces documents doivent être utilisés par des spécialistes agréés, seuls habilités à réparer votre appareil en panne".

INSTRUCTION FOR USE

GENERAL INFORMATION


Table of contents

GENERAL INFORMATION	
Maintenance	4
Technical data	4
CONTROLS AND CONNECTIONS	
Controls on the front	5
Connections at the back	5
At the bottom	5
INSTALLATION AND REMOTE CONTROL	
Accessories	6
Connections	6
Usual connection, LINE OUT	6
Digital connection, DIGITAL OUT	6
Mains	6
Remote control	6
Batteries	6
PLAYBACK	
CD text	7
Playing a CD	7
ADDITIONAL FUNCTIONS	
Selecting a track and searching	8
Selecting a track during CD play	8
Selecting a track when CD play is stopped	8
Searching for a passage during CD play	8
Random order playing (SHUFFLE)	8
Repeating a CD, a track or a program	8
Repeating a part of the CD	8
Programming track numbers	9
Clearing the program	9
Loudest passage searching	9
Time display	9
Fading out and in	10
Volume adjustment	10
Locking the volume	10
Headphone listening	10
Scanning the CD	10
Recording setup	11
<i>Environmental information</i>	11
TROUBLESHOOTING	
Warning	12
Troubleshooting	12

English

CONTROLS AND CONNECTIONS

English

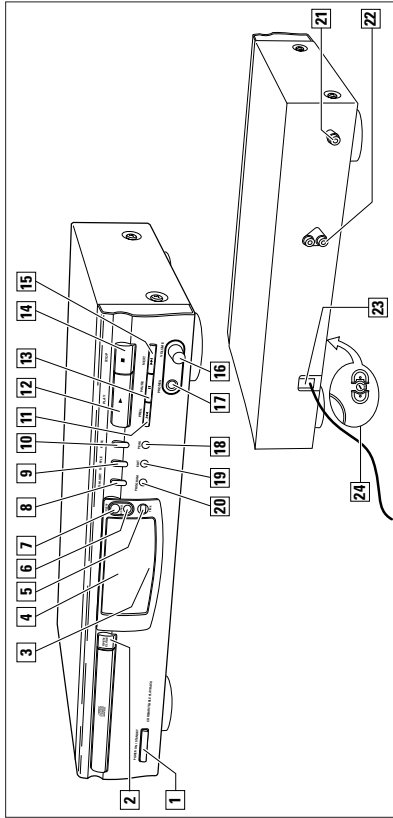

Controls on the front

- 1 **POWER ON / STANDBY** ... switches the CD player on and to standby
- 2 **OPEN-CLOSE** ... opens and closes the CD tray
- 3 Sensor for the infrared remote control
- 4 Display
- 5 **TIME** ... switches through the different time information
- 6 **SCROLL** ... scrolls CD-Text information
- 7 **CD TEXT** ... switches through the different CD-Text information
- 8 **HIGHLIGHT** ... plays the beginning of each track or – if a CD-Text disc contains highlights – the highlights of a CD
- 9 **SHUFFLE** ... plays a CD or a program in random order
- 10 **FADE** ... fades CD play out and in
- 11 **PREV. ◀◀** ... selects the beginning of the current or a previous track, and searches backward
- 12 **PLAY ▶** ... starts CD play
- 13 **PAUSE II** ... interrupts CD play
- 14 **STOP ■** ... stops CD play and clears a program
- 15 **NEXT ▶▶** ... selects the beginning of a subsequent track, and searches forward

- 16 **VOLUME** ... decreases or increases the volume level of the headphones
- 17 **PHONES** ... 6.3mm headphone socket
- 18 **PEAK** ... searches the loudest passage of a CD
- 19 **EDIT** ... changes the settings for recording on tape or CD-Recordable
- 20 **PROGRAM** ... programs track numbers

Connections at the back

- 21 **DIGITAL OUT** ... to connect the digital input of a digital audio device
- 22 **LINE OUT L R** ... to connect the audio input of an amplifier
- 23 Mains lead ... After all other connections have been made, connect this mains lead to the wall socket.

At the bottom

- 24 **VOLTAGE SELECTOR** ... (Not on all versions.) Disconnect the mains lead first, if this selector must be reset.

Maintenance

Clean the CD player with a soft, slightly dampened lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.

Do not expose the CD player, batteries or CDs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

This CD player can play all kinds of Audio Discs such as CD-Recordables, CD-Rewriteables and CD-Text CDs. Do not try to play a CD-ROM, CD-I, CDV or computer CD.

If the CD player cannot read CDs correctly use a commonly available cleaning CD to clean the lens before taking the CD player to repair. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.

The lens may cloud over when the CD player is suddenly moved from cold to warm surroundings. Playing a CD is not possible then. Leave the CD player in a warm environment until the moisture evaporates.

To clean a CD, wipe it in a straight line from the center toward the edge using a soft, lint-free cloth. A cleaning agent may damage the disc! Never write on a CD or attach a sticker to it.

Technical data

Subject to modification without notice.

Standby power consumption < 5W
Frequency range 20–20,000Hz
Amplitude linearity < 0.5dB (1kHz–90dB)
Dynamic range 100dB (1kHz)
Signal-to-noise ratio 106dB (1kHz, A-weighted)
Channel separation 96dB (1kHz)
Total harmonic distortion 0.004%, -88dB (1kHz)
Audio output 2V RMS ±3dB, 1kΩ
Digital coaxial output 75Ω acc. IEC 958
Impedance headphones 30–600Ω (5V e. m. f. from 120Ω)
Dimensions 435 × 88 × 265mm
Weight 2.9kg



English

English

Accessories

- This CD player is supplied including:
 - a remote control
 - 2 batteries for the remote control
 - a connection cable
 - this instruction booklet

Connections

- 1 Insert the red plug of the supplied connection cable into R and the other plug into L.
- 2 Insert the other side of the cable into the corresponding sockets of the CD or AUX input of your amplifier.

Important!

You may also use the TUNER or TAPE, but **never** the PHONO input of your amplifier!

Digital connection, DIGITAL OUT

Never connect this socket to a non-digital input – such as AUX, CD, PHONO, TAPE – of an amplifier. This output supplies a digital signal and can therefore only be connected to a digital input.

- 1 Insert an optional coaxial cable into DIGITAL OUT.
- 2 Insert the other side of the cable into the digital input of your digital device (e.g. CD Recorder).


Mains

The type plate is located on the back of the CD player.

- 1 If your set is equipped with a VOLTAGE selector (at the bottom), set this selector to your local mains voltage if necessary. Position 120V includes 110V–127V. Position 230V includes 220V–240V.
- 2 Connect the mains cable to the wall socket. This switches on the mains supply.

Note: To disconnect the CD player from the mains completely, remove the mains plug from the wall socket.

Remote control

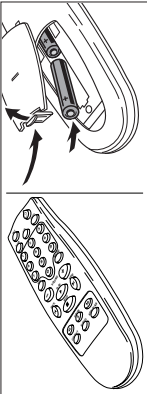

Batteries

- Open the battery compartment of the remote control and insert 2 alkaline batteries, type AAA (R03, UM-4).

Remove batteries if they are flat or the remote control is not going to be used for a long time.

Batteries contain chemical substances, so they should be disposed of properly.

TIMEswitches through the different time informations

⏪switches the CD player to standby

PROGRAMprograms track numbers

FADEfades CD play out and in

SHUFFLEplays a CD or a program in random order

Digits 1-0selects a track by number

HIGHLIGHTplays the beginning of each track or – if a CD-Text disc contains highlights – the highlights of a CD

REPEATrepeats a track, a program or the entire CD

VOLUME -decreases the volume level

VOLUME +increases the volume level

PLAYstarts CD play

PREV. ⏮selects the beginning of the current or a previous track

NEXT ▶selects the beginning of a subsequent track

STOP ■stops CD play and clears a program

⏮searches backward


PAUSE IIinterrupts CD play

▶searches forward

CD TEXTswitches through the different CD-Text information

SCROLLscrolls CD-Text information

REPEAT A/Brepeats a selected part of the CD

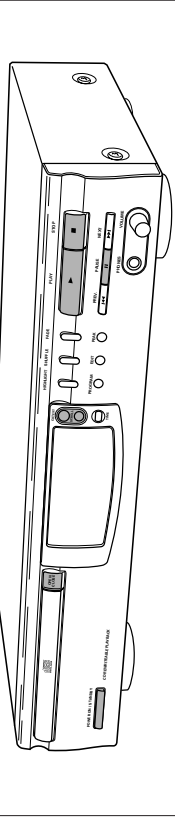

CD-Text

This CD player can show information which is stored on CD-Text discs. It will only reproduce the text which is recorded on the disc.

- 1 When inserting a disc with CD-Text the display shows **CD TEXT** and performing artist or group. In case there are various artists the album title is shown.

- 2 Press CD TEXT before playing a CD to switch between album title and performing artist(s) if available.

- 3 Press CD TEXT during CD play to switch between album title, performing artist(s) and track title if available.

- 4 At the beginning of a new track the track title is scrolled once. Then the first 12 digits of the track title are displayed.

- 5 CD-Text information is scrolled every 30 seconds. Press SCROLL to scroll the text through the display any time.


Playing a CD

- 1 Use POWER ON / STANDBY to switch on the CD player.
 - 2 Press OPEN-CLOSE to open the CD tray. OPEN appears on the display.
 - 3 Insert an audio CD (printed side up) and press OPEN-CLOSE to close the CD compartment. REPEAT appears on the display. Then the number of tracks and the playing time is shown. If the disc contains CD-Text the display shows **CD TEXT** and CD-Text information (see "CD-Text").
 - 4 Press PLAY to start CD play. The display shows **TRACK TIME**, and the number and time of the actual track. If the disc contains CD-Text the display shows CD-Text information.
- You can interrupt CD play by pressing PAUSE II. The display shows **III** and the track number and time where playback was stopped.
 - Continue CD play by pressing PAUSE II again.

Note: Playback will also stop if the end of the CD is reached.

INSTRUCTION FOR USE

ADDITIONAL FUNCTIONS

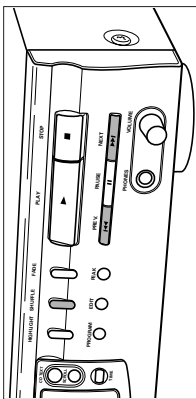

English

Random order playing (SHUFFLE)

- 1 Press SHUFFLE before or during CD play to start shuffle play.
SHUFFLE is shown in the display. All the tracks of the CD (or program if available) will now be played in random order.
- 2 Press SHUFFLE again to return to normal CD play.

Repeating the CD, a track or a program

- 1 Press repeatedly REPEAT on the remote control during CD play.
The display shows the different repeating modes.
REPEAT 1: the current track is played repeatedly.
REPEAT: the entire CD or program (if available) is played repeatedly.
- 2 Press REPEAT until the display indication disappears to return to normal CD play.

Note: It is possible to activate the different playing modes at the same time, e.g. you can repeatedly play the entire CD or program in random order (PROGRAM REPEAT SHUFFLE).

Repeating a part of the CD

- 1 Press PLAY ► to start CD play.
- 2 Press REPEAT A/B on the remote control to mark the beginning of the passage to be repeated.
REPEAT is shown and A- is flashing in the display.
- 3 Press REPEAT A/B on the remote control to mark the end of the passage to be repeated.
REPEAT A-B is shown in the display. The part of the CD between the marked points is played repeatedly.
- 4 Press PLAY ► to return to normal CD play.

Selecting a track and searching

- Selecting a track during CD play**
- Briefly press PREV. ◀◀ or NEXT ▶▶ (PREV. ◀ or NEXT ▶ on the remote control) once or several times to skip to the beginning of the current, previous or subsequent track(s).
- or
- Use the digits 1-0 on the remote control to key in the number of a track.
CD play continues with the selected track.


Selecting a track when CD play is stopped

- 1 Briefly press PREV. ◀◀ or NEXT ▶▶ (PREV. ◀ or NEXT ▶ on the remote control) once or several times.
- or
- Use the digits 1-0 on the remote control to key in the number of a track.
- 2 Press PLAY ► to start CD play.
Playback starts with the selected track.

Searching for a passage during CD play

- 1 Hold down PREV. ◀◀ or NEXT ▶▶ (◀◀ or ▶▶ on the remote control) to find a particular passage in a backward or forward direction.
CD play continues at a low volume.
- 2 Release the button when you have reached the desired passage.

Note: In the shuffle and repeat mode and when playing a program, searching is only possible within the particular track.

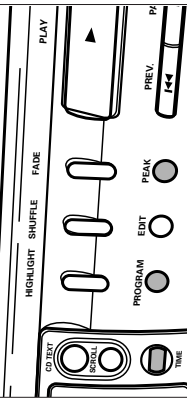**Programming track numbers**

You can select a number of tracks and store these in the memory in the desired sequence. You can store any track more than once. At most, 30 tracks can be stored in the memory.

- 1 Press PROGRAM to start programming.
PROGRAM flashes.
- Note: If you press PROGRAM while playing a CD, the actual track will be added to the program.*

- 2 Press PREV. ◀◀ or NEXT ▶▶ (PREV. ◀ or NEXT ▶ on the remote control) to select the desired track.
- or
- Key in the number of a track with the digits 1-0 on the remote control.

- 3 Press PROGRAM to store the track number.
TRACK, TOTAL TIME, and the number of the programmed track is displayed. The number of programmed tracks is increased and the time of the track is added to the total time of the program.

- 4 Repeat steps 2 and 3 for all tracks to be programmed.

- 5 Press STOP ■ to end programming.
PROGRAM lights permanently.

- It is possible to review the program using the PREV. ◀◀ or NEXT ▶▶ (PREV. ◀ or NEXT ▶ on the remote control). You can add more tracks by pressing PROGRAM like you have done before.

- 6 Press PLAY ► to start program play.

Note: If you try to store more than 30 tracks PROGRAM FULLED scrolls through the display.

Clearing the program

- 1 If necessary press STOP ■ to stop program playing.
- 2 Press STOP ■ to clear the program.
PROGRAM FULLED scrolls through the display, PROGRAM disappears and your program is cleared.

Note: The program will also be cleared if you open the tray.

Loudest passage searching

You can search for the loudest passage of a CD or program. This will help you in adjusting your recording device if required.

- 1 If necessary press STOP ■ to stop CD play.
 - 2 Press PEAK to start searching.
PEAK starts flashing. Searching may need a few minutes. Then 4 seconds of the loudest passage are played repeatedly.
- You can interrupt peak play by pressing PAUSE II. Continue peak play by pressing PAUSE II again.

- 3 Press STOP ■ to stop playing.
or
- Press PLAY ► to start CD play.

Time display

You can display time information which is stored on the CD.

While playing a CD or a program the number and elapsed time of the actual track, and TIME are displayed. If the disc contains CD-Text the display shows CD-Text information (see "CD-Text").

- Press TIME several times to display:
If the disc contains CD-Text, the number and elapsed time of the actual track, and TIME are displayed first.
The number and remaining time of the actual track, and REM TIME
The number of the actual track, the total elapsed time of the CD, and TOTAL TIME.
The number of the actual track, the total remaining time of the CD, and TOTAL REM TIME.

Note: If you press TIME when the CD is not playing you may only display the total time of the CD.


English

ADDITIONAL FUNCTIONS

INSTRUCTION FOR USE

ADDITIONAL FUNCTIONS

English

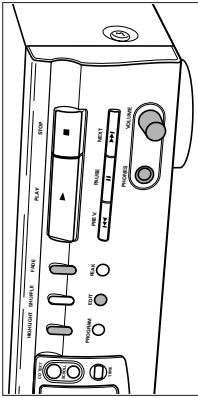

Fading out and in

You can fade out and in CD play, e. g. to stop and start a recording softly.

- 1 Press **FADE** during CD play to fade out. The display shows **----** in steps. The volume is lowered continuously until CD play is paused.
- 2 Press **FADE** again to fade in. The display shows **----** in steps. CD play starts and the volume is raised continuously to its previous level.

*Note: You may use **FADE** anytime when CD play is paused to fade in.*

Volume adjustment

The volume of the CD player can be adjusted. This affects the DIGITAL OUT output as well.

- Press **VOLUME -** or **VOLUME +** on the remote control. The volume of the CD player is lowered or raised. The display shows the actual value between **0000** and **9999**.

Important!

VOLUME +/- is altering the signal of the output. Before recording set the volume to **0000** and do not change during recording.

Locking the volume

It is possible to lock the output volume to its maximum. This affects the DIGITAL OUT output as well. Locking the volume can be useful when recording from the CD-player.

- Keep **EDIT** pressed for more than 2 seconds.
- **If the volume was unlocked:** The display shows **0000** and the volume is locked.
- **If the volume was locked:** The display shows **9999** and the volume is unlocked.

*Note: If you press **VOLUME +/-** and the volume is locked the display shows **0000**.*

Headphone listening

- 1 Connect your headphones to the 6.3mm PHONES socket.
- 2 Use **VOLUME** to adjust the volume of the headphones.

*Note: The maximum volume on the headphones is set through **VOLUME +/-** on the remote control.*

Important!

The volume of the headphones is in line with the volume of the output. Therefore do not use **VOLUME +/-** during recording.

Scanning the CD


It is possible to listen to the beginning of each track of a CD or program. You can choose whether to play 10, 20 or 30 seconds of each track. If a disc contains CD-TEXT highlights this part of the tracks is scanned and **HIGHLIGHT** is displayed.

- 1 Press **HIGHLIGHT** repeatedly to switch through the different scan modes.
HIGHLIGHT, **SCAN 10**, **SCAN 20**, **SCAN 30**, **SCAN OFF** ... (**SCAN OFF** aborts the scan function).
- 2 As soon as the desired scan mode is displayed do not press the button again.
After 1 second scanning starts. The number and remaining time of the actual track, and **REM TIME** are displayed.
- You can interrupt scan by pressing **PAUSE II**. Continue scan by pressing **PAUSE II** again.

- 3 Press **STOP** to stop scanning.

- Press **PLAY** to start CD play with the actual track.

*Note: If you press **HIGHLIGHT** while **SHUFFLE** is active, shuffle will be stopped before scanning.*

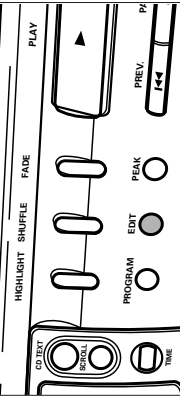

Recording setup

It is possible to set up the CD player in a way that it will calculate which tracks will fit on your recording media. It is only possible to use the edit function if a disc has not more than 29 tracks.

If you use **REWRITE** the recording stops after the last track that fits on one side of your recording media. Notice that CD-Recordables are single-sided only! If you use **EDIT** some tracks will be skipped to minimise the unused space on your recording media. The sequence of the tracks stays as the original.

- 1 Insert a CD and, if desired, program track numbers.
- 2 Press **EDIT** to start the setup. The display shows **EDIT** and **REWRITE**.
- 3 Press **PREV** or **NEXT** (or **PREV** or **NEXT** on the remote control) to switch through the different scan modes. **REWRITE**, **EDIT**, **STOP** ... (**STOP** aborts the edit function).
- 4 As soon as the desired edit mode is displayed press **EDIT**. The display shows **SC**.

ADDITIONAL FUNCTIONS

English

- 5 Press **PREV** or **NEXT** (or **PREV** or **NEXT** on the remote control) to switch through the different recording times and media.
C 100, **C 120**, **C 30**, **C 45**, **C 60**, **C 90**...

Note: C is for cassette, CD-R is for CD-Recordable and CD-Rewritable and therefore for single-sided recording only.

- 6 As soon as the desired recording time and media is displayed press **EDIT**. **R**, the number of tracks and the playing time are displayed.

- 7 Start your recording and press **PLAY** to start CD play. If cassette (C) was selected the CD player pauses after playing the calculated tracks for side A. If CD-Recordable (CD-R) was selected the CD player stops.

- 8 If required switch tape sides.

- 9 Press **PLAY** to start CD play again. **R**, the number of tracks and the playing time are displayed. The remaining tracks for side B are played.

*Note: It is possible to switch between R and B by using **PREV** or **NEXT** (or **PREV** or **NEXT** on the remote control).*

Environmental information

All redundant packing material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.


MECHANICAL INSTRUCTIONS

Dismantling Top Cover

- 1) Loosen 7x screw as shown in picture 1.




- 2) Lift top cover as shown in picture 2.
- 3) Remove top cover.

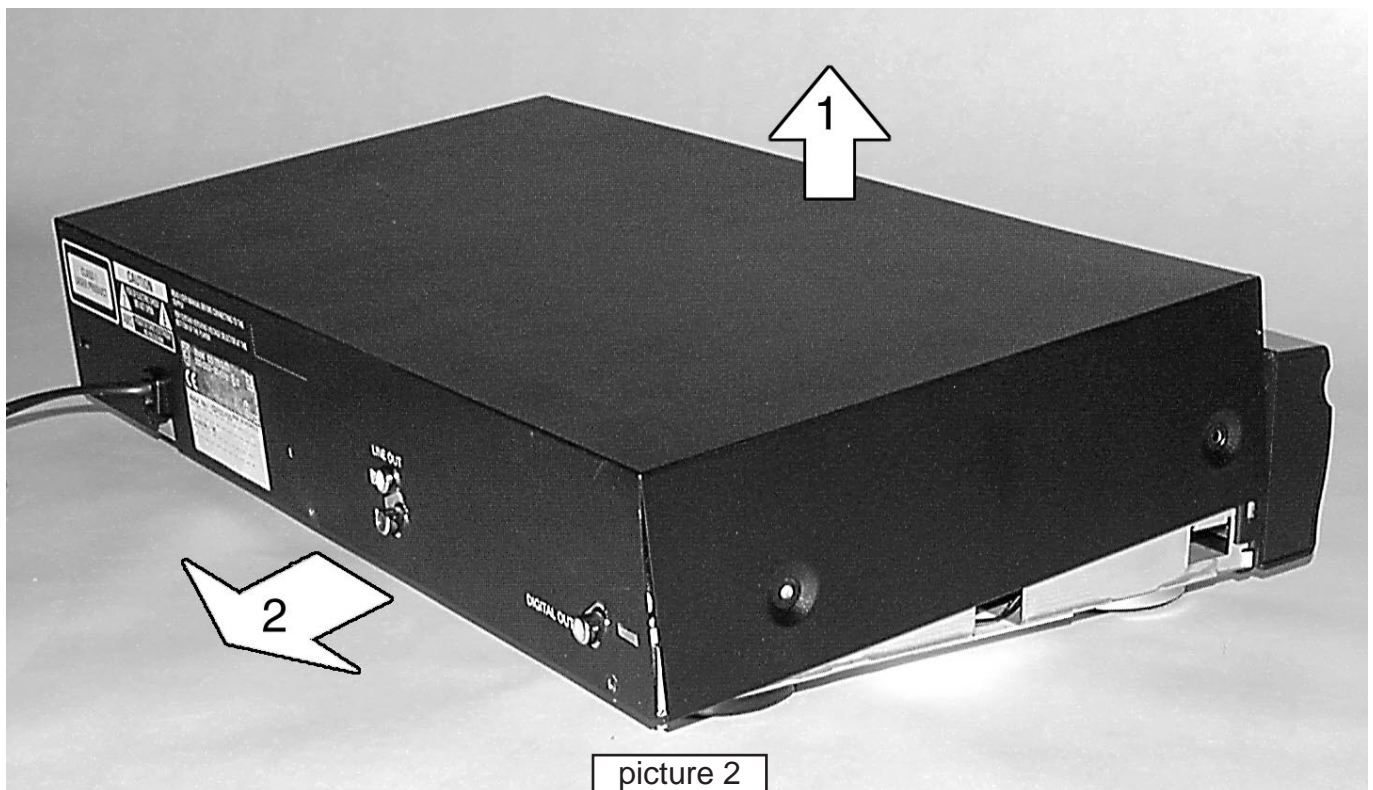


MECHANICAL INSTRUCTIONS

Dismantling Front

- 1) Loosen 2x screw as shown in picture 3.

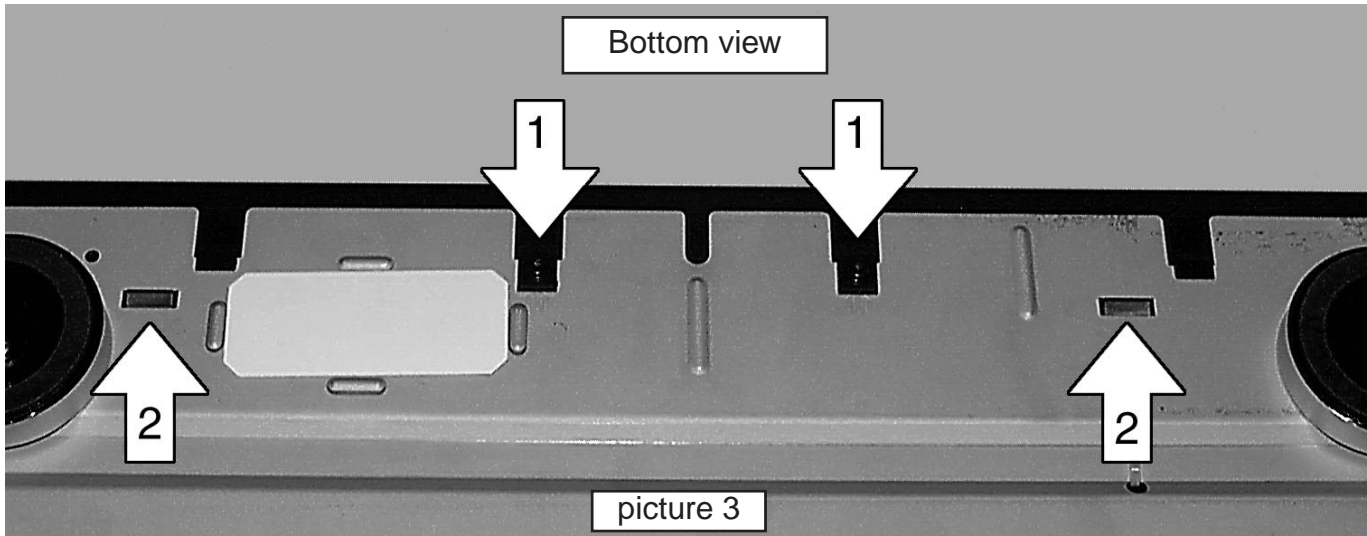

- 2) Release 2x snap on bottom (see picture 3).
- 3) Release 2x snap on side (see picture 4).
- 4) Remove front.

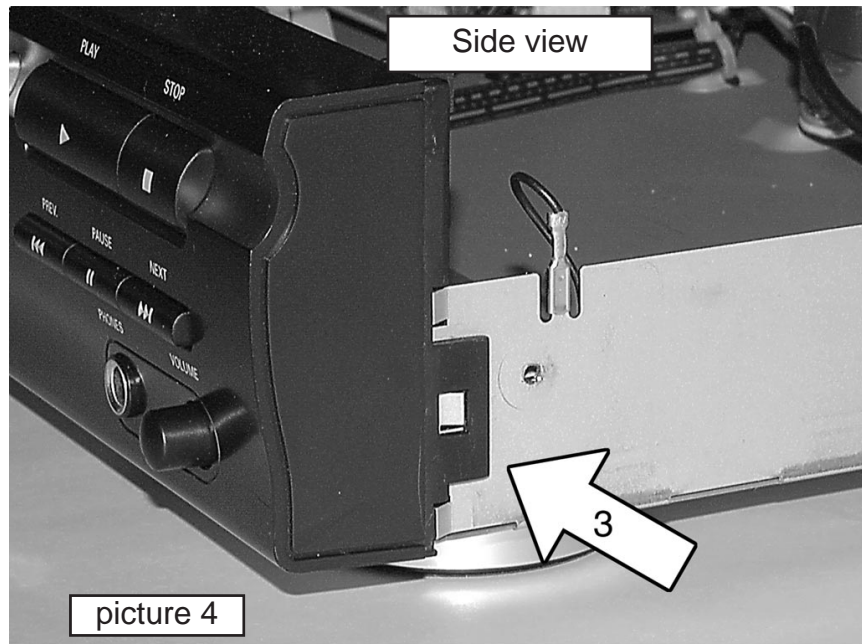

Dismantling hints CD Short Loader

Dismantling the tray

- a) Press open/close button to open the tray. If the tray doesn't work, use a small screwdriver as shown in Fig.1 step 1 to move the tray outside. After the first centimetre it is possible to pull the tray out by hand.
- b) Release two snaps and remove tray.

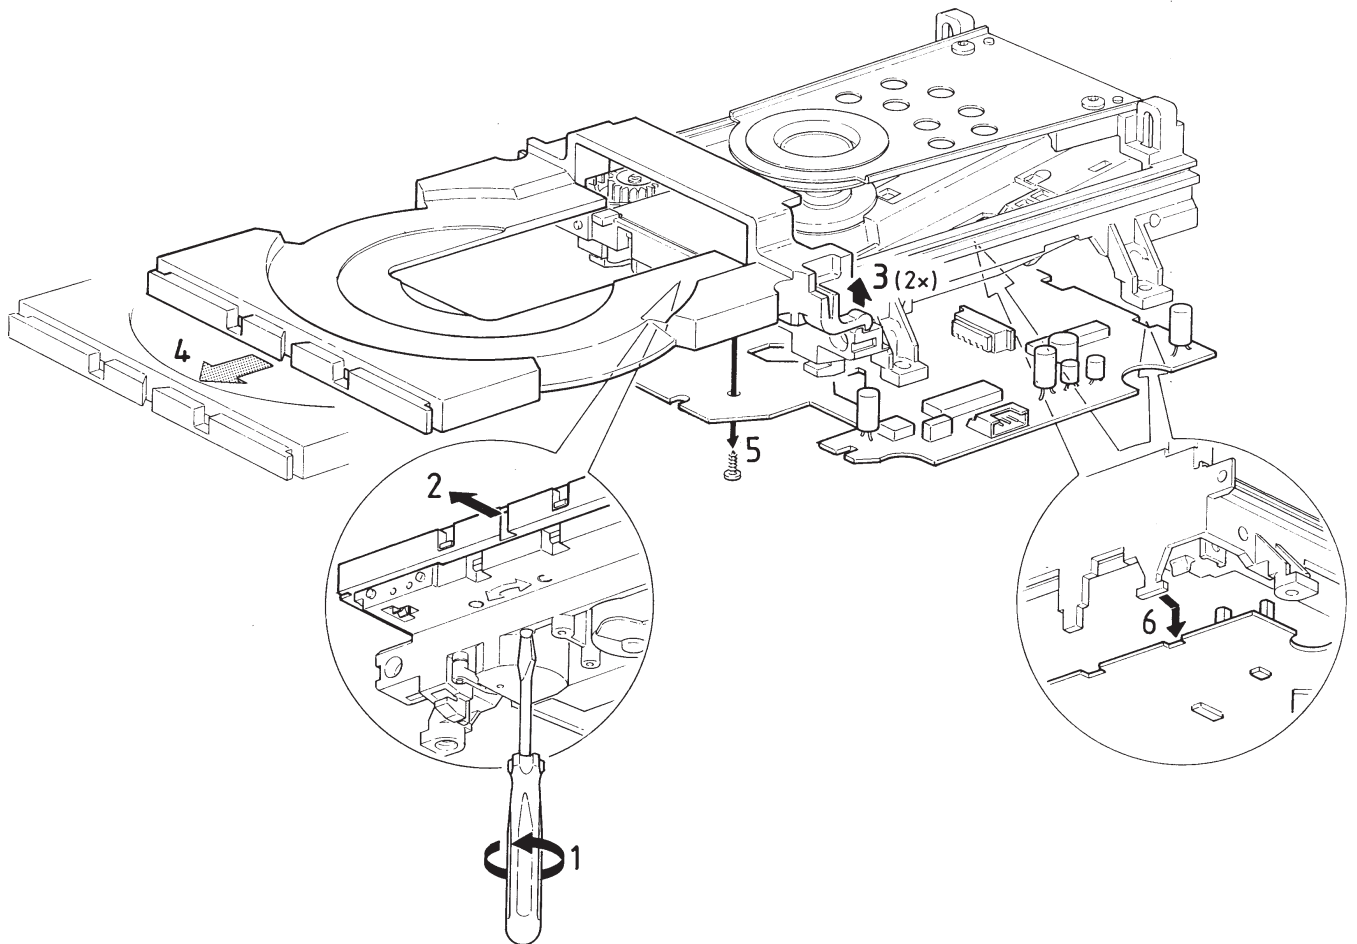


Fig. 1

Assembly of gear

- a) Use a pin (e.g. a paperclip) to align the cam wheel (a) with the gear wheel (b). See Fig. 2.
- b) Fix the wheels with the small plastic washers.

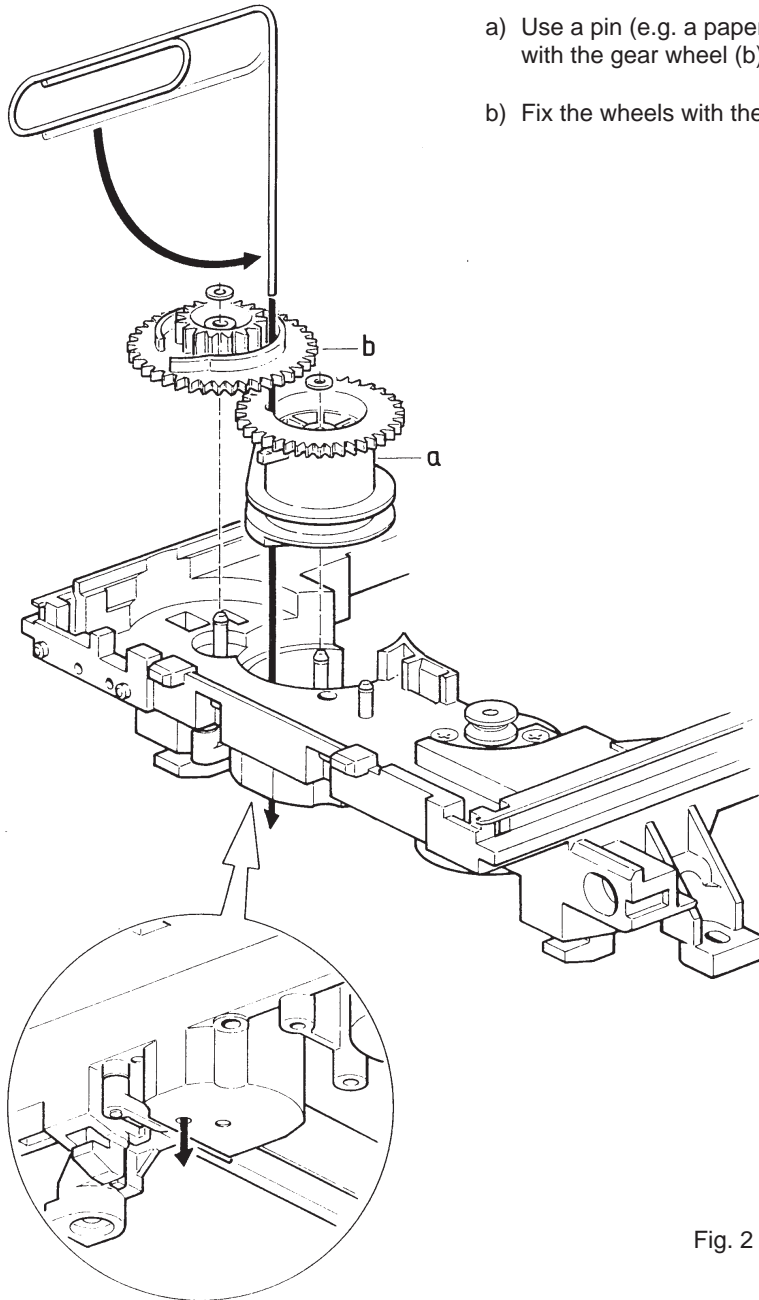


Fig. 2

- c) Mount idle wheel 2 (c) and idle wheel 1 (d) in any position. See Fig. 3.
- d) Fix the idle wheel 1 (d) with the small plastic washer.
- e) Mount the driving belt.

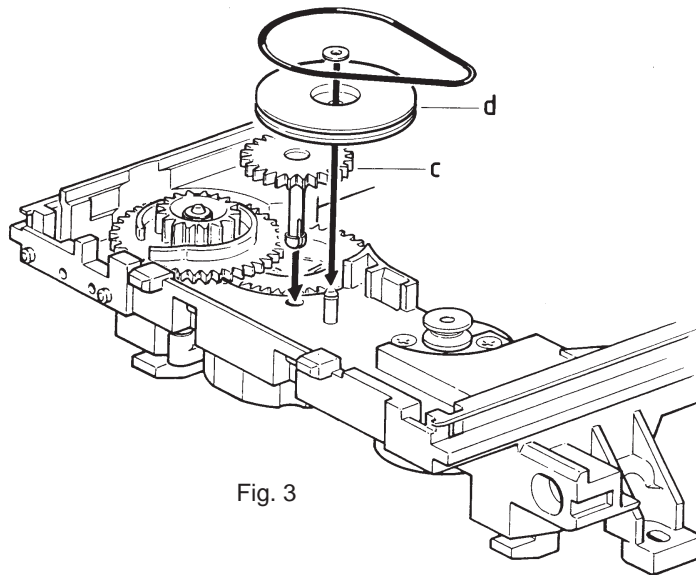


Fig. 3

- f) Mount the pinion guiding assy and the cover as shown in Fig. 4.
- g) Turn the gear wheel (b) counter clockwise to endposition.

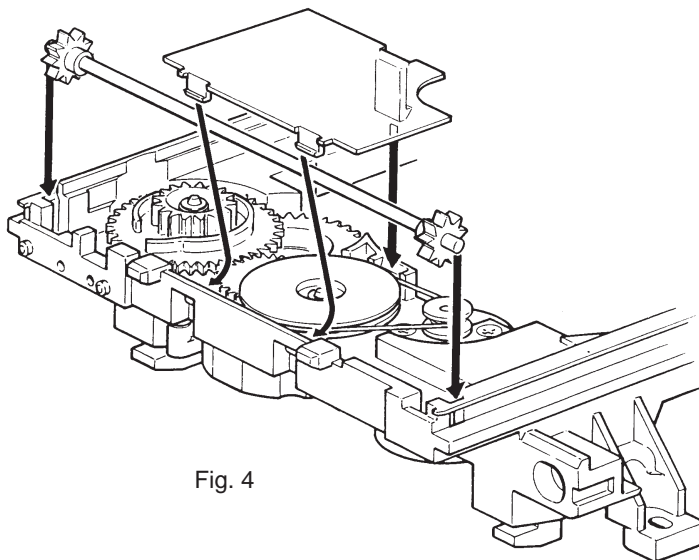


Fig. 4

- h) Mount the CD Mechanism as shown in Fig. 5.
- i) Mount the tray (Align the tray to the chassis and push it inside).

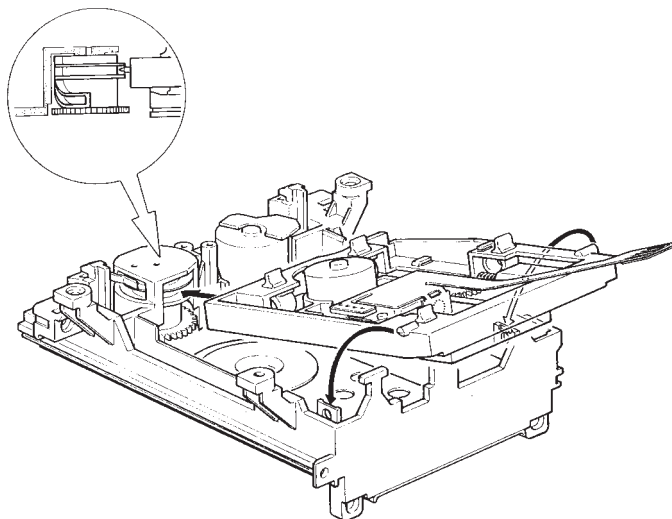


Fig. 5

Check if tray mechanism works correctly!






- 1) Turn the gear wheel (b) clockwise to its endposition (Use a small screwdriver as shown in Fig. 1 step 1).

The tray has to move to inner position first and then the CD mechanism has to move to its upper position.

- 2) Turn the gear wheel (b) counter clockwise to its endposition.

The CD Mechanism has to move to its lower position first and then the tray has to move outside.


HANDLING CHIP COMPONENTS

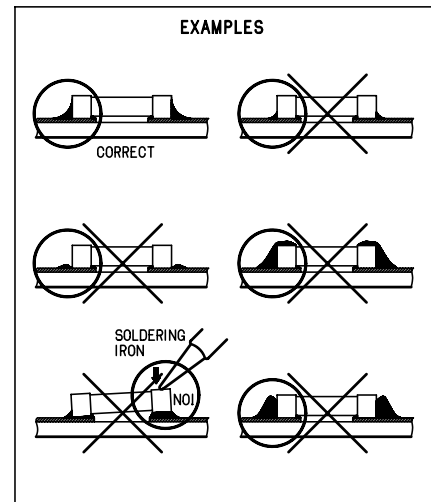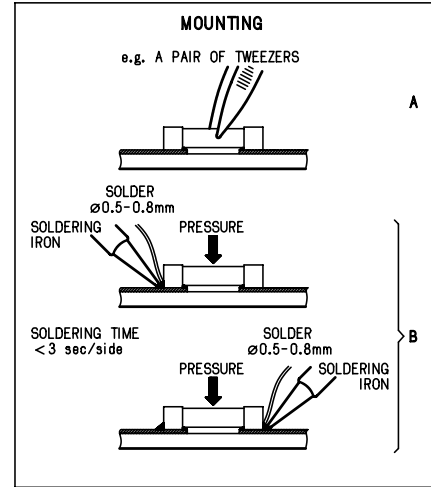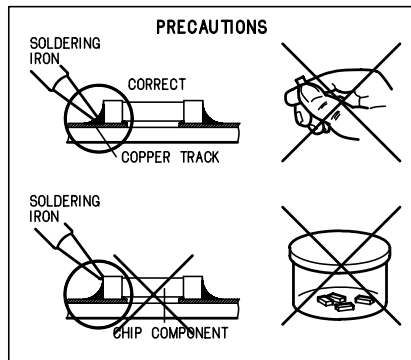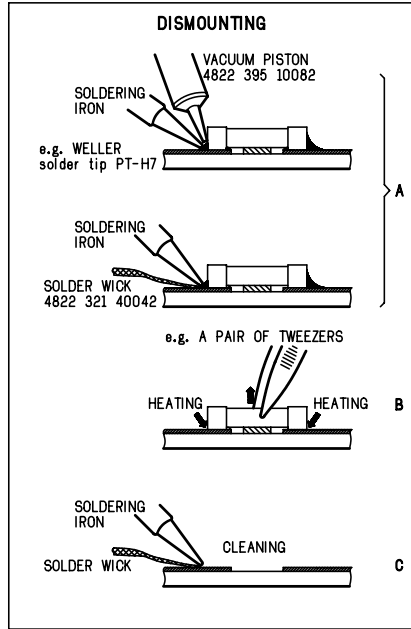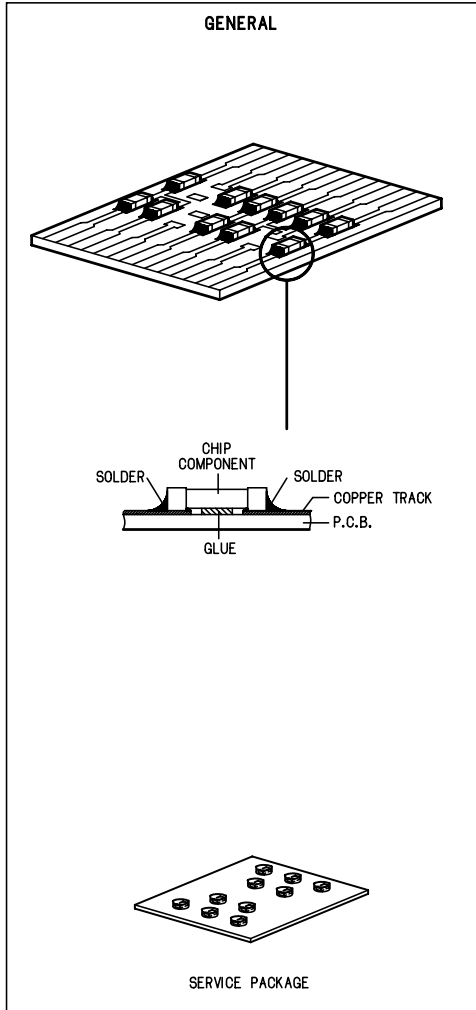

SERVICE TOOLS

- TORX T10 screwdriver with shaftlength 150mm4822 395 50423
- TORX screwdriver set T6 - T20 SBC 163.....4822 395 50145
- Audio signal disc SBC 429.....4822 397 30184
- Playability test disc SBC444/444A.....4822 397 30245
- Test disc 444 (disc without errors) +
- Test disc 444A (disc with dropout errors, black spots and fingerprints)
- Burn in test disc SBC4424822 397 30155
(65 min. 1kHz signal at -30dB level without "pause")

SERVICE TEST PROGRAM

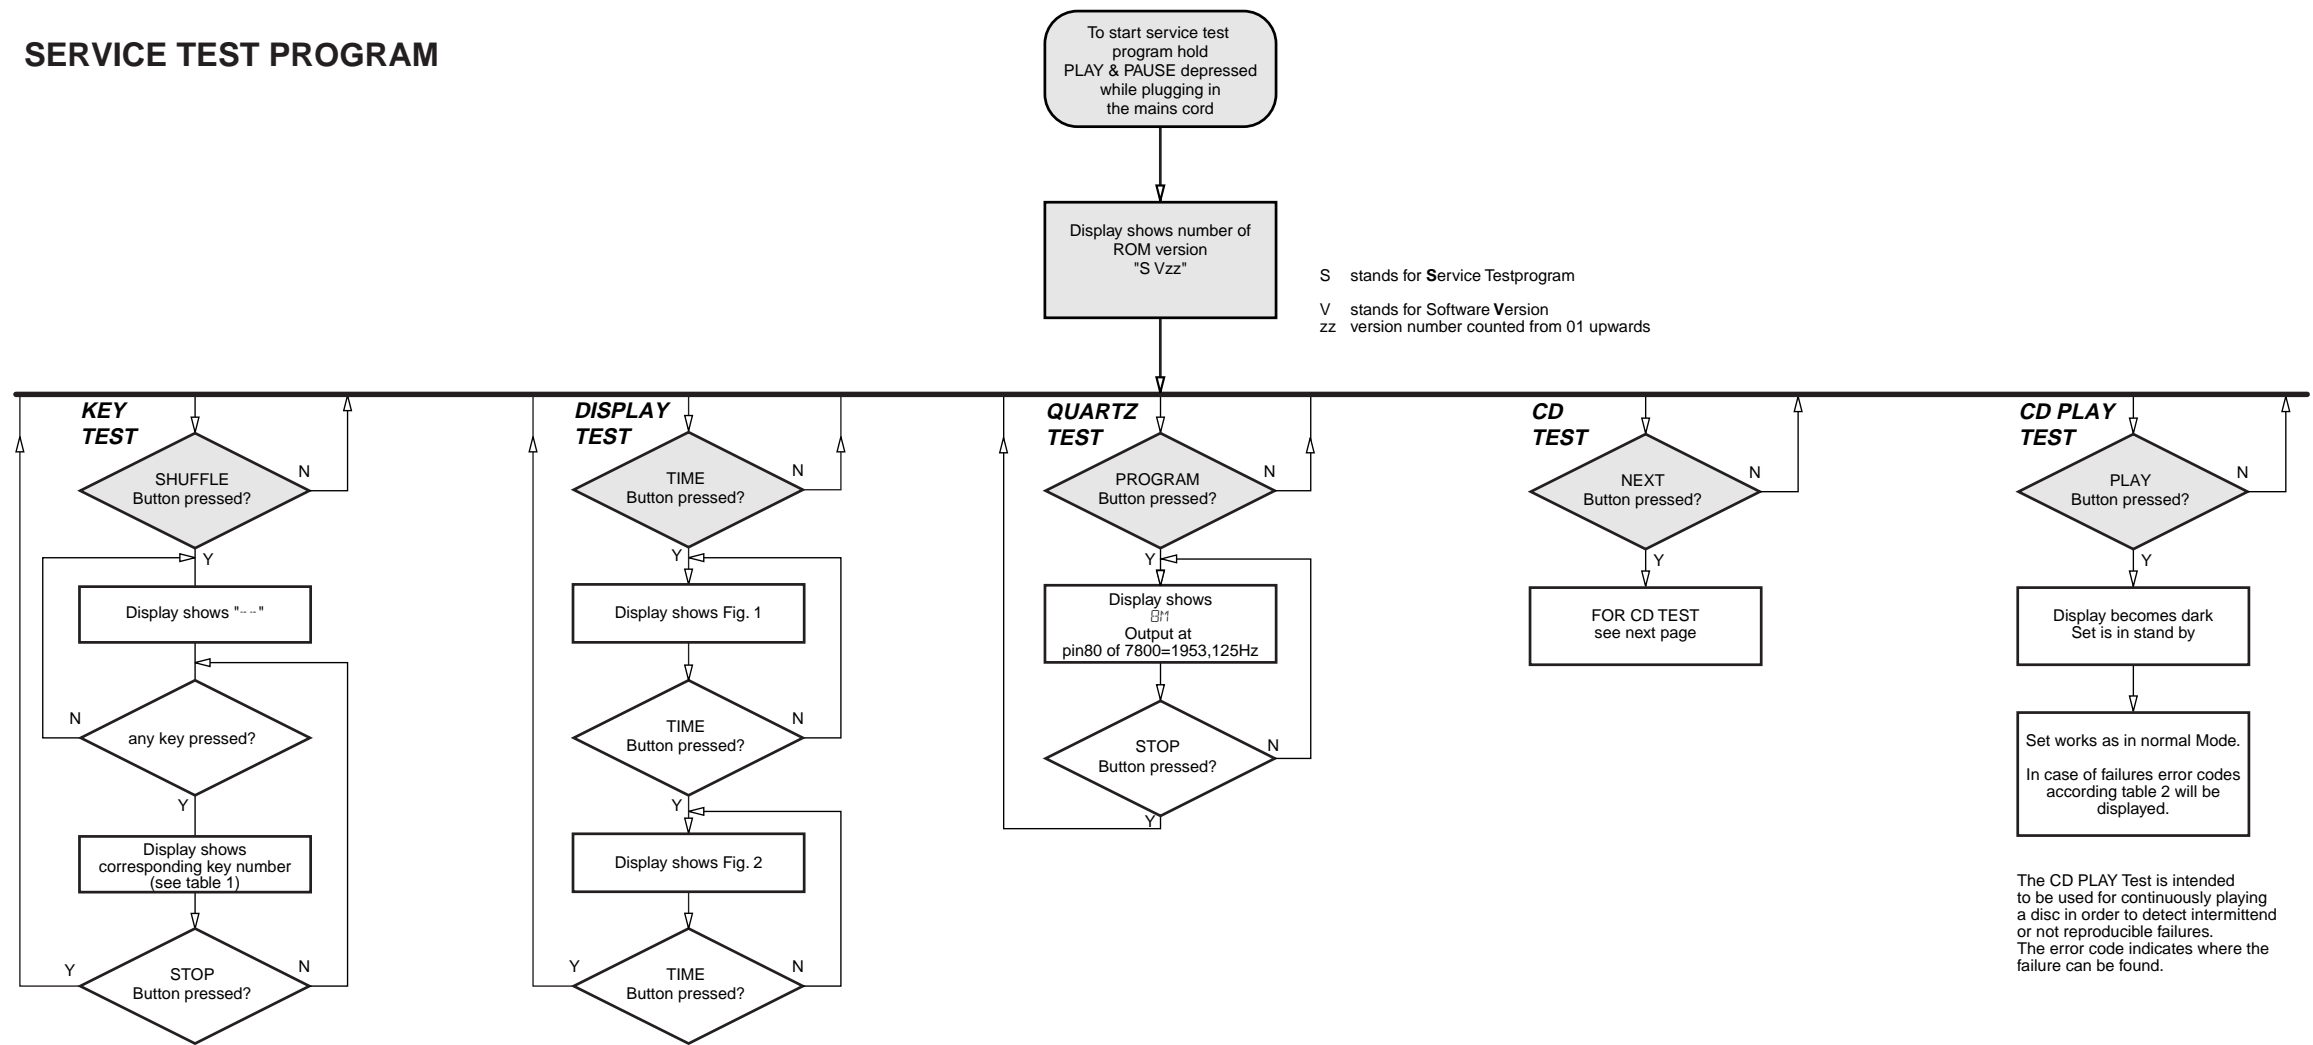

KEY TEST

Key	Number	Key	Number	Key	Number
Next	1	Shuffle	7	Fade	13
Previous	2	Scan	8	Time	14
Play	3	Program	9	CD-Text	15
Stop	EXIT	Peak search	10	Scroll	16
Open/Close	5	Repeat	11	Stand by	17
Edit	6	Pause	12	any RC button	RC

Table 1

DISPLAY TEST

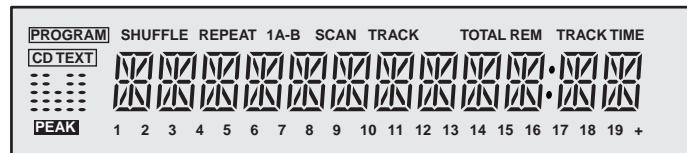


Fig. 1



Fig. 2

CD PLAY TEST

Error number	Type	Description
1000	W	Focus error Triggered when the focus could not be found within a certain time when starting up the CD or when the focus is lost for a certain time during playing the CD.
1001	W	Radial error Triggered when the radial servo is not on track for a certain time during playing the CD.
1002	W	Slide in error Generated when the slide did not reach its inner position (innerswitch is closed) before 6 seconds have passed by. Innerswitch or slide motor problem.
1003	W	Slide out error Generated when the slide did not come out of its inner position (innerswitch is open) before 250ms have passed by. Innerswitch or slide motor problem.
1005	W	Jump error Generated when the jump destination could not be found within a certain time.
1006	W	Subcode error No valid subcode for a certain time.
1007	W	PLL error The Phase -Lock-Loop could not lock within a certain time.
1008	W	Turntable motor error Generated when the CD could not reach 75% of speed during starting up within a certain time. Disc motor problem
1020	F	Focus search error Focus point has not been found within a certain time.

Table 2

W = Warning
Error number remains on display till next warning/error
F = Fatal error
Set stops playing → Error number remains on display

SERVICE TEST PROGRAM CD-Part




To start service test program hold PLAY & PAUSE depressed while plugging in the mains cord

Display shows number of ROM version "S Vzz"

Since the CD-RW reflects much less light than an ordinary CD-A, the gain of the HF-amplifier stage and the sensitivity of the ADC inside the signal processor must be increased. The gain is switched via the HG line (pin41 of CD7), the ADC-sensitivity is switched via software (µP → CD7). During start-up the correct mode is chosen automatically; in the service test program it can be switched manually in order to allow individual measurements in both conditions.

NOTE: If sensitivity is switched to high the set will not work with normal Audio CDs!

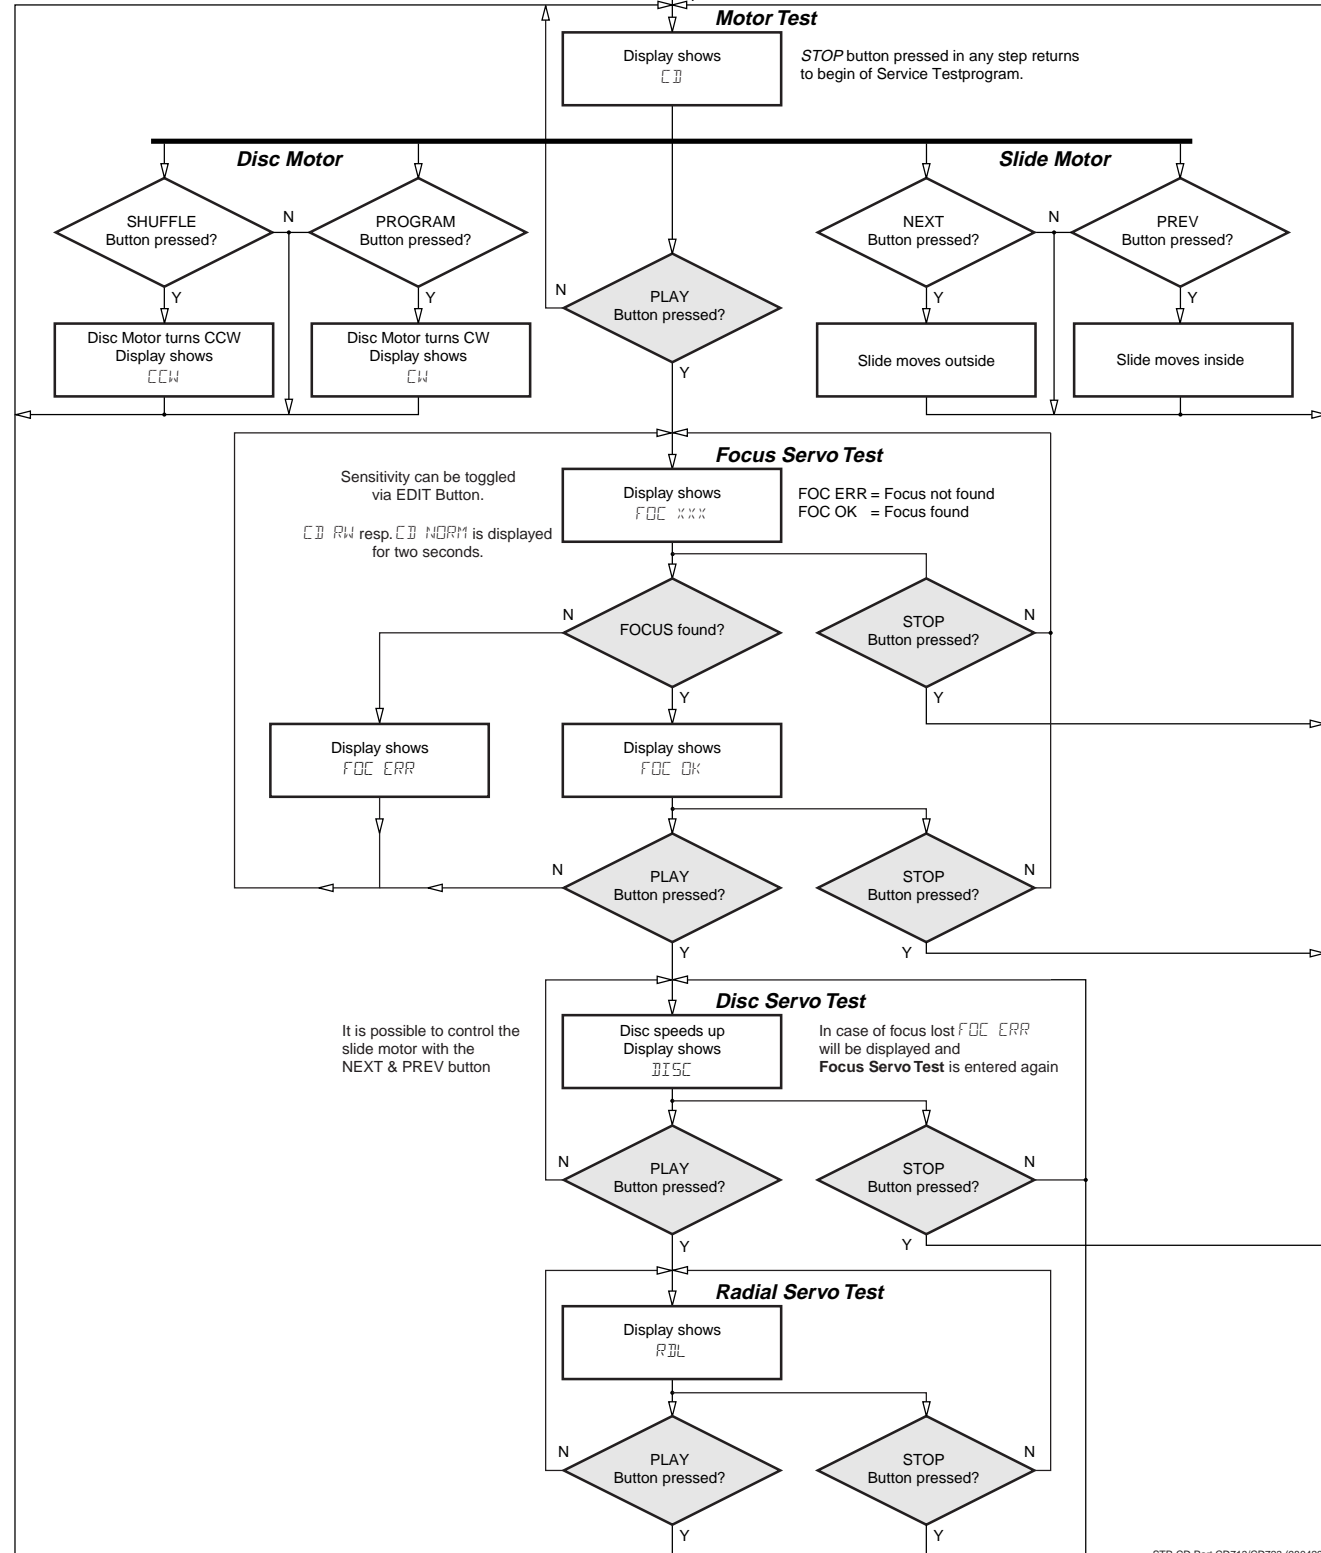


Abbreviations CD Part

SAAT372 – DECODER AND DIGITAL SERVO IC CD7


Pin	Name	Direction	Description
1	VSSA1	GND	supply (analog) of CD7
2	VDDA1	+4V	supply (analog) of CD7
3	D1	HF-preamp → CD7	unipolar current input (central diode signal input)
4	D2	HF-preamp → CD7	unipolar current input (central diode signal input)
5	D3	HF-preamp → CD7	unipolar current input (central diode signal input)
6	VRL	GND	reference input for ADC
7	D4	HF-preamp → CD7	unipolar current input (central diode signal input)
8	R1	HF-preamp → CD7	unipolar current input (satellite diode signal input)
9	R2	HF-preamp → CD7	unipolar current input (satellite diode signal input)
10	IREFT	→ CD7	current reference for calibration ADC
11	VRH	not connected	reference output from ADC
12	VSSA2	GND	supply (analog) of CD7
13	SELPLL	+4V	selects whether internal clock multiplier PLL is used
14	ISLICE	CD7 →	current feedback from data slicer
15	HFIN	→ CD7	comparator signal input
16	VSSA3	GND	supply (analog) of CD7
17	HREF	→ CD7	comparator common mode input
18	IREF	→ CD7	reference current pin (nom. VDD/2)
19	VDDA2	+4V	supply (analog) of CD7
20	TEST1	GND	test control input
21	CRIN	X-Tal → CD7	crystal/resonator input
22	CDOUT	X-Tal → CD7	crystal/resonator output
23	TEST2	GND	test control input
24	CL16	not connected	16.9344MHz system clock output
25	CL11	not connected	11.2896MHz or 5.6448MHz clock output (3-state)
26	RA	CD7 → servo driver	radial actuator output
27	FO	CD7 → servo driver	focus actuator output
28	SL	CD7 → servo driver	slide actuator output
29	TEST3	GND	test control input
30	VDD1P	+4V	supply (digital) of CD7
31	DOBM	CD7 → digital output	bi-phase mark output (3-state)
32	VSS1	GND	supply (digital) of CD7
33	MOTO1	CD7 → servo driver	motor output1 of CD7; versatile (3-state)
34	MOTO2	CD7 → servo driver	motor output2 of CD7; versatile (3-state)
35	SBSY	not connected	subcode block sync (3-state)
36	SFSY	not connected	subcode frame sync (3-state)
37	RCK	GND	subcode clock input
38	SUB	not connected	P to W subcode bits (3-state)
39	VSS2	GND	supply (digital) of CD7
40	V5	not connected	versatile output pin of CD7
41	V4	not connected	versatile output pin of CD7
42	V3	not connected	versatile output pin of CD7 (open drain)
43	KILL	CD7 →	kill output; programmable (open drain)
44	MISC	not connected	C2 error flag; output only defined in CD-ROM modes (3-state)
45	DATA	CD7 → DAC	serial data output (3-state)
46	WCLK	CD7 → DAC	word clock output (3-state)
47	VDD2P	+4V	supply (digital) of CD7
48	BCLK	CD7 → DAC	serial bit clock output (3-state)
49	VSS3	GND	supply (digital) of CD7
50	CL4	not connected	4.2336MHz µP clock output
51	SDA	µP → CD7	µP interface data I/O line (open drain output)
52	SCL	µP → CD7	µP interface clock line
53	RAB	µP → CD7	µP interface R/W and load control line
54	SILD	µP → CD7	µP interface R/W and load control line
55	NC		no connection
56	VSS4	GND	supply (digital) of CD7
57	RESET	µP → CD7	power-on reset input (active low)
58	STATUS	not connected	servo interrupt request line/CD7 status register output (open drain)
59	VDD3C	+4V	supply core (digital)
60	C2FAIL	not connected	indication of correction failure (open drain)
61	CFLG	not connected	correction flag output (open drain)
62	V1	→ CD7	versatile input pin
63	V2	→ CD7	versatile input pin
64	LDON	CD7 → 7820	laser drive on output (open drain)

BLOCKDIAGRAM

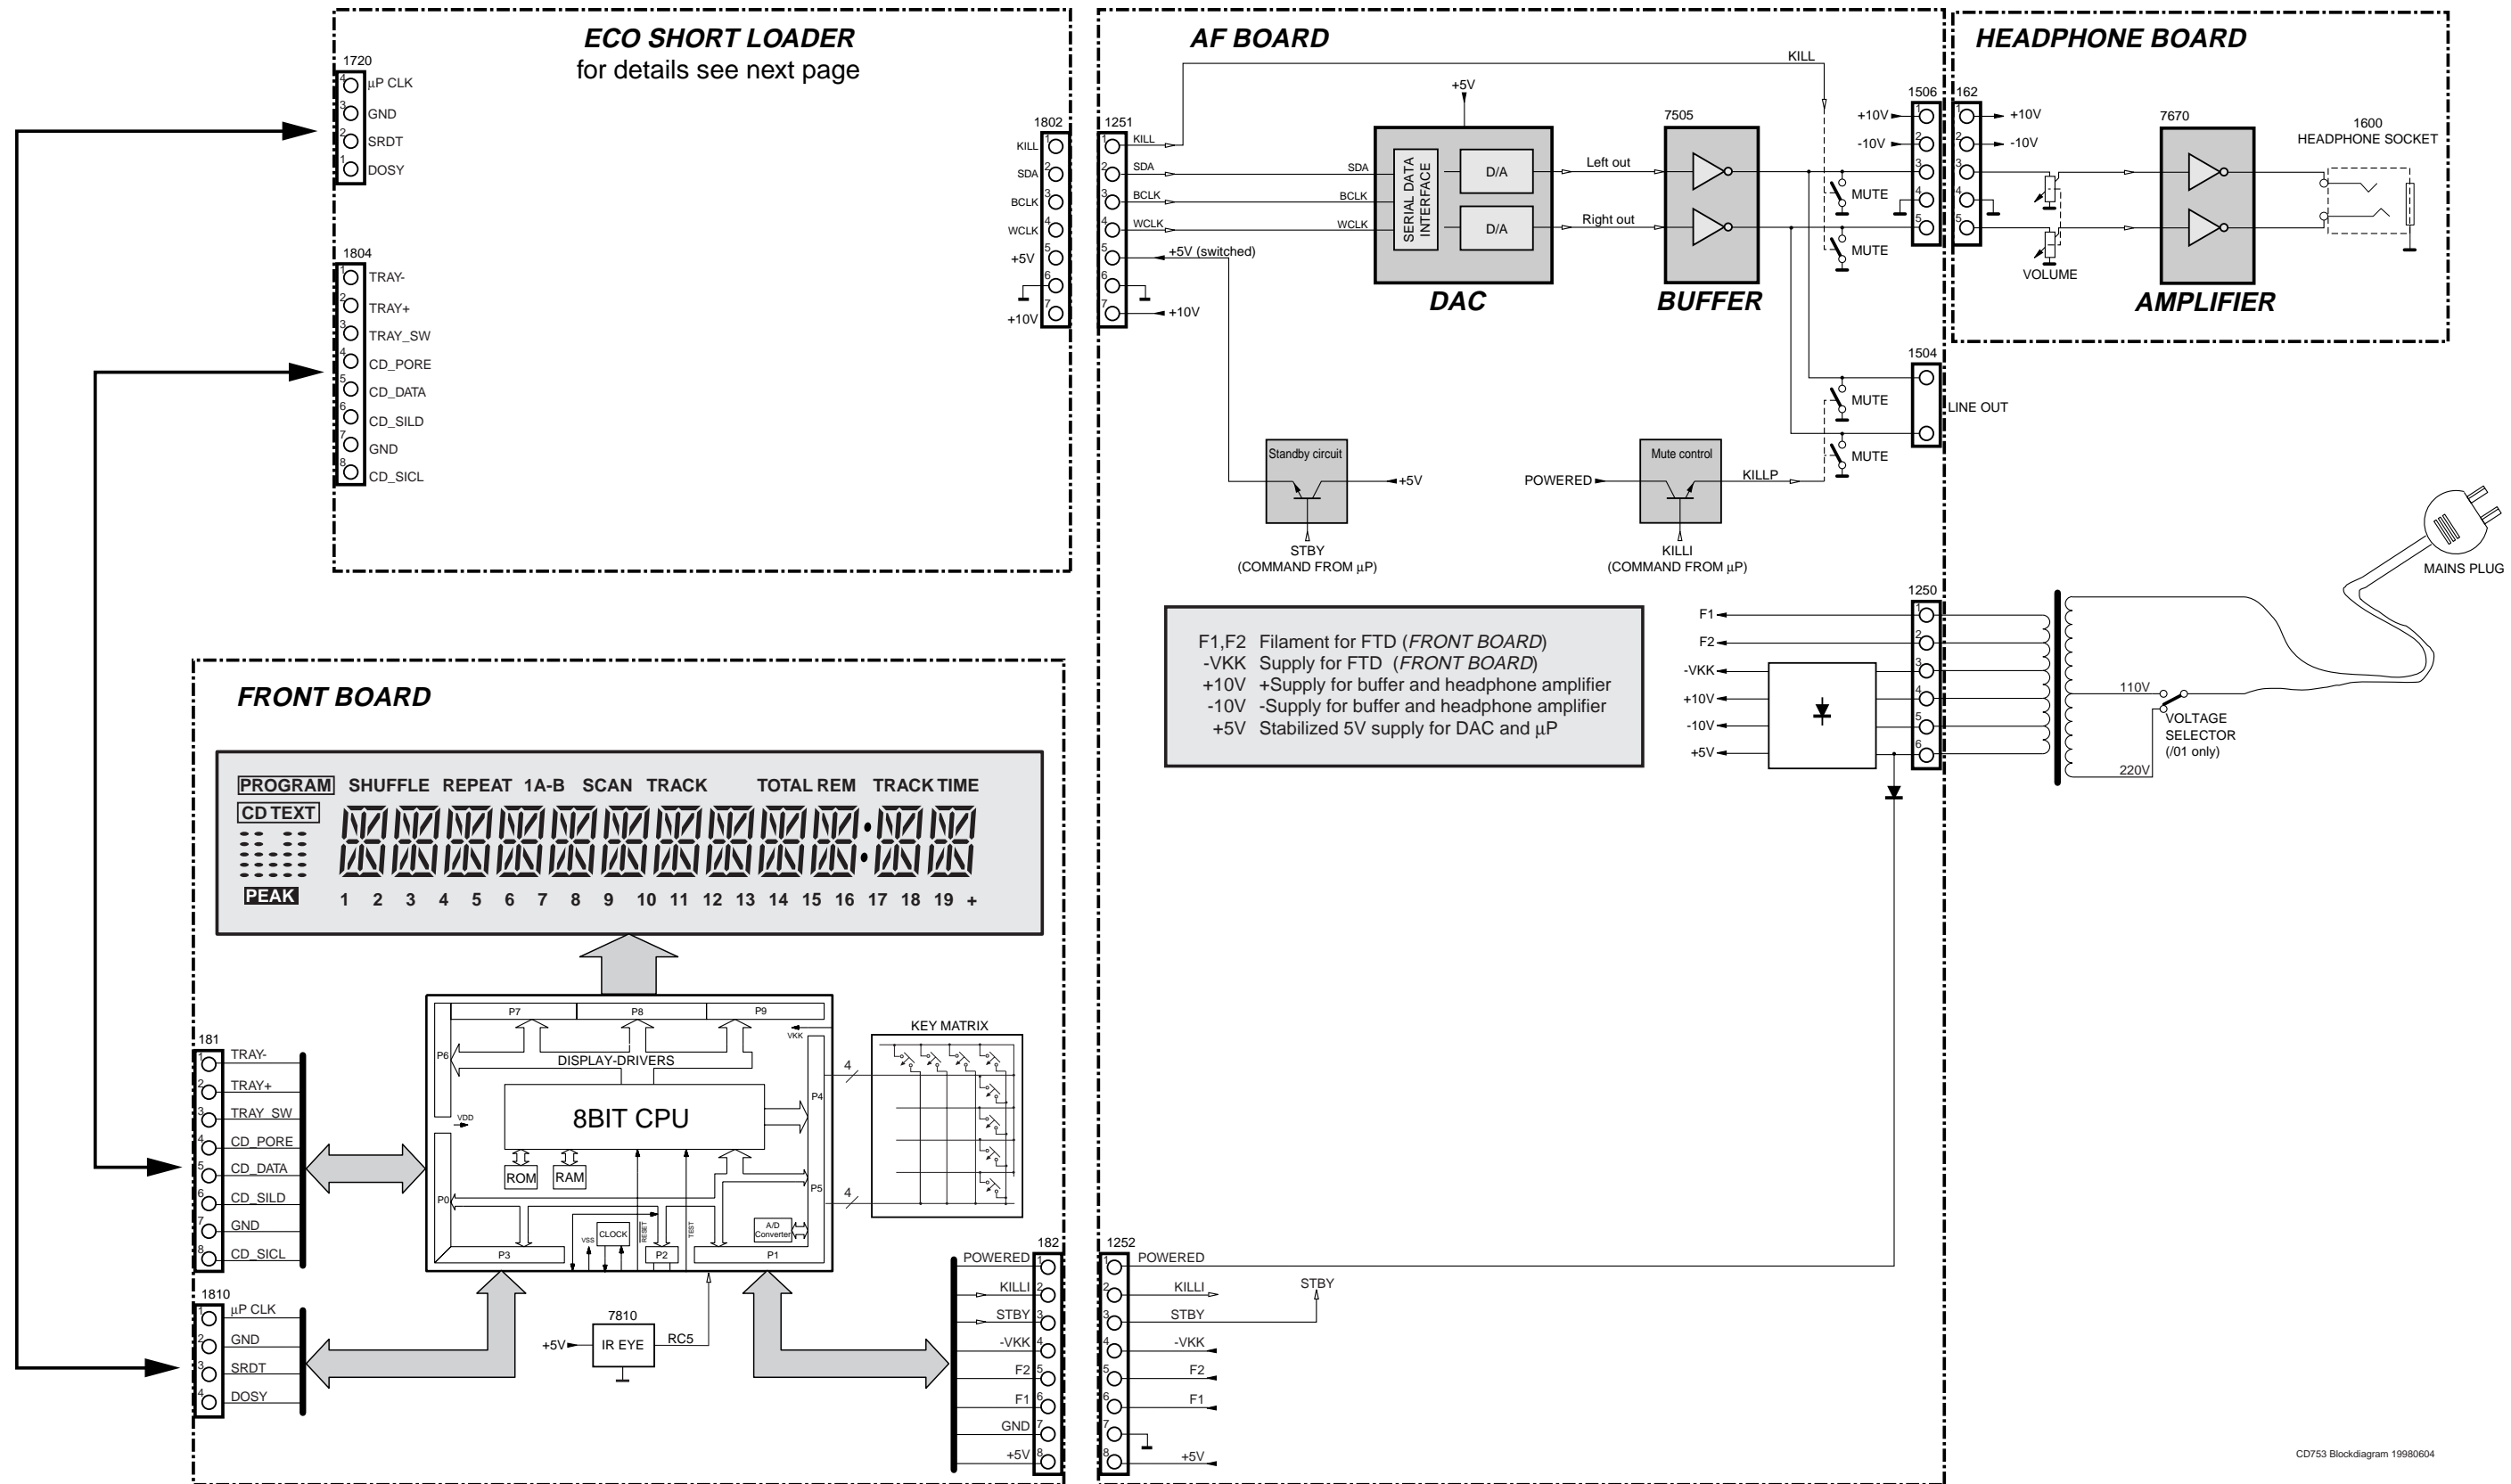


CD753 Blockdiagram 19980604

BLOCKDIAGRAM ECO SHORTLOADER MK3

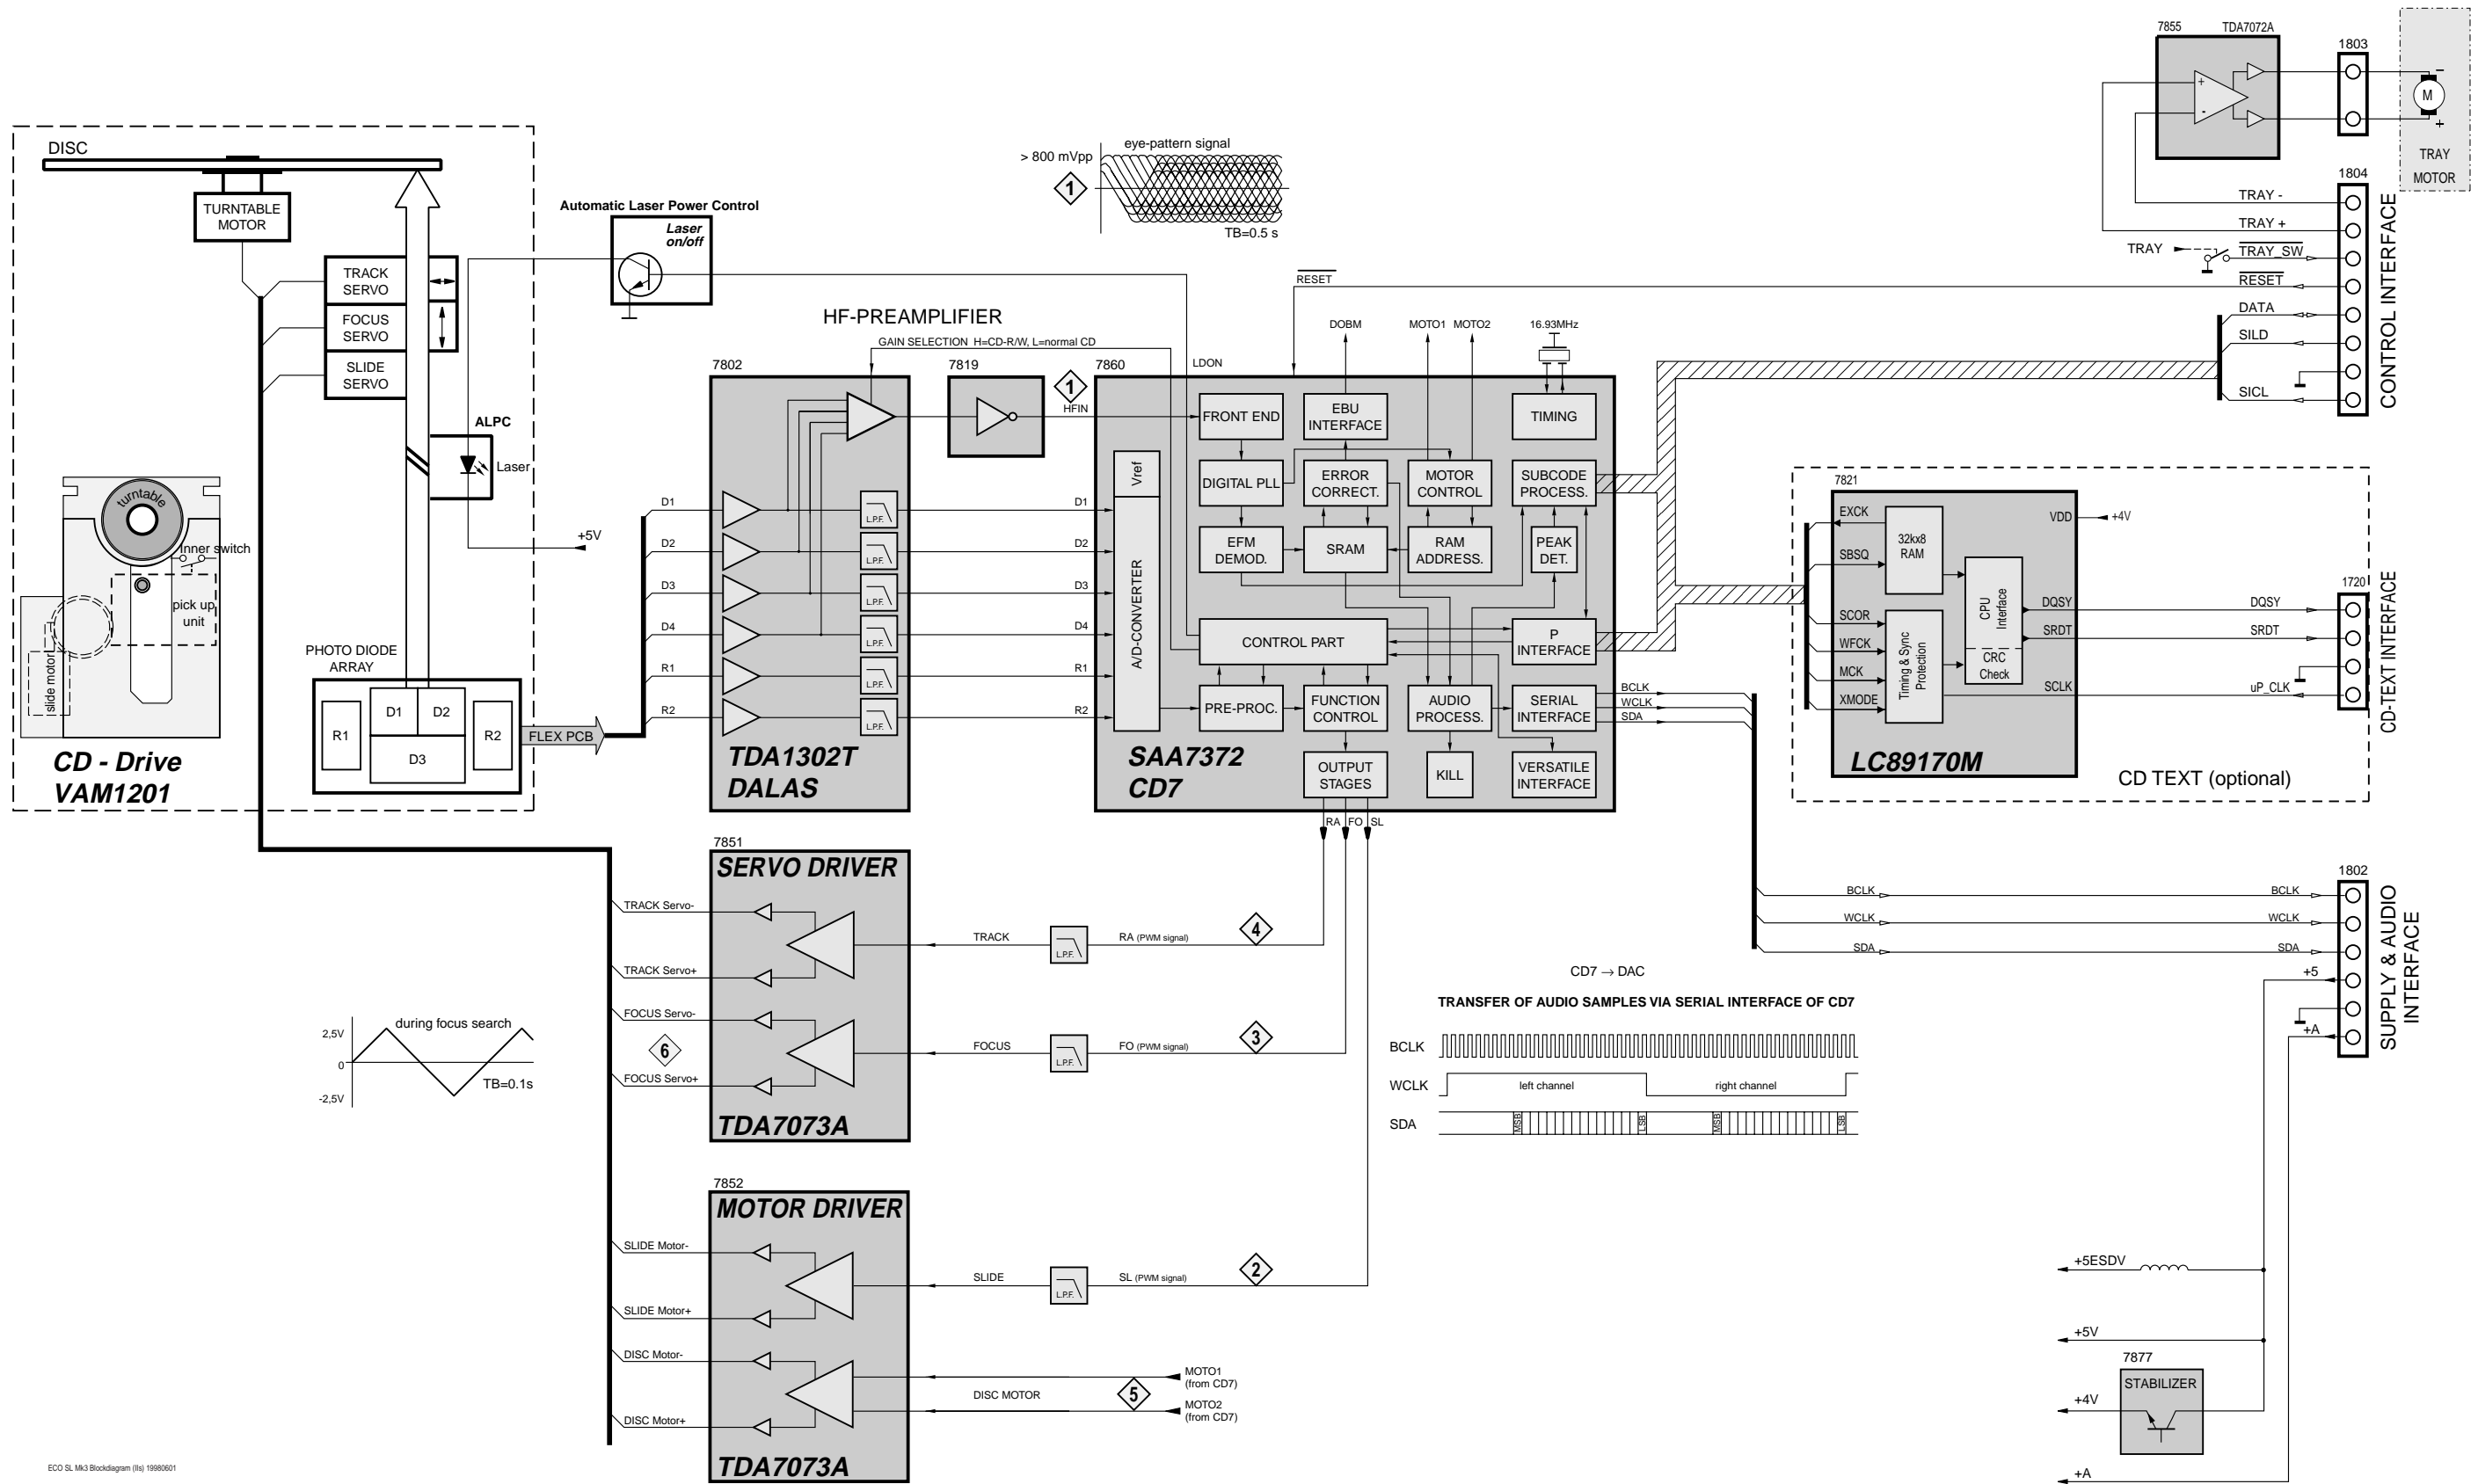


ECO SL MK3 Blockdiagram (It) 1998001



WIRING DIAGRAM

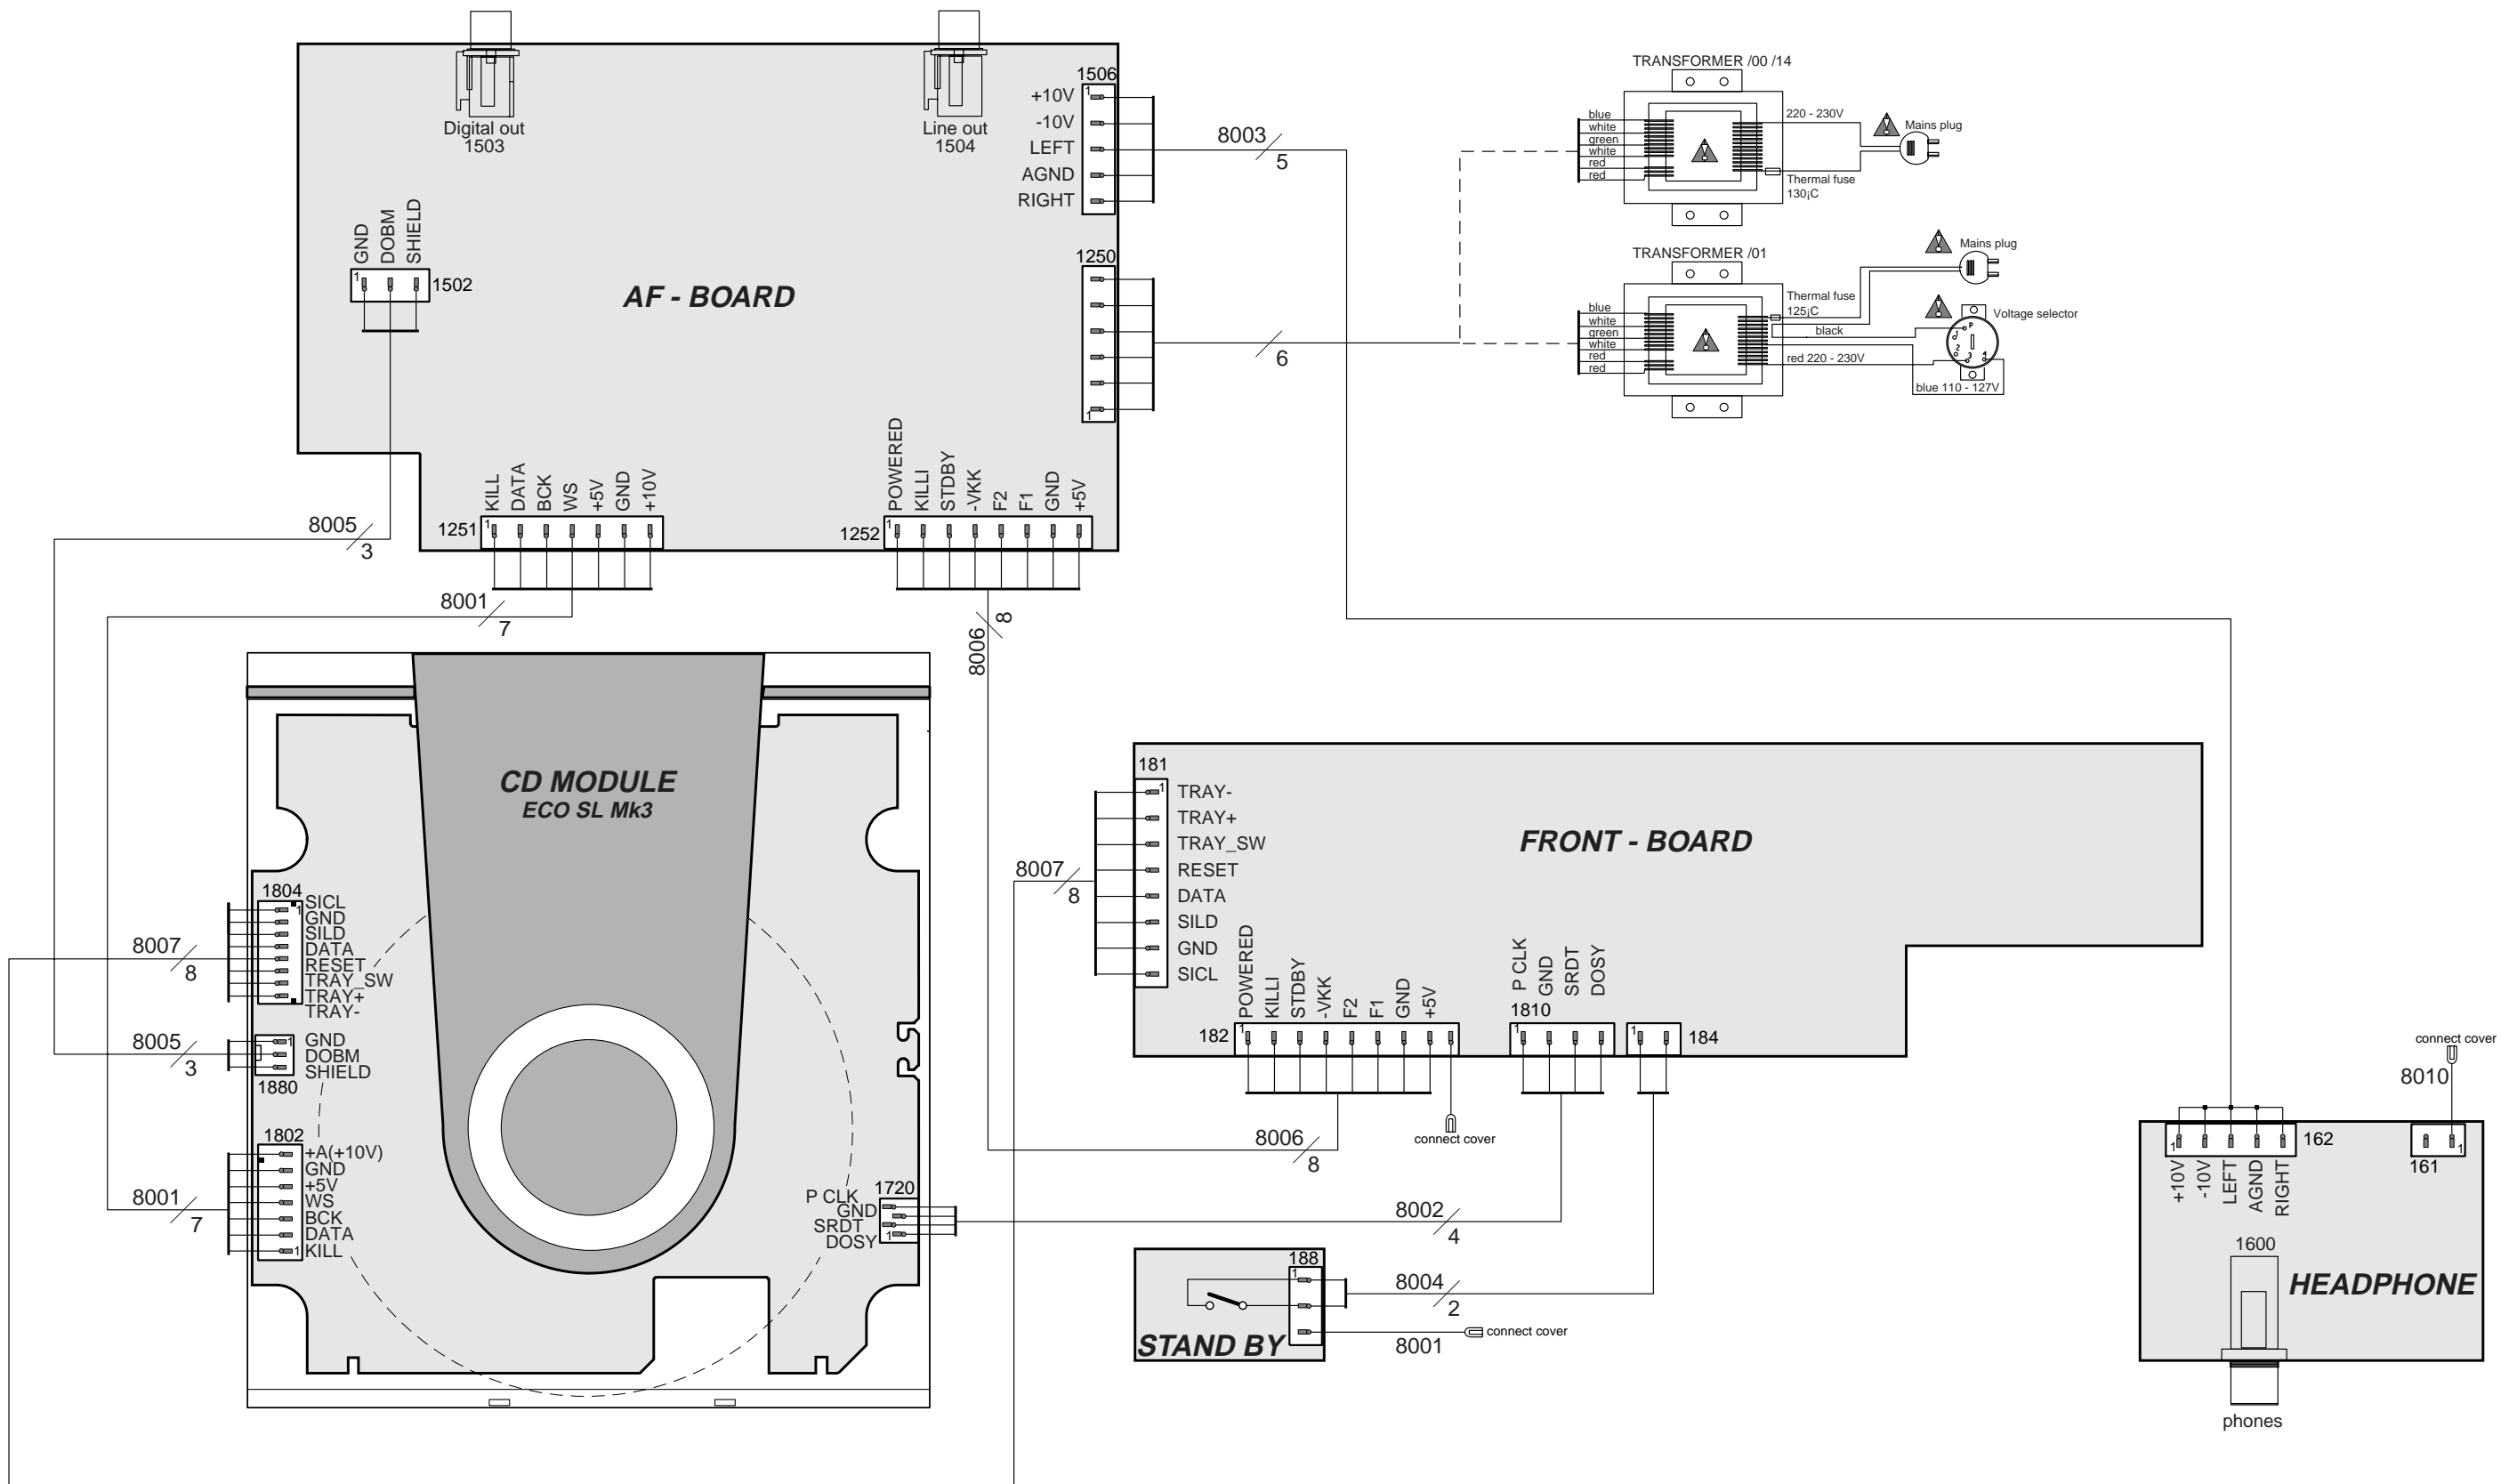

1250 A1	1506 B1	2258 A2	2508 B3	2523 A3	3252 A1	3501 A2	3510 B3	3534 A3	3544 B2	5801 B4	6257 A2	7501 A2	9254 A2	9267 B1
1251 A4	2250 A1	2259 A2	2511 B2	2524 A4	3253 A1	3502 A4	3511 B2	3535 A3	3545 B1	5803 B4	6258 A1	7504 A2	9256 A2	9269 A2
1252 A1	2251 A2	2501 A3	2512 B2	2527 B4	3254 A2	3503 A4	3512 B2	3537 B2	3547 B1	6250 A1	6259 A2	7505 B2	9257 A2	9270 A3
1255 A1	2252 A1	2502 A3	2513 B2	2540 B4	3255 A1	3504 A4	3513 B2	3538 B3	3548 A2	6251 A1	6260 A3	7507 B1	9258 A2	9272 A4
1256 A1	2253 A1	2503 A4	2514 B1	2541 A4	3256 A2	3505 A3	3514 B2	3539 B2	3550 A4	6252 A1	6500 A2	7508 B1	9259 A3	9274 B4
1502 A4	2254 A2	2504 A3	2515 A3	2543 B4	3257 A2	3506 A3	3515 A3	3540 B1	3552 A4	6253 A1	7250 A1	7509 B1	9263 A3	
1503 B4	2255 A3	2505 A4	2516 A4	2544 A4	3258 A2	3507 B2	3527 A2	3541 B2	3553 A4	6254 A2	7251 A3	7510 B1	9264 A3	
1504 B1	2256 A1	2506 A4	2521 B2	2545 B4	3260 A3	3508 B2	3532 A2	3542 B2	3556 B4	6255 A1	7252 A2	7511 B4	9265 A3	
1505 B4	2257 A1	2507 A3	2522 B3	3251 A1	3500 A3	3509 B3	3533 B4	3543 B1	3557 A1	6256 A1	7500 A3	9253 A1	9266 B3	

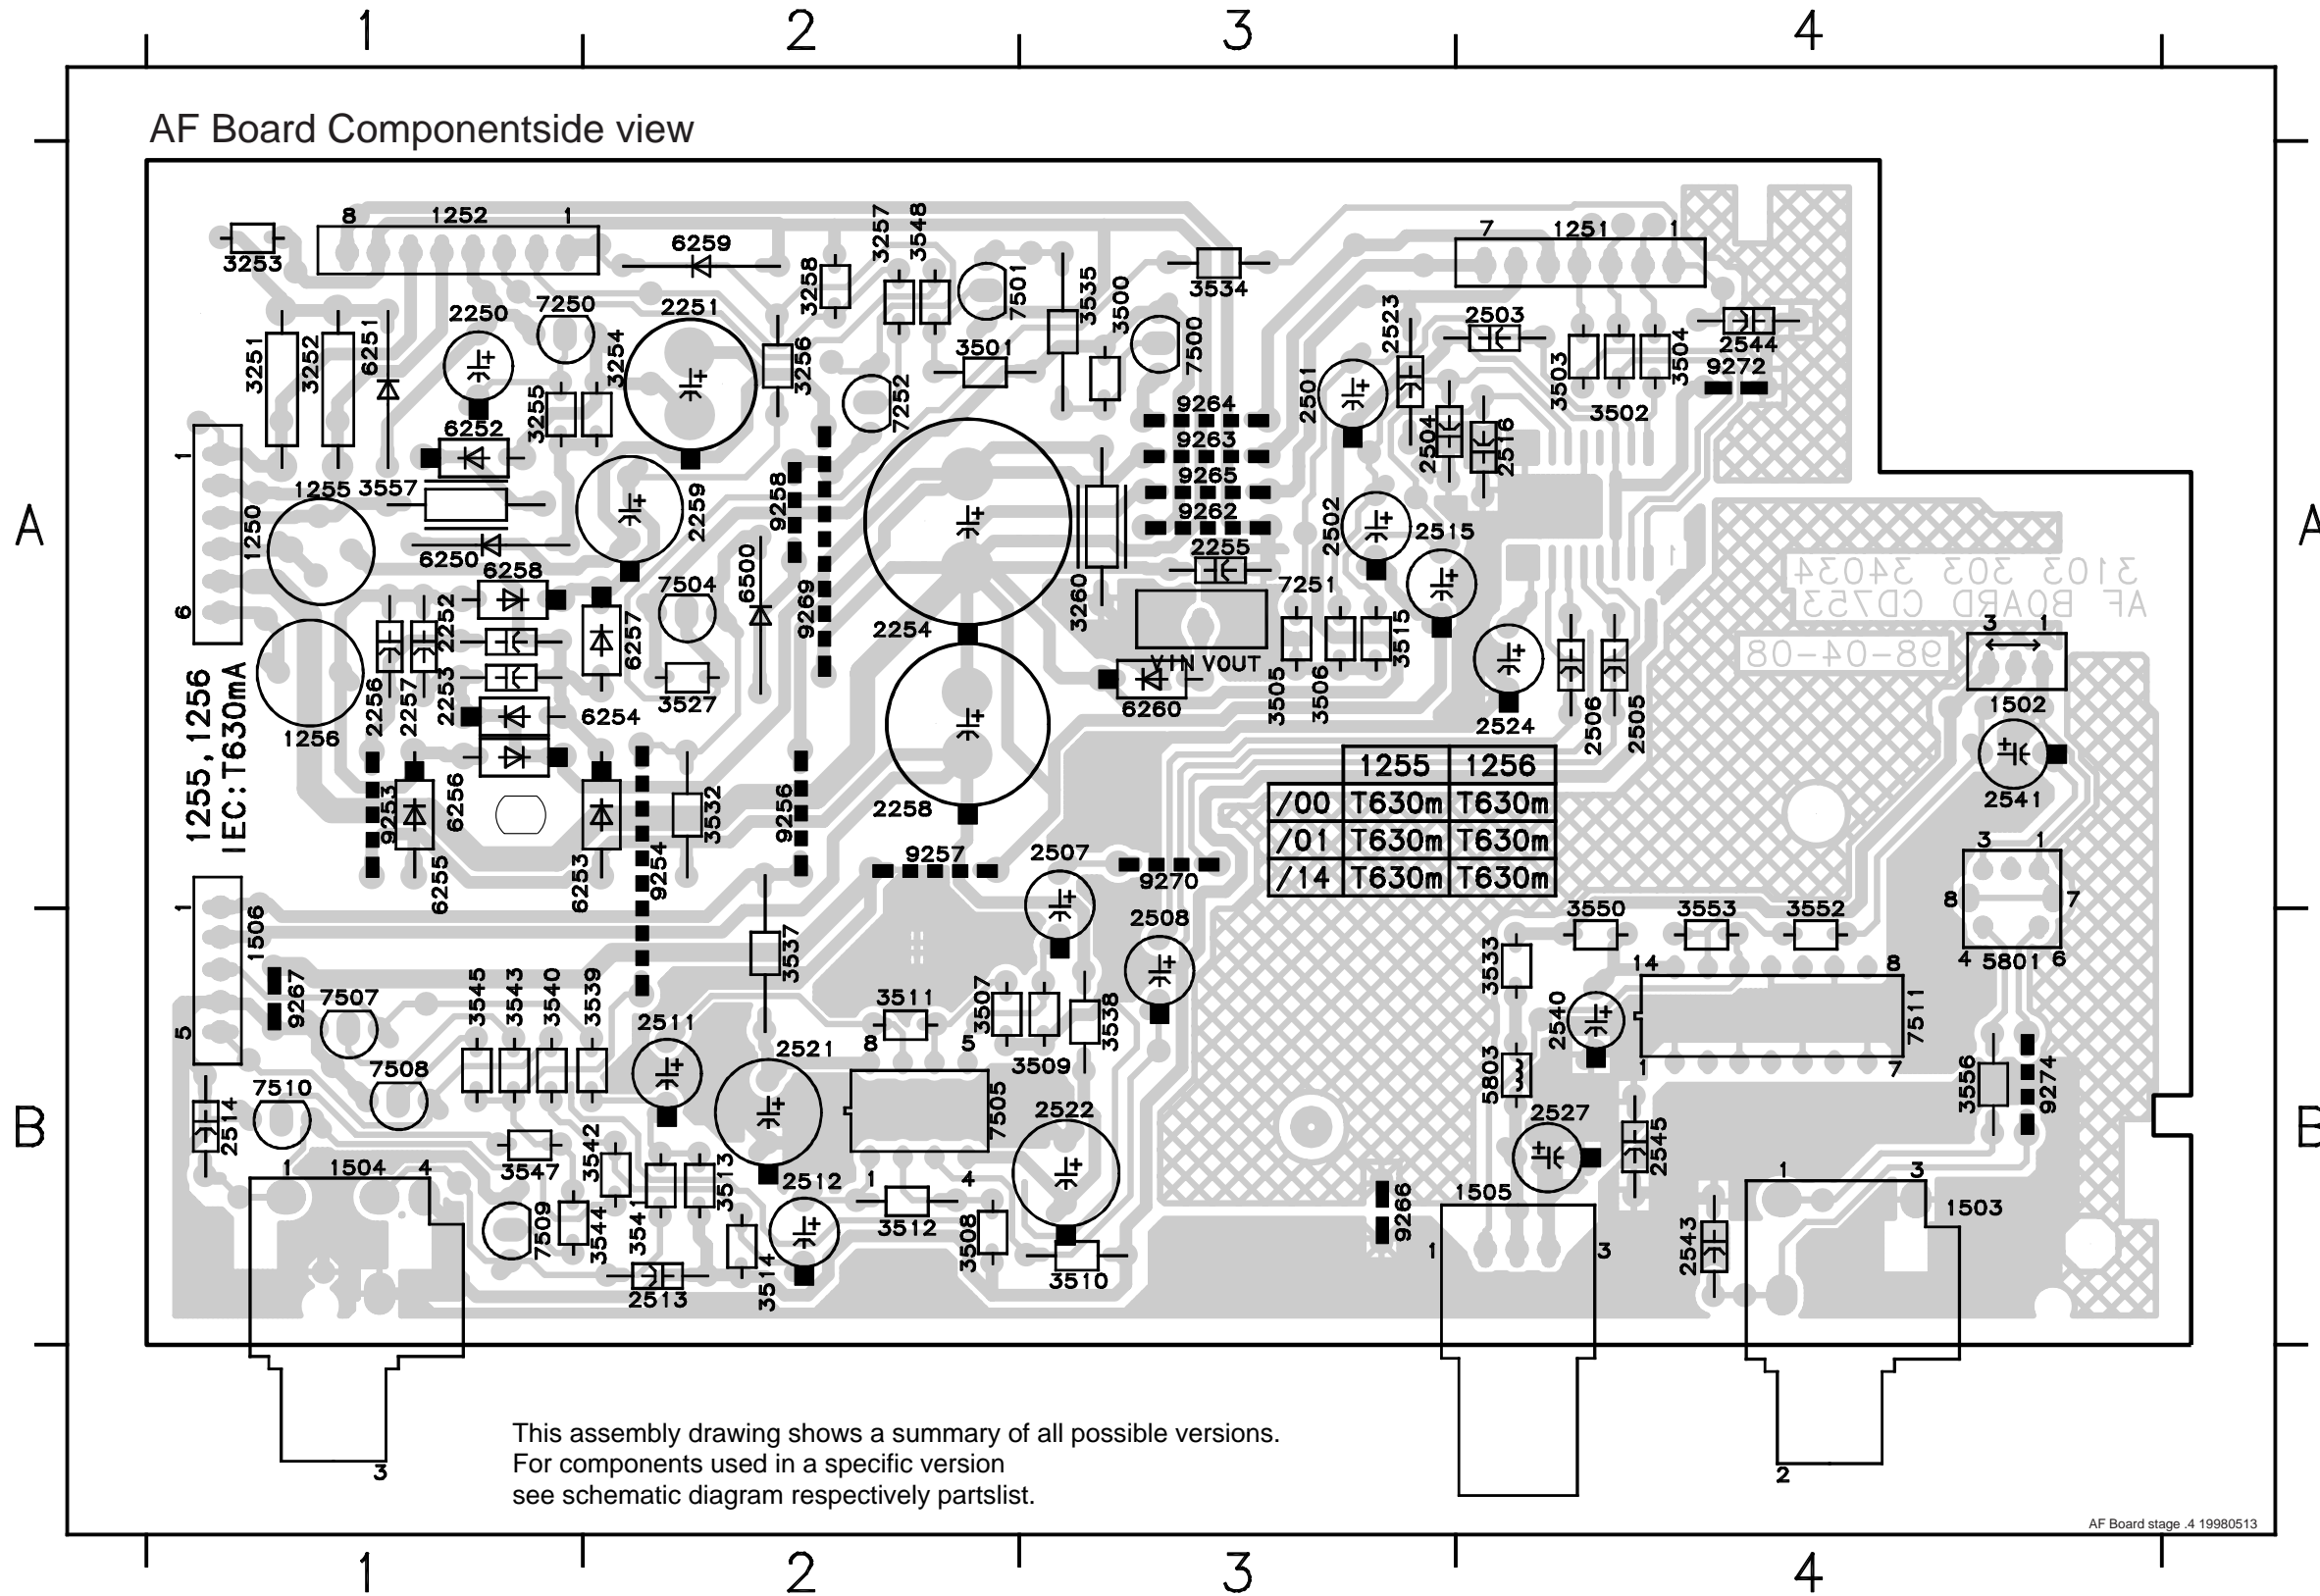


1251 B1	1505 F7	2504 D4	2511 B10	2516 E4	2527 F6	2545 H3	3504 C3	3509 B8	3514 E10	3534 C10	3540 C12	3545 C12	3553 G4	7500 C2	7505-B B9	7511-F F4	F514 C1	F519 C5	F524 E7	F529 C14	F541 G2	F546 F7	F554 G14
1252 F14	1506 B14	2505 D7	2512 E10	2521 A9	2540 F2	3500 D2	3505 C4	3510 E8	3515 D4	3535 D2	3541 D12	3547 E12	3556 G4	7501 E2	7507 B13	F510 B1	F515 C1	F520 D5	F525 B14	F530 D14	F542 G2	F550 F14	F555 G14
1502 G2	2501 C4	2506 D5	2513 D13	2522 F9	2541 G3	3501 D2	3506 D4	3511 C9	3527 C10	3537 A8	3542 E12	3548 E3	5801 G3	7502 C7	7508 C13	F511 B1	F516 C1	F521 B8	F526 B14	F531 D14	F543 G4	F551 G14	F556 G14
1503 G4	2502 D4	2507 B8	2514 E13	2523 C2	2543 H4	3502 B3	3507 B8	3512 D9	3532 D10	3538 F8	3543 B12	3550 F4	5803 F6	7504 C10	7509 D13	F512 B1	F517 D2	F522 E7	F527 C14	F532 D14	F544 G4	F552 G14	F557 G14
1504 D14	2503 C4	2508 E7	2515 E4	2524 D7	2544 B2	3503 B3	3508 E8	3513 B10	3533 F5	3539 B12	3544 D12	3552 F4	6500 F11	7505-A E9	7510 E13	F513 B1	F518 C4	F523 B8	F528 C14	F540 G2	F545 F7	F553 G14	

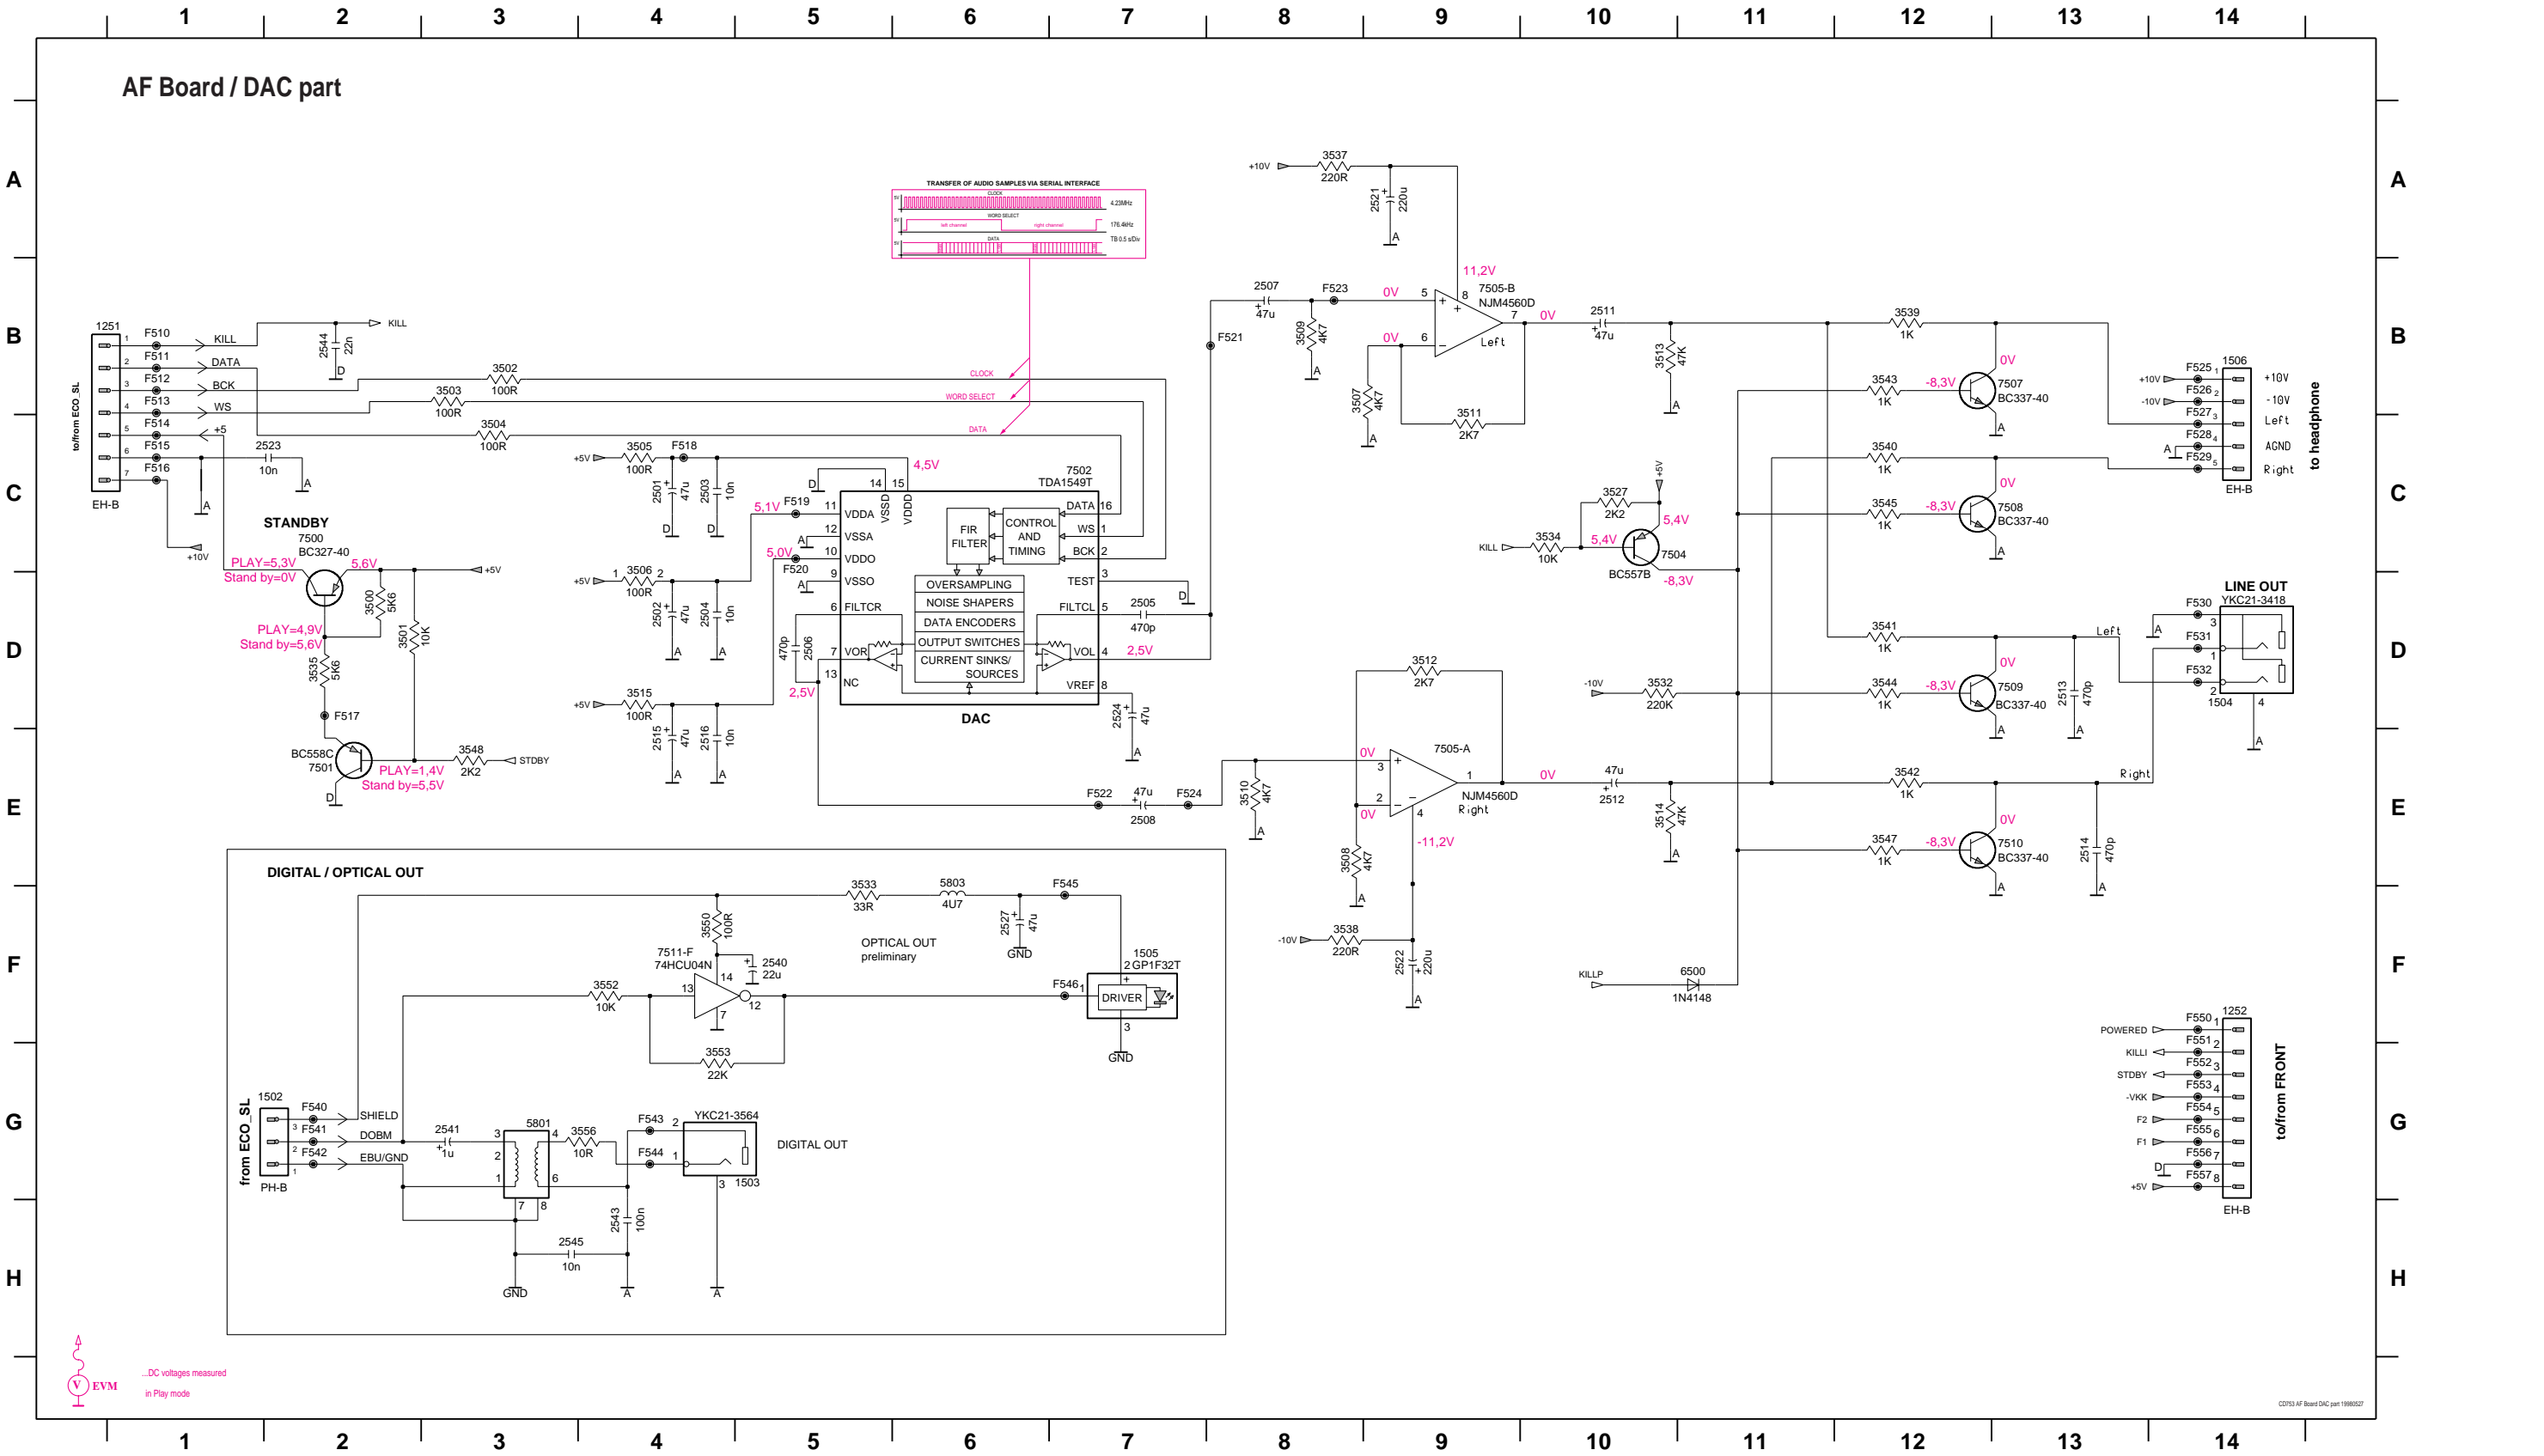

...DC voltages measured
in Play mode


1250 A1	1506 B1	2258 A2	2508 B3	2523 A3	3252 A1	3501 A2	3510 B3	3534 A3	3544 B2	5801 B4	6257 A2	7501 A2	9254 A2	9267 B1
1251 A4	2250 A1	2259 A2	2511 B2	2524 A4	3253 A1	3502 A4	3511 B2	3535 A3	3545 B1	5803 B4	6258 A1	7504 A2	9256 A2	9269 A2
1252 A1	2251 A2	2501 A3	2512 B2	2527 B4	3254 A2	3503 A4	3512 B2	3537 B2	3547 B1	6250 A1	6259 A2	7505 B2	9257 A2	9270 A3
1255 A1	2252 A1	2502 A3	2513 B2	2540 B4	3255 A1	3504 A4	3513 B2	3538 B3	3548 A2	6251 A1	6260 A3	7507 B1	9258 A2	9272 A4
1256 A1	2253 A1	2503 A4	2514 B1	2541 A4	3256 A2	3505 A3	3514 B2	3539 B2	3550 A4	6252 A1	6500 A2	7508 B1	9259 A3	9274 B4
1502 A4	2254 A2	2504 A3	2515 A3	2543 B4	3257 A2	3506 A3	3515 A3	3540 B1	3552 A4	6253 A1	7250 A1	7509 B1	9263 A3	
1503 B4	2255 A3	2505 A4	2516 A4	2544 A4	3258 A2	3507 B2	3527 A2	3541 B2	3553 A4	6254 A2	7251 A3	7510 B1	9264 A3	
1504 B1	2256 A1	2506 A4	2521 B2	2545 B4	3260 A3	3508 B2	3532 A2	3542 B2	3556 B4	6255 A1	7252 A2	7511 B4	9265 A3	
1505 B4	2257 A1	2507 A3	2522 B3	3251 A1	3500 A3	3509 B3	3533 B4	3543 B1	3557 A1	6256 A1	7500 A3	9253 A1	9266 B3	

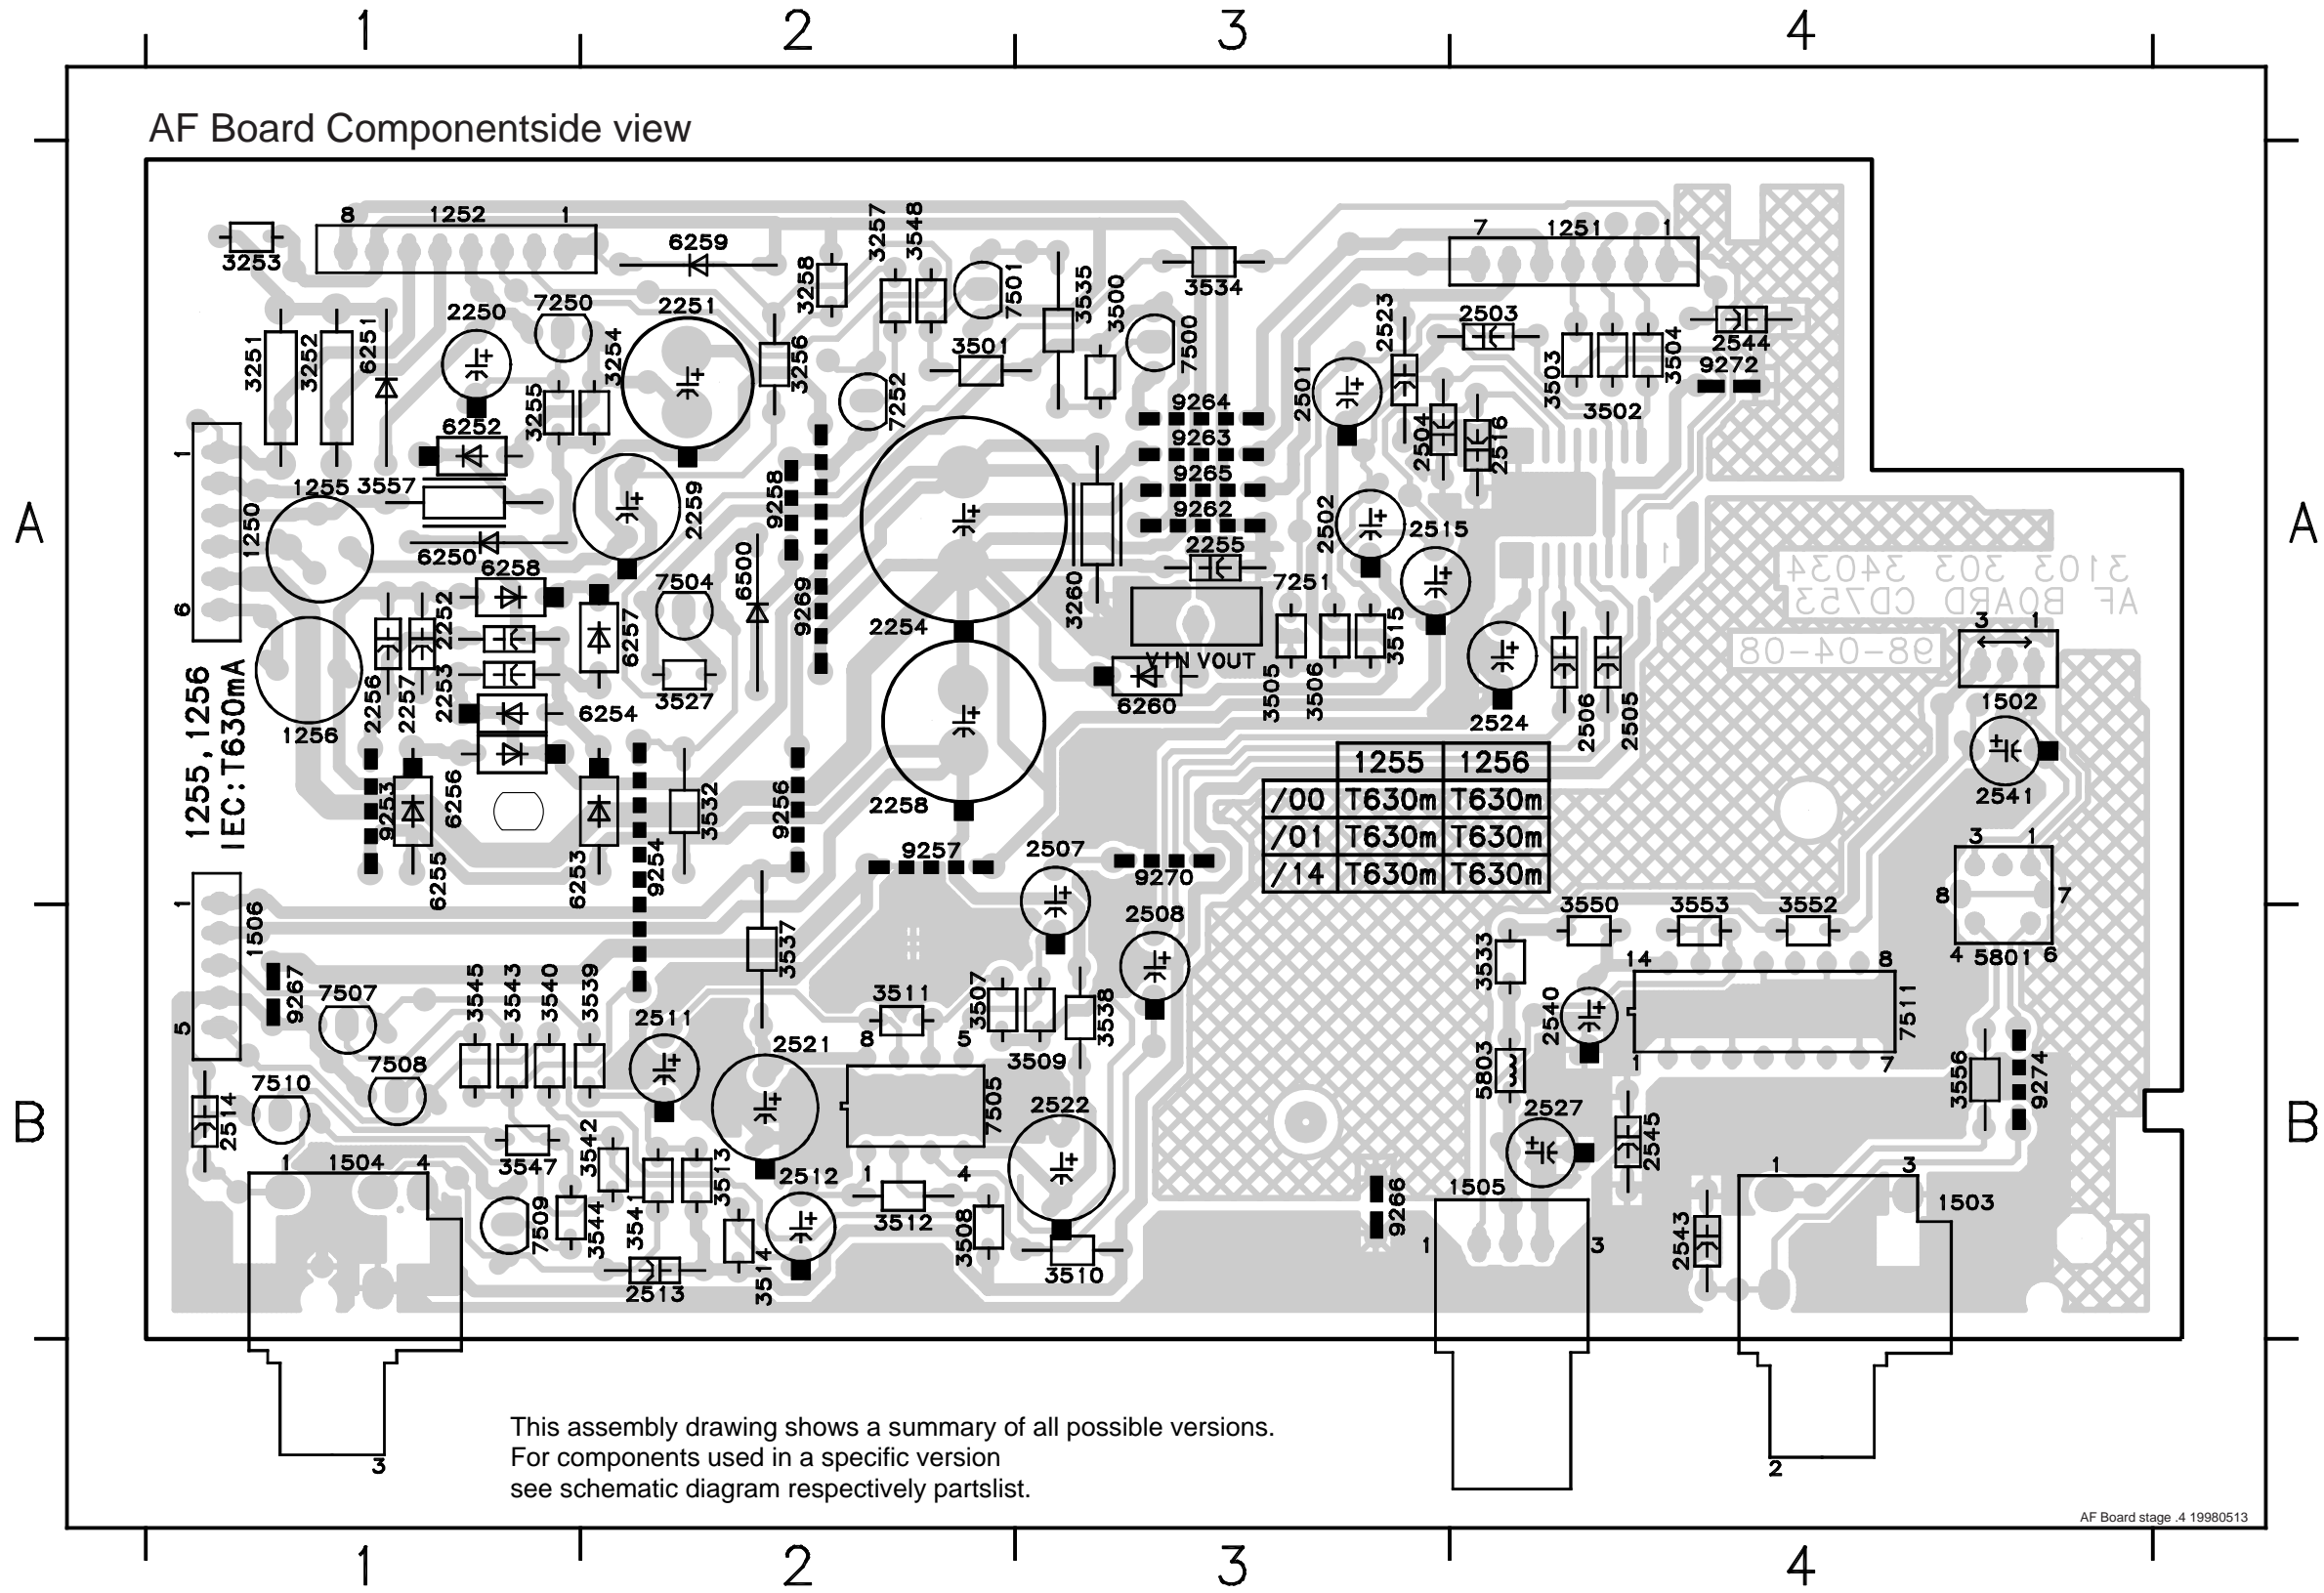

FRONT BOARD

A
B
C
D
E
F
G
H
I

A
B
C
D
E
F
G
H
I



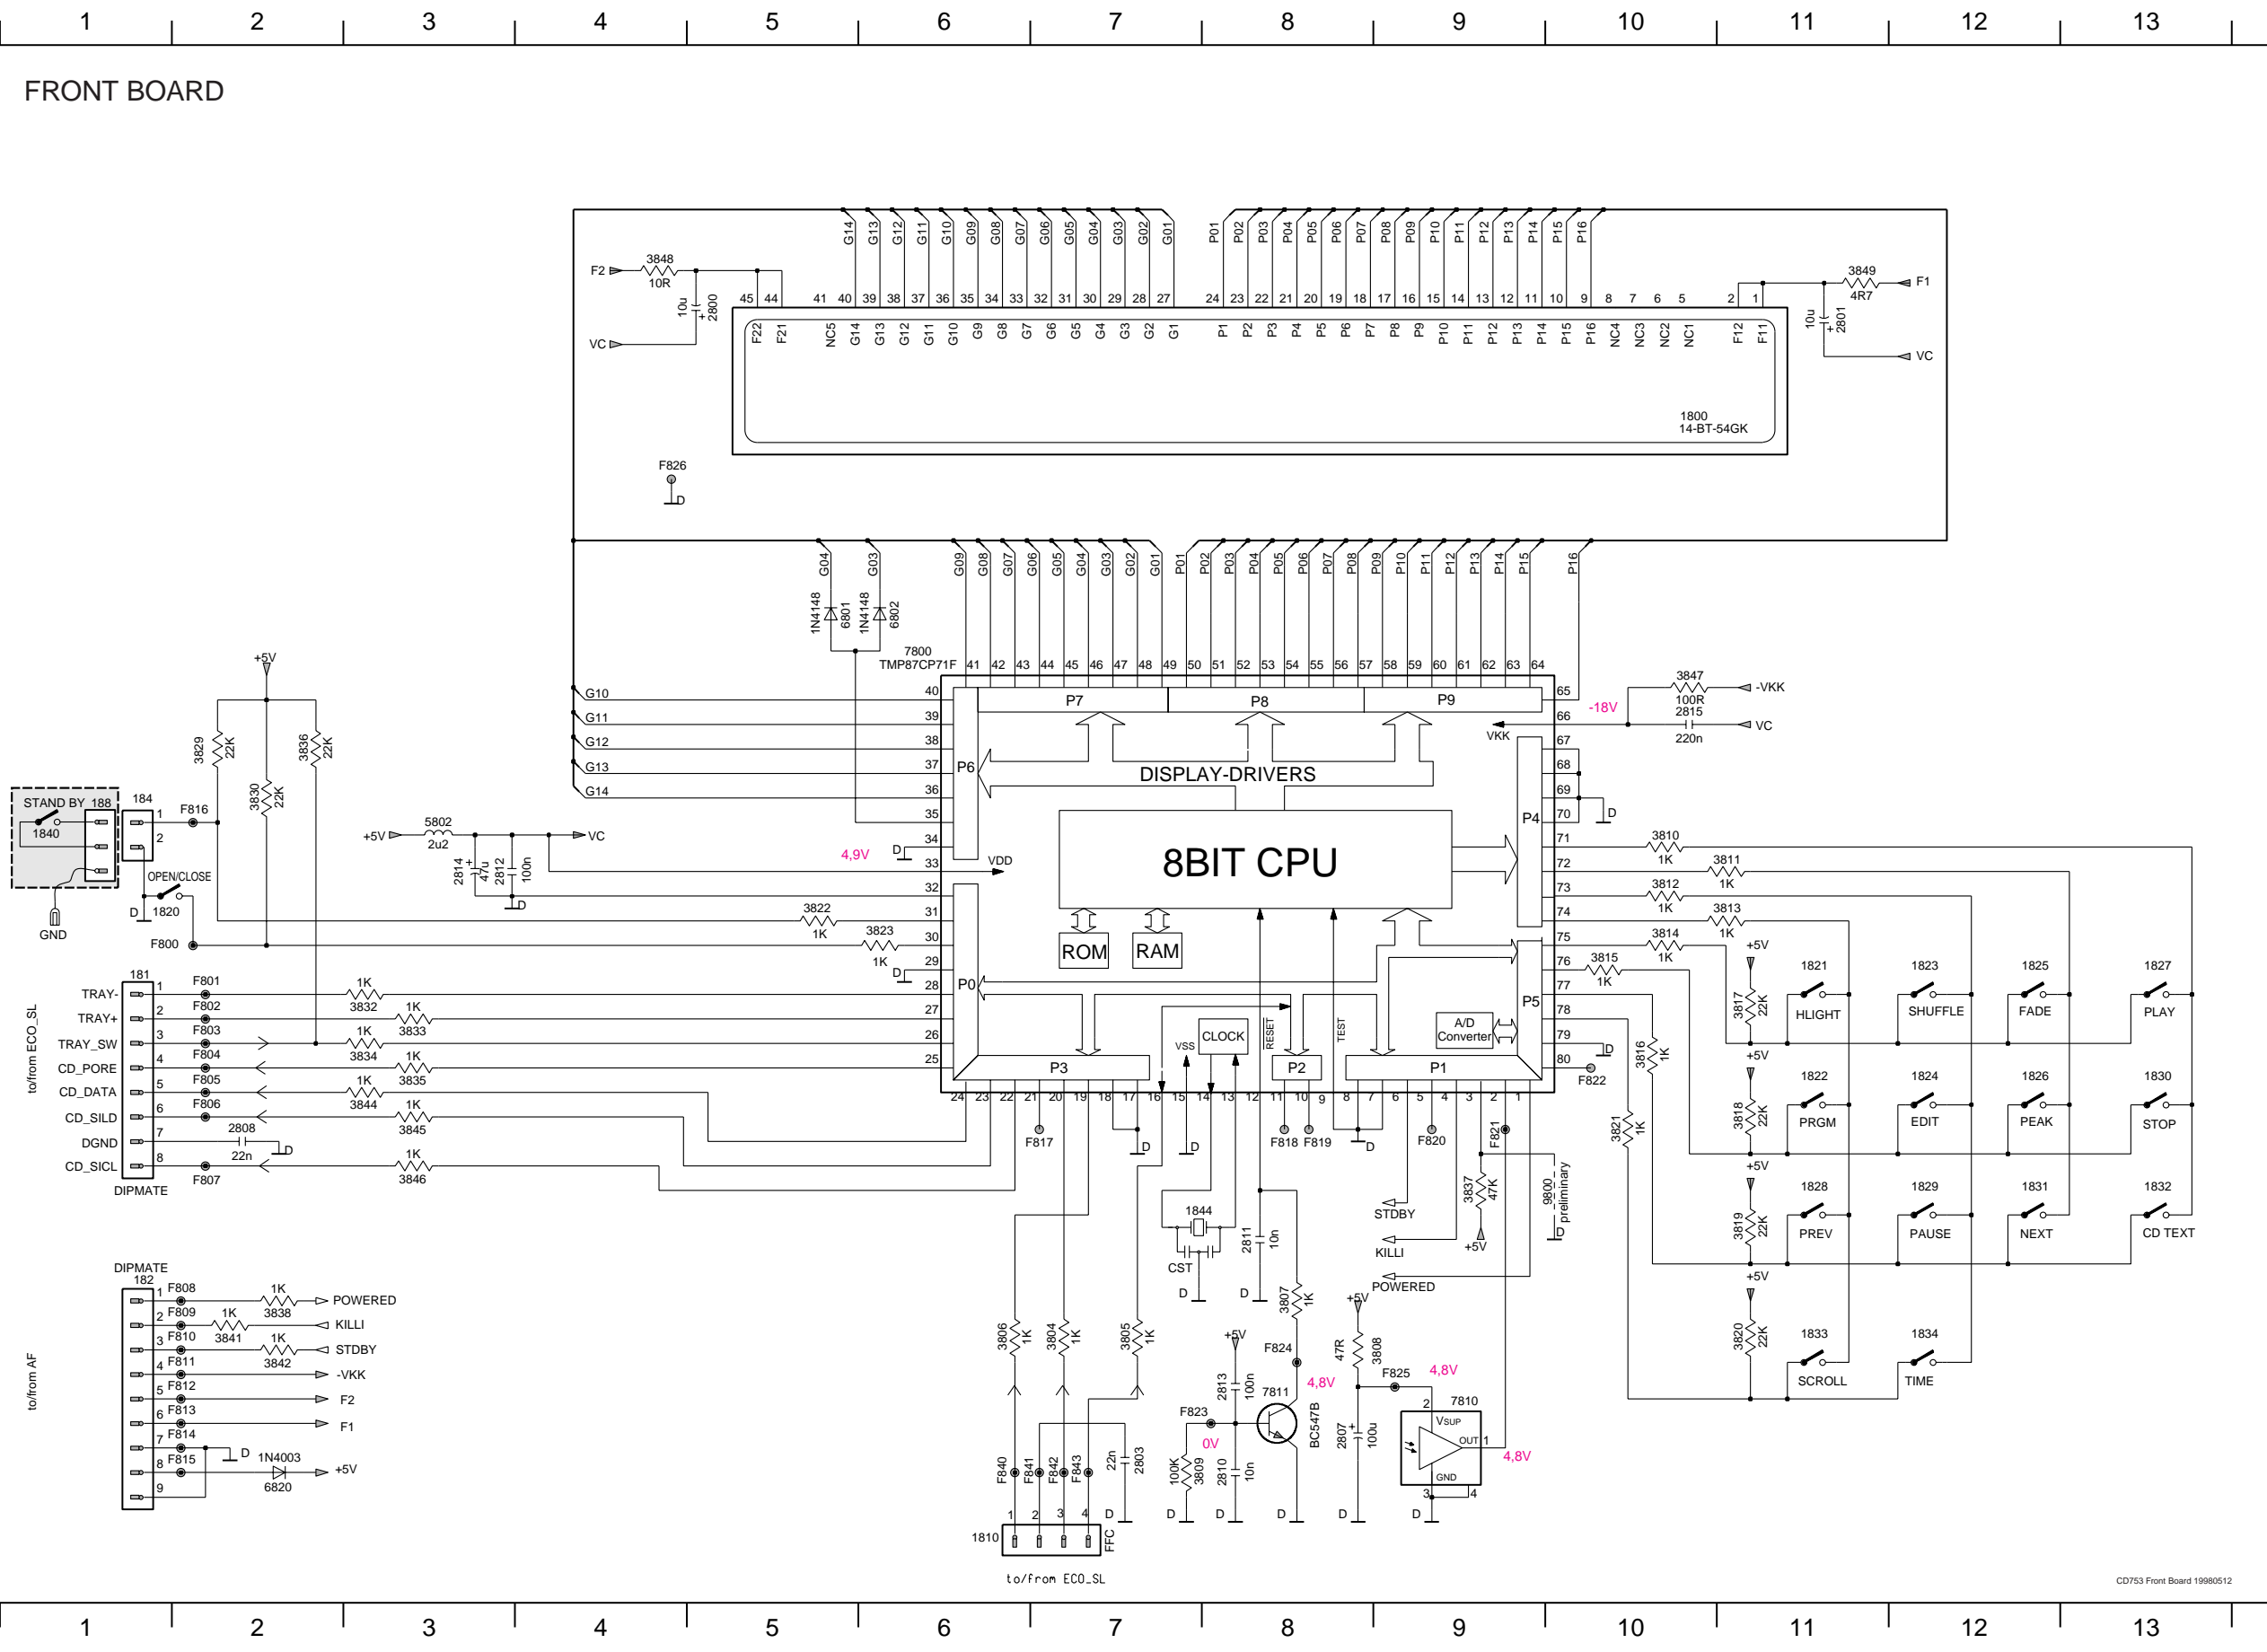


- 181 F1
- 182 H1
- 184 E1
- 1800 C10
- 1810 I6
- 1820 F1
- 1821 F11
- 1822 F11
- 1823 F12
- 1824 F12
- 1825 F12
- 1826 F12
- 1827 F13
- 1828 G11
- 1829 G12
- 1830 F13
- 1831 G12
- 1832 G13
- 1833 H11
- 1834 H12
- 1844 G7
- 2800 B5
- 2801 B11
- 2803 I7
- 2807 I8
- 2808 G2
- 2810 I8
- 2811 G8
- 2812 E3
- 2813 H8
- 2814 E3
- 2815 D10
- 3804 H7
- 3805 H7
- 3806 H6
- 3807 H8
- 3808 H8
- 3809 I7
- 3810 E10
- 3811 E11
- 3812 E10
- 3813 F11
- 3814 F10
- 3815 F10
- 3816 F10
- 3817 F11
- 3818 G11
- 3819 G11
- 3820 H11
- 3821 G10
- 3822 E5
- 3823 F6
- 3829 E2
- 3830 E2
- 3832 F3
- 3833 F3
- 3834 F3
- 3835 F3
- 3836 E2
- 3837 G9
- 3838 H2
- 3841 H2
- 3842 H2
- 3844 G3
- 3845 G3
- 3846 G3
- 3847 D10
- 3848 B4
- 3849 B11
- 5802 E3
- 6801 D5
- 6802 D6
- 6820 I2
- 7800 D6
- 7810 H9
- 7811 H8
- 9800 G10


CD753 Front Board 19980512

181 B1	1821 A5	1827 A7	1833 A4	2807 B2	2814 B3	3808 B2	3814 B5	3820 B4	3832 B1	3838 B1	3847 B2	6820 B2	9803 A5	9809 A7	9815 B3
182 B2	1822 B5	1828 B7	1834 B4	2808 B1	2815 A3	3809 B5	3815 B5	3821 A4	3833 B1	3841 B1	3848 A1	7810 B3	9804 A4	9810 B2	9816 B4
184 B3	1823 A5	1829 B7	1844 B4	2810 B5	3804 B4	3810 A5	3816 B5	3822 B3	3834 B1	3842 B2	3849 A3	7811 B5	9805 A5	9811 B2	9817 B4
1800 A3	1824 B5	1830 A8	2800 A1	2811 B4	3805 B4	3811 A5	3817 B5	3823 B2	3835 B1	3844 B1	5802 B3	9800 B4	9806 A6	9812 B2	9818 B5
1810 B1	1825 A6	1831 B8	2801 A4	2812 B3	3806 B3	3812 A5	3818 B5	3829 B4	3836 B2	3845 B1	6801 A2	9801 A3	9807 A6	9813 B2	9819 B1
1820 A1	1826 B6	1832 A4	2803 B1	2813 B4	3807 B4	3813 B5	3819 B5	3830 B2	3837 B4	3846 B1	6802 A2	9802 A3	9808 A7	9814 B4	9820 A1

7800 B3

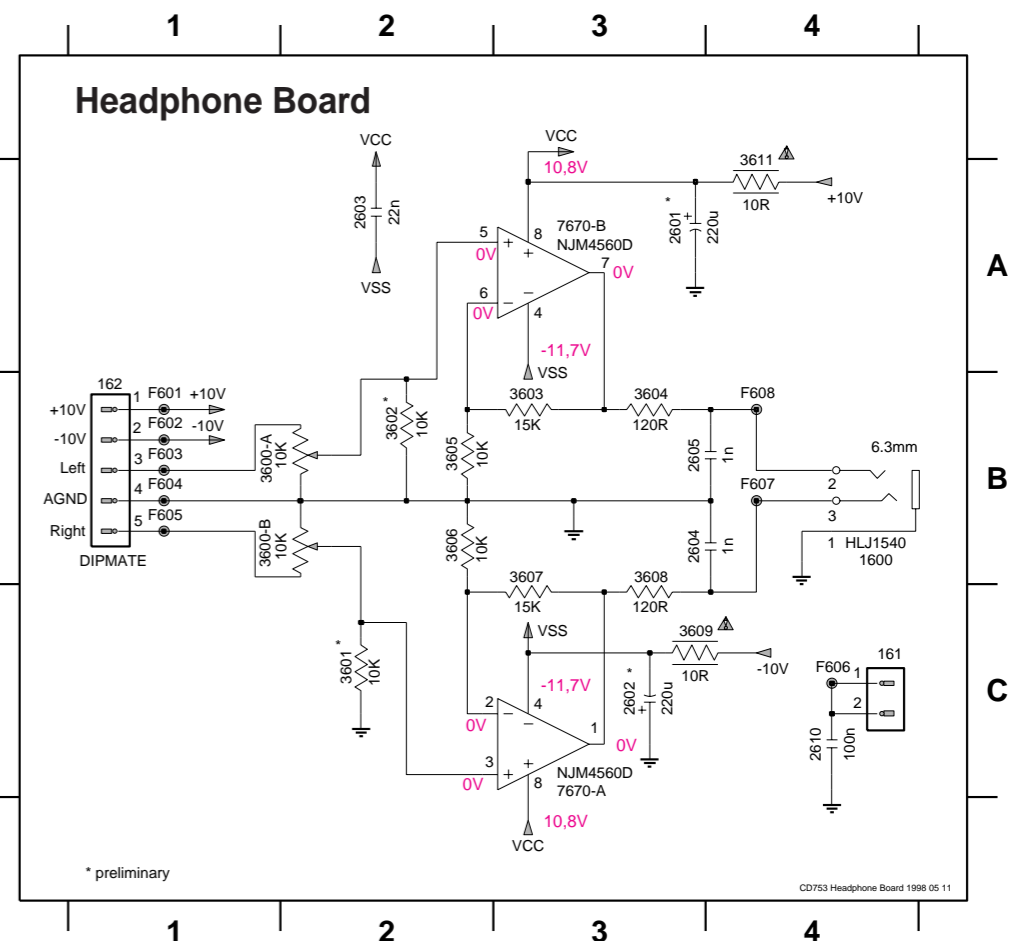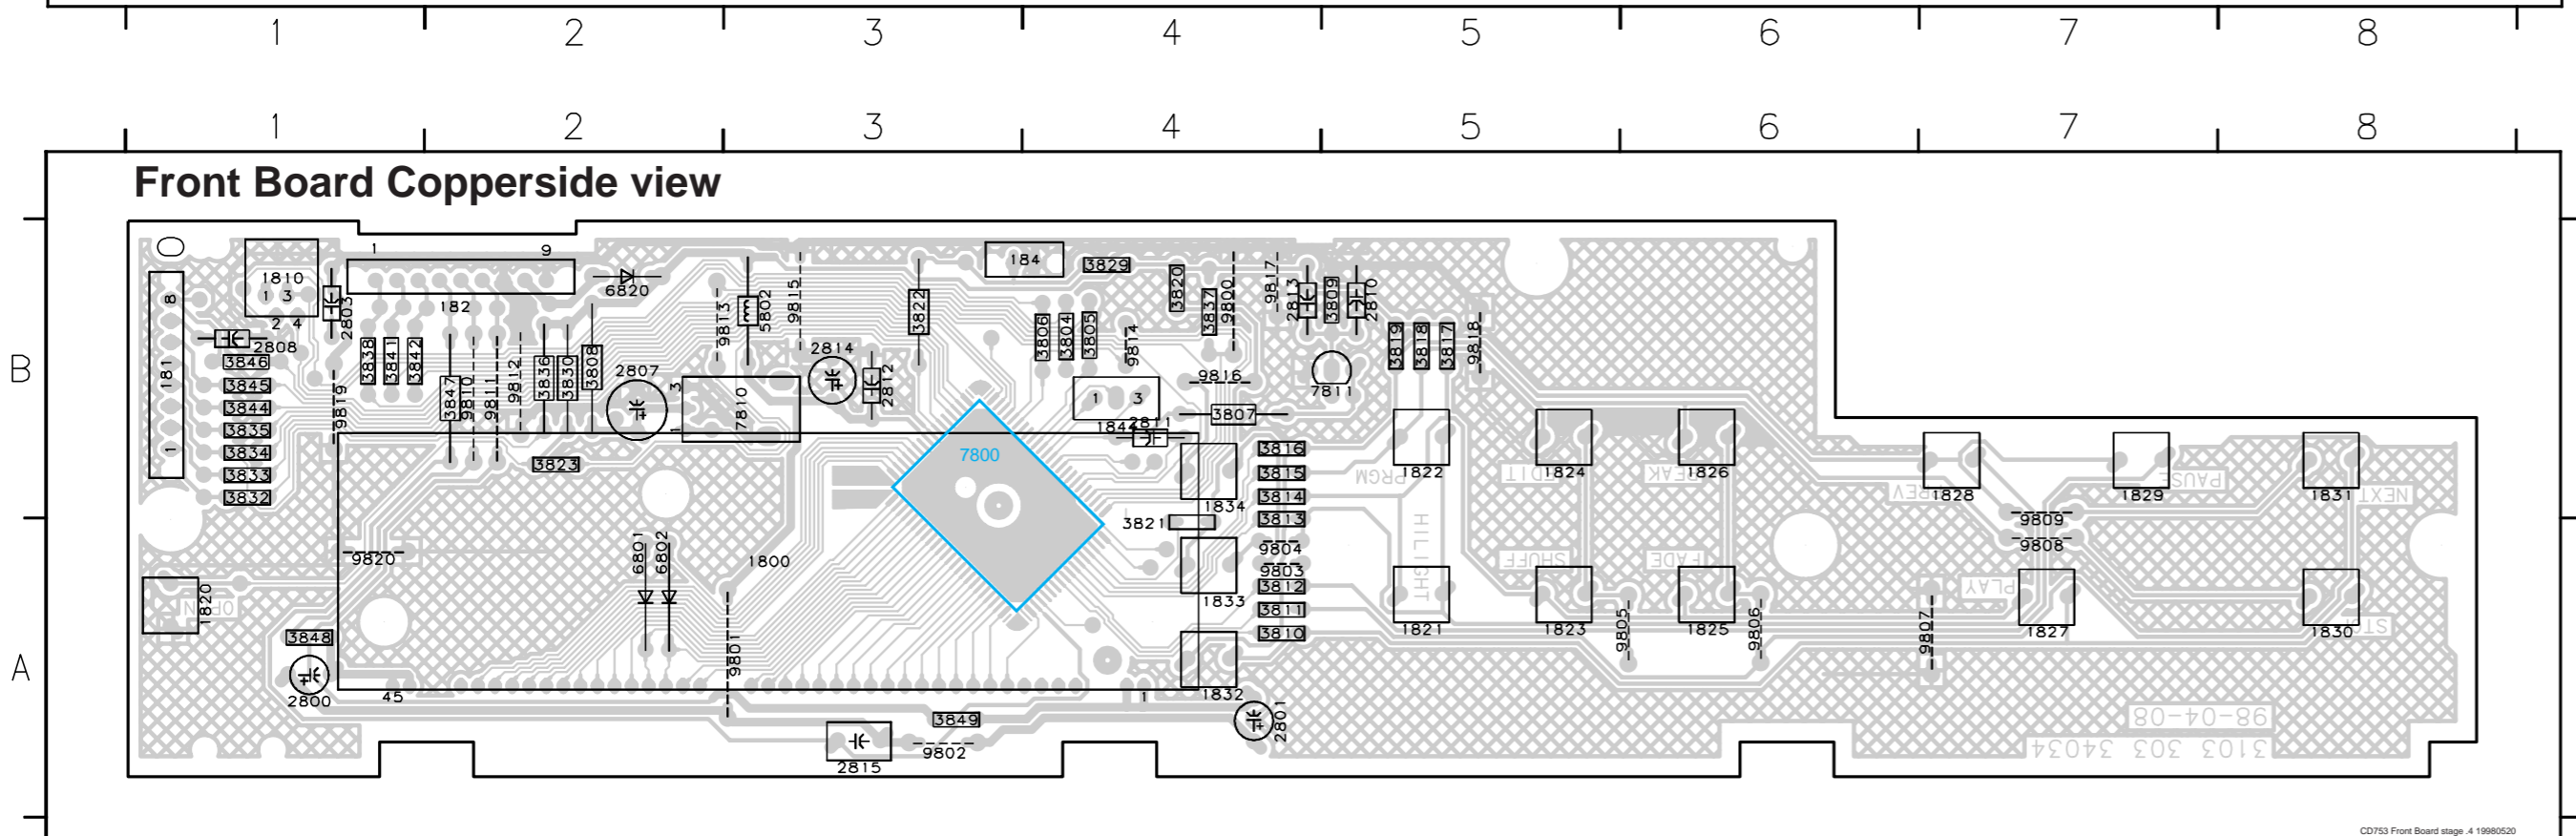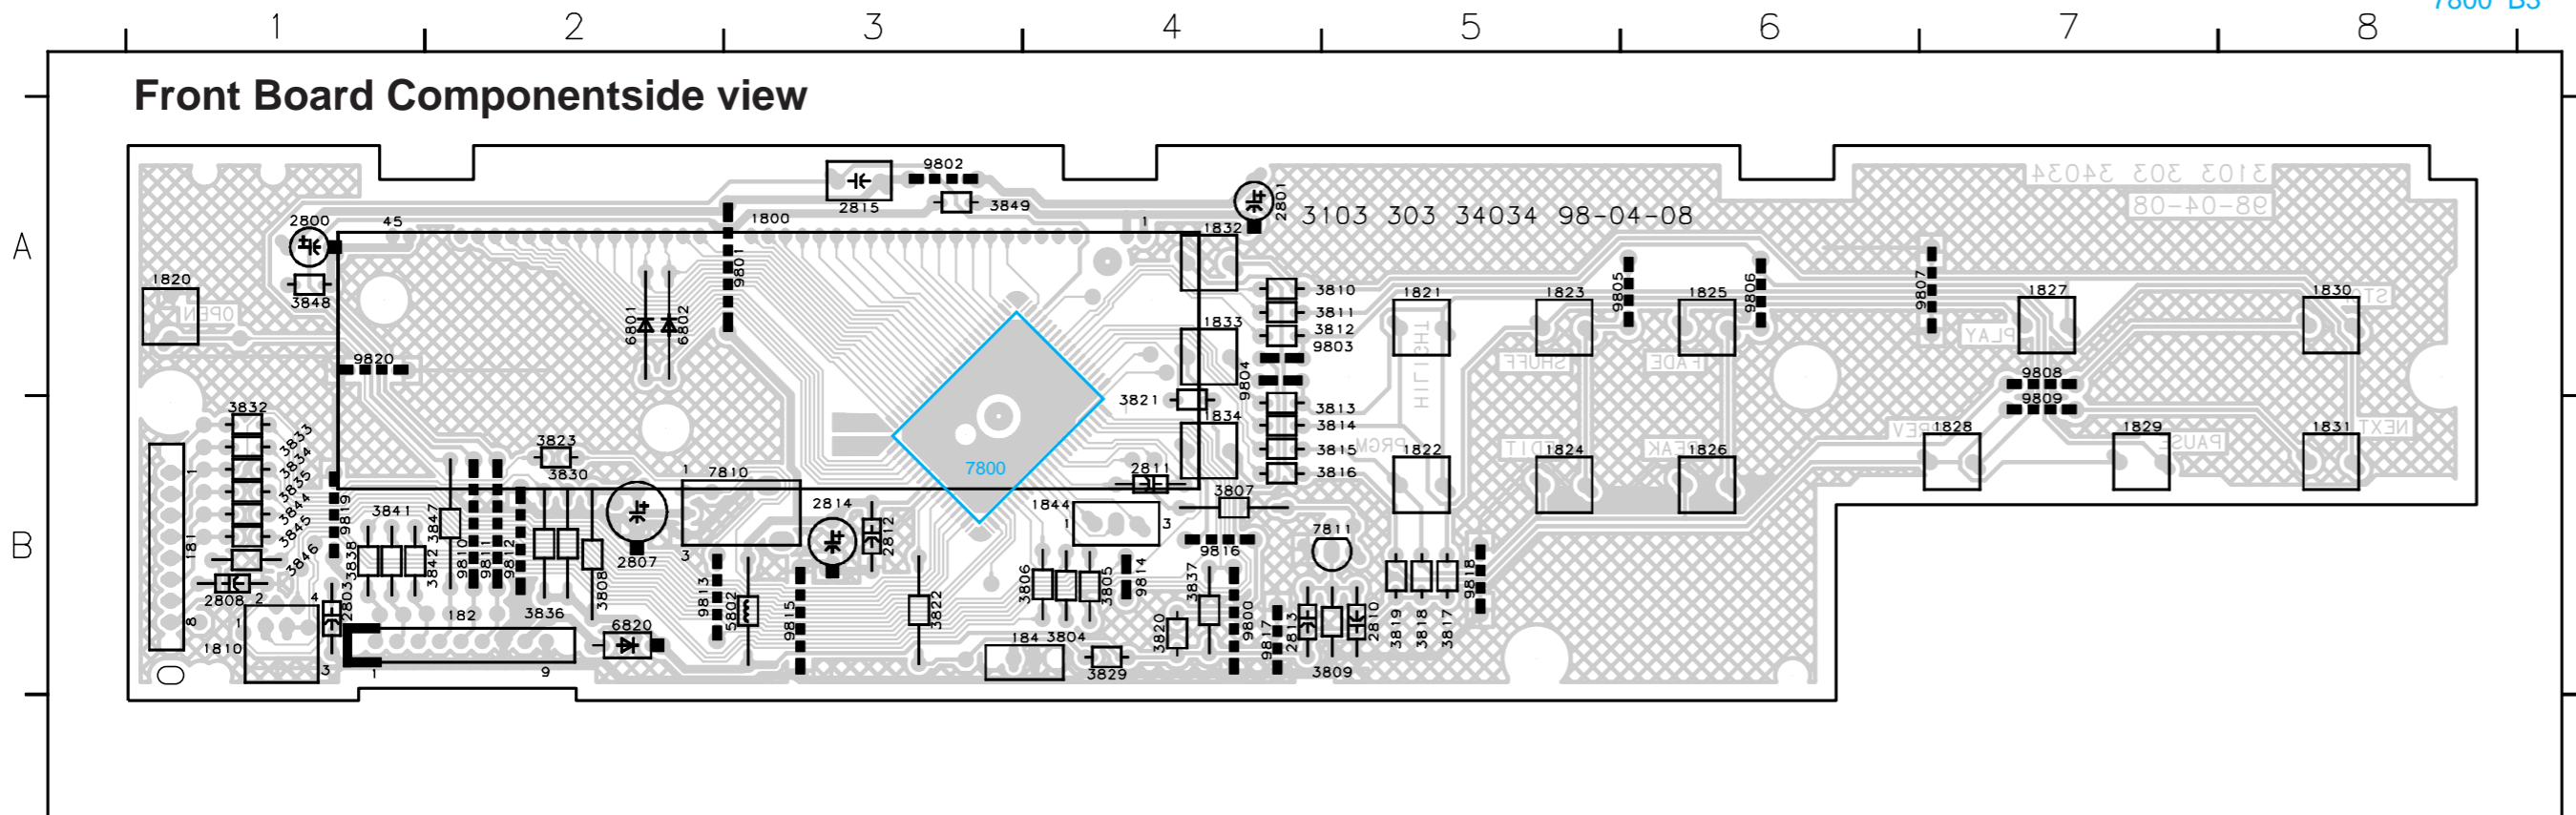


- 161 C4
- 162 B1
- 1600 B4
- 2601 A3
- 2602 C3
- 2603 A2
- 2604 B3
- 2605 B3
- 2610 C4
- 3600-B B1
- 3600-B B1
- 3601 C2
- 3602 B2
- 3603 B3
- 3604 B3
- 3605 B2
- 3606 B2
- 3607 B3
- 3611 A4
- 3608 B3
- 3609 C3
- 7670-A C3
- 7670-B A3

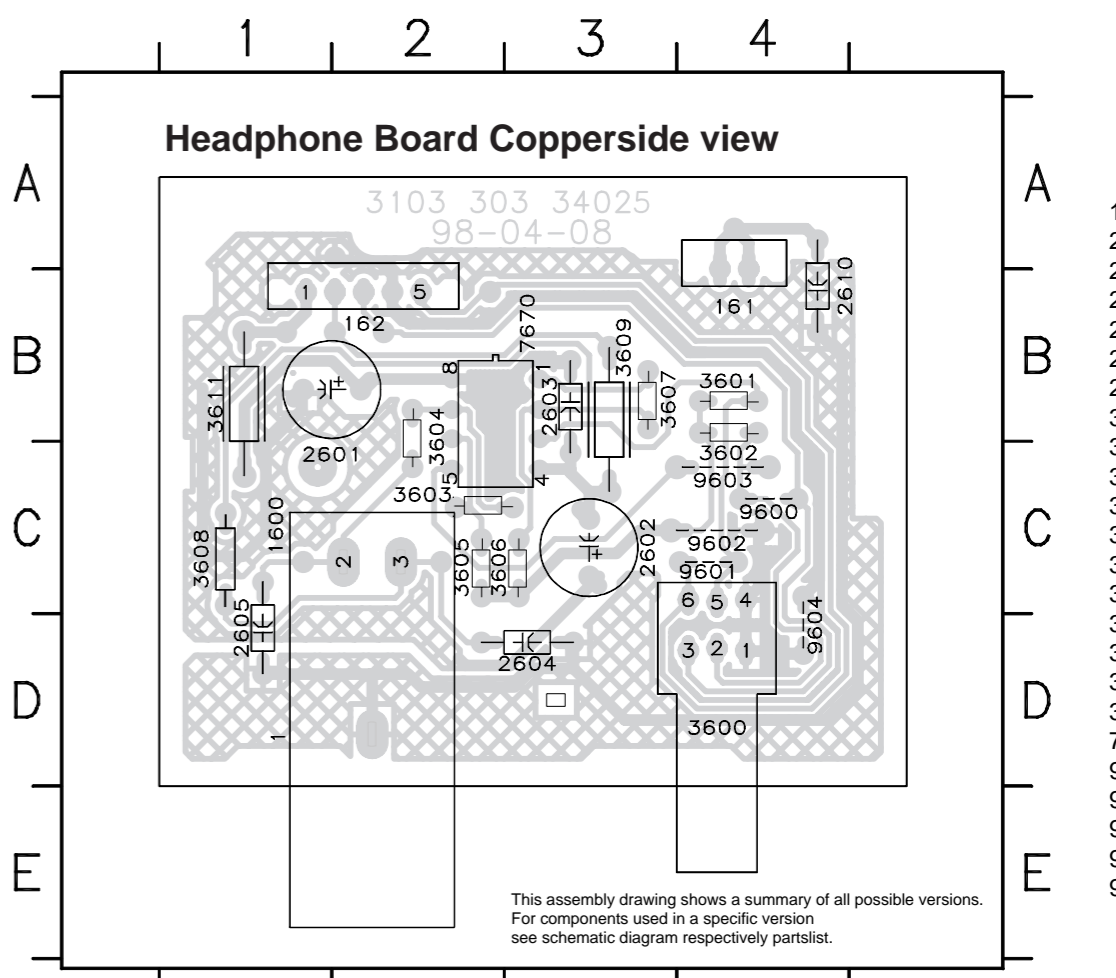

- 161 B4
- 162 B2
- 1600 D2
- 2601 B2
- 2602 C3
- 2603 B3
- 2604 D3
- 2605 D1
- 2610 B4
- 3600 D4
- 3601 B4
- 3602 B4
- 3603 C2
- 3604 B2
- 3605 D2
- 3606 D3
- 3607 B3
- 3608 C1
- 3609 B3
- 3611 B1
- 7670 B3
- 9600 C4
- 9601 C4
- 9602 C4
- 9603 C4
- 9604 D4

This assembly drawing shows a summary of all possible versions.
For components used in a specific version
see schematic diagram respectively partslist.

CD-BOARD (ECO-SL Mk3)

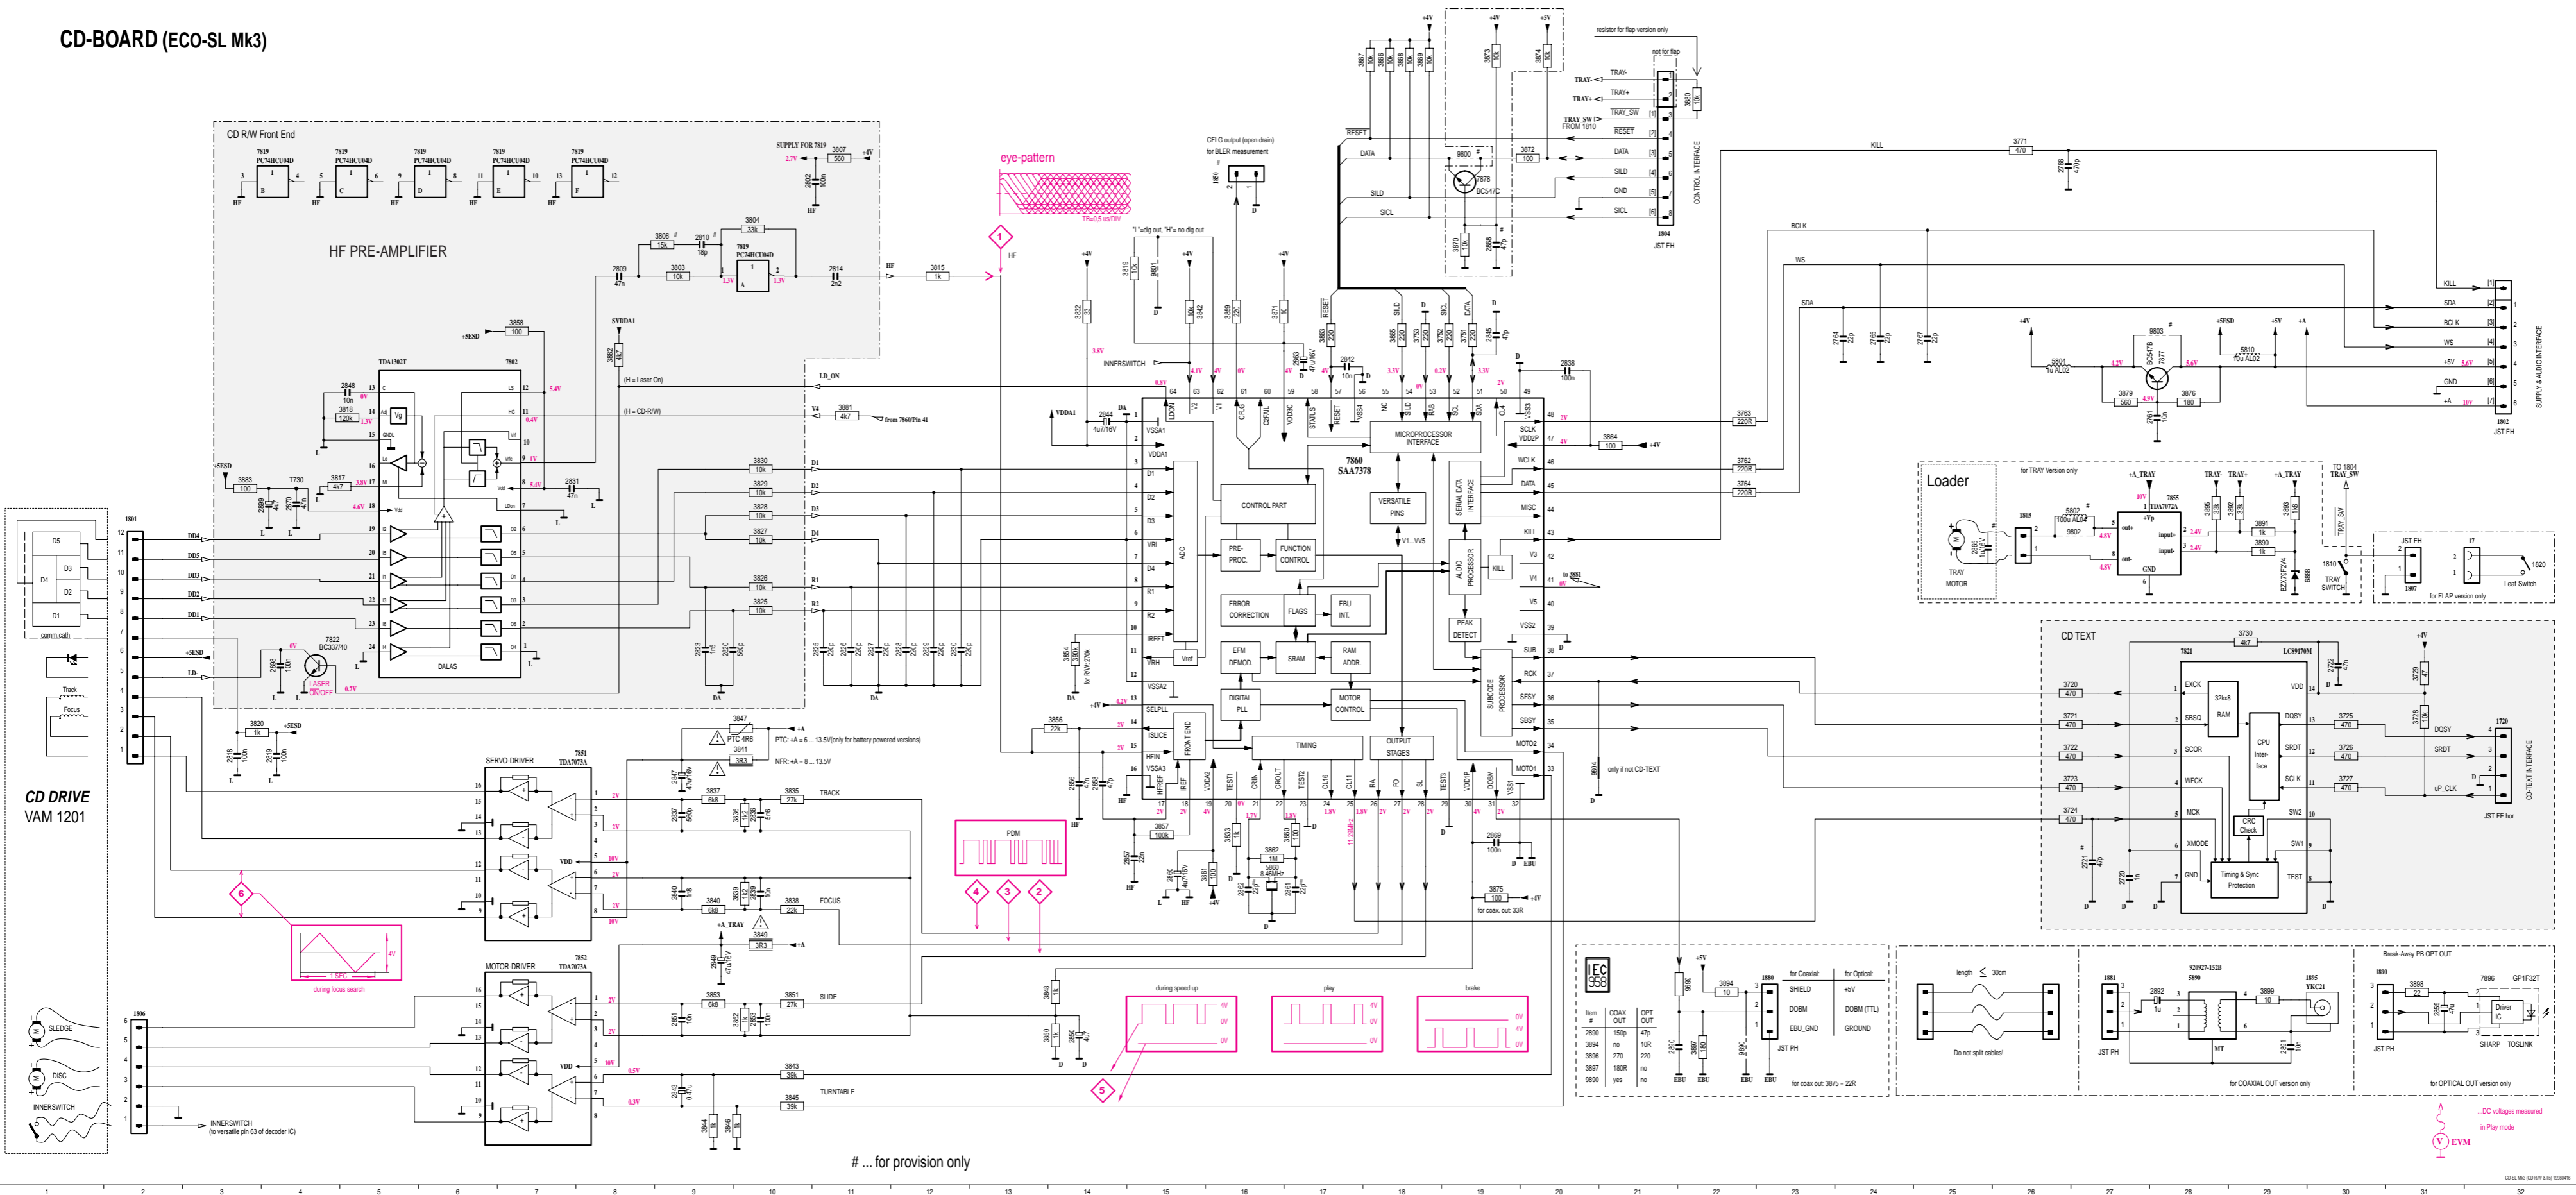


1720 J32	3836 K10
1801 G2	3837 K9
1802 F32	3838 L10
1803 G26	3839 L10
1804 D21	3840 L9
1806 M2	3841 J10
1807 H31	3842 E15
1810 H30	3843 N10
1820 H32	3844 O9
1850 C16	3845 O10
1880 M23	3846 O9
1881 M27	3847 J10
1890 M30	3848 M14
1895 M29	3849 M10
2720 L27	3850 N14
2721 L27	3851 M10
2722 I30	3852 N10
2761 F28	3853 M9
2764 E24	3854 I14
2765 E24	3856 J14
2766 C26	3857 K15
2767 E25	3858 E7
2802 C10	3859 E16
2809 D8	3860 K17
2810 D9	3861 L16
2814 D11	3862 K16
2818 J3	3863 E17
2819 J4	3864 F21
2820 I9	3865 E18
2823 I9	3866 A18
2825 I11	3867 A18
2826 I11	3868 A18
2827 I11	3869 A18
2828 I12	3870 D19
2829 I12	3871 E16
2830 I12	3872 C20
2831 G7	3873 A19
2836 K10	3874 A20
2837 K9	3875 L19
2838 E20	3876 F28
2839 L10	3879 F27
2840 L9	3880 B22
2842 E17	3881 F11
2843 N9	3882 E8
2844 F14	3883 C3
2845 E19	3890 H29
2847 J9	3891 G29
2848 F5	3892 G29
2849 M9	3893 G29
2850 N14	3894 M22
2851 N9	3895 G28
2853 N10	3896 M22
2856 K14	3897 N22
2857 L15	3898 M31
2858 K14	3899 M29
2859 M31	5902 G27
2860 L15	5904 E26
2861 L17	5810 E29
2862 L16	5860 L16
2863 E17	5890 M28
2865 H26	6888 H30
2868 D19	7802 E7
2869 K19	7819 C3
2870 G4	7819 C4
2890 N21	7819 C5
2891 N29	7819 C6
2892 M28	7819 C7
2898 I4	7819 D10
2899 G4	7821 I28
3720 I27	7822 I5
3721 I27	7851 J8
3722 I27	7852 M8
3723 K27	7855 G28
3724 K27	7860 F15
3725 J30	7877 E28
3726 J30	7878 C19
3727 K30	7896 M32
3728 J31	9800 C19
3729 J31	9801 D15
3730 I29	9802 G27
3751 E19	9803 E28
3752 I19	9804 J20
3753 E18	9890 N22
3762 F22	
3763 F22	
3764 G22	
3771 C26	
3803 D9	
3804 C10	
3806 D9	
3807 C11	
3815 D12	
3817 G4	
3818 F5	
3819 D15	
3820 J3	
3825 H10	
3826 H10	
3827 G10	
3828 G10	
3829 G10	
3830 G10	
3832 E14	
3833 K16	
3835 K10	


... for provision only

...DC voltages measured in Play mode


EVV

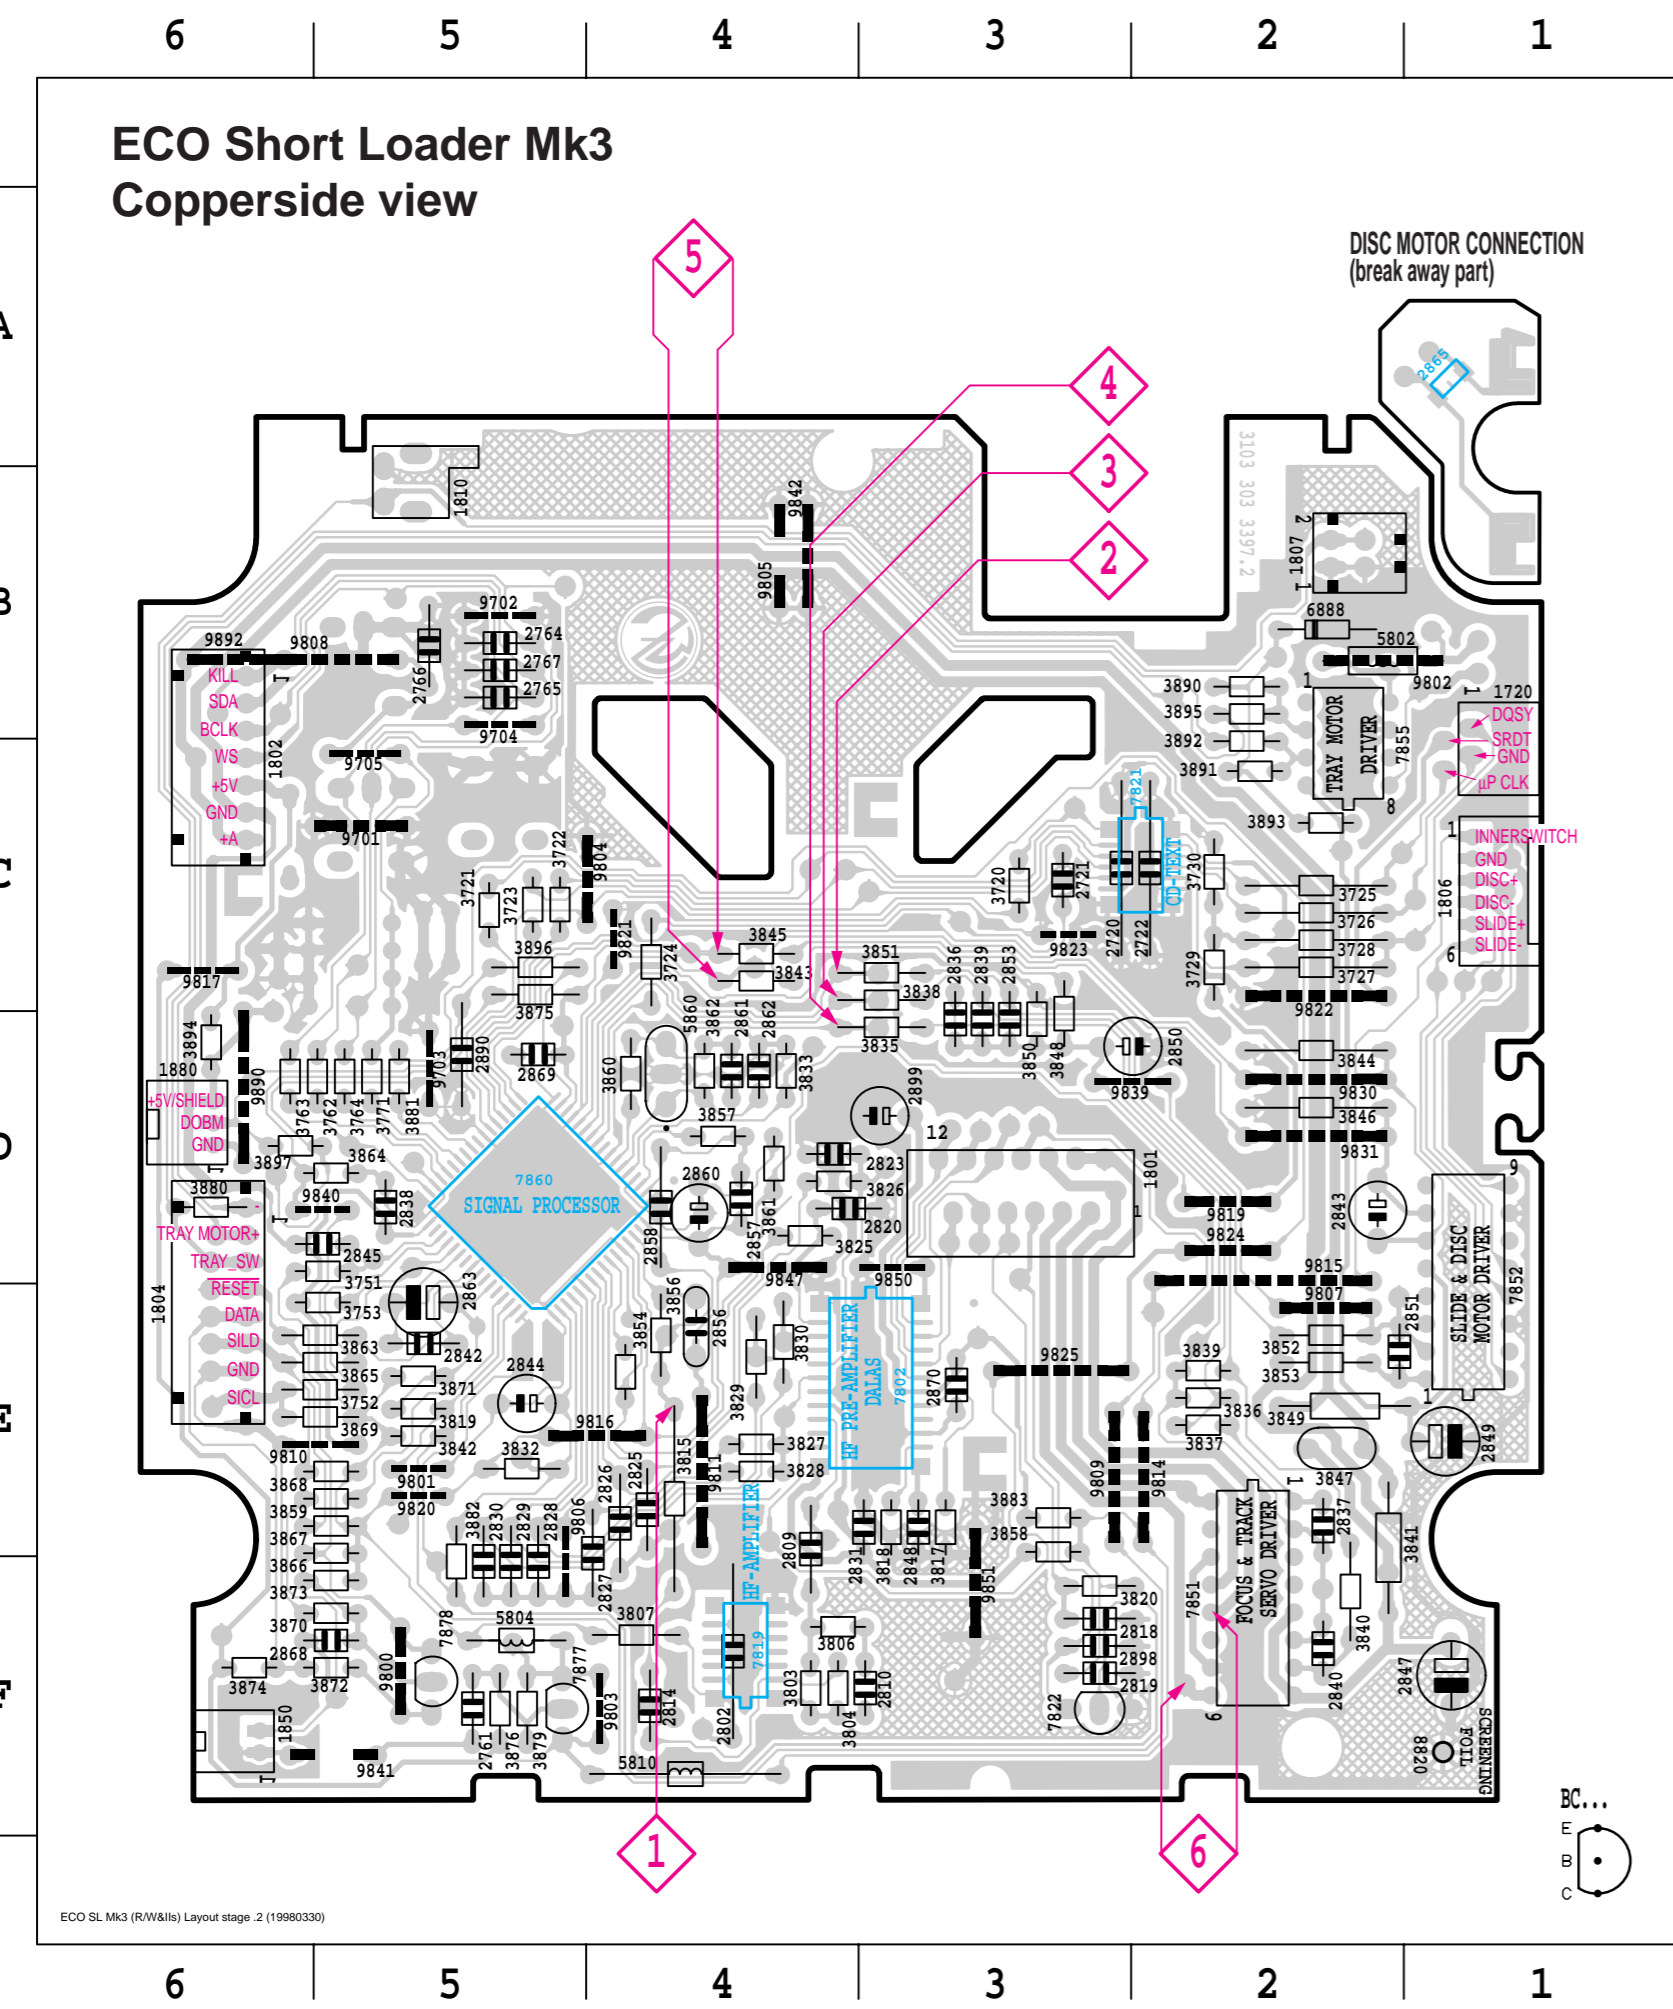

- 17 opt. 3844 D2
- 1720 C1 3845 C4
- 1801 D3 3846 D2
- 1802 C6 3847 E2
- 1804 E6 3848 D3
- 1808 C1 3849 E2
- 1807 B2 3850 D3
- 1810 B5 3851 C3
- 1820 B3 3852 E2
- 1850 F6 3853 E2
- 1880 D6 3854 E4
- 3856 E4
- 1881 opt. 3857 D4
- 1890 opt. 3858 E3
- 1895 opt. 3859 E5
- 2720 C3 3860 D4
- 2721 C3 3861 D4
- 2722 C2 3862 D4
- 2761 F5 3863 E5
- 2764 B5 3864 D5
- 2765 B5 3865 E5
- 2768 B5 3866 E5
- 2767 B5 3867 E5
- 2802 F4 3868 E5
- 2809 E4 3869 E5
- 2810 F3 3870 F5
- 2814 F4 3871 E5
- 2818 F3 3872 E5
- 2819 F2 3873 F5
- 2820 D4 3874 F6
- 2823 D4 3875 C5
- 2825 E4 3876 F5
- 2826 E4 3877 F5
- 2827 E4 3878 F5
- 2828 F5 3879 F5
- 2829 F5 3880 D6
- 2830 F5 3881 D6
- 2831 E3 3882 E3
- 2832 E3 3883 E3
- 2836 D3 3884 E2
- 2837 E2 3885 C2
- 2838 D5 3886 C2
- 2839 D3 3887 C2
- 2840 F2 3888 D6
- 2842 B2 3889 B5
- 2843 D2 3890 C5
- 2844 E5 3891 D6
- 2845 D5 3892 D6
- 2847 F1 3893 opt.
- 2848 E3 3894 opt.
- 2849 E1 3895 opt.
- 2850 D2 3896 opt.
- 2851 E2 3897 opt.
- 2853 D3 3898 opt.
- 2856 E4 3899 opt.
- 2857 D4 3900 opt.
- 2858 D4 3901 opt.
- 2859 opt. 3902 opt.
- 2860 D4 3903 opt.
- 2861 D4 3904 opt.
- 2862 D4 3905 opt.
- 2863 E5 3906 opt.
- 2865 A1 3907 opt.
- 2868 F5 3908 opt.
- 2869 D5 3909 opt.
- 2870 E3 3910 opt.
- 2872 B5 3911 opt.
- 2891 opt. 3912 opt.
- 2892 opt. 3913 opt.
- 2898 F3 3914 opt.
- 2899 D3 3915 opt.
- 3720 C3 3916 opt.
- 3721 C5 3917 opt.
- 3722 C2 3918 opt.
- 3723 C5 3919 opt.
- 3724 C4 3920 opt.
- 3725 C2 3921 opt.
- 3726 C2 3922 opt.
- 3727 C2 3923 opt.
- 3728 C2 3924 opt.
- 3729 C2 3925 opt.
- 3730 C3 3926 opt.
- 3751 D5 3927 opt.
- 3752 E5 3928 opt.
- 3753 E5 3929 opt.
- 3762 D5 3930 opt.
- 3763 D6 3931 opt.
- 3764 D5 3932 opt.
- 3771 D5 3933 opt.
- 3803 F4 3934 opt.
- 3804 F4 3935 opt.
- 3806 F4 3936 opt.
- 3807 F4 3937 opt.
- 3815 E4 3938 opt.
- 3817 D3 3939 opt.
- 3818 D3 3940 opt.
- 3819 E3 3941 opt.
- 3820 F3 3942 opt.
- 3825 D4 3943 opt.
- 3826 D4 3944 opt.
- 3827 E4 3945 opt.
- 3828 E4 3946 opt.
- 3829 E4 3947 opt.
- 3830 E4 3948 opt.
- 3832 E5 3949 opt.
- 3833 D4 3950 opt.
- 3835 D3 3951 opt.
- 3836 E2 3952 opt.
- 3837 E2 3953 opt.
- 3838 E2 3954 opt.
- 3839 E2 3955 opt.
- 3840 F2 3956 opt.
- 3841 E2 3957 opt.
- 3842 E5 3958 opt.
- 3843 C4 3959 opt.

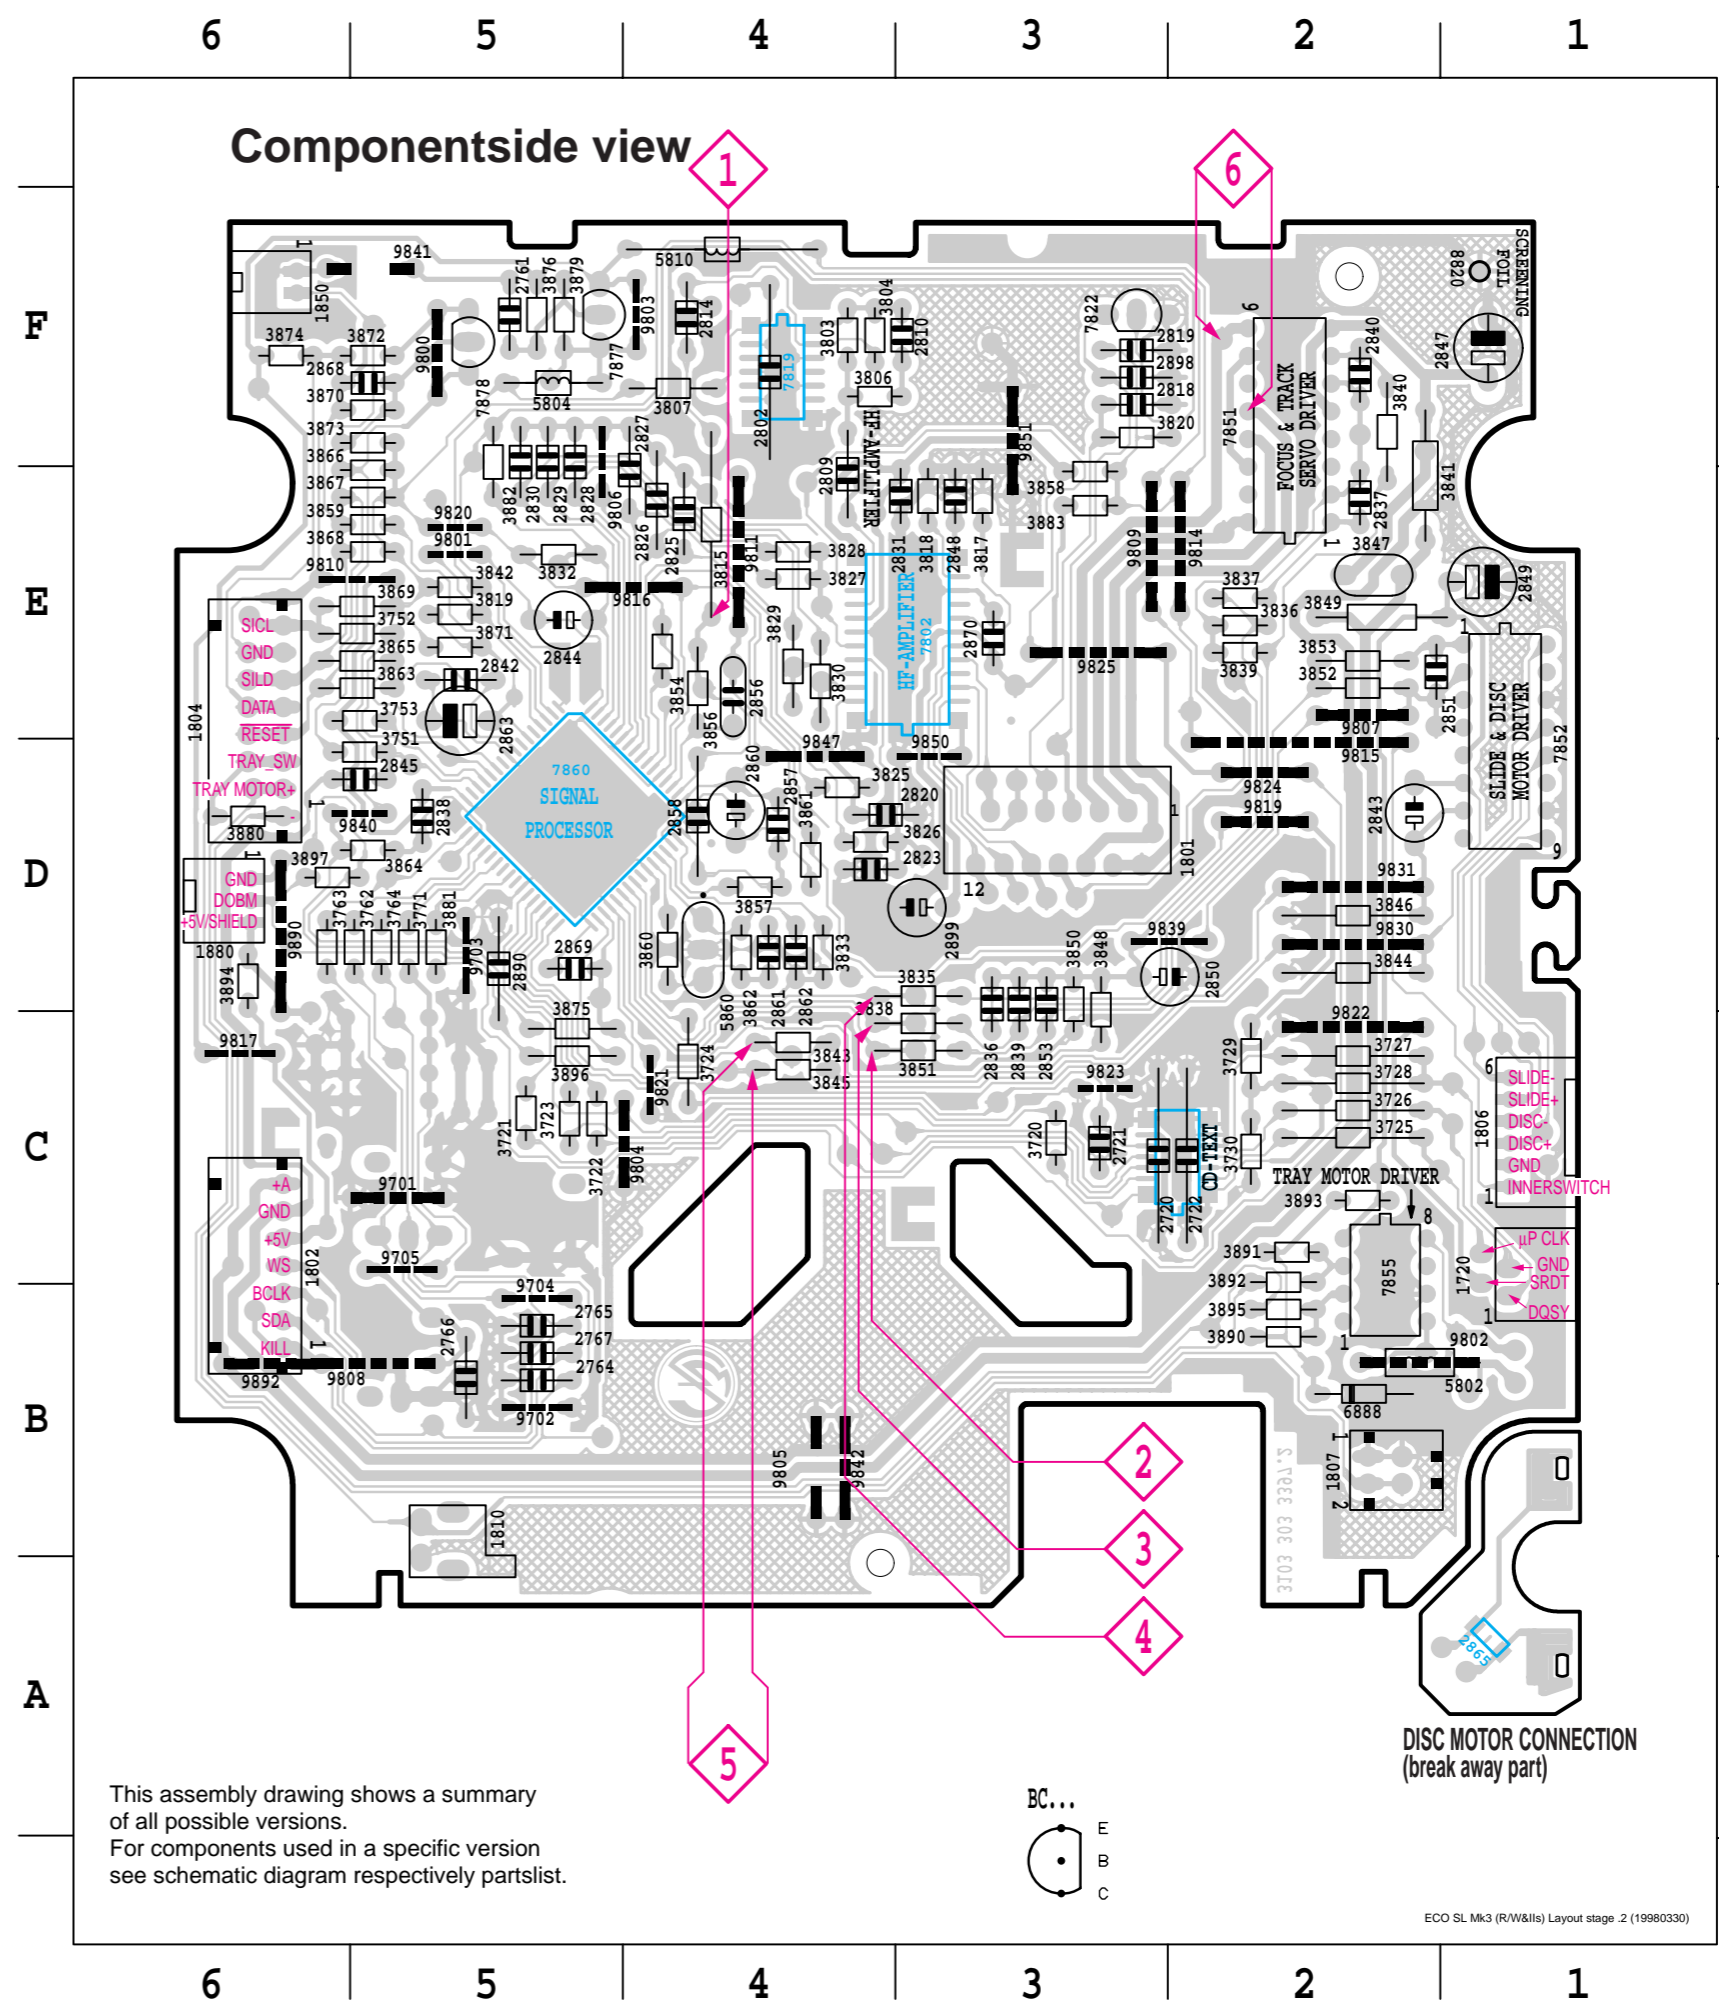

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.

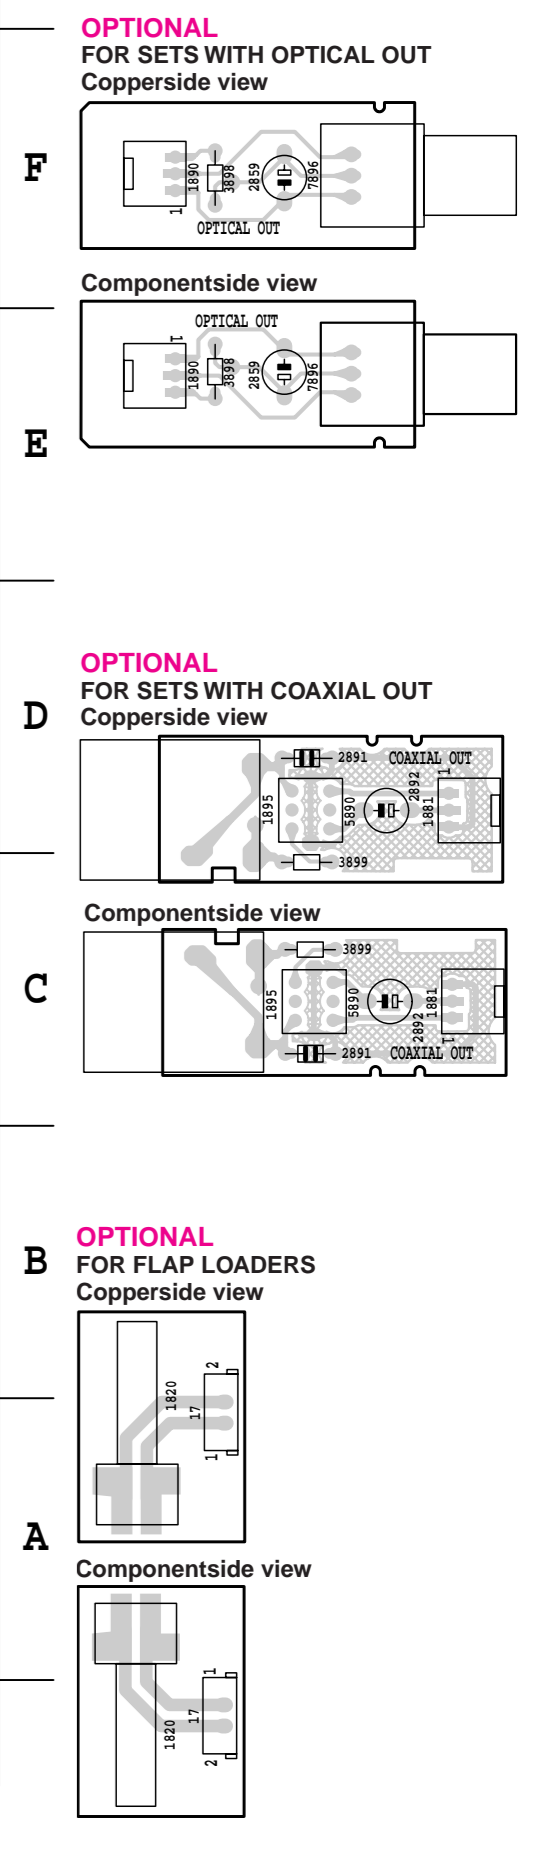

WARNING

CHARGED CAPACITORS ON THE CD BOARD MAY DAMAGE THE CD-ELECTRONICS WHEN CONNECTING A NEW CD DRIVE. THAT'S WHY, BESIDES THE SAFETY MEASURES LIKE

- SWITCH OFF POWER SUPPLY
- ESD PROTECTION

ADDITIONAL ACTIONS MUST BE TAKEN BY THE REPAIR TECHNICIAN.

The following steps have to be done when replacing the CDM mechanism:

1. Disconnect old CD drive flexfoil from printed board
2. Connect paperclip to CD drive flexfoil to short-circuit flexfoil (fig.1)
3. Short-circuit printed board with **brass-sheet (4822 321 11197)** plugged into the flexfoil connector (fig.2)
4. Remove old CD drive
5. Position new CD drive in its studs
6. Remove short-circuit from printed board connector
7. Remove short-circuit from flexfoil of new CD drive
8. Connect new flexfoil to print connector (fig.3)

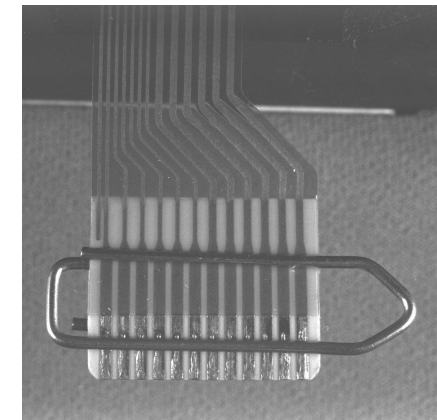


fig.1

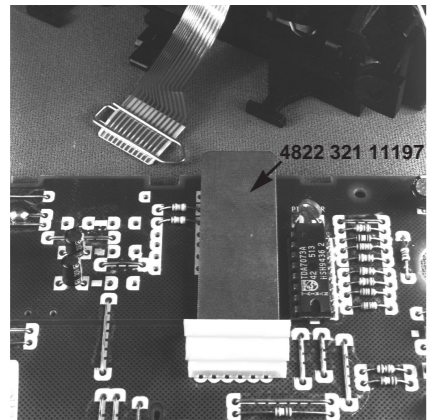


fig.2




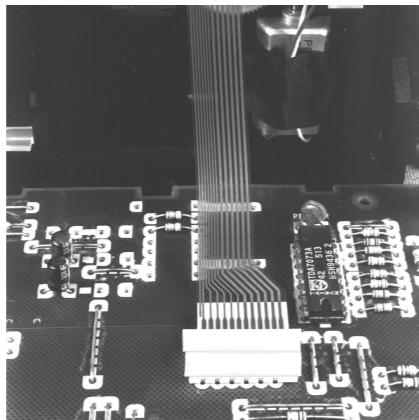


fig.3

Remarks

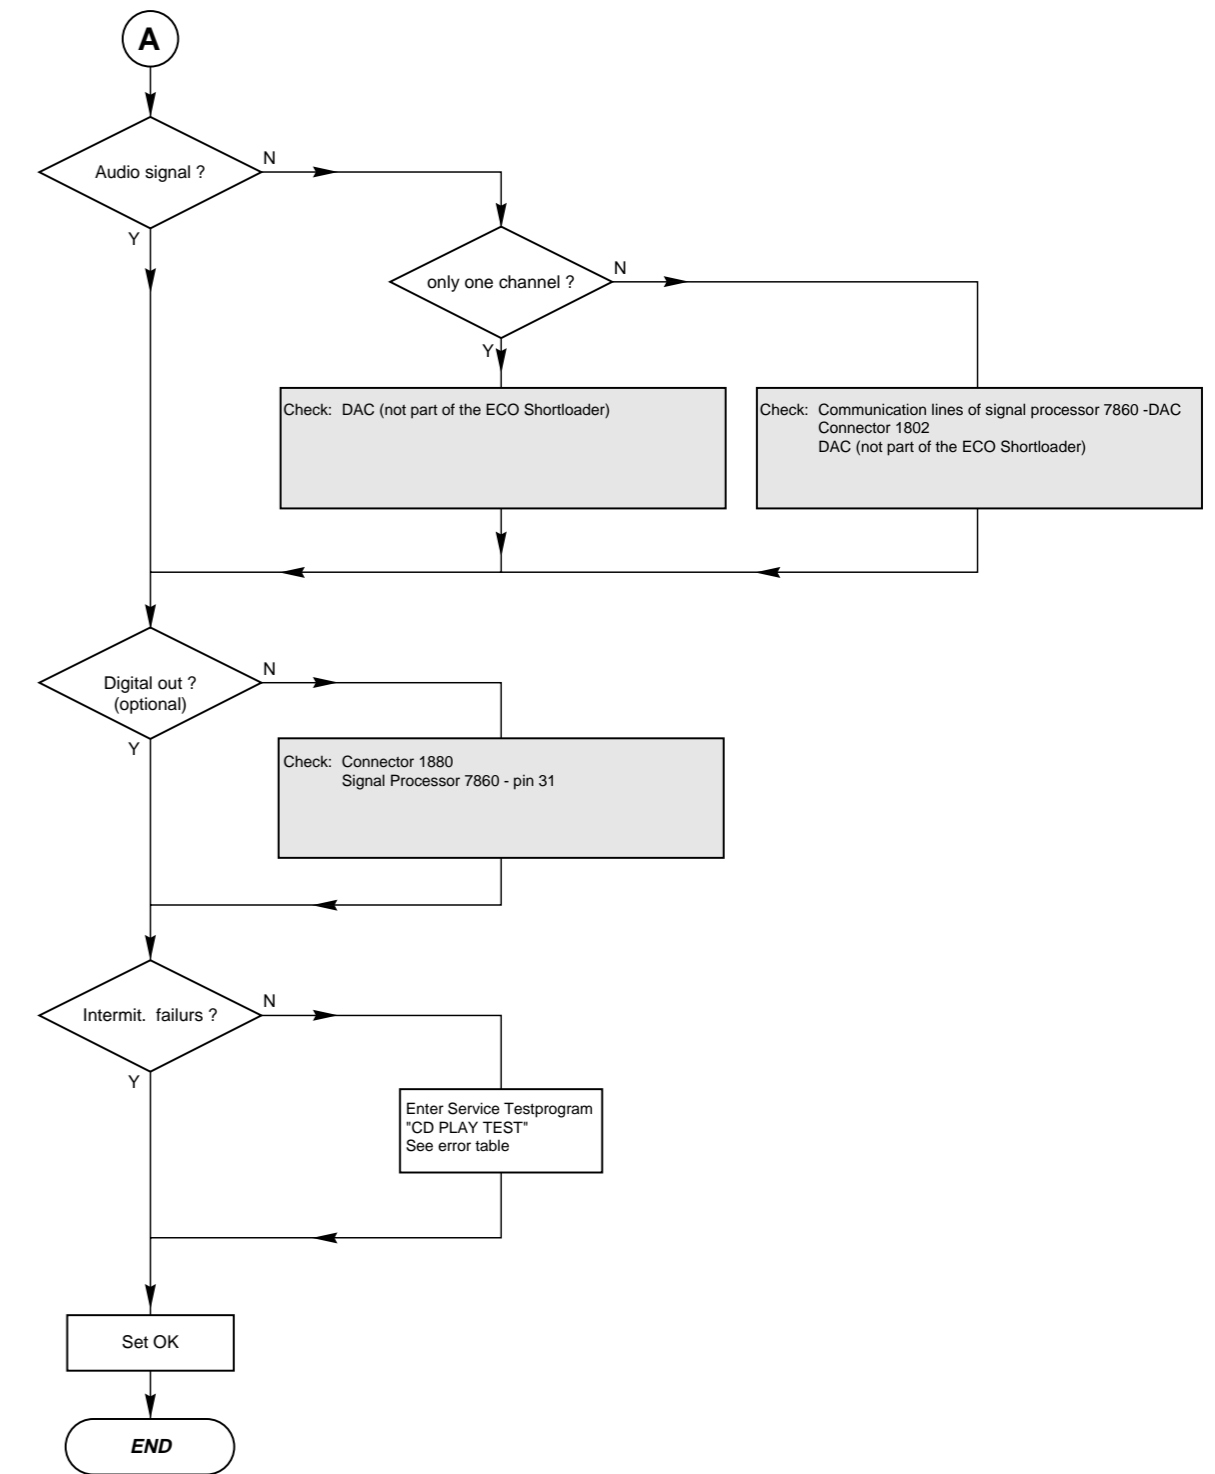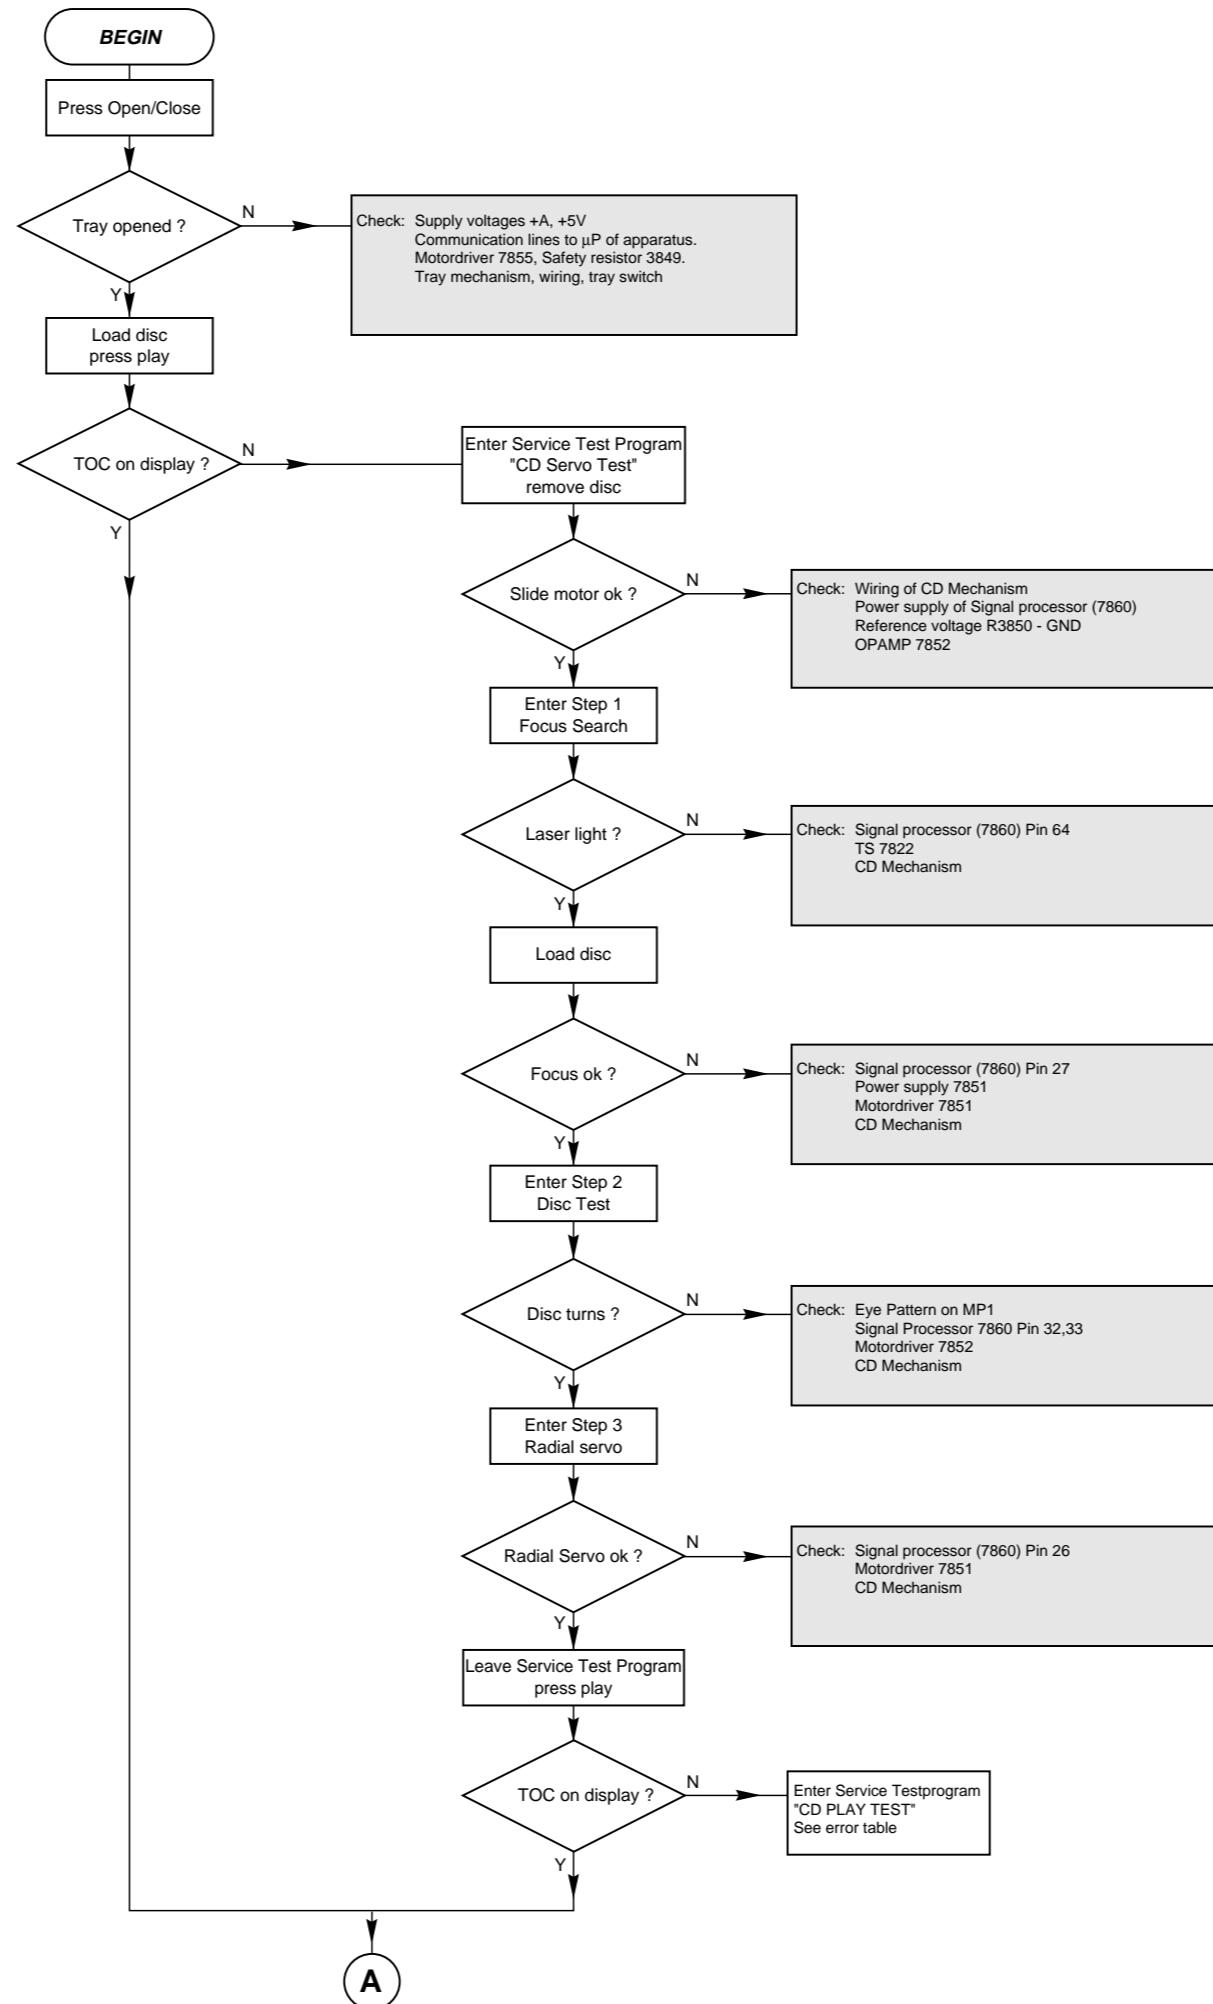


EXPLODED VIEW of SET

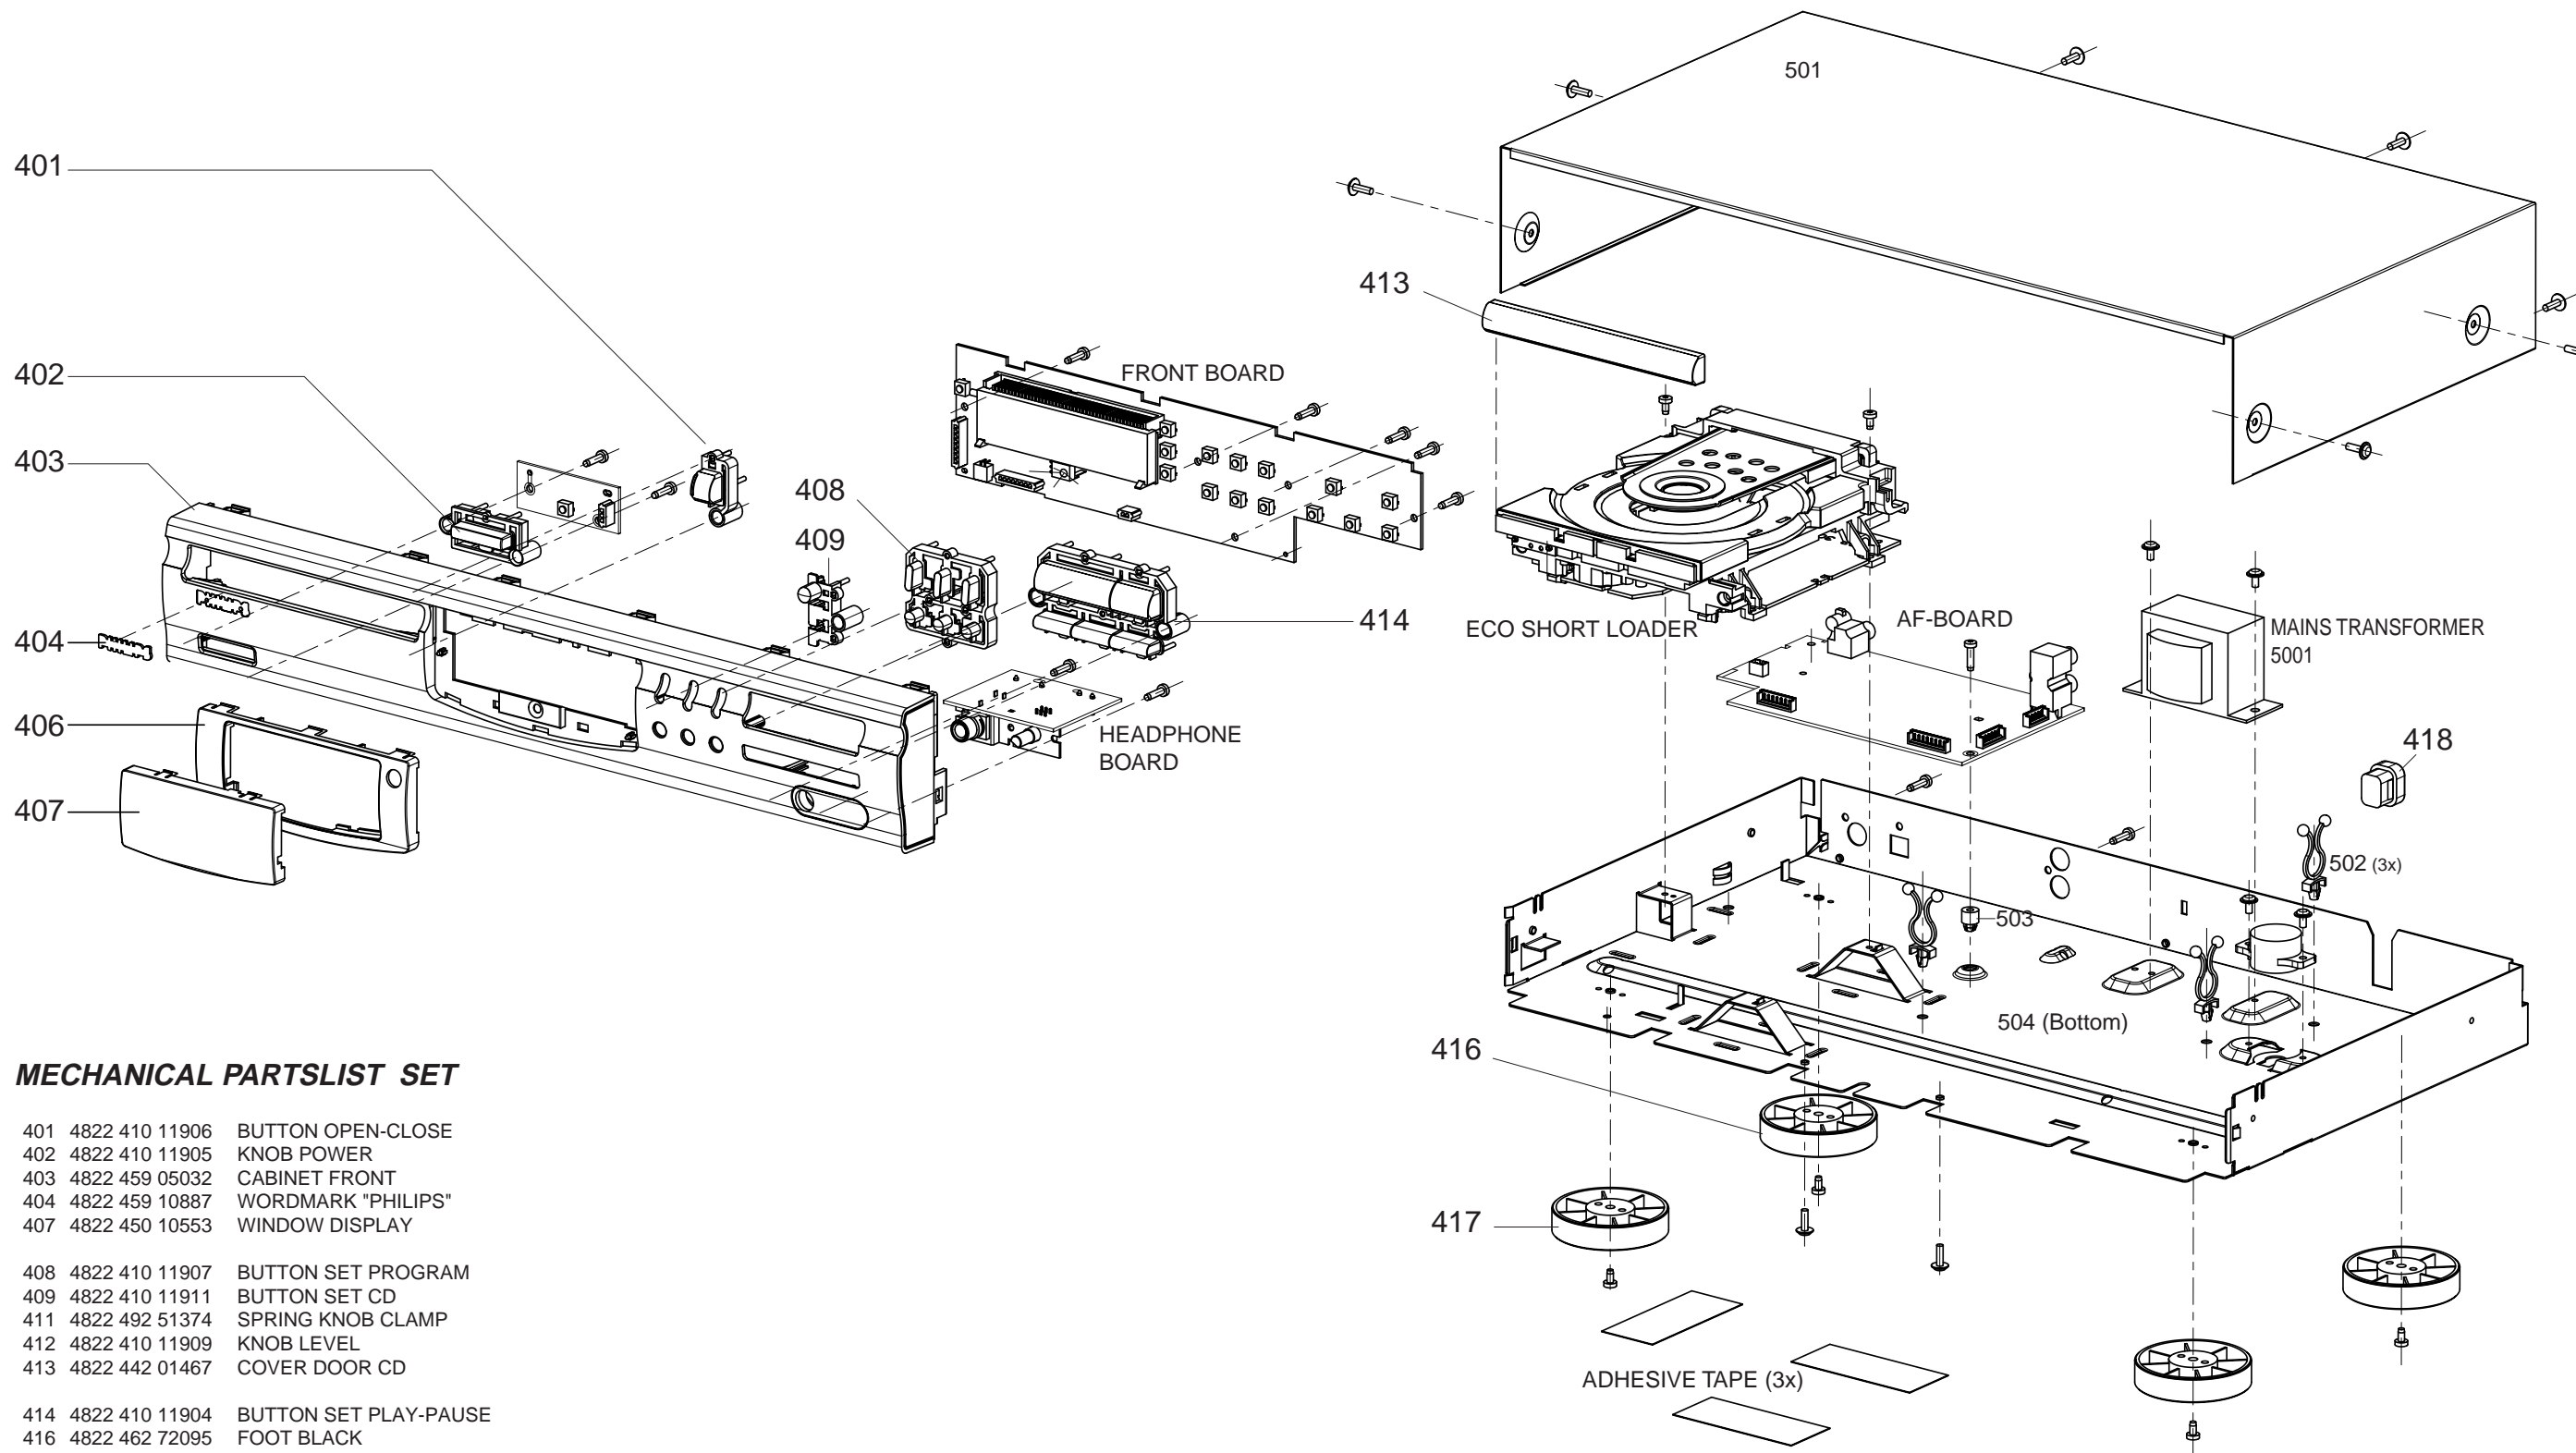

MECHANICAL PARTSLIST SET

401	4822 410 11906	BUTTON OPEN-CLOSE
402	4822 410 11905	KNOB POWER
403	4822 459 05032	CABINET FRONT
404	4822 459 10887	WORDMARK "PHILIPS"
407	4822 450 10553	WINDOW DISPLAY
408	4822 410 11907	BUTTON SET PROGRAM
409	4822 410 11911	BUTTON SET CD
411	4822 492 51374	SPRING KNOB CLAMP
412	4822 410 11909	KNOB LEVEL
413	4822 442 01467	COVER DOOR CD
414	4822 410 11904	BUTTON SET PLAY-PAUSE
416	4822 462 72095	FOOT BLACK
417	4822 462 42159	FOOT SILVER
418	4822 532 60948	CABLE BUSH
5001	4822 146 11031	TRANSFORMER MAINS not for /01
5001	4822 146 11032	TRANSFORMER MAINS for /01 only
	4822 219 10538	RC07105/01 (Remote Control)
	4822 321 22832	CINCH-CABLE

Exploded view CD Short Loader

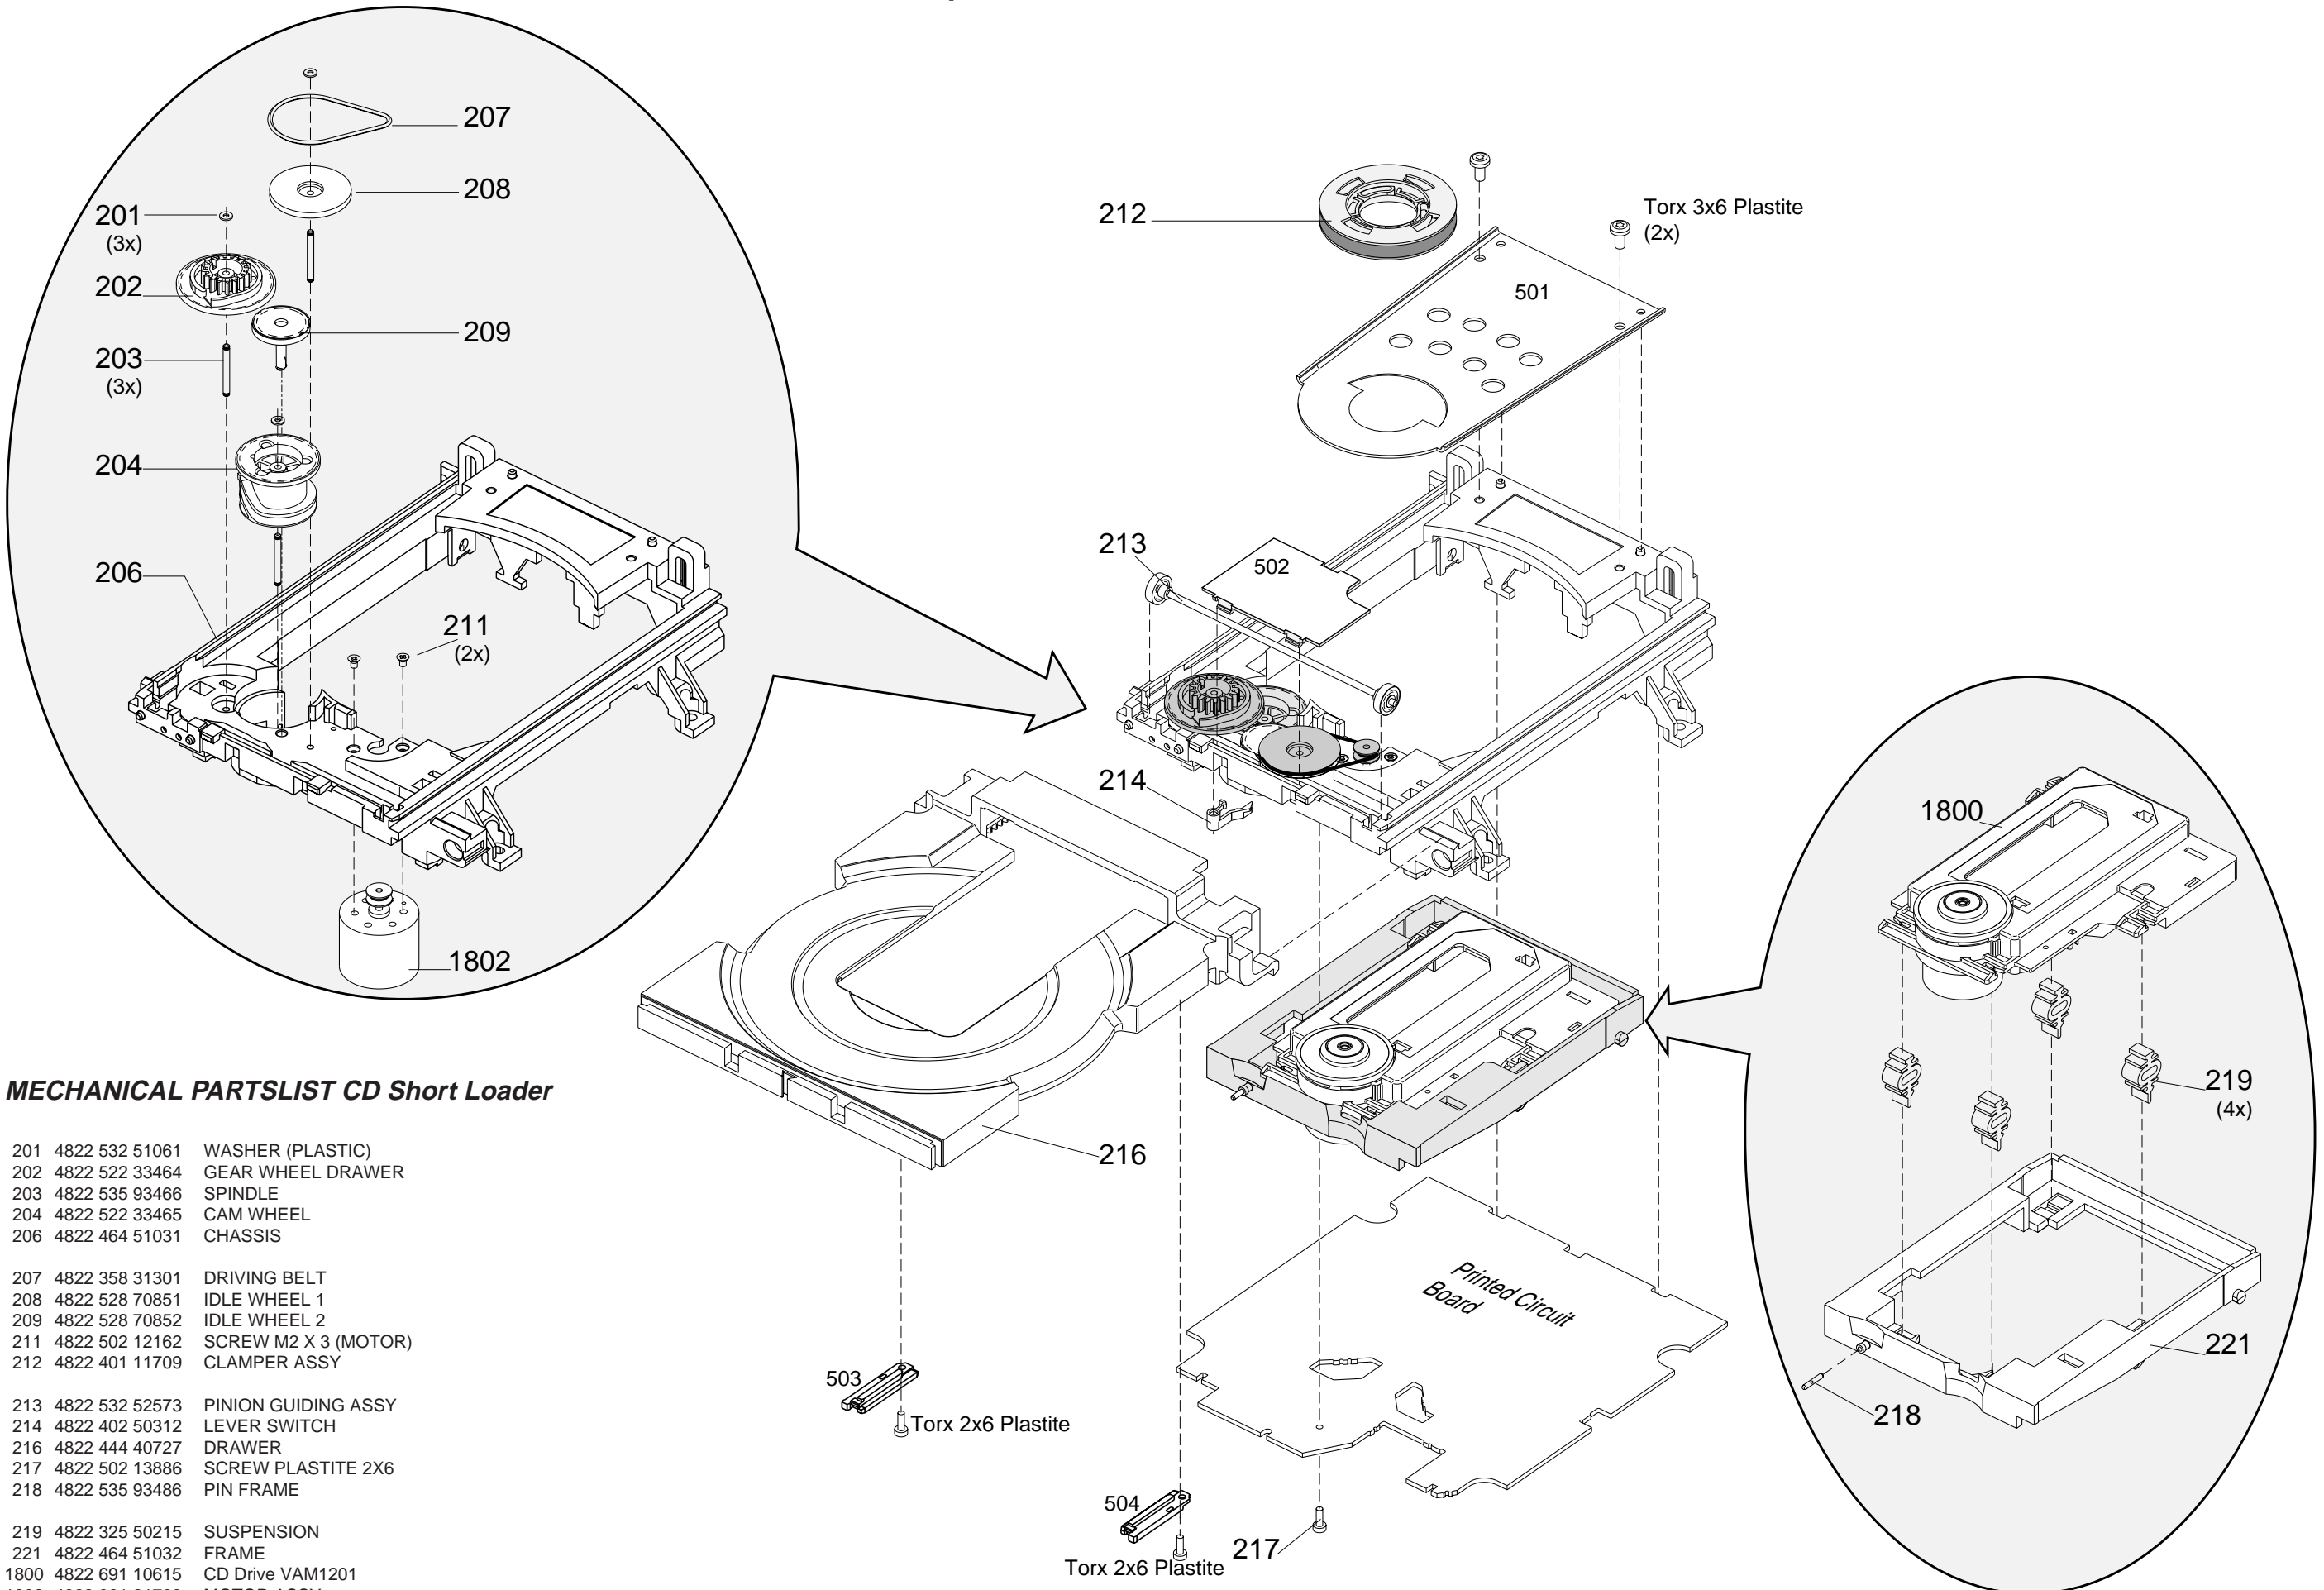

MECHANICAL PARTSLIST CD Short Loader

201	4822 532 51061	WASHER (PLASTIC)
202	4822 522 33464	GEAR WHEEL DRAWER
203	4822 535 93466	SPINDLE
204	4822 522 33465	CAM WHEEL
206	4822 464 51031	CHASSIS
207	4822 358 31301	DRIVING BELT
208	4822 528 70851	IDLE WHEEL 1
209	4822 528 70852	IDLE WHEEL 2
211	4822 502 12162	SCREW M2 X 3 (MOTOR)
212	4822 401 11709	CLAMPER ASSY
213	4822 532 52573	PINION GUIDING ASSY
214	4822 402 50312	LEVER SWITCH
216	4822 444 40727	DRAWER
217	4822 502 13886	SCREW PLASTITE 2X6
218	4822 535 93486	PIN FRAME
219	4822 325 50215	SUSPENSION
221	4822 464 51032	FRAME
1800	4822 691 10615	CD Drive VAM1201
1802	4822 361 21708	MOTOR ASSY
	4822 502 30735	SCREW 3 X 6 PLASTITE

ELECTRICAL PARTSLIST CD BOARD

MISCELLANEOUS

1720	4822 265 11183	CON. FLEX FOIL 4 PIN SIDE ENTRY
1800	4822 691 10645	CD DRIVE VAM1201
1801	4822 267 51453	CON. FLEX FOIL 12 PIN SIDE ENTRY
1810	4822 276 13503	TRAY SWITCH
8002	4822 320 12385	FLEX FOIL 4P 100mm (CD Text)

CAPACITORS

2720	4822 122 33197	1nF	10%	50V
2722	4822 126 12785	47nF	10%	50V
2761	4822 121 51387	10nF	20%	16V
2764	4822 122 33191	22pF	5%	50V
2765	4822 122 33191	22pF	5%	50V
2766	4822 126 12878	1,5nF	10%	16V
2767	4822 122 33191	22pF	5%	50V
2802	4822 126 12882	100nF	20%	50V
2809	4822 126 12785	47nF	10%	50V
2814	4822 126 12339	2,2nF	10%	16V
2818	4822 126 12882	100nF	20%	50V
2819	4822 126 12882	100nF	20%	50V
2820	4822 122 10459	560pF	10%	50V
2823	4822 126 12878	1,5nF	10%	16V
2825	4822 122 10466	220pF	10%	50V
2826	4822 122 10466	220pF	10%	50V
2827	4822 122 10466	220pF	10%	50V
2828	4822 122 10466	220pF	10%	50V
2829	4822 122 10466	220pF	10%	50V
2830	4822 122 10466	220pF	10%	50V
2831	4822 126 12785	47nF	10%	50V
2836	4822 126 13098	5,6nF	20%	16V
2837	4822 122 10459	560pF	10%	50V
2838	4822 126 12882	100nF	20%	50V
2839	4822 121 51387	10nF	20%	16V
2840	4822 122 10576	1,8nF	10%	16V
2842	4822 121 51387	10nF	20%	16V
2843	5322 124 41948	0,47μF	20%	50V
2844	4822 124 22726	4,7μF	20%	35V
2845	4822 122 33848	47pF	5%	50V
2847	4822 124 40433	47μF	20%	25V
2848	4822 121 51387	10nF	20%	16V
2849	4822 124 40433	47μF	20%	25V
2850	4822 124 22726	4,7μF	20%	35V
2851	4822 121 51387	10nF	20%	16V
2853	4822 126 12882	100nF	20%	50V
2856	4822 121 70619	22nF	10%	50V
2857	4822 126 11585	22nF	20%	50V
2858	4822 122 33848	47pF	5%	50V
2860	4822 124 22726	4,7μF	20%	35V
2861	4822 122 33191	22pF	5%	50V
2862	4822 122 33191	22pF	5%	50V
2863	4822 124 81286	47μF	20%	16V
2869	4822 126 12882	100nF	20%	50V
2870	4822 126 12785	47nF	10%	50V
2890	4822 122 33849	150pF	10%	50V
2898	4822 126 12882	100nF	20%	50V
2899	4822 124 22726	4,7μF	20%	35V

RESISTORS

3720	4822 116 83883	470Ω	5%	0,16W
3721	4822 116 83883	470Ω	5%	0,16W
3722	4822 116 83883	470Ω	5%	0,16W
3723	4822 116 83883	470Ω	5%	0,16W
3724	4822 116 83883	470Ω	5%	0,16W
3725	4822 116 83883	470Ω	5%	0,16W
3726	4822 116 83883	470Ω	5%	0,16W
3727	4822 116 83883	470Ω	5%	0,16W
3728	4822 116 83864	10kΩ	5%	0,5W
3729	4822 116 52195	47Ω	5%	0,5W
3730	4822 116 52283	4,7kΩ	5%	0,5W
3751	4822 116 83872	220Ω	5%	0,5W
3752	4822 116 83872	220Ω	5%	0,5W
3753	4822 116 83872	220Ω	5%	0,5W
3762	4822 116 83872	220Ω	5%	0,5W
3763	4822 116 83872	220Ω	5%	0,5W
3764	4822 116 83872	220Ω	5%	0,5W
3771	4822 116 83883	470Ω	5%	0,16W
3803	4822 116 83864	10kΩ	5%	0,5W
3804	4822 116 52257	22kΩ	5%	0,5W
3807	4822 116 52226	560Ω	5%	0,5W
3815	4822 050 11002	1kΩ	5%	0,2W
3817	4822 116 52283	4,7kΩ	5%	0,5W
3818	4822 116 52239	120kΩ	5%	0,5W
3820	4822 050 11002	1kΩ	5%	0,2W
3825	4822 116 83864	10kΩ	5%	0,5W
3826	4822 116 83864	10kΩ	5%	0,5W
3827	4822 116 83864	10kΩ	5%	0,5W
3828	4822 116 83864	10kΩ	5%	0,5W
3829	4822 116 83864	10kΩ	5%	0,5W
3830	4822 116 83864	10kΩ	5%	0,5W
3832	4822 116 52191	33Ω	5%	0,5W
3833	4822 050 11002	1kΩ	5%	0,2W
3835	4822 116 52264	27kΩ	5%	0,5W
3836	4822 116 52207	1,2kΩ	5%	0,5W
3837	4822 116 83961	6,8kΩ	5%	0,16W
3838	4822 116 52257	22kΩ	5%	0,5W
3839	4822 116 52207	1,2kΩ	5%	0,5W
3840	4822 116 83961	6,8kΩ	5%	0,16W
3841 ▲	4822 052 10338	3,3Ω		NFR25
3842	4822 116 83864	10kΩ	5%	0,5W
3843	4822 116 83882	39kΩ	5%	0,5W
3844	4822 050 11002	1kΩ	5%	0,2W
3845	4822 116 83882	39kΩ	5%	0,5W
3846	4822 050 11002	1kΩ	5%	0,2W
3848	4822 050 11002	1kΩ	5%	0,2W
3849 ▲	4822 052 10338	3,3Ω		NFR25
3850	4822 050 11002	1kΩ	5%	0,2W
3851	4822 116 52264	27kΩ	5%	0,5W
3852	4822 050 11002	1kΩ	5%	0,2W
3853	4822 116 83961	6,8kΩ	5%	0,16W
3854	4822 116 83878	270kΩ	5%	0,5W
3856	4822 116 52257	22kΩ	5%	0,5W
3857	4822 116 52234	100kΩ	5%	0,5W
3858	4822 116 52175	100Ω	5%	0,5W
3859	4822 116 83872	220Ω	5%	0,5W
3860	4822 116 52175	100Ω	5%	0,5W
3861	4822 116 52175	100Ω	5%	0,5W
3862	4822 116 52235	1MΩ	5%	0,5W

ELECTRICAL PARTSLIST CD BOARD**RESISTORS**

3863	4822 116 83872	220Ω	5%	0,5W
3864	4822 116 52175	100Ω	5%	0,5W
3865	4822 116 83872	220Ω	5%	0,5W
3866	4822 116 83864	10kΩ	5%	0,5W
3867	4822 116 83864	10kΩ	5%	0,5W
3868	4822 116 83864	10kΩ	5%	0,5W
3869	4822 116 83864	10kΩ	5%	0,5W
3870	4822 116 83864	10kΩ	5%	0,5W
3871	4822 116 52176	10Ω	5%	0,5W
3872	4822 116 52175	100Ω	5%	0,5W
3873	4822 116 83864	10kΩ	5%	0,5W
3874	4822 116 83864	10kΩ	5%	0,5W
3875	4822 116 52191	33Ω	5%	0,5W
3876	4822 116 52213	180Ω	5%	0,5W
3879	4822 116 52226	560Ω	5%	0,5W
3881	4822 116 52283	4,7kΩ	5%	0,5W
3882	4822 116 52283	4,7kΩ	5%	0,5W
3883	4822 116 52175	100Ω	5%	0,5W
3890	4822 050 11002	1kΩ	5%	0,2W
3891	4822 050 11002	1kΩ	5%	0,2W
3892	4822 116 52271	33kΩ	5%	0,16W
3893	4822 116 52249	1,8kΩ	5%	0,16W
3895	4822 116 52271	33kΩ	5%	0,16W
3896	4822 116 83876	270Ω	5%	0,16W
3897	4822 116 52213	180Ω	5%	0,5W

COILS

5804	4822 157 53302	1μH
5810	4822 157 11517	10μH
5860	4822 242 10566	CRYSTAL 8.4672MHz

DIODES

6888	4822 130 80655	BZX79-F2V4
------	----------------	------------

TRANSISTORS

7822	4822 130 41344	BC337-40
7877	4822 130 40959	BC547B
7878	4822 130 44503	BC547C

INTEGRATED CIRCUITS

7802 ©	4822 209 12636	TDA1302T/N1	HF PRE AMPLIFIER
7819 ©	5322 209 11517	PC74HCU04T	HF AMPLIFIER
7821	4822 209 16143	LC89170M	CD TEXT
7851	4822 209 32852	TDA7073A/N2	SERVO DRIVER
7852	4822 209 32852	TDA7073A/N2	MOTOR DRIVER
7855 ©	4822 209 31519	TDA7072A	TRAY MOTOR DRIVER
7860 ©	4822 209 12752	SAA7378GP	SIGNAL PROCESSOR

ELECTRICAL PARTSLIST HEADPHONE BOARD**MISCELLANEOUS**

1600	4822 267 31453	HEADPHONE SOCKET 6,3mm
------	----------------	------------------------

CAPACITORS

2603	4822 126 11585	22nF	20%	50V
2604	4822 122 33197	1nF	10%	50V
2605	4822 122 33197	1nF	10%	50V
2610	4822 126 12882	100nF	20%	50V

RESISTORS

3600	4822 101 21199	POTMETER 2x10KΩ		
3603	4822 116 52244	15kΩ	5%	0,5W
3604	4822 116 52206	120Ω	5%	0,5W
3605	4822 116 83864	10kΩ	5%	0,5W
3606	4822 116 83864	10kΩ	5%	0,5W
3607	4822 116 52244	15kΩ	5%	0,5W
3608	4822 116 52206	120Ω	5%	0,5W
3609	4822 052 10109	10Ω	5%	NFR
3611 ▲	4822 052 10109	10Ω	5%	NFR

INTEGRATED CIRCUITS

7670	4822 209 83274	NJM4560D
------	----------------	----------

ELECTRICAL PARTSLIST SET**MISCELLANEOUS**

5001 ▲	4822 146 11031	TRANSFORMER MAINS not for /01
5001 ▲	4822 146 11032	TRANSFORMER MAINS for /01 only
	4822 219 10538	RC07105/01 (Remote Control)
	4822 321 22832	CINCH-CABLE

ELECTRICAL PARTSLIST AF BOARD**MISCELLANEOUS**

1255 ▲	4822 071 56301	FUSE T 630mA/250V
1256 ▲	4822 071 56301	FUSE T 630mA/250V
1503	4822 267 31996	CINCH SOCKET DIGITAL OUT
1504	4822 265 20553	CINCH SOCKET LINE OUT

CAPACITORS

2250	4822 124 41407	0,47µF	20%	63V
2251	4822 124 11769	220µF	20%	50V
2252	4822 126 11585	22nF	20%	50V
2253	4822 126 11585	22nF	20%	50V
2254	4822 124 11878	4700µF	20%	16V
2255	4822 126 12882	100nF	20%	50V
2256	4822 126 11585	22nF	20%	50V
2257	4822 126 11585	22nF	20%	50V
2258	4822 124 40784	3300µF	20%	16V
2259	4822 124 40849	330µF	20%	16V
2500	4822 126 11585	22nF	20%	50V
2501	4822 124 40433	47µF	20%	25V
2502	4822 124 40433	47µF	20%	25V
2503	4822 121 51387	10nF	20%	16V
2504	4822 121 51387	10nF	20%	16V
2505	4822 122 33519	470pF	10%	50V
2506	4822 122 33519	470pF	10%	50V
2507	4822 124 40433	47µF	20%	25V
2508	4822 124 40433	47µF	20%	25V
2511	4822 124 40433	47µF	20%	25V
2512	4822 124 40433	47µF	20%	25V
2513	4822 122 33519	470pF	10%	50V
2514	4822 122 33519	470pF	10%	50V
2515	4822 124 40433	47µF	20%	25V
2516	4822 121 51387	10nF	20%	16V
2521	4822 124 22263	220µF	20%	25V
2522	4822 124 22263	220µF	20%	25V
2523	4822 121 51387	10nF	20%	16V
2524	4822 124 40433	47µF	20%	25V
2541	4822 124 40242	1µF	20%	63V
2543	4822 126 12882	100nF	20%	50V
2544	4822 126 11585	22nF	20%	50V
2545	4822 121 51387	10nF	20%	16V

RESISTORS

3251 ▲	4822 053 10471	470Ω	5%	1W
3252 ▲	4822 053 10471	470Ω	5%	1W
3253	4822 116 52257	22kΩ	5%	0,5W
3254	4822 116 52283	4,7kΩ	5%	0,5W
3255	4822 116 52256	2,2kΩ	5%	0,16W
3256	4822 050 11002	1kΩ	5%	0,2W
3257 ▲	4822 116 52283	4,7kΩ	5%	0,5W
3258	4822 116 52283	4,7kΩ	5%	0,5W
3260 ▲	4822 052 10568	5,6Ω	5%	0,33W
3500	4822 116 52289	5,6kΩ	5%	0,16W
3501	4822 116 83864	10kΩ	5%	0,5W
3502	4822 116 52175	100Ω	5%	0,5W
3503	4822 116 52175	100Ω	5%	0,5W
3504	4822 116 52175	100Ω	5%	0,5W
3505	4822 116 52175	100Ω	5%	0,5W
3506	4822 116 52175	100Ω	5%	0,5W
3507	4822 116 52283	4,7kΩ	5%	0,5W
3508	4822 116 52283	4,7kΩ	5%	0,5W
3509	4822 116 52283	4,7kΩ	5%	0,5W
3510	4822 116 52283	4,7kΩ	5%	0,5W

RESISTORS

3511	4822 116 52256	2,2kΩ	5%	0,16W
3512	4822 116 52256	2,2kΩ	5%	0,16W
3513	4822 116 83884	47kΩ	5%	0,16W
3514	4822 116 83884	47kΩ	5%	0,16W
3515	4822 116 52175	100Ω	5%	0,5W
3527	4822 116 52256	2,2kΩ	5%	0,16W
3532	4822 116 83874	220kΩ	5%	0,5W
3534	4822 116 83864	10kΩ	5%	0,5W
3535	4822 116 52289	5,6kΩ	5%	0,16W
3537	4822 116 83872	220Ω	5%	0,5W
3538	4822 116 83872	220Ω	5%	0,5W
3539	4822 050 11002	1kΩ	5%	0,2W
3540	4822 050 11002	1kΩ	5%	0,2W
3541	4822 050 11002	1kΩ	5%	0,2W
3542	4822 050 11002	1kΩ	5%	0,2W
3543	4822 050 11002	1kΩ	5%	0,2W
3544	4822 050 11002	1kΩ	5%	0,2W
3545	4822 050 11002	1kΩ	5%	0,2W
3547	4822 050 11002	1kΩ	5%	0,2W
3548	4822 116 52256	2,2kΩ	5%	0,16W
3556	4822 116 52176	10Ω	5%	0,5W
3557	4822 052 10688	6,8Ω	5%	0,33W
3557	4822 052 10688	6,8Ω	5%	0,33W

DIODES

6250	4822 130 34379	BZX79-C27
6251	4822 130 34174	BZX79-B4V7
6252	4822 130 31878	1N4003G
6253	4822 130 31878	1N4003G
6254	4822 130 31878	1N4003G
6255	4822 130 31878	1N4003G
6256	4822 130 31878	1N4003G
6257	4822 130 31878	1N4003G
6258	4822 130 31878	1N4003G
6259	4822 130 31981	BZX79-C3V9
6260	4822 130 31878	1N4003G
6500	4822 130 30621	1N4148

TRANSISTORS

7250	4822 130 41327	BC327-40
7252	5322 130 60068	BC558C
7500	4822 130 41327	BC327-40
7501	5322 130 60068	BC558C
7504	4822 130 44568	BC557B
7507	4822 130 41344	BC337-40
7508	4822 130 41344	BC337-40
7509	4822 130 41344	BC337-40
7510	4822 130 41344	BC337-40

INTEGRATED CIRCUITS

7251 ▲	4822 209 80817	L7805CV	5V REGULATOR
7502	4822 209 33252	TDA1549T/N1	DAC
7505	4822 209 83274	NJM4560D	DUAL OP. AMP

ELECTRICAL PARTSLIST FRONT BOARD**MISCELLANEOUS**

1800	4822 135 00234	DISPLAY
1810	4822 265 11183	CON. FLEX FOIL 4PIN SIDE ENTRY
1820	4822 276 13114	TACT SWITCH
1821	4822 276 13114	TACT SWITCH
1822	4822 276 13114	TACT SWITCH
1823	4822 276 13114	TACT SWITCH
1824	4822 276 13114	TACT SWITCH
1825	4822 276 13114	TACT SWITCH
1826	4822 276 13114	TACT SWITCH
1827	4822 276 13114	TACT SWITCH
1828	4822 276 13114	TACT SWITCH
1829	4822 276 13114	TACT SWITCH
1830	4822 276 13114	TACT SWITCH
1831	4822 276 13114	TACT SWITCH
1832	4822 276 13114	TACT SWITCH
1840	4822 276 13114	TACT SWITCH
7810	4822 130 10165	GP1U28XP, IR EYE
8002	4822 320 12385	FLEX FOIL 4P 100mm (CD Text)

CAPACITORS

2800	4822 124 22726	4,7 μ F	20%	35V
2801	4822 124 22726	4,7 μ F	20%	35V
2803	4822 126 11585	22nF	20%	50V
2807	4822 124 81029	100 μ F	20%	25V
2808	4822 126 11585	22nF	20%	50V
2810	4822 121 51387	10nF	20%	16V
2811	4822 121 51387	10nF	20%	16V
2812	4822 126 12882	100nF	20%	50V
2813	4822 126 12882	100nF	20%	50V
2814	4822 124 40433	47 μ F	20%	25V
2815	4822 121 42408	220nF	5%	63V

RESISTORS

3804	4822 050 11002	1k Ω	5%	0,2W
3805	4822 050 11002	1k Ω	5%	0,2W
3806	4822 050 11002	1k Ω	5%	0,2W
3807	4822 050 11002	1k Ω	5%	0,2W
3808	4822 116 52195	47 Ω	5%	0,5W
3809	4822 116 52234	100k Ω	5%	0,5W
3810	4822 050 11002	1k Ω	5%	0,2W
3811	4822 050 11002	1k Ω	5%	0,2W
3812	4822 050 11002	1k Ω	5%	0,2W
3813	4822 050 11002	1k Ω	5%	0,2W
3814	4822 050 11002	1k Ω	5%	0,2W
3815	4822 050 11002	1k Ω	5%	0,2W
3816	4822 050 11002	1k Ω	5%	0,2W
3817	4822 116 52257	22k Ω	5%	0,5W
3818	4822 116 52257	22k Ω	5%	0,5W
3819	4822 116 52257	22k Ω	5%	0,5W
3820	4822 116 52257	22k Ω	5%	0,5W
3821	4822 050 11002	1k Ω	5%	0,2W
3822	4822 050 11002	1k Ω	5%	0,2W
3823	4822 050 11002	1k Ω	5%	0,2W
3829	4822 116 52257	22k Ω	5%	0,5W
3830	4822 116 52257	22k Ω	5%	0,5W
3832	4822 050 11002	1k Ω	5%	0,2W
3833	4822 050 11002	1k Ω	5%	0,2W
3834	4822 050 11002	1k Ω	5%	0,2W

RESISTORS

3835	4822 050 11002	1k Ω	5%	0,2W
3836	4822 116 52257	22k Ω	5%	0,5W
3837	4822 116 83884	47k Ω	5%	0,16W
3838	4822 050 11002	1k Ω	5%	0,2W
3841	4822 050 11002	1k Ω	5%	0,2W
3842	4822 050 11002	1k Ω	5%	0,2W
3844	4822 050 11002	1k Ω	5%	0,2W
3845	4822 050 11002	1k Ω	5%	0,2W
3846	4822 050 11002	1k Ω	5%	0,2W
3847	4822 116 52175	100 Ω	5%	0,5W
3848	4822 116 52176	10 Ω	5%	0,5W
3849	4822 050 24708	4,7 Ω	1%	0,6W

COILS

1844	4822 242 72066	CERAMIC FILTER 8,0MHz
5801	4822 156 31058	FILTER DIGITAL OUT
5802	4822 156 21721	2,2 μ H

DIODES

6801	4822 130 30621	1N4148
6802	4822 130 30621	1N4148
6820	4822 130 31878	1N4003G

TRANSISTORS

7811	4822 130 40959	BC547B
------	----------------	--------

INTEGRATED CIRCUITS

7800 ©	4822 209 16739	TMP87CP71-83780 MICROPROCESSOR
--------	----------------	--------------------------------