

Service Manual

Quartz Direct Drive Fully Automatic Turntable System

SL-J2

[M], [MC]



is the standard mark for the "P-mount" plug-in-connector system.
Products carrying this mark are inter-changeable and compatible
with each other.

* The cartridge shown here is an option.

Areas

- [M] is available in U.S.A.
- [MC] is available in Canada.

Specifications

■ General

Power supply: 120 V AC, 60 Hz

Power consumption: 10 W

Dimensions:
(W × H × D)
31.5 × 8.8 × 31.5 cm
(12-1/2" × 3-1/2" × 12-1/2")
(Maximum height when dust
cover is open.)
39 cm (15-23/64")

Weight: 4.3 kg (9.5lb.)

Specifications are subject to change without notice further improvement.

Weight and dimensions shown are approximate.

Downloaded from www.vinylengine.com

Turntable platter:

Aluminum die-cast

Diameter 30 cm (12")

33-1/3 rpm and 45 rpm

Auto speed select

(Manual selection possible)

0.012% WRMS*

0.025% WRMS (JIS C5521)

±0.035% peak

(IEC 98A Weighted)

Turntable speeds:

33-1/3 rpm and 45 rpm

Auto speed select

(Manual selection possible)

0.012% WRMS*

0.025% WRMS (JIS C5521)

±0.035% peak

(IEC 98A Weighted)

Wow and flutter:

0.012% WRMS*

0.025% WRMS (JIS C5521)

±0.035% peak

(IEC 98A Weighted)

Rumble:

-56 dB (IEC 98A Unweighted)

-78 dB (IEC 98A Weighted)

■ Tonearm section

Type:

Linear tracking tonearm

4-pivot gimbal suspension

10.5 cm (4-1/8")

Within ±0.1°

Effective length:

9 g (including cartridge)

Tracking error angle:

12 Hz

Effective mass:

DC motor

Resonance frequency:

Tonearm drive motor:

Phono cable

150 pF

capacitance:

Drive method: Direct drive

Motor: Brushless DC motor

Drive control method: Quartz-phase-locked control

Matsushita Engineering and
Service Company
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Hawaii Inc.
91-238 Kauhi St. Ewa Beach
P.O. Box 774
Honolulu, Hawaii 96808-0774

Matsushita Electric
of Canada Limited
5770 Ambler Drive, Mississauga,
Ontario, L4W 2T3

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
Ave. 65 De Infanteria, KM 9.7
Victoria Industrial Park
Carolina, Puerto Rico 00630

Technics

■ CONTENTS

	Page
SAFETY PRECAUTION	2
LOCATION OF CONTROLS	3
DISASSEMBLY INSTRUCTIONS	4 ~ 7
MEASUREMENTS AND ADJUSTMENT	8, 9
TROUBLE SHOOTING	10 ~ 12
HOW TO SET THE TONEARM DRIVE ROPE	13
RESISTORS AND CAPACITORS	13, 14
REPLACEMENT PARTS LIST	14, 15
EXPLODED VIEW	15 ~ 17
CIRCUIT BOARDS AND WIRING	
CONNECTION DIAGRAM	18 ~ 20
SCHEMATIC DIAGRAM	21 ~ 24
BLOCK DIAGRAM	25 ~ 27
PACKING	28


■ SAFETY PRECAUTION

1. Before servicing, unplug the power cord to prevent an electric shock.
2. When replacing parts, use only manufacturer's recommended components for safety.
3. Check the condition of the power cord. Replace if wear or damage is evident.
4. After servicing, be sure to restore the lead dress, insulation barriers, insulation papers, shields, etc.
5. Before returning the serviced equipment to the customer, be sure to make the following insulation resistance test to prevent the customer from being exposed to a shock hazard.


• INSULATION RESISTANCE TEST

1. Unplug the power cord and short the two prongs of the plug with a jumper wire.
2. Turn on the power switch.
3. Measure the resistance value with ohmmeter between the jumpered AC plug and each exposed metal cabinet part, such as screwheads antenna, control shafts, handle brackets, etc. Equipment with antenna terminals should read between $3M\Omega$ and $5.2M\Omega$ to all exposed parts. (Fig. A) Equipment without antenna terminals should read approximately infinity to all exposed parts. (Fig. B)

Note: Some exposed parts may be isolated from the chassis by design. These will read infinity.

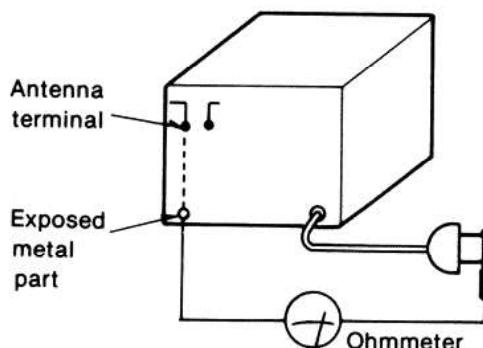

(Fig. A)

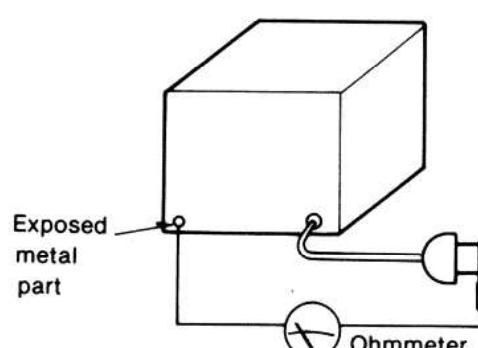


(Fig. B)

Resistance = $3M\Omega$ — $5.2M\Omega$

Resistance = Approx ∞

4. If the measurement is outside the specified limits, there is a possibility of a shock hazard. The equipment should be repaired and rechecked before it is returned to the customer.

■ LOCATION OF CONTROLS

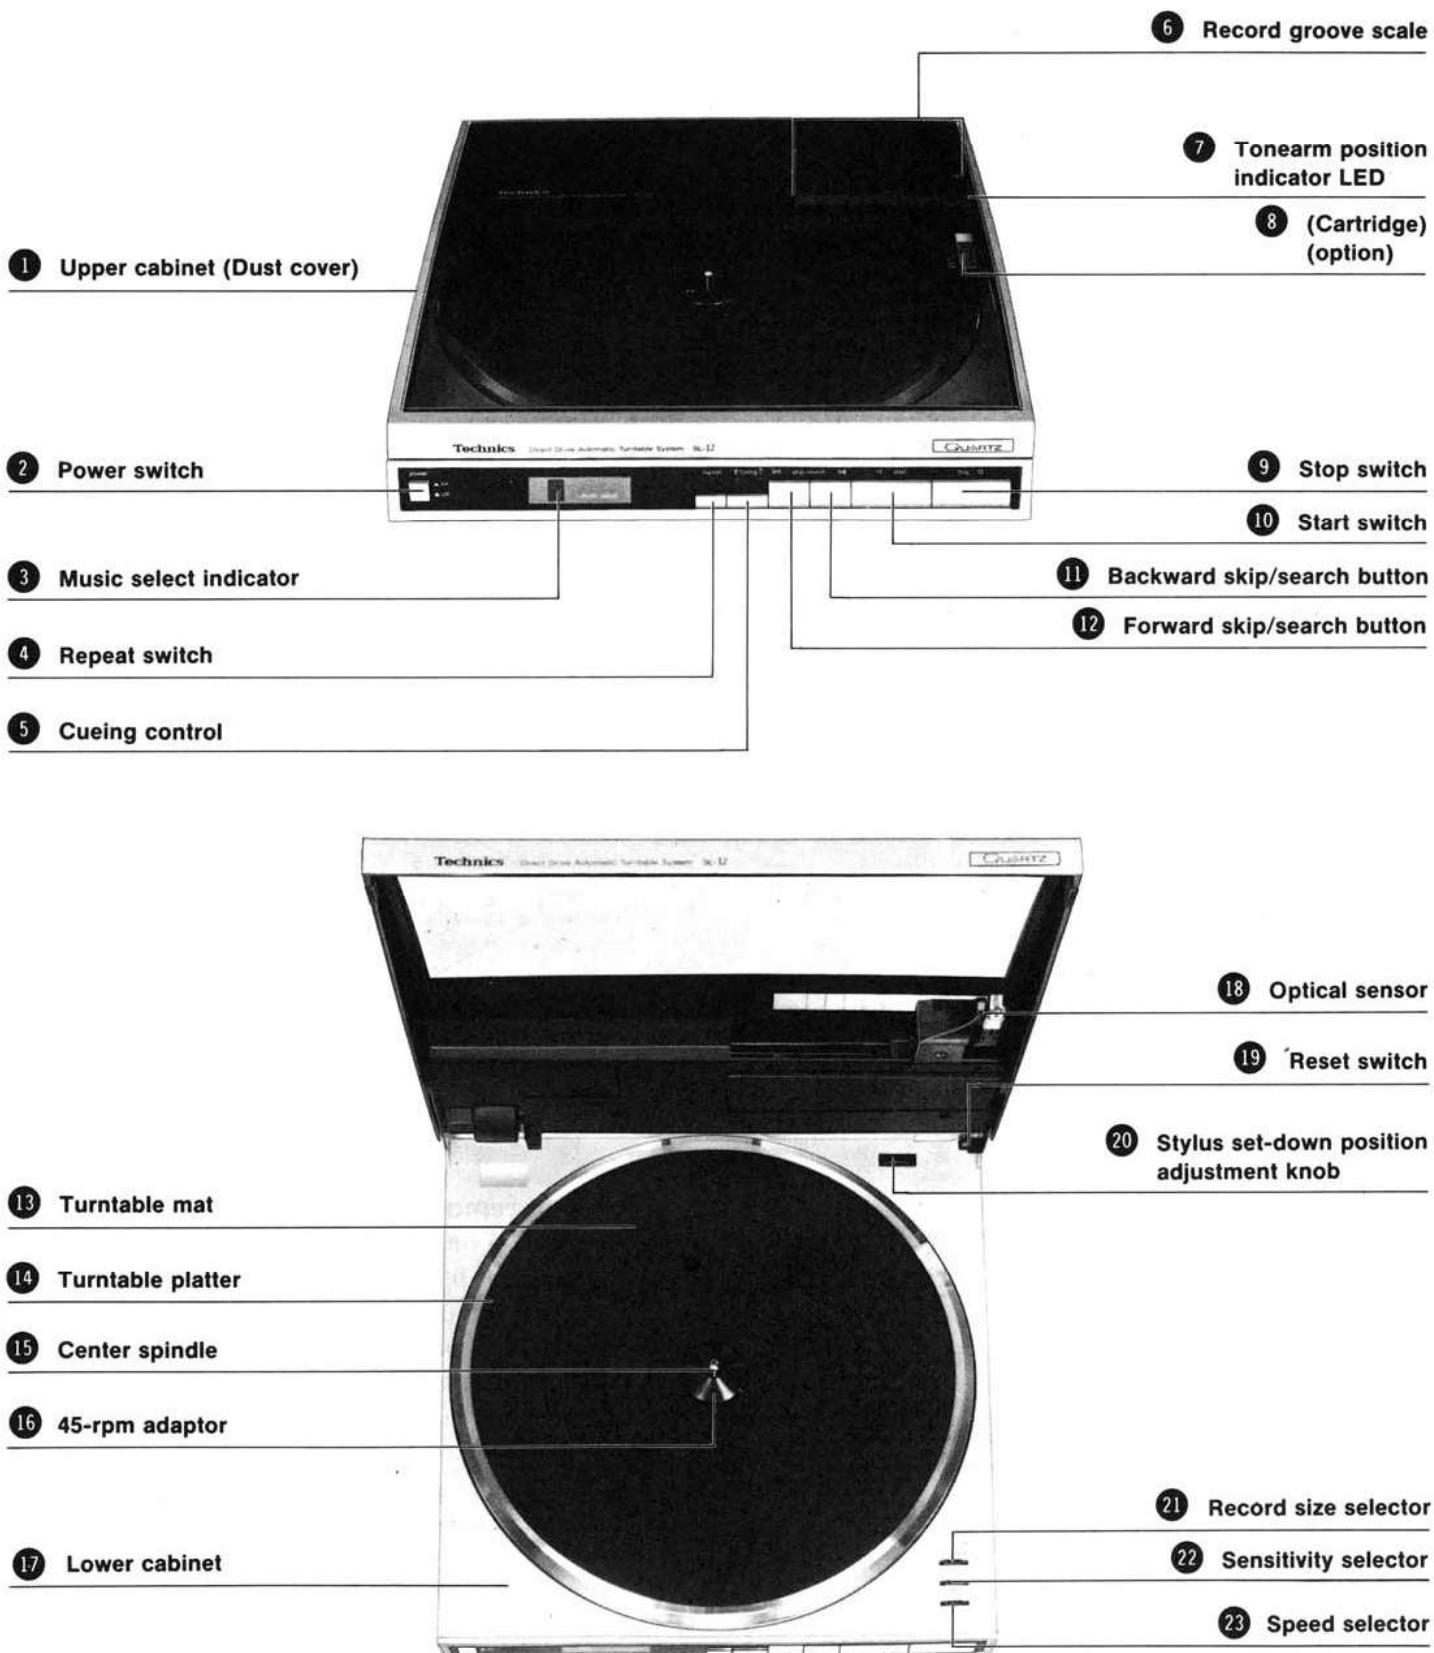

■ DISASSEMBLY INSTRUCTIONS

● How to remove the cartridge

1. Open the upper cabinet.
2. Down the tonearm by finger in order to make cueing down position.
3. Remove the cartridge setscrew (Fig. 1: ①), and pull out the cartridge.

Note: When attaching the cartridge again, match the tonearm connector with the cartridge pins, then completely insert it and tighten the screw.

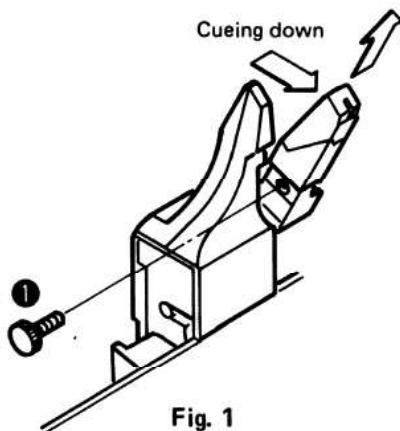


Fig. 1

● How to remove the turntable platter

1. Open the upper cabinet.
2. Remove the turntable mat, and lift the turntable platter. (Fig. 2)

Note:

- (1) When removing the turntable platter, it is not necessary to remove the 45 r.p.m. adaptor.
- (2) The turntable platter is tight fitted on to the center spindle. When removing the turntable platter, take care not to give damage to the upper cabinet, arm motor cover and tonearm cover.

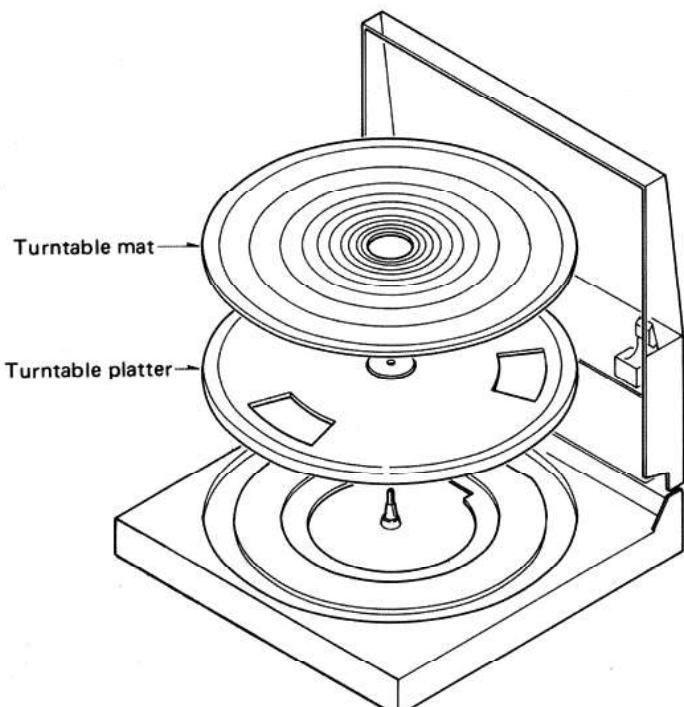


Fig. 2

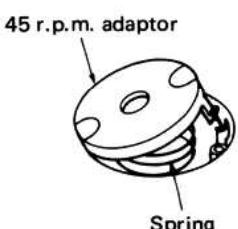
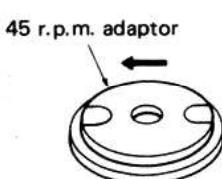


Fig. 3

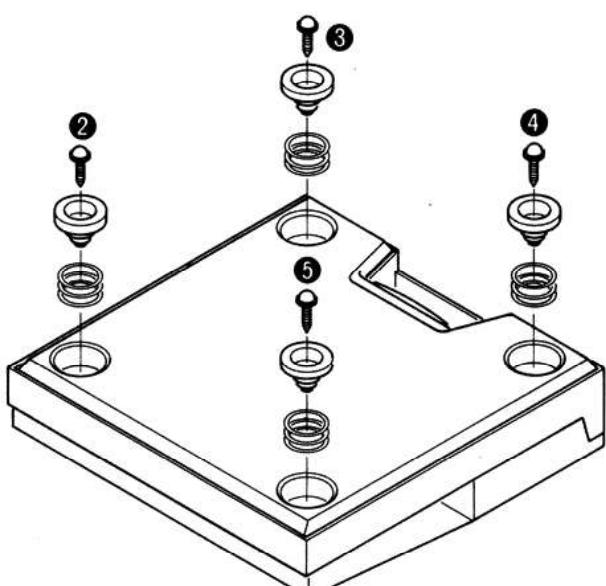


Fig. 4

● How to remove the 45 r.p.m. adaptor (Fig. 3)

1. Remove the turntable platter. (Refer to "How to remove the turntable platter".)
2. Turn the 45 r.p.m. adaptor counter clockwise to raise it from the turntable platter surface.
3. Push the claw by the blade screwdriver in the direction of the arrow, then remove the 45 r.p.m. adaptor.

Note: When removing the 45 r.p.m. adaptor, remove the turntable platter, otherwise the 45 r.p.m. adaptor claws will be broken.

● How to remove the bottom board

1. Remove the turntable platter. (Refer to "How to remove the turntable platter".)
2. Close the upper cabinet and turn over the unit on a soft cloth taking care not to damage the upper cabinet.
3. Remove the 4 bottom board setscrews. (Fig. 4: ② ~ ⑤).

● How to remove the main circuit board

1. Remove the bottom board. (Refer to "How to remove the bottom board.")
2. Remove the select switch holder setscrew (Fig. 5 : ⑥) and the select switch holder. (Fig. 5)
3. Remove the 4 main circuit board setscrews (Fig. 6 : ⑦ ~ ⑩)
4. Pull out the power switch rod from the power switch in the direction of the arrow. Then, lift the main circuit board in the direction of the arrow.

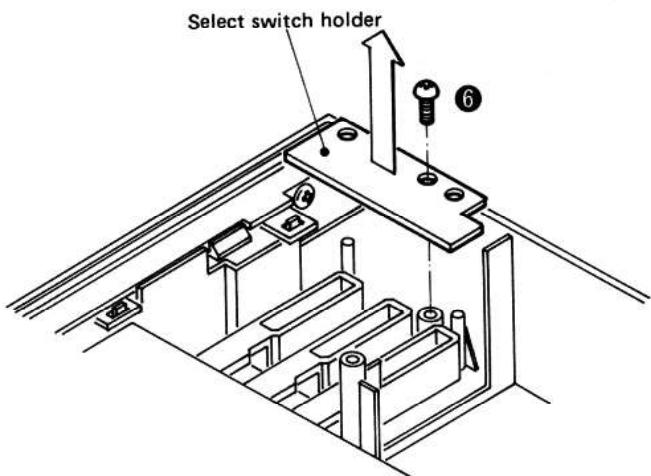


Fig. 5

● How to remove the operation button

1. Remove the main circuit board. (Refer to "How to remove the main circuit board.")
2. Remove the 2 connectors (Fig. 6 : CN302 and CN304), and then, lift the front panel. (Fig. 6)
3. Remove the 3 operation circuit board setscrews (Fig. 7 : ⑪ ~ ⑬).
4. Release the 5 claws, then the operation circuit board can be removed. (Fig. 7)
5. Release the 4 claws and gently pull the operation button. (Fig. 7)

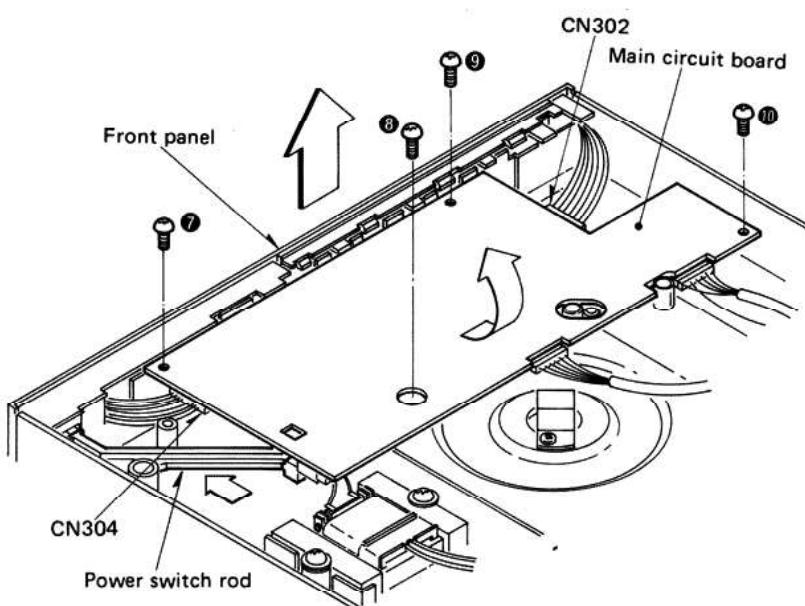


Fig. 6

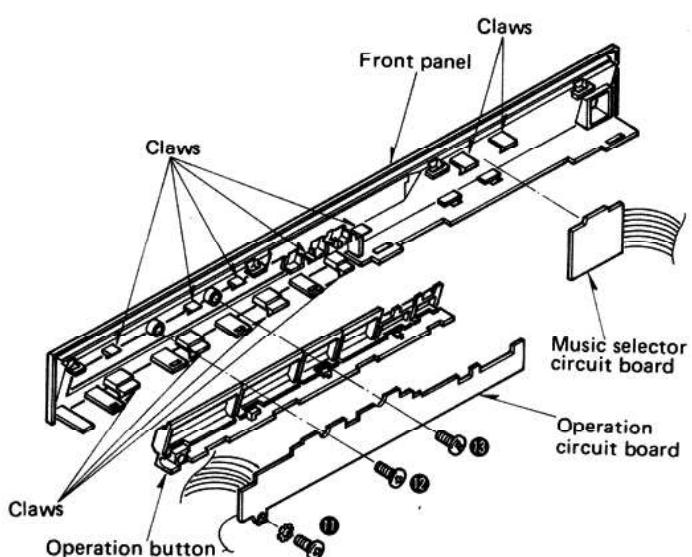


Fig. 7

● How to remove the music select circuit board

1. Remove the front panel. (Refer to "How to remove the operation button", item 2.)
2. Release the 2 claws, then the music select circuit board can be removed. (Fig. 7)

● How to remove the stator frame and drive circuit board

1. Remove the main circuit board. (Refer to "How to remove the main circuit board.")
2. Remove the 3 stator frame setscrews (Fig. 8: ⑯ ~ ⑰) and the 2 drive circuit board setscrews (Fig. 8: ⑲, ⑳).
3. Cut off the stopper by nippers and remove the 4 setscrews (Fig. 9: ㉑ ~ ㉔) to separate the stator frame and drive circuit board.

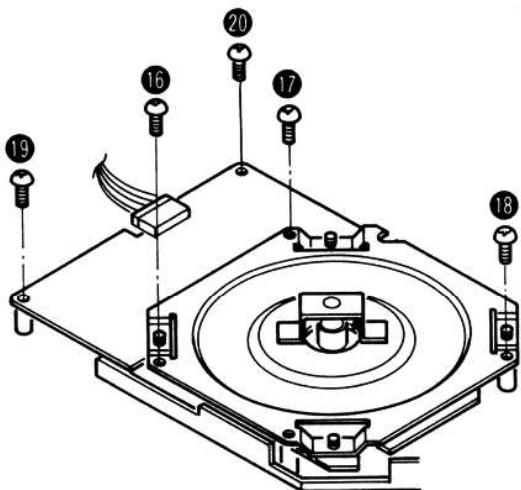


Fig. 8

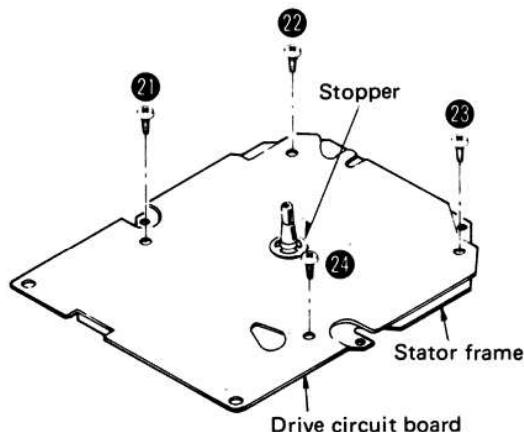


Fig. 9

● How to remove the reset switch

1. Remove the bottom board. (Refer to "How to remove the bottom board")
2. Remove the switch holder setscrew (Fig. 10: 25).
3. Release the 2 claws of switch holder and remove the reset switch circuit board.
4. Unsolder the 2 switch terminals, then the reset switch can be removed.

Note: When replacing the reset switch, be sure to open the upper cabinet.

● How to remove the Hall element

1. Remove the turntable platter.
2. Remove the terminal solder by use of solder sucker.
3. Hold the Hall element with a tweezers and remove it while touching the soldering iron to the terminal. (Fig. 11)

● How to remove the dust cover

1. Pull out the 4 right and left rivets and 2 right and left rivet holders. (Fig. 12)
2. Lift the dust cover in the direction of the arrow. (Fig. 12) Then the dust cover can be removed.

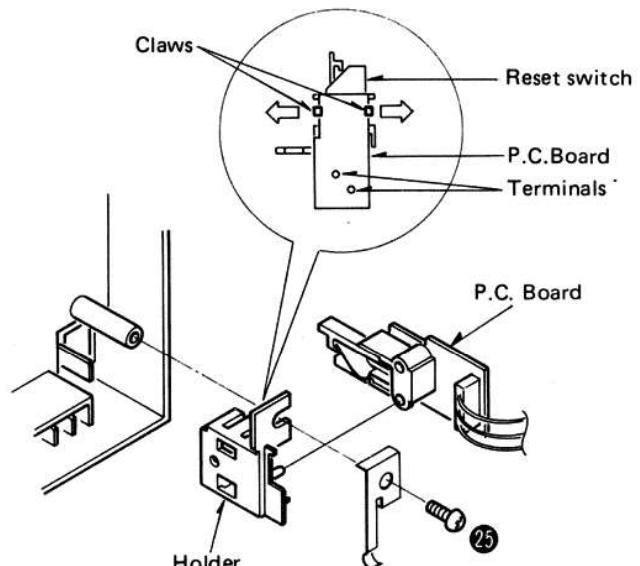


Fig. 10

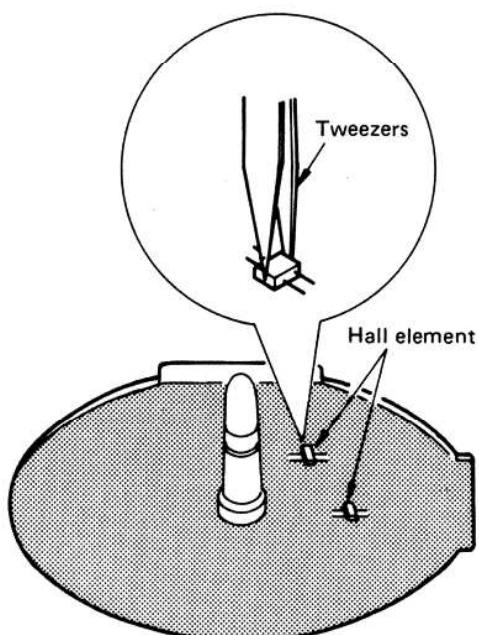


Fig. 11

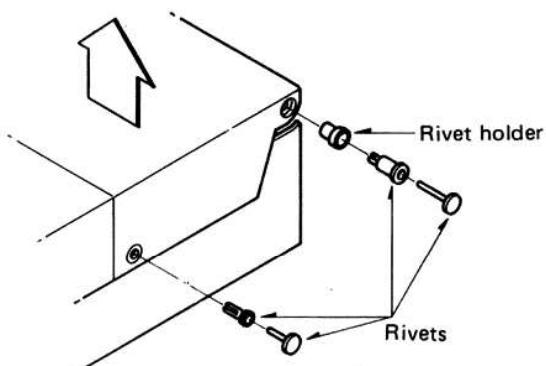


Fig. 12

● How to remove the tonearm

1. Remove the dust cover. (Refer to "How to remove the dust cover.")
2. Remove the shield cover setscrew (Fig. 13 : 26) and shield cover.
3. Unsolder the 5 lead wires from Tonearm.
4. Turn the worm gear by finger to move the tonearm center inward.
5. Remove the tonearm setscrew. (Fig. 14 : 27)
6. Remove the guide rail clamper, and pull out the guide rail, the remove the tonearm in the direction of the arrow (A).

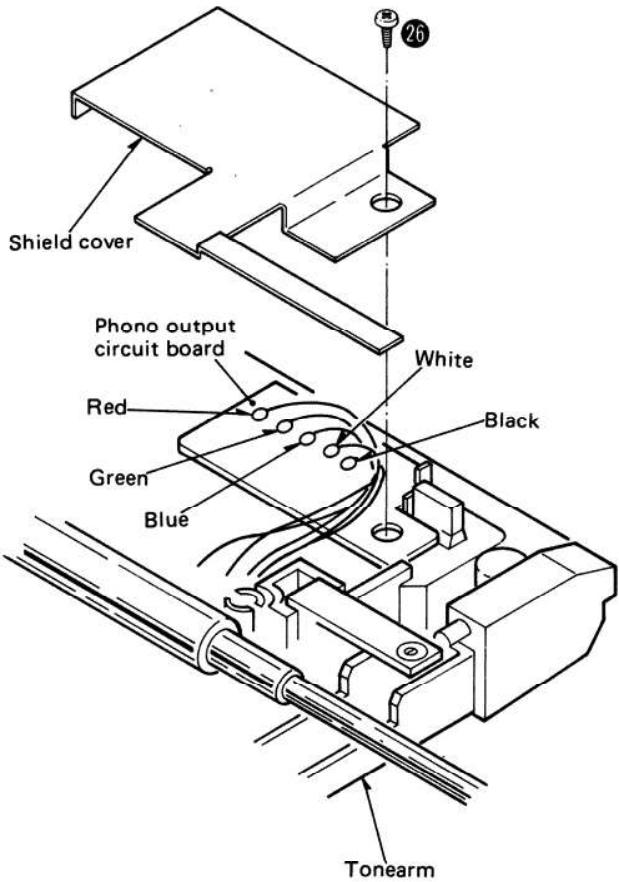


Fig. 13

● How to remove the offset angle detection circuit board

1. Remove the dust cover. (Refer to "How to remove the dust cover.")
2. Remove the indicator cover setscrew (Fig. 14: 28) and the indicator cover in the direction of the arrow (B) . (Fig. 14)
3. Remove the offset angle detection circuit board adjustment screw (Fig. 14: 29), then the offset angle detection circuit board can be removed.

Note: When replacing the offset angle detection circuit board, be sure to adjust the servo gain and offset voltage.

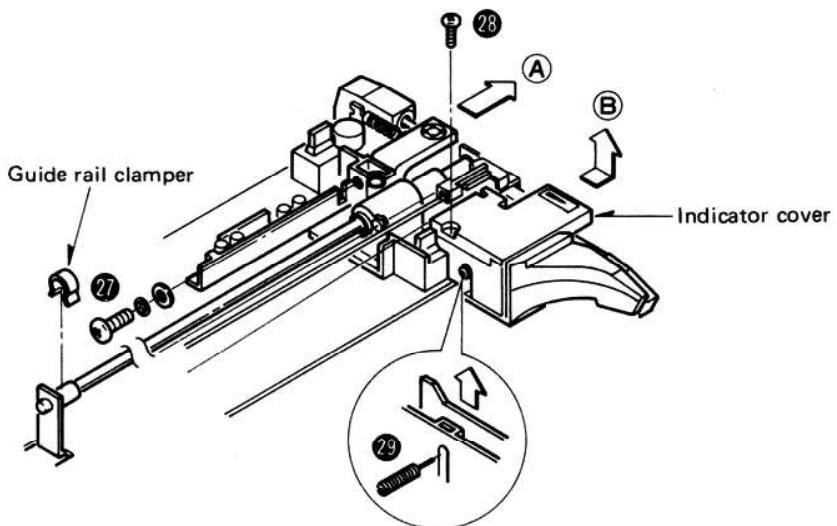


Fig. 14

■ MEASUREMENTS AND ADJUSTMENT

- Equipment used and condition of the set

1. Oscilloscope
2. DC voltmeter
3. Record (SFTR007) for adjustment
4. Set the optical sensor sensitivity selector to "M".

Step	Item	Preparations for adjustment	Adjusting portion	Adjusting method
1	Start position	<ol style="list-style-type: none"> 1. Open the upper cabinet and put on the record. 2. Turn the power switch on. 3. Push the "start" switch. 	Start position adjusting screw (Fig. 15)	<ol style="list-style-type: none"> 1. Turn the start position adjusting screw. If it descends between turns, turn the screw counter clockwise.
2	Clock frequency	<ol style="list-style-type: none"> 1. Connect lead wire with clip to IC301 29-pin and 1-pin of operation circuit board. 2. Connect the oscilloscope to IC301 8-pin. 	VR301 (Fig. 16)	<ol style="list-style-type: none"> 1. Turn the power switch on. 2. Adjust VR301 so that the cycle of output waveform is $1.36\text{msec.} \pm 0.07\text{msec.}$ (Fig. 17)
3	Sensor gain	<ol style="list-style-type: none"> 1. Connect the DC voltmeter to CN301 3-pin (+) and 2-pin (-). 2. Put on the record for adjustment with side A up. 	VR401 (Fig. 16)	<ol style="list-style-type: none"> 1. Turn the power switch on. 2. Tonearm is on the rest position. (Blank area of the record.) 3. Adjust VR401 so that the output voltage is $8V \pm 0.4V$.
4	Sensor resolution	<ol style="list-style-type: none"> 1. Connect the oscilloscope to IC401 9-pin (+) and 14-pin (-). 2. Put on the record for adjustment with side A up. 	VR402 (Fig. 16)	<ol style="list-style-type: none"> 1. Turn the power switch on. 2. Keep the F skip switch depressed to move the tonearm. (Output is delivered between the turns.) 3. Adjust VR402 so that the peak output between tunes is $3V \pm 0.3V$. (Fig. 18)
5	Stylus cue-down position	<ol style="list-style-type: none"> 1. Open the upper cabinet and hold the cabinet switch with tape. 2. Put on the record for adjustment with side B up. 3. Close the upper cabinet. 4. Connect the unit to the amplifier. (Connect the speakers to the speaker terminals.) 	VR302 (Fig. 16)	<ol style="list-style-type: none"> 1. Turn the power switch on. 2. Press the F skip switch twice and then press the start switch. 3. After completion of cueing, again press the B skip switch for the purpose of cueing down as previously mentioned. 4. Make sure that descending position is at count "18 ~ 19". 5. Adjust VR302 so that the decending position is at count "18 ~ 19".
6	Tonearm offset angle	<ol style="list-style-type: none"> 1. Remove the dust cover. (Refer to "DISASSEMBLY INSTRUCTION") 2. Open the upper cabinet and hold the cabinet switch with tape. 3. Close the upper cabinet. 4. Put on the record. 	Adjusting screw (Fig. 19)	<ol style="list-style-type: none"> 1. Turn the power switch on. 2. Keep the F skip switch depressed to move the tonearm. 3. Turn the adjusting screw so that the arm center matches the V-groove of the lift bar.
7	Servo gain and offset voltage	<ol style="list-style-type: none"> 1. Remove the dust cover. (Refer to "DISASSEMBLY INSTRUCTION") 2. Open the upper cabinet and hold the cabinet switch with tape. 3. Connect the DC voltmeter to CN301 5-pin (+) and 2-pin (-). 4. Remove the sensor cover. 	VR501 (Servo gain) Screw (Offset voltage) (Fig. 20)	<ol style="list-style-type: none"> 1. Turn the power switch on. 2. Keep the F skip switch depressed to move the tonearm. 3. Open the upper cabinet. 4. Completely shift the tonearm to the left. Then, adjust VR501 so that the voltage is 3.6V (Servo gain) 6. If the voltage is not 1.8V, adjust screw so that the output voltage is 1.8V. (Offset voltage)

• Adjustment points

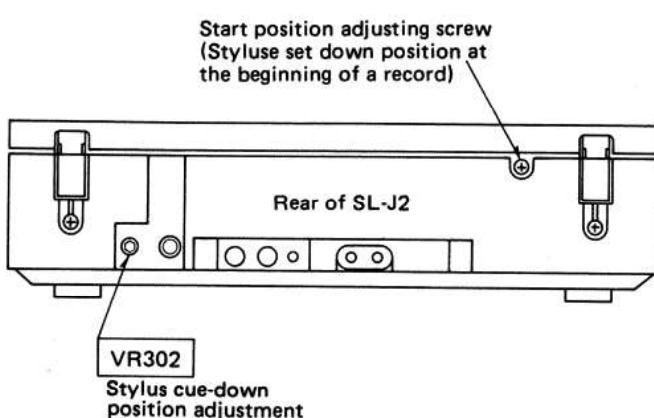


Fig. 15

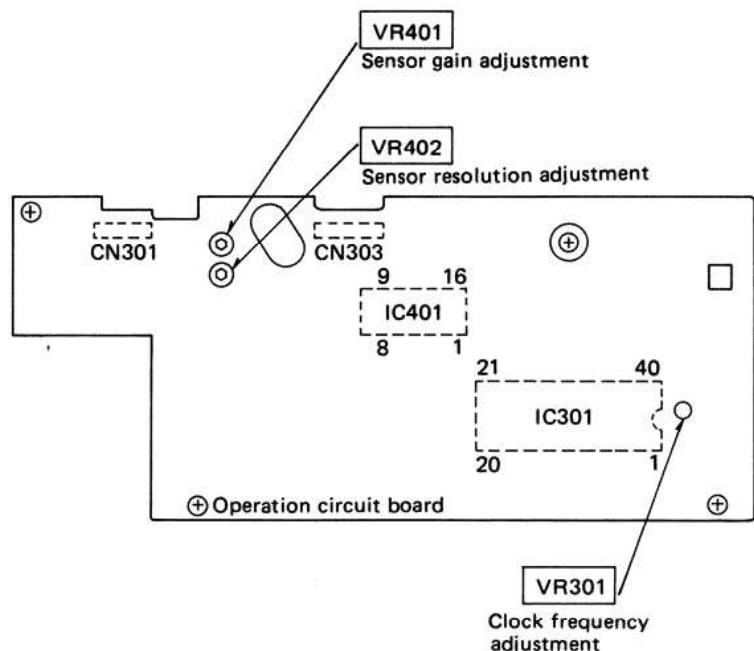


Fig. 16

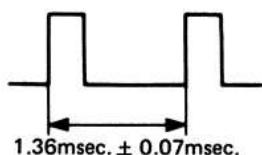


Fig. 17



Fig. 18

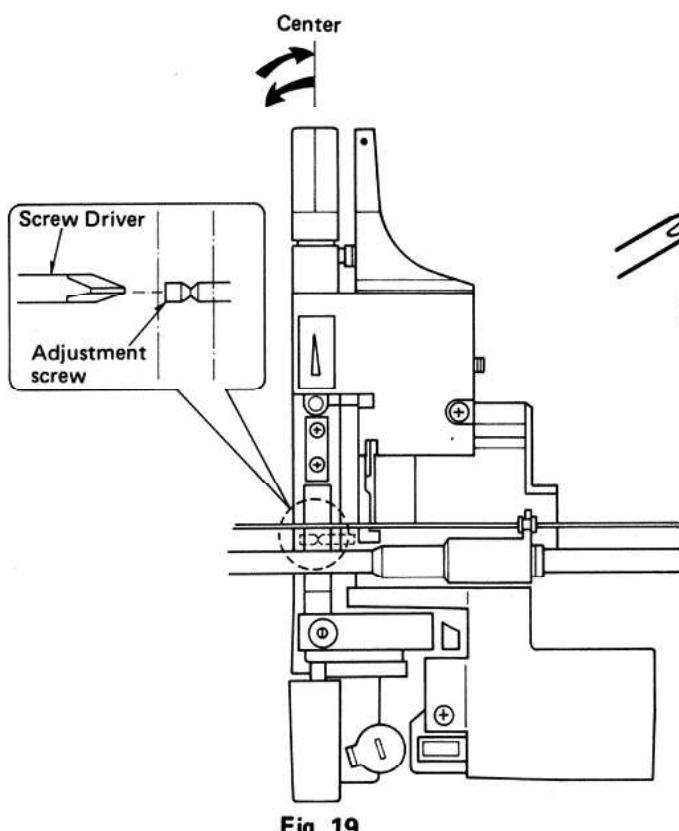


Fig. 19

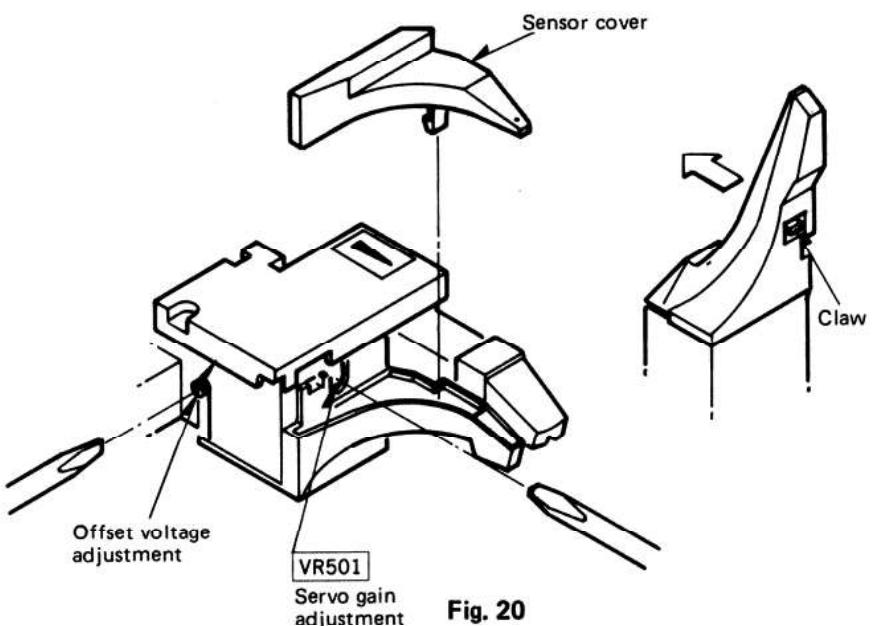


Fig. 20

■ TROUBLE SHOOTING

1. How to use the repair table (Fig. 21)

- ① Remove the bottom board.
- ② Remove the main circuit board and connect the P.C.B. ground terminal to the chassis (Stator frame).
- ③ Put the unit on the repair table.
- ④ Fit the turntable platter and put on the turntable mat.
- ⑤ Put on the record and check the circuits from under the unit.

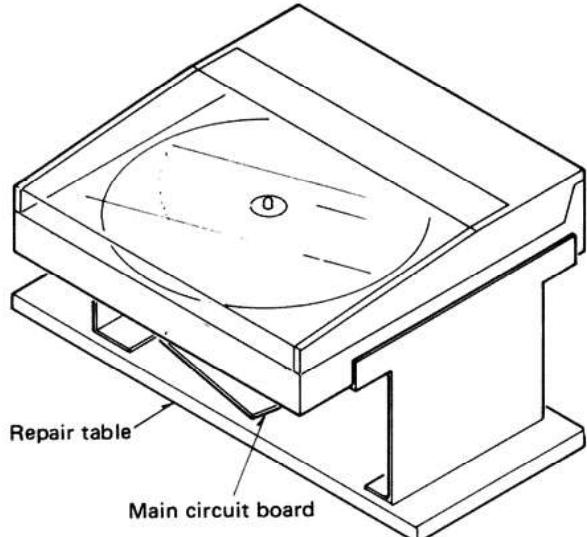


Fig. 21

2. How to raise the unit (Fig. 22)

Note: Turntable platter is not fixed on the center spindle.
Take care so that the turntable platter will not come loose. Also, take care allow the set to fall down.

- ① Remove the bottom board.
- ② Completely open the upper cabinet.
- ③ Hold the cabinet (Reset) switch with tape.
- ④ Fit the turntable platter.
- ⑤ Raise the unit and check the circuits.

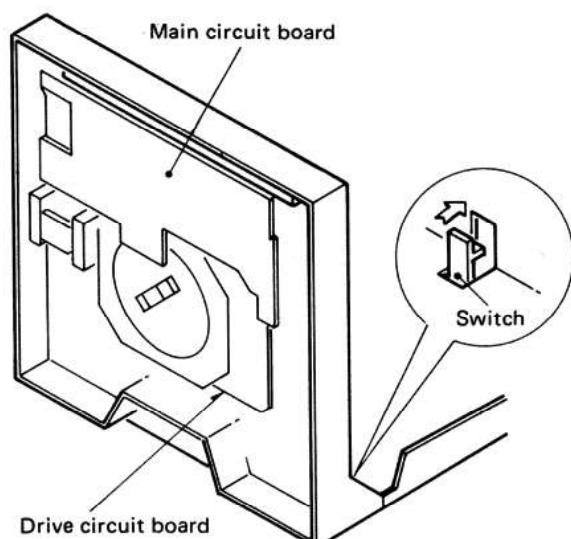


Fig. 22

3. How to turn over the unit (Fig. 23)

Note: This purpose is to check the voltage of each circuit during stop of the turntable.

- ① Remove the turntable platter and turn over the unit.
- ② Remove the bottom board.
- ③ Turn the power switch "on" and check the voltage.





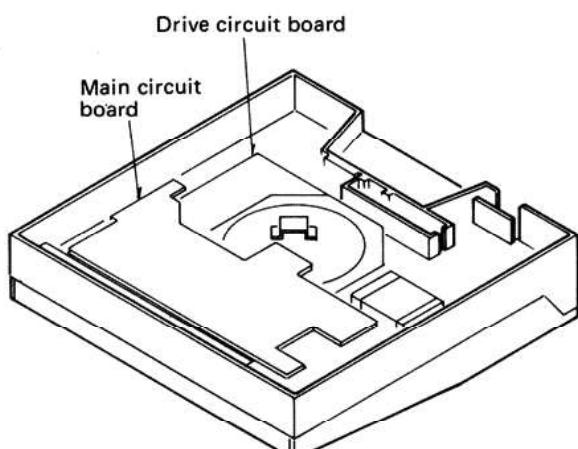


Fig. 23

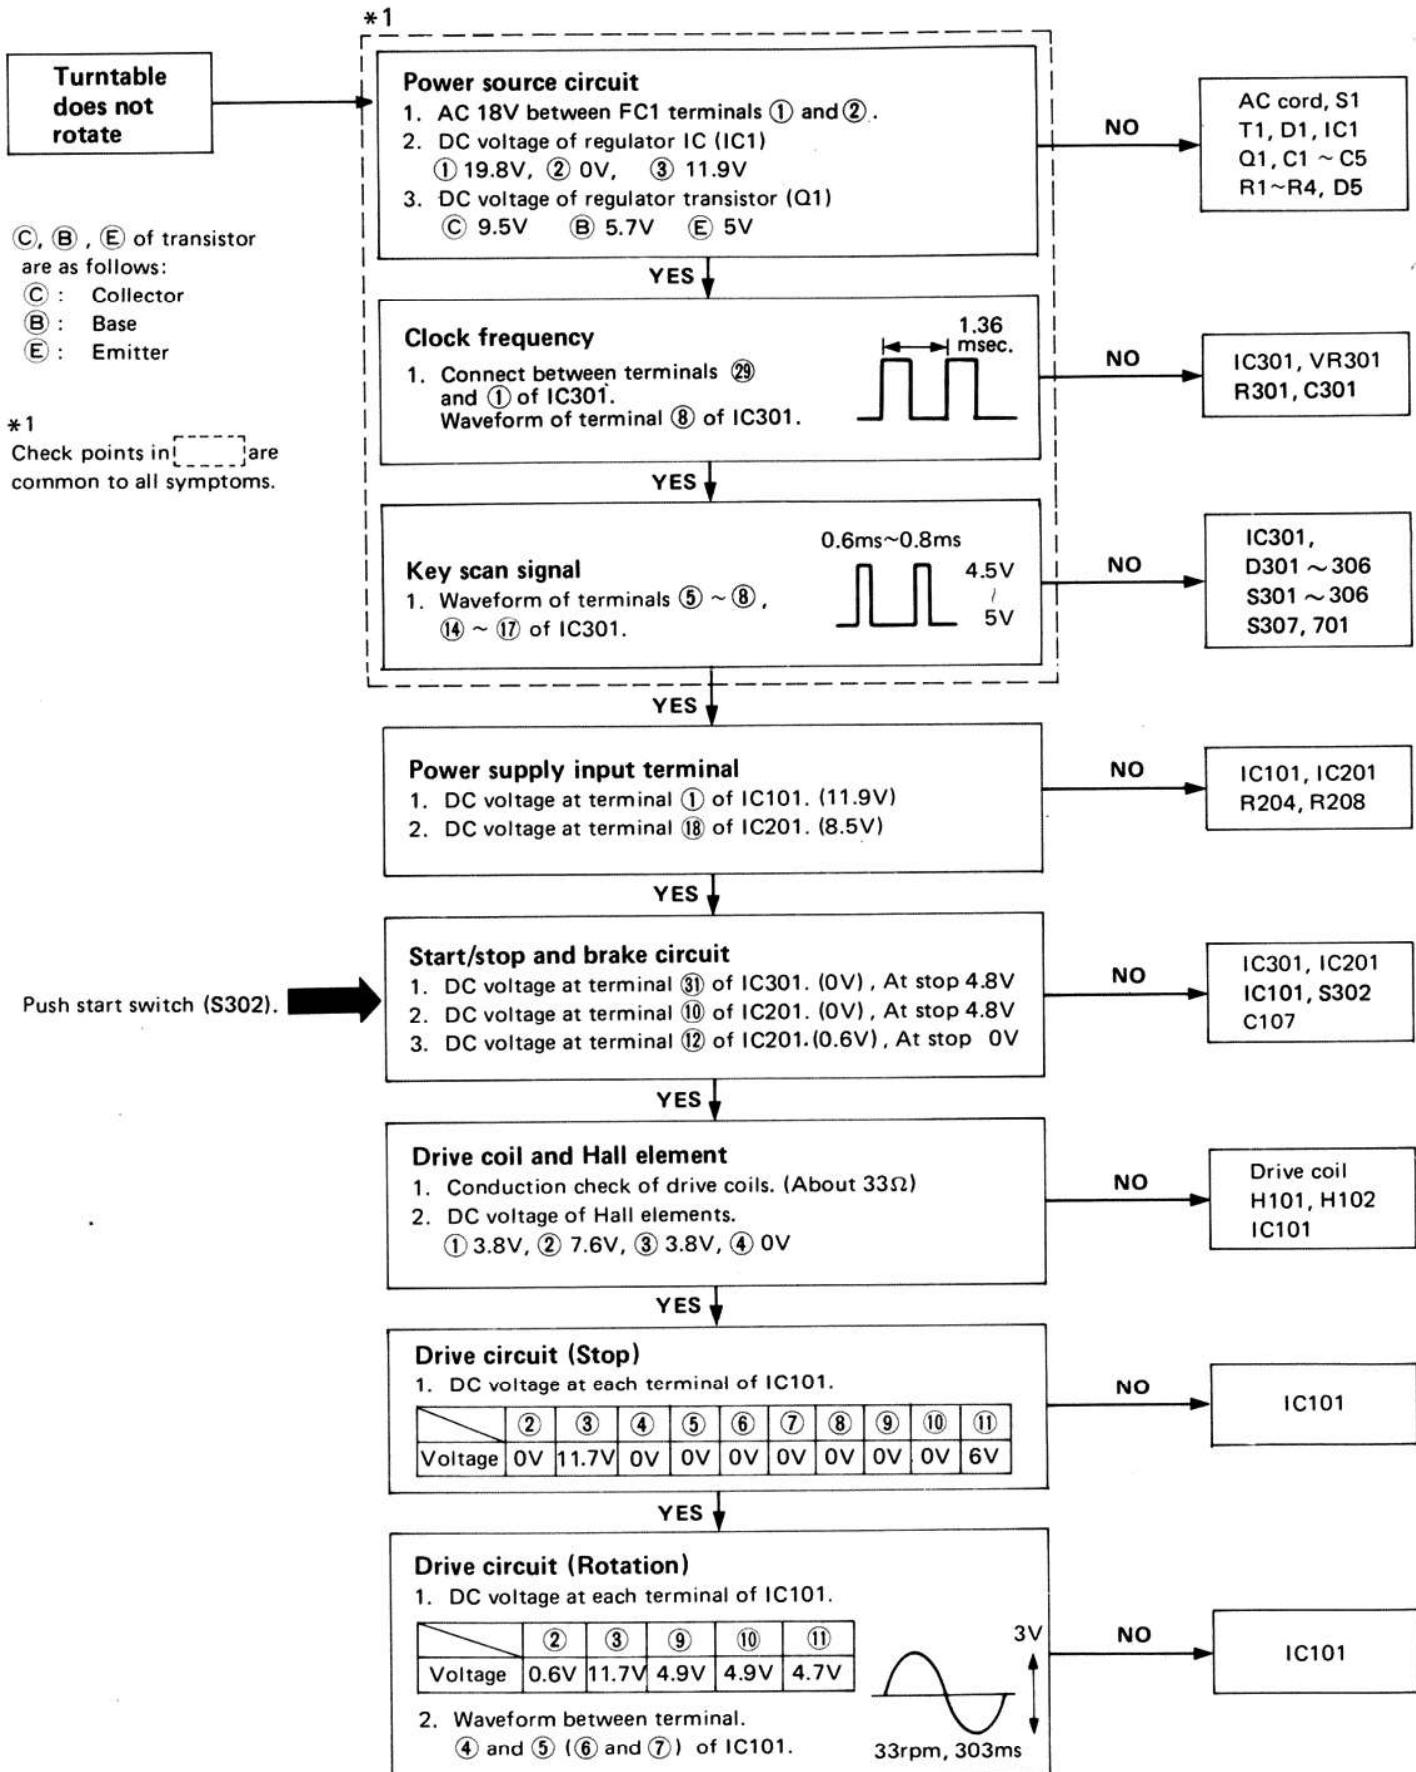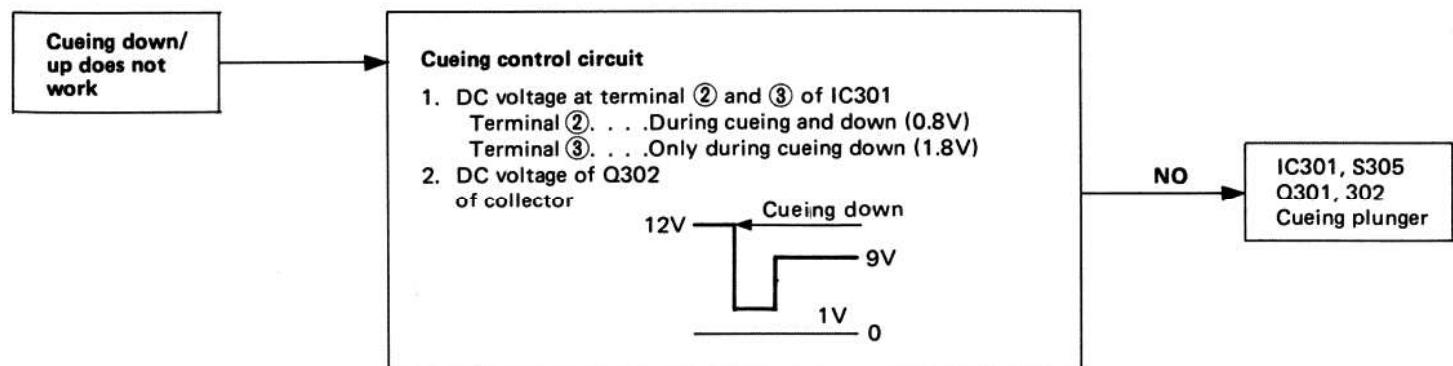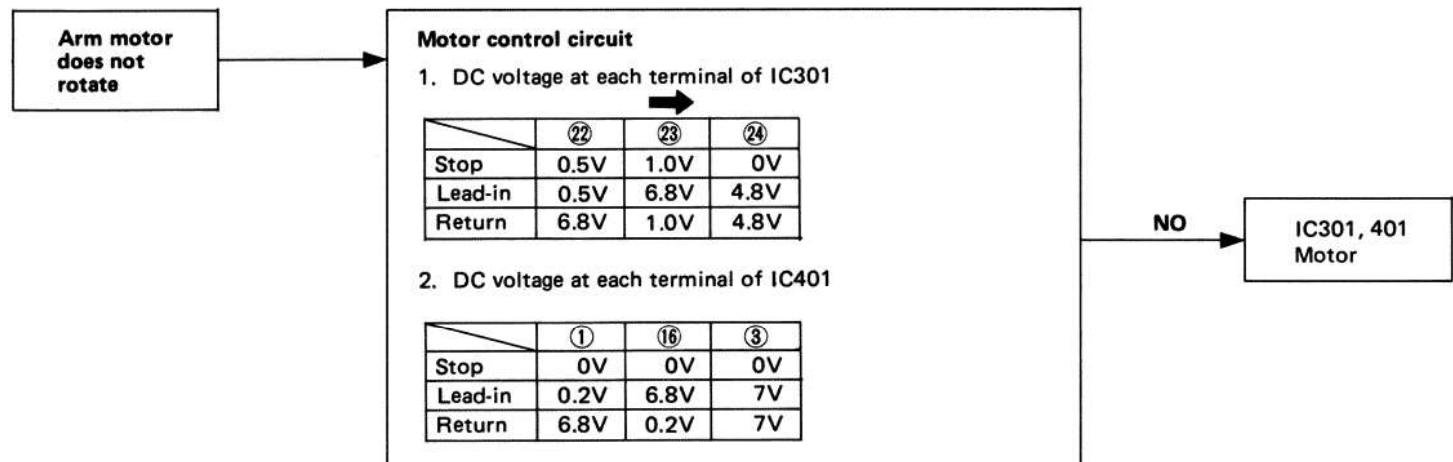

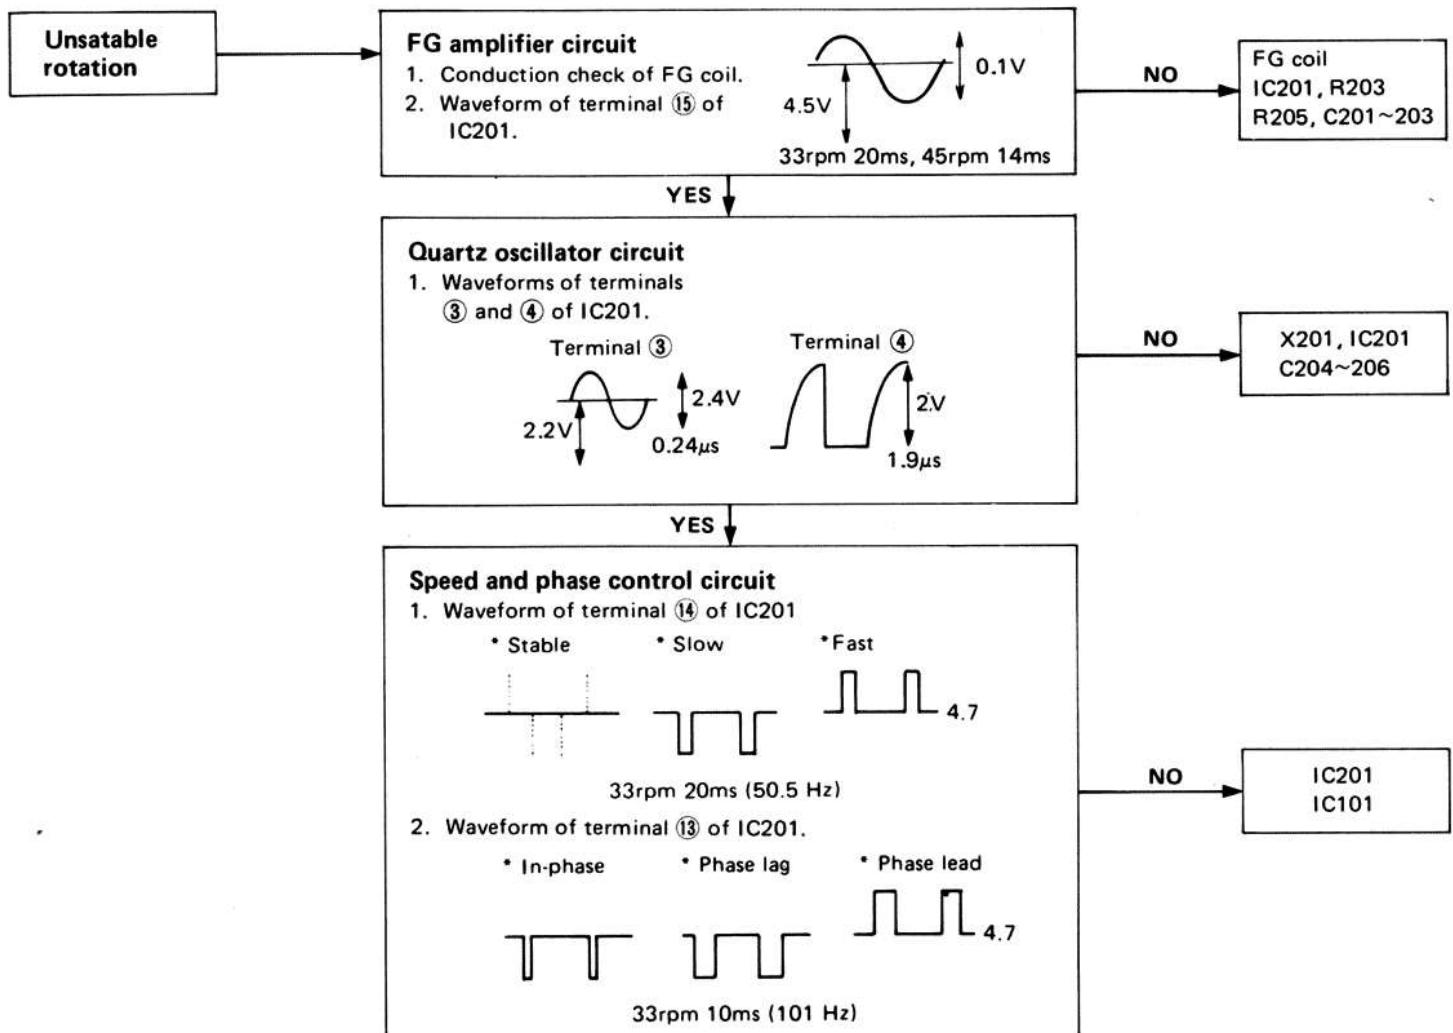

■ HOW TO SET THE TONEARM DRIVE ROPE

When setting the rope, follow the procedure given below.

1. Remove the dust cover and tonearm cover. (Refer to "How to remove the dust cover.")
2. Remove the roller cover. (Fig. 24)
3. Set the rope in the order of 1 ~ 5 (Fig. 24)
4. Fit the rope connector to the tonearm.
5. Set the roller cover and turn the worm gear by hand to see that the tonearm moves.

Note: The arm drive wheel is not fixed. So, take care not to let it come loose during servicing. (Stop it with C-ring to prevent its removal.)

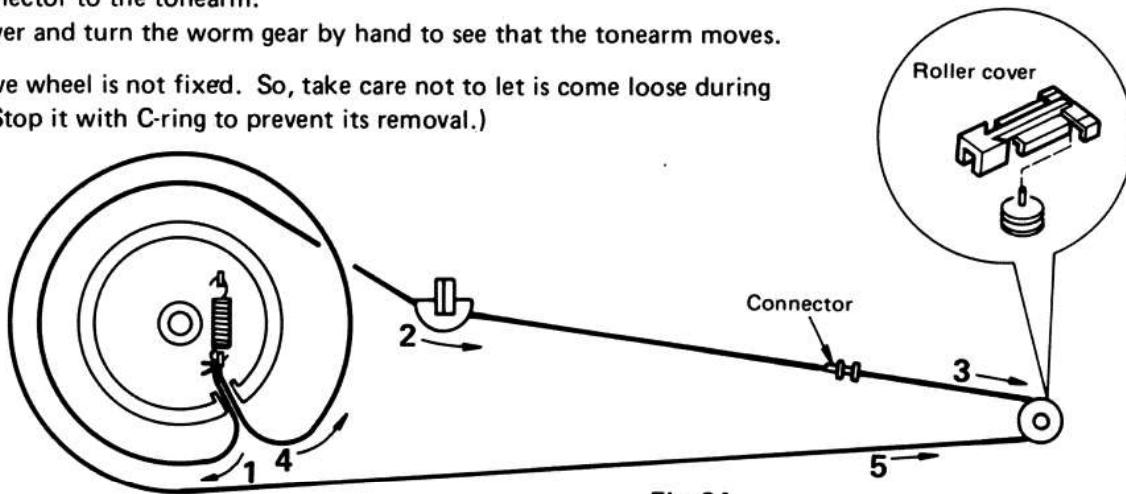


Fig. 24

■ RESISTORS AND CAPACITORS

Notes: 1. Part numbers are indicated on most mechanical parts.
Please use this part number for parts orders.

4. Unless otherwise specified.
All resistors are in OHMS (Ω) K = 1000 Ω , M = 1000k Ω
All capacitors are in MICROFARADS(μF), P = $10^{-6} \mu F$.

2. Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
3. This " \odot " mark is service standard parts and may differ from production parts.

Numbering System of Resistor

Example

ERD	25	F	J	101
Type	Wattage	Shape	Tolerance	Value
ERG	1	AN	J	2R2
Type	Wattage	Shape	Tolerance	Value

Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity
ECEA	50	M	R47	R
Type	Voltage	Peculiarity	Value	Special use

Resistor Type	Wattage	Tolerance
ERD : Carbon	25 : 1/4W	F : $\pm 1\%$
ERG : Metal Oxide	1 : 1W	J : $\pm 5\%$
ERX : Metal Film	2 : 2W	G : $\pm 2\%$

ERD2FCG□□□ → Fuse type carbon (1/4W)
ERD10TLJ□□□ → Chip type carbon (1/8W)
ERDS2TJ□□□ → Small type carbon (1/4W)
ECUV1H□□□ → Chip type ceramic capacitor

Capacitor Type	Voltage		Tolerance
	ECEA Type	Others	
ECEA : Electrolytic	1A : 10V	1H : 50V DC	J : $\pm 5\%$
ECKD : Ceramic	1C : 16V	2H : 500V DC	K : $\pm 10\%$
ECQM : Polyester	1E : 25V	1 : 100V	Z : $+80\%, -20\%$
ECCD : Ceramic	1V : 35V		P : $+100\%, -0\%$
ECKF : Ceramic	1H : 50V		M : $\pm 20\%$
ECEB : Electrolytic	1J : 63V		
	50 : 50V		

Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
RESISTORS			R315	ERDS2TJ101	100K	R347, 348	ERDS2TJ681	680	C203	ECPM1H683JZ	0.0068
R1	ERDS2TJ101	100	R316	ERDS2TJ394	390K	R349, 350	ERDS2TJ681	680	C204	ECUV1H121JCM	120P
R2	ERDS2TJ221	220	R317	ERDS2TJ333	33K	R351	ERDS2TJ103	10K	C205	ECUV1H330JCM	33P
R3	ERG2SJ330	33	R318	ERDS2TJ103	10K	R353A	ERDS2TJ333	33K	C206	ECUV1H121JCM	120P
R4	ERDS2TJ221	220	R319	ERDS2TJ223	22K	R353B	ERDS2TJ331	330	C207	(S) ECEA1AU470	47
R103	ERD10TLJ104U	100K	R320	ERDS2TJ392	3.9K	R401	ERDS2TJ563	56K	C208	(S) ECEA1AU470	47
R104	ERX1ANJ2R7	2.7	R321	ERDS2TJ272	2.7K	R402, 403	ERDS2TJ123	12K	C301	(S) ECCD1H101K	100P
R105	ERD10TLJ270U	27	R322	ERDS2TJ332	3.3K	R404, 405	ERDS2TJ474	470K	C302	ECSR1H104ZF	0.1
R201	ERD10TLJ273U	27K	R323, 324	ERDS2TJ103	10K	R406	ERDS2TJ104	100K	C303	(S) ECEA1CU330	33
R202	ERD10TLJ394U	390K	R325, 326	ERDS2TJ332	3.3K	R407	ERDS2TJ563	56K	C304	ECCR1H104ZF	0.1
R203	ERD10TLJ680U	68	R327	ERDS2TJ472	4.7K	R408	ERDS2TJ154	150K	C305	(S) ECEA50M1R	1
R204	ERD10TLJ151U	150	R328	ERDS2TJ471	470	R501	(S) ERD25FJ271	270	C306	ECQM1H104JZ	0.1
R205	ERD10TLJ223U	22K	R329, 330	ERDS2TJ103	10K	R502	(S) ERD25FJ391	390	C307	(S) ECEA1HU4R7	4.7
R207	ERD10TLJ102U	1K	R331, 332	ERDS2TJ272	2.7K	R503	(S) ERD25FJ561	560	C308	ECCR1H104ZF	0.1
R208	ERD10TLJ680U	68	R333	ERDS2TJ332	3.3K	CAPACITORS			C309, 310	(S) ECKD1H681KB	680P
R301	ERDS2TJ562	5.6K	R334	ERDS2TJ271	270	C1, 2, 3	△ ECQM1223KZ	0.022	C311	(S) ECCD1H101J	100P
R302, 303	ERDS2TJ102	1K	R335	ERDS2TJ821	820	C4	ECEB1EU222	2200	C312, 313	ECCR1H102F	0.1
R304, 305	ERDS2TJ331	330	R336	ERDS2TJ103	10K	C5	(S) ECEA1CU330	33	C401	(S) ECEA1HUR47	0.47
R306	ERDS2TJ333	33K	R337	ERDS2TJ472	4.7K	C101	(S) ECEA1CU330	33	C402	△ ECEA1CN100S	10
R307	ERDS2TJ681	680	R338	ERDS2TJ563	56K	C102	(S) ECEA50ZR22	0.22	C403, 404	ECQM1H473JZ	0.047
R309	ERDS2TJ152	1.5K	R339	ERDS2TJ103	10K	C103	ECQV05274JZ	0.27	C405	(S) ECEA1HU2R2	2.2
R310	ERDS2TJ272	2.7K	R340	ERDS2TJ333	33K	C105, 106 △ (S)	ECEA1CN470S	47	C601	ECPFB1B104ZM	0.1
R311	ERDS2TJ562	5.6K	R341	ERDS2TJ683	68K	C107	(S) ECEA50Z1	1	C701	ECEA1CU101	100
R312, 313	ERDS2TJ103	10K	R342	ERDS2TJ563	56K	C201	(S) ECEA1AU470	47			
R314	ERDS2TJ332	3.3K	R343, 344	ERDS2TJ681	680	C202	(S) ECEA50ZR22	0.22			
			R345, 346	ERDS2TJ681	680						

REPLACEMENT PARTS LIST

Notes: 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
 2. Important safety notice: Components identified by \triangle mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
 3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

- 4. The "(S)" mark is service standard parts and may differ from production parts.
- 5. The parenthesized numbers in the columns of description stand for the quantity per set.

Areas

- * [M] is available in U.S.A.
- * [MC] is available Canada.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
INTEGRATED CIRCUITS								
IC1	AN7812	Regulator,12V	S1 \triangle	SFDSC02N02	Power	SWITCHIES		
IC101	AN6638	Turntable Drive	S301~306	EVQQS405K	Stop,Start,Skip-Search,Cueing & Repeat	S307	SFDSC05N01	Reset
IC201	AN6683	Turntable Control	S308,309	SFDHSW0699	Size Selector & Speed Selector	S401	SFDHSW0699	Sensor Gain Selector
IC301	MN1420FPL	Micro Computer	S601	SFDSC02N03	Reset	PHOTO INTERRUPTERS		
IC302	AN6914	Computer	VARIABLE RESISTORS			PC501	ON1186	Offset Angle Sensor
IC401	AN6690	Arm Motor Drive & Blank Groove Detection	VR301	EVN61AA00B54	Clock Frequency Adj.,50KΩ(B)	PC502	SFPABJ0204A	Blank Groove Sensor
TRANSISTORS			VR302	EVJEE1AF20B54	Stylus Cue-down Position Adj.	PC601	ON1161	Tonearm Position Sensor
Q1	2SC1383	Regulator,5V	VR401	EVN61AA00B55	50KΩ(B); Sensor Gain Adj.,500KΩ(B)	POWER TRANSFORMER		
Q301	2SD636	LED Drive	VR402	EVN61AA00B25	Sensor Resolution Adj.,200KΩ(B)	T1(M) \triangle	SLT48DTL3A	Power Source
Q302	2SD892	Cueing Control	VR501	EVNM0AA00B14	Servo Gain Adj.,10KΩ(B)	T1(MC) \triangle	SLT48DT11C	Power Source
Q303,304	2SD636	Speed Selector & Synchro	RELAY			FUSE		
Q305~307	2SB641	Rec Drive	RL701	SFDYQ11N02	Muting Relay	F1(MC) only \triangle	XBA2F08NU100	250V,800mA
Q308	2SD636	Switching	RL701	SFDYG5A237P	Muting Relay	COMPONENT COMBINATION		
Q309,310	2SB641	Relay Drive	CRYSTAL			RX301	EXBP87681J	680Ω X7
Q311	2SD636	Shaping	X201	SVQSH41TR	4.193MHz			
Q312	2SB641	LED Drive	HALL ELEMENTS					
DIODES			H101,102	OH-002	Turntable Position Det.			
D1 \triangle	SVDS1RBA20F	Rectifier						
D5	MA4056	Zener,5.6V						
D301~306	MA165	Switching						
D307	SVDZJ02N02	Repeat Indicator						
D308	MA4075	Zener,7.5V						
D309	SVDZJ02N03	Cue-down Indicator						
D310	SVDZJ02N02	Cue-Up Indicator						
D311~317	MA165	Switching						
D311B	LN513RA	Music Select Indicator						
D401	MA4068	Zener,6.8V						
D501 (S)	MA162A	Switching						
D502	SVDEBR3432S	Tonearm Position Indicator						
D701 (S)	MA162A	Switching						

Caution:



Two types of muting relay (RL701) are used. When placing an order, confirm the caution mentioned in the explosion view on page 17.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
CABINET AND CHASSIS PARTS								
1	SFADJ02M01E	Dust Cover Ass'y (1)	61	SFPBK0Q601	Indicator Plate (1)	A1[M]	SFNUJ02M01	Instruction Book (1)
1-1	SFKBJ02M01	Badge,Dust Cover (1)	62	SFPC0Q601	Indicator Cover (1)	A1[MC]	SFNUJ02C01E	Instruction Book (1)
1-2	SFGZJ02N01	Cushion Rubber (1)	63	SFPGMQ601	Rubber (1)	A2	SFDHC05N01	Phono Output Cord (1)
2	SFUMQ06N08	Dust Cover (2)	64	SFDZC05N01E	Solenoid Ass'y (1)	A3	SFDLJ02N01	Ground Wire (1)
3	SFUMD04N07	Lutch,Dust Cover (2)	65	SFPSP00302	Spring,Adjustment (1)	A4	SFDAC05M01	AC Cord (1)
4	SFGZQ06N01	Lutch,Dust Cover (2)	66	SFPKD0301R	Base,Tonearm (1)			
5	SFTGQ06N01	Rubber,Lutch (2)	67	SFPAMJ0201A	Tonearm Ass'y (1)			
6	SFWEC06N01	Turntable Mat (1)	68	SFPGML1101	Cushion Rubber (2)			
7	SFQAC06N01	Adaptor,45r.p.m (1)	69	SFPABJ0205R	Cover,Sesor Case (1)			
8	SFTEQ05N01	Spring,45r.p.m (1)	70	SFPSCS00502	Light Concentrator (1)			
9	SFTMC07-01E	Adaptor (1)	71	SFPABJ0204A	Blank Groove Sensor (1)			
10	SFAUJ02N01	Turntable Platter (1)			A'ssy (PC502) (1)			
11	SFQCC05N01	Rotate Magnet (1)						
12	SFGAC05N02	Bottom Board (1)						
13	SFUMJ02N02	Spring,Insulator (4)						
14	SFUMJ02N03	Insulator (4)	N1	XTV3+8BFN	Screw,⊕3X8 (12)			
15	SFKKJ02N01	Rod,Power Switch (1)	N2	XTV3+6BFZ	Screw,⊕3X6 (6)			
16	SFUMJ02N01	Filter,Front Panel (1)	N3	XSN3+5S	Screw,⊕3X5 (3)			
17	SFKTC06N04	Front Panel (1)	N4	XTWS3+14QFYR	Screw,⊕3X14 (4)			
18	SFACJ02N01	Button,Power Switch (1)	N5	XTN3+6B	Screw,⊕3X6 (2)			
19	SFKTJ02N01	Cabinet (1)	N6	XTWS3+14TFZ	Screw,⊕3X14 (2)			
20	SFKTJ02N02	Button,Operation (1)	N7	XTN16+10G	Screw,⊕1.6X10 (1)			
21	SFDJC01N01	Knob>Selectors (3)	N9	XTV3+20J	Screw,⊕3X20 (1)			
22	SFGCQ06N02	Jack,Synchro Rec (1)	N10	SFXGQ06N01	Screw (1)			
23	SFDJHSC0491	Cushion Rubber (1)	N11	XSN3+30S	Screw,⊕3X30 (1)			
24	SFATQ06N01E	Power Transformer (2)	N12	XWE3D10	Washer,Φ3 (1)			
25(M)	SFNNJ02M01	AC Socket (1)	N13	XWE3A8BW	Washer,Φ3 (2)			
25(MC)	SFNNJ02C01	Hinge (2)	N14	CSTW3	Washer (2)			
26	SFGKQ06N01	Name Plate (1)	N15	XWC3B	Washer,Φ3 (2)			
27	SFUML11R03	Drive Motor (1)	N17	XNC3HS	Nut,Φ3 (1)			
28	SFUZC05N02E	Wheel,Tonearm Drive (1)	N18	SFXWC06N02	Washer (1)			
29	SFUMV05N23	Rubber Cap (1)	N19	SFPEVQ601	Screw,Cartridge (1)			
30	SFUMC05N22	Rope Ass'y, (1)	N20	XTV3+6BFN	Screw,⊕3X6 (6)			
31	SFGBC10-01	Tonearm Drive (1)	N21	XTN23+6JFZ	Screw,⊕2.3X6 (1)			
32	SFMHJ02N01E	Drive Motor (1)	N22	SFPTN00301	Screw,Offset Adj. (1)			
33	SFUMQ06N06A	Tonearm Drive (1)	N23	SFXN623-1	Nut (1)			
34	SFUZC02N01	Motor Ass'y, (1)	N24	XSN3+12S	Screw,⊕3X12 (1)			
35	SFUMC02N05	Holder,Rest Switch (1)	N25	XWA3B	Washer,Φ3 (1)			
36	SFQHQ34N22	Lever,Rest Switch (1)	N26	XTS26+6JFZ	Screw,⊕2.6X6 (1)			
37	SFUMC02N06	Spring,Rest (1)	N27	XYN2+C4FZ	Screw,⊕2X4 (1)			
38	SFUMQ06N09	Switch Lever (1)	N28	XTN2+8B	Screw,⊕2X8 (1)			
39	SFUPBL3N11E	Base,Tonearm (1)						
40	SFUMC02N10	Drive Motor (1)						
41	SFQA913-01	Rope Guide (1)						
42	SFUMQ06N07	Spring,Adjustment Screw (1)						
43	SFGCQ06N01	Clamper,Guide Rail (1)						
44	SFXJQ06N01	Cushion Rubber, (1)						
45	SFGCC05N05	Guide Rail (1)						
46	SFUMC02N12	Guide Rail,Tonearm (1)						
47	SFGCQ06N04	Cushion Rubber, (1)						
48	SFGZBL3N02	Dust Cover (2)						
49	SFUMC05N15	Spacer (1)						
50	SFOPC05N01	Holder,Reset Switch (1)						
51	SFACJ02N013	Spring,Reset Switch (1)						
52	SFKTQ06N02	Cover,Lead Wires (1)						
53	SFDJJ02N04E	Knob,Cueing (1)						
54	SFUKQ06N02E	Down Position Control (1)						
55	SFMQQ34N01	Jack,Phono Output (1)						
56	SFMCZ06N01R	Base Ass'y,Tonearm (1)						
57	SFACJ02N012	Cover,Stator Coil (1)						
		Cover, Stator Frame Ass'y (1)						
		Cover, Cabinet (1)						

● Tonearm Part

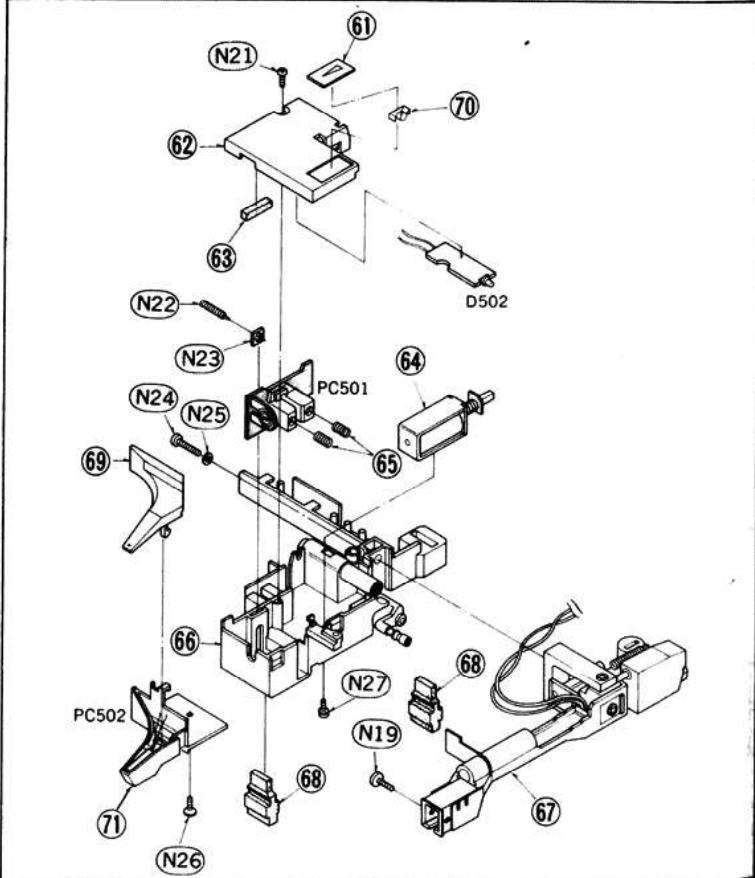


■ EXPLODED VIEW

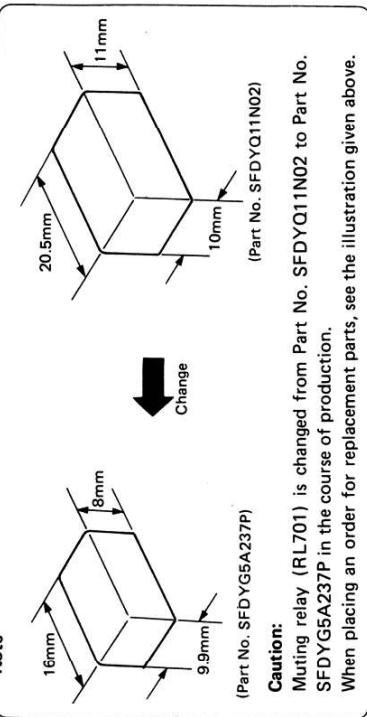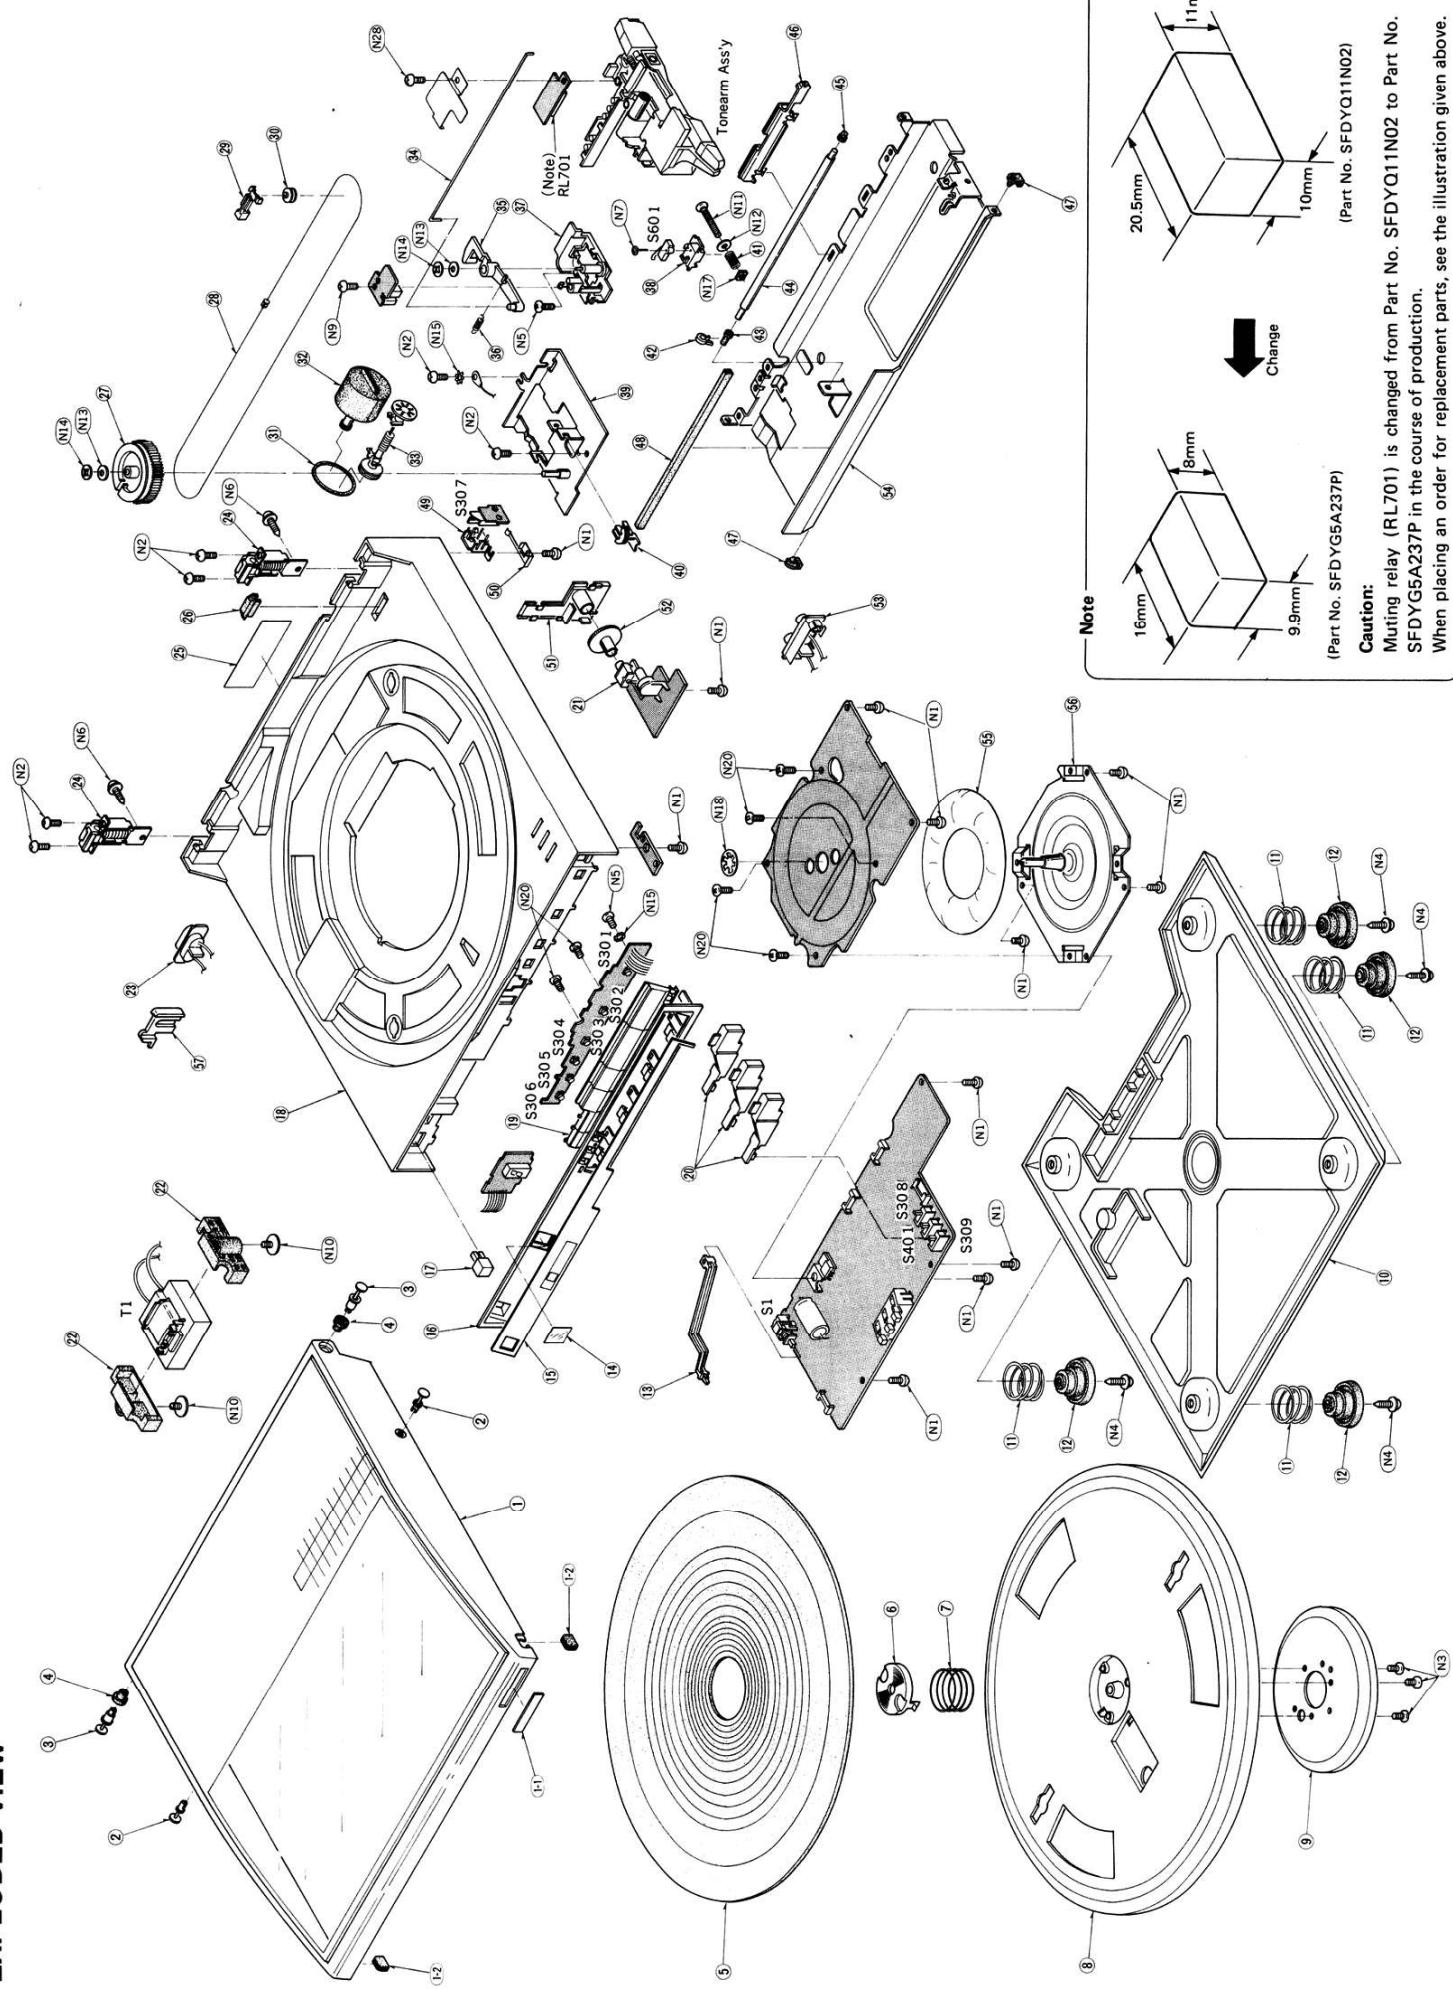


Caution:
Muting relay (RL701) is changed from Part No. SFDYQ11N02 to Part No. SFDYG5A237P in the course of production.
When placing an order for replacement parts, see the illustration given above.


■ CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

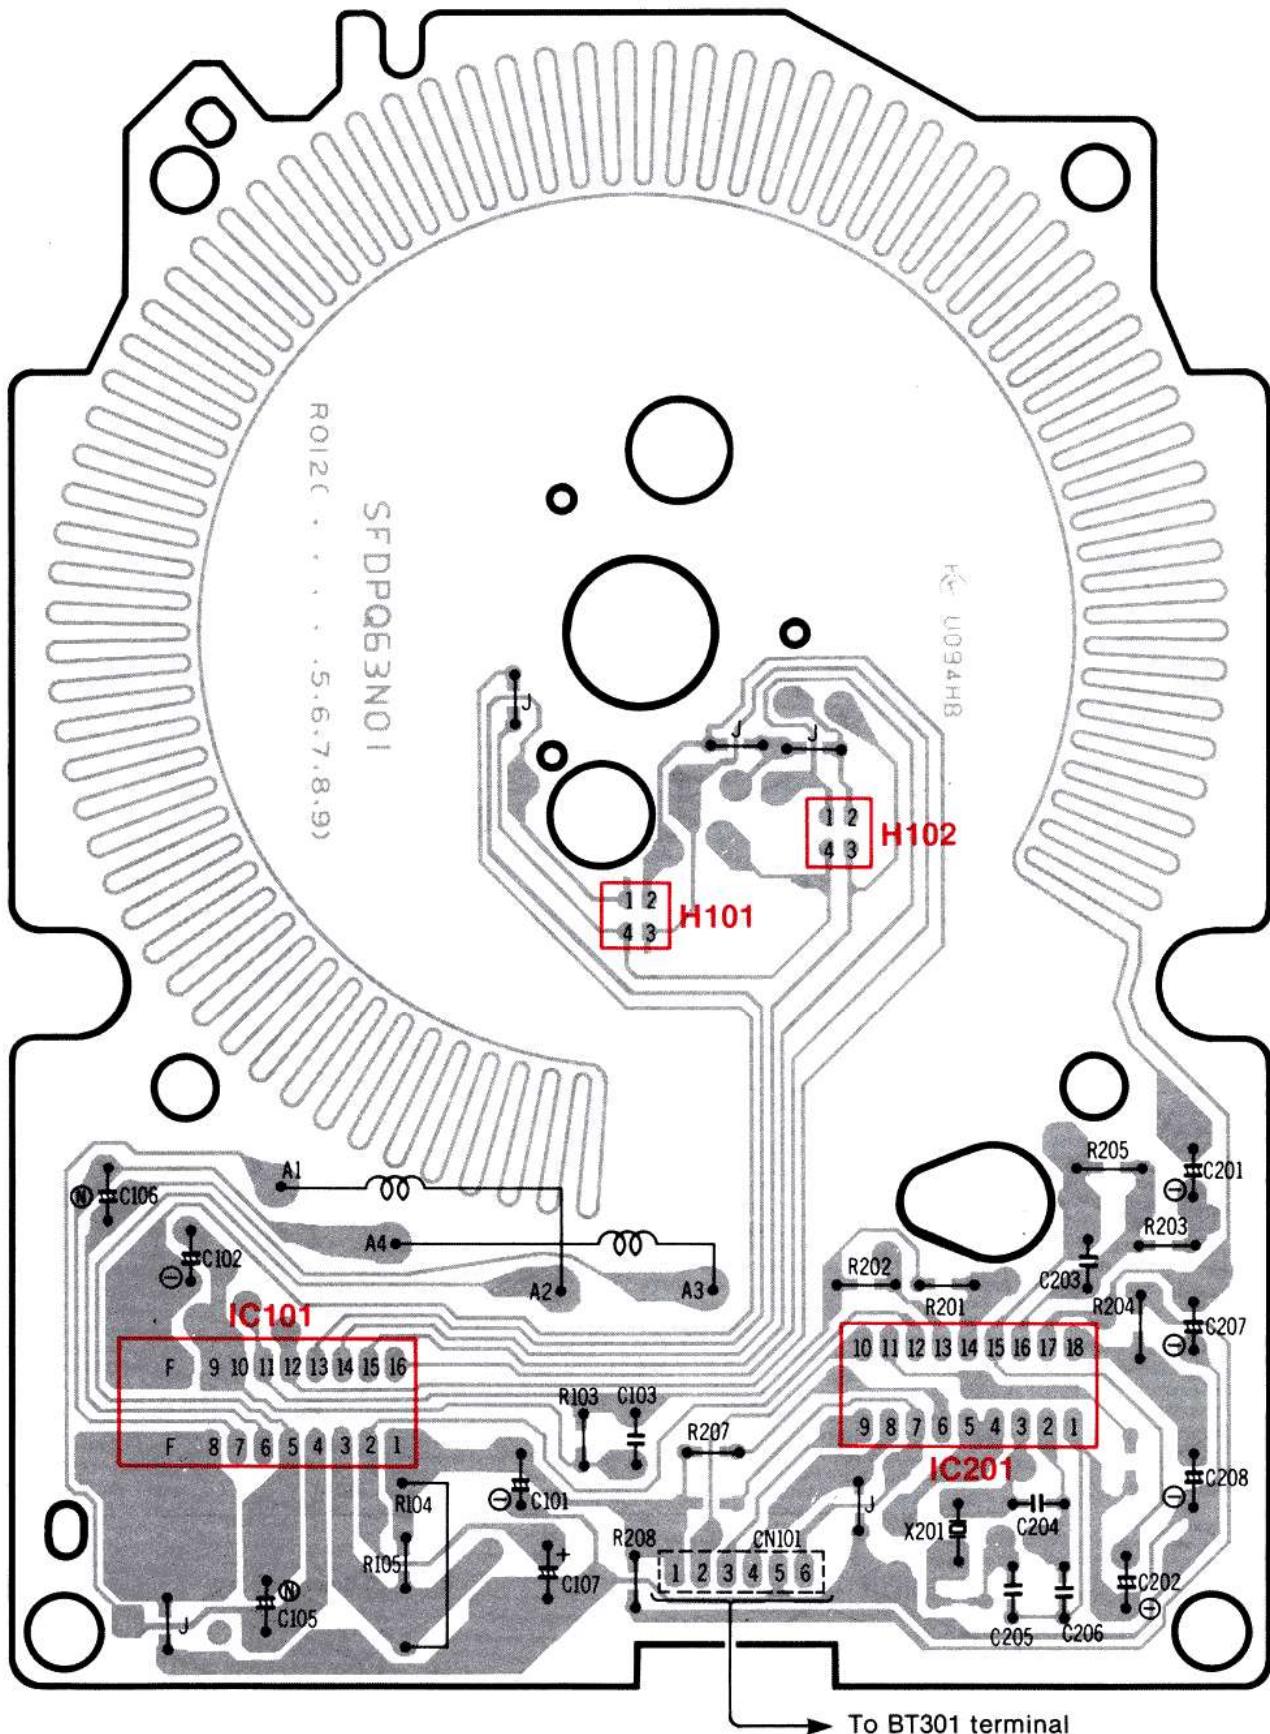

- Terminal guide of transistors, and IC's

NO.1	AN6914 8 pin MN1420 40 pin AN6683 18 pin	16 pin	2SB641, 2SD636	2SD8921, 2SC1383	18 pin
------	--	--------	----------------	------------------	--------

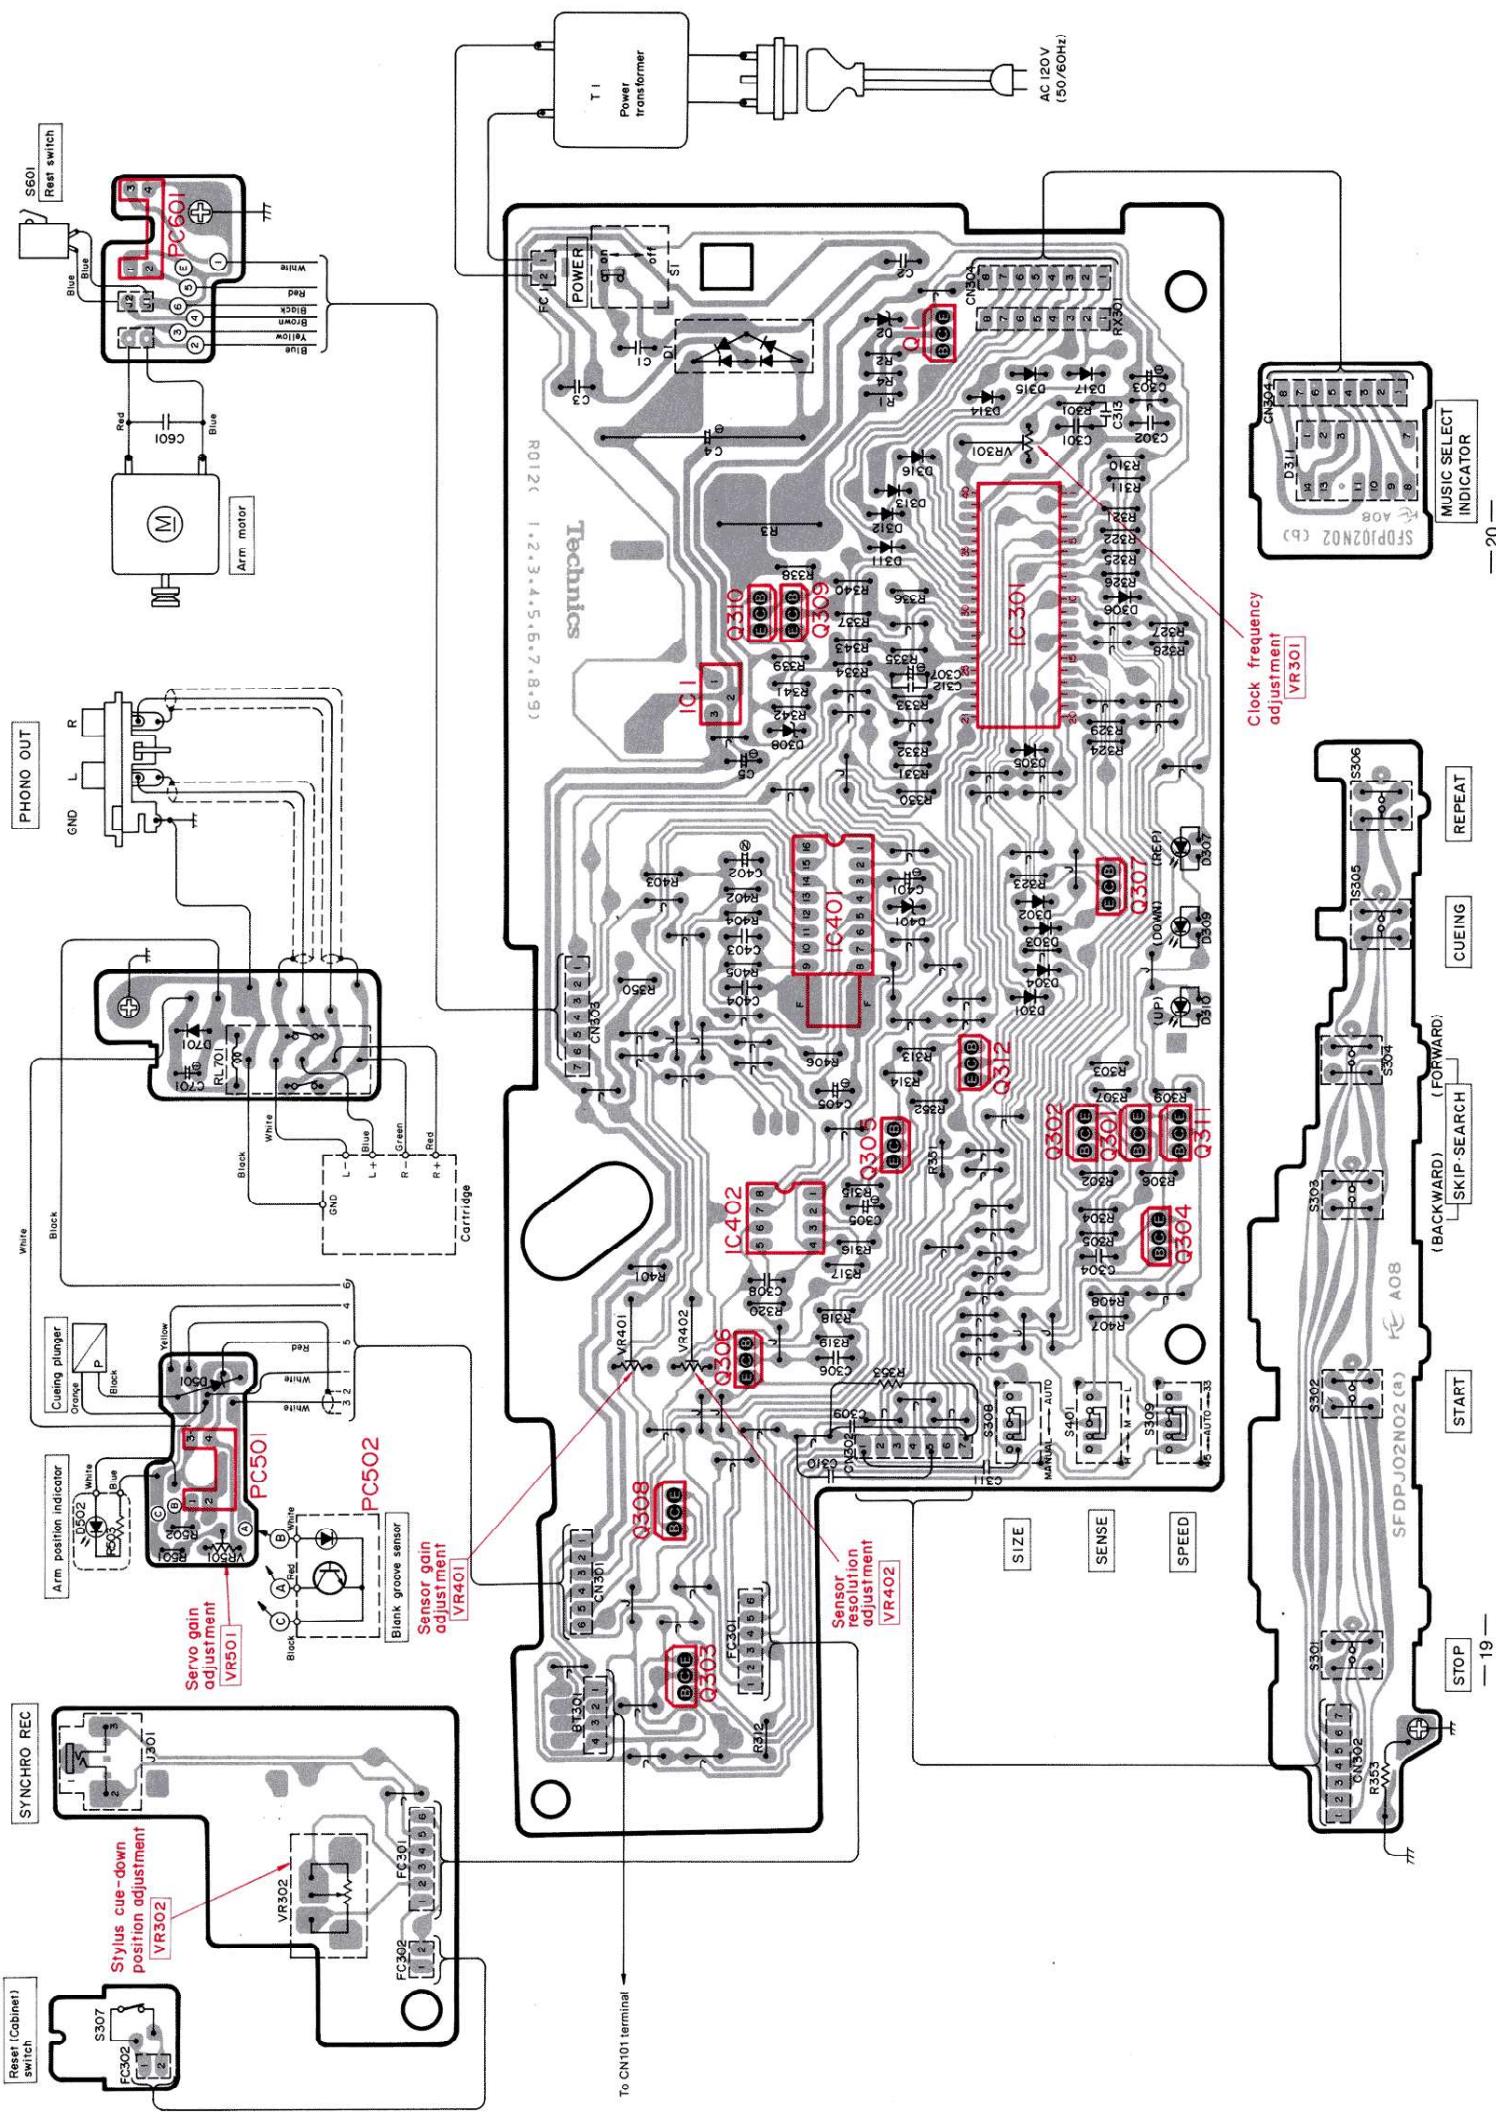

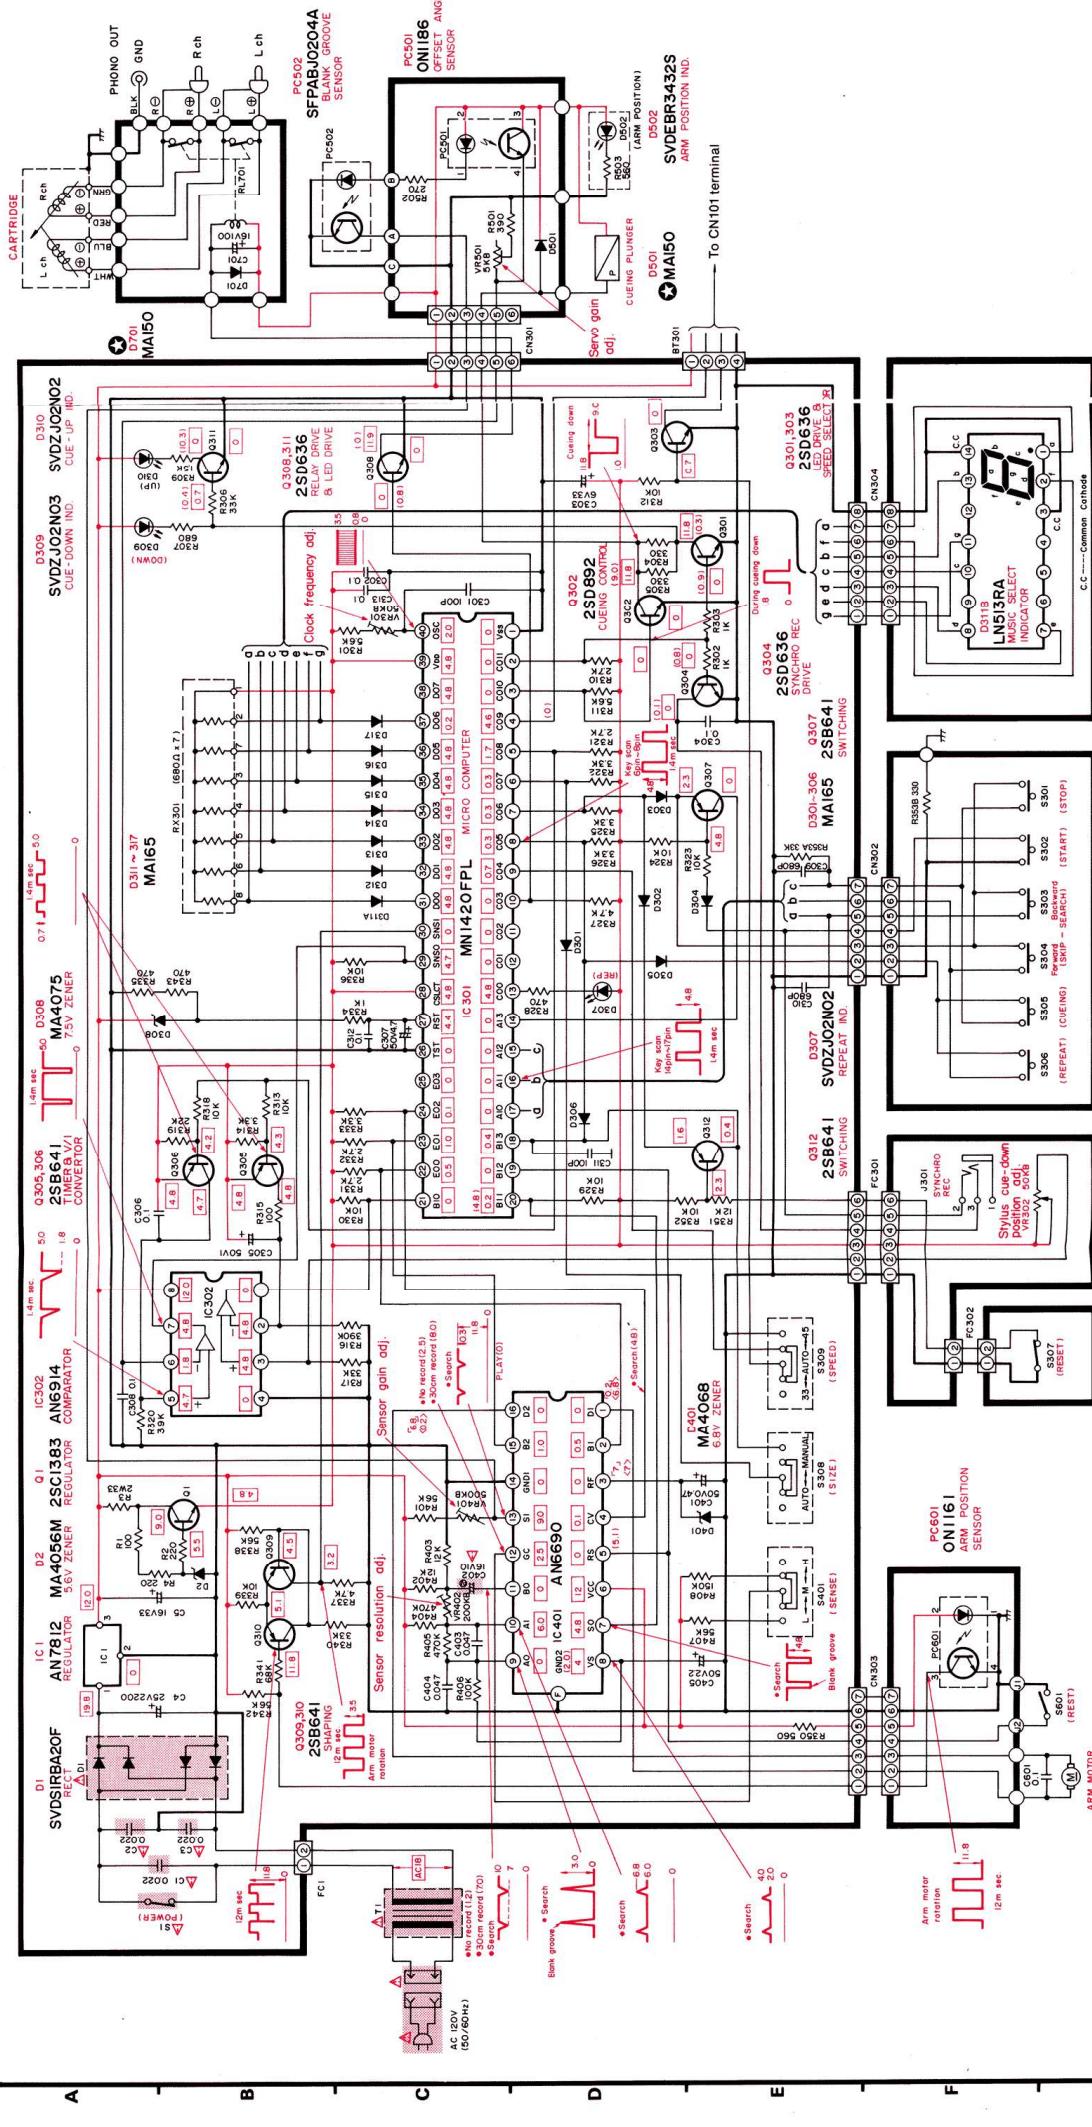12
11
10
9
8
7
6
5
4
3
2
1

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with development of new technology.)

IMPORTANT SAFETY NOTICE

The shaded areas on this schematic diagram incorporate special features important for protection from fire and electrical shock hazards. When servicing it is essential that only manufacturer's specified parts be used for the critical components in the shaded areas of the schematic.

• Product for MC only


FUSE REPLACEMENT

Symbol located near the fuse indicates fast operating type. For continued protection against fire hazard, replace with same type fuse. Refer to the symbol for fuse rating.

FUSIBLE REPLACEMENT

Le symbole qui se trouve près du fusible singifie un fusible à action rapide. Pour une protection continue contre les risques d'incendie, n'utiliser que des fusibles du même type. Se reporter au symbole pour la valeur des fusibles.

• Power source circuit Product for [MC] only.

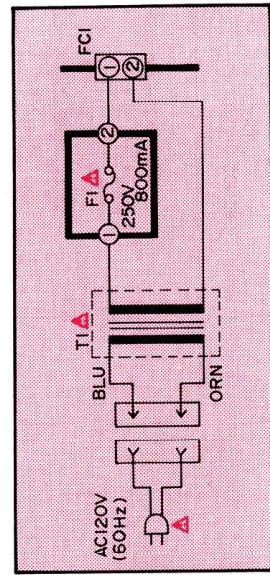


Notes:

- 1. S1 : Power switch in "on" position.
- 2. S301 : Stop switch.
- 3. S302 : Start switch.
- 4. S303 : Backward skip/search switch.
- 5. S304 : Forward skip/search switch.
- 6. S305 : Cueing control switch.
- 7. S306 : Repeat switch.
- 8. S307 : Cabinet (Reset) switch in "on" position.
(Upper cabinet is closed)
- 9. S308 : Record size selector switch in "auto" position.
- 10. S309 : Speed selector switch in "auto" position.
- 11. S401 : Sensitivity selector switch in "W" position.
- 12. S601 : Rest switch in "off" position.
(Presently tonearm is on test.)
- 13. The voltage value and waveform are the standard values of this measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis. Therefore, the voltage value and waveform may include some error due to the internal impedance of the tester or the measuring unit.
- * \square is the voltage when turntable is in rotation.
- * \square is the voltage when tonearm is in lead-in mode.
- * \square is the voltage when tonearm is in return mode.
- * \square is the voltage at 45 rpm.
- 14. Positive voltage lines.
- 15. Important safety notice:
Components identified by Δ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

* The part No. of diodes mentioned in the schematic diagram stand for production part No. Regarding the part No. with \odot mark the production part No. are different from the replacement: part No. Therefore, when placing an order for replacement part, please use the part No. in the replacement parts list.


TURNTABLE DRIVE CIRCUIT

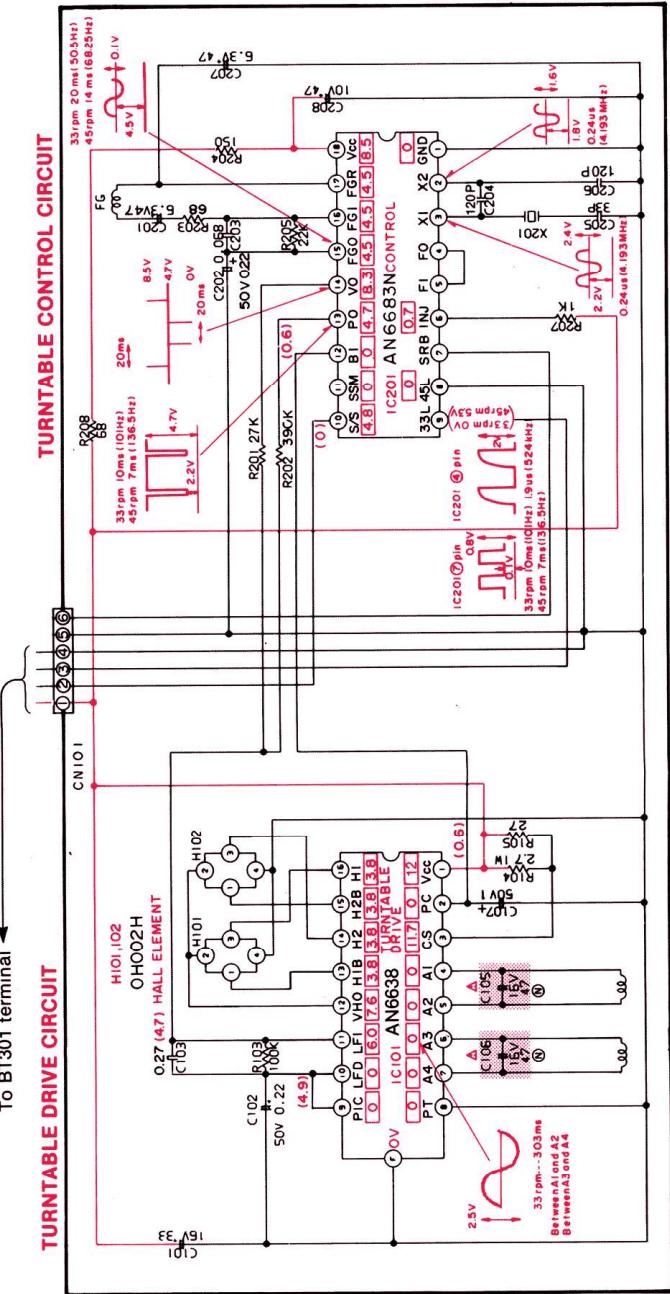

TURNTABLE CONTROL CIRCUIT


To BT301 terminal

BLOCK DIAGRAM

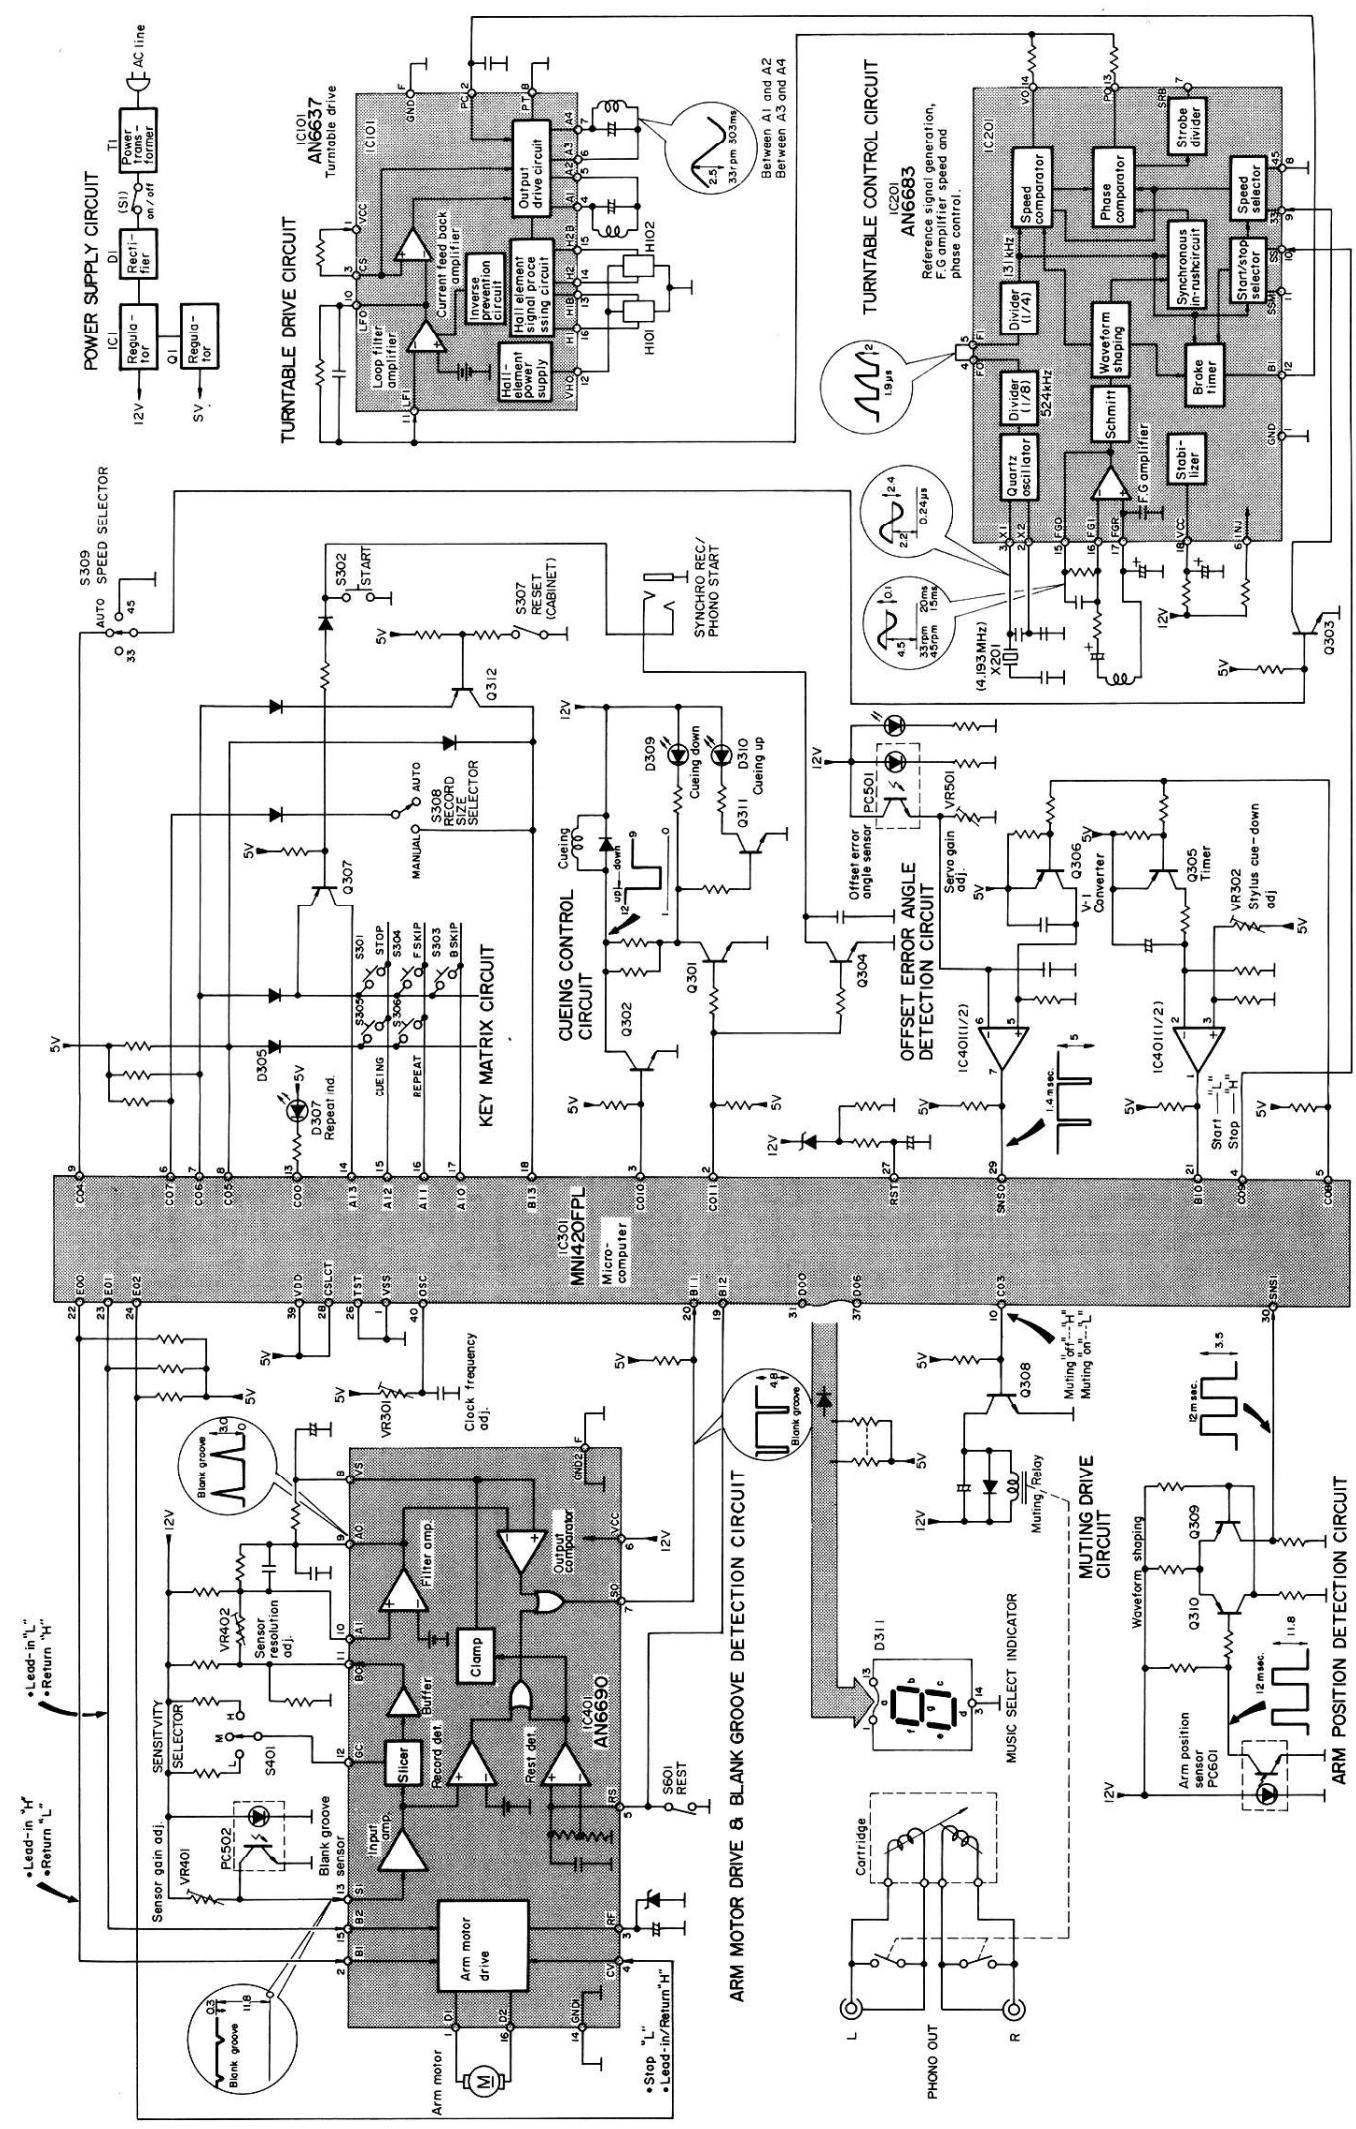

- Music selector indicator (D311) and microcomputer (IC301) terminal voltage

D311 (LN513RA)

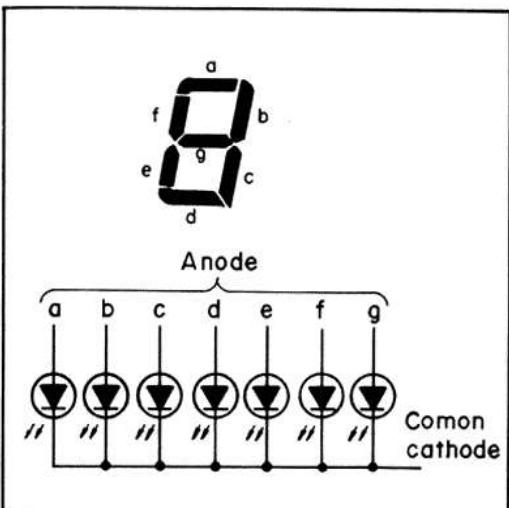


FUNCTION OF TERMINAL (MN1420FPL)


Pin No.	Symbol	Description
1	VSS	Ground terminal
2	CO11	Cueing control terminal ("H" during cueing and cueing down)
3	CO10	Cueing control terminal ("H" only cueing down)
4	CO9	Turntable start/stop select terminal (Start at "L", stop at "H")
5	CO8	
6	CO7	
7	CO6	
8	CO5	
9	CO4	Turntable speed select output terminal (45 rpm "L", 33 rpm "H")
10	CO3	Muting control terminal (Muting on "L", Muting off "H")
11	CO2	
12	CO1	
13	CO0	Repeat indicator output terminal (Indicator ON at "L")
14	AI3	
15	AI2	
16	AI1	
17	AI0	
18	BI3	Record size selector input terminal (Read in through key scan with C-port)
19	BI2	Rest position detection input terminal ("L" when tonearm is on rest)
20	BI1	Blank detection and record detection terminals (Blank pulse is active at "L"; 30 cm record is present with "H" at rest position; 30 cm record is not present with "L". When it is at "L" outside the rest position, 17 cm is present; and no record is present at "H".)
21	BI0	Cueing time read input terminal
22	EO0	
23	EO1	
24	EO2	
25	EO3	Not used in this unit
26	TST	Test terminal
27	RST	Reset terminal (Microm is reset at "L")
28	CSLCT	Select terminal
29	SNS0	Offset angle detection signal input terminal
30	SNS1	Arm position detection signal input terminal
31	D00	
32	D01	
33	D02	
34	D03	
35	D04	
36	D05	
37	D06	
38	D07	Segment display output terminal (Lights up at "H")
39	VDD	Not used in this unit
40	OSC	Power supply terminal
		Oscillation circuit (Clock frequency is adjusted to 1.36ms)

■ PACKING


1. Open the upper cabinet and fit the spacer in place.

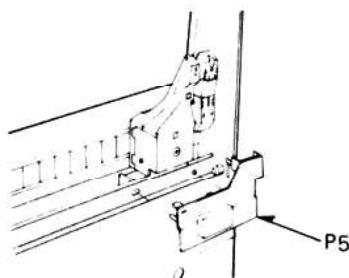


2. Fit the turntable platter clamper and dust cover spacer in place.

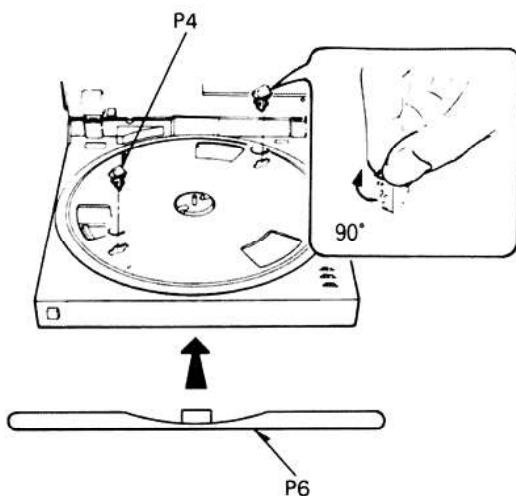

3. Put the into polyethylene bag, and make the package as shown below.

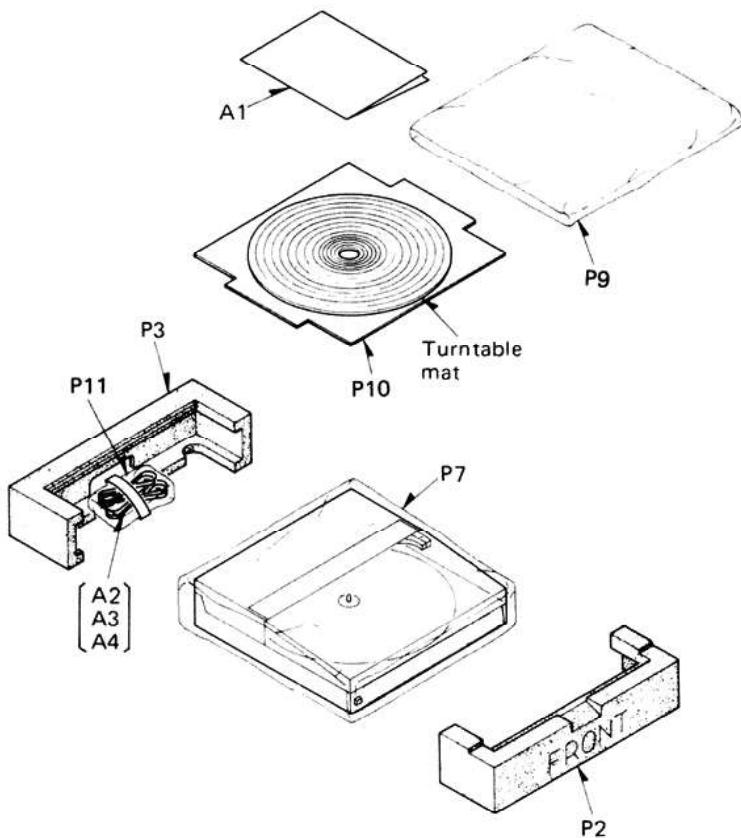

4. Place the unit (with cushions attached) as illustrated.
5. Fold the flaps according to the line marks.
6. Seal the top with adhesive tape.
- *Use gum tape or adhesive cloth tape of 50mm wide at least.
7. For the edges, first fold the flap "a" and then flap "b", and staple. Remember to staple only flap "b". (Use 15 or 16mm staple)

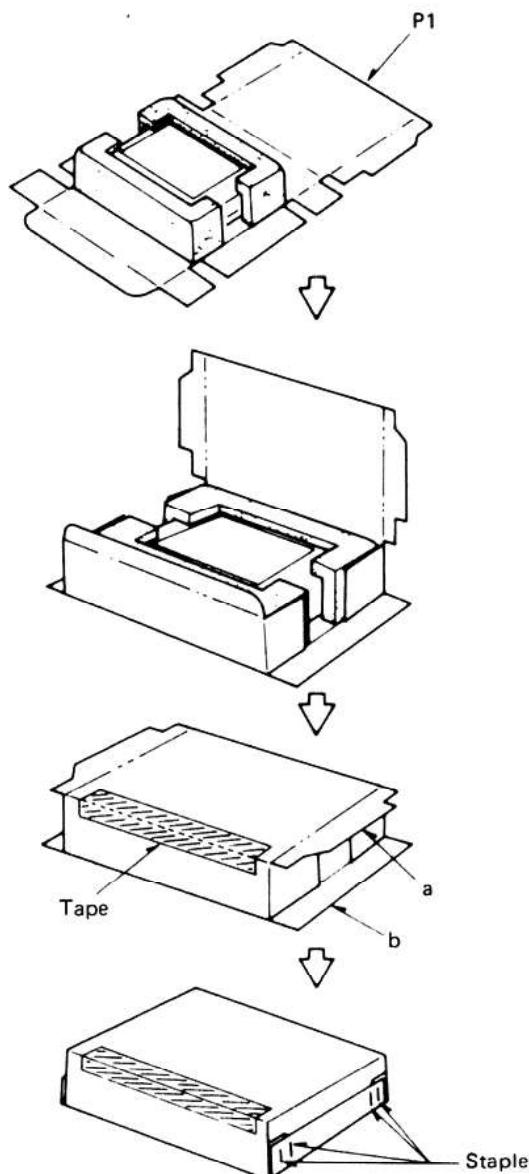

*Stapling positions are shown below.

