


# aiwa



## NSX-AV320

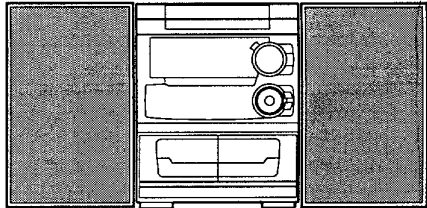

COMPACT DISC STEREO  
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 6ZM-3 YPR1N
- BASIC CD MECHANISM : 4ZG-1 Z4DSHNC

- TYPE : EZ, K

### REVISION PUBLISHING

SYSTEM	CD-CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-AV320	CX-NAV320	SX-NAV304 SX-R275 SX-C605	RC-8AS04

- This Service Manual is the "Revision Publishing" and replaces Simple Manual NSX-AV320. (S/M Code No. 09-985-280-2FE)
- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-30T.

## TABLE OF CONTENTS

SPECIFICATIONS .....	3
PROTECTION OF EYES FROM LASER BEAM DURING SERVICING .....	4
PRECAUTION TO REPLACE OPTICAL BLOCK .....	4
NOTE ON BEFORE REPAIR.....	5, 6
ELECTRICAL MAIN PARTS LIST .....	7 ~ 10
TRANSISTOR ILLUSTRATION .....	11
BLOCK DIAGRAM - 1 (TUNER) .....	12
BLOCK DIAGRAM - 2 (MAIN / FRONT / PRO).....	13 ~ 15
SCHEMATIC DIAGRAM - 1 (MAIN 1 / 2).....	16 ~ 18
WIRING - 1 (MAIN) .....	19, 20
WIRING - 2 (FRONT) .....	21, 22
SCHEMATIC DIAGRAM - 2 (FRONT) .....	23 ~ 25
IC BLOCK DIAGRAM - 1.....	26
SCHEMATIC DIAGRAM - 3 (PRO) .....	27 ~ 28
WIRING - 3 (PRO).....	29, 30.
WIRING - 4 (AC) .....	31
WIRING - 5 (DECK) .....	32
SCHEMATIC DIAGRAM - 4 (MAIN 2 / 2).....	33, 34
IC BLOCK DIAGRAM - 2.....	35, 37
FL GRID ASSIGNMENT AND ANODE CONNECTION.....	38
IC DESCRIPTION .....	39 ~ 41
ADJUSTMENT <TUNER / DECK> .....	42, 43
PRACTICAL SERVICE FIGURE.....	44
MECHANICAL EXPLODED VIEW 1 / 1 .....	45, 46
MECHANICAL PARTS LIST 1 / 1 .....	47
TAPE MECHANISM EXPLODED VIEW 1 / 1 .....	48, 49
TAPE MECHANISM PARTS LIST 1 / 1 .....	50
SPRING APPLICATION POSITION .....	51
SPEAKER DISASSEMBLY INSTRUCTIONS.....	52
SPEAKER PARTS LIST.....	53
ACCESSORIES / PACKAGE LIST .....	53
REFERENCE NAME LIST .....	54

# SPECIFICATIONS

<b>&lt;FM Tuner section&gt;</b>		<b>&lt;Cassette deck section&gt;</b>	
<b>Tuning range</b>	87.5 MHz to 108 MHz	<b>Track format</b>	4 tracks, 2 channels stereo
<b>Usable sensitivity (IHF)</b>	13.2 dBf	<b>Frequency response</b>	50 Hz - 15000 Hz
<b>Antenna terminals</b>	75 ohms (unbalanced)	<b>Recording system</b>	AC bias
<b>&lt;MW Tuner section&gt;</b>		<b>Heads</b>	Deck 1 : Playback head x 1 Deck 2 : Recording/playback/ erase head x 1
<b>Tuning range</b>	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)	<b>&lt;Compact disc player section&gt;</b>	
<b>Usable sensitivity</b>	350 $\mu$ V/m	<b>Laser</b>	Semiconductor laser ( $\lambda = 780$ nm)
<b>Antenna</b>	Loop antenna	<b>D-A converter</b>	1 bit dual
<b>&lt;LW Tuner section&gt;</b>		<b>Signal-to-noise ratio</b>	85 dB (1 kHz, 0 dB)
<b>Tuning range</b>	144 kHz to 290 kHz	<b>Harmonic distortion</b>	0.05% (1 kHz, 0 dB)
<b>Usable sensitivity</b>	1400 $\mu$ V/m	<b>Wow and flutter</b>	Unmeasurable
<b>Antenna</b>	Loop antenna	<b>&lt;Speaker system SX-NAV304&gt;</b>	
<b>&lt;Amplifier section&gt;</b>		<b>Cabinet type</b>	2 way, bass reflex (magnetic shielded type)
<b>Power output</b>	<b>Front</b> Rated: 30 W + 30 W (6 ohms, THD 1%, 1kHz/DIN 45500) Reference: 37 W + 37 W (6 ohms, THD 10%, 1kHz/DIN 45324) EZ: DIN MUSIC POWER: 75 W + 75 W <b>Rear (Surround)</b> Rated : 10 W + 10 W (8 ohms, THD 1%, 1 kHz/DIN 45500 ) Reference: 12 W + 12 W (8 ohms, THD 10%, 1kHz/DIN 45324) EZ: DIN MUSIC POWER: 85 W + 85 W <b>Center</b> Rated: 20 W (8 ohms, THD 1%, 1 kHz/DIN 45500 ) Reference: 24 W (8 ohms, THD 10%, 1kHz/DIN 45324) EZ: DIN MUSIC POWER: 54 W EZ: 0.1% (15 W, 1kHz, 6 ohms, DIN AUDIO) VIDEO/AUX : EZ: 400 mV K: 150 mV (adjustable) K: MIC :1.8 mV (10 kohms) SPEAKERS: accept speakers of 6 ohms or more EZ: SUPER WOOFER : 1.3V SURROUND SPEAKERS : accept speakers of 8 ohms to 16 ohms CENTER SPEAKER : accept speaker of 8 ohms or more PHONES (stereo jack) : accepts headphones of 32 ohms or more	<b>Speakers</b>	Woofer : 160 mm cone type Tweeter : 60 mm cone type
<b>Total harmonic distortion</b>		<b>Impedance</b>	6 ohms
<b>Inputs</b>		<b>Output sound pressure level</b>	87 dB/W/m
<b>Outputs</b>		<b>Dimensions (W x H x D)</b>	235 x 324 x 260 mm
		<b>Weight</b>	4.1 kg
		<b>&lt;General&gt;</b>	
		<b>Power requirements</b>	230 V AC, 50Hz
		<b>Power consumption</b>	150 W
		<b>Dimensions of main unit (W x H x D)</b>	260 x 330 x 346 mm
		<b>Weight of main unit</b>	7.5 kg
		<ul style="list-style-type: none"> <li>• Design and specifications are subject to change without notice.</li> <li>• Manufactured under license from Dolby Laboratories Licensing Corporation.</li> </ul> "DOLBY" and "PRO LOGIC" are trademarks of Dolby Laboratories Licensing Corporation.	

# PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

## WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

## VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuustuokan 1 ylittävälle näkymättömälle lasersäteilylle.

## WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

## ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

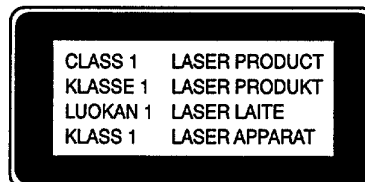


## Precaution to replace Optical block

### (KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

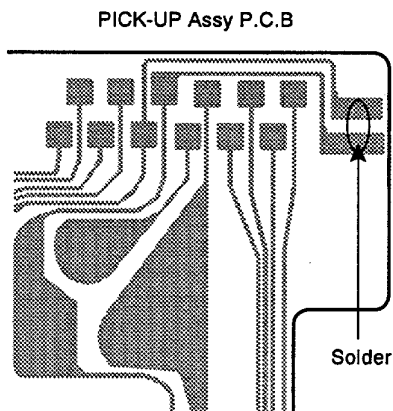

## NOTE ON BEFORE STARTING REPAIR

### 1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

#### Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

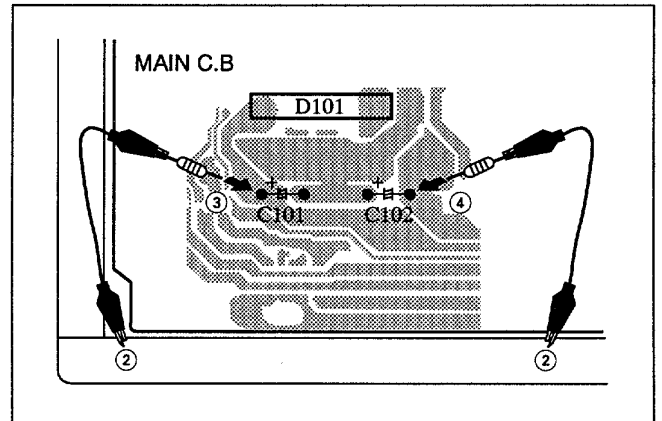


Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor ( $\Omega$ )	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

**Note:** The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

### 2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

#### 2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

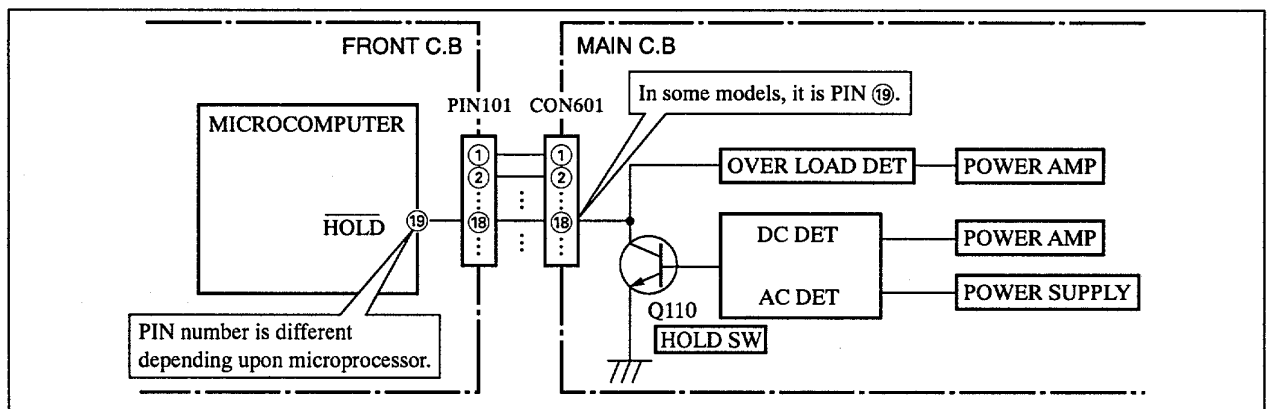


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

## 2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

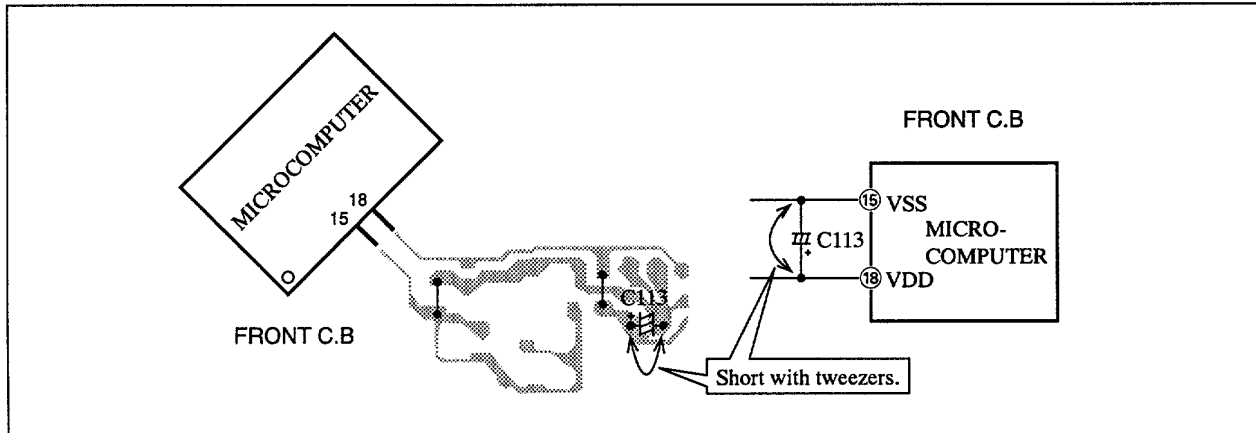


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

**Note:** The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

## 2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

# ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C111	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-083-010		IC,BA3835S	C112	87-010-196-080		CHIP CAPACITOR,0.1-25
	88-NFV-602-010		C-IC,UPD780228-019-3BA	C113	87-010-407-080		CAP, ELECT 33-50V
	87-NF8-614-010		IC,SPS-442-1-W	C114	87-010-407-080		CAP, ELECT 33-50V
	87-017-915-080		IC,BU4094BCF	C115	87-010-407-080		CAP, ELECT 33-50V
	87-A20-783-040		C-IC,BA7762AFS	C116	87-010-407-080		CAP, ELECT 33-50V
	87-017-888-080		IC,NJM4558MD	C117	87-010-430-080		CAP, ELECT 100-63
	87-A20-954-040		C-IC,M62445FP-601	C118	87-010-263-080		CAP, ELECT 100-10V
	86-NFZ-655-010		IC,LC72131D(Z)	C119	87-010-260-080		CAP, ELECT 47-25V
	87-A20-913-010		IC,LA1837NL	C120	87-010-403-080		CAP, ELECT 3.3-50V
	87-020-454-010		IC,DN6851	C121	87-012-140-080		CAP 470P
	87-A20-853-010		C-IC,M62463FP	C122	87-010-263-080		CAP, ELECT 100-10V
	87-A20-440-040		IC,BU1920FS<EZ>	C123	87-010-247-080		CAP, ELECT 100-50V
				C124	87-010-112-080		CAP, ELECT 100-16V
				C125	87-010-235-080		CAP,E 470-16 SME
TRANSISTOR				C153	87-010-917-090		CAP,E 3300-50 M SMG
	89-213-702-010		TR,2SB1370 (1.8W)	C154	87-010-917-090		CAP,E 3300-50 M SMG
	87-026-610-080		TR,KTC3198GR	C205	87-010-805-080		CAP,S 1-16 FZ
	87-A30-076-080		C-TR,2SC3052F	C206	87-010-805-080		CAP,S 1-16 FZ
	87-A30-196-080		TR,2SC4115SRS	C209	87-010-546-080		CAP, ELECT 0.33-50V
	87-A30-075-080		C-TR,2SA1235F	C210	87-010-546-080		CAP, ELECT 0.33-50V
	87-026-609-080		TR,KTA1266GR	C211	87-010-185-080		C-CAP,S 3900P-50 B
	87-A30-198-080		TR,KTC3199GR	C212	87-010-185-080		C-CAP,S 3900P-50 B
	87-A30-074-080		C-TR,RT1P 141C	C213	87-010-186-080		CAP,CHIP 4700P
	87-A30-071-080		C-TR,RT1N 144C	C214	87-010-186-080		CAP,CHIP 4700P
	87-A30-087-080		C-FET,2SK2158	C215	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-107-070		C-TR,CMBT5401	C216	87-010-403-080		CAP, ELECT 3.3-50V
	87-026-263-080		C-TR,RN1410	C217	87-010-260-080		CAP, ELECT 47-25V
	87-A30-190-080		TR,CC5551	C218	87-010-260-080		CAP, ELECT 47-25V
	87-A30-106-070		C-TR,CMBT5551	C219	87-010-805-080		CAP,S 1-16 FZ
	87-A30-109-010		TR,2SD2495	C220	87-010-805-080		CAP,S 1-16 FZ
	87-A30-108-010		TR,2SB1626	C221	87-010-191-080		C-CAP,S 0.015-50 Z F
	87-A30-221-080		C-TR,DTA114WK	C222	87-010-191-080		C-CAP,S 0.015-50 Z F
	87-A30-159-080		C-TR,KTA1298Y	C223	87-010-197-080		CAP,CHIP 0.01 DM
	89-112-965-080		TR,2SA1296 (0.75W)	C224	87-010-197-080		CAP,CHIP 0.01 DM
	87-A30-073-080		C-TR,RT1N 141C	C225	87-010-176-080		C-CAP,S 680P-50 SL
	87-A30-105-080		C-TR,RT1P 441C	C226	87-010-176-080		C-CAP,S 680P-50 SL
	87-026-238-080		C-TR,DTC144WK	C228	87-010-196-080		CHIP CAPACITOR,0.1-25
	89-327-143-080		C-TR,2SC2714 (0.1W)	C229	87-A10-812-080		C-CAP,S 220P-200 J CH
	87-A30-072-080		C-TR,RT1P 144C	C230	87-A10-812-080		C-CAP,S 220P-200 J CH
	87-A30-214-010		TR,2SB1344	C233	87-010-544-080		CAP, ELECT 0.1-50V
	87-A30-215-010		TR,2SD2025	C234	87-010-544-080		CAP, ELECT 0.1-50V
	87-A30-086-070		C-TR,CSD1306E	C237	87-012-368-080		C-CAP,S 0.1-50 F
	89-505-434-540		C-FET,2SK543-TB(4/5)	C238	87-012-368-080		C-CAP,S 0.1-50 F
				C239	87-012-368-080		C-CAP,S 0.1-50 F
DIODE				C240	87-012-368-080		C-CAP,S 0.1-50 F
	87-A40-115-060		DIODE,RS603M	C280	87-010-188-080		C-CAP,S 6800P-50 B
	87-A40-505-040		C-DIODE,KDS181	C299	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-504-040		C-DIODE,KDS184	C301	87-010-318-080		C-CAP,S 47P-50 CH
	87-070-274-080		DIODE,1N4003 SEM	C302	87-010-318-080		C-CAP,S 47P-50 CH
	87-A40-435-080		ZENER,MTZJ30D	C303	87-012-157-080		C-CAP,S 330P-50 CH
	87-A40-345-080		ZENER,MTZJ10C	C304	87-012-157-080		C-CAP,S 330P-50 CH
	87-A40-004-080		ZENER,MTZJ16A	C305	87-012-145-080		CAP, CHIP S 270P CH
	87-A40-470-080		DIODE,1SS254	C306	87-012-145-080		CAP, CHIP S 270P CH
	87-A40-509-080		ZENER,MTZJ6.8C	C307	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-488-080		DIODE,1SS244	C309	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-017-932-080		ZENER,MTJ6.2B	C310	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-002-080		ZENER,MTZJ5.1C	C311	87-010-198-080		CAP, CHIP 0.022
	87-A40-438-080		ZENER,MTZJ4.7A	C312	87-010-198-080		CAP, CHIP 0.022
	87-A40-234-080		ZENER,MTZJ5.6A	C313	87-010-180-080		CAP,CHIP S 1500P-50 KB
	87-A40-442-080		ZENER,MTZJ9.1A	C314	87-010-180-080		CAP,CHIP S 1500P-50 KB
	87-070-136-080		ZENER,MTZJ5.1B	C315	87-010-178-080		CHIP CAP 1000P
	87-A40-116-060		DIODE,RS403L-B-D-5L	C316	87-010-178-080		CHIP CAP 1000P
MAIN C.B				C321	87-016-492-080		C-CAP,S 0.33-16 FZ
	C109	87-010-196-080	CHIP CAPACITOR,0.1-25	C322	87-016-492-080		C-CAP,S 0.33-16 FZ
	C110	87-010-196-080	CHIP CAPACITOR,0.1-25	C324	87-010-260-080		CAP, ELECT 47-25V
				C325	87-010-370-080		CAP,E 330-6.3 SME
				C327	87-010-404-080		CAP, ELECT 4.7-50V
				C328	87-010-404-080		CAP, ELECT 4.7-50V
				C332	87-010-196-080		CHIP CAPACITOR,0.1-25

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C335	87-010-401-080		CAP, ELECT 1-50V	C758	87-010-149-080		C-CAP,S 5P-50 CH
C336	87-010-401-080		CAP, ELECT 1-50V	C761	87-010-196-080		CHIP CAPACITOR,0.1-25
C337	87-010-196-080		CHIP CAPACITOR,0.1-25	C762	87-010-197-080		CAP, CHIP 0.01 DM
C339	87-010-196-080		CHIP CAPACITOR,0.1-25	C763	87-010-194-080		CAP, CHIP 0.047
C340	87-010-196-080		CHIP CAPACITOR,0.1-25	C765	87-010-197-080		CAP, CHIP 0.01 DM
C351	87-012-140-080		CAP 470P	C766	87-010-197-080		CAP, CHIP 0.01 DM
C352	87-012-140-080		CAP 470P	C767	87-010-405-080		CAP, ELECT 10-50V
C354	87-010-175-080		CAP 560P	C768	87-010-197-080		CAP, CHIP 0.01 DM
C355	87-012-349-080		C-CAP,S 1000P-50 CH	C769	87-010-408-080		CAP, ELECT 47-50V
C356	87-010-260-080		CAP, ELECT 47-25V	C770	87-015-821-080		C-CAP 0.047
C357	87-010-197-080		CAP, CHIP 0.01 DM	C771	87-010-407-080		CAP, ELECT 33-50V
C358	87-010-183-080		C-CAP,S 2700P-50 B	C772	87-010-194-080		CAP, CHIP 0.047
C359	87-010-183-080		C-CAP,S 2700P-50 B	C773	87-010-196-080		CHIP CAPACITOR,0.1-25
C360	87-010-183-080		C-CAP,S 2700P-50 B	C774	87-010-263-080		CAP, ELECT 100-10V
C370	87-010-196-080		CHIP CAPACITOR,0.1-25	C775	87-010-404-080		CAP, ELECT 4.7-50V
C373	87-016-083-080		C-CAP,S 0.15-16 RK	C776	87-010-197-080		CAP, CHIP 0.01 DM
C374	87-016-083-080		C-CAP,S 0.15-16 RK	C777	87-010-400-080		CAP, ELECT 0.47-50V
C378	87-010-196-080		CHIP CAPACITOR,0.1-25	C778	87-010-401-080		CAP, ELECT 1-50V
C379	87-010-382-080		CAP, ELECT 22-25V	C779	87-010-401-080		CAP, ELECT 1-50V
C380	87-010-382-080		CAP, ELECT 22-25V	C780	87-010-196-080		CHIP CAPACITOR,0.1-25
C386	87-010-196-080		CHIP CAPACITOR,0.1-25	C781	87-010-405-080		CAP, ELECT 10-50V
C401	87-010-405-080		CAP, ELECT 10-50V	C782	87-010-405-080		CAP, ELECT 10-50V
C402	87-010-405-080		CAP, ELECT 10-50V	C783	87-015-819-080		CAPACITOR,0.01
C457	87-010-404-080		CAP, ELECT 4.7-50V	C784	87-010-197-080		CAP, CHIP 0.01 DM
C458	87-010-404-080		CAP, ELECT 4.7-50V	C785	87-010-403-080		CAP, ELECT 3.3-50V
C516	87-010-196-080		CHIP CAPACITOR,0.1-25	C786	87-010-403-080		CAP, ELECT 3.3-50V
C601	87-010-180-080		C-CER 1500P	C789	87-010-188-080		CAP,CHIP 6800P
C602	87-010-180-080		C-CER 1500P	C790	87-010-188-080		CAP,CHIP 6800P
C613	87-010-196-080		CHIP CAPACITOR,0.1-25	C791	87-010-405-080		CAP, ELECT 10-50V
C614	87-010-196-080		CHIP CAPACITOR,0.1-25	C793	87-010-180-080		C-CAP,S 1500P<EZ>
C619	87-010-185-080		C-CAP,S 3900P-50 B	C793	87-010-181-080		C-CAP,S 1800P<K>
C620	87-010-185-080		C-CAP,S 3900P-50 B	C794	87-010-406-080		CAP, ELECT 22-50
C621	87-010-401-080		CAP, ELECT 1-50V	C795	87-010-596-080		CAP, S 0.047-16
C622	87-010-401-080		CAP, ELECT 1-50V	C796	87-010-403-080		CAP, ELECT 3.3-50V
C629	87-010-405-080		CAP, ELECT 10-50V	C797	87-010-181-080		C-CAP,S 1800P-50 B
C630	87-010-213-080		C-CAP,S 0.015-50 B	C798	87-010-181-080		C-CAP,S 1800P-50 B
C631	87-010-194-080		CAP, CHIP 0.047	C799	87-010-194-080		CAP, CHIP 0.047
C632	87-010-263-080		CAP, ELECT 100-10V	C812	87-010-197-080		CAP, CHIP 0.01 DM
C633	87-010-263-080		CAP, ELECT 100-10V	C814	87-010-197-080		CAP, CHIP 0.01 DM
C634	87-010-196-080		CHIP CAPACITOR,0.1-25	C820	87-010-408-080		CAP, ELECT 47-50V
C635	87-010-196-080		CHIP CAPACITOR,0.1-25	C821	87-010-197-080		CAP, CHIP 0.01 DM
C636	87-010-194-080		CAP, CHIP 0.047	C822	87-010-197-080		CAP, CHIP 0.01 DM
C637	87-010-183-080		C-CAP,S 2700P-50 B	C823	87-010-197-080		CAP, CHIP 0.01 DM
C641	87-010-196-080		CHIP CAPACITOR,0.1-25	C828	87-010-196-080		CHIP CAPACITOR,0.1-25
C653	87-010-318-080		C-CAP,S 47P-50 CH	C829	87-010-196-080		CHIP CAPACITOR,0.1-25
C654	87-010-318-080		C-CAP,S 47P-50 CH	C859	87-010-197-080		CAP, CHIP 0.01 DM<EZ>
C663	87-010-322-080		C-CAP,S 100P-50 CH	C861	87-012-156-080		C-CAP,S 220P-50 CH<EZ>
C664	87-010-322-080		C-CAP,S 100P-50 CH	C862	87-012-156-080		C-CAP,S 220P-50 CH<EZ>
C667	87-010-196-080		CHIP CAPACITOR,0.1-25	C863	87-012-140-080		C-CAP,S 470P<EZ>
C671	87-010-322-080		C-CAP,S 100P-50 CH	C864	87-010-405-080		CAP,ELECT 10-50V<EZ>
C672	87-010-322-080		C-CAP,S 100P-50 CH	C865	87-010-196-080		CHIP CAPACITOR,0.1-25<EZ>
C701	87-010-381-080		CAP, ELECT 330-16V	C866	87-010-405-080		CAP,ELECT 10-50V<EZ>
C702	87-010-404-080		CAP, ELECT 4.7-50V	C867	87-010-197-080		CAP, CHIP 0.01 DM<EZ>
C703	87-010-197-080		CAP, CHIP 0.01 DM	C868	87-010-316-080		C-CAP,S 33P-50 CH<EZ>
C704	87-010-197-080		CAP, CHIP 0.01 DM	C869	87-010-314-080		C-CAP,S 22P-50 CH<EZ>
C709	87-010-322-080		C-CAP,S 100P-50 CH	C940	87-010-197-080		CAP,CHIP 0.01 DM
C711	87-010-263-080		CAP, ELECT 100-10V	C942	87-010-151-080		C-CAP,S 7P-50 CH
C712	87-010-196-080		CHIP CAPACITOR,0.1-25	C947	87-010-197-080		CAP,CHIP 0.01 DM
C713	87-010-197-080		CAP, CHIP 0.01 DM	C949	87-014-049-080		CAP,PP 470P-100J
C714	87-010-197-080		CAP, CHIP 0.01 DM	C952	87-010-197-080		CAP,CHIP 0.01 DM
C715	87-010-322-080		C-CAP,S 100P-50 CH	C957	87-010-311-080		C-CAP,S 12P
C721	87-010-312-080		C-CAP,S 15P-50 CH	C958	87-010-197-080		CAP,CHIP 0.01 DM
C722	87-010-312-080		C-CAP,S 15P-50 CH	C959	87-010-196-080		CHIP CAPACITOR,0.1-25
C723	87-010-178-080		CHIP CAP 1000P	C960	87-010-196-080		CHIP CAPACITOR,0.1-25
C725	87-010-178-080		CHIP CAP 1000P	C962	87-010-401-080		CAP,ELECT 1-50V
C727	87-010-196-080		CHIP CAPACITOR,0.1-25	CF801	87-008-423-010		CERAMIC FILTER, SFE10.7
C728	87-010-248-080		CAP, ELECT 220-10V	CF802	87-785-747-010		CF,MS2 GHY.R
C755	87-010-197-080		CAP, CHIP 0.01 DM	FFE801	A8-62A-19C-170		62A-1 YFEENC
C756	87-010-197-080		CAP, CHIP 0.01 DM	J201	87-A60-483-010		JACK,DIA6.3 BLK ST W/S KM
C757	87-010-318-080		C-CAP,S 47P-50 CH	J203	87-033-240-010		TERMINAL,SP 4P32SV1-05




REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
J212	87-A60-399-010		JACK,PIN 1P BLK HSP-241VBL<EZ>	C355	87-010-196-080		CHIP CAPACITOR,0.1-25
J601	87-A60-425-010		JACK,PIN 2P YKC21-3828	C373	87-010-196-080		CHIP CAPACITOR,0.1-25
J802	87-A60-427-010		TERMINAL,ANT PAL 2P YKD31-0429	C376	87-012-158-080		C-CAP,S 390P-50 CH
L201	87-003-383-010		COIL,1UH-S	C378	87-010-196-080		CHIP CAPACITOR,0.1-25
L202	87-003-383-010		COIL,1UH-S	C401	87-010-405-040		CAP,E 10-50
L301	87-A50-049-010		COIL,TRAP 85K(COI)	C402	87-010-405-040		CAP,E 10-50
L302	87-A50-049-010		COIL,TRAP 85K(COI)	C404	87-010-194-080		CAP, CHIP 0.047
L351	87-007-342-010		COIL,OSC 85K BIAS	C405	87-010-246-040		CAP,E 47-35 SME
L771	87-A50-266-010		COIL,FM DET-2N(TOK)	C406	87-010-197-080		CAP, CHIP 0.01 DM
L772	87-A90-733-010		FLTR,PCFAZH-450 (TOK)	C410	87-010-560-040		CAP, E 10-50 GAS
L781	87-005-847-080		COIL,2.2UH(CECS)	C411	87-010-560-040		CAP, E 10-50 GAS
L832	86-NF2-694-080		COIL,2.2UH K CECS	C501	87-010-401-040		CAP,E 1-50 SME
L941	87-A50-020-010		COIL,ANT LW(COI)	C502	87-010-177-080		C-CAP,S 820P-50 SL
L942	87-A50-019-010		COIL,OSC LW(COI)	C504	87-010-546-040		CAP,E 0.33-50 SME
L981	87-NF4-651-010		COIL,AM PACK 2N(TOM)	C505	87-010-321-080		CHIP CAPACITOR,82P(J)
R237	87-A00-258-080		RES,M/F 0.22-1W J	C506	87-010-405-040		CAP,E 10-50
R238	87-A00-258-080		RES,M/F 0.22-1W J	C508	87-010-248-040		CAP,E 220-10 SME
R239	87-A00-258-080		RES,M/F 0.22-1W J	C509	87-010-545-040		CAP,E 0.22-50 SME
R240	87-A00-258-080		RES,M/F 0.22-1W J	C510	87-018-209-080		CAP,CER 0.1-50V
R629	87-029-082-010		RES,FUSE 100-1/4W	C511	87-010-406-040		CAP,E 22-50 SME
SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA	C513	87-010-405-040		CAP,E 10-50
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA	C514	87-010-186-080		CAP,CHIP 4700P
TC942	87-011-221-080		CAP,TRIMMER 30P	CON101	87-099-720-010		CONN,30P TYK-B(P)
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309	CON102	87-099-015-010		CONN,13P 6216V
X851	87-A70-091-010		VIB,XTAL 4.332MHZ CSA-309<EZ>	CON301	87-099-013-010		CONN,11P 6216 V
				CON601	87-099-016-010		CONN,14P 6216V
FRONT C.B				EMI501	87-008-372-080		FILTER, EMI BL OIRNI
				FL401	88-NF8-603-010		FL,SVA-11MM12
	88-911-091-110		FF-CABLE,11P 1.25	J501	87-A60-651-010		JACK,3.5MONO
	88-913-321-110		FF-CABLE,13P 1.25 320MM	LED208	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
	88-906-251-110		FF-CABLE,6P 1.25				
C36	87-010-322-080		C-CAP,S 100P-50 CH	LED209	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
C37	87-010-322-080		C-CAP,S 100P-50 CH	LED210	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
				LED211	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
C38	87-010-322-080		C-CAP,S 100P-50 CH	LED213	87-070-281-080		LED,SLZ736A-25H-S-T1 P-GRN
C39	87-010-322-080		C-CAP,S 100P-50 CH	LED222	87-070-201-080		LED,SLP9118C-51-S RED
C40	87-010-322-080		C-CAP,S 100P-50 CH				
C41	87-010-322-080		C-CAP,S 100P-50 CH	LED223	87-070-201-080		LED,SLP9118C-51-S RED
C42	87-010-322-080		C-CAP,S 100P-50 CH	LED224	87-070-201-080		LED,SLP9118C-51-S RED
				LED225	87-070-201-080		LED,SLP9118C-51-S RED
C43	87-010-322-080		C-CAP,S 100P-50 CH	LED226	87-070-201-080		LED,SLP9118C-51-S RED
C44	87-010-322-080		C-CAP,S 100P-50 CH	LED227	87-070-201-080		LED,SLP9118C-51-S RED
C45	87-010-322-080		C-CAP,S 100P-50 CH				
C46	87-012-156-080		C-CAP,S 220P-50 CH	LED228	87-070-201-080		LED,SLP9118C-51-S RED
C150	87-010-196-080		CHIP CAPACITOR,0.1-25	LED229	87-070-201-080		LED,SLP9118C-51-S RED
				S401	87-A90-680-080		SW,TACT KSM0612BTS
C153	87-010-196-080		CHIP CAPACITOR,0.1-25	S402	87-A90-680-080		SW,TACT KSM0612BTS
C154	87-010-196-080		CHIP CAPACITOR,0.1-25	S403	87-A90-680-080		SW,TACT KSM0612BTS
C170	87-010-194-080		CAP,CHIP 0.047				
C171	87-010-196-080		CHIP CAPACITOR,0.1-25	S404	87-A90-680-080		SW,TACT KSM0612BTS
C172	87-010-406-040		CAP,E 22-50 M SME	S405	87-A90-680-080		SW,TACT KSM0612BTS
				S406	87-A90-680-080		SW,TACT KSM0612BTS
C173	87-010-194-080		CAP,CHIP 0.047	S407	87-A90-680-080		SW,TACT KSM0612BTS
C201	87-018-205-080		CAP,CERA-SOL 0.022	S408	87-A90-680-080		SW,TACT KSM0612BTS
C202	87-010-198-080		CAP,CHIP 0.022				
C203	87-010-198-080		CAP,CHIP 0.022	S409	87-A90-680-080		SW,TACT KSM0612BTS
C204	87-012-140-080		CAP 470P	S410	87-A90-680-080		SW,TACT KSM0612BTS
				S411	87-A90-680-080		SW,TACT KSM0612BTS
C205	87-010-316-080		C-CAP,S 33P-50 CH	S412	87-A90-680-080		SW,TACT KSM0612BTS
C206	87-010-318-080		C-CAP,S 47P-50 CH	S413	87-A90-680-080		SW,TACT KSM0612BTS
C207	87-010-312-080		C-CAP,S 15P-50 CH				
C208	87-010-196-080		CHIP CAPACITOR,0.1-25	S414	87-A90-680-080		SW,TACT KSM0612BTS
C209	87-010-494-040		CAP,E 1-50 GAS	S415	87-A90-680-080		SW,TACT KSM0612BTS
				S416	87-A90-680-080		SW,TACT KSM0612BTS
C210	87-A10-189-040		CAP,E 220-10	S417	87-A90-680-080		SW,TACT KSM0612BTS
C211	87-010-194-080		CAP,CHIP 0.047	S418	87-A90-680-080		SW,TACT KSM0612BTS
C212	87-010-555-040		CAP,E 100-10 GAS				
C213	87-010-196-080		CHIP CAPACITOR,0.1-25	S419	87-A90-680-080		SW,TACT KSM0612BTS
C214	87-010-405-040		CAP,E 10-50	S420	87-A90-680-080		SW,TACT KSM0612BTS
				S421	87-A90-680-080		SW,TACT KSM0612BTS
C215	87-012-156-080		C-CAP,S 220P-50 CH	S423	87-A90-680-080		SW,TACT KSM0612BTS
C216	87-012-156-080		C-CAP,S 220P-50 CH	S424	87-A90-680-080		SW,TACT KSM0612BTS<EZ>
C217	87-010-197-080		CAP,CHIP 0.01 DM				
C250	87-010-196-080		CHIP CAPACITOR,0.1-25	S425	87-A90-680-080		SW,TACT KSM0612BTS
C270	87-010-196-080		CHIP CAPACITOR,0.1-25	S426	87-A90-680-080		SW,TACT KSM0612BTS<EZ>
				S428	87-A90-680-080		SW,TACT KSM0612BTS<EZ>
C307	87-015-686-040		CAP,E 22-25 M 7L SRA	SW201	87-A90-535-010		SW,RTRY EC16B24304
C354	87-010-196-080		CHIP CAPACITOR,0.1-25	SW202	88-NF8-615-010		SW,RTRY EC16B24204L=25

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
X201	87-A70-075-080		VIB,CER 4.19MHZ CRHF	C545	87-012-393-080		C-CAP,S 0.22-16 K
				C546	87-012-393-080		C-CAP,S 0.22-16 K
				C547	87-010-404-080		CAP,E 4.7-50 M SME
				C548	87-010-404-080		CAP,E 4.7-50 M SME
				C549	87-012-393-080		C-CAP,S 0.22-16 K
PRO C.B				C550	87-012-393-080		C-CAP,S 0.22-16 K
C101	87-012-368-080		C-CAP,S 0.1-50 Z F	C551	87-016-081-080		C-CAP,S 0.1-16 K R
C102	87-012-368-080		C-CAP,S 0.1-50 Z F	C552	87-A10-802-080		C-CAP,S 0.047-16 J B
C103	87-016-051-090		CAP,E 2200-35 M SMG	C553	87-A10-802-080		C-CAP,S 0.047-16 J B
C104	87-016-051-090		CAP,E 2200-35 M SMG	C554	87-016-081-080		C-CAP,S 0.1-16 K R
C105	87-010-196-080		C-CAP,S 0.1-25 Z F				
C106	87-010-196-080		C-CAP,S 0.1-25 Z F	C555	87-016-081-080		C-CAP,S 0.1-16 K R
C109	87-010-188-080		C-CAP,S 6800P-50B	C556	87-A10-801-080		C-CAP,S 0.022-16 J B
C112	87-012-368-080		C-CAP,S 0.1-50 Z F	C557	87-A10-801-080		C-CAP,S 0.022-16 J B
C113	87-012-368-080		C-CAP,S 0.1-50 Z F	C558	87-016-081-080		C-CAP,S 0.1-16 K R
C207	87-010-545-080		CAP,E 0.22-50 M SME	C579	87-010-402-080		CAP,E 2.2-50 M SME
C209	87-010-180-080		C-CAP,S 1500P-50 K B				
C211	87-010-404-080		CAP,E 4.7-50 M SME	C580	87-010-402-080		CAP,E 2.2-50 M SME
C215	87-A10-596-080		C-CAP,S 100P-100 J CH	C581	87-010-196-080		C-CAP,S 0.1-25 Z F
C217	87-010-406-080		CAP,E 22-50 M SME	J202	87-A60-605-010		JACK,3P W/R/O YK21-3948
C219	87-A10-596-080		C-CAP,S 100P-100 J CH	L201	87-003-383-010		COIL,1UH K
				L301	87-003-383-010		COIL,1UH K
C221	87-A10-899-080		CAP,E 47-25 M BP				
C223	87-010-544-080		CAP,E 0.1-50 M SME	R243	87-A00-258-080		RES,M/F 0.22-1W J
C225	87-010-993-080		C-CAP,S 0.056-25 K B	R245	87-A00-258-080		RES,M/F 0.22-1W J
C227	87-010-196-080		C-CAP,S 0.1-25 Z F	R343	87-A00-258-080		RES,M/F 0.22-1W J
C229	87-A10-799-080		C-CAP,S 5600P-16 J B	R345	87-A00-258-080		RES,M/F 0.22-1W J
				R509	87-022-214-080		C-RES,S 100K-1/10W F
C230	87-A10-799-080		C-CAP,S 5600P-16 J B				
C233	87-010-263-080		CAP,E 100-10 SME				
C234	87-010-235-080		CAP,E 470-16 SME				
C307	87-010-545-080		CAP,E 0.22-50 M SME				
C309	87-010-181-080		C-CAP, 1800P-50 K B				
				AC1 C.B			
				△ F101	87-035-455-010		FUSE,2A 250V T W/C
				△ FC101	87-A90-505-080		FUSE CLAMP,TP00351-51
				△ FC102	87-A90-505-080		FUSE CLAMP,TP00351-51
				△ PT101	88-NFV-608-010		PT,8NF-28E
C311	87-010-404-080		CAP,E 4.7-50 M SME	△ T101	87-A60-317-010		TERMINAL, 1P MSC
C315	87-A10-596-080		C-CAP,S 100P-100 J CH				
C317	87-010-408-080		CAP,E 47-50 M SME	△ T102	87-A60-317-010		TERMINAL, 1P MSC
C319	87-A10-596-080		C-CAP,S 100P-100 J CH				
C321	87-A10-899-080		CAP,E 47-25 M BP				
C323	87-010-544-080		CAP,E 0.1-50 M SME				
C325	87-010-993-080		C-CAP,S 0.056-25 K B				
C327	87-010-196-080		C-CAP,S 0.1-25 Z F				
C333	87-010-263-080		CAP,E 100-10 SME				
C501	87-010-176-080		C-CAP,S 680P-50 J SL				
				AC2 C.B			
C502	87-010-176-080		C-CAP,S 680P-50 J SL	△ PR101	87-026-682-080		PROTECTOR,10A 491 SERIES 60V
C503	87-A10-804-080		C-CAP,S 0.1-25 J B	△ PR102	87-026-682-080		PROTECTOR,10A 491 SERIES 60V
C504	87-A10-804-080		C-CAP,S 0.1-25 J B	△ PR105	87-A90-195-080		PROTECTOR,7A 491 SERIES 60V
C505	87-A10-804-080		C-CAP,S 0.1-25 J B	△ PR106	87-A90-195-080		PROTECTOR,7A 491 SERIES 60V
C506	87-A10-804-080		C-CAP,S 0.1-25 J B	W104	85-NF5-628-010		F-CABLE 7P-2.5
C509	87-010-112-080		CAP,E 100-16 M SME	DECK C.B			
C510	87-010-221-080		CAP,E 470-10 M SME	CON105	87-099-753-019		CONN,11P H 9604
C511	87-A10-891-080		CAP,E 4.7-25 SME(K)	CON301	86-ZM3-604-219		CON ASSY,3P-PB
C512	87-A10-800-080		C-CAP,S 6800P-16 J B	CON351	86-ZM3-605-119		CON ASSY,8P-RPB
C513	87-010-374-080		CAP,E 47-10 M SME	SFR1	87-024-581-089		SFR,3,3K DIA 6H
				SOL1	82-ZM1-618-410		SOL ASSY,27
C514	87-010-196-080		C-CAP,S 0.1-25 Z F	SOL2	82-ZM1-618-410		SOL ASSY,27
C515	87-010-400-080		CAP,E 0.47-50 M SME	SW1	87-A90-248-010		SW,MICRO ESE11SH2CX0
C516	87-010-400-080		CAP,E 0.47-50 M SME	SW2	87-A90-248-010		SW,MICRO ESE11SH2CX0
C519	87-010-544-080		CAP,E 0.1-50 M SME	SW3	87-A90-248-010		SW,MICRO ESE11SH2CX0
C520	87-010-546-080		CAP,E 0.33-50 SME	SW4	87-A90-248-010		SW,MICRO ESE11SH2CX0
C522	87-018-209-080		CAP,TC U 0.1-50 Z F	SW5	87-A90-248-010		SW,MICRO ESE11SH2CX0
C523	87-A10-804-080		C-CAP,S 0.1-25 J B	W1	82-ZM3-601-019		RBN-CORD,4P-75
C524	87-010-374-080		CAP,E 47-10 M SME				
C526	87-010-196-080		C-CAP,S 0.1-25 Z F				
C530	87-010-544-080		CAP,E 0.1-50 M SME				
C531	87-010-546-080		CAP,E 0.33-50 SME				
C532	87-010-971-080		C-CAP,S 4700P-50 J B				
C533	87-012-349-080		C-CAP,S 1000P-50 J CH				
C538	87-010-971-080		C-CAP,S 4700P-50 J B				
C539	87-012-349-080		C-CAP,S 1000P-50 J CH				
C540	87-010-401-080		CAP,E 1-50 M SME				
C541	87-010-401-080		CAP,E 1-50 M SME				
C542	87-A10-799-080		C-CAP,S 5600P-16 J B				
C543	87-A10-802-080		C-CAP,S 0.047-16 J B				
C544	87-A10-229-080		C-CAP,S 0.68-10 K				

○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち  
Chip Resistor Part Coding

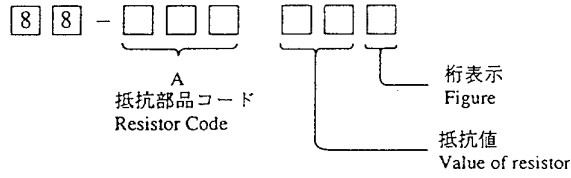

チップ抵抗  
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法 / Dimensions (mm)			抵抗コード : A Resistor Code: A	
				外形 / Form	L	W		t
1/16W	1608	±5%	CJ		1.6	0.8	0.45	108
1/10W	2125	±5%	CJ		2	1.25	0.45	118
1/8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION



E C B

KTC3198  
KTA1266



E C B

CC551



B C E

2SB1370



E C B

KTC3199



B C E

2SA1296




B C E

2SB1626  
2SB1344  
2SD2025  
2SD2495




B C E


2SC4115S

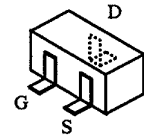

2SK2158

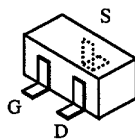


2SK543

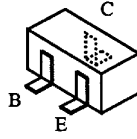


DTA114WK RN1410  
DTC144WK RT1N141C  
CSD1306E RT1N144C  
CMBT5551 RT1P141C  
CMBT5401 RT1P441C  
2SA1235F RT1P144C  
2SC3052F KTA1298Y  
2SC2714


# BLOCK DIAGRAM - 1 (TUNER)

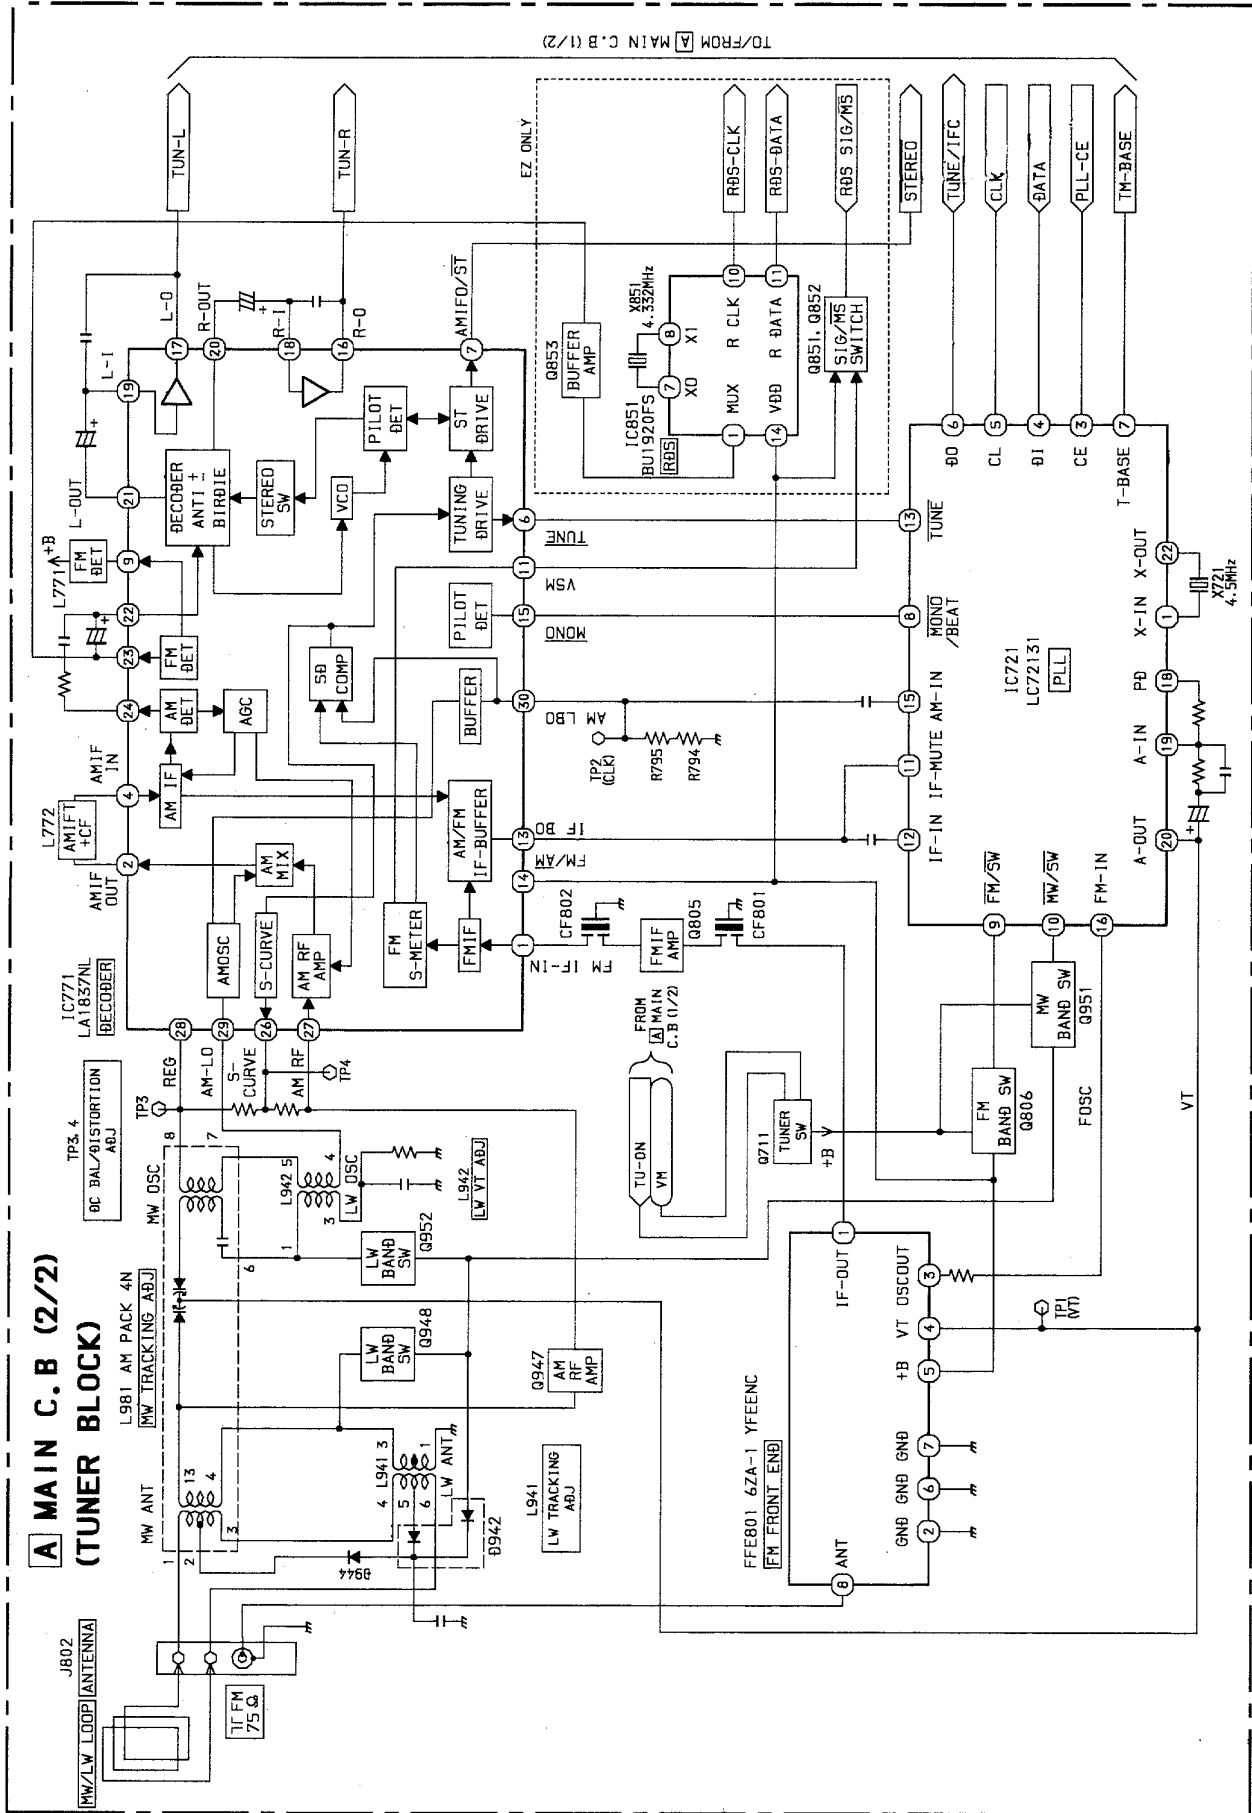


BLOCK DIAGRAM - 2 (MAIN / FRONT / PRO)

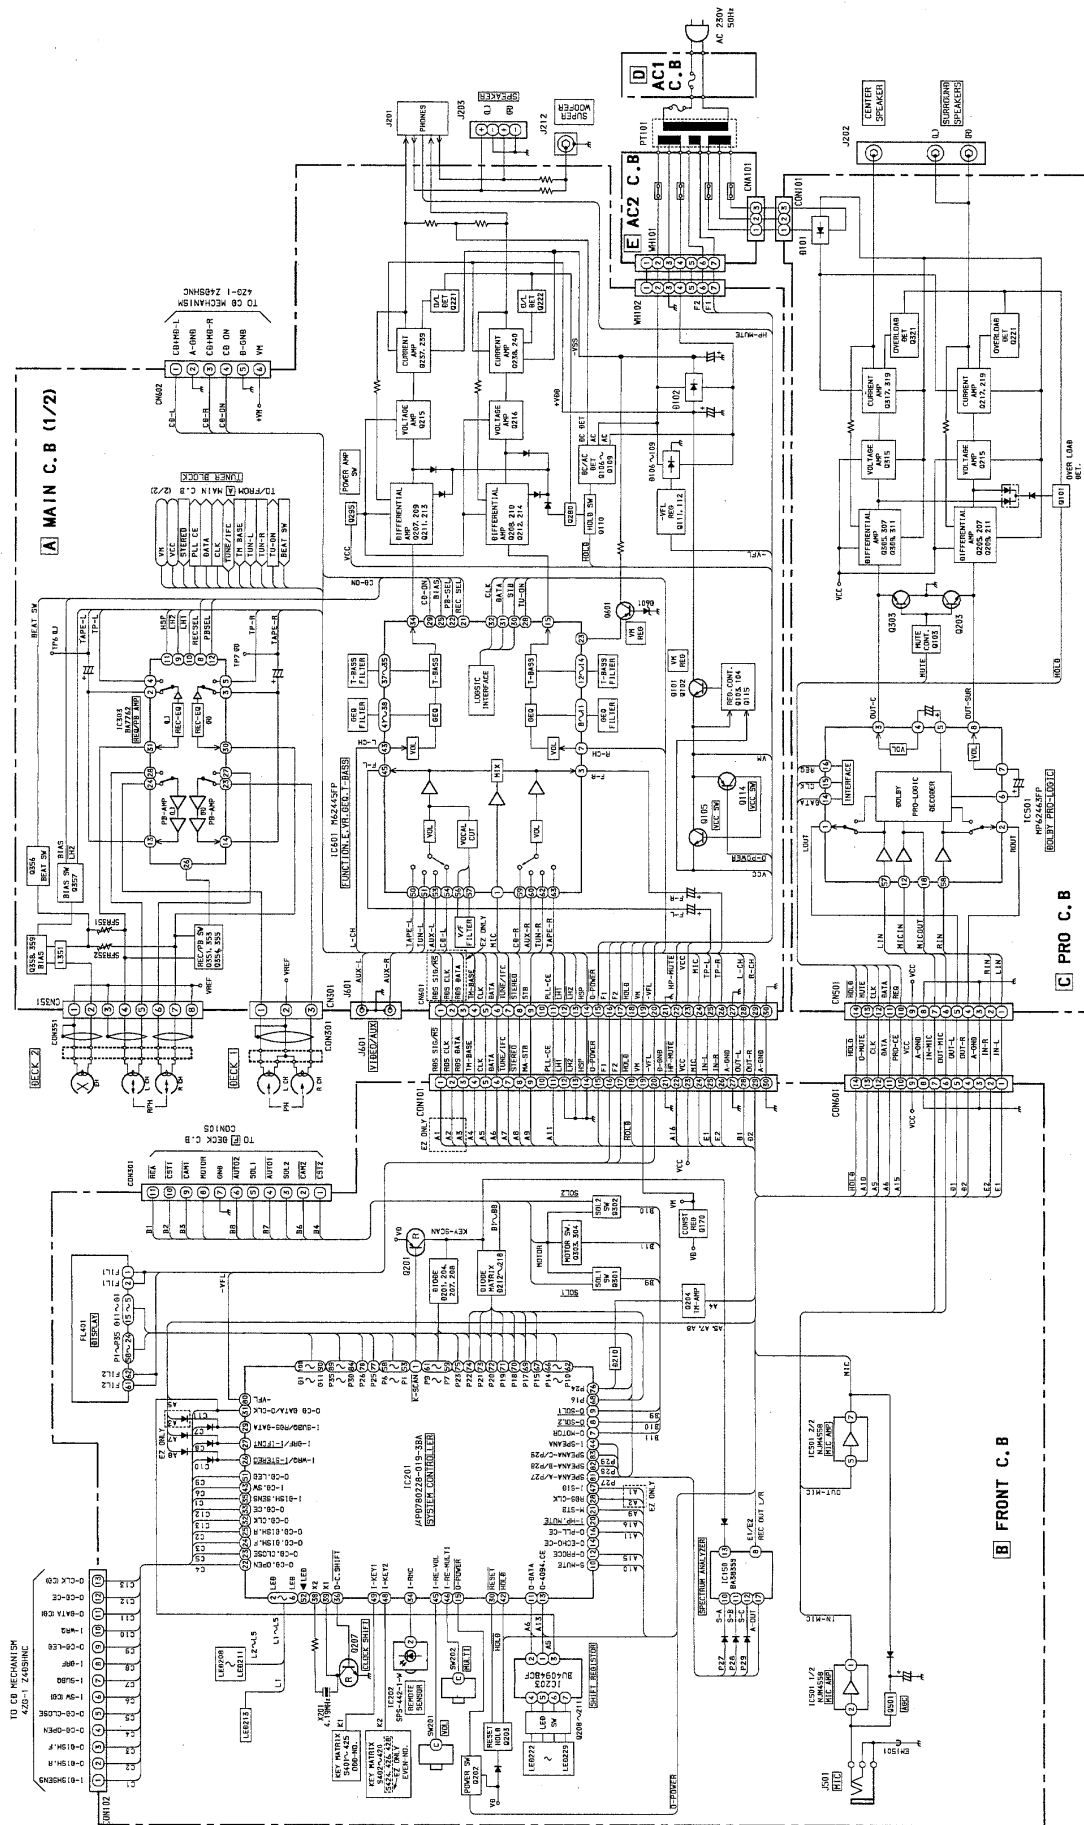


SCHEMATIC DIAGRAM - 1 (MAIN 1/2)

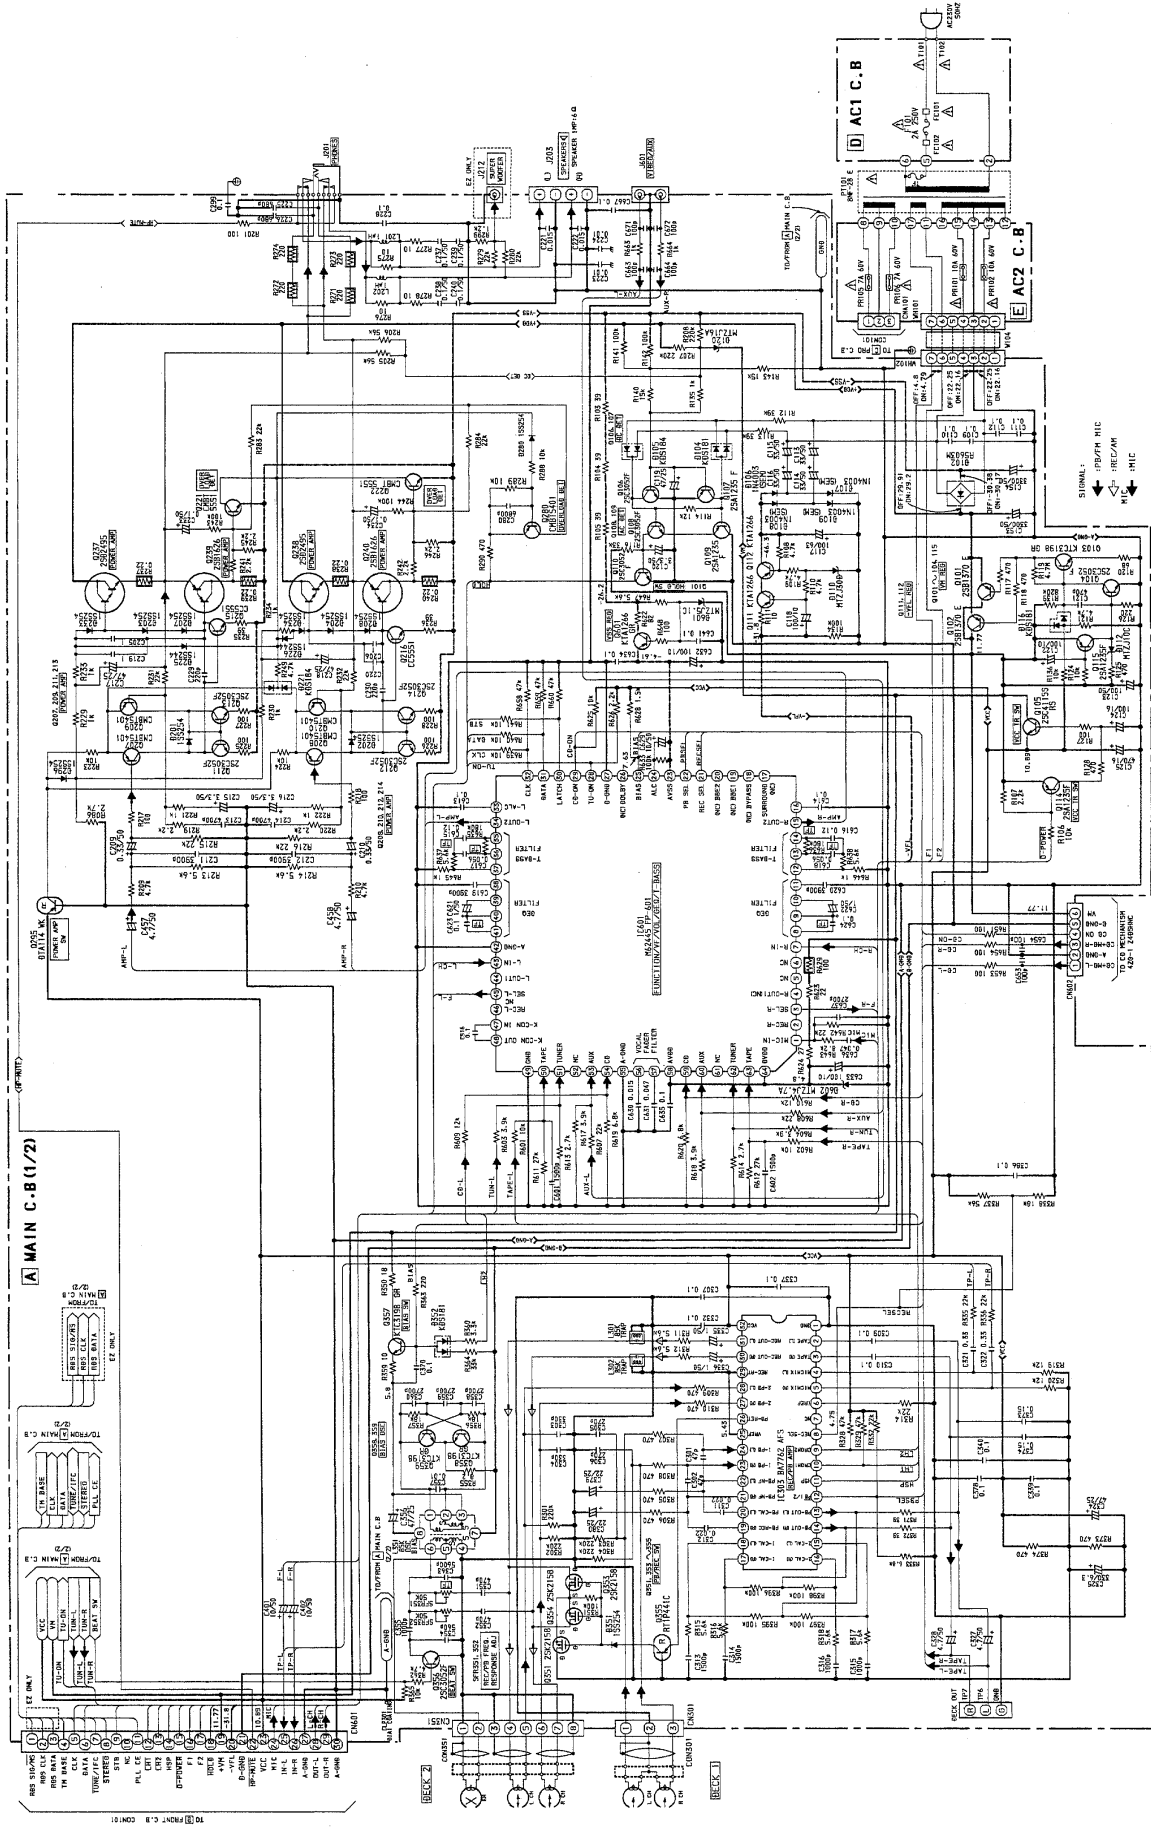

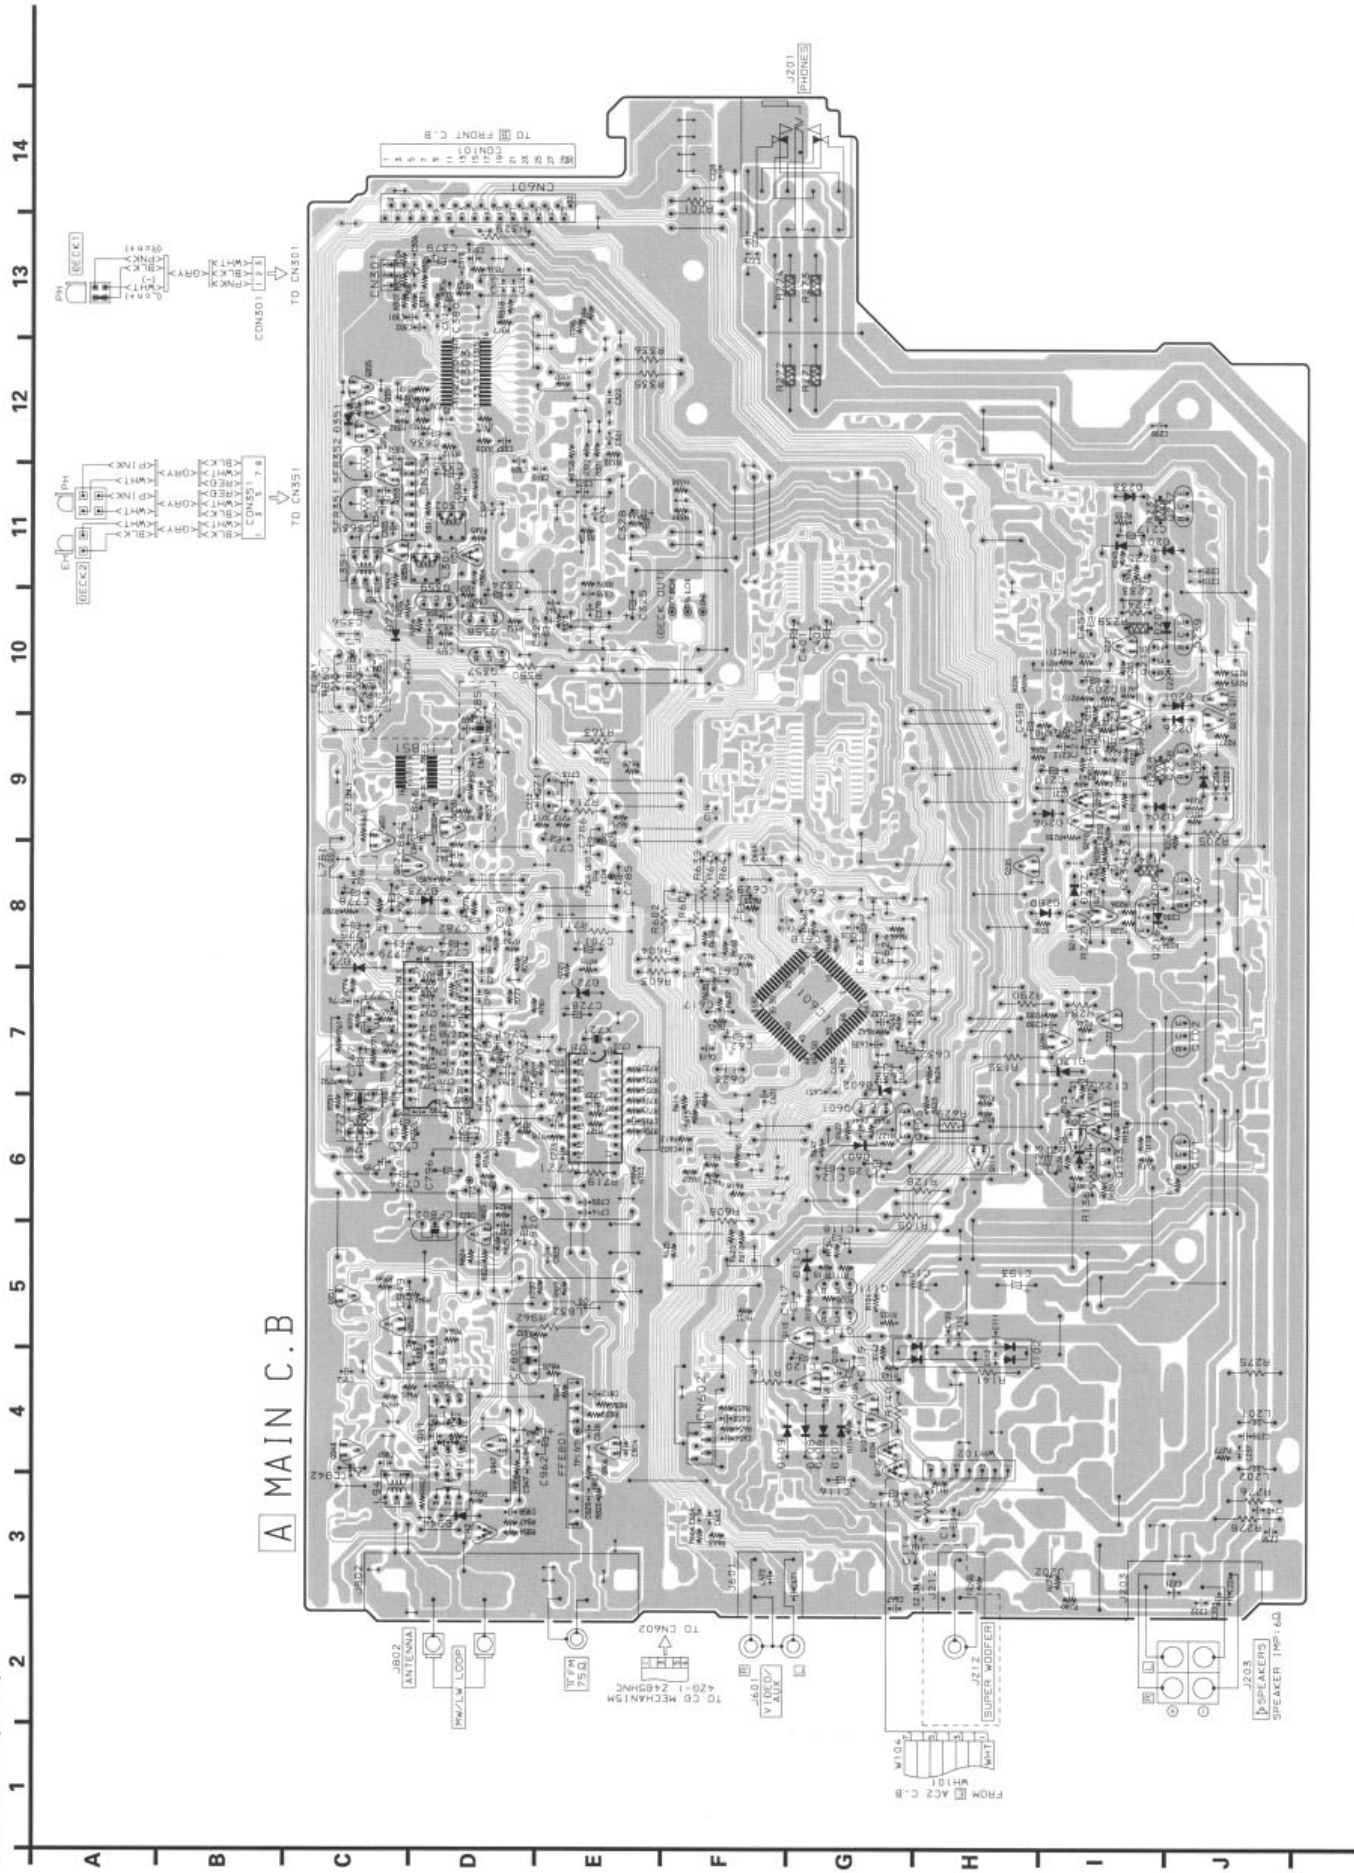


1 2 3 4 5 6 7 8 9 10 11 12 13 14

# B FRONT C.B

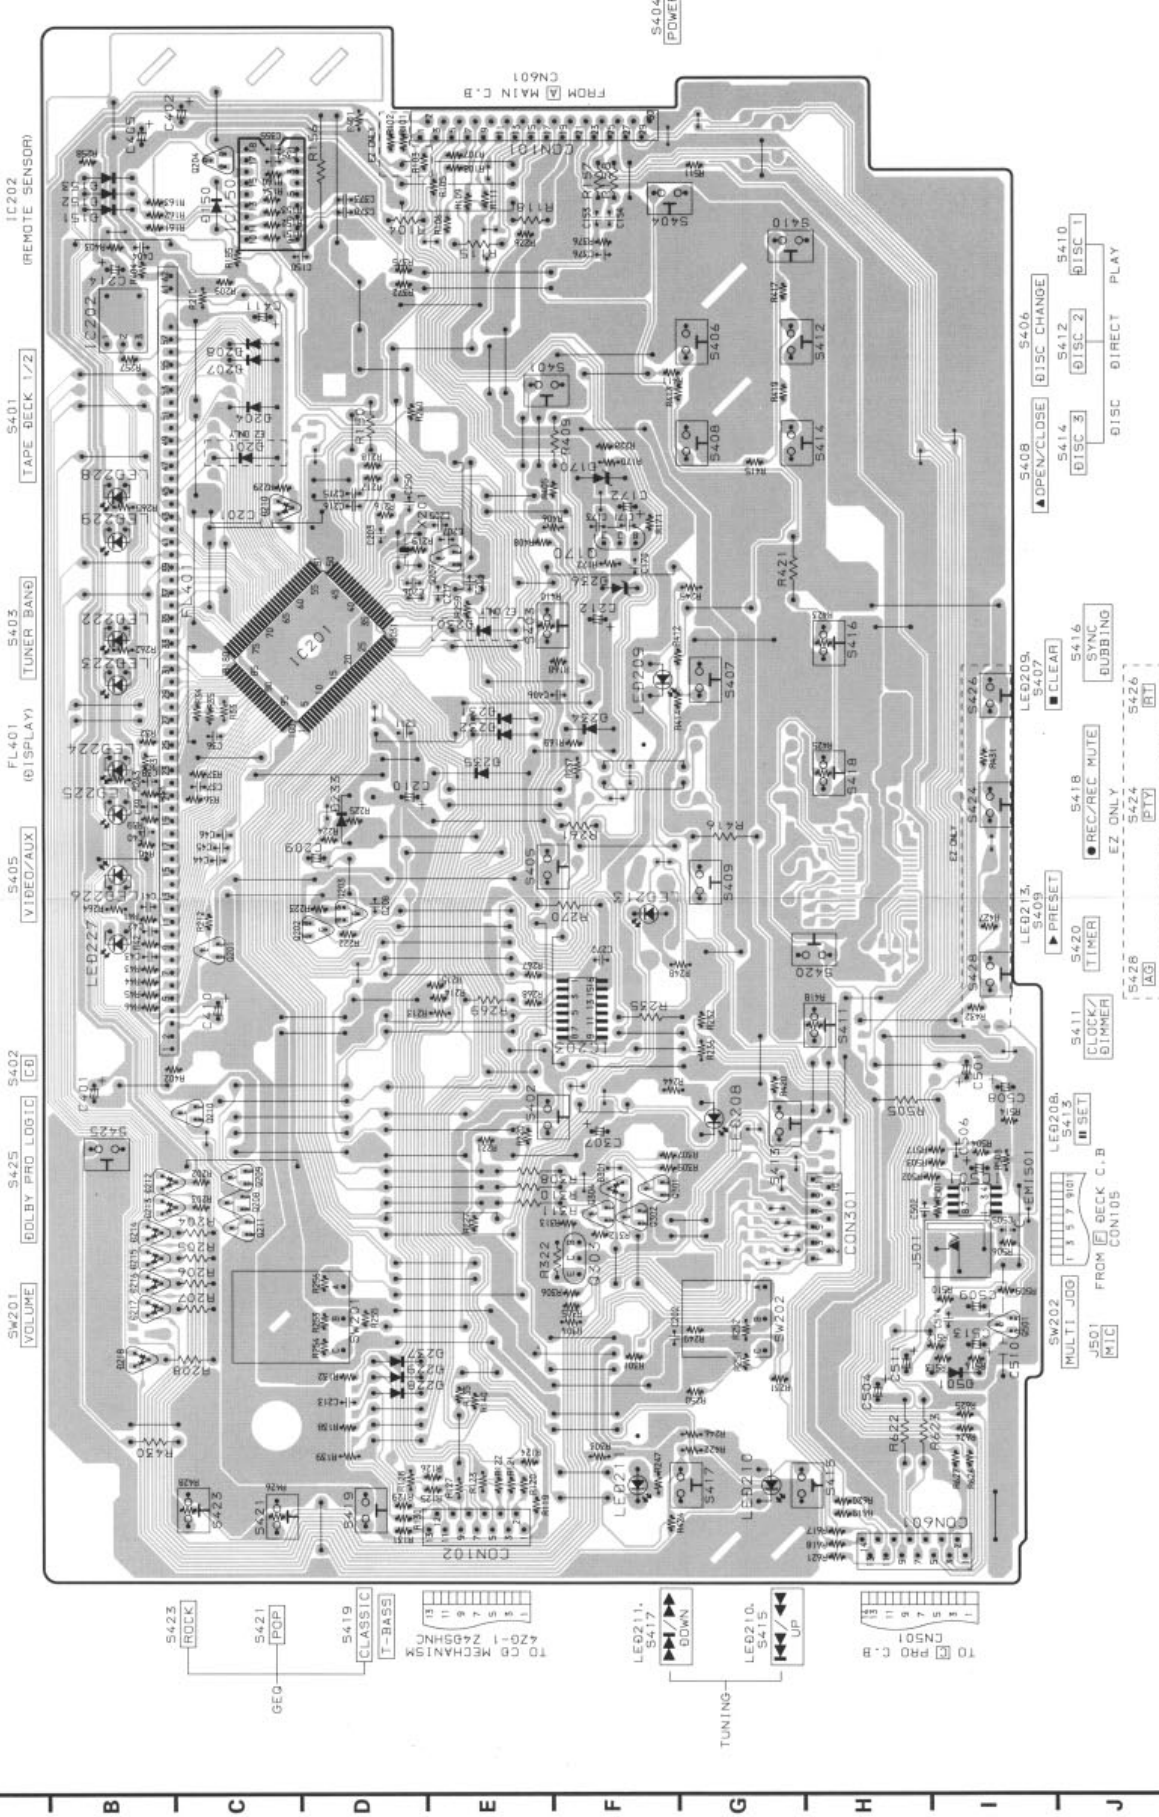





SCHEMATIC DIAGRAM - 2 (FRONT)

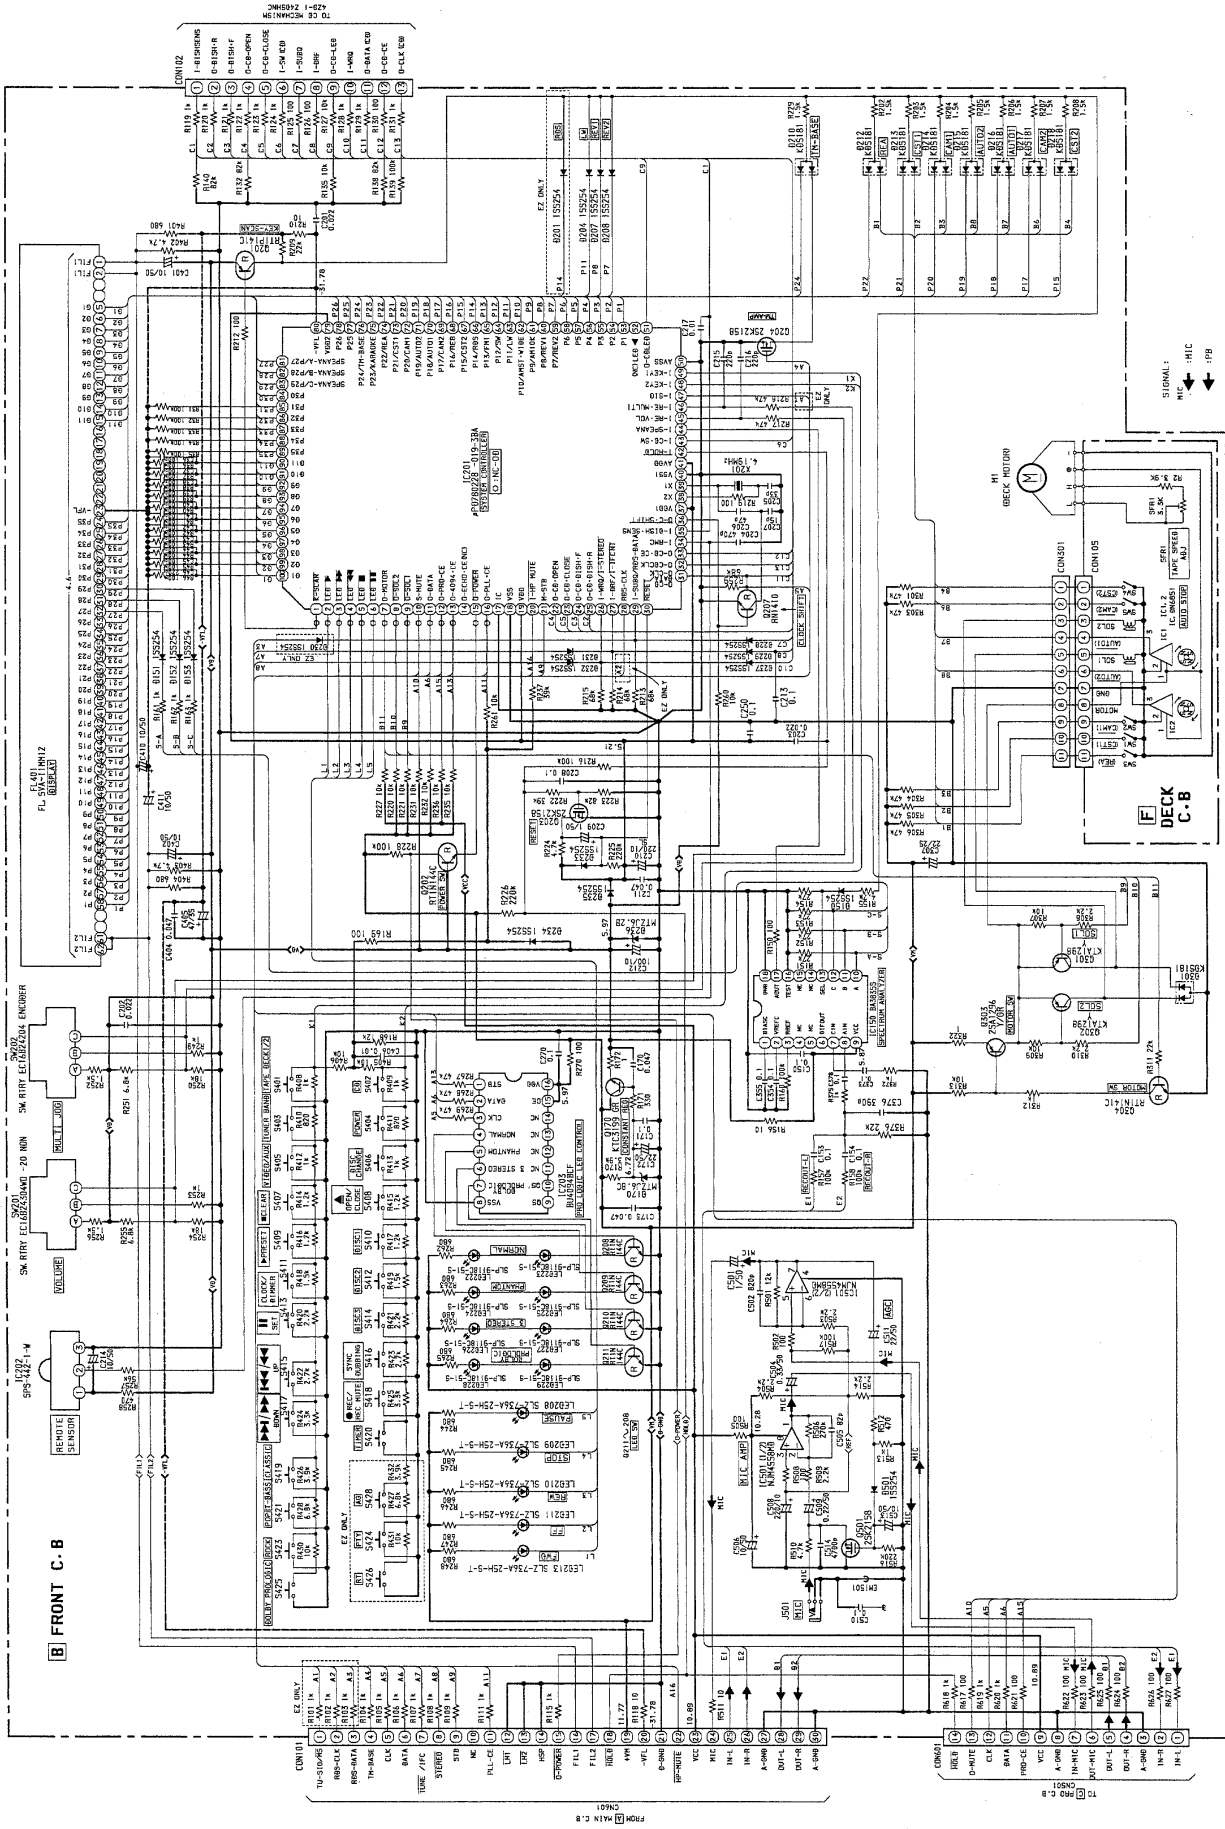


SCHEMATIC DIAGRAM - 3 (PRO)

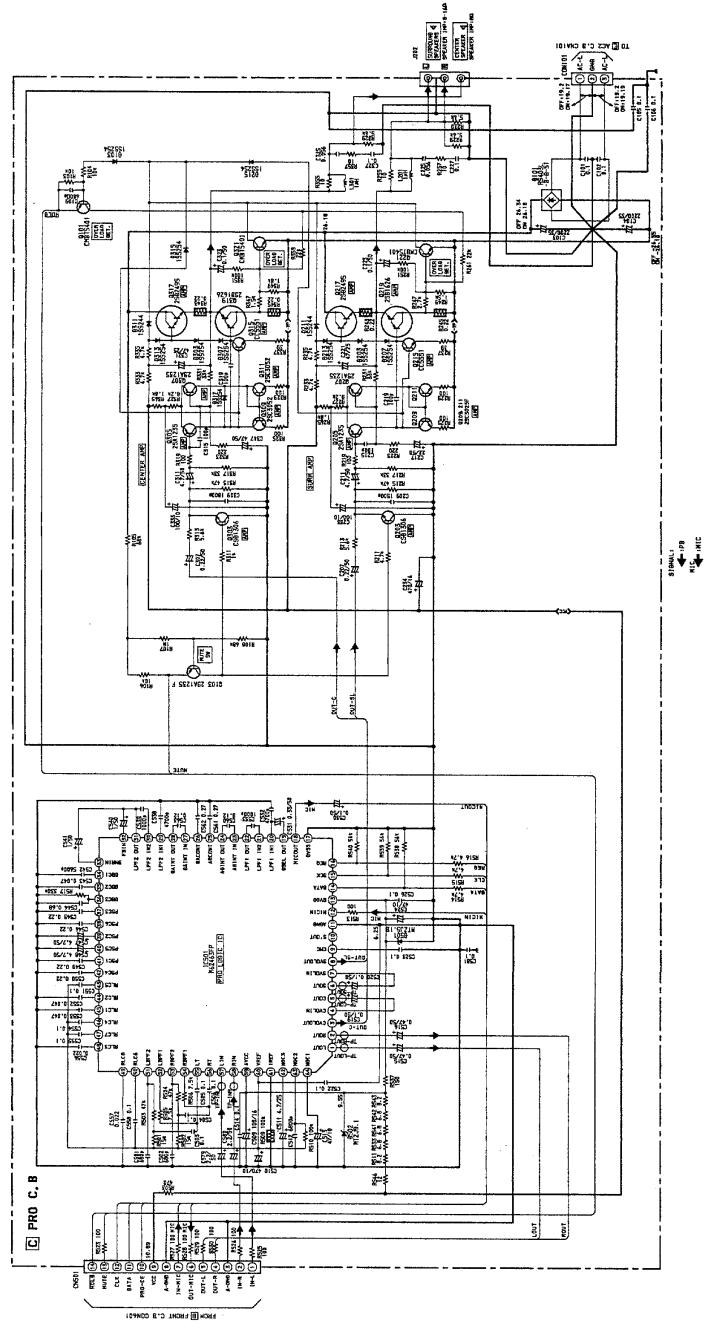


IC BLOCK DIAGRAM - 1

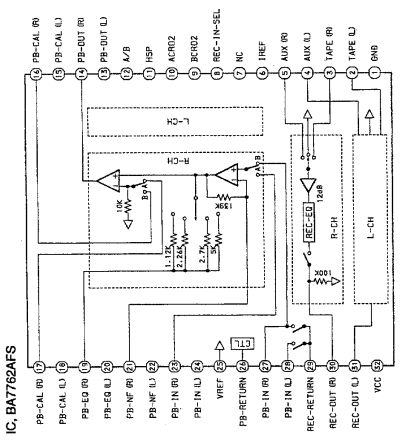

IC, M6246FP-601

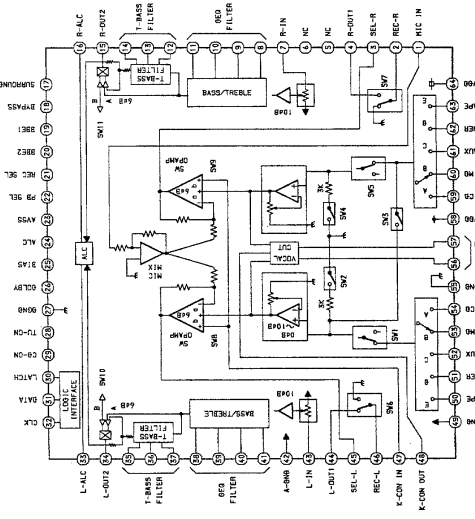

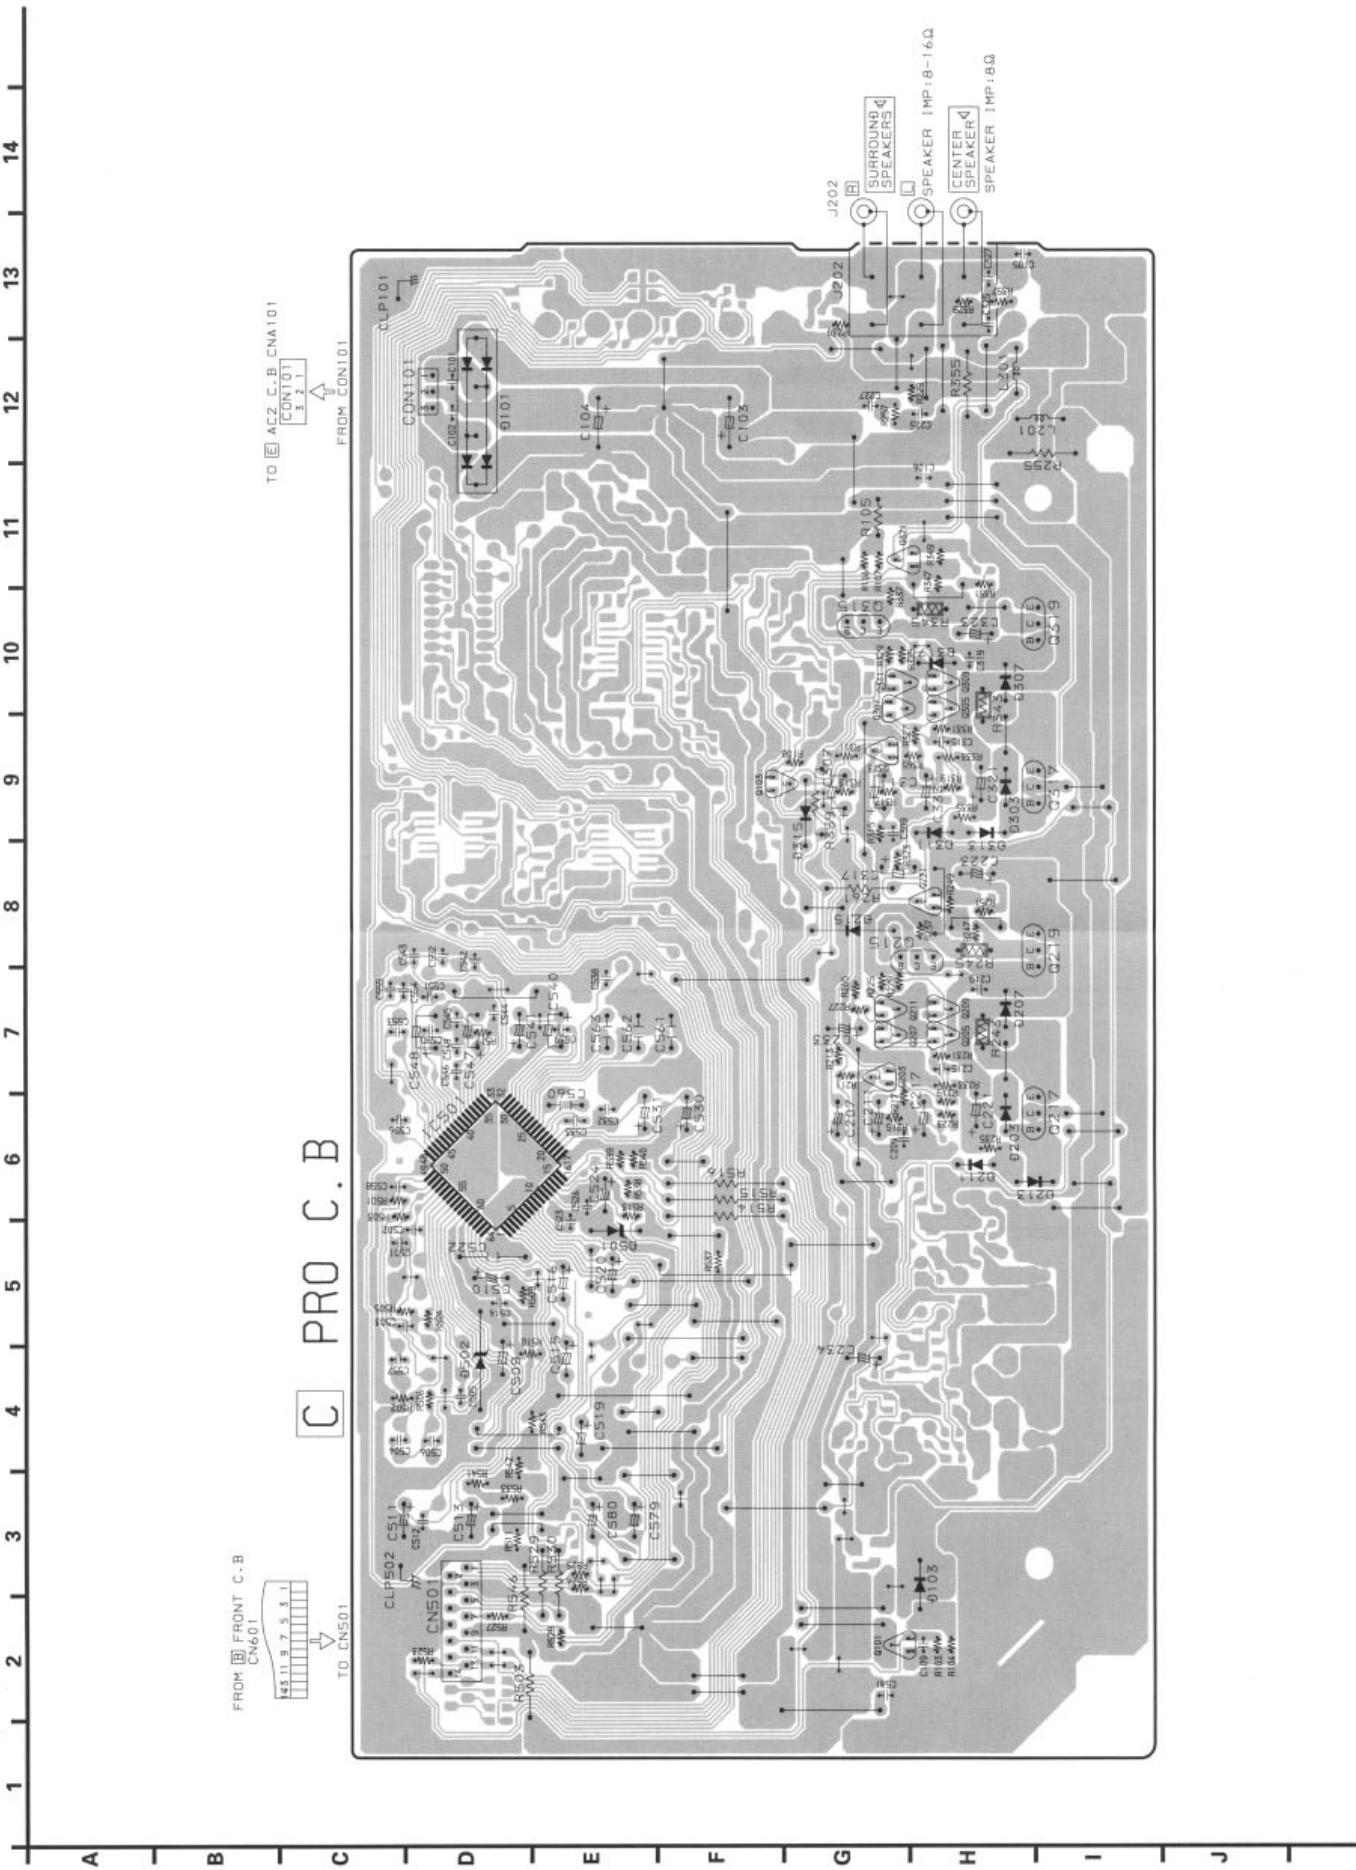

FROM FRONT C.B.  
CN601




TO AC2 C.B. CNA101




# C PRO C.B.


WIRING - 4 (AC)

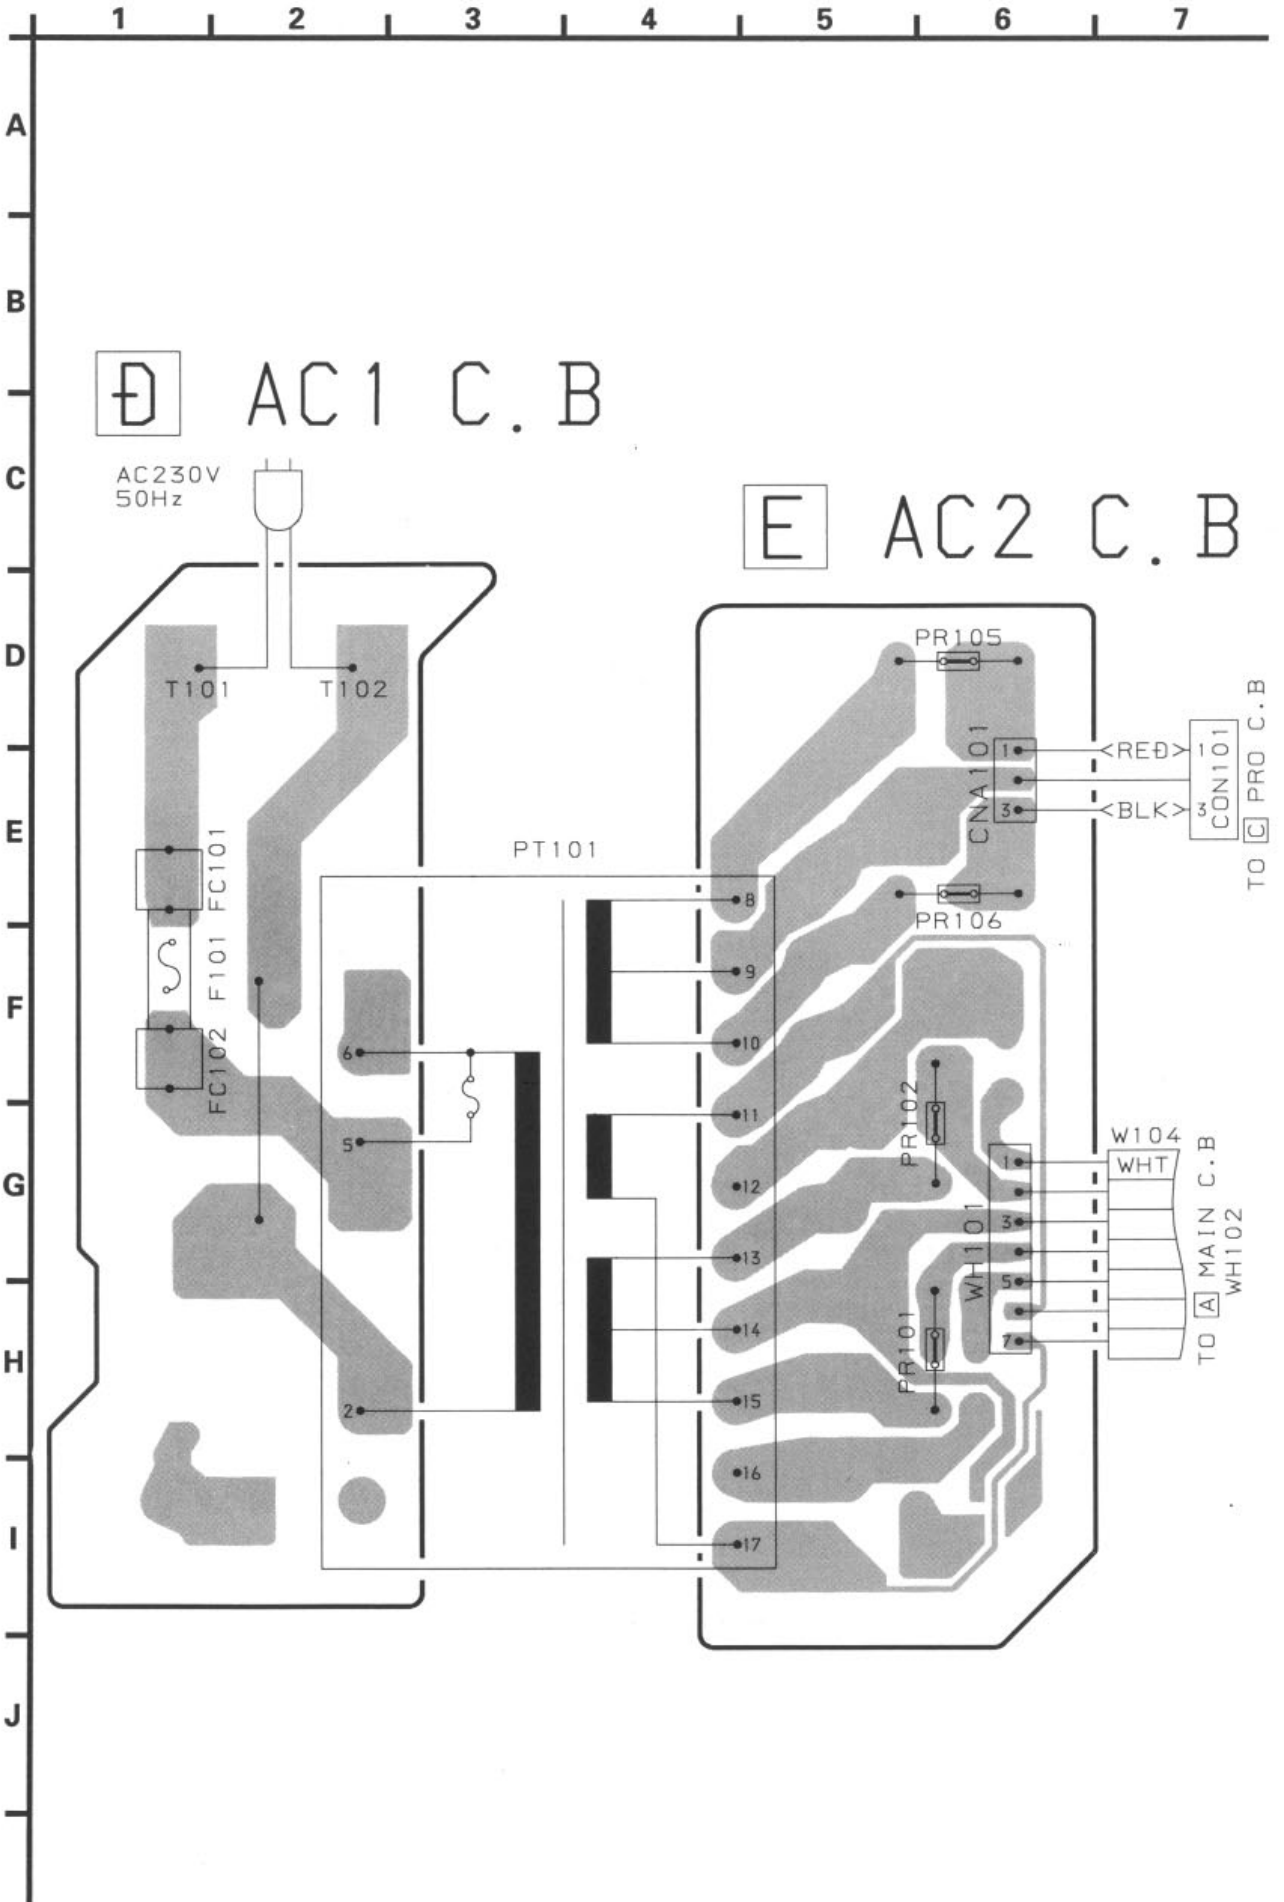

WIRING - 5 (DECK)

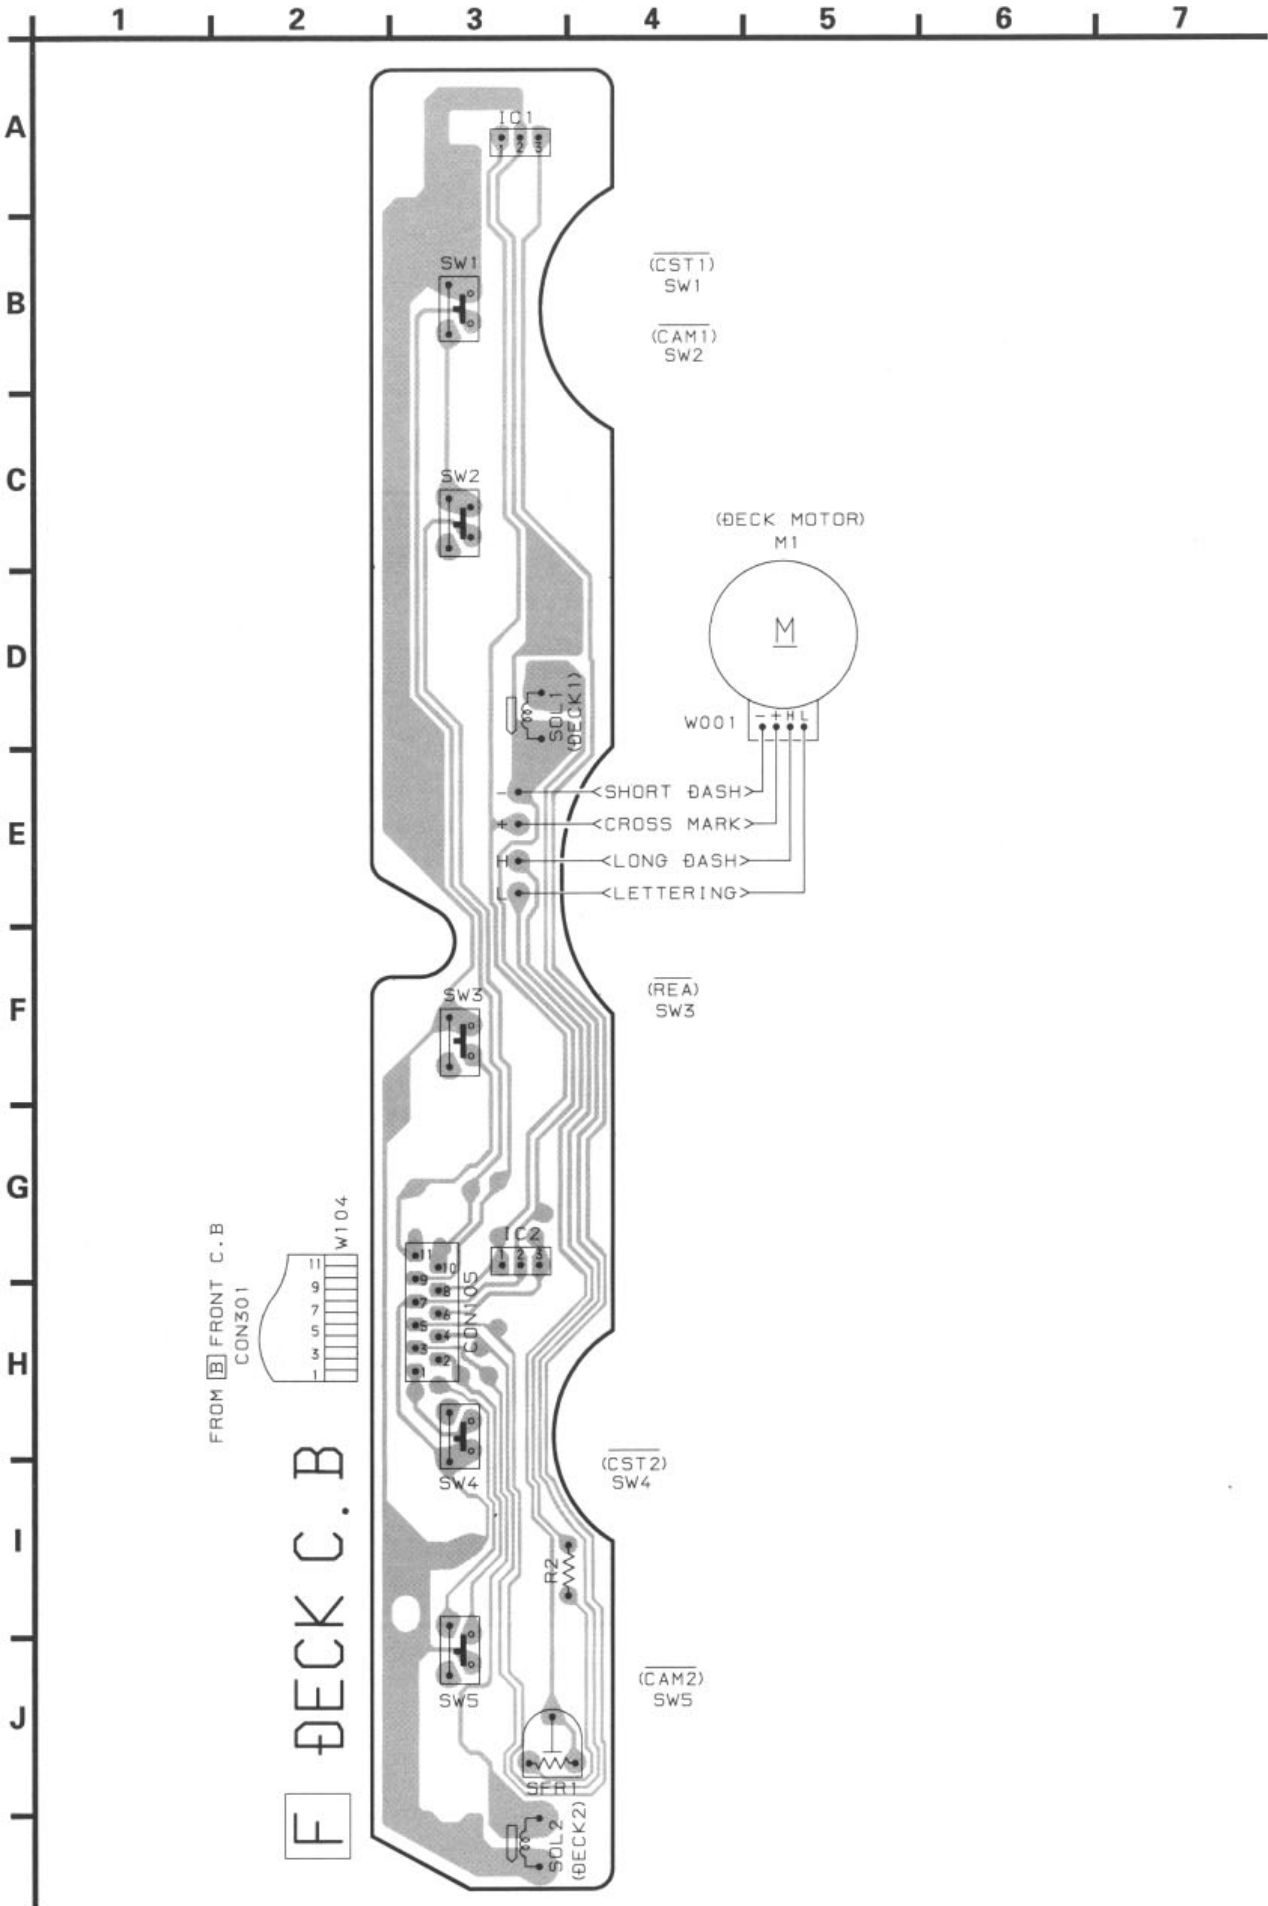


SCHEMATIC DIAGRAM - 4 (MAIN 2 / 2)

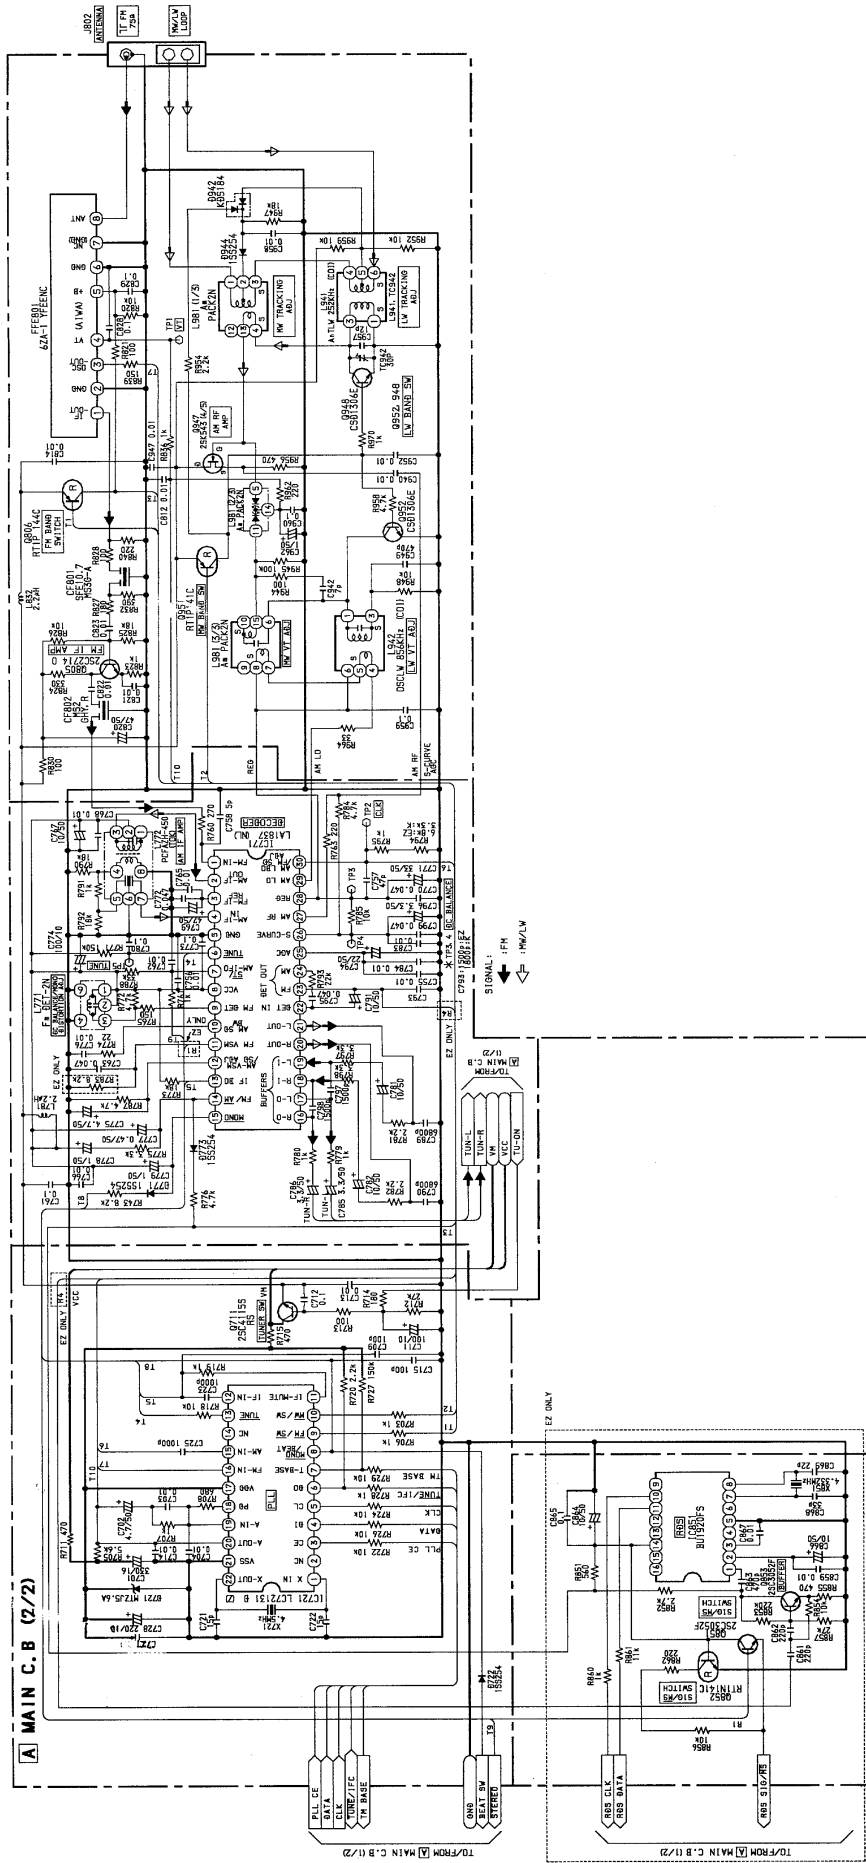


# IC BLOCK DIAGRAM - 2


## IC, LC72131D

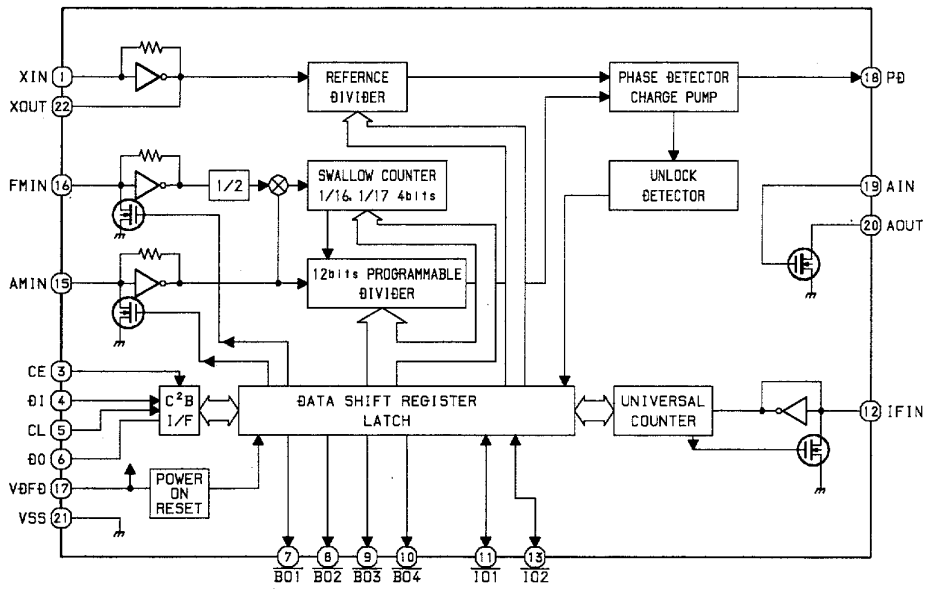


## IC, LA1837NL

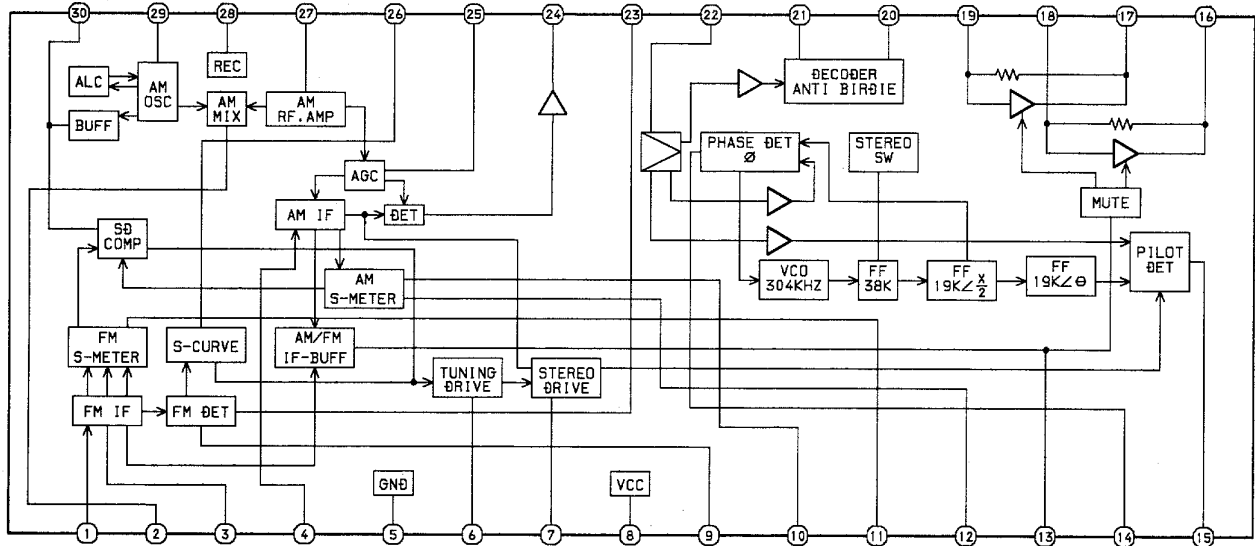

IC, BA3835S

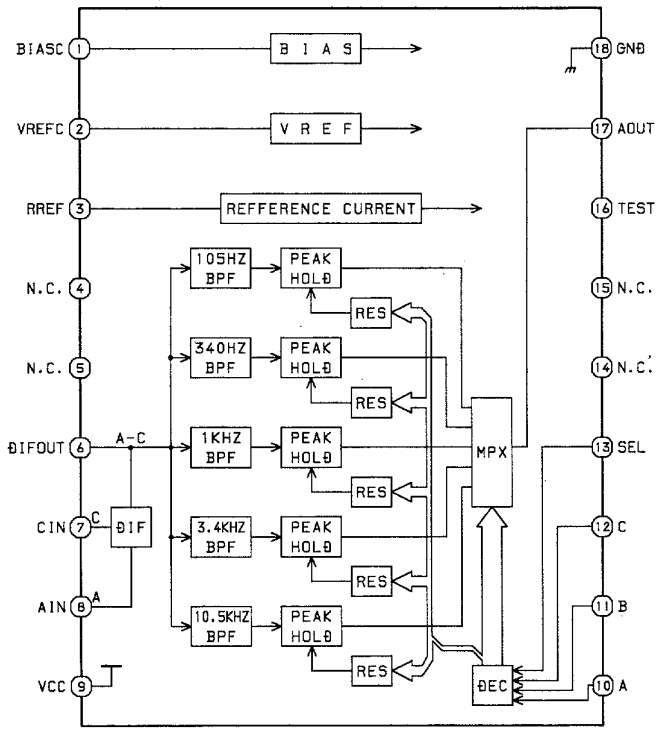

IC, BU4094BCF

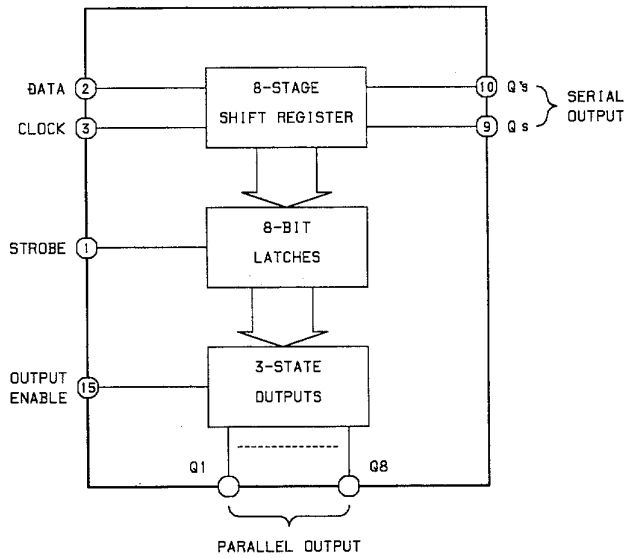

TRUTH TABLE


CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
$\uparrow$	L	X	X	Z	Z	Q7	NO Chg.
$\downarrow$	L	X	X	Z	Z	No Chg.	Qs
$\uparrow$	H	L	X	No Chg.	No Chg.	Q7	No Chg.
$\uparrow$	H	H	L	L	Qn-1	Q7	No Chg.
$\uparrow$	H	H	H	H	Qn-1	Q7	No Chg.
$\downarrow$	H	X	X	No Chg.	No Chg.	No Chg.	Qs

Z=High Impedance


X=Don't Care



IC, M62463FP

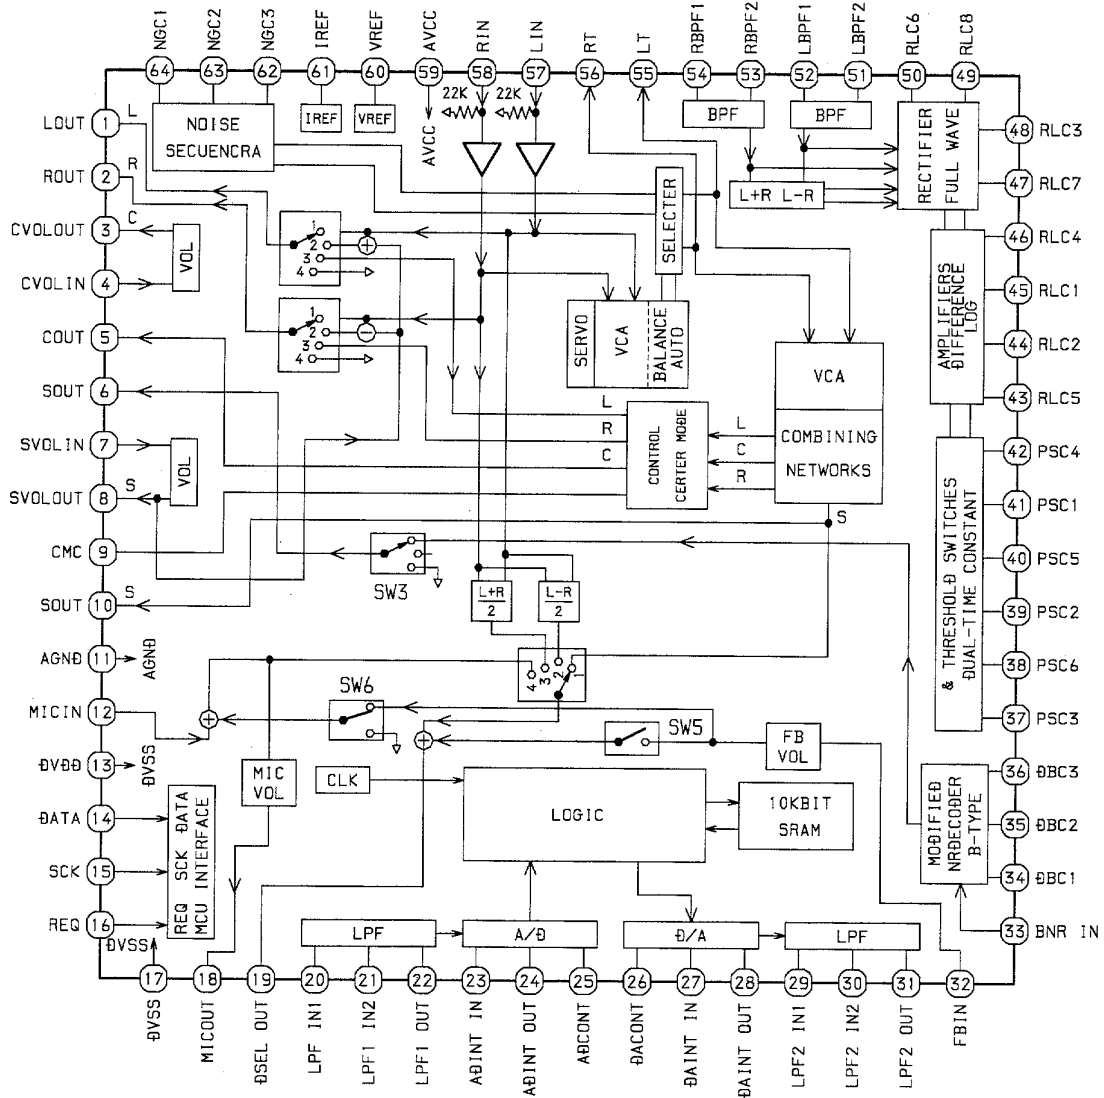


IC, BU1920FS <EZ>

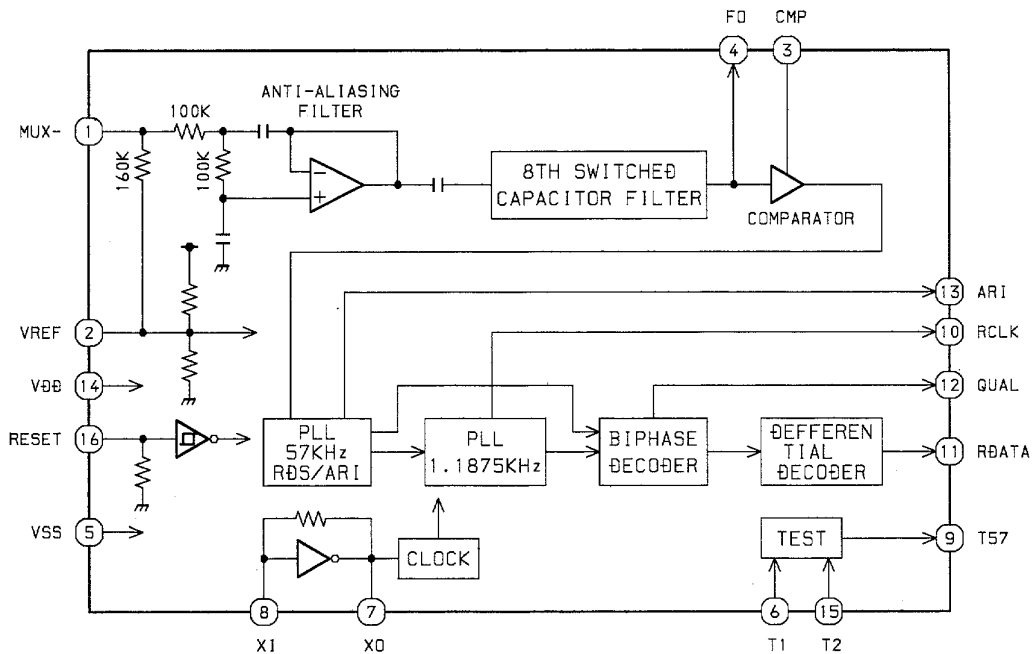

# FL GRID ASSIGNMENT AND ANODE CONNECTION

## GRID ASSIGNMENT

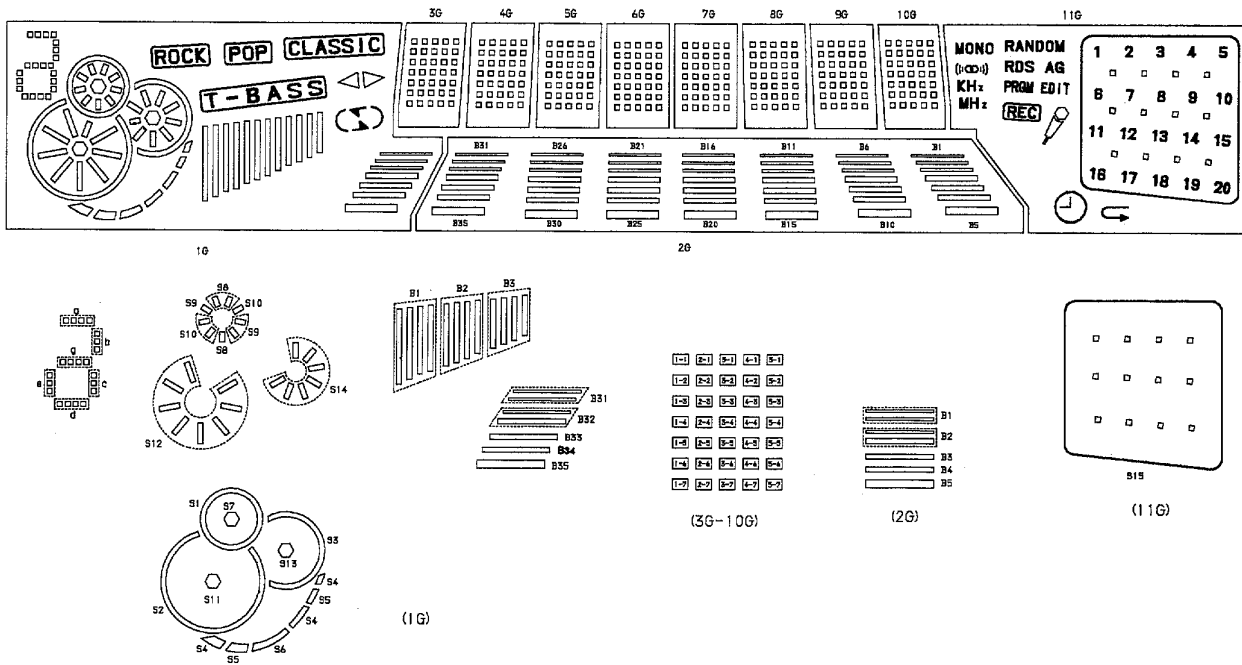

## ANODE CONNECTION

	1G	2G	3G-10G	11G
P1	a, g, d	B35	1-1	<b>MONO</b>
P2	b	B30	2-1	<b>((∞))</b>
P3	c	B25	3-1	<b>KHz</b>
P4	e	B20	4-1	<b>MHz</b>
P5	S1	B15	5-1	<b>RDS</b>
P6	S7	B10	1-2	<b>RANDOM</b>
P7	S8	B5	2-2	<b>AG</b>
P8	S9	B34	3-2	
P9	S10	B29	4-2	<b>EON</b>
P10	S2	B24	5-2	<b>EDIT</b>
P11	S11	B19	1-3	<b>REC</b>
P12	S12	B14	2-3	
P13	S3	B9	3-3	
P14	S13	B4	4-3	
P15	S14	B33	5-3	S15
P16	S4	B28	1-4	20
P17	S5	B23	2-4	19
P18	S6	B18	3-4	18

	1G	2G	3G-10G	11G
P19	<b>ROCK</b>	B13	4-4	17
P20	<b>POP</b>	B8	5-4	16
P21	<b>CLASSIC</b>	B3	1-5	15
P22		B32	2-5	14
P23		B27	3-5	13
P24		B22	4-5	12
P25		B17	5-5	11
P26		B12	1-6	10
P27	<b>T-BASS</b>	B7	2-6	9
P28	B1	B2	3-6	8
P29	B2	B31	4-6	7
P30	B3	B26	5-6	6
P31	B31	B21	1-7	5
P32	B32	B16	2-7	4
P33	B33	B11	3-7	3
P34	B34	B6	4-7	2
P35	B35	B1	5-7	1

# IC DESCRIPTION

IC,  $\mu$ PD780228-019-3BA



Pin No.	Pin Name	I/O	Description
1	$\overline{\text{K-SCAN}}$	O	Key scan output.
2	$\overline{\text{LED}} \blacktriangleright$	O	$\blacktriangleright$ LED $\overline{\text{ON/OFF}}$ output.
3	$\overline{\text{LED}} \blacktriangleright\blacktriangleright$	O	$\blacktriangleright\blacktriangleright$ LED $\overline{\text{ON/OFF}}$ output.
4	$\overline{\text{LED}} \blacktriangleleft\blacktriangleleft$	O	$\blacktriangleleft\blacktriangleleft$ LED $\overline{\text{ON/OFF}}$ output.
5	$\overline{\text{LED}} \blacksquare$	O	$\blacksquare$ LED $\overline{\text{ON/OFF}}$ output.
6	$\overline{\text{LED}} \parallel$	O	$\parallel$ LED $\overline{\text{ON/OFF}}$ output.
7	O-MOTOR	O	DECK MOTOR $\overline{\text{ON/OFF}}$ output.
8	$\overline{\text{O-SOL2}}$	O	DECK 2 solenoid output.
9	$\overline{\text{O-SOL1}}$	O	DECK 1 solenoid output.
10	S-MUTE	O	Surround mute output.
11	O-DATA	O	Data output for MAIN,FRONT,PRO C.B.
12	O-PRO-CE	O	Prologic IC chip enable output.
13	O-4094.CE	O	Latch strobe output to shift register IC.
14	O-ECHO.CE (N.C)	-	Not connected.
15	$\overline{\text{O-POWER}}$	O	System power supply $\overline{\text{ON/OFF}}$ output.
16	O-PLL.CE	O	PLL IC chip enable output.
17	IC	-	Internal connection.(Connected to GND.)
18	VSS	-	GND.
19	VDD	-	Power supply input.
20	$\overline{\text{I-HP MUTE}}$	I	"L" input prologic DSP off.
21	M-STB	O	Latch strobe output for MAIN C.B.
22	O-CD.OPEN	O	CD tray open data output.
23	O-CD.CLOSE	O	CD tray close data output.
24	O-CD.DISH.F	O	CD turntable forward rotation output.
25	O-CD.DISH.R	O	CD turntable reverse rotation output.
26	$\overline{\text{I-WRQ/I-STEREO}}$	I	CD WRQ input/Tuner stereo input.
27	$\overline{\text{I-DRF/I-IFCNT}}$	I	CD DRF input/Tune IF count serial data input.
28	RDS CLK	I	Tuner RDS clock input.
29	$\overline{\text{I-SUBQ/RDS-DATA}}$	I	CD SUBQ data input/RDS data input.
30	$\overline{\text{RESET}}$	I	System reset.
31	O-CD DATA/O-CLK	O	CD data output/Main PLL shift register clock output.
32	O-CDCLK	O	CD clock output.
33	O-CD.CE	O	CD enable output.
34	I-RMC	I	System remote control input.
35	$\overline{\text{I.DISH.SENSE}}$	I	CD turntable photo sensor input.
36	$\overline{\text{O-C.SHIFT}}$	O	Micon clock shift output.
37	VDD1	-	Power supply input.
38,39	X2,X1	-	4.19MHz oscillator circuit.
40	VSS1	-	GND.
41	AVDD	-	Power supply input.
42	$\overline{\text{I-HOLD}}$	I	Power failure detected input "L" to stop clock and main memory. "H" for normal operation.
43	$\overline{\text{I-CD.SW}}$	I	CD mecha switch input.

Pin No.	Pin Name	I/O	Description
44	I-SPEANA	I	A/D input for spectrum analyser display.
45	I-RE.VOL	I	Volume jog AD input.
46	I-RE.MULTI	I	Multi jog AD input.
47	I-SIG	I	RDS Tuner signal input.
48,49	I-KEY2,1	I	Key2,1 input.
50	AVSS	-	GND.
51	O-CDLED	O	CD flash window LED ON/OFF output.
52	LED ◀ (N.C)	O	◀ LED switch ON/OFF output. (Not connected)
53~58	P1~P6	O	FL segment P1~6 output.
59	P7/REV2	I/O	FL segment P7 output / REV2 data input.
60	P8/REV1	I/O	FL segment P8 output / REV1 data input.
61	P9/AM10K	I/O	FL segment P9 output / AM10K data input.
62	P10/AMST.WIDE	I/O	FL segment P10 output / AMSTWIDE data input.
63	P11/LW	I/O	FL segment P11 output / LW mode data input.
64	P12/SW	I/O	FL segment P12 output / SW mode data input.
65	P13/FM1	I/O	FL segment P13 output / FM1 data input.
66	P14/RDS	I/O	FL segment P14 output / RDS data input.
67	P15/CST2	I/O	FL segment P15 output / DECK2 cassette detect switch data input.
68	P16/REB	I/O	FL segment P16 output / DECK2 side B record OK switch data input.
69	P17/CAM2	I/O	FL segment P17 output / DECK2 CAM switch data input.
70	P18/AUTO1	I/O	FL segment P18 output / DECK1 AUTO stop switch data input.
71	P19/AUTO2	I/O	FL segment P19 output / DECK2 AUTO stop switch data input.
72	P20/CAM1	I/O	FL segment P20 output / DECK1 CAM stop switch data input.
73	P21/CST1	I/O	FL segment P21 output / DECK1 cassette detect switch data input.
74	P22/REA	I/O	FL segment P22 output / DECK2 side A record OK switch data input.
75	P23/KARAOKE	I/O	FL segment P23 output / KARAOKE data input.
76	P24/TM-BASE	I/O	FL segment P24 output / TM-BASE data input.
77,78	P25,P26	O	FL segment P25,P26 output.
79	VDD2	-	Power supply input.
80	-VFL	-	Power supply for FL display.
81	SPEANA-A/P27	O	FL segment P27 output / Spectrum analyser band switching data output.
82	SPEANA-B/P28	O	FL segment P28 output / Spectrum analyser band switching data output.
83	SPEANA-C/P29	O	FL segment P29 output / Spectrum analyser band switching data output.
84~89	P30~P35	O	FL segment P30~35 output.
90~100	G11~G1	O	FL grid G11~1 output.


IC, LC72131

Pin No.	Pin Name	I/O	Description																								
1	XIN	I/O	A crystal oscillator (4.5MHz) is connected between these pins.																								
22	XOUT																										
2	NC	-	Not used.																								
3	CE	I	To enable the IC. Active "H".																								
4	DI	I	Digital data input from CPU ( $\mu$ PD780228-019-3BA) when relevant key is operated. Active "H".																								
5	CL	I	To clock in the data DI.																								
6	DO	O	Digital data output to CPU ( $\mu$ PD780228-019-3BA).																								
7	T-BASE	O	Outputs a reference clock signal (8Hz) for the clock.																								
8	MONO / BEAT	O	Outputs "H" when MONO / BEAT is switched.																								
9	$\overline{\text{FM}} / \overline{\text{SW}}$	O	Outputs "L" or "H" as follows: <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">2 BAND</th> <th colspan="3">3 BAND</th> <th colspan="3">3 BAND</th> </tr> <tr> <th>AM</th> <th>FM</th> <th>LW</th> <th>MW</th> <th>FM</th> <th>MW</th> <th>SW</th> <th>FM</th> </tr> </thead> <tbody> <tr> <td>H</td> <td>L</td> <td>H</td> <td>H</td> <td>L</td> <td>H</td> <td>L</td> <td>L</td> </tr> </tbody> </table>	2 BAND		3 BAND			3 BAND			AM	FM	LW	MW	FM	MW	SW	FM	H	L	H	H	L	H	L	L
2 BAND		3 BAND			3 BAND																						
AM	FM	LW	MW	FM	MW	SW	FM																				
H	L	H	H	L	H	L	L																				
10	$\overline{\text{MW}} / \overline{\text{SW}}$	O	Outputs "L" or "H" as follows: <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">2 BAND</th> <th colspan="3">3 BAND</th> <th colspan="3">3 BAND</th> </tr> <tr> <th>AM</th> <th>FM</th> <th>LW</th> <th>MW</th> <th>FM</th> <th>MW</th> <th>SW</th> <th>FM</th> </tr> </thead> <tbody> <tr> <td>L</td> <td>L</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> <td>L</td> </tr> </tbody> </table>	2 BAND		3 BAND			3 BAND			AM	FM	LW	MW	FM	MW	SW	FM	L	L	H	L	L	L	H	L
2 BAND		3 BAND			3 BAND																						
AM	FM	LW	MW	FM	MW	SW	FM																				
L	L	H	L	L	L	H	L																				
11	IF-MUTE	O	To control internal counter.																								
12	IF-IN	I	General purpose counter input.																								
13	$\overline{\text{TUNE}}$	I	Receives "L" when station is tuned.																								
14	NC	-	Not used.																								
15	AM-IN	I	Receives the AM local oscillator frequency signal.																								
16	FM-IN	I	Receives the FM local oscillator frequency signal.																								
17	VDD	-	Supply power to IC (+5V).																								
18	PD	O	PLL charge pump output.																								
19	A-IN	I	The MOS transistor for PLL active low pass filter.																								
20	A-OUT	O																									
21	VSS	-	Ground.																								

# ADJUSTMENT <TUNER / DECK>

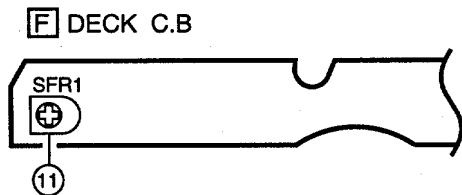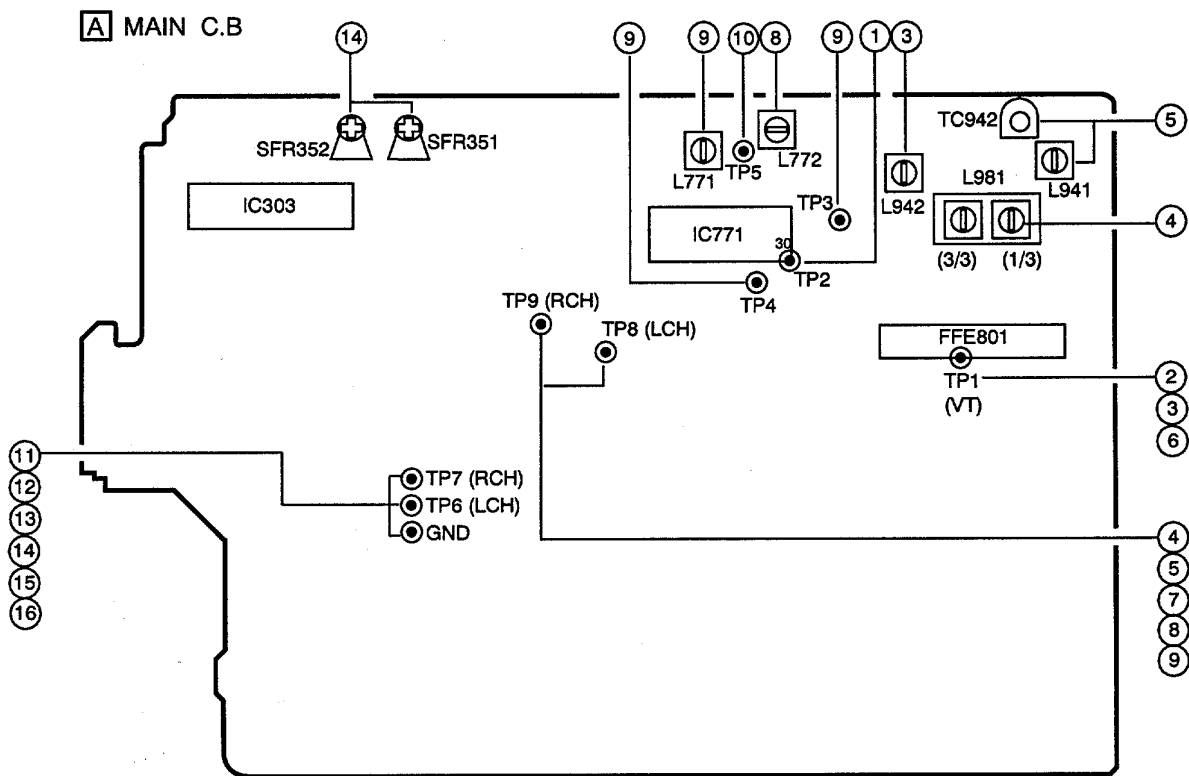

DECK-1 P, DECK-2 R / P / E HEAD

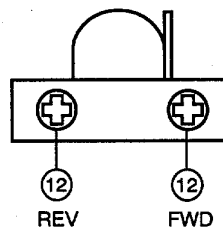

## < TUNER SECTION >

1. Clock Frequency Check  
 Settings : • Test point : TP2  
 Method : Set to MW 1602kHz and check that the test point is 2052kHz  $\pm$  45Hz.
2. MW VT Check  
 Settings : • Test point : TP1  
 Method : Set to MW 1602kHz and MW 531kHz and check that the test point is less than 8.0V(1602kHz) and more than 0.6V(531kHz).
3. LW VT Adjustment  
 Settings : • Test point : TP1  
 • Adjustment location : L942  
 Method : Set to LW 144kHz and adjust L942 so that the test point becomes 1.3V  $\pm$  0.05V. Then set to LW 290 kHz and check that the test point is less than 8.0V.
4. MW Tracking Adjustment  
 Settings : • Test point : TP8(Lch), TP9(Rch)  
 • Adjustment location :  
 L981(1/3) ..... 999kHz  
 Method : Set to MW 999kHz and adjust L981(1/3) so that the test point is max.
5. LW Tracking Adjustment  
 Settings : • Test point : TP8(Lch), TP9(Rch)  
 • Adjustment location :  
 L941 ..... 144kHz  
 TC942 ..... 290kHz  
 Method : Setup TC942 to center before adjustment. The level at 144kHz is adjusted to max by L941. Then the level at 290 kHz is adjusted to max by TC942.

6. FM VT Check  
 Settings : • Test point : TP1  
 Method : Set to FM 108.0MHz and check that the test point is less than 8.0V.  
 Set to FM 87.5MHz and check that the test point is more than 0.5V.
7. FM Tracking Check  
 Settings : • Test point : TP8(Lch), TP9(Rch)  
 Method : • Set to FM 98.0MHz and check that the test point is less than 10dB.
8. MW IF Adjustment  
 Settings : • Test point : TP8(Lch), TP9(Rch)  
 • Adjustment location :  
 L772 ..... 450kHz
9. DC Balance / Mono Distortion Adjustment  
 Settings : • Test point : TP3, TP4 (DC Balance)  
 TP8, TP9 (Distortion)  
 • Adjustment location : L771  
 • Input level : 54dB  
 Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes  $0V \pm 0.04V$ .  
 Next, check that the distortion is less than 1.3%
10. Auto Stop Level Check  
 MW  
 Settings : • Test point : TP5  
 • Input level : 52dB  
 Method : Set to MW 999kHz and check that the auto stop is at 37 ~ 62dB.
- FM  
 Settings : • Test point : TP5  
 • Input level : 25dB  
 Method : Set to FM 98.0MHz and check that the auto stop is at  $25dB \pm 10dB$ .

< DECK SECTION >

11. Tape Speed Adjustment  
 Settings : • Test tape : TTA-100  
 • Test point : TP6(Lch), TP7(Rch)  
 • Adjustment location : SFR1  
 Method : Play back the test tape and adjust SFR1 so that the frequency counter reads  $3000Hz \pm 5Hz$ .
12. Head Azimuth Adjustment  
 Settings : • Test tape : TTA-300  
 • Test point : TP6(Lch), TP7(Rch)  
 • Adjustment location : Head azimuth  
 adjustment screw  
 Method : Play back (FWD) the 10kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
13. PB Frequency Response Check (DECK 1, DECK 2)  
 Settings : • Test tape : TTA-330  
 • Test point : TP6(Lch), TP7(Rch)  
 Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.
14. REC/PB Frequency Response Adjustment  
 Settings : • Test tape : TTA-602  
 • Test point : TP6(Lch), TP7(Rch)  
 • Input signal : 1kHz / 10kHz (LINE IN)  
 • Adjustment location : SFR351 (Lch)  
 SFR352 (Rch)  
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -28dBV. Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes  $0dB \pm 0.5dB$  with respect to that of the 1kHz signal.
15. PB Sensitivity Check  
 Settings : • Test tape : TTA-200  
 • Test point : TP6(Lch), TP7(Rch)  
 Method : Playback the test tape and check that the output level of the test point is  $300mV \pm 3dB$ .
16. REC/PB Sensitivity Check  
 Settings : • Test tape : TTA-602  
 • Test point : TP6(Lch), TP7(Rch)  
 • Input signal : 1kHz (LINE IN)  
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -8dBV. Record and play back the 1kHz signals and check that the output is  $0 \pm 3.5dB$ .

# PRACTICAL SERVICE FIGURE

## <TUNER SECTION>

### <FM SECTION>

IHF Sensitivity : Less than 11 / 10 / 10dB  
(THD 3%) [at 87.5 / 98.0 / 108.0MHz]  
S/N 50dB Quieting sensitivity :  
Less than 38dB  
[at 98.0MHz]  
Signal to noise ratio : Mono : More than 68dB  
Stereo : More than 66dB  
[at 98.0MHz ]  
Distortion : Mono : Less than 1.2%  
Stereo : Less than 2.0%  
[at 98.0MHz]  
Auto stop level : 25dB ± 10dB [at 98.0MHz]  
Stereo separation : More than 14dB [at 98.0MHz]  
Intermediate frequency : 10.7MHz

### <MW SECTION>

Sensitivity : Less than 60dB  
(S/N 20 dB) [at 603kHz]  
Less than 58dB  
[at 999kHz]  
Less than 58dB  
[at 1404kHz]  
Signal to noise ratio : More than 36dB  
[at 999kHz]  
Distortion : Less than 1.5%  
[at 999kHz]  
Auto stop level : 52dB +10/-15dB  
[at 999kHz]  
Intermediate frequency : 450kHz

### <LW SECTION>


Sensitivity : Less than 70dB  
(S/N 20 dB) [at 144kHz]  
Less than 68dB  
[at 198kHz]  
Less than 66dB  
[at 290kHz]  
Intermediate frequency : 450kHz

## <DECK SECTION>

Tape speed : 3000Hz ± 45Hz  
Wow & flutter : Less than 0.25%  
(W.R.M.S)  
Take-up torque : 30 ~ 55g-cm  
(FWD, REV)  
F.F torque : 75 ~ 180g-cm  
REW torque : 75 ~ 180g-cm  
Back tension : 2 ~ 7g-cm  
(FWD, REV)  
PB output level : 2.8V ± 3dB  
(SP OUT 2V)  
REC/PB output level : -2 ± 3dB  
(SP OUT 2V,NORM)  
Distortion (REC/PB) : Less than 2.0%  
(NORM)  
Noise level (PB) : Less than 25mV  
(NORM, SP OUT 2V)  
Noise level (REC/PB) : Less than 30mV  
(NORM, SP OUT 2V)  
Erasing ratio : More than 60dB  
(at 125Hz, +10VU, NORM)  
Test tape : TTA-602 (NORM)



MECHANICAL EXPLODED VIEW 1 / 1

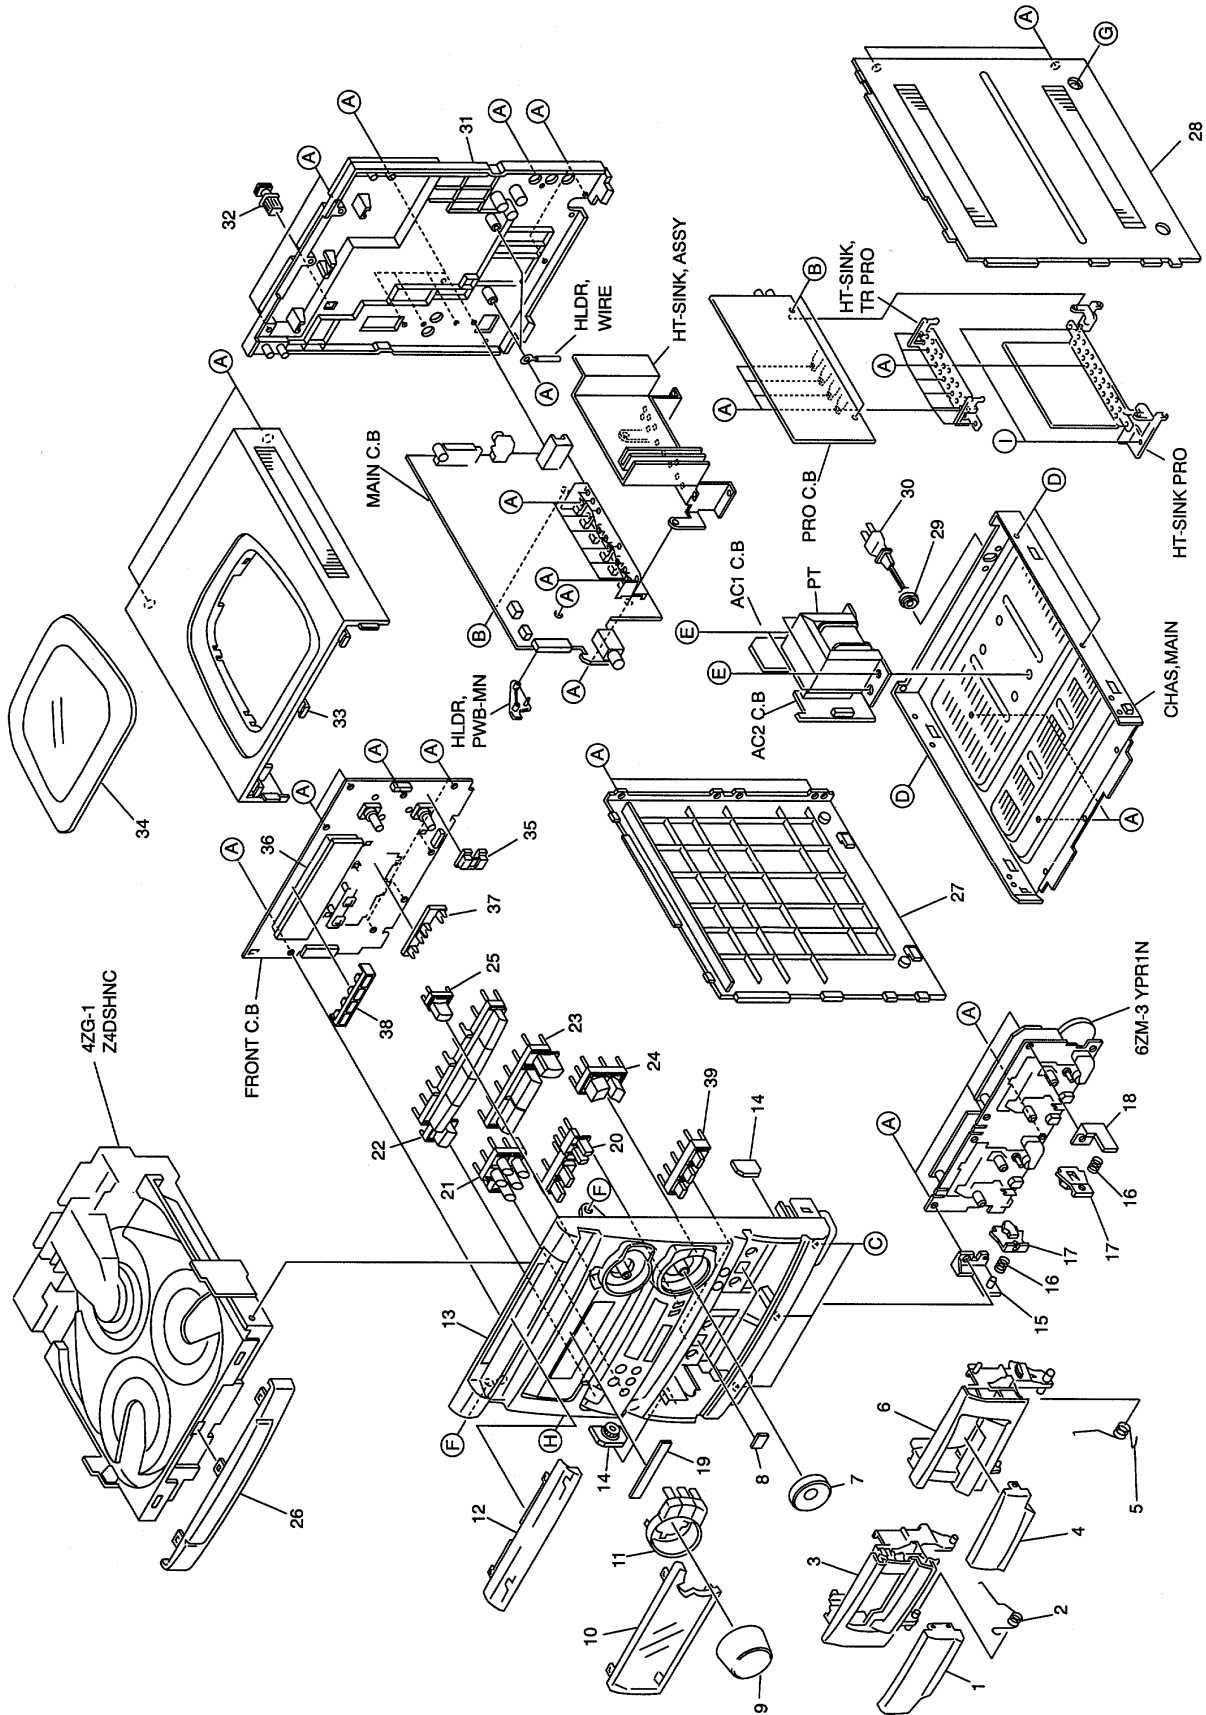



# MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-NB8-012-010		WINDOW, CASS 1	29	87-085-185-010		BUSHING, AC CORD (E)
2	82-NF5-218-010		SPR-T, EJECT 1 (SIN)	30	87-050-034-010		AC CORD ASSY, E<EZ>
3	88-NF8-044-010		BOX, CASS 1 1WAY>	31	88-NFV-024-010		CABI, REAR EZSTNE AV320<EZ>
4	87-NB8-013-010		WINDOW, CASS 2	31	88-NFV-025-010		CABI, REAR KSTNE<K>
5	82-NF5-219-010		SPR-T, EJECT 2 (SIN)	32	84-ZG1-245-210		CAP, OPTICAL
6	88-NF8-043-010		BOX, CASS 2 1WAY	33	87-NF9-055-010		PANEL, TOP
7	88-NF8-016-010		KNOB, RTRY JOG	34	86-NFZ-001-010		WINDOW, TOP
8	81-532-080-010		LABEL, CASS. COMPT	35	88-NF8-207-010		GUIDE, FF
9	87-NB8-015-010		KNOB, RTRY VOL	36	88-NF8-205-010		GUIDE, FL
10	88-NFV-013-010		WINDOW, DISPLAY E AV320<EZ>	37	88-NF8-208-010		GUIDE, PLAY 1WAY
10	88-NFV-014-010		WINDOW, DISPLAY K<K>	38	88-NFV-201-010		GUIDE, PRO
11	88-NFV-007-010		KEY, GEQ PRO	39	88-NF8-015-110		KEY, RDS<EZ>
12	87-NB8-009-010		WINDOW, CD	A	87-067-703-010		TAPPING SCREW, BVT2+3-10
13	88-NFV-003-010		CABI, FR E AV320<EZ>	B	87-NF4-224-010		S-SCREW, IT3B+3-8 CU
13	88-NFV-004-010		CABI, FR K<K>	C	87-067-688-010		BVTT+3-6
14	87-NF8-220-010		DMPR, 150	D	87-721-096-410		QT2+3-10 GLD
15	87-NF4-216-010		HLLDR, LOCK 1	E	87-078-019-010		S-SCREW, IT+4-6
16	86-NF9-224-010		SPR-C, LOCK	F	87-721-097-410		QT2+3-12 GLD
17	82-NF5-229-010		PLATE, LOCK	G	87-067-641-010		UTT2+3-8 (W/O SLOT) BL
18	87-NF4-217-010		HLLDR, LOCK 2	H	87-723-096-410		QT2+3-10W/O SLOT BL
19	88-NFV-010-010		PLATE, PRO	I	87-067-579-010		TAPPING SCREW, BVT2+3-8
20	88-NF8-006-210		KEY, REC				
21	88-NF8-014-110		KEY, CD				
22	88-NF8-007-010		KEY, FUNCTION				
23	88-NF8-019-010		KEY, PLAY 1WAY ASSY				
24	88-NF8-013-010		KEY, ASSY FF				
25	88-NFV-006-010		KEY, PRO				
26	88-NF8-046-010		PANEL, TRAY				
27	87-NB8-005-010		PANEL, LEFT				
28	88-NF8-047-010		PANEL, RIGHT 2				

TAPE MECHANISM EXPLODED VIEW 1 / 1

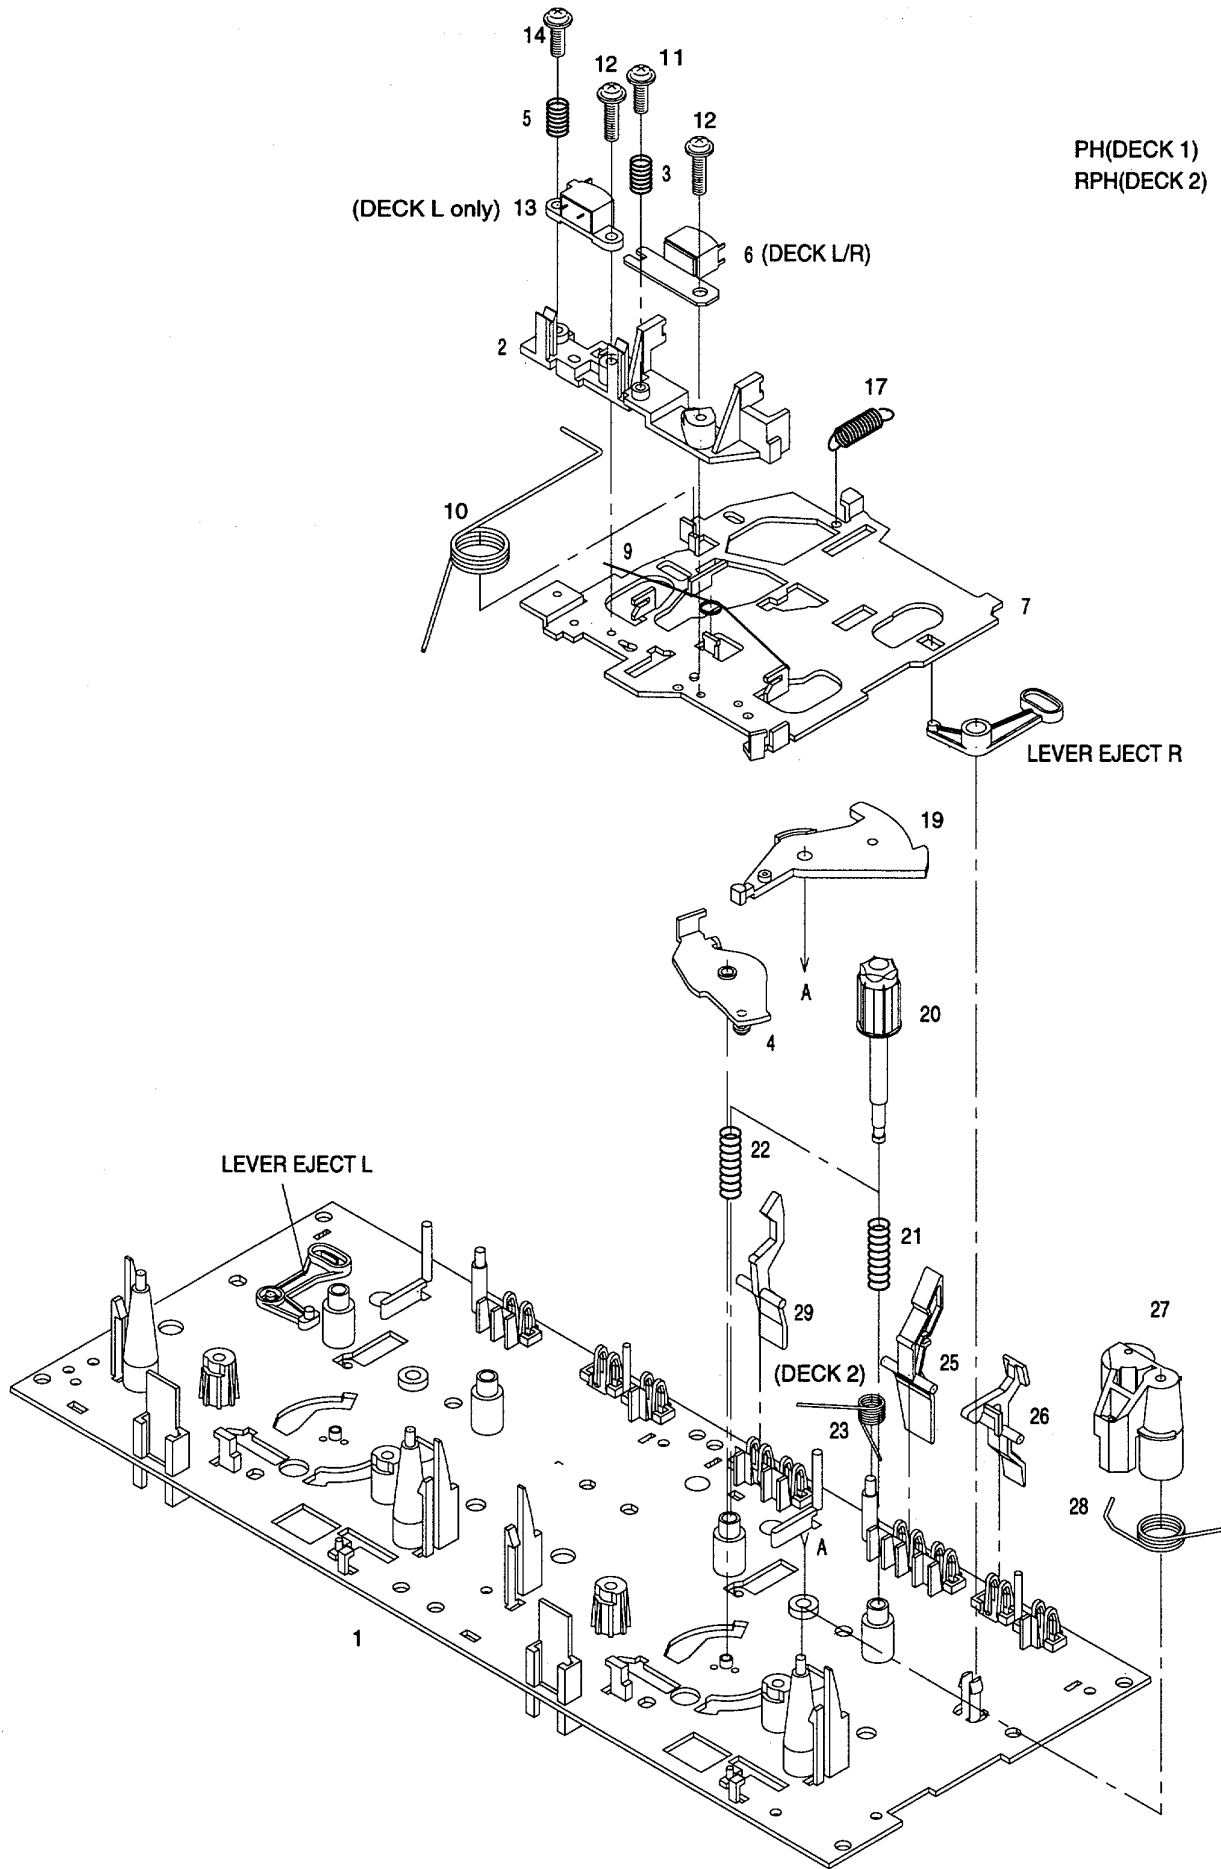


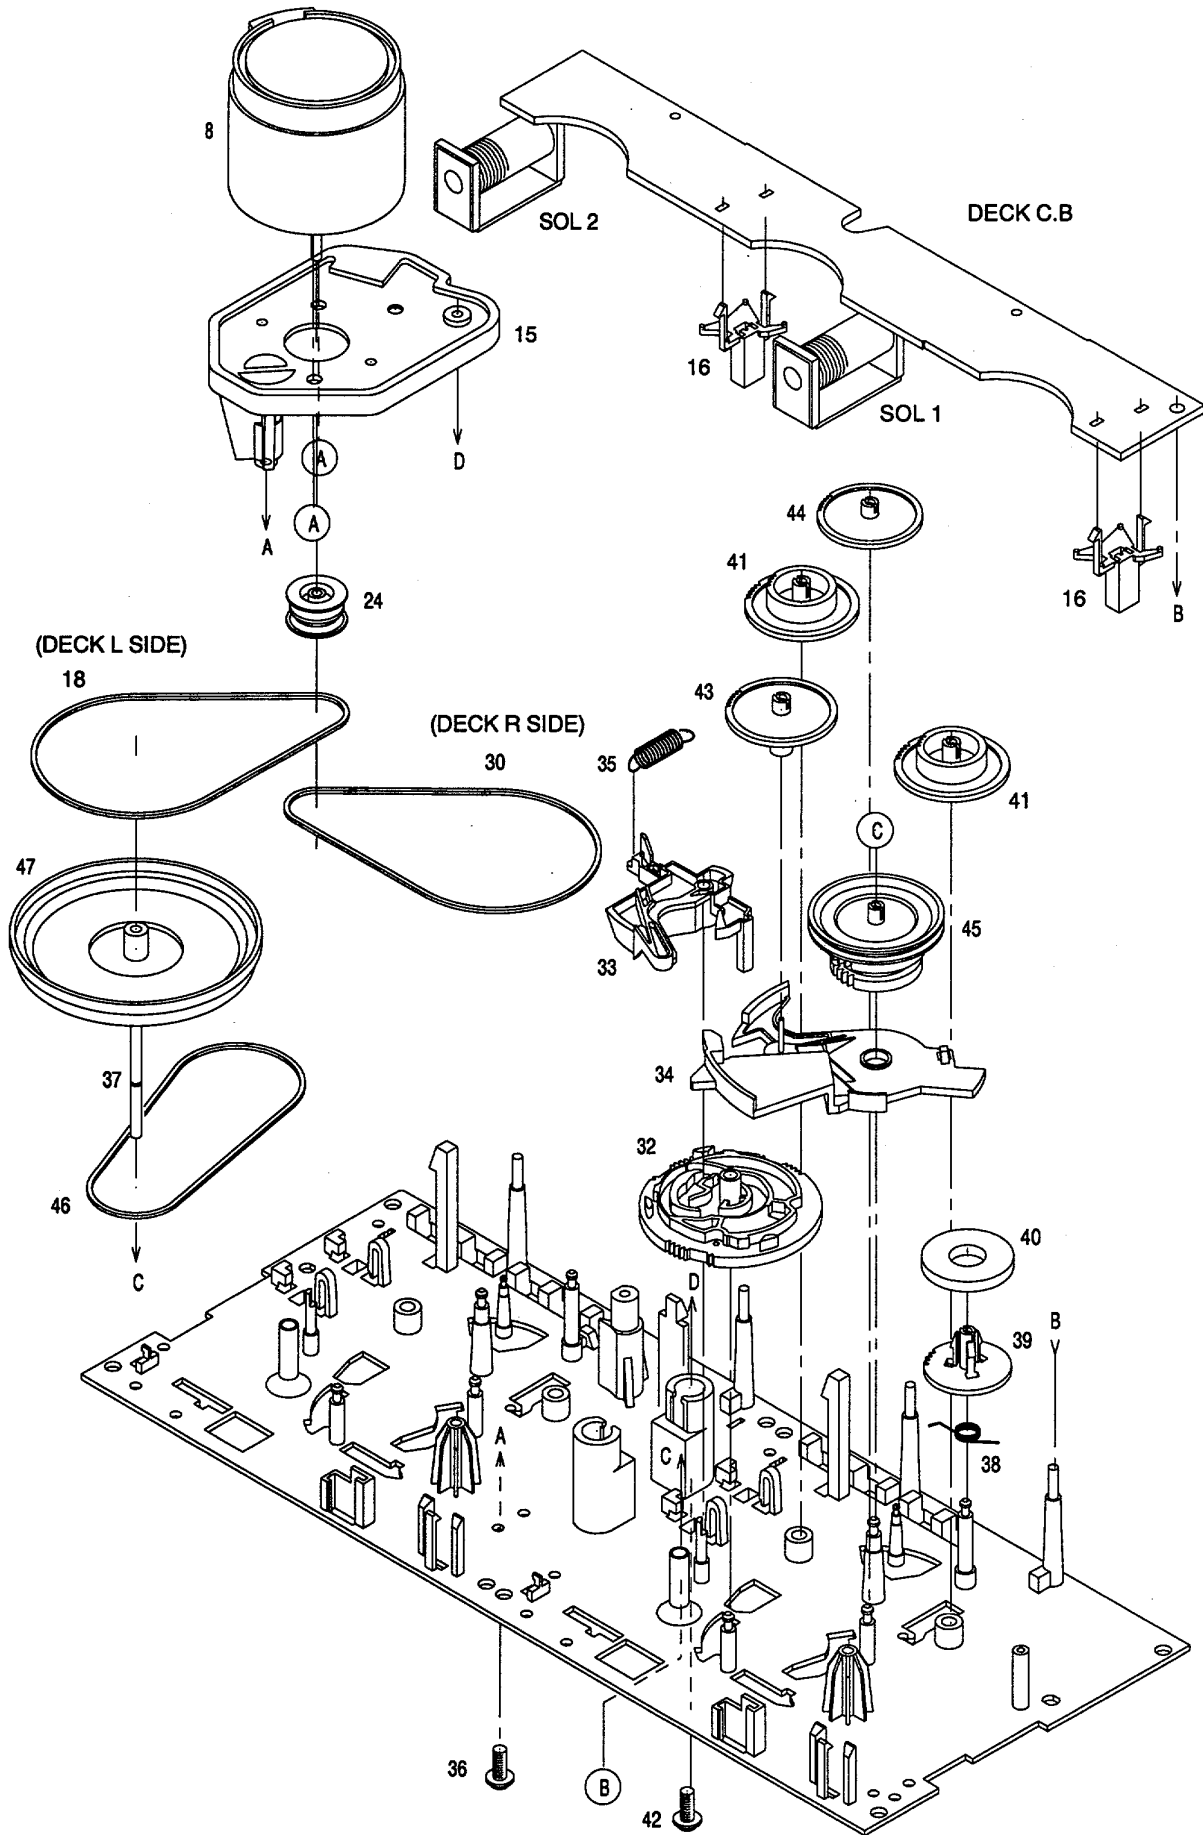


# TAPE MECHANISM PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	86-ZM3-212-010		CHAS ASSY,SS	26	82-ZM1-243-019		LVR,STOP
2	86-ZM3-202-010		BASE,HEAD S	27	82-ZM1-344-119		LVR ASSY,PINCH
3	86-ZM3-205-010		SPR-C,RPH S	28	86-ZM3-204-010		SPR-T,PINCHDS
4	82-ZM1-333-210		PLATE,LINK 2	29	82-ZM1-240-119		LVR,REC (DECK 2)
5	86-ZM3-206-010		SPR-C,EH S	30	86-ZM3-210-010		BELT,PS
6	87-A90-403-019		HEAD,RPH MS15R	31	82-ZM1-223-010		GEAR,PLAY
7	86-ZM3-201-010		CHAS,HEAD S	32	82-ZM3-305-019		GEAR,CAM M2
8	87-045-347-019		MOT,SHU2L 70(M1)	33	82-ZM1-227-319		LVR,TRIG
9	82-ZM1-269-219		SPR-T,BRG	34	82-ZM3-306-110		LVR,FR M2
10	82-ZM3-323-119		SPR-T,LINK	35	82-ZM1-265-119		SPR-E,TRIG
11	86-ZM3-209-010		S-SCREW,AZIMUTH	36	85-ZM3-203-019		S-SCREW MOTOR M3
12	86-ZM3-207-010		S-SCREW,RPH	37	82-ZM1-236-019		CAPSTAN N 2-41.5
13	87-A90-404-019		HEAD,EH LE15B	37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
14	86-ZM3-208-010		S-SCREW,EH	38	82-ZM1-322-019		SPR-T,FR60
15	86-ZM3-203-010		HLDR,MOTS	39	82-ZM1-220-219		GEAR,IDLER
16	82-ZM1-245-210		HLDR,IC	40	82-ZM3-616-019		RING MAGNET 4
17	82-ZM1-218-019		SPR-E,HB	41	82-ZM1-216-319		GEAR,REEL
18	86-ZM3-211-010		BELT,RS	42	85-ZM3-213-010		S-SCREW,HLDR MOT 3
19	82-ZM1-222-219		LVR,PLAY	43	82-ZM1-225-219		GEAR,FR
20	82-ZM1-217-419		REEL,TABLE	44	82-ZM1-226-019		GEAR,REW
21	82-ZM1-244-519		SPR-C,BT	45	82-ZM3-333-210		SLIP DISK ASSY 2
22	82-ZM1-285-410		SPR-C,BT L	46	82-ZM1-338-010		BELT FR4
23	82-ZM1-257-019		SPR-T,CAS	47	82-ZM1-349-019		FLY-WHL RW (DECK L)
24	82-ZM3-221-010		PULLEY,MOT 2M	47	82-ZM3-331-019		FLY-WHL R2W (DECK R)
25	82-ZM1-242-019		LVR,CAS	A	87-251-071-417		U+2.6-4
				B	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT

# SPRING APPLICATION POSITION

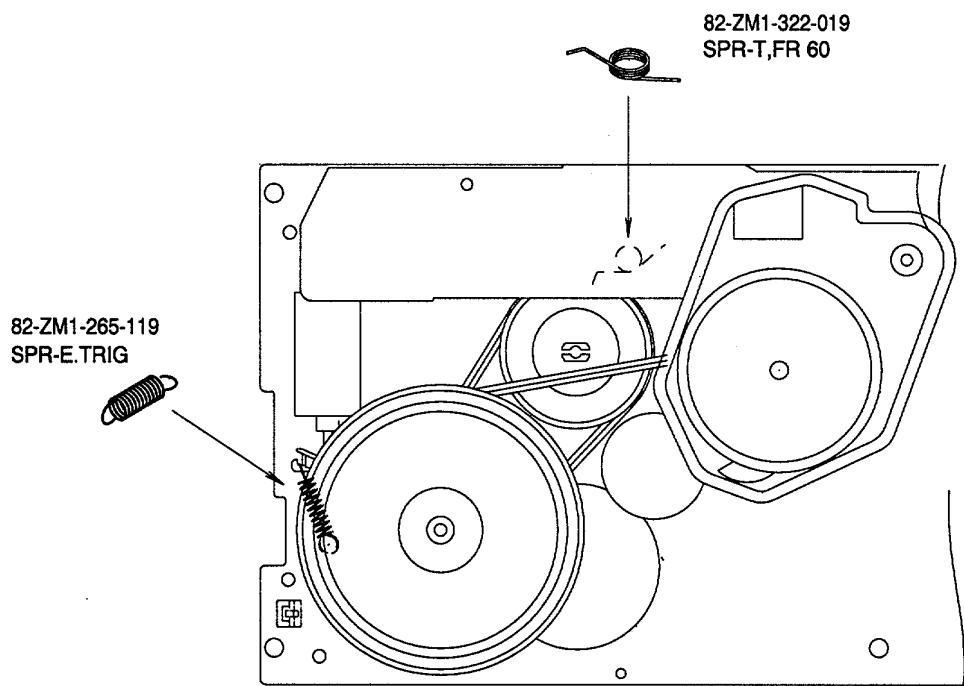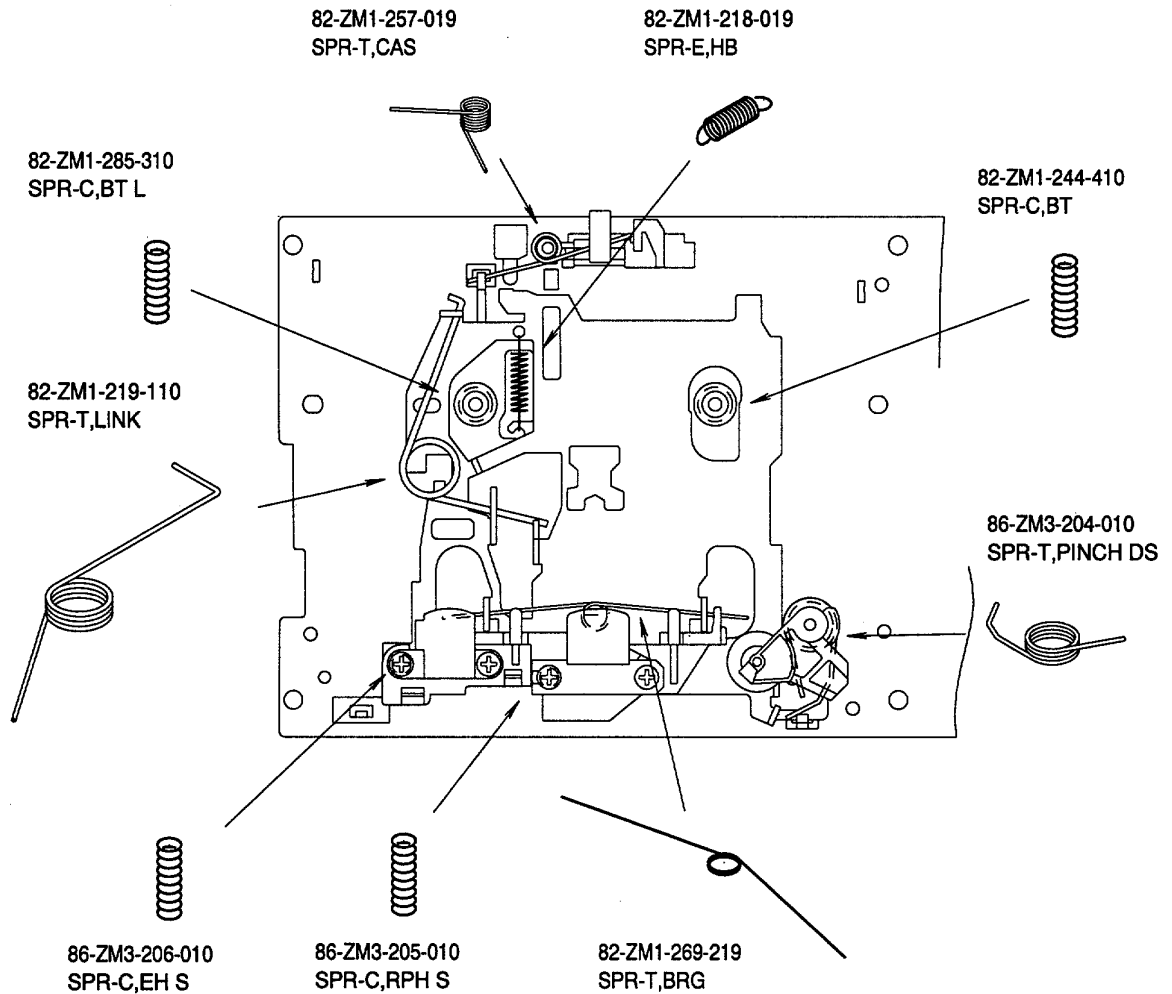


## SPEAKER DISASSEMBLY INSTRUCTIONS

### Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

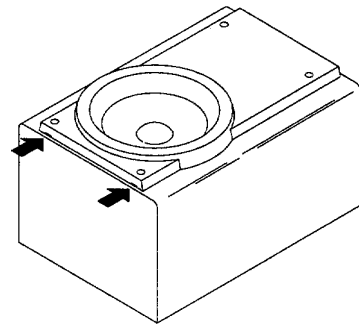

### Type.2

グリルフレームを外し、4個のゴムキャップをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

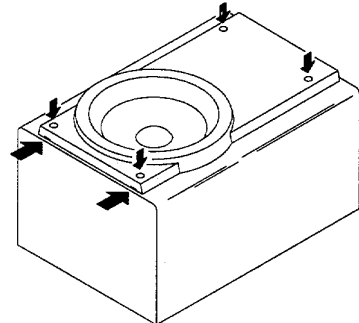

### Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

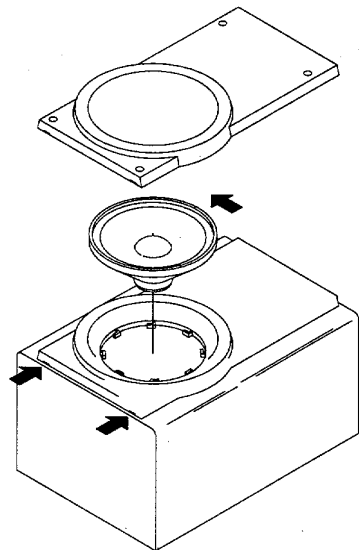

## SPEAKER PARTS LIST (SX-NAV304 <YTNL,YBNL>)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-096-614-010		SPEAKER CORD ASSY (YB)
2	83-MS2-603-310		SPKR, T 60
3	88-NST-006-010		GRILLE, FRAME ASSY
4	88-NSU-002-010		PANEL, FR
5	88-NSU-005-010		PANEL, TW ASSY
6	88-NSV-601-010		TERMINAL, ASSY
7	88-NSV-602-010		SPKR, W 160

## SPEAKER PARTS LIST (SX-CR675 <YSTNC>)

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-YS1-001-010		CABI, REAR(R275)
2	87-YS1-004-010		GRILLE FRAME ASSY(R275)
3	87-YS1-002-010		GRILLE, FRAME(R275)
4	81-VSA-009-010		CORD BUSH(R275)
5	87-YS6-002-010		SPKR, CORD Y(R275)
6	87-YS6-601-010		SPKR, 100(R275)
7	87-010-384-010		CAP, E 100-25 SME(R275)
8	87-YS3-001-010		PANEL, FRONT ST(C605)
9	87-YS3-003-010		GRILLE, FRAME ASSY(C605)
10	83-NSM-010-010		SPEAKER CORD(C605)
11	87-YS7-602-010		SPKR, 100(C605)

\*NOTE : This SX-CR627 speaker contains SX-C605 (center speaker)  
and SX-R275 (rear speaker).

## ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NFV-905-010		IB, K(E)E <K>
1	88-NFV-906-010		IB, E(9L)E <EZ>
2	87-006-225-010		AM LOOP ANT HC2
3	87-NFV-605-010		RC UNIT, RC-8AS04
4	87-043-106-010		WIRE, FM ANT (Z)



# REFERENCE NAME LIST

## ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

## MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G-	-
G-	-
G-	-

**アイワ株式会社**  
**AIWA CO., LTD.**

9620450, 750038

Tokyo Japan