



NSX-BL44


NSX-BL46

NSX-DR6

EZ,K,G

EZ

EZ

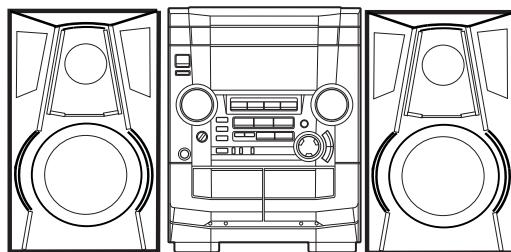

SERVICE MANUAL

COMPACT DISC
STEREO SYSTEM

BASIC TAPE MECHANISM : 6ZM-3 PR2NM(44/46)
BASIC TAPE MECHANISM : 6ZM-3 YPR2N(DR6)
BASIC CD MECHANISM : AZG-1 ZA3RDM(44/46)
BASIC CD MECHANISM : AZG-1 YZA3RDM(DR6)

| SYSTEM | CD CASSEIVER | SPEAKER | REMOTE CONTROLLER |
|--------------------|-----------------|----------|----------------------|
| NSX-BL44 (G) | CX-NBL44 | SX-NSZ53 | RC-ZAS01 |
| NSX-BL44 (EZ/K) | CX-NBL44 | SX-NBL40 | |
| NSX-BL46 (EZ) | CX-NBL46 | SX-NBL42 | |
| NSX-DR6 (EZ) | CX-NDR6 | SX-NBL40 | |

If requiring information about the CD mechanism, see Service Manual of AZG-1
(S/M Code No. 09-001-335-3NC).

aiwa
S/M Code No. 09-002-429-5N2



SPECIFICATIONS

| | | | |
|---|---|--|--|
| Main unit CX-NBL44, CX-NBL46, CX-NDR6 | | | |
| FM tuner section | | Cassette deck section | |
| Tuning range | 87.5 MHz to 108 MHz | Track format | 4 tracks, 2 channels stereo |
| Usable sensitivity (IHF) | 16.8 dBf | Frequency response | 50 Hz – 15000 Hz |
| Antenna terminal | 75 ohms (unbalanced) | Recording system | AC bias |
| AM (MW) tuner section | | Heads | Deck 1: Playback head x 1 Deck 2: Recording/playback head x 1, erase head x 1 |
| Tuning range | 531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step) | Compact disc player section | |
| Usable sensitivity | 350 µV/m | Laser | Semiconductor laser ($\lambda = 780$ nm) |
| Antenna | Loop antenna | D-A converter | 1 bit dual |
| LW tuner section | | Signal-to-noise ratio | 85 dB (1 kHz, 0 dB) |
| Tuning range | 144 kHz to 290 kHz | Harmonic distortion | 0.05 % (1 kHz, 0 dB) |
| Usable sensitivity | 1400 µV/m | Wow and flutter | Unmeasurable |
| Antenna | Loop antenna | General | |
| Amplifier section | | Power requirements | 230 V AC, 50 Hz |
| Power output | Rated: 80 W + 80 W (6 ohms, T.H.D. 1 %, 1 kHz/DIN 45500) Reference: 100 W +100 W (6 ohms, T.H.D. 10 %, 1 kHz/DIN 45324) DIN MUSIC POWER: 200 W + 200 W | Power consumption | 150 W |
| Total harmonic distortion | 0.1 % (45 W, 1 kHz, 6 ohms, DIN AUDIO) | Power consumption in standby mode | If the power-economizing mode is ECO OFF: 20 W If the power-economizing mode is ECO ON or ECO AUTO: 0.9 W |
| Inputs | VIDEO/AUX: 500 mV | Dimensions of main unit (W x H x D) | 260 x 326 x 346 mm |
| Outputs | SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack): accepts headphones of 32 ohms or more | Weight of main unit | 8.2 kg |
| Speaker system SX-NBL40, SX-NBL42, SX-NSZ53 | | | |
| Speaker system | | | |
| 3 way, Bass reflex (magnetic shielded type) | | | |
| Speaker units | | | |
| Woofer: 140 mm cone type Tweeter: 60 mm cone type Super tweeter: 20 mm ceramic type | | | |
| Impedance | 6 ohms | Dimensions (W x H x D) | 220 x 324 x 230 mm <40, 42> 240 x 324 x 270 mm <53> |
| Sensitivity | 87 dB/W/m | Weight | 4.0 kg |

- Design and specifications are subject to change without notice.
- The word "BBE" and the "BBE symbol" are trademarks of BBE Sound, Inc.
- Under license from BBE Sound, Inc.

ACCESSORIES LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|----------------------------|-------------|
| 1 | 8A-NFJ-937-010 | IB, EZ (9L) E 46 (RDS) <A> | |
| 1 | 8A-NFJ-936-010 | IB, EZ (9L) E 44/DR6 | |
| 1 | 8A-NFJ-926-010 | IB, EZ (9L) M 44<C> | |
| 1 | 8A-NFJ-927-010 | IB, EZ (9L) M 46 (RDS) <D> | |
| 1 | 8A-NFJ-904-010 | IB, G(E) M<E> | |
| 1 | 8A-NFJ-925-010 | IB, K(E) M 44<F> | |
| 2 | 8Z-NF8-702-010 | RC UNIT, RC-ZAS01 | |
| 3 | 87-006-225-010 | ANT, LOOP ANT NC2 | |
| 4 | 87-A90-118-010 | ANT, WIRE FM(Z) | |


| TYPE | MODEL NAME | SUFFIX |
|------|------------|--------|
| A | NOT USED | — |
| B | CX-NDR6 | EZ |
| C | CX-NBL44 | EZ |
| D | CX-NBL46 | EZ |
| E | CX-NBL44 | G |
| F | CX-NBL44 | K |

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION, BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

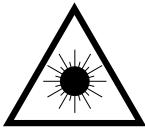

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Aviso: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

VAROITUS!

Laitteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käytäjän turvallisuusluokan 1 ylitävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

Precaution to replace Optical block

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in the figure below.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!


Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.


The CLASS 1 LASER PRODUCT label is located on the rear exterior.

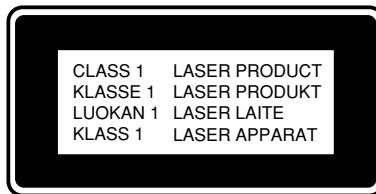

ZA3/ZA4 MODEL

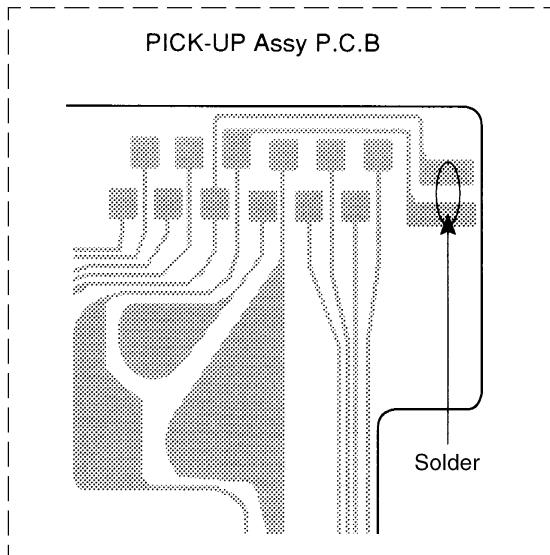

ZA8/ZD8 MODEL

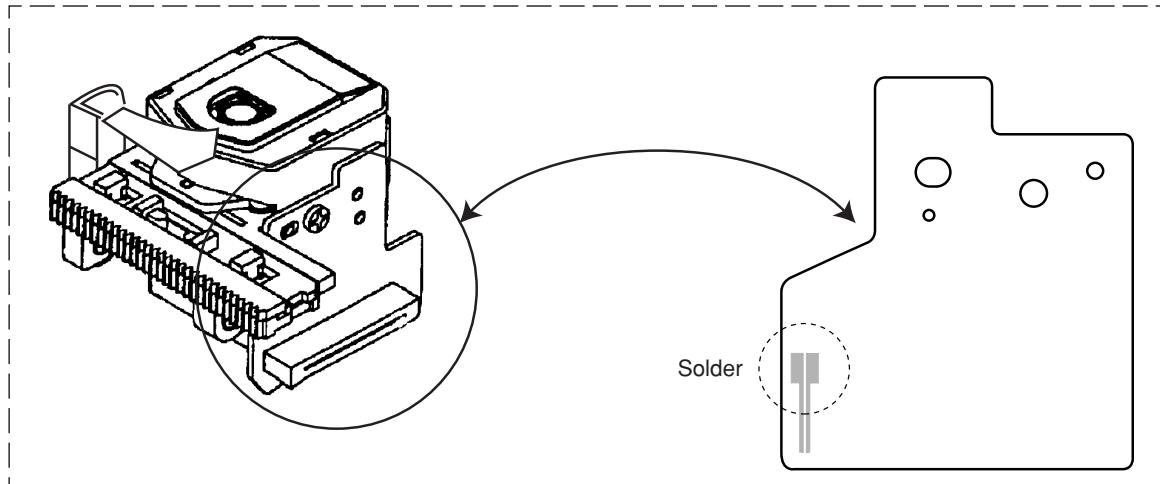

NOTE ON BEFORE STARTING REPAIR


1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step 3 to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

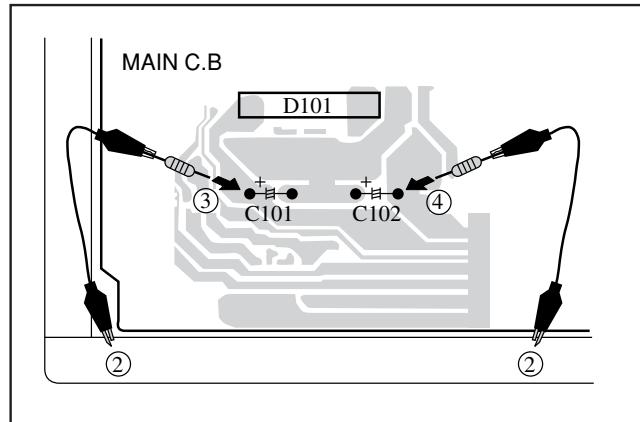

Select a discharging resistor referring to the following table.

| Charging voltage (V) (C101, 102) | Discharging resistor (Ω) | Rated power (W) | Parts number |
|-------------------------------------|--------------------------------------|-----------------|----------------|
| 25-48 | 100 | 3 | 87-A00-247-090 |
| 49-140 | 220 | 5 | 87-A00-232-090 |

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

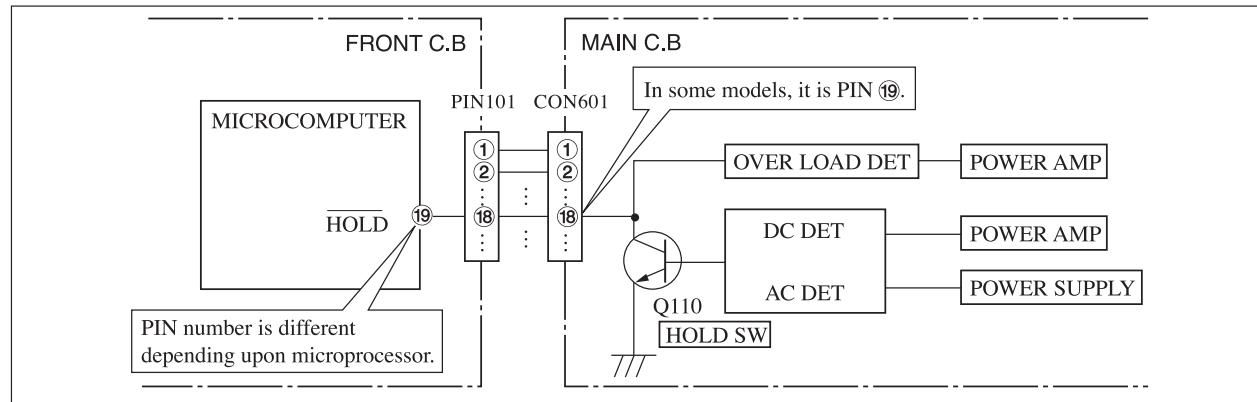


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

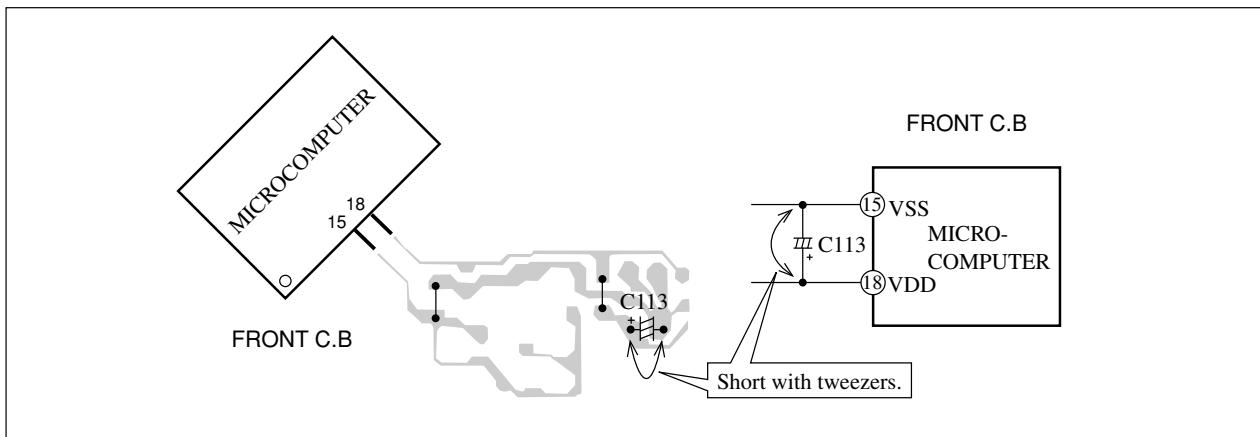


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|----------------|-------------------------------|--------------------|-------------|---------|----------------|-------------------------------------|-------------|
| IC | | | | C0018 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | |
| 87-020-454-010 | IC, DN6851 | | | C0019 | 87-016-520-000 | CAP,E 3300-65 M SMG | |
| 87-A21-355-010 | IC, STK490-140 | | | C0020 | 87-016-520-000 | CAP,E 3300-65 M SMG | |
| 8A-NF8-620-010 | C-IC, LC866548V-5R49<B,C,E,F> | | | C0023 | 87-016-658-000 | CAP,E 4700-35 M SMG | |
| 8A-NF8-621-010 | C-IC, LC866560W-5R50<A,D> | | | C0024 | 87-016-658-000 | CAP,E 4700-35 M SMG | |
| 87-A21-629-010 | IC, SPS-442-1-N | | | C0025 | 87-010-408-080 | CAP,E 47-50 M 11L SME | |
| 87-A21-419-040 | C-IC, NJM14558MD-TE2 | | | C0026 | 87-010-247-080 | CAP,E 100-50 M SME | |
| 87-A21-577-040 | C-IC, M61506FP | | | C0030 | 87-010-430-080 | CAP,E 100-63 | |
| 87-070-289-040 | C-IC, BU2092F | | | C0031 | 87-010-263-080 | CAP,E 100-10 M 11L SME | |
| 87-A21-401-040 | C-IC, M61503FP | | | C0032 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| 87-A21-560-010 | IC, LA1844L-A | | | C0034 | 87-010-260-080 | CAP,E 47-25 M 11L SME | |
| 87-A20-440-040 | C-IC, BU1920FS<A,D> | | | C0035 | 87-010-380-080 | CAP,E 47-16 M 11L SME | |
| 87-070-127-110 | IC, LC72131D | | | C0036 | 87-010-381-080 | CAP,E 330-16 M SME | |
| | | | | C0038 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| | | | | C0060 | 87-010-403-080 | CAP,E 3.3-50 M 11L SME | |
| TRANSISTOR | | | | C0061 | 87-010-260-080 | CAP,E 47-25 M 11L SME | |
| 87-026-609-080 | TR, KTA1266GR | | | C0101 | 87-010-183-080 | C-CAP,S 2700P-50 K B GRM | |
| 89-213-702-010 | TR, 2SB1370E | | | C0102 | 87-010-183-080 | C-CAP,S 2700P-50 K B GRM | |
| 87-026-610-080 | TR, KTC3198GR | | | C0103 | 87-010-545-080 | CAP,E 0.22-50 M 11L SME | |
| 87-A30-076-080 | C-TR, 2SC3052F | | | C0104 | 87-010-545-080 | CAP,E 0.22-50 M 11L SME | |
| 87-A30-075-080 | C-TR, 2SA1235F | | | C0107 | 87-010-405-080 | CAP,E 10-50 M 11L SME | |
| 87-026-245-080 | TR, DTC114ES | | | C0108 | 87-010-405-080 | CAP,E 10-50 M 11L SME | |
| 87-A30-198-080 | TR, KTC3199GR | | | C0109 | 87-010-179-080 | C-CAP,S 1200P-50 K B GRM | |
| 87-A30-107-070 | C-TR, CMET5401 | | | C0110 | 87-010-179-080 | C-CAP,S 1200P-50 K B GRM | |
| 87-A30-106-040 | C-TR, CMET5551 | | | C0111 | 87-010-405-080 | CAP,E 10-50 M 11L SME | |
| 87-A30-087-080 | C-FET, 2SK2158 | | | C0112 | 87-010-405-080 | CAP,E 10-50 M 11L SME | |
| 87-A30-074-080 | C-TR, RT1P 141C | | | C0113 | 87-A12-180-080 | CAP,E 10-63 M 105 KME | |
| 87-A30-318-080 | TR, CSA952K<F> | | | C0114 | 87-A12-180-080 | CAP,E 10-63 M 105 KME | |
| 87-A30-495-080 | TR, 2SA1981Y<EXCEPT F> | | | C0119 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| 87-A30-091-080 | FET, 2SJ460 | | | C0120 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| 87-A30-329-080 | TR, CD1585BC | | | C0123 | 87-010-176-080 | C-CAP,S 680P-50 J SL | |
| 87-A30-090-080 | FET, 2SK2541 | | | C0124 | 87-010-176-080 | C-CAP,S 680P-50 J SL | |
| 87-A30-104-080 | C-TR, RT1N 441C | | | C0125 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | |
| 87-A30-468-080 | C-TR, KRC102S-RTK | | | C0126 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | |
| 87-A30-484-080 | C-TR, KRA102S | | | C0127 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | |
| 87-A30-492-080 | TR, 2SC5343G<EXCEPT F> | | | C0128 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | |
| 89-333-317-880 | TR, 2SC3331(T/U)<F> | | | C0129 | 87-010-191-080 | C-CAP,S 0.015-50 Z F GRM | |
| 89-327-143-080 | C-TR, 2SC27140 | | | C0130 | 87-010-191-080 | C-CAP,S 0.015-50 Z F GRM | |
| 87-A30-489-080 | C-TR, KRA107S | | | C0131 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| 87-A30-086-040 | C-TR, CSD1306E | | | C0132 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| 89-503-602-080 | C-FET, 2SK360E | | | C0133 | 87-010-186-080 | C-CAP,S 4700P-50 K B C2012 | |
| 87-A30-234-080 | TR, CSC4115BC | | | C0134 | 87-010-379-080 | CAP,E 22-16 M 11L SME | |
| | | | | C0140 | 87-010-182-080 | C-CAP,S 2200P-50 K B C2012 | |
| | | | | C0141 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| | | | | C0237 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| DIODE | | | | C0238 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| 87-A40-393-090 | DIODE, 1N5402GW(F20) | | | C0270 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012<EXCEPT F> | |
| 87-020-465-080 | DIODE, 1SS133 | | | C0301 | 87-010-178-080 | C-CAP,S 1000P-50 K B C2012 | |
| 87-A40-547-090 | DIODE, D55BA20 | | | C0302 | 87-010-178-080 | C-CAP,S 1000P-50 K B C2012 | |
| 87-A40-553-080 | DIODE, 1N4003 LES | | | C0303 | 87-010-179-080 | C-CAP,S 1200P-50 K B GRM | |
| 87-A40-776-080 | ZENER, UZ27BSD | | | C0304 | 87-010-179-080 | C-CAP,S 1200P-50 K B GRM | |
| 87-A40-764-080 | ZENER, UZ10BSC | | | C0307 | 87-010-263-080 | CAP,E 100-10 M 11L SME | |
| 87-A40-270-080 | C-DIODE, MC2838 | | | C0308 | 87-010-263-080 | CAP,E 100-10 M 11L SME | |
| 87-A40-313-080 | C-DIODE, MC2840 | | | C0309 | 87-010-318-080 | C-CAP,S 47P-50 J CH GRM | |
| 87-A40-269-080 | C-DIODE, MC2836 | | | C0310 | 87-010-318-080 | C-CAP,S 47P-50 J CH GRM | |
| 87-A40-768-080 | ZENER, UZ16BSA | | | C0313 | 87-010-188-080 | C-CAP,S 6800P-50 K B C2012 | |
| 87-A40-752-080 | ZENER, UZ6.2BSC | | | C0314 | 87-010-188-080 | C-CAP,S 6800P-50 K B C2012 | |
| 87-A40-802-080 | ZENER, UZ5.1BSC | | | C0315 | 87-010-263-080 | CAP,E 100-10 M 11L SME | |
| 87-A40-739-080 | ZENER, UZ2.7BSA | | | C0317 | 87-010-546-080 | CAP,E 0.33-50 M 11L SME | |
| 87-017-149-080 | ZENER, HZS6A2L | | | C0318 | 87-010-546-080 | CAP,E 0.33-50 M 11L SME | |
| MAIN C.B | | | | C0326 | 87-010-198-080 | C-CAP,S 0.022-25 K B C2012 | |
| C0003 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0327 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | |
| C0004 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0360 | 87-010-401-080 | CAP,E 1-50 M 11L SME | |
| C0005 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0399 | 87-012-140-080 | C-CAP,S 470P-50 J CH | |
| C0006 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0401 | 87-010-544-080 | CAP,E 0.1-50 M 11L SME | |
| C0015 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0402 | 87-010-544-080 | CAP,E 0.1-50 M 11L SME | |
| C0016 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0403 | 87-010-321-080 | C-CAP,S 82P-50 J CH | |
| C0017 | 87-012-368-080 | C-CAP,S 0.1-50 Z F | | C0404 | 87-010-321-080 | C-CAP,S 82P-50 J CH | |
| | | | | C0405 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|--------------------------------|-------------|----------|----------------|----------------------------------|-------------|
| C0406 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0807 | 87-010-400-080 | CAP,E 0.47-50 M 11L SME | |
| C0407 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0808 | 87-010-401-080 | CAP,E 1-50 M 11L SME | |
| C0408 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0809 | 87-010-401-080 | CAP,E 1-50 M 11L SME | |
| C0409 | 87-010-182-080 | C-CAP,S 2200P-50 K B C2012 | | C0810 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0410 | 87-010-182-080 | C-CAP,S 2200P-50 K B C2012 | | C0814 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0411 | 87-010-405-080 | CAP,E 10-50 M 11L SME | | C0815 | 87-010-400-080 | CAP,E 0.47-50 M 11L SME | |
| C0412 | 87-010-405-080 | CAP,E 10-50 M 11L SME | | C0816 | 87-010-400-080 | CAP,E 0.47-50 M 11L SME | |
| C0452 | 87-010-382-080 | CAP,E 22-25 M 11L SME | | C0818 | 87-010-180-080 | C-CAP,S 1500P-50 K B C2012 | |
| C0453 | 87-010-183-080 | C-CAP,S 2700P-50 K B GRM | | C0821 | 87-010-405-080 | CAP,E 10-50 M 11L SME | |
| C0454 | 87-010-183-080 | C-CAP,S 2700P-50 K B GRM | | C0823 | 87-012-349-080 | C-CAP,S 1000P-50 J CH GRM | |
| C0455 | 87-010-183-080 | C-CAP,S 2700P-50 K B GRM | | C0824 | 87-010-404-080 | CAP,E 4.7-50 M 11L SME | |
| C0456 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0825 | 87-010-596-080 | C-CAP,S 0.047-16 K R C2012 | |
| C0457 | 87-A12-361-080 | CAP,M 5600P-100 J CH<EXCEPT F> | | C0831 | 87-010-406-080 | CAP,E 22-50 M 11L SME | |
| C0458 | 87-010-178-080 | C-CAP,S 1000P-50 K B C2012 | | C0842 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0459 | 87-010-175-080 | C-CAP,S 560P-50 J SL | | C0844 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0460 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | | C0850 | 87-010-260-080 | CAP,E 47-25 M 11L SME | |
| C0461 | 87-012-158-080 | C-CAP,S 390P-50 J CH GRM | | C0851 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0462 | 87-012-158-080 | C-CAP,S 390P-50 J CH GRM | | C0852 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0521 | 87-010-545-080 | CAP,E 0.33-50 M 11L SME | | C0853 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0522 | 87-010-545-080 | CAP,E 0.33-50 M 11L SME | | C0858 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0605 | 87-010-184-080 | C-CAP,S 3300P-50 K B C2012 | | C0859 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0606 | 87-010-184-080 | C-CAP,S 3300P-50 K B C2012 | | C0860 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0609 | 87-010-213-080 | C-CAP,S 0.015-25 K B GRM | | C0869 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012<A,D> | |
| C0610 | 87-010-213-080 | C-CAP,S 0.015-25 K B GRM | | C0870 | 87-018-131-080 | CAP,TC U 1000P-50 K B UP050<A,D> | |
| C0611 | 87-010-545-080 | CAP,E 0.22-50 M 11L SME | | C0871 | 87-012-156-080 | C-CAP,S 220P-50 J CH GRM<A,D> | |
| C0612 | 87-010-545-080 | CAP,E 0.22-50 M 11L SME | | C0872 | 87-012-156-080 | C-CAP,S 220P-50 J CH GRM<A,D> | |
| C0613 | 87-010-545-080 | CAP,E 0.22-50 M 11L SME | | C0873 | 87-012-140-080 | C-CAP,S 470P-50 J CH<A,D> | |
| C0614 | 87-010-545-080 | CAP,E 0.22-50 M 11L SME | | C0874 | 87-010-405-080 | CAP,E 10-50 M 11L SME<A,D> | |
| C0615 | 87-010-154-080 | C-CAP,S 10P-50 D CH GRM | | C0875 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012<A,D> | |
| C0616 | 87-010-385-080 | CAP,E 220-25 M SME | | C0876 | 87-010-405-080 | CAP,E 10-50 M 11L SME<A,D> | |
| C0617 | 87-010-385-080 | CAP,E 220-25 M SME | | C0877 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012<A,D> | |
| C0618 | 87-010-405-080 | CAP,E 10-50 M 11L SME | | C0878 | 87-010-316-080 | C-CAP,S 33P-50 J CH GRM<A,D> | |
| C0620 | 87-010-263-080 | CAP,E 100-10 M 11L SME | | C0879 | 87-010-314-080 | C-CAP,S 22P-50 J CH GRM<A,D> | |
| C0630 | 87-016-669-080 | C-CAP,S 0.1-25 K B | | C0940 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0631 | 87-010-185-080 | C-CAP,S 3900P-50 K B | | C0942 | 87-010-149-080 | C-CAP,S 5P-50 C CH GRM | |
| C0632 | 87-010-185-080 | C-CAP,S 3900P-50 K B | | C0947 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0633 | 87-016-369-080 | C-CAP,S 0.033-25 K B GRM | | C0948 | 87-012-140-080 | C-CAP,S 470P-50 J CH | |
| C0634 | 87-016-369-080 | C-CAP,S 0.033-25 K B GRM | | C0952 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0661 | 87-012-157-080 | C-CAP,S 330P-50 J CH GRM | | C0957 | 87-010-311-080 | C-CAP,S 12P-50 J CH GRM | |
| C0662 | 87-012-157-080 | C-CAP,S 330P-50 J CH GRM | | C0958 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0669 | 87-010-180-080 | C-CAP,S 1500P-50 K B C2012 | | C0959 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0670 | 87-010-180-080 | C-CAP,S 1500P-50 K B C2012 | | C0960 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0677 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0962 | 87-010-401-080 | CAP,E 1-50 M 11L SME | |
| C0771 | 87-010-263-080 | CAP,E 100-10 M 11L SME | | C0963 | 87-015-785-080 | C-CAP,S 0.1-25 Z F C3216 | |
| C0772 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0971 | 87-010-381-080 | CAP,E 330-16 M SME | |
| C0779 | 87-010-186-080 | C-CAP,S 4700P-50 K B C2012 | | C0972 | 87-010-404-080 | CAP,E 4.7-50 M 11L SME | |
| C0780 | 87-010-186-080 | C-CAP,S 4700P-50 K B C2012 | | C0973 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0782 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0974 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0783 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0979 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| C0784 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0981 | 87-010-260-080 | CAP,E 47-25 M 11L SME | |
| C0785 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0982 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0786 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0983 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0788 | 87-010-149-080 | C-CAP,S 5P-50 C CH GRM | | C0984 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0789 | 87-A10-801-080 | C-CAP,S 0.022-16 J B CM | | C0985 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| C0790 | 87-A10-801-080 | C-CAP,S 0.022-16 J B CM | | C0987 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0791 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | | C0989 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| C0792 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0991 | 87-010-312-080 | C-CAP,S 15P-50 J CH GRM | |
| C0793 | 87-010-404-080 | CAP,E 4.7-50 M 11L SME | | C0992 | 87-010-312-080 | C-CAP,S 15P-50 J CH GRM | |
| C0794 | 87-012-140-080 | C-CAP,S 470P-50 J CH<B,C,E,F> | | C0993 | 87-010-178-080 | C-CAP,S 1000P-50 K B C2012 | |
| C0794 | 87-012-155-080 | C-CAP,S 180P-50 J CH GRM<A,D> | | C0995 | 87-010-178-080 | C-CAP,S 1000P-50 K B C2012 | |
| C0795 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0997 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| C0796 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | C0998 | 87-010-260-080 | CAP,E 47-25 M 11L SME | |
| C0797 | 87-010-405-080 | CAP,E 10-50 M 11L SME | | C0999 | 87-A11-132-080 | CAP,TC U 0.01-50 K B | |
| C0798 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | | CF0831 | 87-008-423-010 | FLTR,CF SFE10.7MS3G-A | |
| C0799 | 87-010-407-080 | CAP,E 33-50 M 11L SME | | CF0832 | 82-785-747-010 | CF,MS2 GHY,R | |
| C0800 | 87-012-369-080 | C-CAP,S 0.047-50 Z F | | CN0301 | 87-A60-620-010 | CONN,3P V 2MM JMT | |
| C0801 | 87-010-403-080 | CAP,E 3.3-50 M 11L SME | | CN0351 | 87-A60-625-010 | CONN,8P V 2MM JMT | |
| C0802 | 87-010-194-080 | C-CAP,S 0.047-25 Z F | | CN0601 | 87-099-719-010 | CONN,30P H BLK TYK-B(X) | |
| C0803 | 87-010-198-080 | C-CAP,S 0.022-25 K B C2012 | | CN0602 | 87-A60-131-010 | CONN,6P V FE | |
| C0804 | 87-010-263-080 | CAP,E 100-10 M 11L SME | | CNA0001 | 8A-NF8-654-010 | CONN ASSY,11P TID-A(480) | |

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|-----------|----------------|-----------|--------------------------------|---------|----------------|-----------------------------|-------------|
| FB0602 | 87-008-372-080 | | FLTR,EMI BL01 RN1 | C0325 | 87-A10-189-040 | CAP,E 220-10 M 5L | |
| FFC0602 | 88-906-251-110 | | FF-CABLE,6P 1.25 | C0326 | 87-A10-189-040 | CAP,E 220-10 M 5L | |
| FFE0831 | A8-6ZA-191-130 | 6ZA-1 | FERNM<C,D,E,F> | C0332 | 87-010-178-080 | C-CAP,S 1000P-50 K B C2012 | |
| FFE0831 | A8-6ZA-19C-170 | 6ZA-1 | YFEENC<A,B> | C0334 | 87-010-312-080 | C-CAP,S 15P-50 J CH GRM | |
| J0201 | 87-A60-488-010 | | JACK,DIA6.3 BLK ST W/SW KM16AT | C0335 | 87-012-140-080 | C-CAP,S 470P-50 J CH | |
| J0203 | 87-A60-238-010 | | TERMINAL,SP 4P (MSC) | C0336 | 87-012-155-080 | C-CAP,S 180P-50 J CH GRM | |
| J0204 | 87-A60-881-010 | | JACK,PIN 2P MSP 242V05 PBSN | C0339 | 87-012-156-080 | C-CAP,S 220P-50 J CH GRM | |
| J0602 | 87-A60-881-010 | | JACK,PIN 2P MSP 242V05 PBSN | C0340 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| J0832 | 87-A60-403-010 | | TERMINAL,ANT PAL 2P HSP-312V05 | C0341 | 87-010-194-080 | C-CAP,S 0.047-25 Z F | |
| JW0105 | 87-A00-764-010 | | RES,M/F 0.22-3W J | C0351 | 87-010-981-040 | CAP,E 22-35 M 5L SRE | |
| JW0106 | 87-A00-764-010 | | RES,M/F 0.22-3W J | C0401 | 87-010-197-080 | C-CAP,S 0.01-25 K B C2012 | |
| L0101 | 87-A50-610-010 | | COIL,1UH K(MDEC) | C0451 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| L0102 | 87-A50-610-010 | | COIL,1UH K(MDEC) | C0452 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| L0451 | 87-007-342-010 | | COIL,OSC 85KHZ BIAS | C0453 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| L0801 | 87-A50-608-010 | | COIL,FM DET-N(TOK) | C0454 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| L0802 | 87-A91-551-010 | | FLTR,PCFJZH-450 L(TOK) | C0455 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| L0811 | 87-005-847-080 | | COIL,2.2UH K CECS | C0458 | 87-010-320-080 | C-CAP,S 68P-50 J CH GRM | |
| L0832 | 87-005-847-080 | | COIL,2.2UH K CECS | C0459 | 87-010-320-080 | C-CAP,S 68P-50 J CH GRM | |
| L0861 | 87-005-847-080 | | COIL,2.2UH K CECS<A,D> | C0602 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| L0941 | 87-A50-020-010 | | COIL,ANT LW (COI) 252KHZ | C0603 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| L0942 | 87-A50-019-010 | | COIL,OSC LW (COI) 856KHZ | C0604 | 87-010-322-080 | C-CAP,S 100P-50 J CH GRM | |
| L0951 | 8A-NF8-668-010 | | COIL,AM PACK 2(TOK) | C0650 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| R0129 | 87-A00-764-010 | | RES,M/F 0.22-3W J | C0699 | 87-010-196-080 | C-CAP,S 0.1-25 Z F C2012 | |
| R0130 | 87-A00-764-010 | | RES,M/F 0.22-3W J | CN0101 | 87-099-720-010 | CONN,30P BLK TYK-B(P) | |
| R0143 | 87-A00-439-050 | | RES,180-1/2W J RP | CN0102 | 87-099-015-010 | CONN,13P V BLK 6216 | |
| R0144 | 87-A00-439-050 | | RES,180-1/2W J RP | CN0302 | 87-A60-136-010 | CONN,11P V FE | |
| R0145 | 87-A00-439-050 | | RES,180-1/2W J RP | FB0301 | 87-008-372-080 | FLTR,EMI BL01 RN1 | |
| R0146 | 87-A00-439-050 | | RES,180-1/2W J RP | FFC0102 | 88-913-301-110 | FF-CABLE,13P-1.25 | |
| R0790 | 87-010-197-080 | | C-CAP,S 0.01-25 K B C2012 | FFC0105 | 88-911-101-110 | FF-CABLE,11P 1.25 | |
| R0991 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | FL0401 | 8A-NF8-601-010 | FL,HNA-11MM30(ANF-8) | |
| R0993 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | L0331 | 87-A50-408-010 | COIL,OSC 5.76MHZ | |
| R0995 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | LED0311 | 87-A40-589-040 | LED,SLR-56VCT31 RED | |
| SFR0451 | 87-A90-432-080 | | SFR,30K H NVZ6TLTA | LED0601 | 87-A40-803-010 | LED,SELUIE10CXM-S LF38 BLUE | |
| SFR0452 | 87-A90-432-080 | | SFR,30K H NVZ6TLTA | LED0602 | 87-A40-619-080 | LED,SLR-56PT-TE7-W GRN | |
| TC0942 | 87-011-253-080 | | TRIMMER,CER 30P 4.0X4.5 ECRLA | LED0603 | 87-A40-619-080 | LED,SLR-56PT-TE7-W GRN | |
| WH0001 | 87-A91-179-010 | | HLDL,WIRE 2.5-11P | LED0604 | 87-A40-619-080 | LED,SLR-56PT-TE7-W GRN | |
| X0861 | 87-A70-091-010 | | VIB,XTAL 4.332MHZ CSA-309<A,D> | LED0606 | 87-A40-619-080 | LED,SLR-56PT-TE7-W GRN | |
| X0991 | 87-A70-061-010 | | VIB,XTAL 4.500MHZ CSA-309 | LED0607 | 87-A40-619-080 | LED,SLR-56PT-TE7-W GRN | |
| | | | | LED0608 | 87-A40-619-080 | LED,SLR-56PT-TE7-W GRN | |
| | | | | S0401 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| FRONT C.B | | | | S0402 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0201 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0403 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0202 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0404 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0203 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0405 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0204 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0406 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0205 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0407 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0206 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0408 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0207 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0409 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0208 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0410 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0209 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0411 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0210 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0412 | 87-A91-024-180 | SW,TACT KSHG611BT<A,D> | |
| C0211 | 87-010-322-080 | | C-CAP,S 100P-50 J CH GRM | S0413 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0251 | 87-010-405-040 | | CAP,E 10-50 M 11L SME | S0414 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0253 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0415 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0254 | 87-012-369-080 | | C-CAP,S 0.047-50 Z F | S0416 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0255 | 87-010-560-040 | | CAP,E 10-50 M 5L MA | S0417 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0256 | 87-010-405-040 | | CAP,E 10-50 M 11L SME | S0418 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0259 | 87-010-405-040 | | CAP,E 10-50 M 11L SME | S0419 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0264 | 87-A11-148-080 | | CAP,TC U 0.1-50 Z F | S0420 | 87-A91-024-180 | SW,TACT KSHG611BT<A,D> | |
| C0273 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | S0421 | 87-A91-024-180 | SW,TACT KSHG611BT<A,D> | |
| C0274 | 87-010-178-080 | | C-CAP,S 1000P-50 K B C2012 | S0425 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0301 | 87-010-182-080 | | C-CAP,S 2200P-50 K B C2012 | S0426 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0302 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0432 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0303 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0433 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0312 | 87-010-498-040 | | CAP,E 10-16 M 5L SRE | S0434 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0314 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0435 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0315 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0436 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0316 | 87-010-196-080 | | C-CAP,S 0.1-25 Z F C2012 | S0437 | 87-A91-024-180 | SW,TACT KSHG611BT | |
| C0321 | 87-012-393-080 | | C-CAP,S 0.22-16 K W5R CM/CB | SW0252 | 87-A91-555-010 | SW,RTRY EC12E24504 | |
| C0322 | 87-010-400-040 | | CAP,E 0.47-50 M 11L SME | SW0253 | 87-A91-542-010 | SW,RTRY EC12E12504 | |

REF. NO PART NO. KANRI NO. DESCRIPTION

DECK C.B

| | | |
|--------|----------------|----------------------|
| CON105 | 87-099-753-010 | CONN,11P 9604 S F |
| SFR1 | 87-024-581-010 | SFR,3.3K DIA 6H |
| SOL1 | 82-ZM1-618-410 | SOL ASSY,27 |
| SOL2 | 82-ZM1-618-410 | SOL ASSY,27 |
| SW1 | 87-A90-248-010 | SW,MICRO ESE11SH2CXQ |
| SW2 | 87-A90-248-010 | SW,MICRO ESE11SH2CXQ |
| SW3 | 87-A90-248-010 | SW,MICRO ESE11SH2CXQ |
| SW4 | 87-036-110-010 | SW,MICRO SPBP62 |
| SW5 | 87-036-110-010 | SW,MICRO SPBP62 |
| W1 | 82-ZM3-601-010 | RBN,CORD,4P-75 |

HEAD-1 C.B

| | | |
|--------|----------------------------------|-------------------------------|
| CON301 | 85-ZM3-602-010 87-NF6-615-010 | PWB,FLEX A CONN ASSY,3P PB |
|--------|----------------------------------|-------------------------------|


PT C.B

| | | |
|---------------------|----------------|------------------------|
| C0001 | 87-010-387-080 | CAP,E 470-25 M SME |
| C0002 | 87-A11-148-080 | CAP,TC U 0.1-50 Z F |
| C0031 | 87-010-403-040 | CAP,E 3.3-50 M 11L SME |
| CN0001 | 87-A61-122-010 | CONN,11P V TID-A |
| A PT0001 | 8A-NFJ-608-010 | PT,ANF-8 EZ(2) |
| A PT0002 | 8A-NF8-662-010 | PT,SUB ANF-8 (E) |
| A RY0002 | 87-A91-418-010 | RELAY,AC12V GSPA-1-M |
| A T0001 | 87-A60-317-010 | TERMINAL, 1P MSC |
| A T0002 | 87-A60-317-010 | TERMINAL, 1P MSC |

| TYPE | MODEL NAME | SUFFIX |
|------|------------|--------|
| A | NOT USED | — |
| B | CX-NDR6 | EZ |
| C | CX-NBL44 | EZ |
| D | CX-NBL46 | EZ |
| E | CX-NBL44 | G |
| F | CX-NBL44 | K |

○チップ抵抗部品コード／CHIP RESISTOR PART CODE


チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

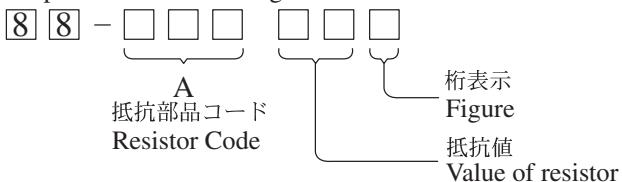


チップ抵抗
Chip resistor

| 容量 Wattage | 種類 Type | 許容誤差 Tolerance | 記号 Symbol | 寸法／Dimensions (mm) | | | 抵抗コード Resistor Code : A |
|---------------|------------|-------------------|--------------|--------------------|-----|------|----------------------------|
| | | | | 外形／Form | L | W | |
| 1/16W | 1005 | ± 5% | CJ | | 1.0 | 0.5 | 0.35 |
| 1/16W | 1608 | ± 5% | CJ | | 1.6 | 0.8 | 0.45 |
| 1/10W | 2125 | ± 5% | CJ | | 2 | 1.25 | 0.45 |
| 1/8W | 3216 | ± 5% | CJ | | 3.2 | 1.6 | 0.55 |


TRANSISTOR ILLUSTRATION

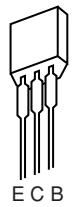

DTC114ES
KTC3199

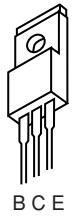


2SB1370

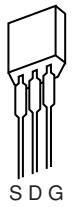


2SJ460
2SK2541




2SA1981
2SC3331
2SC5343
CD1585
CSA952
CSC4115
KTA1266
KTC3198

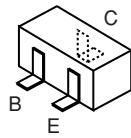

2SA1235
2SC2714
2SC3052
CMBT5401
CMBT5551
CSD1306
KRA102S
KRA107S
KRC102S
RT1N441C
RT1P141C

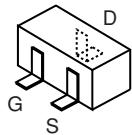


2SK2158

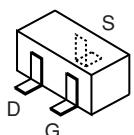

2SK360

FL (HNA-11MM30) GRID ASSIGNMENT/ANODE CONNECTION

GRID ASSIGNMENT

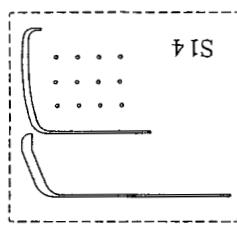


(11G)

| | | | | | | | | | | |
|------|------|------|------|------|------|------|------|------|-------|-------|
| 1-1 | 2-1 | 3-1 | 4-1 | 5-1 | 6-1 | 7-1 | 8-1 | 9-1 | 10-1 | 11-1 |
| 1-2 | 2-2 | 3-2 | 4-2 | 5-2 | 6-2 | 7-2 | 8-2 | 9-2 | 10-2 | 11-2 |
| 1-3 | 2-3 | 3-3 | 4-3 | 5-3 | 6-3 | 7-3 | 8-3 | 9-3 | 10-3 | 11-3 |
| 1-4 | 2-4 | 3-4 | 4-4 | 5-4 | 6-4 | 7-4 | 8-4 | 9-4 | 10-4 | 11-4 |
| 1-5 | 2-5 | 3-5 | 4-5 | 5-5 | 6-5 | 7-5 | 8-5 | 9-5 | 10-5 | 11-5 |
| 1-6 | 2-6 | 3-6 | 4-6 | 5-6 | 6-6 | 7-6 | 8-6 | 9-6 | 10-6 | 11-6 |
| 1-7 | 2-7 | 3-7 | 4-7 | 5-7 | 6-7 | 7-7 | 8-7 | 9-7 | 10-7 | 11-7 |
| 1-8 | 2-8 | 3-8 | 4-8 | 5-8 | 6-8 | 7-8 | 8-8 | 9-8 | 10-8 | 11-8 |
| 1-9 | 2-9 | 3-9 | 4-9 | 5-9 | 6-9 | 7-9 | 8-9 | 9-9 | 10-9 | 11-9 |
| 1-10 | 2-10 | 3-10 | 4-10 | 5-10 | 6-10 | 7-10 | 8-10 | 9-10 | 10-10 | 11-10 |
| 1-11 | 2-11 | 3-11 | 4-11 | 5-11 | 6-11 | 7-11 | 8-11 | 9-11 | 10-11 | 11-11 |
| 1-12 | 2-12 | 3-12 | 4-12 | 5-12 | 6-12 | 7-12 | 8-12 | 9-12 | 10-12 | 11-12 |
| 1-13 | 2-13 | 3-13 | 4-13 | 5-13 | 6-13 | 7-13 | 8-13 | 9-13 | 10-13 | 11-13 |
| 1-14 | 2-14 | 3-14 | 4-14 | 5-14 | 6-14 | 7-14 | 8-14 | 9-14 | 10-14 | 11-14 |
| 1-15 | 2-15 | 3-15 | 4-15 | 5-15 | 6-15 | 7-15 | 8-15 | 9-15 | 10-15 | 11-15 |
| 1-16 | 2-16 | 3-16 | 4-16 | 5-16 | 6-16 | 7-16 | 8-16 | 9-16 | 10-16 | 11-16 |
| 1-17 | 2-17 | 3-17 | 4-17 | 5-17 | 6-17 | 7-17 | 8-17 | 9-17 | 10-17 | 11-17 |
| 1-18 | 2-18 | 3-18 | 4-18 | 5-18 | 6-18 | 7-18 | 8-18 | 9-18 | 10-18 | 11-18 |
| 1-19 | 2-19 | 3-19 | 4-19 | 5-19 | 6-19 | 7-19 | 8-19 | 9-19 | 10-19 | 11-19 |
| 1-20 | 2-20 | 3-20 | 4-20 | 5-20 | 6-20 | 7-20 | 8-20 | 9-20 | 10-20 | 11-20 |

(3G-10G)

2G

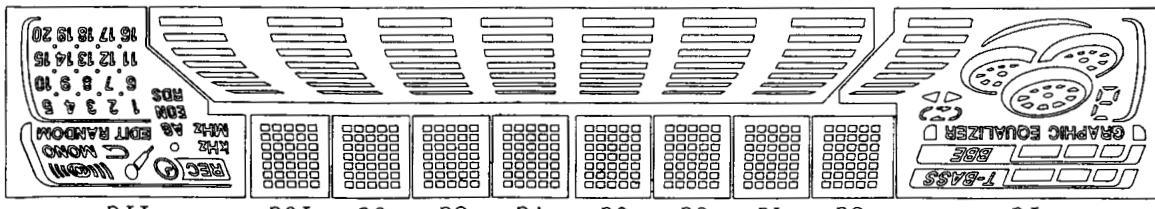

ANODE CONNECTION

| | 1G | 2G | 3G-10G | 11G |
|-----|-------------------|-----|--------|--------|
| P1 | S17 | B35 | 1-1 | C |
| P2 | N1 | B30 | 2-1 | WONQ |
| P3 | N2 | B25 | 3-1 | RANDOM |
| P4 | N3 | B20 | 4-1 | WONQ |
| P5 | GRAPHIC EQUALIZER | B15 | 5-1 | EDIT |
| P6 | C | B10 | 1-2 | ① |
| P7 | — | B5 | 2-2 | REC |
| P8 | — | B34 | 3-2 | KHz |
| P9 | — | B29 | 4-2 | MHz |
| P10 | — | B24 | 5-2 | ○ |
| P11 | S4 | B19 | 1-3 | AS |
| P12 | S2 | B14 | 2-3 | EON |
| P13 | S10 | B9 | 3-3 | RDS |
| P14 | S9 | B4 | 4-3 | S14 |
| P15 | S3 | B33 | 5-3 | 20 |
| P16 | S12 | B28 | 1-4 | 19 |
| P17 | S11 | B23 | 2-4 | 18 |
| P18 | S1 | B18 | 3-4 | 17 |


| | 1G | 2G | 3G-10G | 11G |
|-----|-------|-----|--------|-----|
| P19 | S6 | B13 | — | 4-4 |
| P20 | S7 | B8 | 5-4 | 16 |
| P21 | S8 | B3 | 1-5 | 14 |
| P22 | S5 | B32 | 2-5 | 13 |
| P23 | S16 | B27 | 3-5 | 12 |
| P24 | M1 | B22 | 4-5 | 11 |
| P25 | M2 | B17 | 5-5 | 10 |
| P26 | M3 | B12 | 1-6 | 9 |
| P27 | e | B7 | 2-6 | 8 |
| P28 | a,g,d | B2 | 3-6 | 7 |
| P29 | b | B31 | 4-6 | 6 |
| P30 | c | B26 | 5-6 | 5 |
| P31 | B40 | B21 | 1-7 | 4 |
| P32 | B39 | B16 | 2-7 | 3 |
| P33 | B38 | B11 | 3-7 | 2 |
| P34 | B37 | B6 | 4-7 | 1 |
| P35 | B36 | B1 | 5-7 | 0 |


(1G)

(11G)


(3G-10G)

(2G)

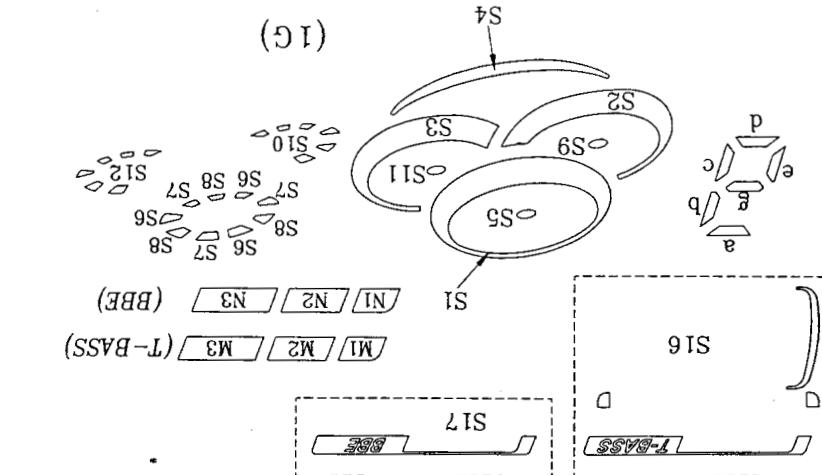


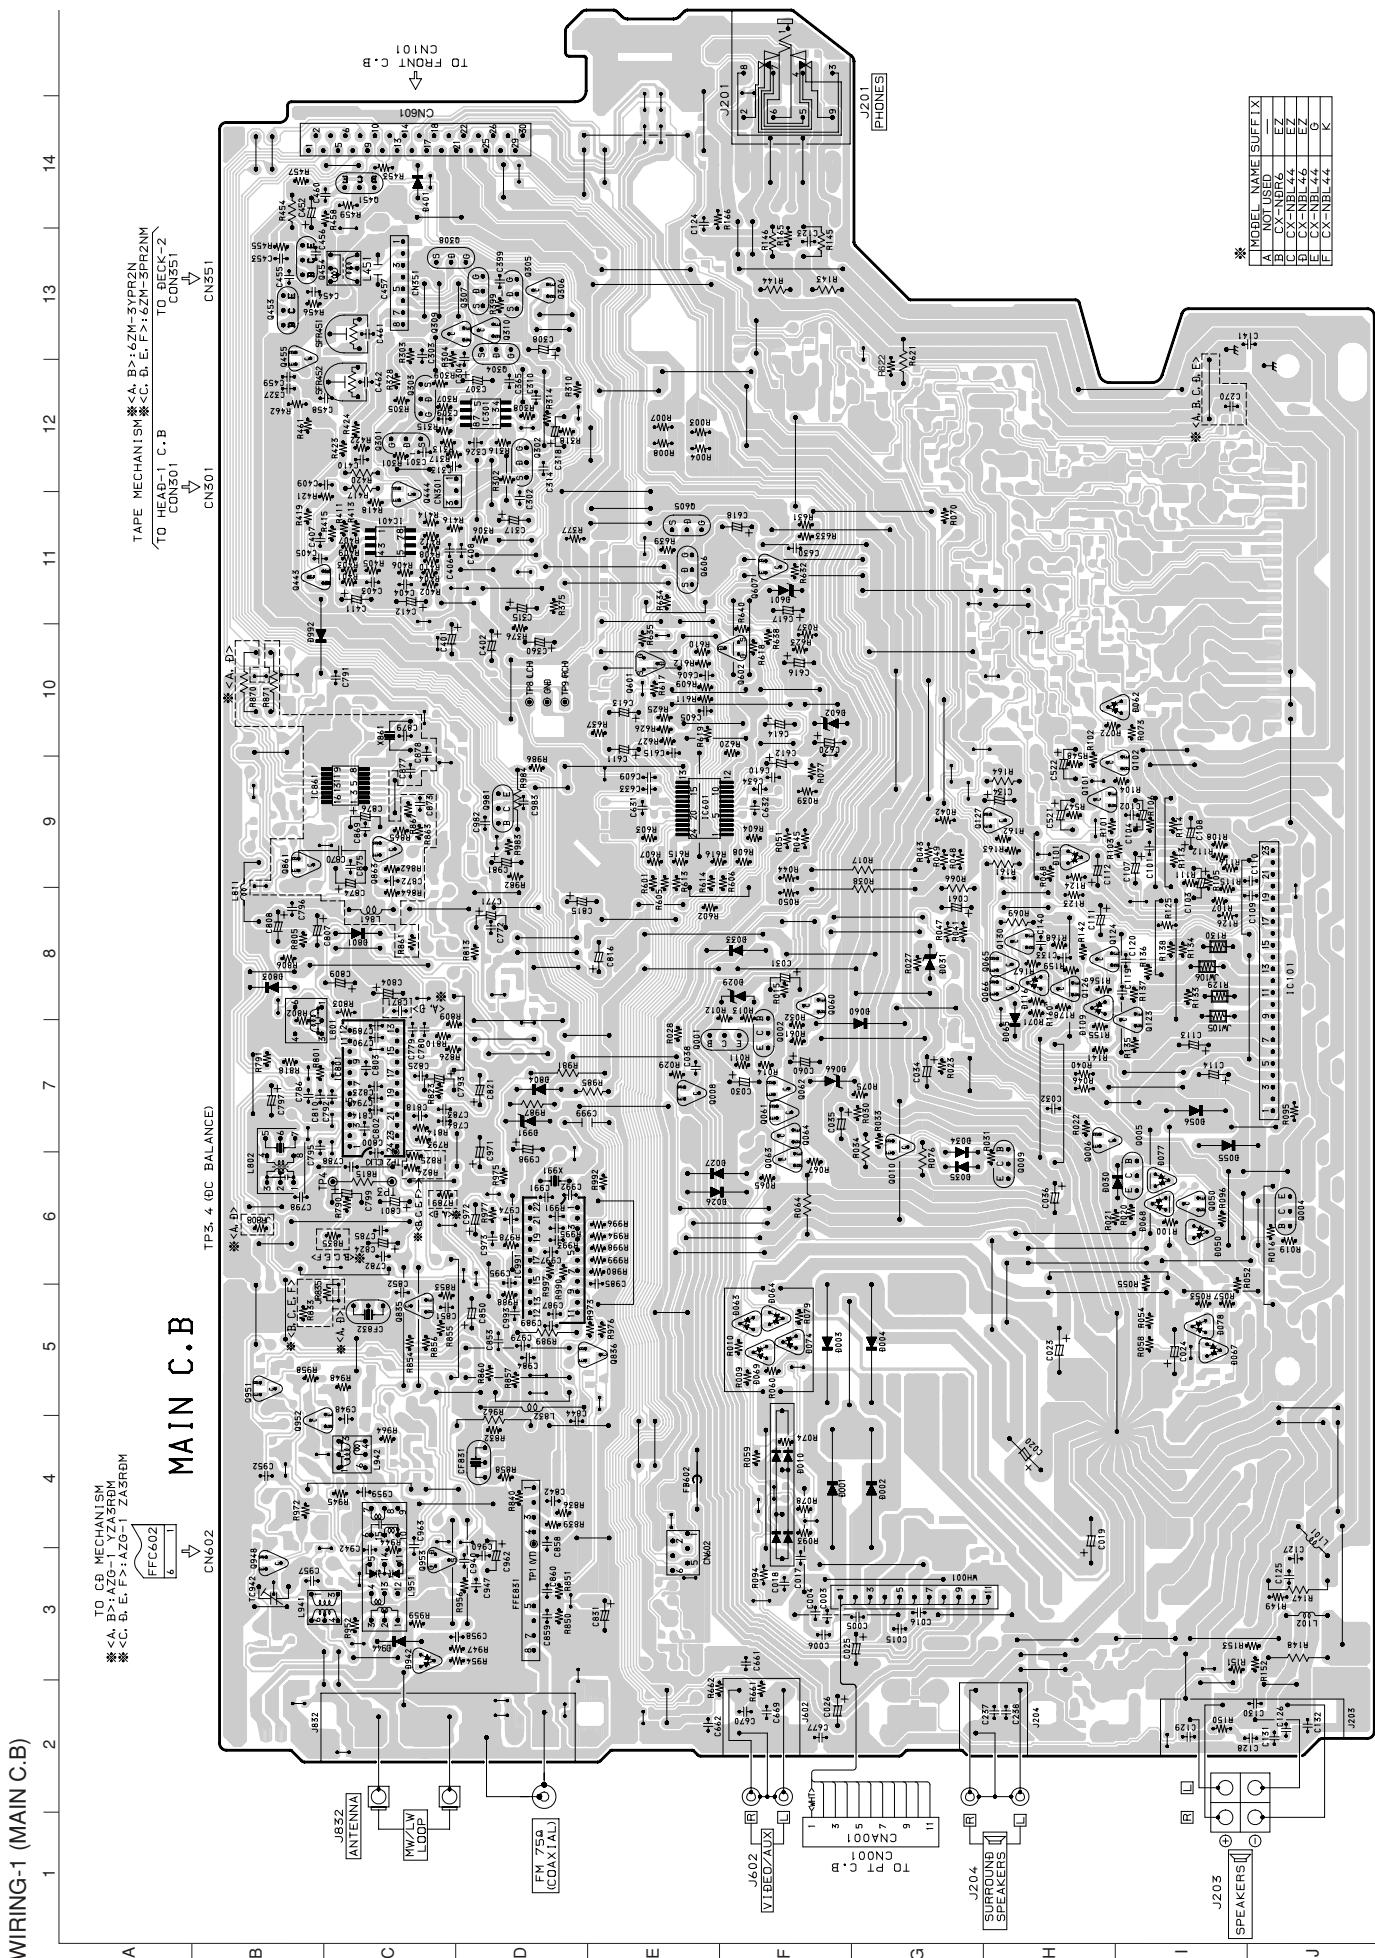


SCHEMATIC DIAGRAM-1 (FUNCTION/AMP SECTION)

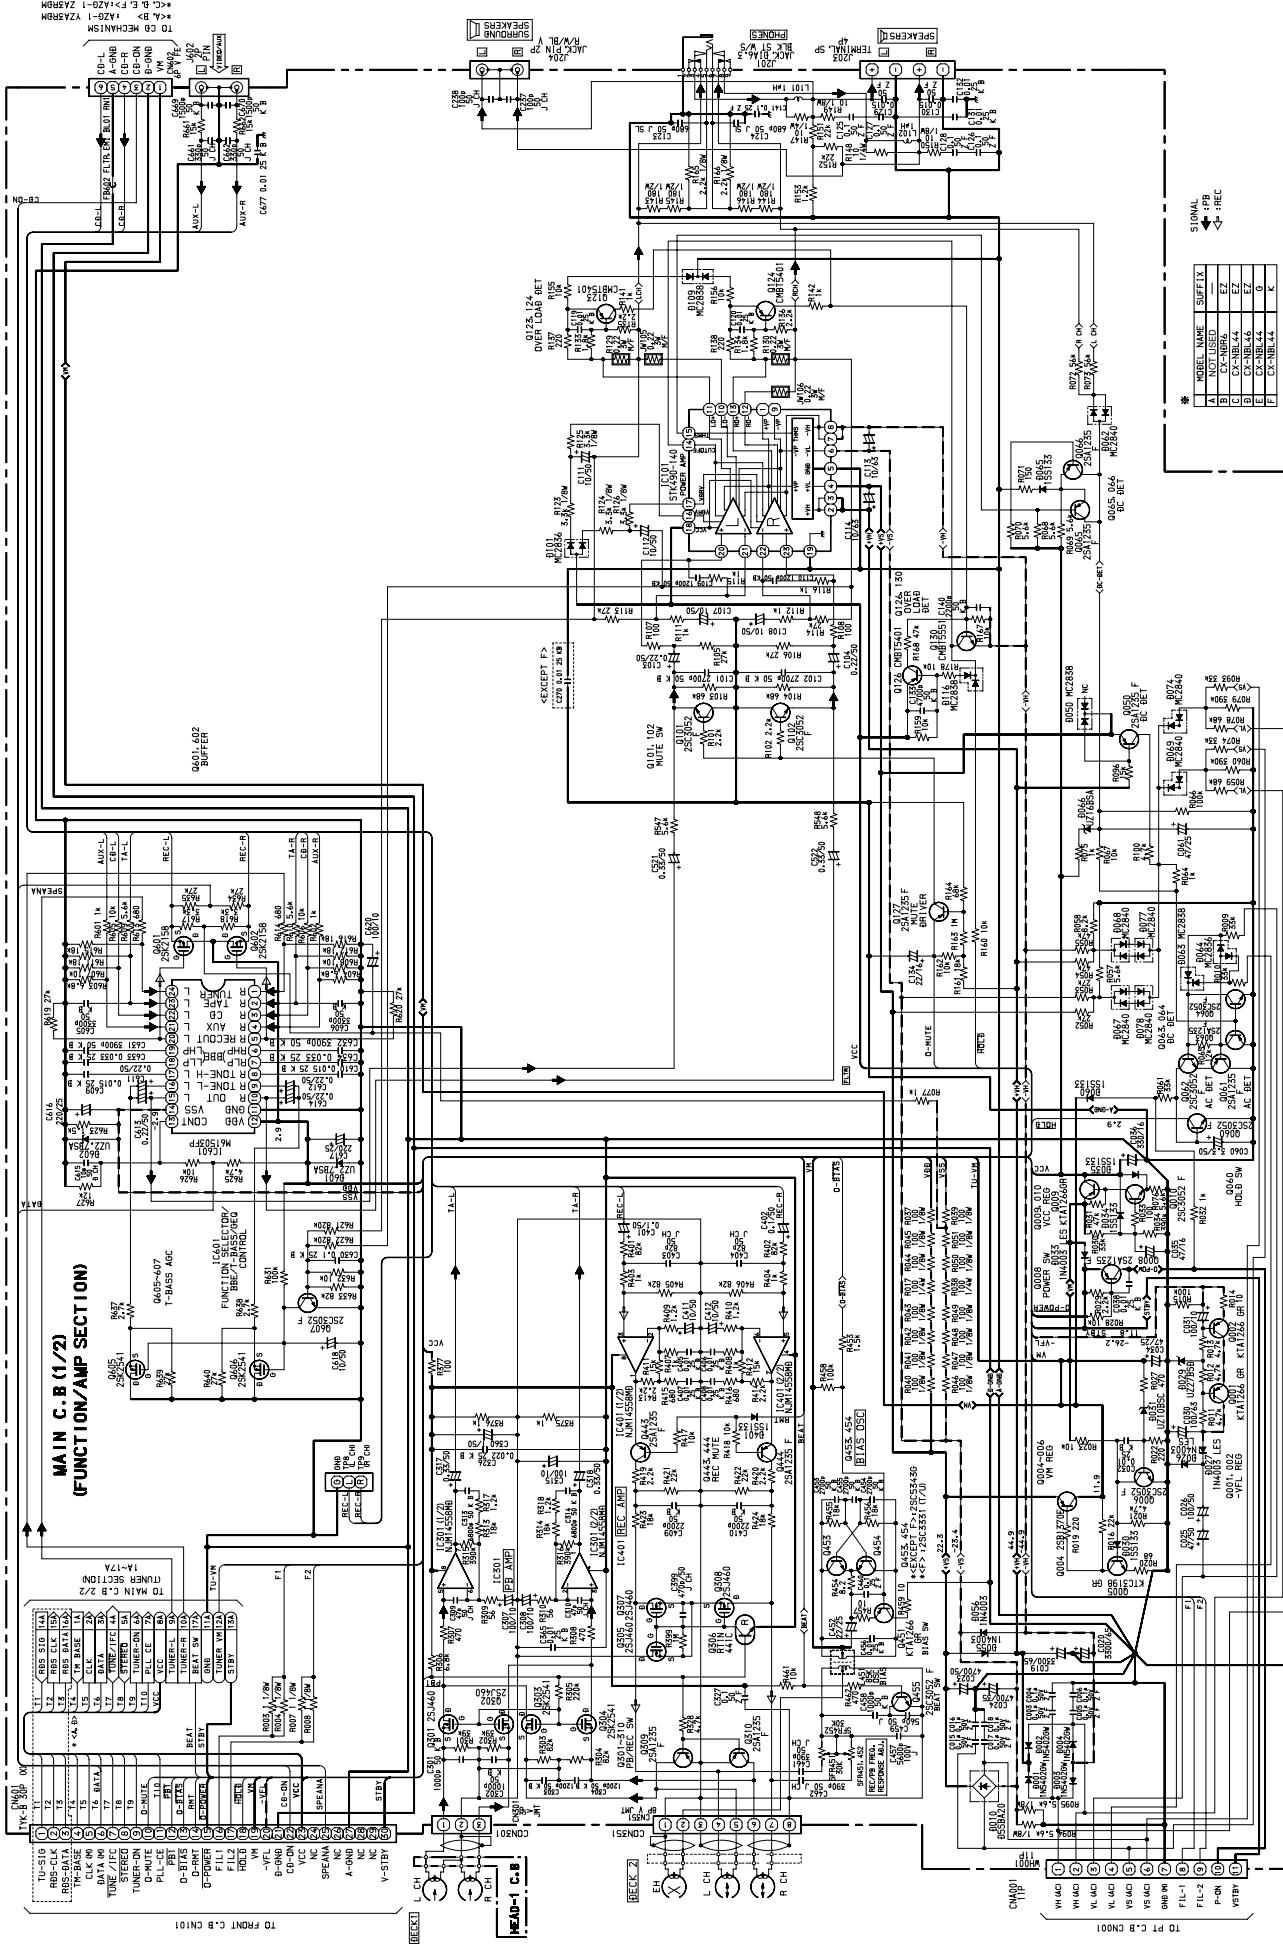

SCHEMATIC DIAGRAM-2 (TUNER SECTION)

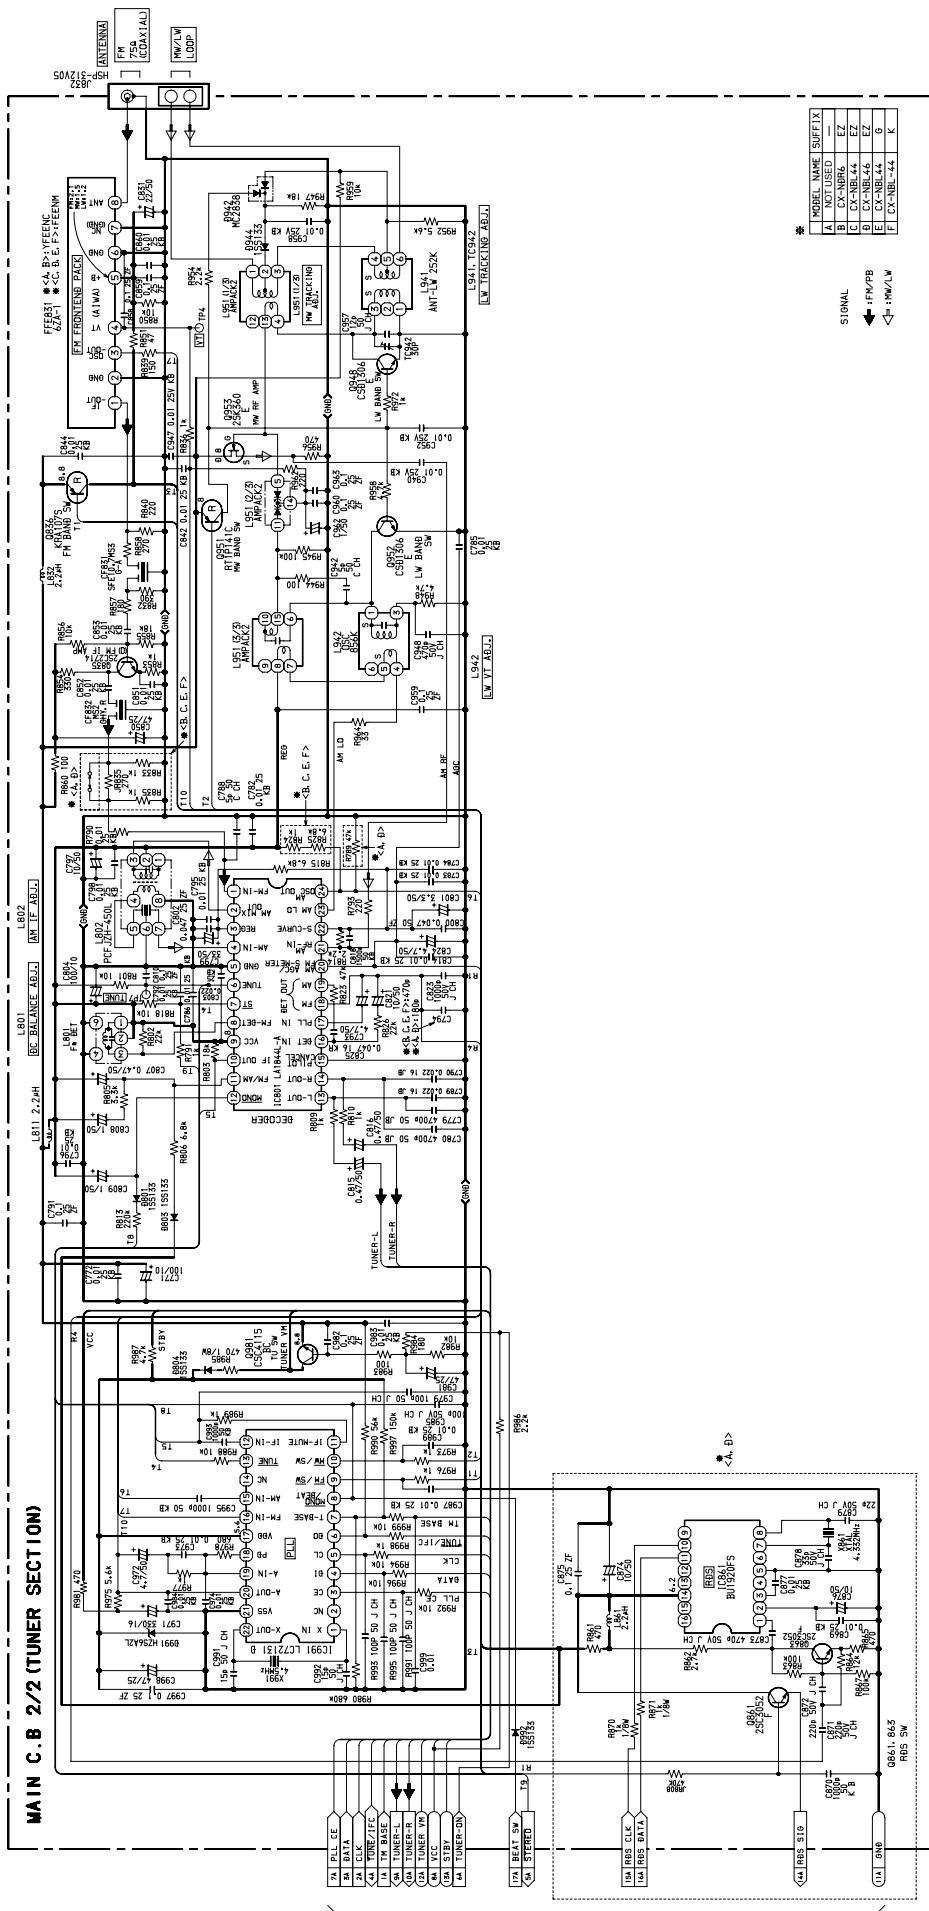

SCHEMATIC DIAGRAM-3 (PT SECTION)

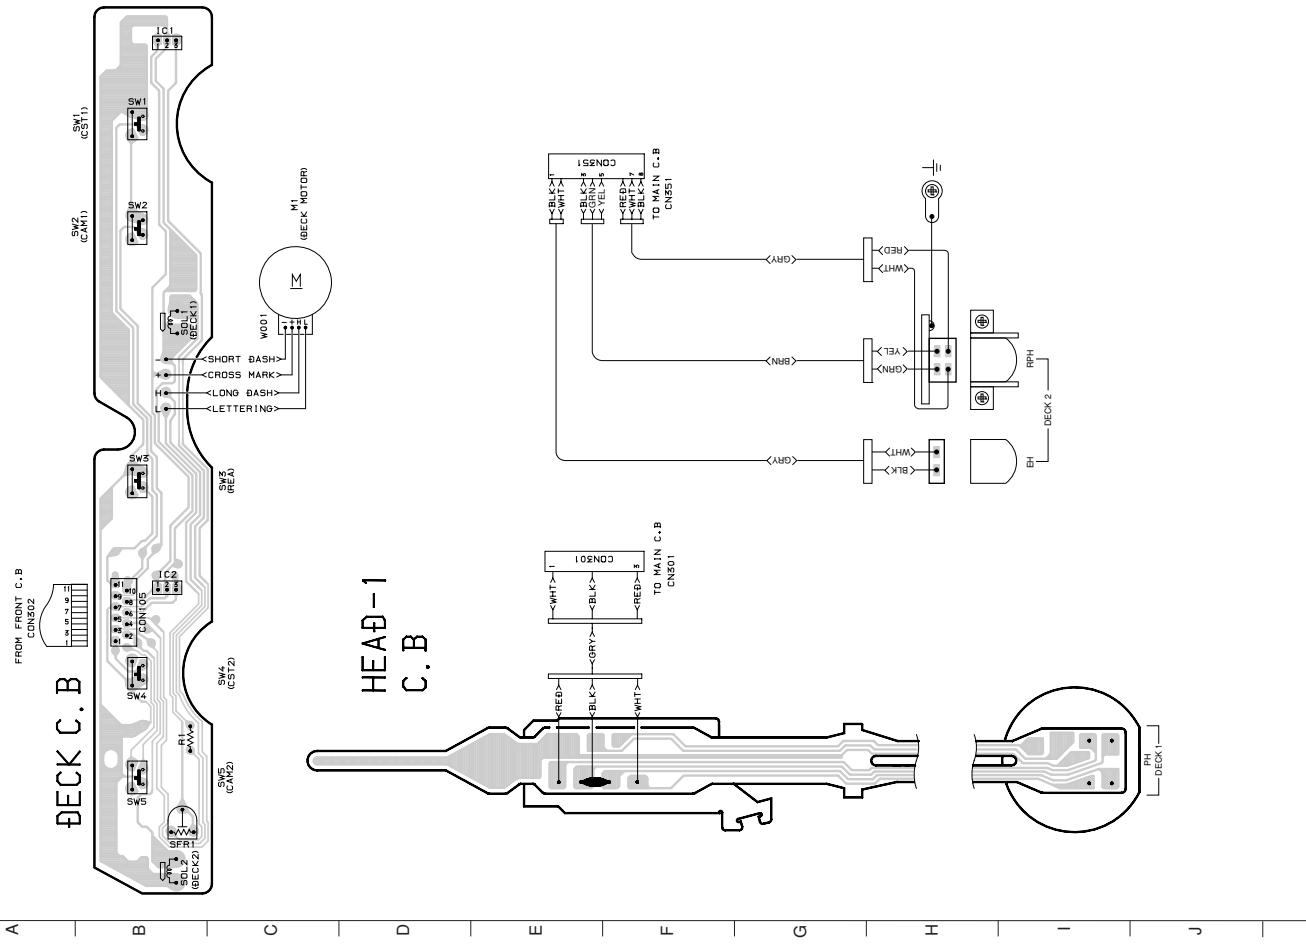


19


20

WIRING-4 (FRONT C.B)

FRONT C.B

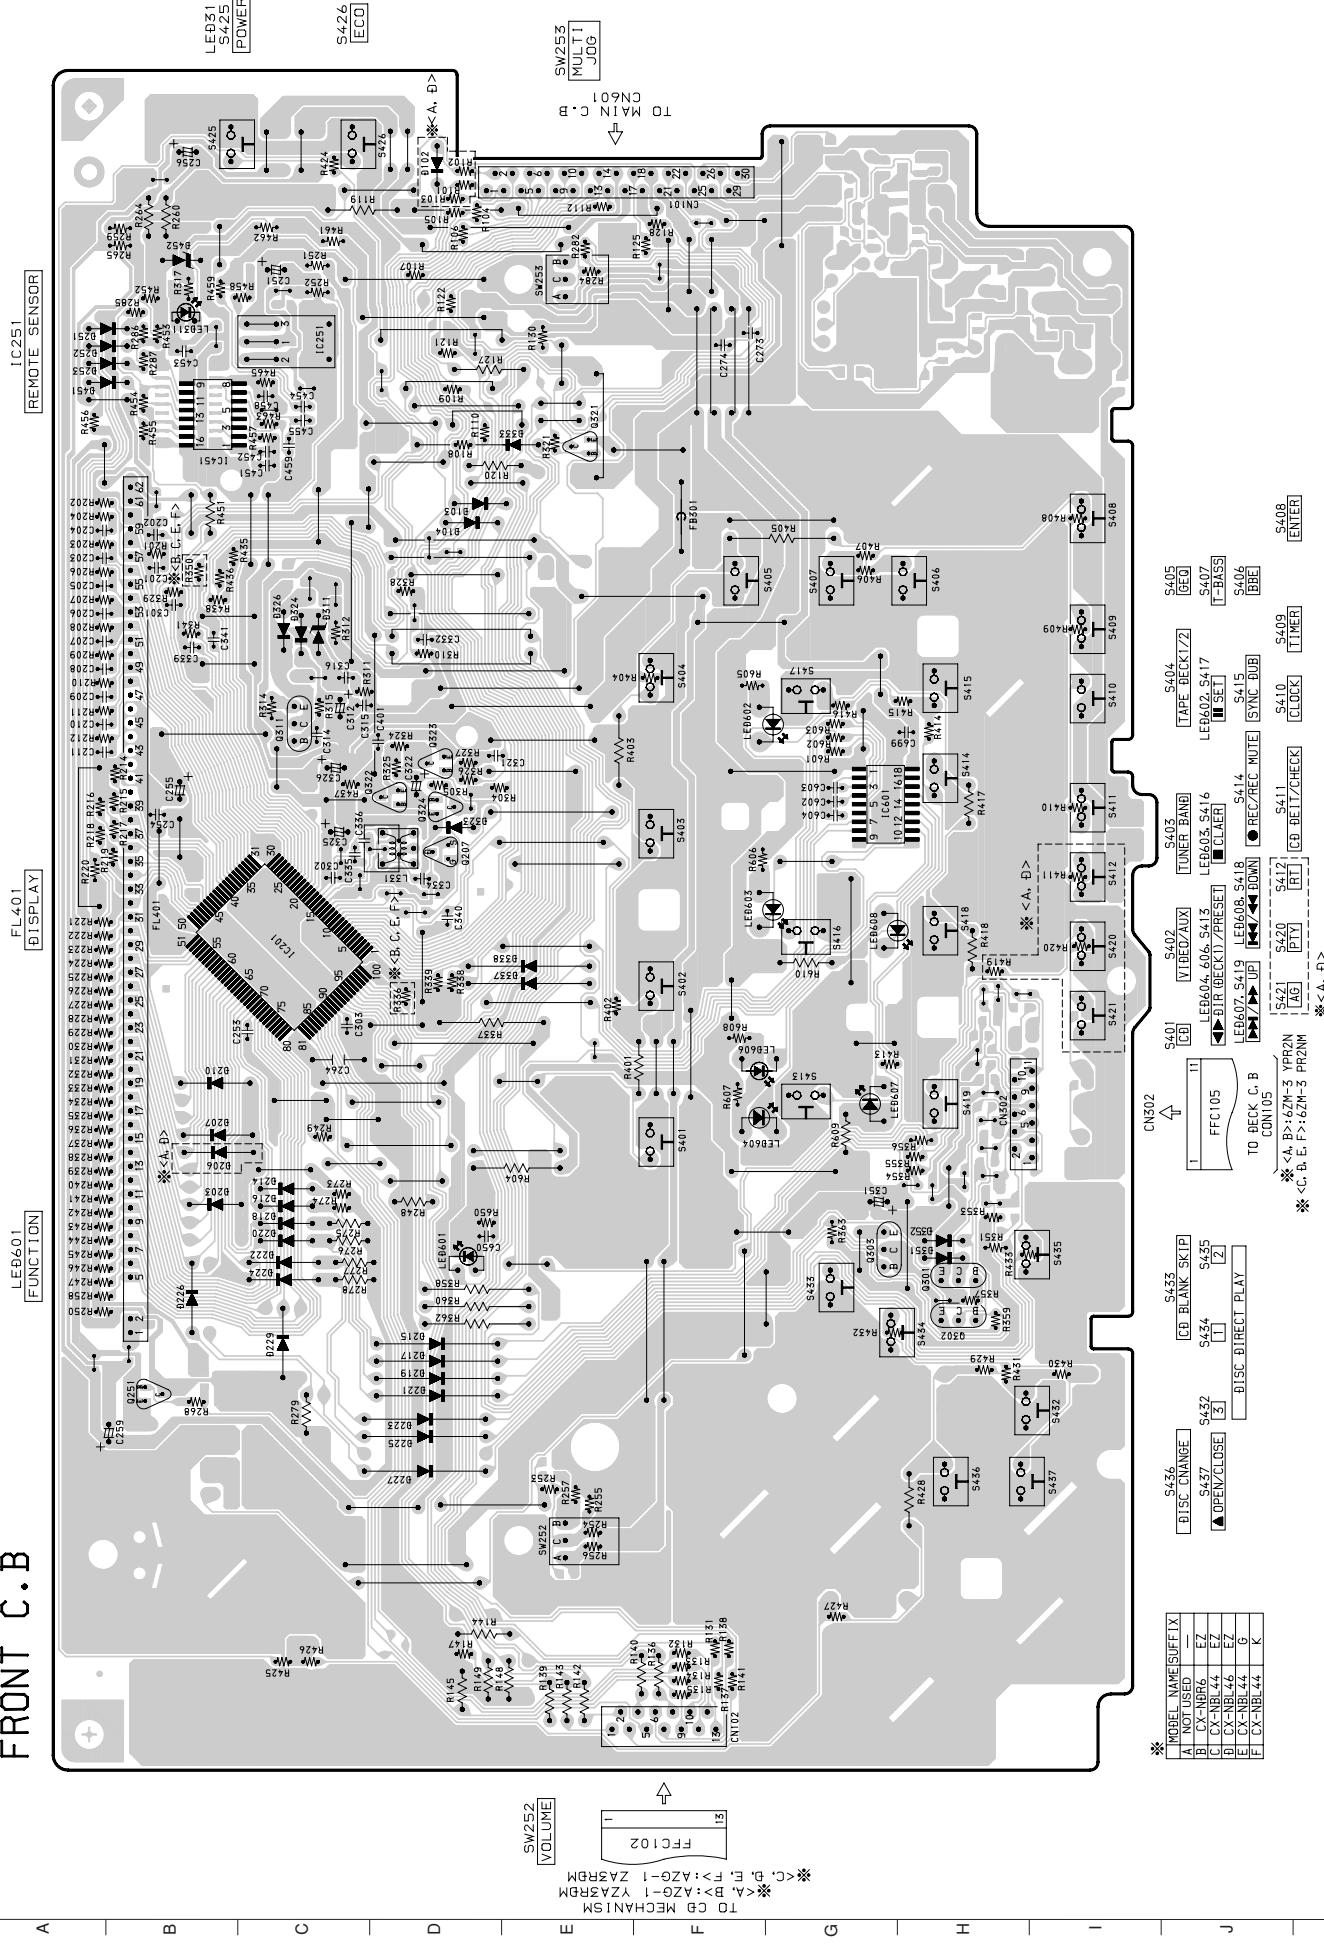


SCHEMATIC DIAGRAM-4 (FRONT SECTION)

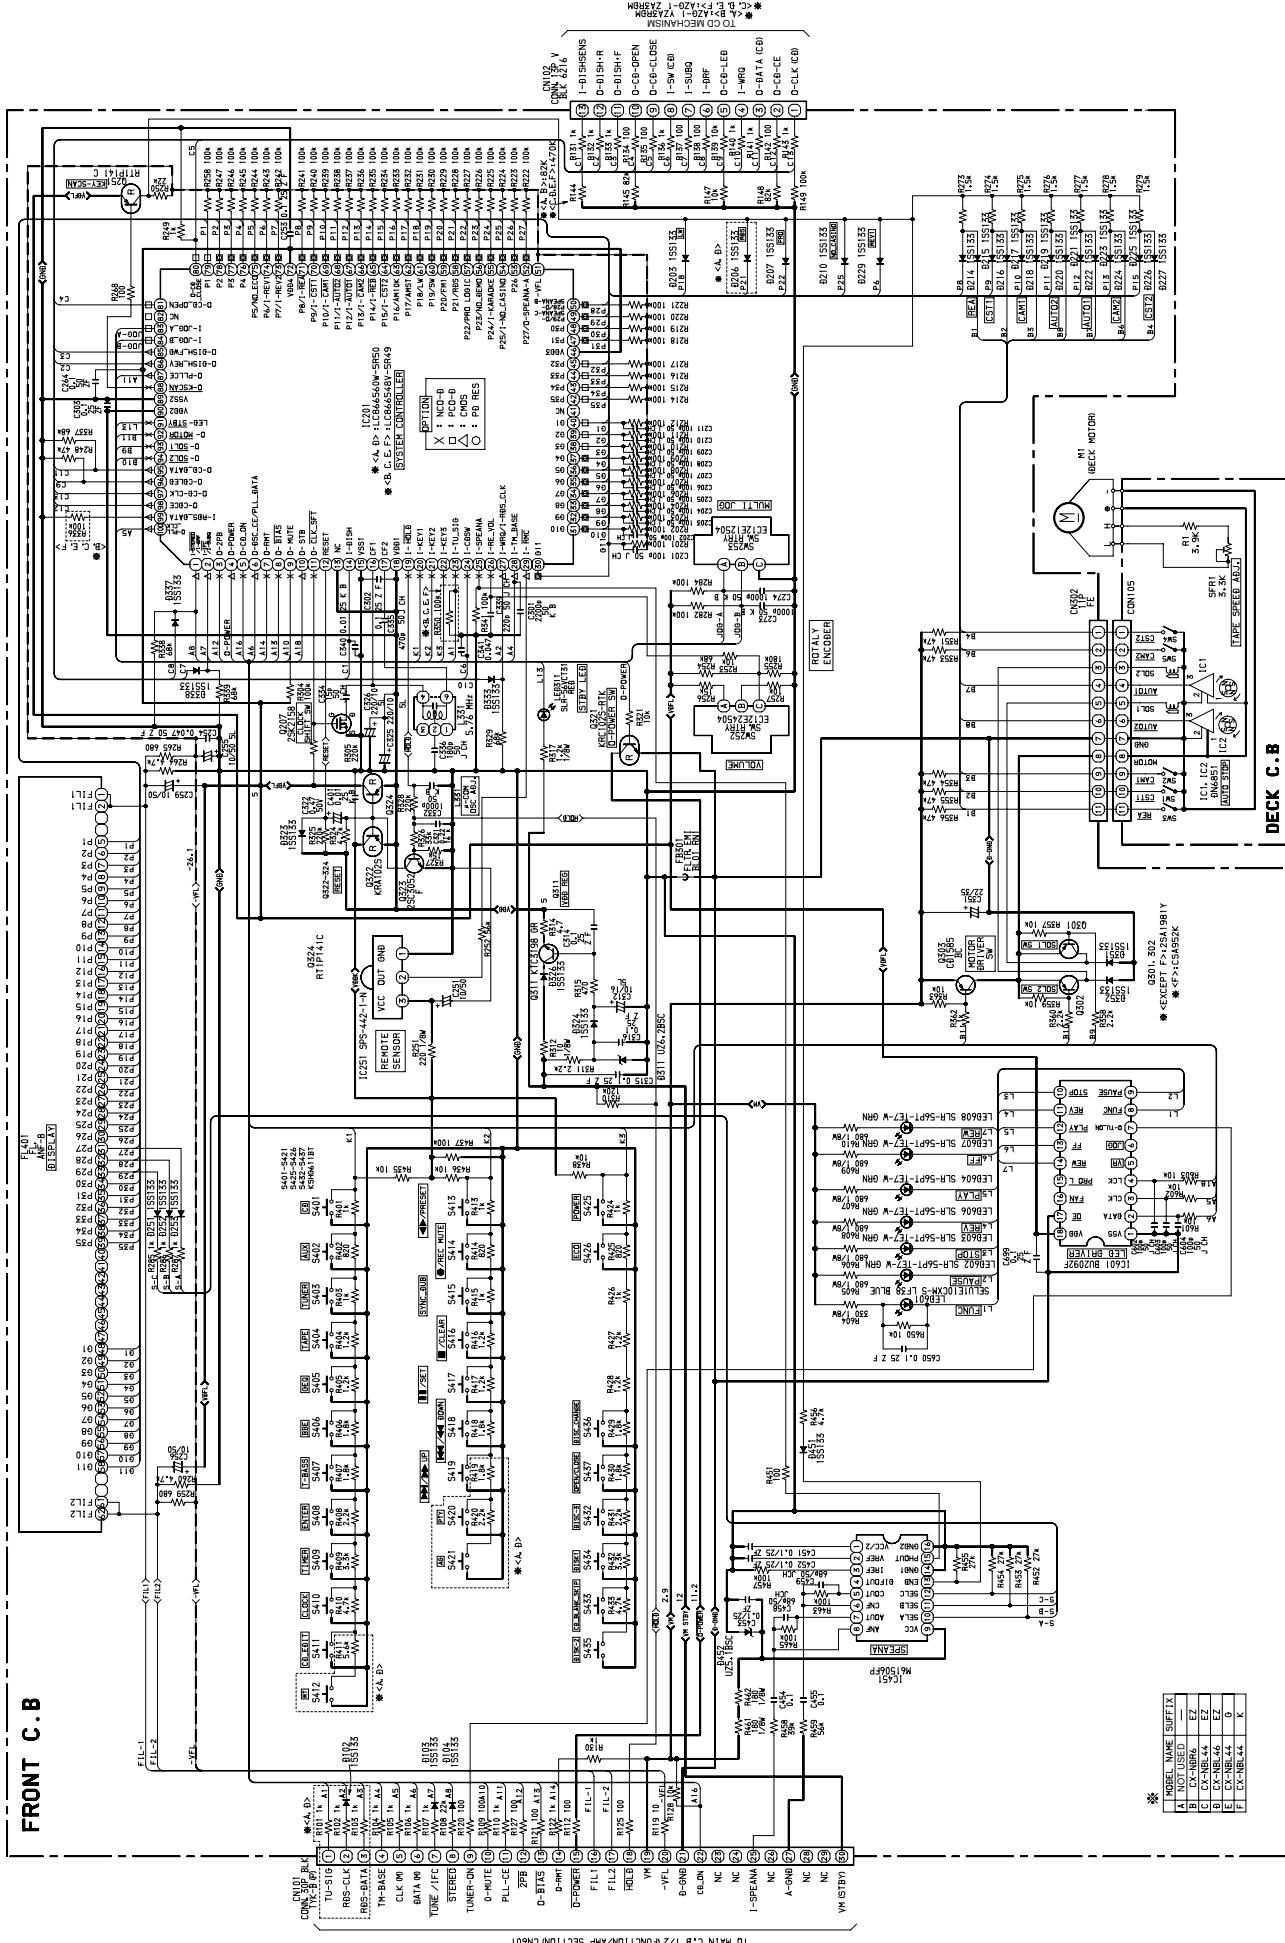


DECK C.B


IC BLOCK DIAGRAM
IC, LA1844

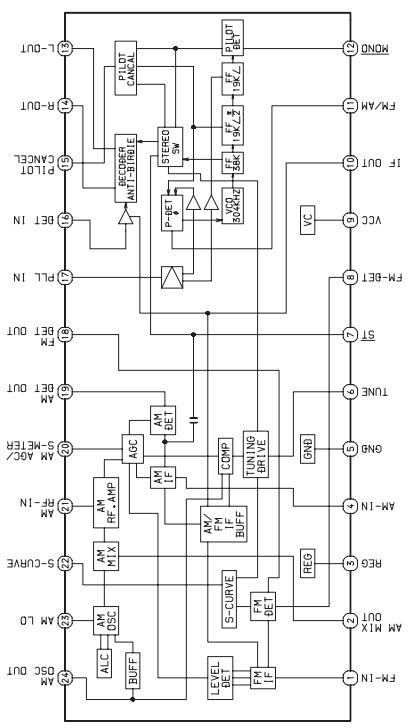


IC, M61506FP

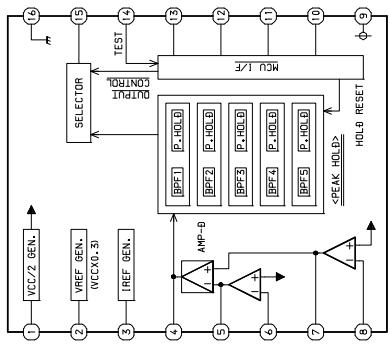


IC, BU2092F

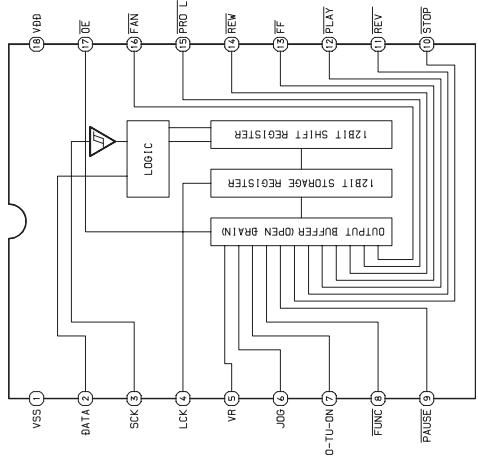

IC, LC72131D

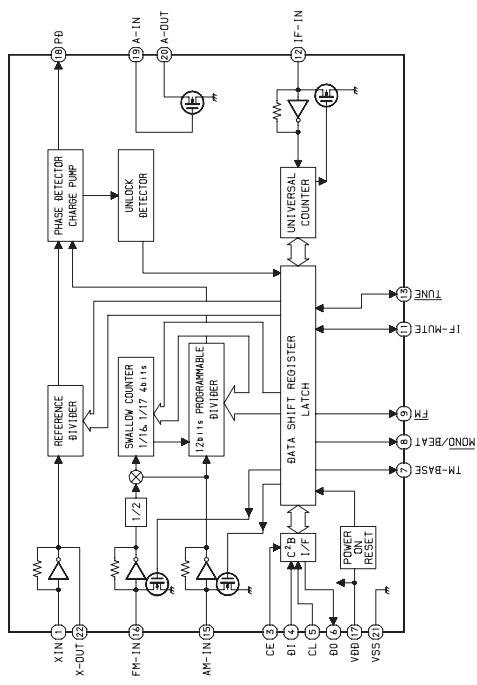

IC, M61503FP

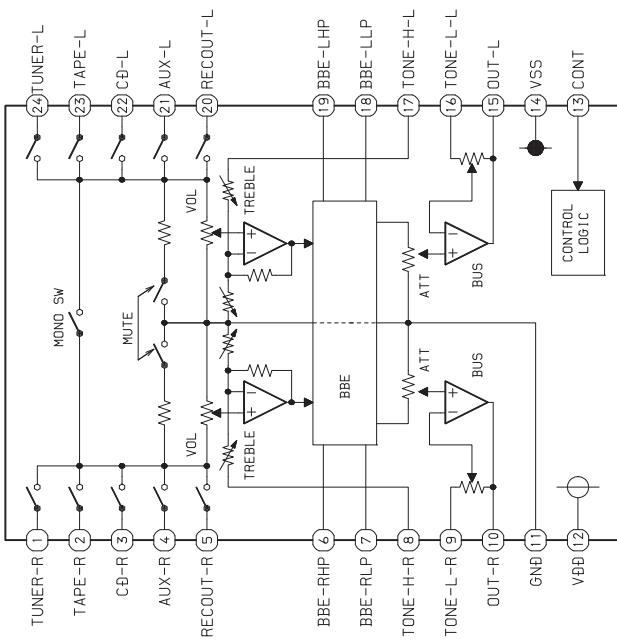


IC DESCRIPTION


IC, LC866560W-5R50 <46EZ>, LC866548V-5R49 <Except 46EZ>

| Pin No. | Pin Name | I/O | Description |
|---------|-----------------|-----|---|
| 1 | I-STEREO/I-DRF | I | Stereo detected input/CD DRF input |
| 2 | I-IFC/I-SUBQ | I | Tune IF count serial data input/CD SUBQ input |
| 3 | O-2PB | O | Deck 2 playback switch output |
| 4 | O-POWER | O | System power supply ON/OFF output |
| 5 | O-CD-ON | O | CD power ON/OFF output |
| 6 | O-PLL_DATA | O | LED driver, Tuner IC, Function IC data output |
| 7 | O-RMT | O | Deck 2 REC MUTE output |
| 8 | O-BIAS | O | Deck 2 bias ON/OFF output |
| 9 | O-MUTE | O | System mute ON/OFF output |
| 10 | O-STB | O | Latch strobe output for LED driver IC |
| 11 | O-CLK_SFT | O | Micon clock shift output |
| 12 | RESET | I | System reset |
| 13 | NC | - | Not connected |
| 14 | I-DISH | I | CD turntable photo sensor A/D converter input |
| 15 | VSS1 | - | GND |
| 16 | CF1 | - | 5.76 MHz oscillator circuit |
| 17 | CF2 | - | 5.76 MHz oscillator circuit |
| 18 | VDD1 | - | Power supply input |
| 19 | I-HOLD | I | Power failure detected input |
| 20 | I-KEY1 | I | KEY input (A/D) |
| 21 | I-KEY2 | I | KEY input (A/D) |
| 22 | I-KEY3 | I | KEY input (A/D) |
| 23 | I-TU_SIG | I | Tuner signal input |
| 24 | I-CDSW | I | CD mechanical switch A/D converter input |
| 25 | I-SPEANA | I | A/D input for spectrum analyzer display |
| 26 | I-RE_VOL | I | Rotary encoder input (VOL) |
| 27 | I-WRQ/I-RDS_CLK | I | CD WRQ input/Tuner RDS clock input |
| 28 | I-TM_BASE | I | Reference clock input for timer watch |
| 29 | I-RMC | I | System remotecontrol signal input |
| 30 ~ 40 | G11 ~ G1 | O | FL GRID output G11 ~ G1 |
| 41 | NC | - | Not connected |
| 42 ~ 45 | P35 ~ P32 | O | FL SEGMENT output P35 ~ P32 |
| 46 | VDD3 | - | Power supply input |
| 47 ~ 48 | P31 ~ P30 | O | FL SEGMENT output P31 ~ P30 |
| 49 | P29/O-SPEANA-C | O | FL SEGMENT output P29/Spectrum analyzer band switching output |
| 50 | P28/O-SPEANA-B | O | FL SEGMENT output P28/Spectrum analyzer band switching output |
| 51 | VFL | - | Power supply input for FL display |
| 52 | P27/O-SPEANA-A | O | FL SEGMENT output P27/Spectrum analyzer band switch output |
| 53 | P26 | O | FL SEGMENT output P26 |
| 54 | P25/I-NO_CASINO | I/O | FL SEGMENT output P25/NO CASINO DEMO input to diode |
| 55 | P24/I-KARAOKE | I/O | FL SEGMENT output P24/KARAOKE input to diode |
| 56 | P23/NO_DEMO | I/O | FL SEGMENT output P23/NO DEMO input to diode |

| Pin No. | Pin Name | I/O | Description |
|---------|---------------|-----|--|
| 57 | P22/PRO LOGIC | I/O | FL SEGMENT output P22/PROLOGIC input to diode (not used) |
| 58 | P21/RDS | I/O | FL SEGMENT output P21/RDS input to diode |
| 59 | P20/FM1 | I/O | FL SEGMENT output P20/FM1 input to diode |
| 60 | P19/SW | I/O | FL SEGMENT output P19/SW input to diode |
| 61 | P18/LW | I/O | FL SEGMENT output P18/LW input to diode |
| 62 | P17/AMST | I/O | FL SEGMENT output P17/AMST input to diode |
| 63 | P16/AM10K | I/O | FL SEGMENT output P16/AM10K input to diode |
| 64 | P15/I-CST2 | I/O | FL SEGMENT output P15/DECK2 cassette detect switch data input |
| 65 | P14/I-REB | I/O | FL SEGMENT output P14/DECK2 side-B record OK switch data input |
| 66 | P13/I-CAM2 | I/O | FL SEGMENT output P13/DECK2 CAM switch signal input |
| 67 | P12/I-AUTO1 | I/O | FL SEGMENT output P12/DECK1 AUTO STOP signal input |
| 68 | P11/I-AUTO2 | I/O | FL SEGMENT output P11/DECK2 AUTO STOP signal input |
| 69 | P10/I-CAM1 | I/O | FL SEGMENT output P10/DECK1 CAM switch data input |
| 70 | P9/I-CST1 | I/O | FL SEGMENT output P9/DECK1 cassette detect switch data input |
| 71 | P8/I-REA | I/O | FL SEGMENT output P8/DECK2 side A record OK switch data input |
| 72 | VDD4 | - | Power supply input |
| 73 | P7/I-REV2 | I/O | FL SEGMENT output P7/DECK2 REVERSE mode input to diode |
| 74 | P6/I-REV1 | I/O | FL SEGMENT output P6/DECK1 REVERSE mode input to diode |
| 75 | P5/NO_ECO | I/O | FL SEGMENT output P5/NO ECO MODE input to diode |
| 76 ~ 79 | P4 ~ P1 | O | FL SEGMENT output P4 ~ P1 |
| 80 | O-CD CLOSE | O | CD TRAY CLOSE data output |
| 81 | O-CD OPEN | O | CD TRAY OPEN data output |
| 82 | NC | - | Not connected |
| 83 | I-JOG_A | I | Rotary encoder A input (JOG) |
| 84 | I-JOG_B | I | Rotary encoder B input (JOG) |
| 85 | O-DISH_FWD | O | CD turntable forward rotation output |
| 86 | O-DISH_REV | O | CD turntable reverse rotation output |
| 87 | O-PLL_CE | O | PLL IC chip enable output |
| 88 | O-KSCAN | O | Switch SCAN timing output |
| 89 | VSS2 | - | GND |
| 90 | VDD2 | - | Power supply input |
| 91 | LED-STBY | O | STAND BY LED (Echo mode) output |
| 92 | O-MOTOR | O | DECK MOTOR ON/OFF output |
| 93 | O-SOL1 | O | DECK1 soleroid output |
| 94 | O-SOL2 | O | DECK2 soleroid output |
| 95 | O-CD-DATA | O | CD DATA output |
| 96 | O-CD-LED | O | CD LED output |
| 97 | O-CD CLK | O | CD clock output |
| 98 | O-CD CE | O | CD chip enable output |
| 99 | I-RDS_DATA | I | RDS data input |
| 100 | O-PLL_CLK | O | PLL IC CLOCK output |

ADJUSTMENT

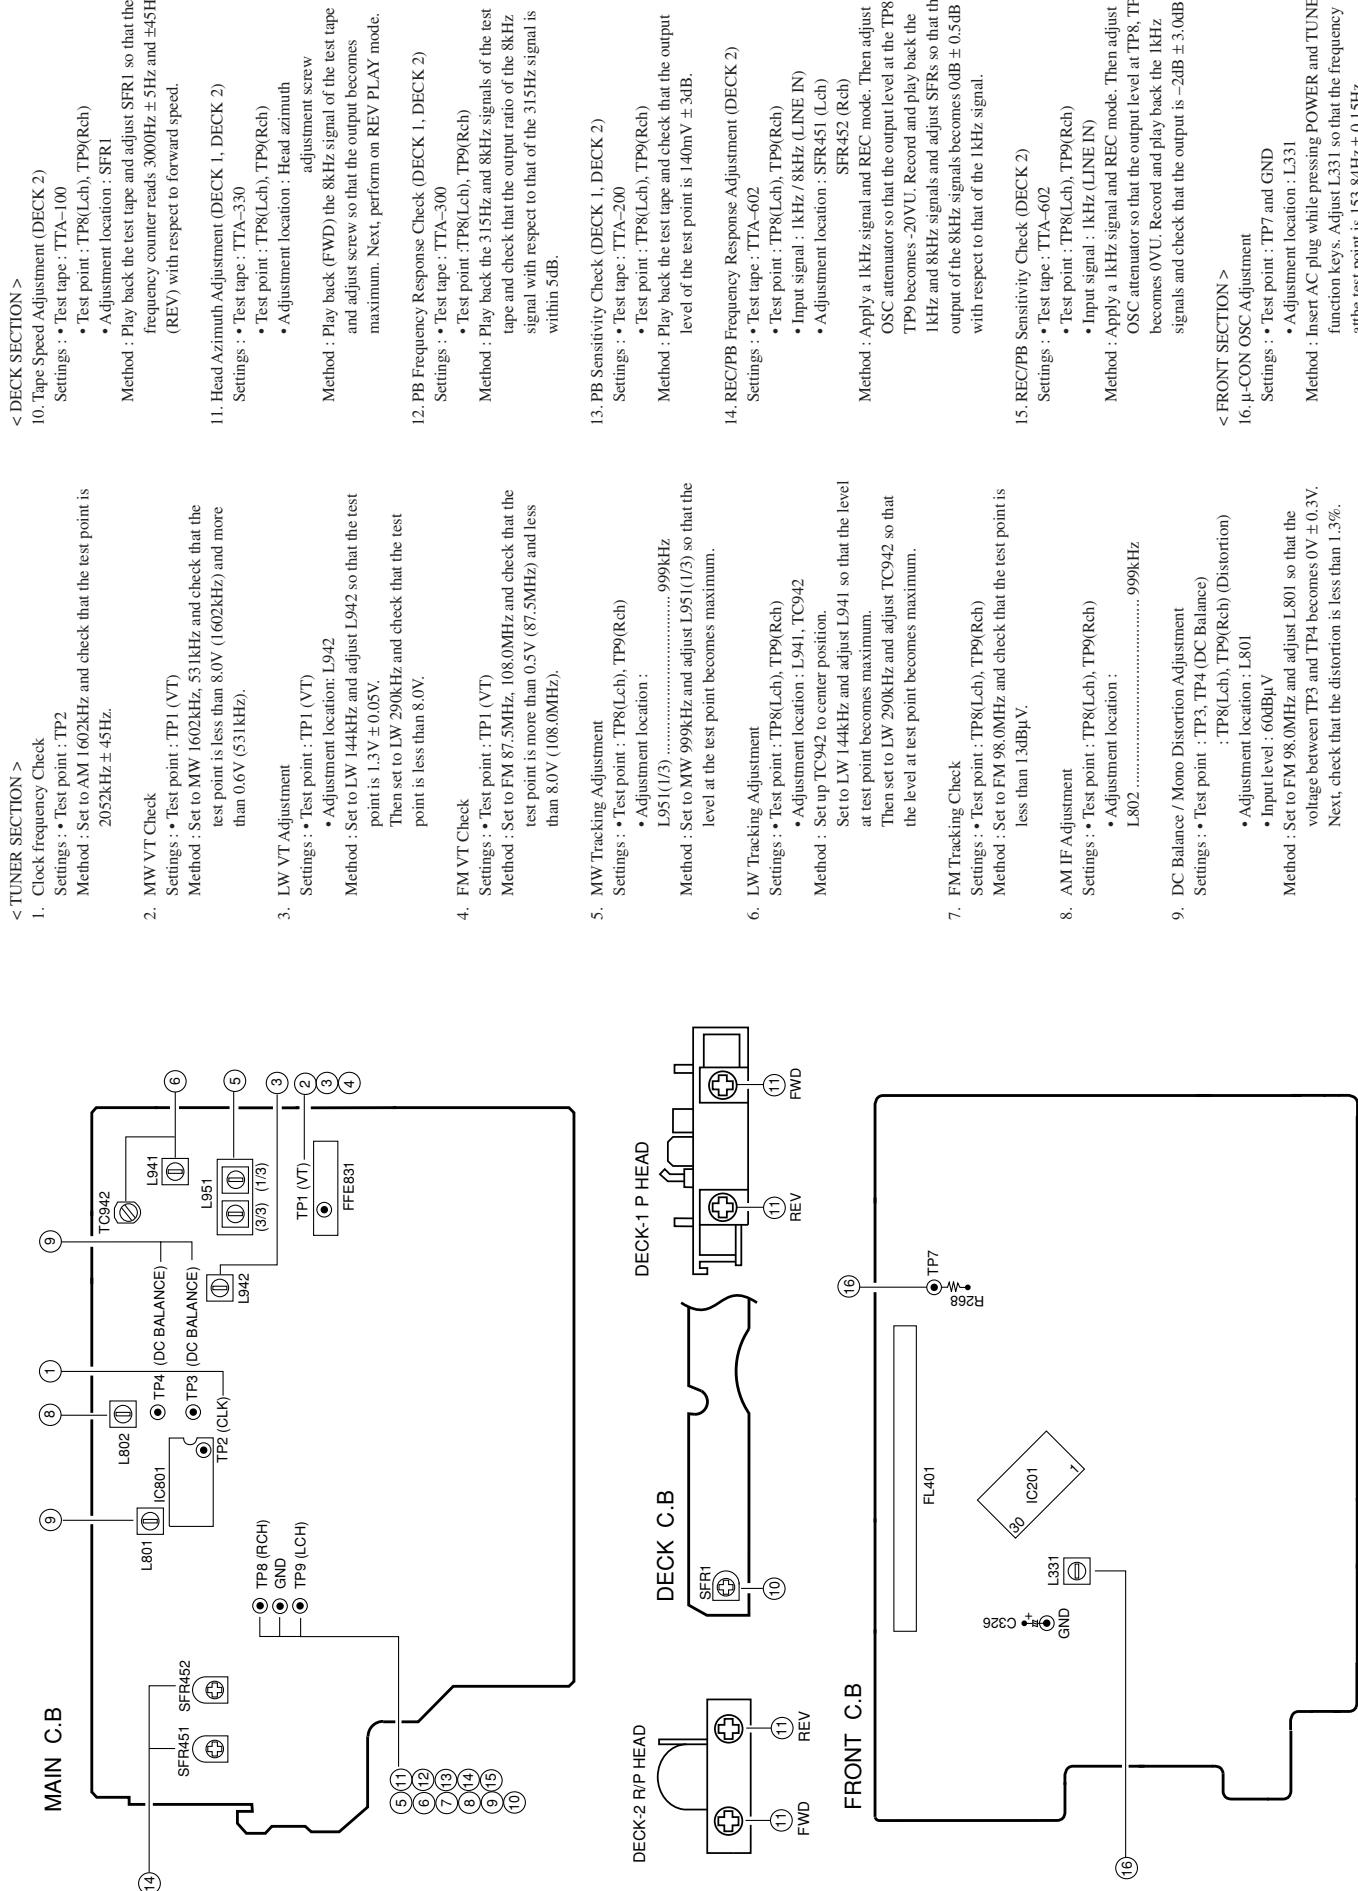

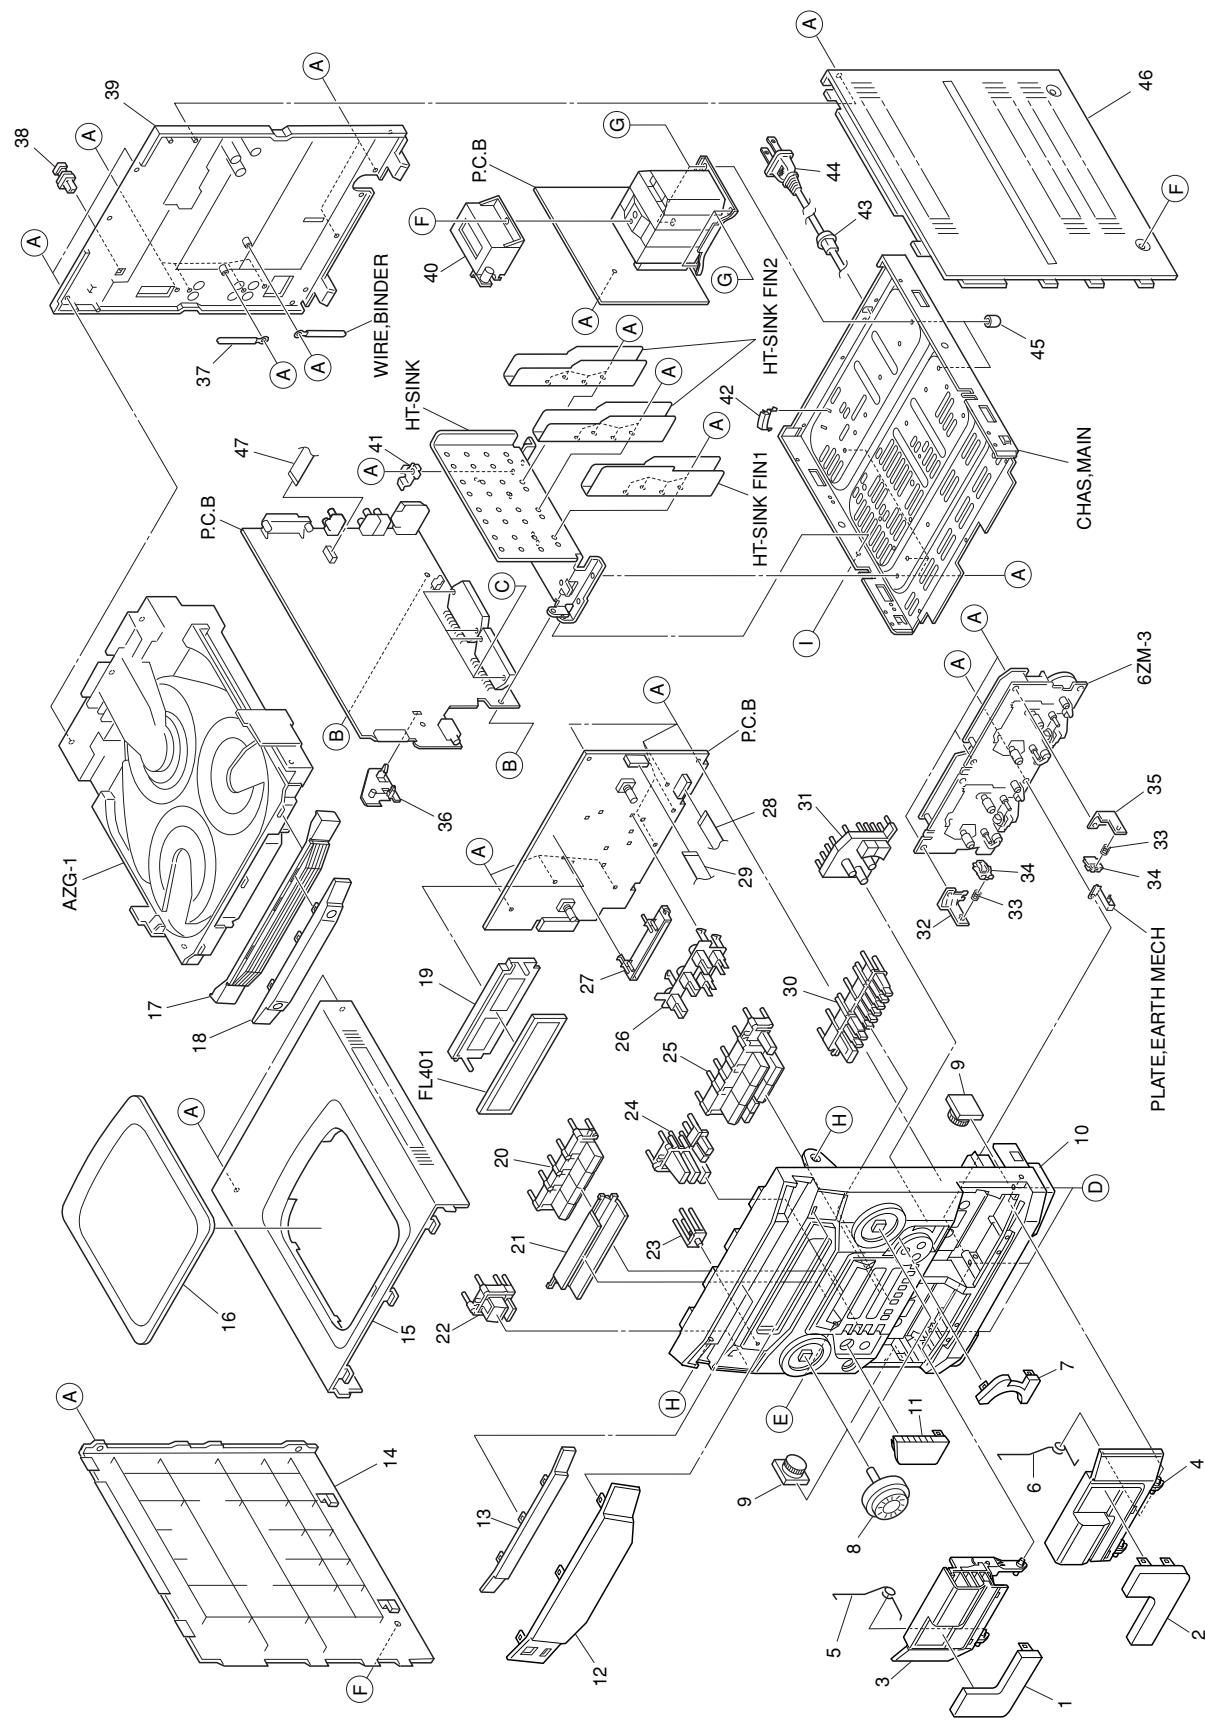

MECHANICAL MAIN PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|------------------------|---------|----------------|-------------------------|---------------------------------|
| 1 | 8A-NFJ-012-010 | | WINDOW,CASS 1 | 30 | 8A-NFJ-031-010 | | KEY,CD EDIT E<A,D> |
| 2 | 8A-NFJ-013-010 | | WINDOW,CASS 2 | 30 | 8A-NFJ-025-010 | | KEY,CD EDIT U<B,C,E,F> |
| 3 | 8A-NFJ-035-010 | | BOX,CASS 1H | 31 | 8A-NFJ-027-010 | | KEY,DISC |
| 4 | 8A-NFJ-003-010 | | BOX,CASS 2 U | 32 | 87-NF4-216-010 | | HLDR,LOCK 1 |
| 5 | 8A-NF8-207-010 | | SPR-T,EJECT 1 | 33 | 86-NF9-224-010 | | SPR-C,LOCK |
| 6 | 8A-NF8-208-010 | | SPR-T,EJECT 2 | 34 | 82-NF5-229-010 | | PLATE,LOCK(*) |
| 7 | 8A-NFJ-005-010 | | WINDOW,FR 2 | 35 | 87-NF4-217-110 | | HLDR,LOCK 2 |
| 8 | 8A-NFJ-017-010 | | KNOB,RTRY JOG<F> | 36 | 8A-NF8-206-010 | | HLDR,PWB M |
| 8 | 8A-NFJ-017-110 | | KNOB,RTRY JOG<C,D,E> | 37 | 87-064-185-010 | | HLDR,WIRE PVC 0.5 |
| 8 | 8A-NFJ-017-210 | | KNOB,RTRY JOG<A,B> | 38 | 84-ZG1-245-210 | | CAP,OPTICAL |
| 9 | 8A-NF8-209-010 | | OIL-DMPR,120 | 39 | 8A-NFJ-056-010 | | CABI,REAR 44 EZSM<C> |
| 10 | 8A-NFJ-070-010 | | CABI,FR E44<F> | 39 | 8A-NFJ-076-010 | | CABI,REAR 44 G W/O SPEC<E> |
| 10 | 8A-NFJ-070-110 | | CABI,FR E44<B,C,E> | 39 | 8A-NFJ-058-010 | | CABI,REAR 44 KSM<F> |
| 10 | 8A-NFJ-069-110 | | CABI,FR E46<A,D> | 39 | 8A-NFJ-075-010 | | CABI,REAR 46 EZSE<A> |
| 11 | 8A-NFJ-004-010 | | WINDOW,FR 1 | 39 | 8A-NFJ-057-010 | | CABI,REAR 46 EZSM <D> |
| 12 | 8A-NFJ-071-010 | | WINDOW,DISP DR6 | 39 | 8A-NFJ-074-010 | | CABI,REAR DR6 EZSE |
| 12 | 8A-NFJ-047-010 | | WINDOW,DISP E44<C,E,F> | 40 | 8A-DB8-209-010 | | HLDR,PWB PT |
| 12 | 8A-NFJ-048-010 | | WINDOW,DISP E46<A,D> | 41 | 8A-NF8-205-010 | | HLDR,IC |
| 13 | 8A-NFJ-008-010 | | WINDOW,CD | 42 | 87-NF4-221-010 | | HLDR,CABLE |
| 14 | 8A-NF8-007-010 | | PANEL,LEFT V-2 | ▲ | 43 | 87-085-185-010 | BUSHING,AC CORD(E) CM-22B |
| 15 | 8A-NF8-005-010 | | PANEL, TOP | ▲ | 44 | 87-A80-157-010 | AC CORD ASSY,E BLK CC<EXCEPT E> |
| 16 | 8A-NF8-006-010 | | WINDOW, TOP | ▲ | 44 | 87-050-081-110 | AC CORD ASSY,G<E> |
| 17 | 8A-NFJ-009-010 | | PANEL,TRAY | 45 | 8Z-NB8-240-010 | COVER, PL | |
| 18 | 8A-NFJ-010-010 | | WINDOW,TRAY | 46 | 8A-NF8-008-010 | PANEL,RIGHT V-2 | |
| 19 | 88-NF8-205-010 | | GUIDE,FL | 47 | 88-906-251-110 | FF-CABLE,6P 1.25 | |
| 20 | 8A-NFJ-018-010 | | KEY,FUN | A | 87-067-703-010 | BVT2+3-10 W/0 SLOT | |
| 21 | 8A-NFJ-016-010 | | REFLECTOR,FUN | B | 87-NF4-224-010 | S-SCREW,IT3B+3-8 CU | |
| 22 | 8A-NFJ-014-010 | | KEY,POWER | C | 87-067-581-010 | BVT2+3-15 W/0 SLOT | |
| 23 | 8A-NFJ-015-010 | | REFLECTOR,ECO | D | 87-067-688-010 | BVTT+3-6 | |
| 24 | 8A-NFJ-019-010 | | KEY,GEQ | E | 87-723-096-410 | QT2+3-10 W/0 SLOT BLK | |
| 25 | 8A-NFJ-029-010 | | KEY,ASSY OPE REV | F | 87-067-641-010 | UTT2+3-8 W/0 SLOT BLK | |
| 26 | 8A-NF8-203-010 | | GUIDE,OPE REV | G | 87-078-191-010 | S-SCREW,IT+4-10 SWCH12A | |
| 27 | 8A-NF8-201-010 | | GUIDE,FUN | H | 87-721-097-410 | QT2+3-12 W/0 SLOT | |
| 28 | 88-911-101-110 | | FF-CABLE,11P 1.25 | I | 87-721-096-410 | QT2+3-10 W/0 SLOT | |
| 29 | 88-913-301-110 | | FF-CABLE,13P-1.25 | | | | |

| TYPE | MODEL NAME | SUFFIX |
|------|------------|--------|
| A | NOT USED | — |
| B | CX-NDR6 | EZ |
| C | CX-NBL44 | EZ |
| D | CX-NBL46 | EZ |
| E | CX-NBL44 | G |
| F | CX-NBL44 | K |

COLOR NAME TABLE



| Basic color symbol | Color | Basic color symbol | Color | Basic color symbol | Color |
|--------------------|-------------------|--------------------|--------------------|--------------------|--------------------|
| B | Black | C | Cream | D | Orange |
| G | Green | H | Gray | L | Blue |
| LT | Transparent Blue | N | Gold | P | Pink |
| R | Red | S | Silver | ST | Titan Silver |
| T | Brown | V | Violet | W | White |
| WT | Transparent White | Y | Yellow | YT | Transparent Yellow |
| LM | Metallic Blue | LL | Light Blue | GT | Transparent Green |
| LD | Dark Blue | DT | Transparent Orange | GM | Metallic Green |
| YM | Metallic Yellow | DM | Metallic Orange | PT | Transparent Pink |

MECHANISM MAIN PARTS LIST 1/1 <6ZM-3 PR2NM (44/46), 6ZM-3 YPR2N (DR6)>

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO | PART NO. | KANRI NO. | DESCRIPTION | REF. NO | PART NO. | KANRI NO. | DESCRIPTION |
|---------|----------------|-----------|-----------------------|---------|----------------|-----------|----------------------|
| 1 | 86-ZM3-215-010 | 1E | CHAS ASSY,RS | 41 | 82-ZM1-216-310 | 0E | GEAR, REEL |
| 2 | 86-ZM3-202-010 | 0E | BASE,HEAD S | 42 | 86-ZM3-213-010 | 0E | S-SCREW, HLDR, MOT 3 |
| 3 | 86-ZM3-205-010 | 0E | SPR-C,RPH S | 43 | 82-ZM1-225-210 | 0E | GEAR, FR |
| 4 | 82-ZM1-333-210 | 0E | PLATE, LINK 2 | 44 | 82-ZM1-226-010 | 0E | GEAR, RW |
| 5 | 86-ZM3-206-010 | 0E | SPR-C,EH S | 45 | 82-ZM3-333-310 | 1B | SLIP DISK ASSY 2 |
| 6 | 87-A90-403-010 | 1B | HEAD, RPH MS15R | 46 | 82-ZM1-338-010 | 0E | BELT FR4 |
| 7 | 86-ZM3-201-010 | 1A | CHAS, HEAD S (DECK L) | 47 | 82-ZM1-237-610 | 1A | FLY-WHL ASSY, RW |
| 7 | 82-ZM3-206-210 | 1A | BELT, R | 47 | 09-001-420-010 | 1A | FLY-WHL ASSY, R3W |
| 8 | 87-045-347-010 | 1H | MOT, SHU2L 70 (M1) | 48 | 82-ZM1-259-210 | 0E | SPR-T, PINCH R |
| 9 | 82-ZM1-269-210 | 0E | SPR-T, BRG | 49 | 82-ZM1-341-110 | 1A | LVR ASSY, PINCH L2 |
| 10 | 82-ZM1-219-110 | 0E | SPR-T, LINK | 50 | 82-ZM1-258-210 | 0E | SPR-T, PINCH L |
| 11 | 86-ZM3-209-010 | 0E | S-SCREW, ASIMUTHS | 51 | 82-ZM1-314-110 | 0E | PLATE, HEAD |
| 12 | 86-ZM3-207-010 | 0E | S-SCREW, RPH | 52 | 82-ZM1-208-310 | 0E | HLDR, HEAD |
| 13 | 87-A90-404-010 | 0E | HEAD, EH LE15B | 53 | 87-A90-366-010 | 1D | HEAD, PH YK50P-BF414 |
| 14 | 86-ZM3-208-010 | 0E | S-SCREW, EH | 54 | 82-ZM1-207-810 | 0E | GUIDE TAPE |
| 15 | 86-ZM3-203-010 | 1B | HLDR,MOTS | 55 | 82-ZM1-213-010 | 0E | SPR-T, HEAD |
| 16 | 82-ZM1-245-210 | 0E | HLDR, IC | 56 | 82-ZM1-210-110 | 0E | GEAR, HT |
| 17 | 82-ZM1-218-010 | 0E | SPR-E, HB | 57 | 86-ZM4-206-010 | 0E | S-SCREW AZIMUTH L |
| 18 | 86-ZM3-214-010 | 0E | BELT, SUB RR | 58 | 82-ZM1-234-310 | 1A | FLY-WHL, L ASSY |
| 19 | 82-ZM1-222-210 | 0E | LVR, PLAY | 59 | 82-ZM3-339-010 | 0E | SHAFT, COUPLER N3 |
| 20 | 82-ZM1-217-410 | 0E | REEL TABLE | 60 | 82-ZM3-335-210 | 0E | PULLEY, COUPLER M3 |
| 21 | 82-ZM1-244-510 | 0E | SPR-C, BT | 61 | 86-ZM1-206-010 | 0E | BELT, MAIN L |
| 22 | 82-ZM1-285-410 | 0E | SPR-C, BT L | 62 | 82-ZM1-266-110 | 0E | LVR, DIR |
| 23 | 82-ZM1-257-010 | 0E | SPR-T, CAS | 63 | 82-ZM1-214-010 | 0E | SPR-T, DIR |
| 24 | 82-ZM3-221-010 | 0E | PULLEY, MOT 2M | A | 87-251-071-410 | 0E | U+2.6-4 |
| 25 | 82-ZM1-242-010 | 0E | LVR, CAS | B | 80-ZM6-243-010 | 0E | SH, 1.75-3.6-0.5 SLT |
| 26 | 82-ZM1-243-010 | 0E | LVR, STOP | C | 82-ZM3-334-010 | 0E | PW, 2.16-6-0.4 |
| 27 | 82-ZM1-344-110 | 1A | LVR ASSY, PINCH | D | 80-ZM6-207-010 | 0E | V+1.6-7 |
| 28 | 86-ZM3-204-010 | 0E | SPR-T, PINCHDS | E | 85-ZM3-202-010 | 0E | S-SCREW TG |
| 29 | 82-ZM1-240-110 | 0E | LVR, REC (DECK 2) | F | 82-ZM1-288-010 | 0E | SH, 1.63-3.2-0.5 SLT |
| 30 | 86-ZM3-210-010 | 0E | BELT, RS | G | 87-B10-043-010 | 0E | W-P, 0.99-4-0.25 SLT |
| 32 | 82-ZM3-305-110 | 0E | GEAR, CAM M2 | H | 87-571-032-410 | 0E | VIT+2-3 |
| 33 | 82-ZM1-227-310 | 0E | LVR, TRIG | | | | |
| 34 | 82-ZM3-306-110 | 0E | LVR, FR M2 | | | | |
| 35 | 82-ZM1-265-110 | 0E | SPR-E, TRIG | | | | |
| 36 | 87-761-073-410 | 0E | VFT2+2.6-6 W/O SLOT | | | | |
| 37 | 82-ZM1-255-310 | 0E | SPR-E, LVR DIR | | | | |
| 38 | 82-ZM1-322-010 | 0E | SPR-T, FR60 | | | | |
| 39 | 82-ZM1-220-210 | 0E | GEAR, IDLER | | | | |
| 40 | 82-ZM3-616-010 | 0E | RING MAGNET 4 | | | | |


MECHANISM EXPLODED VIEW 1/1 <6ZM-3 PR2NM (44/46), 6ZM-3 YPR2N (DR6)>

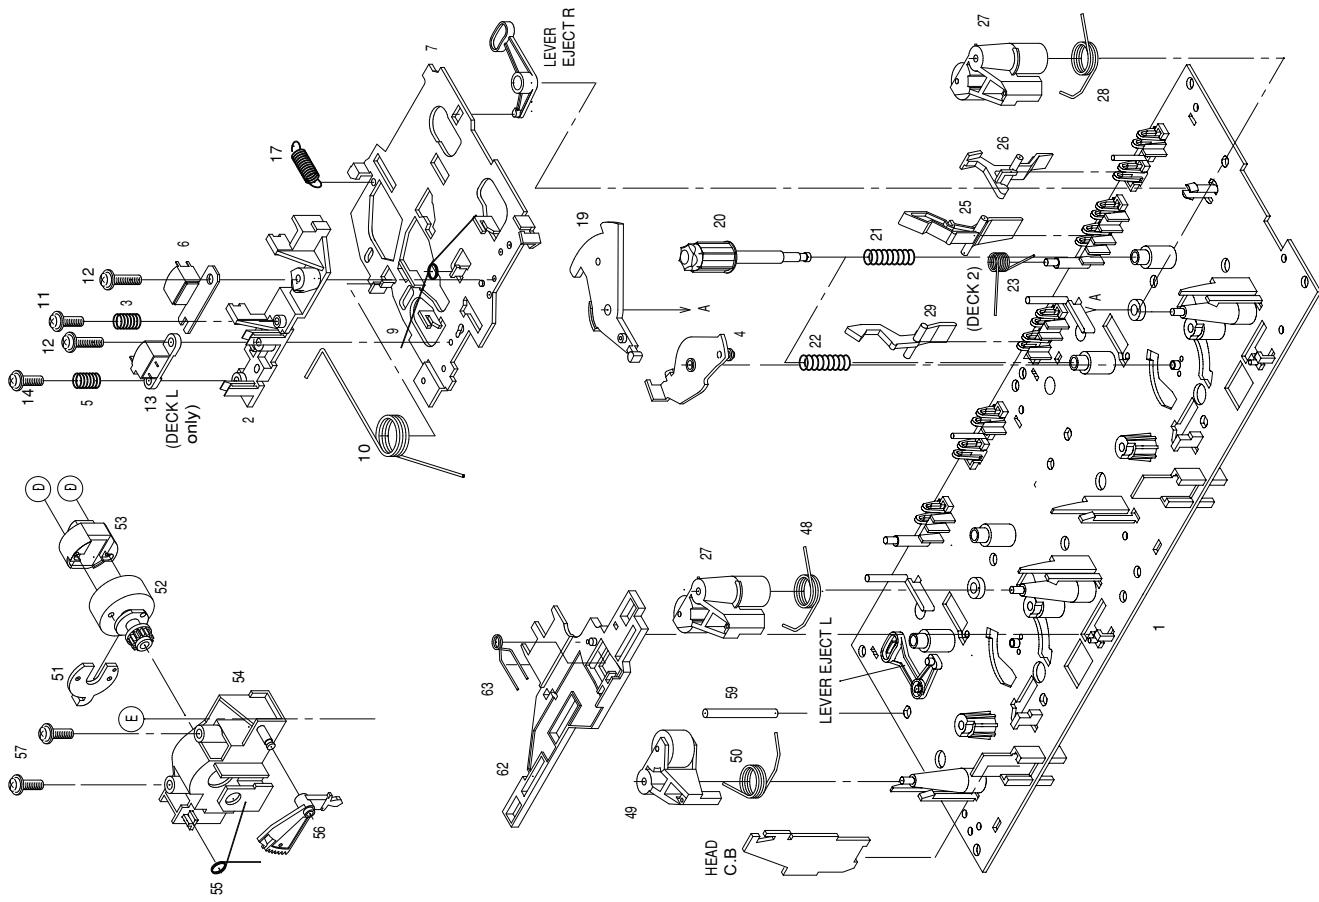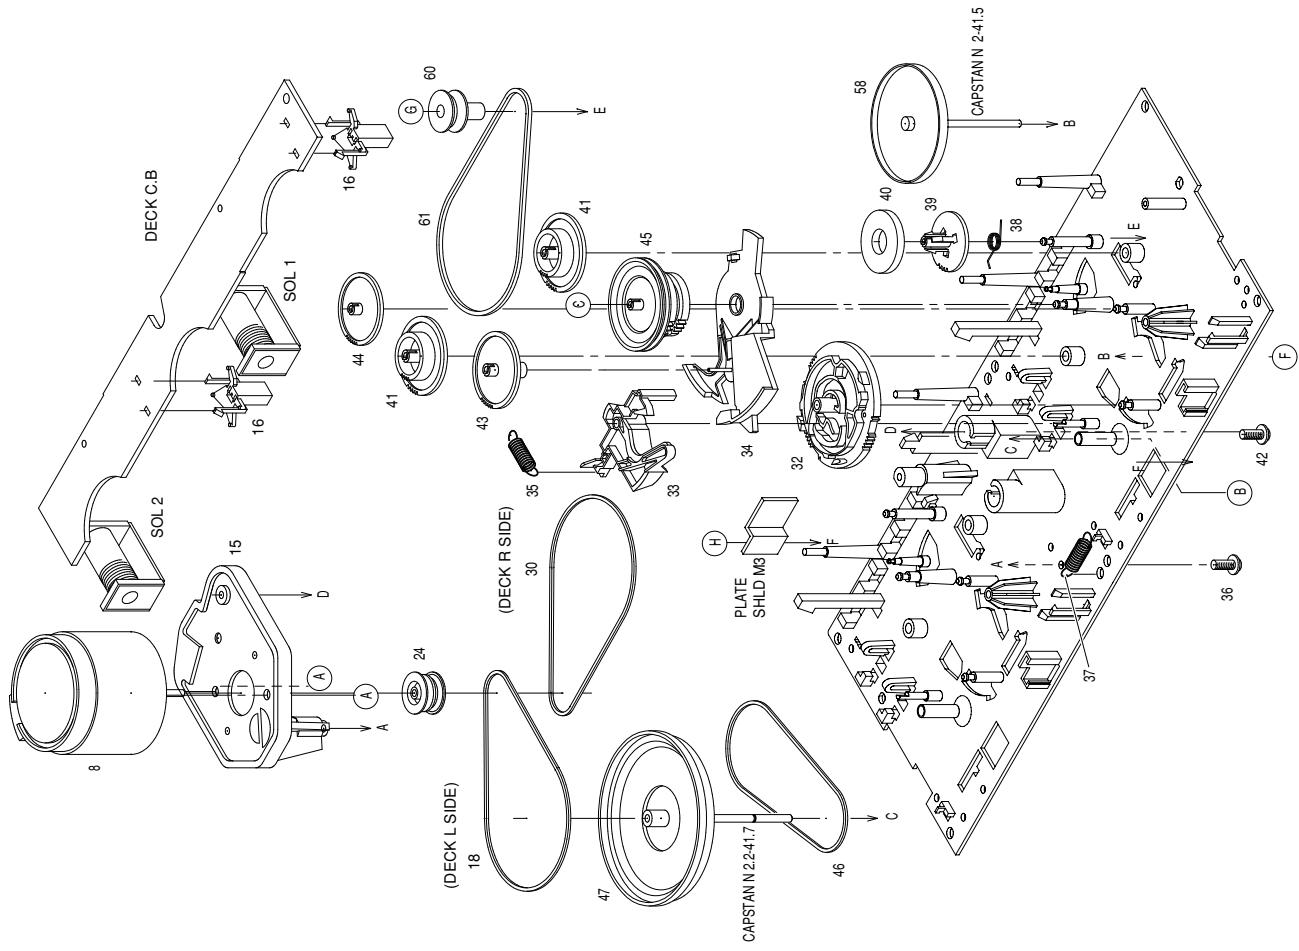


SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

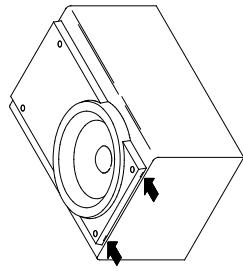


TOOLS

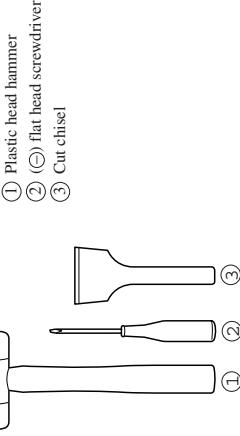

Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

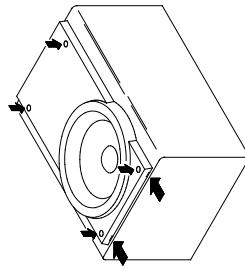

SPEAKER (SX-NBL40) <44EZ, 44K, NDR6EZ> PARTS LIST

| DESCRIPTIONで判断できない場合は"REFERENCE NAME LIST"を参照してください。 | | | |
|---|----------------|--------------------|--------------------|
| If can't understand for Description please kindly refer to "REFERENCE NAME LIST". | | | |
| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
| 1 | 8A-NSX-001-010 | PANEL, FR | PANEL, W 140 |
| 2 | 8A-NSX-014-010 | PANEL, BA, L | SPKR, W 60 |
| 3 | 8A-NSX-015-010 | PANEL, BA, R | SPKR, CERAMIC ASSY |
| 4 | 8A-NSX-016-010 | PANEL, DUCT | |
| 5 | 8A-NSX-003-010 | GRILLE, FRAME ASSY | |
| 6 | 8A-NSX-010-010 | PANEL, TW, R | |
| 7 | 8A-NSX-011-010 | PANEL, TW, L | |
| 8 | 8A-NSX-012-010 | PROTECTOR, TW, R | |
| 9 | 8A-NSX-013-010 | PROTECTOR, TW, L | |
| 10 | 87-NS7-611-010 | CORD, SPKR | |
| 11 | 8A-NSX-002-010 | SPKR, W 140 | |
| 12 | 8A-NSX-004-010 | SPKR, TW, 60 | |
| 13 | 87-NS7-612-010 | SPKR, CERAMIC ASSY | |

SPEAKER (SX-NBL42) <46EZ> PARTS LIST

| DESCRIPTIONで判断できない場合は"REFERENCE NAME LIST"を参照してください。 | | | |
|---|----------------|--------------------|--------------|
| If can't understand for Description please kindly refer to "REFERENCE NAME LIST". | | | |
| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
| 1 | 8A-NSX-001-010 | PANEL, FR | PANEL, BA, L |
| 2 | 8A-NSX-014-010 | PANEL, BA, R | PANEL, BA, L |
| 3 | 8A-NSX-015-010 | PANEL, BA, R | PANEL, DUCT |
| 4 | 8A-NSX-016-010 | PANEL, DUCT | PANEL, TW, R |
| 5 | 8A-NSX-010-010 | PANEL, TW, R | |
| 6 | 8A-NSX-011-010 | PANEL, TW, L | |
| 7 | 8A-NSX-012-010 | PROTECTOR, TW, R | |
| 8 | 8A-NSX-013-010 | PROTECTOR, TW, L | |
| 9 | 8A-NSX-014-010 | CORD, SPKR | |
| 10 | 87-NS7-611-010 | SPKR, W 140 | |
| 11 | 8A-NSX-002-010 | SPKR, W 140 | |
| 12 | 8A-NSX-004-010 | SPKR, TW, 60 | |
| 13 | 87-NS7-612-010 | SPKR, CERAMIC ASSY | |

SPEAKER (SX-NSZ53) <44G> PARTS LIST

| DESCRIPTIONで判断できない場合は"REFERENCE NAME LIST"を参照してください。 | | | |
|---|----------------|------------------|-----------------------|
| If can't understand for Description please kindly refer to "REFERENCE NAME LIST". | | | |
| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
| 1 | 8A-NSZ-001-010 | PANEL, FR | PANEL, BA, S35 |
| 2 | 8A-NSZ-002-010 | PANEL, FR | PROTECTOR, TWA |
| 3 | 8A-NSZ-003-010 | PANEL, BA, L | GRILLE, FRAME ASSY, L |
| 4 | 8A-NSZ-024-010 | PANEL, BA, R | |
| 5 | 8A-NSZ-004-010 | GRILLE, FRAME | |
| 6 | 8A-NSZ-006-010 | BADGE, AINA, S35 | |
| 7 | 87-NS7-611-010 | CORD, SPKR | |
| 8 | 88-NS7-608-010 | SPKR, CERAMIC | |
| 9 | 88-NS7-603-010 | SPKR, W 140 | |
| 10 | 8A-NSZ-004-010 | SPKR, TW, 60 | |

SPEAKER (SX-NSZ53) <46EZ> PARTS LIST

| DESCRIPTIONで判断できない場合は"REFERENCE NAME LIST"を参照してください。 | | | |
|---|----------------|------------------|-----------------------|
| If can't understand for Description please kindly refer to "REFERENCE NAME LIST". | | | |
| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
| 1 | 8A-NSZ-001-010 | PANEL, FR | PANEL, BA, S35 |
| 2 | 8A-NSZ-002-010 | PANEL, FR | PROTECTOR, TWA |
| 3 | 8A-NSZ-003-010 | PANEL, BA, L | GRILLE, FRAME ASSY, L |
| 4 | 8A-NSZ-024-010 | PANEL, BA, R | |
| 5 | 8A-NSZ-004-010 | GRILLE, FRAME | |
| 6 | 8A-NSZ-006-010 | BADGE, AINA, S35 | |
| 7 | 87-NS7-611-010 | CORD, SPKR | |
| 8 | 88-NS7-608-010 | SPKR, CERAMIC | |
| 9 | 88-NS7-603-010 | SPKR, W 140 | |
| 10 | 8A-NSZ-004-010 | SPKR, TW, 60 | |

How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.
2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.
3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

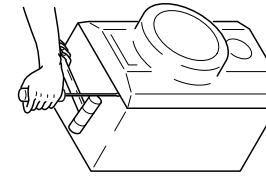
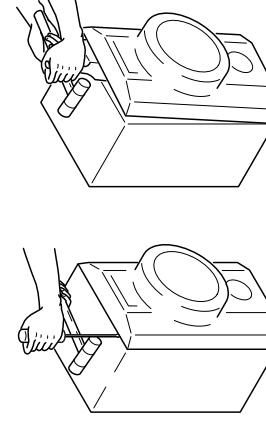


Fig-1

Fig-2


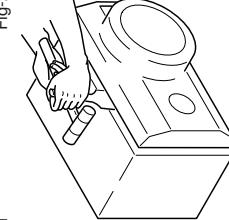


Fig-3

How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.



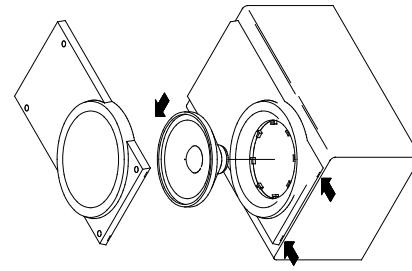

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111