


aiwa



NSX-S111 NSX-S112 NSX-S116 NSX-S16

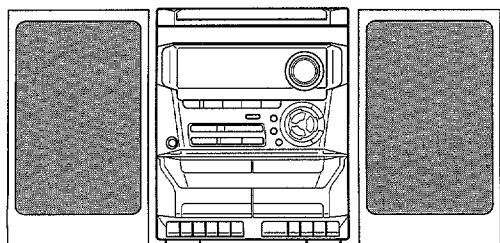

COMPACT DISC /
STEREO CASSETTE RECEIVER

- BASIC TAPE MECHANISM : TN-21ZFW-1815
- BASIC CD MECHANISM : 4ZG-1 Z3RNDSHJM,Z4RNDSHC
- TYPE : HR,HE,HC,HS
EZ,K,G,V

REVISION PUBLISHING

| SYSTEM | SPEAKER | CD - CASSEIVER | REMOTE CONTROLLER |
|-------------------------------|----------|----------------|-------------------|
| NSX-S111 (TYPE : HR,HE,HS) | SX-NS112 | CX - NS111 | RC UNIT ZAS02 |
| NSX-S116 (TYPE : HC) | SX-NS116 | CX - NA116 | |
| NSX-S111 (TYPE : EZ,K,G,V) | SX-NS112 | CX - NS111 | |
| NSX-S112 (TYPE : EZ) | | CX - NS112 | |
| NSX-S16 (TYPE : EZ) | SX-NS116 | CX - NS16 | RC UNIT ZAS17 |
| NSX-S116 (TYPE : EZ) | | CX - NS116 | |

- This Service Manual is the "Revision Publishing" and replaces Simple Manual of NSX-S111<HE> (S/M Code No. 09-993-404-3T2), NSX-S111/S112/S116/S16<HR,EZ,K,G,V,HS> (S/M Code No. 09-991-404-3T3).
- If requiring information about the CD mechanism, see Service Manual of 4ZG-1 (S/M Code No. 09-992-325-4N2).

SERVICE MANUAL

SPECIFICATIONS

<FM Tuner section>

Tuning range HR,HE,HC,EZ,K,G,HS :
87.5 MHz to 108 MHz
V:
FM1 (OIRT)
65 MHz to 74 MHz(10 kHz step)
FM2 (CCIR)
87.5 MHz to 108 MHz(50 kHz step)

Usable sensitivity (IHF) HR,HE,HC : 13.2 dBf
EZ,K : 16.8 dBf
V: FM1 : 15.3 dBf
FM2 : 12.8 dBf

Antenna terminals 75 ohms (unbalanced)

<AM/MW Tuner section>

Tuning range 530 kHz to 1710 kHz (10 kHz step)
531 kHz to 1602 kHz (9 kHz step)

Usable sensitivity 350 μ V/m

Antenna Loop antenna

<SW Tuner section> (HR,HE,HC)

Tuning range 5.900 MHz to 17.900 MHz

Usable sensitivity 40 μ V(IEC)

Antenna Wire antenna

<LW Tuner section> (EZ,K,G,HS)

Tuning range 144 kHz to 290 kHz

Usable sensitivity 1400 μ V/m

Antenna Loop antenna

<Amplifier section>

Power output HR,HE,HC :
Rated : 10 W + 10 W (6 ohms, T.H.D.
1 %, 1 kHz)
Reference: 12W + 12W (6 ohms, T.H.D.
10 %, 1 kHz)

EZ,K,V,G,HS :
Rated : 10 W + 10 W (6 ohms, T.H.D.
1 %, 1 kHz/DIN 45500)
Reference: 12W + 12W (6 ohms, T.H.D.
10 %, 1 kHz/DIN 45324)
DIN MUSIC POWER: 29 W + 29 W

Total harmonic distortion 0.1% (6W, 1 kHz, 6ohms, DIN AUDIO)

Inputs VIDEO/AUX : 500 mV

HR,HE,HC only :

MIC: 1.8 mV (10 kohms)

Outputs

SPEAKERS:

accept speakers of 6 ohms or more

PHONES (stereo jack) :

accepts headphones of 32 ohms or more

<Cassette deck section>

Track format 4 tracks, 2 channels stereo

Frequency response 50 Hz - 8000 Hz

Recording system AC bias

Heads Deck 1 : Recording/playback X 1,
erase head x 1

Deck 2 : Playback head x 1

<Compact disc player section>

Laser Semiconductor laser ($\lambda = 780$ nm)

D-A converter 1 bit dual

Signal-to-noise ratio 85 dB (1 kHz, 0 dB)

Harmonic distortion 0.05% (1 kHz, 0 dB)

Wow and flutter Unmeasurable

<Speaker system SX-NS112 / SX-NS116>

Cabinet type 2way, bass reflex (magnetic shielded type)

Speakers Woofer : 120 mm cone type

Tweeter : 20 mm ceramic type

Impedance 6 ohms

Output sound pressure level 86 dB/W/m

Dimensions (W x H x D) 220 x 324 x 235 mm

Weight 2.0 kg

<General>

Power requirements HR,HE,HC :
120V / 220-230V / 240V AC,
switchable, 50/60 Hz

K,V,EZ,G,HS : 230V AC, 50Hz

Power consumption HR,HE,HC,EZ,V,HS : 50W

K,G : 55 W

Dimensions of main unit 260 x 324 x 349.5 mm

(W x H x D) (10¹/₄ x 12⁷/₈ x 13⁷/₈ in.)

Weight of main unit 4.9 kg


• Design and specifications are subject to change without notice.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

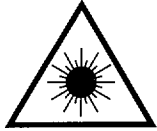

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

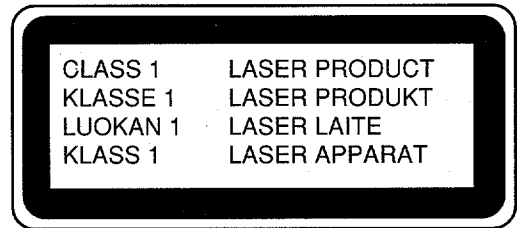


Precaution to replace Optical block

(KSS-213F) <Z3RNDSHJ>
(KSS-213IFAM) <Z4RNDSH>

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure to ground body and workbench, and ensure clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

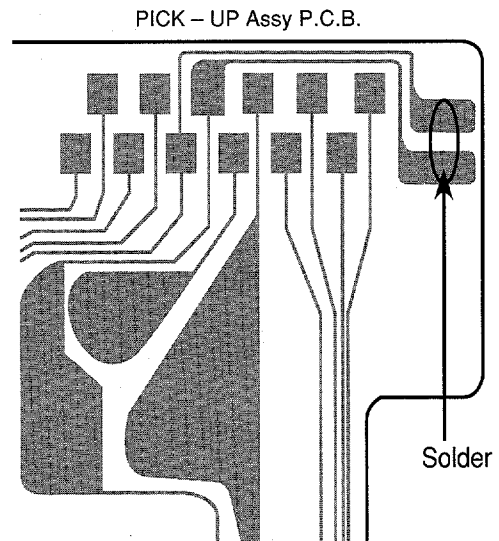

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

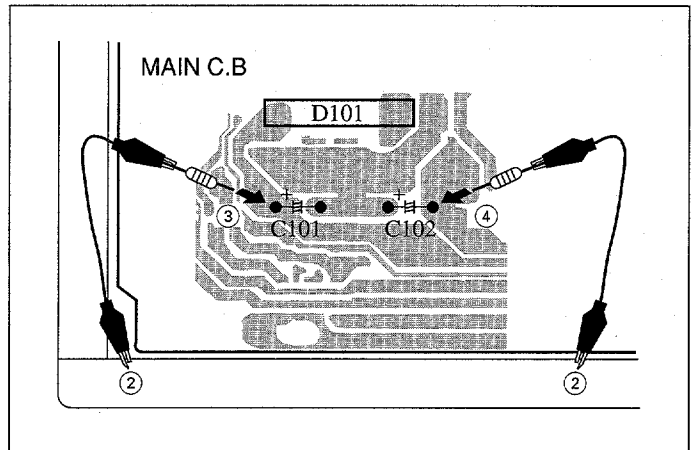


Fig-1

Select a discharging resistor referring to the following table.

| Charging voltage (V) (C101, 102) | Discharging resistor (Ω) | Rated power (W) | Parts number |
|-------------------------------------|-----------------------------------|-----------------|----------------|
| 25-48 | 100 | 3 | 87-A00-247-090 |
| 49-140 | 220 | 5 | 87-A00-232-090 |

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitor on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

• Good or no good judgment of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

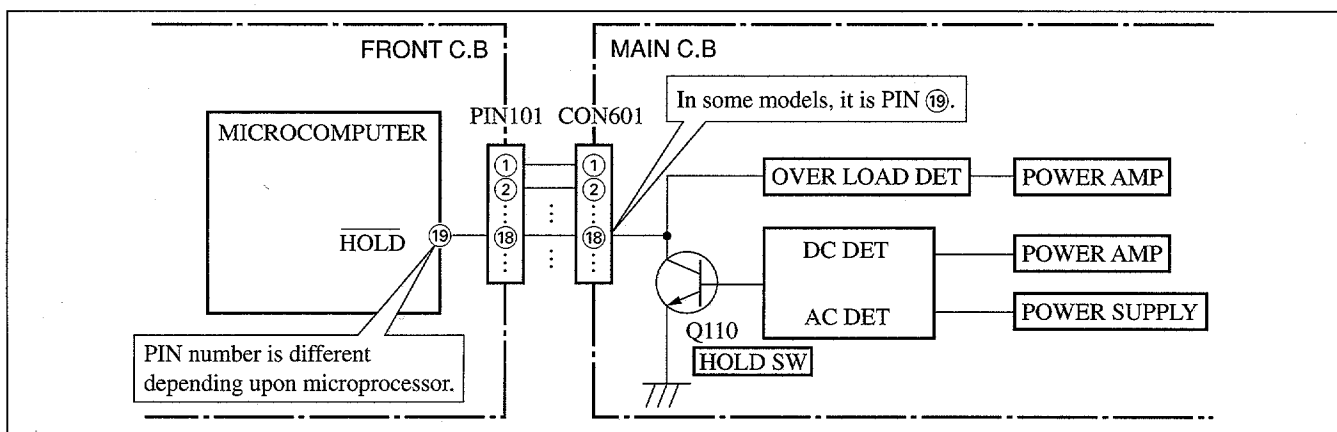


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgment as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

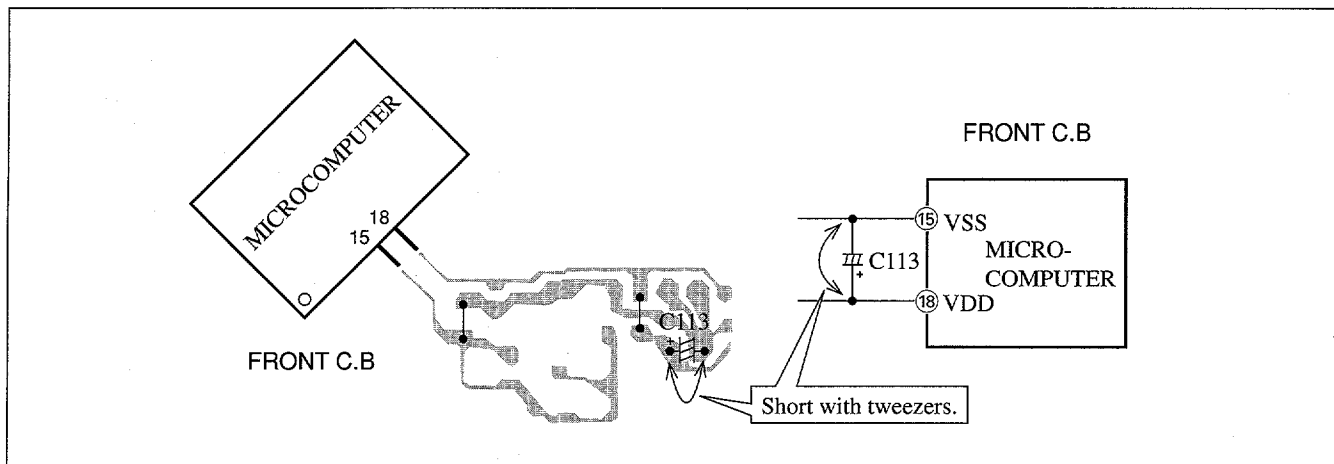


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|------------|----------------|--------------------------------------|-------------|----------|----------------|-----------|--------------------------------------|
| IC | | | | C220 | 87-010-544-080 | | CAP, ELECT 0.1-50V |
| | 8Z-NFA-661-010 | C-IC, M38B59MFH-P113FP | | C221 | 87-018-211-080 | | CAP, CER 0.01-50<EZ, K, V, G, HS> |
| | 87-A21-218-010 | IC, NJL64H380A | | C222 | 87-018-211-080 | | CAP, CER 0.01-50<EZ, K, V, G, HS> |
| | 87-017-889-010 | IC, NJM4558LD | | C229 | 87-018-123-080 | | CAP, CER 220P-50V |
| | 87-A20-715-010 | IC, M62439SP | | C235 | 87-A11-148-080 | | CAP, TC 0.1-50 ZF |
| | 87-070-127-110 | IC, LC72131 D | | C236 | 87-A11-148-080 | | CAP, TC 0.1-50 ZF |
| | 87-A20-913-010 | IC, LA1837NL | | C237 | 87-A11-155-080 | | CAP, TC 0.01-16 Z F |
| | 87-A20-502-01 | IC, BU1920<112EZ> | | C253 | 87-018-131-080 | | CAP, CER 1000P<EZ, K, V, G, HS> |
| | | | | C254 | 87-018-131-080 | | CAP, CER 1000P<EZ, K, V, G, HS> |
| | | | | C255 | 87-018-115-080 | | CAP, CER 47P<EZ, K, V, G, HS> |
| TRANSISTOR | | | | C256 | 87-018-115-080 | | CAP, CER 47P<EZ, K, V, G, HS> |
| | 87-026-214-080 | TR, DTA114YS (0.3W) | | C257 | 87-018-119-080 | | CAP, CER 100P<EZ, K, V, G, HS> |
| | 87-026-219-080 | TR, DTA144ES (0.3W) | | C258 | 87-018-119-080 | | CAP, CER 100P<EZ, K, V, G, HS> |
| | 87-026-269-080 | TR, DTA114ES | | C301 | 87-018-195-080 | | CAP, CER 1200P-50V |
| | 87-026-610-080 | TR, KTC3198GR | | C302 | 87-018-195-080 | | CAP, CER 1200P-50V |
| | 87-026-609-080 | TR, KTA1266GR | | C303 | 87-018-195-080 | | CAP, CER 1200P-50V |
| | 87-A30-127-010 | TR, 2SD2478 | | C304 | 87-018-195-080 | | CAP, CER 1200P-50V |
| | 87-A30-126-010 | TR, 2SB1616 | | C307 | 87-010-263-080 | | CAP, ELECT 100-10V |
| | 87-A30-164-080 | TR, CSC2001K | | C308 | 87-010-263-080 | | CAP, ELECT 100-10V |
| | 87-A30-234-080 | TR, CSC4115BC | | C309 | 87-018-115-080 | | CAP, CER 47P-50V<EZ, K, V, G, HS> |
| | 87-A30-091-080 | FET, 2SJ460 | | C310 | 87-018-115-080 | | CAP, CER 47P-50V<EZ, K, V, G, HS> |
| | 87-A30-090-080 | FET, 2SK2541 | | C311 | 87-A10-307-080 | | CAP, M 0.1-50 J |
| | 87-A30-092-080 | FET, 2SK439 (E/F) <EXCEPT V> | | C312 | 87-A10-307-080 | | CAP, M 0.1-50 J |
| | | | | C315 | 87-010-374-080 | | CAP, ELECT 47-10V |
| | | | | C317 | 87-010-546-080 | | CAP, ELECT 0.33-50V |
| DIODE | | | | C318 | 87-010-546-080 | | CAP, ELECT 0.33-50V |
| | 87-020-465-080 | DIODE, 1SS133 (110MA) <EXCEPT HC> | | C326 | 87-018-205-080 | | CAP, CERA-SOL 0.022 |
| | 87-A40-291-080 | DIODE, 1N4148 (CPT) <HC ONLY> | | C327 | 87-A11-148-080 | | CAP, TC U 0.1-50 |
| | 87-A40-393-090 | DIODE, 1N5402GW (F20) | | C360 | 87-010-401-080 | | CAP, ELECT 1-50V |
| | 87-A40-553-080 | DIODE, 1N4003 LES | | C361 | 87-010-374-080 | | CAP, ELECT 47-10V |
| | 87-017-932-080 | ZENER, MTJ6.2B | | C399 | 87-018-127-080 | | CAP, CER 470P-50V |
| | 87-A40-336-080 | ZENER, MTZJ27D T-72 | | C401 | 87-010-545-080 | | CAP, ELECT 0.22-50V |
| | 87-A40-345-080 | ZENER, MTZJ10C | | C402 | 87-010-545-080 | | CAP, ELECT 0.22-50V |
| | 87-A40-466-080 | ZENER, MTZJ2.7A | | C403 | 87-018-118-080 | | CAP, TC-U 82P-50 B |
| | 87-017-931-080 | ZENER, MTZJ5.6B | | C404 | 87-018-118-080 | | CAP, TC-U 82P-50 B |
| | | | | C411 | 87-010-405-080 | | CAP, ELECT 10-50V |
| | | | | C412 | 87-010-405-080 | | CAP, ELECT 10-50V |
| | | | | C452 | 87-010-382-080 | | CAP, E 22-25V |
| | | | | C458 | 87-018-131-080 | | CAP, CER 1000P-50V |
| MAIN C.B | | | | C459 | 87-018-128-080 | | CAP, TC U 560P-50 K B |
| C101 | 87-016-495-090 | CAP, E 3300-25 SMG | | C461 | 87-018-126-080 | | CAP, TC-U 390P-50 B |
| C103 | 87-016-051-090 | CAP, E 2200-35 SMG<EZ, K, V, G, HS> | | C462 | 87-018-126-080 | | CAP, TC-U 390P-50 B |
| C104 | 87-A10-011-090 | CAP, E 2200-25 SMG<HE, HR, HC> | | C601 | 87-018-195-080 | | CAP, CER 1200P-16V |
| C105 | 87-018-127-080 | CAP, CER 470P-50V | | C602 | 87-018-195-080 | | CAP, CER 1200P-16V |
| C106 | 87-010-260-080 | CAP, E 47-25 SME | | C611 | 87-010-545-080 | | CAP, ELECT 0.22-50V |
| C107 | 87-010-384-080 | CAP, ELECT 100-25V | | C612 | 87-010-545-080 | | CAP, ELECT 0.22-50V |
| C108 | 87-010-381-080 | CAP, ELECT 330-16V | | C613 | 87-010-545-080 | | CAP, ELECT 0.22-50V |
| C111 | 87-010-247-080 | CAP, E 100-50V | | C614 | 87-010-545-080 | | CAP, ELECT 0.22-50V |
| C112 | 87-010-263-080 | CAP, ELECT 100-10V | | C615 | 87-018-104-080 | | CAP, TC-U 10P-50 SL |
| C113 | 87-010-403-080 | CAP, ELECT 3.3-50V | | C616 | 87-010-260-080 | | CAP, ELECT 47-25V |
| C114 | 87-010-374-080 | CAP, ELECT 47-10V | | C617 | 87-010-260-080 | | CAP, ELECT 47-25V |
| C115 | 87-A10-303-080 | CAP, M 0.047-50 J | | C701 | 87-010-404-080 | | CAP, ELECT 4.7-50V |
| C116 | 87-A10-303-080 | CAP, M 0.047-50 J | | C702 | 87-A11-155-080 | | CAP, TC U 0.01-16 Z F |
| C122 | 87-010-384-080 | CAP, E 100-25V | | C703 | 87-A11-155-080 | | CAP, TC U 0.01-16 Z F |
| C123 | 87-010-384-080 | CAP, E 100-25V | | C704 | 87-018-131-080 | | CAP, CER 1000P-50V |
| C124 | 87-A11-132-080 | CAP, TC U 0.01 K B | | C705 | 87-018-131-080 | | CAP, CER 1000P-50V |
| C127 | 87-A11-155-080 | CAP, TC U 0.01-16ZF<EZ, K, V, G, HS> | | C706 | 87-018-131-080 | | CAP, CER 1000P-50V |
| C130 | 87-018-131-080 | CAP, TC U 1000P-50 K B<V> | | C707 | 87-010-112-080 | | CAP, ELECT 100-16V |
| C152 | 87-010-388-010 | CAP, E 1000-25V<HR, HE, HC> | | C708 | 87-A11-144-080 | | CAP, TC U 0.1-50 K B |
| C207 | 87-010-545-080 | CAP, ELECT 0.22-50V | | C709 | 87-010-248-080 | | CAP, ELECT 220-10V |
| C208 | 87-010-545-080 | CAP, ELECT 0.22-50V | | C710 | 87-010-112-080 | | CAP, ELECT 100-16V |
| C209 | 87-A11-154-080 | CAP, TC U 4700P-16 Z F | | C712 | 87-018-149-080 | | CAP, TC-U 15P-50 CH |
| C210 | 87-A11-154-080 | CAP, TC U 4700P-16 Z F | | C713 | 87-018-149-080 | | CAP, TC-U 15P-50 CH |
| C211 | 87-010-403-080 | CAP, ELECT 3.3-50V | | C714 | 87-010-112-080 | | CAP, ELECT 100-16V |
| C212 | 87-010-403-080 | CAP, ELECT 3.3-50V | | C715 | 87-018-119-080 | | CAP, CER 100P-50V |
| C213 | 87-010-260-080 | CAP, ELECT 47-25V | | C746 | 87-A11-155-080 | | CAP, TC U 0.01-16 Z F |
| C214 | 87-010-260-080 | CAP, ELECT 47-25V | | C751 | 87-A11-155-080 | | CAP, TC U 0.01-16ZF<EZ, K, V, G, HS> |
| C217 | 87-A10-304-080 | CAP, M 0.056-50 J | | C752 | 87-018-143-080 | | CAP, TC 4.7P-50CH<EZ, K, V, G, HS> |
| C218 | 87-A10-304-080 | CAP, M 0.056-50 J | | C753 | 87-010-408-080 | | CAP, ELECT 47-50V |
| C219 | 87-010-544-080 | CAP, ELECT 0.1-50V | | C755 | 87-A11-144-080 | | CAP, TC U 0.1-50 K B |

* NOTE : 1EZ = 111EZ,116EZ,16EZ

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|-----------|----------------|-----------|---------------------------------|----------|----------------|-----------|---------------------------------|
| C756 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F | C943 | 87-A11-144-080 | | CAP,TC U 0.1-50 K B |
| C757 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F | C944 | 87-018-104-080 | | CAP,TC-U 10P-50 SL<V> |
| C758 | 87-010-112-080 | | CAP, ELECT 100-16V | CF801 | 87-008-261-010 | | FLTR, SFE10.7MA5<HR,HE,HC,V> |
| C759 | 87-A11-155-080 | | CAP,TC U 0.01-16ZF<EZ,K,V,G,HS> | CF801 | 87-008-423-010 | | FLTR, SFE10.7MS3G-A<EZ,K,G,HS> |
| C761 | 87-010-404-080 | | CAP, ELECT 4.7-50V | CF802 | 82-785-747-010 | | CF MS2 GHY R<EZ,K,G,HS> |
| C762 | 87-010-400-080 | | CAP, ELECT 0.47-50V | CF802 | 87-008-261-010 | | FLTR, SFE10.7MA5-A<V> |
| C763 | 87-010-401-080 | | CAP, ELECT 1-50V | CN301 | 87-A60-620-010 | | CONN,3P V 2MM JMT |
| C764 | 87-010-401-080 | | CAP, ELECT 1-50V | CN351 | 87-A60-625-010 | | CONN,8P V 2MM JMT |
| C765 | 87-018-115-080 | | CAP, CER 47P-50V | CN601 | 88-NF9-657-010 | | CONN,30P H BLK TYK-B(X) |
| C766 | 87-010-407-080 | | CAP, ELECT 33-50V | CN602 | 87-099-194-010 | | CONN,6P 6216V |
| C768 | 87-A11-147-080 | | CAP,TC U 0.047-50 Z F | D981 | 87-A40-618-080 | | VARI-CAP,SVC 348(S/T)<HR,HE,HC> |
| C769 | 87-010-403-080 | | CAP, ELECT 3.3-50V | FB601 | 87-008-372-080 | | FLTR,EMI BLOIRNI<EZ,K,V,G,HS> |
| C770 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F | FB603 | 87-008-474-080 | | F-BEAD,EMI BLO2RN1<EZ,K,V,G,HS> |
| C771 | 87-010-406-080 | | CAP, ELECT 22-50 | FB813 | 87-008-372-080 | | FLTR,EMI BLOIRNI<EZ,K,V,G,HS> |
| C773 | 87-018-130-080 | | CAP, TC 820P-50<HR,HE,HC> | FCC1 | 88-906-251-110 | | FF-CABLE,6P 1.25 |
| C773 | 87-018-131-080 | | CAP, TC 1000P-50<V> | FFE801 | A8-8ZA-192-070 | | 8ZA-1 FEUNC<HC> |
| C773 | 87-018-195-080 | | CAP, TC 1200P-16<112EZ> | FFE801 | A8-8ZA-190-030 | | 8ZA-1 FEUNM<HR,HE> |
| C773 | 87-018-196-080 | | CAP, TC 1500P-16<1EZ,K,G,HS> | FFE801 | A8-6ZA-193-030 | | 6ZA-1 FEVNM<V> |
| C774 | 87-010-405-080 | | CAP, ELECT 10-50V | FFE801 | A8-6ZA-191-130 | | 6ZA-1 FEENM<EZ,K,G,HS> |
| C776 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F | J201 | 87-A60-602-010 | | JACK,DIA6.3 BLK ST W/SW TC |
| C783 | 87-018-199-080 | | CAP, CER 3300P<HR,HE,HC,V> | J202 | 87-A60-238-010 | | TERMINAL,SP 4P (MSC) |
| C783 | 87-018-202-080 | | CAP.CERAM.6800PF<EZ,K,G,HS> | J601 | 87-A60-881-010 | | JACK,PIN 2P MSP 242V05 PBSN |
| C784 | 87-018-199-080 | | CAP, CER 3300P<HR,HE,HC,V> | J801 | 87-A60-202-010 | | TML,ANT4P MSP<HR,HE,HC,V> |
| C784 | 87-018-202-080 | | CAP.CERAM.6800PF<EZ,K,G,HS> | J802 | 87-A60-403-010 | | TML,ANTPAL 2P<EZ,K,G,HS> |
| C785 | 87-010-405-080 | | CAP, ELECT 10-50V | J931 | 81-754-629-010 | | CONNECTOR, 2P<HR,HE,HC> |
| C786 | 87-010-405-080 | | CAP, ELECT 10-50V | L201 | 87-003-383-010 | | COIL,1UH-S |
| C787 | 87-018-196-080 | | CAP, TC 1500P-16 | L202 | 87-003-383-010 | | COIL,1UH-S |
| C788 | 87-018-196-080 | | CAP, TC 1500P-16 | L451 | 87-007-342-010 | | COIL,OSC 85K BIAS |
| C789 | 87-010-403-080 | | CAP, ELECT 3.3-50V<HR,HE,HC,V> | L701 | 87-005-847-080 | | COIL,2.2UH(CECS) |
| C789 | 87-010-546-080 | | CAP, ELECT 0.33-50M<EZ,K,G,HS> | L706 | 87-005-849-080 | | COIL,10UH(CECS) <HR> |
| C790 | 87-010-403-080 | | CAP, ELECT 3.3-50V<HR,HE,HC,V> | L771 | 87-A50-266-010 | | COIL,FM DET-2N(TOK) |
| C790 | 87-010-546-080 | | CAP, ELECT 0.33-50M<EZ,K,G,HS> | L772 | 87-A90-052-010 | | FLTR,CFMT-450A(TOK)<HR,HE,HC> |
| C801 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,G,HS> | L772 | 87-A91-110-010 | | FLTR,PCFJZH-450(T)<EZ,K,V,G,HS> |
| C802 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,G,HS> | L766 | 87-005-849-080 | | COIL,10UH(CECS) |
| C803 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,G,HS> | L801 | 87-005-847-080 | | COIL,2.2UH(CECS) |
| C804 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,G,HS> | L802 | 87-005-849-080 | | COIL,10UH K CECS <V> |
| C805 | 87-A11-144-080 | | CAP,TC 0.1-50KB | L851 | 87-005-847-080 | | COIL,2.2UH(CECS)<112EZ> |
| C807 | 87-A11-144-080 | | CAP,TC U 0.1-50KB | L933 | 87-A50-159-010 | | COIL,10MH K C2B<HR,HE,HC> |
| C808 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F | L934 | 87-005-372-080 | | COIL S 1MHM<HR,HE,HC> |
| C809 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,V,G,HS> | L941 | 87-A50-020-010 | | COIL,ANT LW(COI)<EZ,K,G,HS> |
| C810 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,V,G,HS> | L941 | 87-A50-022-010 | | COIL,ANT SW(COI)<HR,HE,HC> |
| C811 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,V,G,HS> | L942 | 87-A50-019-010 | | COIL,OSC LW(COI)<EZ,K,G,HS> |
| C812 | 87-010-408-080 | | CAP,E 47-50V<EZ,K,V,G,HS> | L942 | 87-A50-173-010 | | COIL,OSC SW-N(COI)<HR,HE,HC> |
| C813 | 87-018-131-080 | | CAP, CER 1000P-50V | L957 | 87-005-849-080 | | COIL,10UH K CECS<HR,HE,HC> |
| C851 | 87-018-123-080 | | CAP, CER 220P-50V<112EZ> | L981 | 8Z-NFA-665-010 | | COIL,AMPAK 2L<EZ,K,G,HS> |
| C852 | 87-018-123-080 | | CAP, CER 220P-50V<112EZ> | L981 | 8Z-NFA-664-010 | | COIL,AMPAK 4L<V> |
| C853 | 87-018-127-080 | | CAP, CER 470P-50V<112EZ> | L982 | 87-A50-431-010 | | COIL,OSC MW(3BSW)<HR,HE,HC> |
| C854 | 87-A11-144-080 | | CAP,TC U 0.1-50 K B<112EZ> | L983 | 87-A50-430-010 | | COIL,ANT MW(3BSW)<HR,HE,HC> |
| C855 | 87-010-405-080 | | CAP, ELECT 10-50V<112EZ> | R249 | 87-A00-258-080 | | RES,M/F 0.22-1WJ |
| C856 | 87-010-405-080 | | CAP, ELECT 10-50V<112EZ> | R250 | 87-A00-258-080 | | RES,M/F 0.22-1WJ |
| C857 | 87-018-134-080 | | CAP,TC U 0.01-16 N Y<112EZ> | RY101 | 87-045-389-010 | | RELAY,12V OSA-SS-212DMS |
| C858 | 87-018-109-080 | | CAP, CER 22P-50V<112EZ> | TC941 | 87-011-220-080 | | TRIMMER CAP 20P VTC<HR,HE,HC> |
| C859 | 87-018-109-080 | | CAP, CER 22P-50V<112EZ> | TC942 | 87-011-221-080 | | CAP,TRMR 30P<except V> |
| C860 | 87-018-134-080 | | CAP,TC U 0.01-16 N Y<112EZ> | W101 | 83-NE2-618-110 | | F-CABEL,5P-2.5 |
| C901 | 87-A11-148-080 | | CAP,TC U 0.1-50 ZF<EZ,K,V,G,HS> | WH102 | 87-A90-459-010 | | HLDR,WIRE 2.5-5P |
| C901 | 87-A11-149-080 | | CAP,TC U 0.22-50 ZF<HR,HE,HC> | X701 | 87-A70-061-010 | | VIB,XTAL 4.500MHZ CSA-309 |
| C921 | 87-A11-155-080 | | CAP,TC 0.01-16ZF<EZ,K,G,HS> | X751 | 87-030-354-010 | | VIB,CF BFU 450C<HR,HE,HC> |
| C922 | 87-018-099-080 | | CAP CERA 3.9P-50<EZ,K,G,HS> | X851 | 87-A70-091-010 | | VIB,XTAL 4.332MHZ<112EZ> |
| C923 | 87-018-101-080 | | CAP,TC-U 5.6P-50<EZ,K,G,HS> | | | | |
| C924 | 87-014-049-080 | | CAP,PP 470P-100 J<EZ,K,G,HS> | | | | |
| FRONT C.B | | | | | | | |
| C931 | 87-010-263-080 | | CAP, ELECT 100-10V<HR,HE,HC> | C101 | 87-A11-147-080 | | CAP,TC U 0.047-50 Z F |
| C932 | 87-010-400-080 | | CAP, ELECT 0.47-50V<HR,HE,HC> | C102 | 87-A11-147-080 | | CAP,TC U 0.047-50 Z F |
| C934 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F<HR,HE,HC> | C103 | 87-015-699-040 | | CAP,E 10-50 7L |
| C935 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F<HR,HE,HC> | C104 | 87-010-246-040 | | CAP,E 47-35 SME |
| C936 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F<HR,HE,HC> | C105 | 87-018-205-080 | | CAP, CERA-SOL 0.022 |
| C937 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F<except V> | C110 | 87-018-205-080 | | CAP, CERA-SOL 0.022 |
| C938 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F<except V> | C111 | 87-A11-155-080 | | CAP,TC U 0.01-16 Z F |
| C939 | 87-014-073-080 | | CAP,PP 4700P-100 J<HR,HE,HC> | C112 | 87-018-131-080 | | CAP, CER 1000P-50V |
| C940 | 87-014-051-080 | | CAPACITOR (PP), 560P<HR,HE,HC> | C113 | 87-018-205-080 | | CAP, CERA-SOL 0.022 |
| C941 | 87-018-109-080 | | CAP, CER 22P-50V<HR,HE,HC> | C114 | 87-018-205-080 | | CAP, CERA-SOL 0.022 |

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-----------------------------------|----------|----------------|-----------|--------------------------------------|
| C115 | 87-018-205-080 | | CAP, CERA-SOL 0.022 | S303 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C116 | 87-018-128-080 | | CAP, CERA-SOL SS 560P | S304 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C118 | 87-018-147-080 | | CAP, TC-U 10P-50 CH | S305 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C119 | 87-010-401-040 | | CAP, E 1-50 SME | S306 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C120 | 87-018-205-080 | | CAP, CERA-SOL 0.022 | S307 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C121 | 87-010-248-040 | | CAP, E 220-10 SME | S308 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C122 | 87-010-378-040 | | CAP, E 10-16 | S309 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C123 | 87-A11-147-080 | | CAP, TC U 0.047-50 Z F | S310 | 87-A90-164-080 | | SW, TACT SKQAB (N) <112EZ> |
| C124 | 87-A11-152-080 | | CAP, TC U 1000P-50 Z F | S311 | 87-A90-164-080 | | SW, TACT SKQAB (N) <112EZ> |
| C201 | 87-018-118-080 | | CAP, TC-U 82P-50 B | S312 | 87-A90-164-080 | | SW, TACT SKQAB (N) <112EZ> |
| C202 | 87-018-117-080 | | CAP, TC-U 68P-50 SL | S321 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C205 | 87-018-117-080 | | CAP, TC-U 68P-50 SL | S322 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C208 | 87-018-117-080 | | CAP, TC-U 68P-50 SL | S323 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C209 | 87-018-117-080 | | CAP, TC-U 68P-50 SL | S324 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C210 | 87-018-117-080 | | CAP, TC-U 68P-50 SL | S325 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C211 | 87-A11-147-080 | | CAP, TC U 0.047-50 Z F | S326 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C213 | 87-010-421-040 | | CAP, E 4.7-50 5L | S327 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C214 | 87-010-404-040 | | CAP, E 4.7-50 SME | S328 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C401 | 87-A11-154-080 | | CAP, TC U 4700P-16 ZF<HR, HR, HC> | S329 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C402 | 87-010-060-040 | | CAP, E 100-16<HR, HR, HC> | S330 | 87-A90-164-080 | | SW, TACT SKQAB (N) |
| C403 | 87-015-692-040 | | CAP, E 0.22-50M<HR, HR, HC> | SFR701 | 87-024-350-080 | | SFR 2.2K DIA 6H |
| C404 | 87-018-119-080 | | CAP, TC-U 100P-50 SL<HR, HR, HC> | VR401 | 87-NB7-602-010 | | VR, RTRY 10KAX1 1 V |
| C405 | 87-015-692-040 | | CAP, E 0.22-50M<HR, HR, HC> | | | | |
| C406 | 87-A11-148-080 | | CAP, TC U 0.1-50 ZF<HR, HR, HC> | | | | |
| C408 | 87-018-119-080 | | CAP, TC-U 100P-50 B<HR, HR, HC> | | | | AC1 C.B |
| C409 | 87-010-378-040 | | CAP, E 10-16 SME<HR, HR, HC> | △ F101 | 87-035-359-010 | | FUSE, 500MA 250V T<EZ, K, V, G, HS> |
| C410 | 87-A11-147-080 | | CAP, TC U 0.047-50<HR, HR, HC> | △ F101 | 87-A91-208-010 | | FUSE, 400MA 250V T 50T<HR, HE, HC> |
| C413 | 87-A11-110-080 | | CAP, TC 820P-50V<HR, HR, HC> | △ FC1 | 87-033-213-080 | | CLAMP, FUSE<EZ, K, G, V, HS> |
| C301 | 87-A11-148-080 | | CAP, TC U 0.1-50 Z F<HR, HE, HC> | △ FC2 | 87-033-213-080 | | CLAMP, FUSE<EZ, K, G, V, HS> |
| C701 | 87-010-384-040 | | CAP, E 100-25 SME | △ FC101 | 87-033-147-010 | | FUSE CLAMP<HR, HE, HC> |
| C702 | 87-A11-155-080 | | CAP, TC U 0.01-16 Z F | △ FC102 | 87-033-147-010 | | FUSE CLAMP<HR, HE, HC> |
| CN101 | 88-NF9-658-010 | | CONN, 30P BLK TYK-B(P) | △ PT101 | 8Z-NFA-623-110 | | PT, HR EI57-35 ZNF-A<HR, HE, HC> |
| CN701 | 87-A60-674-010 | | CONN, 10P H 2MM JMT | △ PT101 | 8Z-NFA-625-110 | | PT, E EI57-35 ZNF-A<EZ, K, V, G, HS> |
| CN801 | 87-099-015-010 | | CONN, 13P 6216V | △ SW101 | 87-A90-165-010 | | SW, SL 1-2-3 SWS2301<HR, HE, HC> |
| EMI401 | 87-008-372-080 | | FILTER, EMI BL OIRNI<HR, HR, HC> | △ T1 | 87-A60-317-010 | | TERMINAL, 1P MSC<EZ, K, V, G, HS> |
| FCC2 | 88-913-221-110 | | FF-CABLE, 13P 1.25 220MM | △ T2 | 87-A60-317-010 | | TERMINAL, 1P MSC<EZ, K, V, G, HS> |
| FL201 | 8Z-NFA-630-010 | | FL, 10-BT-207GAK | △ T101 | 87-A60-317-010 | | TERMINAL, 1P MSC<HR, HE, HC> |
| J401 | 87-A60-651-010 | | JACK, 3.5MONO<HR, HR, HC> | △ T102 | 87-A60-317-010 | | TERMINAL, 1P MSC<HR, HE, HC> |
| L101 | 87-A50-050-010 | | COIL, CLK 4.19M(COI) | | | | |
| S101 | 87-A90-535-010 | | SW, RTRY EC16B24304 | | | | |
| S301 | 87-A90-164-080 | | SW, TACT SKQAB (N) | | | | AC2 C.B |
| S302 | 87-A90-164-080 | | SW, TACT SKQAB (N) | WH101 | 87-A90-459-010 | | HLDR, WIRE 2.5-5P |

チップ抵抗部品コード/CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち

Chip Resistor Part Coding




A
抵抗部品コード
Resistor Code

桁表示
Figure
抵抗値
Value of resistor

チップ抵抗
Chip resistor

| 容量 Wattage | 種類 Type | 許容誤差 Tolerance | 記号 Symbol | 寸法/Dimensions (mm) | | | 抵抗コード : A Resistor Code : A | |
|---------------|------------|-------------------|--------------|--------------------|-----|------|--------------------------------|-----|
| | | | | 外形/Form | L | W | | t |
| 1/16W | 1005 | ± 5% | CJ | | 1.0 | 0.5 | 0.35 | 104 |
| 1/16W | 1608 | ± 5% | CJ | | 1.6 | 0.8 | 0.45 | 108 |
| 1/10W | 2125 | ± 5% | CJ | | 2 | 1.25 | 0.45 | 118 |
| 1/8W | 3216 | ± 5% | CJ | | 3.2 | 1.6 | 0.55 | 128 |

TRANSISTOR ILLUSTRATION

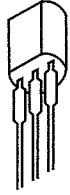

E C B

KTA1266GR
KTC3198GR




E C B

CSC2001K




E C B

DTA114YS
DTA114ES
DTA144ES

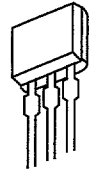

B C E

CSC4115BC

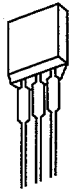

S D G

2SK2541
2SK439E/F



S D G


2SJ460




B C E

2SB1616
2SD2478


IC BLOCK DIAGRAM
IC, LA1837NL

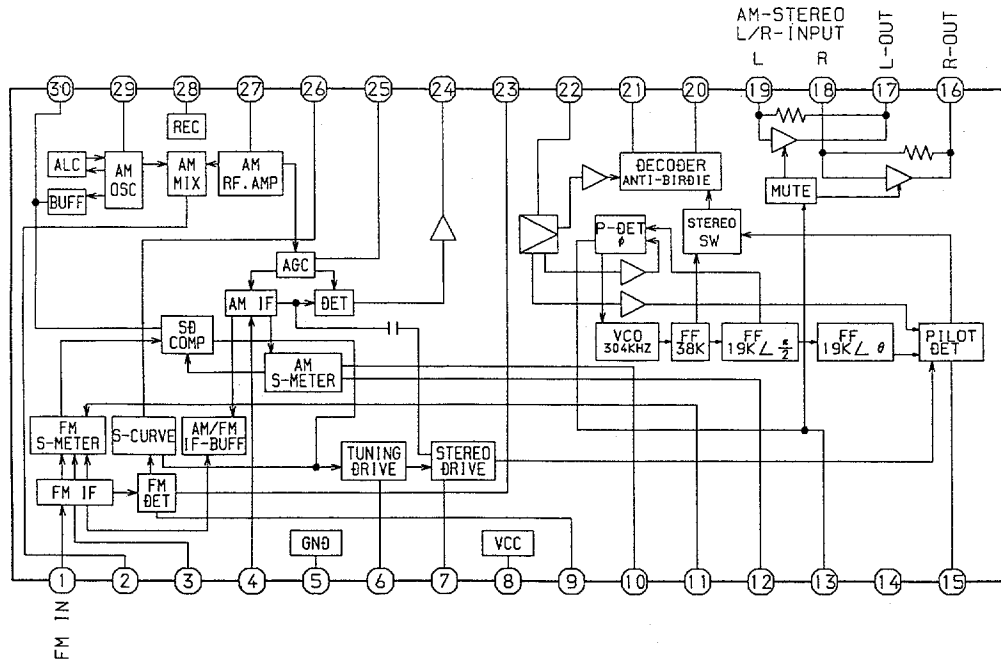


IC, M62439SP

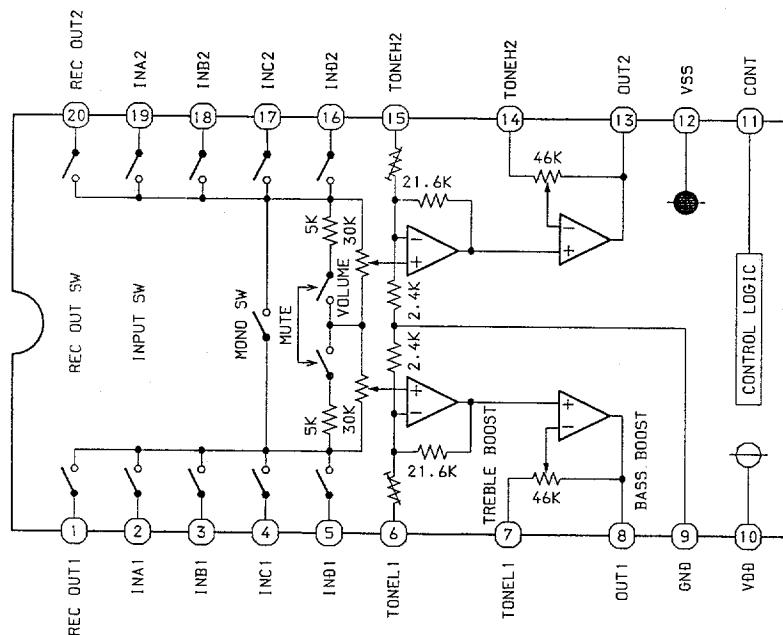



IC, BU1920FS <112 EZ>

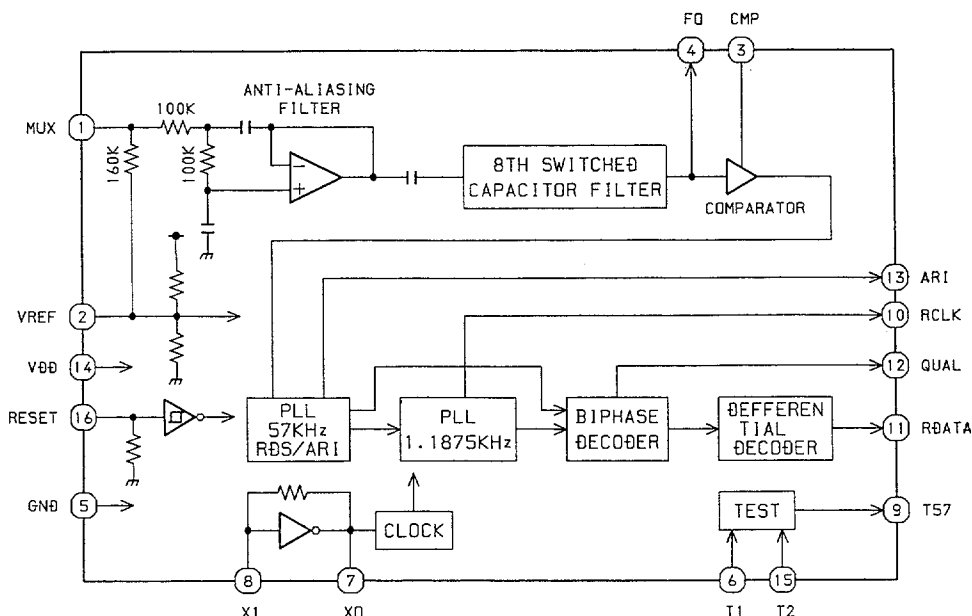

BLOCK DIAGRAM - 2 (TUNER : V)

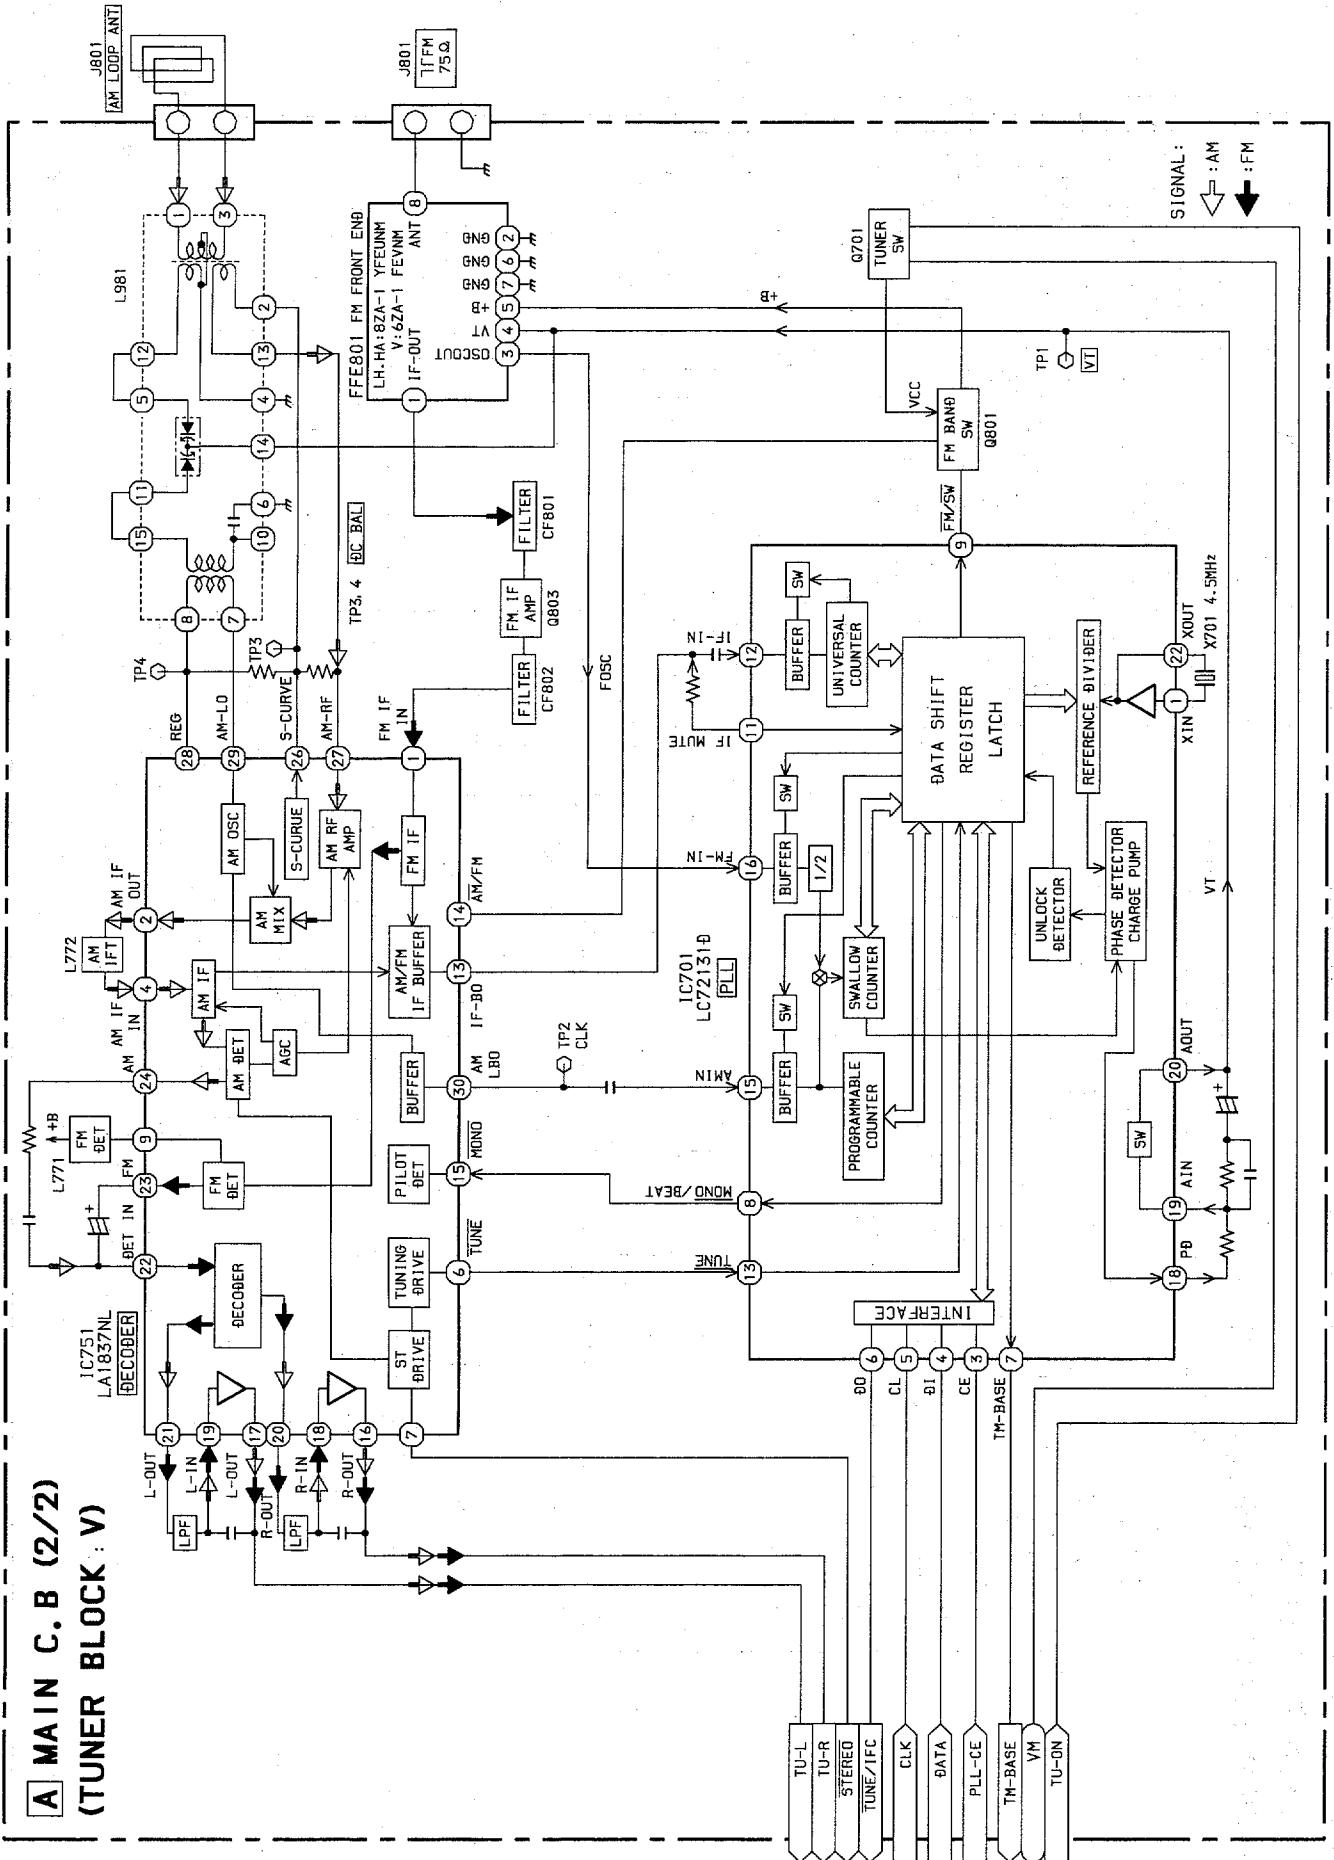

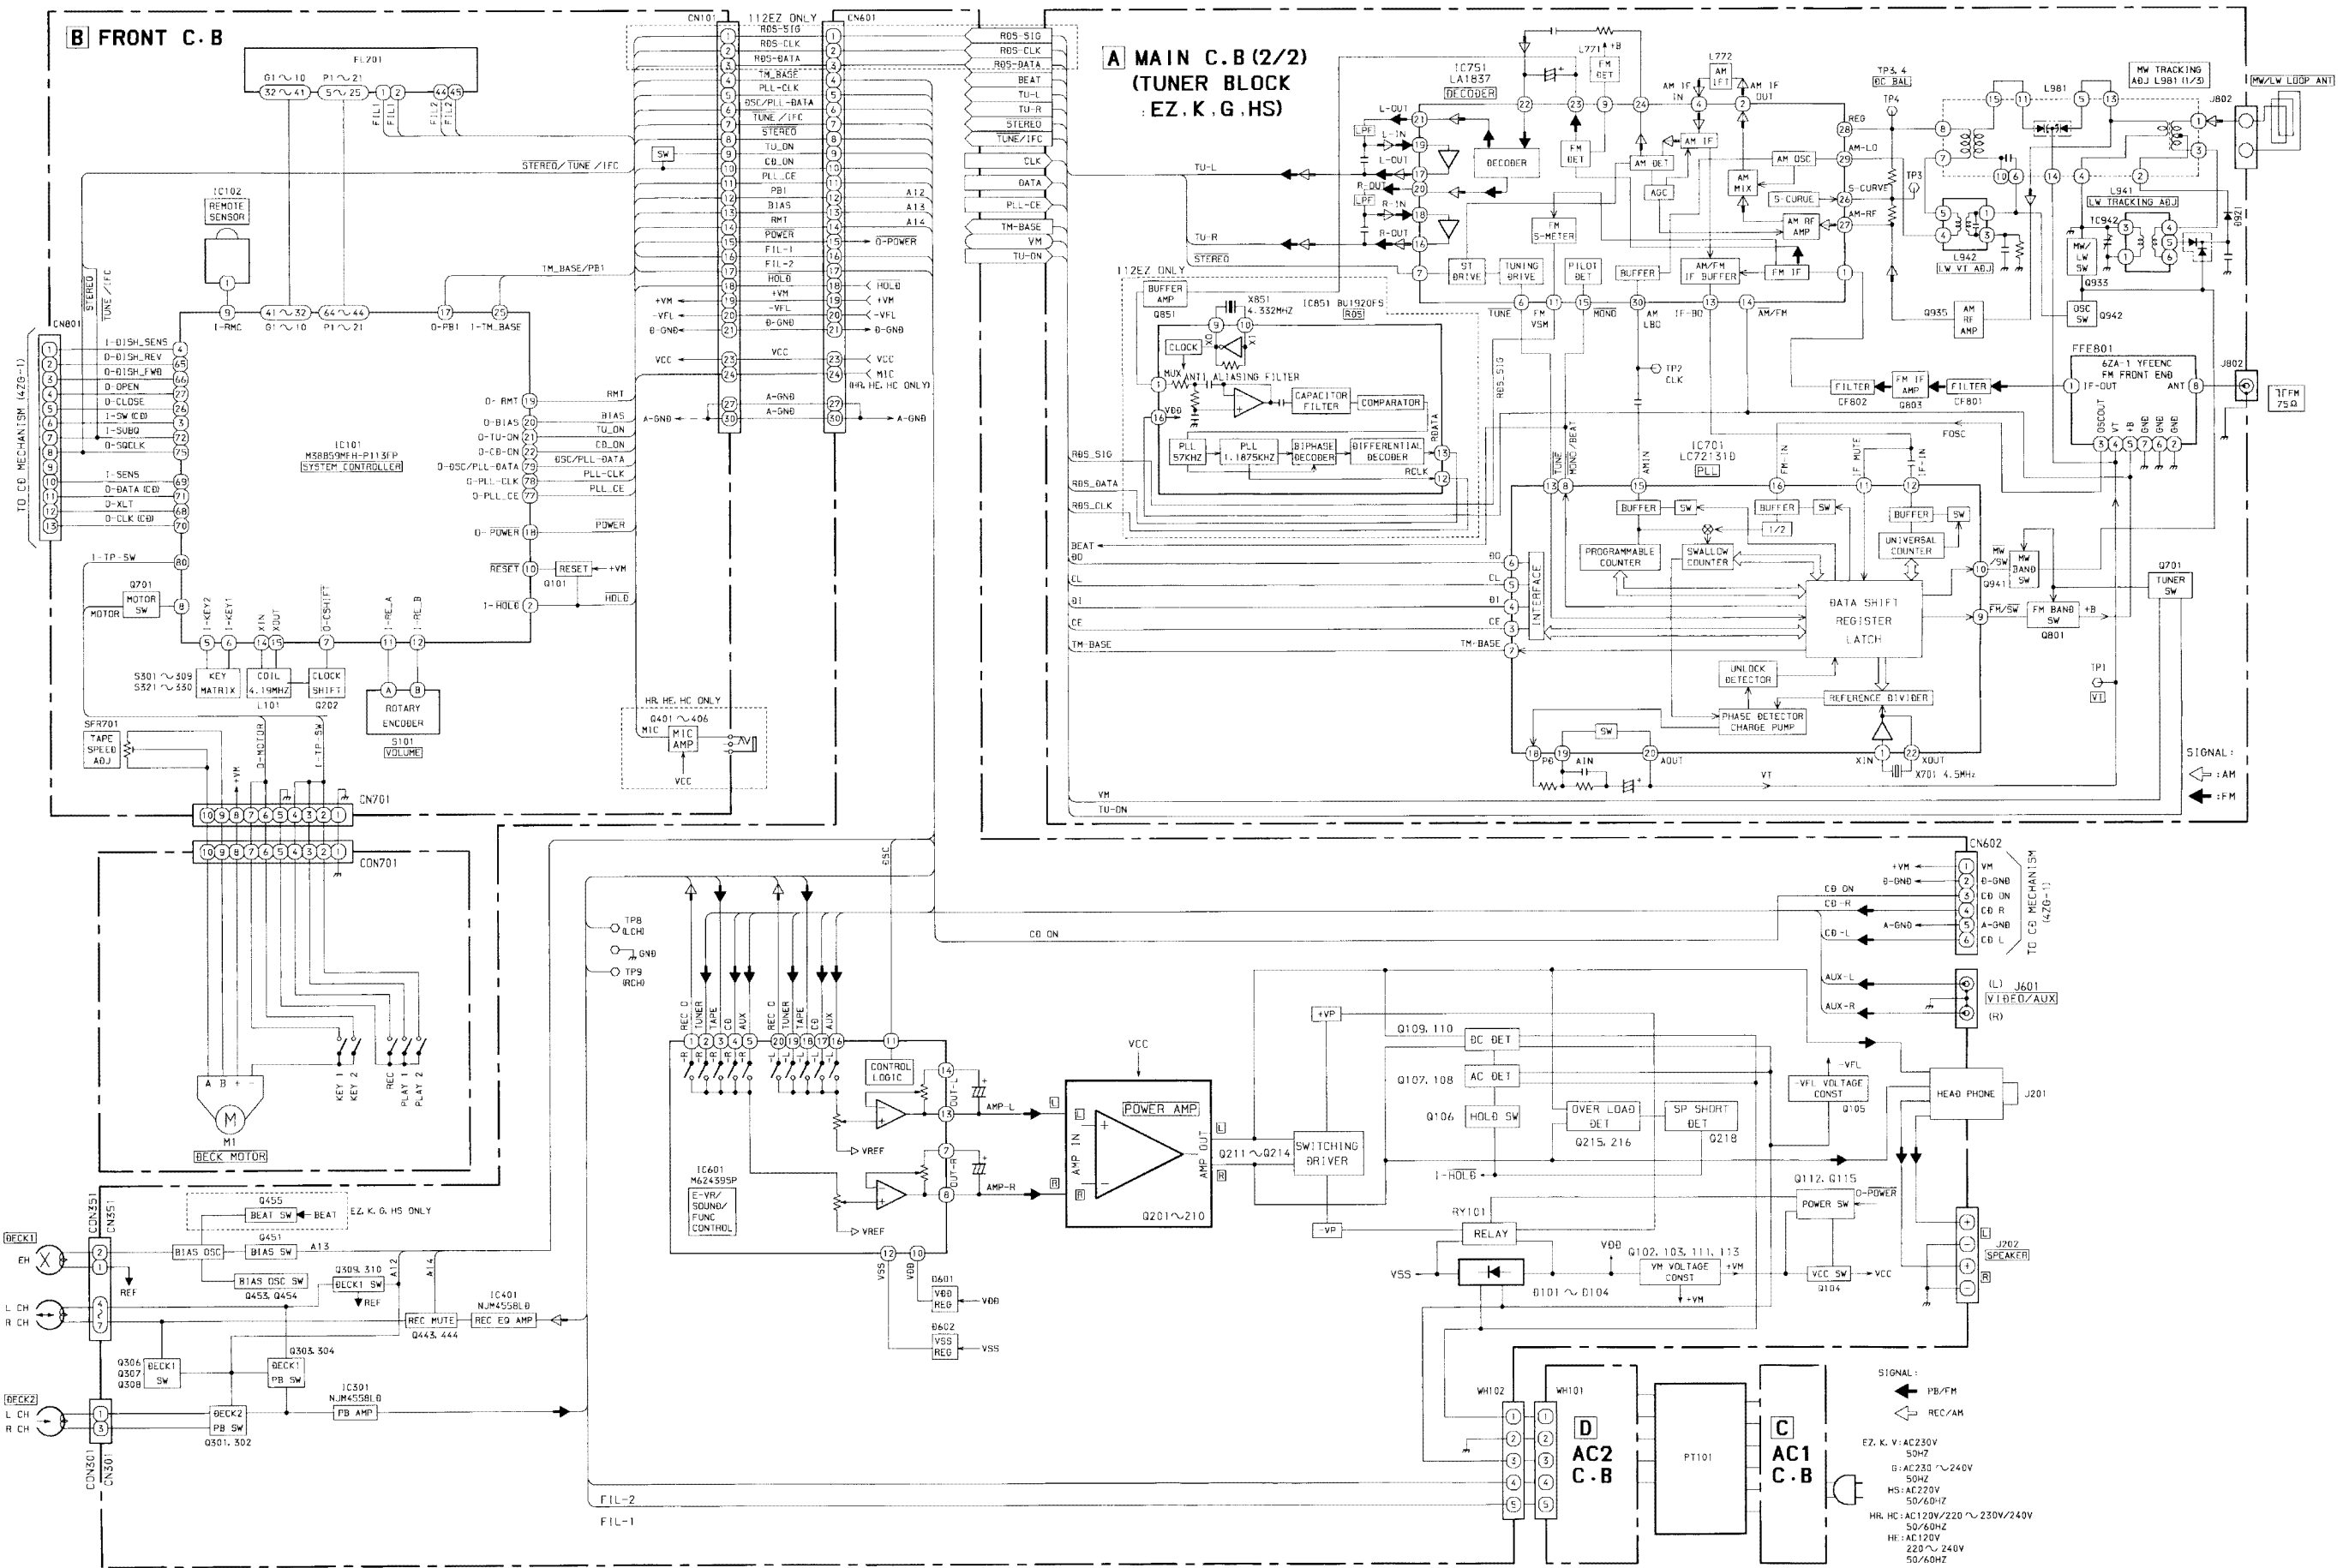


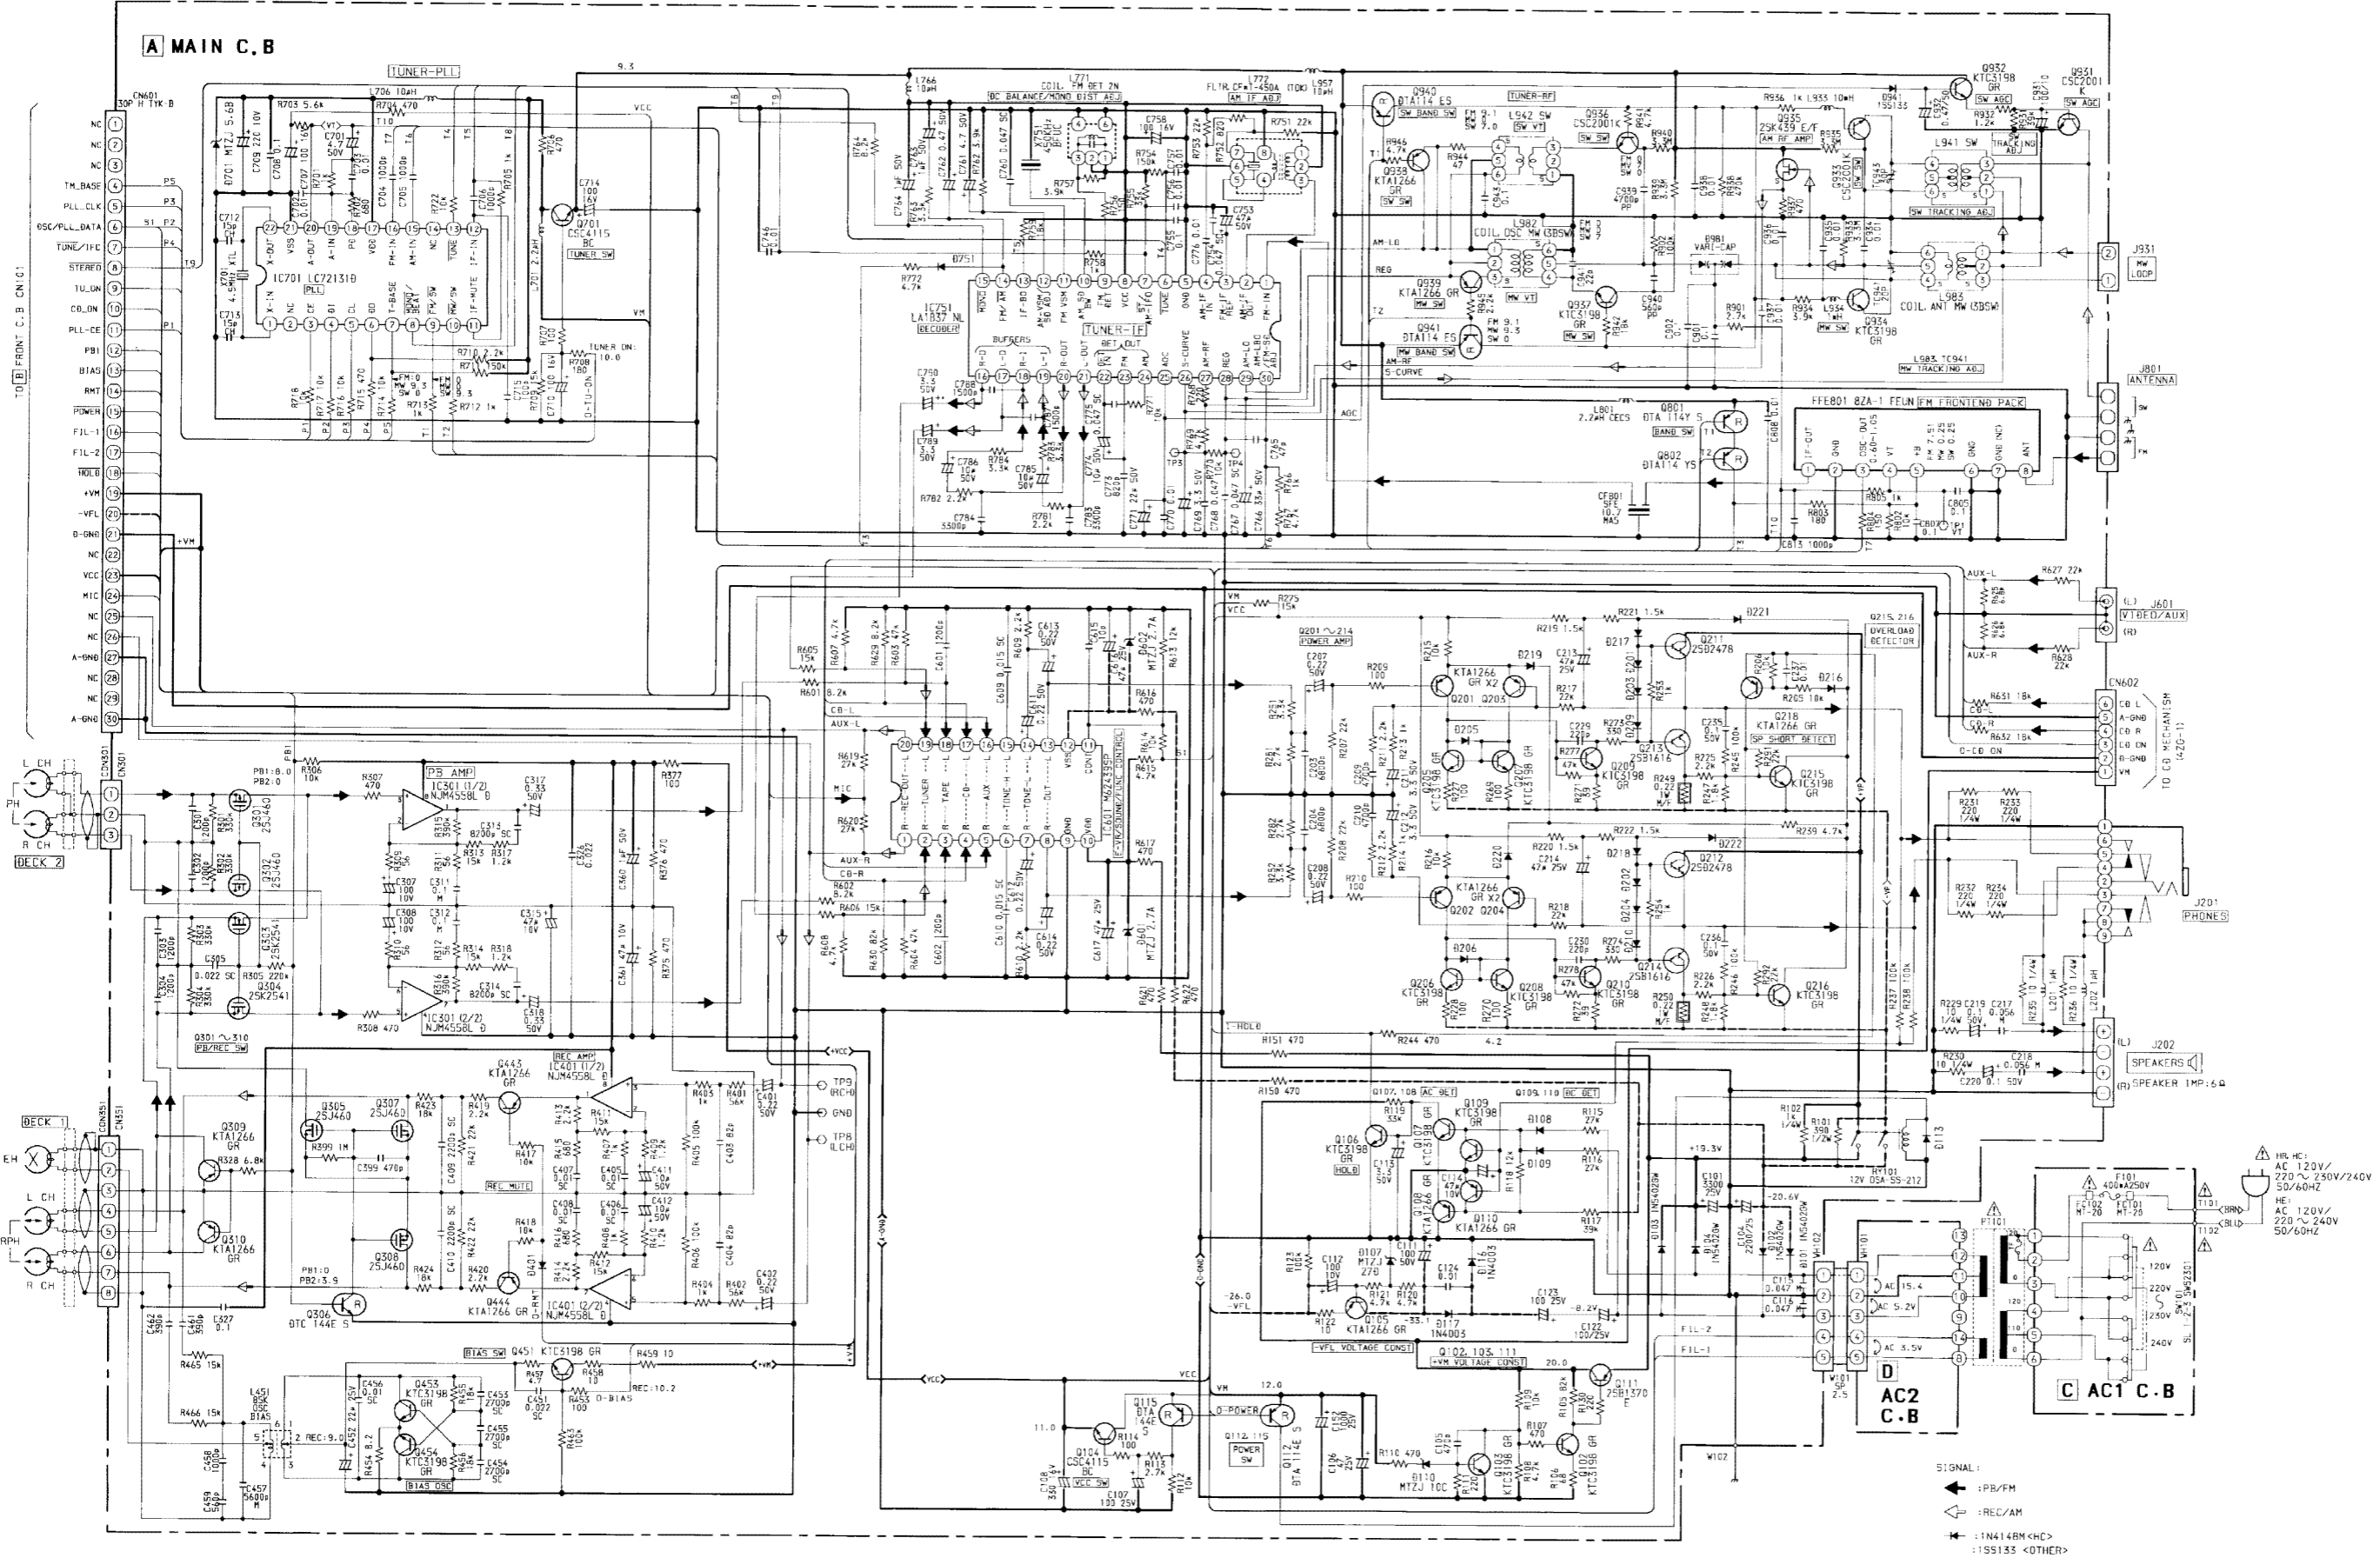

A
B
C
D
E
F
G
H
I
J

A MAIN C.B

TO CD MECHANISM (42G-1)

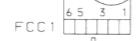

TO CN602




CON301

TO CN301



CON351








TO CN351

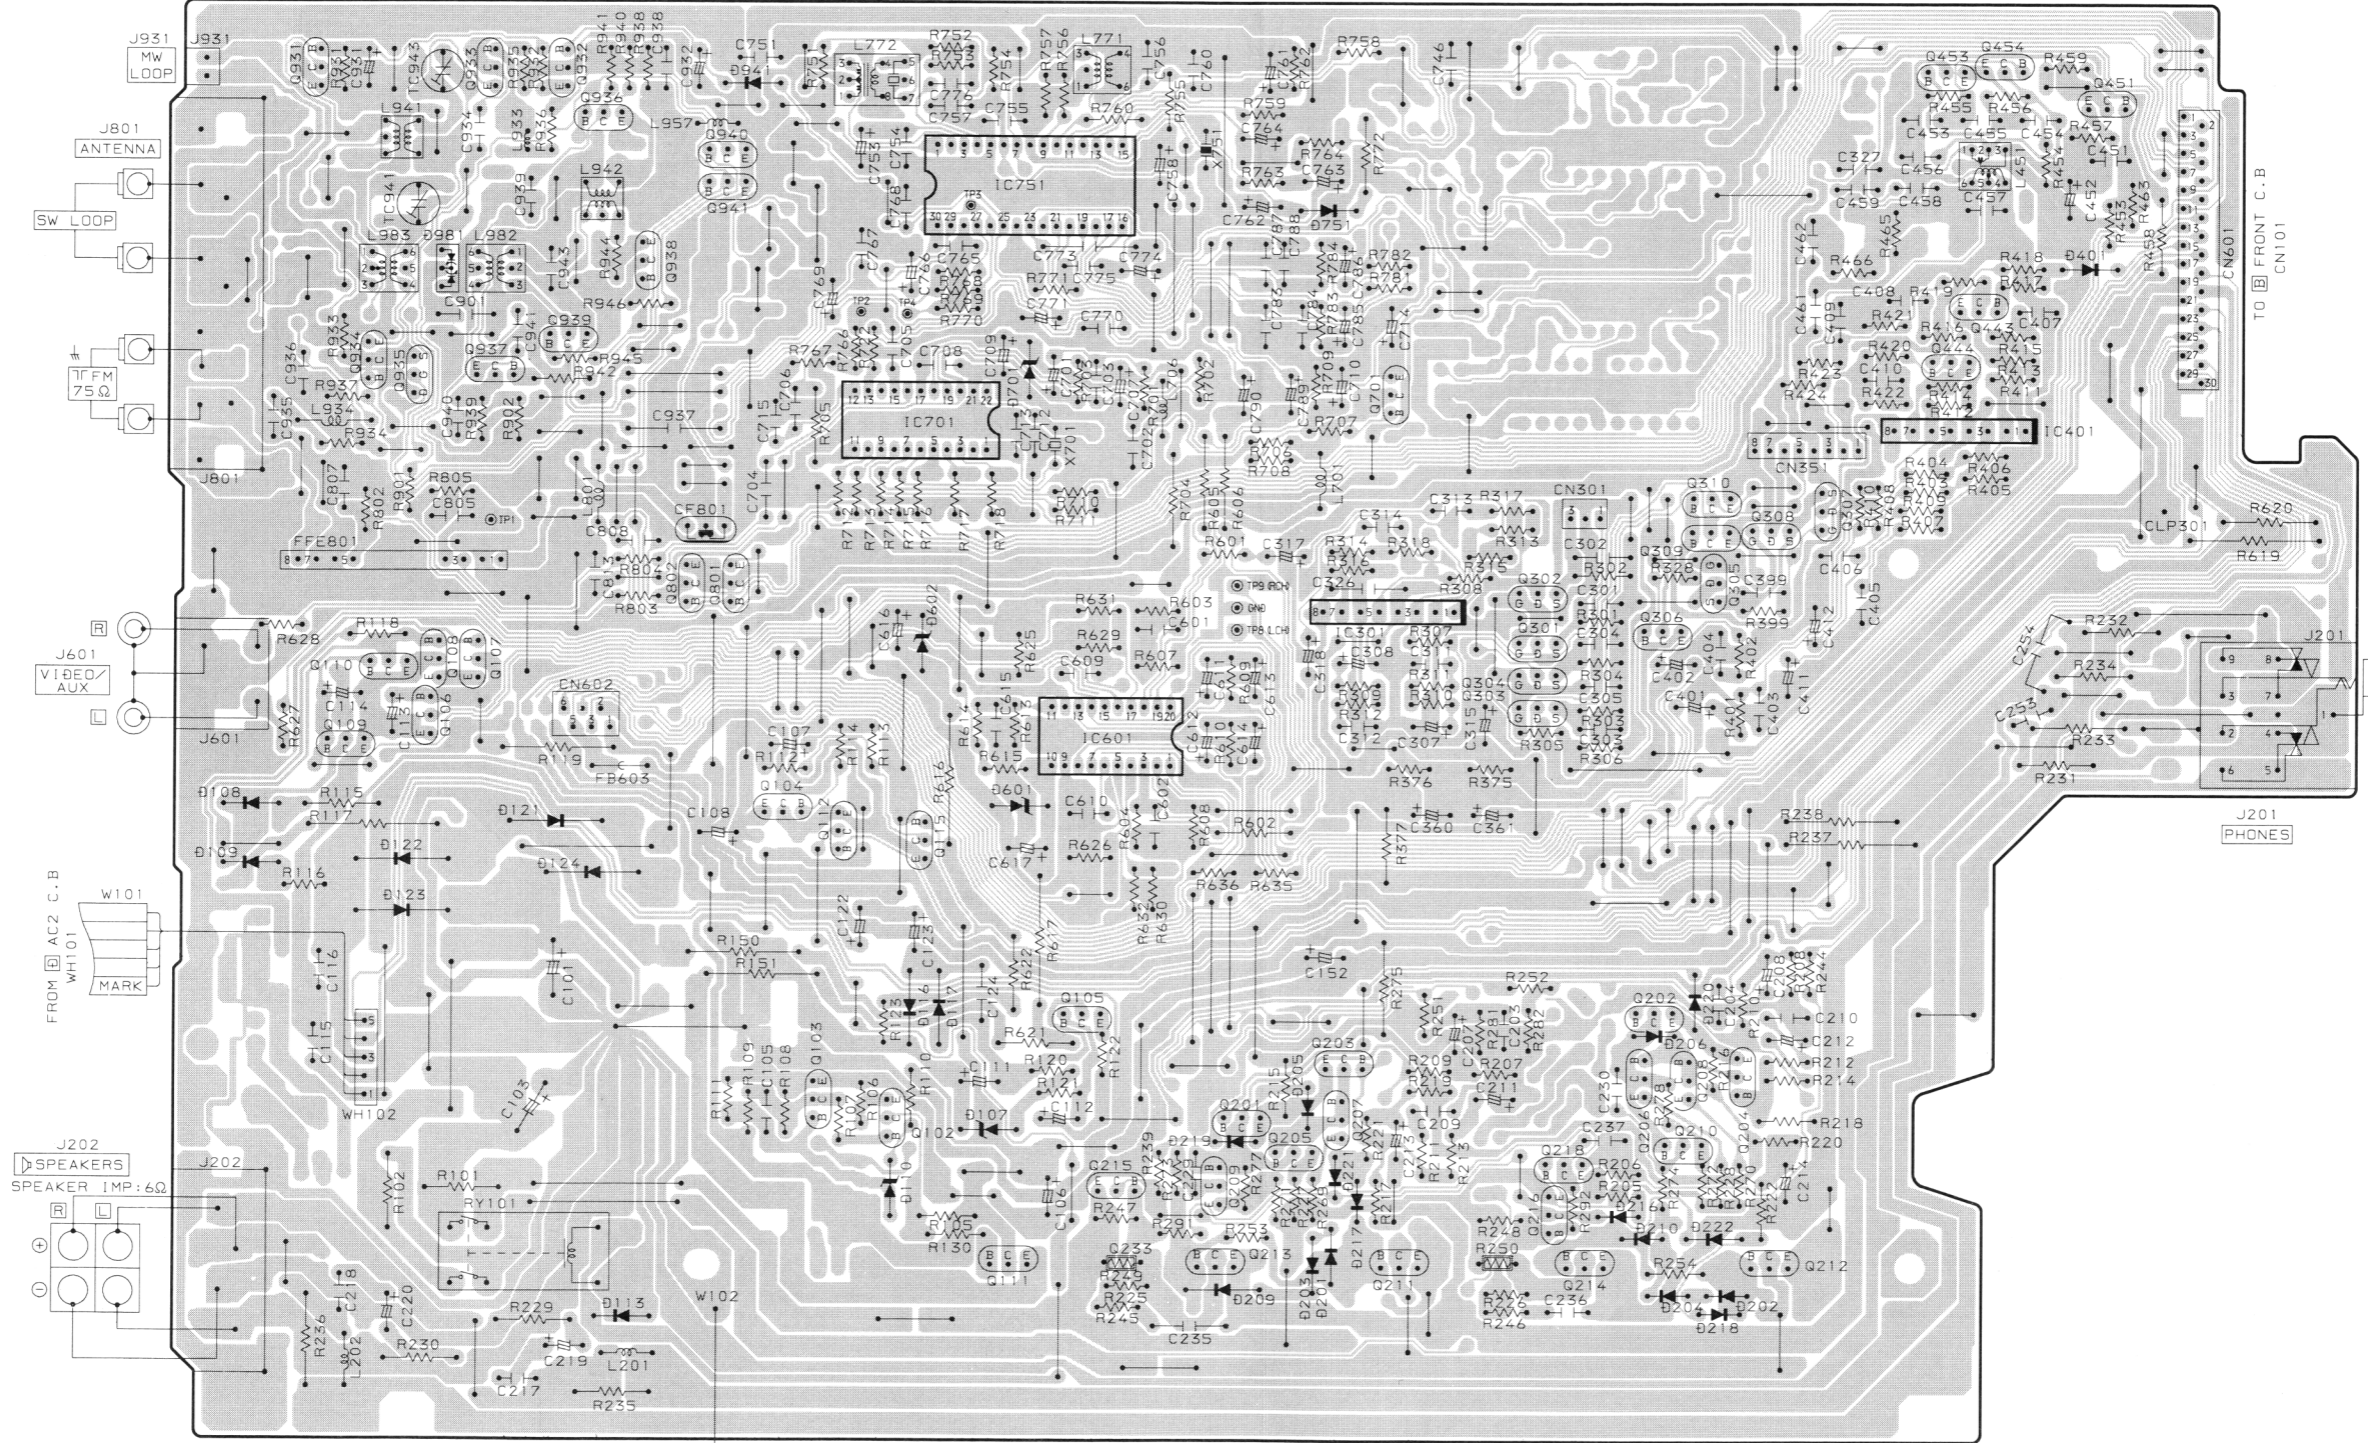

J202 SPEAKERS
SPEAKER IMP: 6Ω


J201 PHONES


A MAIN C.B

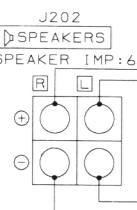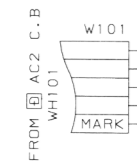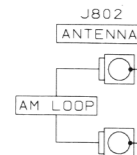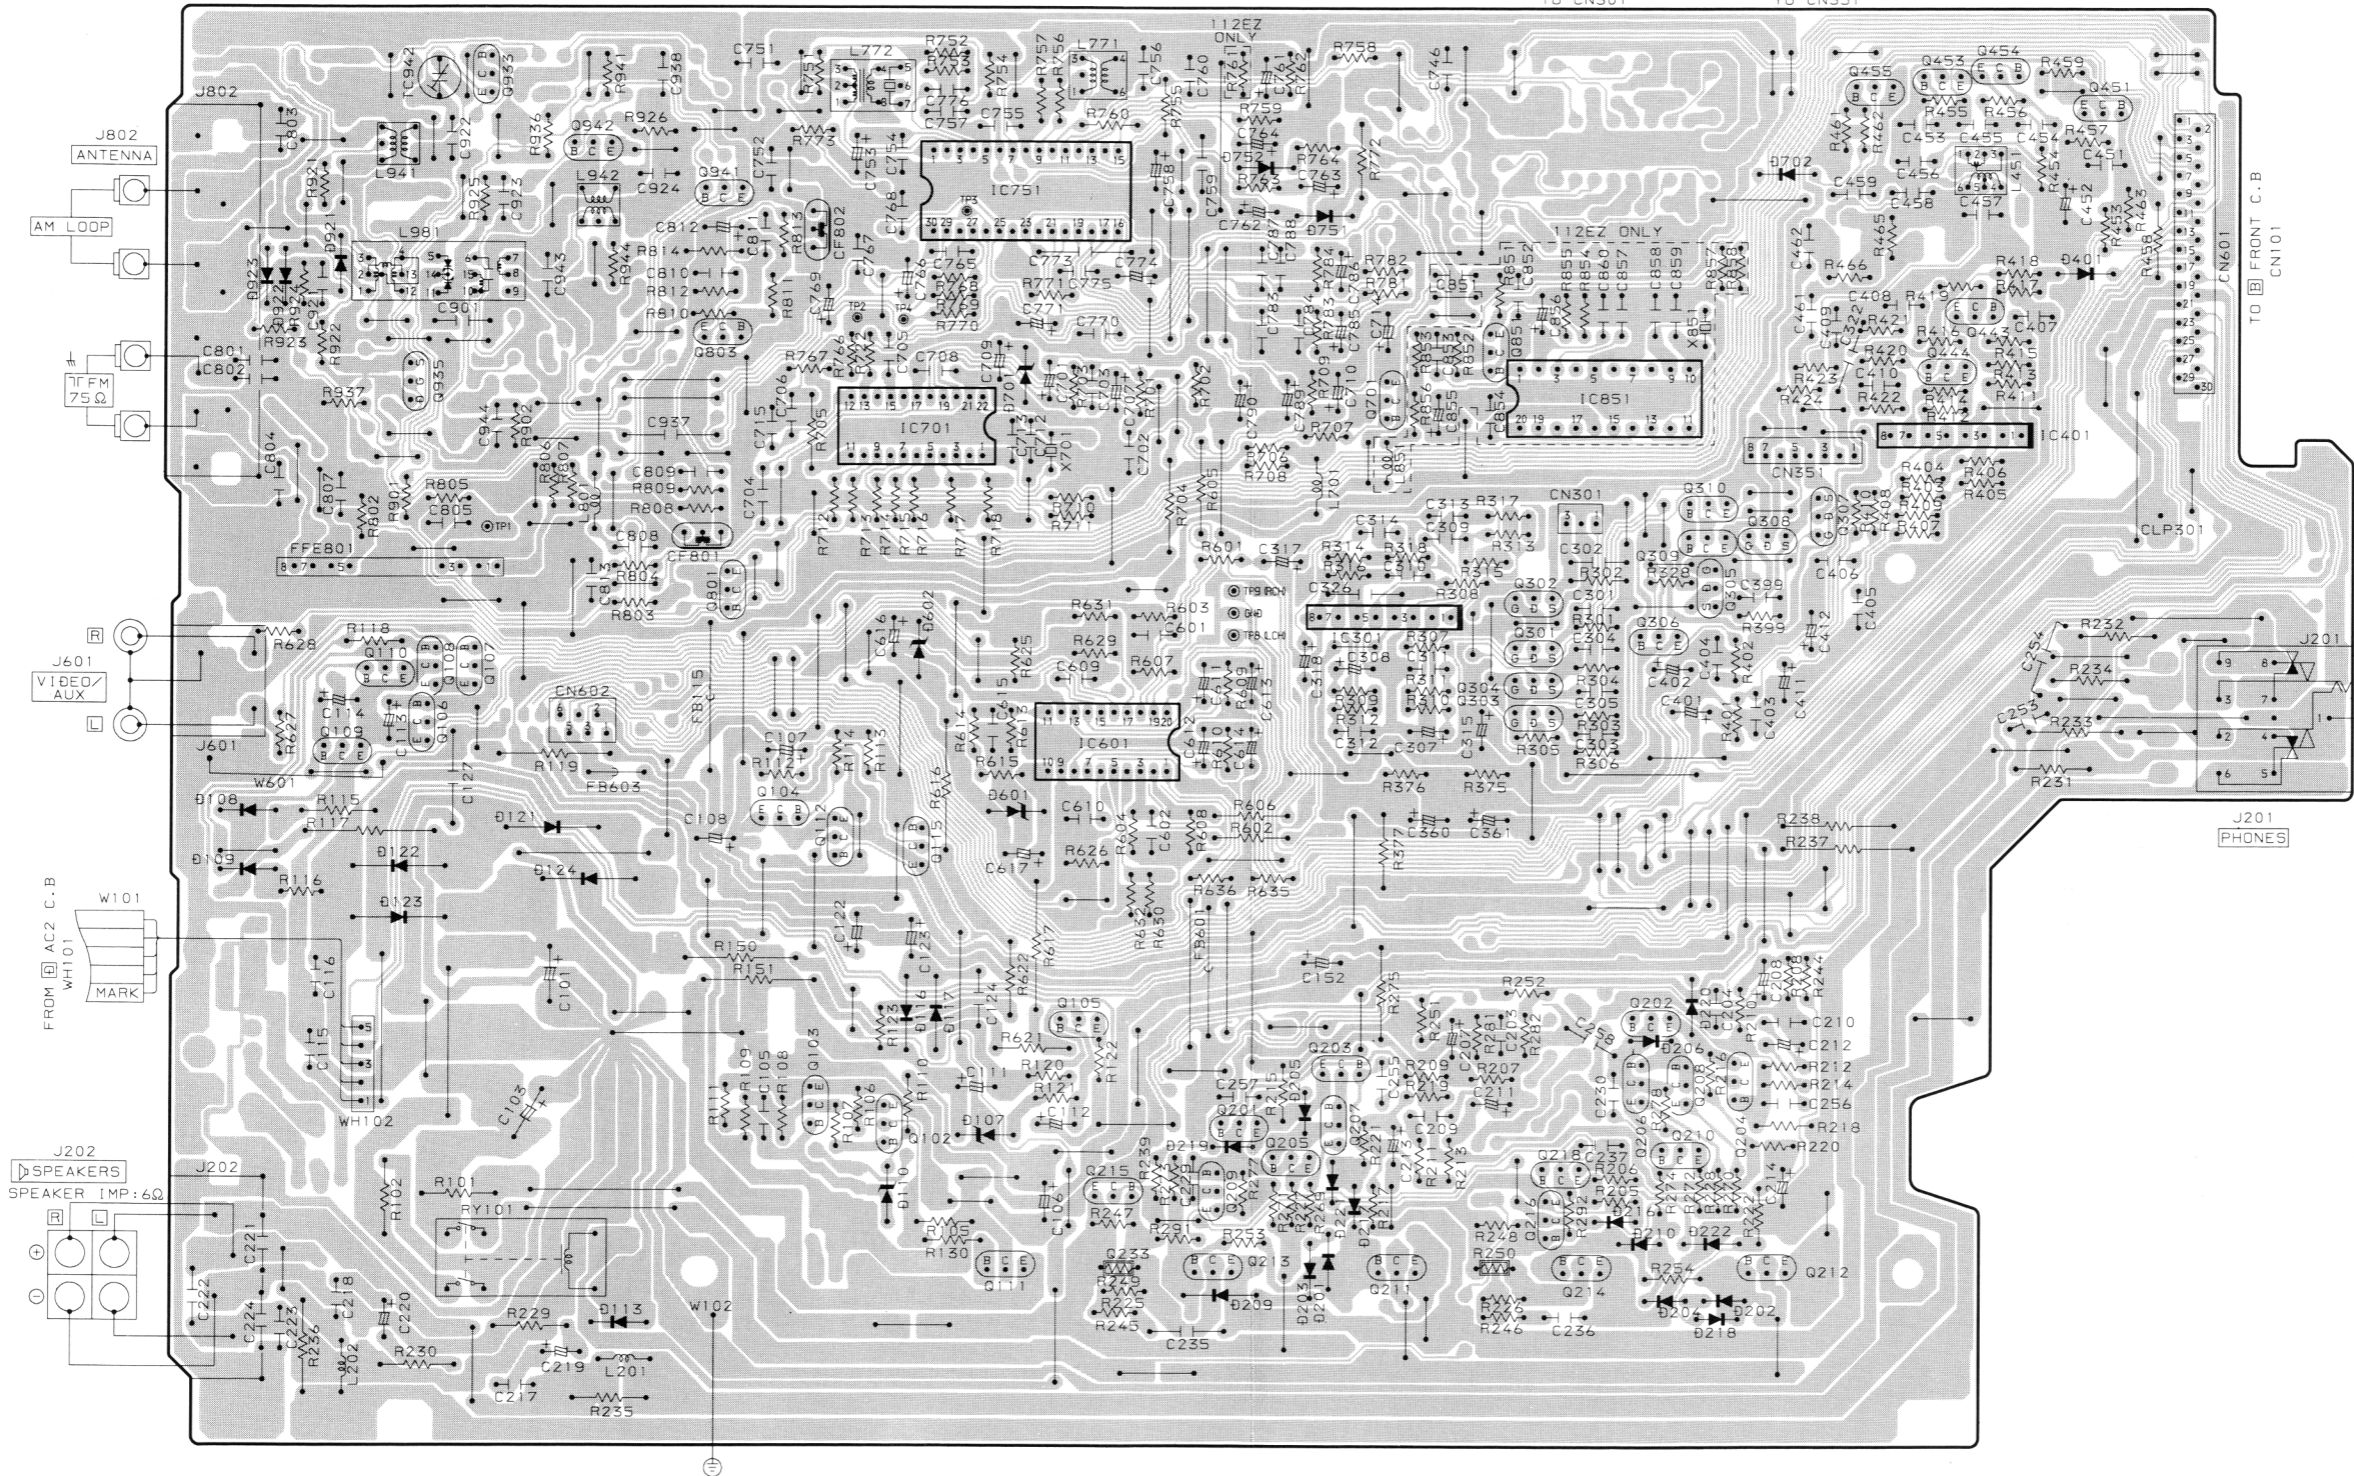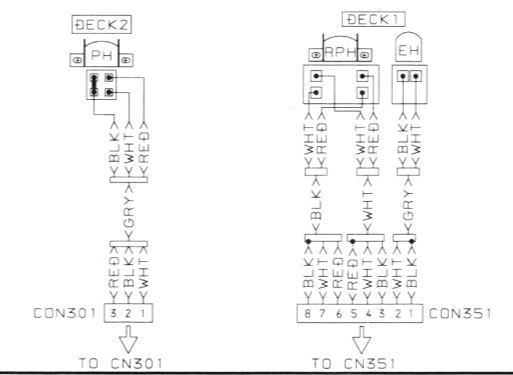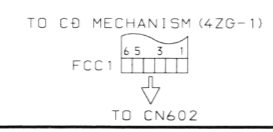

TO FRONT C.B. CN101




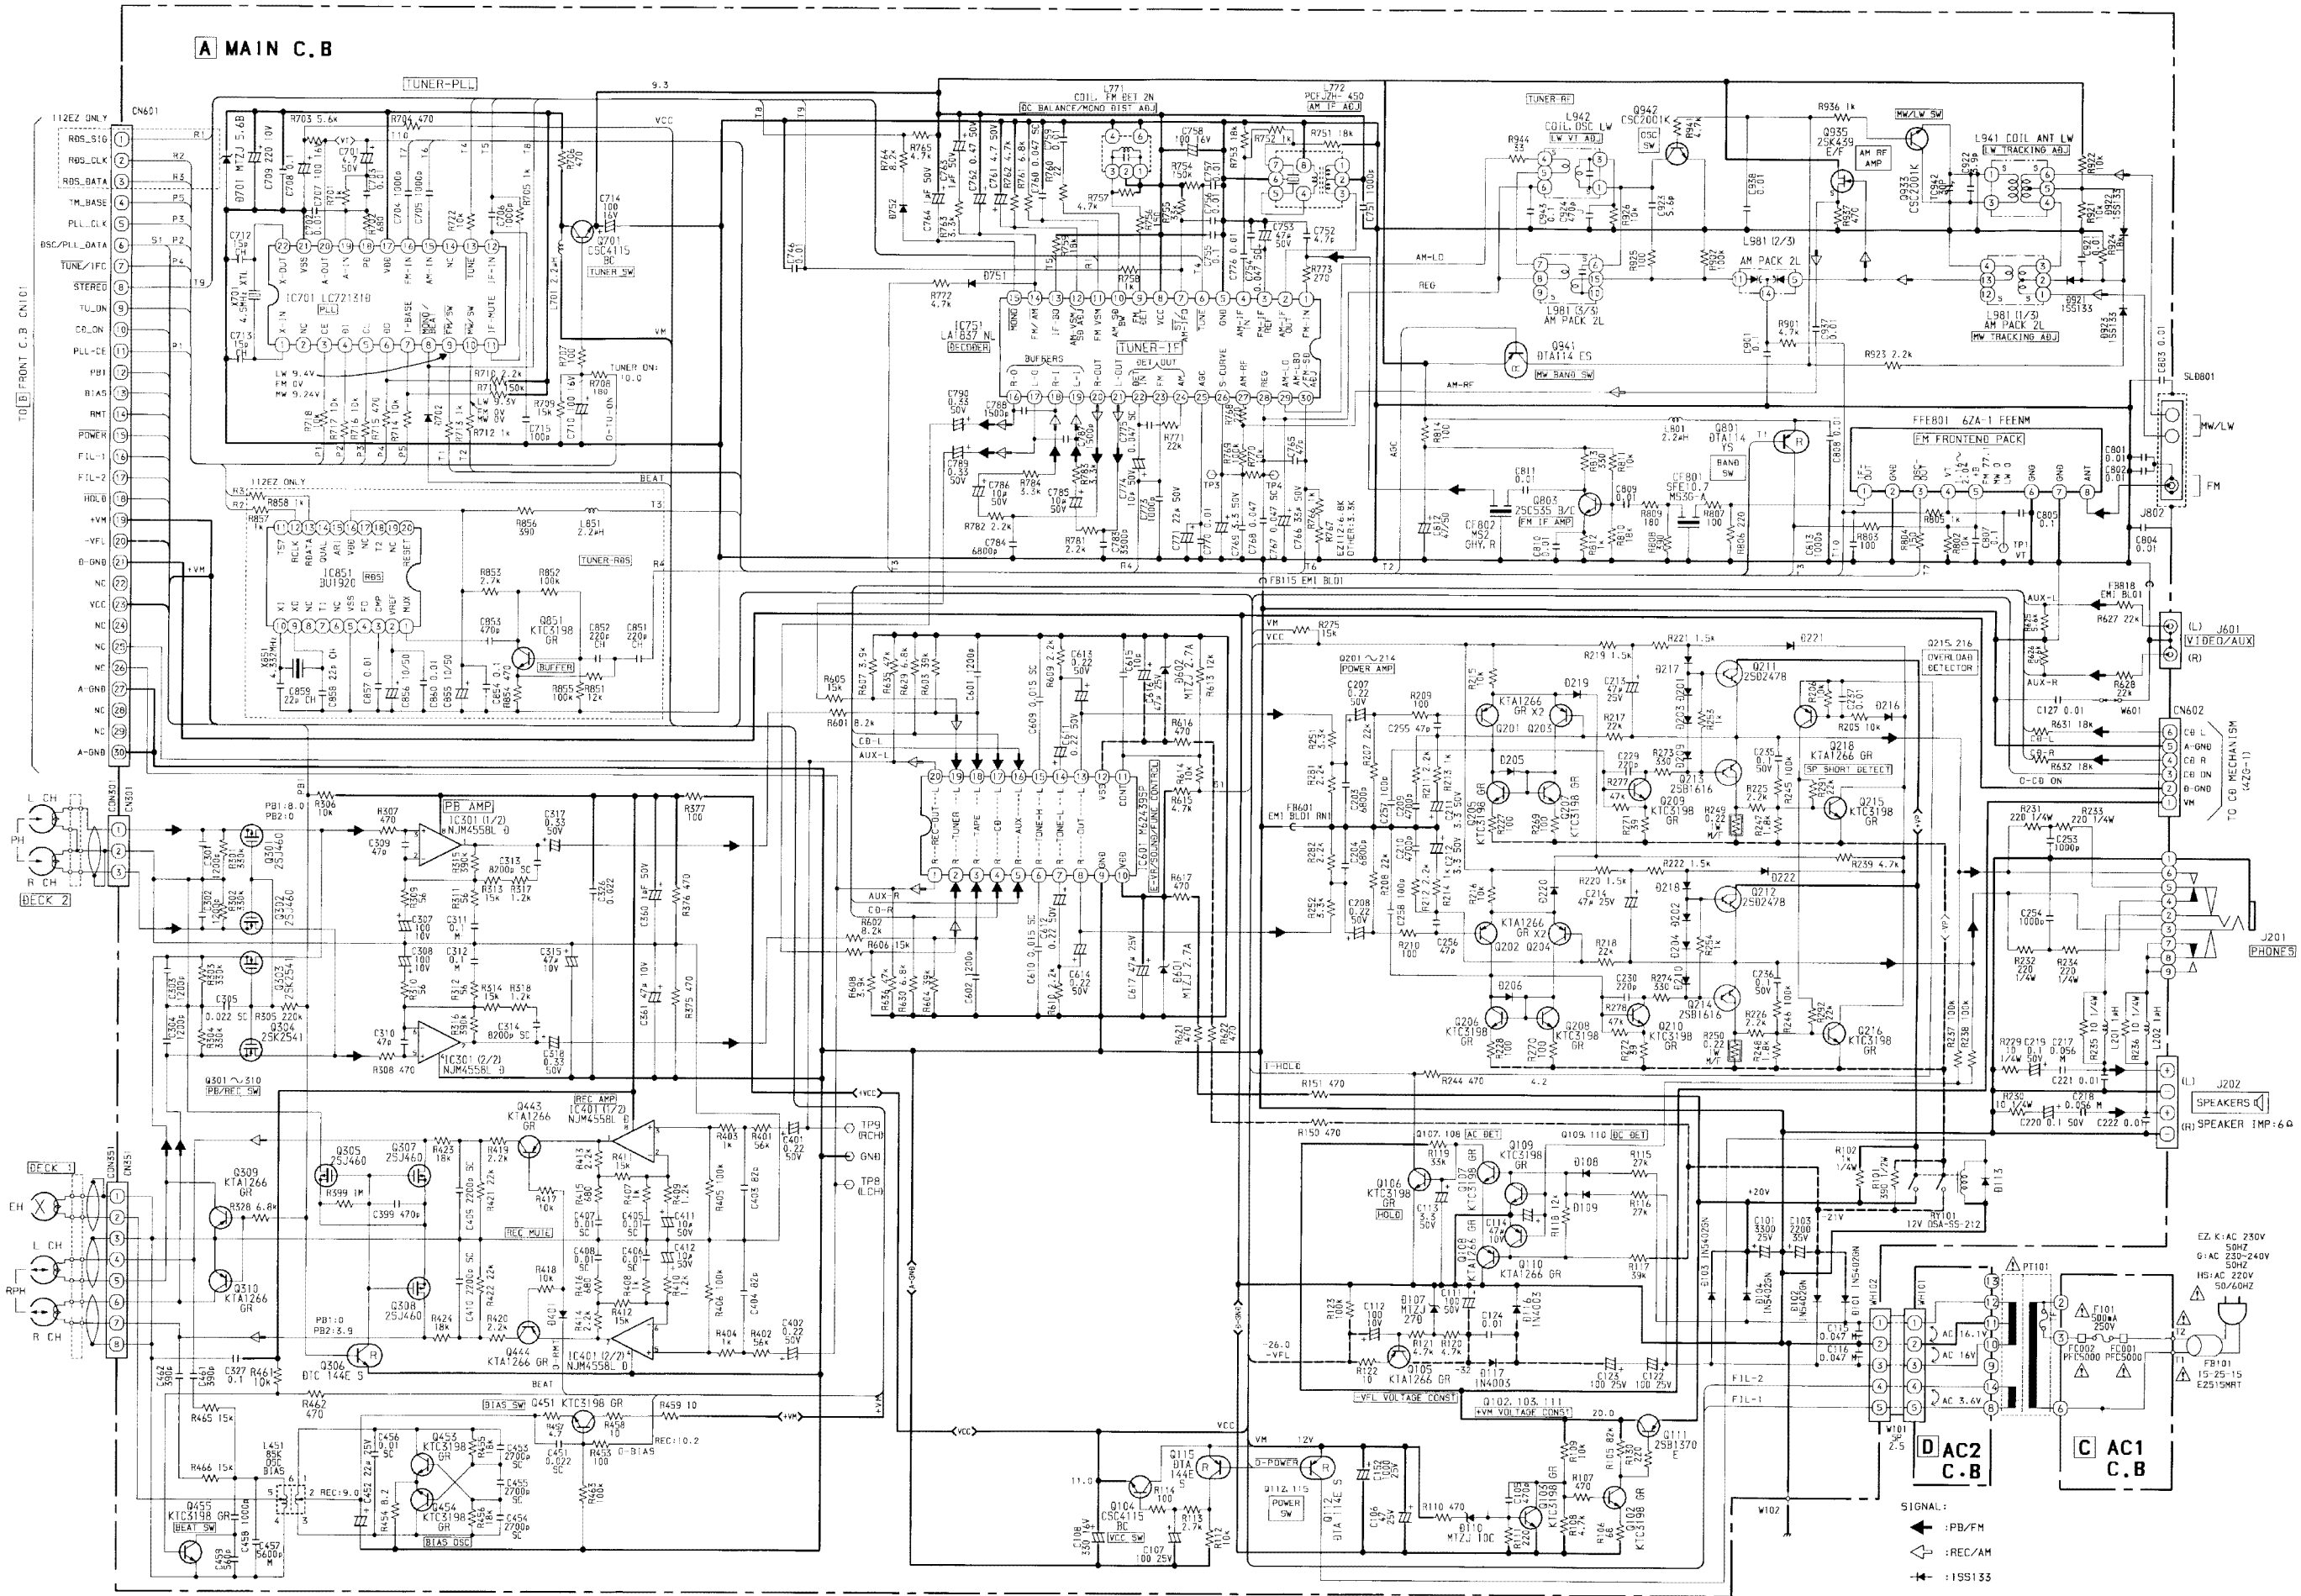

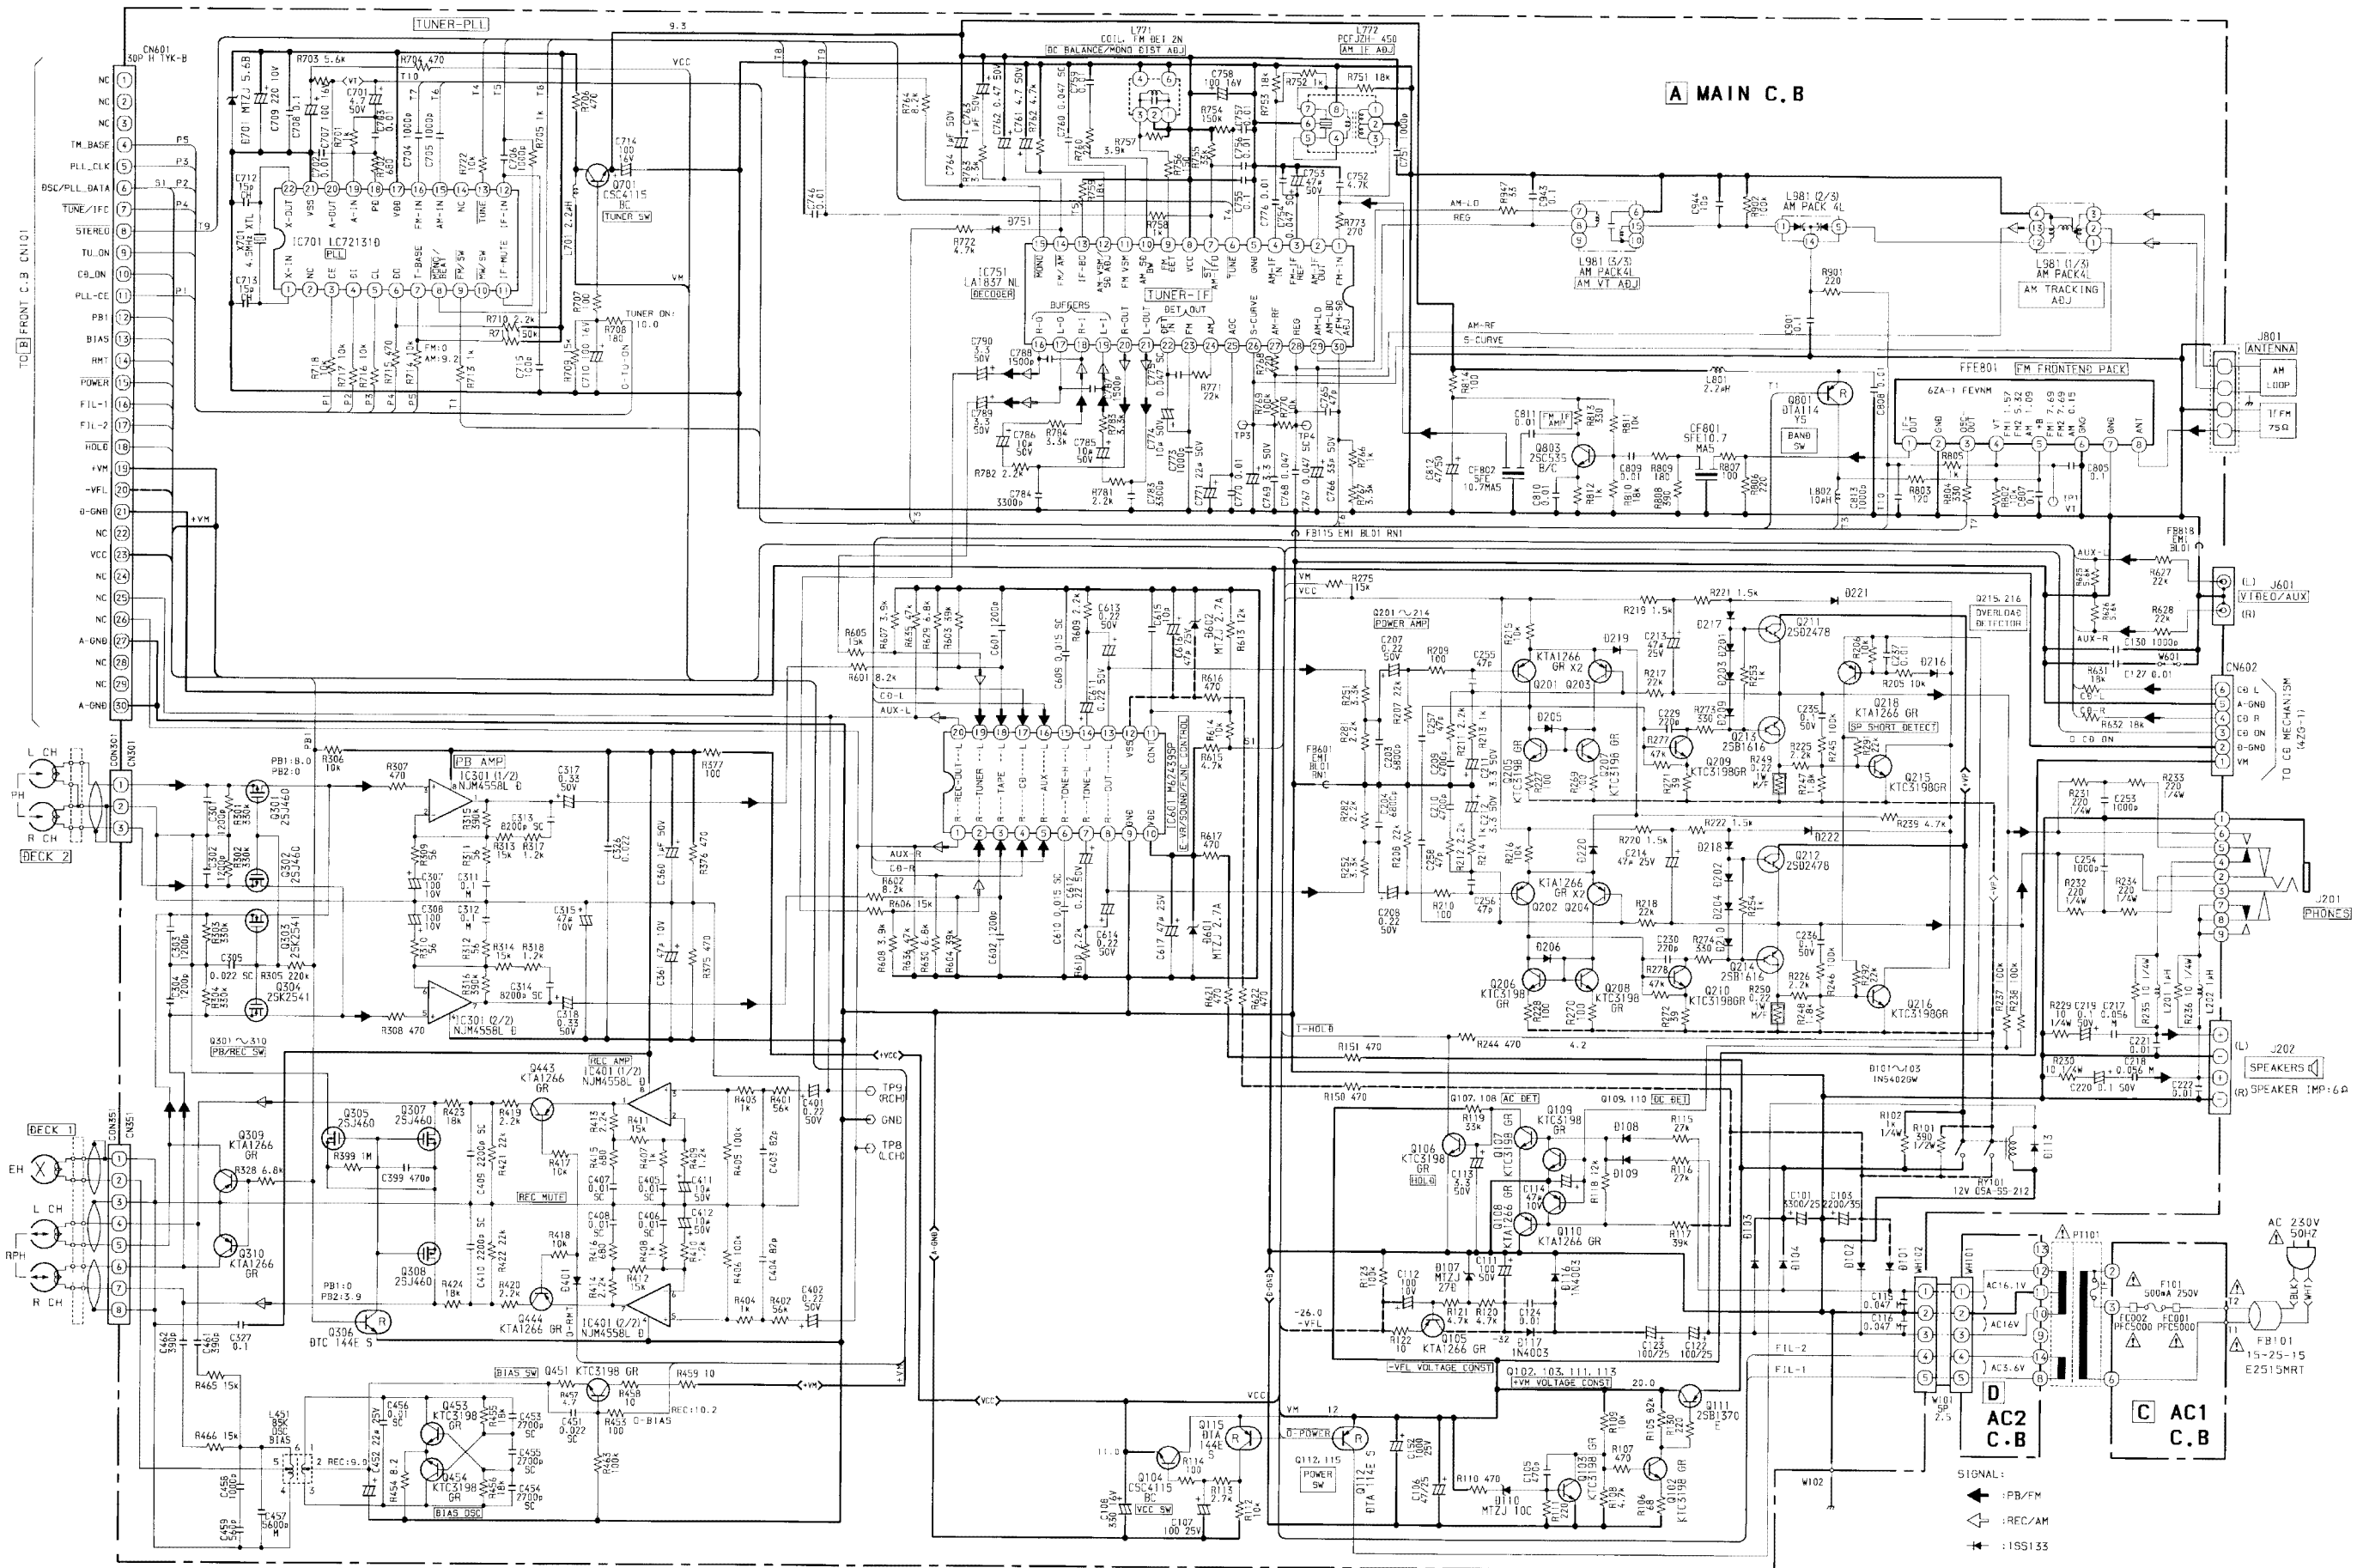


A
B
C
D
E
F
G
H
I
J

A MAIN C.B

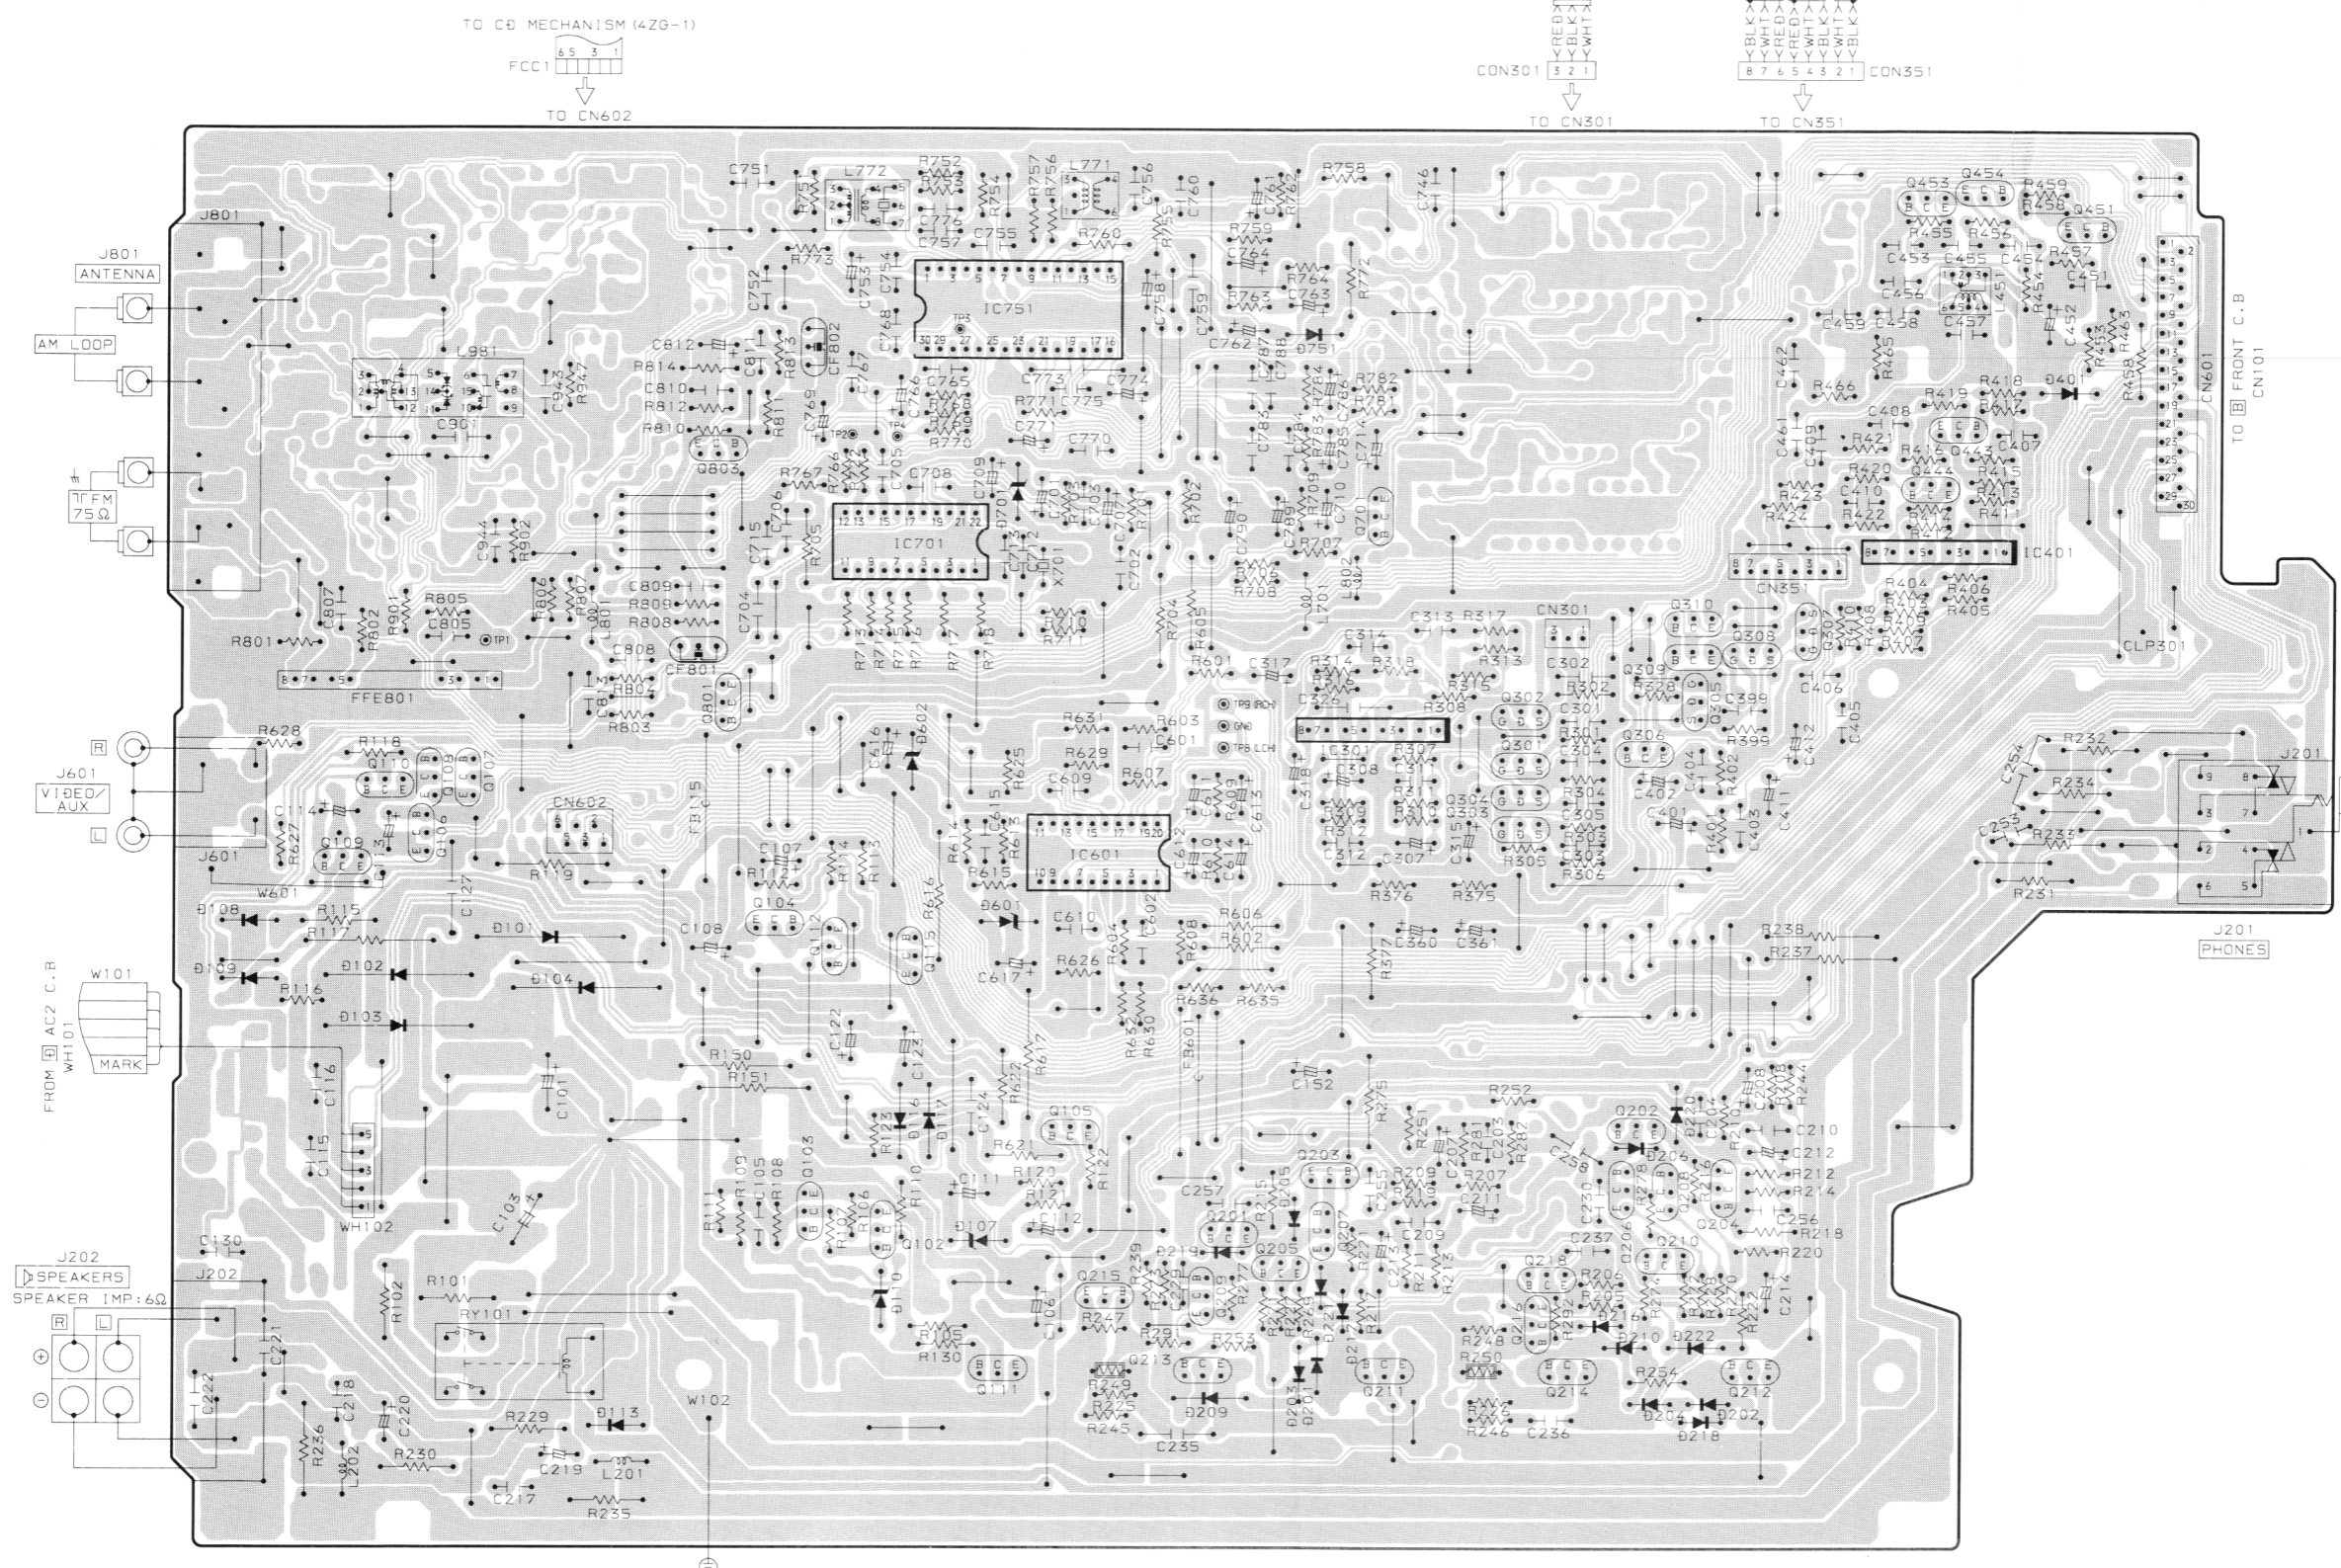


SCHEMATIC DIAGRAM - 4 (FRONT)

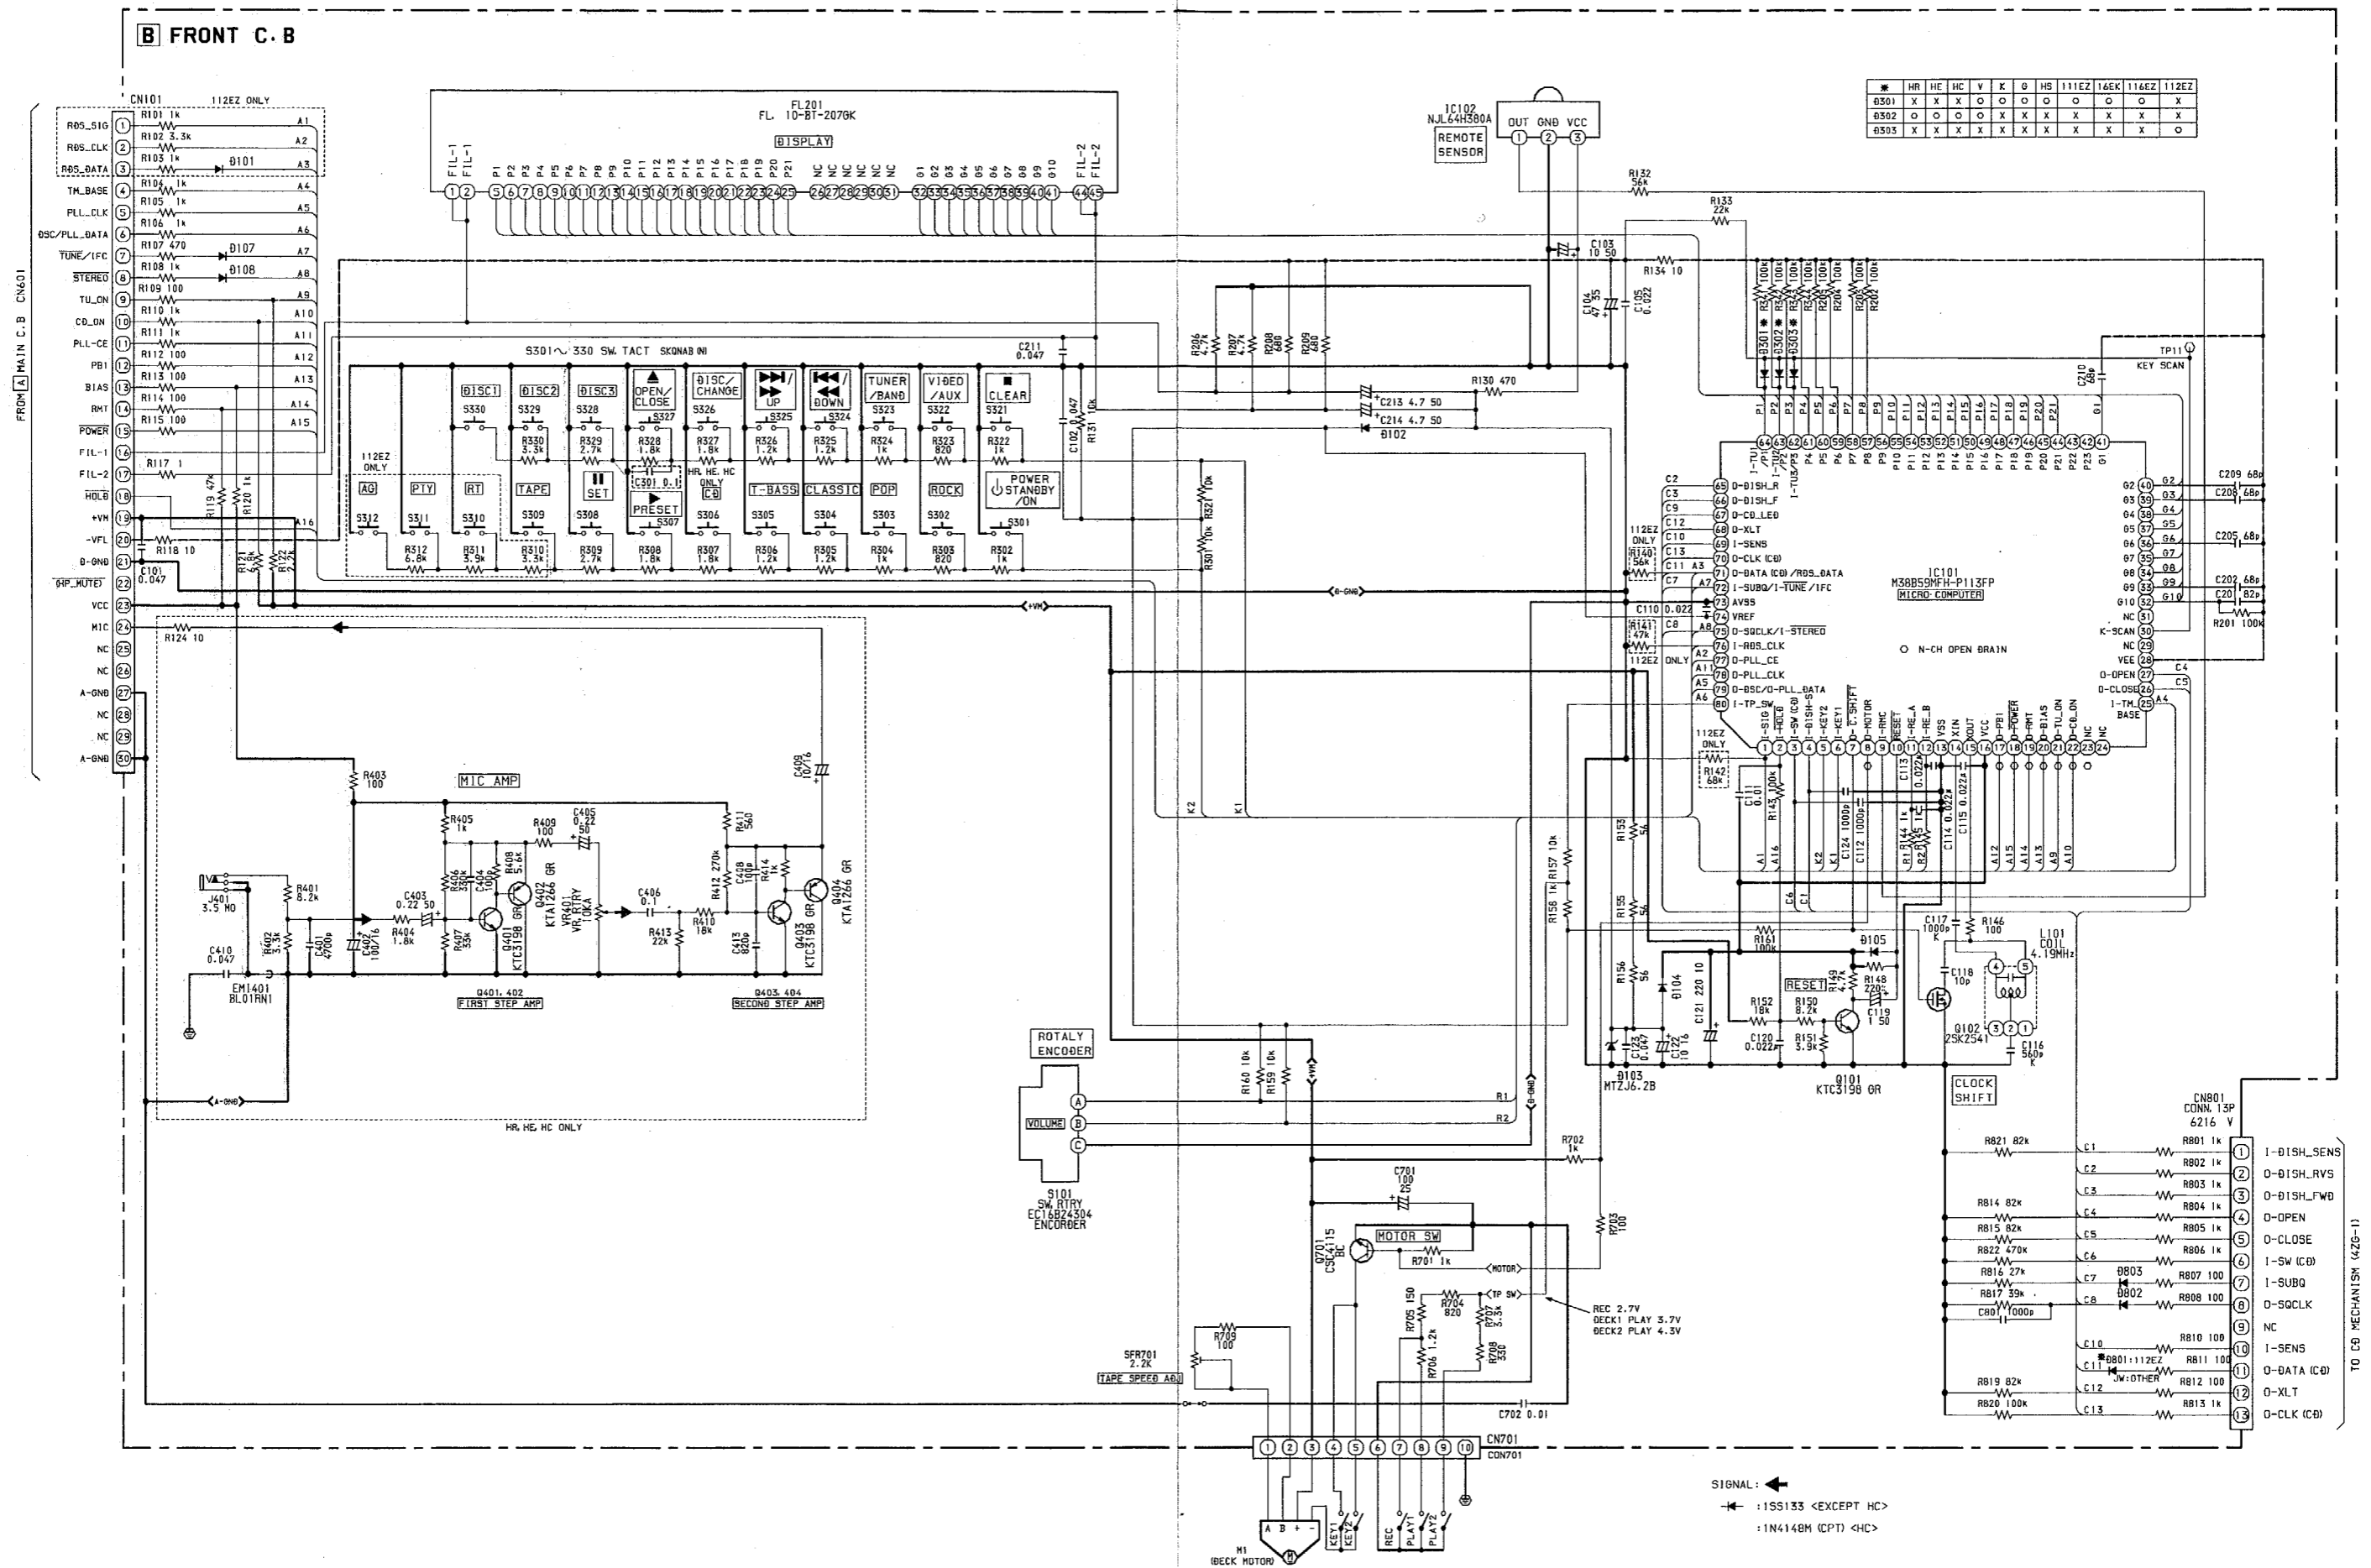

B FRONT C. B

A
B
C
D
E
F
G
H
I
J

TO CD MECHANISM
(4ZG-1)

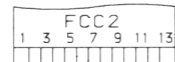

S101
VOLUME

FL201
(DISPLAY)

S306
CD


S322
VIDEO/AUX

S323
TUNER/BAND




S309
TAPE

S301
POWER
STANDBY/ON

IC102
(REMOTE SENSOR)

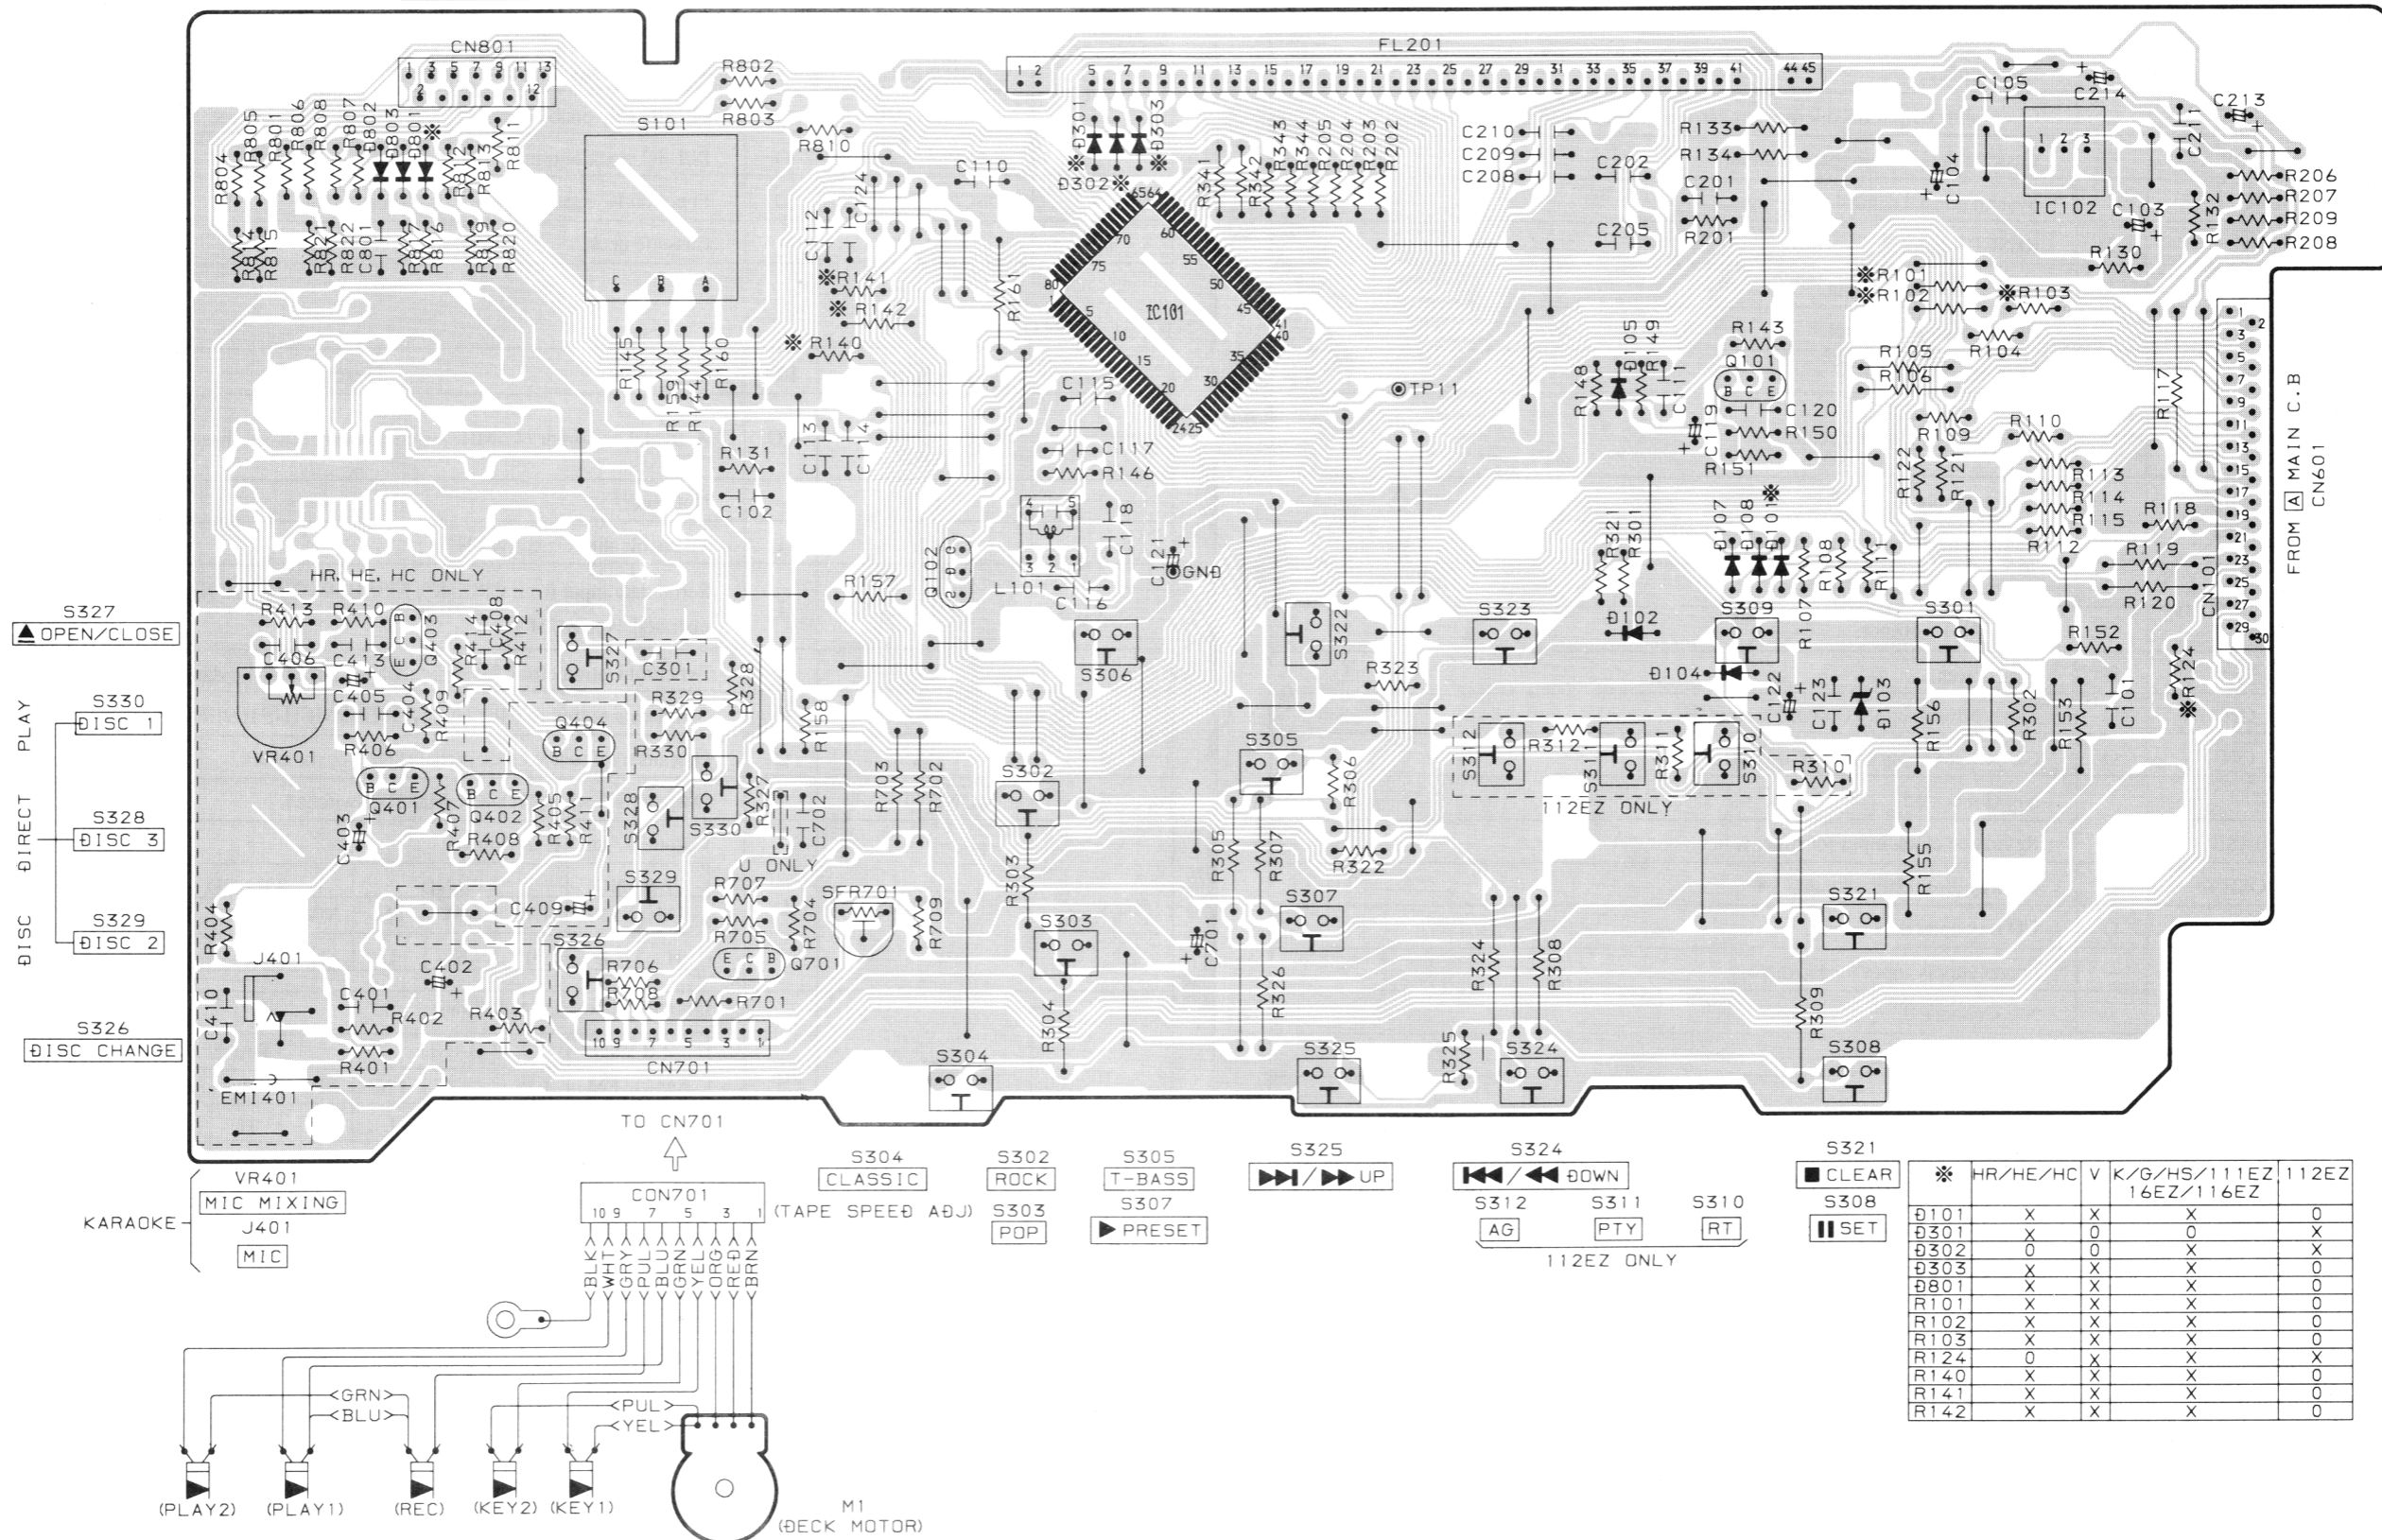

FROM MAIN C. B
CN601

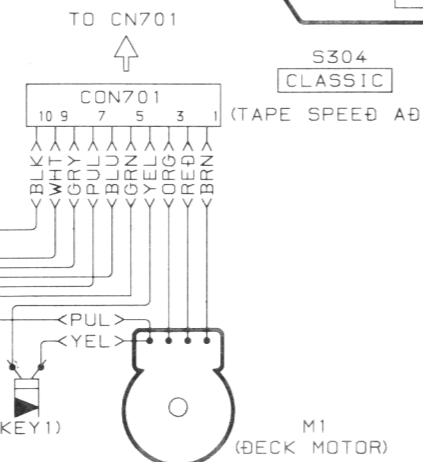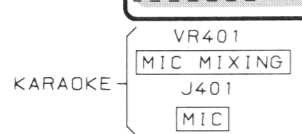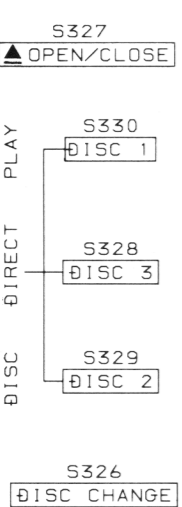

| | HR/HE/HC | V | K/G/HS/111EZ/16EZ/116EZ | 112EZ |
|------|----------|---|-------------------------|-------|
| ⊖101 | X | X | X | 0 |
| ⊖301 | X | 0 | 0 | X |
| ⊖302 | 0 | 0 | X | X |
| ⊖303 | X | X | X | 0 |
| ⊖801 | X | X | X | 0 |
| R101 | X | X | X | 0 |
| R102 | X | X | X | 0 |
| R103 | X | X | X | 0 |
| R124 | 0 | X | X | X |
| R140 | X | X | X | 0 |
| R141 | X | X | X | 0 |
| R142 | X | X | X | 0 |

IC DESCRIPTION

IC, M38B59MFH-P113FP

| Pin No. | Pin Name | I/O | Description |
|---------|---------------------|-----|--|
| 1 | I-RDS_SIG | I | Tuner RDS signal input <112EZ>. |
| 2 | I-HOLD | I | Hold input. |
| 3 | I-SW(CD) | I | CD mechanical switch input. |
| 4 | I-DISH | I | CD turntable photo sensor input. |
| 5 | I-KEY2 | I | KEY input 1. |
| 6 | I-KEY1 | I | KEY input 2. |
| 7 | O-C.SHIFT | O | Clock shift output for microcomputer when tuner receiving broadcast. |
| 8 | O-MOTOR | O | Cassette deck motor control output. |
| 9 | I-RMC | I | System remote control signal input. |
| 10 | RESET | I | RESET input. |
| 11 | I-RE_A | I | Rotary encoder A input. |
| 12 | I-RE_B | I | Rotary encoder B input. |
| 13 | VSS | - | Connected to GND. |
| 14 | XIN | - | 4.19 MHz oscillator circuit. |
| 15 | XOUT | - | |
| 16 | VCC | - | Power supply. |
| 17 | O-PB1 | O | Cassette deck output switching. |
| 18 | O-POWER | O | Power control output. |
| 19 | O-RMT | O | REC MUTE output. |
| 20 | O-BIAS | O | Bias output. |
| 21 | O-TU_ON | O | Tuner power supply ON/OFF output. |
| 22 | O-CD_ON | O | CD power supply ON/OFF output. |
| 23,24 | NC | - | Not Connected. |
| 25 | I-TM_BASE | I | Reference clock input for timer watch. |
| 26 | O-CLOSE | O | CD tray close data output. |
| 27 | O-OPEN | O | CD tray open data output. |
| 28 | VEE | - | Power supply input for FL display. |
| 29 | NC | - | Not Connected. |
| 30 | K-SCAN | O | Initial scan output. |
| 31 | NC | - | Not connected. |
| 32~41 | G10~G1 | O | FL grid output G1~G10. |
| 42~43 | P23~P24 | O | FL segment output (Not connected). |
| 44~62 | P21~P3 | O | FL segment output. |
| 63 | P2 | I/O | FL segment output. |
| 64 | P1 | O | FL segment output. |
| 65 | O-DISH_REV | O | CD turntable reverse rotation output. |
| 66 | O-DISH_FWR | O | CD turntable forward rotation output. |
| 67 | O-CD_LED | O | CD flash window output.(Not connected). |
| 68 | O-XLT | O | CD IC control output. |
| 69 | I-SENS | I | CD IC control output. |
| 70 | O-CLK(CD) | O | CD clock output. |
| 71 | O-DATA(CD)/RDS_DATA | O/I | CD data output / Tuner RDS data input <112EZ>. |

| Pin No. | Pin Name | I/O | Description |
|---------|-------------------------|-----|--|
| 72 | O-SUBQ/ I-TUNE/I-IFC | O/I | CD SUBQ data output/ TUNER signal input/ TUNER IF count serial data input. |
| 73 | AVSS | - | Connected to GND. |
| 74 | VREF | - | Power supply. |
| 75 | O-SQCLK/I-STEREO | O/I | CD SQCLK output/ TUNER STEREO detected input. |
| 76 | I-RDS_CLK | I | Tuner RDS clock input.<112EZ>. |
| 77 | O-PLL_CE | O | PLL IC chip enable output. |
| 78 | O-PLL_CLK | O | PLL IC clock output. |
| 79 | O-DSC/O-PLL DATA | O | Function IC control output / PLL data output. |
| 80 | I-TP_SW | I | Cassette deck. |

IC, LC72131D

| Pin No. | Pin Name | I/O | Description | | | | | | | | | | | | | | | | | | | | | | | | |
|---------|-------------|--------|---|--------|--------|--------|----|--|--------|--|--|----|----|----|----|----|----|----|----|---|---|---|---|---|---|---|---|
| 1 | XIN | I/O | A crystal oscillator (4.5MHz) is connected between these pins. | | | | | | | | | | | | | | | | | | | | | | | | |
| 22 | XOUT | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | NC | - | Not used. | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | CE | I | To enable the IC. Active "H". | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | DI | I | Serial data input from CPU (IC, M38B59MFH-P109FP) when relevant key is operated. Active "H". | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | CL | I | Synchronization clock for serial data in (DI) or serial data out (DO). | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | DO | O | Serial data output to CPU (IC, M38B59MFH-P109FP). | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | T-BASE | O | Outputs a reference clock signal (8Hz) for the clock. | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | MONO / BEAT | O | Outputs "H" when MONO / BEAT is switched. | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | FM / SW | O | Output "L" or "H" as follows: <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">2 BAND</th> <th colspan="3">3 BAND</th> <th colspan="3">3 BAND</th> </tr> <tr> <th>AM</th> <th>FM</th> <th>LW</th> <th>MW</th> <th>FM</th> <th>MW</th> <th>SW</th> <th>FM</th> </tr> </thead> <tbody> <tr> <td>H</td> <td>L</td> <td>H</td> <td>H</td> <td>L</td> <td>H</td> <td>L</td> <td>L</td> </tr> </tbody> </table> | 2 BAND | | 3 BAND | | | 3 BAND | | | AM | FM | LW | MW | FM | MW | SW | FM | H | L | H | H | L | H | L | L |
| 2 BAND | | 3 BAND | | | 3 BAND | | | | | | | | | | | | | | | | | | | | | | |
| AM | FM | LW | MW | FM | MW | SW | FM | | | | | | | | | | | | | | | | | | | | |
| H | L | H | H | L | H | L | L | | | | | | | | | | | | | | | | | | | | |
| 10 | MW/SW | O | Outputs "L" or "H" as follows: <table border="1" style="margin-left: 20px;"> <thead> <tr> <th colspan="2">2 BAND</th> <th colspan="3">3 BAND</th> <th colspan="3">3 BAND</th> </tr> <tr> <th>AM</th> <th>FM</th> <th>LW</th> <th>MW</th> <th>FM</th> <th>MW</th> <th>SW</th> <th>FM</th> </tr> </thead> <tbody> <tr> <td>L</td> <td>L</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> <td>L</td> </tr> </tbody> </table> | 2 BAND | | 3 BAND | | | 3 BAND | | | AM | FM | LW | MW | FM | MW | SW | FM | L | L | H | L | L | L | H | L |
| 2 BAND | | 3 BAND | | | 3 BAND | | | | | | | | | | | | | | | | | | | | | | |
| AM | FM | LW | MW | FM | MW | SW | FM | | | | | | | | | | | | | | | | | | | | |
| L | L | H | L | L | L | H | L | | | | | | | | | | | | | | | | | | | | |
| 11 | IF-MUTE | O | To control internal counter. | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | IF-IN | I | General purpose counter input. | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | TUNE | I | Receives "L" when station is tuned. | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | NC | - | Not connected. | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | AM-IN | I | Receives the AM local oscillator frequency signal. | | | | | | | | | | | | | | | | | | | | | | | | |
| 16 | FM-IN | I | Receives the FM local oscillator frequency signal. | | | | | | | | | | | | | | | | | | | | | | | | |
| 17 | VDD | - | Supply power to IC (+5V). | | | | | | | | | | | | | | | | | | | | | | | | |
| 18 | PD | O | PLL charge pump output. | | | | | | | | | | | | | | | | | | | | | | | | |
| 19 | A-IN | I | The MOS transistor for PLL active low pass filter. | | | | | | | | | | | | | | | | | | | | | | | | |
| 20 | A-OUT | O | | | | | | | | | | | | | | | | | | | | | | | | | |
| 21 | VSS | - | Ground. | | | | | | | | | | | | | | | | | | | | | | | | |

WIRING - 5 (POWER)


1 2 3 4 5 6 7

A
B
C
D
E
F
G
H
I
J

C AC1 C.B

D AC2 C.B


EZ, K, V:
AC 230V
50Hz
G:
AC 230~240V
50Hz
HS:
220V
50/60Hz

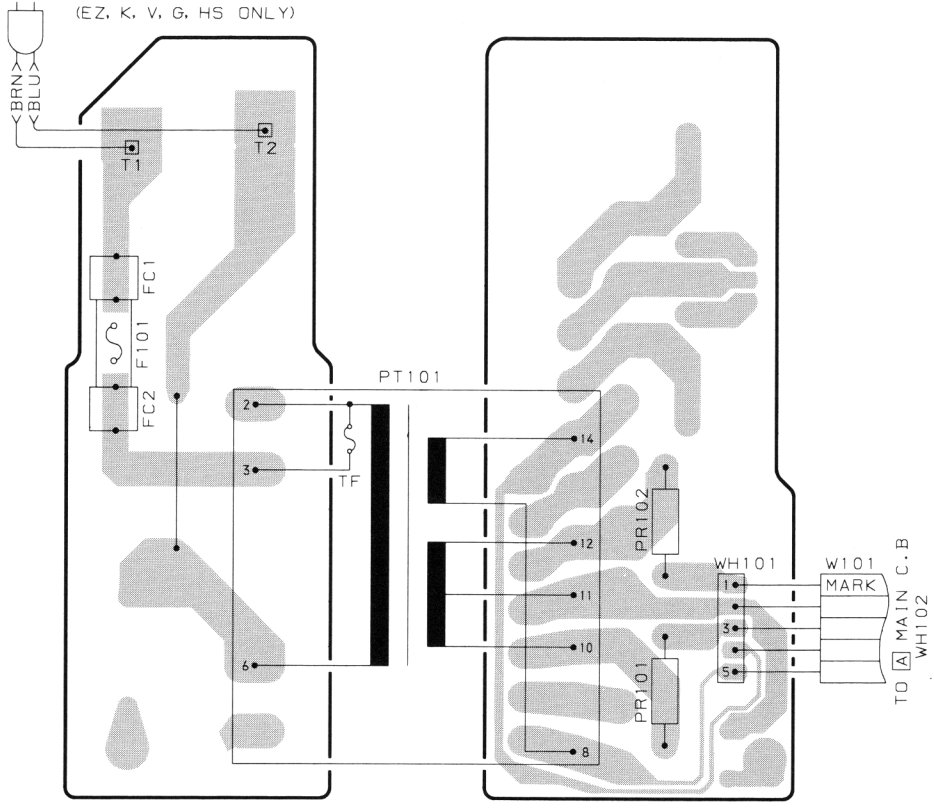

HR, HC:
AC 120V/
220~230V
240V
50/60Hz
HE:
AC 120V
220~240V
50/60Hz


C AC1 C.B

(HR, HE, HC ONLY)

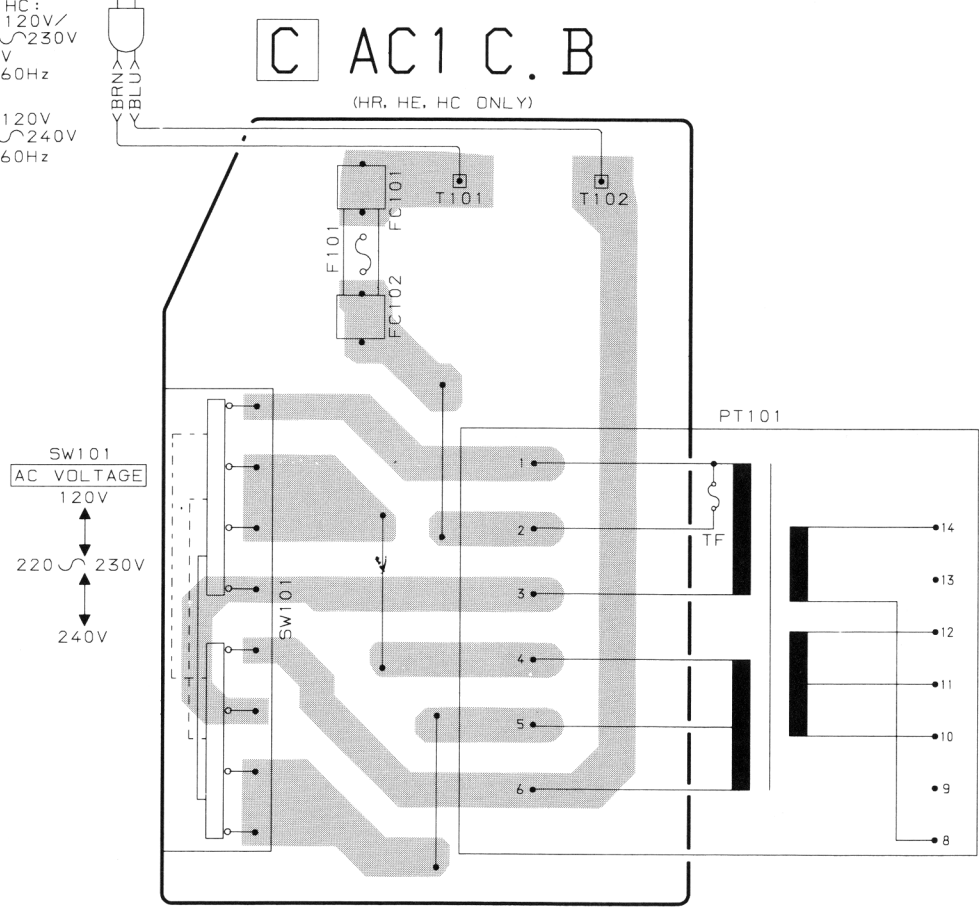

FL GRID ASSIGNMENT & ANODE CONNECTION

GRID ASSIGNMENT

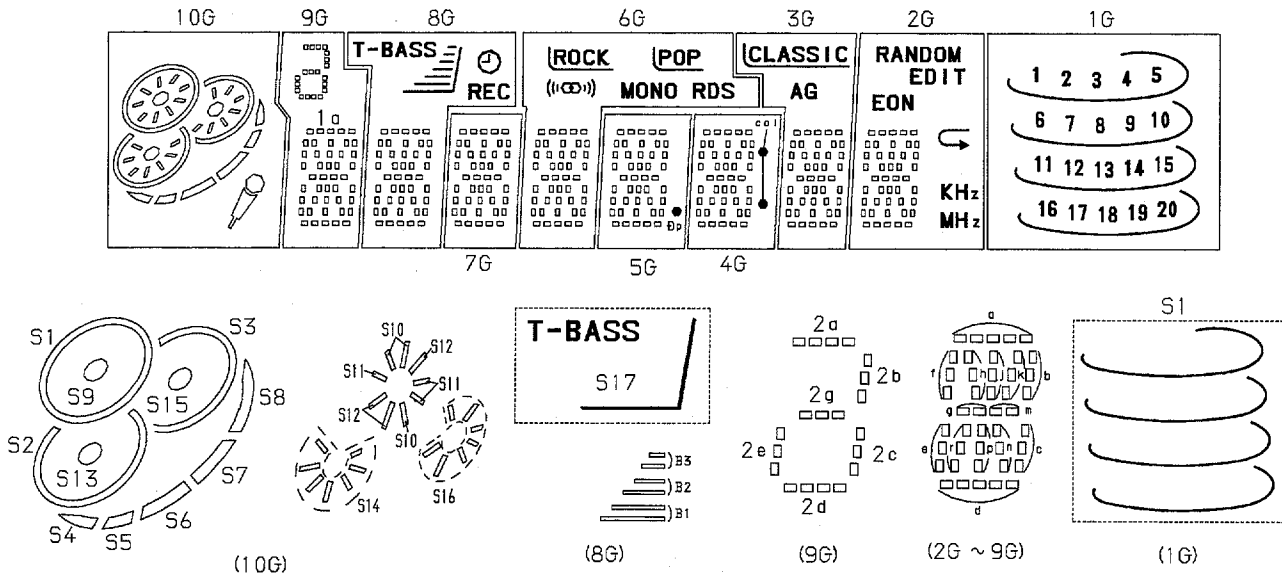


ANODE CONNECTION


| | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G |
|-----|-----|------------|------------|----|-----------------|----|---------|------------------|---------------|-----------|
| P1 | S6 | 1d | d | d | d | d | d | d | d | 20 |
| P2 | S7 | 1n | n | n | n | n | n | n | n | 19 |
| P3 | S8 | 1p | p | p | p | p | p | p | p | 18 |
| P4 | S14 | 1r | r | r | r | r | r | r | r | 17 |
| P5 | S13 | 1e | e | e | e | e | e | e | e | 16 |
| P6 | S2 | 1c | c | c | c | c | c | c | c | 15 |
| P7 | S16 | 1g | g | g | g | g | g | g | g | 14 |
| P8 | S15 | 1m | m | m | m | m | m | m | m | 13 |
| P9 | S3 | 1f | f | f | f | f | f | f | f | 12 |
| P10 | S12 | 1b | b | b | b | b | b | b | b | 11 |
| P11 | S11 | 1k | k | k | k | k | k | k | k | 10 |
| P12 | S10 | 1j | j | j | j | j | j | j | j | 9 |
| P13 | S9 | 1h | h | h | h | h | h | h | h | 8 |
| P14 | S1 | 1a | a | a | a | a | a | a | a | 7 |
| P15 | S5 | / | REC | / | ((CD)) | ⊕p | col (F) | / | MHz | 6 |
| P16 | S4 | / | ⊕ | / | MONO | / | col (L) | / | KHz | 5 |
| P17 | 🔊 | 2a, 2g, 2d | S17 | / | RDS | / | / | AG | ↻ | 4 |
| P18 | / | 2e | B1 | / | (ROCK) | / | / | (CLASSIC) | EON | 3 |
| P19 | / | 2c | B2 | / | (POP) | / | / | | EDIT | 2 |
| P20 | / | 2b | B3 | / | ROCK/POP | / | / | CLASSIC | RANDOM | 1 |
| P21 | / | / | / | / | / | / | / | / | / | S1 |

ADJUSTMENT <TUNER / DECK>

A MAIN C.B

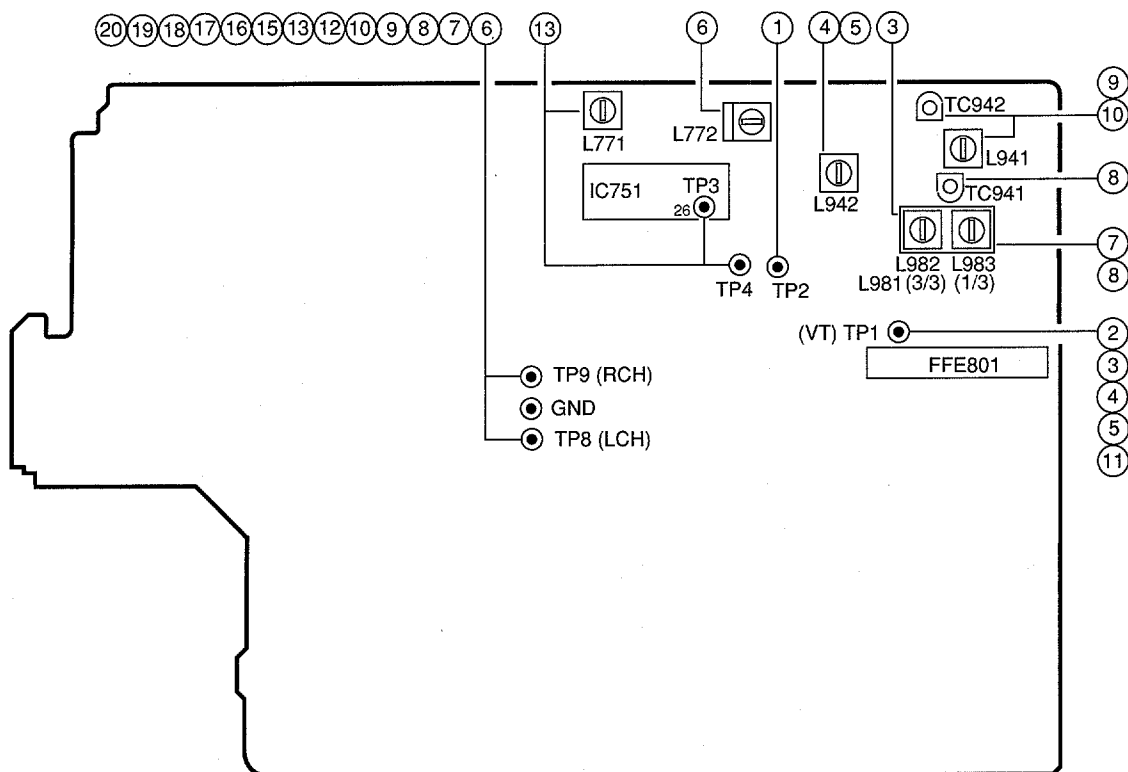

B FRONT C.B

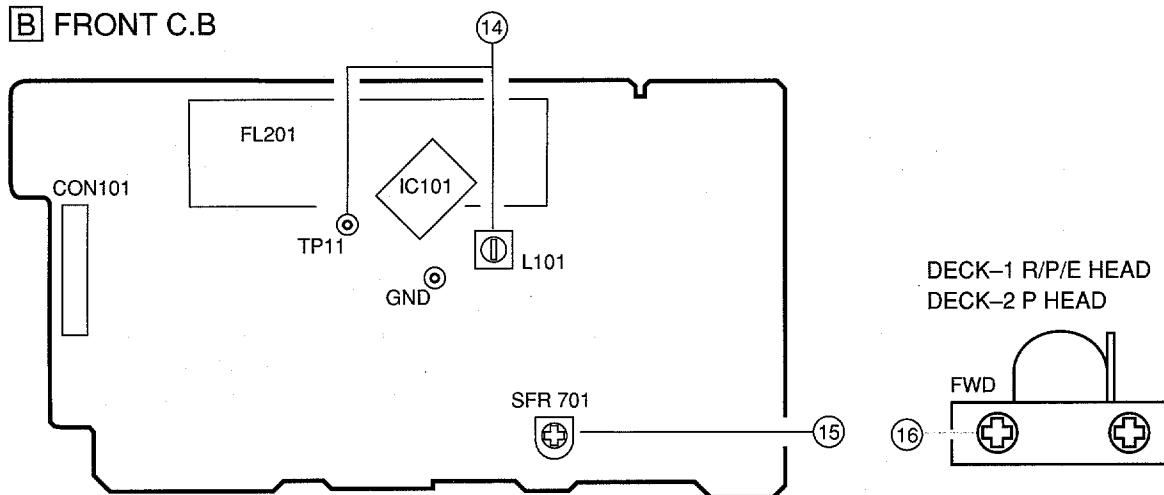

< TUNER SECTION >

1. Clock Frequency Check
Settings : • Test point : TP2
Method : Set to AM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. AM/MW VT Check <EZ,K,V,G,HS>
Settings : • Test point : TP1
Method : Set to AM 1602kHz and AM 531kHz and check that the test point is less than 8.0V(1602kHz) and more than 0.6V(531kHz).
3. MW VT Adjustment <HR,HE,HC>
Settings : • Test point : TP1 (VT)
• Adjustment location : L982
Method : Set to MW 1710kHz and adjust L982 so that the test point becomes 8.0V \pm 0.05V. Then check that the test point is more than 0.3V (530kHz).
4. SW VT Adjustment <HR,HE,HC>
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to SW 17.9MHz and adjust L942 so that the test point becomes 7.0V \pm 0.05V. Then check that the test point is more than 0.3V (5.9MHz).
5. LW VT Adjustment <EZ,K,G,HS>
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to LW 144kHz and adjust L942 so that the test point is 1.3V \pm 0.05V. Then check that the test point is less than 8.0V (290kHz).
6. AM /MW IF Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location : L772.....450kHz

Method : The output level at 999/1000kHz is adjusted to maximum by L772.

< DECK SECTION >

7. MW Tracking Adjustment <EZ,K,G,V,HS>

Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location : L981(1/3).....999/1000kHz

Method : The output level at 999/1000kHz is adjusted to maximum by L981(1/3).

15. Tape Speed Adjustment

Settings : • Test tape : TTA-100
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : SFR701

Method : Play back the test tape and adjust SFR701 so that the frequency counter reads 3000Hz \pm 5Hz.

8. MW Tracking Adjustment <HR,HE,HC>

Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location : L983603kHz
TC9411404kHz

Method : Set up TC941 to center before adjustment. The output level at 603kHz is adjusted to maximum by L983. Then the output level at 1404kHz is adjusted to maximum by TC941.

16. Head Azimuth Adjustment (DECK 1, DECK 2)

Settings : • Test tape : TTA-330
• Test point : TP8(Lch), TP9(Rch)
• Adjustment location : Azimuth adjustment screw

Method : Play back the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Perform on FWD PLAY and REV PLAY mode.

9. LW Tracking Adjustment <EZ,K,G,HS>

Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location : L941144MHz
TC942290MHz

Method : Set up TC942 to center before adjustment. The output level at 144kHz is adjusted to maximum by L941. Then the level at 290kHz is adjusted to maximum by TC942.

17. PB Frequency Response Check (DECK 1, DECK 2)

Settings : • Test tape : TTA-330
• Test point : TP8(Lch), TP9(Rch)

Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

10. SW Tracking Adjustment <HR,HE,HC>

Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location : L9415.9MHz
TC94217.9MHz

Method : Set up TC942 to center before adjustment. The output level at 5.9MHz is adjusted to maximum by L941. Then the output level at 17.9MHz is adjusted to maximum by TC942.

18. PB Sensitivity Check (DECK 1, DECK 2)

Settings : • Test tape : TTA-200
• Test point : TP8(Lch), TP9(Rch)

Method : Play back the test tape and check the signal level of the test point is 110mV \pm 3.0dB.

11. FM VT Check

Settings : • Test point : TP1
Method : <HR,HE,HC,EZ,K,G,HS>

Set to FM 108.0MHz and check that the test point is less than 8.0V. Set to FM 87.5MHz and check that the test point is more than 0.5V.

<V>

Set to FM 108.0MHz and check that the test point is less than 9.5V. Set to FM 65.0MHz and check that the test point is more than 1.0V.

19. REC/PB Frequency Response Check

Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz / 8kHz, -26dBV (LINE IN)

Method : Apply 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes 8~10mV. Record and play back the 1kHz and 8kHz signals and check that the output is 0dB \pm 5dB with respect to that of the 1kHz signal.

12. FM Tracking Check

Settings : • Test point : TP8(Lch), TP9(Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 9.0dB μ V <HR,HE,HC> / 13.0dB μ V <EZ,K,G,HS> / 8.0dB μ V <V>.

20. REC/PB Sensitivity Check

Settings : • Test tape : TTA-602
• Test point : TP8(Lch), TP9(Rch)
• Input signal : 1kHz, -6dBV (LINE IN)

Method : Apply 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP8, TP9 becomes 80~100mV. Record and play back the 1kHz signals and check that the output is -2.0dB \pm 3.5dB.

13. DC Balance / Mono Distortion Adjustment

Settings : • Test point : TP3,TP4 / TP8,TP9
• Adjustment location : L77198.0MHz
• Input level : 60 dB μ V

Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes 0V \pm 0.04V. Next, check that the distortion is less than 1.3%.

14. μ -con OSC Adjustment

Settings : • Test point : TP11
• Adjustment location : L101
Method : Insert AC plug with pressing TUNER function key. Adjust L101 so that the frequency across the test point is 58.538 ~ 58.422Hz.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

| | |
|---------------------------------|--|
| IHF Sensitivity : | HR,HE,HC : |
| (THD 3%) | Less than 10dB μ V[at 87.5MHz] |
| | Less than 9dB[at 98.0/108.0MHz] |
| | V : |
| | Less than 12dB[at 70.0MHz] |
| | Less than 10dB μ V[at 87.5MHz] |
| | Less than 9dB[at 98.0/108.0MHz] |
| | EZ,K,G,HS : |
| | Less than 14dB μ V[at 87.5MHz] |
| | Less than 13dB[at 98.0/108.0MHz] |
| S/N 50dB Quieting sensitivity : | |
| (Stereo) | HR,HE,HC, V : |
| | Less than 35dB[at 98.0MHz] |
| | EZ,K,G,HS : |
| | Less than 38dB[at 98.0MHz] |
| Signal to noise ratio : | More than 68dB (mono)[at 98.0MHz] |
| | HR,HE,HC, V : |
| | More than 66dB (stereo)[at 98.0MHz] |
| | EZ,K,G,HS : |
| | More than 66dB (stereo)[at 98.0MHz] |
| Distortion : | Less than 1.2% (mono)[at 83.0MHz/98.0MHz] |
| | Less than 2.0% (stereo)[at 98.0MHz] |
| Stereo separation : | HR,HE,HC,EZ,K,G,HS : |
| | More than 12dB[at 98.0MHz] |
| | V : |
| | More than 22dB[at 98.0MHz] |

<AM/MW SECTION>

| | |
|-------------------------|---|
| Sensitivity : | Less than 60dB μ V [at 600/603kHz] |
| (S/N 20 dB) | Less than 58dB μ V |
| | [at 999/1000/1400/1404kHz] |
| Signal to noise ratio : | More than 36dB(mono)[at 999/1000kHz] |
| Distortion : | Less than 1.5% (mono)[at 999/1000kHz] |

<SW SECTION> (HR,HE,HC)

| | |
|---------------|--------------------------------------|
| Sensitivity : | Less than 51dB μ V [at 5.9MHz] |
| | Less than 45dB μ V [at 12.0 MHz] |
| | Less than 44dB μ V [at 17.9MHz] |
| Distortion : | Less than 10% [at 12.0MHz] |


<LW SECTION> (EZ,K,G)


| | |
|---------------|----------------------------|
| Sensitivity : | Less than 70dB [at 144kHz] |
| | Less than 68dB [at 198kHz] |
| | Less than 66dB [at 290kHz] |

<DECK SECTION>

| | |
|------------------------|---------------------------------|
| Tape speed : | 3000Hz \pm 45Hz |
| Wow & flutter : | Less than 0.35% (R.M.S) |
| Take-up torque : | 30 ~ 60g/cm (FWD) |
| Back tension : | 2 ~ 5g/cm |
| PB Output level : | 2.8V \pm 3dB |
| Distortion (REC/PB) : | Less than 2.0% (NORM) |
| Noise level (PB) : | Less than 40mV (NORM) |
| Noise level (REC/PB) : | Less than 40mV(NORM) |
| Erasing ratio: | More than 60dB (at 125Hz,+10VU) |

TAPE MECHANISM EXPLODED VIEW 1/1

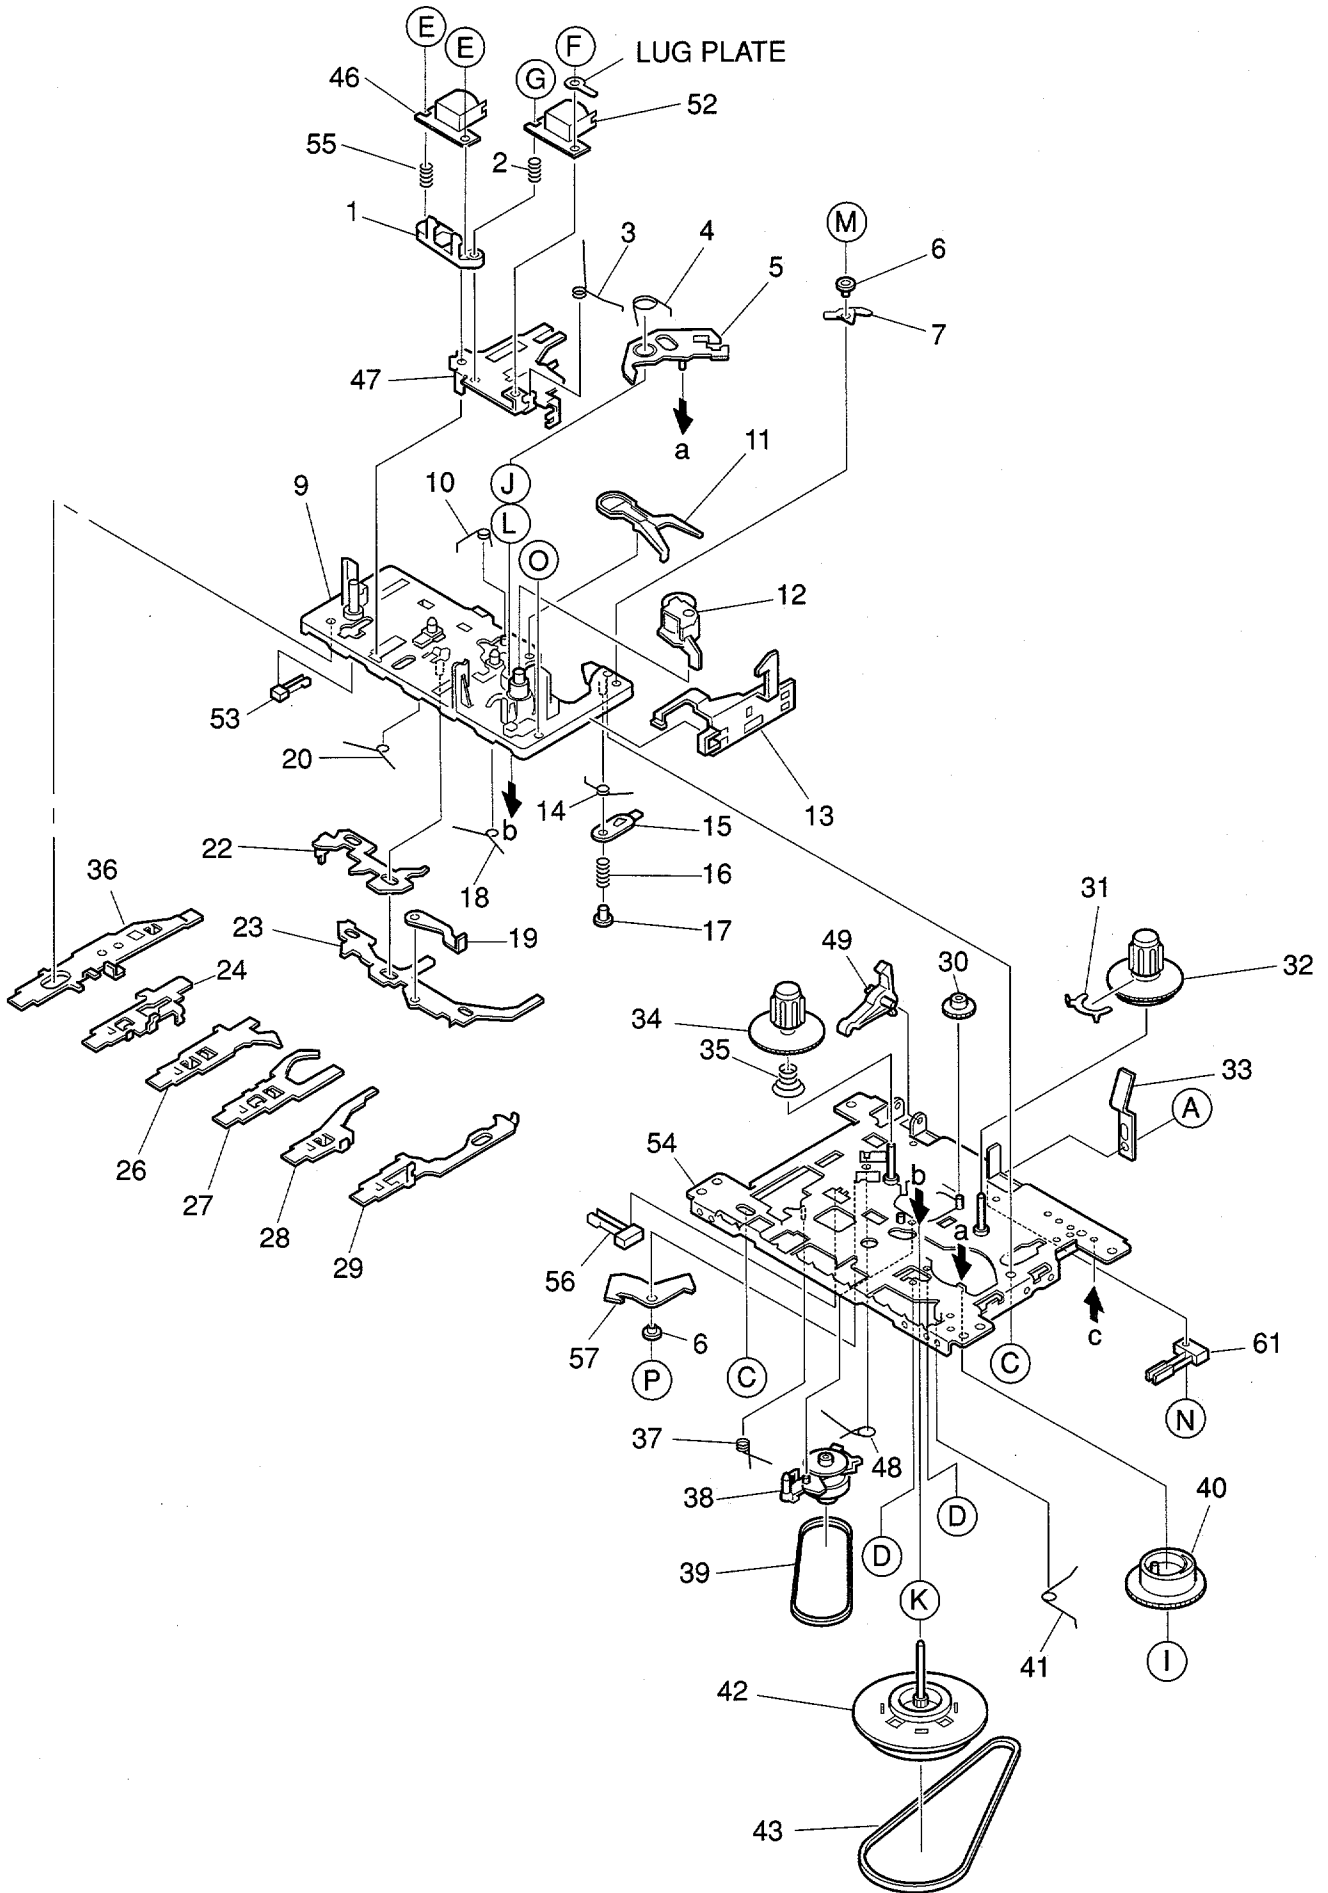


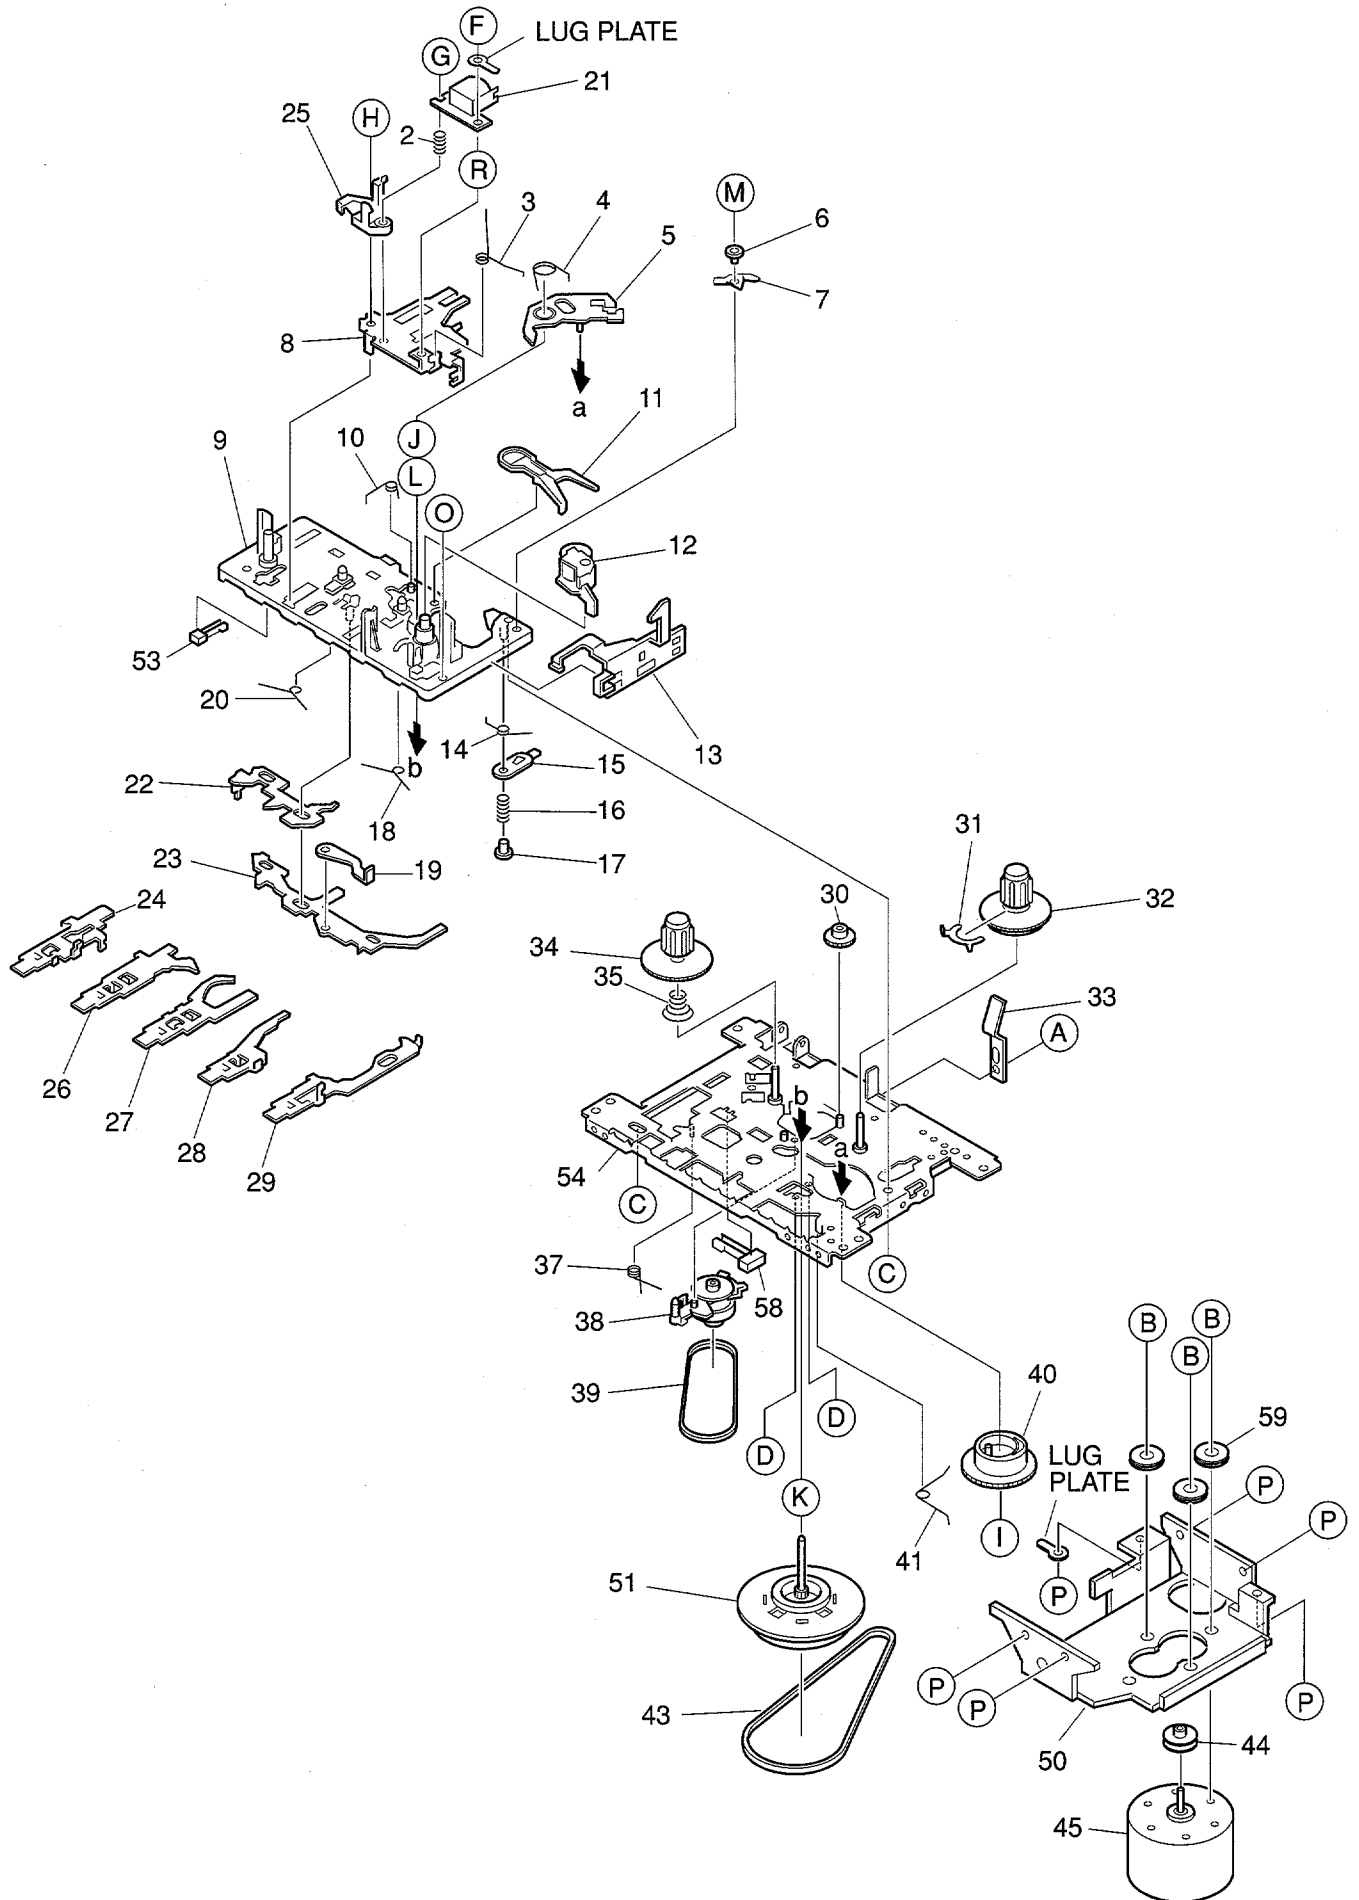

TAPE MECHANISM PARTS LIST 1/1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|------------------------|----------|----------------|-----------|--------------------------------|
| 1 | S1-921-030-060 | | HEAD BASE | 41 | S1-921-140-160 | | E ACTUATOR SPRING |
| 2 | S1-821-030-070 | | AZIMUTH SPRING | 42 | S1-921-093-210 | | FLYWHEEL ASSY |
| 3 | S1-921-030-090 | | PANEL P SPRING | 43 | S1-921-090-400 | | MAIN BELT |
| 4 | S1-921-260-050 | | GEAR PLATE SPRING | 44 | S1-921-120-130 | | MOTOR PULLEY |
| 5 | S1-921-265-020 | | GEAR PLATE ASSY | 45 | S6-002-030-290 | | MOTOR EG530YD-2BH |
| 6 | S1-921-140-370 | | P ARM COLLER | 46 | S6-207-140-030 | | E HEAD TC-2131 |
| 7 | S1-921-140-340 | | P ARM | 47 | S1-921-030-120 | | HEAD PANEL |
| 8 | S1-921-030-110 | | HEAD PANEL | 48 | S1-921-140-210 | | REC BUTTON LEVER SPRING |
| 9 | S1-921-143-160 | | BASE ASSY | 49 | S1-821-100-690 | | RECORD SAFETY LEVER |
| 10 | S1-921-141-8A0 | | M CONTROL SPRING | 50 | S1-921-120-110 | | MOTOR BRACKET |
| 11 | S1-921-260-4A0 | | SENSING LEVER | 51 | S1-921-093-240 | | FLYWHEEL ASSY |
| 12 | S1-921-043-100 | | PINCH ROLLER ARM ASSY | 52 | S6-201-011-110 | | HEAD,RP7442ES-0951 |
| 13 | S1-921-130-020 | | EJECT SLIDE LEVER | 53 | S6-401-011-490 | | LEAF SW MSW-1541T |
| 14 | S1-921-141-3A0 | | P CONTROL SPRING | 54 | S1-921-015-010 | | CHASSIS ASSY |
| 15 | S1-921-140-550 | | PAUSE LEVER (E) | 55 | S1-821-030-080 | | EH SPRING |
| 16 | S1-921-140-120 | | PAUSE LEVER SPRING | 56 | S6-401-011-610 | | LEAF SW MSW-17820MVEI |
| 17 | S1-921-140-110 | | PAUSE STOPPER | 57 | S1-921-020-010 | | REC ARM |
| 18 | S1-921-140-150 | | BUTTON LEVER SPRING(B) | 58 | S6-401-010-380 | | LEAF SWITCH MSW-1275 |
| 19 | S1-821-011-590 | | E KICK LEVER | 59 | S1-820-130-060 | | MOTOR RUBBER |
| 20 | S1-921-140-140 | | BUTTON LEVER SPRING(A) | A | S9-P04-200-310 | | C TAPPING SCREW 2-3 |
| 21 | S6-201-010-750 | | P HEAD RP-7442ES-0951 | B | S1-821-120-020 | | MOTOR COLLER SCREW |
| 22 | S1-921-140-090 | | SWITCH ACTUATOR | C | S9-B10-200-510 | | P TAPPING BIND SCREW M2-5 |
| 23 | S1-921-140-380 | | PUSH BUTTON ACTUATOR | D | S9-C07-204-510 | | SCREW, TAPPING (CAMERA) M2-4.5 |
| 24 | S1-921-140-230 | | PLAY BUTTON LEVER | E | 87-251-095-410 | | +-CAP SCREW M2-8 |
| 25 | S1-921-030-4A0 | | HEAD BASE | F | S9-B01-200-310 | | (+) BIND SCREW M2-3 |
| 26 | S1-921-140-240 | | REW BUTTON LEVER | G | S9-F08-200-710 | | AZIMUTH SCREW M2-7 |
| 27 | S1-921-140-250 | | FF BUTTON LEVER | H | S9-P01-200-610 | | SCREW, M2-6 |
| 28 | S1-921-140-260 | | STOP BUTTON LEVER | I | S9-W02-300-100 | | P WASHER CUT 1.2-3.8-0.3 |
| 29 | S1-921-140-610 | | PAUSE BUTTON LEVER | J | S9-W02-500-100 | | P WASHER CUT 1.45-3.8-0.5 |
| 30 | S1-821-100-700 | | FF GEAR | K | S9-W01-400-100 | | P WASHER 2-3.5-0.4 |
| 31 | S1-921-050-060 | | SENSOR | L | S9-W01-130-200 | | P WASHER 2.1-4-0.13 |
| 32 | S1-921-053-100 | | TAKE UP REEL ASSY | M | S9-P08-203-010 | | PS TAPPING SCREW M2-3 |
| 33 | S1-829-100-010 | | PACK SPRING | N | S9-P04-200-510 | | C TAPPING SCREW M2-5 |
| 34 | S1-921-050-150 | | S REEL HUB | O | S9-P05-200-610 | | SCREW, TAP S M 2-6 |
| 35 | S1-921-050-220 | | BACK TENSION SPRING | P | S9-P04-200-410 | | C TAPPING SCREW M2-4 |
| 36 | S1-921-140-220 | | REC BUTTON LEVER | | | | |
| 37 | S1-921-140-170 | | P.S.LEVER SPRING | | | | |
| 38 | S1-921-073-080 | | RF CLUTCH ASSY | | | | |
| 39 | S1-921-070-030 | | RF BELT | | | | |
| 40 | S1-921-260-020 | | CAM GEAR | | | | |

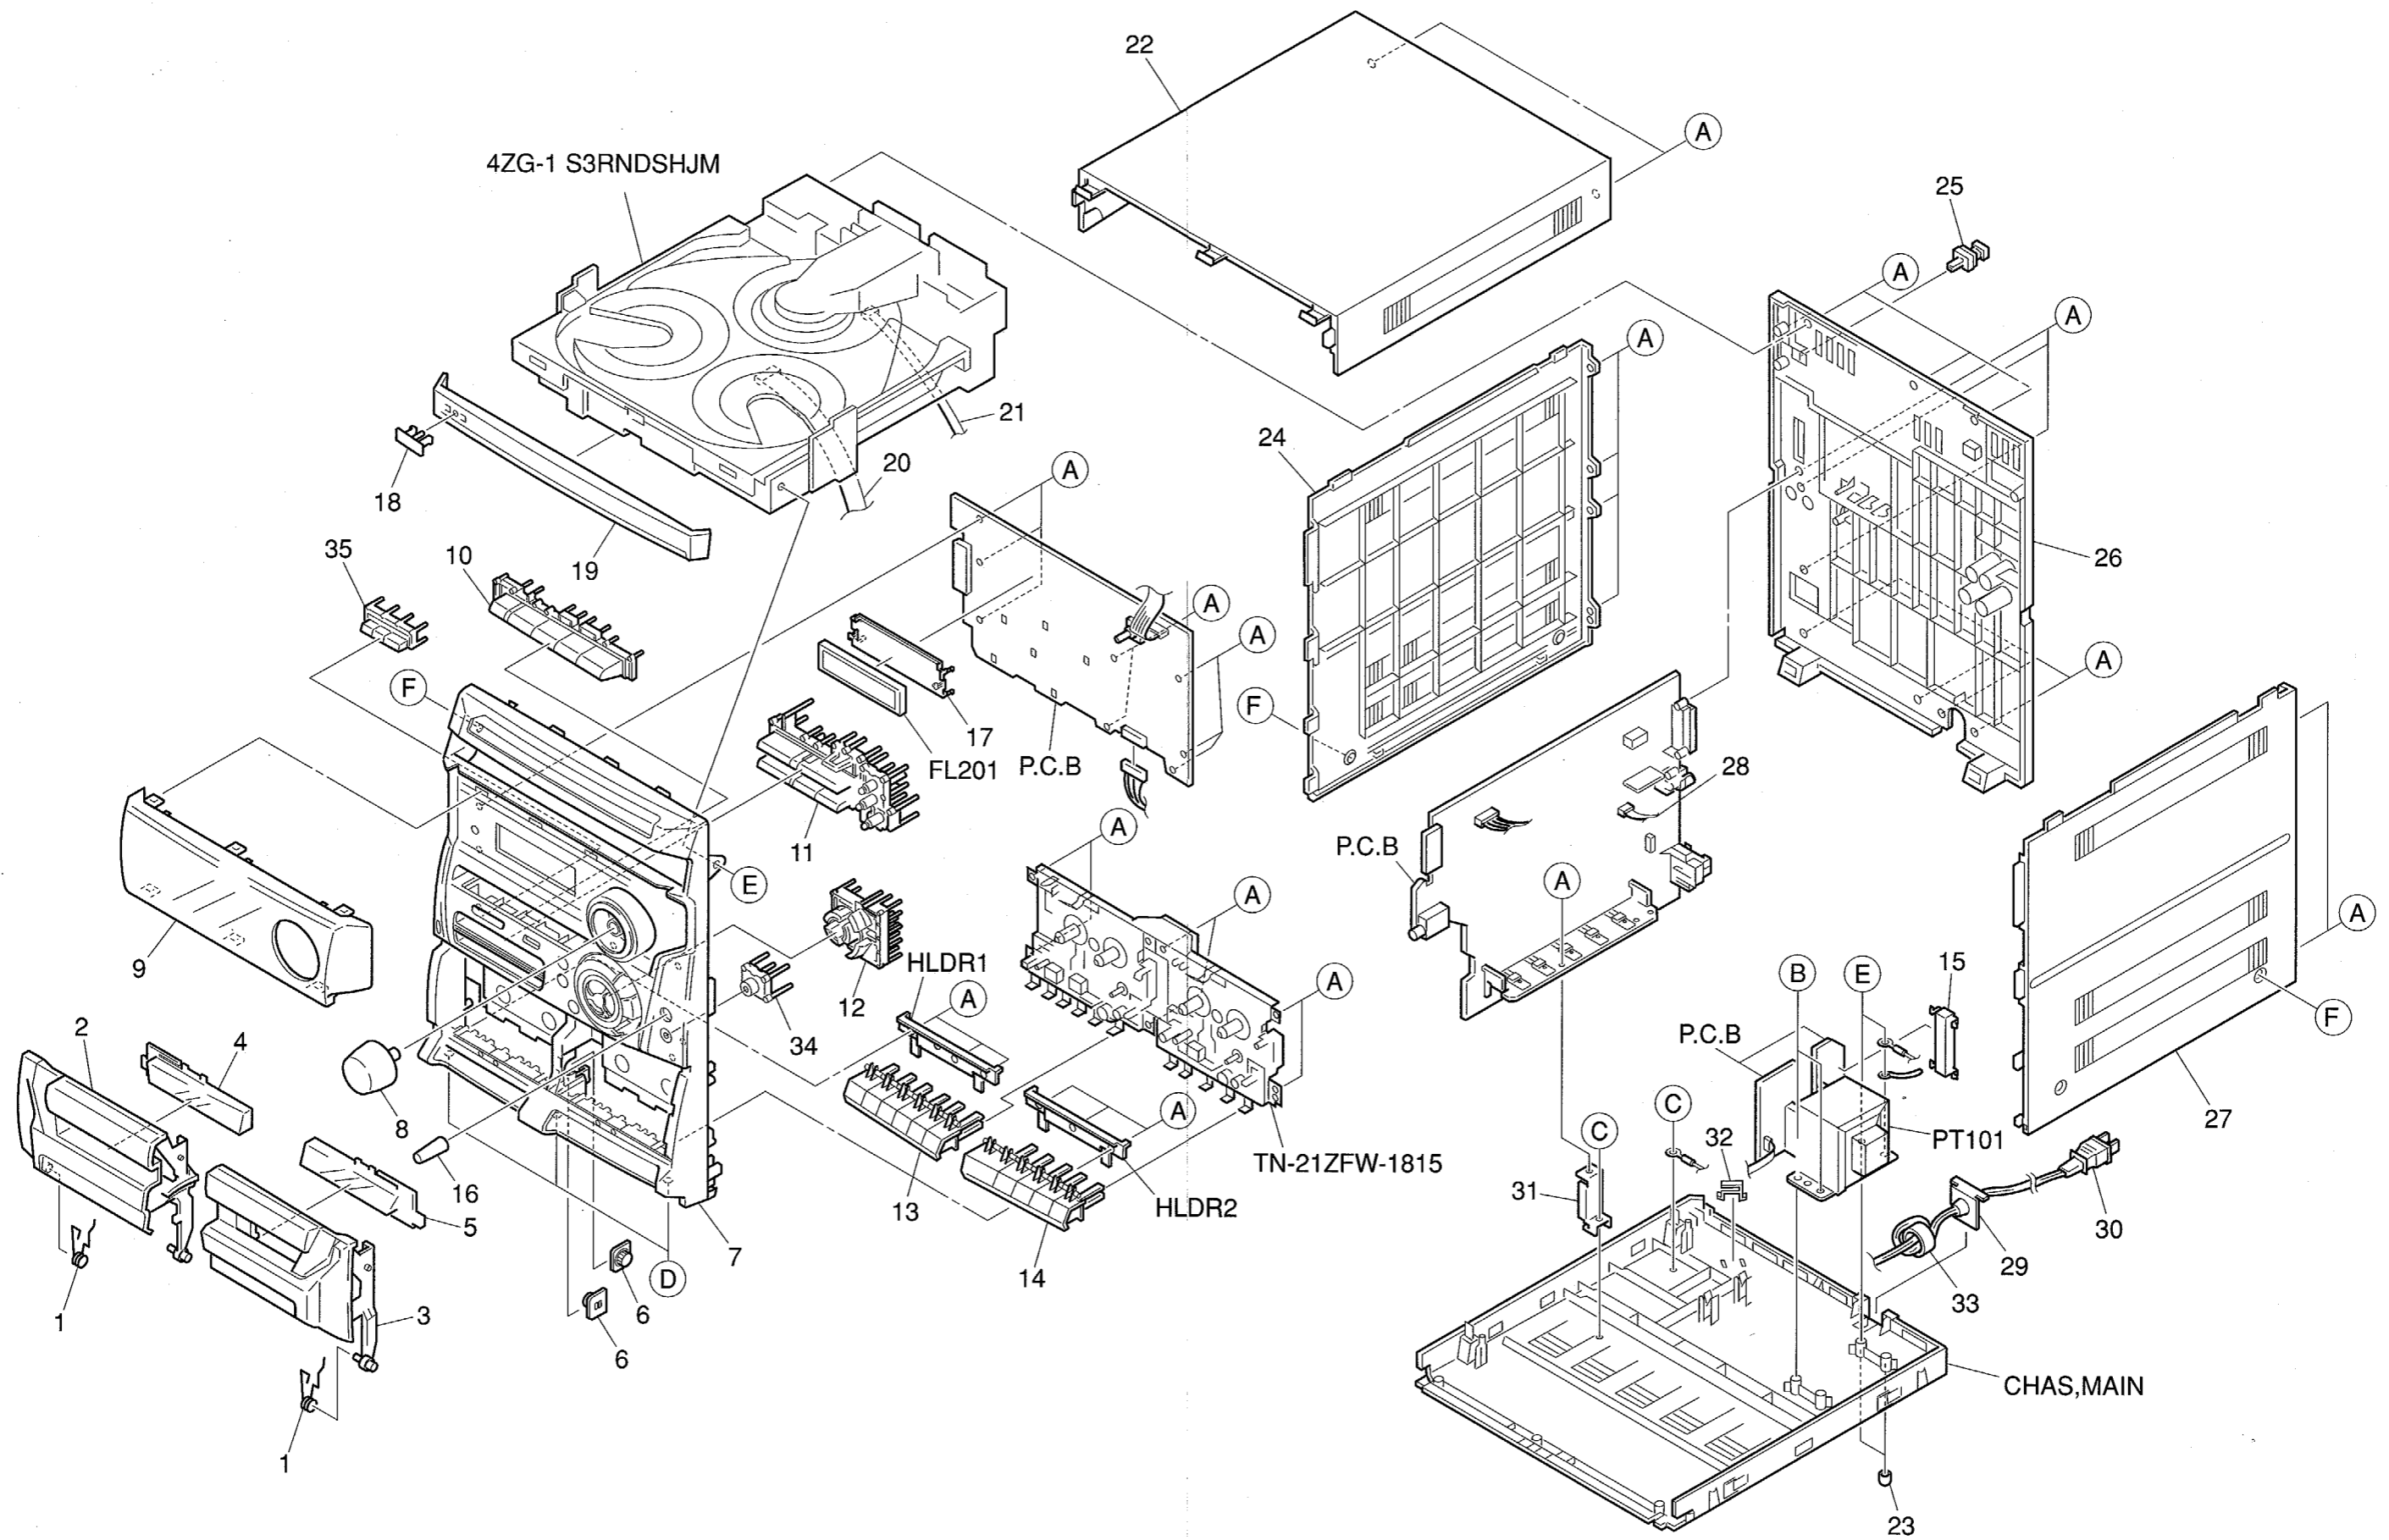

MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-------------------------------------|----------|----------------|-----------|---------------------------------------|
| 1 | 8Z-NF7-218-010 | | SPR-T, CASS | 22 | 8Z-NFA-005-010 | | PANEL, TOP<exp HC, 116EZ> |
| 2 | 8Z-NFA-003-010 | | BOX, CASS 1<exp 116HC, 116EZ> | 22 | 8Z-NFA-033-110 | | PANEL, TOP BLK<exp HC, 116EZ> |
| 2 | 8Z-NFA-031-010 | | BOX, CASS 1 BLK<116HC, 116EZ> | 23 | 8Z-NB8-240-010 | | COVER, PL |
| 3 | 8Z-NFA-004-010 | | BOX, CASS 2<except 116HC, 116EZ> | 24 | 8Z-NFA-020-110 | | PANEL, RIGHT SV-2<exp HC, 116EZ> |
| 3 | 8Z-NFA-032-010 | | BOX, CASS 2P BLK<116HC, 116EZ> | 24 | 8Z-NFA-036-010 | | PANEL, RIGHT SV-2 B<HC, 116EZ> |
| 4 | 8Z-NFA-008-010 | | WINDOW, CASS 1 | 25 | 84-ZG1-245-210 | | CAP, OPTICAL |
| 5 | 8Z-NFA-009-010 | | WINDOW, CASS 2 | 26 | 8Z-NFA-080-210 | | CABI, REAR HEJSTM<HE> |
| 6 | 86-NFZ-231-010 | | DMPR, 70 | 26 | 8Z-NFA-062-210 | | CABI, REAR HRJSTM<HR> |
| 7 | 8Z-NFA-002-010 | | CABI, FR H<HE, HR> | 26 | 8Z-NFA-064-210 | | CABI, REAR KSTM<K> |
| 7 | 8Z-NFA-001-010 | | CABI, U<111EZ, 16EZ, K, G, V, HS> | 26 | 8Z-NFA-065-210 | | CABI, REAR EZSTM<111EZ> |
| 7 | 8Z-NFA-021-010 | | CABI, FR EZ<112EZ> | 26 | 8Z-NFA-066-210 | | CABI, REAR VSTM<V> |
| 7 | 8Z-NFA-030-110 | | CABI, FR BLK<116EZ> | 26 | 8Z-NFA-076-210 | | CABI, REAR EZSTM112<112EZ> |
| 7 | 8Z-NFA-103-010 | | CABI, FR H BLK<116HC> | 26 | 8Z-NFA-082-210 | | CABI, REAR EZBM116<116EZ> |
| 8 | 8Z-NFA-017-010 | | KNOB, RTRY VOL | 26 | 8Z-NFA-089-110 | | CABI, REAR EZ W/O SPEC<HS> |
| 9 | 8Z-NFA-023-010 | | WINDOW, DISP H<HE, HR> | 26 | 8Z-NFA-091-010 | | CABI, REAR GSTM<G> |
| 9 | 8Z-NFA-024-010 | | WINDOW, DISP EZ112<112EZ> | 26 | 8Z-NFA-092-010 | | CABI, REAR EZSTM16<16EZ> |
| 9 | 8Z-NFA-029-010 | | WINDOW, DISP EZ<111EZ, K, G, V, HS> | 26 | 8Z-NFA-093-010 | | CABI, REAR HCBC116<116HC> |
| 9 | 8Z-NFA-040-010 | | WINDOW, DISP EZ116<116EZ> | 27 | 8Z-NFA-018-010 | | PANEL, LEFT V-2<exp HC, 116EZ> |
| 9 | 8Z-NFA-102-010 | | WINDOW, DISP EZ16<16EZ> | 27 | 8Z-NFA-035-110 | | PANEL, LEFT V-2 B<HC, 116EZ> |
| 9 | 8Z-NFA-104-010 | | WINDOW, DISP H116<116HC> | 28 | 88-906-251-110 | | FF-CABLE, 6P 1.25 |
| 10 | 8Z-NFA-010-010 | | KEY, FUN<exp 116HC, 116EZ> | 29 | 87-085-185-010 | | BUSHING, AC CORD (E) |
| 10 | 8Z-NFA-041-010 | | KEY, FUN BLK<116HC, 116EZ> | △ 30 | 87-050-079-010 | | AC-CORD ASSY, E BLK<HR, HE, V, K, EZ> |
| 11 | 8Z-NFA-011-010 | | KEY, OPE<exp HC, 116EZ> | △ 30 | 87-050-081-110 | | AC-CORD ASSY, G<G> |
| 11 | 8Z-NFA-042-010 | | KEY, OPE BLK<116HC, 116EZ> | △ 30 | 87-A80-006-010 | | AC-CORD ASSY, HS<HS> |
| 12 | 8Z-NFA-012-010 | | KEY, CD | △ 30 | 87-A80-083-010 | | AC-CORD, HC BLK<HC> |
| 13 | 8Z-NFA-013-010 | | KEY, CASS 1<exp HC, 116EZ> | 31 | 88-NF9-213-010 | | HLDR, PWB MAIN |
| 13 | 8Z-NFA-037-010 | | KEY, CASS 1 BLK<116HC, 116EZ> | 32 | 87-NF4-221-010 | | HLDR, CABLE |
| 14 | 8Z-NFA-014-010 | | KEY, CASS 2P<exp HC, 116EZ> | 33 | 87-003-317-010 | | F-BEAD, 15-25-15<exp HR, HE, HC> |
| 14 | 8Z-NFA-038-010 | | KEY, CASS 2 BLK<HC, 116EZ> | 34 | 8Z-NFA-100-010 | | COVER, MIC<HR, HE> |
| △ 15 | 87-A90-165-010 | | SW, SL 1-2-3 SWS2301<HE, HR, HC> | 34 | 8Z-NFA-105-010 | | COVER, MIC<116HC> |
| 16 | 87-NB8-017-010 | | KNOB, RTRY MIC<HE, HR, HC> | △ 35 | 87-099-881-010 | | PLUG, ADPFR CONV<K> |
| 17 | 8Z-NFA-204-010 | | GUIDE, FL 100-25 | A | 87-067-703-010 | | TAPPING SCREW, BVT2+3-10 |
| 18 | 82-NE6-067-010 | | BADGE, AIWA 30N | B | 87-078-191-010 | | S-SCREW, IT+4-10 |
| 19 | 8Z-NFA-006-010 | | PANEL, TRAY<exp HC, 116EZ> | C | 87-067-584-010 | | TAPPING SCREW, BVT2+3-6 |
| 19 | 8Z-NFA-034-010 | | PANEL, TRAY BLK<HC, 116EZ> | D | 87-067-688-010 | | BVTT+3-6 |
| 20 | 83-NE2-618-110 | | F-CABEL, 5P-2.5 | E | 87-721-097-410 | | QT2+3-12 GLD |
| 21 | 88-913-221-110 | | FF-CABLE, 13P 1.25 220MM | F | 87-067-641-010 | | UTT2+3-8(W/O SLOT)BL |

NOTE : exp = except


COLOR NAME TABLE

| Basic color symbol | Color | Basic color symbol | Color | Basic color symbol | Color |
|--------------------|-------------------|--------------------|--------------------|--------------------|--------------------|
| B | Black | C | Cream | D | Orange |
| G | Green | H | Gray | L | Blue |
| LT | Transparent Blue | N | Gold | P | Pink |
| R | Red | S | Sliver | ST | Titan Silver |
| T | Brown | V | Violet | W | White |
| WT | Transparent White | Y | Yellow | YT | Transparent Yellow |
| LM | Metallic Blue | LL | Light Blue | GT | Transparent Green |
| LD | Dark Blue | DT | Transparent Orange | | |

SPEAKER DISASSEMBLY INSTRUCTIONS


Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

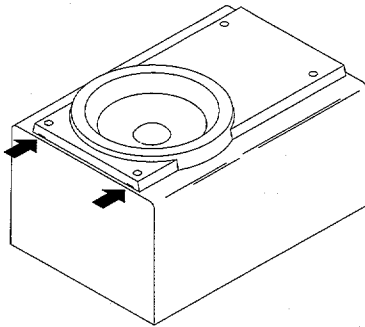


Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

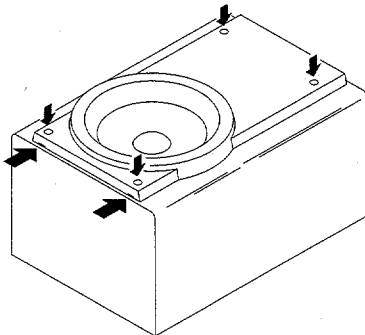


Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

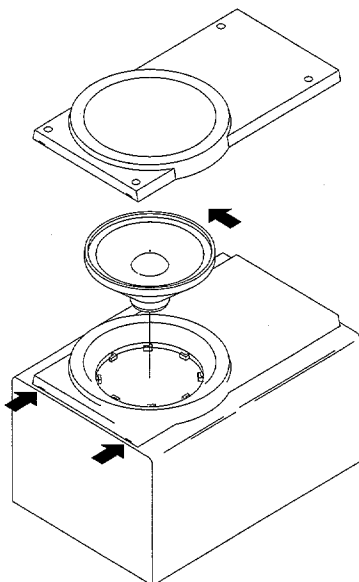

Type.4

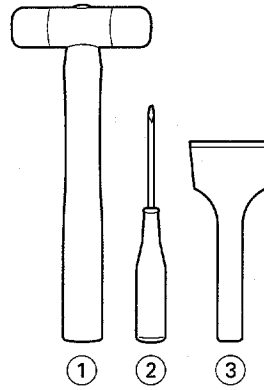

TOOLS

- ① Plastic head hammer
- ② (⊖) flat head screwdriver
- ③ Cut chisel

How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.
2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.
3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

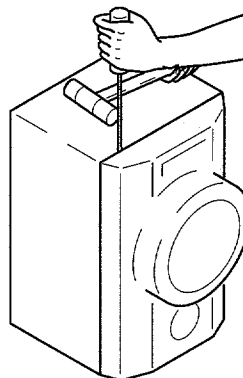


Fig-1

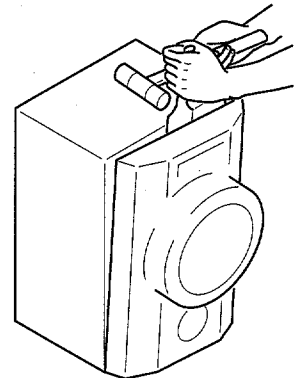


Fig-2

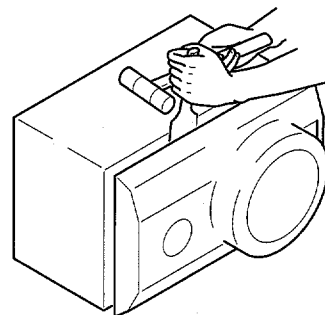


Fig-3

How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

SPEAKER PARTS LIST (SX-NS112/SX-NS116 : YJSTC,YSTC/YBC2NC1,YBC)

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|--------------------|
| 1 | 8Z-NSL-001-010 | | PANEL,FR <NS112> |
| 1 | 8Z-NSL-013-010 | | PANEL,FR B <NS116> |
| 2 | 8Z-NSL-003-010 | | GRILLE,FRAME ASSY |
| 3 | 87-NS7-611-010 | | CORD,SPKR |
| 4 | 87-NSH-612-010 | | SPKR,CERAMIC ASSY |
| 5 | 8Z-NSL-601-010 | | SPKR,W 120 |
| 6 | 8Z-NSL-025-010 | | PROTECTOR,SHEET |

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-------------------------------------|
| 1 | 8Z-NFA-901-010 | | IB,H(ECA)M<HR,HE> |
| 1 | 8Z-NFA-905-010 | | IB,K(E)M<K> |
| 1 | 8Z-NFA-906-110 | | IB,EZ(9L)M<111EZ,116EZ,16EZ,HS> |
| 1 | 8Z-NFA-907-010 | | IB,V(ER)M<V> |
| 1 | 8Z-NFA-915-010 | | IB,G(E)M<G> |
| 1 | 8Z-NFA-916-010 | | IB,EZ(9L)M -112<112EZ> |
| 1 | 8Z-NFA-935-010 | | IB,H(EC-K)S<HC> |
| 2 | 87-043-106-010 | | ANT,FM 1007AWG<EZ,G,K,HS> |
| 2 | 87-043-115-010 | | ANT,FEEDER FM<HR,HE,HC,V> |
| 3 | 87-A90-030-010 | | ANT,LOOP AM-NC C<EZ,K,G,HS,V> |
| 3 | 87-A90-054-010 | | ANT,LOOP AM-CON C<HR,HE,HC> |
| 4 | 87-A90-119-010 | | ANT,WIRE SW(5M)<HR,HE,HC> |
| 5 | 87-A91-017-010 | | PLUG,CONVERSION JT-0476<HR,HE> |
| 5 | 87-A91-015-010 | | PLUG,CONVERSION JT-0475A<HC> |
| 6 | 8Z-NF9-701-210 | | RC UNIT,ZAS02<EXCEPT HC,116EZ,16EZ> |
| 6 | 8Z-NF9-702-010 | | RC UNIT,ZAS02<HC> |
| 6 | 8Z-NF9-703-110 | | RC UNIT,ZAS17<116EZ,16EZ> |

REFERENCE NAME LIST

ELECTRICAL SECTION

| DESCRIPTION | REFERENCE NAME |
|-------------|--------------------|
| ANT | ANTENNAS |
| C- | CHIP |
| C-CAP | CAP, CHIP |
| C-CAP TN | CAP, CHIP TANTALUM |
| C-COIL | COIL, CHIP |
| C-DI | DIODE, CHIP |
| C-DIODE | DIODE, CHIP |
| C-FET | FET, CHIP |
| C-FOTR | FILTER, CHIP |
| C-JACK | JACK, CHIP |
| C-LED | LED, CHIP |
| C-RES | RES, CHIP |
| C-SFR | SFR, CHIP |
| C-SLIDE SW | SLIDE SWITCH, CHIP |
| C-SW | SWITCH, CHIP |
| C-TR | TRANSISTOR, CHIP |
| C-VR | VOLUME, CHIP |
| C-ZENER | ZENER, CHIP |
| CAP, CER | CAP, CERA-SOL |
| CAP, E | CAP, ELECT |
| CAP, M/F | CAP, FILM |
| CAP, TC | CAP, CERA-SOL |
| CAP, TC-U | CAP, CERA-SOL SS |
| CAP, TN | CAP, TANTALUM |
| CERA FIL | FILTER, CERAMIC |
| CF | FILTER, CERAMIC |
| DL | DELAY LINE |
| E/CAP | CAP, ELECT |
| FILT | FILTER |
| FLTR | FILTER |
| FUSE RES | RES, FUSE |
| MOT | MOTOR |
| P-DIODE | PHOTO DIODE |
| P-SNSR | PHOTO SENSER |
| P-TR | PHOTO TRANSISTOR |
| POLY VARI | VARIABLE CAPACITOR |
| PPCAP | CAP, PP |
| PT | POWER TRANSFORMER |
| PTR, RES | PTR, MELF |
| RC | REMOTE CONTROLLER |
| RES NF | RES, NON-FLAMMABLE |
| RESO | RESONATOR |
| SHLD | SHIELD |
| SOL | SOLENOID |
| SPKR | SPEAKER |
| SW, LVR | SWITCH, LEVER |
| SW, RTRY | SWITCH, ROTARY |
| SW, SL | SWITCH, SLIDE |
| TC CAP | CAP, CERA-SOL |
| THMS | THERMISTOR |
| TR | TRANSISTOR |
| TRIMER | CAP, TRIMMER |
| TUN-CAP | VARIABLE CAPACITOR |
| VIB, CER | RESONATOR, CERAMIC |
| VIB, XTAL | RESONATOR, CRYSTAL |
| VR | VOLUME |
| ZENER | DIODE, ZENER |

MECHANICAL SECTION

| DESCRIPTION | REFERENCE NAME |
|----------------|---------------------|
| ADHESHIVE | SHEET ADHESHIVE |
| AZ | AZIMUTH |
| BAR-ANT | BAR-ANTENNA |
| BAT | BATTERY |
| BATT | BATTERY |
| BRG | BEARING |
| BTN | BUTTON |
| CAB | CABINET |
| CASS | CASSETTE |
| CHAS | CHASSIS |
| CLR | COLLAR |
| CONT | CONTROL |
| CRSR | CURSOR |
| CU | CUSHION |
| CUSH | CUSHION |
| DIR | DIRECTION |
| DUBB | DUBBING |
| FL | FRONT LOADING |
| FLY-WHL | FLYWHEEL |
| FR | FRONT |
| FUN | FUNCTION |
| G-CU | G-CUSHION |
| HDL | HANDOL |
| HIMERON | CLOTH |
| HINGE, BAT | HINGE, BATTERY |
| HLDR | HOLDER |
| HT-SINK | HEAT SINK |
| IB | INSTRUCTION BOOKLET |
| IDLE | IDLER |
| IND, L-R | INDICATOR, L-R |
| KEY, CONT | KEY, CONTROL |
| KEY, PRGM | KEY, PROGRAM |
| KNOB, SL | KNOB, SLIDE |
| LBL | LABEL |
| LID, BATT | LID, BATTERY |
| LID, CASS | LID, CASSETTE |
| LVR | LEVER |
| P-SP | P-SPRING |
| PANEL, CONT | PANEL, CONTROL |
| PANEL, FR | PANEL, FRONT |
| PRGM | PROGRAM |
| PULLY, LOAD MO | PULLY, LOAD MOTOR |
| RBN | RIBBON |
| S- | SPECIAL |
| SEG | SEGMENT |
| SH | SHEET |
| SHLD-SH | SHIELD-SHEET |
| SL | SLIDE |
| SP | SPRING |
| SP-SCREW | SPECIAL-SCREW |
| SPACER, BAT | SPACER, BATTERY |
| SPR | SPRING |
| SPR-P | P-SPRING |
| SPR-PC-PUSH | P-SPRING, C-PUSH |
| T-SP | T-SPRING |
| TERM | TERMINAL |
| TRIG | TRIGGER |
| TUN | TUNING |
| VOL | VOLUME |
| W | WASHER |
| WHL | WHEEL |
| WORM-WHL | WORM-WHEEL |

| サービス技術ニュース | |
|------------|------|
| 番号 | 連絡内容 |
| G- | - |
| G- | - |
| G- | - |

アイワ株式会社
AIWA CO., LTD.

9301896, 931261

Tokyo Japan