


aiwa



NSX-S505 NSX-S506

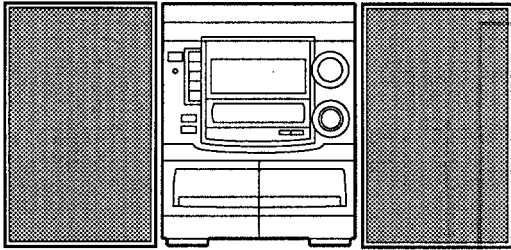

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 2ZM-3MK2 (PR4NM, YPR4N), 6ZM-3 YPR2N • TYPE : HR, HE, EZ, K (505), EZ (506)
- BASIC CD MECHANISM : 4ZG-1 (Z3DSHNM, Z4SHMD, Z4DSHNC)

REVISION PUBLISHING

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-S505	CX-NS505 (TYPE : HR, HE, EZ, K)	SX-FNS505	RC - 7AS06
NSX-S506	CX-NS506 (TYPE : EZ)	SX-ANS706	

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual", S/M Code No. 09-985-272-0FE.
- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-30T.

MANUAL
SERVICE

TABLE OF CONTENTS

SPECIFICATIONS	3
NOTICE BEFORE STARTING REPAIR	4, 5
PROTECTION OF EYES FROM LASER BEAM DURING SERVICING	6
PRECAUTION TO REPLACE OPTICAL BLOCK	6
ELECTRICAL MAIN PARTS LIST	7 ~ 11
TRANSISTOR ILLUSTRATION	12
FL GRID ASSIGNMENT & ANODE CONNECTION	13, 14
BLOCK DIAGRAM - 1 (HE,HR : MAIN / FRONT)	15, 16
BLOCK DIAGRAM - 2 (EZ,K : MAIN / FRONT)	17, 18
WIRING - 1 (HE,HR : MAIN)	19, 20
SCHEMATIC DIAGRAM - 1 (HE,HR : MAIN 1/2)	21 ~ 23
SCHEMATIC DIAGRAM - 2 (EZ : MAIN 1/2)	24 ~ 26
WIRING - 2 (EZ : MAIN)	27, 28
WIRING - 3 (K : MAIN)	29, 30
SCHEMATIC DIAGRAM - 3 (K : MAIN 1/2)	31 ~ 33
WIRING - 4 (FRONT)	34 ~ 36
SCHEMATIC DIAGRAM - 4 (FRONT)	37 ~ 39
IC BLOCK DIAGRAM - 1	40 ~ 42
WIRING - 5 (AC1 / AC2)	40
WIRING - 6 (DECK : 6ZM-3 YPR2N)	41
WIRING - 7 (DECK : 2ZM-3MK2 PR4NM / YPR4N)	42
SCHEMATIC DIAGRAM - 5 (HE,HR : MAIN 2/2)	43, 44
SCHEMATIC DIAGRAM - 6 (EZ,K : MAIN 2/2)	45, 46
SCHEMATIC DIAGRAM - 7 (HE,HR : TUNER FRONT END)	47
IC BLOCK DIAGRAM - 2	48 ~ 51
IC DESCRIPTION	52, 53
ADJUSTMENT <TUNER / DECK>	54 ~ 56
PRACTICAL SERVICE FIGURE	56
MECHANICAL EXPLODED VIEW 1 / 1	57, 58
MECHANICAL PARTS LIST 1 / 1	59
TAPE MECHANISM EXPLODED VIEW 1 / 1 <6ZM-3 YPR2N>	60, 61
TAPE MECHANISM PARTS LIST 1 / 1 <6ZM-3 YPR2N>	62
SPRING APPLICATION POSITION <6ZM-3 YPR2N>	63
TAPE MECHANISM EXPLODED VIEW 1 / 1 <2ZM-3MK2 PR4NM / YPR4N>	64, 65
TAPE MECHANISM PARTS LIST 1 / 1 <2ZM-3MK2 PR4NM / YPR4N>	66
SPRING APPLICATION POSITION <2ZM-3MK2 PR4NM / YPR4N>	67
SPEAKER DISASSEMBLY INSTRUCTIONS	68
SPEAKER PARTS LIST	69
ACCESSORIES / PACKAGE LIST	69
REFERENCE NAME LIST	70

SPECIFICATIONS

<FM Tuner section>

Tuning range 87.5 MHz to 108 MHz
Usable sensitivity(IHF) HR,HE : 13.2 dBf
 EZ,K : 16.8 dBf
Antenna terminals 75 ohms (unbalanced)

<MW Tuner section>

Tuning range 531 kHz to 1602 kHz (9 kHz step)
 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity 350 uV/m
Antenna Loop antenna

<SW Tuner section> (HE, HR)

Tuning range 5.900 MHz to 17.900 MHz
Antenna Wire antenna

<LW Tuner section> (EZ, K)

Tuning range 144 kHz to 290 kHz
Usable sensitivity 1400 uV/m
Antenna Loop antenna

<Amplifier section>

Power output HE,HR : Rated 85 W + 85 W
 (6 ohms, THD 1%, 1 kHz)
 Reference 100 W + 100 W
 (6 ohms, THD 10%, 1 kHz)
 EZ : Rated 60 W + 60 W
 (6 ohms, THD 1%, 1 kHz/DIN 45500)
 Reference 75 W + 75 W
 (6 ohms, THD 10%, 1 kHz/DIN 45324)
 DIN MUSIC POWER : 180 W + 180 W
 K : Rated 50 W + 50 W
 (6 ohms, THD 1%, 1 kHz/DIN 45500)
 Reference 62 W + 62 W
 (6 ohms, THD 10%, 1 kHz/DIN 45324)

Total harmonic distortion

HE,HR : 0.05% (70 W, 1 kHz,
 6 ohms, DIN AUDIO)
 EZ : 0.07% (50 W, 1 kHz,
 6 ohms, DIN AUDIO)
 K : 0.07% (40 W, 1 kHz,
 6 ohms, DIN AUDIO)

Inputs

HE,HR :
 VIDEO/AUX : 210 mV(adjustable)
 MD : 210mV (adjustable)
 MIC1, MIC2 : 1.4mV (10 kohms)
 EZ,K :
 VIDEO/AUX : 150 mV(adjustable)
 MD : 150mV (adjustable)
 MIC1, MIC2 :
 EZ : 1.0 mV (10 kohms)
 K : 1.8 mV (10 kohms)

Outputs

LINE OUT: 200mV
 SUPER WOOFERS :
 2.25 V (HE,HR), 1.9 V (EZ), 1.75 V (K)
 SPEAKERS: accept speakers of
 6 ohms or more
 SURROUND SPEAKERS:
 accept speakers of 8 ohms to 16 ohms
 PHONES (stereo jack) : accepts
 headphones of 32 ohms or more

<Cassette deck section>

Track format 4 tracks, 2 channels stereo
Frequency response K : 50 Hz - 15000 Hz
 CrO₂ tape : 50 Hz - 16000 Hz
 Normal tape : 50 Hz - 15000 Hz
 AC bias

Recording system

Heads Deck 1 : playback head x 1
 Deck 2 : Recording/Playback head
 x 1/ erase head x 1

<Compact disc player section>

Laser Semiconductor laser (λ = 780 nm)
D-A converter 1 bit dual
Signal-to-noise ratio 85 dB (1 kHz, 0 dB)
Harmonic distortion 0.05 % (1 kHz, 0 dB)
Wow and flutter Unmeasurable

<Speaker system SX-FNS505>(HE,HR,EZ,K<505>)

Cabinet type HR,HE,K : 3 way, bass reflex
 (magnetic shielded type)
 EZ : 3 way, bass reflex with
 surround speaker(magnetic
 shielded type)
Speakers Woofer : 160 mm cone type
 Tweeter : 80 mm ceramic type
 Super tweeter :
 20 mm ceramic type
 Surround speaker :
 80 mm cone type
Impedance Front speaker : 6 ohms
 Surround speaker : 8 ohms
Output sound pressure level 87 dB/W/m
Dimensions (W x H x D) 250 x 324 x 275 mm
Weight HR,HE,K : 3.7 kg, EZ : 3.9 kg

<Speaker system SX-ANS706>(EZ<506>)


Cabinet type 4 way, bass reflex with
 surround speaker(magnetic
 shielded type)
Speakers Woofer : 160 mm cone type
 Tweeter : 50 mm cone type
 Super tweeter :
 20 mm ceramic type
 Cardioid speaker :
 80 mm cone type
 Surround speaker :
 80 mm
Impedance Front speaker : 6 ohms
 Surround speaker : 8 ohms
Output sound pressure level 87 dB/W/m
Dimensions (W x H x D) 250 x 330 x 293 mm
Weight 4.6 kg

<General>

Power requirements HR,HE : 120 V/220 - 230 V/240 V
 AC switchable, 50/60 Hz
 EZ,K : 230 VAC, 50 Hz
Power consumption HR,HE : 155 W
 EZ,K : 120 W
Dimensions of main unit 260 x 329.1 x 344.5 mm
Weight of main unit HE,HR : 7.3 kg
 EZ : 6.7 kg
 K : 6.5 kg W

• Design and specifications are subject to change without notice.

• The word "BBE" and the "BBE symbol" are trademarks of BBE Sound, Inc.
 Under license from BBE Sound, Inc.

• Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
 "DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

NOTE ON BEFORE STARTING REPAIR


1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

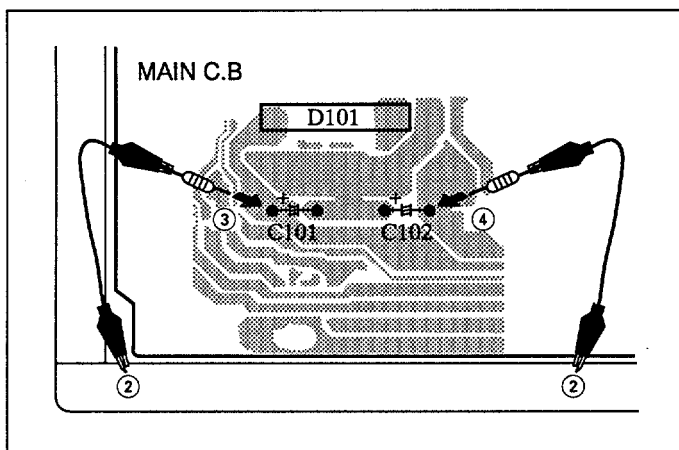

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Fig-1

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

• Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

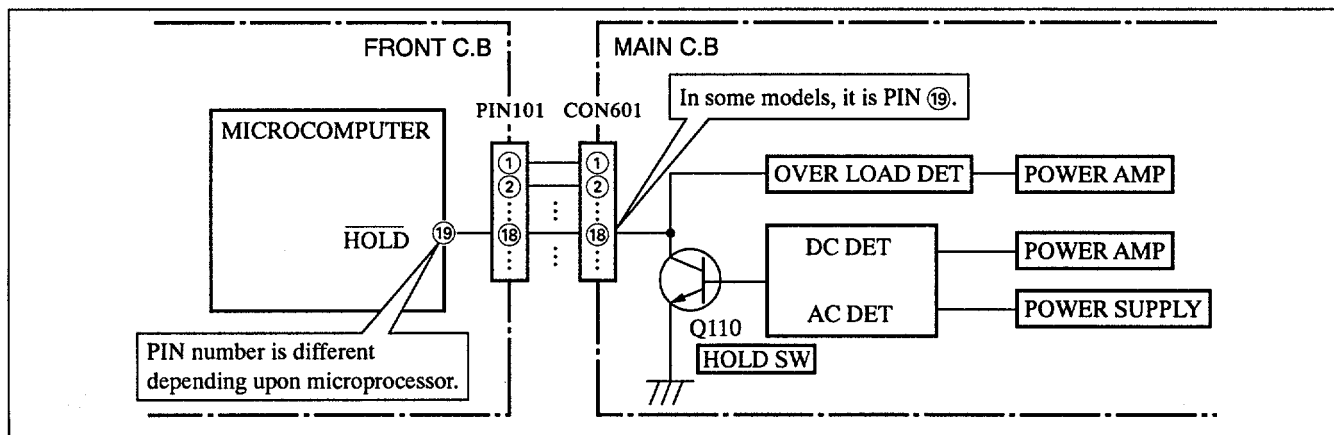


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

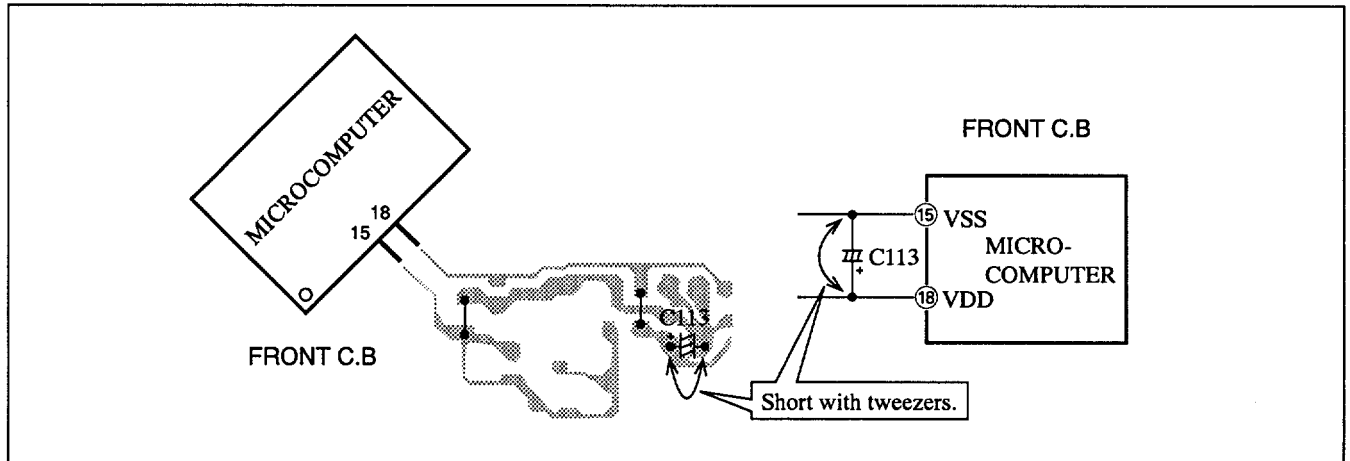


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylitävälle näkymättömälle lasersäteilylle.

WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

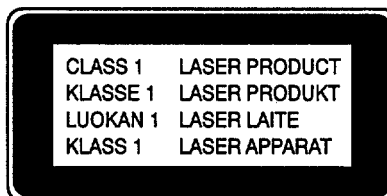


Precaution to replace Optical block

(KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

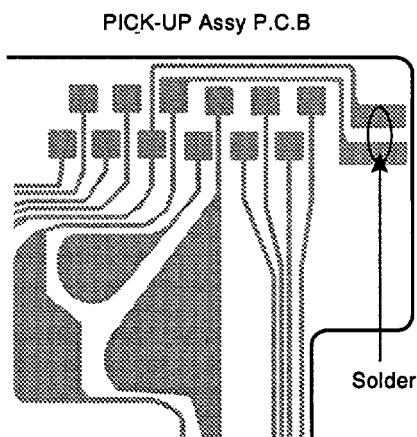

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC							
	88-NF7-750-010	C-IC,LC866560W-5H26			87-017-654-060		DIODE,GBU6JL6131
	87-070-083-010	IC,GP1U281X			87-A40-116-060		RS403L-B-D-51<K>
	87-A20-783-040	C-IC,BA7762AFS<HR,HE,EZ>			87-A40-504-040		C-DIODE,KDS184
	87-A20-083-010	IC,BA3835S		MAIN C.B			
	87-A20-804-040	C-IC,NJM2152M					
	87-017-915-080	IC,BU4094BCF		C103	87-016-658-090		CAP,E 4700-35 SMG<HR,HE,EZ>
	87-A20-613-040	C-IC,BU9262AFS		C104	87-016-658-090		CAP,E 4700-35 SMG<HR,HE,EZ>
	87-A20-954-040	C-IC,M62445FP-601		C105	87-012-368-080		C-CAP,S 0.1-50 F
	87-017-888-080	IC,NJM4558MD		C106	87-012-368-080		C-CAP,S 0.1-50 F
	86-NFZ-655-010	IC,LC72131D(Z)		C107	87-012-368-080		C-CAP,S 0.1-50 F
	87-A20-438-010	IC,LA1837<HR,HE>		C108	87-012-368-080		C-CAP,S 0.1-50 F
	87-020-454-010	IC,DN6851		C109	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-070-121-010	IC,HA12185NT<K>		C110	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-913-010	IC,LA1837NL<EZ,K>		C111	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-440-010	C-IC,BU1920FS<EZ>		C112	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A20-355-010	IC,CXA1533P<EZ>		C113	87-010-247-080		CAP, ELECT 100-50V
				C116	87-010-247-080		CAP, ELECT 100-50V
				C117	87-010-430-080		CAP, ELECT 100-63
				C118	87-010-263-080		CAP, ELECT 100-10V
				C119	87-010-260-080		CAP, ELECT 47-25V
TRANSISTOR							
	87-A30-087-080	C-FET,2SK2158		C120	87-010-403-080		CAP, ELECT 3.3-50V
	89-213-702-010	TR,2SB1370 (1.8W)		C121	87-012-140-080		CAP 470P
	87-026-263-080	C-TR,RN1410		C123	87-010-247-080		CAP, ELECT 100-50V
	87-A30-071-080	C-TR,RT1N 144C		C124	87-010-112-080		CAP, ELECT 100-16V
	87-026-610-080	TR,KTC3198GR		C125	87-010-235-080		CAP,E 470-16 SME
	87-A30-076-080	C-TR,2SC3052F		C130	87-010-194-080		CAP,CHIP 0.047<EZ,K>
	87-A30-196-080	TR,2SC4115SRS		C131	87-010-194-080		CAP,CHIP 0.047<EZ,K>
	87-A30-075-080	C-TR,2SA1235F		C151	87-016-520-090		CAP,E 3300-65<HR,HE,EZ>
	87-026-609-080	TR,KTA1266GR		C151	87-010-917-090		CAP,E 3300-50 M SMG<K>
	87-A30-107-070	C-TR,CMBT5401		C152	87-016-520-090		CAP,E 3300-65<HR,HE,EZ>
	87-A30-190-080	TR,CC5551		C152	87-010-917-090		CAP,E 3300-50 M SMG<K>
	87-A30-097-010	TR,FN 1016<HR,HE,EZ>		C153	87-010-928-090		CAP,E 4700-25 SMG<K>
	87-A30-098-010	TR,FP 1016<HR,HE,EZ>		C154	87-010-928-090		CAP,E 4700-25 SMG<K>
	87-A30-106-070	C-TR,CMBT5551		C204	87-016-299-080		CAP, E 10-100<HR,HE,EZ>
	87-A30-186-010	FET,2SK3053		C204	87-010-405-080		CAP, E 10-50<K>
	87-A30-072-080	C-TR,RT1P 144C		C205	87-010-805-080		C-CAP,1UF-16FZ
	87-A30-074-080	C-TR,RT1P 141C		C206	87-010-805-080		C-CAP,1UF-16FZ
	87-A30-073-080	C-TR,RT1N 141C		C209	87-010-546-080		CAP, ELECT 0.33-50V
	87-A30-105-080	C-TR,RT1P 441C		C210	87-010-546-080		CAP, ELECT 0.33-50V
	87-026-580-080	C-TR,DTA123JK		C211	87-010-180-080		C-CER 1500P<HR,HE>
	87-A30-086-070	C-TR,CSD1306E		C211	87-010-181-080		CAP,CHIP S 1800P<EZ,K>
	89-112-965-080	TR,2SA1296 (0.75W)		C212	87-010-180-080		C-CER 1500P<HR,HE>
	87-A30-085-070	C-TR,CSA1362GR		C212	87-010-181-080		CAP,CHIP S 1800P<EZ,K>
	89-327-143-080	TR,2SC2714 (0.1W)		C213	87-010-186-080		CAP,CHIP 4700P
	87-026-463-080	TR,2SA933SRS		C214	87-010-186-080		CAP,CHIP 4700P
	87-A30-221-040	C-TR,DTA 114WK		C215	87-010-403-080		CAP, ELECT 3.3-50V
	89-505-434-540	C-FET,2SK543-TB(4/5)		C216	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-137-010	TR,2SD2494<K>		C217	87-010-260-080		CAP, ELECT 47-25V
	87-A30-138-010	TR,2SB1625<K>		C218	87-010-260-080		CAP, ELECT 47-25V
				C219	87-010-805-080		C-CAP,1UF-16FZ
DIODE							
	87-A40-470-080	DIODE,1SS254		C220	87-010-805-080		C-CAP,1UF-16FZ
	87-A40-115-060	DIODE,RS603M		C221	87-010-213-080		C-CAP,S 0.015-50 B<EZ,K>
	87-A40-269-080	C-DIODE,MC2836		C222	87-010-213-080		C-CAP,S 0.015-50 B<EZ,K>
	87-A40-509-080	ZENER,MTZJ6.8C		C223	87-010-197-080		CAP,CHIP 0.01 DM<EZ,K>
	87-A40-270-080	C-DIODE,MC2838		C224	87-010-197-080		CAP,CHIP 0.01 DM<EZ,K>
	87-070-274-080	DIODE,1N4003 SEM		C225	87-010-176-080		C-CAP,S 680P-50 SL
	87-A40-341-080	ZENER,MTZJ 36 A		C226	87-010-176-080		C-CAP,S 680P-50 SL
	87-A40-308-080	ZENER,DZ10M		C229	87-A10-812-080		C-CAP,S 220P-200 J CH
	87-A40-004-080	ZENER,MTZJ16A		C230	87-A10-812-080		C-CAP,S 220P-200 J CH
	87-A40-488-080	DIODE,1SS244		C233	87-010-544-080		CAP, ELECT 0.1-50V
	87-A40-299-080	ZENER,DZ5.1M		C234	87-010-544-080		CAP, ELECT 0.1-50V
	87-A40-345-080	ZENER,MTZJ10C		C235	87-010-196-080		CHIP CAPACITOR,0.1-25
	87-A40-184-090	DIODE,RF34		C237	87-012-368-080		C-CAP,S 0.1-50 F
	87-A40-302-080	ZENER,DZ5.6M		C238	87-012-368-080		C-CAP,S 0.1-50 F
	87-A40-002-080	ZENER,MTZJ5.1C		C239	87-012-368-080		C-CAP,S 0.1-50 F
	87-A40-438-080	ZENER,MTZJ4.7A		C240	87-012-368-080		C-CAP,S 0.1-50 F
	87-A40-234-080	ZENER,MTZJ5.6A		C241	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
				C242	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
				C247	87-010-178-080		CAP, CHIP 1000P

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C248	87-010-178-080		CAP, CHIP 1000P	C387	87-012-145-080		CAP, CHIP S 270P CH<HR,HE,K>
C299	87-010-197-080		CAP,CHIP 0.01 DM<EZ,K>	C391	87-010-319-080		C-CAP,S 56P-50 CH<HR,HE>
C280	87-010-188-080		C-CAP,S 6800P-50 B	C391	87-012-145-080		CAP, CHIP S 270P CH<EZ>
C301	87-010-318-080		C-CAP,S 47P-50 CH	C392	87-010-319-080		C-CAP,S 56P-50 CH<HR,HE>
C302	87-010-318-080		C-CAP,S 47P-50 CH	C392	87-012-145-080		CAP, CHIP S 270P CH<EZ>
C303	87-012-157-080		C-CAP,S 330P-50 CH	C393	87-010-319-080		C-CAP,S 56P-50 CH<HR,HE>
C304	87-012-157-080		C-CAP,S 330P-50 CH	C393	87-012-145-080		CAP, CHIP S 270P CH<EZ>
C305	87-012-145-080		CAP, CHIP S 270P CH	C394	87-010-319-080		C-CAP,S 56P-50 CH<HR,HE,K>
C306	87-012-145-080		CAP, CHIP S 270P CH	C394	87-012-145-080		CAP, CHIP S 270P CH<EZ>
C307	87-010-196-080		CHIP CAPACITOR,0.1-25	C401	87-010-401-080		CAP, ELECT 1-50V
C309	87-010-196-080		CHIP CAPACITOR,0.1-25<HR,HE,K>	C402	87-010-401-080		CAP, ELECT 1-50V
C310	87-010-196-080		CHIP CAPACITOR,0.1-25<HR,HE,K>	C403	87-010-182-080		C-CAP,S 2200P-50 B
C311	87-010-198-080		CAP, CHIP 0.022	C404	87-010-182-080		C-CAP,S 2200P-50 B
C312	87-010-198-080		CAP, CHIP 0.022	C405	87-010-193-080		CHIP CAPACITOR,0.033
C313	87-010-178-080		CHIP CAP 1000P<HR,HE>	C406	87-010-193-080		CHIP CAPACITOR,0.033
C313	87-010-179-080		CHIP CAP S 1200P<EZ>	C407	87-010-405-080		CAP, ELECT 10-50V
C313	87-010-180-080		C-CER 1500P<K>	C408	87-010-405-080		CAP, ELECT 10-50V
C314	87-010-178-080		CHIP CAP 1000P<HR,HE>	C409	87-010-380-080		CAP, ELECT 47-16V
C314	87-010-179-080		CHIP CAP S 1200P<EZ>	C410	87-010-380-080		CAP, ELECT 47-16V
C314	87-010-180-080		C-CER 1500P<K>	C411	87-010-405-080		CAP, ELECT 10-50V
C315	87-010-178-080		CHIP CAP 1000P<HR,HE,EZ>	C412	87-010-112-080		CAP, ELECT 100-16V
C315	87-010-182-080		C-CAP,S 2200P-50 B<K>	C415	87-010-187-080		CAP CHIP S5600P
C316	87-010-178-080		CHIP CAP 1000P<HR,HE,EZ>	C416	87-010-187-080		CAP CHIP S5600P
C316	87-010-182-080		C-CAP,S 2200P-50 B<K>	C457	87-010-404-080		CAP, ELECT 4.7-50V
C317	87-012-142-080		CAP,S 0.33-16<EZ>	C458	87-010-404-080		CAP, ELECT 4.7-50V
C318	87-012-142-080		CAP,S 0.33-16<EZ>	C516	87-010-196-080		CHIP CAPACITOR,0.1-25
C319	87-012-141-080		CHIP CAP,0.22-16 F<EZ>	C601	87-010-180-080		C-CER 1500P
C320	87-012-141-080		CHIP CAP,0.22-16 F<EZ>	C602	87-010-180-080		C-CER 1500P
C321	87-016-492-080		C-CAP,S 0.33-16 FZ<HR,HE,K>	C613	87-016-081-080		CAP,S 0.1-16 RK
C321	87-012-141-080		CHIP CAP,0.22-16 F<EZ>	C614	87-016-081-080		C-CAP,S 0.1-16 RK
C322	87-016-492-080		C-CAP,S 0.33-16 FZ<HR,HE,K>	C619	87-010-185-080		C-CAP,S 3900P-50 B
C322	87-012-141-080		CHIP CAP,0.22-16 F<EZ>	C620	87-010-185-080		C-CAP,S 3900P-50 B
C324	87-010-260-080		CAP, ELECT 47-25V	C621	87-010-401-080		CAP, ELECT 1-50V
C325	87-010-370-080		CAP,E 330-6.3 SME	C622	87-010-401-080		CAP, ELECT 1-50V
C327	87-010-404-080		CAP, ELECT 4.7-50V	C625	87-010-405-080		CAP, ELECT 10-50V
C328	87-010-404-080		CAP, ELECT 4.7-50V	C626	87-010-405-080		CAP, ELECT 10-50V
C332	87-010-196-080		CHIP CAPACITOR,0.1-25	C629	87-010-405-080		CAP, ELECT 10-50V
C335	87-010-401-080		CAP, ELECT 1-50V	C630	87-010-213-080		CAP, CHIP 0.015-25 KB GRM
C336	87-010-401-080		CAP, ELECT 1-50V	C631	87-010-992-080		CHIP-CAP,S 0.047-25B
C337	87-010-196-080		CHIP CAPACITOR,0.1-25	C632	87-010-263-080		CAP, ELECT 100-10V
C339	87-010-196-080		CHIP CAPACITOR,0.1-25	C633	87-010-263-080		CAP, ELECT 100-10V
C340	87-010-196-080		CHIP CAPACITOR,0.1-25	C634	87-010-196-080		CHIP CAPACITOR,0.1-25
C351	87-012-140-080		CAP 470P	C635	87-010-196-080		CHIP CAPACITOR,0.1-25
C352	87-012-140-080		CAP 470P	C636	87-010-194-080		CAP, CHIP 0.047
C354	87-010-175-080		CAP 560P	C637	87-010-183-080		C-CAP,S 2700P-50 B
C355	87-012-349-080		C-CAP,S 1000P-50 CH	C641	87-010-196-080		CHIP CAPACITOR,0.1-25
C356	87-010-260-080		CAP, ELECT 47-25V	C653	87-010-318-080		C-CAP,S 47P-50 B<EZ,K>
C357	87-010-197-080		CAP, CHIP 0.01 DM	C654	87-010-318-080		C-CAP,S 47P-50 B<EZ,K>
C358	87-010-183-080		C-CAP,S 2700P-50 B	C667	87-010-196-080		CHIP CAPACITOR,0.1-25
C359	87-010-183-080		C-CAP,S 2700P-50 B	C669	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
C360	87-010-183-080		C-CAP,S 2700P-50 B	C670	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
C370	87-010-196-080		CHIP CAPACITOR,0.1-25	C671	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
C371	87-010-177-080		C-CAP,S820P-50 SL<EZ>	C672	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
C372	87-010-177-080		C-CAP,S820P-50 SL<EZ>	C701	87-010-381-080		CAP, ELECT 330-16V
C373	87-016-083-080		C-CAP,S 0.15-16 RK<HR,HE,K>	C702	87-010-404-080		CAP, ELECT 4.7-50V
C373	87-010-179-080		CAP,CHIP S B1200P<EZ>	C703	87-010-197-080		CAP, CHIP 0.01 DM
C374	87-016-083-080		C-CAP,S 0.15-16 RK<HR,HE,K>	C704	87-010-197-080		CAP, CHIP 0.01 DM
C374	87-010-179-080		CAP,CHIP S B1200P<EZ>	C709	87-010-322-080		C-CAP,S 100P-50 CH
C375	87-010-545-080		CAP,ELECT 0.22-50V<EZ>	C711	87-010-263-080		CAP, ELECT 100-10V
C376	87-010-545-080		CAP,ELECT 0.22-50V<EZ>	C712	87-010-196-080		CHIP CAPACITOR,0.1-25
C378	87-010-196-080		CHIP CAPACITOR,0.1-25	C713	87-010-197-080		CAP, CHIP 0.01 DM
C379	87-010-382-080		CAP, ELECT 22-25V<HR,HE,K>	C714	87-010-197-080		CAP, CHIP 0.01 DM
C380	87-010-382-080		CAP, ELECT 22-25V<HR,HE,K>	C715	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
C381	87-010-197-080		CAP, CHIP 0.01 DM	C721	87-010-312-080		C-CAP,S 15P-50 CH
C382	87-010-312-080		C-CAP,S 15P-50 CH<HR,HE,K>	C722	87-010-312-080		C-CAP,S 15P-50 CH
C382	87-010-318-080		C-CAP,S 47P-50 CH<EZ>	C723	87-010-178-080		CHIP CAP 1000P
C383	87-010-197-080		CAP, CHIP 0.01 DM	C725	87-010-178-080		CHIP CAP 1000P
C384	87-010-402-080		CAP, ELECT 2.2-50V	C727	87-010-196-080		CHIP CAPACITOR,0.1-25
C385	87-010-184-080		CHIP CAPACITOR 3300P<EZ>	C728	87-010-248-080		CAP, ELECT 220-10V
C386	87-010-196-080		CHIP CAPACITOR,0.1-25	C755	87-010-197-080		CAP, CHIP 0.01 DM


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C756	87-010-197-080		CAP, CHIP 0.01 DM	C942	87-010-151-080		C-CAP,S 7P-50 CH<EZ,K>
C757	87-010-318-080		C-CAP,S 47P-50 CH	C943	87-010-197-080		CAP, CHIP 0.01 DM<HR,HE>
C758	87-010-149-080		C-CAP,S 5P-50 CH	C944	87-014-051-080		CAPACITOR (PP),560P<HR,HE>
C759	87-012-154-080		C-CAP,S 150P-50 CH<HR,HE>	C945	87-010-197-080		CAP, CHIP 0.01 DM<HR,HE>
C760	87-012-154-080		C-CAP,S 150P-50 CH<HR,HE>	C947	87-010-197-080		CAP, CHIP 0.01 DM
C761	87-010-196-080		CHIP CAPACITOR,0.1-25	C949	87-014-049-080		CAP,PP 470P-100J<EZ,K>
C762	87-010-197-080		CAP, CHIP 0.01 DM	C950	87-014-073-080		CAP, PP 4700P-100J<HR,HE>
C763	87-010-194-080		CAP, CHIP 0.047	C952	87-010-197-080		CAP, CHIP 0.01 DM
C764	87-010-319-080		C-CAP,S 56P-50 CH<HR,HE>	C953	87-010-197-080		CAP, CHIP 0.01 DM<HR,HE>
C765	87-010-197-080		CAP, CHIP 0.01 DM	C954	87-010-400-080		CAP, ELECT 0.47-50V<HR,HE>
C766	87-010-197-080		CAP, CHIP 0.01 DM	C956	87-010-263-080		CAP, ELECT 100-10V<HR,HE>
C767	87-010-405-080		CAP, ELECT 10-50V	C957	87-010-311-080		CAP, 12P<EZ,K>
C768	87-010-197-080		CAP, CHIP 0.01 DM	C958	87-010-197-080		CAP, CHIP 0.01 DM<EZ,K>
C769	87-010-408-080		CAP, ELECT 47-50V	C959	87-010-196-080		CHIP CAPACITOR,0.1-25
C770	87-015-821-080		C-CAP 0.047	C960	87-010-196-080		CHIP CAPACITOR,0.1-25
C771	87-010-407-080		CAP, ELECT 33-50V	C962	87-010-401-080		CAP, ELECT 1-50V
C772	87-010-194-080		CAP, CHIP 0.047	CF801	87-008-261-010		FILTER, SFE10.7MA5-A<HR,HE>
C773	87-010-196-080		CHIP CAPACITOR,0.1-25<HR,HE>	CF801	87-008-423-010		FLTR,CF SFE10.7 MS3G-A<EZ,K>
C773	87-010-179-080		CAP,CHIP S B1200P<EZ,K>	CF802	87-008-261-010		FILTER, SFE10.7MA5-A<HR,HE>
C774	87-010-263-080		CAP, ELECT 100-10V	CF802	82-785-747-010		CF,MS2 GHY R<EZ,K>
C775	87-010-404-080		CAP, ELECT 4.7-50V	CON351	86-ZM3-605-010		CONN ASSY,8P-RPB<K>
C776	87-010-197-080		CAP, CHIP 0.01 DM<EZ,K>	FB301	87-008-372-080		FILTER,EMI BL OIRNI<EZ>
C777	87-010-400-080		CAP, ELECT 0.47-50V	FC602	88-906-241-110		FF-CABLE,6P 1.25
C778	87-010-401-080		CAP, ELECT 1-50V	FFE801	A8-82A-190-030		82A-1 FEUNM<HR>
C779	87-010-401-080		CAP, ELECT 1-50V	FFE801	A8-82A-193-070		82A-1 YFEUNC<HE>
C780	87-010-196-080		CHIP CAPACITOR,0.1-25	FFE801	A8-62A-191-130		62A-1 FEENM<EZ>
C781	87-010-405-080		CAP, ELECT 10-50V	FFE801	A8-62A-19C-170		62A-1 YFEENC<K>
C782	87-010-405-080		CAP, ELECT 10-50V	J201	87-A60-488-010		JACK,DIAG.3 BLK ST W/SW KM16AT
C783	87-015-819-080		CAPACITOR,0.01	J202	87-A60-641-010		JACK,PIN 4P R/W/B JALCO
C784	87-010-197-080		CAP, CHIP 0.01 DM	J203	87-033-240-010		TERMINAL,SP 4P32SV1-05
C785	87-010-403-080		CAP, ELECT 3.3-50V	J601	87-A60-426-010		JACK,PIN 6P YKC21-3835
C786	87-010-403-080		CAP, ELECT 3.3-50V	J801	87-A60-202-010		TERMINAL,ANT 4P MSP-154V-02<HR,HE>
C787	87-010-186-080		CAP, CHIP 4700P<EZ>	J801	87-A60-427-010		TERMINAL,ANT 2P YKD31-0429<EZ,K>
C788	87-010-186-080		CAP, CHIP 4700P<EZ>	L201	87-003-383-010		COIL,1UH-S
C789	87-010-179-080		CAP,CHIP S B1200P<HR,HE,EZ>	L202	87-003-383-010		COIL,1UH-S
C789	87-010-188-080		CAP,CHIP 6800P<K>	L301	87-A50-049-010		COIL,TRAP 85K(COI)
C790	87-010-179-080		CAP,CHIP S B1200P<HR,HE,EZ>	L302	87-A50-049-010		COIL,TRAP 85K(COI)
C790	87-010-188-080		CAP,CHIP 6800P<K>	L351	87-007-342-010		COIL,OSC 85K BIAS
C791	87-010-405-080		CAP, ELECT 10-50V	L771	87-A50-266-010		COIL,FM DET-2N(TOK)
C793	87-010-177-080		C-CAP,S 820P-50 SL<HR,HE>	L772	87-A90-052-010		FLTR,CFMT-450A (TOK)<HR,HE>
C793	87-010-180-080		C-CER 1500P<EZ>	L772	87-A90-733-010		FLTR,PCFAZH-450(TOK)<EZ>
C793	87-010-181-080		CAP,CHIP S 1800P<K>	L781	87-005-847-080		COIL,2.2UH(CECS)
C794	87-010-406-080		CAP, ELECT 22-50	L791	87-A50-027-010		COIL,1 POLE MPX(TOK)<EZ>
C795	87-010-596-080		CAP, S 0.047-16	L792	87-A50-027-010		COIL,1 POLE MPX(TOK)<EZ>
C796	87-010-403-080		CAP, ELECT 3.3-50V	L832	86-NFZ-694-080		COIL,2.2UH K CECS
C797	87-010-197-080		CAP,CHIP S 1200P<HR,HE>	L941	87-A50-022-010		COIL,ANT SW (COI)7.96MHZ<HR,HE>
C797	87-010-180-080		C-CER 1500P<EZ,K>	L941	87-A50-020-010		COIL,ANT LW (COI)252KHZ<EZ,K>
C798	87-010-197-080		CAP,CHIP S 1200P<HR,HE>	L942	87-A50-173-010		COIL,OSC SW-N (COI)<HR,HE>
C798	87-010-180-080		C-CER 1500P<EZ,K>	L942	87-A50-019-010		COIL,OSC LW(COI)856KHZ<EZ,K>
C799	87-010-194-080		CAP, CHIP 0.047	L943	87-005-372-080		COIL,S 1MHM<HR,HE>
C812	87-010-197-080		CAP, CHIP 0.01 DM	L944	87-A50-159-010		COIL,10MH K C2B<HR,HE>
C814	87-010-197-080		CAP, CHIP 0.01 DM	L981	88-NF8-625-010		COIL,AM PACK 3N(TOK)<HR,HE>
C820	87-010-408-080		CAP, ELECT 47-50V	L981	87-NF4-651-010		COIL,AM PACK 2N(TOM)<EZ,K>
C821	87-010-197-080		CAP, CHIP 0.01 DM	R237	87-A00-262-080		RES,M/F 0.15-2W J<HR,HE>
C822	87-010-197-080		CAP, CHIP 0.01 DM	R237	87-A00-257-080		RES,M/F 0.15-1W J<EZ,K>
C823	87-010-197-080		CAP, CHIP 0.01 DM	R238	87-A00-262-080		RES,M/F 0.15-2W J<HR,HE>
C828	87-010-196-080		CHIP CAPACITOR,0.1-25	R238	87-A00-257-080		RES,M/F 0.15-1W J<EZ,K>
C829	87-010-196-080		CHIP CAPACITOR,0.1-25	R239	87-A00-262-080		RES,M/F 0.15-2W J<HR,HE>
C859	87-010-197-080		CAP, CHIP 0.01 DM<EZ>	R239	87-A00-257-080		RES,M/F 0.15-1W J<EZ,K>
C861	87-012-156-080		C-CAP,S 220P-50 CH<EZ>	R240	87-A00-262-080		RES,M/F 0.15-2W J<HR,HE>
C862	87-012-156-080		C-CAP,S 220P-50 CH<EZ>	R240	87-A00-257-080		RES,M/F 0.15-1W J<EZ,K>
C863	87-012-140-080		CAP, 470P<EZ>	RY101	87-A90-464-010		RELAY, DG12D2-O(M)
C864	87-010-405-080		CAP,ELECT 10-50V<EZ>	RY201	87-A90-713-010		RELAY, 12V DQ12D1
C865	87-010-196-080		CHIP CAPACITOR,0.1-25<EZ>	SFR301	87-A90-557-080		SFR,33K H HOKU<EZ>
C866	87-010-405-080		CAP,ELECT 10-50V<EZ>	SFR302	87-A90-557-080		SFR,33K H HOKU<EZ>
C867	87-010-197-080		CAP, CHIP 0.01 DM<EZ>	SFR303	87-A90-557-080		SFR,33K H HOKU<EZ>
C868	87-010-316-080		C-CAP,S 33P-50 CH<EZ>	SFR304	87-A90-557-080		SFR,33K H HOKU<EZ>
C869	87-010-134-080		C-CAP,S 22P-50V<EZ>	SFR305	87-A90-433-080		SFR,50K H NVZ6TLTA<EZ>
C940	87-010-197-080		CAP, CHIP 0.01 DM	SFR306	87-A90-433-080		SFR,50K H NVZ6TLTA<EZ>
C941	87-010-314-080		C-CAP,S 22P-50V<HR,HE>	SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA	C506	87-010-213-080		C-CAP,S 0.015-50 B
TC941	87-011-220-080		TRIMMER CAP 20P VTC<HR,HE>	C507	87-010-213-080		C-CAP,S 0.015-50 B
TC943	87-011-221-080		TRIMMER CAP 30P	C508	87-010-197-080		CAP, CHIP 0.01 DM
TH201	87-A90-221-010		C-THMS,100K	C509	87-010-181-080		CAP,CHIP S 1800P
TH202	87-A90-221-010		C-THMS,100K	C510	87-010-196-080		CHIP CAPACITOR,0.1-25
W104	85-NF5-628-010		F-CABLE 7P-2.5	C511	87-018-209-080		CAP, CER 0.1-50V
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309	C512	87-010-374-040		CAP,E 47-10
X771	87-A30-354-010		VIB,CER 450.0KHZ BFU C<HR,HE>	C513	87-010-401-040		CAP,E 1-50 SME
X851	87-A70-091-010		VIB,XTAL 4.332MHZ CSA-309<EZ>	C514	87-010-401-040		CAP,E 1-50 SME
				C515	87-010-183-080		C-CAP,S 2700P-50 B
FRONT C.B				C516	87-010-183-080		C-CAP,S 2700P-50 B
C101	87-010-550-040		CAP,E 100-6.3 GAS	C518	87-010-196-080		CHIP CAPACITOR,0.1-25
C102	87-010-196-080		CHIP CAPACITOR,0.1-25	C519	87-010-263-040		CAP,E 100-10
C103	87-010-196-080		CHIP CAPACITOR,0.1-25	C523	87-012-141-080		CHIP-CAPACITOR,0.22-16F
C104	87-010-494-040		CAP,E 1-50 GAS	C601	87-010-391-040		CAP,E 10-35 SME
C105	87-010-178-080		CHIP CAP 1000P	C602	87-010-186-080		CAP,CHIP 4700P
C106	87-A10-189-040		CAP,E 220-10	C603	87-010-498-040		CAP,E 10-16 GAS
C107	87-010-197-080		CAP, CHIP 0.01 DM	C604	87-010-382-040		CAP,E 22-25 SME
C108	87-010-196-080		CHIP CAPACITOR,0.1-25	C605	87-010-196-080		CHIP CAPACITOR,0.1-25
C109	87-018-208-080		CAP 0.047-50F	C606	87-010-322-080		C-CAP,S 100P-50 CH
C110	87-012-157-080		C-CAP,S 330P-50 CH	C607	87-010-321-080		CHIP CAPACITOR,82P(J)
C111	87-010-320-080		CHIP CAP 68P	C608	87-010-196-080		CHIP CAPACITOR,0.1-25
C112	87-010-312-080		C-CAP,S 15P-50 CH	C609	87-010-545-040		CAP,E 0.22-50 SME
C113	87-010-316-080		C-CAP,S 33P-50 CH	C610	87-010-322-080		C-CAP,S 100P-50 CH<EZ,K>
C114	87-010-182-080		C-CAP,S 2200P-50 B	C611	87-010-177-080		C-CAP,S 820P-50 SL
C115	87-010-182-080		C-CAP,S 2200P-50 B	C612	87-010-176-080		C-CAP,S 680P-50 SL<EZ,K>
C116	87-010-498-040		CAP,E 10-16 GAS	C614	87-A10-189-040		CAP,E 220-10
C117	87-012-157-080		C-CAP,S 330P-50 CH	C651	87-010-401-040		CAP,E 1-50 SME
C118	87-010-196-080		CHIP CAPACITOR,0.1-25	C652	87-010-196-080		CHIP CAPACITOR,0.1-25
C119	87-010-196-080		CHIP CAPACITOR,0.1-25	C653	87-010-196-080		CHIP CAPACITOR,0.1-25
C120	87-010-196-080		CHIP CAPACITOR,0.1-25	FB601	87-008-372-080		FILTER, EMI BL OIRNI
C121	87-010-194-080		CAP, CHIP 0.047	FC501	85-NF5-615-010		CABLE,FFC 15P-1.25<HR,HE,EZ>
C122	87-010-194-080		CAP, CHIP 0.047	FC501	88-911-201-110		FF-CABLE,11P 1.25<K>
C124	87-010-263-040		CAP,E 100-10	FC801	85-NF5-618-010		CABLE,FFC 13P-1.25
C125	87-010-196-080		CHIP CAPACITOR,0.1-25	FL201	88-NF7-651-010		FL,BJ602GK
C201	87-010-178-080		CHIP CAP 1000P	J601	87-A60-651-010		JACK,3.5MONO
C202	87-010-194-080		CAP, CHIP 0.047	J602	87-A60-651-010		JACK,3.5MONO
C203	87-A10-797-040		CAP,E 47-35 M 5L SRM	L501	87-005-448-080		COIL 220UH,K
C204	87-010-497-040		CAP,E 4.7-35 GAS	LED401	87-070-197-080		LED,SLP7118C-51-S-T1
C205	87-010-497-040		CAP,E 4.7-35 GAS	LED403	87-070-197-080		LED,SLP7118C-51-S-T1
C206	87-012-157-080		C-CAP,S 330P-50 CH	LED405	87-070-197-080		LED,SLP7118C-51-S-T1
C207	87-012-157-080		C-CAP,S 330P-50 CH	LED407	87-070-197-080		LED,SLP7118C-51-S-T1
C208	87-012-157-080		C-CAP,S 330P-50 CH	LED409	87-070-197-080		LED,SLP7118C-51-S-T1
C209	87-012-157-080		C-CAP,S 330P-50 CH	LED411	87-070-201-080		LED,SLP9118C-51-S-T1
C210	87-012-157-080		C-CAP,S 330P-50 CH	LED412	87-070-201-080		LED,SLP9118C-51-S-T1
C211	87-012-157-080		C-CAP,S 330P-50 CH	LED413	87-070-201-080		LED,SLP9118C-51-S-T1
C212	87-012-157-080		C-CAP,S 330P-50 CH	LED414	87-070-201-080		LED,SLP9118C-51-S-T1
C213	87-012-157-080		C-CAP,S 330P-50 CH	LED415	87-070-201-080		LED,SLP9118C-51-S-T1
C214	87-012-157-080		C-CAP,S 330P-50 CH	LED417	87-070-281-080		LED,SLZ736A-25-S-T1
C215	87-012-157-080		C-CAP,S 330P-50 CH	LED419	87-070-281-080		LED,SLZ736A-25-S-T1
C216	87-012-157-080		C-CAP,S 330P-50 CH	LED421	87-070-281-080		LED,SLZ736A-25-S-T1
C217	87-012-157-080		C-CAP,S 330P-50 CH	LED423	87-070-281-080		LED,SLZ736A-25-S-T1
C218	87-012-157-080		C-CAP,S 330P-50 CH	LED425	87-070-281-080		LED,SLZ736A-25-S-T1
C371	87-010-196-080		CHIP CAPACITOR,0.1-25	LED427	87-070-281-080		LED,SLZ736A-25-S-T1
C372	87-010-196-080		CHIP CAPACITOR,0.1-25	LED428	87-A40-380-080		LED,SEL6510C-TP5 GRN
C373	87-010-196-080		CHIP CAPACITOR,0.1-25	LED429	87-A40-380-080		LED,SEL6510C-TP5 GRN
C375	87-010-196-080		CHIP CAPACITOR,0.1-25	LED430	87-A40-380-080		LED,SEL6510C-TP5 GRN
C376	87-010-173-080		C-CAP,S 390P-50 SL	LED431	87-A40-380-080		LED,SEL6510C-TP5 GRN
C377	87-010-196-080		CHIP CAPACITOR,0.1-25	LED432	87-A40-380-080		LED,SEL6510C-TP5 GRN
C378	87-010-196-080		CHIP CAPACITOR,0.1-25	LED433	87-A40-380-080		LED,SEL6510C-TP5 GRN
C402	87-010-196-080		CHIP CAPACITOR,0.1-25	LED434	87-A40-380-080		LED,SEL6510C-TP5 GRN
C404	87-010-196-080		CHIP CAPACITOR,0.1-25	LED435	87-A40-380-080		LED,SEL6510C-TP5 GRN
C406	87-010-196-080		CHIP CAPACITOR,0.1-25	LED436	87-A40-380-080		LED,SEL6510C-TP5 GRN
C408	87-010-196-080		CHIP CAPACITOR,0.1-25	LED437	87-A40-380-080		LED,SEL6510C-TP5 GRN
C501	87-010-319-080		C-CAP,S 56P-50 CH	LED444	87-070-278-010		LED,SLZ-738A-24-S
C502	87-010-319-080		C-CAP,S 56P-50 CH	LED445	87-070-290-010		LED,SLZ 936-30-S
C503	87-012-393-080		C-CAP,S 0.22-16 R K	LED446	87-070-278-010		LED,SLZ-738A-24-S
C504	87-010-197-080		CAP, CHIP 0.01 DM	LED447	87-070-278-010		LED,SLZ-738A-24-S
C505	87-010-180-080		C-CER 1500P	LED448	87-070-290-010		LED,SLZ 936-30-S
				LED449	87-070-278-010		LED,SLZ-738A-24-S

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
S101	87-A90-791-010	SW,RTRY	EC16B12204 ENCODER	DECK C.B			
S102	87-A90-535-010	SW,RTRY	EC16B24304	CON105	87-099-756-019		CONN, 15P 9604 S F<HR,HE,EZ>
S301	87-A90-095-080	SW,TACT	EVQ11G04M	CON105	87-099-753-019		CONN, 11P H 9604<K>
S302	87-A90-095-080	SW,TACT	EVQ11G04M	SFR1	87-024-581-019		SFR, 3.3K DIA 6H
S303	87-A90-095-080	SW,TACT	EVQ11G04M	SOL1	82-ZM1-618-410		SOL ASSY, 27
S304	87-A90-095-080	SW,TACT	EVQ11G04M	SOL2	82-ZM1-618-410		SOL ASSY, 27
S305	87-A90-095-080	SW,TACT	EVQ11G04M	SW1	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S306	87-A90-095-080	SW,TACT	EVQ11G04M	SW2	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S307	87-A90-095-080	SW,TACT	EVQ11G04M	SW3	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S308	87-A90-095-080	SW,TACT	EVQ11G04M	SW4	87-036-110-010		SW,MICRO SPPB62<HR,HE,EZ>
S309	87-A90-095-080	SW,TACT	EVQ11G04M	SW4	87-A90-248-019		SW,MICRO ESE11SH2CXQ<K>
S310	87-A90-095-080	SW,TACT	EVQ11G04M	SW5	87-036-110-010		SW,MICRO SPPB62<HR,HE,EZ>
S311	87-A90-095-080	SW,TACT	EVQ11G04M	SW5	87-A90-248-019		SW,MICRO ESE11SH2CXQ<K>
S312	87-A90-095-080	SW,TACT	EVQ11G04M	SW6	87-036-110-010		SW,MICRO SPPB62<HR,HE,EZ>
S313	87-A90-095-080	SW,TACT	EVQ11G04M<HR,HE,EZ>	SW6	87-036-110-010		SW,MICRO SPPB62<HR,HE,EZ>
S314	87-A90-095-080	SW,TACT	EVQ11G04M<EZ>	SW8	87-A90-248-019		SW,MICRO ESE11SH2CXQ<HR,HE,EZ>
S321	87-A90-095-080	SW,TACT	EVQ11G04M	SW9	87-A90-248-019		SW,MICRO ESE11SH2CXQ<HR,HE,EZ>
S322	87-A90-095-080	SW,TACT	EVQ11G04M	W001	82-ZM3-601-019		RBN,CORD, 4P-75
S323	87-A90-095-080	SW,TACT	EVQ11G04M	HEAD-1 C.B			
S324	87-A90-095-080	SW,TACT	EVQ11G04M	CON301	85-MA2-615-010		CON ASSY, 3P-PB<K>
S325	87-A90-095-080	SW,TACT	EVQ11G04M	HEAD-2 C.B			
S326	87-A90-095-080	SW,TACT	EVQ11G04M	CON351	87-NF6-616-010		CONN ASSY, 8P-RPB<HR,HE,EZ>
S327	87-A90-095-080	SW,TACT	EVQ11G04M				
S331	87-A90-095-080	SW,TACT	EVQ11G04M<EZ>				
S332	87-A90-095-080	SW,TACT	EVQ11G04M<EZ>				
S333	87-A90-095-080	SW,TACT	EVQ11G04M<EZ>				
S335	87-A90-095-080	SW,TACT	EVQ11G04M				
S341	87-A90-095-080	SW,TACT	EVQ11G04M				
S342	87-A90-095-080	SW,TACT	EVQ11G04M				
S343	87-A90-095-080	SW,TACT	EVQ11G04M				
S344	87-A90-095-080	SW,TACT	EVQ11G04M				
S345	87-A90-095-080	SW,TACT	EVQ11G04M				
S346	87-A90-095-080	SW,TACT	EVQ11G04M				
S347	87-A90-095-080	SW,TACT	EVQ11G04M				
S348	87-A90-095-080	SW,TACT	EVQ11G04M				
S349	87-A90-095-080	SW,TACT	EVQ11G04M				
S350	87-A90-095-080	SW,TACT	EVQ11G04M				
X101	87-A70-070-080	VIB,CER	5.76MHZ CRHF				
SW C.B							
S351	87-A90-095-080	SW,TACT	EVQ11G04M				
S352	87-A90-095-080	SW,TACT	EVQ11G04M				
S353	87-A90-095-080	SW,TACT	EVQ11G04M				
S354	87-A90-095-080	SW,TACT	EVQ11G04M				
S355	87-A90-095-080	SW,TACT	EVQ11G04M				
AC1 C.B							
△ FC1	87-033-147-010		FUSE CLAMP,MT-20<HE,HR>				
△ F101	87-035-369-010		FUSE, 5A 250V TE<HE,HR>				
△ F101	87-035-364-010		FUSE, 1.6A 250V <EZ,K>				
△ FC2	87-033-147-010		FUSE CLAMP,MT-20<HE,HR>				
△ FC101	87-A90-505-080		FUSE CLAMP,TP00351-51<EZ,K>				
△ FC102	87-A90-505-080		FUSE CLAMP,TP00351-51<EZ,K>				
△ PT101	88-NF7-662-010		PT, 8NF-7 HR<HE,HR>				
△ PT101	88-NF7-664-010		PT, 8NF-7 K<K>				
△ PT101	88-NF7-665-010		PT, 8NF-7 EZ<EZ>				
△ SW1	87-A90-165-010		SW,SL 1-2-3 SWS2301<HE,HR>				
△ T1	87-A60-317-010		TERMINAL, 1P MSC<HE,HR>				
△ T101	87-A60-317-010		TERMINAL, 1P MSC<EZ,K>				
△ T102	87-A60-317-010		TERMINAL, 1P MSC<EZ,K>				
△ T2	87-A60-317-010		TERMINAL, 1P MSC<HE,HR>				
AC2 C.B							
△ PR101	87-026-682-080		PROTECTOR, 10A 60V491				
△ PR102	87-026-682-080		PROTECTOR, 10A 60V491				
△ PR103	87-026-682-080		PROTECTOR, 10A 60V491				
△ PR104	87-026-682-080		PROTECTOR, 10A 60V491				

○ チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

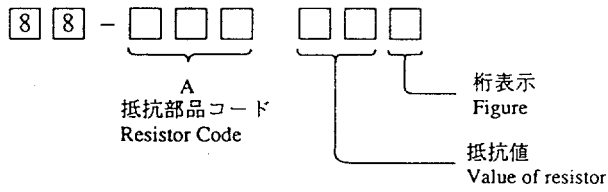

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)			抵抗コード : A Resistor Code: A	
				外形／Form	L	W		t
1/16W	1608	±5%	CJ		1.6	0.8	0.45	108
1/10W	2125	±5%	CJ		2	1.25	0.45	118
1/8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION



E C B

KTA1266GR
KTC3198GR



E C B

CC5551




E C B

2SA1296



B C E

2SB1370
2SB1625
2SD2494
FN1016
FP1016




E C B

2SA933
2SC4115




G D S


2SK3053

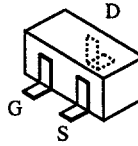

2SK2158

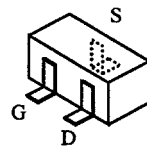

2SK543-TB(4/5)







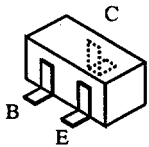


2SA1235F DTA123JK
2SC2714 RN1410
2SC3052F RT1N141C
CMBT5401 RT1N144C
CMBT5551 RT1P141C
CSA1362GR RT1P144C
CSD1306E RT1P441C
DTA114WK









FL GRID ASSIGNMENT & ANODE CONNECTION


FL, BJ602GK

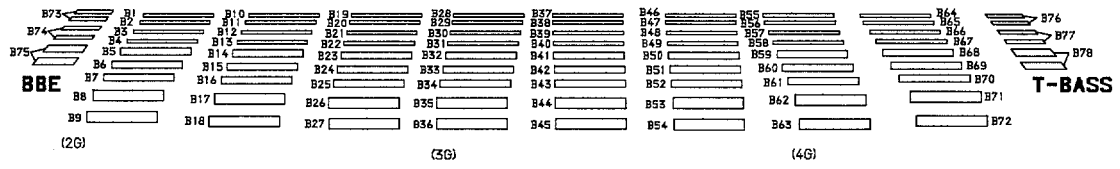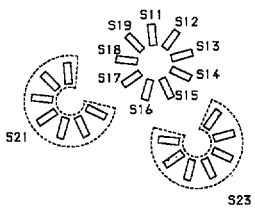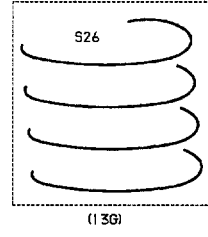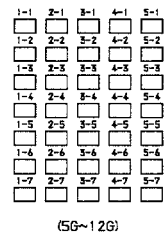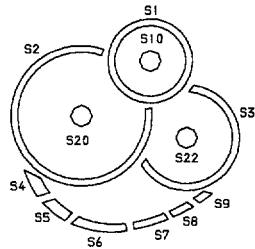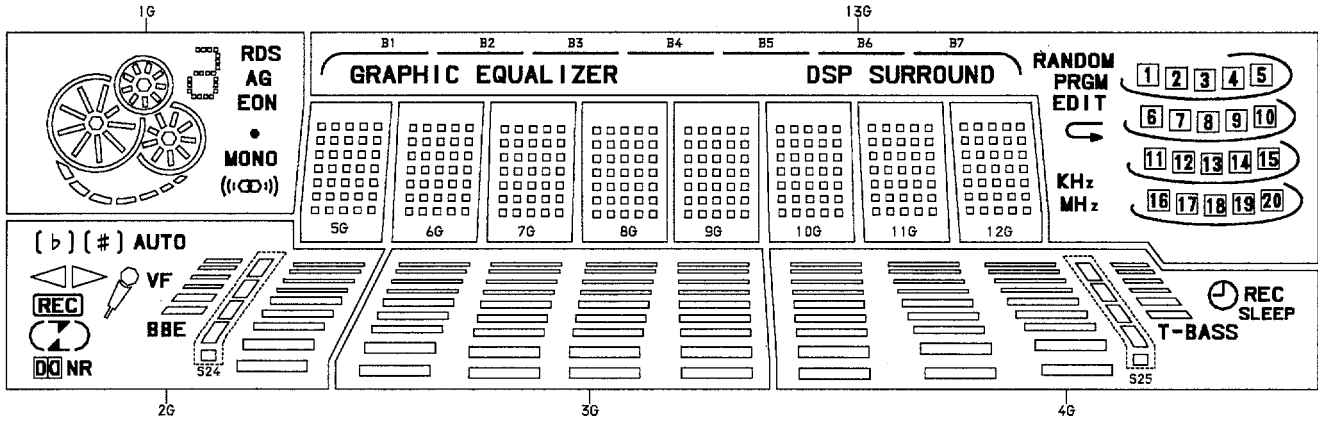GRID ASSIGNMENT




ANODE CONNECTION


	1G	2G	3G	4G	5G-12G	13G
P1	EON	B9	B45	REC	1-1	DSP SURROUND
P2	AG	 NR	B36	B72	2-1	GRAPHIC EQUALIZER
P3		BBE	B27	B63	3-1	B7
P4	MONO	S24	B18	B54	4-1	B6
P5		BB	B44		5-1	B5
P6	RDS		B35	B71	1-2	B4
P7	b		B26	B62	2-2	B3
P8	c		B17	B53	3-2	B2
P9	a, d, g	B7	B43	SLEEP	4-2	B1
P10	e	REC	B34	B70	5-2	RANDOM
P11	S1		B25	B61	1-3	PRGM
P12	S11		B16	B52	2-3	EDIT
P13	S12	B6	B42	T-BASS	3-3	
P14	S19	b #	B33	B69	4-3	KHz
P15	S13		B24	B60	5-3	MHz
P16	S10		B15	B51	1-4	S26
P17	S18	B5	B41	B78	2-4	16
P18	S14	B75	B32	B68	3-4	11

	1G	2G	3G	4G	5G-12G	13G
P19	S17	B74	B23	B59	4-4	6
P20	S15	B73	B14	B50	5-4	1
P21	S16	B4	B40	B77	1-5	17
P22	S3	 VF	B31	B67	2-5	12
P23	S23	AUTO	B22	B58	3-5	7
P24	S22	—	B13	B49	4-5	2
P25	S9	B3	B39	B76	5-5	18
P26	S8	—	B30	B66	1-6	13
P27	S7	—	B21	B57	2-6	8
P28	S6	—	B12	B48	3-6	3
P29	S5	B2	B38	S25	4-6	19
P30	S4	—	B29	B65	5-6	14
P31	S2	—	B20	B56	1-7	9
P32	S21	—	B11	B47	2-7	4
P33	S20	B1	B37	—	3-7	20
P34	—	—	B28	B64	4-7	15
P35	—	—	B19	B55	5-7	10
P36	—	—	B10	B46	—	5

BLOCK DIAGRAM - 1 (HE, HR : MAIN / FRONT)

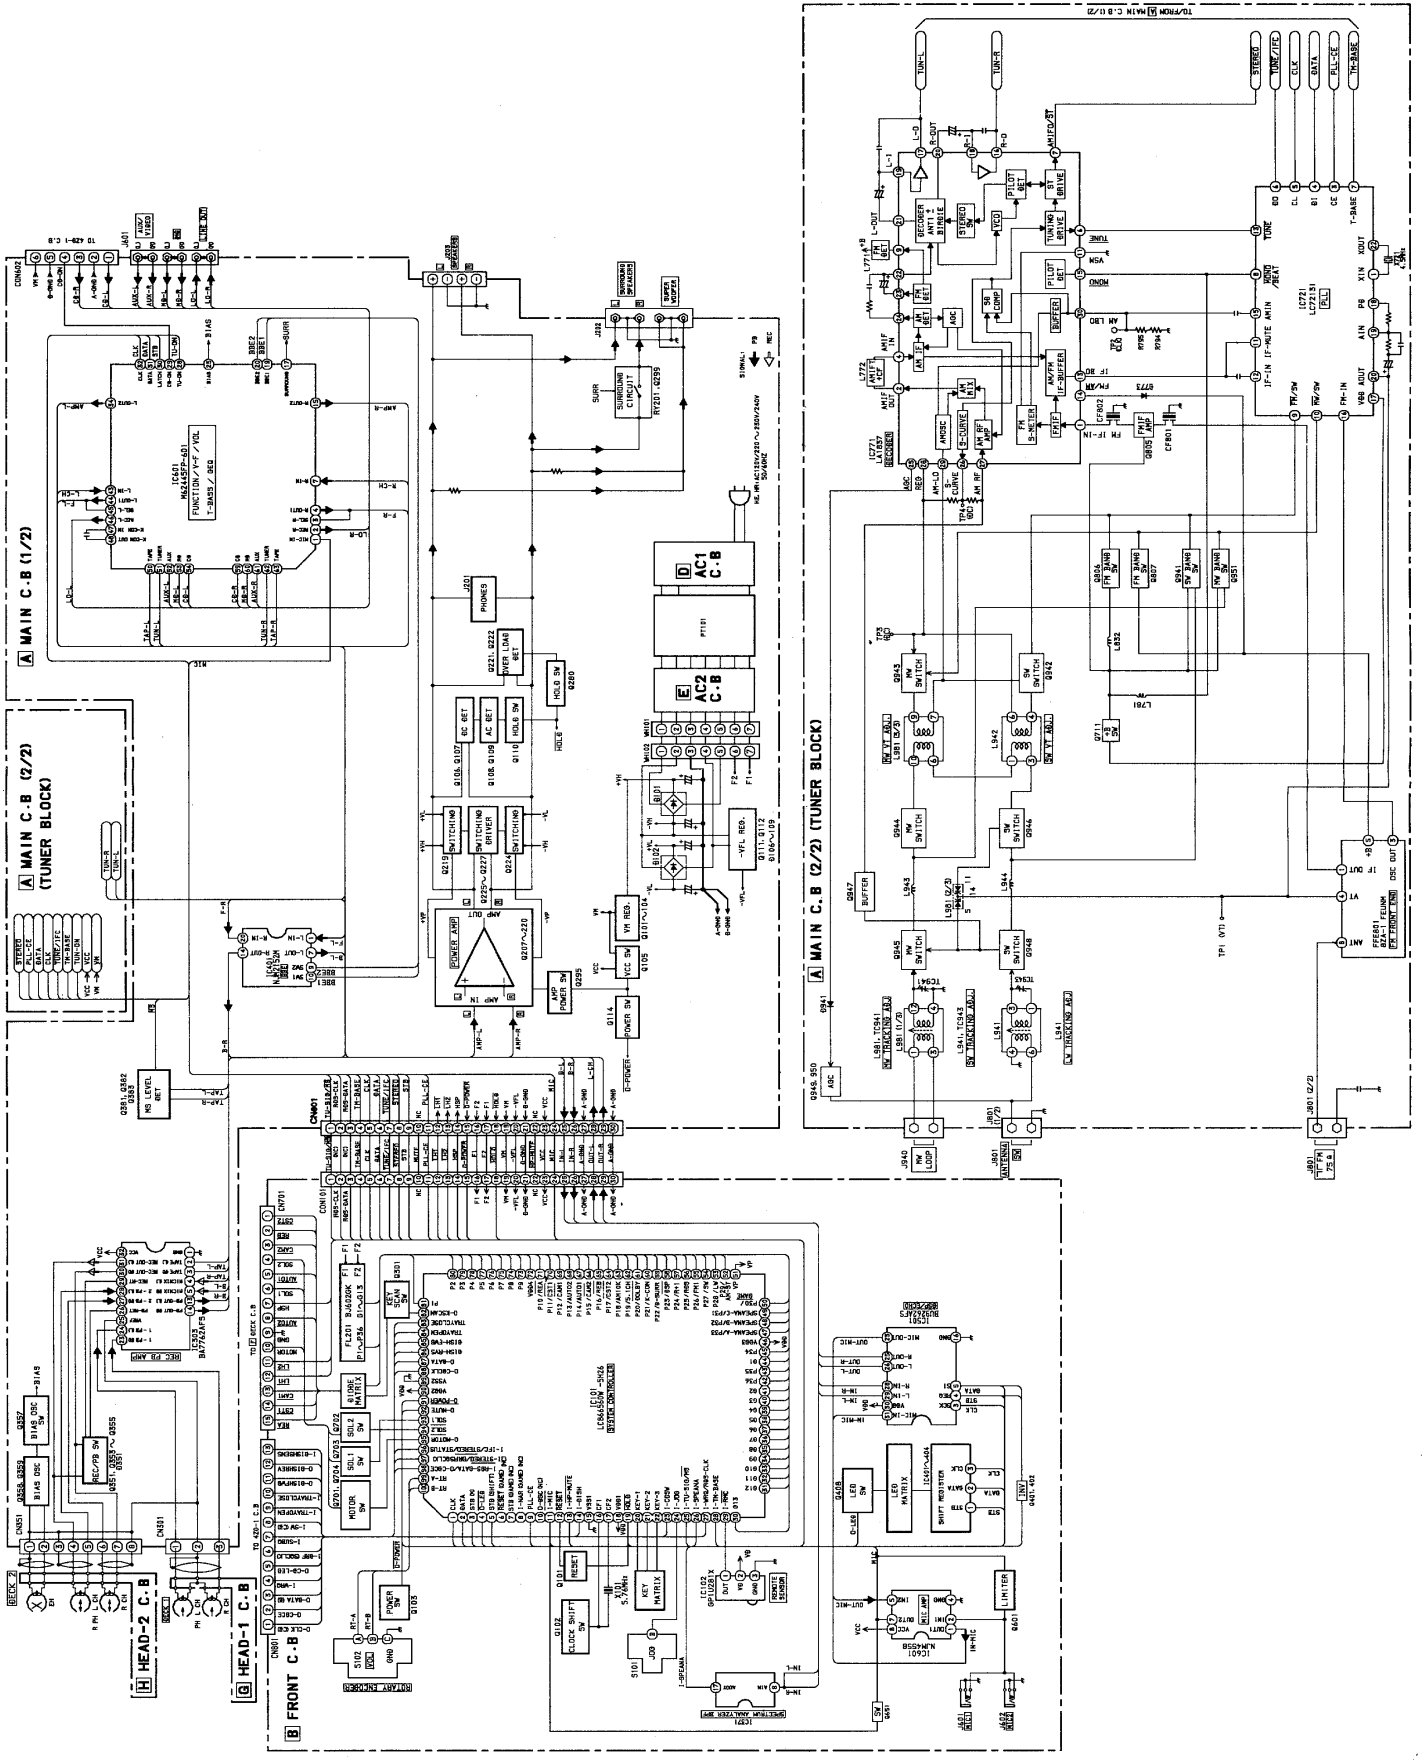



SCHEMATIC DIAGRAM - 2 (EZ, K: MAIN / FRONT)

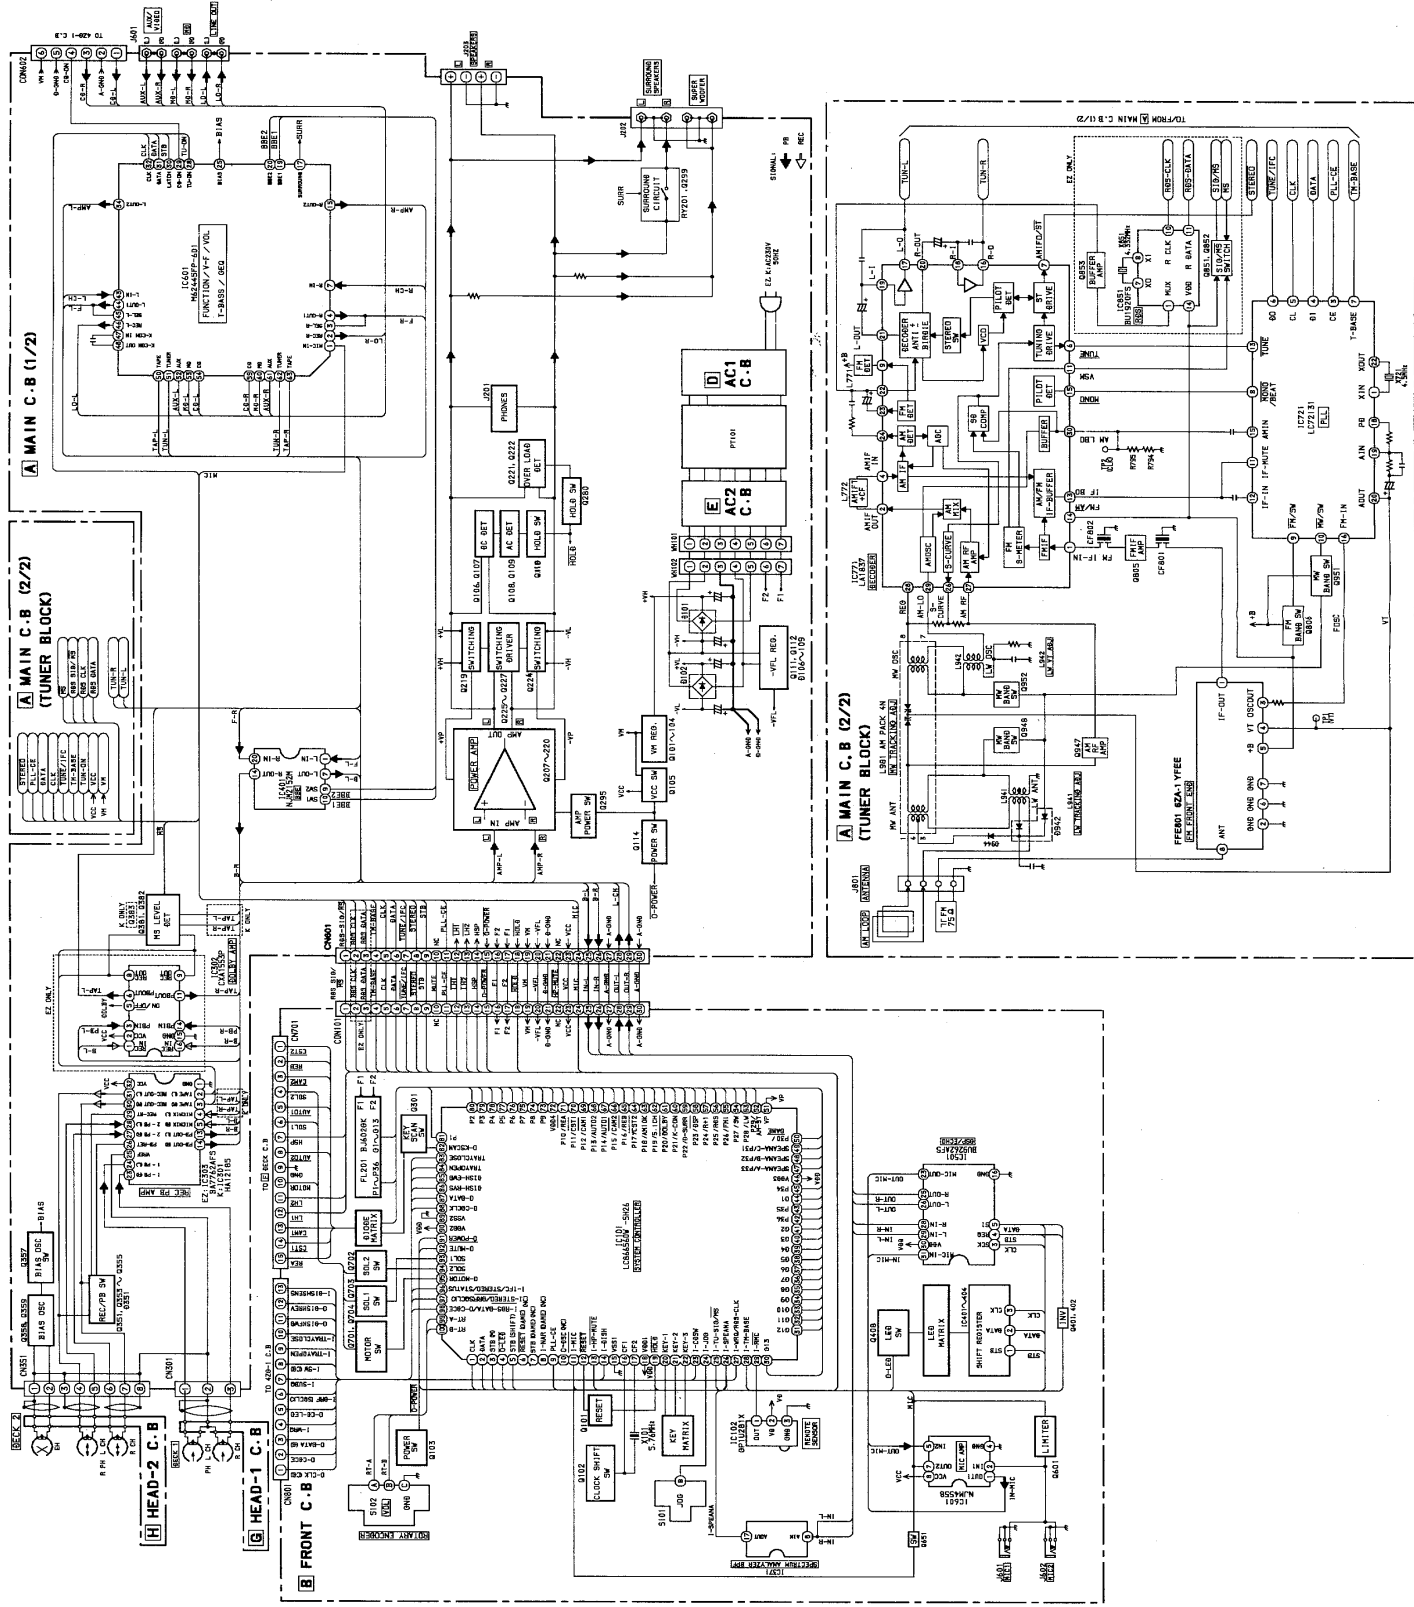

1 2 3 4 5 6 7 8 9 10 11 12 13 14

A MAIN C.B.

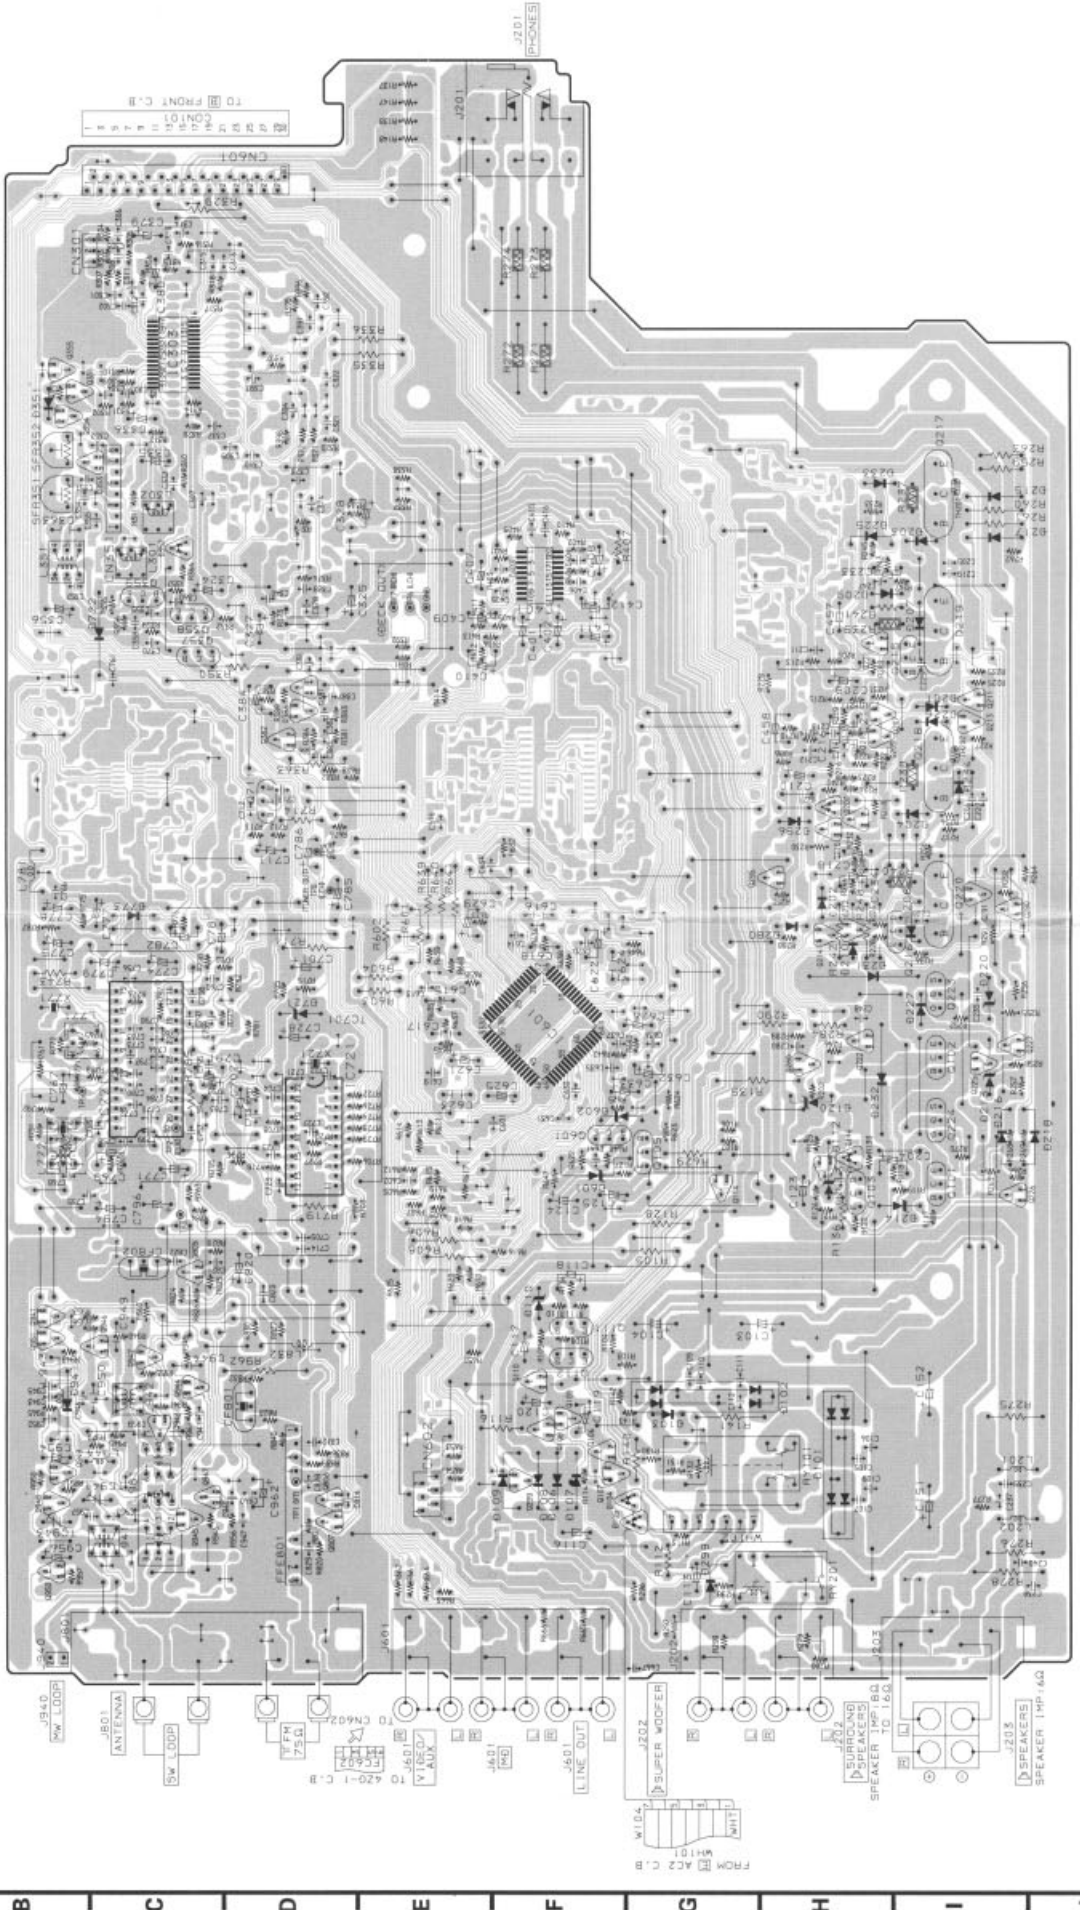

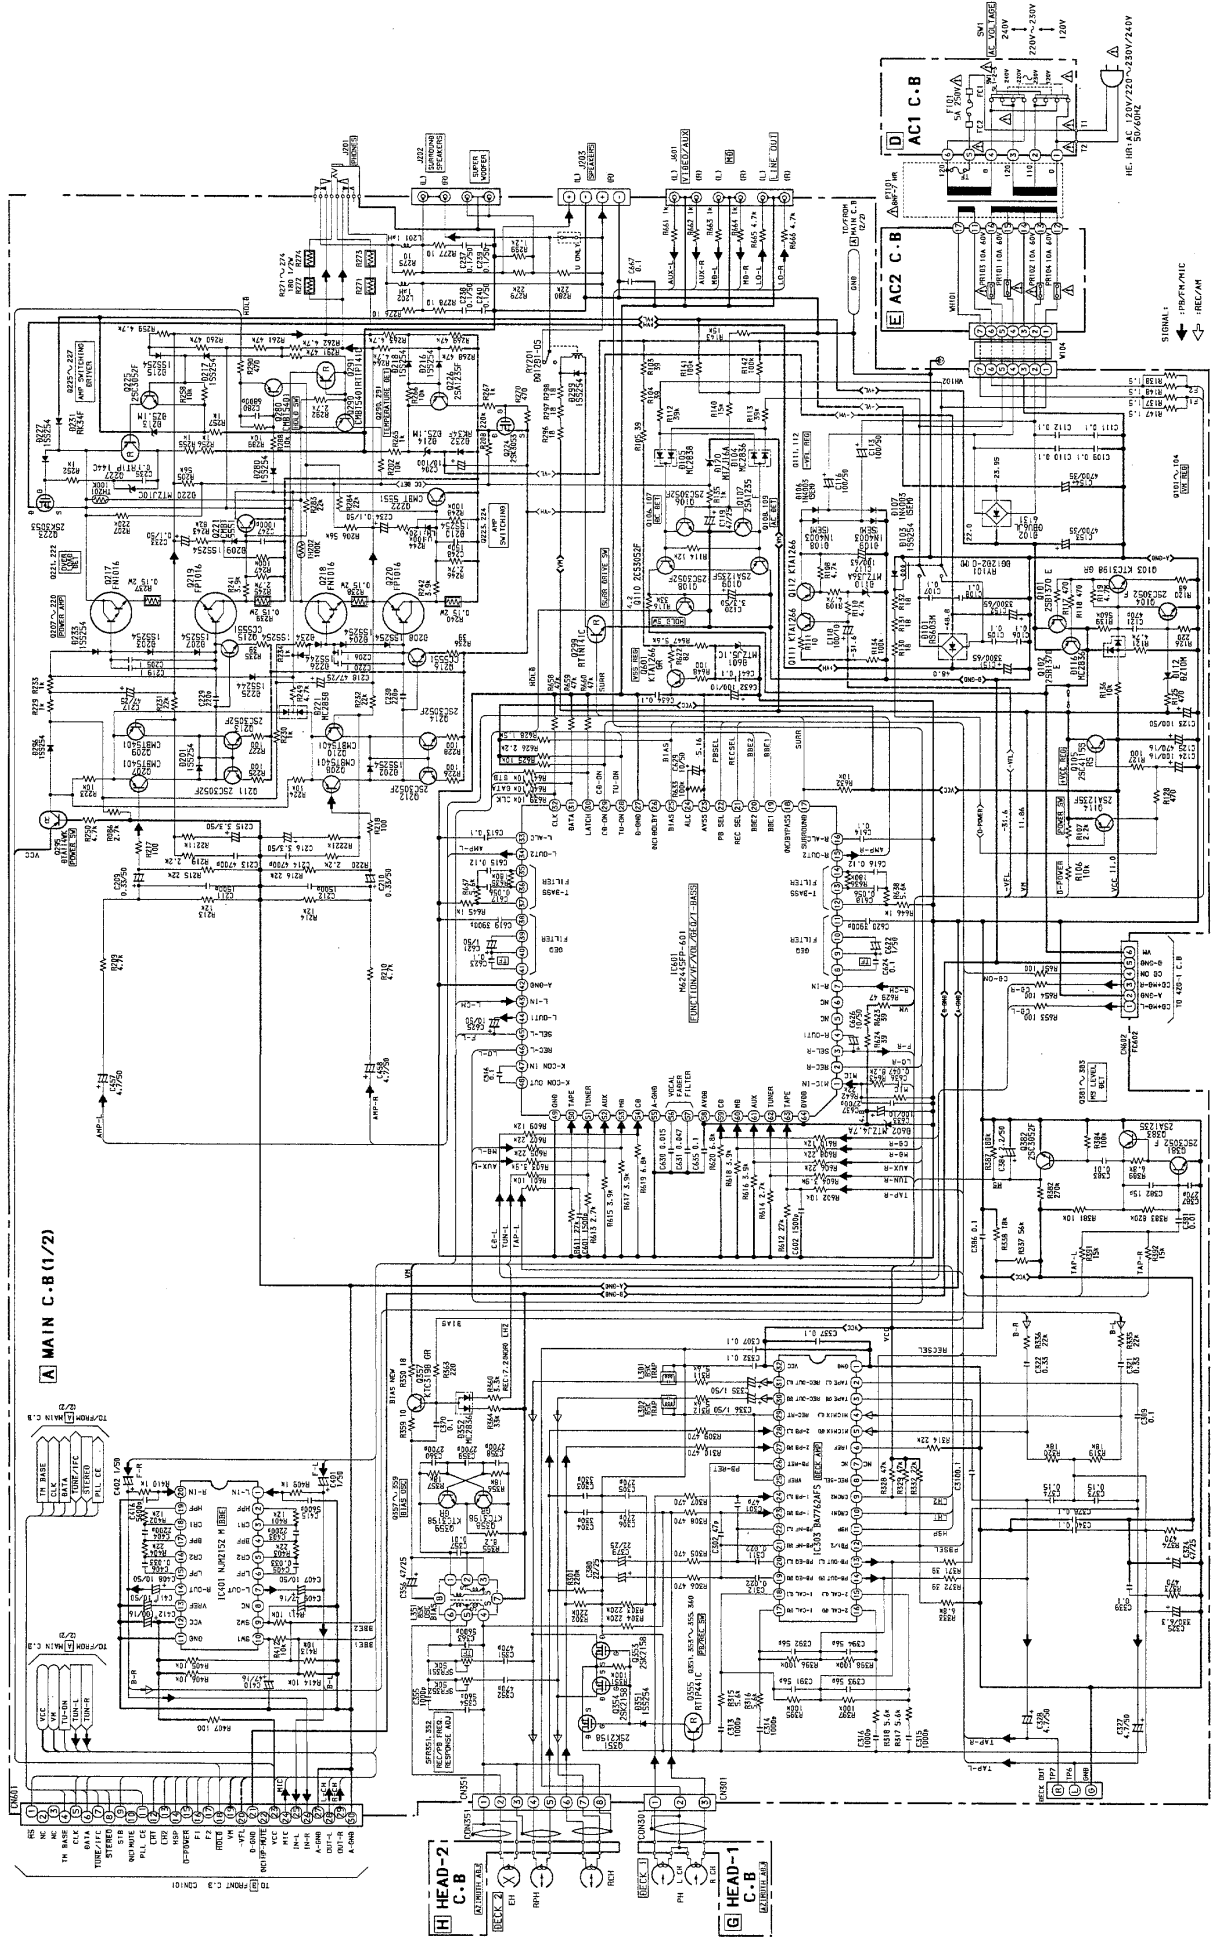


A MAIN C-B (1/2)

H HEAD-2 C-B

G HEAD-1 C-B

E AC2 C-B


D AC1 C-B

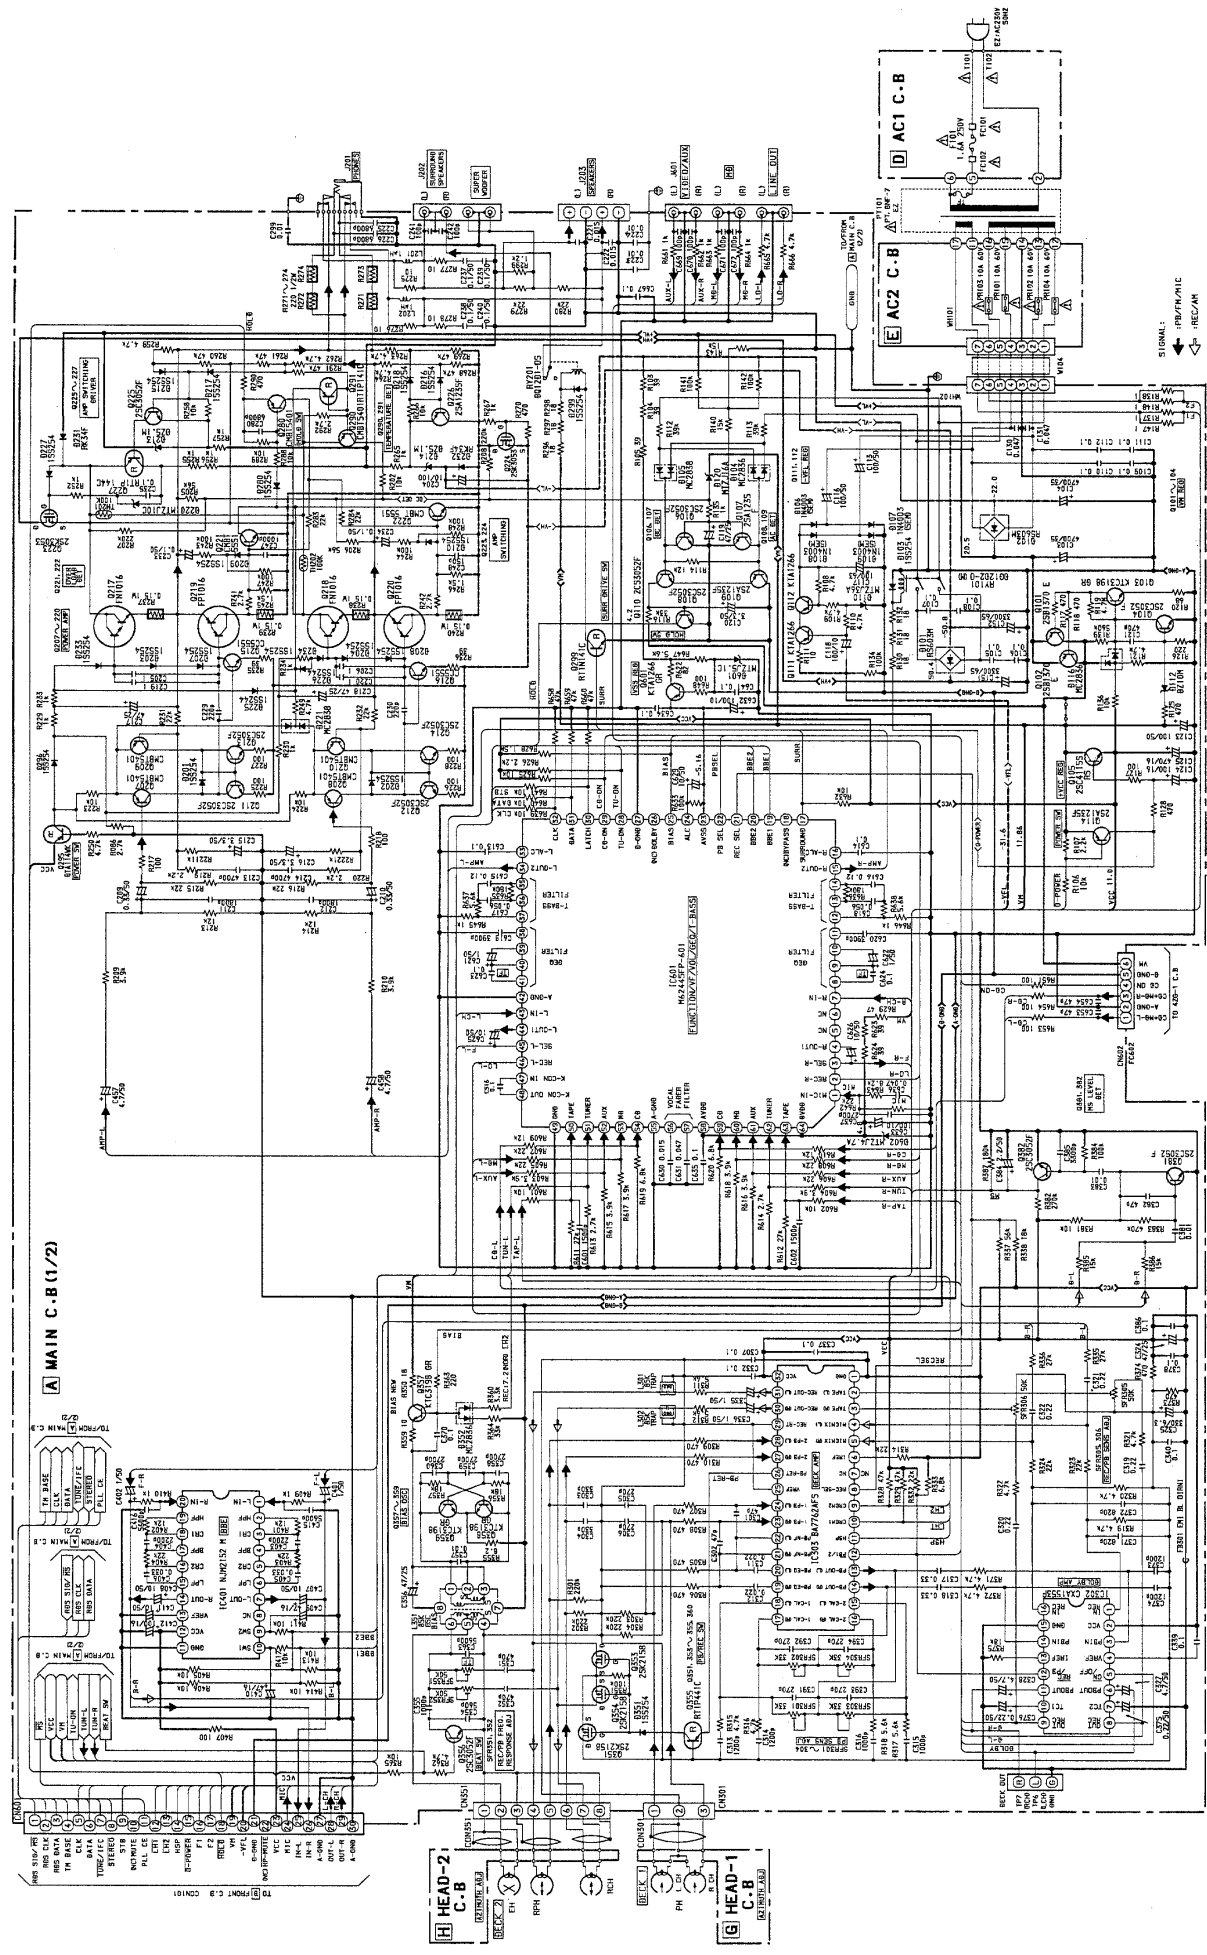



1 2 3 4 5 6 7 8 9 10 11 12 13 14

A B C D E F G H I J


A MAIN C.B

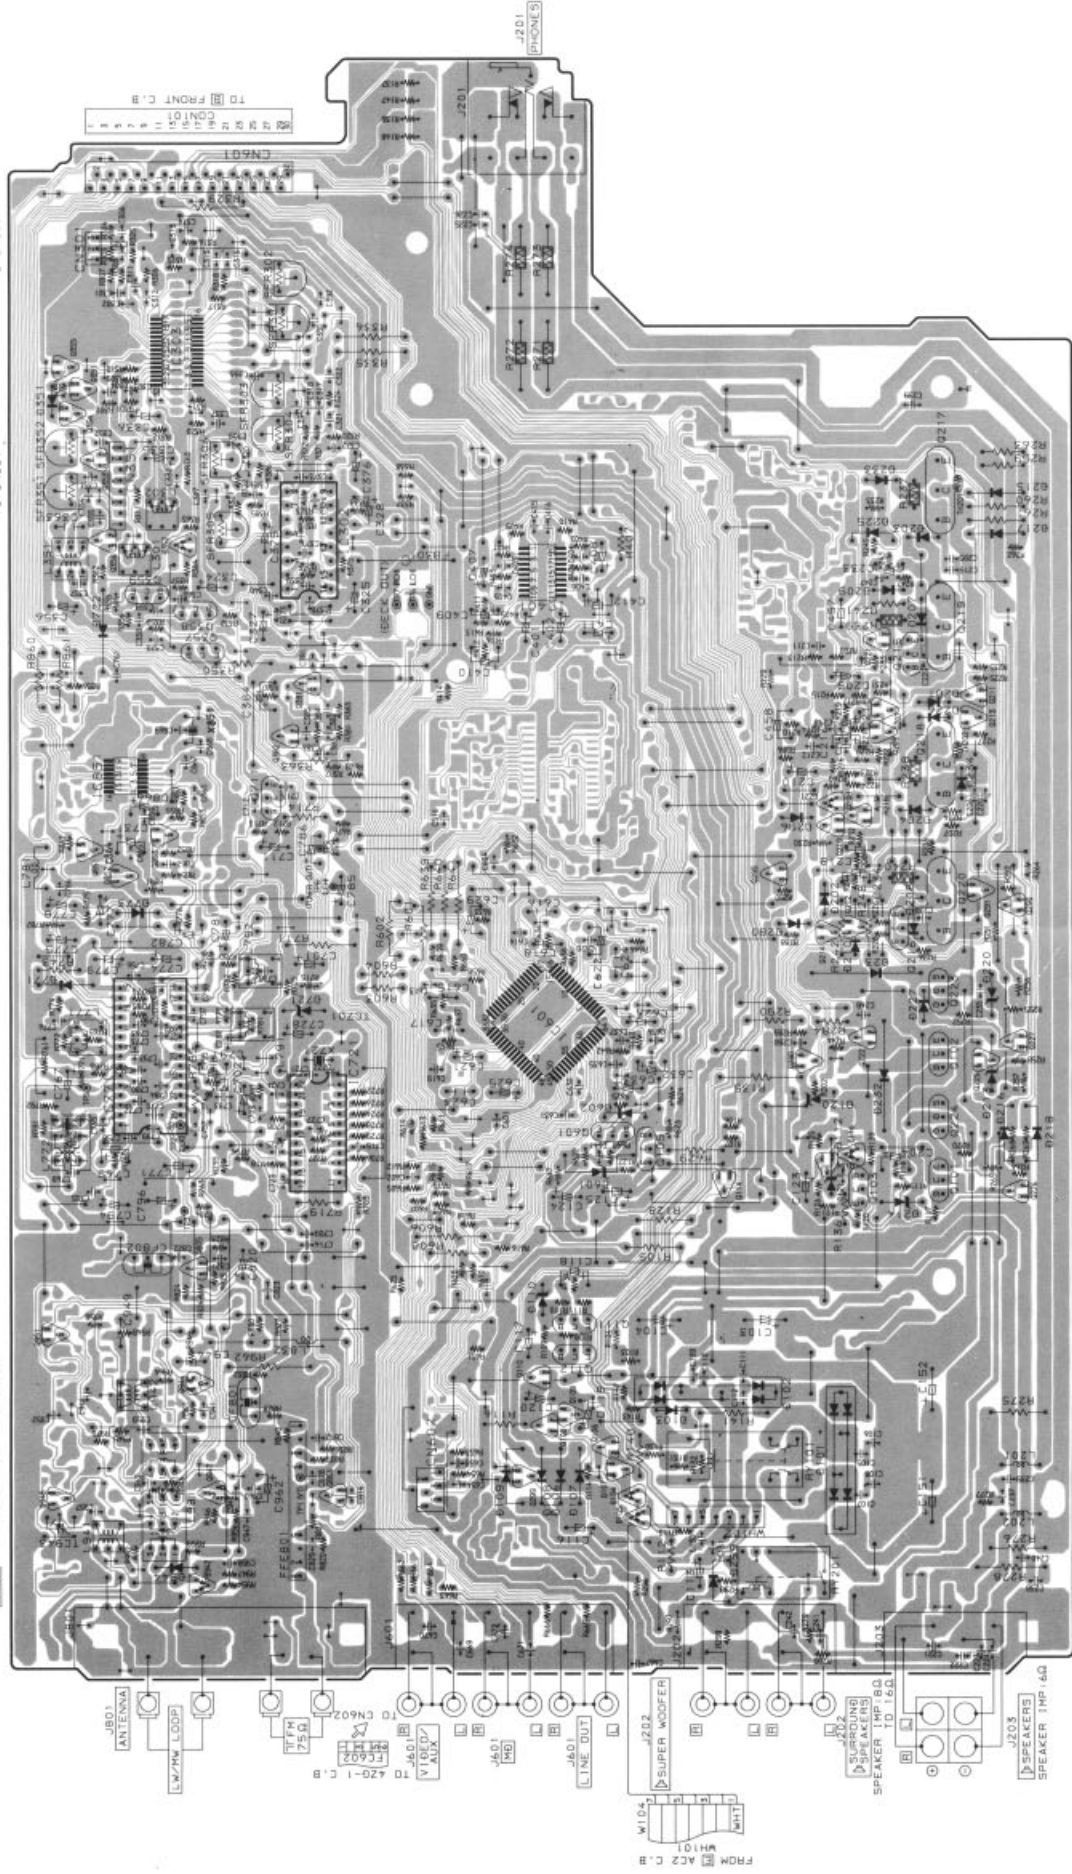

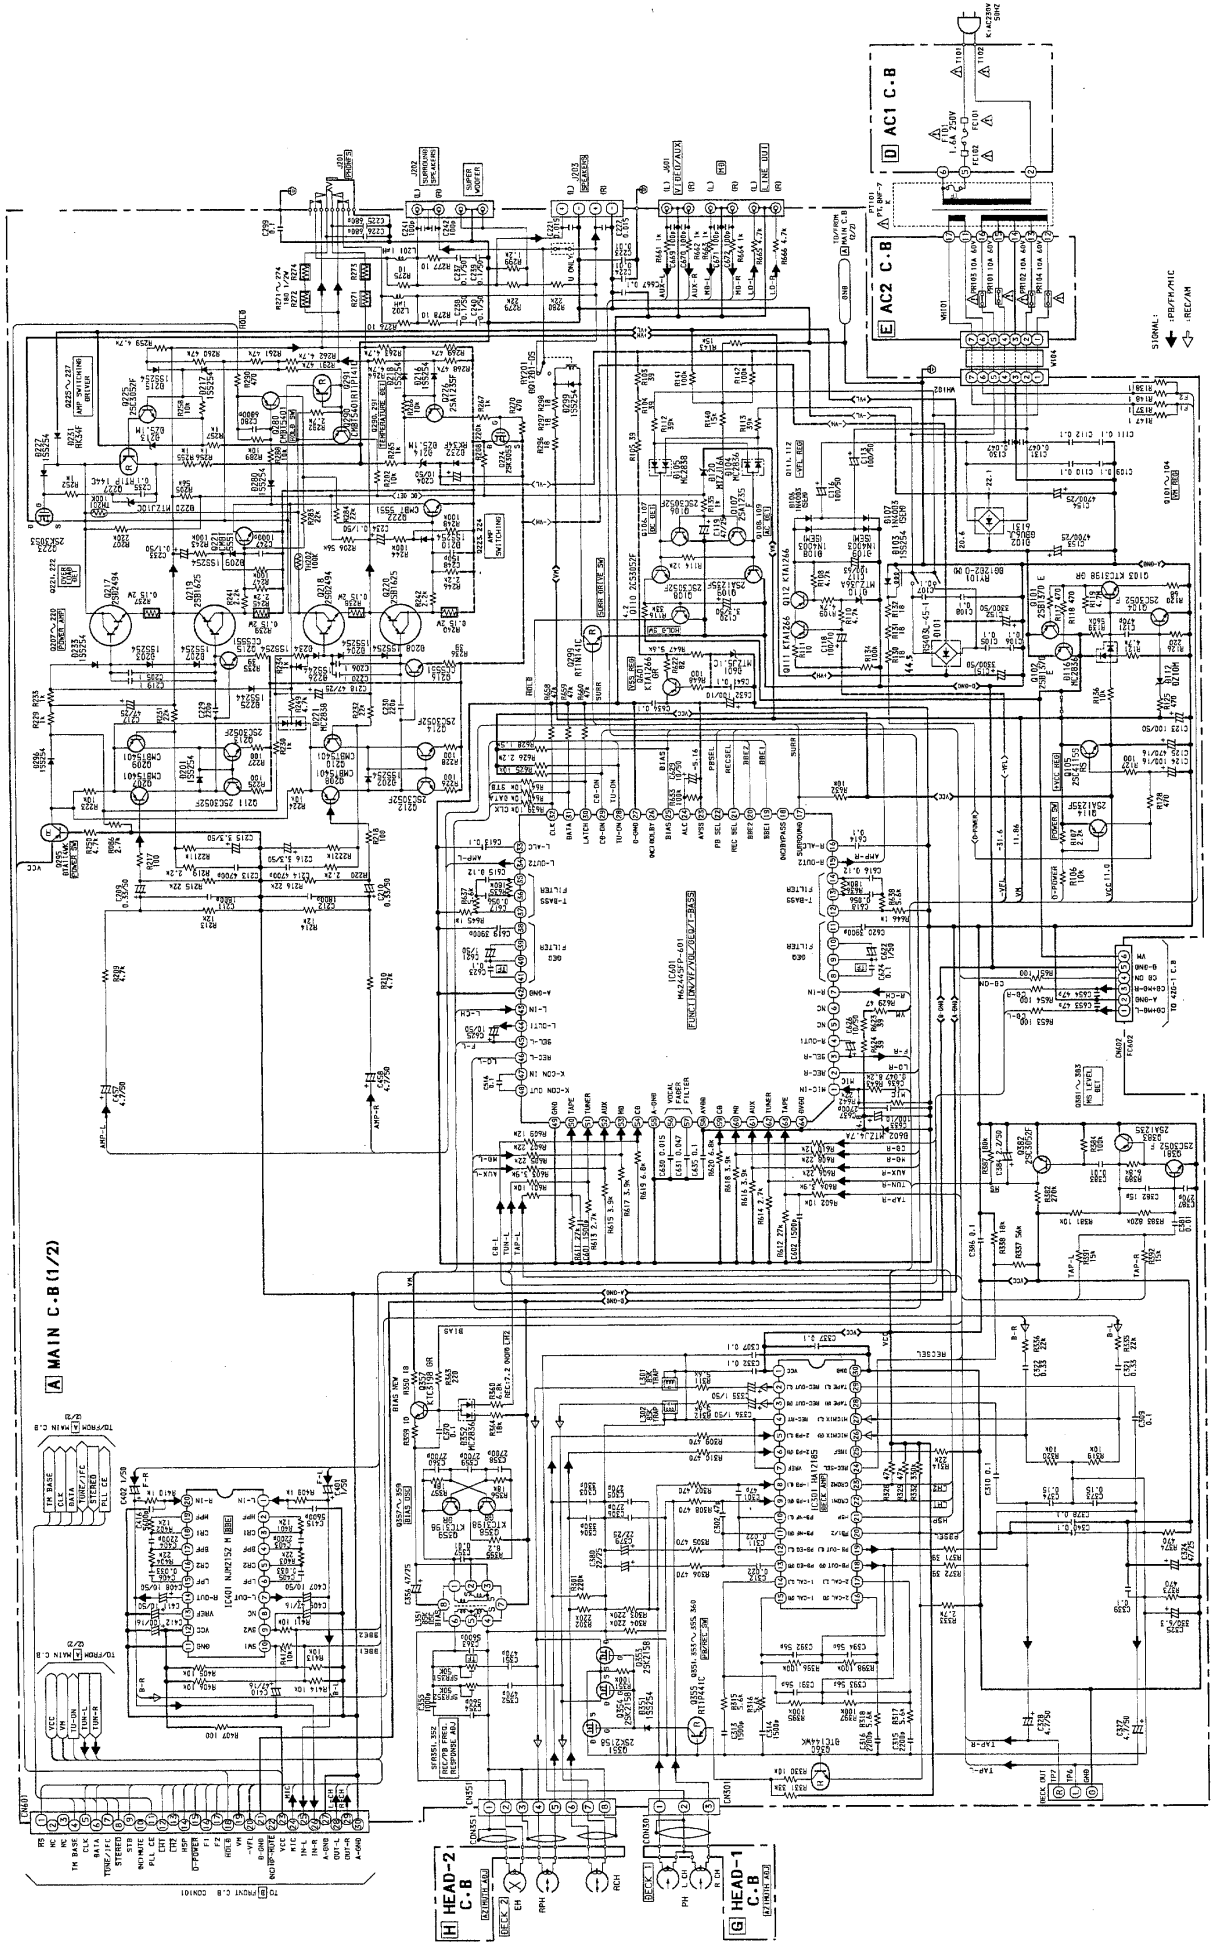


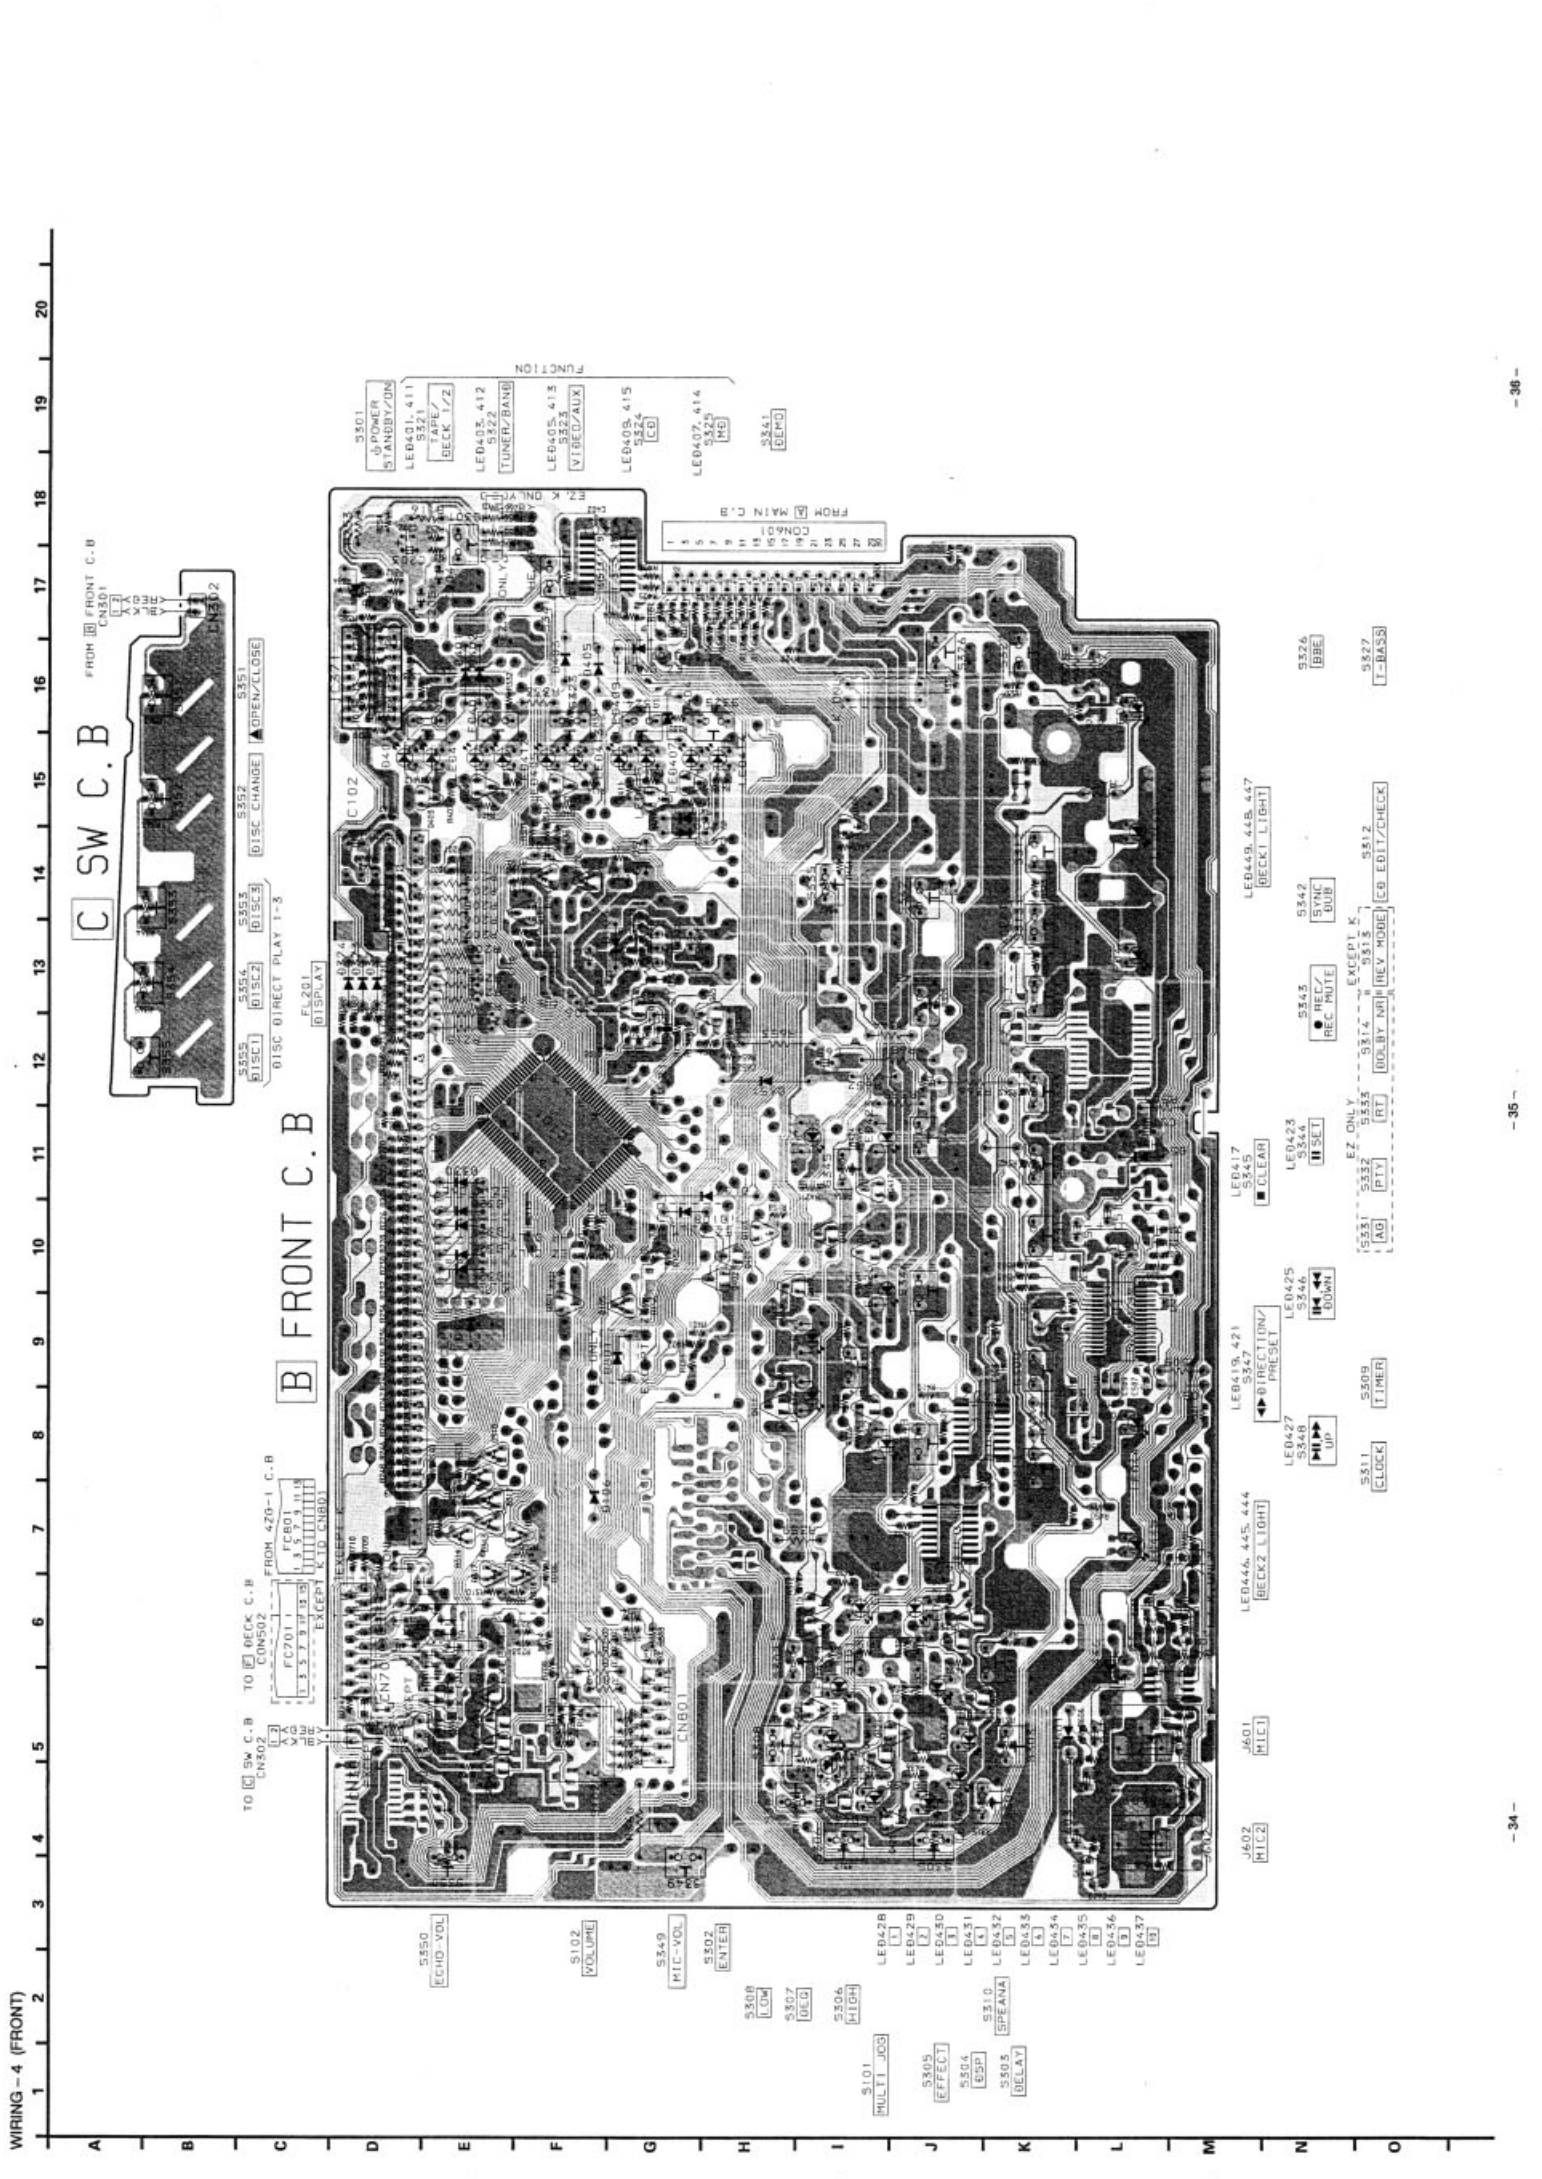


WIRING-4 (FRONT)

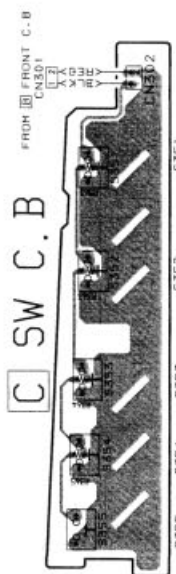


B FRONT C.B




- FUNCTION
- S301 POWER STANDBY/ON
 - LED402, 411 TAPE/ DECK 1/2
 - LED403, 412 TUNER/BAND
 - LED405, 413 5324 5325
 - VIBED/AUX
 - LED409, 415 5324
 - LED407, 414 5324
 - S341 DEMO

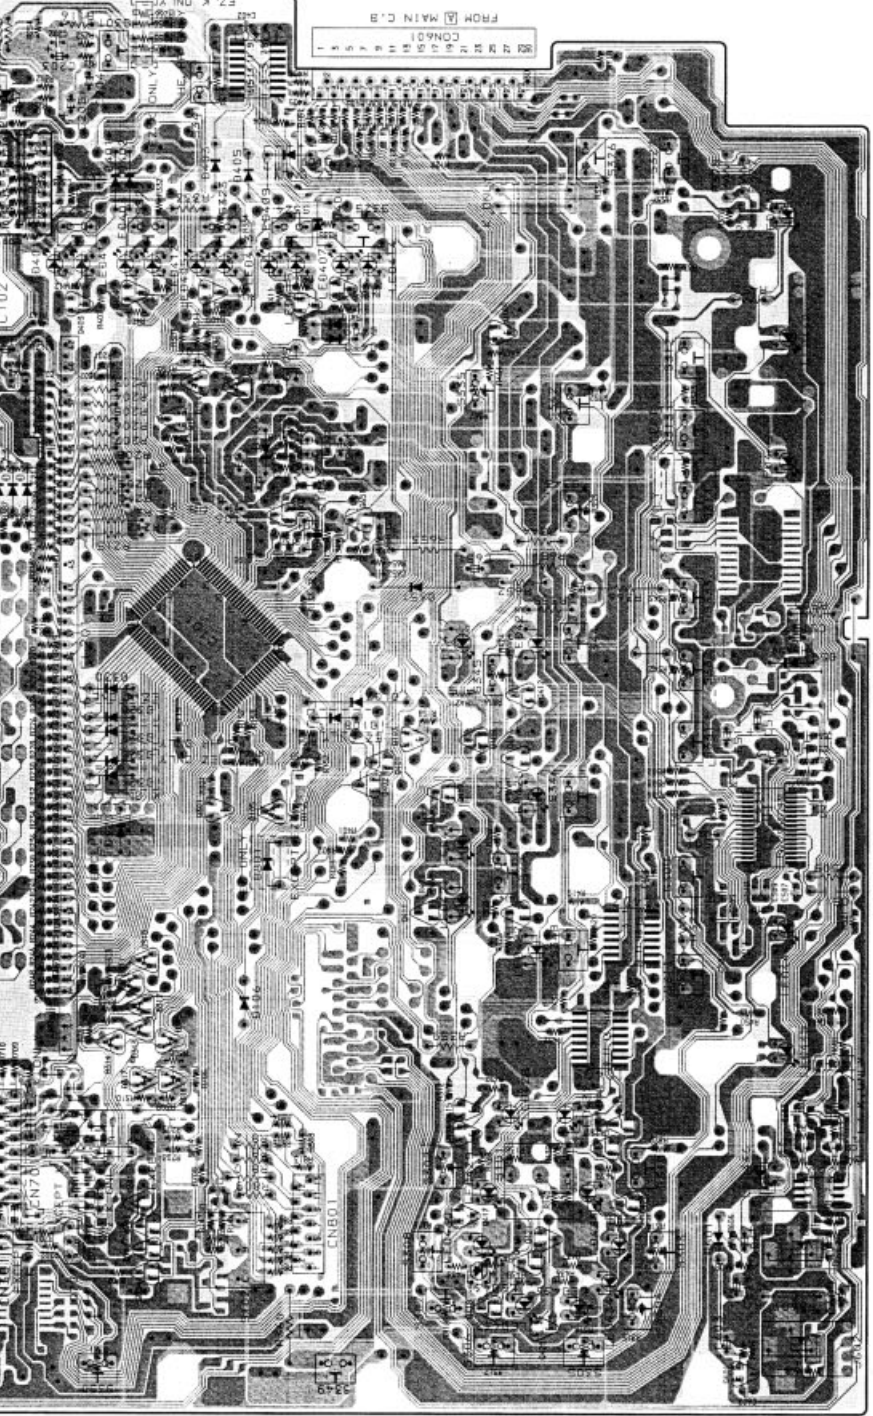


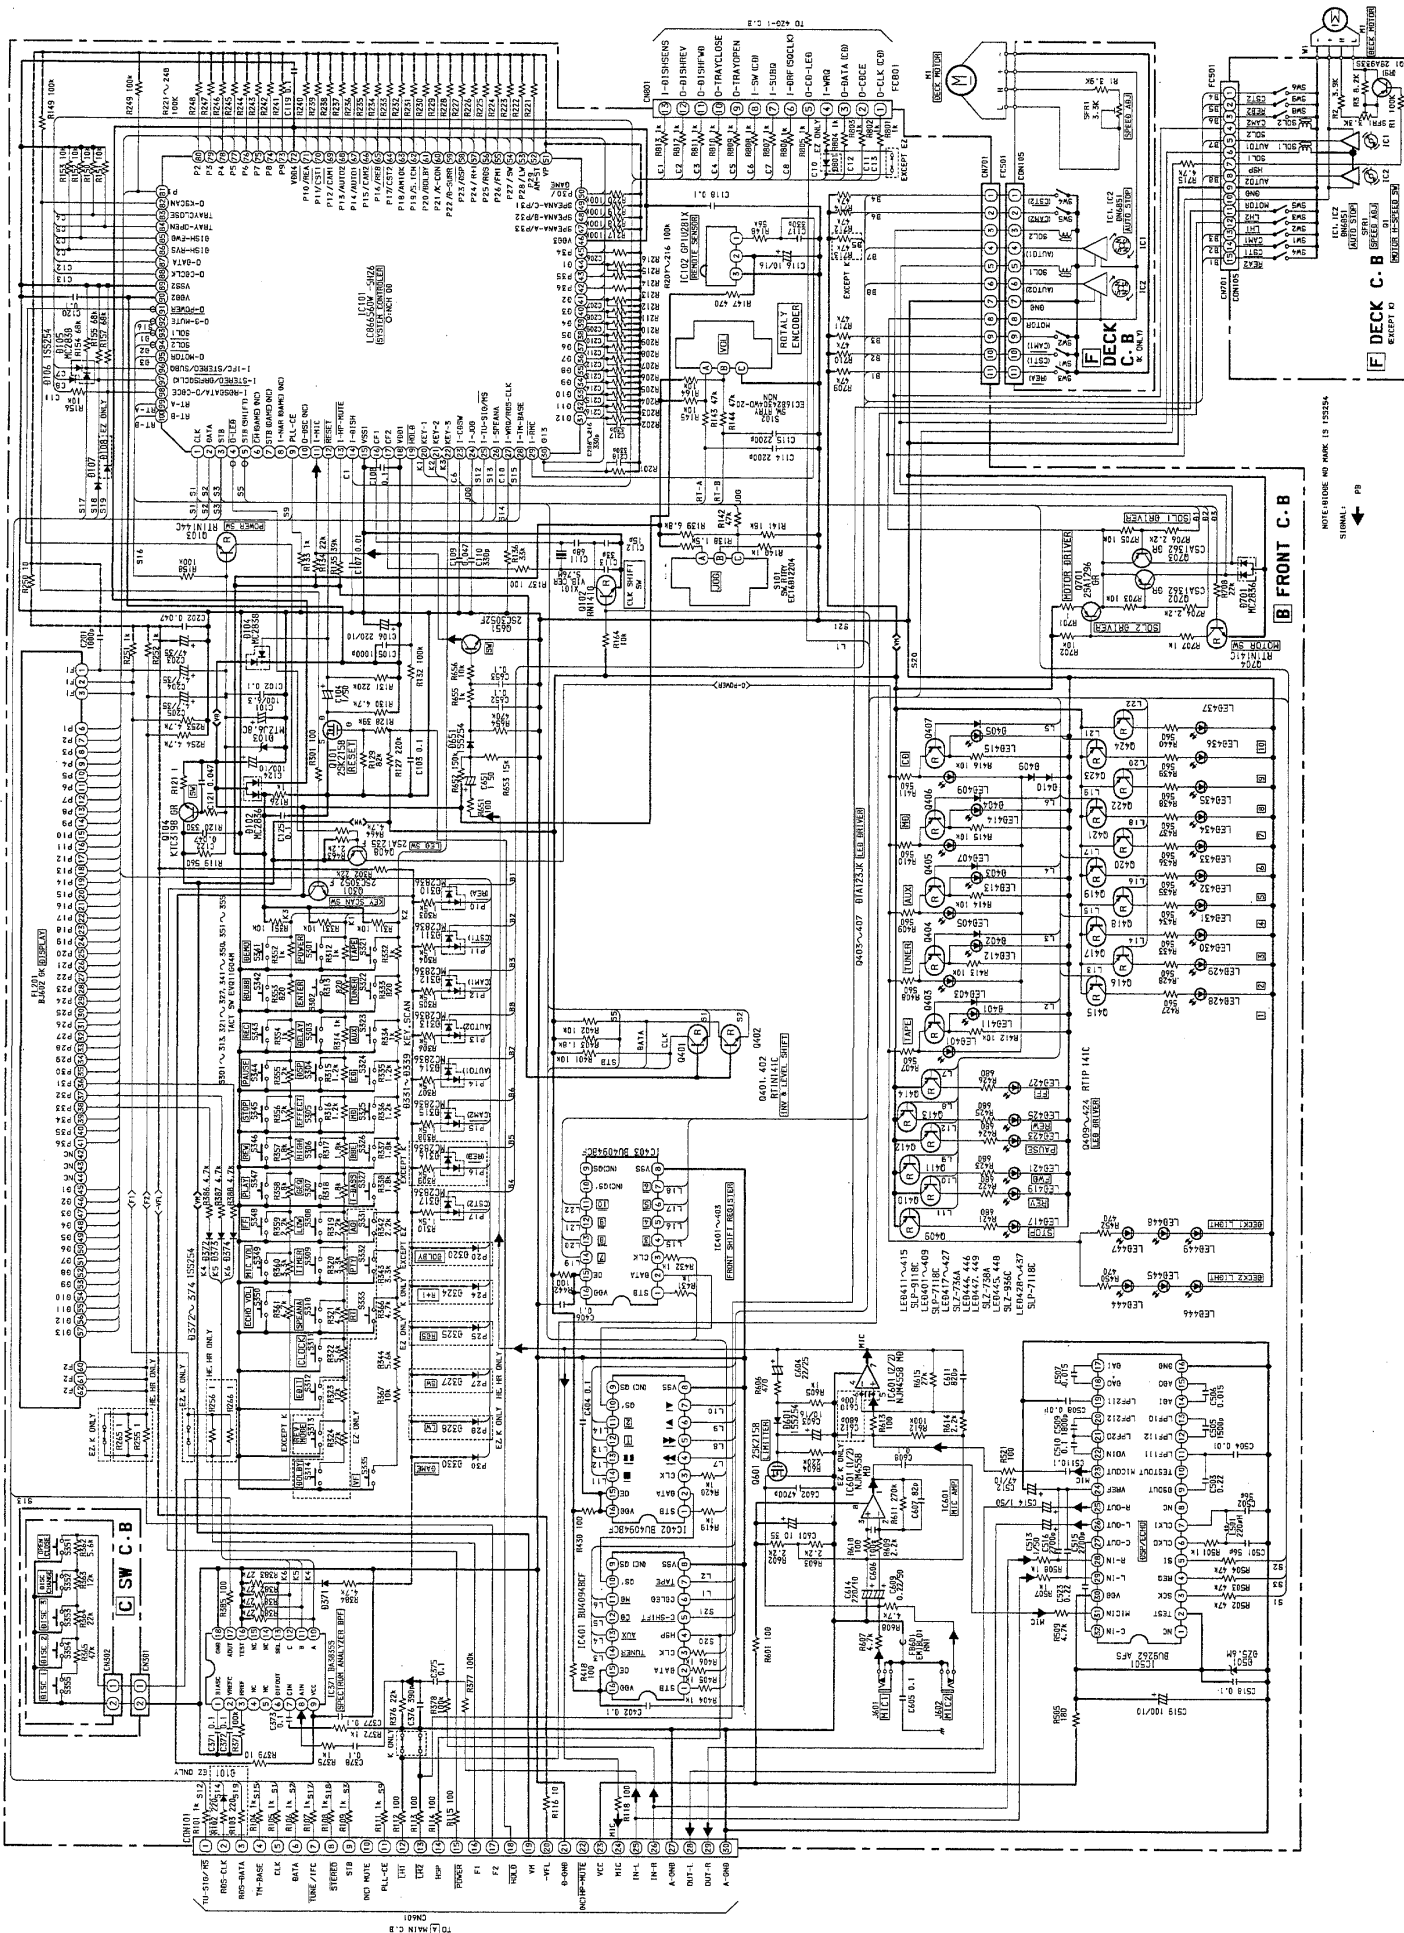


IC BLOCK DIAGRAM - 1
IC, NJM2152M

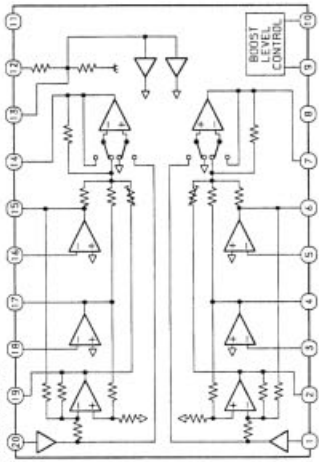


IC, LC72131D

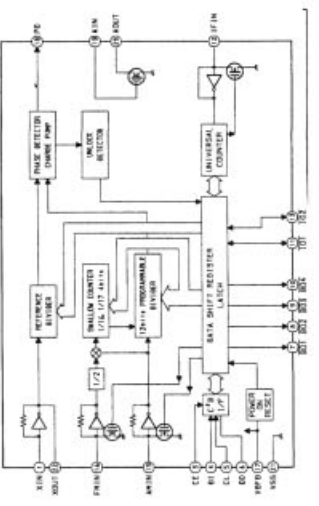


IC, BU6262AFS

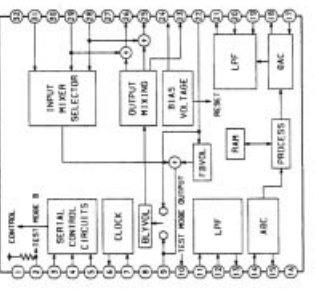


WIRING - 5 (AC1 / AC2)

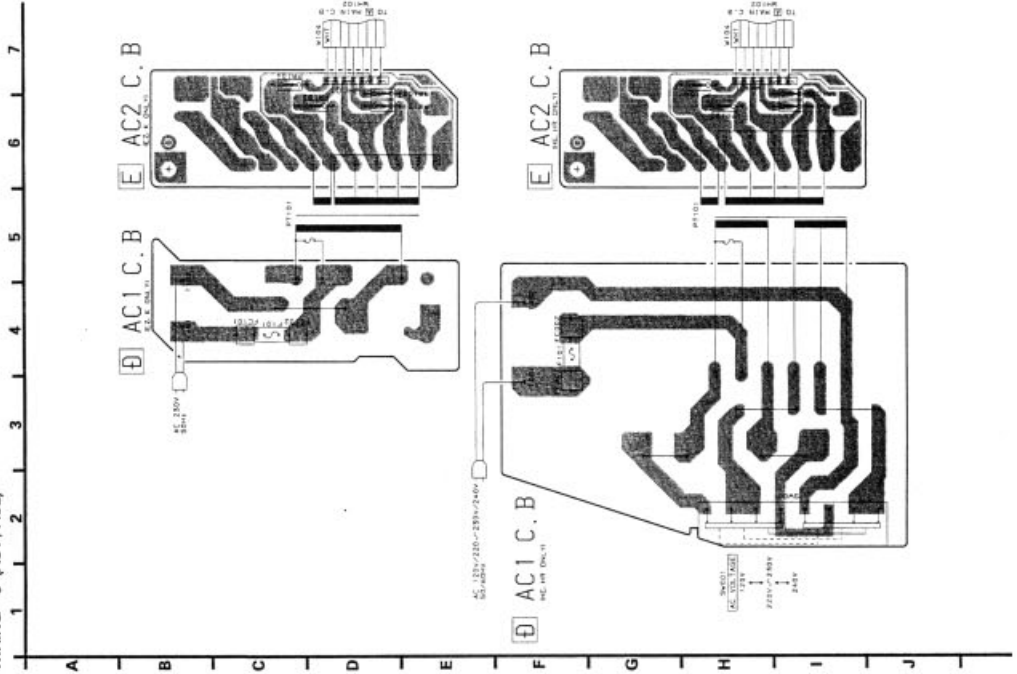


WIRING - 6 (DECK - 6ZM - 3 YPR2N)

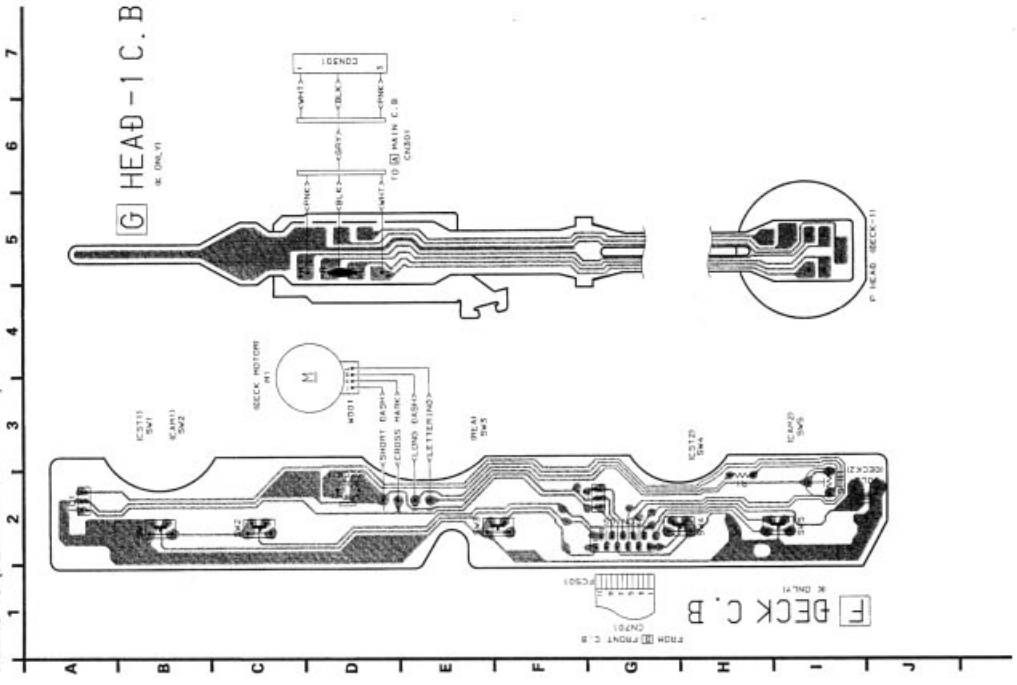

WIRING - 7 (DECK - 2ZM - 3MK2 PRANM / YPR4N)

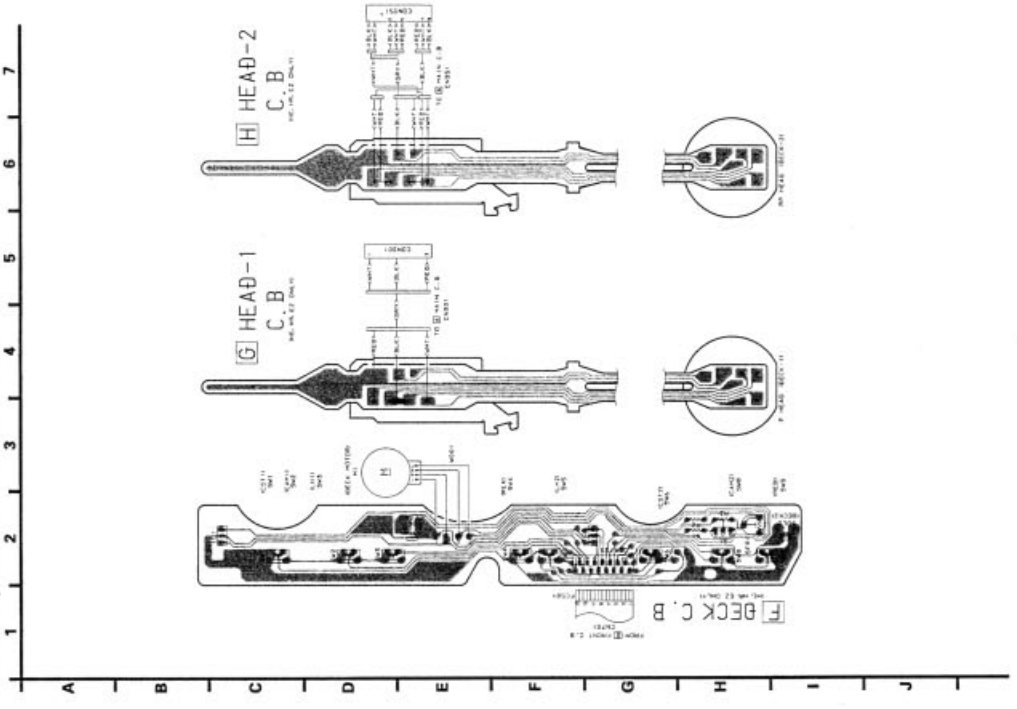


SCHEMATIC DIAGRAM - 7 (HE, HR : TUNER FRONT END)

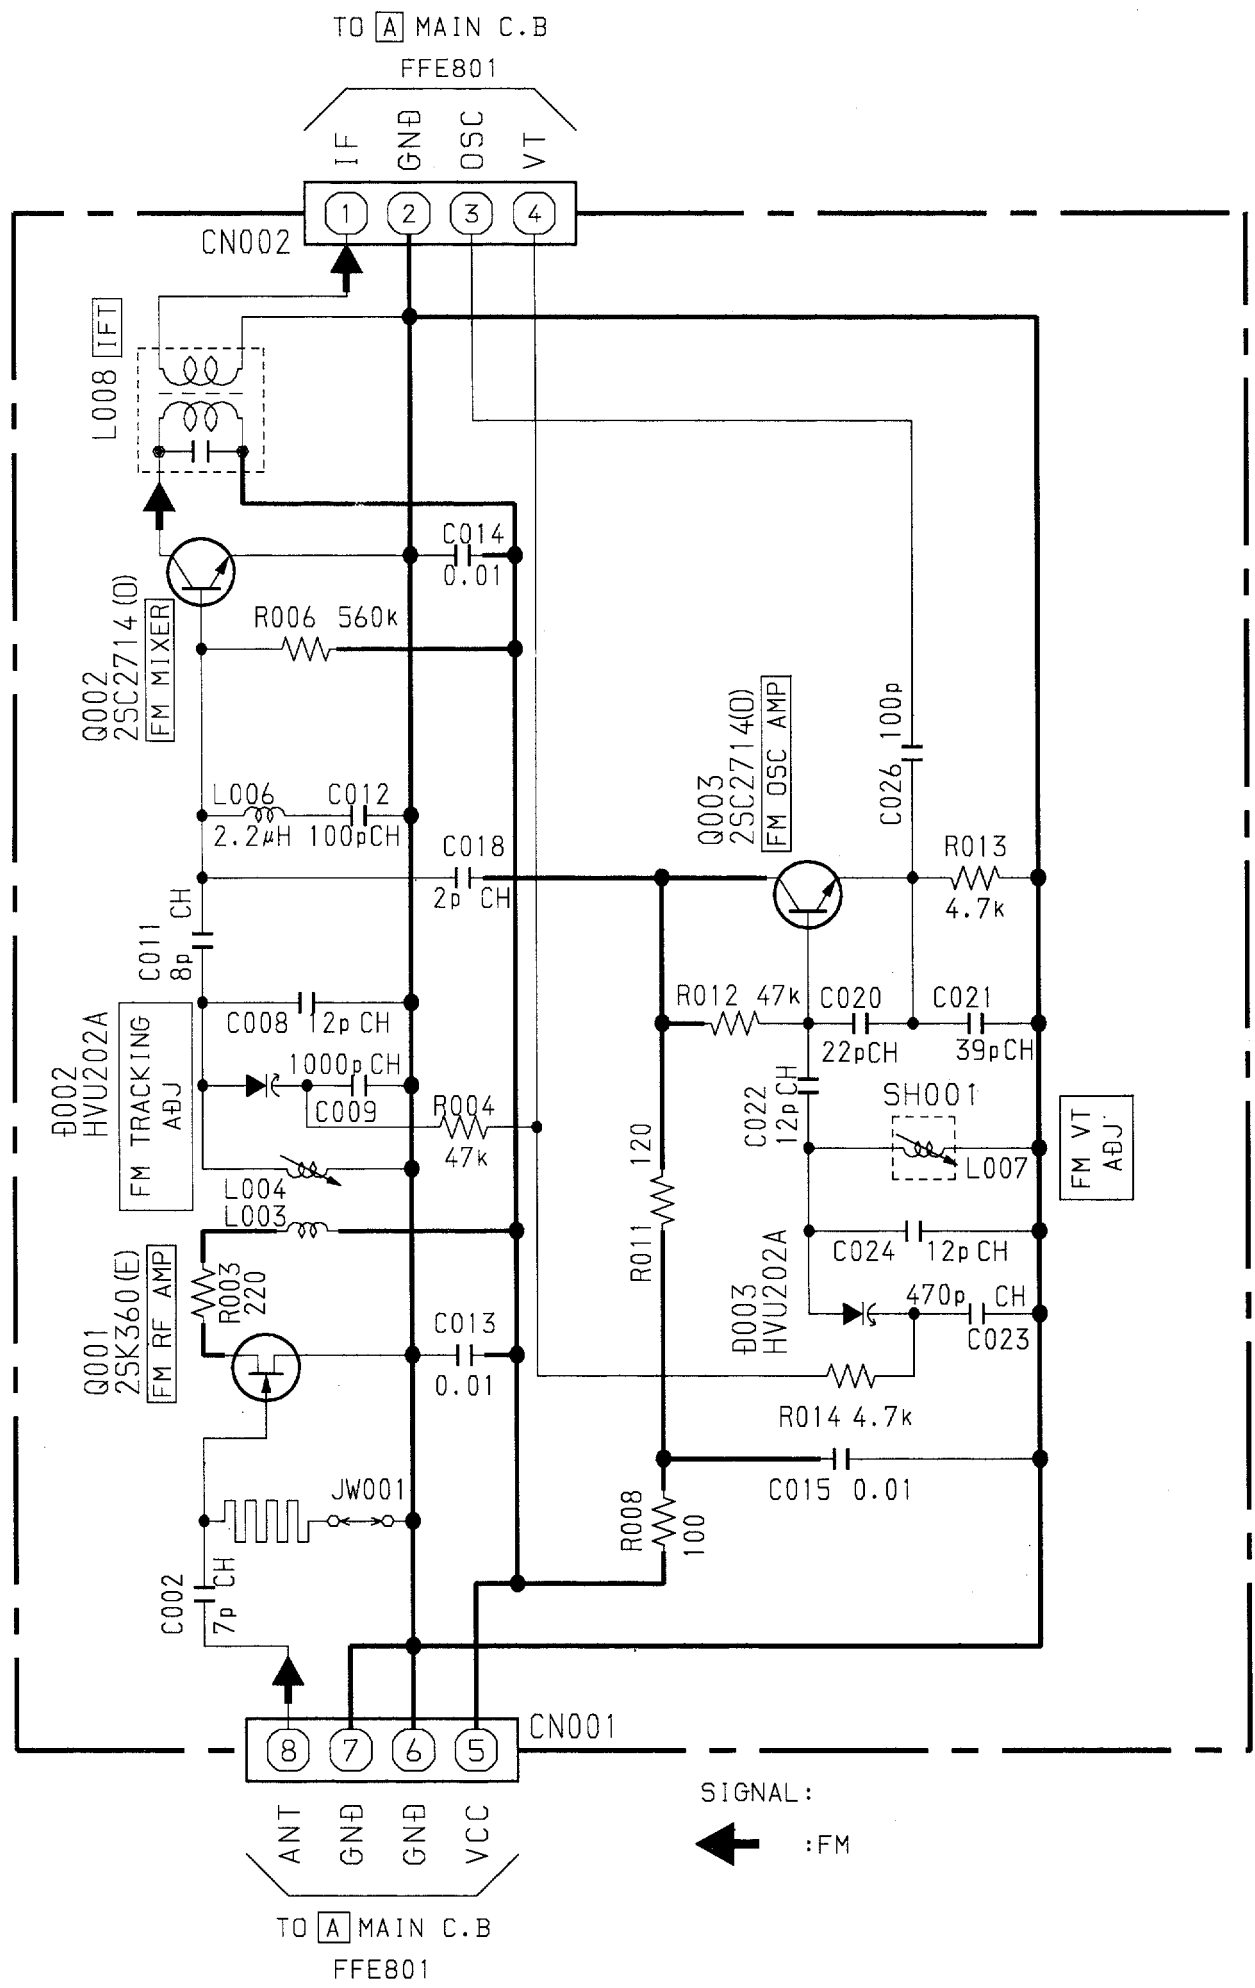


IC BLOCK DIAGRAM - 2


IC, BA3835S

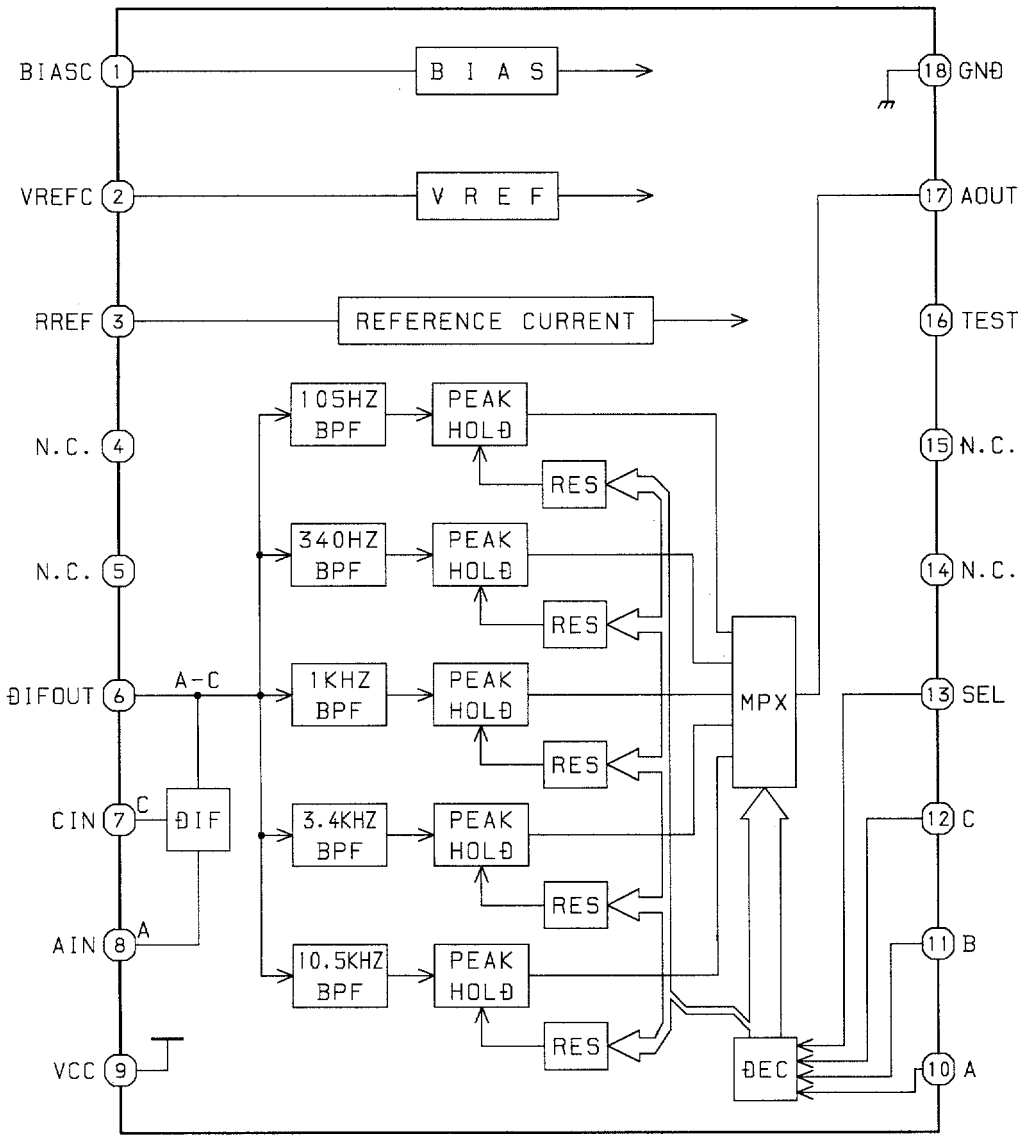

IC, LA1837

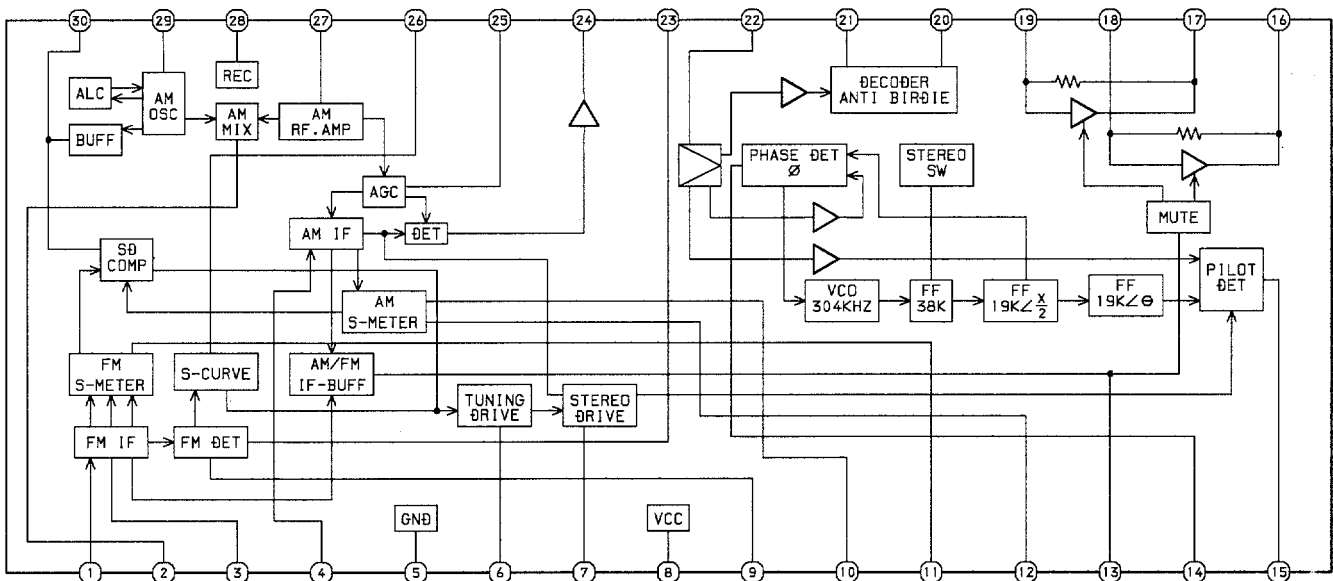

IC, BU4094BCF

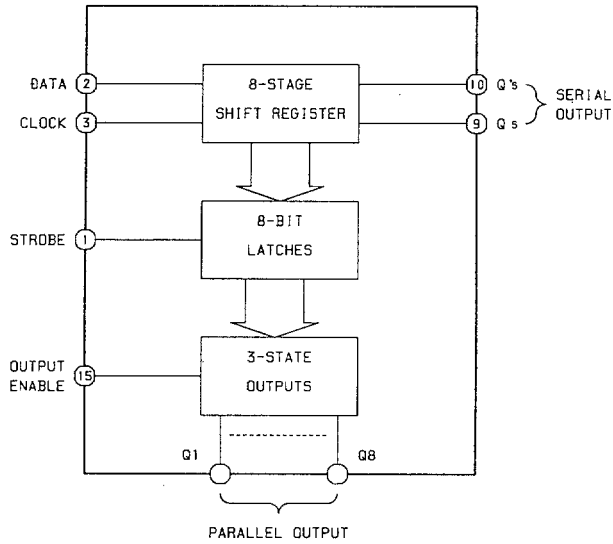


TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Q's	Q's
	L	X	X	Z	Z	Q7	NO Chg.
	L	X	X	Z	Z	No Chg.	Q's
	H	L	X	No Chg.	No Chg.	Q7	No Chg.
	H	H	L	L'	Qn-1	Q7	No Chg.
	H	H	H	H	Qn-1	Q7	No Chg.
	H	X	X	No Chg.	No Chg.	No Chg.	Q's


Z=High Impedance

X=Don't Care


IC, M62445FP-601

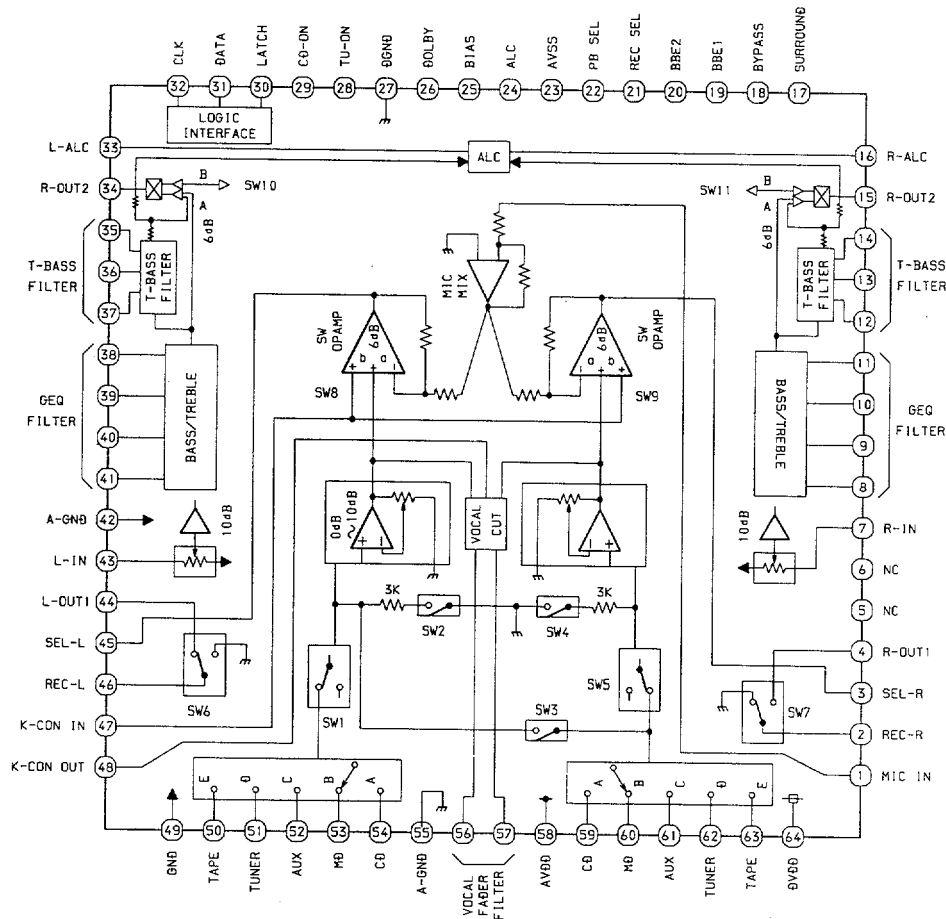


IC, HA12185NT

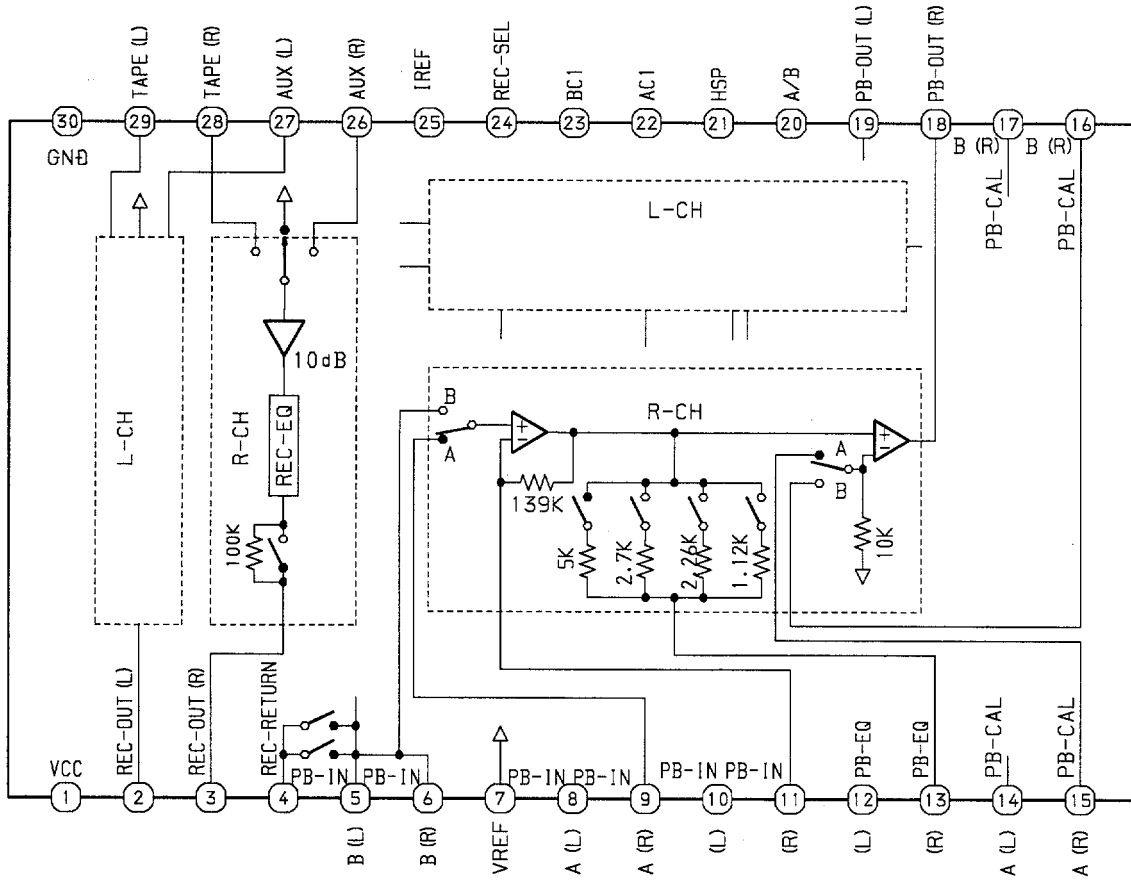


IC, BA7762AFS

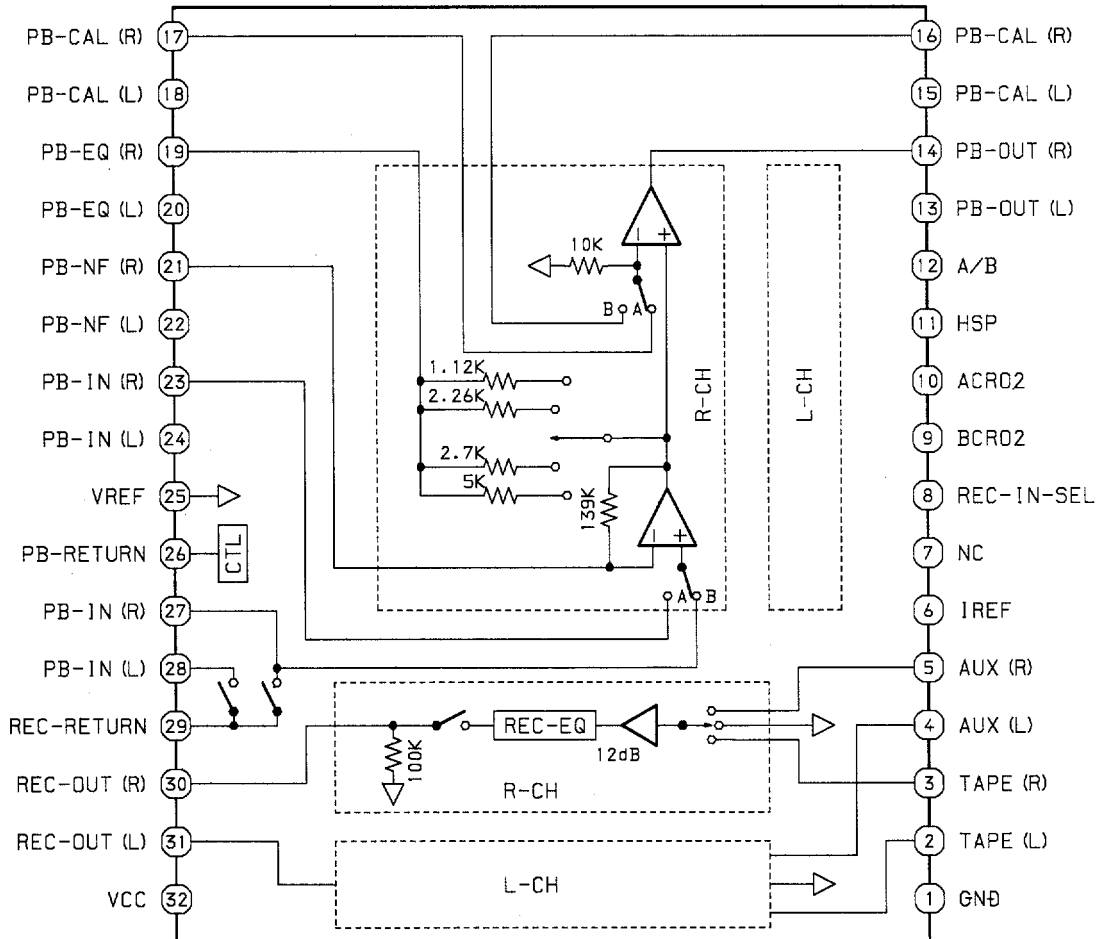

IC, BU1920FS

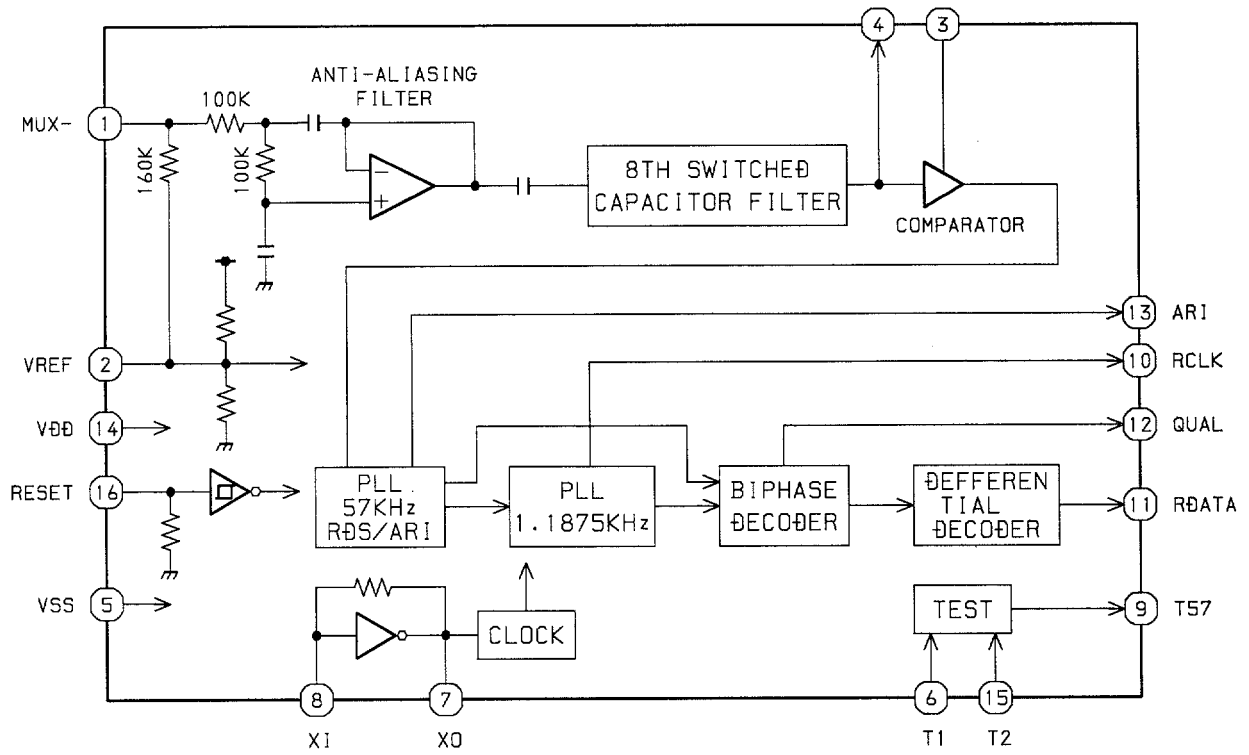

IC, CXA1533P

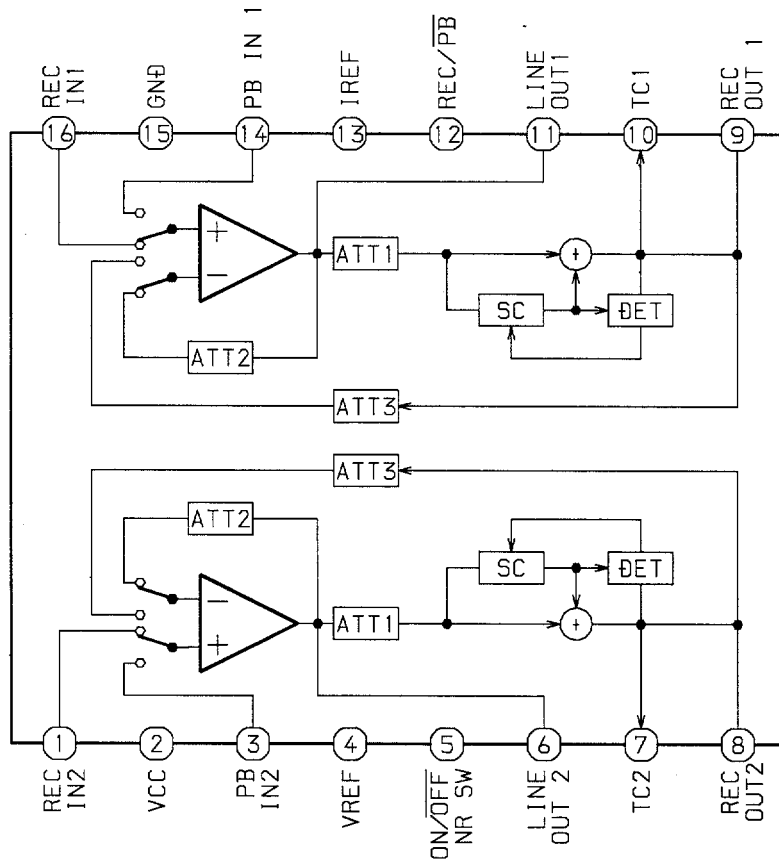



IC DESCRIPTION

IC, LC866560W-5H26


Pin No.	Pin Name	I/O	Description
1	CLK	O	CLOCK output for MAIN,FRONT PWB.
2	DATA	O	DATA output for MAIN, FRONT PWB.
3	STB	O	Latch strobe output for MAIN PWB.
4	$\overline{\text{O-LED}}$	O	LED $\overline{\text{ON/OFF}}$ output.
5	STB (SHIFT)	O	Latch strobe output for FRONT shift register.
6	$\overline{\text{CH(GAME)}}$	I	Channel control output for Sound IC. (Not connected)
7	STB (GAME)	O	Latch strobe output for Sound IC. (Not connected)
8	I-NAR (GAME)	I	Sound IC NAR input. (Not connected)
9	PLL-CE	O	PLL IC chip enable output.
10	O-DSC	O	Serial data output for PROLOGIC PWB. (Not connected)
11	$\overline{\text{I-MIC}}$	I	Microphone input for AUTO VF display.
12	$\overline{\text{RESET}}$	I	Reset input.
13	$\overline{\text{I-HP-MUTE}}$	I	Headphone input for MUTE by PROLOGIC.
14	I-DISH	I	CD turntable photo sensor A/D converter input.
15	VSS 1	-	GND.
16	CF 1	-	5.76MHz oscillator circuit.
17	CF 2	-	
18	VDD 1	-	Power supply input.
19	$\overline{\text{HOLD}}$	I	Power failure detection input. "H"normal operation, "L"main power cannot be turned on.
20	KEY-1	I	KEY input.(A/D)
21	KEY-2	I	
22	KEY-3	I	
23	I-CD SW	I	CD mechanical switch A/D converter input.
24	I-JOG	I	JOG dial A/D level input.
25	$\overline{\text{I-TU-SIG/MS}}$	I	Tuner signal and deck music sensor signal input.
26	I-SPEANA	I	A/D input for spectrum analyzer display.
27	I-WRQ/RDS-CLK	I	CD WRQ input. TUNER RDS CLOCK input.
28	I-TM-BASE	I	REFERENCE CLOCK input for timer watch.
29	$\overline{\text{I-RMC}}$	I	System remote control signal input.
30~41	G13~G2	O	FL GRID output G2~G13.
42, 43	P36, P35	O	FL SEGMENT output P35, P36.
44	G1	O	FL GRID output G1.
45	P34	O	FL SEGMENT output P34.
46	VDD3	-	Power supply input.
47	SPEANA-A/P33	O	Spectrum analyzer band switching output /FL segment P33 output.
48	SPEANA-B/P32	O	Spectrum analyzer band switching output /FL segment P32 output.
49	SPEANA-C/P31	O	Spectrum analyzer band switching output /FL segment P31 output.
50	P30/GAME	I/O	FL segment P30 output / GAME input to diode.
51	VP	-	Power supply input for FL display.
52	P29/AM-ST	I/O	FL segment P29 output / AM-ST input to diode.
53	P28/LW	I/O	FL segment P28 output / LW input to diode.
54	P27/SW	I/O	FL segment P27 output / SW input to diode.

Pin No.	Pin Name	I/O	Description
55	P26/FM 1	I/O	FL segment P26 output / FM1 (OIRT) input to diode.
56	P25/RDS	I/O	FL segment P25 output / RDS input to diode.
57	P24/R+1	I/O	FL segment P24 output / RVS+1 way input to diode.
58	P23/DSP	I/O	FL segment P23 output / DSP input to diode.
59	P22/D-SURR	I/O	FL segment P22 output / SURR input to diode.
60	P21/K-CON	I/O	FL segment P21 output / K-CON input to diode.
61	P20/DOLBY	I/O	FL segment P20 output / DOLBY input to diode.
62	P19/5.1CH	I/O	FL segment P19 output / 5.1CH input to diode.
63	P18/AM10K	I/O	FL segment P18 output / AM 10kHz input to diode.
64	P17/CST 2	I/O	FL segment P17 output / DECK2 cassette detect switch data input.
65	P16/REB	I/O	FL segment P16 output / DECK2 side-B record OK switch data input.
66	P15/CAM 2	I/O	FL segment P15 output / DECK2 CAM switch data input.
67	P14/AUTO 1	I/O	FL segment P14 output / DECK1 AUTO stop signal input.
68	P13/AUTO 2	I/O	FL segment P13 output / DECK2 AUTO stop signal input.
69	P12/CAM 1	I/O	FL segment P12 output / DECK1 CAM switch data input.
70	P11/CST 1	I/O	FL segment P11 output / DECK1 cassette detect switch data input.
71	P10/REA	I/O	FL segment P10 output / DECK2 side A record OK switch data input.
72	VDD 4	-	Power supply input.
73 ~ 81	P9 ~ P1	O	FL segment P1 ~ P9 output.
82	O-KSCAN	O	Switch SCAN timing output.
83	TRAYCLOSE	O	CD TRAY CLOSE data output.
84	TRAY-OPEN	O	CD TRAY OPEN data output.
85	DISH-FWD	O	CD turntable forward rotation output.
86	DISH-RVS	O	CD turntable reverse rotation output.
87	O-DATA	O	CD data output.
88	O-CDCLK	O	CD clock output.
89	VSS2	-	GND.
90	VDD2	-	Power supply input.
91	O-POWER	O	System power supply ON/OFF output.
92	O-S-MUTE	O	System mute ON/OFF output.
93	SOL 1	O	DECK 1 solenoid output.
94	SOL 2	O	DECK 2 solenoid output.
95	O-MOTOR	O	DECK MOTOR ON/OFF output.
96	I-IFC/STEREO/SUBQ	I	Tune IF count serial data input /CD SUBQ data input.
97	I-STEREO/ DRF(SQCLK)	I/O	Tuner stereo detected input / CD SQ CLOCK output.
98	I-RDS-DATA/ O-CDCE	I/O	RDS data input / CD chip enable output.
99	RT-A	I	Rotary encoder A input.
100	RT-B	I	Rotary encoder B input.


ADJUSTMENT <TUNER / DECK>

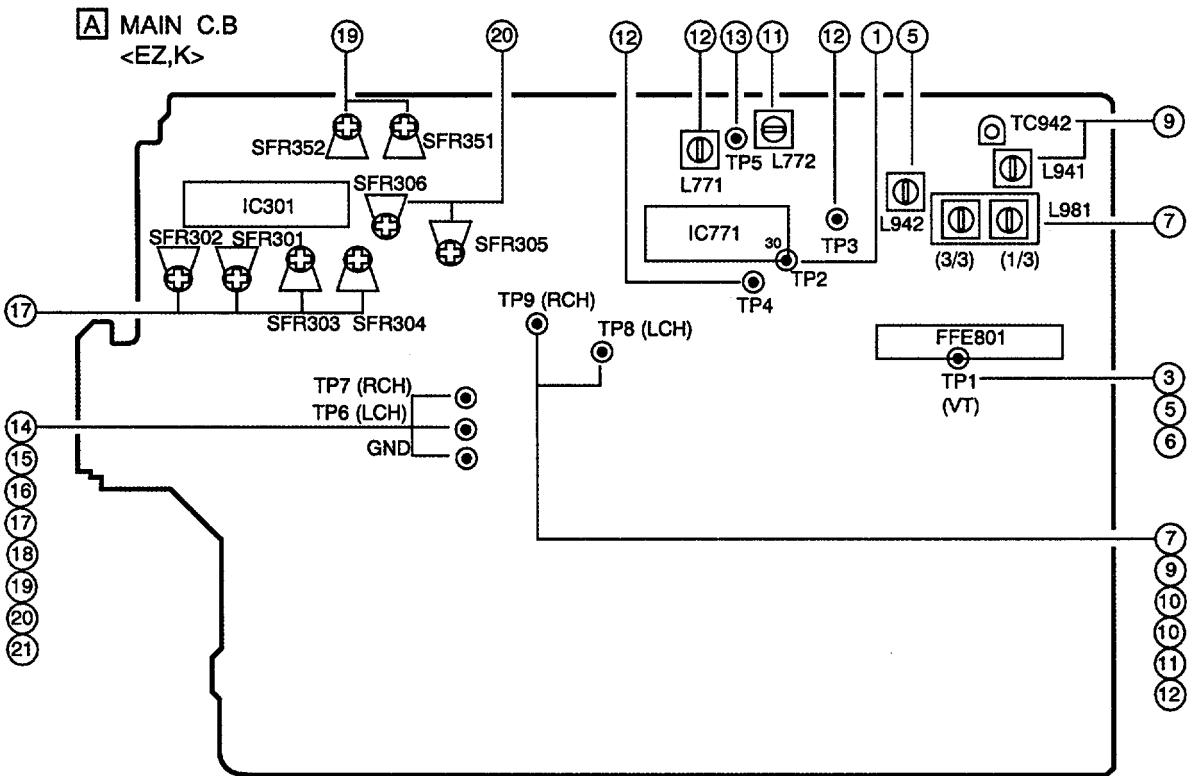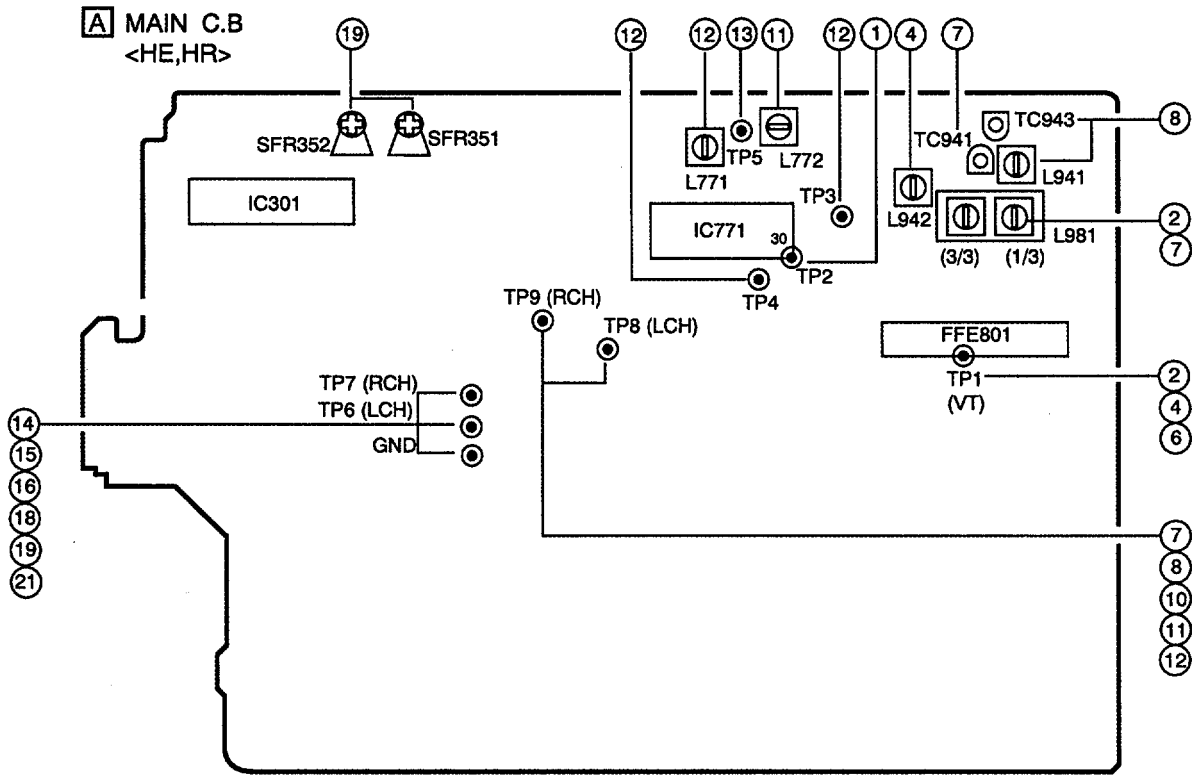


F DECK C.B



DECK-1 P, DECK-2 R/P/E HEAD (HE,HR,EZ)
DECK-1 P HEAD (K)

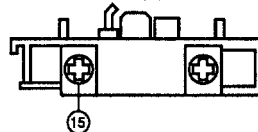

DECK-2 R / P HEAD (K)

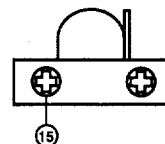

< TUNER SECTION >

1. Clock Check
Settings : • Test point : TP2
Method : Set to AM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. MW VT Adjustment <HE,HR>
Settings : • Test point : TP1 (VT)
• Adjustment location : L981 (3/3)
Method : Set to MW 1710kHz and adjust L981 (3/3) so that the test point becomes 7.5V \pm 0.05V. Then check that the test point is more than 0.3V (530kHz).
3. MW VT Check <EZ,K>
Settings : • Test point : TP1 (VT)
Method : Set to MW 1602kHz and check that the test point is less than 8.0V and more than 0.6V (531kHz).
4. SW VT Adjustment <HE,HR>
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to SW 17.9MHz and adjust L942 so that the test point becomes 6.0V \pm 0.05V. Then check that the test point is more than 0.3V (5.9MHz).
5. LW VT Adjustment <EZ,K>
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to LW 144kHz and adjust L942 so that the test point is 1.3V \pm 0.05V. Then check that the test point is less than 8.0V (290kHz).
6. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).
- 7a. MW Tracking Adjustment <HE,HR>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L981 (1/3) 603kHz.
TC941 1404kHz
Method : Set up TC941 to center before adjustment, the level at 603kHz is adjust to maximum by L981 (1/3). Then the level at 1404kHz is adjust to maximum by TC941.
- 7b. MW Tracking Adjustment <EZ,K>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L981(1/3) 999kHz
Method : Set to AM 999kHz and adjust L981(1/3) to MAX.
8. SW Tracking Adjustment <HE,HR>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L941 5.9MHz
TC943 17.9MHz
Method : Set up TC943 to center before adjustment. The level at 5.9MHz is adjust to maximum by L941. Then the level at 17.9MHz is adjust to maximum by TC943.

9. LW Tracking Adjustment <EZ,K>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L941 144kHz
TC942 290kHz
Method : Set up TC942 to center before adjustment. The level at 144kHz is adjust to maximum by L941. Then the level at 290kHz is adjust to maximum by TC942.
10. FM Tracking Check
Settings : • Test point : TP8(Lch), TP9(Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 9dB (HE,HR), less than 10dB (EZ,K).
11. AM(MW) IF Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L772 450kHz
12. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC Balance)
: TP8(Lch), TP9(Rch) (Distortion)
• Adjustment location : L771
• Input level : 54dB
Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes 0V \pm 0.04V.
Next, check that the distortion is less than 1.3%.
13. Auto Stop Level Check

MW
• Input level : 52dB
• Test point : TP5
Method : Check auto stop at MW 999kHz and the level is 52 +10/-15dB.

FM
• Input level : 25dB
• Test point : TP5
Method : Check auto stop at FM 98.0MHz and the level is 25 dB \pm 10 dB.

< DECK SECTION >

14. Tape Speed Adjustment
Settings : • Test tape : TTA-100
• Test point : TP6(Lch), TP7(Rch)
• Adjustment location : SFR1
Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz \pm 5Hz.
15. Head Azimuth Adjustment
Settings : • Test tape : TTA-330
• Test point : TP6(Lch), TP7(Rch)
• Adjustment location : Head azimuth adjustment screw
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
16. PB Frequency Response Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP6(Lch), TP7(Rch)
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

17. PB Sensitivity Adjustment (DECK 1, DECK 2) <EZ>
 Settings : • Test tape : TTA-200
 • Test point : TP6(Lch), TP7(Rch)
 • Adjustment location : SFR301 (DECK 1, Lch)
 SFR302 (DECK 1, Rch)
 SFR303 (DECK 2, Lch)
 SFR304 (DECK 2, Rch)
 Method : Play back the test tape and adjust SFRs so that the output level of the test point becomes 245mV \pm 10mV.
18. PB Sensitivity Check (DECK 1, DECK 2) <HE,HR,K>
 Settings : • Test tape : TTA-200
 • Test point : TP6(Lch), TP7(Rch)
 Method : Play back the test tape and check that the output level of the test point is 120mV \pm 3dB (\pm 10mV).
19. REC/PB Frequency Response Adjustment
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz / 10kHz (LINE IN)
 • Adjustment location : SFR351 (Lch)
 SFR352 (Rch)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -28dBV (HE,HR,K), -36.5dBV (EZ). Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.

20. REC/PB Sensitivity Adjustment <EZ>
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz (LINE IN)
 • Adjustment location : SFR305 (Lch)
 SFR306 (Rch)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU (-16.5 dBV). Record and play back the 1kHz signals and adjust SFRs so that the output becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.
21. REC/PB Sensitivity Check <HE,HR,K>
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz (LINE IN)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP6, TP7 becomes 0VU(-8dBV). Record and play back the 1kHz signals and check that the output is 0 \pm 3.5dB.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity : Less than 10 / 9 / 9dB (HE,HR)
 (THD 3%) [at 87.5 / 98.0 / 108.0MHz (HE,HR)]
 Less than 11 / 10 / 10dB (EZ,K)
 [at 87.5 / 98.0 / 108.0MHz (EZ,K)]

S/N 50dB Quieting sensitivity :

Less than 35dB (HE,HR)
 [at 98.0MHz (HE,HR)]
 Less than 38dB (EZ,K)
 [at 98.0MHz (EZ,K)]

Signal to noise ratio : Mono : More than 72dB
 Stereo : More than 64dB [at 98.0MHz]

Distortion : Mono : Less than 1.2%
 Stereo : Less than 2.0% [at 98.0MHz]

Auto stop level : 25dB \pm 10dB [at 98.0MHz]

Stereo separation : HE,HR : More than 30dB [at 98.0MHz]
 EZ,K : More than 12dB [at 98.0MHz]

Intermediate frequency : 10.7MHz

<MW SECTION>

Sensitivity : Less than 60dB [at 603kHz]
 Less than 58dB [at 999kHz]
 Less than 58dB [at 1404kHz]

Signal to noise ratio : More than 36dB [at 999kHz]

Distortion : Less than 1.5% [at 999kHz]

Auto stop level : 50dB +10/-15dB [at 999kHz]

Intermediate frequency : 450kHz

<LW SECTION> (EZ,K)

Sensitivity : Less than 70dB [at 144kHz]
 Less than 68dB [at 198kHz]
 Less than 66dB [at 290kHz]


Intermediate frequency : 450kHz

<SW SECTION> (HE,HR)

Sensitivity : Less than 42dB [at 5.9MHz]
 Less than 38dB [at 12.0 MHz]
 Less than 38dB [at 17.9MHz]
 Signal to noise ratio : More than 36dB [at 12.0MHz]
 Distortion : Less than 2.0% [at 12.0MHz]
 Intermediate frequency : 450kHz

<DECK SECTION>

Tape speed : 3000Hz \pm 45Hz
 Wow & flutter : Less than 0.21% (HE,HR,EZ), 0.25% (K)
 (W.R.M.S)
 Take-up torque : 30 ~ 55g-cm (FWD, REV)
 F.F & REW torque : 75 ~ 180g-cm
 Back tension : 2 ~ 7g-cm (FWD, REV)
 PB output level : 300mV \pm 3dB (HE,HR,K),
 300mV \pm 1dB (EZ) (SP OUT 2V)
 REC/PB output level : 0 \pm 3.5dB (HE,HR,K), 0 \pm 1dB (EZ)
 (SP OUT 2V,NORM)
 Distortion (REC/PB) : Less than 2.0% (NORM)
 Noise level (PB) : Less than 2.0mV (NORM, SP OUT 2V)
 Noise level (REC/PB) : Less than 3.0mV (NORM, SP OUT 2V)
 Erasing ratio : More than 60dB (at 125Hz, +10VU)
 Test tape : TTA-602 (NORMAL)

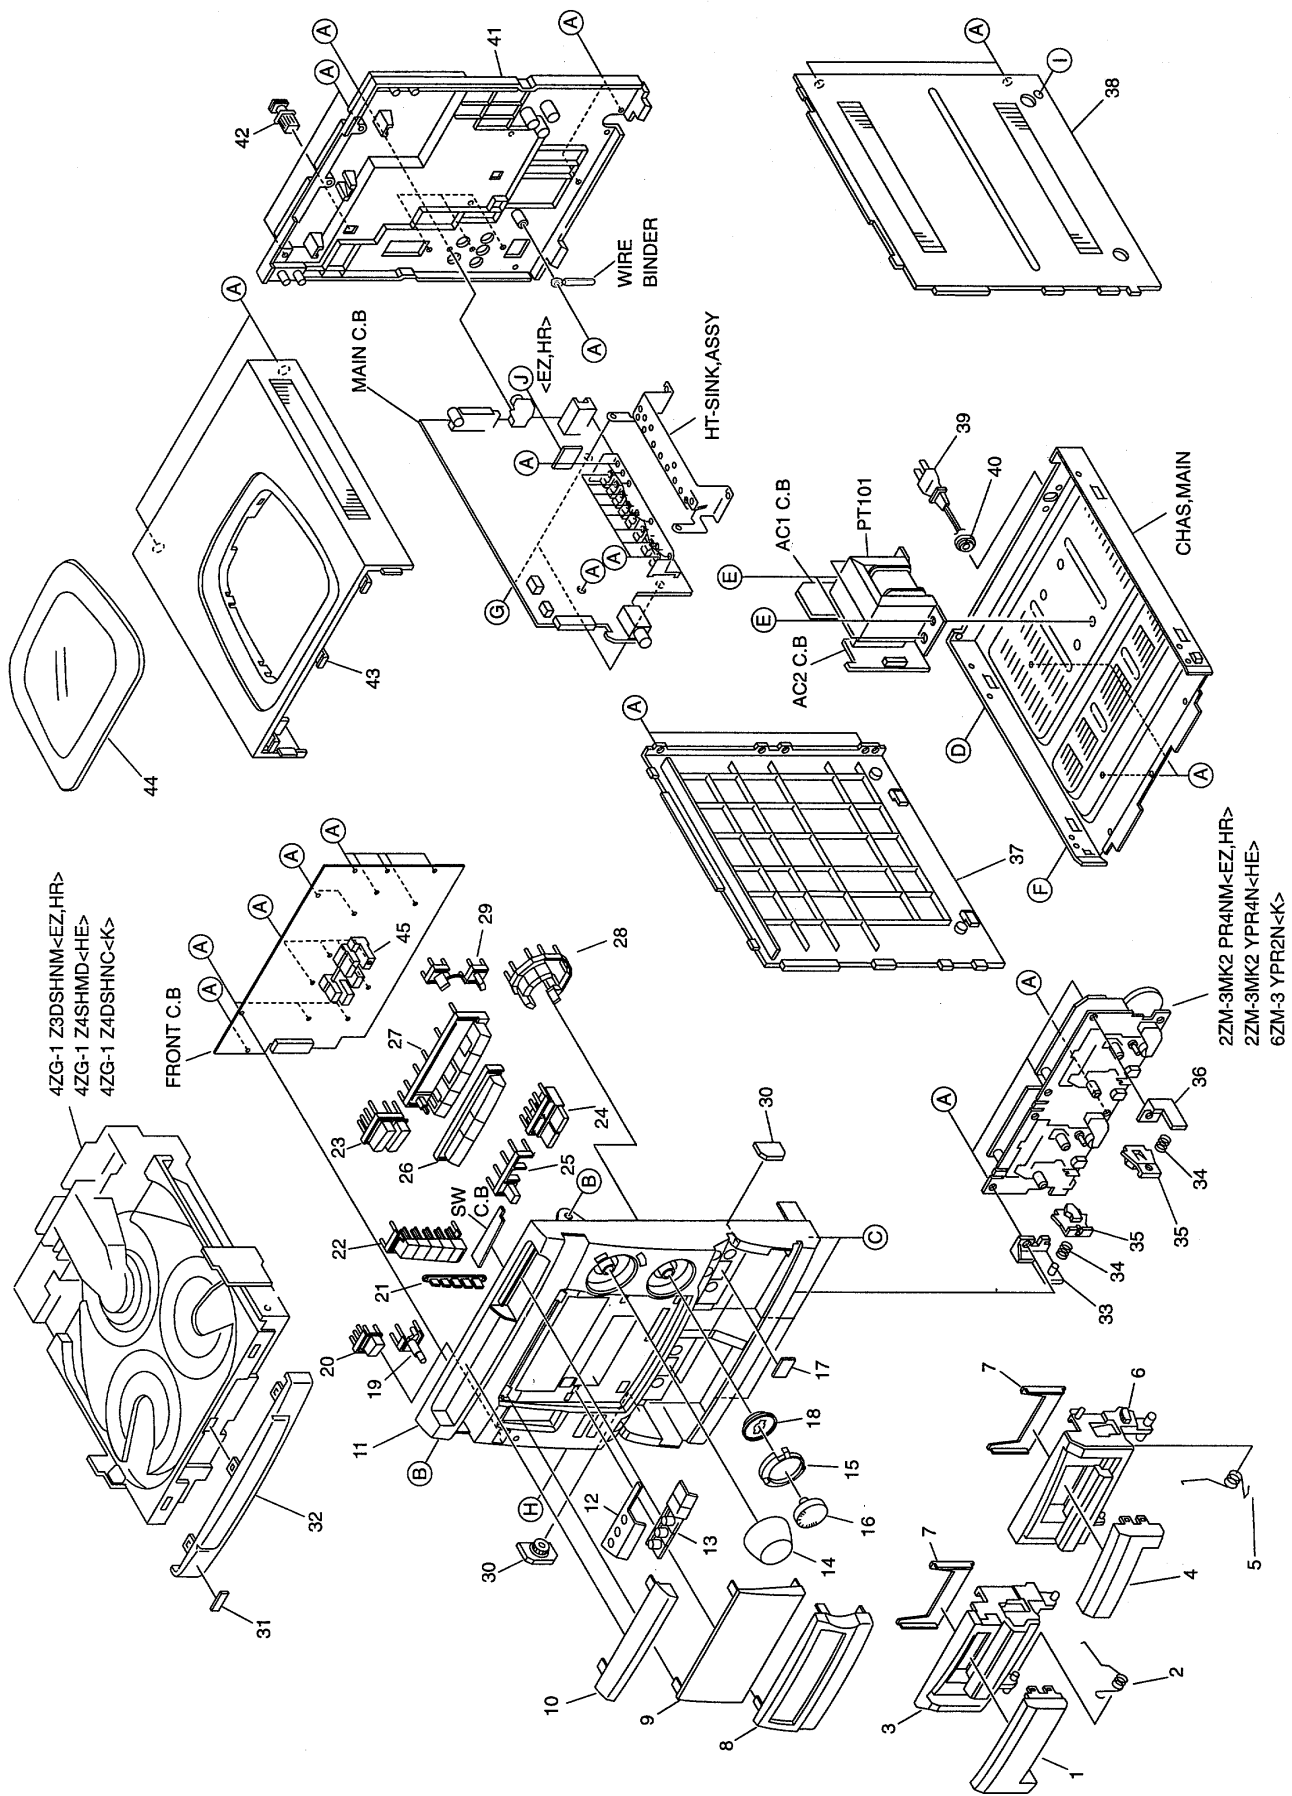



MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NBG-009-010		WINDOW,CASS 1	29	87-NBG-019-010		KEY,ECHO
2	82-NF5-218-010		SPR-T,EJECT 1 (SIN)	30	87-NF8-220-010		DMPR,150
3	88-NF7-003-010		BOX,CASS 1 U	31	82-NE6-067-010		BADGE,AIWA 30N
4	87-NBG-010-010		WINDOW,CASS 2	32	88-NF7-005-010		PANEL,TRAY
5	82-NF5-219-010		SPR-T,EJECT 2 (SIN)	33	87-NF4-216-010		HLDR,LOCK 1
6	88-NF7-049-010		BOX,CASS 2 H<EXCEPT 505K>	34	86-NF9-224-010		SPR-C,LOCK
6	88-NF7-004-010		BOX,CASS 2 U<505K>	35	82-NF5-229-010		PLATE,LOCK
7	86-NF6-061-010		REFLECTOR,CASS	36	87-NF4-217-010		HLDR,LOCK 2
8	88-NF7-037-010		PANEL,CONT E<505EZ,506EZ>	37	87-NB8-005-010		PANEL,LEFT
8	88-NF7-030-010		PANEL,CONT U<505K>	38	88-NF8-047-010		PANEL,RIGHT 2
8	88-NF7-047-010		PANEL,CONT U1<505HR>	39	87-A80-023-010		AC CORD,ASSY K 3P W<505K>
9	88-NF7-021-010		WINDOW,DISP<505K>	39	87-050-079-010		AC-CORD ASSY,E<EXCEPT 505K>
9	88-NF7-039-010		WINDOW,DISP E<505EZ,506EZ>	40	87-085-185-010		BUSHING, AC CORD (E)
9	88-NF7-038-010		WINDOW,DISP H<505HR>	41	88-NF7-076-010		CABI,505 EZSTNM<505EZ>
10	87-NBG-008-010		WINDOW,CD	41	88-NF7-070-010		CABI,REAR 506 EZSTNM<506EZ>
11	88-NF7-050-010		CABI,FR E 506<506EZ>	41	88-NF7-042-010		CABI,REAR HRJSTNM<505HR>
11	88-NF7-060-010		CABI,FR E505<505EZ>	41	88-NF7-066-010		CABI,REAR 505 HEST<505HE>
11	88-NF7-046-010		CABI,FR H 505<505HR>	41	88-NF7-059-010		CABI,REAR HEJSTNM<505HEJ>
11	88-NF7-054-110		CABI,FR K<505K>	41	88-NF7-044-010		CABI,REAR KSTNE<505K>
12	87-NBG-006-010		PANEL,CD	42	84-ZG1-245-210		CAP,OPTICAL
13	88-NF7-062-010		KEY,CD	43	87-NF6-021-010		PANEL, TOP
14	87-NBG-011-010		KNOB,RTRY VOL	44	86-NF6-007-010		WINDOW, TOP
15	88-NF7-007-010		PANEL,JOG	45	88-NF7-201-010		GUIDE,OPE
16	88-NF7-006-310		KNOB,RTRY JOG	A	87-067-703-010		TAPPING SCREW, BVT2+3-10
17	81-532-080-010		LABEL, CASS. COMPT	B	87-721-097-410		QT2+3-12 GLD
18	88-NF7-015-010		REFLECTOR,JOG	C	87-067-688-010		BVTT+3-6
19	88-NF7-040-110		KEY,DEMO S	D	87-721-096-410		QT2+3-10 GLD
20	87-NBG-015-010		KEY,POWER	E	87-078-019-010		S-SCREW,IT+4-6
21	87-NBG-023-010		REFLECTOR,FUN	F	87-591-094-410		TAPPING SCREW, QIT+3-6
22	88-NF7-022-110		KEY,FUN	G	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
23	88-NF7-008-010		KEY,BBE	H	87-723-096-410		QT2+3-10W/O SLOT BL
24	88-NF7-033-010		KEY,TIMER E<505EZ,506EZ>	I	87-B10-091-010		UTT2+3-10 W/O BLK
24	88-NF7-027-010		KEY,TIMER U<505K,505HR>	J	87-067-579-010		TAPPING SCREW, BVT2+3-8<EXCEPT 505K>
25	88-NF7-013-010		KEY,EDIT<505EZ,506EZ>				
25	88-NF7-032-010		KEY,EDIT H<505HR>				
25	88-NF7-025-010		KEY,EDIT U<505K>				
26	88-NF7-028-110		KEY,ASSY OPE U				
27	88-NF7-034-110		KEY,ASSY DEMO H<EXCEPT 505K>				
27	88-NF7-029-110		KEY,ASSY DEMO U<505K>				
28	88-NF7-014-110		KEY,DSP				

TAPE MECHANISM EXPLODED VIEW 1 / 1 <6ZM-3 YPR2N>

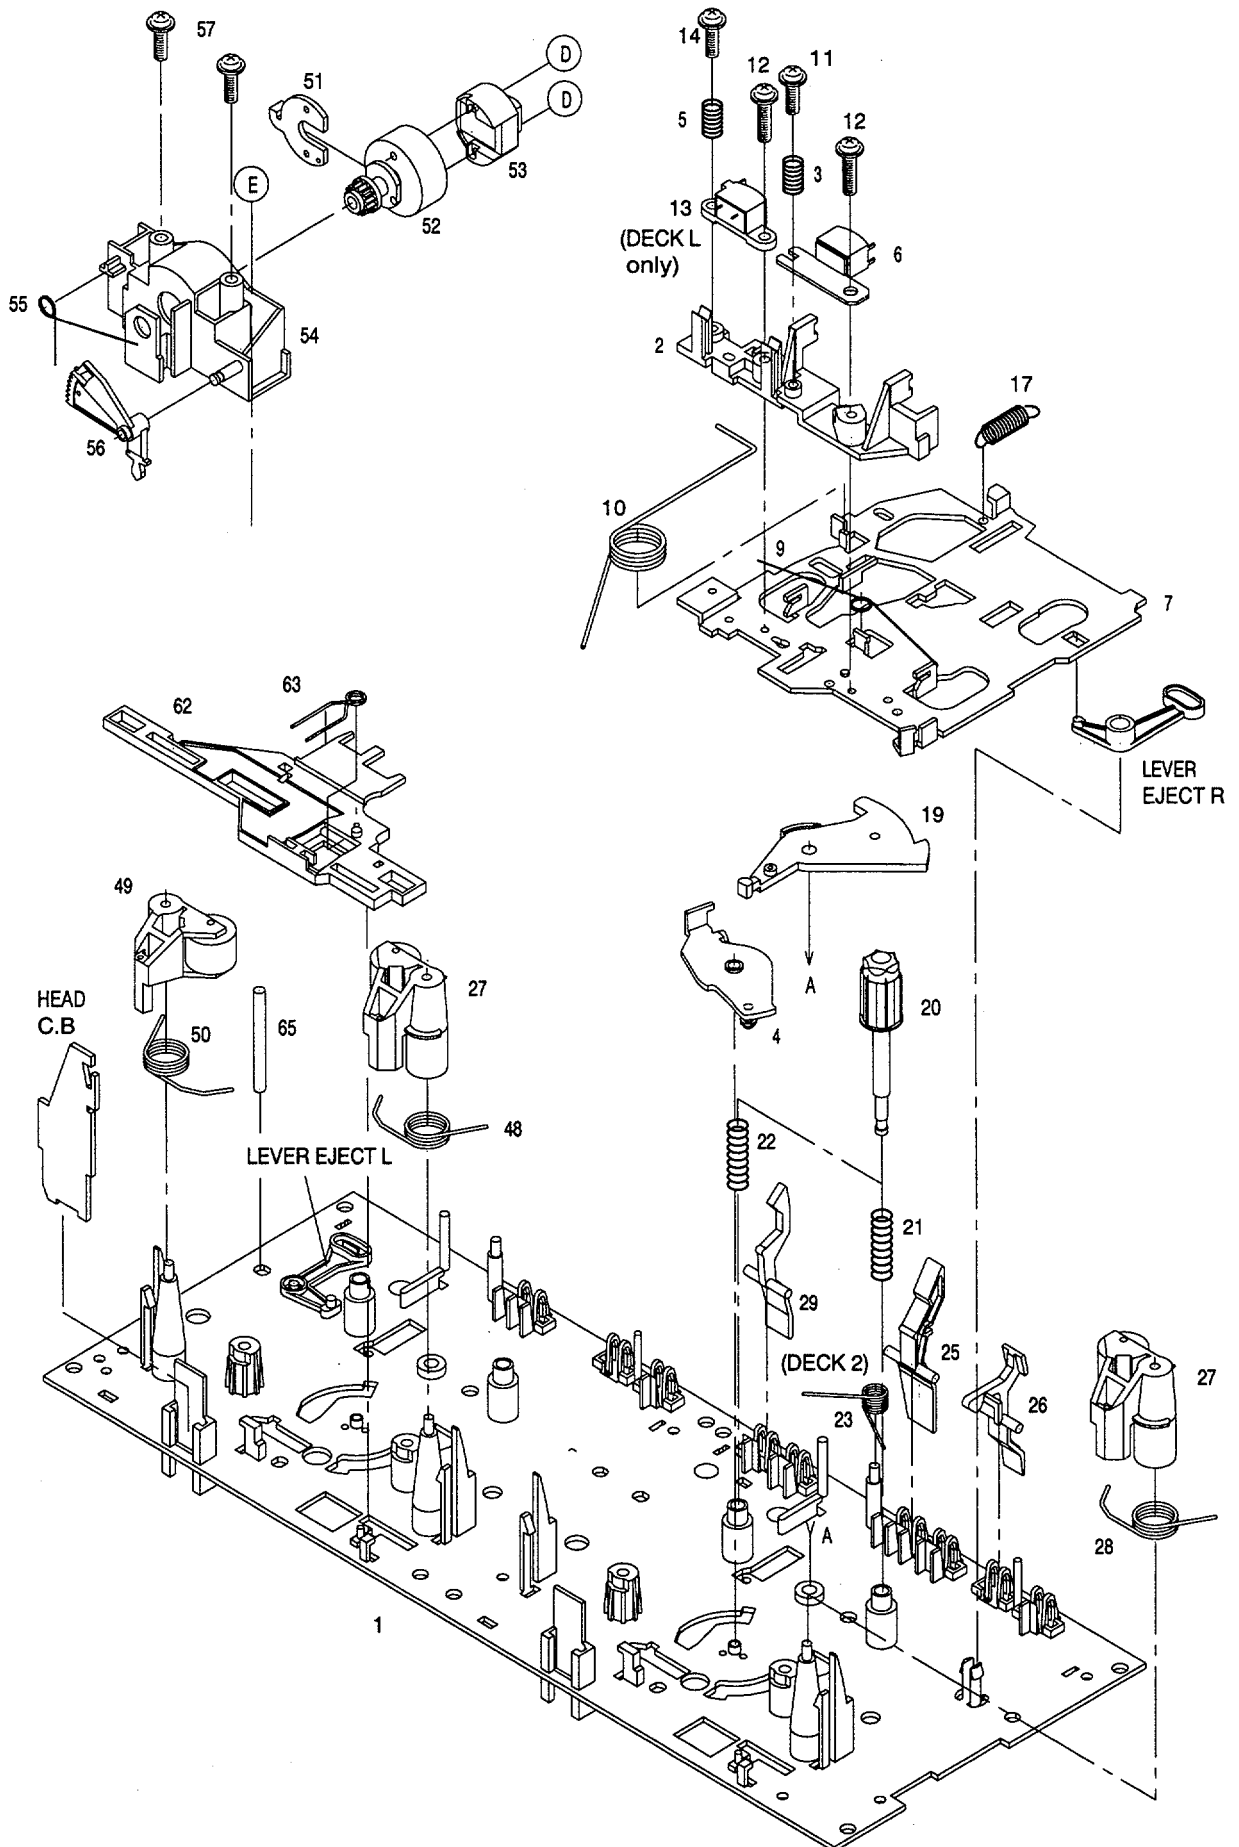

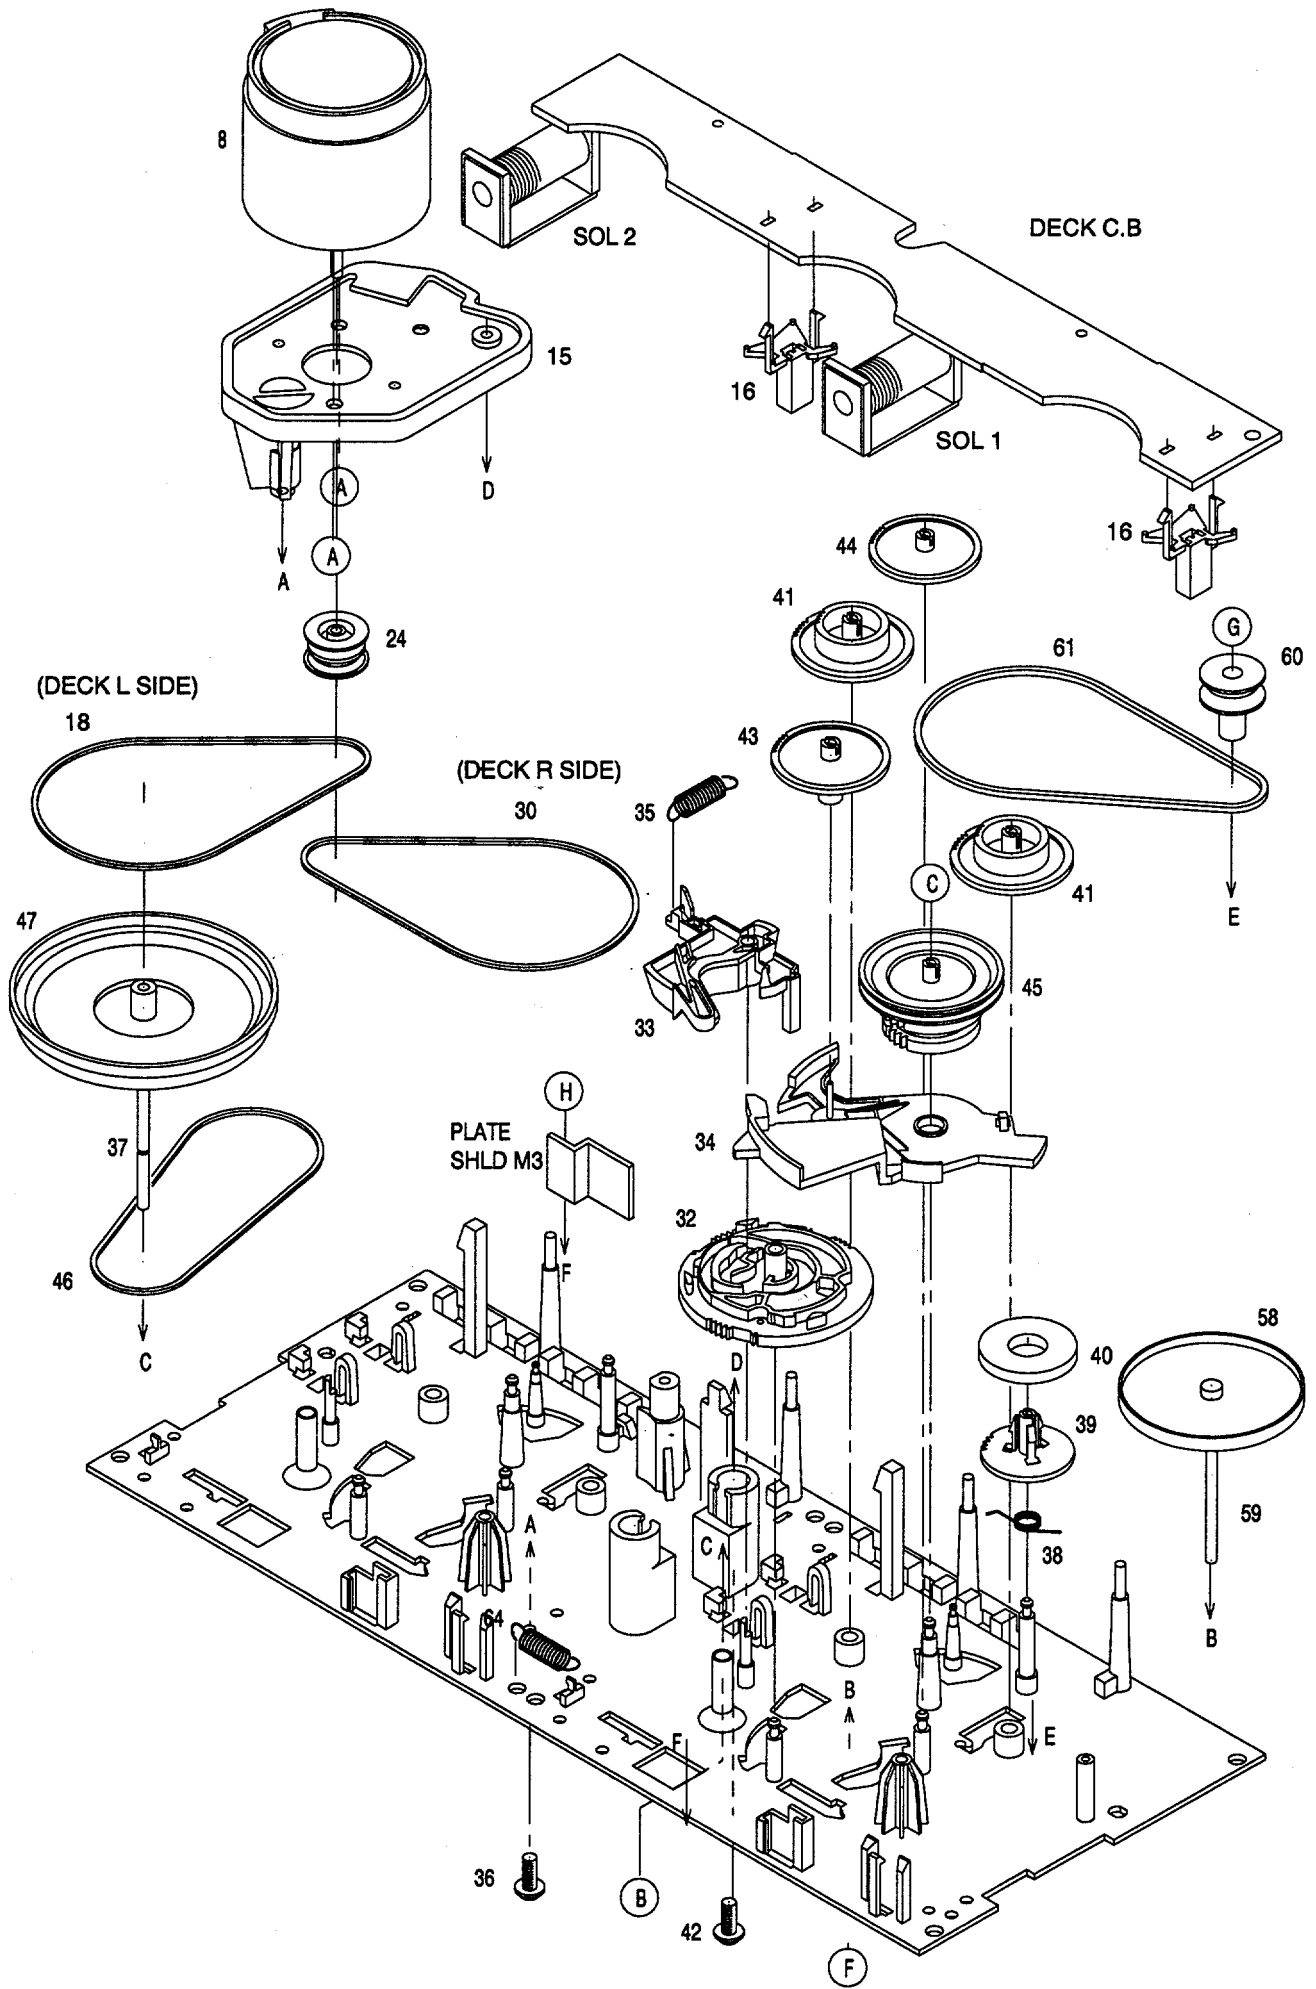


TAPE MECHANISM PARTS LIST 1 / 1 <6ZM-3 YPR2N>


If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-ZM3-215-010		CHAS ASSY,RS	41	82-ZM1-216-319		GEAR, REEL
2	86-ZM3-202-010		BASE, HEAD S	42	86-ZM3-213-010		S-SCREW, HLDR, MOT 3
3	86-ZM3-205-010		SPR-C, RPH S	43	82-ZM1-225-219		GEAR, FR
4	82-ZM1-333-210		PLATE, LINK 2	44	82-ZM1-226-019		GEAR, REW
5	86-ZM3-206-010		SPR-C, EH S	45	82-ZM3-333-310		SLIP DISK ASSY 2
6	87-A90-403-019		HEAD, RPH MS15R	46	82-ZM1-338-010		BELT FR4
7	86-ZM3-201-010		CHAS, HEAD S (DECK L)	47	82-ZM1-349-019		FLY-WHL RW (DECK L)
7	82-ZM3-206-910		CHAS, HEAD (DECK R)	47	82-ZM3-338-010		FLY-WHL R3W (DECK R)
8	87-045-347-019		MOT, SHU2L 70(M1)	48	82-ZM1-259-210		SPR-T, PINCH R
9	82-ZM1-269-219		SPR-T, BRG	49	82-ZM1-341-110		LVR ASSY, PINCH L2
10	82-ZM1-219-110		SPR-T, LINK	50	82-ZM1-258-210		SPR-T, PINCH L
11	86-ZM3-209-010		S-SCREW, ASIMUTHS	51	82-ZM1-314-110		PLATE, HEAD
12	86-ZM3-207-010		S-SCREW, RPH	52	82-ZM1-208-310		HLDR, HEAD
13	87-A90-404-019		HEAD, EH LE15B	53	87-A90-366-010		HEAD, PH YK50P-BF414
14	86-ZM3-208-010		S-SCREW, EH	54	82-ZM1-207-810		GUIDE TAPE
15	86-ZM3-203-010		HLDR, MOTS	55	82-ZM1-213-010		SPR-T, HEAD
16	82-ZM1-245-210		HLDR, IC	56	82-ZM1-210-110		GEAR, HT
17	82-ZM1-218-019		SPR-E, HB	57	86-ZM4-206-010		S-SCREW AZIMUTH L
18	86-ZM3-214-010		BELT, SUB RR	58	82-ZM1-348-010		FLY-WHL, LW
19	82-ZM1-222-219		LVR, PLAY	59	82-ZM1-236-019		CAPSTAN N 2-41.5
20	82-ZM1-217-419		REEL TABLE	60	82-ZM3-335-210		PULLEY, COUPLER M3
21	82-ZM1-244-519		SPR-C, BT	61	86-ZM1-206-010		BELT, MAIN L
22	82-ZM1-285-410		SPR-C, BT L	62	82-ZM1-266-110		LVR, DIR
23	82-ZM1-257-019		SPR-T, CAS	63	82-ZM1-214-010		SPR-T, DIR
24	82-ZM3-221-010		PULLEY, MOT 2M	64	82-ZM1-255-310		SPR-E, LVR DIR
25	82-ZM1-242-019		LVR, CAS	65	82-ZM3-339-010		SHAFT, COUPLER N3
26	82-ZM1-243-019		LVR, STOP	A	87-251-071-417		U+2.6-4
27	82-ZM1-344-119		LVR ASSY, PINCH	B	80-ZM6-243-019		SH, 1.75-3.6-0.5 SLT
28	86-ZM3-204-010		SPR-T, PINCHDS	C	82-ZM3-334-010		PW, 2.16-6-0.4
29	82-ZM1-240-119		LVR, REC (DECK 2)	D	80-ZM6-207-010		V+1.6-7
30	86-ZM3-210-010		BELT, RS	E	85-ZM3-202-010		S-SCREW TG
32	82-ZM3-305-119		GEAR, CAM M2	F	82-ZM1-288-010		SH, 1.63-3.2-0.5. SLT
33	82-ZM1-227-319		LVR, TRIG	G	87-B10-043-010		W-P, 0.99-4-0.25 SLT
34	82-ZM3-306-110		LVR, FR M2	H	87-571-032-410		VIT+2-3
35	82-ZM1-265-119		SPR-E, TRIG				
36	87-761-073-419		VFT2+2.6-6 W/O SLOT				
37	82-ZM1-239-019		CAPSTAN N 2.2-41.7				
38	82-ZM1-322-019		SPR-T, FR60				
39	82-ZM1-220-219		GEAR, IDLER				
40	82-ZM3-616-019		RING MAGNET 4				

SPRING APPLICATION POSITION <6ZM-3 YPR2N>

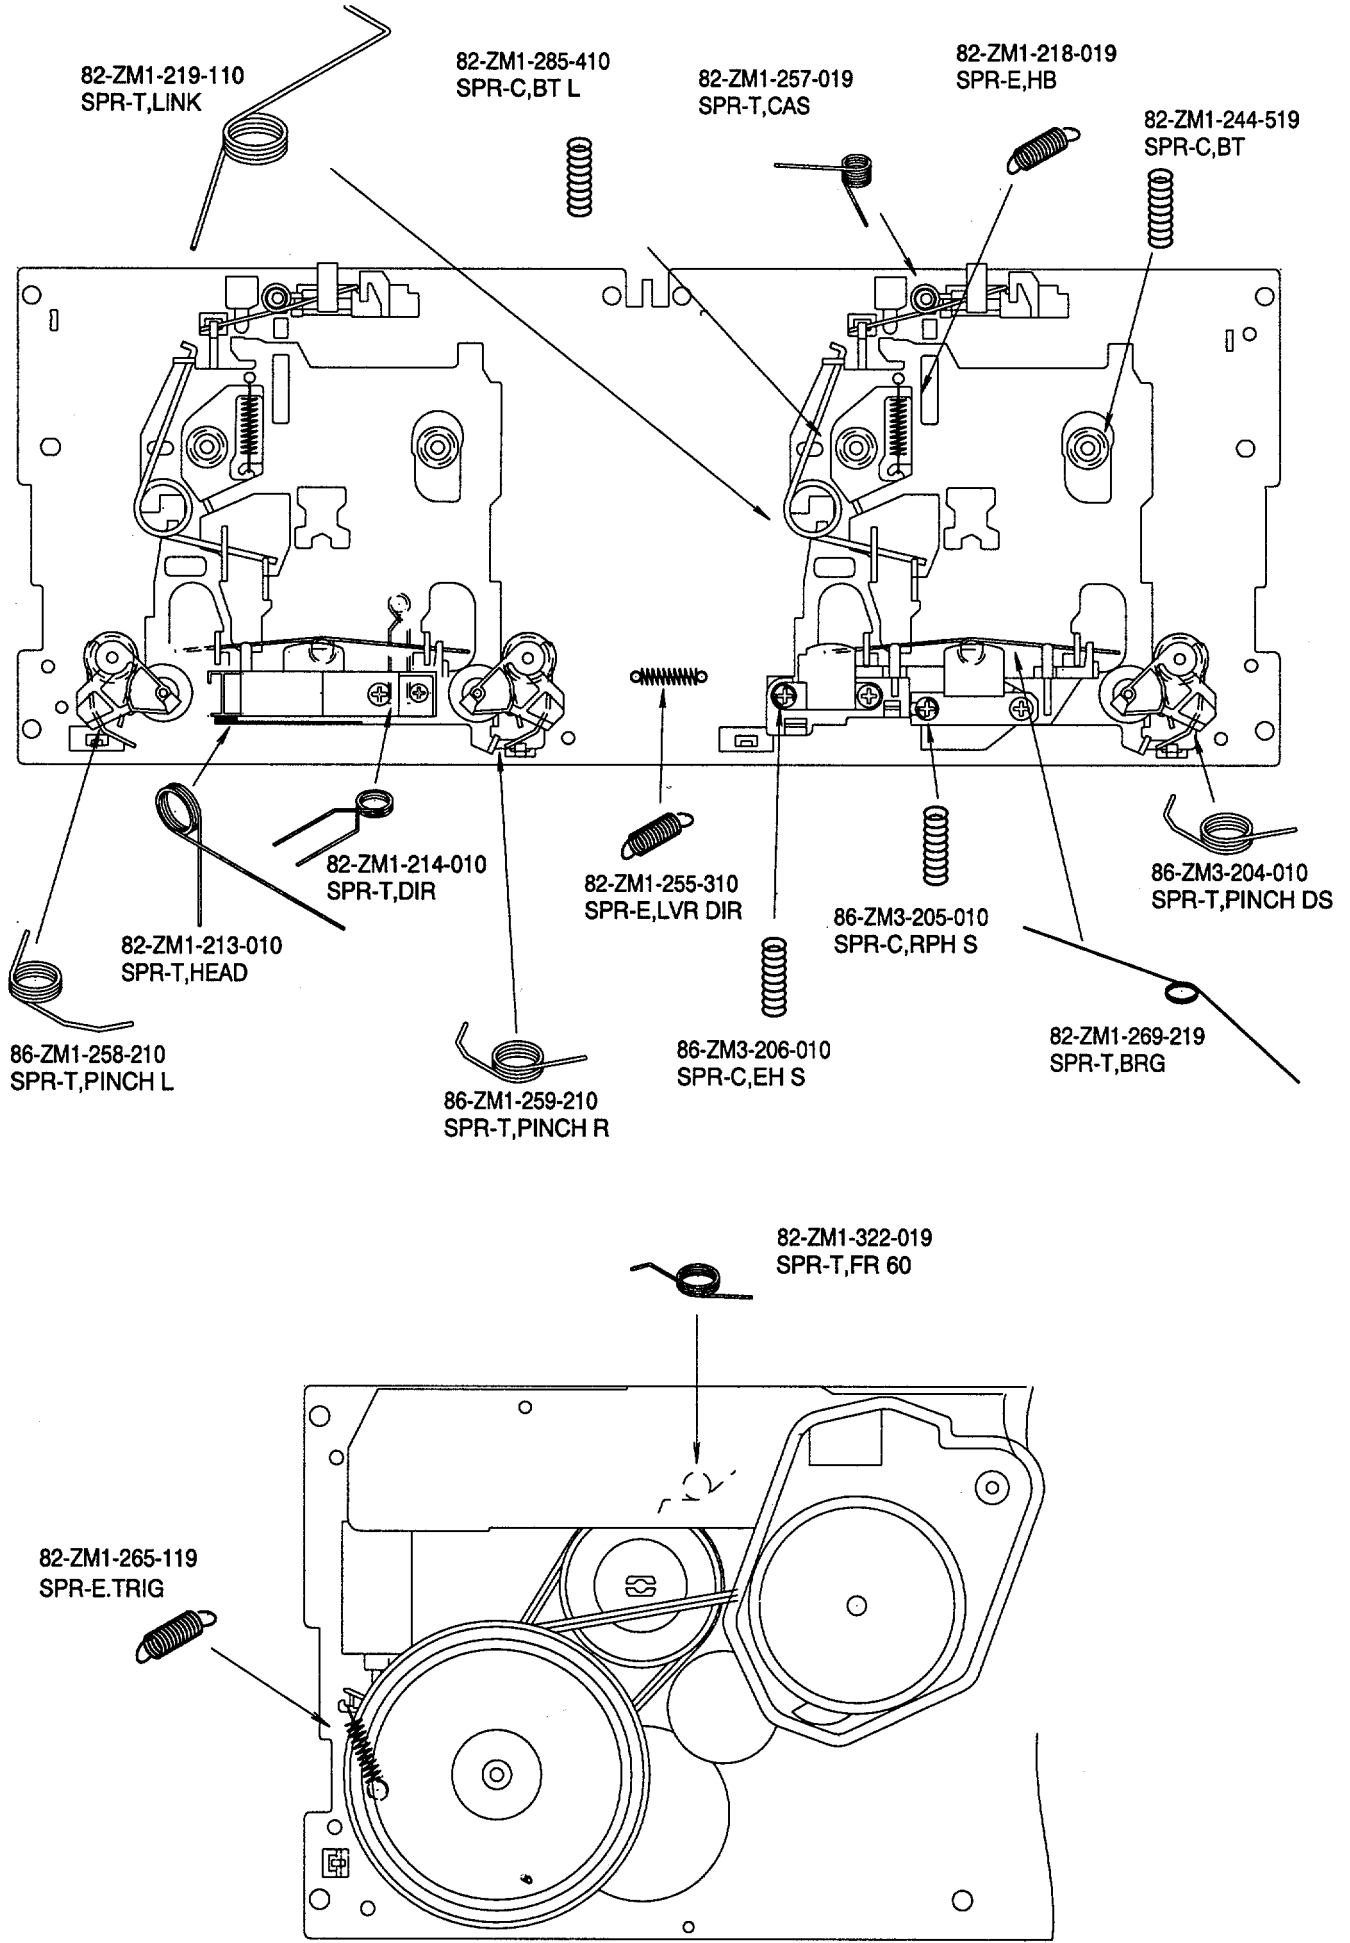

TAPE MECHANISM EXPLODED VIEW 1 / 1 <ZM-3 3MK2 PR4NM / YPR4N>

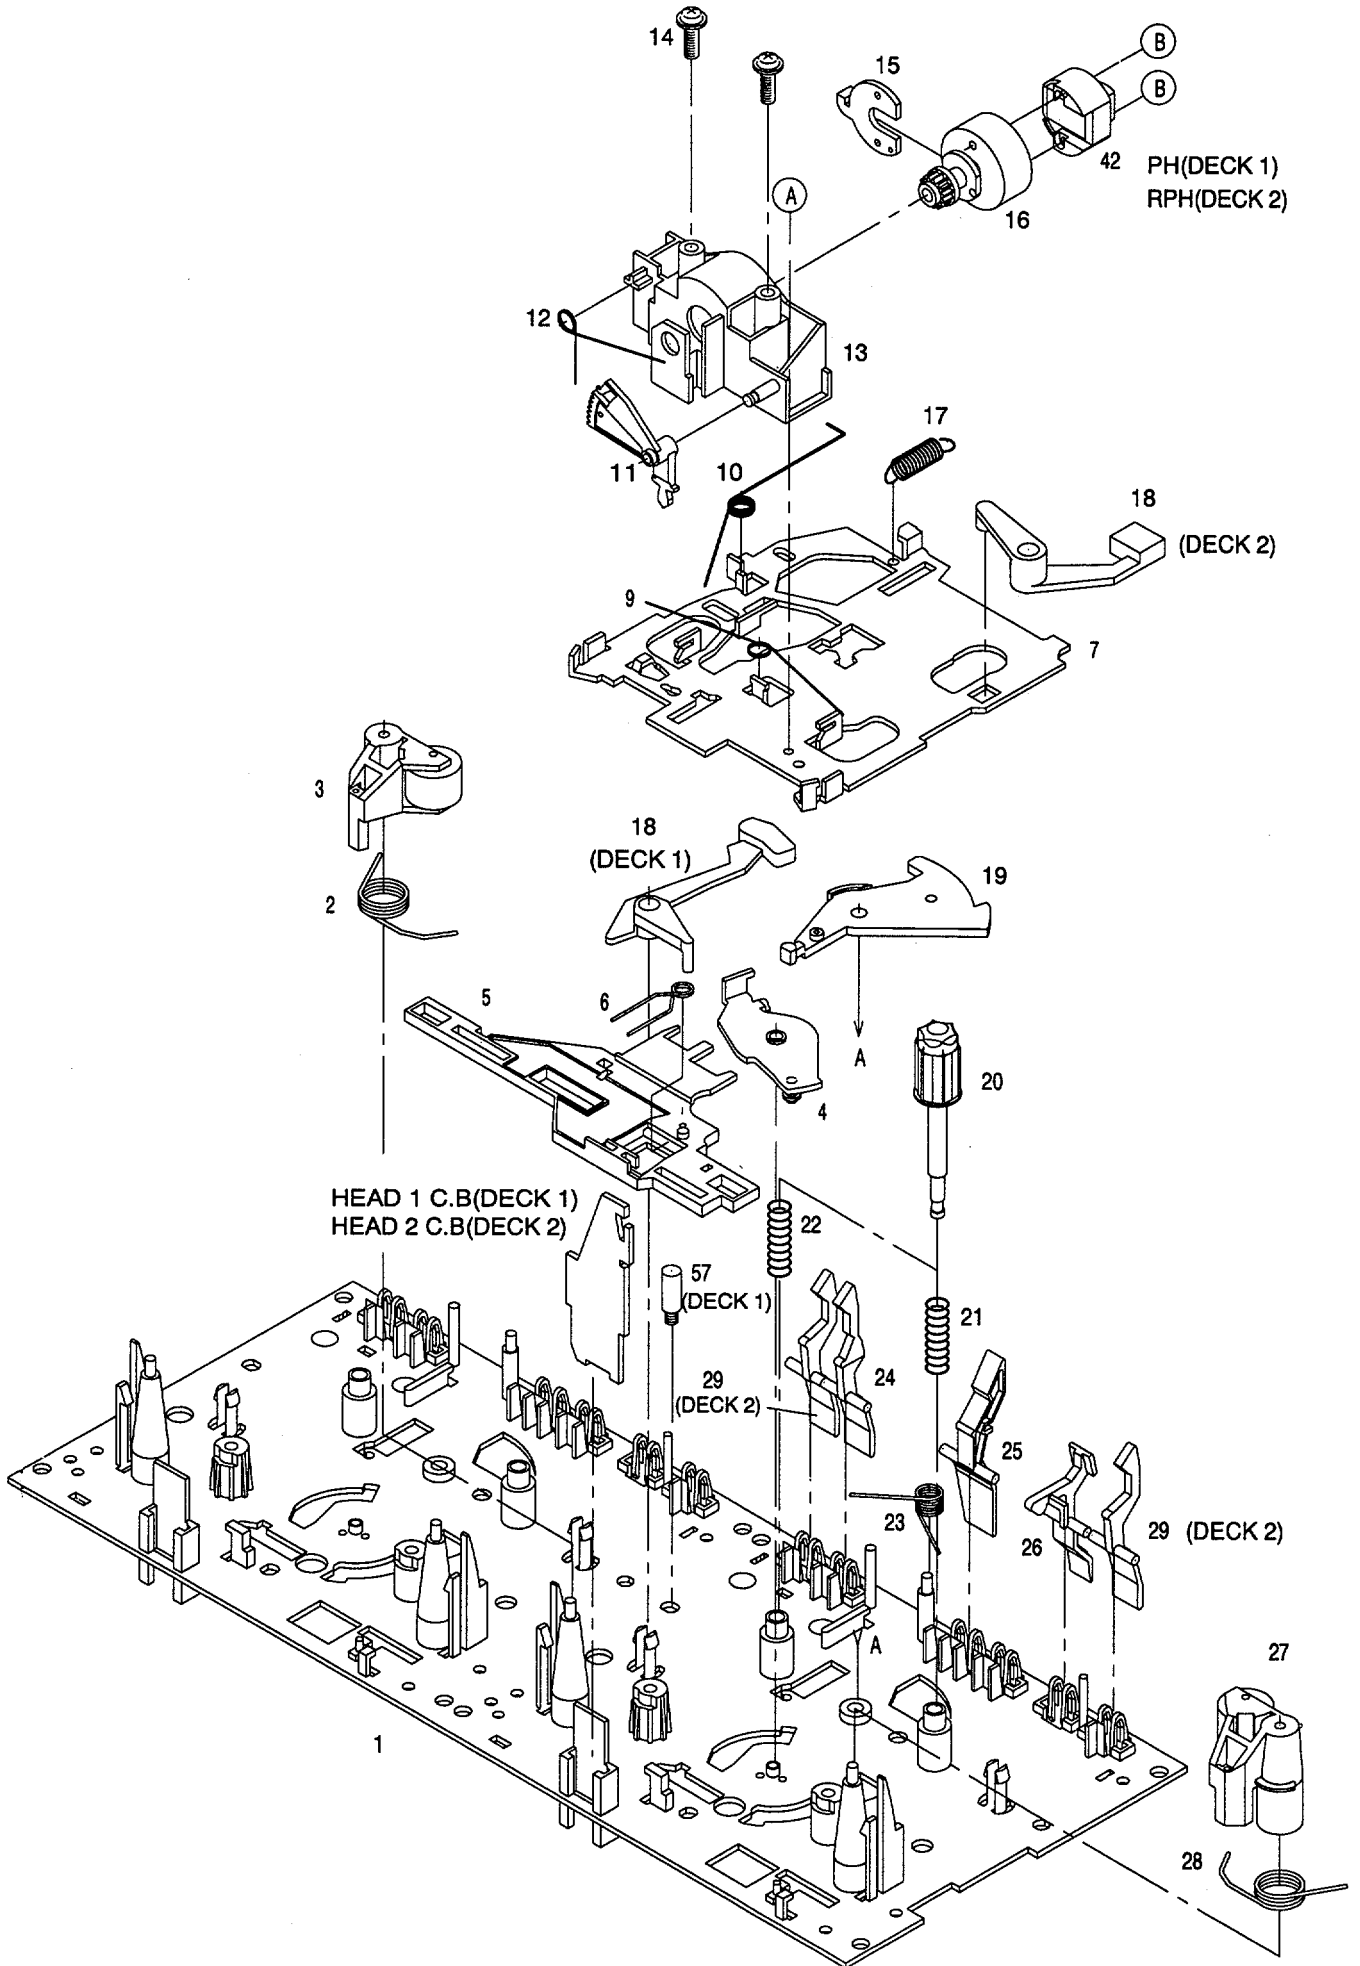


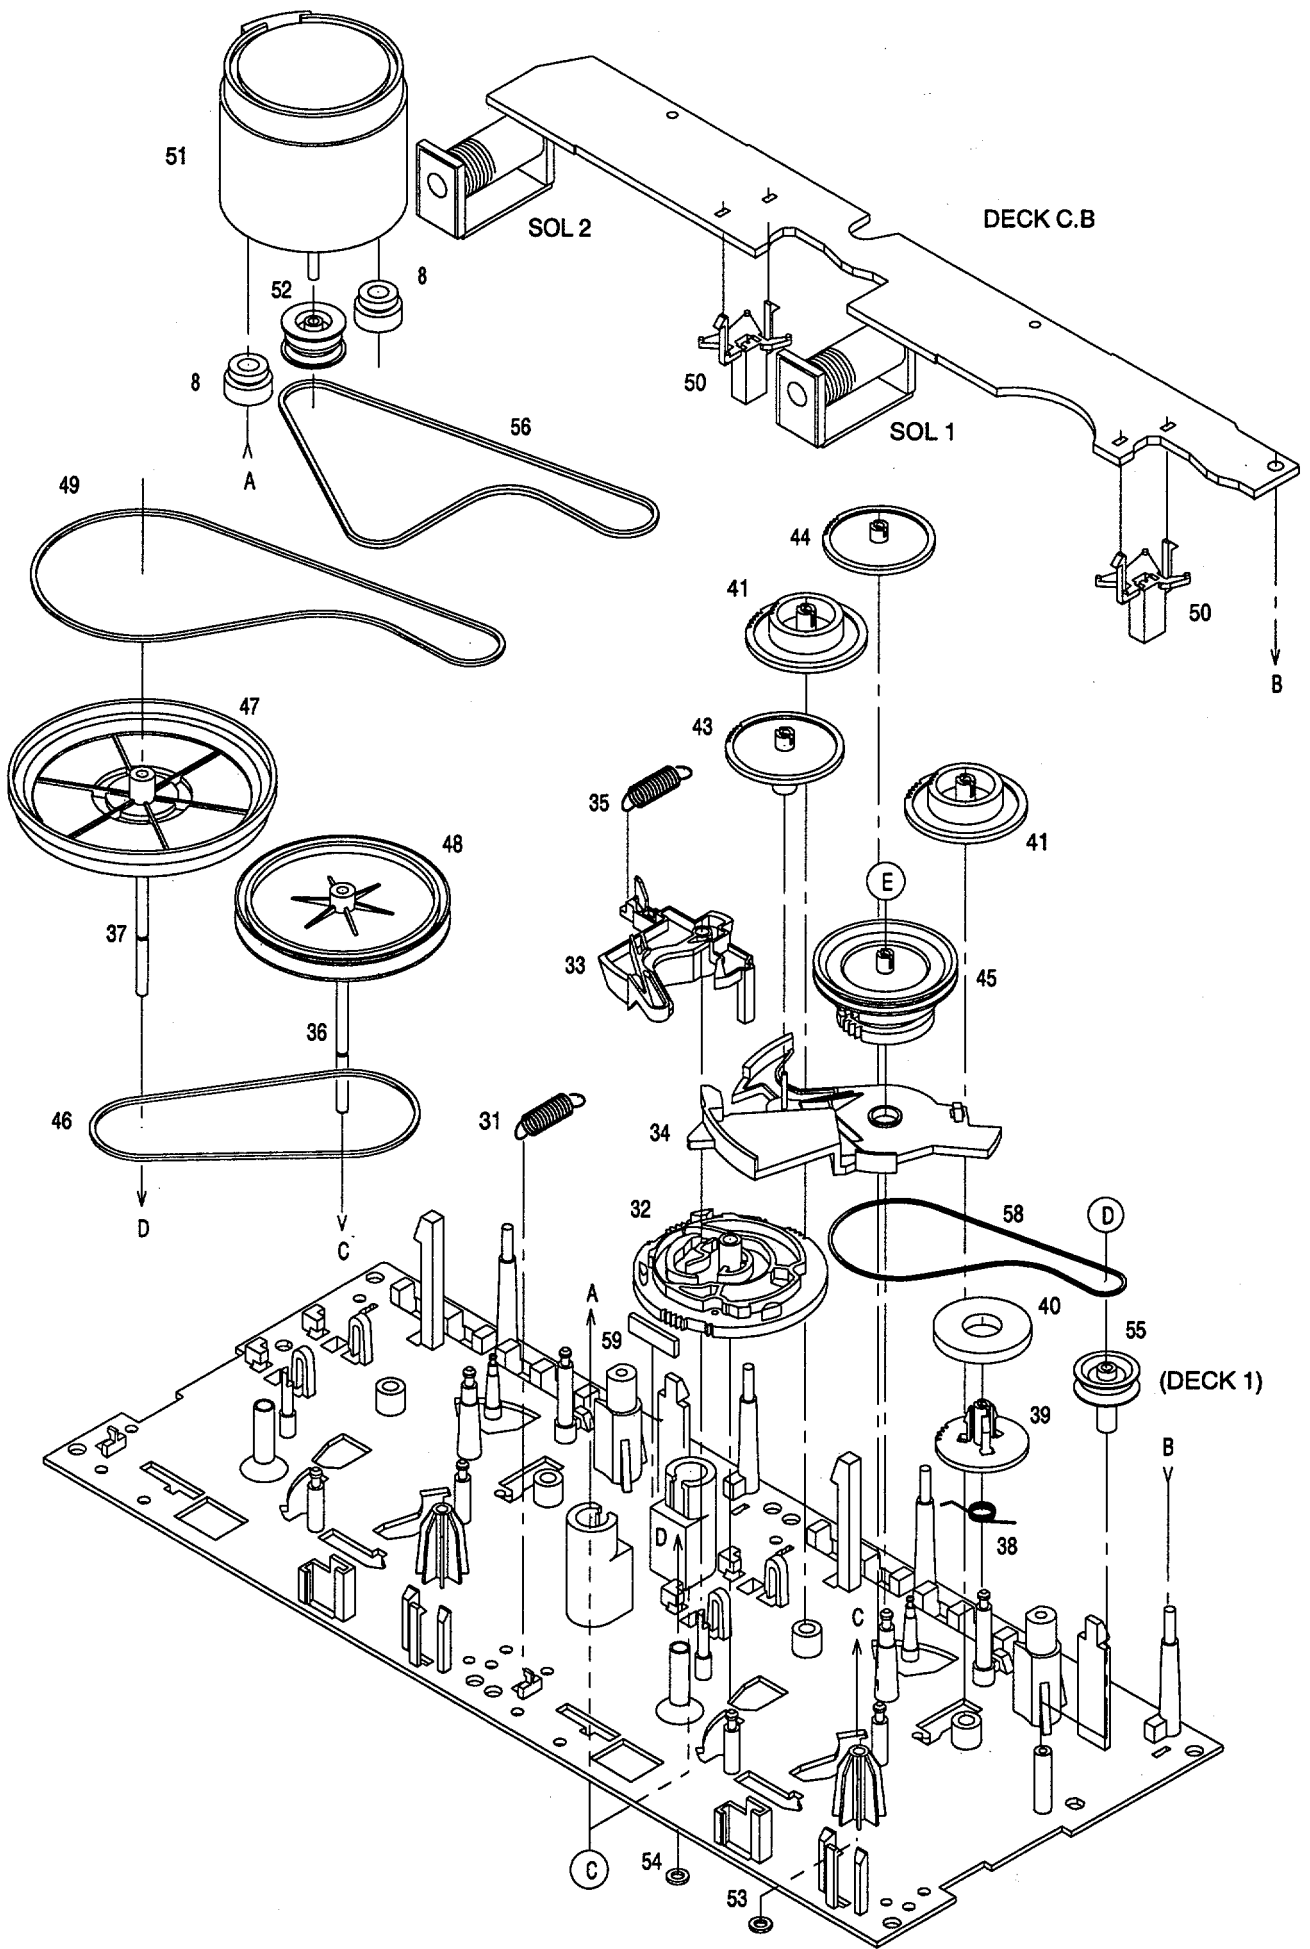


TAPE MECHANISM PARTS LIST 1 / 1 <2ZM-3MK2 PR4NM / YPR4N>

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	82-ZM3-301-519		CHAS ASSY,M2	36	82-ZM1-236-019		CAPSTAN N 2-41.5
2	82-ZM1-258-110		SPR-T,PINCH L	37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
3	82-ZM1-341-110		LVR ASSY,PINCH L2	38	82-ZM1-322-019		SPR-T,FR60
4	82-ZM1-333-010		PLATE,LINK 2	39	82-ZM1-220-219		GEAR,IDLER
5	82-ZM1-266-11K		LVR,DIR	40	82-ZM3-616-019		RING MAGNET 4
6	82-ZM1-214-010		SPR-T,DIR	41	82-ZM1-216-31K		GEAR,REEL
7	82-ZM1-206-81K		CHAS,HEAD	42	87-A90-319-010		HEAD,PH HADKH2 FPC
8	82-ZM3-307-019		CUSH-G,DIA3.7-8-3.2	42	87-A90-320-010		HEAD,RPH HADKH5 FPC
9	82-ZM1-269-219		SPR-T,BRG	43	82-ZM1-225-21K		GEAR,FR
10	82-ZM1-219-119		SPR-T,LINK	44	82-ZM1-226-019		GEAR,REW
11	82-ZM1-210-119		GEAR,H T	45	82-ZM3-333-310		SLIP DISK ASSY 2
12	82-ZM1-213-019		SPR-T,HEAD	46	82-ZM1-338-010		BELT FR4
13	82-ZM1-207-619		GUIDE,TAPE	47	82-ZM1-349-110		FLY-WHL,R W(DECK 2)
14	86-ZM4-206-010		S-SCREW,AZIMUTH	47	82-ZM3-338-110		FLY-WHL,R3 W(DECK 1)
15	82-ZM1-314-119		PLATE,HEAD	48	82-ZM1-348-010		FLY-WHL,L W(DECK 2)
16	82-ZM1-208-119		HLDR,HEAD	48	82-ZM1-348-010		FLY-WHL,L W(DECK 1)
17	82-ZM1-218-019		SPR-E,HB	49	82-ZM3-329-210		BELT,SBU R2
18	82-ZM1-263-110		LVR,EJECT L (DECK 1)	50	82-ZM1-245-210		HLDR,IC
18	82-ZM1-264-010		LVR,EJECT R (DECK 2)	51	87-045-347-019		MOT,SHU2L 70(M1)
19	82-ZM1-222-21K		LVR,PLAY	52	82-ZM3-221-010		PULLEY,MOT 2M
20	82-ZM1-217-319		REEL TABLE	53	82-ZM1-288-019		SH,1.63-3.2-0.5 SLT
21	82-ZM1-244-510		SPR-C,BT	54	80-ZM6-243-019		SH,1.75-3.6-0.5 SLT
22	82-ZM1-285-310		SPR-C,BT L	55	82-ZM3-335-210		PULLEY,COUPLER M3(DECK 1)
23	82-ZM1-257-019		SPR-T,CAS	56	82-ZM3-337-010		BELT,SBU MOT 2
24	82-ZM1-241-319		LVR,MC	57	82-ZM3-339-010		SHAFT,COUPLER N3(DECK 1)
25	82-ZM1-242-019		LVR,CAS	58	86-ZM1-206-010		BELT,MAIN L
26	82-ZM1-243-019		LVR,STOP	59	82-ZM3-340-010		SH,BELT D2
27	82-ZM1-344-110		LVR ASSY,PINCH R2	A	85-ZM3-202-010		S-SCREW,TG
28	82-ZM1-259-110		SPR-T,PINCH R	B	80-ZM6-207-019		V+1.6-7
29	82-ZM1-240-11K		LVR,REC (DECK 2)	C	82-ZM3-318-019		S-SCRW MOTOR M2
31	82-ZM1-255-319		SPR-E,LVR DIR	D	87-B10-043-010		W-P,0.99-4-0.25 SLT
32	82-ZM3-305-01K		GEAR,CAM M2	E	82-ZM3-334-010		PW,2.16-6-0.4
33	82-ZM1-227-21K		LVR,TRIG				
34	82-ZM3-306-11K		LVR,FR M2				
35	82-ZM1-265-119		SPR-E,TRIG				

SPRING APPLICATION POSITION <2ZM-3MK2 PR4NM / YPR4N>

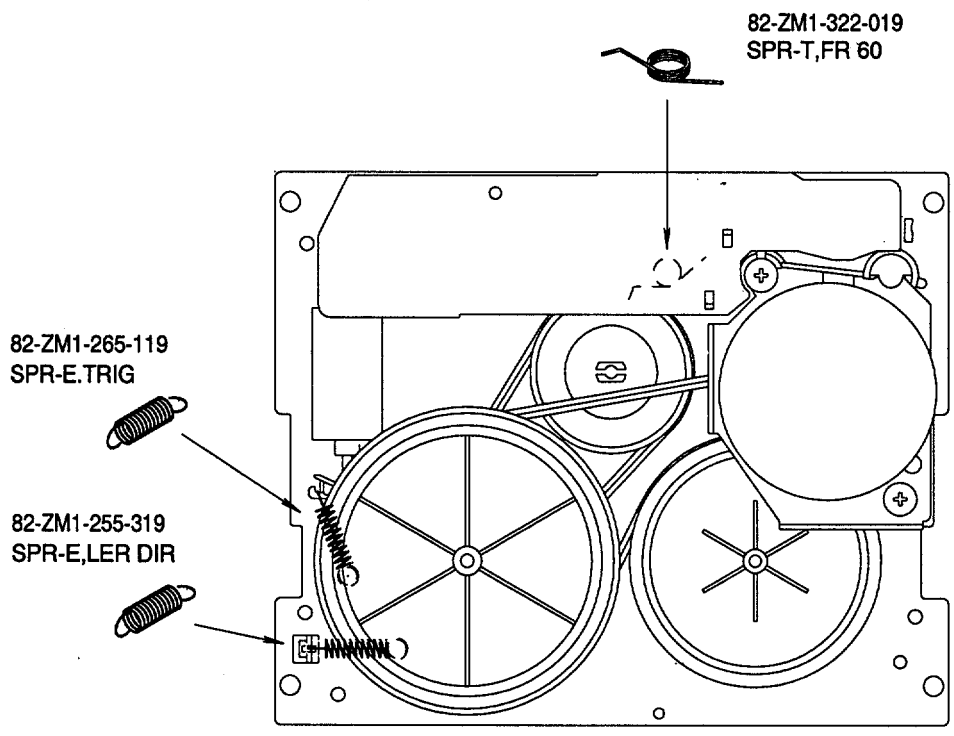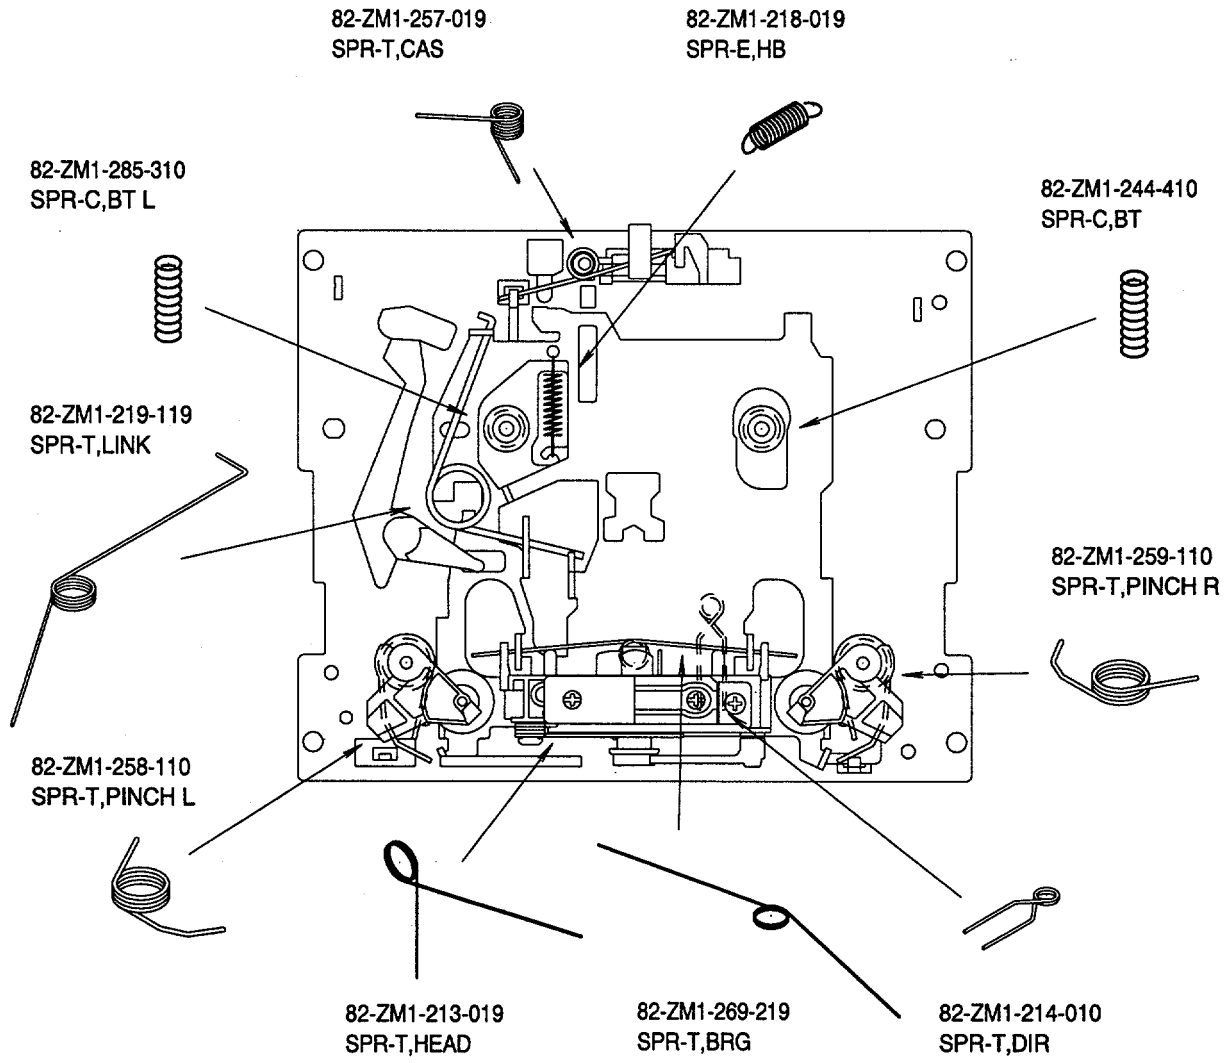


SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

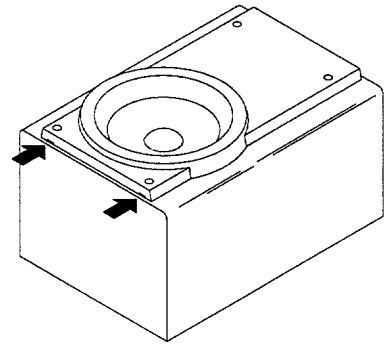

Type.2

グリルフレームを外し、4個のゴムキャップをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

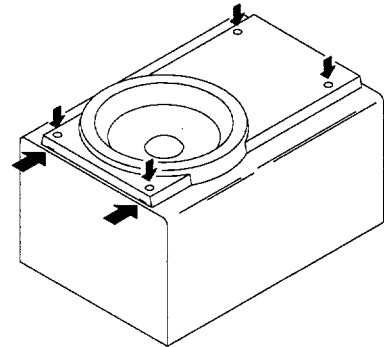

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

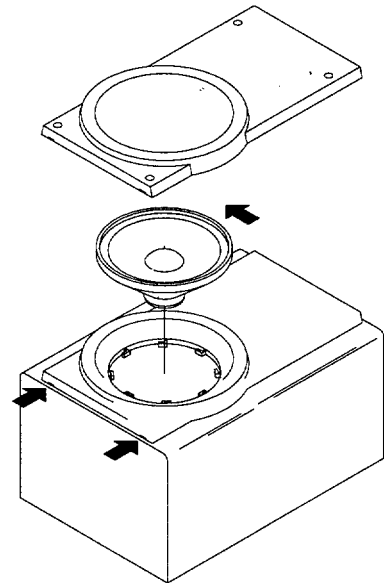

SX-FNS505 (YJSTNC, YSTNC) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	85-NS6-611-010		SPEAKER CORD Y/B
2	86-NS5-606-010		SPKR
3	86-NSA-610-010		SPKR, T 60H
4	87-NS4-611-010		SPKR, CORD
5	87-NS5-602-010		SPKR, W160
6	87-NSA-001-010		PANEL FR
7	87-NSA-002-010		PANEL SP
8	87-NSA-004-010		GRILLE FRAME ASSY
9	87-NSA-007-010		HLDR SQ
10	87-NSA-010-010		PROTECTOR
11	87-NSA-610-010		SPKR CERAMIC
12	87-NSA-611-010		SPKR CAP

SX-ANS706 (YJSTNL, YSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NS2-001-010		PANEL, FR R
2	88-NS2-002-010		PANEL, FR L
3	88-NS2-014-010		GRILLE, FRAME ASSY
4	88-NS2-008-010		PROTECTOR, TW R
5	88-NS2-009-010		PROTECTOR, TW L
6	88-NS2-010-010		PROTECTOR, TOP
7	87-NS4-611-010		SPKR, CORD
8	85-NS6-611-010		SPKR, CORD Y/B
9	86-NS4-604-010		SPKR, M 80
10	88-NS2-609-010		SPKR, CERAMIC
11	86-NSA-608-010		SPKR, W 160H<STNL>
12	87-NS5-602-010		SPKR, W 160<JSTL>
13	87-NS4-605-010		SPKR, T 50
14	88-NS2-606-010		SPKR, SU 60

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF7-901-010		IB, H(ECA)M<HR, HE>
1	88-NF7-916-010		IB, E(9L)M<EZ>
1	88-NF7-905-010		IB, K(E)E<K>
2	87-006-269-010		AM LOOP ANT (UN)<HR>
2	87-006-225-010		AM LOOP ANT NC2<EZ, K>
2	87-A90-054-010		ANT, LOOP AM-CON C<HE>
3	87-A90-064-010		FEEDER-ANT, FM(SHS)<HR, HE>
3	87-043-106-010		ANT, FM 1007 AWG<EZ, K>
△ 4	87-A90-312-010		PLUG, CONVERSION WTN-1157R1<HR, HE>
5	87-NF6-635-010		RC UNIT, RC-7AS06
6	87-043-095-010		ANT, WIRE<HR, HE>

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G-	-
G-	-
G-	-

アイワ株式会社
AIWA CO., LTD.

9301978, 750038

Tokyo Japan