


aiwa



NSX-S505 NSX-S506

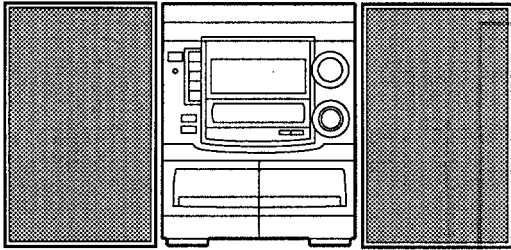

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 2ZM-3MK2 (PR4NM, YPR4N), 6ZM-3 YPR2N • TYPE : HR, HE, EZ, K (505), EZ (506)
- BASIC CD MECHANISM : 4ZG-1 (Z3DSHNM, Z4SHMD, Z4DSHNC)

REVISION PUBLISHING

| SYSTEM | CD CASSEIVER | SPEAKER | REMOTE CONTROLLER |
|----------|------------------------------------|-----------|-------------------|
| NSX-S505 | CX-NS505 (TYPE : HR, HE, EZ, K) | SX-FNS505 | RC - 7AS06 |
| NSX-S506 | CX-NS506 (TYPE : EZ) | SX-ANS706 | |

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual", S/M Code No. 09-985-272-0FE.
- If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-3OT.

MANUAL
SERVICE

TABLE OF CONTENTS

| | |
|---|---------|
| SPECIFICATIONS | 3 |
| NOTICE BEFORE STARTING REPAIR | 4, 5 |
| PROTECTION OF EYES FROM LASER BEAM DURING SERVICING | 6 |
| PRECAUTION TO REPLACE OPTICAL BLOCK | 6 |
| ELECTRICAL MAIN PARTS LIST | 7 ~ 11 |
| TRANSISTOR ILLUSTRATION | 12 |
| FL GRID ASSIGNMENT & ANODE CONNECTION | 13, 14 |
| BLOCK DIAGRAM - 1 (HE,HR : MAIN / FRONT) | 15, 16 |
| BLOCK DIAGRAM - 2 (EZ,K : MAIN / FRONT) | 17, 18 |
| WIRING - 1 (HE,HR : MAIN) | 19, 20 |
| SCHEMATIC DIAGRAM - 1 (HE,HR : MAIN 1/2) | 21 ~ 23 |
| SCHEMATIC DIAGRAM - 2 (EZ : MAIN 1/2) | 24 ~ 26 |
| WIRING - 2 (EZ : MAIN) | 27, 28 |
| WIRING - 3 (K : MAIN) | 29, 30 |
| SCHEMATIC DIAGRAM - 3 (K : MAIN 1/2) | 31 ~ 33 |
| WIRING - 4 (FRONT) | 34 ~ 36 |
| SCHEMATIC DIAGRAM - 4 (FRONT) | 37 ~ 39 |
| IC BLOCK DIAGRAM - 1 | 40 ~ 42 |
| WIRING - 5 (AC1 / AC2) | 40 |
| WIRING - 6 (DECK : 6ZM-3 YPR2N) | 41 |
| WIRING - 7 (DECK : 2ZM-3MK2 PR4NM / YPR4N) | 42 |
| SCHEMATIC DIAGRAM - 5 (HE,HR : MAIN 2/2) | 43, 44 |
| SCHEMATIC DIAGRAM - 6 (EZ,K : MAIN 2/2) | 45, 46 |
| SCHEMATIC DIAGRAM - 7 (HE,HR : TUNER FRONT END) | 47 |
| IC BLOCK DIAGRAM - 2 | 48 ~ 51 |
| IC DESCRIPTION | 52, 53 |
| ADJUSTMENT <TUNER / DECK> | 54 ~ 56 |
| PRACTICAL SERVICE FIGURE | 56 |
| MECHANICAL EXPLODED VIEW 1 / 1 | 57, 58 |
| MECHANICAL PARTS LIST 1 / 1 | 59 |
| TAPE MECHANISM EXPLODED VIEW 1 / 1 <6ZM-3 YPR2N> | 60, 61 |
| TAPE MECHANISM PARTS LIST 1 / 1 <6ZM-3 YPR2N> | 62 |
| SPRING APPLICATION POSITION <6ZM-3 YPR2N> | 63 |
| TAPE MECHANISM EXPLODED VIEW 1 / 1 <2ZM-3MK2 PR4NM / YPR4N> | 64, 65 |
| TAPE MECHANISM PARTS LIST 1 / 1 <2ZM-3MK2 PR4NM / YPR4N> | 66 |
| SPRING APPLICATION POSITION <2ZM-3MK2 PR4NM / YPR4N> | 67 |
| SPEAKER DISASSEMBLY INSTRUCTIONS | 68 |
| SPEAKER PARTS LIST | 69 |
| ACCESSORIES / PACKAGE LIST | 69 |
| REFERENCE NAME LIST | 70 |

SPECIFICATIONS

<FM Tuner section>

Tuning range 87.5 MHz to 108 MHz
Usable sensitivity(IHF) HR,HE : 13.2 dBf
 EZ,K : 16.8 dBf
Antenna terminals 75 ohms (unbalanced)

<MW Tuner section>

Tuning range 531 kHz to 1602 kHz (9 kHz step)
 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity 350 uV/m
Antenna Loop antenna

<SW Tuner section> (HE, HR)

Tuning range 5.900 MHz to 17.900 MHz
Antenna Wire antenna

<LW Tuner section> (EZ, K)

Tuning range 144 kHz to 290 kHz
Usable sensitivity 1400 uV/m
Antenna Loop antenna

<Amplifier section>

Power output HE,HR : Rated 85 W + 85 W
 (6 ohms, THD 1%, 1 kHz)
 Reference 100 W + 100 W
 (6 ohms, THD 10%, 1 kHz)
 EZ : Rated 60 W + 60 W
 (6 ohms, THD 1%, 1 kHz/DIN 45500)
 Reference 75 W + 75 W
 (6 ohms, THD 10%, 1 kHz/DIN 45324)
 DIN MUSIC POWER : 180 W + 180 W
 K : Rated 50 W + 50 W
 (6 ohms, THD 1%, 1 kHz/DIN 45500)
 Reference 62 W + 62 W
 (6 ohms, THD 10%, 1 kHz/DIN 45324)

Total harmonic distortion

HE,HR : 0.05% (70 W, 1 kHz,
 6 ohms, DIN AUDIO)
 EZ : 0.07% (50 W, 1 kHz,
 6 ohms, DIN AUDIO)
 K : 0.07% (40 W, 1 kHz,
 6 ohms, DIN AUDIO)

Inputs

HE,HR :
 VIDEO/AUX : 210 mV(adjustable)
 MD : 210mV (adjustable)
 MIC1, MIC2 : 1.4mV (10 kohms)
 EZ,K :
 VIDEO/AUX : 150 mV(adjustable)
 MD : 150mV (adjustable)
 MIC1, MIC2 :
 EZ : 1.0 mV (10 kohms)
 K : 1.8 mV (10 kohms)

Outputs

LINE OUT: 200mV
 SUPER WOOFERS :
 2.25 V (HE,HR), 1.9 V (EZ), 1.75 V (K)
 SPEAKERS: accept speakers of
 6 ohms or more
 SURROUND SPEAKERS:
 accept speakers of 8 ohms to 16 ohms
 PHONES (stereo jack) : accepts
 headphones of 32 ohms or more

<Cassette deck section>

Track format 4 tracks, 2 channels stereo
Frequency response K : 50 Hz - 15000 Hz
 CrO₂ tape : 50 Hz - 16000 Hz
 Normal tape : 50 Hz - 15000 Hz
 AC bias

Recording system

Heads Deck 1 : playback head x 1
 Deck 2 : Recording/Playback head
 x 1/ erase head x 1

<Compact disc player section>

Laser Semiconductor laser (λ = 780 nm)
D-A converter 1 bit dual
Signal-to-noise ratio 85 dB (1 kHz, 0 dB)
Harmonic distortion 0.05 % (1 kHz, 0 dB)
Wow and flutter Unmeasurable

<Speaker system SX-FNS505>(HE,HR,EZ,K<505>)

Cabinet type HR,HE,K : 3 way, bass reflex
 (magnetic shielded type)
 EZ : 3 way, bass reflex with
 surround speaker(magnetic
 shielded type)
Speakers Woofer : 160 mm cone type
 Tweeter : 80 mm ceramic type
 Super tweeter :
 20 mm ceramic type
 Surround speaker :
 80 mm cone type
Impedance Front speaker : 6 ohms
 Surround speaker : 8 ohms
Output sound pressure level 87 dB/W/m
Dimensions (W x H x D) 250 x 324 x 275 mm
Weight HR,HE,K : 3.7 kg, EZ : 3.9 kg

<Speaker system SX-ANS706>(EZ<506>)


Cabinet type 4 way, bass reflex with
 surround speaker(magnetic
 shielded type)
Speakers Woofer : 160 mm cone type
 Tweeter : 50 mm cone type
 Super tweeter :
 20 mm ceramic type
 Cardioid speaker :
 80 mm cone type
 Surround speaker :
 80 mm
Impedance Front speaker : 6 ohms
 Surround speaker : 8 ohms
Output sound pressure level 87 dB/W/m
Dimensions (W x H x D) 250 x 330 x 293 mm
Weight 4.6 kg

<General>

Power requirements HR,HE : 120 V/220 - 230 V/240 V
 AC switchable, 50/60 Hz
 EZ,K : 230 VAC, 50 Hz
Power consumption HR,HE : 155 W
 EZ,K : 120 W
Dimensions of main unit 260 x 329.1 x 344.5 mm
Weight of main unit HE,HR : 7.3 kg
 EZ : 6.7 kg
 K : 6.5 kg W

• Design and specifications are subject to change without notice.

• The word "BBE" and the "BBE symbol" are trademarks of BBE Sound, Inc.
 Under license from BBE Sound, Inc.

• Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
 "DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

NOTE ON BEFORE STARTING REPAIR


1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

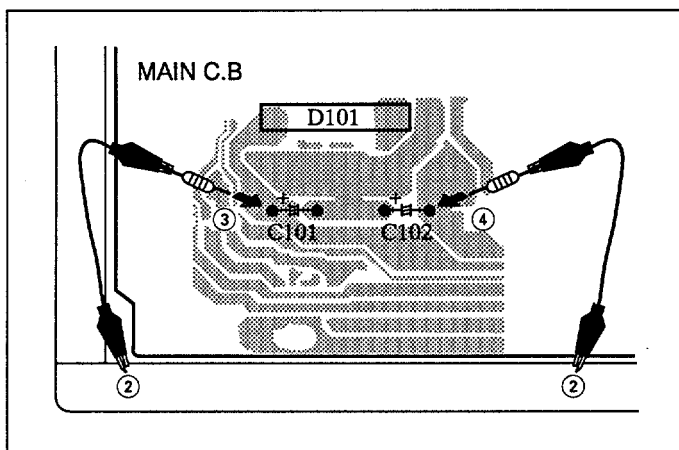

Select a discharging resistor referring to the following table.

| Charging voltage (V) (C101, 102) | Discharging resistor (Ω) | Rated power (W) | Parts number |
|-------------------------------------|-----------------------------------|-----------------|----------------|
| 25-48 | 100 | 3 | 87-A00-247-090 |
| 49-140 | 220 | 5 | 87-A00-232-090 |

Fig-1

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

• Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

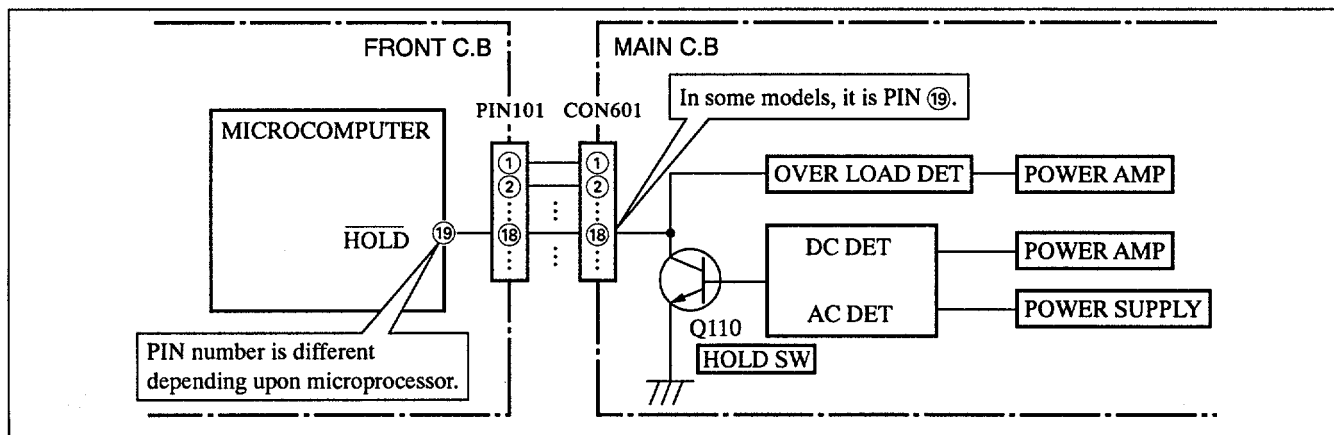


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

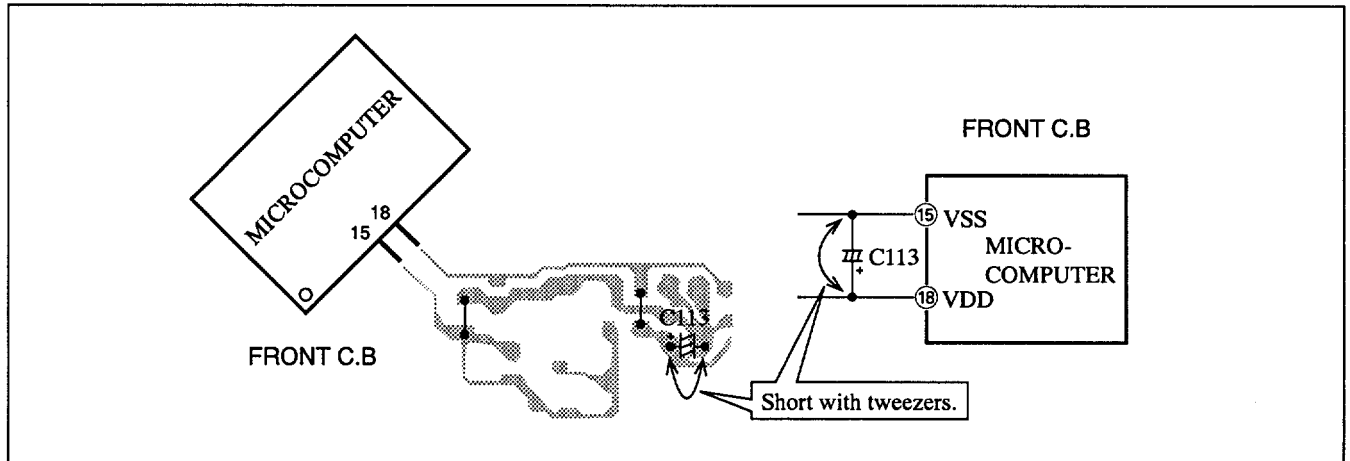


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.



- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylitävälle näkymättömälle lasersäteilylle.

WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

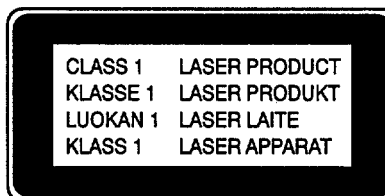


Precaution to replace Optical block

(KSS - 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

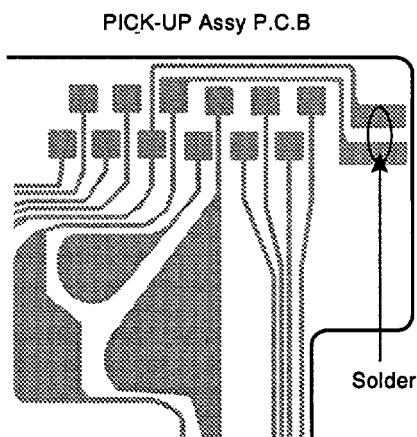

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|------------|----------------|--------------------------|-------------|----------|----------------|-----------|-----------------------------|
| IC | | | | | | | |
| | 88-NF7-750-010 | C-IC,LC866560W-5H26 | | | 87-017-654-060 | | DIODE,GBU6JL6131 |
| | 87-070-083-010 | IC,GP1U281X | | | 87-A40-116-060 | | RS403L-B-D-51<K> |
| | 87-A20-783-040 | C-IC,BA7762AFS<HR,HE,EZ> | | | 87-A40-504-040 | | C-DIODE,KDS184 |
| | 87-A20-083-010 | IC,BA3835S | | MAIN C.B | | | |
| | 87-A20-804-040 | C-IC,NJM2152M | | | | | |
| | 87-017-915-080 | IC,BU4094BCF | | C103 | 87-016-658-090 | | CAP,E 4700-35 SMG<HR,HE,EZ> |
| | 87-A20-613-040 | C-IC,BU9262AFS | | C104 | 87-016-658-090 | | CAP,E 4700-35 SMG<HR,HE,EZ> |
| | 87-A20-954-040 | C-IC,M62445FP-601 | | C105 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-017-888-080 | IC,NJM4558MD | | C106 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 86-NFZ-655-010 | IC,LC72131D(Z) | | C107 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-A20-438-010 | IC,LA1837<HR,HE> | | C108 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-020-454-010 | IC,DN6851 | | C109 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| | 87-070-121-010 | IC,HA12185NT<K> | | C110 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| | 87-A20-913-010 | IC,LA1837NL<EZ,K> | | C111 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| | 87-A20-440-010 | C-IC,BU1920FS<EZ> | | C112 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| | 87-A20-355-010 | IC,CXA1533P<EZ> | | C113 | 87-010-247-080 | | CAP, ELECT 100-50V |
| | | | | C116 | 87-010-247-080 | | CAP, ELECT 100-50V |
| | | | | C117 | 87-010-430-080 | | CAP, ELECT 100-63 |
| | | | | C118 | 87-010-263-080 | | CAP, ELECT 100-10V |
| | | | | C119 | 87-010-260-080 | | CAP, ELECT 47-25V |
| TRANSISTOR | | | | | | | |
| | 87-A30-087-080 | C-FET,2SK2158 | | C120 | 87-010-403-080 | | CAP, ELECT 3.3-50V |
| | 89-213-702-010 | TR,2SB1370 (1.8W) | | C121 | 87-012-140-080 | | CAP 470P |
| | 87-026-263-080 | C-TR,RN1410 | | C123 | 87-010-247-080 | | CAP, ELECT 100-50V |
| | 87-A30-071-080 | C-TR,RT1N 144C | | C124 | 87-010-112-080 | | CAP, ELECT 100-16V |
| | 87-026-610-080 | TR,KTC3198GR | | C125 | 87-010-235-080 | | CAP,E 470-16 SME |
| | 87-A30-076-080 | C-TR,2SC3052F | | C130 | 87-010-194-080 | | CAP,CHIP 0.047<EZ,K> |
| | 87-A30-196-080 | TR,2SC4115SRS | | C131 | 87-010-194-080 | | CAP,CHIP 0.047<EZ,K> |
| | 87-A30-075-080 | C-TR,2SA1235F | | C151 | 87-016-520-090 | | CAP,E 3300-65<HR,HE,EZ> |
| | 87-026-609-080 | TR,KTA1266GR | | C151 | 87-010-917-090 | | CAP,E 3300-50 M SMG<K> |
| | 87-A30-107-070 | C-TR,CMBT5401 | | C152 | 87-016-520-090 | | CAP,E 3300-65<HR,HE,EZ> |
| | 87-A30-190-080 | TR,CC5551 | | C152 | 87-010-917-090 | | CAP,E 3300-50 M SMG<K> |
| | 87-A30-097-010 | TR,FN 1016<HR,HE,EZ> | | C153 | 87-010-928-090 | | CAP,E 4700-25 SMG<K> |
| | 87-A30-098-010 | TR,FP 1016<HR,HE,EZ> | | C154 | 87-010-928-090 | | CAP,E 4700-25 SMG<K> |
| | 87-A30-106-070 | C-TR,CMBT5551 | | C204 | 87-016-299-080 | | CAP, E 10-100<HR,HE,EZ> |
| | 87-A30-186-010 | FET,2SK3053 | | C204 | 87-010-405-080 | | CAP, E 10-50<K> |
| | 87-A30-072-080 | C-TR,RT1P 144C | | C205 | 87-010-805-080 | | C-CAP,1UF-16FZ |
| | 87-A30-074-080 | C-TR,RT1P 141C | | C206 | 87-010-805-080 | | C-CAP,1UF-16FZ |
| | 87-A30-073-080 | C-TR,RT1N 141C | | C209 | 87-010-546-080 | | CAP, ELECT 0.33-50V |
| | 87-A30-105-080 | C-TR,RT1P 441C | | C210 | 87-010-546-080 | | CAP, ELECT 0.33-50V |
| | 87-026-580-080 | C-TR,DTA123JK | | C211 | 87-010-180-080 | | C-CER 1500P<HR,HE> |
| | 87-A30-086-070 | C-TR,CSD1306E | | C211 | 87-010-181-080 | | CAP,CHIP S 1800P<EZ,K> |
| | 89-112-965-080 | TR,2SA1296 (0.75W) | | C212 | 87-010-180-080 | | C-CER 1500P<HR,HE> |
| | 87-A30-085-070 | C-TR,CSA1362GR | | C212 | 87-010-181-080 | | CAP,CHIP S 1800P<EZ,K> |
| | 89-327-143-080 | TR,2SC2714 (0.1W) | | C213 | 87-010-186-080 | | CAP,CHIP 4700P |
| | 87-026-463-080 | TR,2SA933SRS | | C214 | 87-010-186-080 | | CAP,CHIP 4700P |
| | 87-A30-221-040 | C-TR,DTA 114WK | | C215 | 87-010-403-080 | | CAP, ELECT 3.3-50V |
| | 89-505-434-540 | C-FET,2SK543-TB(4/5) | | C216 | 87-010-403-080 | | CAP, ELECT 3.3-50V |
| | 87-A30-137-010 | TR,2SD2494<K> | | C217 | 87-010-260-080 | | CAP, ELECT 47-25V |
| | 87-A30-138-010 | TR,2SB1625<K> | | C218 | 87-010-260-080 | | CAP, ELECT 47-25V |
| | | | | C219 | 87-010-805-080 | | C-CAP,1UF-16FZ |
| DIODE | | | | | | | |
| | 87-A40-470-080 | DIODE,1SS254 | | C220 | 87-010-805-080 | | C-CAP,1UF-16FZ |
| | 87-A40-115-060 | DIODE,RS603M | | C221 | 87-010-213-080 | | C-CAP,S 0.015-50 B<EZ,K> |
| | 87-A40-269-080 | C-DIODE,MC2836 | | C222 | 87-010-213-080 | | C-CAP,S 0.015-50 B<EZ,K> |
| | 87-A40-509-080 | ZENER,MTZJ6.8C | | C223 | 87-010-197-080 | | CAP,CHIP 0.01 DM<EZ,K> |
| | 87-A40-270-080 | C-DIODE,MC2838 | | C224 | 87-010-197-080 | | CAP,CHIP 0.01 DM<EZ,K> |
| | 87-070-274-080 | DIODE,1N4003 SEM | | C225 | 87-010-176-080 | | C-CAP,S 680P-50 SL |
| | 87-A40-341-080 | ZENER,MTZJ 36 A | | C226 | 87-010-176-080 | | C-CAP,S 680P-50 SL |
| | 87-A40-308-080 | ZENER,DZ10M | | C229 | 87-A10-812-080 | | C-CAP,S 220P-200 J CH |
| | 87-A40-004-080 | ZENER,MTZJ16A | | C230 | 87-A10-812-080 | | C-CAP,S 220P-200 J CH |
| | 87-A40-488-080 | DIODE,1SS244 | | C233 | 87-010-544-080 | | CAP, ELECT 0.1-50V |
| | 87-A40-299-080 | ZENER,DZ5.1M | | C234 | 87-010-544-080 | | CAP, ELECT 0.1-50V |
| | 87-A40-345-080 | ZENER,MTZJ10C | | C235 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| | 87-A40-184-090 | DIODE,RF34 | | C237 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-A40-302-080 | ZENER,DZ5.6M | | C238 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-A40-002-080 | ZENER,MTZJ5.1C | | C239 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-A40-438-080 | ZENER,MTZJ4.7A | | C240 | 87-012-368-080 | | C-CAP,S 0.1-50 F |
| | 87-A40-234-080 | ZENER,MTZJ5.6A | | C241 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| | | | | C242 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| | | | | C247 | 87-010-178-080 | | CAP, CHIP 1000P |

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|--------------------------------|----------|----------------|-----------|------------------------------|
| C248 | 87-010-178-080 | | CAP, CHIP 1000P | C387 | 87-012-145-080 | | CAP, CHIP S 270P CH<HR,HE,K> |
| C299 | 87-010-197-080 | | CAP,CHIP 0.01 DM<EZ,K> | C391 | 87-010-319-080 | | C-CAP,S 56P-50 CH<HR,HE> |
| C280 | 87-010-188-080 | | C-CAP,S 6800P-50 B | C391 | 87-012-145-080 | | CAP, CHIP S 270P CH<EZ> |
| C301 | 87-010-318-080 | | C-CAP,S 47P-50 CH | C392 | 87-010-319-080 | | C-CAP,S 56P-50 CH<HR,HE> |
| C302 | 87-010-318-080 | | C-CAP,S 47P-50 CH | C392 | 87-012-145-080 | | CAP, CHIP S 270P CH<EZ> |
| C303 | 87-012-157-080 | | C-CAP,S 330P-50 CH | C393 | 87-010-319-080 | | C-CAP,S 56P-50 CH<HR,HE> |
| C304 | 87-012-157-080 | | C-CAP,S 330P-50 CH | C393 | 87-012-145-080 | | CAP, CHIP S 270P CH<EZ> |
| C305 | 87-012-145-080 | | CAP, CHIP S 270P CH | C394 | 87-010-319-080 | | C-CAP,S 56P-50 CH<HR,HE,K> |
| C306 | 87-012-145-080 | | CAP, CHIP S 270P CH | C394 | 87-012-145-080 | | CAP, CHIP S 270P CH<EZ> |
| C307 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C401 | 87-010-401-080 | | CAP, ELECT 1-50V |
| C309 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25<HR,HE,K> | C402 | 87-010-401-080 | | CAP, ELECT 1-50V |
| C310 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25<HR,HE,K> | C403 | 87-010-182-080 | | C-CAP,S 2200P-50 B |
| C311 | 87-010-198-080 | | CAP, CHIP 0.022 | C404 | 87-010-182-080 | | C-CAP,S 2200P-50 B |
| C312 | 87-010-198-080 | | CAP, CHIP 0.022 | C405 | 87-010-193-080 | | CHIP CAPACITOR,0.033 |
| C313 | 87-010-178-080 | | CHIP CAP 1000P<HR,HE> | C406 | 87-010-193-080 | | CHIP CAPACITOR,0.033 |
| C313 | 87-010-179-080 | | CHIP CAP S 1200P<EZ> | C407 | 87-010-405-080 | | CAP, ELECT 10-50V |
| C313 | 87-010-180-080 | | C-CER 1500P<K> | C408 | 87-010-405-080 | | CAP, ELECT 10-50V |
| C314 | 87-010-178-080 | | CHIP CAP 1000P<HR,HE> | C409 | 87-010-380-080 | | CAP, ELECT 47-16V |
| C314 | 87-010-179-080 | | CHIP CAP S 1200P<EZ> | C410 | 87-010-380-080 | | CAP, ELECT 47-16V |
| C314 | 87-010-180-080 | | C-CER 1500P<K> | C411 | 87-010-405-080 | | CAP, ELECT 10-50V |
| C315 | 87-010-178-080 | | CHIP CAP 1000P<HR,HE,EZ> | C412 | 87-010-112-080 | | CAP, ELECT 100-16V |
| C315 | 87-010-182-080 | | C-CAP,S 2200P-50 B<K> | C415 | 87-010-187-080 | | CAP CHIP S5600P |
| C316 | 87-010-178-080 | | CHIP CAP 1000P<HR,HE,EZ> | C416 | 87-010-187-080 | | CAP CHIP S5600P |
| C316 | 87-010-182-080 | | C-CAP,S 2200P-50 B<K> | C457 | 87-010-404-080 | | CAP, ELECT 4.7-50V |
| C317 | 87-012-142-080 | | CAP,S 0.33-16<EZ> | C458 | 87-010-404-080 | | CAP, ELECT 4.7-50V |
| C318 | 87-012-142-080 | | CAP,S 0.33-16<EZ> | C516 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C319 | 87-012-141-080 | | CHIP CAP,0.22-16 F<EZ> | C601 | 87-010-180-080 | | C-CER 1500P |
| C320 | 87-012-141-080 | | CHIP CAP,0.22-16 F<EZ> | C602 | 87-010-180-080 | | C-CER 1500P |
| C321 | 87-016-492-080 | | C-CAP,S 0.33-16 FZ<HR,HE,K> | C613 | 87-016-081-080 | | CAP,S 0.1-16 RK |
| C321 | 87-012-141-080 | | CHIP CAP,0.22-16 F<EZ> | C614 | 87-016-081-080 | | C-CAP,S 0.1-16 RK |
| C322 | 87-016-492-080 | | C-CAP,S 0.33-16 FZ<HR,HE,K> | C619 | 87-010-185-080 | | C-CAP,S 3900P-50 B |
| C322 | 87-012-141-080 | | CHIP CAP,0.22-16 F<EZ> | C620 | 87-010-185-080 | | C-CAP,S 3900P-50 B |
| C324 | 87-010-260-080 | | CAP, ELECT 47-25V | C621 | 87-010-401-080 | | CAP, ELECT 1-50V |
| C325 | 87-010-370-080 | | CAP,E 330-6.3 SME | C622 | 87-010-401-080 | | CAP, ELECT 1-50V |
| C327 | 87-010-404-080 | | CAP, ELECT 4.7-50V | C625 | 87-010-405-080 | | CAP, ELECT 10-50V |
| C328 | 87-010-404-080 | | CAP, ELECT 4.7-50V | C626 | 87-010-405-080 | | CAP, ELECT 10-50V |
| C332 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C629 | 87-010-405-080 | | CAP, ELECT 10-50V |
| C335 | 87-010-401-080 | | CAP, ELECT 1-50V | C630 | 87-010-213-080 | | CAP, CHIP 0.015-25 KB GRM |
| C336 | 87-010-401-080 | | CAP, ELECT 1-50V | C631 | 87-010-992-080 | | CHIP-CAP,S 0.047-25B |
| C337 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C632 | 87-010-263-080 | | CAP, ELECT 100-10V |
| C339 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C633 | 87-010-263-080 | | CAP, ELECT 100-10V |
| C340 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C634 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C351 | 87-012-140-080 | | CAP 470P | C635 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C352 | 87-012-140-080 | | CAP 470P | C636 | 87-010-194-080 | | CAP, CHIP 0.047 |
| C354 | 87-010-175-080 | | CAP 560P | C637 | 87-010-183-080 | | C-CAP,S 2700P-50 B |
| C355 | 87-012-349-080 | | C-CAP,S 1000P-50 CH | C641 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C356 | 87-010-260-080 | | CAP, ELECT 47-25V | C653 | 87-010-318-080 | | C-CAP,S 47P-50 B<EZ,K> |
| C357 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C654 | 87-010-318-080 | | C-CAP,S 47P-50 B<EZ,K> |
| C358 | 87-010-183-080 | | C-CAP,S 2700P-50 B | C667 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C359 | 87-010-183-080 | | C-CAP,S 2700P-50 B | C669 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| C360 | 87-010-183-080 | | C-CAP,S 2700P-50 B | C670 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| C370 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C671 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| C371 | 87-010-177-080 | | C-CAP,S820P-50 SL<EZ> | C672 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| C372 | 87-010-177-080 | | C-CAP,S820P-50 SL<EZ> | C701 | 87-010-381-080 | | CAP, ELECT 330-16V |
| C373 | 87-016-083-080 | | C-CAP,S 0.15-16 RK<HR,HE,K> | C702 | 87-010-404-080 | | CAP, ELECT 4.7-50V |
| C373 | 87-010-179-080 | | CAP,CHIP S B1200P<EZ> | C703 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| C374 | 87-016-083-080 | | C-CAP,S 0.15-16 RK<HR,HE,K> | C704 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| C374 | 87-010-179-080 | | CAP,CHIP S B1200P<EZ> | C709 | 87-010-322-080 | | C-CAP,S 100P-50 CH |
| C375 | 87-010-545-080 | | CAP,ELECT 0.22-50V<EZ> | C711 | 87-010-263-080 | | CAP, ELECT 100-10V |
| C376 | 87-010-545-080 | | CAP,ELECT 0.22-50V<EZ> | C712 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C378 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C713 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| C379 | 87-010-382-080 | | CAP, ELECT 22-25V<HR,HE,K> | C714 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| C380 | 87-010-382-080 | | CAP, ELECT 22-25V<HR,HE,K> | C715 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| C381 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C721 | 87-010-312-080 | | C-CAP,S 15P-50 CH |
| C382 | 87-010-312-080 | | C-CAP,S 15P-50 CH<HR,HE,K> | C722 | 87-010-312-080 | | C-CAP,S 15P-50 CH |
| C382 | 87-010-318-080 | | C-CAP,S 47P-50 CH<EZ> | C723 | 87-010-178-080 | | CHIP CAP 1000P |
| C383 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C725 | 87-010-178-080 | | CHIP CAP 1000P |
| C384 | 87-010-402-080 | | CAP, ELECT 2.2-50V | C727 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C385 | 87-010-184-080 | | CHIP CAPACITOR 3300P<EZ> | C728 | 87-010-248-080 | | CAP, ELECT 220-10V |
| C386 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C755 | 87-010-197-080 | | CAP, CHIP 0.01 DM |


| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|------------------------------|----------|----------------|-----------|------------------------------------|
| C756 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C942 | 87-010-151-080 | | C-CAP,S 7P-50 CH<EZ,K> |
| C757 | 87-010-318-080 | | C-CAP,S 47P-50 CH | C943 | 87-010-197-080 | | CAP, CHIP 0.01 DM<HR,HE> |
| C758 | 87-010-149-080 | | C-CAP,S 5P-50 CH | C944 | 87-014-051-080 | | CAPACITOR (PP),560P<HR,HE> |
| C759 | 87-012-154-080 | | C-CAP,S 150P-50 CH<HR,HE> | C945 | 87-010-197-080 | | CAP, CHIP 0.01 DM<HR,HE> |
| C760 | 87-012-154-080 | | C-CAP,S 150P-50 CH<HR,HE> | C947 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| C761 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C949 | 87-014-049-080 | | CAP,PP 470P-100J<EZ,K> |
| C762 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C950 | 87-014-073-080 | | CAP, PP 4700P-100J<HR,HE> |
| C763 | 87-010-194-080 | | CAP, CHIP 0.047 | C952 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| C764 | 87-010-319-080 | | C-CAP,S 56P-50 CH<HR,HE> | C953 | 87-010-197-080 | | CAP, CHIP 0.01 DM<HR,HE> |
| C765 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C954 | 87-010-400-080 | | CAP, ELECT 0.47-50V<HR,HE> |
| C766 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C956 | 87-010-263-080 | | CAP, ELECT 100-10V<HR,HE> |
| C767 | 87-010-405-080 | | CAP, ELECT 10-50V | C957 | 87-010-311-080 | | CAP, 12P<EZ,K> |
| C768 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C958 | 87-010-197-080 | | CAP, CHIP 0.01 DM<EZ,K> |
| C769 | 87-010-408-080 | | CAP, ELECT 47-50V | C959 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C770 | 87-015-821-080 | | C-CAP 0.047 | C960 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C771 | 87-010-407-080 | | CAP, ELECT 33-50V | C962 | 87-010-401-080 | | CAP, ELECT 1-50V |
| C772 | 87-010-194-080 | | CAP, CHIP 0.047 | CF801 | 87-008-261-010 | | FILTER, SFE10.7MA5-A<HR,HE> |
| C773 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25<HR,HE> | CF801 | 87-008-423-010 | | FLTR,CF SFE10.7 MS3G-A<EZ,K> |
| C773 | 87-010-179-080 | | CAP,CHIP S B1200P<EZ,K> | CF802 | 87-008-261-010 | | FILTER, SFE10.7MA5-A<HR,HE> |
| C774 | 87-010-263-080 | | CAP, ELECT 100-10V | CF802 | 82-785-747-010 | | CF,MS2 GHY R<EZ,K> |
| C775 | 87-010-404-080 | | CAP, ELECT 4.7-50V | CON351 | 86-ZM3-605-010 | | CONN ASSY,8P-RPB<K> |
| C776 | 87-010-197-080 | | CAP, CHIP 0.01 DM<EZ,K> | FB301 | 87-008-372-080 | | FILTER,EMI BL OIRNI<EZ> |
| C777 | 87-010-400-080 | | CAP, ELECT 0.47-50V | FC602 | 88-906-241-110 | | FF-CABLE,6P 1.25 |
| C778 | 87-010-401-080 | | CAP, ELECT 1-50V | FFE801 | A8-82A-190-030 | | 82A-1 FEUNM<HR> |
| C779 | 87-010-401-080 | | CAP, ELECT 1-50V | FFE801 | A8-82A-193-070 | | 82A-1 YFEUNC<HE> |
| C780 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | FFE801 | A8-62A-191-130 | | 62A-1 FEENM<EZ> |
| C781 | 87-010-405-080 | | CAP, ELECT 10-50V | FFE801 | A8-62A-19C-170 | | 62A-1 YFEENC<K> |
| C782 | 87-010-405-080 | | CAP, ELECT 10-50V | J201 | 87-A60-488-010 | | JACK,DIAG.3 BLK ST W/SW KM16AT |
| C783 | 87-015-819-080 | | CAPACITOR,0.01 | J202 | 87-A60-641-010 | | JACK,PIN 4P R/W/B JALCO |
| C784 | 87-010-197-080 | | CAP, CHIP 0.01 DM | J203 | 87-033-240-010 | | TERMINAL,SP 4P32SV1-05 |
| C785 | 87-010-403-080 | | CAP, ELECT 3.3-50V | J601 | 87-A60-426-010 | | JACK,PIN 6P YKC21-3835 |
| C786 | 87-010-403-080 | | CAP, ELECT 3.3-50V | J801 | 87-A60-202-010 | | TERMINAL,ANT 4P MSP-154V-02<HR,HE> |
| C787 | 87-010-186-080 | | CAP, CHIP 4700P<EZ> | J801 | 87-A60-427-010 | | TERMINAL,ANT 2P YKD31-0429<EZ,K> |
| C788 | 87-010-186-080 | | CAP, CHIP 4700P<EZ> | L201 | 87-003-383-010 | | COIL,1UH-S |
| C789 | 87-010-179-080 | | CAP,CHIP S B1200P<HR,HE,EZ> | L202 | 87-003-383-010 | | COIL,1UH-S |
| C789 | 87-010-188-080 | | CAP,CHIP 6800P<K> | L301 | 87-A50-049-010 | | COIL,TRAP 85K(COI) |
| C790 | 87-010-179-080 | | CAP,CHIP S B1200P<HR,HE,EZ> | L302 | 87-A50-049-010 | | COIL,TRAP 85K(COI) |
| C790 | 87-010-188-080 | | CAP,CHIP 6800P<K> | L351 | 87-007-342-010 | | COIL,OSC 85K BIAS |
| C791 | 87-010-405-080 | | CAP, ELECT 10-50V | L771 | 87-A50-266-010 | | COIL,FM DET-2N(TOK) |
| C793 | 87-010-177-080 | | C-CAP,S 820P-50 SL<HR,HE> | L772 | 87-A90-052-010 | | FLTR,CFMT-450A (TOK)<HR,HE> |
| C793 | 87-010-180-080 | | C-CER 1500P<EZ> | L772 | 87-A90-733-010 | | FLTR,PCFAZH-450(TOK)<EZ> |
| C793 | 87-010-181-080 | | CAP,CHIP S 1800P<K> | L781 | 87-005-847-080 | | COIL,2.2UH(CECS) |
| C794 | 87-010-406-080 | | CAP, ELECT 22-50 | L791 | 87-A50-027-010 | | COIL,1 POLE MPX(TOK)<EZ> |
| C795 | 87-010-596-080 | | CAP, S 0.047-16 | L792 | 87-A50-027-010 | | COIL,1 POLE MPX(TOK)<EZ> |
| C796 | 87-010-403-080 | | CAP, ELECT 3.3-50V | L832 | 86-NFZ-694-080 | | COIL,2.2UH K CECS |
| C797 | 87-010-197-080 | | CAP,CHIP S 1200P<HR,HE> | L941 | 87-A50-022-010 | | COIL,ANT SW (COI)7.96MHZ<HR,HE> |
| C797 | 87-010-180-080 | | C-CER 1500P<EZ,K> | L941 | 87-A50-020-010 | | COIL,ANT LW (COI)252KHZ<EZ,K> |
| C798 | 87-010-197-080 | | CAP,CHIP S 1200P<HR,HE> | L942 | 87-A50-173-010 | | COIL,OSC SW-N (COI)<HR,HE> |
| C798 | 87-010-180-080 | | C-CER 1500P<EZ,K> | L942 | 87-A50-019-010 | | COIL,OSC LW(COI)856KHZ<EZ,K> |
| C799 | 87-010-194-080 | | CAP, CHIP 0.047 | L943 | 87-005-372-080 | | COIL,S 1MHM<HR,HE> |
| C812 | 87-010-197-080 | | CAP, CHIP 0.01 DM | L944 | 87-A50-159-010 | | COIL,10MH K C2B<HR,HE> |
| C814 | 87-010-197-080 | | CAP, CHIP 0.01 DM | L981 | 88-NF8-625-010 | | COIL,AM PACK 3N(TOK)<HR,HE> |
| C820 | 87-010-408-080 | | CAP, ELECT 47-50V | L981 | 87-NF4-651-010 | | COIL,AM PACK 2N(TOM)<EZ,K> |
| C821 | 87-010-197-080 | | CAP, CHIP 0.01 DM | R237 | 87-A00-262-080 | | RES,M/F 0.15-2W J<HR,HE> |
| C822 | 87-010-197-080 | | CAP, CHIP 0.01 DM | R237 | 87-A00-257-080 | | RES,M/F 0.15-1W J<EZ,K> |
| C823 | 87-010-197-080 | | CAP, CHIP 0.01 DM | R238 | 87-A00-262-080 | | RES,M/F 0.15-2W J<HR,HE> |
| C828 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | R238 | 87-A00-257-080 | | RES,M/F 0.15-1W J<EZ,K> |
| C829 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | R239 | 87-A00-262-080 | | RES,M/F 0.15-2W J<HR,HE> |
| C859 | 87-010-197-080 | | CAP, CHIP 0.01 DM<EZ> | R239 | 87-A00-257-080 | | RES,M/F 0.15-1W J<EZ,K> |
| C861 | 87-012-156-080 | | C-CAP,S 220P-50 CH<EZ> | R240 | 87-A00-262-080 | | RES,M/F 0.15-2W J<HR,HE> |
| C862 | 87-012-156-080 | | C-CAP,S 220P-50 CH<EZ> | R240 | 87-A00-257-080 | | RES,M/F 0.15-1W J<EZ,K> |
| C863 | 87-012-140-080 | | CAP, 470P<EZ> | RY101 | 87-A90-464-010 | | RELAY, DG12D2-O(M) |
| C864 | 87-010-405-080 | | CAP,ELECT 10-50V<EZ> | RY201 | 87-A90-713-010 | | RELAY, 12V DQ12D1 |
| C865 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25<EZ> | SFR301 | 87-A90-557-080 | | SFR,33K H HOKU<EZ> |
| C866 | 87-010-405-080 | | CAP,ELECT 10-50V<EZ> | SFR302 | 87-A90-557-080 | | SFR,33K H HOKU<EZ> |
| C867 | 87-010-197-080 | | CAP, CHIP 0.01 DM<EZ> | SFR303 | 87-A90-557-080 | | SFR,33K H HOKU<EZ> |
| C868 | 87-010-316-080 | | C-CAP,S 33P-50 CH<EZ> | SFR304 | 87-A90-557-080 | | SFR,33K H HOKU<EZ> |
| C869 | 87-010-134-080 | | C-CAP,S 22P-50V<EZ> | SFR305 | 87-A90-433-080 | | SFR,50K H NVZ6TLTA<EZ> |
| C940 | 87-010-197-080 | | CAP, CHIP 0.01 DM | SFR306 | 87-A90-433-080 | | SFR,50K H NVZ6TLTA<EZ> |
| C941 | 87-010-314-080 | | C-CAP,S 22P-50V<HR,HE> | SFR351 | 87-A90-433-080 | | SFR,50K H NVZ6TLTA |

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|-----------|----------------|-----------|-------------------------------|----------|----------------|-----------|------------------------------|
| SFR352 | 87-A90-433-080 | | SFR,50K H NV26TLTA | C506 | 87-010-213-080 | | C-CAP,S 0.015-50 B |
| TC941 | 87-011-220-080 | | TRIMMER CAP 20P VTC<HR,HE> | C507 | 87-010-213-080 | | C-CAP,S 0.015-50 B |
| TC943 | 87-011-221-080 | | TRIMMER CAP 30P | C508 | 87-010-197-080 | | CAP, CHIP 0.01 DM |
| TH201 | 87-A90-221-010 | | C-THMS,100K | C509 | 87-010-181-080 | | CAP,CHIP S 1800P |
| TH202 | 87-A90-221-010 | | C-THMS,100K | C510 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| W104 | 85-NF5-628-010 | | F-CABLE 7P-2.5 | C511 | 87-018-209-080 | | CAP, CER 0.1-50V |
| X721 | 87-A70-061-010 | | VIB,XTAL 4.500MHZ CSA-309 | C512 | 87-010-374-040 | | CAP,E 47-10 |
| X771 | 87-A30-354-010 | | VIB,CER 450.0KHZ BFU C<HR,HE> | C513 | 87-010-401-040 | | CAP,E 1-50 SME |
| X851 | 87-A70-091-010 | | VIB,XTAL 4.332MHZ CSA-309<EZ> | C514 | 87-010-401-040 | | CAP,E 1-50 SME |
| | | | | C515 | 87-010-183-080 | | C-CAP,S 2700P-50 B |
| FRONT C.B | | | | C516 | 87-010-183-080 | | C-CAP,S 2700P-50 B |
| C101 | 87-010-550-040 | | CAP,E 100-6.3 GAS | C518 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C102 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C519 | 87-010-263-040 | | CAP,E 100-10 |
| C103 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C523 | 87-012-141-080 | | CHIP-CAPACITOR,0.22-16F |
| C104 | 87-010-494-040 | | CAP,E 1-50 GAS | C601 | 87-010-391-040 | | CAP,E 10-35 SME |
| C105 | 87-010-178-080 | | CHIP CAP 1000P | C602 | 87-010-186-080 | | CAP,CHIP 4700P |
| C106 | 87-A10-189-040 | | CAP,E 220-10 | C603 | 87-010-498-040 | | CAP,E 10-16 GAS |
| C107 | 87-010-197-080 | | CAP, CHIP 0.01 DM | C604 | 87-010-382-040 | | CAP,E 22-25 SME |
| C108 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C605 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C109 | 87-018-208-080 | | CAP 0.047-50F | C606 | 87-010-322-080 | | C-CAP,S 100P-50 CH |
| C110 | 87-012-157-080 | | C-CAP,S 330P-50 CH | C607 | 87-010-321-080 | | CHIP CAPACITOR,82P(J) |
| C111 | 87-010-320-080 | | CHIP CAP 68P | C608 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C112 | 87-010-312-080 | | C-CAP,S 15P-50 CH | C609 | 87-010-545-040 | | CAP,E 0.22-50 SME |
| C113 | 87-010-316-080 | | C-CAP,S 33P-50 CH | C610 | 87-010-322-080 | | C-CAP,S 100P-50 CH<EZ,K> |
| C114 | 87-010-182-080 | | C-CAP,S 2200P-50 B | C611 | 87-010-177-080 | | C-CAP,S 820P-50 SL |
| C115 | 87-010-182-080 | | C-CAP,S 2200P-50 B | C612 | 87-010-176-080 | | C-CAP,S 680P-50 SL<EZ,K> |
| C116 | 87-010-498-040 | | CAP,E 10-16 GAS | C614 | 87-A10-189-040 | | CAP,E 220-10 |
| C117 | 87-012-157-080 | | C-CAP,S 330P-50 CH | C651 | 87-010-401-040 | | CAP,E 1-50 SME |
| C118 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C652 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C119 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | C653 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 |
| C120 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | FB601 | 87-008-372-080 | | FILTER, EMI BL OIRNI |
| C121 | 87-010-194-080 | | CAP, CHIP 0.047 | FC501 | 85-NF5-615-010 | | CABLE,FFC 15P-1.25<HR,HE,EZ> |
| C122 | 87-010-194-080 | | CAP, CHIP 0.047 | FC501 | 88-911-201-110 | | FF-CABLE,11P 1.25<K> |
| C124 | 87-010-263-040 | | CAP,E 100-10 | FC801 | 85-NF5-618-010 | | CABLE,FFC 13P-1.25 |
| C125 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | FL201 | 88-NF7-651-010 | | FL,BJ602GK |
| C201 | 87-010-178-080 | | CHIP CAP 1000P | J601 | 87-A60-651-010 | | JACK,3.5MONO |
| C202 | 87-010-194-080 | | CAP, CHIP 0.047 | J602 | 87-A60-651-010 | | JACK,3.5MONO |
| C203 | 87-A10-797-040 | | CAP,E 47-35 M 5L SRM | L501 | 87-005-448-080 | | COIL 220UH,K |
| C204 | 87-010-497-040 | | CAP,E 4.7-35 GAS | LED401 | 87-070-197-080 | | LED,SLP7118C-51-S-T1 |
| C205 | 87-010-497-040 | | CAP,E 4.7-35 GAS | LED403 | 87-070-197-080 | | LED,SLP7118C-51-S-T1 |
| C206 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED405 | 87-070-197-080 | | LED,SLP7118C-51-S-T1 |
| C207 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED407 | 87-070-197-080 | | LED,SLP7118C-51-S-T1 |
| C208 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED409 | 87-070-197-080 | | LED,SLP7118C-51-S-T1 |
| C209 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED411 | 87-070-201-080 | | LED,SLP9118C-51-S-T1 |
| C210 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED412 | 87-070-201-080 | | LED,SLP9118C-51-S-T1 |
| C211 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED413 | 87-070-201-080 | | LED,SLP9118C-51-S-T1 |
| C212 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED414 | 87-070-201-080 | | LED,SLP9118C-51-S-T1 |
| C213 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED415 | 87-070-201-080 | | LED,SLP9118C-51-S-T1 |
| C214 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED417 | 87-070-281-080 | | LED,SLZ736A-25-S-T1 |
| C215 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED419 | 87-070-281-080 | | LED,SLZ736A-25-S-T1 |
| C216 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED421 | 87-070-281-080 | | LED,SLZ736A-25-S-T1 |
| C217 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED423 | 87-070-281-080 | | LED,SLZ736A-25-S-T1 |
| C218 | 87-012-157-080 | | C-CAP,S 330P-50 CH | LED425 | 87-070-281-080 | | LED,SLZ736A-25-S-T1 |
| C371 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED427 | 87-070-281-080 | | LED,SLZ736A-25-S-T1 |
| C372 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED428 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C373 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED429 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C375 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED430 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C376 | 87-010-173-080 | | C-CAP,S 390P-50 SL | LED431 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C377 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED432 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C378 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED433 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C402 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED434 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C404 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED435 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C406 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED436 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C408 | 87-010-196-080 | | CHIP CAPACITOR,0.1-25 | LED437 | 87-A40-380-080 | | LED,SEL6510C-TP5 GRN |
| C501 | 87-010-319-080 | | C-CAP,S 56P-50 CH | LED444 | 87-070-278-010 | | LED,SLZ-738A-24-S |
| C502 | 87-010-319-080 | | C-CAP,S 56P-50 CH | LED445 | 87-070-290-010 | | LED,SLZ 936-30-S |
| C503 | 87-012-393-080 | | C-CAP,S 0.22-16 R K | LED446 | 87-070-278-010 | | LED,SLZ-738A-24-S |
| C504 | 87-010-197-080 | | CAP, CHIP 0.01 DM | LED447 | 87-070-278-010 | | LED,SLZ-738A-24-S |
| C505 | 87-010-180-080 | | C-CER 1500P | LED448 | 87-070-290-010 | | LED,SLZ 936-30-S |
| | | | | LED449 | 87-070-278-010 | | LED,SLZ-738A-24-S |

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-----------------------------|------------|----------------|-----------|--------------------------------|
| S101 | 87-A90-791-010 | SW,RTRY | EC16B12204 ENCODER | DECK C.B | | | |
| S102 | 87-A90-535-010 | SW,RTRY | EC16B24304 | CON105 | 87-099-756-019 | | CONN, 15P 9604 S F<HR,HE,EZ> |
| S301 | 87-A90-095-080 | SW,TACT | EVQ11G04M | CON105 | 87-099-753-019 | | CONN, 11P H 9604<K> |
| S302 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SFR1 | 87-024-581-019 | | SFR, 3.3K DIA 6H |
| S303 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SOL1 | 82-ZM1-618-410 | | SOL ASSY, 27 |
| S304 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SOL2 | 82-ZM1-618-410 | | SOL ASSY, 27 |
| S305 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW1 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ |
| S306 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW2 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ |
| S307 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW3 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ |
| S308 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW4 | 87-036-110-010 | | SW,MICRO SPPB62<HR,HE,EZ> |
| S309 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW4 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ<K> |
| S310 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW5 | 87-036-110-010 | | SW,MICRO SPPB62<HR,HE,EZ> |
| S311 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW5 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ<K> |
| S312 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW6 | 87-036-110-010 | | SW,MICRO SPPB62<HR,HE,EZ> |
| S313 | 87-A90-095-080 | SW,TACT | EVQ11G04M<HR,HE,EZ> | SW6 | 87-036-110-010 | | SW,MICRO SPPB62<HR,HE,EZ> |
| S314 | 87-A90-095-080 | SW,TACT | EVQ11G04M<EZ> | SW8 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ<HR,HE,EZ> |
| S321 | 87-A90-095-080 | SW,TACT | EVQ11G04M | SW9 | 87-A90-248-019 | | SW,MICRO ESE11SH2CXQ<HR,HE,EZ> |
| S322 | 87-A90-095-080 | SW,TACT | EVQ11G04M | W001 | 82-ZM3-601-019 | | RBN,CORD, 4P-75 |
| S323 | 87-A90-095-080 | SW,TACT | EVQ11G04M | HEAD-1 C.B | | | |
| S324 | 87-A90-095-080 | SW,TACT | EVQ11G04M | CON301 | 85-MA2-615-010 | | CON ASSY, 3P-PB<K> |
| S325 | 87-A90-095-080 | SW,TACT | EVQ11G04M | HEAD-2 C.B | | | |
| S326 | 87-A90-095-080 | SW,TACT | EVQ11G04M | CON351 | 87-NF6-616-010 | | CONN ASSY, 8P-RPB<HR,HE,EZ> |
| S327 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S331 | 87-A90-095-080 | SW,TACT | EVQ11G04M<EZ> | | | | |
| S332 | 87-A90-095-080 | SW,TACT | EVQ11G04M<EZ> | | | | |
| S333 | 87-A90-095-080 | SW,TACT | EVQ11G04M<EZ> | | | | |
| S335 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S341 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S342 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S343 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S344 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S345 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S346 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S347 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S348 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S349 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S350 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| X101 | 87-A70-070-080 | VIB,CER | 5.76MHZ CRHF | | | | |
| SW C.B | | | | | | | |
| S351 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S352 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S353 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S354 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| S355 | 87-A90-095-080 | SW,TACT | EVQ11G04M | | | | |
| AC1 C.B | | | | | | | |
| △ FC1 | 87-033-147-010 | | FUSE CLAMP,MT-20<HE,HR> | | | | |
| △ F101 | 87-035-369-010 | | FUSE, 5A 250V TE<HE,HR> | | | | |
| △ F101 | 87-035-364-010 | | FUSE, 1.6A 250V <EZ,K> | | | | |
| △ FC2 | 87-033-147-010 | | FUSE CLAMP,MT-20<HE,HR> | | | | |
| △ FC101 | 87-A90-505-080 | | FUSE CLAMP,TP00351-51<EZ,K> | | | | |
| △ FC102 | 87-A90-505-080 | | FUSE CLAMP,TP00351-51<EZ,K> | | | | |
| △ PT101 | 88-NF7-662-010 | | PT, 8NF-7 HR<HE,HR> | | | | |
| △ PT101 | 88-NF7-664-010 | | PT, 8NF-7 K<K> | | | | |
| △ PT101 | 88-NF7-665-010 | | PT, 8NF-7 EZ<EZ> | | | | |
| △ SW1 | 87-A90-165-010 | | SW,SL 1-2-3 SWS2301<HE,HR> | | | | |
| △ T1 | 87-A60-317-010 | | TERMINAL, 1P MSC<HE,HR> | | | | |
| △ T101 | 87-A60-317-010 | | TERMINAL, 1P MSC<EZ,K> | | | | |
| △ T102 | 87-A60-317-010 | | TERMINAL, 1P MSC<EZ,K> | | | | |
| △ T2 | 87-A60-317-010 | | TERMINAL, 1P MSC<HE,HR> | | | | |
| AC2 C.B | | | | | | | |
| △ PR101 | 87-026-682-080 | | PROTECTOR, 10A 60V491 | | | | |
| △ PR102 | 87-026-682-080 | | PROTECTOR, 10A 60V491 | | | | |
| △ PR103 | 87-026-682-080 | | PROTECTOR, 10A 60V491 | | | | |
| △ PR104 | 87-026-682-080 | | PROTECTOR, 10A 60V491 | | | | |

○ チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

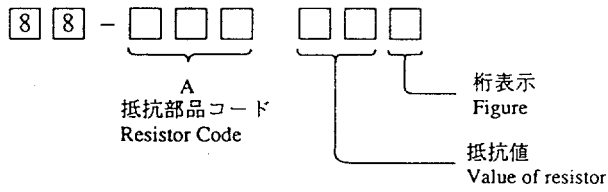

チップ抵抗
Chip resistor

| 容量 Wattage | 種類 Type | 許容誤差 Tolerance | 記号 Symbol | 寸法／Dimensions (mm) | | | 抵抗コード : A Resistor Code: A | |
|---------------|------------|-------------------|--------------|--------------------|-----|------|-------------------------------|-----|
| | | | | 外形／Form | L | W | | t |
| 1/16W | 1608 | ±5% | CJ | | 1.6 | 0.8 | 0.45 | 108 |
| 1/10W | 2125 | ±5% | CJ | | 2 | 1.25 | 0.45 | 118 |
| 1/8W | 3216 | ±5% | CJ | | 3.2 | 1.6 | 0.55 | 128 |

TRANSISTOR ILLUSTRATION



E C B

KTA1266GR
KTC3198GR



E C B

CC5551




E C B

2SA1296



B C E

2SB1370
2SB1625
2SD2494
FN1016
FP1016




E C B

2SA933
2SC4115




G D S


2SK3053

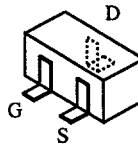

2SK2158

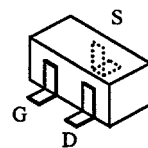

2SK543-TB(4/5)






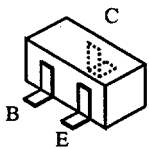


2SA1235F DTA123JK
2SC2714 RN1410
2SC3052F RT1N141C
CMBT5401 RT1N144C
CMBT5551 RT1P141C
CSA1362GR RT1P144C
CSD1306E RT1P441C
DTA114WK


FL GRID ASSIGNMENT & ANODE CONNECTION

FL, BJ602GK

GRID ASSIGNMENT

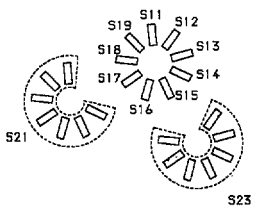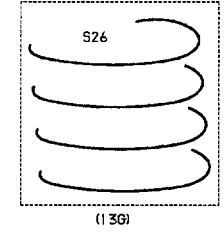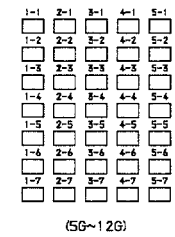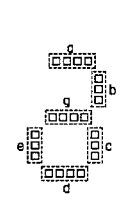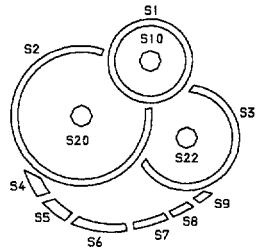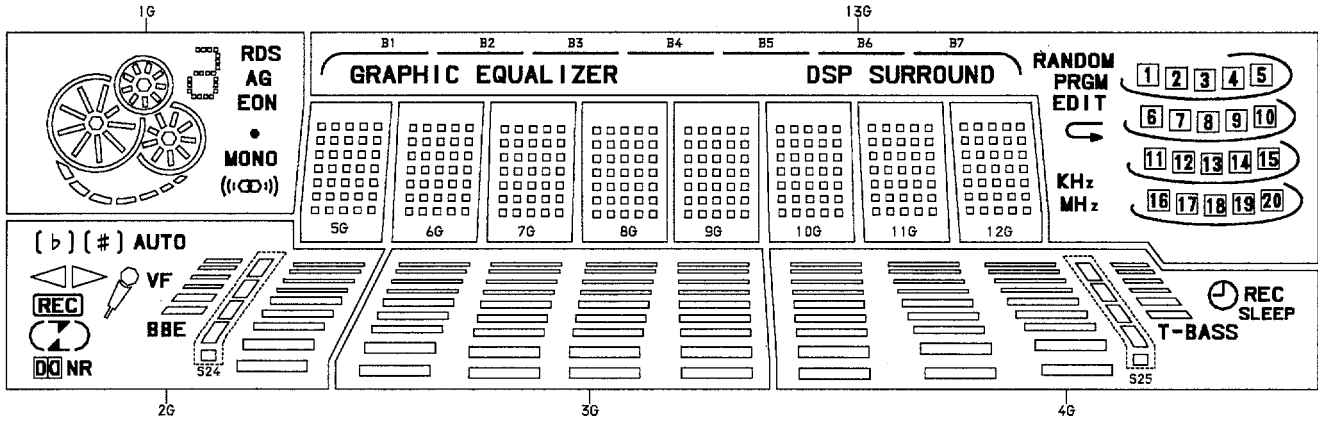

(1G)

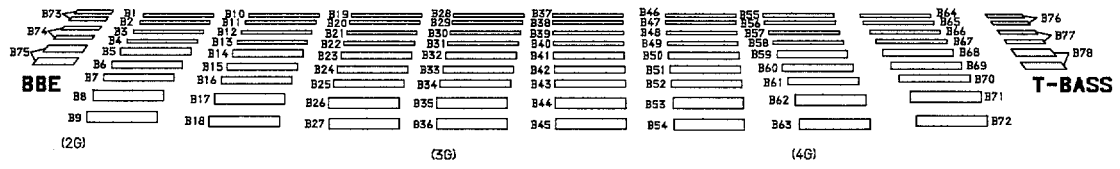










(2G)


(3G)

(4G)


ANODE CONNECTION

| | 1G | 2G | 3G | 4G | 5G-12G | 13G |
|-----|---|---|-----|---|--------|---|
| P1 | EON | B9 | B45 | REC | 1-1 | DSP SURROUND |
| P2 | AG |  NR | B36 | B72 | 2-1 | GRAPHIC EQUALIZER |
| P3 |  | BBE | B27 | B63 | 3-1 | B7 |
| P4 | MONO | S24 | B18 | B54 | 4-1 | B6 |
| P5 |  | BB | B44 |  | 5-1 | B5 |
| P6 | RDS |  | B35 | B71 | 1-2 | B4 |
| P7 | b |  | B26 | B62 | 2-2 | B3 |
| P8 | c |  | B17 | B53 | 3-2 | B2 |
| P9 | a, d, g | B7 | B43 | SLEEP | 4-2 | B1 |
| P10 | e | REC | B34 | B70 | 5-2 | RANDOM |
| P11 | S1 |  | B25 | B61 | 1-3 | PRGM |
| P12 | S11 |  | B16 | B52 | 2-3 | EDIT |
| P13 | S12 | B6 | B42 | T-BASS | 3-3 |  |
| P14 | S19 | b # | B33 | B69 | 4-3 | KHz |
| P15 | S13 |  | B24 | B60 | 5-3 | MHz |
| P16 | S10 |  | B15 | B51 | 1-4 | S26 |
| P17 | S18 | B5 | B41 | B78 | 2-4 | 16 |
| P18 | S14 | B75 | B32 | B68 | 3-4 | 11 |

| | 1G | 2G | 3G | 4G | 5G-12G | 13G |
|-----|-----|--|-----|-----|--------|-----------|
| P19 | S17 | B74 | B23 | B59 | 4-4 | 6 |
| P20 | S15 | B73 | B14 | B50 | 5-4 | 1 |
| P21 | S16 | B4 | B40 | B77 | 1-5 | 17 |
| P22 | S3 |  VF | B31 | B67 | 2-5 | 12 |
| P23 | S23 | AUTO | B22 | B58 | 3-5 | 7 |
| P24 | S22 | — | B13 | B49 | 4-5 | 2 |
| P25 | S9 | B3 | B39 | B76 | 5-5 | 18 |
| P26 | S8 | — | B30 | B66 | 1-6 | 13 |
| P27 | S7 | — | B21 | B57 | 2-6 | 8 |
| P28 | S6 | — | B12 | B48 | 3-6 | 3 |
| P29 | S5 | B2 | B38 | S25 | 4-6 | 19 |
| P30 | S4 | — | B29 | B65 | 5-6 | 14 |
| P31 | S2 | — | B20 | B56 | 1-7 | 9 |
| P32 | S21 | — | B11 | B47 | 2-7 | 4 |
| P33 | S20 | B1 | B37 | — | 3-7 | 20 |
| P34 | — | — | B28 | B64 | 4-7 | 15 |
| P35 | — | — | B19 | B55 | 5-7 | 10 |
| P36 | — | — | B10 | B46 | — | 5 |

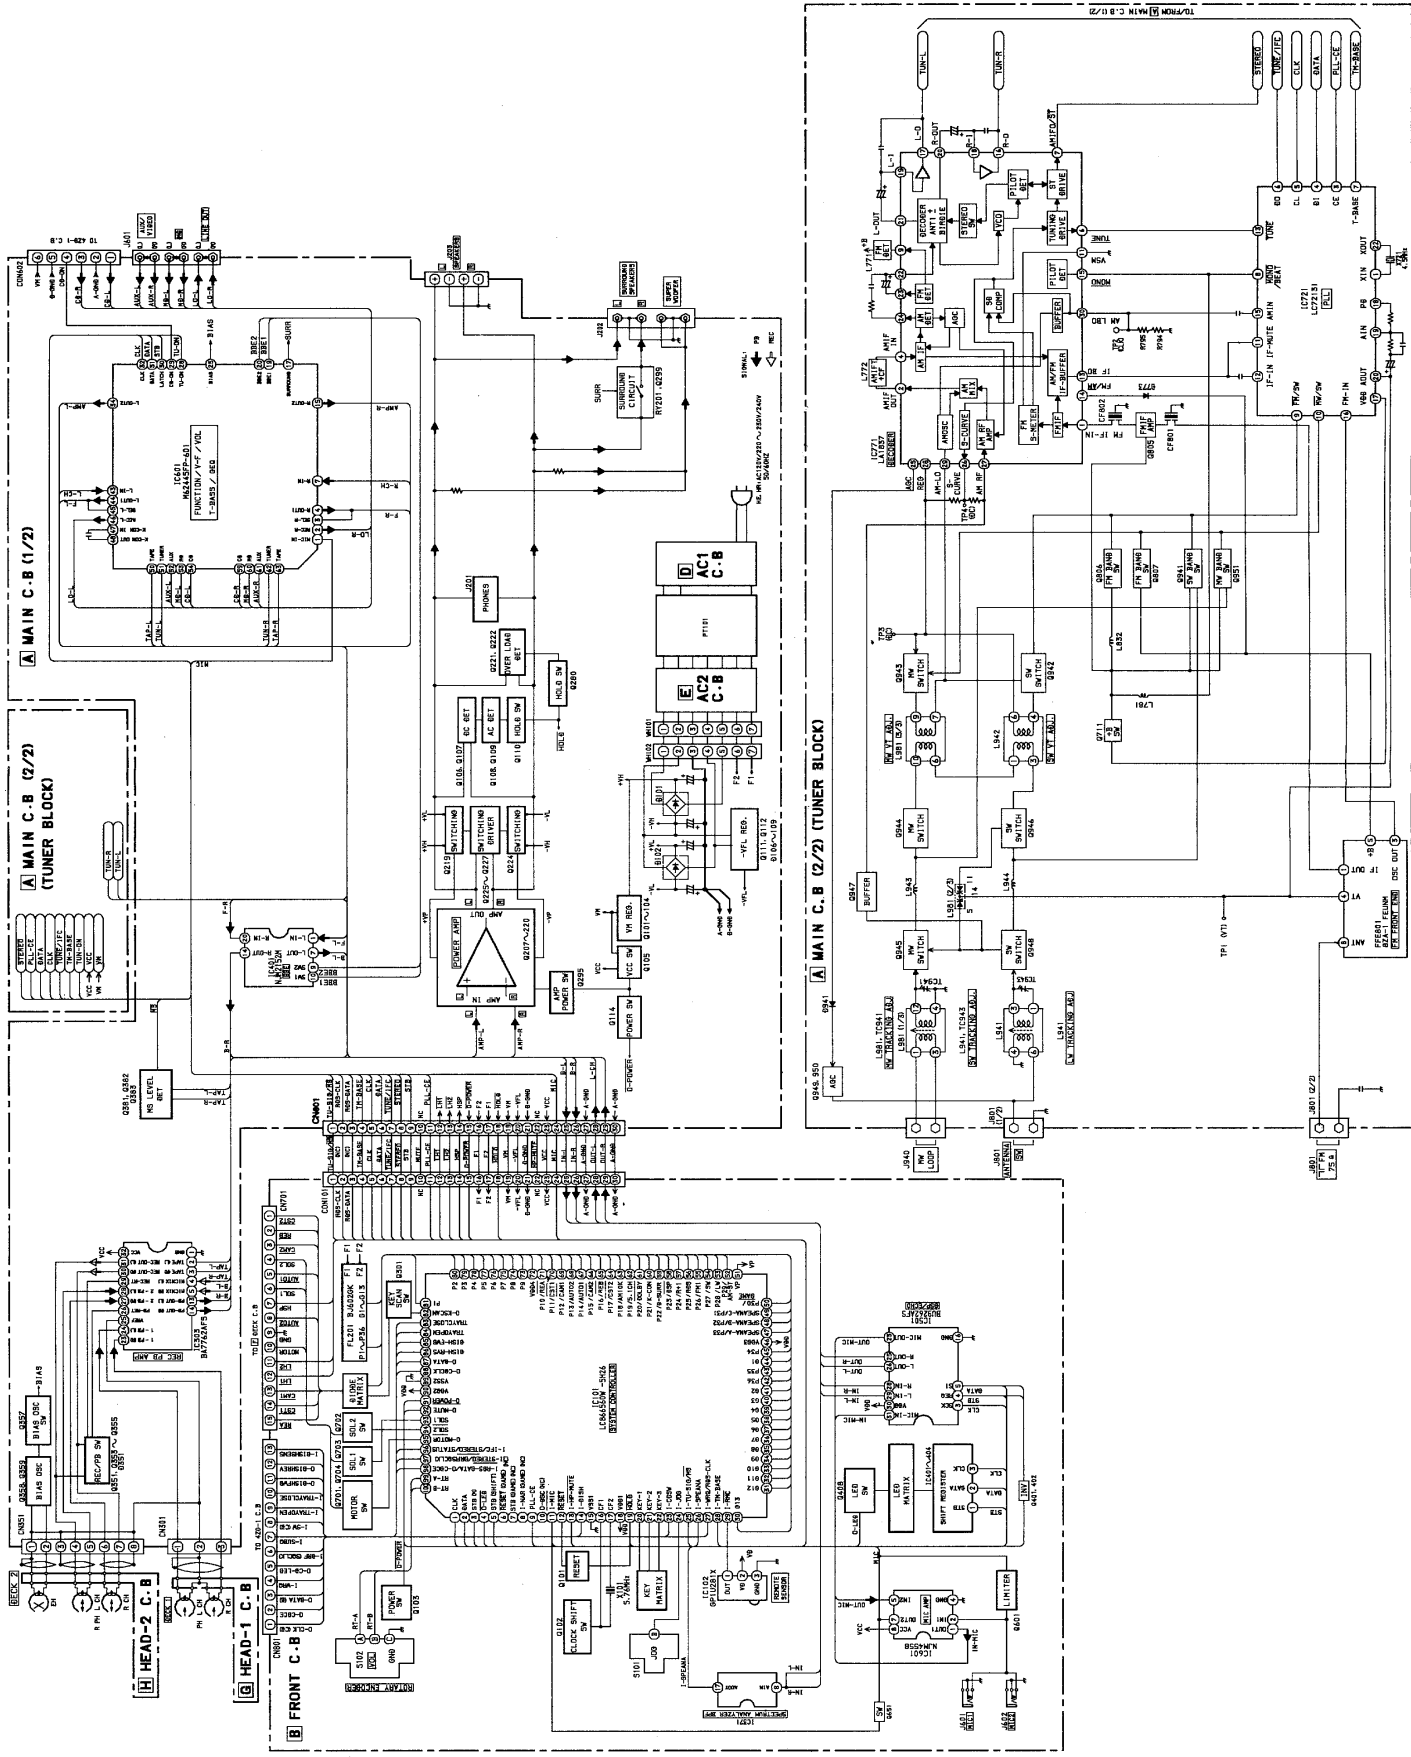


SCHEMATIC DIAGRAM - 2 (EZ, K: MAIN / FRONT)

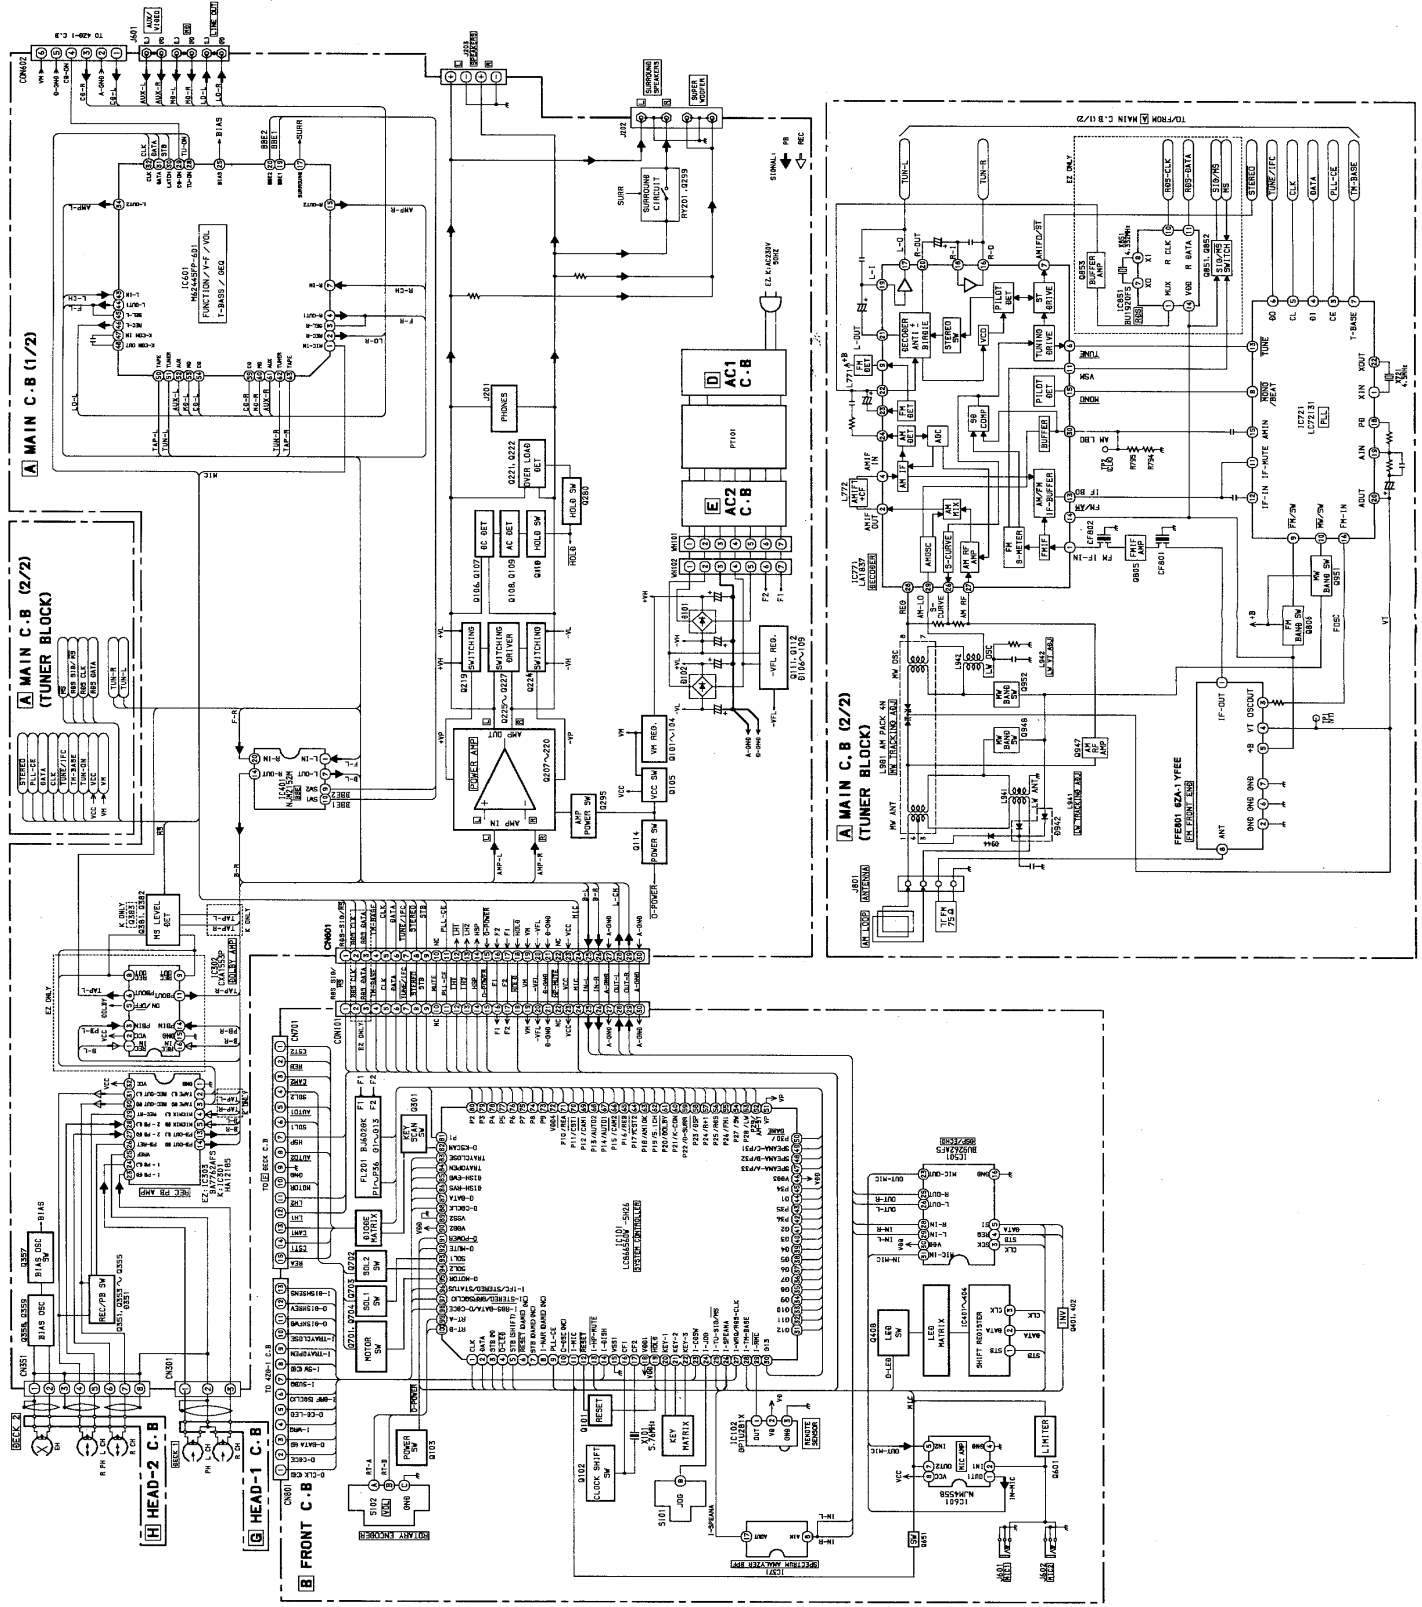



1 2 3 4 5 6 7 8 9 10 11 12 13 14

A

A MAIN C.B.

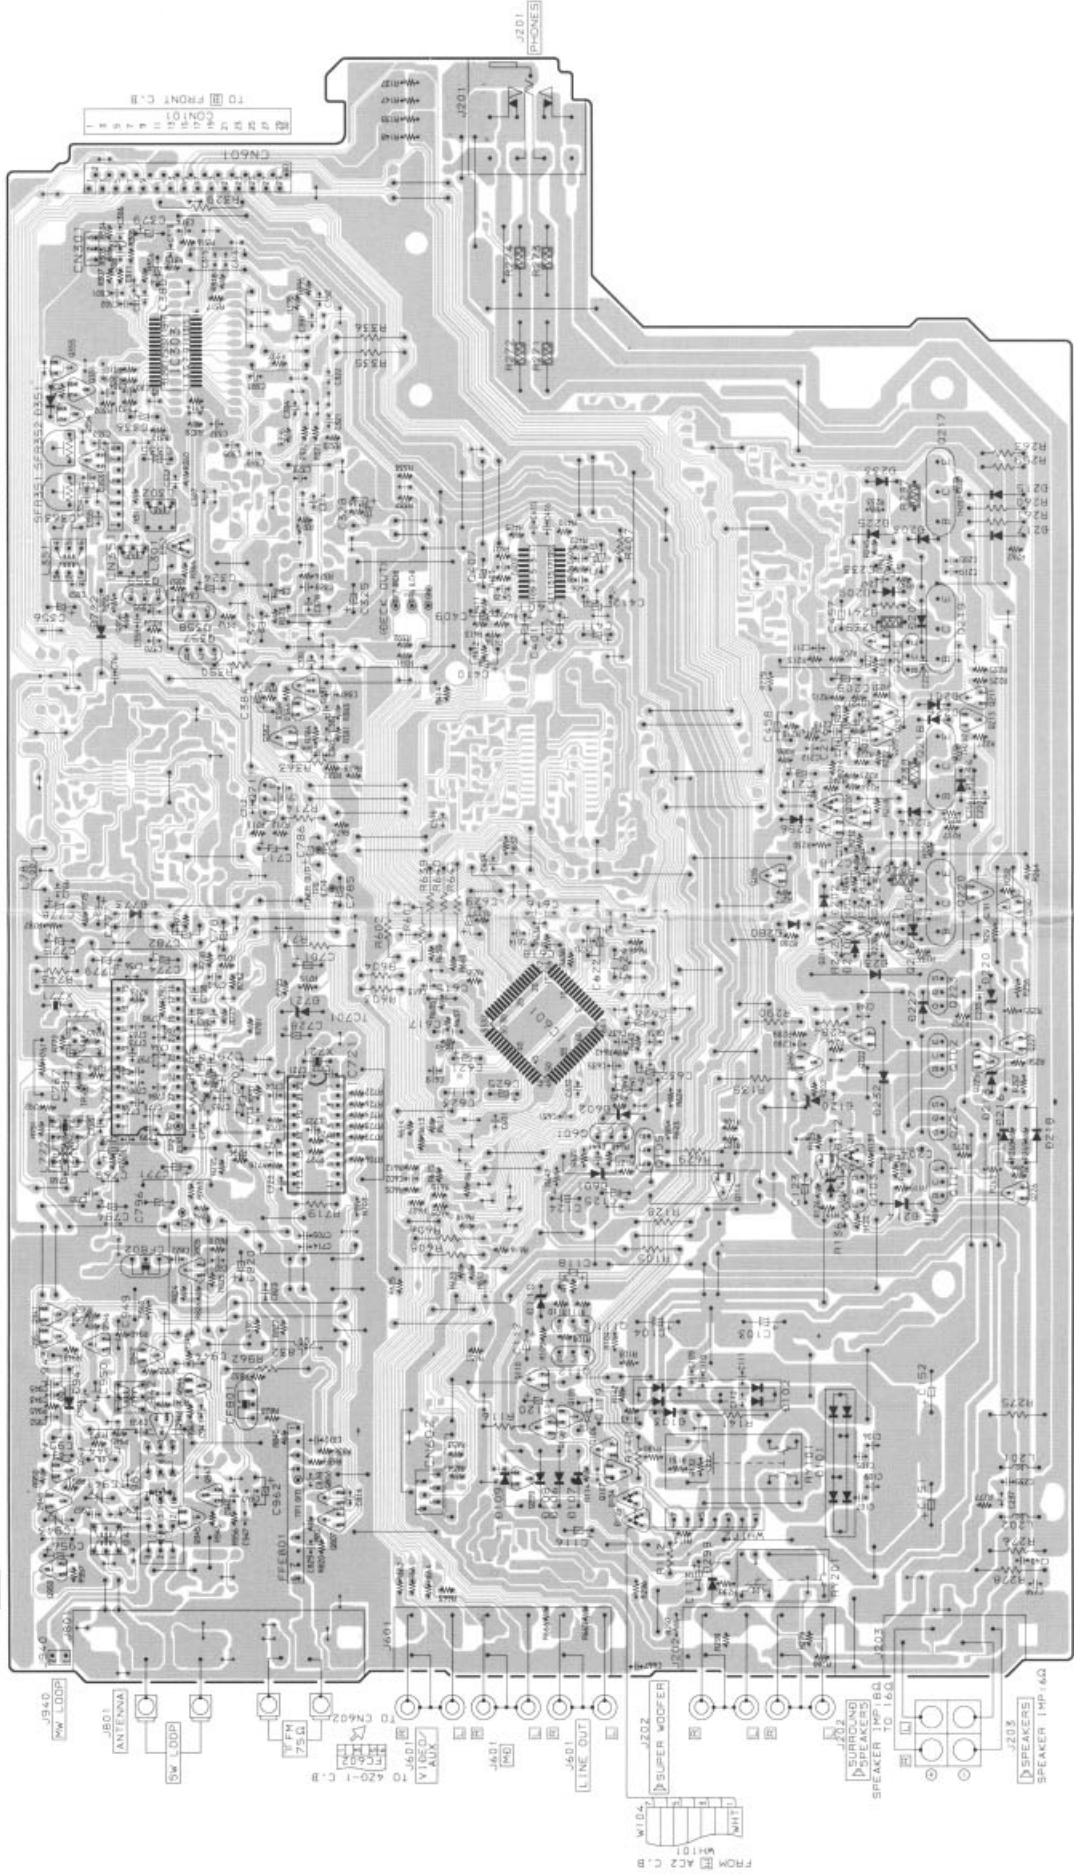

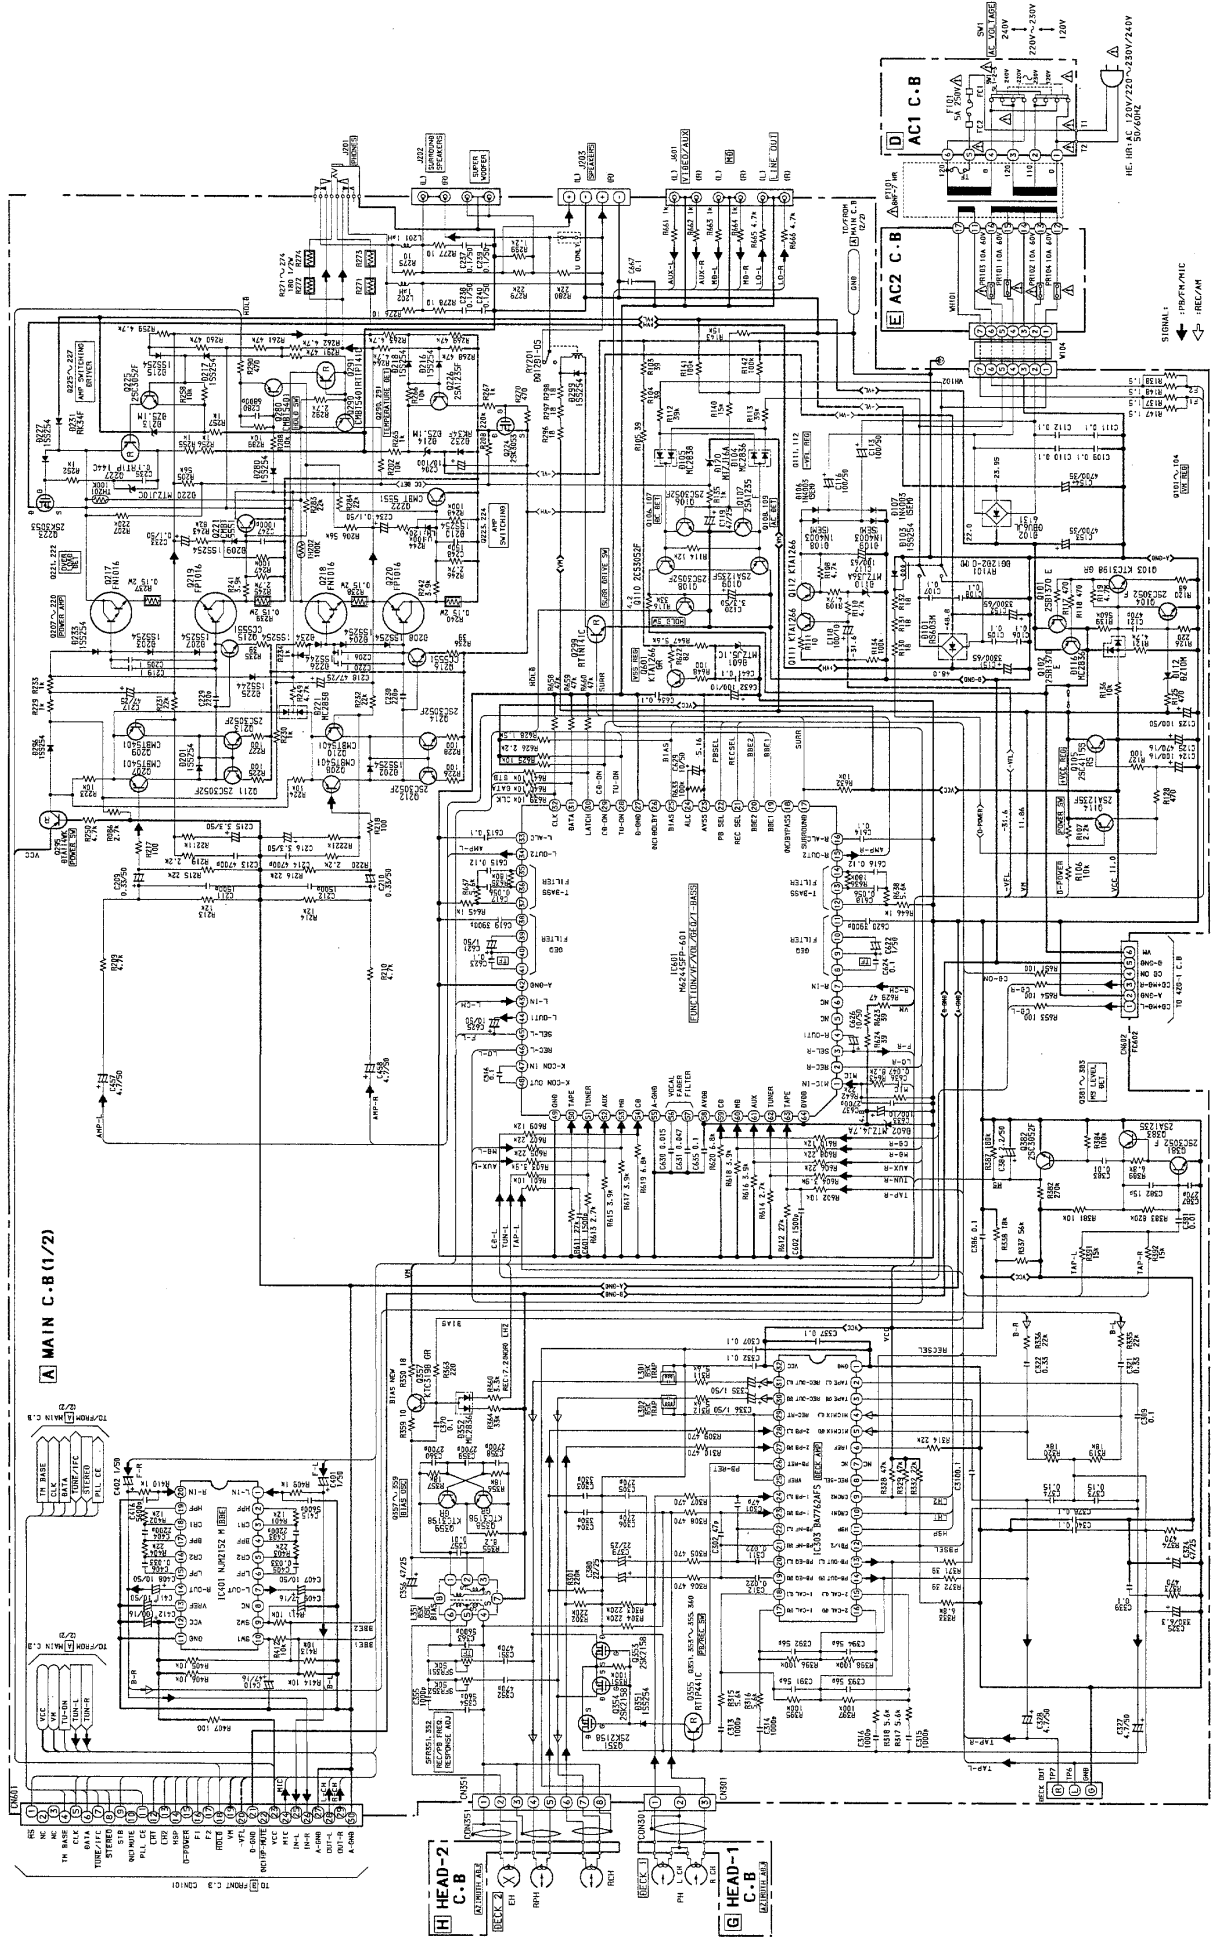


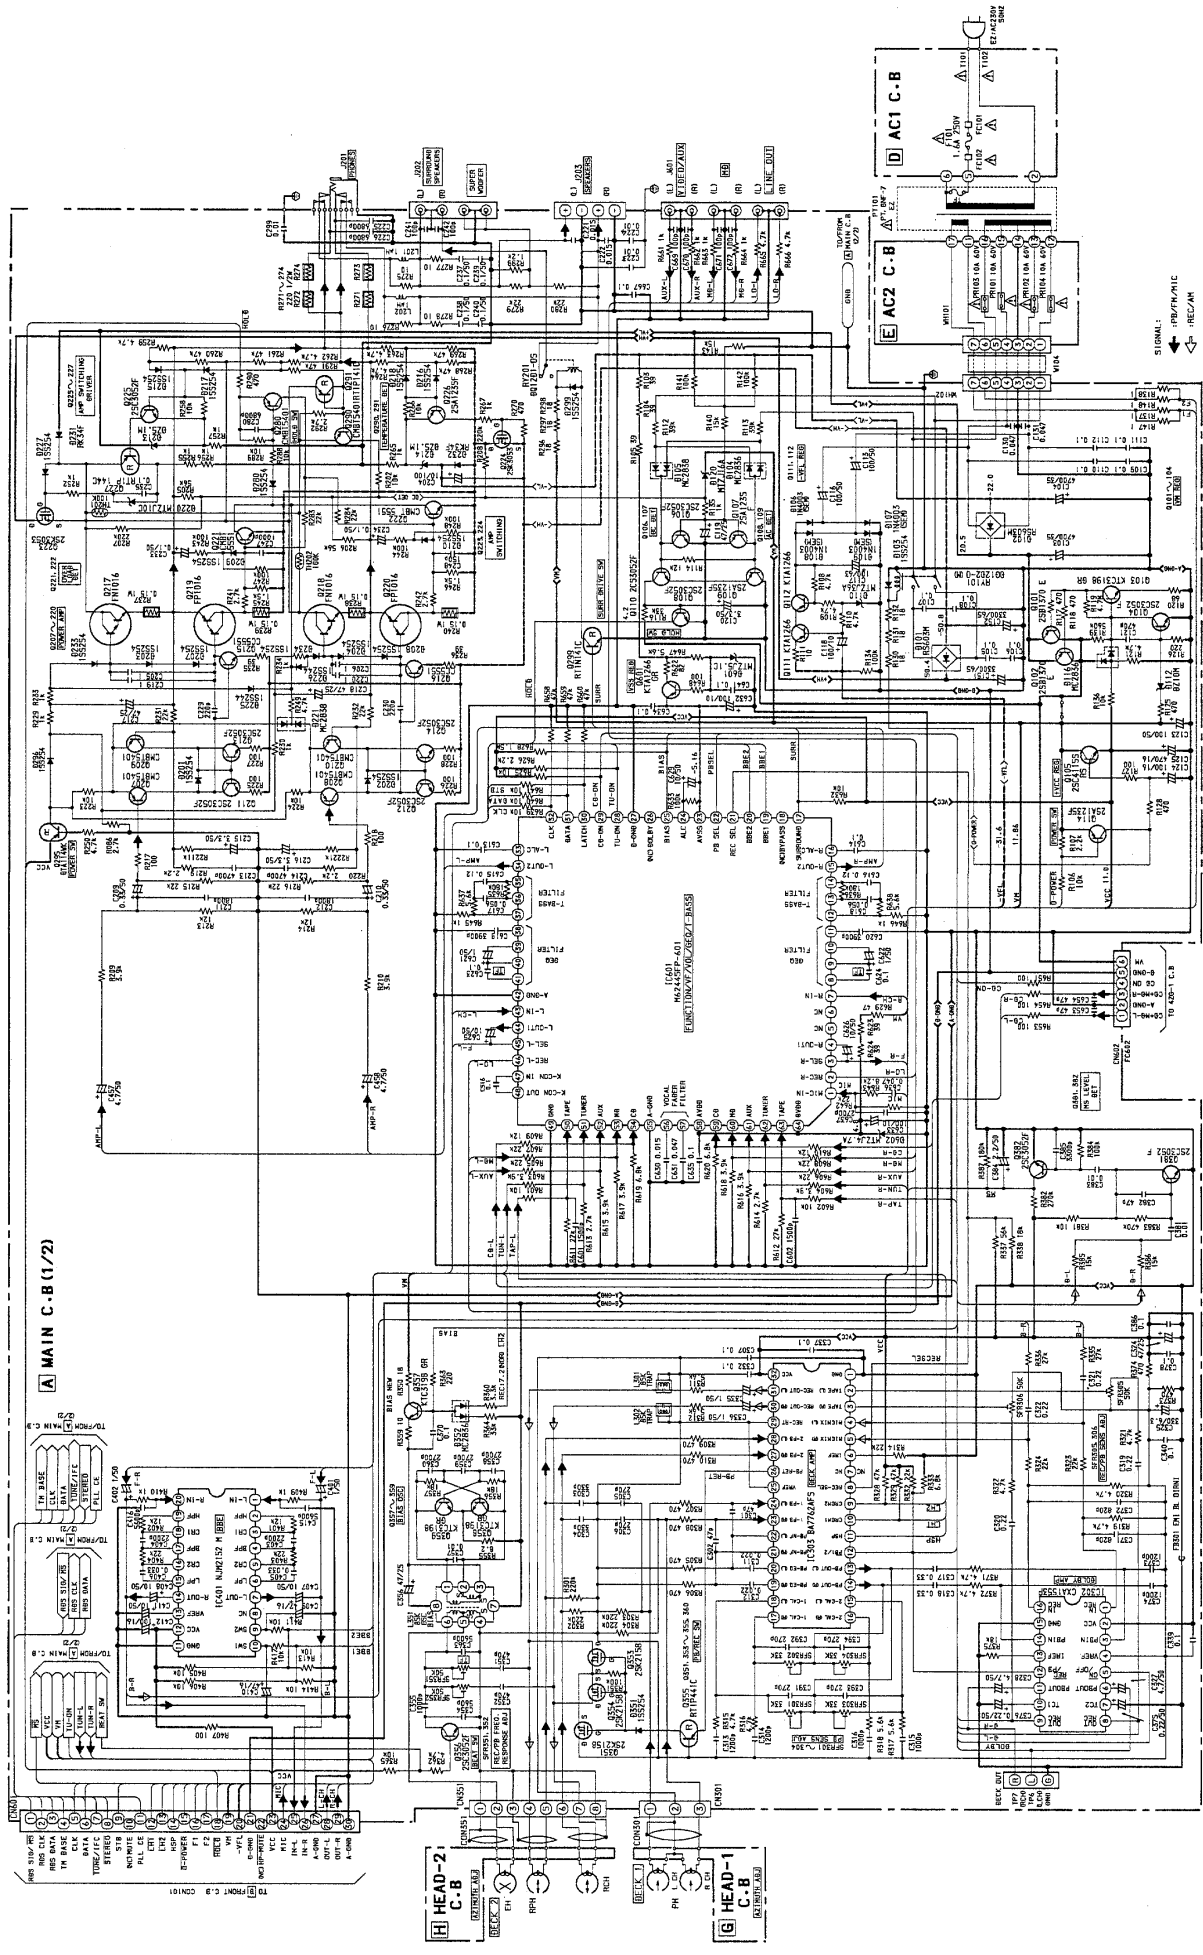


1 2 3 4 5 6 7 8 9 10 11 12 13 14

A B C D E F G H I J


A MAIN C.B

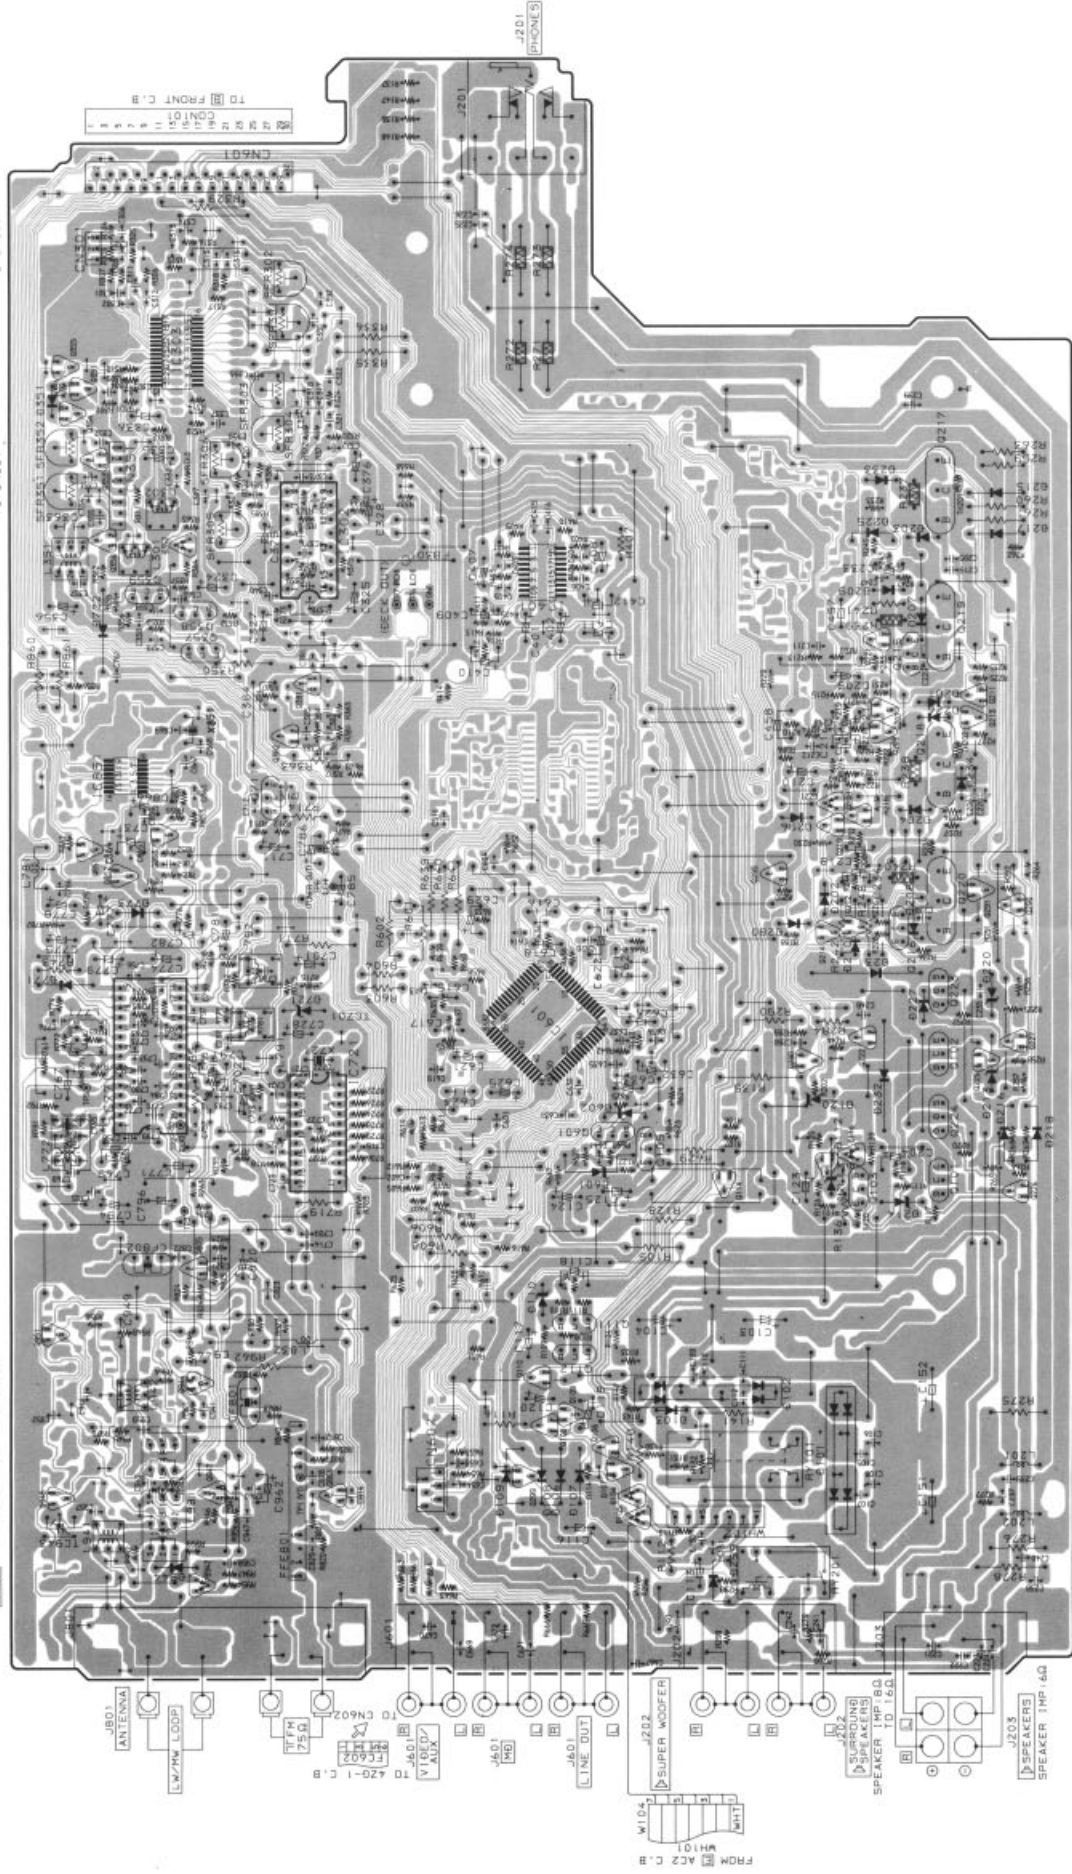



1 2 3 4 5 6 7 8 9 10 11 12 13 14

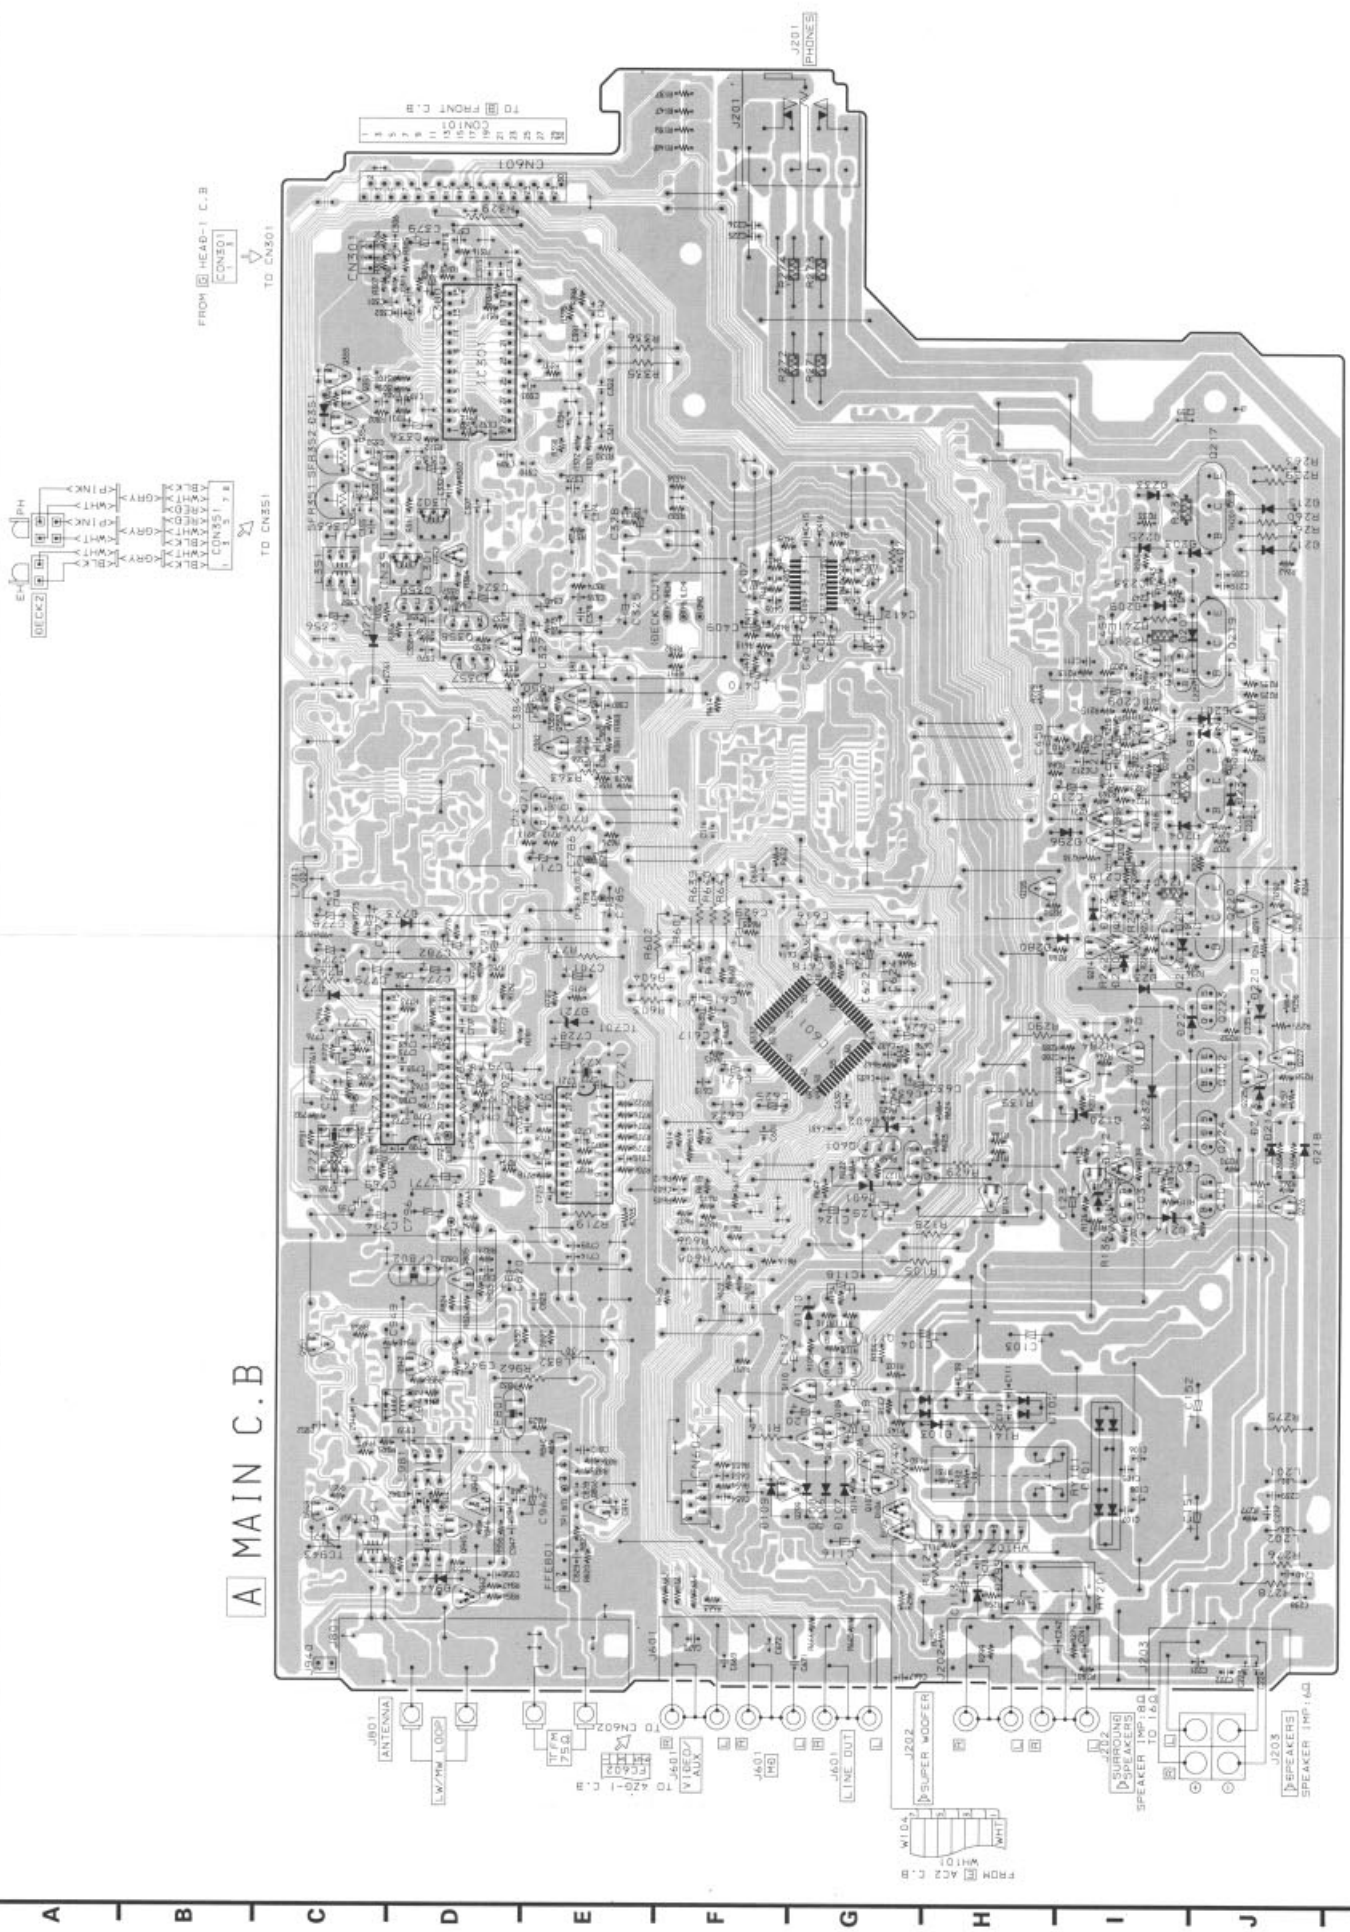


FROM HEAD-1 C.B.
CONECT
TO CN201

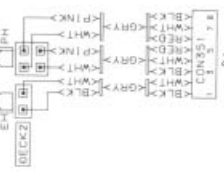

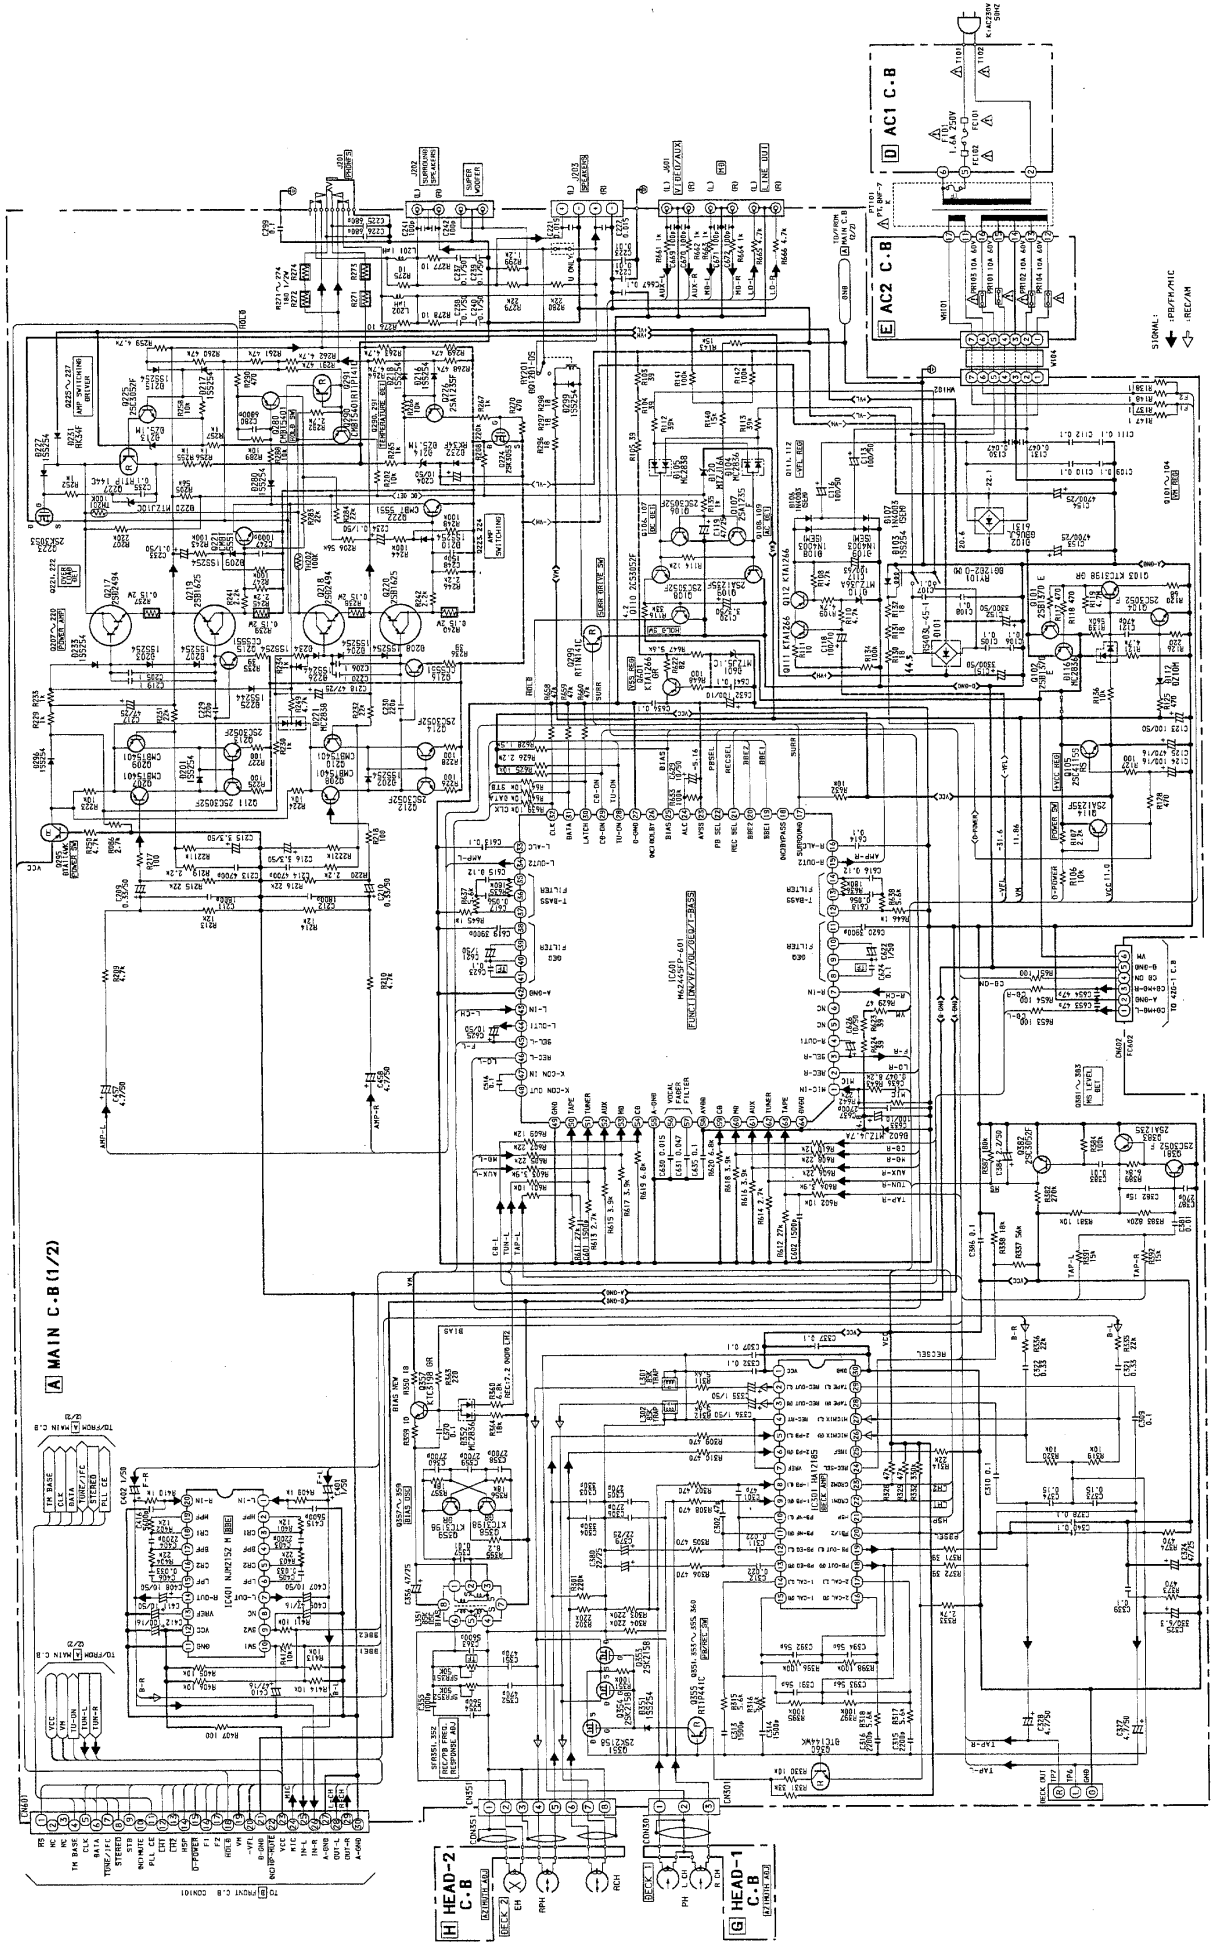

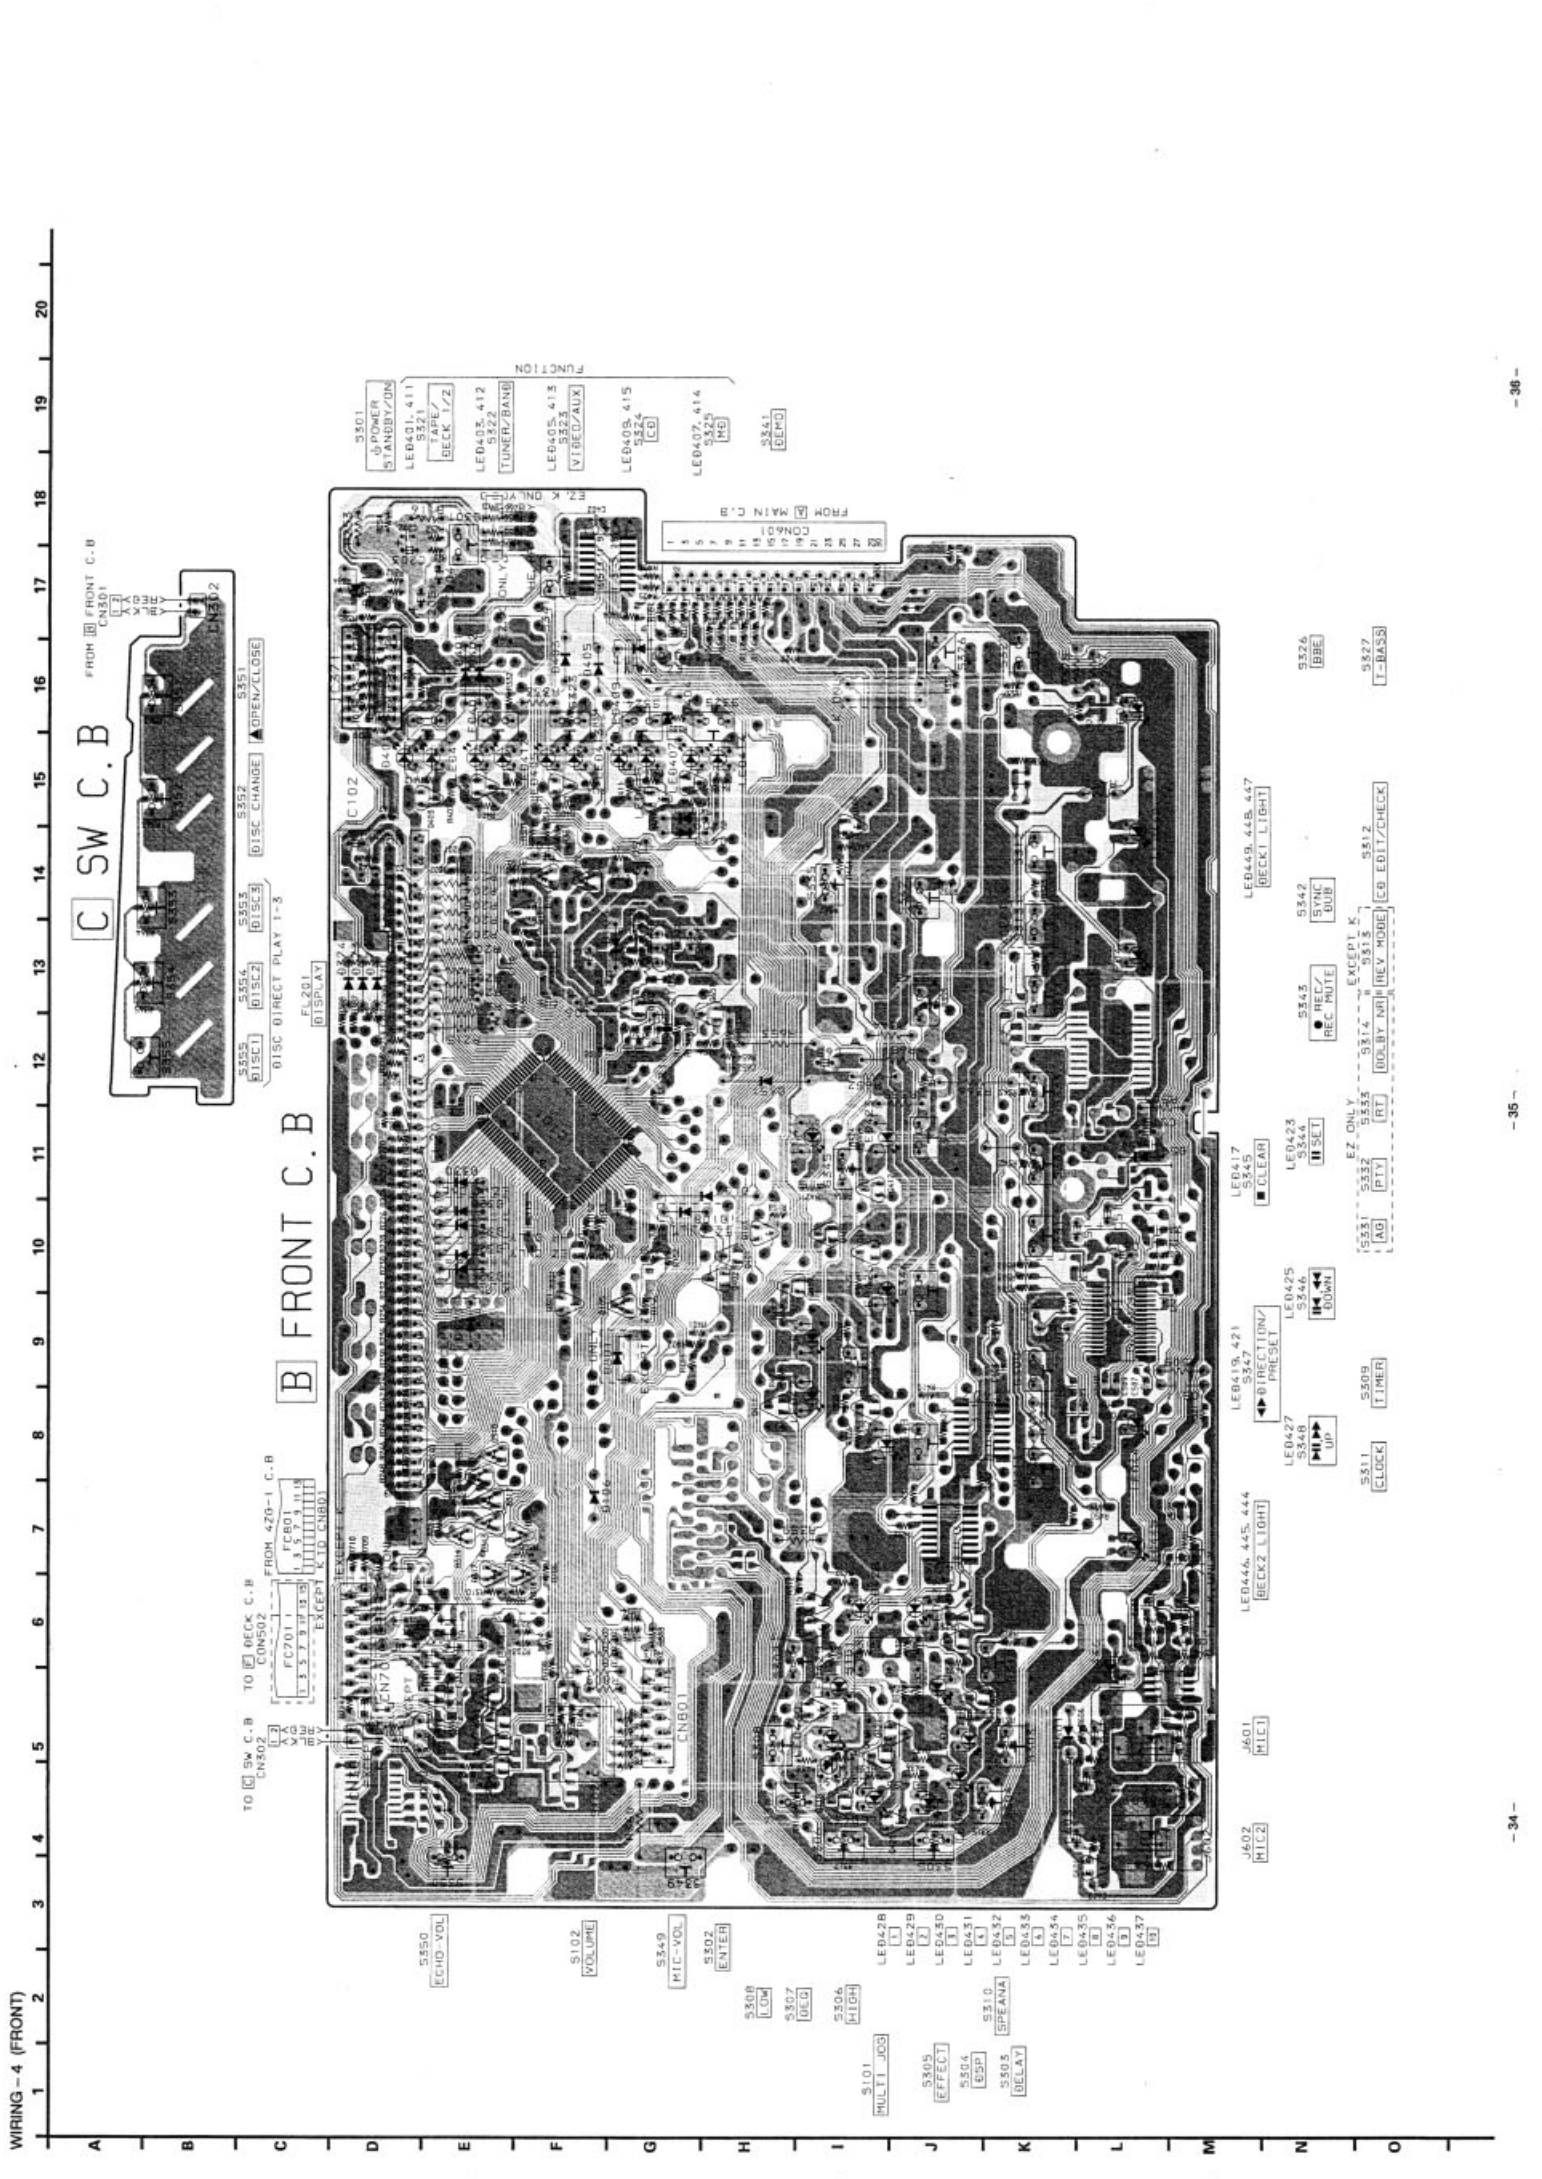


WIRING-4 (FRONT)

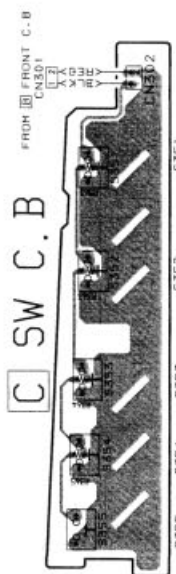


S355 DISC1 S356 DISC2 S357 DISC3 S358 DISC4
 S359 DISC5 S360 DISC6 S361 DISC7 S362 DISC8
 S363 DISC9 S364 DISC10 S365 DISC11 S366 DISC12
 S367 DISC13 S368 DISC14 S369 DISC15 S370 DISC16
 S371 DISC17 S372 DISC18 S373 DISC19 S374 DISC20
 S375 DISC21 S376 DISC22 S377 DISC23 S378 DISC24
 S379 DISC25 S380 DISC26 S381 DISC27 S382 DISC28
 S383 DISC29 S384 DISC30 S385 DISC31 S386 DISC32
 S387 DISC33 S388 DISC34 S389 DISC35 S390 DISC36
 S391 DISC37 S392 DISC38 S393 DISC39 S394 DISC40
 S395 DISC41 S396 DISC42 S397 DISC43 S398 DISC44
 S399 DISC45 S400 DISC46

TO SW C.B TO RECK C.B
 CONS02 FROM 420-1 C.B
 FC701 FC801
 1 3 3 7 3 3 3 3
 EXCEPT K TO CN801


S401 MIC1 S402 MIC2
 S403 MIC3 S404 MIC4
 S405 MIC5 S406 MIC6
 S407 MIC7 S408 MIC8
 S409 MIC9 S410 MIC10
 S411 MIC11 S412 MIC12
 S413 MIC13 S414 MIC14
 S415 MIC15 S416 MIC16
 S417 MIC17 S418 MIC18
 S419 MIC19 S420 MIC20
 S421 MIC21 S422 MIC22
 S423 MIC23 S424 MIC24
 S425 MIC25 S426 MIC26
 S427 MIC27 S428 MIC28
 S429 MIC29 S430 MIC30
 S431 MIC31 S432 MIC32
 S433 MIC33 S434 MIC34
 S435 MIC35 S436 MIC36
 S437 MIC37 S438 MIC38
 S439 MIC39 S440 MIC40
 S441 MIC41 S442 MIC42
 S443 MIC43 S444 MIC44
 S445 MIC45 S446 MIC46
 S447 MIC47 S448 MIC48
 S449 MIC49 S450 MIC50
 S451 MIC51 S452 MIC52
 S453 MIC53 S454 MIC54
 S455 MIC55 S456 MIC56
 S457 MIC57 S458 MIC58
 S459 MIC59 S460 MIC60
 S461 MIC61 S462 MIC62
 S463 MIC63 S464 MIC64
 S465 MIC65 S466 MIC66
 S467 MIC67 S468 MIC68
 S469 MIC69 S470 MIC70
 S471 MIC71 S472 MIC72
 S473 MIC73 S474 MIC74
 S475 MIC75 S476 MIC76
 S477 MIC77 S478 MIC78
 S479 MIC79 S480 MIC80
 S481 MIC81 S482 MIC82
 S483 MIC83 S484 MIC84
 S485 MIC85 S486 MIC86
 S487 MIC87 S488 MIC88
 S489 MIC89 S490 MIC90
 S491 MIC91 S492 MIC92
 S493 MIC93 S494 MIC94
 S495 MIC95 S496 MIC96
 S497 MIC97 S498 MIC98
 S499 MIC99 S500 MIC100

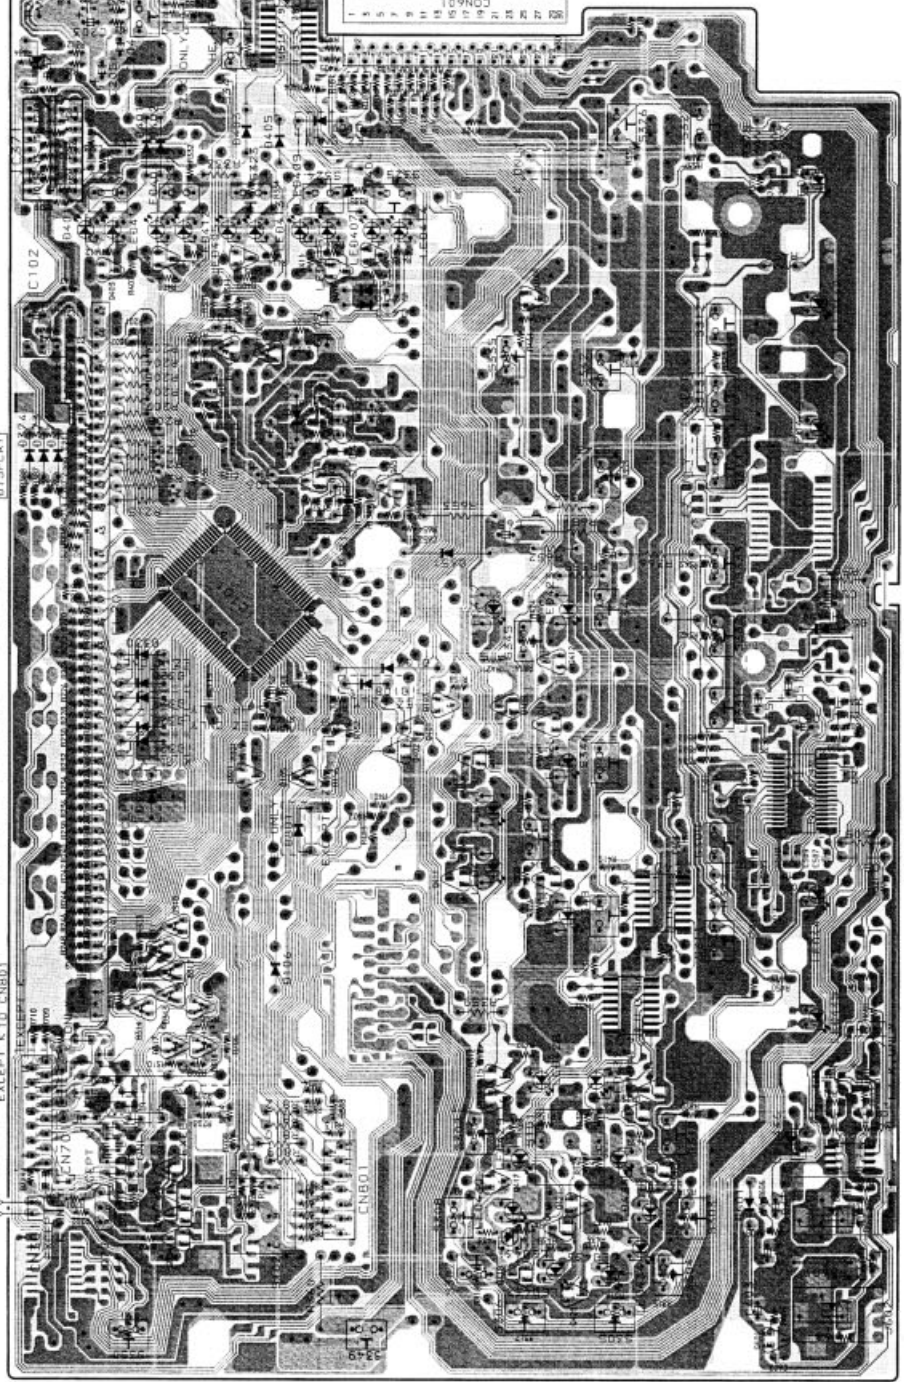


S501 SPOKER
 S502 STANDBY/ON
 S503 TAPE/1/2
 S504 DECK 1/2
 S505 TUNER/BAND
 S506 VTR/ED/AUX
 S507 LED403, 412
 S508 LED405, 413
 S509 LED409, 415
 S510 LED407, 414
 S511 LED417
 S512 LED446, 445, 444
 S513 LED419, 421
 S514 LED427
 S515 LED425
 S516 LED423
 S517 LED422
 S518 LED421
 S519 LED420
 S520 LED419
 S521 LED418
 S522 LED417
 S523 LED416
 S524 LED415
 S525 LED414
 S526 LED413
 S527 LED412
 S528 LED411
 S529 LED410
 S530 LED409
 S531 LED408
 S532 LED407
 S533 LED406
 S534 LED405
 S535 LED404
 S536 LED403
 S537 LED402
 S538 LED401
 S539 LED400
 S540 LED399
 S541 LED398
 S542 LED397
 S543 LED396
 S544 LED395
 S545 LED394
 S546 LED393
 S547 LED392
 S548 LED391
 S549 LED390
 S550 LED389
 S551 LED388
 S552 LED387
 S553 LED386
 S554 LED385
 S555 LED384
 S556 LED383
 S557 LED382
 S558 LED381
 S559 LED380
 S560 LED379
 S561 LED378
 S562 LED377
 S563 LED376
 S564 LED375
 S565 LED374
 S566 LED373
 S567 LED372
 S568 LED371
 S569 LED370
 S570 LED369
 S571 LED368
 S572 LED367
 S573 LED366
 S574 LED365
 S575 LED364
 S576 LED363
 S577 LED362
 S578 LED361
 S579 LED360
 S580 LED359
 S581 LED358
 S582 LED357
 S583 LED356
 S584 LED355
 S585 LED354
 S586 LED353
 S587 LED352
 S588 LED351
 S589 LED350
 S590 LED349
 S591 LED348
 S592 LED347
 S593 LED346
 S594 LED345
 S595 LED344
 S596 LED343
 S597 LED342
 S598 LED341
 S599 LED340
 S600 LED339
 S601 LED338
 S602 LED337
 S603 LED336
 S604 LED335
 S605 LED334
 S606 LED333
 S607 LED332
 S608 LED331
 S609 LED330
 S610 LED329
 S611 LED328
 S612 LED327
 S613 LED326
 S614 LED325
 S615 LED324
 S616 LED323
 S617 LED322
 S618 LED321
 S619 LED320
 S620 LED319
 S621 LED318
 S622 LED317
 S623 LED316
 S624 LED315
 S625 LED314
 S626 LED313
 S627 LED312
 S628 LED311
 S629 LED310
 S630 LED309
 S631 LED308
 S632 LED307
 S633 LED306
 S634 LED305
 S635 LED304
 S636 LED303
 S637 LED302
 S638 LED301
 S639 LED300
 S640 LED299
 S641 LED298
 S642 LED297
 S643 LED296
 S644 LED295
 S645 LED294
 S646 LED293
 S647 LED292
 S648 LED291
 S649 LED290
 S650 LED289
 S651 LED288
 S652 LED287
 S653 LED286
 S654 LED285
 S655 LED284
 S656 LED283
 S657 LED282
 S658 LED281
 S659 LED280
 S660 LED279
 S661 LED278
 S662 LED277
 S663 LED276
 S664 LED275
 S665 LED274
 S666 LED273
 S667 LED272
 S668 LED271
 S669 LED270
 S670 LED269
 S671 LED268
 S672 LED267
 S673 LED266
 S674 LED265
 S675 LED264
 S676 LED263
 S677 LED262
 S678 LED261
 S679 LED260
 S680 LED259
 S681 LED258
 S682 LED257
 S683 LED256
 S684 LED255
 S685 LED254
 S686 LED253
 S687 LED252
 S688 LED251
 S689 LED250
 S690 LED249
 S691 LED248
 S692 LED247
 S693 LED246
 S694 LED245
 S695 LED244
 S696 LED243
 S697 LED242
 S698 LED241
 S699 LED240
 S700 LED239
 S701 LED238
 S702 LED237
 S703 LED236
 S704 LED235
 S705 LED234
 S706 LED233
 S707 LED232
 S708 LED231
 S709 LED230
 S710 LED229
 S711 LED228
 S712 LED227
 S713 LED226
 S714 LED225
 S715 LED224
 S716 LED223
 S717 LED222
 S718 LED221
 S719 LED220
 S720 LED219
 S721 LED218
 S722 LED217
 S723 LED216
 S724 LED215
 S725 LED214
 S726 LED213
 S727 LED212
 S728 LED211
 S729 LED210
 S730 LED209
 S731 LED208
 S732 LED207
 S733 LED206
 S734 LED205
 S735 LED204
 S736 LED203
 S737 LED202
 S738 LED201
 S739 LED200
 S740 LED199
 S741 LED198
 S742 LED197
 S743 LED196
 S744 LED195
 S745 LED194
 S746 LED193
 S747 LED192
 S748 LED191
 S749 LED190
 S750 LED189
 S751 LED188
 S752 LED187
 S753 LED186
 S754 LED185
 S755 LED184
 S756 LED183
 S757 LED182
 S758 LED181
 S759 LED180
 S760 LED179
 S761 LED178
 S762 LED177
 S763 LED176
 S764 LED175
 S765 LED174
 S766 LED173
 S767 LED172
 S768 LED171
 S769 LED170
 S770 LED169
 S771 LED168
 S772 LED167
 S773 LED166
 S774 LED165
 S775 LED164
 S776 LED163
 S777 LED162
 S778 LED161
 S779 LED160
 S780 LED159
 S781 LED158
 S782 LED157
 S783 LED156
 S784 LED155
 S785 LED154
 S786 LED153
 S787 LED152
 S788 LED151
 S789 LED150
 S790 LED149
 S791 LED148
 S792 LED147
 S793 LED146
 S794 LED145
 S795 LED144
 S796 LED143
 S797 LED142
 S798 LED141
 S799 LED140
 S800 LED139
 S801 LED138
 S802 LED137
 S803 LED136
 S804 LED135
 S805 LED134
 S806 LED133
 S807 LED132
 S808 LED131
 S809 LED130
 S810 LED129
 S811 LED128
 S812 LED127
 S813 LED126
 S814 LED125
 S815 LED124
 S816 LED123
 S817 LED122
 S818 LED121
 S819 LED120
 S820 LED119
 S821 LED118
 S822 LED117
 S823 LED116
 S824 LED115
 S825 LED114
 S826 LED113
 S827 LED112
 S828 LED111
 S829 LED110
 S830 LED109
 S831 LED108
 S832 LED107
 S833 LED106
 S834 LED105
 S835 LED104
 S836 LED103
 S837 LED102
 S838 LED101
 S839 LED100
 S840 LED99
 S841 LED98
 S842 LED97
 S843 LED96
 S844 LED95
 S845 LED94
 S846 LED93
 S847 LED92
 S848 LED91
 S849 LED90
 S850 LED89
 S851 LED88
 S852 LED87
 S853 LED86
 S854 LED85
 S855 LED84
 S856 LED83
 S857 LED82
 S858 LED81
 S859 LED80
 S860 LED79
 S861 LED78
 S862 LED77
 S863 LED76
 S864 LED75
 S865 LED74
 S866 LED73
 S867 LED72
 S868 LED71
 S869 LED70
 S870 LED69
 S871 LED68
 S872 LED67
 S873 LED66
 S874 LED65
 S875 LED64
 S876 LED63
 S877 LED62
 S878 LED61
 S879 LED60
 S880 LED59
 S881 LED58
 S882 LED57
 S883 LED56
 S884 LED55
 S885 LED54
 S886 LED53
 S887 LED52
 S888 LED51
 S889 LED50
 S890 LED49
 S891 LED48
 S892 LED47
 S893 LED46
 S894 LED45
 S895 LED44
 S896 LED43
 S897 LED42
 S898 LED41
 S899 LED40
 S900 LED39
 S901 LED38
 S902 LED37
 S903 LED36
 S904 LED35
 S905 LED34
 S906 LED33
 S907 LED32
 S908 LED31
 S909 LED30
 S910 LED29
 S911 LED28
 S912 LED27
 S913 LED26
 S914 LED25
 S915 LED24
 S916 LED23
 S917 LED22
 S918 LED21
 S919 LED20
 S920 LED19
 S921 LED18
 S922 LED17
 S923 LED16
 S924 LED15
 S925 LED14
 S926 LED13
 S927 LED12
 S928 LED11
 S929 LED10
 S930 LED9
 S931 LED8
 S932 LED7
 S933 LED6
 S934 LED5
 S935 LED4
 S936 LED3
 S937 LED2
 S938 LED1
 S939 LED0
 S940 LED-1
 S941 LED-2
 S942 LED-3
 S943 LED-4
 S944 LED-5
 S945 LED-6
 S946 LED-7
 S947 LED-8
 S948 LED-9
 S949 LED-10
 S950 LED-11
 S951 LED-12
 S952 LED-13
 S953 LED-14
 S954 LED-15
 S955 LED-16
 S956 LED-17
 S957 LED-18
 S958 LED-19
 S959 LED-20
 S960 LED-21
 S961 LED-22
 S962 LED-23
 S963 LED-24
 S964 LED-25
 S965 LED-26
 S966 LED-27
 S967 LED-28
 S968 LED-29
 S969 LED-30
 S970 LED-31
 S971 LED-32
 S972 LED-33
 S973 LED-34
 S974 LED-35
 S975 LED-36
 S976 LED-37
 S977 LED-38
 S978 LED-39
 S979 LED-40
 S980 LED-41
 S981 LED-42
 S982 LED-43
 S983 LED-44
 S984 LED-45
 S985 LED-46
 S986 LED-47
 S987 LED-48
 S988 LED-49
 S989 LED-50
 S990 LED-51
 S991 LED-52
 S992 LED-53
 S993 LED-54
 S994 LED-55
 S995 LED-56
 S996 LED-57
 S997 LED-58
 S998 LED-59
 S999 LED-60
 S1000 LED-61

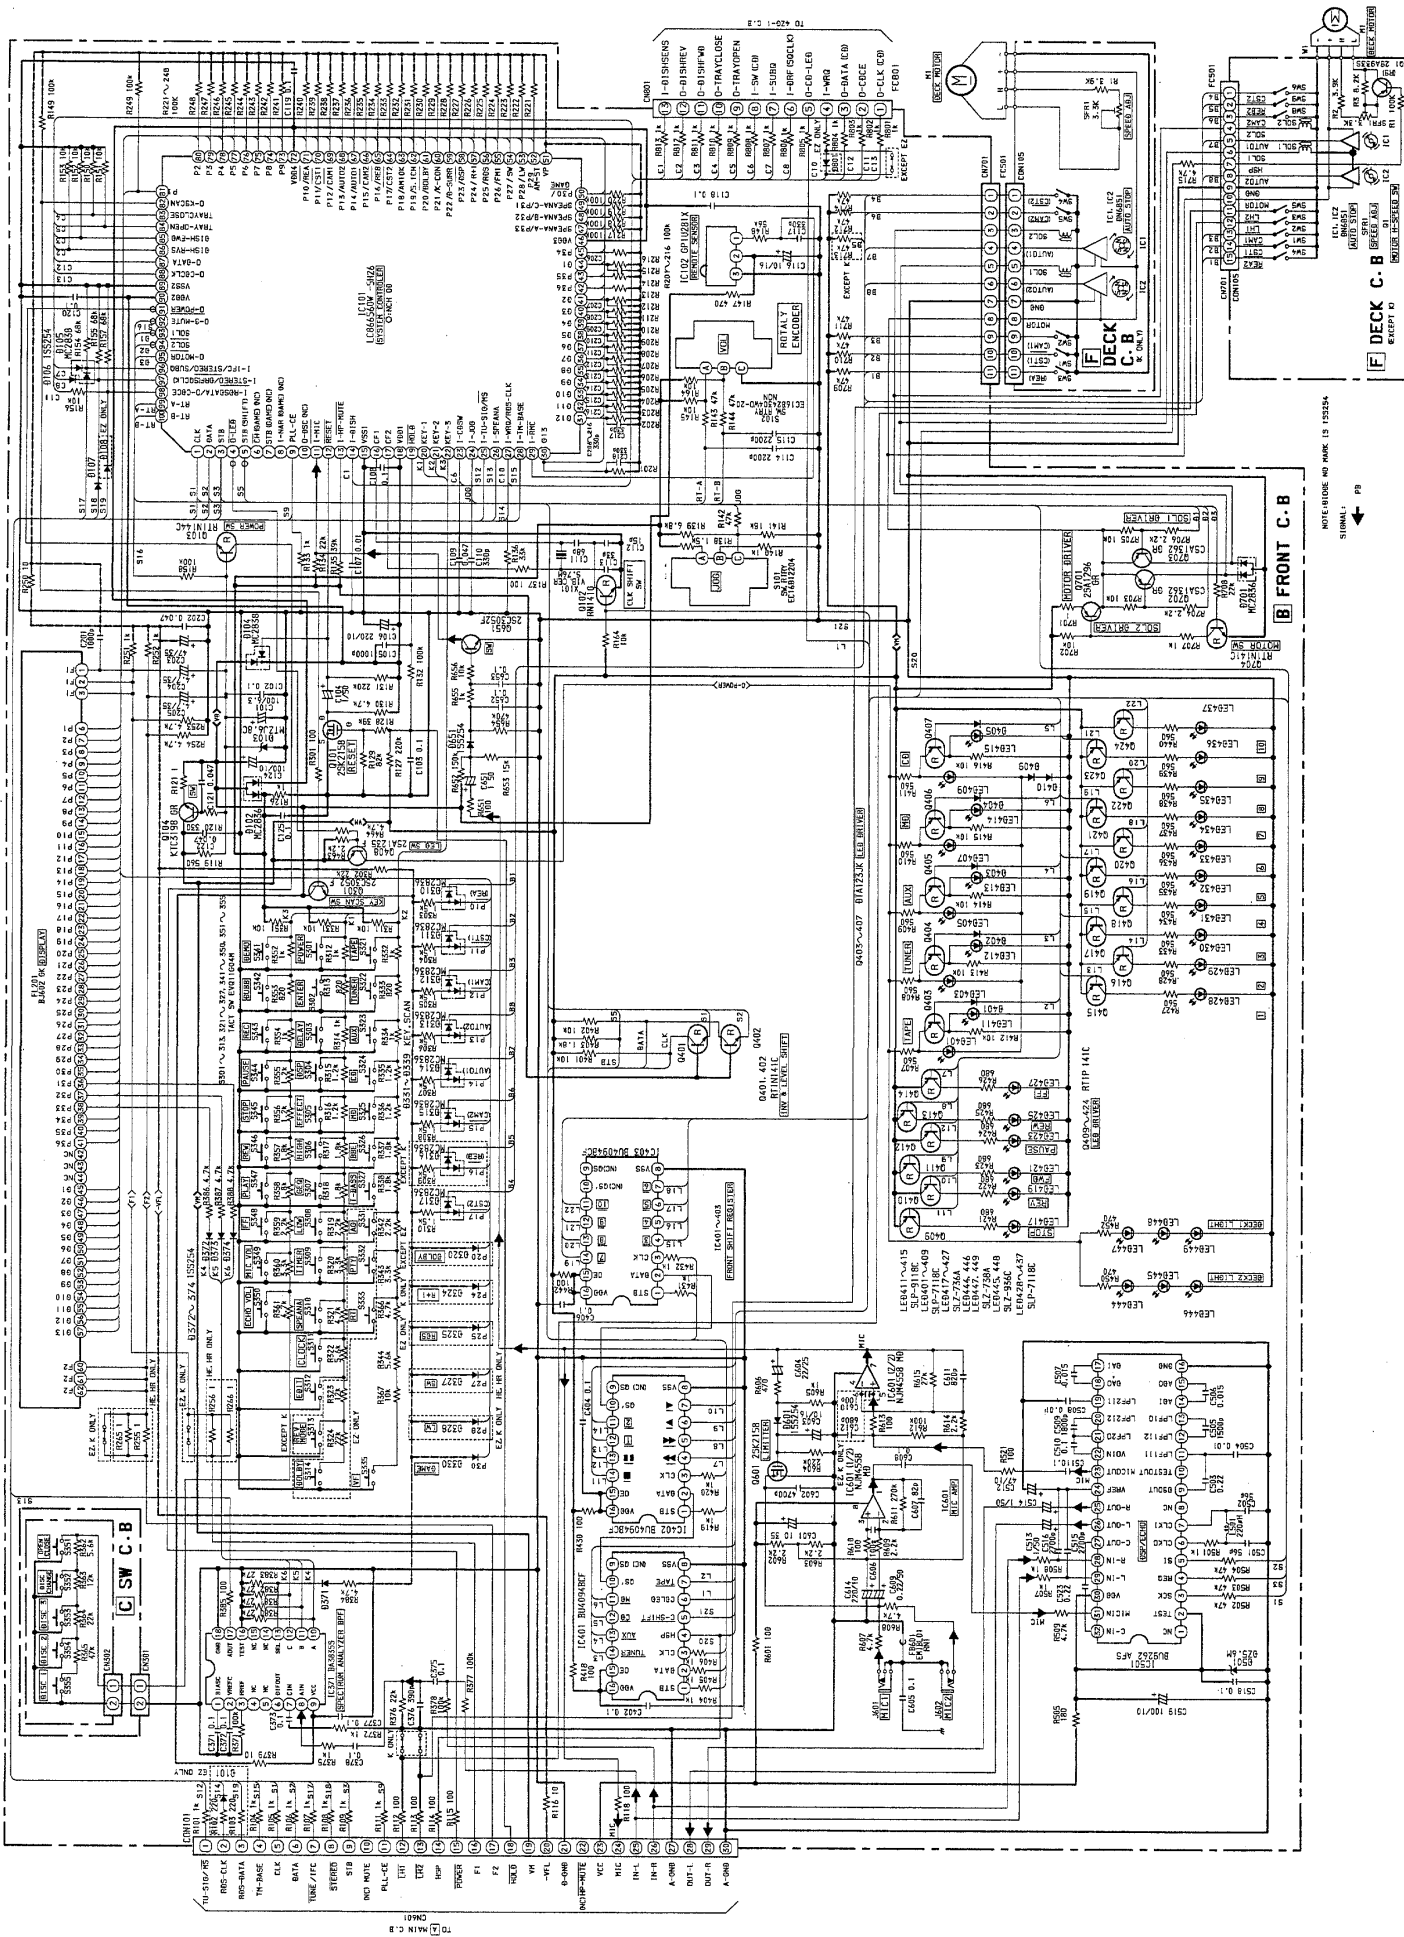


IC BLOCK DIAGRAM - 1
IC, NJM2152M

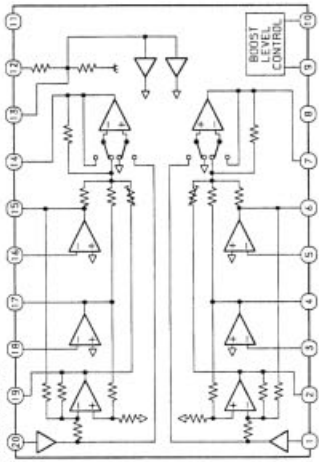


IC, LC72131D

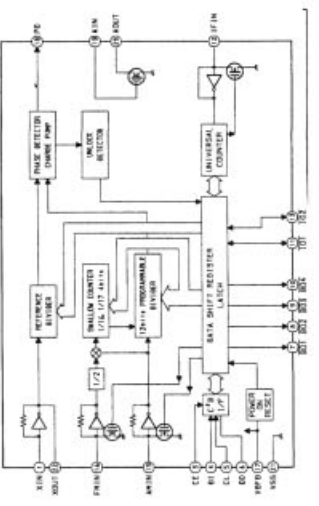


IC, BU6262AFS

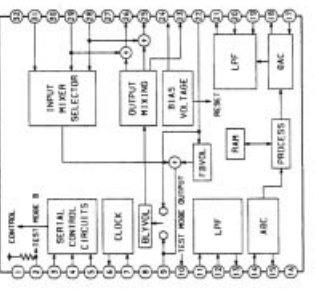


WIRING - 5 (AC1 / AC2)

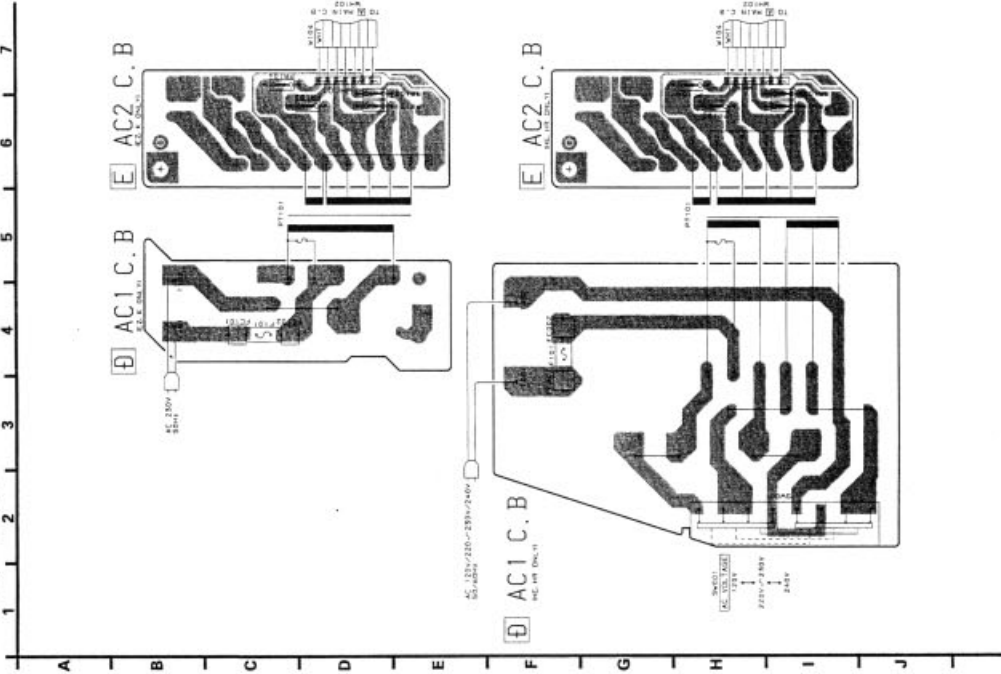


WIRING - 6 (DECK - 6ZM - 3 YPR2N)

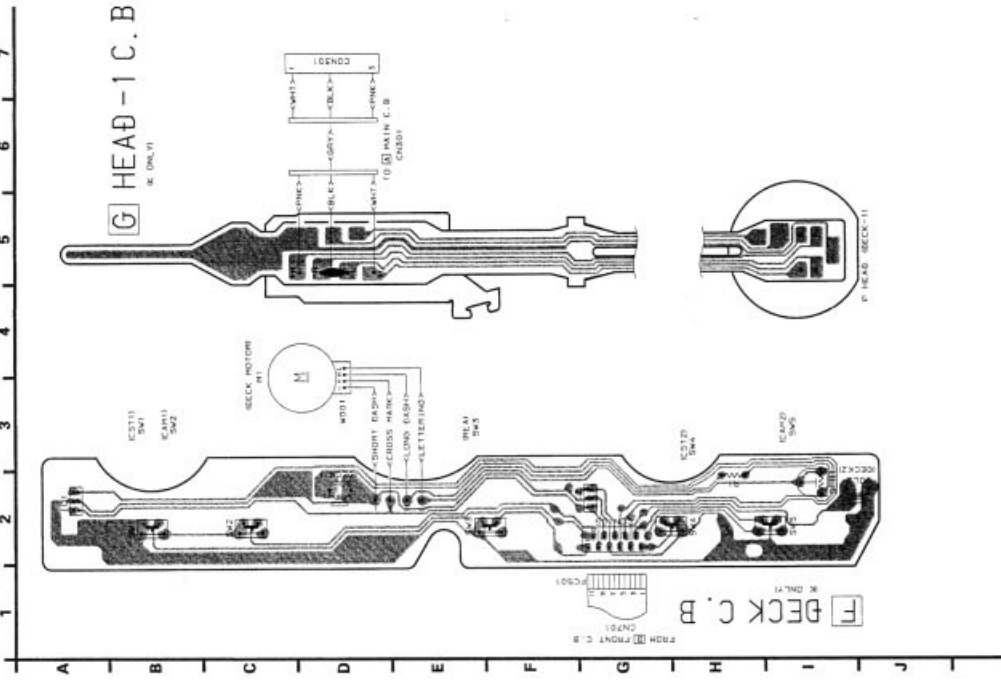


WIRING - 7 (DECK - 2ZM - 3MK2 PRANM / YPR4N)

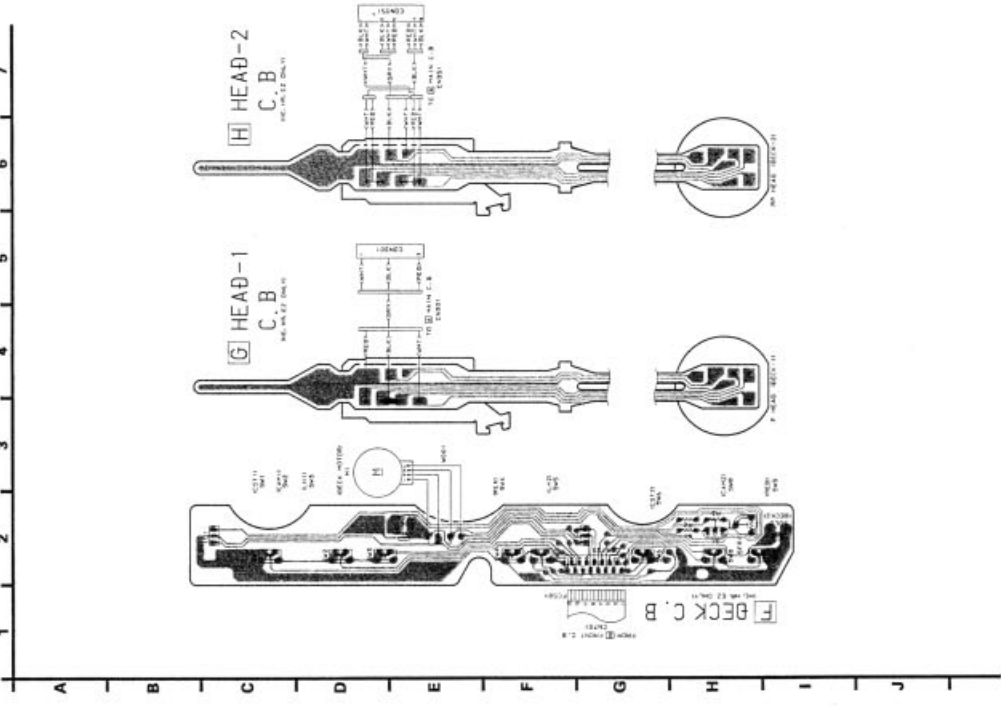

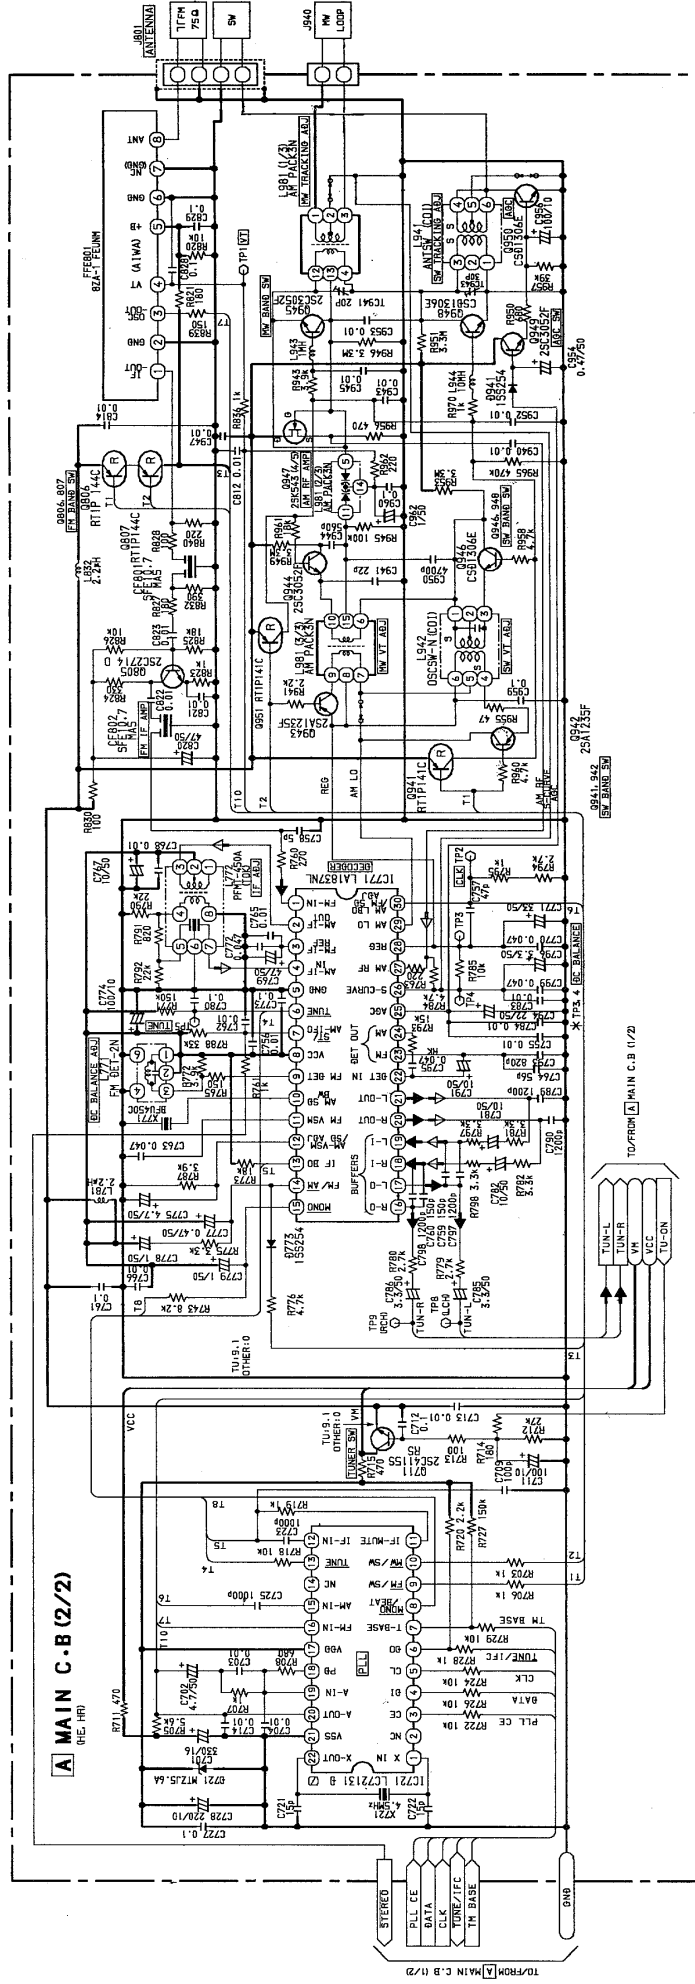


SIGNAL :
 ↗ : FM
 ↘ : AM

SCHEMATIC DIAGRAM - 6 (EZ, K: MAIN 2/2)

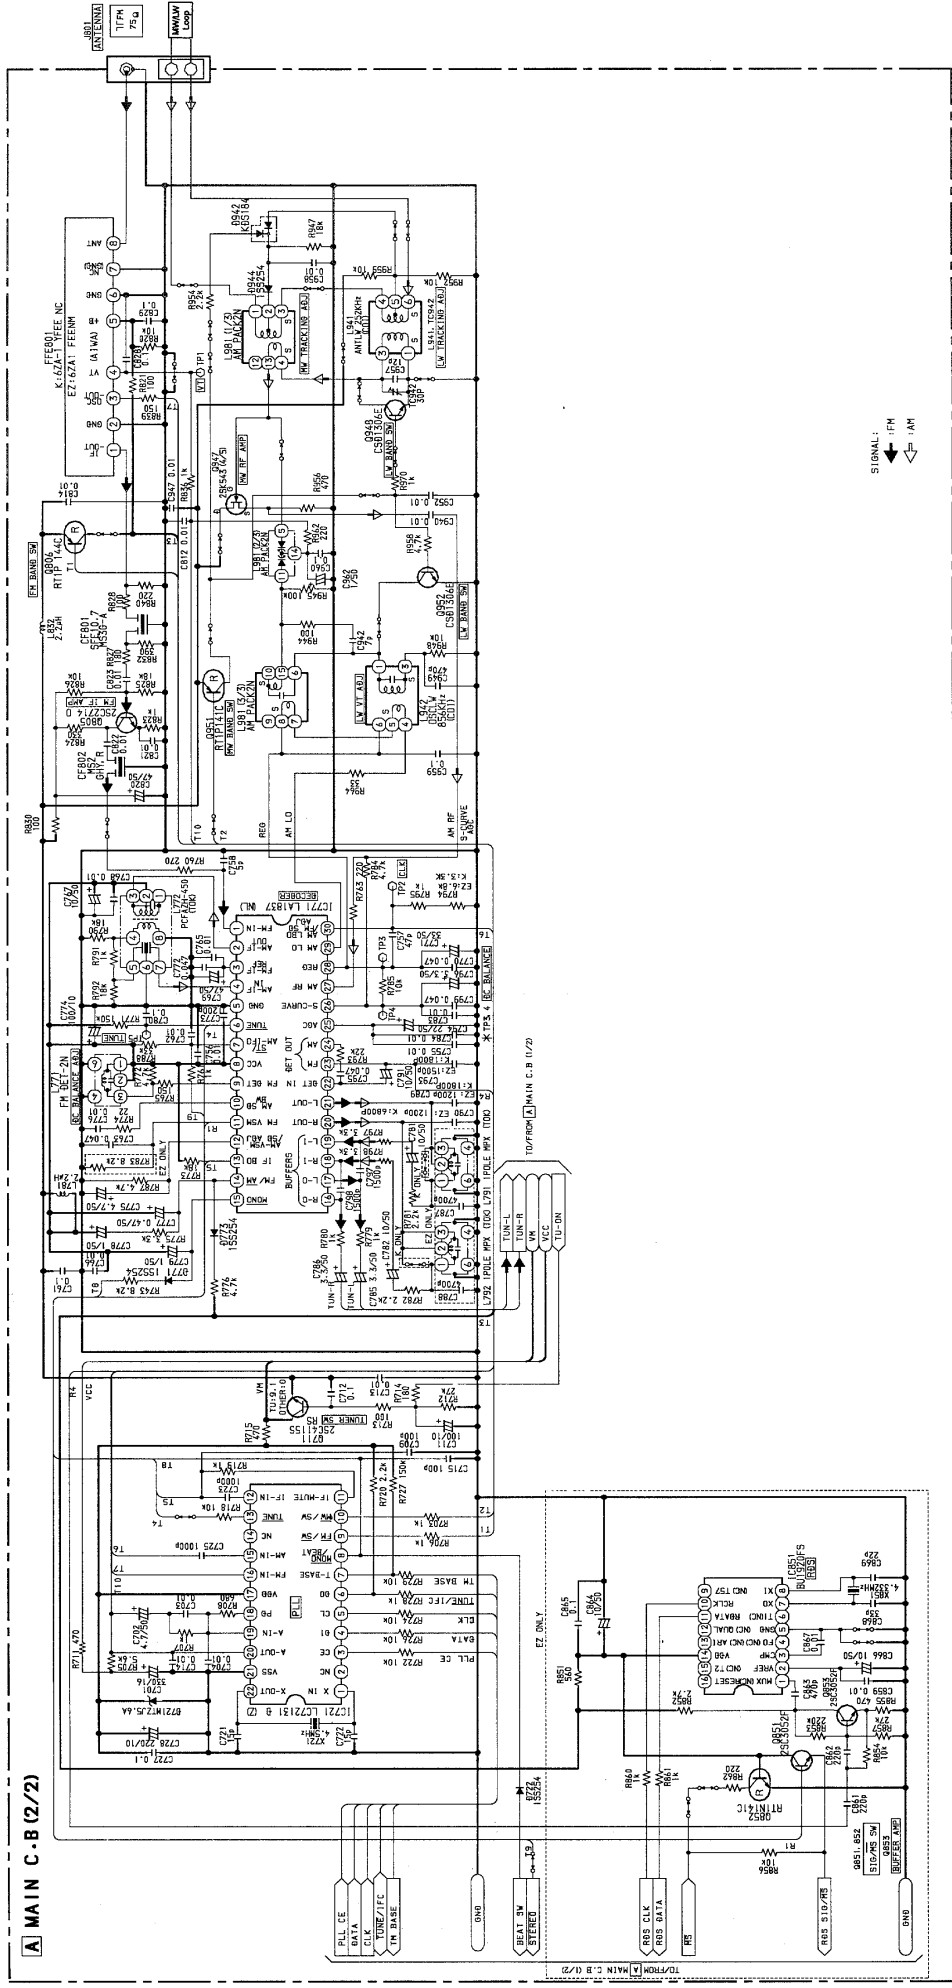


SCHEMATIC DIAGRAM - 7 (HE, HR : TUNER FRONT END)

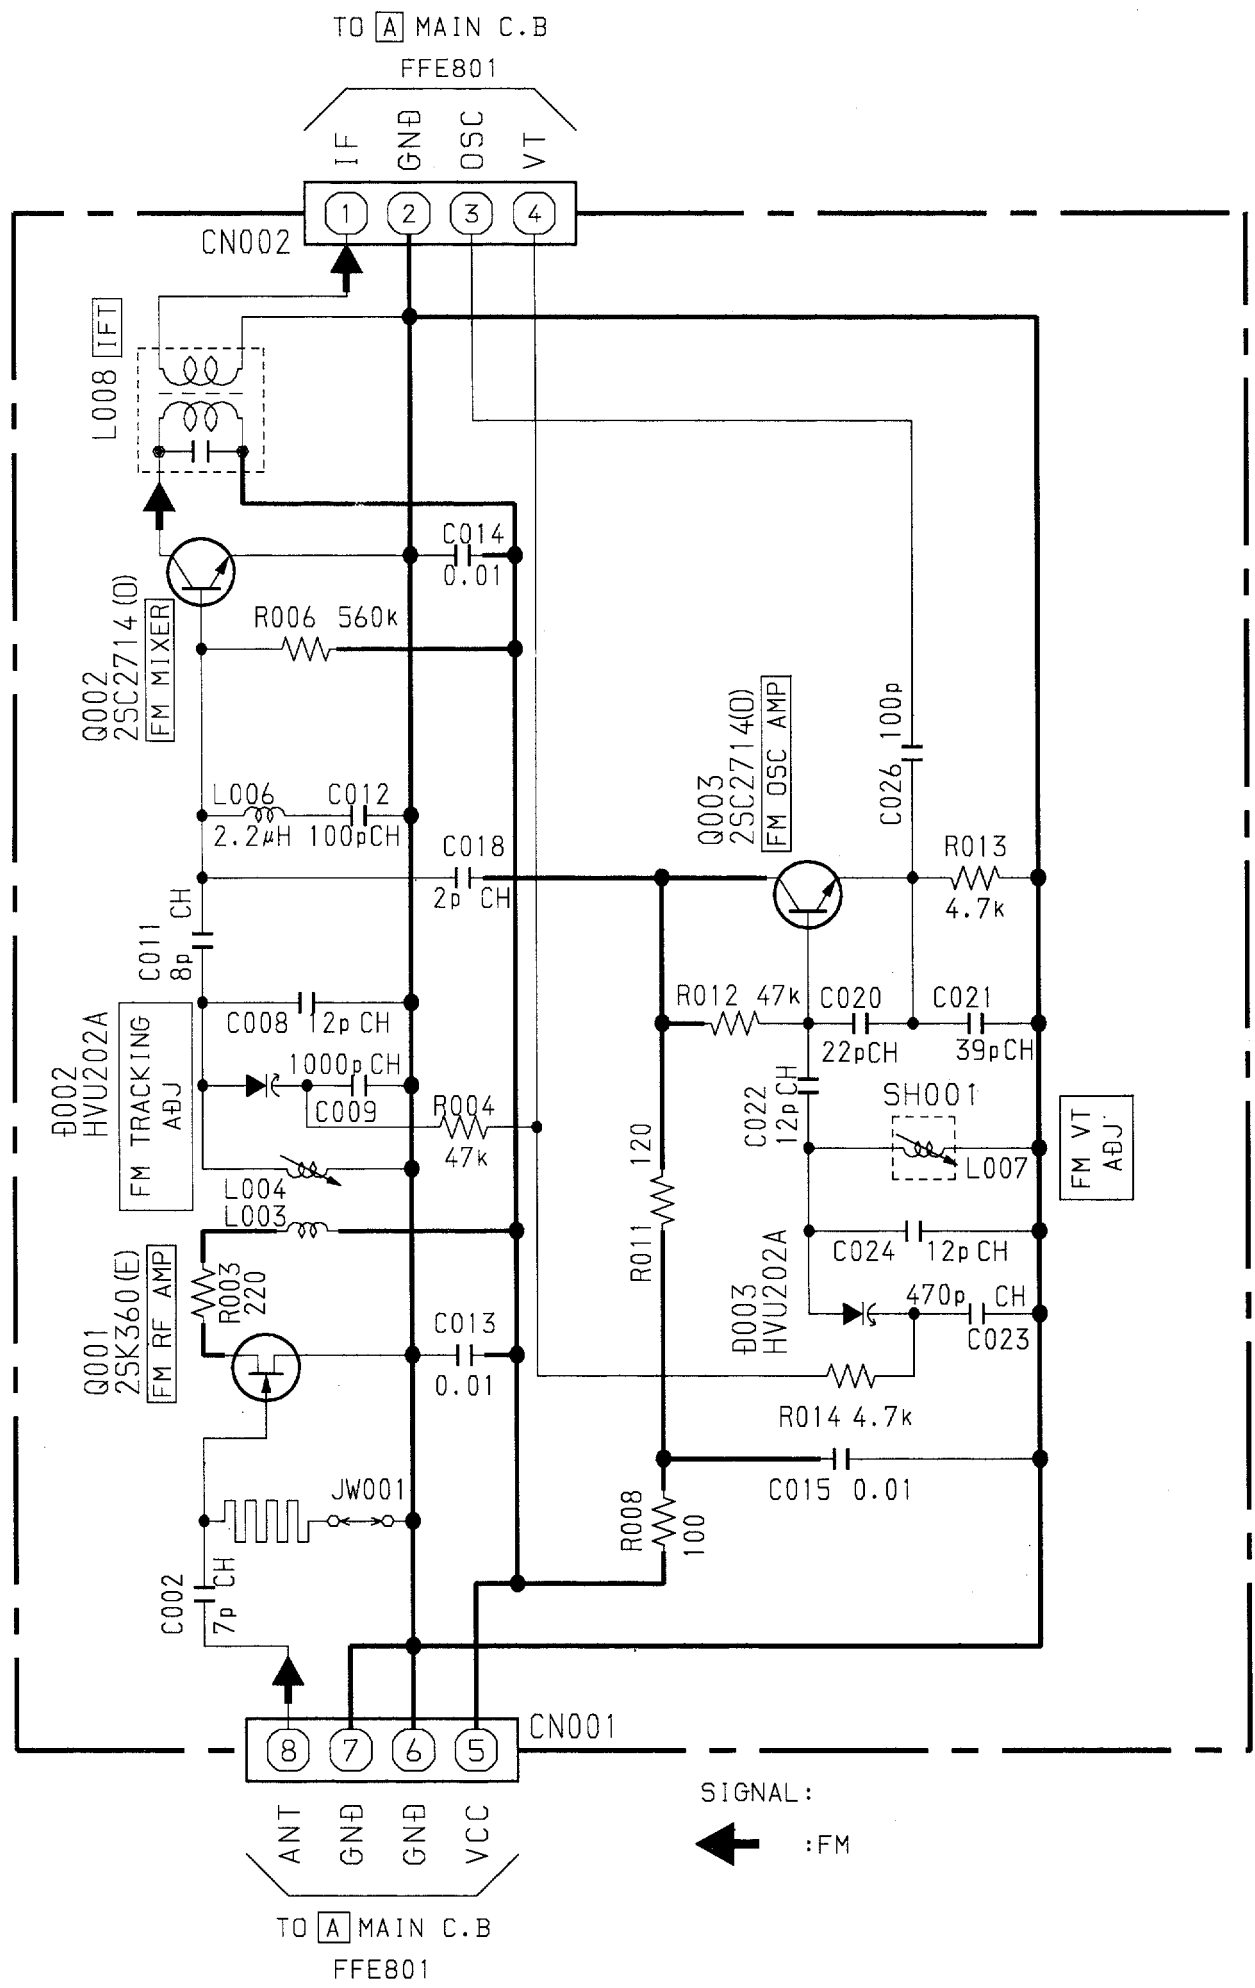


IC BLOCK DIAGRAM - 2


IC, BA3835S

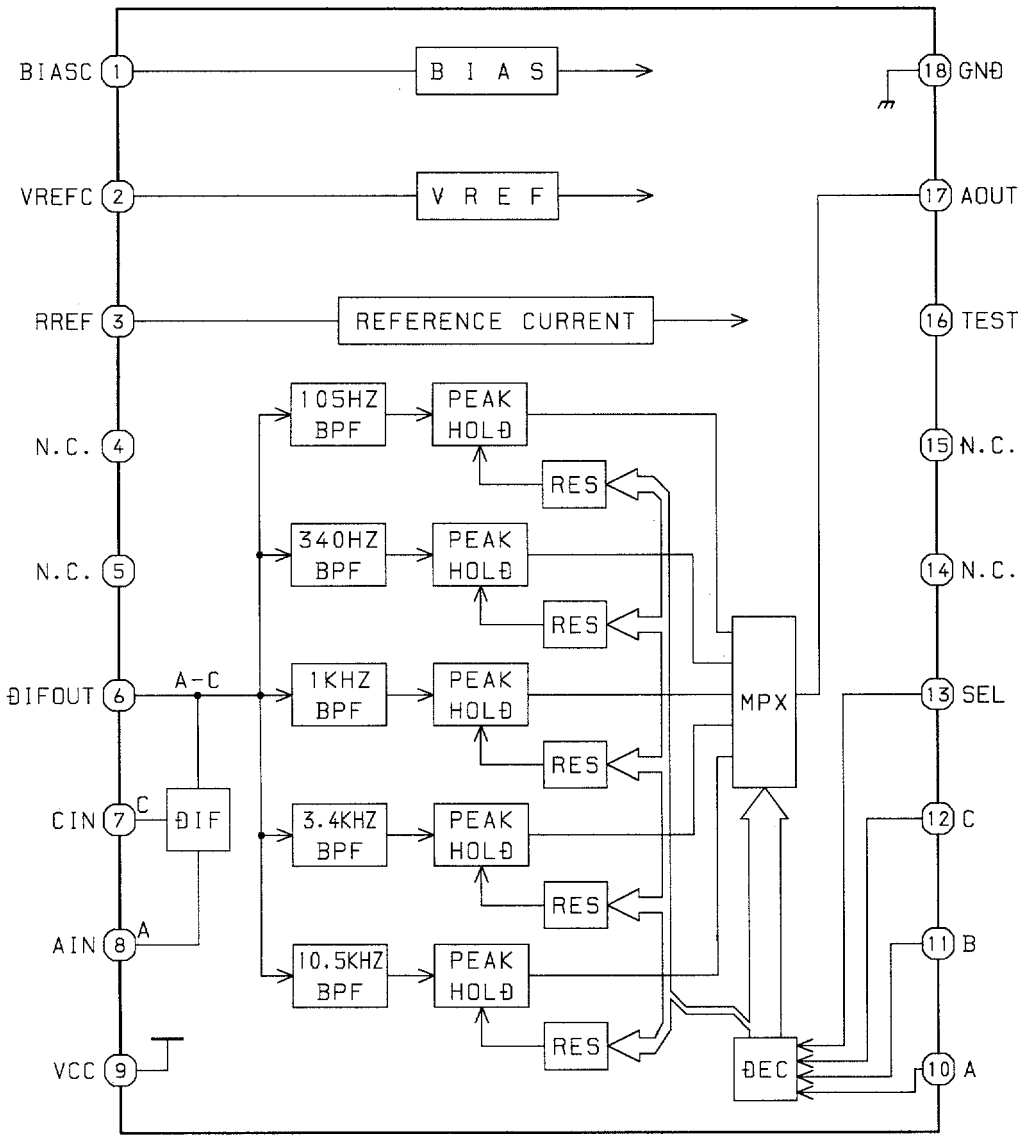

IC, LA1837

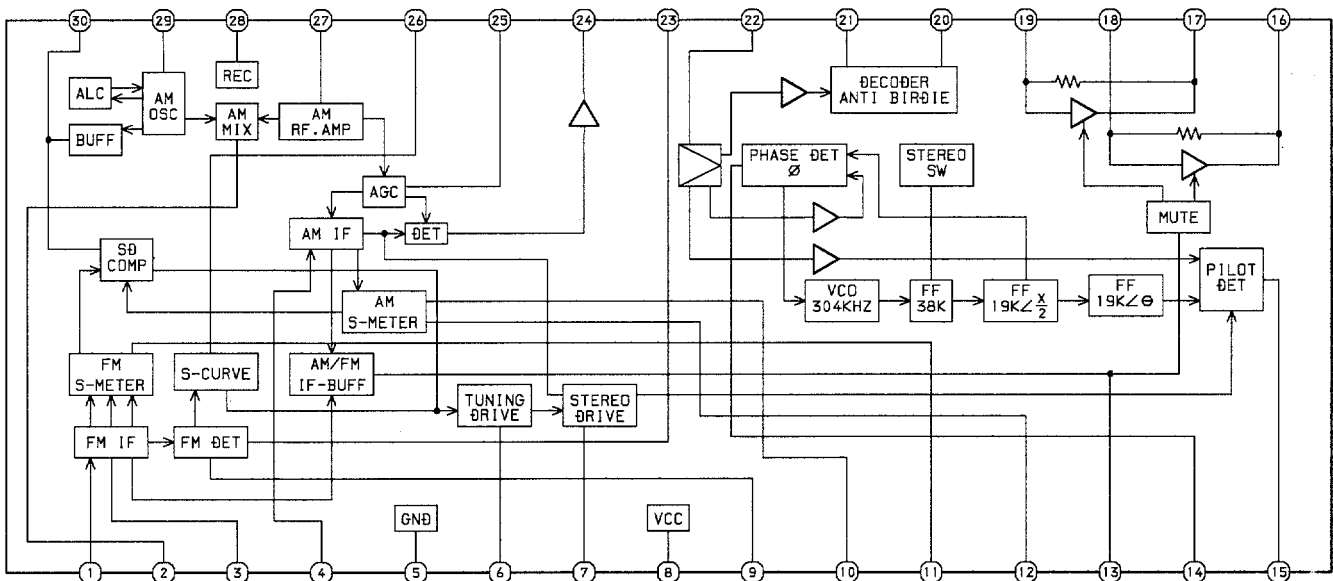

IC, BU4094BCF

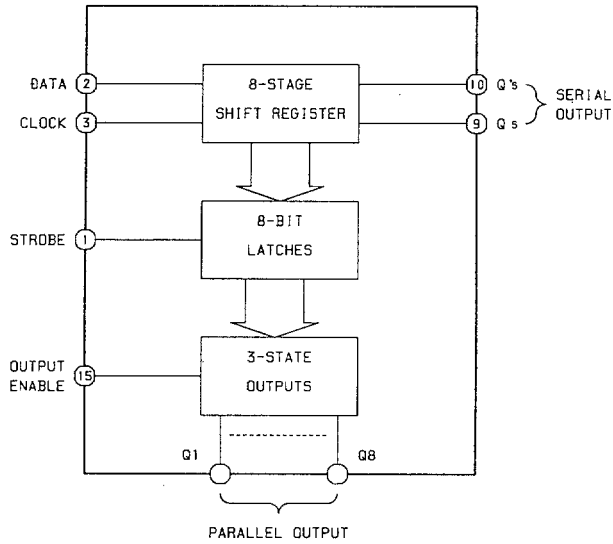


TRUTH TABLE

| CLOCK | OUTPUT ENABLE | STROBE | DATA | PARALLEL OUTPUTS | | SERIAL OUTPUTS | |
|-------|---------------|--------|------|------------------|---------|----------------|---------|
| | | | | Q1 | Qn | Qs | Q's |
| | L | X | X | Z | Z | Q7 | NO Chg. |
| | L | X | X | Z | Z | No Chg. | Qs |
| | H | L | X | No Chg. | No Chg. | Q7 | No Chg. |
| | H | H | L | L' | Qn-1 | Q7 | No Chg. |
| | H | H | H | H | Qn-1 | Q7 | No Chg. |
| | H | X | X | No Chg. | No Chg. | No Chg. | Qs |


Z=High Impedance

X=Don't Care


IC, M62445FP-601

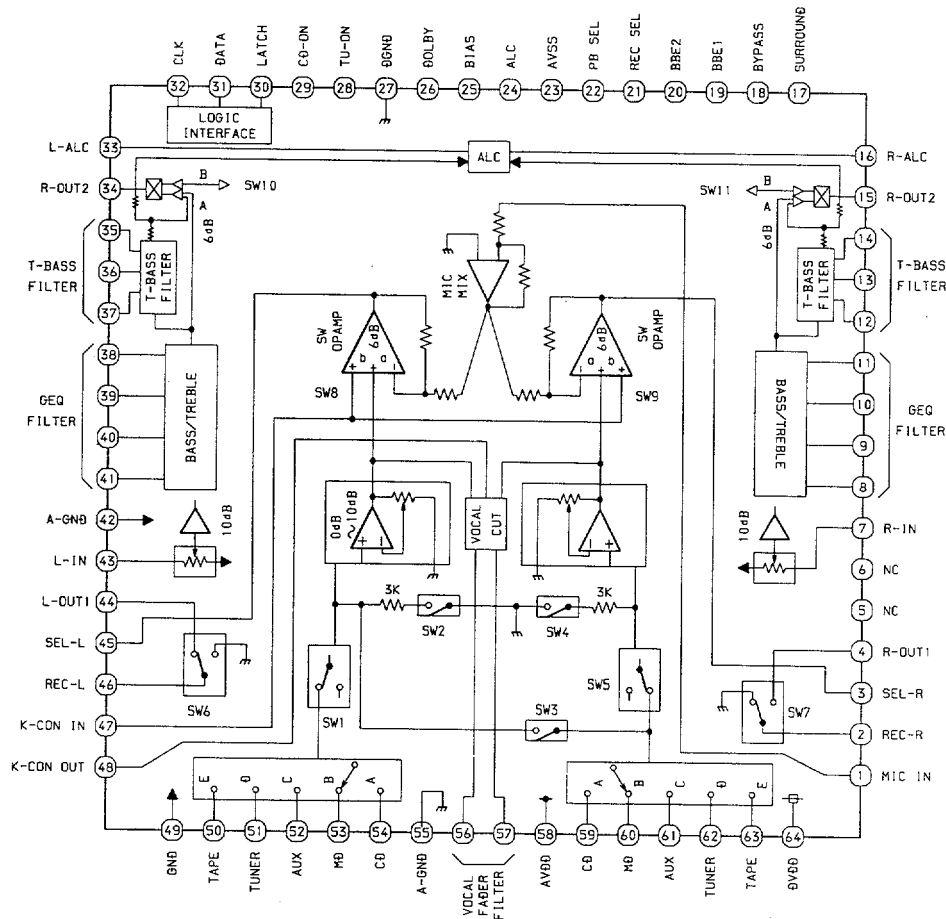


IC, HA12185NT

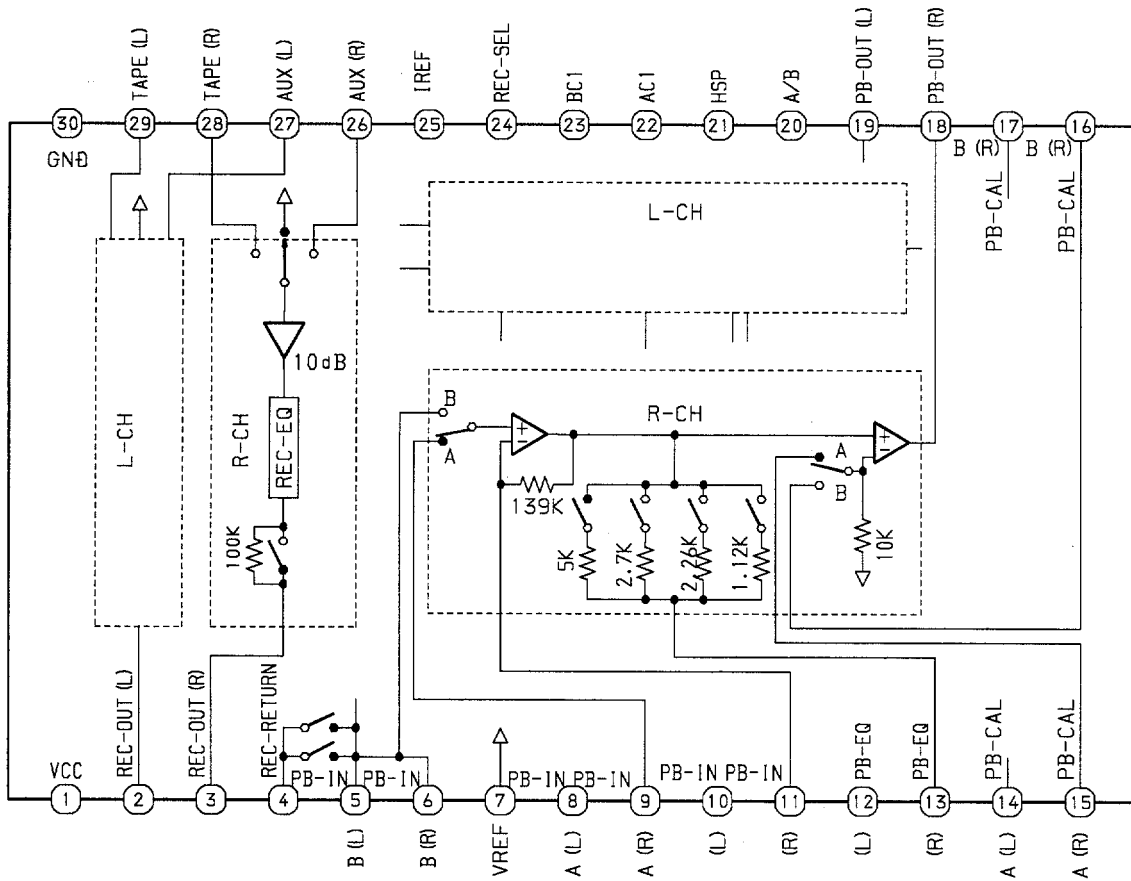


IC, BA7762AFS

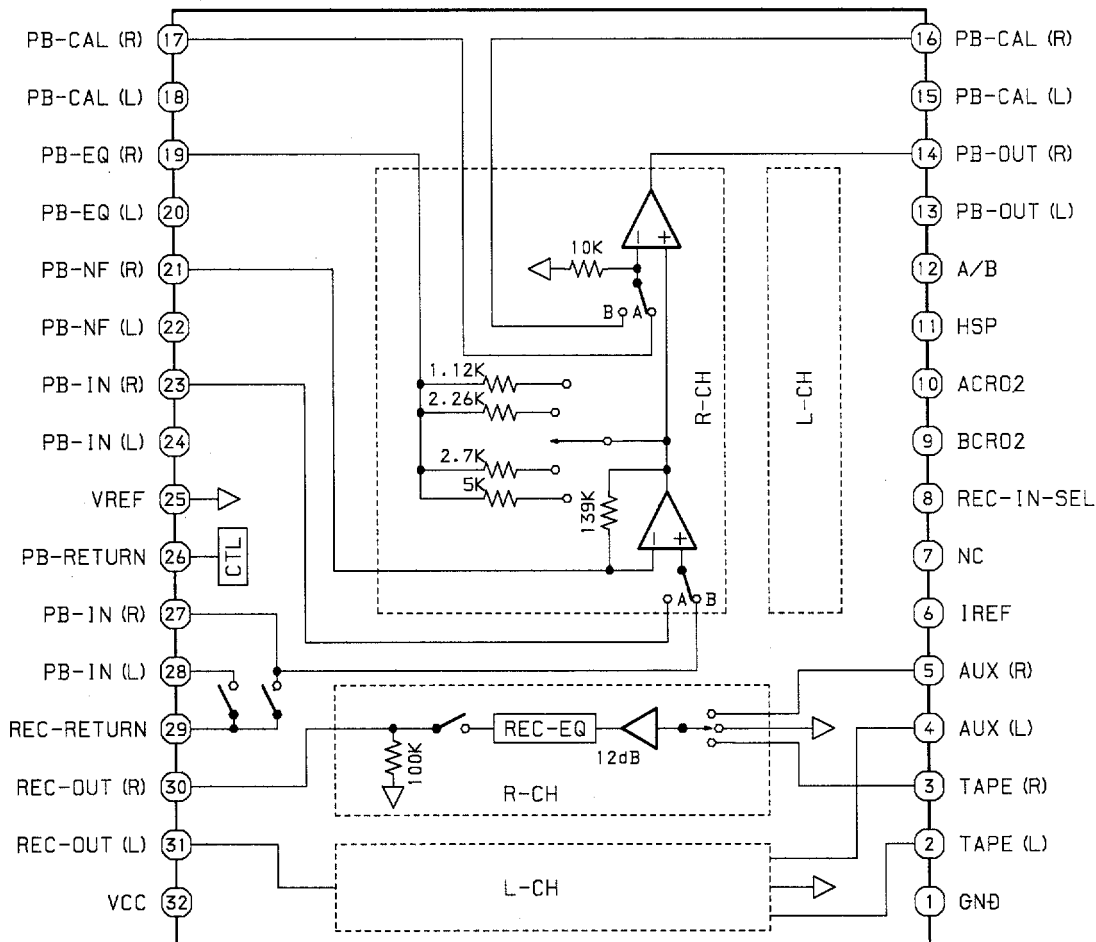

IC, BU1920FS

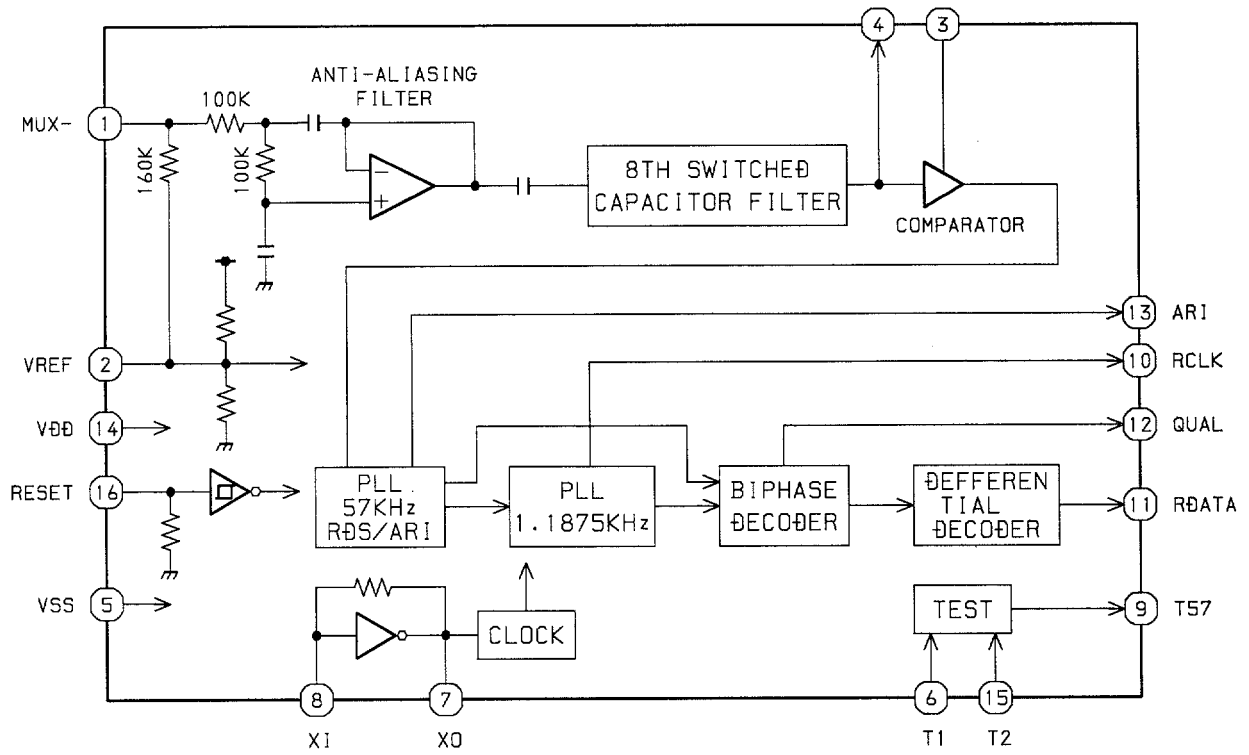

IC, CXA1533P

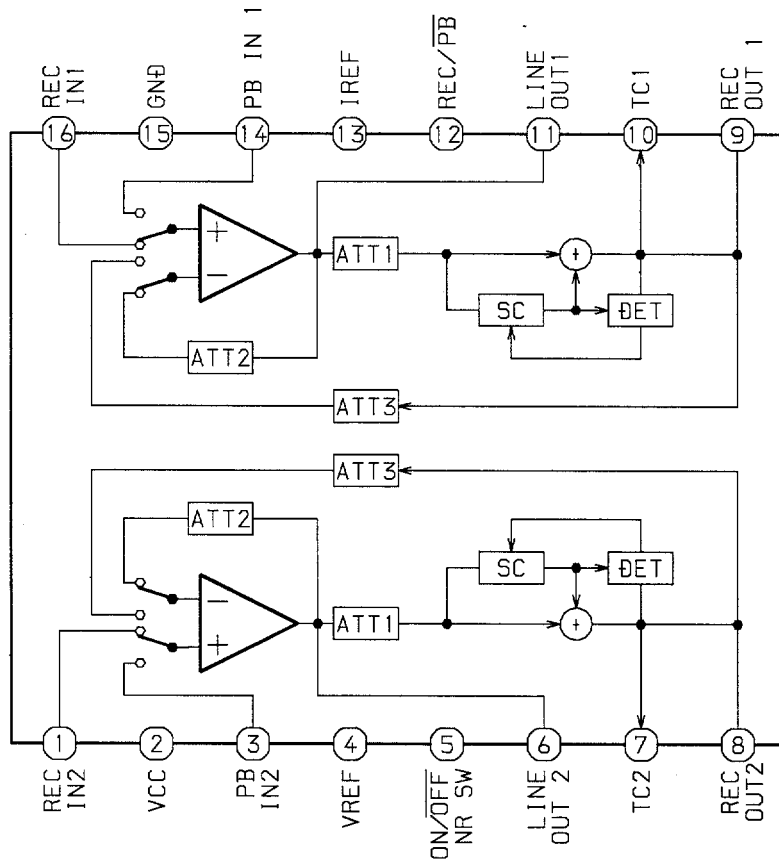



IC DESCRIPTION

IC, LC866560W-5H26


| Pin No. | Pin Name | I/O | Description |
|---------|---------------------------------|-----|--|
| 1 | CLK | O | CLOCK output for MAIN,FRONT PWB. |
| 2 | DATA | O | DATA output for MAIN, FRONT PWB. |
| 3 | STB | O | Latch strobe output for MAIN PWB. |
| 4 | $\overline{\text{O-LED}}$ | O | LED $\overline{\text{ON/OFF}}$ output. |
| 5 | STB (SHIFT) | O | Latch strobe output for FRONT shift register. |
| 6 | $\overline{\text{CH(GAME)}}$ | I | Channel control output for Sound IC. (Not connected) |
| 7 | STB (GAME) | O | Latch strobe output for Sound IC. (Not connected) |
| 8 | I-NAR (GAME) | I | Sound IC NAR input. (Not connected) |
| 9 | PLL-CE | O | PLL IC chip enable output. |
| 10 | O-DSC | O | Serial data output for PROLOGIC PWB. (Not connected) |
| 11 | $\overline{\text{I-MIC}}$ | I | Microphone input for AUTO VF display. |
| 12 | $\overline{\text{RESET}}$ | I | Reset input. |
| 13 | $\overline{\text{I-HP-MUTE}}$ | I | Headphone input for MUTE by PROLOGIC. |
| 14 | I-DISH | I | CD turntable photo sensor A/D converter input. |
| 15 | VSS 1 | - | GND. |
| 16 | CF 1 | - | 5.76MHz oscillator circuit. |
| 17 | CF 2 | - | |
| 18 | VDD 1 | - | Power supply input. |
| 19 | $\overline{\text{HOLD}}$ | I | Power failure detection input. "H"normal operation, "L"main power cannot be turned on. |
| 20 | KEY-1 | I | KEY input.(A/D) |
| 21 | KEY-2 | I | |
| 22 | KEY-3 | I | |
| 23 | I-CD SW | I | CD mechanical switch A/D converter input. |
| 24 | I-JOG | I | JOG dial A/D level input. |
| 25 | $\overline{\text{I-TU-SIG/MS}}$ | I | Tuner signal and deck music sensor signal input. |
| 26 | I-SPEANA | I | A/D input for spectrum analyzer display. |
| 27 | I-WRQ/RDS-CLK | I | CD WRQ input. TUNER RDS CLOCK input. |
| 28 | I-TM-BASE | I | REFERENCE CLOCK input for timer watch. |
| 29 | $\overline{\text{I-RMC}}$ | I | System remote control signal input. |
| 30~41 | G13~G2 | O | FL GRID output G2~G13. |
| 42, 43 | P36, P35 | O | FL SEGMENT output P35, P36. |
| 44 | G1 | O | FL GRID output G1. |
| 45 | P34 | O | FL SEGMENT output P34. |
| 46 | VDD3 | - | Power supply input. |
| 47 | SPEANA-A/P33 | O | Spectrum analyzer band switching output /FL segment P33 output. |
| 48 | SPEANA-B/P32 | O | Spectrum analyzer band switching output /FL segment P32 output. |
| 49 | SPEANA-C/P31 | O | Spectrum analyzer band switching output /FL segment P31 output. |
| 50 | P30/GAME | I/O | FL segment P30 output / GAME input to diode. |
| 51 | VP | - | Power supply input for FL display. |
| 52 | P29/AM-ST | I/O | FL segment P29 output / AM-ST input to diode. |
| 53 | P28/LW | I/O | FL segment P28 output / LW input to diode. |
| 54 | P27/SW | I/O | FL segment P27 output / SW input to diode. |

| Pin No. | Pin Name | I/O | Description |
|---------|-------------------------|-----|---|
| 55 | P26/FM 1 | I/O | FL segment P26 output / FM1 (OIRT) input to diode. |
| 56 | P25/RDS | I/O | FL segment P25 output / RDS input to diode. |
| 57 | P24/R+1 | I/O | FL segment P24 output / RVS+1 way input to diode. |
| 58 | P23/DSP | I/O | FL segment P23 output / DSP input to diode. |
| 59 | P22/D-SURR | I/O | FL segment P22 output / SURR input to diode. |
| 60 | P21/K-CON | I/O | FL segment P21 output / K-CON input to diode. |
| 61 | P20/DOLBY | I/O | FL segment P20 output / DOLBY input to diode. |
| 62 | P19/5.1CH | I/O | FL segment P19 output / 5.1CH input to diode. |
| 63 | P18/AM10K | I/O | FL segment P18 output / AM 10kHz input to diode. |
| 64 | P17/CST 2 | I/O | FL segment P17 output / DECK2 cassette detect switch data input. |
| 65 | P16/REB | I/O | FL segment P16 output / DECK2 side-B record OK switch data input. |
| 66 | P15/CAM 2 | I/O | FL segment P15 output / DECK2 CAM switch data input. |
| 67 | P14/AUTO 1 | I/O | FL segment P14 output / DECK1 AUTO stop signal input. |
| 68 | P13/AUTO 2 | I/O | FL segment P13 output / DECK2 AUTO stop signal input. |
| 69 | P12/CAM 1 | I/O | FL segment P12 output / DECK1 CAM switch data input. |
| 70 | P11/CST 1 | I/O | FL segment P11 output / DECK1 cassette detect switch data input. |
| 71 | P10/REA | I/O | FL segment P10 output / DECK2 side A record OK switch data input. |
| 72 | VDD 4 | - | Power supply input. |
| 73 ~ 81 | P9 ~ P1 | O | FL segment P1 ~ P9 output. |
| 82 | O-KSCAN | O | Switch SCAN timing output. |
| 83 | TRAYCLOSE | O | CD TRAY CLOSE data output. |
| 84 | TRAY-OPEN | O | CD TRAY OPEN data output. |
| 85 | DISH-FWD | O | CD turntable forward rotation output. |
| 86 | DISH-RVS | O | CD turntable reverse rotation output. |
| 87 | O-DATA | O | CD data output. |
| 88 | O-CDCLK | O | CD clock output. |
| 89 | VSS2 | - | GND. |
| 90 | VDD2 | - | Power supply input. |
| 91 | O-POWER | O | System power supply ON/OFF output. |
| 92 | O-S-MUTE | O | System mute ON/OFF output. |
| 93 | SOL 1 | O | DECK 1 solenoid output. |
| 94 | SOL 2 | O | DECK 2 solenoid output. |
| 95 | O-MOTOR | O | DECK MOTOR ON/OFF output. |
| 96 | I-IFC/STEREO/SUBQ | I | Tune IF count serial data input /CD SUBQ data input. |
| 97 | I-STEREO/ DRF(SQCLK) | I/O | Tuner stereo detected input / CD SQ CLOCK output. |
| 98 | I-RDS-DATA/ O-CDCE | I/O | RDS data input / CD chip enable output. |
| 99 | RT-A | I | Rotary encoder A input. |
| 100 | RT-B | I | Rotary encoder B input. |


ADJUSTMENT <TUNER / DECK>

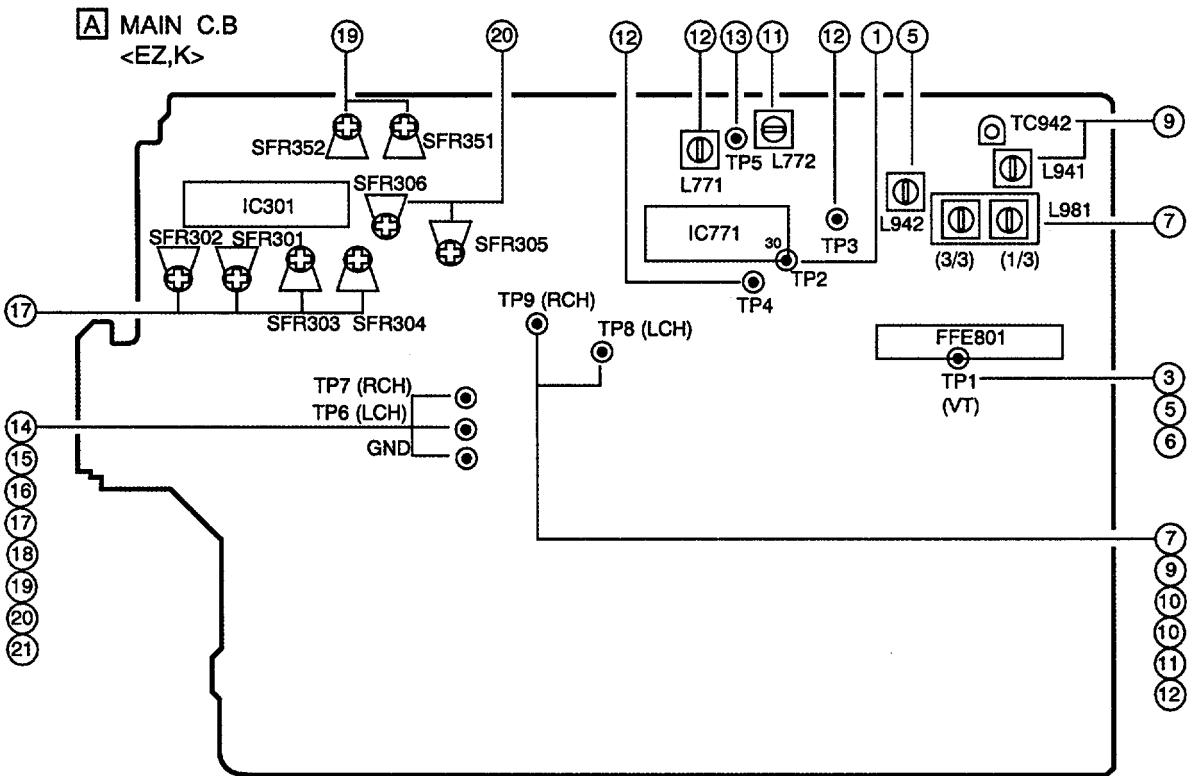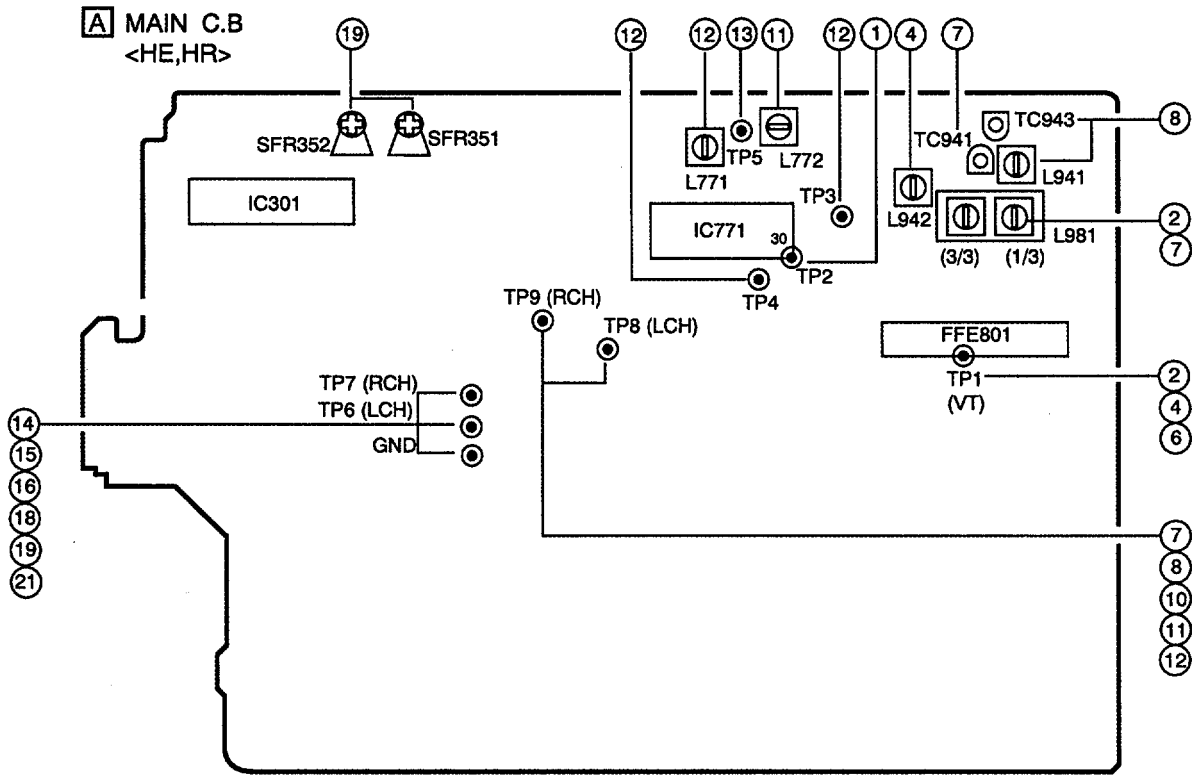


F DECK C.B



DECK-1 P, DECK-2 R/P/E HEAD (HE,HR,EZ)
DECK-1 P HEAD (K)

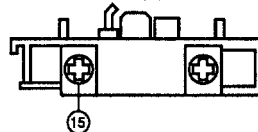

DECK-2 R / P HEAD (K)

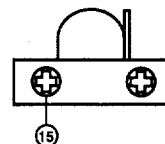

< TUNER SECTION >

1. Clock Check
Settings : • Test point : TP2
Method : Set to AM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. MW VT Adjustment <HE,HR>
Settings : • Test point : TP1 (VT)
• Adjustment location : L981 (3/3)
Method : Set to MW 1710kHz and adjust L981 (3/3) so that the test point becomes 7.5V \pm 0.05V. Then check that the test point is more than 0.3V (530kHz).
3. MW VT Check <EZ,K>
Settings : • Test point : TP1 (VT)
Method : Set to MW 1602kHz and check that the test point is less than 8.0V and more than 0.6V (531kHz).
4. SW VT Adjustment <HE,HR>
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to SW 17.9MHz and adjust L942 so that the test point becomes 6.0V \pm 0.05V. Then check that the test point is more than 0.3V (5.9MHz).
5. LW VT Adjustment <EZ,K>
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to LW 144kHz and adjust L942 so that the test point is 1.3V \pm 0.05V. Then check that the test point is less than 8.0V (290kHz).
6. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).
- 7a. MW Tracking Adjustment <HE,HR>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L981 (1/3) 603kHz.
TC941 1404kHz
Method : Set up TC941 to center before adjustment, the level at 603kHz is adjust to maximum by L981 (1/3). Then the level at 1404kHz is adjust to maximum by TC941.
- 7b. MW Tracking Adjustment <EZ,K>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L981(1/3) 999kHz
Method : Set to AM 999kHz and adjust L981(1/3) to MAX.
8. SW Tracking Adjustment <HE,HR>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L941 5.9MHz
TC943 17.9MHz
Method : Set up TC943 to center before adjustment. The level at 5.9MHz is adjust to maximum by L941. Then the level at 17.9MHz is adjust to maximum by TC943.

9. LW Tracking Adjustment <EZ,K>
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L941 144kHz
TC942 290kHz
Method : Set up TC942 to center before adjustment. The level at 144kHz is adjust to maximum by L941. Then the level at 290kHz is adjust to maximum by TC942.
10. FM Tracking Check
Settings : • Test point : TP8(Lch), TP9(Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 9dB (HE,HR), less than 10dB (EZ,K).
11. AM(MW) IF Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L772 450kHz
12. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC Balance)
: TP8(Lch), TP9(Rch) (Distortion)
• Adjustment location : L771
• Input level : 54dB
Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes 0V \pm 0.04V.
Next, check that the distortion is less than 1.3%.
13. Auto Stop Level Check

MW
• Input level : 52dB
• Test point : TP5
Method : Check auto stop at MW 999kHz and the level is 52 +10/-15dB.

FM
• Input level : 25dB
• Test point : TP5
Method : Check auto stop at FM 98.0MHz and the level is 25 dB \pm 10 dB.

< DECK SECTION >

14. Tape Speed Adjustment
Settings : • Test tape : TTA-100
• Test point : TP6(Lch), TP7(Rch)
• Adjustment location : SFR1
Method : Play back the test tape and adjust SFR1 so that the frequency counter reads 3000Hz \pm 5Hz.
15. Head Azimuth Adjustment
Settings : • Test tape : TTA-330
• Test point : TP6(Lch), TP7(Rch)
• Adjustment location : Head azimuth adjustment screw
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
16. PB Frequency Response Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP6(Lch), TP7(Rch)
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.

17. PB Sensitivity Adjustment (DECK 1, DECK 2) <EZ>
 Settings : • Test tape : TTA-200
 • Test point : TP6(Lch), TP7(Rch)
 • Adjustment location : SFR301 (DECK 1, Lch)
 SFR302 (DECK 1, Rch)
 SFR303 (DECK 2, Lch)
 SFR304 (DECK 2, Rch)
 Method : Play back the test tape and adjust SFRs so that the output level of the test point becomes 245mV \pm 10mV.
18. PB Sensitivity Check (DECK 1, DECK 2) <HE,HR,K>
 Settings : • Test tape : TTA-200
 • Test point : TP6(Lch), TP7(Rch)
 Method : Play back the test tape and check that the output level of the test point is 120mV \pm 3dB (\pm 10mV).
19. REC/PB Frequency Response Adjustment
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz / 10kHz (LINE IN)
 • Adjustment location : SFR351 (Lch)
 SFR352 (Rch)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes -28dBV (HE,HR,K), -36.5dBV (EZ). Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.

20. REC/PB Sensitivity Adjustment <EZ>
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz (LINE IN)
 • Adjustment location : SFR305 (Lch)
 SFR306 (Rch)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU (-16.5 dBV). Record and play back the 1kHz signals and adjust SFRs so that the output becomes 0dB \pm 0.5dB with respect to that of the 1kHz signal.
21. REC/PB Sensitivity Check <HE,HR,K>
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz (LINE IN)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP6, TP7 becomes 0VU(-8dBV). Record and play back the 1kHz signals and check that the output is 0 \pm 3.5dB.

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity : Less than 10 / 9 / 9dB (HE,HR)
 (THD 3%) [at 87.5 / 98.0 / 108.0MHz (HE,HR)]
 Less than 11 / 10 / 10dB (EZ,K)
 [at 87.5 / 98.0 / 108.0MHz (EZ,K)]

S/N 50dB Quieting sensitivity :

Less than 35dB (HE,HR)
 [at 98.0MHz (HE,HR)]
 Less than 38dB (EZ,K)
 [at 98.0MHz (EZ,K)]

Signal to noise ratio : Mono : More than 72dB
 Stereo : More than 64dB [at 98.0MHz]

Distortion : Mono : Less than 1.2%
 Stereo : Less than 2.0% [at 98.0MHz]

Auto stop level : 25dB \pm 10dB [at 98.0MHz]

Stereo separation : HE,HR : More than 30dB [at 98.0MHz]
 EZ,K : More than 12dB [at 98.0MHz]

Intermediate frequency : 10.7MHz

<MW SECTION>

Sensitivity : Less than 60dB [at 603kHz]
 Less than 58dB [at 999kHz]
 Less than 58dB [at 1404kHz]

Signal to noise ratio : More than 36dB [at 999kHz]

Distortion : Less than 1.5% [at 999kHz]

Auto stop level : 50dB +10/-15dB [at 999kHz]

Intermediate frequency : 450kHz

<LW SECTION> (EZ,K)

Sensitivity : Less than 70dB [at 144kHz]
 Less than 68dB [at 198kHz]
 Less than 66dB [at 290kHz]


Intermediate frequency : 450kHz

<SW SECTION> (HE,HR)

Sensitivity : Less than 42dB [at 5.9MHz]
 Less than 38dB [at 12.0 MHz]
 Less than 38dB [at 17.9MHz]
 Signal to noise ratio : More than 36dB [at 12.0MHz]
 Distortion : Less than 2.0% [at 12.0MHz]
 Intermediate frequency : 450kHz

<DECK SECTION>

Tape speed : 3000Hz \pm 45Hz
 Wow & flutter : Less than 0.21% (HE,HR,EZ), 0.25% (K)
 (W.R.M.S)
 Take-up torque : 30 ~ 55g-cm (FWD, REV)
 F.F & REW torque : 75 ~ 180g-cm
 Back tension : 2 ~ 7g-cm (FWD, REV)
 PB output level : 300mV \pm 3dB (HE,HR,K),
 300mV \pm 1dB (EZ) (SP OUT 2V)
 REC/PB output level : 0 \pm 3.5dB (HE,HR,K), 0 \pm 1dB (EZ)
 (SP OUT 2V,NORM)
 Distortion (REC/PB) : Less than 2.0% (NORM)
 Noise level (PB) : Less than 2.0mV (NORM, SP OUT 2V)
 Noise level (REC/PB) : Less than 3.0mV (NORM, SP OUT 2V)
 Erasing ratio : More than 60dB (at 125Hz, +10VU)
 Test tape : TTA-602 (NORMAL)

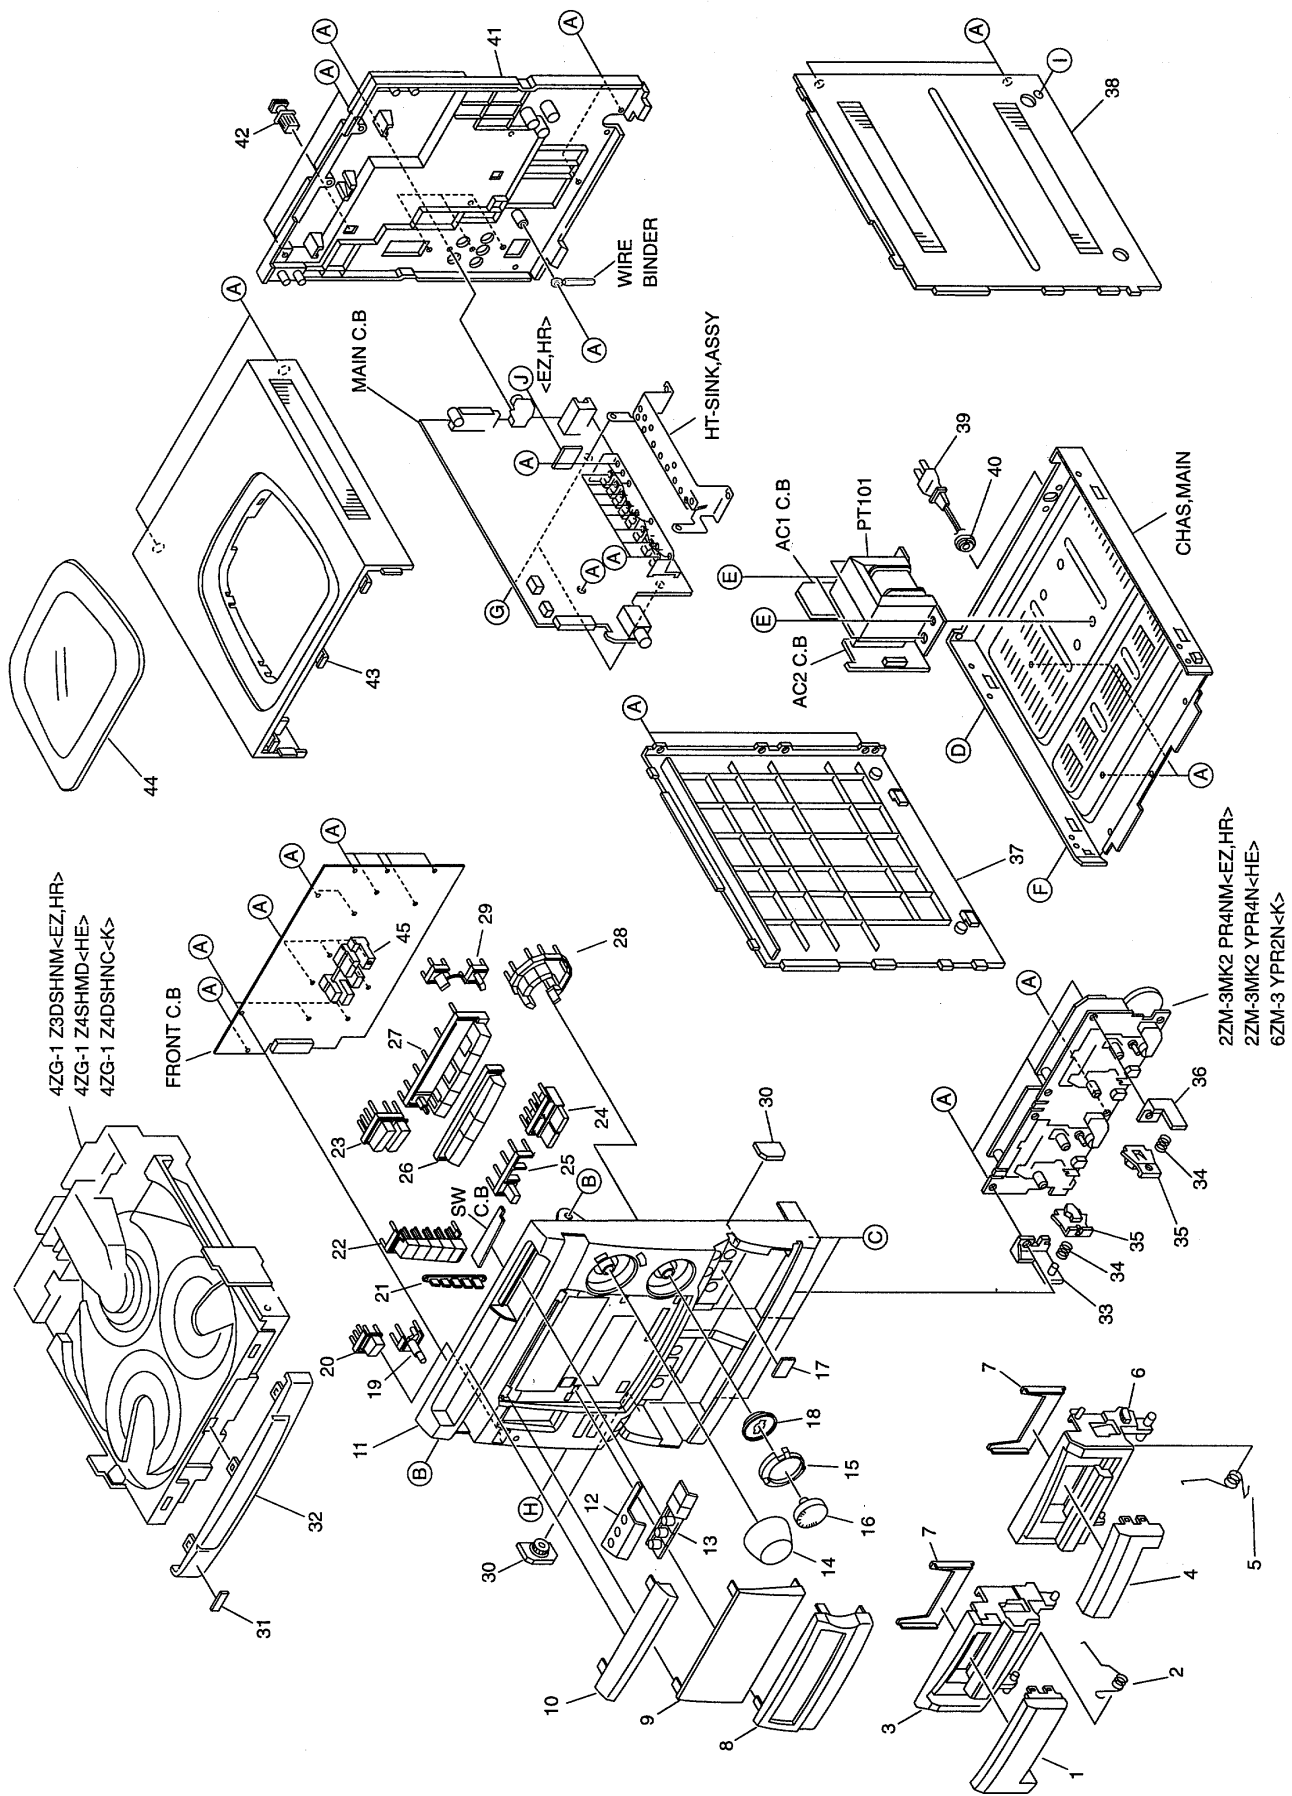



MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|------------------------------|----------|----------------|-----------|--------------------------------------|
| 1 | 87-NBG-009-010 | | WINDOW,CASS 1 | 29 | 87-NBG-019-010 | | KEY,ECHO |
| 2 | 82-NF5-218-010 | | SPR-T,EJECT 1 (SIN) | 30 | 87-NF8-220-010 | | DMPR,150 |
| 3 | 88-NF7-003-010 | | BOX,CASS 1 U | 31 | 82-NE6-067-010 | | BADGE,AIWA 30N |
| 4 | 87-NBG-010-010 | | WINDOW,CASS 2 | 32 | 88-NF7-005-010 | | PANEL,TRAY |
| 5 | 82-NF5-219-010 | | SPR-T,EJECT 2 (SIN) | 33 | 87-NF4-216-010 | | HLDR,LOCK 1 |
| 6 | 88-NF7-049-010 | | BOX,CASS 2 H<EXCEPT 505K> | 34 | 86-NF9-224-010 | | SPR-C,LOCK |
| 6 | 88-NF7-004-010 | | BOX,CASS 2 U<505K> | 35 | 82-NF5-229-010 | | PLATE,LOCK |
| 7 | 86-NF6-061-010 | | REFLECTOR,CASS | 36 | 87-NF4-217-010 | | HLDR,LOCK 2 |
| 8 | 88-NF7-037-010 | | PANEL,CONT E<505EZ,506EZ> | 37 | 87-NB8-005-010 | | PANEL,LEFT |
| 8 | 88-NF7-030-010 | | PANEL,CONT U<505K> | 38 | 88-NF8-047-010 | | PANEL,RIGHT 2 |
| 8 | 88-NF7-047-010 | | PANEL,CONT U1<505HR> | 39 | 87-A80-023-010 | | AC CORD,ASSY K 3P W<505K> |
| 9 | 88-NF7-021-010 | | WINDOW,DISP<505K> | 39 | 87-050-079-010 | | AC-CORD ASSY,E<EXCEPT 505K> |
| 9 | 88-NF7-039-010 | | WINDOW,DISP E<505EZ,506EZ> | 40 | 87-085-185-010 | | BUSHING, AC CORD (E) |
| 9 | 88-NF7-038-010 | | WINDOW,DISP H<505HR> | 41 | 88-NF7-076-010 | | CABI,505 EZSTNM<505EZ> |
| 10 | 87-NBG-008-010 | | WINDOW,CD | 41 | 88-NF7-070-010 | | CABI,REAR 506 EZSTNM<506EZ> |
| 11 | 88-NF7-050-010 | | CABI,FR E 506<506EZ> | 41 | 88-NF7-042-010 | | CABI,REAR HRJSTNM<505HR> |
| 11 | 88-NF7-060-010 | | CABI,FR E505<505EZ> | 41 | 88-NF7-066-010 | | CABI,REAR 505 HEST<505HE> |
| 11 | 88-NF7-046-010 | | CABI,FR H 505<505HR> | 41 | 88-NF7-059-010 | | CABI,REAR HEJSTNM<505HEJ> |
| 11 | 88-NF7-054-110 | | CABI,FR K<505K> | 41 | 88-NF7-044-010 | | CABI,REAR KSTNE<505K> |
| 12 | 87-NBG-006-010 | | PANEL,CD | 42 | 84-ZG1-245-210 | | CAP,OPTICAL |
| 13 | 88-NF7-062-010 | | KEY,CD | 43 | 87-NF6-021-010 | | PANEL, TOP |
| 14 | 87-NBG-011-010 | | KNOB,RTRY VOL | 44 | 86-NF6-007-010 | | WINDOW, TOP |
| 15 | 88-NF7-007-010 | | PANEL,JOG | 45 | 88-NF7-201-010 | | GUIDE,OPE |
| 16 | 88-NF7-006-310 | | KNOB,RTRY JOG | A | 87-067-703-010 | | TAPPING SCREW, BVT2+3-10 |
| 17 | 81-532-080-010 | | LABEL, CASS. COMPT | B | 87-721-097-410 | | QT2+3-12 GLD |
| 18 | 88-NF7-015-010 | | REFLECTOR,JOG | C | 87-067-688-010 | | BVTT+3-6 |
| 19 | 88-NF7-040-110 | | KEY, DEMO S | D | 87-721-096-410 | | QT2+3-10 GLD |
| 20 | 87-NBG-015-010 | | KEY, POWER | E | 87-078-019-010 | | S-SCREW,IT+4-6 |
| 21 | 87-NBG-023-010 | | REFLECTOR,FUN | F | 87-591-094-410 | | TAPPING SCREW, QIT+3-6 |
| 22 | 88-NF7-022-110 | | KEY,FUN | G | 87-NF4-224-010 | | S-SCREW,IT3B+3-8 CU |
| 23 | 88-NF7-008-010 | | KEY,BBE | H | 87-723-096-410 | | QT2+3-10W/O SLOT BL |
| 24 | 88-NF7-033-010 | | KEY,TIMER E<505EZ,506EZ> | I | 87-B10-091-010 | | UTT2+3-10 W/O BLK |
| 24 | 88-NF7-027-010 | | KEY,TIMER U<505K,505HR> | J | 87-067-579-010 | | TAPPING SCREW, BVT2+3-8<EXCEPT 505K> |
| 25 | 88-NF7-013-010 | | KEY,EDIT<505EZ,506EZ> | | | | |
| 25 | 88-NF7-032-010 | | KEY,EDIT H<505HR> | | | | |
| 25 | 88-NF7-025-010 | | KEY,EDIT U<505K> | | | | |
| 26 | 88-NF7-028-110 | | KEY,ASSY OPE U | | | | |
| 27 | 88-NF7-034-110 | | KEY,ASSY DEMO H<EXCEPT 505K> | | | | |
| 27 | 88-NF7-029-110 | | KEY,ASSY DEMO U<505K> | | | | |
| 28 | 88-NF7-014-110 | | KEY,DSP | | | | |

TAPE MECHANISM EXPLODED VIEW 1 / 1 <6ZM-3 YPR2N>

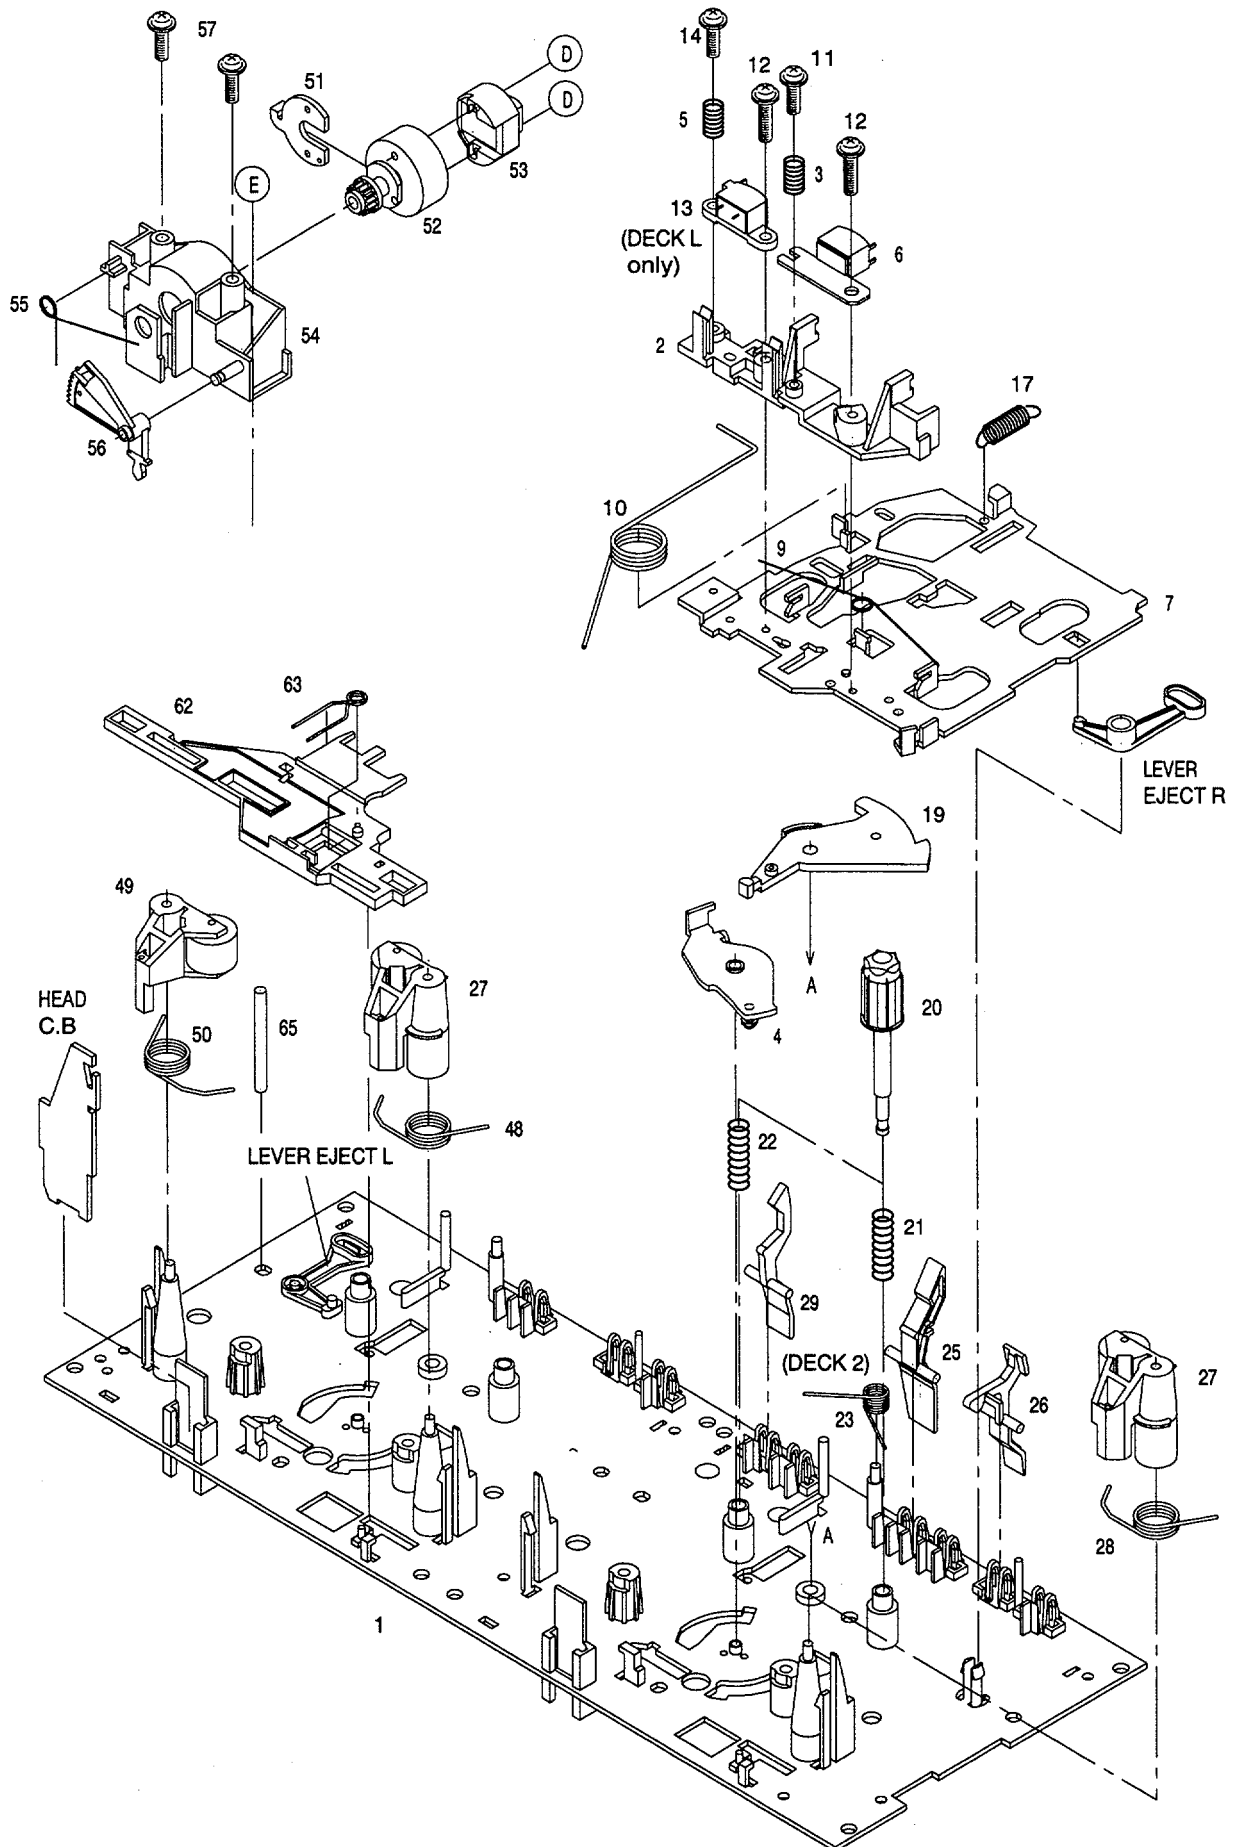

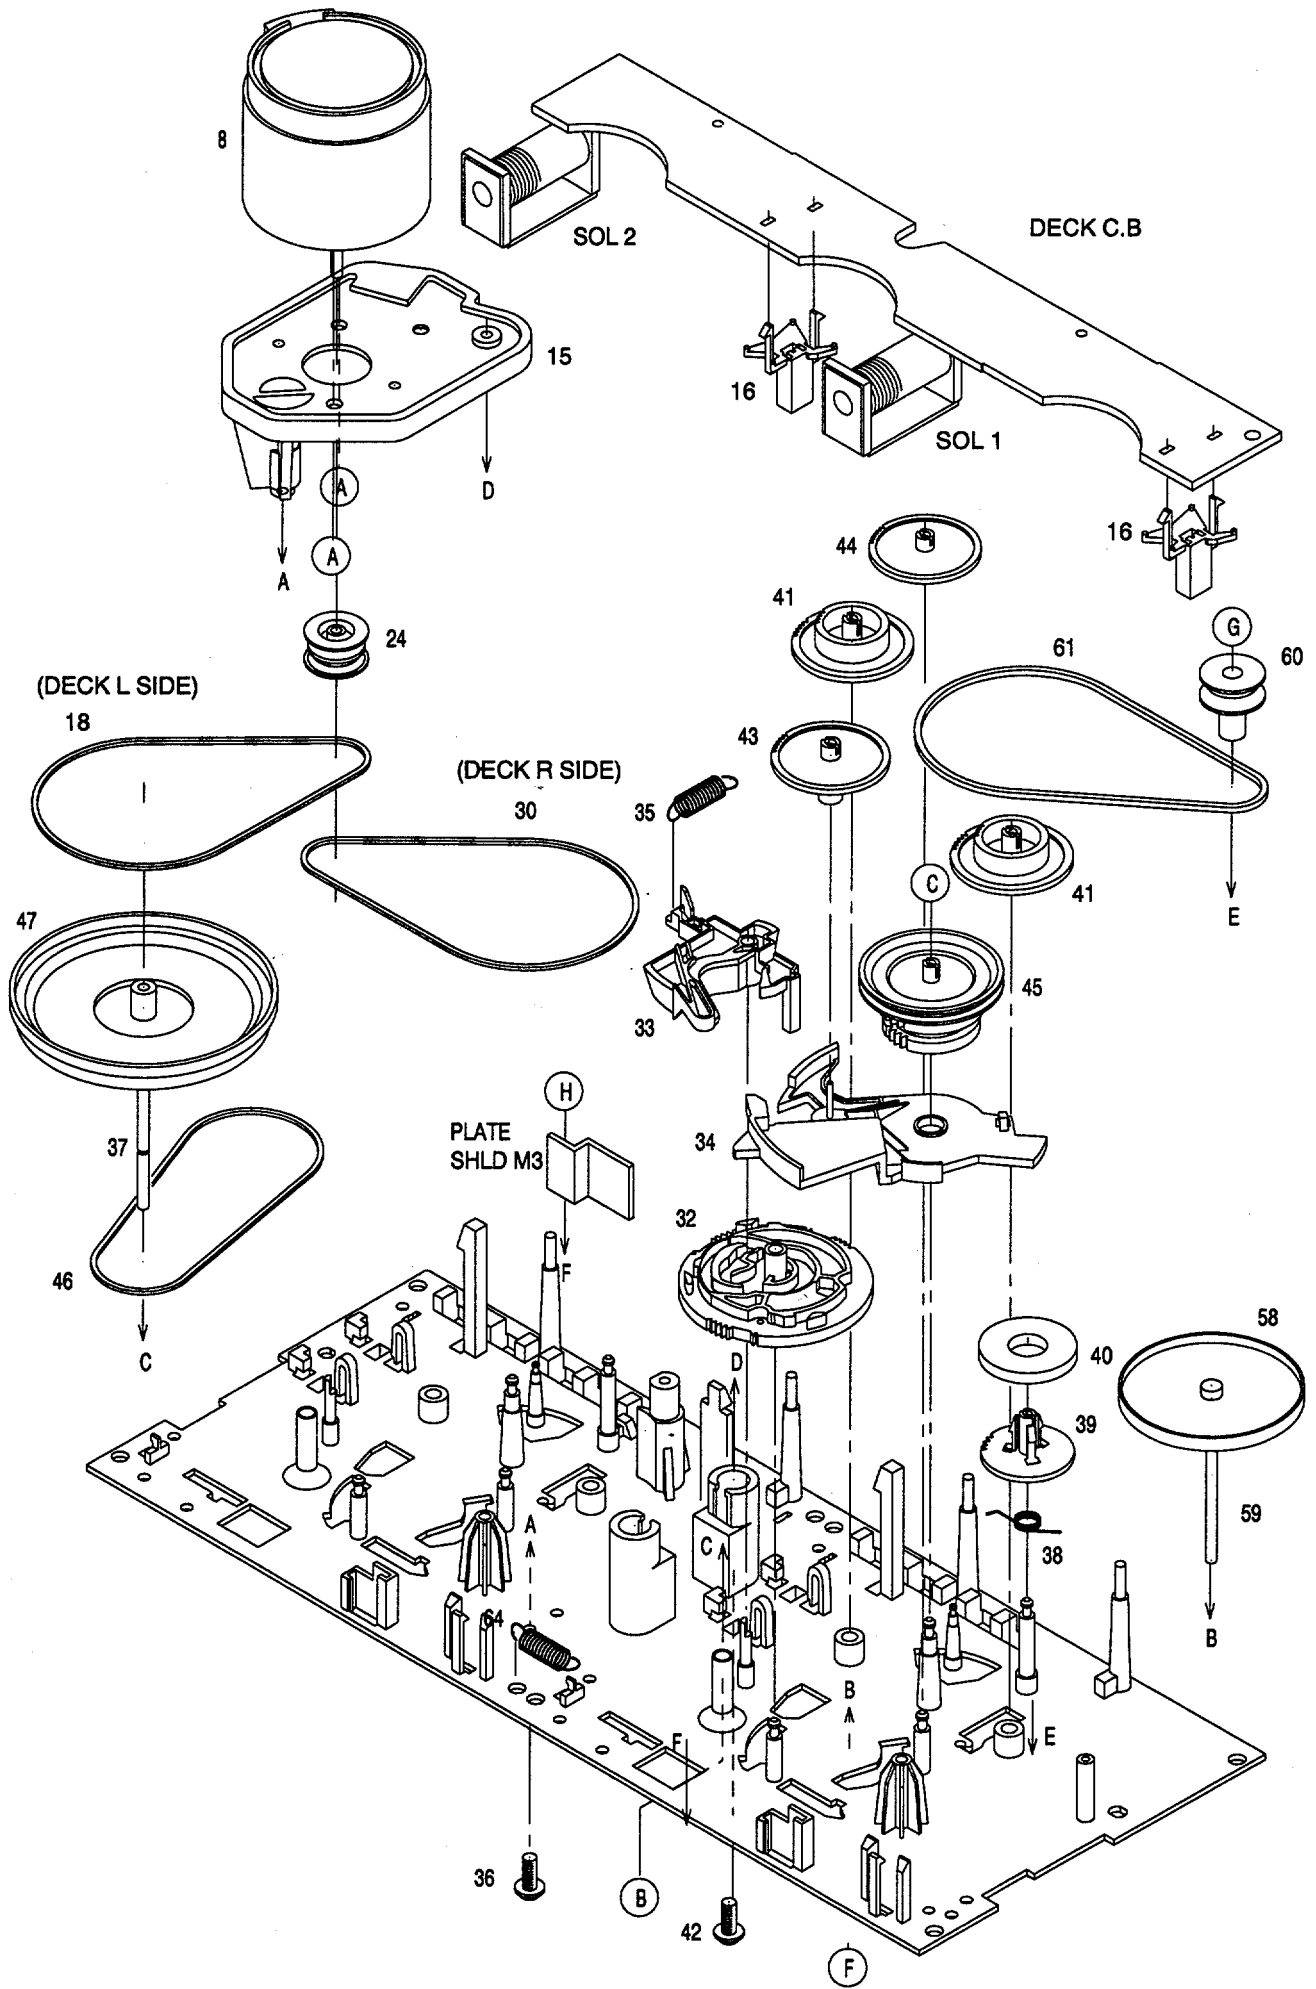


TAPE MECHANISM PARTS LIST 1 / 1 <6ZM-3 YPR2N>


If can't understand for Description please kindly refer to " REFERENCE NAME LIST ".


| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-----------------------|----------|----------------|-----------|-----------------------|
| 1 | 86-ZM3-215-010 | | CHAS ASSY,RS | 41 | 82-ZM1-216-319 | | GEAR, REEL |
| 2 | 86-ZM3-202-010 | | BASE, HEAD S | 42 | 86-ZM3-213-010 | | S-SCREW, HLDR, MOT 3 |
| 3 | 86-ZM3-205-010 | | SPR-C, RPH S | 43 | 82-ZM1-225-219 | | GEAR, FR |
| 4 | 82-ZM1-333-210 | | PLATE, LINK 2 | 44 | 82-ZM1-226-019 | | GEAR, REW |
| 5 | 86-ZM3-206-010 | | SPR-C, EH S | 45 | 82-ZM3-333-310 | | SLIP DISK ASSY 2 |
| 6 | 87-A90-403-019 | | HEAD, RPH MS15R | 46 | 82-ZM1-338-010 | | BELT FR4 |
| 7 | 86-ZM3-201-010 | | CHAS, HEAD S (DECK L) | 47 | 82-ZM1-349-019 | | FLY-WHL RW (DECK L) |
| 7 | 82-ZM3-206-910 | | CHAS, HEAD (DECK R) | 47 | 82-ZM3-338-010 | | FLY-WHL R3W (DECK R) |
| 8 | 87-045-347-019 | | MOT, SHU2L 70(M1) | 48 | 82-ZM1-259-210 | | SPR-T, PINCH R |
| 9 | 82-ZM1-269-219 | | SPR-T, BRG | 49 | 82-ZM1-341-110 | | LVR ASSY, PINCH L2 |
| 10 | 82-ZM1-219-110 | | SPR-T, LINK | 50 | 82-ZM1-258-210 | | SPR-T, PINCH L |
| 11 | 86-ZM3-209-010 | | S-SCREW, ASIMUTHS | 51 | 82-ZM1-314-110 | | PLATE, HEAD |
| 12 | 86-ZM3-207-010 | | S-SCREW, RPH | 52 | 82-ZM1-208-310 | | HLDR, HEAD |
| 13 | 87-A90-404-019 | | HEAD, EH LE15B | 53 | 87-A90-366-010 | | HEAD, PH YK50P-BF414 |
| 14 | 86-ZM3-208-010 | | S-SCREW, EH | 54 | 82-ZM1-207-810 | | GUIDE TAPE |
| 15 | 86-ZM3-203-010 | | HLDR, MOTS | 55 | 82-ZM1-213-010 | | SPR-T, HEAD |
| 16 | 82-ZM1-245-210 | | HLDR, IC | 56 | 82-ZM1-210-110 | | GEAR, HT |
| 17 | 82-ZM1-218-019 | | SPR-E, HB | 57 | 86-ZM4-206-010 | | S-SCREW AZIMUTH L |
| 18 | 86-ZM3-214-010 | | BELT, SUB RR | 58 | 82-ZM1-348-010 | | FLY-WHL, LW |
| 19 | 82-ZM1-222-219 | | LVR, PLAY | 59 | 82-ZM1-236-019 | | CAPSTAN N 2-41.5 |
| 20 | 82-ZM1-217-419 | | REEL TABLE | 60 | 82-ZM3-335-210 | | PULLEY, COUPLER M3 |
| 21 | 82-ZM1-244-519 | | SPR-C, BT | 61 | 86-ZM1-206-010 | | BELT, MAIN L |
| 22 | 82-ZM1-285-410 | | SPR-C, BT L | 62 | 82-ZM1-266-110 | | LVR, DIR |
| 23 | 82-ZM1-257-019 | | SPR-T, CAS | 63 | 82-ZM1-214-010 | | SPR-T, DIR |
| 24 | 82-ZM3-221-010 | | PULLEY, MOT 2M | 64 | 82-ZM1-255-310 | | SPR-E, LVR DIR |
| 25 | 82-ZM1-242-019 | | LVR, CAS | 65 | 82-ZM3-339-010 | | SHAFT, COUPLER N3 |
| 26 | 82-ZM1-243-019 | | LVR, STOP | A | 87-251-071-417 | | U+2.6-4 |
| 27 | 82-ZM1-344-119 | | LVR ASSY, PINCH | B | 80-ZM6-243-019 | | SH, 1.75-3.6-0.5 SLT |
| 28 | 86-ZM3-204-010 | | SPR-T, PINCHDS | C | 82-ZM3-334-010 | | PW, 2.16-6-0.4 |
| 29 | 82-ZM1-240-119 | | LVR, REC (DECK 2) | D | 80-ZM6-207-010 | | V+1.6-7 |
| 30 | 86-ZM3-210-010 | | BELT, RS | E | 85-ZM3-202-010 | | S-SCREW TG |
| 32 | 82-ZM3-305-119 | | GEAR, CAM M2 | F | 82-ZM1-288-010 | | SH, 1.63-3.2-0.5. SLT |
| 33 | 82-ZM1-227-319 | | LVR, TRIG | G | 87-B10-043-010 | | W-P, 0.99-4-0.25 SLT |
| 34 | 82-ZM3-306-110 | | LVR, FR M2 | H | 87-571-032-410 | | VIT+2-3 |
| 35 | 82-ZM1-265-119 | | SPR-E, TRIG | | | | |
| 36 | 87-761-073-419 | | VFT2+2.6-6 W/O SLOT | | | | |
| 37 | 82-ZM1-239-019 | | CAPSTAN N 2.2-41.7 | | | | |
| 38 | 82-ZM1-322-019 | | SPR-T, FR60 | | | | |
| 39 | 82-ZM1-220-219 | | GEAR, IDLER | | | | |
| 40 | 82-ZM3-616-019 | | RING MAGNET 4 | | | | |

SPRING APPLICATION POSITION <6ZM-3 YPR2N>

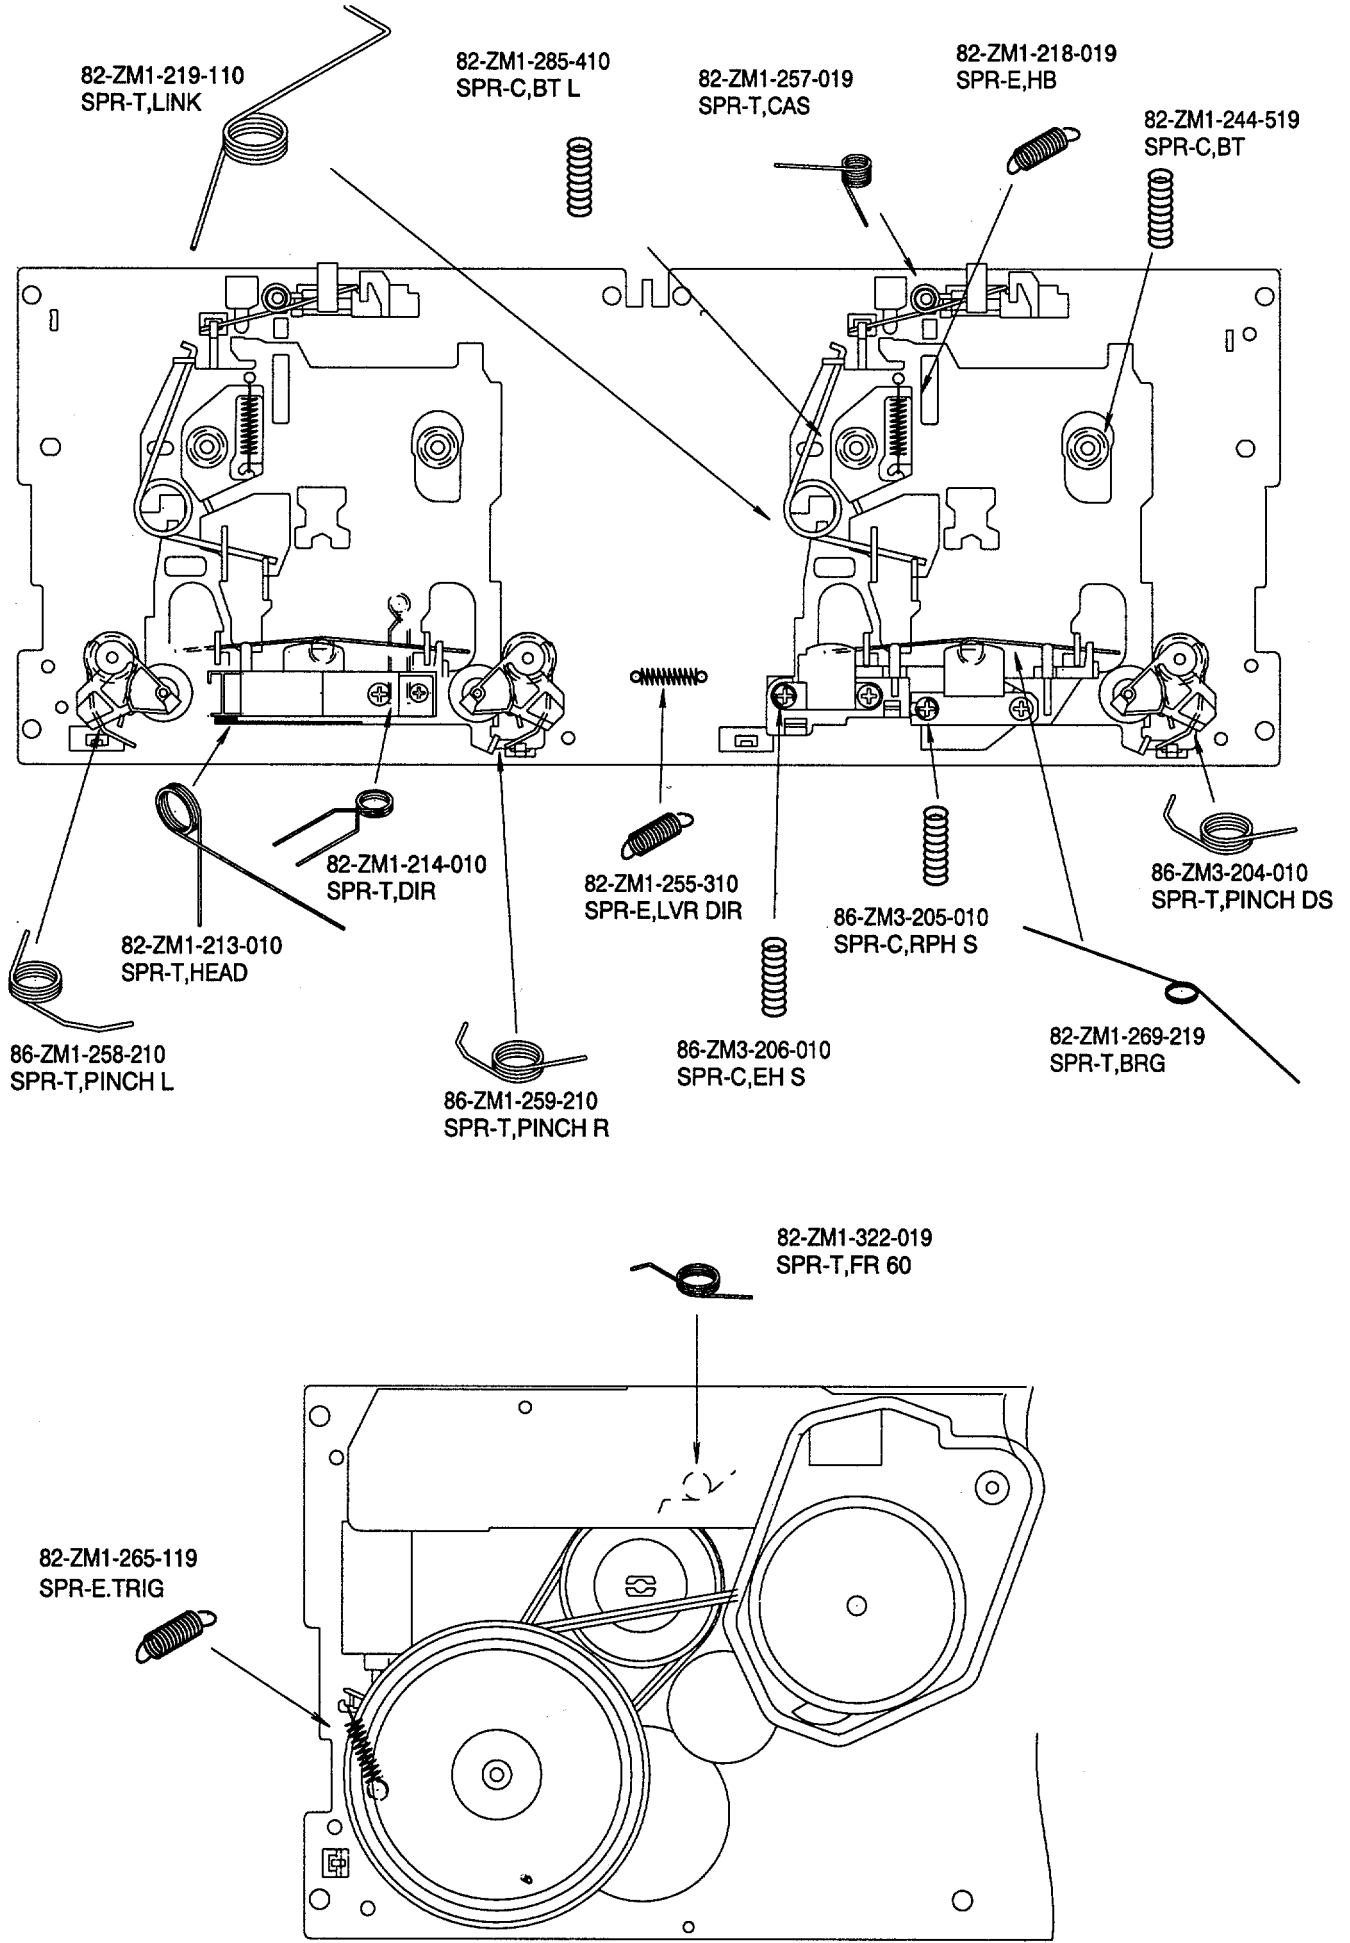

TAPE MECHANISM EXPLODED VIEW 1 / 1 <ZM-3 3MK2 PR4NM / YPR4N>

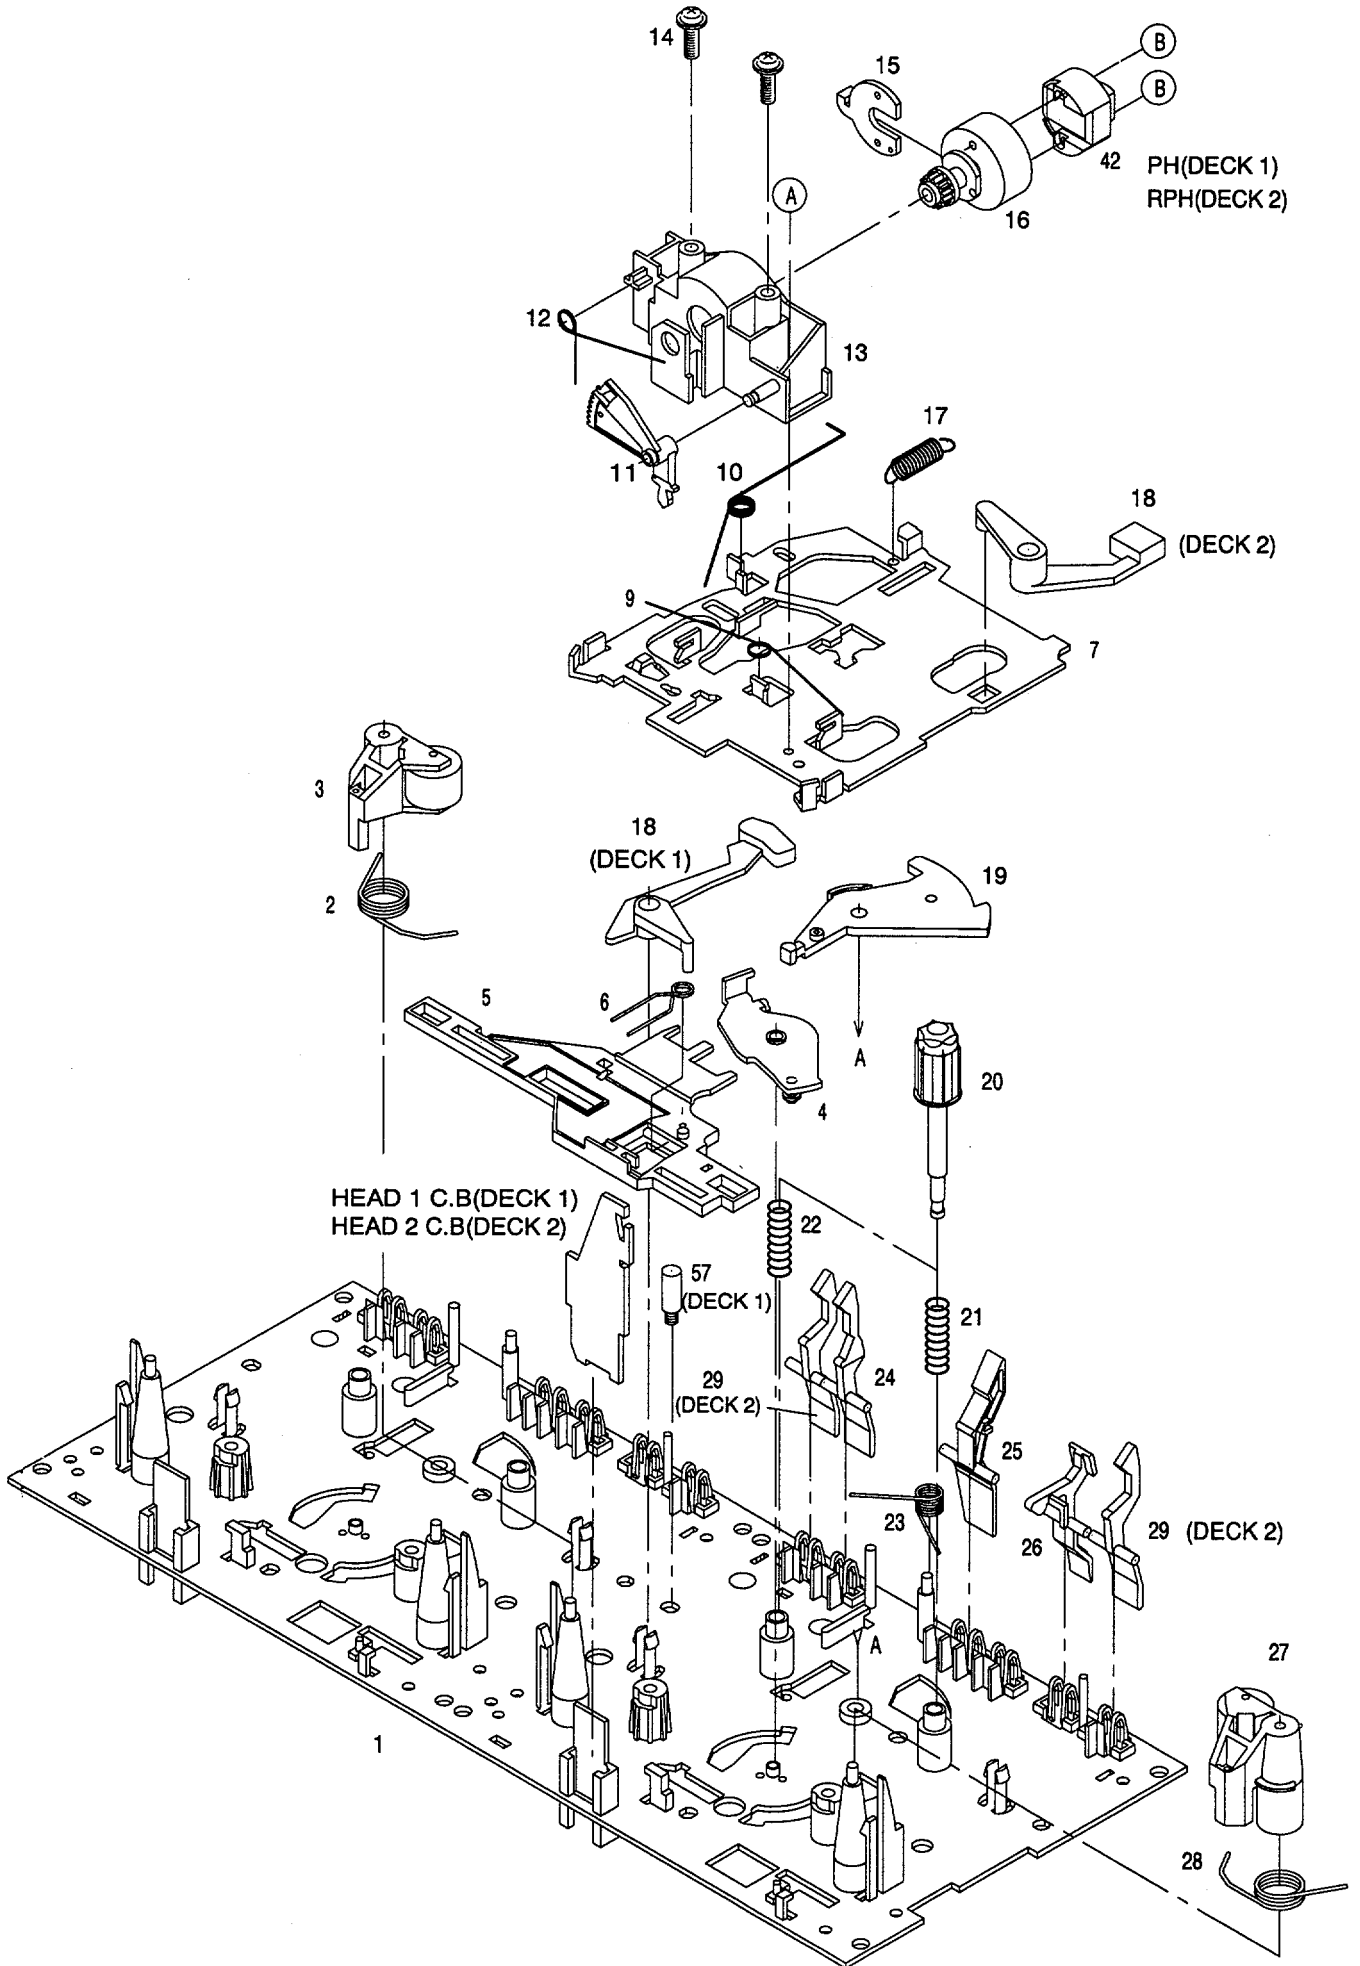


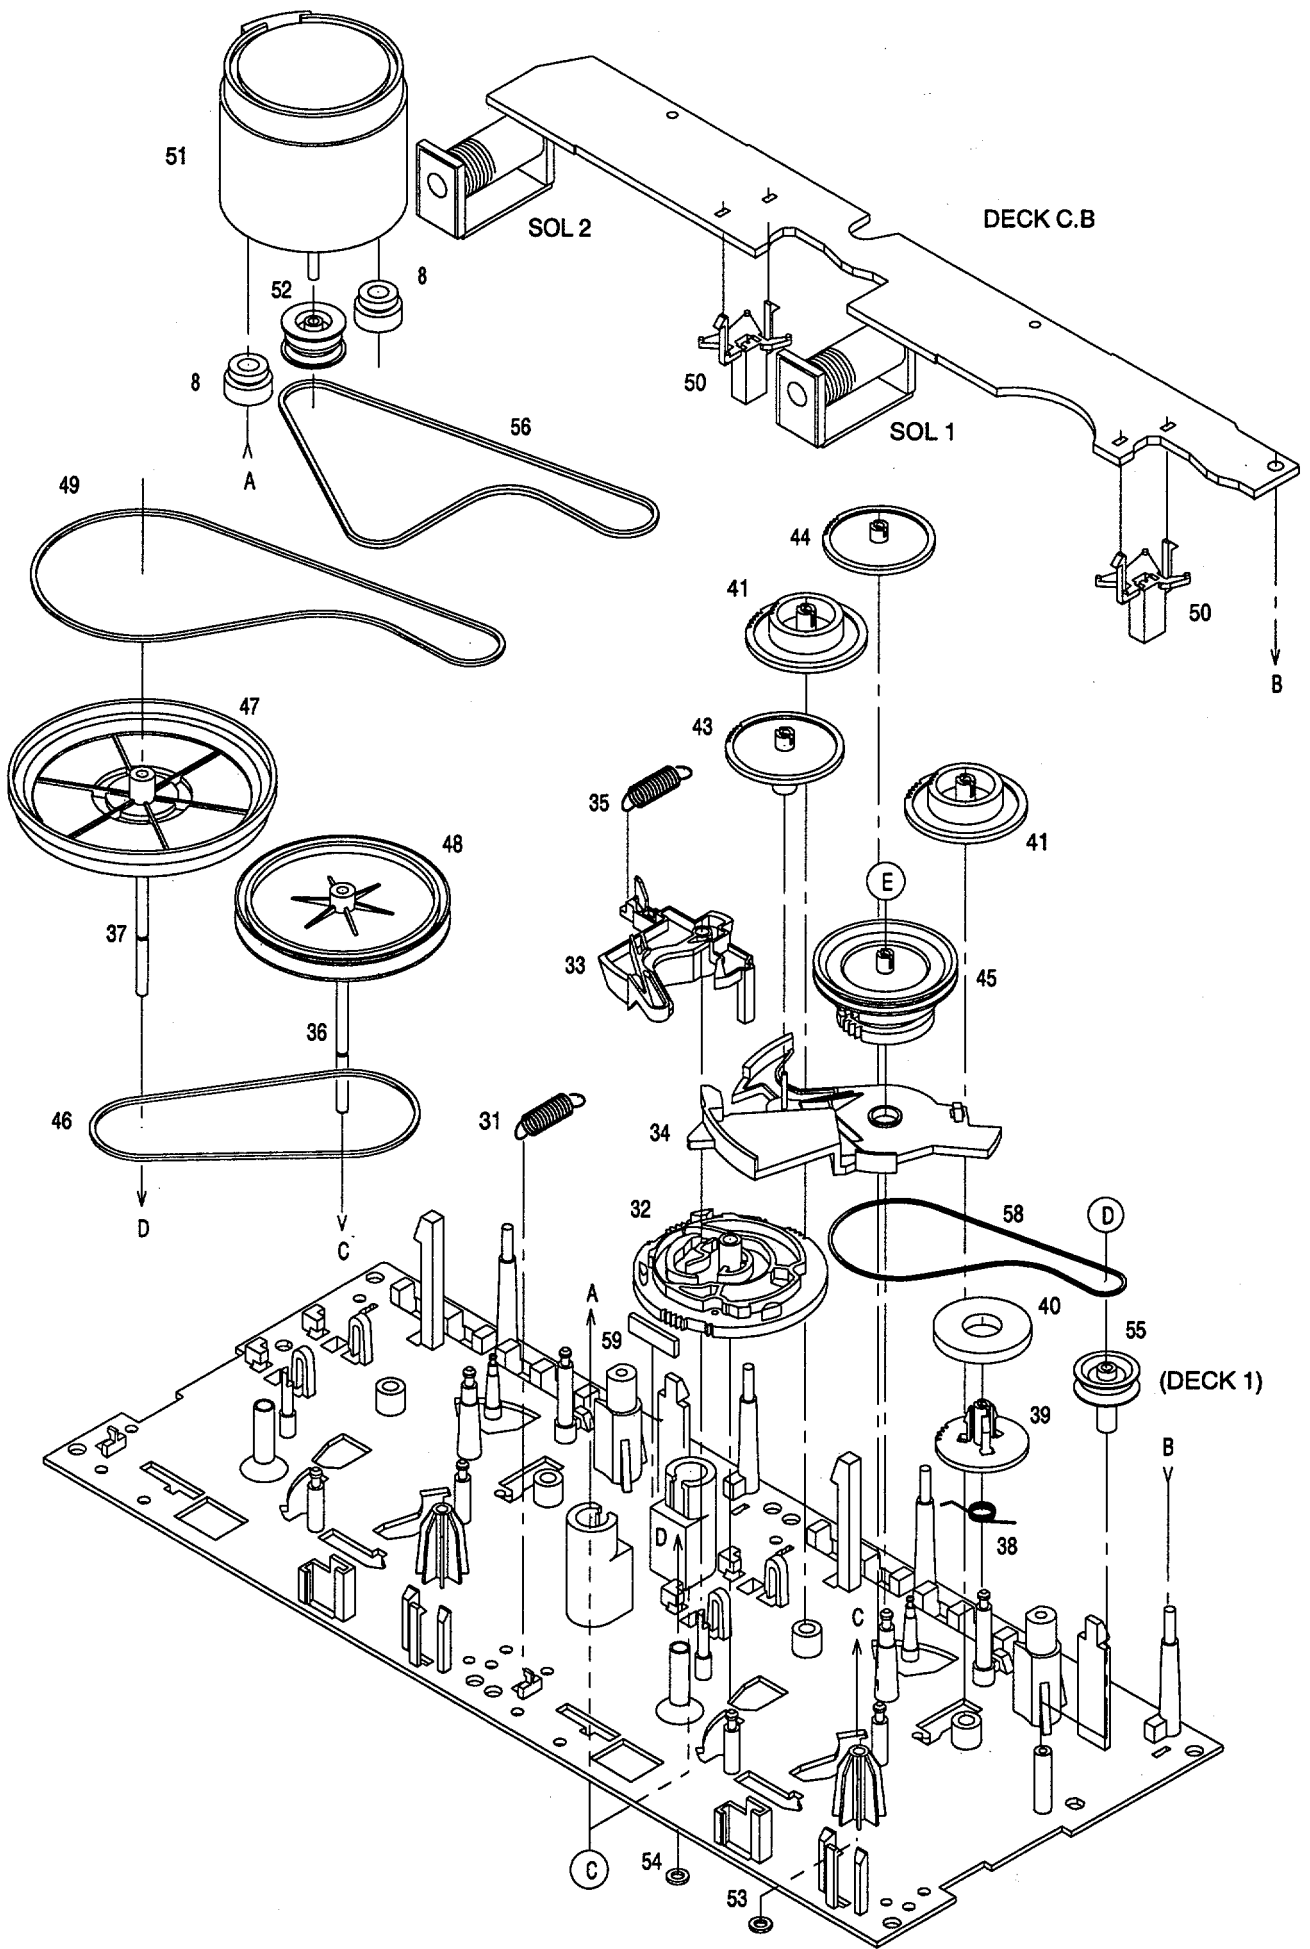


TAPE MECHANISM PARTS LIST 1 / 1 <2ZM-3MK2 PR4NM / YPR4N>

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION | REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|----------------------|----------|----------------|-----------|---------------------------|
| 1 | 82-ZM3-301-519 | | CHAS ASSY,M2 | 36 | 82-ZM1-236-019 | | CAPSTAN N 2-41.5 |
| 2 | 82-ZM1-258-110 | | SPR-T,PINCH L | 37 | 82-ZM1-239-019 | | CAPSTAN N 2.2-41.7 |
| 3 | 82-ZM1-341-110 | | LVR ASSY,PINCH L2 | 38 | 82-ZM1-322-019 | | SPR-T,FR60 |
| 4 | 82-ZM1-333-010 | | PLATE,LINK 2 | 39 | 82-ZM1-220-219 | | GEAR,IDLER |
| 5 | 82-ZM1-266-11K | | LVR,DIR | 40 | 82-ZM3-616-019 | | RING MAGNET 4 |
| 6 | 82-ZM1-214-010 | | SPR-T,DIR | 41 | 82-ZM1-216-31K | | GEAR,REEL |
| 7 | 82-ZM1-206-81K | | CHAS,HEAD | 42 | 87-A90-319-010 | | HEAD,PH HADKH2 FPC |
| 8 | 82-ZM3-307-019 | | CUSH-G,DIA3.7-8-3.2 | 42 | 87-A90-320-010 | | HEAD,RPH HADKH5 FPC |
| 9 | 82-ZM1-269-219 | | SPR-T,BRG | 43 | 82-ZM1-225-21K | | GEAR,FR |
| 10 | 82-ZM1-219-119 | | SPR-T,LINK | 44 | 82-ZM1-226-019 | | GEAR,REW |
| 11 | 82-ZM1-210-119 | | GEAR,H T | 45 | 82-ZM3-333-310 | | SLIP DISK ASSY 2 |
| 12 | 82-ZM1-213-019 | | SPR-T,HEAD | 46 | 82-ZM1-338-010 | | BELT FR4 |
| 13 | 82-ZM1-207-619 | | GUIDE,TAPE | 47 | 82-ZM1-349-110 | | FLY-WHL,R W(DECK 2) |
| 14 | 86-ZM4-206-010 | | S-SCREW,AZIMUTH | 47 | 82-ZM3-338-110 | | FLY-WHL,R3 W(DECK 1) |
| 15 | 82-ZM1-314-119 | | PLATE,HEAD | 48 | 82-ZM1-348-010 | | FLY-WHL,L W(DECK 2) |
| 16 | 82-ZM1-208-119 | | HLDR,HEAD | 48 | 82-ZM1-348-010 | | FLY-WHL,L W(DECK 1) |
| 17 | 82-ZM1-218-019 | | SPR-E,HB | 49 | 82-ZM3-329-210 | | BELT,SBU R2 |
| 18 | 82-ZM1-263-110 | | LVR,EJECT L (DECK 1) | 50 | 82-ZM1-245-210 | | HLDR,IC |
| 18 | 82-ZM1-264-010 | | LVR,EJECT R (DECK 2) | 51 | 87-045-347-019 | | MOT,SHU2L 70(M1) |
| 19 | 82-ZM1-222-21K | | LVR,PLAY | 52 | 82-ZM3-221-010 | | PULLEY,MOT 2M |
| 20 | 82-ZM1-217-319 | | REEL TABLE | 53 | 82-ZM1-288-019 | | SH,1.63-3.2-0.5 SLT |
| 21 | 82-ZM1-244-510 | | SPR-C,BT | 54 | 80-ZM6-243-019 | | SH,1.75-3.6-0.5 SLT |
| 22 | 82-ZM1-285-310 | | SPR-C,BT L | 55 | 82-ZM3-335-210 | | PULLEY,COUPLER M3(DECK 1) |
| 23 | 82-ZM1-257-019 | | SPR-T,CAS | 56 | 82-ZM3-337-010 | | BELT,SBU MOT 2 |
| 24 | 82-ZM1-241-319 | | LVR,MC | 57 | 82-ZM3-339-010 | | SHAFT,COUPLER N3(DECK 1) |
| 25 | 82-ZM1-242-019 | | LVR,CAS | 58 | 86-ZM1-206-010 | | BELT,MAIN L |
| 26 | 82-ZM1-243-019 | | LVR,STOP | 59 | 82-ZM3-340-010 | | SH,BELT D2 |
| 27 | 82-ZM1-344-110 | | LVR ASSY,PINCH R2 | A | 85-ZM3-202-010 | | S-SCREW,TG |
| 28 | 82-ZM1-259-110 | | SPR-T,PINCH R | B | 80-ZM6-207-019 | | V+1.6-7 |
| 29 | 82-ZM1-240-11K | | LVR,REC (DECK 2) | C | 82-ZM3-318-019 | | S-SCRW MOTOR M2 |
| 31 | 82-ZM1-255-319 | | SPR-E,LVR DIR | D | 87-B10-043-010 | | W-P,0.99-4-0.25 SLT |
| 32 | 82-ZM3-305-01K | | GEAR,CAM M2 | E | 82-ZM3-334-010 | | PW,2.16-6-0.4 |
| 33 | 82-ZM1-227-21K | | LVR,TRIG | | | | |
| 34 | 82-ZM3-306-11K | | LVR,FR M2 | | | | |
| 35 | 82-ZM1-265-119 | | SPR-E,TRIG | | | | |

SPRING APPLICATION POSITION <2ZM-3MK2 PR4NM / YPR4N>

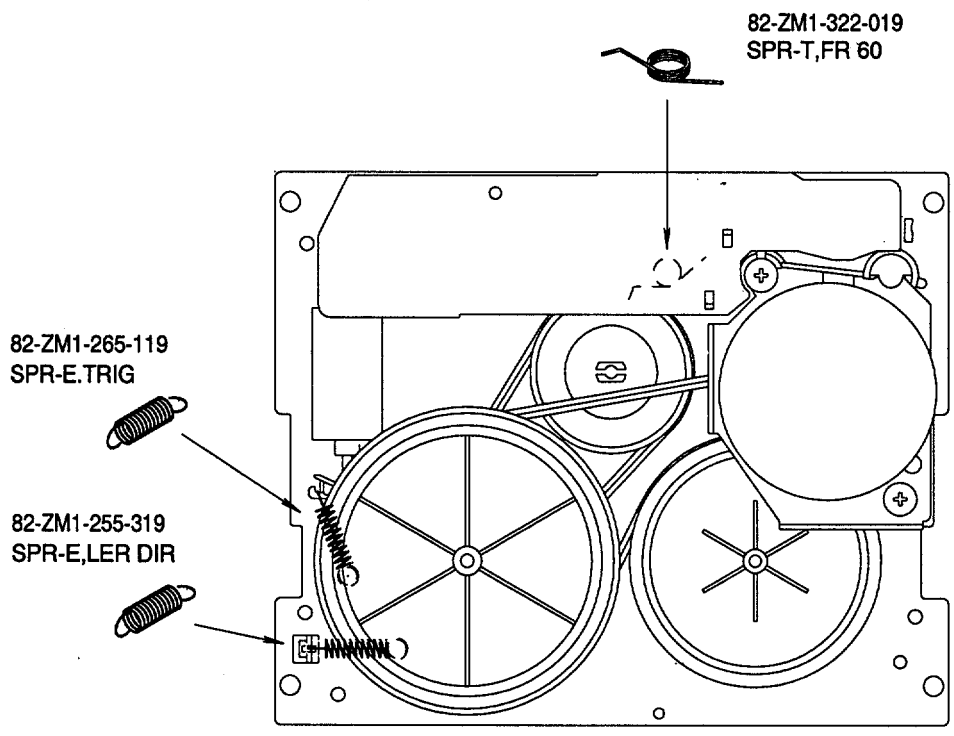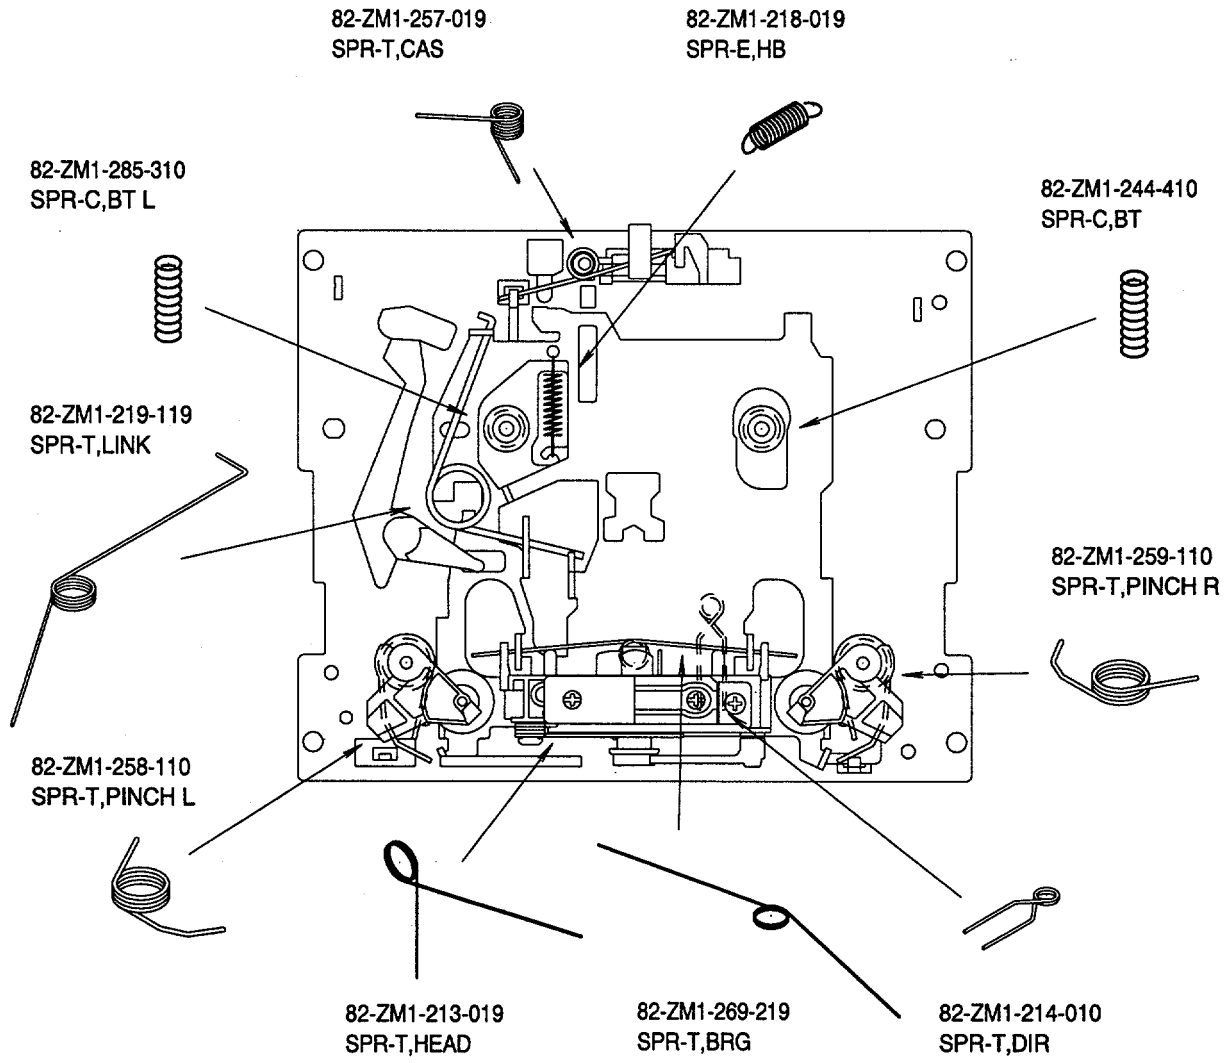


SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

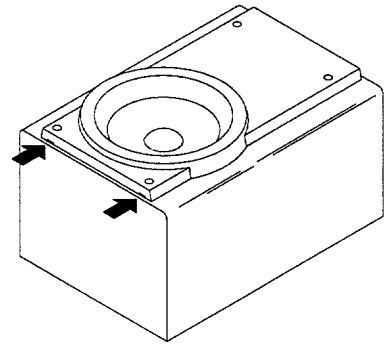

Type.2

グリルフレームを外し、4個のゴムキャップをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

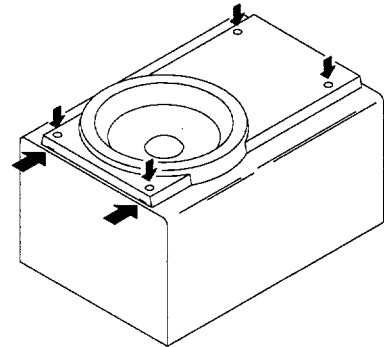

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

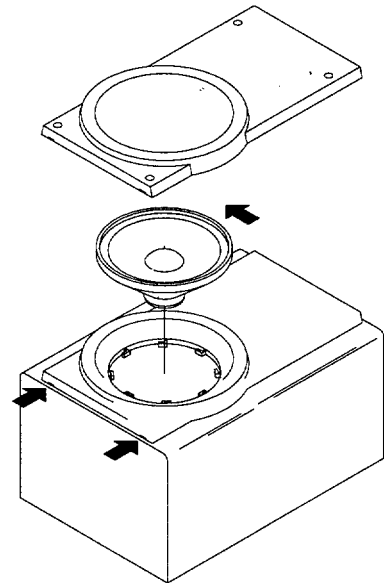

SX-FNS505 (YJSTNC, YSTNC) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-------------------|
| 1 | 85-NS6-611-010 | | SPEAKER CORD Y/B |
| 2 | 86-NS5-606-010 | | SPKR |
| 3 | 86-NSA-610-010 | | SPKR, T 60H |
| 4 | 87-NS4-611-010 | | SPKR, CORD |
| 5 | 87-NS5-602-010 | | SPKR, W160 |
| 6 | 87-NSA-001-010 | | PANEL FR |
| 7 | 87-NSA-002-010 | | PANEL SP |
| 8 | 87-NSA-004-010 | | GRILLE FRAME ASSY |
| 9 | 87-NSA-007-010 | | HLDR SQ |
| 10 | 87-NSA-010-010 | | PROTECTOR |
| 11 | 87-NSA-610-010 | | SPKR CERAMIC |
| 12 | 87-NSA-611-010 | | SPKR CAP |

SX-ANS706 (YJSTNL, YSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|--------------------|
| 1 | 88-NS2-001-010 | | PANEL, FR R |
| 2 | 88-NS2-002-010 | | PANEL, FR L |
| 3 | 88-NS2-014-010 | | GRILLE, FRAME ASSY |
| 4 | 88-NS2-008-010 | | PROTECTOR, TW R |
| 5 | 88-NS2-009-010 | | PROTECTOR, TW L |
| 6 | 88-NS2-010-010 | | PROTECTOR, TOP |
| 7 | 87-NS4-611-010 | | SPKR, CORD |
| 8 | 85-NS6-611-010 | | SPKR, CORD Y/B |
| 9 | 86-NS4-604-010 | | SPKR, M 80 |
| 10 | 88-NS2-609-010 | | SPKR, CERAMIC |
| 11 | 86-NSA-608-010 | | SPKR, W 160H<STNL> |
| 12 | 87-NS5-602-010 | | SPKR, W 160<JSTL> |
| 13 | 87-NS4-605-010 | | SPKR, T 50 |
| 14 | 88-NS2-606-010 | | SPKR, SU 60 |

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

| REF. NO. | PART NO. | KANRI NO. | DESCRIPTION |
|----------|----------------|-----------|-------------------------------------|
| 1 | 88-NF7-901-010 | | IB, H(ECA)M<HR, HE> |
| 1 | 88-NF7-916-010 | | IB, E(9L)M<EZ> |
| 1 | 88-NF7-905-010 | | IB, K(E)E<K> |
| 2 | 87-006-269-010 | | AM LOOP ANT (UN)<HR> |
| 2 | 87-006-225-010 | | AM LOOP ANT NC2<EZ, K> |
| 2 | 87-A90-054-010 | | ANT, LOOP AM-CON C<HE> |
| 3 | 87-A90-064-010 | | FEEDER-ANT, FM(SHS)<HR, HE> |
| 3 | 87-043-106-010 | | ANT, FM 1007 AWG<EZ, K> |
| △ 4 | 87-A90-312-010 | | PLUG, CONVERSION WTN-1157R1<HR, HE> |
| 5 | 87-NF6-635-010 | | RC UNIT, RC-7AS06 |
| 6 | 87-043-095-010 | | ANT, WIRE<HR, HE> |

REFERENCE NAME LIST

ELECTRICAL SECTION

| DESCRIPTION | REFERENCE NAME |
|-------------|--------------------|
| ANT | ANTENNAS |
| C- | CHIP |
| C-CAP | CAP, CHIP |
| C-CAP TN | CAP, CHIP TANTALUM |
| C-COIL | COIL, CHIP |
| C-DI | DIODE, CHIP |
| C-DIODE | DIODE, CHIP |
| C-FET | FET, CHIP |
| C-FOTR | FILTER, CHIP |
| C-JACK | JACK, CHIP |
| C-LED | LED, CHIP |
| C-RES | RES, CHIP |
| C-SFR | SFR, CHIP |
| C-SLIDE SW | SLIDE SWITCH, CHIP |
| C-SW | SWITCH, CHIP |
| C-TR | TRANSISTOR, CHIP |
| C-VR | VOLUME, CHIP |
| C-ZENER | ZENER, CHIP |
| CAP, CER | CAP, CERA-SOL |
| CAP, E | CAP, ELECT |
| CAP, M/F | CAP, FILM |
| CAP, TC | CAP, CERA-SOL |
| CAP, TC-U | CAP, CERA-SOL SS |
| CAP, TN | CAP, TANTALUM |
| CERA FIL | FILTER, CERAMIC |
| CF | FILTER, CERAMIC |
| DL | DELAY LINE |
| E/CAP | CAP, ELECT |
| FILT | FILTER |
| FLTR | FILTER |
| FUSE RES | RES, FUSE |
| MOT | MOTOR |
| P-DIODE | PHOTO DIODE |
| P-SNSR | PHOTO SENSER |
| P-TR | PHOTO TRANSISTOR |
| POLY VARI | VARIABLE CAPACITOR |
| PPCAP | CAP, PP |
| PT | POWER TRANSFORMER |
| PTR, RES | PTR, MELF |
| RC | REMOTE CONTROLLER |
| RES NF | RES, NON-FLAMMABLE |
| RESO | RESONATOR |
| SHLD | SHIELD |
| SOL | SOLENOID |
| SPKR | SPEAKER |
| SW, LVR | SWITCH, LEVER |
| SW, RTRY | SWITCH, ROTARY |
| SW, SL | SWITCH, SLIDE |
| TC CAP | CAP, CERA-SOL |
| THMS | THERMISTOR |
| TR | TRANSISTOR |
| TRIMER | CAP, TRIMMER |
| TUN-CAP | VARIABLE CAPACITOR |
| VIB, CER | RESONATOR, CERAMIC |
| VIB, XTAL | RESONATOR, CRYSTAL |
| VR | VOLUME |
| ZENER | DIODE, ZENER |

MECHANICAL SECTION

| DESCRIPTION | REFERENCE NAME |
|----------------|---------------------|
| ADHESHIVE | SHEET ADHESHIVE |
| AZ | AZIMUTH |
| BAR-ANT | BAR-ANTENNA |
| BAT | BATTERY |
| BATT | BATTERY |
| BRG | BEARING |
| BTN | BUTTON |
| CAB | CABINET |
| CASS | CASSETTE |
| CHAS | CHASSIS |
| CLR | COLLAR |
| CONT | CONTROL |
| CRSR | CURSOR |
| CU | CUSHION |
| CUSH | CUSHION |
| DIR | DIRECTION |
| DUBB | DUBBING |
| FL | FRONT LOADING |
| FLY-WHL | FLYWHEEL |
| FR | FRONT |
| FUN | FUNCTION |
| G-CU | G-CUSHION |
| HDL | HANDOL |
| HIMERON | CLOTH |
| HINGE, BAT | HINGE, BATTERY |
| HLDR | HOLDER |
| HT-SINK | HEAT SINK |
| IB | INSTRUCTION BOOKLET |
| IDLE | IDLER |
| IND, L-R | INDICATOR, L-R |
| KEY, CONT | KEY, CONTROL |
| KEY, PRGM | KEY, PROGRAM |
| KNOB, SL | KNOB, SLIDE |
| LBL | LABEL |
| LID, BATT | LID, BATTERY |
| LID, CASS | LID, CASSETTE |
| LVR | LEVER |
| P-SP | P-SPRING |
| PANEL, CONT | PANEL, CONTROL |
| PANEL, FR | PANEL, FRONT |
| PRGM | PROGRAM |
| PULLY, LOAD MO | PULLY, LOAD MOTOR |
| RBN | RIBBON |
| S- | SPECIAL |
| SEG | SEGMENT |
| SH | SHEET |
| SHLD-SH | SHIELD-SHEET |
| SL | SLIDE |
| SP | SPRING |
| SP-SCREW | SPECIAL-SCREW |
| SPACER, BAT | SPACER, BATTERY |
| SPR | SPRING |
| SPR-P | P-SPRING |
| SPR-PC-PUSH | P-SPRING, C-PUSH |
| T-SP | T-SPRING |
| TERM | TERMINAL |
| TRIG | TRIGGER |
| TUN | TUNING |
| VOL | VOLUME |
| W | WASHER |
| WHL | WHEEL |
| WORM-WHL | WORM-WHEEL |

| サービス技術ニュース | |
|------------|------|
| 番号 | 連絡内容 |
| G- | - |
| G- | - |
| G- | - |

アイワ株式会社
AIWA CO., LTD.

9301978, 750038

Tokyo Japan