


aiwa



NSX-A505 NSX-S505 NSX-S507

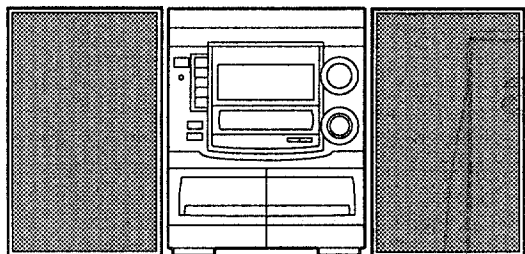

COMPACT DISC STEREO
CASSETTE RECEIVER

- BASIC TAPE MECHANISM : 2ZM-3MK2 PR4NM, 6ZM-3 PR2NM
- TYPE : 505(U,LH), 507LH
- BASIC CD MECHANISM : 4ZG-1 Z3DSHNM

REVISION PUBLISHING

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-A505	CX-NA505 (TYPE : U)	SX-NA502	RC - 7AS06
NSX-S505	CX-NS505 (TYPE : LH)	SX-NS503	
NSX-S507	CX-NS507 (TYPE : LH)	SX-FNS705	

• If requiring information about the CD mechanism, see Service Manual of 4ZG-1, S/M Code No. 09-983-249-30T.

• This Service Manual is the "Revision Publishing" and replaces "Simple Manual", S/M Code No. 09-983-256-5FE.

TABLE OF CONTENTS

SPECIFICATIONS	3
NOTE ON BEFORE STARTING REPAIR	4, 5
PROTECTION OF EYES FROM LASER BEAM DURING SERVICING	6
PRECAUTION TO REPLACE OPTICAL BLOCK	6
ELECTRICAL MAIN PARTS LIST	7 ~ 10
TRANSISTOR ILLUSTRATION	11
FL GRID ASSIGNMENT & ANODE CONNECTION	12, 13
IC BLOCK DIAGRAM - 1	14
BLOCK DIAGRAM (MAIN / FRONT)	15, 16
WIRING - 1 (MAIN)	17, 18
SCHEMATIC DIAGRAM - 1 (MAIN 1/2)	19 ~ 21
SCHEMATIC DIAGRAM - 2 (FRONT)	22 ~ 24
WIRING - 2 (FRONT)	25, 26
WIRING - 3 (AC1 / AC2)	27
SCHEMATIC DIAGRAM - 3 (TUNER FRONT END)	28
SCHEMATIC DIAGRAM - 4 (MAIN 2/2)	29, 30
WIRING - 4 (DECK : 6ZM-3 PR2NM)	31
WIRING - 5 (DECK : 2ZM-3MK2 PR4NM)	32
IC BLOCK DIAGRAM - 2	33 ~ 36
PRACTICAL SERVICE FIGURE	36
IC DESCRIPTION	37, 38
ADJUSTMENT <TUNER / DECK>	39, 40
MECHANICAL EXPLODED VIEW 1 / 1	41, 42
MECHANICAL PARTS LIST 1 / 1	43
TAPE MECHANISM EXPLODED VIEW 1 / 1 <6ZM-3 PR2NM>	44, 45
TAPE MECHANISM PARTS LIST 1 / 1 <6ZM-3 PR2NM>	46
SPRING APPLICATION POSITION <6ZM-3 PR2NM>	47
TAPE MECHANISM EXPLODED VIEW 1 / 1 <2ZM-3MK2 PR4NM>	48, 49
TAPE MECHANISM PARTS LIST 1 / 1 <2ZM-3MK2 PR4NM>	50
SPRING APPLICATION POSITION <2ZM-3MK2 PR4NM>	51
SPEAKER DISASSEMBLY INSTRUCTIONS	52
SPEAKER PARTS LIST	53
ACCESSORIES / PACKAGE LIST	53
REFERENCE NAME LIST	54

SPECIFICATIONS

<FM Tuner section>		<Speaker system SX-NS503 (For NSX-S505)>
Tuning range	87.5 MHz to 108 MHz	Cabinet type
Usable sensitivity(IHF)	13.2 dBf	3 way, bass reflex (magnetic shielded type)
Antenna terminals	75 ohms (unbalanced)	Speakers
<MW Tuner section>		Woofer :
Tuning range	531 kHz to 1602 kHz (9 kHz step) 530 kHz to 1710 kHz (10 kHz step)	160 mm cone type
Usable sensitivity	350 uV/m	Tweeter :
Antenna	Loop antenna	60 mm cone type
<Amplifier section>		Super tweeter:
Power output	U : 50 W + 50 W (50 Hz - 20 kHz, T.H.D.less than 1%, 6 ohms) LH : 100 W + 100 W (6 ohms,T.H.D. 10%,1 kHz)	20 mm ceramic type
Total harmonic distortion	U : 0.05% (40 W, 1 kHz, 6 ohms, DIN AUDIO) LH : 0.05% (70 W, 1 kHz, 6 ohms, DIN AUDIO)	Impedance
Inputs	U : VIDEO/AUX : 150 mV(adjustable) MD : 150mV (adjustable) MIC: 1.8mV (10 kohms) LH : VIDEO/AUX : 210 mV(adjustable) MD : 210mV (adjustable) MIC1, MIC2 : 2.4mV (10 kohms)	6 ohms
Outputs	LINE OUT: 200mV U : SUPER WOOFER: 1.78 V LH : SUPER WOOFER: 2.25 V SPEAKERS: accept speakers of 6 ohms or more SURROUND SPEAKERS: accept speakers of 8 ohms to 16 ohms PHONES (stereo jack) : accepts headphones of 32 ohms or more	Output sound pressure level
<Cassette deck section>		87 dB/W/m
Track format	4 tracks, 2 channels stereo	Dimensions (W x H x D)
Frequency response	U : 50 Hz - 15000 Hz LH : CrO ₂ tape : 50 Hz - 16000 Hz Normal tape : 50 Hz - 15000 Hz	240 x 324 x 255mm
Recording system	AC bias	Weight
Heads	Deck 1 : playback head x 1 Deck 2 : Recording/Playback head x 1/ erase head x 1	4.9 kg
<Compact disc player section>		<Speaker system SX-FNS705 (For NSX-S507)>
Laser	Semiconductor laser ($\lambda = 780$ nm)	Cabinet type
D-A converter	1 bit dual	4 way, bass reflex (magnetic shielded type)
Signal-to-noise ratio	85 dB (1 kHz, 0 dB)	Speakers
Harmonic distortion	0.05 % (1 kHz, 0 dB)	Woofer :
Wow and flutter	Unmeasurable	160 mm cone type
<Speaker system SX-NA502 (For NSX-A505)>		Tweeter :
Cabinet type	3 way, bass reflex (magnetic shielded type)	80 mm ceramic type
Speakers	Woofer :	Super tweeter:
	140 mm (5 ⁵ / ₈ in.) cone type	20 mm ceramic type
	Tweeter :	Surround speaker:
	60 mm (2 ³ / ₈ in.) cone type	80 mm cone type
	Super tweeter:	Front speaker : 6 ohms
	10 mm (1 ³ / ₃₂ in.) ceramic type	Surround speaker : 8 ohms
Impedance	6 ohms	Impedance
Output sound pressure level	87 dB/W/m	6 ohms
Dimensions (W x H x D)	235 x 324 x 250mm (9 ³ / ₈ X 12 ⁷ / ₈ X 9 ⁷ / ₈ in.)	Output sound pressure level
Weight	3.3 kg (7 lbs 4 oz.)	87 dB/W/m
		Dimensions (W x H x D)
		250 x 324 x 255mm
		Weight
		3.7 kg
		<General>
		Power requirements
		U : 120 VAC, 60 Hz LH : 120 V/220-230 V/240 V AC switchable, 50/60 Hz
		Power consumption
		U : 90 W LH : 155 W
		Dimensions of main unit
		260 x 329.1 x 344.5 mm (10 ¹ / ₄ X 13 X 13 ⁵ / ₈ in.)
		Weight
		U : 6.4 kg (14 lbs 2 oz.) LH : 7.3 kg
		• Design and specifications are subject to change without notice.
		• The word "BBE"and the "BBE symbol" are trademarks of BBE Sound, Inc.
		Under license from BBE Sound,Inc.

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, the secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connector the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased 1 V or less using a multimeter or an oscilloscope.

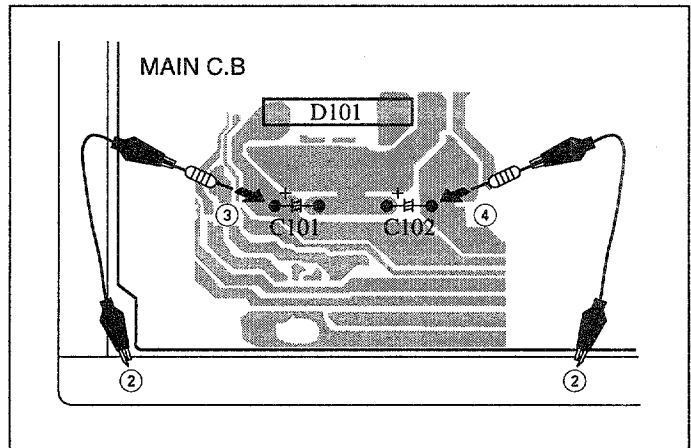


Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitor on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is "H", the MICROCOMPUTER is judged to be operating correctly. When this terminal is "L", the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go "L" when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to "L".

- Good or no good judgment of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the "H" level or not.
- ③ When the HOLD terminal is "L" level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

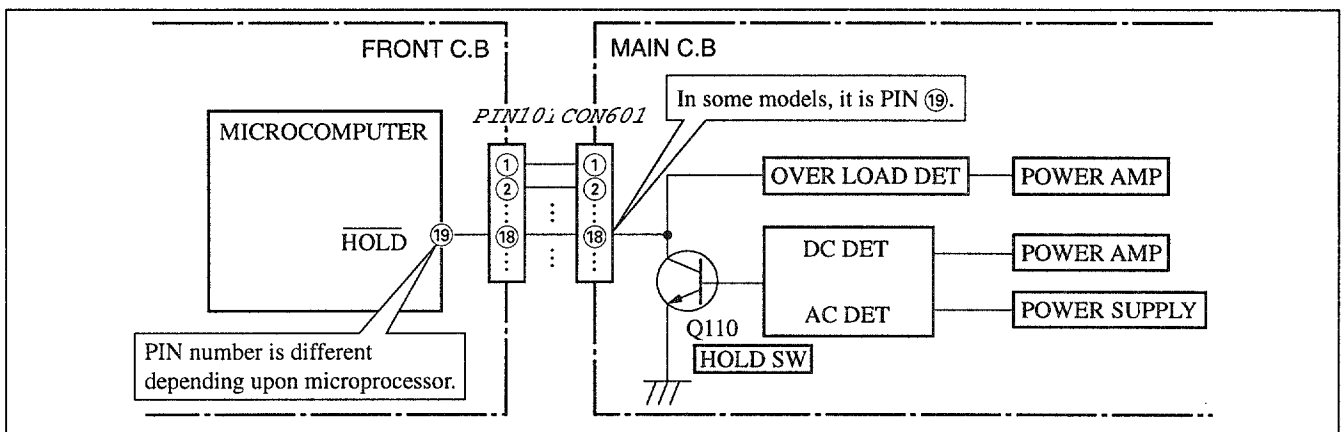


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgment as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

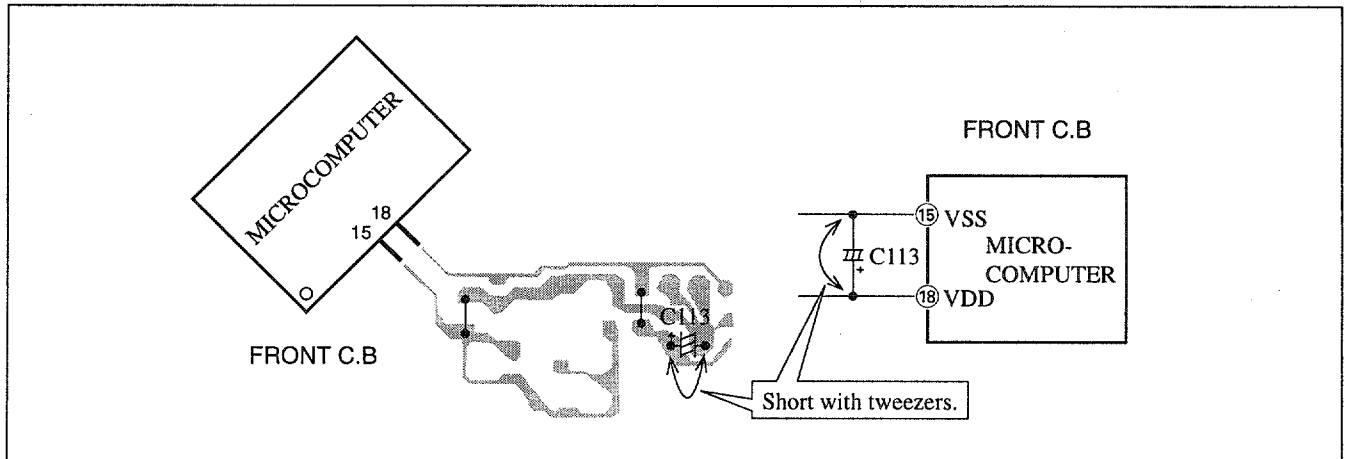


Fig-2-2

- ② Short the both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER


Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

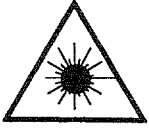

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

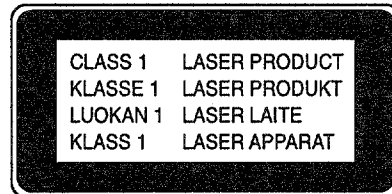

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käytt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

WARNING!


Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

Precaution to replace Optical block

(KSS – 213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

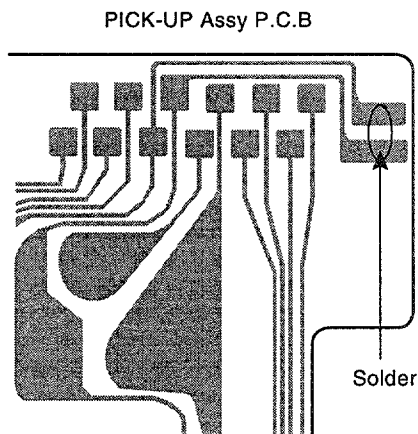

ELECTRICAL MAIN PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				MAIN C.B			
	88-NF7-690-010	C-IC, LC866560W-5G73		C103	87-016-658-090		CAP, E 4700-35 SMG<LH>
	87-070-083-010	IC, GP1U281X		C104	87-016-658-090		CAP, E 4700-35 SMG<LH>
	87-070-121-010	IC, HA12185NT<U>		C105	87-012-368-080		C-CAP, S 0.1-50 F
	87-A20-783-040	C-IC, BA7762AFS<LH>		C106	87-012-368-080		C-CAP, S 0.1-50 F
	87-A20-083-010	IC, BA3835S		C107	87-012-368-080		C-CAP, S 0.1-50 F
	87-A20-804-040	C-IC, NJM2152M		C108	87-012-368-080		C-CAP, S 0.1-50 F
	87-017-915-080	IC, BU4094BCF		C109	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A20-613-040	C-IC, BU9262AFS<LH>		C110	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A20-805-040	C-IC, M62445FP<U>		C111	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A20-954-040	C-IC, M62445FP-601<LH>		C112	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-017-888-080	IC, NJM4558MD		C113	87-010-247-080		CAP, ELECT 100-50V
	86-NFZ-655-010	IC, LC72131D(Z)		C116	87-010-247-080		CAP, ELECT 100-50V
	87-A20-438-010	IC, LA1837		C117	87-010-430-080		CAP, ELECT 100-63
	87-020-454-010	IC, DN6851		C118	87-010-263-080		CAP, ELECT 100-10V
				C119	87-010-260-080		CAP, ELECT 47-25V
TRANSISTOR				C120	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-087-080	C-FET, 2SK2158		C121	87-012-140-080		CAP 470P
	89-213-702-010	TR, 2SB1370 (1.8W)		C122	87-010-263-080		CAP, ELECT 100-10V<U>
	87-026-263-080	C-TR, RN1410		C123	87-010-247-080		CAP, ELECT 100-50V
	87-A30-071-080	C-TR, RT1N 144C		C124	87-010-112-080		CAP, ELECT 100-16V
	87-026-610-080	TR, KTC3198GR		C125	87-010-235-080		CAP, E 470-16 SME
	87-A30-076-080	C-TR, 2SC3052F		C151	87-010-917-090		CAP, E 3300-50 M SMG<U>
	87-A30-196-080	TR, 2SC4115SRS		C151	87-016-520-090		CAP, E 3300-65<LH>
	87-A30-075-080	C-TR, 2SA1235F		C152	87-010-917-090		CAP, E 3300-50 M SMG<U>
	87-026-609-080	TR, KTA1266GR		C152	87-016-520-090		CAP, E 3300-65<LH>
	87-A30-107-070	C-TR, CMBT5401		C153	87-010-928-090		CAP, E 4700-25 SMG<U>
	87-A30-190-080	TR, CC5551		C154	87-010-928-090		CAP, E 4700-25 SMG<U>
	87-A30-137-010	TR, 2SD2494<U>		C209	87-010-404-080		CAP, ELECT 4.7-50V
	87-A30-097-010	TR, FN 1016<LH>		C210	87-010-404-080		CAP, ELECT 4.7-50V
	87-A30-138-010	TR, 2SB1625<U>		C211	87-010-180-080		C-CER 1500P<LH>
	87-A30-098-010	TR, FP 1016<LH>		C211	87-010-181-080		CAP, CHIP S 1800P<U>
	87-A30-106-070	C-TR, CMBT5551		C212	87-010-180-080		C-CER 1500P<LH>
	87-A30-186-010	FET, 2SK3053		C212	87-010-181-080		CAP, CHIP S 1800P<U>
	87-A30-072-080	C-TR, RT1P 144C		C213	87-010-186-080		CAP, CHIP 4700P
	87-A30-074-080	C-TR, RT1P 141C		C214	87-010-186-080		CAP, CHIP 4700P
	87-026-232-080	C-TR, DTA 144WK		C215	87-010-404-080		CAP, ELECT 4.7-50V
	87-A30-073-080	C-TR, RT1N 141C		C216	87-010-404-080		CAP, ELECT 4.7-50V
	87-A30-105-080	C-TR, RT1P 441C		C217	87-010-260-080		CAP, ELECT 47-25V
	87-026-238-080	TR, DFC144WK<U>		C218	87-010-260-080		CAP, ELECT 47-25V
	87-026-580-080	C-TR, DTA123JK		C229	87-A10-812-080		C-CAP, S 220P-200 J CH
	87-A30-086-070	C-TR, CSD1306E		C230	87-A10-812-080		C-CAP, S 220P-200 J CH
	89-112-965-080	TR, 2SA1296 (0.75W)		C233	87-010-544-080		CAP, ELECT 0.1-50V
	87-A30-085-070	C-TR, CSA1362GR		C234	87-010-544-080		CAP, ELECT 0.1-50V
	89-327-143-080	TR, 2SC2714 (0.1W)		C235	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-026-463-080	TR, 2SA933SRS		C237	87-012-368-080		C-CAP, S 0.1-50 F
				C238	87-012-368-080		C-CAP, S 0.1-50 F
				C239	87-012-368-080		C-CAP, S 0.1-50 F
				C240	87-012-368-080		C-CAP, S 0.1-50 F
				C247	87-010-168-080		CAP, CHIP 150P
				C248	87-010-168-080		CAP, CHIP 150P
	87-A40-470-080	DIODE, 1SS254		C280	87-010-182-080		C-CAP, S 2200P-50 B
	87-002-225-010	DIODE, DBF40C-K10<U>		C298	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A40-115-060	DIODE, RS603M<LH>		C301	87-010-318-080		C-CAP, S 47P-50 CH
	87-A40-269-080	C-DIODE, MC2836		C302	87-010-318-080		C-CAP, S 47P-50 CH
	87-A40-509-080	ZENER, MTZJ6.8C		C303	87-012-157-080		C-CAP, S 330P-50 CH
	87-A40-270-080	C-DIODE, MC2838		C304	87-012-157-080		C-CAP, S 330P-50 CH
	87-070-274-080	DIODE, 1N4003 SEM		C305	87-012-145-080		CAP, CHIP S 270P CH
	87-A40-341-080	ZENER, MTZJ 36 A		C306	87-012-145-080		CAP, CHIP S 270P CH
	87-A40-308-080	ZENER, DZ10M		C307	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A40-004-080	ZENER, MTZJ16A		C309	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A40-488-080	DIODE, 1SS244		C310	87-010-196-080		CHIP CAPACITOR, 0.1-25
	87-A40-299-080	ZENER, DZ5.1M		C311	87-010-198-080		CAP, CHIP 0.022
	87-A40-345-080	ZENER, MTZJ10C		C312	87-010-198-080		CAP, CHIP 0.022
	87-A40-184-090	DIODE, RF34		C313	87-010-180-080		CAP, CHIP S B1500P<U>
	87-A40-302-080	ZENER, DZ5.6M<LH>		C313	87-010-178-080		CHIP CAP 1000P<LH>
	87-A40-002-080	ZENER, MTZJ5.1C		C314	87-010-180-080		CAP, CHIP S B1500P<U>
	87-A40-438-080	ZENER, MTZJ4.7A		C314	87-010-178-080		CHIP CAP 1000P<LH>
	87-A40-234-080	ZENER, MTZJ5.6A		C315	87-010-182-080		C-CAP, S 2200P-50 KB C2012<U>


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C315	87-010-178-080		CHIP CAP 1000P<LH>	C632	87-010-263-080		CAP, ELECT 100-10V
C316	87-010-182-080		C-CAP,S 2200P-50 KB C2012<U>	C633	87-010-263-080		CAP, ELECT 100-10V
C316	87-010-178-080		CHIP CAP 1000P<LH>	C634	87-010-196-080		CHIP CAPACITOR,0.1-25
C321	87-016-492-080		C-CAP,S 0.33-16 FZ	C635	87-010-196-080		CHIP CAPACITOR,0.1-25
C322	87-016-492-080		C-CAP,S 0.33-16 FZ	C636	87-010-194-080		CAP, CHIP 0.047
C324	87-010-260-080		CAP, ELECT 47-25V	C637	87-010-183-080		C-CAP,S 2700P-50 B
C325	87-010-370-080		CAP,E 330-6.3 SME	C641	87-010-196-080		CHIP CAPACITOR,0.1-25
C327	87-010-404-080		CAP, ELECT 4.7-50V	C667	87-010-196-080		CHIP CAPACITOR,0.1-25
C328	87-010-404-080		CAP, ELECT 4.7-50V	C701	87-010-381-080		CAP, ELECT 330-16V
C332	87-010-196-080		CHIP CAPACITOR,0.1-25	C702	87-010-404-080		CAP, ELECT 4.7-50V
C335	87-010-401-080		CAP, ELECT 1-50V	C703	87-010-197-080		CAP, CHIP 0.01 DM
C336	87-010-401-080		CAP, ELECT 1-50V	C704	87-010-197-080		CAP, CHIP 0.01 DM
C337	87-010-196-080		CHIP CAPACITOR,0.1-25	C709	87-010-322-080		C-CAP,S 100P-50 CH
C339	87-010-196-080		CHIP CAPACITOR,0.1-25	C711	87-010-263-080		CAP, ELECT 100-10V
C340	87-010-196-080		CHIP CAPACITOR,0.1-25	C712	87-010-196-080		CHIP CAPACITOR,0.1-25
C351	87-012-140-080		CAP 470P	C713	87-010-197-080		CAP, CHIP 0.01 DM
C352	87-012-140-080		CAP 470P	C714	87-010-197-080		CAP, CHIP 0.01 DM
C354	87-010-175-080		CAP 560P	C721	87-010-312-080		C-CAP,S 15P-50 CH
C355	87-012-349-080		C-CAP,S 1000P-50 CH	C722	87-010-312-080		C-CAP,S 15P-50 CH
C356	87-010-260-080		CAP, ELECT 47-25V	C723	87-010-178-080		CHIP CAP 1000P
C357	87-010-197-080		CAP, CHIP 0.01 DM	C725	87-010-178-080		CHIP CAP 1000P
C358	87-010-183-080		C-CAP,S 2700P-50 B	C727	87-010-196-080		CHIP CAPACITOR,0.1-25
C359	87-010-183-080		C-CAP,S 2700P-50 B	C728	87-010-248-080		CAP, ELECT 220-10V
C360	87-010-183-080		C-CAP,S 2700P-50 B	C755	87-010-197-080		CAP, CHIP 0.01 DM
C370	87-010-196-080		CHIP CAPACITOR,0.1-25	C756	87-010-197-080		CAP, CHIP 0.01 DM
C373	87-016-083-080		C-CAP,S 0.15-16 RK	C757	87-010-318-080		C-CAP,S 47P-50 CH
C374	87-016-083-080		C-CAP,S 0.15-16 RK	C758	87-010-149-080		C-CAP,S 5P-50 CH
C378	87-010-196-080		CHIP CAPACITOR,0.1-25	C759	87-012-156-080		C-CAP,S 220P-50 CH
C379	87-010-382-080		CAP, ELECT 22-25V	C760	87-012-156-080		C-CAP,S 220P-50 CH
C380	87-010-382-080		CAP, ELECT 22-25V	C761	87-010-196-080		CHIP CAPACITOR,0.1-25
C381	87-010-197-080		CAP, CHIP 0.01 DM	C762	87-010-197-080		CAP, CHIP 0.01 DM
C382	87-010-312-080		C-CAP,S 15P-50 CH	C763	87-010-194-080		CAP, CHIP 0.047
C383	87-010-197-080		CAP, CHIP 0.01 DM	C764	87-010-319-080		C-CAP,S 56P-50 CH
C384	87-010-402-080		CAP, ELECT 2.2-50V	C765	87-010-197-080		CAP, CHIP 0.01 DM
C386	87-010-196-080		CHIP CAPACITOR,0.1-25	C766	87-010-197-080		CAP, CHIP 0.01 DM
C387	87-012-145-080		CAP, CHIP S 270P CH	C767	87-010-405-080		CAP, ELECT 10-50V
C391	87-010-319-080		C-CAP,S 56P-50 CH	C768	87-010-197-080		CAP, CHIP 0.01 DM
C392	87-010-319-080		C-CAP,S 56P-50 CH	C769	87-010-408-080		CAP, ELECT 47-50V
C393	87-010-319-080		C-CAP,S 56P-50 CH	C770	87-015-821-080		C-CAP 0.047
C394	87-010-319-080		C-CAP,S 56P-50 CH	C771	87-010-407-080		CAP, ELECT 33-50V
C401	87-010-405-080		CAP, ELECT 10-50V	C772	87-010-194-080		CAP, CHIP 0.047
C402	87-010-405-080		CAP, ELECT 10-50V	C773	87-010-196-080		CHIP CAPACITOR,0.1-25
C403	87-010-182-080		C-CAP,S 2200P-50 B	C774	87-010-263-080		CAP, ELECT 100-10V
C404	87-010-182-080		C-CAP,S 2200P-50 B	C775	87-010-404-080		CAP, ELECT 4.7-50V
C405	87-010-193-080		CHIP CAPACITOR,0.033	C776	87-010-197-080		CAP, CHIP 0.01 DM
C406	87-010-193-080		CHIP CAPACITOR,0.033	C777	87-010-400-080		CAP, ELECT 0.47-50V
C407	87-010-405-080		CAP, ELECT 10-50V	C778	87-010-401-080		CAP, ELECT 1-50V
C408	87-010-405-080		CAP, ELECT 10-50V	C779	87-010-401-080		CAP, ELECT 1-50V
C409	87-010-380-080		CAP, ELECT 47-16V	C780	87-010-196-080		CHIP CAPACITOR,0.1-25
C410	87-010-380-080		CAP, ELECT 47-16V	C781	87-010-405-080		CAP, ELECT 10-50V
C411	87-010-405-080		CAP, ELECT 10-50V	C782	87-010-405-080		CAP, ELECT 10-50V
C412	87-010-112-080		CAP, ELECT 100-16V	C783	87-015-819-080		CAPACITOR,0.01
C415	87-010-187-080		CAP CHIP S5600P	C784	87-010-197-080		CAP, CHIP 0.01 DM
C416	87-010-187-080		CAP CHIP S5600P	C785	87-010-403-080		CAP, ELECT 3.3-50V
C457	87-010-400-080		CAP, ELECT 0.47-50V	C786	87-010-403-080		CAP, ELECT 3.3-50V
C458	87-010-400-080		CAP, ELECT 0.47-50V	C789	87-010-179-080		CAP,CHIP S B1200P
C516	87-010-196-080		CHIP CAPACITOR,0.1-25	C790	87-010-179-080		CAP,CHIP S B1200P
C601	87-010-180-080		C-CER 1500P	C791	87-010-405-080		CAP, ELECT 10-50V
C602	87-010-180-080		C-CER 1500P	C793	87-010-177-080		C-CAP,S 820P-50 SL
C613	87-016-081-080		C-CAP,S 0.1-16 RK	C794	87-010-406-080		CAP, ELECT 22-50
C614	87-016-081-080		C-CAP,S 0.1-16 RK	C795	87-010-596-080		CAP, S 0.047-16
C619	87-010-185-080		C-CAP,S 3900P-50 B	C796	87-010-403-080		CAP, ELECT 3.3-50V
C620	87-010-185-080		C-CAP,S 3900P-50 B	C797	87-010-181-080		CAP,CHIP S 1800P
C621	87-010-401-080		CAP, ELECT 1-50V	C798	87-010-181-080		CAP,CHIP S 1800P
C622	87-010-401-080		CAP, ELECT 1-50V	C799	87-010-194-080		CAP, CHIP 0.047
C625	87-010-405-080		CAP, ELECT 10-50V	C812	87-010-197-080		CAP, CHIP 0.01 DM
C626	87-010-405-080		CAP, ELECT 10-50V	C814	87-010-197-080		CAP, CHIP 0.01 DM
C629	87-010-405-080		CAP, ELECT 10-50V	C820	87-010-408-080		CAP, ELECT 47-50V
C630	87-010-213-080		CAP, CHIP 0.015-25 KB GRM	C821	87-010-197-080		CAP, CHIP 0.01 DM
C631	87-010-992-080		CHIP-CAP,S 0.047-25B	C822	87-010-197-080		CAP, CHIP 0.01 DM

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C823	87-010-197-080		CAP, CHIP 0.01 DM	C202	87-010-194-080		CAP, CHIP 0.047
C828	87-010-196-080		CHIP CAPACITOR,0.1-25	C203	87-A10-797-040		CAP,E 47-35 M 5L SRM
C829	87-010-196-080		CHIP CAPACITOR,0.1-25	C204	87-010-497-040		CAP,E 4.7-35 GAS
C959	87-010-196-080		CHIP CAPACITOR,0.1-25	C205	87-010-497-040		CAP,E 4.7-35 GAS
C960	87-010-196-080		CHIP CAPACITOR,0.1-25	C206	87-012-157-080		C-CAP,S 330P-50 CH
C961	87-010-152-080		C-CAP,S 8P-50 CH	C207	87-012-157-080		C-CAP,S 330P-50 CH
CF801	87-008-261-010		FILTER, SFE10.7MA5-A	C208	87-012-157-080		C-CAP,S 330P-50 CH
CF802	87-008-261-010		FILTER, SFE10.7MA5-A	C209	87-012-157-080		C-CAP,S 330P-50 CH
CON351	86-ZM3-605-010		CONN ASSY,8P-RPB<U>	C210	87-012-157-080		C-CAP,S 330P-50 CH
FC602	88-906-241-110		FF-CABLE,6P 1.25	C211	87-012-157-080		C-CAP,S 330P-50 CH
FF801	A8-8ZA-190-030		8ZA-1 FEUNM	C212	87-012-157-080		C-CAP,S 330P-50 CH
J201	87-A60-488-010		JACK,DIAG.3 BLK ST W/SW KM16AT	C213	87-012-157-080		C-CAP,S 330P-50 CH
J202	87-A60-547-010		JACK,PIN 4P R/W/B	C214	87-012-157-080		C-CAP,S 330P-50 CH
J203	87-033-240-010		TERMINAL,SP 4P32SV1-05	C215	87-012-157-080		C-CAP,S 330P-50 CH
J601	87-A60-402-010		JACK,PIN 6P R/W HSP-246V30	C216	87-012-157-080		C-CAP,S 330P-50 CH
J801	87-A60-202-010		TERMINAL,ANT 4P MSP-154V-02	C217	87-012-157-080		C-CAP,S 330P-50 CH
L201	87-003-383-010		COIL,1UH-S	C218	87-012-157-080		C-CAP,S 330P-50 CH
L202	87-003-383-010		COIL,1UH-S	C371	87-010-196-080		CHIP CAPACITOR,0.1-25
L301	87-A50-049-010		COIL,TRAP 85K(COI)	C372	87-010-196-080		CHIP CAPACITOR,0.1-25
L302	87-A50-049-010		COIL,TRAP 85K(COI)	C373	87-010-196-080		CHIP CAPACITOR,0.1-25
L351	87-007-342-010		COIL,OSC 85K BIAS	C375	87-010-196-080		CHIP CAPACITOR,0.1-25
L771	87-A50-266-010		COIL,FM DET-2N(TOK)	C376	87-010-173-080		C-CAP,S 390P-50 SL
L772	87-A90-733-010		FLTR,PCFAZH-450 (TOK)	C377	87-010-196-080		CHIP CAPACITOR,0.1-25
L781	87-005-847-080		COIL,2.2UH(CECS)	C378	87-010-196-080		CHIP CAPACITOR,0.1-25
L832	86-NFZ-694-080		COIL,2.2UH K CECS	C402	87-010-196-080		CHIP CAPACITOR,0.1-25
L981	87-NF4-650-010		COIL,AM PACK 4N(TOK)	C404	87-010-196-080		CHIP CAPACITOR,0.1-25
R123	87-022-200-080		RESISTOR, METAL 0.56 1W<U>	C406	87-010-196-080		CHIP CAPACITOR,0.1-25
R237	87-A00-257-080		RES,M/F 0.15-1W J<U>	C408	87-010-196-080		CHIP CAPACITOR,0.1-25
R237	87-A00-262-080		RES,M/F 0.15-2W J<LH>	C501	87-010-319-080		C-CAP,S 56P-50 CH<LH>
R238	87-A00-257-080		RES,M/F 0.15-1W J<U>	C502	87-010-319-080		C-CAP,S 56P-50 CH<LH>
R238	87-A00-262-080		RES,M/F 0.15-2W J<LH>	C503	87-012-393-080		C-CAP,S 0.22-16 R K<LH>
R239	87-A00-257-080		RES,M/F 0.15-1W J<U>	C504	87-010-197-080		CAP, CHIP 0.01 DM<LH>
R239	87-A00-262-080		RES,M/F 0.15-2W J<LH>	C505	87-010-180-080		C-CER 1500P<LH>
R240	87-A00-257-080		RES,M/F 0.15-1W J<U>	C506	87-010-213-080		C-CAP,S 0.015-50 B<LH>
R240	87-A00-262-080		RES,M/F 0.15-2W J<LH>	C507	87-010-213-080		C-CAP,S 0.015-50 B<LH>
RY101	87-A90-464-010		RELAY, DG12D2-0(M)	C508	87-010-197-080		CAP, CHIP 0.01 DM<LH>
RY201	87-A90-713-010		RELAY, 12V DQ12D1	C509	87-010-181-080		CAP,CHIP S 1800P<LH>
SFR351	87-A90-433-080		SFR,50K H NVZ6TLTA	C510	87-010-196-080		CHIP CAPACITOR,0.1-25<LH>
SFR352	87-A90-433-080		SFR,50K H NVZ6TLTA	C511	87-018-209-080		CAP, CER 0.1-50V<LH>
W104	85-NF5-628-010		F-CABLE 7P-2.5	C512	87-010-374-040		CAP,E 47-10<LH>
X721	87-A70-061-010		VIB,XTAL 4.500MHZ CSA-309	C513	87-010-401-040		CAP,E 1-50 SME<LH>
				C514	87-010-401-040		CAP,E 1-50 SME<LH>
				C515	87-010-183-080		C-CAP,S 2700P-50 B<LH>
				C516	87-010-183-080		C-CAP,S 2700P-50 B<LH>
				C518	87-010-196-080		CHIP CAPACITOR,0.1-25<LH>
FRONT C.B				C519	87-010-263-040		CAP,E 100-10<LH>
C101	87-010-550-040		CAP,E 100-6.3 GAS	C523	87-012-141-080		CHIP-CAPACITOR,0.22-16F<LH>
C102	87-010-196-080		CHIP CAPACITOR,0.1-25	C601	87-010-391-040		CAP,E 10-35 SME
C103	87-010-196-080		CHIP CAPACITOR,0.1-25	C602	87-010-186-080		CAP,CHIP 4700P<LH>
C104	87-010-494-040		CAP,E 1-50 GAS	C603	87-010-498-040		CAP,E 10-16 GAS<LH>
C105	87-010-178-080		CHIP CAP 1000P	C604	87-010-382-040		CAP,E 22-25 SME<LH>
C106	87-A10-189-040		CAP,E 220-10	C605	87-010-196-080		CHIP CAPACITOR,0.1-25
C107	87-010-197-080		CAP, CHIP 0.01 DM	C606	87-010-322-080		C-CAP,S 100P-50 CH
C108	87-010-196-080		CHIP CAPACITOR,0.1-25	C607	87-010-321-080		CHIP CAPACITOR,82P(J)
C109	87-018-208-080		CAP 0.047-50F	C608	87-016-492-080		C-CAP,S 0.33-16 FZ<U>
C110	87-012-157-080		C-CAP,S 330P-50 CH	C608	87-010-196-080		CHIP CAPACITOR,0.1-25<LH>
C111	87-010-320-080		CHIP CAP 68P	C609	87-010-545-040		CAP,E 0.22-50 SME
C112	87-010-312-080		C-CAP,S 15P-50 CH	C611	87-010-177-080		C-CAP,S 820P-50 SL
C113	87-010-316-080		C-CAP,S 33P-50 CH	C614	87-A10-189-040		CAP,E 220-10
C114	87-010-182-080		C-CAP,S 2200P-50 B	C651	87-010-401-040		CAP,E 1-50 SME
C115	87-010-182-080		C-CAP,S 2200P-50 B	C652	87-010-196-080		CHIP CAPACITOR,0.1-25
C116	87-010-498-040		CAP,E 10-16 GAS	C653	87-010-196-080		CHIP CAPACITOR,0.1-25
C117	87-012-157-080		C-CAP,S 330P-50 CH	FB601	87-008-372-080		FILTER, EMI BL OIRNI
C118	87-010-196-080		CHIP CAPACITOR,0.1-25	FC501	85-NF5-615-010		CABLE,FFC 15P-1.25<LH>
C119	87-010-196-080		CHIP CAPACITOR,0.1-25	FC501	88-911-201-110		FF-CABLE,11P 1.25<U>
C120	87-010-196-080		CHIP CAPACITOR,0.1-25	FC801	85-NF5-618-010		CABLE,FFC 13P-1.25
C121	87-010-194-080		CAP, CHIP 0.047	FL201	88-NF7-651-010		FL,BJ602GK
C122	87-010-194-080		CAP, CHIP 0.047	J601	87-A60-284-010		JACK,3.5MO (MSC)
C124	87-010-263-040		CAP,E 100-10	J602	87-A60-284-010		JACK,3.5MO (MSC)<LH>
C125	87-010-196-080		CHIP CAPACITOR,0.1-25	L501	87-005-448-080		COIL 220UH,K<LH>
C201	87-010-178-080		CHIP CAP 1000P				


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
LED401	87-070-197-080		LED,SLP7118C-51-S-T1	SW C.B			
LED403	87-070-197-080		LED,SLP7118C-51-S-T1				
LED405	87-070-197-080		LED,SLP7118C-51-S-T1	S351	87-A90-095-080		SW,TACT EVQ11G04M
LED407	87-070-197-080		LED,SLP7118C-51-S-T1	S352	87-A90-095-080		SW,TACT EVQ11G04M
LED409	87-070-197-080		LED,SLP7118C-51-S-T1	S353	87-A90-095-080		SW,TACT EVQ11G04M
				S354	87-A90-095-080		SW,TACT EVQ11G04M
				S355	87-A90-095-080		SW,TACT EVQ11G04M
LED411	87-070-201-080		LED,SLP9118C-51-S-T1	AC1 C.B			
LED412	87-070-201-080		LED,SLP9118C-51-S-T1				
LED413	87-070-201-080		LED,SLP9118C-51-S-T1				
LED414	87-070-201-080		LED,SLP9118C-51-S-T1				
LED415	87-070-201-080		LED,SLP9118C-51-S-T1				
LED417	87-070-281-080		LED,SLZ736A-25-S-T1	△ FC1	87-033-147-010		FUSE CLAMP,MT-20<LH>
LED419	87-070-281-080		LED,SLZ736A-25-S-T1	△ F101	87-035-369-010		FUSE,5A 250V TE<LH>
LED421	87-070-281-080		LED,SLZ736A-25-S-T1	△ F101	87-035-416-010		FUSE,T3A 250V UL<U>
LED423	87-070-281-080		LED,SLZ736A-25-S-T1	△ FC2	87-033-147-010		FUSE CLAMP,MT-20<LH>
LED425	87-070-281-080		LED,SLZ736A-25-S-T1	△ FC101	87-A90-505-080		FUSE CLAMP,TP00351-51<U>
LED427	87-070-281-080		LED,SLZ736A-25-S-T1	△ FC102	87-A90-505-080		FUSE CLAMP,TP00351-51<U>
LED428	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ PT101	88-NF7-663-010		PT,8NF-7 LH<LH>
LED429	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ PT101	88-NF7-661-010		PT,8NF-7 U<U>
LED430	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ SW1	87-A90-165-010		SW,SL 1-2-3 SWS2301<LH>
LED431	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ T1	87-A60-317-010		TERMINAL, 1P MSC<LH>
LED432	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ T101	87-A60-317-010		TERMINAL, 1P MSC<U>
LED433	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ T102	87-A60-317-010		TERMINAL, 1P MSC<U>
LED434	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ T2	87-A60-317-010		TERMINAL, 1P MSC<LH>
LED435	87-A40-380-080		LED,SEL6510C-TP5 GRN	AC2 C.B			
LED436	87-A40-380-080		LED,SEL6510C-TP5 GRN				
LED437	87-A40-380-080		LED,SEL6510C-TP5 GRN	△ PR101	87-026-691-080		FUSE,10A 125V 251<U>
LED444	87-070-278-010		LED,SLZ-738A-24-S	△ PR101	87-026-682-080		PROTECTOR,10A 60V491<LH>
LED445	87-070-290-010		LED,SLZ 936-30-S	△ PR102	87-026-691-080		FUSE,10A 125V 251<U>
LED446	87-070-278-010		LED,SLZ-738A-24-S	△ PR102	87-026-682-080		PROTECTOR,10A 60V491<LH>
LED447	87-070-278-010		LED,SLZ-738A-24-S	△ PR103	87-026-691-080		FUSE,10A 125V 251<U>
LED448	87-070-290-010		LED,SLZ 936-30-S	△ PR103	87-026-682-080		PROTECTOR,10A 60V491<LH>
LED449	87-070-278-010		LED,SLZ-738A-24-S	△ PR104	87-026-691-080		FUSE,10A 125V 251<U>
S101	87-A90-791-010		SW,RTRY EC16B12204 ENCODER	△ PR104	87-026-682-080		PROTECTOR,10A 60V491<LH>
S102	87-A90-535-010		SW,RTRY EC16B24304	DECK C.B			
S301	87-A90-095-080		SW,TACT EVQ11G04M				
S302	87-A90-095-080		SW,TACT EVQ11G04M	CON105	87-099-756-019		CONN, 15P 9604 S F<LH>
S303	87-A90-095-080		SW,TACT EVQ11G04M<LH>	CON105	87-099-753-019		CONN, 11P H 9604<U>
S304	87-A90-095-080		SW,TACT EVQ11G04M<LH>	SFR1	87-024-581-019		SFR,3.3K DIA 6H
S305	87-A90-095-080		SW,TACT EVQ11G04M<LH>	SOL1	82-ZM1-618-410		SOL ASSY, 27
S306	87-A90-095-080		SW,TACT EVQ11G04M	SOL2	82-ZM1-618-410		SOL ASSY, 27
S307	87-A90-095-080		SW,TACT EVQ11G04M	SW1	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S308	87-A90-095-080		SW,TACT EVQ11G04M	SW2	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S309	87-A90-095-080		SW,TACT EVQ11G04M	SW3	87-A90-248-019		SW,MICRO ESE11SH2CXQ
S310	87-A90-095-080		SW,TACT EVQ11G04M	SW4	87-036-110-010		SW,MICRO SPPB62<LH>
S311	87-A90-095-080		SW,TACT EVQ11G04M	SW4	87-A90-248-019		SW,MICRO ESE11SH2CXQ<U>
S312	87-A90-095-080		SW,TACT EVQ11G04M	SW5	87-036-110-010		SW,MICRO SPPB62<LH>
S313	87-A90-095-080		SW,TACT EVQ11G04M<LH>	SW5	87-A90-248-019		SW,MICRO ESE11SH2CXQ<U>
S321	87-A90-095-080		SW,TACT EVQ11G04M	SW6	87-036-110-010		SW,MICRO SPPB62<LH>
S322	87-A90-095-080		SW,TACT EVQ11G04M	SW8	87-A90-248-019		SW,MICRO ESE11SH2CXQ<LH>
S323	87-A90-095-080		SW,TACT EVQ11G04M	SW9	87-A90-248-019		SW,MICRO ESE11SH2CXQ<LH>
S324	87-A90-095-080		SW,TACT EVQ11G04M	W001	82-ZM3-601-019		RBN, CORD, 4P-75
S325	87-A90-095-080		SW,TACT EVQ11G04M	HEAD-1 C.B			
S326	87-A90-095-080		SW,TACT EVQ11G04M				
S327	87-A90-095-080		SW,TACT EVQ11G04M	CON301	85-MA2-615-010		CON ASSY,3P-PB<U>
S335	87-A90-095-080		SW,TACT EVQ11G04M	HEAD-2 C.B			
S341	87-A90-095-080		SW,TACT EVQ11G04M				
S342	87-A90-095-080		SW,TACT EVQ11G04M	CON351	87-NF6-616-010		CONN ASSY,8P-RPB<LH>
S343	87-A90-095-080		SW,TACT EVQ11G04M				
S344	87-A90-095-080		SW,TACT EVQ11G04M				
S345	87-A90-095-080		SW,TACT EVQ11G04M				
S346	87-A90-095-080		SW,TACT EVQ11G04M				
S347	87-A90-095-080		SW,TACT EVQ11G04M				
S348	87-A90-095-080		SW,TACT EVQ11G04M				
S349	87-A90-095-080		SW,TACT EVQ11G04M<LH>				
S350	87-A90-095-080		SW,TACT EVQ11G04M<LH>				
VR601	87-NB7-602-010		VR,RTRY 10KAX1 1 V<U>				
X101	87-A70-070-080		VIB,CER 5.76MHZ CRHF				

○ チップ抵抗部品コード / CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

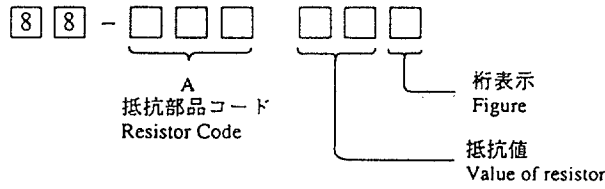

チップ抵抗
Chip resistor

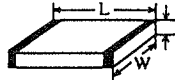容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法 / Dimensions (mm)			抵抗コード : A Resistor Code: A	
				外形 / Form	L	W		t
1/16W	1608	±5%	CJ		1.6	0.8	0.45	108
1/10W	2125	±5%	CJ		2	1.25	0.45	118
1/8W	3216	±5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION



E C B

KTA1266GR
KTC3198GR



E C B

CC5551




E C B

2SA1296



B C E

2SB1370
2SB1625
2SD2494
FN1016
FP1016




E C B

2SA933
2SC4115




G D S

2SK3053

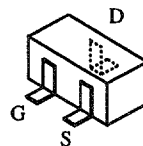

2SK2158

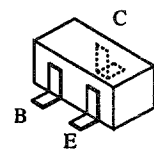






2SA1235F
2SC2714
2SC3052F
CMBT5401
CMBT5551
CSA1362GR
CSD1306E
DTA123JK

DTA144WK
DTC144WK
RN1410
RT1N141C
RT1N144C
RT1P141C
RT1P144C
RT1P441C

FL GRID ASSIGNMENT & ANODE CONNECTION


FL, BJ602GK

GRID ASSIGNMENT

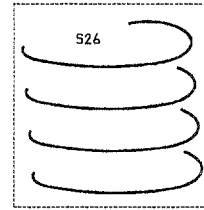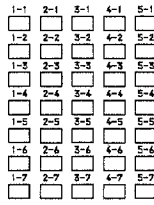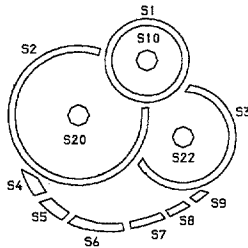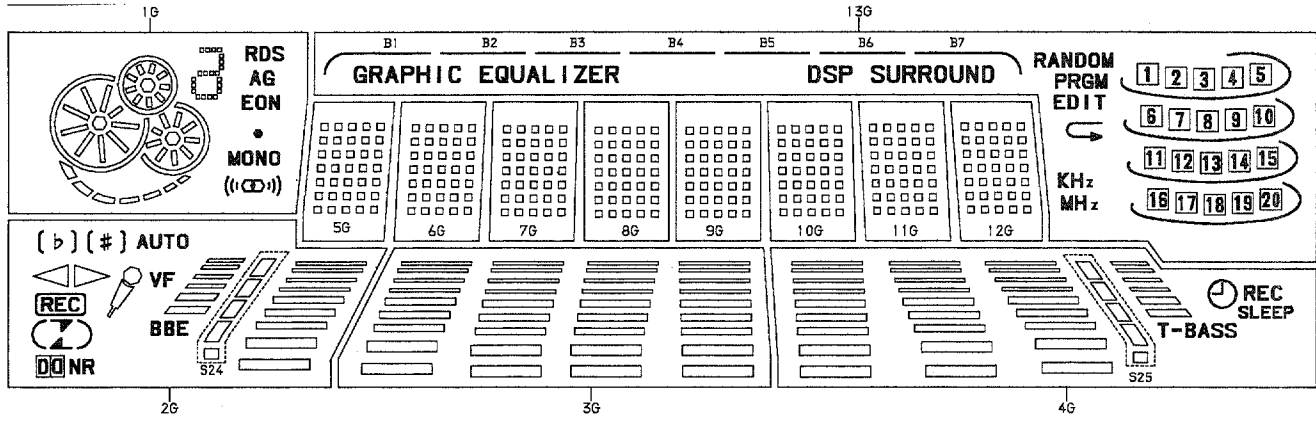


(5G~12G)

(13G)

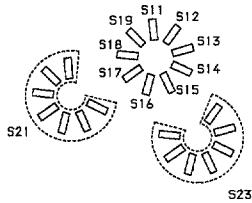

(1G)

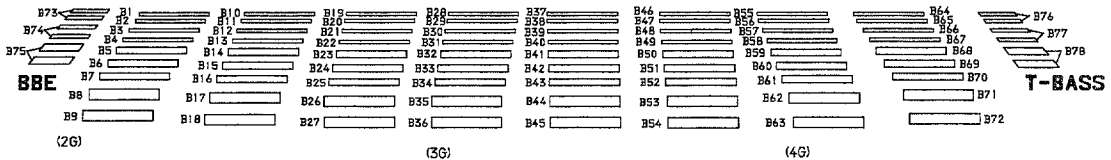














(2G)

(3G)

(4G)


ANODE CONNECTION

	1G	2G	3G	4G	5G-12G	13G
P1	EON	B9	B45	REC	1-1	DSP SURROUND
P2	AG	 NR	B36	B72	2-1	GRAPHIC EQUALIZER
P3		BBE	B27	B63	3-1	B7
P4	MONO	S24	B18	B54	4-1	B6
P5		BB	B44		5-1	B5
P6	RDS		B35	B71	1-2	B4
P7	b		B26	B62	2-2	B3
P8	c		B17	B53	3-2	B2
P9	a, d, g	B7	B43	SLEEP	4-2	B1
P10	e	REC	B34	B70	5-2	RANDOM
P11	S1		B25	B61	1-3	PRGM
P12	S11		B16	B52	2-3	EDIT
P13	S12	B6	B42	T-BASS	3-3	
P14	S19	b #	B33	B69	4-3	KHz
P15	S13		B24	B60	5-3	MHz
P16	S10		B15	B51	1-4	S26
P17	S18	B5	B41	B78	2-4	16
P18	S14	B75	B32	B68	3-4	11


	1G	2G	3G	4G	5G-12G	13G
P19	S17	B74	B23	B59	4-4	6
P20	S15	B73	B14	B50	5-4	1
P21	S16	B4	B40	B77	1-5	17
P22	S3	 VF	B31	B67	2-5	12
P23	S23	AUTO	B22	B58	3-5	7
P24	S22	—	B13	B49	4-5	2
P25	S9	B3	B39	B76	5-5	18
P26	S8	—	B30	B66	1-6	13
P27	S7	—	B21	B57	2-6	8
P28	S6	—	B12	B48	3-6	3
P29	S5	B2	B38	S25	4-6	19
P30	S4	—	B29	B65	5-6	14
P31	S2	—	B20	B56	1-7	9
P32	S21	—	B11	B47	2-7	4
P33	S20	B1	B37	—	3-7	20
P34	—	—	B28	B64	4-7	15
P35	—	—	B19	B55	5-7	10
P36	—	—	B10	B46	—	5

IC BLOCK DIAGRAM - 1


IC, HA12185NT

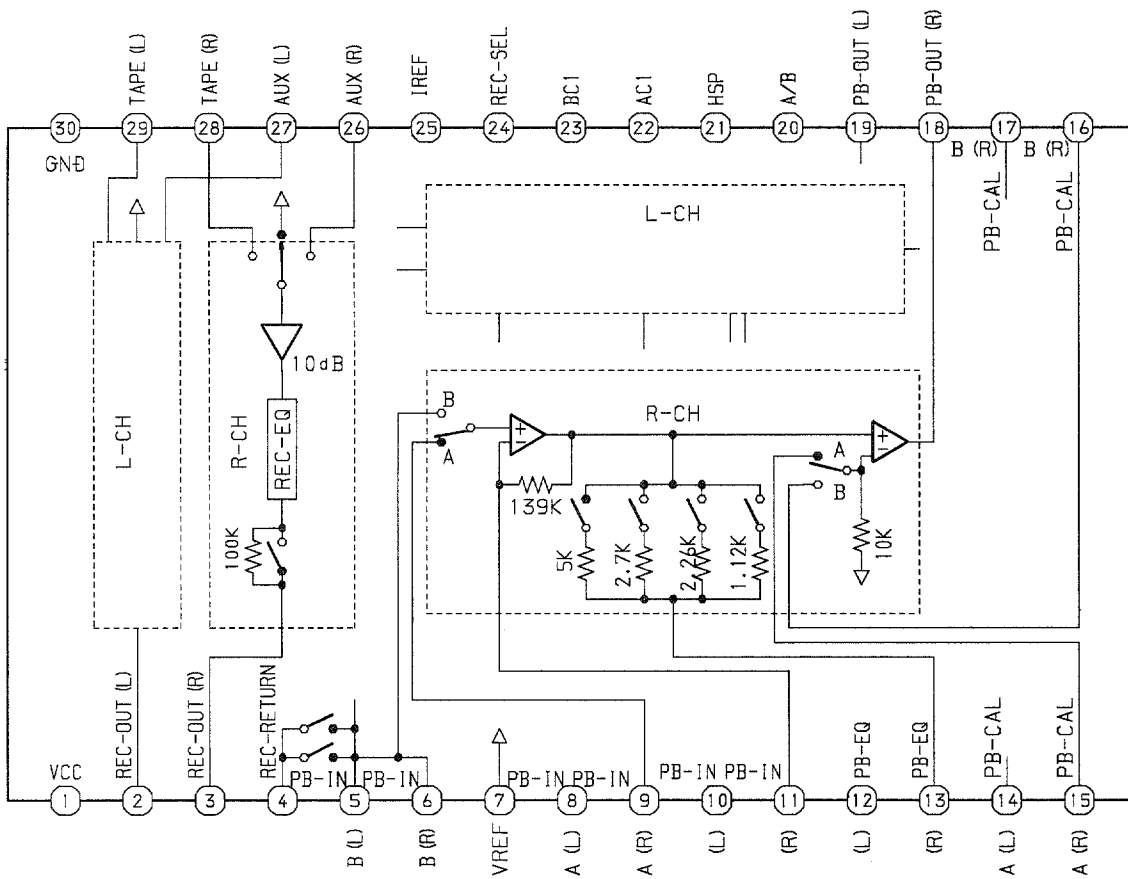

IC, BA7762FS

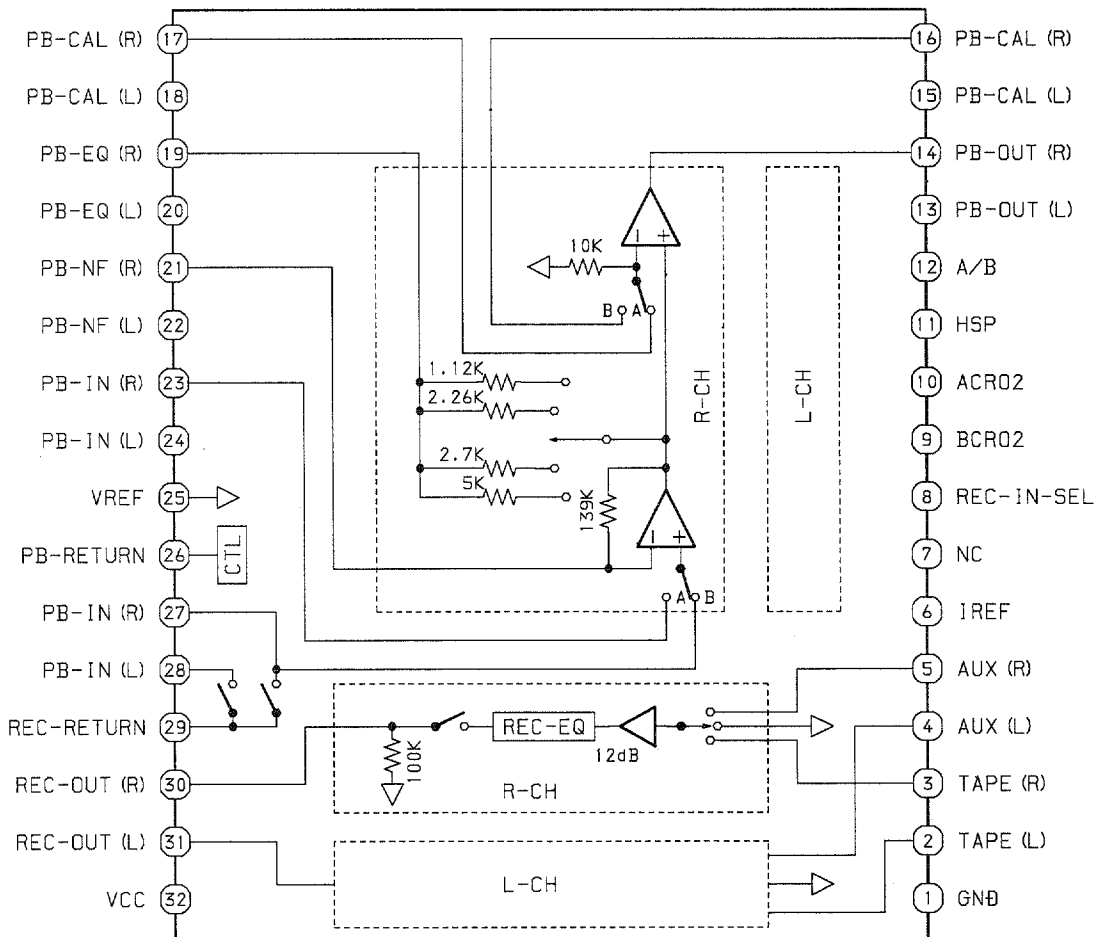

BLOCK DIAGRAM (MAIN / FRONT)




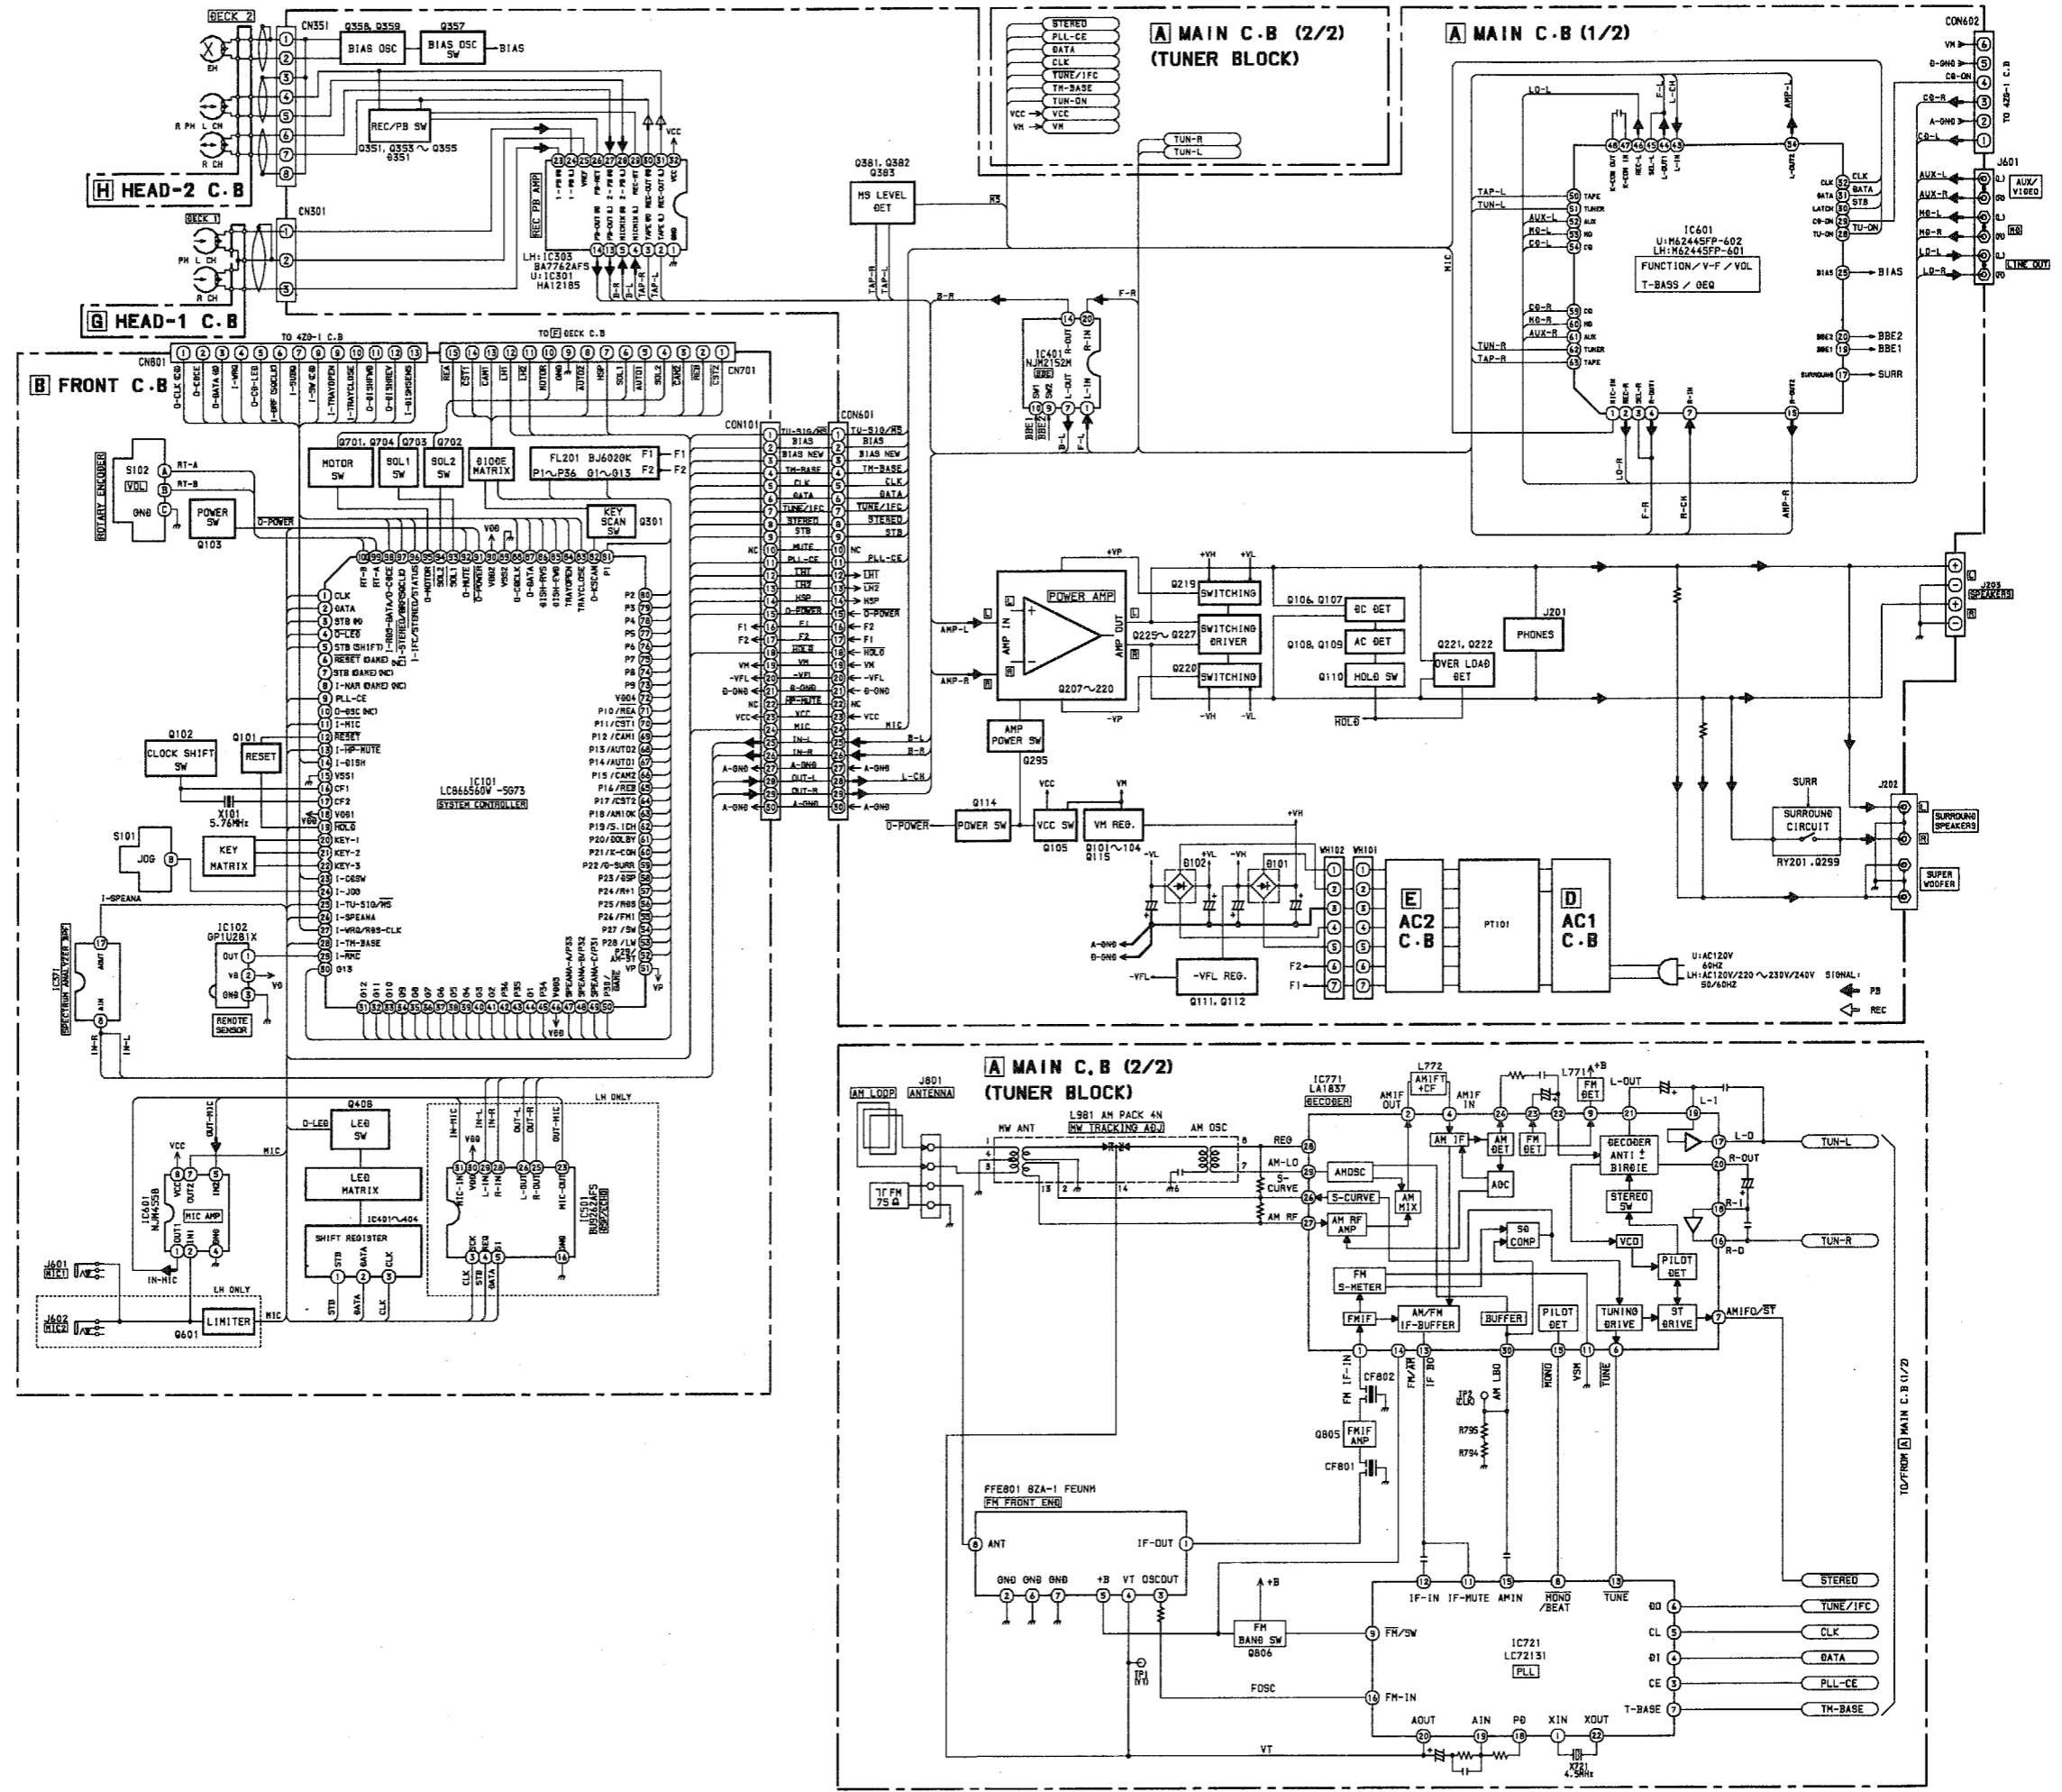



WIRING - 1 (MAIN)


1 2 3 4 5 6 7 8 9 10 11 12 13 14

A
B
C
D
E
F
G
H
I
J

A MAIN C.B

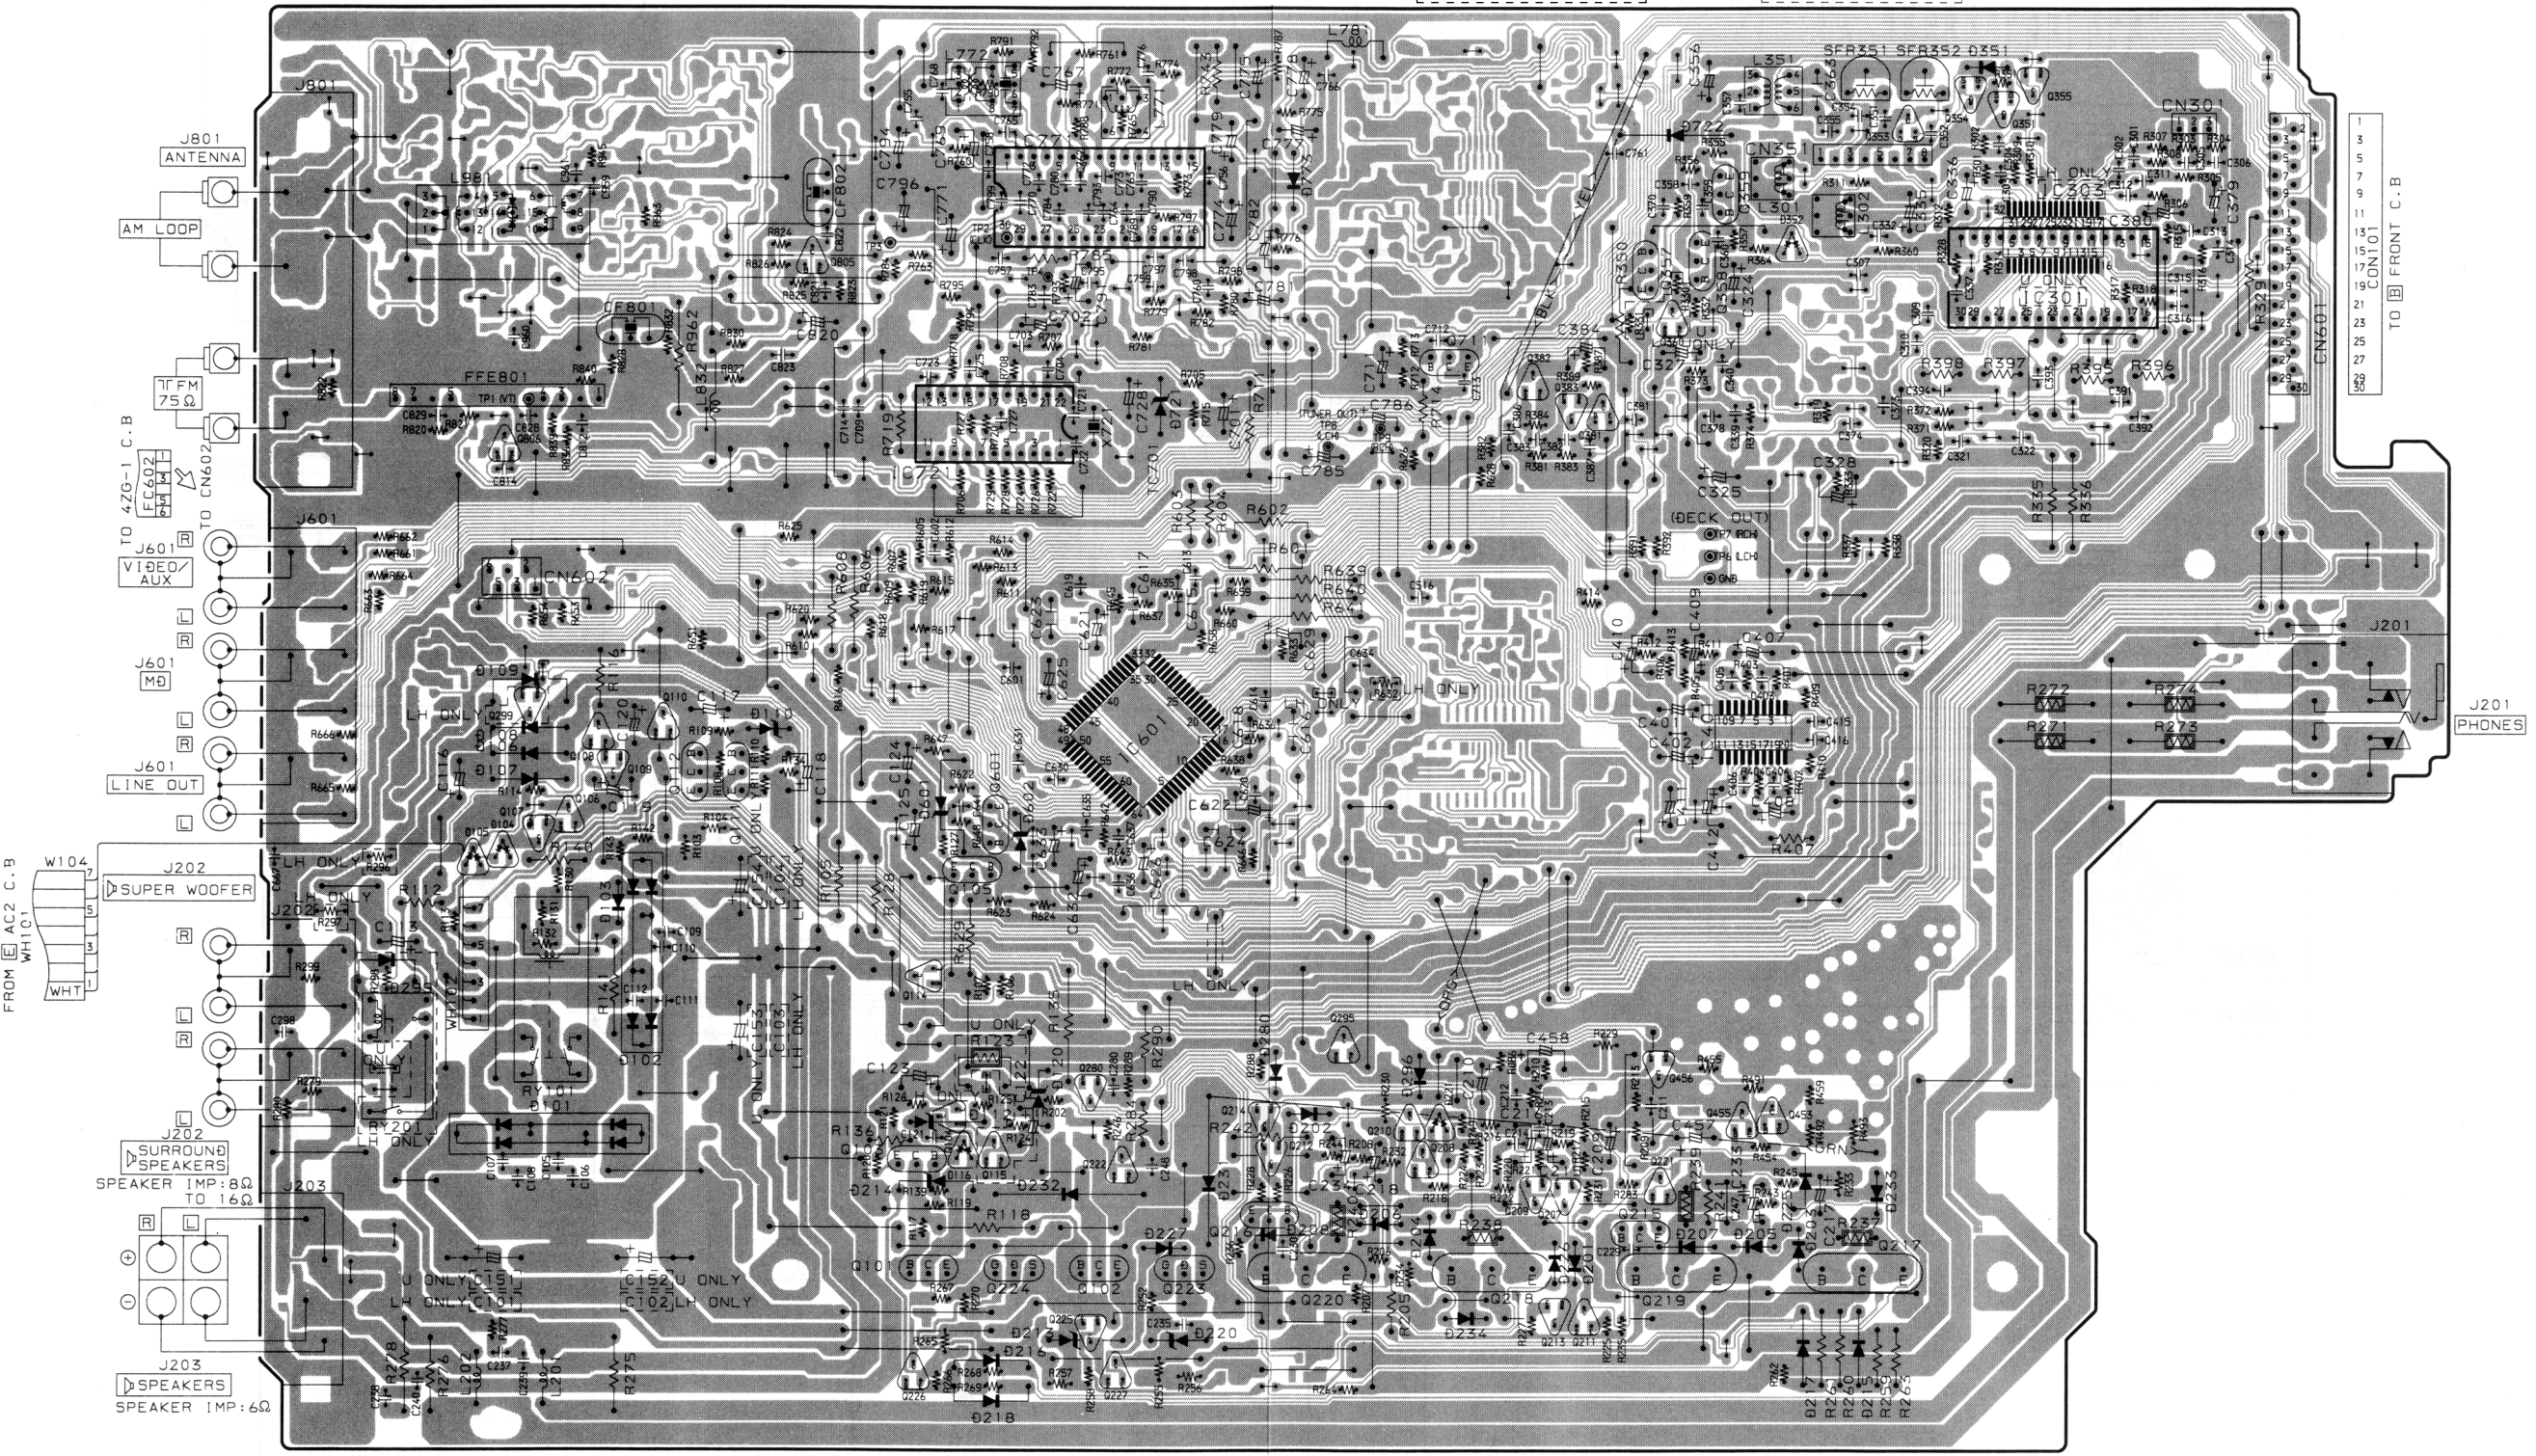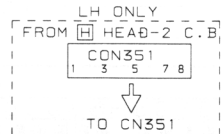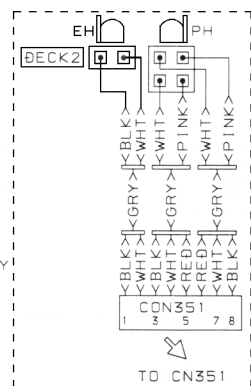


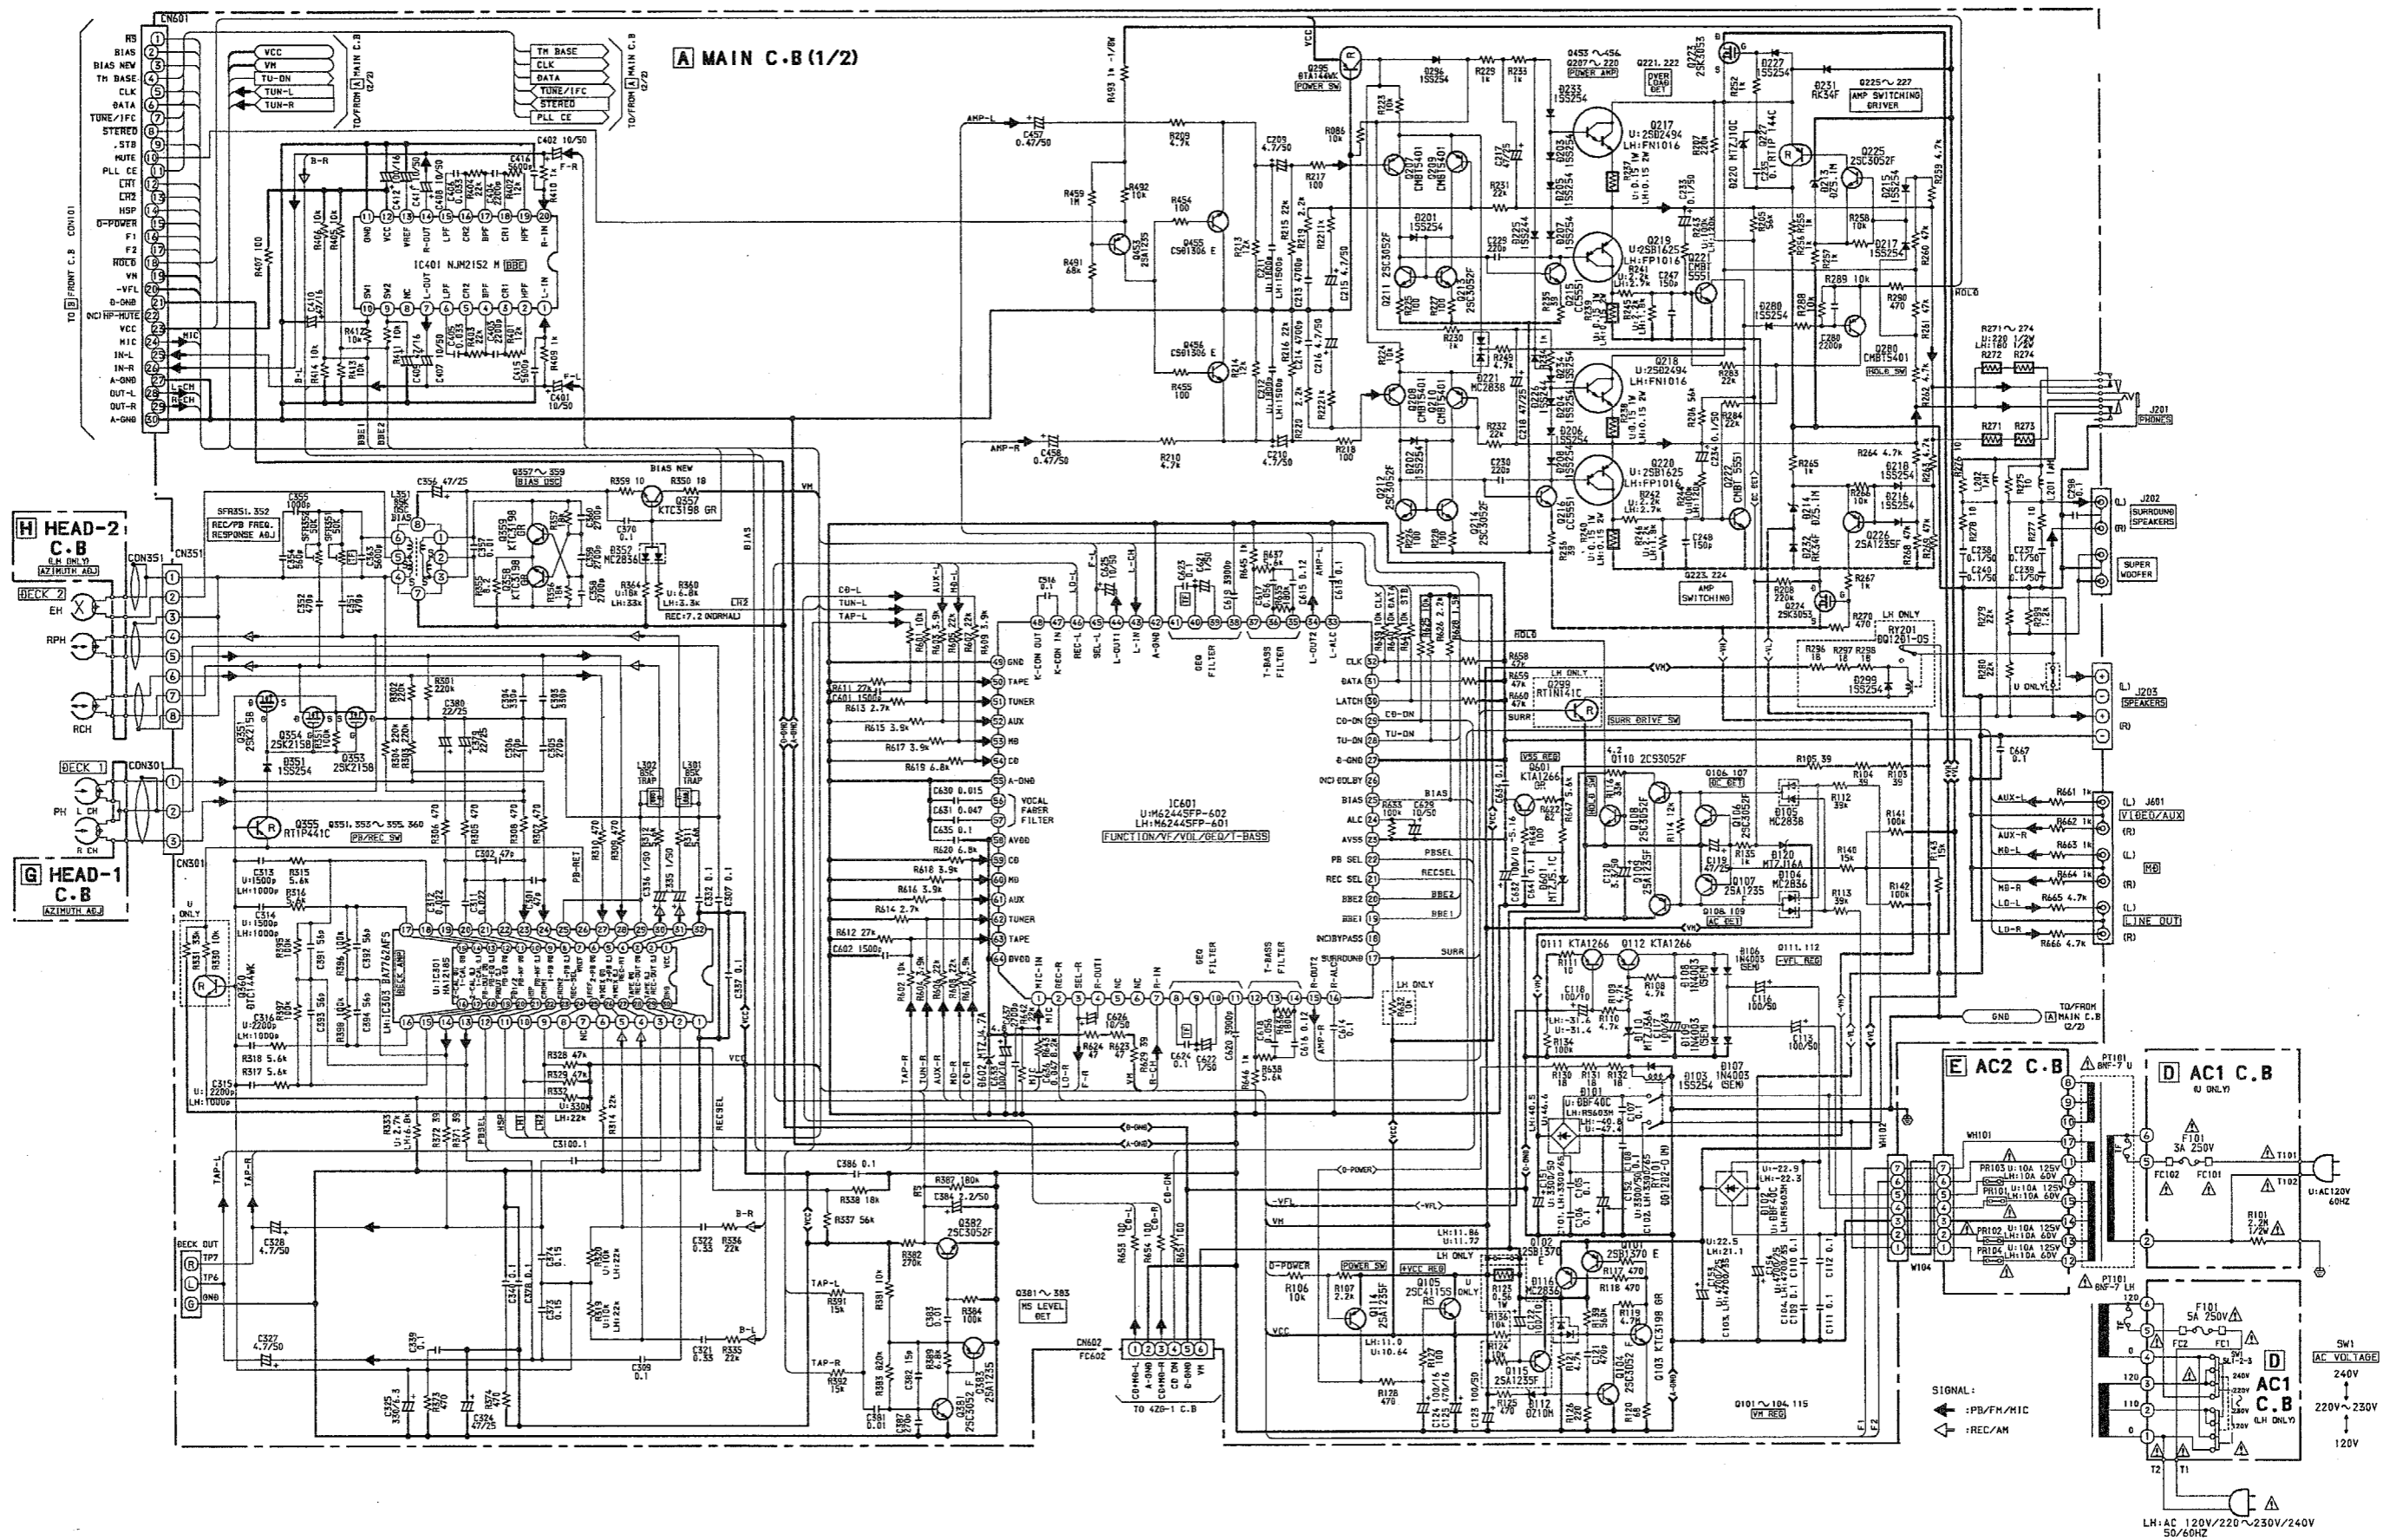

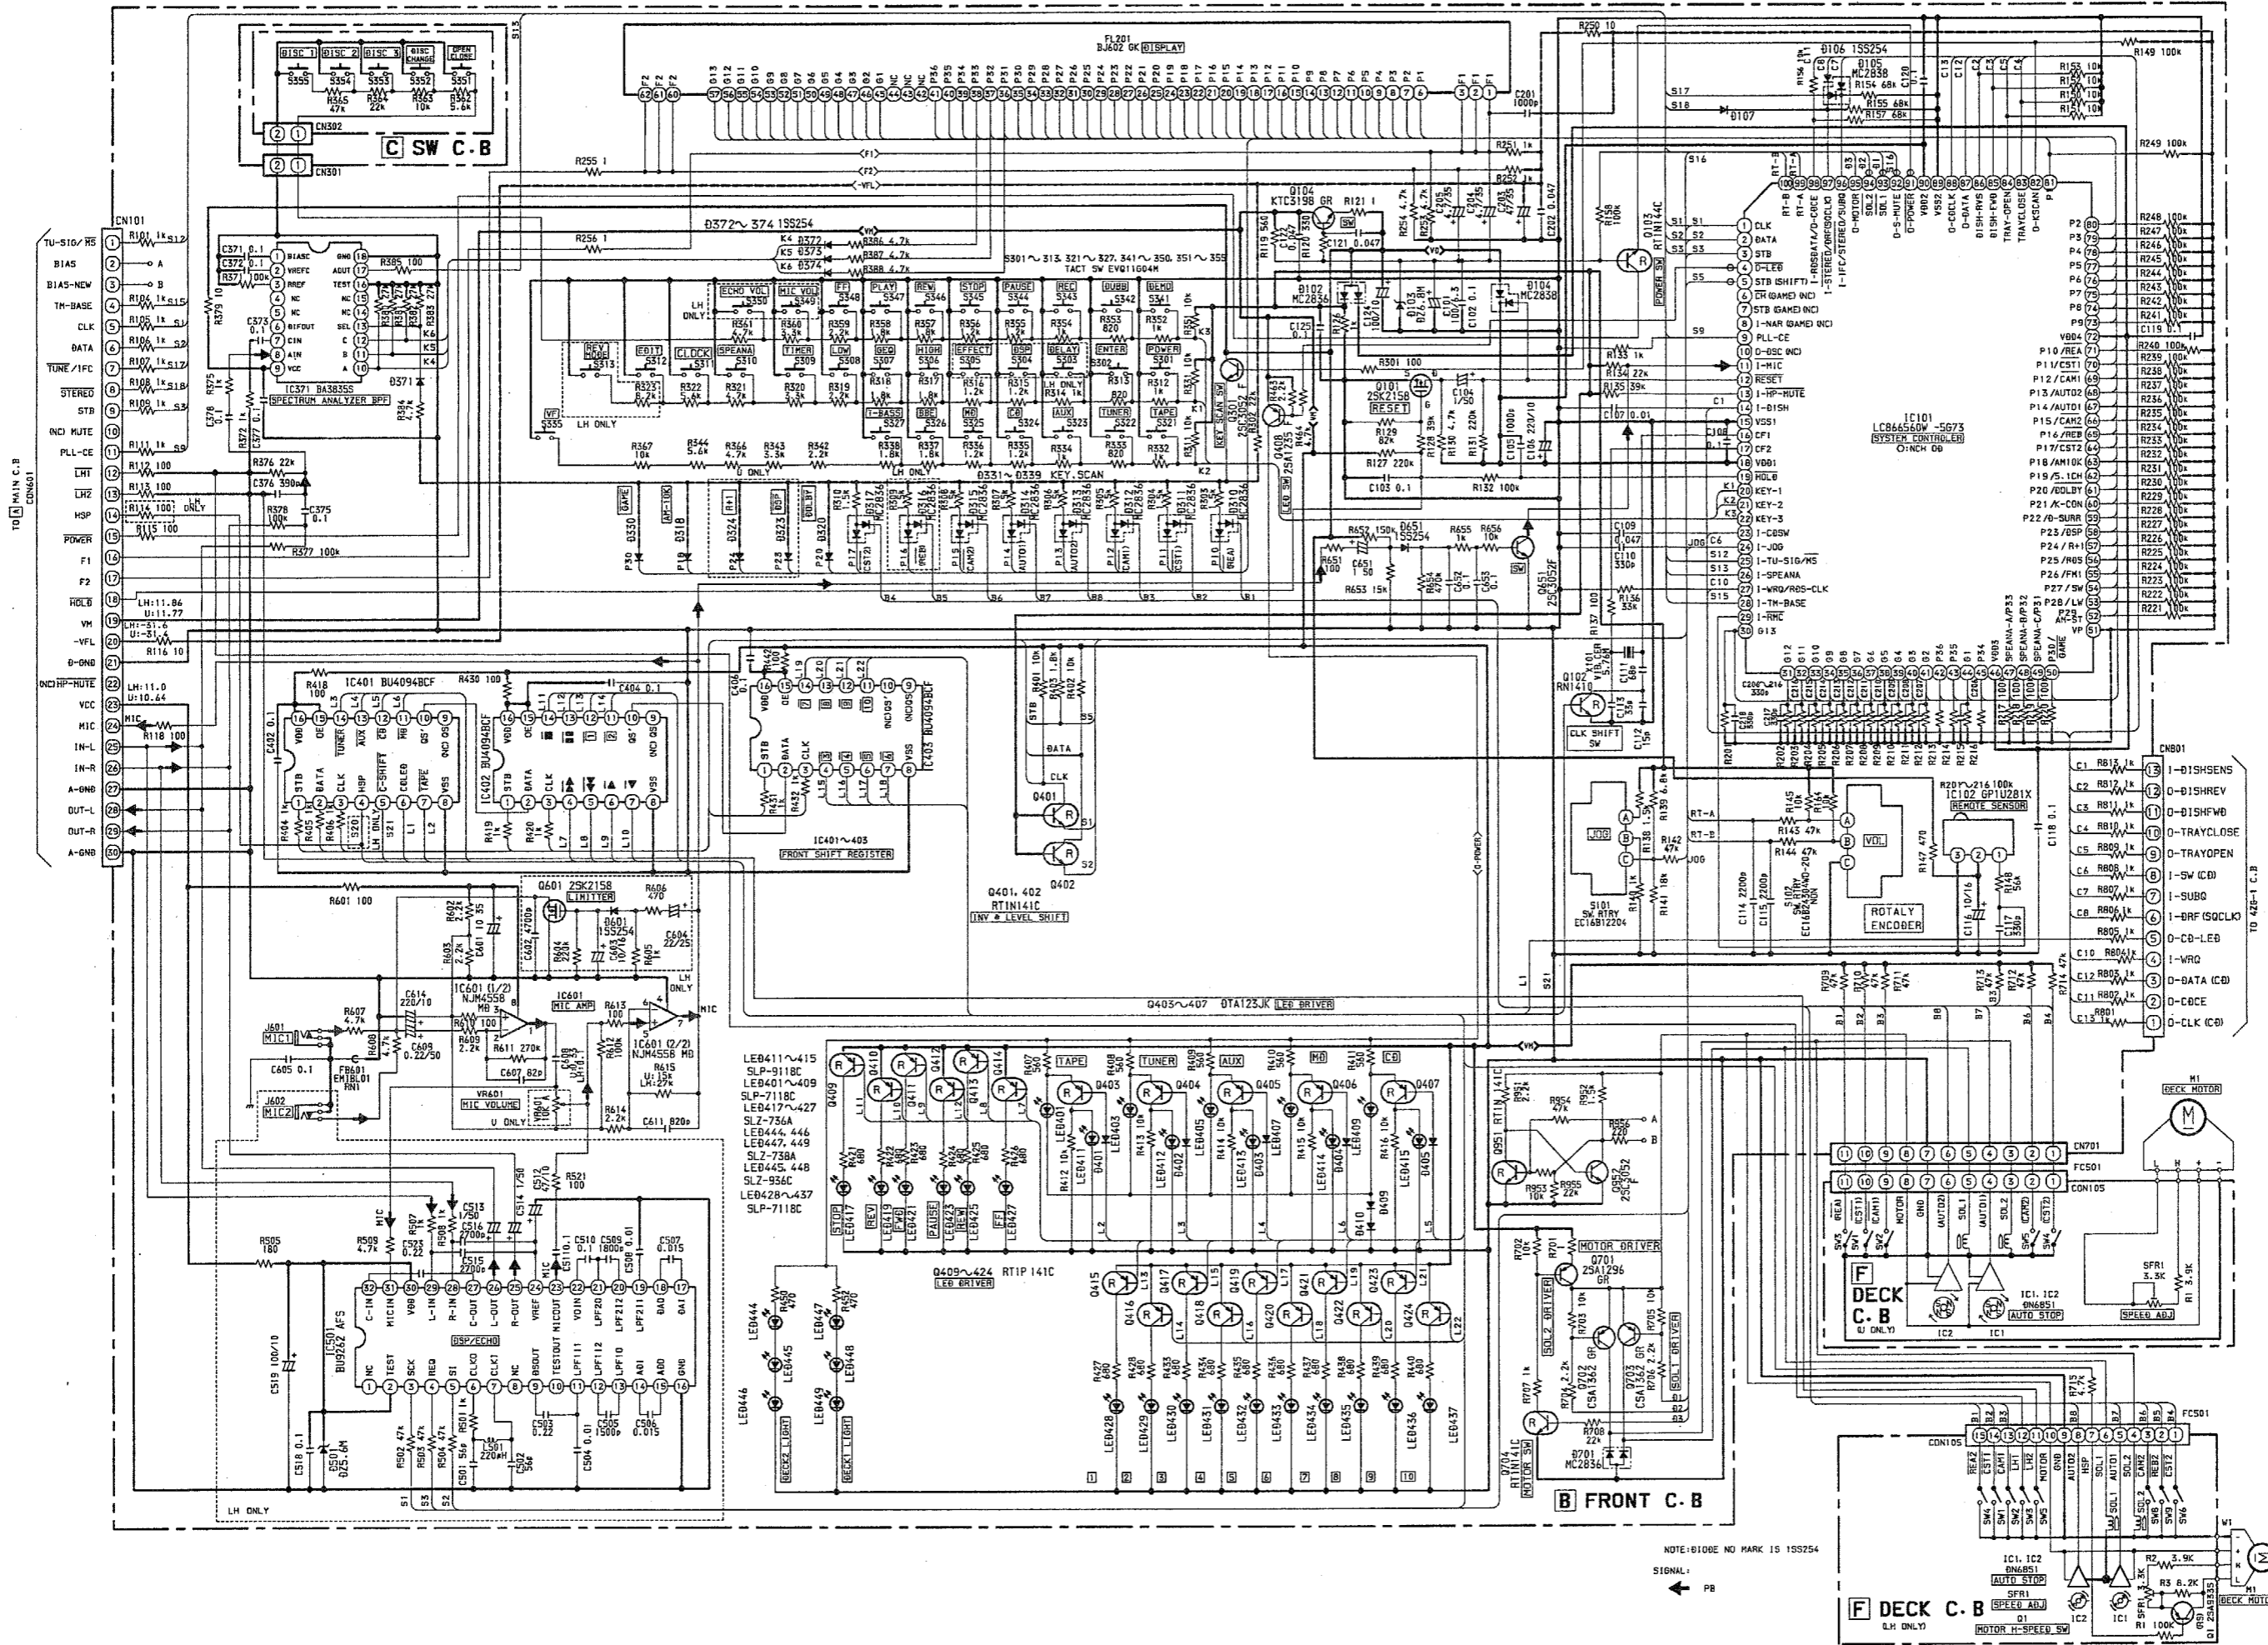


1 2 3 4 5 6 7 8 9 10 11 12 13 14

A
B
C
D
E
F
G
H
I
J

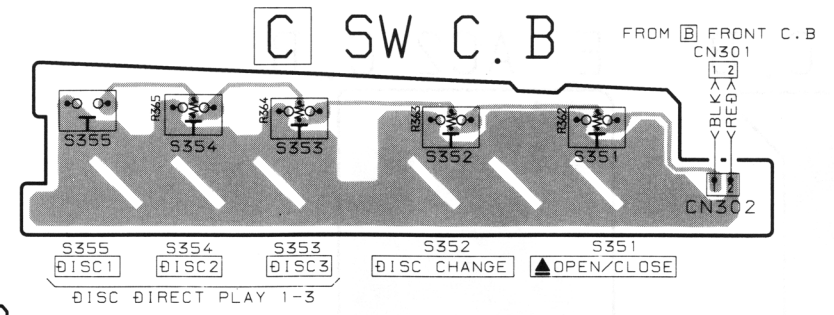

B FRONT C.B

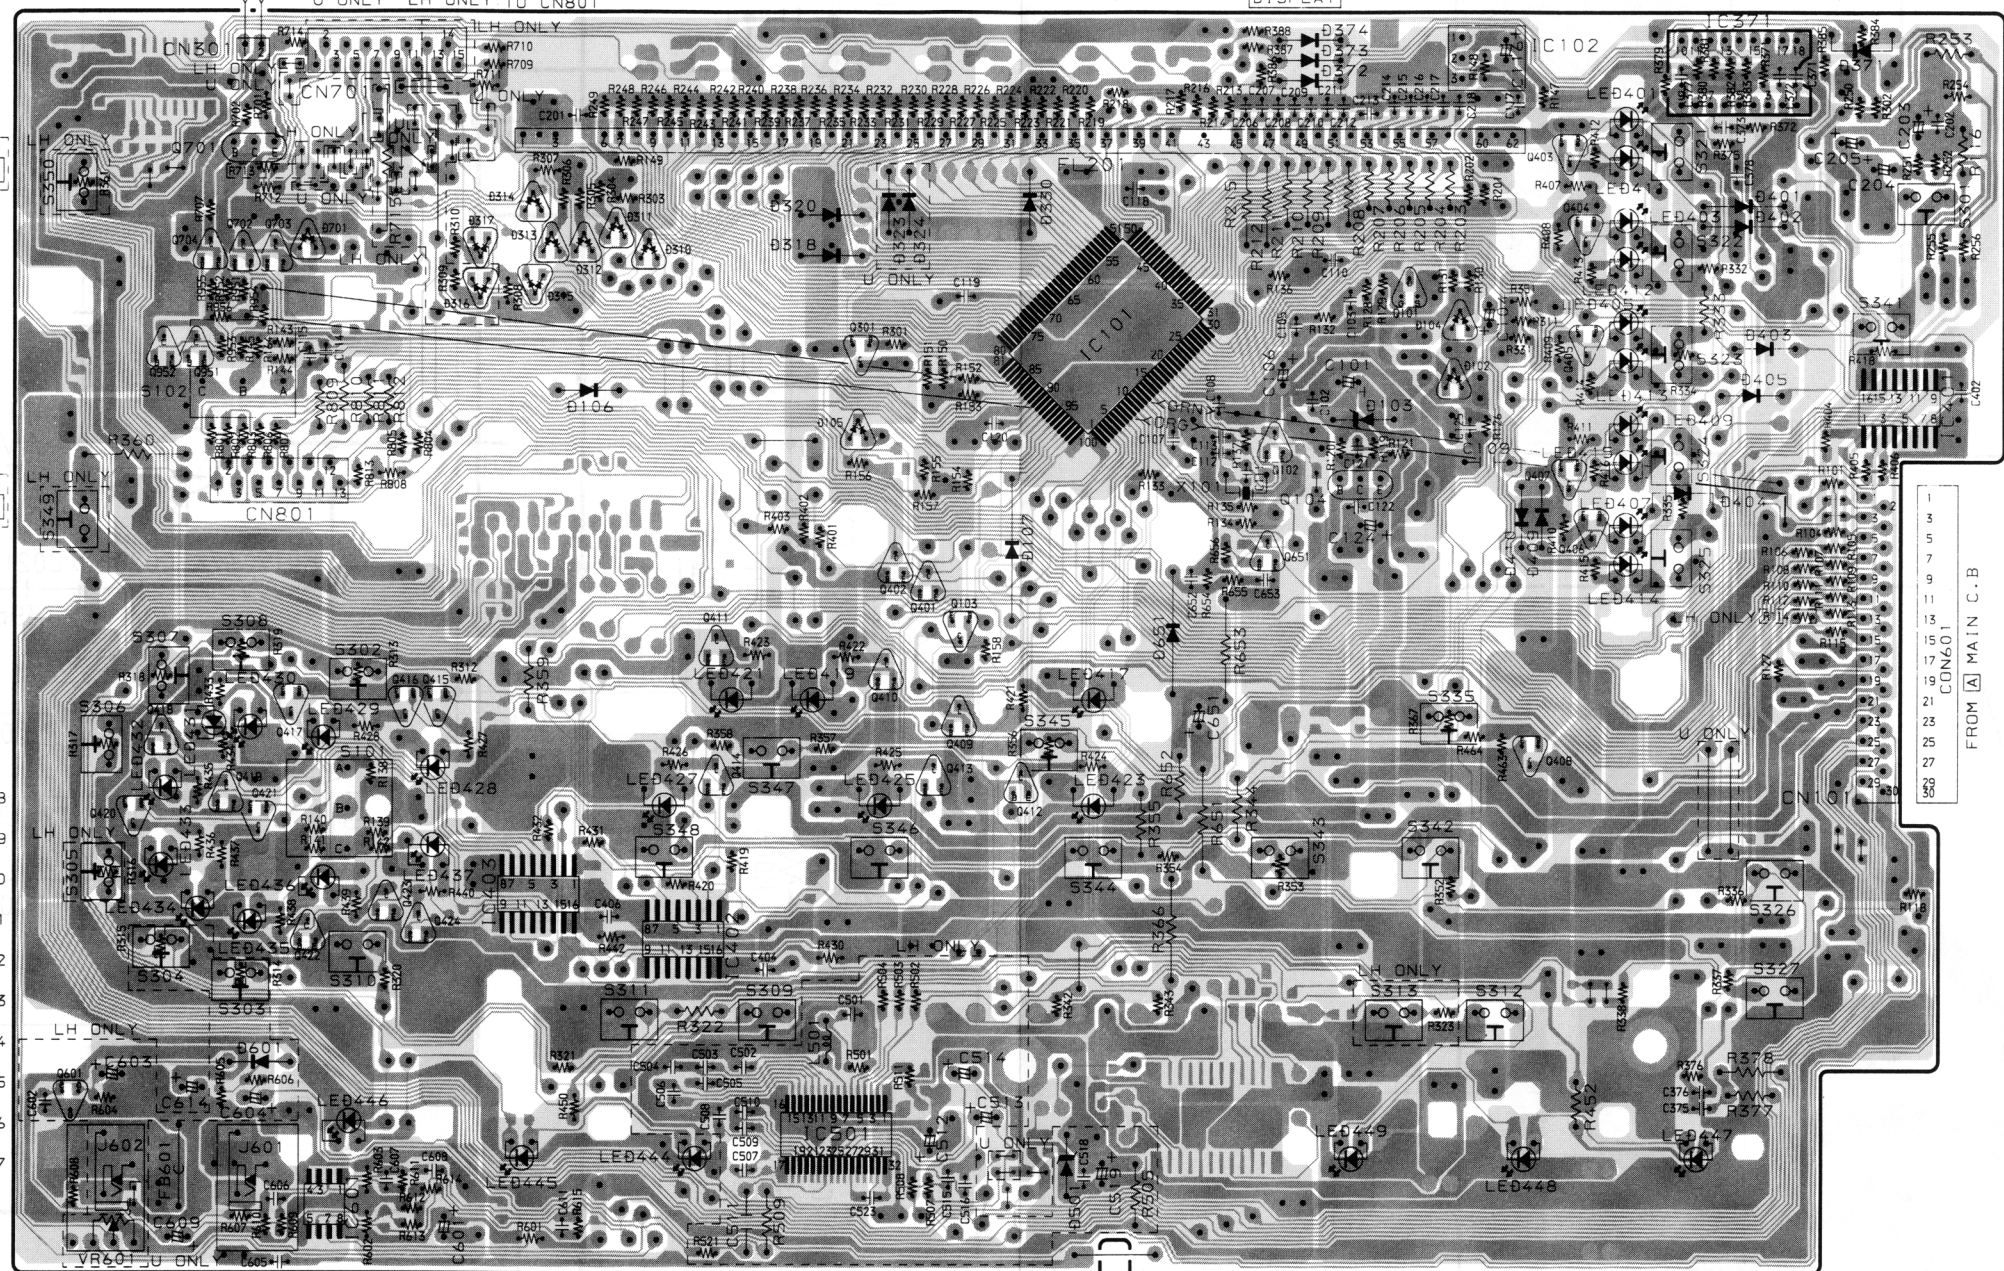


- LH ONLY S350 ECHO-VOL
- S102 VOLUME
- LH ONLY S349 MIC-VOL
- S302 ENTER
- S308 LOW
- S307 GEQ
- S306 HIGH
- S101 MULTI JOG
- LH ONLY S305 EFFECT
- S304 DSP
- S303 DELAY
- S310 SPEANA
- LED428 1
- LED429 2
- LED430 3
- LED431 4
- LED432 5
- LED433 6
- LED434 7
- LED435 8
- LED436 9
- LED437 10
- LH ONLY J602 MIC2
- U ONLY VR601 MIC VOLUME
- J601 MIC1
- LED446, 445, 444 DECK2 LIGHT
- LED419, 421 S347 DIRECTION/PRESET
- LED417 S345 CLEAR
- LED427 S348 UP
- LED425 S346 DOWN
- LED423 S344 SET
- S343 REC/REC MUTE
- S342 SYNC SUB
- S326 BBE
- LH ONLY S313 REV MODE
- S312 CD EDIT/CHECK
- S327 T-BASS


- S301 POWER STANDBY/ON
- LED401, 411 S321 TAPE/DECK 1/2
- LED403, 412 S322 TUNER/BAND
- LED405, 413 S323 VIDEO/AUX
- LED409, 415 S324 CD
- LED407, 414 S325 MD
- S341 DEMO

FUNCTION


FROM MAIN C.B. CN601

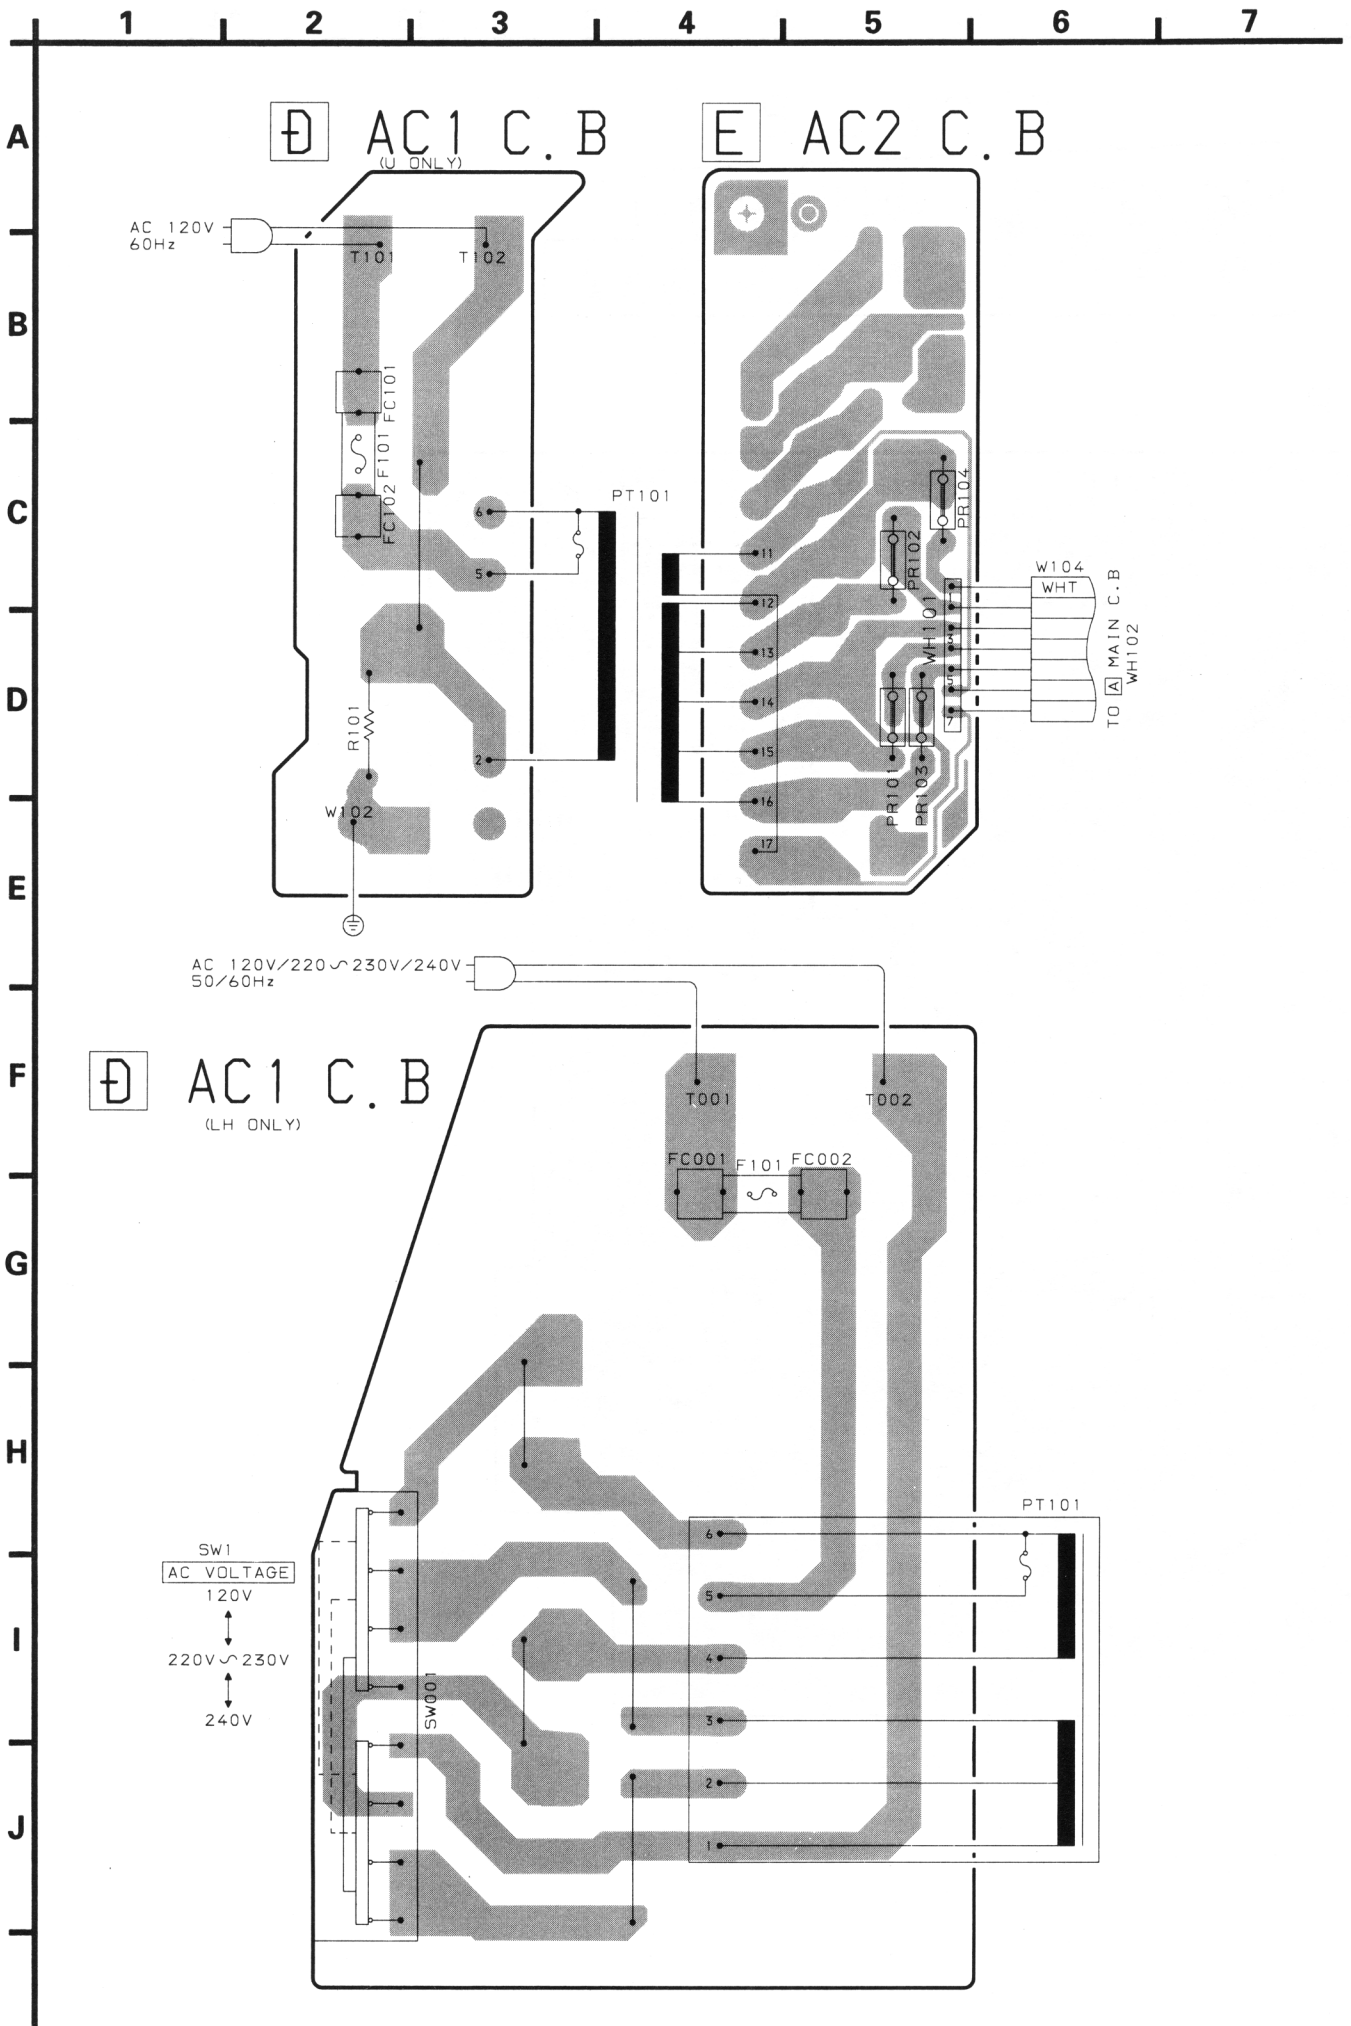


SCHEMATIC DIAGRAM -3 (TUNER FRONT END)

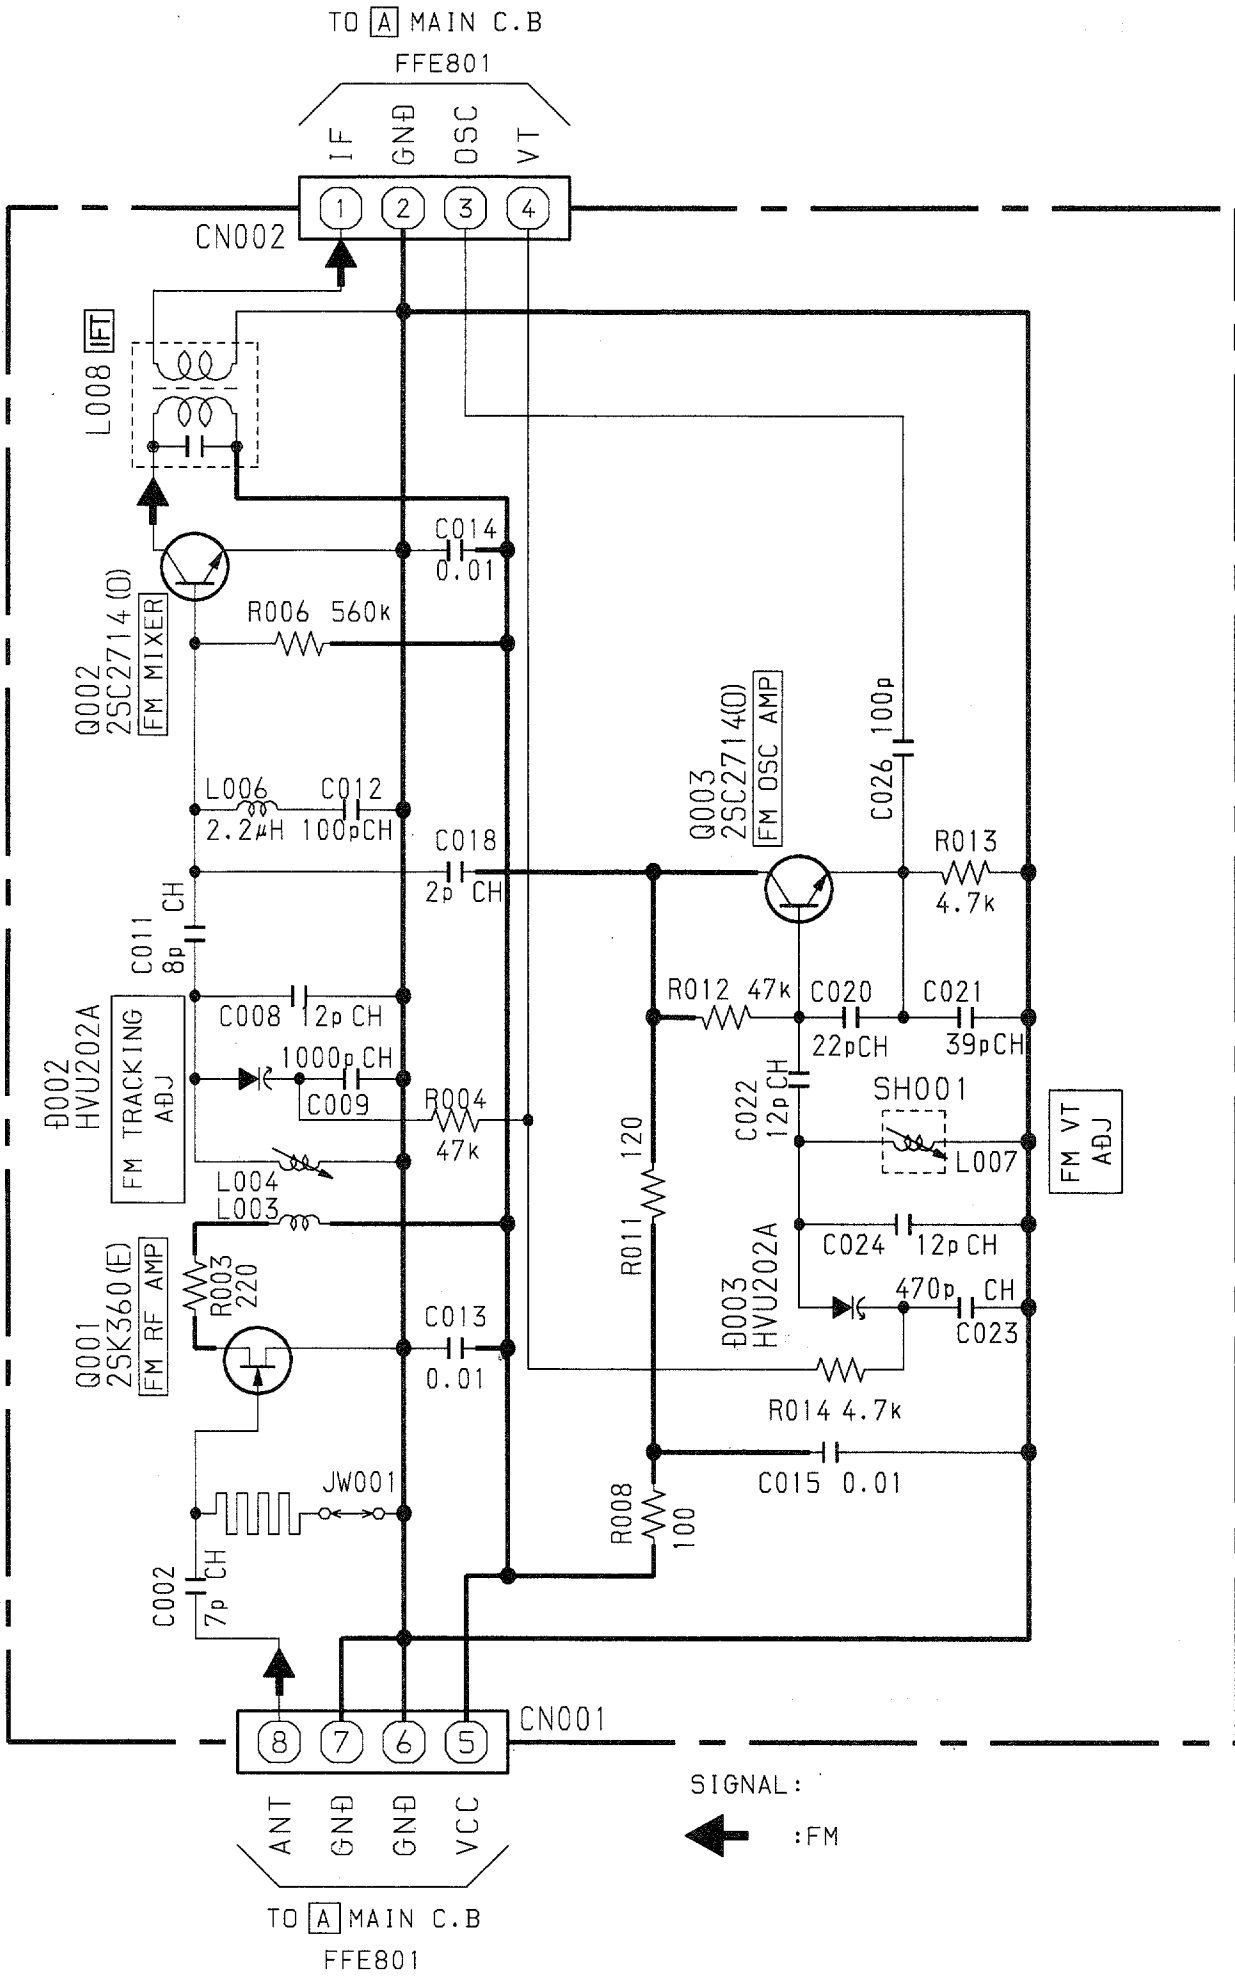


SIGNAL :
 ← : FM

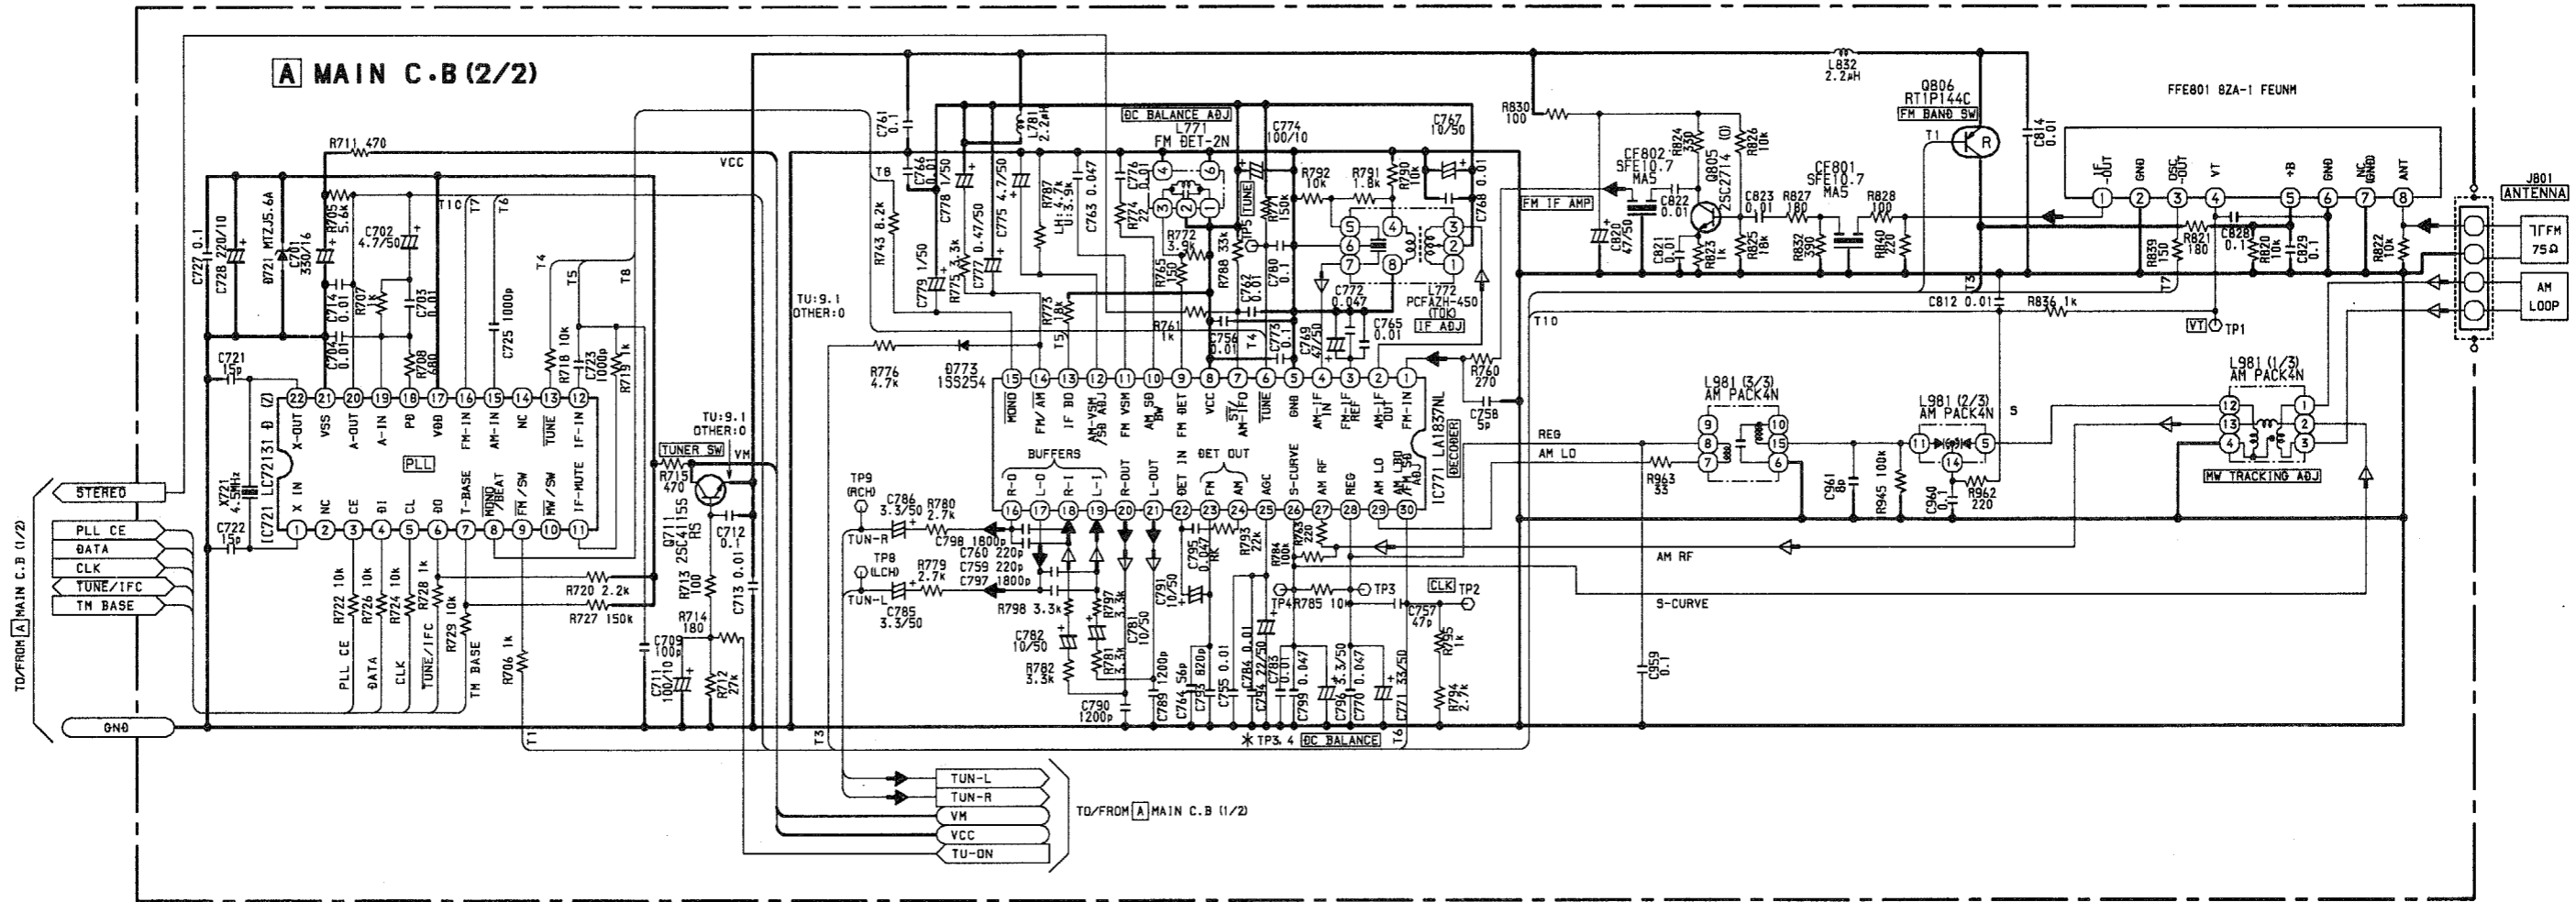


SIGNAL:
 ◄ : FM
 ◄ : AM


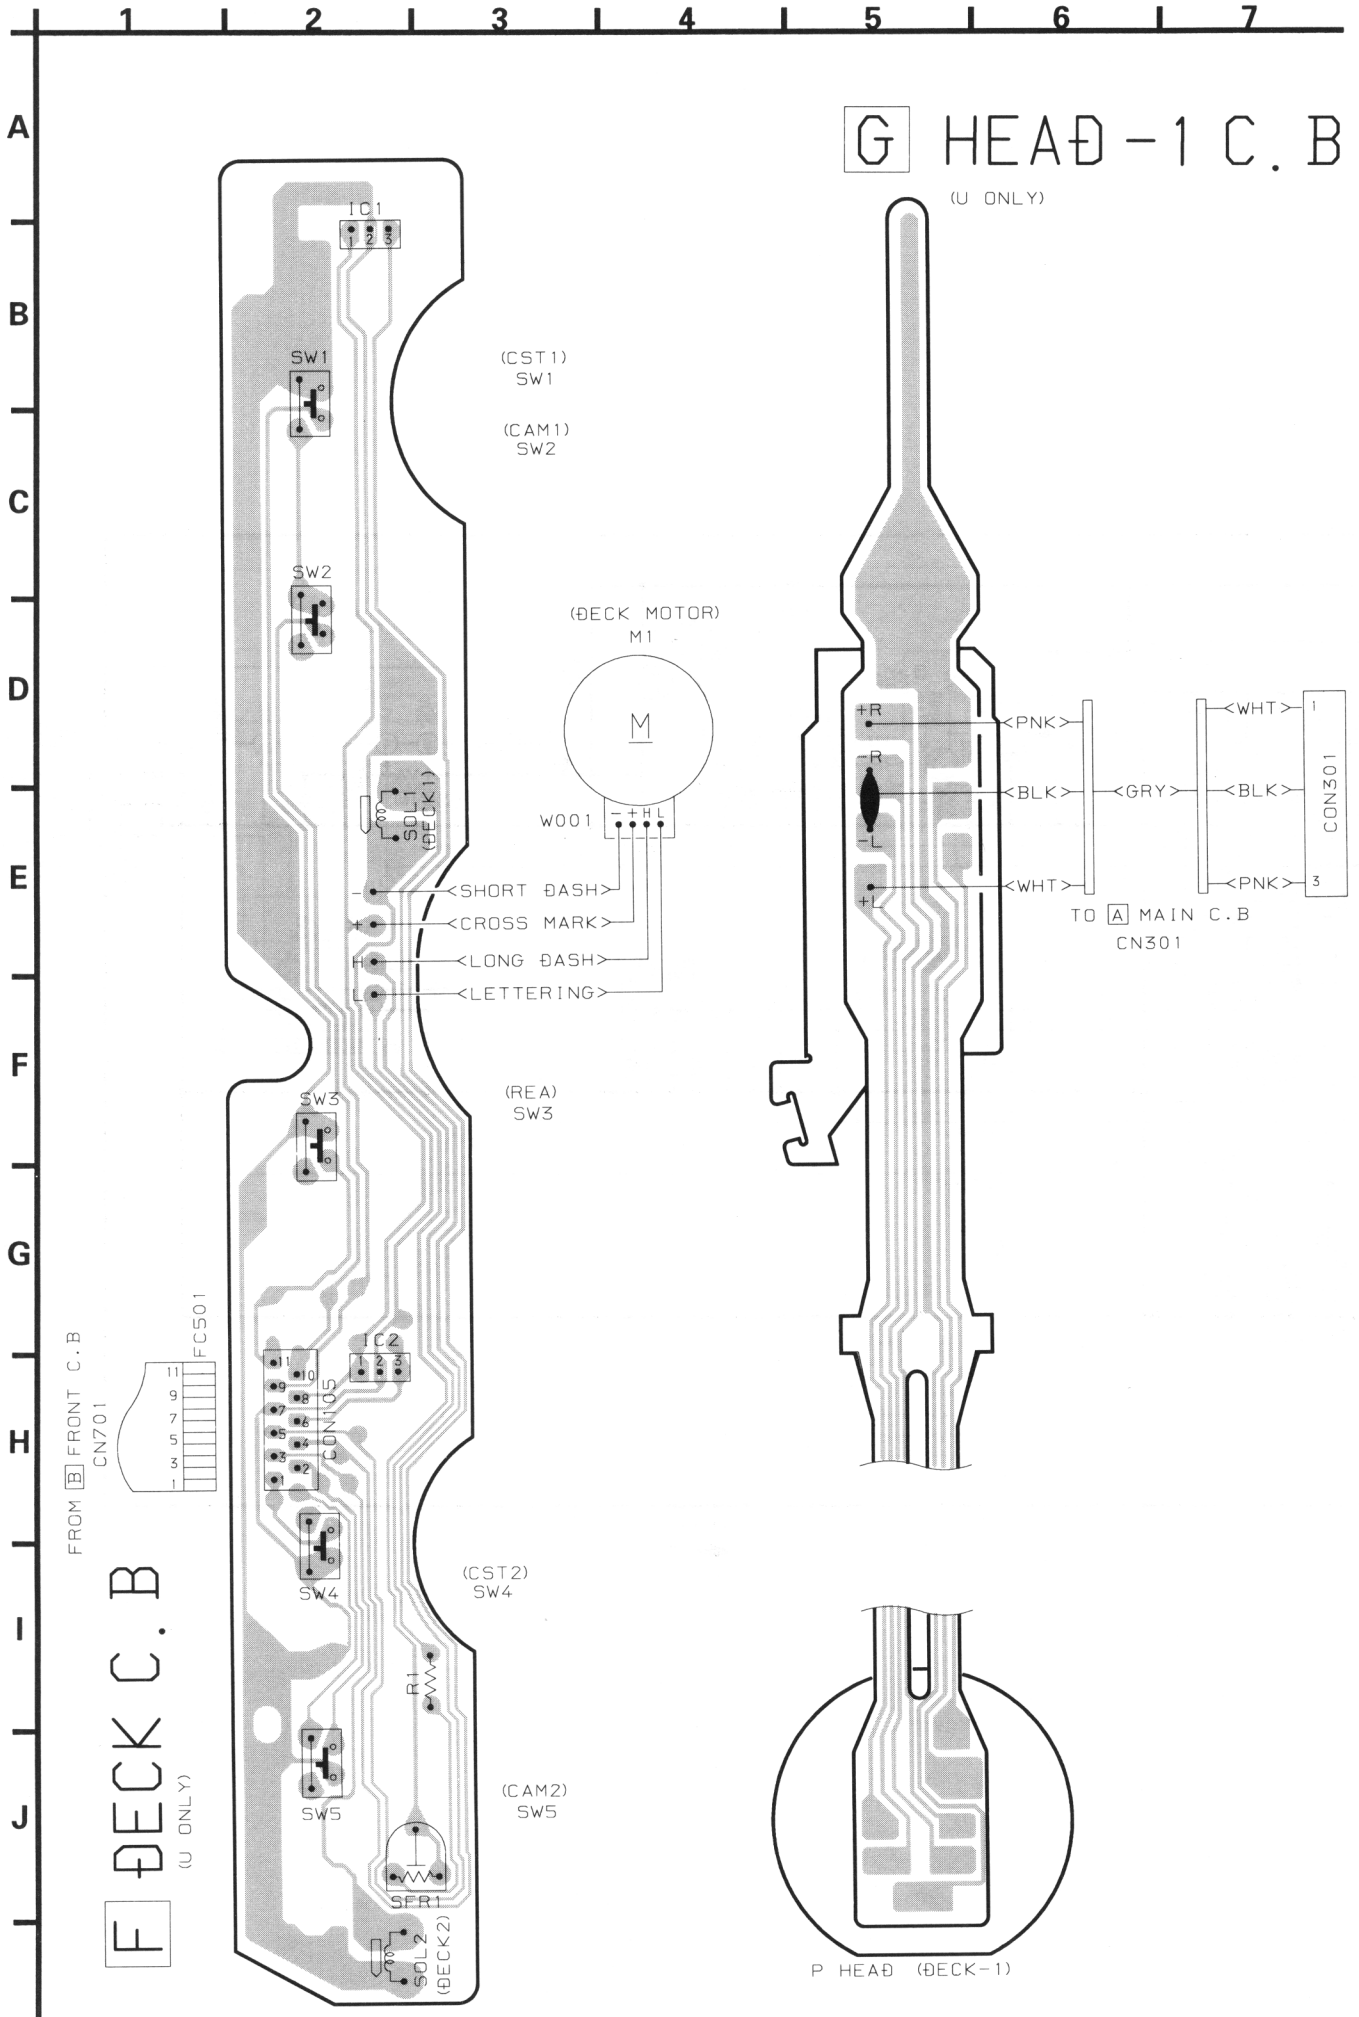


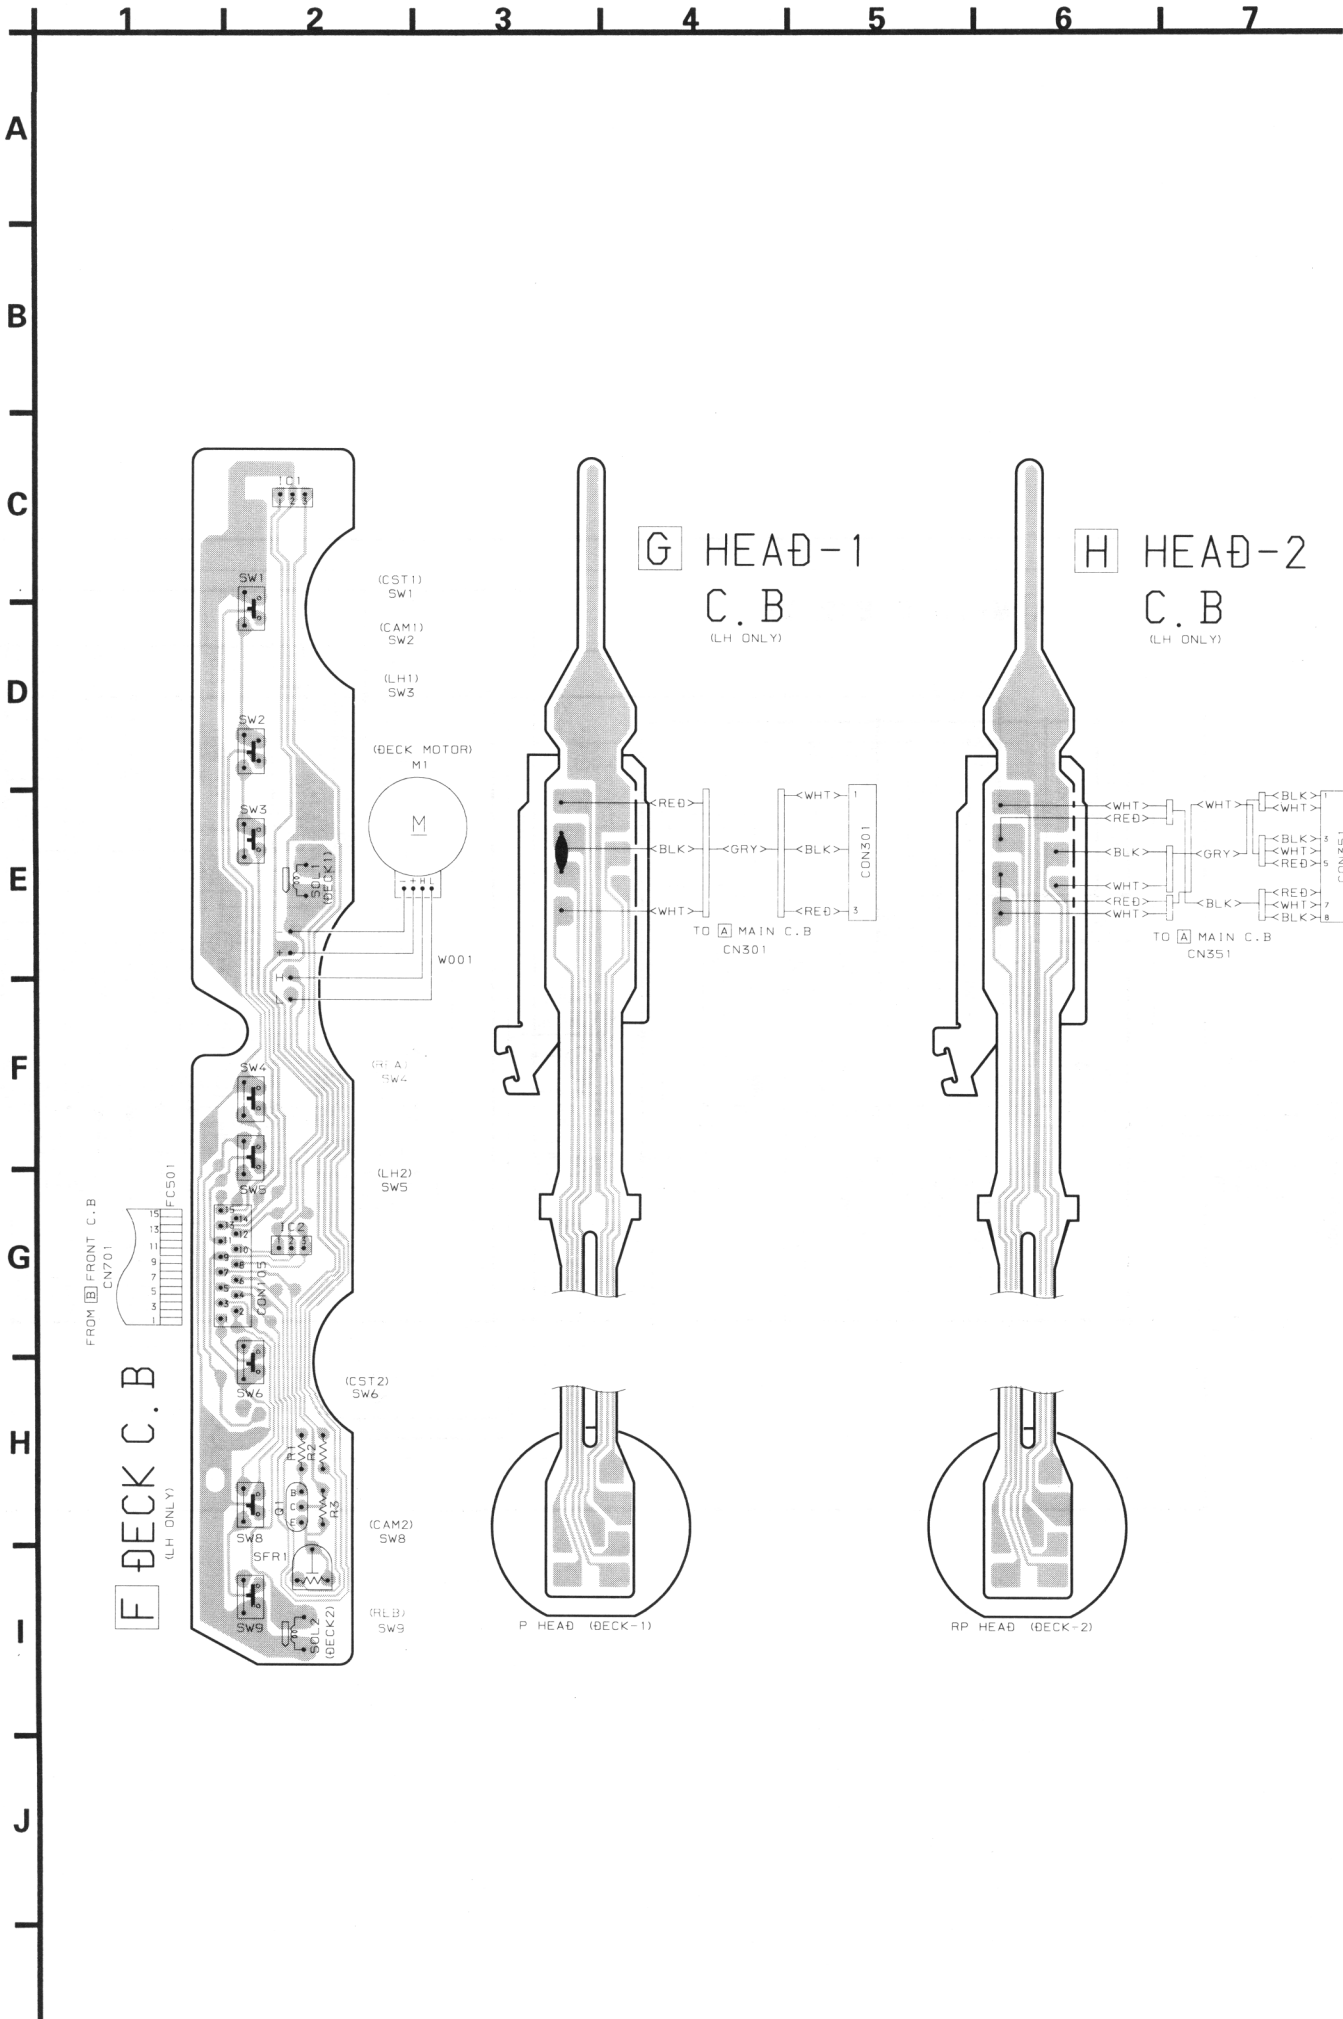


G HEAD-1
C.B
(LH ONLY)

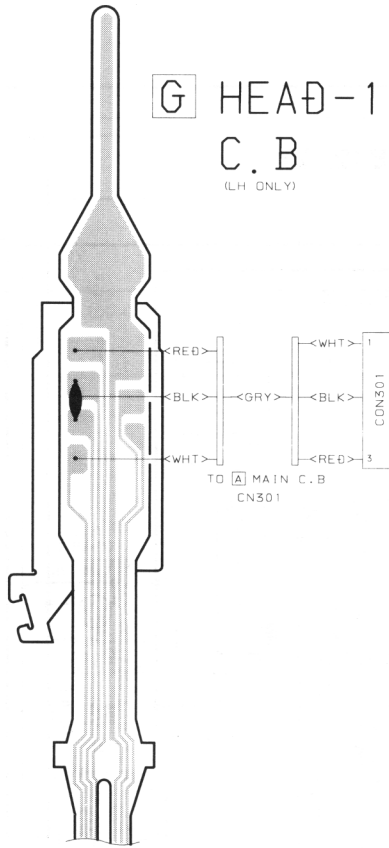

H HEAD-2
C.B
(LH ONLY)

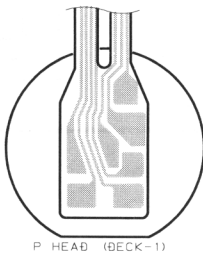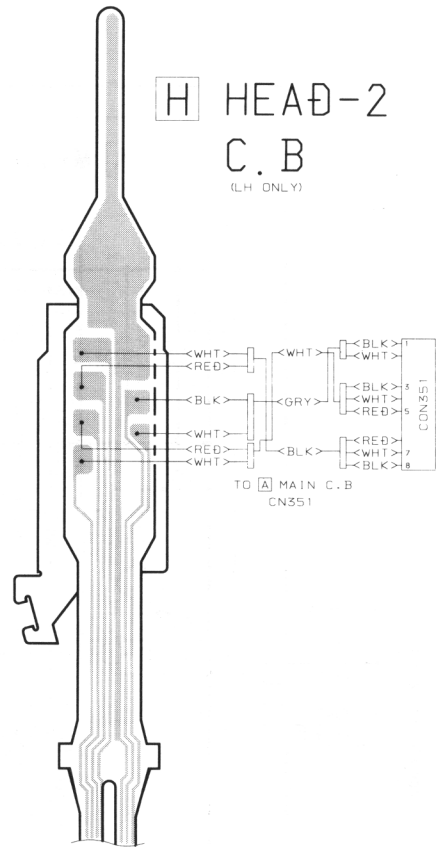


P HEAD (DECK-1)

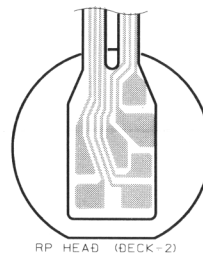


RP HEAD (DECK-2)

IC BLOCK DIAGRAM - 2


IC, NJM2152M

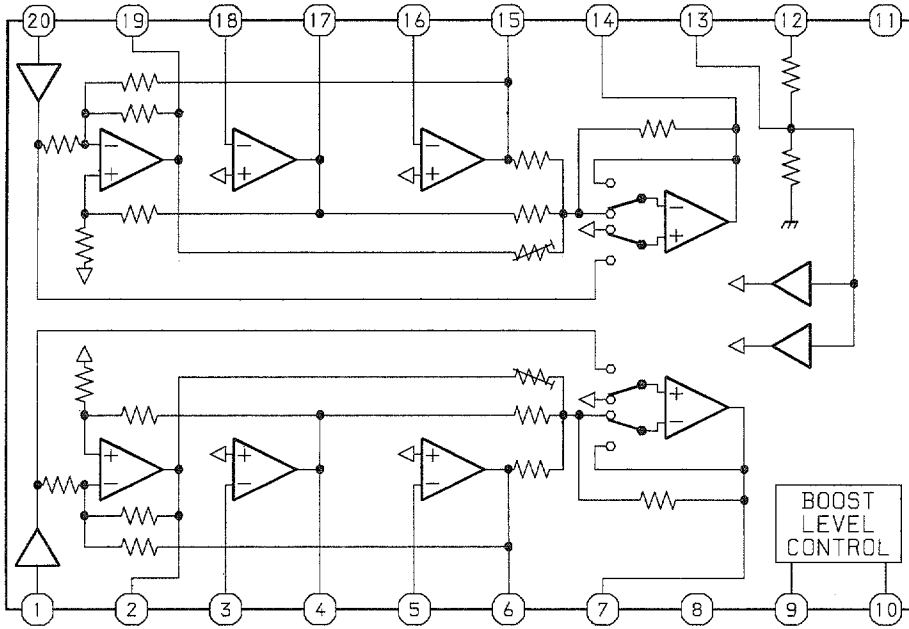


IC, BA3835S

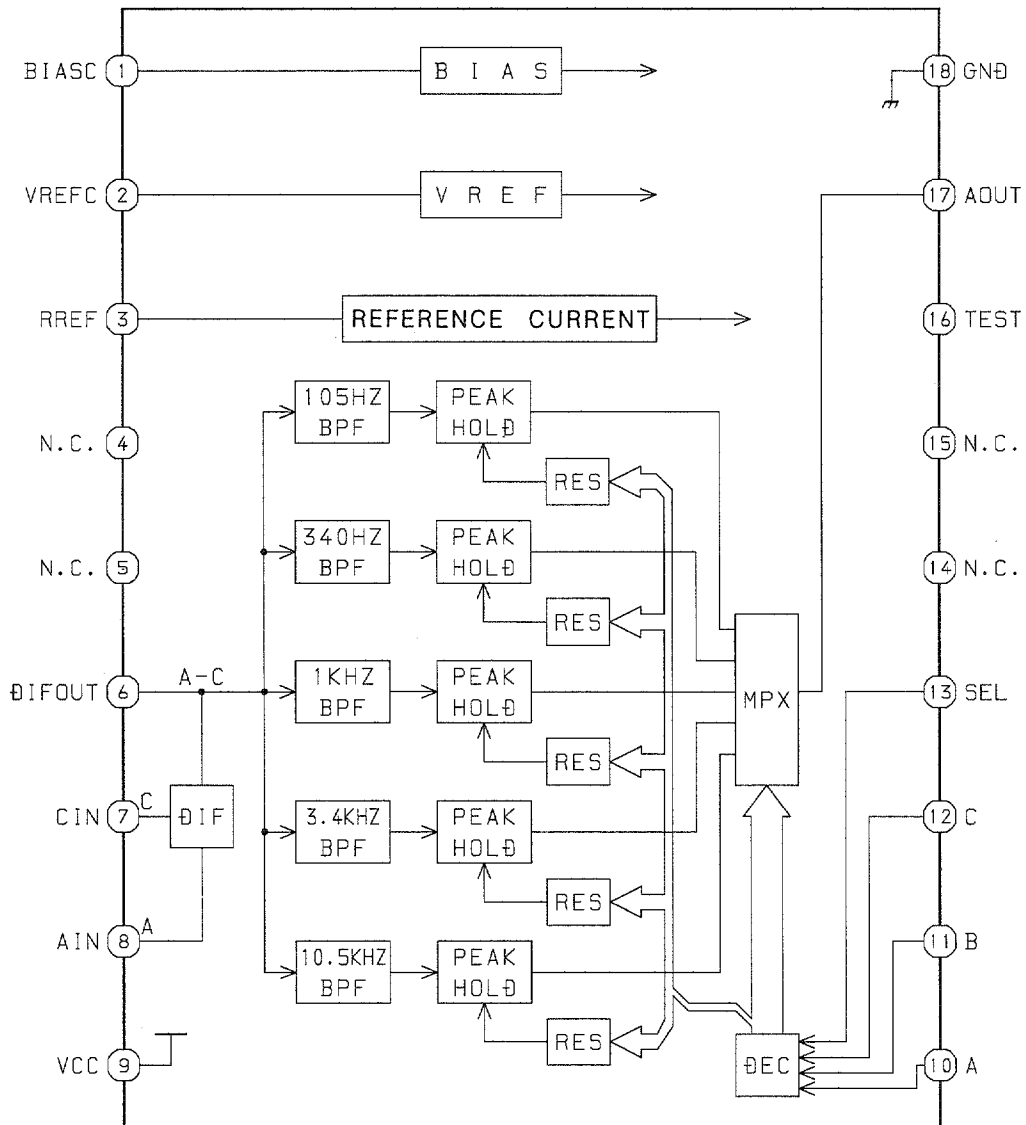

IC, BU9262FS

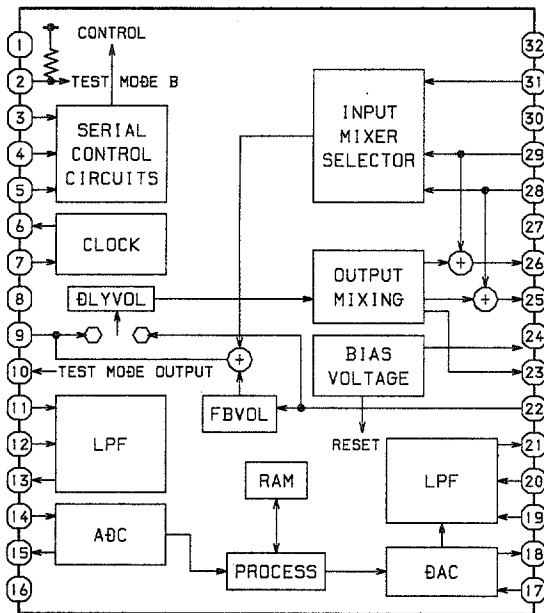

IC, BU4094BF

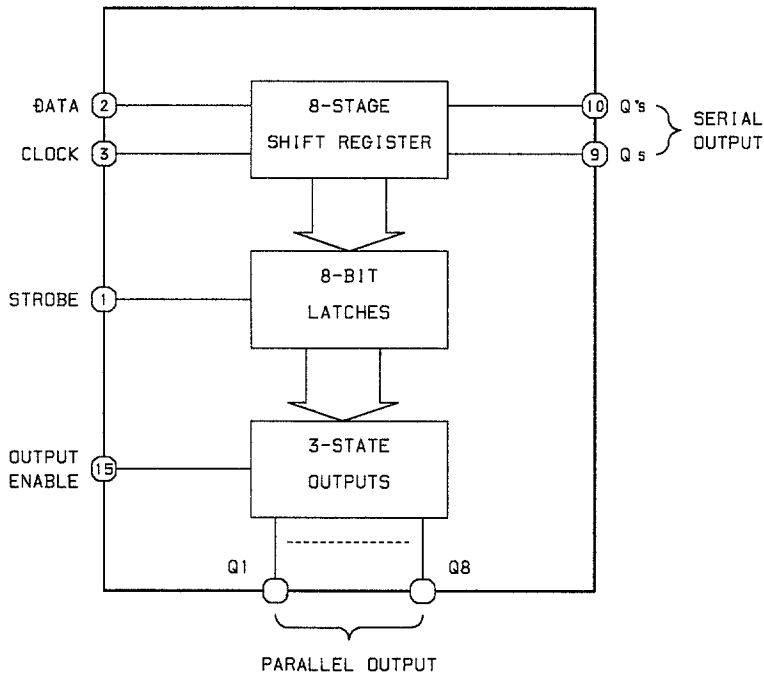


TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
	L	X	X	Z	Z	Q7	NO Chg.
	L	X	X	Z	Z	No Chg.	Qs
	H	L	X	No Chg.	No Chg.	Q7	No Chg.
	H	H	L	L	Qn-1	Q7	No Chg.
	H	H	H	H	Qn-1	Q7	No Chg.
	H	X	X	No Chg.	No Chg.	No Chg.	Qs


Z=High Impedance


X=Don't Care

IC, LC72131

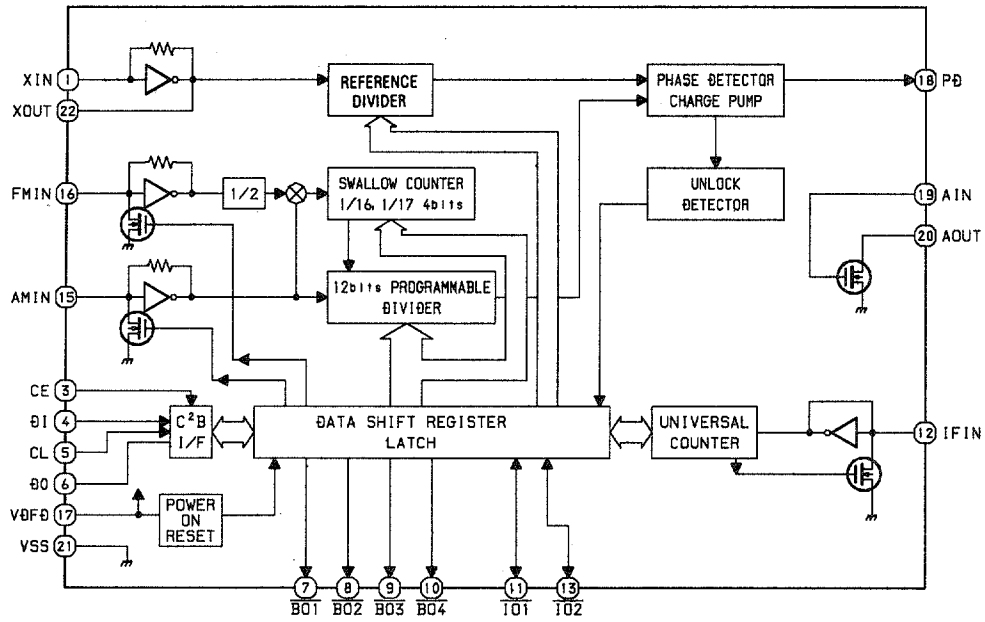

IC, LA1837

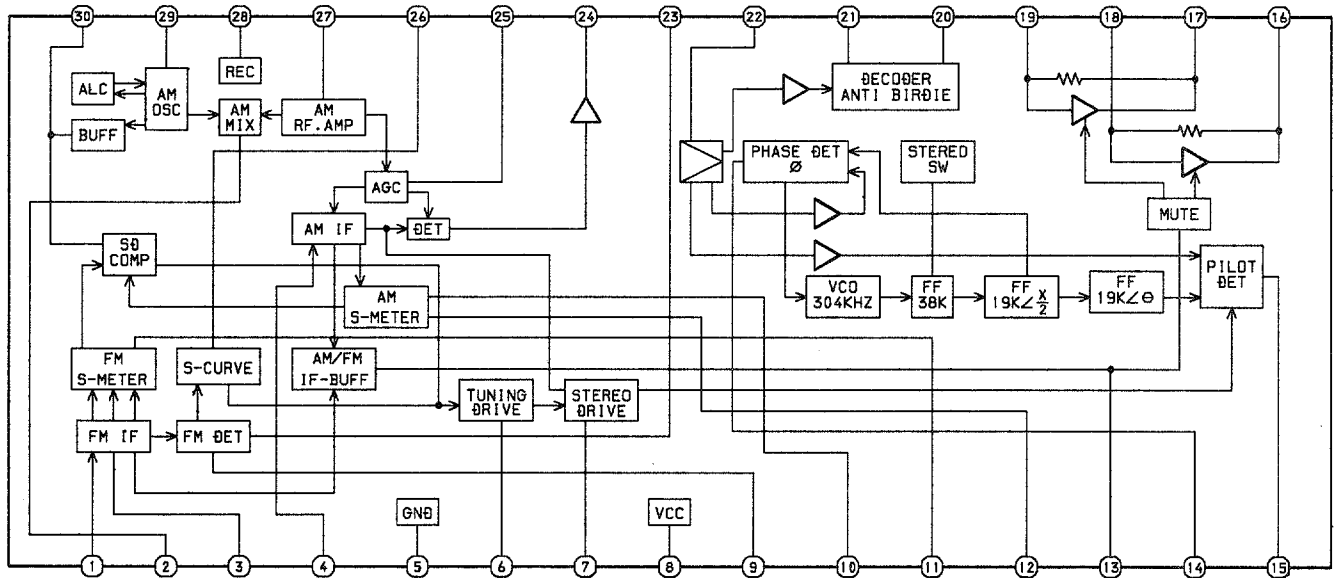

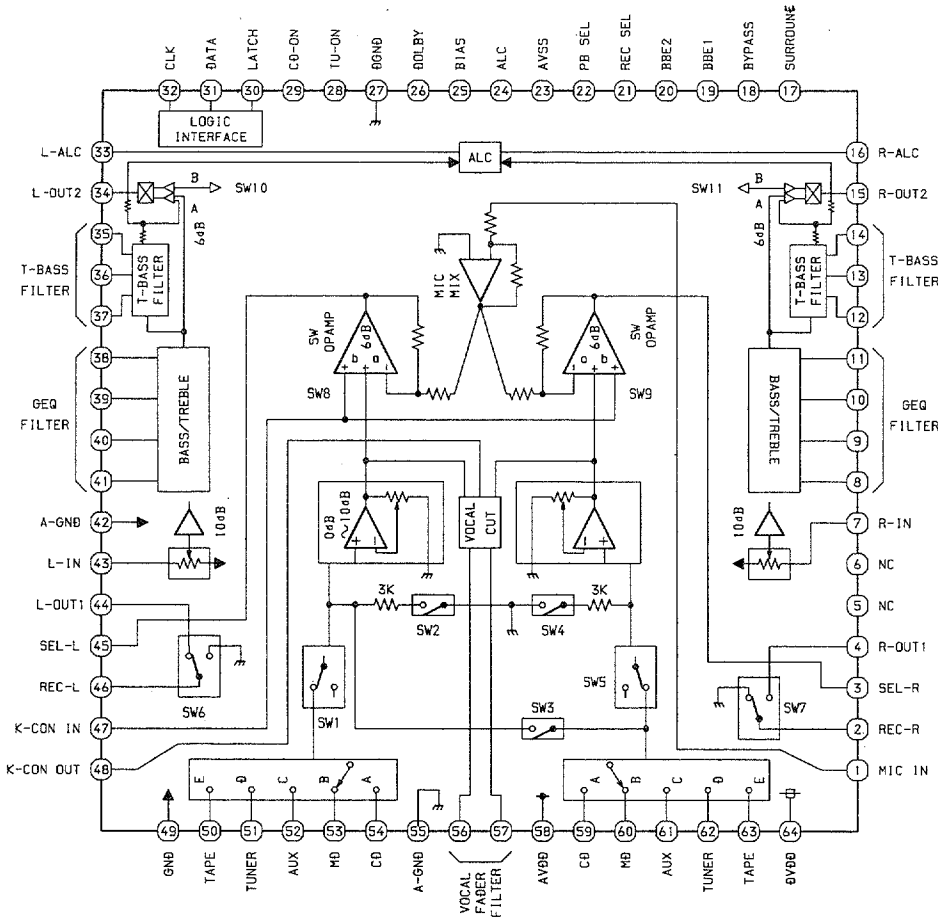

PRACTICAL SERVICE FIGURE

<TUNER SECTION>

<FM SECTION>

IHF Sensitivity : Less than 10 / 9 / 9dB
 (THD 3%) [at 87.5 / 98.0 / 108.0MHz]
 S/N 50dB Quieting sensitivity :
 Less than 35dB
 [at 98.0MHz]
 Signal to noise ratio : Mono : More than 72dB
 Stereo : More than 66dB
 [at 98.0MHz]
 Distortion : Mono : Less than 1.2%
 Stereo : Less than 2.0%
 [at 98.0MHz]
 Auto stop level : 25dB ± 10dB [at 98.0MHz]
 Stereo separation : More than 30dB [at 98.0MHz]
 Intermediate frequency : 10.7MHz

<MW SECTION>

Sensitivity : Less than 60dB
 (S/N 20 dB) [at 600kHz]
 Less than 58dB
 [at 1000kHz]
 Less than 58dB
 [at 1400kHz]
 Signal to noise ratio : More than 36dB
 [at 1000kHz]
 Distortion : Less than 1.5%
 [at 1000kHz]
 Auto stop level : 52dB +10/-15dB
 [at 1000kHz]
 Intermediate frequency : 450kHz

<DECK SECTION>

Tape speed : 3000Hz ± 45Hz
 Wow & flutter : Less than 0.21 / 0.25% (LH/U)
 (W.R.M.S)
 Take-up torque : 30 ~ 55g-cm
 (FWD, REV)
 F.F torque : 75 ~ 180g-cm
 REW torque : 75 ~ 130g-cm (LH)
 75 ~ 180g-cm (U)
 Back tension : 2 ~ 7g-cm
 (FWD, REV)
 PB output level : 300mV ± 3dB
 (SP OUT 2V)
 REC/PB output level : 0 ± 3dB
 (SP OUT 2V)
 Distortion (REC/PB) : Less than 2.0%
 (NORM)
 Noise level (PB) : Less than 2.0mV
 (NORM, SP OUT 2V)
 Noise level (REC/PB) : Less than 3.0mV
 (NORM, SP OUT 2V)
 Erasing ratio : More than 60dB
 (at 125Hz, +10VU)
 Test tape : TTA-602 (NORMAL)


IC DESCRIPTION

IC, LC866560W-5G73


Pin No.	Pin Name	I/O	Description
1	CLK	O	CLOCK output for MAIN,FRONT PWB.
2	DATA	O	DATA output for MAIN, FRONT PWB.
3	STB	O	Latch strobe output for MAIN PWB.
4	O-LED	O	LED ON/OFF output.
5	STB (SHIFT)	O	Latch strobe output for FRONT shift register.
6	CH(GAME)	I	Channel control output for Sound IC. (Not connected)
7	STB (GAME)	O	Latch strobe output for Sound IC. (Not connected)
8	I-NAR (GAME)	I	Sound IC NAR input. (Not connected)
9	PLL-CE	O	PLL IC chip enable output.
10	O-DSC	O	Serial data output for PROLOGIC PWB. (Not connected)
11	I-MIC	I	Microphone input for AUTO VF display.
12	RESET	I	Reset input.
13	I-HP-MUTE	I	Headphone input for MUTE by PROLOGIC.
14	I-DISH	I	CD turntable photo sensor A/D converter input.
15	VSS 1	-	GND.
16	CF 1	-	5.76MHz oscillator circuit.
17	CF 2	-	
18	VDD 1	-	Power supply input.
19	HOLD	I	Power failure detection input. "H" normal operation, "L" main power cannot be turned on.
20	KEY-1	I	KEY input.(A/D)
21	KEY-2	I	
22	KEY-3	I	
23	I-CD SW	I	CD mechanical switch A/D converter input.
24	I-JOG	I	JOG dial A/D level input.
25	I-TU-SIG/MS	I	Tuner signal and deck music sensor signal input.
26	I-SPEANA	I	A/D input for spectrum analyzer display.
27	I-WRQ/RDS-CLK	I	CD WRQ input. TUNER RDS CLOCK input.
28	I-TM-BASE	I	REFERENCE CLOCK input for timer watch.
29	I-RMC	I	System remote control signal input.
30~41	G13~G2	O	FL GRID output G2~G13.
42, 43	P36, P35	O	FL SEGMENT output P35, P36.
44	G1	O	FL GRID output G1.
45	P34	O	FL SEGMENT output P34.
46	VDD3	-	Power supply input.
47	SPEANA-A/P33	O	Spectrum analyzer band switching output /FL segment P33 output.
48	SPEANA-B/P32	O	Spectrum analyzer band switching output /FL segment P32 output.
49	SPEANA-C/P31	O	Spectrum analyzer band switching output /FL segment P31 output.
50	P30/GAME	I/O	FL segment P30 output / GAME input to diode.
51	VP	-	Power supply input for FL display.
52	P29/AM-ST	I/O	FL segment P29 output / AM-ST input to diode.
53	P28/LW	I/O	FL segment P28 output / LW input to diode.
54	P27/SW	I/O	FL segment P27 output / SW input to diode.

Pin No.	Pin Name	I/O	Description
55	P26/FM 1	I/O	FL segment P26 output / FM1 (OIRT) input to diode.
56	P25/RDS	I/O	FL segment P25 output / RDS input to diode.
57	P24/R+1	I/O	FL segment P24 output / RVS+1 way input to diode.
58	P23/DSP	I/O	FL segment P23 output / DSP input to diode.
59	P22/D-SURR	I/O	FL segment P22 output / SURR input to diode.
60	P21/K-CON	I/O	FL segment P21 output / K-CON input to diode.
61	P20/DOLBY	I/O	FL segment P20 output / DOLBY input to diode.
62	P19/5.1CH	I/O	FL segment P19 output / 5.1CH input to diode.
63	P18/AM10K	I/O	FL segment P18 output / AM 10kHz input to diode.
64	P17/CST 2	I/O	FL segment P17 output / DECK2 cassette detect switch data input.
65	P16/REB	I/O	FL segment P16 output / DECK2 side-B record OK switch data input.
66	P15/CAM 2	I/O	FL segment P15 output / DECK2 CAM switch data input.
67	P14/AUTO 1	I/O	FL segment P14 output / DECK1 AUTO stop signal input.
68	P13/AUTO 2	I/O	FL segment P13 output / DECK2 AUTO stop signal input.
69	P12/CAM 1	I/O	FL segment P12 output / DECK1 CAM switch data input.
70	P11/CST 1	I/O	FL segment P11 output / DECK1 cassette detect switch data input.
71	P10/REA	I/O	FL segment P10 output / DECK2 side A record OK switch data input.
72	VDD 4	-	Power supply input.
73 ~ 81	P9 ~ P1	O	FL segment P1 ~ P9 output.
82	O-KSCAN	O	Switch SCAN timing output.
83	TRAYCLOSE	O	CD TRAY CLOSE data output.
84	TRAY-OPEN	O	CD TRAY OPEN data output.
85	DISH-FWD	O	CD turntable forward rotation output.
86	DISH-RVS	O	CD turntable reverse rotation output.
87	O-DATA	O	CD data output.
88	O-CDCLK	O	CD clock output.
89	VSS2	-	GND.
90	VDD2	-	Power supply input.
91	O-POWER	O	System power supply ON/OFF output.
92	O-S-MUTE	O	System mute ON/OFF output.
93	SOL 1	O	DECK 1 solenoid output.
94	SOL 2	O	DECK 2 solenoid output.
95	O-MOTOR	O	DECK MOTOR ON/OFF output.
96	I-IFC/STEREO/SUBQ	I	Tune IF count serial data input /CD SUBQ data input.
97	I-STEREO/ DRF(SQCLK)	I/O	Tuner stereo detected input / CD SQ CLOCK output.
98	I-RDS-DATA/ O-CDCE	I/O	RDS data input / CD chip enable output.
99	RT-A	I	Rotary encoder A input.
100	RT-B	I	Rotary encoder B input.


ADJUSTMENT <TUNER / DECK>

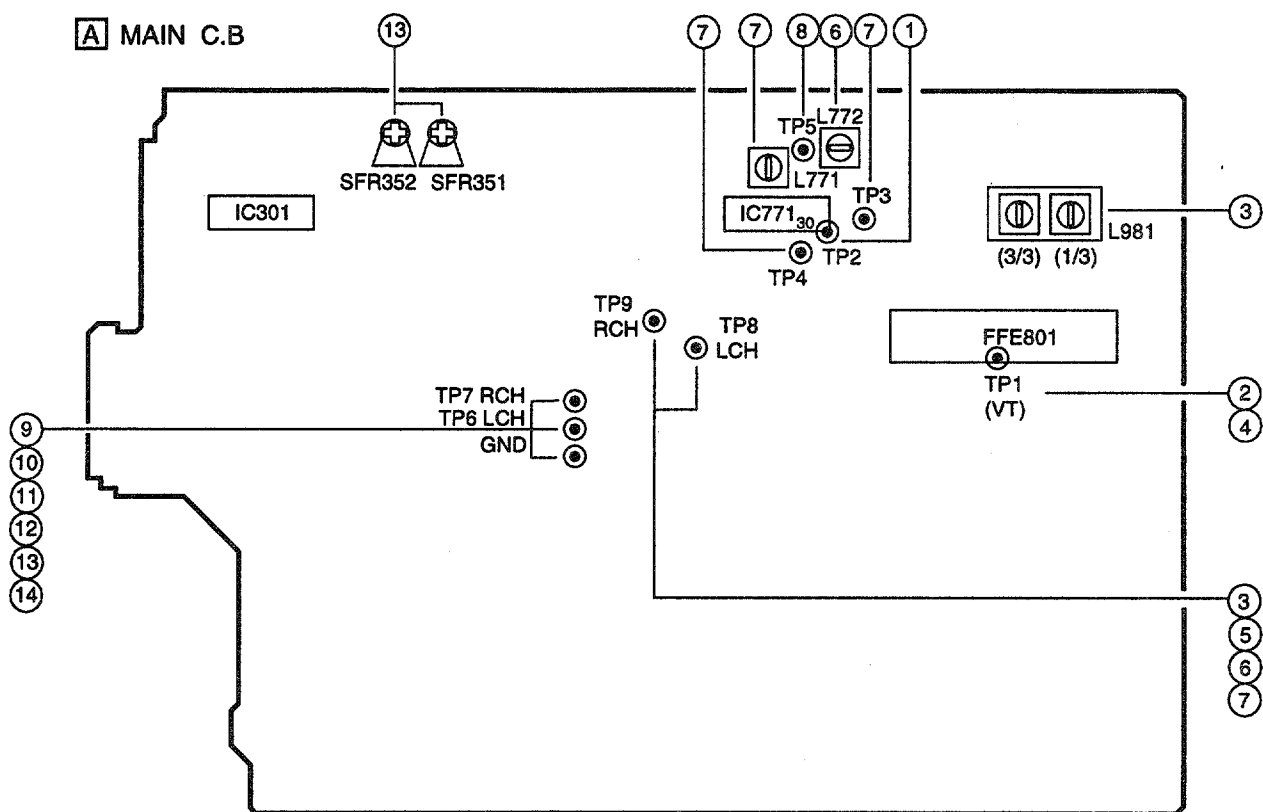


DECK-1 P, DECK-2 R / P / E HEAD (EXCEPT U)
DECK-1 P HEAD (U ONLY)

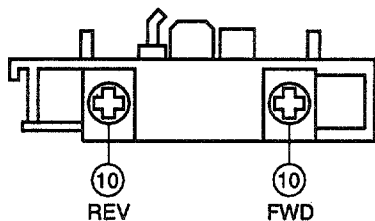

DECK-2 R / P HEAD (U ONLY)

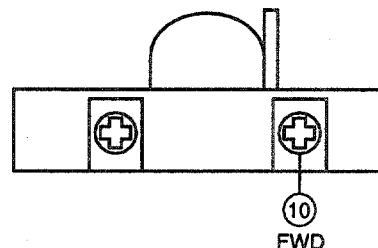

F DECK C.B.

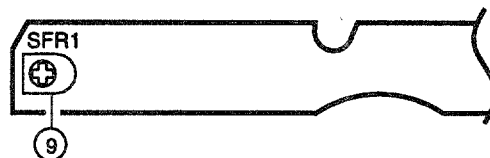

< TUNER SECTION >


1. Clock Frequency Check
Settings : • Test point : TP2
Method : Set to AM 1710kHz and check that the test point is 2160kHz \pm 45Hz.
2. MW VT Check
Settings : • Test point : TP1
Method : Set to MW 1710kHz and MW 530kHz and check that the test point is less than 8.5V(1710kHz) and more than 0.6V(530kHz).
3. MW Tracking Adjustment
Settings : • Test point : TP8(Lch), TP9(Rch)
• Adjustment location :
L981(1/3) 1000kHz
Method : Set to AM 1000kHz and adjust L981 (1/3) to MAX.
4. FM VT Check
Settings : • Test point : TP1
Method : Set to FM 108.0MHz and check that the test point is less than 8.0V.
Set to FM 87.5MHz and check that the test point is more than 0.5V.

5. FM Tracking Check
 Settings : • Test point : TP8(Lch), TP9(Rch)
 Method : Set to FM 98.0MHz and check that the test point is less than 9.0dB.
6. AM(MW) IF Adjustment
 Settings : • Test point : TP8(Lch), TP9(Rch)
 • Adjustment location :
 L772 450kHz
7. DC Balance / Mono Distortion Adjustment
 Settings : • Test point : TP3, TP4 (DC Balance)
 TP8(Lch), TP9(Rch) (Distortion)
 • Adjustment location : L771
 • Input level : 54dB
 Method : Set to FM 98.0MHz and adjust L771 so that the voltage between TP3 and TP4 becomes $0V \pm 0.04V$.
 Next, check that the distortion is less than 1.3%
8. Auto Stop Level Check
 AM(MW)
 Settings : • Input level : 52dB
 • Test point : TP5
 Method : Set to AM 1000kHz and check that the auto stop is at 37 ~ 62dB.
- FM
 Settings : • Input level : 25dB
 • Test point : TP5
 Method : Set to FM 98.0MHz and check that the auto stop is at $25dB \pm 10dB$.

< DECK SECTION >

9. Tape Speed Adjustment
 Settings : • Test tape : TTA-100
 • Test point : TP6(Lch), TP7(Rch)
 • Adjustment location : SFR1
 Method : Play back the test tape and adjust SFR1 so that the frequency counter reads $3000Hz \pm 5Hz$.
10. Head Azimuth Adjustment
 Settings : • Test tape : TTA-330
 • Test point : TP6(Lch), TP7(Rch)
 • Adjustment location : Head azimuth
 adjustment screw
 Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum.
 Next, perform on REV PLAY mode.

11. PB Frequency Response Check (DECK 1, DECK 2)
 Settings : • Test tape : TTA-330
 • Test point : TP6(Lch), TP7(Rch)
 Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 5dB.
12. PB Sensitivity Check (DECK 1, DECK 2)
 Settings : • Test tape : TTA-200
 • Test point : TP6(Lch), TP7(Rch)
 Method : Play back the test tape and check that the output level of the test point is $120mV \pm 3dB$ ($\pm 10mV$).
13. REC/PB Frequency Response Adjustment
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz / 10kHz (LINE IN)
 • Adjustment location : SFR351 (Lch)
 SFR352 (Rch)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes $-20VU(-28dBV)$. Record and play back the 1kHz and 10kHz signals and adjust SFRs so that the output of the 10kHz signals becomes $0dB \pm 0.5dB$ with respect to that of the 1kHz signal.
14. REC/PB Sensitivity Check
 Settings : • Test tape : TTA-602
 • Test point : TP6(Lch), TP7(Rch)
 • Input signal : 1kHz (LINE IN)
 Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP6, TP7 becomes $0VU(-8dBV)$. Record and play back the 1kHz signals and check that the output is $0 \pm 3.5dB$.

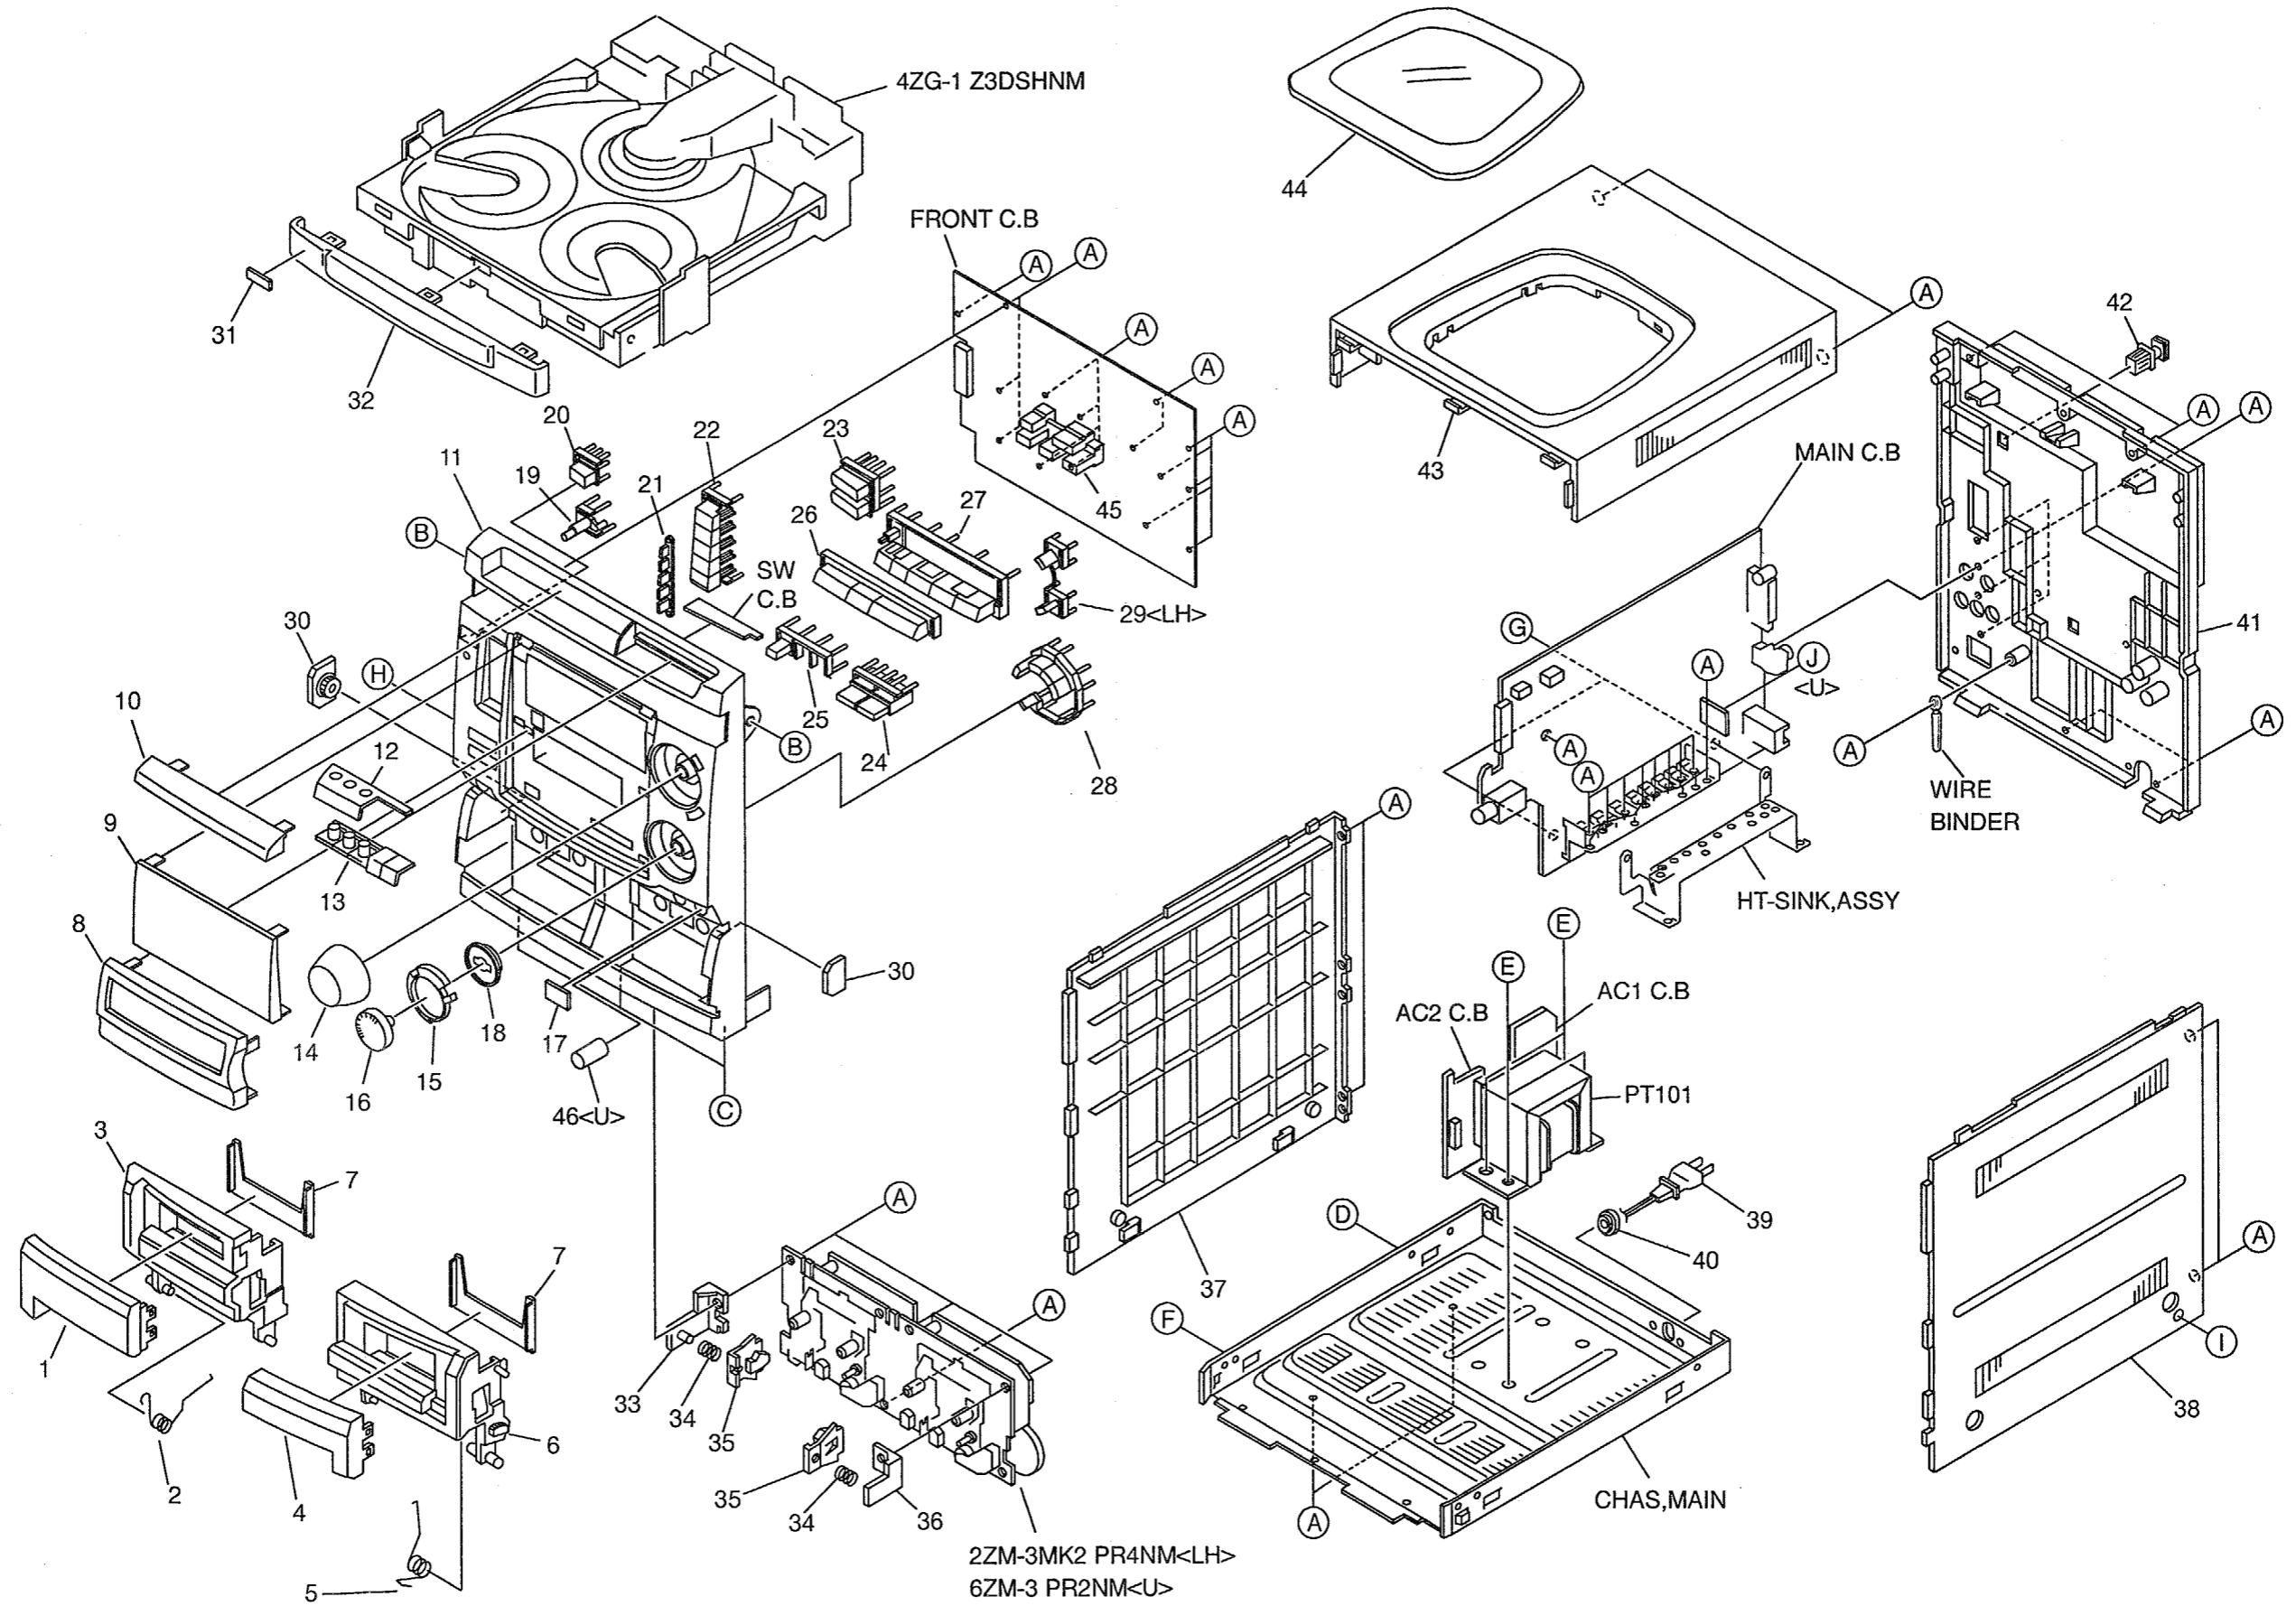


MECHANICAL PARTS LIST 1 / 1

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NBG-009-010		WINDOW,CASS 1	28	88-NF7-026-010		KEY,DSP U1<U>
2	82-NF5-218-010		SPR-T,EJECT 1 (SIN)	29	87-NBG-019-010		KEY,ECHO<LH>
3	88-NF7-003-010		BOX,CASS 1 U	30	87-NF8-220-010		DMPR,150
4	87-NBG-010-010		WINDOW,CASS 2	31	82-NE6-067-010		BADGE,AIWA 30N
5	82-NF5-219-010		SPR-T,EJECT 2 (SIN)	32	88-NF7-005-010		PANEL,TRAY
6	88-NF7-049-010		BOX,CASS 2 H<LH>	33	87-NF4-216-010		HLDR,LOCK 1
6	88-NF7-004-010		BOX,CASS 2 U<U>	34	86-NF9-224-010		SPR-C,LOCK
7	86-NF6-061-010		REFLECTOR,CASS	35	82-NF5-229-010		PLATE,LOCK
8	88-NF7-030-010		PANEL,CONT U<U>	36	87-NF4-217-010		HLDR,LOCK 2
8	88-NF7-047-010		PANEL,CONT U1<LH>	37	88-NF7-063-010		PANEL,LEFT 2<LH>
9	88-NF7-021-010		WINDOW,DISP<U>	37	87-NB8-051-010		PANEL,LEFT U<U>
9	88-NF7-038-010		WINDOW,DISP H<LH>	38	88-NF8-047-010		PANEL,RIGHT 2<LH>
10	87-NBG-008-010		WINDOW,CD	38	88-NF8-048-010		PANEL,RIGHT 2 U<U>
11	88-NF7-046-010		CABI,FR H<LH>	39	87-050-053-010		AC CORD ASSY,U-2<U>
11	88-NF7-001-010		CABI,FR U<U>	39	87-050-079-010		AC-CORD ASSY,E<LH>
12	87-NBG-006-010		PANEL,CD	40	87-085-185-010		BUSHING, AC CORD (E)<LH>
13	88-NF7-062-010		KEY,CD	40	87-085-189-010		BUSHING, CORD (U)<U>
14	87-NBG-011-010		KNOB,RTRY VOL	41	88-NF7-058-010		CABI,REAR LHSTNM<LH>
15	88-NF7-007-010		PANEL,JOG<LH>	41	88-NF7-016-010		CABI,REAR USNM<U>
15	88-NF7-020-010		PANEL,JOG GEQ<U>	42	84-ZG1-245-210		CAP,OPTICAL
16	88-NF7-006-010		KNOB,RTRY JOG	43	87-NF6-021-010		PANEL,TOP
17	81-532-080-010		LABEL, CASS. COMPT	44	86-NF6-101-010		WINDOW TOP UL<U>
18	88-NF7-015-010		REFLECTOR,JOG	44	86-NF6-007-010		WINDOW,TOP<LH>
19	88-NF7-040-010		KEY,DEMO S	45	88-NF7-201-010		GUIDE,OPE
20	87-NBG-015-010		KEY,POWER	46	86-AR5-019-010		KNOB,RTRY MIC<U>
21	87-NBG-023-010		REFLECTOR,FUN	A	87-067-703-010		TAPPING SCREW, BVT2+3-10
22	88-NF7-022-110		KEY,FUN	B	87-721-097-410		QT2+3-12 GLD
23	88-NF7-008-010		KEY,BBE	C	87-067-688-010		BVTT+3-6
24	88-NF7-027-010		KEY,TIMER U	D	87-721-096-410		QT2+3-10 GLD
25	88-NF7-032-010		KEY,EDIT H<LH>	E	87-078-019-010		S-SCREW,IT+4-6
25	88-NF7-025-010		KEY,EDIT U<U>	F	87-591-094-010		QIT+3-6 GOLD
26	88-NF7-028-010		KEY,ASSY OPE U	G	87-NF4-224-010		S-SCREW,IT3B+3-8 CU
27	88-NF7-034-010		KEY,ASSY DEMO H<LH>	H	87-723-096-410		QT2+3-10W/O SLOT BL
27	88-NF7-029-010		KEY,ASSY DEMO U<U>	I	87-B10-091-010		UTT2+3-10 W/O BLK
28	88-NF7-014-010		KEY,DSP<LH>	J	87-067-579-010		TAPPING SCREW, BVT2+3-8<U>

TAPE MECHANISM EXPLODED VIEW 1 / 1 <U: 6ZM-3 PR2NM>

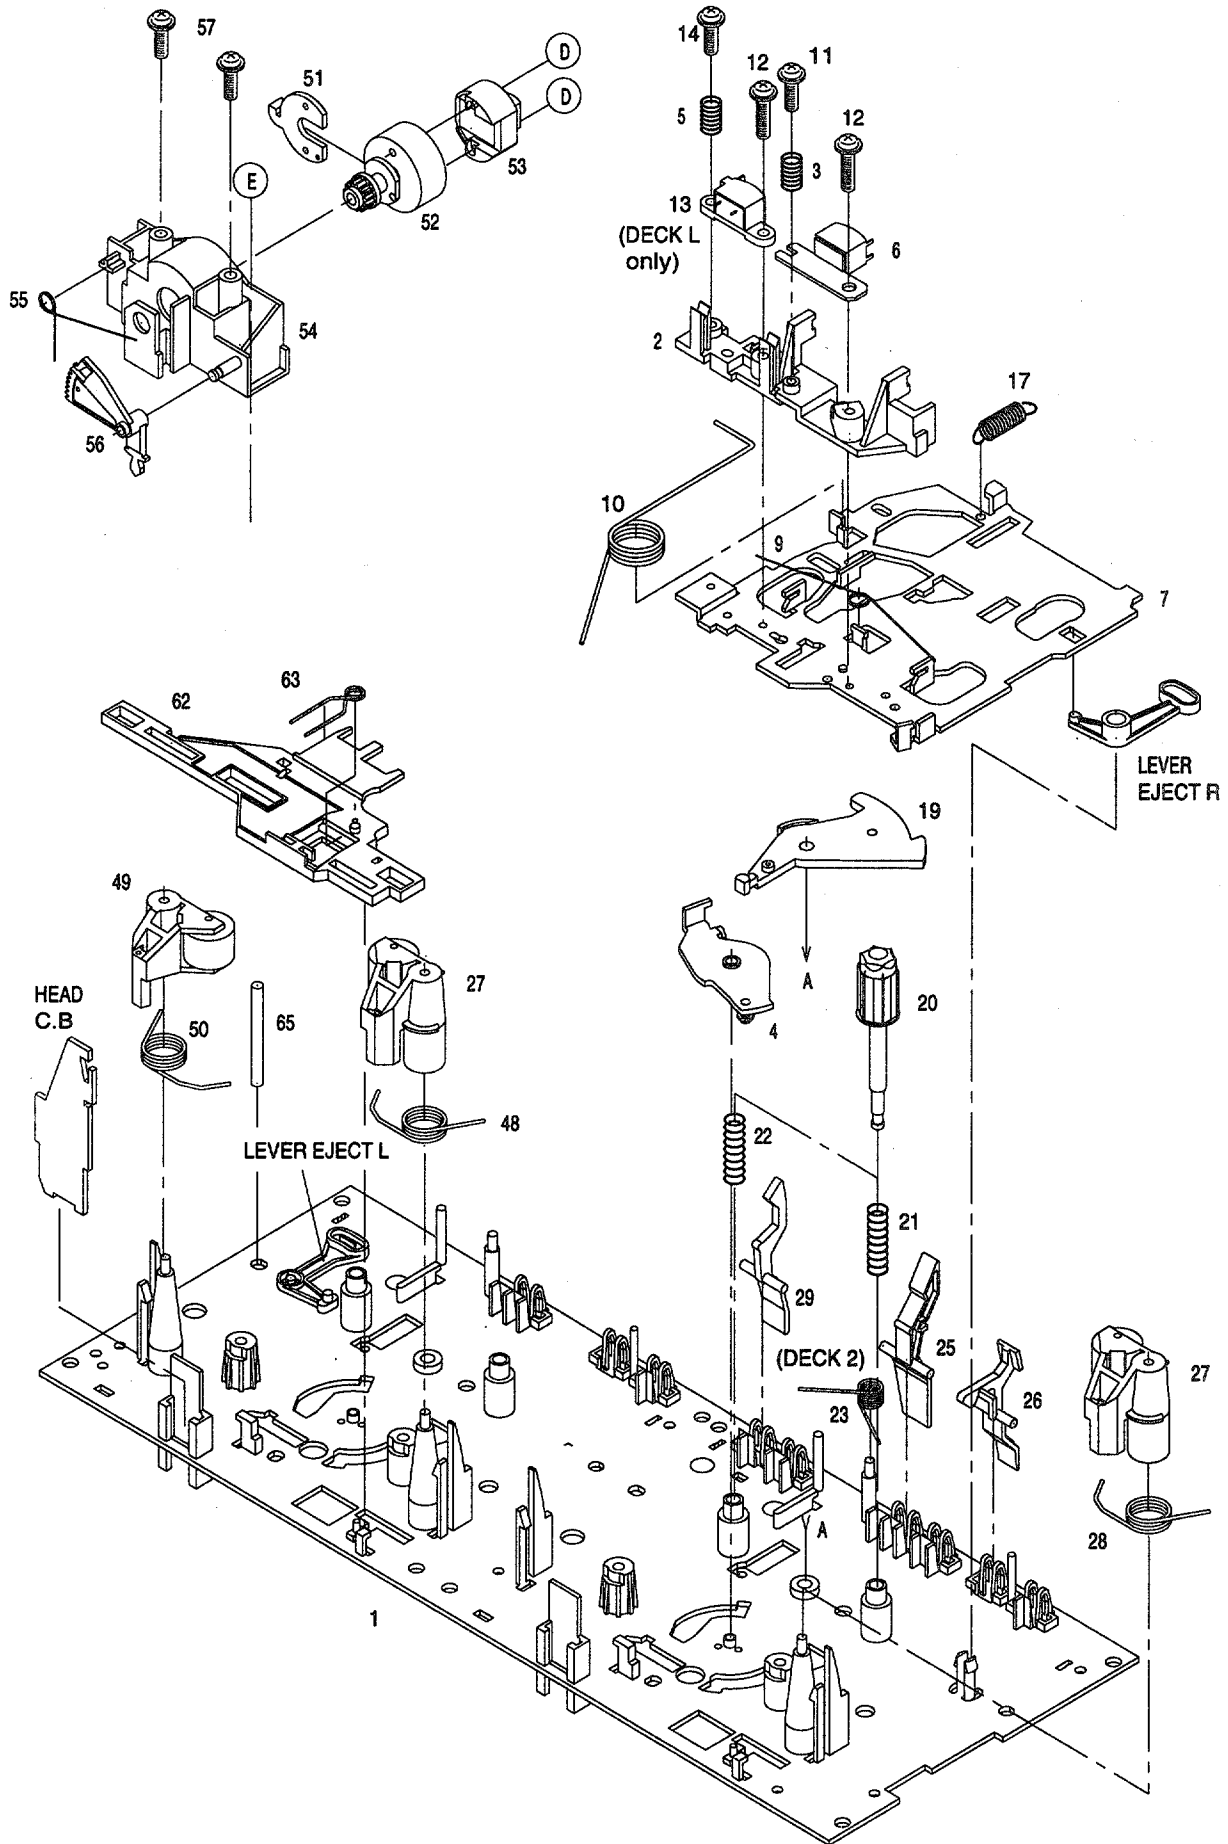


TAPE MECHANISM PARTS LIST 1 / 1 <U: 6ZM-3 PR2NM>


If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-ZM3-215-010		CHAS ASSY, RS	41	82-ZM1-216-319		GEAR, REEL
2	86-ZM3-202-010		BASE, HEAD S	42	86-ZM3-213-010		S-SCREW, HLDR, MOT 3
3	86-ZM3-205-010		SPR-C, RPH S	43	82-ZM1-225-219		GEAR, FR
4	82-ZM1-333-210		PLATE, LINK 2	44	82-ZM1-226-019		GEAR, REW
5	86-ZM3-206-010		SPR-C, EH S	45	82-ZM3-333-310		SLIP DISK ASSY 2
6	87-A90-403-019		HEAD, RPH MS15R	46	82-ZM1-338-010		BELT FR4
7	86-ZM3-201-010		CHAS, HEAD S (DECK L)	47	82-ZM1-349-019		FLY-WHL RW (DECK L)
7	82-ZM3-206-910		CHAS, HEAD (DECK R)	47	82-ZM3-338-010		FLY-WHL R3W (DECK R)
8	87-045-347-019		MOT, SHU2L 70 (M1)	48	82-ZM1-259-210		SPR-T, PINCH R
9	82-ZM1-269-219		SPR-T, BRG	49	82-ZM1-341-110		LVR ASSY, PINCH L2
10	82-ZM1-219-110		SPR-T, LINK	50	82-ZM1-258-210		SPR-T, PINCH L
11	86-ZM3-209-010		S-SCREW, ASIMUTHS	51	82-ZM1-314-110		PLATE, HEAD
12	86-ZM3-207-010		S-SCREW, RPH	52	82-ZM1-208-310		HLDR, HEAD
13	87-A90-404-019		HEAD, EH LE15B	53	87-A90-366-010		HEAD, PH YK50P-BF414
14	86-ZM3-208-010		S-SCREW, EH	54	82-ZM1-207-810		GUIDE TAPE
15	86-ZM3-203-010		HLDR, MOTS	55	82-ZM1-213-010		SPR-T, HEAD
16	82-ZM1-245-210		HLDR, IC	56	82-ZM1-210-110		GEAR, HT
17	82-ZM1-218-019		SPR-E, HB	57	86-ZM4-206-010		S-SCREW AZIMUTH L
18	86-ZM3-214-010		BELT, SUB RR	58	82-ZM1-348-010		FLY-WHL, LW
19	82-ZM1-222-219		LVR, PLAY	59	82-ZM1-236-019		CAPSTAN N 2-41.5
20	82-ZM1-217-419		REEL TABLE	60	82-ZM3-335-210		PULLEY, COUPLER M3
21	82-ZM1-244-519		SPR-C, BT	61	86-ZM1-206-010		BELT, MAIN L
22	82-ZM1-285-410		SPR-C, BT L	62	82-ZM1-266-110		LVR, DIR
23	82-ZM1-257-019		SPR-T, CAS	63	82-ZM1-214-010		SPR-T, DIR
24	82-ZM3-221-010		PULLEY, MOT 2M	64	82-ZM1-255-310		SPR-E, LVR DIR
25	82-ZM1-242-019		LVR, CAS	65	82-ZM3-339-010		SHAFT, COUPLER N3
26	82-ZM1-243-019		LVR, STOP	A	87-251-071-417		U+2.6-4
27	82-ZM1-344-119		LVR ASSY, PINCH	B	80-ZM6-243-019		SH, 1.75-3.6-0.5 SLT
28	86-ZM3-204-010		SPR-T, PINCHDS	C	82-ZM3-334-010		PW, 2.16-6-0.4
29	82-ZM1-240-119		LVR, REC (DECK 2)	D	80-ZM6-207-010		V+1.6-7
30	86-ZM3-210-010		BELT, RS	E	85-ZM3-202-010		S-SCREW TG
32	82-ZM3-305-119		GEAR, CAM M2	F	82-ZM1-288-010		SH, 1.63-3.2-0.5 SLT
33	82-ZM1-227-319		LVR, TRIG	G	87-B10-043-010		W-P, 0.99-4-0.25 SLT
34	82-ZM3-306-110		LVR, FR M2	H	87-571-032-410		VIT+2-3
35	82-ZM1-265-119		SPR-E, TRIG				
36	87-761-073-419		VFT2+2.6-6 W/O SLOT				
37	82-ZM1-239-019		CAPSTAN N 2.2-41.7				
38	82-ZM1-322-019		SPR-T, FR60				
39	82-ZM1-220-219		GEAR, IDLER				
40	82-ZM3-616-019		RING MAGNET 4				

SPRING APPLICATION POSIATION <U: 6ZM-3 PR2NM>

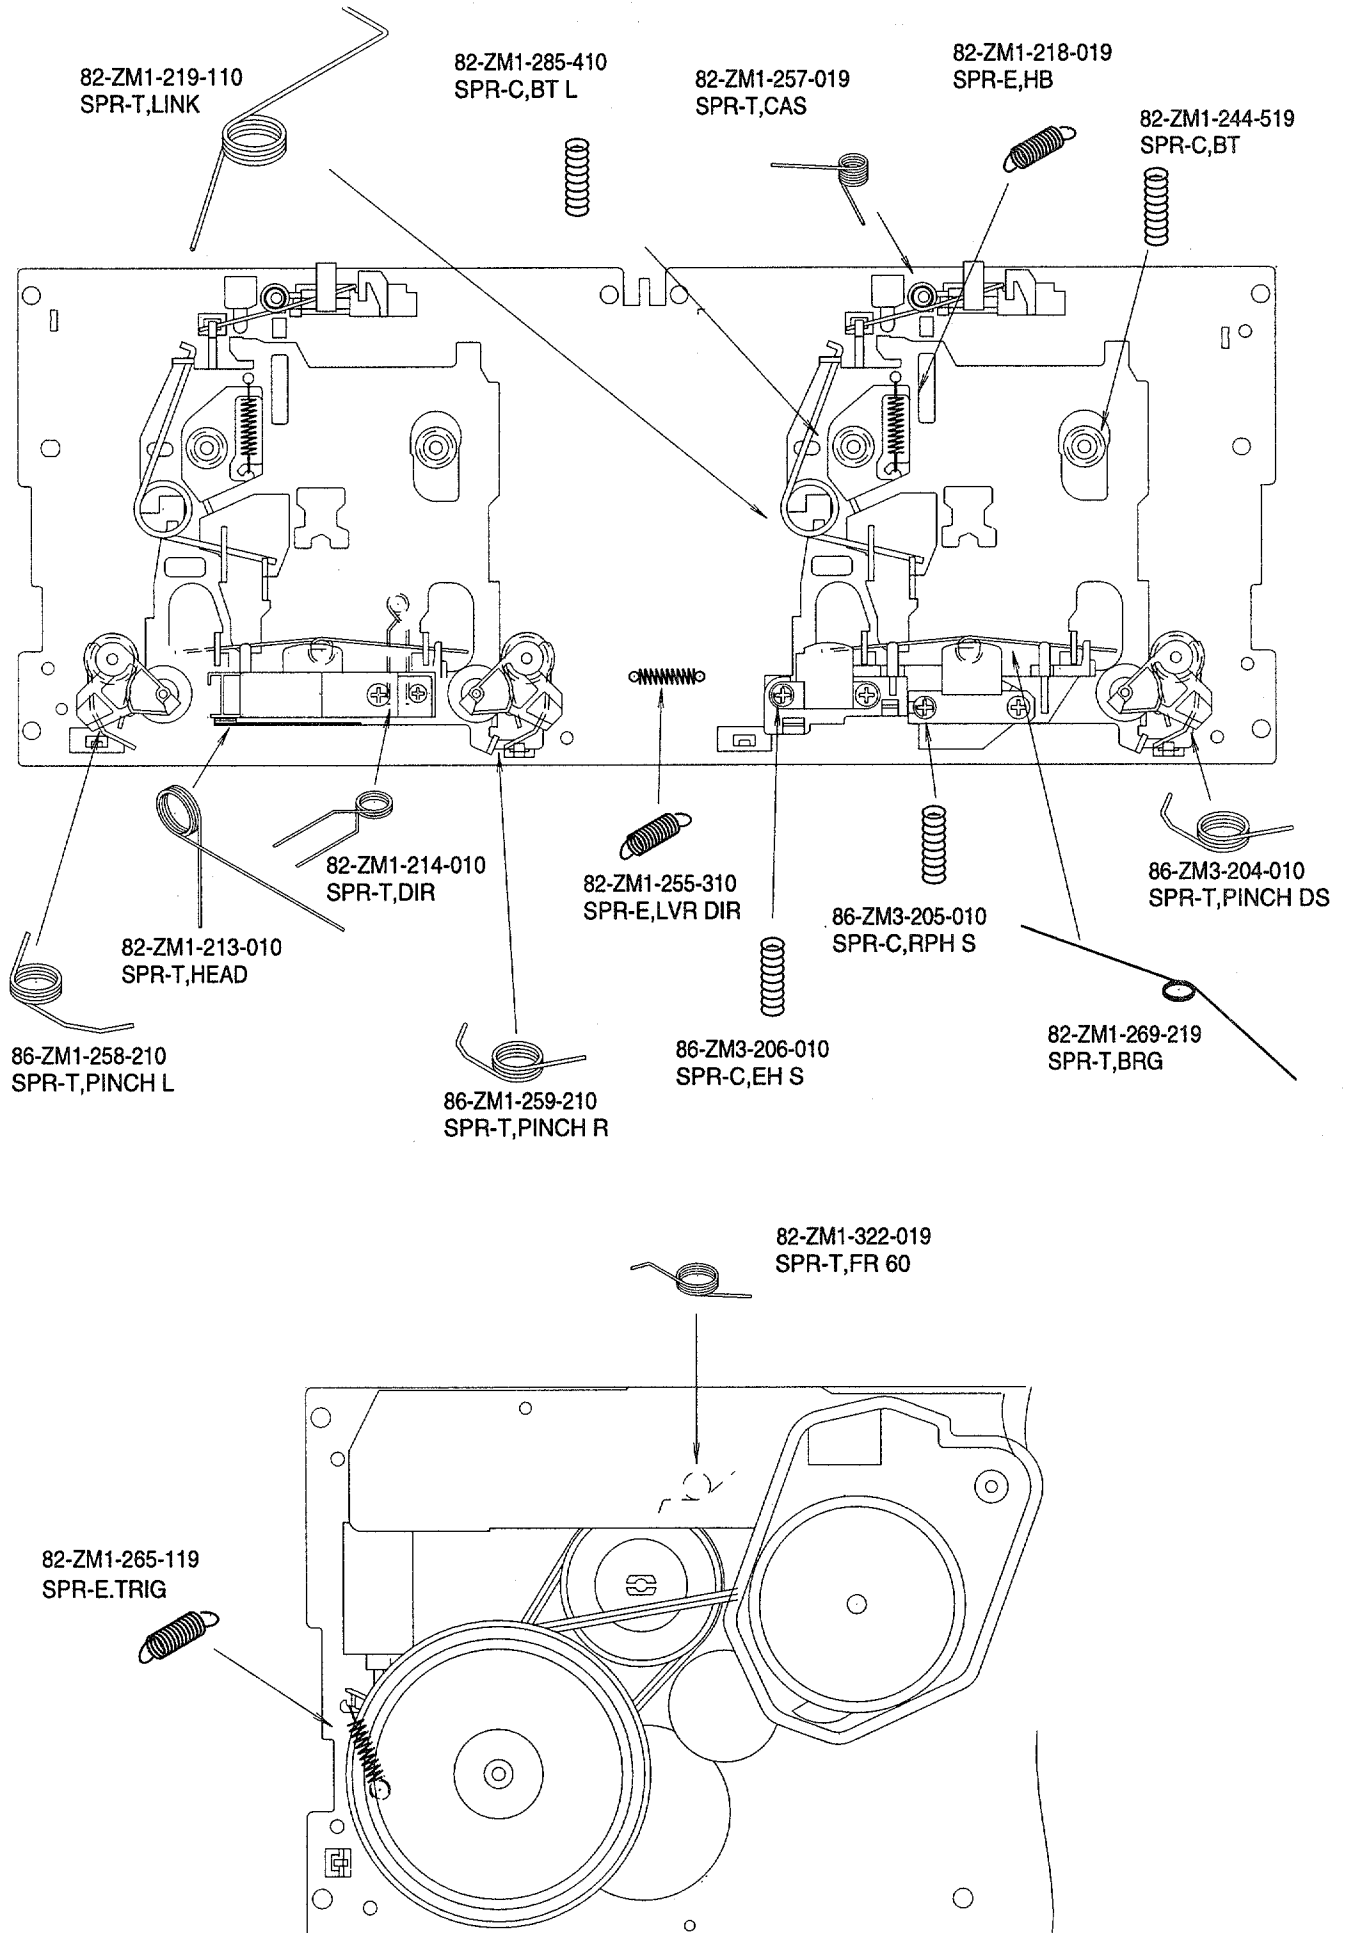

TAPE MECHANISM EXPLODED VIEW 1 / 1 <LH: 2ZM-3MK2 PR4NM>

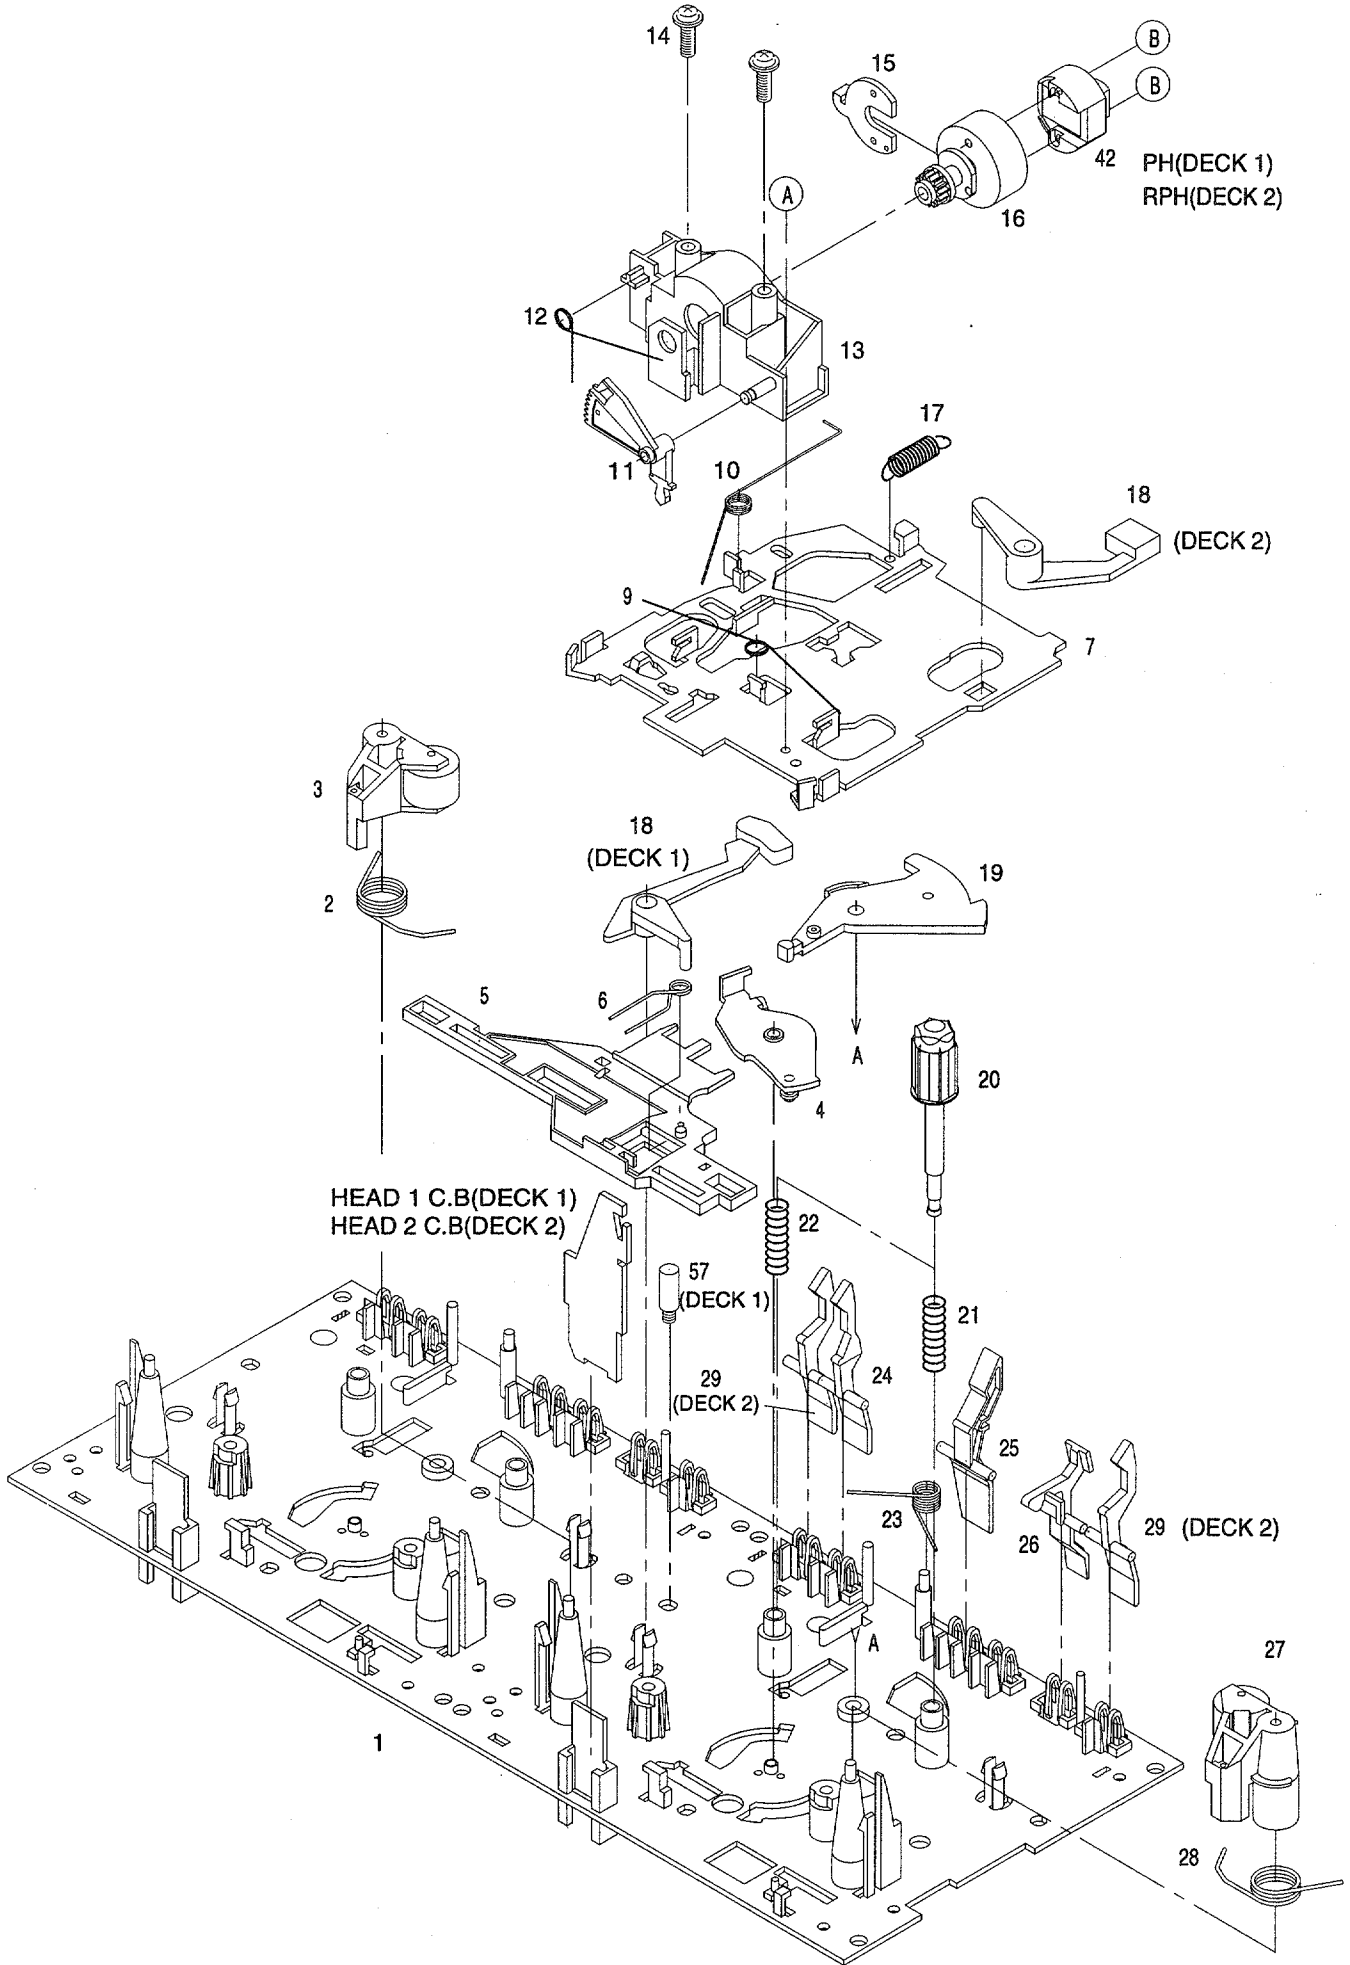


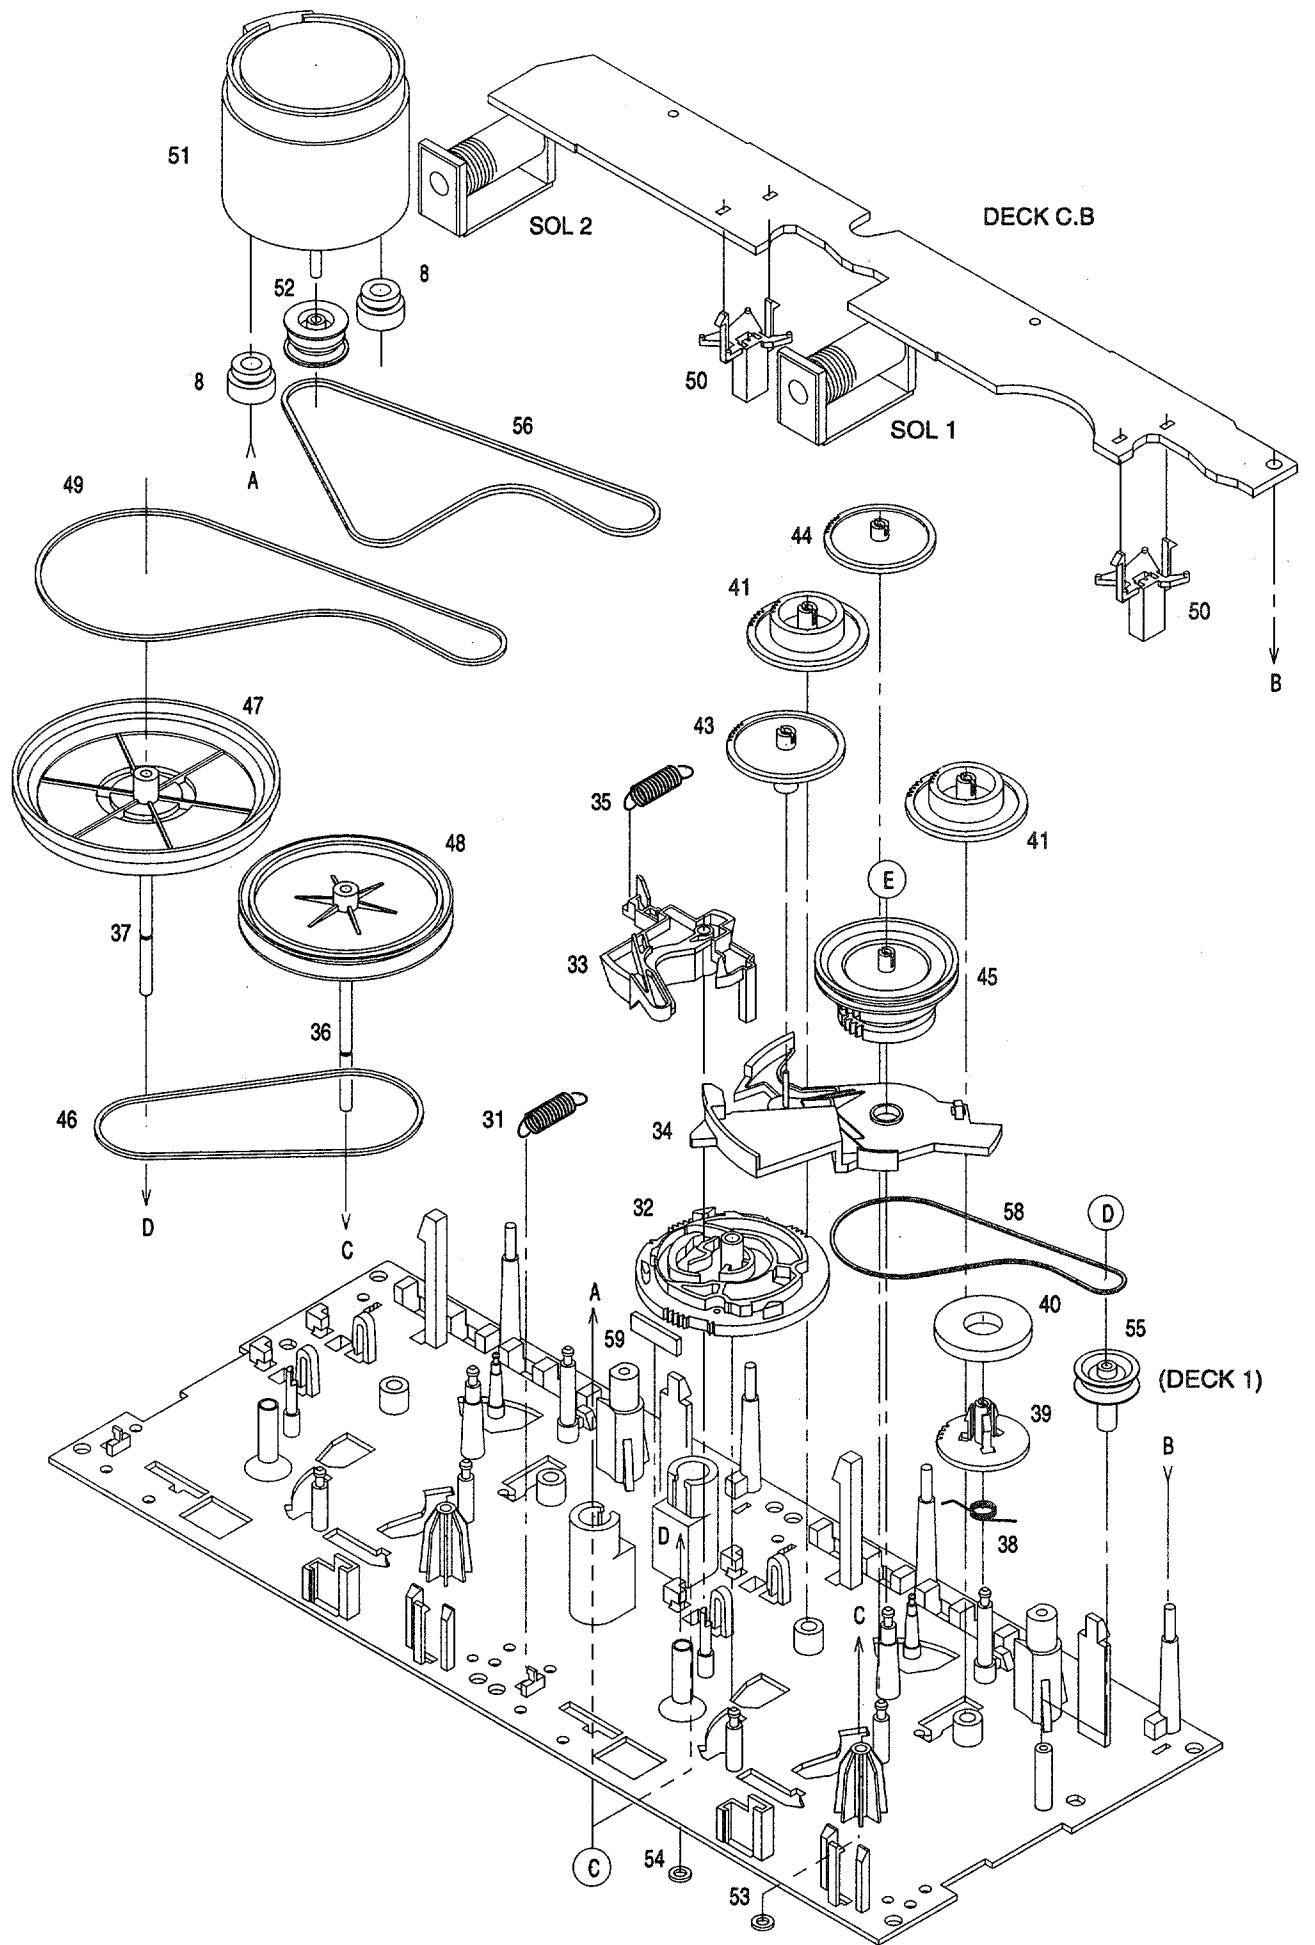


TAPE MECHANISM PARTS LIST 1 / 1 <LH: 2ZM-3MK2 PR4NM>

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	82-ZM3-301-519		CHAS ASSY, M2	36	82-ZM1-236-019		CAPSTAN N 2-41.5
2	82-ZM1-258-110		SPR-T, PINCH L	37	82-ZM1-239-019		CAPSTAN N 2.2-41.7
3	82-ZM1-341-110		LVR ASSY, PINCH L2	38	82-ZM1-322-019		SPR-T, FR60
4	82-ZM1-333-010		PLATE, LINK 2	39	82-ZM1-220-219		GEAR, IDLER
5	82-ZM1-266-11K		LVR, DIR	40	82-ZM3-616-019		RING MAGNET 4
6	82-ZM1-214-010		SPR-T, DIR	41	82-ZM1-216-31K		GEAR, REEL
7	82-ZM1-206-81K		CHAS, HEAD	42	87-A90-319-010		HEAD, PH HADKH2 FPC
8	82-ZM3-307-019		CUSH-G, DIA3.7-8-3.2	42	87-A90-320-010		HEAD, RPH HADKH5 FPC
9	82-ZM1-269-219		SPR-T, BRG	43	82-ZM1-225-21K		GEAR, FR
10	82-ZM1-219-119		SPR-T, LINK	44	82-ZM1-226-019		GEAR, REW
11	82-ZM1-210-119		GEAR, H T	45	82-ZM3-333-310		SLIP DISK ASSY 2
12	82-ZM1-213-019		SPR-T, HEAD	46	82-ZM1-338-010		BELT FR4
13	82-ZM1-207-619		GUIDE, TAPE	47	82-ZM1-349-110		FLY-WHL, R W(DECK 2)
14	86-ZM4-206-010		S-SCREW, AZIMUTH	47	82-ZM3-338-110		FLY-WHL, R3 W(DECK 1)
15	82-ZM1-314-119		PLATE, HEAD	48	82-ZM1-348-010		FLY-WHL, L W(DECK 2)
16	82-ZM1-208-119		HLDR, HEAD	48	82-ZM1-348-010		FLY-WHL, L W(DECK 1)
17	82-ZM1-218-019		SPR-E, HB	49	82-ZM3-329-210		BELT, SBU R2
18	82-ZM1-263-110		LVR, EJECT L (DECK 1)	50	82-ZM1-245-210		HLDR, IC
18	82-ZM1-264-010		LVR, EJECT R (DECK 2)	51	87-045-347-019		MOT, SHU2L 70(M1)
19	82-ZM1-222-21K		LVR, PLAY	52	82-ZM3-221-010		PULLEY, MOT 2M
20	82-ZM1-217-319		REEL TABLE	53	82-ZM1-288-019		SH, 1.63-3.2-0.5 SLT
21	82-ZM1-244-510		SPR-C, BT	54	80-ZM6-243-019		SH, 1.75-3.6-0.5 SLT
22	82-ZM1-285-310		SPR-C, BT L	55	82-ZM3-335-210		PULLEY, COUPLER M3(DECK 1)
23	82-ZM1-257-019		SPR-T, CAS	56	82-ZM3-337-010		BELT, SBU MOT 2
24	82-ZM1-241-319		LVR, MC	57	82-ZM3-339-010		SHAFT, COUPLER N3(DECK 1)
25	82-ZM1-242-019		LVR, CAS	58	86-ZM1-206-010		BELT, MAIN L
26	82-ZM1-243-019		LVR, STOP	59	82-ZM3-340-010		SH, BELT D2
27	82-ZM1-344-110		LVR ASSY, PINCH R2	A	85-ZM3-202-010		S-SCREW, TG
28	82-ZM1-259-110		SPR-T, PINCH R	B	80-ZM6-207-019		V+1.6-7
29	82-ZM1-240-11K		LVR, REC (DECK 2)	C	82-ZM3-318-019		S-SCRW MOTOR M2
31	82-ZM1-255-319		SPR-E, LVR DIR	D	87-B10-043-010		W-P, 0.99-4-0.25 SLT
32	82-ZM3-305-01K		GEAR, CAM M2	E	82-ZM3-334-010		PW, 2.16-6-0.4
33	82-ZM1-227-21K		LVR, TRIG				
34	82-ZM3-306-11K		LVR, FR M2				
35	82-ZM1-265-119		SPR-E, TRIG				

SPRING APPLICATION POSITION <LH: 2ZM-3MK2 PR4NM>

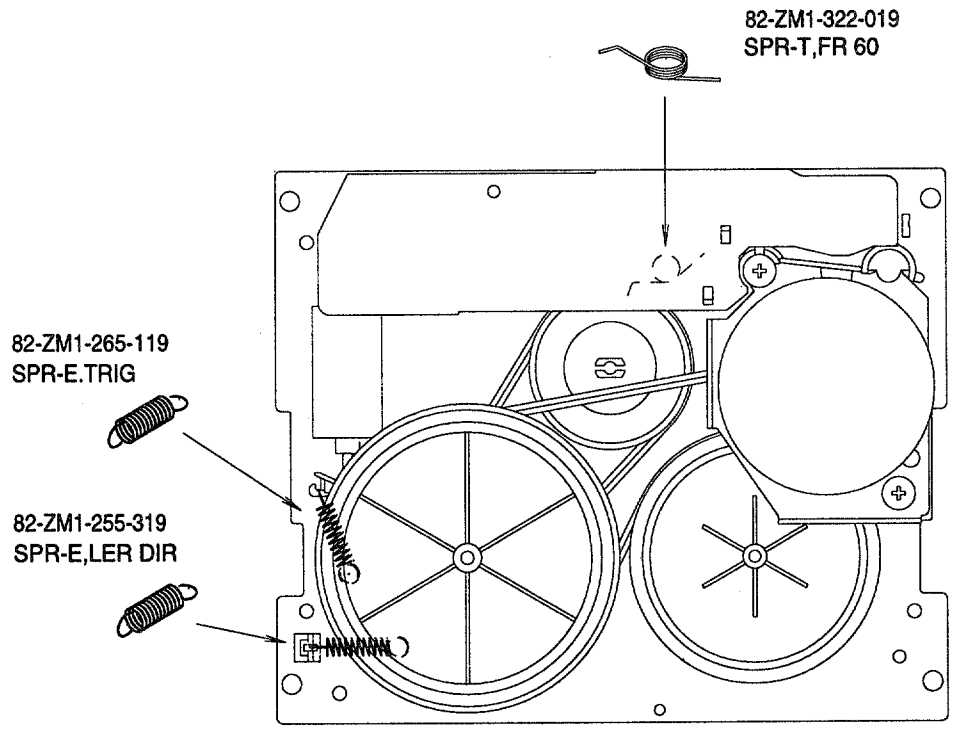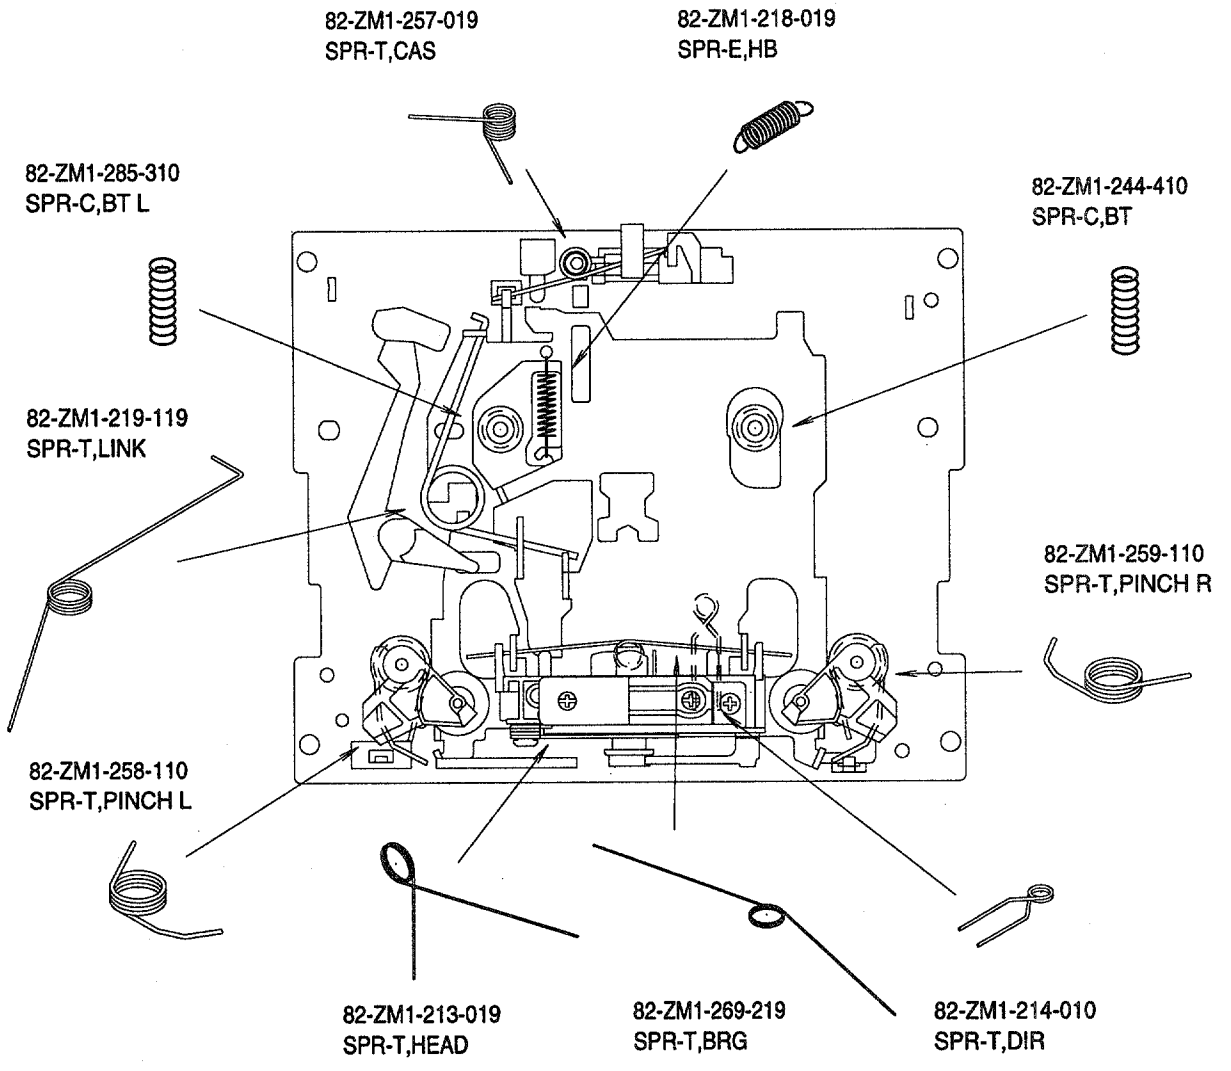


SPEAKER DISASSEMBLY INSTRUCTIONS

Type.1

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

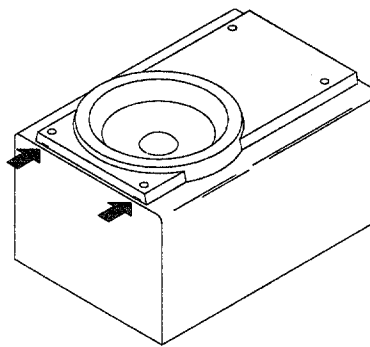

Type.2

グリルフレームを外し、4個のゴムキャップをマイナスドライバーで端の方から持ち上げて外すと中にビスが有りますので、ビスを取り外します。矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットのビスを取り、スピーカーユニットを外してください。


Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

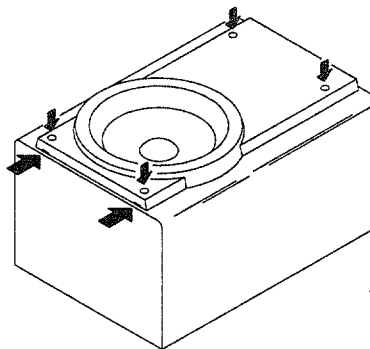

Type.3

矢印の位置にマイナスドライバーを差し込んで、パネルを外します。各々のスピーカーユニットの凹にマイナスドライバーを差し込んで、反時計方向に回転させスピーカーユニットを外してください。スピーカーユニット交換後は時計方向にクリック音がするまで、回転させて取り付けます。

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

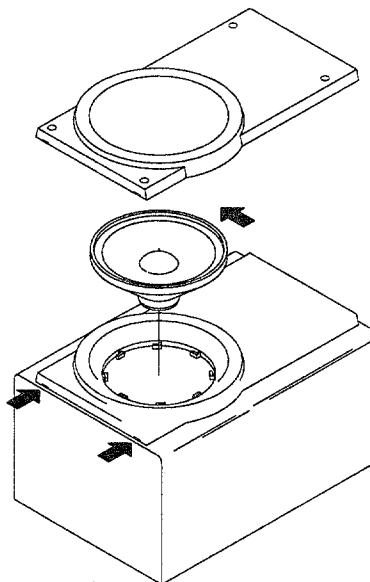

SX-NA502 (YUSTNL) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	86-NS5-012-010		BADGE, AIWA 35
2	87-NS7-608-010		SPKR W140
3	87-NS7-610-010		SPKR T60
4	87-NS7-611-010		CORD, SPKR
5	87-NSH-612-010		SPKR, CERAMIC ASSY
6	88-NSJ-001-010		PANEL, FR

SX-NS503 (YLSTNCC) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSE-602-010		SPKR, W 160
2	87-NSE-604-010		SPKR, T 80
3	87-NSF-610-010		SPKR, CORD
4	88-NSG-001-010		PANEL, FR R
5	88-NSG-002-010		PANEL, FR L
6	88-NSG-004-010		GRILLE, FRAME ASSY
7	88-NSG-610-010		SPKR, CERAMIC ASSY

SX-FNS705 (YLSTCC) SPEAKER PARTS LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	87-NSA-001-010		PANEL, FR
2	87-NSA-002-010		PANEL, SP
3	87-NSA-003-010		PANEL, BA
4	87-NSA-004-010		GRILLE, FRAME ASSY
5	87-NSA-010-010		PROTECTOR
6	87-NS4-611-010		SPKR, CORD
7	85-NS6-611-010		SPKR, CORD Y/B
8	87-NSA-610-010		SPKR, CERAMIC
9	87-NSA-611-010		SPKR, CAP
10	86-NSA-608-010		SPKR, W 160H
11	86-NSA-610-010		SPKR, T 60H
12	86-NS5-606-010		SPKR, 80

ACCESSORIES / PACKAGE LIST

If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	88-NF7-902-010		IB, LH(ESF)M<LH>
1	88-NF7-903-010		IB, U(ESF)M<U>
2	87-006-225-010		AM LOOP ANT NC2
3	87-A90-064-010		FEEDER-ANT, FM(SHS)
△ 4	87-A90-312-010		PLUG, CONVERSION WTN-1157R1<LH>
5	87-NF6-635-010		RC UNIT, RC-7AS06

REFERENCE NAME LIST

ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G-	-
G-	-
G-	-

アイワ株式会社
AIWA CO., LTD.

9301978, 750038

Tokyo Japan