


aiwa



NSX-S6

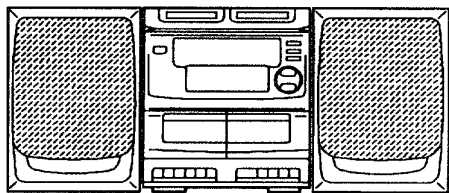

CD CARRING COMPONENT SYSTEM

- BASIC CD MECHANISM : 5ZG-3 D1
- BASIC TAPE MECHANISM: TN-21ZSW-1691

- TYPE: HE

SERVICE MANUAL

SPECIFICATIONS

Tuner section

FM 87.5 - 108.0 MHz
Antenna: FM antenna

SW 3.8 - 12.5 MHz
Antenna: Ferrite bar antenna

MW 531 - 1,602 kHz
(9 kHz steps)
530 - 1,710 kHz
(10 kHz steps)
Antenna: Ferrite bar antenna

Amplifier section

Power output
5W + 5W (4 ohms, EIAJ)

Power requirements
DC 12 V using eight size D (R20) batteries
AC 110-120V/220-240V selectable, 50/60 Hz

Power consumption
34 W

CD player section

Disc Compact disc

Scanning method
Non-contact optical laser (semiconductor laser application)

Laser Semiconductor laser
 $\lambda = 780 \text{ nm}$

Rotation speed
Approx. 500 - 200 rpm/CLV

Error correction
Cross Interleave, Reed Solomon code

Number of channels
2 channels

D/A conversion
1-bit dual

Cassette deck section

Track format
4 tracks, 2 channels

Frequency response
Normal tape: 50-12,000 Hz (EIAJ)

Recording system
AC bias

Erasure system
Magnet erase

Motor DC motor (1)

Heads Deck 1
Recording/playback head (1)
Erasure head (1)
Deck 2
Playback head (1)

Common section

Dimensions (W x H x D)
274 x 301.2 x 281.6 mm
(10⁷/₈ x 11⁷/₈ x 11¹/₈ in.)

Weight 4.15 kg (9.13 lbs.)
(not including batteries)

Speaker

Cabinet type
2-way bass reflex type

Speaker 120 mm cone type woofer
27 mm ceramic type tweeter

Impedance
4 ohms

Allowable max. input
10 W

Dimensions (W x H x D)
211.5 x 292 x 210.8 mm x 2
(8³/₈ x 11¹/₂ x 8³/₈ in.)

Weight 1.55 kg (3.41 lbs.) x 2

● Design and specifications are subject to change without notice.

ACCESSORIES LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".


REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	86-CT4-909-010		IB, CA-DW680M
2	86-CT4-951-010		RC UNIT, RC-6AT01
⚠ 3	87-050-076-010		AC CORD SET ASSY, E
⚠ 4	87-099-789-010		PLUG, CONVERSION IR44

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

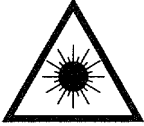

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylit-tävälle näkymättömälle lasersäteilylle.

WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

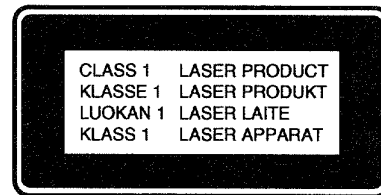


Precaution to replace Optical block

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in the right figure.

CD PICK-UP ASSY P.C.B

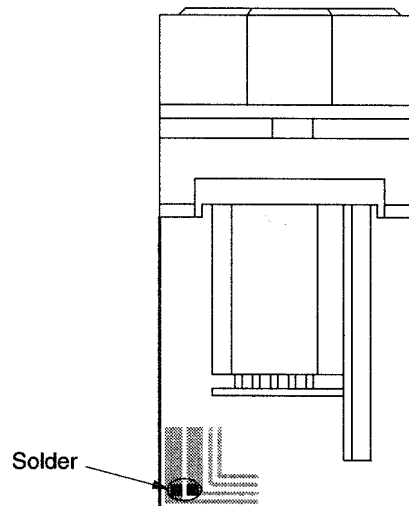

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は” REFERENCE NAME LIST”を参照してください。
 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC				C7	87-A10-182-010		CAP,CER 0.01-50 Z F
				C8	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-A20-186-010	IC, LA9284M		C10	87-A10-133-010		CAP,CER 7P-50 K CH
	87-017-680-010	IC, TA8176SN		C11	87-A10-138-010		CAP,CER 15P-50 K CH
	87-A20-187-010	IC, LC78622E		C12	87-A10-173-010		CAP,CER 560P-50 K Y5E
	87-017-916-010	IC, BU4066BC					
	87-A20-157-010	IC, TA2092N		C13	87-A10-182-010		CAP,CER 0.01-50 Z F
				C15	87-A10-137-010		CAP,CER 12P-50 K CH
	87-001-176-010	IC, TA8102P		C16	87-A10-163-010		CAP,CER 82P-50 K SL
	87-001-536-010	IC, NJM78M05FA		C17	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-002-268-010	IC, LA1851N		C18	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-001-376-010	IC, LC7218					
	87-017-681-010	IC, TA8126S		C21	87-A10-176-010		CAP,CER 1000P-50 K B
				C22	87-018-108-080		CAP,TC-U 20P-50 J SL UP050
	87-020-828-010	IC, BA3416BL		C23	87-A10-170-010		CAP,CER 330P-50 K Y5E
	87-001-440-010	IC, BA15218N		C24	87-A10-177-010		CAP,CER 1500P-50 K B
	87-070-417-010	IC, NJM4558DD		C31	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-017-914-010	IC, BU4094BC					
	87-017-804-010	IC, BU4052BC		C32	87-A10-182-010		CAP,CER 0.01-50 Z F
				C41	87-A10-182-010		CAP,CER 0.01-50 Z F
	86-CT4-638-010	IC, LC867120W-5E13		C56	87-A10-158-010		CAP,CER 33P-50 K SL
	87-070-282-010	IC, BU2092		C57	87-A10-171-010		CAP,CER 390P-50 K Y5E
	87-070-083-010	IC, GP1U281X		C58	87-A10-179-010		CAP,CER 3300P-50 M E
	87-017-787-010	IC, M62412P					
	87-017-564-010	IC, LC7533		C59	87-018-173-080		CAP,TC-U 15P-50 J UJ UP050
				C60	87-018-171-080		CAP,TC-U 10P-50 J UJ UP050
	87-002-848-010	IC, TA8229K		C64	87-010-544-080		CAP,E 0.1-50 M SME
▲	87-001-132-010	PROTECTOR, IC ICP-N38		C101	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-070-416-010	IC, NJU7201L55		C103	87-010-248-080		CAP,E 220-10 SME
▲	87-002-330-010	PROTECTOR, IC ICP-N5					
	87-A20-558-010	C-IC, MM1354AJ		C104	87-010-402-080		CAP,E 2.2-50 M SME
				C105	87-A10-182-010		CAP,CER 0.01-50 Z F
				C106	87-A10-181-010		CAP,CER 6800P-50 M E
				C107	87-A10-168-010		CAP,CER 220P-50 K Y5E
				C108	87-010-401-080		CAP,E 1-50 M SME
TRANSISTOR							
	87-026-463-080	TR, 2SA933SRS					
	89-319-233-080	TR, 2SC19230		C109	87-010-401-080		CAP,E 1-50 M SME
	89-112-965-080	TR, 2SA1296GR		C110	87-010-401-080		CAP,E 1-50 M SME
	87-026-291-080	TR, DTC124XS		C111	87-010-546-080		CAP,E 0.33-50 SME
	87-026-464-080	TR, DTC114TS		C113	87-010-404-080		CAP,E 4.7-50 M SME
				C114	87-A10-169-010		CAP,CER 270P-50 K Y5E
	87-026-572-080	TR, DTA114TS TP					
	87-026-462-080	TR, 2SC1740SRS		C115	87-A10-176-010		CAP,CER 1000P-50 K B
	87-026-486-080	TR, DTA144TS		C116	87-010-405-080		CAP,E 10-50 M SME
	87-026-288-080	TR, DTA143XS		C117	87-A10-182-010		CAP,CER 0.01-50 Z F
	89-501-614-080	FET, 2SK161Y		C131	87-010-545-080		CAP,E 0.22-50 M SME
				C132	87-010-545-080		CAP,E 0.22-50 M SME
	87-026-287-080	TR, DTC143ES					
	87-026-286-080	TR, DTA143ES		C141	87-A10-182-010		CAP,CER 0.01-50 Z F
	89-502-464-080	FET, 2SK246Y		C142	87-010-221-080		CAP,E 470-10 M SME
	89-318-154-080	TR, 2SC1815Y		C151	87-A10-157-010		CAP,CER 27P-50 K SL
	87-026-214-080	TR, DTA114YS		C152	87-A10-157-010		CAP,CER 27P-50 K SL
				C153	87-A10-164-010		CAP,CER 100P-50 K SL
	89-320-011-080	TR, 2SC2001K					
	89-322-405-680	TR, 2SC2240GR		C154	87-A10-164-010		CAP,CER 100P-50 K SL
	89-414-683-080	TR, 2SD1468S		C155	87-A10-164-010		CAP,CER 100P-50 K SL
	89-213-702-010	TR, 2SB1370E		C156	87-A10-164-010		CAP,CER 100P-50 K SL
	89-113-187-080	TR, 2SA1318TU		C157	87-A10-176-010		CAP,CER 1000P-50 K B
				C158	87-A10-176-010		CAP,CER 1000P-50 K B
	89-109-521-080	TR, 2SA952K					
	87-026-290-080	TR, DTA124XS		C159	87-A10-182-010		CAP,CER 0.01-50 Z F
				C160	87-010-263-080		CAP,E 100-10 SME
				C161	87-A10-182-010		CAP,CER 0.01-50 Z F
				C162	87-A10-177-010		CAP,CER 1500P-50 K B
				C163	87-A10-182-010		CAP,CER 0.01-50 Z F
DIODE							
	87-070-345-080	DIODE, 1N4148					
	87-020-605-080	DIODE, 1SS135		C164	87-A10-163-010		CAP,CER 82P-50 K SL
	87-A40-156-010	DIODE, 1N5392		C165	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-017-164-080	ZENER, HZS9A2L		C166	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-017-148-080	ZENER, HZS6A1L		C167	87-015-243-080		CAP,E 3.3-50 LL
				C168	87-A10-182-010		CAP,CER 0.01-50 Z F
	87-017-139-080	ZENER, HZS15-2					
				C171	87-A10-182-010		CAP,CER 0.01-50 Z F
				C191	87-A10-177-010		CAP,CER 1500P-50 K B
MAIN C.B				C192	87-A10-169-010		CAP,CER 270P-50 K Y5E
				C194	87-010-263-080		CAP,E 100-10 SME
				C195	87-010-374-080		CAP,E 47-10 M SME
C1	87-A10-164-010	CAP,CER 100P-50 K SL					
C2	87-A10-131-010	CAP,CER 5P-50 K CH					
C3	87-A10-136-010	CAP,CER 10P-50 K CH		C301	87-018-130-080		CAP,TC U 820P-50 K B UP050
C4	87-A10-172-010	CAP,CER 470P-50 K Y5E		C302	87-018-130-080		CAP,TC U 820P-50 K B UP050
C5	87-A10-132-010	CAP,CER 6P-50 K CH		C303	87-A10-175-010		CAP,CER 820P-50 K Y5E
				C304	87-A10-175-010		CAP,CER 820P-50 K Y5E
C6	87-A10-136-010	CAP,CER 10P-50 K CH		C305	87-010-374-080		CAP,E 47-10 M SME

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C306	87-010-374-080		CAP,E 47-10 M SME	C727	87-010-401-080		CAP,E 1-50 M SME
C307	87-010-382-080		CAP,E 22-25 M SME	C728	87-010-221-080		CAP,E 470-10 M SME
C308	87-010-405-080		CAP,E 10-50 M SME	C729	87-010-263-080		CAP,E 100-10 SME
C309	87-010-545-080		CAP,E 0.22-50 M SME	C730	87-010-248-080		CAP,E 220-10 SME
C310	87-010-545-080		CAP,E 0.22-50 M SME	C741	87-010-263-080		CAP,E 100-10 SME
C311	87-010-248-080		CAP,E 220-10 SME	C831	87-010-265-080		CAP,E 33-16 M SME
C312	87-010-374-080		CAP,E 47-10 M SME	C832	87-010-401-080		CAP,E 1-50 M SME
C315	87-010-401-080		CAP,E 1-50 M SME	CF1	87-008-261-010		FLTR,CFSPE10.7MA5
C316	87-010-401-080		CAP,E 1-50 M SME	CF101	87-008-261-010		FLTR,CFSPE10.7MA5
C317	87-010-382-080		CAP,E 22-25 M SME	CT51	87-011-219-080		TRIMMER,CER 10P 6.15X5.9 VCT51
C318	87-010-382-080		CAP,E 22-25 M SME	CT52	87-011-219-080		TRIMMER,CER 10P 6.15X5.9 VCT51
C319	87-010-405-080		CAP,E 10-50 M SME	IFT101	87-008-470-010		IPT,FM 7.5M 7KM
C320	87-010-405-080		CAP,E 10-50 M SME	J601	87-009-216-010		JACK,3.5 BLK ST W/SW
C321	87-A10-171-010		CAP,CER 390P-50 K Y5E	J602	87-A60-217-010		TERMINAL,SPKR 4P
C322	87-A10-171-010		CAP,CER 390P-50 K Y5E	J801	87-099-715-010		JACK,PIN 2P
C325	87-A10-177-010		CAP,CER 1500P-50 K B	L1	87-003-133-010		COIL,0.22UH
C326	87-A10-177-010		CAP,CER 1500P-50 K B	L2	87-006-217-010		COIL,RF FM 4-1/2TS
C327	87-010-404-080		CAP,E 4.7-50 M SME	L3	87-006-217-010		COIL,RF FM 4-1/2TS
C328	87-A10-176-010		CAP,CER 1000P-50 K B	L4	87-005-847-080		COIL,2.2UH K CECS
C329	87-A10-178-010		CAP,CER 2200P-50 K B	L5	87-006-217-010		COIL,RF FM 4-1/2TS
C331	87-010-374-080		CAP,E 47-10 M SME	L51	87-007-304-010		COIL,OSC MW-H PS
C334	87-A10-167-010		CAP,CER 180P-50 K SL	L52	87-007-298-010		COIL,OSC SW3 PS
C341	87-A10-170-010		CAP,CER 330P-50 K Y5E	L61	86-CT4-611-010		BAR-ANT,AM-H3J
C342	87-A10-170-010		CAP,CER 330P-50 K Y5E	L151	87-A50-073-080		COIL,4.70UH (CECS)
C351	87-010-382-080		CAP,E 22-25 M SME	L152	87-A50-083-080		COIL,47UH (CECS)
C451	87-A10-182-010		CAP,CER 0.01-50 Z F	L191	87-A50-094-010		COIL,OSDC-DC 796KHZ
C452	87-A10-170-010		CAP,CER 330P-50 K Y5E	L192	87-A50-087-080		COIL,100UH (CECS)
C481	87-A10-182-010		CAP,CER 0.01-50 Z F	L301	87-007-322-010		COIL,OSC BIAS 61KHZ
C501	87-010-401-080		CAP,E 1-50 M SME	L601	87-A50-067-080		COIL,1.00UH (CECS)
C502	87-010-401-080		CAP,E 1-50 M SME	L602	87-A50-067-080		COIL,1.00UH (CECS)
C503	87-010-401-080		CAP,E 1-50 M SME	MFT101	87-008-460-010		FLTR,CFCFMT
C504	87-010-401-080		CAP,E 1-50 M SME	R607	87-022-480-080		RES,NF 2.2-1/4W J
C505	87-010-221-080		CAP,E 470-10 M SME	R608	87-022-480-080		RES,NF 2.2-1/4W J
C531	87-010-401-080		CAP,E 1-50 M SME	R821	87-022-480-080		RES,NF 2.2-1/4W J
C532	87-010-401-080		CAP,E 1-50 M SME	R822	87-022-480-080		RES,NF 2.2-1/4W J
C539	87-010-545-080		CAP,E 0.22-50 M SME	SFR101	87-024-173-080		SFR,22K H RH0638C
C540	87-010-545-080		CAP,E 0.22-50 M SME	SFR102	87-024-172-080		SFR,10K DIA6V
C541	87-010-260-080		CAP,E 47-25 SME	SFR751	87-024-169-080		SFR,2.2K H RH0638C
C571	87-010-401-080		CAP,E 1-50 M SME	SW301	87-A90-089-010		SW,SL 1-6-2
C572	87-010-401-080		CAP,E 1-50 M SME	VC1	87-002-730-080		VARI-CAP,SVC203SPA
C573	87-010-401-080		CAP,E 1-50 M SME	VC2	87-002-730-080		VARI-CAP,SVC203SPA
C574	87-010-401-080		CAP,E 1-50 M SME	VC3	87-002-730-080		VARI-CAP,SVC203SPA
C579	87-010-374-080		CAP,E 47-10 M SME	VC51	81-754-634-010		VARI-CAP,KV1260
C580	87-010-401-080		CAP,E 1-50 M SME	VC52	81-754-634-010		VARI-CAP,KV1260
C581	87-010-544-080		CAP,E 0.1-50 M SME	X101	87-030-218-010		VIB,CER 457KHZ KBR HS15
C582	87-010-371-080		CAP,E 470-6.3 M SME	X151	87-030-243-010		VIB,XTAL 7.200MHZ NR-18
C583	87-010-221-080		CAP,E 470-10 M SME				
C591	87-010-401-080		CAP,E 1-50 M SME				
C592	87-A10-182-010		CAP,CER 0.01-50 Z F				
C593	87-A10-182-010		CAP,CER 0.01-50 Z F				
C594	87-010-401-080		CAP,E 1-50 M SME				
C605	87-A10-178-010		CAP,CER 2200P-50 K B				
C606	87-A10-178-010		CAP,CER 2200P-50 K B				
C607	87-010-406-080		CAP,E 22-50 M SME				
C608	87-010-406-080		CAP,E 22-50 M SME				
C609	87-010-260-080		CAP,E 47-25 SME				
C613	87-010-263-080		CAP,E 100-10 SME				
C614	87-010-263-080		CAP,E 100-10 SME				
C615	87-010-376-090		CAP,E 2200-10 M SME				
C616	87-010-376-090		CAP,E 2200-10 M SME				
C621	87-010-260-080		CAP,E 47-25 SME				
C622	87-010-387-080		CAP,E 470-25 M SME				
C625	87-010-405-080		CAP,E 10-50 M SME				
C641	87-010-248-080		CAP,E 220-10 SME				
C720	87-010-405-080		CAP,E 10-50 M SME				
C721	87-010-928-090		CAP,E 4700-25 M SMG				
C722	87-010-385-080		CAP,E 220-25 M SME				
C723	87-010-248-080		CAP,E 220-10 SME				
C724	87-A10-182-010		CAP,CER 0.01-50 Z F				
C726	87-010-404-080		CAP,E 4.7-50 M SME				
C401	87-A10-165-010		CAP,CER 120P-50 K SL				
C402	87-A10-178-010		CAP,CER 2200P-50 K B				
C404	87-A10-166-010		CAP,CER 150P-50 K SL				
C405	87-010-401-080		CAP,E 1-50 M SME				
C406	87-010-545-080		CAP,E 0.22-50 M SME				
C408	87-010-401-080		CAP,E 1-50 M SME				
C409	87-A10-176-010		CAP,CER 1000P-50 K B				
C410	87-010-248-080		CAP,E 220-10 SME				
C411	87-010-374-080		CAP,E 47-10 M SME				
C412	87-010-405-080		CAP,E 10-50 M SME				
C501	87-010-248-080		CAP,E 220-10 SME				
C503	87-010-401-080		CAP,E 1-50 M SME				
C504	87-010-400-080		CAP,E 0.47-50 M SME				
C506	87-A10-140-010		CAP,CER 22P-50 K CH				
C507	87-A10-140-010		CAP,CER 22P-50 K CH				
C508	87-A10-159-010		CAP,CER 39P-50 K SL				
C509	87-A10-160-010		CAP,CER 47P-50 K SL				
C510	87-A10-158-010		CAP,CER 33P-50 K SL				
C512	87-A10-176-010		CAP,CER 1000P-50 K B				
C513	87-010-405-080		CAP,E 10-50 M SME				


REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C517	87-010-263-080		CAP,E 100-10 SME	C12	87-010-401-080		CAP,E 1-50 M SME
C518	87-010-545-080		CAP,E 0.22-50 M SME	C14	87-010-405-080		CAP,E 10-50 M SME
C519	87-A10-176-010		CAP,CER 1000P-50 K B	C16	87-010-545-080		CAP,E 0.22-50 M SME
C520	87-A10-182-010		CAP,CER 0.01-50 Z F	C17	87-A10-170-010		CAP,CER 330P-50 K Y5E
C521	87-010-374-080		CAP,E 47-10 M SME	C30	87-A10-168-010		CAP,CER 220P-50 K Y5E
C522	87-010-374-080		CAP,E 47-10 M SME	C31	87-010-400-080		CAP,E 0.47-50 M SME
D514	87-A40-162-010		LED,L-1154SRD	C32	87-010-263-080		CAP,E 100-10 SME
D519	87-A40-162-010		LED,L-1154SRD	C33	87-010-402-080		CAP,E 2.2-50 M SME
D520	87-A40-162-010		LED,L-1154SRD	C36	87-010-374-080		CAP,E 47-10 M SME
D521	87-A40-162-010		LED,L-1154SRD	C37	87-010-404-080		CAP,E 4.7-50 M SME
D522	87-A40-162-010		LED,L-1154SRD	C40	87-A10-127-010		CAP,CER 1P-50 K CH
D523	87-A40-162-010		LED,L-1154SRD	C42	87-A10-140-010		CAP,CER 22P-50 K CH
D524	87-A40-162-010		LED,L-1154SRD	C48	87-A10-157-010		CAP,CER 27P-50 K SL
D525	87-A40-162-010		LED,L-1154SRD	C50	87-A10-172-010		CAP,CER 470P-50 K Y5E
D526	87-A40-162-010		LED,L-1154SRD	C54	87-A10-168-010		CAP,CER 220P-50 K Y5E
D527	87-A40-162-010		LED,L-1154SRD	C57	87-A10-140-010		CAP,CER 22P-50 K CH
D528	87-A40-162-010		LED,L-1154SRD	C58	87-A10-140-010		CAP,CER 22P-50 K CH
D529	87-A40-161-010		LED,L-1154SGD	C59	87-010-263-080		CAP,E 100-10 SME
D530	87-A40-161-010		LED,L-1154SGD	C62	87-010-374-080		CAP,E 47-10 M SME
D531	87-A40-161-010		LED,L-1154SGD	C63	87-010-405-080		CAP,E 10-50 M SME
D532	87-A40-161-010		LED,L-1154SGD	C64	87-010-405-080		CAP,E 10-50 M SME
D533	87-A40-161-010		LED,L-1154SGD	C65	87-A10-170-010		CAP,CER 330P-50 K Y5E
D534	87-A40-161-010		LED,L-1154SGD	C66	87-A10-170-010		CAP,CER 330P-50 K Y5E
D535	87-A40-161-010		LED,L-1154SGD	C68	87-010-401-080		CAP,E 1-50 M SME
D536	87-A40-161-010		LED,L-1154SGD	C69	87-A10-166-010		CAP,CER 150P-50 K SL
D537	87-A40-161-010		LED,L-1154SGD	C76	87-A10-102-080		CAP,E 1000-10 REA
D550	87-A40-161-010		LED,L-1154SGD	C77	87-010-263-080		CAP,E 100-10 SME
J401	82-NF7-630-010		JACK,3.5 MO	C81	87-010-404-080		CAP,E 4.7-50 M SME
L401	87-A50-067-080		COLL,1.00UH (CECS)	C82	87-010-221-080		CAP,E 470-10 M SME
L500	87-003-171-010		COLL,15UH FL5R100	C84	87-010-263-080		CAP,E 100-10 SME
L501	87-005-849-080		COIL,10UH K CECS	C89	87-010-263-080		CAP,E 100-10 SME
L502	87-003-171-010		COIL,15UH FL5R100	CN1	86-CT4-623-010		CONN ASSY,6P CD1
LCD501	86-CT4-601-010		LCD,6CT-4	CN2	88-802-082-220		CONN ASSY,8P RED
SW570	87-036-170-080		SW,TACT SKHVBA	CN3	88-802-092-230		CONN ASSY,9P ORA
SW571	87-036-170-080		SW,TACT SKHVBA	CN6	88-802-062-660		CONN ASSY,6P BLU
SW572	87-036-170-080		SW,TACT SKHVBA	FB1	87-008-474-080		F-BEAD, BL02RNI-R62T2 EMI
SW573	87-036-170-080		SW,TACT SKHVBA	FB2	87-008-372-080		FLTR,EMIBL01 RN1
SW574	87-036-170-080		SW,TACT SKHVBA	FB3	87-008-372-080		FLTR,EMIBL01 RN1
SW575	87-036-170-080		SW,TACT SKHVBA	X1	81-592-641-080		FLTR, 16.93MHZ
SW576	87-036-170-080		SW,TACT SKHVBA				
SW577	87-036-170-080		SW,TACT SKHVBA				
SW581	87-036-170-080		SW,TACT SKHVBA				
SW582	87-036-170-080		SW,TACT SKHVBA				
SW583	87-036-170-080		SW,TACT SKHVBA				
SW584	87-036-170-080		SW,TACT SKHVBA				
SW585	87-036-170-080		SW,TACT SKHVBA				
SW586	87-036-170-080		SW,TACT SKHVBA				
SW587	87-036-170-080		SW,TACT SKHVBA				
SW588	87-036-170-080		SW,TACT SKHVBA				
SW589	87-036-170-080		SW,TACT SKHVBA				
VR401	82-NFA-602-010		VR,RTRY 10K15AX1				
X501	87-030-273-010		VIB,XTAL 32.768KHZ DT-38 5PPM				
X502	87-A70-018-080		VIB,CER 6.00MHZ MG200				
CD C.B							
C1	87-010-403-080		CAP,E 3.3-50 M SME				
C4	87-010-248-080		CAP,E 220-10 SME				
C6	87-010-374-080		CAP,E 47-10 M SME				
C9	87-010-263-080		CAP,E 100-10 SME				
C10	87-010-263-080		CAP,E 100-10 SME				
				POWER C.B			
				▲ F701	87-035-191-010		FUSE,3.15A 250V T 218
				▲ FC701	87-A90-160-080		FUSE CLAMP,FC 51F
				▲ FC702	87-A90-160-080		FUSE CLAMP,FC 51F
				DRIVE C.B			
				SW1	87-036-110-010		SW,PUSH SPPB 62
				SW2	87-036-110-010		SW,PUSH SPPB 62
				DOOR SW C.B			
				SW3	87-036-292-010		SW,LEAF LSA-1135FAU
				Q-SOUND C.B			
				C901	87-010-382-080		CAP,E 22-25 M SME
				C902	87-010-382-080		CAP,E 22-25 M SME
				C907	87-010-374-080		CAP,E 47-10 M SME
				C909	87-010-263-080		CAP,E 100-10 SME
				C910	87-010-405-080		CAP,E 10-50 M SME

TRANSISTOR ILLUSTRATION




E C B

2SA952
2SA1296
2SA1318
2SC1815
2SC1923
2SC2001
2SC2240



E C B

2SA933S
2SC1740S
2SD1468
DTA114TS
DTA114YS
DTA124XS
DTA143ES
DTA144TS
DTA143XS
DTC114TS
DTC124XS
DTC143ES



B C E

2SB1370



D S G

2SK161




S G D


2SK246

IC BLOCK DIAGRAM


IC, BU2092F

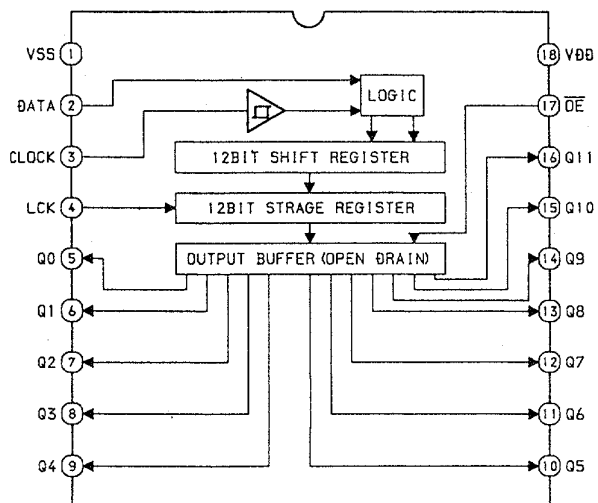

IC, BU4052BF

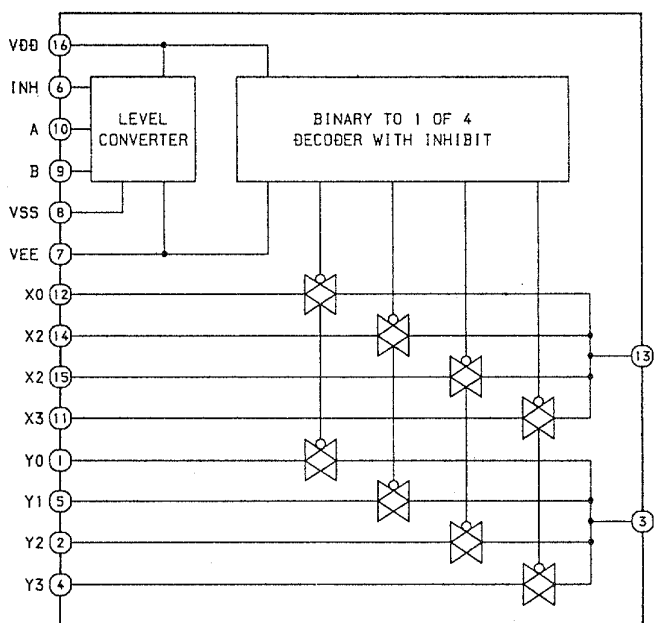

IC, TA8126S

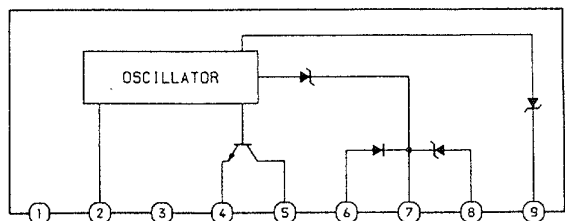


TRUTH TABLE


INHIBIT	A	B	NO SWITCH
L	L	L	X0 Y0
L	H	L	X1 Y1
L	L	H	X2 Y2
L	H	H	X3 Y3
H	X	X	NONE

X: DON'T CARE.


IC, LA1851N

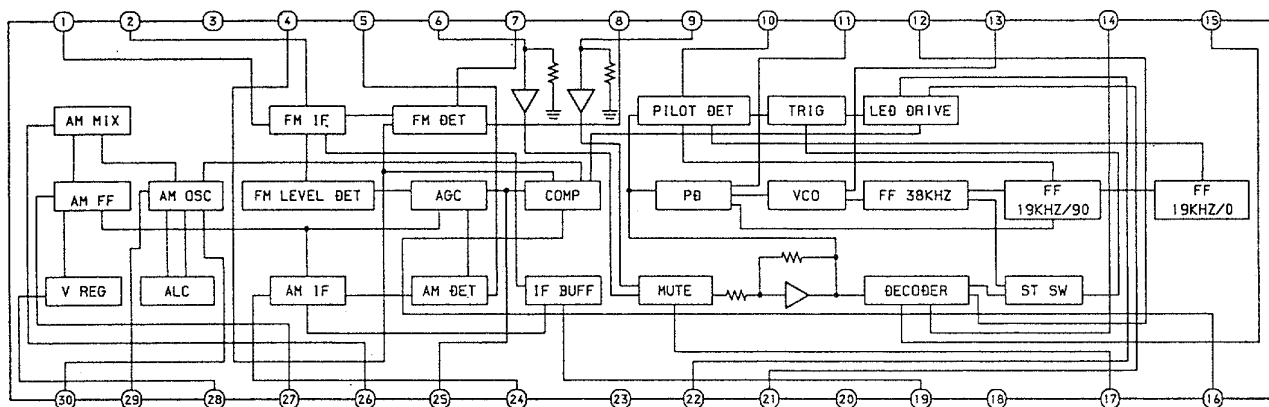


IC, M62412P

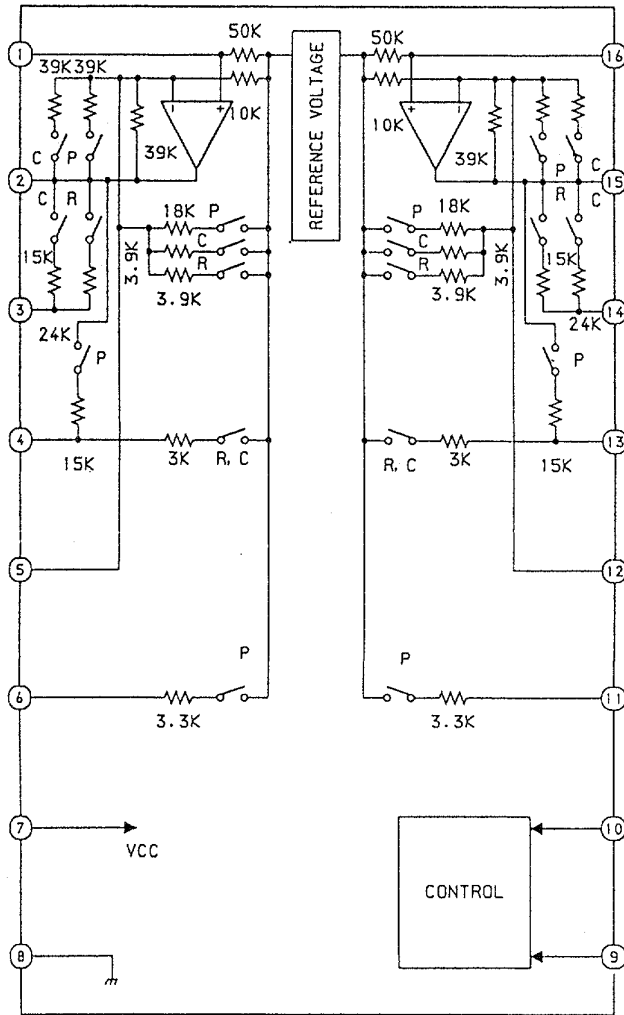


IC, LC7533

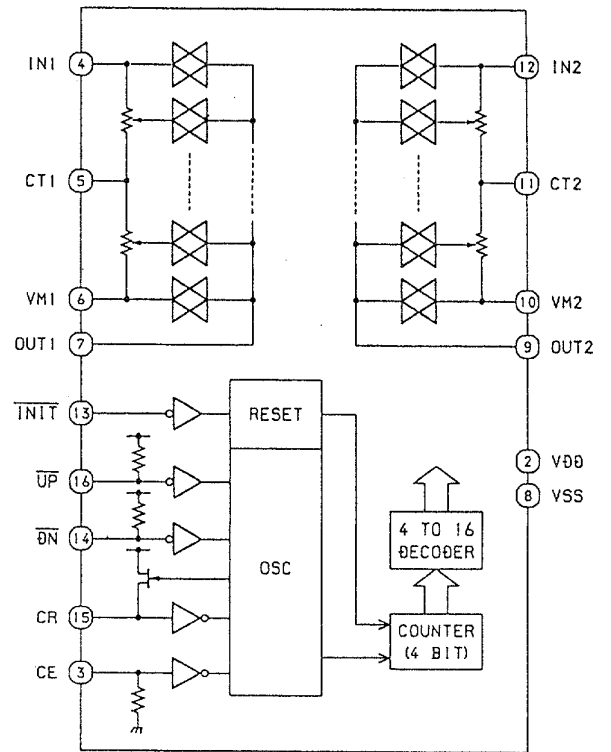


IC, TA2092

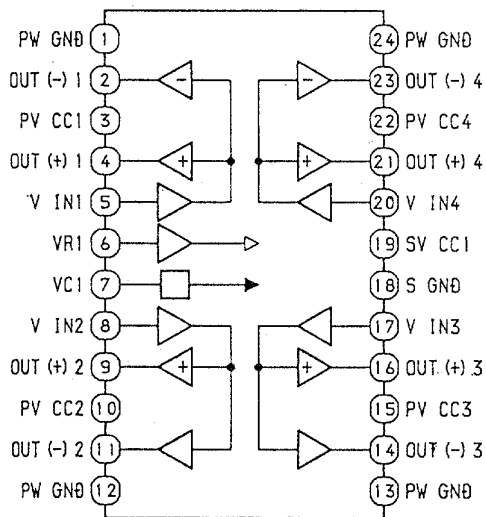


IC, BA34168L

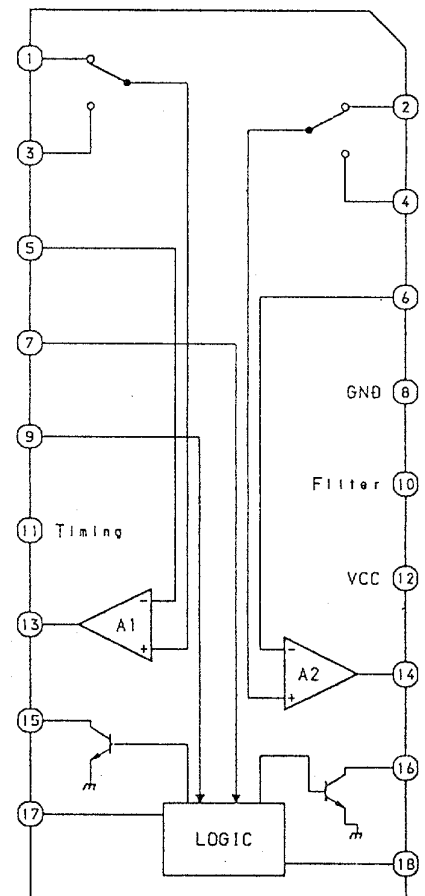

IC, TA8176SN/F

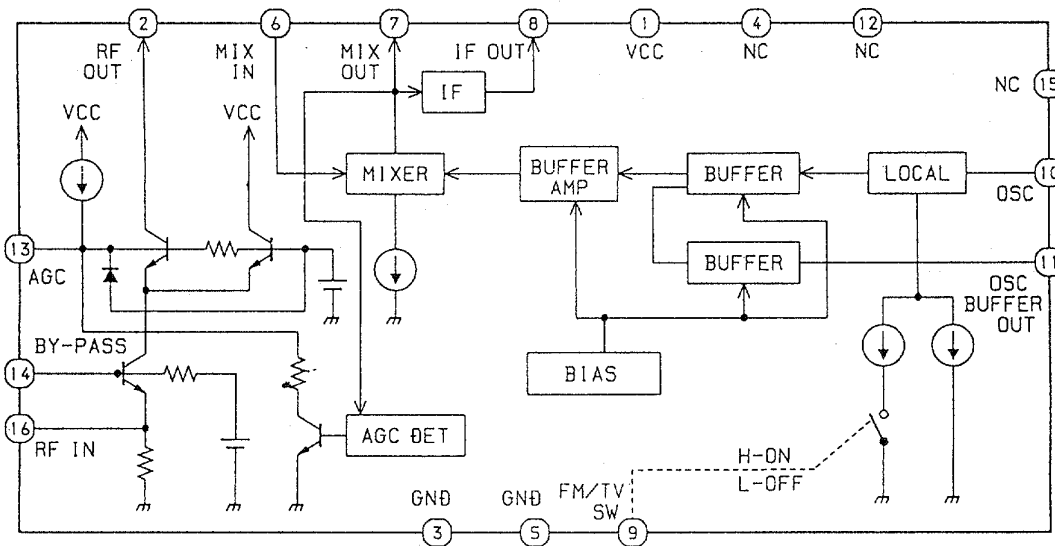

IC, BU4094BF

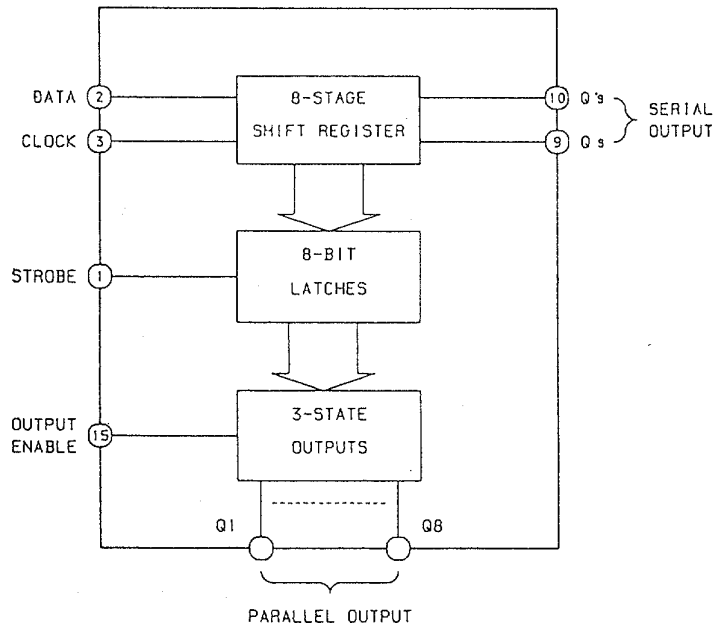


TRUTH TABLE

CLOCK	OUTPUT ENABLE	STROBE	DATA	PARALLEL OUTPUTS		SERIAL OUTPUTS	
				Q1	Qn	Qs	Q's
	L	X	X	Z	Z	Q7	NO Chg.
	L	X	X	Z	Z	No Chg.	Qs
	H	L	X	No Chg.	No Chg.	Q7	No Chg.
	H	H	L	L	Qn-1	Q7	No Chg.
	H	H	H	H	Qn-1	Q7	No Chg.
	H	X	X	No Chg.	No Chg.	No Chg.	Qs


Z=High Impedance

X=Don't Care


IC. MM1354XJ

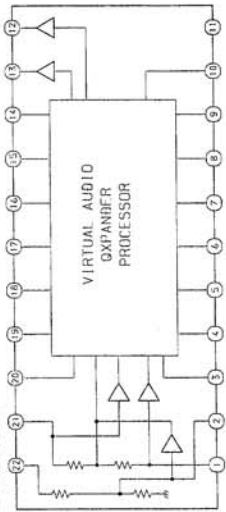


IC. NJM78M05FA

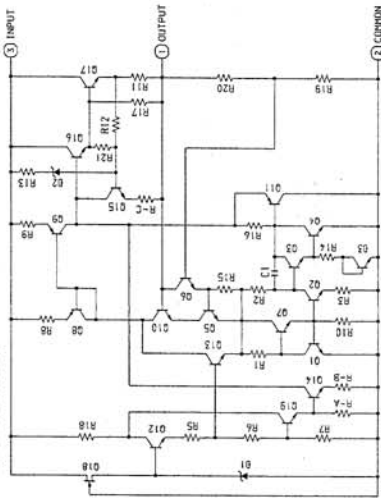


IC. TA8102P

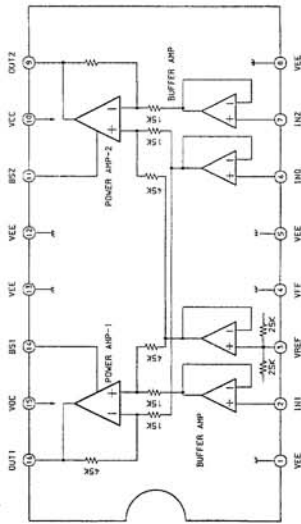


IC. LC7218

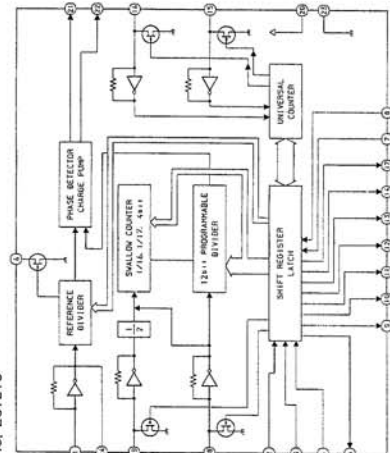

BLOCK DIAGRAM

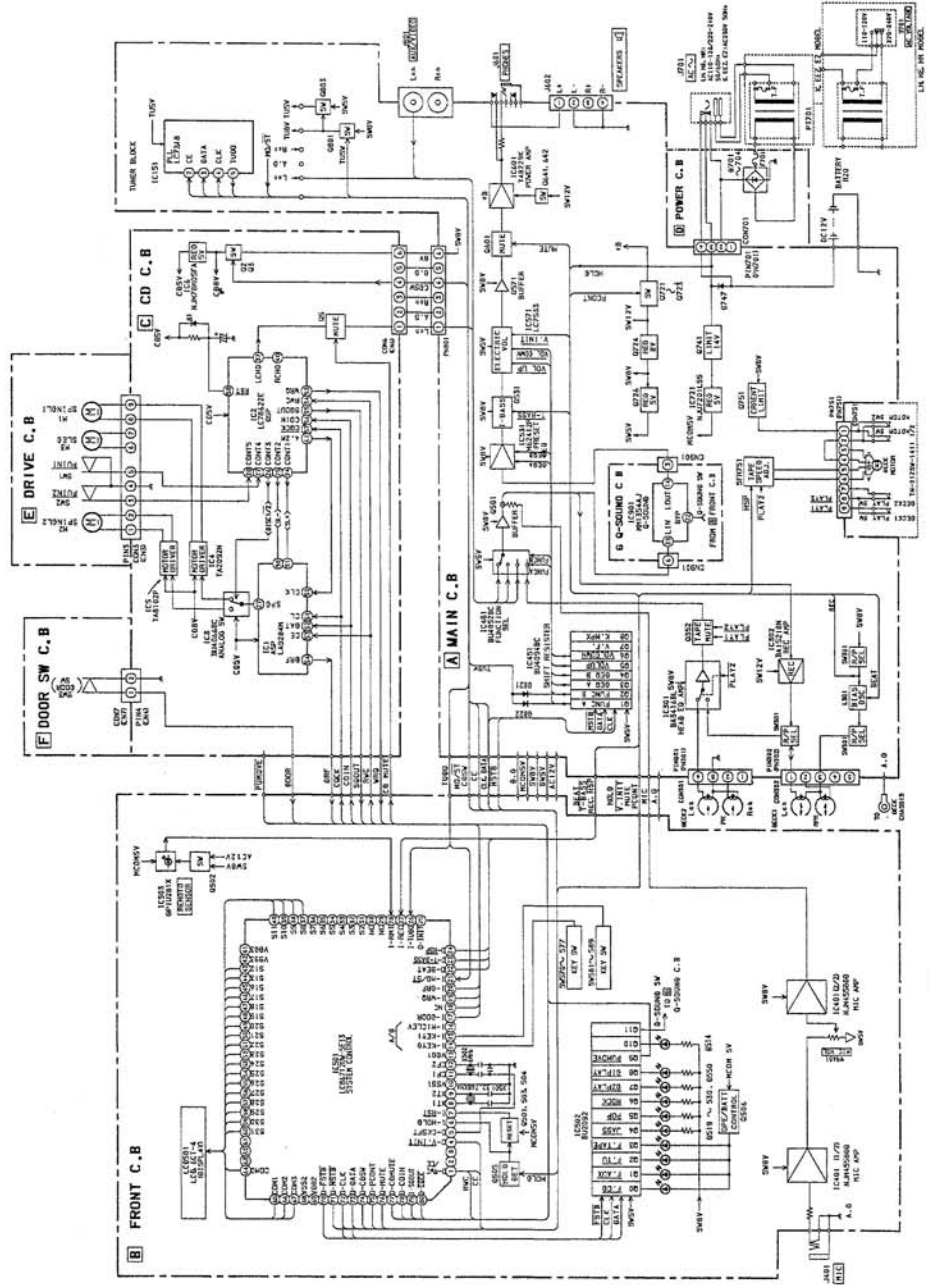


SCHEMATIC DIAGRAM - 1 (MAIN SECTION)

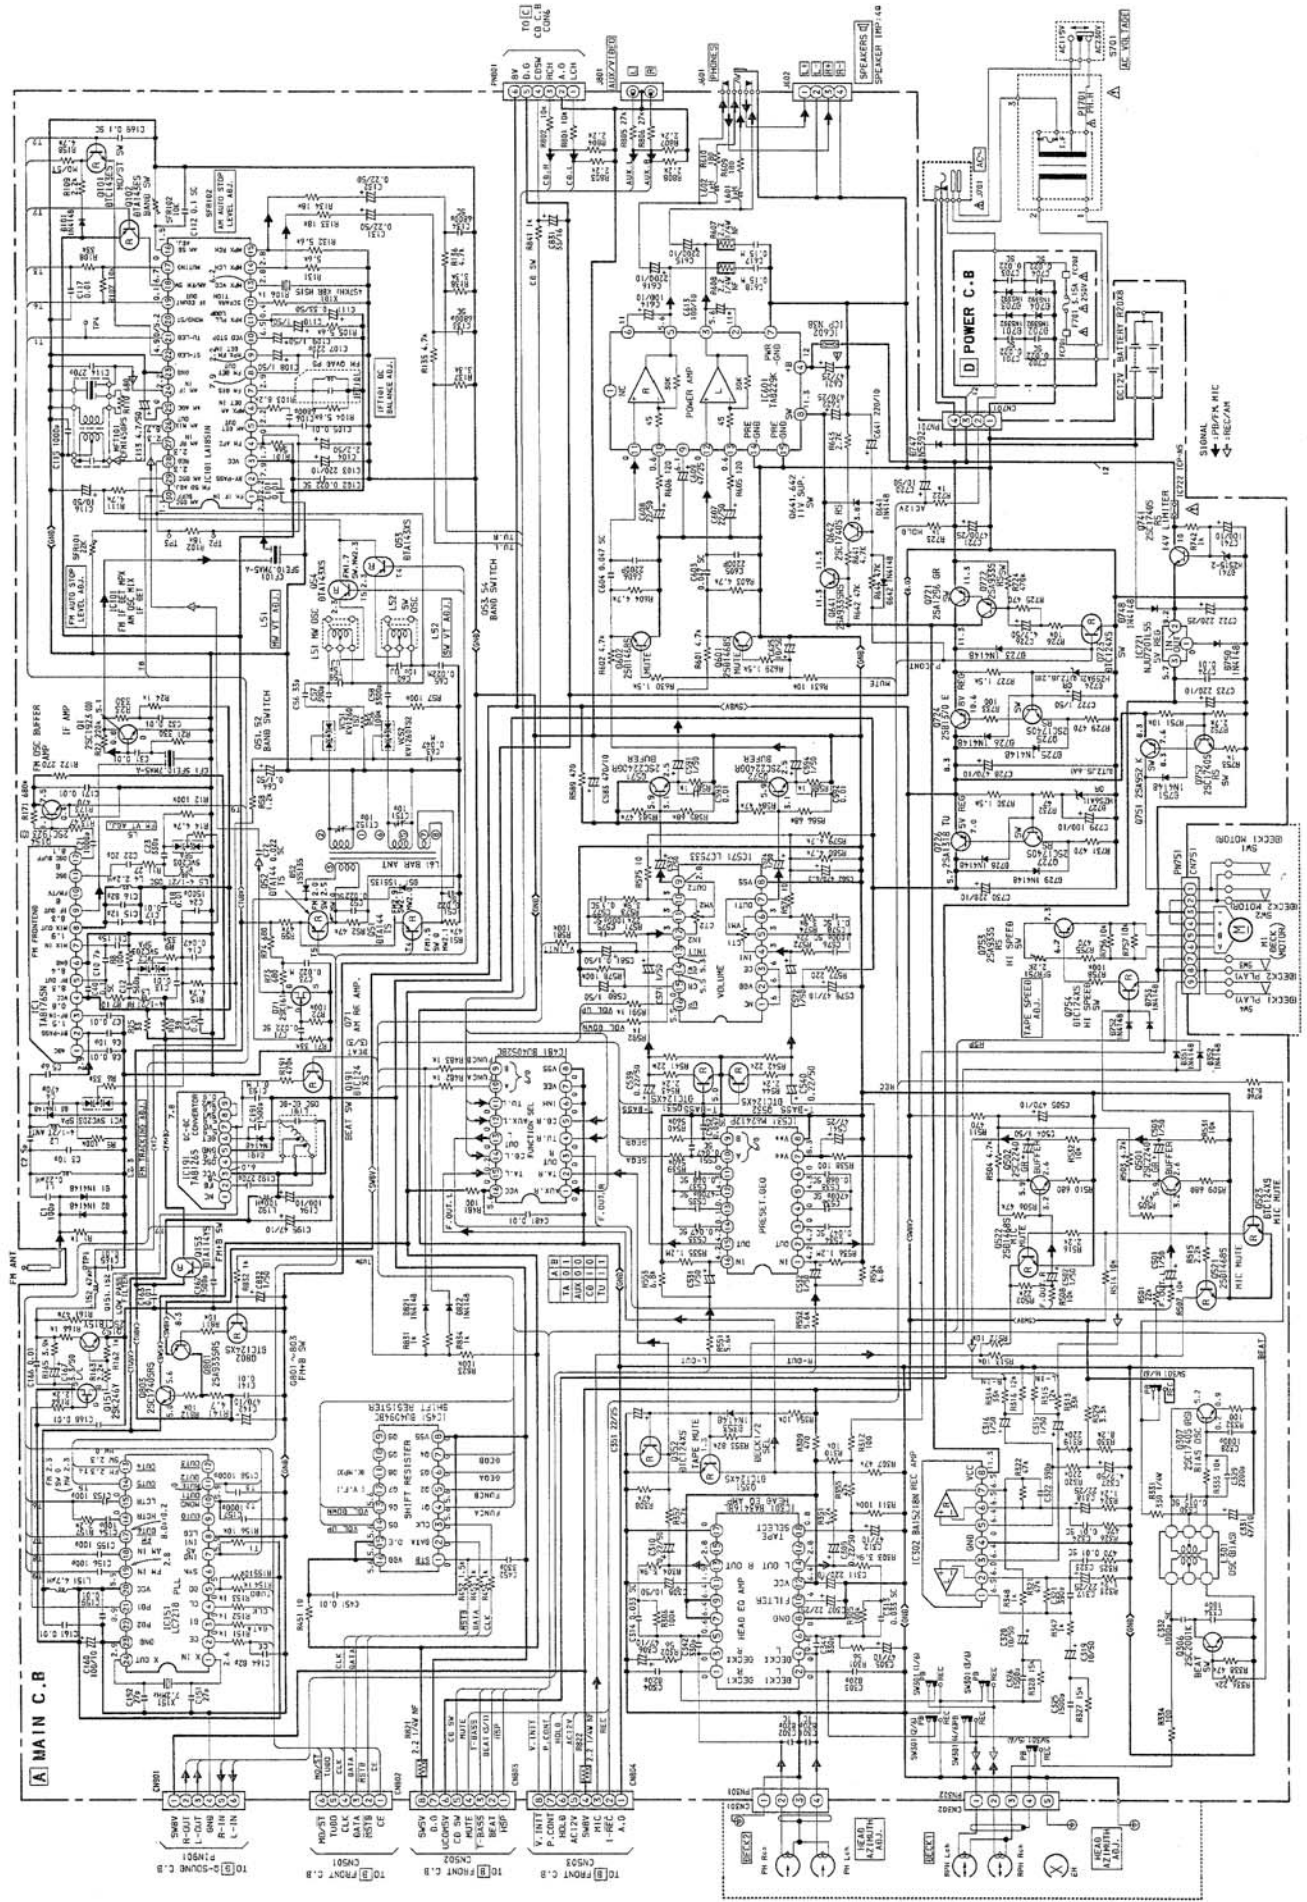


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15


A MAIN C.B.

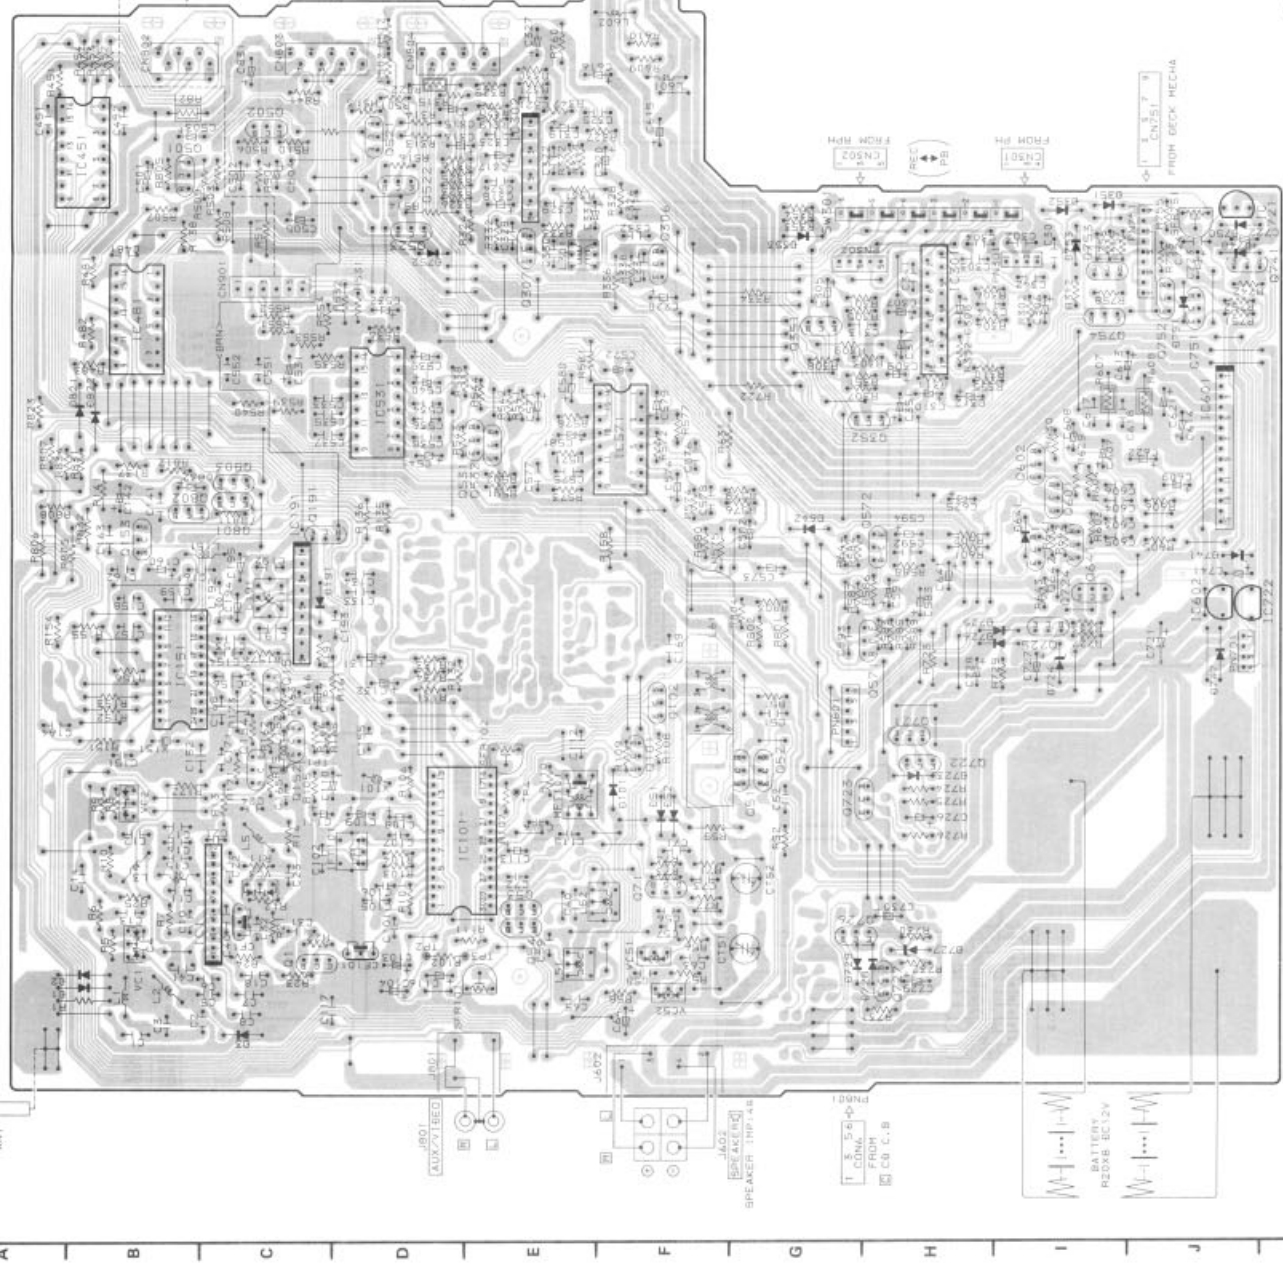

G Q-SOUND C. B.

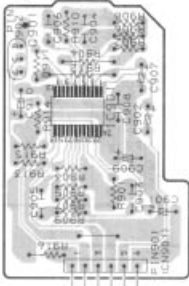

D POWER C. B.

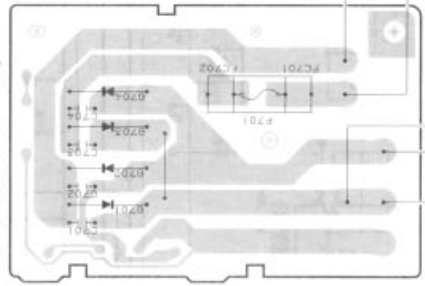

FM ANT

J401 (AUX) Y1 BEQ

J402

J403 (AUX) BEQ

J404 (AUX) BEQ

J405 (AUX) BEQ

J406 (AUX) BEQ

J407 (AUX) BEQ

J408 (AUX) BEQ

J409 (AUX) BEQ

J410 (AUX) BEQ

J411 (AUX) BEQ

J412 (AUX) BEQ

J413 (AUX) BEQ

J414 (AUX) BEQ

J415 (AUX) BEQ

J416 (AUX) BEQ

J417 (AUX) BEQ

J418 (AUX) BEQ

J419 (AUX) BEQ

J420 (AUX) BEQ

J421 (AUX) BEQ

J422 (AUX) BEQ

J423 (AUX) BEQ

J424 (AUX) BEQ

J425 (AUX) BEQ

J426 (AUX) BEQ

J427 (AUX) BEQ

J428 (AUX) BEQ

J429 (AUX) BEQ

J430 (AUX) BEQ


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

B FRONT C. B

TO Q-SOUND C. B
PIN902

TO C.B. C. B
PIN901

TO C.B. C. B
PIN901

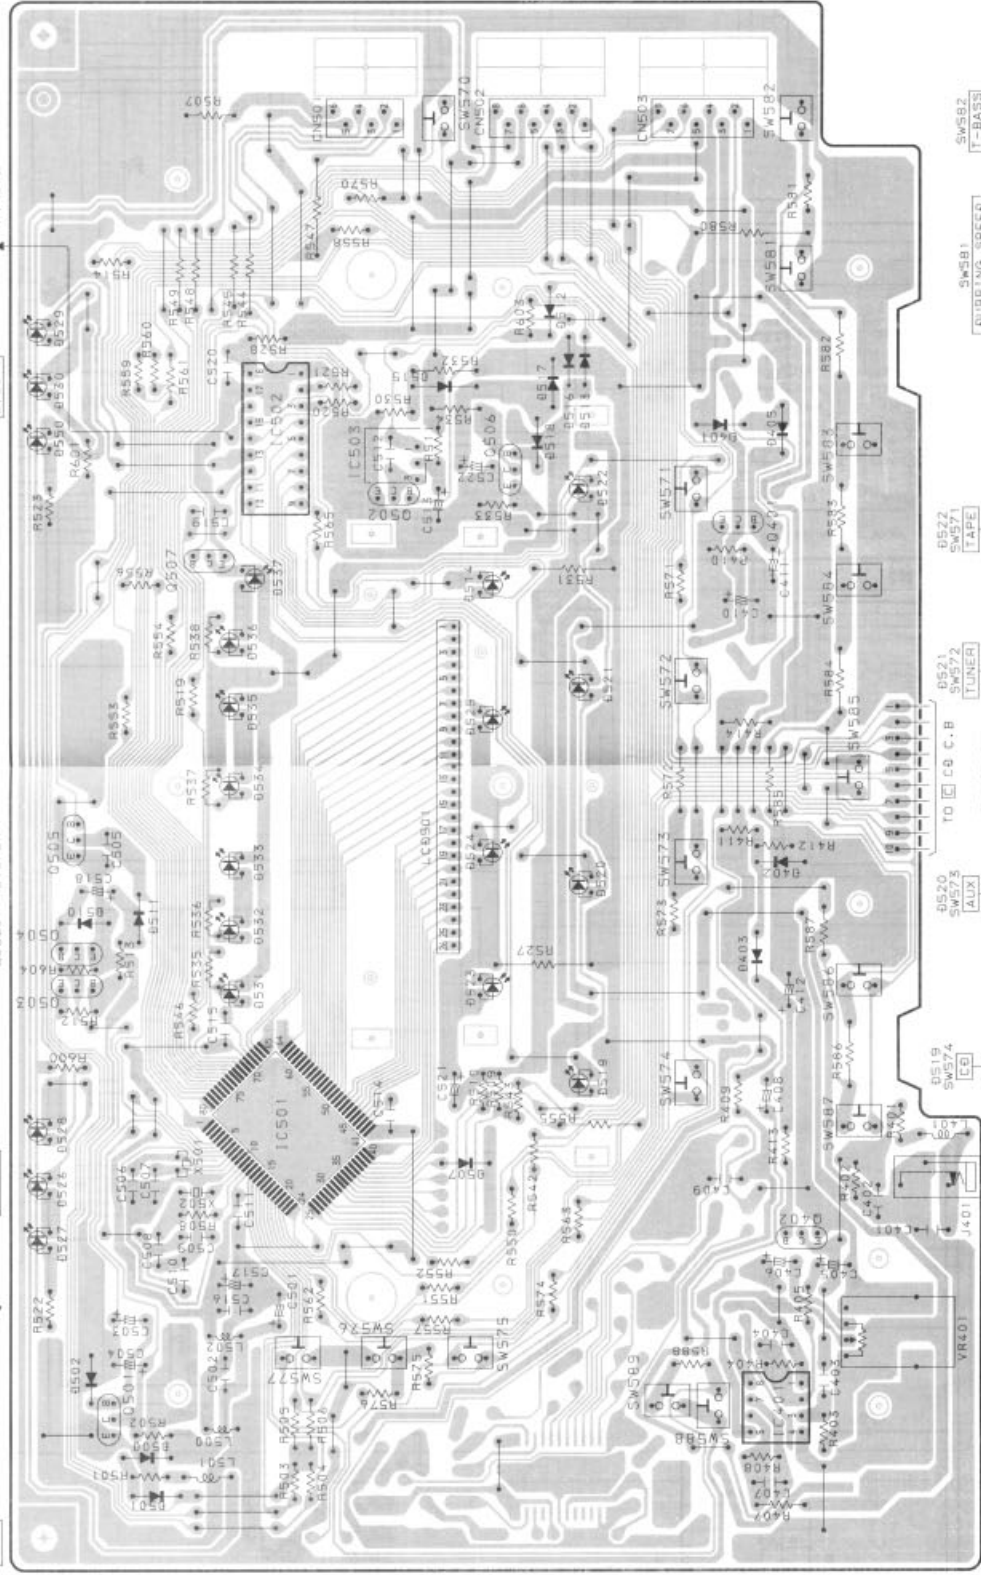

- (GRAPHIC EQUALIZER)
- B524 SW576 POP
- B525 SW575 JAZZ
- B526 SW577 ROCK
- B527 SW578
- B528 SW579
- B529 SW580
- B530 SW581
- B531 SW582
- B532 SW583
- B533 SW584
- B534 SW585
- B535 SW586
- B536 SW587
- B537 SW588
- B538 SW589

- B539 SW589 UP
- B540 SW576 VOLUME
- B541 SW577 DOWN
- B542 SW588

IC503
REMOTE
SENSOR

TO MAIN C. B
CN802
SW570
POWER
STANDBY/ON

B514
OPE/BATT

TO MAIN C. B
CN803

TO MAIN C. B
CN804

SW582 T-BASS

SW581 BUBBLING SPEED MODE TUNER/TSC

SW583 SET

SW584 CLEAR

SW585 TUNER

SW586 PRESET/CB/CB2

SW587 UP

SW588 TUNING DOWN

SW589 MTC


VR401 MTC VOL

J401 MTC


J402 MTC

J403 MTC

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

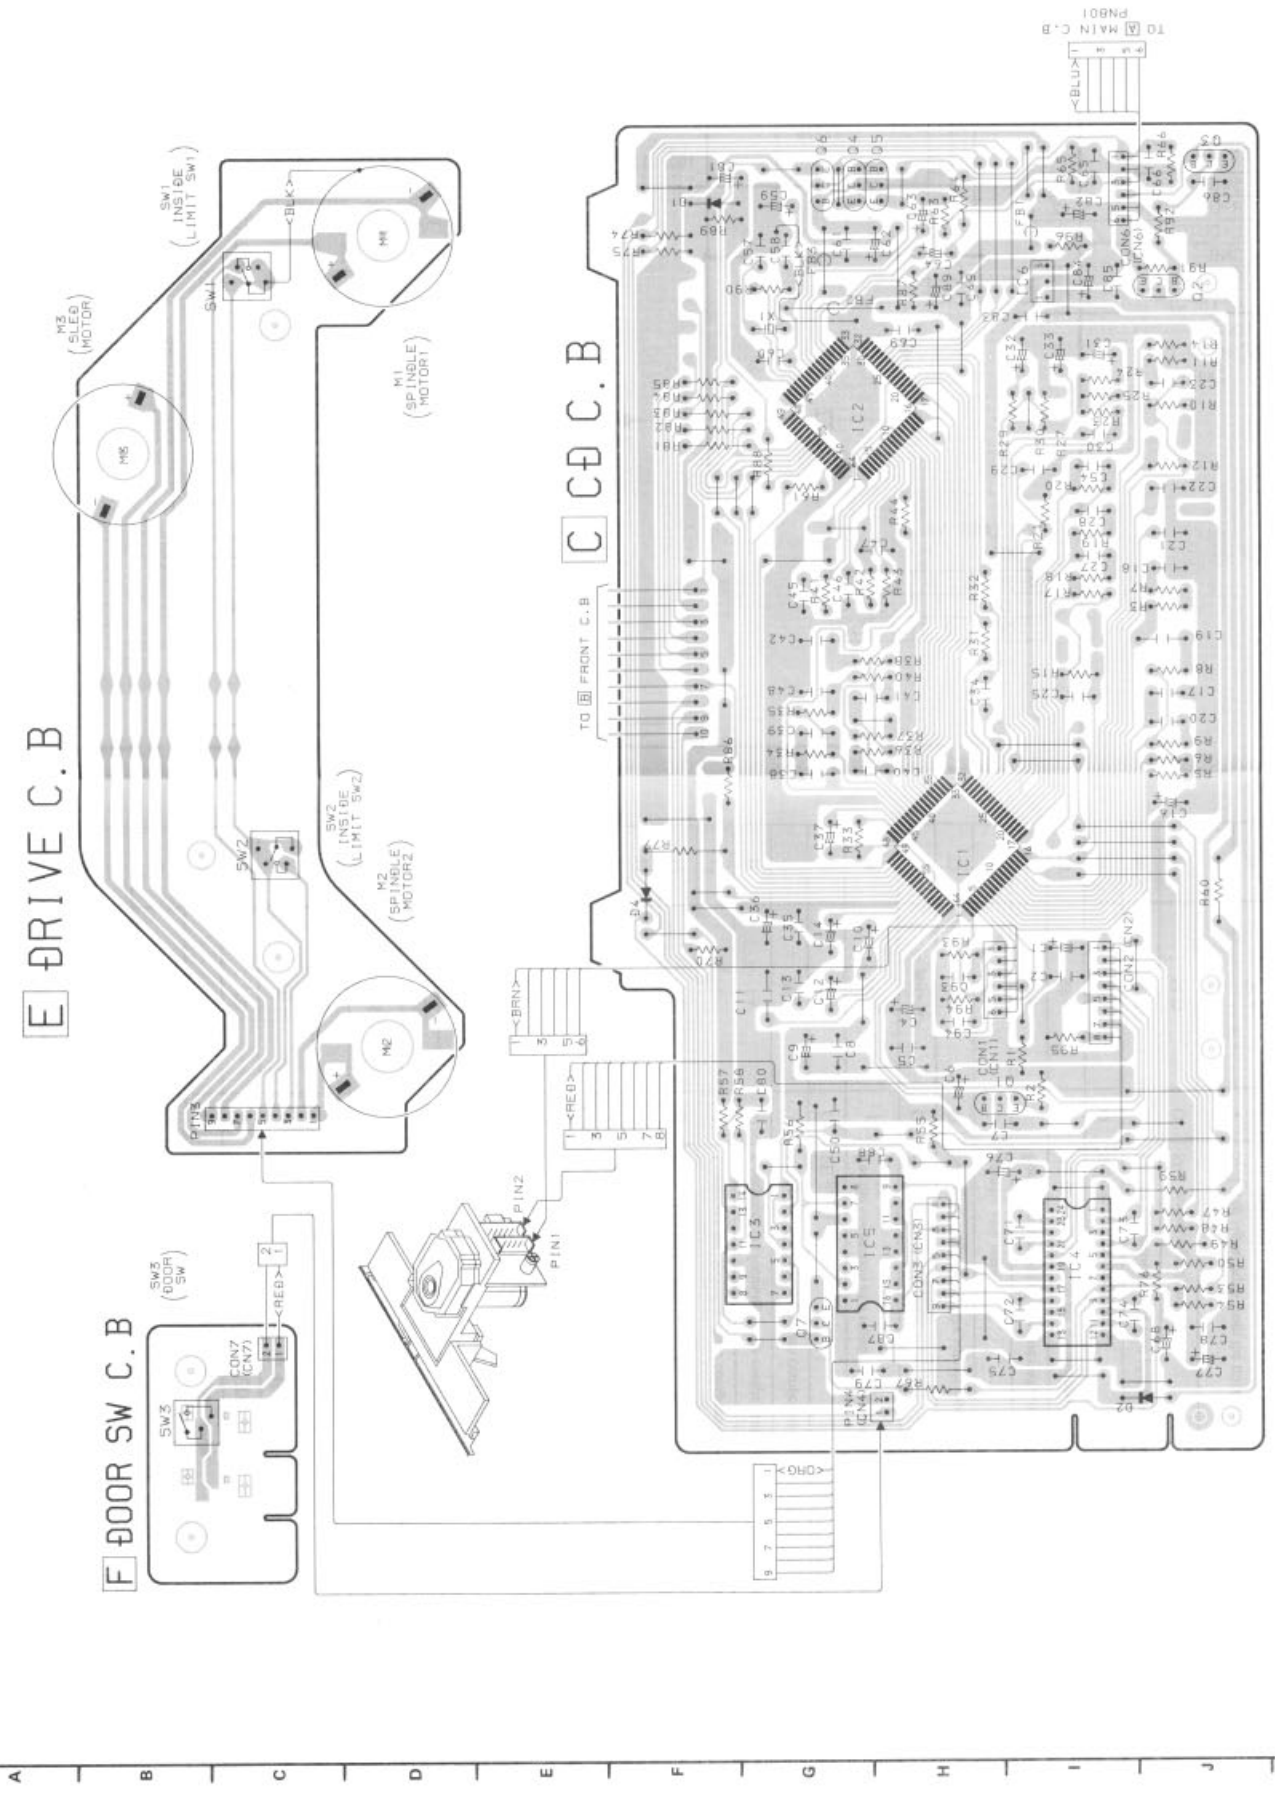

SCHEMATIC DIAGRAM - 4 (Q-SOUND SECTION)

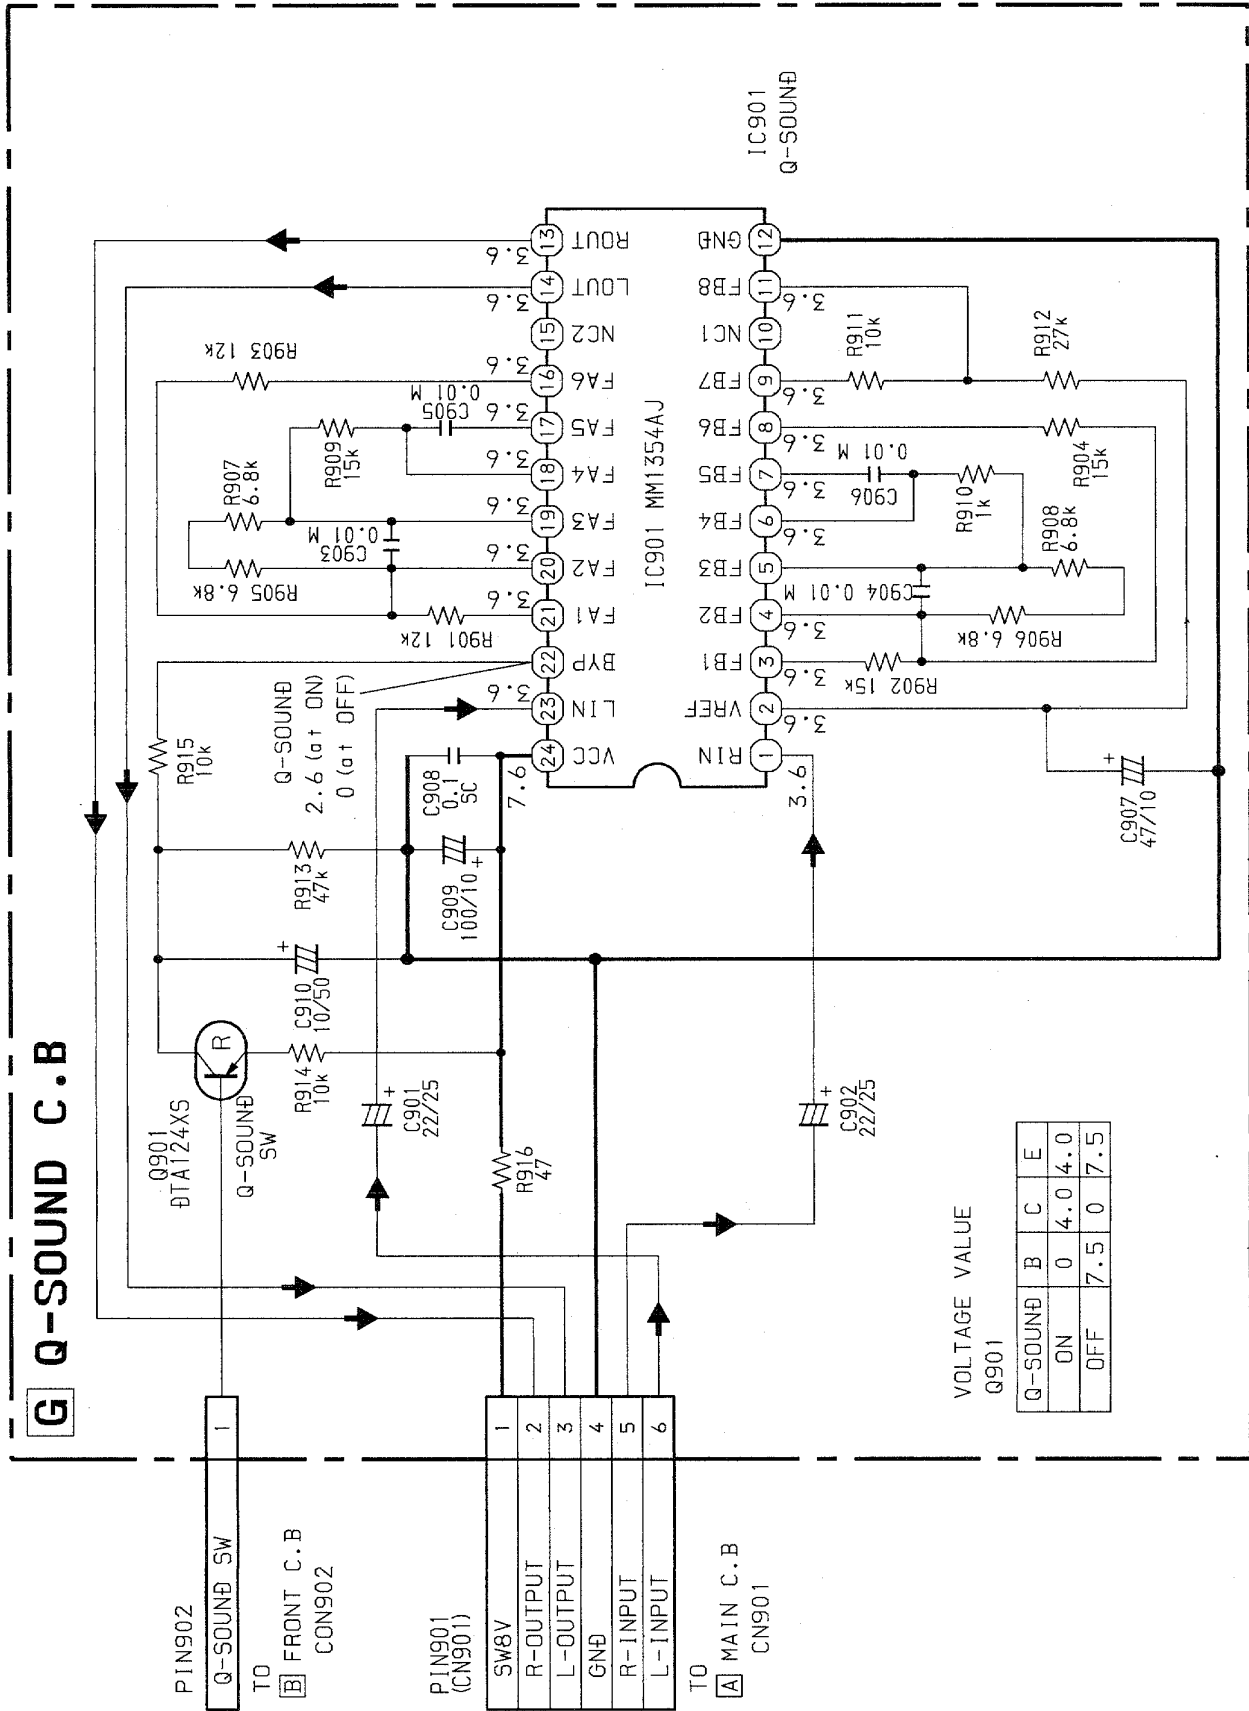

G Q-SOUND C.B

VOLTAGE VALUE Q901

Q-SOUND	B	C	E
ON	0	4.0	4.0
OFF	7.5	0	7.5

IC DESCRIPTION

IC, LA9284M

Pin No.	Pin Name	I/O	Description
1	FIN2	O	For the connection of the pickup photodiode. Addition to the FIN1 pin creates an RF signal and subtraction from it created an EF signal.
2	FIN1	O	For the connection of the pickup photodiode.
3	E	O	For the connection of the pickup photodiode. Subtraction from the F pin creates a TE signal.
4	F	O	For the connection of the pickup photodiode.
5	TB	I	Inputs the DC components in the TE signal.
6	TE -	O	For the connection of a resistor which sets the gain of the TE signal between this pin and the TE pin.
7	TE	O	TE signal output
8	TESI	I	TES (track error sense) comparator input. The TE signal is passed through a BPF and is input.
9	SCI	I	Shock detection input
10	TH	I	Sets the time constant for the tracking gain.
11	TA	O	TA amp output
12	TD -	I	Composes the tracking phase compensation constant between the TD and VR pins.
13	TD	O	Sets the tracking phase compensation.
14	JP	I	Sets the amplitude of the tracking jump signal (kicks pulses).
15	TO	O	Tracking control signal output
16	FD	O	Focusing control signal output
17	FD -	I	Composes the focusing phase compensation constant between the FD and FA pins.
18	FA	O	Composes the focusing phase compensation constant between the FD- and FA- pins.
19	FA -	I	Composes the focusing phase compensation constant between the FA and FE pins.
20	FE	O	FE signal output
21	FE -	I	For the connection of a resistor which sets the gain of the FE signal between this pin and the TE pin.
22	A-GND	O	Ground of analog signals.
23	SP	O	Single-ended output of the signals input to the CV+ and CV- pins.
24	SPI	I	Spindle amp input
25	SPG	I	For the connection of a resistor which sets the gain in the spindle 12cm mode.
26	SP -	I	For the connection of the spindle phase compensation constant with the SPD pin.
27	SPD	O	Spindle control signal output
28	SLEQ	I	For the connection of the sled phase compensation constant.
29	SLD	O	Sled control signal output
30	SL -	I	Sled feed signal input from the microprocessor
31	SL+		
32	JP -	I	Tracking signal input from the DSP
33	JP+		

Pin No.	Pin Name	I/O	Description
34	TGL	I	Tracking gain control signal input from the DSP. Low gain when TGL is "H".
35	TOFF	I	Tracking off control signal input from the DSP. Off when TOFF is "H".
36	TES	O	Outputs the TES signal to the DSP.
37	HFL	O	The HEL (high frequency level) signal is used to judge whether the main beam is positioned on the pit or on the mirror.
38	SLOF	I	Sled servo off control input
39	CV -	I	CLV error signal input from the DSP
40	CV+		
41	RFSM	O	RF output
42	RFS -	O	Sets the RF gain and the EFM signal's 3T compensation constant together with the RFSM pin.
43	SLC	O	The SLC (slice level control) signal is output to control the DSP's data slice level of the RF waveform.
44	SLI	I	Input to control the DSP's data slice level.
45	DGND	-	Ground of digital signals
46	FSC	O	Output for the focus search smoothing capacitor
47	TBC	I	The TBC (tracking balance control) signal sets the EF balance variation range.
48	NC	-	Not connected.
49	DEF	O	Disc defect detection output
50	CLK	I	Reference clock input. 4.23 MHz is input from the DSP.
51	CL	I	Microprocessor command clock input
52	DAT	I	Microprocessor command data input
53	CE	I	Microprocessor chip enable input
54	DRF	O	DRF (detect RF) is an output to detect the RF level.
55	FSS	I	The FSS (focus search select) signal switches the focus search modes (\pm search/+search with respect to the reference voltage).
56	VCC2	-	VCC of servo and digital circuits
57	REF1	-	For the connection of bypass capacitor for the reference voltage
58	VR	O	Reference voltage output
59	LF2	-	Sets the time constant for disc defect detection
60	PHI	-	For the connection of a capacitor to hold the RF signal peak.
61	BHI	-	For the connection of a capacitor to hold the RF signal bottom.
62	LDD	O	APC circuit output
63	LDS	I	APC circuit input
64	VCC1	-	VCC of RF signal circuits

IC, LC78622E

Pin No.	Pin Name	I/O	Description
1	DEFI	I	Defect detection signal (DEF) input. ("L" is applied when not used.)
2	TEI	I	For PLL/Test input. A pull-down resistor is incorporated.
3	PDO	O	Phase comparison output to control the external VCO.
4	VVSS	-	Ground of the built-in VCO. Normally, 0 V.
5	ISET	I	For the connection of a resistor which adjusts the PDO output current.
6	VVDD	-	Power supply of the built-in VCO
7	FR	I	Adjusts the VCO frequency range.
8	VSS	-	Ground of digital circuits. Normally, 0 V.
9	EFMO	O	For slice level control/EFM signal output
10	EFMIN	I	EFM signal input
11	TEST2	I	Test input. A pull-down resistor is incorporated. Be sure to connect this to 0 V.
12	CLV+	O	Disc motor control tri-state outputs.
13	CLV -		
14	V \bar{P}	O	Output to monitor the automatic switching between the rough servo control and phase servo control. "H":Rough servo, "L":Phase servo
15	HFL	I	Track detection signal input. Schmitt trigger input
16	TES	I	Tracking error signal input. Schmitt trigger input
17	TOFF	O	Tracking off output
18	TGL	O	Tracking gain switching output. "L" raises the gain.
19	JP+	O	Track jump control tri-state outputs
20	JP -		
21	PCK	O	Monitors the clock signal for EFM data playback. 4.3218 MHz when the phase is locked.
22	FSEQ	O	Sync signal detection output. Goes "H" when the sync signal detected from the EFM signal matches the sync signal generated internally.
23	VDD	-	Power supply of digital circuits.
24	CONT1 (SL+)	I/O	General purpose input/output 1. Controlled by the serial data command issued by the microprocessor.
25	CONT2 (SL -)	I/O	General purpose input/output 2. Controlled by the serial data command issued by the microprocessor.
26	CONT3 (DISC 1/2)	I/O	General purpose input/output 3. Controlled by the serial data command issued by the microprocessor.
27	CONT4 (PUIN1)	I/O	General purpose input/output 4. Controlled by the serial data command issued by the microprocessor.
28	CONT5 (PUIN2)	I/O	General purpose input/output 5. Controlled by the serial data command issued by the microprocessor.
29	EMPH	O	Deemphasis monitor. "H": when playing a deemphasis disc.
30	C2F	O	C2 flag output
31	DOUT	O	Outputs a digital OUT signal (EIAJ format)

Pin No.	Pin Name	I/O	Description
32	TEST3	I	Test input. A pull-down resistor is incorporated. Be sure to connect this to 0 V.
33	TEST4		
34	N.C	–	Not used. Set to open.
35	MUTEL	O	Lch 1-bit DAC/Lch muting output.
36	LVDD	–	Lch power supply
37	LCHO	O	Lch output
38	LVSS	–	Lch ground. Normally, 0 V.
39	RVSS	–	Rch 1-bit DAC/ Rch ground. Normally, 0 V.
40	RCHO	O	Rch output
41	RVDD	–	Rch power supply
42	MUTER	O	Rch muting output
43	XVDD	–	Power supply of crystal oscillator
44	XOUT	O	For the connection of a 16.9344 MHz crystal oscillator
45	XIN	I	
46	XVSS	–	Ground of crystal oscillator. Normally, 0 V.
47	SBSY	O	Subcode block sync signal output
48	EFLG	O	C1, C2, single, duplex correction monitor
49	PW	O	Output of subcodes P, Q, R, S, T, U and W
50	SFSY	O	Subcode frame sync signal output. Falls when the subcode is set to the standby state.
51	SBCK	I	Subcode read-out clock input. Schmitt trigger input. ("L" is applied when not used.)
52	FSX	O	7.35 kHz sync signal output obtained by dividing the oscillator frequency
53	WRG	O	Subcode Q standby output
54	RWC	I	Read/write control input. Schmitt trigger input
55	SQOUT	O	Subcode Q output
56	COIN	I	Command input from the microprocessor
57	$\overline{\text{CLOCK}}$	I	Command input retrieval clock or subcode retrieval clock input from SQOUT. Schmitt trigger input
58	$\overline{\text{RES}}$	I	LC78622 reset input. Set to "L" when power is supplied.
59	TST11	O	Test output. Set to open (normally, "L" output)
60	16M	O	16.9344 MHz output
61	4.2M	O	4.236 MHz output
62	TEST5	I	Test input. A pull-down resistor is incorporated. Be sure to connect this to 0 V.
63	$\overline{\text{CS}}$	I	Chip select input. A pull-down resistor is incorporated.
64	TEST1	I	Test input with no pull-down resistor. Be sure to connect this to 0 V.


IC, LC867120W-5E13

Pin No.	Pin Name	I/O	Description
1	RWC	O	CD read, write control output
2, 3	P14, P15	-	N. C
4	V. INITIAL	O	Volume initial output
5	CKSFT	O	Clock shift output
6	HOLD	I	Hold input
7	RST	I	Microprocessor reset
8	XT1	I	Connected to 32.768 kHz crystal
9	XT2	O	Connected to 32.768 kHz crystal
10	VSS1	-	GND
11	CF1	I	Connected to 6 MHz ceramic lock
12	CF2	O	Connected to 6 MHz ceramic lock
13	VDD1	-	Microprocessor power supply (5V)
14, 15	KEY0, KEY1	I	Key A/D input
16	MIC LEV	I	Mic level detection
17	DOOR	I	CD door sw input
18	P84	I	Bit input
19	WRQ	I	CD sub code input
20	DRF	I	CD detect RF level input
21	MONO/ST	I	FM mono stereo rejection
22	BEAT	O	BEAT sift SW output
23	T-BASS	O	T-BASS on off SW output
24	HSP	O	High speed dubbing selector output
25	INITIAL	O	Initial setting data
26	TURDO	I	PLL IC tuner data input
27	REC	I	Recording SW input
28	RMT	I	Remote control input
29	PAO	I	Initial setting input
30~40	S0~S10	-	N. C
41	VDD3	-	Microprocessor power supply
42	VSS3	-	GND
43, 44	S12, S13	O	LCD segment output
45~60	S16~S31	O	LCD segment output
61~63	V3~V1	-	N. C
64~67	COM0~COM3	O	LCD common output
68	VSS2	-	GND
69	VDD2	-	Microprocessor power supply (5 V)
70	FSTB	O	Shift register clock output
71	MSTB	O	Shift register data latch strobe output
72	CLK	O	PLL shift register data output
73	DATA	O	PLL shift register data output
74	CDSW	O	CD SW output

Pin No.	Pin Name	I/O	Description
75	PCONT	O	Power supply control output
76	MUTE	O	Main mute output
77	$\overline{\text{CD MUTE}}$	O	CD mute output
78	$\overline{\text{COIN}}$	O	CD command output
79	SQOUT	I	CD sub code Q input
80	CQCK	O	CD command clock output


ADJUSTMENT

A MAIN C.B

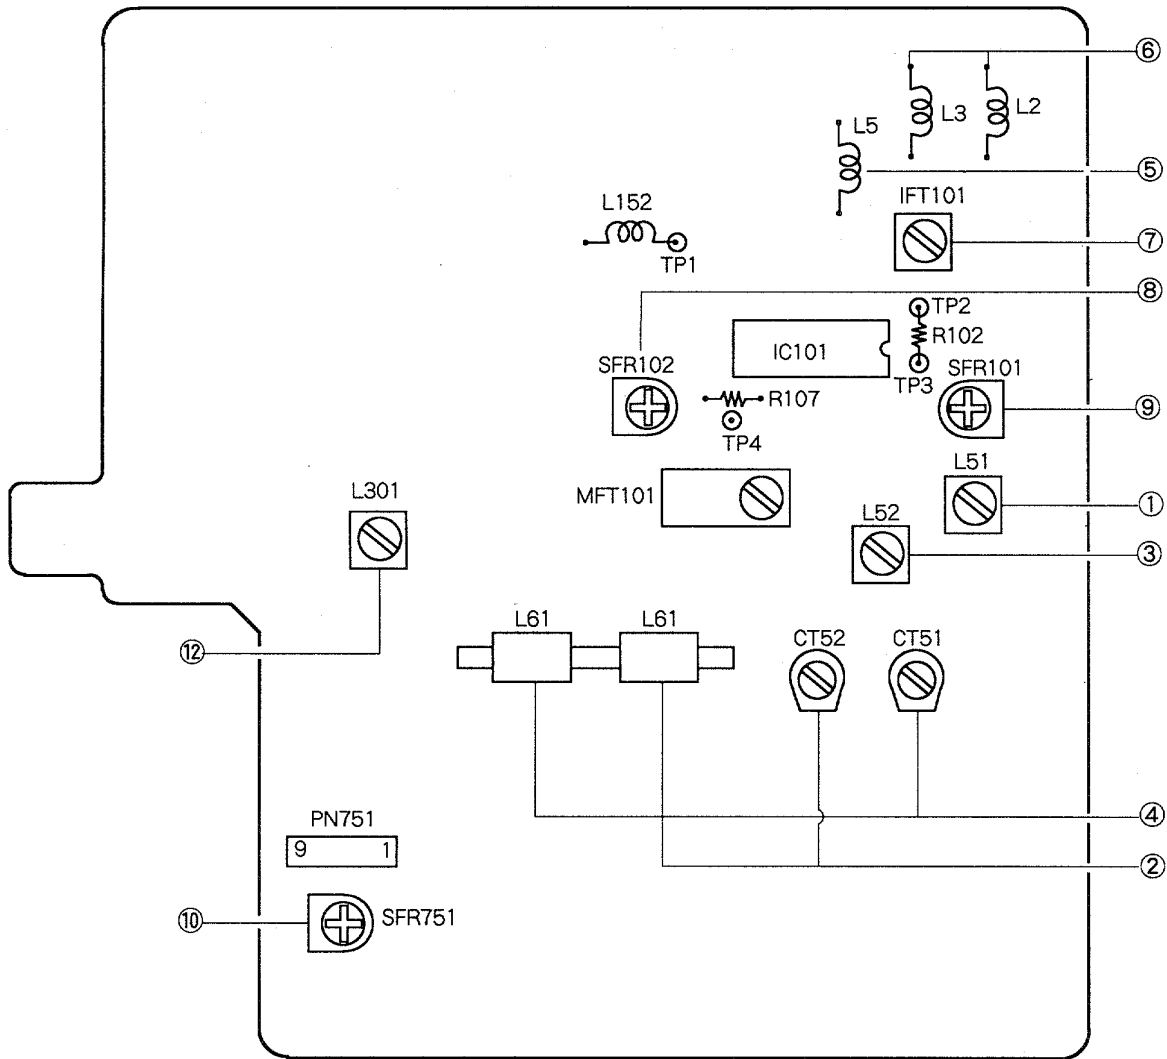

< TUNER SECTION >

RPH (DECK1) / PH (DECK2)

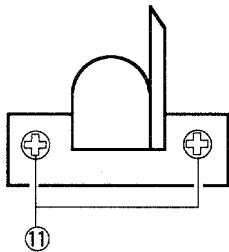

1. MW VT Adjustment
 - Settings : • Test point : TP1
 - Adjustment location : L51
 - Method : Set to MW 531 kHz adjust L51 so that the test point becomes 1.3 V ± 0.05 V.

2. MW Tracking Adjustment
 - L61 603 kHz
 - CT52 1404 kHz

3. SW VT Adjustment
 - Settings : • Test point : TP1
 - Adjustment location : L52
 - Method : Set to SW 3.8 MHz adjust L52 so that the test point becomes 1.4 V ± 0.3 V.

4. SW Tracking Adjustment
 L613.8 MHz
 CT51 12.5 MHz

5. FM VT Adjustment
 Settings : • Test point : TP1
 • Adjustment location : L5
 Method : Set to FM 87.5 MHz adjust that the test point becomes $4.0 \text{ V} \pm 0.1 \text{ V}$.

6. FM Tracking Adjustment
 L2, 3 87.5 MHz

7. DC Balance/MONO Distortion Adjustment
 Settings : • Test point : TP2, 3
 • Adjustment location : IFT101
 • Input level : 60 dB
 Method : Set to FM 98.0 MHz and adjust IFT101 so that the voltage between TP2 and TP3 becomes $0 \text{ V} \pm 0.02 \text{ V}$.

8. AM Tuning Adjustment
 Settings : • Adjustment location : SFR102
 Method : Make setup for AM999 kHz. Adjust SFR102 so that the machine performs Auto Stop when $50 \pm 2 \text{ dB}$ is input.

* Confirm that TP4 is "L" at this time.

9. FM Tuning Adjustment
 Settings : • Adjustment location : SFR101
 Method : Make setup for FM 98.0 MHz. Adjust SFR101 so that the machine performs Auto Stop when $33 \pm 2 \text{ dB}$ is input.

* Confirm that TP4 is "L" at this time.

< TAPE SECTION >

10. Tape Speed Adjustment (DECK1)
 Settings : • Test tape : TTA-100 (TTA-111S)
 • Adjustment location : SFR751
 Method : Play back the test tape with DECK1 and adjust SFR751 so that the output frequency is 3000 Hz. After the adjustment, check that the frequency of DECK2 is $3000 \pm 45 \text{ Hz}$.

11. Azimuth Adjustment (DECK1, DECK2)
 Settings : • Test tape : TTA-320
 • Adjustment location : Head azimuth adjustment screw
 Method : Play back the 10 kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on each FWD PLAY and REV PLAY mode.

12. Bias OSC Frequency Adjustment
 Settings : • Test tape : TTA-601
 • Adjustment location : L301
 • Test point : TP
 Method : Set the REC mode. Adjust L301 so that the frequency counter of the test point becomes $71.5 \text{ kHz} \pm 0.5 \text{ kHz}$.

PRACTICAL SERVICE FIGURE

< RADIO SECTION >

(FM)
 Frequency range : 87.5~108.0 MHz
 IHF Sensitivity : $18.0 \pm 5.0 \text{ dB}$ (at 87.5 MHz)
 (Distortion 3%) $19.0 \pm 5.0 \text{ dB}$ (at 98.0, 108.0 MHz)
 S/N ratio : $60 \pm 5 \text{ dB}$ (at 98.0 MHz)
 Intermediate frequency : 10.7 MHz
 Stereo separation : More than 20 dB


(MW)
 Frequency range : 531~1602 kHz
 Sensitivity : $50 \pm 5 \text{ dB}$ (at 603 kHz)
 $45 \pm 5 \text{ dB}$ (at 999 kHz)
 $43 \pm 5 \text{ dB}$ (at 1404 kHz)
 S/N ratio : More than 30 dB (at 999 kHz)
 (Input 74 dB)
 Auto Stop Level : Less than 57 dB (at 1404 kHz)

(SW)
 Frequency range : 153~288 kHz
 Sensitivity : $47 \pm 5 \text{ dB}$ (at 3.8 MHz)
 $40 \pm 5 \text{ dB}$ (at 8.0 MHz)
 $37 \pm 5 \text{ dB}$ (at 12.5 MHz)
 S/N ratio : More than 34 dB (at 8.0 MHz)
 (Input 74 dB)
 Auto Stop Level : 60 dB (at 12.05 MHz)

< TAPE RECORDER SECTION >

Recording bias frequency : $71.5 \pm 0.5 \text{ kHz}$
 Erasing ratio(W/FILTER) : 50 dB
 Distortion(T, H, D 10%) : Less than 3.0% (PB)
 S/N ratio : 40 dB (AC/DC, PB)
 37 dB (AC, REC/PB)
 Noise (PB) : Less than $1 \text{ mV}/0.6 \text{ mV}$
 (AC/DC, MIN)
 Tape speed : $3000 \pm 90 \text{ Hz}$
 Wow & flutter : Less than 0.4% (JIS, UN WTD)
 Take-up torque : $45 \pm 15 \text{ g-cm}$
 F.F & REW torque : $100 \pm 4 \text{ g-cm}$


FL DISPLAY

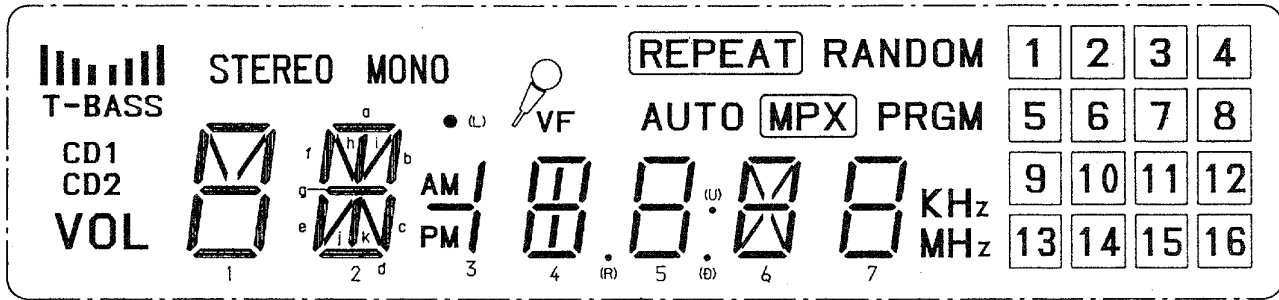

NC.	COM. 1	COM. 2	COM. 3	COM. 4
1	COM. 1			
2		COM. 2		
3			COM. 3	
4				COM. 4
5	T-BASS	CD1	CD2	VOL
6	1a	1h	1f	1e
7	STEREO	1b	1g	1d
8	2a	2f	2e	1c
9	2h	2g	2j	2d
10	2i	2b	2c	2m
11	AM	3b, 3c	3g	PM
12		4f	4g	4e
13	•(L)	4a	4i, 4k	4d
14	MONO	4b	4c	•(R)
15	5f	5g	5e	5d
16	5b	•(U)	5c	•(D)
17	5a	6f	6g	6e
18	VF	6a	6h, 6j	6d
19	AUTO	6b	6c	7e
20	REPEAT	7f	7g	7d
21	MPX	7a	7b	7c
22	RANDOM	PRGM	KHZ	MHZ
23	1	5	9	13
24	2	6	10	14
25	3	7	11	15
26	4	8	12	16

- (L) : LEFT
- (R) : RIGHT
- (U) : UPPER
- (D) : DOWN

MECHANICAL EXPLODED VIEW 1/1

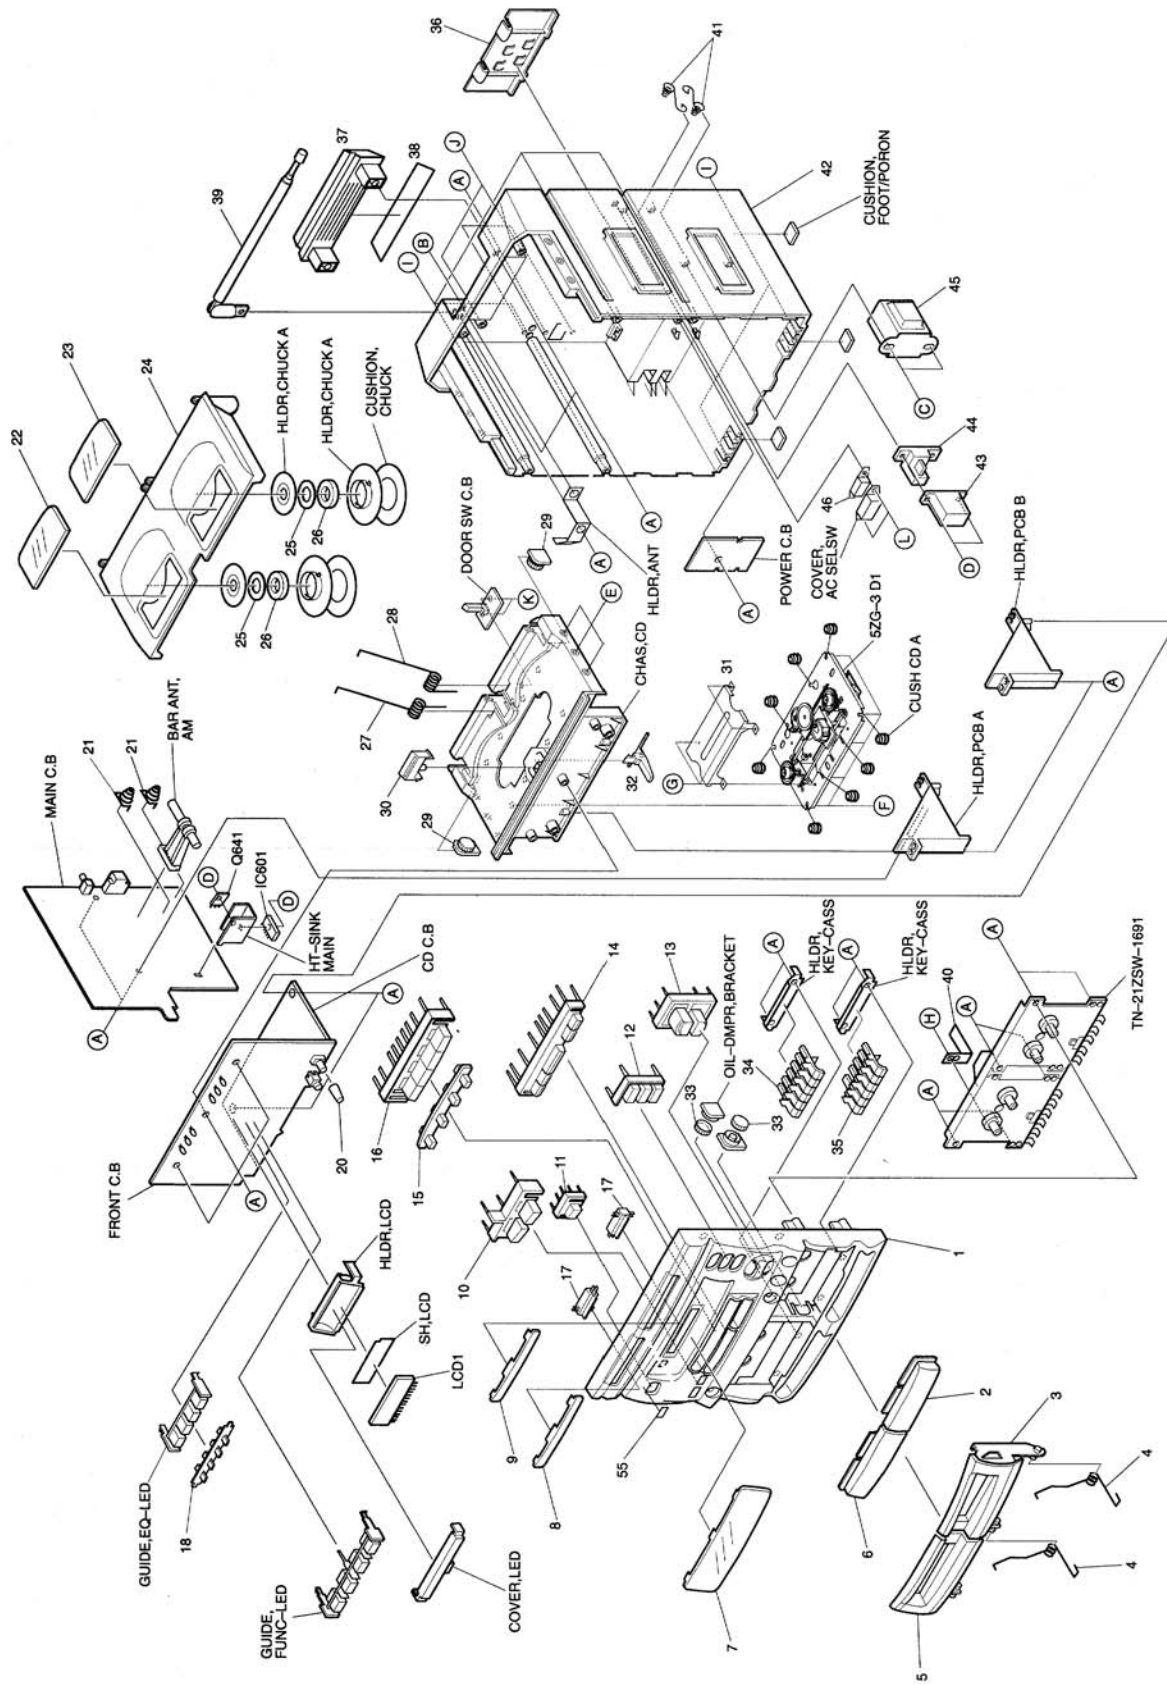


MECHANICAL PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION	REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	86-CT4-096-010		CABI,FR HE N	31	86-CT4-041-010		PANEL,CD
2	86-CT4-011-010		WINDOW,CASS 2	32	86-CT4-217-010		LEVER,EJECT
3	86-CT4-072-010		BOX,CASS 2 N	33	86-CT4-220-010		OIL-DMPR,GEAR
4	86-CT4-209-010		SPR-T,CASS	34	86-CT4-077-010		KEY,CASS 1 N
5	86-CT4-071-010		BOX,CASS 1 N	35	86-CT4-078-010		KEY,CASS 2 N
6	86-CT4-010-010		WINDOW,CASS 1	36	86-CT4-084-010		LID,BATT N
7	86-CT4-075-010		WINDOW,DISP N	37	86-CT4-085-010		HANDL,GRIP N
8	86-CT4-073-010		WINDOW,DISC 1 N	38	86-CT4-216-110		PLATE,HANDLE
9	86-CT4-074-010		WINDOW,DISC 2 N	39	86-CT4-616-010		ANT,ROD
10	86-CT4-088-010		BTN,DSL N	40	86-CT4-214-010		SPR-P,REC
11	86-CT4-087-010		BTN,PWR N	41	86-CT4-212-010		SPR-C,BATT A
12	86-CT4-090-010		BTN,EQ N	42	86-CT4-083-010		CABI,REAR N
13	86-CT4-082-010		BTN,VOL N	43	87-A90-086-010		COVER,AC-SOCKET
14	86-CT4-081-010		BTN,CONT N	△44	87-A60-178-010		JACK,AC E BLK W/SW
15	86-CT4-031-010		LENS,FUNC	△45	86-CT4-614-010		PT,H
16	86-CT4-080-010		BTN,FUNC N	△46	87-A90-146-010		SW,SL 1-1-2LK W/SW<LH>
17	86-CT4-033-010		LENS,DISC	A	87-751-097-410		VT2+3-12 W/O SLOT
18	86-CT4-032-010		LENS,EQ	B	87-493-100-410		VWWS+3-16 BLK
19	86-CT4-035-010		BADGE,AIWA 30N	C	87-661-100-410		VFT1+3-16
20	86-CT4-091-010		KNOB,RTRY MIC N	D	87-651-075-410		VT1+2.6-10
21	86-CT4-213-010		SPR-C,BATT B	E	87-623-097-410		QT1+3-12 BLK
22	86-CT4-014-010		WINDOW,CD 1	F	81-CD5-204-110		SCREW,CD
23	86-CT4-015-010		WINDOW,CD 2	G	87-067-520-010		VFTT+2-6
24	86-CT4-086-010		BOX,CD N	H	87-571-032-410		VIT+2-3
25	86-CT4-224-010		PLATE,MAGNET	I	87-651-104-410		VT1+3-30
26	87-036-368-010		MAGNET,	J	87-651-100-410		VT1+3-16
27	86-CT4-210-010		SPR-T,CD 1	K	87-661-097-410		VFT1+3-12
28	86-CT4-227-010		SPR-T,CD 2A	L	87-067-579-010		BVT2+3-8 W/O SLOT
29	87-063-165-010		OIL-DMPR,150				
30	86-CT4-079-010		BTN,CD OPEN N				

TAPE MECHANISM EXPLODED VIEW 1/2

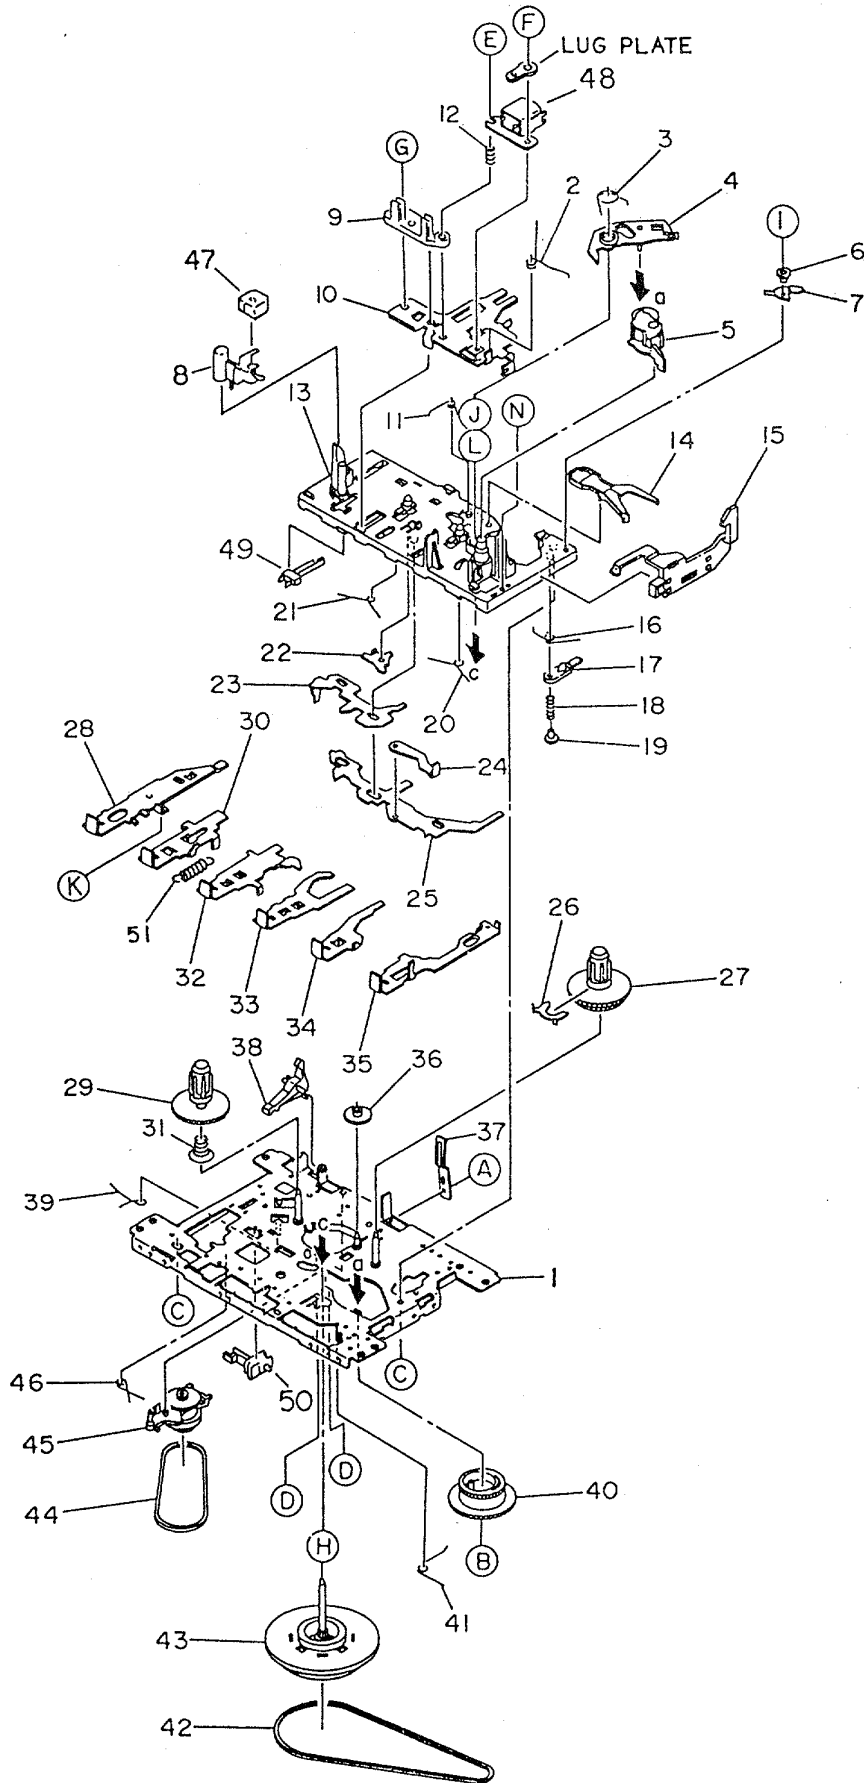


TAPE MECHANISM PARTS LIST 1/2

DESCRIPTIONで判断できない物は“REFERENCE NAME LIST”を参照してください。
 If can't understand for Description please kindly refer to “REFERENCE NAME LIST”.

REF. NO	PART NO.	カリ NO.	DESCRIPTION	REF. NO	PART NO.	カリ NO.	DESCRIPTION
1	S1-921-015-010		CHASSIS ASSY	36	S1-821-100-700		FF GEAR
2	S1-921-030-030		PANEL P SPRING	37	S1-829-100-010		PACK SPRING
3	S1-921-260-050		GEAR PLATE SPRING	38	S1-821-100-690		RECORD SAFETY LEVER
4	S1-921-265-020		GEAR PLATE ASSY	39	S1-921-140-210		REC BUTTON LEVER SPRING
5	S1-921-043-090		PINCH ROLLER ARM ASSY	40	S1-921-260-020		CAM GEAR
6	S1-921-140-370		P ARM COLLER	41	S1-921-140-160		E ACTUATOR SPRING
7	S1-921-140-340		P ARM	42	S1-921-090-240		MAIN BELT
8	S1-921-030-050		MG ARM	43	S1-921-093-030		FLYWHEEL ASSY
9	S1-921-030-4A0		HEAD BASE	44	S1-921-070-030		RF BELT
10	S1-921-030-110		HEAD PANEL	45	S1-921-073-080		RF CLUTCH ASSY
11	S1-921-141-8A0		M CONTROL SPRING	46	S1-921-140-170		P.S.LEVER SPRING
12	S1-821-030-070		AZIMUTH SPRING	47	S6-209-100-100		E HEAD PH-K380-MS1
13	S1-921-143-010		BASE ASSY	48	S6-201-011-110		HEAD,RP7442ES-0951
14	S1-921-260-4A0		SENSING LEVER	49	S6-401-011-520		LEAF SW MSW-1541F
15	S1-921-130-020		EJECT SLIDE LEVER	50	S6-401-011-610		LEAF SW MSW-17820MVEI
16	S1-921-141-3A0		P CONTROL SPRING	51	S1-821-010-500		PLAY BUTTON LEVER SPRING
17	S1-921-140-820		PAUSE LEVER(F)	A	S9-P33-200-320		DEL TITE SCREW M2-3
18	S1-921-140-120		PAUSE LEVER SPRING	B	S9-422-000-000		P WASHER CUT 12-3.8-0.3
19	S1-921-140-110		PAUSE STOPPER	C	S9-679-000-000		P TAP SCREW M2-5
20	S1-921-140-150		BUTTON LEVER SPRING(B)	D	S9-999-180-090		TAP SCREW M2-4.5
21	S1-921-140-140		BUTTON LEVER SPRING(A)	E	S9-922-000-000		AZIMUTH SCREW M2-8
22	S1-921-140-200		PR STOPPER	F	S9-P01-200-310		SCREW,M2-3
23	S1-921-140-090		SWITCH ACTUATOR	G	S9-004-000-000		SCREW,M2-6
24	S1-821-011-590		E KICK LEVER	H	S9-882-000-000		P WASHER 2-3.5-0.4
25	S1-921-140-080		PUSH BUTTON ACTUATOR	I	S9-999-200-410		P TAP SCREW M2-3
26	S1-921-050-060		SENSOR	J	S9-999-030-130		P WASHER CUT 1.45-3.8-0.
27	S1-921-053-030		TAKE UP REEL ASSY	K	S9-179-000-000		C TAP SCREW M2-3
28	S1-921-140-220		REC BUTTON LEVER	L	S9-999-000-030		P WASHER2.1-4-0.13
29	S1-921-053-040		SUPPLY REEL ASSY				
30	S1-921-140-230		PLAY BUTTON LEVER				
31	S1-829-100-100		BACK TENSION SPRING				
32	S1-921-140-240		REW BUTTON LEVER				
33	S1-921-140-250		FF BUTTON LEVER				
34	S1-921-140-260		STOP BUTTON LEVER				
35	S1-921-140-610		PAUSE BUTTON LEVER				


TAPE MECHANISM EXPLODED VIEW 2/2

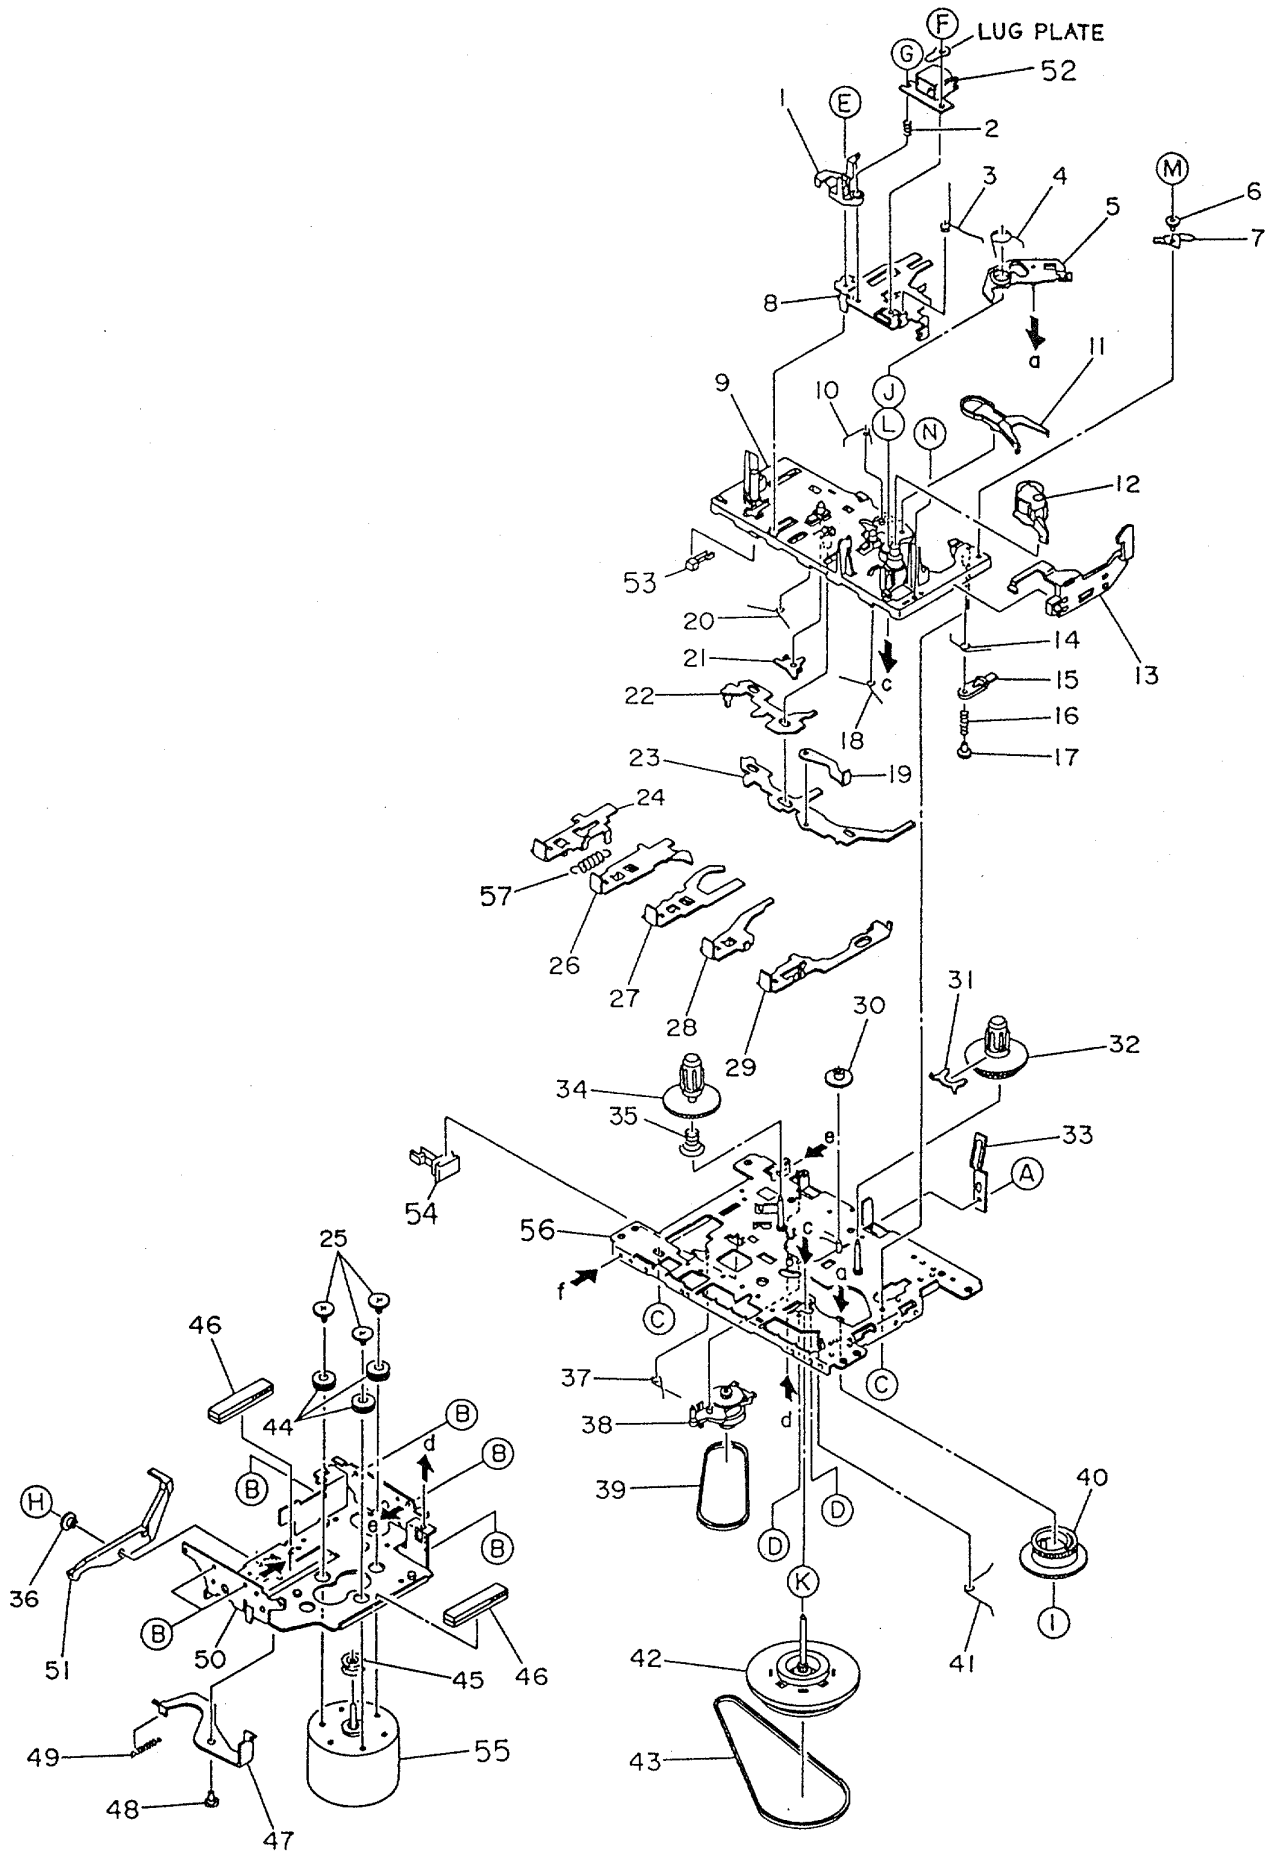

TAPE MECHANISM PARTS LIST 2/2

REF. NO	PART NO.	カンリ NO.	DESCRIPTION	REF. NO	PART NO.	カンリ NO.	DESCRIPTION
1	S1-921-030-4A0		HEAD BASE	41	S1-921-140-160		E ACTUATOR SPRING
2	S1-821-030-070		AZIMUTH SPRING	42	S1-921-093-040		FLYWHEEL ASSY
3	S1-921-030-030		PANEL P SPRING	43	S1-921-090-240		MAIN BELT
4	S1-921-260-050		GEAR PLATE SPRING	44	S1-820-130-060		MOTOR RUBBER
5	S1-921-265-020		GEAR PLATE ASSY	45	S1-921-120-130		MOTOR PULLEY
6	S1-921-140-370		P ARM COLLER	46	S1-921-120-120		ANTI VIBR FELT MAT
7	S1-921-140-340		P ARM	47	S1-821-120-680		P KICK LEVER (A)
8	S1-921-030-110		HEAD PANEL	48	S1-821-120-230		PK COLLER SCREW A
9	S1-921-143-010		BASE ASSY	49	S1-821-120-250		P KICK LEVER SPRING
10	S1-921-141-8A0		M CONTROL SPRING	50	S1-921-120-110		MOTOR BRACKET
11	S1-921-260-4A0		SENSING LEVER	51	S1-921-120-090		P KICK LEVER
12	S1-921-043-090		PINCH ROLLER ARM ASSY	52	S6-201-011-110		HEAD, RP7442ES-0951
13	S1-921-130-020		EJECT SLIDE LEVER	53	S6-401-011-520		LEAF SW MSW-1541F
14	S1-921-141-3A0		P CONTROL SPRING	54	S6-401-011-610		LEAF SW MSW-17820MVE1
15	S1-921-140-820		PAUSE LEVER(F)	55	S6-002-030-290		MOTOR EG530YD-2BH
16	S1-921-140-120		PAUSE LEVER SPRING	56	S1-921-015-010		CHASSIS ASSY
17	S1-921-140-110		PAUSE STOPPER	57	S1-821-010-500		PLAY BUTTON LEVER SPRING
18	S1-921-140-150		BUTTON LEVER SPRING(B)	A	S9-P33-200-320		DEL TITE SCREW M2-3
19	S1-821-011-590		E KICK LEVER	B	S9-180-000-000		C TAP SCREW M2-4
20	S1-921-140-140		BUTTON LEVER SPRING(A)	C	S9-679-000-000		P TAP SCREW M2-5
21	S1-921-140-200		PR STOPPER	D	S9-999-180-090		TAP SCREW M2-4.5
22	S1-921-140-090		SWITCH ACTUATOR	E	S9-004-000-000		SCREW M2-6
23	S1-921-140-080		PUSH BUTTON ACTUATOR	F	S9-P01-200-310		SCREW, M2-3
24	S1-921-140-230		PLAY BUTTON LEVER	G	S9-922-000-000		AZIMUTH SCREW M2-8
25	S1-821-120-020		MOTOR COLLER SCREW	H	S9-182-000-000		C TAP SCREW M2-6
26	S1-921-140-240		REW BUTTON LEVER	I	S9-422-000-000		P WASHER CUT 12-3.8-0.3
27	S1-921-140-250		FF BUTTON LEVER	J	S9-999-030-130		P WASHER CUT 1.45-3.8-0.
28	S1-921-140-260		STOP BUTTON LEVER	K	S9-882-000-000		P WASHER 2-3.5-0.4
29	S1-921-140-610		PAUSE BUTTON LEVER	L	S9-999-000-030		P WASHER 2.1-4-0.13
30	S1-821-100-700		FF GEAR	M	S9-999-200-410		P TAP SCREW M2-3
31	S1-921-050-060		SENSOR	N	S9-P05-200-810		SCREW, S TAP 2-8
32	S1-921-053-030		TAKE UP REEL ASSY				
33	S1-829-100-010		PACK SPRING				
34	S1-921-053-040		SUPPLY REEL ASSY				
35	S1-829-100-100		BACK TENSION SPRING				
36	S1-821-120-650		COLLER B				
37	S1-921-140-170		P.S.LEVER SPRING				
38	S1-921-073-080		RF CLUTCH ASSY				
39	S1-921-070-030		RF BELT				
40	S1-921-260-020		CAM GEAR				

CD MECHANISM EXPLODED VIEW 1/1

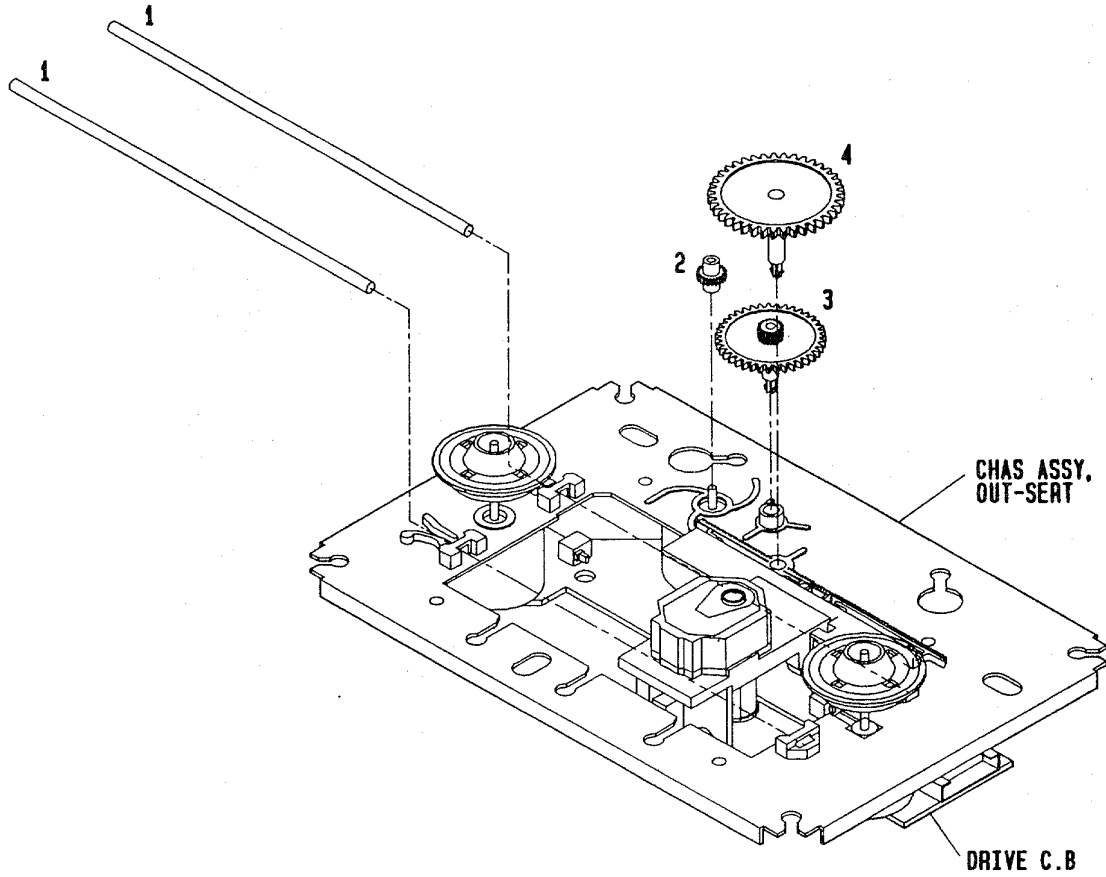


CD MECHANISM PARTS LIST 1/1

DESCRIPTIONで判断できない物は“REFERENCE NAME LIST”を参照してください。
 If can't understand for Description please kindly refer to “REFERENCE NAME LIST”.

REF. NO	PART NO.	カリ NO.	DESCRIPTION
1	85-ZG3-215-010		SHAFT, GUIDE
2	85-ZG3-210-010		GEAR, MOTOR
3	85-ZG3-211-010		GEAR, A
4	85-ZG3-212-010		GEAR, B
ALL	M8-5ZG-392-070		5ZG-3 D1

* Replacement the whole mechanism assembly (SZG-3) for other components.

SPEAKER EXPLODED VIEW 1/1

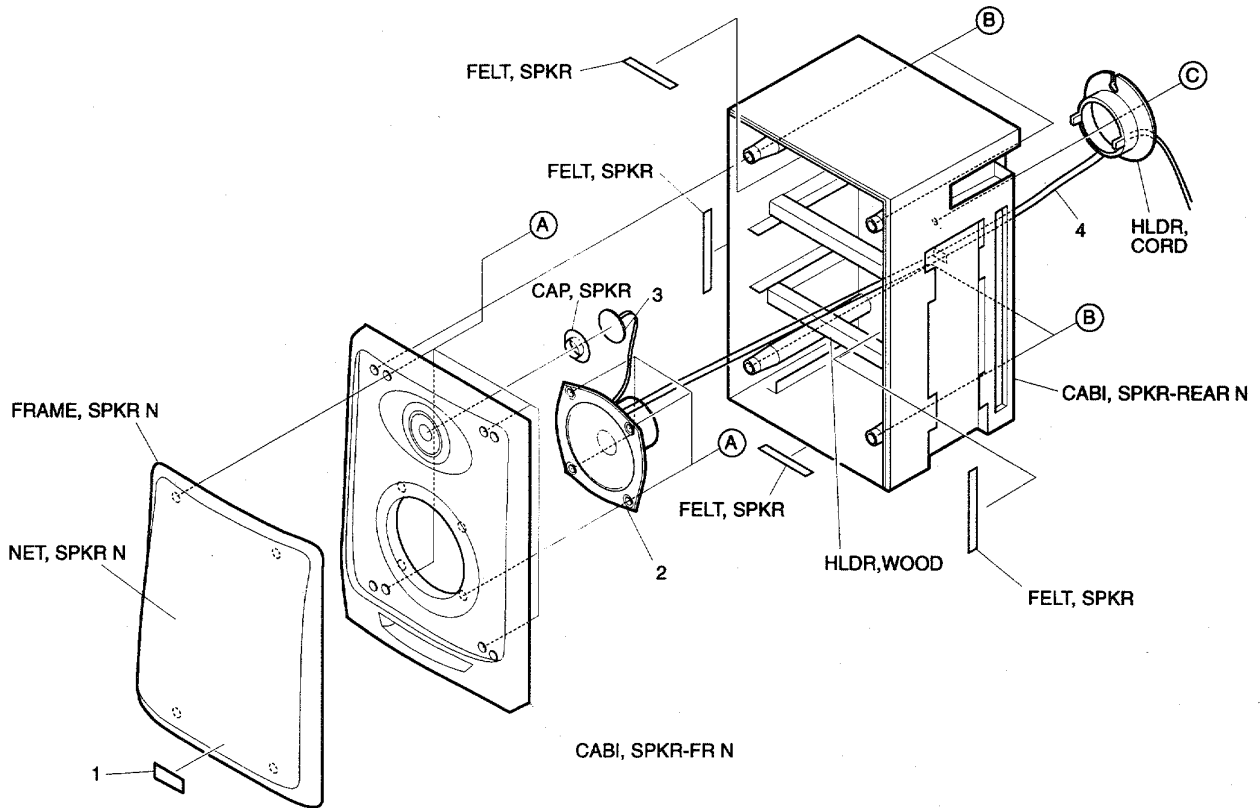

SPEAKER PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
 If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	86-CT4-036-010	BADGE, AIWA	
2	86-CT4-625-010	SPKR, W 120 4OHM 15W 6CT-4	
3	86-CT4-626-010	SPKR, T 100OHM	
4	86-CT4-627-010	CORD, 2PSPKR	
A	87-661-097-410	VFT1+3-12	
B	87-651-100-410	VT1+3-16	
C	87-751-097-410	VT2+3-12 W/O SLOT	

REFERENCE NAME LIST ELECTRICAL SECTION

DESCRIPTION	REFERENCE NAME
ANT	ANTENNAS
C-	CHIP
C-CAP	CAP, CHIP
C-CAP TN	CAP, CHIP TANTALUM
C-COIL	COIL, CHIP
C-DI	DIODE, CHIP
C-DIODE	DIODE, CHIP
C-FET	FET, CHIP
C-FOTR	FILTER, CHIP
C-JACK	JACK, CHIP
C-LED	LED, CHIP
C-RES	RES, CHIP
C-SFR	SFR, CHIP
C-SLIDE SW	SLIDE SWITCH, CHIP
C-SW	SWITCH, CHIP
C-TR	TRANSISTOR, CHIP
C-VR	VOLUME, CHIP
C-ZENER	ZENER, CHIP
CAP, CER	CAP, CERA-SOL
CAP, E	CAP, ELECT
CAP, M/F	CAP, FILM
CAP, TC	CAP, CERA-SOL
CAP, TC-U	CAP, CERA-SOL SS
CAP, TN	CAP, TANTALUM
CERA FIL	FILTER, CERAMIC
CF	FILTER, CERAMIC
DL	DELAY LINE
E/CAP	CAP, ELECT
FILT	FILTER
FLTR	FILTER
FUSE RES	RES, FUSE
MOT	MOTOR
P-DIODE	PHOTO DIODE
P-SNSR	PHOTO SENSER
P-TR	PHOTO TRANSISTOR
POLY VARI	VARIABLE CAPACITOR
PPCAP	CAP, PP
PT	POWER TRANSFORMER
PTR, RES	PTR, MELF
RC	REMOTE CONTROLLER
RES NF	RES, NON-FLAMMABLE
RESO	RESONATOR
SHLD	SHIELD
SOL	SOLENOID
SPKR	SPEAKER
SW, LVR	SWITCH, LEVER
SW, RTRY	SWITCH, ROTARY
SW, SL	SWITCH, SLIDE
TC CAP	CAP, CERA-SOL
THMS	THERMISTOR
TR	TRANSISTOR
TRIMMER	CAP, TRIMMER
TUN-CAP	VARIABLE CAPACITOR
VIB, CER	RESONATOR, CERAMIC
VIB, XTAL	RESONATOR, CRYSTAL
VR	VOLUME
ZENER	DIODE, ZENER

MECHANICAL SECTION

DESCRIPTION	REFERENCE NAME
ADHESHIVE	SHEET ADHESHIVE
AZ	AZIMUTH
BAR-ANT	BAR-ANTENNA
BAT	BATTERY
BATT	BATTERY
BRG	BEARING
BTN	BUTTON
CAB	CABINET
CASS	CASSETTE
CHAS	CHASSIS
CLR	COLLAR
CONT	CONTROL
CRSR	CURSOR
CU	CUSHION
CUSH	CUSHION
DIR	DIRECTION
DUBB	DUBBING
FL	FRONT LOADING
FLY-WHL	FLYWHEEL
FR	FRONT
FUN	FUNCTION
G-CU	G-CUSHION
HDL	HANDOL
HIMERON	CLOTH
HINGE, BAT	HINGE, BATTERY
HLDR	HOLDER
HT-SINK	HEAT SINK
IB	INSTRUCTION BOOKLET
IDLE	IDLER
IND, L-R	INDICATOR, L-R
KEY, CONT	KEY, CONTROL
KEY, PRGM	KEY, PROGRAM
KNOB, SL	KNOB, SLIDE
LBL	LABEL
LID, BATT	LID, BATTERY
LID, CASS	LID, CASSETTE
LVR	LEVER
P-SP	P-SPRING
PANEL, CONT	PANEL, CONTROL
PANEL, FR	PANEL, FRONT
PRGM	PROGRAM
PULLY, LOAD MO	PULLY, LOAD MOTOR
RBN	RIBBON
S-	SPECIAL
SEG	SEGMENT
SH	SHEET
SHLD-SH	SHIELD-SHEET
SL	SLIDE
SP	SPRING
SP-SCREW	SPECIAL-SCREW
SPACER, BAT	SPACER, BATTERY
SPR	SPRING
SPR-P	P-SPRING
SPR-PC-PUSH	P-SPRING, C-PUSH
T-SP	T-SPRING
TERM	TERMINAL
TRIG	TRIGGER
TUN	TUNING
VOL	VOLUME
W	WASHER
WHL	WHEEL
WORM-WHL	WORM-WHEEL

サービス技術ニュース	
番号	連絡内容
G-	-
G-	-
G-	-

アイワ株式会社
AIWA CO., LTD.

931261

Tokyo Japan