

SERVICE MANUAL

COMPACT DISC STEREO
CASSETTE RECEIVER

BASIC TAPE MECHANISM : ZZM-2 APR1NC
BASIC CD MECHANISM : 3ZG-3 E8NC

SYSTEM	CD CASSEIVER	SPEAKER	REMOTE CONTROLLER
NSX-SZ2 (HR)	CX-NSZ2	SX-NSZ2	RC-AAS08
NSX-SZ2 (EZ)			

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual" NSX-SZ2 (HR, EZ), (S/M Code No. 09-007-433-7T1).

SPECIFICATIONS

<FM tuner section>

Tuning range 87.5 MHz to 108 MHz
Usable sensitivity (IHF) **HR:** 13.2 dBf
EZ: 16.8 dBf
Antenna terminals 75 ohms (unbalanced)

<AM (MW) tuner section>

Tuning range 531 kHz to 1602 kHz (9kHz step)
 530 kHz to 1710 kHz (10 kHz step)
Usable sensitivity 350 μ V/m
Antenna Loop antenna

<LW tuner section><EZ>

Tuning range 144 kHz to 290 kHz
Usable sensitivity 1400 μ V/m
Antenna Loop antenna

<Amplifier section>

Power output **HR:**
 Rated: 8 W + 8 W (6 ohms,
 T.H.D. 1 %, 1 kHz)
 Reference: 10 W + 10 W (6 ohms,
 T.H.D. 10 %, 1 kHz)
EZ:
 Rated: 8 W + 8 W (6 ohms,
 T.H.D. 1 %, 1 kHz/DIN 45500)
 Reference: 10 W + 10 W (6 ohms,
 T.H.D. 10 %, 1 kHz/DIN 45324)
 DIN MUSIC POWER: 24 W + 24 W
 0.1 % (5 W, 1 kHz, 6 ohms, DIN
 AUDIO)
Total harmonic distortion
Inputs VIDEO/AUX: 500 mV
Outputs SPEAKERS: 6 ohms or more
 PHONES: 32 ohms or more

<Cassette deck section>

Track format 4 tracks, 2 channels stereo
Frequency response 50 Hz – 8000 Hz
Recording system AC bias
Heads Deck 1: recording/playback x 1,
 erase x 1
 Deck 2: playback x 1

<Compact disc player section>

Laser Semiconductor laser ($\lambda = 780$ nm)

<Speaker system SX-NSZ2>

Speaker system 1 way, bass reflex
Speaker units Full range: 100 mm cone
Impedance 6 ohms
Dimensions (W x H x D) 196 x 301 x 198 mm
Weight 1.8 kg

<General>

Power requirements **HR:** 120 V / 220 - 230 V/ 240 V AC
 (switchable), 50 Hz / 60 Hz
EZ: 230 V AC, 50 Hz
Power consumption **HR:** 39 W
EZ: 43 W
Dimensions (W x H x D) 260 x 302.5 x 266 mm
Weight 3.5 kg


• Specifications and external appearance are subject to change without notice.

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

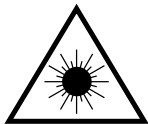

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.

The CLASS 1 LASER PRODUCT label is located on the rear exterior.

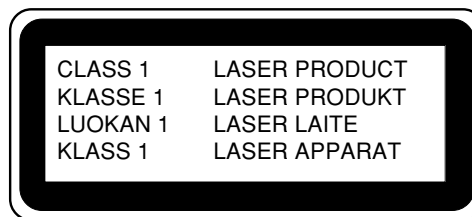


Precaution to replace Optical block

(KSS-213F)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in right figure.

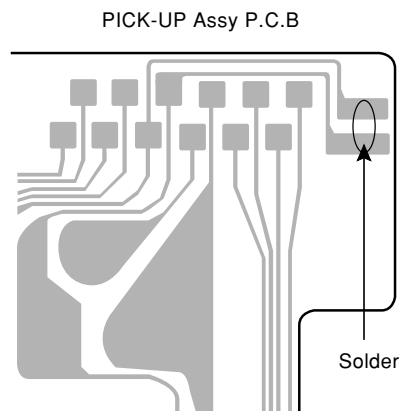

NOTE ON BEFORE STARTING REPAIR

1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

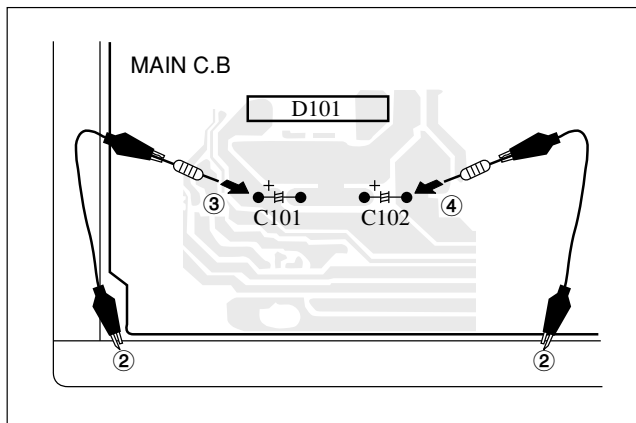


Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor (Ω)	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

Note: The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is “H”, the MICROCOMPUTER is judged to be operating correctly. When this terminal is “L”, the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go “L” when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to “L”.

• Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the “H” level or not.
- ③ When the HOLD terminal is “L” level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

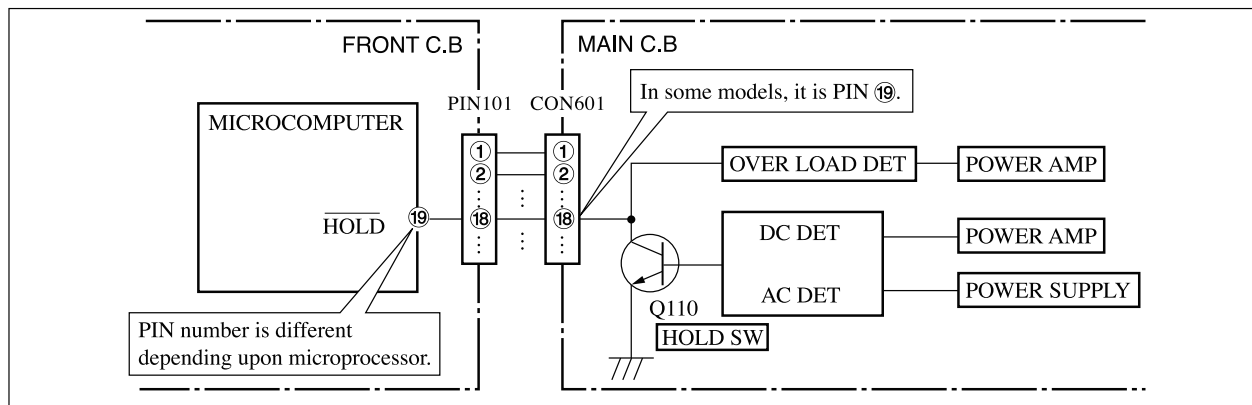


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

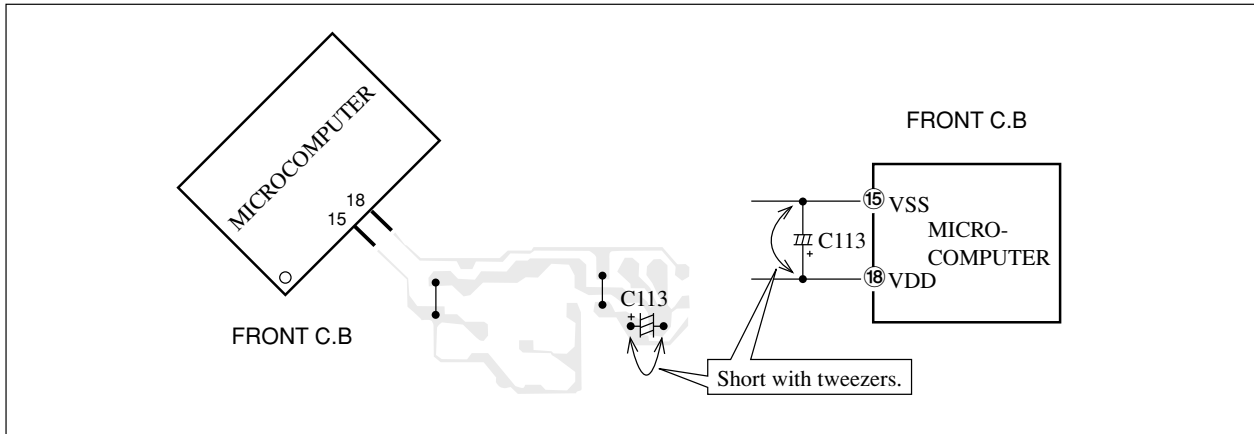


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

Note: The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

ELECTRICAL MAIN PARTS LIST

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C35	87-010-406-080		CAP, ELECT 22-50
	87-A21-591-010	C-IC, LC78641NE-D		C36	87-010-112-080		CAP, ELECT 100-16V
	87-A21-722-010	IC, LA6548D		C50	87-010-247-080		CAP, ELECT 100-50V
	87-A21-419-040	C-IC, NJM14558MD-TE2		C51	87-010-247-080		CAP, ELECT 100-50V
	8A-NEC-602-010	C-IC, M38B57MCH-E249FP		C60	87-010-403-080		CAP, ELECT 3.3-50V
	87-070-083-010	IC, GPlU281X		C61	87-010-260-080		CAP, ELECT 47-25V
	87-A21-443-040	C-IC, M62495AFP		C74	87-010-759-080		C-CAP,U, 0.1-25F<EZ>
	87-A21-560-010	IC, LA1844L-A		C101	87-012-284-080		CAP, U 6800P-50
	87-070-127-110	IC, LC72131 D		C102	87-012-284-080		CAP, U 6800P-50
	87-A21-381-040	C-IC, LA9235M		C103	87-010-544-080		CAP, ELECT 0.1-50V
TRANSISTOR				C104	87-010-544-080		CAP, ELECT 0.1-50V
	87-026-609-080	TR, KTA1266GR		C105	87-012-282-080		CAP, U 4700P-50
	89-213-702-010	TR, 2SB1370 (1.8W)		C106	87-012-282-080		CAP, U 4700P-50
	87-026-610-080	TR, KTC3198GR		C107	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-076-080	C-TR, 2SC3052F		C108	87-010-403-080		CAP, ELECT 3.3-50V
	87-A30-074-080	C-TR, RT1P 141C		C109	87-012-195-080		C-CAP,U 100P-50CH<EZ>
	87-A30-075-080	C-TR, 2SA1235F		C110	87-012-195-080		C-CAP,U 100P-50CH<EZ>
	87-A30-256-010	TR, 2SD1933		C111	87-010-406-080		CAP, ELECT 22-50
	87-A30-255-010	TR, 2SB1342		C112	87-010-406-080		CAP, ELECT 22-50
	87-A30-104-080	C-TR, RT1N 441C		C113	87-012-195-080		C-CAP,U 100P-50CH
	87-A30-520-080	TR, 2SC5342Y		C114	87-012-195-080		C-CAP,U 100P-50CH
	87-A30-090-080	FET, 2SK2541		C117	87-012-286-080		CAP, U 0.01-25
	87-A30-091-080	FET, 2SJ460		C118	87-012-286-080		CAP, U 0.01-25
	87-A30-062-080	C-TR, KRC104S		C119	87-012-286-080		CAP, U 0.01-25
	87-A30-318-080	TR, CSA952K		C120	87-012-286-080		CAP, U 0.01-25
	87-A30-492-080	TR, 2SC5343G		C123	87-012-336-080		C-CAP,U 330P-50 J SL<EZ>
	87-A30-234-080	TR, CSC4115BC		C124	87-012-336-080		C-CAP,U 330P-50 J SL<EZ>
	87-A30-521-080	C-TR, 2SC5345S (O)		C125	87-010-759-080		C-CAP,U, 0.1-25F
	87-A30-489-080	C-TR, KRA107S		C126	87-010-759-080		C-CAP,U, 0.1-25F
	89-503-602-080	C-FET, 2SK360E		C127	87-010-759-080		C-CAP,U, 0.1-25F
	89-327-143-080	C-TR, 2SC27140<HR>		C128	87-010-759-080		C-CAP,U, 0.1-25F
	87-A30-086-040	C-TR, CSD1306E<EZ>		C129	87-010-180-080		C-CAP,S 1500P-50 K B 0-C2012<EZ>
	87-A30-484-080	C-TR, KRA102S<EZ>		C130	87-010-180-080		C-CAP,S 1500P-50 K B 0-C2012<EZ>
DIODE				C140	87-010-190-080		S CHIP F 0.01
	87-A40-535-080	DIODE, 1N5393-GOODARK<EZ>		C301	87-010-374-080		CAP, ELECT 47-10V
	87-A40-553-080	DIODE, 1N4003 LES		C302	87-010-759-080		C-CAP,U, 0.1-25F
	87-A40-777-080	ZENER, UZ30BSB		C303	87-010-260-080		CAP, ELECT 47-25V
	87-020-465-080	DIODE, 1SS133 (110MA)		C304	87-010-260-080		CAP, ELECT 47-25V
	87-A40-764-080	ZENER, UZ10BSC		C305	87-012-286-080		CAP, U 0.01-25
	87-A40-313-080	C-DIODE, MC 2840		C306	87-010-405-080		CAP, ELECT 10-50V
	87-A40-269-080	C-DIODE, MC2836		C307	87-010-263-080		CAP, ELECT 100-10V
	87-A40-270-080	C-DIODE, MC2838		C308	87-012-349-080		C-CAP,S 1000P-50 CH
	87-A40-758-080	ZENER, UZ8.2BSB		C309	87-010-546-080		CAP, ELECT 0.33-50V
	87-A40-747-080	ZENER, UZ5.1BSB		C310	87-010-401-080		CAP, ELECT 1-50V
	87-A40-743-080	ZENER, UZ4.3BSA		C311	87-012-193-080		C-CAP,U 82P-50 CH
	87-A40-749-080	ZENER, UZ5.6BSB		C312	87-012-286-080		CAP, U 0.01-25
	87-A40-739-080	ZENER, UZ2.7BSA		C313	87-010-260-080		CAP, ELECT 47-25V
	87-A40-748-080	ZENER, UZ5.6BSA		C331	87-A10-504-080		C-CAP,U 0.047-16 K B
	87-A40-760-080	ZENER, UZ9.1BSA		C332	87-010-401-080		CAP, ELECT 1-50V
	87-A40-455-090	DIODE, RL203 GW<HR>		C333	87-010-759-080		C-CAP,U, 0.1-25F
MAIN C.B				C334	87-010-759-080		C-CAP,U, 0.1-25F
C9	87-010-759-080	C-CAP,U, 0.1-25F		C335	87-010-260-080		CAP, ELECT 47-25V
C10	87-010-759-080	C-CAP,U, 0.1-25F		C336	87-012-195-080		C-CAP,U 100P-50CH
C11	87-010-759-080	C-CAP,U, 0.1-25F		C337	87-010-759-080		C-CAP,U, 0.1-25F
C12	87-010-759-080	C-CAP,U, 0.1-25F		C338	87-012-282-080		CAP, U 4700P-50
C21	87-016-495-000	CAP,E 3300-25 M SMG		C339	87-A10-504-080		C-CAP,U 0.047-16 K B
C22	87-A10-831-080	CAP,E 1000-25 M SMG		C340	87-012-195-080		C-CAP,U 100P-50CH
C23	87-010-387-080	CAP,E 470-25 SME		C341	87-010-260-080		CAP, ELECT 47-25V
C25	87-010-408-080	CAP, ELECT 47-50V		C342	87-012-286-080		CAP, U 0.01-25
C26	87-010-408-080	CAP, ELECT 47-50V		C344	87-010-260-080		CAP, ELECT 47-25V
C31	87-010-759-080	C-CAP,U, 0.1-25F		C345	87-012-286-080		CAP, U 0.01-25
C32	87-012-286-080	CAP, U 0.01-25		C346	87-010-248-080		CAP, ELECT 220-10V
C34	87-010-260-080	CAP, ELECT 47-25V		C347	87-012-286-080		CAP, U 0.01-25
				C348	87-010-263-080		CAP, ELECT 100-10V
				C349	87-012-286-080		CAP, U 0.01-25
				C350	87-012-176-080		CAP 15P
				C351	87-012-176-080		CAP 15P
				C352	87-010-404-080		CAP, ELECT 4.7-50V
				C353	87-012-286-080		CAP, U 0.01-25
				C354	87-010-401-080		CAP, ELECT 1-50V

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
C355	87-010-759-080		C-CAP,U, 0.1-25F	C460	87-010-759-080		C-CAP,U, 0.1-25F
C356	87-010-759-080		C-CAP,U, 0.1-25F	C461	87-012-158-080		C-CAP,S 390P-50 CH
C357	87-010-759-080		C-CAP,U, 0.1-25F	C462	87-012-158-080		C-CAP,S 390P-50 CH
C358	87-010-405-080		CAP, ELECT 10-50V	C470	87-A10-039-080		C-CAP,U 470P-50 J CH
C359	87-012-195-080		C-CAP,U 100P-50CH	C605	87-012-275-080		C-CAP,U 1200P-50 B
C360	87-012-349-080		C-CAP,S 1000P-50 CH	C606	87-012-275-080		C-CAP,U 1200P-50 B
C361	87-010-544-080		CAP, ELECT 0.1-50V	C609	87-010-785-080		C-CAP,U0.015-25BK
C362	87-010-544-080		CAP, ELECT 0.1-50V	C610	87-010-785-080		C-CAP,U0.015-25BK
C363	87-010-759-080		C-CAP,U, 0.1-25F	C611	87-010-545-080		CAP, ELECT 0.22-50V
C371	87-010-221-080		CAP, ELECT 470-10V	C612	87-010-545-080		CAP, ELECT 0.22-50V
C372	87-010-759-080		C-CAP,U, 0.1-25F	C613	87-010-545-080		CAP, ELECT 0.22-50V
C373	87-010-544-080		CAP, ELECT 0.1-50V	C614	87-010-545-080		CAP, ELECT 0.22-50V
C374	87-010-236-080		CAP,E 1000-10 SME	C615	87-012-172-080		CAPACITOR CHIP U 10P CH
C375	87-010-759-080		C-CAP,U, 0.1-25F	C616	87-010-248-080		CAP, ELECT 220-10V
C376	87-010-263-080		CAP, ELECT 100-10V	C617	87-010-221-080		CAP, ELECT 470-10V
C377	87-010-759-080		C-CAP,U, 0.1-25F	C618	87-010-405-080		CAP, ELECT 10-50V
C378	87-010-759-080		C-CAP,U, 0.1-25F	C630	87-A10-248-080		C-CAP,U0.1-16KBR
C379	87-010-759-080		C-CAP,U, 0.1-25F	C669	87-012-195-080		C-CAP,U 100P-50CH<EZ>
C380	87-010-759-080		C-CAP,U, 0.1-25F	C670	87-012-195-080		C-CAP,U 100P-50CH<EZ>
C381	87-010-759-080		C-CAP,U, 0.1-25F	C671	87-010-831-080		C-CAP,U,0.1-16F<HR>
C391	87-012-195-080		C-CAP,U 100P-50CH	C672	87-010-831-080		C-CAP,U,0.1-16F<HR>
C392	87-012-195-080		C-CAP,U 100P-50CH	C677	87-012-286-080		CAP, U 0.01-25
C393	87-012-195-080		C-CAP,U 100P-50CH	C679	87-A11-112-080		CAP,TC U 1000P-50 J CH
C394	87-012-195-080		C-CAP,U 100P-50CH	C771	87-010-263-080		CAP, ELECT 100-10V
C395	87-012-195-080		C-CAP,U 100P-50CH	C772	87-012-286-080		CAP, U 0.01-25
C396	87-012-195-080		C-CAP,U 100P-50CH	C779	87-010-971-080		C-CAP,S 4700P-50 B J<EZ>
C401	87-010-759-080		C-CAP,U, 0.1-25F	C780	87-010-971-080		C-CAP,S 4700P-50 B J<EZ>
C402	87-010-759-080		C-CAP,U, 0.1-25F	C782	87-012-286-080		CAP, U 0.01-25
C403	87-012-193-080		C-CAP,U 82P-50 CH	C783	87-012-286-080		CAP, U 0.01-25
C404	87-012-193-080		C-CAP,U 82P-50 CH	C784	87-012-286-080		CAP, U 0.01-25
C405	87-012-286-080		CAP, U 0.01-25	C785	87-012-286-080		CAP, U 0.01-25
C406	87-012-286-080		CAP, U 0.01-25	C786	87-012-286-080		CAP, U 0.01-25
C407	87-012-286-080		CAP, U 0.01-25	C788	87-012-167-080		C-CAP,U 5P-50 CH
C408	87-012-286-080		CAP, U 0.01-25	C789	87-A10-801-080		C-CAP,S 0.022-16 J B CM
C409	87-012-278-080		C-CAP,U 2200P-50 B	C790	87-A10-801-080		C-CAP,S 0.022-16 J B CM
C410	87-012-278-080		C-CAP,U 2200P-50 B	C791	87-010-759-080		C-CAP,U, 0.1-25F
C411	87-010-405-080		CAP, ELECT 10-50V	C792	87-012-286-080		CAP, U 0.01-25
C412	87-010-405-080		CAP, ELECT 10-50V	C793	87-010-404-080		CAP, ELECT 4.7-50V
C413	87-010-197-080		CAP, CHIP 0.01 DM	C794	87-012-270-080		C-CAP,U 470P-50CH<EZ>
C421	87-012-275-080		C-CAP,U 1200P-50 B	C795	87-012-286-080		CAP, U 0.01-25
C422	87-012-275-080		C-CAP,U 1200P-50 B	C796	87-012-286-080		CAP, U 0.01-25
C423	87-012-274-080		CHIP CAP,U 1000P-50B	C797	87-010-405-080		CAP, ELECT 10-50V
C424	87-012-274-080		CHIP CAP,U 1000P-50B	C798	87-012-286-080		CAP, U 0.01-25
C425	87-010-263-080		CAP, ELECT 100-10V	C799	87-010-407-080		CAP, ELECT 33-50V
C426	87-010-263-080		CAP, ELECT 100-10V	C800	87-010-829-080		CAP, U 0.047-16
C427	87-012-188-080		C-CAP,U 47P-50 CH	C801	87-010-403-080		CAP, ELECT 3.3-50V
C428	87-012-188-080		C-CAP,U 47P-50 CH	C802	87-010-829-080		CAP, U 0.047-16
C429	87-010-598-080		C-CAP,S 0.068-16VRK	C803	87-010-787-080		CAP, U 0.022-25
C430	87-010-598-080		C-CAP,S 0.068-16VRK	C804	87-010-263-080		CAP, ELECT 100-10V
C431	87-012-284-080		CAP, U 6800P-50	C807	87-010-400-080		CAP, ELECT 0.47-50V
C432	87-012-284-080		CAP, U 6800P-50	C808	87-010-401-080		CAP, ELECT 1-50V
C433	87-010-546-080		CAP, ELECT 0.33-50V	C809	87-010-401-080		CAP, ELECT 1-50V
C434	87-010-546-080		CAP, ELECT 0.33-50V	C810	87-010-759-080		C-CAP,U, 0.1-25F
C435	87-010-263-080		CAP, ELECT 100-10V	C814	87-012-286-080		CAP, U 0.01-25
C436	87-010-759-080		C-CAP,U, 0.1-25F<EZ>	C815	87-010-400-080		CAP, ELECT 0.47-50V
C437	87-010-759-080		C-CAP,U, 0.1-25F<EZ>	C816	87-010-400-080		CAP, ELECT 0.47-50V
C439	87-010-759-080		C-CAP,U, 0.1-25F<EZ>	C818	87-012-276-080		CAP, CHIP SS 1500 PBK<EZ>
C440	87-010-759-080		C-CAP,U, 0.1-25F<EZ>	C821	87-010-405-080		CAP, ELECT 10-50V
C441	87-010-759-080		C-CAP,U, 0.1-25F	C823	87-012-349-080		C-CAP,S 1000P-50 CH<EZ>
C442	87-010-759-080		C-CAP,U, 0.1-25F	C823	87-010-177-080		C-CAP,S 820P-50 SL<HR>
C443	87-010-759-080		C-CAP,U, 0.1-25F<EZ>	C824	87-010-404-080		CAP, ELECT 4.7-50V
C445	87-A10-039-080		C-CAP,U 470P-50 J CH	C825	87-010-596-080		CAP, S 0.047-16
C452	87-010-382-080		CAP, ELECT 22-25V	C831	87-010-406-080		CAP, ELECT 22-50<EZ>
C453	87-012-279-080		C-CAP,U 2700P-50 B	C836	87-012-286-080		CAP, U 0.01-25
C454	87-012-279-080		C-CAP,U 2700P-50 B	C837	87-012-286-080		CAP, U 0.01-25
C455	87-012-279-080		C-CAP,U 2700P-50 B	C842	87-012-286-080		CAP, U 0.01-25
C456	87-012-286-080		CAP, U 0.01-25	C844	87-012-286-080		CAP, U 0.01-25
C457	87-A12-361-080		CAP,M 5600P-100 J CP	C850	87-010-260-080		CAP, ELECT 47-25V
C458	87-012-274-080		CHIP CAP,U 1000P-50B<EZ>	C851	87-012-286-080		CAP, U 0.01-25
C459	87-010-175-080		CAP 560P<EZ>	C852	87-012-286-080		CAP, U 0.01-25

TRANSISTOR ILLUSTRATION



E C B

KTA1266GR
KTC3198GR
CSA952K



E C B

2SC5342Y




E C B

CSC4115BC




B C E

2SB1370




S D G

2SJ460
2SK2541




B C E

2SD1933
2SB1342

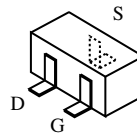

2SK360E

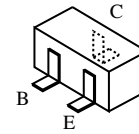


2SA1235F	RT1P141C
2SC2714O	RT1N441C
2SC3052F	CSD1306E
2SC5345S(0)	KRA107S
KRC104S	KRA102S




E C B

2SC5343G

B FRONT C. B

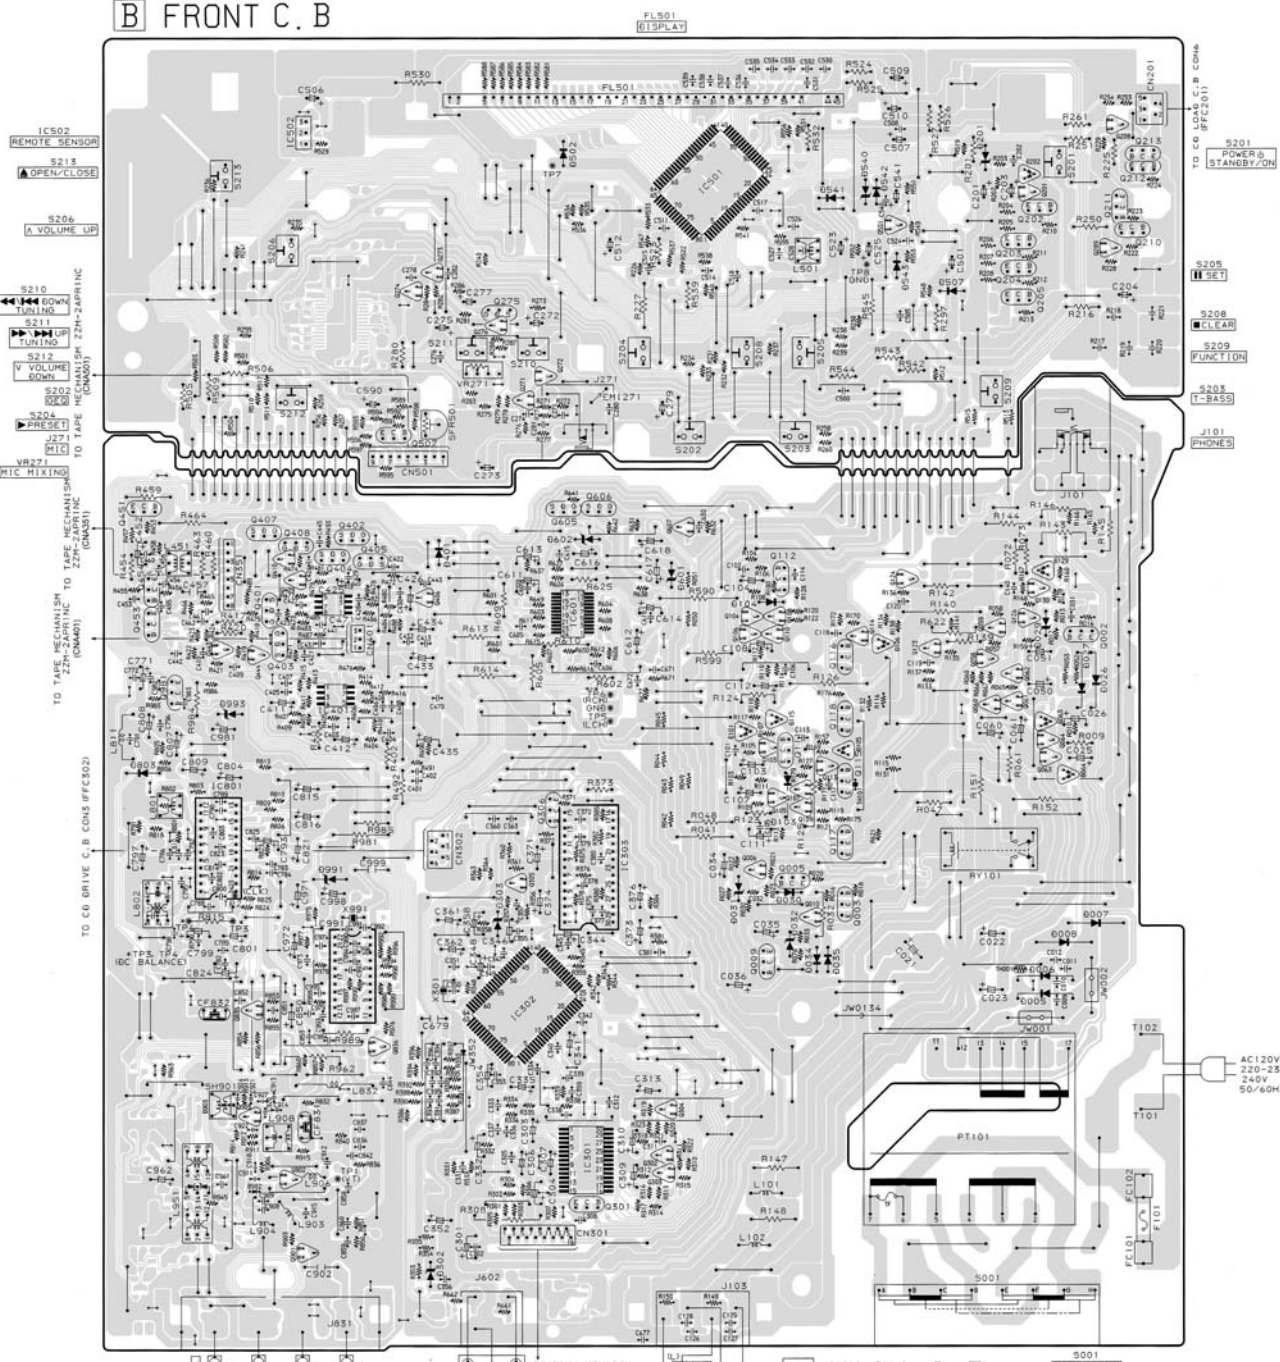

A MAIN C. B




A B C D E F G H I J K L M N O P Q R S T U

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32


WIRING - 2 (MAIN / FRONT) <EZ>

B FRONT C. B

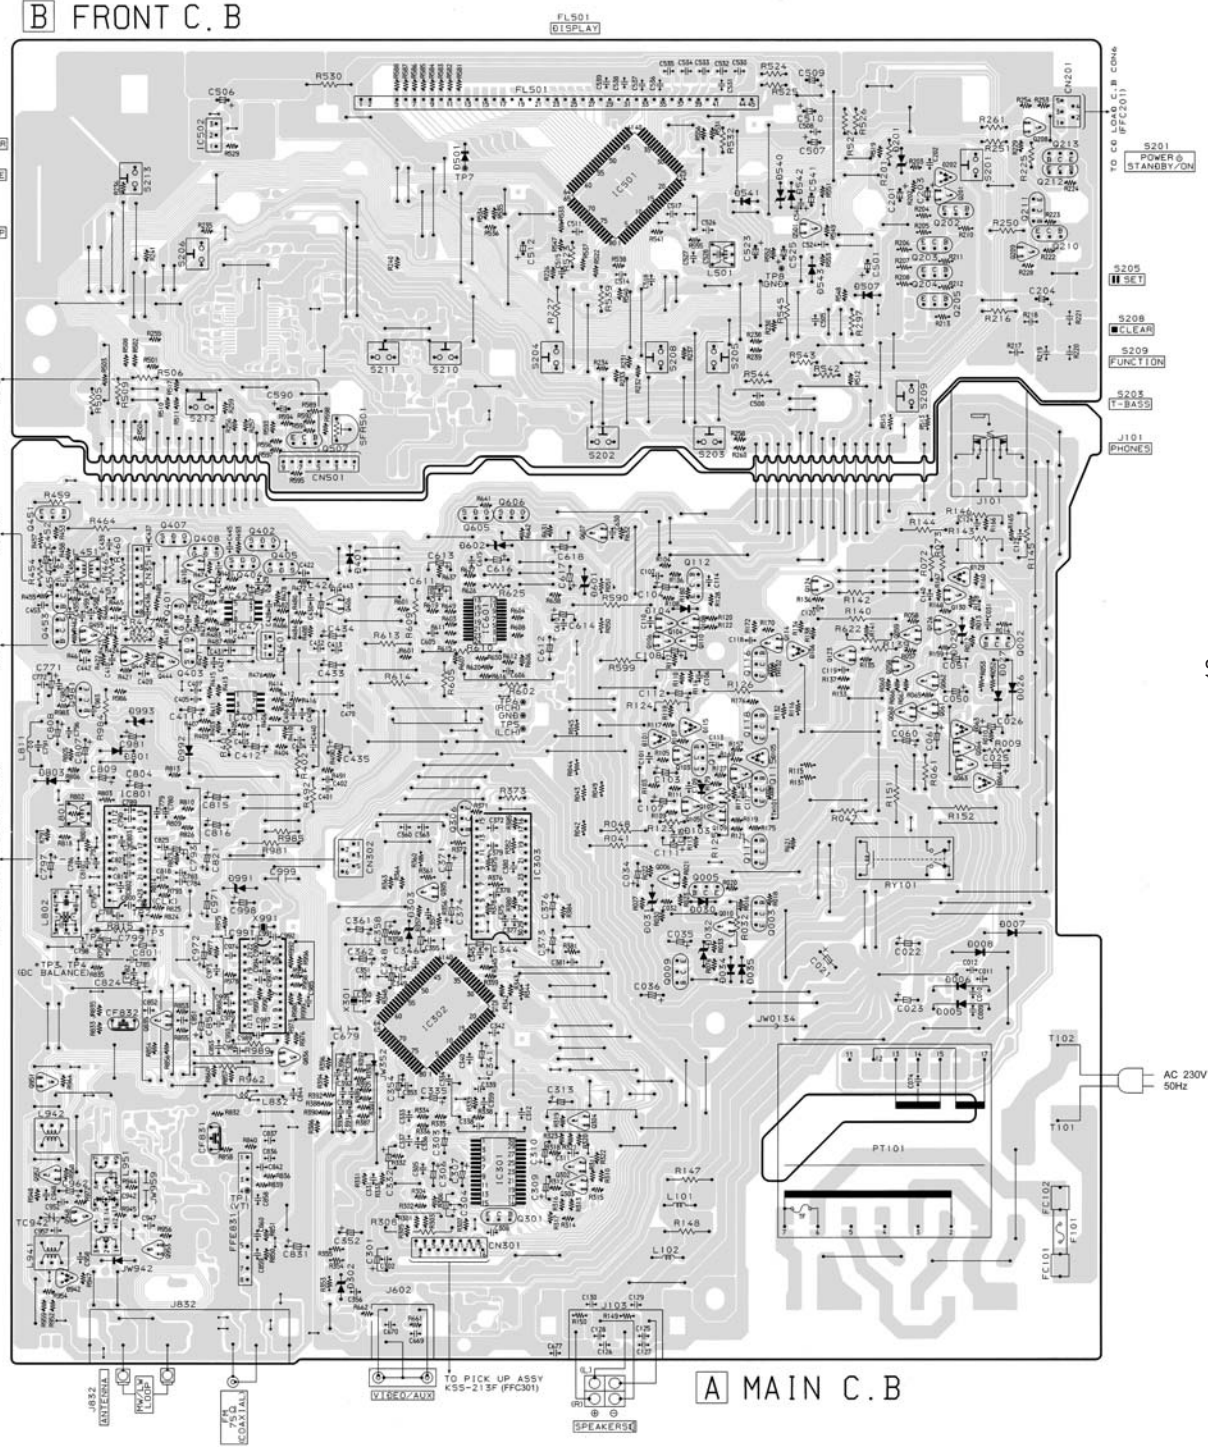


A MAIN C. B


SCHEMATIC DIAGRAM - 1 (MAIN 1/3 AMP SECTION)

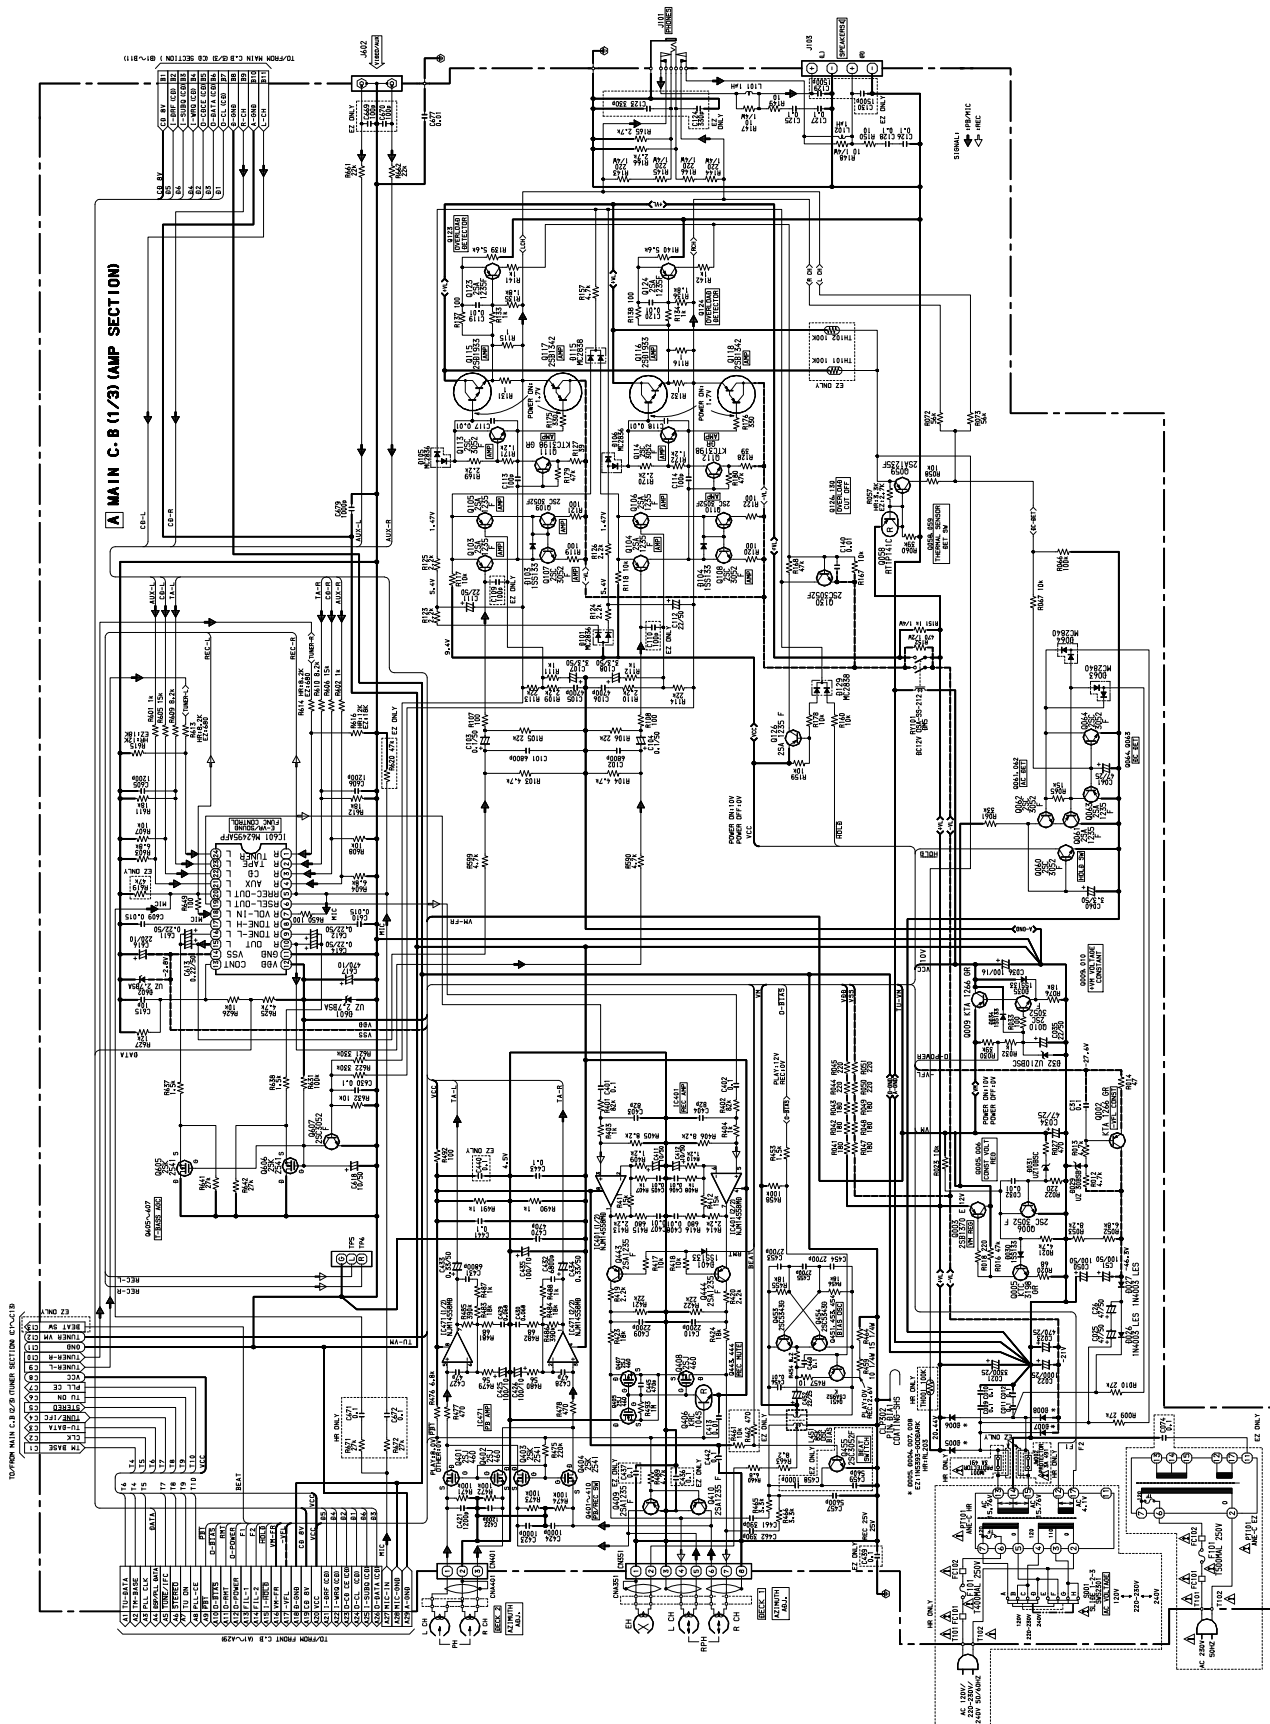


SCHEMATIC DIAGRAM - 2 (FRONT / CD LOAD)

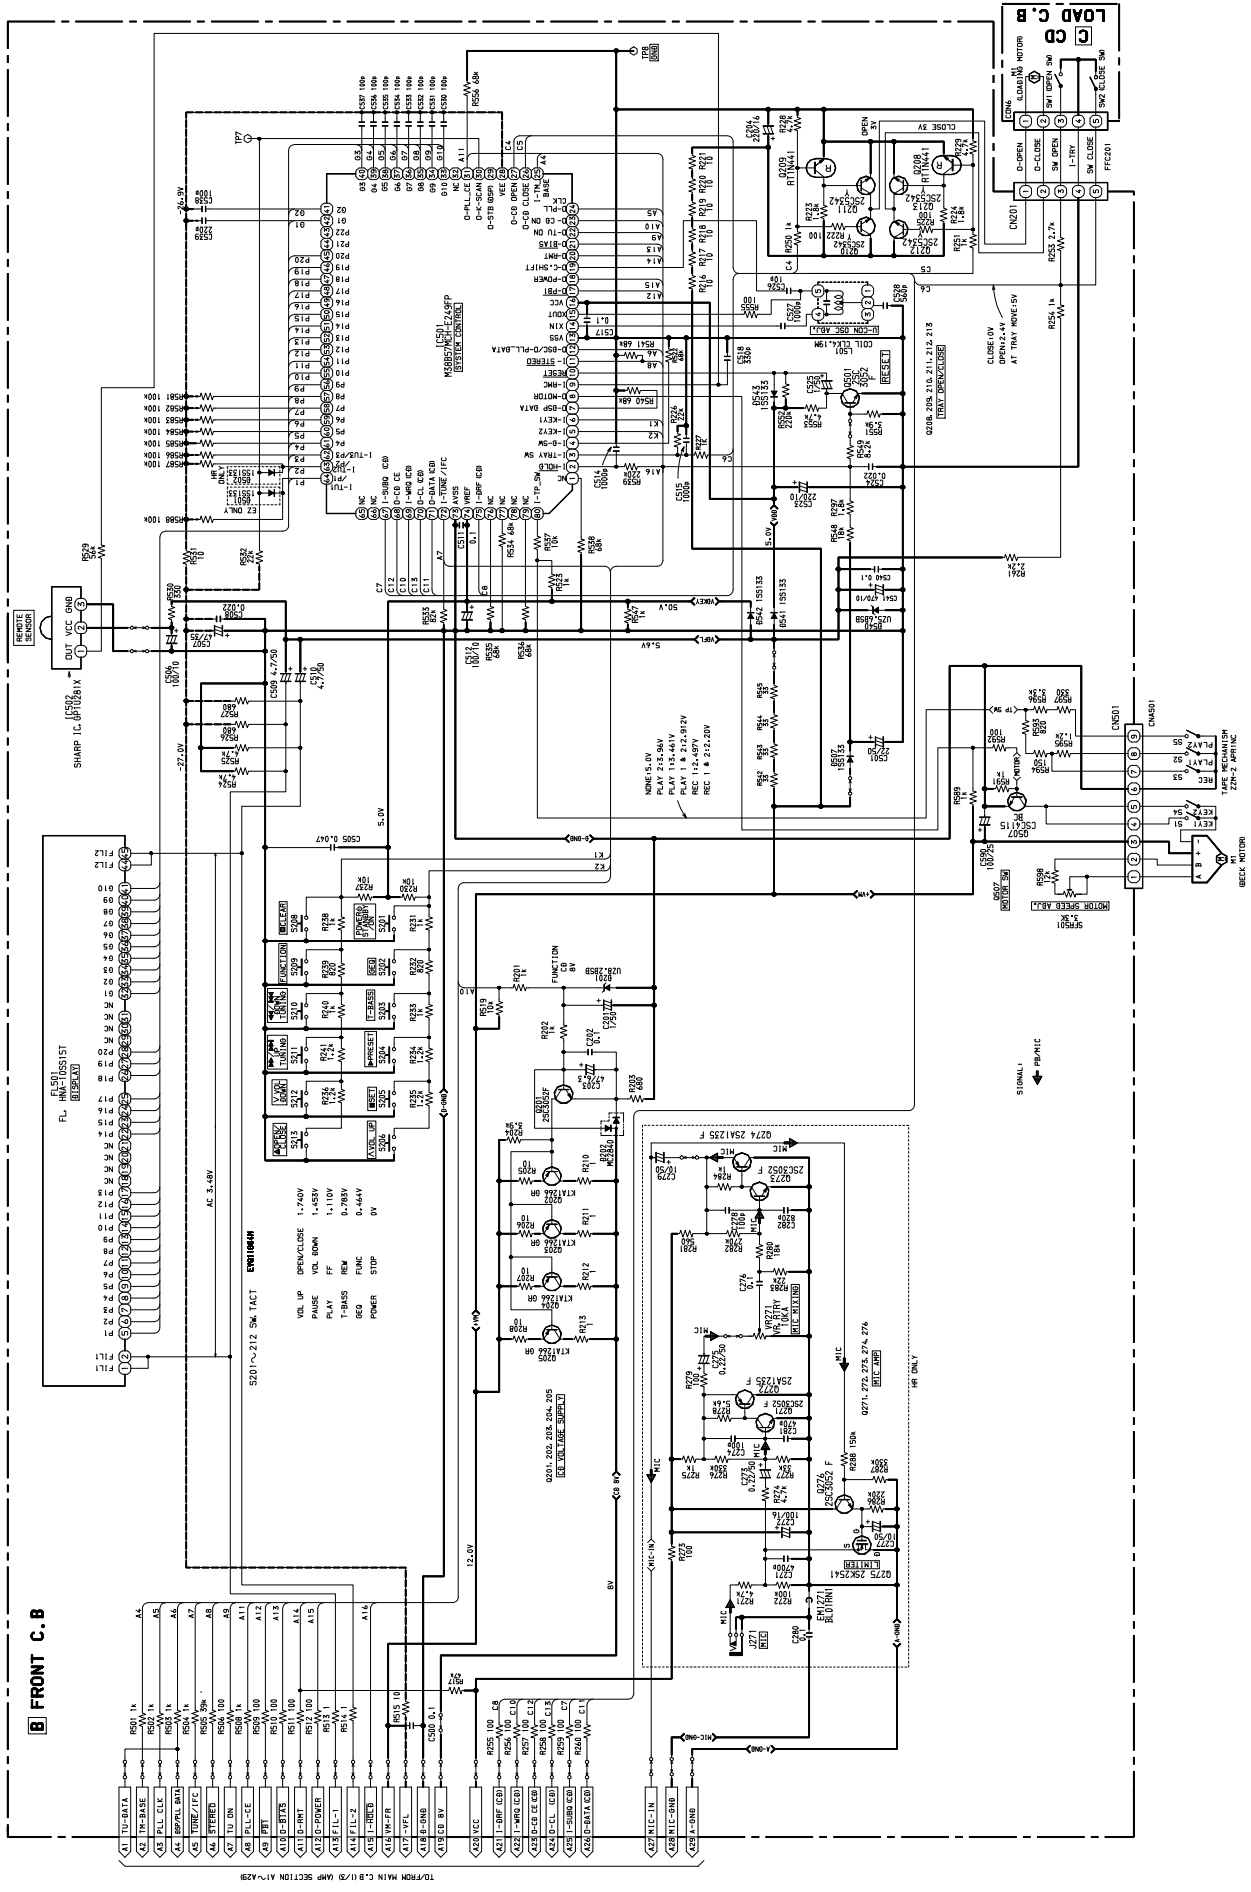


SCHEMATIC DIAGRAM - 3 (MAIN 2/3: TUNER SECTION) <HR>

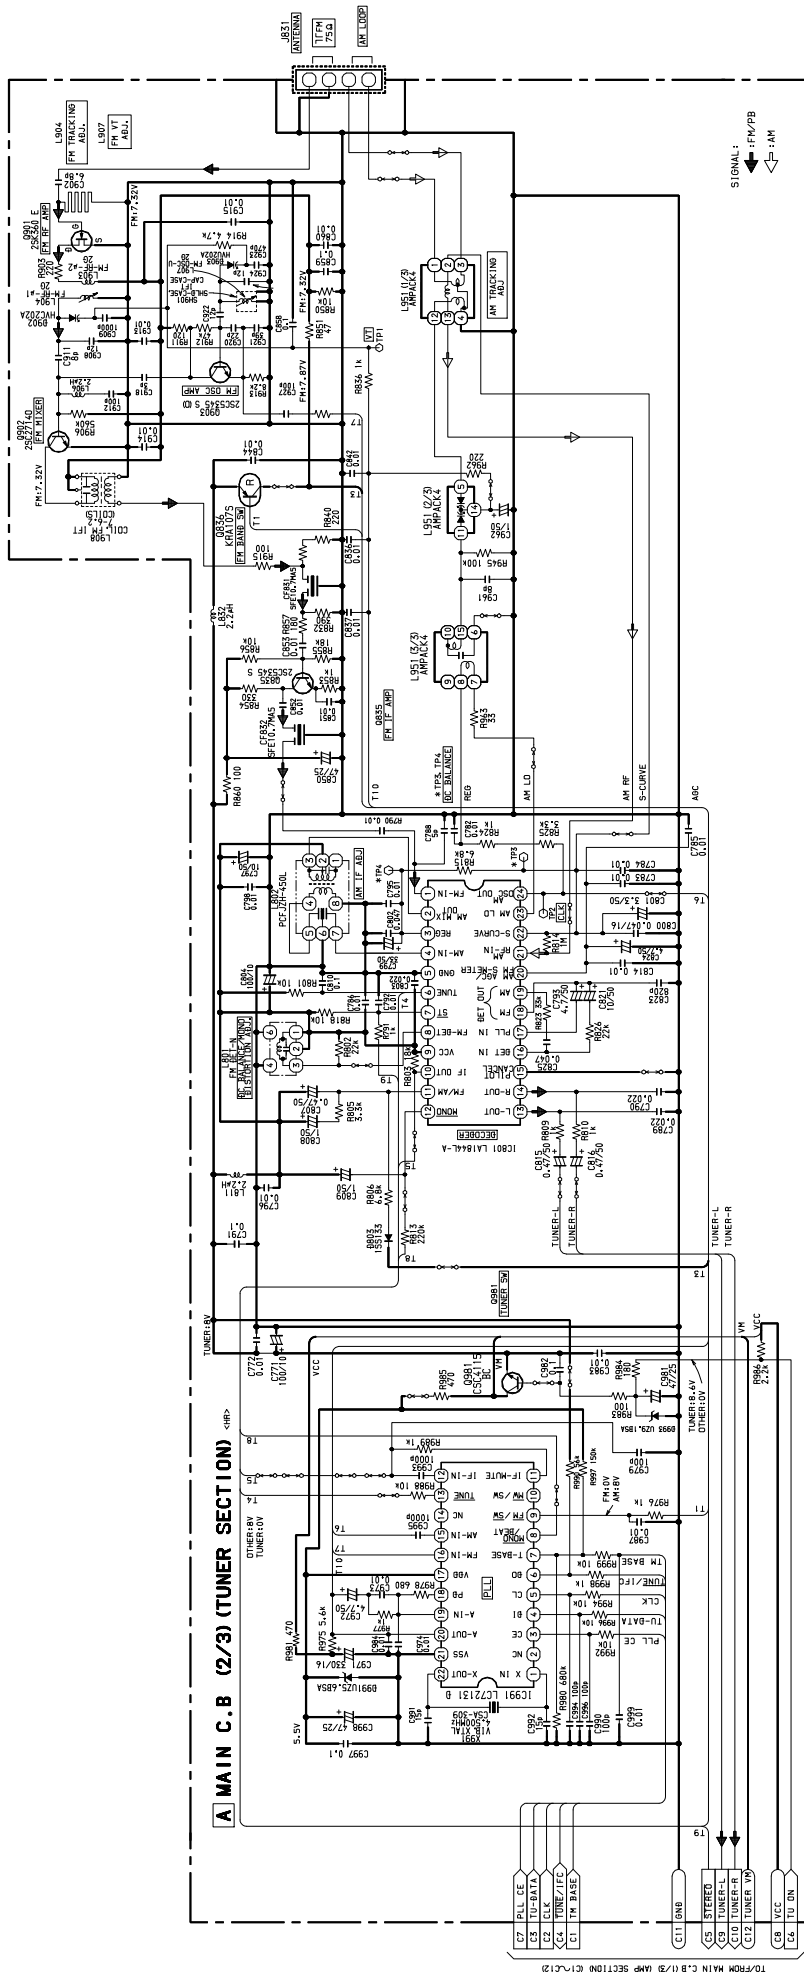

SCHEMATIC DIAGRAM - 4 (MAIN 2/3:TUNER SECTION) <EZ>

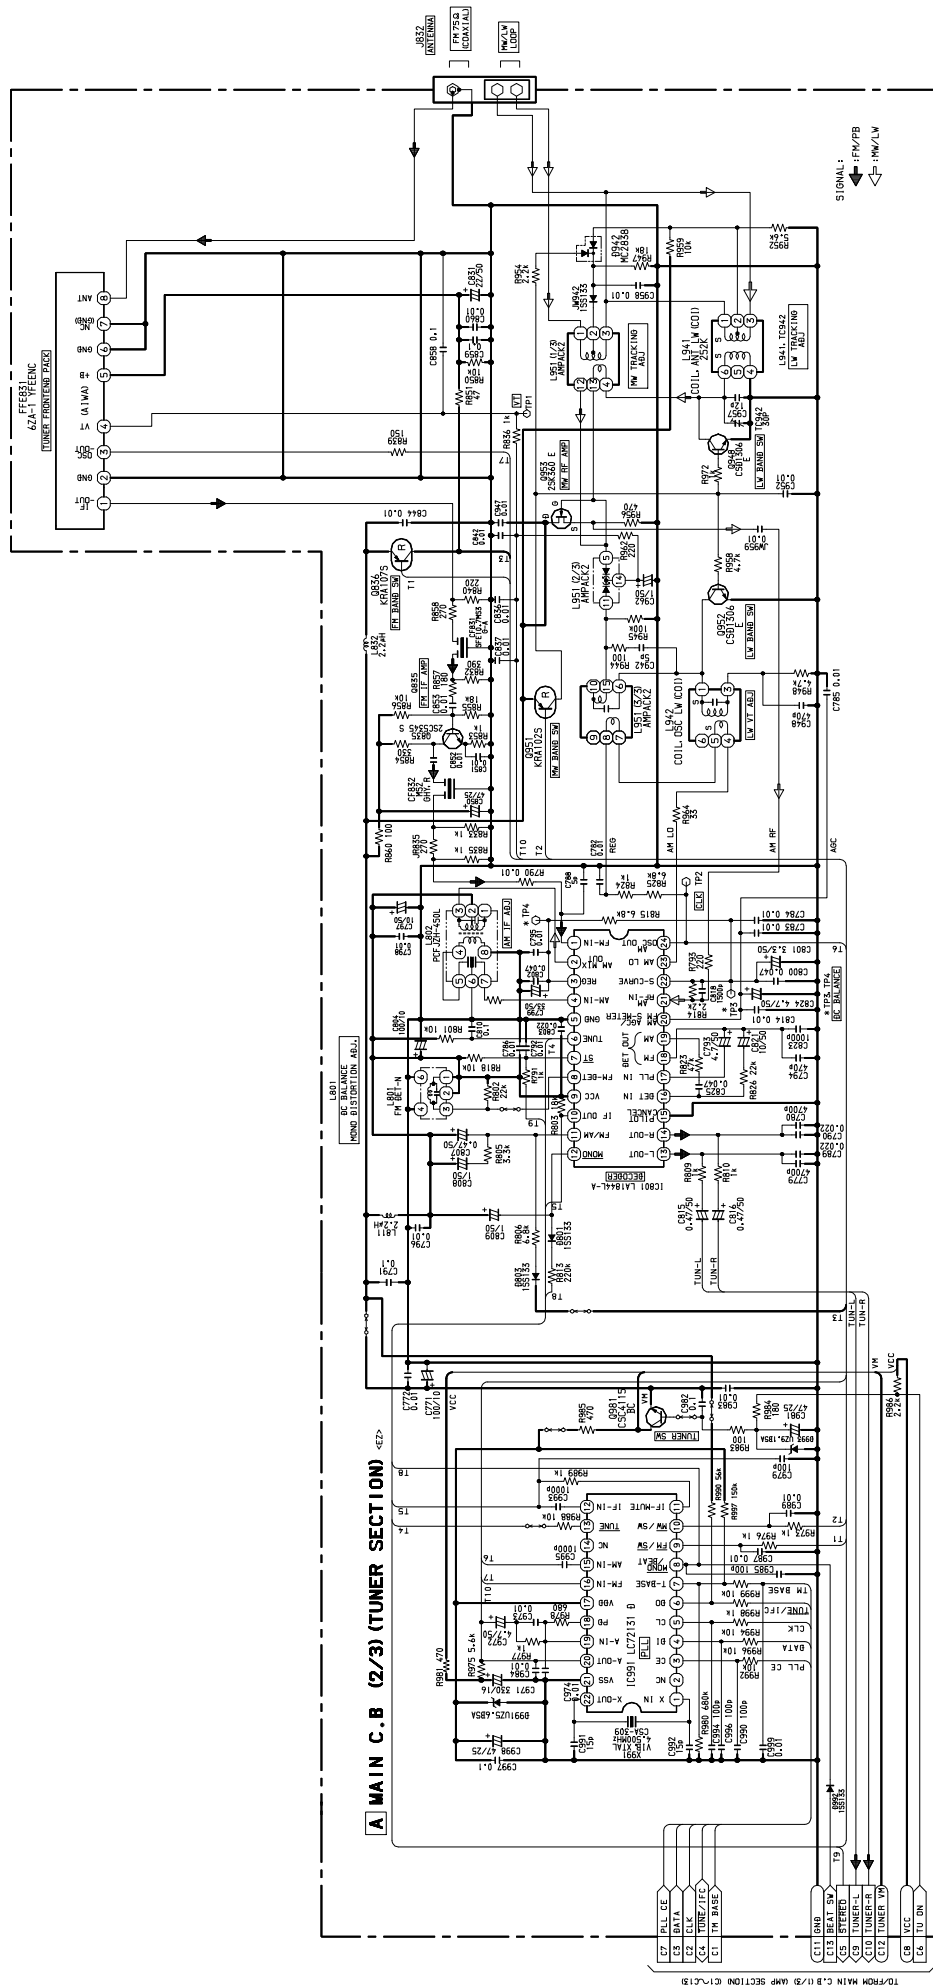





SCHEMATIC DIAGRAM - 5 (MAIN 3/3: CD SECTION / CD DRIVE)

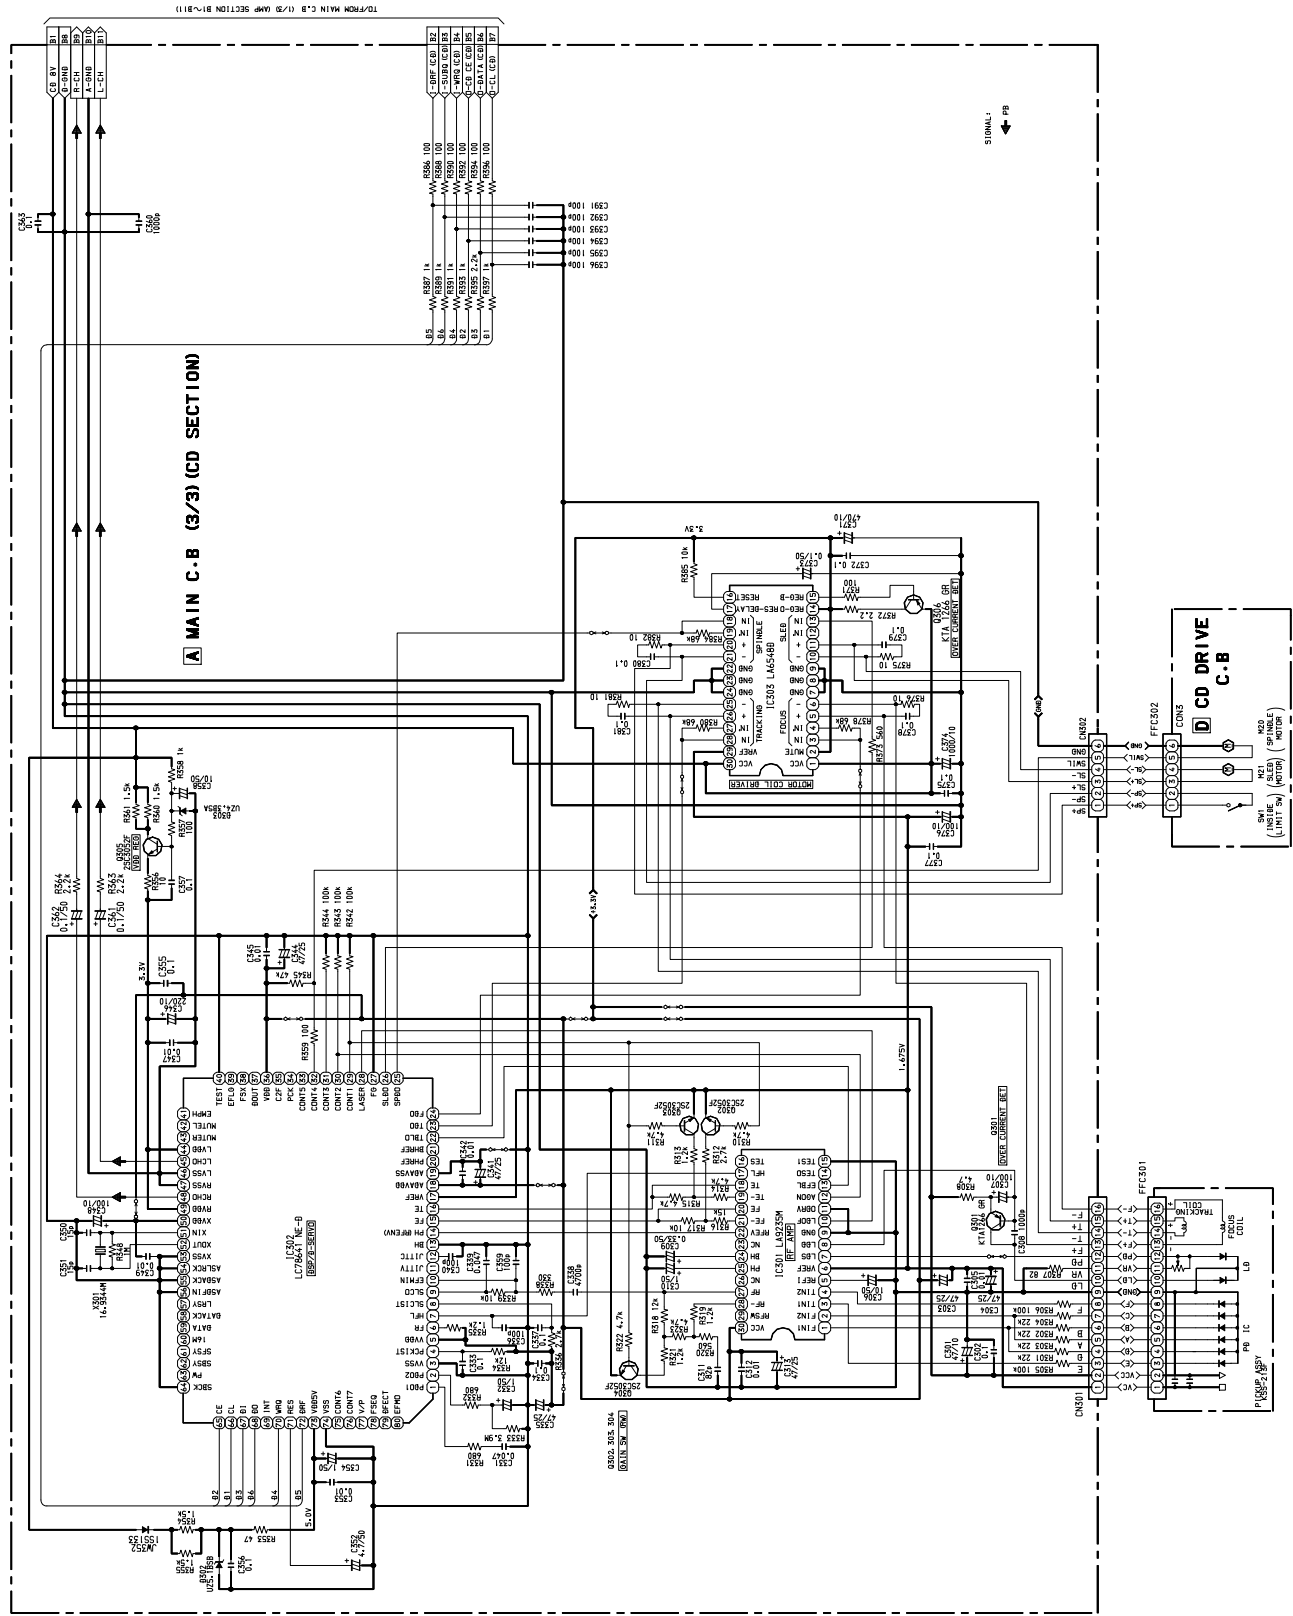

WIRING - 3 (DECK)


15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U

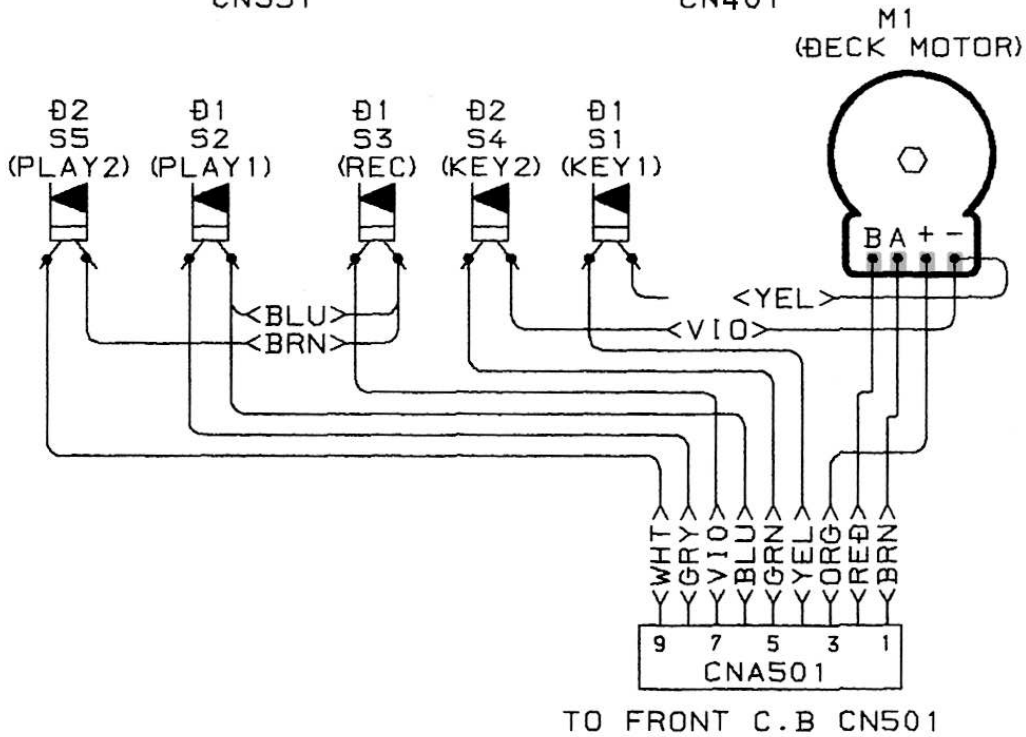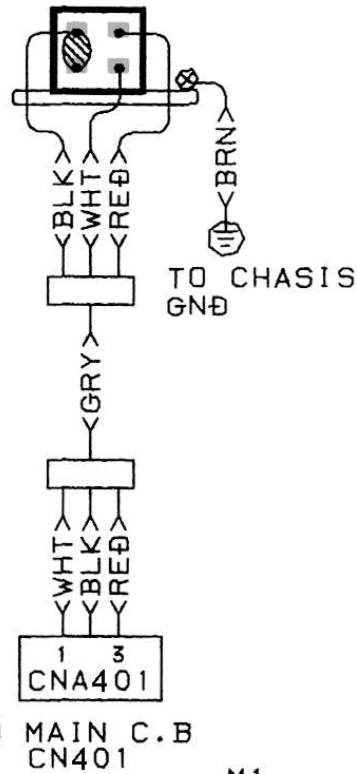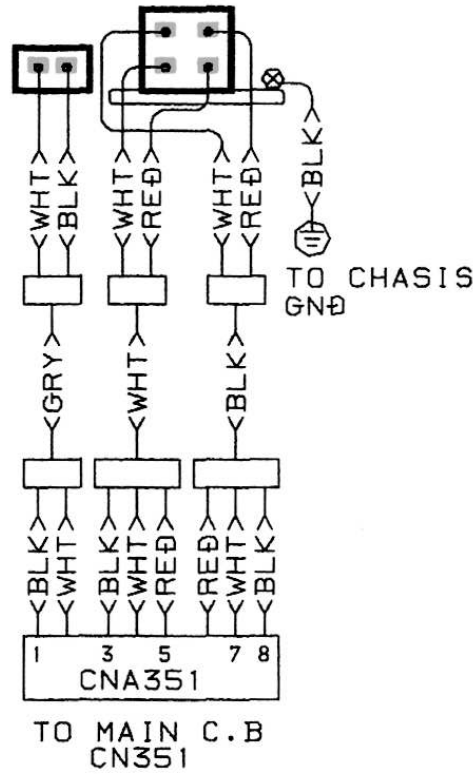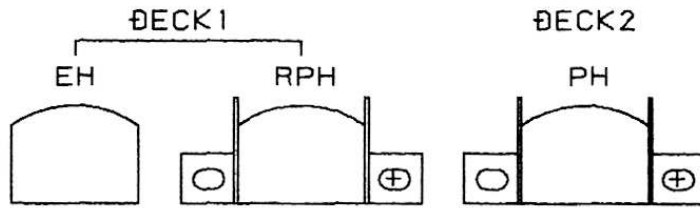


WIRING - 4 (CD LOAD / CD DRIVE)


15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	----	----	----	---	---	---	---	---	---	---	---	---

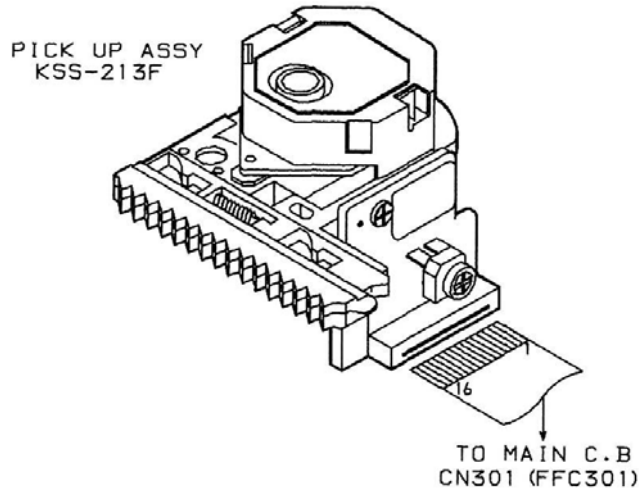

C CD LOAD C.B

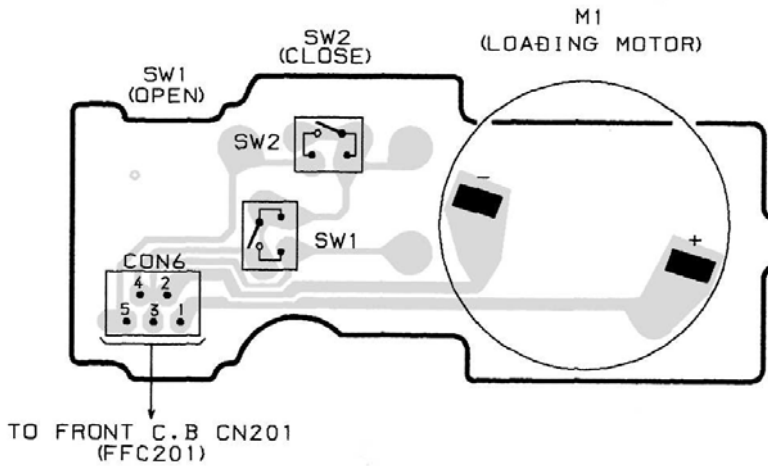


D CD DRIVE C.B

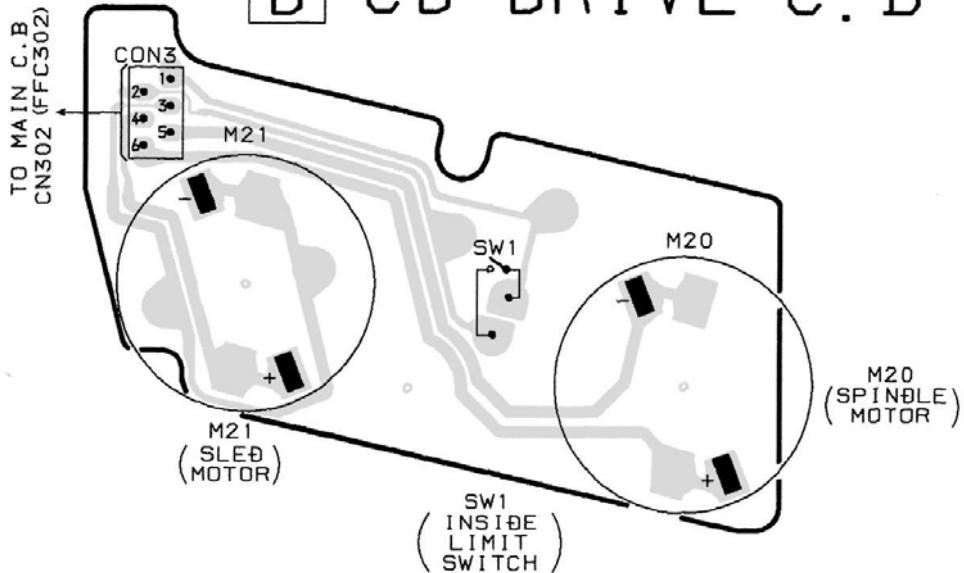


IC BLOCK DIAGRAM


IC. M62495AFP

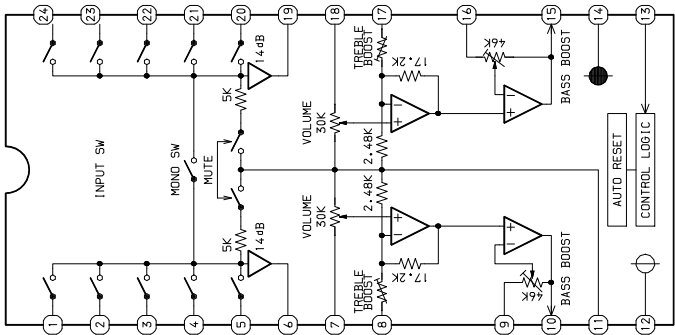


IC. LA9235M

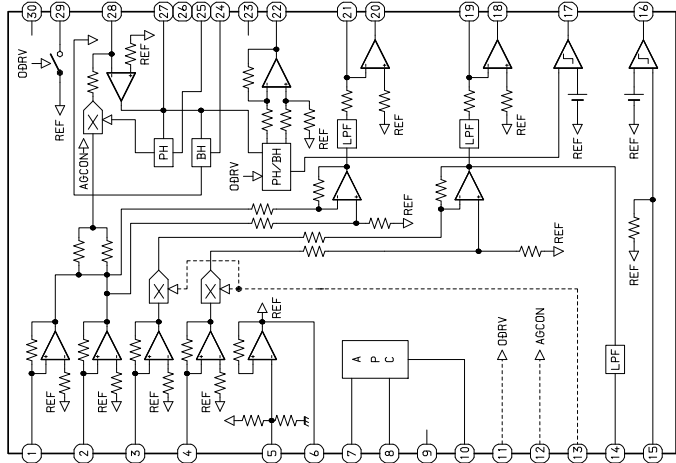


IC. LA6548D

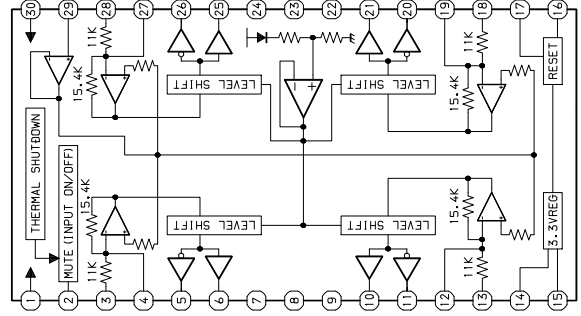

IC. LA1844L-A




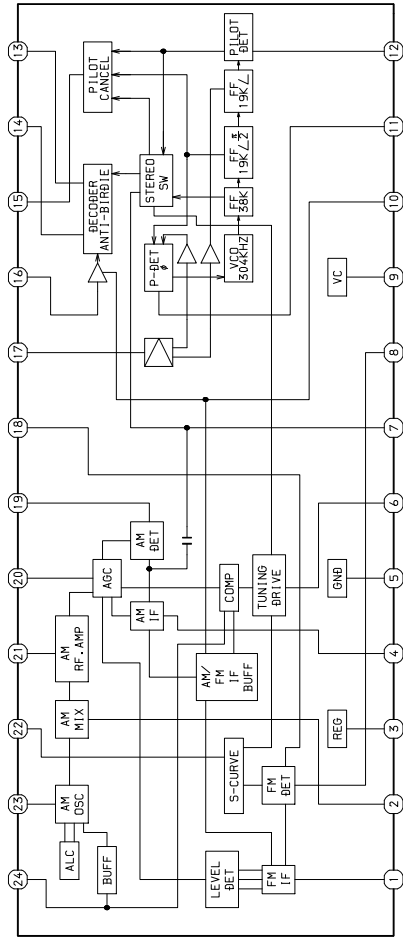


IC. LC72131B

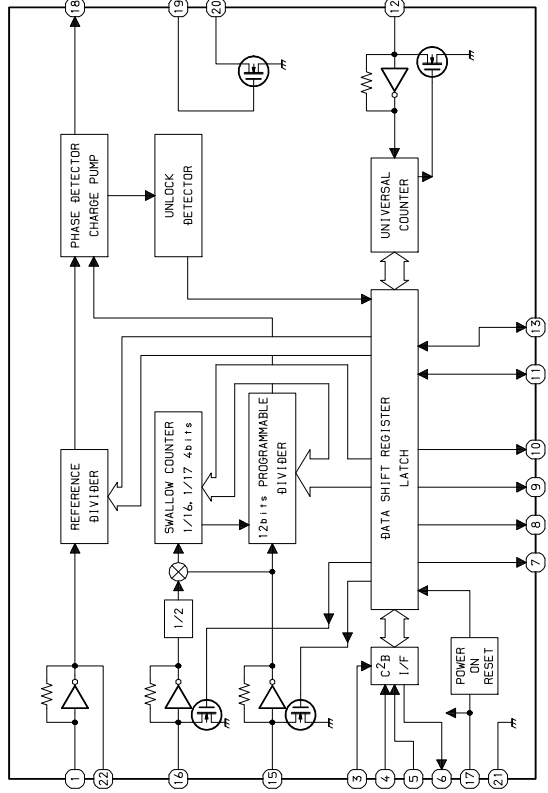

FL (HNA-10SS15T) GRID ASSIGNMENT & ANODE CONNECTION

GRID ASSIGNMENT

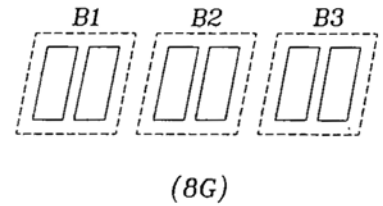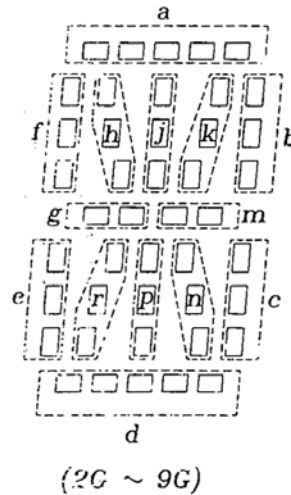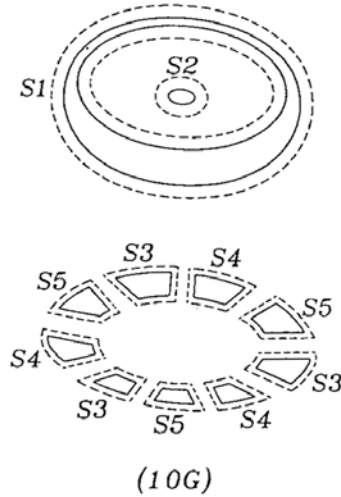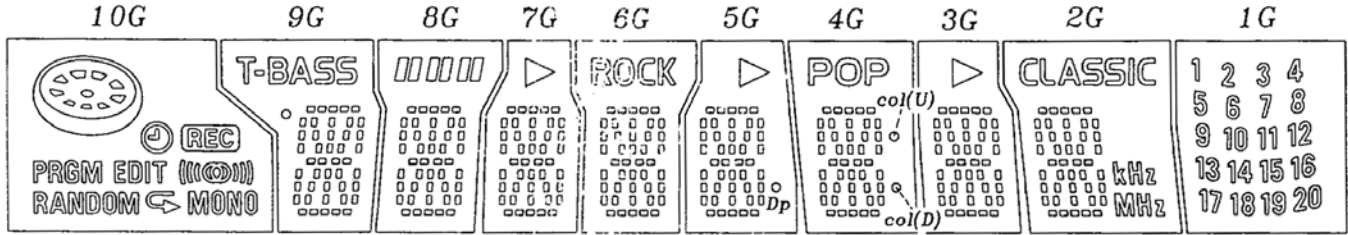

ANODE CONNECTION

	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	MONO	d	d	d	d	d	d	d	d	20
P2	(MON)	n	n	n	n	n	n	n	n	19
P3	REC	p	p	p	p	p	p	p	p	18
P4	Ⓢ	r	r	r	r	r	r	r	r	17
P5	EDIT	e	e	e	e	e	e	e	e	16
P6	↶	c	c	c	c	c	c	c	c	15
P7	RANDOM	g	g	g	g	g	g	g	g	14
P8	PRGM	m	m	m	m	m	m	m	m	13
P9	S5	f	f	f	f	f	f	f	f	12
P10	S4	b	b	b	b	b	b	b	b	11
P11	S3	k	k	k	k	k	k	k	k	10
P12	S2	j	j	j	j	j	j	j	j	9
P13	S1	h	h	h	h	h	h	h	h	8
P14	—	a	a	a	a	a	a	a	a	7
P15	—	T-BASS	B1	▷	ROCK	▷	POP	▷	CLASSIC	6
P16	—	○	B2	—	—	Dp	col(U)	—	MHz	5
P17	—	—	B3	—	—	—	col(D)	—	kHz	4
P18	—	—	—	—	—	—	—	—	—	3
P19	—	—	—	—	—	—	—	—	—	2
P20	—	—	—	—	—	—	—	—	—	1

IC DESCRIPTION

IC, M38B57MCH - E249FP

Pin No.	Pin Name	I/O	Description
1	NC	—	Not used.
2	I-HOLD	I	Hold input.
3	I-TRAY SW	I	CD tray SW AD input.
4	I-D-SW	I	CD door open/close AD detection input (Not used).
5	I-KEY2	I	Key AD input 2.
6	I-KEY1	I	Key AD input 1.
7	O-DSP DATA	—	Not used.
8	O-MOTOR	O	Cassette deck motor control output.
9	I-RMC	I	System remote control signal input. (Active "L")
10	RESET	I	Reset input for MICON.
11	I-STEREO	I	Tuner stereo detect input.
12	O-DSC/ O-PLL.DATA	O	Function IC control output/PLL data output. (Pull down)
13	VSS	—	Connected to GND.
14	XIN	I	4.19MHZ oscillator circuit.
15	XOUT	O	4.19MHZ oscillator circuit.
16	VCC	—	Power supply.
17	O-PB1	O	Cassette deck output switching PB1/PB2.
18	O-POWER	O	Power control ON/OFF output.
19	O-C.SHIFT	O	Clock shift output for micro computer when tuner receiving broadcast.
20	O-RMT	O	REC MUTE output.
21	O-BIAS	O	Bias ON/OFF output.
22	O-TU ON	O	Tuner power supply ON/OFF output.
23	O-CD ON	O	CD power supply ON/OFF output.
24	O-PLL CLK	O	PLL IC clock output.
25	I-TM BASE	I	Reference clock input for timer switch.
26	O-CD CLOSE	O	CD tray close data output.
27	O-CD OPEN	O	CD tray open data output.
28	VEE	—	Power supply for FL display.
29	O-STB (DSP)	—	Not used.
30	O-K-SCAN	O	Initial scan output.
31	O.PLL_CE	O	Tuner PLL IC chip enable output.
32	NC	—	Not connected.
33	G10	O	FL grid output (G10).
34	G9	O	FL grid output (G9).
35	G8	O	FL grid output (G8).
36	G7	O	FL grid output (G7).
37	G6	O	FL grid output (G6).
38	G5	O	FL grid output (G5).
39	G4	O	FL grid output (G4).
40	G3	O	FL grid output (G3).
41	G2	O	FL grid output (G2).

Pin No.	Pin Name	I/O	Description
42	G1	O	FL grid output (G1).
43	P22	—	Not used.
44	P21	—	Not used.
45	P20	O	FL segment output (P20).
46	P19	O	FL segment output (P19).
47	P18	O	FL segment output (P18).
48	P17	O	FL segment output (P17).
49	P16	O	FL segment output (P16).
50	P15	O	FL segment output (P15).
51	P14	O	FL segment output (P14).
52	P13	O	FL segment output (P13).
53	P12	O	FL segment output (P12).
54	P11	O	FL segment output (P11).
55	P10	O	FL segment output (P10).
56	P9	O	FL segment output (P9).
57	P8	O	FL segment output (P8).
58	P7	O	FL segment output (P7).
59	P6	O	FL segment output (P6).
60	P5	O	FL segment output (P5).
61	P4	O	FL segment output (P4).
62	I-TU3/P3	I/O	TU3 diode input/FL segment output (P3).
63	I-TU2/P2	I/O	TU2 diode input/FL segment output (P2).
64	I-TU1/P1	I/O	TU1 diode input/FL segment output (P1).
65	NC	—	Not connected.
66	NC	—	Not connected.
67	I-SUB Q (CD)	I	SUB-Q data input.
68	O-CD.CE	O	CD data chip enable output.
69	I-WRQ (CD)	I	CD WRQ input.
70	O-CL (CD)	O	CD IC control clock output.
71	O-DATA (CD)	O	CD IC control data output.
72	$\overline{\text{I-TUNE}}$ /IFC	I	Tuner SD detection input/Tuner IF count input.
73	AVSS	—	Connected to GND.
74	VREF	—	Power supply.
75	I-DRF (CD)	I	CD DRF input.
76	NC	—	Not used.
77	NC	—	Not used.
78	NC	—	Not connected.
79	NC	—	Not used.
80	I-TP.SW	I	Deck mechanism SW AD input.

IC, LC78641NE-D

Pin No.	Pin Name	I/O	Description
1	PDO1	O	Internal VCO control phase comparator output pin. (Pull down)
2	PDO2	O	Internal VCO control phase comparator output pin. OFF for rough servo, ON for phase servo. (Pull down)
3	VVSS	—	Internal VCO ground pin.
4	PCKIST	—	PDO output current adjustment resistor connection pin.
5	VVDD	—	Internal VCO power supply pin.
6	FR	—	VCO frequency range adjustment resistor connection pin. (Pull up)
7	HFL	I	Mirror detection signal input pin.
8	SLCIST	—	SLCO output current adjustment resistor connection pin.
9	SLCO	O	Control output.
10	EFMIN	I	EFM signal input pin.
11	JITTV	O	Jitter detection monitor pin. (Not used)
12	JITTC	O	Jitter detection monitor pin. (Pull down)
13	BH	I	BH signal input pin. (Connected to GND)
14	PH (RFENV)	I	PH signal or RFENV signal input pin.
15	FE	I	FE signal input pin.
16	TE	I	TE signal input pin.
17	VREF	I	VREF input pin.
18	ADAVDD	—	Servo A/D, D/A power supply pin.
19	ADAVSS	—	Servo A/D, D/A ground pin.
20	PHREF	O	PH reference output pin. (Not used)
21	BHREF	O	BH reference output pin. (Not used)
22	TBLO	O	Tracking balance output pin.
23	TDO	O	Tracking control output pin.
24	FDO	O	Focus control output pin.
25	SPDO	O	Spindle control output pin.
26	SLDO	O	Thread control output pin.
27	FG	I/O	Output driver VREF output pin. FG signal input pin. (Connected to GND)
28	LASER	O	Laser ON/OFF control pin.
29	CONT1	I/O	General-purpose input/output pin 1.
30	CONT2	I/O	General-purpose input/output pin 2.
31	CONT3	I/O	General-purpose input/output pin 3.
32	CONT4	I/O	General-purpose input/output pin 4.
33	CONT5	I/O	General-purpose input/output pin 5. (Not used)
34	PCK	O	EFM data playback clock monitor pin. Average 4.3218MHz when the phase is locked. (Not used)
35	C2F	—	C2 flag output pin. (Not used)
36	VDD	—	Digital power supply pin.
37	DOUT	O	Digital out output pin. (EIAJ format). (Not used)
38	FSX	O	Output pin for the 7.35kHz synchronization signal divided from the crystal oscillator. (Not used)

Pin No.	Pin Name	I/O	Description
39	EFLG	O	C1, C2 error correction monitor pin. (Not used)
40	TEST	I	Test input pin. (Connected to GND)
41	EMPH	I/O	Emphasis pin. Which becomes an input pin after reset and can be controlled externally. This becomes an emphasis monitor pin under control by command. (Not used)
42	MUTEL	O	L channel mute output pin. (Not used)
43	MUTER	—	R channel mute output pin. (Not used)
44	LVDD	—	L channel power supply pin.
45	LCHO	I	L channel output pin.
46	LVSS	—	L channel ground pin.
47	RVSS	O	R channel ground pin.
48	RCHO	I	R channel output pin.
49	RVDD	O	R channel power supply pin.
50	XVDD	O	Crystal oscillator power supply pin.
51	XIN	I	Connections for a 16.9344MHz crystal oscillator pin.
52	XOUT	O	
53	XVSS	I	Crystal oscillator ground pin.
54	ASLRCK	I	L/R clock input pin. (Connected to GND)
55	ASDACK	I	Bit clock input pin. (Connected to GND)
56	ASDFIN	—	L/R channel data input pin. (Connected to GND)
57	LSY	—	L/R clock output pin. (Not used)
58	DATAACK	O	Bit clock output pin. (Not used)
59	DATA	O	L/R channel data output pin. (Not used)
60	16M	O	16.9344MHz output pin. (Not used)
61	SFSY	O	Subcode frame synchronization signal output pin. This signal falls when the subcode is in the standby state. (Not used)
62	SBSY	O	Subcode clock synchronization signal output pin. (Not used)
63	PW	O	Subcode P, Q, R, S, T, U and W output pin. (Not used)
64	SBCK	I	Subcode readout clock input pin. (Connected to GND)
65	CE	I	Chip enable signal input pin.
66	CL	I	Data transfer clock input pin.
67	DI	I	Data input pin.
68	DO	O	Data output pin.
69	INT	O	Interruption signal output pin. (Not used)
70	WRQ	O	Interruption signal output pin.
71	RES	I	Reset input pin. This pin must be set low briefly after power is first applied.
72	DRF	O	Focus ON detect pin.
73	C2F	—	Microprocessor interface power supply.
74	VDD	—	Digital ground pin.
75	DOUT	I/O	General-purpose input/output pin 6. (Not used)
76	CONT7	I/O	General-purpose input/output pin 7. (Not used)
77	V/P	O	Rough servo/phase control automatic switching monitor output pin. “H” for rough servo and “L” for phase servo. (Not used)

Pin No.	Pin Name	I/O	Description
78	FSEQ	O	Synchronization signal detection output pin. Outputs a high level when the synchronization signal detected from the EFM signal and the internally generated synchronization signal agree. (Not used)
79	DEFECT	I/O	Defect pin. Which becomes an input pin after reset and can be controlled externally. This becomes the defect monitor pin under control by command. (Not used)
80	EFMO	O	EFM signal output pin. (Not used)

ADJUSTMENT <TUNER / DECK / FRONT>

< TUNER SECTION ><HR>

1. Clock frequency Check
Settings : • Test point : TP2 (CLK)
Method : Set to AM 1602kHz and check that the test point is 2052kHz \pm 45Hz.
2. AM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to AM 1602kHz, 531kHz and check that the test point is less than 8.0V (1602kHz) and more than 0.6V (531kHz).
3. FM VT Adjustment
Settings : • Test point : TP1 (VT)
• Adjustment location : L907
Method : Set to FM 108.0MHz and adjust L907 so that the test point is 7.0V \pm 50mV.
4. AM Tracking Adjustment
Settings : • Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location :
L951(1/3) 999kHz
Method : Set to AM 999kHz and adjust L951(1/3) to MAX.
5. FM Tracking Adjustment
Settings : • Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location : L904
Method : Set to FM 87.5MHz and adjust L904 so that the test point is maximum.
6. AM IF Adjustment
Settings : • Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location :
L802 450kHz
7. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC Balance)
: TP5 (Lch), TP6 (Rch) (Distortion)
• Adjustment location : L801
• Input level : 60dB μ V
Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 is 0V \pm 0.04V.
Then check the distortion is less than 1.3%.

< TUNER SECTION ><EZ>

1. Clock Frequency Check
Settings : • Test point : TP2 (CLK)
Method : Set to MW 1602kHz and check that the test point is 2052kHz \pm 45Hz.2. MW VT Check
Settings : • Test point : TP1 (VT)
Method : Set to MW 1602kHz and check that the test point is less than 8.0V. Then set to MW 531kHz and check that the test point is more than 0.6V.
3. MW Tracking Adjustment
Settings : • Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location : L951 (1/3)
Method : Set to MW 999kHz and adjust L951 (1/3) so that the test point becomes maximum.
4. LW VT Adjustment
Settings : • Test point : TP1 (VT)
• Adjustment location : L942
Method : Set to LW 144kHz and adjust L942 so that the test point becomes 1.3V \pm 0.05V.
Then set to LW 290kHz and check that the test point is less than 8.0V.
5. LW Tracking Adjustment
Settings : • Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location :
L941 144kHz
TC942 290kHz
Method : Set up TC942 to center before adjustment. The level at 144kHz is adjusted to MAX by L941. Then the level at 290kHz is adjusted to MAX by TC942.
6. AM IF Adjustment
Settings : • Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location :
L802 450kHz
7. FM VT Check
Settings : • Test point : TP1 (VT)
Method : Set to FM 108.0MHz and check that the test point is less than 8.0V. Then set to FM 87.5MHz and check that the test point is more than 0.5V.
8. FM Tracking Check
Settings : • Test point : TP5 (Lch), TP6 (Rch)
Method : Set to FM 98.0MHz and check that the test point is less than 13dB μ V.
9. DC Balance / Mono Distortion Adjustment
Settings : • Test point : TP3, TP4 (DC balance)
: TP5 (Lch), TP6 (Rch) (Distortion)
• Adjustment location : L801
• Input level : 60dB μ V
Method : Set to FM 98.0MHz and adjust L801 so that the voltage between TP3 and TP4 is 0V \pm 0.04V.
Then check the distortion is less than 1.3%.


< DECK SECTION >

1. Tape Speed Adjustment (DECK 1)
Settings : • Test tape : TTA-100
• Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location : SFR501
Method : Play back the test tape and adjust SFR501 so that the frequency counter reads $3000\text{Hz} \pm 5\text{Hz}$ (FWD) and $\pm 45\text{Hz}$ (REV) with respect to forward speed.
2. Head Azimuth Adjustment (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP5 (Lch), TP6 (Rch)
• Adjustment location : Head azimuth adjustment screw
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
3. PB Frequency Response Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-330
• Test point : TP5 (Lch), TP6 (Rch)
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is $0\text{dB} \pm 4\text{dB}$.
4. REC/PB Frequency Response Check (DECK 1)
Settings : • Test tape : TTA-602
• Test point : TP5 (Lch), TP6 (Rch)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the TP5, TP6 becomes 80mV. Record and play back the 1kHz and 8kHz signal and check that the output of the 8kHz signals is $0\text{dB} \pm 5\text{dB}$ with respect to that of the 1 kHz signal.

5. REC/PB Sensitivity Check (DECK 1)
Settings : • Test tape : TTA-602
• Test point : TP5 (Lch), TP6 (Rch)
• Input signal : 1kHz (LINE IN)
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP5, TP6 becomes 8mV. Record and play back the 1kHz signals and check that the output is $-2\text{dB} \pm 3.5\text{dB}$.
6. PB Sensitivity Check (DECK 1, DECK 2)
Settings : • Test tape : TTA-200
• Test point : TP5 (Lch), TP6 (Rch)
Method : Play back the test tape and check that the output level of the test point is $110\text{mV} \pm 3.5\text{dB}$.

< FRONT SECTION >

1. μ -CON OSC Adjustment
Settings : • Test point : TP7 and TP8 (GND)
• Adjustment location : L501
Method : Insert AC plug while pressing TUNER function key. Adjust L501 so that the frequency at the test point is $233.4\text{Hz} \pm 0.23\text{Hz}$.

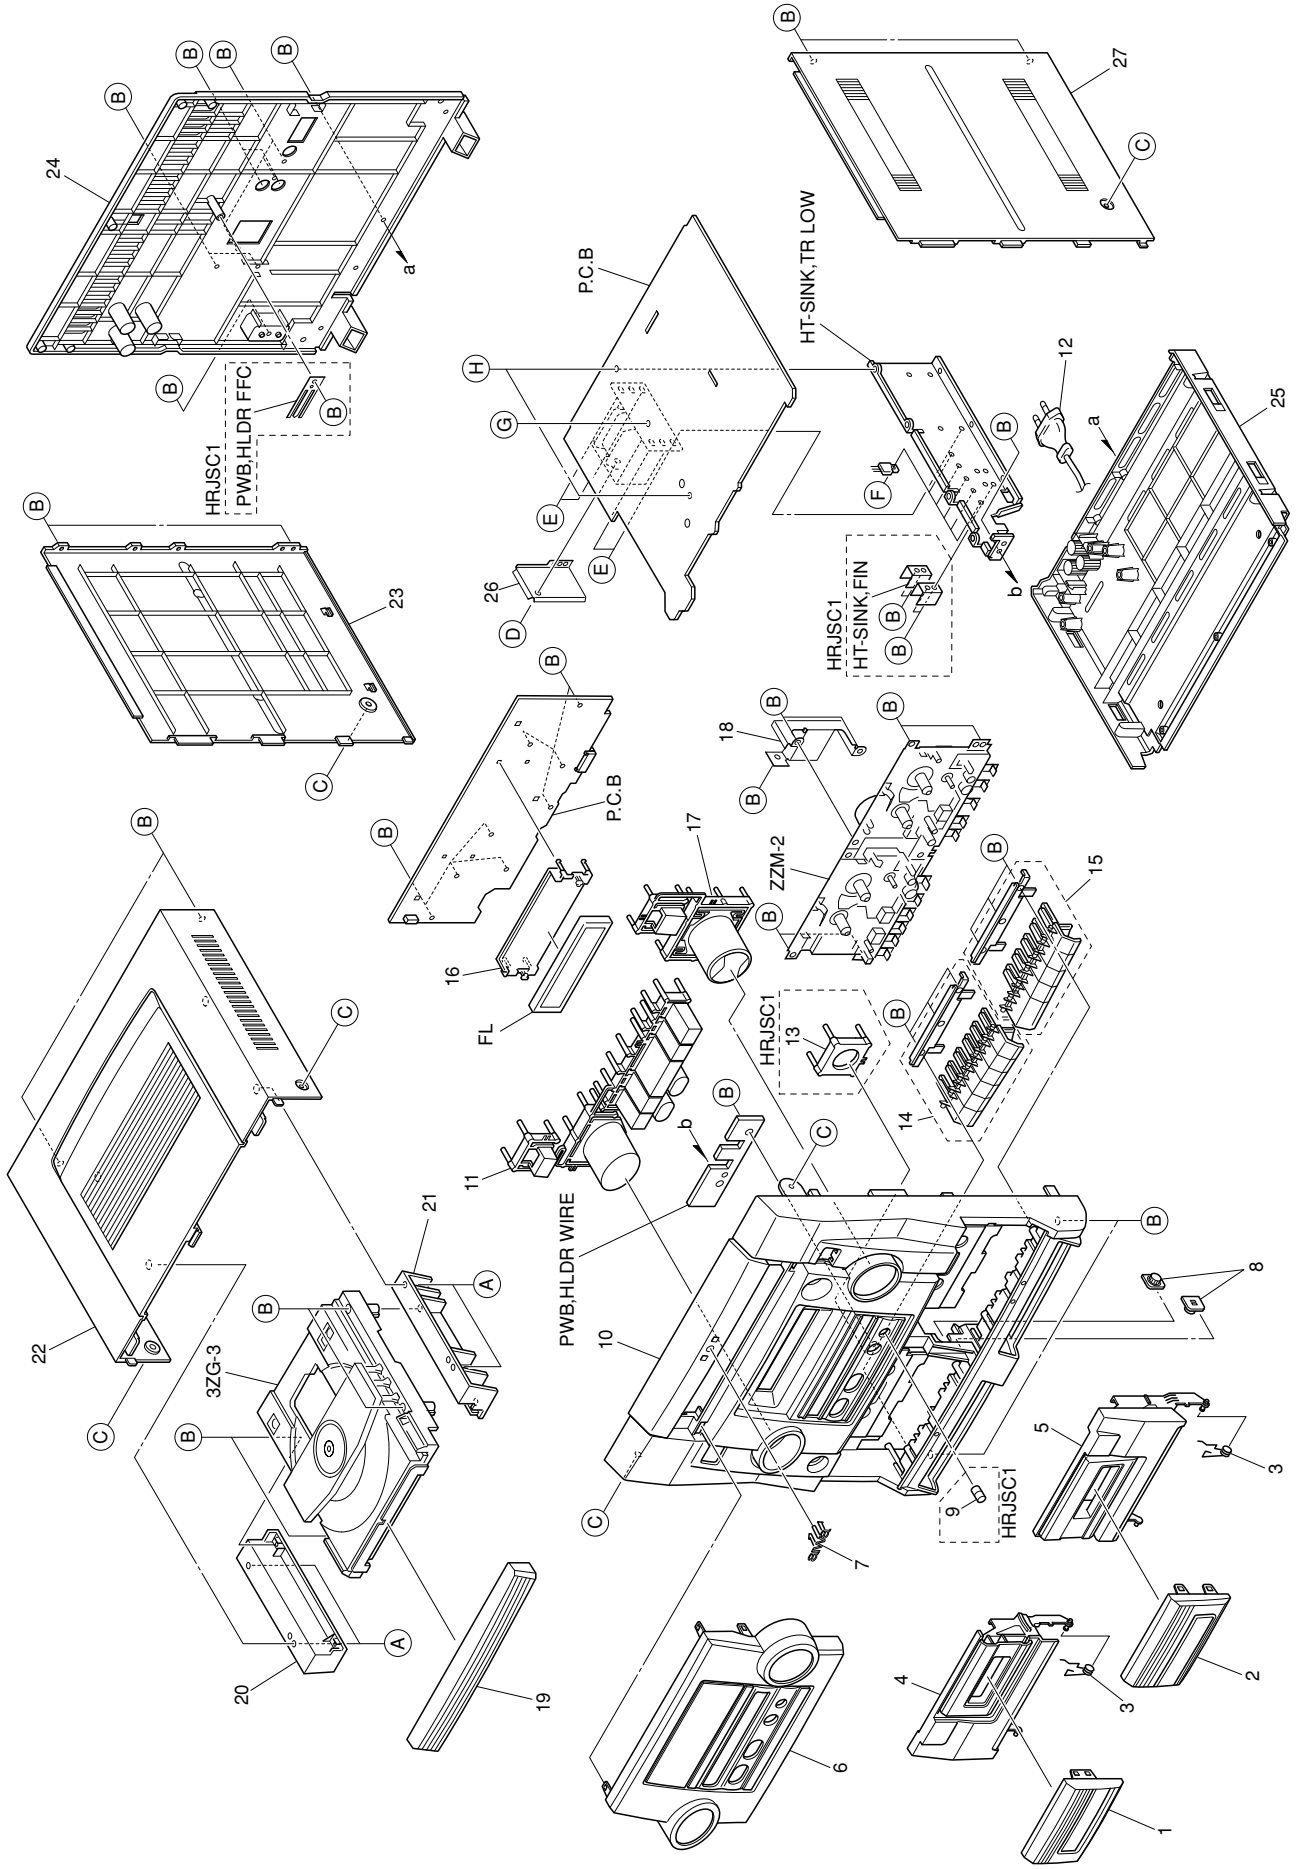


MECHANICAL PARTS LIST 1 / 1

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NEC-006-010		WINDOW, CASS 1	19	8A-NEC-004-010		PANEL, TRAY CD
2	8A-NEC-007-010		WINDOW, CASS 2	20	8A-NEC-203-010		HLDR, CD L
3	82-NF7-218-010		SPR-T, CASS	21	8A-NEC-204-010		HLDR, CD R
4	8A-NEC-002-010		BOX, CASS 1	22	8A-NEC-015-010		PANEL, TOP
5	8A-NEC-003-010		BOX, CASS 2	23	8A-NEC-013-010		PANEL, LEFT
6	8A-NEC-032-010		WINDOW, DISP HR<HRJSC1>	24	8A-NEC-027-110		CABI, REAR EZSC1<EZSC1>
6	8A-NEC-031-010		WINDOW, DISP LH<EZSC1>	24	8A-NEC-021-110		CABI, REAR HRJSM<HRJSC1>
7	87-B00-002-010		BADGE, AIWA 30 ABS SIL	25	8A-NEC-205-010		CABI, BOTTOM
8	86-NFZ-231-010		DMPR, 70	26	8A-NEC-201-010		HLDR, PT
9	8Z-NF8-028-110		KNOB, RTRY MIC<HRJSC1>	27	8A-NEC-014-010		PANEL, RIGHT
10	8A-NEC-001-010		CABI, FR<EZSC1>	A	87-067-822-010		BVT2+3-20 W/O SLOT
10	8A-NEC-036-010		CABI, FR HR<HRJSC1>	B	87-067-703-010		TAPPING SCREW, BVT2+3-10
11	8A-NEC-008-010		KEY, POWER	C	87-067-641-010		UTT2+3-8(W/O SLOT)BL
△	12	87-A80-157-010	AC CORD ASSY, E BLK CC	D	87-571-092-410		TAPPING SCREW, VIT+3-4
13	8A-NEC-041-010		PLATE, MIC<HRJSC1>	E	87-067-975-010		S-SCREW, IT+4-8
14	8A-NEC-010-010		KEY, CASS 1	F	87-067-001-010		S-SCREW, BVVWST2+3-12
15	8A-NEC-011-010		KEY, CASS 2	G	87-NF4-224-010		S-SCREW, IT3B+3-8 CU
16	8A-NFA-208-010		GUIDE, FL 100-25 ANFA	H	87-067-579-010		TAPPING SCREW, BVT2+3-8
17	8A-NEC-009-010		KEY, OPEN/CLOSE				
18	8A-NEC-206-010		HLDR, DECK				

COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange	GM	Metallic Green
YM	Metallic Yellow	DM	Metallic Orange	PT	Transparent Pink


TAPE MECHANISM EXPLODED VIEW 1 / 1

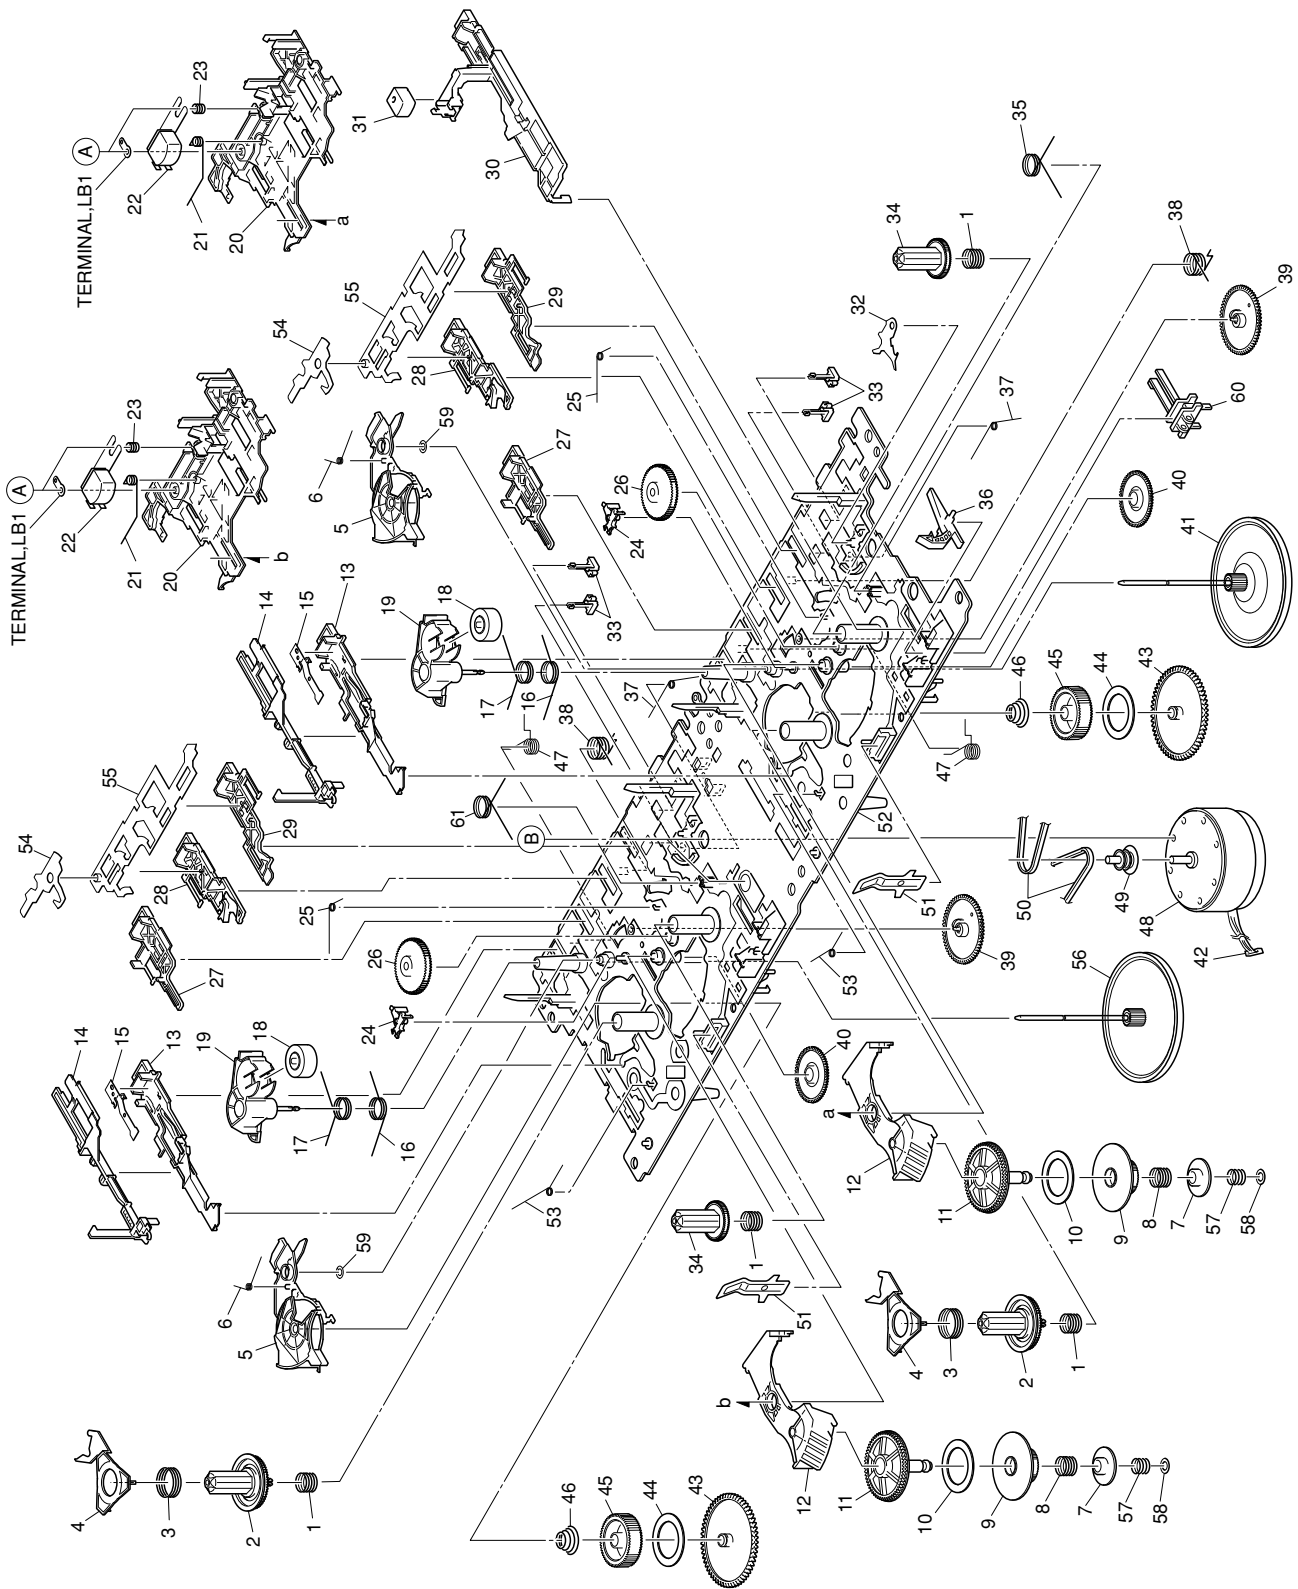

TAPE MECHANISM PARTS LIST 1 / 1

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-ZM1-254-310		SPR-C, REEL R	36	8Z-ZM1-220-110		LEVER, REC SENSOR
2	8Z-ZM1-225-110		GEAR, REEL R	37	8Z-ZM1-249-210		SPR-T, FR
3	8Z-ZM1-253-210		SPR-C, AUTO SENSOR	38	8Z-ZM1-242-310		SPR-T, FF/REW
4	8Z-ZM1-217-110		LEVER, AUTO SENSOR	39	8Z-ZM3-244-110		GEAR, CAM TD20
5	8Z-ZM1-212-210		LEVER, T-UP	40	8Z-ZM1-232-010		GEAR, IDL FF/REW
6	8Z-ZM1-245-310		SPR-T, AUTO	41	8Z-ZM1-290-010		FLY-WHL ASSY, ZZM-1
7	8Z-ZM1-236-010		CLR, SLIP FF/REW	42	8Z-ZM2-601-010		CONN ASSY, 9P ZZM-2
8	8Z-ZM1-252-110		SPR-C, FF/REW	43	8Z-ZM1-228-010		GEAR, SLIP T-UP B
9	8Z-ZM2-213-010		GEAR, SLIP FR A ZZM-2	44	8Z-ZM1-265-010		FELT, T-UP
10	8Z-ZM1-269-010		FELT, FF/REW 2	45	8Z-ZM1-227-010		GEAR, SLIP T-UP A
11	8Z-ZM1-238-110		GEAR, SLIP FF/REW B 2	46	8Z-ZM1-251-210		SPR-C, T-UP SLIP
12	8Z-ZM1-237-110		LEVER, FF/REW 2	47	8Z-ZM1-243-310		SPR-T, STOP/PAUSE
13	8Z-ZM1-209-510		LEVER, PAUSE	48	87-A91-532-010		MOT, MS15U2LW1A
14	8Z-ZM1-218-210		LEVER, E-LOCK H	49	8Z-ZM1-235-010		PULLEY, MOT
15	8Z-ZM1-256-010		SPR-P, PAUSE	50	8Z-ZM2-216-010		BELT, MAIN M
16	8Z-ZM1-244-110		SPR-T, T-UP	51	8Z-ZM1-260-010		SPR-P, CASSETTE
17	8Z-ZM1-247-310		SPR-T, PINCH	52	8Z-ZM2-201-510		CHAS ASSY, ZZM-2
18	8Z-ZM1-261-110		ROLLER ASSY, PINCH	53	8Z-ZM1-255-310		SPR-T, E-LOCK
19	8Z-ZM1-221-210		LEVER, PINCH	54	8Z-ZM2-219-010		LEVER, E-OPEN ZZM-2
20	8Z-ZM1-205-310		LEVER, PLAY	55	8Z-ZM1-214-310		LEVER, LOCK
21	8Z-ZM1-248-210		SPR-T, BRG	56	8Z-ZM3-256-010		FLY-WHL ASSY, M3 R
22	87-A90-403-110		HEAD, RPH MS15R	57	8Z-ZM1-257-110		SPR-C, F/R
23	84-ZM2-227-310		SPR-C, AZIMUTH	58	8Z-ZM1-275-010		W-L, 1.47-4-0.25
24	8Z-ZM1-216-110		LEVER, AUTO	59	87-B10-301-010		W-L, 1.63-3.2-0.5 SLIT
25	8Z-ZM1-246-110		SPR-T, AUTO 2	60	87-A91-494-010		SW, LEAF MSW17820
26	8Z-ZM2-214-110		GEAR, IDL REW ZZM-2	61	8Z-ZM1-241-010		SPR-T, PLAY
27	8Z-ZM2-212-010		LEVER, STOP ZZM-2	A	84-ZM2-242-010		S-SCREW, AZ1-2-6.4
28	8Z-ZM1-207-010		LEVER, FF	B	8Z-ZM2-220-110		V+2.6 ZZM-2
29	8Z-ZM1-206-010		LEVER, REW				
30	8Z-ZM1-210-010		LEVER, REC				
31	87-A90-404-010		HEAD, EH LE15B				
32	8Z-ZM2-218-010		LEVER, REC LOCK ZZM-2				
33	87-A91-492-010		SW, LEAF MSW18560				
34	8Z-ZM1-226-010		GEAR, REEL L				
35	8Z-ZM1-241-210		SPR-T, PLAY				


CD MECHANISM EXPLODED VIEW 1 / 2

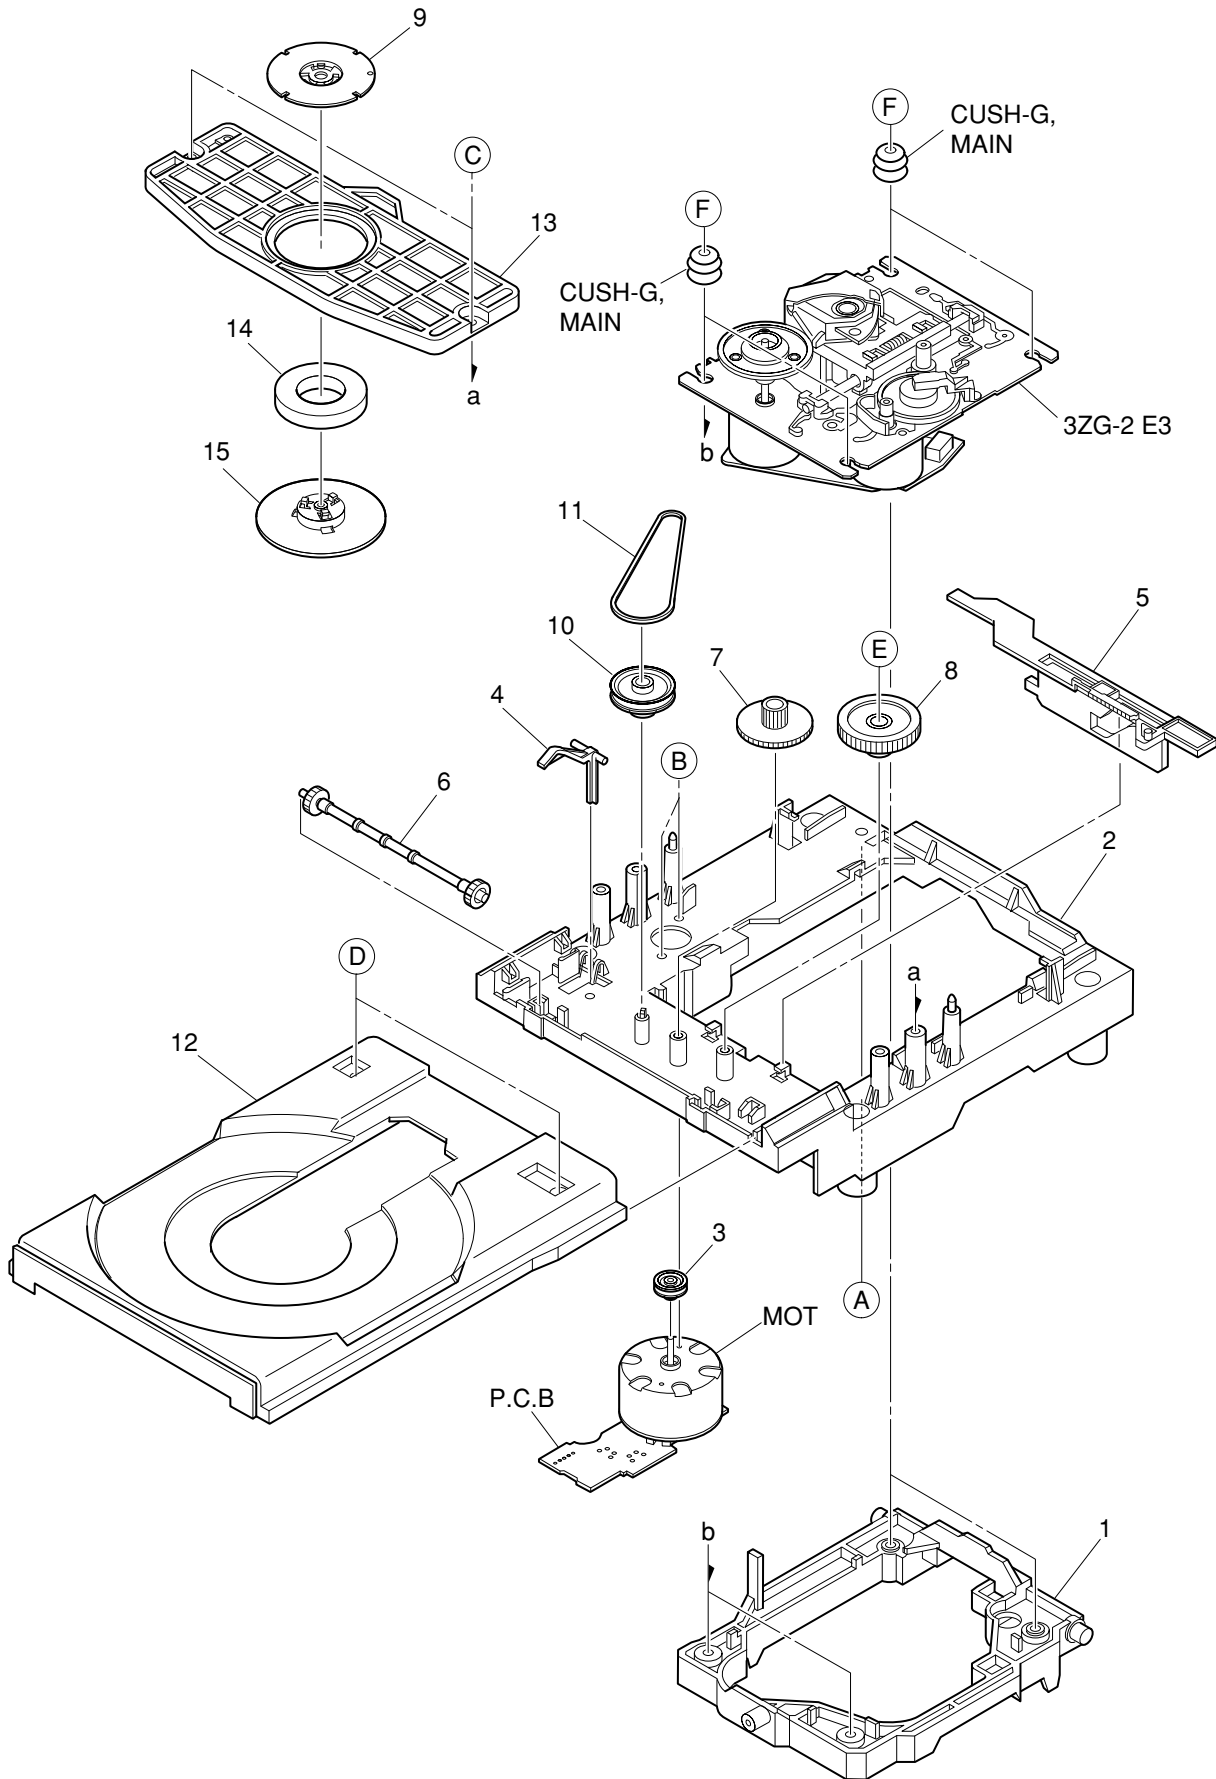

CD MECHANISM PARTS LIST 1 / 2

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-ZG3-224-519	HLDR M2	
2	83-ZG3-228-619	CHAS, L6	
3	83-ZG3-208-019	PULLEY, MOTOR	
4	83-ZG3-213-019	LVR, SW	
5	83-ZG3-209-619	CAM, SLIDE	
6	83-ZG3-207-619	GEAR, TRAY	
7	83-ZG3-204-21M	GEAR, C	
8	83-ZG3-205-019	GEAR, D	
9	83-ZG3-211-01K	PLATE, DISC	
10	83-ZG3-220-21M	GEAR, PULLEY 2	
11	83-ZG3-214-019	BELT, L	
12	83-ZG3-229-51K	TRAY, CD 2	
13	83-ZG3-210-119	HLDR, CHUCK	
14	83-ZG3-604-010	RING, MAG 2	
15	83-ZG3-212-019	CAP, DISC	
A	87-067-945-119	VFT2+3-12 (F10)	
B	87-251-071-410	U+2.6-4	
C	83-ZG3-235-010	VFT2+2.6-8	
D	87-352-075-219	VT2+2.6-10	
E	83-ZG3-217-019	S-SCREW, GEAR D	
F	81-ZG1-254-019	S-SCREW, MECH HLDR	

CD MECHANISM EXPLODED VIEW 2 / 2

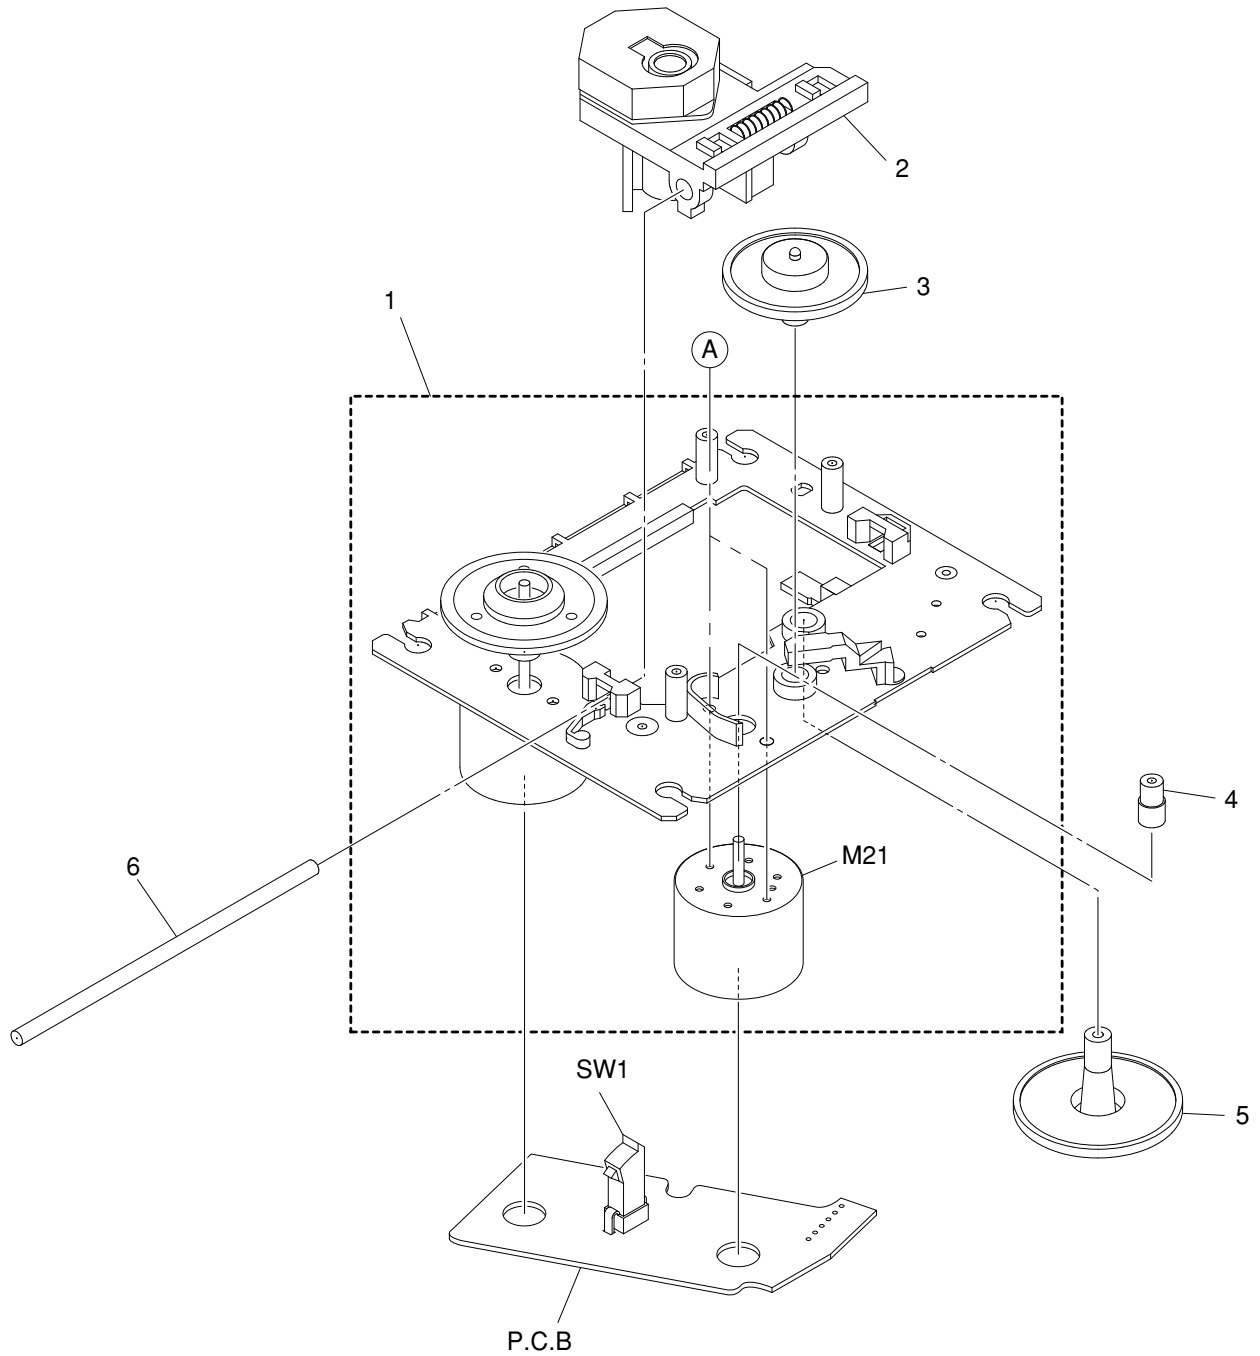


CD MECHANISM PARTS LIST 2 / 2

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	83-ZG2-262-010		CHAS ASSY, E3
2	87-A90-836-010		PICKUP, KSS-213F
3	83-ZG2-235-010		GEAR, A3
4	83-ZG2-236-010		GEAR, MOTOR 3
5	83-ZG2-205-310		GEAR, B
6	83-ZG2-253-010		SHAFT, SLIDE 5
A	87-261-032-210		V+2-3

SPEAKER DISASSEMBLY INSTRUCTIONS


Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

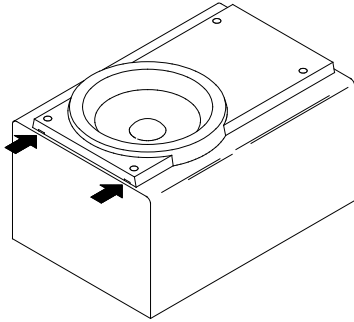


Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

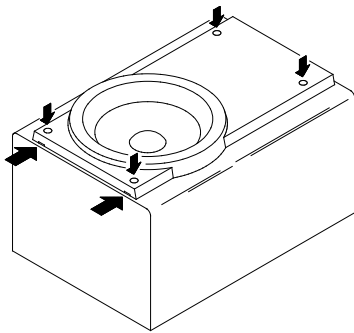


Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

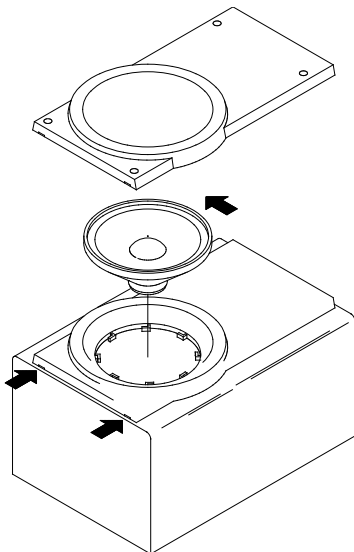

Type.4

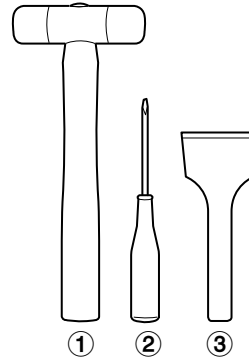

TOOLS

- ① Plastic head hammer
- ② (⊖) flat head screwdriver
- ③ Cut chisel

How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.
2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.
3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

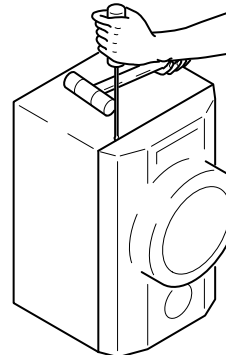


Fig-1

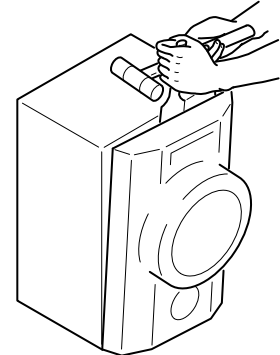


Fig-2

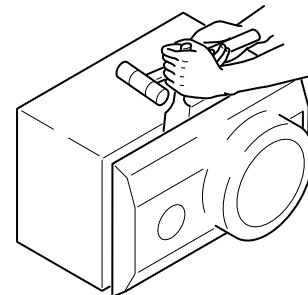


Fig-3


How to Attach the PANEL, FR

Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

SPEAKER PARTS LIST (SX-NSZ2) <YJSL, YJSC, YSL, YSC>

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NSM-001-010		GRILLE, FRAME ASSY
2	8A-NSM-008-010		CORD, SPKR
3	8A-NSM-604-010		SPKR, 100

ACCESSORIES / PACKAGE LIST

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NEC-906-010		IB, EZ (9L) B<EZ>
1	8A-NEC-901-010		IB, H (ECA) B<HR>
2	8A-NEC-701-010		RC UNIT, RC-AAS08
3	87-043-115-010		ANT, FEEDER FM<HR>
3	87-A90-118-010		ANT, WIRE FM (Z) <EZ>
4	87-A90-030-010		ANT, LOOP AM-NC C
 5	87-A91-017-010		PLUG, CONVERSION JT-0476<HR>



アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111