

DENON

Hi-Fi AM-FM Stereo Receiver

SERVICE MANUAL

MODEL DRA-545R

MODEL DRA-345R

AM-FM STEREO RECEIVER



DRA-545R

RC-129

DRA-345R

RC-129A

— TABLE OF CONTENTS —

OPERATING INSTRUCTIONS (U.S.A. Canada, Multi-Voltage, U.K. and Australia)	2 - 6
OPERATING INSTRUCTIONS (Europe)	7 - 11
REMOVAL OF EACH SECTION	12
METHOD OF ADJUSTMENTS	13
CONNECTION DIAGRAM OF MEASURING INSTRUMENTS	14
BLOCK/LEVEL DIAGRAM (DRA-545R)	14
BLOCK/LEVEL DIAGRAM (DRA-345R)	15
PARTS LIST OF EXPLODED VIEW (DRA-545R)	16
EXPLODED VIEW OF CHASSIS AND CABINET (DRA-545R)	17
PARTS LIST OF EXPLODED VIEW (DRA-345R)	18
EXPLODED VIEW OF CHASSIS AND CABINET (DRA-345R)	19
NOTE ON PARTS LIST	20
PRINTED WIRING BOARD PARTS LIST	20 - 28
PRINTED WIRING BOARD PATTERNS	29 - 33
WIRING DIAGRAM	34
SCHEMATIC DIAGRAM (for DRA-545R) U.S.A., Canada and Multi-Voltage model	35
SCHEMATIC DIAGRAM (for DRA-545R) Australia model	36
SCHEMATIC DIAGRAM (for DRA-345R) U.S.A., Canada and Multi-Voltage model	37
SCHEMATIC DIAGRAM (for DRA-345R) Europe, U.K. and Australia model	38
SEMICONDUCTORS	39, 40


NIPPON COLUMBIA CO., LTD.

12. Power-Cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

14. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.

15. Power Lines - An outdoor antenna should be located away from power lines.

16. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to grounding of antennas.

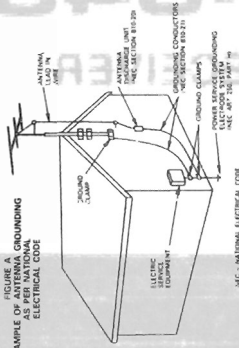

17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

18. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

19. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 A. The power-supply cord or the plug has been damaged; or
 B. Objects have fallen, or liquid has been spilled into the appliance; or
 C. The appliance has been exposed to rain; or
 D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 E. The appliance has been dropped, or the enclosure damaged.

20. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

• FOR U.S.A. & CANADA MODEL ONLY

CAUTION

TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION

POUR PREVENIR LES CHOCs ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

SAFETY INSTRUCTIONS

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Read Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, place in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.

Please check to make sure the following items are included with the main unit in the carton:

(1) AM/FM Antenna	1
(2) FM Antenna	1
(3) Remote Control RC-129/RC-129A	1
(4) Batteries R6 (AA)	2


proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

18. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

19. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 A. The power-supply cord or the plug has been damaged; or
 B. Objects have fallen, or liquid has been spilled into the appliance; or
 C. The appliance has been exposed to rain; or
 D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 E. The appliance has been dropped, or the enclosure damaged.

20. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

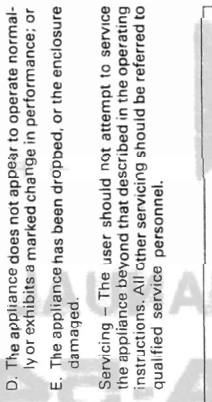

FOR UNITED KINGDOM MODEL ONLY


As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
 The wire which is coloured BLUE must be connected to the terminal which is marked with the letter L.
 The wire which is coloured BROWN must be connected to the terminal which is marked with the letter N or coloured RED.
 The wire which is coloured GREEN OR GREEN-AND-YELLOW must be connected to the terminal which is marked with the letter E or by the symbol OR COLOURED GREEN.

IMPORTANT
 The wires in the mains lead are coloured in accordance with the following code:
 Blue Live
 Brown: Neutral

Do NOT MAKE ANY CONNECTION TO THE LARGER PIN MARKED WITH THE LETTER E OR BY THE SYMBOL OR COLOURED GREEN OR GREEN-AND-YELLOW.
 Disconnect the mains plug from the supply socket when not in use.


PRECAUTIONS FOR INSTALLATION

DRA-545R/345R always install horizontally. And leave at least 10 cm of space between this unit and other component placed above.

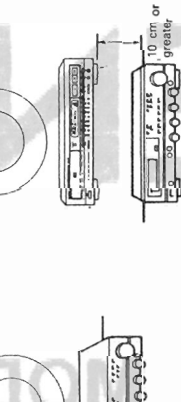

- Please check to make sure the following items are included with the main unit in the carton:
- | | | |
|-----------------------------------|-------|---|
| (1) AM/FM Antenna | | 1 |
| (2) FM Antenna | | 1 |
| (3) Remote Control RC-129/RC-129A | | 1 |
| (4) Batteries R6 (AA) | | 2 |

NAME AND FUNCTION OF PARTS

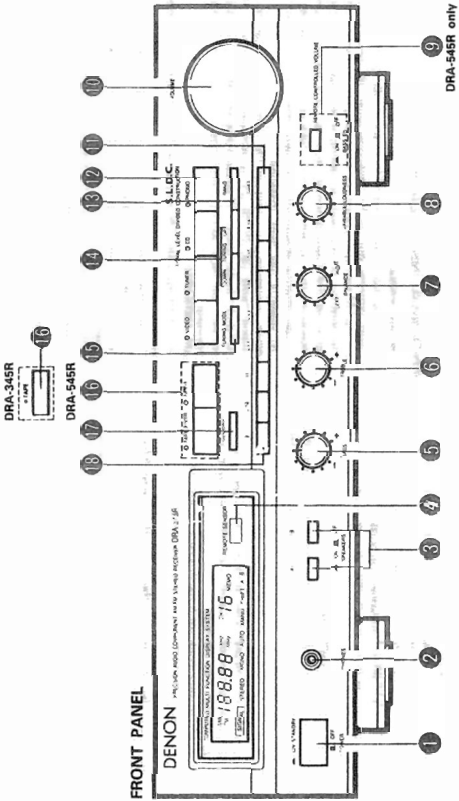


- 1 POWER (Power switch)**
When the power cord is plugged into an AC power outlet, pressing this button once, the power is turned on and the DISPLAY lights. It takes a few seconds before sound is output, thanks to the built-in muting circuit, preventing audio output until the receiver has stabilized.
- 2 PHONES (Headphones jack)**
Connect a pair of headphones (sold separately) to this jack for private listening.
- 3 SPEAKERS (Speaker selector switches)**
These switches are used to engage speaker system A and B. No sound is heard through the speakers when both switches are reset to the (A) position.
- 4 REMOTE SENSOR (Remote control sensor)**
This sensor receives the infrared light transmitted from the wireless remote control unit. For remote control, point the wireless remote control unit towards the sensor.
- 5 BASS (Bass control)**
Use this control to adjust the low-range response. When the control is set to the center position, the frequency characteristic curve (below 1,000 Hz) is flat. Turn the control clockwise to increase the bass response and counter-clockwise to decrease it.
- 6 TREBLE (Treble control)**
Use this control to adjust the high-range response. When the control is set to the center position, the frequency characteristic curve (above 1,000 Hz) is flat. Turn the control clockwise to increase the treble response and counter-clockwise to decrease it.
- 7 BALANCE (Balance control)**
Use this control to balance the volume levels between left and right channels. The volume levels in both channels are equal when the control is set to the center position.

- 8 VARIABLE LOUDNESS (Loudness control)**
At low volumes, the human ear is less sensitive to low (BASS) and high (TREBLE) frequencies. Use this control to compensate for this deficiency when listening at low volume levels. Turn this control counter-clockwise until a natural balance of bass and treble sound has been restored.
- 9 BASS EQ (DRA-545R only)**
Press this button to switch the BASS EQ ON () for emphasis of bass sounds. Use in conjunction with the bass adjustment of the tone control will provide further emphasis or bass sounds. Set this switch to OFF () when you wish to listen with a normal setting condition.
- 10 VOLUME (Volume control)**
This knob is used to adjust the volume level of both channels. Turn the knob clockwise to raise the volume and counter-clockwise to lower it.
- 11 SHIFT (Shift button)**
Each time this button is pressed, the preset station range will be shifted between U.S.A. and Multi-Voltage Models: U.K., 7~16; U.K. and Australia Models: 1~6 (A), 9~16 (B), 17~24 (A, B).
- 12 Input selector (Input selector buttons)**
These buttons are used to select the audio input source.
 - PHONO: Press to play a record on a record player connected to the PHONO input jacks.
 - CD: Press to listen to a compact disc player or another component connected to the CD input jacks.
 - TUNER: Press to listen to FM or AM programs.
 - VIDEO: Use when playing back the audio from a Hi-Fi video, video disc player, or other component connected to the VIDEO terminal.
 If a function switch is pressed quickly, the function may not actually change and no signal may be heard from the speakers for an instant. To avoid this, be sure to press function switches carefully.

- 13 BAND (Band selector switch)**
Press this switch to select the FM or AM (MW) band.
- 14 TUNING (Tuning buttons)**
Press these buttons to tune in a station. In the MANUAL TUNING mode, each press of the buttons will change the frequency in U.S.A. Model: 100 KHz, U.K., Australia and Multi-Voltage Models: 50 KHz steps on FM and U.S.A. Model: 10 KHz, U.K., Australia and Multi-Voltage Models: 9 KHz steps on AM. Keeping one of these buttons pressed, the frequency will change until the button is released. During the AUTO TUNING mode, pressing one of these buttons will affect station search up or down the band.
- 15 TUNING MODE (Tuning mode switch)**
This switch allows selection between Auto Tuning and Manual Tuning. Pressing the UP button, the tuner will begin tuning to a higher frequency and pressing the DOWN button, it will begin tuning to a lower frequency until a broadcasting station is found.
- 16 MANUAL TUNING:** Stations are tuned in manually by use of the UP and DOWN buttons.
 - Tape selector (Tape selector/monitor buttons) (DRA-545R)
TAPE-1: Press this button once, TAPE-1 indicator LED will light up and then you can play tape source on TAPE-1 terminal.
In this state you can copy TAPE-1 source to TAPE-2/VCR terminal.


- 17 TAPE-2/VCR:** Press this button once, TAPE-2/VCR indicator LED will light up and then you can play tape or video source of TAPE-2/VCR terminal.
Press again the button currently accessed, to play sources selected by input selector, indicator LED goes out.
 • TAPE (Tape monitor button) (DRA-345R)
Press this button once, indicator LED will light up and then you can play tape source on the TAPE terminal. And press this button again to play sources selected by the input selector, indicator LED goes out.
- 18 MEMORY (Memory button)**
This switch is used to store the desired radio station on a PRESET CHANNEL button. When pressing this button, the MEMORY indicator lights for approximately 5 seconds. During this interval, the desired station can be stored in the memory.
- 19 Preset channel U.S.A. and Multi-Voltage Models: 1~24 (U.S.A. and Australia Models: 1~24 (A, B))**
These buttons are used for storing stations or recalling stations which have been preset. Using the SHIFT button you can preset a total of 16 FM or AM stations into preset channels U.S.A. and Multi-Voltage Models 1~16, U.K., and Australia Models: 1~16, U.K., and Multi-Voltage Models 1~16 (A, B). Once a station has been memorized on a PRESET CHANNEL button, the same station can later be tuned in instantly simply by pressing the corresponding PRESET CHANNEL button.

DISPLAY

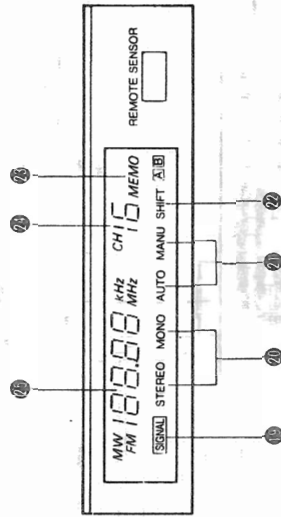

- 19 SIGNAL (Signal indicator)**
This lights when a station is received.
- 20 STEREO/MONO (Stereo/Mono indicator)**
The STEREO indicator will automatically light up when a stereo broadcast is received. The MONO indicator will light up when a broadcast is not being received or at the time of a monaural broadcast.
- 21 TUNING MODE (AUTO/MANUAL)**
Pressing TUNING MODE causes AUTO and MANU to shift up alternately.
- 22 SHIFT (Shift indicator)**
The preset channel which is selected with the Shift Button is displayed by the SHIFT U.S.A. and Multi-Voltage Models: A or B, U.K. and Australia Models: A or B.
- 23 MEMORY (Memory indicator)**
This indicator lights for approximately 5 seconds when the MEMORY button has been pressed and a station can be stored on a PRESET CHANNEL button.
- 24 CHANNEL (Preset channel display)**
When using the channel preset button, the channel is displayed and the frequency for that channel stored in memory is displayed.
- 25 Frequency display (Frequency indicator)**
The frequency is displayed in numerals. It is displayed in MHz for FM and in kHz for AM (MW).

REAR PANEL

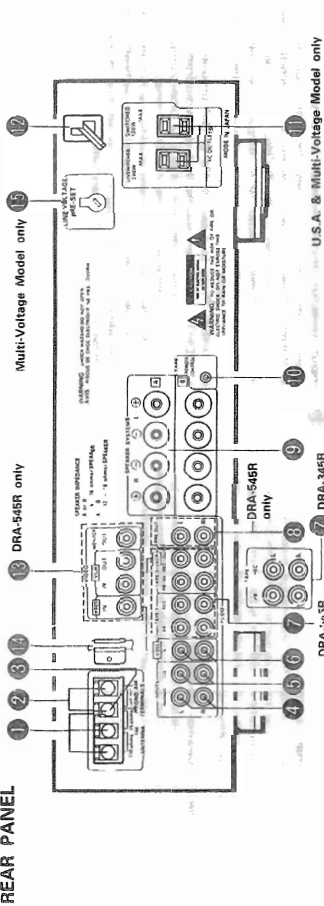


- 1 **FM ANT (FM antenna terminals)**
Both 75-ohm coaxial cable and 300-ohm leader can be connected to this terminal. For antenna connecting procedure, see the ANTENNA INSTALLATION.
- 2 **AM ANT (AM antenna terminals)**
Connect the attached AM loop antenna. (Refer to page 7 for connections.)
Connect to this terminal when a medium wave outdoor antenna is used.
- 3 **GND (Grounding terminal)**
The grounding wire of the turntable is connected here.
 - Hum or noise may be generated if the grounding wire is not connected.
- 4 **PHONO (Phono input terminals)**
The output cord of the turntable is connected here. Since the input sensitivity of "PHONO" is extremely high, do not use the input without the input pin cord. If used without this cord, the speakers may generate hum.
- 5 **CD**
The output cord of the CD player is connected here.
- 6 **VIDEO**
A VIDEO, such as a VCR or Video Disk may be connected here.
- 7 **TAPE-1, TAPE-2/VCR (Tape deck and/or VCR playback/recording terminal) (DRA-545R)**
Two tape decks or tape deck and VCR can be connected to these jacks for full-lead playback, recording and tape dubbing operation.
 - TAPE (DRA-345R)
Tape decks can be connected for full use including playing or copying.
- 8 **PRE-OUT (DRA-545R only)**
Output signals for power amplifiers are sent from these jacks. The rated output is 2 volts. The signals do not pass through the bass and treble circuits.
- 9 **SPEAKER SYSTEMS (Speaker terminals)**
Two pairs of speakers A and B can be connected to these terminals.
- 10 **TAPE/REMOTE CONTROL**
This terminal is exclusively used for sending the remote control signals to the tape deck. Connect it with a 3.5mm mini-jack cord.

Note:
Do not hook up a headphones or microphone jack cord. Use this jack to connect a Danit case size deck with a remote control jack (wired). If the cassette deck does not have this jack, wired remote control is not possible.
- 11 **AC OUTLET (AC power outlets) (U.S.A. and Multi-Voltage models only)**
This AC outlet is available independently of the power switch. Its capacity is a maximum of 240 W.
- 12 **SWITCHED**
This AC outlet is controlled by the power switch. Maximum capacity is 120 W.

NOTES

- This receiver has a full-back-up system. When the power is turned on, the INPUT SELECTOR buttons are set to the last mode set before the power was turned off.
- When using this receiver in close proximity to video equipment (TV, VCR, VDP, etc.), noise may be generated in AM broadcasts. To antenna holder and place it where noise is reduced. If the noise is not reduced, turn off the power of the video components when listening to AM broadcasts.

CONNECTIONS

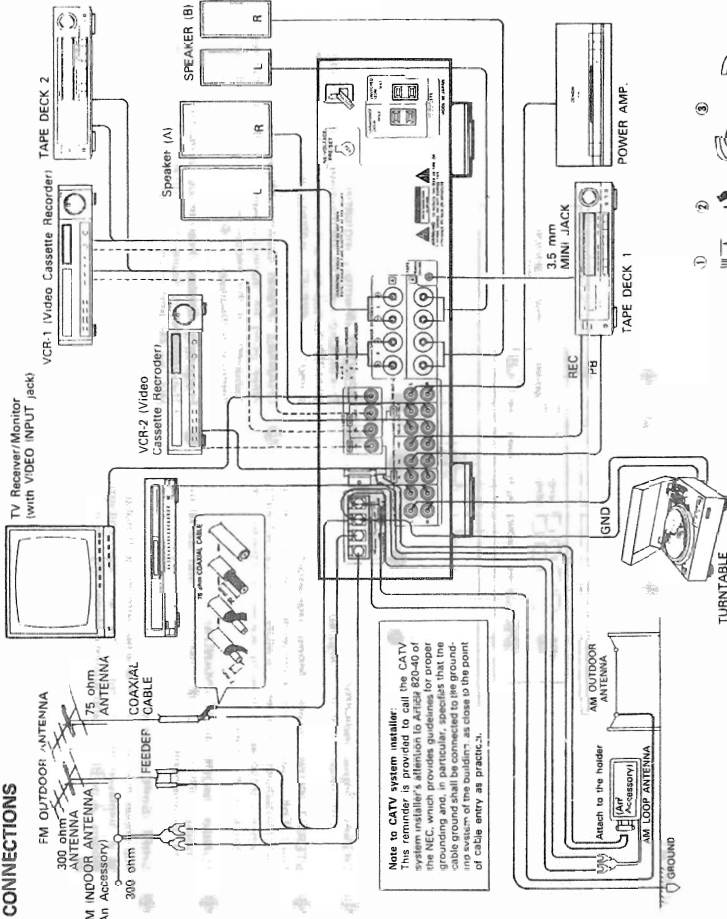

Note to CATV system installer:
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC, which provides guidelines for the cable ground shall be connected to the ground-rod within the building, as close to the point of cable entry as practical.

SPEAKER CONNECTION

- 1 Confirm polarity (+, -) and left and right channels (L, R). Connect the speaker pairs to the SPEAKER terminals.
- 2 Peel off the sheathing from the end of the cord.
- 3 Twist the wire strands.
- 4 Strip the insulation from the end of the cord, insert the wire lead portion of the cord, and then tighten the terminals.

Notes on Connection

- Do not plug the power cord into the AC wall outlet until all connections have been completed.
- Make sure channels are correctly connected. Connect Left and Right channels. Follow the color markings of plugs and terminals to make sure mistakes are not made.
- Connect all pin-plugs securely, pushing them completely into the jacks. Incomplete connections will cause noise generation.
- Incomplete connections of cables to power cords, or running cables close to power cords, may cause hum, buzz, or humming or noise, and should thus be avoided.

Notes:

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.

CAUTION

Protective Circuit
This set is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when an output is generated by a short circuit.
This protective circuit's operation cuts off the output to the speaker in a case, be sure to turn the power to the speaker off. It checks the speaker's operation. Then it turns the power on again. After waiting for several seconds, the set will operate normally.

TURNTABLE

- 1 Peel off the sheathing from the end of the cord.
- 2 Twist the wire strands.
- 3 Strip the insulation from the end of the cord, insert the wire lead portion of the cord, and then tighten the terminals.


HOW TO PRESET THE STATION

1. Set the BAND SELECT button to "AM" or "FM", and press the TUNING button to tune the desired station.
 2. Specify the preset buttons U.S.A. and Multi-Voltage Models: 1-8 or 9-16 or 17-24 by the SHIFT button.
 3. Press the MEMORY buttons and MEMORY indicator lights for about 5 seconds. During this time, press one of the eight PRESET channel buttons.
 4. The channel corresponding to the pressed button is displayed and the indicated frequency is stored in memory for that channel.
- NOTE:** If preset button is cooperative with MEMORY illuminated, press MEMORY and preset buttons again.
- This model has a last channel memory system, it stores the last channel used power off.
 - This model is designed to store and retain the stations that have been previously registered in the memory, even if the tuner is deenergized temporarily. The memory can hold registered data for approximately about a month [Temperature: 65°F (20°C), relative humidity: 95%]. If the memory is erased reset the preset data.


PLAYBACK USING THE REMOTE CONTROL

The accessory RC-129/RC-129A remote control unit is used to control the RECEIVER from a distance.

- (1) Inserting the dry cell batteries

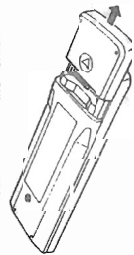


- 2 Insert two size "AA" (R6) dry cell batteries as shown in the diagram on the battery supply unit.

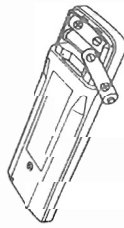

- 3 Replace the rear cover.



- (2) Directions for use

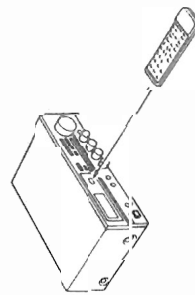

Note on Operation

- Do not press the operation buttons on the receiver and the remote control unit at the same time. This will cause misoperation.
- Operation of the remote control unit will become less effective or erratic if the infrared remote control sensor on the receiver is exposed to strong light or if there are obstructions between the remote control unit and the sensor.
- In case you operate your VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause mis-operation.

Besides being able to operate the DRA-545R/345R receiver with this remote control unit, you can also operate a DENON cassette deck and CD player from this handy full-system remote control unit.

Remote Control Section

Full-system Remote Control Unit

The full-system remote control unit operates all major functions of the receiver such as function switching, volume control, and preset station selection. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck when combined with the DRA-545R/345R to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects.


Remote Control Unit RC-129 supplied with DRA-545R
Remote Control Unit RC-129A supplied with DRA-345R

RECEIVER

Remote Power ON/STANDBY

Operate the monitor of the TAPE MONITOR tape deck with the TAPE MONITOR button.

DECK	▶ PLAY	▶ PLAY button
	◀ PLAY (REV)	PLAY (REV) button
	■ STOP	STOP button
	◀◀ REW	REWIND button
	FF ▶▶	FF button
	○ REC	Refer to the operation instructions of your DENON tape deck.
	PAUSE	PAUSE button
	A/B W-DECK	A/B DECK SELECT button

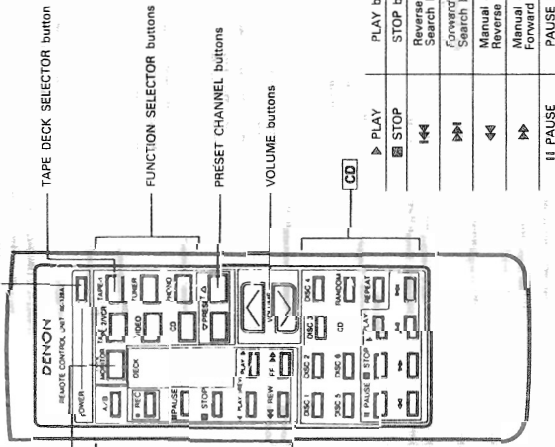

- RC-129A differs from RC-129 with respect to the TAPE MONITOR button only.
- The RC-129/RC-129A Remote Control Unit can control all CD players (excluding the DCD-1800R) and cassette decks made by DENON.
- Buttons are conveniently separated into groups, each group controlling one specific component. The groups are RECEIVER, FUNCTION, CD and DECK.

For details on operating other components, refer to the instruction manuals for the CD player and/or cassette deck.

CAUTION:

- If the power is turned off with the remote control unit, the receiver is switched to the power stand-by state. If you are to be absent for a long period of time, be sure to turn the power off using the POWER switch on the receiver.
- The LED indicators of input selector or Tape monitor light while the receiver is in the power stand-by state.
- You may experience erratic operation of the remote control unit if it is operated in fluorescent light and direct sunlight. In particular if this light strikes the remote control sensor on the receiver. However, this is not a malfunction, and if this should happen, protect the sensor against such light.

TROUBLESHOOTING

1. Have all connections been made PROPERLY?
 2. Have you followed all operational instructions correctly?
 3. Check speaker and the turntable systems for proper operation.
- *When your unit does not seem to be operating correctly, first check the items in the following table. If the symptom does not correspond to any of the problems as shown below, turn off the power sources immediately and contact your DENON dealer.

Problem	Cause	Remedy
FM AND AM RECEPTION		
Radio program can not be received.	<ul style="list-style-type: none"> • Antenna connection is wrong. • A signal strength is weak. 	<ul style="list-style-type: none"> • Check the connection • Check the antenna installation.
Noise is reproduced.	<ul style="list-style-type: none"> • A signal strength is weak. • Automobile ignition noise interferes with reception. • Other electrical equipment interferes with reception. 	<ul style="list-style-type: none"> • Install an outdoor antenna. • Keep the antenna away from the street. • Keep the equipment away from this set, or turn off the power of the other equipment.
The preset frequencies are erased.	<ul style="list-style-type: none"> • The memory back-up term (about 1 month) passed. 	<ul style="list-style-type: none"> • Preset again.
In automatic tuning, the frequency doesn't stop at the radio station.	<ul style="list-style-type: none"> • A signal strength is weak. 	<ul style="list-style-type: none"> • Use manual tuning
In automatic tuning, it stops at the one step lower or higher frequency than the radio station.	<ul style="list-style-type: none"> • Noise or strong signal strength is received. 	<ul style="list-style-type: none"> • Use manual tuning for optimum reception.
PLAYBACK OF THE AUDIO EQUIPMENTS		
No sound is produced with power on.	<ul style="list-style-type: none"> • Input and speaker cords connection are wrong. • Speaker switch is off. • The INPUT SELECTOR buttons are in wrong position. • The protective circuit is operating. • The fuse has blown out. 	<ul style="list-style-type: none"> • Check the connection. • Turn on speaker switch. • Check these position. • Turn the power off once, check the connections to the speakers, then turn the power on again. • Ask your dealer, or the nearest DENON representative.
Audible hum when playing records.	<ul style="list-style-type: none"> • The input and grounding cords connection of the turntable are wrong. • The cords connection of the cartridge are wrong. • The interference from the nearby TV or radio transmission antenna. 	<ul style="list-style-type: none"> • Check the connection. • Check the connection. • Ask your dealer, or the nearest DENON representative.
Howling is produced when the volume control is turned up too high while playing records.	<ul style="list-style-type: none"> • The vibrations and sounds transmit from the speakers to the turntable. 	<ul style="list-style-type: none"> • Insulate the vibrations, or keep the speakers away from the turntable.
Cracking noise is produced when playing records.	<ul style="list-style-type: none"> • The record is stained with the dust. • The stylus tip of the cartridge is stained with the dust. • The cartridge is defective. 	<ul style="list-style-type: none"> • Clean the record. • Clean the stylus tip. • Try the other cartridge.

SPECIFICATIONS

AMPLIFIER SECTION

Continuous Power Output: DRA-545R: 60 watts per channel minimum RMS, both channels driven at 8 ohms from 20 Hz ~ 20 kHz no more than 0.05% total harmonic distortion
 DRA-345R: 45 watts per channel minimum RMS, both channels driven at 8 ohms from 20 Hz ~ 20 kHz no more than 0.05% total harmonic distortion
 DRA-345R (Europe Model): 55W/65W (nom. DIN) 1kHz T.H.D. 0.7% 45W/45W (60min. 20Hz-20kHz T.H.D. 0.05%) 10 Hz ~ 40 kHz (T.H.D. 0.15% both channels driven into 8 ohms)

Power Bandwidth (IHF): 10 Hz ~ 40 kHz (T.H.D. 0.15% both channels driven into 8 ohms)

Total Harmonic Distortion:

0.03% (-3 dB at rated output; 8 ohms)
 PHONO RIAA Standard Curve (Recording Output)

CD, VIDEO, TAPE-1, TAPE-2/RCR (DRA-345R) TAPE (DRA-345R)
 MM 20 Hz ~ 20 kHz ± 0.5 dB
 20 Hz ~ 50 kHz ± 1.5 dB (at 1W)

Input Sensitivity and Impedance:

PHONO MM 2.5 mV 47 k ohms
CD, VIDEO, TAPE-1, TAPE-2/RCR (DRA-545R) TAPE (DRA-345R) 150 mV 29 k ohms

Maximum Input Level (at 1 kHz):

Signal to Noise Ratio (IHF-A): PHONO MM 120 mV
 PHONO MM 78 dB (at 5.0 mV input)
 CD, VIDEO, TAPE-1, TAPE-2/RCR (DRA-545R) TAPE (DRA-345R) 95 dB

Tone Controls:

TREBLE ± 10 dB at 100 Hz
 BASS ± 10 dB at 10 kHz
 VARIABLE LOUDNESS 50 Hz/10 kHz ± 10 dB / ± 5 dB

Loudness, Control Effect

PRE-OUT terminals Rise output: 2 V (at 100 Hz, 100 mV load) (DRA-545R only)

VIDEO SECTION

Input terminal: 1 Vp-p/50 ohms
Output terminal: 1 Vp-p/50 ohms
Frequency response: 5 Hz ~ 6 MHz ± 1.5 dB (DRA-545R only)

TUNER SECTION

(FM) (note: μV at 75 ohms, 0 dB) = 1×10^{-6} W)
Receiving Range: 87.5 ~ 108 MHz
Usable Sensitivity: 0.9 μV (10.3 dB)
50 dB Quieting Sensitivity: MONO 1.6 μV (15.3 dB)
 STEREO 23 μV (38.5 dB)
Signal to Noise Ratio (IHF-A): MONO 82 dB
 STEREO 78 dB

Total Harmonic Distortion (at 1 kHz):

MONO 0.1% (U.S.A., Canada and Multi-Voltage Models)
 STEREO 0.4% (Europe, U.K. and Australia Models)

0.15% (U.S.A., Canada and Multi-Voltage Models)
 0.5% (Europe, U.K. and Australia Models)
 1.5 dB (U.S.A., Canada and Multi-Voltage Models)
 42 dB (U.S.A., Canada and Multi-Voltage Models)
 65 dB (Europe, U.K. and Australia Models)
 50 dB (U.S.A., Canada and Multi-Voltage Models)
 55 dB (Europe, U.K. and Australia Models)

Capture Ratio : Image Rejection :

42 dB (U.S.A., Canada and Multi-Voltage Models)
 65 dB (Europe, U.K. and Australia Models)
 50 dB (U.S.A., Canada and Multi-Voltage Models)
 55 dB (Europe, U.K. and Australia Models)
Frequency Response: 30 Hz ~ 15 kHz ± 1.5 dB
Stereo Separation (at 1 kHz): 40 dB

Receiving Range:

520 ~ 171.0 kHz : U.S.A., Canada Model
 522 ~ 161.1 kHz : Multi-Voltage, Europe, U.K. and Australia Models

Usable Sensitivity: Signal to Noise Ratio:

18 μV (U.S.A., Canada and Multi-Voltage Models)
 55 dB (Europe, U.K. and Australia Models)

General

Power Supply: AC120V 60Hz : U.S.A., Canada Model
 100V/200V/240V 50/60Hz : Multi-Voltage Model
 AC230V/50Hz : Europe Model
 AC230V/60Hz : U.K., Australia Models

Power Consumption :

2.6A (DRA-545R) : U.S.A., Canada Model
 2.20A (DRA-345R) : U.S., Canada Model
 1.20W (DRA-545R) : Multi-Voltage Model
 95W (DRA-345R) : Multi-Voltage Model
 150W (DRA-545R) : U.K. and Australia Models
 120W (DRA-345R) : Europe, U.K. and Australia Models

Power Outlets :

SWITCHED 120V/UNSWITCHED 240V U.S.A. and Multi-Voltage Models only
 SWITCHED 100V (Europe Model)

Dimensions:

434 mm (17.332") W × 130 mm (5-1/8") H × 312 mm (12-9/32") D (DRA-545R)
 434 mm (17.332") W × 120 mm (4-23/32") H × 312 mm (12-9/32") D (DRA-345R)


Weight:

6.8 kg (15 lbs) (DRA-545R)
 6.2 kg (13 lbs 11 oz) (DRA-345R)
 RC-129/RC-129A Infrared pulse system


REMOTE CONTROL UNIT

Power supply: 3V DC, two size "AA" (R6) dry cell batteries
 60 mm (2-3/8") W × 175 mm (6-5/8") H × 18 mm (3/4") D (includes batteries)

Design and specifications are subject to change without prior notice



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

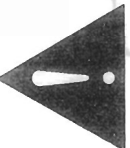

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

PRECAUTIONS FOR INSTALLATION
DRA-345R always install horizontally. And leave at least 10 cm of space between this unit and other component placed above.

VORKEHRUNGEN FÜR DEN EINBAU
Der DRA-345R ist stets waagrecht einzubauen. Außerdem muß ein Mindestabstand von 10 cm zwischen diesem Gerät und der Komponente gewährleistet werden, die darüber gestellt wird.

PRECAUTIONS D'INSTALLATION
Le DRA-345R doit toujours être installé horizontalement. Et laisser au moins un espace de 10 cm entre cet appareil et l'autre composant placé au-dessus.


PRECAUZIONI PER L'INSTALLAZIONE
Il DRA-345R viene sempre installato in modo orizzontale. Lasciate uno spazio di almeno 10 cm tra quest'unità e un eventuale componente sovrapposto.

PRECAUCIONES PARA LA INSTALACION
Instale siempre el DRA-345R en posición horizontal. Asegúrese también de dejar un espacio de por lo menos 10 cm entre esta unidad y el componente que sea colocado encima.

VOORZORGSMAATREGELEN VOOR INSTALLATIE
De DRA-345R altijd horizontaal plaatsen. En minstens 10 cm ruimte laten tussen dit toestel en het andere component dat u erboven plaatst.

FÖRBEREDELSE FÖR INSTALLATION
Installera alltid DRA-345R horisontellt. Lämna åtminstone 10 cm mellan denna apparat och en annan komponent som placeras ovanpå.

PRECAUÇÕES PARA A INSTALAÇÃO
Instale sempre horizontalmente o DRA-345R. E deixe pelo menos 10 cm de espaço entre esta unidade e o outro componente colocado acima.

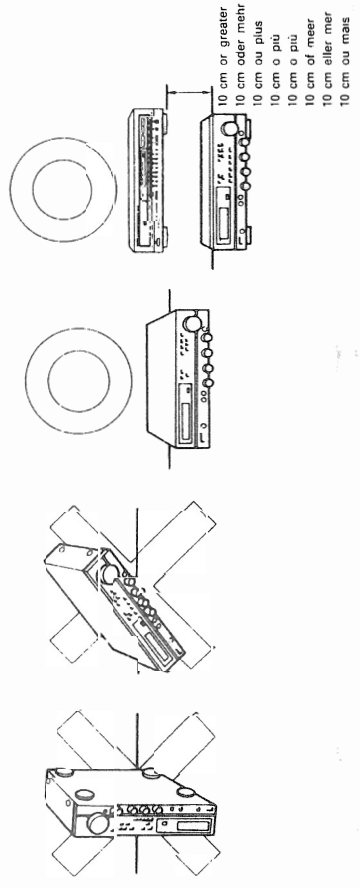


• NUR FÜR EUROPÄISCHE MODELLE

Konformitätserklärung
Die DENON Electronic GmbH
Halskestraße 32
40330 Ratingen 1


Erklärt als Hersteller/Importeur, daß das in dieser Bedienungsanleitung beschriebene Gerät den Technischen Vorschriften für Ton- und Fernseh-Rundfunkempfänger nach der Amtsblattverfügung 8869/1989 (Amtsblatt des Bundesministe*s für Post und Telekommunikation vom 31. 8. 1989) entspricht.

NAME AND FUNCTION OF PARTS/TEILE UND DEREN FUNKTIONEN/
 NOM ET FONCTIONS DES PIÈCES/NOMENCLATURA E FUNZIONE DELLE PARTI/
 NOMBRE Y FUNCION DE LAS PARTES/BEWAKING EN FUNKTE VAN ONDERDELEN/
 DE OLIKA DELARNAS NAMN OCH FUNKTIONER/NOMES E FUNÇOES DOS COMPONENTES


FRONT PANEL
 FRONTPLATTE
 PANNEAU AVANT
 IL PANNELLO ANTERIORE
 PANEL DELANTERO
 VOORPANEEL
 FRAMPANELEN
 PAINEL FRONTAL

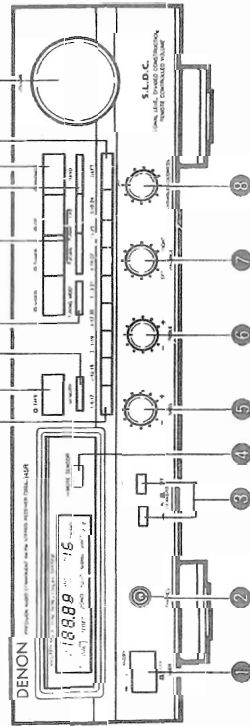

DISPLAY
 ANZEIGE
 AFFICHAGE
 DISPLAY
 VISUALIZADOR
 DISPLAYEN
 MOSTRADOR

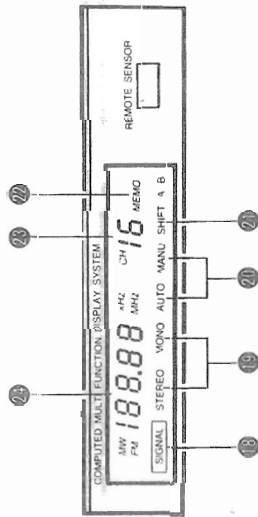

REAR PANEL
 RÜCKWAND
 PANNEAU ARRIERE
 IL PANNELLO POSTERIORE
 PANEL TRASERO
 ACHTERPANEEL
 BAKSIDAN
 PAINEL TRAZEIRO

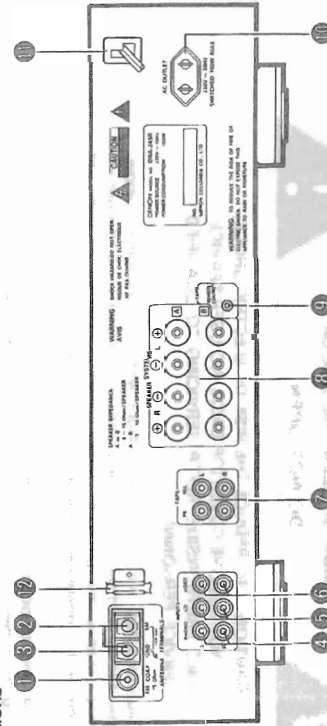

Please check to make sure the following items are included with the main unit in the carton:

- (1) Operating Instructions
- (2) AM Loop Antenna
- (3) FM Antenna
- (4) Remote Control RC-129A
- (5) Batteries R6 (AA)

Bitte überprüfen Sie, ob die folgenden Teile vollständig in der Verpackung enthalten sind:

- (1) Bedienungsanleitung
- (2) AM-Rahmenantenne
- (3) UKW-Antenne
- (4) Fernbedienungsgerät RC-129A
- (5) Trockenbatterie R6 (AA)

Veuillez contrôler que les articles suivants sont bien joints à l'appareil principal dans le carton:

- (1) Mode d'emploi
- (2) Antenne-cadre AM
- (3) Antenne FM
- (4) Télécommande RC-129A
- (5) Piles de format R6 (AA)

Controllare che le parti seguenti si trovino imballate con l'apparecchio nella scatola di spedizione.

- (1) Istruzioni per l'uso
- (2) Antenna AM a telaio
- (3) Antenna FM
- (4) Telecomando RC-129A
- (5) Batterie a secco R6 (AA)

Por favor verifique asegurándose de que los siguientes artículos son empacados en la caja pero separados de la unidad principal.

- (1) Instrucciones de operación
- (2) Antena AM de cuadro
- (3) Antena de FM
- (4) Unidad de control remoto RC-129A
- (5) Pilas secas R6 (AA)

Kontroleer of de volgende accessoires bij het hoofdtoestel in de doos zijn verpakt:

- (1) Gebruiksaanwijzing
- (2) AM-raamantenne
- (3) FM-antenne
- (4) Afstandsbediening RC-129A
- (5) R6(AA) droge cel batterij

Kontroleer of de volgende accessoires bij het hoofdtoestel in de doos zijn verpakt:

- (1) Bruksanvisning
- (2) Ramantenn for AM-bånd
- (3) FM-antenn
- (4) Fjernkontroll RC-129A
- (5) R6 (AA) tørrbatteri

Certifique-se de que as seguintes peças estão incluídas na embalagem fora de unidade principal:

- (1) Instruções de operação
- (2) Antena de quadro AM
- (3) Antena FM
- (4) Controle remoto RC-129A
- (5) Pilhas R6 (AA)

FRONT PANEL (Refer to Page 5)

- 1 **POWER (Power switch)**
When the power cord is plugged into an AC power outlet, pressing this button once, the power is turned on and the DISPLAY lights. It takes a few seconds before sound is output, thanks to the built-in muting circuit, preventing audio output until the receiver has stabilized.
- 2 **PHONES (Headphones jack)**
Connect a pair of headphones (sold separately) to this jack for private listening.
- 3 **SPEAKERS (Speaker selector switches)**
These switches are used to engage speaker system A and B. No sound is heard through the speakers when both switches are reset to the **0** position.
- 4 **REMOTE SENSOR (Remote control sensor)**
This sensor causes the infrared light transmitted from the wireless remote control unit. For remote control, point the wireless remote control unit towards the sensor.
- 5 **BASS (Bass control)**
Use this control to adjust the low range response. When the characteristic curve (below 1,000 Hz) is flat, turn the control clockwise to increase the bass response and counter-clockwise to decrease it.
- 6 **TREBLE (Treble control)**
Use this control to adjust the high-range response. When the control is set to the center position, the frequency characteristic curve (above 1,000 Hz) is flat. Turn the control clockwise to increase the treble response and counter-clockwise to decrease it.
- 7 **BALANCE (Balance control)**
Use this control to balance the volume levels between left and right channels. The volume levels in both channels are equal when the control is set to the center position.
- 8 **VARIABLE LOUDNESS (Loudness control)**
At low volumes, the human ear is less sensitive to low (BASS) and high (TREBLE) frequencies. Use this control to compensate for this deficiency when listening at low volume levels. Turn this control counter-clockwise until a natural balance of bass and treble sound has been restored.
- 9 **VOLUME (Volume control)**
This knob is used to adjust the volume level of both channels. Turn the knob clockwise to raise the volume and counter-clockwise to lower it.
- 10 **SHIFT (Shift button)**
Each time this button is pressed, the preset station range will be shifted among "1 ~ 8", "9 ~ 16" and "17 ~ 24". (A: 1 ~ 8, B: 9 ~ 16, AB: 17 ~ 24)

- 11 **INPUT SELECTOR (Input selector buttons)**
These buttons are used to select the audio input source.
 - **PHONO:** Press to play a record on a record player connected to the PHONO input jacks.
 - **CD:** Press to listen to a compact disc player or another component connected to the CD input jacks.
 - **TUNER:** Press to listen to FM or AM programs.
 - **VIDEO:** Use when playing back the audio from a Hi-Fi video, video disc player or other component connected to the VIDEO terminal.
 If a function switch is pressed quickly, the function may not actually change and no signal may be heard from the cassette for an instant. To avoid this, be sure to press function switches carefully.
- 12 **BAND (Band selector switch)**
Press this switch to select the FM or AM (MW) band.
- 13 **TUNING (Tuning buttons)**
Press these buttons to tune in a station. In the MANUAL TUNING mode, push and press on the buttons to change the frequency in 0.1 MHz steps on the FM band and 0.1 MHz steps on AM. Keeping one of these buttons pressed, the frequency will change until the AUTO TUNING mode, pressing one of these buttons will affect station search up or down the band.
- 14 **TUNING MODE (Tuning mode switch)**
This switch allows selection between Auto Tuning and Manual Tuning. Pressing the UP button, the tuner will begin tuning to a higher frequency and pressing the DOWN button, it will begin tuning to a lower frequency until a broadcasting station is found. **MANUAL TUNING:** Stations are tuned in manually by use of the UP and DOWN buttons.
- 15 **TAPE (Tape monitor buttons)**
Press this button once, indicator LED will light up and then you can play tape source on the TAPE terminal. And press this button again to play sources selected by the input selector. Indicator LED goes out.
- 16 **MEMORY (Memory button)**
This switch is used to store the desired radio station on a PRESET CHANNEL button. When pressing this button, the MEMORY indicator lights for approximately 5 seconds. During this interval, the desired station can be stored in the memory.
- 17 **Preset channel 1~24 (Preset station buttons)**
These buttons are used for storing stations or recalling stations which have been preset. Using the SHIFT button you can preset a total of 24 FM or AM stations into preset channels 1~8, 9~16 and 17~24. Once a radio has been memorized on a PRESET CHANNEL button, the same station can later be tuned in instantly simply by pressing the corresponding PRESET CHANNEL button.

DISPLAY (Refer to Page 5)

- 18 **SIGNAL (Signal indicator)**
This lights when a station is received.
- 19 **STEREO/MONO (Stereo/Mono indicator)**
The STEREO indicator will automatically light up when a stereo broadcast is received. The MONO indicator will light up when a broadcast is not being received or at the time of a monaural broadcast.
- 20 **TUNING MODE (AUTO/MANU)**
Pressing TUNING MODE causes AUTO and MANU to light up alternately.
- 21 **SHIFT (Shift indicator)**
The preset channel which is selected with the Shift Button is displayed by the SHIFT **A** or **B** or **AB**.

REAR PANEL (Refer to Page 5)

- 1 **FM ANT (FM antenna terminals)**
Both 75-ohm coaxial cable can be connected to this terminal. For antenna connecting procedure, see the ANTENNA INSTALLATION.
- 2 **AM ANT (AM antenna terminals)**
Connect the attached AM loop antenna. (Refer to page 8 for connections). Connect to this terminal when a medium wave outdoor antenna is used.
- 3 **GND (Grounding terminal)**
The grounding wire of the turntable is connected here. Hum or noise may be generated if the grounding wire is not connected.
- 4 **PHONO (Phono input terminals)**
The output cord of the turntable is connected here. Since the input sensitivity of the phono is extremely high, do not use the unit without the phono pin cord. If used without this cord, the speakers may generate hum.
- 5 **CD**
The output cord of the CD player is connected here.
- 6 **VIDEO**
A VIDEO, such as a VCR or Video Disk Player may be connected here.
- 7 **TAPE**
Tape decks can be connected for full use including playing or copying.
- 8 **SPEAKER SYSTEMS (Speaker terminals)**
Two pairs of speaker A and B can be connected to these terminals.
- 9 **TAPE/REMOTE CONTROL**
This terminal is exclusively used for sending the remote control signals to the tape deck. Connect it with a 3.5mm mini-jack cord.

Note:
Do not hook up a headphones or microphone jack cord. Use this jack to connect a Dignon cassette deck with a remote control jack (wired). If the cassette deck does not have this jack, wired remote control is not possible.

- 10 **AC OUTLET (AC power outlet)**
This AC outlet is controlled by the power switch. Maximum capacity is 100 W.

MEMORY (Memory indicator)

This indicator lights for approximately 5 seconds when the MEMORY button has been pressed and a station can be stored on a PRESET CHANNEL button.

CHANNEL (Preset channel display)

When using the channel preset button, the character is displayed and the frequency for that channel stored in memory is displayed in.

Frequency display (Frequency indicator)

This frequency is displayed in numerals. It is displayed in MHz for FM, and in kHz for AM (MW)

AC CORD (Power cord)

Connect this cord into the wall outlet.

AM LOOP ANT (AM loop antenna)

Correctly connect the AM loop antenna to the antenna terminal. Broadcasting cannot be received when the connection is incomplete.

Adjust the antenna for optimum reception while receiving the medium wave broadcasting. Do not place a pin cord, SP cord or electric cord near the antenna. This may cause noise generation.


ANTENNA INSTALLATION

- **FM ANTENNA**
The supplied T-type indoor FM antenna (75 ohms) can be used inside wooden houses for receiving local FM stations and other strong FM signals. Stretch out the ends of the antenna and mount the antenna on the wall or ceiling where optimum reception is achieved. FM T-type antennas may not consistently assure stable reception, due to environment changes. In such cases, the FM T-type antenna should only be used temporarily until an outdoor FM antenna has been installed. When connecting an outdoor FM antenna, the use of 75 ohm coaxial cable (3C-2V, 5C-2V) is strongly recommended.
- **AM ANTENNA**
Attach the supplied AM loop antenna to the antenna holder. On the back panel.
- **Connect the leads to the AM and GND terminals.**
Also use the AM terminals for connecting an outdoor AM antenna (when making such a connection do not disconnect the AM loop antenna.)
- **Adjust the loop antenna to obtain optimum reception.** Where broadcast stations are distant and only weak signals are received, or where signals are blocked, it is best to install an outdoor AM antenna.

NOTES

- This receiver has a full back-up system. When the power is turned on, the INPUT SELECTOR buttons are set to the last mode set before the power was turned off.
- When the receiver is in close proximity to video equipment (TV, VCR, VDP, etc.), noise may be generated in AM broadcasts. To avoid this, keep the receiver as far as possible from other video components as well as the AM loop antenna from the antenna holder and place it where noise is reduced. If the noise is not reduced, turn off the power of the video components when listening to AM broadcasts.

CONNECTIONS

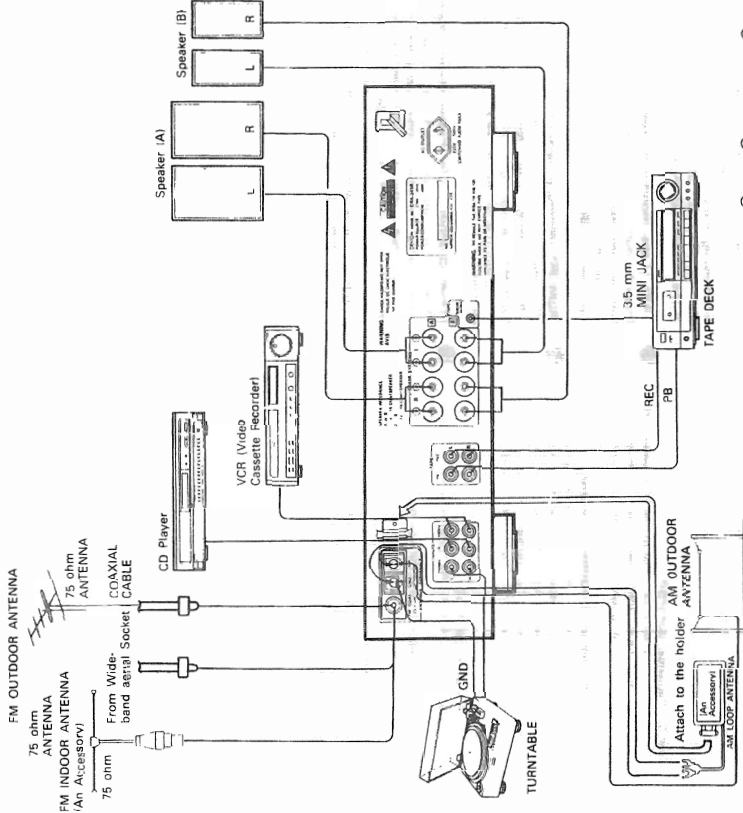

SPEAKER CONNECTION

Confirm polarity (+, -) and left and right channels (L, R). Connect the speaker pairs to the SPEAKER terminals A or B on the back panel. Connections must be made with power cord disconnected.

1. Peel off the sheathing from the end of the cord.
2. Twist the wire strands.
3. Loosen the speaker terminal, insert the wire lead portion of the cord, and then tighten the terminals.

CAUTION

Protective Circuit
This set is equipped with a high-speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when the speaker jacks are not completely connected or when the speaker leads are not properly secured. This protective circuit's operation cuts off the output to the speakers. In such a case, be sure to turn the power to the set off and check the connections to the speakers. Then turn the power on again. After muting for several seconds, the set will operate normally.

Notes on Connection

- Do not plug the power cord into the AC wall outlet until all instructions have been completed.
- Make sure channels are properly connected. Connect Left channels to Left channels and Right channels to Right channels. Follow the color markings of plugs and terminals to make sure mistakes are not made.
- Connect all pin-plugs securely, pushing them completely into the jacks. Incomplete connections will cause noise generation.
- Do not connect cables to power cord, or running speaker cables close together, as this will cause humming or noise, and should thus be avoided.

Notes:

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.


HOW TO PRESET THE STATION

1. Set the BAND SELECT button to "AM" or "FM", and press the TUNING button to tune the desired station.
 2. Specify the preset buttons 1-6 or 9-16 or 17-24 by the SHIFT button.
 3. Press the MEMORY buttons and MEMORY indicator lights for about 5 seconds. During this time, press one of the eight PRESET channel buttons.
 4. The channel corresponding to the pressed button is displayed and the indicated frequency is stored in memory for that channel.
- NOTE:** If preset button is inoperative with MEMORY illuminated, press MEMORY and preset buttons again.
- This model has a last channel memory system. It stores the last channel used power off.
 - This model is designed to store and retain the stations that have been previously registered in the memory, even if the tuner is deenergized temporarily. The memory can hold registered data for approximately about a month [Temperature: 68°F (20°C), relative humidity: 65%]. If the memory is erased reset the preset data.


PLAYBACK USING THE REMOTE CONTROL

The accessory RC-129A remote control unit is used to control the RECEIVER from a distance.


- (1) Inserting the dry cell batteries

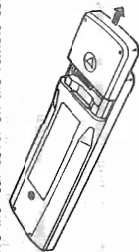


2. Insert two size "AA" (R6) dry cell batteries as shown in the diagram on the battery supply unit.

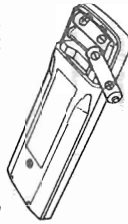

3. Replace the rear cover.

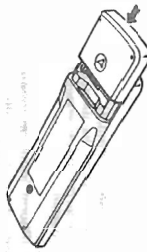

- (2) Directions for use

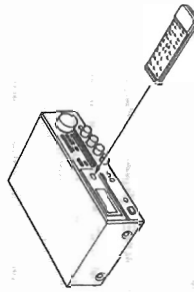

Notes on Use of the batteries

- The remote control unit uses size "AA" (R6) dry cell batteries.
- The batteries will need to be replaced approximately once a year. This will depend upon how often the remote control is used.
- If, in less than a year from the time new batteries were inserted, the remote control fails to operate, the receiver from a near-by position, it is time to replace the batteries.
- Insert the batteries properly, following the diagram on the remote control supply unit, and making sure to align the plus and minus signs of each battery.
- Batteries are prone to damage and leak. Therefore:
 - Do not combine new batteries with used ones.
 - Do not combine different types of batteries.
 - Do not jar the opposite poles of batteries, expose them to heat or break them open, or put them into open fire.
- When the remote control is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any battery fluid from the inside of the battery supply unit by wiping it out thoroughly, and insert new batteries.

- Operate the remote control unit while pointing it towards the remote control sensor on the receiver as shown in the diagram left.
- The remote control unit can be used at distances up to about 8 meters in a straight line from the receiver. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the remote control unit is not directed straight at the receiver.

Note on Operation


- Do not press the operating buttons on the receiver and the remote control unit at the same time. This will cause misoperation.
- Operation of the remote control unit will become less effective or erratic if the infrared remote control sensor on the receiver is exposed to strong light, or if there are obstructions between the remote control unit and the sensor.
- In case you operate your VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause mis-operation.

Besides being able to operate the DRA-345R receiver with this remote control unit, you can also operate a DENON cassette deck and CD player from this handy full-system remote control unit.

Remote Control Section
Full-system Remote Control Unit
The full-system remote control unit operates all major functions of the receiver such as function switching, volume control, and preset station selection. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck when combined with the DRA-345R to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects.

Remote Control Unit RC-129A supplied with DRA-345R

RECEIVER

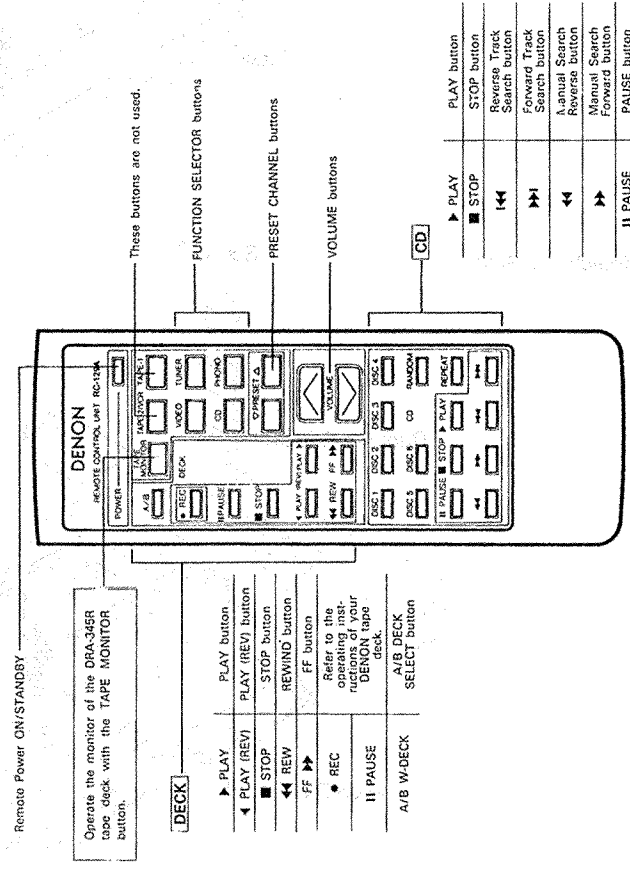

• The RC-129A Remote Control Unit can control all CD players (excluding the DCD-1800R) and cassette decks made by DENON. Buttons are conveniently separated into groups, each group controlling one specific component. The groups are RECEIVER, FUNCTION, CD and DECK.

For details on operating other components, refer to the instruction manuals for the CD player and/or cassette deck.

CAUTION:

- If the power is turned off with the remote control unit, the receiver is switched to the power stand-by state. If you are to be absent for a long period of time, be sure to turn the power off using the POWER switch on the receiver.
- The LED indicators of Input selector or Tape monitor light while the receiver is in the power stand-by state.
- You may experience erratic operation of the remote control unit if it is operated in fluorescent light and direct sunlight, in particular if this light strikes the remote control sensor on the receiver. However, this is not a malfunction, and if this should happen, protect the sensor against such light.

TROUBLESHOOTING

1. Have all connections been made properly?
2. Have you followed all operational instructions correctly?
3. Check speaker and the turntable systems for proper operation. When your unit does not seem to be operating correctly, first check the items in the following table. If the symptom does not correspond to any of the problems as shown below, turn off the power sources immediately and contact your DENON dealer.

Problem	Cause	Remedy
FM AND AM RECEPTION		
Radio program can not be received.	• Antenna connection is wrong. • A signal strength is weak.	• Check the connection. • Check the antenna installation.
Noise is reproduced.	• A signal strength is weak. • Automobile lightning noise interferes with reception. • Other electrical equipment interferes with reception.	• Install an outdoor antenna. • Keep the antenna away from the street. • Keep the equipment away from this set, or turn off the power of the other equipment.
The preset frequencies are erased.	• The memory back-up term (about 1 month) has passed.	• Preset again.
In automatic tuning, the frequency doesn't stop at the radio station.	• A signal strength is weak.	• Use manual tuning.
In automatic tuning, it stops at the one step lower or higher frequency than the radio station.	• Noise or strong signal strength is received.	• Use manual tuning for optimum reception.
PLAYBACK OF THE AUDIO EQUIPMENTS		
No sound is produced with power on.	• Input and speaker cords connection are wrong. • Speaker switch is off. • The INPUT SELECTOR buttons are in wrong position. • The protective circuit is operating. • The fuse has blown out.	• Check the connection. • Turn on speaker switch. • Check these position. • Turn the power off once, check the connections to the speakers, then turn the power on again. • Ask your dealer, or the nearest DENON representative.
Audible hum when playing records.	• The input and grounding cords connection of the turntable are wrong. • The cords connection of the cartridge are wrong. • The interference from the nearby TV or radio transmission antenna.	• Check the connection. • Check the connection. • Ask your dealer, or the nearest DENON representative.
Howling is produced when the volume control is turned up too high while playing records.	• The vibrations and sounds transmit from the speakers to the turntable.	• Insulate the vibrations, or keep the speakers away from the turntable.
Crackling noise is produced when playing records.	• The record is stained with the dust. • The stylus tip of the cartridge is stained with the dust. • The cartridge is defective.	• Clean the record. • Clean the stylus tip. • Try the other cartridge.

SPECIFICATIONS


AMPLIFIER SECTION	TUNER SECTION
Continuous Power Output: 65W + 65W (4 ohm DIN 1 kHz T.H.D. 0.7%) 45W + 45W (8 ohm 20 Hz ~ 20 kHz T.H.D. 0.05%) 10 Hz ~ 40 kHz (T.H.D. 0.15% both channels driven into 8 ohms)	[FM] (noise: μV at 75 ohms, 0 dBf = $1 \times 10^{-15} W$) Receiving Range: 87.5 ~ 108 MHz Usable Sensitivity: 0.9 μV (10.3 dBf) 50 dB Quieting Sensitivity: MONO 1.6 μV (15.3 dBf) STEREO 23 μV (36.5 dBf)
Total Harmonic Distortion: 0.03% (-3 dB at rated output, 8 ohms) Frequency Response: PHONO RIAA Standard Curve (Record-ing Output) MM 20 Hz ~ 20 kHz ± 0.5 dB CD, VIDEO, TAPE 20 Hz ~ 50 kHz ± 1.5 dB (at 1W)	Signal to Noise Ratio (IHF-A): MONO 82 dB STEREO 78 dB Total Harmonic Distortion (at 1 kHz): MONO 0.5% STEREO 0.5% Capture Ratio: 1.5 dB Image Rejection: 65 dB AM Suppression: 50 dB Selectivity (± 300 kHz): 55 dB Frequency Response: 30 Hz ~ 15 kHz -0.2 dB Stereo Separation (at 1 kHz): 40 dB
Input Sensitivity and Impedance: PHONO MM 2.5 mV 47 k ohms CD, VIDEO, TAPE 150 mV 29 k ohms Maximum Input Level (at 1 kHz): PHONO MM 120 mV Signal to Noise Ratio (IHF-A): PHONO MM 78 dB (at 5.0 mV input) CD, VIDEO, TAPE 98 dB Tone Controls: BASS ± 10 dB at 100 Hz TREBLE ± 10 dB at 10 kHz Loudness Control Effect: VARIABLE LOUDNESS 50 Hz/10 kHz, -10 dB/+5 dB	[AM] Receiving Range: 522 ~ 1611 kHz Usable Sensitivity: 18 μV Signal to Noise Ratio: 55 dB General Power Supply: AC 230V/50 Hz Power Consumption: 120 W Power Outlets: SWITCHED 100 W Dimensions: 434 mm (17.3/32" W) x 120 mm (4.73/22" H) x 312 mm (12.3/31" D) Weight: 6.2 kg (13 lbs 11 oz) RC-129A Remote control system: Infrared pulse system Power supply: 3V DCTwo size "AA" (RB) External dimensions: 60 mm (2.35/94" W) x 175 mm (6.87/64" H) x 118 mm (4.64/18" D) Weight: 120 g (4 oz) (includes batteries)

Design and specifications are subject to change without prior notice.

REMOVAL OF EACH SECTION


1. Top Cover

Remove 4 screws (A) and 2 screws (B), and detach the Top Cover upward in the arrow direction.

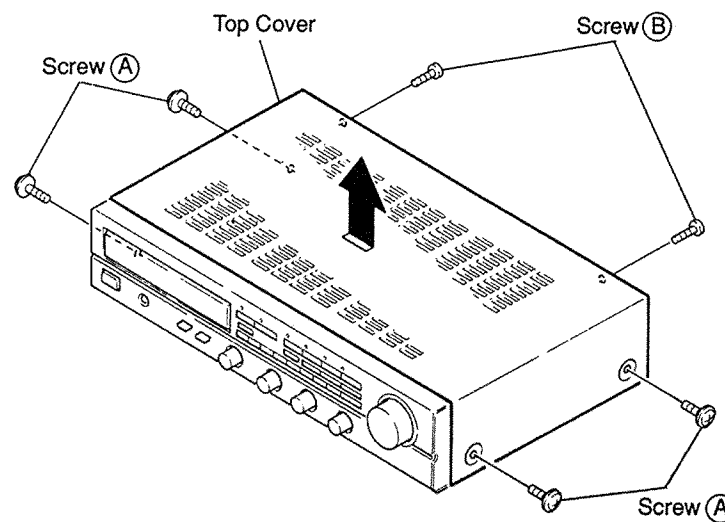


2. Bottom Cover

Remove 2 screws (C), 4 screws (D) and 2 Cup screws, and detach the Bottom Cover upward in the arrow direction.

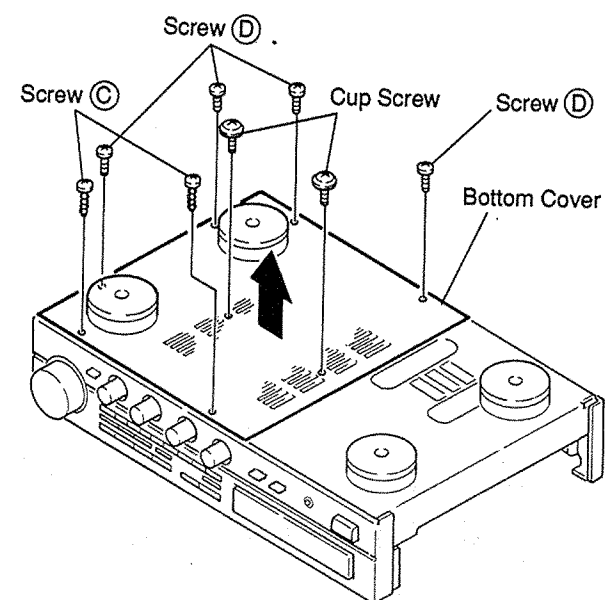


3. Front Panel

1) Remove 2 screws (E) out of the Bottom Panel.
2) Pushing 3 claws downward, and draw out the Front Panel frontward as the arrow shows.

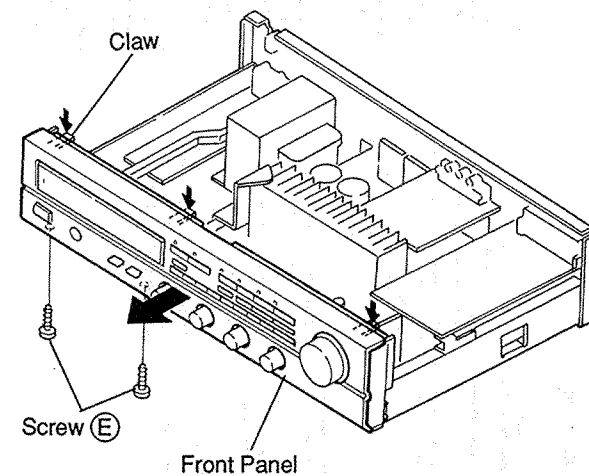


4. Front Sub-Panel

1) Pull out the Volume Knob and unfasten the hex nut.
2) Pull out 4 Control Knobs and unfasten 1 hex nut.
3) Remove 6 screws (D) and draw out the Front Sub-Panel in the arrow direction.

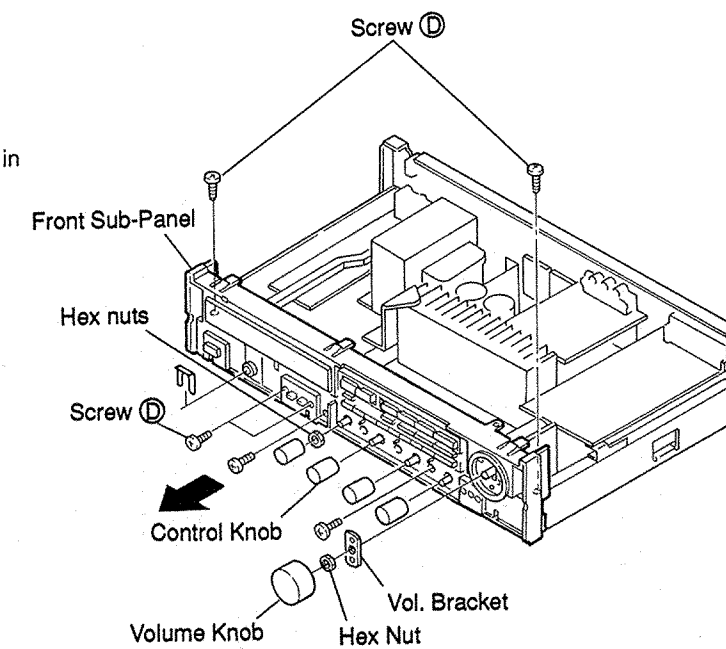


5. F.L.D. P.W.Board

1) Remove 4 screws (E).
2) Removing 8 claws downward, and draw out the F.L.D. P.W.Board as the arrow shows.

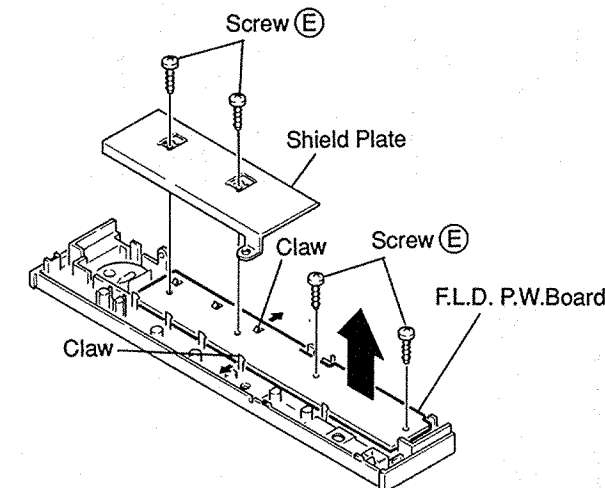


6. Main P.W.Board

Remove 3 screws (F), 9 screws (G), and detach the Main P.W.Board as per the arrow direction.

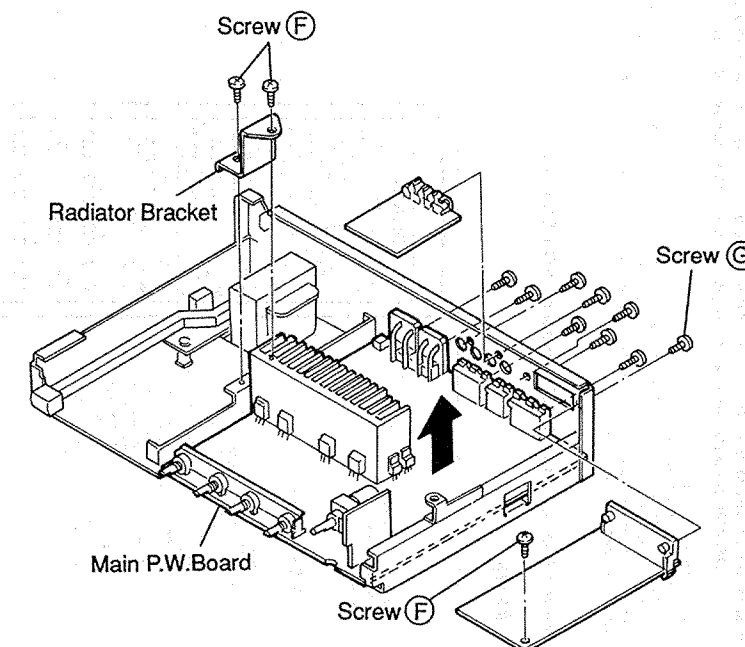

METHOD OF ADJUSTMENTS

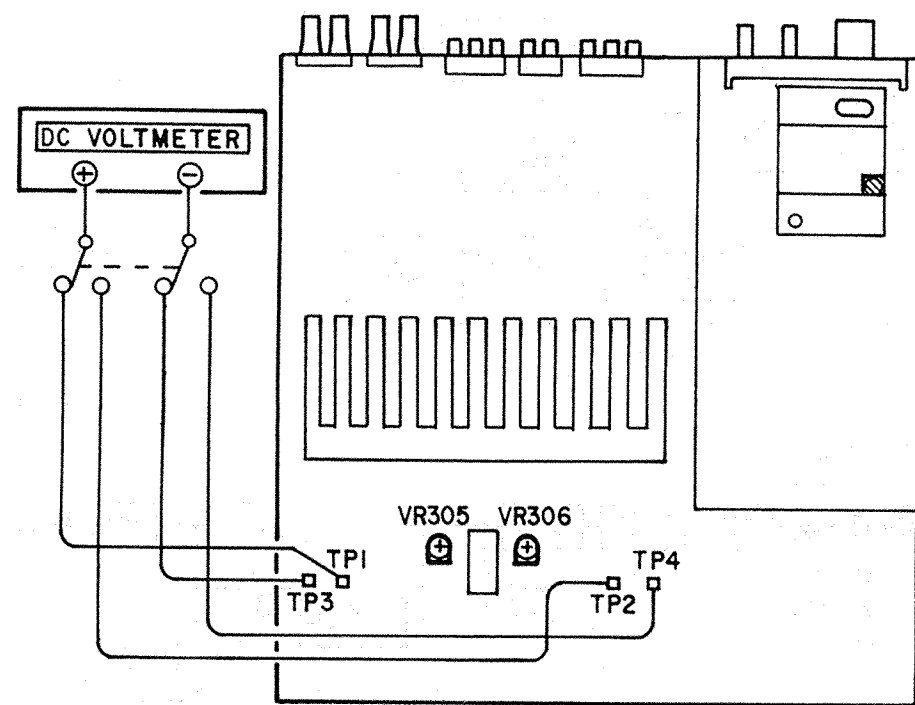

1. IDLING CURRENT

(1) Set controls as follows.

- POWER Switch → off (■)
- VOLUME Control → 0 (min.)
- SPEAKERS → off (■)
- Temperature → 15°C~30°C (59°F~86°F)

VR305 and VR306 of the 1U-2345-1 (DRA-545R) (1U-2344-1 or 1U-2498-1, DRA-345R) (MAIN Unit) → MIN. (◯)

(2) Connect DC Voltmeter to the test points 1 (+), 3 (-) and 2 (+), 4 (-) of the 1U-2345-1 (DRA-545R) (1U-2344-1 or 1U-2498-1, DRA-345R).

(3) Turn the Power Switch on and rotate VR305 clockwise so that the DC Voltmeter reads 5.0 mV ± 0.2 mV DC at the test point 1, 3. Follow the same procedure to VR306 for test point 2, 4.

(4) Warm up for three minutes, then readjust VR305 and VR306 so that the DC Voltmeter reads 5.0 mV ± 0.5 mV DC.

(5) Warm up for 10 minutes, then readjust VR305 and VR306 so that the DC Voltmeter reads 5.0 mV ± 0.5 mV DC.

FM/MPX ALIGNMENT

Table 1

Step	Alignment Item	Tuning Frequency Setting	Input			Output			Adjust		Remarks	
			Type	Frequency	Input Level	Modulation	Coupling	Type	Connect to	Points		Adjust to
1	Tuning Center	98 MHz	FM SSG Mono	98 MHz	60 dBμ	None	Antenna Terminal	Digital Voltmeter	T.P. by IC601	T603	±50 mV	Function: FM Mode: Auto
2	Distortion (Stereo)	98 MHz	FM SSG Stereo (L)	98 MHz	60 dBμ	Main: 1 kHz L-ch 90% Pilot: 10%	Antenna Terminal	Distortion Meter	TAPE REC (L)	IFT on Front End	Minimum Distortion	Function: FM Mode: Auto

AM ALIGNMENT


Table 2

Step	Alignment Item	Tuning Frequency Setting	Input			Output			Adjust		Remarks	
			Type	Frequency	Input Level	Modulation	Coupling	Type	Connect to	Points		Adjust to
1	Receiving Band Alignment	520 KHz (522 KHz)	AM SSG	520 KHz (522 KHz)	Input Level is not over to work A.G.C.	400 Hz 30%	Loop Antenna	Electric DC Voltmeter	C696 GND	T602	1.0 V ±20 mV (1.2 V ±20 mV)	Function: AM
2	Tracking Alignment	600 KHz (603 KHz)	AM SSG	600 KHz (603 KHz)	Input Level is not over to work A.G.C.	400 Hz 30%	Loop Antenna	Audio V.M.	TAPE REC (L)	T601	Maximum Output	Function: AM
		1400 KHz (1404 KHz)	AM SSG	1400 KHz (1404 KHz)	Input Level is not over to work A.G.C.	400 Hz 30%	Loop Antenna	Audio V.M.	TAPE REC (L)	TC601	Maximum Output	Function: AM


(◯) : For Europe, U.K., and Australia models

CONNECTION DIAGRAM OF MEASURING INSTRUMENTS



• FM

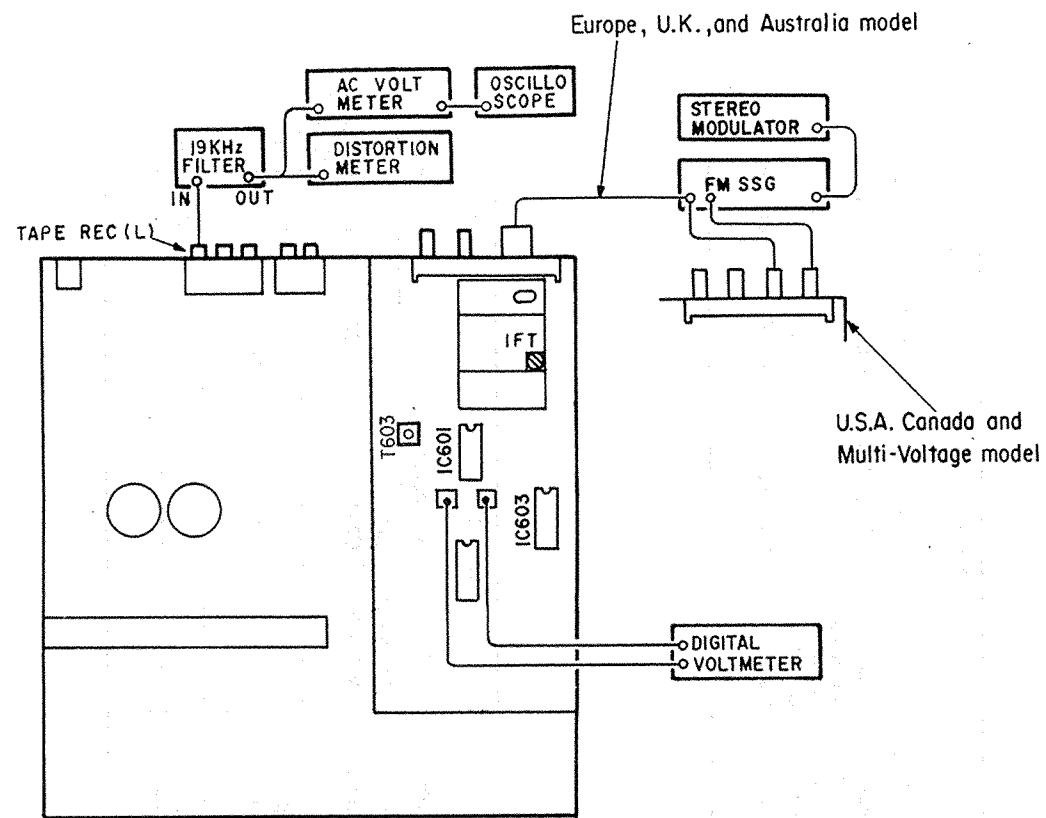



• AM

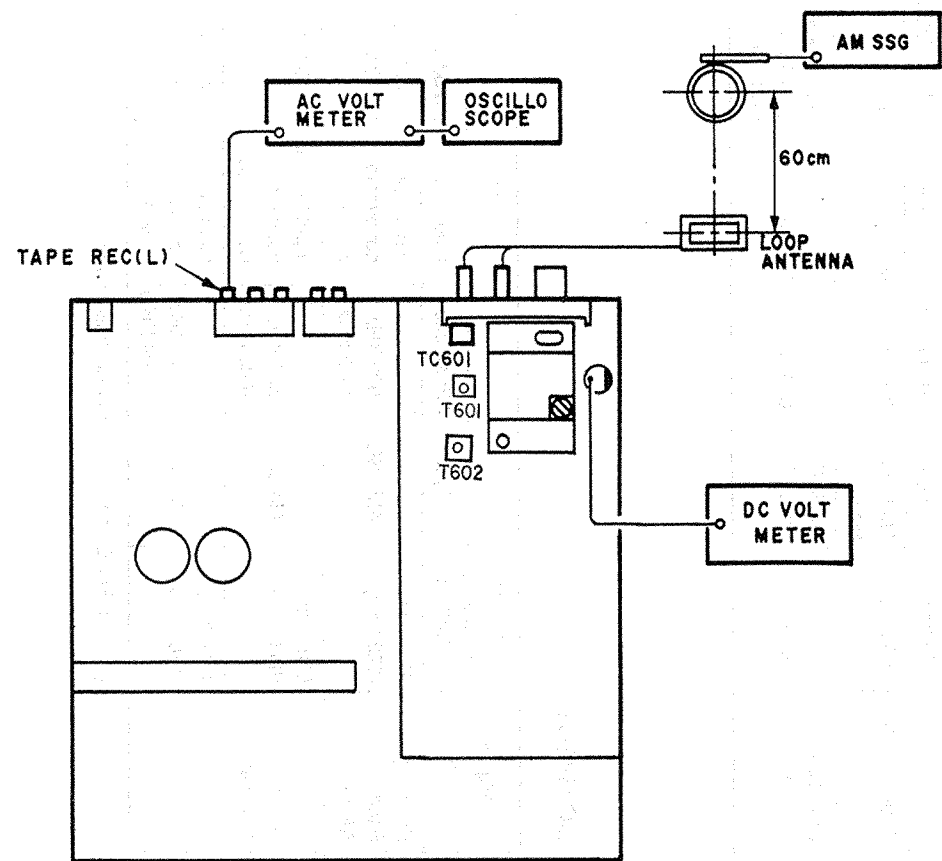

BLOCK/LEVEL DIAGRAM (DRA-545R)

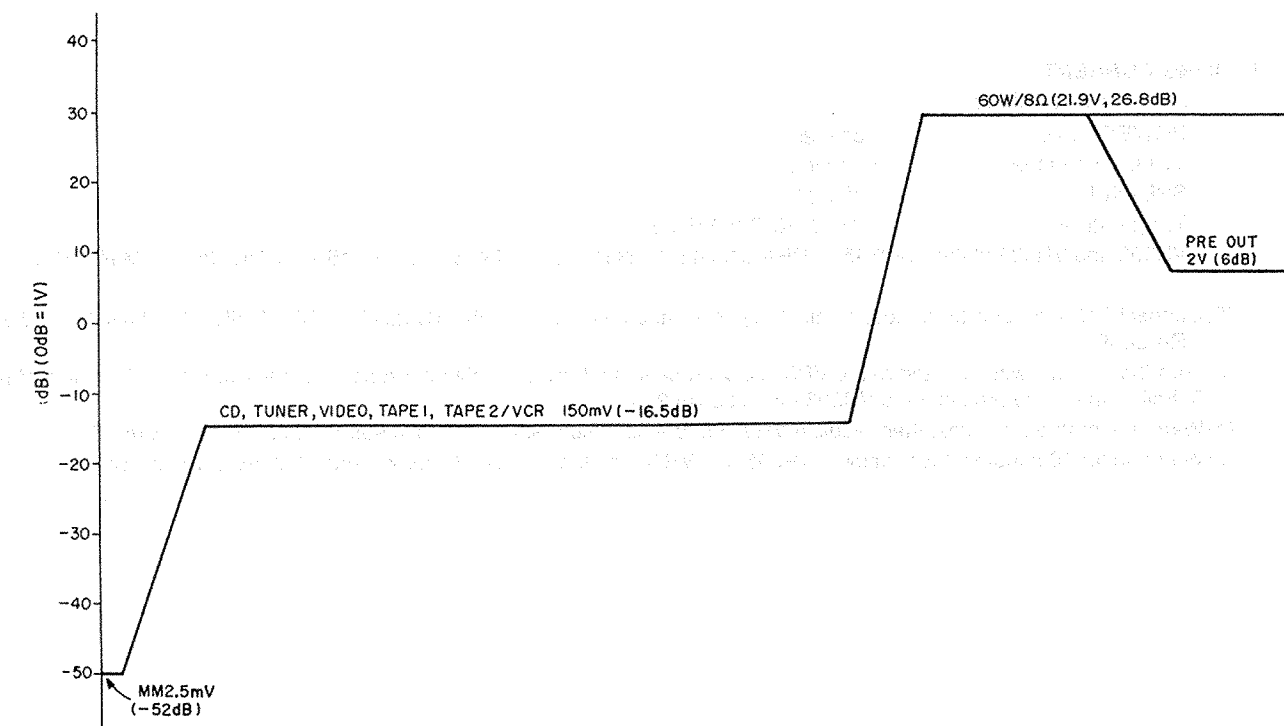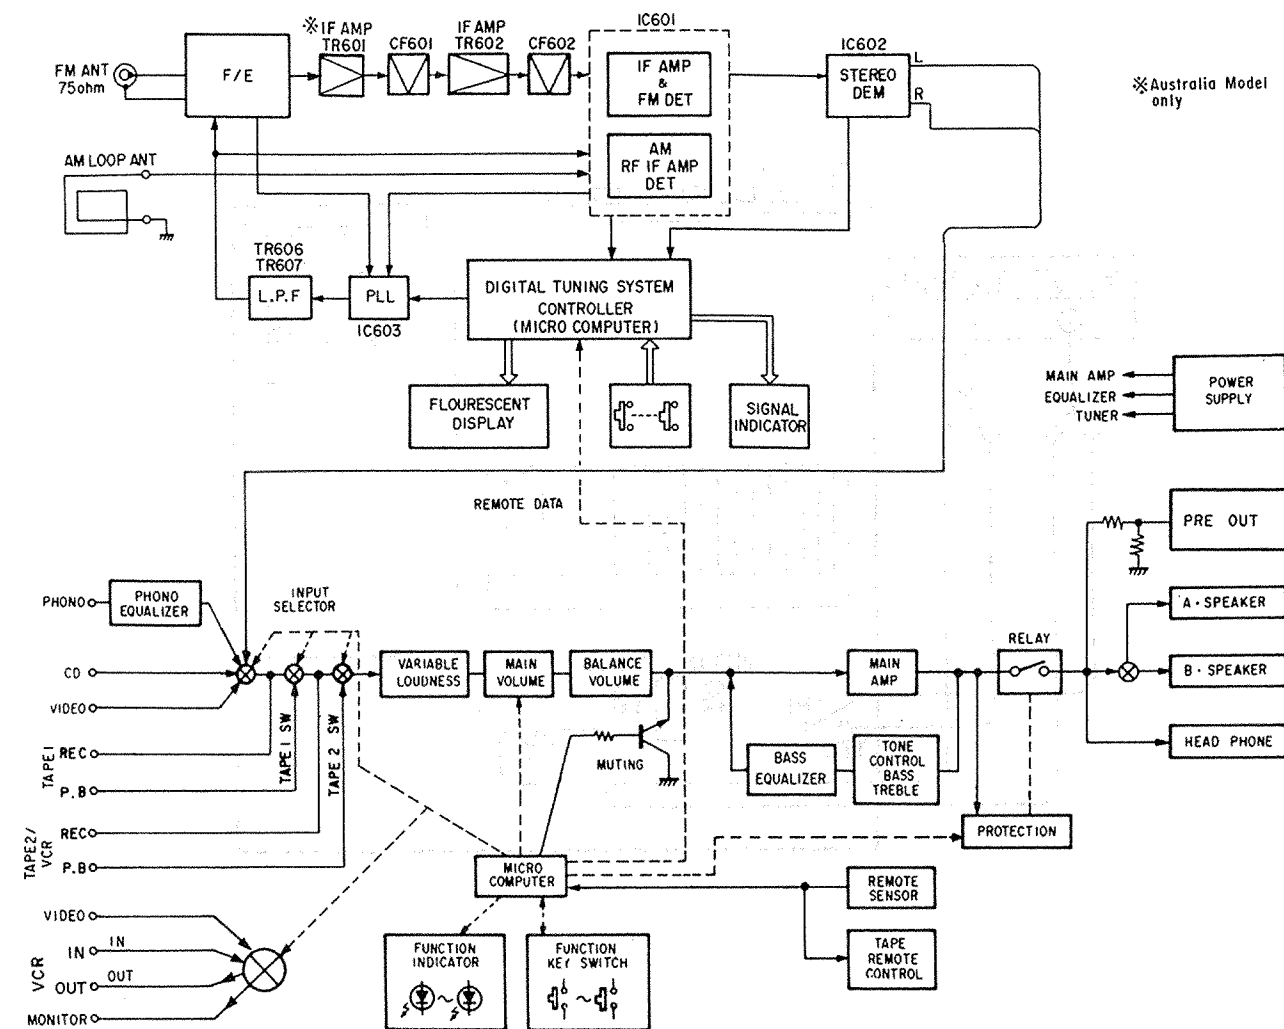

BLOCK/LEVEL DIAGRAM (DRA-345R)

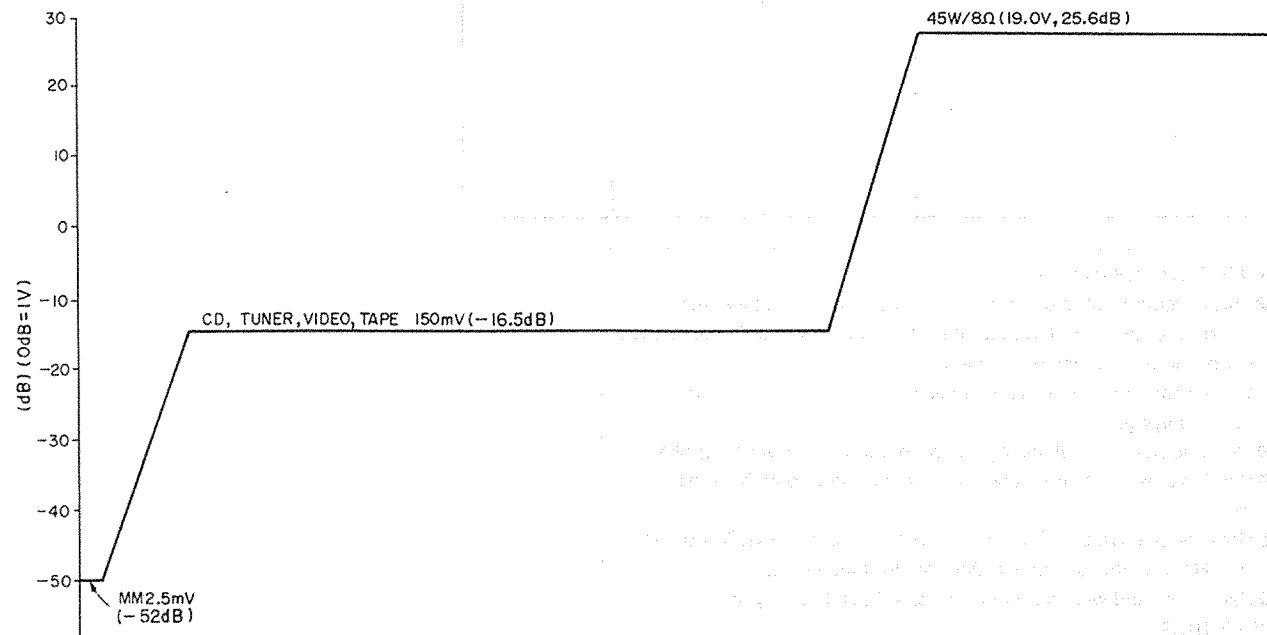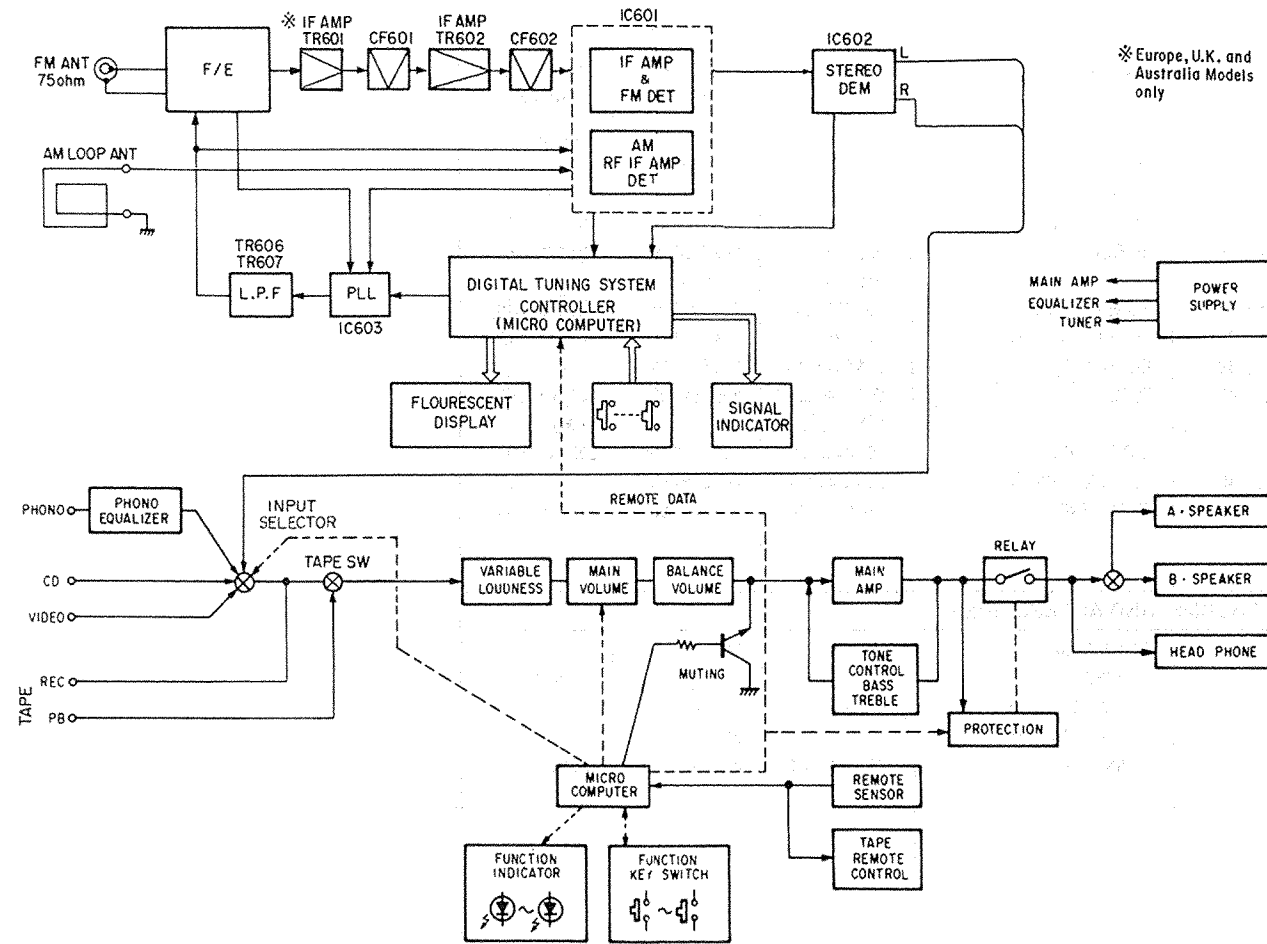

PARTS LIST OF EXPLODED VIEW (DRA-545R)

Please refer to ADDENDUM LIST for Note marks in Parts No.

Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	Note	MAIN UNIT		1
-1-1		MAIN UNIT		
1-2		POWER SW. UNIT		
1-4		SP SW. UNIT		
1-5		H/P UNIT		
2	Note	M-CON UNIT		1
3	Note	TUNER UNIT		1
4	1U-2348A	VIDEO UNIT		1
5	1U-2486B	VOLUME UNIT		1
6	Note	REAR PANEL		1
7	411 0855 219	SIDE CHASSIS		1
8	445 0056 008	CORD BUSH		1
9	Note	AC CORD		1
10	146 0925 009	ANT. HOLDER		1
11	Note	POWER TRANS		1
12	204 8354 004	HEAD PHONE JACK		1
13	212 1045 007	2P PUSH SWITCH(SP)		1
14	212 1074 007	1P PUSH SWITCH		1
15	146 1425 304	INNER PANEL ASS'Y		1
16				
17	113 1159 209	PUSH BUTTON (TACT SW)		1
18	113 1158 006	PUSH BUTTON (KAKU)		3
19	212 4388 907	TACT SWITCH		20
20	212 1075 006	POWER SWITCH		1
21	393 4043 004	FLD (FIP10TM7)	SBX1610-52	1
22	499 0150 008	REMOTE SENSOR		1
23	414 0592 005	SHIELD PLATE		1
24	461 0501 005	RUBBER SHEET		3
25	412 3048 107	VOL. BRACKET		1
26	414 0580 004	SHIELD PLATE		1
27	412 3433 000	BRACKET (TUNER)		1
28	112 0647 009	VOLUME KNOB		1
29	112 6685 100	KNOB (MARU)		4
30	Note	FRONT PANEL ASS'Y		1
31	113 1185 042	POWER BUTTON ASS'Y		1
32	105 1010 200	BOTTOM COVER		1
33	104 0194 001	FOOT ASS'Y		4
34	102 0520 008	TOP COVER		1
35	204 8309 004	4P PIN JACK(C-GND)		1
36	122 0146 015	HIMERON SHEET		1
37				
38	411 1141 100	TRANS CHASSIS		1
39	Note	RELAY(TV-5)		1
40	214 9003 005	RELAY		1
41	Note	FUSE		1
42	204 8260 004	MINI JACK		1
43	Note	ANT TERMINAL		1
44	205 0472 013	8P SP TERMINAL		1
45	Note	AC OUTLET (2P)		1
46	204 8278 009	6P PIN JACK (S-GND)		1
47	204 8266 008	4P PIN JACK (S-GND)		1
48	204 8278 009	6P PIN JACK (S-GND)		1
49	Note	FRONT END		1
50	412 3047 001	RADIATOR BRACKET		2
51	417 0400 028	POWER RADIATOR		1
52	254 4374 708	8200µF Electrolytic Cap	C503,504	2
53	273 0389 002	TRANSISTOR	TR323,324	2
		2SC3855(O/P/Y)(Z)		
54	271 0240 006	TRANSISTOR	TR321,322	2
		2SA1491(O/P/Y)(Z)		
55	274 0136 012	TRANSISTOR 2SD1913(R/S)	TR413	1
56	272 0093 010	TRANSISTOR 2SD1274(R/S)	TR417	1
57	415 0234 007	INSULATING SHEET		4
58	211 0586 001	VARIABLE 100kohm	MAIN Vol.	1

Ref. No.	Part No.	Part Name	Remarks	Q'ty
59	211 0665 003	VARIABLE	VR201,301-303	1
60	412 3432 001	RADIATOR BRACKET		1
SCREWS AND WASHERS				
201	473 8007 003	CUP SCREW 3x12		4
202	473 8007 025	CUP SCREW 3x8		4
203	473 7508 017	TAPPING SCREW 3x10(P)	Black	13
204	473 7002 018	TAPPING SCREW 3x8(S)		28
205	473 7015 018	TAPPING SCREW 3x8(S)	Black	11
206	473 7006 027	TAPPING SCREW 3x10(S)	Black	1
207	477 0263 005	3P SWELLING SCREW	Black	4
208	477 0064 107	FIXING SCREW		16
208	477 0064 107	FIXING SCREW		14
209	473 7004 016	TAPPING SCREW 4x10		4
210				
211	477 0231 024	WASHER		4
212	477 0224 031	SP WASHER		3
PACKING AND ACCESSORIES (not included EXPLODED VIEW)				
	505 8006 019	ENVELOPE		1
	511 2375 204	INST. MANUAL		1
	Note	INST. MANUAL		1
	Note	CORRECTION SHEET		1
	Note	DAI WARRANTY HOME		1
	Note	DCI WARRANTY HOME		1
	231 1129 005	LOOP ANTENNA		1
	Note	FM ANT ASS'Y		1
	499 0165 103	REMOTE CONTROL UNIT	RC-129	1
	505 9102 006	POLY COVER		1
	504 9102 003	STYRENE PAPER		1
	504 0092 060	STYRENE PAPER		1
	503 1041 004	CUSHION		2
	501 1448 054	CARTON CASE		1

ADDENDUM LIST (DRA-545R)

Ref. No.	Parts Name And Descriptions	Parts No.		
		U.S.A. (Black)	Canada (Black)	Australia (Black)
1	MAIN UNIT	1U-2345B	1U-2345B	1U-2345D
2	M-CON UNIT	1U-2485B	1U-2485B	1U-2485F
3	TUNER UNIT	1U-2347C	1U-2347C	1U-2347D
6	REAR PANEL	105 1054 101	105 1054 101	105 1054 130
9	AC CORD	206 2060 002	206 2060 002	206 2025 005
		(Polarized)	(Polarized)	
11	POWER TRANS	233 5829 019	233 5829 019	233 5831 010
30	FRONT PANEL ASS'Y	144 2241 109	144 2241 109	144 2241 112
39	RELAY(TV-5)	214 0142 004	214 0142 004	—
41	FUSE	206 1046 027	206 1046 027	206 1015 058
		(5A)	(5A)	(1.6A)
43	ANT TERMINAL	205 0432 008	205 0432 008	205 0433 007
45	AC OUTLET (2P)	203 3941 008	203 3941 008	—
59	FRONT END	216 0064 007	216 0064 007	216 0065 006
PACKING AND ACCESSORIES				
	INST. MANUAL	—	511 2397 101	—
	CORRECTION SHEET	—	—	511 2411 003
	DAI WARRANTY HOME	515 0418 505	—	—
	DCI WARRANTY HOME	—	515 0569 001	—
	FM ANT. ASS'Y	395 0019 009	395 0019 009	395 0021 000

NOTE FOR PARTS LIST


- Part indicated with the mark "◎" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)
- Parts indicated with the mark "◆" is substitute in Japan.


WARNING

Parts marked with this symbol have critical characteristics.

Use ONLY replacement parts recommended by the manufacturer.

EXPLODED VIEW OF CHASSIS AND CABINET (DRA-545R)

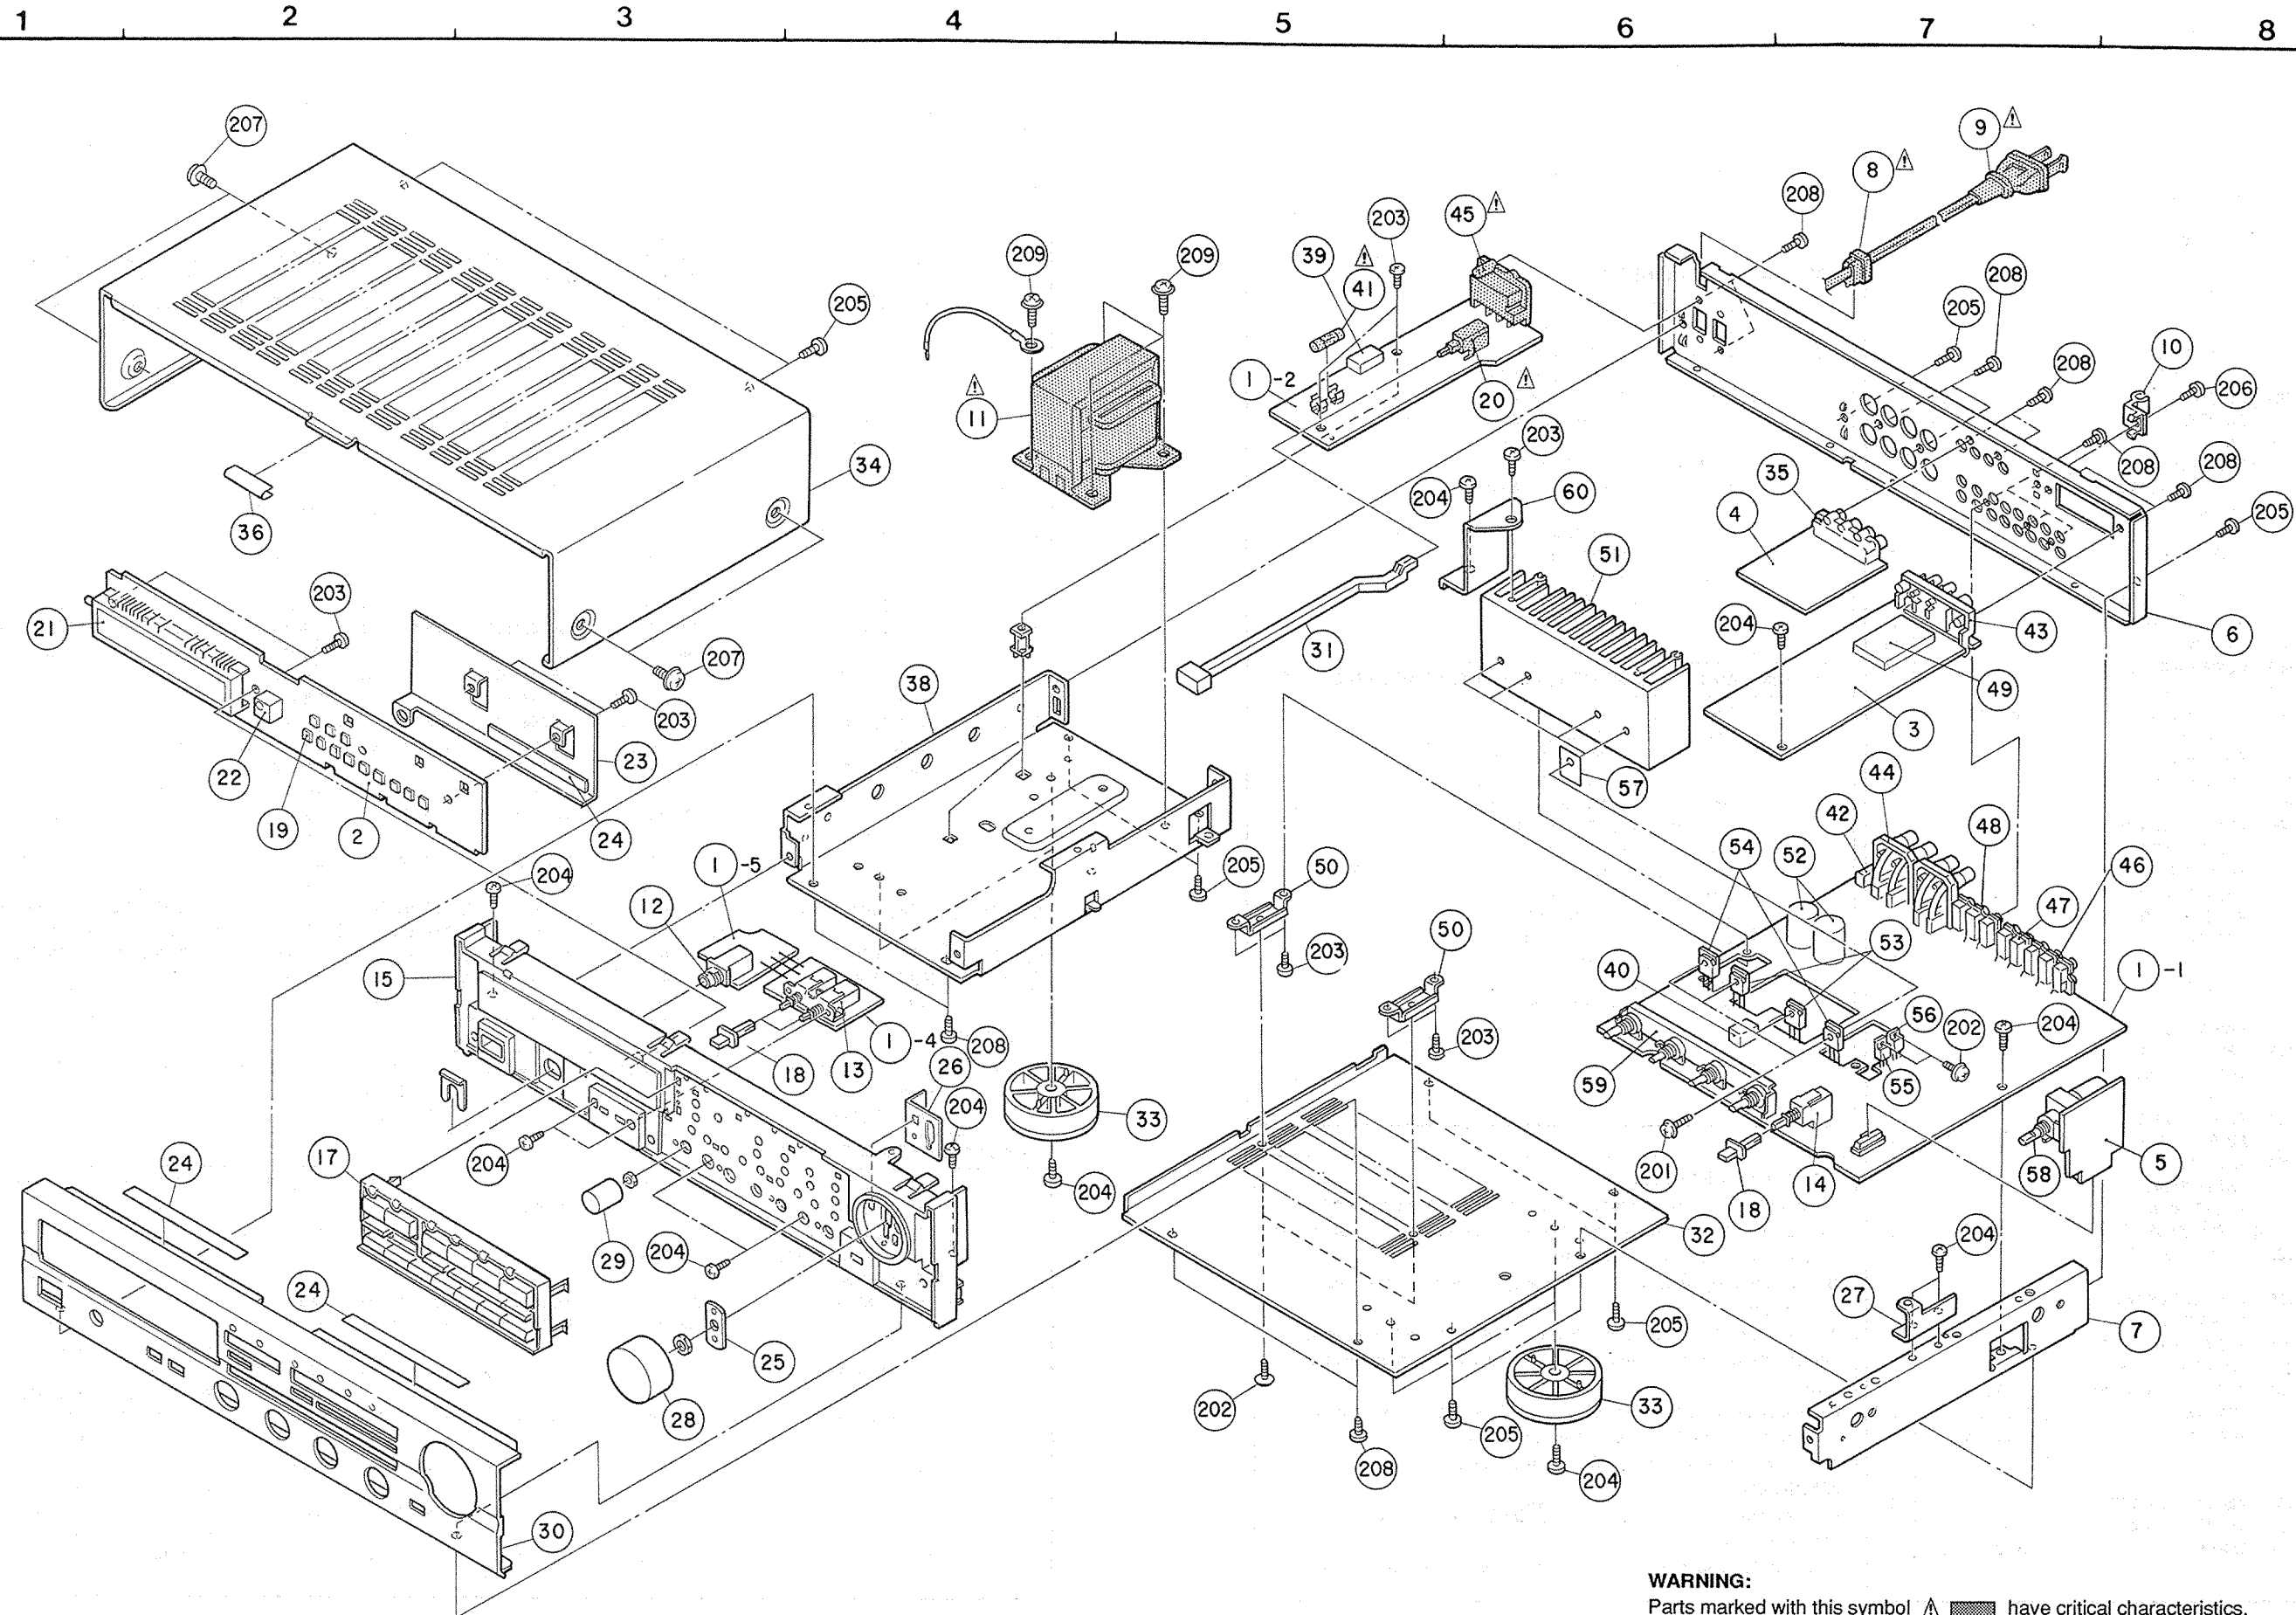

WARNING:
 Parts marked with this symbol  have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.


PARTS LIST OF EXPLODED VIEW (DRA-345R)

Please refer to ADDENDUM LIST for Note marks in Parts No.

Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	Note	MAIN UNIT		1
1-1	—	MAIN UNIT		
1-2	—	POWER SW. UNIT		
1-3	—	VOLUME UNIT		
1-4	—	SP SW. UNIT		
1-5	—	H/P UNIT		
1-6	—	SLIDE SW. UNIT		
2	Note	M-CON UNIT		1
3	Note	TUNER UNIT		1
4	—	—		
5	—	—		
6	Note	REAR PANEL		
7	411 0855 222	SIDE CHASSIS		1
8	445 0056 008	CORD BUSH		1
9	Note	AC CORD		1
10	146 0925 009	ANT. HOLDER		1
11	Note	POWER TRANS		1
12	Note	HEAD PHONE JACK		1
13	212 1045 007	2P PUSH SWITCH(SP)		1
14	—	—		
15	Note	INNER PANEL ASS'Y		1
16	—	—		
17	Note	PUSH BUTTON (TACT SW)		1
18	Note	PUSH BUTTON (KAKU)		2
19	212 4388 907	TACT SWITCH		19
20	212 1075 006	POWER SWITCH		1
21	393 4043 004	FLD (FIP10TM7)	SBX1610-52	1
22	499 0150 008	REMOTE SENSOR		1
23	414 0592 005	SHIELD PLATE		1
24	461 0501 005	RUBBER SHEET		3
25	412 3048 107	VOL. BRACKET		1
26	414 0580 004	SHIELD PLATE		1
27	412 3433 000	BRACKET (TUNER)		1
28	Note	VOLUME KNOB		1
29	Note	KNOB (MARU)		4
30	Note	FRONT PANEL ASS'Y		1
31	Note	POWER BUTTON ASS'Y		1
32	Note	BOTTOM COVER		1
33	Note	FOOT ASS'Y		4
34	Note	TOP COVER		1
35	—	—		
36	122 0146 015	HIMERON SHEET		1
37	461 0397 073	SPACER RUBBER		1
38	411 1141 100	TRANS CHASSIS		1
39	—	—		
40	214 0128 002	RELAY (DH24D2)		1
41	Note	FUSE		1
42	204 8260 004	MINI JACK		1
43	Note	ANT TERMINAL		1
44	Note	8P SP TERMINAL		1
45	Note	AC OUTLET(2P)		1
46	204 8278 009	6P PIN JACK (S-GND)		1
47	—	—		
48	204 2866 008	4P PIN JACK(S-GND)		1
49	Note	FRONT END		1
50	412 3047 001	RADIATOR BRACKET		2
51	417 0400 002	POWER RADIATOR		1
52	254 4355 002	6800µF Electrolytic Cap	C503,504	2
53	Note	TRANSISTOR	TR323,324	2
54	Note	TRANSISTOR	TR321,322	2
55	—	—		
56	—	—		
57	415 0234 007	INSULATING SHEET		4
58	211 0586 001	VARIABLE 100kohm	Main Vol	1
59	211 0665 003	VARIABLE	VR201,301-303	1

Ref. No.	Part No.	Part Name	Remarks	Q'ty
60	412 3434 009	RADIATOR BRACKET 335		1
61	Note	FUSE		1
62	Note	AC OUTLET		1
63	Note	VOLTAGE SEL. SWITCH		1
64	Note	SLIDE SWITCH		1
SCREWS AND WASHERS				
201	473 8007 003	CUP SCREW 3x12		4
202	473 8007 025	CUP SCREW 3x8		2
203	473 7508 017	TAPPING SCREW 3x10(P)	Black	12
204	473 7002 018	TAPPING SCREW 3x8(S)		31
205	473 7015 018	TAPPING SCREW 3x8(S)	Black	11
206	473 7006 027	TAPPING SCREW 3x10(S)	Black	1
207	Note	3P SWELLING SCREW		4
208	477 0064 107	FIXING SCREW		15
209	473 7004 016	TAPPING SCREW 4x6(S)		4
210	—	—		
211	473 7002 034	TAPPING SCREW 3x6(S)	Black	12
212	471 3201 024	SCREW 2.6x4(S)		1
213	477 0231 024	WASHER 4W(S)		4
214	477 0224 031	SP WASHER		3
PACKING AND ACCESSORIES (not included EXPLODED VIEW)				
	505 8006 019	ENVELOPE		1
	Note	INST. MANUAL		1
	Note	CORRECTION SHEET		1
	Note	DAI WARRANTY HOME 5		1
	Note	DCI WARRANTY HOME		1
	231 1129 005	LOOP ANTENNA		1
	Note	FM ANT ASS'Y		1
	499 0196 004	REMOTE CONTROL UNIT	RC-129A	1
	Note	POLY COVER		1
	Note	STYRENE PAPER		1
	Note	STYRENE PAPER		1
	Note	CUSHION		2
	Note	PAD		1
	Note	CARTON CASE		1


NOTO FOR PARTS LIST



- Part indicated with the mark "◎" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
 - When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
 - Ordering part without stating its part number can not be supplied.
 - Part indicated with the mark "★" is not illustrated in the exploded view.
 - Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)
 - Parts indicated with the mark "◆" is substitute in Japan.
- WARNING**
Parts marked with this symbol  have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

ADDENDUM LIST (DRA-345R)

Ref. No.	Parts Name And Descriptions	Parts No.						
		U.S.A. (Black)	Canada (Black)	Multi-Voltage (Black)	Australia (Black)	Europe (Black)	Europe (Gold)	U.K. (Black)
1	MAIN UNIT	1U-2344A	1U-2344A	1U-2344E	1U-2344D	1U-2498A	1U-2498B	1U-2498C
2	M-CON UNIT	1U-2485C	1U-2485C	1U-2485E	1U-2485D	1U-2499A	1U-2499A	1U-2499A
3	TUNER UNIT	1U-2347C	1U-2347C	1U-2347E	1U-2347D	1U-2500A	1U-2500A	1U-2500A
6	REAR PANEL	105 1011 021	105 1011 021	105 1011 050	105 1011 047	105 1011 063	105 1011 063	105 1011 076
9	AC CORD	206 2060 002 (Polarized)	206 2060 002 (Polarized)	200 6031 026	206 2025 005	206 2073 002	206 2073 002	206 2074 108
11	POWER TRANS	233 5825 013	233 5825 013	233 5828 010	233 5827 011	233 5991 002	233 5991 002	233 5827 011
12	HEAD PHONE JACK	204 8354 004	204 8354 004	204 8354 004	204 8354 004	204 8354 004	204 8355 003	204 8354 004
15	INNER PANEL ASS'Y	146 1423 209	146 1423 209	146 1423 238	146 1423 238	146 1423 212	146 1423 225	146 1423 212
17	PUSH BUTTON (TACT SW.)	113 1559 212	113 1559 212	113 1559 241	113 1559 241	113 1559 225	113 1559 238	113 1559 225
18	PUSH BUTTON(KAKU)	113 1158 006	113 1158 006	113 1158 006	113 1158 006	113 1558 019	113 1558 022	113 1558 019
28	VOLUME KNOB	112 0647 009	112 0647 009	112 0647 009	112 0647 009	112 0647 009	112 0647 038	112 0647 009
29	KNOB(MARU)	112 0685 100	112 0685 100	112 0685 100	112 0685 100	112 0685 100	112 0685 115	112 0685 100
30	FRONT PANEL ASS'Y	144 2239 001	144 2239 001	144 2239 001	144 2239 030	144 2239 030	144 2239 056	144 2239 030
31	POWER BUTTON ASS'Y	113 1185 042	113 1185 042	113 1185 042	113 1185 042	113 1185 042	113 1185 039	113 1185 042
32	BOTTOM COVER	105 1010 200	105 1010 200	105 1010 200	105 1010 200	105 1010 213	105 1010 213	105 1010 213
33	FOOT ASS'Y	104 0194 108	104 0194 108	104 0194 108	104 0194 108	104 0228 207	104 0228 207	104 0228 207
34	TOP COVER	102 0426 168	102 0426 168	102 0426 168	102 0426 168	102 0426 126	102 0426 139	102 0426 126
41	FUSE (F-501)	206 1039 092 (4A)	206 1039 092 (4A)	206 1061 031 (4A/250V)	206 1015 016 (1.25A)	206 1015 058 (1.6A)	206 1015 058 (1.6A)	206 1015 016 (1.25A)
43	ANT TERMINAL	205 0432 008	205 0432 008	205 0432 008	205 0433 007	205 0433 007	205 0433 007	205 0433 007
44	8P SP. TERMINAL	205 0472 013	205 0472 013	205 0472 013	205 0472 013	205 0484 001	205 0484 001	205 0472 013
45	AC OUTLET (2P)	203 3941 008	203 3941 008	203 3941 008	—	—	—	—
49	FRONT END	216 0064 007	216 0064 007	216 0064 007	216 0065 006	216 0065 006	216 0065 006	216 0065 006
53	TRANSISTOR (TR323,324)	273 0387 004	273 0387 004	273 0387 004	273 0386 005	273 0386 005	273 0386 005	273 0386 005
		2SC3853 (O/P/Y)(Z)	2SC3853 (O/P/Y)(Z)	2SC3853 (O/P/Y)(Z)	2SC3854 (O/P/Y)(Z)	2SC3854 (O/P/Y)(Z)	2SC3854 (O/P/Y)(Z)	2SC3854 (O/P/Y)(Z)
54	TRANSISTOR (TR321,322)	271 0239 004	271 0239 004	271 0239 004	271 0237 006	271 0237 006	271 0237 006	271 0237 006
		2SA1489 (O/P/Y)(Z)	2SA1489 (O/P/Y)(Z)	2SA1489 (O/P/Y)(Z)	2SA1490 (O/P/Y)(Z)	2SA1490 (O/P/Y)(Z)	2SA1490 (O/P/Y)(Z)	2SA1490 (O/P/Y)(Z)
61	FUSE(F-502)	—	—	206 1061 002 (2A/250V)	—	206 1015 029 (1A)	206 1015 029 (1A)	—
62	AC OUTLET	—	—	—	—	203 3942 007	203 3942 007	—
63	VOLTAGE SEL. SWITCH	—	—	212 9555 007	—	—	—	—
64	SLIDE SWITCH	—	—	212 4293 005	—	—	—	—
SCREWS								
207	3P SWELLING SCREW	477 0236 005	477 0236 005	477 0236 005	477 0236 005	477 0236 005	477 0236 018	477 0236 005
213	SCREW 2.6x4	—	—	471 3201 024	—	—	—	—
214	TAPPING SCREW 3x6	—	—	473 7002 034	—	—	—	—
PACKING AND ACCESSORIES								
	INST. MANUAL	511 2375 204	511 2375 204	511 2375 204	511 2375 204	511 2395 006	511 2395 006	511 2375 204
	INST. MANUAL	—	511 2397 101	—	—	—	—	—
	CORRECTION SHEET	—	—	—	511 2411 003	—	—	511 2411 003
	DAI WARRANTY HOME	515 0418 505	—	—	—	—	—	—
	DCI WARRANTY HOME	—	515 0569 001	—	—	—	—	—
	FM ANT. ASS'Y	395 0019 009	395 0019 009	395 0019 009	395 0021 000	395 0021 000	395 0021 000	395 0021 000
	POLY COVER	505 9102 006	505 9102 006	505 9102 006	505 9102 006	505 0178 000	505 0178 000	515 0178 000
	STYRENE PAPER	504 9102 003	504 9102 003	504 9102 003	504 9102 003	◆505 9102 006	◆505 9102 006	◆505 9102 006
	STYRENE PAPER	504 0992 060	504 0992 060	504 0992 060	504 0992 060	◆504 9102 003	◆504 9102 003	◆504 9102 003
	STYRENE PAPER	504 0992 060	504 0992 060	504 0992 060	504 0992 060	◆504 0992 060	◆504 0992 060	◆504 0992 060
	CUSHION	503 0777 104	503 0777 104	503 0777 104	503 0777 104	503 0939 007	503 0939 007	504 0125 005
	PAD	502 0741 043	502 0741 043	504 0741 043	502 0741 043	◆503 0777 104	◆503 0777 104	◆503 0777 104
	CARON CASE	501 1448 041	501 1448 041	501 1448 041	501 1448 041	◆502 0741 043	◆502 0741 043	◆502 0741 043

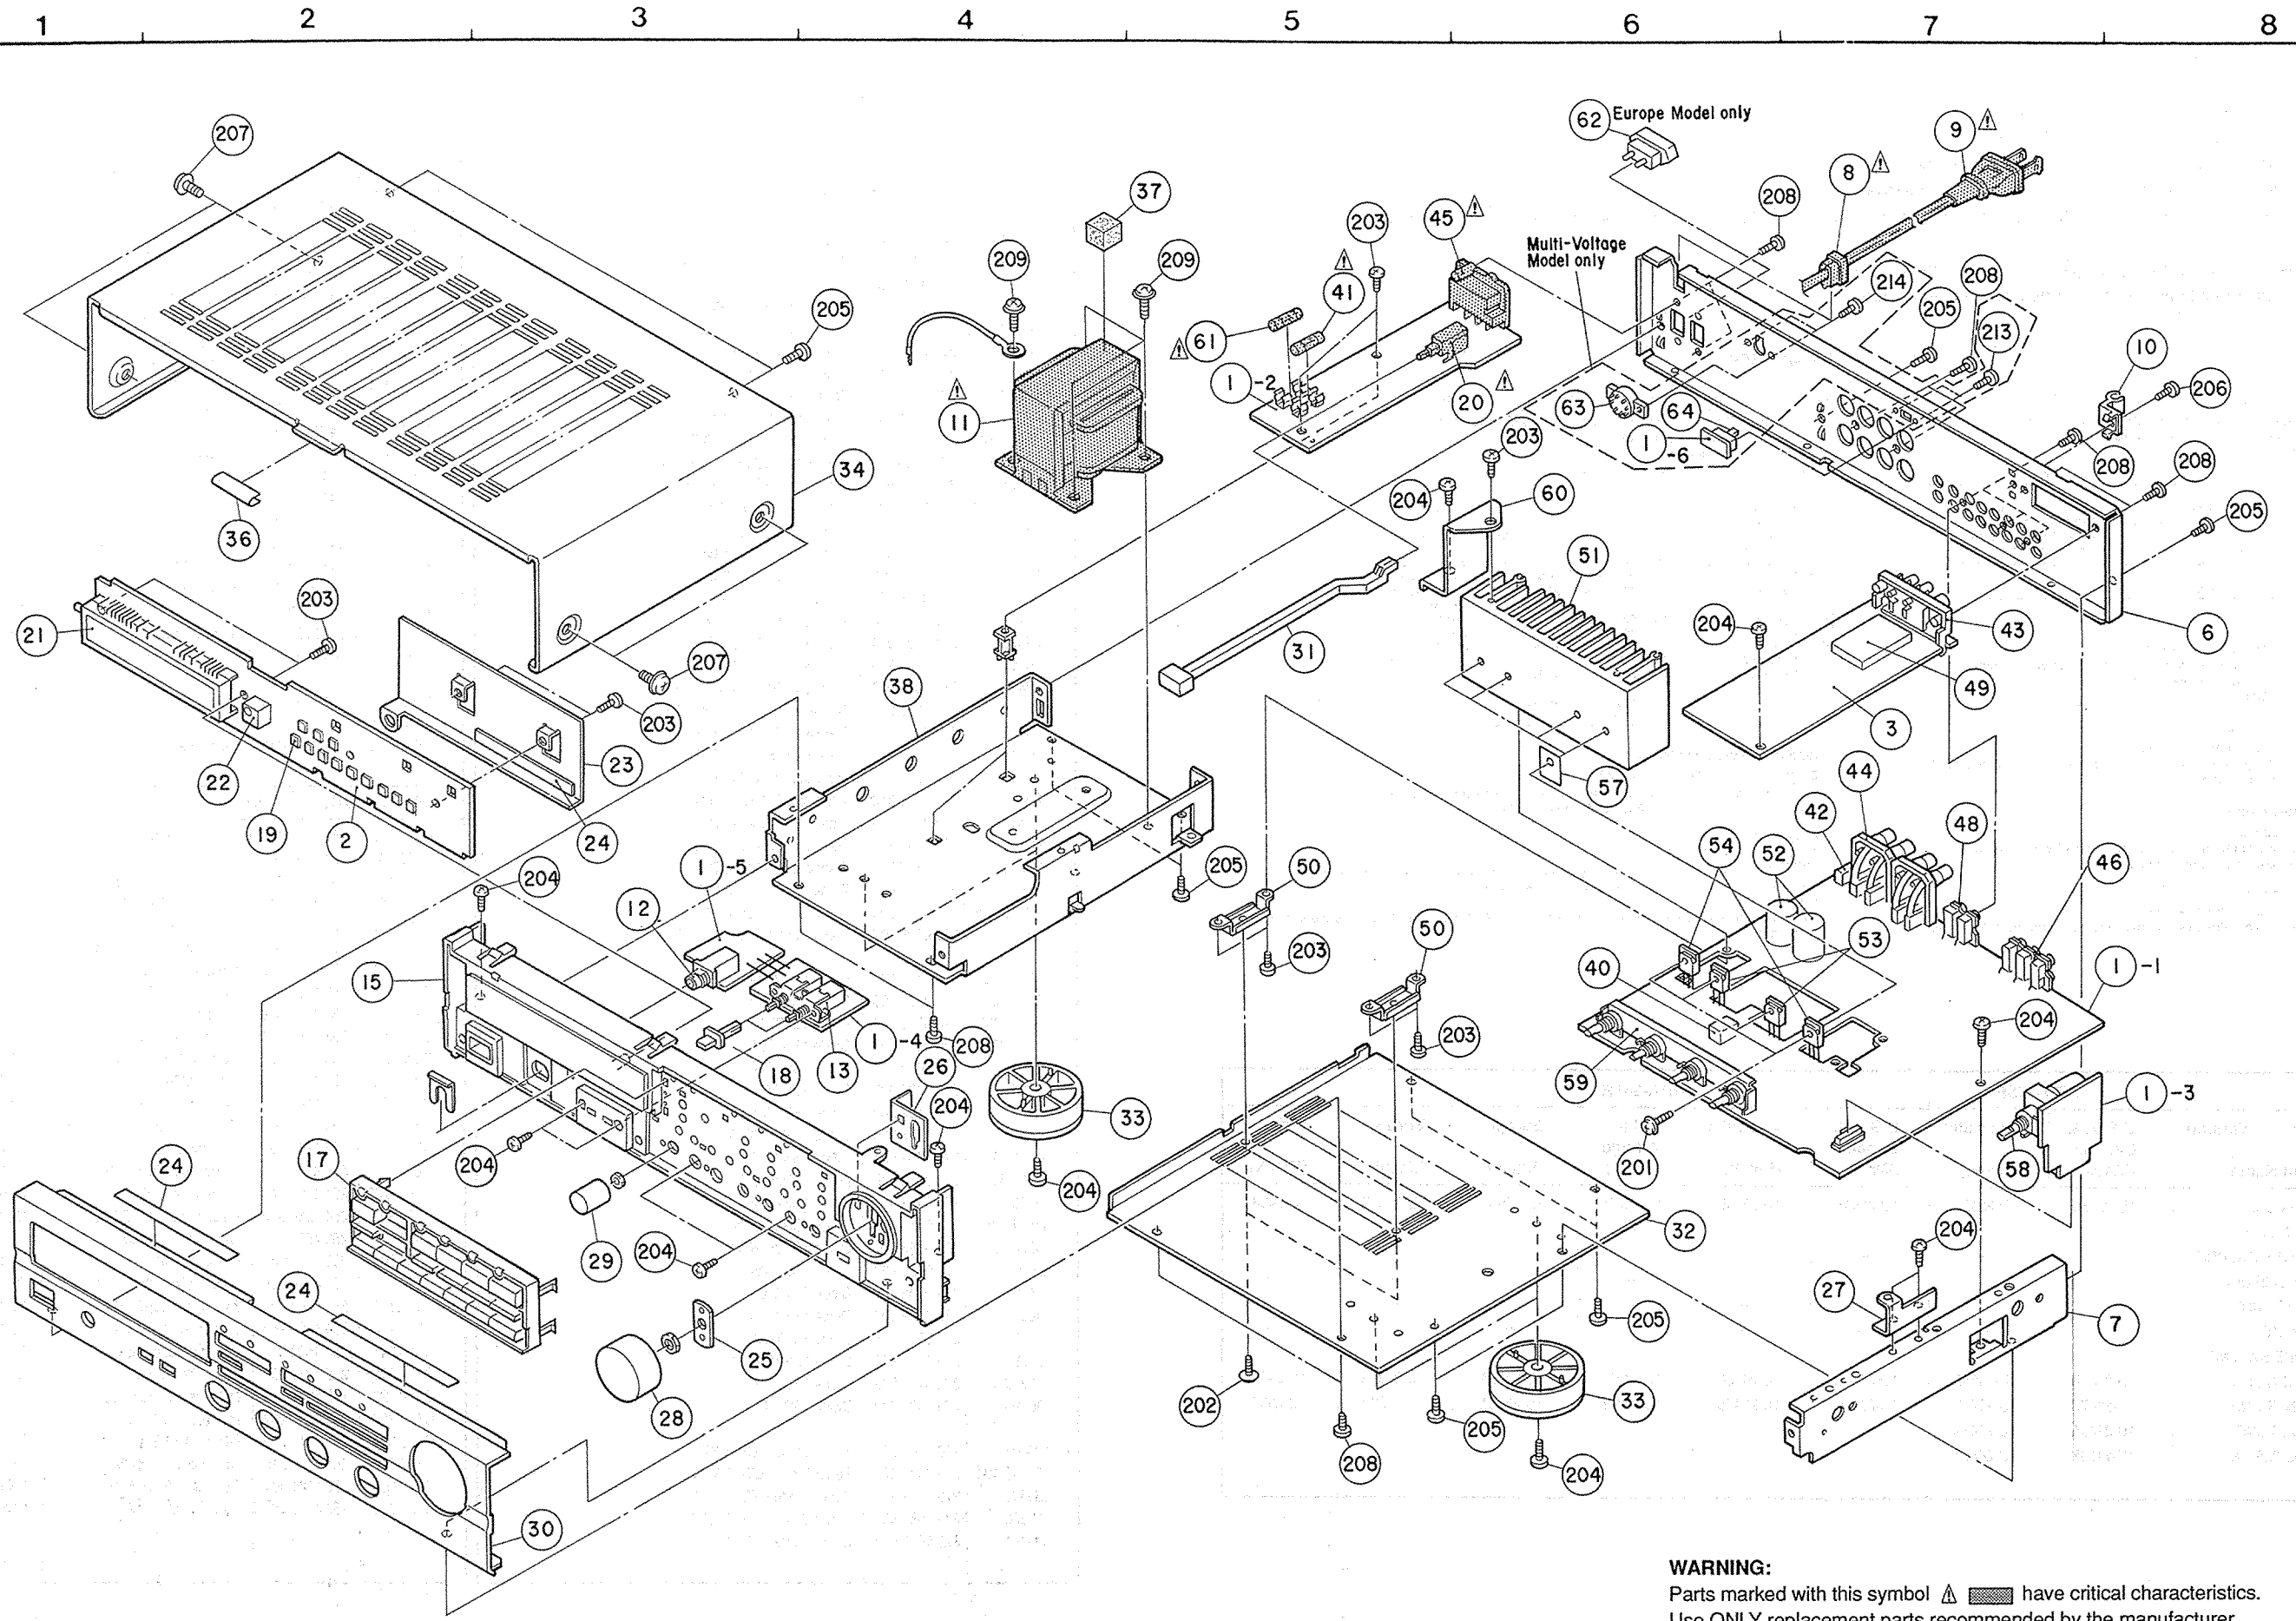EXPLODED VIEW OF CHASSIS AND CABINET (DRA-345R)



WARNING:
 Parts marked with this symbol   have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

PRINTED WIRING BOARD PARTS LIST
1U-2345B MAIN UNIT (DRA-545R) for U.S.A. and Canada Black Version

NOTE FOR PARTS LIST

- Part indicated with the mark "⊙" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.
- Not including Carbon Film ±5%, 1/4W Type in the P.W.Board parts list. (Refer to the Schematic Diagram for those parts.)

WARNING:

Parts marked with this symbol  have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

● Resistors

Ex.: RN 14K 2E 182 G FR

Type	Shape and performance	Power	Resist-ance	Allowable error	Others
RD : Carbon RC : Composition RS : Metal oxide film RW : Winding RN : Metal film RK : Metal mixture	2B : 1/8W 2E : 1/4W 2H : 1/2W 3A : 1W 3D : 2W 3F : 3W 3H : 5W	F : ±1% G : ±2% J : ±5% K : ±10% M : ±20%	P : Pulse-resistant type NL : Low noise type NB : Non-burning type FR : Fuse-resistor F : Lead wire forming		

* Resistance

- $\overset{1}{\text{---}} \overset{8}{\text{---}} \overset{2}{\text{---}}$ ⇒ 1800 ohm = 1.8 kohm
Indicates number of zeros after effective number.
2-digit effective number.
• Units: ohm
- $\overset{1}{\text{---}} \overset{R}{\text{---}} \overset{2}{\text{---}}$ ⇒ 1.2 ohm
1-digit effective number.
2-digit effective number, decimal point indicated by R.
• Units: ohm
- * Capacity (electrolyte only)
- $\overset{2}{\text{---}} \overset{2}{\text{---}} \overset{2}{\text{---}}$ ⇒ 2200µF
Indicates number of zeros after effective number.
2-digit effective number.
• Units: µF
- $\overset{2}{\text{---}} \overset{R}{\text{---}} \overset{2}{\text{---}}$ ⇒ 2.2µF
1-digit effective number.
2-digit effective number, decimal point indicated by R.
• Units: µF

● Capacitors

Ex.: CE 04W 1H 2R2 M BP

Type	Shape and performance	Dielectric strength	Capacity	Allowable error	Others
CE : Aluminum foil electrolytic CA : Aluminum solid electrolytic CS : Tantalum electrolytic CO : Film CK : Ceramic CC : Ceramic CP : Oil CM : Mica CF : Metallized CH : Metallized	0J : 6.3V 1A : 10V 1C : 16V 1E : 25V 1V : 35V 1H : 50V 2A : 100V 2B : 125V 2C : 160V 2D : 200V 2E : 250V 2H : 500V 2J : 630V	F : ±1% G : ±2% J : ±5% K : ±10% M : ±20% Z : +80% -20% P : +100% -0% C : ±0.25pF D : ±0.5pF = : Others	HS : High stability type BP : Non-polar type HR : Ripple-resistant type DL : For charge and discharge HF : For assuring high frequency U : UL part C : CSA part W : UL-CSA type F : Lead wire forming		

* Capacity (except electrolyte)

- $\overset{2}{\text{---}} \overset{2}{\text{---}} \overset{2}{\text{---}}$ ⇒ 2200µF = 0.0022µF
(More than 2) — Indicates number of zeros after effective number.
2-digit effective number.
• Units: µF
- $\overset{2}{\text{---}} \overset{2}{\text{---}} \overset{1}{\text{---}}$ ⇒ 220PF
(0 or 1) — Indicates number of zeros after effective number.
2-digit effective number.
• Units: PF
• When the dielectric strength is indicated in AC, "AC" is included after the dielectric strength value.

Ref. No.	Version Unit Name	DRA-545R		DRA-345R					
		U.S.A. & Canada (Black)	Australia (Black)	U.S.A. & Canada (Black)	Australia (Black)	Multi-Voltage (Black)	Europe (Black)	Europe (Gold)	U.K. (Black)
1	MAIN UNIT	1U-2345B	1U-2345D	1U-2344A	1U-2344D	1U-2344E	1U-2498A	1U-2498B	1U-2498C
1-1	MAIN UNIT	—	—	—	—	—	—	—	—
1-2	POWER SW. UNIT	—	—	—	—	—	—	—	—
1-3	VOLUME UNIT	—	—	—	—	—	—	—	—
1-4	SP SW. UNIT	—	—	—	—	—	—	—	—
1-5	H/P UNIT	—	—	—	—	—	—	—	—
1-6	SLIDE SW. UNIT	—	—	—	—	—	—	—	—
2	M-CON UNIT	1U-2485B	1U-2485F	1U-2485C	1U-2485D	1U-2485E	1U-2499A	1U-2499A	1U-2499A
3	TUNER UNIT	1U-2347C	1U-2347D	1U-2347C	1U-2347D	1U-2347E	1U-2500A	1U-2500A	1U-2500A
4	VIDEO UNIT	1U-2348A	1U-2348A	—	—	—	—	—	—
5	VOLUME UNIT	1U-2486B	1U-2486B	—	—	—	—	—	—

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC101	265 0030 004	IC NJM4558DD	
IC201	262 0699 006	IC TC9164N	
IC251	263 0476 002	IC LB1639	
IC605	263 0793 002	IC NJM7806FA(S)	
TR201	269 0107 900	Transistor RN1241(A/B)	
TR202,203	269 0025 901	Transistor RN1202(10K-10K)	
TR301,302	269 0107 900	Transistor RN1241(A/B)	
TR303-306	271 0094 919	Transistor 2SA970(BL)	
TR307-312	273 0235 923	Transistor 2SC1841-T(E/F)	
TR313,314	271 0131 924	Transistor 2SA988-T(F/E)	
TR315,316	273 0198 918	Transistor 2SC1815(BL)	
TR317,318	272 0107 906	Transistor 2SB1328(P)	
TR319,320	274 0151 000	Transistor 2SD2004(P)	
TR321,322	271 0240 006	Transistor 2SA1491 (O/P/Y)(Z)	
TR323,324	273 0389 002	Transistor 2SC3855 (O/P/Y)(Z)	
TR325,326	273 0235 923	Transistor 2SC1841-T(E/F)	
TR331,332	271 0131 924	Transistor 2SA988-T(F/E)	
TR401	273 0317 906	Transistor 2SC2458(BL)	
TR402	271 0191 906	Transistor 2SA1048(GR)	
TR403	273 0317 906	Transistor 2SC2458(BL)	
TR404	269 0029 907	Transistor RN1204(47K/47K)	
TR405	269 0107 900	Transistor RN1241(A/B)	
TR406	271 0131 924	Transistor 2SA988-T(F/E)	
TR407,408	273 0235 923	Transistor 2SC1841-T(E/F)	
TR411	269 0030 909	Transistor RN2204(47K/47K)	
TR412	269 0029 907	Transistor RN1204(47K/47K)	
TR413	274 0136 012	Transistor 2SD1913(R/S)	
TR415	273 0235 923	Transistor 2SC1841-T(E/F)	
TR416	271 0094 919	Transistor 2SA970(BL)	
TR417	272 0093 010	Transistor 2SB1274(R/S)	
TR419	273 0187 916	Transistor 2SC2240(BL)	
TR501	271 0131 924	Transistor 2SA988-T(F/E)	
TR502,503	273 0317 906	Transistor 2SC2458(BL)	
TR614	271 0191 906	Transistor 2SA1048(GR)	
TR615,616	273 0317 906	Transistor 2SC2458(BL)	
TR617	269 0029 907	Transistor RN1204(47K/47K)	
D209,210	276 0432 903	Diode 1SS270A	
D301,302	276 0432 903	Diode 1SS270A	
D303-306	276 0049 914	Diode 1S2076A	
D307,308	276 0432 903	Diode 1SS270A	
D401	276 0432 903	Diode 1SS270A	
D402	276 0432 903	Diode 1SS270A	
D403	276 0432 903	Diode 1SS270A	
D431	276 0553 905	Diode 1SR35-200A	
D491,492	276 0432 903	Diode 1SS270A	
D501,502	276 0553 905	Diode 1SR35-200A	
D503	276 0432 903	Diode 1SS270A	
D504,505	276 0553 905	Diode 1SR35-200A	
D506,507	276 0553 905	Diode 1SR35-200A	
D508	276 0432 903	Diode 1SS270A	
D509	276 0305 001	Diode S4VB20	
D604	276 0432 903	Diode 1SS270A	
D605	276 0049 914	Diode 1S2076A	
D606	276 0553 905	Diode 1SR35-200A	
D607,608	276 0432 903	Diode 1SS270A	
D609	276 0432 903	Diode 1SS270A	
ZD401	276 0465 925	Zener Diode HZS7B-3TD	
ZD403,404	276 0477 926	Zener Diode HZS16-3TD	
ZD501	276 0482 911	Zener Diode HZS27-2TD	
ZD502	276 0582 905	Zener Diode HZS9A2LTD	
ZD601	276 0582 905	Zener Diode HZS9A2LTD	

Ref. No.	Part No.	Part Name	Remarks
SC401	279 0016 904	Thyristor SF0R1A42	
RESISTORS GROUP (Not included Carbon Film ±5% 1/4W)			
R253-256	244 2050 933	Metallic 180ohm 1W	RS14B3A181JNBS(S)
R311-314	241 2380 963	Carbon 2.2kohm 1/4W	RD14B2E222JNBS
R341,342	241 2377 976	Carbon 130ohm 1/4W	RD14B2E131JNBS
R347,348	241 2377 905	Carbon 68ohm 1/4W	RD14B2E680JNBS
R353,354	241 2378 920	Carbon 220ohm 1/4W	RD14B2E221JNBS
R355-362	244 2043 982	Metallic 0.22ohm 1W	RS14B3AR22JNBS(S)
R367-370	241 2379 987	Carbon 1kohm 1/4W	RD14B2E102JNBS
R381,382	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E47JNBS
R383,384	241 2432 905	Carbon 470ohm 1/4W	RD14B2E471JNBS
R391,392	241 2377 976	Carbon 130ohm 1/4W	RD14B2E131JNBS
R409	244 2051 990	Metallic 4.7kohm 1W	RS14B3A472JNBS(S)
R431,432	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E47JNBS
R433	244 2052 973	Metallic 560ohm 1W	RS14B3A561JNBS(S)
R451	244 2043 908	Metallic 680ohm 1W	RS14B3A681JNBS(S)
R503	241 2387 908	Carbon 1ohm 1/4W	RD14B2E010JNBS
R504	241 2379 903	Carbon 470ohm 1/4W	RD14B2E471JNBS
R508	242 0073 000	Fixed 2.2Mohm 1/2W	RC05GF2H225K
R509	244 2043 924	Metallic 68ohm 1W	RS14B3A680JNBS(S)
R519-522	244 2043 937	Metallic 10ohm 1W	RS14B3A100JNBS(S)
R588	244 2051 961	Metallic 100ohm 1W	RS14B3A101JNBS(S)
R681	244 2051 987	Metallic 4.7ohm 1W	RS14B3A47JNBS(S)
VR201, 301-303	211 0665 003	Variable	V1604V20F---K
VR305,306	211 6064 048	SemiFixed 5kohm	V06BP502
CAPACITORS GROUP			
C101,102	253 1179 929	Ceramic 150pF/50V	CK45B1H151K
C103,104	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C105,106	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
C107,108	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C109,110	255 1209 905	Film 0.0056µF/50V	CQ93M1H562J
C111,112	253 1180 947	Ceramic 0.0015µF/50V	CK45B1H1H152K
C113,114	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C115,117	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
C121	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C201,202	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
C203,204	253 1179 990	Ceramic 560pF/50V	CK45B1H561K
C205,206	255 1216 901	Film 0.022µF/50V	CQ93M1H223J
C207-209	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
C210	253 4412 900	Ceramic 10pF/50V	CC45SL1H100D
C211	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
C271	254 4252 927	Electrolytic 47µF/10V	CE04W1A470M
C281-283	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C301,302	254 4260 922	Electrolytic 0.33µF/50V	CE04W1HR33M
C303-306	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C307,308	253 1180 921	Ceramic 0.001µF/50V	CK45B1H102K
C309,310	254 4396 906	Electrolytic 100µF/63V	CE04W1J101M(SMG)
C311,312	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
C313,314	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C315,316	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C317,318	255 1217 900	Film 0.027µF/50V	CQ93M1H273J
C319,320	256 1034 982	Metalized 0.12µF/50V	CF93A1H124J
C321,322	255 1202 902	Film 0.0015µF/50V	CQ93M1H152J
C323,324	255 1212 905	Film 0.01µF/50V	CQ93M1H103J
C327,328	253 1179 945	Ceramic 220pF/50V	CK45B1H221K
C329,330	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z
C331,332	253 4478 902	Ceramic 22pF/500V	CC45SL2H220J

1U-2345D MAIN UNIT (DRA-545R) for Australia Black Version (Same as 1U-2345B except the followings)

Ref. No.	Part No.	Part Name	Remarks
C341,342	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C343,344	253 1181 917	Ceramic 0.022μF/50V	CK45F1H223Z
C349-352	254 4263 945	Electrolytic 1μF/100V	CE04W2A010M
C361,362	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C369,370	253 4537 908	Ceramic 27pF/50V	CC45SL1H270J
C371,372	253 1179 945	Ceramic 220pF/50V	CK45B1H221K
C373,374	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C401	254 4250 945	Electrolytic 330μF/6.3V	CE04W0J331M
C403	254 4260 977	Electrolytic 4.7μF/50V	CE04W1H4R7M
C404	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C405	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C406	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C407,408	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C409,410	254 4256 907	Electrolytic 10μF/25V	CE04W1E100M
C501,502	253 1151 905	Ceramic 0.0047μF/500V	CK45E2H472P
C503,504	254 4374 708	Electrolytic 8200μF/56V	CE04W-822MC(DL)
C505	254 4263 958	Electrolytic 2.2μF/100V	CE04W2A2R2M
C506,507	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C508	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C509	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C510	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C511-514	255 1208 906	Film 0.0047μF/50V	CQ93M1H472J
C515,516	253 8014 702	Ceramic 0.01μF/125V AC	CK45F2GAC103MC
C517	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C519-522	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C523	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C643	259 0007 702	For Back up 8200μF	SB CAP-822-C
C644	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C645	254 4256 790	Electrolytic 2200μF/25V	CE04W1E222MC
C646	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C647	254 4260 951	Electrolytic 2.2μF/50V	CE04W1H2R2M
C670	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C851,852	255 1210 907	Film 0.0068μF/50V	CQ93M1H682J

OTHER PARTS GROUP

RL401	214 9003 005	Relay	
RL501	214 0142 004	Relay(TV-5)	
F501	206 1046 027	Fuse 5A	
SW501	212 1075 006	Power Switch	
	204 8260 004	Mini Jack	
	205 0472 013	8P SP Terminal	
	204 8354 004	Head Phone Jack	
	212 1045 007	2P Push Switch(SP)	
	212 1074 007	1P Push Switch	
	203 3941 008	AC Outlet (2P)	
	204 8278 009	6P Pin Jack (S-GND)	
	204 8266 008	4P Pin Jack (S-GND)	
	417 0400 028	Power Radiator	
	205 0233 032	3P EH Conn. Base	
	205 0185 054	5P Wire Holder	
	205 0185 025	2P Wire Holder	
	205 0696 080	JL Connector(BT-E)	
	205 0343 087	8P Conn.Base(KR-PH)	
	205 0375 013	11P Conn.Base(KR-PH)	
	002 0012 052	2C Ribbon Cable	
	002 0041 007	5C Ribbon Cable	
	203 4791 011	3P EH-SCN Conn. Cord	
	204 0309 015	6P EH-SCN Conn. Cord	
	203 8280 036	5P KR-DA Conn.Cord	
	203 0494 008	1P Contact Ass'y	
	203 0482 036	1P SIN Conn. Cord	
	202 0022 008	Fuse Holder	
	415 0546 054	UL Tube	
	001 0065 064	Vinyl Wire	

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
TR502.503	273 0317 906	Transistor 2SC2458(BL)	Delete
D508	276 0432 903	Diode 1SS270A	Delete
RESISTORS GROUP			
R508	242 0073 000	Fixed 2.2Mohm 1/2W	Delete
R509	244 2043 924	Metallic 68ohm 1W	Delete
R588	244 2051 961	Metallic 100ohm 1W	Delete
CAPACITORS GROUP			
C515	253 8003 713	Ceramic 0.0047μF/400V AC	Change
C516	253 8014 702	Ceramic 0.01μF/125V AC	Delete
C517	254 4254 909	Electrolytic 10μF/16V	Delete
OTHER PARTS GROUP			
RL501	214 0142 004	Relay (TV-5)	Delete
F501	206 1015 058	Fuse 1.6A	Change
	415 0299 000	Condenser Cover	Add
	513 0654 004	Fuse Label	Add
	203 3941 008	AC Outlet (2P)	Delete
	205 0233 032	3P EH Conn. Base	Delete
	203 4791 011	3P EH-SCN Conn. Cord	Delete
	203 0494 008	1P Contact Ass'y	Delete

1U-2344A MAIN UNIT (DRA-345R) for U.S.A. and Canada Black Version

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC101	265 0030 004	IC NJM4558DD	
IC201	262 0699 006	IC TC9164N	
IC251	263 0476 002	IC LB1639	
IC605	263 0793 002	IC NJM7806FA(S)	
TR201	269 0107 900	Transistor RN1241(A/B)	
TR202,203	269 0025 901	Transistor RN1202(10K-10K)	
TR301,302	269 0107 900	Transistor RN1241(A/B)	
TR303-306	271 0094 919	Transistor 2SA970(BL)	
TR307-312	273 0235 923	Transistor 2SC1841-T(E/F)	
TR313,314	271 0131 924	Transistor 2SA988-T(F/E)	
TR315,316	273 0198 918	Transistor 2SC1815(BL)	
TR317,318	272 0053 908	Transistor 2SB647A(C)	
TR319,320	274 0060 007	Transistor 2SD667A(C)	
TR321,322	271 0239 004	Transistor 2SA1489 (O/P/Y)(Z)	
TR323,324	273 0387 004	Transistor 2SC3853 (O/P/Y)(Z)	
TR325,326	273 0235 923	Transistor 2SC1841-T(E/F)	
TR331,332	271 0191 906	Transistor 2SA1048(GR)	
TR401	273 0317 906	Transistor 2SC2458(BL)	
TR402	271 0191 906	Transistor 2SA1048(GR)	
TR403	273 0317 906	Transistor 2SC2458(BL)	
TR404	269 0029 907	Transistor RN1204(47K/47K)	
TR405	269 0107 900	Transistor RN1241(A/B)	
TR406	271 0191 906	Transistor 2SA1048(GR)	
TR407,408	273 0317 906	Transistor 2SC2458(BL)	
TR411	269 0030 909	Transistor RN2204(47K/47K)	
TR412	269 0029 907	Transistor RN1204(47K/47K)	
TR413	274 0151 903	Transistor 2SD2004(P)	
TR415	273 0317 906	Transistor 2SC2458(BL)	
TR416	271 0094 919	Transistor 2SA970(BL)	
TR417	272 0107 906	Transistor 2SB1328(P)	
TR419	273 0187 916	Transistor 2SC2240(BL)	
TR501	271 0191 906	Transistor 2SA1048(GR)	
TR614	271 0191 906	Transistor 2SA1048(GR)	
TR615,616	273 0317 906	Transistor 2SC2458(BL)	
TR617	269 0029 907	Transistor RN1204(47K/47K)	
D209,210	276 0432 903	Diode 1SS270A	
D301,302	276 0432 903	Diode 1SS270A	
D303-306	276 0049 914	Diode 1S2076A	
D307,308	276 0432 903	Diode 1SS270A	
D401-403	276 0432 903	Diode 1SS270A	
D431	276 0432 903	Diode 1SS270A	
D501,502	276 0553 905	Diode 1SR35-200A	
D503	276 0432 903	Diode 1SS270A	
D504-507	276 0553 905	Diode 1SR35-200A	
D509	276 0305 001	Diode S4VB20	
D604	276 0432 903	Diode 1SS270A	
D605	276 0049 914	Diode 1S2076A	
D606	276 0553 905	Diode 1SR35-200A	
D607-609	276 0432 903	Diode 1SS270A	
ZD401	276 0465 925	Zener Diode HZS7B-3TD	
ZD403,404	276 0477 926	Zener Diode HZS16-3TD	
ZD501	276 0482 911	Zener Diode HZS27-2TD	
ZD502	276 0582 905	Zener Diode HZS9A2LTD	
ZD501	276 0582 905	Zener Diode HZS9A2LTD	
SC401	279 0016 904	Thyristor SF0R1A42	
RESISTORS GROUP (Not included Carbon Film ±5% 1/4W)			
R255,256	244 2052 931	Metallic 390ohm 1W	RS14B3A391JNBS(S)
R311-314	241 2380 963	Carbon 2.2kohm 1/4W	RD14B2E222JNBS

Ref. No.	Part No.	Part Name	Remarks
R341,342	241 2377 976	Carbon 130ohm 1/4W	RD14B2E31JNBS
R347,348	241 2377 905	Carbon 68ohm 1/4W	RD14B2E680JNBS
R353,354	241 2378 920	Carbon 220ohm 1/4W	RD14B2E221JNBS
R355-362	244 2043 982	Metallic 0.22ohm 1W	RS14B3A422JNBS(S)
R367,368	241 2379 987	Carbon 1kohm 1/4W	RD14B2E102JNBS
R369,370	241 2378 962	Carbon 330ohm 1/4W	RD14B2E331JNBS
R381,382	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E47JNBS
R383,384	241 2432 905	Carbon 470ohm 1/4W	RD14B2E471JNBS
R381,392	241 2377 976	Carbon 130ohm 1/4W	RD14B2E131JNBS
R409	244 2051 990	Metallic 4.7kohm 1W	RS14B3A472JNBS(S)
R431,432	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E47JNBS
R433	244 2052 973	Metallic 560ohm 1W	RS14B3A561JNBS(S)
R451	244 2052 931	Metallic 390ohm 1W	RS14B3A391JNBS(S)
R503	241 2387 908	Carbon 1ohm 1/4W	RD14B2E010JNBS
R504	241 2379 903	Carbon 470ohm 1/4W	RD14B2E471JNBS
R508	242 0073 000	Fixed 2.2Mohm 1/2W	RC05GF2H225K
R519-522	244 2043 937	Metallic 10ohm 1W	RS14B3A100JNBS(S)
R681	244 2051 987	Metallic 4.7ohm 1W	RS14B3A47JNBS(S)
VR201, 301-303	211 0665 003	Variable	V1604V20F----K
VR251	211 0586 001	Variable 100kohm	V1620V25FB104R
VR305,306	211 0664 048	SemiFixed 5kohm	V06BP502
CAPACITORS GROUP			
C101,102	253 1179 929	Ceramic 150pF/50V	CK45B1H151K
C103,104	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C105,106	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
C107,108	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C109,110	255 1209 905	Film 0.0056µF/50V	CQ93M1H562J
C111,112	253 1180 947	Ceramic 0.0015µF/50V	CK45B1H1H152K
C113,114	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C115,117	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223E
C121	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C201,202	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
C203,204	253 1179 990	Ceramic 560pF/50V	CK45B1H561K
C205,206	255 1216 901	Film 0.022µF/50V	CQ93M1H223J
C207-209	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
C210	253 4412 903	Ceramic 10pF/50V	CC45SL1H100D
C211	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
C271	254 4252 927	Electrolytic 47µF/10V	CE04W1A470M
C272	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
C273,274	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
C281-283	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C301,302	254 4260 922	Electrolytic 0.33µF/50V	CE04W1HR33M
C303-306	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C307,308	253 1180 921	Ceramic 0.001µF/50V	CK45B1H102K
C309,310	254 4261 918	Electrolytic 47µF/50V	CE04W1H470M
C311,312	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
C313,314	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C315,316	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C317,318	255 1217 900	Film 0.027µF/50V	CQ93M1H273J
C319,320	256 1034 982	Metalized 0.12µF/50V	CF93A1H124J
C321,322	255 1202 902	Film 0.0015µF/50V	CQ93M1H152J
C323,324	255 1212 905	Film 0.01µF/50V	CQ93M1H103J
C327,328	253 1179 945	Ceramic 220pF/50V	CK45B1H221K
C329,330	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z
C331,332	253 4478 902	Ceramic 22pF/50V	CC45SL2H220J
C341,342	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C343,344	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
C349-352	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
C369,370	253 4537 908	Ceramic 27pF/50V	CC45SL1H270J
C371,372	253 1179 945	Ceramic 220pF/50V	CK45B1H221K

1U-2344D MAIN UNIT (DRA-345R) for Australia Black Version (Same as 1U-2344A except the followings)

Ref. No.	Part No.	Part Name	Remarks
C373,374	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C401	254 4250 945	Electrolytic 330μF/6.3V	CE04W0J331M
C403	254 4260 977	Electrolytic 4.7μF/50V	CE04W1H4R7M
C404	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C405	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C406	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C407,408	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C409,410	254 4256 949	Electrolytic 10μF/25V	CE04W1E101M
C501,502	253 1151 905	Ceramic 0.0047μF/500V	CK45E2H472P
C503,504	254 4355 002	Electrolytic 680μF/50V	CE04W1H682MDL
C505	254 4260 951	Electrolytic 2.2μF/50V	CE04W1H2R2M
C506,507	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C508	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C509	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C510	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C511-514	255 1208 906	Film 0.0047μF/50V	CQ93M1H472J
C515	253 8014 702	Ceramic 0.01μF/125V AC	CK45F2GAC103MC
C519-522	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C523	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C643	259 0007 702	For Back up 8200μF	SB CAP==822=C
C644	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C645	254 4256 790	Electrolytic 2200μF/25V	CE04W1E222MC
C646	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C647	254 4260 951	Electrolytic 2.2μF/50V	CE04W1H2R2M
C670	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J

OTHER PARTS GROUP

RL401	214 0128 002	Relay (DH24D2)	
F501	206 1039 092	Fuse 4A	
SW501	212 1075 006	Power Switch	
	204 8260 004	Mini Jack	
	205 0472 013	8P SP Terminal	
	204 8354 004	Head Phone Jack	
	212 1045 007	2P Push Switch(SP)	
	203 3941 008	AC Outlet (2P)	
	204 8278 009	6P Pin Jack(S-GND)	
	204 8266 008	4P Pin Jack(S-GND)	
	417 0400 002	Power Radiator	
	205 0185 054	5P Wire Holder	
	205 0185 025	2P Wire Holder	
	205 0697 089	JL Connector(F-E)	
	205 0696 080	JL Connector(BT-E)	
	205 0343 087	8P Conn.Base(KR-PH)	
	205 0375 013	11P Conn.Base(KR-PH)	
	002 0012 052	2C Ribbon Cable	
	002 0041 007	5C Ribbon Cable	
	204 0309 015	6P EH-SCH Conn.Cord	
	203 0494 008	1P Contact Ass'y	
	203 0482 036	1P Sin Conn. Cord	
	202 0022 008	Fuse Holder	
	001 0065 064	Vinyl Wire	

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
TR321,322	271 0237 006	Transistor 2SA1490(O/P/Y)(Z)	Change
TR323,324	273 0386 005	Transistor 2SC3854(O/P/Y)(Z)	Change
RESISTORS GROUP			
R508	242 0073 000	Fixed 2.2Mohm 1/2W	Delete
CAPACITORS GROUP			
C515	253 8003 713	Ceramic 0.0047μF/400V	Change
OTHER PARTS GROUP			
F501	206 1015 016	Fuse 1.25A	Change
	203 3941 008	AC Outlet (2P)	Delete
	415 0299 000	Condenser Cover	Add
	513 0654 033	Fuse Label (1.25A)	Add

1U-2344E MAIN UNIT (DRA-345R) for Multi-Voltage Black Version (Same as 1U-2344A except the followings)

Ref. No.	Part No.	Part Name	Remarks
RESISTORS GROUP			
R508	242 0073 000	Fixed 2.2Mohm 1/2W	Delete
CAPACITORS GROUP			
C515	253 8003 713	Ceramic 0.0047μF/400V	Change
OTHER PARTS GROUP			
F501	206 1061 031	Fuse 4A(250V)	Change
F502	206 1061 002	Fuse 2A(250V)	Add
	415 0299 000	Condenser Cover	Add
	513 0654 062	Fuse Label	Add
	513 2049 002	Fuse Label	Add
	212 4293 005	Slide Switch	Add
	205 0343 032	3P Conn.Base(KR-PH)	Add

1U-2498A MAIN UNIT (DRA-345R)
for Europe Black Version

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP				RESISTORS GROUP (Not included Carbon Film $\pm 5\%$ 1/4W)			
IC101	263 0743 007	IC NJM2082DD		R255,256	244 2052 931	Metallic 390ohm 1W	RS14B3A391JNBS(S)
IC201	262 0699 006	IC TC9164N		R311-314	241 2380 963	Carbon 2.2kohm 1/4W	RD14B2E222JNBS
IC251	263 0476 002	IC LB1639		R341,342	241 2377 976	Carbon 130ohm 1/4W	RD14B2E131JNBS
IC605	263 0793 002	IC NJM7806FA(S)		R347,348	241 2377 905	Carbon 68ohm 1/4W	RD14B2E680JNBS
TR201	269 0107 900	Transistor RN1241(A/B)		R353,354	241 2378 920	Carbon 220ohm 1/4W	RD14B2E221JNBS
TR202,203	269 0025 901	Transistor RN1202(10K-10K)		R355-358	244 2043 982	Metallic 0.22ohm 1W	RS14B3AR22JNBS(S)
TR301,302	269 0107 900	Transistor RN1241(A/B)		R367,368	241 2379 987	Carbon 1kohm 1/4W	RD14B2E102JNBS
TR303-306	271 0094 919	Transistor 2SA970(BL)		R369,370	241 2378 962	Carbon 330ohm 1/4W	RD14B2E331JNBS
TR307-312	273 0235 923	Transistor 2SC1841-T(E/F)		R381,382	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E47JNBS
TR313,314	271 0131 924	Transistor 2SA988-T(F/E)		R383,384	241 2432 905	Carbon 470ohm 1/4W	RD14B2E471JNBS
TR315,316	273 0198 918	Transistor 2SC1815(BL)		R391,392	241 2377 976	Carbon 130ohm 1/4W	RD14B2E131JNBS
TR317,318	272 0053 908	Transistor 2SB647A(C)		R409	244 2051 990	Metallic 4.7kohm 1W	RS14B3A472JNBS(S)
TR319,320	274 0060 007	Transistor 2SD667A(C)		R451,432	241 2387 940	Carbon 4.7ohm 1/4W	RD14B2E47JNBS
TR321,322	271 0237 006	Transistor 2SA1490 (O/P/Y)(Z)		R433	244 2052 973	Metallic 560ohm 1W	RS14B3A561JNBS(S)
TR323,324	273 0386 005	Transistor 2SC3854 (O/P/Y)(Z)		R451	244 2052 931	Metallic 390ohm 1W	RS14B3A391JNBS(S)
TR325,326	273 0235 923	Transistor 2SC1841-T(E/F)		R503	241 2387 908	Carbon 1ohm 1/4W	RD14B2E010JNBS
TR331,332	271 0191 906	Transistor 2SA1048(GR)		R504	241 2379 903	Carbon 470ohm 1/4W	RD14B2E471JNBS
TR401	273 0317 906	Transistor 2SC2458(BL)		R519-522	244 2043 937	Metallic 10ohm 1W	RS14B3A100JNBS(S)
TR402	271 0191 906	Transistor 2SA1048(GR)		R681	244 2051 987	Metallic 4.7ohm 1W	RS14B3A47JNBS(S)
TR403	273 0317 906	Transistor 2SC2458(BL)		VR201,	211 0665 003	Variable	V1604V20F---K
TR404	269 0029 907	Transistor RN1204(47K-47K)		301-303			
TR405	269 0107 900	Transistor RN1241(A/B)		VR251	211 0586 001	Variable 100kohm	V1620V25FB104R
TR406	271 0191 906	Transistor 2SA1048(GR)		VR305,306	211 6064 048	SemiFixed 5kohm	V06BP502
TR407,408	273 0317 906	Transistor 2SC2458(BL)		CAPACITORS GROUP			
TR411	269 0030 909	Transistor RN2204(47K-47K)		C101,102	253 1179 929	Ceramic 150pF/50V	CK45B1H151K
TR412	269 0029 907	Transistor RN1204(47K-47K)		C103,104	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
TR413	274 0151 903	Transistor 2SD2004(P)		C105,106	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
TR415	273 0317 906	Transistor 2SC2458(BL)		C107,108	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
TR416	271 0094 919	Transistor 2SA970(BL)		C109,110	255 1209 905	Film 0.0056µF/50V	CQ93M1H562J
TR417	272 0107 906	Transistor 2SB1328(P)		C111,112	253 1180 947	Ceramic 0.0015µF/50V	CK45B1H152K
TR419	273 0187 916	Transistor 2SC2240(BL)		C113,114	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
TR501	271 0191 906	Transistor 2SA1048(GR)		C115,117	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
TR614	271 0191 906	Transistor 2SA1048(GR)		C121	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
TR615,616	273 0317 906	Transistor 2SC2458(BL)		C122	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
TR617	269 0029 907	Transistor RN1204(47K-47K)		C141,142	253 1179 945	Ceramic 220pF/50V	CK45B1H221K
D209,210	276 0432 903	Diode 1SS270A		C143	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
D301,302	276 0432 903	Diode 1SS270A		C201,202	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
D303-306	276 0049 914	Diode 1S2076A		C203,204	253 1179 990	Ceramic 560pF/50V	CK45B1H561K
D307,308	276 0432 903	Diode 1SS270A		C205,206	255 1216 901	Film 0.022µF/50V	CQ93M1H223J
D401-403	276 0432 903	Diode 1SS270A		C207-209	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
D431	276 0432 903	Diode 1SS270A		C210	253 4412 900	Ceramic 10pF/50V	CC45SL1H100D
D501,502	276 0553 905	Diode 1SR35-200A		C211	253 1148 905	Ceramic 0.022µF/50V	CK45F1H223Z
D503	276 0432 903	Diode 1SS270A		C271	254 4252 927	Electrolytic 47µF/10V	CE04W1A470M
D504-507	276 0553 905	Diode 1SR35-200A		C272	253 1181 917	Ceramic 0.022µF/50V	CK45F1H223Z
D509	276 0305 001	Diode S4VB20		C273,274	254 4254 909	Electrolytic 10µF/16V	CE04W1C100M
D604	276 0432 903	Diode 1SS270A		C281-283	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
D605	276 0049 914	Diode 1S2076A		C301,302	254 4260 922	Electrolytic 0.33µF/50V	CE04W1HR33M
D606	276 0553 905	Diode 1SR35-200A		C303-306	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
D607-609	276 0432 903	Diode 1SS270A		C307,308	253 1180 921	Ceramic 0.001µF/50V	CK45B1H102K
ZD401	276 0465 925	Zener Diode HZS7B-3TD		C309,310	254 4261 918	Electrolytic 47µF/50V	CE04W1H470M
ZD403,404	276 0477 926	Zener Diode HZS16-3TD		C311,312	254 4254 925	Electrolytic 33µF/16V	CE04W1C330M
ZD501	276 0482 911	Zener Diode HZS27-2TD		C313,314	254 4260 948	Electrolytic 1µF/50V	CE04W1H010M
ZD502	276 0582 905	Zener Diode HZS9A2LTD		C315,316	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
ZD601	276 0582 905	Zener Diode HZS9A2LTD		C317,318	255 1217 900	Film 0.027µF/50V	CQ93M1H273J
SC401	279 0016 904	Thyristor SF0R1A42		C319,320	256 1034 982	Metalized 0.12µF/50V	CF93A1H124J
				C321,322	255 1202 902	Film 0.0015µF/50V	CQ93M1H152J
				C323,324	255 1212 905	Film 0.01µF/50V	CQ93M1H103J
				C327,328	253 1179 945	Ceramic 220pF/50V	CK45B1H221K
				C329,330	253 1181 904	Ceramic 0.01µF/50V	CK45F1H103Z
				C331,332	253 4478 902	Ceramic 22pF/500V	CC45SL2H220J

1U-2498B MAIN UNIT (DRA-345R) for Europe Gold Version (Same as 1U-2498A except the followings)

Ref. No.	Part No.	Part Name	Remarks
C341,342	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C343,344	253 1181 917	Ceramic 0.022μF/50V	CK45F1H223Z
C349-352	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C369,370	253 4537 908	Ceramic 27pF/50V	CC45SL1H270J
C371,372	253 1179 945	Ceramic 220pF/50V	CK45B1H221K
C373,374	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C381,382	253 4538 949	Ceramic 100pF/50V	CC45SL1H101J
C401	254 4250 945	Electrolytic 330μF/6.3V	CE04W0J331M
C403	254 4260 977	Electrolytic 4.7μF/50V	CE04W1H47M1
C404	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C405	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C406	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C407,408	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
C409,410	254 4256 949	Electrolytic 100μF/25V	CE04W1E101M
C501,502	253 1151 905	Ceramic 0.0047μF/500V	CK45E2H472P
C503,504	254 4355 002	Electrolytic 6800μF/50V	CE04W1H682MDL
C505	254 4260 951	Electrolytic 2.2μF/50V	CE04W1H22R2M
C506,507	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C508	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C509	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C510	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C511-514	255 1208 906	Film 00047μF/50V	CQ93M1H472J
C515	253 8003 713	Ceramic 0.0047μF/400V AC	CK45E2GAC472MC
C519-522	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J
C523	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C525,526	253 1181 904	Ceramic 0.01μF/50V	CK45F1H103Z
C550	256 1042 903	Metalized 0.1μF/250V	CF93A2E104K
C643	259 0007 702	For Back up 100μF	SRCAP=822=C
C644	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C645	254 4256 790	Electrolytic 2200μF/25V	CE04W1E220MC
C646	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C647	254 4260 951	Electrolytic 2.2μF/50V	CE04W1H22R2M
C670	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J

Ref. No.	Part No.	Part Name	Remarks
OTHER PARTS GROUP			
	204 8355 003	Head Phone Jack	Change

1U-2498C MAIN UNIT (DRA-345R) for U.K. Black Version (Same as 1U-2498A except the followings)

Ref. No.	Part No.	Part Name	Remarks
OTHER PARTS GROUP			
F501	206 1015 016	Fuse 1.25A	Change
F502	206 1015 029	Fuse 1A	Delete
	513 0654 033	Fuse Label (1.25A)	Add
	205 0472 013	8PSP Terminal	Change

OTHER PARTS GROUP			
RL401	214 0128 002	Relay	
F501	206 1015 016	Fuse 1.6A	
F502	206 1015 029	Fuse 1A	
L101, 102	235 9003 002	FTZ Choke Coil	
SW501	212 1075 006	Power Switch	
	204 8260 004	Mini Jack	
	205 0484 001	4P SP Terminal	
	204 8354 004	Head Phone Jack	
	212 1045 007	2P Push Switch(SP)	
	204 8278 009	6P Pin Jack(S-GND)	
	204 8266 008	4P Pin Jack(S-GND)	
	417 0400 002	Power Radiator	
	205 0185 054	5P Wire Holder	
	205 0185 025	2P Wire Holder	
	205 0697 089	JL Connector(F-E)	
	205 0696 080	JL Connector(BT-E)	
	205 0343 087	8P Conn.Base (KR-PH)	
	205 0375 013	11P Conn.Base(KR-PH)	
	002 0012 052	2C Ribbon Cable	
	002 0041 007	5C Ribbon Cable	
	204 0309 015	4P H-SCN Conn.C ord	
	203 0482 036	1P Sin Conn. Cord	
	202 0022 008	Fuse Holder	
	205 0692 000	2P Wrapping Terminal	
	415 0299 000	Condenser Cover	For C515
	001 0149 003	Vinyl Wire	

1U-2485B M-CON UNIT(DRA-545R) for U.S.A. and Canada Version

1U-2485C M-CON UNIT(DRA-345R) for U.S.A. and Canada Version

Ref.No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC701	262 1396 104	IC TMP47C670N-1222	
TR701	269 0025 901	Transistor RN1202(10K-10K)	
TR702	269 0026 900	Transistor RN2202(10K-10K)	
TR703	273 0222 907	Transistor 2SC2458(Y/GR)	
D702-707	276 0432 903	Diode 1SS270A	
D713	276 0432 903	Diode 1SS270A	
D715	276 0432 903	Diode 1SS270A	
D716-718	276 0432 903	Diode 1SS270A	
D720	276 0432 903	Diode 1SS270A	
LD701-706	393 9416 908	LED SEL-2210R	
RESISTORS GROUP (Not included Carbon Film ± 5% 1/4W)			
RA701	246 2053 004	Array 10kohm x5	RK99==103JP5
RA702	246 2054 003	Array 10kohm x7	RK99==103JP7
CAPACITORS GROUP			
C701	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C703	254 4250 055	Electrolytic 470μF/6.3V	CE04W0J471M
C704	254 4258 950	Electrolytic 100μF/35V	CE04W1V101M
C706	253 4412 900	Ceramic 10pF/50V	CC45SL1H100D
C710	253 1146 907	Ceramic 0.01μF/50V	CK45F1H103Z
OTHER PARTS GROUP			
S701-720	212 41388 907	Tact Switch	
XL701	399 9018 003	Ceramic Vibrator	CST 4.00 MGW
	393 4043 004	FLD (FIP10TM7)	
	499 0150 008	Remote Sensor	SBX1610-52
	204 2514 002	8P PH-PH Conn.Cord	
	204 6307 011	11P KR-KR Conn.Cord	
	204 2431 059	9P KR-KR Conn.Cord	
	205 0375 013	11P Conn.Base(KR-PH)	
	205 0343 090	9P Conn.Base(KR-PH)	
	205 0343 087	8P Conn.Base(KR-KR)	
	412 2268 302	FLD Bracket	

Ref.No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC701	262 1396 104	IC TMP47C670N-1222	
TR701	269 0025 901	Transistor RN1202(10K-10K)	
TR702	269 0026 900	Transistor RN2202(10K-10K)	
TR703	273 0222 907	Transistor 2SC2458(Y/GR)	
TR704	269 0025 901	Transistor RN1202(10K-10K)	
D702-707	276 0432 903	Diode 1SS270A	
D715	276 0432 903	Diode 1SS270A	
D716-718	276 0432 903	Diode 1SS270A	
D720	276 0432 903	Diode 1SS270A	
D722	276 0432 903	Diode 1SS270A	
D725	276 0432 903	Diode 1SS270A	
LD701-706	393 9416 908	LED SEL-2210R	
LD701-706	393 9416 908	LED SEL-2210R	
RESISTORS GROUP (Not included Carbon Film ± 5% 1/4W)			
RA701	246 2053 004	Array 10kohm x5	RK99==103JP5
RA702	246 2054 003	Array 10kohm x7	RK99==103JP7
CAPACITORS GROUP			
C701	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C703	254 4250 055	Electrolytic 470μF/6.3V	CE04W0J471M
C704	254 4258 950	Electrolytic 100μF/35V	CE04W1V101M
C706	253 4412 900	Ceramic 10pF/50V	CC45SL1H100D
C710	253 1146 907	Ceramic 0.01μF/50V	CK45F1H103Z
OTHER PARTS GROUP			
S701-720	212 41388 907	Tact Switch	
XL701	399 9018 003	Ceramic Vibrator	CST 4.00 MGW
	393 4043 004	FLD (FIP10TM7)	
	499 0150 008	Remote Sensor	SBX1610-52
	204 2514 002	8P PH-PH Conn.Cord	
	204 6307 011	11P KR-KR Conn.Cord	
	204 2431 059	9P KR-KR Conn.Cord	
	205 0375 013	11P Conn.Base(KR-PH)	
	205 0343 090	9P Conn.Base(KR-PH)	
	205 0343 087	8P Conn.Base(KR-PH)	
	412 2268 302	FLD Bracket	

1U-2485F M-CON UNIT(DRA-545R) for Australia Version (Same as 1U-2485B except the followings):

1U-2485D M-CON UNIT(DRA-345R) for Australia Version (Same as 1U-2485C except the followings)

Ref.No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
D701	276 0432 903	Diode 1SS270A	Add
D721	276 0432 903	Diode 1SS270A	Add

Ref.No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
D701	276 0432 903	Diode 1SS270A	Add
D721	276 0432 903	Diode 1SS270A	Add

1U-2485E M-CON UNIT(DRA-345R) for Multi-Voltage Version (Same as 1U-2485C except the followings)

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
D701	276 0432 928	Diode 1SS270A	Add
OTHER PARTS GROUP			
	203 4633 043	3P KR-DA Cord	Add

1U-2499A M-CON UNIT (DRA-345R) for Europe and U.K. Version

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC701	262 1396 104	IC TMP47C670N-1222	
TR701	269 0025 901	Transistor RN1202(10K-10K)	
TR702	269 0026 900	Transistor RN2202(10K-10K)	
TR703	273 0222 907	Transistor 2SC2458(Y/GR)	
TR704	269 0025 901	Transistor RN1202(10K-10K)	
D701-707	276 0432 903	Diode 1SS270A	
D715	276 0432 903	Diode 1SS270A	
D716-718	276 0432 903	Diode 1SS270A	
D720-722	276 0432 903	Diode 1SS270A	
D725	276 0432 903	Diode 1SS270A	
LD701	393 9416 908	LED SEL-2210R	
LD703-706	393 9416 908	LED SEL-2210R	
RESISTORS GROUP (Not included Carbon Film ± 5% 1/4W)			
RA701	246 2053 004	Array 10kohm x5	RK99==103JP5
RA702	246 2054 003	Array 10kohm x7	RK99==103JP7
CAPACITORS GROUP			
C701	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C703	254 4250 055	Electrolytic 470μF/6.3V	CE04W0J471M
C704	254 4258 950	Electrolytic 100μF/35V	CE04W1V101M
C706	253 4412 900	Ceramic 10pF/50V	CC45SL1H100D
C710	253 1146 907	Ceramic 0.01μF/50V	CK45F1H103Z
OTHER PARTS GROUP			
S701-717	212 5604 910	Tact Switch	
S719,720	212 5604 910	Tact Switch	
XL701	399 9018 003	Ceramic Vibrator	CST 4.00 MGW
	393 4043 004	FLD (FIP10TM7)	
	499 0150 008	Remote Sensor	SBX1610-52
	204 2514 002	8P PH-PH Conn.Cord	
	204 6307 011	11P KR-KR Conn.Cord	
	204 2431 059	9P KR-KR Conn.Cord	
	205 0375 013	11P Conn.Base(KR-PH)	
	205 0343 090	9P Conn.Base(KR-PH)	
	205 0343 087	8P Conn.Base(KR-PH)	
	412 2268 302	FLD Bracket	

1U-2347C TUNER UNIT (DRA-545R/345R) for U.S.A. and Canada Version

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC601	263 0831 003	IC LA1267S	
IC602	263 0439 007	IC LA3401	
IC603	262 0719 009	IC LM7001	
IC604	263 0801 004	IC NJM7812FA(S)	
TR602	273 0357 908	Transistor 2SC2839(E)	
TR603	273 0222 907	Transistor 2SC2458(Y/GR)	
TR604,605	271 0191 906	Transistor 2SA1048(GR)	
TR606	275 0048 912	Transistor 2SK381(B)/(C)	
TR607	273 0222 907	Transistor 2SC2458(Y/GR)	
TR608,609	273 0253 918	Transistor 2SC2878(A/B)	
TR610	271 0191 906	Transistor 2SA1048(GR)	
TR611	271 0102 937	Transistor 2SA1015(GR/Y)	
TR612	269 0029 907	Transistor RN1204(47K-47K)	
D601	276 0467 910	Zener Diode HZS9A-2	
D602,603	276 0432 903	Diode 1SS270A	
D610,611	276 0302 004	Diode SVC321SPA-D-2	
RESISTORS GROUP (Not included Carbon Film ± 5% 1/4W)			
R601	247 0004 906	Chip 39ohm 1/10W	RM73B-390J
R602	247 0007 945	Chip 1kohm 1/10W	RM73B-102J
R603	247 0006 946	Chip 390ohm 1/10W	RM73B-391J
R606	247 0009 901	Chip 4.7kohm 1/10W	RM73B-472J
R607	247 0005 989	Chip 220ohm 1/10W	RM73B-221J
R608,609	247 0006 920	Chip 330ohm 1/10W	RM73B-331J
R610	247 0008 960	Chip 3.3kohm 1/10W	RM73B-332J
R611	247 0010 929	Chip 15kohm 1/10W	RM73B-153J
R612	247 0005 921	Chip 120ohm 1/10W	RM73B-121J
R613	247 0004 980	Chip 82ohm 1/10W	RM73B-820J
R615,616	247 0009 985	Chip 10kohm 1/10W	RM73B-103J
R617	247 0008 960	Chip 3.3kohm 1/10W	RM73B-332J
R618	247 0008 957	Chip 3kohm 1/10W	RM73B-302J
R619	247 0009 998	Chip 11kohm 1/10W	RM73B-113J
R620	247 0011 973	Chip 62kohm 1/10W	RM73B-623J
R621	247 0012 927	Chip 100kohm 1/10W	RM73B-104J
R622,623	247 0012 943	Chip 120kohm 1/10W	RM73B-124J
R624	247 0012 927	Chip 100kohm 1/10W	RM73B-104J
R625	247 0011 915	Chip 36kohm 1/10W	RM73B-363J
R626	247 0012 927	Chip 100kohm 1/10W	RM73B-104J
R627	247 0007 945	Chip 1kohm 1/10W	RM73B-102J
R628,629	247 0012 927	Chip 100kohm 1/10W	RM73B-104J
R630-632	247 0008 960	Chip 3.3kohm 1/10W	RM73B-332J
R633,634	247 0007 945	Chip 1kohm 1/10W	RM73B-102J
R635,636	247 0009 943	Chip 6.8kohm 1/10W	RM73B-682J
R637	247 0012 927	Chip 100kohm 1/10W	RM73B-104J
R638	247 0010 961	Chip 22kohm 1/10W	RM73B-223J
R639,640	247 0012 927	Chip 100kohm 1/10W	RM73B-104J
R641	247 0005 905	Chip 100ohm 1/10W	RM73B-101J
R642	247 0009 914	Chip 5.1kohm 1/10W	RM73B-512J
R643	247 0006 962	Chip 470ohm 1/10W	RM73B-471J
R644	247 0006 975	Chip 510ohm 1/10W	RM73B-511J
R645	247 0007 961	Chip 1.2kohm 1/10W	RM73B-122J
R646,647	247 0009 985	Chip 10kohm 1/10W	RM73B-103J
R648	247 0015 940	Chip 2.2Mohm 1/10W	RM73B-225J
R649	247 0009 969	Chip 8.2kohm 1/10W	RM73B-822J
R650	247 0007 903	Chip 680ohm 1/10W	RM73B-681J
R662	247 0005 905	Chip 100ohm 1/10W	RM73B-101J
R665	247 0010 945	Chip 18kohm 1/10W	RM73B-183J
R670	247 0011 986	Chip 68kohm 1/10W	RM73B-683J

1U-2347E TUNER UNIT (DRA-345R) for Multi-Voltage Version (Same as 1U-2347C except the followings)

Ref. No.	Part No.	Part Name	Remarks
CAPACITORS GROUP			
C601	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C602-607	257 0012 966	Ceramic-chip 0.01μF/50V	CK73F1H103Z
C608	254 4254 938	Electrolytic 47μF/16V	CE04W1C470M
C609	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C610	257 0012 982	Ceramic-chip 0.022μF/50V	CK73F1H223Z
C611	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C612	254 4260 964	Electrolytic 3.3μF/50V	CE04W1H3R3M
C613	254 4258 905	Electrolytic 4.7μF/35V	CE04W1V4R7M
C614,615	257 0012 966	Ceramic-chip 0.01μF/50V	CK73F1H103Z
C616	256 1034 940	Metalized 0.056μF/50V	CF93A1H563J
C618	254 4254 912	Electrolytic 22μF/16V	CE04W1C220M
C619	256 1034 937	Metalized 0.047μF/50V	CF93A1H473J
C620	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C621,622	257 0006 972	Ceramic-chip 750pF/50V	CC73SL1H751J
C623	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C624	257 0012 966	Ceramic-chip 0.01μF/50V	CK73F1H103Z
C625,626	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C627	254 4260 919	Electrolytic 0.22μF/50V	CE04W1HR22M
C628	254 4254 938	Electrolytic 47μF/16V	CE04W1C470M
C629,630	254 4260 951	Electrolytic 2.2μF/50V	CE04W1H2R2M
C631	257 0012 966	Ceramic-chip 0.01μF/50V	CK73F1H103Z
C633	255 4201 942	Film 390pF/50V	CC93P1H391J
C634	253 4536 941	Ceramic 15pF/50V	CC45SL1H150J
C635	254 4254 938	Electrolytic 47μF/16V	CE04W1C470M
C636	254 4260 906	Electrolytic 0.1μF/50V	CE04W1H0R1M
C637	254 3056 917	Electrolytic 1μF/50V (Bipole)	CE04D1H010MBP
C638	257 0012 966	Ceramic-chip 0.01μF/50V	CK73F1H103Z
C639	254 4260 045	Electrolytic 1μF/50V	CE04W1H010M
C640,641	257 0002 976	Ceramic-chip 16pF/50V	CC73SL1H160J
C642	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C650	257 0012 982	Ceramic-chip 0.022μF/50V	CK73F1H223Z
C651	257 0004 961	Ceramic-chip 100pF/50V	CC73SL1H101J
C652	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C656	254 3056 917	Electrolytic 1μF/50V (Bipole)	CE04D1H010MBP
C660	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
C661	257 0004 961	Ceramic-chip 100pF/50V	CC73SL1H101J
C662	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
OTHER PARTS GROUP			
CF601,602	261 0025 004	Ceramic Filter	BFU450C4 (C.F)
CF603	261 0031 001	AM Ceramic Filter	CSB456F11
CF604	261 0079 005	Ceramic Filter	SFU450B3
CF605	261 0116 007	Ceramic Filter	7.2MHZ
XL601	399 0075 003	Crystal	
TC601	213 0041 034	Trimmer Condenser	
T601	231 1127 007	MW ANT Trans	
T602	231 4901 000	MW OSC Coil	
T603	231 2085 009	FM DET.Trans	
T604	231 1138 009	AM IFT	
	205 0432 008	4P ANT.Terminal	
	216 0064 007	FM Front End	
	205 0233 061	6P EH Conn.Base	
	205 0343 090	9P Conn.Base(KR-PH)	
	203 0504 024	1P Contact Ass'y	

Ref. No.	Part No.	Part Name	Remarks
RESISTORS GROUP			
R665	247 0011 928	Chip 39kohm 1/10W	Change
CAPACITORS GROUP			
C621,622	257 0006 930	Ceramic-chip 510pF/50V	Change

1U-2347D TUNER UNIT (DRA-545R/345R) for Australia Version
 1U-2500A TUNER UNIT (DRA-345R) for Europe and U.K. Version

Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC601	263 0831 003	IC LA1267S	
IC602	263 0439 007	IC LA3401	
IC603	262 0719 009	IC LM7001	
IC604	263 0801 004	IC NJM7812FA(S)	
TR601	275 0051 909	Transistor 2SK161(GR)	
TR602	273 0357 908	Transistor 2SC2839(E)	
TR603	273 0222 907	Transistor 2SC2458(Y/GR)	
TR604,605	271 0191 906	Transistor 2SA1048(GR)	
TR606	275 0048 912	Transistor 2SK381(B)/(C)	
TR607	273 0222 907	Transistor 2SC2458(Y/GR)	
TR608,609	273 0253 918	Transistor 2SC2878(A/B)	
TR610	271 0191 906	Transistor 2SA1048(GR)	
TR611	271 0102 937	Transistor 2SA1015(GR/Y)	
TR612	269 0029 907	Transistor RN1204(47K-47K)	
D601	276 0467 910	Zener Diode HZS9A-2	
D602,603	276 0432 903	Diode 1SS270A	
D610,611	276 0302 004	Diode SVC321SPA-D-2	
RESISTORS GROUP (Not included Carbon Film \pm 5% 1/4W)			
R601	247 0004 906	Chip 39ohm 1/10W	RM73B--390J
R602	247 0007 945	Chip 1kohm 1/10W	RM73B--102J
R603	247 0006 946	Chip 390ohm 1/10W	RM73B--391J
R604	247 0009 985	Chip 10kohm 1/10W	RM73B--103J
R605	247 0006 920	Chip 330ohm 1/10W	RM73B--331J
R606	247 0009 901	Chip 4.7kohm 1/10W	RM73B--472J
R607	247 0005 989	Chip 220ohm 1/10W	RM73B--221J
R608,609	247 0006 920	Chip 330ohm 1/10W	RM73B--331J
R610	247 0008 902	Chip 1.8Kohm 1/10W	RM73B--182J
R611	247 0010 929	Chip 15kohm 1/10W	RM73B--153J
R612	247 0005 921	Chip 120ohm 1/10W	RM73B--121J
R613	247 0004 980	Chip 82ohm 1/10W	RM73B--820J
R615,616	247 0009 985	Chip 10kohm 1/10W	RM73B--103J
R617	247 0008 960	Chip 3.3kohm 1/10W	RM73B--332J
R618	247 0008 957	Chip 3kohm 1/10W	RM73B--302J
R619	247 0009 998	Chip 11kohm 1/10W	RM73B--113J
R620	247 0011 973	Chip 62kohm 1/10W	RM73B--623J
R621	247 0012 969	Chip 150kohm 1/10W	RM73B--154J
R622,623	247 0012 998	Chip 200kohm 1/10W	RM73B--204J
R624	247 0012 969	Chip 150kohm 1/10W	RM73B--154J
R625	247 0011 915	Chip 36kohm 1/10W	RM73B--363J
R626	247 0012 927	Chip 100kohm 1/10W	RM73B--104J
R627	247 0007 945	Chip 1kohm 1/10W	RM73B--102J
R628,629	247 0012 927	Chip 100kohm 1/10W	RM73B--104J
R630--632	247 0008 960	Chip 3.3kohm 1/10W	RM73B--332J
R633,634	247 0007 945	Chip 1kohm 1/10W	RM73B--102J
R635,636	247 0008 960	Chip 3.3kohm 1/10W	RM73B--332J
R637	247 0012 927	Chip 100kohm 1/10W	RM73B--104J
R638	247 0010 961	Chip 22kohm 1/10W	RM73B--223J
R639,640	247 0012 927	Chip 100kohm 1/10W	RM73B--104J
R641	247 0005 905	Chip 100ohm 1/10W	RM73B--101J
R642	247 0009 914	Chip 5.1kohm 1/10W	RM73B--512J
R643	247 0006 962	Chip 470ohm 1/10W	RM73B--471J
R644	247 0006 975	Chip 510ohm 1/10W	RM73B--511J
R645	247 0007 961	Chip 1.2kohm 1/10W	RM73B--122J
R646,647	247 0009 985	Chip 10kohm 1/10W	RM73B--103J
R648	247 0015 940	Chip 2.2Mohm 1/10W	RM73B--225J
R649	247 0009 969	Chip 8.2kohm 1/10W	RM73B--822J
R650	247 0007 903	Chip 680ohm 1/10W	RM73B--681J
R651	247 0009 927	Chip 5.6kohm 1/10W	RM73B--562J
R652	247 0007 961	Chip 1.2kohm 1/10W	RM73B--122J

Ref. No.	Part No.	Part Name	Remarks
R665	247 0011 928	Chip 39kohm 1/10W	RM73B--393J
R670	247 0011 986	Chip 68kohm 1/10W	RM73B--683J
CAPACITORS GROUP			
C601	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C602--607	257 0012 966	Ceramic-chip 0.01 μ F/50V	CK73F1H103Z
C608	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M
C609	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C610	257 0012 982	Ceramic-chip 0.022 μ F/50V	CK73F1H223Z
C611	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C612	254 4260 964	Electrolytic 3.3 μ F/50V	CE04W1H3R3M
C613	254 4258 905	Electrolytic 4.7 μ F/35V	CE04W1V4R7M
C614,615	257 0012 966	Ceramic-chip 0.01 μ F/50V	CK73F1H103Z
C616	256 1034 940	Metalized 0.056 μ F/50V	CF93A1H563J
C618	254 4254 912	Electrolytic 22 μ F/16V	CE04W1C220M
C619	256 1034 937	Metalized 0.047 μ F/50V	CF93A1H473J
C620	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C621,622	257 0005 986	Ceramic-chip 330pF/50V	CC73SL1H331J
C623	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C624	257 0012 966	Ceramic-chip 0.01 μ F/50V	CK73F1H103Z
C625,626	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C627	254 4260 919	Electrolytic 0.22 μ F/50V	CE04W1HR22M
C628	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M
C629,630	254 4260 951	Electrolytic 2.2 μ F/50V	CE04W1H2R2M
C631	257 0012 966	Ceramic-chip 0.01 μ F/50V	CK73F1H103Z
C633	255 4201 942	Film 390pF/50V	CQ93P1H391J
C634	253 4536 967	Ceramic 18pF/50V	CC45SL1H180J
C635	254 4254 938	Electrolytic 47 μ F/16V	CE04W1C470M
C636	254 4260 906	Electrolytic 0.1 μ F/50V	CE04W1H0R1M
C637	254 3056 917	Electrolytic 1 μ F/50V (Bipole)	CE04D1H010MBP
C638	257 0012 966	Ceramic-chip 0.01 μ F/50V	CK73F1H103Z
C639	254 4260 045	Electrolytic 1 μ F/50V	CE04W1H010M
C640,641	257 0002 976	Ceramic-chip 16pF/50V	CC73SL1H160J
C642	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C648	254 4254 912	Electrolytic 22 μ F/16V	CE04W1C220M
C650	257 0012 982	Ceramic-chip 0.022 μ F/50V	CK73F1H223Z
C651	257 0004 961	Ceramic-chip 100pF/50V	CC73SL1H101J
C652	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C654	257 0012 966	Ceramic-chip 0.01 μ F/50V	CK73F1H103Z
C656	254 3056 917	Electrolytic 1 μ F/50V (Bipole)	CE04D1H010MBP
C660	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C661	257 0004 961	Ceramic-chip 100pF/50V	CC73SL1H101J
C662	254 4260 980	Electrolytic 10 μ F/50V	CE04W1H100M
OTHERS PARTS GROUP			
CF601,602	261 0064 007	Ceramic Filter	SFT 10.7MS2
CF603	261 0031 001	Ceramic Filter	BFU450C4(C.F.)
CF604	261 0079 005	Ceramic Filter	CSB456F11
CF605	261 0116 007	Ceramic Filter	SFU450B3
XL601	399 0075 003	Crystal (7.2 MHz)	7.2MHZ
TC601	213 0041 034	Trimmer Condencer	
T601	231 1127 007	MW Ant. Trans	
T602	231 1118 003	MW OSC Coil	
T603	231 2085 009	FM DET.Trans	
T604	231 1138 009	AM IFT	
LF601	232 0159 008	Anti Birdie Filter	
LF602,603	232 0085 004	LPF	
	205 0433 007	3P Ant.Terminal (DIN)	
	216 0065 006	Front End	
	205 0233 061	6P EH Conn.Base	
	205 0343 090	9P Conn.Base(KR-PH)	

1U-2348A VIDEO UNIT (DRA-545R)

Ref.No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC801	262 0628 006	IC HD14052BP	
TR801,802	273 0198 918	Transistor 2SC1815(BL)	
ZD801,802	276 0460 917	Zener Diode HZS5C-2	
RESISTORS GROUP (Not included Carbon Film 5%\pm 1/4w)			
R819,820	244 2052 960	Metallic 220ohm, 1W	RS14B3A221JNBS(S)
CAPACITORS GROUP			
C801	254 4254 941	Electrolytic 100 μ F/16V	CE04W1C101M
C802	254 4327 904	Electrolytic 1000 μ F/6.3V	CE04W0J102M (SMG)
C803	254 4254 941	Electrolytic 100 μ F/16V	CE04W1C101M
C805,806	254 4254 912	Electrolytic 22 μ F/16V	CE04W1C220M
C807,808	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
C809	254 4260 948	Electrolytic 1 μ F/50V	CE04W1H010M
C814	254 4327 904	Electrolytic 1000 μ F/6.3V	CE04W0J102M (SMG)
OTHER PARTS GROUP			
	205 0343 058	5P Conn.Base(KR-PH)	
	204 8309 004	4P Pin Jack (C-GND)	

1U-2486B VOLUME UNIT (DRA-545R)

Ref. No.	Part No.	Part Name	Remarks
RESISTORS GROUP			
VR251	211 0586 001	Variable 100kohm	V1620V25FB104R
CAPACITORS GROUP			
C272	253 1181 917	Ceramic 0.022 μ F/50V	CK45F1H223Z
C273,274	254 4254 909	Electrolytic 10 μ F/16V	CE04W1C100M
OTHER PARTS GROUP			
	205 0697 089	JL Connector(F-E)	
	001 0077 078	Vinyl Wire	

PRINTED WIRING BOARD PATTERNS

1

2

3

4


5

6

7

8

1U-2345 MAIN UNIT (DRA-545R) for U.S.A., Canada, Australia and Multi-Voltage models

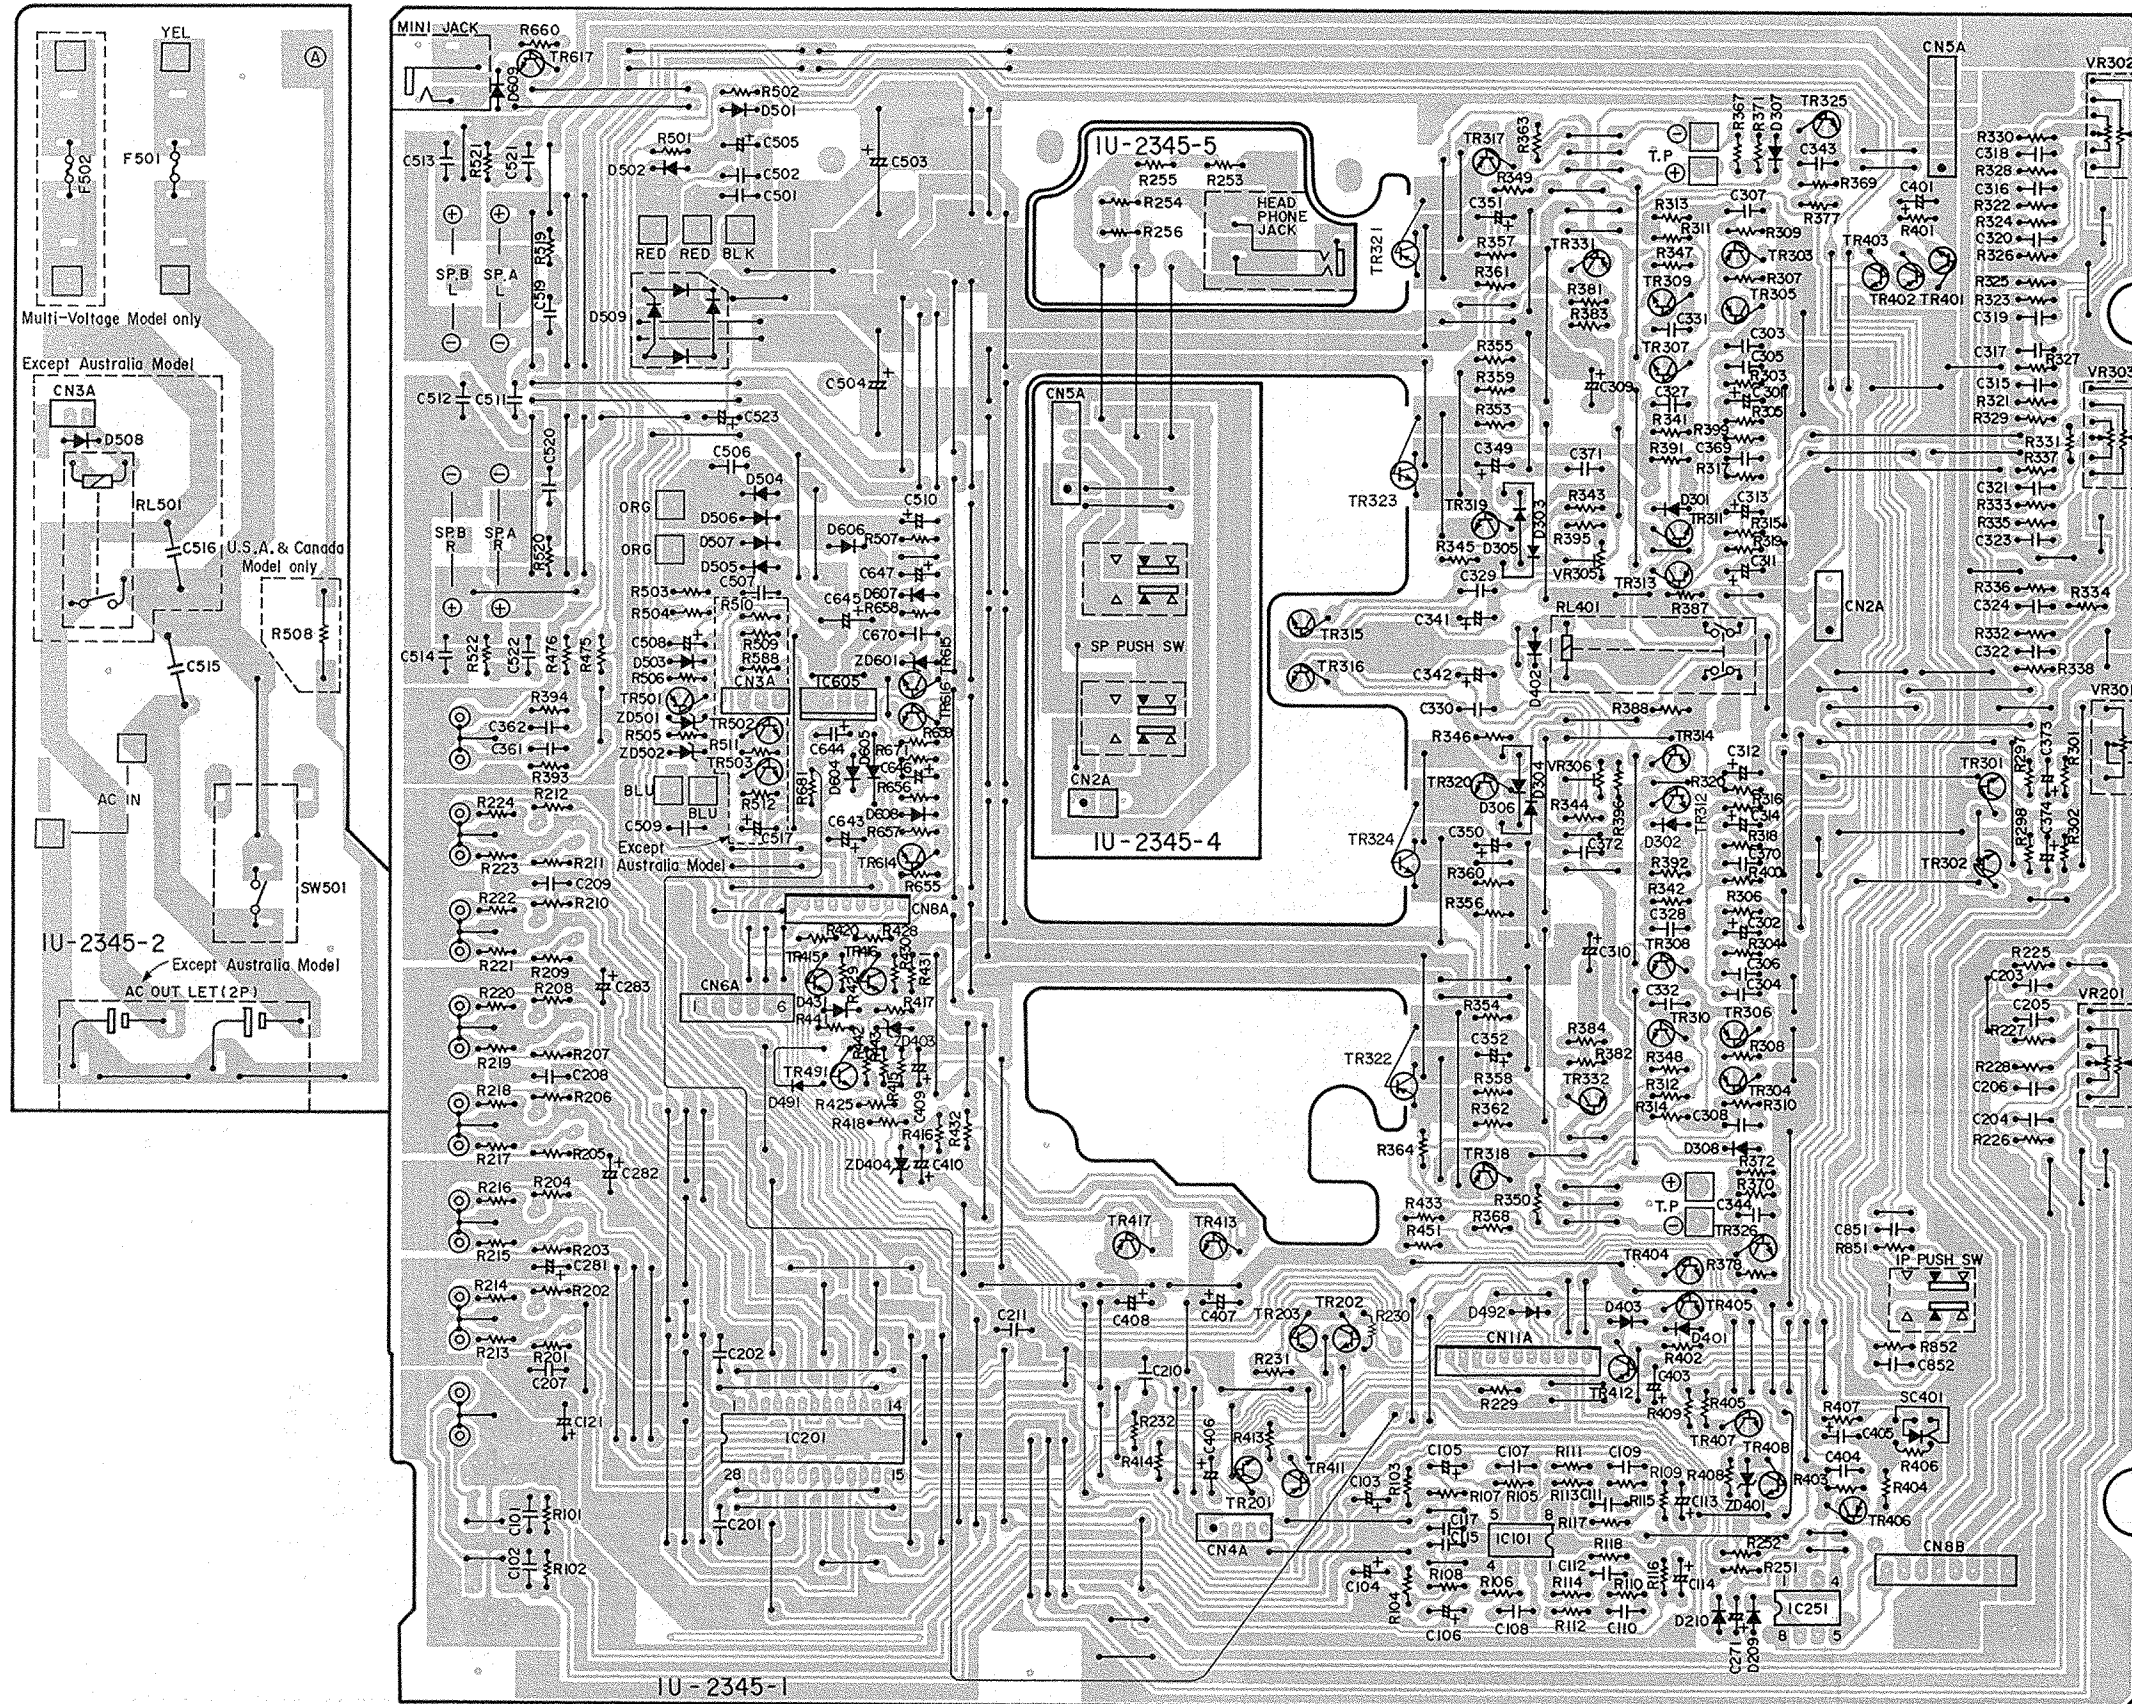

A
B
C
D
E

1U-2344 MAIN UNIT (DRA-345R) for U.S.A., Canada, Australia and Multi-Voltage model


A

B

C


D

E

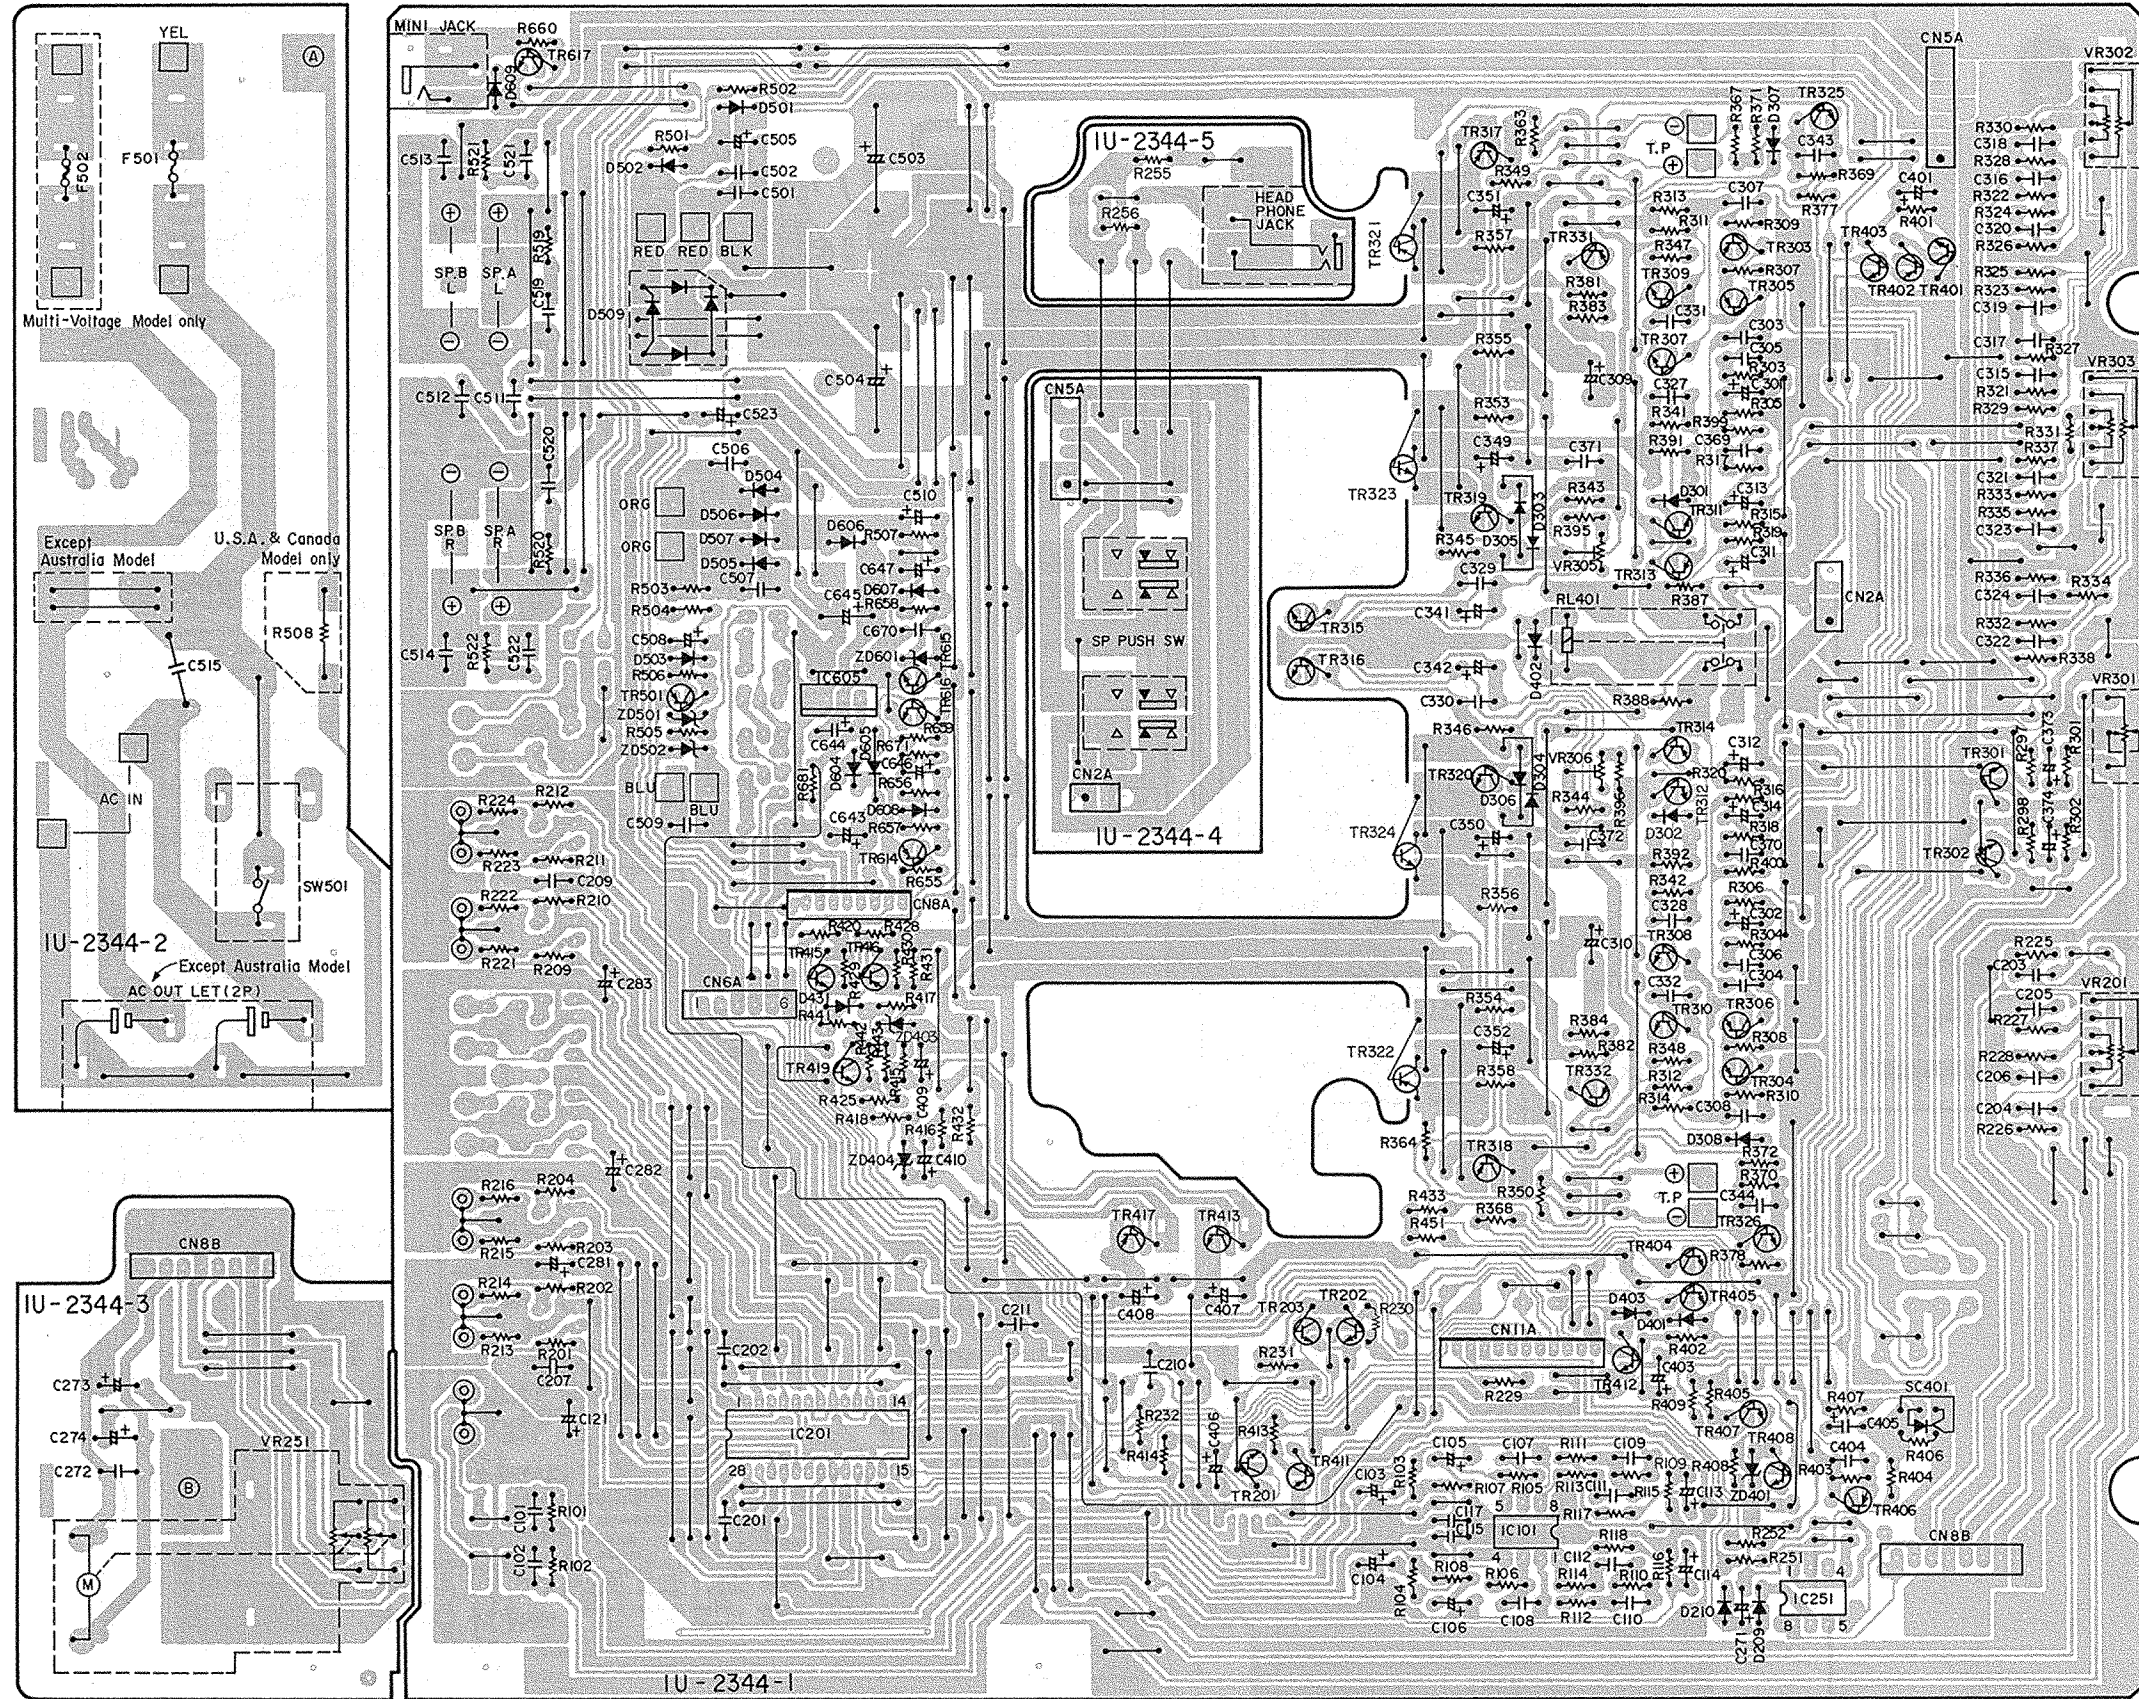

1 2 3 4 5 6 7 8


1U-2498 MAIN UNIT (DRA-345R) for Europe and U.K. model

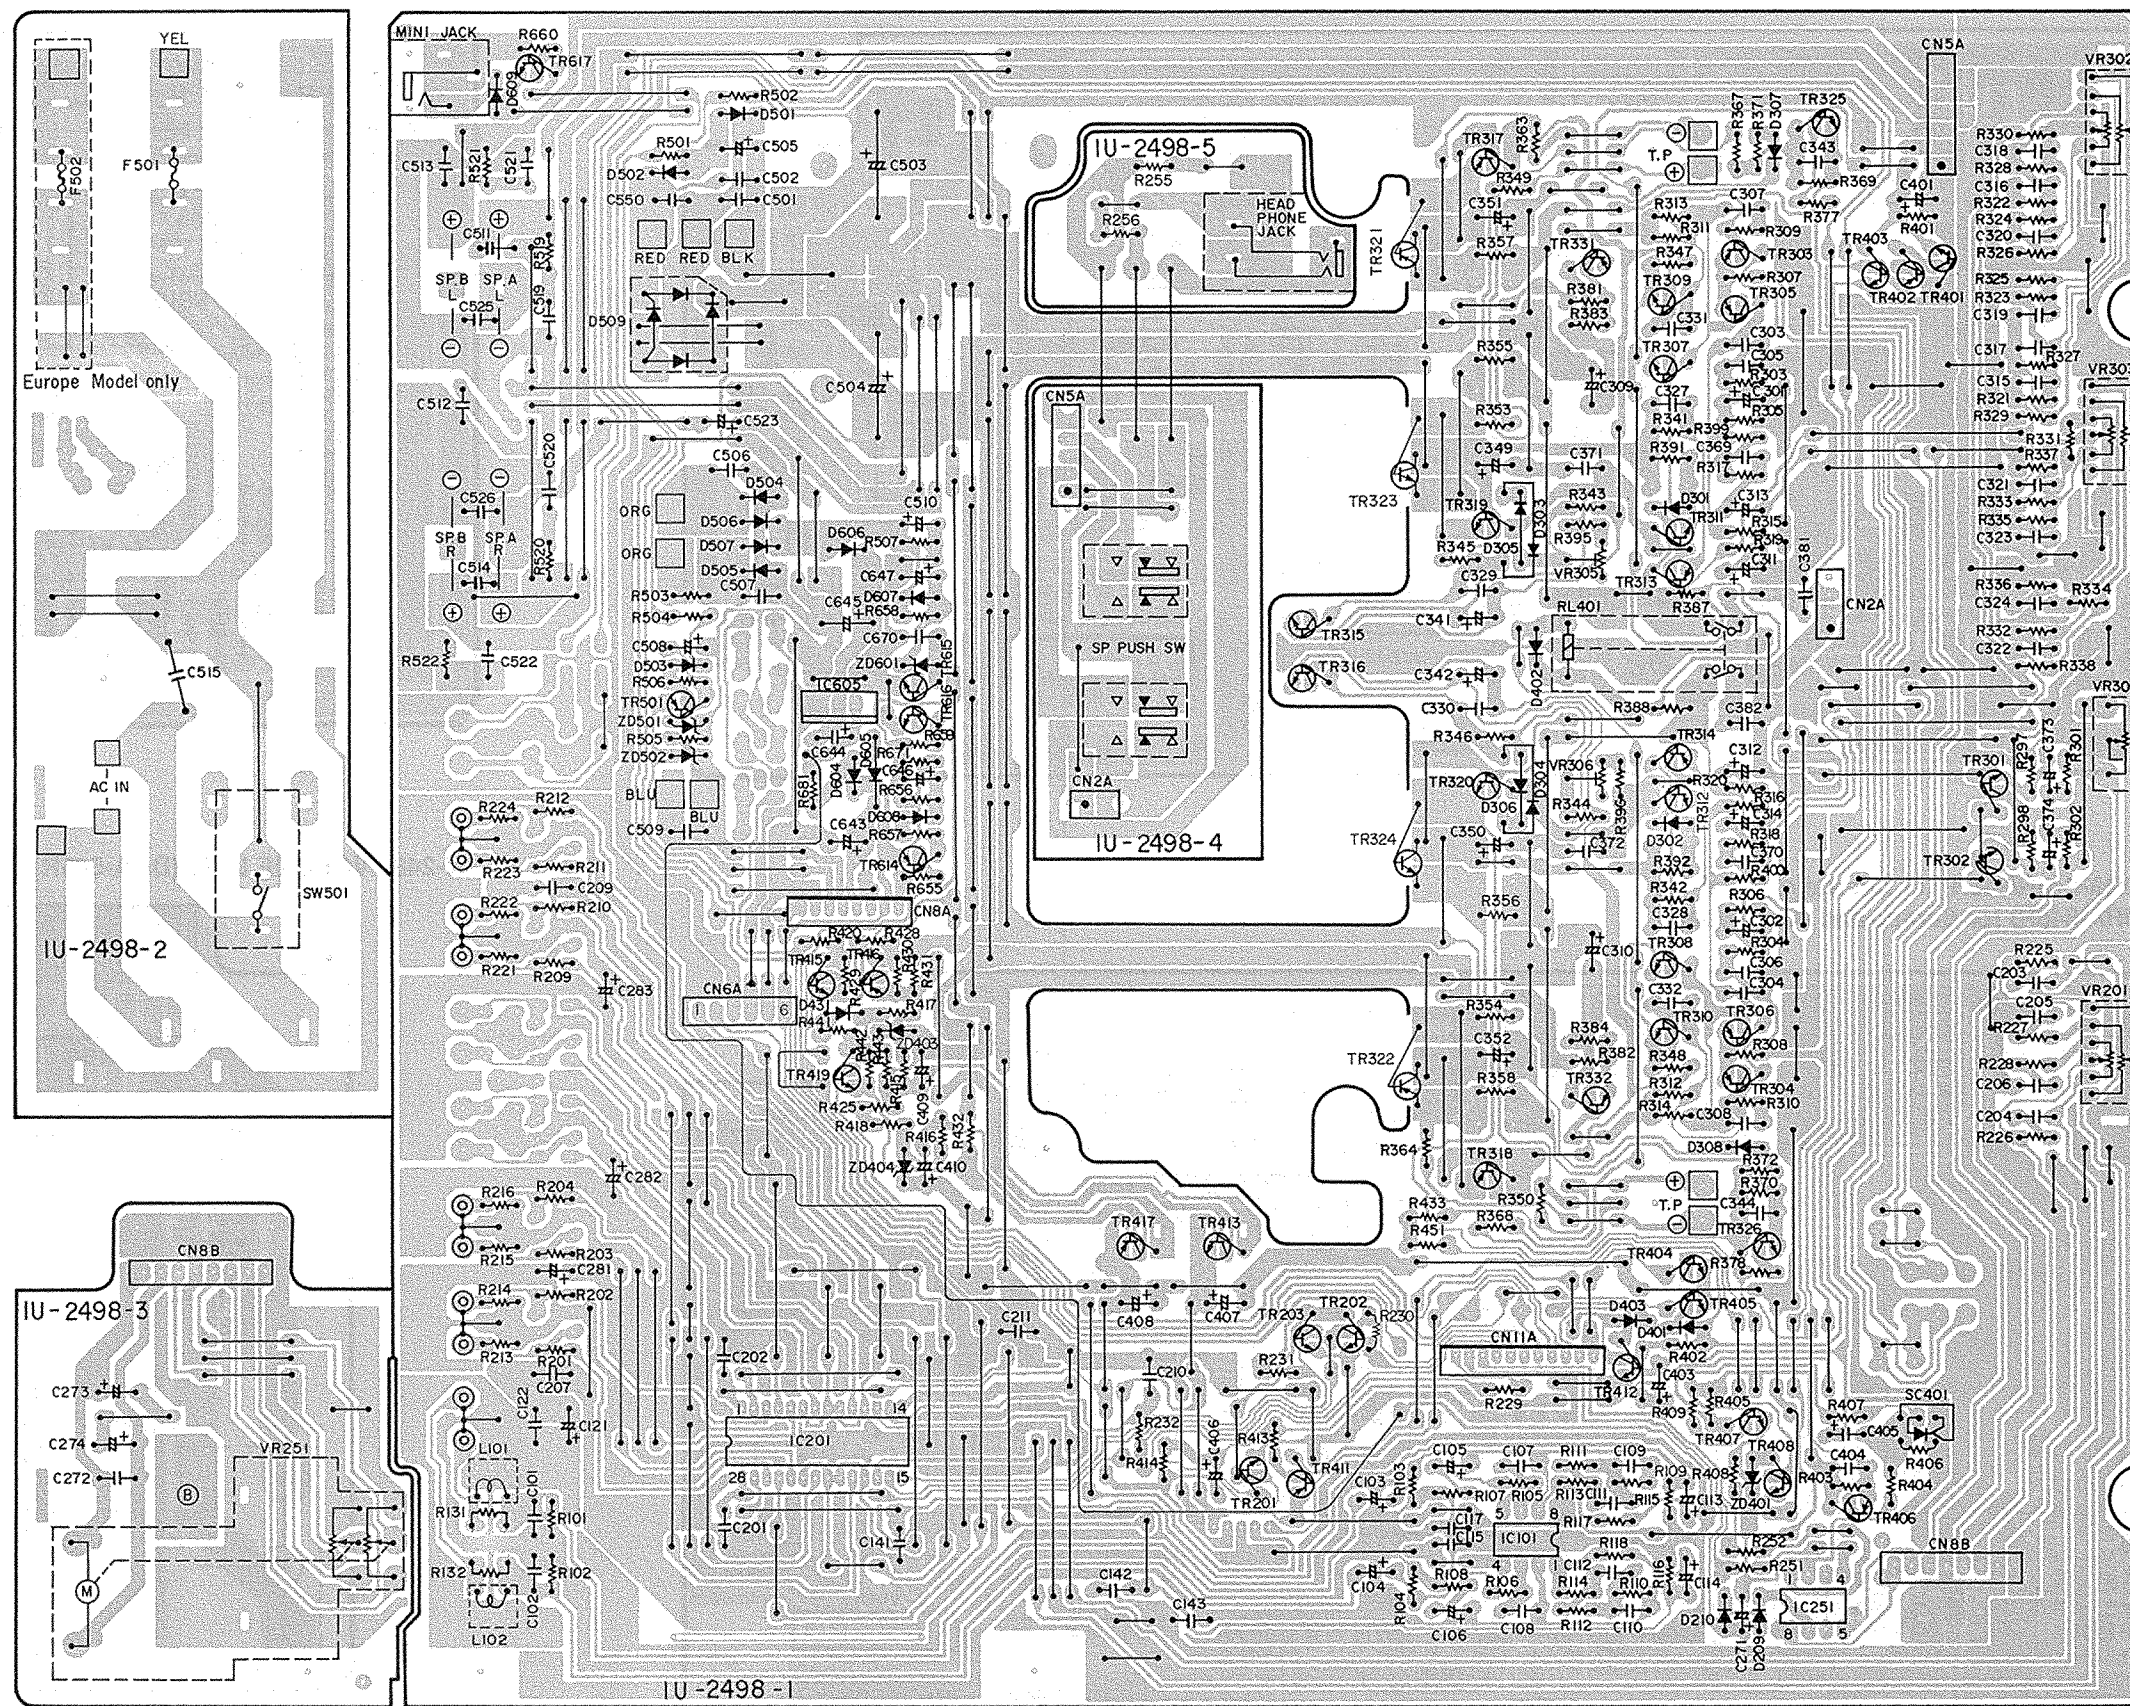


A
B
C
D
E

1 2 3 4 5 6 7 8


1U-2347 TUNER UNIT (DRA-545R/345R) for U.S.A., Canada and Multi-Voltage model

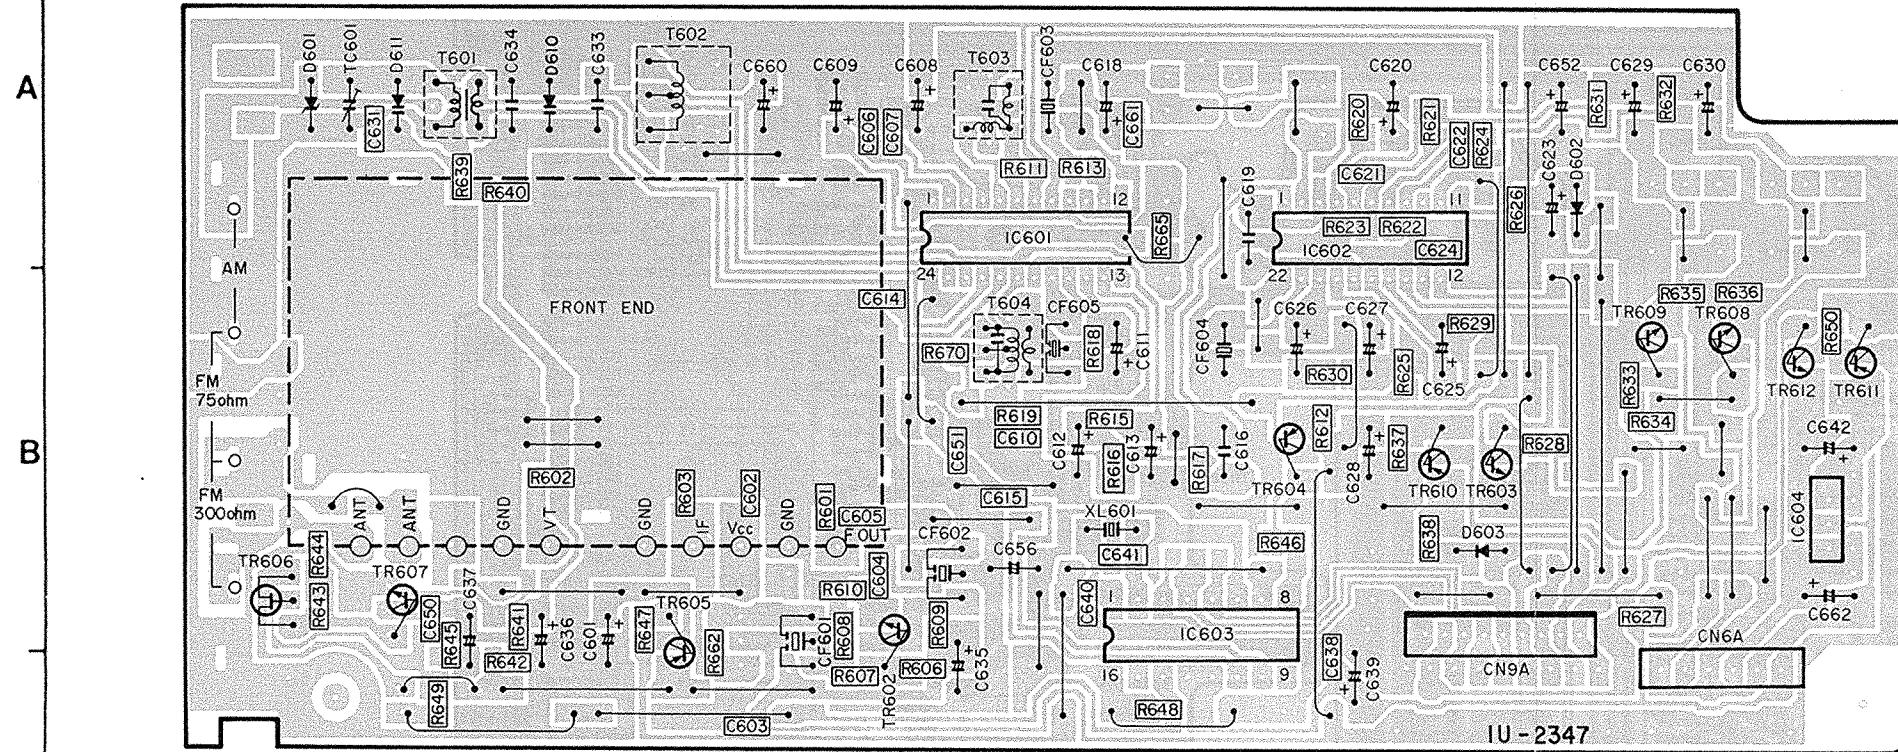


1U-2348 VIDEO UNIT (DRA-545R)

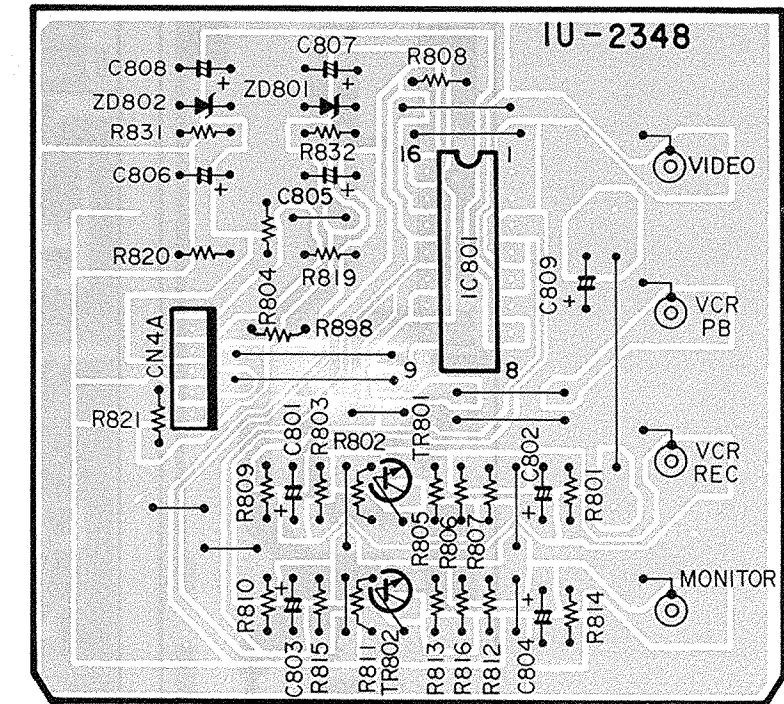

1U-2347 TUNER UNIT (DRA-545R/345R) for Australia model
1U-2500 TUNER UNIT (DRA-345R) for Europe and U.K. model

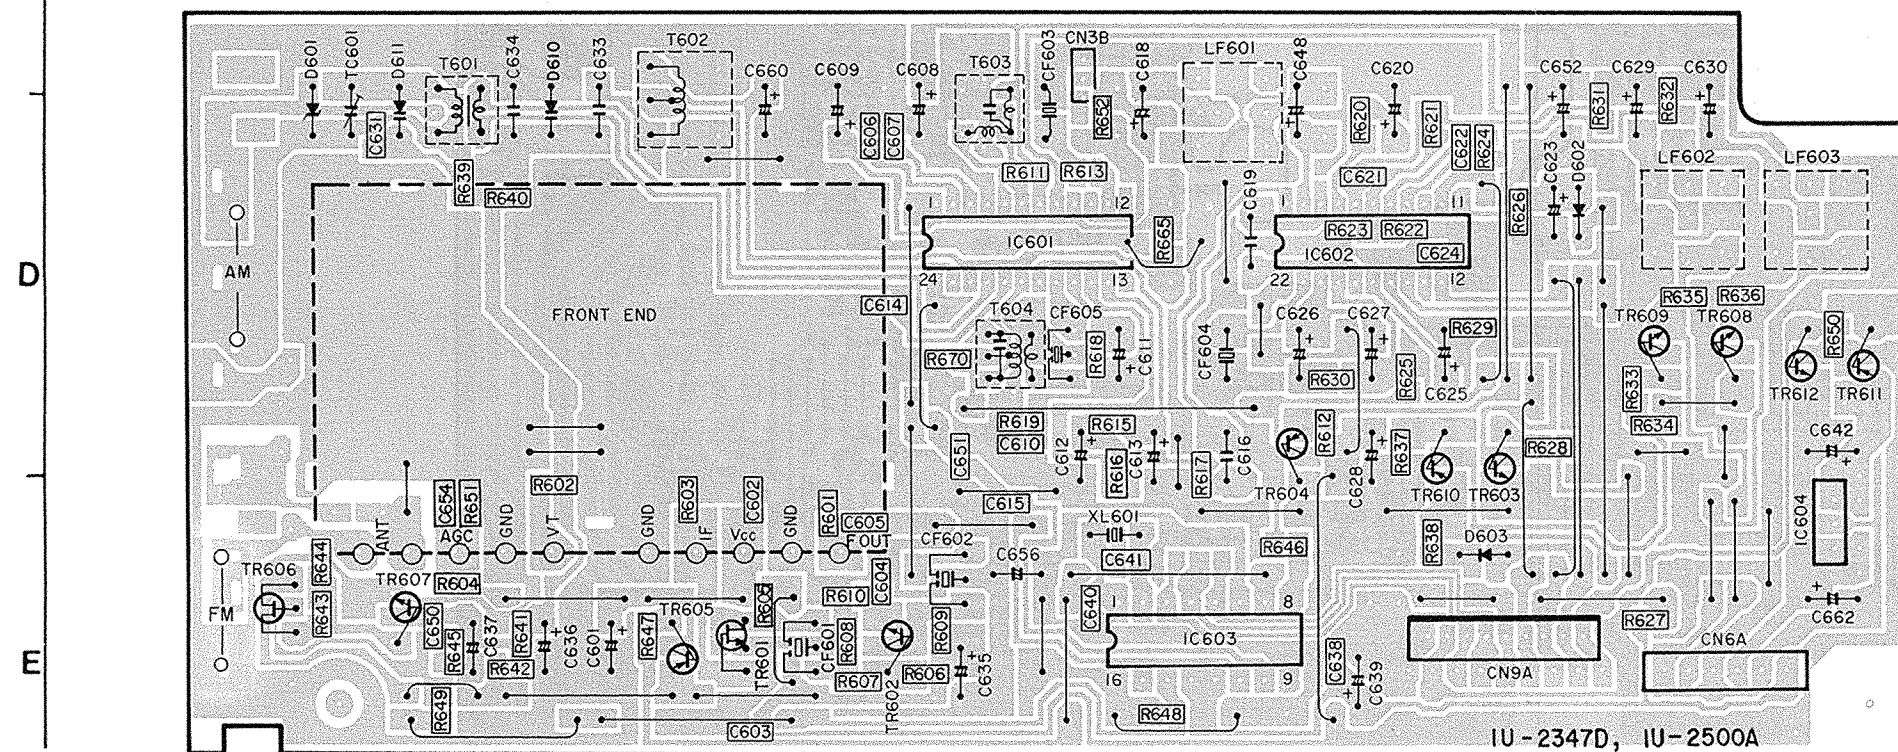


1U-2486 VOLUME UNIT (DRA-545R)

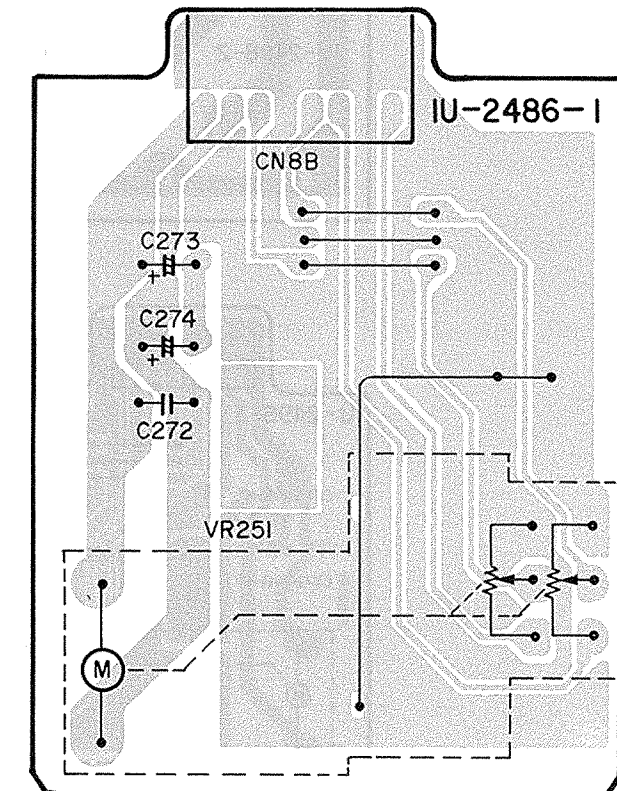


1 2 3 4 5 6 7 8

1U-2485 M-COM UNIT (DRA-545R/345R) for U.S.A., Canada, Australia and Multi-Voltage model

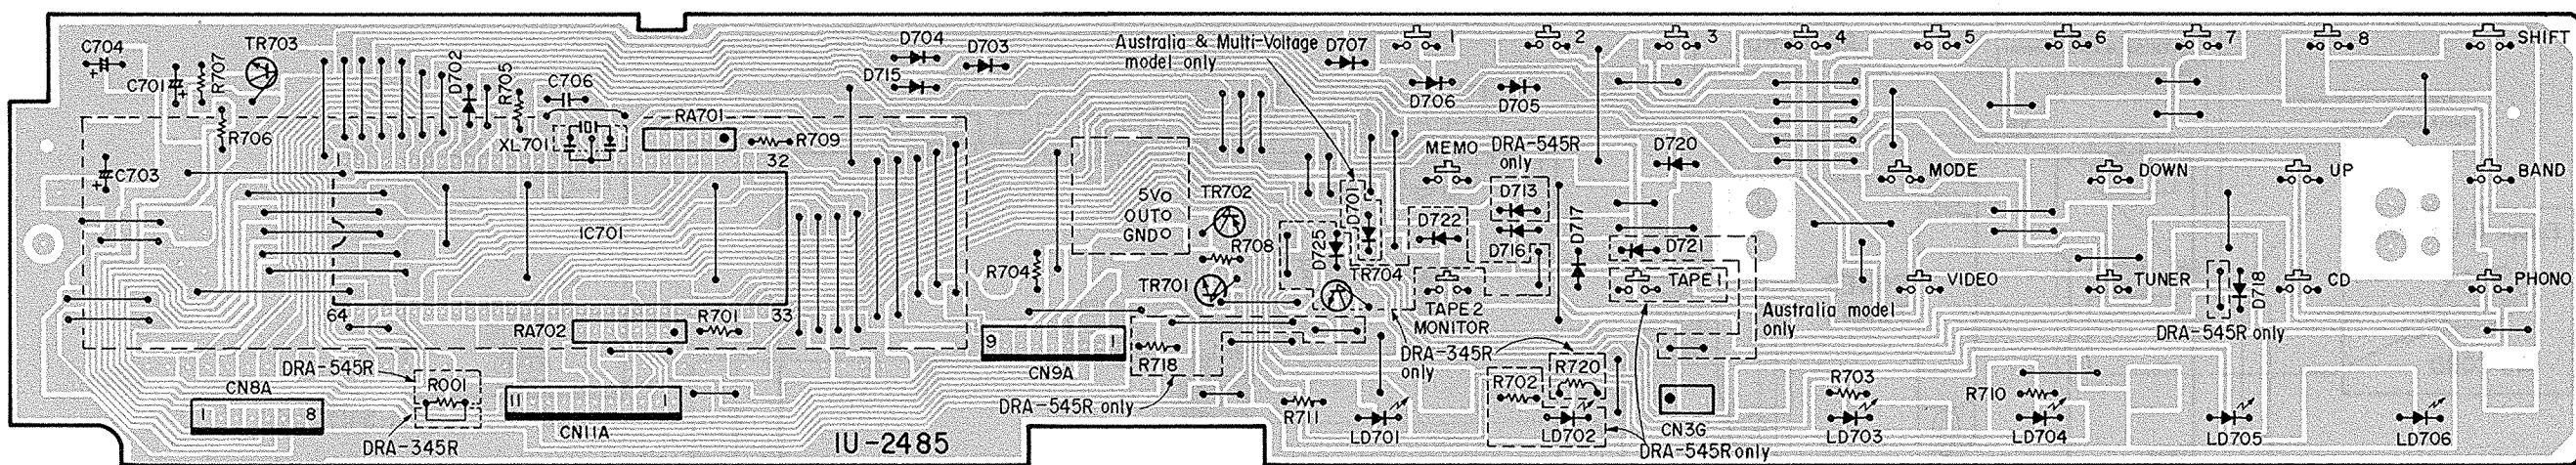



1U-2499 M-COM UNIT (DRA-345R) for Europe and U.K. model

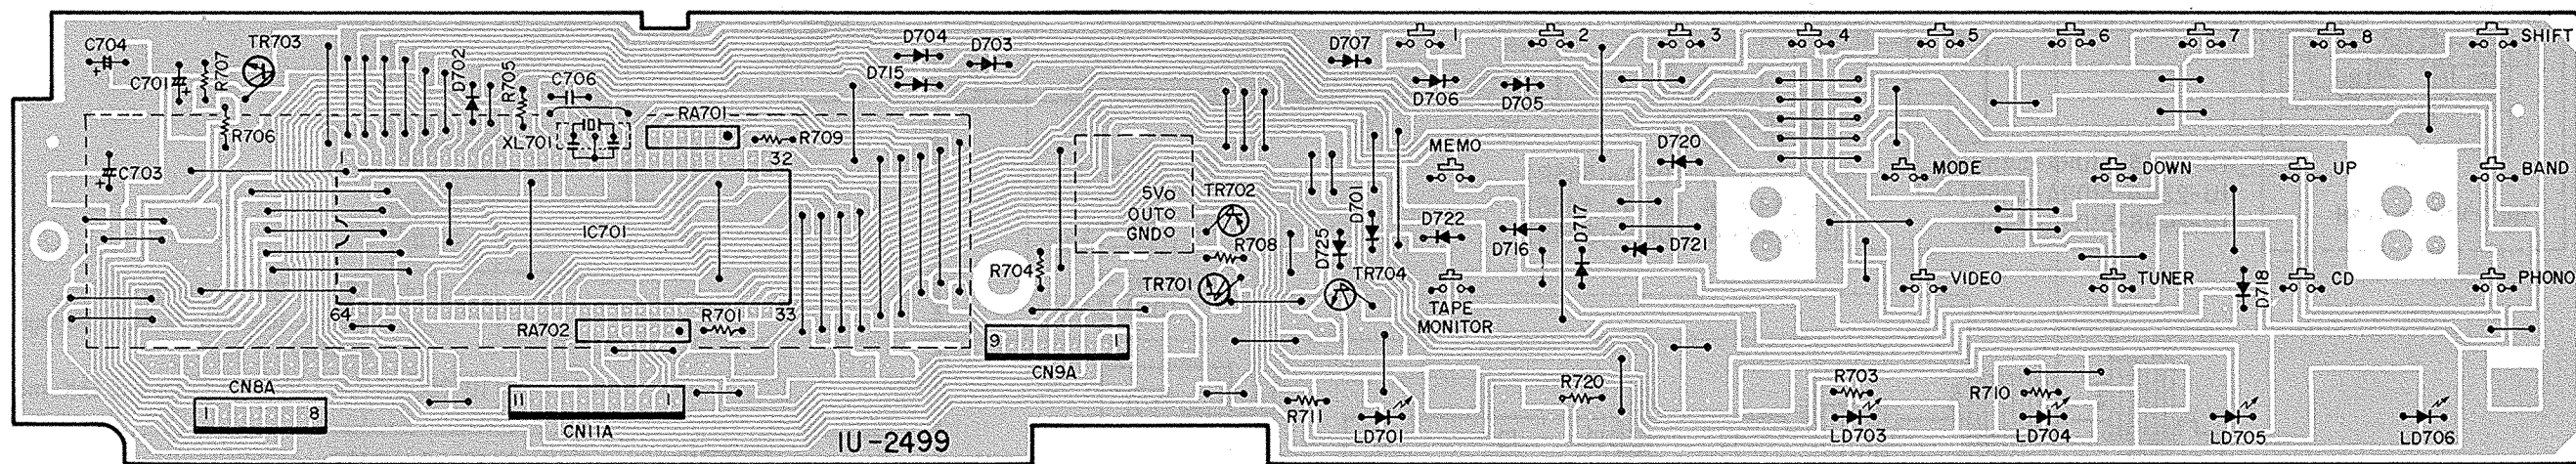

A
B
C
D
E

WIRING DIAGRAM

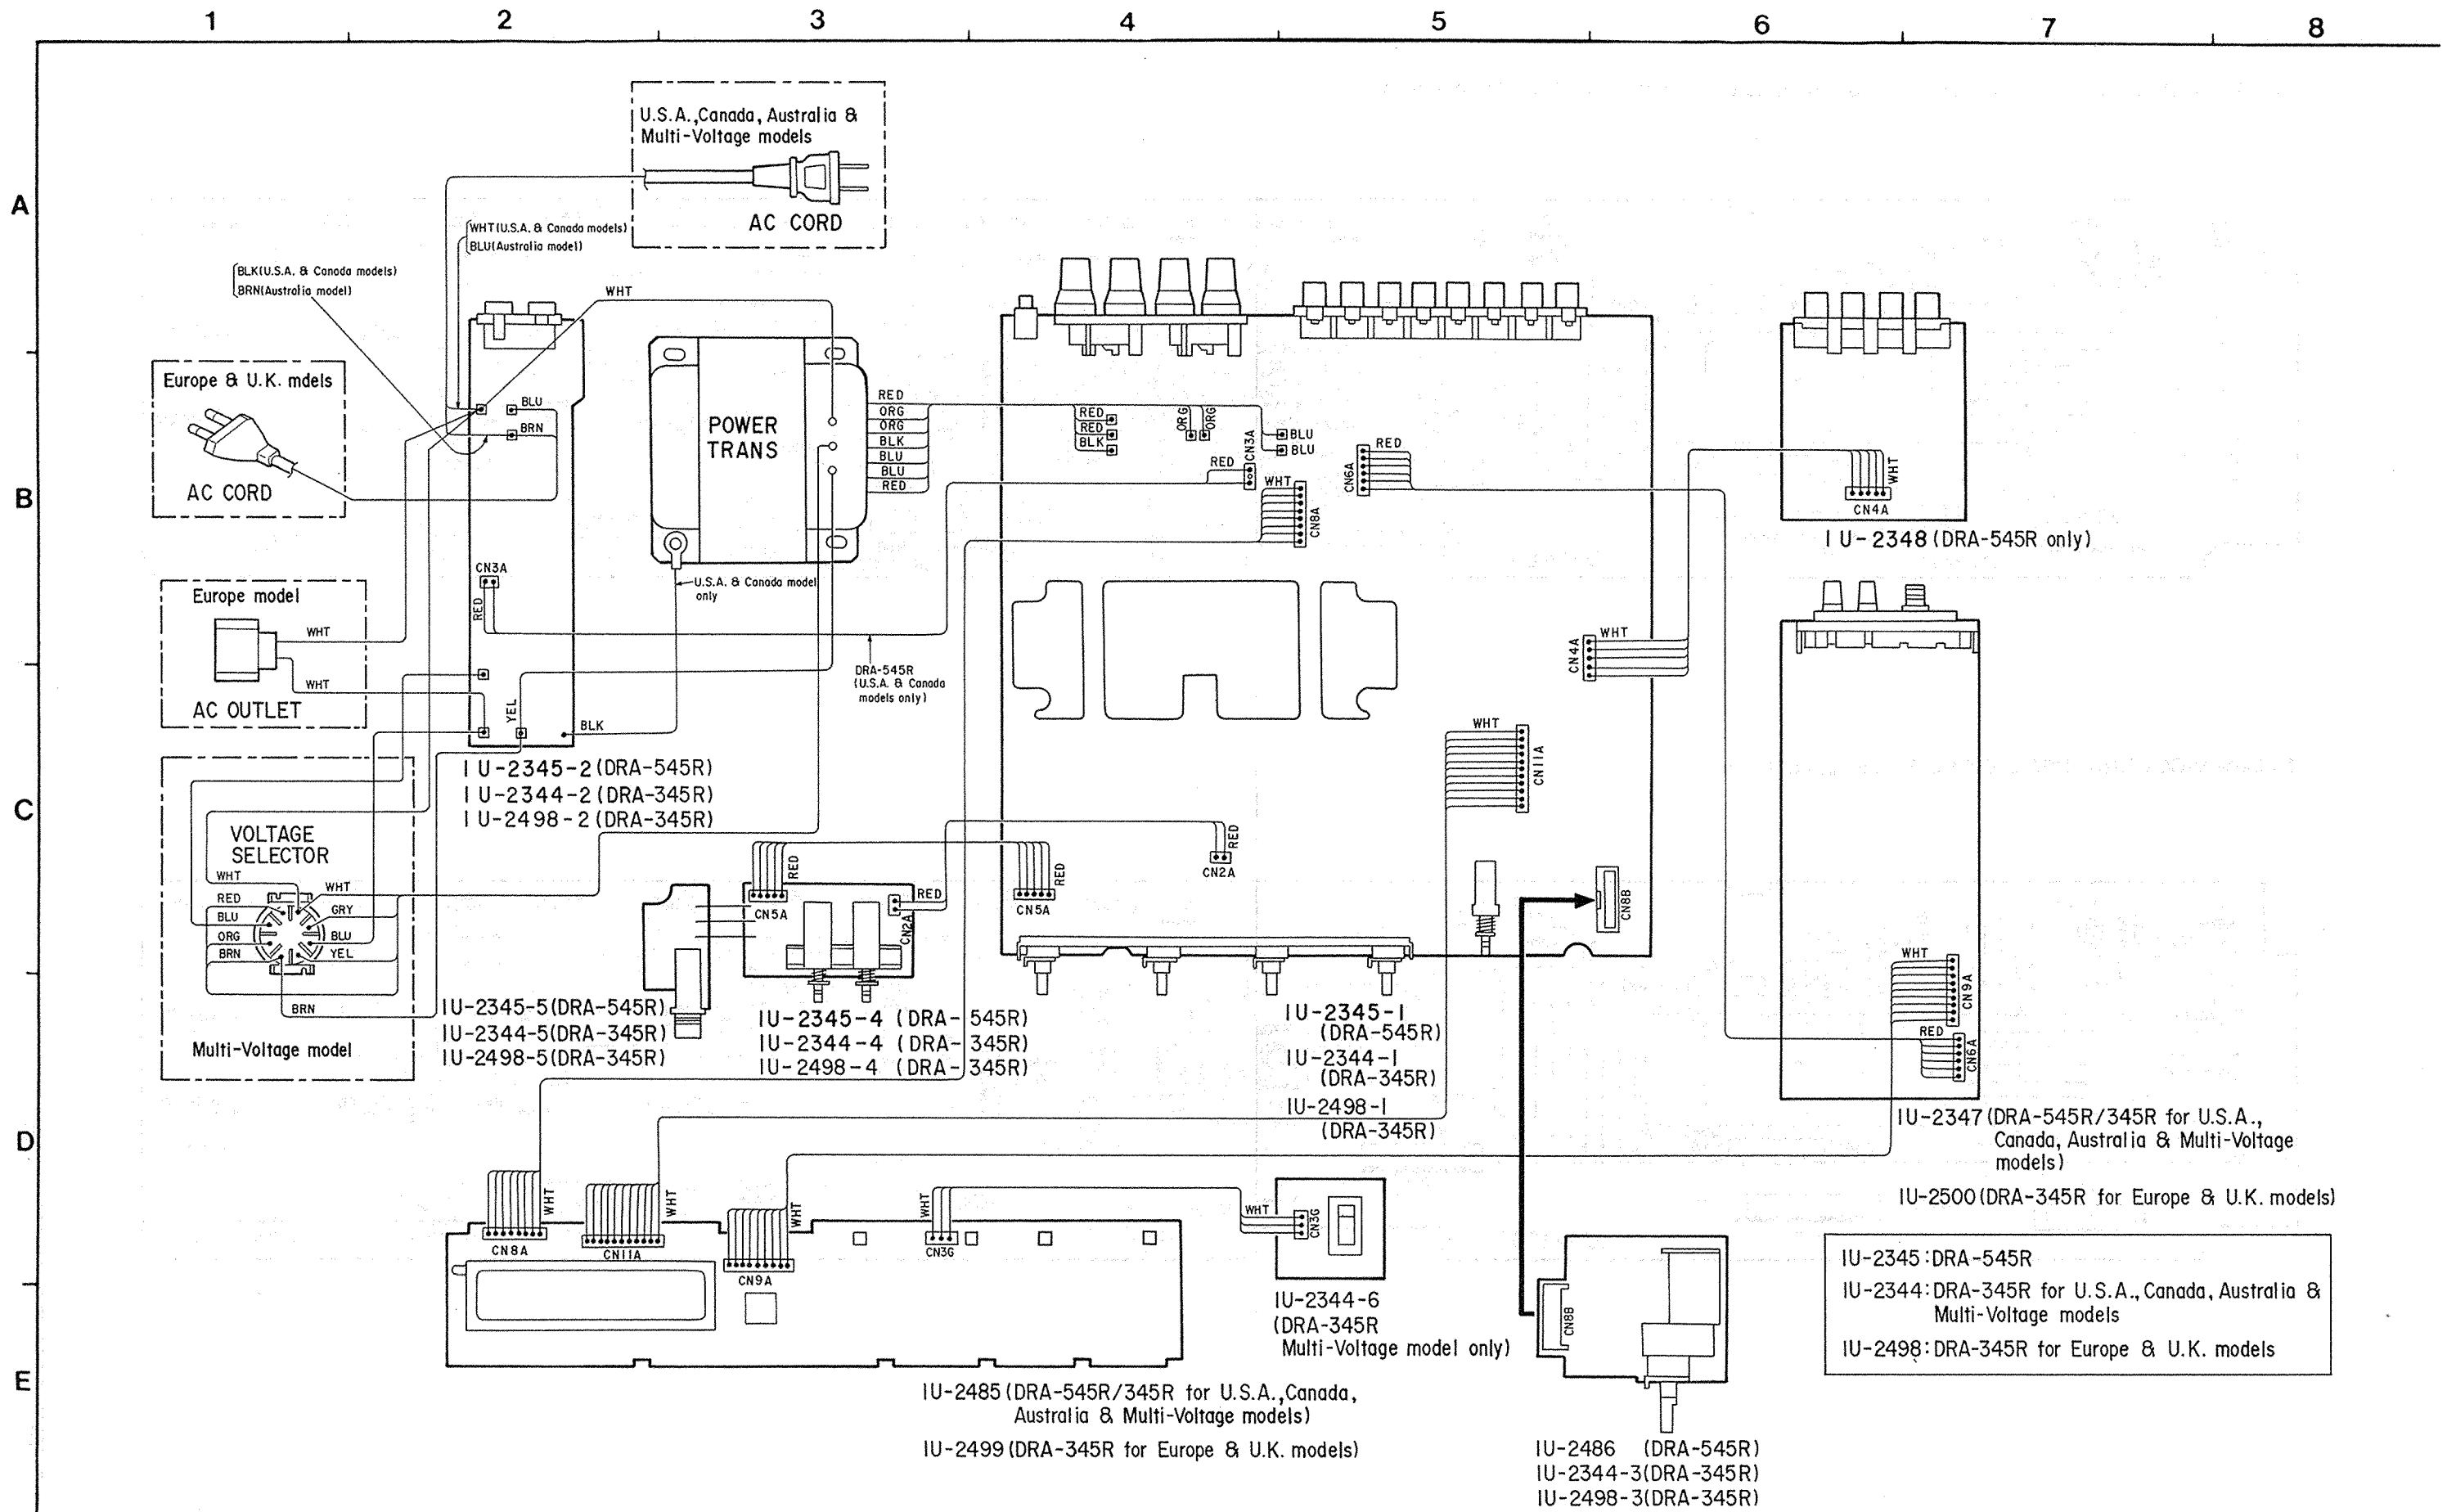

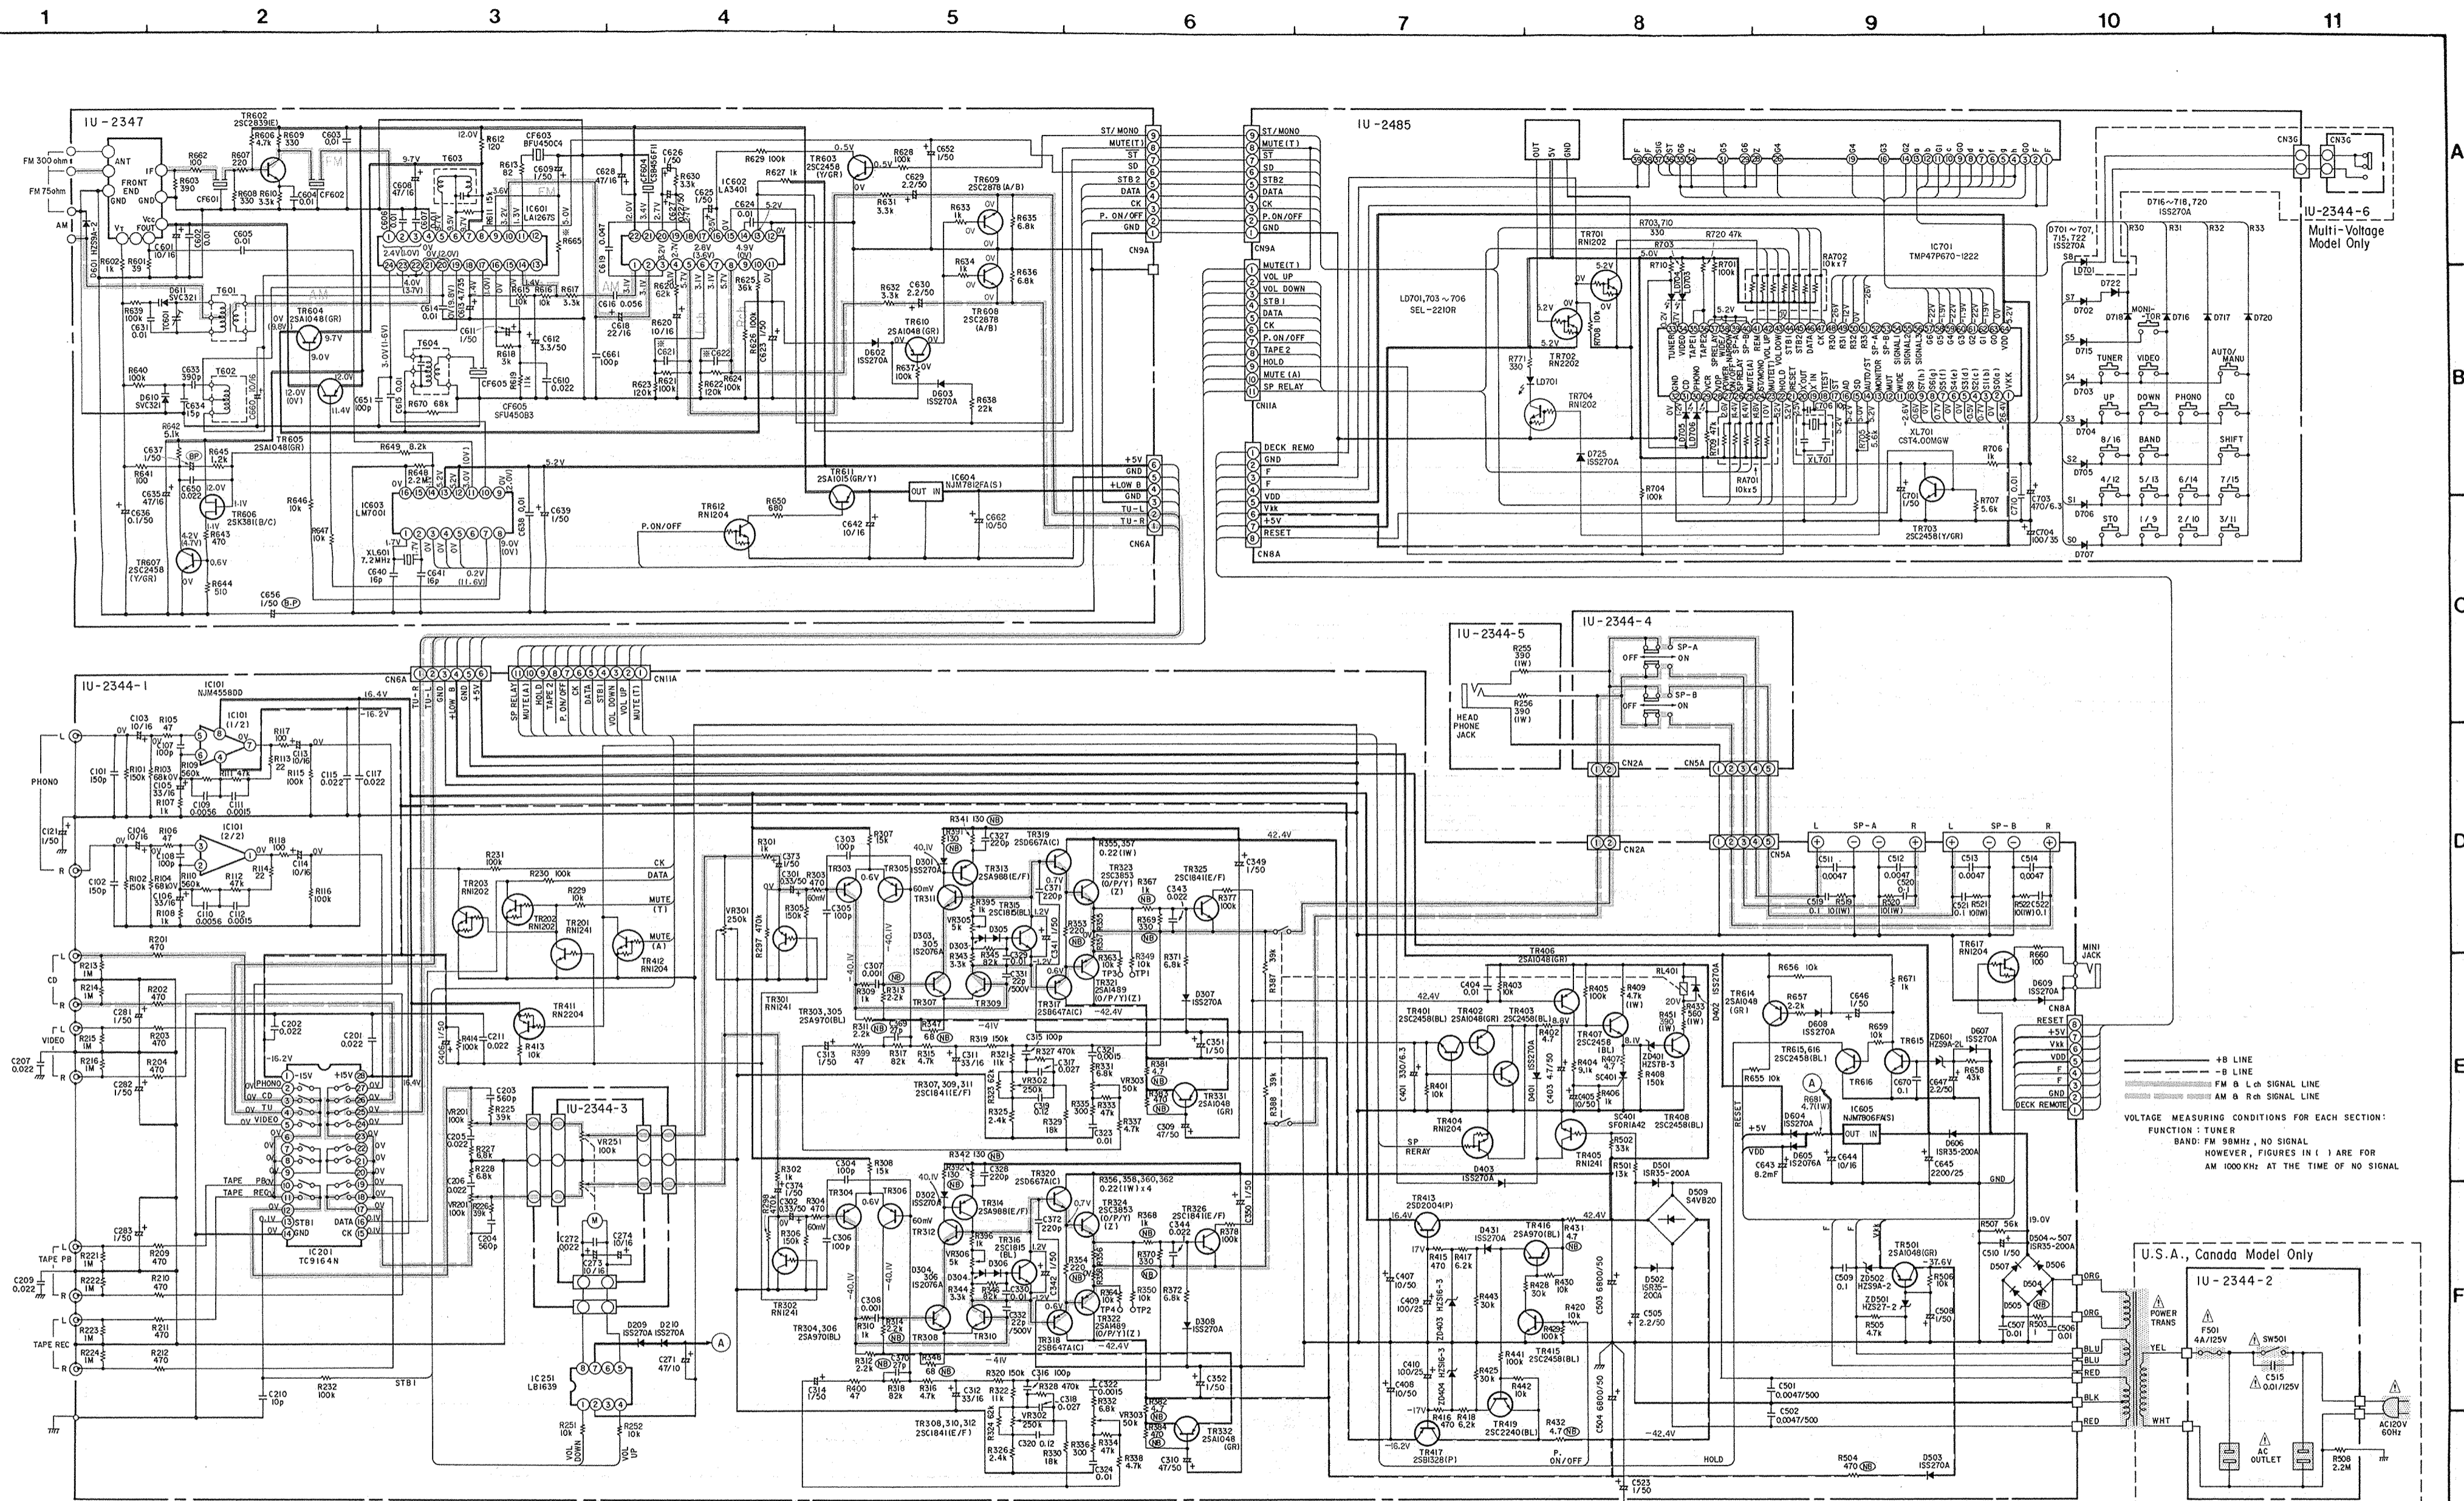

	R665	C621, 622
U.S.A. Canada	18K	750p
Multi-Voltage	39K	510p



NOTES
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM. M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

WARNING:
 Parts marked with this symbol Δ have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.


WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

VOLTAGE MEASURING CONDITIONS FOR EACH SECTION:
 FUNCTION: TUNER
 BAND: FM 98MHz, NO SIGNAL
 HOWEVER, FIGURES IN I ARE FOR
 AM 1000KHz AT THE TIME OF NO SIGNAL

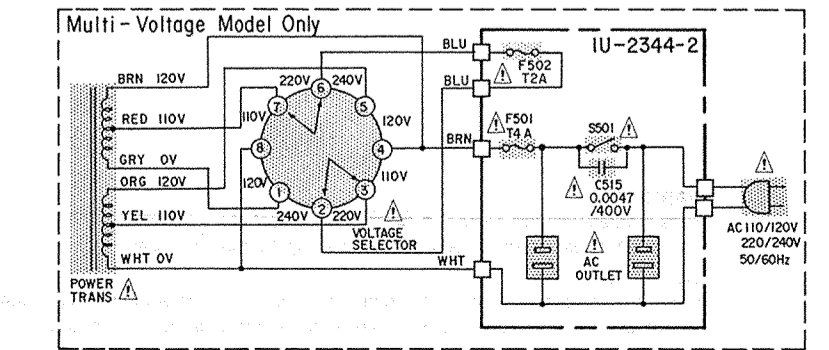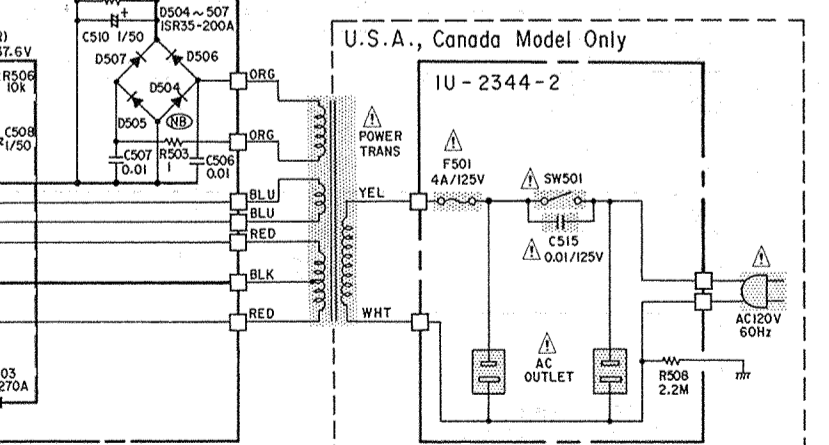

A
B
C
D
E
F
G
H

SCHEMATIC DIAGRAM (for DRA-345R) Europe, U.K., and Australia models

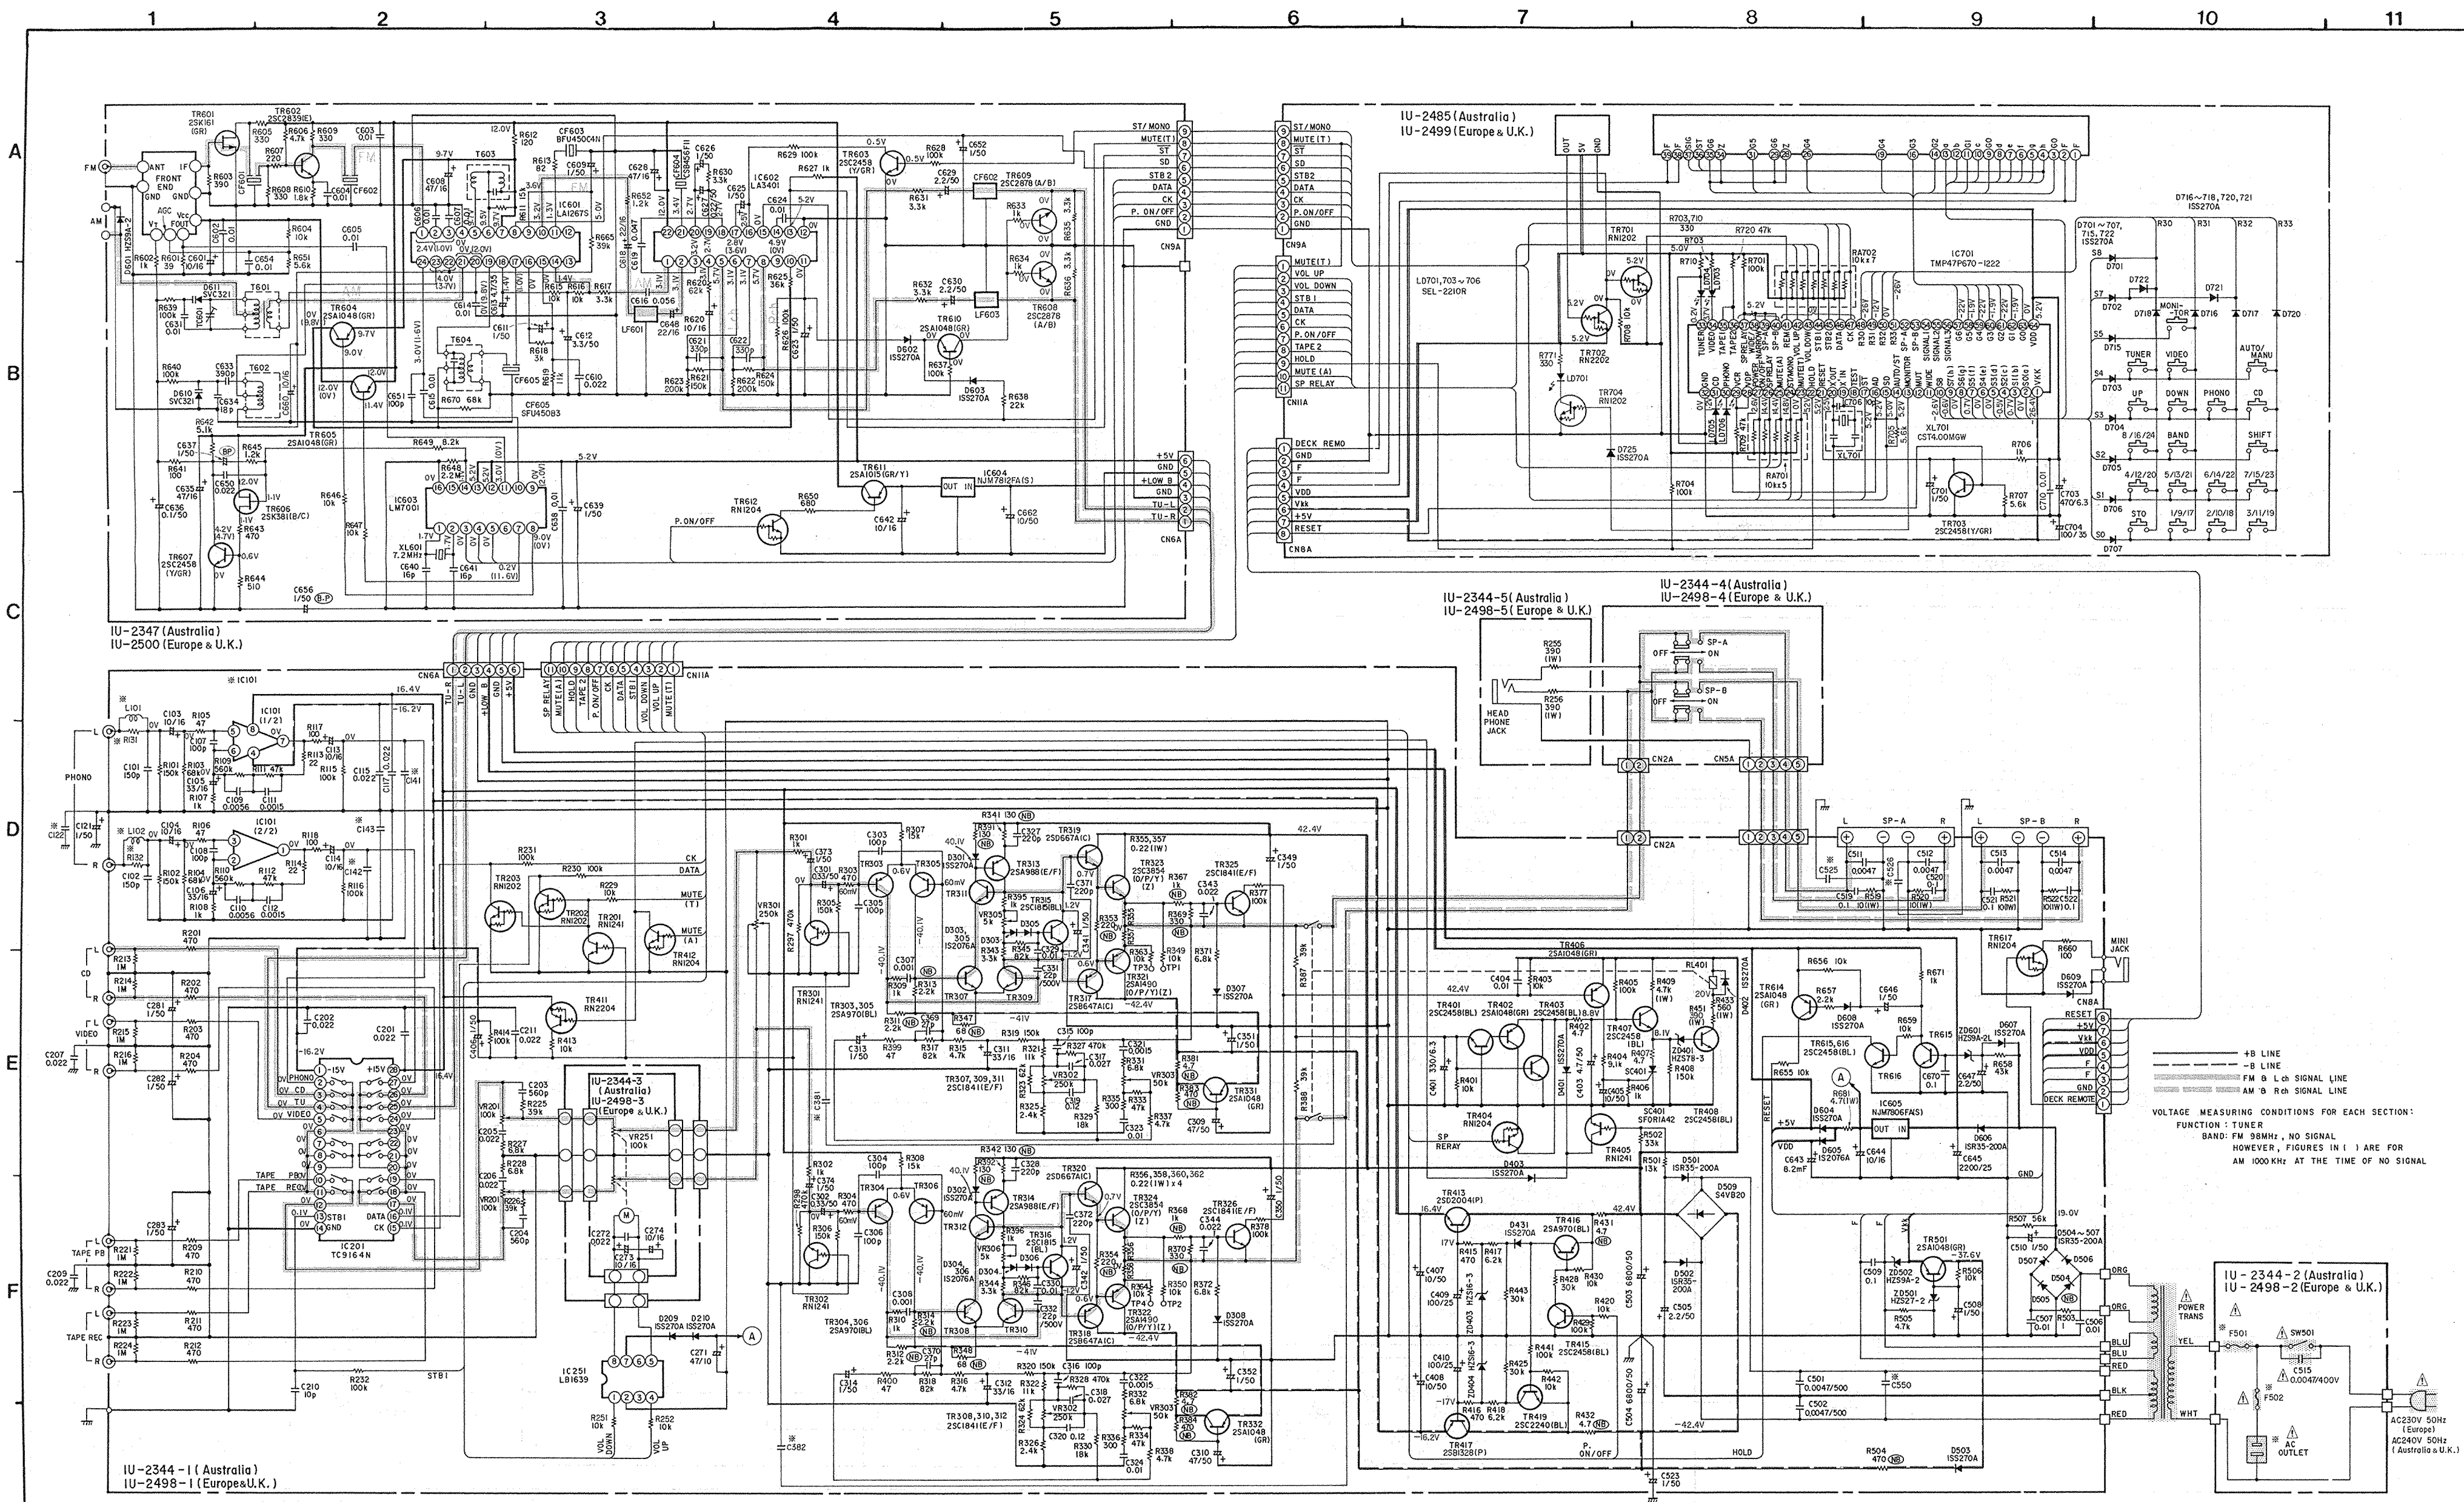

	C122	L101, 102	R131, 132	IC101	C141, 142	C143	C381, 382	C525, 526	C550	F501	F502	AC OUTLET
Europe	0.022	150µH	2.2K	NJM2082DD	220p	0.022	100p	0.01	0.1/250	T1.6A	T1A	USED
U.K.	0.022	150µH	2.2K	NJM2082DD	220p	0.022	100p	0.01	0.1/250	T1.25A	—	—
Australia	—	—	Jumper	NJM4558DD	—	—	—	—	—	T1.25A	—	—


WARNING:
Parts marked with this symbol have critical characteristics.
Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
DO NOT return the unit to the customer until the problem is located and corrected.

NOTES
ALL RESISTANCE VALUES IN OHM. k=1,000 OHM, M=1,000,000 OHM
ALL CAPACITANCE VALUES IN MICRO FARAD. p=MICRO-MICRO FARAD
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

SCHEMATIC DIAGRAM (for DRA-545R) U.S.A., Canada and Multi-Voltage models

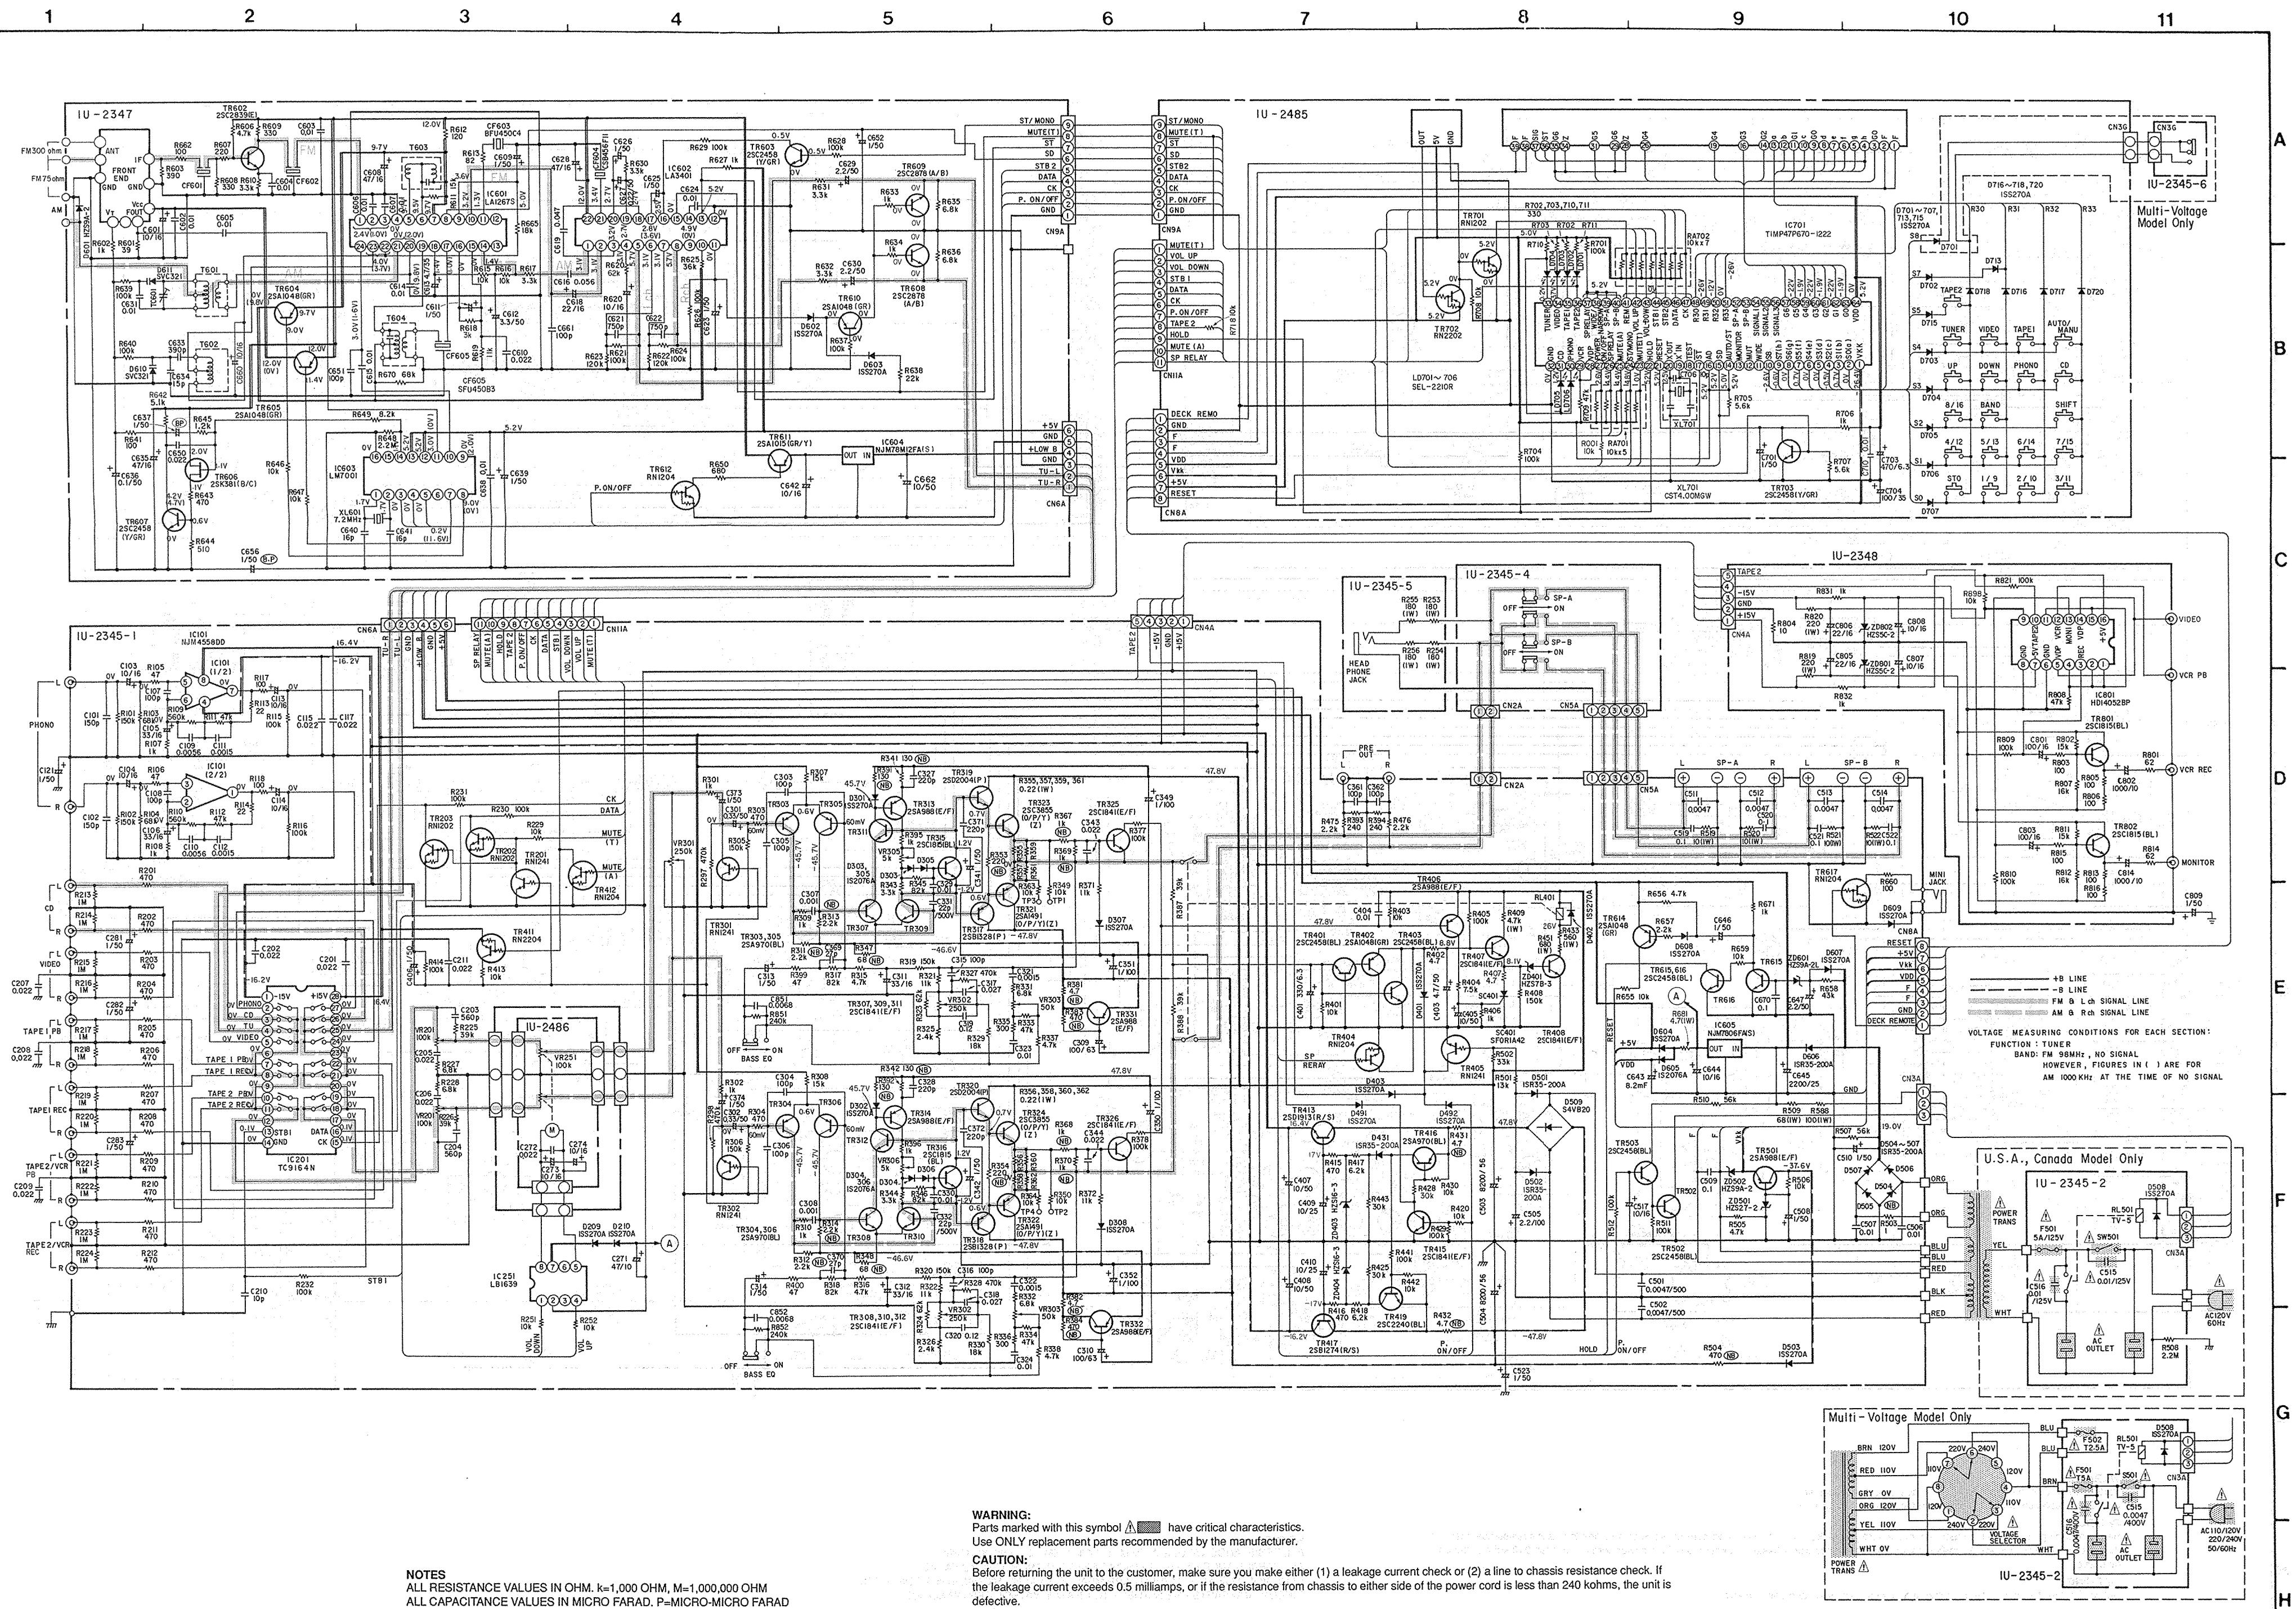


NOTES
 ALL RESISTANCE VALUES IN OHM. K=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-SIGNAL FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

WARNING:
 Parts marked with this symbol have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

SCHEMATIC DIAGRAM (for DRA-545R) Australia model

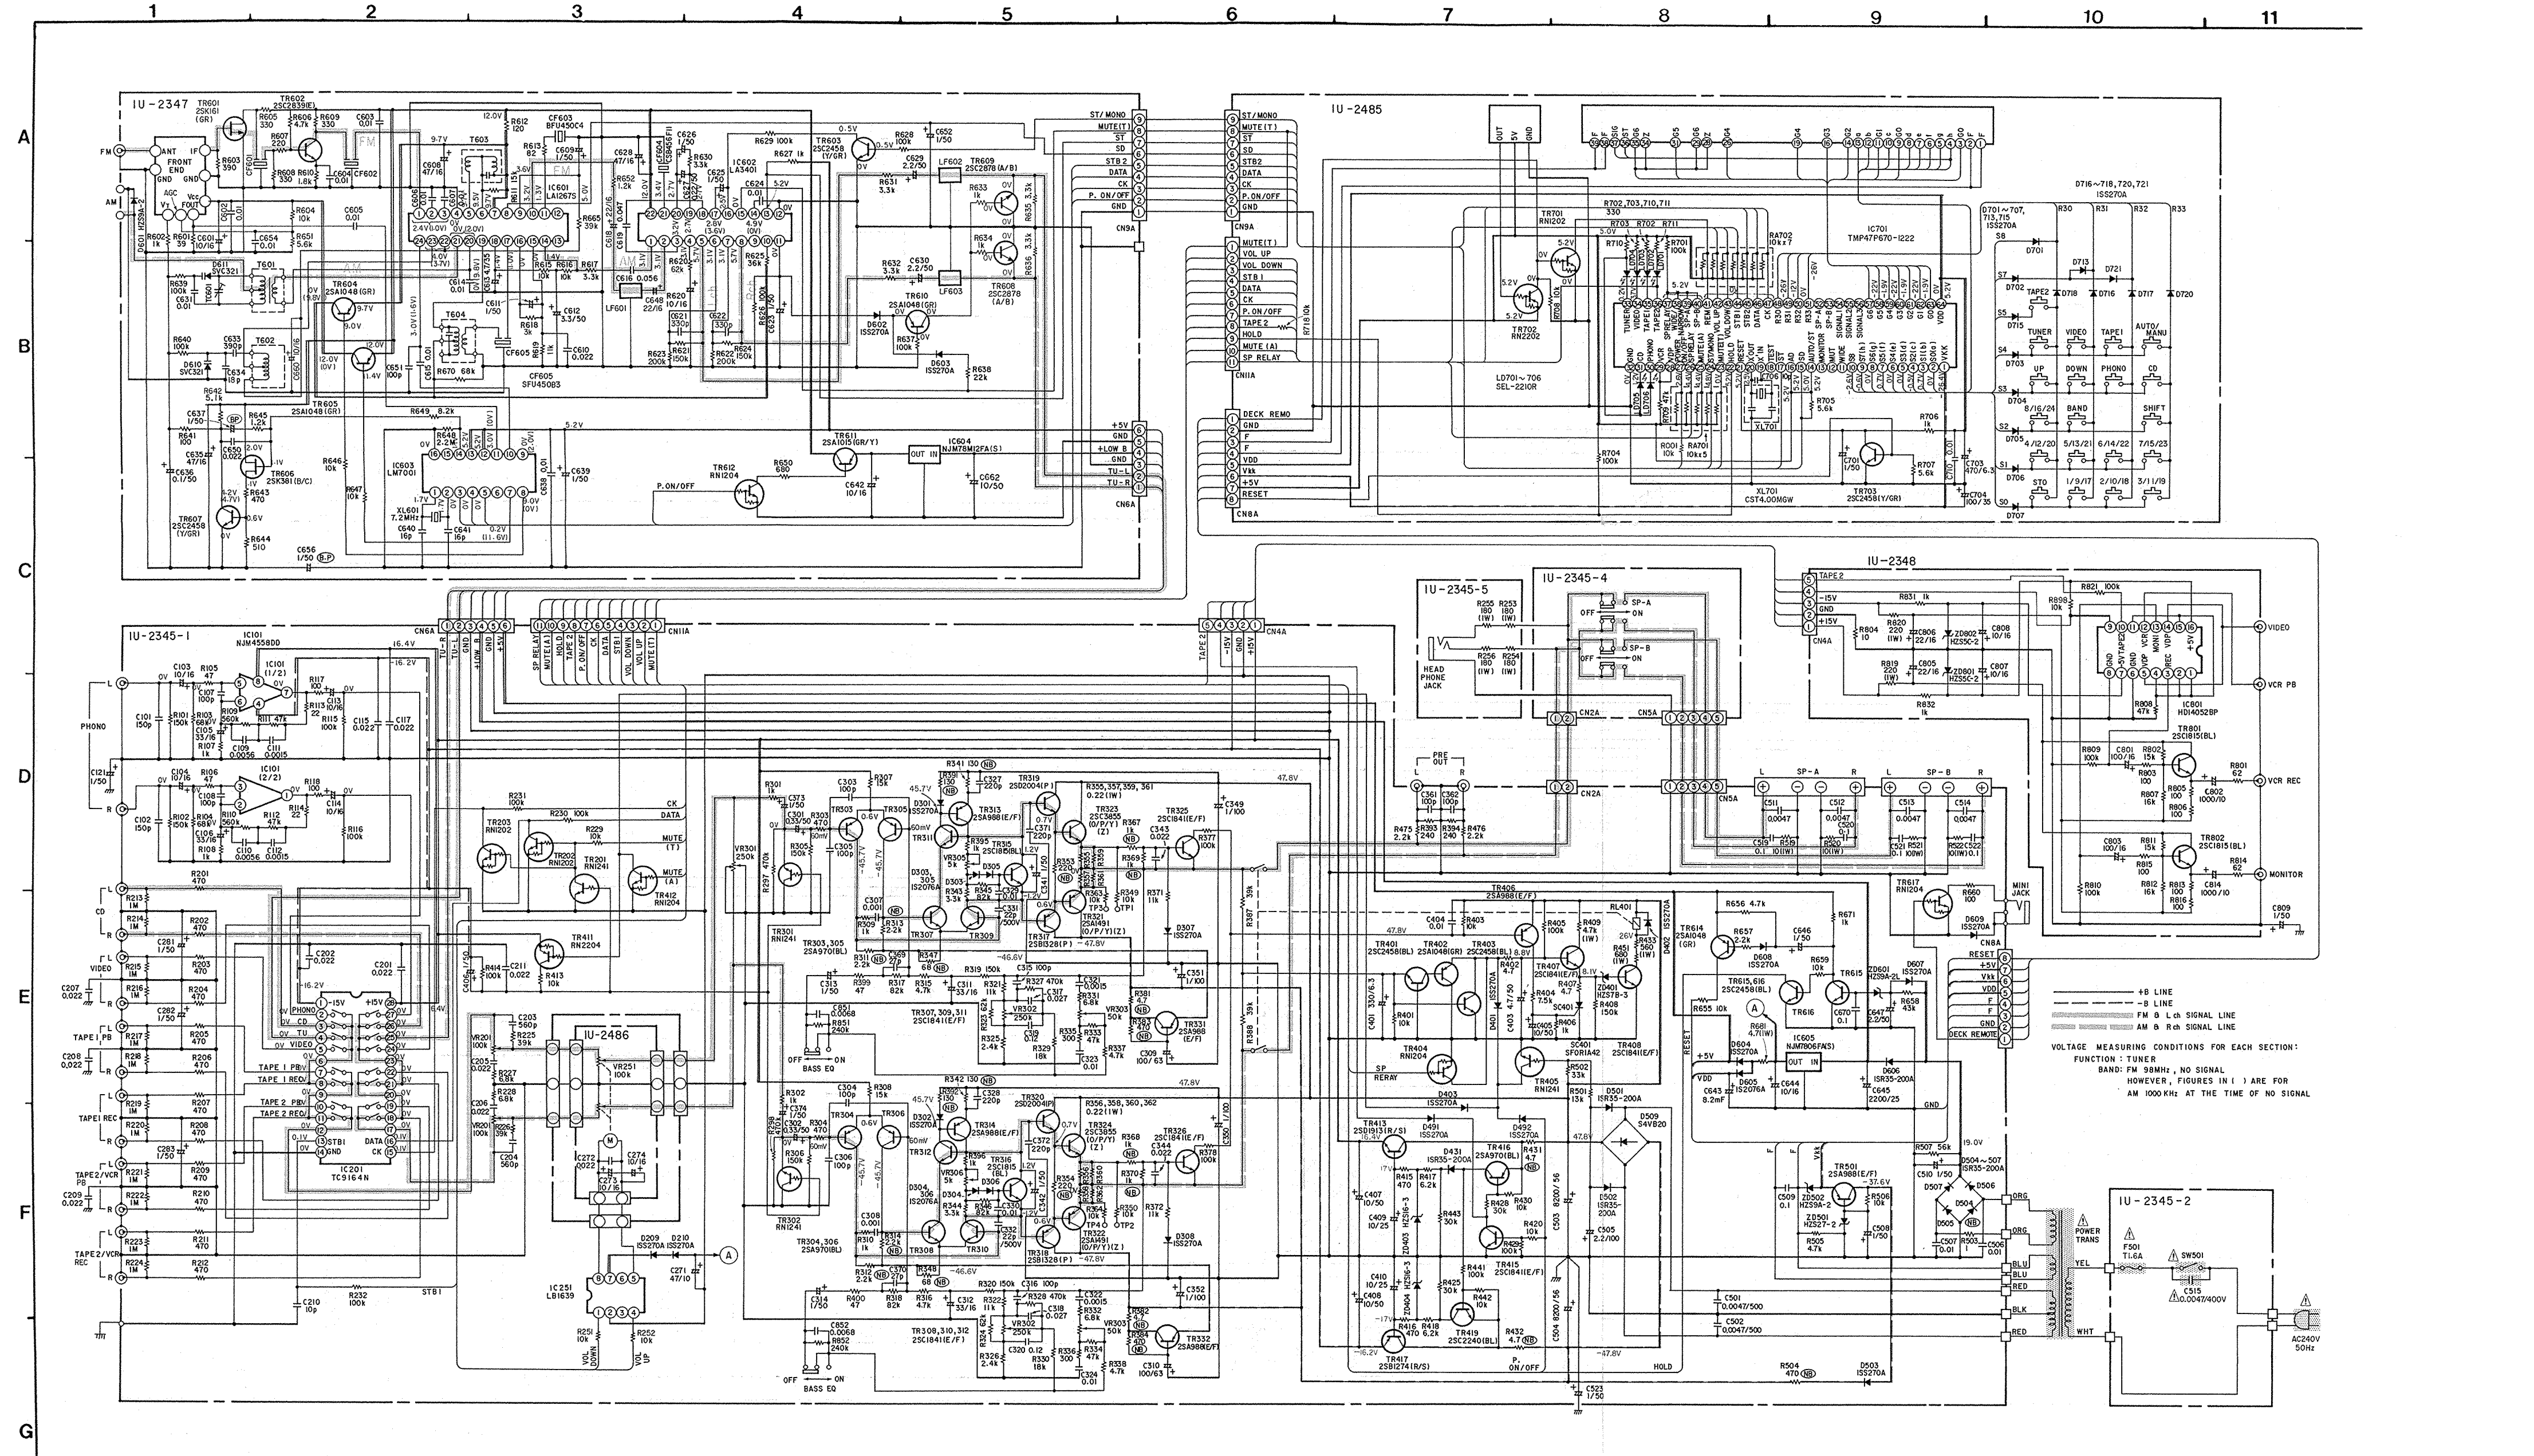

VOLTAGE MEASURING CONDITIONS FOR EACH SECTION:
 FUNCTION: TUNER
 BAND: FM 98MHz, NO SIGNAL
 HOWEVER, FIGURES IN () ARE FOR
 AM 1000KHz AT THE TIME OF NO SIGNAL

WARNING:
 Parts marked with this symbol have critical characteristics.
 Use ONLY replacement parts recommended by the manufacturer.

CAUTION:
 Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamperes, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.


WARNING:
 DO NOT return the unit to the customer until the problem is located and corrected.

NOTES
 ALL RESISTANCE VALUES IN OHM. k=1,000 OHM, M=1,000,000 OHM
 ALL CAPACITANCE VALUES IN MICRO FARAD. P.=MICRO-MICRO FARAD
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.


SEMICONDUCTORS

• IC's


NJM4558DD
NJM2082DD

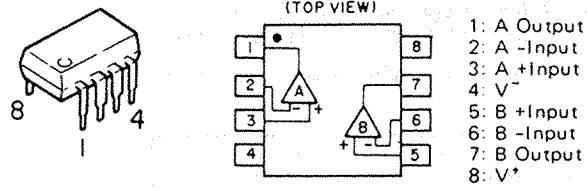


LM7001

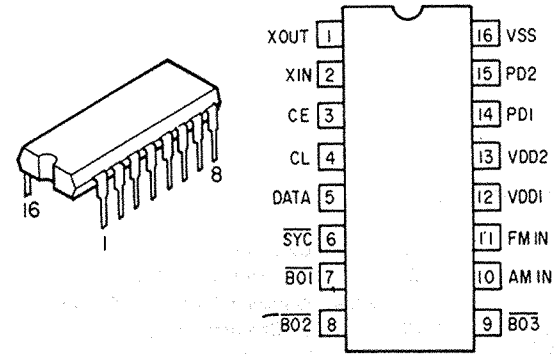


LB1639

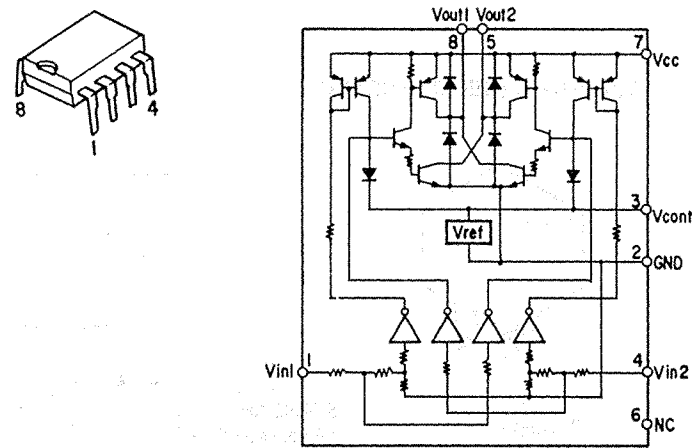


HD14052BP

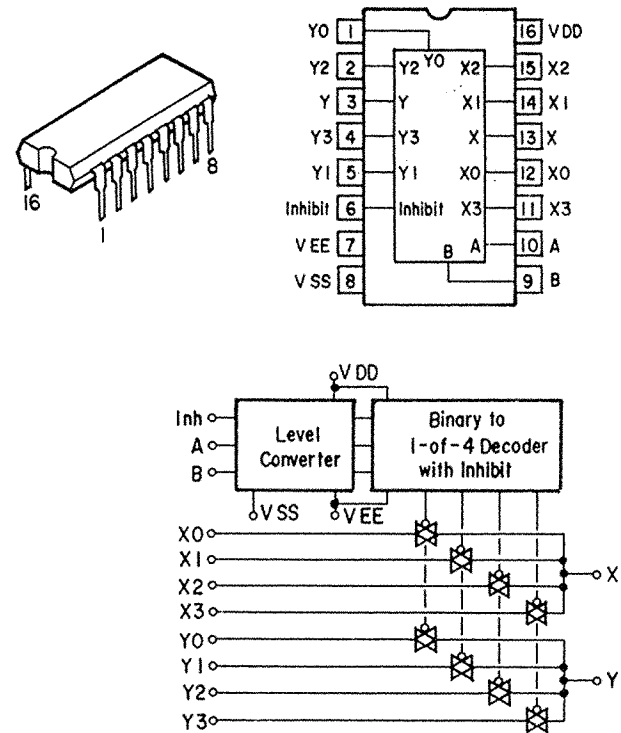


LA3401

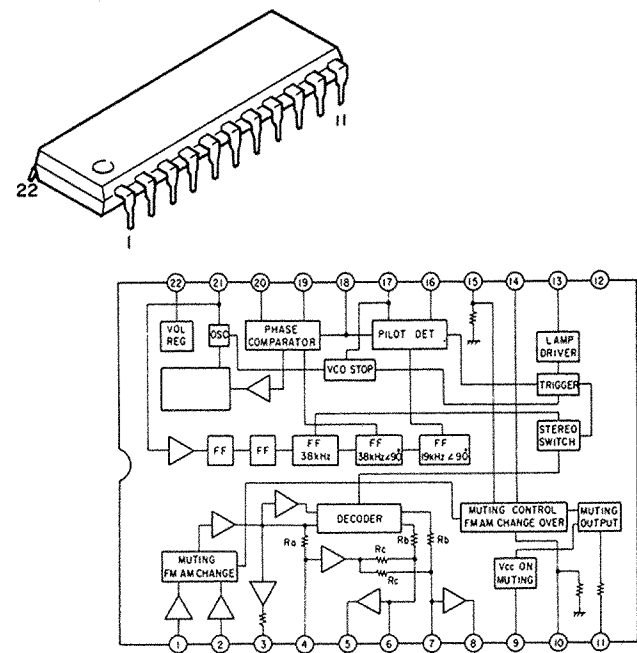


LA1267S

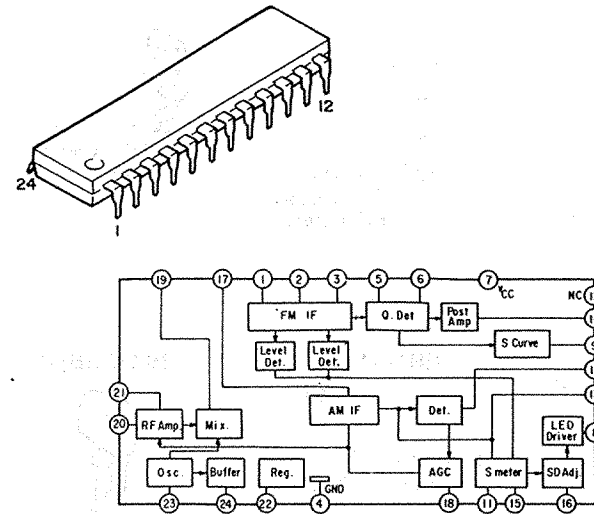



TC9164N

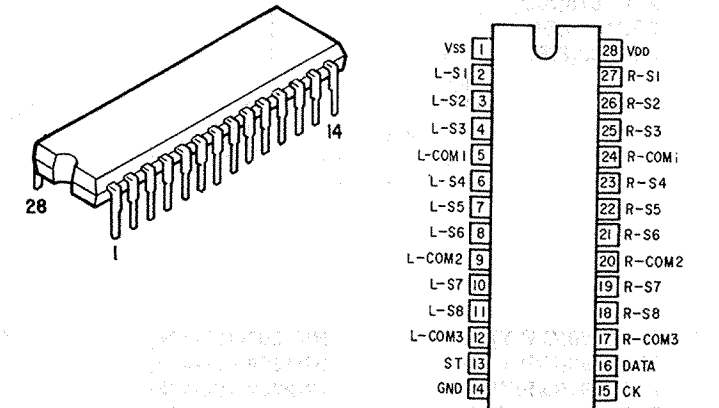

TMP47C670N-1222

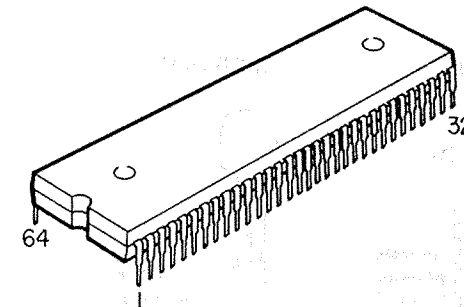


NJM7812FA(S)
NJM7806FA(S)

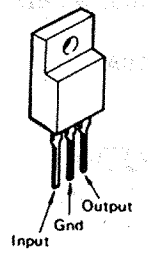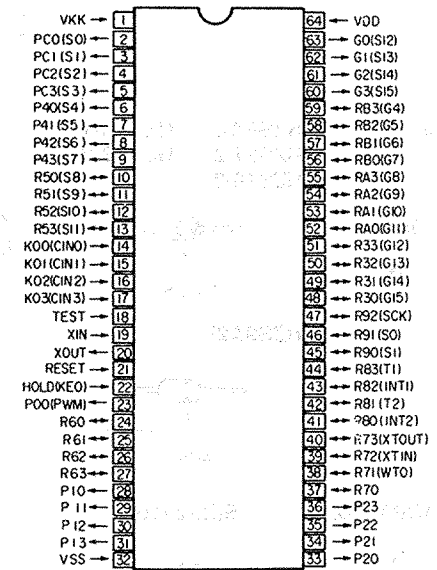


● Transistors


2SA1015(GR)
2SA1015(Y/GR)
2SA970(BL)
2SC1841(E/F)
2SC2240(BL)
2SC2878(A/B)
2SC1815(BL)
2SA988(E/F)

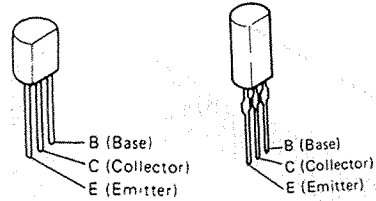


2SB647A(C)
2SD667A(C)

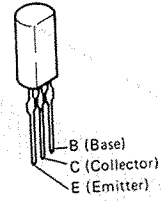


2SA1048(GR)
2SC2458(Y/GR)
2SC2458(BL)
2SC2839(E)

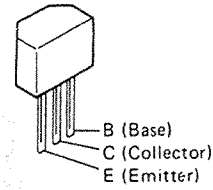



2SB1328(P)
2SD2004(P)

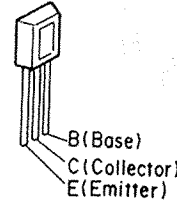

2SB1274(R/S)
2SD1913(R/S)

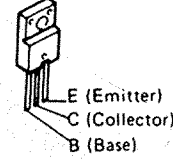


FLD(FIP10TM7)

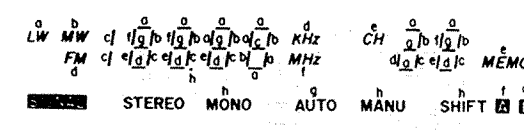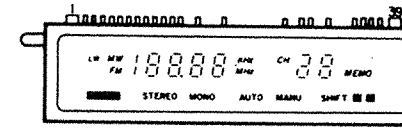


TERMINAL NO	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ELECTRODE	F	F	BG	P(h)	P(g)	P(f)	P(e)	P(d)	BG	P(c)	7G	P(b)	P(a)	6G	NP	5G	NP	NP	4G	NP
TERMINAL NO	21	22	23	24	25	16	27	28	29	30	31	32	33	34	35	36	37	38	39	
ELECTRODE	NP	NP	NP	NP	NP	4G	NP	P	(Z)	3G	NP	2G	NP	NP	(Z)	1G	(Stereo)	(Signal)	F	F

Notes F Filament NP No Pin
G Grid
P Anode


2SA1489(O/P/Y)(Z)
2SA1490(O/P/Y)(Z)
2SA1491(O/P/Y)(Z)
2SC3853(O/P/Y)(Z)
2SC3854(O/P/Y)(Z)
2SC3855(O/P/Y)(Z)

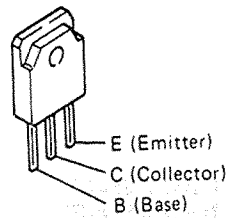


RN1202(10k-10k)
RN1204(47k-47k)
RN2202(10k-10k)
RN2204(47k-47k)
RN1241(A/B)

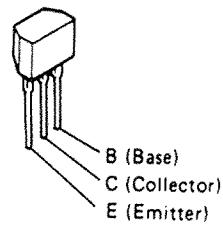


RN1202

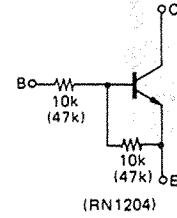


RN1241

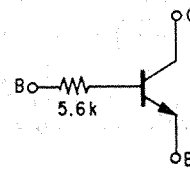


RN2202

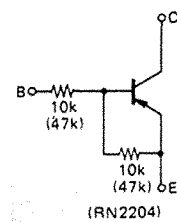

2SK381(B)/(C)

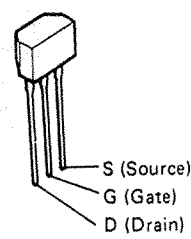


2SK161

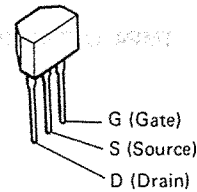


● Diodes & LED


1SS270A




1S2076A




HZS9A-2
HZS27-2
HZS16-3




HZS9A2L




S4VB20

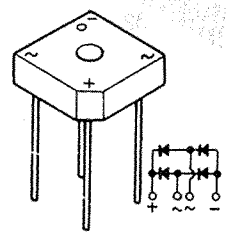


SFOR1A42

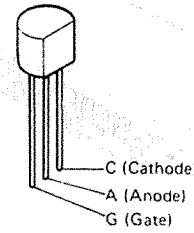


1SR35-200A




SVC321SPA-D-2

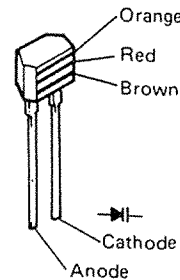

SEL-2210R

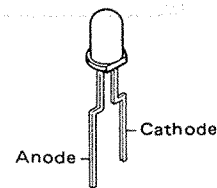


SBX1610-52 (REMOTE SENSOR)

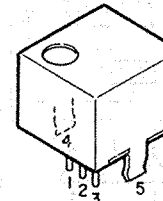

- 1. Vcc
- 2. Output
- 3. GND
- 4. Case Fin
- 5. Case Fin

STANDARD TRANSMITTER

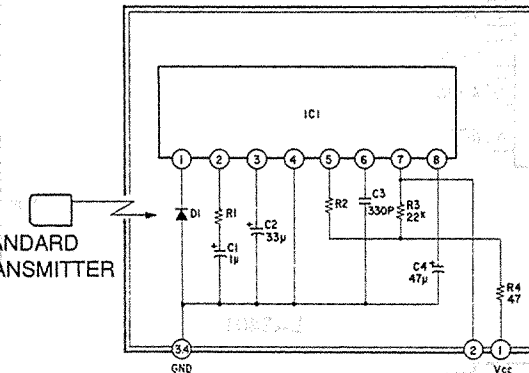

- IC1 : CX20106A Chip
- D1 : PIN Photo Diode Chip
- C1,C2,C4 : Aluminum Electrolytic Capacitor
- C3 : SL Characteristic ±5%
- R1 : Gain Adjuster
- R2 : fo Adjuster ±1% USE
- R3,R4 : ±5%