


The Harman Kardon Model HD500

Manual 96A

COMPACT DISC PLAYER

Technical Manual

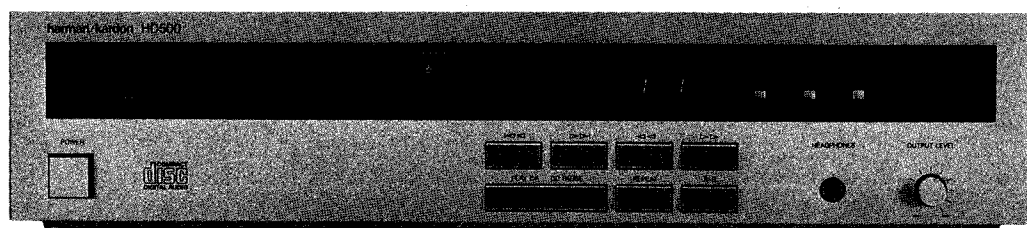

SPECIFICATIONS

System	Compact Disc Digital Audio
Signal Detection	3-Beam Semiconductor Laser
Error Correction	CIRC System
Sampling Frequency	44.1kHz
Quantization	16 Bit Linear
Channels	2 Channel Stereo
Frequency Response	4—20,000 Hz $\pm$ 0.5dB
Total Harmonic Distortion	0.01% (1kHz)
Dynamic Range	94dB
Signal-to-Noise Ratio	100dB
Channel Separation	83dB (1kHz)
Wow & Flutter	Immeasurable
Line Output Level/Load Impedance	Variable, Max. 2.4V/10k Ohms
Headphone Output Level/Load Impedance	25mW/32 Ohms
Power Requirements	
USA & Canada models	AC 120V, 60Hz
General model	AC 100/120/220/240 V, 50/60Hz
Power Consumption	20 W
Dimensions (W x H x D)	17-1/2" x 4-1/16" x 13-3/16" (443 x 103 x 335 mm)
Weight	12.8lbs (5.8kg)
Accessories	Stereo Connecting Cords Remote Control AA Battery (x 2)

All specifications and features subject to change without notice.

harman/kardon

240 Crossways park West, Woodbury, N. Y. 11797
1112-H15296A0 P-098508 1850 Printed in Japan

HD500

TABLE OF CONTENTS


SAFETY PRECAUTIONS	3
INSTRUCTIONS	5
BLOCK DIAGRAM	17
REMOVING THE CABINET	18
DISASSEMBLING THE MECHANISM UNIT	19
ADJUSTMENT PROCEDURE	20
TROUBLE SHOOTING	30
IC BLOCK DIAGRAM	39
GENERAL WIRING DIAGRAM	43
SERVO PCB ASSY — Solder Side —	45
SERVO CIRCUIT DIAGRAM	46
MAIN PCB ASSY — Solder Side —	47
MAIN CIRCUIT DIAGRAM	48
EXPLODED VIEW OF SET	50
EXPLODED VIEW OF MECHANISM UNIT	52
REPLACEMENT PARTS LIST	53

SAFETY PRECAUTIONS

Before returning an instrument to the customer, always make a safety check of the entire instrument, including, but not limited to, the following items:

- a. Be sure that no built-in protective devices are defective and/or have been defeated during servicing.
 - (1) Protective shields are provided to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience.
 - (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including, but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning.
- b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, both are not limited to, excessively wide cabinet ventilation slots, and an improperly fitted and/or incorrectly secured cabinet back cover.
- c. **Leakage Current Hot Check** — With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.1 "Leakage Current for Appliances" and Underwriters Laboratories (UL) 1270, (34.6). With the instrument AC switch first in the ON position and then in the OFF position, measure from a known earth ground (metal waterpipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle bracket, metal cabinet, screwheads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milliamp. Reverse the instrument power cord plug in the outlet and repeat test. **ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER.**

AC Leakage Test

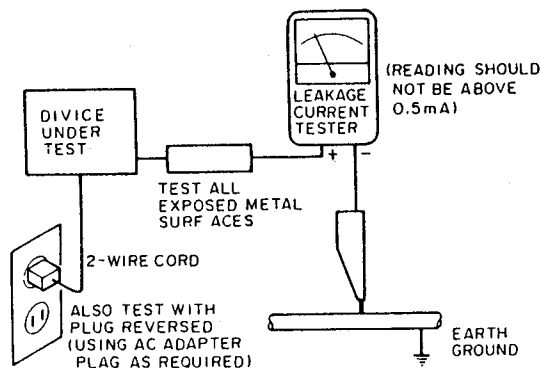


d. Insulation Resistance Test

- (1) Unplug the power supply cord and connect a jumper wire between the two prongs of the plug.
- (2) Turn on the power switch of the instrument.
- (3) Measure the resistance with an ohmmeter between the jumpered AC plug and each exposed metallic cabinet part on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. The reading should be as shown below. If it is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be repaired and rechecked before it is returned to the customer.

e. Insulation Resistance Test Cold Check

- (1) Unplug the power supply cord and connect a jumper wire between the two prongs of the plug.
- (2) Turn on the power switch of the instrument.
- (3) Measure the resistance with an ohmmeter between the jumpered AC plug and each exposed metallic cabinet part on the instrument, such as screwheads, antenna, control shafts, handle brackets, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1 and 5.2 Megohm. When there is no return path to the chassis, the reading must be "infinite". If it is not within the limits specified, there is the possibility of a shock hazard, and the instrument must be repaired and rechecked before it is returned to the customer.

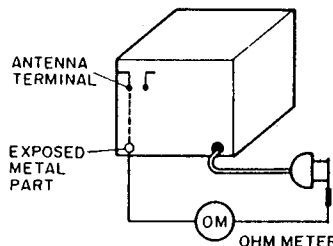

2. PRODUCT SAFETY NOTICE

Some electrical and mechanical parts have special safety related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by shading, by (Δ) on schematics and parts listed. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. Products Safety is under review continuously and new instructions are issued whenever appropriate.

3. SERVICING PRECAUTIONS

CAUTION: Before servicing instruments covered by this service manual and its supplements, read and follow the SAFETY PRECAUTIONS on this page. NOTE: If unforeseen circumstances created conflict between the following servicing precautions and any of the safety precautions, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

- a. Always unplug the instrument AC power cord from the AC power source before:
 - (1) Removing or reinstalling any component, circuit board, module, or any other instrument assembly.
 - (2) Disconnecting or reconnecting any instrument electrical plug or other electrical connection.
 - (3) Connecting a test substitute in parallel with an electrolytic capacitor in the instrument.

Caution: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
- b. Do not defeat any plug/socket B+ voltage interlocks with which instruments covered by this service manual might be equipped.
- c. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
- d. Always connect a test instrument's ground lead to the instrument chassis ground before connecting the test instrument positive lead. Always remove the test instrument ground lead last.

NOTE: Refer to Safety Precautions on Page 3.

- (1) The service precautions are indicated or printed on the cabinet, chassis or components. When servicing, follow the printed or indicated service precautions and service materials.

- (2) The Components used in the unit has a specified flammability and dielectric strength. When replacing any components, use components which has the same ratings. Components marked (Δ) in the circuit diagram are important for safety or for the characteristics of the unit. Always replace with the appointed components.
- (3) An insulation tube or tape is sometimes used and some components are raised above the printed wiring board for safety. The internal wiring is sometimes clamped to prevent contact with heating components. Install them as they were.
- (4) After servicing, always check that the removed screws, components and wiring have been installed correctly and that the portion around the service part have not been damaged and so on. Further check the insulation between the blades of attachment plug and accessible conductive parts.

Insulation Checking Procedure

Disconnect the attachment plug from the AC outlet and turn the power on. Connect the insulation resistance meter (500V) to the blades of the attachment plug. The insulation resistance between the each blade of the attachment plug and accessible conductive parts (Note 1) should be more than 1M-ohm.

Note 1: Accessible Conductive Parts including Metal panels, Input terminals, Earphone jacks, etc.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static"

can generate electrical charges sufficient to damage ES devices.

5. Do not use freon-propelled chemicals. These can generate electrical charge sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes, fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device).

FEATURES


Performance Features

- 3-Beam Laser
- 16-Bit Linear Digital-to-Analog Converter with Digital Filter and 88.2kHz Sampling Frequency
- 4-Pole Analog Filter for Excellent Phase Response
- Ultrawideband, Discrete Analog Amplifiers for Low IM Distortion
- Output Level Control

Convenience Features

- Wireless Remote Control
- 15-Track Programability
- Auto Repeat
- Section Repeat
- Bi-Directional Track Skip
- Bi-Directional Audible Cueing
- Track/Time Display

IMPORTANT

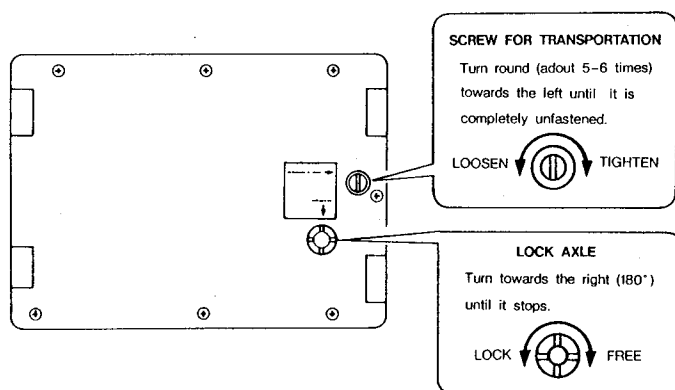

Before plugging the unit in, be sure to loosen the transportation screw and the lock axle on the bottom of the unit with a screw driver.


Note:

- Place a cloth under the unit in order to prevent it from being scratched.
- Turn the unit upside down.
- The screw and lock axle can not be removed.
- Be sure to tighten them by the reverse procedure before transporting the unit.

GENERAL INSTRUCTIONS

Safety Precautions

Be sure to observe the following precautions:

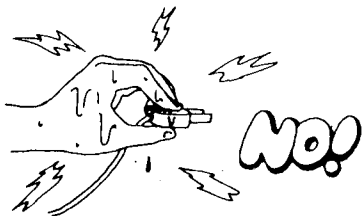

■ Power plug

Insert the plug firmly into the socket to avoid electric shocks. When removing the power plug from the wall socket, pull only on the plug head. Never pull the cord itself.

■ Do not open up the cabinet

To avoid electric shocks and fire hazards, do not open the cabinet and attempt to service or modify the unit yourself. Under no circumstances should the cabinet be opened.

■ Avoid touching with wet hands

To avoid the danger of electric shocks, do not touch the electric power cord with wet hands. Dry your hands thoroughly before handling the unit.

If you should accidentally spill water on the unit, contact your sales representative or the nearest authorized Harman Kardon service station.

■ Do not insert any foreign objects into the jacks or the ventilation openings of the unit.

■ Do not cover the ventilation openings

The upper and lower ventilation openings prevent the internal temperature from rising excessively. Therefore, do not place any objects where they will block the air flow from these openings.


■ Do not place the HD500

- Directly on top of high power amplifiers and other heat generating components.
- On top of carpets or blankets.
- In a place where the air flow is restricted.
- Inside an enclosed space while it is in operation.

Failure to observe the above can cause malfunctions and fires.

■ Unit placement

To prevent the unit from dropping, do not place the HD500 in an unstable location, such as uneven or tilted surfaces.

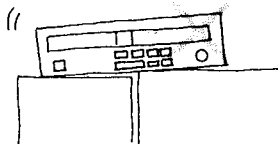

■ Leaving the unit unattended

When leaving the unit unattended for a long period of time, such as when you are vacationing, be sure to remove the power cord from the wall socket.

Unit Placement

- Place the unit as far away as possible from tuners and TV sets.

This unit uses high frequency signals and therefore accidental signal leakage can cause reception interference in tuners and TV sets. If such should be the case, move the HD500 further away from the tuner or TV set. If you are using an indoor antenna, this should be replaced with an outdoor antenna.

- Avoid the following locations since not only will they lower the quality of the unit, but are hazardous as well.

Locations:

- Subject to high temperatures (in excess of 113°F/45°C). (Be especially careful during summer time.)
- Subject to direct sunlight.
- Excessively cold (under 32°F/0°C)
- Subject to high humidity.
- Close to heat sources.
- With excessive smoke and dust.
- Subject to vibrations.
- Tilted or uneven surfaces or other unstable positioning.
- Where strong magnetic fields are present.


Handling Compact Discs

Dirt, fingerprints, scratches and warps on a compact disc can cause noise. Observe the following precautions to keep your compact discs sounding their best.

■ Handling compact discs

Do not touch the playback surface (the rainbow colored side).

Do not attach adhesive tape, stickers, etc. to the disc label.

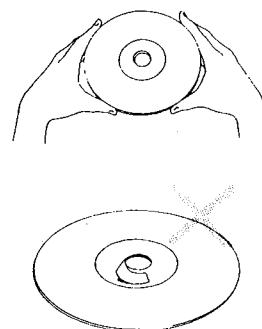


■ Disc storage

Avoid storing the discs in locations subject to high temperature, high humidity and direct sunlight. Also do not keep discs inside a closed vehicle as it is often subject to extreme temperatures.

■ Disc care

Before playing the disc, wipe off all dust, dirt and fingerprints on the playing surface with a soft cloth. Do not use benzine and record cleaners designed for analog records. Static prevention treatments can also damage compact discs and should therefore be avoided.

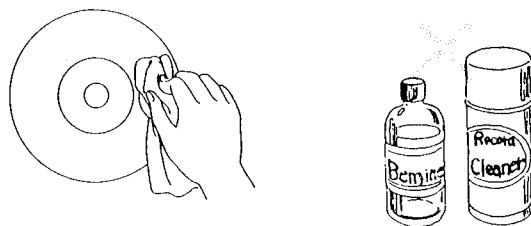

Only compact discs with the mark shown below can be used with the HD500.

COMPACT
disc
DIGITAL AUDIO

Handling Precautions

■ Dew formation

Window frames inside a warm room during winter will rapidly accumulate dew on the surface. This unit features a precision lens element. This lens element is also subject to dew formation under the following circumstances:

- When subject to sudden changes in temperature.
- When the room in which the unit placed is subject to high humidity.
- When moving the unit suddenly from a cold to a warm place.

The HD500 will not be able to correctly read the programs under these circumstances, and the player will not operate properly. In such cases, after turning the power switch on, wait for 20 to 30 minutes before operating the unit.

■ Do not remove the cabinet

This unit uses an invisible laser pickup to detect the signals recorded on the compact disc. The HD500 has been designed so that the laser rays will not radiate outside. To avoid laser exposure in case the safety interlocks are defeated or out of action, do not remove the cabinet.

■ Be careful of the laser pickup


Although you cannot see it from the outside, a laser pickup is located under the disc tray and a precision lens is built in it. Since the laser pickup, including the lens element, is especially sensitive to dust, keep the disc tray closed when not in use. Also do not put your hand inside the unit.

Unit Care

■ Wipe off the cabinet with a soft, dry cloth

Do not apply alcohol, benzene, paint thinners, insecticides, other chemicals and adhesive tape to the cabinet, as these can remove the luster of the cabinet and can also impair the finish. Avoid chemically treated cloth as well.

CONNECTIONS

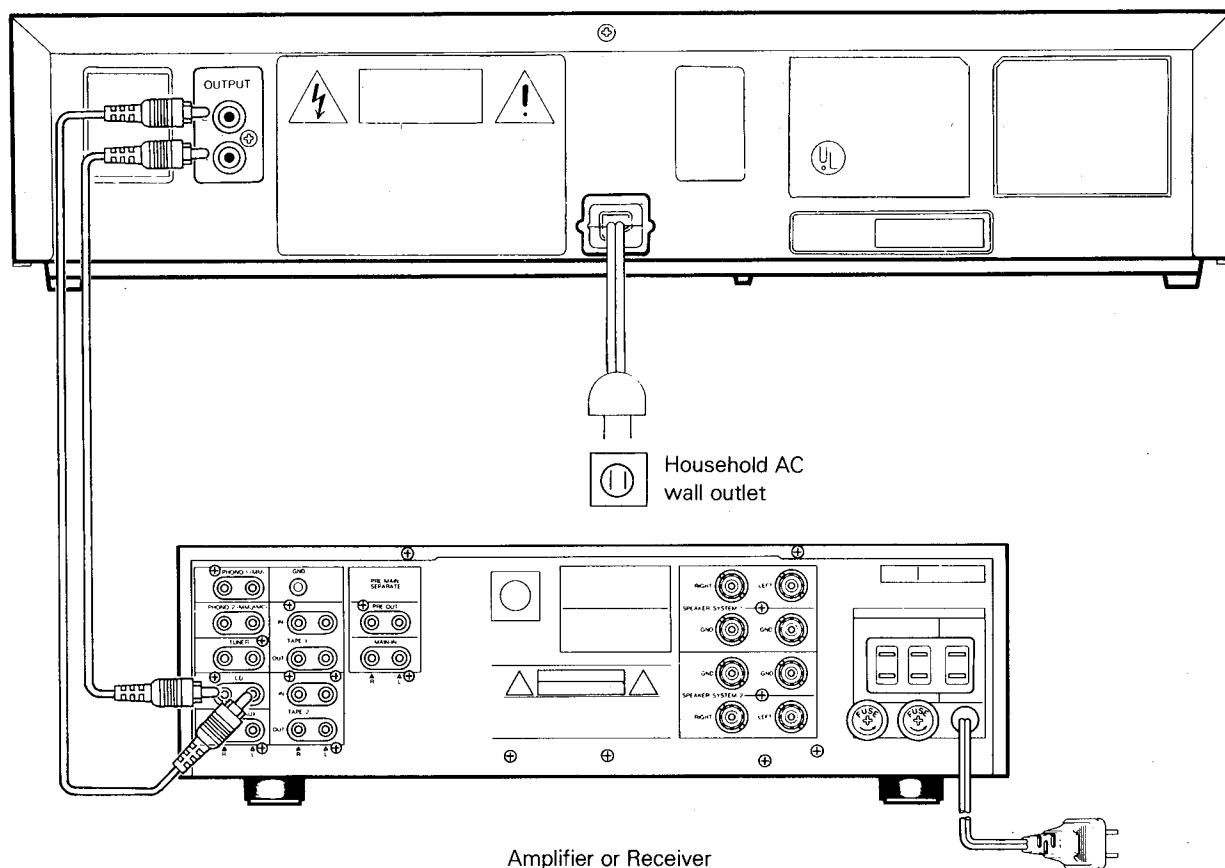

1. Using the supplied shielded cords with RCA-type plugs, connect the left (L) and right (R) OUTPUT jacks on the rear panel of the unit to the left (L) and right (R) input jacks (CD or AUX) or the TAPE playback jacks on the rear panel of the amplifier or receiver.
2. Plug the power cord of the HD500 into the convenience AC outlet on the rear panel of the amplifier or a household AC outlet.


Notes on connection

- Turn off the power switch and disconnect the power cords of all components before making connections.
- Make sure that the left and right jacks of the HD500 are properly connected to the left and right jacks, respectively, of the amplifier or receiver.
- To avoid incomplete connections, be sure that the shielded cords with RCA-type plugs are fully inserted into the corresponding jacks.
- Do not connect the output of the CD player to the phonograph input of the amplifier.

Volume Setting

The digital recording format of compact discs enable them to accurately reproduce all peaks contained in the music signals without noise. Therefore, if attempting to adjust the volume setting as you would for analog record players and cassette tape recorders, by listening to the noise level, the sudden unexpected surge in the amplifier power may harm your speakers. Avoid excessively high volume setting.

CONTROLS AND FUNCTIONS

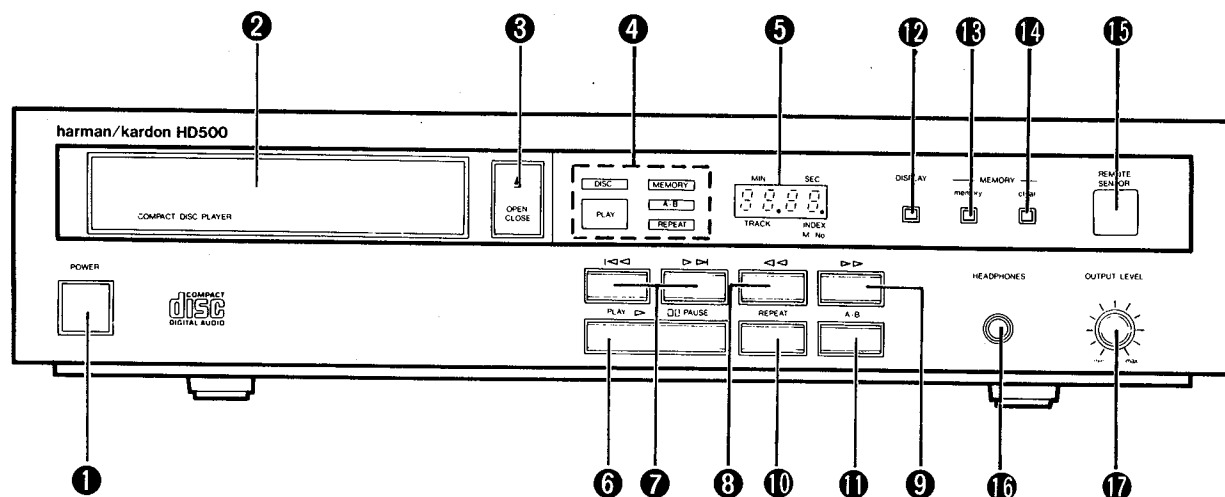

1 POWER SWITCH

Press this switch to turn the power of the main unit on and off. Pressing it once will turn the power on, and pressing it once again will turn the power off.

2 DISC TRAY

By pressing the OPEN/CLOSE button, the tray onto which the discs are loaded will slide out. (See page 9 for details of loading compact discs.)

3 OPEN/CLOSE BUTTON

Press this button to open or close the DISC TRAY. Press it once to make the DISC TRAY slide out, and again to make the DISC TRAY slide in.

4 FUNCTION DISPLAY

DISC

Flashes when DISC TRAY is opened or closed. The indicator will light up when the disc has been correctly loaded and the unit is in the standby mode. It will continue to be lit during playback.

REPEAT

Lights when repeat playback has been programmed.

A-B

Lights during repetition of one section of the disc.

PLAY

Lights during playback, or blinks when in pause.

MEMORY

Lights during memory playback.

5 TIME/TRACK DISPLAY

Displays elapsed playback time from the beginning of the program being played, or displays the track and index number during playback.

6 PLAY/PAUSE BUTTON

Press this button to start playback. Pressing this button during playback activates the pause mode. Playback continues when this button is pressed again. Playback stops if this button is held down for more than two seconds.

7 PROGRAM SELECTION (SKIP) BUTTONS

(◀◀, ▶▶)

◀◀: Pressing this button once skips playback backward to the beginning of the present program. Holding the button down skips playback backward to the beginning of previous programs.

▶▶: Pressing this button once skips playback forward to the beginning of the next program. Holding the button down skips playback forward to the beginning of subsequent programs.

8 REVERSE BUTTON (◀◀)

Pressing this button starts low speed reverse. Holding the button down longer than three seconds changes the reverse mode to high speed. Sound can be heard at a reduced level in this mode.

9 FAST-FORWARD BUTTON (▶▶)

Pressing this button starts low speed fast-forwarding. Holding the button down longer than three seconds changes the fast-forward mode to high speed. Sound can be heard at a reduced level in this mode.

10 REPEAT BUTTON

Pressing this button enables continuous repeat playback of the disc. Pressing this button again disables the repeat playback mode.

11 A-B REPEAT BUTTON

Use this button to specify the beginning and end points for section repetition.

12 DISPLAY BUTTON

Press to change the display. When pressed, display is switched between the elapsed playback time of a track and the program and index number.

13 MEMORY BUTTON

Used to program the memory for non-sequential playback of disc tracks.

14 MEMORY CLEAR BUTTON

Pressing this button clears the entire contents of the memory.

15 REMOTE CONTROL SENSOR


Receives signals from the supplied remote control unit.

16 HEADPHONES JACK

Connect the headphone plug to this jack for private listening.

17 OUTPUT LEVEL CONTROL

This control adjusts the volume level of the rear panel OUTPUT jacks and the HEADPHONES jack. Volume increases when turned to the right.

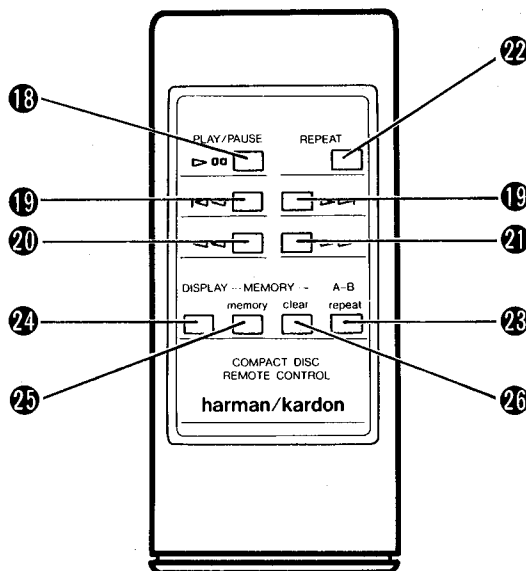Remote Control**18 PLAY/PAUSE BUTTON**

Same as 6.

19 PROGRAM SELECTION BUTTON (◀◀, ▶▶)

Same as 7.

20 REVERSE BUTTON (◀◀)

Same as 8.

21 FAST-FORWARD BUTTON (▶▶)

Same as 9.

22 REPEAT BUTTON

Same as 10.

23 A-B REPEAT BUTTON

Same as 11.

24 DISPLAY BUTTON

Same as 12.

25 MEMORY BUTTON

Same as 13.

26 MEMORY CLEAR BUTTON

Same as 14.



- When changing the batteries of the remote control, insert the batteries with their polarity aligned according to the diagram on the back of the battery case.
- 2 AA size (UM-3) batteries are recommended.

OPERATIONS

Loading Compact Discs

1. Press the POWER switch to turn on the power.
2. Press the OPEN/CLOSE button to slide out the DISC TRAY.
3. Place the disc label facing up.
Center, the disc on the tray.
4. Press the OPEN/CLOSE button to close the DISC TRAY.


Pressing the PLAY button even when the DISC TRAY is open, closes the tray and begins play-back from the first program.

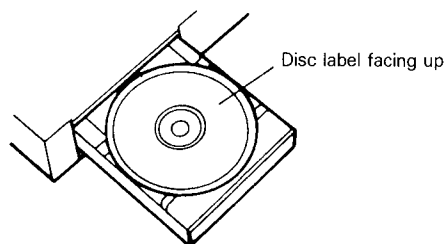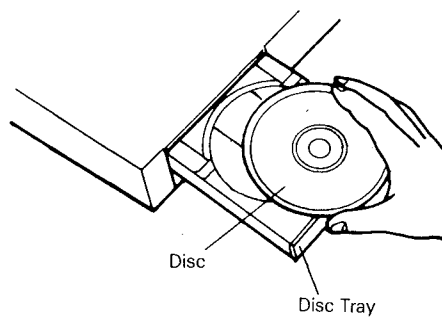

CAUTION


Wait until the disc holder is completely open before loading the compact disc. Failure to observe this precaution can result in damage to the disc.

To prevent fingerprints from getting on the disc, handle it only by the edges or center, as shown in the illustration below.

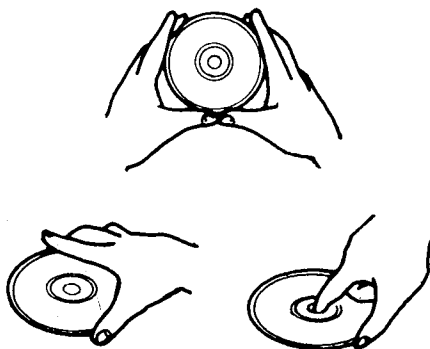

Playing a Disc





1. Press the POWER switch.

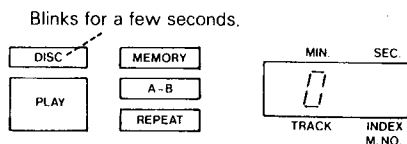


2. Press the OPEN/CLOSE button.
(DISC TRAY opens)

3. Carefully insert disc.
(Label side up)

4. Press the OPEN/CLOSE button.

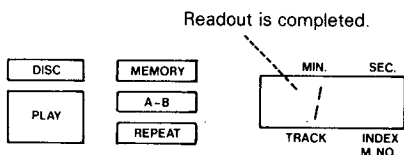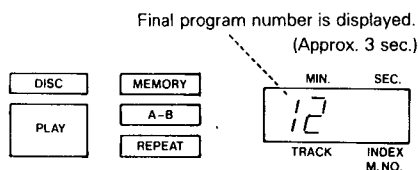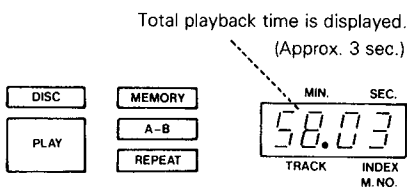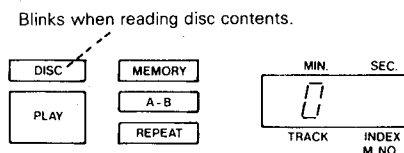

5. Press the PLAY/PAUSE button.

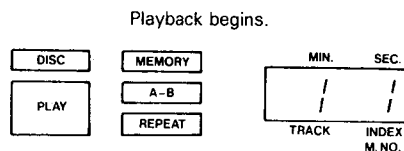

- The DISC TRAY will also close if step 5, pressing the PLAY/PAUSE button, is carried out instead of step 4. In this case, the unit will directly commence playback from the beginning of the first program.

- To Temporarily Halt Playback
Pressing the PLAY/PAUSE button causes the unit to enter the pause mode. The PLAY indicator will blink. Pressing the PLAY/PAUSE button again defeats the pause mode and re-enters the play mode.


- Stopping Playback
When the PLAY/PAUSE button is pressed for more than 2 seconds, the disc stops turning and the unit enters the ready mode.

- Removing a disc
Pressing the OPEN/CLOSE button opens the DISC TRAY.


Desired Program Playback

This feature allows you to move forward or backward directly to a desired program, skipping the rest. This function can be activated from any mode (disc set, play, pause).

1. To skip forward, press the $\triangleright\triangleright$ button until the desired track appears in the DISPLAY.

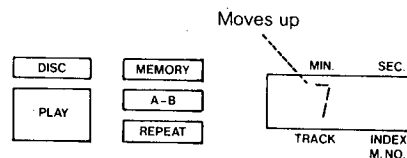

2. To skip backward, press the $\triangleleft\triangleleft$ button until the desired track appears in the DISPLAY.

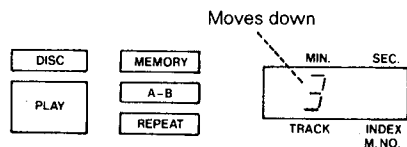


- When the DISC TRAY is open, the track number is set using the $\triangleright\triangleright$ or $\triangleleft\triangleleft$ buttons, and the operation will be carried out when the DISC TRAY is closed using the PLAY/PAUSE button.


Audible Search

This feature can allow you to search either forward or backward to find a desired location. In addition, low volume audio can be heard.

1. To search forward, press and hold the ►► button.

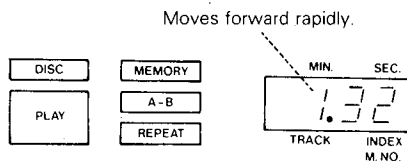

2. To search backward, press and hold the ◀◀ button.

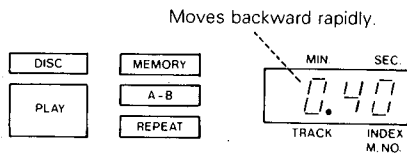


- Rapid, non-audible search, both fast-forward and backward, can be activated from pause mode.

Programming the Memory


This feature allows you to select certain desirable programs, in any order, for playback, automatically skipping the rest. A maximum of 15 programs can be entered into the memory.

1. Pressing the PLAY/PAUSE button for more than 2 seconds changes the mode to the stop mode.
2. Press the ►► or ◀◀ button until the desired track is displayed.



Moves up/down indicating desired track.

3. Press the MEMORY button.



The memory number is displayed for 3 seconds.

The MEMORY indicator blinks for approx. 3 seconds when the memory is being registered.

4. Repeat steps 2 and 3.


A maximum of 15 tracks can be entered into the memory.
(Full is displayed when a 16th entry is attempted.)

5. Press the PLAY/PAUSE button to begin memory playback.

- When clearing the memory, press the MEMORY CLEAR button.
- If the ►► or ◀◀ button are pressed during memory playback, only those tracks registered in the memory will be skipped. The contents of the memory may be verified by doing this while in the pause mode.

Repeat Playback

This feature allows you to repeat all tracks on the disc, or the programs selected in memory. To activate, press the REPEAT button.



Repeat indicator lights up.

To release repeat function, press the REPEAT button again.

Repeat One Section of the Disc


1. During playback, press the A-B REPEAT button at the beginning of the desired section. The A-B indicator blinks, and the starting point for repeat playback is set.
2. Press the A-B REPEAT button again during playback at the end of the desired section. The A-B indicator will remain lit, and the end point for repeated playback is set. The set section will be repeated continuously.
3. To discontinue an A-B repeat, press the REPEAT button.

Timer Playback

When the disc is set and the power is turned on, playback will begin automatically. In this way, operation of this unit together with a timer allows playback to begin automatically from a desired time.

Operational Range of Remote Control Unit

Use the remote control unit within the range shown in the diagram below.

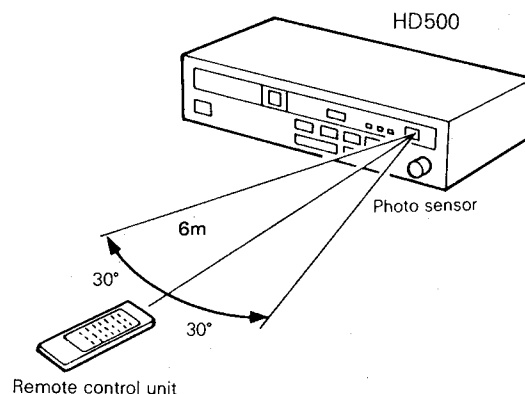


TROUBLESHOOTING CHECKLIST


Check items listed below before requesting repair service. This may prove time saving in the long run.


Problem	Cause	Remedy
The unit will not play although the disc has been loaded.	• The disc has been loaded upside down. • The disc is dirty. • The disc is scratched. • The disc is excessively warped. • Condensation has formed on the disc or optical head. • The disc does not conform to the appropriate standards.	• Reinsert the disc. • Clean the disc. • Replace the disc with a new one. • Replace the disc with a new one. • Wait for 20—30 minutes before operating the unit. • Use a different disc.
Certain portions of the disc do not play.	• The disc is dirty. • The disc is scratched.	• Clean the disc. • Skip over the scratched portion during playback.
The sound is distorted.	• Check the amplifier and CD player connections.	• Connect the amplifier and player together correctly.
Nothing happens when function keys are pressed. The display has characters that are neither numbers or letters.		• Turn the power off and then back on again.

BLOCK DIAGRAM

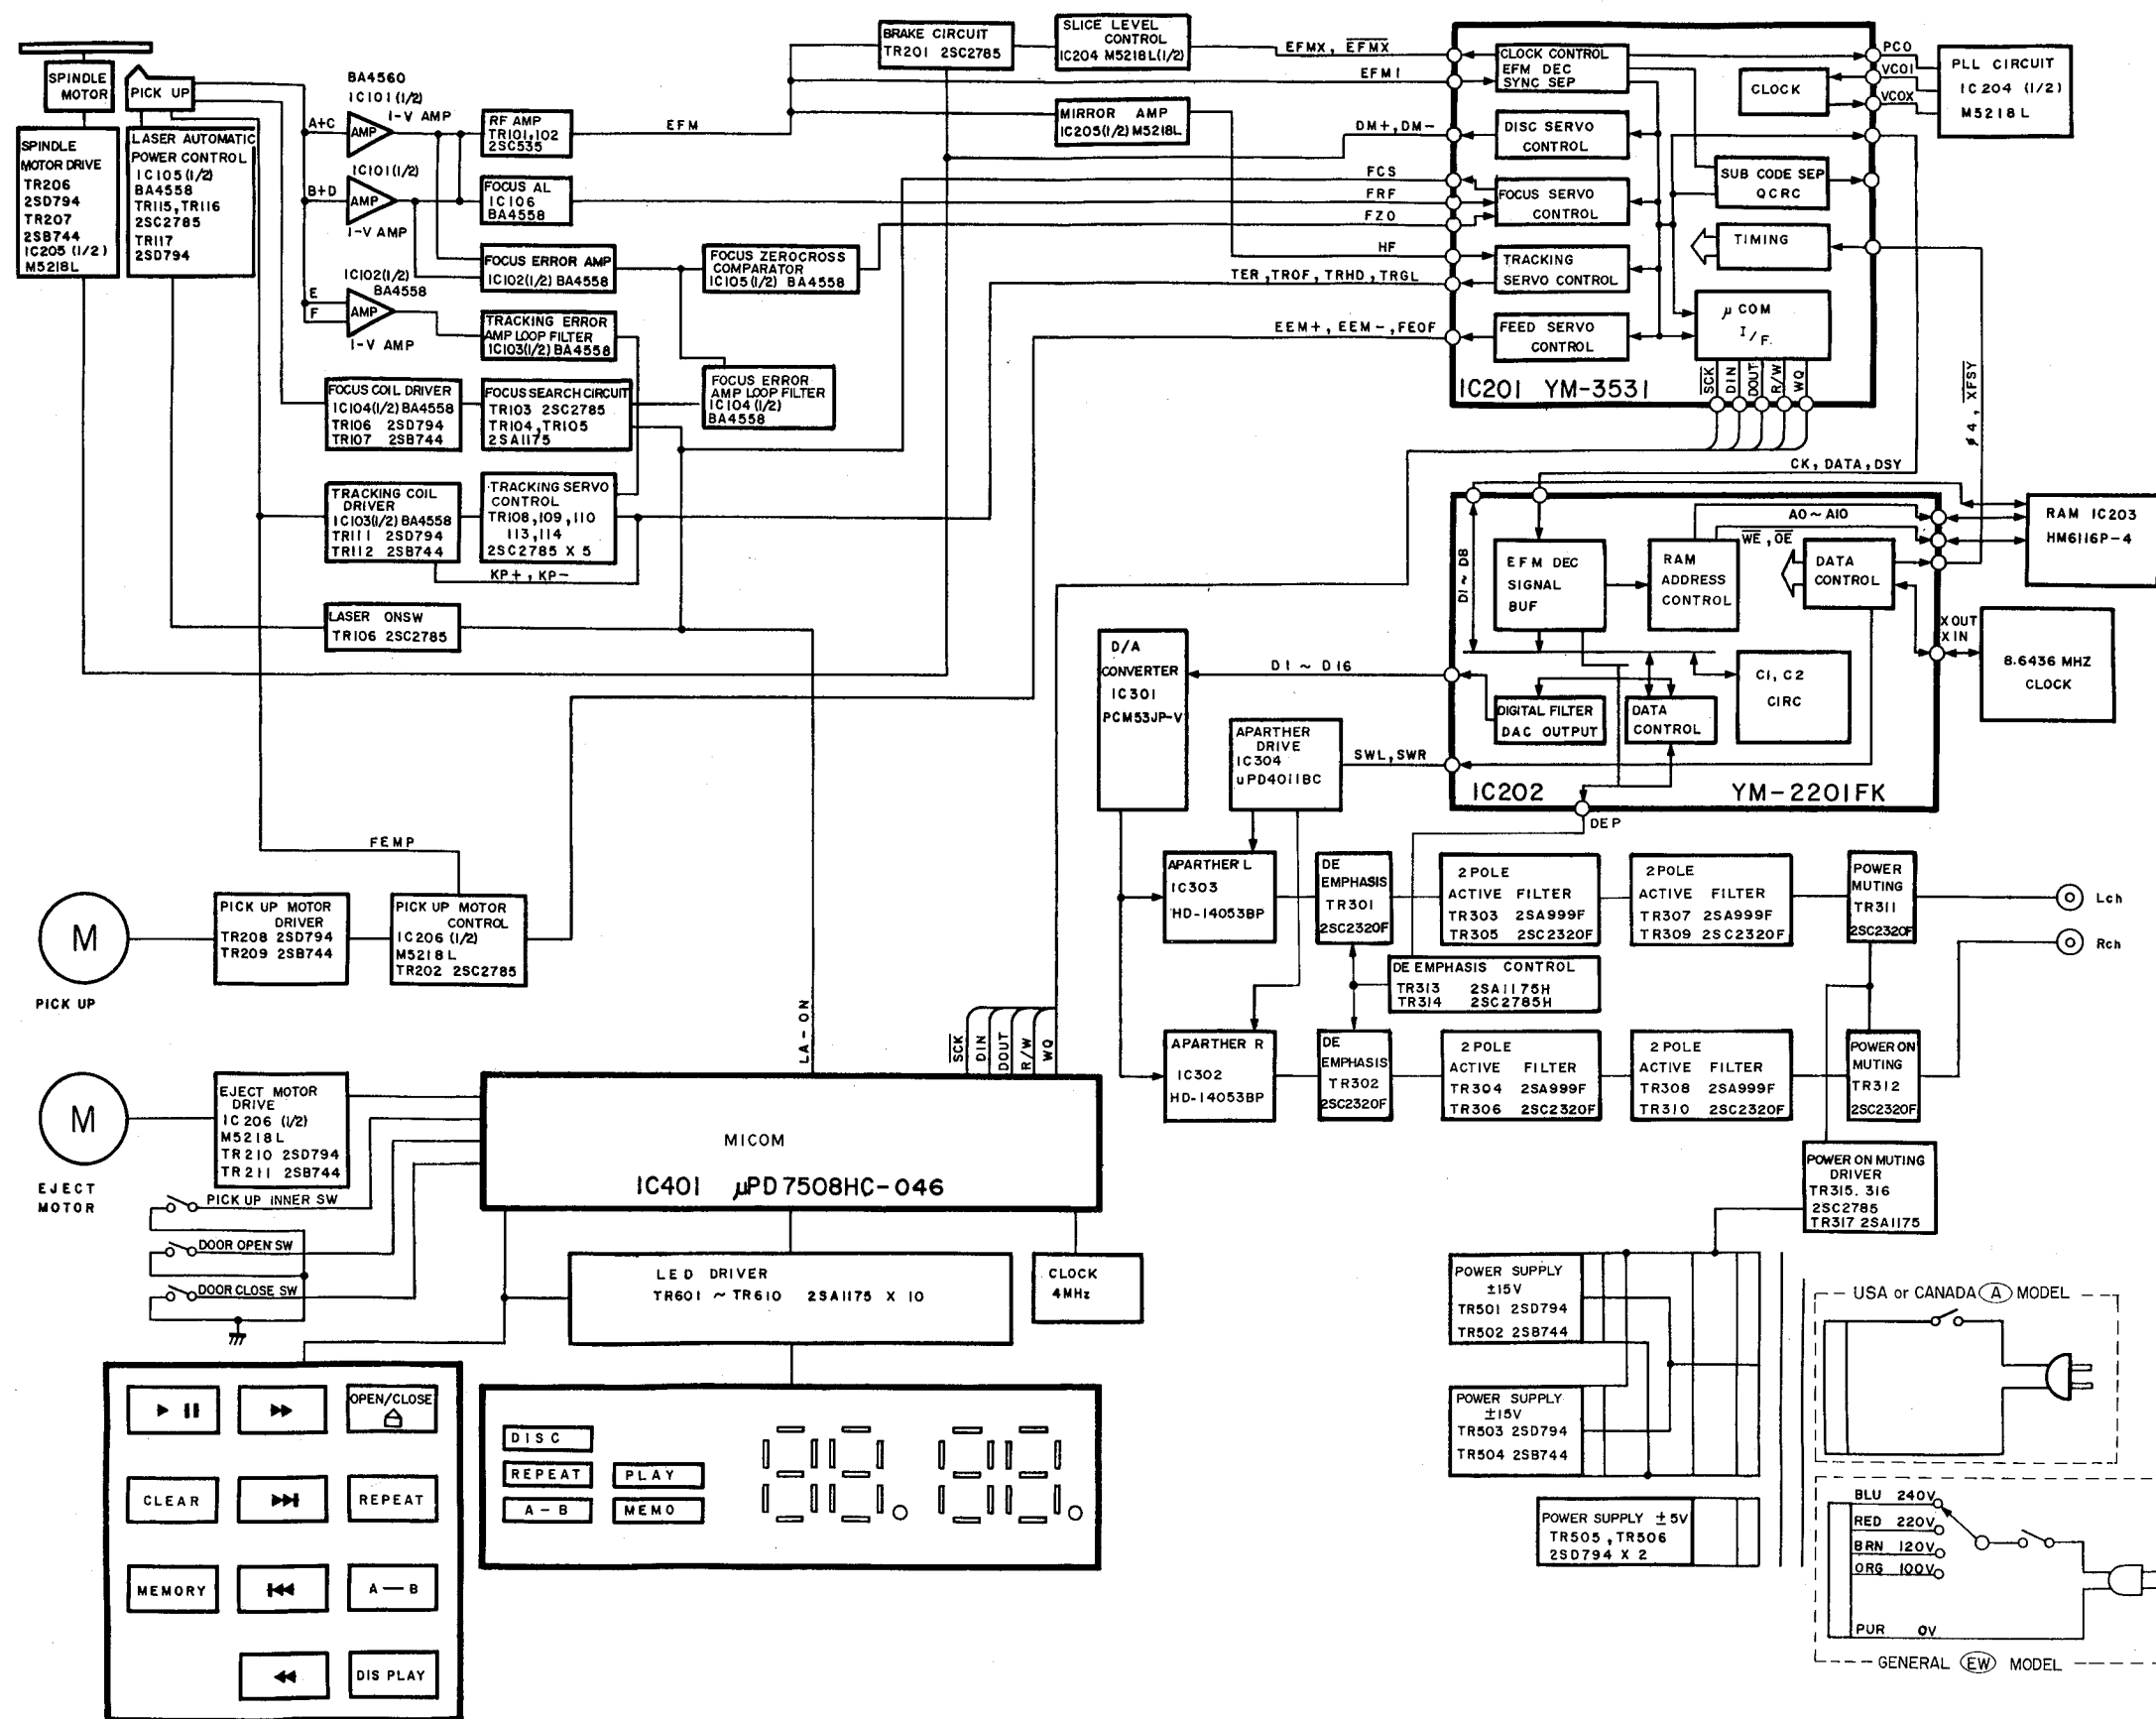

BLOCK DIAGRAM

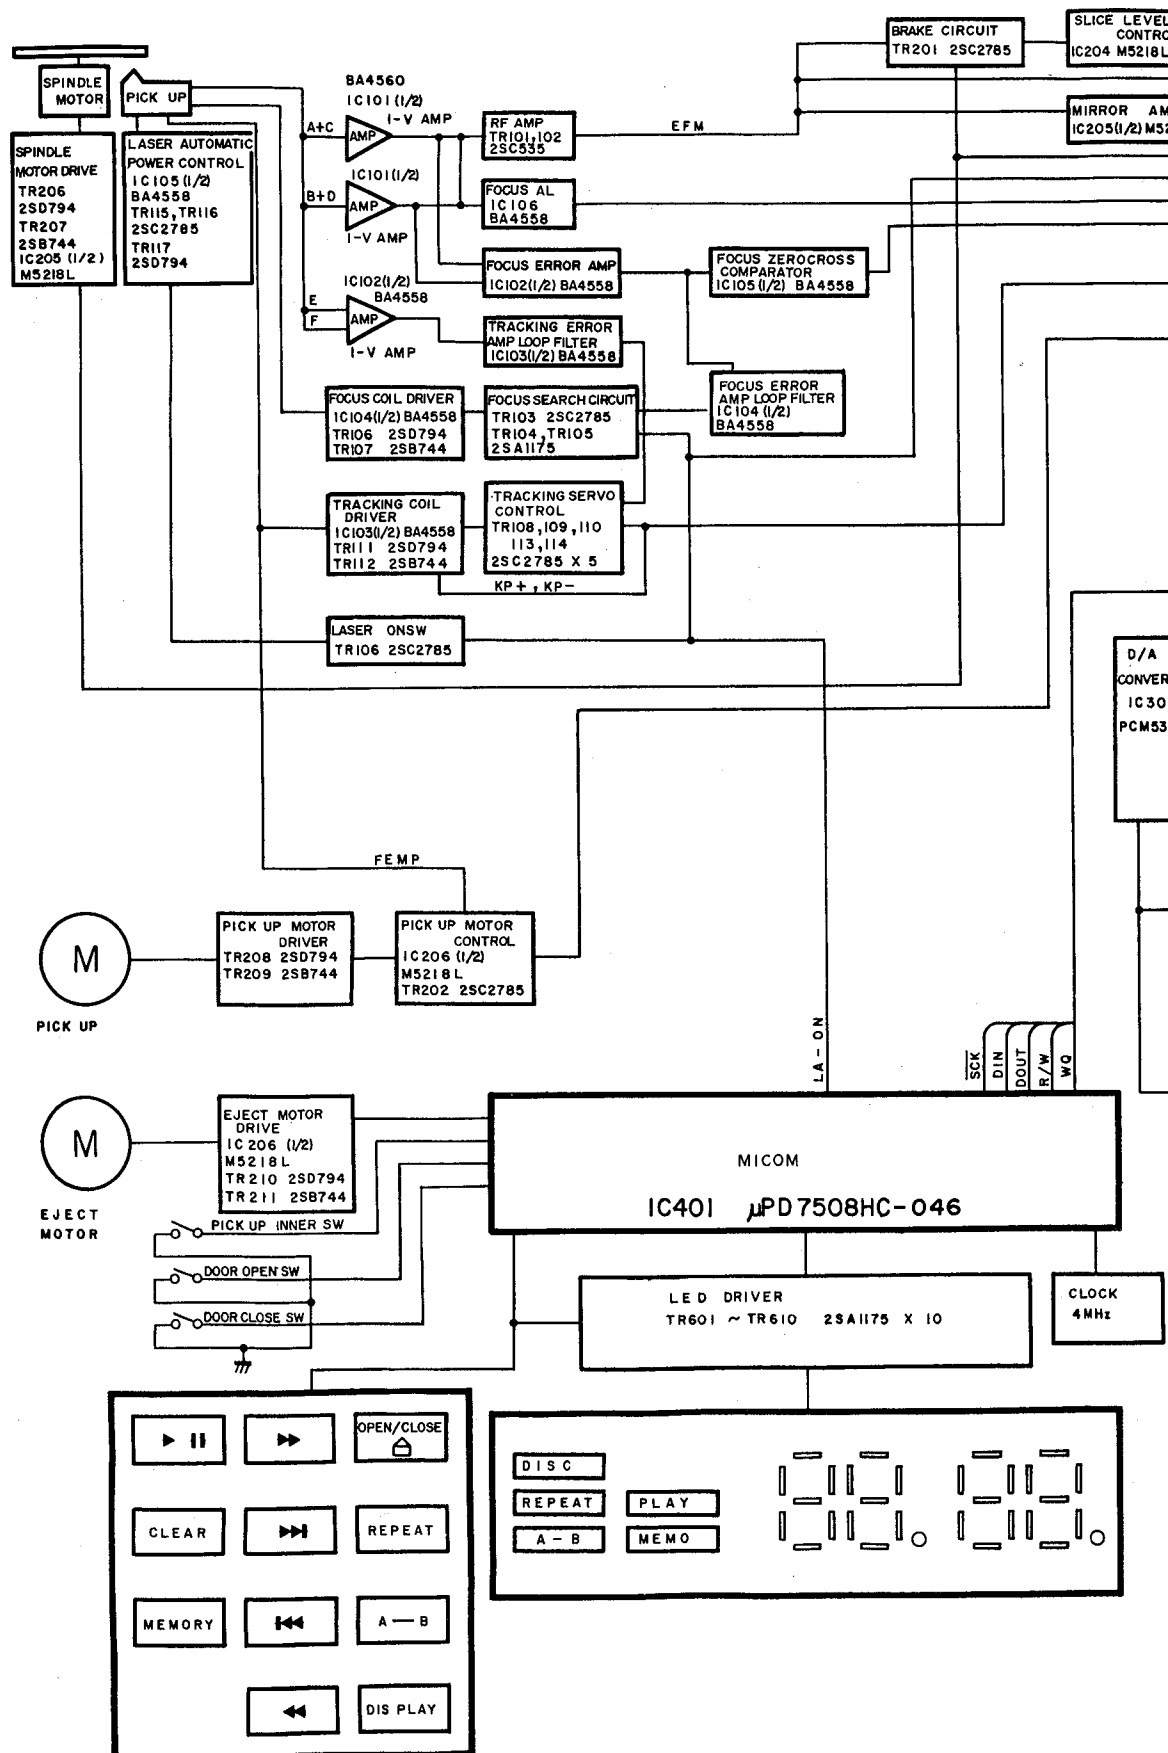

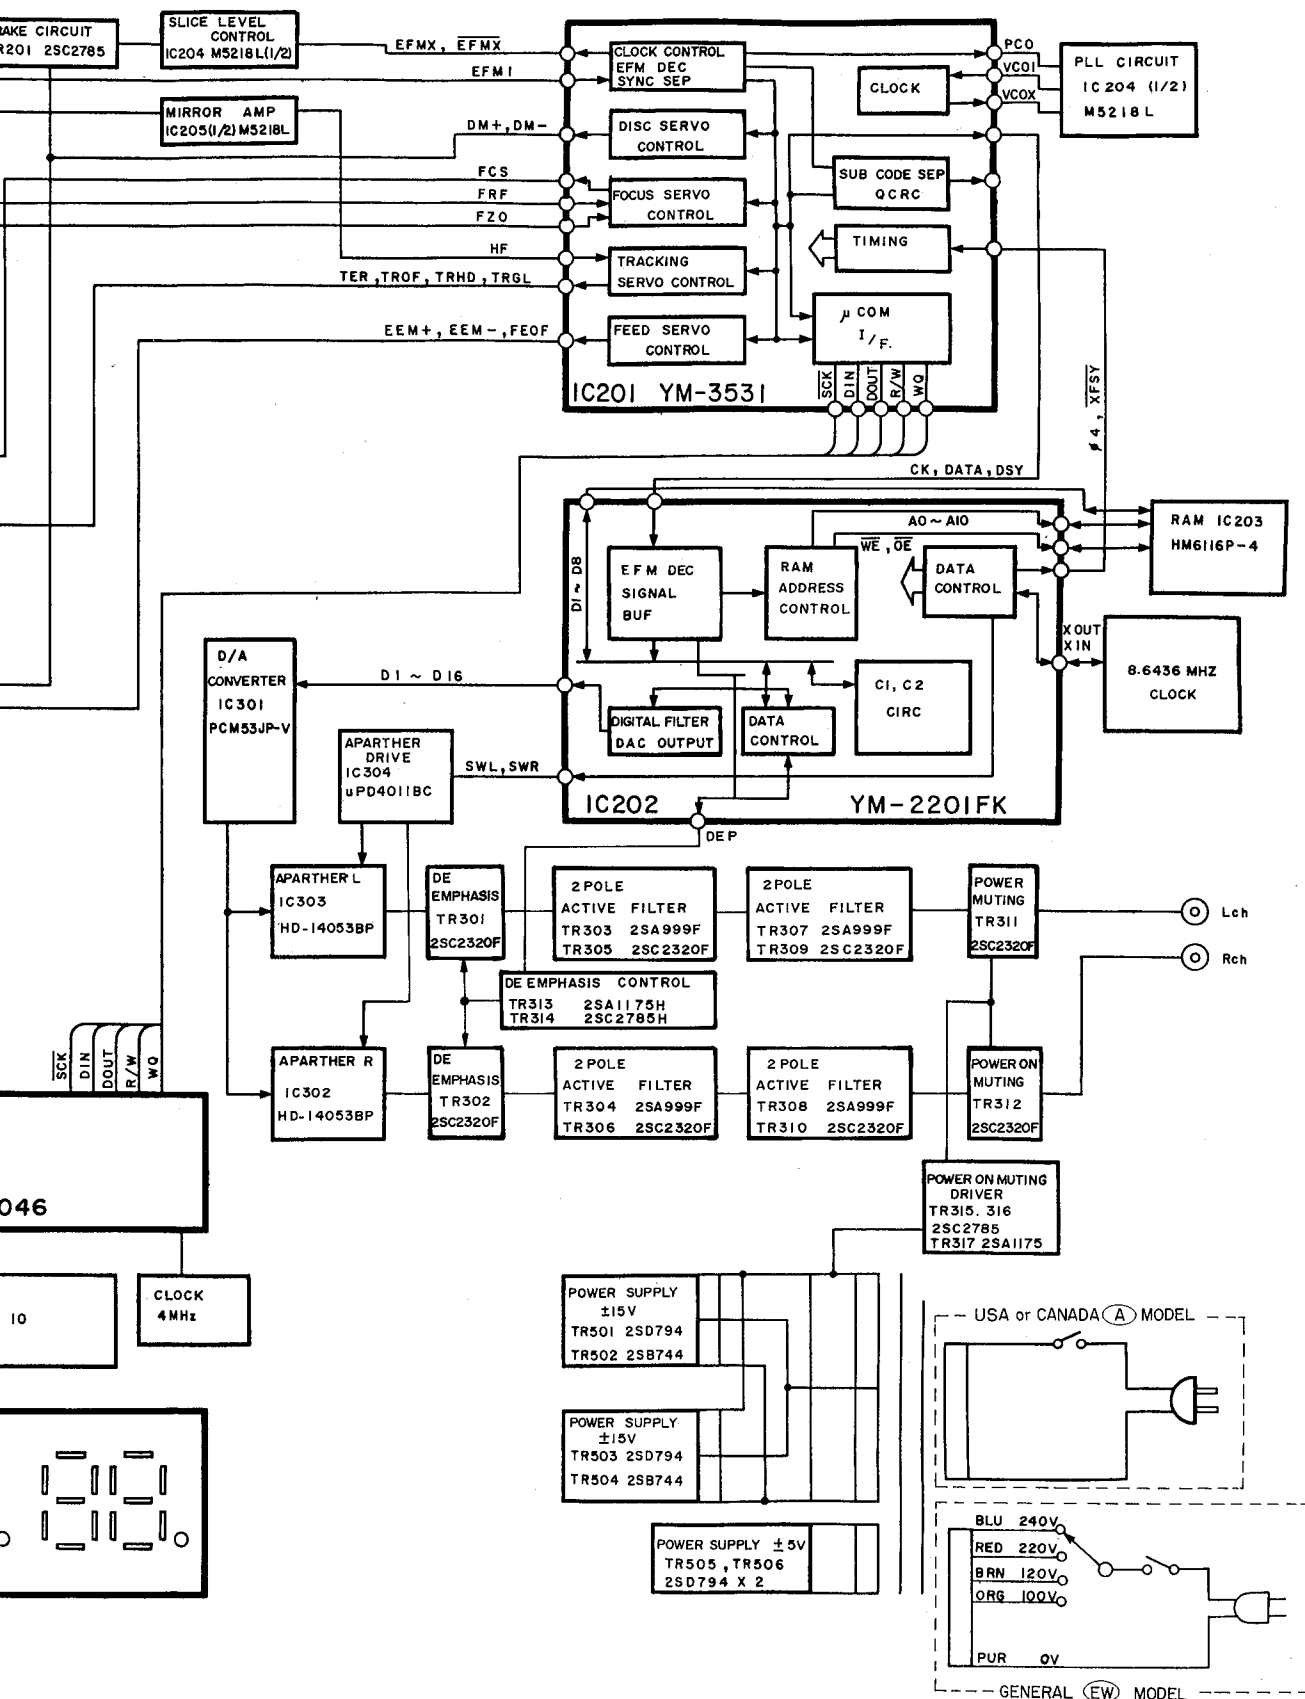

REMOVING THE CABINET

1. Removal of Cover (Figure 1)

Remove screws (A), then lift and remove the cabinet as shown in Figure 1.

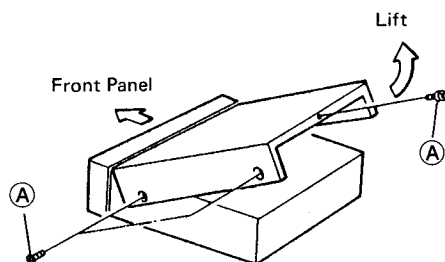


Figure 1

2. Removal of Servo PCB Assembly

The servo PCB rises when the bottom panel (seven screws) and the two (B) screws are removed. (Figures 2 and 3)

Remove the PCB supports and connectors (P101, P102, P103, W202, and W203) to allow for removal of the servo PWB assembly.

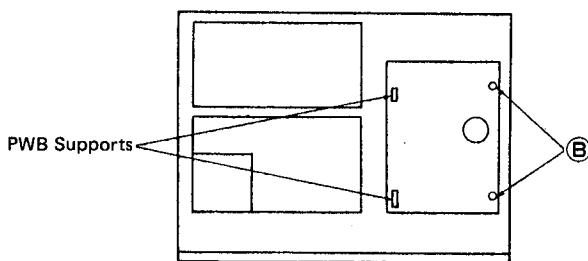


Figure 2

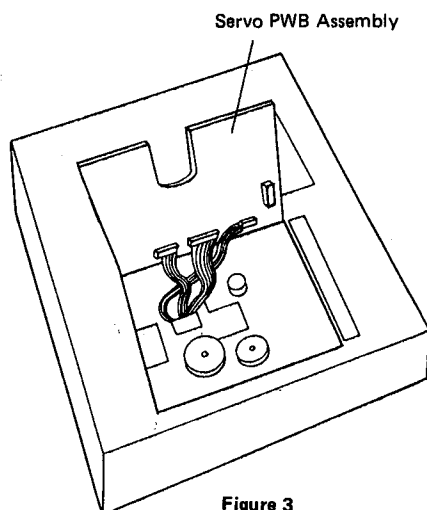


Figure 3

As Seen From Below

3. Removal of Front Panel

Open the disc holder and remove the ornament. (Figure 4)

Remove the cover, the five screws fastening the front panel (two on top, 3 on bottom), then release the catches located on both sides of the chassis.

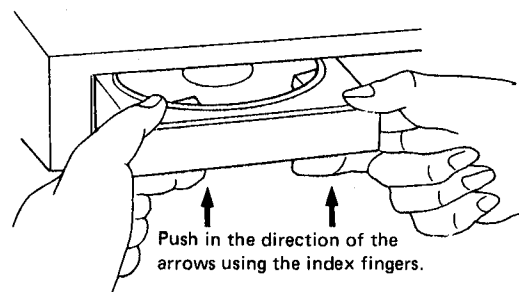


Figure 4

4. Removal of Front PCB Assembly

Remove the front panel, connectors P401 and P402, the three screws (C), and catches (D). (Figure 5)

5. Removal of Main PCB Assembly

Remove the cover and the five (E) screws and (G) screws holding the output jack (Figure 5).

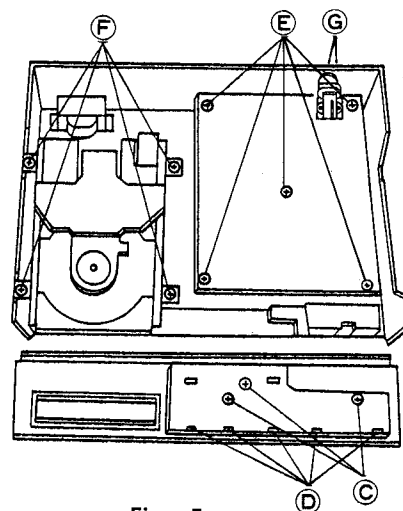


Figure 5

6. Removal of Mechanism Unit

Remove the cover, the four (F) screws, and the P201 – P204 connectors on the main PCB assembly.

DISASSEMBLING THE MECHANISM UNIT

1. Removal of Optical Pickup (Be sure to read 1—4 before replacement)

(1-1) Remove the optical pickup located on the servo PCB assembly, as well as the P101, P102, and P103 connectors. (Refer to page 11 for procedure for cabinet removal)

(1-2) Remove the six (H) screws fastening the clumper, the spring, and finally the clumper. (Figure 6)

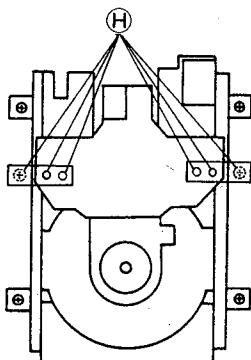


Figure 6

(1-3) Pull out the table then remove the (K) screw, allowing for removal of the optical pickup rail by rail. (Figure 7)

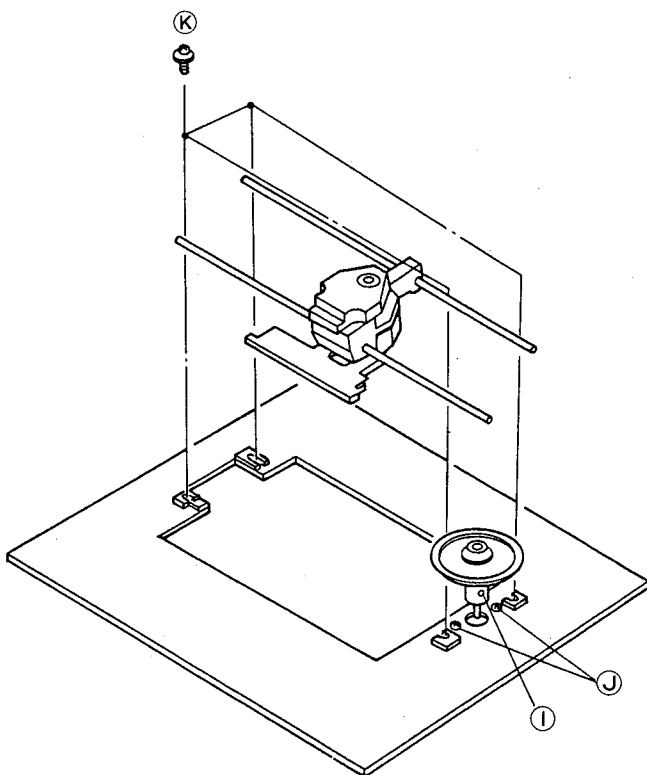



Figure 7

(1-4) Caution When Replacing

The optical pickups which are held in stock at parts centers are short-circuited and soldered.

- (1) Connect the connectors (P101, P102, P103) to the servo PCB assembly.
- (2) Check that there is no leak in the soldering iron before removing the soldering. (Voltage below 10mV.)

If the leak voltage of the soldering iron is not known, short-circuit servo PCB TP109 and TP110 then remove the soldered portion of the optical pickup.

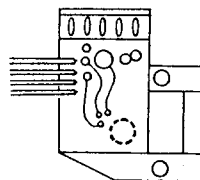

NOTE:

The portion of the Optical pickups available at your parts center is short-circuited and soldered.

Figure 8

2. Removal of Spindle Motor (Figure 7)

(2-1) Perform instructions (1-1) and (1-2) for removal of the optical pickup.


(2-2) Use a 2.0mm hexagonal wrench to loosen the special screw (I) and remove the turntable.

(2-3) Remove the two (J) screws to allow for removal of the spindle motor.

(Use the turntable base spacer jig to set to the height of the turntable upon assembly.)

ADJUSTMENT PROCEDURE


1. Meters and Jigs

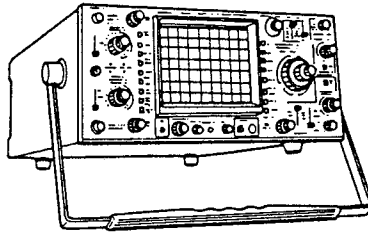


Oscilloscope (3 or more Modes, 100MHz, X-Y Input Possible)




Voltmeter

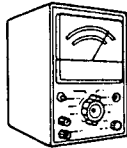


Distortion Meter

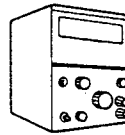

Frequency Counter

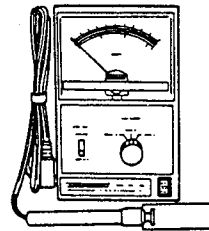


Optical Power Meter



Test Discs

Philips	Test Sample 5	814 125-2 (Non-Scratched)
Philips	Test Sample 5A	814 126-2 (Scratched)
Sony	Type III	

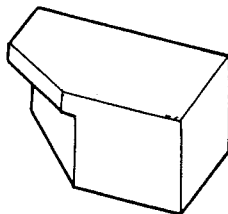

Turntable Base Spacer Jig
18533451

2. Adjustment Points

2-1 VR and TP Layout for Servo PCB Adjustment

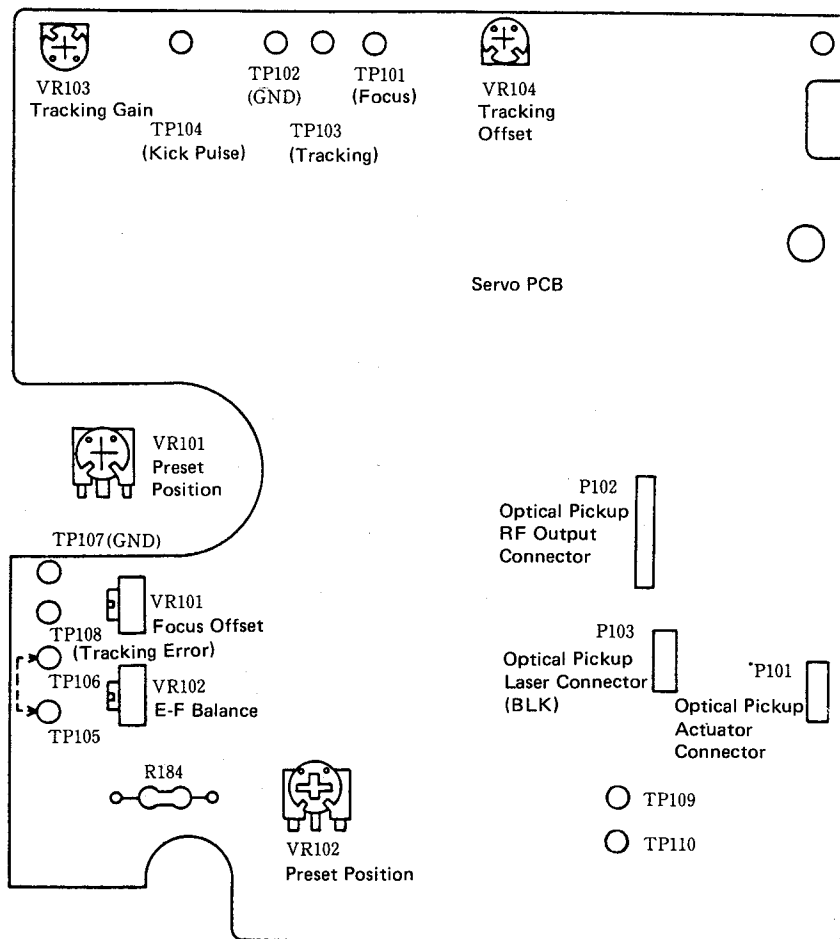


Figure 9

NOTE: The above VR directions are for the preset mode.

2-2 Coil and TP Layout for Main PCB Adjustment

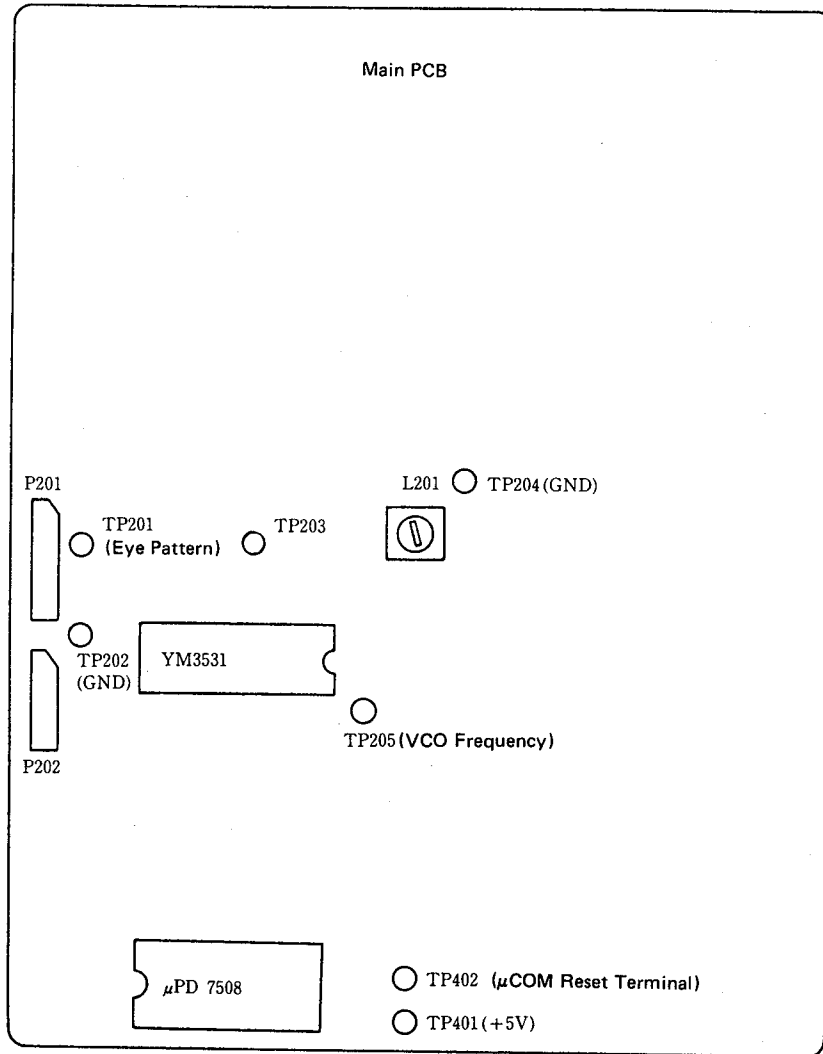


Figure 10

3. Optical Pickup Laser Power Check

- (1) Short-circuit TP105 and TP106 located on the servo PWB.
- (2) Remove the cabinet, place the optical power meter against the pickup, and check that the power is between 0.15mW and 0.4mW.

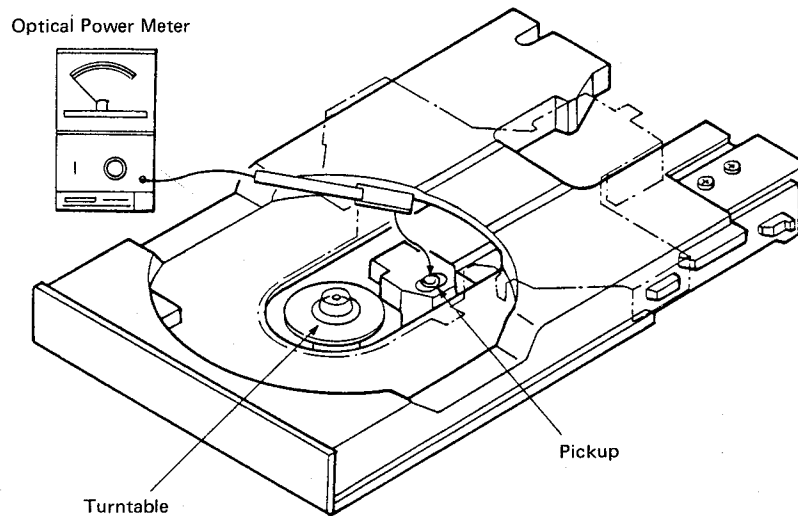


Figure 11

4. Adjustment of Main PWB

4-1 VCO Frequency Adjustment (Set is No signal).

- (1) Connect the frequency counter to TP205 (CLK) and TP204. (Figure 12)
- (2) Remove wire connector W201, turn the power switch on, and short-circuit TP201 and TP202.
- (3) Rotate the L201 core and adjust so that the frequency counter shows a value of $4.322\text{MHz} \pm 0.005\text{MHz}$.
- (4) After adjusting, turn the power off and connect the W201 wire connector.

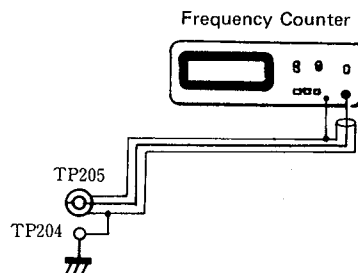


Figure 12


5. Adjustment of Servo PWB

5-1 Setting of Initial Volume

Before adjusting, preset all semi-fixed resistors.
Mechanically center VR101, 102, 103, 104

5-2 Tracking Offset Adjustment


- (1) Rotate VR103 clockwise.
- (2) Connect TP105 and TP106, and without inserting a disc adjust VR104 so that the voltage of TP103 (tracking coil output) and TP102 (GND) is of $0 \pm 5\text{mV}$.
- (3) Disconnect TP105 and TP106, then preset VR103 to the mechanical center.

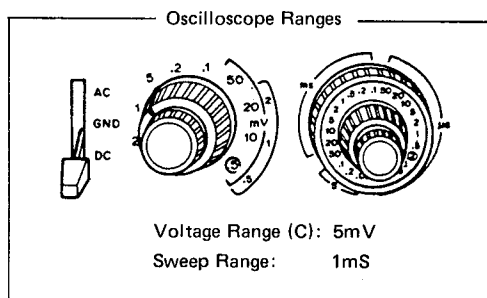


5-3 Focus Offset Adjustment:

with power switch off and no disc.


- (1) Check that the optical pickup connector P103 is properly connected.
- (2) Short-circuit TP109 and TP110, and remove the short-circuited portion of the optical pickup using a soldering iron. (Take sufficient measures against static electricity)
- (3) Connect the voltmeter to both ends of R194 (50Ω).
- (4) Connect TP105 and TP106 together. (Laser On)
- (5) Turn the power switch on compute a current from voltage on both ends of R184, and check that the difference compared to the optical pickup indication (figure 14) is within $\pm 10\text{mA}$ for the + side and -10mA for the - side. Next turn the power switch off and disconnect the voltmeter.
- (6) Turn the power back on, set the Philips Test Sample 4 test disc, and observe the TP201 output waveform (eye pattern).
- (7) Adjust VR101 so that the eye pattern level becomes high and the waveform becomes distinct (so that the lines do are not thick). (Figure 13)

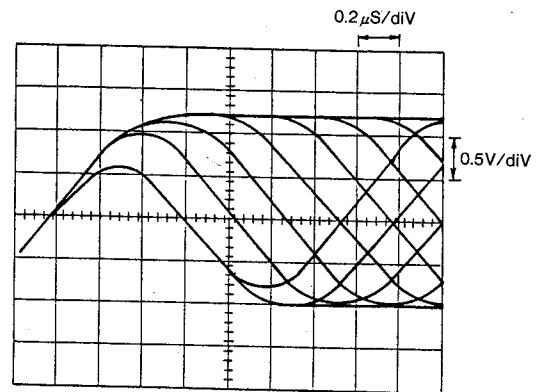

Focus Offset VR Adjustment

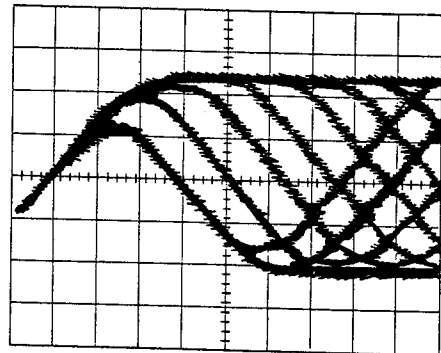

Focus Offset VR at Maximum
(Level is high but waveform is unclear)

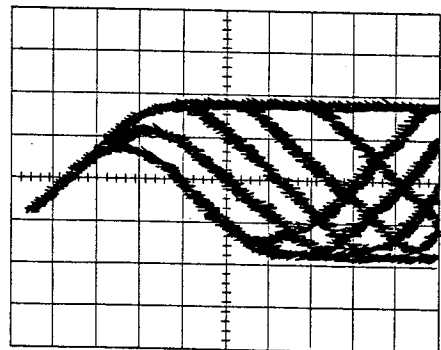

Focus Offset VR at Minimum
(Level is low and waveform is unclear)

Figure 13 Focus Offset VR Eye Pattern Waveforms

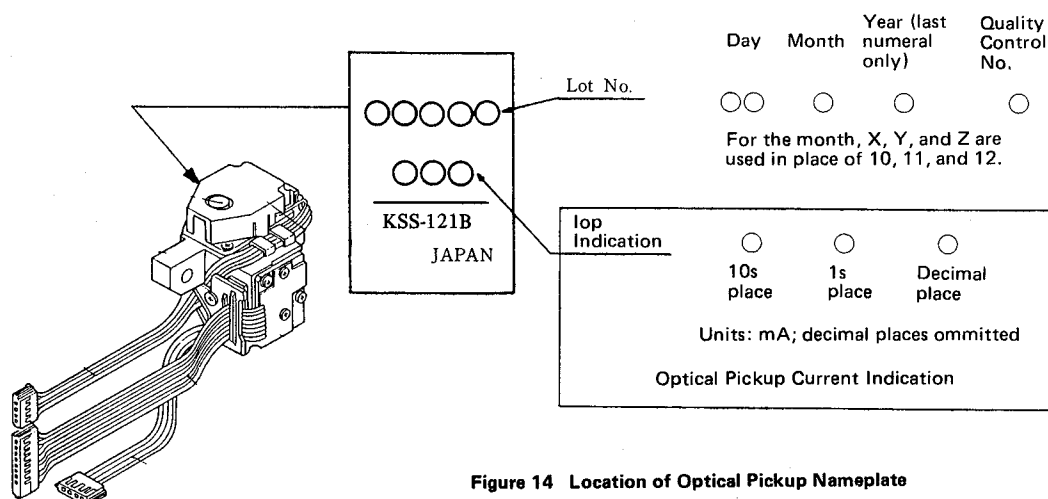


Figure 14 Location of Optical Pickup Nameplate

5-4 E-F Balance Adjustment (Supplementary Beam Balance Adjustment)

- (1) Turn the power off and connect TP105 and TP106.
- (2) Connect the oscilloscope between TP201 (eye pattern output) and TP202 (GND), and also between TP108 Tracking error and TP107 (GND).
- (3) Turn the power switch, insert the Philips Test Sample 5 test disc and playback from the first selection.
- (4) Connect the main PWB TP402 (reset pin) and TP401 (+5V).
(As the microprocessor is in the Reset mode, the LED does not light)
- (5) Rotate VR103 (tracking VR) clockwise.

a) Oscilloscope Ranges

b) Voltage Range (AC): CH1 ... 1V
CH2 ... 0.2V

c) (Set trigger on CH2)

d) Sweep Range: 1mS

- (6) Observe the tracking error waveforms (Figure 15) and adjust VR102 so that the GND line is positioned at exactly half the waveform P-P value.
- (7) Turn the power switch off, disconnect the oscilloscope, TP401 and TP402, and set VR103 to the mechanical center.

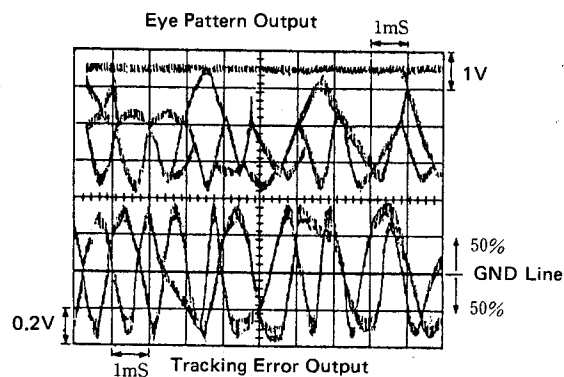
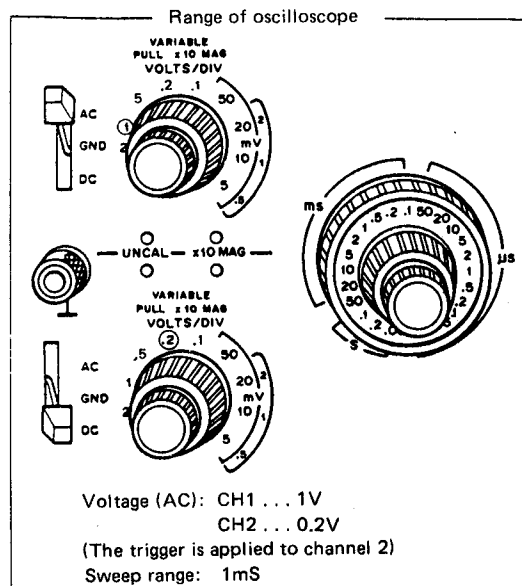


Figure 15

5-5 Tracking Gain Adjustment

- (1) Insert the Philips Test Sample 4 test disc (non-scratched), observe the noise voltage on the voltmeter, and adjust VR103 so that the noise voltage on TP103 and TP102 is of $0.3V\text{ RMS} \pm 0.01V$. (Figure 16)

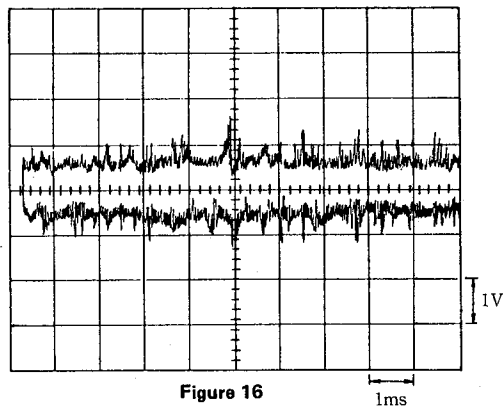


Figure 16

5-6 Kick Gain Adjustment

- (1) Connect TP201 (eye pattern) and TP202 (GND) to CH1 on the oscilloscope, and TP104 (lens kick pulse) and TP102 (GND) to CH2.
- (2) Insert the Philips Test Sample 4 test disc and check the size of the TP201 (eye pattern) output waveform. (Figure 17)
- (3) Pause at selection 10 on the Philips Test Sample 4 test disc.

Oscilloscope Range:

Voltage Range (AC): CH1 ... 1V
CH2 ... 2V

Sweep Range: 0.2mS

Set a trigger on the leading edge of the TP104 waveform on CH2 (lens kick) and observe the TP201 waveform. (Figure 18)




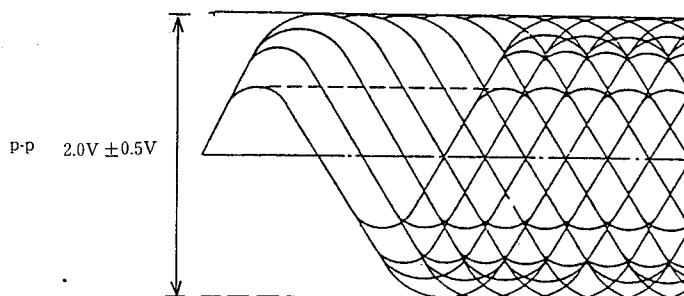


Figure 17 Eye Pattern


Pause Waveform

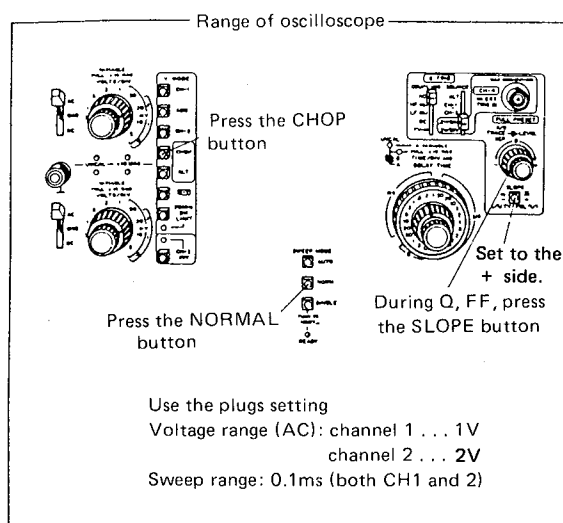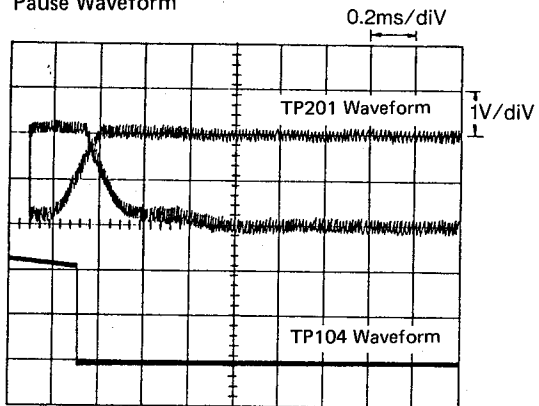


CUE Waveform

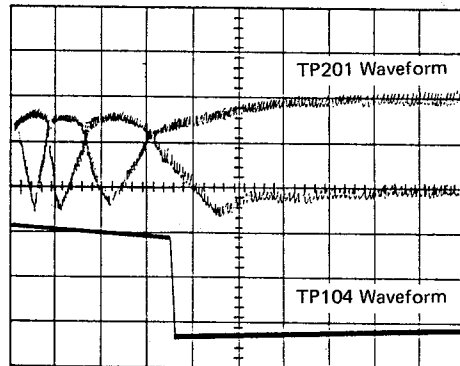

REV Waveform

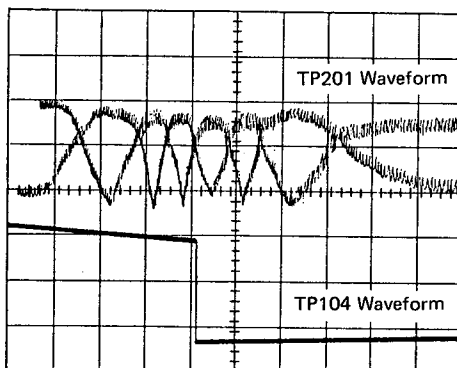

REW Waveform

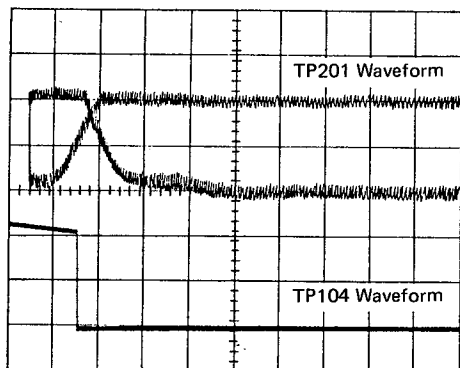

FF Waveform

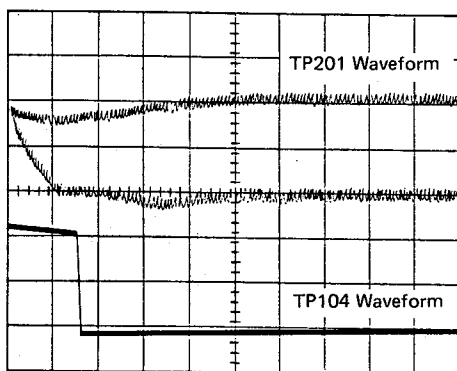


Figure 18 Eye Pattern Waveforms Upon Track Jump

6. Mechanism Unit Adjustment

6-1 Adjustment of Turntable Height (Figure 16)

- (1) Loosen screw ① and insert the turntable base spacer.
- (2) Rotate the turntable, check that there are no gaps or rattling, then tighten screw ①
- (3) If there is no turntable base spacer, adjust to a height of 18.8mm.

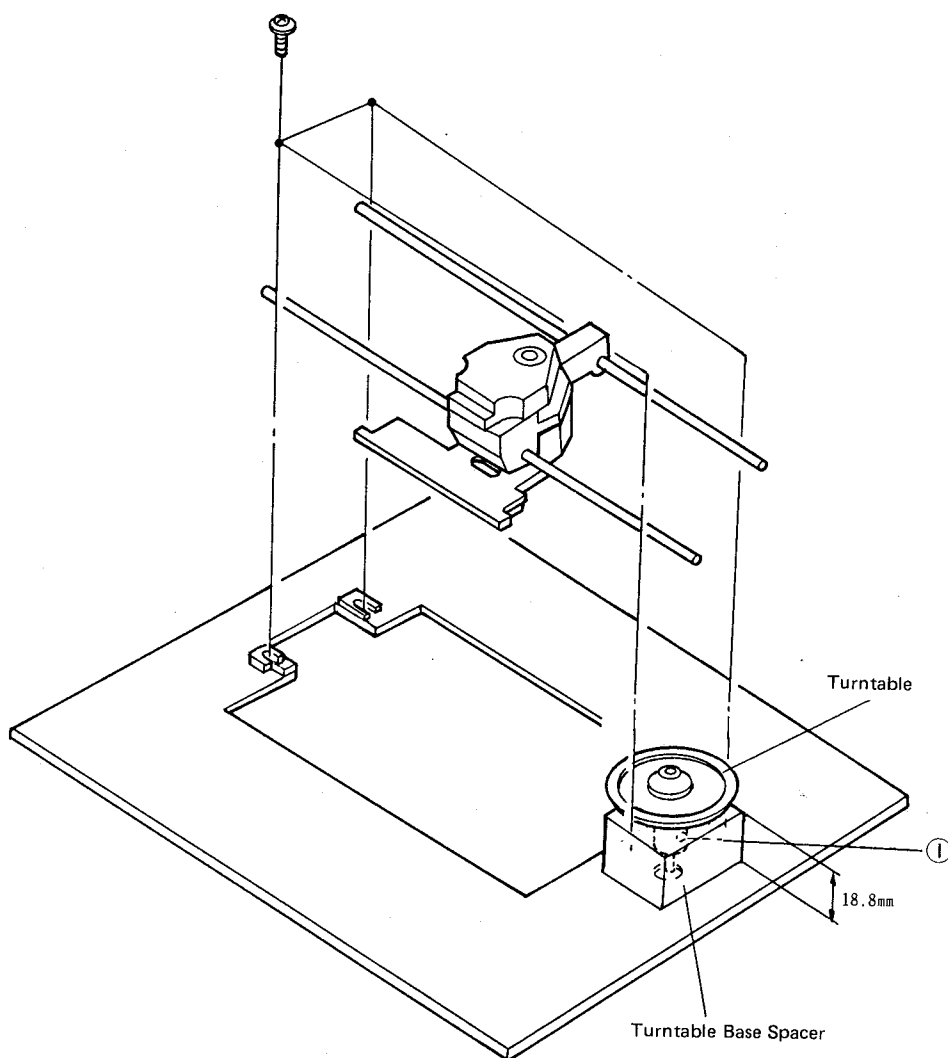


Figure 19

7. Operation Check

7-1 Playability

Use the Philips Test 5A (scratched) test disc, play the following portions and make sure no tracks are jumped.



- (1) Wedge (Interruption)
700 μ m Selection 8 0'00" – 0'30"
- (2) Black Spot (Black Dot)
600 μ m Selection 13 4'10" – Selection 14 0'30"
- (3) Fingerprint
Selection 19 0'00" – 0'30"

6-2 Discs for Adjustments


	Adjustment	Disc	Check
1	Frequency Response	SONY TEST CD TYPE III	20Hz – 20kHz $\begin{smallmatrix} +0.5 \text{ dB} \\ -0.7 \end{smallmatrix}$
2	Distortion Rate	SONY TYPE III Selection 1	0.05% or below
3	S/N	SONY TYPE III Selection 1 PLAY/PAUSE	93dB or greater
4	Emphasis Response	SONY TYPE III Selection 39 – 41	(39) 1kHz $-0.37\text{dB} \pm 0.5\text{dB}$ (40) 5kHz $-4.53\text{dB} \pm 0.5\text{dB}$ (41) 16kHz $-9.04\text{dB} \pm 0.5\text{dB}$
5	Cross Talk	SONY TYPE III Selection 30 (L), Selection 34 (R)	75dB or greater

TROUBLE SHOOTING


1. Does not initialize

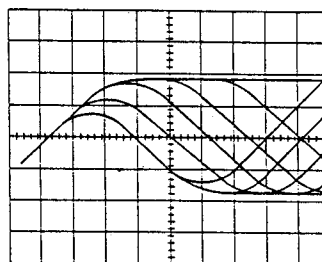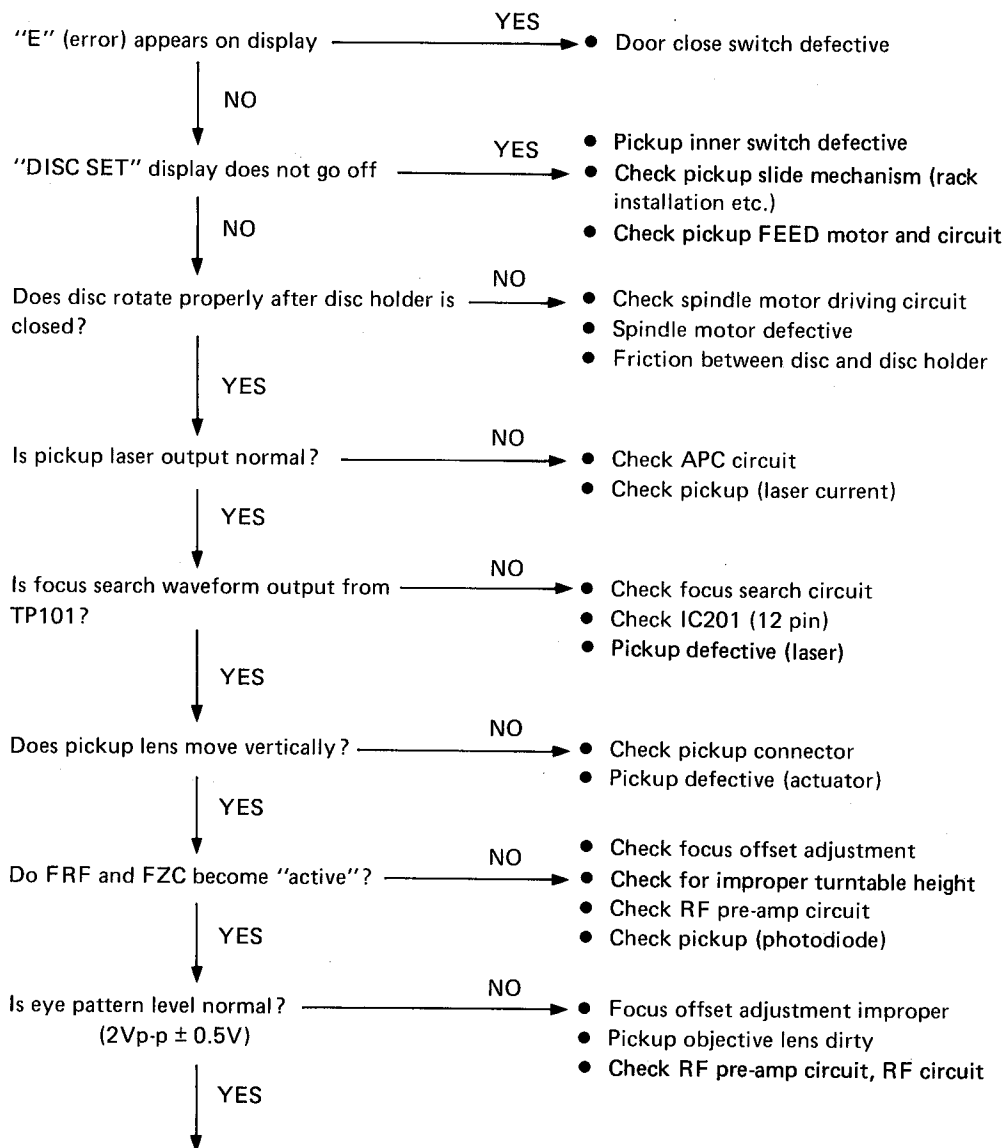


Eye Pattern

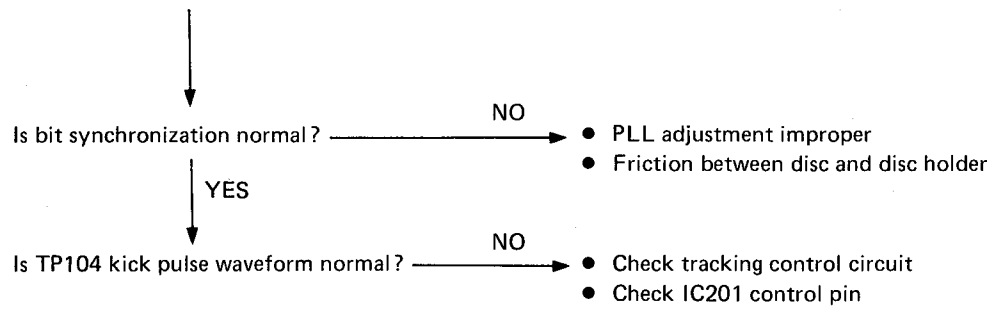



Bit Synchronization Waveform

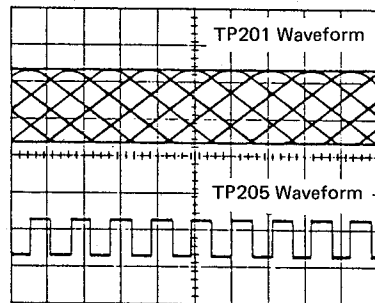


Pause Waveform

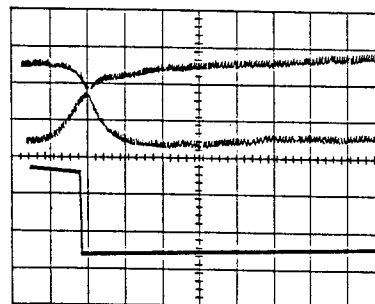


Rewind Waveform

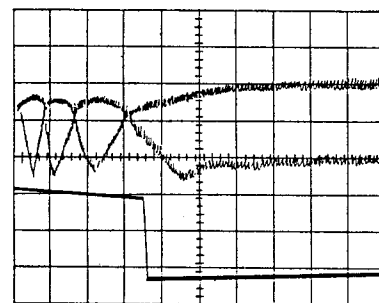
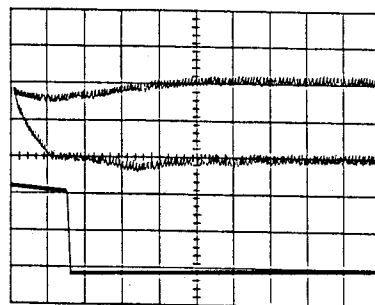


Cue Waveform

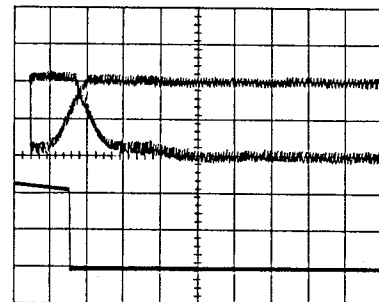


FF Waveform

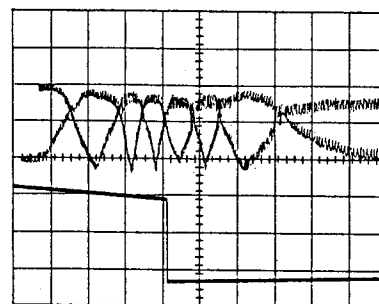

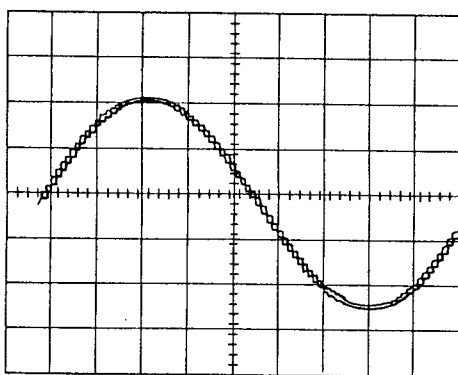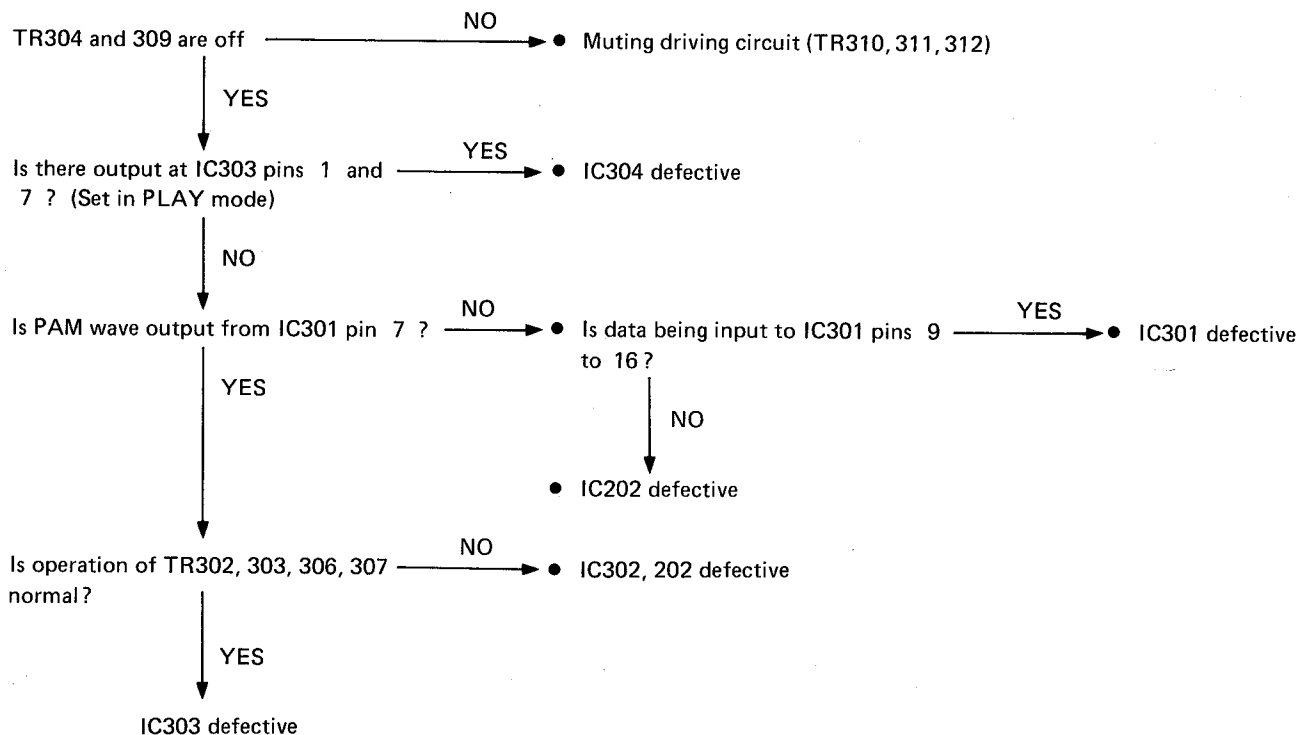2. No sound is produced

PAM Waveform
(Test Disc: Sony Type III, 1st selection)

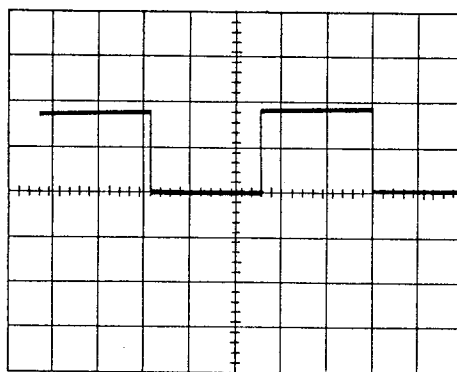

IC301 Pin 1 Waveform
(Test Disc: Sony Type III, 1st selection)

3. IC201 Terminal Functions

Terminal number	Terminal code	I/O	Outline of functions
1	VDD	I	+5V power supply terminal
2 3	VCOX VCOI	0 I	The LC resonance circuit is connected between these terminals. These terminals are used for the VCO clock oscillation (average 8.6436MHz).
4	PCO	0	This is the VCO clock control output terminal. This sets the VCO clock oscillation circuit so that the frequency increases when the average DC voltage between these terminals is high.
5 20	VCC VSS	I I	These are the grounding terminals.
6 7	EFMX EFMX	0 0	Connect to the EFM signal slice level control circuit. This is the amplification-limited EFM signal output terminal. $8 > 7$. The gain of $7 > 6$ is 15.
8	EFMI	I	Input the EFM signal ($1 - 2V_{PP}$) into this terminal
9	SYEQ	0	This is the monitor output terminal that gives a "H" level signal when the synchronization signal of the EFM pattern and the synchronization signal of the internal counter correspond.
10 11	DM + DM -	0 0	These are the PWM output terminals, connected to the disc motor drive circuit. It is not possible for both terminals to register "H" simultaneously.
12	FCS	0	This is the focusing output terminal.
13	$\overline{FZC}$	I +	Based on the focus error signal, a "L" signal will be input when the focus point is reached.
14	FRF	I	A "H" signal will be entered into this terminal when reflected light is received.
15	H $\dot{F}$	I	The EFM envelope signal (amplitude logic level) is entered into this terminal.
16	TER	I	The tracking error signal (amplitude logic level) is entered into this terminal.
17	$\overline{TEST}$	I +	This test terminal is to be grounded, and contains pull-up resistors.
34	TCL	I +	This test terminal is ungrounded, and contains pull-up resistors.
18	TROF	0	This is the output terminal that switches off the tracking signal of the tracking servo circuit.
19	TRGL	0	This output terminal minimizes the gain of the tracking servo circuit.
20	TRHD	0	This output terminal holds the tracking error signal of the tracking servo circuit while KP+ or KP- (see below) are being output.
22 23	KP + KP -	0 0	These output terminals are for the track kick function, and are connected to the tracking servo circuit.
24	FEOF	0	This output terminal is used to switch off the input signal of the feed servo circuit.
25 26	FEM + FEM -	0 0	These output terminals are for the high-speed feed function, and are connected to the feed servo circuit.
27	WQ	0	This request output terminal is connected to μCOM , and requests that data data be sent from $\text{SVC} > \mu\text{COM}$.

Terminal number	Terminal code	I/O	Outline of functions
28	R/W	0	This output terminal is connected to μCOM , and is used for the switching of the data transmission mode. When R/W = "L", data is transmitted from $\text{SVC} > \mu\text{COM}$, and when R/W = "H", data is transmitted from $\mu\text{COM} > \text{SVC}$.
29	DOUT	0	This data output terminal is connected to μCOM . When R/W = "L", data can be transmitted from $\text{SVC} > \mu\text{COM}$ according to the SCK clock input.
30	DIN	1	This data input terminal is connected to μCOM . When R/W = "H", data is transmitted from $\mu\text{COM} > \text{SVC}$ according to the SC key clock input.
31	SCK	1	Connected to μCOM , this terminal is for the clock input, required for data transmission.
32	XFSY	1	This is the frame synchronization signal (7.35kHz) input terminal, connected to the SCG output.
33	$\phi 4$	1	This is the crystal clock (4.321MHz) input terminal, connected to the SGP output.
35	RCX	1 +	Connected to μCOM , this terminal is for the clock input, required for the subcode transmission. It is disconnected when not being used.
36	VFSY	0	This is the VCO frame synchronization signal (average 7.35kHz) output terminal, connected to μCOM . Detecting the change from "H" > "L", this can be used as a request signal, requesting that the subcode be transmitted from $\text{SVC} > \mu\text{COM}$.
37	SUB	0	This is the subcode output terminal, connected μCOM . The subcode can be transmitted from $\text{SVC} > \mu\text{COM}$, according to the RCK clock input.
38	DSY	0	This is the synchronization signal output terminal for the serial signals (see below), connected to the SGP input.
39	DATA	0	This is the serial signal output terminal for the 8 bit EFM demodulation signals and the 5 bit control signals, connected to the SGP input.
40	CK	0	This is the VCO clock (average 4.3218MHz) output terminal, connected to the SGP input.

4. IC202 Terminal Functions

Terminal number	Terminal code	I/O	Outline of functions
1 17	VSS VSS	I I	These are the grounding terminals.
2 3 7 8	$\overline{\text{TEST 1}}$ $\overline{\text{TEST 2}}$ $\overline{\text{TEST 3}}$ TCL	I+ I+ I+ I+	These test terminals are ungrounded, and contain pull-up resistors.
4	CK	I	This is the VCO clock (average 4.3218MHz) input terminal, connected to the SVC output.
5	DATA	I	This is the serial signal input terminal for the 8 bit EFM demodulation signals and the 5 bit control signals, connected to the SVC output.
6	DSY	I	This is the synchronization signal input terminal for the serial signals (see above), connected to the SVC output.
9	$\phi 4$	O	This is the crystal clock (4.3218MHz) output terminal, connected to the SVC input.
10	$\overline{\text{XFSY}}$	I/O	This is the frame synchronization signals (7.35kHz) output terminal, connected to the SVC input. (During test operations, the synchronization can be resynchronized by setting this terminal to the "L level".)
11 12 13 14 15 16 18 19 20 21 24	A0 A1 A2 A3 A4 A5 A6 A7 A8 A9 A10	O O O O O O O O O O O	These are the address output terminals, connected to the RAM address terminals.
22	$\overline{\text{WE}}$	O	This is connected to the RAM WE terminal. When a "L level" signal is registered, the RAM will be set to the WRITE mode.
23	$\overline{\text{OE}}$	O	This is connected to the RAM OE terminal. When a "L level" signal is registered, the RAM will be set to the READ mode.
25 26 27 28 29 30 31 32	D8 D7 D6 D5 D4 D3 D2 D1	I/O I/O I/O I/O I/O I/O I/O I/O	These are connected to the RAM data terminals. The output mode is set when the cycle at the data input terminal is WE = "L", and the input mode is set when the cycle is WE = "H".
33	DEP	O	This is the output terminal for the audio frequency characteristics switching signals of the audio filter. The emphasis will be required when "H" is registered.


Terminal number	Terminal code	I/O	Outline of functions
34	$\overline{Q1}$	0	Connected to the DAC input, the parallel signals are output by way of the internal digital filter from these terminals. The output is in alternation from the left and right channels. The output rate for each channel is 88.2kHz. Connect either Q16 or ($\overline{Q16}$), according to the DAC to be used.
35	$\overline{Q2}$	0	
36	$\overline{Q3}$	0	
37	$\overline{Q4}$	0	
38	$\overline{Q5}$	0	
39	$\overline{Q6}$	0	
40	$\overline{Q7}$	0	
41	$\overline{Q8}$	0	
42	$\overline{Q9}$	0	
43	$\overline{Q10}$	0	
44	$\overline{Q11}$	0	
45	$\overline{Q12}$	0	
46	$\overline{Q13}$	0	
47	$\overline{Q14}$	0	
48	$\overline{Q15}$	0	
49	$\overline{Q16}$	0	
50	Q16	0	
51	$\phi 2$	0	This is the crystal clock (2.1609MHz) output.
52	SDO	I/O	This is the serial signal output for the DAC. Using a $\phi 2$ clock beat rate, the signals are output from LSB in the order of L channel 24 bit — R channel 25 bit.
53	SDSY	0	This is the synchronization signal output for the above serial signals. The level is "H" for L channel and "L" for R channel.
56	TEST	I+	This test terminal contains pull-up resistors, and is normally disconnected. Using a "L" signal, it is also possible to input serial signals with the same format as the above serial signals from the SDO terminal into the digital filter.
54	C1F1	0	This monitor output terminal depicts the C1 and C2 error correction operation mode.
55	C1F2	0	
57	C2F1	0	
58	C2F2	0	
59	R/L	0	This is the output terminal for the channel allocation signal of the DAC analog output. "H" is for the R channel, and "L" is for the L channel.
60	SWR	0	This is the degliche signal for the respective channels of the DAC analog output.
61	SWL	0	
62	VDD	I	This is the +5V power supply terminal.
63	XIN	I	A crystal oscillator is connected between these terminals, which are used for the crystal clock (8.6436MHz) oscillation.
64	XOUT	0	

5. IC401 Terminal Functions


Terminal number	Terminal code	I/O	Outline of functions	Active Level
1	ϕ OUT	O	Internal clock output, open before use	H
2	$\overline{S0}$	O	7 segment display (a)	"L"
3	$\overline{S1}$	O	7 segment display (b)	"L"
4	$\overline{S2}$	O	7 segment display (c)	"L"
5	$\overline{S3}$	O	7 segment display (d)	"L"
6	$\overline{KEY0}$	I	Key matrix input	"L"
7	$\overline{KEY1}$	I	Key matrix input	"L"
8	$\overline{KEY2}$	I	Key matrix input	"L"
9	IR	I	Indicates reception of remote control data	"H"
10	$\overline{S4}$	O	7 segment display (e)	"L"
11	$\overline{S5}$	O	7 segment display (f)	"L"
12	$\overline{S6}$	O	7 segment display (g)	"L"
13	$\overline{S7}$	O	7 segment display (h) — dot point — DISC, MEMORY	"L"
14	$\overline{T0}$	O	Display dynamic scan (minutes 10s place)	"L"
15	$\overline{T1}$	O	Display dynamic scan (minutes 1s place)	"L"
16	$\overline{T2}$	O	Display dynamic scan (seconds 10s place)	"L"
17	$\overline{T3}$	O	Display dynamic scan (seconds 1s place)	"L"
18	RESET	I	Reset input	H
19	CL 1	I	Oscillator circuit input	H
20	V _{DD}	I	Power supply input	H
21	CL 2	O	Oscillator circuit output	H
22	INT 1	I	Interrupt input, connected to GND before use	
23	WQ	I	Time data read out demand	"H" Active
24	$\overline{SCK}$	O	Serial communications clock	"L" Pulse
25	SO	O	Command transmission line (7508 → 3531)	"H"
26	SI	I	Time data transmission line (3531 → 7508)	"H" Active
27	RD 0	I	Remote control data (parallel bit 1)	"H"
28	RD 1	I	Remote control data (parallel bit 3)	"H"
29	RD 2	I	Remote control data (parallel bit 3)	"H"
30	$\overline{R/W}$	O	Serial communications direction control (→ YM3531)	H (command) L (data)

Terminal number	Terminal code	I/O	Outline of functions	Active Level
31	$\overline{\text{D-CLS}}$	I	Disc tray closed position detection switch input	"L"
32	$\overline{\text{D-OPN}}$	I	Disc tray open position detection switch input	"L"
33	$\overline{\text{P-STA}}$	I	Pickup inner circumference position detection switch input	"L"
34	RD 3	I	Remote control data (parallel bit 4)	"H"
35	D-CSG	O	Disc tray closing direction driving output	"H"
36	D-OSG	O	Disc tray opening direction driving output	"H"
37	LA-ON	O	Pickup laser output signal	"H"
38	$\overline{\text{S 8}}$	O	Display output (i) REPEAT A ↔ B, REPEAT TIME SPACE PLAY/PAUSE	"L"
39	V _{SS}	I	GND pin	L
40	EVENT	I	Event input, connected to GND before use	H


IC BLOCK DIAGRAM

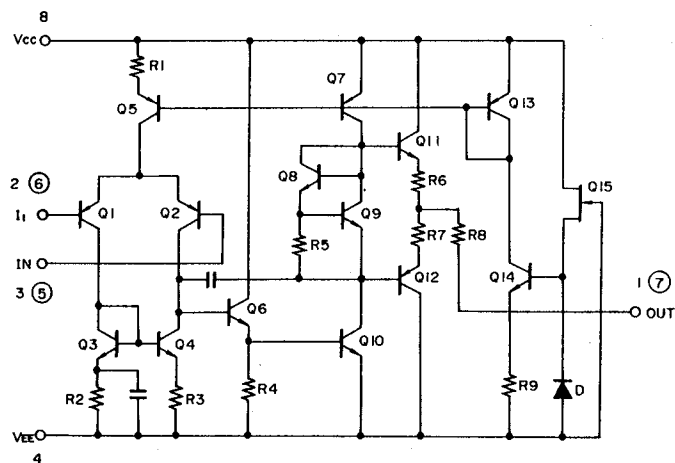


IC BA4558
IC102, 103, 104, 105, 106

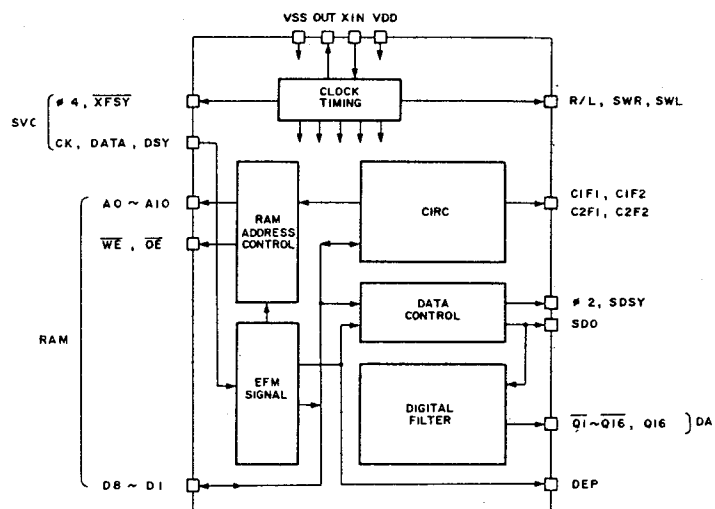





IC MOS YM-2201F
IC202

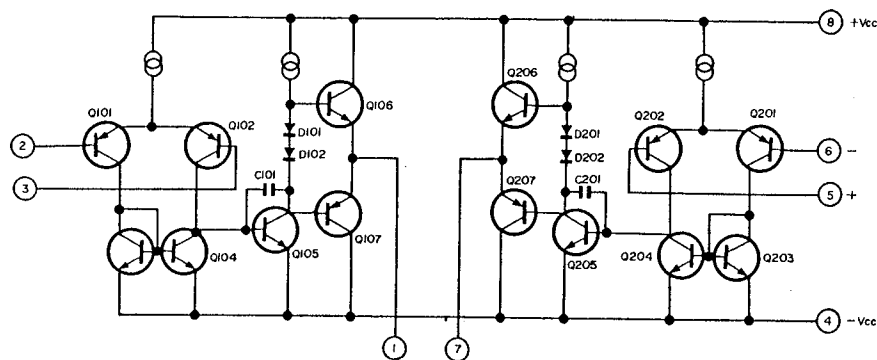


IC M5218L
IC 204, 205, 206, 701

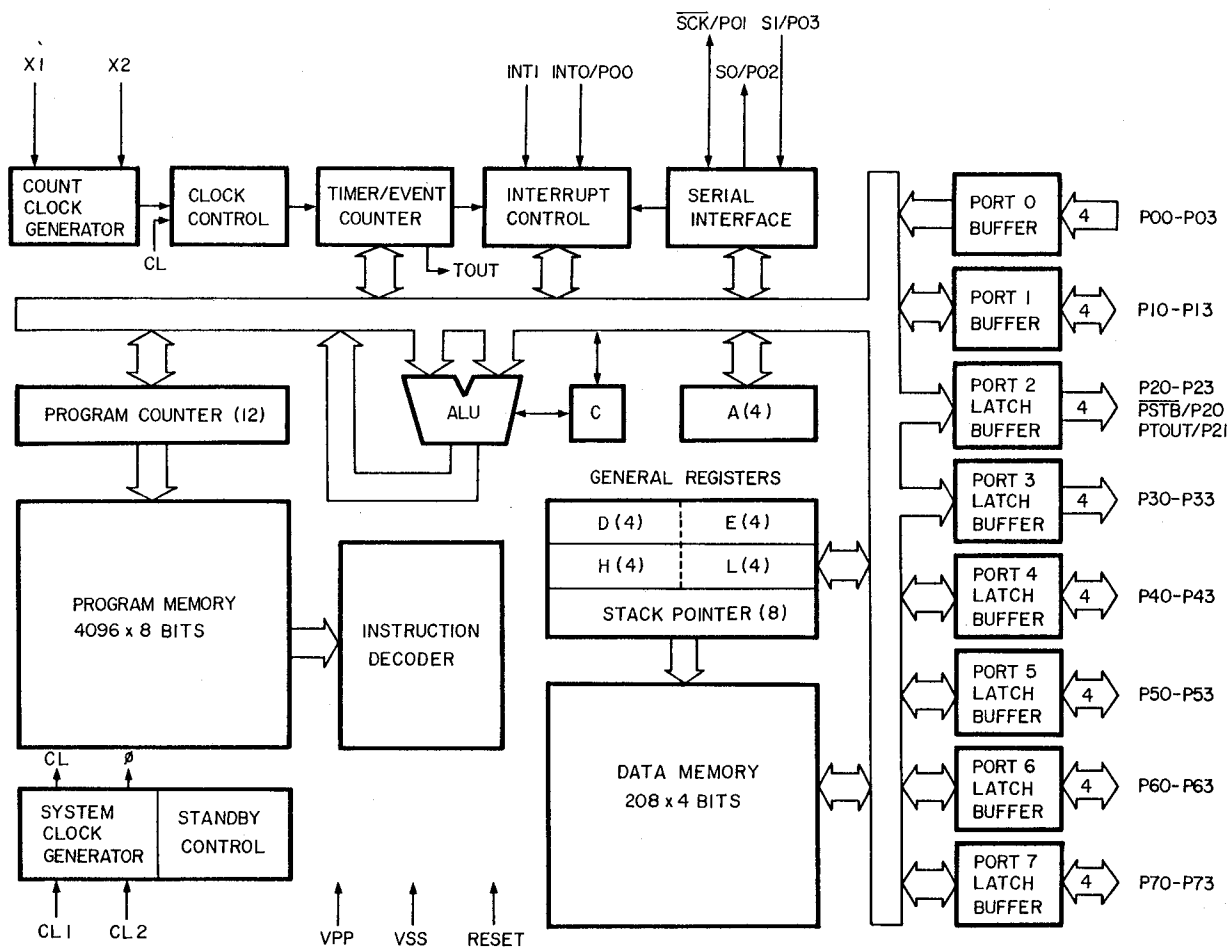


IC MOS μ PD7508HC-046
IC401

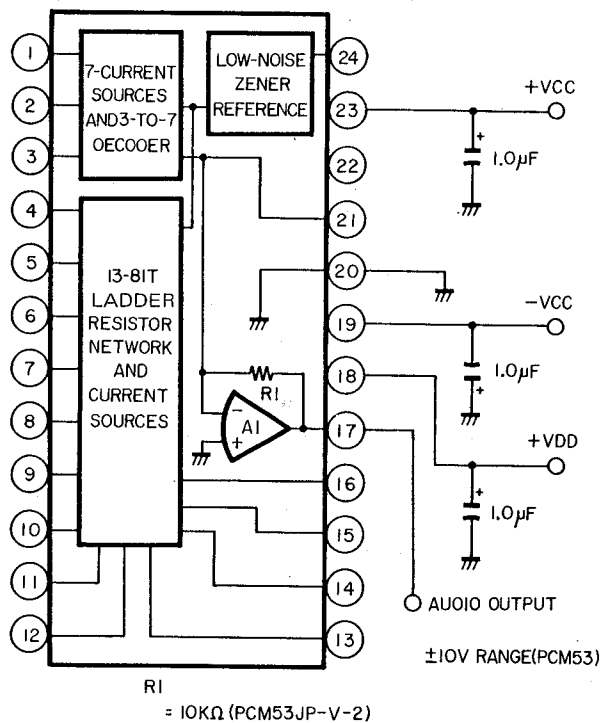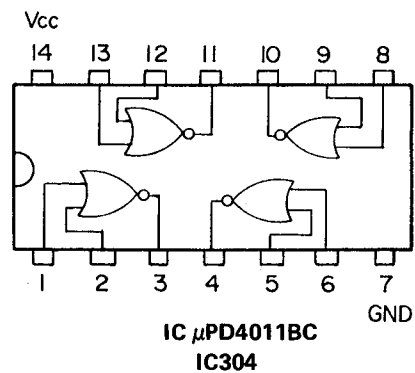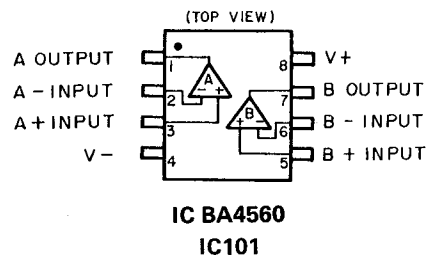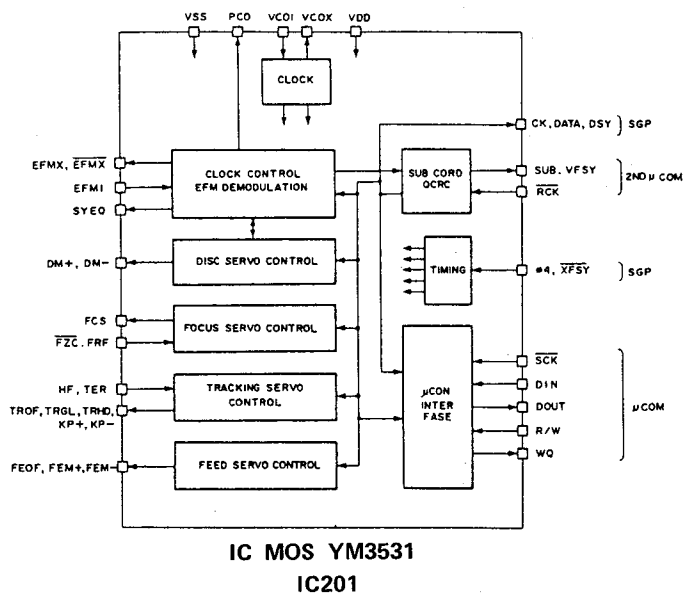


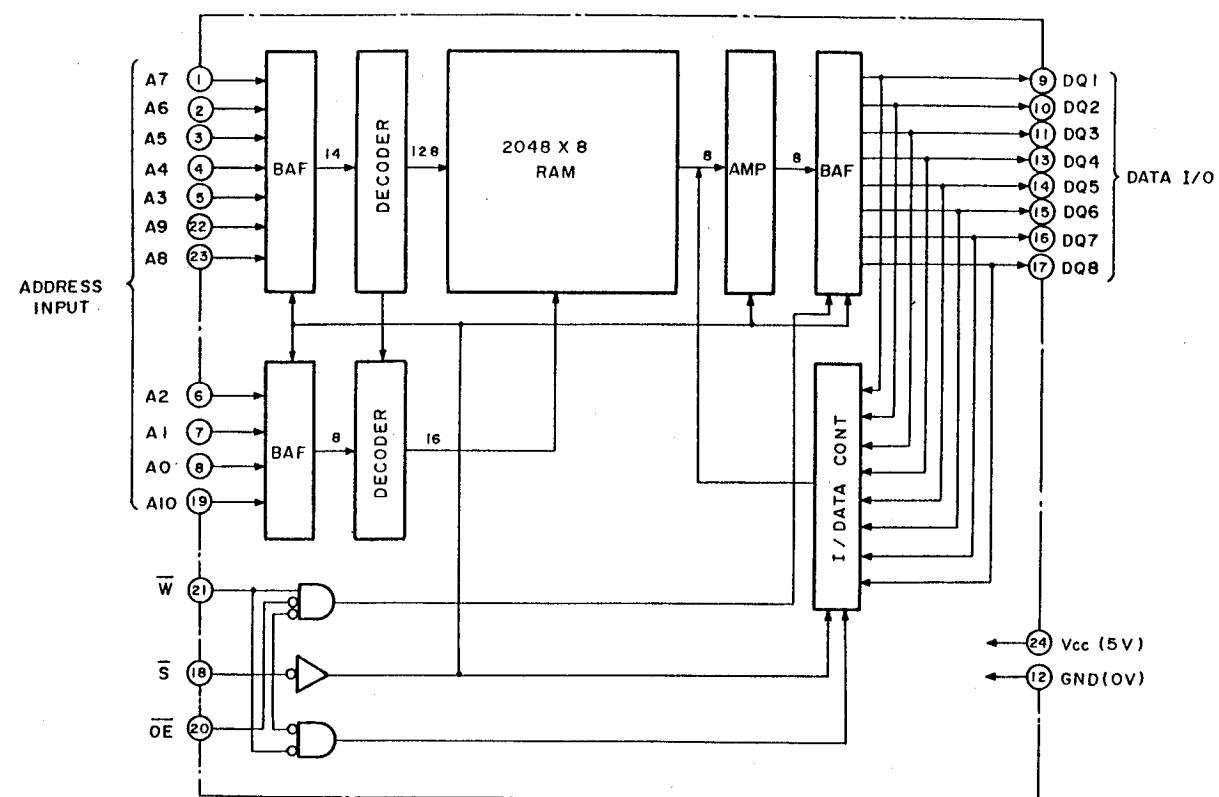


IC HM6116P-4
IC203

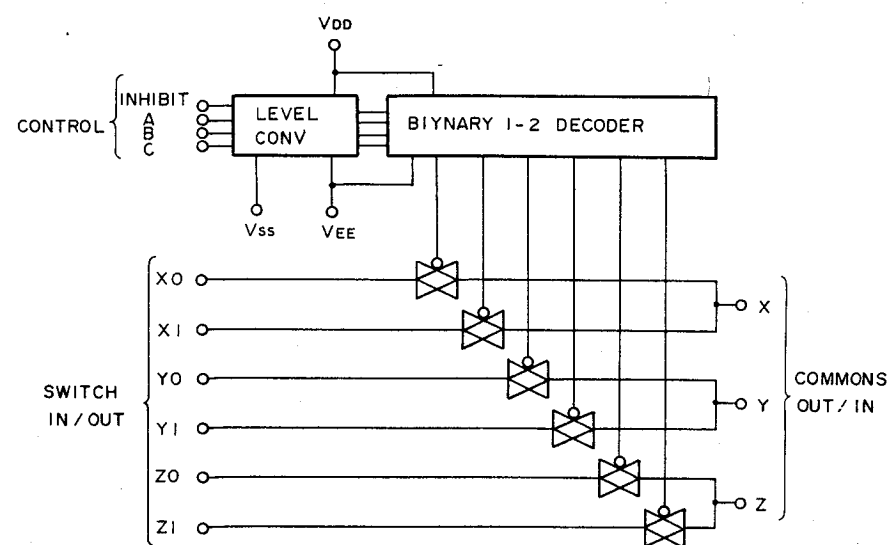


IC HD14053BP
IC302, 303

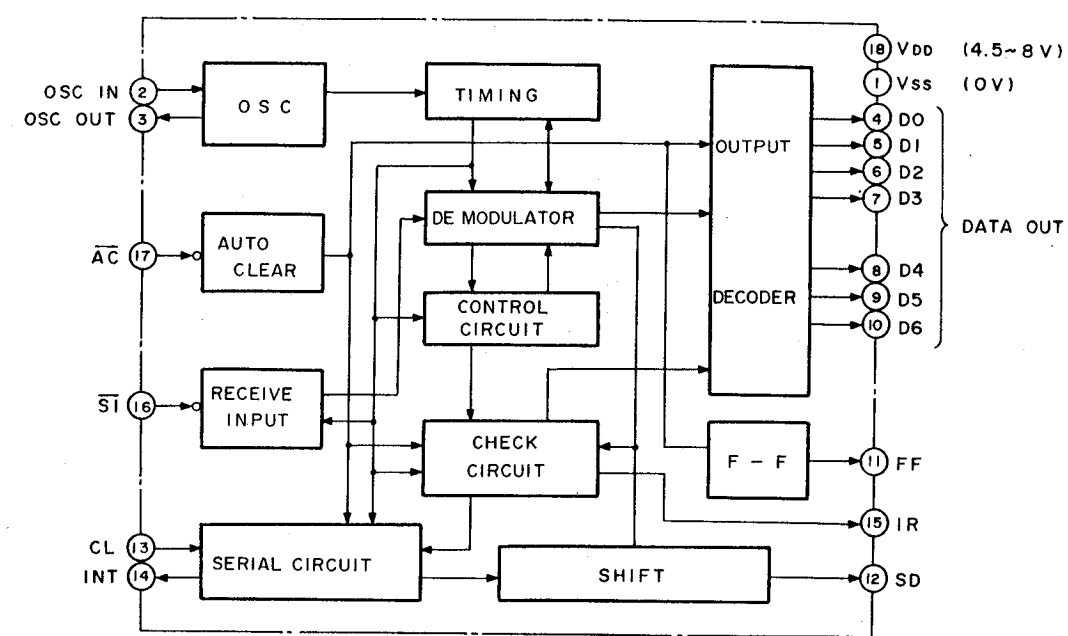


IC M5017P
IC402

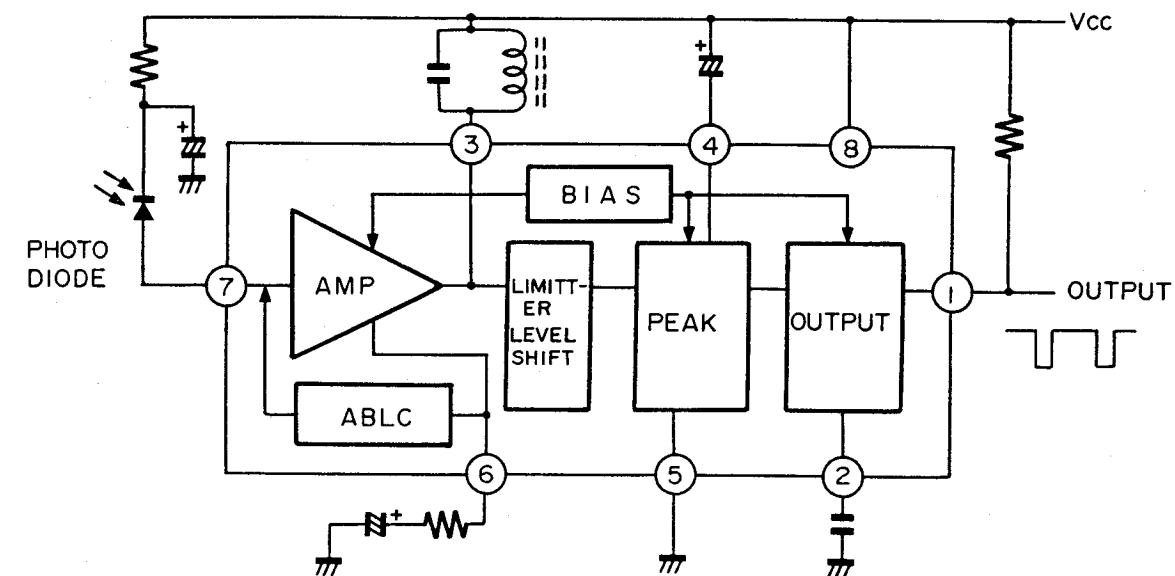


IC μPC1473HA
IC601

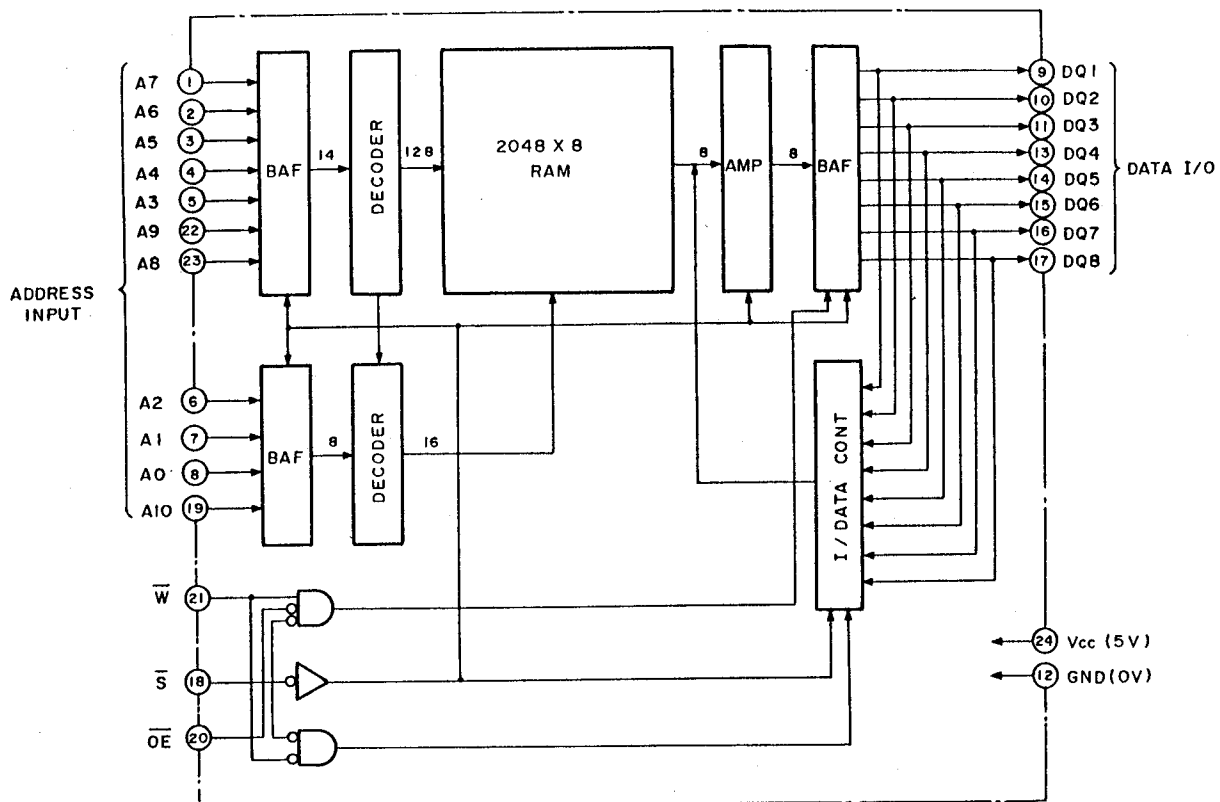


IC HM6116P-4
IC203

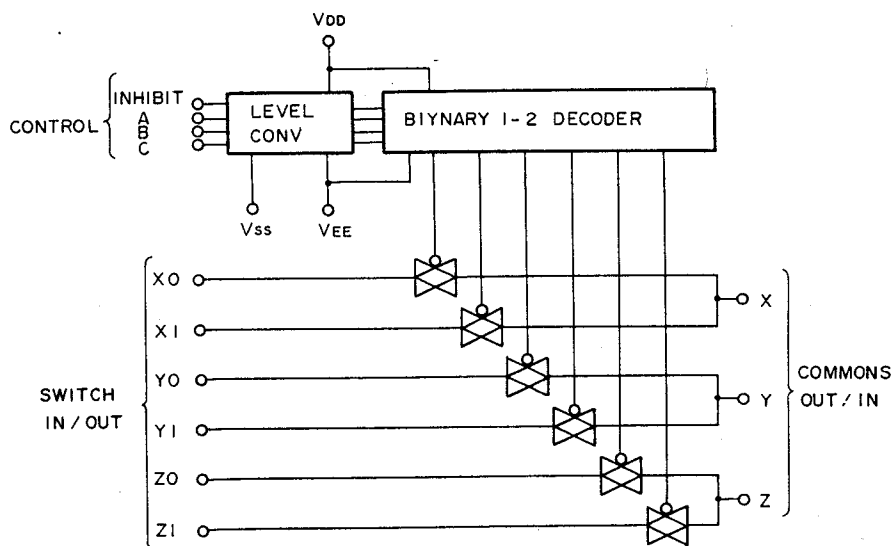

IC HD14053BP
IC302, 303

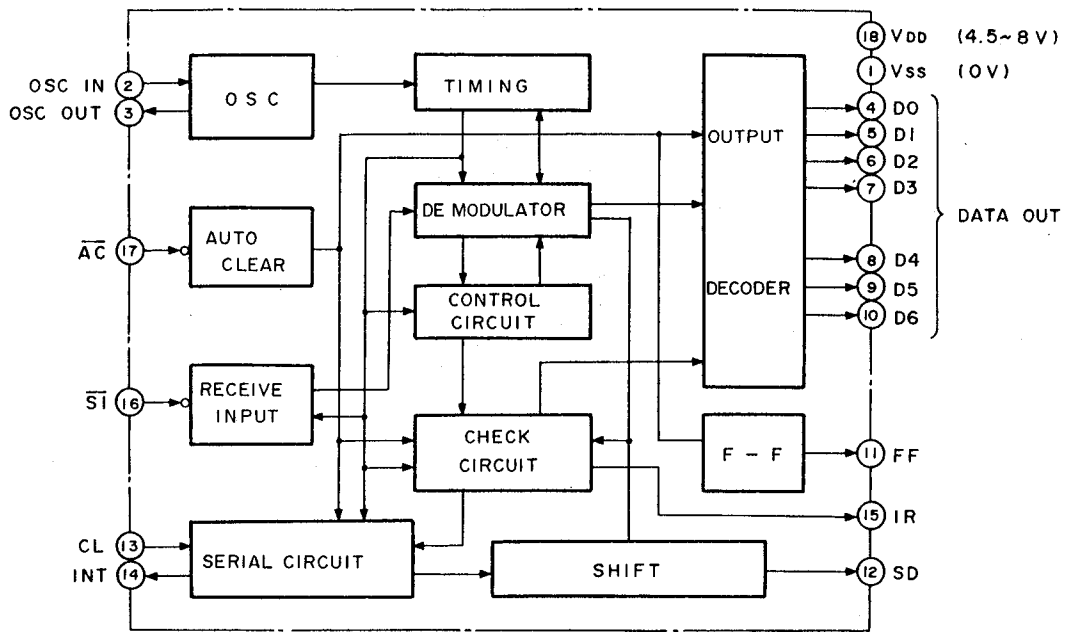


IC M5017P
IC402

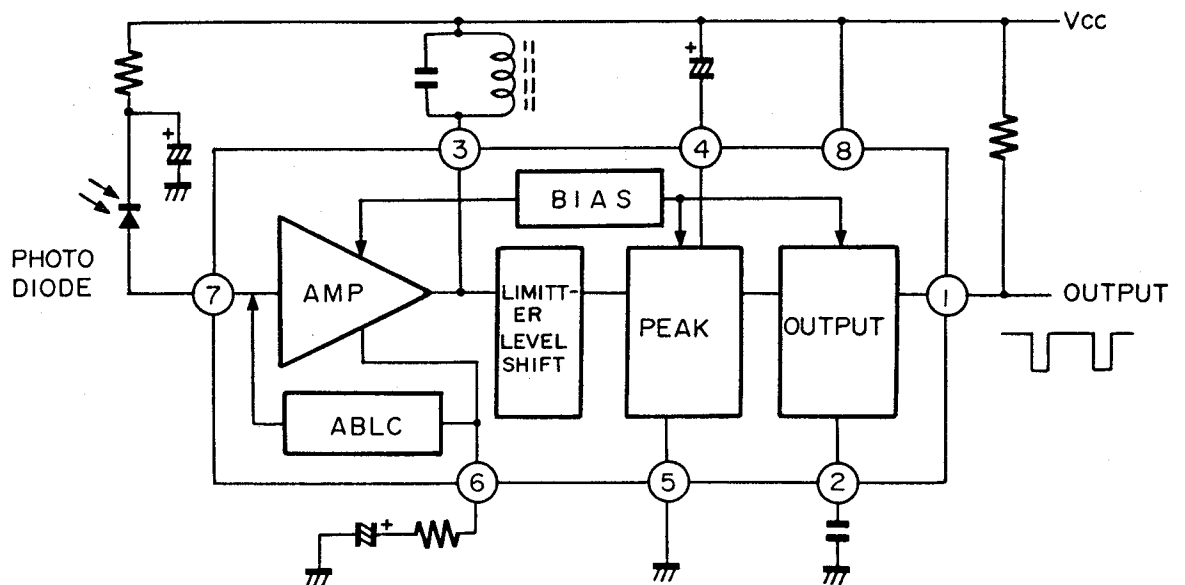

IC μ PC1473HA
IC601


GENERAL WIRING DIAGRAM

(FOR USA AND CANADA (A) MODELS)

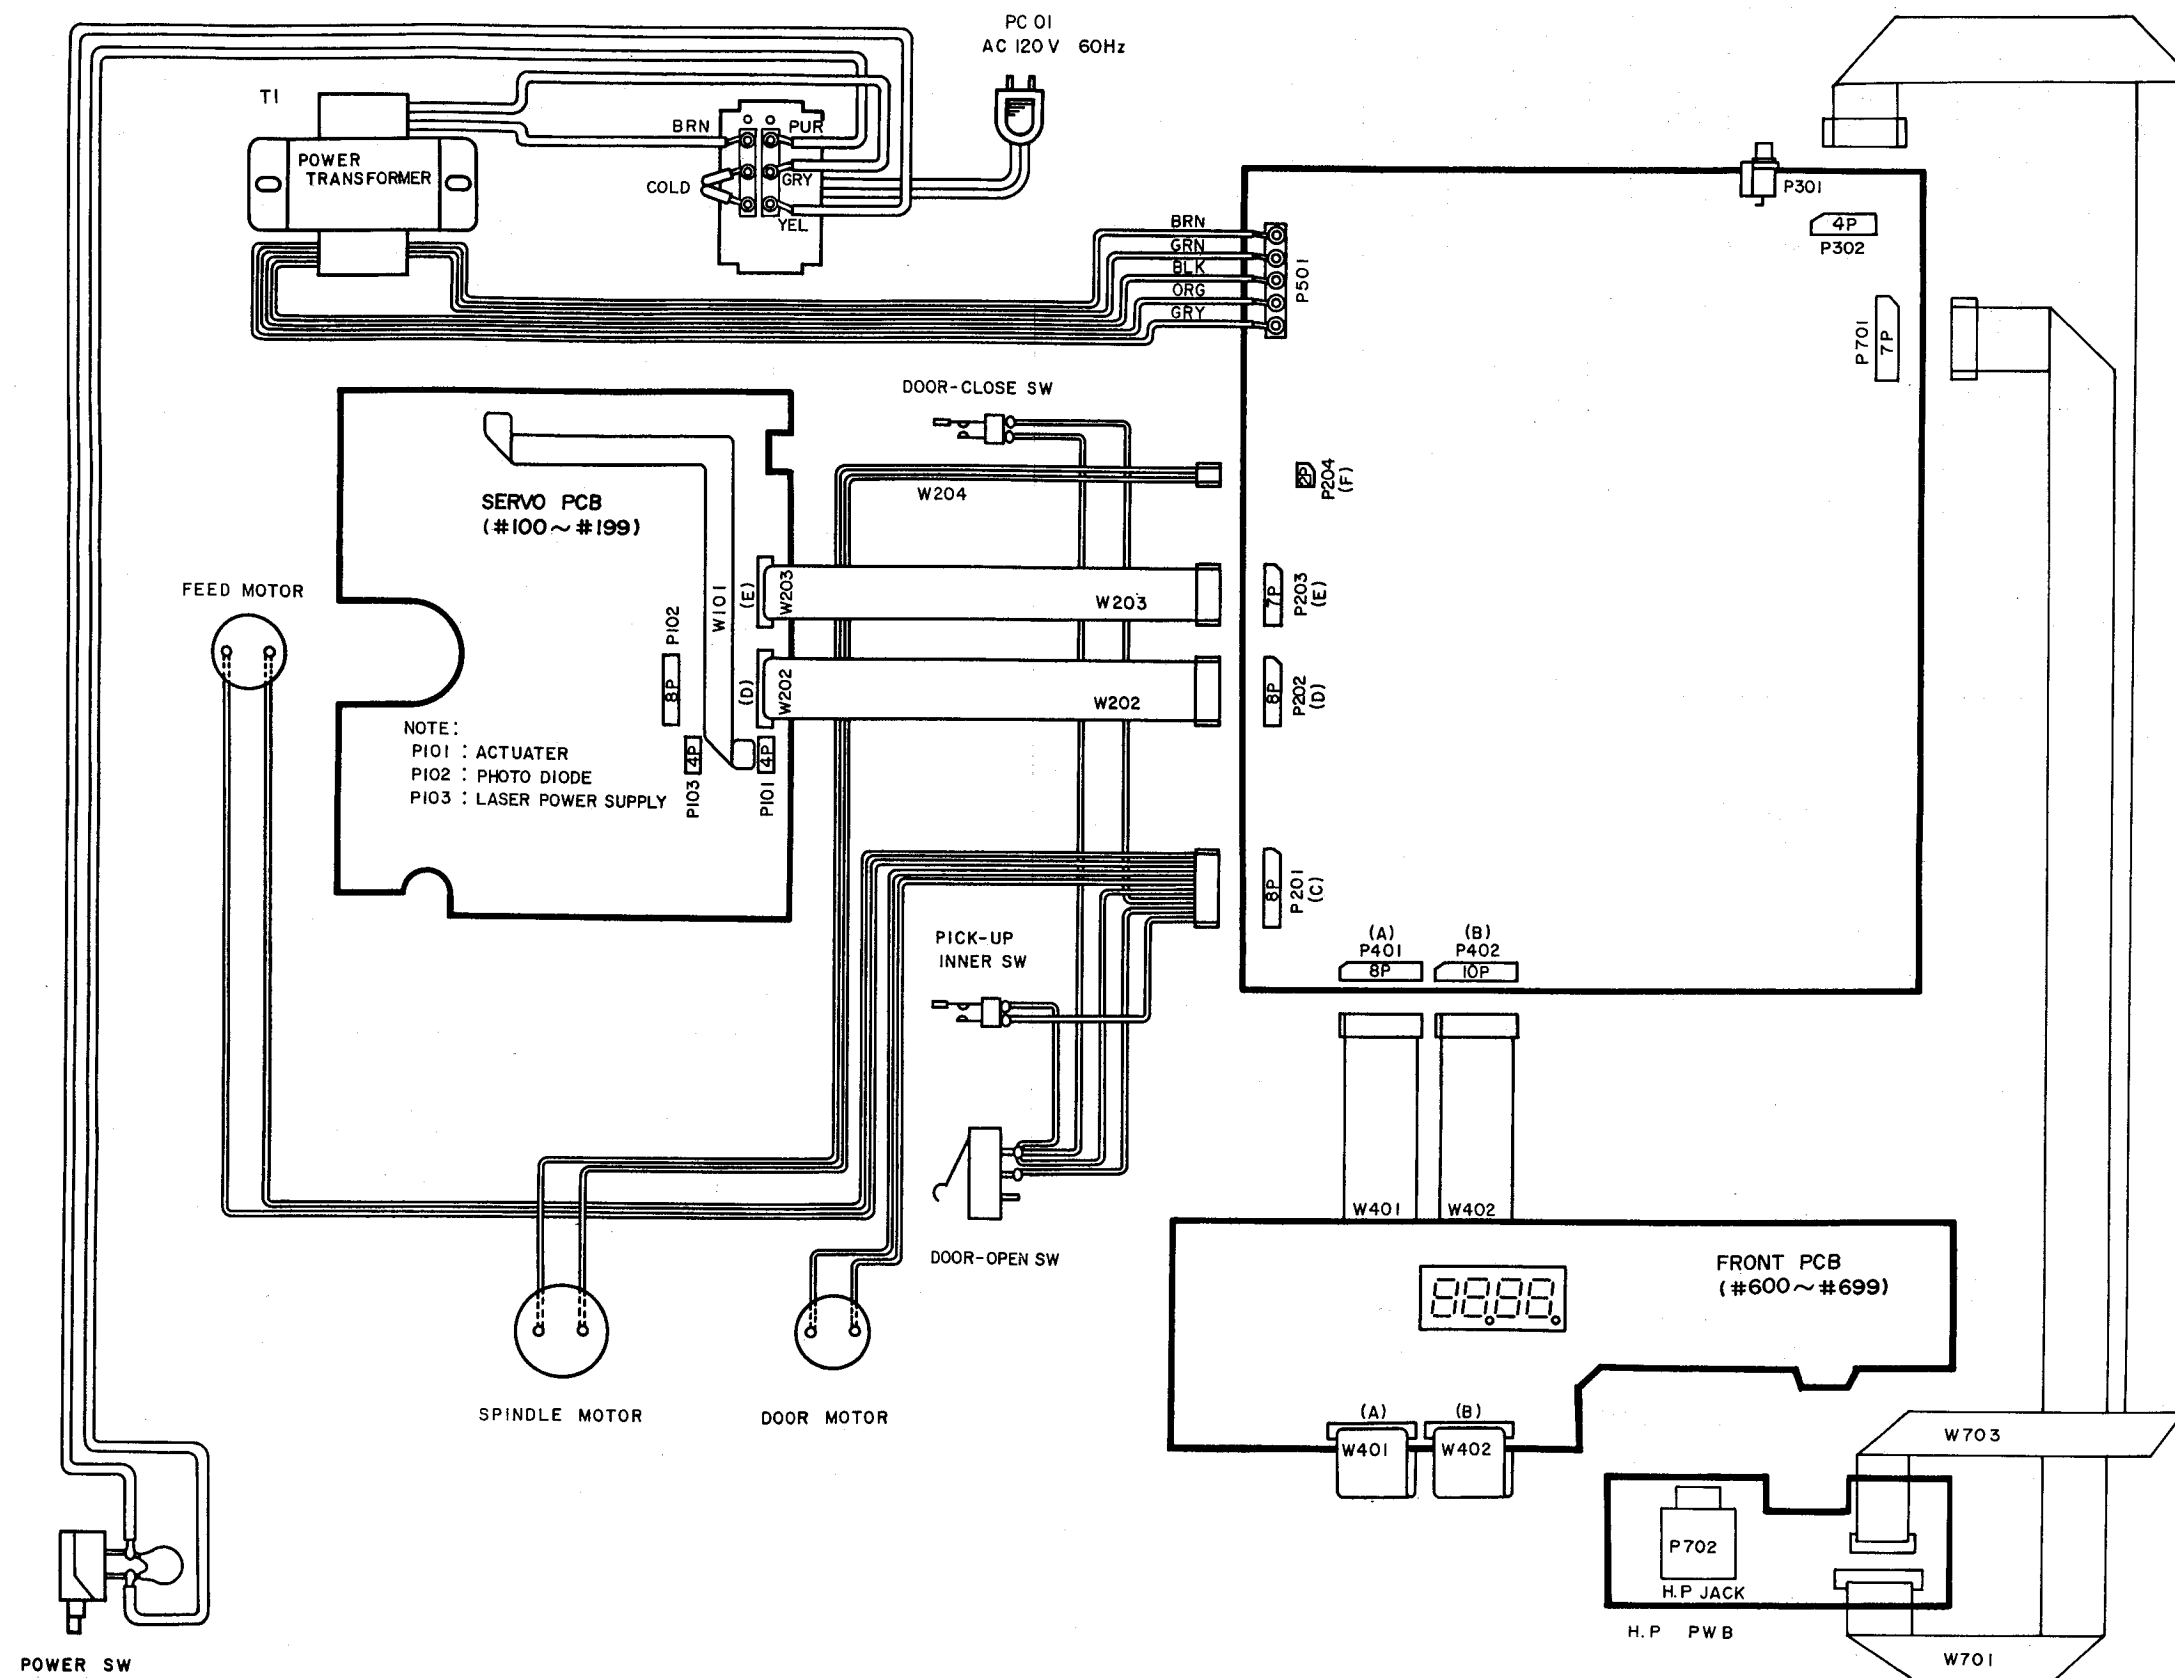


GENERAL WIRING DIAGRAM

(FOR USA AND CANADA (A) MODELS)

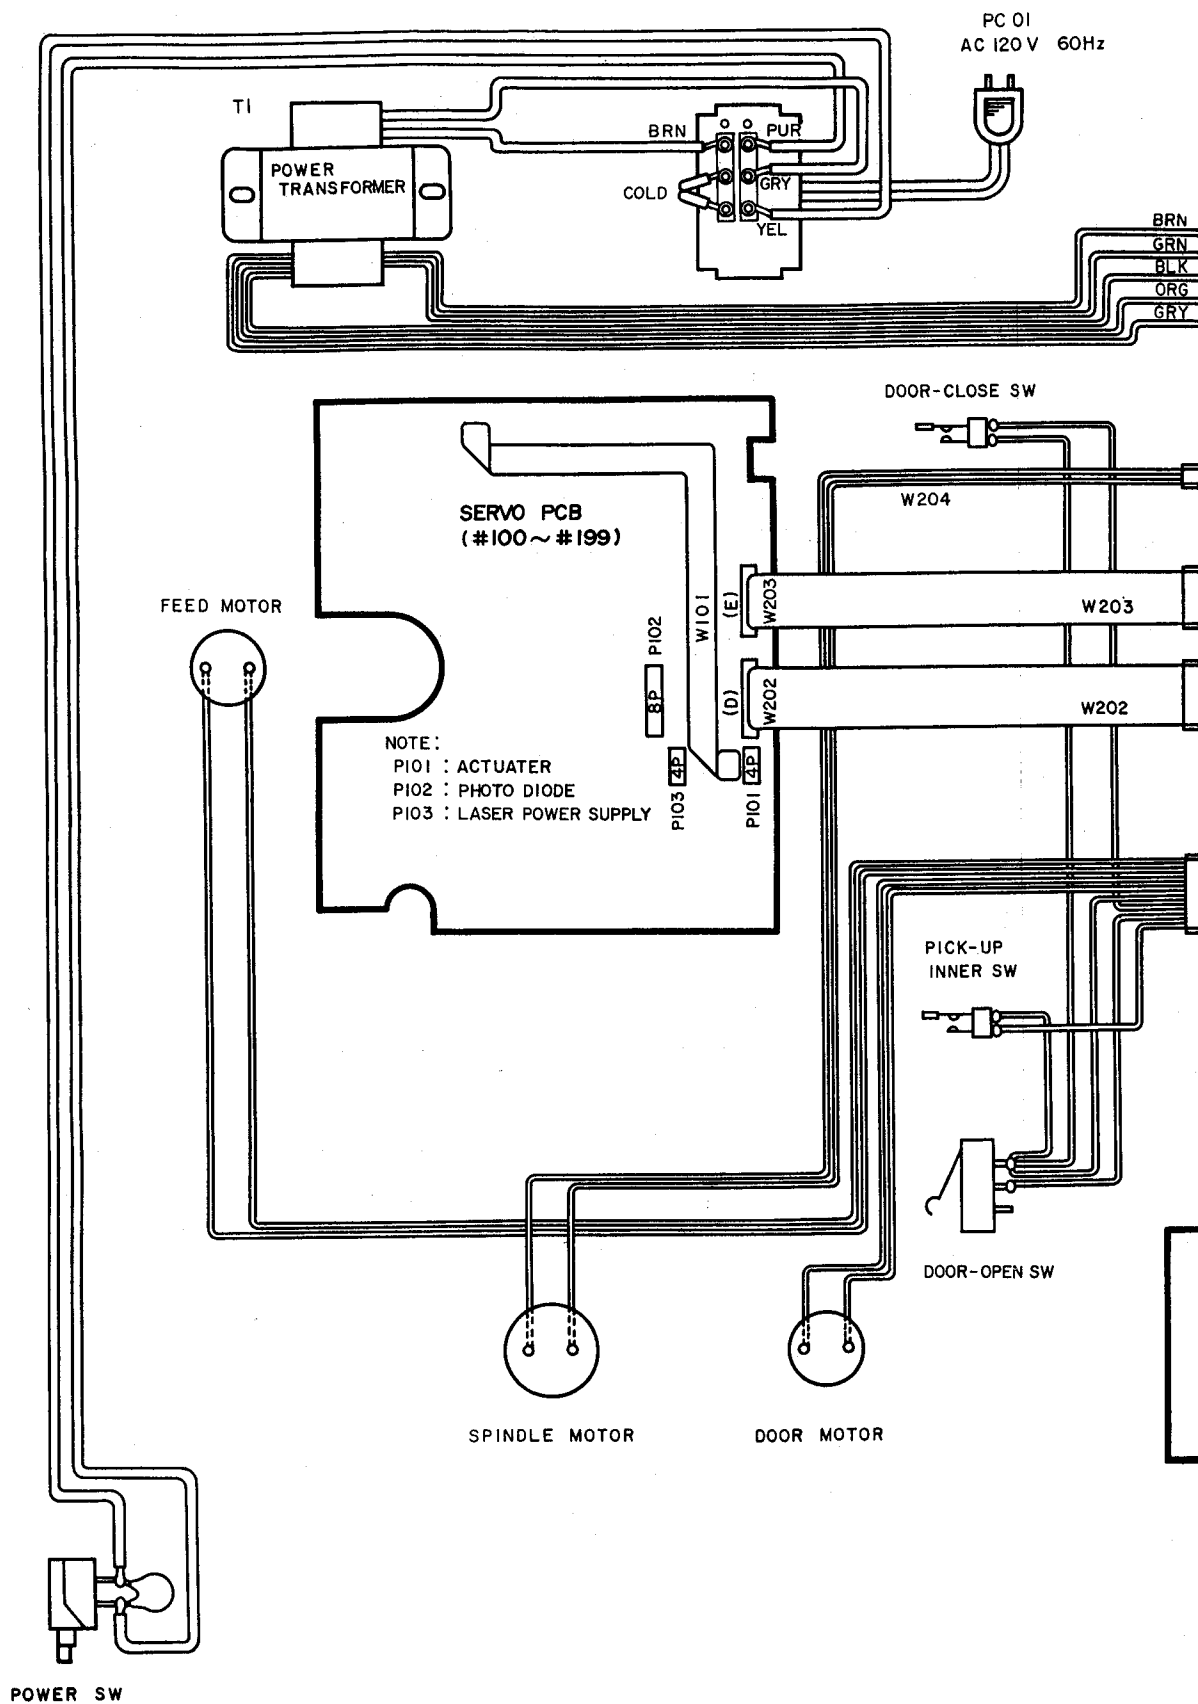


PC 01
AC 120V 60Hz

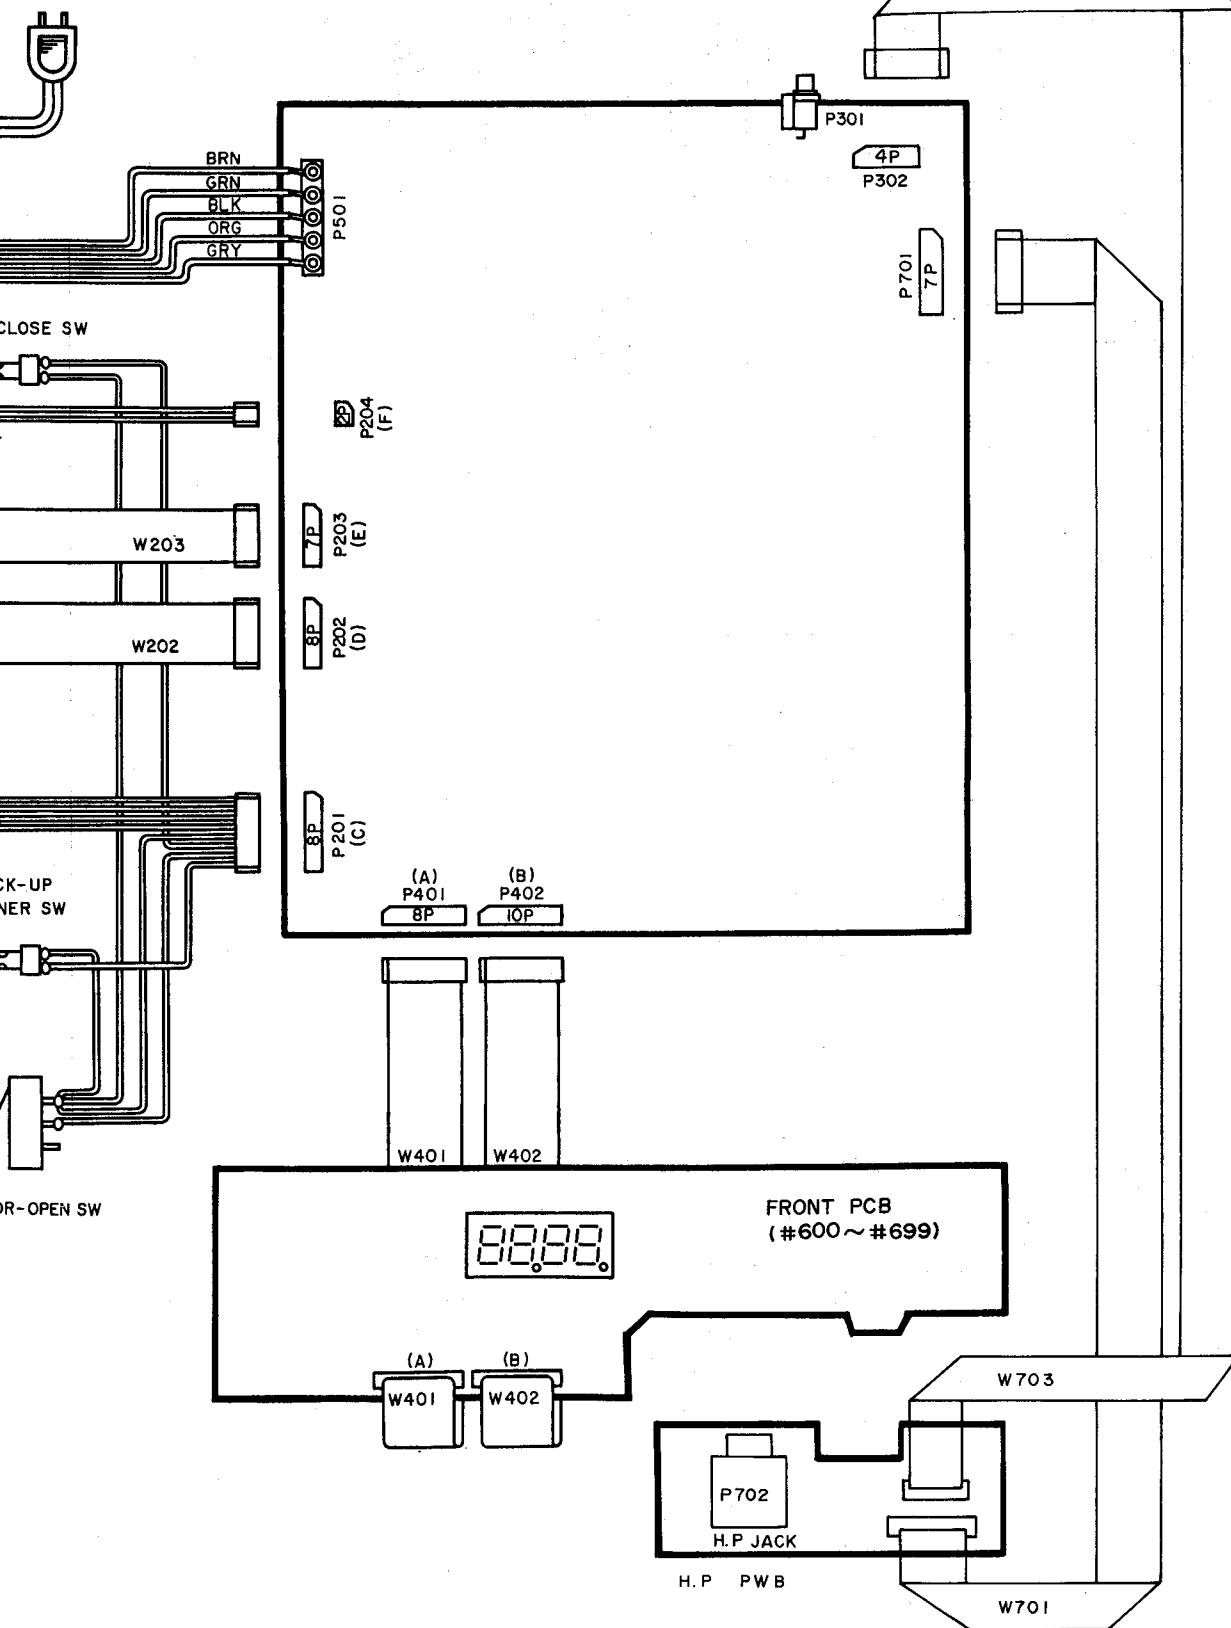


GENERAL WIRING DIAGRAM


(FOR GENERAL (EW) MODEL)

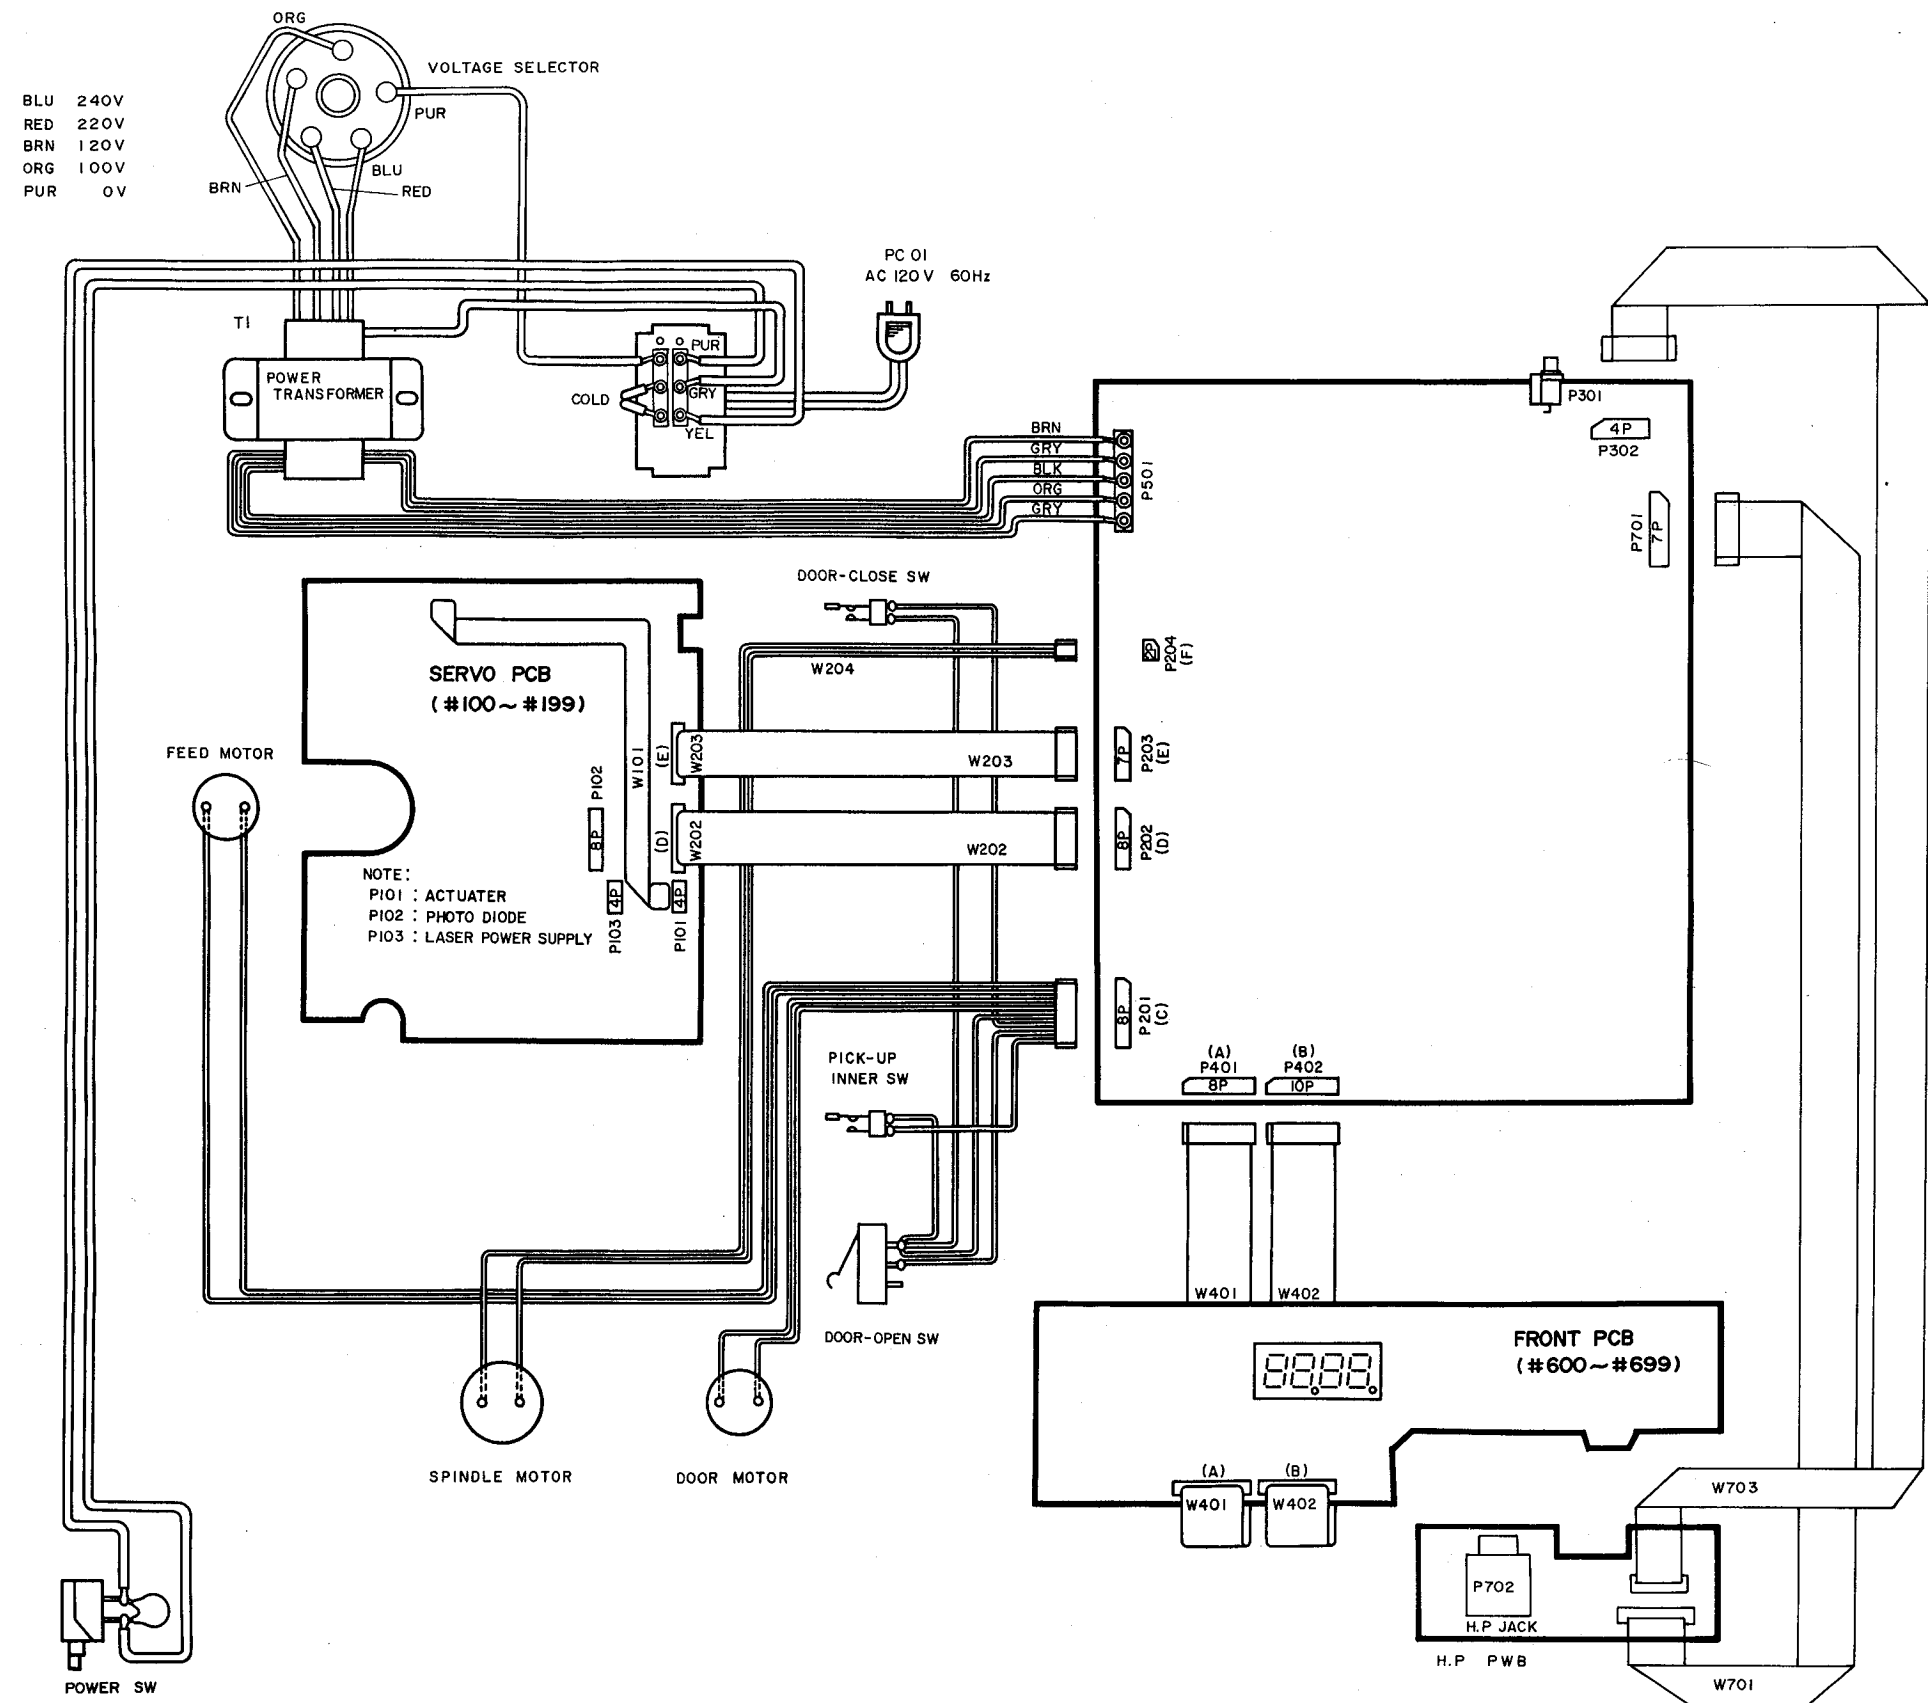



GENERAL WIRING DIAGRAM

(FOR GENERAL (EW) MODEL)

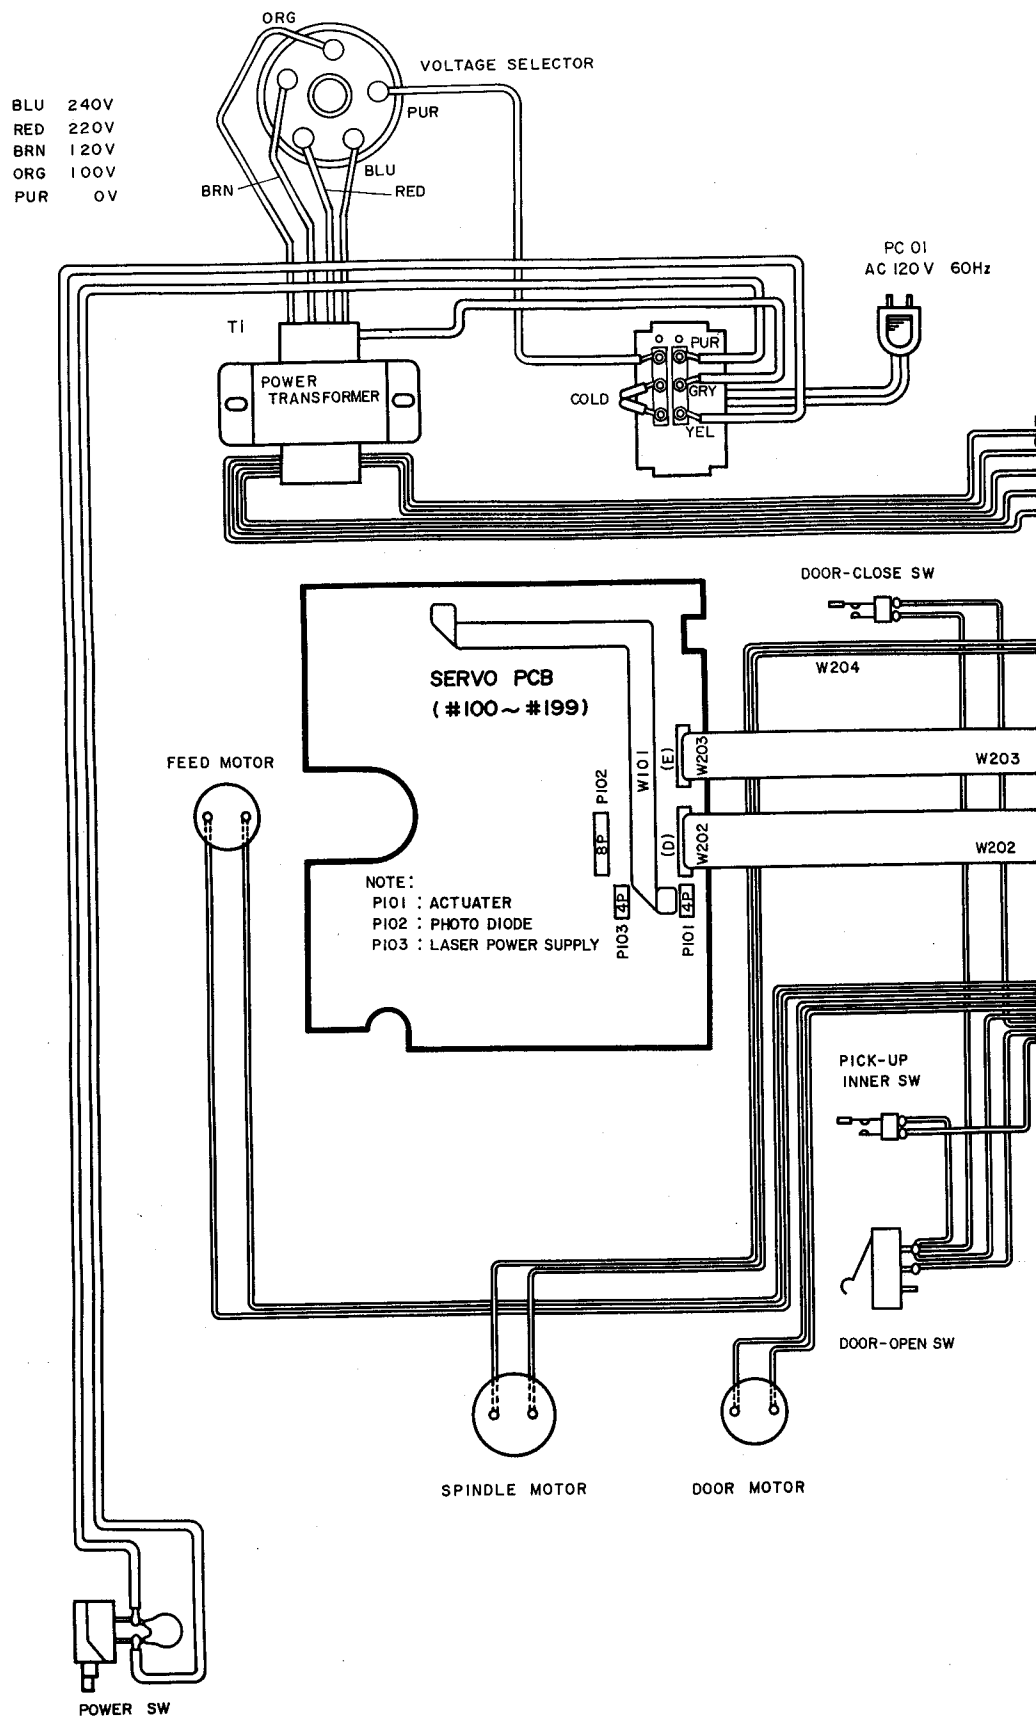


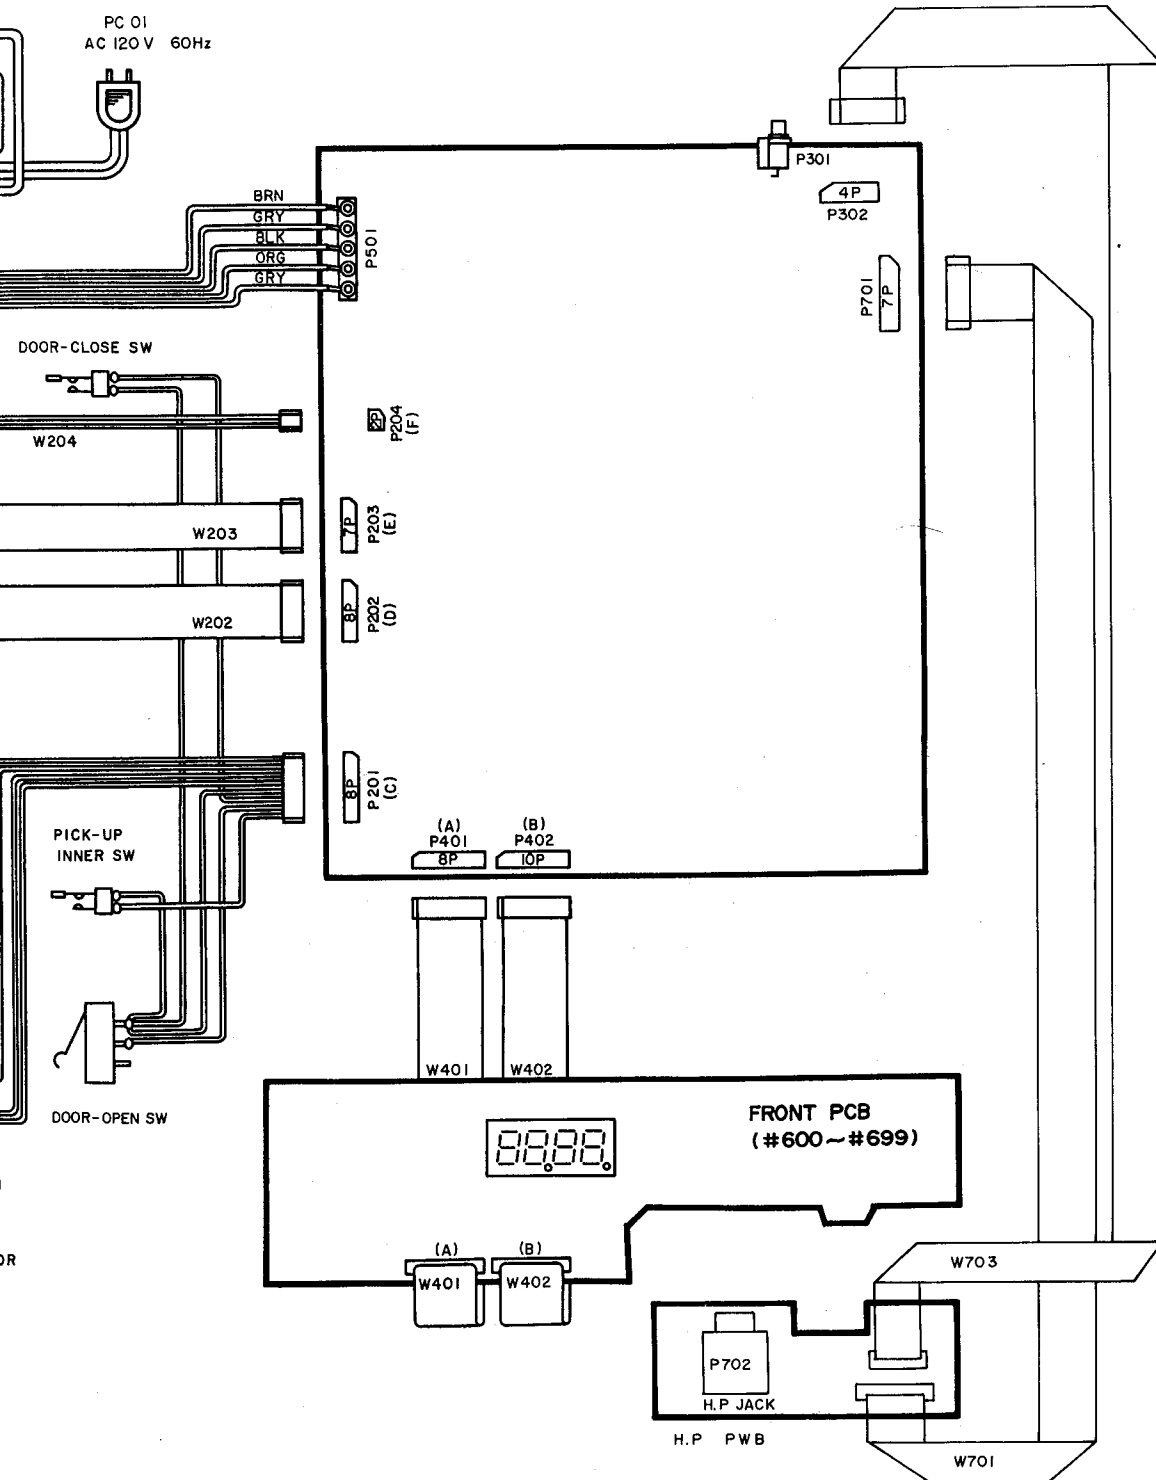


SERVO PCB ASSY — Solder Side —

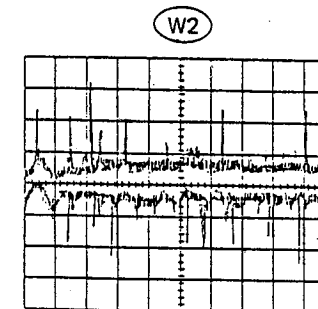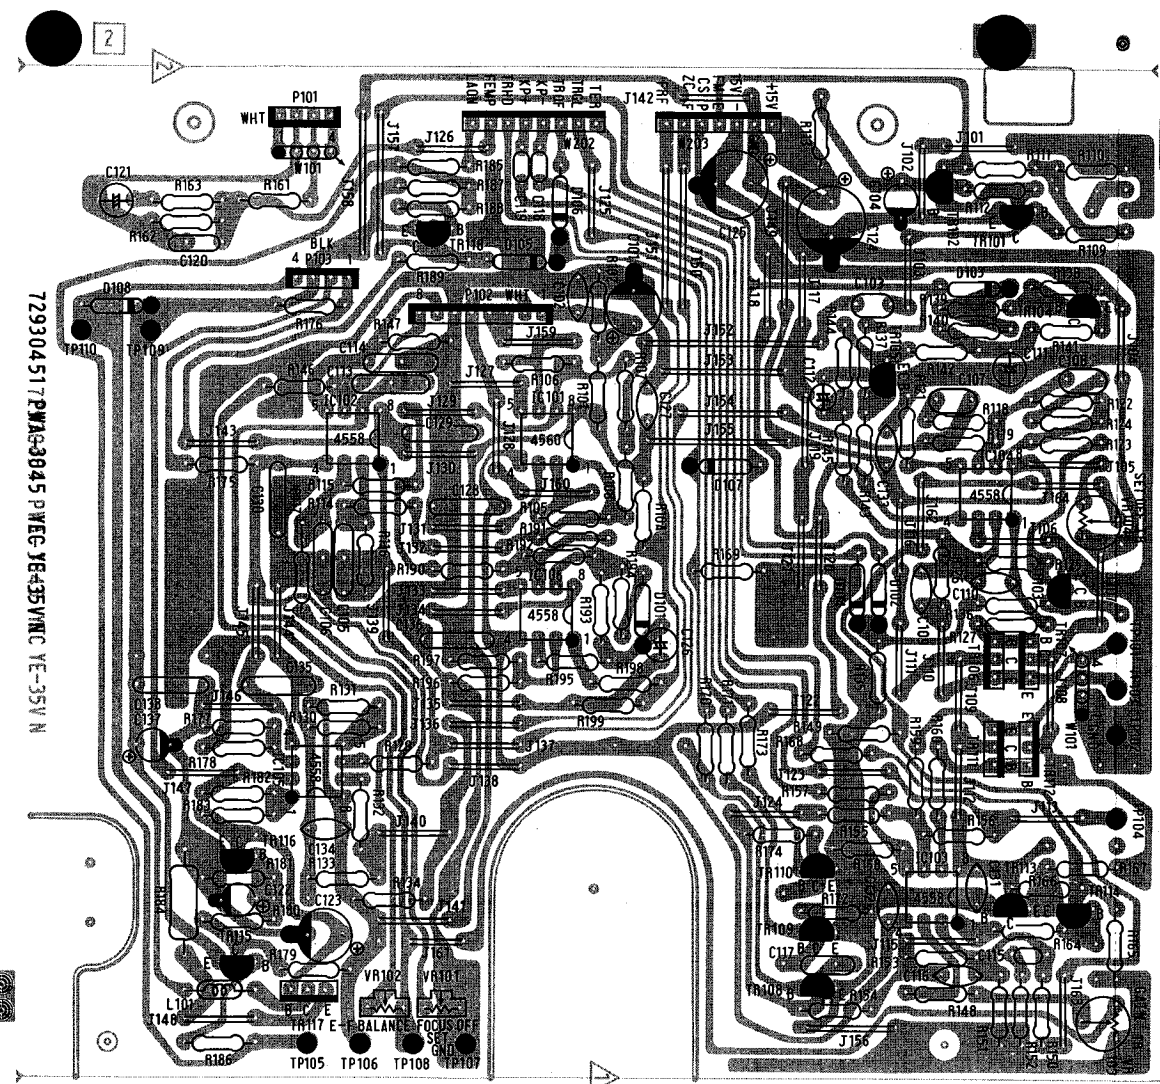


TP101 ↔ TP102 (GND)
Play Range 1V 0.5ms

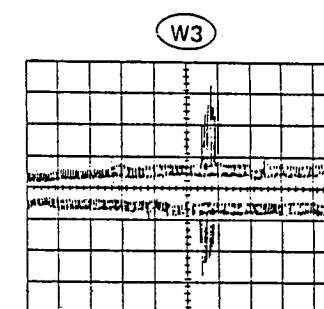



TP103 ↔ TP102 (GND)
Play Range 1V 0.5ms

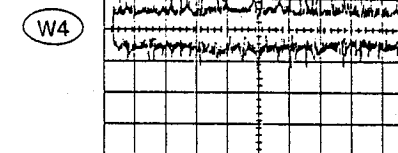



TP108 ↔ TP107 (GND)
Play Range 1V 0.5ms

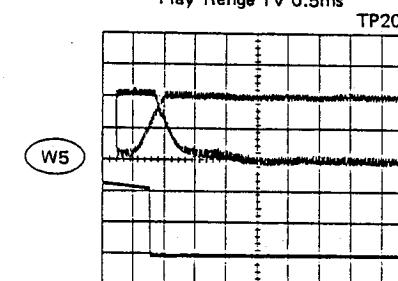


TP201 ↔ TP202 (GND)
Pause Waveform. TP104 ↔ TP107 (GND) Cue Waveform

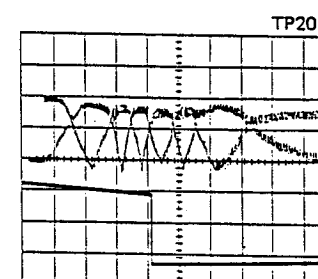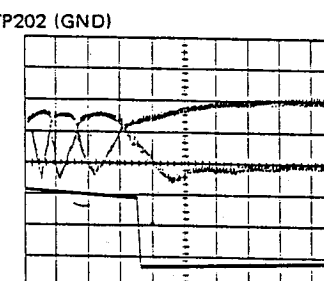


REW Waveform TP104 ↔ TP107 (GND) REV Waveform:

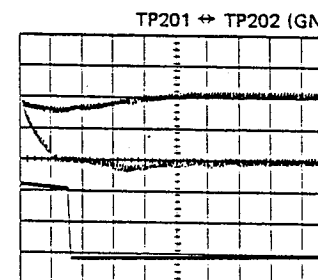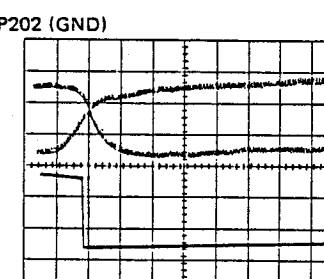


TP104 ↔ TP107 (GND)
FF Waveform

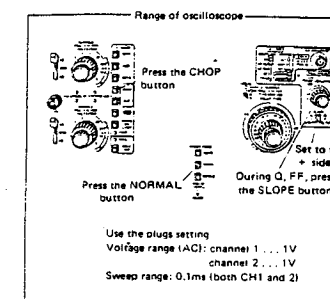

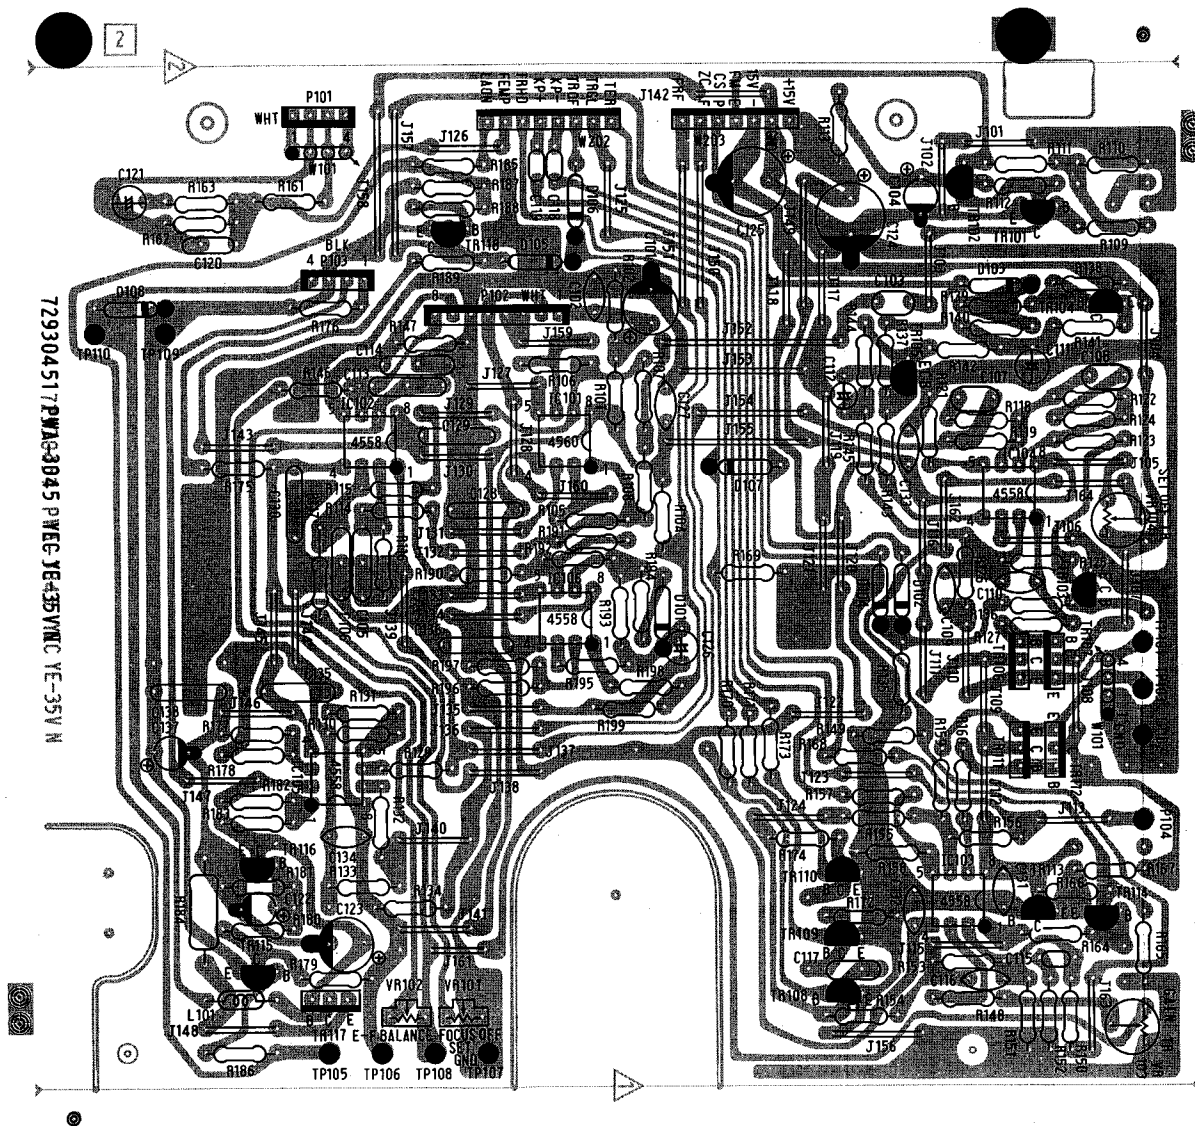
SERVO PCB ASSY –Solder Side–

W2

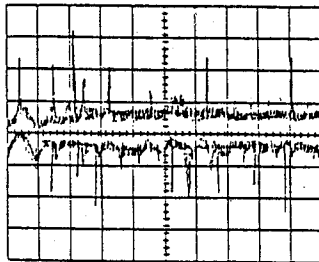


TP101 ↔ TP102 (GND)
Play Range 1V 0.5ms

W3

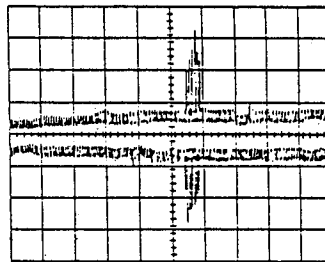

TP103 ↔ TP102 (GND)
Play Range 1V 0.5ms


W4

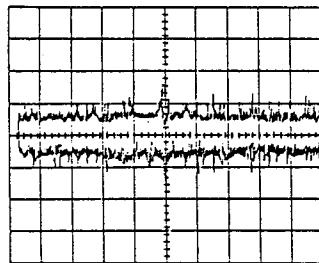


TP108 ↔ TP107 (GND)
Play Range 1V 0.5ms

TP201 ↔ TP202 (GND)

W5

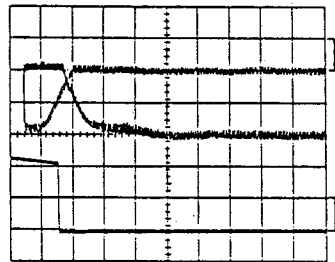


Pause Waveform. TP104 ↔ TP107 (GND)

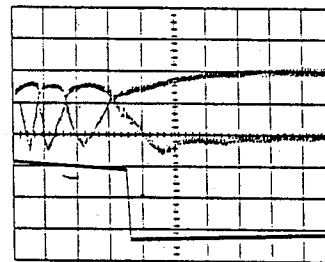


Cue Waveform

TP201 ↔ TP202 (GND)

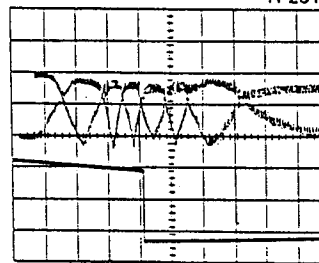


REW Waveform TP104 ↔ TP107 (GND)

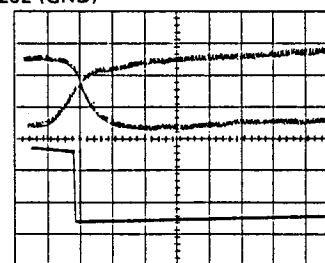

REV Waveform

TP201 ↔ TP202 (GND)

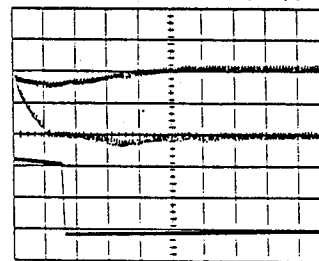

TP104 ↔ TP107 (GND)
FF Waveform

Range of oscilloscope


Press the CHOP button

Press the NORMAL button


Set to the + side. During O, FF, press the SLOPE button

Use the plugs setting
Voltage range (AC): channel 1 ... 1V
channel 2 ... 1V
Sweep range: 0.1ms (both CH1 and 2)



Note: The voltage values +15 and -15 are indicated as +B and -B respectively in the schematic.



SERVO CIRCUIT DIAGRAM

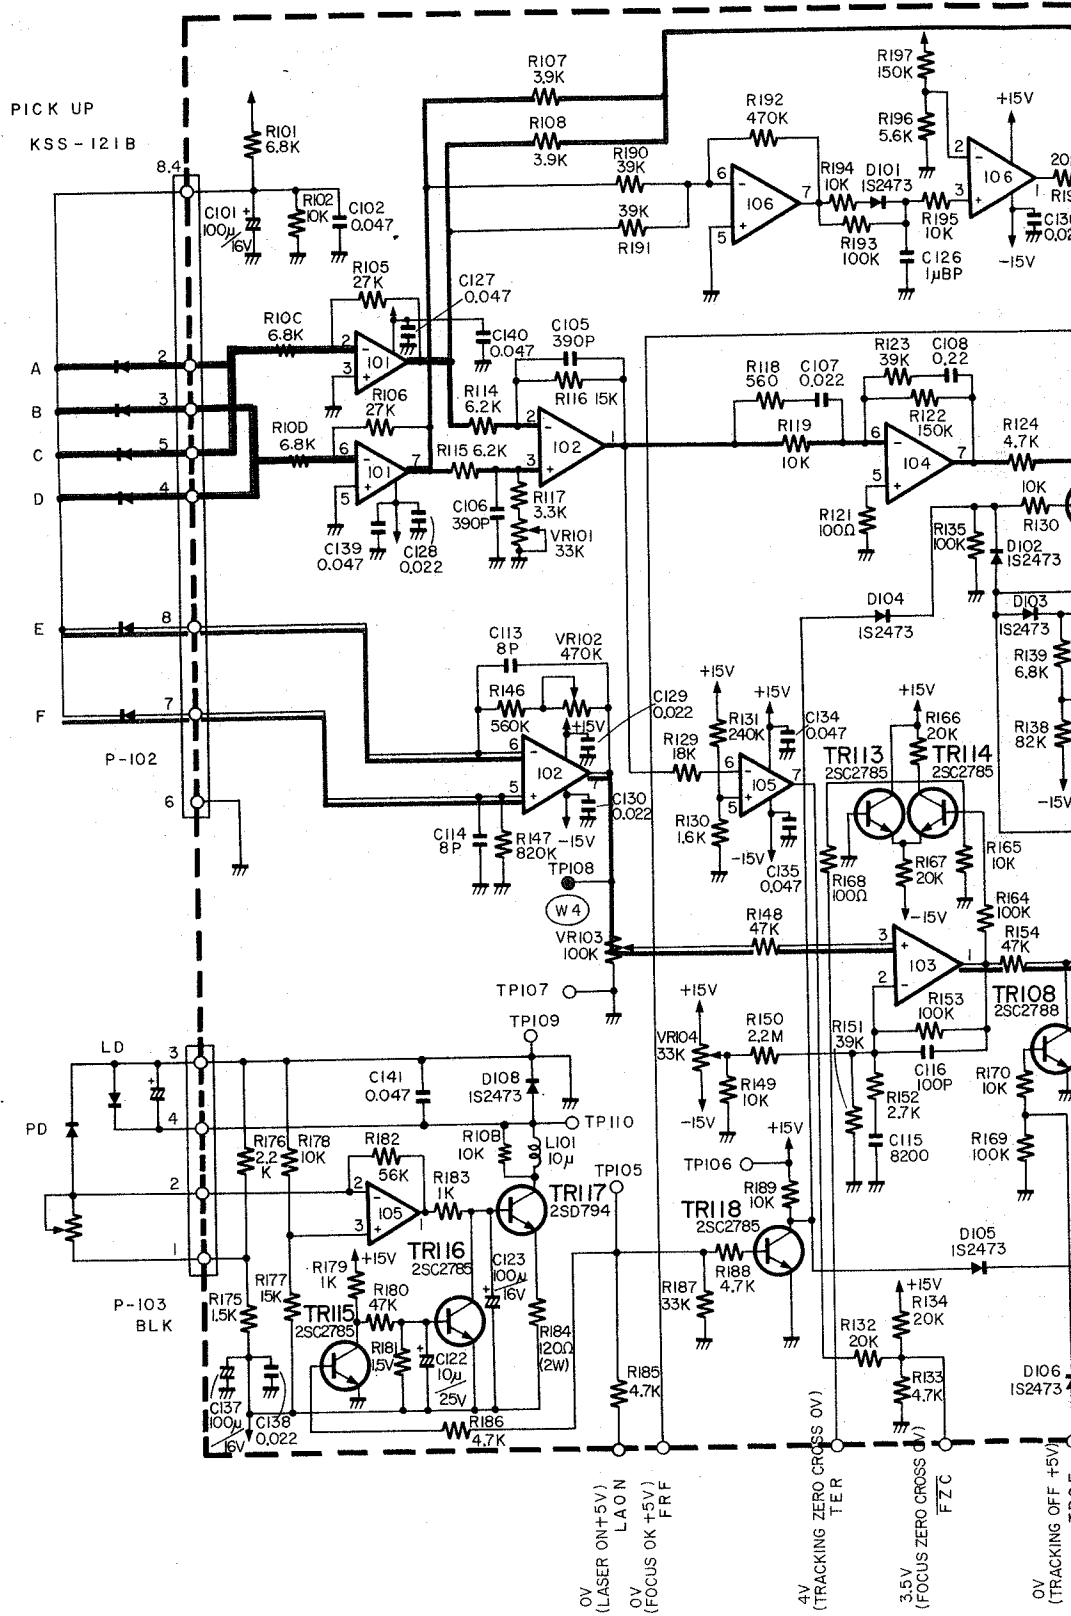


A diagram of a 5-pin D-sub connector. The pins are numbered 1 through 5. Pin 1 is at the bottom center, pin 2 is at the bottom left, pin 3 is at the bottom right, pin 4 is at the top right, and pin 5 is at the top center.



FOCUS
COIL


TR103,104,105,113
TR114,115,116,118




TR 106, 107, 111, 112, 117



MAIN PCB ASSY (Solder Side)

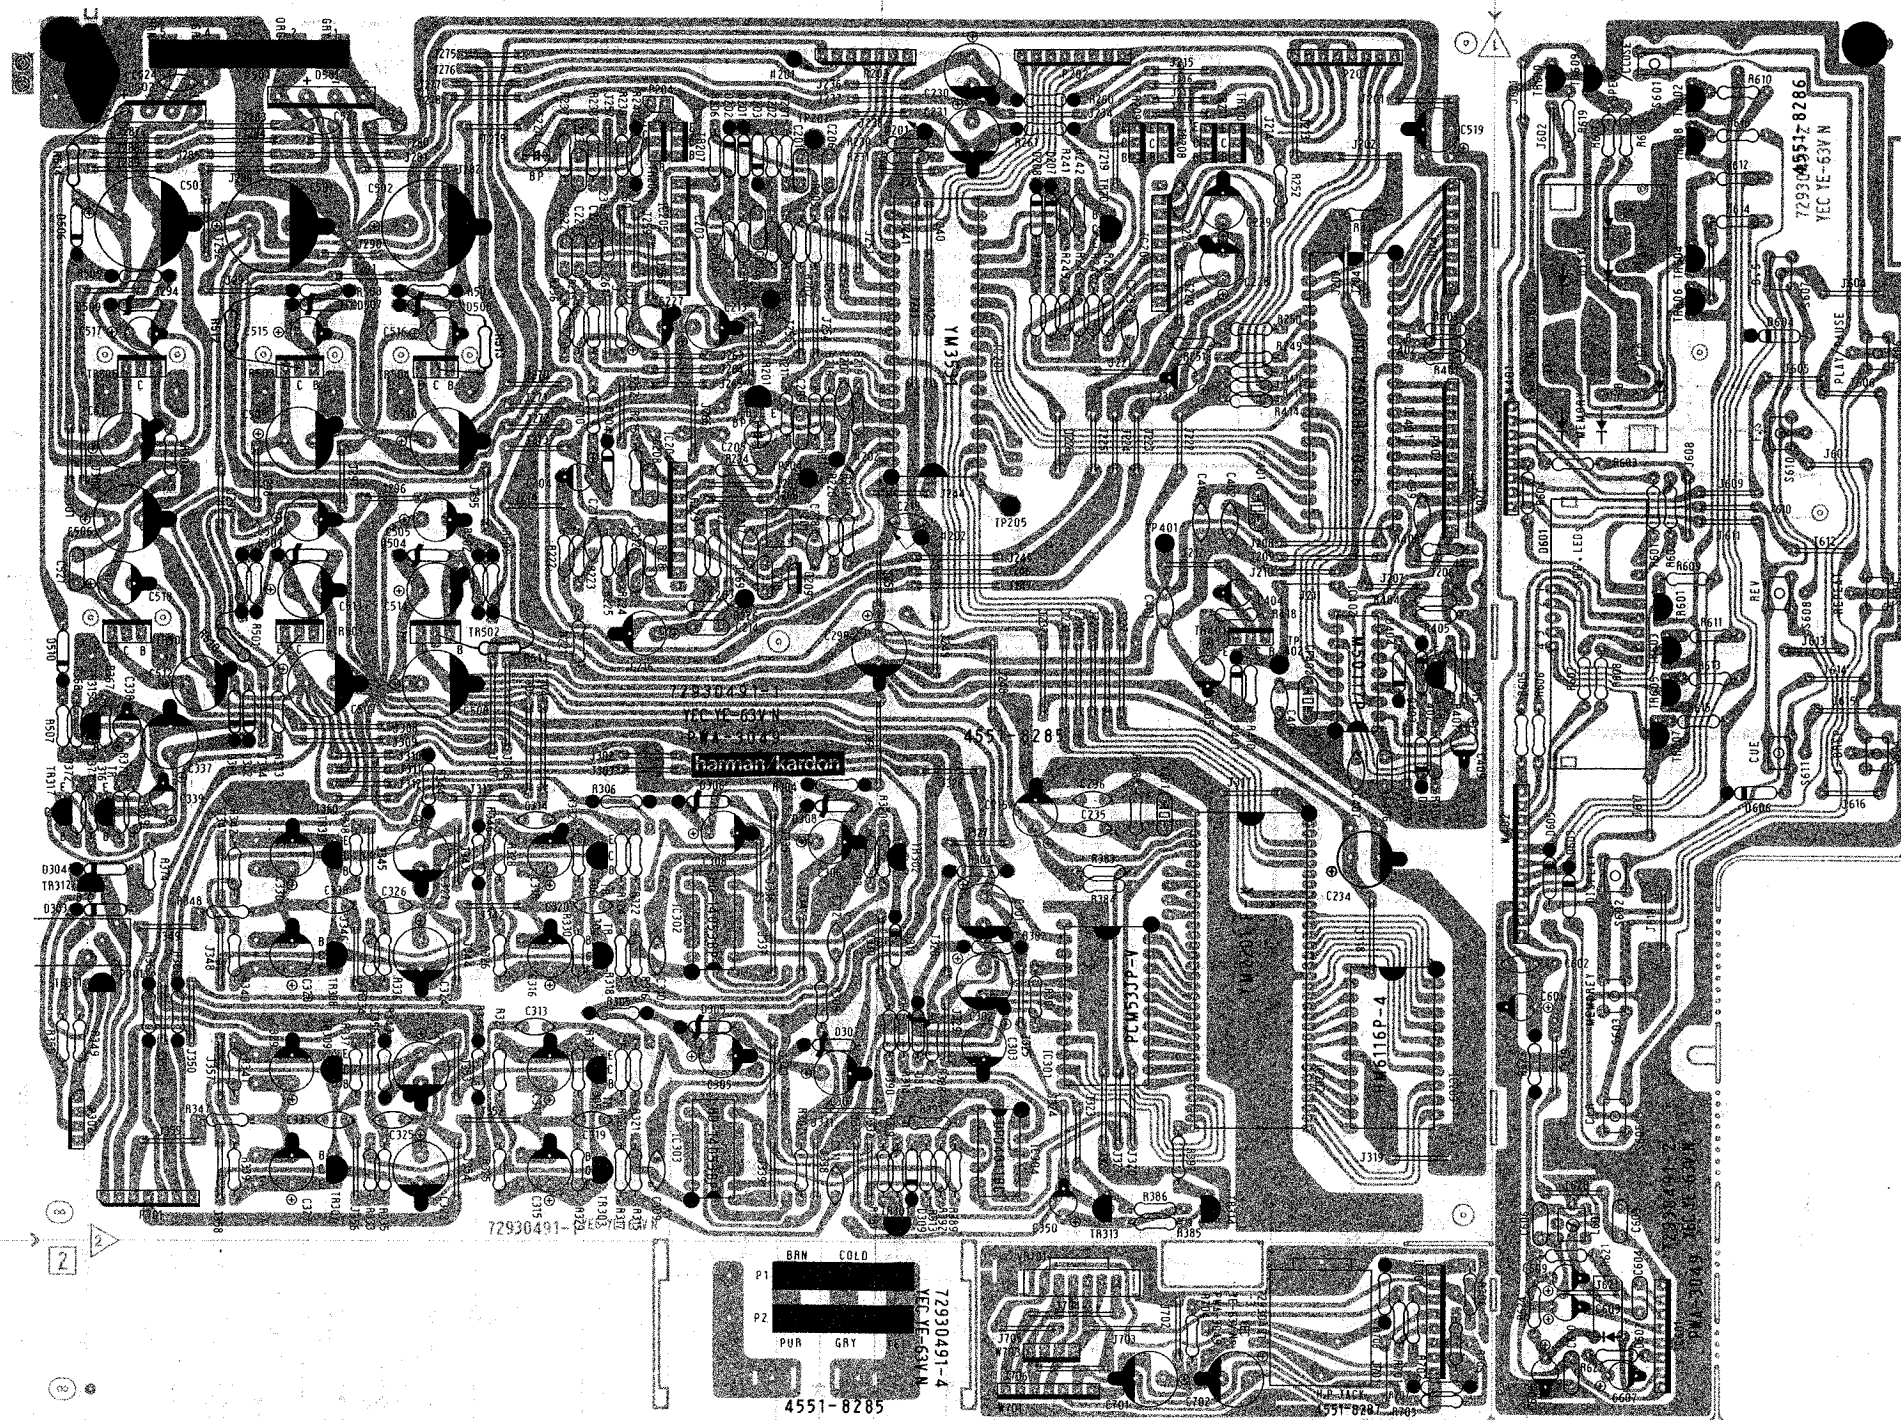


MAIN PCB ASSY (Solder Side)

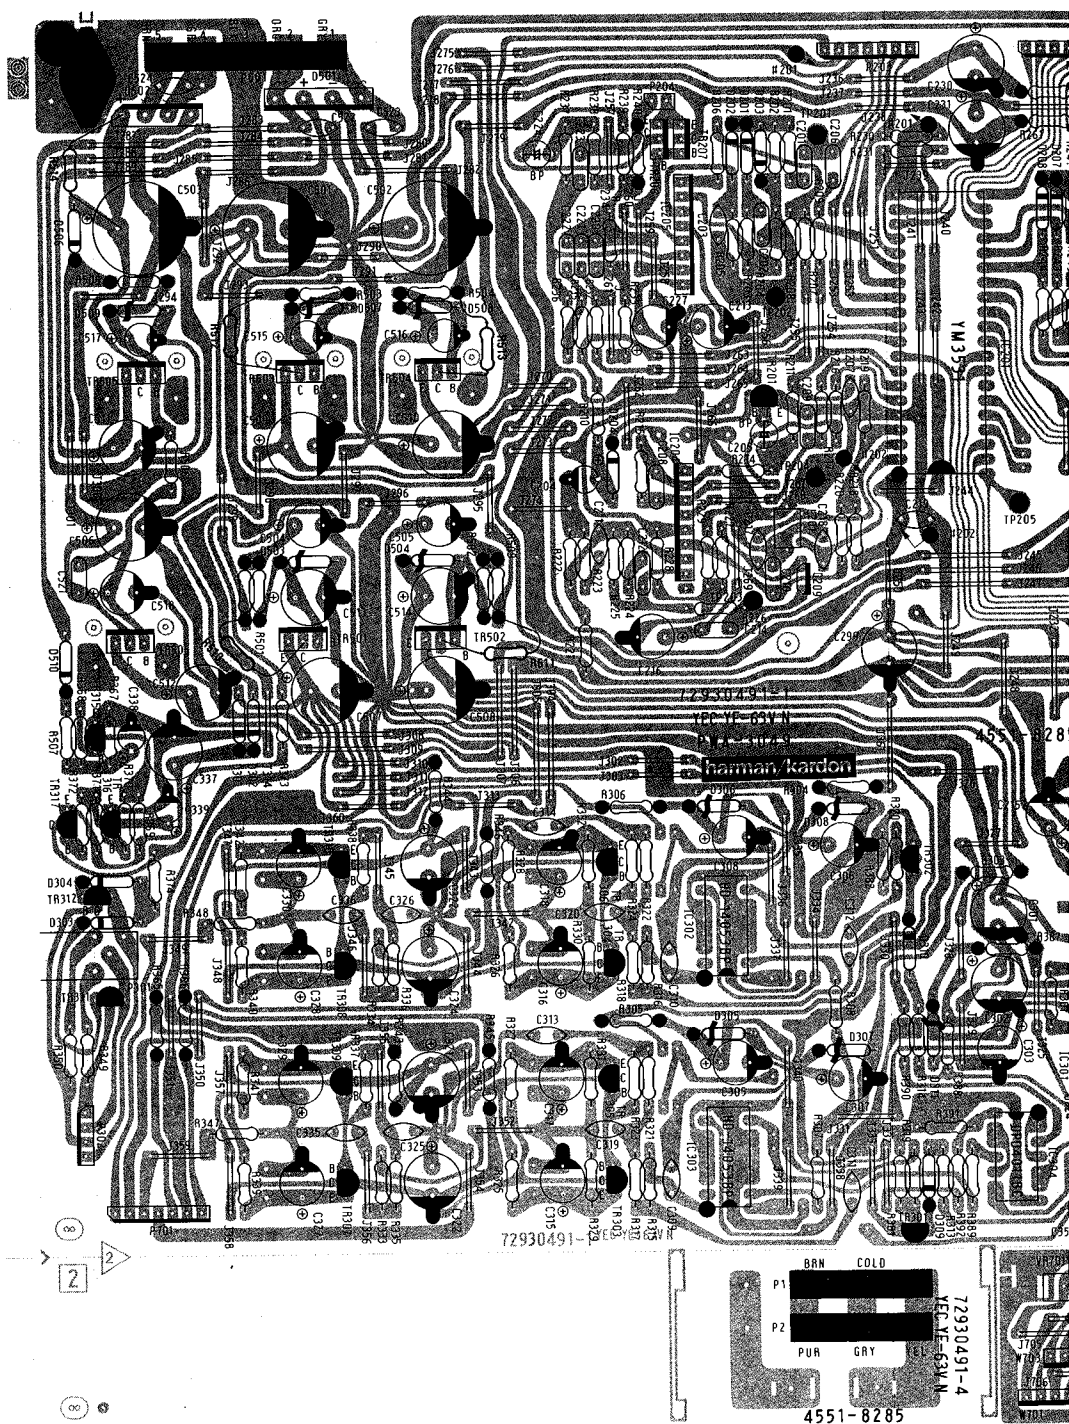


MAIN CIRCUIT DIAGRAM

(FOR USA AND CANADA (A) MODELS)

PRODUCT SAFETY SHOULD BE CONSIDERED WHEN COMPONENT REPLACEMENT IS MADE IN ANY AREA OF A UNIT. THE  BESIDE A PART IN THE PARTS LIST THE SCHEMATIC DIAGRAM DESIGNATES COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT EXACT CATALOGED PARTS BE USED FOR REPLACEMENT OF COMPONENTS WHICH ARE DESIGNATED BY A , IN THE PARTS LIST AND THE SHADED AREAS ON THE SCHEMATIC DIAGRAM. USE OF SUBSTITUTE REPLACEMENT PARTS WHICH DO NOT HAVE THE SAME SAFETY CHARACTERISTICS AS RECOMMENDED IN FACTORY SERVICE INFORMATION MAY CREATE SHOCK, FIRE OR OTHER HAZARDS.

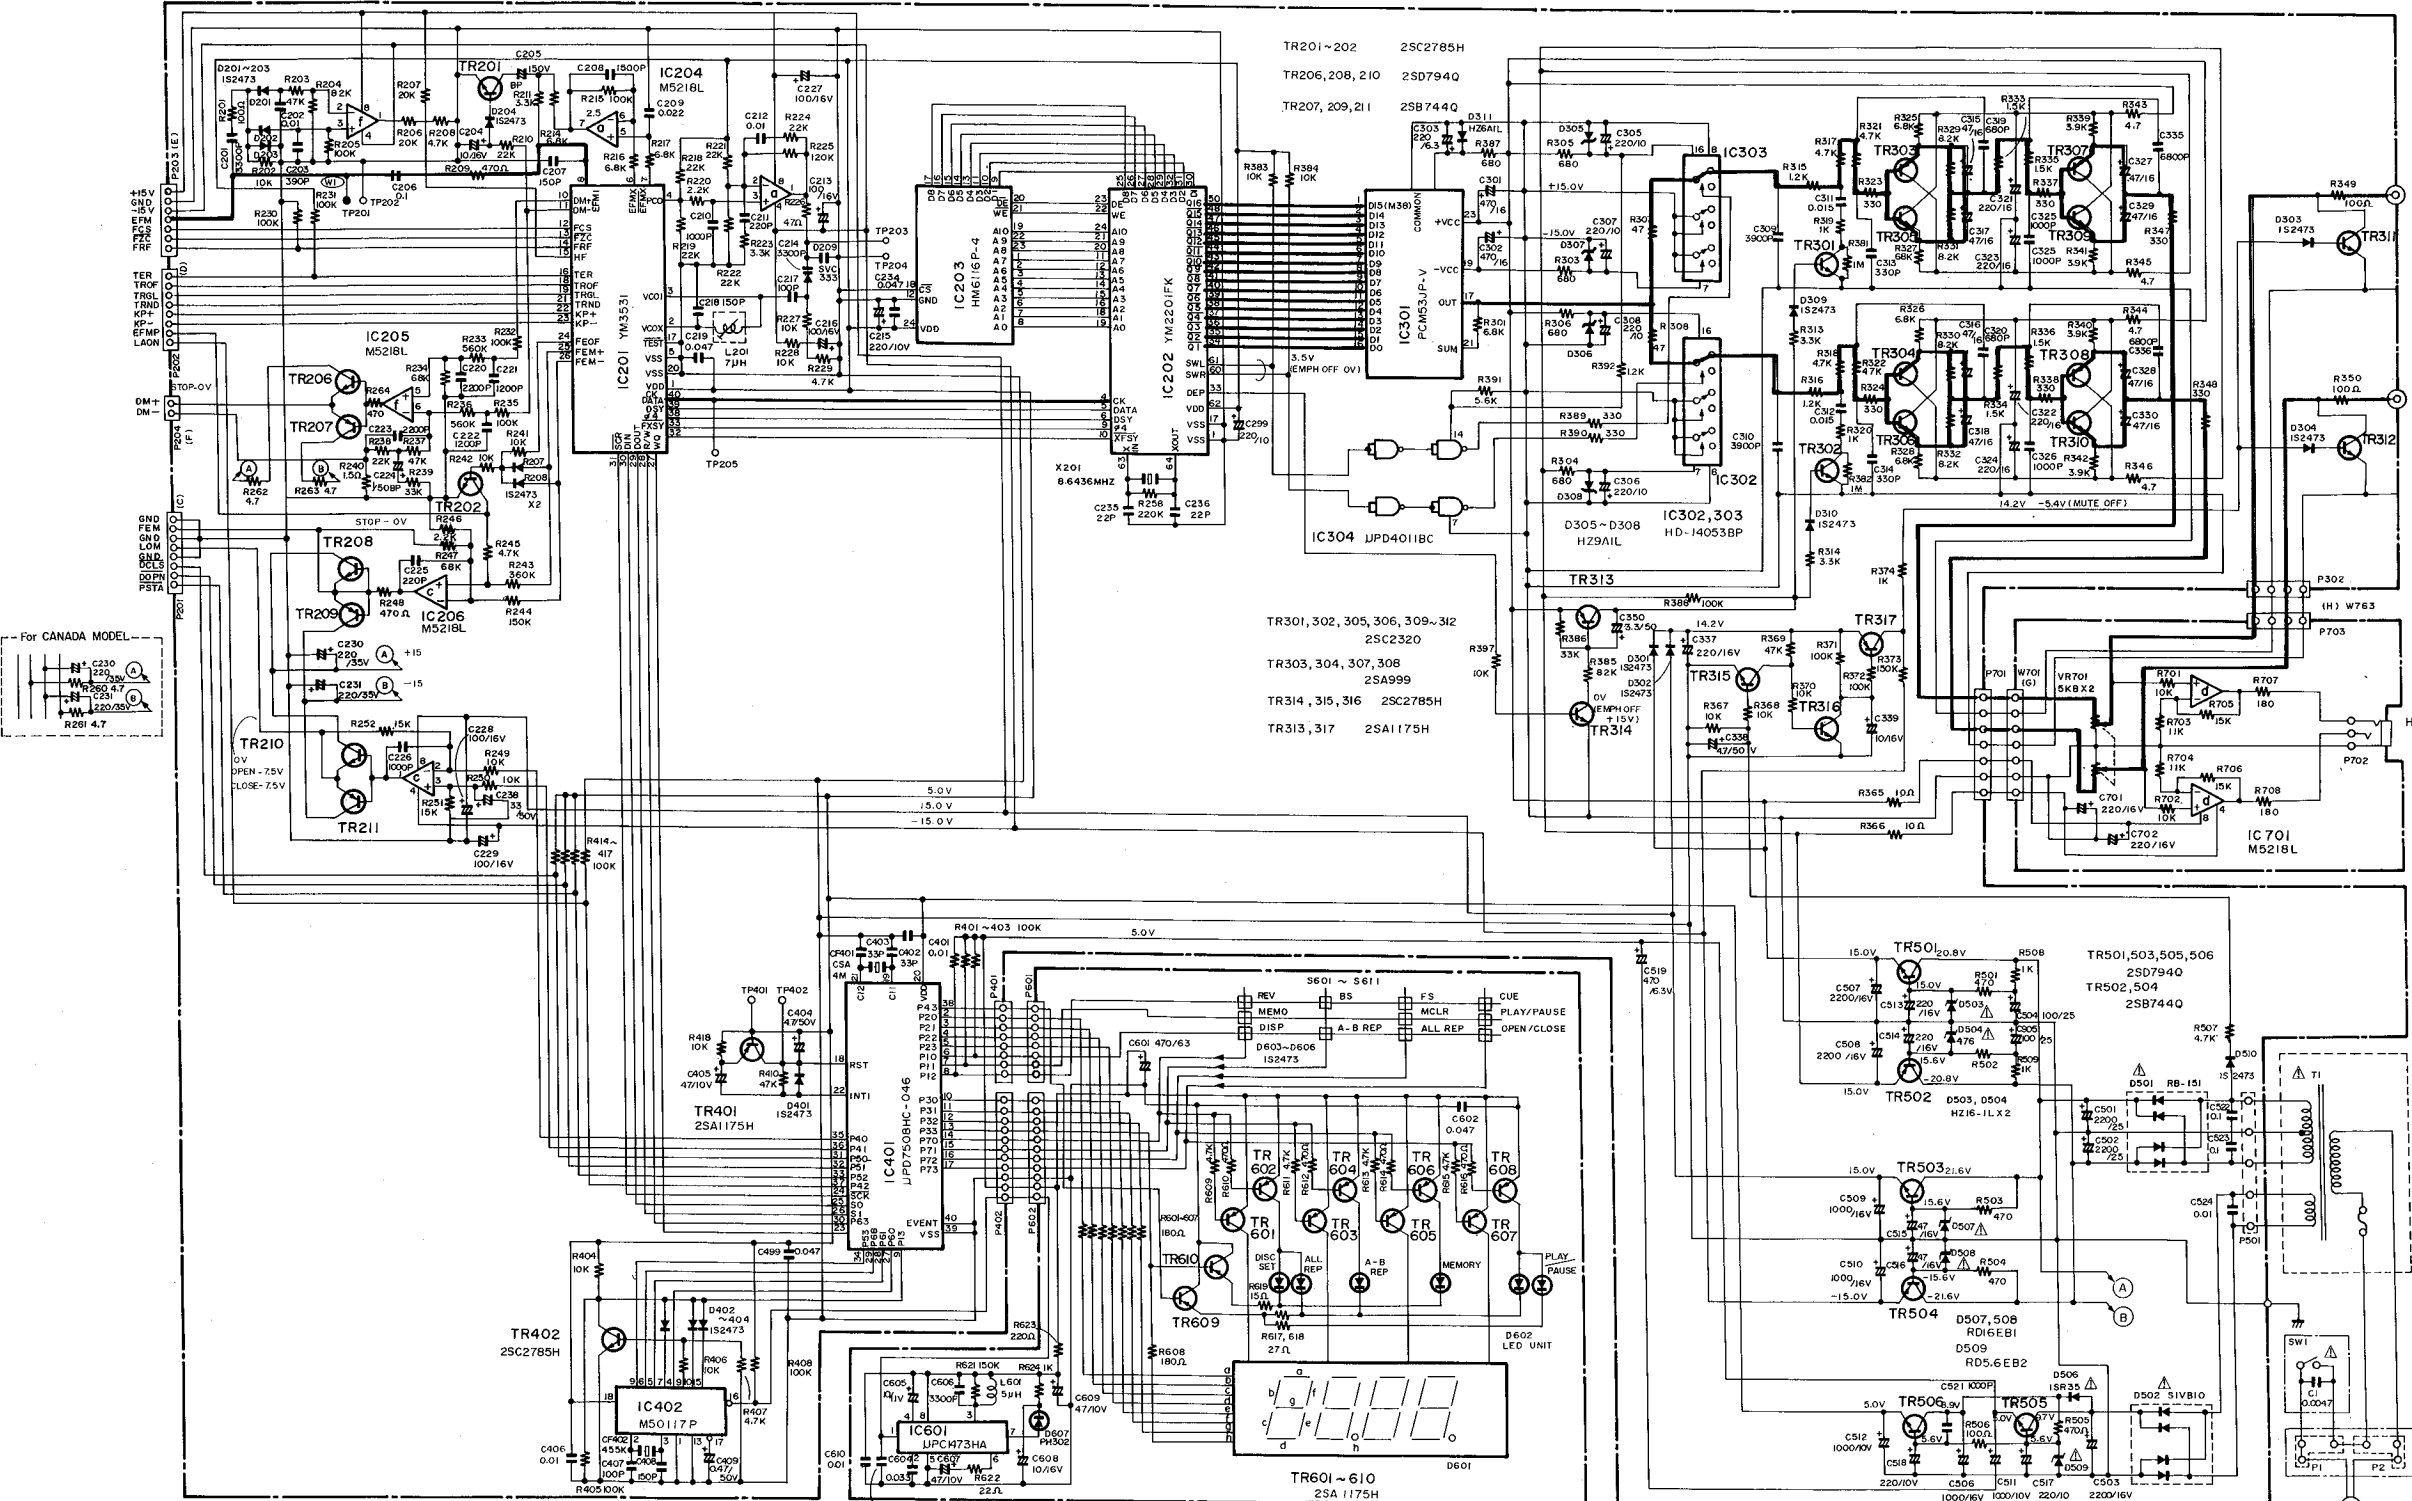

(FOR USA AND CANADA (A) MODELS)




TR301, 302, 305,	2
TR303, 304, 307	2
TR314, 315, 316	
TR313, 317	2

TR60I ~ 6.
2SA 117

TR601 610 .

PRODUCT SAFETY SHOULD BE CONSIDERED WHEN COMPONENT REPLACEMENT IS MADE IN ANY AREA OF A UNIT. THE Δ BESIDE A PART IN THE PARTS LIST THE SCHEMATIC DIAGRAM DESIGNATES COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT EXACT CATALOGED PARTS BE USED FOR REPLACEMENT OF COMPONENTS WHICH ARE DESIGNATED BY A Δ , IN THE PARTS LIST AND THE SHADED AREAS ON THE SCHEMATIC DIAGRAM. USE OF SUBSTITUTE REPLACEMENT PARTS WHICH DO NOT HAVE THE SAME SAFETY CHARACTERISTICS AS RECOMMENDED IN FACTORY SERVICE INFORMATION MAY CREATE SHOCK, FIRE OR OTHER HAZARDS.

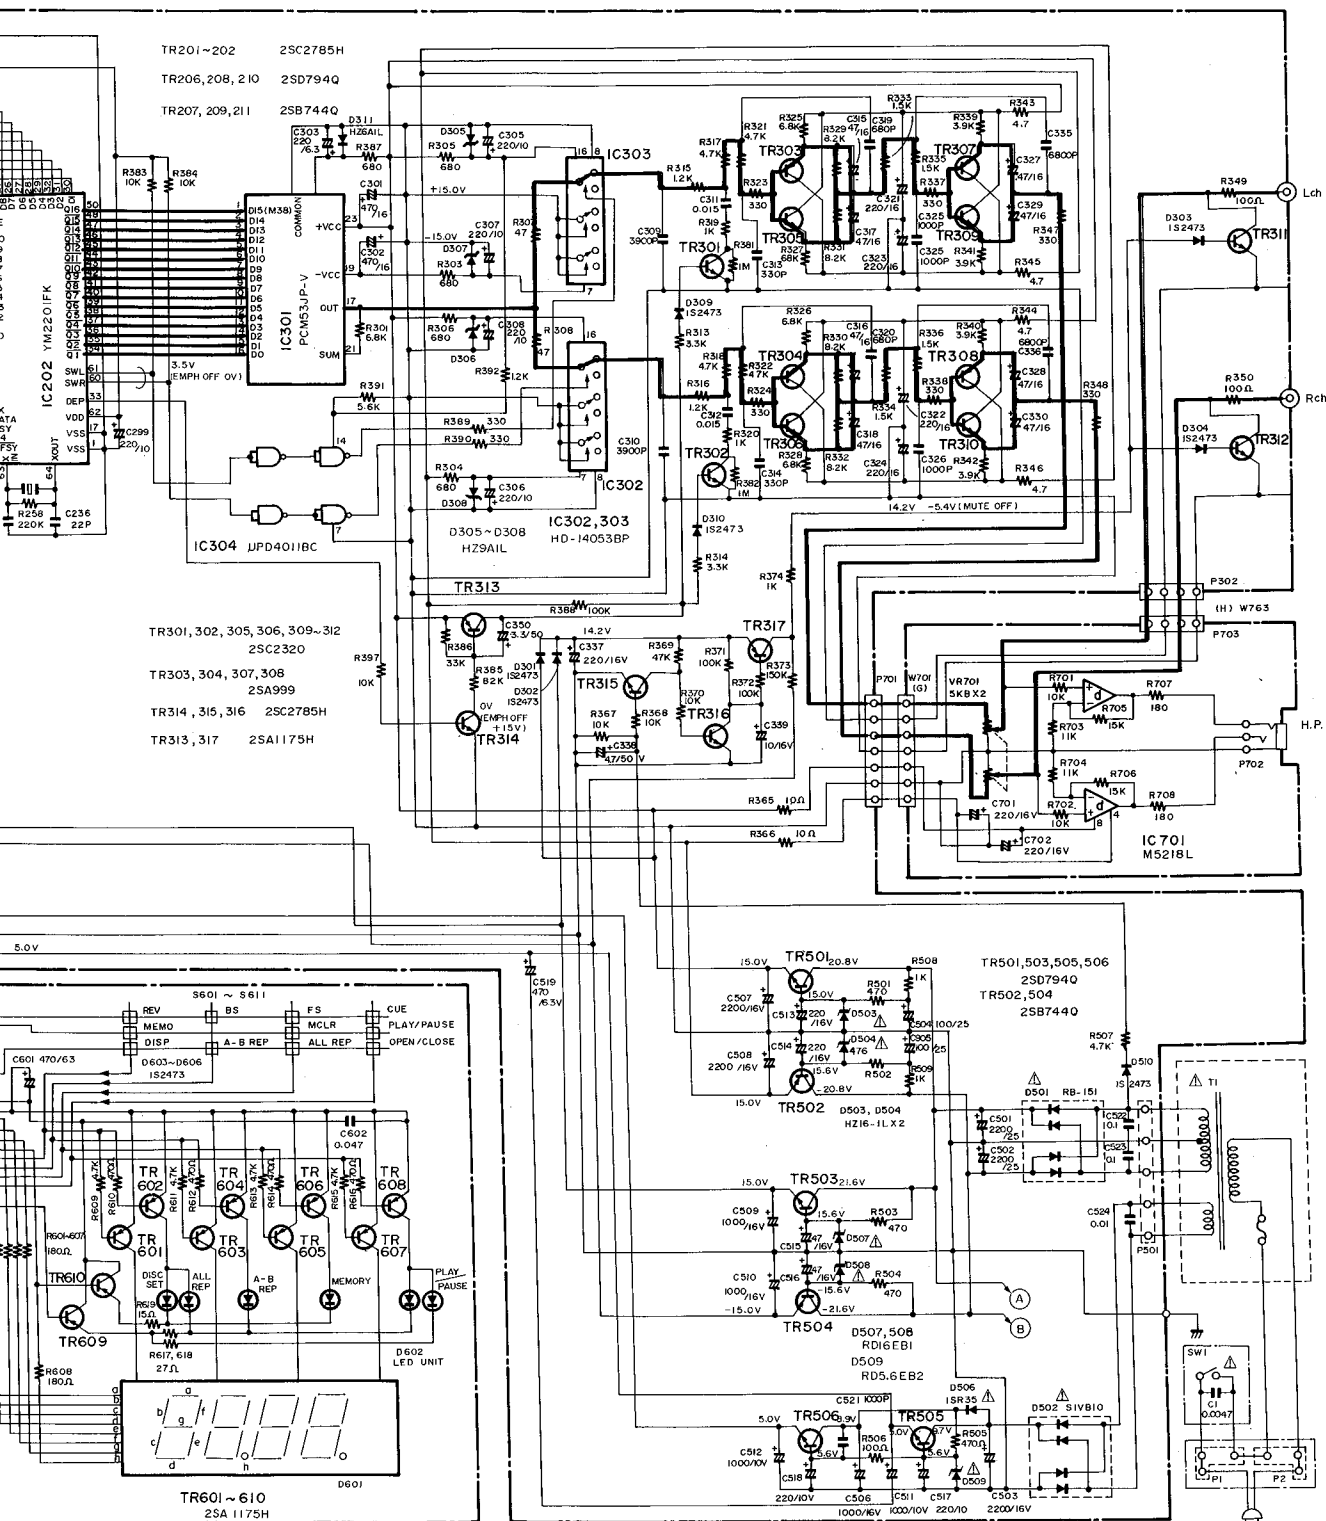


TR601 610 Active L.....OV
 H.....5V

MAIN CIRCUIT DIAGRAM

(FOR GENERAL (EW) MODEL)


PRODUCT SAFETY SHOULD BE CONSIDERED WHEN COMPONENT REPLACEMENT IS MADE IN ANY AREA OF A UNIT. THE Δ BESIDE A PART IN THE PARTS LIST THE SCHEMATIC DIAGRAM DESIGNATES COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT EXACT CATALOGED PARTS BE USED FOR REPLACEMENT OF COMPONENTS WHICH ARE DESIGNATED BY A Δ , IN THE PARTS LIST AND THE SHADED AREAS ON THE SCHEMATIC DIAGRAM. USE OF SUBSTITUTE REPLACEMENT PARTS WHICH DO NOT HAVE THE SAME SAFETY CHARACTERISTICS AS RECOMMENDED IN FACTORY SERVICE INFORMATION MAY CREATE SHOCK, FIRE OR OTHER HAZARDS.

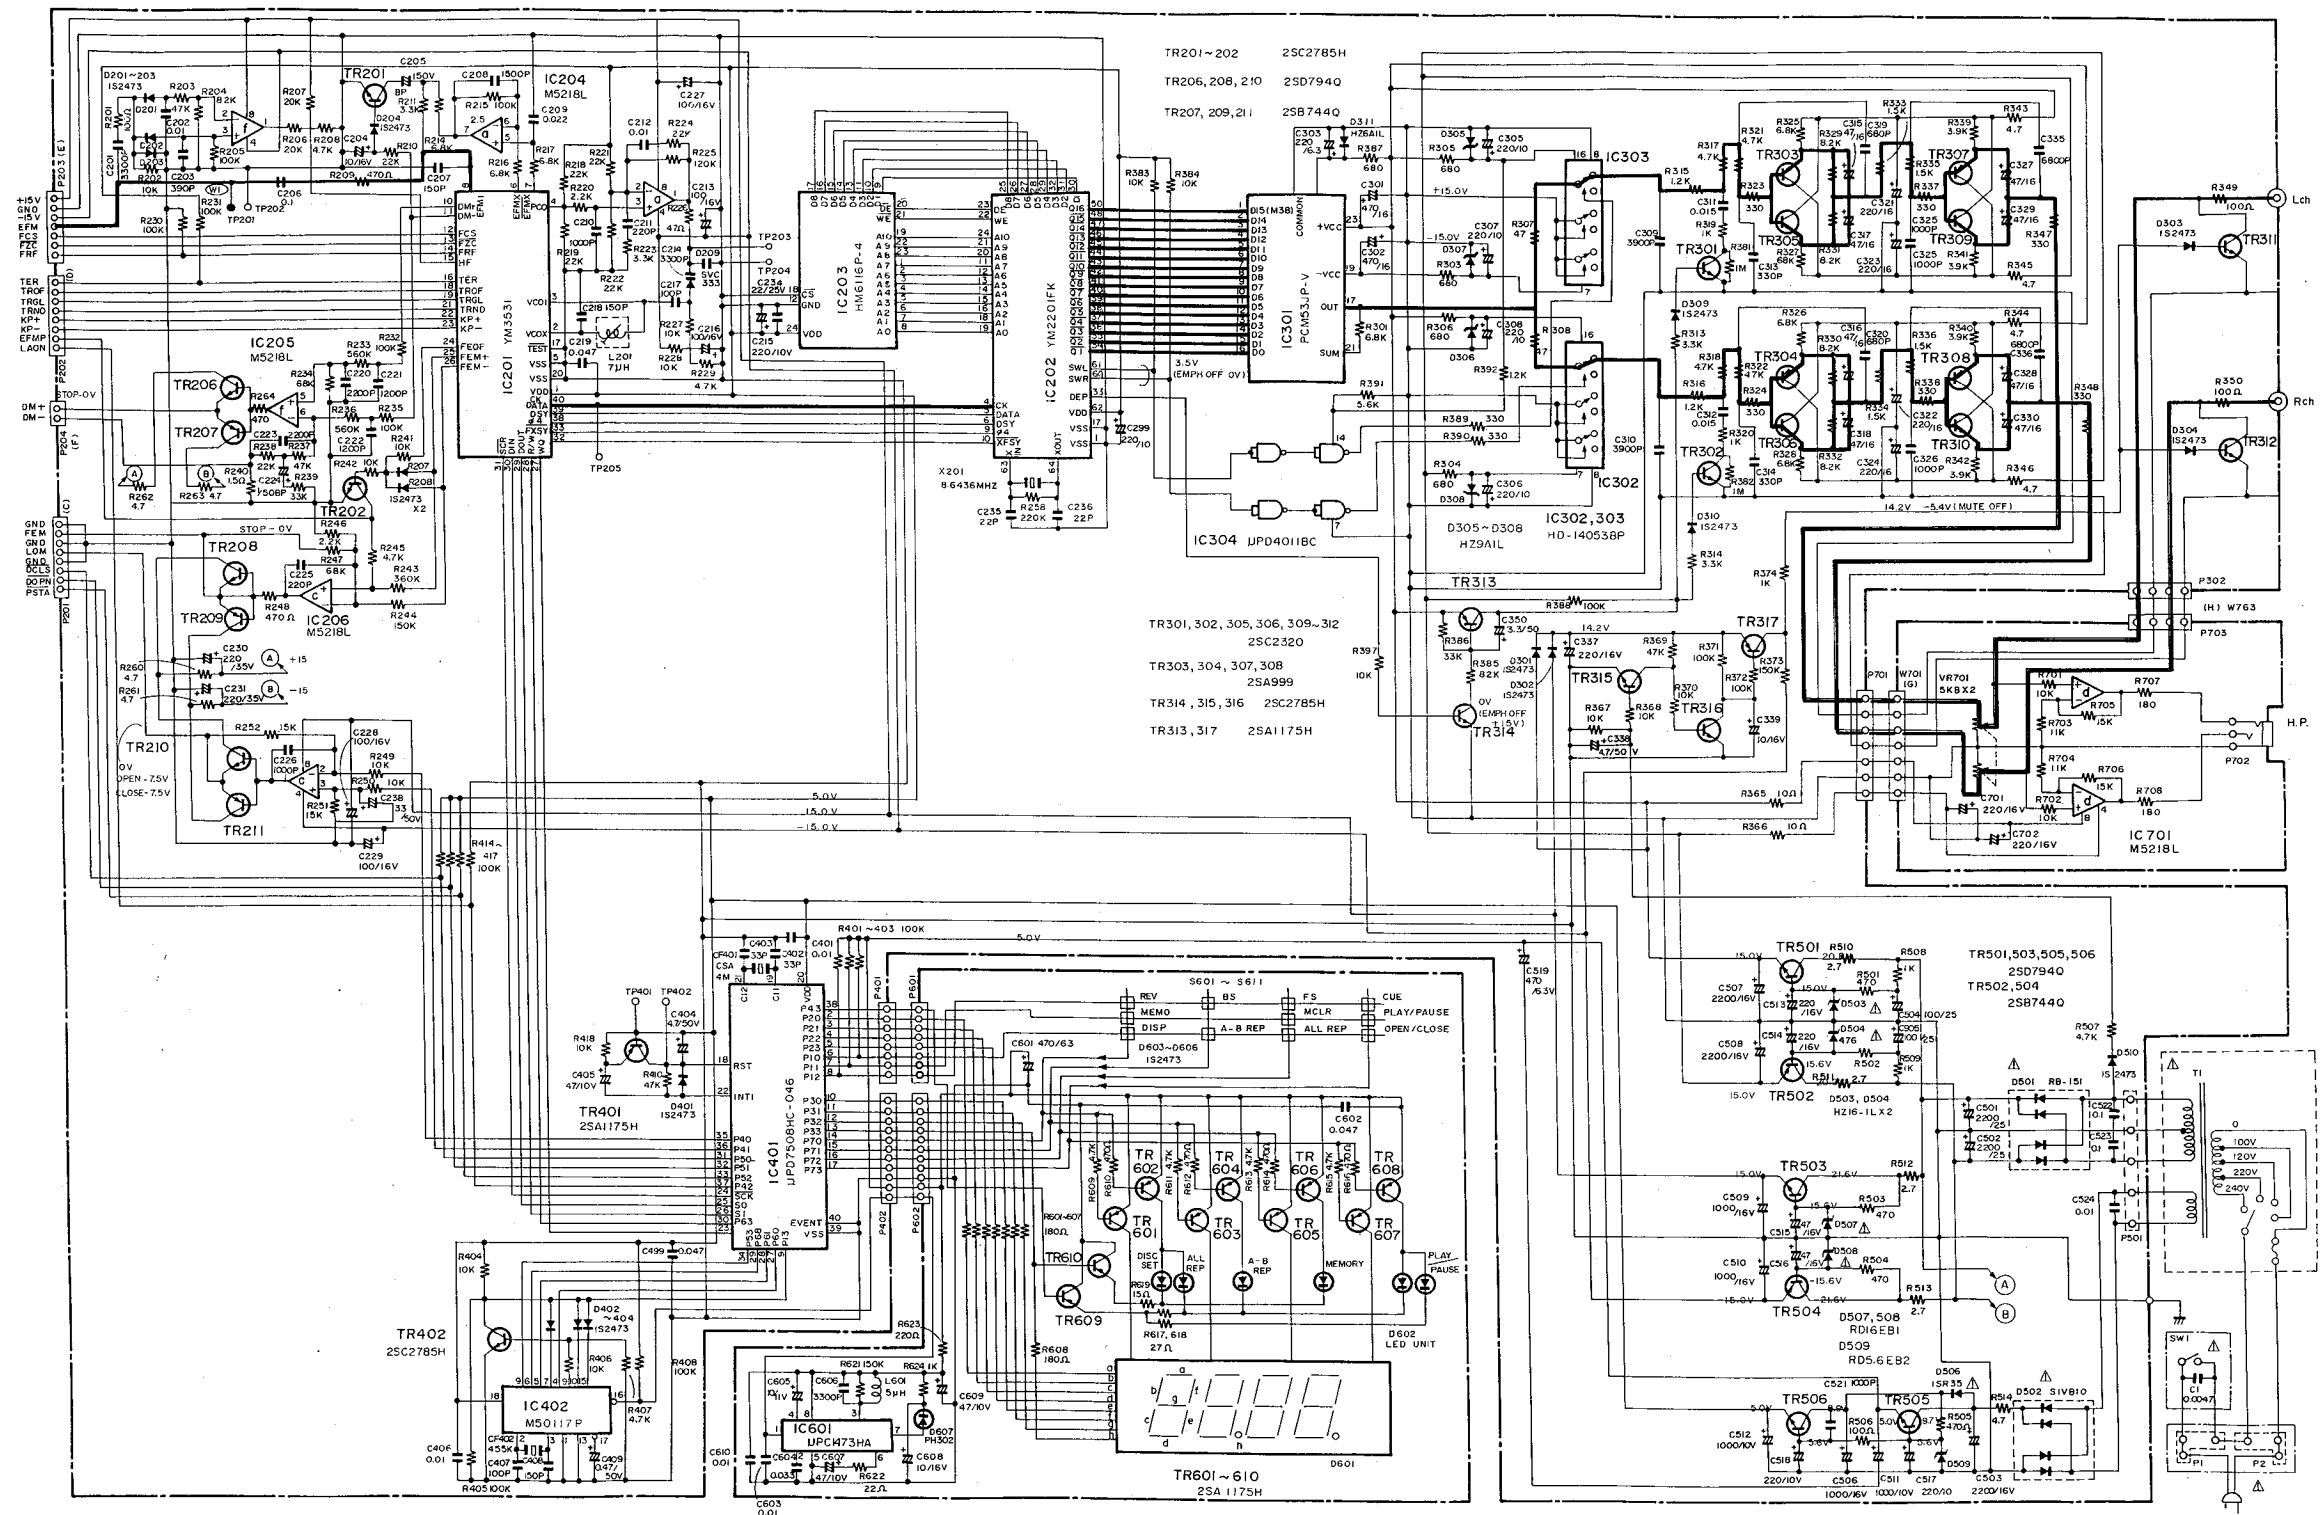


TR601 ~ 610 Active L --- 0V
H --- 5V

MAIN CIRCUIT DIAGRAM

(FOR GENERAL (EW) MODEL)

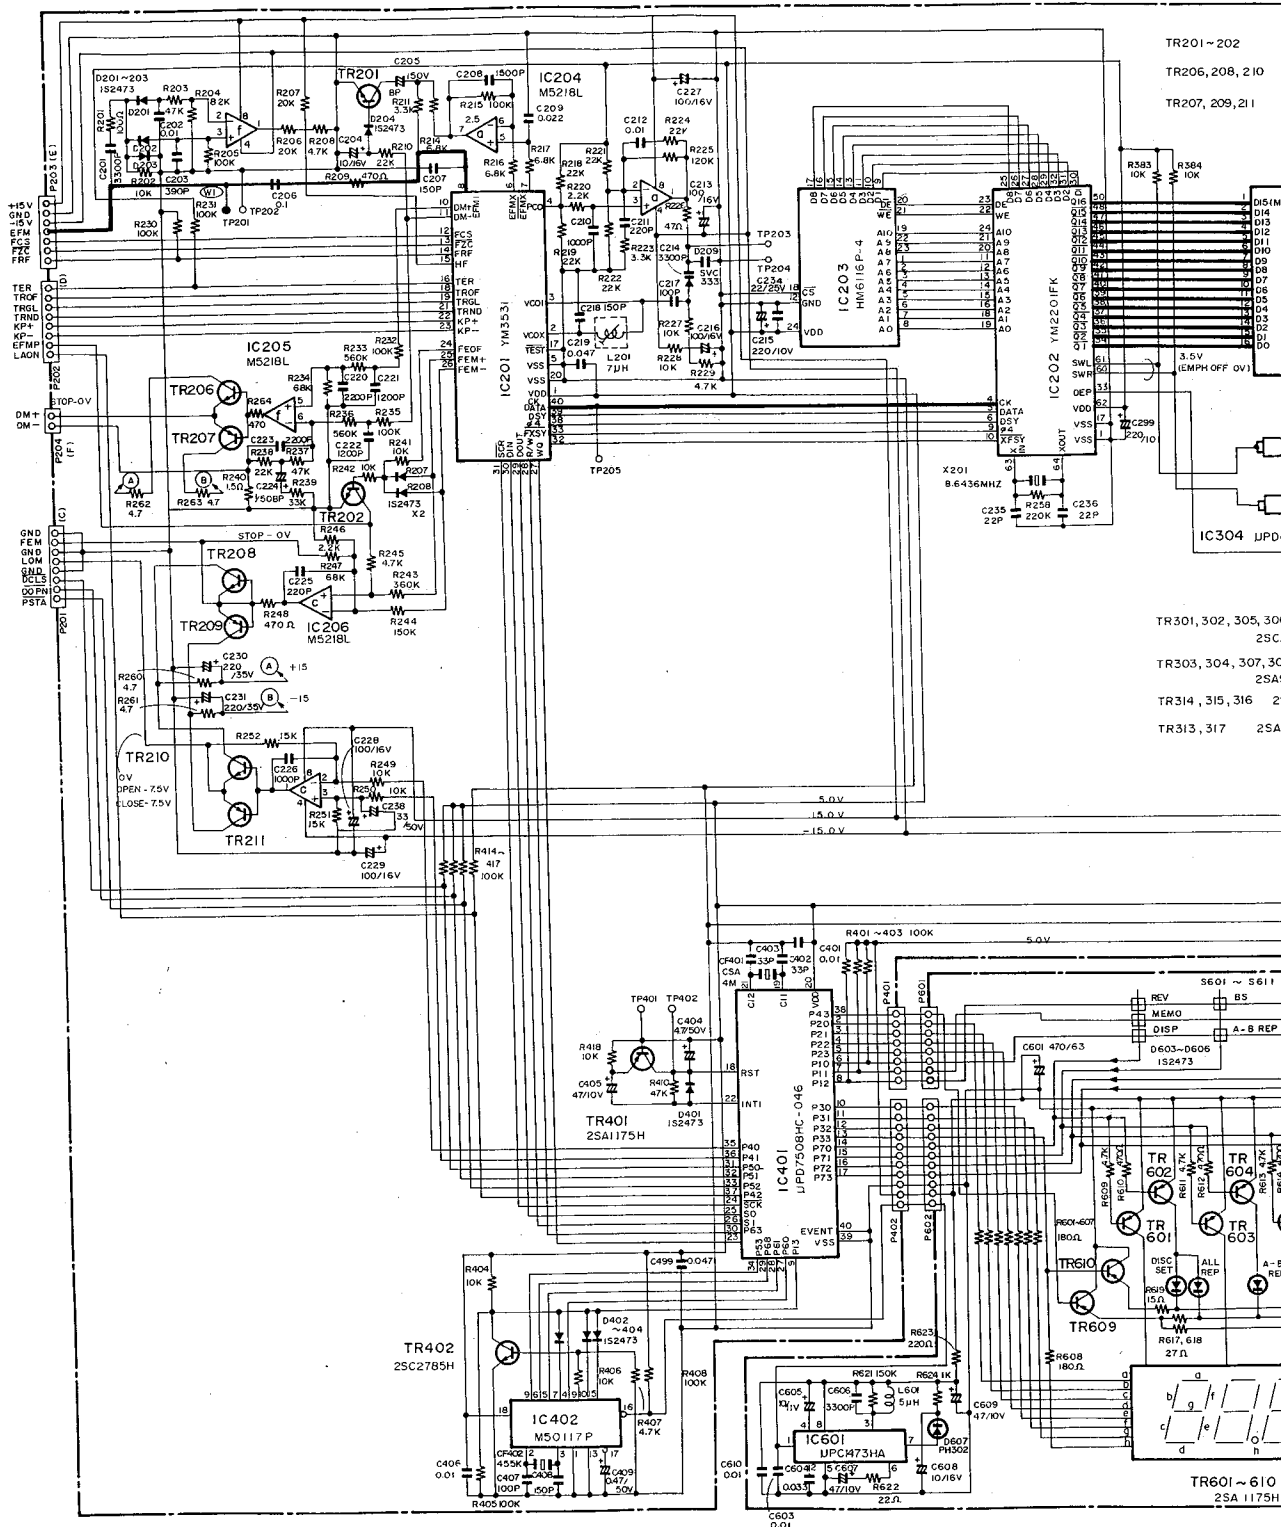


PRODUCT SAFETY SHOULD BE CONSIDERED WHEN COMPONENT REPLACEMENT IS MADE IN ANY AREA OF A UNIT. THE Δ BESIDE A PART IN THE PARTS LIST THE SCHEMATIC DIAGRAM DESIGNATES COMPONENTS IN WHICH SAFETY CAN BE OF SPECIAL SIGNIFICANCE. IT IS PARTICULARLY RECOMMENDED THAT EXACT CATALOGED PARTS BE USED FOR REPLACEMENT OF COMPONENTS WHICH ARE DESIGNATED BY A Δ , IN THE PARTS LIST AND THE SHADED AREAS ON THE SCHEMATIC DIAGRAM. USE OF SUBSTITUTE REPLACEMENT PARTS WHICH DO NOT HAVE THE SAME SAFETY CHARACTERISTICS AS RECOMMENDED IN FACTORY SERVICE INFORMATION MAY CREATE SHOCK, FIRE OR OTHER HAZARDS.

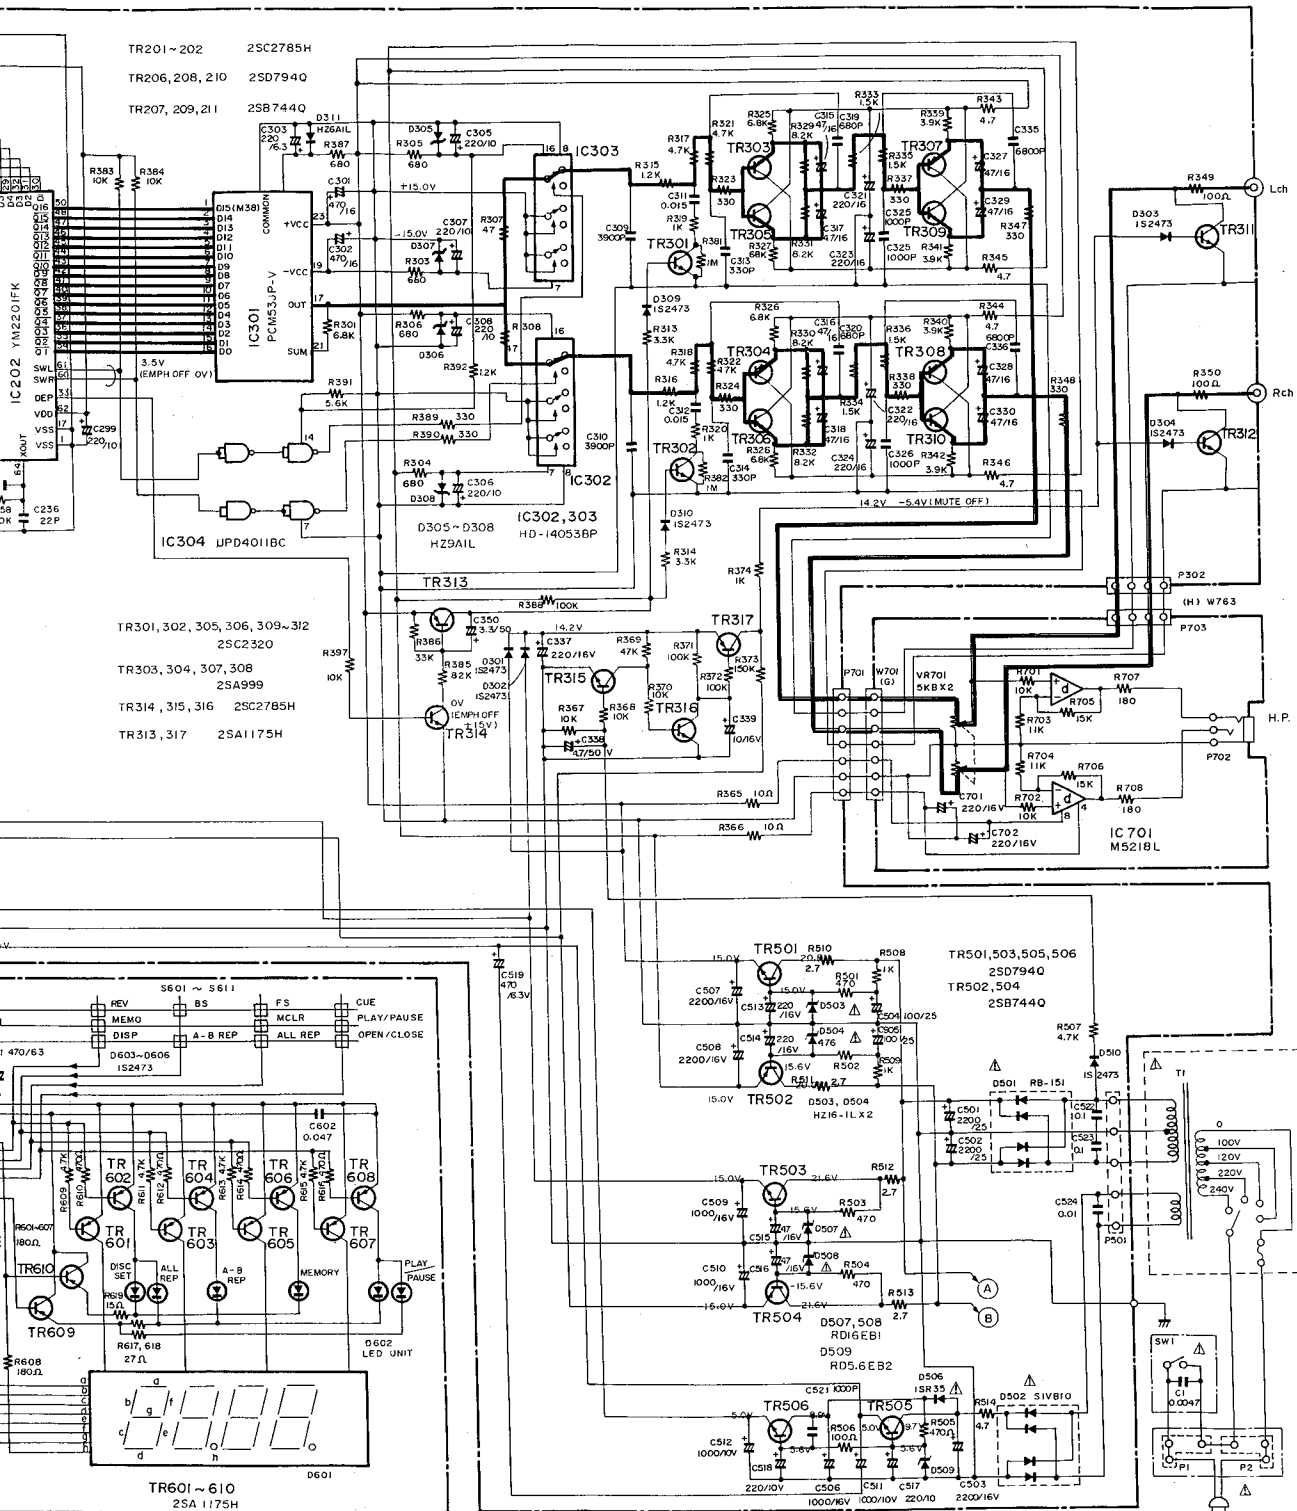


EXPLODED VIEW OF SET


(FOR USA AND CANADA (A) MODELS)

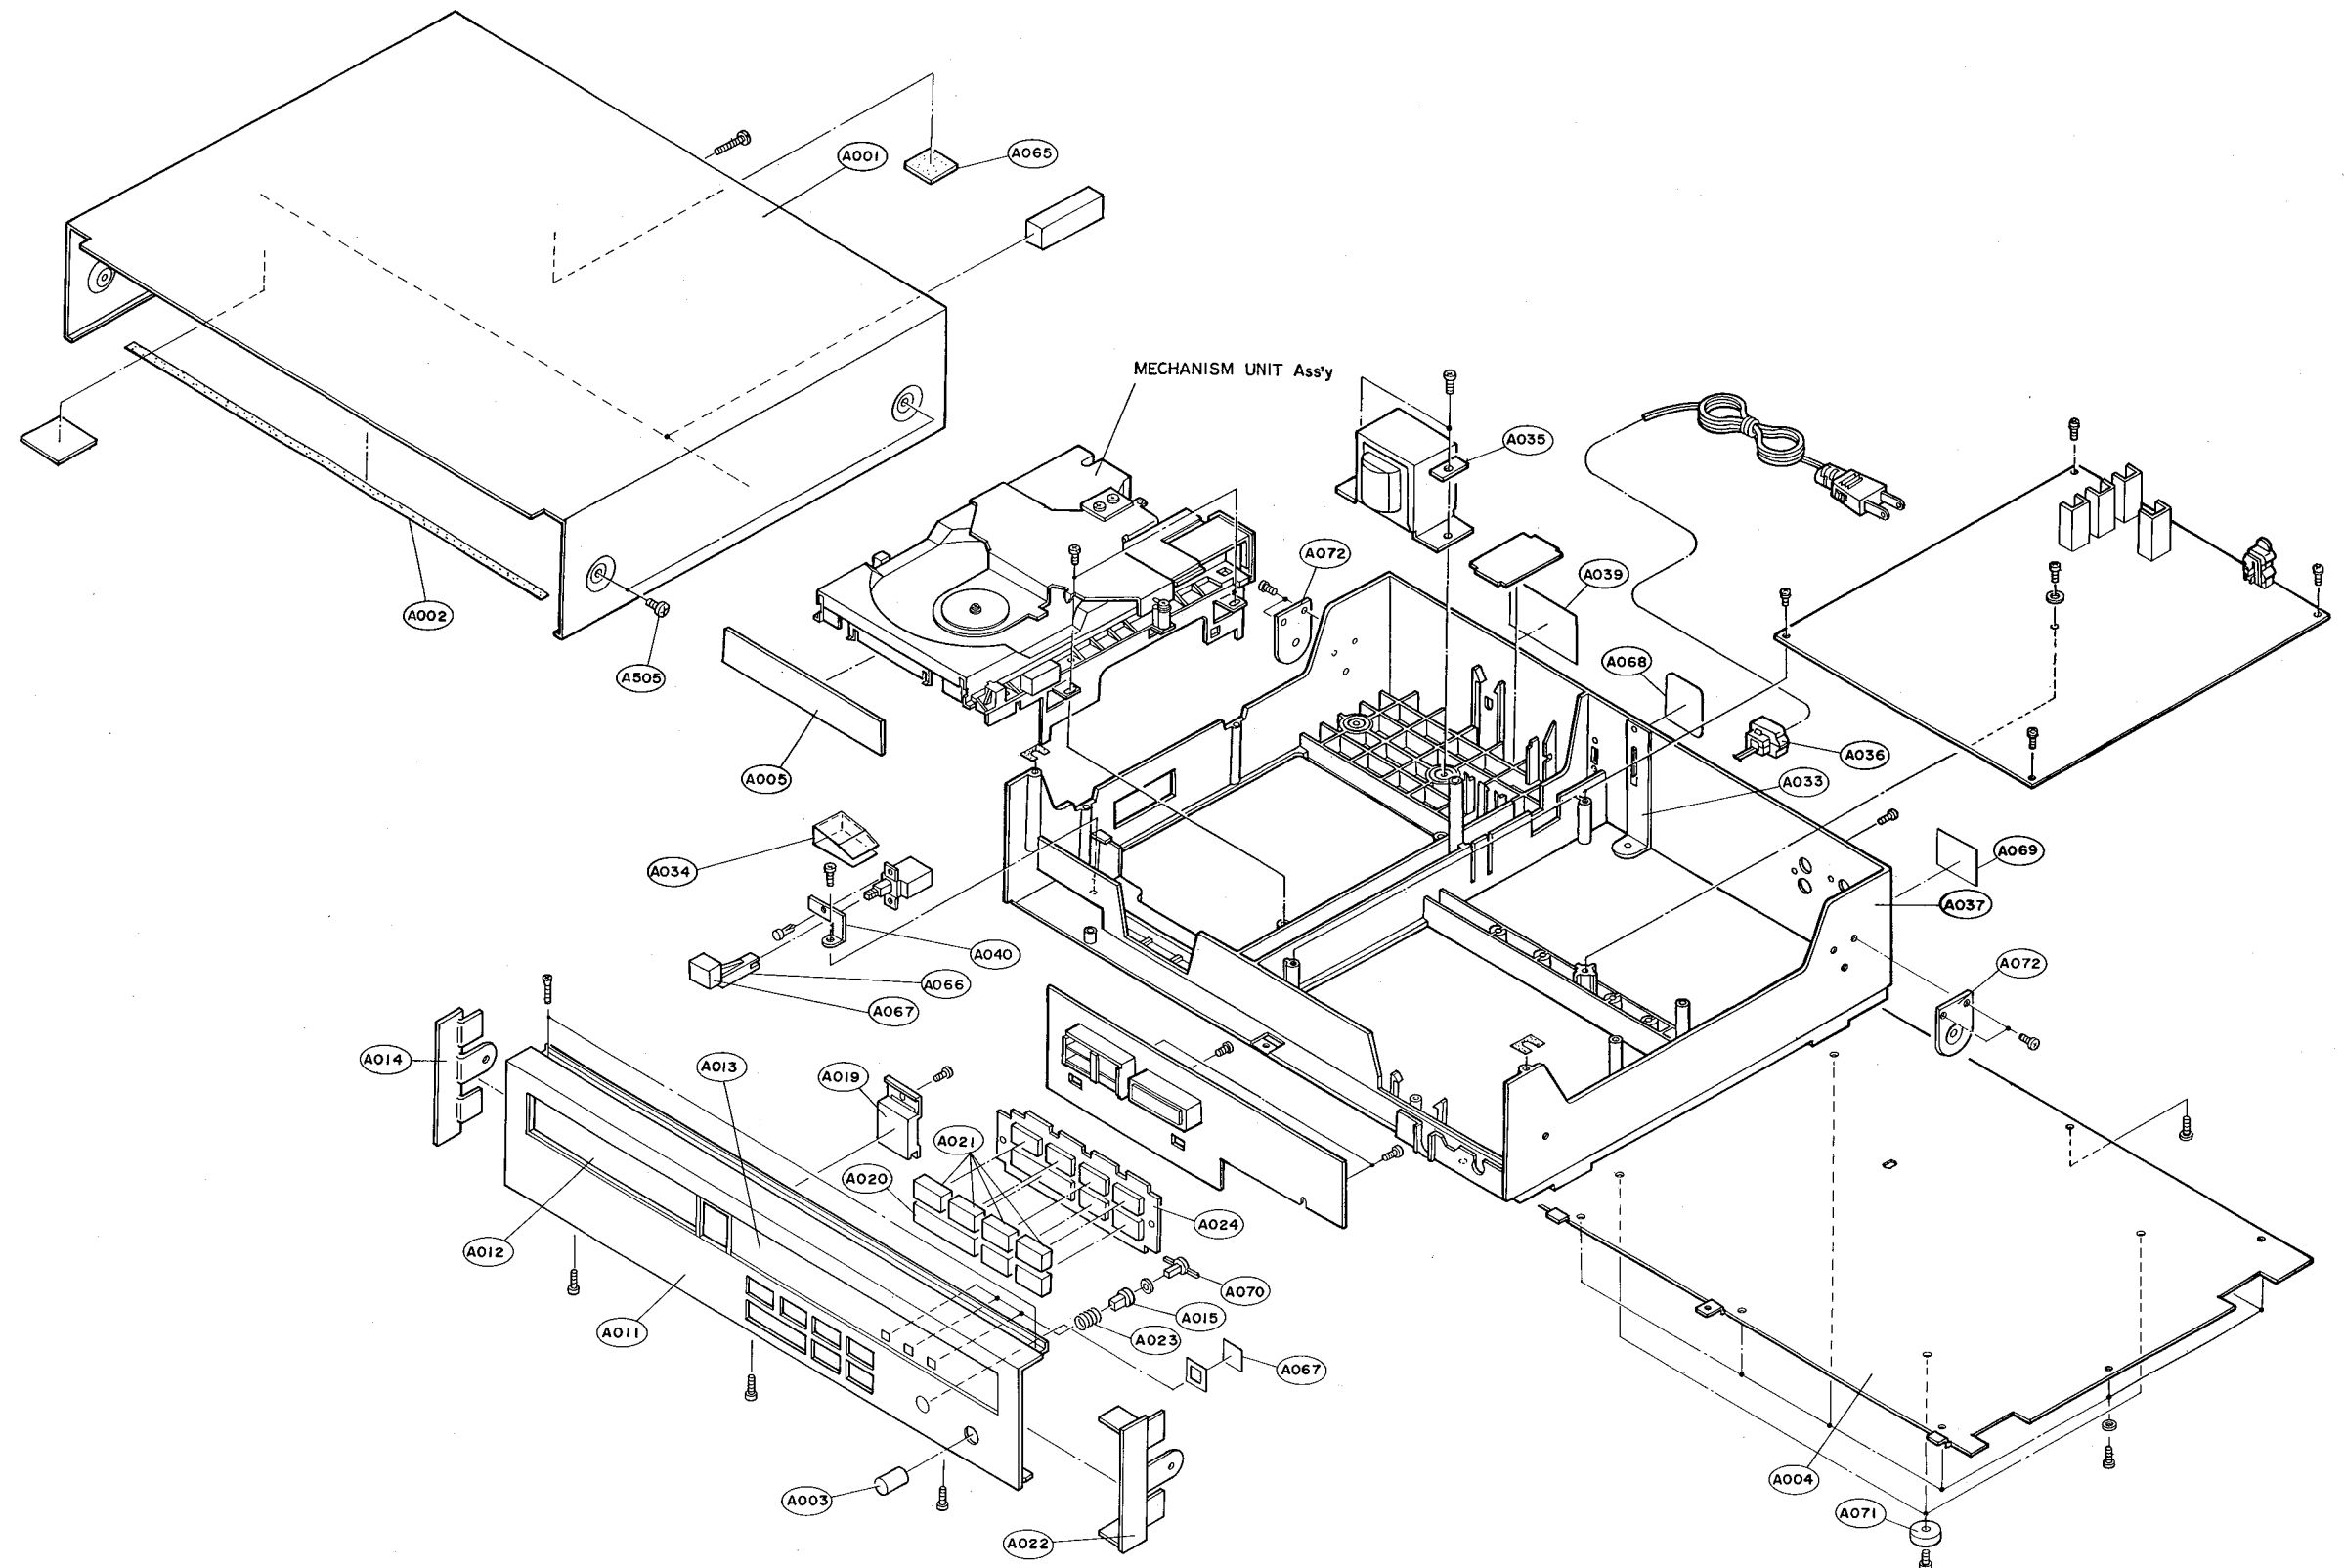

EXPLODED VIEW OF SET


(FOR USA AND CANADA (A) MODELS)

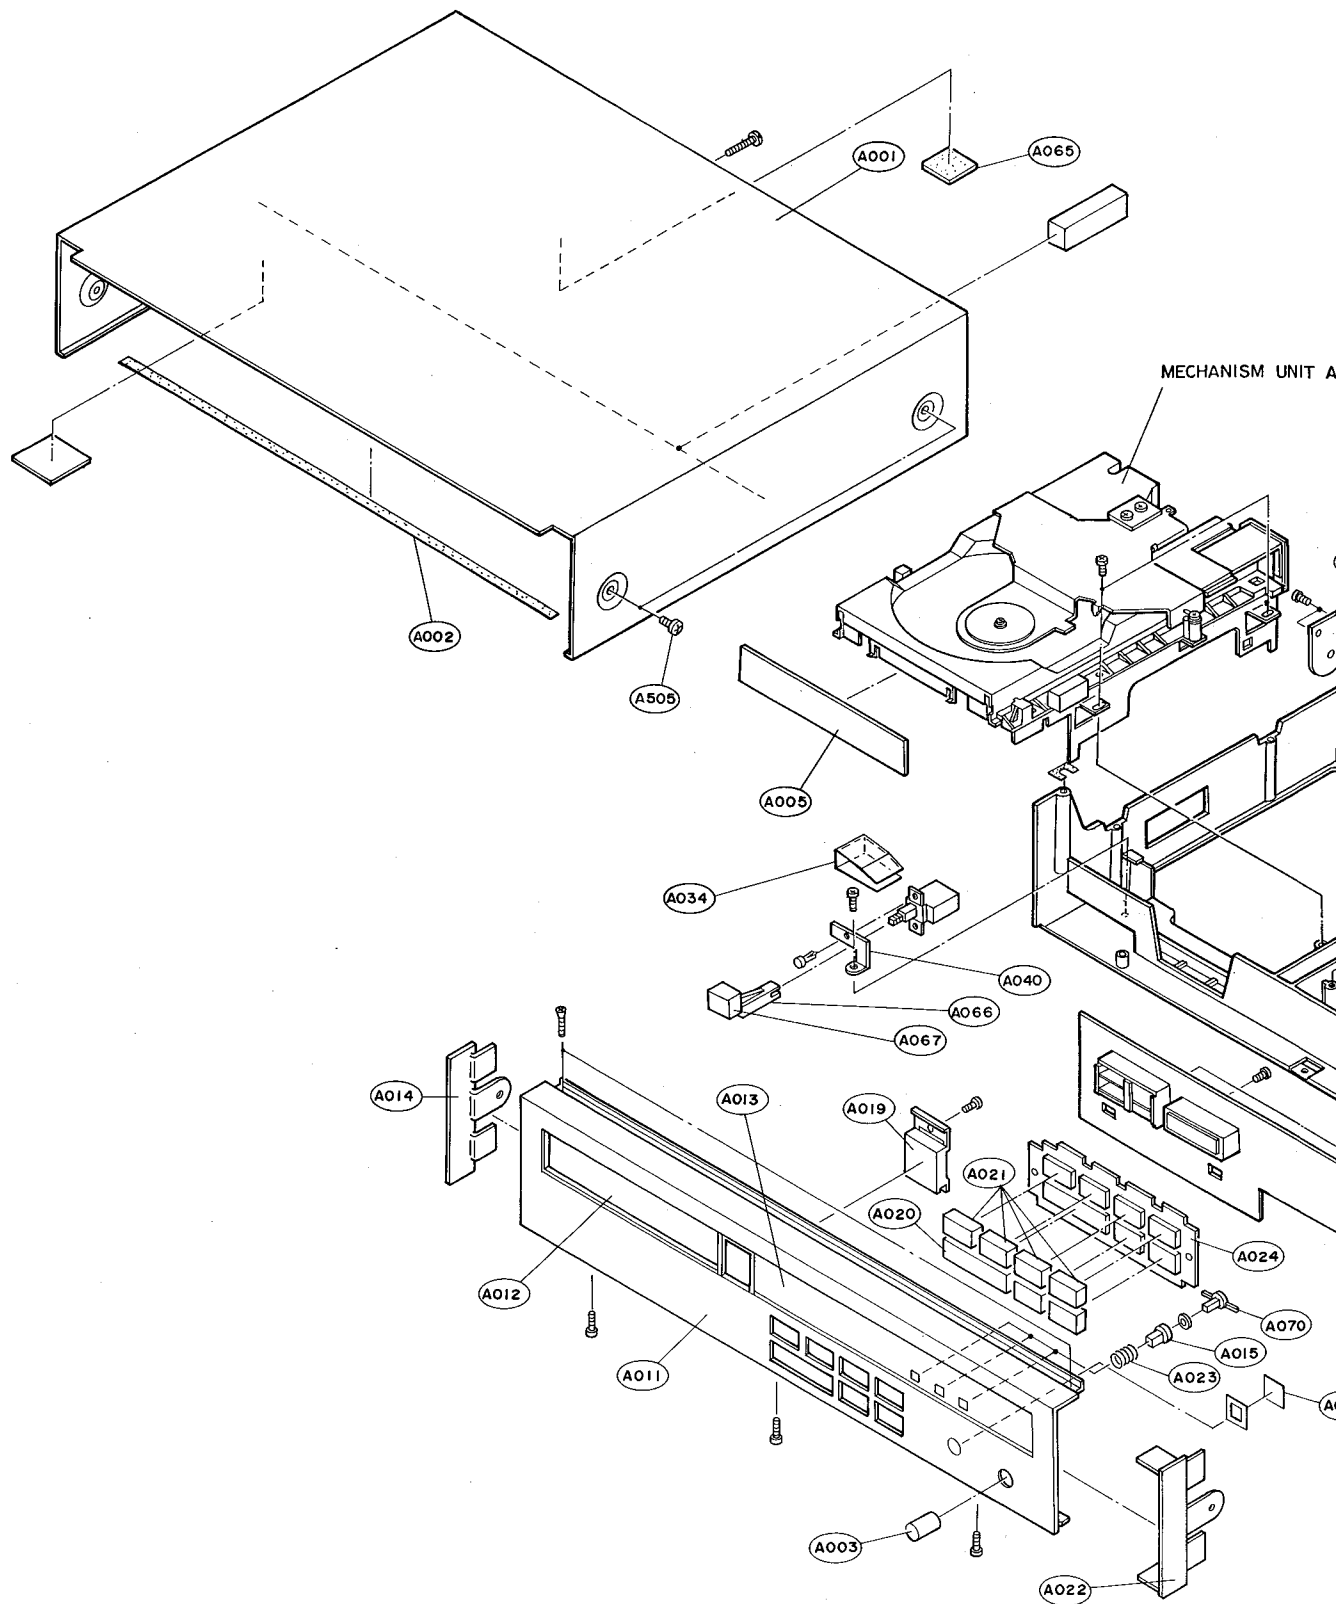

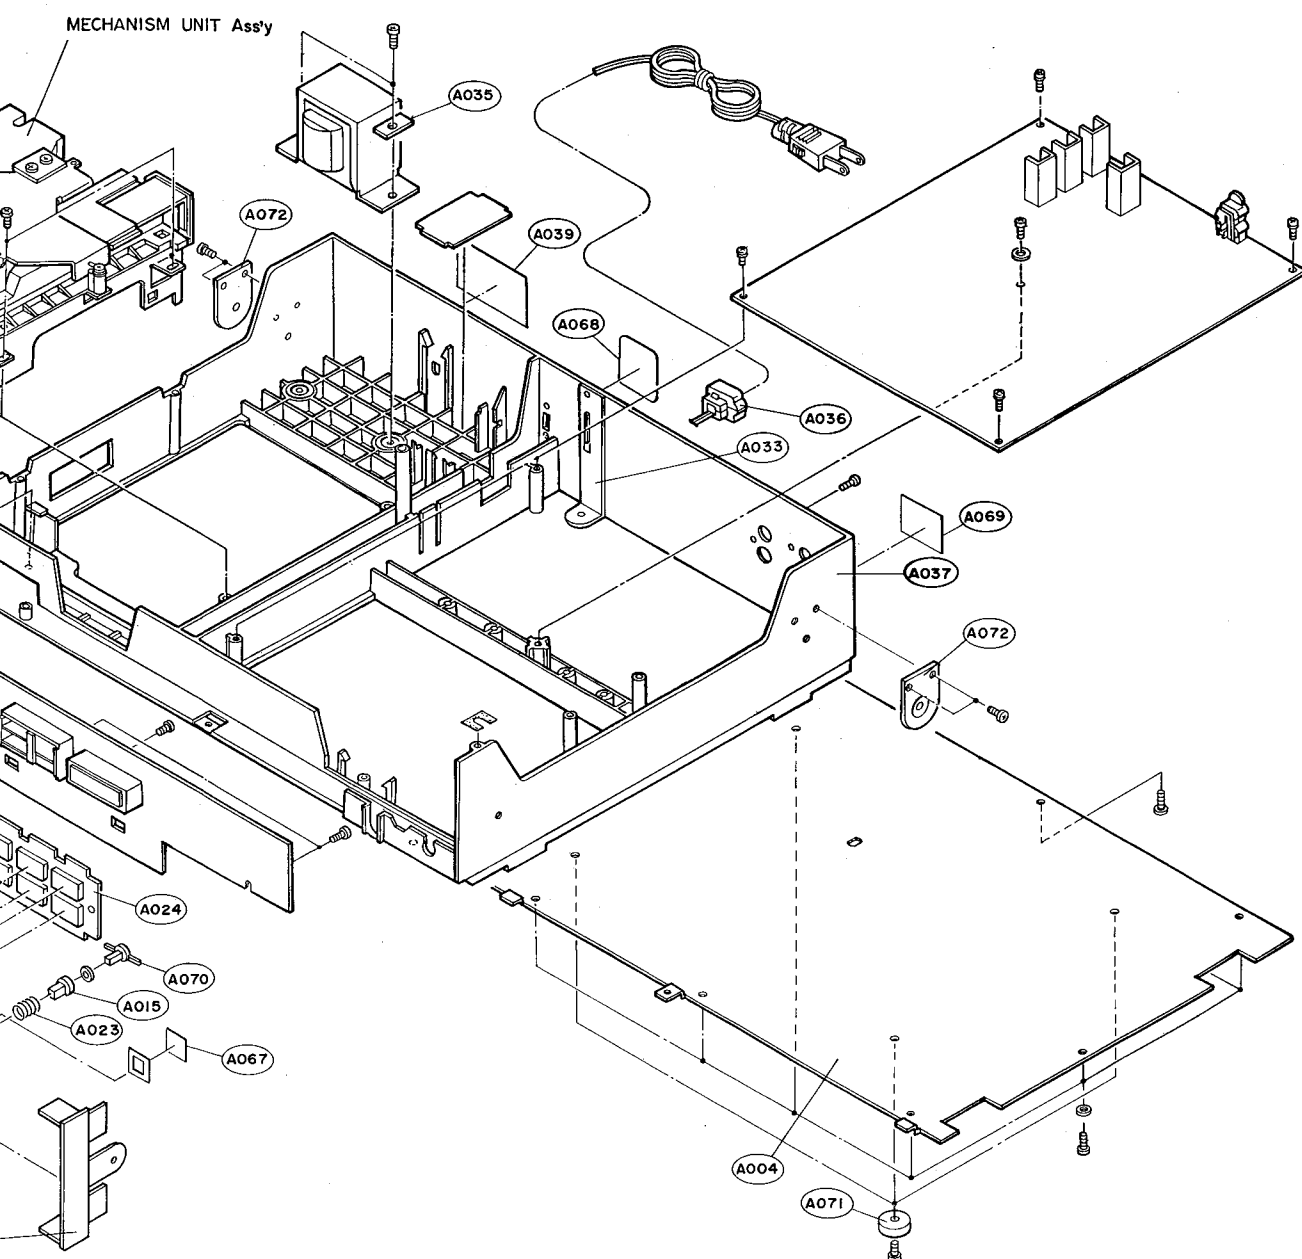


EXPLODED VIEW OF SET


(FOR GENERAL EW MODEL)

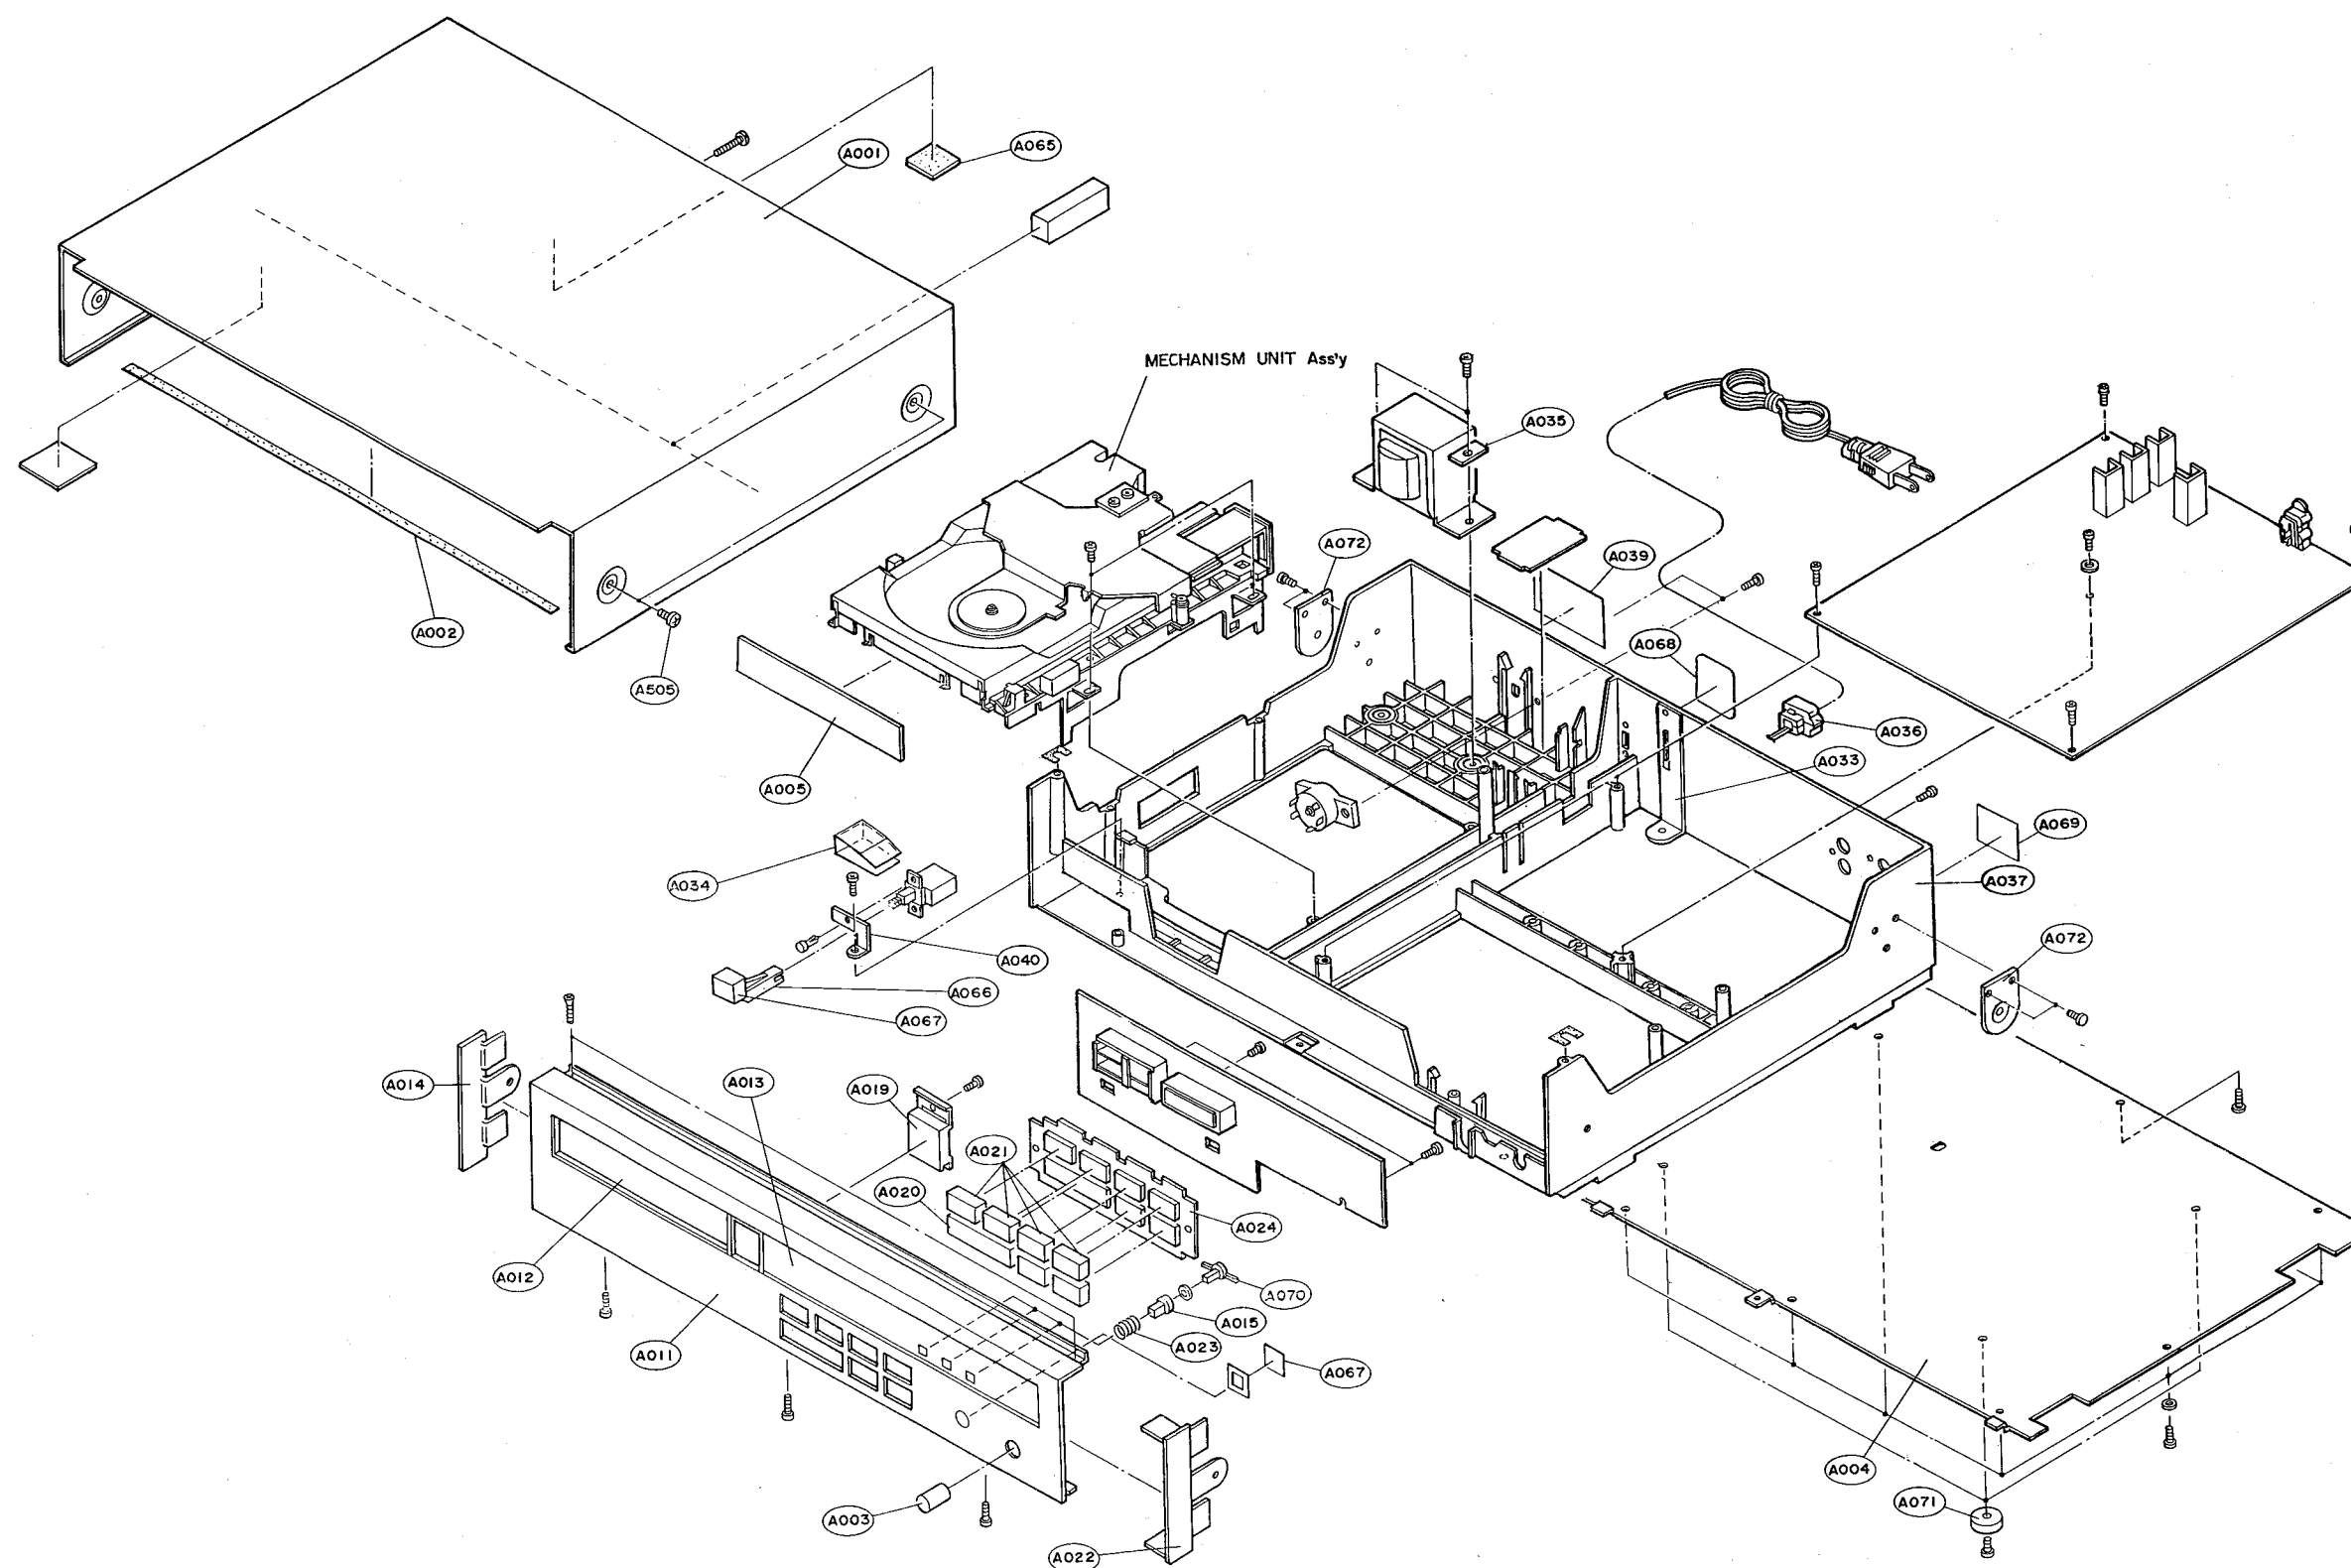

EXPLODED VIEW OF SET


(FOR GENERAL (EW) MODEL)

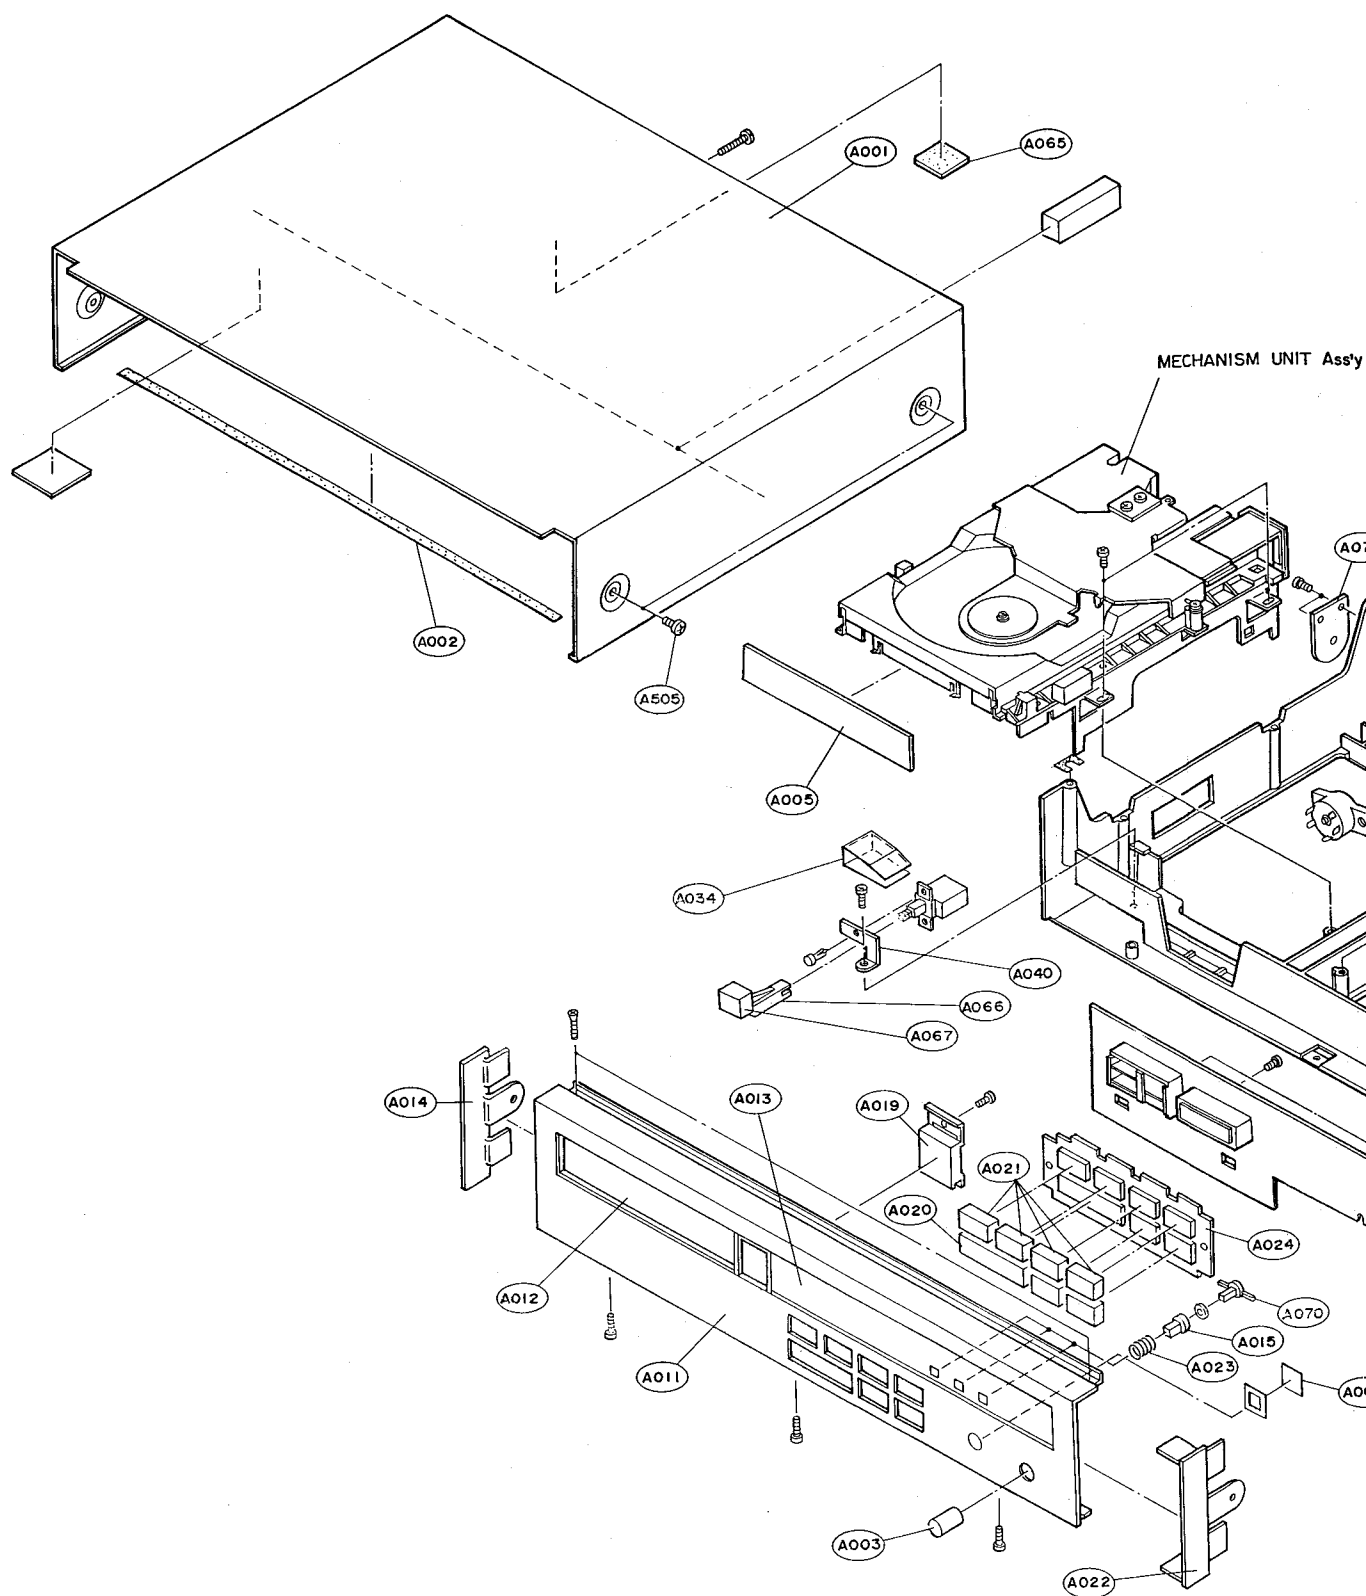

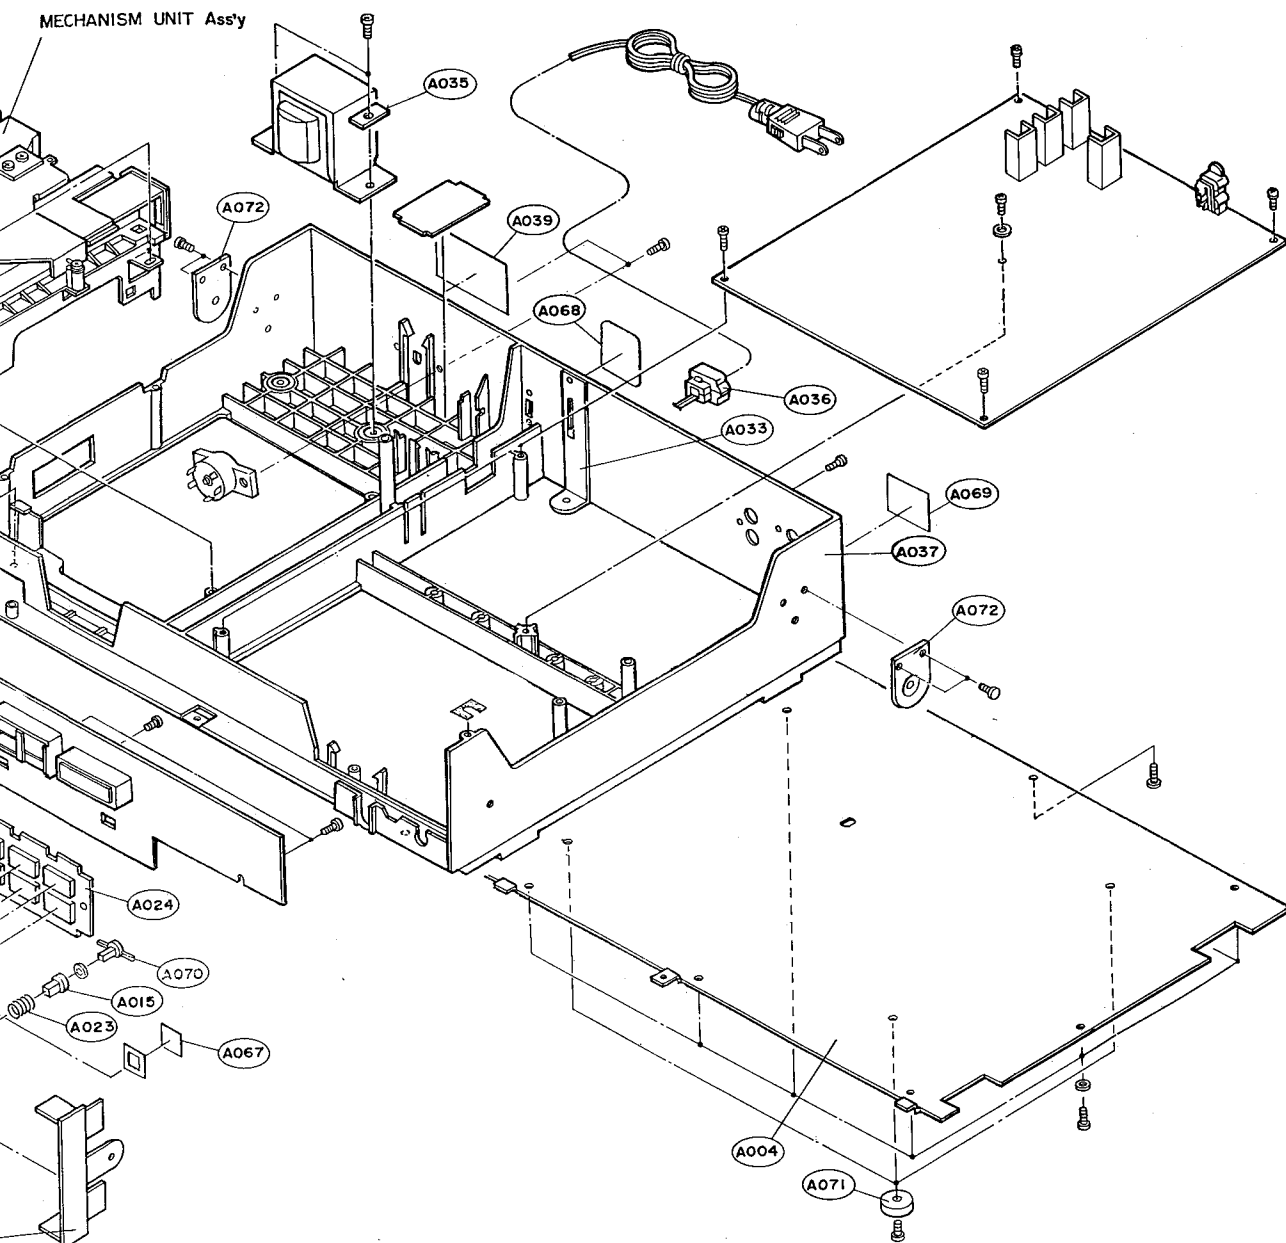



EXPLODED VIEW OF MECHANISM UNIT

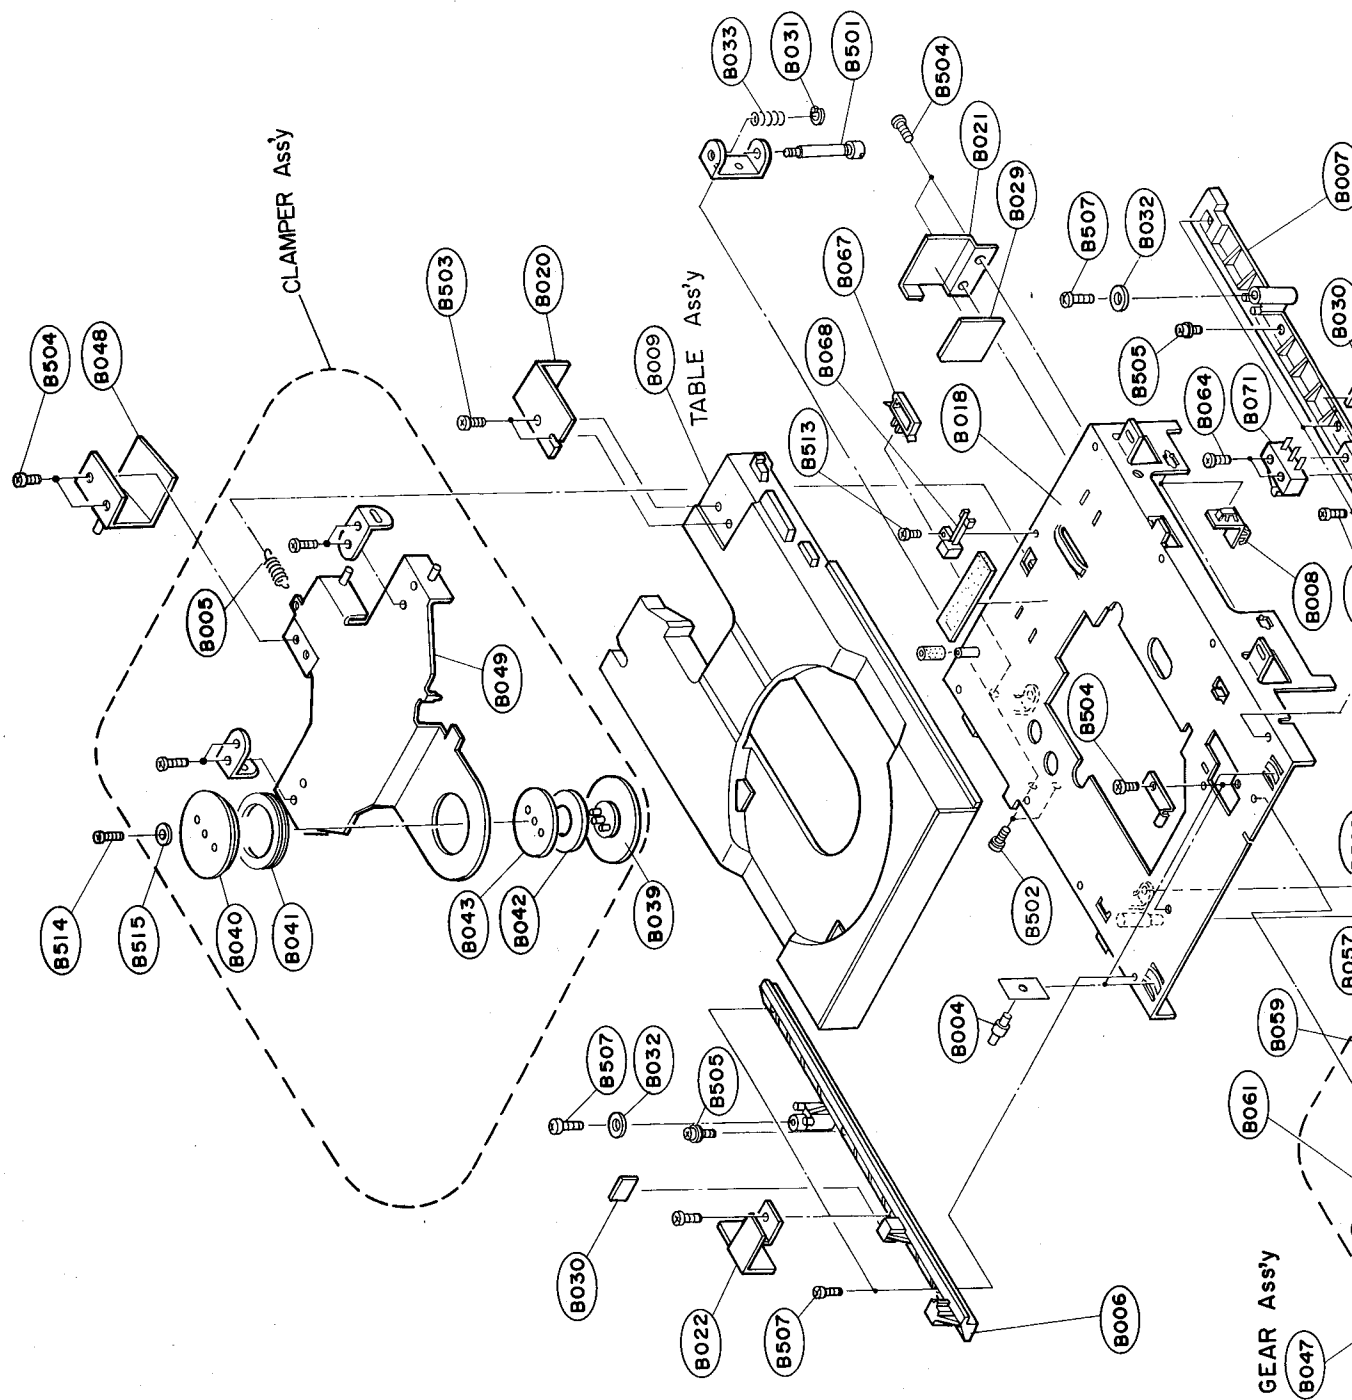



REPLACEMENT PARTS LIST

(FOR USA MODEL)

Note: The components identified by Δ mark or with the symbol Nos. shaded are critical for safety. Replace only with parts Number specified.

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
D202	D204	5631-1S2473 DIODE,SI-1S2473	29
D207	D301		
D302	D303		
D309	D401		
D402	D403		
D510	D603		
D605	D606		
D209		36050024 DIODE BARICAP SVC-333	1
D607		36803003 DIODE,PHOTO PH302	1
D506		5682-1SR35-10 DIODE 1SR35-100,AT	1
Δ D509		565-1SR35-10 DIODE ZENER RDS 565-10	
Δ D507		565-1SR35-10 DIODE ZENER RDS 565-10	
Δ D502		36902069 RECTIFIER BLOOM STUBD	
Δ D301		36902069 RECTIFIER BLOOM STUBD	
D601	36904292	LED	1
D602		36904293 LED UNIT SEL 9603-04	1
D311	D306	5685-HZ6A-1L DIODE HZ6A-1L	1
D305	D307	5635-HZ9A-1L DIODE HZ9A-1L	1
D308			4
Δ D505	D504	565-HZ16-1L DIODE HZ16-1L	2
***	TRANSFORMERS	***	
***	45006177	TRANS POWER	1
***	VARIABLE RESISTORS	***	
VR701	41950535	VR,5KB	1
VR104	41951151	R,VARIABLE 33K,B	1
VR103	41951154	R,VARIABLE 100K,B	1
VR101	41951203	R,VARIABLE 33K	1
VR102	41951210	R,VARIABLE 470K	1
***	RELAYS & SWITCHES	***	
S601	S602	65904469 MOMENTARY SW	11
S604	S605		
S607	S608		
S611	S610		
B068		65907061 SWITCH	1
B070		65907081 SWITCH,LEAF	1
Δ B070		65911120 SW,LEVER,POWER SLDIP	1
***	COILS & FILTERS	***	
L601		60980003 COIL,DETECTOR	1
L701		610E2074 COIL FILTER 100KA,AT	1
L201		61904473 VCO OSC COIL	1
CF402		61919077 CERAMIC FILTER 455K01	1

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
***	ICS	***	
IC601	37101203	IC UPC1473HA	1
IC102	37101241	IC BA4558	5
IC105			
IC204	5652-M5218L	IC M5218L	4
IC701			
IC101	37903201	IC BA4560-D	1
IC304	37904033	MOS UPD4011BC(ESD)	1
IC201	37951041	IC MOS YM-3531(ESD)	1
IC203	37951042	IC MOS HM6116P-4(ESD)	1
IC202	37951044	IC MOS YM-2201FK(ESD)	1
IC301	37951047	IC PCM53JVP-2	1
IC401	37951048	IC MOS UPD7508HC-046(ESD)	1
IC402	37951049	IC MOS M50117P	1
IC302	37951109	IC HD14053BP	2
***	TRANSISTORS	***	
TR107	35025517	TR,2SB744 Q	7
TR209			
TR504	5611-999(F)	TR,2SA999F	4
TR303			
TR308			
TR104	35904408	TR,2SA1175 H	15
TR317			
TR602			
TR605			
TR608			
TR101	5613-535(B)	TR 2SC535B	2
TR301	5613-2320(F)	TR 2SC2320F	8
TR306			
TR311			
TR103	35950908	TR,2SC2785 H	15
TR110			
TR115			
TR201			
TR315			
TR106			
TR206			
TR501			
TR506			
***	DIODES	***	
D101	D103	5631-1S2473 DIODE,SI-1S2473	29
D104	D106		
D107	D108		
D201			

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
A067	***	KNBS & PUSH BUTTONS ***	1
A020	1660-00401	BUTTON POWER ASSY	1
A021	1662-21201VN	FUNC. BUTTON (L)	6
A015	1662-21101VN	FUNC. BUTTON (S)	3
A070	1662-05401VN	BUTTON PUSH	3
	2601-7149	SHART	
A003	18477001	KNOB VR ASSY	1
A019	18477031	BUTTON EJECT (H/K)	1
***	***	PRINTED & PACKING MATERIALS ***	
	18813121	FILLER,CARTON	2
	18813521	CARTON BOX	1
	78924321	INSTRUCTION BOOKLET	1
***	***	MECHANICAL PARTS ***	
B018	18291091	CLAMPER,WIRE L94 WHITE	5
B008	18293681	PWB HINGE	2
B019	18293751	BUSH L100 UL	1
B009	18409522	TABLE ASSY	1
B006	18409613	GUIDE	1
B007	18409623	GUIDE	1
B004	18409872	ROLLER ASSY	4
B002	18532174	SPRING	3
B003	18532181	CATCH,CUTION	4
B033	18532231	SPRING	1
B044	18532283	SPRING	1
B501	18533031	SCREW B	1
B020	18533062	TABLE ROCK A	1
B021	18533071	TABLE ROCK B	1
B022	18533081	TABLE LIMITER	1
B005	18534101	SPRING	1
B001	18610093	CUSHION	4
B023	18610341	GUIDE READ	1
B029	18610421	MAGNET RUBBER	1
B030	18610431	STOPPER CUSHION	2
B031	18851081	E-WASHER DIA 4	1
B502	18852291	SCREW,SPECIAL	2
B035	24851801	RIVET,PUSH	1
PA01	87868101	SERVO PWB FULL ASSY	1

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
CF401	61919078	CERALOCK 4MHZ	1
***	***	PCB ASSYS ***	
	87868501	MAIN PCB FULL ASSY	1
***	***	ELECTRICAL PARTS & MISCELLANEOUS PARTS ***	
X201	64920183	XTAL 8.6436MHZ	1
	70804014	POWER CORP (US)	
P501	70905629	PIN JACK 2P	1
P702	70905648	JACK,HEAD PHONE	1
	71905211	TERMINAL,GROUND	1
B038	79710004	PICKUP KSS-121B	1
B045	79752083	MOTOR	1
B046	79752084	MOTOR	1
	79799202	COVER CAPACITOR	1
	79799290	REMOTE CONT.UNIT	1
***	***	APPEARANCE PARTS ***	
A071	18290731	FOOT,RUBBER (H9.0)	4
A036	18291091	CLAMPER,WIRE L94 WHITE	2
B042	18293241	WIRE CLAMPER #2271	1
A037	18293961	MAGNET B	1
	18301215	CHASSIS BASE (UL)	1
A001	18358541	CABINET	1
B036	18409593	RACK ASSY	1
B040	18409662	HOLDER,CATCH	1
B025	18409672	GEAR A	1
B026	18409681	GEAR B	1
B027	18409692	MOTOR PINION	1
B039	18410181	HOLDER MAGNET B	1
A024	18410281	BASE BUTTON	1
B047	18410381	LO GEAR ASSY (2)	1
B034	18530132	SPRING CENTER	1
B043	18532112	YOKE	1
B028	18532142	RAIL	1
B037	18533593	T.T BASE B ASSY	2
A023	18534031	SPRING,COIL	1
B048	18534071	BASE-CLAMPER ASSY	3
B049	18534092	CLAMPER ASSY	1
	18610291	PLATE	1
B041	18610611	RUBBER	1
A039	18721321	MODEL NO.PLATE	1
A005	18721331	ORNAMENTAL PLATE (H/K)	1
A080	88868641	PANEL FRONT S,ASSY	1
	18927501	CASE BATTERY	1

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
R108 R119 R144 R165 R173 R194 R227 R242 R367 R384 R406 R611 R701	5134-103J25P R112 R136 R142 R163 R171 R189 R202 R241 R250 R363 R404 R609 R615 R702	R-CARBON 10K 5% 1/4W	38
R703 R174 R177 R705 R129 R10A R166 R206	5134-113J25P 5134-123J25P 5134-153J25P 5134-183J25P 5134-203J25P R252 R134 R198 R704 R251 R706 R132 R167 R207	R-CARBON 11K 5% 1/4W R-CARBON 12K 5% 1/4W R-CARBON 15K 5% 1/4W R-CARBON 18K 5% 1/4W R-CARBON 20K 5% 1/4W	2 1 5 1 8
R125 R219 R224 R105 R187 R123 R158 R191 R116 R154 R203 R370	5134-223J25P R218 R222 R161 R106 R386 R151 R172 R140 R162 R237 R410	R-CARBON 22K 5% 1/4W R-CARBON 27K 5% 1/4W R-CARBON 33K 5% 1/4W R-CARBON 39K 5% 1/4W	8 3 2 7
R143 R234 R138 R126 R164 R205 R231 R371 R401 R405 R415 R145	5134-473J25P R148 R180 R369 R182 R247 R204 R135 R169 R215 R230 R235 R388 R403 R414 R417 R244 R197 R621	R-CARBON 47K 5% 1/4W R-CARBON 56K 5% 1/4W R-CARBON 68K 5% 1/4W R-CARBON 82K 5% 1/4W R-CARBON 100K 5% 1/4W	11 2 2 3 24
R122 R373 R258 R131 R243 R159	5134-124J25P 5134-154J25P 5134-224J25P 5134-244J25P 5134-364J25P 5134-394J25P	R-CARBON 120K 5% 1/4W R-CARBON 150K 5% 1/4W R-CARBON 220K 5% 1/4W R-CARBON 240K 5% 1/4W R-CARBON 360K 5% 1/4W R-CARBON 390K 5% 1/4W	2 5 1 1 1 1

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
R261 R619 R141 R617 R226	*** R260 R262 R263	*** 5134-150J25P R-CARBON 15H 5% 1/4W	6 1 3 2 3
R121 R349 R601 R604 R607	R622 R618 R308	5134-220J25P R-CARBON 22H 5% 1/4W 5134-270J25P R-CARBON 27H 5% 1/4W 5134-470J25P R-CARBON 47H 5% 1/4W	6 8
R171 R348 R127 R264 R614	R201 R506 R603 R606 R608	5134-101J25P R-CARBON 100H 5% 1/4W 5134-181J25P R-CARBON 180H 5% 1/4W	6 8
R113 R110 R337 R348 R127 R264 R614	R324 R338 R390 R209 R248 R612 R616	5134-221J25P R-CARBON 220H 5% 1/4W 5134-331J25P R-CARBON 330H 5% 1/4W 5134-471J25P R-CARBON 470H 5% 1/4W	1 9 8
R118 R179 R320 R315 R111 R333 R336 R130	R183 R319 R624 R392 R181 R335	5134-561J25P R-CARBON 560H 5% 1/4W 5134-102J25P R-CARBON 1.0K 5% 1/4W 5134-122J25P R-CARBON 1.2K 5% 1/4W 5134-152J25P R-CARBON 1.5K 5% 1/4W 5134-162J25P R-CARBON 1.6K 5% 1/4W	1 6 3 7 1
R176 R152 R117 R239 R107 R340 R124 R185 R199 R245 R321 R507	R246 R223 R314 R108 R341 R342 R137 R186 R229 R317 R322 R407	5134-222J25P R-CARBON 2.2K 5% 1/4W 5134-272J25P R-CARBON 2.7K 5% 1/4W 5134-332J25P R-CARBON 3.3K 5% 1/4W 5134-392J25P R-CARBON 3.9K 5% 1/4W 5134-472J25P R-CARBON 4.7K 5% 1/4W	3 1 6 6 16
R196 R114 R10C R109 R216 R325 R328 R329 R332	R391 R115 R10D R214 R326 R331 R330	5134-562J25P R-CARBON 5.6K 5% 1/4W 5134-622J25P R-CARBON 6.2K 5% 1/4W 5134-682J25P R-CARBON 6.8K 5% 1/4W	2 2 13
	R331	5134-822J25P R-CARBON 8.2K 5% 1/4W	4

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
C115	5354-822JHM	C,FILM 50V 8200PF 5%	1
C118	5354-103JHM	C,FILM 50V 0.010UF 5%	7
C212	C202		
C610	C603		
C107	C209	C,FILM 50V 0.022UF 5%	2
C604	5354-333JHM	C,FILM 50V 0.033UF 5%	1
C103	5354-104JHM	C,FILM 50V 0.10UF 5%	2
C1	42910036	C,CERAMIC 400V 4700PF	1
C108	4297F729	C,FILM 50V 0.22 UF 5%	2
C117	4297F731	C,FILM 50V 0.33 UF 5%	1
C313	5359-3315851	C,FILM 50V 330PF	2
C319	5359-6815851	C,FILM 50V 680PF	2
C325	5359-1025851	C,FILM 50V 1000PF	2
C309	5359-3925851	C,FILM 50V 3900PF	2
C335	5359-6825851	C,FILM 50V 6800PF	2
C311	5359-5035851	C,FILM 50V 0.05UF	2
C522	5354-104593	C,FILM 50V 0.1UF	2
C605	5345-106C041	C,ELEC 16V 10UF	2
C607	5345-476B041	C,ELEC 10V 47UF	2
C609	5345-476B041	C,ELEC 10V 47UF	1
C405	5345-476B041	C,ELEC 10V 47UF	1
C215	5345-227B041	C,ELEC 10V 220UF	4
C518	5345-476D041	C,ELEC 25V 47UF	2
C515	5345-107D041	C,ELEC 25V 100UF	8
C101	C137		
C213	C227		
C228	C229		
C409	5345-474F041	C,ELEC 50V 0.47UF	1
C350	5345-335F041	C,ELEC 50V 3.3UF	1
C338	5345-475F041	C,ELEC 50V 4.7UF	2
C104	5345-106F041	C,ELEC 50V 10UF	4
C339	5345-227A041	C,ELEC 6.3V 220UF	1
C303	5345-227B041	C,ELEC 10V 220UF	4
C305	C307		
C308	5345-227C041	C,ELEC 16V 220UF	6
C321	C323		
C324	C514		
C301	5345-477C041	C,ELEC 16V 470UF	2
C507	5345-228C041	C,ELEC 16V 2200UF UTCS	2
C504	5345-107D041	C,ELEC 25V 100UF	2
C502	5345-228D041	C,ELEC 25V 2200UF	2
C205	5342-105F0651	C,ELEC 50V 1UF	2
C121	5345-226D041	C,ELEC 25V 22UF	1
C111	5345-476C041	C,ELEC 16V 47UF	1
C112	5345-475D041	C,ELEC 25V 4.7UF	1
C126	5345-105F041	C,ELEC 50V 1UF	1
C519	5345-477A041	C,ELEC 6.3V 470UF	2
C511	5345-108B041	C,ELEC 10V 1000UF	2

HD500

SYMBOL	PARTS NO	DESCRIPTION	QTY
R192	5134-474J25P	R,CARBON 470K 5% 1/4W	1
R146	5134-564J25P	R,CARBON 560K 5% 1/4W	3
R147	5134-824J25P	R,CARBON 820K 5% 1/4W	1
R156	5134-105J25P	R,CARBON 1.0M 5% 1/4W	3
R157	5134-115J25P	R,CARBON 1.1M 5% 1/4W	1
R150	5134-225J25P	R,CARBON 2.2M 5% 1/4W	1
R240	5102-1R5579	R,FUSE 1.5H 5% 1/4W	1
R343	5102-4R74173	R,FUSE 4.7H 5% 1/4W	4
R346			
R365	5102-1004173	R,FUSE 10H 5% 1/4W	2
R707	5102-1814173	R,FUSE 180H 5% 1/4W	2
R623	5102-2214173	R,FUSE 220H 5% 1/4W	1
R501	5102-4714173	R,FUSE 470H 5% 1/4W	5
R504			
R303	5102-6814173	R,FUSE 680H 5% 1/4W	5
R306			
R387			
R508			
R184			
C524	42019575	C,CERAMIC 500V 0.01UF	1
C102	5361-473ZF	C,CERAMIC 50V 0.047UF	11
C132	C131		
C219	C134		
C499	C401		
C226	5361-103ZF	C,CERAMIC 50V 0.01UF	1
C139	5361-473ZF	C,CERAMIC 50V 0.047UF	3
C113	5361-100DLS	C,CERAMIC 50V 10PF	2
C110	5361-330KSL	C,CERAMIC 50V 33PF	1
C109	5361-101KSL	C,CERAMIC 50V 100PF	3
C408	5361-151KSL	C,CERAMIC 50V 150PF	1
C105	5361-391KSL	C,CERAMIC 50V 390PF	3
C402	5361-330KSL	C,CERAMIC 50V 33PF	2
C217	5361-101KSL	C,CERAMIC 50V 100PF	1
C207	5361-151KSL	C,CERAMIC 50V 150PF	2
C142	5361-151KSL	C,CERAMIC 50V 150PF	1
C225	5361-221KSL	C,CERAMIC 50V 220PF	1
C235	5361-220KSL	C,CERAMIC 50V 22PF	2
C211	5353-221535	C,MICA 50V 220PF	1
C128	5361-223N913	C,CERAMIC 16V 0.022UF	6
C135			
C521	5354-102JHM	C,FILM 50V 1000PF 5%	2
C221	5354-122JHM	C,FILM 50V 1200PF 5%	2
C208	5354-162JHM	C,FILM 50V 1500PF 5%	1
C220	5354-222JHM	C,FILM 50V 2200PF 5%	2
C201	5354-332JHM	C,FILM 50V 3300PF 5%	3

HD500

SYMBOL		PARTS NO	DESCRIPTION	QTY
C124	C125	5134-227C041	C,ELEC 16V 220UF	5
C701	C702			
C506	C509	5134-108C041	C,ELEC 16V 1000UF	3
C503		5134-228C041	C,ELEC 16V 2200UF	1
C230	C231	5134-227E041	C,ELEC 35V 220UF	2
C238				
C315	C316	5134-335F041	C,ELEC 50V 3.3UF	1
C318	C317	5134-476C041	C,ELEC 16V 47UF	8
C329	C327			
	C330			

REPLACEMENT PARTS LIST

(FOR CANADA (A) MODEL)

Note: The components identified by Δ mark or with the symbol Nos. shaded are critical for safety. Replace only with parts Number specified.

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
D202	D204	5631-1S2473 DIODE,SI.1S2473	29
D207	D301		
D208	D304		
D302	D304		
D309	D401		
D402	D403		
D510	D603		
D605	D606		
D609		36050024 DIODE BARICAP SVC-333	1
D607		36803003 DIODE,PHOTO PH302	1
Δ D506		5632-1S2473 DIODE,SI.1S2473	1
Δ D509		5633-R05000 DIODE,ZENER R05-400V	1
Δ D507		5633-R05000 DIODE,ZENER R05-400V	1
Δ D502		5633-R05000 DIODE,ZENER R05-400V	1
Δ D501		5633-R05000 DIODE,ZENER R05-400V	1
Δ D500		5633-R05000 DIODE,ZENER R05-400V	1
D601		36904292 LED	1
D602		36904293 LED UNIT SEL 9603-04	1
D311		5635-HZ6A-1L DIODE HZ6A-1L	1
D305	D307	5635-HZ9A-1L DIODE HZ9A-1L	1
D308			4
Δ D503		5635-HZ6A-1L DIODE HZ6A-1L	1
Δ D504		5635-HZ6A-1L DIODE HZ6A-1L	1
***	TRANSFORMERS	***	
45006177		TRANS. POWER	1
***	VARIABLE RESISTORS	***	
VR701		41950535 VR,5K	1
VR104		41951151 R,VARIABLE 33K,B	1
VR103		41951154 F,VARIABLE 100K,B	1
VR101		41951203 R,VARIABLE 33K	1
VR102		41951210 R,VARIABLE 470K	1
***	RELAYS & SWITCHES	***	
S601	S602	65904469 MOMENTARY SW	11
S604	S605		
S607	S608		
S610	S611		
B068		65907061 SWITCH	1
B070		65907081 SWITCH,LEAF	1
		65911120 SW,LEVER,POWER S0L01P	1
***	COILS & FILTERS	***	
L601		60920003 COIL,DETECTOR	1
L101		610E2074 COIL FILTER 100KA,AT	1
L201		61904473 VCO OSC COIL	1
CF402		61919077 CERAMIC FILTER 455KQ1	1

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
IC601	***	***	1
IC102	IC104	37101203 IC UPC1473HA	5
IC105	IC106	37101241 IC BA4558	4
IC204	IC206	5652-M5218L IC M5218L	1
IC701		37903201 IC BA4560-D	1
IC101		37904033 MOS UPD4011BC(ESD)	1
IC304			
IC201		37951041 IC MOS YM-3531(ESD)	1
IC203		37951042 IC MOS HM6116P-4(ESD)	1
IC202		37951044 IC MOS YM-2201FK(ESD)	1
IC301		37951047 IC PCM53JPV-2	1
IC401		37951048 IC MOS UPD7508HC-046(ESD)	1
IC402		37951049 IC MOS M50117F	1
IC302		37951109 IC HD14053BP	2
***	TRANSISTORS	***	
TR107	TR112	35025517 TR,2S89744 G	7
TR209	TR211		
TR504			
TR303	TR307	5611-999(F) TR,2SA999F	4
TR308			
TR104	TR105	35904408 TR,2SA1175 H	15
TR317	TR401		
TR602	TR603		
TR605	TR606		
TR608	TR609		
TR101	TR102	5613-635(B) TR 2SC535B	2
TR301	TR302	5613-2320(F) TR 2SC2320F	8
TR306	TR309		
TR311	TR312		
TR103	TR108	35950908 TR,2SC2785 H	15
TR110	TR113		
TR115	TR116		
TR201	TR202		
TR315	TR316		
TR106	TR111		
TR206	TR208	35962617 TR,2SD 794 Q	10
TR501	TR503		
TR506			
***	DIODES	***	
D101	D102	5631-1S2473 DIODE,SI.1S2473	29
D104	D105		
D107	D108		

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
CF401	61919078	CERALOCK 4MHZ	1
***	PCB ASSYS	***	
	87868501	MAIN PCB FULL ASSY	1
***	ELECTRICAL PARTS & MISCELLANEOUS PARTS	***	
X201	64920183	XTAL 8.6436MHZ	1
A	70804014	POWER CORD (US)	1
P301	70905629	PIN JACK 2P	1
P702	70905648	JACK, HEAD PHONE	1
	71905211	TERMINAL, GROUND	1
B038	79710004	PICKUP KSS-121B	1
B045	79752083	MOTOR	1
B046	79752084	MOTOR	1
	79799202	COVER CAPACITOR	1
	79799290	REMOTE CONT. UNIT	1
***	APPEARANCE PARTS	***	
A071	18290731	FOOT, RUBBER (H9.0)	4
A036	18291091	CLAMPER, WIRE L94 WHITE	1
B042	18293241	WIRE CLAMPER #2271	1
A037	18293961	MAGNET B	1
	18301215	CHASSIS BASE (UL)	1
A001	18358541	CABINET	1
B036	18409593	RACK ASSY	1
B040	18409662	HOLDER, CATCH	1
B025	18409672	GEAR A	1
B026	18409681	GEAR B	1
B027	18409692	MOTOR PINION	1
B039	18410181	HOLDER, MAGNET B	1
A024	18410281	BASE BUTTON	1
B047	18410381	LO GEAR ASSY (2)	1
B034	18530132	SPRING CENTER	1
B043	18532112	YOKE	1
B028	18532142	RAIL	1
B037	18533593	T.T BASE B ASSY	2
A023	18534031	SPRING, COIL	1
B048	18534071	BASE-CLAMPER ASSY	3
B049	18534092	CLAMPER ASSY	1
B041	18610291	PLATE	1
A039	18610611	RUBBER	1
A005	18721321	MODEL NO. PLATE	1
A080	18721531	ORNAMENTAL PLATE (H/K)	1
	88868641	PANEL FRONT S, ASSY	1
	18927501	CASE BATTERY	1

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
***	KNOBS & PUSH BUTTONS	***	
A067	1660-00401	BUTTON POWER ASSY	1
A020	1662-21201VN	FUNC. BUTTON (L)	1
A021	1662-21101VN	FUNC. BUTTON (S)	6
A015	1662-05401VN	BUTTON PUSH	3
A070	2601-7149	SHAFT	3
A003	18477001	KNOB VR ASSY	1
A019	18477031	BUTTON EJECT (H/K)	1
***	PRINTED & PACKING MATERIALS	***	
	18813521	CARTON BOX	1
	78924351	INSTRUCTION BOOKLET	1
***	MECHANICAL PARTS	***	
B018	18291091	CLAMPER,WIRE L94 WHITE	5
B008	18293681	PWB HINGE	2
B019	18293751	BUSH L100 UL	1
B009	18409522	TABLE ASSY	1
B006	18409613	GUIDE	1
B007	18409623	GUIDE	1
B004	18409872	ROLLER ASSY	4
B002	18532174	SPRING	3
B003	18532181	CATCH,CUTION	4
B033	18532231	SPRING	1
B044	18532283	SPRING	1
B501	18533031	SCREW B	1
B020	18533062	TABLE ROCK A	1
B021	18533071	TABLE ROCK B	1
B022	18533081	TABLE LIMITER	1
B005	18534101	SPRING	1
B001	18610093	CUSHION	4
B023	18610341	GUIDE READ	1
B029	18610421	MAGNET RUBBER	1
B030	18610431	STOPPER CUSHION	2
B031	18851081	E.WASHER DIA 4	1
B502	18852291	SCREW,SPECIAL	2
B035	24851801	RIVET,PUSH	1
PA01	87868101	SERVO PWB FULL ASSY	1
***	RESISTORS	***	
A01A1	R1A2	R19A	5102-4B7473 R-FUSE 1/4W 5%
R19B			

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
R619	5134-150J25P	R-CARBON 15H 5% 1/4W	1
R141	5134-220J25P	R-CARBON 22H 5% 1/4W	1
R617	5134-270J25P	R-CARBON 27H 5% 1/4W	2
R226	5134-470J25P	R-CARBON 47H 5% 1/4W	3
R121	P168	R201	6
R349	R350	R506	8
R601	R602	R603	1
R604	R605	R606	9
R607	R608		7
R113	R323	R324	1
R337	R338	R347	9
R348	R389	R390	7
R127	R209	R248	
R610	R612	R614	
R616			
R118	R183	R319	1
R179	R374	R624	6
R320	R316	R392	3
R315	R175	R181	7
R111	R334	R335	
R333			
R336			
R130			
R176	R220	R246	3
R152	R211	R223	6
R117	R313	R314	1
R239	R108	R339	6
R107	R341	R342	6
R340	R124	R133	16
R185	R186	R188	
R199	R208	R229	
R245	R317	R318	
R321	R322	R407	
R507			
R196	R391		2
R114	R115		2
R100	R100	R101	13
R109	R139	R214	
R216	R217	R301	
R325	R326	R327	
R328	R330	R331	4
R329			
R332	R102	R112	36
R108	R136	R142	
R119	R149	R163	
R165	R170	R171	
R173	R178	R189	
R194	R195	R202	

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
R227	5134-103J25P	R-CARBON 10K 5% 1/4W	38
R242	R241		
R249	R250		
R367	R368		
R384	R397		
R406	R418		
R611	R613		
R701	R702		
R703	R704		
R174			
R177	R251		
R705	R706		
R129			
R10A	R132		
R166	R167		
R206	R207		
R125	R210		
R219	R221		
R224	R238		
R105	R106		
R187	R386		
R123	R151		
R158	R172		
R191			
R116	R140		
R154	R162		
R203	R237		
R370	R410		
R143	R182		
R234	R247		
R138	R204		
R126	R135		
R164	R169		
R205	R215		
R231	R232		
R371	R372		
R401	R402		
R405	R408		
R415	R416		
R145	R225		
R122	R197		
R373	R621		
R258			
R131			
R243			
R159			
R192			
R146			
R147			
R156			
R157			
R150			
R240			
R343			
R346			
R365			
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R382		
R345	R345		
R344	R344		
R366	R366		
R233	R233		
R381	R381		
R236	R236		
R382	R38		

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
R707	5102-1814713	R,FUSE 180H 5% 1/4W	2
R623	5102-2214713	R,FUSE 320H 5% 1/4W	1
R501	5102-4714713	R,FUSE 470H 5% 1/4W	5
R504			
R303	5102-6814713	R,FUSE 680H 5% 1/4W	5
R306			
R387			
R508	5102-1024713	R,FUSE 1.0K 5% 1/4W	2
R184	40933068	R,METAL 120H 5% 2W	1
	*** CAPACITORS ***		
C524	42019575	C,CERAMIC 500V 0.01UF	1
C102	5361-473ZF	C,CERAMIC 50V 0.047UF	11
C132			
C219	C401		
C499			
C226	5361-103ZF	C,CERAMIC 50V 0.01UF	1
C139	5361-473ZF	C,CERAMIC 50V 0.047UF	3
C113	5361-100DSL	C,CERAMIC 50V 10PF	2
C110	5361-330KSL	C,CERAMIC 50V 33PF	1
C109	5361-101KSL	C,CERAMIC 50V 100PF	3
C408	5361-151KSL	C,CERAMIC 50V 150PF	1
C105	5361-391KSL	C,CERAMIC 50V 390PF	3
C402	5361-330KSL	C,CERAMIC 50V 33PF	2
C217	5361-101JCH	C,CERAMIC 50V 100PF	1
C207	5361-151JCH	C,CERAMIC 50V 150PF	2
C142	5361-151KSL	C,CERAMIC 50V 150PF	1
C225	5361-221KSL	C,CERAMIC 50V 220PF	1
C235	5361-220JCH	C,CERAMIC 50V 22PF	2
C211	5353-221535	C,MICA 50V 220PF	1
C128	5361-223N913	C,CERAMIC 16V 0.022UF	6
C135			
C210	5354-102J1HM	C,FILM 50V 1000PF 5%	2
C221	5354-122J1HM	C,FILM 50V 1200PF 5%	2
C208	5354-182J1HM	C,FILM 50V 1500PF 5%	1
C220	5354-222J1HM	C,FILM 50V 2200PF 5%	2
C201	5354-332J1HM	C,FILM 50V 3300PF 5%	3
C115	5354-822J1HM	C,FILM 50V 8200PF 5%	1
C118	5354-104J1HM	C,FILM 50V 0.010UF 5%	7
C212			
C610			
C107	5354-223J1HM	C,FILM 50V 0.022UF 5%	2
C604	5354-333J1HM	C,FILM 50V 0.033UF 5%	1
C103	5354-104J1HM	C,FILM 50V 0.10UF 5%	2
C1	42910036	C,CERAMIC 400V 4700PF	1
C108	4297F729	C,FILM 50V 0.22 UF 5%	2
C117	4297F731	C,FILM 50V 0.33 UF 5%	1
C313	5359-3315851	C,FILM 50V 330PF	2

HD500 (A)

SYMBOL	PARTS NO	DESCRIPTION	QTY
C319	5359-6815851	C,FILM 50V 680PF	2
C325	5359-1025851	C,FILM 50V 1000PF	2
C309	5359-3925851	C,FILM 50V 3900PF	2
C335	5359-6825851	C,FILM 50V 6800PF	2
C311	5859-5035851	C,FILM 50V 0.05UF	2
C522	5354-104593	C,FILM 50V 0.1UF	2
C605	5345-106C041	C,ELEC 16V 10UF	2
C607	5345-4768041	C,ELEC 10V 47UF	2
C405	5345-4768041	C,ELEC 10V 47UF	1
C215	5345-2278041	C,ELEC 10V 220UF	4
C518			
C515	5345-4760041	C,ELEC 25V 47UF	2
C101	5345-107D041	C,ELEC 25V 100UF	8
C213			
C228			
C409	5345-474F041	C,ELEC 50V 0.47UF	1
C350	5345-335F041	C,ELEC 50V 3.3UF	1
C338	5345-475F041	C,ELEC 50V 4.7UF	2
C104	5345-108F041	C,ELEC 50V 10UF	4
C339			
C303	5345-227A041	C,ELEC 6.3V 220UF	1
C305	5345-227B041	C,ELEC 10V 220UF	4
C308			
C321	5345-227C041	C,ELEC 16V 220UF	6
C324			
C301	5345-477C041	C,ELEC 16V 470UF	2
C507	5345-228C041	C,ELEC 16V 2200UF UTCS	2
C504	5345-107D041	C,ELEC 25V 100UF	2
C501	5345-228D041	C,ELEC 25V 2200UF	2
C205	5342-105F0951	C,ELEC 50V 1UF	2
C121	5345-228D041	C,ELEC 25V 22UF	1
C111	5345-476C041	C,ELEC 16V 47UF	1
C112	5345-475D041	C,ELEC 25V 4.7UF	1
C126	5345-105F041	C,ELEC 50V 1UF	1
C519	5345-477A041	C,ELEC 6.3V 470UF	2
C511	5345-108B041	C,ELEC 10V 1000UF	2
C124	5134-227C041	C,ELEC 16V 220UF	5
C701			
C509	5134-108C041	C,ELEC 16V 1000UF	3
C503	5134-228C041	C,ELEC 16V 2200UF	1
C230	5134-227E041	C,ELEC 35V 220UF	2
C238			
C315	5345-335F041	C,ELEC 50V 3.3UF	1
C318	5345-476C0951	C,ELEC 16V 47UF	8
C329			
C316			
C327			
C330			

REPLACEMENT PARTS LIST

(FOR GENERAL EW MODEL)

Note: The components identified by  mark or with the symbol Nos. shaded are critical for safety. Replace only with parts Number specified.

HD500 (EW)				
SYMBOL	PARTS NO	DESCRIPTION	QTY	
IC601	***	ICS ***	1	
IC102	IC104	37101203 IC UPC1473HA	1	
IC105	IC106	37101241 IC BA4558	5	
IC204	IC206	5682-M5218L IC M5218L	4	
IC701		37903201 IC BA4560-D	1	
IC101		37904033 MOS UPD4011BC(ESD)	1	
IC304		37951041 IC MOS YM-3531(ESD)	1	
IC201		37951042 IC MOS HM6116P-4(ESD)	1	
IC202		37951044 IC MOS YM-2201FK(ESD)	1	
IC301		37951047 IC PCM53JPV-2	1	
IC401		37951048 IC MOS UPD7508HC-046(ESD)	1	
IC402		37951049 IC MOS M50117P	1	
IC302		37951109 IC HD14053BP	2	
TR107	***	TRANSISTORS ***	7	
TR209	TR207	35025517 TR,2SB744 Q	7	
TR504	TR502			
TR303	TR307	5611-999(F) TR,2SA999F	4	
TR308				
TR104	TR113	35904408 TR,2SA1175 H	15	
TR317	TR601			
TR602	TR604			
TR605	TR607			
TR608	TR610			
TR101	TR102	5613-535(B) TR 2SC535B	2	
TR301	TR302	5613-2320(F) TR 2SC2320F	8	
TR306	TR309			
TR311	TR312			
TR103	TR108	35950908 TR,2SC2785 H	15	
TR110	TR114			
TR115	TR118			
TR201	TR202			
TR315	TR316			
TR106	TR111	35962617 TR,2SD 794 Q	10	
TR206	TR210			
TR501	TR503			
TR506				
D101	***	DIODES ***	29	
D104	D103	5631-1S2473 DIODE,SI-1S2473	1	
D107	D106			
	D108			
	D201			

HD500 (EW)				
SYMBOL	PARTS NO	DESCRIPTION	QTY	
D202	D203	D204	29	
D207	D208	D301		
D302	D303	D304		
D309	D310	D401		
D402	D403	D404		
D510	D603	D604		
D605	D606			
D607				
D508				
D509				
D507	D508			
D502				
D504				
D601	36904292	LED	1	
D602	36904293	LED UNIT SEL 9603-04	1	
D311	5685-HZ6A-1L	DIODE HZ6A-1L	1	
D305	5685-HZ9A-1L	DIODE HZ9A-1L	4	
D308				
D503	D504			
D505				
D506				
D507				
D508				
D509				
D510				
D511				
D512				
D513				
D514				
D515				
D516				
D517				
D518				
D519				
D520				
D521				
D522				
D523				
D524				
D525				
D526				
D527				
D528				
D529				
D530				
D531				
D532				
D533				
D534				
D535				
D536				
D537				
D538				
D539				
D540				
D541				
D542				
D543				
D544				
D545				
D546				
D547				
D548				
D549				
D550				
D551				
D552				
D553				
D554				
D555				
D556				
D557				
D558				
D559				
D560				
D561				
D562				
D563				
D564				
D565				
D566				
D567				
D568				
D569				
D570				
D571				
D572				
D573				
D574				
D575				
D576				
D577				
D578				
D579				
D580				
D581				
D582				
D583				
D584				
D585				
D586				
D587				
D588				
D589				
D590				
D591				
D592				
D593				
D594				
D595				
D596				
D597				
D598				
D599				
D600				
D601				
D602				
D603				
D604				
D605				
D606				
D607				
D608				
D609				
D610				
D611				
D612				
D613				
D614				
D615				
D616				
D617				
D618				
D619				
D620				
D621				
D622				
D623				
D624				
D625				
D626				
D627				
D628				
D629				
D630				
D631				
D632				
D633				
D634				
D635				
D636				
D637				
D638				
D639				
D640				
D641				
D642				
D643				
D644				
D645				
D646				
D647				
D648				
D649				
D650				
D651				
D652				
D653				
D654				
D655				
D656				
D657				
D658				
D659				
D660				
D661				
D662				
D663				
D664				
D665				
D666				
D667				
D668				
D669				
D670				
D671				
D672				
D673				
D674				
D675				
D676				
D677				
D678				
D679				
D680				
D681				
D682				
D683				
D684				
D685				
D686				
D687				
D688				
D689				
D690				
D691				
D692				
D693				
D694				
D695				
D696				
D697				
D698				
D699				
D700				
D701				
D702				
D703				
D704				
D705				
D706				
D707				
D708				
D709				
D710				
D711				
D712				
D713				
D714				
D715				
D716				
D717				
D718				
D719				
D720				
D721				
D722				
D723				
D724				
D725				
D726				
D727				
D728				
D729				
D730				
D731				
D732				
D733				
D734				
D735				
D736				
D737				
D738				
D739				
D740				
D741				
D742				
D743				
D744				
D745				
D746				
D747				
D748				
D749				
D750				
D751				
D752				
D753				
D754				
D755				
D756				
D757				
D758				
D759				
D760				
D761				
D762				
D763				
D764				
D765				
D766				
D767				
D768				
D769				
D770				
D771				
D772				
D773				
D774				
D775				
D776				
D777				
D778				
D779				
D780				
D781				
D782				
D783				
D784				
D785				
D786				
D787				
D788				
D789				
D790				
D791				
D792				
D793				
D794				
D795				
D796				
D797				
D798				
D799				
D800				
D801				
D802				
D803				
D804				
D805				
D806				
D807				
D808				
D809				
D810				
D811				
D812				
D813				
D814				
D815				
D816				
D817				
D818				
D819				
D820				
D821				
D822				
D823				
D824				
D825				
D826				
D827				
D828				
D829				
D830				
D831				
D832				
D833				
D834				
D835				
D836				
D837				
D838				
D839				
D840				
D841				
D842				
D843				
D844				
D845				
D846				
D847				
D848				
D849				
D850				
D851				
D852				
D853				
D854				
D855				
D856				
D857				
D858				
D859				
D860				
D861				
D862				
D863				
D864				
D865				
D866				
D867				
D868				
D869				
D870				
D871				
D872				
D873				
D874				
D875				
D876				
D877				
D878				
D879				
D880				
D881				
D882				
D883				
D884				
D885				
D886				
D887				
D888				
D889				
D890				
D891				
D892				
D893				
D894				
D895				
D896				
D897				
D898				
D899				
D900				
D901				
D902				
D903				
D904				
D905				
D906				
D907				
D908				
D909				
D910				
D911				
D912				
D913				
D914				
D915				
D916				
D917				
D918				
D919				
D920				
D921				
D922				
D923				
D924				
D9				

HD500 (EW)

SYMBOL	PARTS NO	DESCRIPTION	QTY
CF402	61919077	CERAMIC FILTER 455K01	1
CF401	61919078	CERALOCK 4MHZ	1
***	PCB ASSYS	***	
	87868501	MAIN PCB FULL-ASSY	1
***	ELECTRICAL PARTS & MISCELLANEOUS PARTS		***
X201	64920183	XTAL 8-6436MHZ	1
P301	70905629	PIN JACK 2P	1
P702	70905648	JACK, HEAD PHONE	1
	71905211	TERMINAL-GROUND	1
B038	79710004	PICKUP KSS-121B	1
	79759186	POWER CORD	1
B045	79752083	MOTOR	1
B046	79752084	MOTOR	1
	79799202	COVER CAPACITOR	1
	79799290	REMOTE CONT. UNIT	1
***	APPEARANCE PARTS	***	
A071	18290731	FOOT, RUBBER (H9.0)	4
A036	18291091	CLAMPER WIRE L94 WHITE	2
B042	18292501	CLAMPER WIRE	1
A037	18293961	MAGNET B	1
	18301215	CHASSIS BASE (UL)	1
A001	18358541	CABINET	1
B036	18409593	RACK ASSY	1
B040	18409662	HOLDER, CATCH	1
B025	18409672	GEAR A	1
B026	18409681	GEAR B	1
B027	18409692	MOTOR PINION	1
B039	18410181	HOLDER MAGNET B	1
A024	18410281	BASE BUTTON	1
B047	18410381	LO GEAR ASSY (2)	1
B034	18530132	SPRING CENTER	1
B043	18532112	YOKE	1
B028	18532142	RAIL	2
B037	18533593	T-T BASE B ASSY	1
A023	18534031	SPRING COIL	3
B048	18534071	BASE-CLAMPER ASSY	1
B049	18534092	CLAMPER ASSY	1
B041	18610611	RUBBER	1
A005	18721331	ORNAMENTAL PLATE (H/K)	1
A080	88868641	PANEL FRONT S, ASSY	1
	18927501	CASE BATTERY	1

HD500 (EW)

SYMBOL	PARTS NO	DESCRIPTION	QTY
***	KNBS & PUSH BUTTONS	***	
A067	1660-00401	BUTTON POWER ASSY	1
A020	1662-2101VN	FUNC. BUTTON (L)	1
A021	1662-2101VN	FUNC. BUTTON (S)	6
A015	1662-0540VN	BUTTON PUSH	3
A070	2601-7149	SHAFT	3
A003	18477001	KNOB VR ASSY	1
A019	18477031	BUTTON EJECT (H/K)	1
***	PRINTED & PACKING MATERIALS	***	
	18813521	CARTON BOX	1
	78924351	INSTRUCTION BOOKLET	1
***	MECHANICAL PARTS	***	
B018	18291091	CLAMPER WIRE L94 WHITE	5
B008	18293681	PWB HINGE	2
B019	18293751	BUSH L100 UL	1
B009	18409522	TABLE ASSY	1
B006	18409613	GUIDE	1
B007	18409623	GUIDE	1
B004	18409872	ROLLER ASSY	4
B002	18532174	SPRING	3
B003	18532181	CATCH-CUTION	4
B033	18532231	SPRING	1
B044	18532283	SPRING	1
B501	18533031	SCREW B	1
B020	18533062	TABLE ROCK A	1
B021	18533071	TABLE ROCK B	1
B022	18533081	TABLE LIMITER	1
B005	18534101	SPRING	1
B001	18610093	CUSHION	4
B023	18610341	GUIDE READ	1
B029	18610421	MAGNET RUBBER	1
B030	18610431	STOPPER CUSHION	2
PA01	87868101	SERVO PWB FULL ASSY	1
***	RESISTORS	***	
A R514	5102-47571	R, FUSE 1.7H 1W 5%	1
A R59A	R19B R260 R261	5102-474713 R, FUSE 4.7H 1/4W 5%	6
R263			
R619	5134-150J25P	R, CARBON 15H 5% 1/4W	1
R141	R160 R622	5134-220J25P R, CARBON 22H 5% 1/4W	3
R510	R511 R512 R513	5102-2R74713 R, FUSE 2.7H 5% 1/4W	4

S	SYMBOL	PARTS NO	DESCRIPTION	QTY
R367	R368	5134-103J25P	R-CARBON 10K 5% 1/4W	38
R384	R397	R383		
R406	R418	R404		
R611	R613	R609		
R701	R702	R615		
R703	R704			
R174				
R177	R251	5134-113J25P	R-CARBON 11K 5% 1/4W	2
R705	R706	5134-123J25P	R-CARBON 12K 5% 1/4W	1
R129		5134-153J25P	R-CARBON 15K 5% 1/4W	5
R10A	R132	5134-183J25P	R-CARBON 18K 5% 1/4W	1
R166	R167	5134-203J25P	R-CARBON 20K 5% 1/4W	8
R206	R207			
R125	R210	5134-223J25P	R-CARBON 22K 5% 1/4W	8
R219	R221			
R224	R238			
R105	R106	5134-273J25P	R-CARBON 27K 5% 1/4W	3
R187	R386	5134-333J25P	R-CARBON 33K 5% 1/4W	7
R123	R151	5134-393J25P	R-CARBON 39K 5% 1/4W	11
R158	R172			
R191				
R116	R140	5134-473J25P	R-CARBON 47K 5% 1/4W	2
R154	R162			
R203	R237			
R370	R410			
R143	R182	5134-563J25P	R-CARBON 56K 5% 1/4W	2
R234	R247	5134-683J25P	R-CARBON 68K 5% 1/4W	2
R138	R204	5134-823J25P	R-CARBON 82K 5% 1/4W	3
R126	R135	5134-104J25P	R-CARBON 100K 5% 1/4W	24
R164	R169			
R205	R215			
R231	R232			
R371	R372			
R401	R402			
R405	R408			
R415	R416			
R145	R225	5134-124J25P	R-CARBON 120K 5% 1/4W	2
R122	R197	5134-154J25P	R-CARBON 150K 5% 1/4W	5
R373	R621			
R258		5134-224J25P	R-CARBON 220K 5% 1/4W	1
R131		5134-244J25P	R-CARBON 240K 5% 1/4W	1
R243		5134-364J25P	R-CARBON 360K 5% 1/4W	1
R159		5134-394J25P	R-CARBON 390K 5% 1/4W	1
R192		5134-474J25P	R-CARBON 470K 5% 1/4W	1
R146		5134-564J25P	R-CARBON 560K 5% 1/4W	1
R147	R233	5134-684J25P	R-CARBON 820K 5% 1/4W	3
R156	R381	5134-105J25P	R-CARBON 1.0M 5% 1/4W	3
R157		5134-115J25P	R-CARBON 1.1M 5% 1/4W	1
R150		5134-225J25P	R-CARBON 2.2M 5% 1/4W	1
R240		5102-1R5579	R-FUSE 1.5H 5% 1/4W	1
R343	R344	5102-4R74713	R-FUSE 4.7H 5% 1/4W	4
R346				
R365	R366	5102-1004713	R-FUSE 10H 5% 1/4W	2
R707	R708	5102-1804713	R-FUSE 180H 5% 1/4W	2
R623		5102-2214713	R-FUSE 220H 5% 1/4W	1

HD500 (EW)

SYMBOL	PARTS NO	DESCRIPTION	QTY
C309	5359-3925851	C.FILM 50V 3900PF	2
C335	5359-6825851	C.FILM 50V 6800PF	2
C311	5359-5035851	C.FILM 50V 0.05UF	2
C522	5345-1045831	C.FILM 50V 0.1UF	2
C608	5345-106C041	C.ELEC 16V 10UF	2
C607	5345-4768041	C.ELEC 10V 47UF	2
C405	5345-4768041	C.ELEC 10V 47UF	1
C215	5345-2278041	C.ELEC 10V 220UF	4
C518	5345-4760041	C.ELEC 25V 47UF	2
C515	5345-107D041	C.ELEC 25V 100UF	8
C101	5345-107D041	C.ELEC 25V 100UF	8
C213	C137	C.ELEC 25V 100UF	8
C216	C227	C.ELEC 25V 100UF	8
C228	C227	C.ELEC 25V 100UF	8
C409	5345-474F041	C.ELEC 50V 0.47UF	1
C350	5345-395F041	C.ELEC 50V 3.3UF	1
C338	5345-475F041	C.ELEC 50V 4.7UF	2
C104	5345-106F041	C.ELEC 50V 10UF	4
C339	5345-106F041	C.ELEC 50V 10UF	4
C303	5345-227A041	C.ELEC 6.3V 220UF	1
C305	5345-227B041	C.ELEC 10V 220UF	4
C308	5345-227C041	C.ELEC 16V 220UF	6
C321	5345-227C041	C.ELEC 16V 220UF	6
C324	5345-227C041	C.ELEC 16V 220UF	6
C301	5345-477C041	C.ELEC 16V 470UF	2
C507	5345-228C041	C.ELEC 16V 2200UF	2
C504	5345-107D041	C.ELEC 25V 100UF	2
C501	5345-228D041	C.ELEC 25V 2200UF	2
C502	5342-105F0951	C.ELEC 50V 1UF	2
C224	5345-228D041	C.ELEC 50V 1UF	2
C121	5345-228D041	C.ELEC 25V 22UF	1
C111	5345-476C041	C.ELEC 16V 47UF	1
C112	5345-475D041	C.ELEC 25V 4.7UF	1
C126	5345-105F041	C.ELEC 50V 1UF	1
C519	5345-477A041	C.ELEC 6.3V 470UF	2
C511	5345-108B041	C.ELEC 10V 1000UF	2
C124	5134-227C041	C.ELEC 16V 220UF	5
C701	5134-108C041	C.ELEC 16V 1000UF	3
C506	5134-228C041	C.ELEC 16V 2200UF	1
C503	5134-227E041	C.ELEC 35V 220UF	2
C230	5134-227E041	C.ELEC 35V 220UF	2
C231	5134-227E041	C.ELEC 35V 220UF	2
C238	5345-335F041	C.ELEC 50V 3.3UF	1
C315	5345-476C0951	C.ELEC 16V 47UF	8
C318	5345-476C0951	C.ELEC 16V 47UF	8
C327	C317	C.ELEC 16V 47UF	8
C330	C328	C.ELEC 16V 47UF	8
C234	5345-22D0951	C.ELEC 25V 22UF	1

HD500 (EW)

SYMBOL	PARTS NO	DESCRIPTION	QTY
R501	5102-4714713	R.FUSE 470H 5% 1/4W	5
R504	5102-6814713	R.FUSE 680H 5% 1/4W	5
R303	5102-1024713	R.FUSE 1.0K 5% 1/4W	2
R387	40933068	R.METAL 120H 5% 2W	1
R508			
R184			
C524	*** CAPACITORS ***		
C127	42019575	C.CERAMIC 500V 0.01UF	1
C133	5361-473ZF	C.CERAMIC 50V 0.047UF	10
C401			
C602	5361-103ZF	C.CERAMIC 50V 0.01UF	1
C226	5361-473ZF	C.CERAMIC 50V 0.047UF	3
C139	5361-100DSL	C.CERAMIC 50V 10PF	2
C113			
C110	5361-330KSL	C.CERAMIC 50V 33PF	1
C109	5361-101KSL	C.CERAMIC 50V 100PF	3
C408	5361-151KSL	C.CERAMIC 50V 150PF	1
C105	5361-391KSL	C.CERAMIC 50V 390PF	3
C402	5361-330KSL	C.CERAMIC 50V 33PF	2
C217	5361-101JCH	C.CERAMIC 50V 100PF	1
C207	5361-151JCH	C.CERAMIC 50V 150PF	2
C142	5361-151KSL	C.CERAMIC 50V 150PF	1
C225	5361-221KSL	C.CERAMIC 50V 220PF	1
C235	5361-220JCH	C.CERAMIC 50V 22PF	2
C211	5353-221535	C.MICA 50V 220PF	1
C128	5361-223N913	C.CERAMIC 16V 0.022UF	6
C135			
C210	5354-102JHMH	C.FILM 50V 1000PF 5%	2
C221	5354-122JHMH	C.FILM 50V 1200PF 5%	2
C208	5354-152JHMH	C.FILM 50V 1500PF 5%	1
C220	5354-222JHMH	C.FILM 50V 2200PF 5%	2
C201	5354-332JHMH	C.FILM 50V 3300PF 5%	3
C115	5354-822JHMH	C.FILM 50V 8200PF 5%	1
C118	5354-103JHMH	C.FILM 50V 0.010UF 5%	7
C212			
C610			
C107	5354-223JHMH	C.FILM 50V 0.022UF 5%	2
C604	5354-333JHMH	C.FILM 50V 0.033UF 5%	1
C103	5354-104JHMH	C.FILM 50V 0.10UF 5%	2
C1	42910036	C.CERAMIC 400V 4700PF	1
C108	4297F729	C.FILM 50V 0.22 UF 5%	2
C117	4297F731	C.FILM 50V 0.33 UF 5%	1
C313	5359-3315851	C.FILM 50V 330PF	2
C319	5359-6815851	C.FILM 50V 680PF	2
C325	5359-1025851	C.FILM 50V 1000PF	2