

**harman/kardon**

# SUB-TS15

(HKTS 15 SUBWOOFER)

## SERVICE MANUAL



harman/kardon, Inc.  
250 Crossways Park Dr.  
Woodbury, New York 11797

Rev0 2/2007

CONTENTS

BASIC SPECIFICATIONS . . . . . 1

DETAILED SPECIFICATIONS. . . . .2

PACKAGING. . . . . 4

CONTROLS & CONNECTIONS . . . . . 5

SPEAKER CONNECTIONS..... 7

OPERATION.....10

TEST PROCEDURE. . . . .11

UNIT EXPLODED VIEW. . . . . 12

AMPLIFIER EXPLODED VIEW. . . . . 13

BLOCK DIAGRAM . . . . . 14

DETAILED TROUBLESHOOTING.....16

PCB DRAWINGS. . . . . 17

ELECTRICAL PARTS LIST . . . . . 23

SEMICONDUCTOR PINOUTS . . . . . 27

SCHEMATIC DIAGRAMS . . . . . 28

SPECIFICATIONS

Amplifier Power (RMS)	100 Watts
Driver	10" (254mm) woofer, Bass Reflex Enclosure
Inputs	Stereo Line Level, dedicated Subwoofer (LFE) and Speaker Level with gold-plated binding posts
Outputs	Speaker Level with gold-plated binding posts
Frequency Response	35Hz – 120Hz (Filter switch ON) 35Hz – 450Hz (Filter switch OFF)
External Trigger Input Voltage:	3-30 Volts AC/DC
Dimensions (H x W x D)	18-7/8" x 13-3/8" x 13-3/8" (479mm x 340mm x 340mm)
Weight	35.11 lb/15.8kg


Occasional refinements may be made to existing products without notice but will always meet or exceed original specifications unless otherwise stated.

**SUB-TS15 100W Powered Sub/ Plate Amp**

LINE VOLTAGE	Yes/No	Hi/Lo Line	Nom.	Unit	Notes
US 120vac/60Hz	Yes	108-132	120	Vrms	Normal Operation
Parameter	Nonimal Specification	Unit	QA Test Limits	Conditions	Notes
<b>Amp Section</b>					
Type (Class AB, D, other)	AB	n/a	n/a		
Load Impedance (speaker)	4	Ohms	n/a	Nominal	
Rated Output Power	100	Watts	75	50 - 250 Hz, 1 input driven, limiter off	
THD @ Rated Power	0.08	%	0.1	22k filter	
THD @ 1 Watt	0.15	%	0.5	22k filter	
DC Offset	5	mV-DC	30	@ Speaker Outputs	
Damping factor	>100	n/a	30	Measured at amplifier board	Measured at the speaker at speaker output terminals on the amp board.
<b>Input Sensitivity</b>					
Input Frequency	50	Hz	n/a	Nominal Freq.	
Line (L&R) Input	220	mVrms	154 - 308	To Rated Power	Single input driven
SUB (LFE) Input	125	mVrms	87 - 175	To Rated Power	SUB (LFE) input driven only
Speaker/Hi Level Input	2.2	Vrms	1.5 - 3.0	To Rated Power	(20 dB below Line In), Single input driven
<b>Hi Level Max. Input Voltage</b>					
	32	Vrms	30	Nominal Freq., Min. Volume	
<b>Signal to Noise</b>					
SNR-A-Weighted	100	dB	85	relative to rated power	A-Weighting filter
SNR-unweighted	90	dB	80	relative to rated power	22k filter
SNR rel. 1W-unweighted	65	dB	60	relative to 1W Output	22k filter
Residual Noise Floor	1.2	mVrms	3.0	Volume @max, using RMS reading DMM/VOM (or A/P)	
Residual Noise Floor	0.8	mVrms	2.0	Volume @max, w/ A/P Swept Bandpass Measurement (Line freq.+ harmonics)	
<b>Input Impedance</b>					
Line Input (L, R,LFE)	10K	ohms	n/a	Nominal	
Speaker/Hi Level Input	4.7K	ohms	n/a	Nominal	
<b>Filters</b>					
L&R Fixed Low-Pass Filter	170	Hz	150 - 200	@ -6dB ref. 100Hz	2nd order fixed
SUB (LFE) Low pass Filter	270	Hz	240 - 300	@ -3dB ref. 100Hz	2nd order fixed
Subsonic filter (HPF) 3rd Order	28	Hz	22 - 28	@ -3dB ref. 30Hz	3rd order fixed
<b>Limiter</b>					
THD at Max. Output Power	2.0	%	5.0		
<b>Features</b>					
Auto - On -Off Selection Switch	YES		functional		Refer to ATO section
Phase Switch	0-180	deg	functional		
Filter On/Off Switch	YES		functional		
Volume Pot Taper (Lin/Log)	LOG		functional		A Taper
Speaker Out	YES		functional		Binding post connector L&R
2-Color LED power indicator	YES		functional		Blue: On, Amber: Stand-by
Power Switch	YES		functional		
Fuse Holder	YES		functional		
<b>Input Configuration</b>					
Line In (L,R)	YES		functional		Dual RCA jack
SUB (LFE)	YES		functional		RCA jack
Speaker/Hi Level In	YES		functional		Binding post connector L&R
<b>Signal Sensing (ATO)</b>					
Auto-Turn-On (yes/no)	YES		functional	Auto - on selection switch in Auto	
ATO Input test frequency	50	Hz	n/a	Auto - on selection switch in Auto	
ATO Level Line & SUB Input	4.0	mV	2.0 - 6.0	Auto - on selection switch in Auto	
ATO Level Speaker in	40	mV	25 - 55	Auto - on selection switch in Auto	
ATO Turn-on time	5	ms	functional	Amp connected and AC on, then input signal applied	
ATO Turn-OFF Time	15	minutes	10 - 20	Time before muting, after signal is removed	
<b>Power on Delay time</b>					
	3	sec.	functional	AC Power Applied	
<b>Transients/Pops</b>					
ATO Transient	5	mV-peak	10	@ Speaker Outputs	
Turn-on Transient	50	mV-peak	100	@ Speaker Outputs	AC Line cycled from OFF to ON

Parameter	Nonimal Specification	Unit	QA Test Limits	Conditions	Notes
Turn-off Transient	50	mV-peak	100	@ Speaker Outputs	AC Line cycled from ON to OFF
Efficiency					
Stand-by Input Power	10	Watts	12	@ nom. line voltage	Maximum allowable input power under nominal input voltage and frequency, in stand-by mode (HOT or COLD operation).
Power Consumption @ rated power	170	Watts	200	@ nom. line voltage	
					100 Watts @ 4.0 ohms and nominal line voltage
Protection					
Short Circuit Protection	YES		functional	Direct short at output	Amplifier should resume operation after short circuit condition is removed.
Thermal Protection	YES		functional		Any user accessible metal parts should always remain at 65 degree C or less for domestic version or 55 degree C or less for EU version.
DC Offset Protection	YES		functional	DC present at Speaker Out leads	
Primary Fuse Rating					Relay or crowbar (for driver/fire protection),
USA-Domestic (120V)	2.5	Amps	n/a	Type-T or Slo Blo	User-replacable fuse with UL/SEMCO rated holder.

PACKAGE

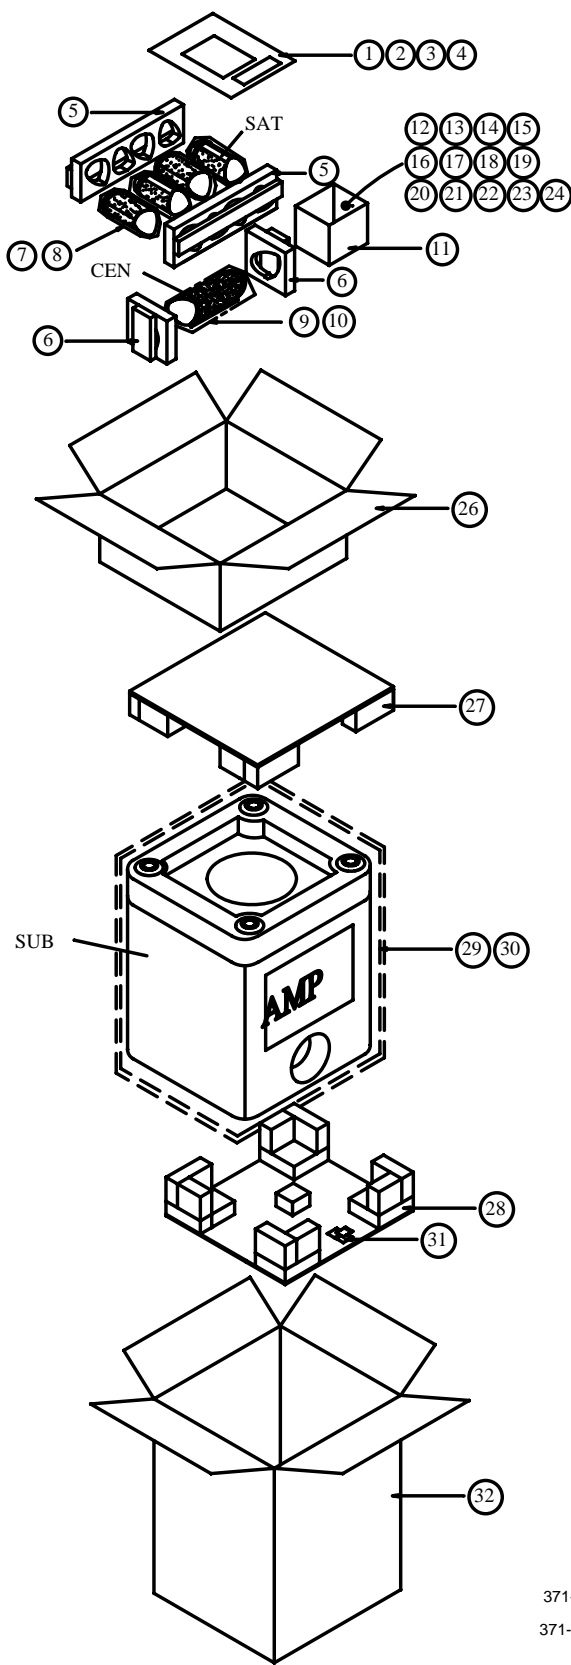


Item	Description	Part Number	Qty
1	Color Label		1.0
2	Warranty Card	405-000-00333-E	1.0
3	Warranty Card	405-000-05033-E	1.0
4	Owner's Manual	406-000-05503-E	1.0
5	Packaging		1.0
6	Packaging		1.0
7	Non-woven Bag		4.0
8	PE Bag		4.0
9	Non-woven Bag		1.0
10	PE Bag		1.0
11	Cardboard		1.0
12	Wall Mounting Bracket	326-ABS-00108-0BAE	4.0
13	Mounting Plate	326-FE-00109-E	4.0
14	Leather Coaster for Sats	336-EVA-05405-0BAE	4.0
15	Metal Bracket (Center)	325-SPCC-05229-0BAE	1.0
16	Screw Bag for CEN Wall Bracket	371-000-05168-E	1.0
17	Terminal Cap	317-PS-00172-0BAE	4.0
18	15ft RCA Signal Cable	370-000-05034-E	1.0
19	Speaker Cable 20ft. (Red)	370-000-05035-E	1.0
20	Speaker Cable 20ft. (Grn)	370-000-05036-E	1.0
21	Speaker Cable 20ft. (Wht)	370-000-05037-E	1.0
22	Speaker Cable 12M (Gry)	370-000-05038-E	1.0
23	Speaker Cable 12M (Blu)	370-000-05039-E	1.0
24	Screw Bag for SAT Wall Bracket	371-000-00360-E	1.0
25	Signal Cable for Trigger	165-54505501-e	1.0
26	Inner Carton for Sat, Ctr	401-000-00118-E	1.0
27	Top Packing	431-000-05919-E	1.0
28	Bottom Packing	431-000-05920-E	1.0
29	Non-woven Bag		1.0
30	PO Bag		1.0
31	Dessicant		2.0
32	Outer Carton	402-000-05679-E	1.0

371-000-05168-E: 2pcs Flat head, 10mm( screw Length ) x 8mm(Screw head Dim.)

371-000-00360-E: 2pcs Round head, 1/4"( screw Length ) x 10.5mm(Screw head Dim.)

## SUB-TS15 SUBWOOFER AMPLIFIER PANEL CONTROLS AND CONNECTIONS

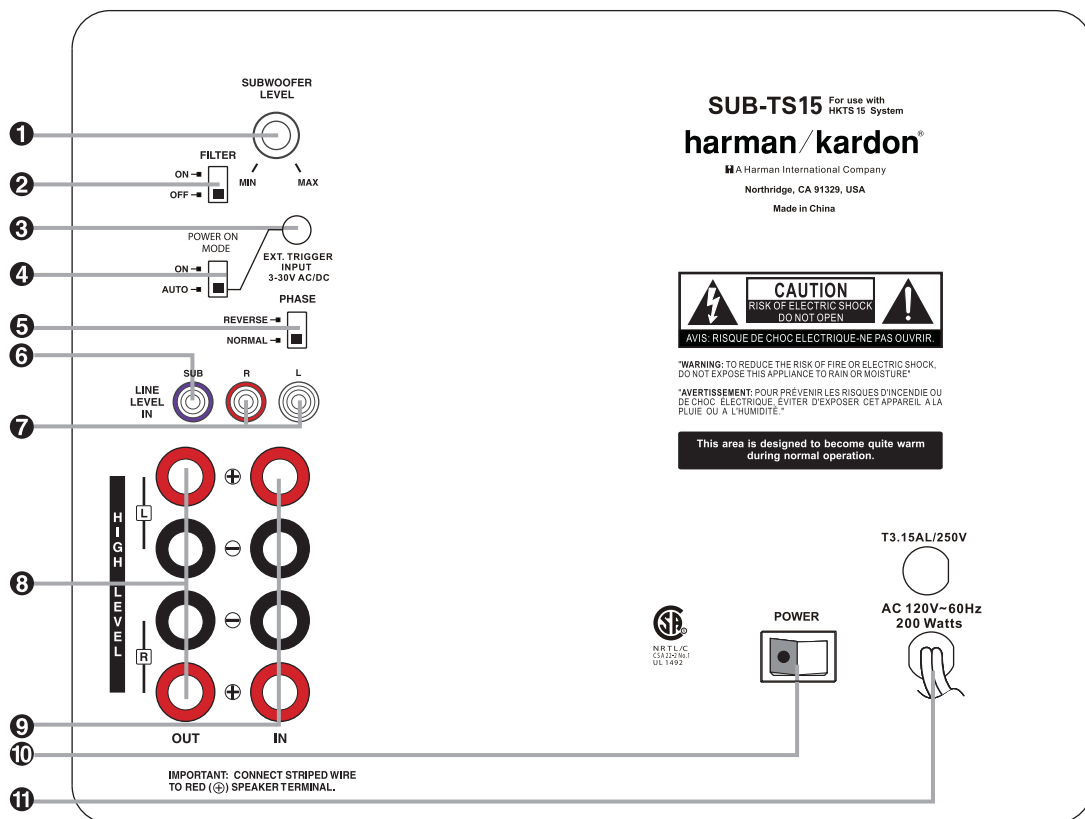

- 1 Subwoofer-Level Control
- 2 High-Cut (Low-Pass) Filter Switch
- 3 External Trigger Input
- 4 Audio-Sense On/Off Switch

- 5 Phase Switch
- 6 Line-Level Subwoofer (SUB) Input
- 7 Line-Level Full-Range Inputs
- 8 Speaker-Level Outputs

- 9 Speaker-Level Inputs
- 10 Master Power Switch
- 11 AC Power Cord

**1 Subwoofer-Level Control:** Volume may be adjusted using the **Subwoofer-Level Control**. Turn the control clockwise to increase the SUB-TS15's volume, or counterclockwise to decrease it.

**2 High-Cut (Low-Pass) Filter Switch:** Placing this switch in the **ON** position activates circuitry that cuts out all audio input signals above 120Hz. This allows the SUB-TS15 to focus its power on reproducing the low-frequency portion of the signal, avoiding

inefficiency and distortion. Engage this filter when using the **Speaker-Level Inputs 9**, or when using the **Line-Level Full-Range Inputs 7**, unless your receiver or processor processes its line-level output using a low-pass filter. The filter has no effect when the **SUB Input 6** is used.

**3 External Trigger Input:** Use the supplied mini-plug cable to connect the trigger output of another compatible product to this jack. Whenever a trigger signal between

3 and 30 volts (AC or DC) is detected, the SUB-TS15 amplifier will turn on, even when the Audio-Sense feature has been activated by placing the **Audio-Sense On/Off Switch 4** in the **AUTO** position. The amplifier will remain on for about 10–15 minutes without a trigger signal.

**4 Audio-Sense On/Off Switch:** When placed in the **AUTO** position, and when the **Master Power Switch 10** is turned on, the SUB-TS15 will automatically turn itself on or

## SUB-TS15 SUBWOOFER AMPLIFIER PANEL CONTROLS AND CONNECTIONS

place itself in the Standby mode, depending on whether it is receiving an audio signal. When this switch is placed in the **ON** position, the SUB-TS15 will remain on, whether or not it is receiving an audio signal.

An LED located on top of the SUB-TS15 indicates whether the SUB-TS15 is in the ON or STANDBY state when used with the **Audio-Sense On/Off Switch 4** in the **AUTO** position. The LED is lit blue to indicate that the SUB-TS15 is receiving an audio signal and is turned on, and the LED is lit amber to indicate that no signal is being received and the SUB-TS15 is in Standby mode.

When the **Audio-Sense On/Off Switch 4** is in the **ON** position, the LED will be lit blue, whether or not an audio signal is present.

When the **Master Power Switch 10** is turned off, the LED goes dark, no matter which position the **Audio-Sense On/Off Switch 4** is in.

**5 Phase Switch:** This switch determines whether the SUB-TS15 subwoofer's piston-like action moves in and out in phase with the main speakers. If the speakers were to play out of phase, the sound waves produced by the subwoofer would be cancelled out, reducing bass response. This phenomenon depends in part on the relative placement of the speakers in the room. In most cases, the **Phase Switch 5** should be left in the **NORMAL** position. However, it does no harm to experiment with the **Phase Switch 5**, and you may leave it in the position that maximizes bass response.

**6 Line-Level Subwoofer (SUB) Input:** Connect the subwoofer output of a receiver with digital surround sound decoding, such as Dolby® Digital or DTS®, to this input. This input bypasses the SUB-TS15's internal crossover circuitry, and should only be used with a filtered signal. If your receiver does not have digital decoding, you should use the **Line-Level Full-Range Inputs 7** instead.

**7 Line-Level Full-Range Inputs:** Connect the line-level subwoofer output or preamp output(s) of your receiver or amplifier to these inputs. If your receiver does not have a separate subwoofer output, use a Y-adapter (not supplied) to bridge the receiver's preamp output to the main amp input for that channel, and connect the long end of the adapter to the corresponding line-level input on the SUB-TS15. If your receiver has only a single subwoofer output, you may connect it to either the left or right line-level input on the SUB-TS15, and no Y-adapter is needed.

**8 Speaker-Level Outputs:** If you are using the **Speaker-Level Inputs 9** on the SUB-TS15, you should connect these binding-post terminals to your front left and right speakers, remembering to maintain polarity by connecting the (+) terminal on the SUB-TS15 subwoofer to the (+) terminal on the speaker, and the (–) terminal on the SUB-TS15 subwoofer to the (–) terminal on the speaker. If you are not using the **Speaker-Level Inputs 9**, then connect your front left and right speakers directly to your receiver or amplifier. See pages 9 through 12 for further information on speaker connections.

**9 Speaker-Level Inputs:** If your receiver or amplifier does not have a line-level subwoofer output, connect these binding-post terminals to the main left and right speaker terminals of your receiver or amplifier. Remember to maintain polarity by connecting the (+) terminal on the receiver/amplifier to the (+) terminal on the SUB-TS15 subwoofer, and the (–) terminal on the receiver/amplifier to the (–) terminal on the SUB-TS15 subwoofer.

**10 Master Power Switch:** Place this switch in the “•” position to power-on the SUB-TS15 subwoofer. The SUB-TS15 will then be either in the Standby mode or completely on, depending on the position of the **Audio-Sense On/Off Switch 4**.

**11 AC Power Cord:** Make sure to plug this cord into an active, unswitched electrical outlet for proper operation of the SUB-TS15. The cord should not be plugged into the accessory outlets found on some audio components.

## SPEAKER CONNECTIONS


**Dolby® Digital or DTS® (or Other Digital Surround Mode) Connection**

USE THIS INSTALLATION METHOD FOR DOLBY DIGITAL, DTS OR OTHER DIGITAL SURROUND PROCESSORS:

Use the line-level input jack marked **SUB 6** for the Low-Frequency Effects channel. Connect this jack to the subwoofer output or LFE output on your receiver or amplifier. Connect each speaker to the corresponding speaker terminals on your receiver or amplifier.

Make sure you've configured your surround sound processor for "Subwoofer On." The front left, front right, center and surround speakers should all be set to "Small."

When all connections have been made, plug the AC power cord on the subwoofer into an AC outlet.

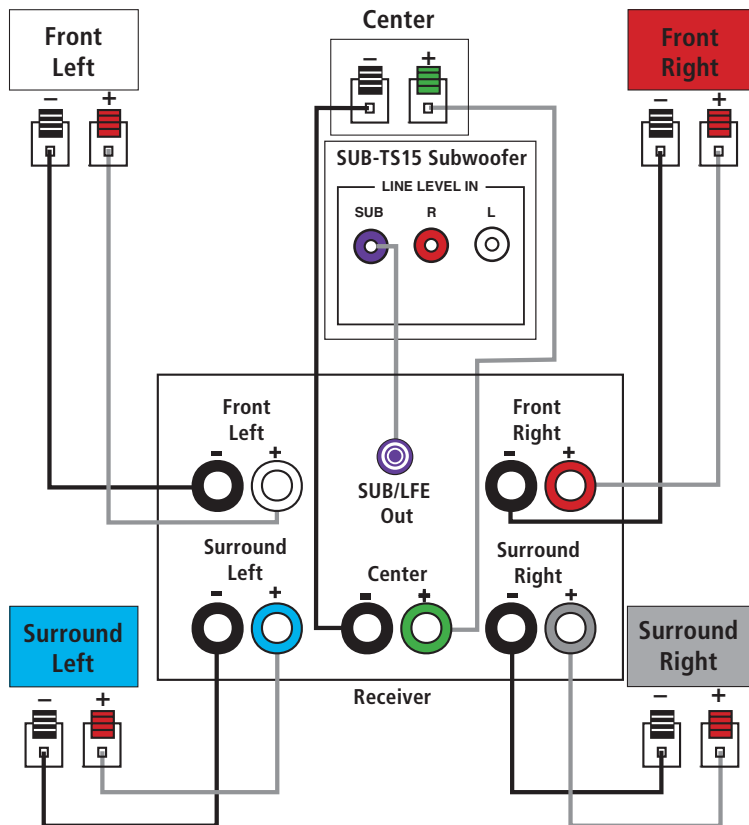



## SPEAKER CONNECTIONS

**Dolby Pro Logic®****(Non-Digital) – Line Level**

USE THIS INSTALLATION METHOD FOR DOLBY PRO LOGIC APPLICATIONS (NOT DOLBY DIGITAL, DTS OR OTHER DIGITAL PROCESSING), WHERE THE RECEIVER/PROCESSOR IS EQUIPPED WITH A SUBWOOFER OUTPUT, OR A VOLUME-CONTROLLED PREAMP (LINE-) LEVEL OUTPUT:

Use the supplied RCA-type interconnect cable to connect the line-level subwoofer output on your receiver or amplifier to either the left or right **Line-Level Full-Range Input 7** on the SUB-TS15 subwoofer. Use both the left and right inputs on the subwoofer if your receiver or processor has both left and right line-level outputs. In that case, you will need to supply a second interconnect cable.

If your receiver is equipped with line-level outputs but does not have a separate subwoofer output, use a Y-adaptor (not supplied) to bridge the receiver's preamp output to the main amp input for that channel, and connect the long end of the adapter to the corresponding line-level input on the SUB-TS15.


**IMPORTANT:** Do not use the **SUB Input 6** on the subwoofer with Dolby Pro Logic processors.

If your receiver/processor has a built-in low-pass-crossover filter for the subwoofer output, you may use the **SUB Input 6** to bypass the subwoofer's internal crossover.

Connect each speaker to the corresponding speaker terminals on your receiver or amplifier.

Make sure that you have configured your surround sound processor for "Subwoofer On". The front left, front right, center and surround speakers should all be set to "Small".

When all connections have been made, plug the AC power cord on the subwoofer into an AC outlet.

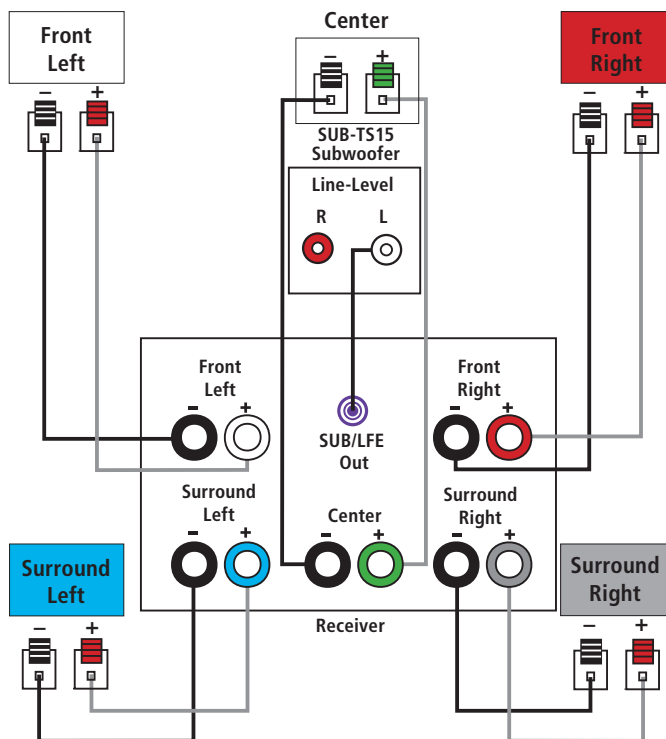

## SPEAKER CONNECTIONS


### Dolby Pro Logic (Non-Digital) – Speaker Level

USE THIS INSTALLATION METHOD FOR DOLBY PRO LOGIC APPLICATIONS (NOT DOLBY DIGITAL, DTS OR OTHER DIGITAL PROCESSING), WHERE THE RECEIVER/PROCESSOR DOES NOT HAVE A SUB-WOOFER OUTPUT, OR A VOLUME-CONTROLLED PREAMP (LINE-) LEVEL OUTPUT:

Connect your receiver or amplifier's front left and right speaker terminals to the left and right **Speaker-Level Input 9** terminals on the SUB-TS15 subwoofer that are marked "High Level In." Connect the left and right **Speaker-Level Output 8** terminals on the SUB-TS15 subwoofer that are marked "High Level Out" to the corresponding terminals on the back of your front left and right speakers.

Connect your receiver or amplifier's center and surround left and right speaker terminals to the corresponding terminals on the back of your center, and surround left and right speakers.

When all connections have been made, plug the AC power cord on the subwoofer into an AC outlet.

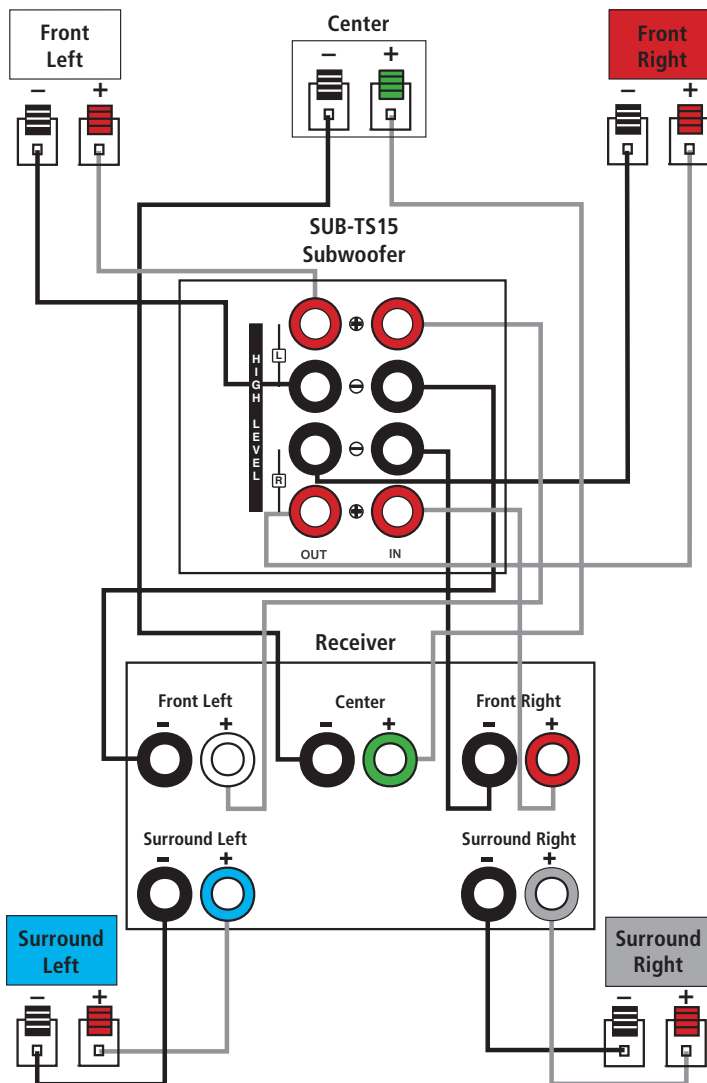

## OPERATION

Move the **Master Power Switch 10** (marked **Power**) to the “●” (On) position. The SUB-TS15 subwoofer will automatically turn itself on or go into Standby mode, depending on whether or not a signal is being sent to it by your receiver or surround processor, and provided that the **Audio-Sense On/Off Switch 4** is moved down so that it is in the **AUTO** position.

When your receiver or amplifier is off, or is not sending program material to the subwoofer, the subwoofer will be in Standby mode and the LED Indicator on the top of the subwoofer will turn amber. When the subwoofer senses an audio signal, it will automatically turn itself on and the LED Indicator will turn blue. If the subwoofer does not sense a signal after approximately twenty minutes, it will automatically go into Standby mode.

When the **Audio-Sense On/Off Switch 4** is switched to the **ON** position, the subwoofer will remain on, whether or not program material is playing, and the LED Indicator will remain lit blue.


If your receiver, processor or amplifier is equipped with a compatible trigger output, you may connect it to the SUB-TS15's **External Trigger Input 3**. When you turn on your component, if you have set it up correctly, it will send an electrical trigger signal to the SUB-TS15, which will cause the subwoofer to turn itself on, even when the **Audio-Sense On/Off Switch 4** has been placed in the **AUTO** position and no audio signal is detected.

The trigger signal must be between 3 and 30 volts, although it may be an AC or DC signal, and an AC signal may be 50Hz or 60Hz.

If you'll be away from home for an extended period of time, or if the subwoofer will not be used, switch the **Master Power Switch 10** to the **OFF** position.

### Volume

Volume can be adjusted using the **Subwoofer-Level Control 1**, as shown. Turn the control knob clockwise to increase the volume of the subwoofer, and counterclockwise to decrease the subwoofer's volume.

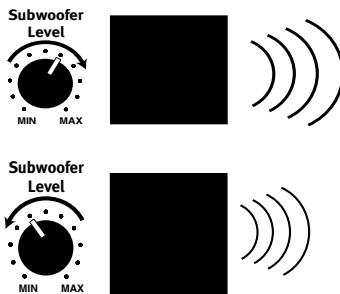

### Additional Bass Adjustments

In addition to the volume adjustments described above, the SUB-TS15 subwoofer includes a **Phase Switch 5** and a **Filter Switch 2** that can be used to adjust the bass response to suit your listening environment or taste.

In most situations, the **Phase Switch 5** should be left in the **NORMAL** position. If you suspect that the subwoofer is playing out of phase with the other speakers, which would tend to diminish bass response, try placing this switch in the **REVERSE** position. There is no harm in experimenting, and you may return the switch to the **NORMAL** position at any time. If you rearrange your room and reposition the speakers, it would be a good idea to check whether they are in phase by flipping this switch.

The **High-Cut (Low-Pass) Filter Switch 2** limits the frequencies of the audio signal inputted to the subwoofer to the low frequencies that the subwoofer reproduces best. This allows the subwoofer to perform more efficiently, and with superior bass reproduction, minimizing distortion that might occur if the subwoofer attempted to reproduce higher frequencies. This switch should be left in the **ON** position, **except**:

1. When the **SUB Input 6** is being used, in which case it has no effect, or
2. When the **Speaker-Level Inputs 9** or the **Line-Level Full-Range Inputs 7** are being used with a crossover or filter aboard the receiver or processor.

In these two circumstances, place the switch in the **OFF** position.

## Test Set Up and Procedure



### Equipment needed:

- Function/signal generator/sweep generator
- Integrated Amplifier
- Multimeter
- Speaker cables

### Initial Control Settings:

- Power Switch OFF; Filter OFF
- Level MIN (Full CCW)
- Phase, Auto/On switches do not matter

### General Unit Function (UUT = Unit Under Test)

- 1) From the signal generator, connect one line level (RCA) cable to the Subwoofer Line Level Input jacks L/R on the UUT. Use a Y-cable from a mono source if necessary to connect to both inputs. Do not connect to the single, purple SUB input.
- 2) Turn on generator; adjust to **75mV, 50 Hz**.
- 3) Plug in UUT; turn the power switch ON. Turn LEVEL control full clockwise (MAX)
- 4) LED should turn from Amber to Blue (on top of UUT); immediate and vigorous bass response should be heard and felt from port tube opening.
- 5) Turn off generator, turn LEVEL control full counterclockwise (MIN), and disconnect RCA cable.
- 6) Connect one pair of speaker cables to Speaker Level input terminal (IN) on UUT. Cables should be connected to an integrated amplifier fed by the signal generator.
- 7) Turn on generator and adjust so that speaker level input at the amplifier is **1.6V, 50 Hz**. Turn LEVEL control full clockwise.
- 8) LED should turn from Amber to Blue; immediate and vigorous bass response should be heard and felt from the port tube opening.


### Sweep Function

- 1) Follow steps 6-8 above, using a sweep generator as a signal source.
- 2) Sweep generator from 20Hz to 300Hz. Listen to the cabinet and drivers for any rattles, clicks, buzzes or any other noises. If any unusual noises are heard, remove woofers and test.


### Driver Function

- 1) Remove woofer from cabinet; detach + and - wire clips.
- 2) Check DC resistance of woofer; it should be **3.0 ohms  $\pm 10\%$**
- 3) Connect a pair of speaker cables to driver terminals. Cables should be connected to an integrated amplifier fed by a signal generator. Turn on generator and adjust so that speaker level output is **5.0V**.
- 4) Sweep generator from 20Hz to 1kHz. Listen to driver for any rubbing, buzzing, or other unusual noises.


EXPLODED VIEW

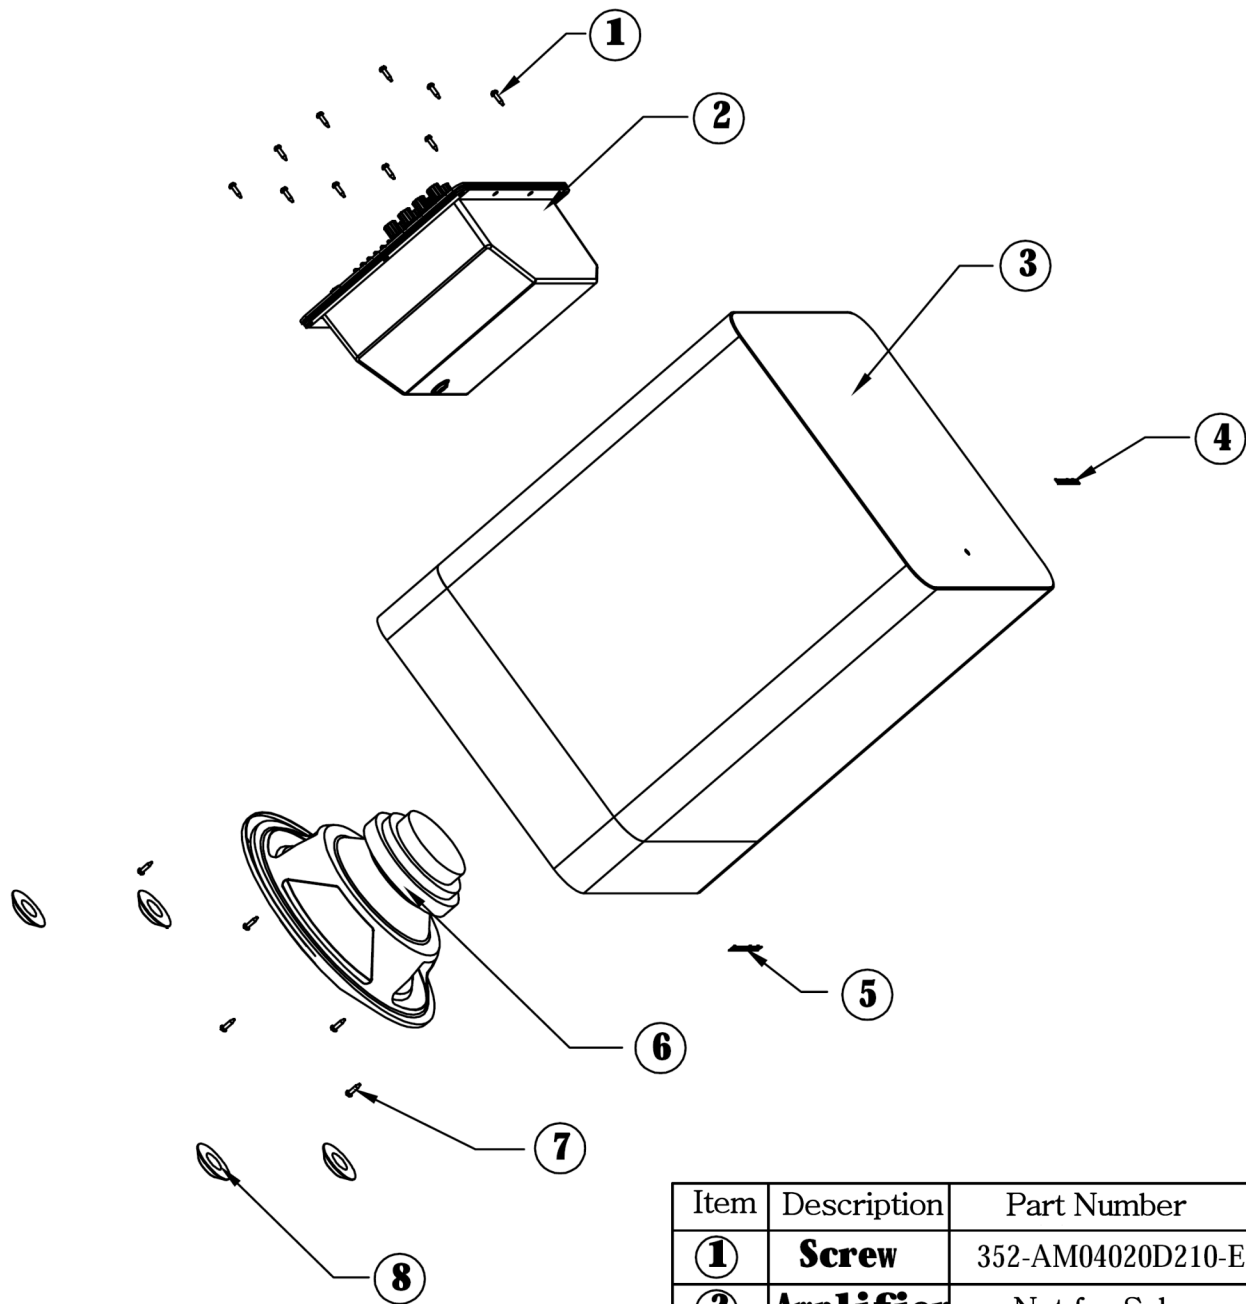

Item	Description	Part Number	Qty
①	<b>Screw</b>	352-AM04020D210-E	<b>10</b>
②	<b>Amplifier</b>	Not for Sale	<b>1</b>
③	Enclosure	Not for Sale	<b>1</b>
④	<b>Logo</b>	316-AG-00557-E	<b>1</b>
⑤	<b>Logo</b>	316-AL-00553-E	<b>1</b>
⑥	<b>Woofer</b>	25PF12DZB-DW02-E	<b>1</b>
⑦	<b>Screw</b>	352-FM04020D605-E	<b>5</b>
⑧	<b>Foot Pad</b>	320-RUB-00057-0BAE	<b>4</b>

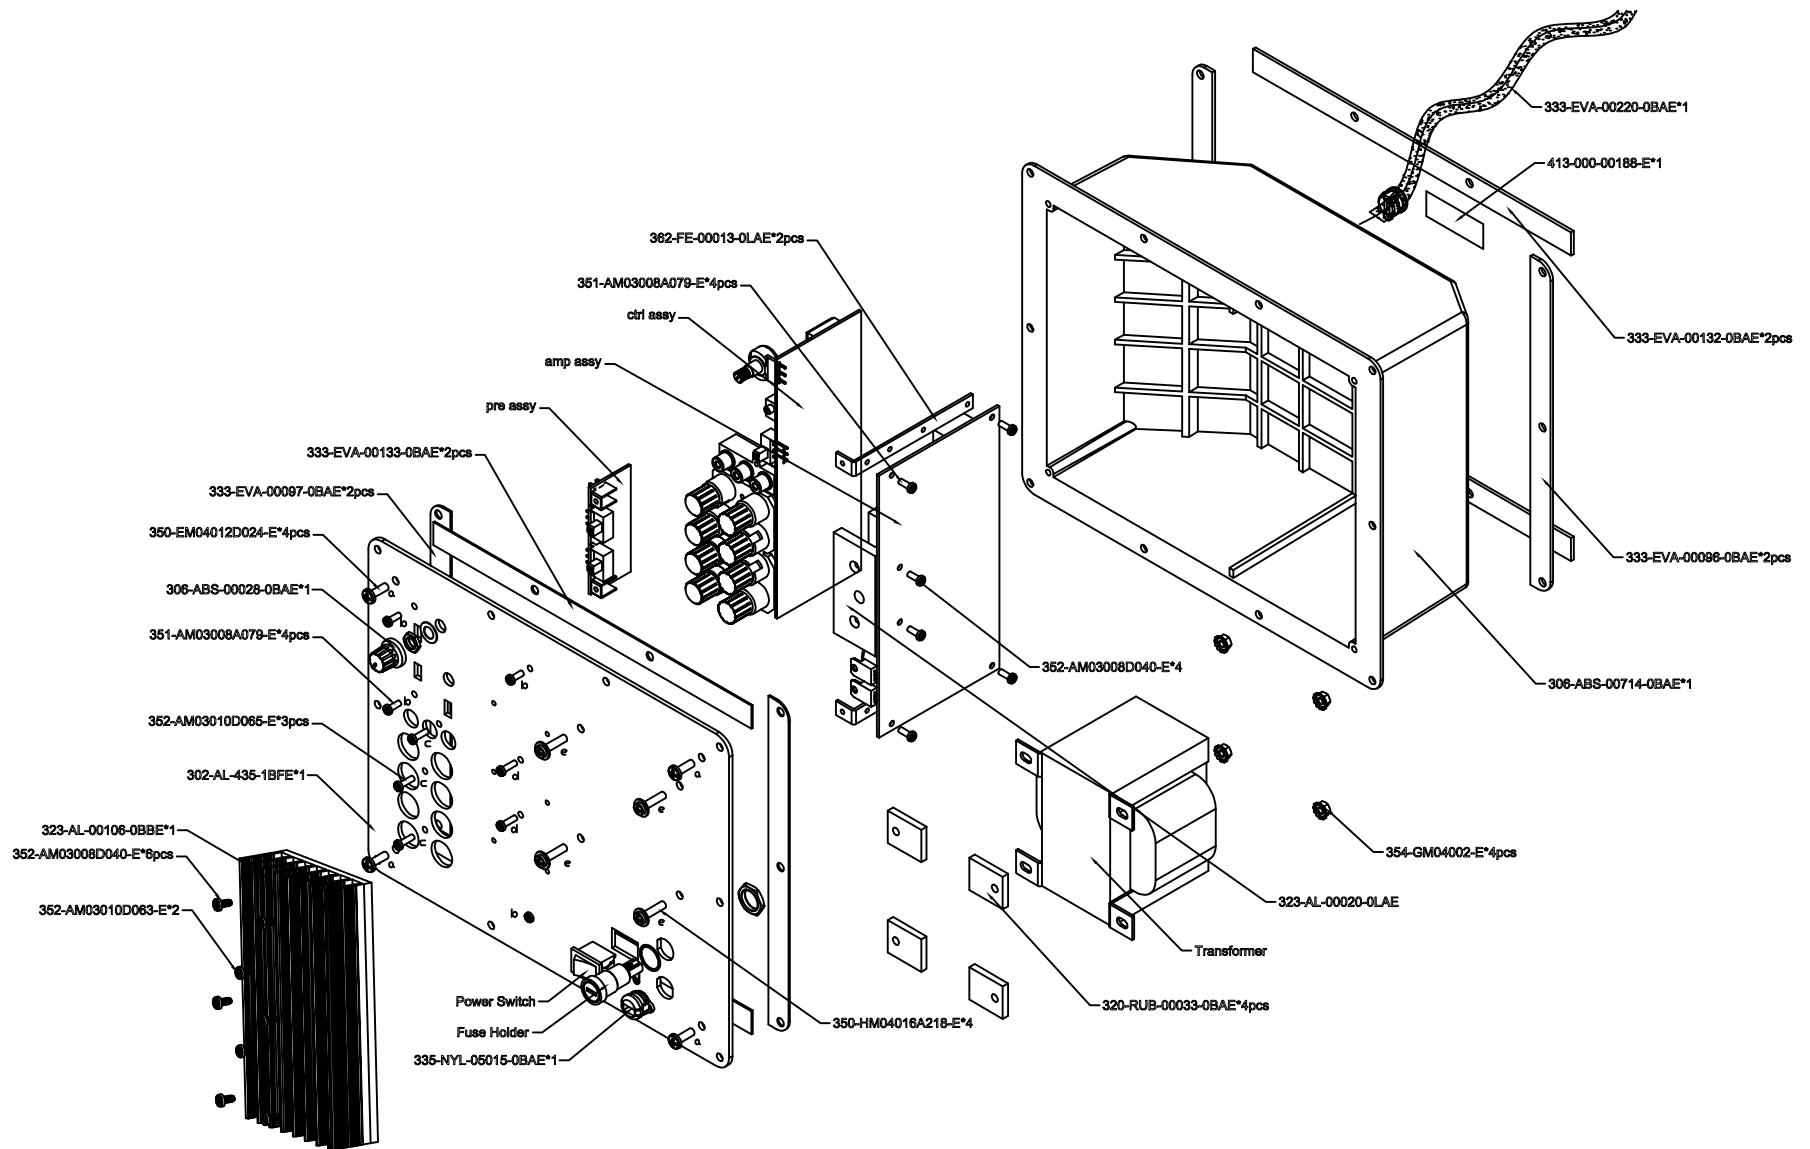



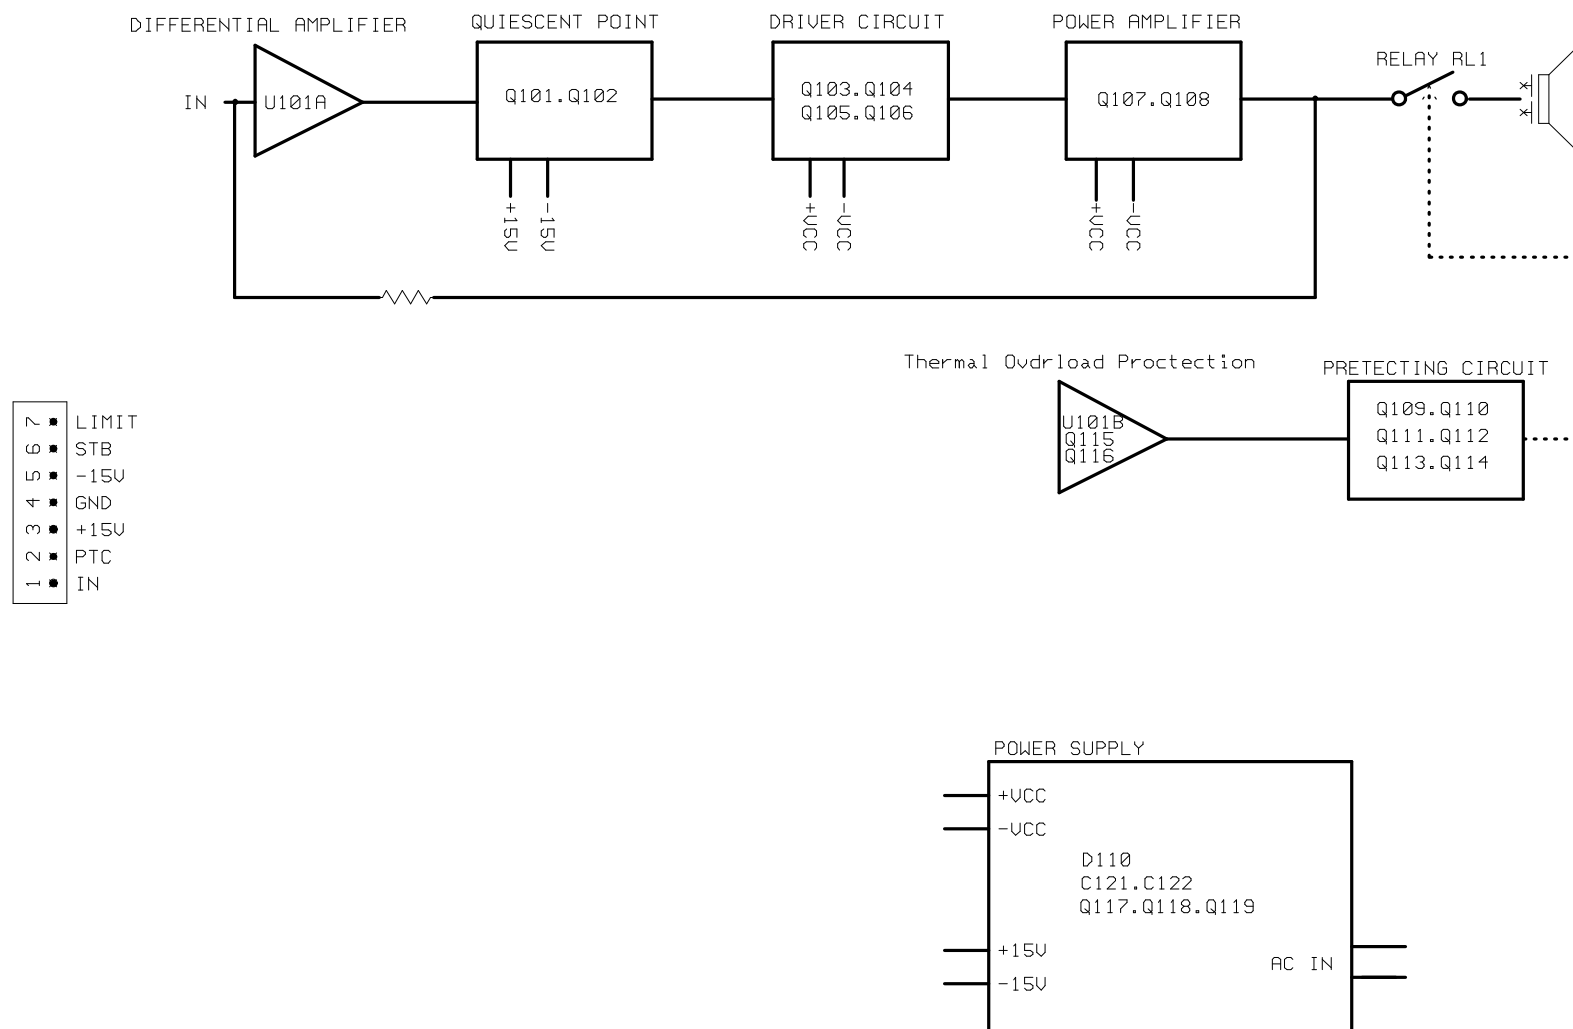



BALBOA HKTS15(UL) BLOCK DIAGRAM(POWER AMPLIFIER.POWER SOURCE.PRETECT)




## SUB-TS15 (UL) AMP


### Troubleshooting Flow Chart

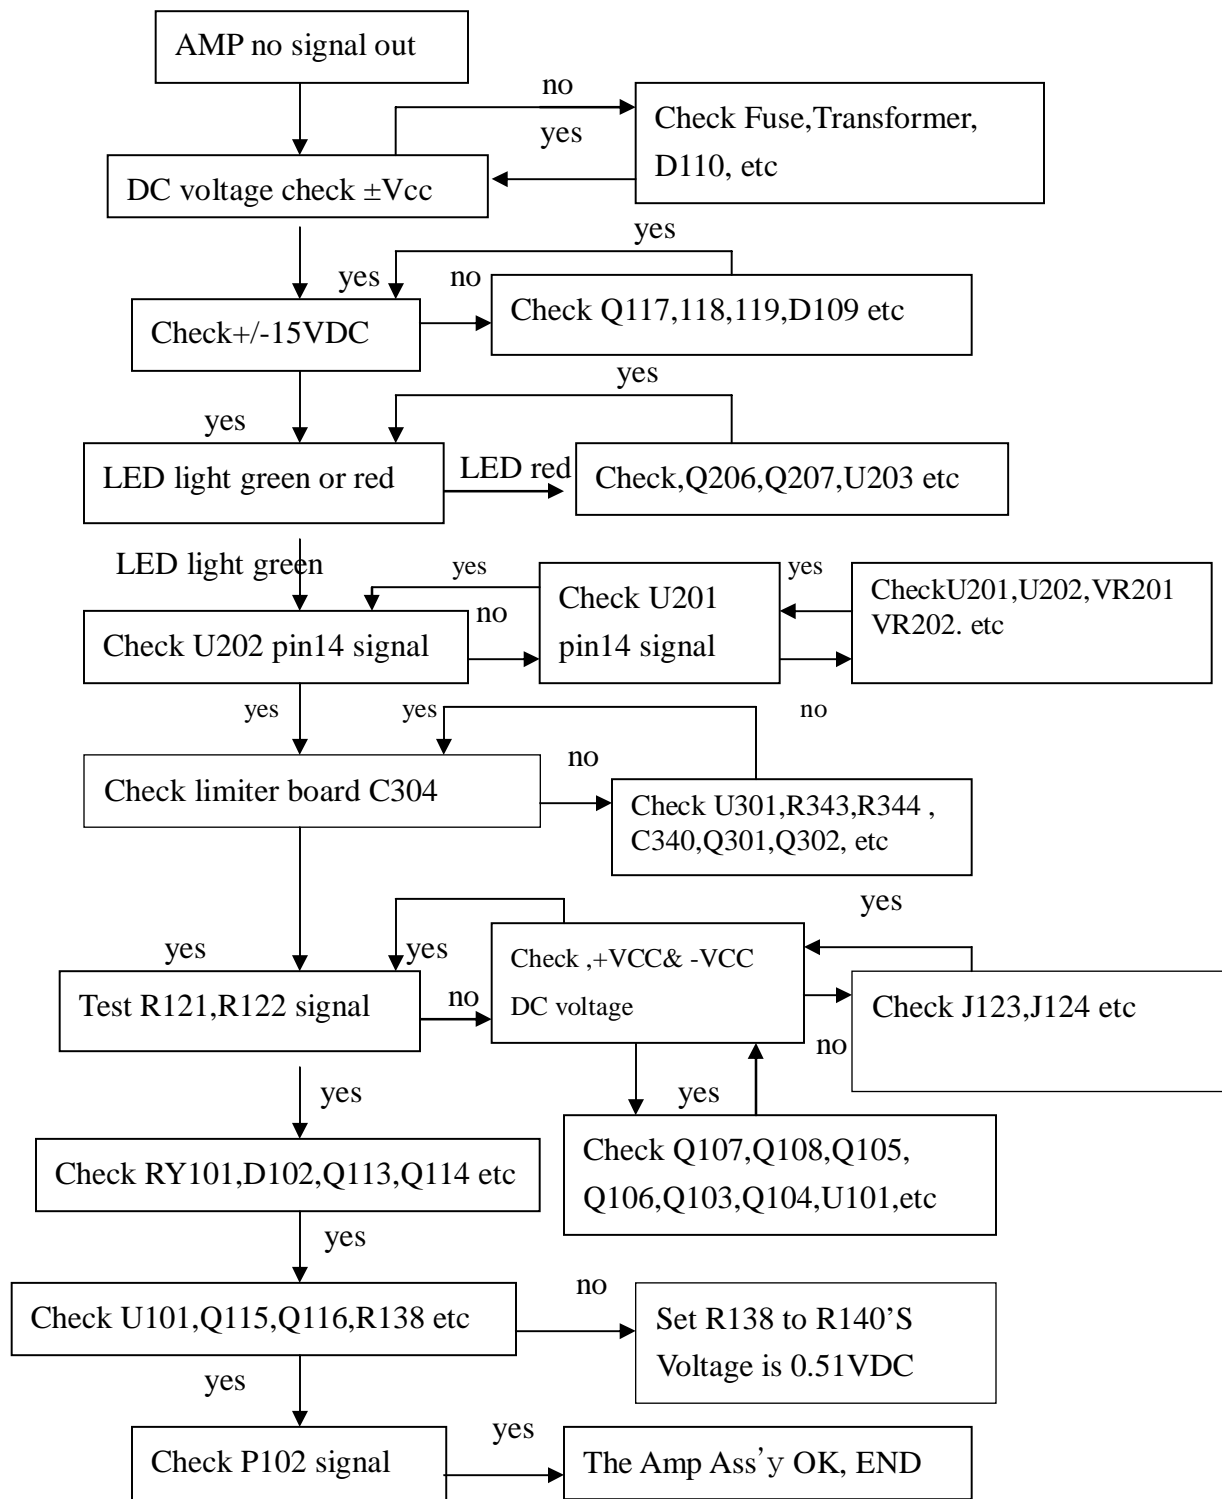

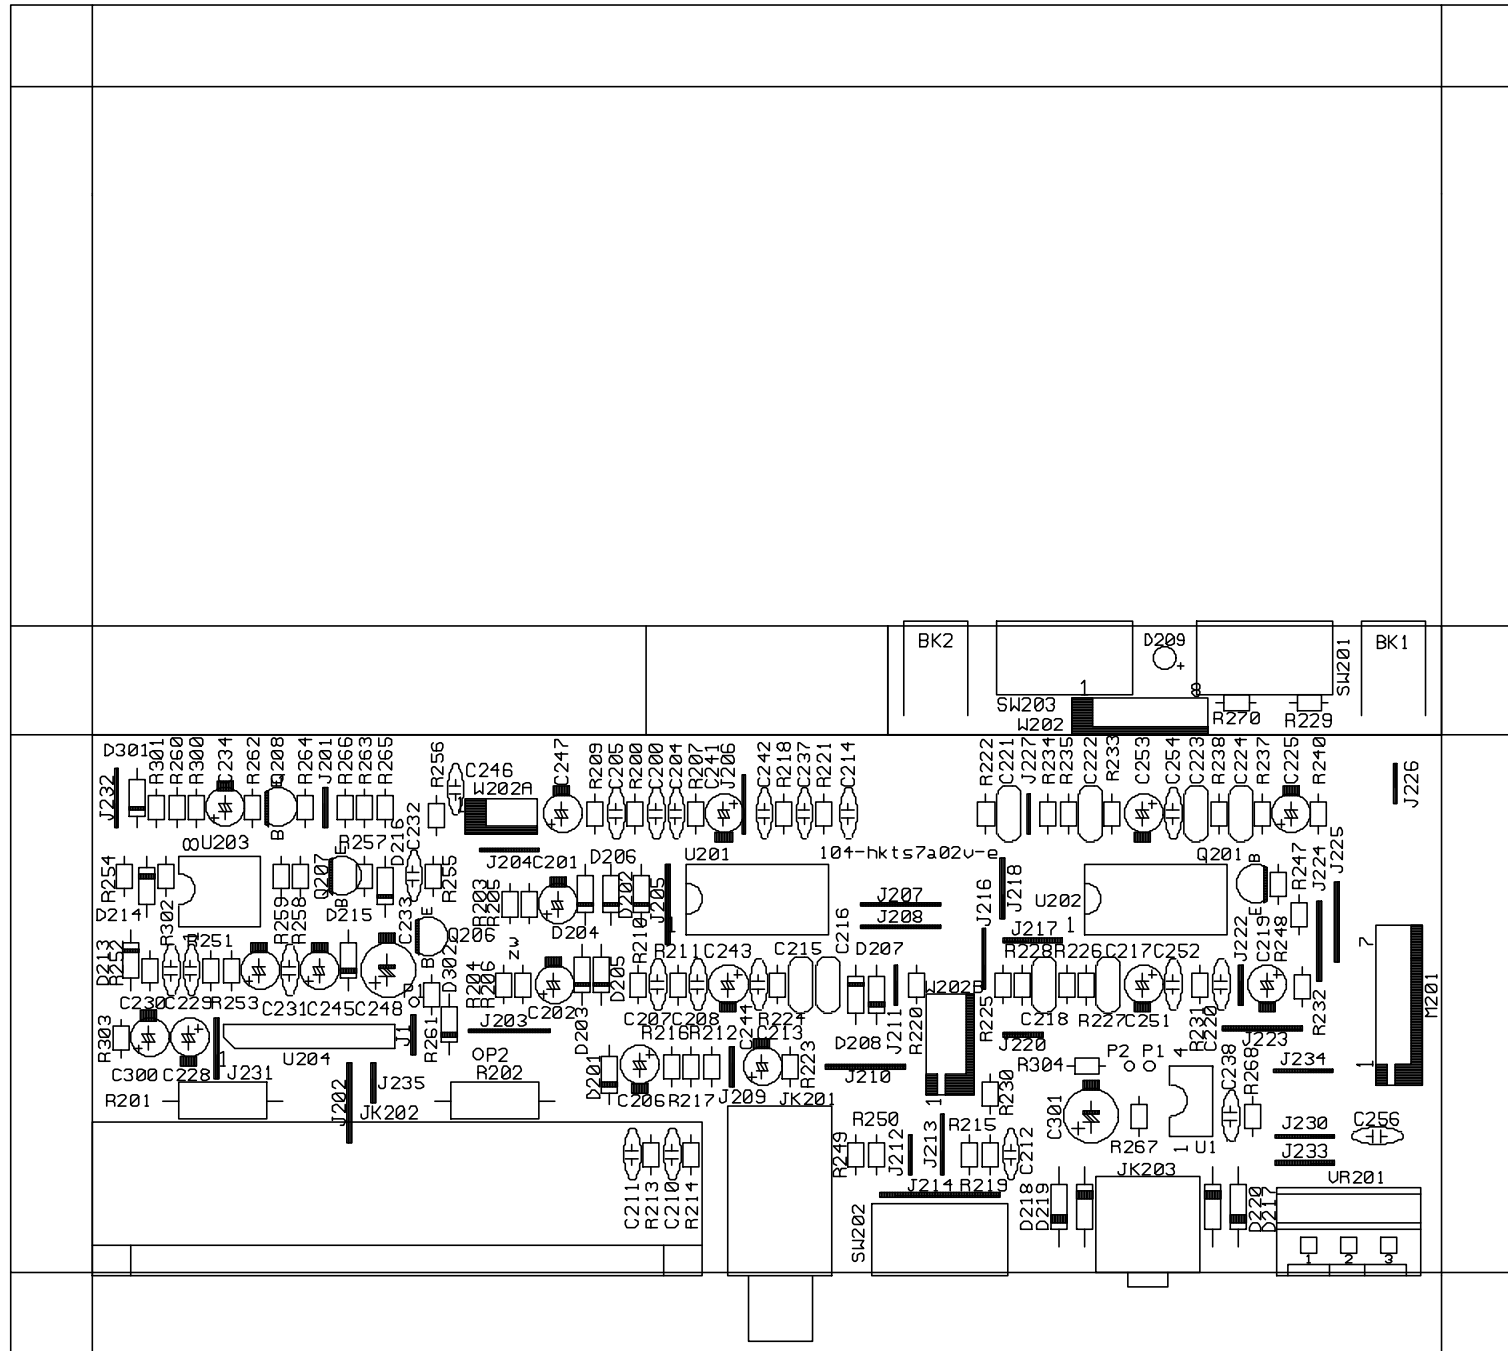


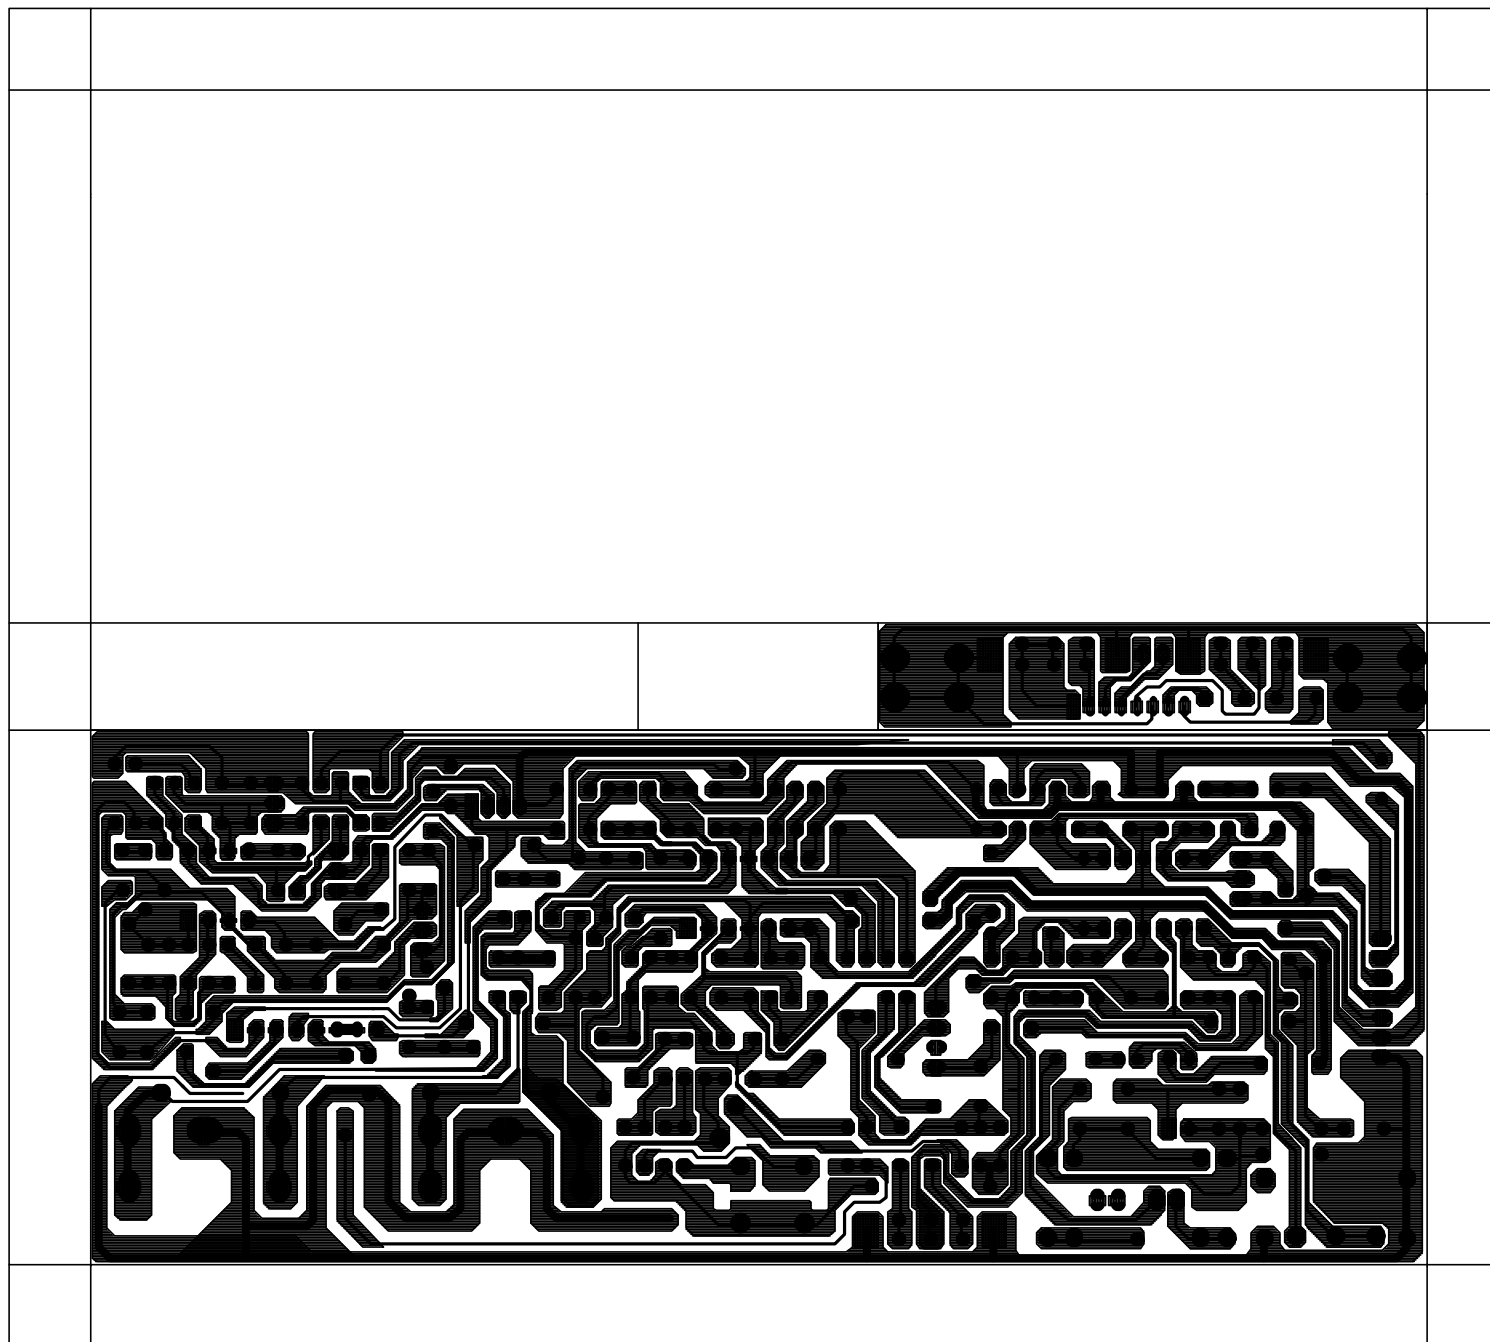



104LIMIT00

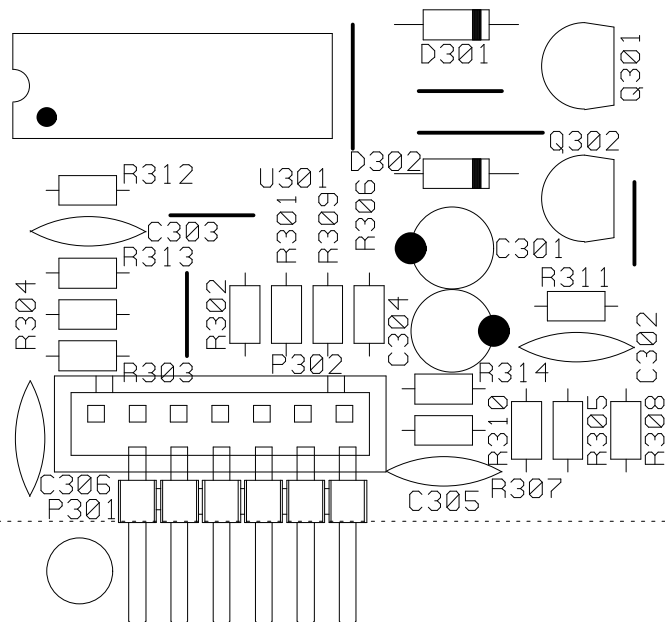

104LIMIT00

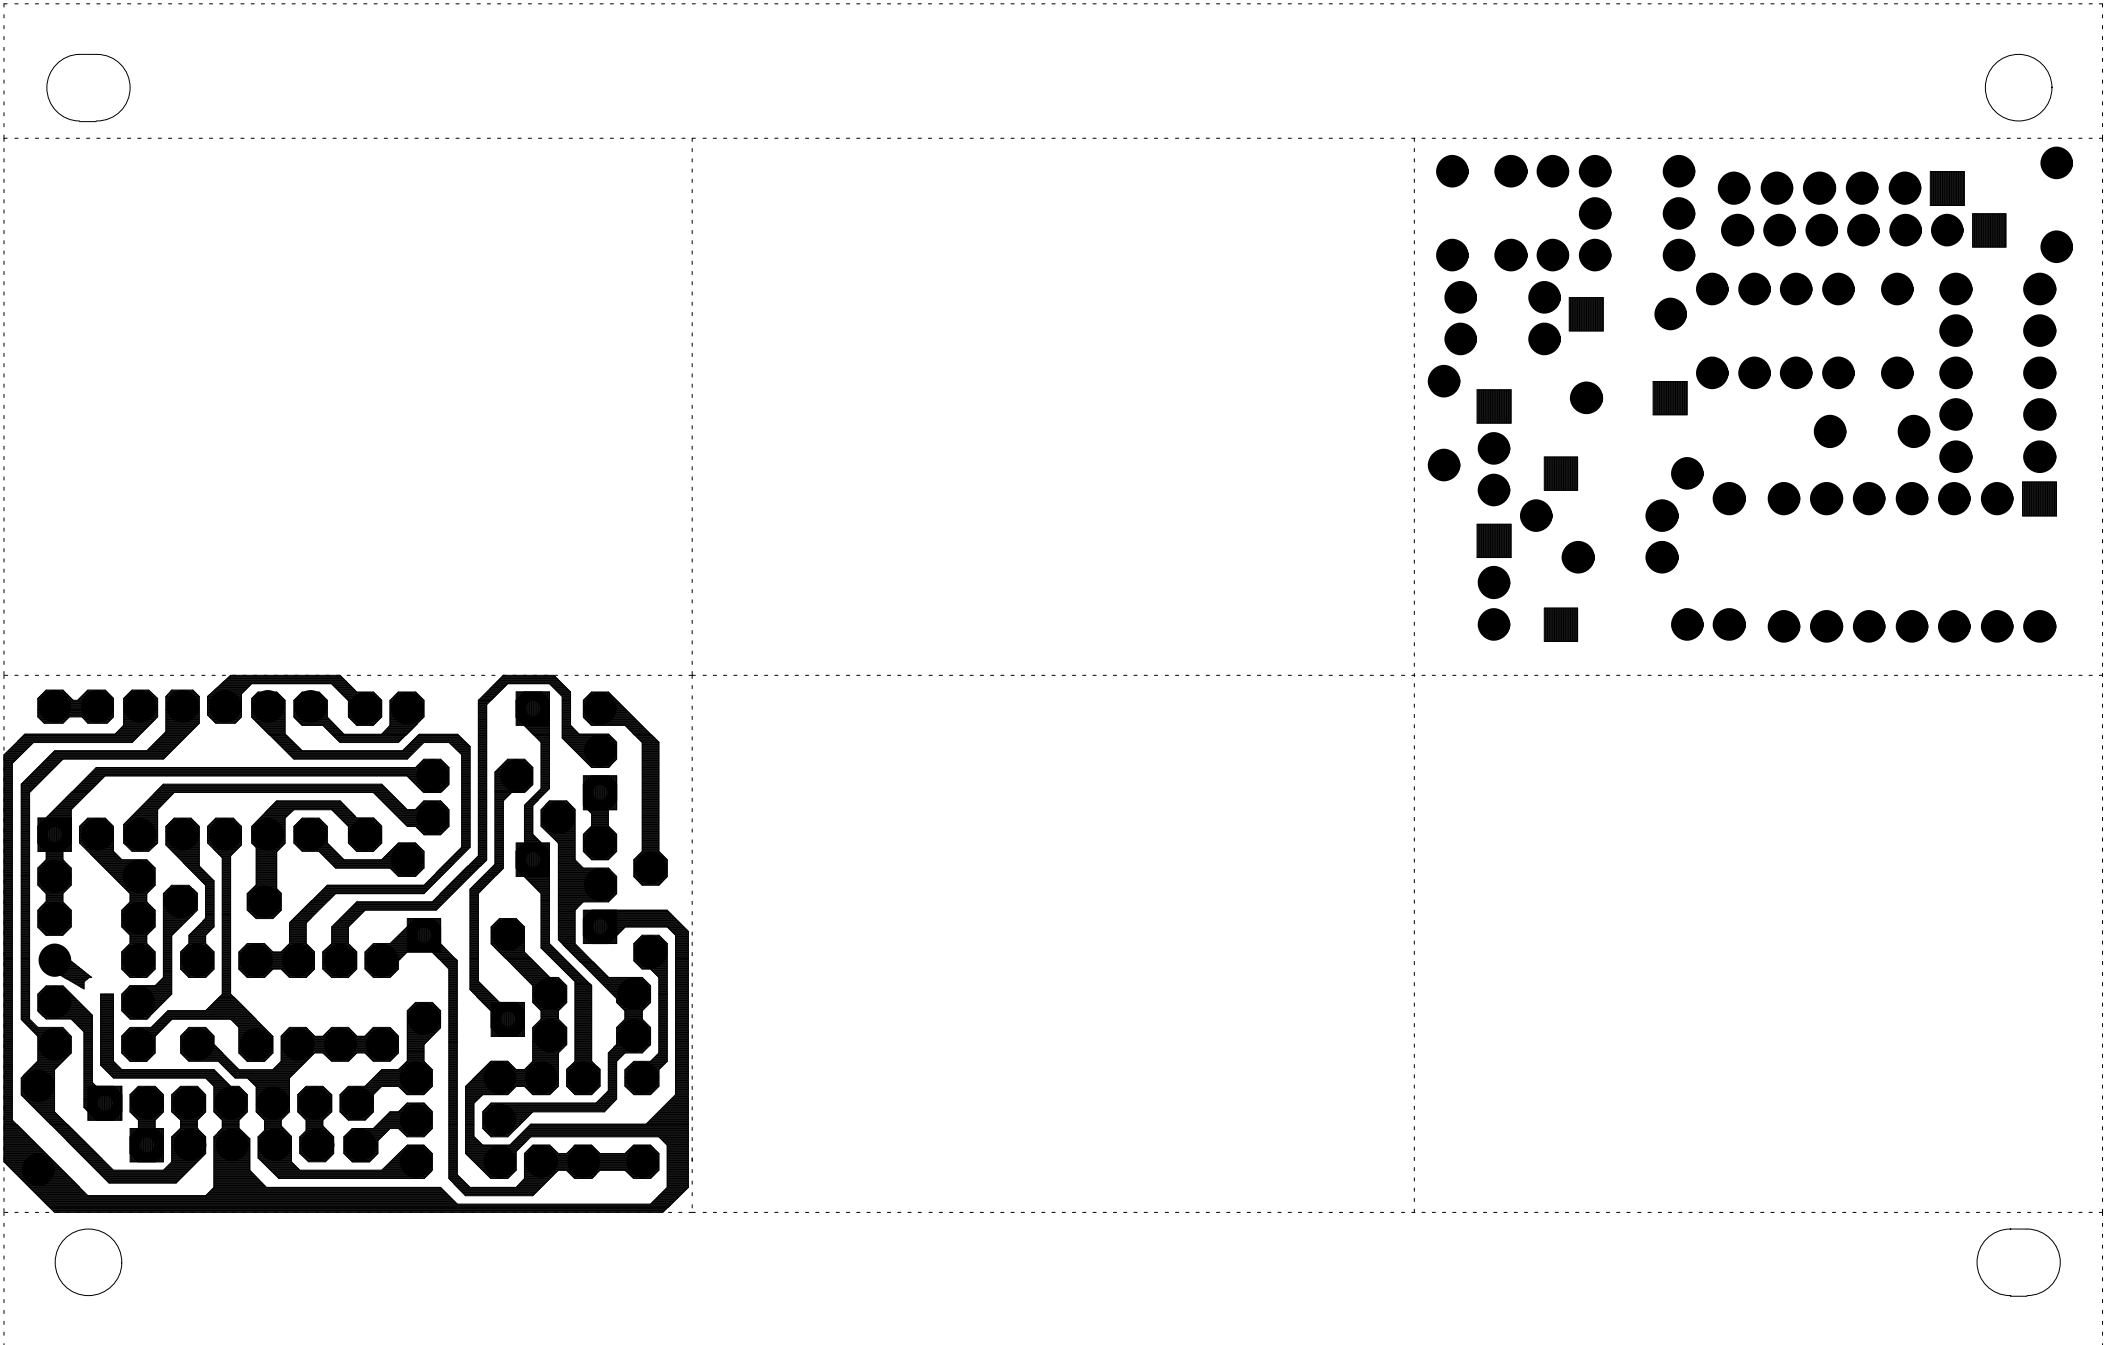

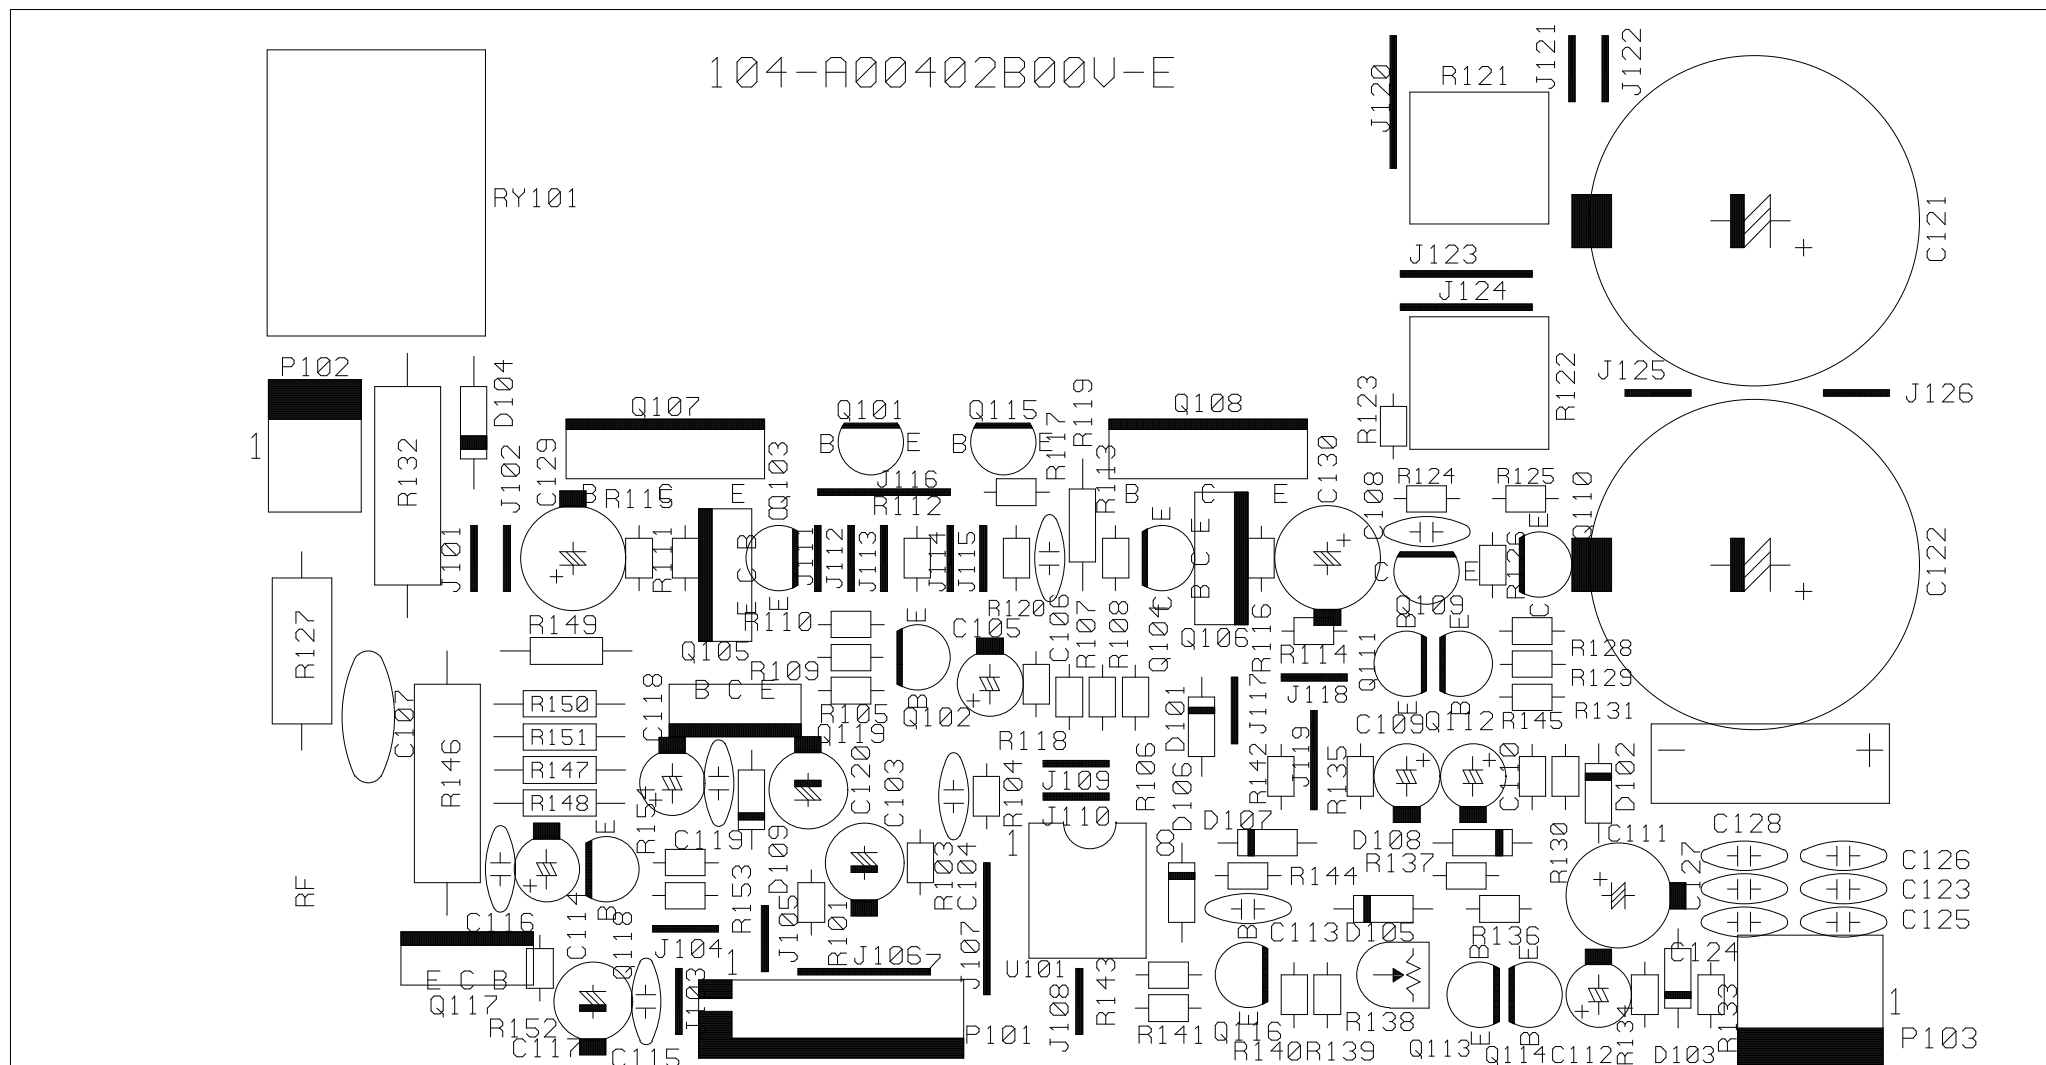

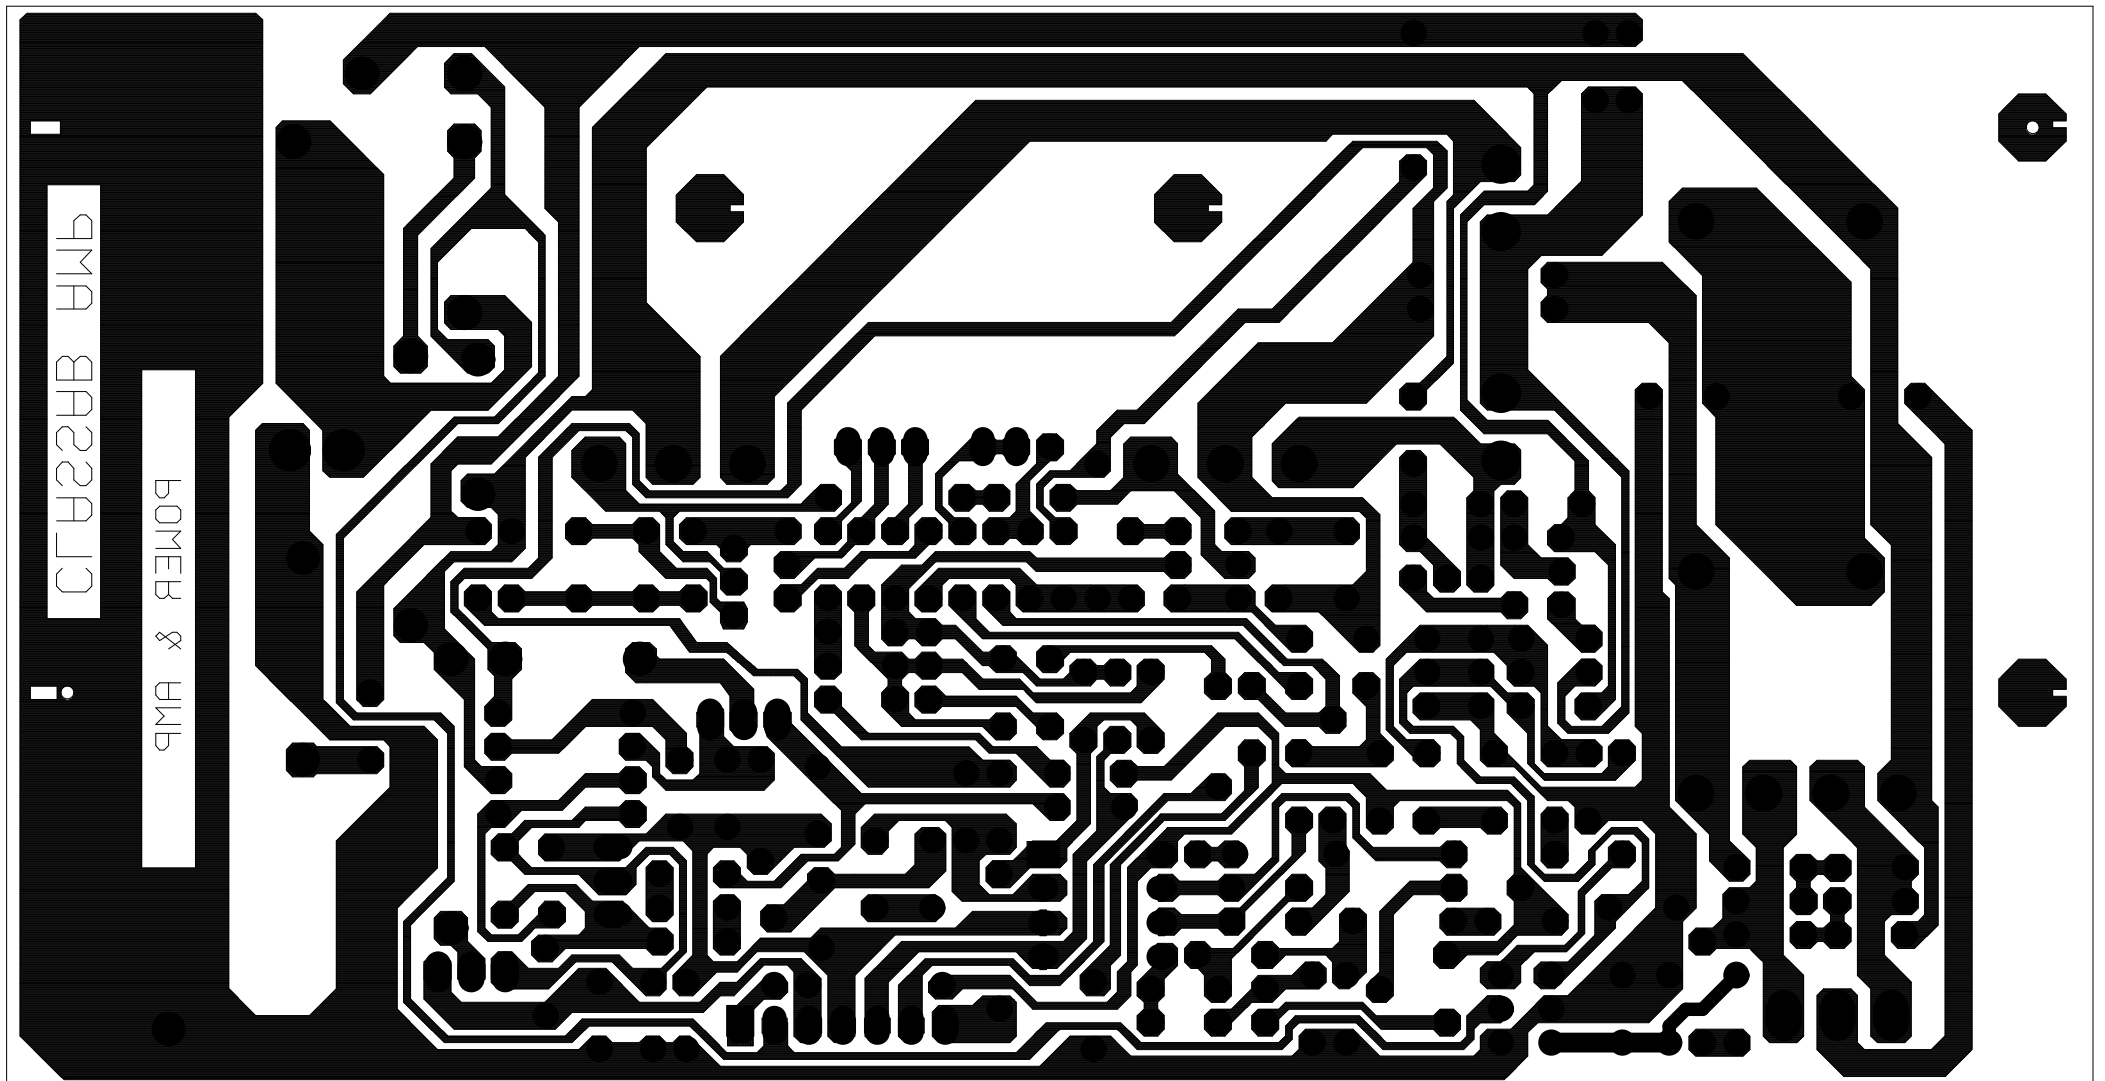

SUB-TS15 120V Electrical parts list			
Part number	Description	Qty	Reference Designator
<b>MAIN/POWER PCB</b>			
<i>Resistors</i>			
110-10821jk2-e	Resistor 820Ω 1W ±5% jam crus and shaping 10mm (RoHS)	1	R132
110-122r2j15-e	Resistor 2.2Ω 1/2W ±5% prone short crus 15mm (RoHS)	1	R127
110-20331jk2-e	Resistor 330Ω 2W ±5% jam crus and shaping 5mm (RoHS)	2	R146,R149
113-50r10j10-e	cement Resistor 0.1Ω 5W ±5% standing (RoHS)	2	R121,R122
114-03302m0-e	semi-fixed Resistor 3K 0.3W ±20% (RoHS)	1	R138
110-14472j26-e	Resistor 4.7K 1/4W ±5% CF 26mm (RoHS)	2	R147,R150
110-14681j26-e	Resistor 680Ω 1/4W ±5% CF 26mm (RoHS)	2	R148,R151
110-16101j26-e	Resistor 100Ω 1/6W ±5% CF 26mm	1	R120
110-16102j26-e	Resistor 1K 1/6W ±5% CF 26mm (RoHS)	1	R124
110-16103j26-e	Resistor 10K 1/6W ±5% CF 26mm (RoHS)	1	R134
110-16105j26-e	Resistor 1M 1/6W ±5% CF 26mm (RoHS)	1	R143
110-16123j26-e	Resistor 12K 1/6W ±5% CF 26mm (RoHS)	2	R135,R139
110-16152j26-e	Resistor 1.5K 1/6W ±5% CF 26mm (RoHS)	6	R103,R123,R136,R137,R141,R142
110-16153j26-e	Resistor 15K 1/6W ±5% CF 26mm (RoHS)	4	R118,R145,R152,R154
110-16154j26-e	Resistor 150K 1/6W ±5% CF 26mm (RoHS)	1	R131
110-16181j26-e	Resistor 180Ω 1/6W ±5% CF 26mm (RoHS)	2	R111,R114
110-16182j26-e	Resistor 1.8K 1/6W ±5% CF 26mm (RoHS)	1	R153
110-16223j26-e	Resistor 22K 1/6W ±5% CF 26mm (RoHS)	3	R128,R129,R133
110-16332j26-e	Resistor 3.3K 1/6W ±5% CF 26mm (RoHS)	3	R106,R107,R144
110-16392j26-e	Resistor 3.9K 1/6W ±5% CF 26mm (RoHS)	2	R105,R108
110-16393j26-e	Resistor 39K 1/6W ±5% CF 26mm (RoHS)	1	R126
110-16470j26-e	Resistor 47Ω 1/6W ±5% CF 26mm (RoHS)	4	R112,R113,R115,R116
110-16471j26-e	Resistor 470Ω 1/6W ±5% CF 26mm (RoHS)	1	R140
110-16472j26-e	Resistor 4.7K 1/6W ±5% CF 26mm (RoHS)	3	R110,R125,R130
110-16473j26-e	Resistor 47K 1/6W ±5% CF 26mm (RoHS)	1	R101
110-16560j26-e	Resistor 56Ω 1/6W ±5% CF 26mm (RoHS)	1	R117
110-16563j26-e	Resistor 56K 1/6W ±5% CF 26mm (RoHS)	1	R104
110-16682j26-e	Resistor 6.8K 1/6W ±5% CF 26mm (RoHS)	1	R109
<i>Capacitors</i>			
130-2b102k503-e	DISC Capacitor 1000P 50V ±10% (RoHS)	1	C116
130-3f104z503-e	DISC Capacitor 0.1U 50V +80/-20% (RoHS)	4	C108,C113,C115,C119
130-3f473m503-e	DISC Capacitor 0.047U 50V ±20% (RoHS)	1	C106
130-sl101k503-e	DISC Capacitor 100P 50V SL ±10% (RoHS)	2	C139,C140
132-104j503-e	MYLAR Capacitor 0.1U 50V ±5% (RoHS)	1	C107
132-223ja03-e	MYLAR Capacitor 0.022uF 100V ±5% (RoHS)	4	C124,C125,C126,C128
135-3105m50-e	Electrolytic CAP. 1U 50V ±20% (RoHS)	2	C105,C112
135-3107m16-e	Electrolytic CAP. 100uF 16V ±20% (RoHS)	3	C109,C117,C120
135-3226m50-e	Electrolytic CAP. 22U 50V ±20% (RoHS)	2	C114,C118
135-3227m10-e	Electrolytic CAP. 220U 10V ±20% (RoHS)	2	C129,C130
135-3227m16-e	Electrolytic CAP. 220U 16V ±20% (RoHS)	1	C111
135-3476m25-e	Electrolytic CAP. 47U 25V ±20% (RoHS)	1	C103
130-3f472md00-e	DISC Capacitor 4700P 400V ± 20% safe rule long crus (RoHS)	1	for Power Switch SW100
132-223ja03-e	MYLAR Capacitor 0.022uF 100V ±5% (RoHS)	2	C123,C127
135-3107m16-e	Electrolytic CAP. 100uF 16V ±20% (RoHS)	1	C110
135-4688m50-e	Electrolytic CAP. 6800U/50V ±20% D25X45mm (RoHS)	2	C121,C122
<i>Semiconductors</i>			
192-027c1815gr-e	Transistor 2SC1815GR NPN	5	Q102,Q111,Q112,Q113,Q118
192-028a1015gr-e	Transistor 2SA1015GR PNP	2	Q114,Q116
192-1572n5551-e	Transistor 2N5551 NPN	2	Q103,Q109
192-1582n5401-e	Transistor 2N5401 AI-PNP 350V	2	Q104,Q110
197-631n4148-e	DIODE 500mW 75V 1N4148 Panjit (RoHS)	4	D101,D103,D105,D108
199-65000333g-e	ZENER DIODE GDZJ3.3A 500mW 3.3V 2% 26mm (RoHS)	1	D102
199-65000623g-e	ZENER DIODE GDZJ6.2B 500mW 6.2V 26mm 2% (RoHS)	2	D106,D107




Part number	Description	Qty	Reference Designator
<b>MAIN/POWER PCB</b>			
199-65001603g-e	ZENER DIODE GDZJ16C 500mW 16V 26mm 2% (RoHS)	1	D109
190-06m4558d-e	I.C. OPA 4558D Dual Op-Amp	1	U101
192-021tip35c-e	Transistor TIP35C NPN	1	Q107
192-022tip36c-e	Transistor TIP36C PNP	1	Q108
192-027c1815gr-e	Transistor 2SC1815GR NPN	2	Q101,Q115
192-201d882y-e	Transistor KSD882Y NPN	1	Q117
192-202b772y-e	Transistor KSB772Y PNP	1	Q119
192-991d669a-e	Transistor HI-SINCERITY HSD669A NPN	1	Q106
192-992b649t-e	Transistor HSB649T PNP	1	Q105
197-00kbl405-e	bridge rectifier 4A 500V KBL405 (RoHS)	1	D110
197-101n4002-e	diode 1N4002TB (RoHS)	1	D104
<i>Miscellaneous</i>			
162-10202001-e	single wire 26AWG 1007 200mm RED 3mm (RoHS)	1	
171-udhss124d-e	relay 5A 24V UDH-SS124D (RoHS)	1	RY101
175-1c07v01-e	WIRE CONNECTOR & BASE 7PIN PITCH=2.5mm (RoHS)	1	P101
175-1d02v01-e	WIRE CONNECTOR & BASE 2PIN PITCH=3.96mm (RoHS)	1	P102
175-1d03v01-e	WIRE CONNECTOR & BASE 3 PIN PITCH=3.96mm JST-VH (RoHS)	1	P103
193-3m2520-e	* INSULATOR TO-3P 25x20mm (RoHS)	2	for Q107,Q108
323-AL-00020-0LAE	HEAT SINK 65*32*31 aluminium color	1	
351-AM03014A094-E	M3*14 machine screw electrical black (RoHS)	1	
352-AM03008D040-E	Ø 3*8 B type ping screw electrical black (RoHS)	4	
361-FE-00051-0LAE	TRANSISTOR stator 14.2*8.0*5.2t=1.6mm (RoHS)	1	
361-NYL-00054-0LAE	TRANSISTOR insulating mat (SW06002) (RoHS)	2	
<b>PREAMP PCB</b>			
<i>Resistors</i>			
110-12472j52-e	Resistor 4.7K 1/2W ±5% CF 52mm (RoHS)	2	R201,R202
110-16102j26-e	Resistor 1K 1/6W ±5% CF 26mm (RoHS)	6	R213,R214,R215,R254,R253,R304
110-16103j26-e	Resistor 10K 1/6W ±5% CF 26mm (RoHS)	19	R209,R212,R216,R217,R218,R220,R221,R222,R225,R228,R229,R230,R232,R235,R240,R248,R260,R270,R226
110-16104j26-e	Resistor 100K 1/6W ±5% CF 26mm (RoHS)	5	R231,R263,R266,R257,R300
110-16105j26-e	Resistor 1M 1/6W ±5% CF 26mm (RoHS)	1	R259
110-16113j26-e	Resistor 11K 1/6W ±5% 26mm (RoHS)	1	R268
110-16122j26-e	Resistor 1.2K 1/6W ±5% CF 26mm (RoHS)	1	R265
110-16123j26-e	Resistor 12K 1/6W ±5% CF 26mm (RoHS)	1	R227
110-16124j26-e	Resistor 120K 1/6W ±5% CF 26mm (RoHS)	1	R233
110-16152j26-e	Resistor 1.5K 1/6W ±5% CF 26mm (RoHS)	1	R302
110-16183j26-e	Resistor 18K 1/6W ±5% CF 26mm (RoHS)	1	R262
110-16203j26-e	Resistor 20K 1/6W ±5% CF 26mm (RoHS)	2	R237,R238
110-16223j26-e	Resistor 22K 1/6W ±5% CF 26mm (RoHS)	6	R247,R255,R256,R249,R250,R261
110-16303j26-e	Resistor 30K 1/6W ±5% CF 26mm (RoHS)	2	R223,R224
110-16472j26-e	Resistor 4.7K 1/6W ±5% CF 26mm (RoHS)	3	R200,R207,R258
110-16473j26-e	Resistor 47K 1/6W ±5% CF 26mm (RoHS)	2	R219,R264
110-16474j26-e	Resistor 470K 1/6W ±5% CF 26mm (RoHS)	1	R251
110-16475j26-e	Resistor 4.7M 1/6W ±5% CF 26mm (RoHS)	1	R303
110-16512j26-e	Resistor 5.1K 1/6W ±5% CF 26mm (RoHS)	2	R210,R211
110-16684j26-e	Resistor 680K 1/6W CF 26mm (RoHS)	1	R252
110-16752j26-e	Resistor 7.5K 1/6W ±5% CF 26mm TA (RoHS)	1	R234
110-16913j26-e	Resistor 91K 1/6W ±5% CF 26mm (RoHS)	4	R203,R204,R205,R206
116-169091f26-e	metal film Resistor 9.09K 1/6W±1% MF 26mm (RoHS)	1	R301
115-h503a102-e	variable Resistor RV16AE-20B2-15K-A54-104(A50K) LEVEL	1	VR201
116-201001j5vx-e	metalized oxide film Resistor 1K 2W ±5% 5mm (RoHS)	1	R267
<i>Capacitors</i>			
129-a154j633-e	METALIZE CAP. 0.15U 63V ±5% MSC (RoHS)	2	C221,C222

Part number	Description	Qty	Reference Designator
<b>PREAMP PCB</b>			
129-a224j633-e	METALIZE CAP. 0.22uF 63V ±5% MSC (RoHS)	1	C218
130-2b103k503-e	DISC Capacitor 0.01u 50V ±10% (RoHS)	1	C238
130-2b221k503-e	DISC Capacitor 220P 50V ±10% (RoHS)	12	C200,C204,C205,C207,C208,C210,C211,C212,C214,C220,C230,C237
130-3f104z503-e	DISC Capacitor 0.1U 50V +80/-20% (RoHS)	8	C232,C242,C244,C245,C246,C252,C254,C256
132-183j503-e	MYLAR Capacitor 0.018uF 50V ±5% (RoHS)	1	C223
132-223ja03-e	MYLAR Capacitor 0.022uF 100V ±5% (RoHS)	1	C215
132-473j503-e	MYLAR Capacitor 0.047U 50V ±5% (RoHS)	1	C224
132-563j503-e	MYLAR Capacitor 0.056U 50V ±5% (RoHS)	1	C216
132-823j503-e	MYLAR Capacitor 0.056U 50V ±5% (RoHS)	1	C217
135-3105m50-e	Electrolytic CAP. 1U 50V ±20% (RoHS)	1	C228
135-3106m50-e	Electrolytic CAP. 10uF 50V ±20% (RoHS)	12	C201,C202,C206,C213,C219,C231,C241,C243,C251,C253,C248,C247
135-3107m16-e	Electrolytic CAP. 100uF 16V ±20% (RoHS)	1	C234
135-3226m50-e	Electrolytic CAP. 22U 50V ±20% (RoHS)	1	C225
135-3475m16-e	Electrolytic CAP.4.7U 16V ±20% (RoHS)	1	C233
135-3107m50-e	Electrolytic CAP. 100U 50V ±20% (RoHS)	1	C301
135-3227m50-e	Electrolytic CAP. 220uF 50V ±20% (RoHS)	1	C300
<b>Semiconductors</b>			
192-027c1815gr-e	Transistor 2SC1815GR NPN	4	Q201,Q207,Q208,Q206
197-631n4148-e	DIODE 500mW 75V 1N4148 Panjit (RoHS)	13	D201,D202,D203,D204,D205,D206,D207,D208,D214,D215,D216,D301,D302
199-65000513g-e	ZENER DIODE GDZJ5.1B 500mW 5.1V 2% ROHM 1N5231B(RoHS)	1	D213
190-06m4558d-e	I.C. OPA 4558D dual inline (RoHS)	1	U203
190-06m4558ld-e	I.C. NJRC NJM4558LD singlerow inline (RoHS) Dual Op-amp	1	U204
190-16tl074cn-e	I.C TL074CN ST Quad Op-Amp	2	U201,U202
197-141n4004-e	*DIODE 1N4004 shaping short crus (RoHS)	4	D217,D218,D219,D220
190-05ps25051-e	photoelectric coupler PS2505-1 NEC (RoHS)	1	U1
<b>Miscellaneous</b>			
162-50122004-e	drop-out line 120mm RED/WHT 2PIN (RoHS)	1	D209
162-5014d008-e	WIRE 2468#26AWG RED/WHT length 140mm (RoHS)	1	P1-P2
162-a016d001-e	mixing wire UL1007 160/80mm#26 (RoHS)	1	W202
174-0rca313v-e	RCA JACK RCA-313G V/R/W (RoHS)	1	JK201
174-20810360g-e	jack SPK JK BP 8PIN (RoHS) SH0810360G US1.35	1	JK202
174-6ej3556agp-e	PHONE JACK EJ3556A-GP (RoHS)	1	JK203
175-1b08v01-e	WIRE CONNECTOR & BASE 8 PIN PITCH=2.0mm(RoHS)	1	W202
180-tms7210v-e	SWITCH SLIDE 6PIN MS7210V (RoHS)	3	SW201,SW202,SW203
362-FE-00041-0LAE	PCB support 11.75*8.5*12.5H (RoHS)	2	
<b>LIMITER PCB</b>			
<b>Resistors</b>			
110-16103j26-e	Resistor 10K 1/6W ±5% CF 26mm (RoHS)	6	R301,R303,R304,R308,R309,R314
110-16153j26-e	Resistor 15K 1/6W ±5% CF 26mm (RoHS)	1	R302
110-16223j26-e	Resistor 22K 1/6W ±5% CF 26mm (RoHS)	2	R310,R312
110-16333j26-e	Resistor 33K 1/6W ±5% CF 26mm (RoHS)	1	R305
110-16474j26-e	Resistor 470K 1/6W ±5% CF 26mm (RoHS)	1	R307
110-16751j26-e	Resistor 750Ω 1/6W ±5% CF 26mm (RoHS)	2	R311,R313
110-16755j26-e	Resistor 7.5M 1/6W ±5% CF 26mm (RoHS)	1	R306
<b>Capacitors</b>			
135-3226m50-e	Electrolytic CAP. 22U 50V ±20% (RoHS)	1	C301
135-3476m25-e	Electrolytic CAP. 47U 25V ±20% (RoHS)	1	C304
130-3f104z503-e	DISC Capacitor 0.1U 50V +80/-20% (RoHS)	2	C305,C306


Part number	Description	Qty	Reference Designator
<b>LIMITER PCB</b>			
132-103j503-e	MYLAR Capacitor 0.01uF 50V ±5% (RoHS)	2	C302,C303
<i>Semiconductors</i>			
190-16tl074cn-e	*I.C TL074CN ST QUAD OP-AMP	1	U301
192-027c1815gr-e	*Transistor 2SC1815GR NPN	2	Q301,Q302
197-631n4148-e	Diode1N4148 26mm	2	D301,D302
<i>Miscellaneous</i>			
175-9f40hr2-e	WIRE CONNECTOR & BASE 40PIN PITCH=2.54mm HR2*40 (RoHS)		
162-10059001-e	single wire 50mm WHITE UL1007 AWG26 6:6 (RoHS)	1	
162-50159002-e	WIRE 7PIN 150mm AWG26 UL 2468 (RoHS)	1	P302
<b>MISCELLANEOUS/MECHANICAL</b>			
150-e8604107-e	Power transformer EI-86 60Hz 120V TT0869906580	1	
152-u602015-e	power cord joint SVT FT-2 6FT bi-insulation (RoHS)	1	
154-u25006t0-e	fuse 2.5A 250V 20mm (RoHS)	1	
155-520020-e	fuse holder R3-11 (RoHS)	1	
162-10082007-e	WIRE RED 18AWG 80mm 8mm#1015 (RoHS)	1	
162-5020d006-e	WIRE UL2468 200mm 2.5mmpitch RED/WHT (RoHS)	1	
162-a0452001-e	WIRE UL1007 #16 450mm #110/ #205 0.5T (RoHS)	1	
176-wjce1-e	dead end CE-1 (RoHS)	1	
180-pbr12c11s-e	power PUSH BR12C11S (RoHS) POWER ON-OFF	1	SW100
302-AL-00435-1BFE	aluminium backboard 270*215*2.5T anode blackening (RoHS)	1	
306-ABS-00004-0BAE	rear housing REAR CABINET 268*213*102 A.B.S UL (RoHS)	1	
311-ABS-00028-0BAE	plastic KNOB 46077-W soft material P.V.C. (RoHS) LEVEL	1	
320-RUB-00033-0BAE	RUBBER PAD 25*21*4t glue on back (RoHS)	4	
323-AL-00106-0BBE	HEAT SINK 117.5*71.5*25 anode blackening (RoHS)	1	
333-EVA-00096-0BAE	EVA pad wide sides213*15*2.0mm (RoHS)	2	
333-EVA-00097-0BAE	EVA pad wide sides213*15*1.0t (RoHS)	2	
333-EVA-00121-0BAE	8PIN BB EVA (RoHS)	1	
333-EVA-00132-0BAE	EVA pad long sides238*15*2.0mm (RoHS)	2	
333-EVA-00133-0BAE	EVA pad long sides238*15*1.0t (RoHS)	2	
333-EVA-00188-0BAE	EVA pad 170x5x1t glue on back (RoHS)	1	
333-EVA-00220-0BAE	EVA pad length sides225*15*1t UL (RoHS)	1	
333-EVA-00866-0BAE	EVA 48*18*1.5T (RoHS)	1	
335-NYL-00002-0BAE	WIRE CLIP 4K-4 NO-BB(RoHS)	1	
335-NYL-05015-0BAE	power cord fixed button SB4F-2 black (RoHS)	1	
350-EM04012D024-E	4 ¢*12 wood screw electrical black (RoHS)	4	
351-AM03008A079-E	M3*8 machine screw electrical black (RoHS)	8	
351-HM04016A218-E	M4*16 machine screw electrical black (RoHS)	4	
352-AM03008D040-E	¢ 3*8 B type ping screw electrical black (RoHS)	6	
352-AM03010D063-E	¢ 3*10 B type ping screw electrical black (RoHS)	2	
352-AM03010D065-E	¢ 3*10 P type ping screw electrical black (RoHS)	3	
354-GM04002-E	M4 nut with gear pad electrical black (RoHS)	4	
362-FE-00013-0LAE	PCB support L TYPE t=1.6mm S.P.C.C 89*9*1.6T (RoHS)	2	

# Integrated Circuit Diagrams


4558 Dual Op Amp  
U101,203

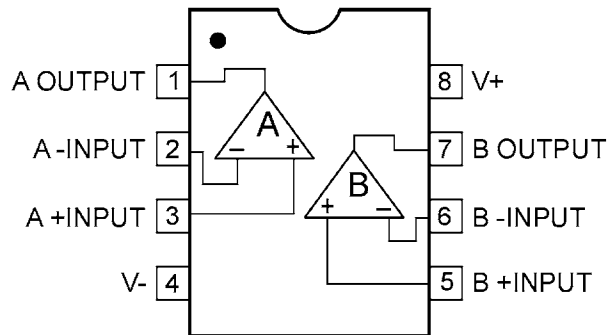


TIP35C, TIP36C  
Q107,108

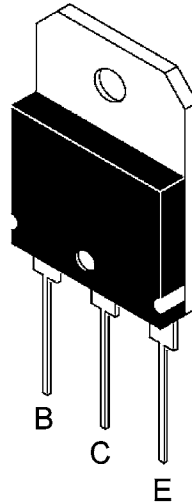


OPAMP, QUAD 14P DIL TL074  
U201, 202, 301

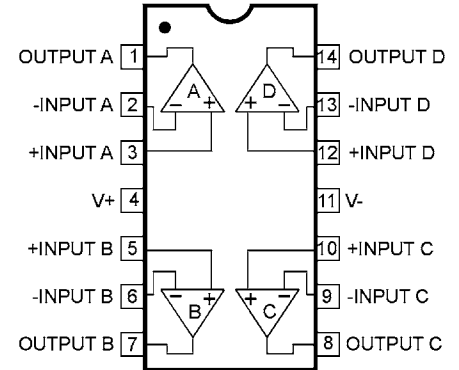


2N5551  
Q103, 109

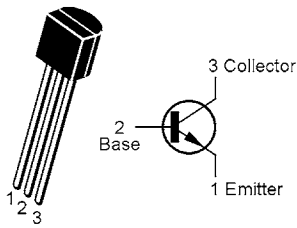


2N5401  
Q104, 110

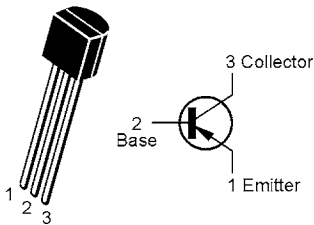


4558 Dual Op Amp U204

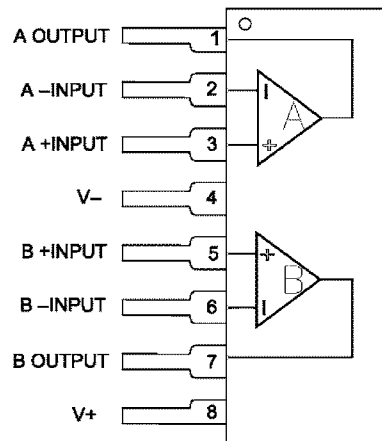

PS2505-1 U1

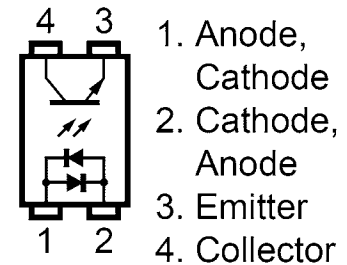

2SA1015  
Q114,116

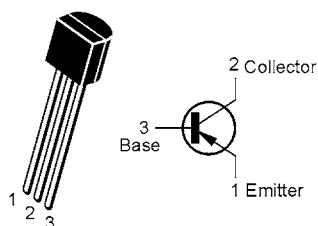



2SD669A, 2SB649A  
KSB772, KSD882  
Q105, 106, 117, 119




1. Emitter
2. Collector
3. Base

2SC1815  
Q101,102,111,112,113,115,118,  
201,206,207,301,302.

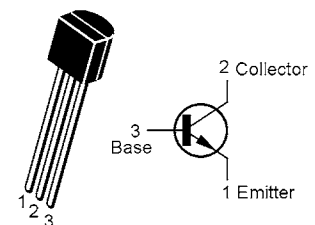

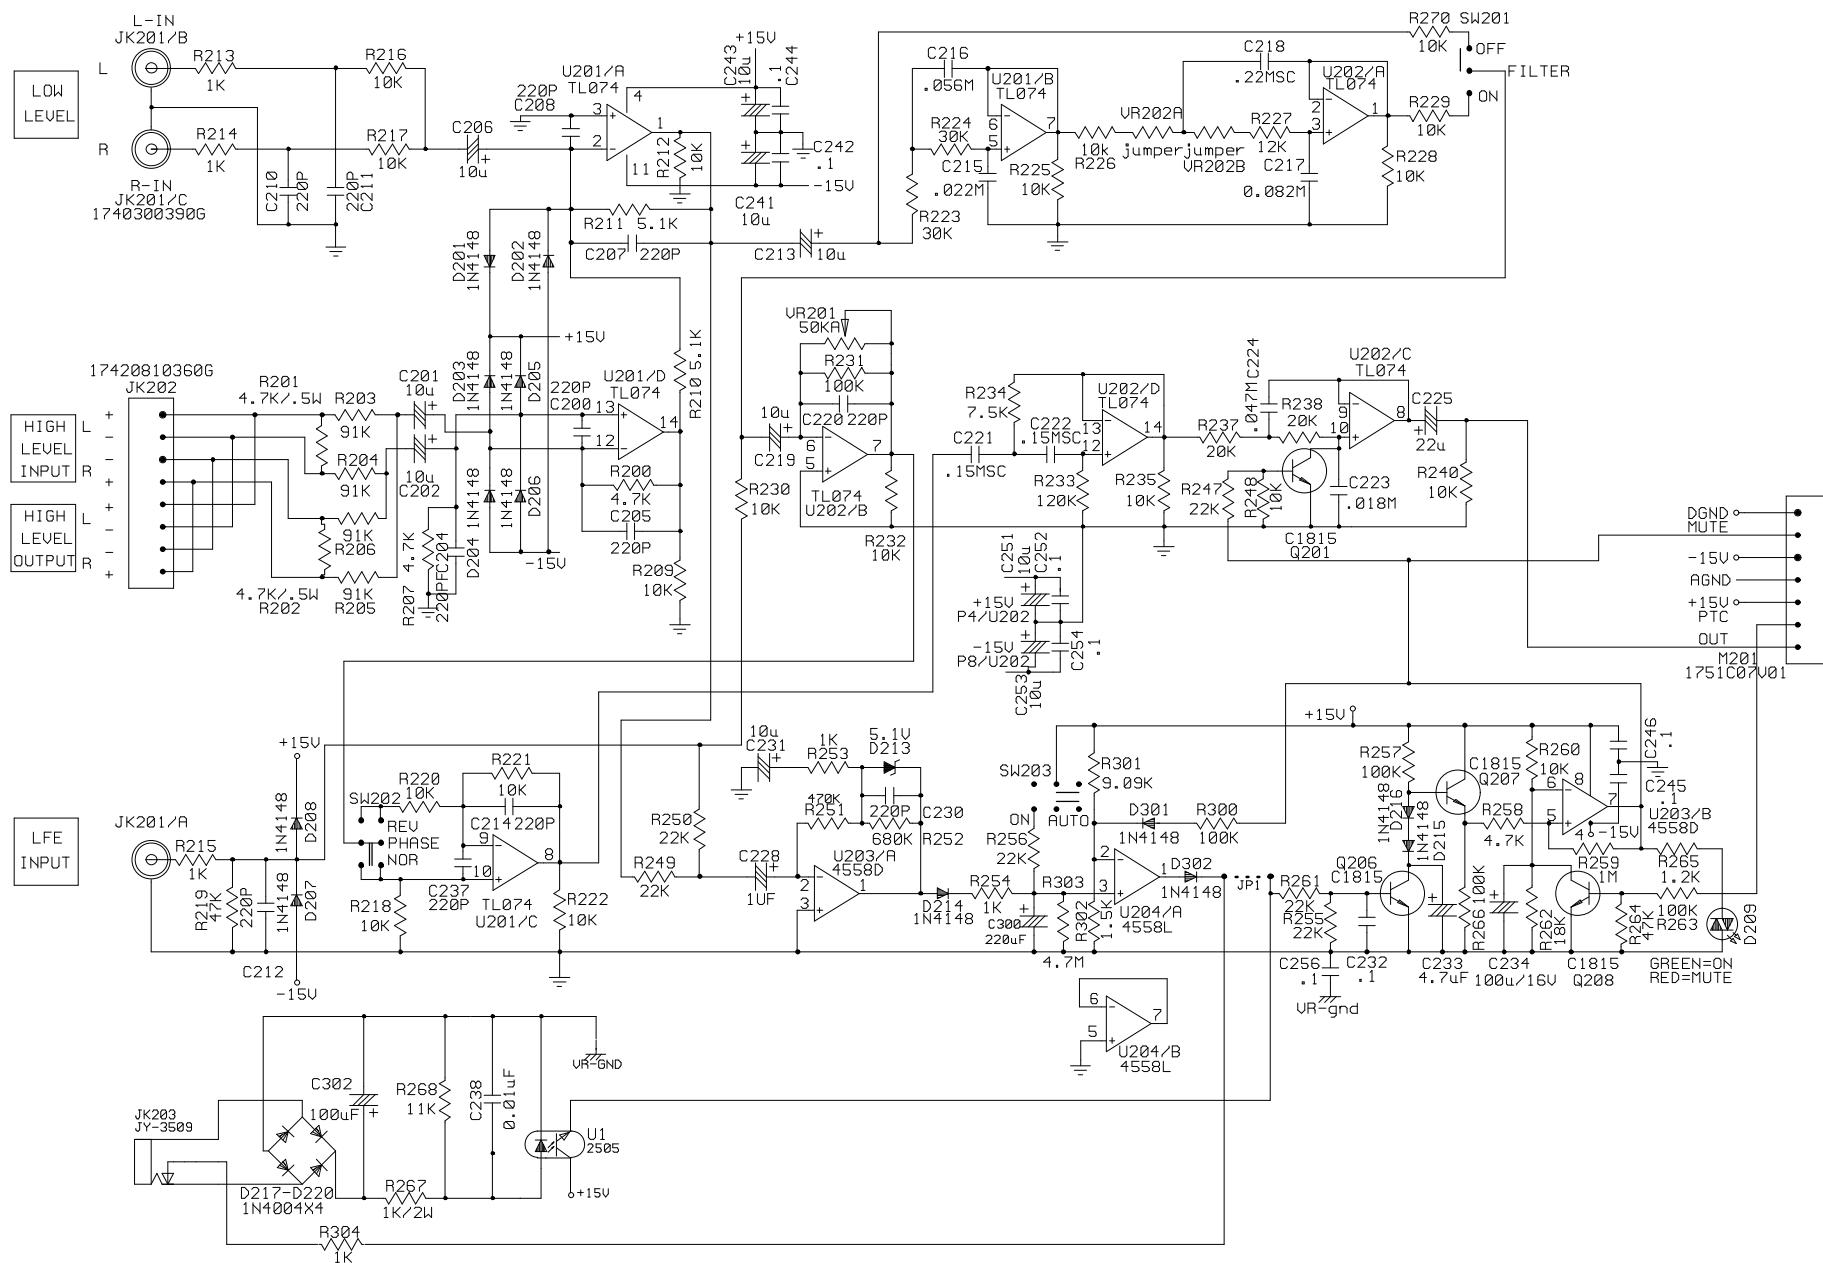



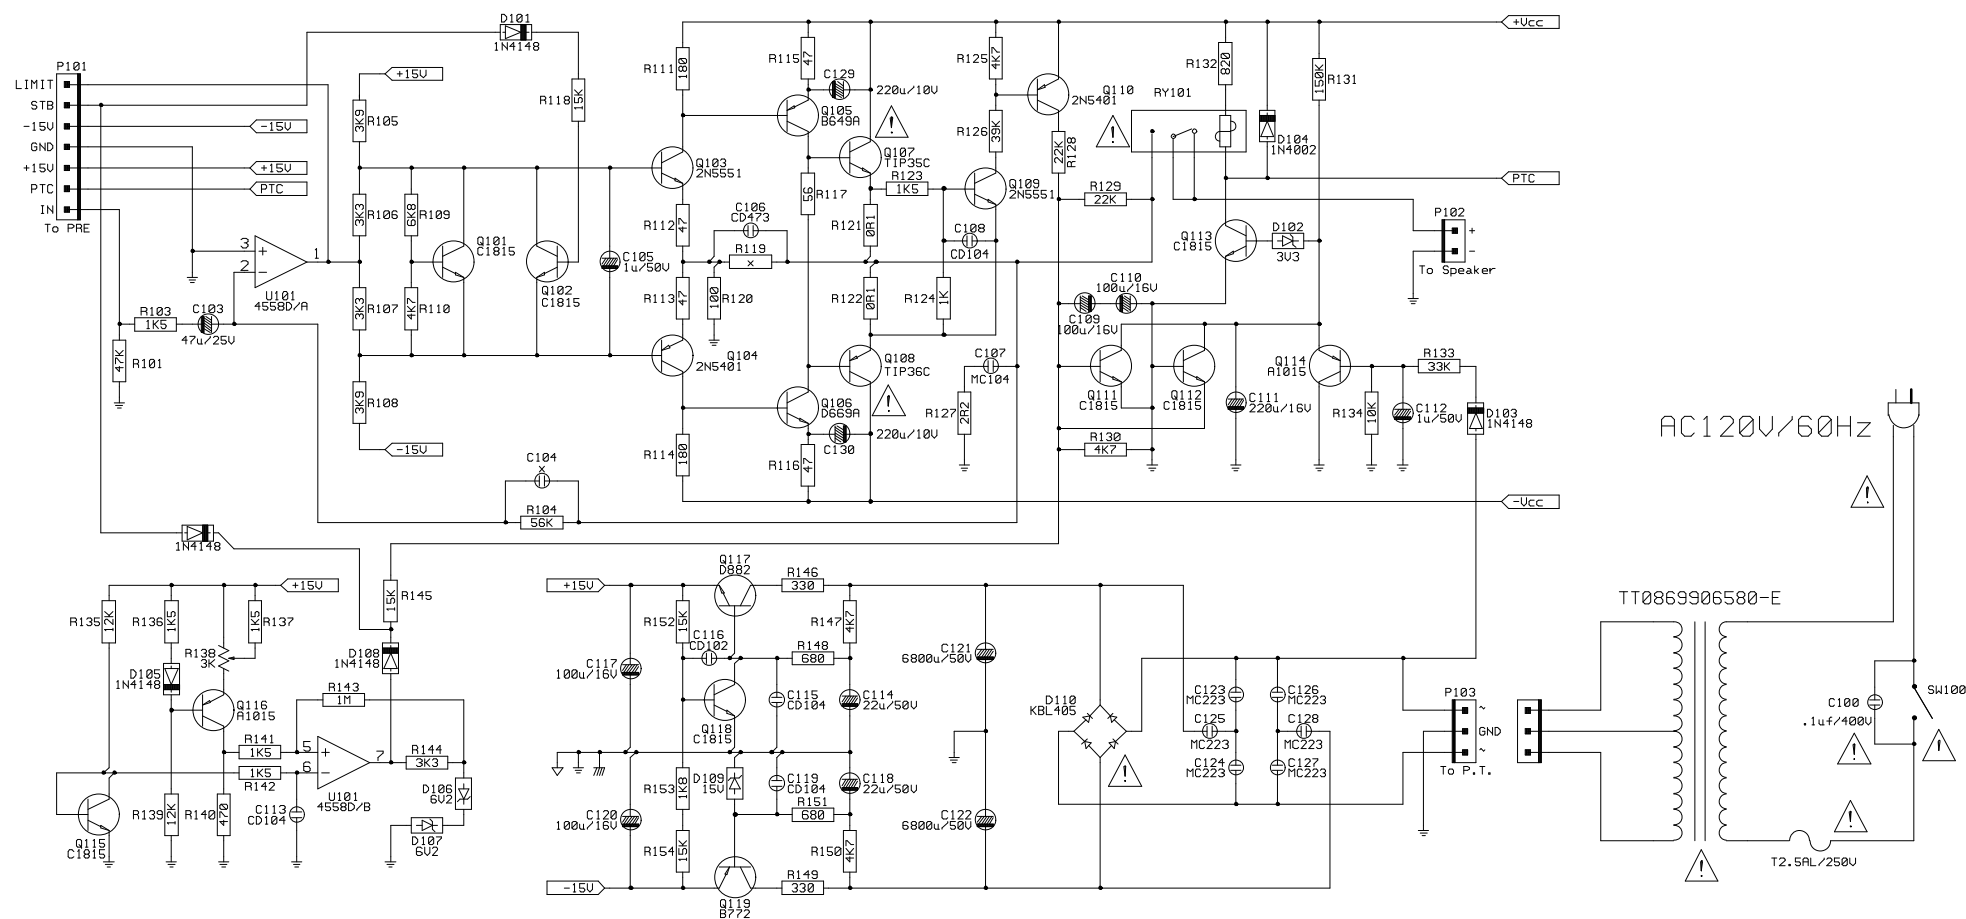

APVD	NAME: POWER-AMP	3 / 3
DSGN	MODEL: HKTS15	REV:A0
DRAW	CUSTOMER: HARMAN/KARDON	
	DATE: 2006.11.18	