


JVC


SERVICE MANUAL

MICRO COMPONENT SYSTEM

FS-5000/FS-6000

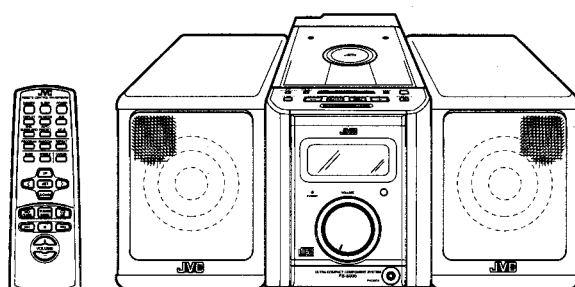

FS-5000

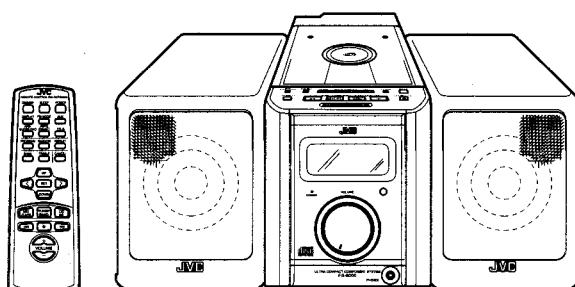

FS-6000

Area Suffix

J ----- The U.S.A
& Canada

COMPACT
disc
DIGITAL AUDIO

Contents

Safety Precautions	1-2	Maintenance of Laser Pickup	2-23
Importance Administering point on the safety	1-3	Replacement of Laser Pickup	2-23
Important for Laser Products	1-4	Self diagnosis Function of CD	2-24
Instructions (For FS-5000)	1-5~14	Block Diagrams	2-26
Description of Major ICs	2-1	Schematic Diagrams	2-27
Internal connections of FL Display	2-11	Printed Circuit Boards	2-33~35
Removal of Main parts	2-13	Parts List	3-1~17
Main Adjustment	2-18		
Flow of Functional Operation			
Until TOC read	2-22		

Safety Precautions

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

5. Leakage current check (Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.)

● Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now reverse the plug in the AC outlet and repeat each measurement voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

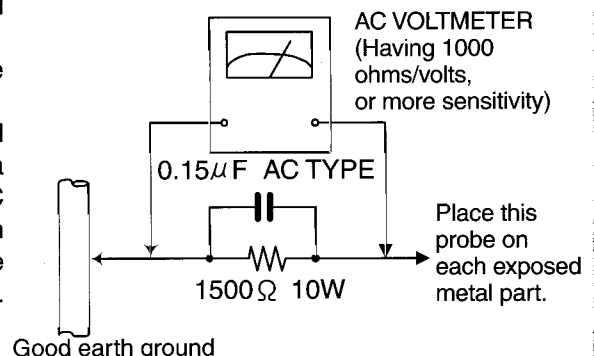


Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

⚠ CAUTION Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.

■ Importance Administering point on the Safety

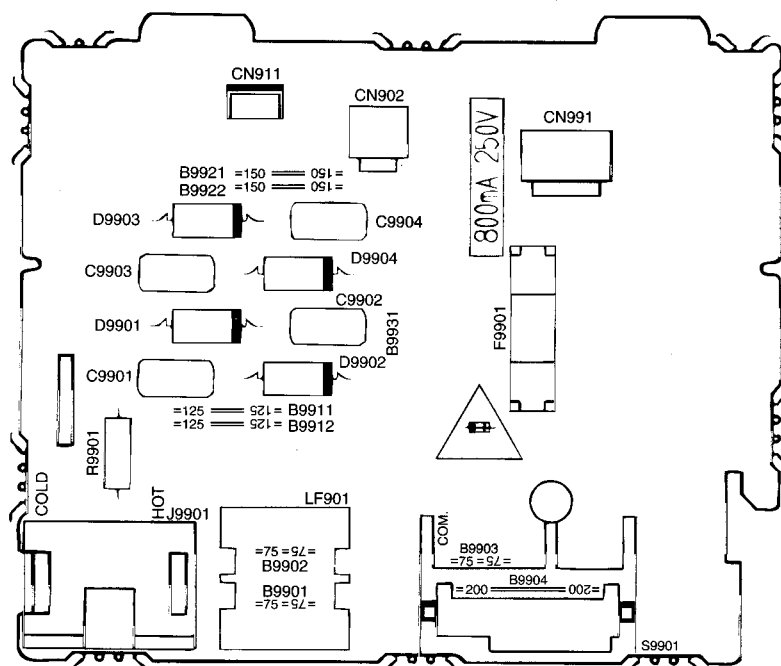

J ONLY

Full Fuse Replacement Marking

Graphic symbol mark
(This symbol means fast blow type fuse.)



should be read as follows ;

FUSE CAUTION

FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE AND RATING OF FUSES ;

F9901 : 800mA, 250V

J SEULEMENT

Marquage Pour Le Remplacement Complet De Fusible

Le symbole graphique (Ce symbole signifie fusible de type à fusion rapide.)



doit être interprété comme suit ;

PRECAUTIONS SUR LES FUSIBLES

POUR UNE PROTECTION CONTINUE CONTRE DES RISQUES D'INCENDIE, REMPLACER SEULEMENT PAR UN FUSIBLE DU MEME TYPE ;

F9901 : 800mA, 250V

Important for Laser Products

- 1.**CLASS 1 LASER PRODUCT**
- 2.**DANGER** : Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- 3.**CAUTION** : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.
- 4.**CAUTION** : The compact disc player uses invisible laserradiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.



- 5.**CAUTION** : If safety switches malfunction, the laser is able to function.
- 6.**CAUTION** : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


WARNING : Osynlig laserstrålning är denna del är öppnad och spårren är urkopplad. Betrakta ej strålen. VARO : Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle.Älä katso säteeseen.	ADVARSEL : Usynlig laserstrålning ved åbning , når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. ADVARSEL : Usynlig laserstrålning ved åpning,når sikkerhetsbryteren er avslott. unngå utsettelse for stråling.
---	--

REPRODUCTION AND POSITION OF LABELS


WARNING LABEL

DANGER : Invisible laser radiation when open and interlock or defeated. AVOID DIRECT EXPOSURE TO BEAM (e)	VARO : Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle.Älä katso säteeseen. (d)	WARNING : Osynlig laserstrålning är denna del är öppnad och spårren är urkopplad. Betrakta ej strålen. (s)	ADVARSEL :Usynlig laserstrålning ved åbning , når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. (f)
--	---	---	---

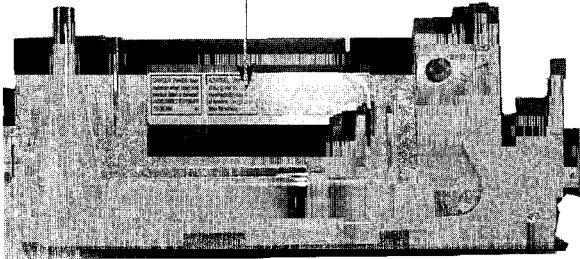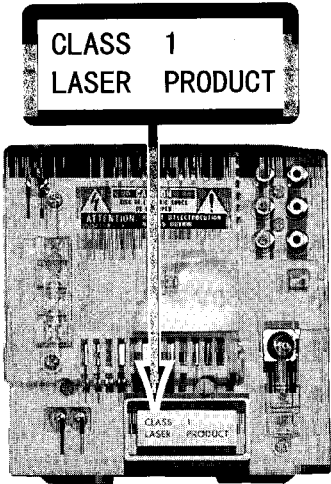

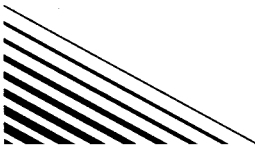

JVC

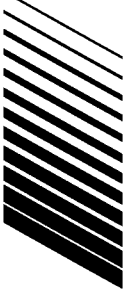


Instructions (For UX-5500R)

ULTRA COMPACT COMPONENT SYSTEM
SISTEMAS DE COMPONENTES ULTRA COMPACTOS
SYSTEME DE COMPOSANTS ULTRA COMPACT

FS-5000
FS-6000

JVC
VICTOR COMPANY OF JAPAN, LIMITED

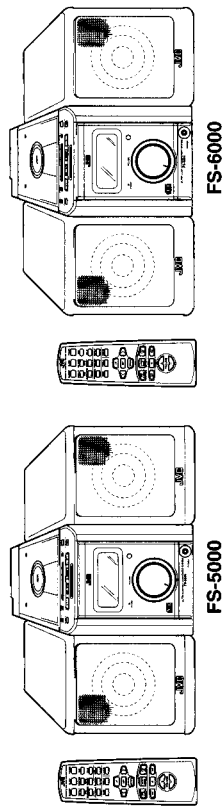

COMPACT
disc
DIGITAL AUDIO

INSTRUCTIONS
MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS


For Customer Use:
Enter below the Model No. and Serial No.
which are located either on the rear, bot-
tom or side of the cabinet. Retain this
information for future reference.

Model No.	
Serial No.	

LVT0086-001A
[J]

Warnings, Cautions and Others /
Mises en garde, précautions et indications diverses

(For U.S.A.)

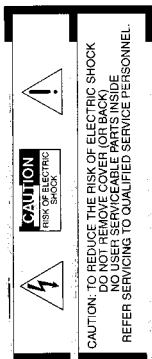

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IDENTIFICATION AND CERTIFICATION LABEL



• PLACED ON EXTERIOR SURFACE

Notes:

- 1 The date of manufacture.
- 2 The ID code of manufacturing plant.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For Canada/pour le Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT; FULLY INSERT.
PRECAUTION: POUR EVITER LES CHOCs ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

1. CLASS 1 LASER PRODUCT
2. **DANGER:** invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.

1. **PRODUIT LASER CLASSE 1**
2. **ATTENTION:** Radiation laser invisible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

Caution — POWER switch!

Disconnect the mains plug to shut the power off completely. The POWER switch in any position does not disconnect the mains line. The power can be remote controlled.

Attention — Commutateur POWER!

Déconnecter la fiche de secteur pour couper complètement le courant. Le commutateur POWER ne coupe jamais complètement la ligne de secteur, quelle que soit sa position. Le courant peut être télécommandé.

Thank you for purchasing the JVC Ultra Compact Component System. We hope it will be a valued addition to your home, giving you years of enjoyment. Be sure to read this instruction manual carefully before operating your new stereo system. In it you will find all the information you need to set up and use the system. If you have a query that is not answered by the manual, please contact your dealer.

Features

- Here are some of the things that make your System both powerful and simple to use.
- The controls and operations have been redesigned to make them very easy to use, freeing you to just enjoy the music.
 - With JVC's **COMPU PLAY** you can turn on the System and automatically start the Radio or CD Player with a single touch.
 - The System incorporates Active Hyper Bass Super PRO circuitry to faithfully reproduce low frequency sounds.
 - A 45-station preset capability (30 FM and 15 AM) in addition to auto-tune and manual tuning.
 - Versatile CD options include repeat, random and program play.
 - Timer functions: set the system to automatically come on, switch off.
 - You can connect various external units, such as an MD recorder, tape deck, etc.

How This Manual Is Organized

- Basic information that is the same for many different functions - e.g. setting the volume - is given in the section 'Common Operations', and not repeated under each function.
 - The names of buttons/controls and display messages are written in all capital letters: e.g. TUNER BAND, "NO DISC".
 - System functions are written with an initial capital letter only: e.g. Normal Play.
- Use the table of contents to look up specific information you require.
- We've enjoyed making this manual for you, and hope it serves you in enjoying the many features built into your System.

IMPORTANT CAUTIONS

- 1. Installation of the System**
 - Select a place which is level, dry and neither too hot nor too cold. (Between 5°C and 35°C or 41°F and 95°F.)
 - Leave sufficient distance between the System and a TV.
 - Do not use the System in a place subject to vibrations.

- 2. Power cord**

- Do not handle the power cord with wet hands!
- Some power (5W) is always consumed as long as the power cord is connected to the wall outlet.
- When unplugging the System from the wall outlet, always pull the plug, not the power cord.

- 3. Malfunctions, etc.**

- There are no user serviceable parts inside. In case of system failure, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the System.

Table of Contents

Features	1
How This Manual Is Organized	1
IMPORTANT CAUTIONS	1
Getting Started	2
Common Operations	6
Using the Tuner	8
Using the CD Player	10
Listening to External Equipments	12
Using the Timers	13
Care And Maintenance	15
Troubleshooting	16
Specifications	16

Getting Started

Accessories


Check that you have all of the following items, which are supplied with the System.

- Power Cord (1)
- AM Loop Antenna (1)
- Remote Control (1)
- Batteries (2)
- FM Wire Antenna (1)
- Speaker Cords (2)

If any of these items are missing, contact your dealer immediately.

How To Put Batteries In the Remote Control

Match the polarity (+ and -) on the batteries with the + and - markings in the battery compartment.

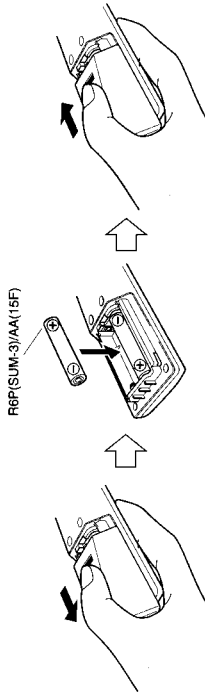


CAUTION: Handle batteries properly.

- To avoid battery leakage or explosion:
- Remove batteries when the Remote Control will not be used for a long time.
 - When you need to replace the batteries, replace both batteries at the same time with new ones.
 - Don't use an old battery with a new one.
 - Don't use different types of batteries together.


Using the Remote Control

The Remote Control makes it easy to use many of the functions of the System from a distance of up to 7m (23 feet) away. You need to point the Remote Control at the remote sensor on the System's front panel.

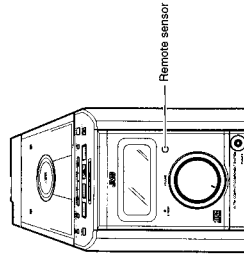


CAUTION: Make all connections before plugging the System into an AC power outlet.

Connecting the FM Antenna

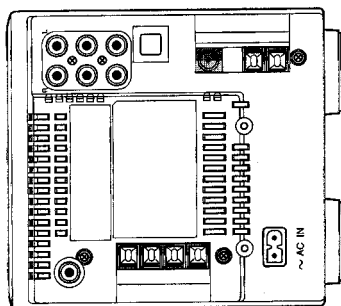

Using the Supplied Wire Antenna




Using the Coaxial Type Connector (Not Supplied)

A 75-ohm antenna with coaxial type connector should be connected to the FM 75-ohm COAXIAL terminal.




If reception is poor, connect the outside antenna.




Note: Before attaching a 75 ohm coaxial lead (the kind with a round wire going to an outside antenna), disconnect the supplied FM Wire Antenna.

CAUTION: To avoid noise, keep antennas away from the System, the connecting cord and the AC power cord.


Connecting the AM Antenna

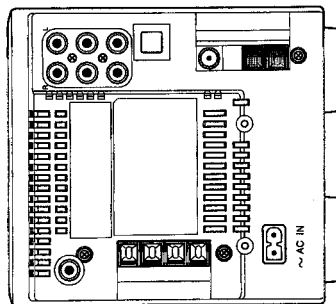

AM loop antenna (Supplied)

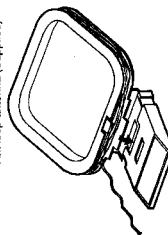

Attach the AM loop to its base by snapping the tabs on the loop into the slot in the base.

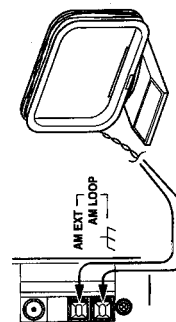


Turn the loop until you have the best reception.

CAUTION: Make all connections before plugging the System into an AC power outlet.

Connecting the Speakers

1. Open the Speaker terminals on the rear of the Unit, and on the Speakers themselves.
2. Connect the speaker cords between the terminals as shown below.

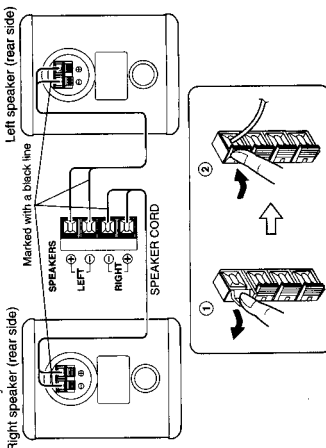


CAUTION: A TV may display irregular colors if located near the speakers. If this happens, set the speakers away from the TV.

Removing the speaker grilles

The speaker grilles can be removed.

1. Insert your fingers at the top and pull towards you.
2. Also pull the bottom towards you.


When Attaching the speaker grille

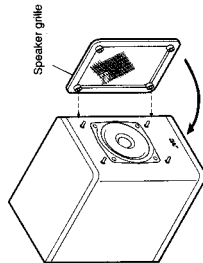

Connecting an MD Recorder/Tape Deck

Connect (optional) signal cords between the System's MD/TAPE IN/OUT terminals and the output/input terminals of the external MD recorder, tape deck, etc.


You can then listen to the external source through the System, or record the System's CD player or tuner to the external unit.

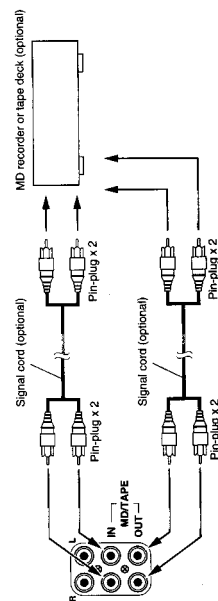

CAUTION: Make all connections before plugging the System into an AC power outlet.


Connecting Auxiliary Equipment

Connect an (optional) signal cord between the AUX terminals on the System and the output terminals of your auxiliary equipment, (e.g. turntable). You can listen to this source.



Connecting an MD Recorder, etc (Digital Output)

Unplug the cap and connect an (optional) optical digital cord between the System's OPTICAL DIGITAL OUT terminal and the input terminal of the MD recorder, etc. You can record the digital output signal from the System's CD Player to the MD recorder, etc.

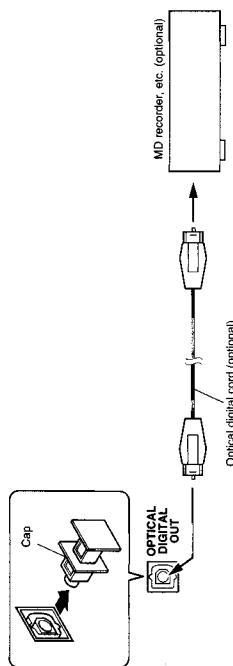


Connecting a Subwoofer System

Connect an (optional) signal cord between the SUB WOOFER OUT terminal and an external JVC subwoofer system, etc.



Connecting the AC Power Cord

Firmly insert the supplied AC power cord into the AC inlet on the back of the Unit.

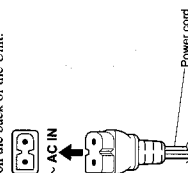

The provided AC power cord for this unit has certain one-way direction connections to prevent electric shock. Refer to the illustration for correct connection.

CAUTIONS:

- ONLY USE THE JVC POWER CORD PROVIDED WITH THIS SYSTEM TO AVOID MALFUNCTION OR DAMAGE TO THE SYSTEM.
- BE SURE TO UNPLUG THE POWER CORD FROM THE OUTLET WHEN GOING OUT OR WHEN THE SYSTEM IS NOT IN USE FOR AN EXTENDED PERIOD OF TIME.

Now you can plug the AC power cord into the wall outlet, and your System is at your command!

COMPU PLAY

JVC's COMPU PLAY feature lets you control the most frequently used System functions with a single touch. With One Touch Operation you can play a CD, turn on the radio, or listen to an external equipment with a single press of the play button for that function. One Touch Operation turns the power on for you, then starts the function you have specified. If the System is not ready (no CD in place), the System still powers on so you can insert a CD.

How One Touch Operation works in each case is explained in the section dealing with that function.

The COMPU PLAY buttons are:


On the Unit

CD ▶ II button
TUNER BAND button
MD/TAPE button
AUX button

On the Remote Control

CD ▶ II button
TUNER BAND button
MD/TAPE button
AUX button

Common Operations

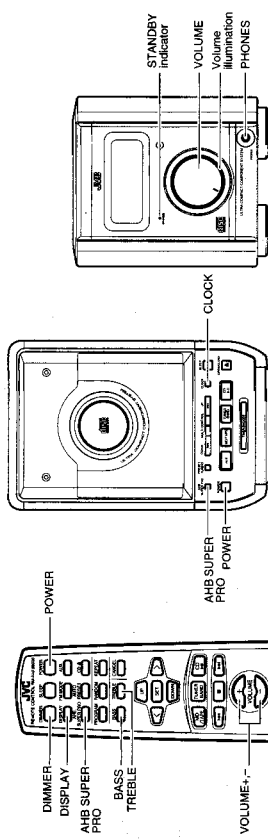

Turning the Power On and Off

Turning the System On

Press the POWER button.

The display comes on and the STANDBY indicator goes out. The System comes on ready to continue in the mode it was in when the power was last turned off.




- For example, if the last thing you were doing was listening to a CD, you are now ready to listen to a CD again. If you wish, you can change to another source.
- If you were listening to the Tuner last, the Tuner comes on playing the station it was last set to.

Turning the System Off

Press the POWER button again.

The STANDBY indicator lights up and the display is blank, except for the clock display.



Adjusting the Brightness (DIMMER)

You can adjust the brightness of the display. To make the display brighter, press the DIMMER button on the Remote Control.

To make the display darker, press the DIMMER button on the Remote Control again.

- The brightness of the volume illumination is also adjusted. In Standby mode, the normal brightness is the same as the darker brightness for the powered System. When you press the DIMMER button in Standby mode, the brightness becomes further darker.

In standby mode, the volume illumination does not light.

- Some power (SW) is always consumed even though power is turned off (called Standby Mode).
- To switch off the System completely, unplug the AC power cord from the AC outlet. When you unplug the AC power cord, the clock will be reset to AM 12:00 after about 20 minutes, and preset Tuner stations will be erased after about 24 hours.

Adjusting the Volume

Turn the VOLUME control of the Unit clockwise to increase the volume or counterclockwise to decrease it.

OR

With the System turned on, press the VOLUME + button on the Remote Control to increase the volume or press the VOLUME - button to decrease it.

CAUTION: DO NOT turn on the System and/or start playing any source without first setting the VOLUME control to minimum, as a sudden blast of sound could damage your hearing, speakers and/or headphones.

For private listening

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume before connecting or putting on headphones.

Reinforcing the Bass Sound (AHB SUPER PRO)

You can reinforce the bass sound to maintain rich, full bass at low volume (you can use this effect only for Playback).

To get the effect, press the AHB (Active Hyper Bass) SUPER PRO button on the Unit or the Remote Control.

The "BASS" indicator lights up on the display.

To cancel the effect, press the button again.

The "BASS" indicator goes out.

Tone Control (BASS/TREBLE)


You can control the tone by changing the bass and treble.

BASS Control

You can adjust the bass level (low frequency range level) between -6 and 6. (0: Flat)

1 Press the BASS button on the Remote Control.

2 Press the UP or DOWN button on the Remote Control to adjust the bass level.




TREBLE Control

You can adjust the treble level (high frequency range level) between -6 and 6. (0: Flat)

1 Press the TREBLE button on the Remote Control.

2 Press the UP or DOWN button on the Remote Control to adjust the treble level.




Showing the Time (DISPLAY)

In addition to a standard digital clock, an analogue clock (which advances every five minutes) can be displayed. The clock display order varies according to the System mode:

In Standby mode

Every time you press the DISPLAY button on the Remote Control (or the CLOCK button on the Unit), the clock display changes as shown below.

Digital Clock + Analogue Clock → Analogue Clock → Digital Clock → (back to the beginning)




When the System is turned on

Every time you press the DISPLAY button on the Remote Control (or the CLOCK button on the Unit), the time display changes as follows:

Current Source + Analogue Clock → Analogue Clock → Digital Clock → (back to the beginning)

Note: The clock must be set to the correct time first. (See "Setting the Clock" on page 13.)


Using the Tuner

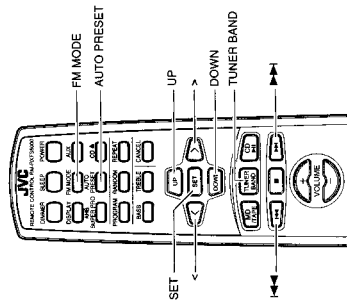

When the System is in use, the display shows other items as well.

For simplicity, we show here only the items described in this section. the desired preset number. After 1 second the display will show the preset number's band and frequency.

Example: Press the UP button until the preset number 12 "P-12" appears.



1 Press the TUNER BAND button to select the desired preset number. Its band and frequency are displayed.


Tuning in a Station

Press the TUNER BAND button.

The Band and Frequency you were last tuned to appear on the display.

(If the last station was selected using the preset number, the preset number appears first.)

Each time you press the button, the band alternates between FM and AM.




2 Select a station using one of the following methods.

Manual Tuning
Press the UP or DOWN button on the Unit or the Remote Control repeatedly to move from frequency to frequency until you find the station you want.

Auto Tuning
If you press and hold the UP or DOWN button on the Unit or the Remote Control for one second or more, the frequency changes down, or up, automatically until a station is found.


Preset Tuning using the Remote Control (Possible only after presetting stations)
Press the UP or DOWN button on the Remote Control to select

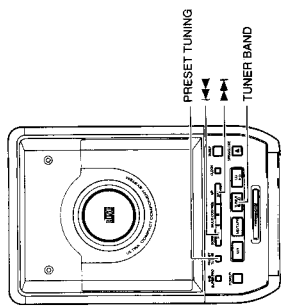

When the System is in use, the display shows other items as well.

For simplicity, we show here only the items described in this section. the desired preset number. After 1 second the display will show the preset number's band and frequency.

Example: Press the UP button until the preset number 12 "P-12" appears.




1 Press the TUNER BAND button to select the desired preset number. Its band and frequency are displayed.

Presetting Stations

You can preset up to 30 FM stations and up to 15 AM stations using the Remote Control.

Note: Preset numbers may have been set to factory test frequencies prior to shipment. This is not a malfunction. You can preset the stations you want into memory by following one of the presetting methods below.

Manual Presetting



1 Select a band by pressing the TUNER BAND button.

2 Press the UP or DOWN button to tune in a station.

3 Press the SET button.

"P-12" is displayed. The lower 2 digits blink.

Press the UP, DOWN, >, or < button to select the preset number.

- UP button: Increases the preset number by 1.
- DOWN button: Decreases the preset number by 1.
- > button: Increases the preset number by ten.
- < button: Decreases the preset number by ten.

Press the SET button.

After 1 second, the display returns to the broadcast frequency display.

Repeat above steps 1 to 5 for each station you want to store in memory with a preset number.

To cancel during presetting, press the CANCEL button in step 3 or 4.

To change the preset stations, repeat the same steps as above.

Auto Presetting

In each band, you can automatically preset FM-30, AM-15 stations. Preset numbers will be allocated as stations are found, starting from the lowest frequency and moving up the frequency.



Select a band by pressing the TUNER BAND button.

Press the AUTO PRESET button on the Remote Control for more than two seconds.

Repeat steps 1-2 for the other band.

If you want to change the preset stations, carry out the Manual Presetting for the desired preset numbers.

CAUTION: If the System is unplugged or if a power failure occurs, the preset stations will be erased after about 24 hours. If this happens, you will need to preset the stations again.

To Change the FM Reception Mode


When you are tuned into an FM stereo broadcast, the "ST (Stereo)" indicator lights up and you can hear stereo effects. If an FM stereo broadcast is hard to receive or noisy, you can select Monaural mode. Reception improves, but you lose any stereo effect.

Press the FM MODE button on the Remote Control so that the "MONO" indicator lights up on the display.



To restore the stereo effect, press the FM MODE button on the Remote Control so that the "MONO" indicator goes off.

Using the CD Player

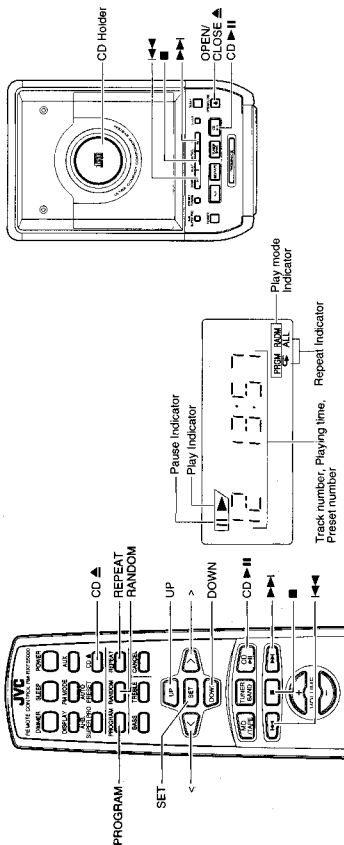

When the System is in use, the display shows other items as well. For simplicity, we show here only the items described in this section.

CAUTION: DO NOT try to close the CD holder by hand as it will be damaged.

You can use Normal, Random, Program or Repeat Play. Repeat Play can repeat all the tracks or just one of the tracks on the CD.

Here are the basic things you need to know to play a CD and locate the different tracks on it.

The Quickest Way To Start a CD Is With the One Touch Operation


- Press the CD II button.
- The power is automatically turned on. If a CD is already inserted, it will start playing from the first track.
- If no CD is inserted, "NO DISC" appears on the display and the CD Player remains in Stop mode.

To Insert a CD

Press the OPEN/CLOSE button (or the CD button on the Remote Control).

The CD holder opens.

Place a CD, with its label side up as shown below.

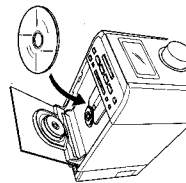

Press the button again to close the CD holder.

- You can place an 8 cm (3") CD without an adaptor.
- If the CD cannot be read correctly (because it is scratched, for example), "00 00000" appears on the display.

Basics of Using the CD Player - Normal Play

To Play a CD

Insert a CD.


Press the CD II button.

The Play (▶) indicator lights up on the display and the first track of the CD begins playing.

The CD Player automatically stops when the last track of the CD has finished playing.

To stop playing the CD, press the button on the Unit or the Remote Control.

The following information for the CD is displayed.

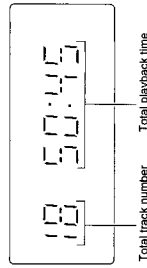

To stop playing and remove the CD, press the button to open the CD holder.

To pause, press the CD II button. The Pause (II) indicator will light up on the display.

To cancel pause, press the same button again. Play continues from the point where it was paused.

To Select a Track or Passage within a Track

During playback, press the button on the Unit or the Remote Control to select the track you want. The selected track starts playing.

- Press the **SKIP** button once to skip to the beginning of the next track.
- Press the **SKIP** button to skip to the beginning of the track being played. Press twice quickly to skip to the beginning of the previous track.

Search Play

Holding down the **SKIP** or **SKIP** button on the Unit or the Remote Control, during playback, will fast forward/backwards the CD so you can quickly find a particular passage in the track you are listening to.

Programming the Playing Order of the Tracks

You can program the playing order of the tracks using the Remote Control.

- You can program up to 20 tracks in any desired order.
- You can only make a program when the CD Player is stopped.


Insert a CD.

Press the **CD** button.

Press the **PROGRAM** button.

Press the **PROGRAM** button.

The System enters the programming mode and the "PRGM" indicator lights up.



Press the **UP**, **DOWN**, **>**, or **<** button to select the track to program.

- UP** button: Increases the track number by 1.
- DOWN** button: Decreases the track number by 1.
- >** button: Increases the track number by ten.
- <** button: Decreases the track number by ten.
- Example: for track 2, press the **UP** button twice. For track 12, press the **>** button, then press the **UP** button twice (or simply press the **UP** button 12 times).

Press the **SET** button.



Total playback time of the programmed tracks

Repeat steps 5 and 6 to select the other tracks for the program.



You can see the total playback time of programmed tracks on the display.

Press the **CD** button.

The System plays the tracks in the order you have programmed them.

- You can skip to a particular program track by pressing the **SKIP** or **SKIP** button during Program Play.

Listening to External Equipments

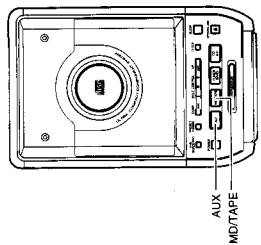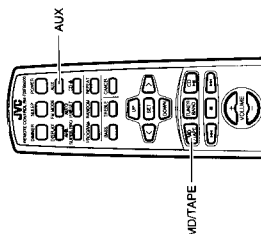

Listening to an External MD Recorder/Tape Deck


You can play an external MD recorder, tape deck, etc. through the system.

- First make sure that the external equipment is properly connected to the System. (See page 4).

Set the **VOLUME** control to minimum.

Press the **MD/TAPE** button.

When the System is in Standby mode, the System is automatically turned on.



Start playing the external equipment.

Adjust the **VOLUME** control to the desired listening level.

Apply sound effects, if you wish.

- Press the **AHB** Super PRO button to reinforce the bass sound.
- Press the **BASS/TREBLE** button to control the tone. (See "Tone Control" on page 7).

To exit MD/TAPE mode

You will automatically switch out of MD/TAPE mode when you select another source.

Note: You can also record the System's output signal to the external equipment. For operation, refer to the equipment's own instructions.

Listening to Auxiliary Equipment


You can listen to a turntable or other auxiliary equipment.

- First make sure that the external equipment is properly connected to the System. (See page 5).

Set the **VOLUME** to minimum position.

Press the **AUX** button.

When the System is in Standby mode, the System is automatically turned on.



Start playing the auxiliary equipment.

Adjust the **VOLUME** control to the desired listening level.

Apply sound effects, if you wish.


- Press the **AHB** Super PRO button to reinforce the bass sound.
- Press the **BASS/TREBLE** button to control the tone. (See "Tone Control" on page 7).

To exit AUX mode

You will automatically switch out of AUX mode when you select other source.

Note: For operation of the auxiliary equipment, refer to its own instructions.

Using the Timers

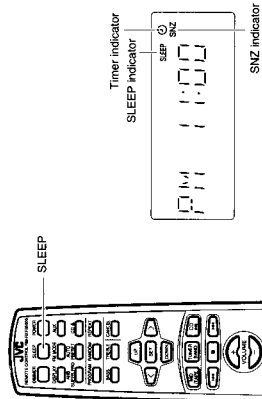

When the System is in use, the display shows other items as well. For simplicity, we show here only the items described in this section.


The timers let you control listening functions automatically.

Setting the Clock

You can set the clock whether the System is on or off.

Notes:

- The clock must be correctly set for the timers to work.
- The procedure must be completed within two minutes. Otherwise, the setting is cleared and must be repeated from the beginning.



Press the CLOCK button on the Unit for more than two seconds.

The clock rapidly blinks.

Press the << or >> button on the Unit to set the time.

Pressing the >> button moves the time forwards and pressing the << button moves it backwards. Hold down the button to move the time in 10-minute intervals.

Press the CLOCK button.

- The selected time is set and the seconds start counting from 0. Each time the hour's digits change from 11 to 12, the display alternates between AM and PM. (12 midnight is indicated as "AM 12:00" and 12 noon is indicated as "PM 12:00".)

CAUTION: If there is a power failure, the clock loses its setting after about 20 minutes. The display shows "AM 12:00" and blinks, and the clock must be reset.

Note: The clock may gain or lose one to two minutes per month.

Setting the Daily Timer

You can set the timer whether the System is on or off.

Once you have set the Daily Timer, the timer will be activated at the same time every day. It can be cancelled and re-activated whenever you wish.

The Timer indicator on the display shows when the Daily Timer you have set is in effect.

Note: Perform each setting within 30 seconds. Otherwise, the setting is cleared and the procedure must be repeated from the beginning.

Setting the SLEEP Timer

Use the Sleep Timer to turn the System off after a certain number of minutes when it is playing. By setting the Sleep Timer, you can fall asleep to music and know that your System will turn off by itself rather than play all night.

- You can only set the Sleep Timer when the System is on and a source is playing.

Play a CD or tune in to the desired station.

Press the SLEEP button on the Unit or the Remote Control.

The "SLEEP" indicator lights up.

Set the length of time you want the source to play before shutting off.

- Each time you press the SLEEP button, it changes the number of minutes shown on the display in this sequence:

→ 30 → 60 → 90 → 120 → Cancelled → (back to the beginning)

After setting the number of minutes for the Sleep Timer, the display will stop blinking after 5 seconds and return to the display as before setting the Sleep Timer.

The System is now set to turn off after the number of minutes you set.

To Confirm the Sleep Time


When the SLEEP button is pressed, the remaining sleep time is displayed. Wait for 5 seconds until the display returns to the original display.

To Cancel the SLEEP Timer Setting

Press the SLEEP button until the "SLEEP" indicator goes off on the display.

- If you are setting the Daily Timer, the System will be turned on at the set time to wake you up.

2. Press the >> or << button to select the music source you want to listen to. The display changes as shown below.




Setting the volume level

1. Press the TIMER/SNOOZE button on the Unit. The current volume setting blinks on the display.

2. Press the >> or << button to select the volume level.

• The current volume level will be used.
1 to 5: Low (1) to high (5) level. When the timer is turned on, the Volume will be automatically turned to the set position.

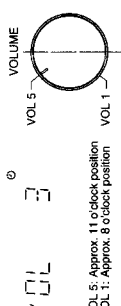

VOL. 5: Approx. 11 o'clock position

VOL. 1: Approx. 8 o'clock position

Press the TIMER/SNOOZE button on the Unit.

The timer setting is completed and the display returns to the display before you set the timer (The Timer indicator remains lit).

Before turning off the Unit, prepare the music source selected in step 4.

Tuner: Tune to the desired station.

CD: Insert a CD.

Press the POWER button to turn off the System.

To cancel the timer, press the TIMER/SNOOZE button. The Timer indicator goes out on the display.

To re-activate the cancelled timer, press the TIMER/SNOOZE button to light the Timer indicator. Then, press the TIMER/SNOOZE button repeatedly, until the display returns to the original display before setting the timer (Be sure that the Timer indicator is lit).

To confirm the timer settings, cancel the timer once by pressing the TIMER/SNOOZE button. Then, press the TIMER/SNOOZE button repeatedly, and you can see the current timer settings (ON time, OFF time, source, and volume).

To change the timer setting, repeat the setting procedure from the beginning.

- When the timer turns on, the Timer indicator starts blinking.
- When the timer turns on, it is possible to fade in the sound from volume level 0 (zero) to the preset volume.

CAUTION: If the System is unplugged, or a power failure occurs, the timer setting will be lost after about 24 hours. You will need to reset the clock first, then the timer.

5-Minute Snoozing

When the timer turns on the music source you can, if you wish, activate the 5-minute snoozing function to temporarily stop playback.


Press the TIMER/SNOOZE button on the Unit.

The "SNZ" indicator lights up on the display and the power is turned off for five minutes for snoozing.




Selecting the music source

1. Press the TIMER/SNOOZE button on the Unit. "TUNER" blinks on the display.




(After 2 seconds)

2. Press the >> or << button on the Unit to set the time you want the Unit to come on. Pressing the >> button moves the time forwards and pressing the << button moves the time backwards. Hold down the button to move the time in 10-minute intervals.



Setting the OFF time (Example: PM 1:15)

1. Press the TIMER/SNOOZE button on the Unit. The current OFF time blinks on the display.



(After 2 seconds)

2. Press the >> or << button on the Unit to set the time you want the Unit to be turned off.

Pressing the >> button moves the time forwards and pressing the << button moves the time backwards. Hold down the button to move the time in 10-minute intervals.



Setting the Daily Timer

You can set the timer whether the System is on or off.

Once you have set the Daily Timer, the timer will be activated at the same time every day. It can be cancelled and re-activated whenever you wish.

The Timer indicator on the display shows when the Daily Timer you have set is in effect.


Note: Perform each setting within 30 seconds. Otherwise, the setting is cleared and the procedure must be repeated from the beginning.

Care And Maintenance

Handle your CDs carefully, and they will last a long time.

Compact Discs

- Only CDs bearing this mark can be used with this System. However, continued use of irregular shape CDs (heart-shaped, octagonal, etc.) can damage the System.



- Remove the CD from its case by holding it at the edges while pressing the case's center hole lightly.
- Do not touch the shiny surface of the CD, or bend the CD.
- Put the CD back in its case after use to prevent warping.
- Be careful not to scratch the surface of the CD when placing it back in the case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.
- A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.



CAUTION: Do not use any solvent (for example, conventional record cleaner, spray thinner, benzene, etc.) to clean a CD.

Moisture Condensation

Moisture may condense on the lens inside the System in the following cases:

- After turning on heating in the room.
 - If the System is brought directly from a cold to a warm place.
- Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.



General Notes


In general, you will have the best performance by keeping your CDs and the mechanism clean.

- Store CDs in their cases, and keep them in cabinets or on shelves.
- Keep the system's CD holder closed when not in use.


Cleaning the lens

If the lens in the CD pickup is dirty, dropout, etc., could degrade sound.

- Open the CD holder and clean the lens as shown.
- Use a blower (available from a camera store) to blow dust off the lens.

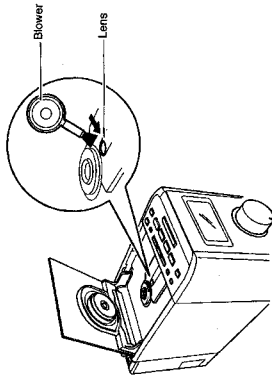

- If there are fingerprints, etc. on the lens, gently wipe clean with a cotton swab.



Troubleshooting

- If you are having a problem with your System, check this list for a possible solution before calling for service.
- If you cannot solve the problem from the hints given here, or the System has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Possible Cause	Action
No sound is heard.	- Connections are incorrect, or loose. - Headphones are connected.	- Check all connections and make corrections. (See pages 4 - 5). - Disconnect the headphones.
Poor radio reception	- The antenna is disconnected. - The AM Loop Antenna is too close to the System. - The FM Wire Antenna is not properly extended and positioned.	- Reconnect the antenna securely. - Change the position and direction of the AM Loop Antenna. - Extend FM Wire Antenna to the best reception position.
The CD skips.	The CD is dirty or scratched.	Clean or replace the CD.
The CD does not play.	The CD is upside down.	Put the CD in with the label side up.
Unable to operate the Remote Control.	- The path between the Remote Control and the sensor on the Unit is blocked. - The batteries have lost their charge.	- Remove the obstruction. - Replace the batteries.
Operations are disabled.	The built-in microprocessor has malfunctioned due to external electrical interference.	Unplug the System then plug it back in.

Specifications


Amplifier		
Output Power	13 watts per channel, min. RMS, at 4 ohms from 80Hz to 20kHz, with no more than 10% total harmonic distortion (for U.S.A.)	Dimensions 120 × 160 × 186 mm (W/H/D) (4-3/4" × 6-5/16" × 7-3/8") Approx. 1.5 kg (3.3 lbs)
	30 W (15 W + 15 W) at 4 ohms (Max.) (For Canada)	Mass 380 × 164 × 295 mm (W/H/D) (15" × 6-1/2" × 11-5/8") Approx. 6.0 kg (13.3 lbs)
		General
		Dimensions
		Mass
		Accessories
Input Sensitivity/Impedance (1 kHz)		Power Cord (1)
AUX	500 mV/59 kohms	AM Loop Antenna (1)
MD/TAPE	500 mV/59 kohms	Remote Control (1)
Output Sensitivity/Impedance (1 kHz)		Batteries RGP (SLIM-3)/AA (15F) (2)
MD/TAPE	500 mV/4.9 kohms	FM Wire Antenna (1)
Optical out	-21 dBm - -15 dBm	Speaker Cords (2)
Subwoofer	0 - 155 mV/10 kohms	
Speaker terminals	4 - 16 ohms	
Phones	16 ohm - 1 kohms	
	0 - 15 mW/ch output into 32 ohms	
CD Player		Power Specifications
Signal-To-Noise Ratio	90 dB	Power Requirements AC 120 V ~, 60 Hz
Wow And Flutter	Unmeasurable	Power Consumption 30 watts (power on mode) 5 watts (in Standby mode)
Tuner		
FM Tuner		
Tuning Range	87.5 - 108.0 MHz	
AM Tuner		
Tuning Range	530 - 1,710 kHz	
Speaker Specifications		
(each unit)		
Speakers	8 cm (3-1/16") cone	
Impedance	4 ohms	

Design and specifications are subject to change without notice.

Description of Major ICs

■UPD780204GF(IC701):System controller

1.Terminal Layout

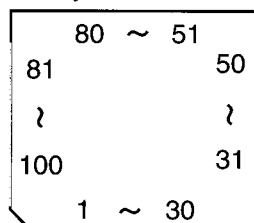

2.Pin Function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	VDD	-	Power supply.	29	SAFETY1	I	Detection 1 for abnormal power voltage.
2	STATUS	O	Status signal output to IC603.	30	SAFETY0	I	Detection 0 for abnormal power voltage.
3	XRESET	O	Reset signal output to IC603.	31	KEY1	I	Key control signal input 1.
4	MCLK	O	Clock signal output to IC603.	32	KEY0	I	Key control signal input 0.
5	MDATA	O	Command signal output to IC603.	33	VOLP	I	Voltage of volume position.
6	MLD	O	Load signal output to IC603.	34	AVDD	-	Power supply.
7	+BCTL	O	Switched 5V control.	35	AVREF	-	Power supply.
8	BEAT2	O	Main clock selector 2.	36	BASS	O	Bass control signal output.
9	BEAT1	O	Main clock selector 1.	37	TRE	O	Treble control signal output.
10	RESET	I	Reset signal input.	38	RDSCLK	I	Clock signal input from IC4.
11	X2	O	Main clock signal.	39	REM	I	Remote control signal input.
12	X1	I	Main clock signal.	40	VSS	-	Connect to GND.
13	IC(VPP)	-	Connect to VSS.	41	MT1	O	CD door motor control signal output.
14	XT2	O	Sub clock signal.	42	MT0	O	CD door motor control signal output.
15	XT1	I	Sub clock signal.	43	MTS	O	CD door motor speed (L=normal,H=slow).
16	VDD	-	Power supply.	44	FAUX1	O	Function AUX 1.
17	SCK	O	Serial clock output to IC317.IC2	45	FAUX2	O	Function AUX 2.
18	SDATA	O	Serial data output to IC317.IC2	46	VDD	-	Power supply.
19	STB	O	Strobe signal output to IC317.	47	L.O.MUTE	O	Line out mute signal output.
20	BUPC	O	Sub clock control	48	FTU	O	Function Tuner.
21	BUP	I	Distinction of backup power source (H=Backup).	49	MPX	I	Detection of FM stereo(L=stereo).
22	SQCK	O	Outside clock for sub-code Q resister output.	50	SMUTE	O	System mute(mute=L).
23	NC	-	Non connect.	51	POUT	O	Power ON/OFF.
24	SUBQ	I	Sub-code / Q-code input.	52~67	S23~S38	O	FL segment control output.
25	AVSS	-	Power supply.	68~78	S1~S11	O	FL segment control output.
26	PERIOD	O	Strobe of Tuner PLL.	79	VLOAD	-	Connect to -28V
27	DOOR	I	Door OPEN/CLOSE & REST SW detection.	80~90	S12~S22	O	FL segment control output.
28	SAFETY2	I	Detection 2 for abnormal power voltage.	91~100	8G~3G	O	FL grid control signal.

■ AN8806SB(IC601):RF&Servo AMP

1.Treminal Layout

PD	1	36	PDAC
LD	2	35	PDBD
LDON	3	34	PDF
LDP	4	33	PDE
VCC	5	32	PDER
RF-	6	31	PDFR
RF OUT	7	30	TBAL
RF IN	8	29	FBAL
C.AGC	9	28	EF-
ARF	10	27	EF OUT
C.ENV	11	26	TE-
C.EA	12	25	TE OUT
CS BDO	13	24	CROSS
BDO	14	23	TE BPF
CS BRT	15	22	VDET
OFTR	16	21	LD OFF
/NRFDDET	17	20	VREF
GND	18	19	ENV

2.Block Diagram

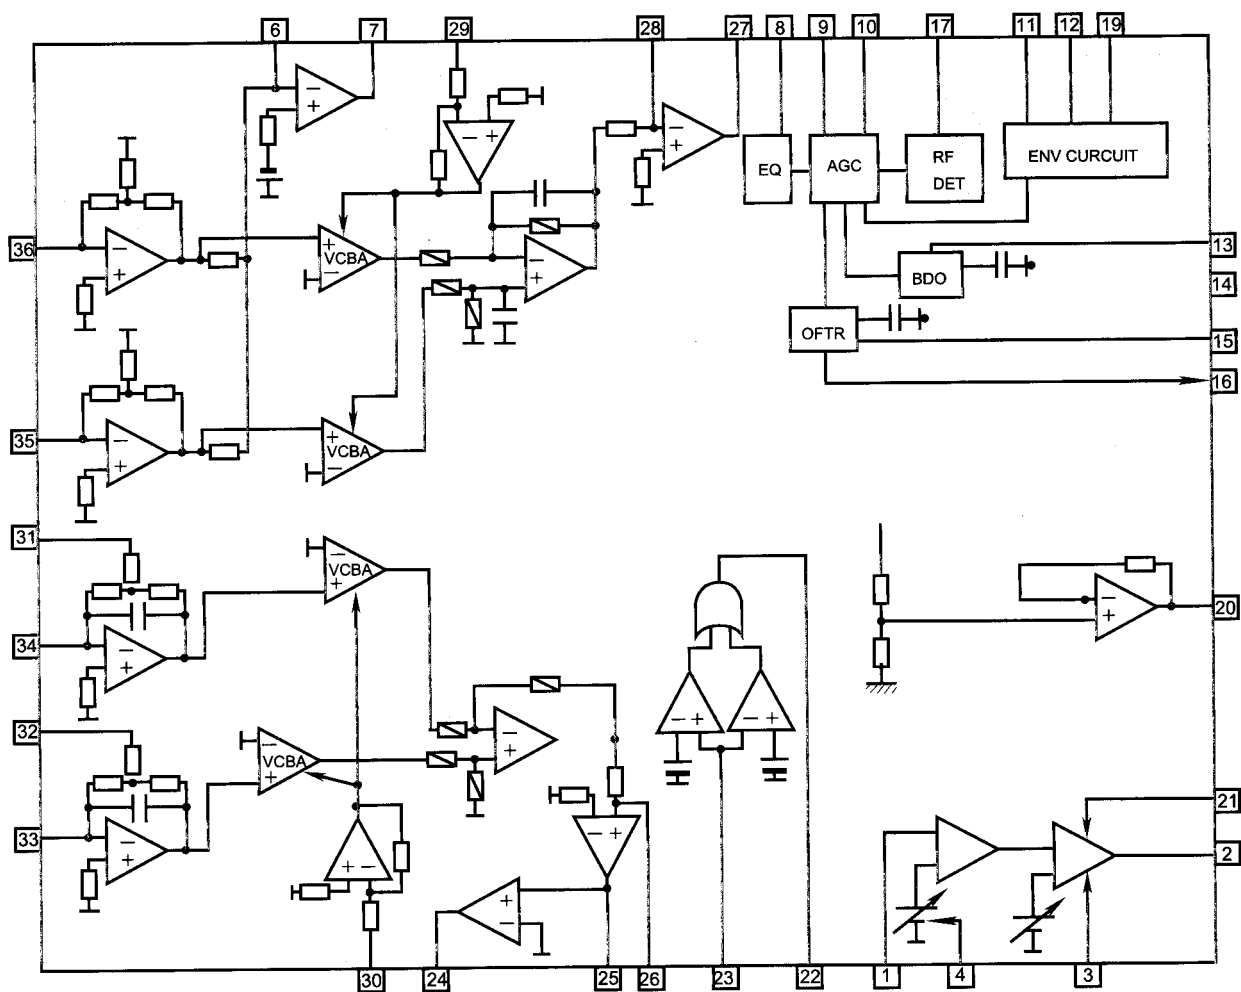


3. Functions


Pin No.	Symbol	I/O	Functions and operations
1	PD	I	APC amp input terminal
2	LD	O	APC amp output terminal
3	LD ON	I	APC ON/OFF control terminal
4	LDP	--	Connect to ground
5	VCC	--	Power supply
6	RF-	I	Inverse input pin for RF amp
7	RF OUT	O	RFamp output
8	RF IN	I	RF input
9	C.AGC	I/O	Connecting pin of AGC loop filter
10	ARF	O	RF output
11	C.ENV	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
12	C.EA	I/O	A capacitor is connected to this terminal to detect the envelope of RF signal
13	CS BDO	I/O	A capacitor is connected to detect the lower envelope of RF signal
14	BDO	O	BDO output pin
15	CS BRT	I/O	A capacitor is connected to detect the lower envelope of RF signal
16	OFTR	O	Of-track status signal output
17	/NRFDET	O	RF detection signal output
18	GND	--	Ground
19	ENV	O	Envelope output
20	VREF	O	Reference voltage output
21	LD OFF	--	Connect to ground
22	VDET	O	Vibration detection signal output
23	TE BPF	I	Input pin of tracking error through BPF
24	CROSS	O	Tracking error cross output
25	TE OUT	O	Tracking error signal output
26	TE-	I	Inverse input pin for tracking error amp
27	FE OUT	O	Output pin of focus error
28	FE-	I	Inverse input pin for focus error amp
29	FBAL	I	Focus balance control
30	TBAL	I	Tracking balance control
31	PDFR	I/O	F I-V amp gain control
32	PDER	I/O	E I-V amp gain control
33	PDF	I	I-V amp input
34	PDE	I	I-V amp input
35	PD BD	I	I-V amp input
36	PD AC	I	I-V amp input

■ MN35510(IC603):DIGITAL SERVO&DIGITAL SIGNAL PROCESSER

1. Terminal Layout

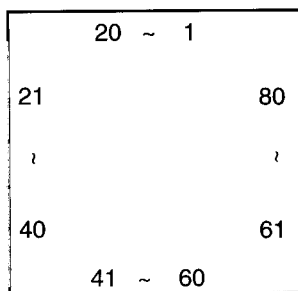

2. Block Diagram

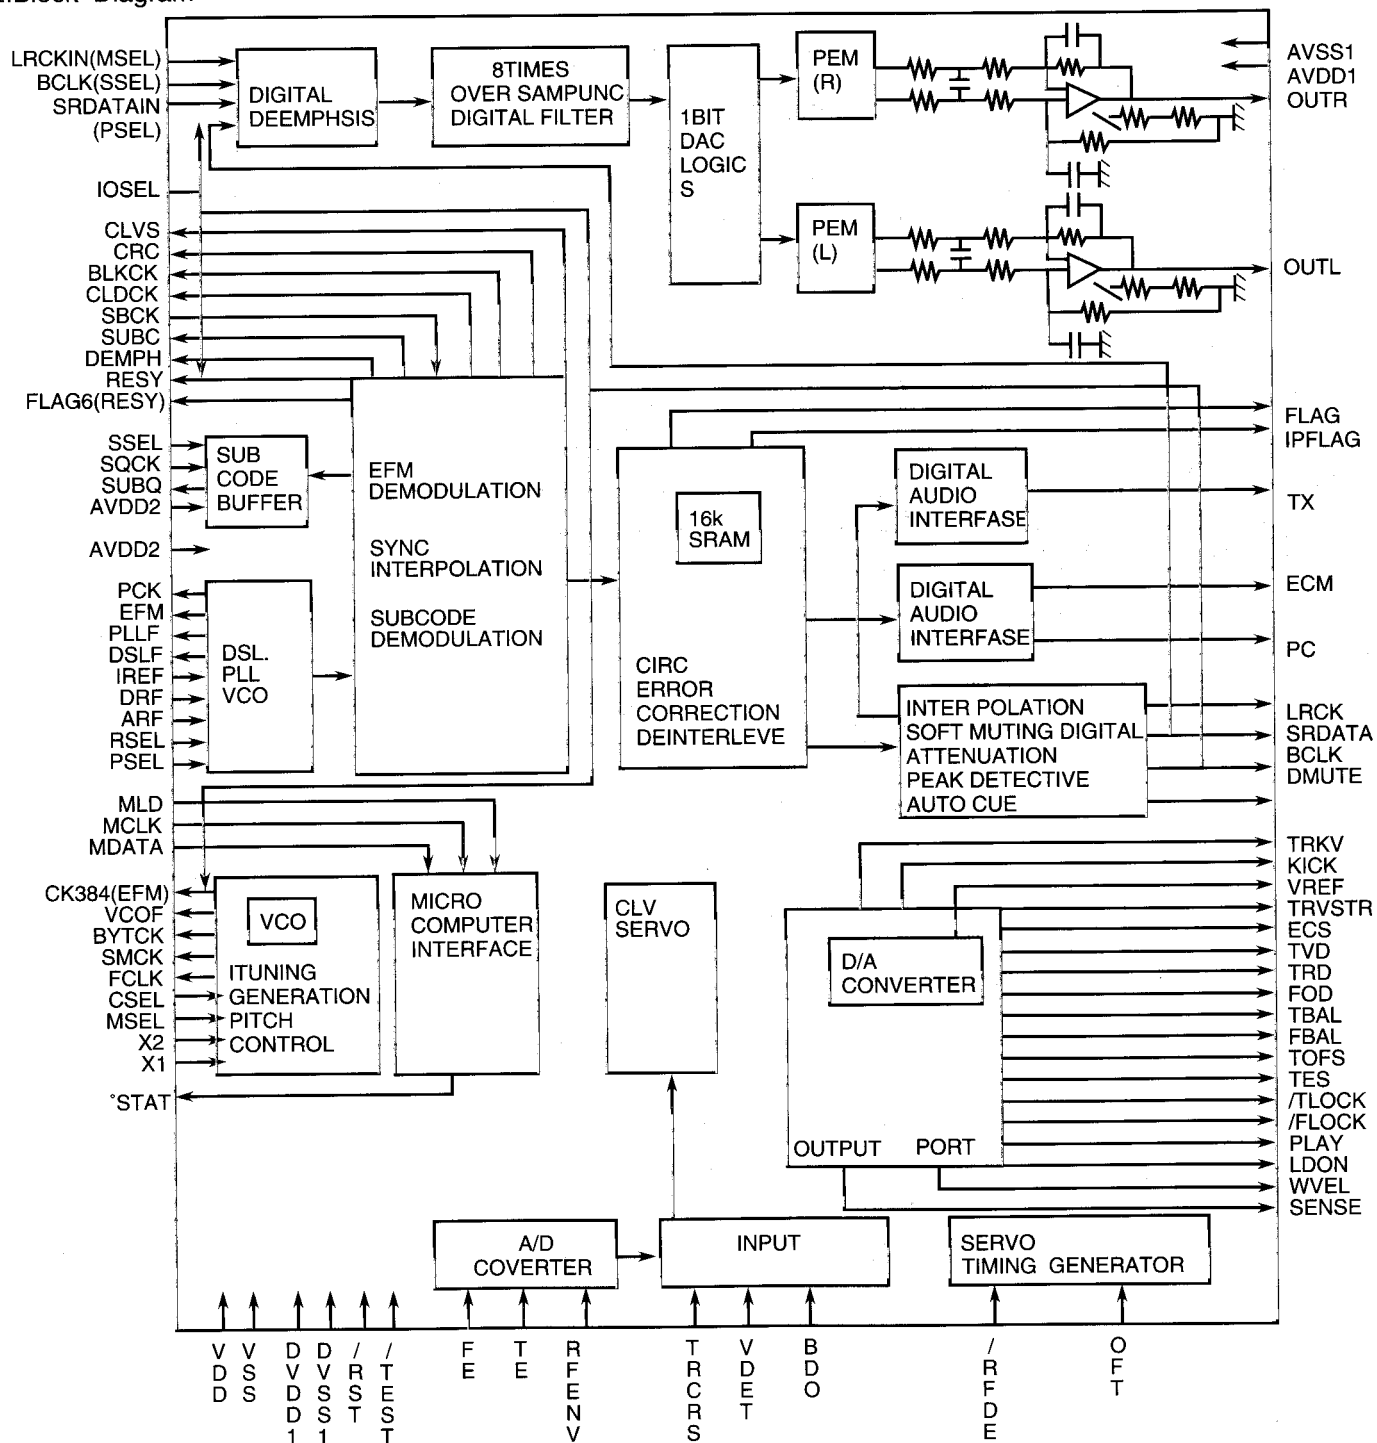


3. Description

Pin No.	symbol	I/O	Description	Pin No.	symbol	I/O	Description
1	BCLK	O	Not used	41	TES	O	Tracking error shunt signal output(H:shunt)
2	LRCK	O	Not used	42	PLAY	—	Not used
3	SRDATA	O	Not used	43	WVEL	—	Not used
4	DVDD1	—	Power supply (Digital)	44	ARF	I	RF signal input
5	DVSS1	—	Connected to GND	45	IREF	I	Reference current input pin
6	TX	O	Digital audio interface output	46	DRF	I	Bias pin for DSL
7	MCLK	I	μ com command clock signal input (Data is latched at signal's rising point)	47	DSLIF	I/O	Loop filter pin for DSL
8	MDATA	I	μ com command data input	48	PLLIF	I/O	Loop filter pin for PLL
9	MLD	I	μ com command load signal input	49	VCOF	—	Not used
10	SENSE	O	Sence signal output	50	AVDD2	—	Power supply(Analog)
11	FLOCK	O	Focus lock signal output Active :Low	51	AVSS2	—	Connected to GND(Analog)
12	TLOCK	O	Tracking lock signal output Active :Low	52	EFM	—	Not used
13	BLKCK	O	sub-code block clock signal output	53	PCK	—	Not used
14	SQCK	I	Outside clock for sub-code Q resister input	54	PDO	—	Not used
15	SUBQ	O	Sub-code Q -code output	55	SUBC	—	Not used
16	DMUTE	—	Connected to GND	56	SBCK	—	Not used
17	STATUS	O	Status signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK)	57	VSS	—	Connected to GND(for X'tal oscillation circuit)
18	RST	I	Reset signal input (L:Reset)	58	XI	I	Input of 16.9344MHz X'tal oscillation circuit
19	SMCK	—	Not used	59	X2	O	Output of X'tal oscillation circuit
20	PMCK	—	Not used	60	VDD	—	Power supply(for X'tal cscillation circuit)
21	TRV	O	Traverse enforced output	61	BYTCK	—	Not used
22	TVD	O	Traverse drive output	62	CLDCK	—	Not used
23	PC	—	Not used	63	FLAG	—	Not used
24	ECM	O	Spindle motor drive signal (Enforced mode output) 3-State	64	IPPLAG	—	Not used
25	ECS	O	Spindle motor drive signal (Servo error signal output)	65	FLAG	—	Not used
26	KICK	O	Kick pulse output	66	CLVS	—	Not used
27	TRD	O	Tracking drive output	67	CRC	—	Not used
28	FOD	O	Focus drive output	68	DEMPH	—	Not used
29	VREF	I	Reference voltage input pin for D/A output block (TVD,FOD,FBA,TBAL)	69	RESY	—	Not used
30	FBAL	O	Focus Balance adjust signal output	70	IOSEL	—	pull up
31	TBAL	O	Tracking Balance adjust signal output	71	TEST	—	pull up
32	FE	I	Focus error signal input(Analog input)	72	AVDD1	—	Power supply(Digital)
33	TE	I	Tracking error signal input(Analog input)	73	OUT L	O	Lch audio output
34	RF ENV	I	RF envelope signal input(Analog input)	74	AVSS1	—	Connected to GND
35	VDET	I	Vibration detect signal input(H:detect)	75	OUT R	O	Rch audio output
36	OFT	I	Off track signal input(H:off track)	76	RSEL	—	pull up
37	TRCRS	I	Track cross signal input	77	CSEL	—	Connected to GND
38	RFDET	I	RF detect signal input(L:detect)	78	PSEL	—	Connected to GND
39	BDO	I	BDO input pin(L:detect)	79	MSEL	—	Connected to GND
40	LDON	O	Laser ON signal output(H:on)	80	SSEL	—	Pull up

■TA8409S(IC401.IC501):Motor Driver

1.Block Diagram

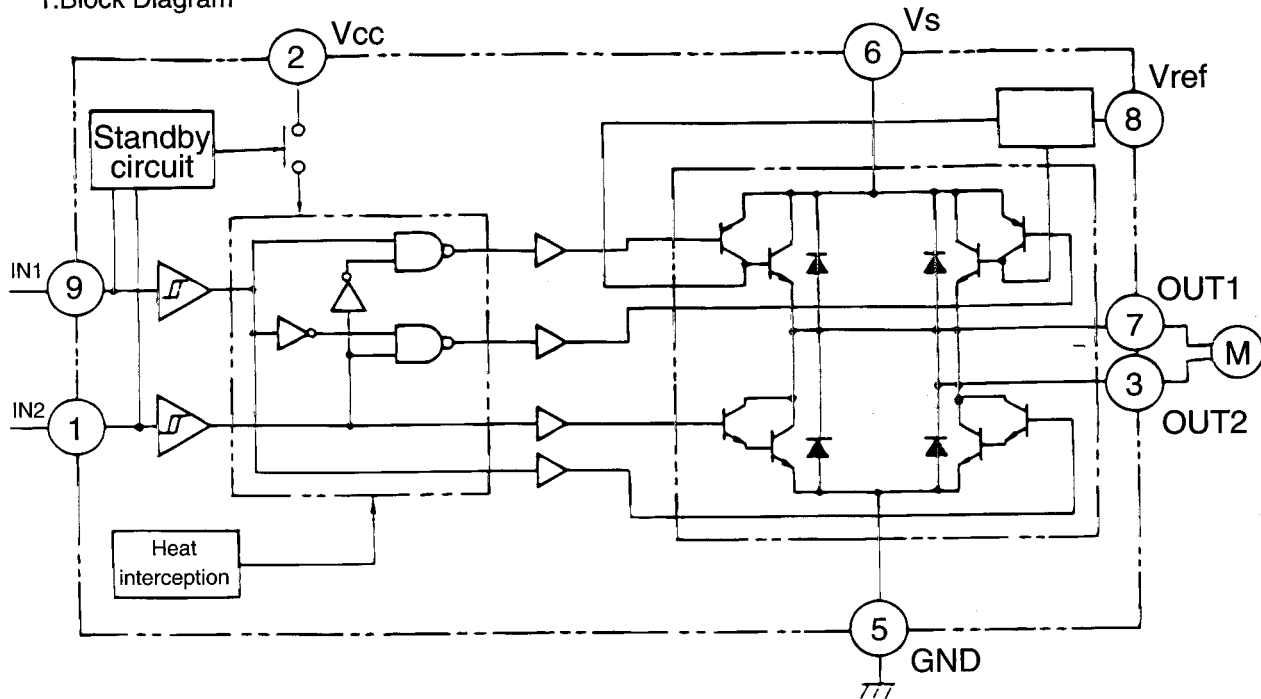

2.Function


INPUT		OUTPUT		MODE
IN1	IN2	OUT1	OUT2	MOTOR
0	0	∞	∞	STOP
1	0	H	L	CW/CCW
0	1	L	H	CCW/CW
1	1	L	L	BRAKE

■ BU4094BC(IC317):SERIAL TO PARALLEL PROT EXTENSION


1.Terminal Layout

STOROE	1	16	Vdd
DATA	2	15	OUTPUT ENABLE
CLOCK	3	14	Q5
Q1	4	13	Q6
Q2	5	12	Q7
Q3	6	11	Q8
Q4	7	10	Q's
Vss	8	9	Qs

2.Block Diagram

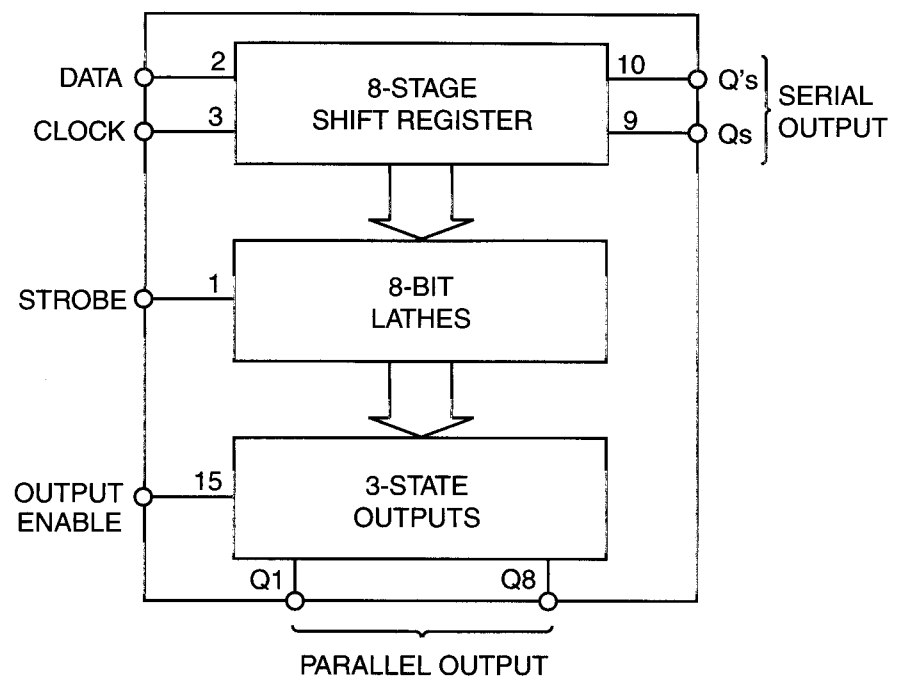


■ BA6897FP-W(IC602) 4channel driver

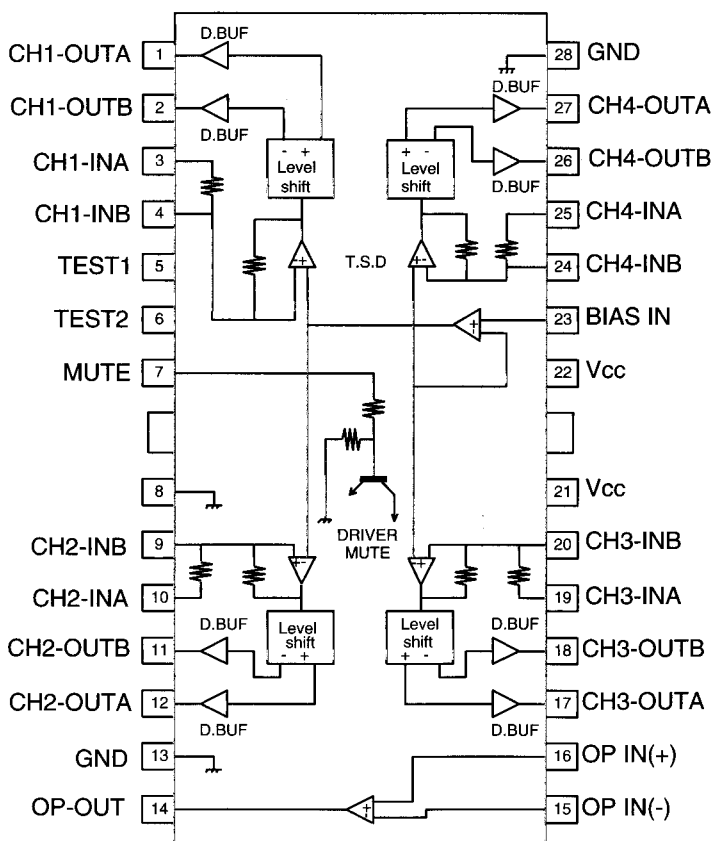

■BH3852S(IC308):E.VOLUME

1.Block Diagrams

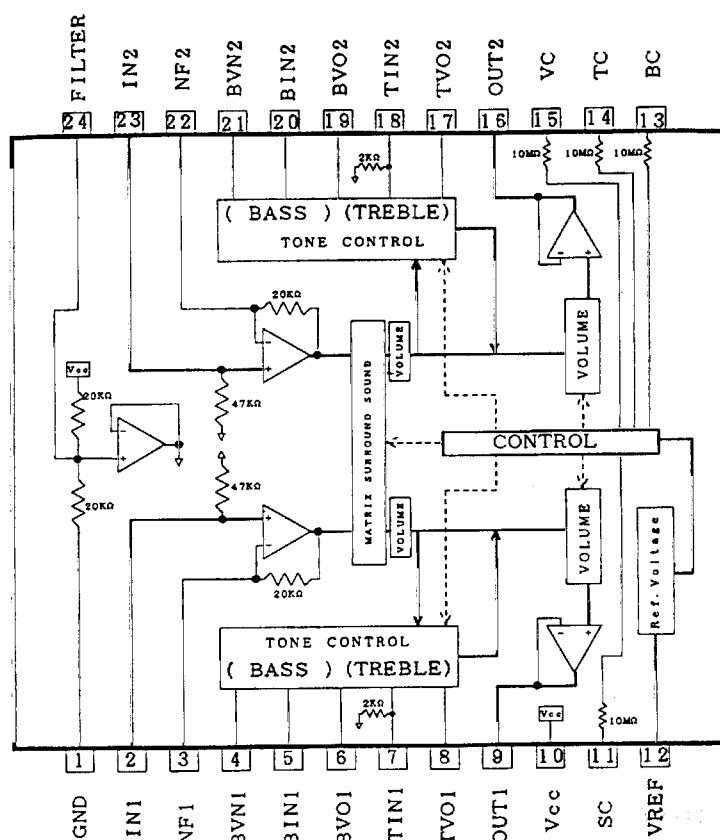


2.Pin Function

PinNo.	Symbol	I/O	Function	PinNo.	Symbol	I/O	Function
1	GND	-	Connect to GND.	13	BASS	I	Terminal for bass control.
2	IN1	I	Terminal for 1ch volume input.	14	TRE	I	Terminal for treble control.
3	NF1	I	Terminal for gain adjustment of input step AMP.	15	VOL	I	Terminal for volume control.
4~6	BASS1	-	Terminal for connection of 1ch low-frequency filter.	16	OUT2	O	Terminal for 2ch volume output.
7,8	TRE1	-	Terminal for connection of 1ch high-frequency filter.	17,18	TRE2	-	Terminal for connection of 2ch high-frequency filter.
9	OUT1	O	Terminal for 1ch volume output.	19~21	BASS2	-	Terminal for connection of 2ch low-frequency filter.
10	VCC	-	Terminal for power supply.	22	NF2	I	Terminal for gain adjustment of input step AMP.
11	LIVE	-	Terminal for surround control.	23	IN2	I	Terminal for 2ch volume input.
12	VREF	O	Terminal for reference voltage output.	24	VSET	-	Terminal for filter.

■TA2057N(IC1):FM/AM IF AMP & Detector

1.Block Diagrams

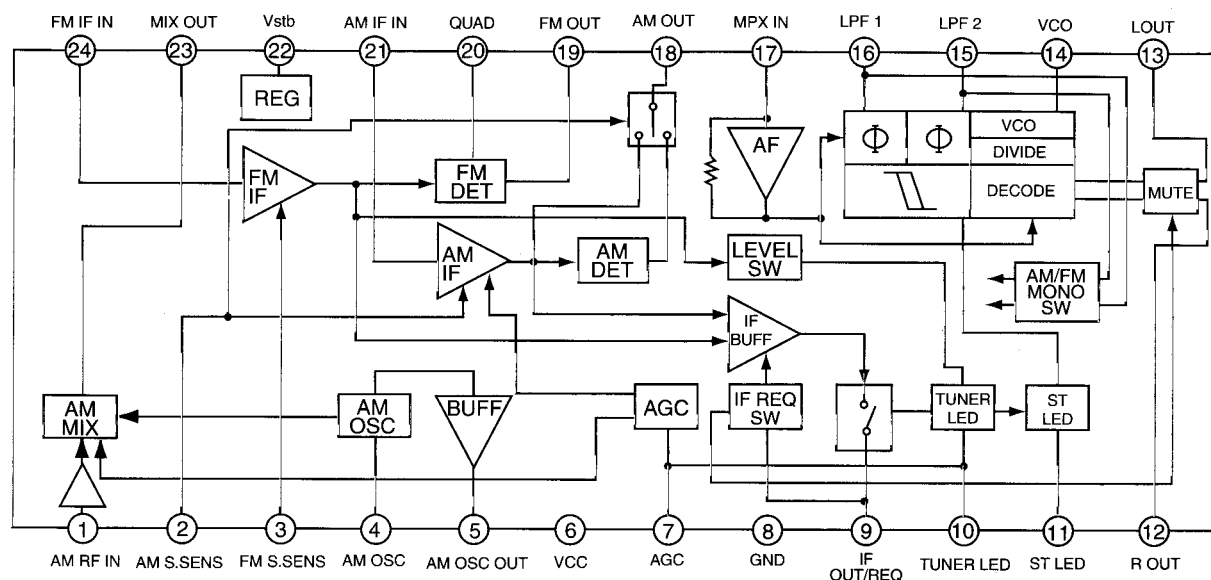

2.Pin Function


Pin No.	I/O	Symbol	Function	Pin No.	I/O	Symbol	Function
1	I	AM RF	AMRF signal input	13	O	Lch OUT	Output Lch
2		AM S.SENS		14	O	VCO	Voltage controlled terminal
3		FM S.SENS		15	O	LPF2	When voltage of terminal is MONO at "H" and ST at "L"
4	-	AM OSC	AM local oscillation circuit	16	O	LPF1	When voltage of terminal is AM at "H" and FM at "L"
5	O	AM OSC OUT	AM local oscillation signal output	17	I	MPX IN	Multi plex signal input
6	-	VCC	Power supply	18	O	AM OUT	AM detection signal output
7	I	AGC	AGC voltage input terminal	19	O	FM OUT	FM detection signal output
8	-	GND	Connect to GND	20	I	FM QUAD	Bypass to FMIF
9	O	IF OUT	IF REQ signal output to IC2	21	I	AM IF IN	Input of AMIF signal
10	O	TU IND	Indicator drive output when tuning	22	-	Vst	Fixed voltage output terminal
11	O	ST IND	Stereo indicator output "H"mono . "L"stereo	23	O	AM MIX OUT	Output terminal for AM mixer
12	O	Rch OUT	Output Rch	24	I	FM IF IN	Input of FMIF signal

■ LC72136N(IC2):PLL Frequency synthesizer LSI

1. Layout

XT	1	22	XT
FM/AM	2	21	GND
CE	3	20	LPFOUT
DI	4	19	LPFIN
CLOCK	5	18	PD
DO	6	17	VCC
FM/ST/VCO	7	16	FMIN
AM/FM	8	15	AMIN
	9	14	
	10	13	IFCONT
SDIN	11	12	IFIN

2. Block

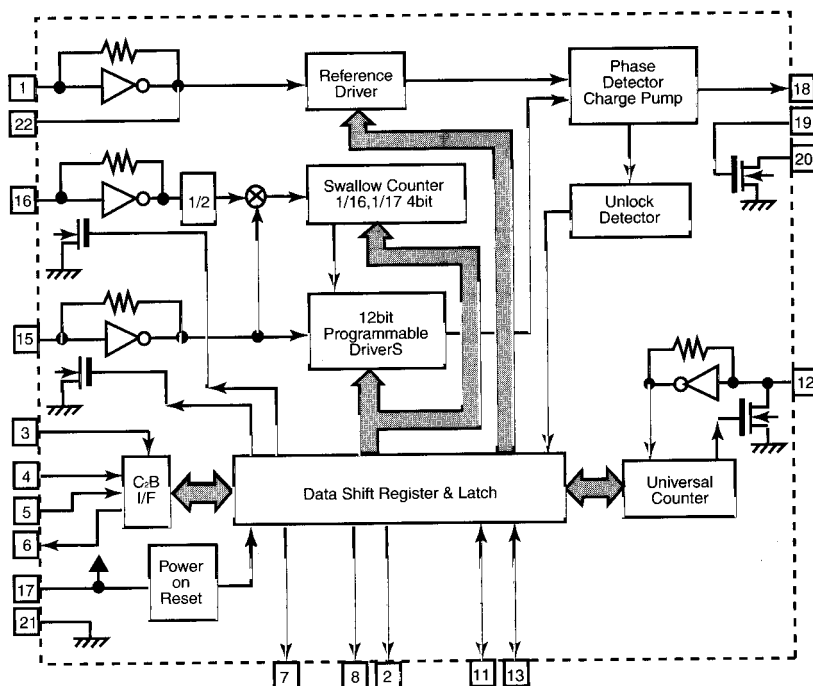


3. Function

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	XT	I	X'tal oscillator connect (75KHz)	12	IFIN	I	IF counter signal input
2	FM/AM	O	LOW:FM mode	13	IFCONT	O	IF signal output
3	CE	I	When data output/input for 4pin(input) and 6pin(output): H	14		-	Not use
4	DI	I	Input for receive the serial data from controller	15	AMIN	I	AM Local OSC signal output
5	CLOCK	I	Sync signal input use	16	FMIN	I	FM Local OSC signal input
6	DO	O	Data output for Controller Output port	17	VCC	-	Power supply(VDD=4.5~5.5V) When power ON:Reset circuit move
7	FM/ST/VCO	O	"Low": MW mode	18	PD	O	PLL charge pump output(H: Local OSC frequency Height than Reference frequency. L: Low Agreement: Height impedance)
8	AM/FM	O	Not use	19	LPFIN	I	Input for active lowpassfilter of PLL
9		-	Not use	20	LPFOUT	O	Output for active lowpassfilter of PLL
10		-	Input/output port	21	GND	-	Connected to GND
11	SDIN	I/O	Data input/output	22	XT	I	X'tal oscillator(75KHz)


Internal Connections of FL Display

■QLF0048-001(DI701):FL DISPLAY

Front grid assignment

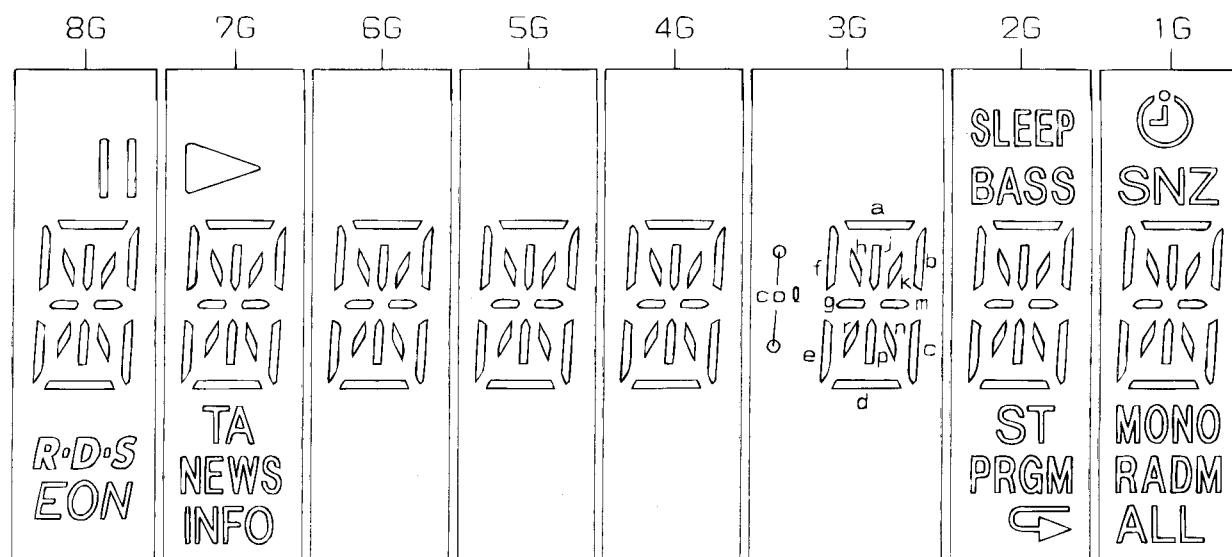

Rear grid assignment

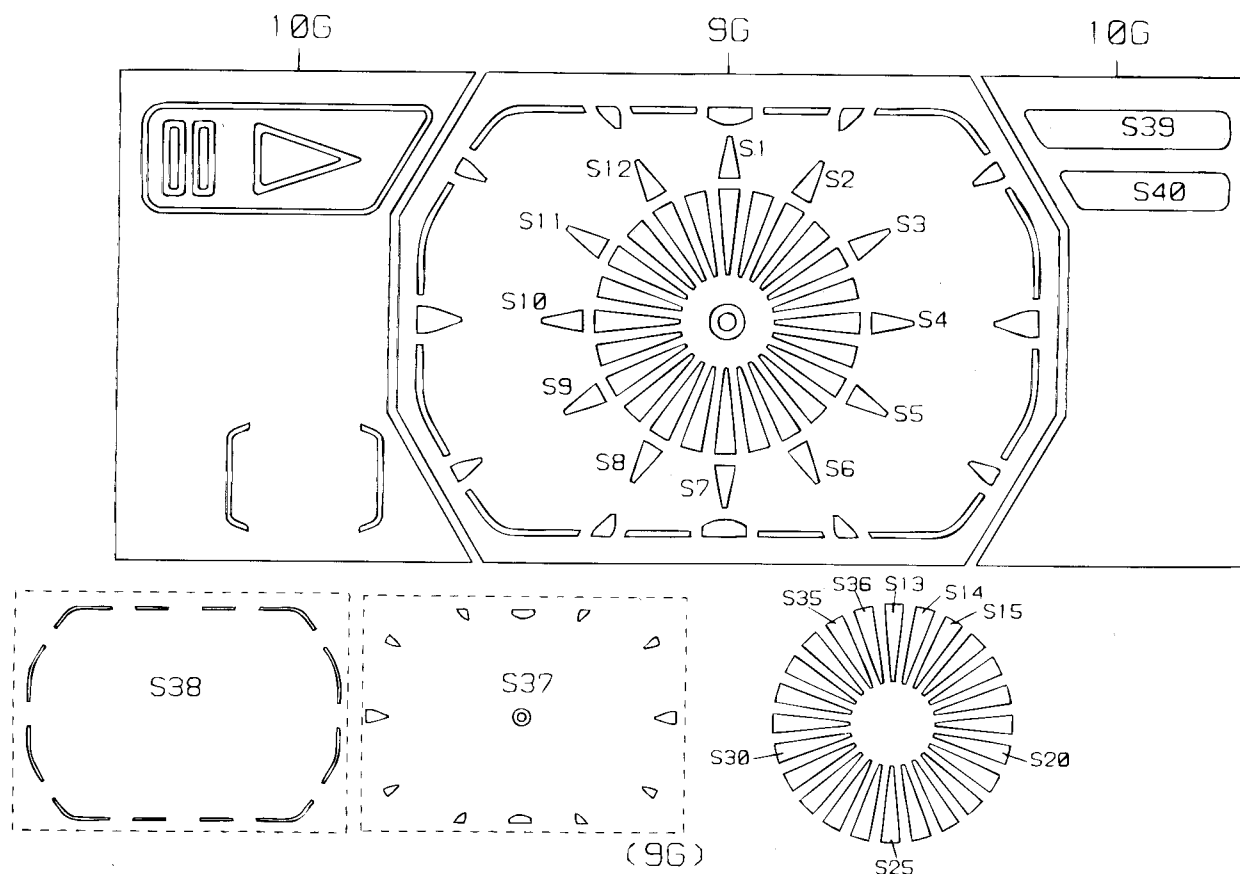

FS-5000/FS-6000

ANODE CONNECTION

	10G	9G	8G	7G	6G~4G	3G	2G	1G		10G	9G	8G	7G	6G~4G	3G	2G	1G
P1	-	S1	-	-	-	-	SLEEP		P20	-	S20	-	-	-	-	-	-
P2	-	S2	II		-	-	BASS	SNZ	P21	-	S21	-	-	-	-	-	-
P3	-	S3	a	a	a	a	a	a	P22	-	S22	-	-	-	-	-	-
P4	-	S4	b	b	b	b	b	b	P23	[]	S23	-	-	-	-	-	-
P5	-	S5	f	f	f	f	f	f	P24		S24	-	-	-	-	-	-
P6	-	S6	k	k	k	k	k	k	P25		S25	-	-	-	-	-	-
P7	-	S7	j	j	j	j	j	j	P26		S26	-	-	-	-	-	-
P8	-	S8	n	h	h	h	h	h	P27	-	S27	-	-	-	-	-	-
P9	-	S9	m	m	m	m	m	m	P28	-	S28	-	-	-	-	-	-
P10	-	S10	g	g	g	g	g	g	P29	-	S29	-	-	-	-	-	-
P11	-	S11	n	n	n	n	n	n	P30	-	S30	-	-	-	-	-	-
P12	-	S12	p	p	p	p	p	p	P31	-	S31	-	-	-	-	-	-
P13	-	S13	r	r	r	r	r	r	P32	-	S32	-	-	-	-	-	-
P14	-	S14	c	c	c	c	c	c	P33	-	S33	-	-	-	-	-	-
P15	-	S15	e	e	e	e	e	e	P34	-	S34	-	-	-	-	-	-
P16	-	S16	d	d	d	d	d	d	P35	-	S35	-	-	-	-	-	-
P17	-	S17	-	TA	-	col (F)	ST	MONO	P36	-	S36	-	-	-	-	-	-
P18	-	S18	R·D·S	NEWS	-	col (L)	PRGM	RADM	P37	S39	S37	-	-	-	-	-	-
P19	-	S19	EON	INFO	-	-		ALL	P38	S40	S38	-	-	-	-	-	-

PIN CONNECTION

PIN NO.	88	88	88	88	88	88	88	77	77	77	77	77	77	66	66	66	66	66	66	55	55	55	55	55	55	55	55	44	44	44	44		
CONNECTION	F	F	F	N	N	N	3	6	4	5	1	2	7	8	2	2	1	1	1	1	1	1	1	1	1	1	1	N	I	N	N	F	F
	1	1	1	P	P	C	G	G	G	G	G	G	G	2	1	0	9	8	7	6	5	4	3	2	1	0	9	8	7	6	5	4	3

PIN NO.	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	3	3	3	3	3	3	3	4	4	4	4			
CONNECTION	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	N	0	9	2	2	2	2	2	2	2	3	3	3	3	I	N	N	N	N
	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	P	0	9	2	2	2	2	2	2	3	3	3	3	3	3	P	P	P	P

NOTE 1) F1, F2 --- Filament 5) 1G~10G --- Grid
 2) NP ----- No pin 6) IC ----- Internal connection
 3) NC ----- No connection
 4) DL ----- Datum Line

Removal of main parts

■ Removing the rear cover

1. Remove the six screws A retaining the rear cover from behind the body.
2. Remove the two screws B retaining the rear cover from upper the body.
3. Remove the two screws C retaining the rear cover from bottom the body.
4. After passing the lock pawls at the speaker terminals through the position in Fig 1 remove the rear cover.

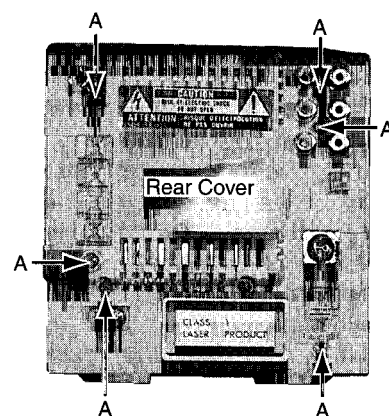


Fig. 1

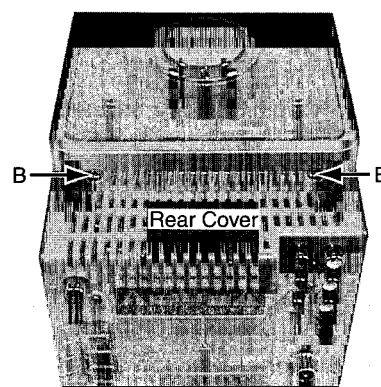


Fig. 2

■ Removing the side panel and ornament panel

1. Remove the rear cover.
2. Remove the two screws D retaining the side panel from right and left of body.
3. Remove the two screws E retaining the front panel assembly from the bottom. (See Fig 3)
4. The slide is done in the direction of the arrow and side panels is detached.
5. The slide is done in the direction of the arrow and the ornament panels is detached.

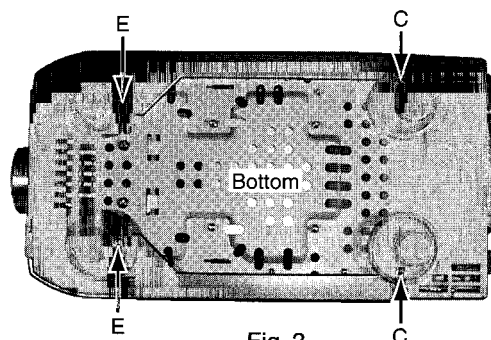


Fig. 3

* These parts are installed and rear cover is installed at the end assembly.

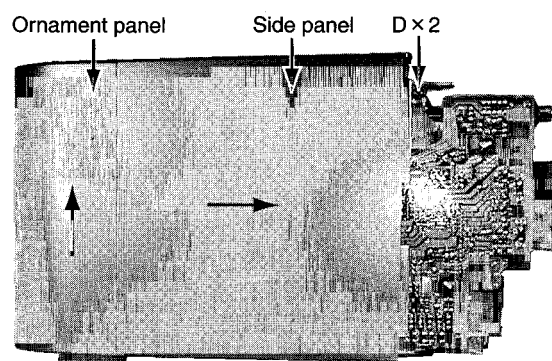


Fig. 4

■ Removing the CD player assembly

- 1.Remove the rear cover from behind the body.
- 2.Remove the side panels and ornament panels.
(L and R)
- 3.After removing the four screws F from behind the body, dismount the heat sink.
- 4.Remove the two screws G retaining the CD mechanism assembly from right and left of body.
- 5.Remove the one screw H retaining the tuner function amplifier P.C.Board.
- 6.Disconnect the connector from CN602,CN641 on the tuner function amplifier P.C.Board (See Fig 7).
- 7.Disconnect the card wire from CN603,CN604 on the CD servo control P.C.Board (See Fig 6).
- 8.Disconnect the connector from CN311 on the main board (See Fig 6-1).
- 9.Remove the CD player while pulling it out toward the rear side.

Then the connector CN872 connected to the connector CN781 on the FL display microcomputer P.C.Board of the front assembly will be disconnected at the same time.(See Fig 6-1)

- * To ensure easy assembly of the CD player assembly, temporarily remove the tuner function amplifier P.C.Board, and after mounting the CD player assembly, assemble the tuner function amplifier P.C.Board.

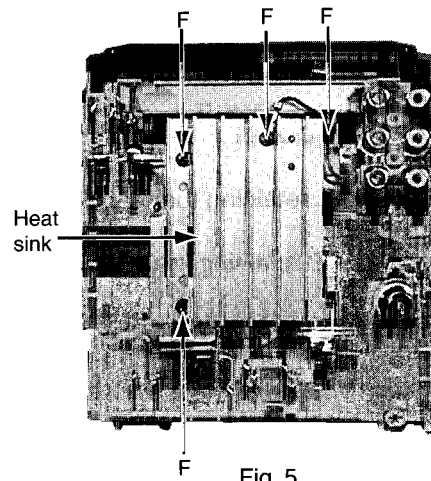


Fig. 5

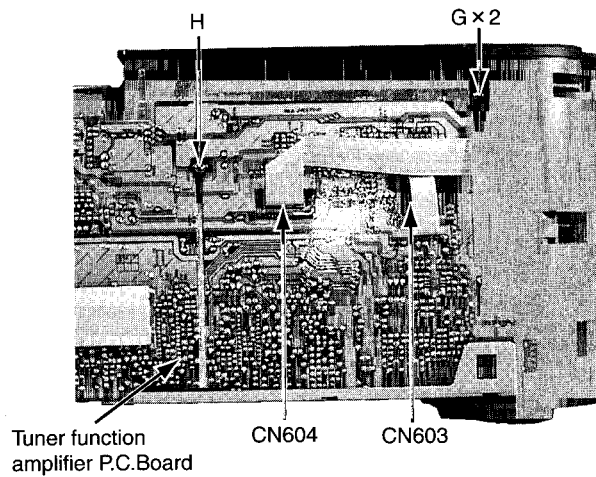


Fig. 6

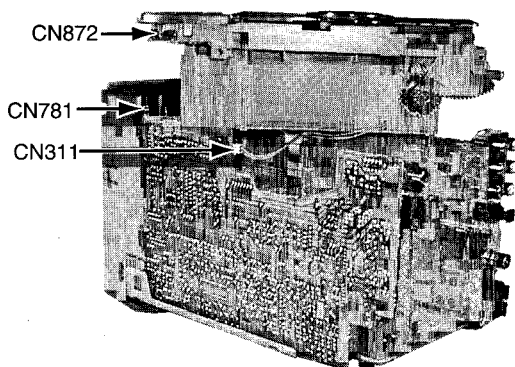


Fig. 6-1

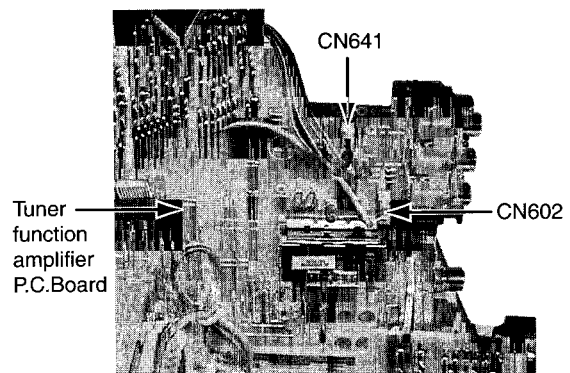


Fig. 7

■ Removing the CD servo control P.C.Board

- 1.Remove the CD mechanism assembly.
- 2.Remove the four screws I on the CD servo control P.C.Board.
- 3.Disconnect the card wire from CN601 on the CD servo control P.C.Board.
- 4.Disconnect the connector from P011 on the Motor P.C.Board.

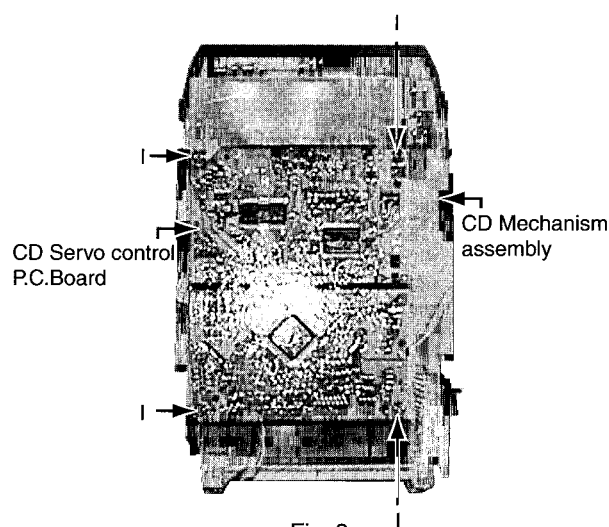


Fig. 8

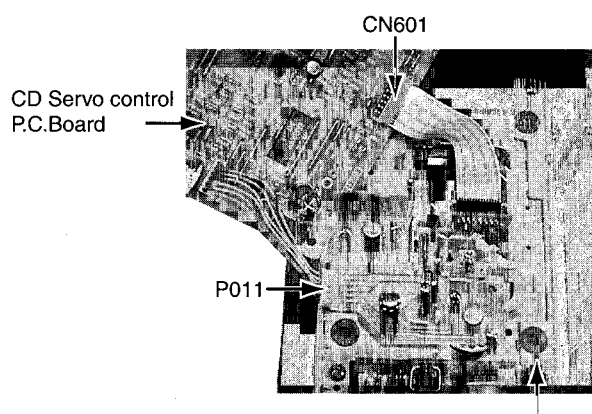


Fig. 9

CD Traverse mechanism assembly

■ Removing the CD Traverse mechanism assembly

- 1.Remove the CD mechanism assembly.
- 2.Remove the CD servo control P.C.Board.
- 3.Remove the four screws J retaining the mechanism bracket from CD mechanism assembly.

■ Removing the CD motor drive P.C.Board

- 1.Remove the CD mechanism assembly.
- 2.Remove the CD servo control P.C.Board.
- 3.Remove the CD traverse mechanism assembly.
- 4.Disconnect the loading belt.

*At this time, the grease of the gear must not place to the loading belt.

- 5.Remove two screws K retaining the loading motor from CD mechanism assembly.

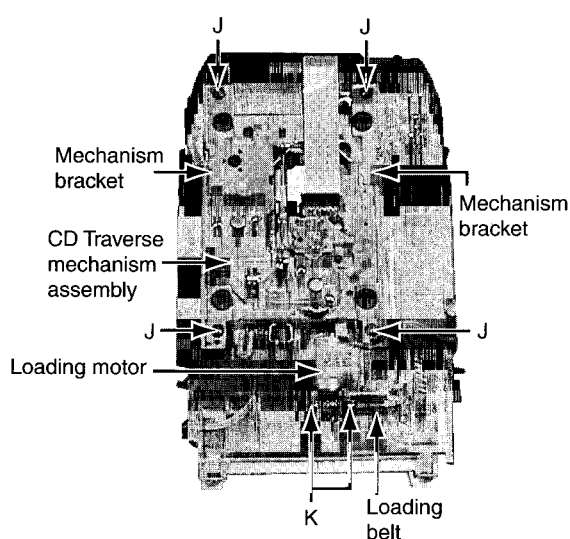


Fig. 10

■ **Removing the CD door assembly**
(See Fig 11.12)

Disengage the two engagement section on both the right and left sides of the CD door while expanding the sections outward.

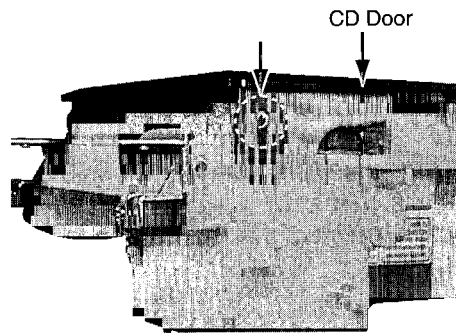


Fig. 11

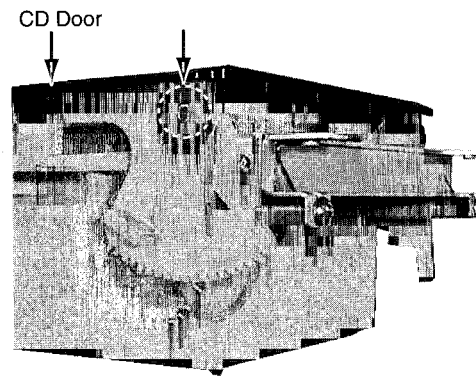


Fig. 12

■ **Removing the operation switch P.C.Board**
(See Fig 13.14)

- 1.Remove the top panel while expanding the right and left side hooks outward.
- 2.Remove the operation switch P.C.Board upward.

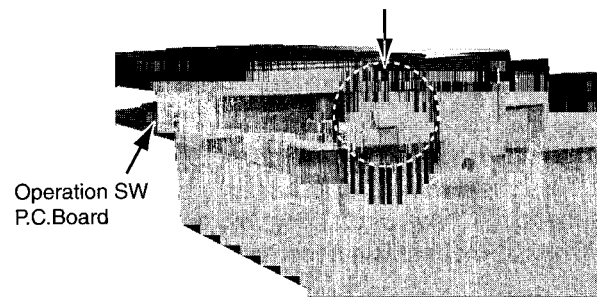


Fig. 13

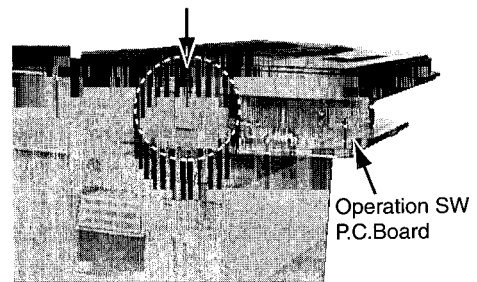



Fig. 14

■ Removing the tuner function amplifier P.C.Board

1. Lift connection P.C.Board for above and extract from the connector.
2. Pull out backward and detach tuner function amplifier P.C.Board.


■ Removing the main board

1. Lift connection P.C.Board for above and extract from the connector.
2. Disconnect the connector and card wire from CN971.CN301.CN351 on the main board.
3. Disconnect the connector CN911 on the power supply P.C.Board.
4. Disconnect the earth wire CN391 on the main board.
5. Pull out backward and detach main board.

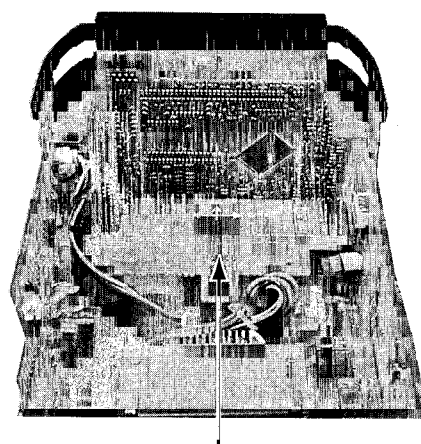

Connection P.C.Board

Fig. 15

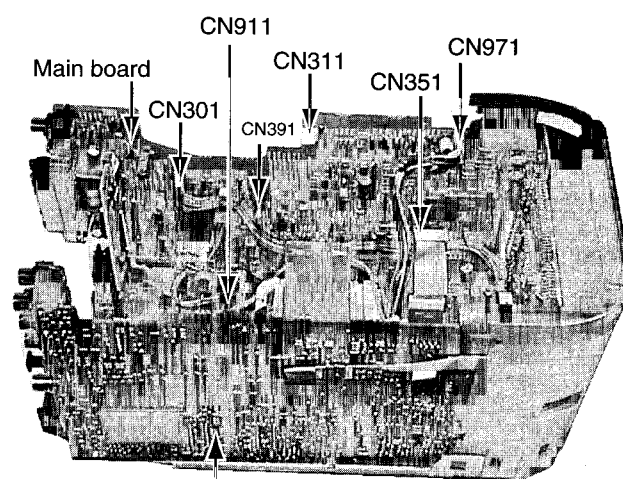

Tuner function amplifier P.C.Board


Fig. 16

■ Removing the Front panel assembly

1. The volume knob is pulled out.
2. The front panel assembly is detached from the chassis base while removing a right and left hooks 'a'.

■ Removing the Front P.C.Board

1. Remove the Front panel assembly.
2. The front P.C.Board is detached while expanding the hook 'b' in two places which is the fixation of front P.C.Board outside.

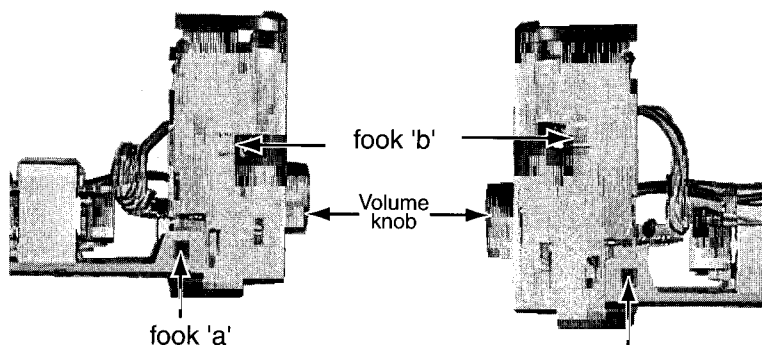

hook 'a'

Fig. 17

hook 'a'

Fig. 18

Main Adjustment

■ Test Instruments required for adjustment

- 1.Low frequency oscillator
(Frequency range:50Hz to 20kHz)
(Output:0dBs across 600 Ω terminating resistor)
- 2.Attenuator (Impedance:600 Ω)
- 3.Test disc:CTS-1000(Audio)
:CTS-1000&CRG-1211S(Optical Control)
- 4.Extension cord:Reference Next Page
- 5.Electronic voltmeter
- 6.Distortion meter
- 7.Jitter meter:NJM631
- 8.TE offset meter:LTM9055

■ Measuring conditions(Amplifier section)

Supply voltage
AC120V (60Hz)

Reference output level
 Speaker 0dBs(0.775V)/4 Ω
 Headphone -20dBs(0.077V)/32 Ω
 Line out 500mV(-3.8dBs)/47k Ω

Standard test frequency 1kHz

Reference input level AUX -3.8dBs

Output for measuring
At speaker terminal J3003(Dummy load : 4 Ω)

Posture of test Horizontal

■ Standard position of function switches

Function switch to AUX
Active hyper-bass pro switch to OFF

■ Standard position of volume control

Bass treble to center
Main volume adjust to reference output VOL4

■ Remarks of measuring

- 1.Negative side of the input and output on the measuring system, it ought to be separately to each other.
when using the 2 channels E.V.meter, never connect together on the negative side.
- 2.This model's amplifier is BTL.
On account of that minus speaker's terminal isn't same potential as earth in BTL (Balanced transformer-less) amplifier.
never connect minus side to the ground or negative.
- 3.When measuring power output with dummy load.
Connected wire to be used as big as possible.

■ Measuring condition(Tuner section)

Power source to tuner:DC5V
 AM modulation 400Hz 30%
 FM modulation 400Hz deviation 22.5kHz


■ Operation Confirmation

Do as follows by the method when you do the operation confirmation detaching the CD mechanism part from the main body.

- 1.Remove the CD mechanism assembly.
- 2.Operation Switch P.C.Board is detached from the CD mechanism assembly, and Operation Switch P.C.Board is connected with Front P.C.Board.
- 3.Flat wire A,B,C and D connected with the CD mechanism assembly are made an extension wire.
- 4.Switch S6382 on the substrate is short-circuited.
- 5.The disk is turned on, and the CD door is closed.
- 6.The power supply is turned on, and CD is reproduced.


Connect the Extension Cord

- (A) VMC0041-005
- (B) VMC0041-003
- (C) VWF1211-40TTB
- (D) VWF1207-40TTB

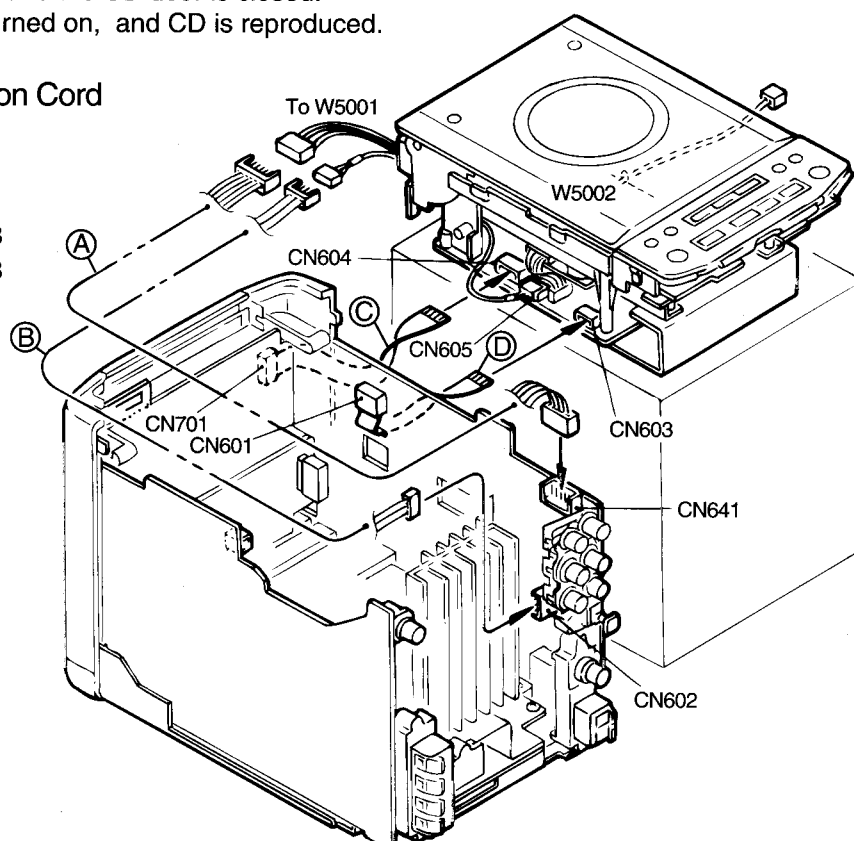

■ Arrangement Checking Test Pont


(CD Servo control board)

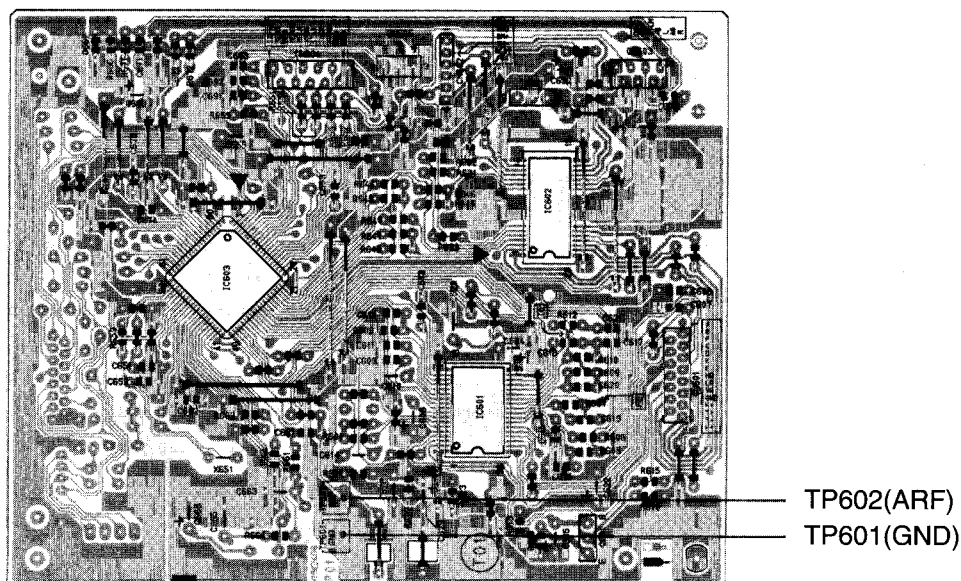


■ AMP Section

Items	Conditions	Adjustment and Confirmation Procedure	Standard Value
1. Amplifier gain check	*Measuring instrument :Oscilloscope *Measuring point :AUX IN :Speaker terminal	Input the 1kHz to AUX IN. Main volume is maximum. When speaker output becomes 0dB, input is $-16\text{dB} \pm 4\text{dB}$.	$-16\text{dB} \pm 4\text{dB}$
2. Noise level check	*Measuring instrument :Oscilloscope :Voltmeter *Measuring point :AUX IN :Speaker terminal	Switch and volume position Function switch : AUX. Bass treble : flat When main volume becomes maximum, confirm that speaker output is less than 4mV. When main volume becomes minimum, confirm that speaker output is less than 2.5mV	Less than 4mV Less than 2.5mV
3. Sub woofer output check	*Measuring instrument :Oscilloscope :Voltmeter *Measuring point :AUX IN :Sub woofer output terminal *Test disc :CTS-1000	Input the reference frequency 100Hz from AUX IN. By main volume is maximum position, bass and treble is flat position, Confirm the sub woofer output is $-14\text{dBs} \pm 4\text{dB}$.	$-14\text{dBs} \pm 4\text{dB}$
4. Super Bass /AHB effect	*Measuring instrument :Oscilloscope *Measuring point :Speaker terminal	Input the reference frequency 80Hz from AUX IN. Confirm the speaker terminal output is $11\text{dB} \pm 4\text{dB}$.	$11\text{dB} \pm 4\text{dB}$

■ CD Section

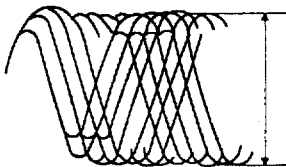Items	Conditions	Adjustment and Confirmation Procedure	Standard Value
1.Jitter check	*Measuring instrument :jitter meter *Test point :TP601(GND side) :TP602(ARF side) *Test disc :CTS-1000	Connect the jitter meter between TP601(GND) and TP602(ARF) and when test disc (track 1) is played, confirm that the meter reading is 26n-sec or less.	26n-sec or less
2.RF level (eye pattern)	*Measuring instrument :Oscilloscope *Test point :TP601(GND side) :TP602(ARF side) *Test disc :CTS-1000	Connect the oscilloscope between TP601(GND) and TP602(ARF) and when test disc (track 1) is played, confirm that peak-to-peak value of oscilloscope waveform is within $1.1V \pm 0.2V$. Eye-pattern waveform  The maximum value of this waveform should be in the range of specifications and the waveform should be clear	within $1.1V \pm 0.2V$
3.Outer most area check	*Test disc :CTS-1000	Select "Track 26" on the outer area of test disc directly and check that it begins playback smoothly and that there are no abnormal conditions such as a tracking error.	
4.Pickup unit movement check(From the outer area to the inner area)	*Test disc :CTS-1000	Allow the pickup to skip over from the disc's outer most area to "Track 1" and check that it takes within 10 seconds for the player to enter play mode.	within 10 seconds

Flow of Functional Operation Until TOC Read

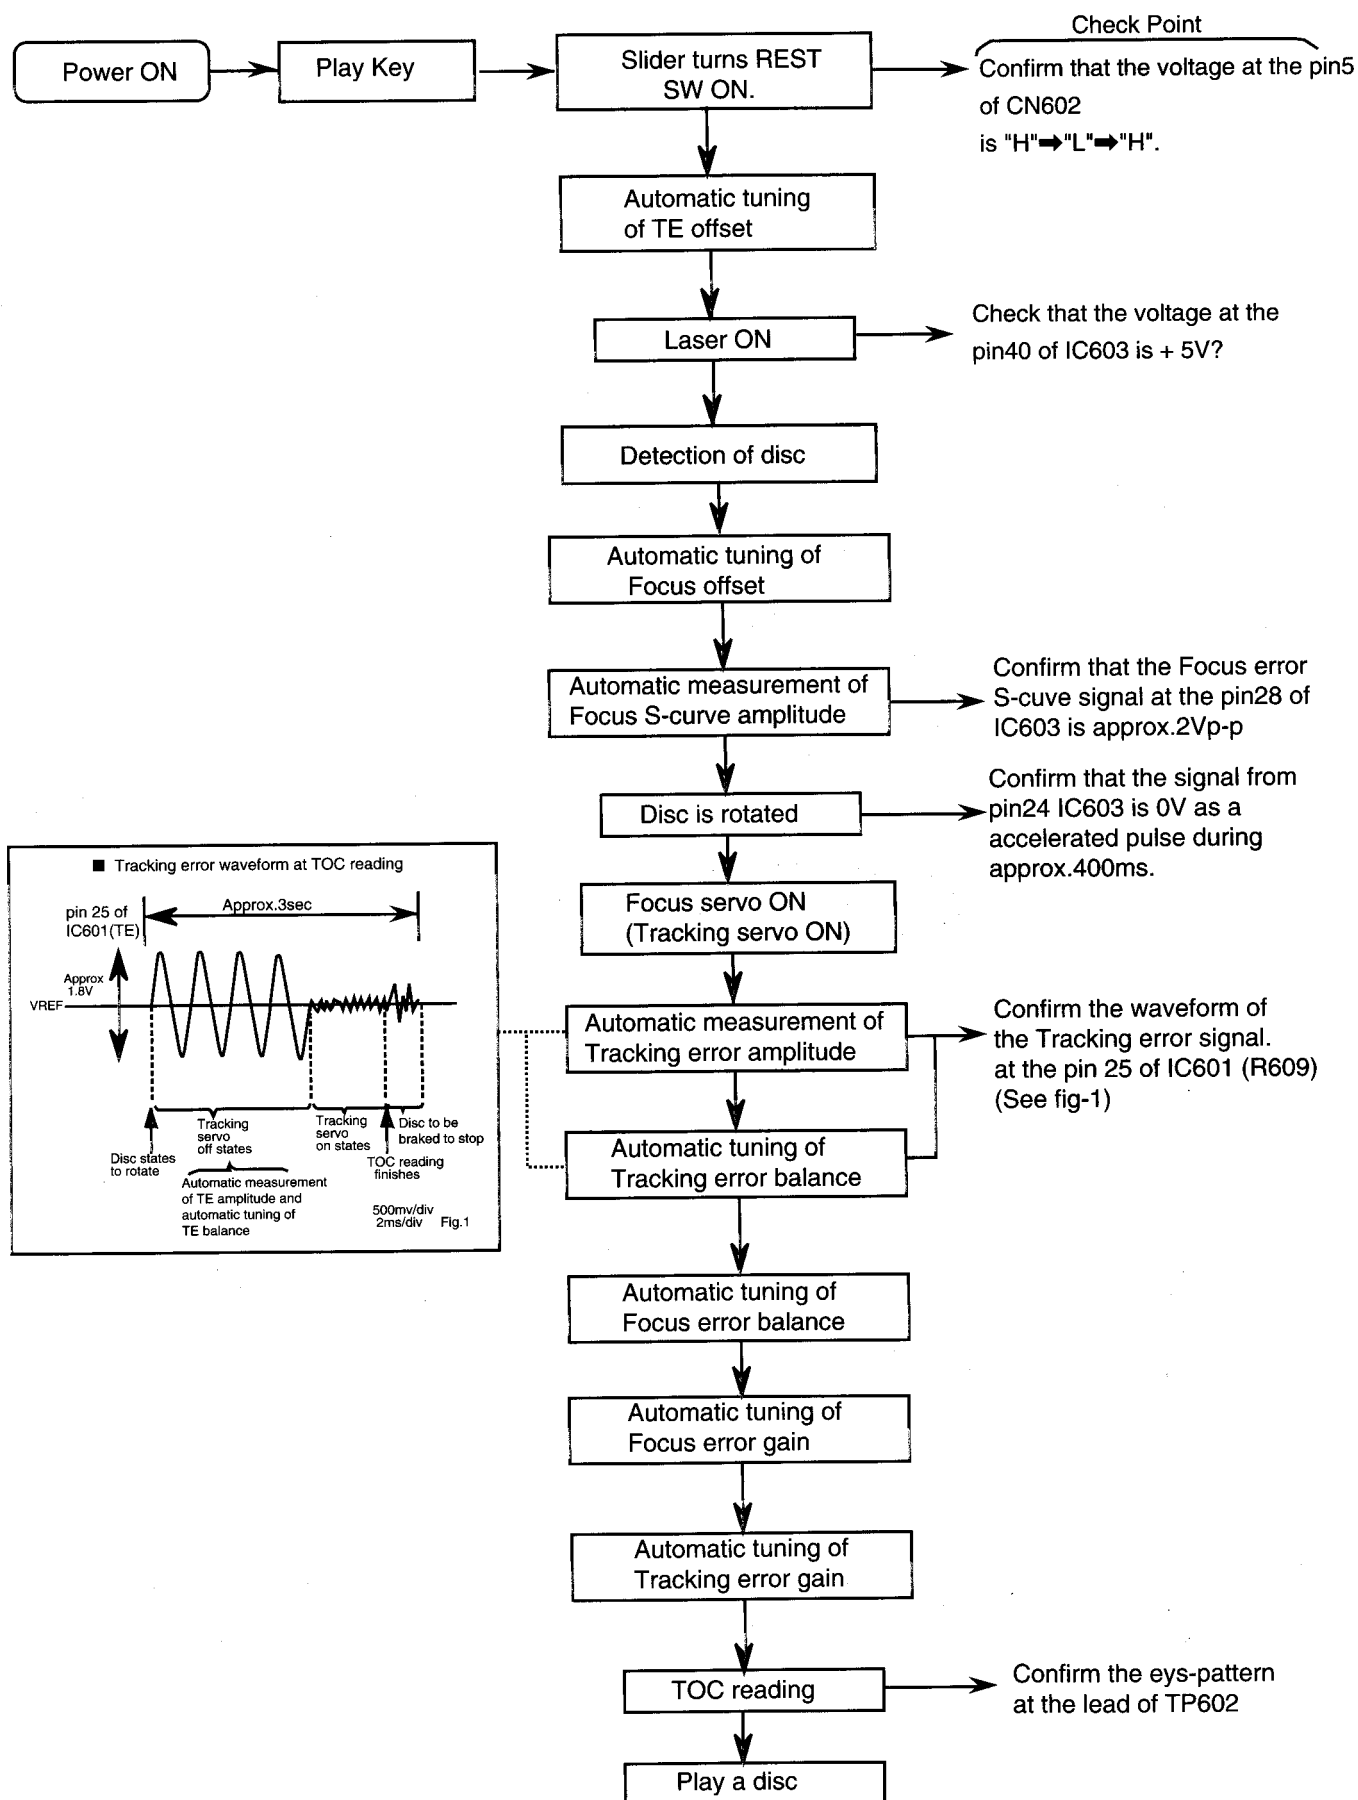

Maintenance of Laser Pickup Replacement of Laser Pickup


(1) Cleaning the pick up lens

Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

(2) Life of the laser diode (Fig.1)

When the life of the laser diode has expired, the following symptoms will appear.

- (1) The level of RF output (EFM output: amplitude of eye pattern) will below.

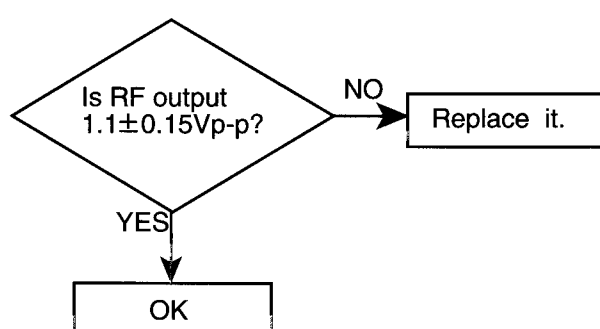


(Fig.1)

(3) Semi-fixed resistor on the APC PC board

The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.

If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.

If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.

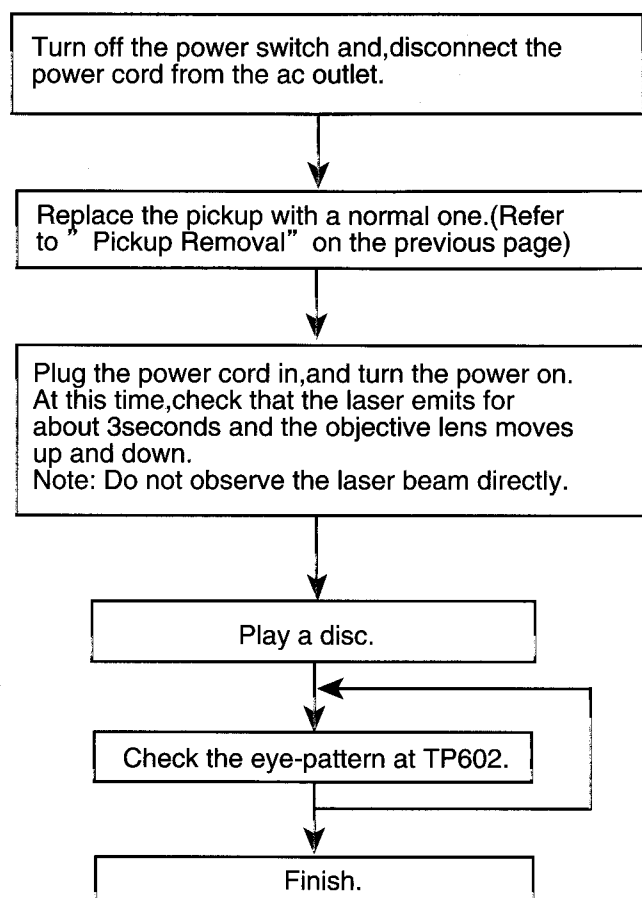

Self Diagnosis Function of CD


1. Purpose

This function is designed to display an error to readily clarify the cause of such an error should any trouble occur in CD.

2. How to Use the Function

- (1) Turn the microcomputer action of the set to [TEST] mode.
- (2) Press **[STOP]** + **[VOLUME-]** + **[POWER]** on the remote control same time.
Confirm that all of the LCDs have been turned on when set to the [TEST] mode subsequent to the step in item (2).
- (3) When the CD trouble has occurred after starting CD, an error code will be displayed on the display section of LCD, etc.




3. Error code and location in trouble

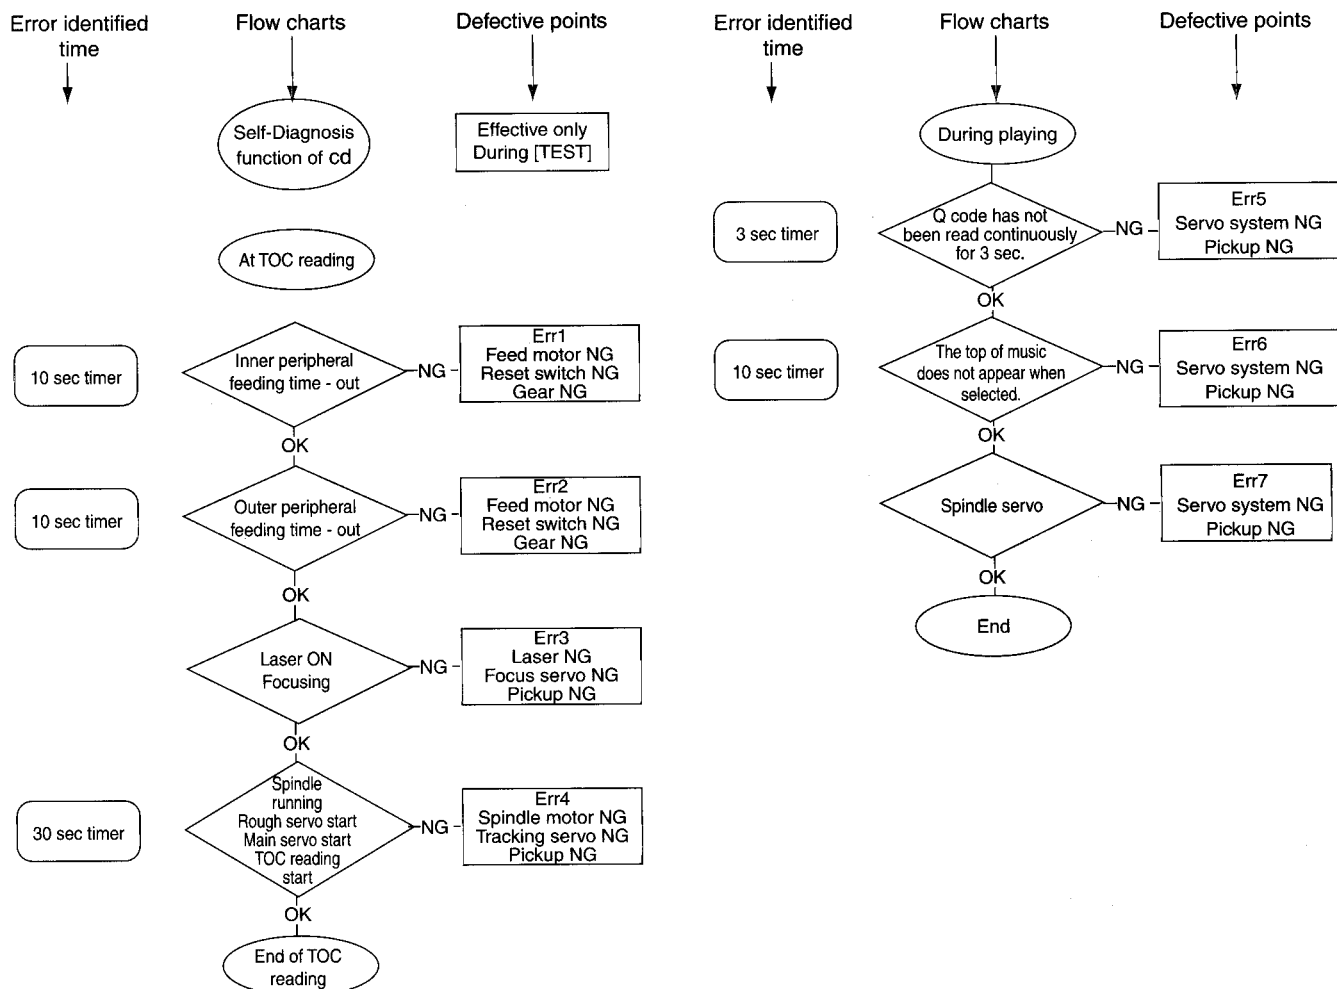


Error identified
time
↓

Flow charts
↓

Defective points
↓

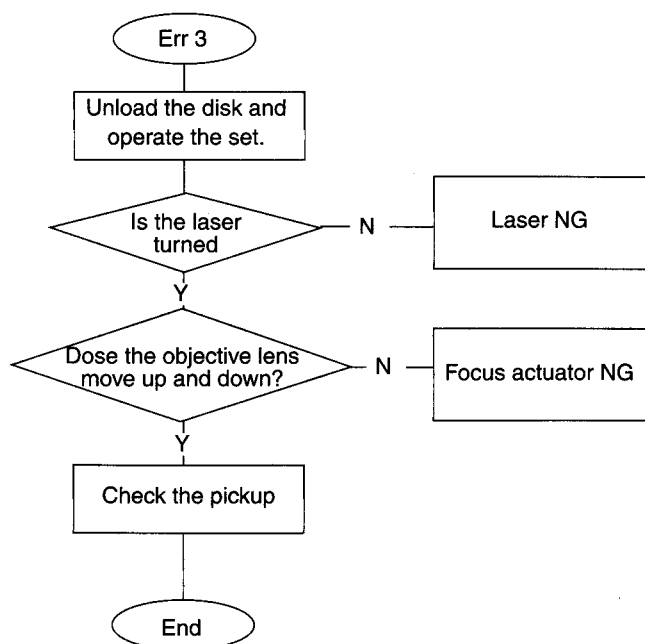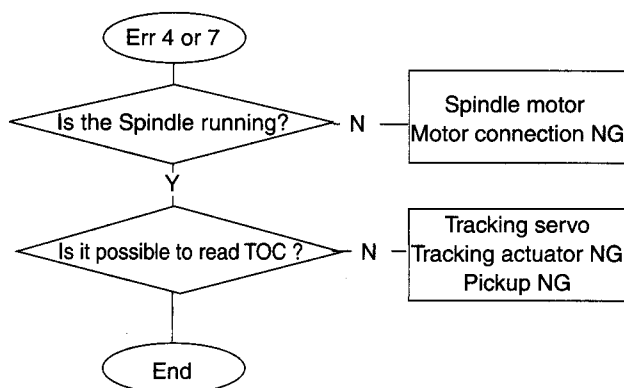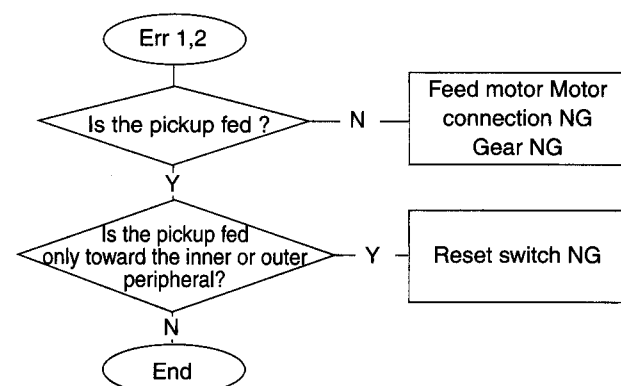



Block Diagrams

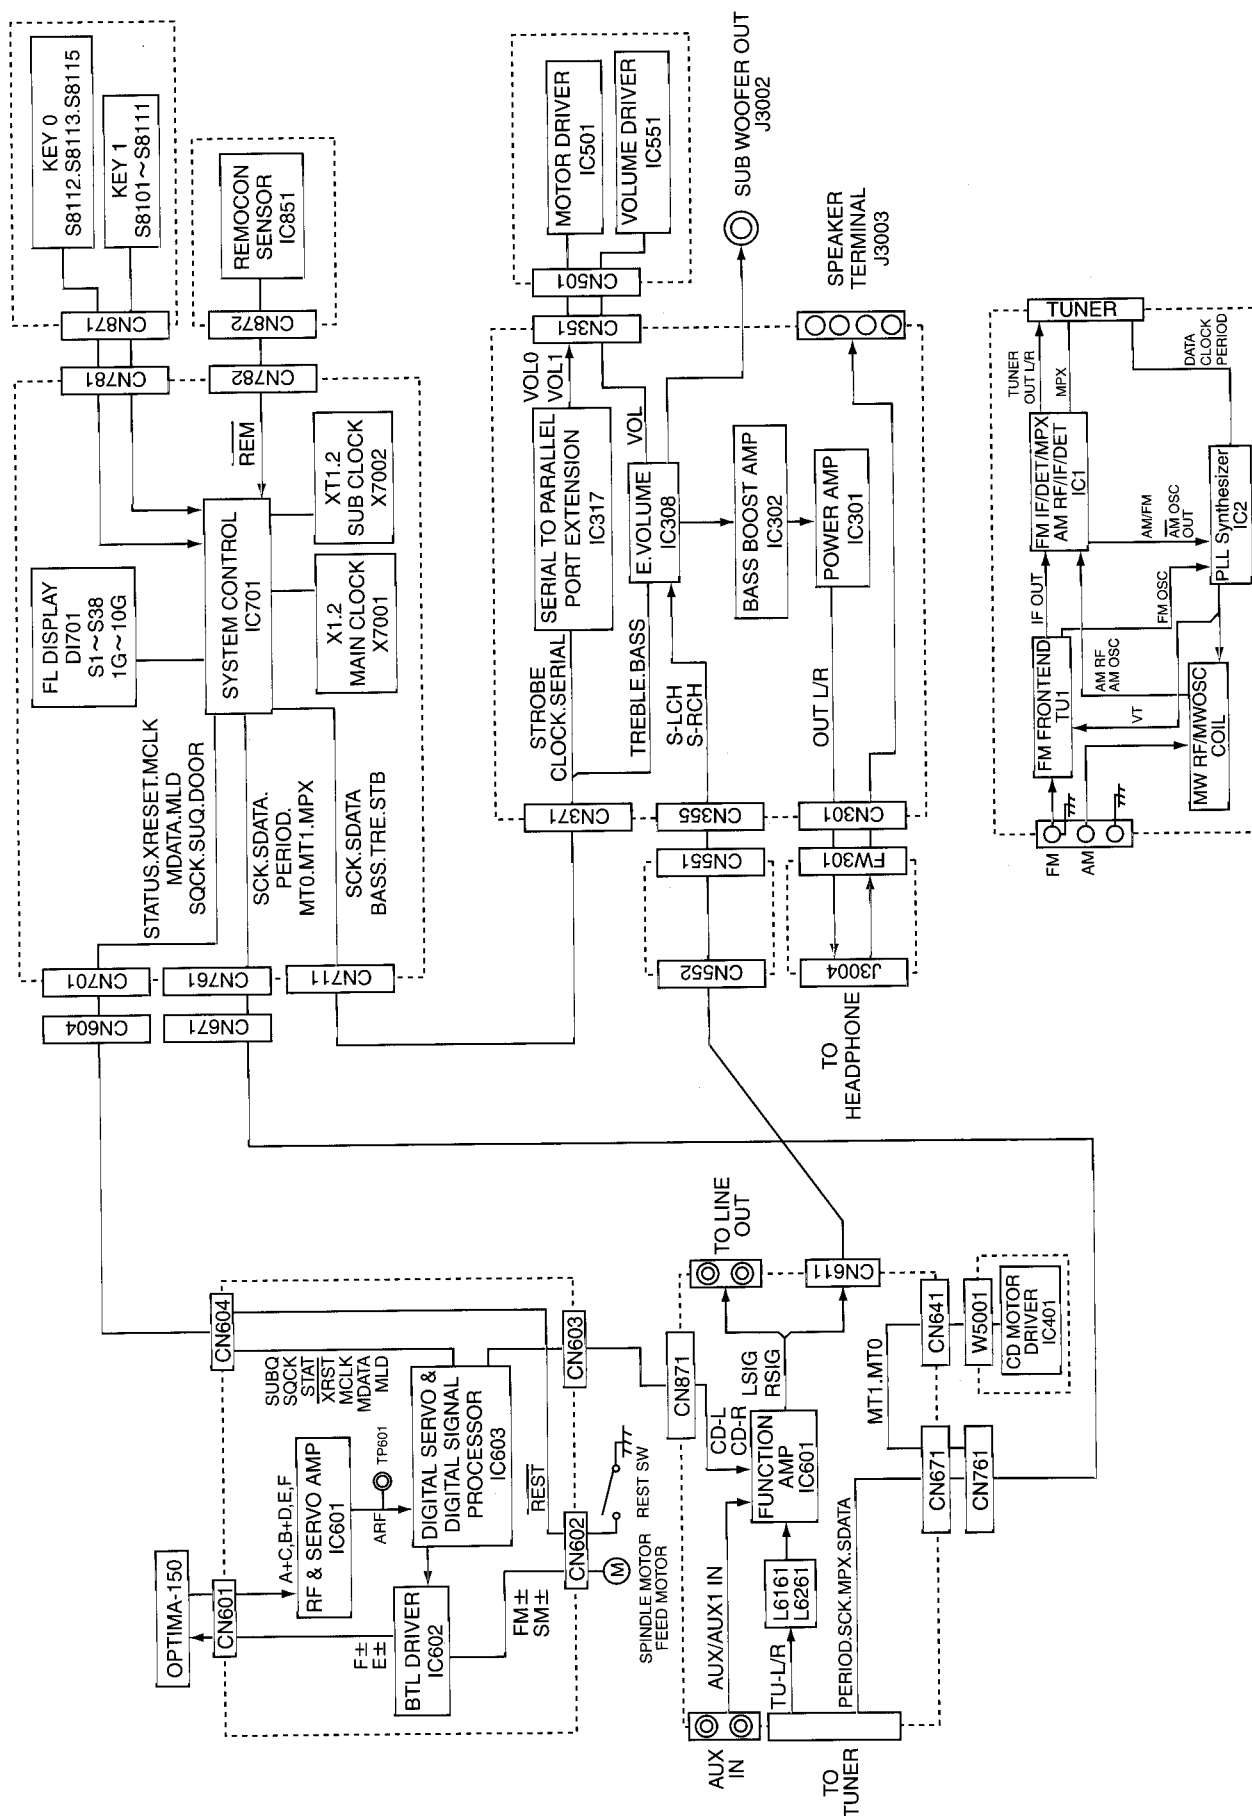


Schematic Diagrams

■ Main AMP. Section (FS-5000)

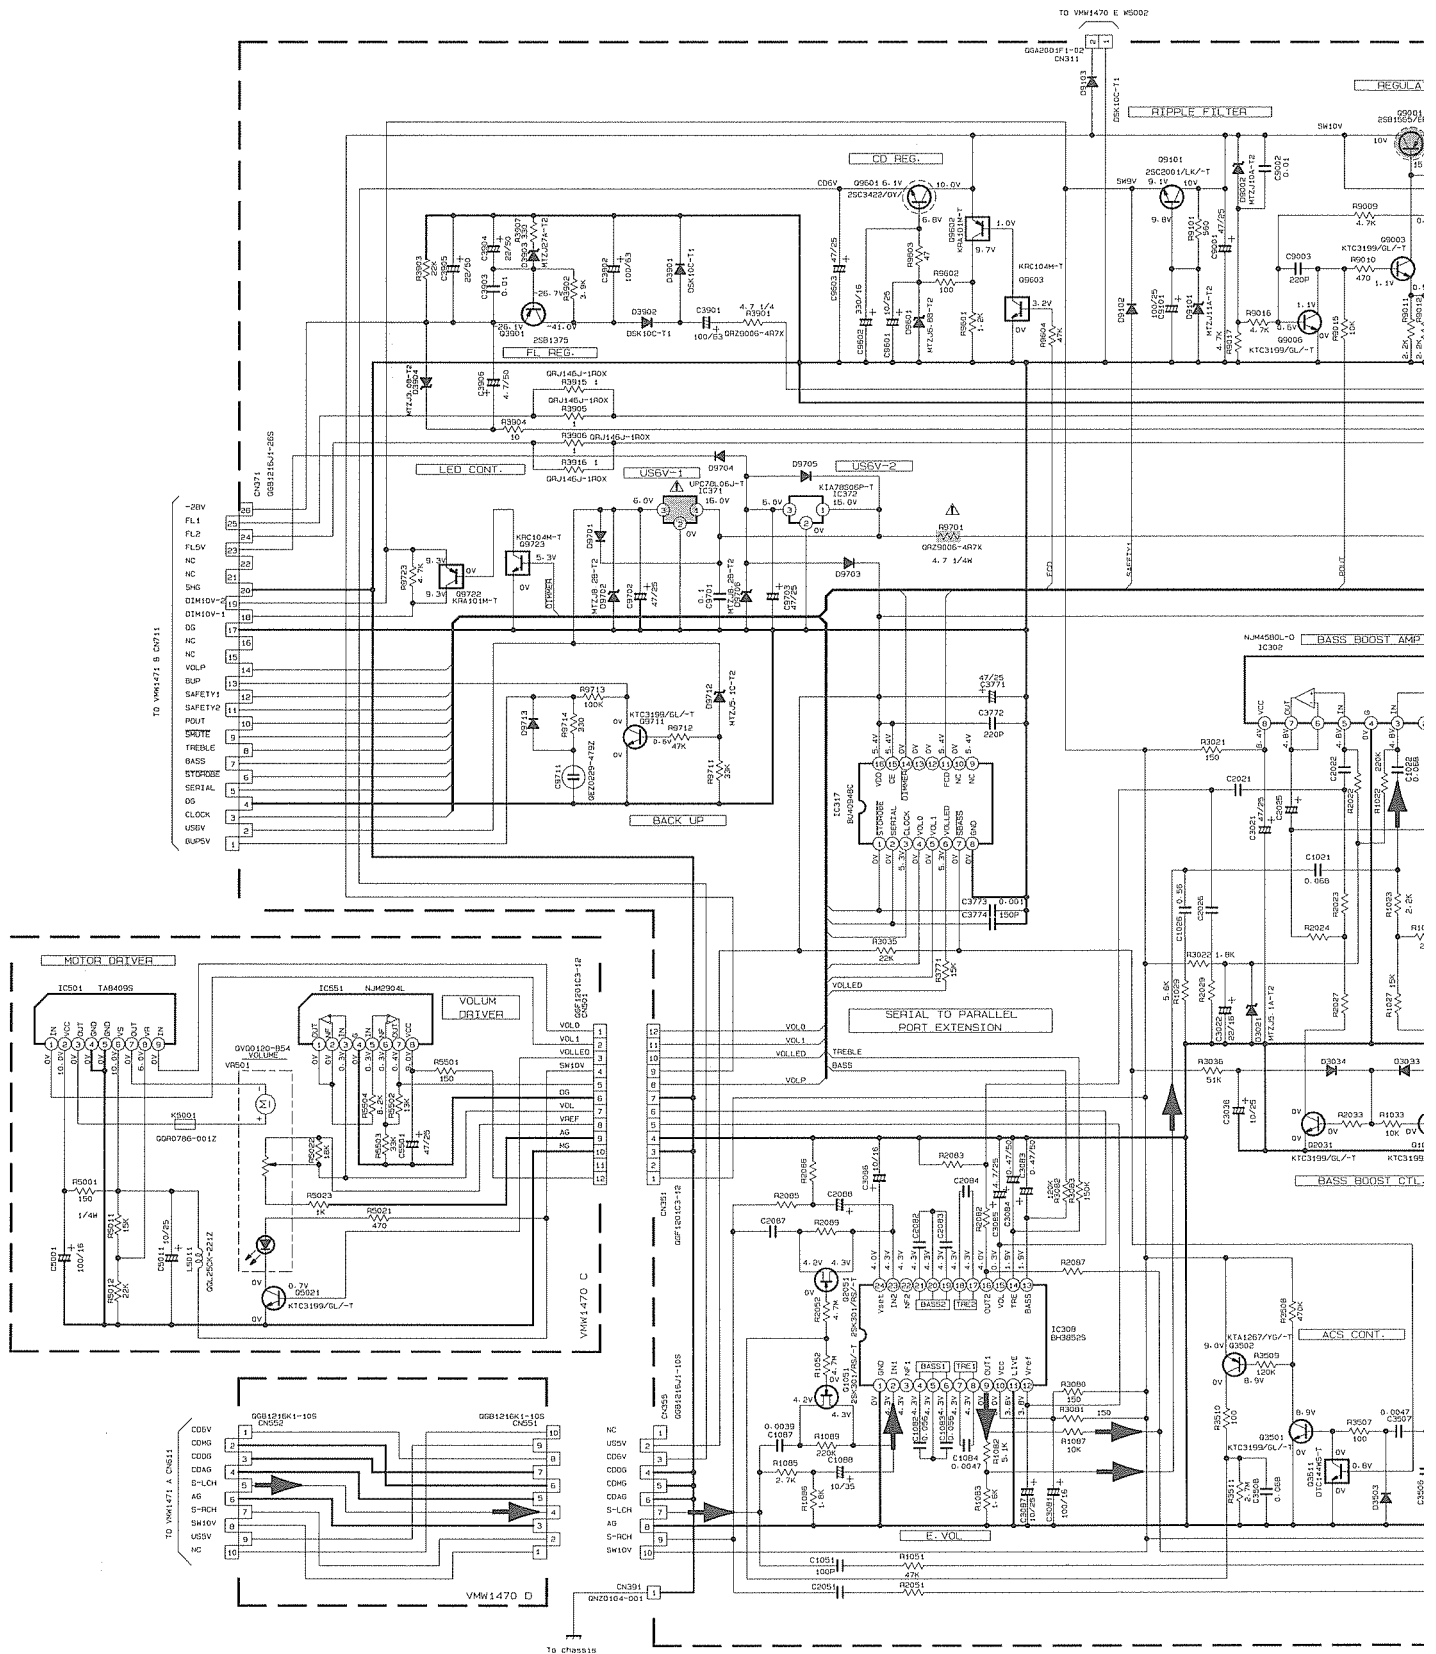

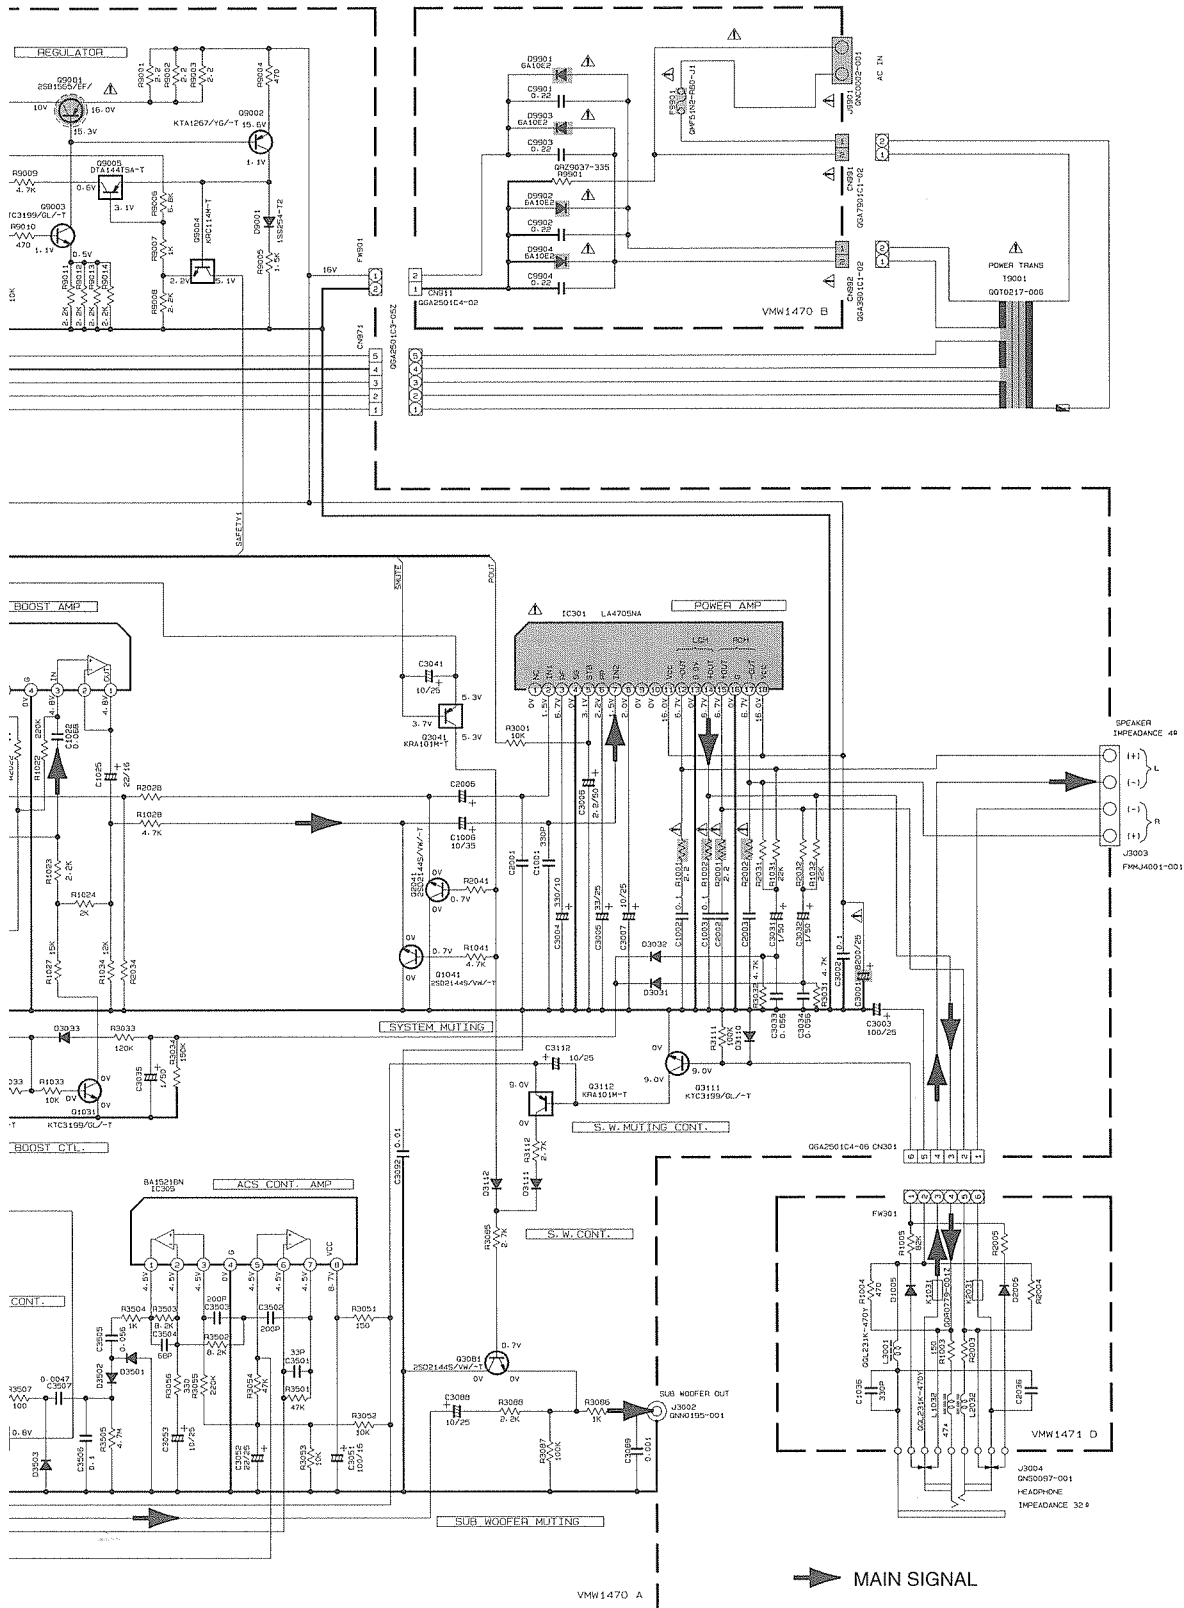

EXCEPT WHERE SPECIFIED, RESISTORS ARE 1/4W ±5% CARBON RESISTOR.
 CAPACITANCE VALUES ARE IN OHMS (Ω).
 CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
 CAPACITANCE VALUES ARE IN μF (μF).
 CAPACITANCE VALUES ARE IN μF (μF).
 CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μF)/RATED VOLTAGE (V).
 RESISTORS ARE HSS104T OR 1SS254T-77



MODEL
 FS-5000

Parts are safety assurance parts.
 When replacing those parts make
 sure to use the specified one.

■ Main AMP. Section (FS-6000)


5

4

3

2

1

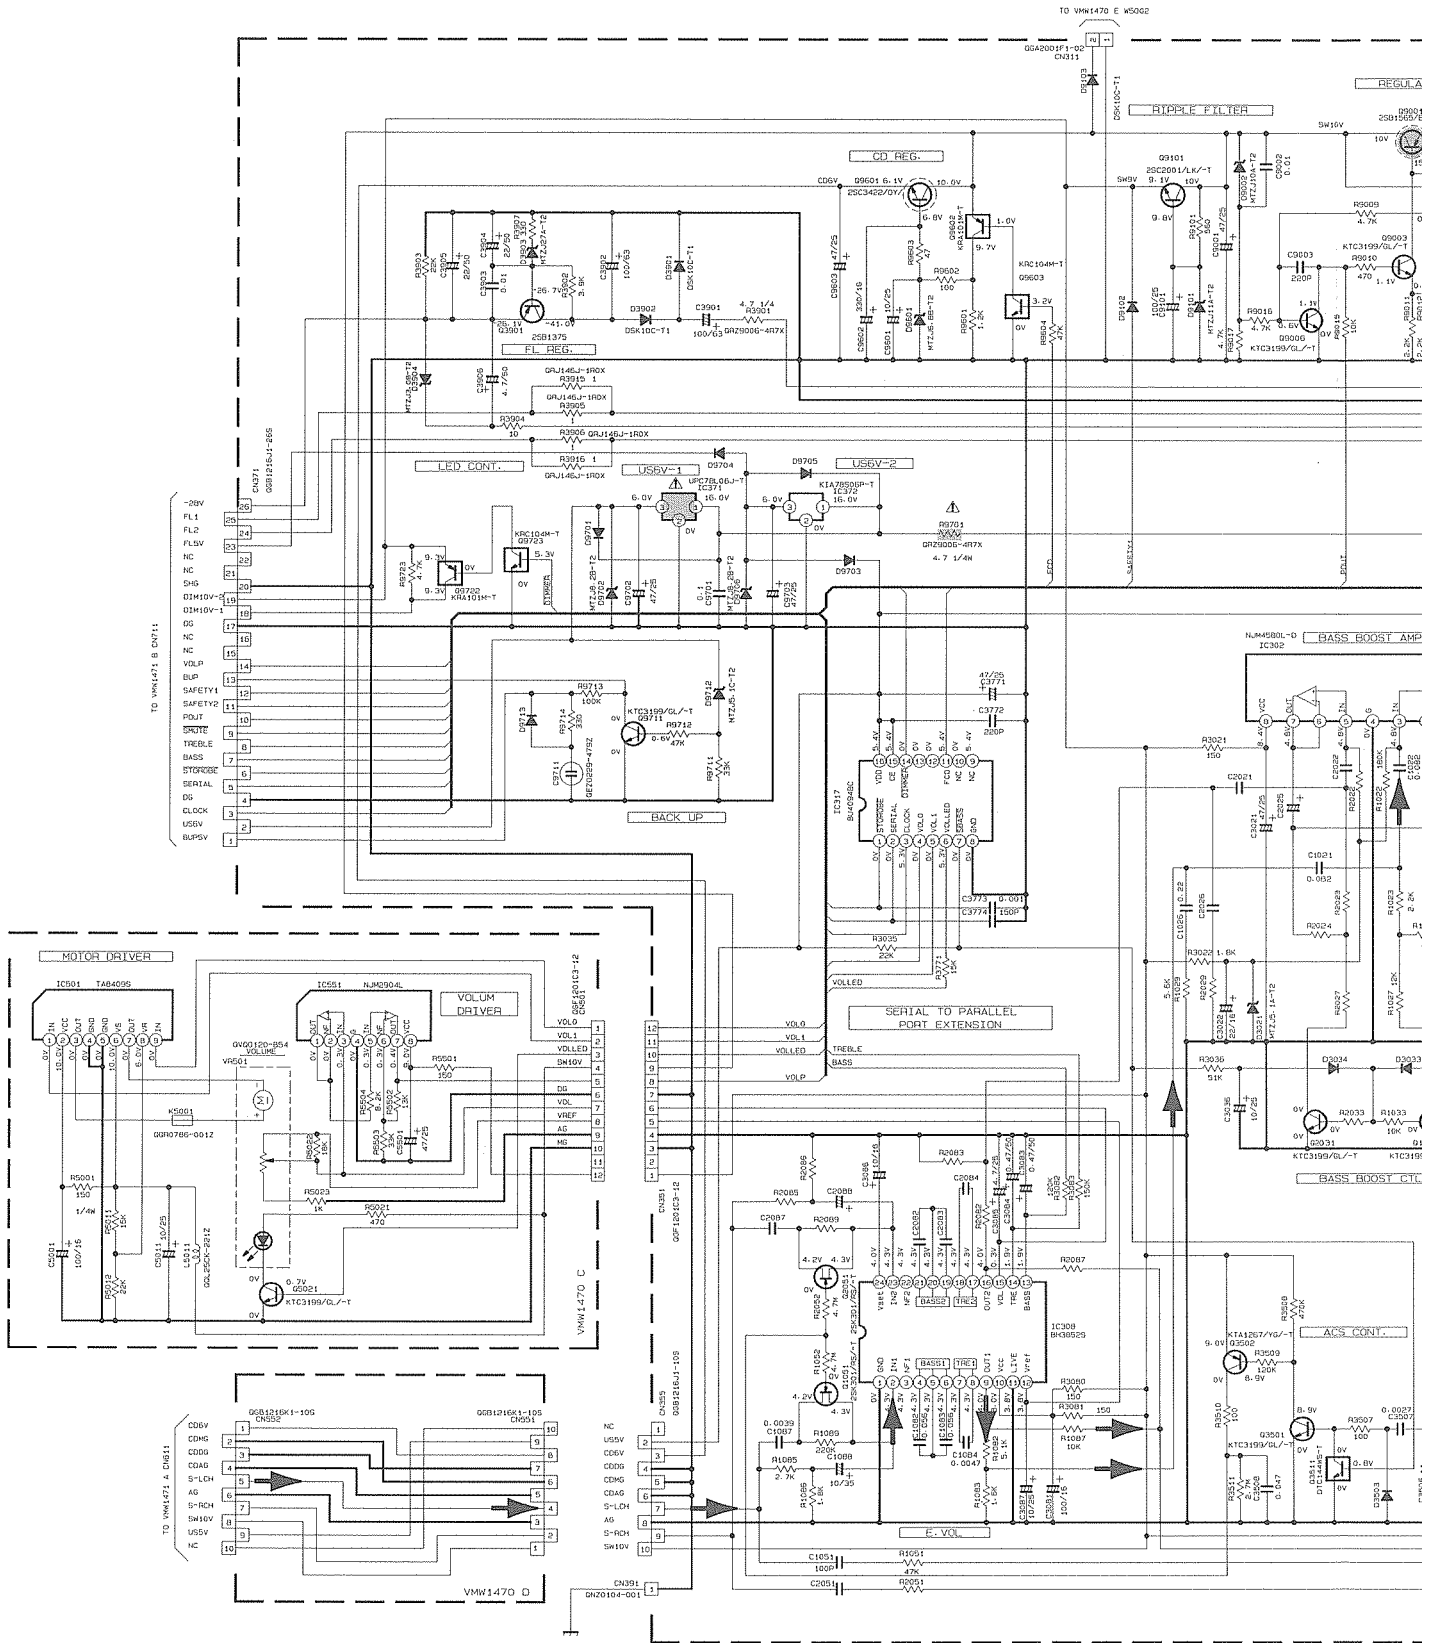



NOTES

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
CONDITION --- FUNC. CD STOP MODE

2. UNLESS OTHERWISE SPEC
ALL RESISTANCE VALU
ALL CAPACITANCE VALU
ALL INDUCTANCE VALU
ALL E-CAPACITORS ARE
ALL DIODES ARE HES1

■ FUNCTION & MOTOR DRIVER Section

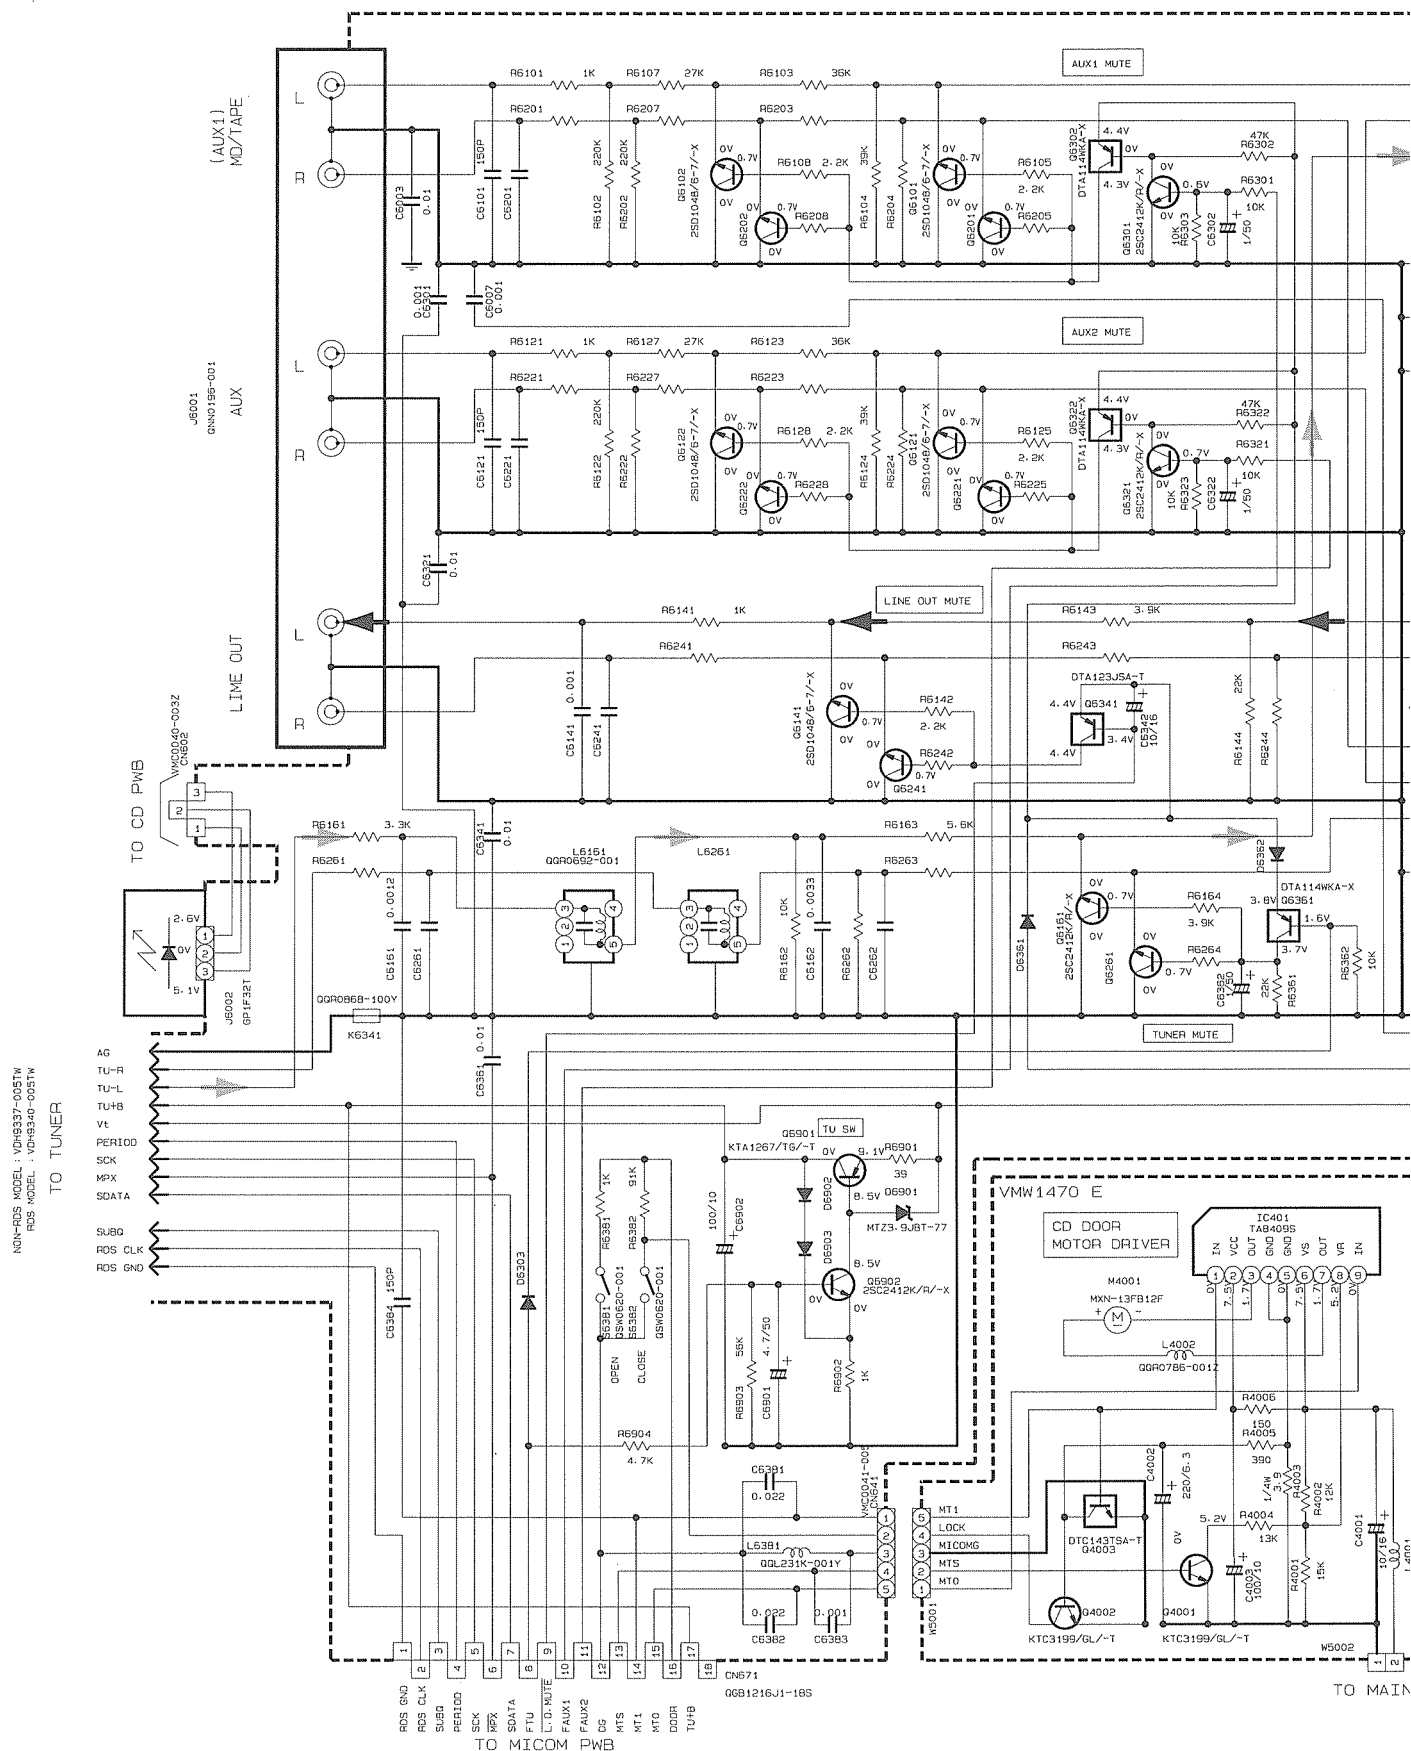

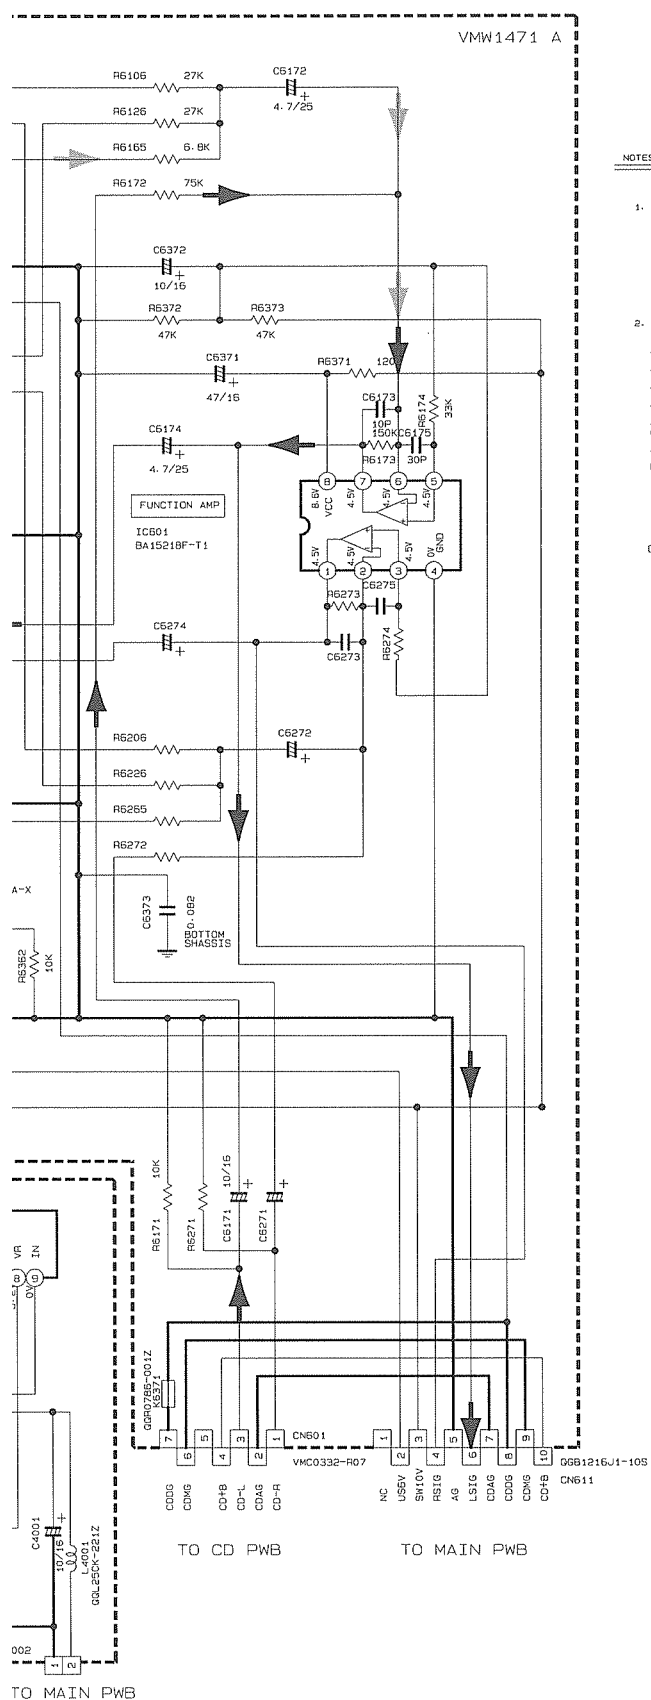

NOTES

1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER
OR OSCILLOSCOPE WITHOUT INPUT SIGNAL.
CONDITION --- CD STOP MODE
INSIDE BRACKET VALUES ARE OTHER FUNCTIONS
() IS INVERT MODE
2. UNLESS OTHERWISE SPECIFIED.
RESISTORS ARE 1/6 $\pm$ 5% CARBON RESISTOR OR 1/10W $\pm$ 5% MG RESISTOR
ALL RESISTANCE VALUES ARE IN OHM(Ω).
ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
ALL CAPACITANCE VALUES ARE IN μ F(P=pF).
ALL INDUCTANCE VALUES ARE IN μ H(m=mH).
ALL E. CAPACITORS ARE SHOWN IN THE FORM
OF CAPACITANCE (X F)/RATED VOLTAGE (V).
ALL DIODES ARE 1SS254T-77 OR HSS104TJ
NI MEANS NO INSERT

(FA) FUSEBLE RESISTOR

DIGITAL TRANSISTOR


DTA114WKA-X	DTC123J5A-T	DTA123J5A-T
		
G6361	Q4003	G6341

	E/B/EN/EE	D/J/A U/UT/US/UG/UF/UX
C6101/C6201 C6121/C6221 C6141/C6241 C6175/C6275	USE	NO USE

■ System Controller & FL Display Section



QLF004B-001
DI701

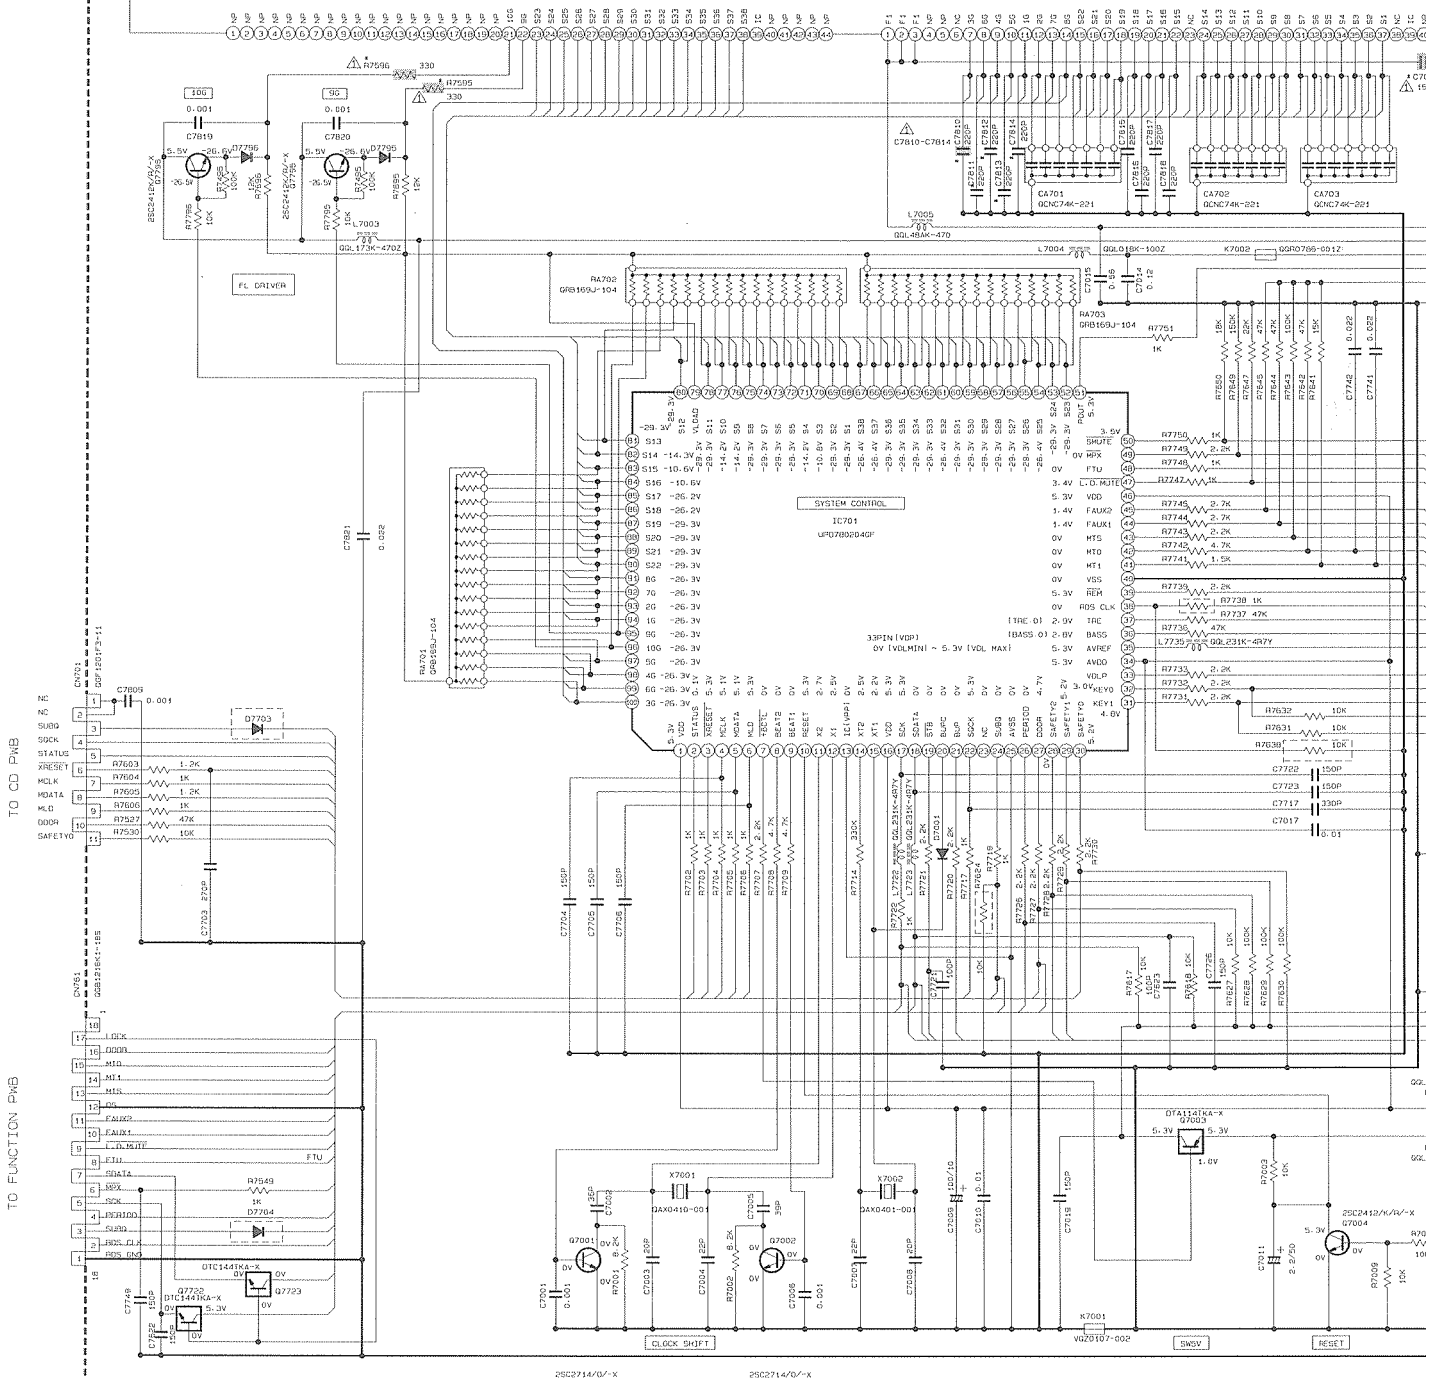


25C2714/0/-X

25C2714/Q/-X

25C2714/Q/-X

25C2714/Q/-X

CD Section

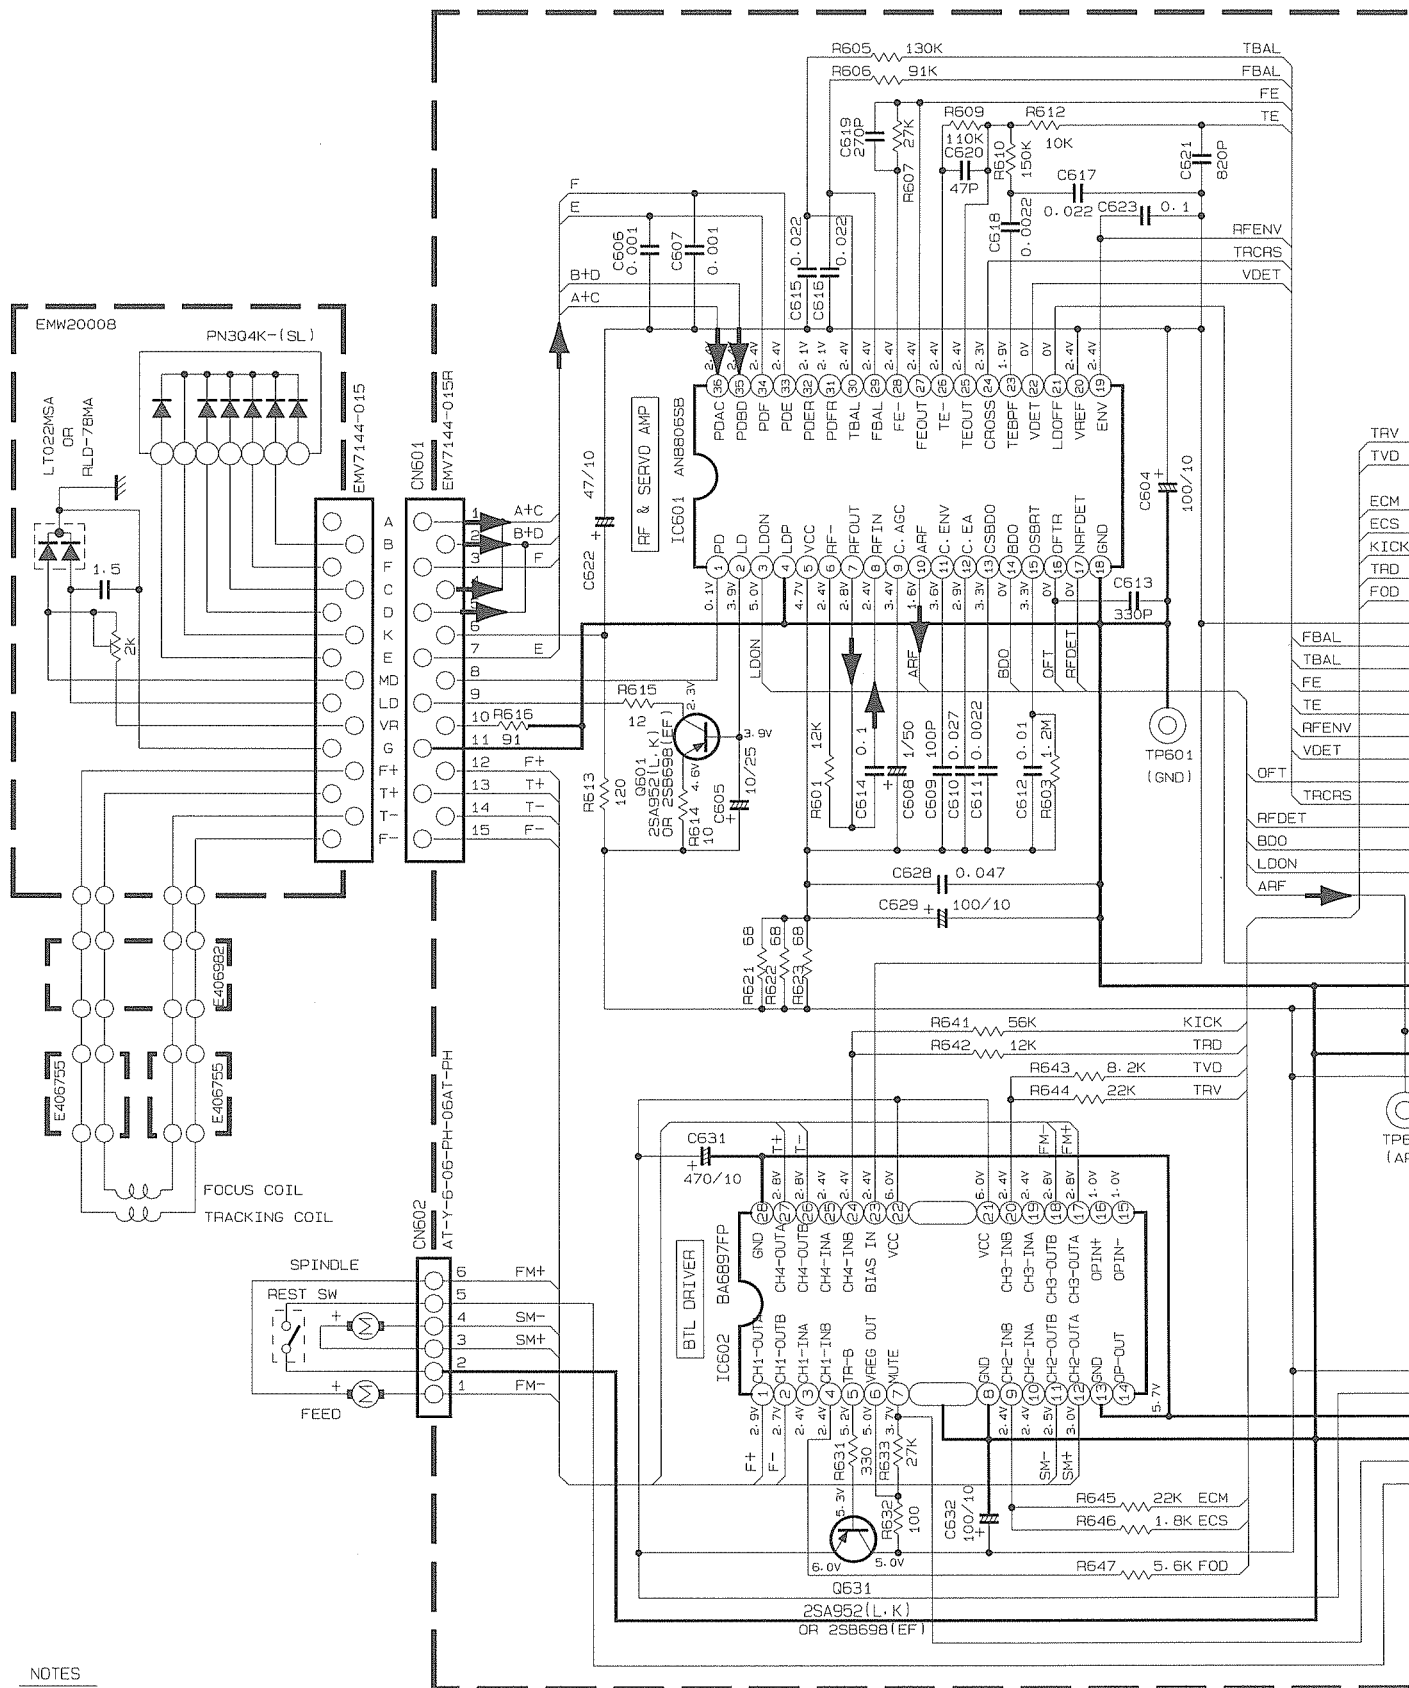

NOTES


- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER
- UNLESS OTHERWISE SPECIFIED, RESISTORS ARE 1/6W ±5% CARBON RESISTOR.
ALL RESISTANCE VALUES ARE IN OHM(Ω).
ALL CAPACITORS ARE CERAMIC CAPACITOR OR MYLAR CAPACITOR.
ALL CAPACITANCE VALUES ARE IN P(F)(P=pF).
ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μF)/RATED VOLTAGE (V).

A

B


C

D

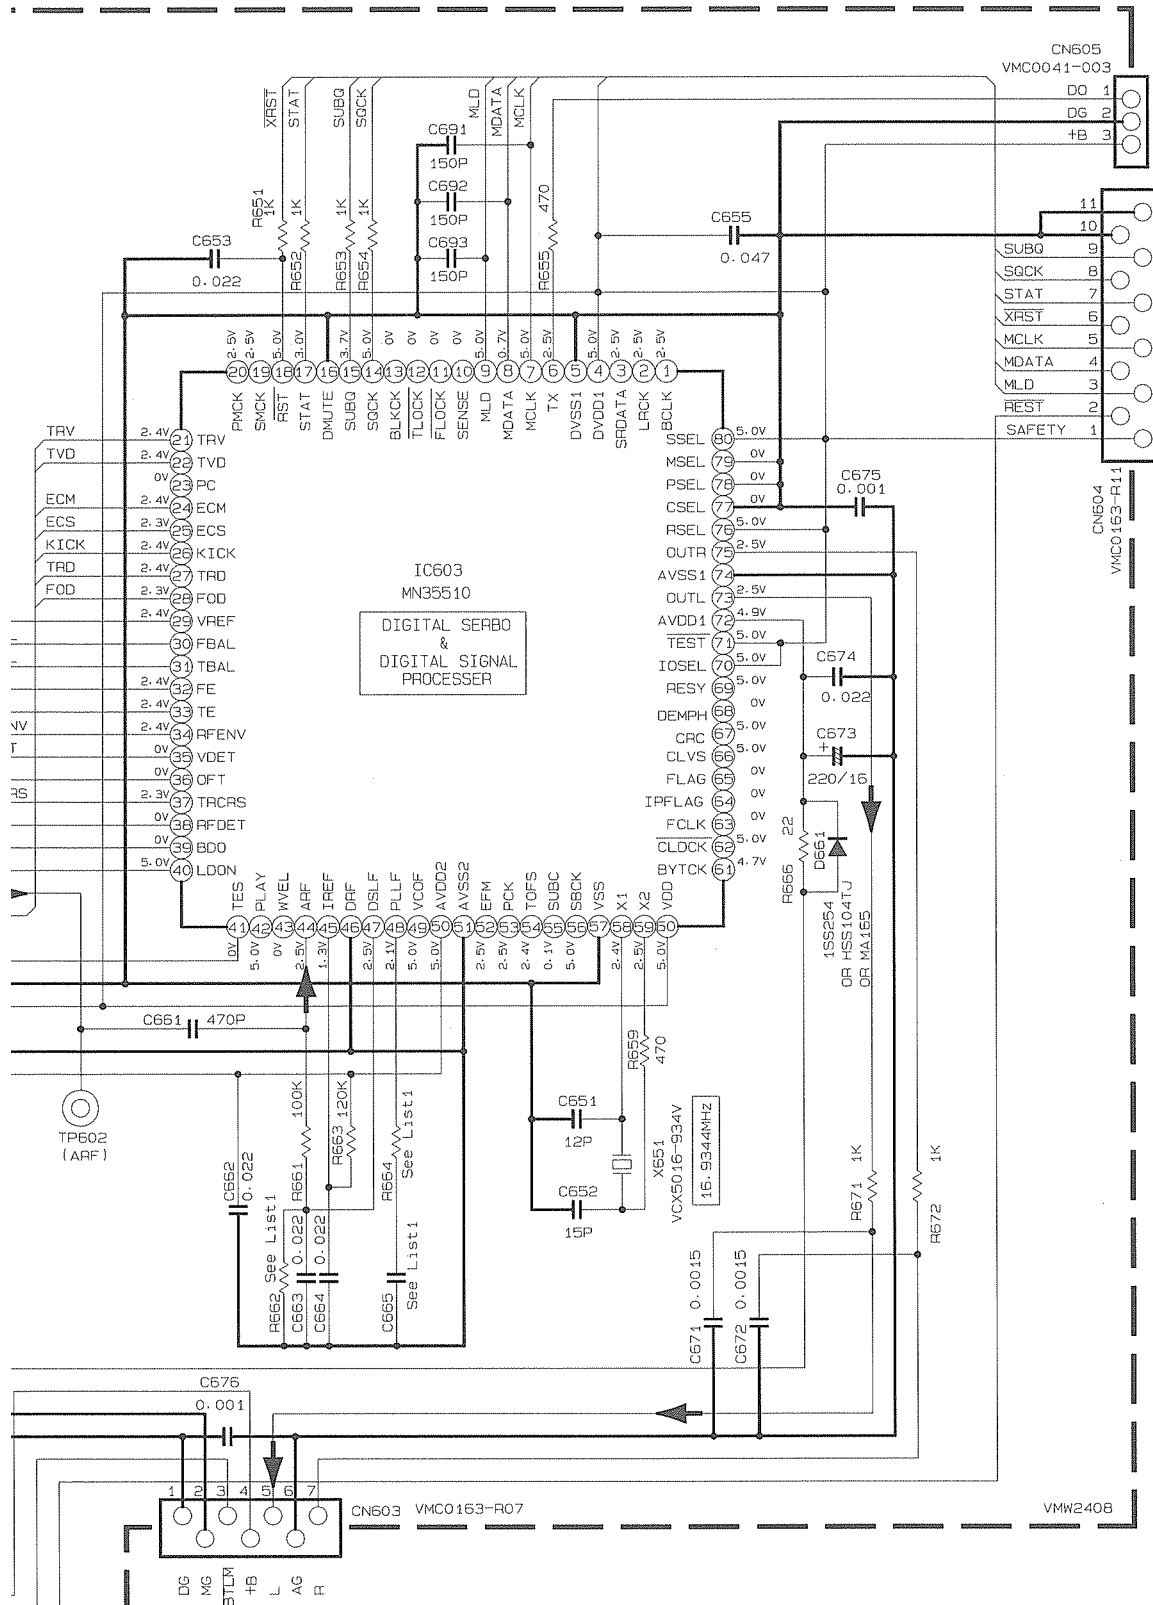


List1		
C655	0.33	0.1
R662	None	1.5M
R664	680	470
Using Model	FS-1.UX-1000.UX-1500R. UX-2000.UX-2000R.FS-1000. FS-2000.UX-T100.UX-T200. UX-T200R.FS-T100. UX-T150.UX-T151.UX-T250R	Others

Tuner Section

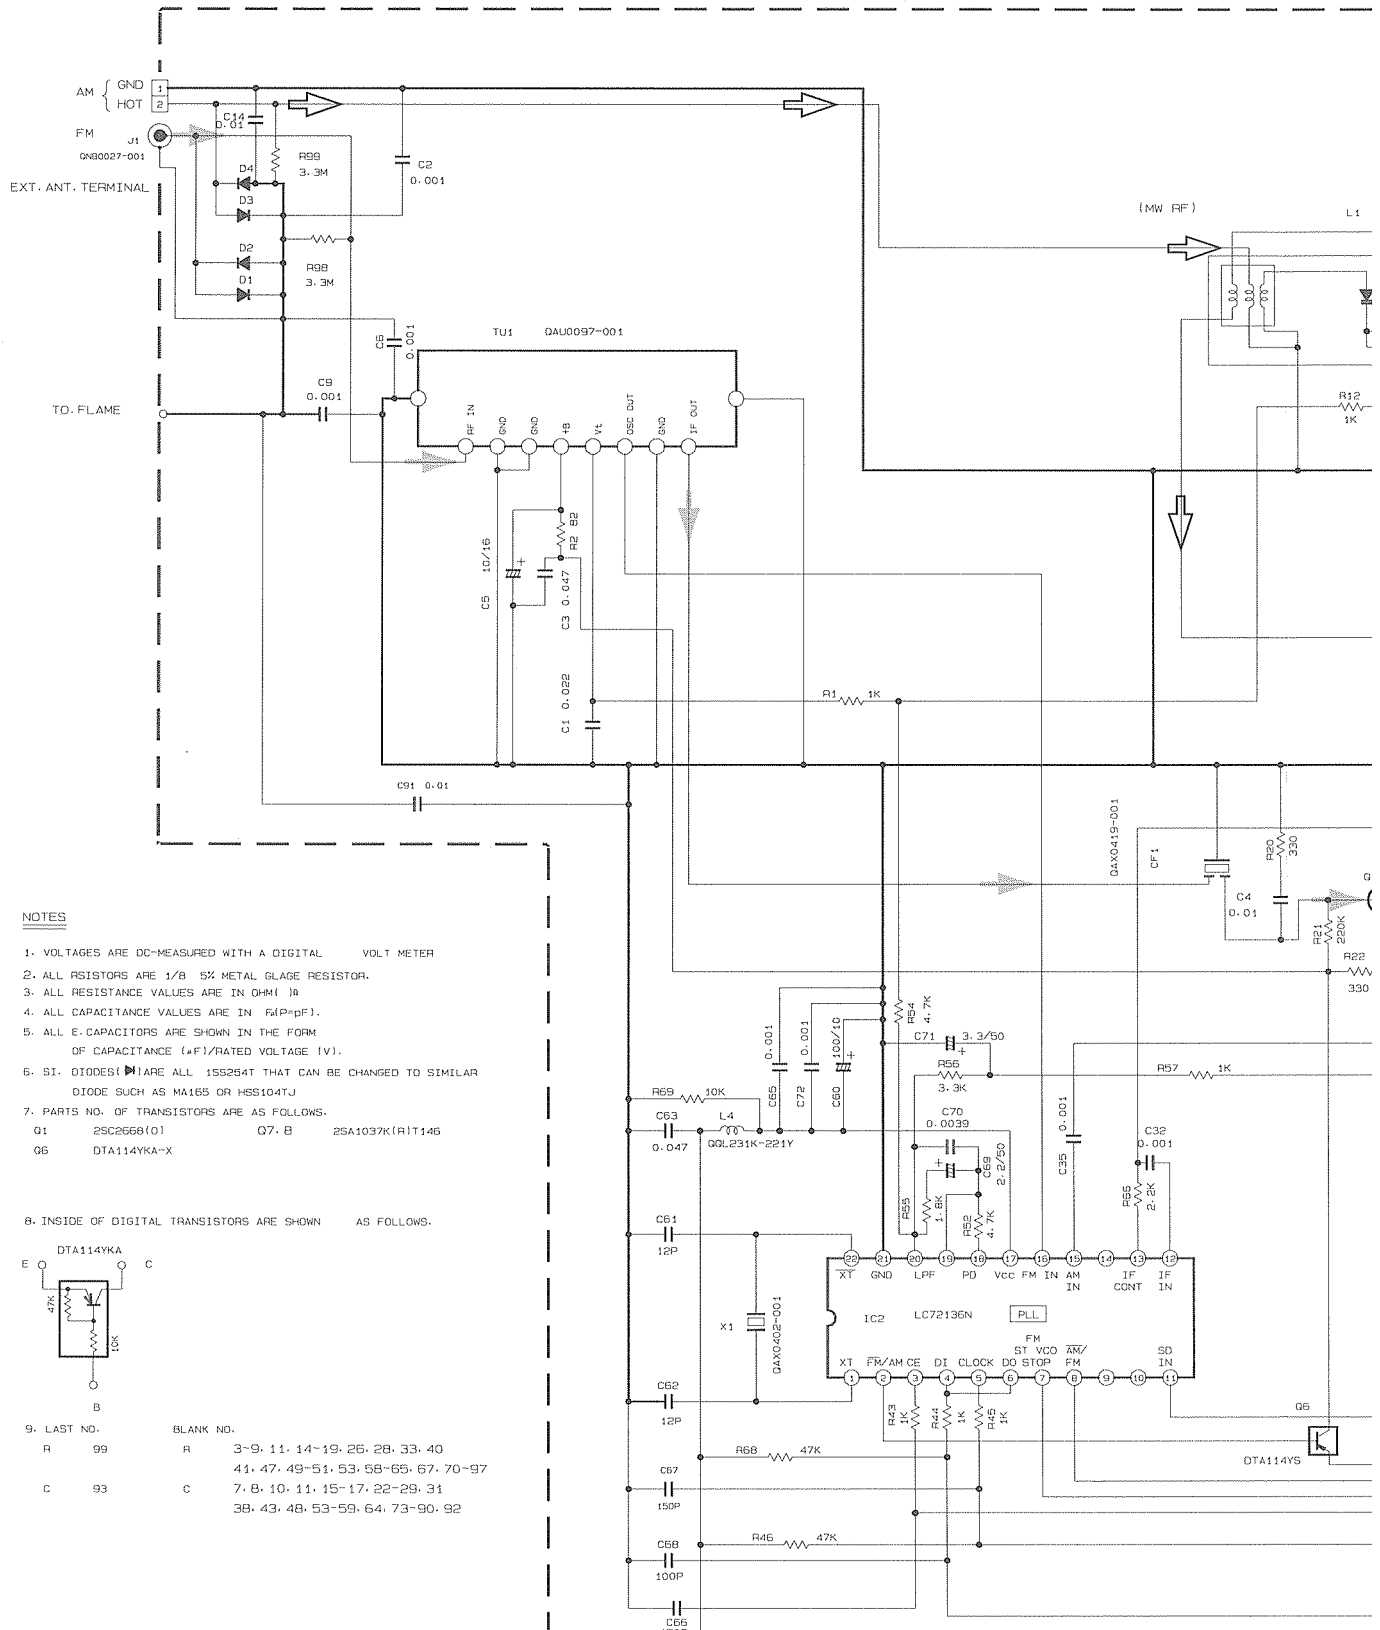

CONDITION	PIN NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
IC1 FM NO SIGNAL		2.0	0.5	0	2.0	5.1	5.1	0	0	0.3	5.1	5.1	1.1	1.1	4.4	3.7	3.7	1.4	0	1.3	1.1	2.0	2.0	5.1	2.0
IC1 FM 60dB STEREO		2.0	0.5	0	2.0	5.1	5.1	1.1	0	0.3	0	0	1.1	1.1	4.3	4.1	3.7	1.4	0	1.4	1.1	2.0	2.0	5.1	2.0
AM NO SIGNAL		2.0	0.5	0	2.0	5.1	5.1	0	0	0.3	5.1	5.1	1.1	1.1	4.5	0.1	0	1.4	1.4	1.5	1.6	2.0	2.0	5.1	2.0
IC2 FM NO SIGNAL		2.4	0	0	1.1	5.0	1.1	3.7	3.7	0	0	5.1	0	0	0	0	2.6	5.1	1.0	1.0	3.7	0	2.7		

Tr. No.	PIN NAME	E	C	B
FM 67.5MHz		0	7.5	0.7
AM 520KHz		0	0	0

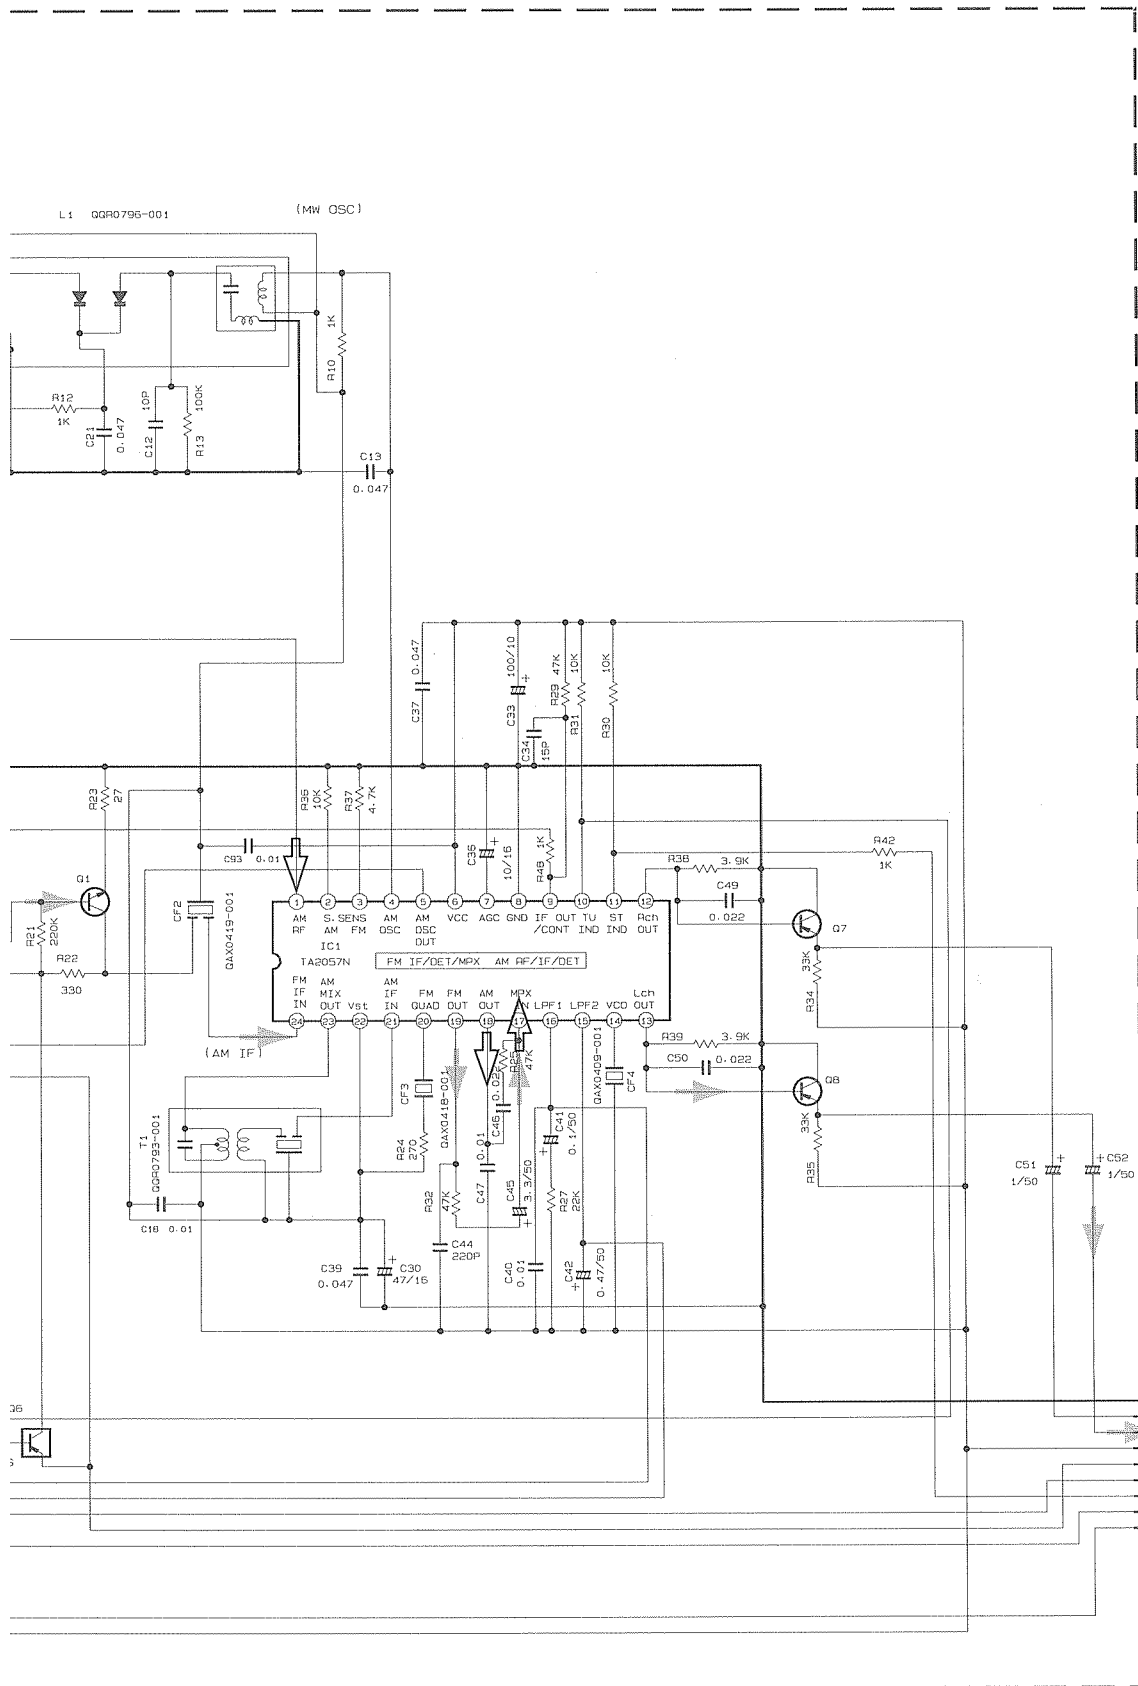

Q1			Q5			Q7			Q8		
E	C	B	E	C	B	E	C	B	E	C	B
0	7.5	0.7	0.8	0.8	0	1.6	0	1.1	1.6	0	1.1
0	0	0	0.8	0	0.7	1.6	0	1.1	1.6	0	1.1

J

FS-5000
FS-6000
FS-7000

➡ FM/TUNER MAIN SIGNAL
➡ AM RADIO SIGNAL

D

E


F


G

H


Printed Circuit Boards

■ Main Board:Block No.0 1

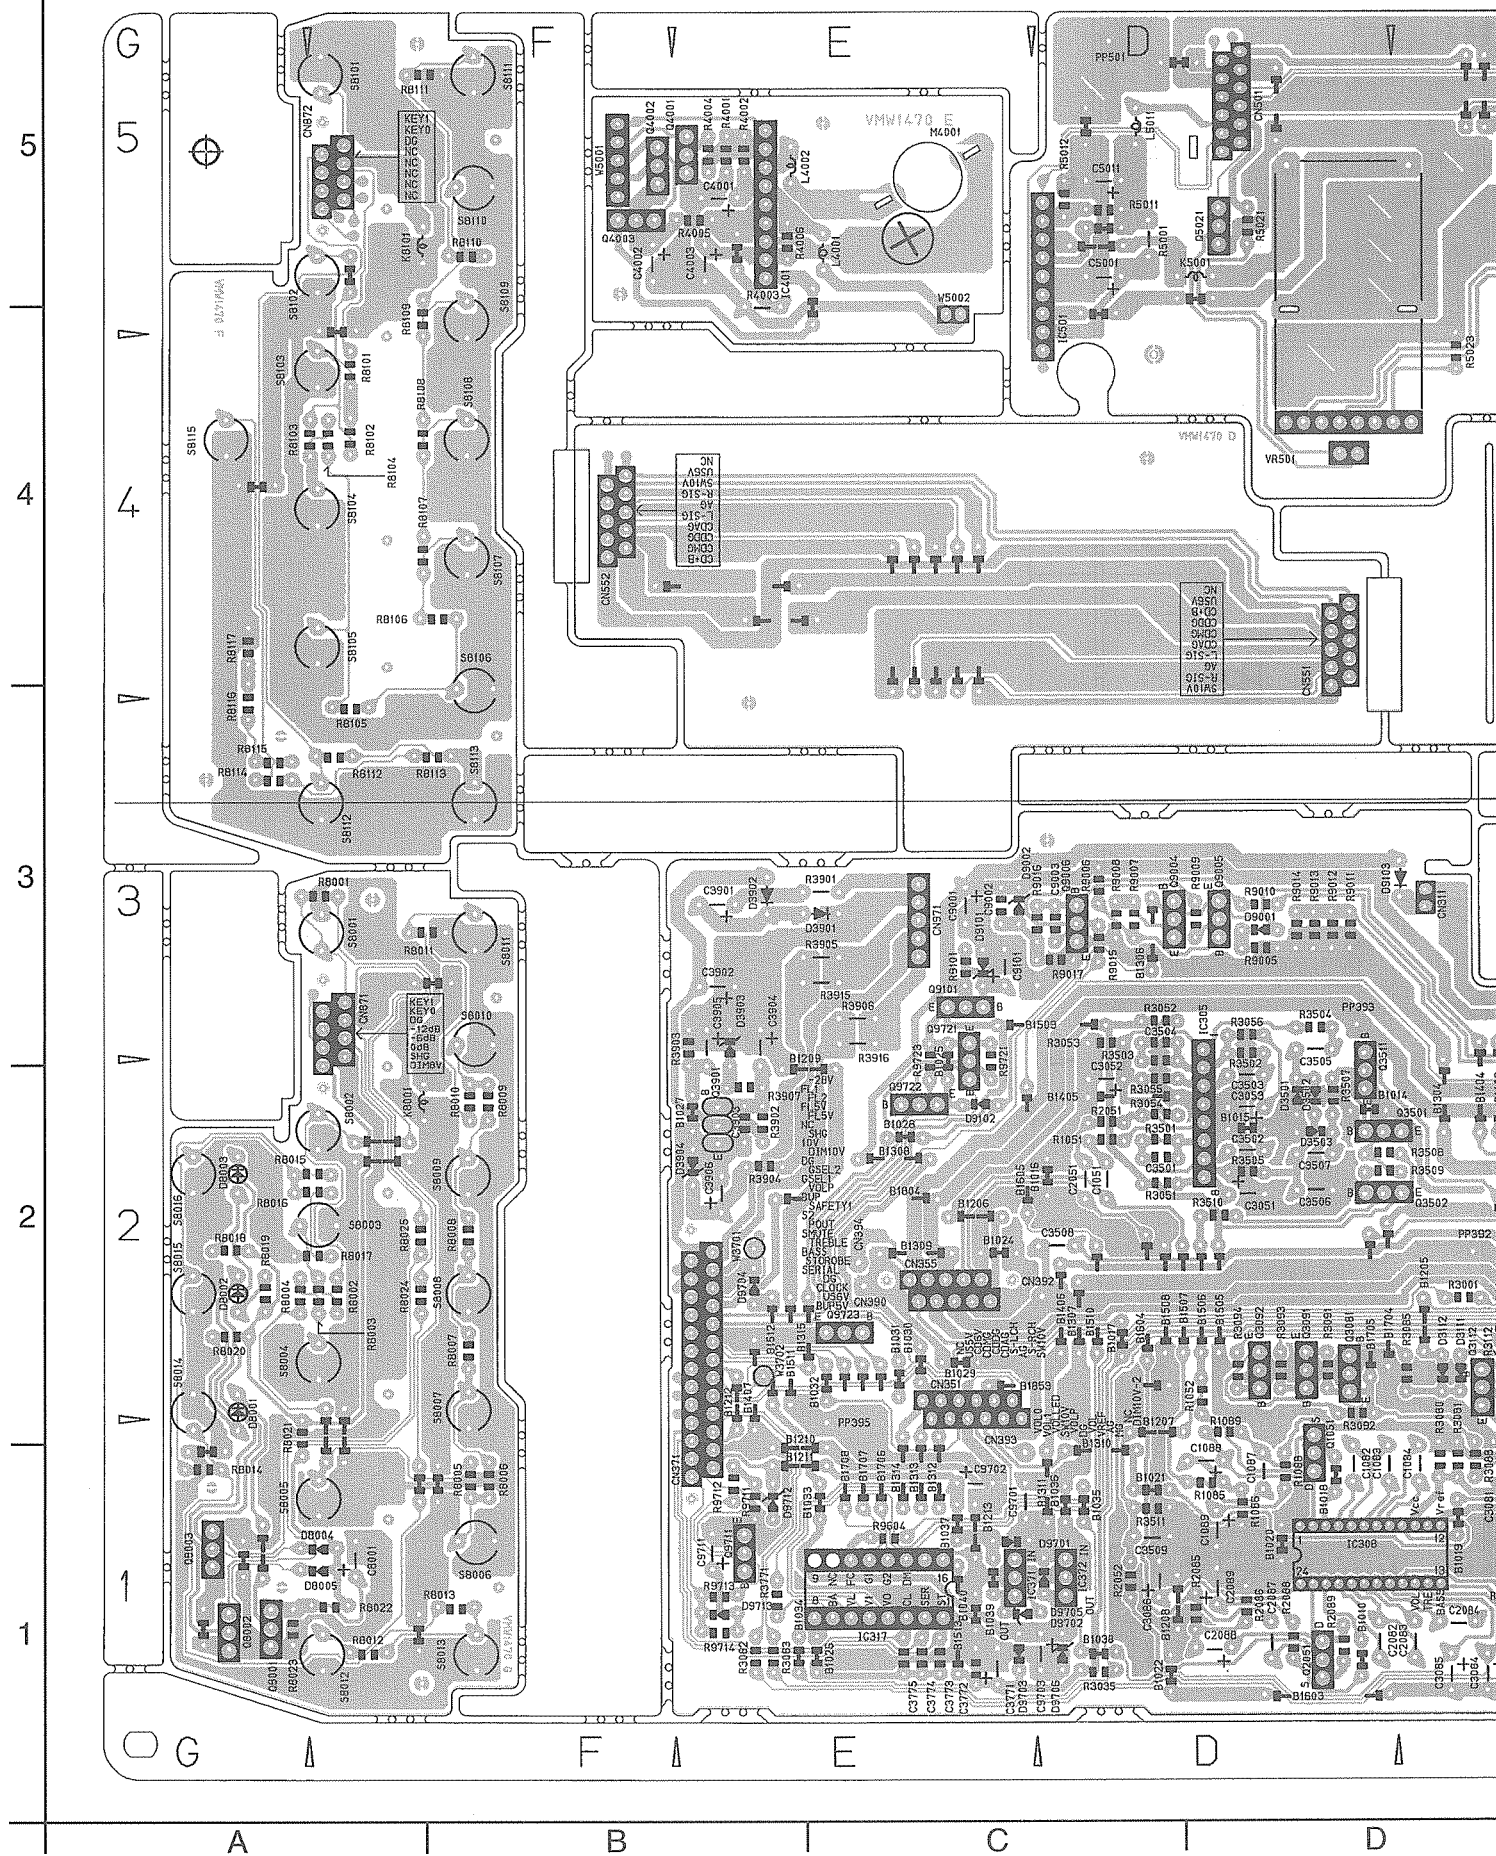


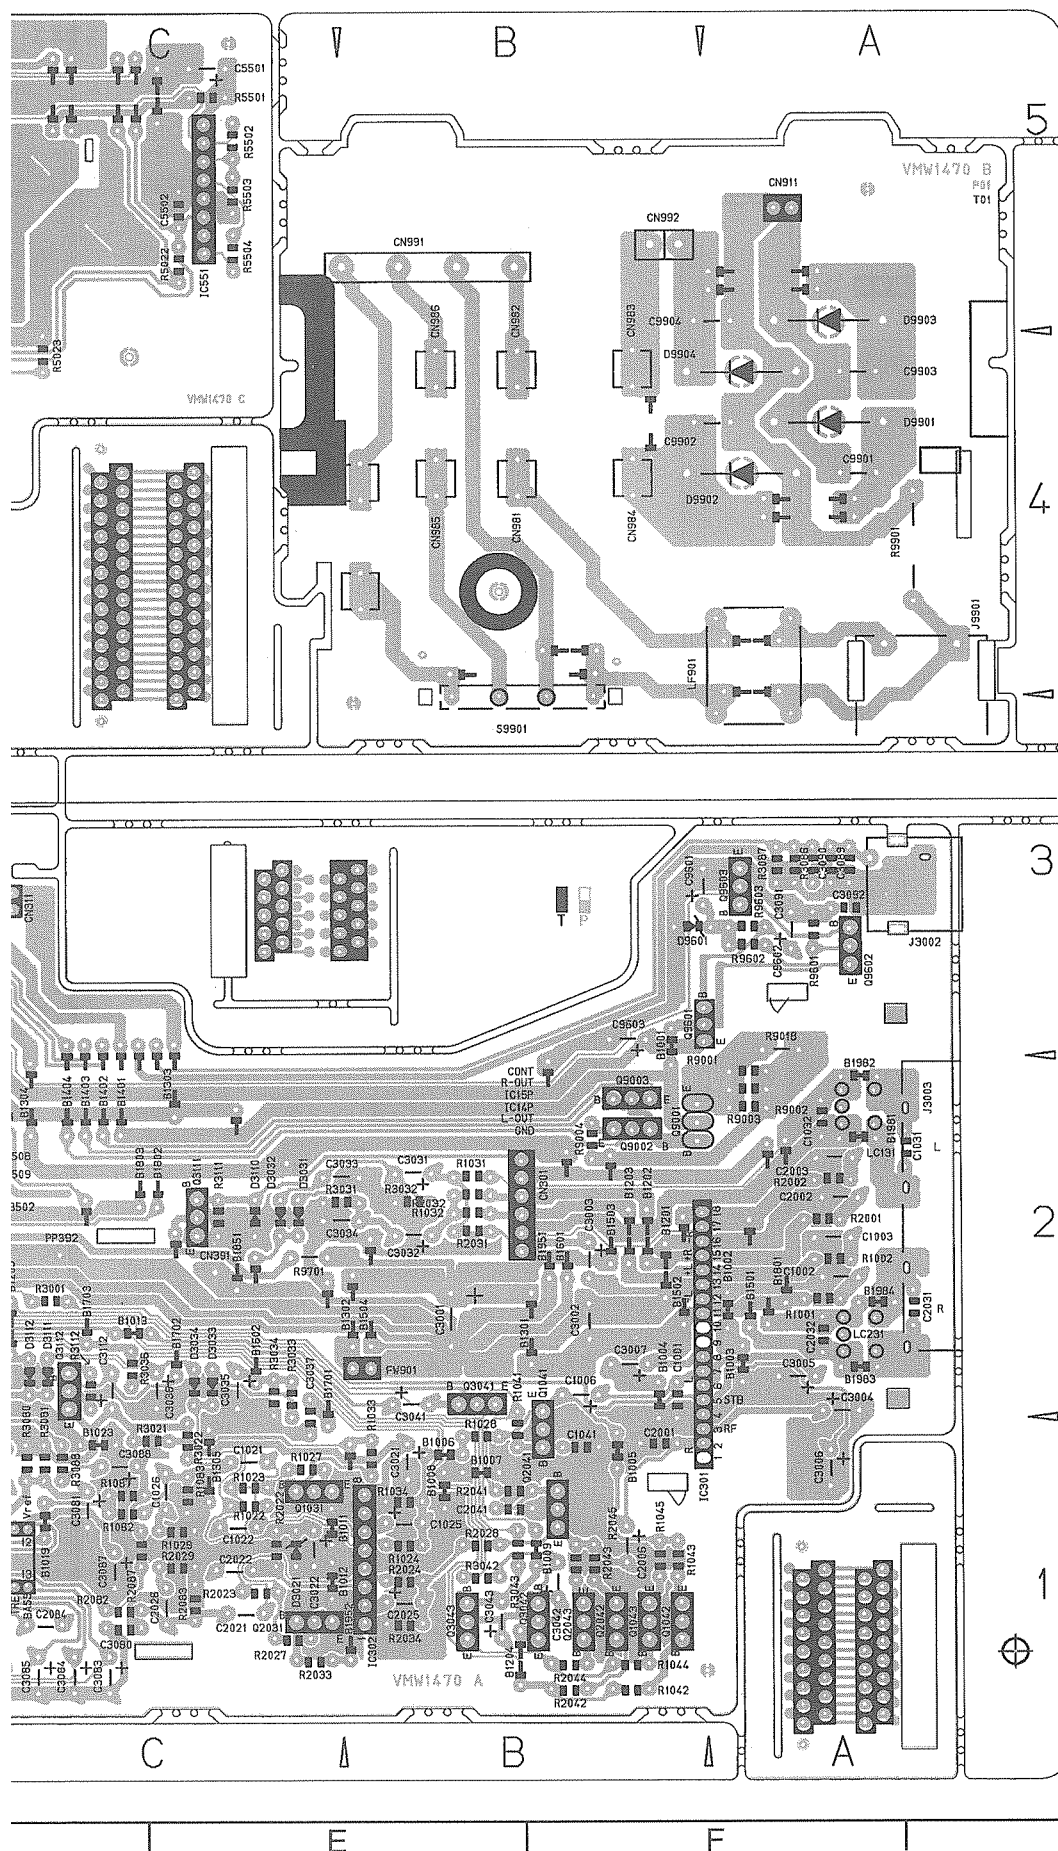

■ System Control,Function & Tuner Board:Block No.0 2

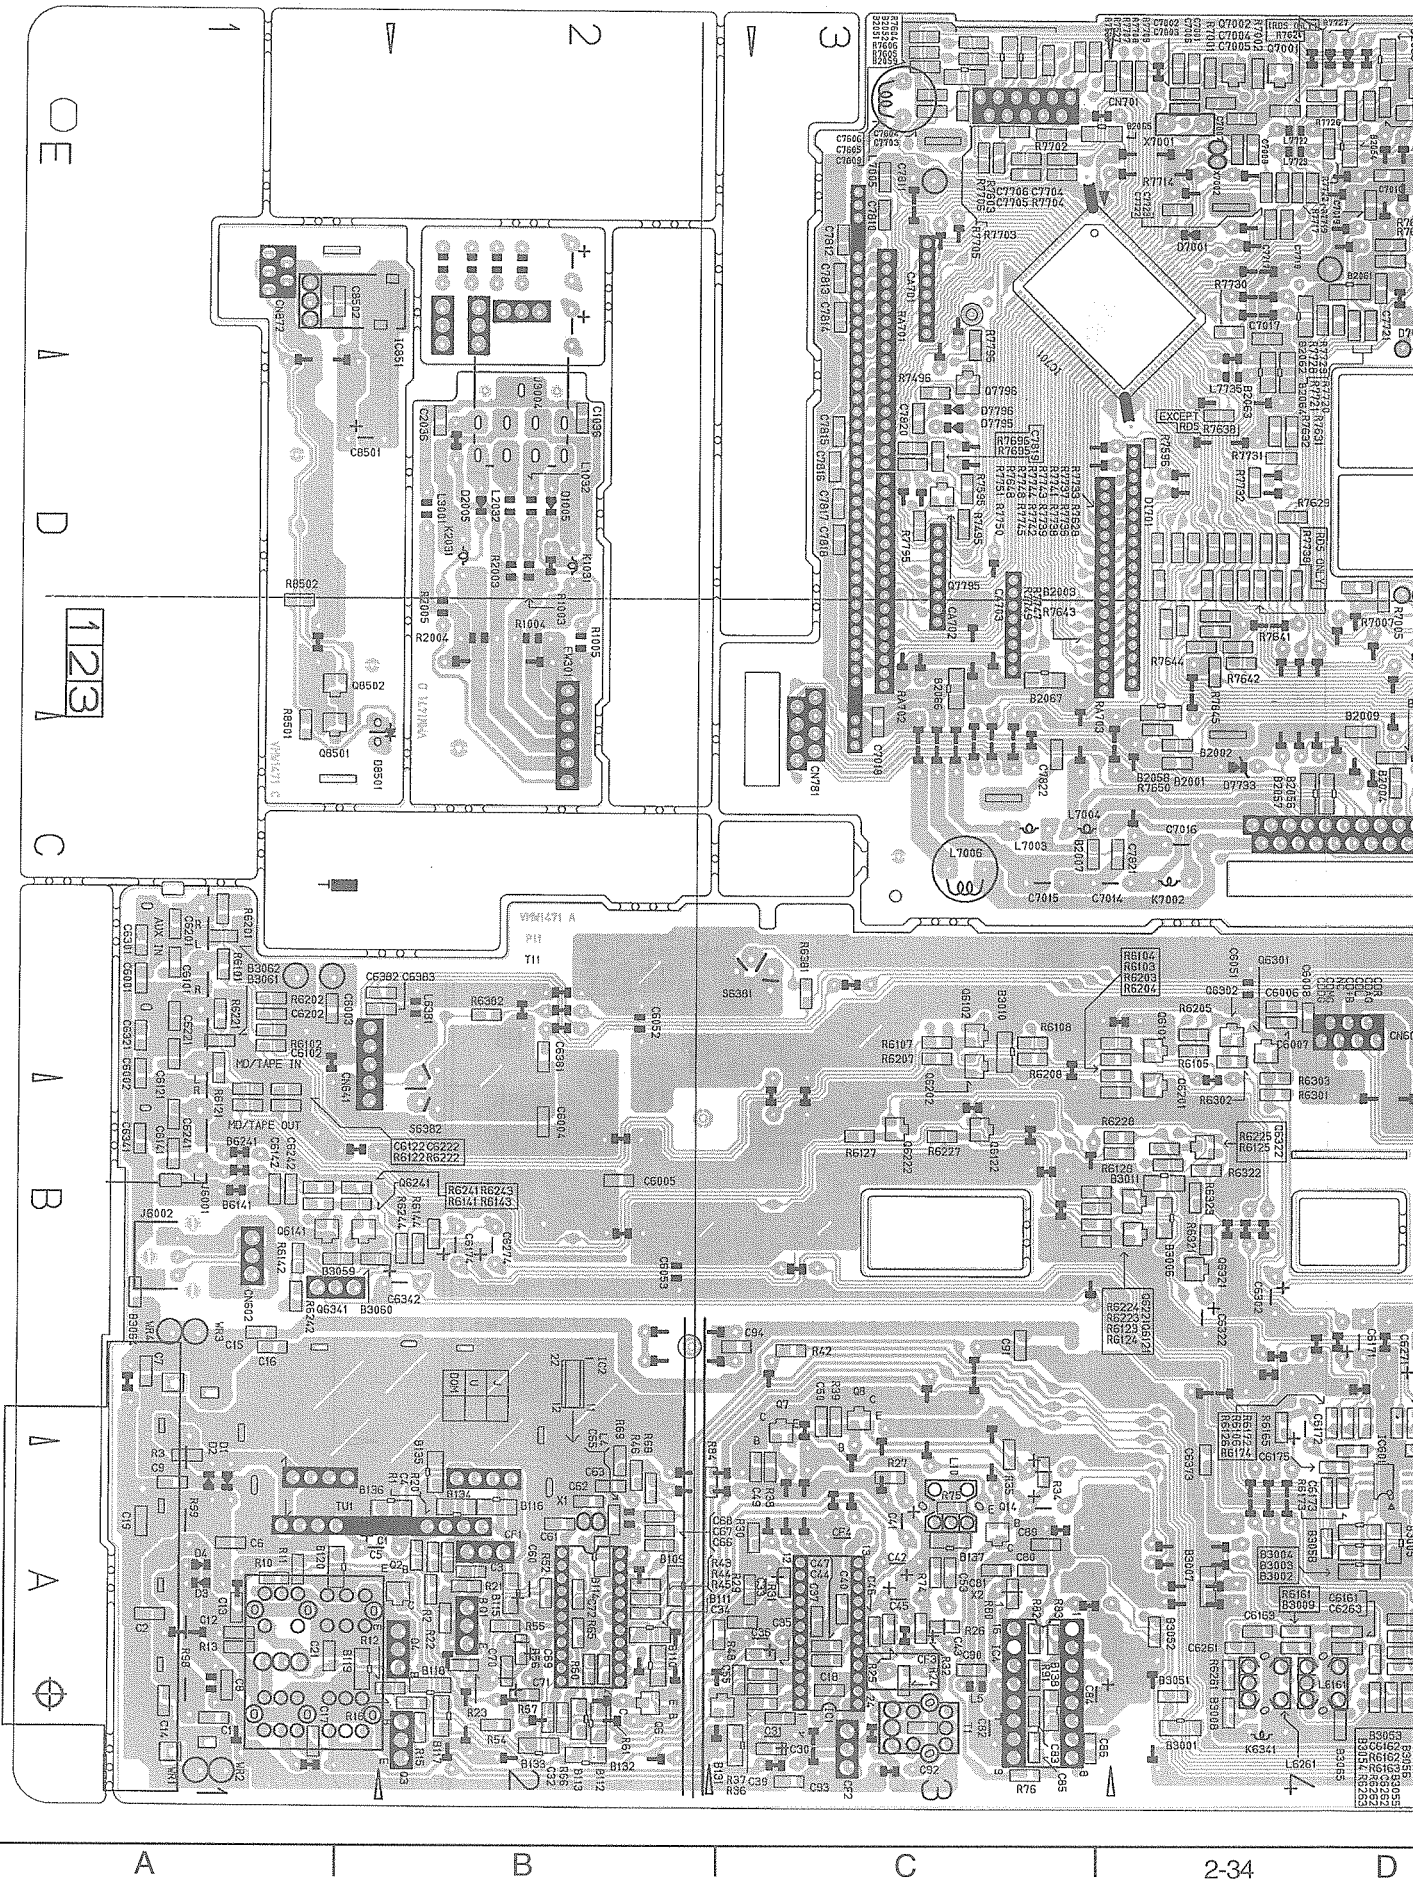

■ CD Servo Control Board:Block No.0 3

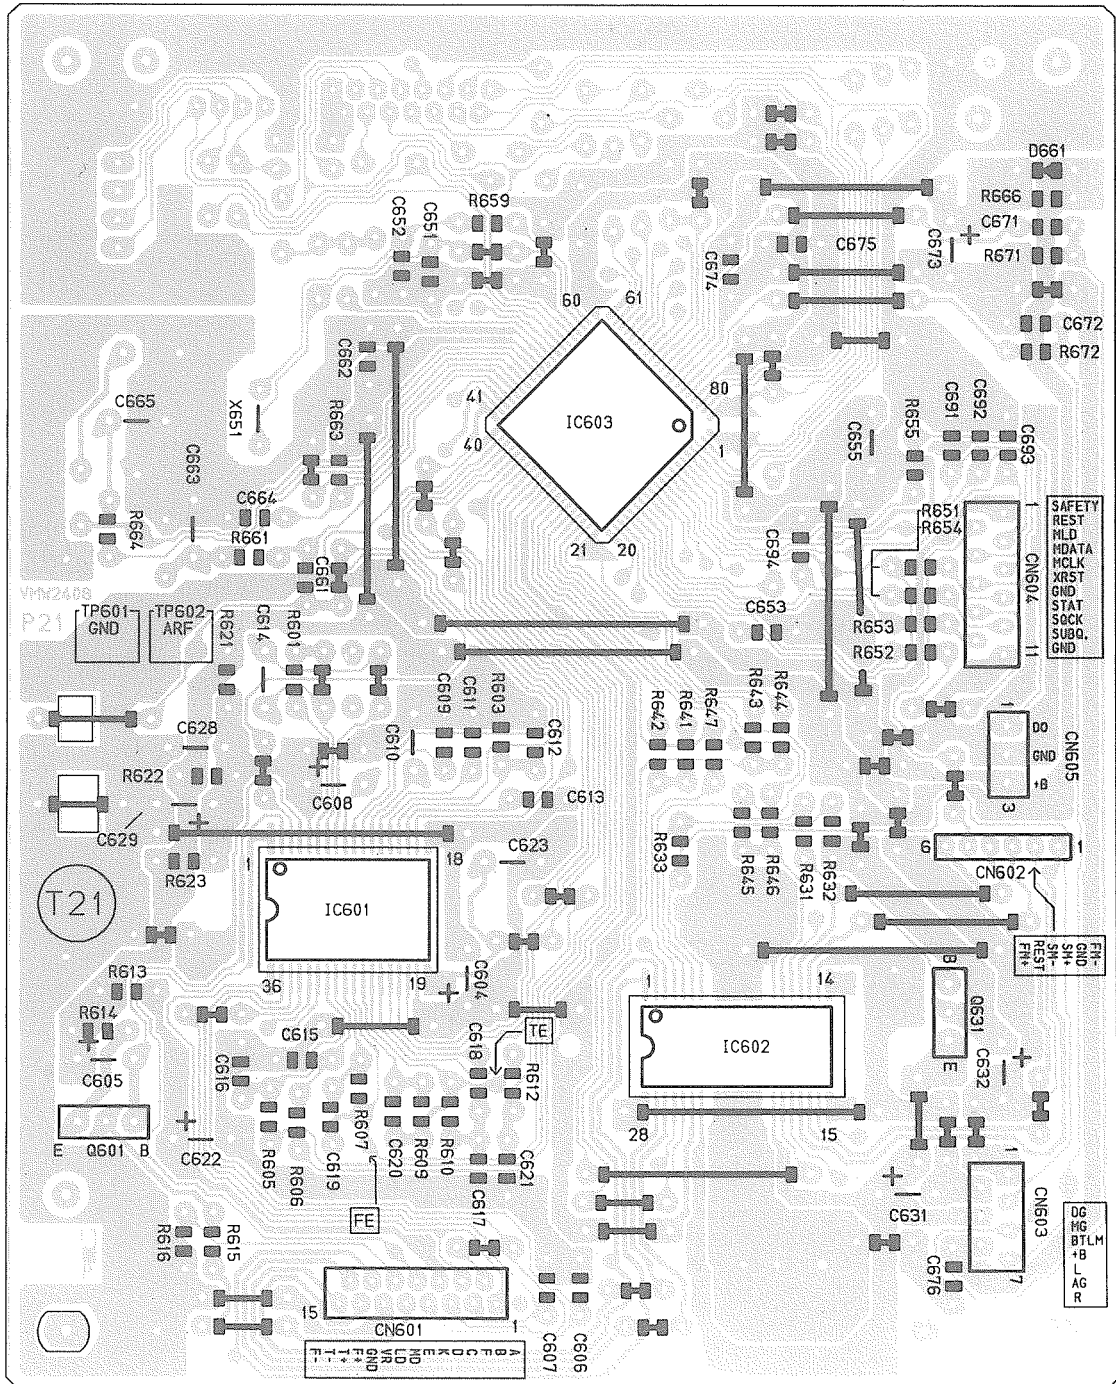

-MEMO-

PARTS LIST

[FS-5000/FS-6000]

* All printed circuit boards and its assemblies are not available as service parts.

Area Suffix	
J -----	The U.S.A & Canada


- Contents -


General Exploded View and Parts List -----	3-3
Exploded View of CD Mechanism and Parts List -----	3-5
Electrical Parts List -----	3-6
Packing Materials and Accessories List -----	3-16

-MEMO-

General Exploded View and Parts List

Block No. **M 1 M M**

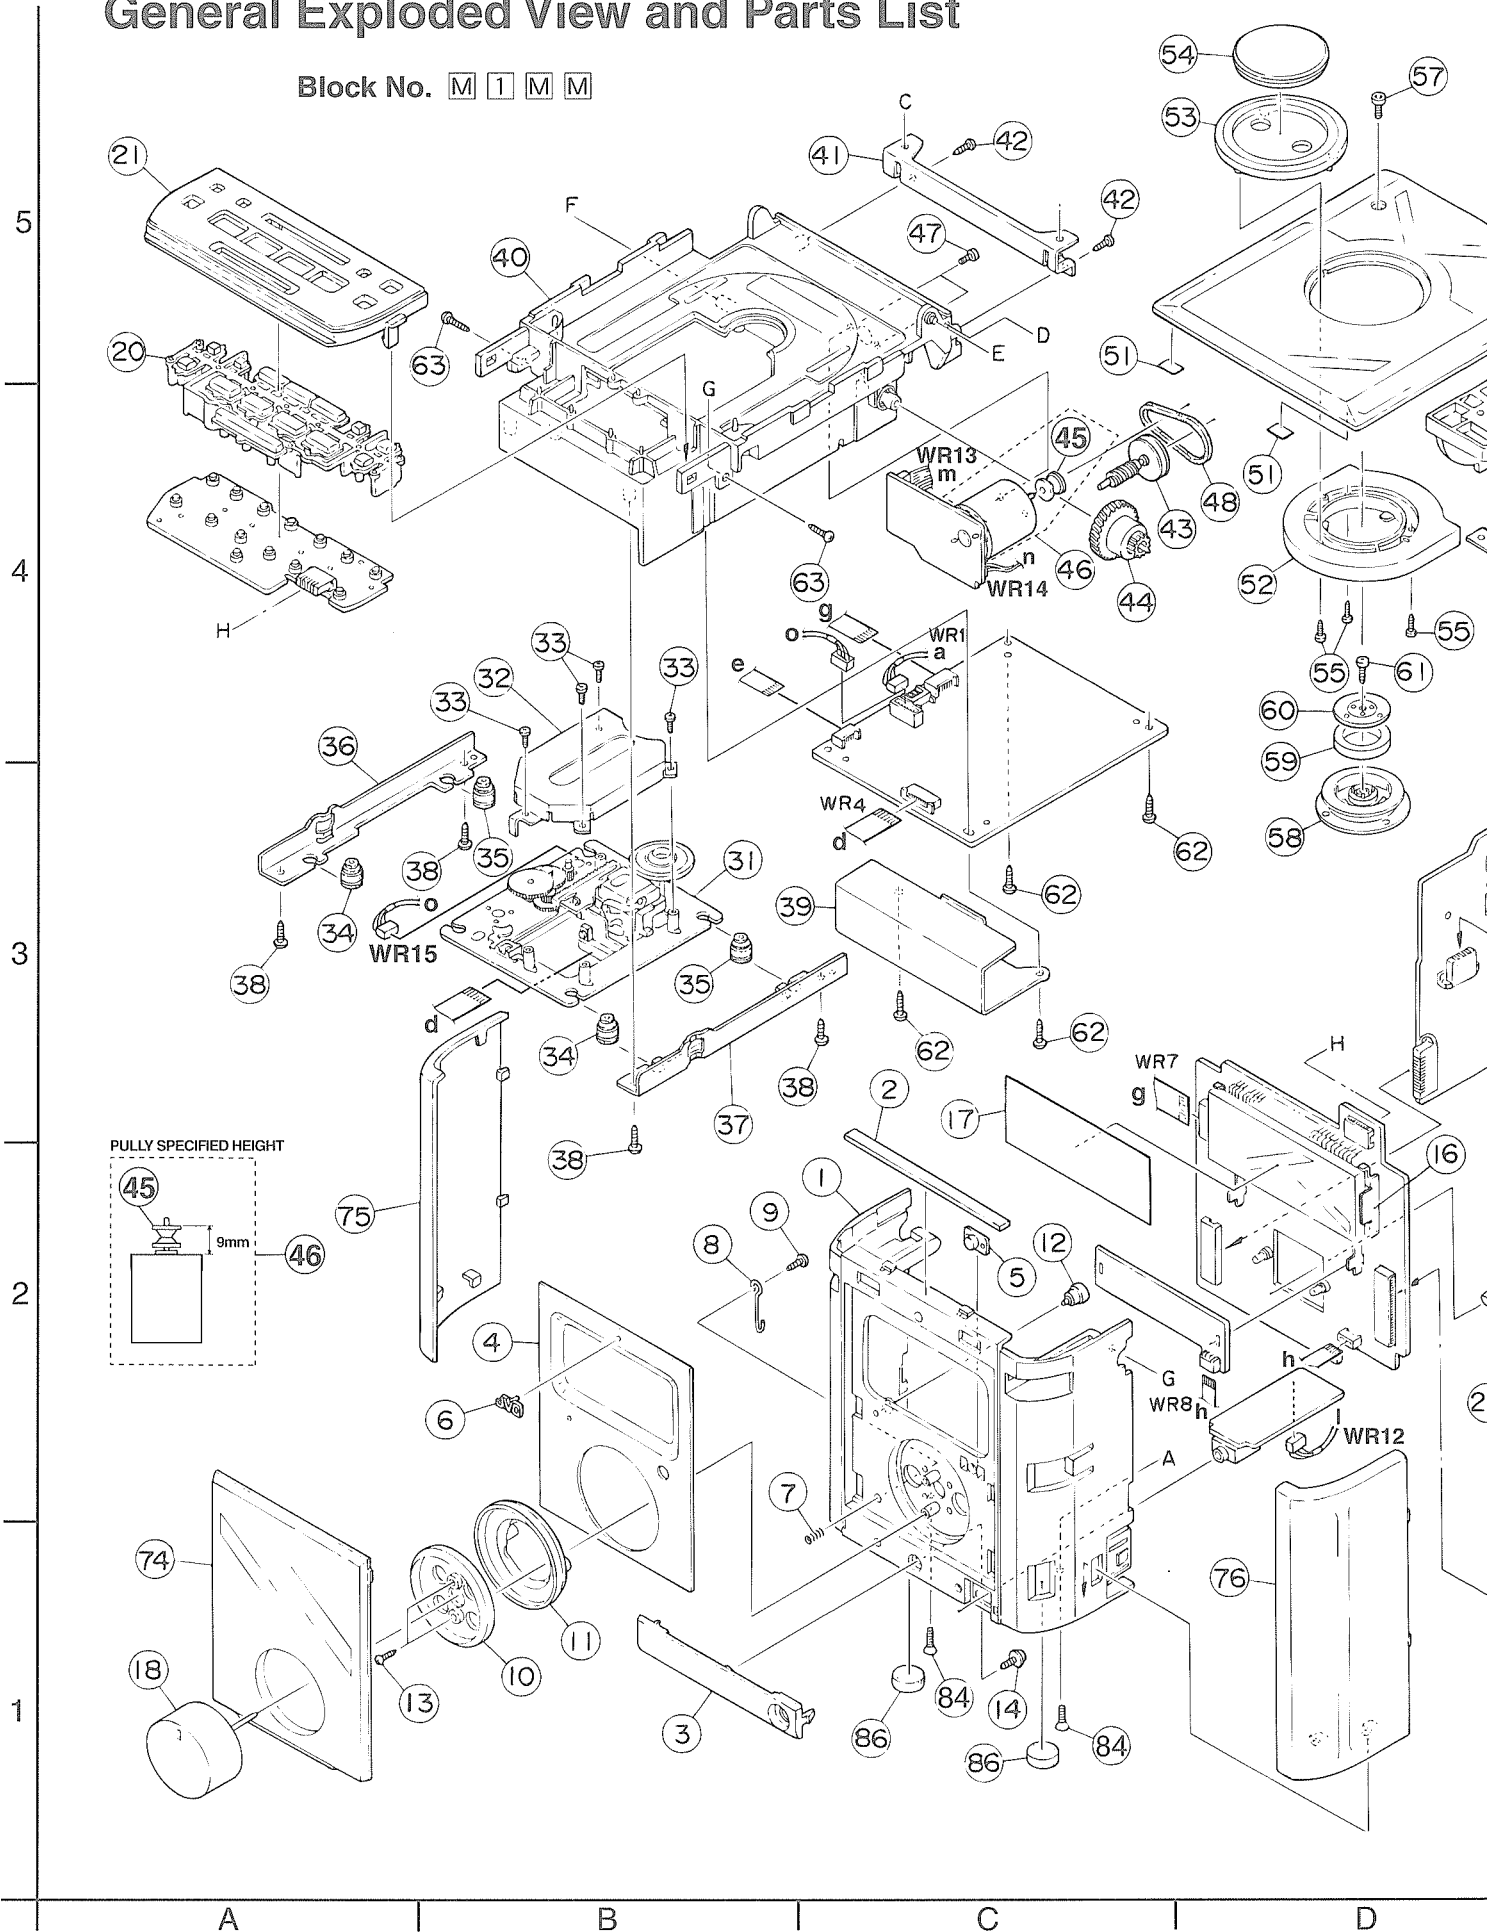

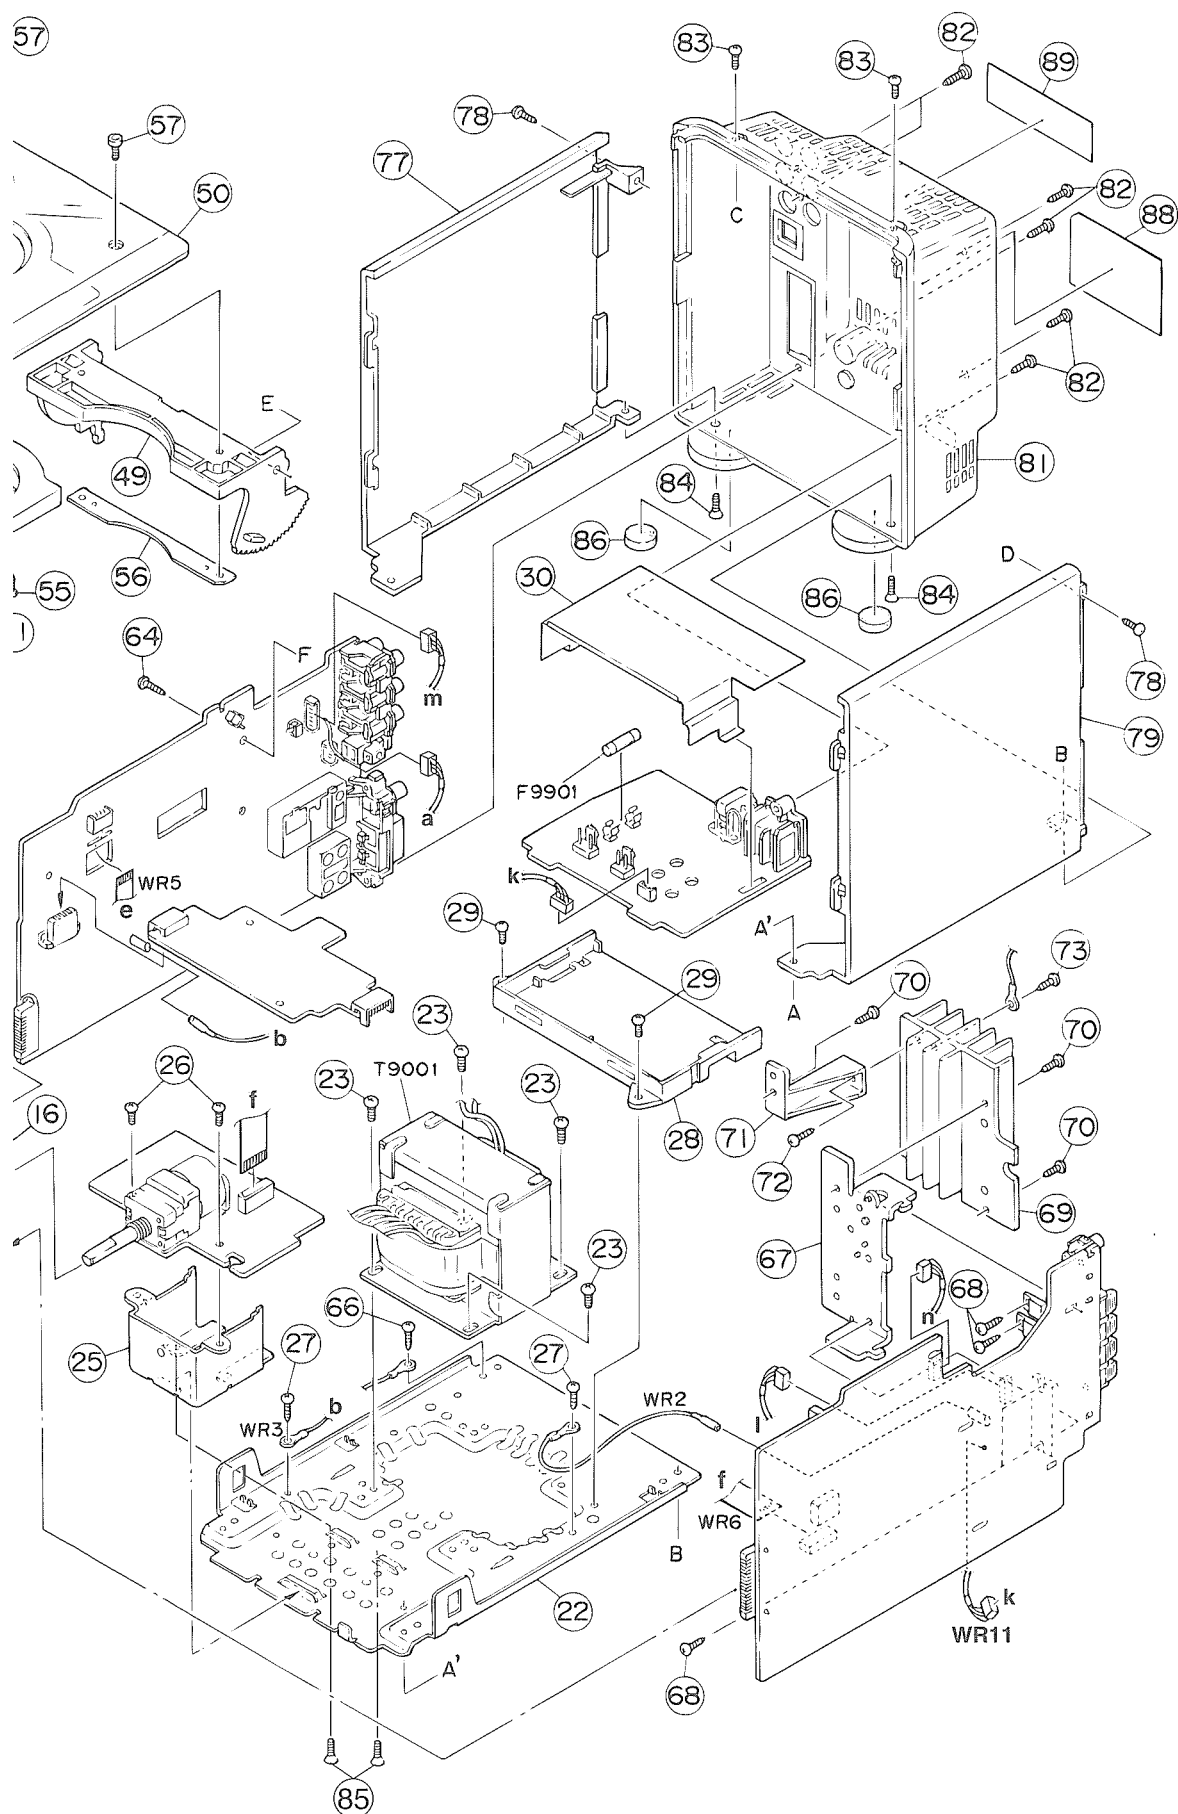

■ Parts List

BLOCK NO. M1MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	1	LV10015-002A	FRONT PANEL		1		
	2	LV40105-001A	TOP PLATE		1		
	3	LV40106-003A	UNDER PLATE	FS-5000 ONLY	1		
		LV40106-004A	UNDER PLATE	FS-6000 ONLY	1		
	4	LV40110-001A	AL PLATE		1		
	5	E408131-001	REMOTE LENS		1		
	6	E406971-221	JVC MARK		1		
	7	VKW3001-321	COMP. SPRING	GRAND YOU	1		
	8	LV40218-001A	EARTH WIRE		1		
	9	SBSF3010Z	SCREW	FRONT+EARTH WIR	1		
	10	LV40107-002A	VOL.ESCUTCHEON		1		
	11	LV40108-001A	VOL.LENS		1		
	12	LV40161-001A	LENS	STANBY LENS	1		
	13	SBSF2606Z	SCREW	V.E+V.L+FRONT.P	2		
	14	GBSF3006Z	T.SCREW	FRONT+UNDER PLA	1		
	16	LV30138-002A	FL HOLDER		1		
	17	LV40220-004A	FL SHEET		1		
	18	LV40162-002ASA	VOL.KNOB ASS'Y		1		
	20	LV30083-001A	BUTTON		1		
	21	LV30084-003A	BUTTON COVER		1		
	22	LV10036-001A	BOTTOM CHASSIS		1		
	23	SBST4006Z	SCREW		4		
	25	LV30137-001A	PWB HOLDER	FOR VOL.PWB	1		
	26	SBST3006Z	TH TAP SCREW	PWB.H+VOL.PWB	2		
	27	SBST3004Z	SCREW	EARTH W+BOTTOM	2		
	28	LV30139-001A	PWB COVER		1		
	29	SBST3006Z	TH TAP SCREW	PWB COVER+BOTTO	2		
	30	LV30514-001A	BARRIER		1		
	31	-----	C.D MECHA ASS'Y		1		
	32	VJD5410-005	PICK COVER		1		
	33	SDSF2006M	SCREW		4		
	34	E75609-001	INSULATOR		2		
	35	E75609-002	INSULATOR		2		
	36	VYH8089-001SC	CD MECHA HOLDER		1		
	37	VYH8089-002SC	CD MECHA HOLDER		1		
	38	SBSF3008Z	SCREW		4		
	39	VMA4692-002SC	SHIELD		1		
	40	VJD1210-009UL	CD CASE		1		
	41	LV40164-001A	REAR BRACKET	CD.CASE+REAR	1		
	42	SBSF3008Z	SCREW	CD CASE+BRACKET	2		
	43	VYH8090-001SC	GEAR 1		1		
	44	VYH8091-002SC	GEAR 2		1		
	45	VYH7699-001	PULLEY		1		
	46	MXN13FB12F-SA8	DC MOTOR ASS'Y		1		
	47	SPSP3004Z	SCREW		2		
	48	VKB3000-170	BELT		1		
	49	VJE3014-001SC	CD DOOR		1		
	50	LV30085-003A	CD DOOR LENS		1		
	51	VYSS1R1-108	SPACER	FOR CD DOOR LEN	2		
	52	LV30080-003A	DOOR PLATE	FS-5000 ONLY	1		
		LV30080-004A	DOOR PLATE	FS-6000 ONLY	1		
	53	LV30086-001A	ORNAMENT		1		
	54	LV40104-001A	LENS (CD)		1		
	55	SDSF2006M	SCREW	ORNAMENT+D.PLAT	3		
	56	VJD5490-002	PLATE		1		

BLOCK NO. M1MM111


△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	57	VKZ4765-001	S.BOLT(DIN)		2		
	58	VYH3726-002SS	CLAMPER		1		
	59	VYH7313-003	MAGNET		1		
	60	VYH7677-201	YOKE		1		
	61	SDSF2606Z	SCREW		1		
	62	SBSF3008Z	SCREW	CD CASE + CD PW	4		
	63	SBSF3008Z	SCREW	CD CASE+FRONT.P	2		
	64	SBSF3008Z	SCREW	CD CASE+PWB(L)	1		
	66	SBST3004Z	SCREW	FUNC PWB+BOTTOM	1		
	67	LV40165-001A	IC HOLDER		1		
	68	SBSF3010Z	SCREW		4		
	69	LV30141-003A	HEAT SINK		1		
	70	SBSF3008Z	SCREW	H.SINK+IC HOL,C	3		
	71	LV40221-001A	BRACKET	CD CASE+H.SINK	1		
	72	SBST3008Z	TH TAP SCREW		1		
	73	SBST3008Z	TH TAP SCREW	H.SINK+EARTH WI	1		
	74	LV40109-002A	FRONT LENS		1		
	75	LV30087-001A	FITTING(L)		1		
	76	LV30088-001A	FITTING(R)		1		
	77	LV20044-002A	SIDE PANEL(L)		1		
	78	SBSF3008Z	SCREW	FOR CD CASE	2		
	79	LV20045-002A	SIDE PANEL(R)		1		
	81	LV10037-008A	REAR COVER		1		
	82	SBSF3010M	T.SCREW	REAR	6		
	83	SBST3006M	TH TAP SCREW	REAR+BK(TOP GAW	2		
	84	SSST3010Z	SCREW	BOTTOM	4		
	85	SBST3006Z	TH TAP SCREW	PWB HOLDER+BOTT	2		
	86	VJF4003-001	FOOT		4		
	88	LV30143-004A	NAME PLATE	FS-5000 ONLY	1		
		LV30143-005A	NAME PLATE	FS-6000 ONLY	1		
	89	VND4118-004	CAUTION LABEL		1		
△	F9901	QMF51N2-R80J1	FUSE	PRI 800A/250V	1		
△	T9001	QQT0217-006	POWER TRANS	J VER	1		
	WR 1	VDM9291-C001C-A	WIRE&TUBE	CD - FUNC	1		
	WR 2	VWE240-10NTSA	WIRE	MAIN - BOTTOM	1		
	WR 3	VWE240-08NTSA	LUG WIRE	FUNC - BOTTOM	1		
	WR 4	VWF1015-07TTA	FFC CABLE		1		
	WR 5	VWF1207-07TTB	FFC		1		
	WR 6	VWF1212-06TTB	CARD WIRE	MAIN - VOL	1		
	WR 7	VWF1211-16TTB	CARD WIRE	MICOM - CD	1		
	WR 8	VWF1205-06TTB	CARD WIRE	MICOM - REM.SEN	1		
	WR 11	SC-J-2-10-EH-02	SC-EH WIRE	MAIN - AC	1		
	WR 12	SC-J-6-28-EH-06	SC-EH WIRE	H.P - MAIN	1		
	WR 13	SC-P-0-14-EH-05	SC-EH WIRE	DOOR MOTOR - FU	1		
	WR 14	SA-P-2-14-PH-02	SA-PH WIRE	DOOR MOTOR - MA	1		
	WR 15	AT-Y-6-06-PH-06	AT-PH CONN		1		

CD Mechanism Ass'y and Parts List

■ Grease Point

Block No. **M** **2** **M** **M**

No. EXL-M6

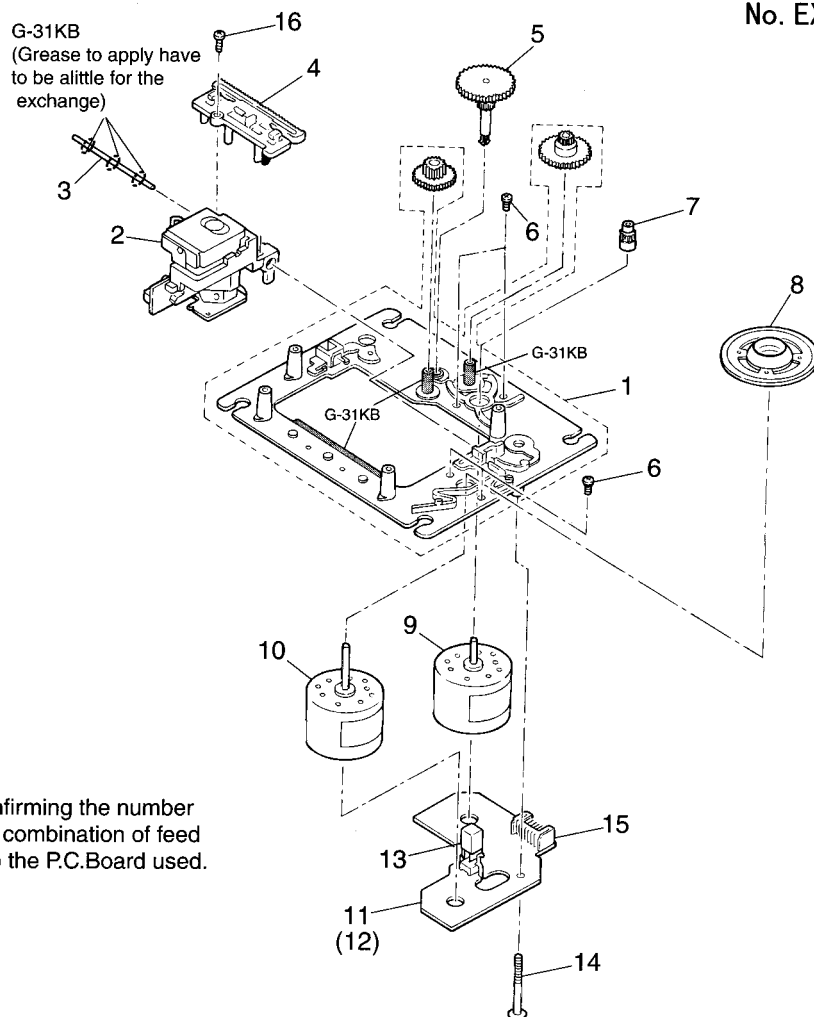

NOTE

Please order motor after confirming the number of the P.C.Board because the combination of feed motor is different according to the P.C.Board used.

■ CD Mechanism Assembly Parts List

	Item	Parts Number	Parts Name	Q'ty	Description	Area
	1	EPB-002PK	MECHA. BASE ASSY	1		
	2	OPTIMA-150S	OPTICAL PICK UP	1		
	3	E407782-001	CD SHAFT	1		
	4	E307746-001	CD RACK	1		
	5	EPB-003A	MECHA GEAR	1		
	6	SDSP2003N	SCREW	4		
	7	E406750-001	PINION GEAR	1		
	8	EPB309173A	TURN TABLE	1		
	9	E406784-001	FEED MOTOR	1	Use the No.11 P.C.Board	
		MDN-4RA3ETA-1	FEED MOTOR	1	Use the No.12 P.C.Board	
	10	E406783-001	SPINDLE MOTOR	1		
	11	EMW10190-001 (S)	P. C. BOARD	1		
	12	EMW10190-221 (S)	P. C. BOARD	1		
	13	ESB1100-005	LEAF SWITCH	1		
	14	E75832-001	SCREW	1		
	15	EMV5109-006B	CONN. TERMINAL	1		
	16	SDSF2006Z	SCREW	1		

Main Board

BLOCK NO. 01

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	CN301	VMC0040-006	CONNECTOR	HEADPHONE	
	CN311	VMC0075-R02	2P CONNECTOR	CD DOOR	
	CN351	QGF1201C3-12	VMC0332-012	MOTOR VOL	
	CN355	QGB1216J1-10S	CONNECTOR	CONNECT	
	CN371	QGB1216J1-26S	B TO B CONNE	MICOM	
	CN391	VMZ0015-002	POST PIN	SHARSHI EARTH	
	CN501	QGF1201C3-12	VMC0332-012		
	CN551	QGB1216K1-10S	CONNECTOR		
	CN552	QGB1216K1-10S	CONNECTOR		
	CN872	QGB1216J1-08S	CONNECTOR	TO MICON	
	CN911	VMC0040-002	CONNECTOR	MAIN PWB	
	CN971	QGA2501C3-05Z	CONNECTOR	POWER TRANS	
	CN981	ENG7331-003Z	FUSE CLIP		
	CN982	ENG7331-003Z	FUSE CLIP		
	CN991	VMZ0049-B02	CONNECTOR	PRI MORE	
	CN992	VMZ0049-A02	CONNECTOR	SEC	
	C1001	QGBB1HK-331Y	C CAPACITOR	330PF 10% 50V	
	C1002	QCC31EM-104ZV	C CAPACITOR	.10MF 20% 25V	
	C1003	QCC31EM-104ZV	C CAPACITOR	.10MF 20% 25V	
	C1006	QTE1V06-106Z	E CAPACITOR		
	C1021	QFN81HJ-683	M.CAPA. I.M	FS-5000 ONLY	
	C1021	QFN31HJ-823Z	MYLAR CAPACITOR	FS-6000 ONLY	
	C1022	QFN31HJ-823Z	MYLAR CAPACITOR	FS-6000 ONLY	
	C1022	QFN81HJ-683	M.CAPA. I.M	FS-5000 ONLY	
	C1025	QTE1C06-226Z	E CAPACITOR		
	C1026	QFV81HJ-564	M.M.CAPA. I.M	FS-5000 ONLY	
	C1026	QFV41HJ-224ZM	M.M.CAPA. I.M	FS-6000 ONLY	
	C1051	QCS11HJ-101	C CAPACITOR	100PF 5% 50V	
	C1082	QFN31HJ-563Z	M.CAPACITOR	.056MF 5% 50V	
	C1083	QFN31HJ-563Z	M.CAPACITOR	.056MF 5% 50V	
	C1084	QFN41HJ-472	M.CAPACITOR	4700PF 5% 50V	
	C1087	EF20101-392S	P.P.CAPACITOR	3900PF	
	C1088	QTE1V06-106Z	E CAPACITOR		
	C2001	QGBB1HK-331Y	C CAPACITOR	330PF 10% 50V	
	C2002	QCC31EM-104ZV	C CAPACITOR	.10MF 20% 25V	
	C2003	QCC31EM-104ZV	C CAPACITOR	.10MF 20% 25V	
	C2006	QTE1V06-106Z	E CAPACITOR		
	C2021	QFN81HJ-683	M.CAPA. I.M	FS-5000 ONLY	
	C2021	QFN31HJ-823Z	MYLAR CAPACITOR	FS-6000 ONLY	
	C2022	QFN31HJ-823Z	MYLAR CAPACITOR	FS-6000 ONLY	
	C2022	QFN81HJ-683	M.CAPA. I.M	FS-5000 ONLY	
	C2025	QTE1C06-226Z	E CAPACITOR		
	C2026	QFV81HJ-564	M.M.CAPA. I.M	FS-5000 ONLY	
	C2026	QFV41HJ-224ZM	M.M.CAPA. I.M	FS-6000 ONLY	
	C2051	QCS11HJ-101	C CAPACITOR	100PF 5% 50V	
	C2082	QFN31HJ-563Z	M.CAPACITOR	.056MF 5% 50V	
	C2083	QFN31HJ-563Z	M.CAPACITOR	.056MF 5% 50V	
	C2084	QFN41HJ-472	M.CAPACITOR	4700PF 5% 50V	
	C2087	EF20101-392S	P.P.CAPACITOR	3900PF	
	C2088	QTE1V06-106Z	E CAPACITOR		
	C3001	QETM1EM-828	E CAPACITOR	FS-5000 ONLY	
	C3001	QET0441-828	E CAPACITOR	FS-6000 ONLY	
	C3002	QFV71HJ-124ZM	TF CAPACITOR	FS-6000 ONLY	
	C3002	QFN41HJ-104	M CAPACITOR	FS-5000 ONLY	
	C3003	QET41EM-107	E.CAPA.IM	100MF 20% 25V	

BLOCK NO. 01

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	C3004	EETCIAM-337ZE	E.CAPACITOR	33MF 20% 25V	
	C3005	QETCIEM-336Z	E CAPACITOR	2.2MF 20% 50V	
	C3006	QEK41HM-225	E CAPACITOR	10MF 20% 25V	
	C3007	QET41EM-106	E CAPACITOR	47MF 20% 25V	
	C3021	QET41EM-476	E CAPACITOR		
	C3022	QTE1C06-226Z	E CAPACITOR	1.0MF 20% 50V	
	C3031	QER41HM-105	E CAPACITOR	1.0MF 20% 50V	
	C3032	QER41HM-105	E CAPACITOR	.056MF 5% 50V	
	C3033	QFV71HJ-563ZM	M.M.CAP.IM	.056MF 5% 50V	
	C3034	QFV71HJ-563ZM	M.M.CAP.IM	1.0MF 20% 50V	
	C3035	QEK41HM-105	E CAPACITOR	10MF 20% 25V	
	C3041	QET41EM-106	E CAPACITOR	10MF 20% 25V	
	C3051	QET41CM-107	E CAPACITOR	100MF 20% 16V	
	C3052	QEK51EM-226E	E.CAPA. I.M	22MF 20% 25V	
	C3053	QET41EM-106	E CAPACITOR	10MF 20% 25V	
	C3081	QET41CM-107	E CAPACITOR	100MF 20% 16V	
	C3083	QEK41HM-474	E CAPACITOR	.47MF 20% 50V	
	C3084	QEK41HM-474	E CAPACITOR	.47MF 20% 50V	
	C3085	QEK41EM-475	E CAPACITOR	4.7MF 20% 25V	
	C3086	QETB1CM-106E	E.CAPA. I.M		
	C3087	QET41EM-106	E CAPACITOR	10MF 20% 25V	
	C3088	QER51EM-106	E.CAPA. I.M	10MF 20% 25V	
	C3089	QCGB1HK-102	C CAPACITOR	1000PF 10% 50V	
	C3092	QCVB1CN-103Y	C CAPACITOR	.010MF 30% 16V	
	C3112	QET41EM-106	E CAPACITOR	10MF 20% 25V	
	C3501	QCS11HJ-330	C CAPACITOR	33PF 5% 50V	
	C3502	QCS11HJ-201	C CAPACITOR	200PF 5% 50V	
	C3503	QCS11HJ-201	C CAPACITOR	200PF 5% 50V	
	C3504	QCS11HJ-680	C CAPACITOR	68PF 5% 50V	
	C3505	QFN31HJ-563Z	M.CAPACITOR	.056MF 5% 50V	
	C3506	QFN41HJ-104	M CAPACITOR	.10MF 5% 50V	
	C3507	QFN41HJ-472	M CAPACITOR	FS-5000 ONLY	
	C3507	QFN31HJ-272Z	M.M.CAPACITOR	FS-6000 ONLY	
	C3508	QFN81HJ-473	M CAPACITOR	FS-6000 ONLY	
	C3508	QFN81HJ-683	M.CAPA. I.M	FS-5000 ONLY	
	C3771	QET41EM-476	E CAPACITOR	47MF 20% 25V	
	C3772	QGBB1HK-221Y	C CAPACITOR	220PF 10% 50V	
	C3773	QGBB1HK-102	C CAPACITOR	1000PF 10% 50V	
	C3774	QGBB1HK-151Y	C CAPACITOR	150PF 10% 50V	
	C3901	QETB1JM-107	E CAPACITOR	100MF 20% 63V	
	C3902	QETB1JM-107	E CAPACITOR	100MF 20% 63V	
	C3903	QCVB1CN-103Y	C CAPACITOR	.010MF 30% 16V	
	C3904	QEK51HM-226	E CAPACITOR	22MF 20% 50V	
	C3905	QET41HM-226	E CAPACITOR	22MF 20% 50V	
	C3906	QEK61HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C4001	QEK41CM-106	E CAPACITOR	10MF 20% 16V	
	C4002	QETC0JM-227	E CAPACITOR	220MF 20% 6.3V	
	C4003	QEK61AM-107ZM	E CAPACITOR	100MF 20% 10V	
	C5001	QET41CM-107	E CAPACITOR	100MF 20% 16V	
	C5011	QET41EM-106	E CAPACITOR	10MF 20% 25V	
	C5011	QET41EM-476	E CAPACITOR	47MF 20% 25V	
	C9001	QEK41EM-476	E.CAPA. I.M	47MF 20% 25V	
	C9002	QCVB1CN-103Y	C CAPACITOR	.010MF 30% 16V	
	C9003	QGBB1HK-221Y	C CAPACITOR	220PF 10% 50V	

BLOCK NO. 01111111

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
A J3002	GNN0195-001	PIN JACK	SUB WOOFER	
A J3003	FMJ4001-001	SPK TERMINAL	SPEAKER	
A J9901	GNC0002-001	AC SOCKET 10#	J/C VER	
K5001	VQZ0107-002	INDUCTOR		
K8101	VQZ0107-002	INDUCTOR		
L4001	VQP0028-221Z	INDUCTOR		
L4002	VQZ0107-002	INDUCTOR		
L5011	VQP0028-221Z	INDUCTOR		
PP391	VMZ0015-011	STYLE PIN	HP WIRE CLAMP	
PP394	VMZ0015-011	STYLE PIN	TRANS WIRE CLAMP	
PP395	VMZ0015-011	STYLE PIN	HP WIRE CLAMP	
Q1031	KTC3199(GL)-T	TRANSISTOR		
Q1041	2SD2144S(VW)	TRANSISTOR		
Q1051	2SK301(PQ)-T	TR		
Q2031	KTC3199(GL)-T	TRANSISTOR		
Q2041	2SD2144S(VW)	TRANSISTOR		
Q2051	2SK301(PQ)-T	TR		
Q3041	KRA101M-T	TR I/M		
Q3081	2SD2144S(VW)	TRANSISTOR	BASS MUTE	
Q3111	KTC3199(GL)-T	TRANSISTOR		
Q3112	KRA101M-T	TR I/M		
Q3501	KTC3199(GL)-T	TRANSISTOR		
Q3502	KTA1267(VG)-T	TRANSISTOR		
Q3511	DTA144WSTP	TR I.M		
A Q3901	2SB1375	TRANSISTOR		
A Q4001	KTC3199(GL)-T	TRANSISTOR		
A Q4002	KTC3199(GL)-T	TRANSISTOR		
A Q4003	KRC114M-T	TR I.M		
A Q5021	KTC3199(GL)-T	TRANSISTOR		
A Q9001	2SB1565(E,F)	TRANSISTOR	REG.10V	
A Q9002	KTA1267(VG)-T	TRANSISTOR		
A Q9003	KTC3199(GL)-T	TRANSISTOR		
A Q9004	KRC114M-T	TR I.M		
A Q9005	DTA144TSA-T	D. TRANSISTOR		
A Q9006	KTC3199(GL)-T	TRANSISTOR		
A Q9101	2SC2001(L,K)	TRANSISTOR		
A Q9601	2SC3422(OY)	TRANSISTOR		
A Q9602	KRA101M-T	TR I/M		
A Q9603	KRC104M-T	D-TR. I.M		
A Q9711	KTC3199(GL)-T	TRANSISTOR		
A Q9722	KRA101M-T	TR I/M		
A Q9723	KRC104M-T	D-TR. I.M		
A R1001	QRD161J-2R2	C RESISTOR	2.2 5% 1/4W	
A R1002	QRD161J-2R2	C RESISTOR	2.2 5% 1/4W	
A R1022	QRD161J-224	C RESISTOR	220K 5% 1/4W	
A R1023	QRD161J-222	C RESISTOR	FS-5000 ONLY	
A R1024	QRD161J-184	C RESISTOR	FS-6000 ONLY	
A R1024	QRD161J-242	C RESISTOR	FS-6000 ONLY	
A R1024	QRD161J-202	C RESISTOR	FS-5000 ONLY	
A R1027	QRD161J-123	C RESISTOR	FS-6000 ONLY	
A R1027	QRD161J-153	C RESISTOR	FS-5000 ONLY	
A R1028	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
A R1029	QRD167J-562	C RESISTOR	5.6K 5% 1/4W	
A R1031	QRD161J-223	C RESISTOR	22K 5% 1/4W	
A R1032	QRD161J-223	C RESISTOR	22K 5% 1/4W	

BLOCK NO. 01111111

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
A C9101	QET41EM-107	E-CAPA-IM	100MF 20% 25V	
A C9601	QEK41EM-106	E CAPACITOR	10MF 20% 25V	
A C9602	QEH41EM-337Z	E CAPACITOR	330MF 20% 16V	
A C9603	QET41EM-476	E CAPACITOR	47MF 20% 25V	
A C9701	QFN41HU-104	M CAPACITOR	.10MF 5% 50V	
A C9702	QET41EM-476	E CAPACITOR	47MF 20% 25V	
A C9703	QET41EM-476	E CAPACITOR	47MF 20% 25V	
A C9711	QEZ0229-479Z	EDL-CAPACITOR	47000MF	
A C9901	QEV41HU-224	CAPACITOR	.22MF 5% 50V	
A C9902	QEV41HU-224	CAPACITOR	.22MF 5% 50V	
A C9903	QEV41HU-224	CAPACITOR	.22MF 5% 50V	
A C9904	QEV41HU-224	CAPACITOR	.22MF 5% 50V	
A D3021	MTZ5-1JAT-77	ZENER DIODE	.22MF 5% 50V	
A D3031	1SS133	SI DIODE		
A D3032	1SS133	SI DIODE		
A D3033	1SS133	SI DIODE		
A D3034	1SS133	SI DIODE		
A D3110	1SS133	SI DIODE		
A D3111	1SS133	SI DIODE		
A D3112	1SS133	SI DIODE		
A D3501	1SS133	SI DIODE	MAKER SITEI	
A D3502	1SS133	SI DIODE	MAKER SITEI	
A D3503	1SS133	SI DIODE	MAKER SITEI	
A D3901	DSK10C-E	DIODE		
A D3902	DSK10C-E	DIODE		
A D3903	MTZJ27A-T2	Z. DIODE I.M		
A D9001	1SS133	SI DIODE		
A D9002	MTZ10JAT-77	ZENER DIODE		
A D9101	MTZ11JA	Z. DIODE I.M		
A D9102	1SS133	SI DIODE		
A D9103	DSK10C-E	DIODE		
A D9601	MTZ6.8JB	DIODE		
A D9701	1SS133	SI DIODE		
A D9702	MTZ8.2JB	DIODE		
A D9703	1SS133	SI DIODE		
A D9704	1SS133	SI DIODE		
A D9705	1SS133	SI DIODE		
A D9706	MTZ8.2JB	DIODE		
A D9712	MTZ5-1JC	ZENER DIODE		
A D9713	1SS133	SI DIODE		
A D9901	6A10E2	SI DIODE		
A D9902	6A10E2	SI DIODE		
A D9903	6A10E2	SI DIODE		
A D9904	6A10E2	SI DIODE		
A IC301	LA4705NA	IC	POWER AMP	
A IC302	VC4580LD	IC	AHB AMP	
A IC305	BA15218N	IC	E VOL	
A IC308	BH3852S	IC		
A IC317	BU4094BC	IC		
A IC371	UPC78L06J	IC		
A IC372	KIA78S06P-T	IC		
A IC401	TA8409S	IC		
A IC501	TA8409S	IC		
A IC551	NJM2904L	IC		

BLOCK NO. 01

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
R3085	QRD161J-272	C RESISTOR	2.7K 5% 1/4W	
R3086	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R3087	QRD161J-104	C RESISTOR	1.0K 5% 1/4W	
R3088	QRD161J-222	C RESISTOR	2.2K 5% 1/4W	
R3111	QRD161J-104	C RESISTOR	1.0K 5% 1/4W	
R3112	QRD161J-272	C RESISTOR	2.7K 5% 1/4W	
R3501	QRD161J-473	C RESISTOR	4.7K 5% 1/4W	
R3502	QRD161J-822	C RESISTOR	8.2K 5% 1/4W	
R3503	QRD161J-822	C RESISTOR	8.2K 5% 1/4W	
R3504	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R3505	QRD161J-475	C RESISTOR	4.7K 5% 1/4W	
R3507	QRD161J-101	C RESISTOR	100 5% 1/4W	
R3508	QRD161J-474	C RESISTOR	470K 5% 1/4W	
R3509	QRD161J-124	C RESISTOR	120K 5% 1/4W	
R3510	QRD161J-101	C RESISTOR	100 5% 1/4W	
R3511	QRD161J-275	C RES. I.M	2.7M 5% 1/4W	
R3771	QRD161J-153	C RESISTOR	15K 5% 1/4W	
R3901	QRZ0077-4R7X	F RESISTOR	4.7 1/0W	
R3902	QRD161J-392	C RESISTOR	3.9K 5% 1/4W	
R3903	QRD161J-223	C RESISTOR	22K 5% 1/4W	
R3904	QRD161J-100	C RESISTOR	10 5% 1/4W	
R3905	GRJ146J-1R0X	UNF C RESISTOR	1.0 5% 1/4W	
R3906	GRJ146J-1R0X	UNF C RESISTOR	1.0 5% 1/4W	
R3907	QRD161J-331	C RESISTOR	330 5% 1/4W	
R3915	GRJ146J-1R0X	UNF C RESISTOR	1.0 5% 1/4W	
R3916	GRJ146J-1R0X	UNF C RESISTOR	1.0 5% 1/4W	
R4001	QRD161J-153	C RESISTOR	15K 5% 1/4W	
R4002	QRD161J-123	C RESISTOR	12K 5% 1/4W	
R4003	QRD14CJ-3R9S	UNF. C.RES. I.M	3.9 5% 1/4W	
R4004	QRD161J-133Y	C RESISTOR	13K 5% 1/4W	
R4005	QRD161J-391	C RESISTOR	390 5% 1/4W	
R4006	QRD161J-151	C RESISTOR	150 5% 1/4W	
R5001	GRJ146J-151X	C RESISTOR	150 5% 1/4W	
R5011	QRD161J-153	C RESISTOR	15K 5% 1/4W	
R5012	QRD161J-223	C RESISTOR	22K 5% 1/4W	
R5021	QRD161J-471	C RESISTOR	470 5% 1/4W	
R5022	QRD161J-183Y	C RESISTOR	18K 5% 1/4W	
R5023	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R5501	QRD161J-151	C RESISTOR	150 5% 1/4W	
R5502	QRD161J-133Y	C RESISTOR	13K 5% 1/4W	
R5503	QRD161J-333	C RESISTOR	33K 5% 1/4W	
R5504	QRD161J-822	C RESISTOR	8.2K 5% 1/4W	
R8101	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R8102	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R8103	QRD161J-122	C RESISTOR	1.2K 5% 1/4W	
R8104	QRD161J-152	C RESISTOR	1.5K 5% 1/4W	
R8105	QRD161J-222	C RESISTOR	2.2K 5% 1/4W	
R8106	QRD161J-272	C RESISTOR	2.7K 5% 1/4W	
R8107	QRD161J-392	C RESISTOR	3.9K 5% 1/4W	
R8108	QRD161J-562	C RESISTOR	5.6K 5% 1/4W	
R8109	QRD161J-103Y	C RESISTOR	10K 5% 1/4W	
R8110	QRD161J-183Y	C RESISTOR	18K 5% 1/4W	
R8112	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R8113	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R8114	QRD161J-122	C RESISTOR	1.2K 5% 1/4W	

BLOCK NO. 01

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
R1033	GRE141J-103Y	C RESISTOR	10K 5% 1/4W	
R1034	QRD161J-123	C RESISTOR	12K 5% 1/4W	
R1041	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R1051	QRD161J-473	C RESISTOR	4.7K 5% 1/4W	
R1052	QRD161J-475	C RESISTOR	4.7M 5% 1/4W	
R1082	QRD161J-512	C RESISTOR	5.1K 5% 1/4W	
R1083	QRD161J-162	C RESISTOR	1.6K 5% 1/4W	
R1085	QRD161J-272	C RESISTOR	2.7K 5% 1/4W	
R1086	QRD161J-182	C RESISTOR	1.8K 5% 1/4W	
R1087	GRE141J-103Y	C RESISTOR	10K 5% 1/4W	
R1089	QRD161J-224	C RESISTOR	220K 5% 1/4W	
R2001	QRD161J-2R2	C RESISTOR	2.2 5% 1/4W	
R2002	QRD161J-2R2	C RESISTOR	2.2 5% 1/4W	
R2022	QRD161J-224	C RESISTOR	220K 5% 1/4W	
R2023	QRD161J-222	C RESISTOR	FS-5000 ONLY	
R2023	QRD161J-184	C RESISTOR	FS-6000 ONLY	
R2024	QRD161J-242	C RESISTOR	FS-6000 ONLY	
R2024	QRD161J-202	C RESISTOR	FS-5000 ONLY	
R2027	QRD161J-123	C RESISTOR	FS-6000 ONLY	
R2027	QRD161J-153	C RESISTOR	FS-5000 ONLY	
R2028	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R2029	QRD161J-562	C RESISTOR	5.6K 5% 1/4W	
R2031	QRD161J-223	C RESISTOR	22K 5% 1/4W	
R2032	QRD161J-223	C RESISTOR	22K 5% 1/4W	
R2033	QRD161J-103Y	C RESISTOR	10K 5% 1/4W	
R2034	QRD161J-123	C RESISTOR	12K 5% 1/4W	
R2041	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R2051	QRD161J-475	C RESISTOR	4.7M 5% 1/4W	
R2052	QRD161J-475	C RESISTOR	5.1K 5% 1/4W	
R2082	QRD161J-512	C RESISTOR	1.6K 5% 1/4W	
R2083	QRD161J-162	C RESISTOR	2.7K 5% 1/4W	
R2085	QRD161J-272	C RESISTOR	1.8K 5% 1/4W	
R2086	QRD161J-182	C RESISTOR	10K 5% 1/4W	
R2087	GRE141J-103Y	C RESISTOR	220K 5% 1/4W	
R2089	QRD161J-224	C RESISTOR	10K 5% 1/4W	
R3001	GRE141J-103Y	C RESISTOR	150 5% 1/4W	
R3021	QRD161J-151	C RESISTOR	1.8K 5% 1/4W	
R3022	QRD161J-182	C RESISTOR	4.7K 5% 1/4W	
R3031	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R3032	QRD161J-472	C RESISTOR	120K 5% 1/4W	
R3033	QRD161J-124	C RESISTOR	FS-5000 ONLY	
R3034	QRD161J-154	C RESISTOR	FS-6000 ONLY	
R3034	QRD161J-474	C RESISTOR	22K 5% 1/4W	
R3035	QRD161J-223	C RESISTOR	51K 5% 1/4W	
R3036	QRD161J-513	C RESISTOR	150 5% 1/4W	
R3051	QRD161J-151	C RESISTOR	10K 5% 1/4W	
R3052	GRE141J-103Y	C RESISTOR	10K 5% 1/4W	
R3053	GRE141J-103Y	C RESISTOR	47K 5% 1/4W	
R3054	QRD161J-473	C RESISTOR	220K 5% 1/4W	
R3055	QRD161J-224	C RESISTOR	330 5% 1/4W	
R3056	QRD161J-331	C RESISTOR	150 5% 1/4W	
R3080	QRD161J-151	C RESISTOR	150 5% 1/4W	
R3081	QRD161J-151	C RESISTOR	120K 5% 1/4W	
R3082	QRD161J-124	C RESISTOR	150K 5% 1/4W	
R3083	QRD161J-154	C RESISTOR		

Tuner Board

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
A R8115	QRD161J-152	C RESISTOR	1.5K 5% 1/4W	
R8116	QRD161J-153	C RESISTOR	15K 5% 1/4W	
R8117	QRD161J-823	C RESISTOR	82K 5% 1/4W	
A R9001	QRD161J-2R2	C RESISTOR	2-2 5% 1/4W	
A R9002	QRD161J-2R2	C RESISTOR	2-2 5% 1/4W	
A R9003	QRD161J-2R2	C RESISTOR	2-2 5% 1/4W	
R9004	QRD161J-471	C RESISTOR	470 5% 1/4W	
R9005	QRD161J-152	C RESISTOR	1.5K 5% 1/4W	
R9006	QRD167J-682	C RESISTOR	6.8K 5% 1/4W	
R9007	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
R9008	QRD161J-222	C RESISTOR	2-2K 5% 1/4W	
R9009	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R9010	QRD161J-471	C RESISTOR	470 5% 1/4W	
R9011	QRD161J-222	C RESISTOR	2-2K 5% 1/4W	
R9012	QRD161J-222	C RESISTOR	2-2K 5% 1/4W	
R9013	QRD161J-222	C RESISTOR	2-2K 5% 1/4W	
R9014	QRD161J-222	C RESISTOR	2-2K 5% 1/4W	
R9015	GRE441J-103Y	C RESISTOR	10K 5% 1/4W	
R9016	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R9017	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
R9101	QRD161J-561	C RESISTOR	560 5% 1/4W	
R9601	QRD161J-122	C RESISTOR	1.2K 5% 1/4W	
R9602	QRD161J-101	C RESISTOR	100 5% 1/4W	
R9603	QRD161J-470	C RESISTOR	47 5% 1/4W	
R9604	QRD161J-473	C RESISTOR	47K 5% 1/4W	
A R9701	QRZ0077-4R7X	F RESISTOR	4.7 1/0W	
R9711	QRD161J-333	C RESISTOR	33K 5% 1/4W	
R9712	QRD161J-473	C RESISTOR	47K 5% 1/4W	
R9713	QRD161J-104	C RESISTOR	100K 5% 1/4W	
R9714	QRD161J-331	C RESISTOR	330 5% 1/4W	
R9723	QRD161J-472	C RESISTOR	4.7K 5% 1/4W	
A R9901	QRZ9037-335	COMP RESISTOR	3.3M 1/0W	
S8101	QSW0698-001Z	TACT SWITCH	OPEN/CLOSE	
S8102	QSW0698-001Z	TACT SWITCH	CD	
S8103	QSW0698-001Z	TACT SWITCH	FM/AM	
S8104	QSW0698-001Z	TACT SWITCH	MD/TAPE	
S8105	QSW0698-001Z	TACT SWITCH	AUX	
S8106	QSW0698-001Z	TACT SWITCH	P-TUNING	
S8107	QSW0698-001Z	TACT SWITCH	DOWN	
S8108	QSW0698-001Z	TACT SWITCH	STOP	
S8109	QSW0698-001Z	TACT SWITCH	UP	
S8110	QSW0698-001Z	TACT SWITCH	CLOCK	
S8111	QSW0698-001Z	TACT SWITCH	SLEEP	
S8112	QSW0698-001Z	TACT SWITCH	POWER	
S8113	QSW0698-001Z	TACT SWITCH	AHB	
S8115	QSW0698-001Z	TACT SWITCH	TIMER/SNOOZE	
VR501	QV80120-B54	M V RESISTOR		

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
C 1	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C 2	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 3	NCB21HK-473AY	C CAPACITOR	.047MF 10% 25V	
C 4	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C 5	QEK41CM-106	E CAPACITOR	10MF 20% 16V	
C 6	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 9	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 12	NDU21HJ-100X	C CAPACITOR	.047MF 10% 25V	
C 13	NCB21HK-473AY	C CAPACITOR	.047MF 10% 25V	
C 14	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C 18	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C 21	NCB21HK-473AY	C CAPACITOR	.047MF 10% 25V	
C 30	QEK41CM-476	E CAPACITOR	47MF 20% 16V	
C 32	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 33	QEK61AM-1072M	E CAPACITOR	100MF 20% 10V	
C 34	NCS21HJ-150AY	C CAPACITOR	15PF 5% 50V	
C 35	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 36	QEK41CM-106	E CAPACITOR	10MF 20% 16V	
C 37	NCB21HK-473AY	C CAPACITOR	.047MF 10% 25V	
C 39	NCB21HK-473AY	C CAPACITOR	.047MF 10% 25V	
C 40	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C 41	QEK41HM-104	E CAPACITOR	.10MF 20% 50V	
C 42	QEK41HM-474	E CAPACITOR	.47MF 20% 50V	
C 44	NCS21HJ-221AY	C CAPACITOR	220PF 5% 50V	
C 45	QEK61HM-3352N	E CAPACITOR	3.3MF 20% 50V	
C 46	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C 47	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C 49	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C 50	NCB21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C 51	QEK41HM-105	E CAPACITOR	1.0MF 20% 50V	
C 52	QEK41HM-105	E CAPACITOR	1.0MF 20% 50V	
C 60	QEK61AM-1072M	E CAPACITOR	100MF 20% 10V	
C 61	NCS21HJ-120AY	C CAPACITOR	12PF 5% 50V	
C 62	NCS21HJ-120AY	C CAPACITOR	12PF 5% 50V	
C 63	NCB21HK-473AY	C CAPACITOR	.047MF 10% 25V	
C 65	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 66	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C 67	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C 68	NCS21HJ-101AY	C CAPACITOR	100PF 5% 50V	
C 69	QEK41HM-225	E CAPACITOR	2.2MF 20% 50V	
C 70	NCB21HK-392AY	C CAPACITOR	3900PF 10% 50V	
C 71	QEK61HM-3352N	E CAPACITOR	3.3MF 20% 50V	
C 72	NCB21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C 91	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C 93	NCB21HK-103AY	C CAPACITOR	.010MF 10% 50V	
CA701	QCNC74K-221	C NETWORK	220PF 10%	
CA702	QCNC74K-221	C NETWORK	220PF 10%	
CA703	QCNC74K-221	C NETWORK	220PF 10%	
CF 1	VCFL2L3B-108Z	C FILTER	FM IF	
CF 2	VCFL2L3B-108Z	C FILTER	FM IF	
CF 3	VCFL122Z-115Z	C FILTER		
CF 4	QAX0409-001	CERA LOCK		
CN601	VMC0163-R07	CONNECTOR	TO CD(SIG)	
CN602	VMC0040-003	CONNECTOR IM	TO CD(OPT DIG)	
CN611	QGB1216J1-10S	CONNECTOR	TO MAIN	

BLOCK NO. 02

BLOCK NO. 02

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
C7007	NCS21HJ-220AY	C CAPACITOR	22PF 5% 50V	
C7008	NCS21HJ-200AY	C CAPACITOR	20PF 5% 50V	
C7009	QER41AM-107	E CAPACITOR	100MF 20% 10V	
C7010	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C7011	QER41HM-225	E CAPACITOR	2.2MF 20% 50V	
C7012	QER41HM-475MM	E CAPACITOR	4.7MF 20% 50V	
C7013	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C7014	QFV71HJ-124ZM	TF CAPACITOR	.12MF 5% 50V	
C7015	QFV81HJ-564	M.M.CAPA. I.M	.56MF 5% 50V	
C7016	QFV81HJ-564	M.M.CAPA. I.M	.56MF 5% 50V	
C7017	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C7019	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7622	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7623	NCS21HJ-101AY	C CAPACITOR	100PF 5% 50V	
C7636	QER41HM-105	E CAPACITOR	1.0MF 20% 50V	
C7703	NCS21HJ-271AY	C CAPACITOR	270PF 5% 50V	
C7704	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7705	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7706	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7717	NCS21HJ-331AY	C CAPACITOR	330PF 5% 50V	
C7721	NCS21HJ-101AY	C CAPACITOR	100PF 5% 50V	
C7722	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7723	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7726	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7736	QER41HM-225	E CAPACITOR	2.2MF 20% 50V	
C7737	QER61HM-335ZM	E CAPACITOR	3.3MF 20% 50V	
C7741	NCS21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C7742	NCS21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C7749	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C7809	NCS21HJ-102AY	C CAPACITOR	1000PF 5% 50V	
C7815	NCS21HJ-221AY	C CAPACITOR	220PF 5% 50V	
C7816	NCS21HJ-221AY	C CAPACITOR	220PF 5% 50V	
C7817	NCS21HJ-221AY	C CAPACITOR	220PF 5% 50V	
C7818	NCS21HJ-221AY	C CAPACITOR	220PF 5% 50V	
C7819	NCS21HJ-102AY	C CAPACITOR	1000PF 5% 50V	
C7820	NCS21HJ-102AY	C CAPACITOR	1000PF 5% 50V	
C7821	NCS21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C7822	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C8501	QEK41CM-476	E CAPACITOR	47MF 20% 16V	
C8502	NCS21HJ-102AY	C CAPACITOR	1000PF 5% 50V	
D 1	1S133	SI DIODE		
D 2	1S133	SI DIODE		
D 3	1S133	SI DIODE		
D 4	1S133	SI DIODE		
D1701	QLF0048-001	FL TUBE		
D1005	1S133	SI DIODE		
D2005	1S133	SI DIODE		
D6303	1S133	SI DIODE		
D6361	1S133	SI DIODE		
D6362	1S133	SI DIODE		
D6901	MT25-9JB	Z DIODE	TU SW	
D6902	1S133	SI DIODE	TU SW	
D6903	1S133	SI DIODE	TU SW	
D7001	1S133	SI DIODE	USV	
D7002	1S133	SI DIODE		

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
CN641	VMC0040-005	CONNECTOR	TO DOOR MNT	
CN671	QGB1216J1-18S	B TO B CONNE	TO MICOM	
CN701	VNC0163-R11	CONNECTOR	TO CD	
CN711	QGB1216K1-26S	B TO B CONNE	TO MAIN	
CN761	QGB1216K1-18S	B TO B CONNE	TO FUNC. TUNER	
CN781	QGB1216K1-08S	CONNECTOR	TO SW	
CN782	QGF1201C3-05	FFC CONNE	TO FRONT	
CN872	QGF1201F3-05	CONNECTOR	TO MICOM	
C1036	NCS21HJ-331AY	C CAPACITOR	330PF 5% 50V	
C2036	NCS21HJ-331AY	C CAPACITOR	330PF 5% 50V	
C6003	NCS21HJ-102AY	C CAPACITOR	1000PF 5% 50V	
C6007	NCS21HJ-102AY	C CAPACITOR	1000PF 5% 50V	
C6101	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C6121	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C6141	NCS21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C6161	NCS21HK-122AY	C CAPACITOR	1200PF 10% 50V	
C6162	NCS21HK-332AY	C CAPACITOR	3300PF 10% 50V	
C6171	QTE1C03-1062	E CAPACITOR	4.7MF 20% 25V	
C6172	QEK41EM-475	E CAPACITOR	10PF 5% 50V	
C6173	NCS21HJ-100AY	C CAPACITOR	4.7MF 20% 25V	
C6174	QEK41EM-475	E CAPACITOR	10PF 5% 50V	
C6175	NCS21HJ-300AY	C.CAPA. C.M	30PF 5% 50V	
C6201	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C6221	NCS21HJ-151X	C CAPACITOR	150PF 5% 50V	
C6241	NCS21HK-102AY	C CAPACITOR	1000PF 10% 50V	
C6261	NCS21HK-122AY	C CAPACITOR	1200PF 10% 50V	
C6262	NCS21HK-332AY	C CAPACITOR	3300PF 10% 50V	
C6271	QTE1C03-1062	E CAPACITOR	4.7MF 20% 25V	
C6272	QEK41EM-475	E CAPACITOR	10PF 5% 50V	
C6273	NCS21HJ-100AY	C CAPACITOR	4.7MF 20% 25V	
C6274	QEK41EM-475	E CAPACITOR	10PF 5% 50V	
C6275	NCS21HJ-300AY	C.CAPA. C.M	30PF 5% 50V	
C6301	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C6302	QEK41HM-105	E CAPACITOR	1.0MF 20% 50V	
C6321	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C6322	QEK41HM-105	E CAPACITOR	1.0MF 20% 50V	
C6341	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C6342	QEK41CM-106	E CAPACITOR	10MF 20% 16V	
C6361	NCS21HK-103AY	C CAPACITOR	.010MF 10% 50V	
C6362	QEK41HM-105	E CAPACITOR	1.0MF 20% 50V	
C6371	QEK41CM-476	E CAPACITOR	47MF 20% 16V	
C6372	QTE1V06-1062	E.CAPACITOR	.082MF 10% 25V	
C6373	NCS21EK-823AY	C CAPACITOR	.022MF 10% 50V	
C6381	NCS21HK-223AY	C CAPACITOR	.022MF 10% 50V	
C6382	NCS21HK-223AY	C CAPACITOR	1000PF 5% 50V	
C6383	NCS21HJ-102AY	C CAPACITOR	150PF 5% 50V	
C6384	NCS21HJ-151X	C CAPACITOR	4.7MF 20% 50V	
C6901	QEK61HM-475Z	E CAPACITOR	100MF 20% 10V	
C6902	QEK61AM-107ZM	E CAPACITOR	1000PF 5% 50V	
C7001	NCS21HJ-102AY	C CAPACITOR	36PF 5% 50V	
C7002	NCS21HJ-360AY	C CAPACITOR	20PF 5% 50V	
C7003	NCS21HJ-200AY	C CAPACITOR	22PF 5% 50V	
C7004	NCS21HJ-220AY	C CAPACITOR	39PF 5% 50V	
C7005	NCS21HJ-390AY	C CAPACITOR	1000PF 5% 50V	
C7006	NCS21HJ-102AY	C CAPACITOR		

BLOCK NO. 02

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	Q3261	2SC2412K/R/-X	TRANSISTOR		
	Q3301	2SC2412K/R/-X	TRANSISTOR		
	Q3302	DTA114WKA-X	DIGI TRANSISTOR		
	Q3321	2SC2412K/R/-X	TRANSISTOR		
	Q3322	DTA114WKA-X	DIGI TRANSISTOR		
	Q3341	DTA123JSA-T	D.TR.I.M		
	Q3361	DTA114WKA-X	DIGI TRANSISTOR		
	Q3901	KTA1267(YG)-T	TRANSISTOR	TU SW	
	Q3902	2SC2412K/R/-X	TRANSISTOR	TU SW	
	Q7001	2SC2714/0/-X	TRANSISTOR	CLOCK SHIFT	
	Q7002	2SC2714/0/-X	TRANSISTOR	CLOCK SHIFT	
	Q7003	DTA114TKAT146	TRANSISTOR	SW5V	
	Q7004	2SC2412K/R/-X	TRANSISTOR	RESET	
	Q7222	DTA114TKA-X	TRANSISTOR	SDATA CONT	
	Q7223	DTA114TKA-X	TRANSISTOR	SCK CONT	
	Q7795	2SC2412K/R/-X	TRANSISTOR	FL DRIVER	
	Q7796	2SC2412K/R/-X	TRANSISTOR	FL DRIVER	
	Q8501	2SC2412K/R/-X	TRANSISTOR		
	Q8502	DTA114WKA-X	TRANSISTOR		
	R 1	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 2	NRS02J-820NY	MG RESISTOR	82 5% 1/10W	
	R 3	NRS02J-ORONY	BUS WIRE I/M	5% 1/10W	
	R 10	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 12	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 13	NRS02J-104X	MG RESISTOR	100K 5% 1/10W	
	R 20	NRS02J-331NY	MG RESISTOR	330 5% 1/10W	
	R 21	NRS02J-224NY	MG RESISTOR	220K 5% 1/10W	
	R 22	NRS02J-331NY	MG RESISTOR	330 5% 1/10W	
	R 23	NRS02J-271NY	MG RESISTOR	27 5% 1/10W	
	R 24	NRS02J-271NY	MG RESISTOR	270 5% 1/10W	
	R 25	NRS02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 27	NRS02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R 29	NRS02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 30	NRS02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 31	NRS02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 32	NRS02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 34	NRS02J-333NY	MG RESISTOR	33K 5% 1/10W	
	R 35	NRS02J-333NY	MG RESISTOR	33K 5% 1/10W	
	R 36	NRS02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R 37	NRS02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 38	NRS02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
	R 39	NRS02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
	R 42	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 43	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 44	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 45	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 46	NRS02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R 48	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 52	NRS02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 54	NRS02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R 55	NRS02J-182NY	MG RESISTOR	1.8K 5% 1/10W	
	R 56	NRS02J-332NY	MG RESISTOR	3.3K 5% 1/10W	
	R 57	NRS02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R 66	NRS02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R 68	NRS02J-473NY	MG RESISTOR	47K 5% 1/10W	

BLOCK NO. 02

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	D7003	1S133	SI DIODE	RESET	
	D7004	SELU1E10CXM	LED	VOL-ILL(BLUE)	
	D7005	SELU1E10CXM	LED	VOL-ILL(BLUE)	
	D7733	MT76.2JB	ZENER DIODE		
	D7795	1S133	SI DIODE		
	D7796	1S133	SI DIODE		
	D8501	SLR-342VC-T	LED I.M		
	IC 1	TA2057N	IC		
	IC 2	LC7213GN	IC		
	IC601	BA15218F-WE	IC	FUNCTION	
	IC701	UPD780204GF-042	IC	SYSTEM MICON	
	IC851	GP1U261X	IC	REM SENSOR	
	J 1	EMB41VU-302K	ANT TERMINAL	AM/FM ANT COAX	
	J3004	QNS0097-001	3.5 JACK	KIKAKU HENKOU	
	J6001	QNN0196-001	PIN JACK	AUX/LINE OUT	
	J6002	GP1F32T	OPTICAL JACK	OPT DIG OUT	
	K1031	VQZ0048-009	INDUCTOR	FTZ	
	K2031	VQZ0048-009	INDUCTOR	FTZ	
	K6341	VQZ0048-007	INDUCTOR		
	K6371	VQZ0107-002	INDUCTOR		
	K7001	VQZ0107-002	INDUCTOR		
	L 1	VQZ0098-202	COIL BLOCK	MW/LW RF/OSC	
	L 4	VQZ0018-221	INDUCTOR		
	L1032	VQZ0018-470	INDUCTOR	FTZ	
	L2032	VQZ0018-470	INDUCTOR	FTZ	
	L3001	VQZ0018-470	INDUCTOR	FTZ	
	L6161	EGF0101-010	FILTER		
	L6261	EGF0101-010	FILTER		
	L6381	VQZ0018-100	INDUCTOR I.M		
	L7001	VQZ0033-100Z	INDUCTOR	VDD	
	L7002	VQZ0033-100Z	INDUCTOR	SW5V	
	L7003	VQZ0026-470Z	INDUCTOR	FL DRIVER	
	L7004	VQZ0033-100Z	INDUCTOR	FL	
	L7005	Q8L48AK-470	INDUCTOR	FL	
	L7006	Q8L48AK-470	INDUCTOR	FL	
	L7722	VQZ0018-4R7	INDUCTOR	SCK	
	L7723	VQZ0018-4R7	INDUCTOR	SDATA	
	L7735	VQZ0018-4R7	INDUCTOR	AVREF	
	PP603	VWZ0015-011	STYLE PIN		
	Q 1	2SC2668(O)	TR TAPE		
	Q 6	DTA114YKA-X	TRANSISTOR		
	Q 7	2SA1037K(R)-X	TRANSISTOR		
	Q 8	2SA1037K(R)-X	TRANSISTOR		
	Q6101	2SD1048X7T-HL	TRANSISTOR		
	Q6102	2SD1048X7T-HL	TRANSISTOR		
	Q6121	2SD1048X7T-HL	TRANSISTOR		
	Q6122	2SD1048X7T-HL	TRANSISTOR		
	Q6141	2SD1048X7T-HL	TRANSISTOR		
	Q6161	2SC2412K/R/-X	TRANSISTOR		
	Q6201	2SD1048X7T-HL	TRANSISTOR		
	Q6202	2SD1048X7T-HL	TRANSISTOR		
	Q6221	2SD1048X7T-HL	TRANSISTOR		
	Q6222	2SD1048X7T-HL	TRANSISTOR		
	Q6241	2SD1048X7T-HL	TRANSISTOR		

BLOCK NO. 02

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
R6227	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6228	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6241	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6242	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6243	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
R6244	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
R6261	NRSA02J-332NY	MG RESISTOR	3.3K 5% 1/10W	
R6262	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6263	NRSA02J-562NY	MG RESISTOR	5.6K 5% 1/10W	
R6264	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
R6265	NRSA02J-682X	MG RESISTOR	6.8K 5% 1/10W	
R6271	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6272	NRSA02J-753NY	MG RESISTOR	75K 5% 1/10W	
R6273	NRSA02J-154NY	MG RESISTOR	150K 5% 1/10W	
R6274	NRSA02J-333NY	MG RESISTOR	33K 5% 1/10W	
R6301	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6302	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
R6303	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6321	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6322	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
R6323	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6361	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
R6362	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6371	QRD167J-121	C RESISTOR	120 5% 1/4W	
R6372	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
R6373	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
R6381	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6382	NRSA02J-913NY	MG RESISTOR	91K 5% 1/10W	
R6901	NRSA02J-390NY	MG RESISTOR	39 5% 1/10W	
R6902	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6903	NRSA02J-563NY	MG RESISTOR	56K 5% 1/10W	
R6904	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
R7001	NRSA02J-822NY	MG RESISTOR	8.2K 5% 1/10W	
R7002	NRSA02J-822NY	MG RESISTOR	8.2K 5% 1/10W	
R7003	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7004	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7005	NRSA02J-221NY	MG RESISTOR	220 5% 1/10W	
R7008	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7009	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7495	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W	
R7496	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W	
R7527	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
R7530	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7536	NRSA02J-683NY	MG RESISTOR	68K 5% 1/10W	
R7549	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R7595	NRSA02J-471NY	MG RESISTOR	470 5% 1/10W	
R7596	NRSA02J-471NY	MG RESISTOR	470 5% 1/10W	
R7603	NRSA02J-122NY	MG RESISTOR	1.2K 5% 1/10W	
R7604	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R7605	NRSA02J-122NY	MG RESISTOR	1.2K 5% 1/10W	
R7606	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R7617	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7618	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7627	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R7628	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W	

BLOCK NO. 02

REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
R 69	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R 98	QRZ9037-335	COMP RESISTOR	3.3M 1/0W	
R 99	QRZ9037-335	COMP RESISTOR	3.3M 1/0W	
RA701	GRB169J-104	R-NETWORK	100K 5% 1/6W	
RA702	GRB169J-104	R-NETWORK	100K 5% 1/6W	
RA703	GRB169J-104	R-NETWORK	100K 5% 1/6W	
R1003	QRD161J-151	C RESISTOR	150 5% 1/4W	
R1004	QRD161J-471	C RESISTOR	470 5% 1/4W	
R1005	QRD161J-823	C RESISTOR	82K 5% 1/4W	
R2003	QRD161J-151	C RESISTOR	150 5% 1/4W	
R2004	QRD161J-471	C RESISTOR	470 5% 1/4W	
R2005	QRD161J-823	C RESISTOR	82K 5% 1/4W	
R6101	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6102	NRSA02J-224NY	MG RESISTOR	220K 5% 1/10W	
R6103	NRSA02J-363NYM	RES. C-M	36K 5% 1/10W	
R6104	NRSA02J-393NY	MG RESISTOR	39K 5% 1/10W	
R6105	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6106	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6107	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6108	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6121	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6122	NRSA02J-224NY	MG RESISTOR	220K 5% 1/10W	
R6123	NRSA02J-363NYM	RES. C-M	36K 5% 1/10W	
R6124	NRSA02J-393NY	MG RESISTOR	39K 5% 1/10W	
R6125	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6126	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6127	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6128	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6141	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6142	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6143	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
R6144	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
R6161	NRSA02J-332NY	MG RESISTOR	3.3K 5% 1/10W	
R6162	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6163	NRSA02J-562NY	MG RESISTOR	5.6K 5% 1/10W	
R6164	NRSA02J-392NY	MG RESISTOR	3.9K 5% 1/10W	
R6165	NRSA02J-682X	MG RESISTOR	6.8K 5% 1/10W	
R6171	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
R6172	NRSA02J-753NY	MG RESISTOR	75K 5% 1/10W	
R6173	NRSA02J-154NY	MG RESISTOR	150K 5% 1/10W	
R6174	NRSA02J-333NY	MG RESISTOR	33K 5% 1/10W	
R6201	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6202	NRSA02J-224NY	MG RESISTOR	220K 5% 1/10W	
R6203	NRSA02J-363NYM	RES. C-M	36K 5% 1/10W	
R6204	NRSA02J-393NY	MG RESISTOR	39K 5% 1/10W	
R6205	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6206	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6207	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	
R6208	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6221	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
R6222	NRSA02J-224NY	MG RESISTOR	220K 5% 1/10W	
R6223	NRSA02J-363NYM	RES. C-M	36K 5% 1/10W	
R6224	NRSA02J-393NY	MG RESISTOR	39K 5% 1/10W	
R6225	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
R6226	NRSA02J-273NY	MG RESISTOR	27K 5% 1/10W	

BLOCK NO. 02

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	R8502	NRSA02J-183NY	MG RESISTOR	18K 5% 1/10W	
	SPACE	LV40359-003A	LED SPACER	FOR D7005	
	S6381	QSW0420-001	SWITCH	FOR D7004	
	S6382	QSW0620-001	SWITCH		
	T	1 VQT7A21-113	IFT		
	TU	1 GAU0097-001	FRONT END	FM TU	
	W6001	VM20015-002	POST PIN		
	X	1 QAX0402-001	CRYSTAL		
	X7001	QAX0410-001Z	CERA LOCK	MAIN CLOCK	
	X7002	QAX0401-001	CRYSTAL	CLOCK	

BLOCK NO. 02

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	R7629	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W	
	R7630	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W	
	R7631	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R7632	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R7636	NRSA02J-114NYM	MG RESISTOR	110K 5% 1/10W	
	R7637	NRSA02J-114NYM	MG RESISTOR	110K 5% 1/10W	
	R7638	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R7641	NRSA02J-153NY	MG RESISTOR	15K 5% 1/10W	
	R7642	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R7643	NRSA02J-104X	MG RESISTOR	100K 5% 1/10W	
	R7644	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R7645	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R7647	NRSA02J-223NY	MG RESISTOR	22K 5% 1/10W	
	R7649	NRSA02J-154NY	MG RESISTOR	150K 5% 1/10W	
	R7650	NRSA02J-183NY	MG RESISTOR	18K 5% 1/10W	
	R7695	NRSA02J-123NY	MG RESISTOR	12K 5% 1/10W	
	R7696	NRSA02J-123NY	MG RESISTOR	12K 5% 1/10W	
	R7702	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7703	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7704	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7705	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7706	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7707	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7708	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R7709	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R7714	NRSA02J-334NY	MG RESISTOR	330K 5% 1/10W	
	R7717	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7719	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7720	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7721	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7722	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7726	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7727	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7728	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7729	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7730	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7731	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7732	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7733	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7736	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R7737	NRSA02J-473NY	MG RESISTOR	47K 5% 1/10W	
	R7739	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7741	NRSA02J-152NY	MG RESISTOR	1.5K 5% 1/10W	
	R7742	NRSA02J-472NY	MG RESISTOR	4.7K 5% 1/10W	
	R7743	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7744	NRSA02J-272NY	MG RESISTOR	2.7K 5% 1/10W	
	R7745	NRSA02J-272NY	MG RESISTOR	2.7K 5% 1/10W	
	R7747	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7748	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7749	NRSA02J-222NY	MG RESISTOR	2.2K 5% 1/10W	
	R7750	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7751	NRSA02J-102NY	MG RESISTOR	1.0K 5% 1/10W	
	R7795	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R7796	NRSA02J-103NY	MG RESISTOR	10K 5% 1/10W	
	R8501	NRSA02J-221NY	MG RESISTOR	220 5% 1/10W	

CD Servo Control Board

BLOCK NO. 03

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	C 604	QEK61AM-1072M	E CAPACITOR	100MF 20% 10V	
	C 605	QET41EM-106	E CAPACITOR	10MF 20% 25V	
	C 606	QCGB1HK-102	C CAPACITOR	1000PF 10% 50V	
	C 607	QCGB1HK-102	C CAPACITOR	1000PF 10% 50V	
	C 608	QET41EM-105	E CAPACITOR	1.0MF 20% 50V	
	C 609	QCB1HK-101Y	C CAPACITOR	100PF 10% 50V	
	C 610	QFLC1HJ-2732M	M CAPACITOR	.027MF 5% 50V	
	C 611	QCB1CM-222Y	C CAPACITOR	2200PF 20% 16V	
	C 612	QCVB1CN-103Y	C CAPACITOR	.010MF 30% 16V	
	C 613	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V	
	C 614	QFLC1HJ-1042M	M CAPACITOR	.10MF 5% 50V	
	C 615	QCFB1H2-223	C CAPACITOR	.022MF +80:-20% 50V	
	C 616	QCFB1H2-223	C CAPACITOR	.022MF +80:-20% 50V	
	C 617	QCFB1H2-223	C CAPACITOR	.022MF +80:-20% 50V	
	C 618	QCB1CM-222Y	C CAPACITOR	2200PF 20% 16V	
	C 619	QCB1HK-271Y	C CAPACITOR	270PF 10% 50V	
	C 620	QCS11HJ-470	C CAPACITOR	47PF 5% 50V	
	C 621	QCB1HK-821Y	C CAPACITOR	820PF 10% 50V	
	C 622	QET41AM-476	E CAPACITOR	47MF 20% 10V	
	C 623	QFLC1HJ-1042M	M CAPACITOR	.10MF 5% 50V	
	C 628	QCC11EM-473V	C CAPACITOR	.047MF 20% 25V	
	C 629	QET41AM-107	E CAPACITOR	100MF 20% 10V	
	C 631	QET41AM-477	E CAPACITOR	470MF 20% 10V	
	C 632	QEK61AM-1072M	E CAPACITOR	100MF 20% 10V	
	C 651	QCS11HJ-120	C CAPACITOR	12PF 5% 50V	
	C 652	QCS11HJ-150	C CAPACITOR	15PF 5% 50V	
	C 653	QCFB1H2-223	C CAPACITOR	.022MF +80:-20% 50V	
	C 655	QCC11EM-473V	C CAPACITOR	.047MF 20% 25V	
	C 661	QCB1HK-471Y	C CAPACITOR	470PF 10% 50V	
	C 662	QCFB1H2-223	C CAPACITOR	.022MF +80:-20% 50V	
	C 663	QFLC1HJ-2232M	M CAPACITOR	.022MF 5% 50V	
	C 664	QCFB1H2-223	C CAPACITOR	.022MF +80:-20% 50V	
	C 665	QFV41HJ-1042M	TF CAPACITOR	.10MF 5% 50V	
	C 671	QCB1CM-152Y	C CAPACITOR	1500PF 20% 16V	
	C 672	QCB1CM-152Y	C CAPACITOR	1500PF 20% 16V	
	C 673	QTE1C05-227	E CAPACITOR	.022MF +80:-20% 50V	
	C 674	QCFB1H2-223	C CAPACITOR	1000PF 10% 50V	
	C 675	QCB1HK-102	C CAPACITOR	1000PF 10% 50V	
	C 676	QCB1HK-102	C CAPACITOR	1000PF 10% 50V	
	C 691	QCB1HK-151Y	C CAPACITOR	150PF 10% 50V	
	C 692	QCB1HK-151Y	C CAPACITOR	150PF 10% 50V	
	C 693	QCB1HK-151Y	C CAPACITOR	150PF 10% 50V	
	C 698	QCB1HK-102	C CAPACITOR	1000PF 10% 50V	
	CN601	QGF1008F1-15	CONNECTOR	TO RF	
	CN603	QGF1205F1-07	CONNECTOR	TO AUDIO	
	CN604	VMC0163-R11	CONNECTOR	TO MICRON	
	CN605	VMC0041-003	W TO B CONNE	TO DIGITAL OUT	
	D 661	1SS133	SI DIODE		
	IC601	AN8806SB	IC	RF AMP DRIVER	
	IC602	BA6897FP	IC	1CHIP PROCESSOR	
	IC603	MN35510	IC		
	Q 601	2SA952(L,K)	TRANSISTOR		
	Q 631	2SA952(L,K)	TRANSISTOR		
	R 601	QRD161J-123	C RESISTOR	12K 5% 1/4W	
	R 603	QRD161J-125	C.RES. I.M	1.2M 5% 1/4W	

BLOCK NO. 03

A	REF.	PARTS NO.	PARTS NAME	REMARKS	SUFFIX
	R 605	QRD167J-134	C.RES. I.M	130K 5% 1/4W	
	R 606	QRD161J-913	C.RES. I.M	91K 5% 1/4W	
	R 607	QRD161J-273	C RESISTOR	27K 5% 1/4W	
	R 609	QRD161J-114	C.RES. I.M	110K 5% 1/4W	
	R 610	QRD161J-134	C RESISTOR	130K 5% 1/4W	
	R 612	QRE141J-103Y	C RESISTOR	10K 5% 1/4W	
	R 613	QRD167J-121	C RESISTOR	120 5% 1/4W	
	R 614	QRD161J-100	C RESISTOR	10 5% 1/4W	
	R 615	QRD161J-120	C RESISTOR	12 5% 1/4W	
	R 616	QRD161J-910Y	C RESISTOR	91 5% 1/4W	
	R 621	QRD161J-330	C RESISTOR	33 5% 1/4W	
	R 622	QRD161J-330	C RESISTOR	33 5% 1/4W	
	R 623	QRD161J-330	C RESISTOR	33 5% 1/4W	
	R 631	QRD161J-331	C RESISTOR	330 5% 1/4W	
	R 632	QRD161J-101	C RESISTOR	100 5% 1/4W	
	R 633	QRD161J-273	C RESISTOR	27K 5% 1/4W	
	R 641	QRD161J-563	C RESISTOR	56K 5% 1/4W	
	R 642	QRD161J-123	C RESISTOR	12K 5% 1/4W	
	R 643	QRD161J-822	C RESISTOR	8.2K 5% 1/4W	
	R 644	QRD161J-223	C RESISTOR	22K 5% 1/4W	
	R 645	QRD161J-223	C RESISTOR	22K 5% 1/4W	
	R 646	QRD161J-182	C RESISTOR	1.8K 5% 1/4W	
	R 647	QRD167J-562	C RESISTOR	5.6K 5% 1/4W	
	R 651	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
	R 652	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
	R 653	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
	R 654	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
	R 655	QRD161J-471	C RESISTOR	470 5% 1/4W	
	R 659	QRD161J-471	C RESISTOR	470 5% 1/4W	
	R 661	QRD161J-104	C RESISTOR	100K 5% 1/4W	
	R 662	QRD161J-155	C RESISTOR	1.5M 5% 1/4W	
	R 663	QRD161J-124	C RESISTOR	120K 5% 1/4W	
	R 664	QRD161J-471	C RESISTOR	470 5% 1/4W	
	R 666	QRD161J-220	C RESISTOR	22 5% 1/4W	
	R 671	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
	R 672	QRD161J-102	C RESISTOR	1.0K 5% 1/4W	
	X 651	VCX5016-934V	CRYSTAL	16.9344MHZ	

-MEMO-


Packing Materials and Accessories List

Block No.

M	3	M	M
---	---	---	---

Block No.

M	4	M	M
---	---	---	---

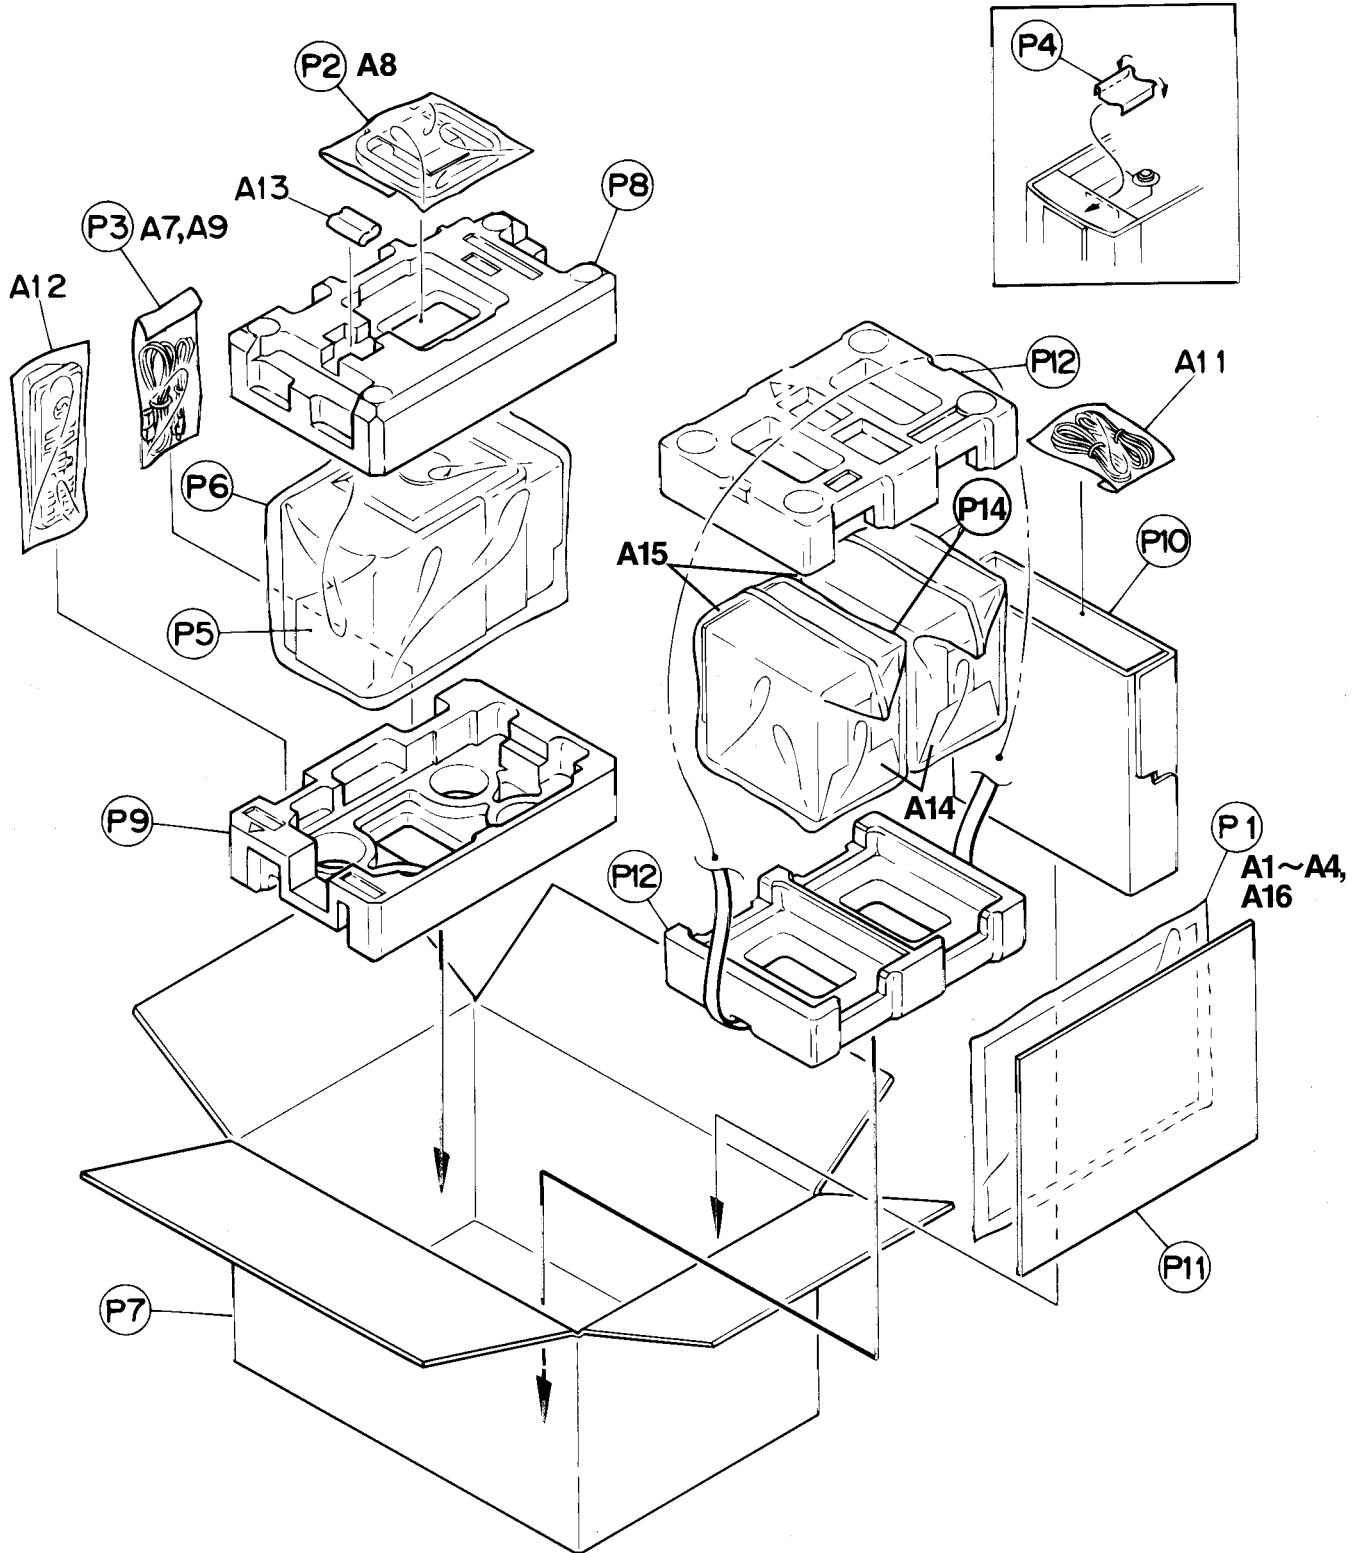

■ Packing List

BLOCK NO. M3MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	P 1	QPA02503503P	POLY BAG	INSTRUCTIONS	1		
	P 2	QPA01702503P	POLY BAG	AM LOOP ANT	1		
	P 3	QPA01202505	POLY BAG	FOR POWER CORD	1		
	P 4	VPK4236-010	SPACER		1		
	P 5	VPK3001-012	SHEET		1		
	P 6	QPC04004515P	POLY BAG		1		
	P 7	LV30142-003A	CARTON	FS-5000 ONLY	1		
		LV30142-004A	CARTON	FS-6000 ONLY	1		
	P 8	LV10038-001A	CUSHION		1		
	P 9	LV10038-002A	CUSHION		1		
	P 10	LV30440-001A	SPACER		1		
	P 11	LV40548-001A	SHEET		1		
	P 12	LV20125-001A	CUSHION	FOR SPEAKER	2		
	P 14	85-000-289-01	POLY BAG	FOR SPEAKER	2		

■ Accessories List

BLOCK NO. M4MM

△	REF.	PARTS NO.	PARTS NAME	REMARKS	QTY	SUFFIX	CLR
	A 1	LVT0086-001A	INSTRUCTIONS		1		
	A 2	BT-51009-3	WARRANTY CARD		1		
		BT-52001-4	WARRANTY CARD		1		
	A 3	BT-20137	SERVICE NETWORK		1		
		BT-20071B	SVC CENTER LIST		1		
	A 4	BT-20044G	SAFETY INST.		1		
	A 7	EWP503-001	ANT.WIRE	FM ANT.	1		
	A 8	QAL0014-001	AM LOOP ANT	AM ANT.	1		
△	A 9	QMP1F00-183	POWER CORD		1		
	A 11	VMP0133-101	SP.CORD SET UL	SPEAKER CORD OF	1		
	A 12	RM-RXFS5000	REMOCON UNIT		1		
	A 13	R6SPTT/2STS	BATTERY	FOR REMOCON	1		
	A 14	SPUX5000-SPBOX	SPEAKER BOX	FS-5000 ONLY	2		
		SPFS6000-SPBOX	SPEAKER BOX	FS-6000 ONLY	2		
	A 15	LV20179-001A	SPEAKER NET	FOR SPEAKER	2		
	A 16	LV40554-001A	POLISHING CLOTH	FS-6000 ONLY	1		

FS-5000/FS-6000

JVC

VICTOR COMPANY OF JAPAN, LIMITED

AUDIO DIVISION, 10-1, 1Chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.20713)

 Printed in Japan
9807 (V)