


JVC

SERVICE MANUAL

FM/MW/LW RECEIVER

RX-316RBK

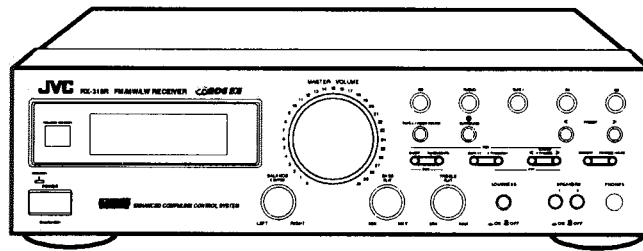

Area Suffix

BS	the U.K.
EN	Scandinavia
EF	Continental Europe
G	Germany
GI	Italy

COMPU LINK
 Remote
 Control Component

Contents

<i>Safety Precautions</i>	1-2	<i>Adjustment Procedures</i>	1-25
<i>Instruction Book</i>	1-3	<i>Block Diagrams</i>	1-27
<i>Description of ICs</i>	1-16	<i>Schematic Diagrams</i>	Insertion
<i>Internal Connection of Display</i>	1-23	<i>Printed Circuit Boards</i>	Insertion
<i>Disassembly Procedures</i>	1-24	<i>Parts List</i>	2-1

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)
After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).

- Alternate check method
Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10 W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor.

Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

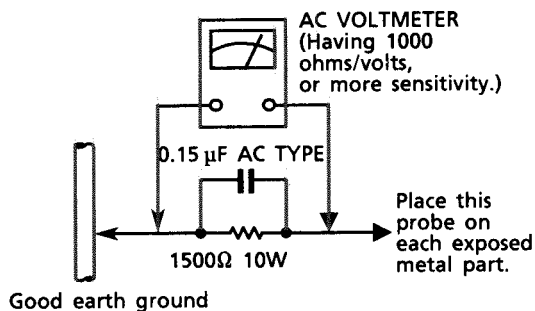

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

Warnings, Cautions and Others / Warnung, Achtung und sonstige Hinweise / Mises en garde, précautions et indications diverses / Waarschuwingen, voorzorgen en andere mededelingen / Avisos, precauciones y otras notas / Avvertenze e precauzioni da osservare

Contents

WARNINGS, CAUTIONS AND OTHERS inside front cover

CONTENTS

INTRODUCTION	1
Features	1
About This Manual	1
SWITCHES AND CONTROLS	2
Receiver	2
Remote Control	2
INSTALLATION	3
Cautions	3
Connecting Stereo Equipment	4
Connecting Speakers	6
Connecting an AM Antenna	7
Connecting an FM Antenna	8
Connecting the Power	9
OPERATION OUTLINE	10
Basic Operation Reference	10
SELECTING THE AUDIO SOURCE	11
Listening	11
Recording	11
RECEIVING AN AM/FM BROADCAST	12
Tuning	12
Selecting an FM Reception Mode	12
Presetting Tuned Frequencies	13
USING THE RDS (RADIO DATA SYSTEM) TO RECEIVE FM STATIONS	14
ADJUSTING THE VOLUME AND TONE	17
Adjusting the Volume	17
Adjusting the Tone	17
Listening at Low Volume (Loudness)	18
Using the Sleep Timer	18
OPERATING AUDIO COMPONENTS	19
COMPU LINK Remote Control System	19
Using the Remote Control	20
TROUBLESHOOTING	22
SPECIFICATIONS	23

<p>IMPORTANT for the U.K. DO NOT cut off this mains plug from this equipment. If the plug is fitted is not suitable for the mains supply, a competent person should be fitted is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer. BE SURE to replace the fuse only with an identical approved type, as originally fitted. If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply. If this product is not supplied fitted with a mains plug then follow the instructions given below. IMPORTANT. DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow. The wires in the mains lead on this product are coloured in accordance with the following code: Blue : Neutral Brown : Live As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN</p>	<p>This apparatus does not connect with the mains line even when POWER is set to STANDBY. The remote control unit must be connected to the power off completely. Dieses Gerät bleibt mit dem Stromnetz verbunden, auch wenn der Netzschalter (POWER) auf STANDBY steht. Dieses Gerät kann auch über Fernbedienung ein- und ausgeschaltet werden. Um das Gerät aber vollständig vom Stromnetz zu trennen, muß der Stecker aus der Steckdose gezogen werden. Cet appareil reste connecté à l'alimentation secteur même quand POWER est réglé sur STANDBY. L'alimentation de cet appareil peut aussi être contrôlée à partir de la télécommande. Déconnectez la prise d'alimentation pour mettre l'appareil complètement hors tension. Zolang de stekker van het netsnoer in het stopcontact steekt, blijft het apparaat onder spanning staan, zelfs als de POWER schakelaar op STANDBY staat. Dit apparaat kan ook in- en uitgeschakeld worden met de afstandsbediening. Het apparaat moet volledig van het stroomnet worden losgekoppeld, trek de stekker van het netsnoer dan uit het stopcontact. Este aparato se permanecerá conectado a la red de CA incluso aunque ponga POWER en STANDBY. Este aparato puede ser controlado también por el control remoto. Para desconectar completamente la alimentación, desconecte el enchufe del cable de alimentación de CA. Questo apparecchio rimane collegato alla rete di alimentazione anche se l'interruttore POWER viene regolato su STANDBY. L'alimentazione di questo apparecchio può essere controllata anche con il telecomando. Scollegare il cavo di alimentazione per spegnere completamente l'apparecchio.</p>
--	--

<p>CAUTION To reduce the risk of electrical shocks, fire, etc.: 1. Do not remove screws, covers or cabinet. 2. Do not expose this appliance to rain or moisture.</p> <p>ACHTUNG Zur Verhinderung von elektrischen Schlägen, Brandgefahr, usw.: 1. Keine Schrauben lösen oder Abdeckungen entfernen und nicht das Gehäuse öffnen. 2. Dieses Gerät weder Regen noch Feuchtigkeit aussetzen.</p> <p>ATTENTION Afin d'éviter tout risque d'électrocution, d'incendie, etc.: 1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil. 2. Ne pas exposer l'appareil à la pluie ni à l'humidité.</p>	<p>VOORZICHTIG Ter vermindering van gevaar voor brand, elektrische schokken, enz.: 1. Verwijder geen schroeven, panelen of de behuizing. 2. Stel dit toestel niet bloot aan regen of vocht.</p> <p>PRECAUCIÓN Para reducir riesgos de choques eléctricos, incendio, etc.: 1. No extraiga los tornillos, los cubiertas ni la caja. 2. No exponga este aparato a la lluvia o a la humedad.</p> <p>ATTENZIONE Per ridurre il rischio di shock elettrici, incendi, ecc.: 1. Non togliete viti, coperture o la scatola. 2. Non esponete l'apparecchio alla pioggia e all'umidità.</p>
---	--

Introduction

Thank you for purchasing the JVC RX-316RBK receiver. We hope it will be a valued addition to your audio system. Be sure to read these instructions carefully before installing and operating the receiver.

Features

- Monitor recording quality
- Surround feature with two or four speakers
- Remote control
- RDS (Radio Data System) with EON (Enhanced Other Network)
- Preset radio stations
- Easy to use

About This Manual


This manual gives you the basic information you need to install and use your receiver. It explains everything you need to know from turning the power switch on to basic troubleshooting. Please consult your JVC dealer if you have further questions about the receiver.

The following conventions are used in this manual:

- Controls, buttons, and connection points on the back of the receiver are indicated with capital letters, like this: **POWER** button, **AUDIO** jacks
- Messages that appear on the display window are indicated with capital letters and in quotes, like this: "TUNED"
- Instructions that you need to follow to get the correct results are labeled **IMPORTANT!**
- Helpful information is labeled **NOTE:**
- To avoid electric shock to yourself or damage to the receiver, read the information labeled **CAUTION!**

Switches and Controls

Familiarize yourself with the main switches and controls on your JVC RX-316RBK receiver.

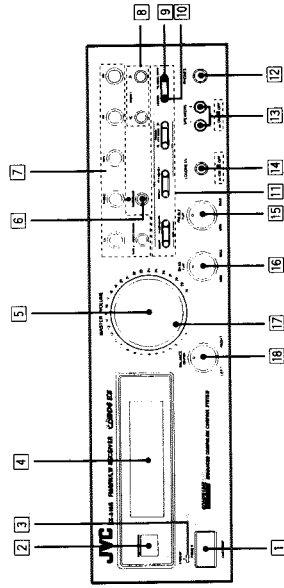


Receiver

- 1 POWER switch
- 2 REMOTE SENSOR window
- 3 STANDBY indicator
- 4 Display window
- 5 MASTER VOLUME control
- 6 SURROUND button
- 7 SOURCE SELECT buttons
- 8 PRESET buttons
- 9 FM MODE/MUTE button
- 10 MEMORY button
- 11 RDS/TUNING buttons
- 12 PHONES jack
- 13 SPEAKERS buttons
- 14 LOUDNESS button
- 15 TREBLE control
- 16 BASS control
- 17 MASTER VOLUME indicator
- 18 BALANCE control

Remote Control

- 1 POWER switch
Turns on the Unit or puts it in standby mode
- 2 SLEEP button
- 3 Numeric button for only FM/AM
• Control button for CD and CD Changer
- 4 SOURCE SELECT buttons
- 5 Tape 1 and CD control buttons
- 6 RDS button
- 7 SURROUND button
- 8 VOLUME adjuster

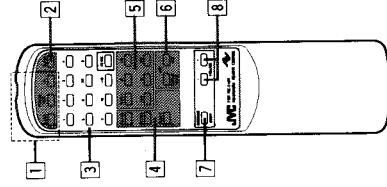

Installation

This section explains how to connect the receiver to other stereo equipment and speakers, and how to connect the power supply.

⚠ Cautions

- ⚠ **CAUTION!** Before installing your receiver:
 - Make sure your hands are dry.
 - Turn the power off to all components.
 - Read the installation instructions for all components you are going to connect.

Positioning the Receiver

- ⚠ **CAUTION!**
 - Install the receiver in a location that is level and protected from moisture.
 - The temperature around the receiver must be between 23° and 104° F (-5° and 40° C).
 - Make sure there is good ventilation around the receiver. Poor ventilation could cause overheating and damage the receiver.

Making Power Connections

- ⚠ **CAUTION!**
 - Do not handle the power cord with wet hands.
 - Do not pull on the power cord to unplug the receiver. Always grab the plug directly so as not to damage the cord.

Handling the Receiver

- ⚠ **CAUTION!**
 - Do not insert any metal object into the receiver.
 - Do not disassemble the receiver or remove screws, covers, or cabinet.
 - Do not expose the receiver to rain or moisture.

Connecting Stereo Equipment


Before connecting the receiver, read the following paragraphs carefully.

IMPORTANT! The left channel of any audio component must be connected to the left-channel jack of the receiver, and the right channel to the right-channel jack. If they are reversed, the stereophonic image will not be correct.

NOTE: To ensure correct connections, insert the red plug into the right channel.

Connect stereo component to the amplifier using cables with RCA PIN plugs. Connect the output jacks on a tape deck to the jacks marked IN (PL, AY) on the amplifier, and the input jacks to those marked OUT (REC).

NOTE: Any turntables incorporating a small-output cartridge such as an MC (moving-coil type) must be connected to this amplifier through a commercial head amplifier or step-up transformer. Direct connection may result in insufficient volume.

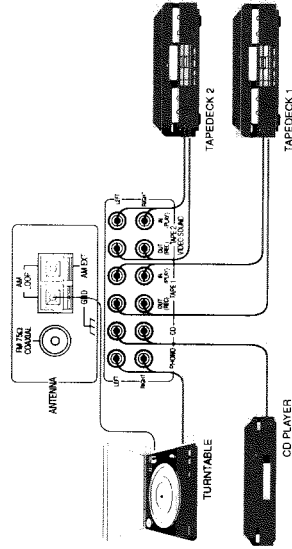

NOTE: If a ground cable is fitted to your turntable, connect the ground cable to the AM LOOP terminal marked GND. In this case, do not disconnect the AM LOOP wire from the GND terminal.

Before Starting

Basic Connections


COMPU LINK-3 Connections

COMPU LINK-3 SYNCHRO jacks on the back of the receiver connect the COMPU LINK remote control system. This system connects other JVC audio components with the receiver to make listening and recording more convenient. To use this system, attach the cables provided with your JVC components to the COMPU LINK-3 SYNCHRO jacks on the rear panel of each component. Then connect the cables to the receiver.

NOTES:

- *COMPU LINK-3 is an upgraded version of COMPU LINK-1. If your equipment provides COMPU LINK-1 jacks, you can still connect your equipment, but slight imperfections may result. Automatic Power ON/OFF, for example, may not always function properly.*
- *Refer to page 19 for details about the COMPU LINK remote control system.*


⚠ **CAUTION!** Do not connect Tape Deck 2 to the COMPU LINK jacks. It may cause the COMPU LINK system to malfunction.

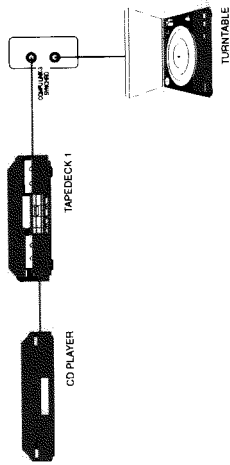

Other Audio Connections

Use the socket on the back of the receiver to connect the power supply of any audio components. By pressing the POWER switch on the remote control, you can turn the receiver, and all connected components, on or off at the same time.

⚠ **CAUTION!** Do not connect any components that consume more power than the capacity of the AC outlets. This capacity is indicated below the socket on the back of the receiver.



For Continental Europe For the U.K.

The FUSE holder is provided near the AC OUTLET except for the U.K., Germany, and Italy.



Connecting Speakers

Up to four speakers (two sets) can be connected to the receiver. Connecting four speakers will allow you to use the built-in Surround feature.


Connect speakers to the SPEAKERS terminals on the back of the receiver. Use the wire supplied with the speakers.

To connect each speaker, follow these steps:

Step 1 Open each terminal on the back of the receiver and insert the end of the speaker wire, as shown.

Step 2 Close the terminals to clamp the speaker wires in place, as shown.

⚠ **CAUTION!** Use speakers with the same speaker impedance indicated by the speaker terminals on the back of this unit.

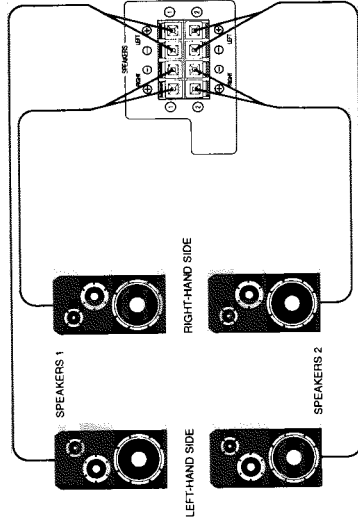

Before Starting

Connecting Speakers



Connecting an AM Antenna

One AM loop antenna is supplied with your receiver.

To connect the AM loop antenna to the AM LOOP terminals, follow these steps:

- Step 1** Open each terminal and insert one of the two ends of the AM antenna wire.
- Step 2** Close the terminals to clamp the antenna wires in place.
- Step 3** Stand the AM loop antenna on its own base, as shown. Set it on any flat surface.




AM Outdoor Antenna

If your AM broadcast reception is unsatisfactory, you should connect an AM outdoor antenna in addition to the loop antenna. The antenna wire should be 16 to 40 feet (5 to 13 meters) long.

Connect one end of the outdoor single vinyl-covered antenna wire to the AM LOOP terminal marked AM EXT.

IMPORTANT! The AM loop antenna must be installed to receive AM broadcasts. Do not disconnect the loop antenna when installing an outdoor antenna.

IMPORTANT! Except for the connection, make sure no uninsulated antenna wire touches the rear panel of the receiver. Otherwise, the receiver might not pick up AM broadcasts.

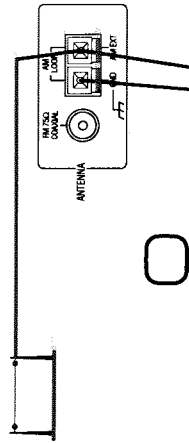


Connecting an FM Antenna

The type of terminal provided for connecting an FM antenna depends on your geographic area. Read the section below which corresponds to your area.

IMPORTANT! Make sure the antenna conductors do not touch any other terminals on the receiver. This could cause poor reception.

For Germany

You have two options for connecting an FM antenna. Connect the included wire antenna as shown in option a, or purchase antenna and cable with connector DIN 45332 and attach as shown in option b.

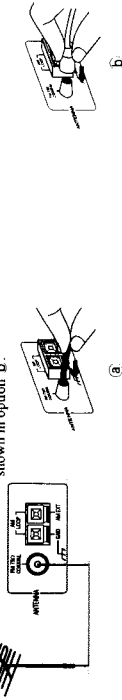

For Other European Countries

Connect the antenna cable to the FM75COAXIAL terminal using the Antenna Adaptor. You have two options — a 300-ohm feeder cable, or a 75-ohm coaxial cable.




To attach the Antenna Adaptor to the 300-ohm feeder cable, secure the two conductors to the screws of the Antenna Adaptor, as shown at the left.



To attach the Antenna Adaptor to the 75-ohm coaxial cable, follow these steps:

- Step 1** Remove the cover of the Antenna Adaptor by lifting the tabs on both sides.
- Step 2** Remove the jumper wire in the Antenna Adaptor with a tweezet.
- Step 3** Insert the center conductor of the coaxial cable into the notch located in the center of the fitting at the end of the Antenna Adaptor.
- Step 4** Using a pair of pliers, secure the fitting in the center of the Antenna Adaptor so that the shield braid of the coaxial cable is held tightly in the fitting.
- Step 5** Snap the cover back onto the Antenna Adaptor.

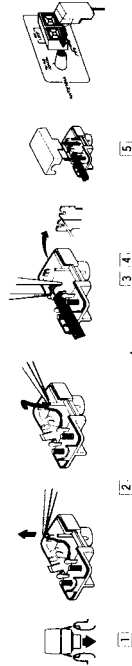


Before Starting

One AM loop antenna is supplied with your receiver.

To connect the AM loop antenna to the AM LOOP terminals, follow these steps:

- Step 1** Open each terminal and insert one of the two ends of the AM antenna wire.
- Step 2** Close the terminals to clamp the antenna wires in place.
- Step 3** Stand the AM loop antenna on its own base, as shown. Set it on any flat surface.

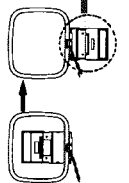

AM Outdoor Antenna

If your AM broadcast reception is unsatisfactory, you should connect an AM outdoor antenna in addition to the loop antenna. The antenna wire should be 16 to 40 feet (5 to 13 meters) long.

Connect one end of the outdoor single vinyl-covered antenna wire to the AM LOOP terminal marked AM EXT.


IMPORTANT! The AM loop antenna must be installed to receive AM broadcasts. Do not disconnect the loop antenna when installing an outdoor antenna.

IMPORTANT! Except for the connection, make sure no uninsulated antenna wire touches the rear panel of the receiver. Otherwise, the receiver might not pick up AM broadcasts.



Operation Outline

Basic Operation Reference

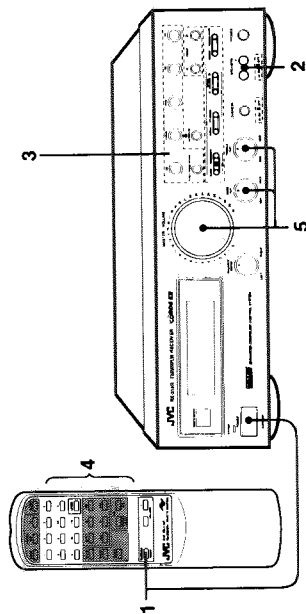

1 Turn on the power

Push the POWER switch to turn on the receiver. For instance, the display lights as follows:



NOTE: Pushing the POWER switch again turns off the power and lights the STANDBY light. A small amount of power (3 watts) is consumed and the STANDBY indicator is lit in the standby mode. To turn the power off completely, disconnect the power cord from the wall outlet.

2 Select speakers (page 17)

Use the SPEAKERS switch to choose between the two sets of speakers. To use your headphones, insert the headphone plug into the PHONES jack on the receiver.

3 Choose an audio source (page 11)

To choose an audio source, press one of the SOURCE SELECT buttons on the receiver or select one of the components on the remote control.



4 Operate the audio source (pages 19-21)

Refer to the manual provided with each component. If your JVC components are connected to the COMPU LINK jack of the receiver, you can operate them using the remote control.

5 Adjust volume and tone (pages 17-18)

Rotate the MASTER VOLUME control on the receiver or press the VOLUME button on the remote control to adjust volume. See page 17 for other ways to change the volume or tone.

Connecting the Power

After checking all connections, insert the power cord plug into an outlet.

When the power supply is connected correctly, the POWER STANDBY indicator lights on the front of the receiver. A small amount of power (3 watts) is consumed under these conditions, even if the receiver is turned off. To shut off the power completely, unplug the power cord from the outlet.


CAUTION!

- Do not handle the power cord with wet hands.
- Do not pull on the power cord to unplug the receiver. Always grasp the plug directly so as not to damage the cord.
- Do not plug the power cord into a socket until all components are connected correctly.

IMPORTANT! If the power cord is disconnected or a power failure occurs, the receiver settings in memory fade away for 2 or 3 days.

The remote control requires two batteries (supplied). To insert batteries, follow these steps:

- Step 1** On the back side of the remote control, press down on the battery cover and slide it out.
- Step 2** Insert batteries. Make sure to observe the proper polarity: (+) to (+) and (-) to (-).
- Step 3** Slide the cover in.

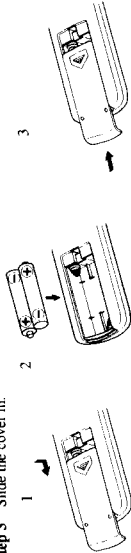

If the range or effectiveness of the remote control decreases, replace the batteries. Use two (2) dry-cell batteries of the R6P (SUM-3)/AA (1.5F) type.

CAUTION! Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity indicated (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Replacing Batteries

Selecting the Audio Source


The receiver can receive input from compact discs, cassette tapes, turntables, or any audio source that you connect. You can select a source for either listening or recording.

Listening



Press one of the SOURCE buttons on the receiver or the remote control.

- CD* Listen to the CD player.
- PHONO* Listen to a record.
- TAPE 1* Listen to the tape deck connected to the TAPE 1 jacks.
- TAPE 2 / VIDEO SOUND Listen to the tape deck connected to the TAPE 2/VIDEO SOUND jacks.
- FM* Listen to an FM broadcast.
- AM* Listen to an AM broadcast.

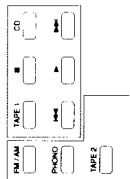

IMPORTANT! The TAPE 2/VIDEO SOUND button has a different function from other source selector buttons, because it allows you to monitor the quality of the recording. For more details, see Monitoring below.

NOTE: On the remote, when you press one of the SOURCE buttons marked above with an asterisk, the receiver automatically turns ON (even if it was OFF before).

Recording

The source being played is automatically selected as the source to be recorded. While recording, you can listen to the selected source at any desired volume and tone settings.

NOTE: Volume and Tone adjustments and the surround sound effect do not affect recording.

IMPORTANT! When recording from TAPE 2 to TAPE 1, press the TAPE 2/VIDEO SOUND button and another button other than TAPE 1.

Monitoring

Using the Monitor feature, you can compare the sound quality of the source to the sound quality of the recording being made.

To use the Monitor feature while recording onto a cassette deck connected to the TAPE 2 jacks, follow these steps:

Step 1 Press the TAPE 2/VIDEO SOUND button.

The "TAPE 2 MONITOR" light appears, and you can listen to the sound of the cassette deck connected to the TAPE 2 jacks. You are now hearing the quality of the recording, not the quality of the source.

Step 2 Press the TAPE 2/VIDEO SOUND button again.

This turns off the "TAPE 2 MONITOR" light, and the speakers play the previously selected source.

NOTE: If the cassette deck has three heads, you can hear the sound of the recording at the same time as it records on the tape.

Receiving an AM/FM Broadcast

To receive an AM/FM broadcast, select either AM or FM using the AM button or FM button. Then tune to the precise frequency using the TUNING buttons.

Tuning

Tune to the frequency of a desired station using the TUNING buttons. Pressing the right button increases the frequency, and pressing the left button decreases the frequency. Tapping the TUNING button once changes the frequency in steps of 1 kHz for LW, 9 kHz for MW and 50 kHz for FM.

On the model that can receive LW (Long-Wave) broadcast, AM tuning will skip to the lower limit of the MW (Middle-Wave) frequencies when it reaches the upper limit of the LW frequencies and vice versa.

There are two tuning modes: Manual and Automatic.

If you know the frequency of a desired station, hold down the TUNING button to start the frequency changing quickly. Release the TUNING button near the desired station and tap it repeatedly until you arrive at the correct frequency.

If you want to scan frequencies for a desired station, hold down the TUNING button to start the frequency changing quickly. When you release the TUNING button, the frequency continues to change until it reaches a station.

When a station is correctly tuned, the "TUNED" light appears on the display window.

Once a tuned frequency is preset, it can be directly recalled using the PRESET buttons. For details, see page 13.

NOTE: When you use automatic tuning, weak stations are ignored. To pick up weak stations, use manual tuning.

IMPORTANT! If the receiver is tuned to a station but the "TUNED" light does not appear, try rotating the antenna for better reception.

Selecting an FM Reception Mode

Pressing the FM MODE/MUTE switch switches between these modes.

The "MUTE-AUTO" light appears on the display window. You hear either stereo sound or monaural sound, depending on the broadcast. If it is a stereo broadcast, the "STEREO" light appears. This mode is also useful for suppressing static "noise" between stations.

The "MUTE-AUTO" light disappears. You hear monaural sound even if a broadcast is in stereo. This mode is also useful when a stereo broadcast is noisy because of a weak signal.

NOTE: Using the Automatic Tuning mode, the sound of a broadcast with a weak signal may be muted. In this case, select the monaural mode.



Manual Tuning

Automatic Tuning





Presetting Tuned Frequencies

You can preset up to total 40 FM/AM radio stations by assigning channel numbers (1 through 40) to them. Once a station is preset, you can listen to it by entering the preset number using the PRESET buttons on the receiver, or the numeric buttons of the remote.

To use presetting to assign channel numbers to your favorite stations, follow these steps:

Step 1 Tune to a station. If necessary, follow the procedure on page 12.

Step 2 Press the MEMORY button.


The "MEMORY" light appears in the display window.

Step 3 Using the PRESET buttons, enter a number (1 through 40). This number is the channel number you are assigning to the station.

IMPORTANT! You must enter the channel number while the "MEMORY" light is on. You have about 5 seconds to do this. If the light disappears before you enter the channel number, press the MEMORY button again.

Step 4 While the preset channel number is flickering, press the memory button again. When the MEMORY light disappears and the channel number is displayed, presetting is completed.

To choose numbers from 1 through 40, press the +10 key and numeric button on the remote.



- To choose 17 Press +10, then 7.
- To choose 20 Press +10, then 10.
- To choose 25 Press +10 twice, then 5.
- To choose 40 Press +10 three times, then 10.

NOTE: You can also tune using the remote control. First press the FM/AM button on the remote, then enter the channel number using the numeric buttons on the remote.

Presetting



Using the RDS (Radio Data System) to Receive FM Stations

RDS allows FM stations to send additional signal along with their regular program signals. For example, the stations send their station names, and information about what type of program they broadcast, such as sports or music, etc.

When tuned to an FM station which provides the RDS service, the RDS indicator lights up.

With the RX-316RBK, you can receive the following types of RDS signals.

- PS (Program Service) : shows station names commonly known
- PTY (Program Type) : shows types of broadcast programs
- RT (Radio Text) : shows text messages the station sends

What information can RDS signals provide?

You can see the RDS signals the station sends on the display.

To show the RDS signals on the display:

Press the DISPLAY button or DISPLAY MODE on the remote control while listening to an FM station.

Each time you press the button, the display changes to show you the following information:



PS (Program Service) : While searching, "PS" appears and then the station names will be displayed. "NO PS" appears if no signal is sent.

PTY (Program Type) : While searching, "PTY" appears and then the type of the broadcast program will be displayed. "NO PTY" appears if no signal is sent.

RT (Radio Text) : While searching, "RT" appears and then text messages the station sends will be displayed. "NO RT" appears if no signal is sent.

Station Frequency : Station frequency (non-RDS service.)

NOTES:

- If searching finishes at once, "PS", "PTY", and "RT" will not appear on the display.
- If you press the DISPLAY button or DISPLAY MODE while listening to an AM (MW/LW) station, the display only shows station frequency.
- RDS is not available in AM (MW/LW) broadcasts.

On characters displayed

When the display shows PS, PTY, or RT signals, the following characters are used. The display cannot differentiate upper case and lower case letters and always uses upper case letters.

- The display cannot show accented letters. "A." for instance, may stand for accented "A's" like "À, Á, Â, Ã, Ä, Å"

P	0	1	2	3	4	5	6	7	8	9
A	0	1	2	3	4	5	6	7	8	9
B	0	1	2	3	4	5	6	7	8	9
C	0	1	2	3	4	5	6	7	8	9
D	0	1	2	3	4	5	6	7	8	9
E	0	1	2	3	4	5	6	7	8	9
F	0	1	2	3	4	5	6	7	8	9
G	0	1	2	3	4	5	6	7	8	9
H	0	1	2	3	4	5	6	7	8	9
I	0	1	2	3	4	5	6	7	8	9
J	0	1	2	3	4	5	6	7	8	9
K	0	1	2	3	4	5	6	7	8	9
L	0	1	2	3	4	5	6	7	8	9
M	0	1	2	3	4	5	6	7	8	9
N	0	1	2	3	4	5	6	7	8	9
O	0	1	2	3	4	5	6	7	8	9
P	0	1	2	3	4	5	6	7	8	9
Q	0	1	2	3	4	5	6	7	8	9
R	0	1	2	3	4	5	6	7	8	9
S	0	1	2	3	4	5	6	7	8	9
T	0	1	2	3	4	5	6	7	8	9
U	0	1	2	3	4	5	6	7	8	9
V	0	1	2	3	4	5	6	7	8	9
W	0	1	2	3	4	5	6	7	8	9
X	0	1	2	3	4	5	6	7	8	9
Y	0	1	2	3	4	5	6	7	8	9
Z	0	1	2	3	4	5	6	7	8	9
[0	1	2	3	4	5	6	7	8	9
]	0	1	2	3	4	5	6	7	8	9
^	0	1	2	3	4	5	6	7	8	9
_	0	1	2	3	4	5	6	7	8	9
`	0	1	2	3	4	5	6	7	8	9
{	0	1	2	3	4	5	6	7	8	9
}	0	1	2	3	4	5	6	7	8	9
~	0	1	2	3	4	5	6	7	8	9
	0	1	2	3	4	5	6	7	8	9

To search the program by PTY codes

One of the advantages of the RDS service is that you can locate a particular kind of program by specifying the PTY codes.

To search a program using the PTY codes: (Possible only on the front panel)

1. Press the **PTY SEARCH** button while listening to an FM station.
The display alternates between "PTY" and "SELECT".

2. Press the **PTY MODE** button to select a PTY code.
The display gives you the PTY codes described below.

3. Press the **PTY SEARCH** button.
While searching, the display alternates between "SEARCH" and the selected PTY code.
The RX-316RBK searches 40 preset channels, stops when it finds the one you have selected, and tunes in that station.

To continue searching after the first stop, press the **PTY SEARCH** button again while the indications on the display blink.

If no program is found, "NOT FOUND" appears on the display.

To stop searching any time during the process.
Using any tuner operating buttons and controls will stop searching.

Descriptions of the PTY codes


- NEWS: News
- AFFAIRS: Topical program expanding on the current news or affairs
- INFO: Programs on medical service, weather forecast, etc.
- SPORT: Sports events
- EDUCATE: Educational programs
- DRAMA: Radio plays
- CULTURE: Programs on national or regional culture
- SCIENCE: Programs on natural sciences and technology
- VARIED: Other programs like comedies or ceremonies
- POP M: Pop music
- ROCK M: Rock music
- M.O.R. M: Middle-of-the-road music (usually called "easy listening")
- LIGHT M: Light music
- CLASSICS: Classics
- OTHER M: Other music
- NONE: Undefined (this cannot be searched)

When an emergency broadcast (ALARM signal) is sent from an FM station.

The RX-316RBK automatically switches the source to FM and tunes in the station except in the following cases:

- When you are listening to non-RDS stations (all AM (MWLW) and some FM stations).
- When the power to the RX-316RBK is turned off.

While receiving an emergency broadcast, "ALARM" appears on the display.

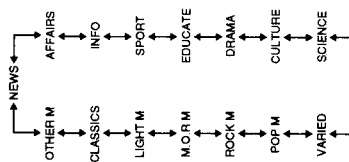

To switch to a broadcast program of your choice temporarily

Another convenient RDS service is called "EON (Enhanced Other Network)".

This allows the RX-316RBK to switch temporarily to a broadcast program of your choice (NEWS, TA, and/or INFO) from other sources *except in the following cases*:

- When you are listening to a non-RDS station (all AM (MWLW) and some FM stations).
- When the last received FM station is a non-RDS station.

To select the program type

Press the TA/NEWS/INFO button on the front panel

Each time you press the button, the display changes to show the following.



To use the EON function

Press the ON/OFF button either on the front panel or EON button on the remote control. The EON indicator lights up on the display, and the RX-316RBK enters EON standby mode.

CAUTION: If there is no station broadcasting the program you have selected

The RX-316RBK continues playing the current source.

When a station starts broadcasting the program you have selected, the RX-316RBK automatically switches to the station. The EON indicator starts blinking.

When the program is over, the RX-316RBK goes back to the currently selected source, but still remains in EON standby mode.

CAUTION: If there is a station broadcasting the program you have selected

The RX-316RBK stops playing the current source, and tunes in the program. The EON indicator starts blinking.

When the program is over, the RX-316RBK goes back to the currently selected source, but still remains in EON standby mode.

To stop listening to the program selected by EON

Press the EON button again so that the EON indicator goes off on the display. The RX-316RBK enters EON off mode and goes back to the currently selected source.

Each time you press the button, the EON mode always alternates between standby mode and off mode.

NOTES:

- In EON standby mode, if you change the source to AM or if you carry out synchronized recording (see page 19), EON standby mode is cancelled temporarily. The RX-316RBK goes back to EON standby mode again when you have finished that operation.
- While listening to a program tuned in by the EON function, you can only use the POWER, EON, and DISPLAY buttons.
- When the RX-316RBK is turned off, the EON function is also turned off.

CAUTION:

When the source alternates intermittently between the station tuned in by the EON function and the currently selected source, press the EON button to cancel the EON function (the EON indicator off on the display). This is not the malfunction of the RX-316RBK.

Adjusting the Volume and Tone

Adjusting the Volume

Use the MASTER VOLUME control to adjust the volume from the left and right speakers. Rotating the dial to the right increases the volume. The volume from the speakers and the headphones increases simultaneously.

NOTE: Volume can also be adjusted using the remote control. Press the VOLUME button marked + to increase the volume, or the VOLUME button marked - to decrease the volume.

CAUTION: Listening to extremely loud sound may damage your hearing. Be especially careful when using headphones.

Pushing in SPEAKER button 1 or 2 activates that pair of speakers. Pressing either button again deactivates that pair of speakers. When the button is in, that pair is activated. You can listen to both pairs, pair 1, pair 2, or neither pair.

IMPORTANT! If only one set of speakers is connected, pressing "in" both speaker buttons will produce no sound.

Insert the headphone plug into the PHONES jack. To limit sound to the headphones (no sound from the speakers), press SPEAKER buttons 1 and 2 to deactivate all speakers.

CAUTION: To avoid hearing damage, turn the volume down before plugging in the headphones, then gradually increase the volume.

Use the BALANCE control to adjust the balance between the left and right channels. Rotating the dial to the right decreases the left-channel volume, and rotating it to the left decreases the right-channel volume. The BALANCE control affects both sets of speakers and the headphones.


Adjusting the Tone

Use the BASS control to adjust low pitches and the TREBLE control to adjust high pitches. Turn either control to the right for intensified pitch. Set both controls at the FLAT position for normal listening.

Press the SURROUND button to create this movie-theater effect. The SURROUND indicator lights. Press the SURROUND button again to deactivate the surround feature. The SURROUND indicator turns off.

IMPORTANT! The Surround feature has no effect on monaural (non-stereo) sources.
NOTE: Two sets of speakers are recommended to produce an ideal surround effect, but you can use the feature with only one set of speakers connected.

Using the MASTER VOLUME Control



Selecting the Speakers



Listening to Headphones



Adjusting the Left-Right Balance



Adjusting Bass and Treble



Enjoying the Surround Sound Effect



Listening at Low Volume (Loudness)

Human ears are not sensitive to bass at low volume. To compensate for this, the loudness function automatically boosts the bass level as you lower the volume.

To use the loudness function, press the LOUDNESS button.

To turn the function off, press the LOUDNESS button again.

Using the Sleep Timer

The sleep timer lets you listen to any program for up to 80 minutes before it automatically shuts off. The receiver goes back to standby mode (off) after the time period that you specify. To use the sleep timer:

Step 1 Press the SLEEP button on the remote control.

"SLEEP" appears in the display window.

IMPORTANT! You have 5 seconds to proceed to the next step. If you wait more than 5 seconds, return to step 1.

Step 2 Press the SLEEP button again to set the timer.

Each time you press the SLEEP button, the time limit is extended 10 minutes. You can set up to 80 minutes.

Step 3 Stop when you reach the desired time period.

To set time indicator disappears after a few seconds. The receiver will automatically return to standby mode (off) after the time period you specified.

NOTES:

- After setting the sleep timer, you can change sources as often as you wish within the specified time period.
- After setting the sleep timer, you can check the remaining time in minutes by pressing the SLEEP button. You can extend the time period further, in 10-minute increments, by pressing the SLEEP button again.

LOUDNESS



- ON ■ OFF



Operating Audio Components

COMPU LINK Remote Control System

The COMPU LINK remote control system lets you operate the receiver and JVC components from the remote supplied with this receiver. Control signals for JVC audio components are preset in the receiver's remote control.

Connecting the COMPU LINK-3 SYNCHRO jacks on the back of the receiver will allow you to use the four functions below.

You can control all components via the REMOTE SENSOR on the receiver using the receiver's remote control. For details, see page 20.

IMPORTANT! Point the remote control directly at the REMOTE SENSOR on the receiver.

When you press play on a component or the remote, the component begins playing immediately. On the other hand, if you select a new source on the receiver or the remote, the component begins playing immediately, but the previously selected source continues playing without sound for a few seconds.

Synchronized recording means the tape deck starts recording as soon as a CD or record begins playing.

To use synchronized recording, follow these steps:

- Step 1** Put a tape in the deck, and a disc in the CD player or on the turntable.
- Step 2** Press the REC and PAUSE button on the tape deck at the same time. This puts the tape deck in the REC/PAUSE state.
- IMPORTANT!** If you do not press the REC button and PAUSE button together, the synchronized recording feature will not operate.
- Step 3** Press the PLAY button on the CD player or turntable.

As soon as the disc starts playing, the tape deck starts recording. When the disc ends, the tape deck switches back to the REC/PAUSE mode, and stops 4 seconds later.

NOTES:

- During synchronized recording, the CD or PHONO button is activated. Other SOURCE buttons are disabled to prevent recording failure.
- If your CD player is operated in the PROGRAM mode, a 4-second mute is recorded between tracks to enable the music scan feature of your tape deck to work.
- If the power of any component is shut off during synchronized recording, the system will not operate properly. In this case, you must start again with step 1.

The CD player and cassette deck are turned on and off along with the receiver. When you turn on the receiver (using either the remote or the receiver's POWER switch), the CD player or cassette deck will turn on automatically, depending which component was previously selected.

NOTE: This function has been added to COMPU LINK-3 (Enhanced COMPU LINK), an upgraded version of COMPU LINK-1. Refer to your JVC component manual for details.

Automatic Power ON/OFF

Using the Remote Control


By connecting the COMPU LINK jack to this receiver, you can operate the audio stereo component with this receiver's remote control. In addition, if your VCR is a JVC product, you can operate it with this receiver's remote control.

NOTE: The VCR does not work with the COMPU LINK remote control system. When you operate the VCR, you must aim the remote control at the VCR instead of the receiver.

Select a source with the SOURCE SELECT buttons on the remote control. Operate that source using the buttons below the SOURCE SELECT buttons.

IMPORTANT! If you choose a source on the receiver directly, the remote control will not operate that source. To operate a source with the remote control, the source must be selected using the remote control.

IMPORTANT! When you select CD, TAPE 1, FM, AM or PHONO on the remote control, the component will turn on and start playing automatically.

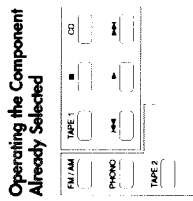

Operating the Component Already Selected

CD Player



After pressing the CD button, you can perform the following operations on the remote:

- ▲ Starts playing
- ▲ Skips to the beginning of the previous track
- ▲ Skips to the beginning of the next track
- Stops playing

Cassette Deck




After pressing the TAPE 1 button, you can perform the following operations on the remote:

- ▲ Starts playback
- Stops operation
- ▲ Fast wind the tape from right to left
- ▲ Fast wind the tape from left to right

Troubleshooting

Operating the Component Not Currently Selected

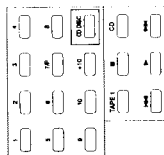


When you want to operate one component while listening to another component (e.g., recording from a CD), use the buttons in the CONTROL section of the remote control. The CONTROL buttons allow you to use the operation buttons for the new component without affecting the component already playing.

NOTE: You can also turn the VCR and TV on and off by pressing the VCR or TV button in the POWER section of the remote control.

IMPORTANT! Aim the remote control at the VCR or TV, not at the receiver.

CD Player-Changer

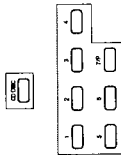

After pressing the CD/DISC button in the CONTROL section of the remote, you can perform the following operations on the remote:

1-6, P Select the number of the disk installed in the CD player-changer. Then continue to operate the CD player as shown on page 20.

Use this chart to help you solve everyday operational problems. If there is any problem you cannot solve, contact your JVC service center.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Display window does not light up	Power cord not plugged in	Plug power cord into AC socket
No sound from speakers	Speaker wires not connected	Check speaker wiring and reconnect if necessary
	SPEAKERS buttons not set correctly	Push the SPEAKERS buttons in or out as desired
	Incorrect SOURCE button was pressed	Select the correct audio source
Sound from one speaker only	Speaker wires not connected properly	Check speaker wiring and reconnect if necessary
	Balance control is set to one extreme	Adjust BALANCE control so that both speakers have sound
Continuous hiss or buzzing during FM reception	Incoming signal is too weak	Adjust antenna
	Station is too far away	Select a new station
	Incorrect antenna used	Check with your dealer to be sure you have the correct antenna
	Antenna not connected properly	Check connections
Occasional cracking noise during FM reception	Ignition noise from automobiles	Move the antenna farther from automobile traffic
Howling during record playing	Turntable too close to speaker	Move speakers away from turntable
Remote control does not work	There is an obstruction in front of the REMOTE SENSOR on the receiver	Remove the obstruction
	Batteries are weak	Replace batteries

Specifications

Amplifier

Output Power

Europe and Australia
 90 watts per channel, min. RMS, both channels driven into 4 ohms at 1 kHz with no more than 0.9% total harmonic distortion (IEC268-3/DIN).
 65 watts per channel, min. RMS, both channels driven into 8 ohms at 1 kHz with no more than 0.9% total harmonic distortion (IEC268-3/DIN).
 55 watts per channel, min. RMS, both channels driven into 8 ohms from 40 Hz to 20 kHz, with no more than 0.08% total harmonic distortion.

Signal-to-Noise Ratio (IHF-A weighted)

80 dB at 85 dBf
 73 dB at 85 dBf

Total Harmonic Distortion (IHF)

0.15 % at 1 kHz
 0.2 % at 1 kHz

Stereo Separation at REC OUT

40 dB at 1 kHz

Capture Ratio (IHF)

1.5 dB (10 mV / 300 ohms)

Alternate Channel Selectivity (IHF)

60 dB (± 400 kHz)

Frequency Response

30 Hz to 15 kHz: (+0.5 dB, -3 dB)

MW Tuner

Tuning Range

522 kHz to 1.629 kHz (MW)
 144 kHz to 288 kHz (LW)

Usable Sensitivity

300 μ V/m
 30 μ V

Signal-to-Noise Ratio

50 dB (100mV/m)

LW Tuner

Usable Sensitivity

600 μ V/m
 100 μ V

General

Power Requirements

AC 230V \sim , 50 Hz

Power Consumption

220 watts (at operation)
 3 watts (at standby mode)

Dimensions (W x H x D)

17 $\frac{3}{16}$ x 5 x 14 $\frac{1}{16}$ inches
 435 x 126 x 356 mm

Mass

19.8 lbs
 9.0 kg

FM Tuner (IHF)

Supplied Accessories

- * Measured by IVC Audio Analysis System.
- ** Measured at 999 kHz (MW), at 245 kHz (LW).
- Remote control unit (RM-SR316RU)..... 1
- Batteries R6P(SUM-3)/AA(15F)..... 2
- AM(MW/LW) loop antenna..... 1
- FM wire antenna (only for Germany)..... 1
- FM feeder antenna (except for Germany)..... 1
- Antenna adaptor (except for Germany)..... 1
- Mains plug (only for the U.K.)..... 1

Designs and specifications subject to change without notice.

Output Power

90 watts per channel, min. RMS, both channels driven into 4 ohms at 1 kHz with no more than 0.9% total harmonic distortion (IEC268-3/DIN).
 65 watts per channel, min. RMS, both channels driven into 8 ohms at 1 kHz with no more than 0.9% total harmonic distortion (IEC268-3/DIN).
 55 watts per channel, min. RMS, both channels driven into 8 ohms from 40 Hz to 20 kHz, with no more than 0.08% total harmonic distortion.

Total Harmonic Distortion (8 ohms, 1 kHz)

0.08%* at 55 watt output

Frequency Response (8 ohms)

PHONO
 CD / TAPE 1 / TAPE 2
 20 Hz to 20 kHz (± 1 dB)
 20 Hz to 20 kHz (± 1 dB)

Signal-to-Noise Ratio (66 IHF / DIN)

PHONO
 CD / TAPE 1 / TAPE 2
 70 dB / 66 dB
 91 dB / 67 dB

RIAA Phono Equalization

± 1 dB (20 Hz to 20 kHz)

Input Sensitivity / Impedance (1 kHz)

PHONO
 CD / TAPE 1 / TAPE 2
 2.5 mV / 47 k ohms
 200 mV / 47 k ohms

Output Level

200 mV

Tone Control Range

BASS (at 100 Hz) ± 8 dB
 TREBLE (at 10 kHz) ± 8 dB

Loudness Control

+4.5 dB (at 100 Hz)
 (Volume control at -30 dB)

Tuning Range

87.5 MHz to 108.0 MHz

Usable Sensitivity

10.8 dBf (0.95 μ V / 75 ohms)

50 dB Quieting Sensitivity

Monaural
 Stereo
 16.3 dBf (1.8 μ V / 75 ohms)
 38.3 dBf (22.5 μ V / 75 ohms)

Description of ICs

■ MN171202J5C (IC401) : System controller

1.Terminal Layout

VDD	1	64	OSC2
K10	2	63	OSC1
K11	3	62	GND
K12	4	61	X2(OPEN)
K13	5	60	X1(GND)
KO0/D0	6	59	T.MUTE
KO1/D1	7	58	AC POWER
KO2/D2	8	57	S.MUTE
KO3/D3	9	56	SURROUND
KO4/D4	10	55	STANDBY
KO5/D5	11	54	SURROUND
D6	12	53	DCS OUT
D7	13	52	DCS IN
D8	14	51	DO
VOL LED	15	50	DI
VOL UP	16	49	CK
VOL DOWN	17	48	CE(PLL)
VPP	18	47	TUNED
S0	19	46	STEREO
S1	20	45	RDS D.START
S2	21	44	RM IN
S3	22	43	RESET
S4	23	42	RDS RESET
S5	24	41	RDS DATA
S6	25	40	RDS CLK
S7	26	39	INH
S8	27	38	DATA
S9	28	37	STB1
S10	29	36	CLK
S11	30	35	
S12	31	34	S15
S13	32	33	S14

2.Key Matrix

	KEY IN 0	KEY IN 1	KEY IN 2	KEY IN 3
KEY OUT 0	POWER	CD	PHONO	TAPE1
KEY OUT 1	PRESET +	TUNING +	FM	AM
KEY OUT 2	PRESET -	TUNING -	FM MODE /MUTE	MEMORY
KEY OUT 3	--	SURROUND	TAPE2 /TV SOUND	--
KEY OUT 4	EON	EON TA/NEWS /INFO	DISPLAY	PTY ON/OFF

3.Pin Function

Pin No.	Symbol	I/O	Function and Operations	Pin No.	Symbol	I/O	Function and Operations
1	VDD	--	Power supply	33	S14	O	Segment control signal
2	K10	I	Key matrix in	34	S15	O	Segment control signal
3	K11	I	Key matrix in	35		--	Not used
4	K12	I	Key matrix in	36	CLK	O	Clock output for IC321
5	K13	I	Key matrix in	37	STB1	O	Strobe signal for IC321
6	D0/KO0	O	Grid control signal (Key matrix out)	38	DATA	O	Data for IC321
7	D1/KO1	O	Grid control signal (Key matrix out)	39	INH	I	Inhibit signal input
8	D2/KO2	O	Grid control signal (Key matrix out)	40	RDS CLK	O	Clock output for IC201
9	D3/KO3	O	Grid control signal (Key matrix out)	41	RDS DATA	O	Strobe signal for IC201
10	D4/KO4	O	Grid control signal (Key matrix out)	42	RDS RESET	O	Reset signal for IC201
11	D5/KO5	O	Grid control signal (Key matrix out)	43	RESET	I	Reset signal input
12	D6	O	Grid control signal	44	RM IN	I	Detection for protector
13	D7	O	Grid control signal	45	RDS D.START	O	D.Start signal for IC201
14	D8	O	Grid control signal	46	STEREO	I	STEREO indication control
15	VOL LED	O	Volume indication control	47	TUNED	I	TUNED indication control
16	VOL UP	O	Volume control signal	48	CE	O	Chip select signal for IC102
17	VOL DOWN	O	Volume control signal	49	CK	O	Clock output for IC102
18	VPP	--	Power supply for FL display	50	DI	I	Data to IC102
19	S0	O	Segment control signal	51	DO	O	Data for IC102
20	S1	O	Segment control signal	52	DCS IN	I	Compulink signal input
21	S2	O	Segment control signal	53	DCS OUT	O	Compulink signal output
22	S3	O	Segment control signal	54	SURROUND	O	SURROUND indicator signal output
23	S4	O	Segment control signal	55	STANDBY	O	STANDBY indicator signal output
24	S5	O	Segment control signal	56	SURROUND	O	SURROUND on signal output
25	S6	O	Segment control signal	57	S.MUTE	O	Muting signal when changing the source
26	S7	O	Segment control signal	58	AC POWER	O	RY001 control signal
27	S8	O	Segment control signal	59	T.MUTE	O	Tuner muting control signal
28	S9	O	Segment control signal	60	X1	--	Connected to GND
29	S10	O	Segment control signal	61	X2	--	Non connection
30	S11	O	Segment control signal	62	GND	--	GND
31	S12	O	Segment control signal	63	OSC1	--	Oscillation terminal
32	S13	O	Segment control signal	64	OSC2	--	Oscillation terminal

■ LA1266A (IC104) : FM AM IF AMP & detector


1. The main function descriptions

- (1) Amplify and detect of FM intermediate frequencies.
- (2) It has local oscillator and mixer for AM, and detect the AM-IF signal.

2. Terminal Layout

FM-in	1	24	AM-OSC out
Bypass	2	23	AM-OSC
Bypass	3	22	V.ref
GND	4	21	AM-in
FM-DET	5	20	AM-Mix
FM-DET	6	19	AM-AGC
V _{CC}	7	18	AM-IF
Tuned	8	17	AM Adj.
FM-AFC	9	16	FM Adj
FM-IF	10	15	AM out
AM-IF	11	14	NAR SM
FM-out	12	13	STRQ

3. Block Diagram

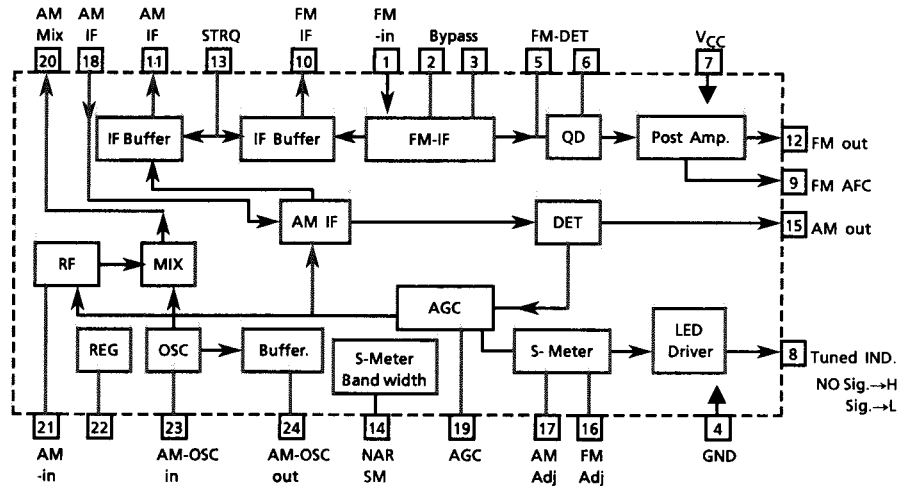

4. Pin Function

Pin No.	Symbol	I/O	Functions and Operations
1	FM in	I	This is an input terminal of FM IF Signal.
2,3	Bypass	--	Bypass of FM IF Amp.
4	GND	--	This is the device ground terminal.
5,6	FM DET	--	FM detect transformer.
7	V _{CC}	--	This is the power supply terminal.
8	Tuned	O	When the set is tuning ,this terminal become "L".
9	FM AFC	O	This is an output terminal of voltage for FM -AFC.
10	FM IF out	O	When the signal of IF REQ of IC102(LC7218) applied to pin17, the signal of FM IF does output.
11	AM IF out	O	When the signal of IF REQ of IC102(LC7218) applied to pin17, the signal of AM IF does output.
12	FM out	O	FM detection output.
13	STRQ	I	The IF-signals come out from pin10 (FM-IF) or pin11 (AM-IF) while this terminal going to "High".
14	NAR SM	--	Control the Band-width of signal meter.
15	AM out	O	AM detection output.
16	FM Adj	--	For adjust the stop level (or mute level) of FM.
17	AM Adj	--	For adjust the stop level (or mute level) of AM.
18	AM-IF	I	Input of AM IF Signal.
19	AM-AGC	I	This is an AGC voltage Input terminal for AM.
20	AM-MIX	O	This is an output terminal for AM mixer.
21	AM-IN	I	This is an input terminal for AM RF Signal.
22	V.REF	--	Register value between pin9 and pin22 desides the frequency width of the input signal.
23	AM-OSC	--	This is a terminal of AM Local oscillation circuit.
24	AM-OSC out	O	AM Local Oscillation Signal output.

■ LA3401 (IC105) : FM MPX Detector


1. The main function descriptions

- (1) Detect the FM Multiplex Signal (Stereo signal).
- (2) When receiving FM Stereo Signal, it outputs the signal for indicator.
- (3) AM / FM Audio Amplifier.

2. Terminal Layout

AM in	1	VCC	22
FM in	2	VCO	21
Pilot	3	LPF	20
Sepa	4	LPF	19
L out	5	Pilot in	18
L in	6	LPF	17
R in	7	LPF	16
R out	8	Mute in	15
Mute	9	Mute Cont	14
FM/AM	10	STEREO	13
Mute out	11	GND	12

3. Top View & Block Diagram

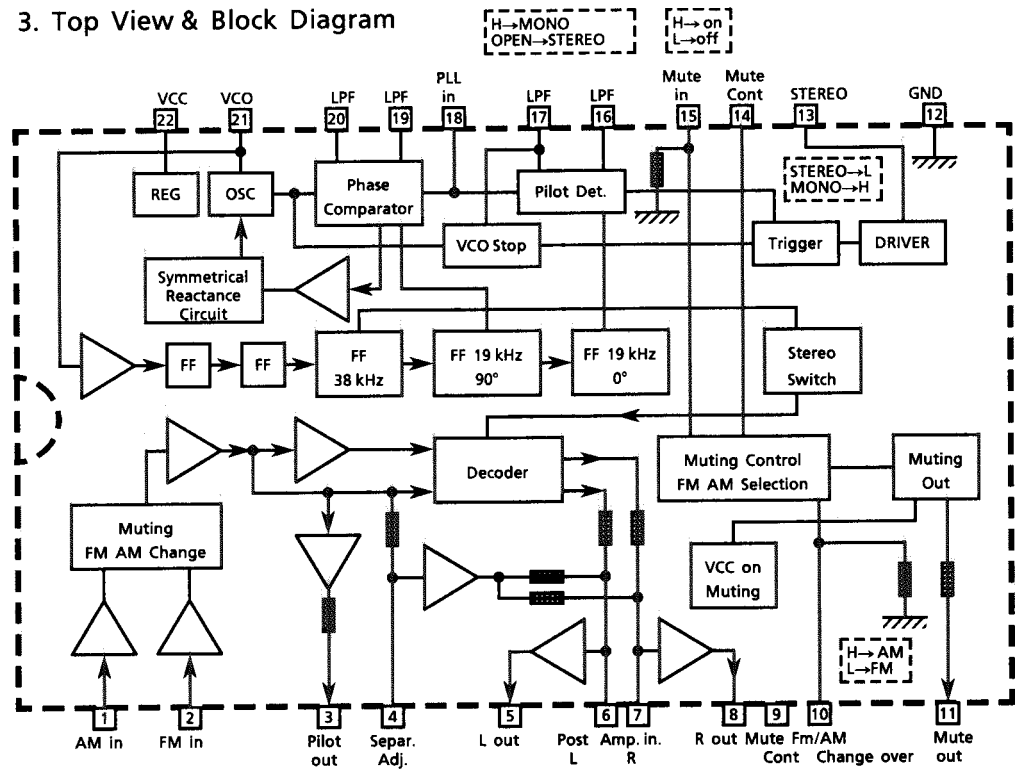

4. Pin Function


Pin No.	Symbol	I/O	Functions and Operations
1	AM in	I	This is an input terminal for AM detection signal.
2	FM in	I	This is an input terminal for FM detection signal.
3	Pilot out	O	Output of MPX pilot signal (Connect to Pin18).
4	Sepa. Adj.	--	Separation adjustment.
5	L. out	O	Left channel signal output.
6	L	O	Reversal output of Pin5.
7	R	O	Reversal output of Pin8.
8	R out	O	Right channel signal output
9	Mute Cont	--	Not used.
10	FM / AM	I	Change over the FM / AM input. "H" : AM, "L" : FM
11	Mute out	---	Not used.
12	GND	--	Ground terminal.
13	Stereo	O	Stereo indicator output. Stereo : "L", Mono : "H"
14	Mute Cont	--	The mute time is controlled by the connected capacitor when changing over the FM / AM .
15	Mute in	I	Mute signal input. "H" : Mute on, "L" : Mute off.
16	LPF	--	Low pass filter of pilot detector.
17	LPF	--	While this terminal goes to "H", the VCO stop.
18	Pilot in	I	Pilot signal input.
19	LPF	--	Low-pass filter of PLL.
20	LPF	--	Low-pass filter of PLL.
21	VCO	I	Voltage controlled oscillator terminal.
22	VCC	--	Power supply.

■ LC7218 (IC102) : PLL Synthesizer


1. The main function descriptions

- (1) It makes the local oscillation frequency by the control data from IC401.
- (2) Decode the control signal and transmit the signal for receiving conditions.
- (3) For the best tuning, count the internal-frequency and transmit the data to IC401.

2. Terminal Layout

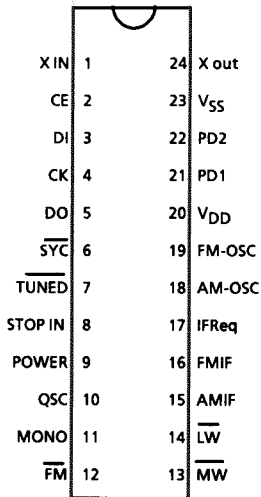

3. Block Diagram

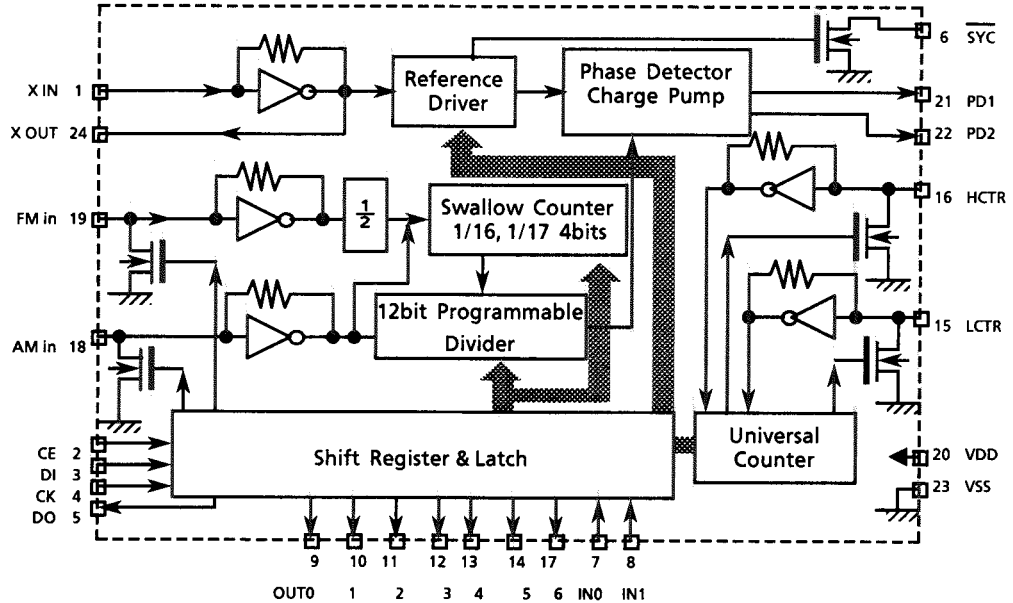

4. Pin Function


Pin No.	Symbol	I/O	Functions and Operations
1,24	X in, X out	I/O	Crystal oscillator (7.2MHz).
2	CE	I	Fix the chip enable to "H" when inputting (DI) and outputting (DO) the serial data.
3	DI	I	Receive the control data from the controller (IC401).
4	CK	I	This clock is used to synchronize data when transmitting the data of DI and DO.
5	DO	O	Transmit the data from LC7218 to the controller which is synchronized with CK.
6	SYNC	—	Not used.
7	Tuned	I	Receive the tuned signal from IC104 (LA1266A).
8	Stop in	—	Connect to GND.
9	POWER	—	Not used.
10	QSC	—	Not used.
11	MONO	O	It is "H" on FM-monaural, "L" on FM-Stereo.
12	FM	O	It is "L" on FM mode.
13	MW	O	It is "L" on MW mode.
14	LW	O	It is "L" on LW mode.
15	AM-IF	I	Universal counter input for AM-IF from IC104 (LA1266A).
16	FM-IF	I	Universal counter input for FM-IF from IC104(LA1266A).
17	IF REQ	O	Output the "IF-signal request" to IC104 when the pin-7 (tuned in) goes to "H".
18	AM OSC	I	Input the local oscillator signal of AM.
19	FM OSC	I	Input the local oscillator signal of FM.
20	V _{DD}	—	This is a terminal of power supply.
21	PD1	O	PLL charge pump output : When the local oscillator signal frequency is higher than the reference frequency high level signals will output. When it is lower than the reference frequency, low level signals will output. When it is same as reference frequency signals, it will be floating.
22	PD2	—	Not used.
23	V _{SS}	—	Connect to GND.

■ TC9164N (IC321) : Analog Switch

1. Functions

These analog switches are controlled by 14 bit serial data from computer for selecting the source.


2. Terminal Layout & Block diagram

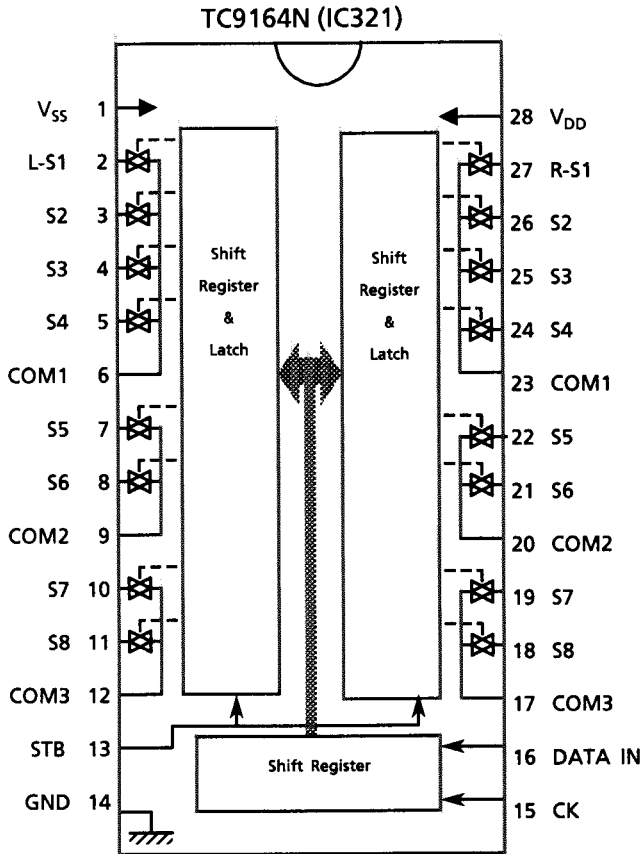

3. First 10bits are used to source select. Last 4bits are chip select. The switches (S1~S8) are connected to common terminals (COM1~COM3) according to the DATA from computer.

	Switch Select bit								CH1	CH2	Chip Select bit			
	S1	S2	S3	S4	S5	S6	S7	S8	(R-S1~S8)	(L-S1~S8)	S11	S12	S13	S14
TC9164N	The switch is ON when the data is "1".										0	1	0	0

■ LB1639 (IC361) : Motor Driver

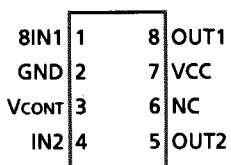


IN 1	IN 2	OUT 1	OUT 2	MOTOR
H	L	H	L	CLOCKWISE
L	H	L	H	COUNTER-CLOCKWISE
H	H	OFF	OFF	WAITING
L	L	OFF	OFF	WAITING

■ SAA6579 (IC202) : Radio data system demodulator

1. Terminal Layout

QUAL	1	16	RDCL
RDDA	2	15	T57
Vref	3	14	OSCO
MUX	4	13	OSCI
VDDA	5	12	VDD
GND	6	11	GND
CIN	7	10	GND
SCOUT	8	9	GND



2. Block Diagram

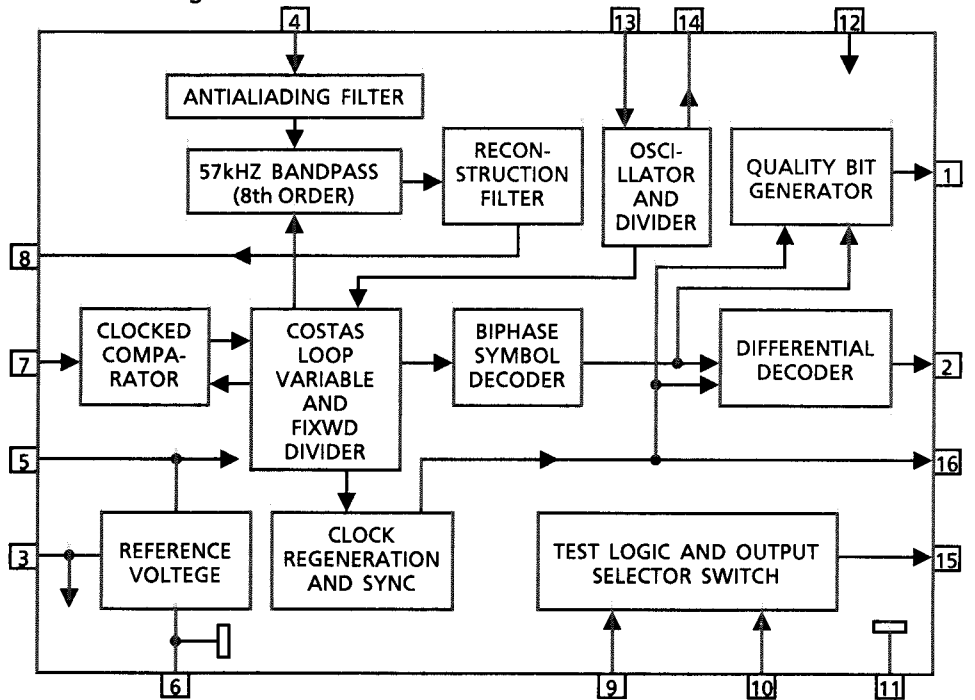

3. Pin Function


Pin No.	Symbol	I/O	Functions & Operations	Pin No.	Symbol	I/O	Function & Operations
1	QUAL	—	Non connection	8	SCOUT	O	Subcarrier output of reconstruction filter
2	RDDA	O	RDS data output	9~11	GND	—	Ground for digital part (0V)
3	Vref	O	Reference voltage output	12	VDD	—	+ 5V supply voltage for digital part
4	MUX	I	Multiplex signal input	13	OSCI	I	Oscillator input
5	VDDA	—	+ 5V supply voltage for analog part	14	OSCO	O	Oscillator output
6	GND	—	Ground for analog part (0V)	15	T57	—	Non connection
7	CIN	I	Subcarrier input to comparator	16	RDCL	O	RDS clock output

■ TA7317P (IC901) : PROTECTOR

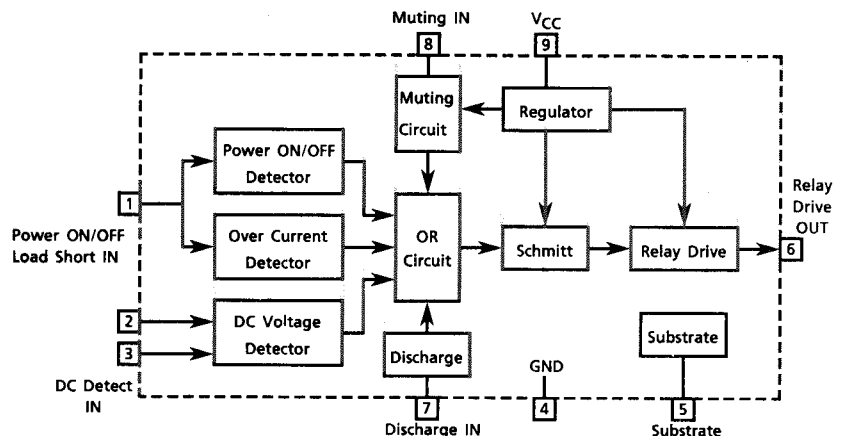


■ LC7073 (IC201) : Radio Data System

1. Terminal Layout

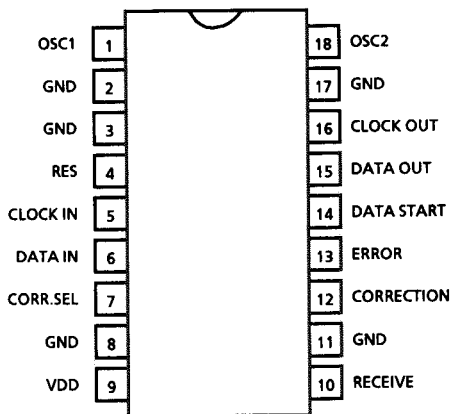


2. Block Diagram

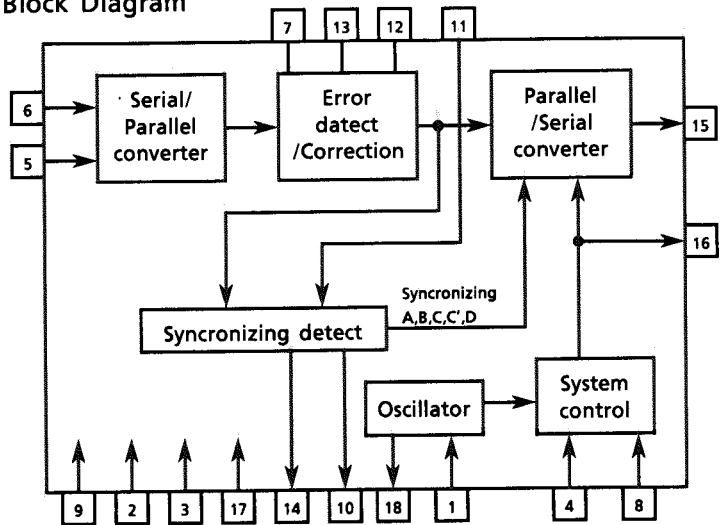


3. Pin Function

Pin No.	Symbol	I/O	Functions & Operations	Pin No.	Symbol	I/O	Functions & Operations
1,18	OSC1,OSC2	I/O	Oscillation terminal	10	RECEIVE	—	Non connection
2,3,8,11,17	GND	—	GND	12	CORRECTION	—	Non connection
4	RES	I	Reset input	13	ERRDR	—	Non connection
5	CLOCK IN	I	RDS clock input	14	DATA START	O	Data start signal for block data to output serial data.
6	DATA IN	I	RDS data input	15	DATA OUT	O	Serial data output
7	CORR.SEL	I	Non connection	16	CLOCK OUT	O	Data output of serial data output
9	VDD	—	Power supply				

■ PST600E (IC403) : Reset IC

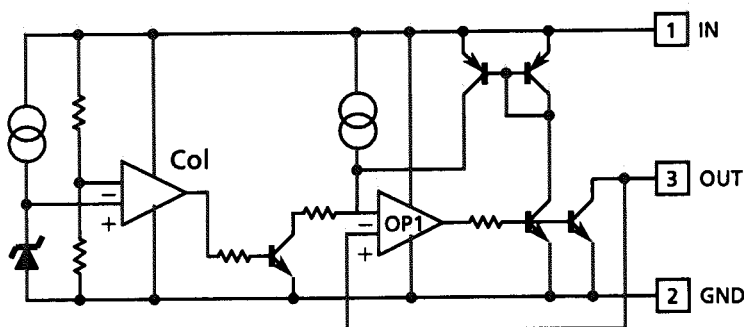




■ NJH32H380A (IC402) : Remocon Module IC

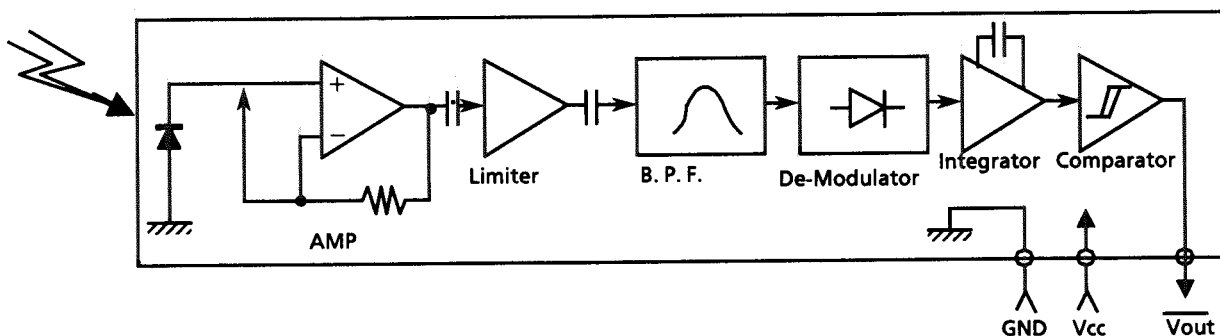

Internal Connection of the Display

■ ELU0001-183: FL TUBE

(1) Grid Layout

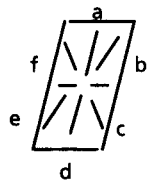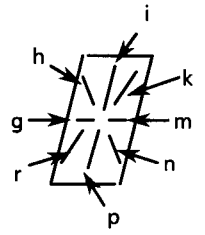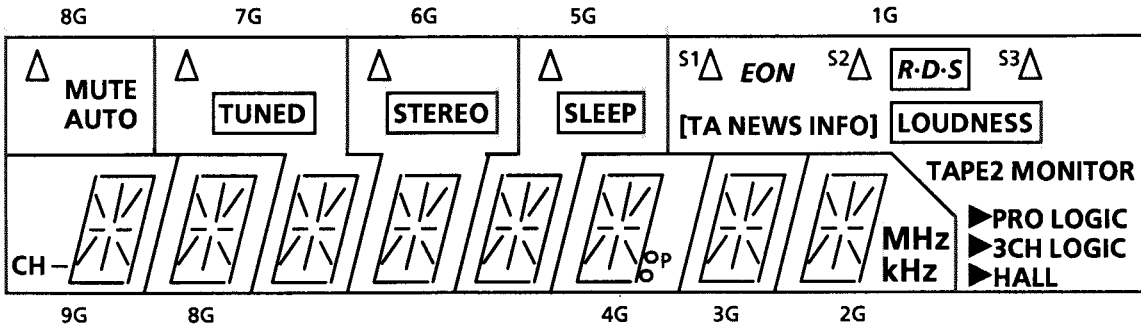

(2) Pin Connections

TERMINAL NO.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
ELECTRODE	F1	F1	NP	NP	1G	2G	3G	4G	5G	6G	7G	8G	9G	NC	NC	NC	NC	NC	NC	P1
TERMINAL NO.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	
ELECTRODE	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12	P13	P14	P15	NP	NP	F2	F2		

[9G ~ 2G]

Notes F:Filament G:Grid P:Anode NP:No Pin NP:No connection

(3) Anode Connections

	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	a	a	a	a	a	a	a	a	S1
P2	b	b	b	b	b	b	b	b	S2
P3	j	j	j	j	j	j	j	j	S3
P4	k	k	k	k	k	k	k	k	--
P5	h	h	h	h	h	h	h	h	TAPE2 MONITOR
P6	f	f	f	f	f	f	f	f	LOUDNESS
P7	m	m	m	m	m	m	m	m	--
P8	g	g	g	g	g	g	g	g	--
P9	c	c	c	c	c	c	c	c	▶PRO LOGIC
P10	n	n	n	n	n	n	n	n	▶3CH LOGIC
P11	r	r	r	r	r	r	r	r	▶HALL
P12	p	p	p	p	p	p	p	p	R-D-S
P13	e	e	e	e	e	e	e	e	TA
P14	d	d	d	d	d	d	d	d	NEWS
P15	CH-	MUTE AUTO	TUNED	STEREO	SLEEP	Op	--	MHz	INFO
P16	--	Δ	Δ	Δ	Δ	--	--	kHZ	EON []

Disassembly Procedures

(1) Removing the Top Cover

1. Remove the 4 screws fastening both sides of the Top Cover, and the 2 screws fastening the rear sides.
2. Remove the Top Cover.

(2) Removing the Front Panel

1. Remove the 3 screws (A) fastening top of the Front Panel, and the 3 screws (E) fastening bottom of the Front Panel.
2. Disconnect the connectors. (P101,P702,PA807,P805)
3. Remove the master volume knob.
4. Remove the nut fastening the master volume.
5. Remove the Front Panel.

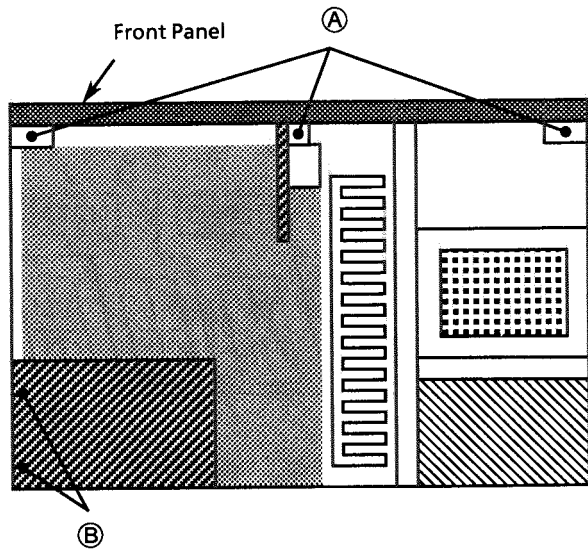


Fig 1. Top View

(3) Removing the Bottom Cover

1. Remove the 17 screws (E) .
2. Remove the Bottom Cover.

(4) Removing the Tuner P.C. Board

1. Disconnect the connectors. (P101,P103)
2. Remove the 6 screws (B), (C) and (D), and take it out.

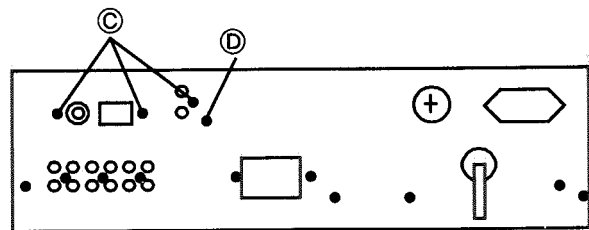


Fig 2. Rear View

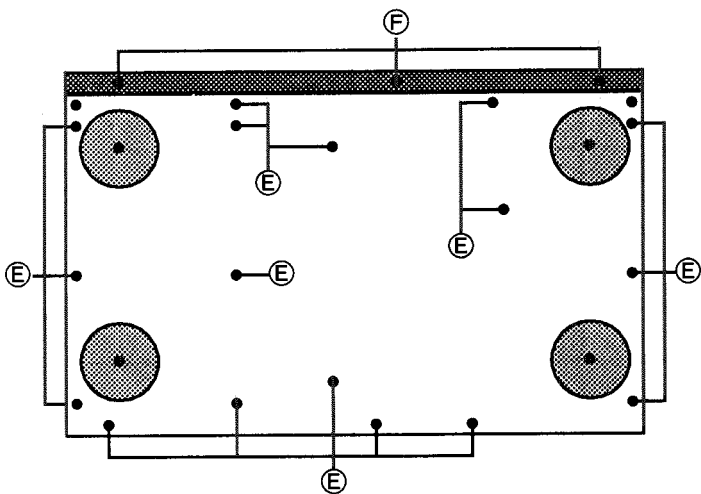


Fig 3. Bottom Cover

Adjustment Procedures ■ Tuner section

Tuning range

Area	Range		
	LW (kHz)	MW (kHz)	FM (MHz)
East Europe	144~288	522~1629	87.5~108
Continental Europe, the U.K			
the U.S.A., Canada			
Australia			
Universal type(AM Channel space 9kHz)			
Universal type(AM Channel space 10kHz)			

(1) Tuning voltage

Confirm the voltages in the table below at TP101.

FM Tuning voltage (Unit : V)

Area	Frequency			
	64.0MHz	74.0MHz	87.5MHz	108MHz
East Europe	—	—	—	—
the U.K. , Continental Europe,	—	—	1.6±1.0 (V)	8.0±1.0 (V)

AM Tuning voltage (Unit : V)

Area	Frequency (MW)							Frequency (LW)		
	522KHz	530KHz	531KHz	1600KHz	1602KHz	1629KHz	1710KHz	144kHz	290kHz	353kHz
East Europe	—	—	—	—	—	—	—	—	—	—
the U.K. , Continental Europe	0.9±0.2	—	—	—	—	7.5±0.8	—	0.8±0.2	—	7.7±0.6
U.S.A. , Canada	—	0.9±0.2	—	—	—	—	8.0±0.8	—	—	—
Australia	0.9±0.2	—	—	—	—	7.5±0.8	—	—	—	—
Universal (Chanel space9kHz)	—	—	0.9±0.2	—	7.2±0.7	—	—	—	—	—
Universal (Chanel space10kHz)	—	0.9±0.2	—	7.2±0.7	—	—	—	—	—	—

(2) FM center meter

Adjust T105 as follows after the frequency counter correctly receives a broadcast.

Adjust T105 (detector coil) so that the voltage at TP102 becomes $0 \pm 1.5\text{mV}$.

(T106 is used to minimize the distortion of output on the production line.)

(3) FM separation

Receive a stereo signal.

Adjust VR 167 so that channel separation becomes maximum.

(4) LW Tracking

Adjust T102 (antenna coil) to obtain the best receiving sensitivity on 164kHz.


Adjust TC106 (antenna trimmer) to obtain the best receiving sensitivity on 288kHz.

(5) MW Tracking

Adjust T101 (antenna coil) to obtain the best receiving sensitivity on 600kHz or 603kHz.

Adjust TC106 (antenna trimmer) to obtain the best receiving sensitivity on 1400kHz or 1404kHz.

■ Power Amplifier section

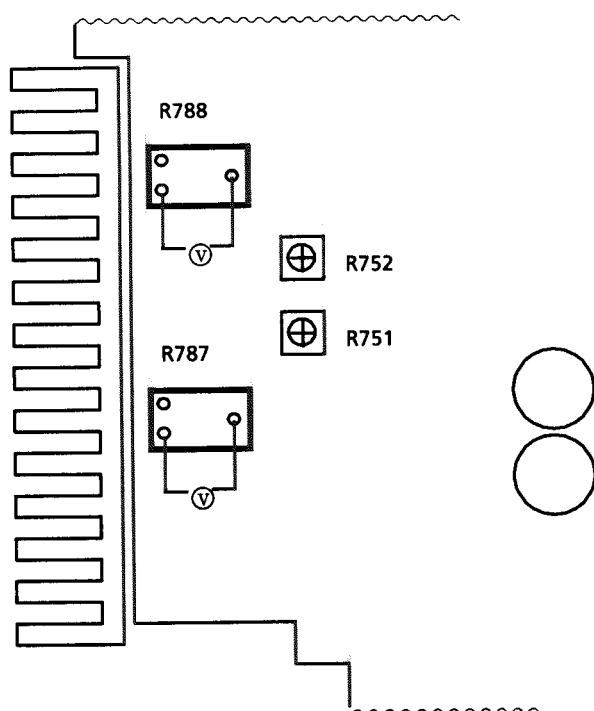


Idling Current


- (1) Set the volume control to minimum during this adjustment.
- (2) Turn R751 and R752 fully counterclockwise before the power is switch on.
- (3) Always start from cold, and allow 5 minutes to warm up before adjustment.
If the heatsink is already warm from previous use the correct adjustment can not be made.
- (4) Connect a DC voltmeter to R787 resistor's leads for left channel, or to R788 for right channel.
- (5) Adjust R751 for left channel, or R752 for right channel, so that the DC voltmeter becomes 2mV ~ 3mV.

Block Diagram


■ Audio Section

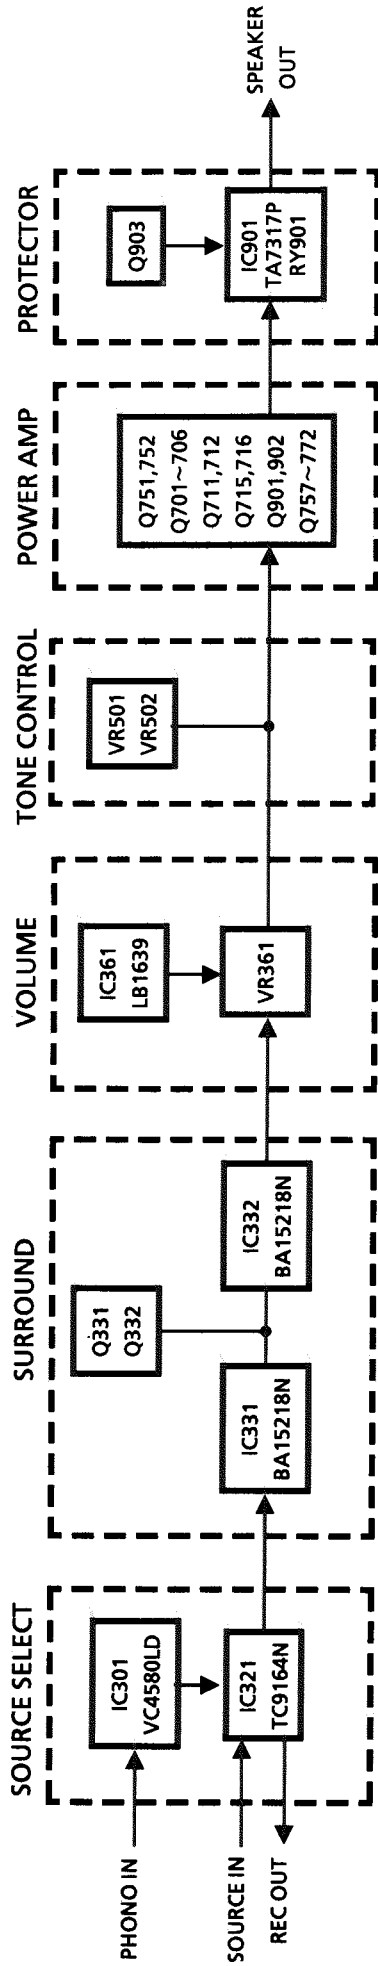


■ Control Section

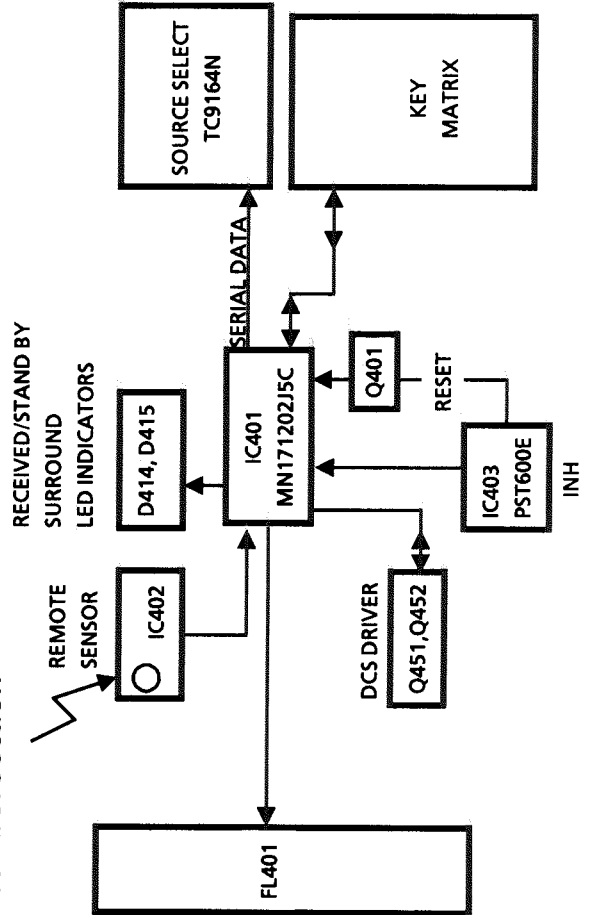

■ Power Supply Section

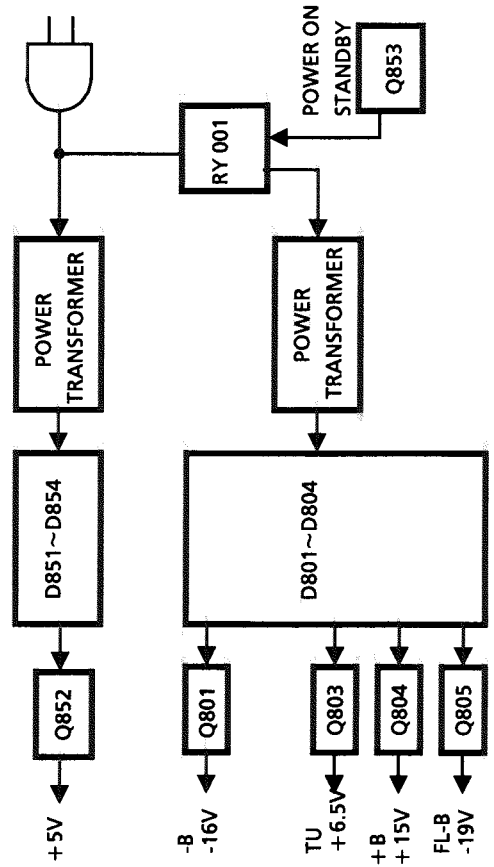

■ Tuner Section

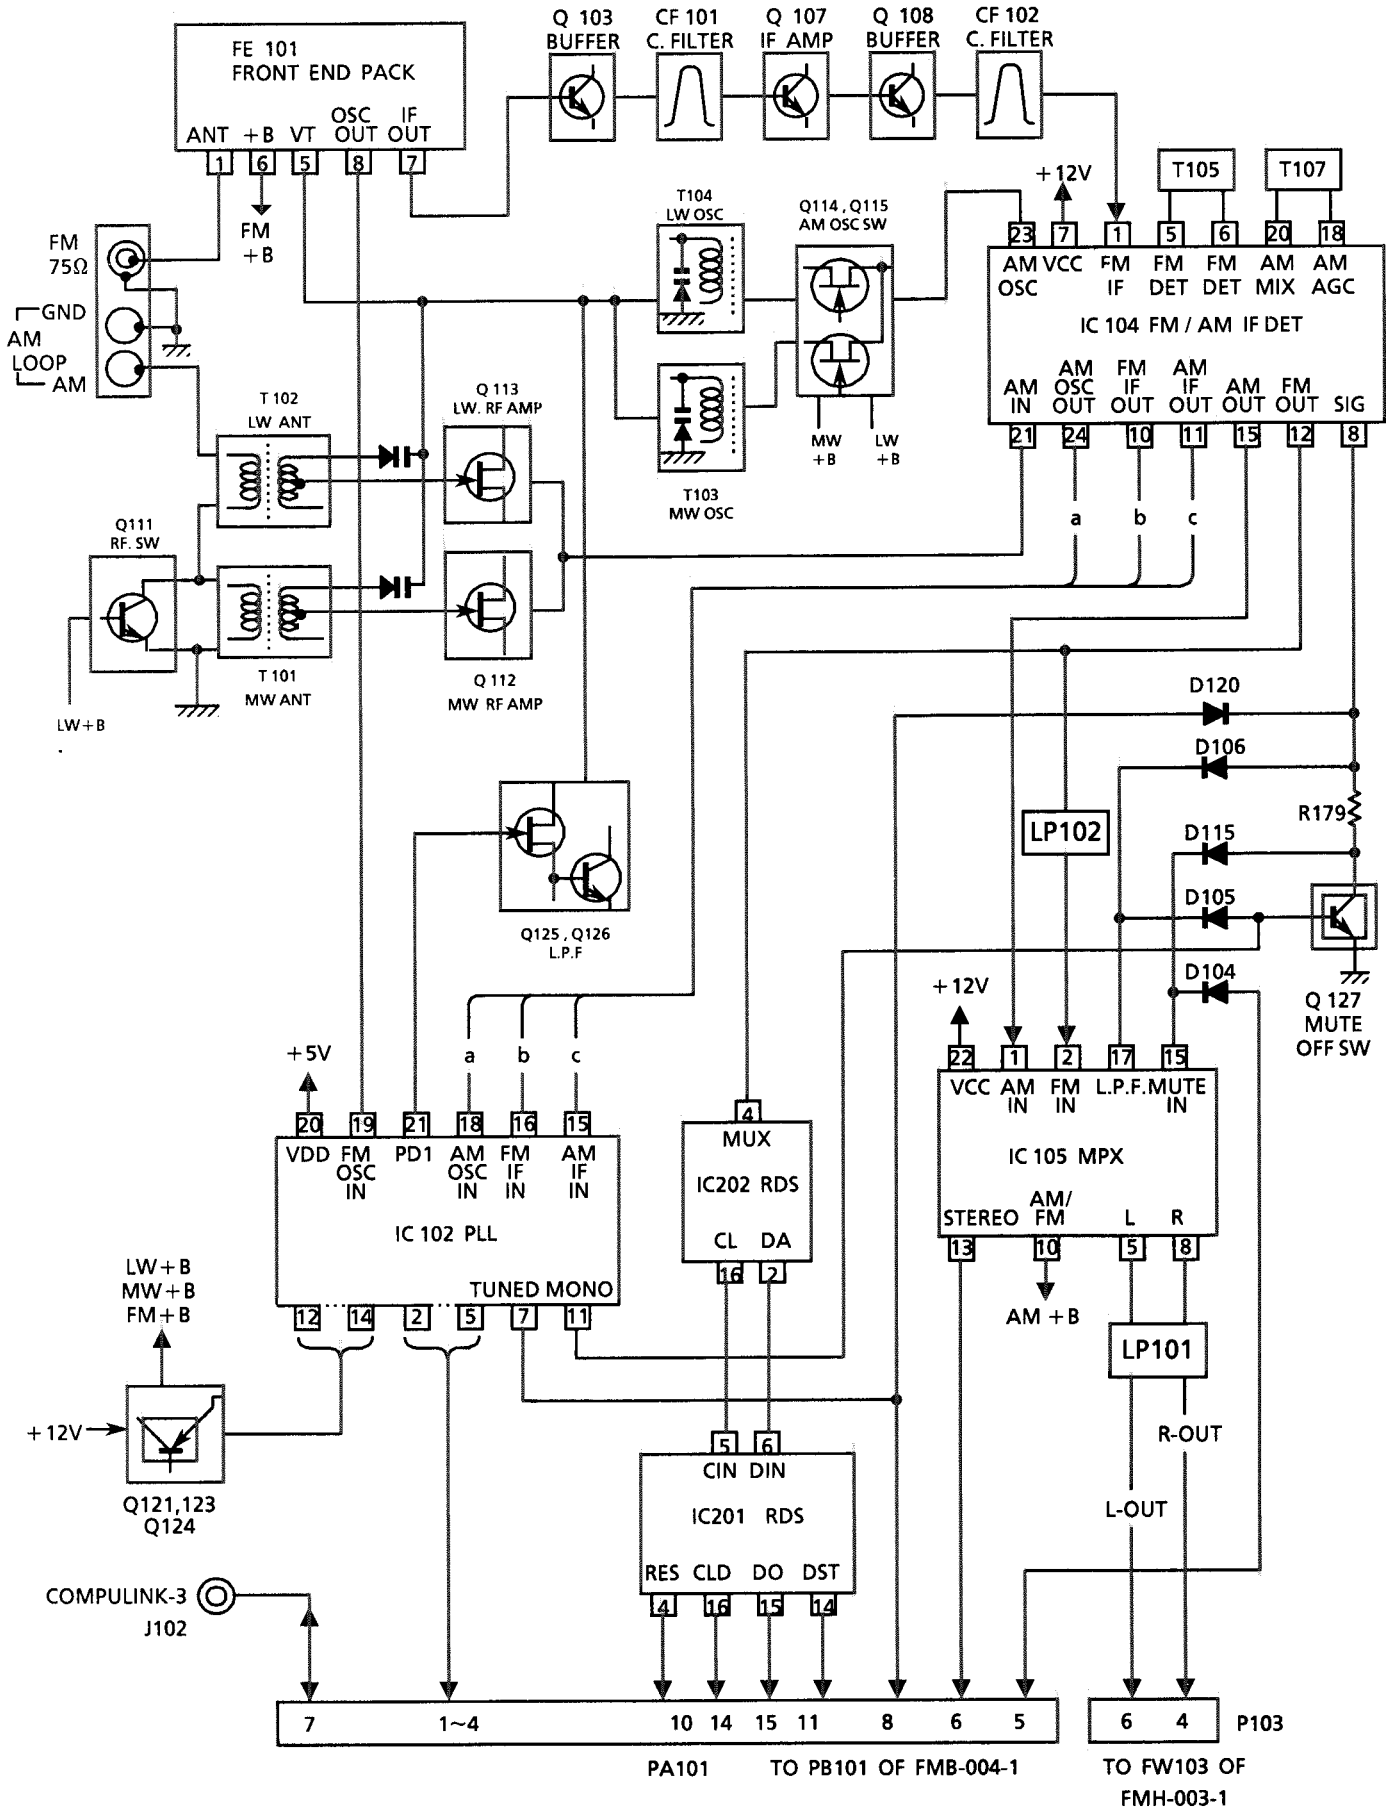


—MEMO—

—MEMO—


P-S.D(1)A.S-a

P-S.D(1)A.S-b

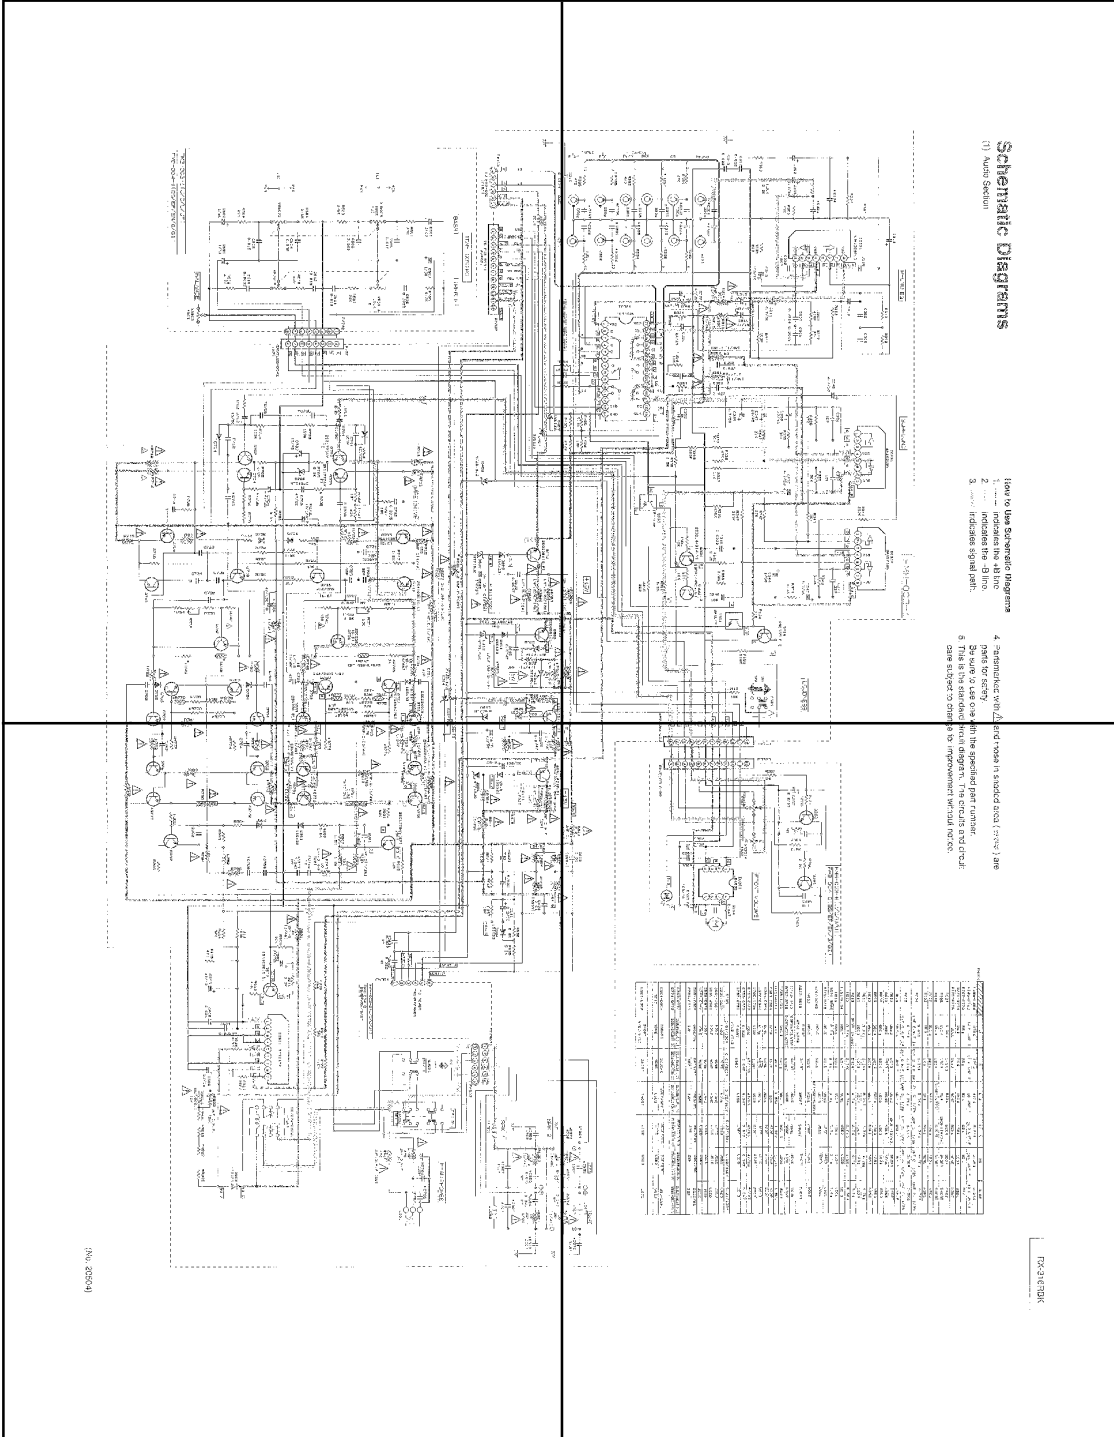

P-S.D(1)A.S-c

P-S.D(1)A.S-d

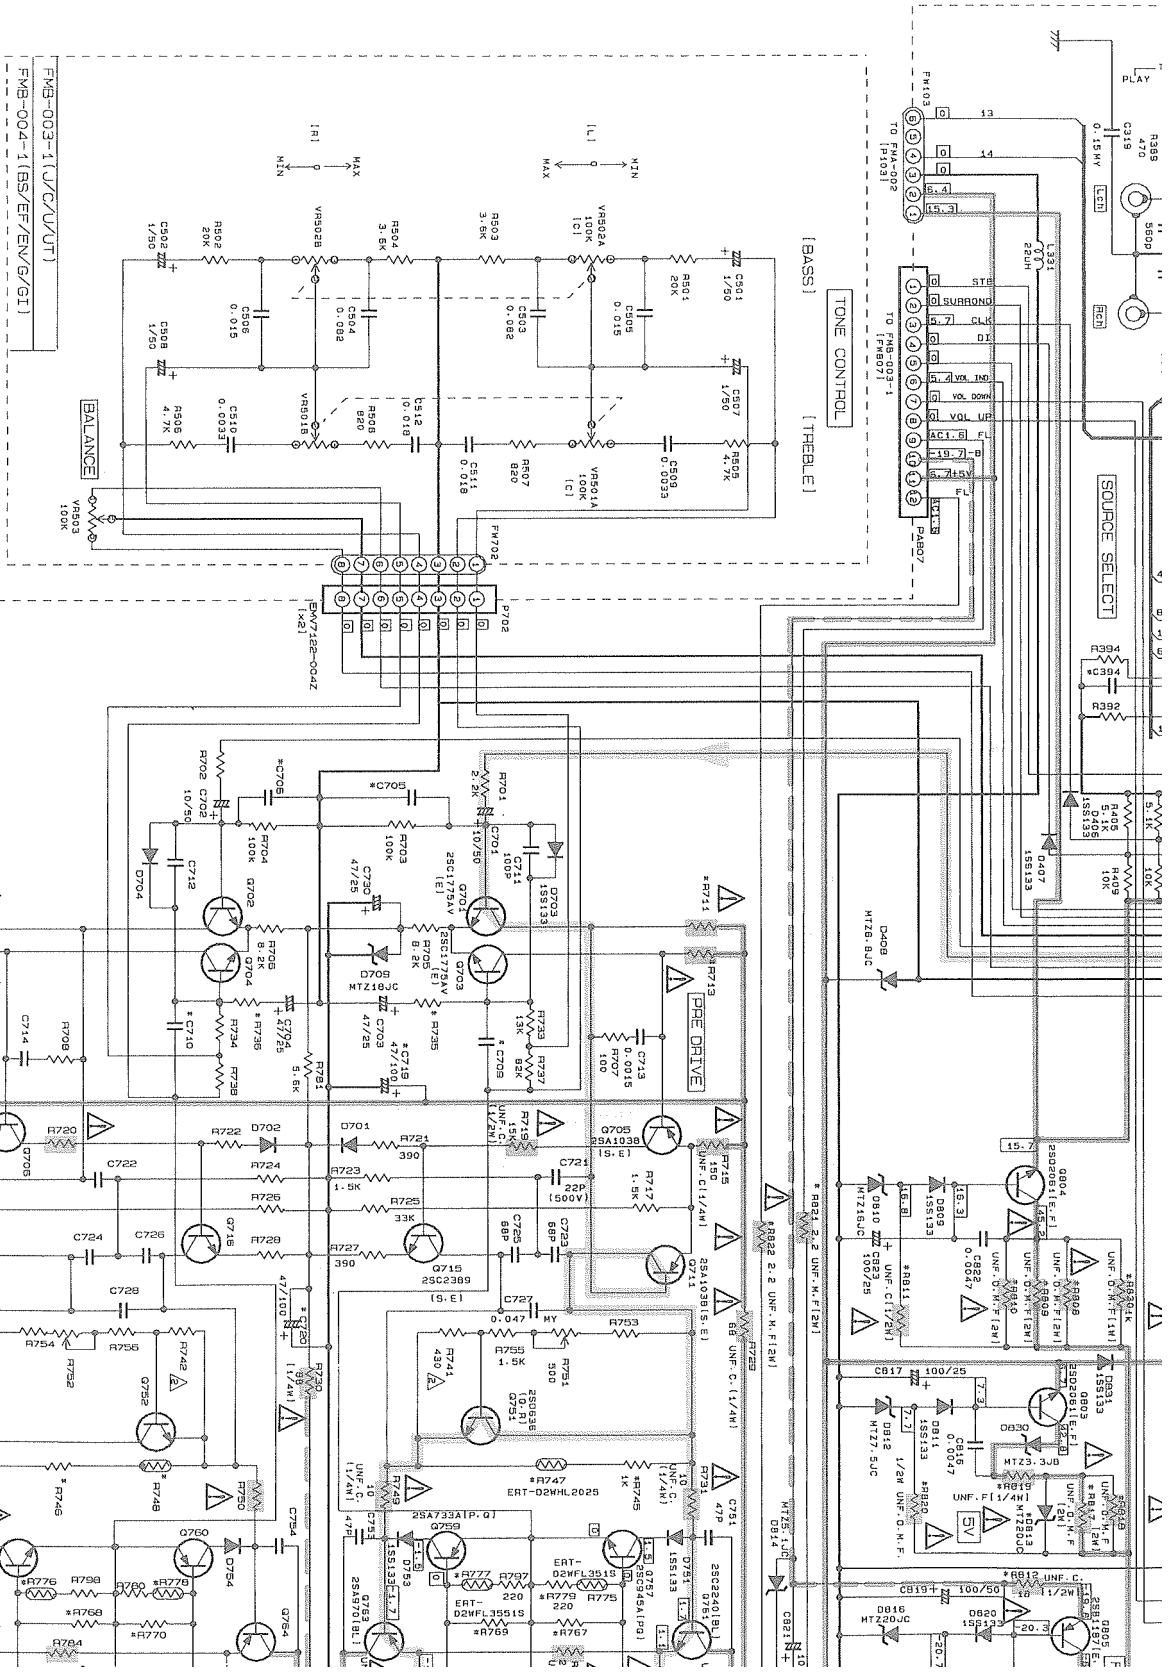


FMB-003-1 (V/C/V/UT)

FMB-004-1 (BS/EF/EV/G/G1)


Schematic Diagrams

(1) Audio Section

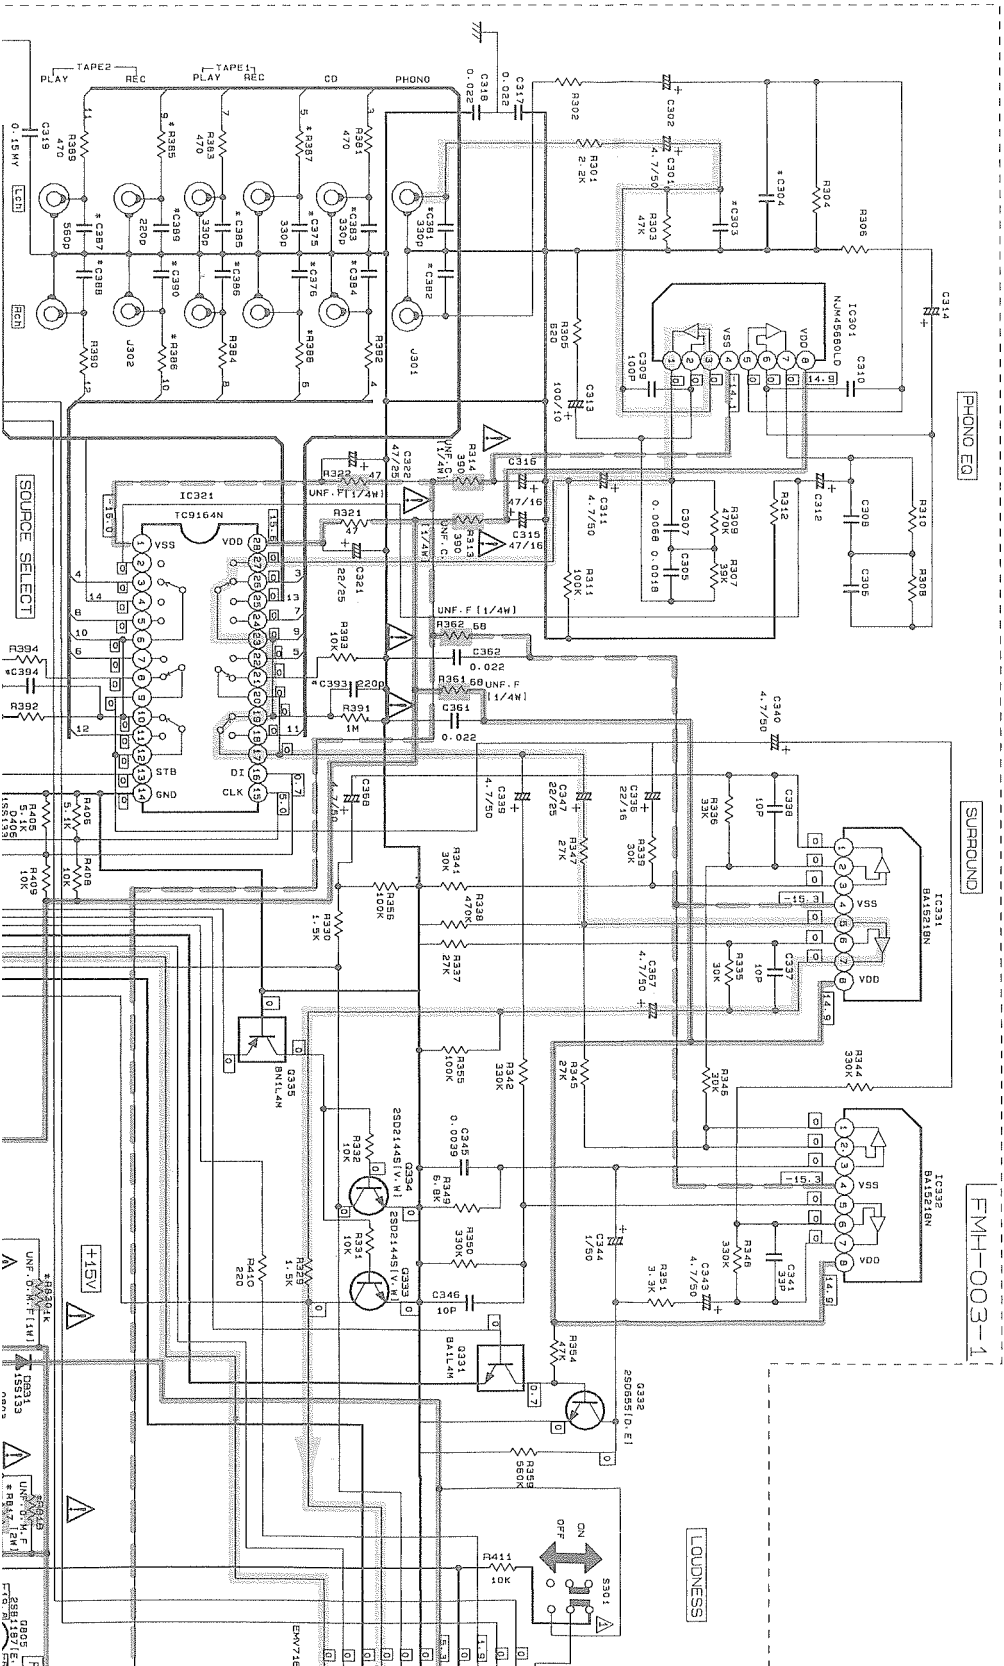


How to Use Schematic Diagrams

1. indicates the +B line
2. indicates the -B line.
3. indicates signal path.
4. Partmarked with parts for safety.
5. This is the standard circuit care subject to change.

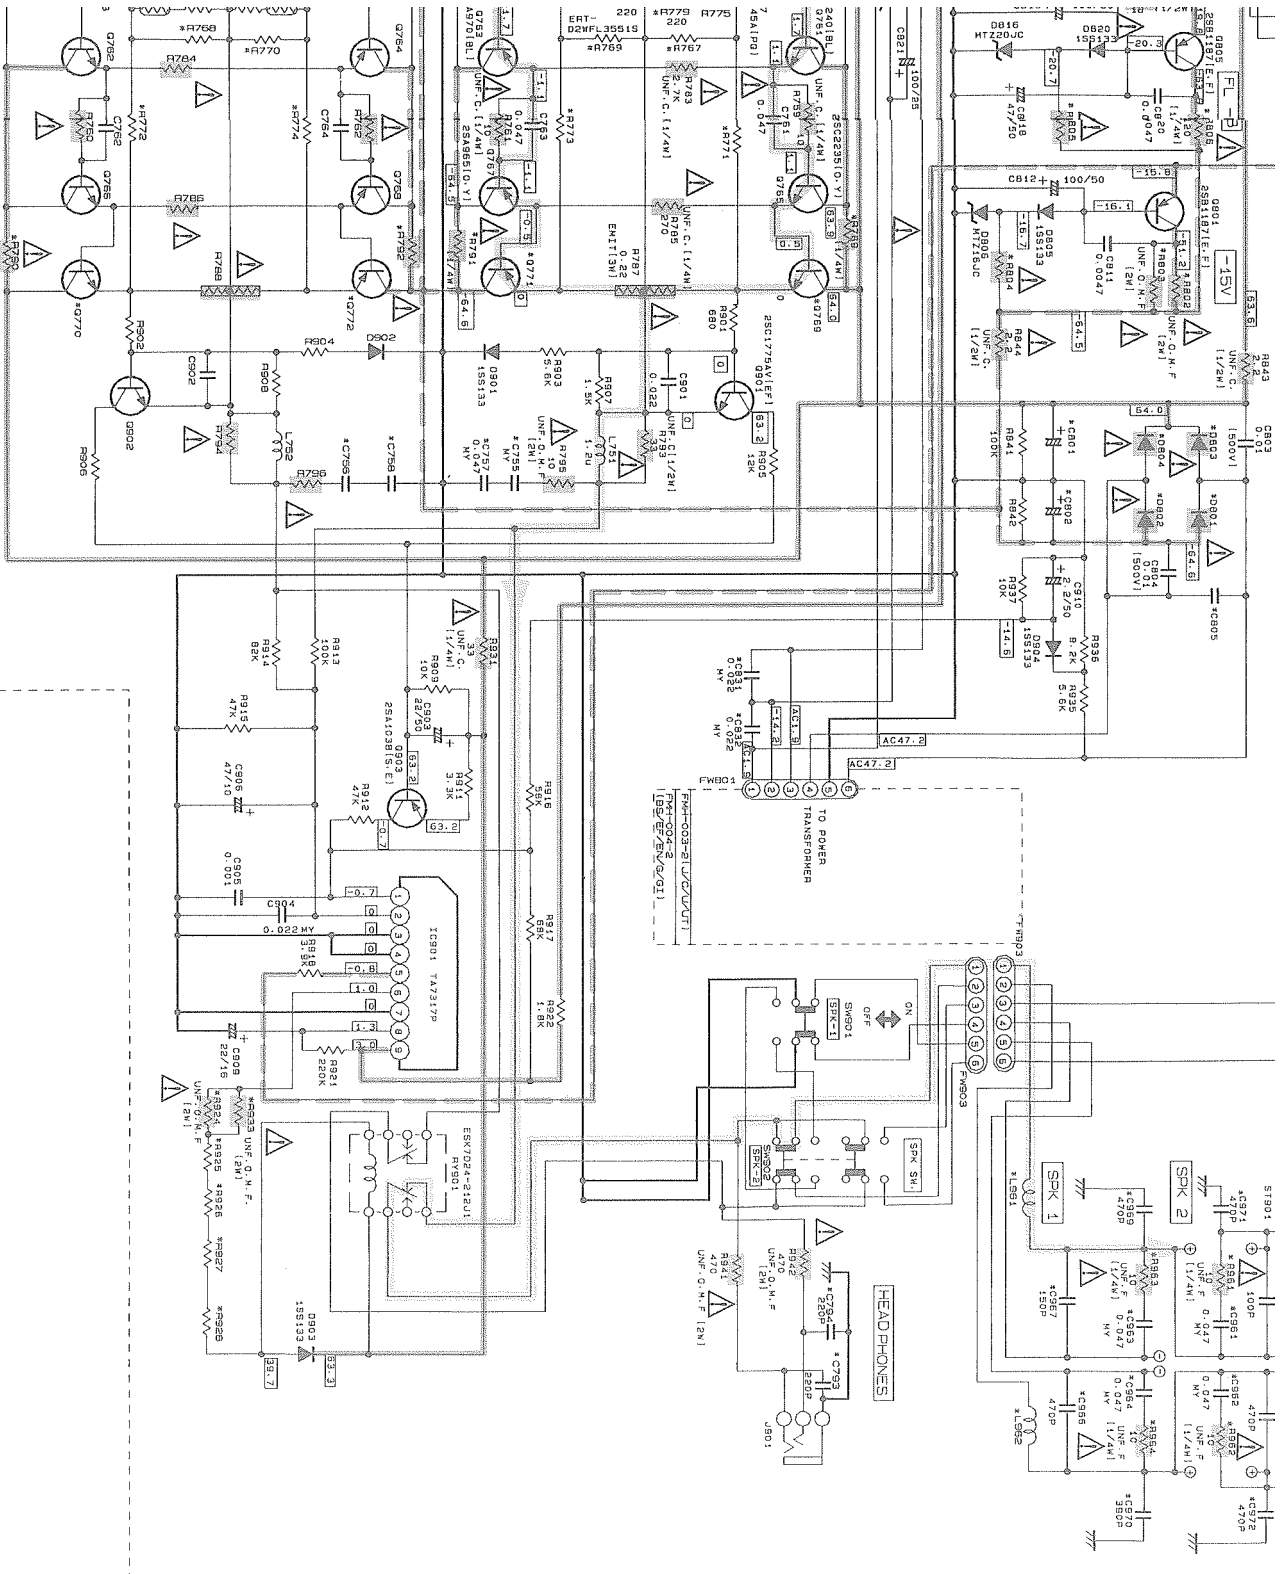


P-(2)S.C.S-a

P-(2)S.C.S-b

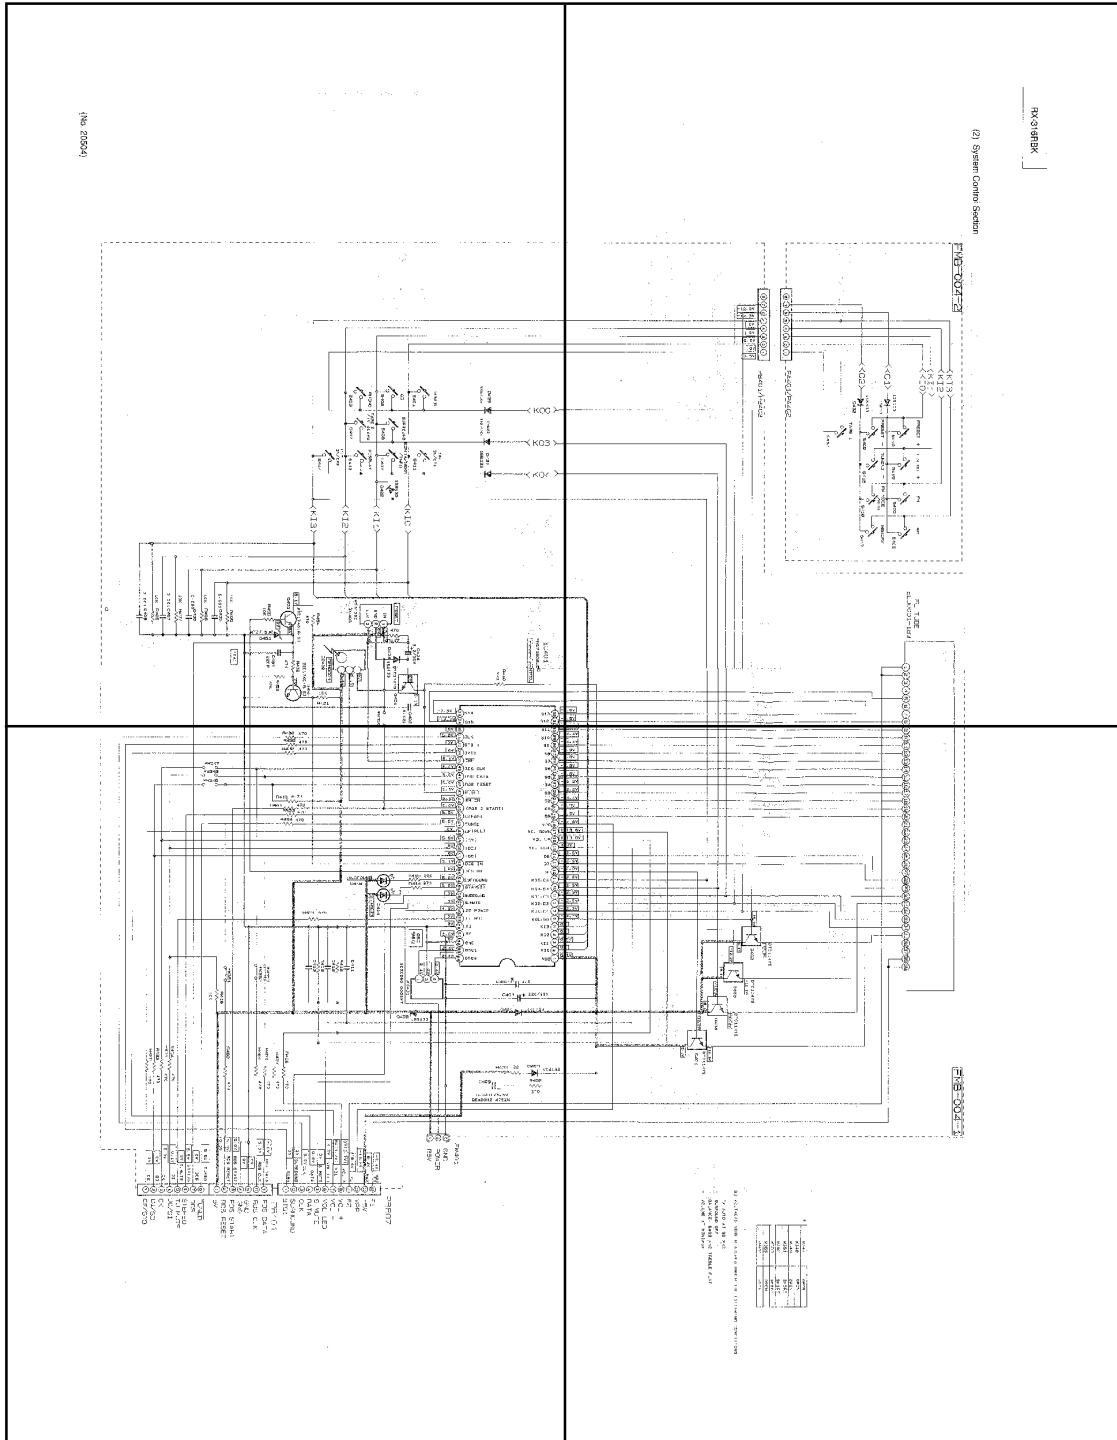



P-(2)S.C.S-c


P-(2)S.C.S-d

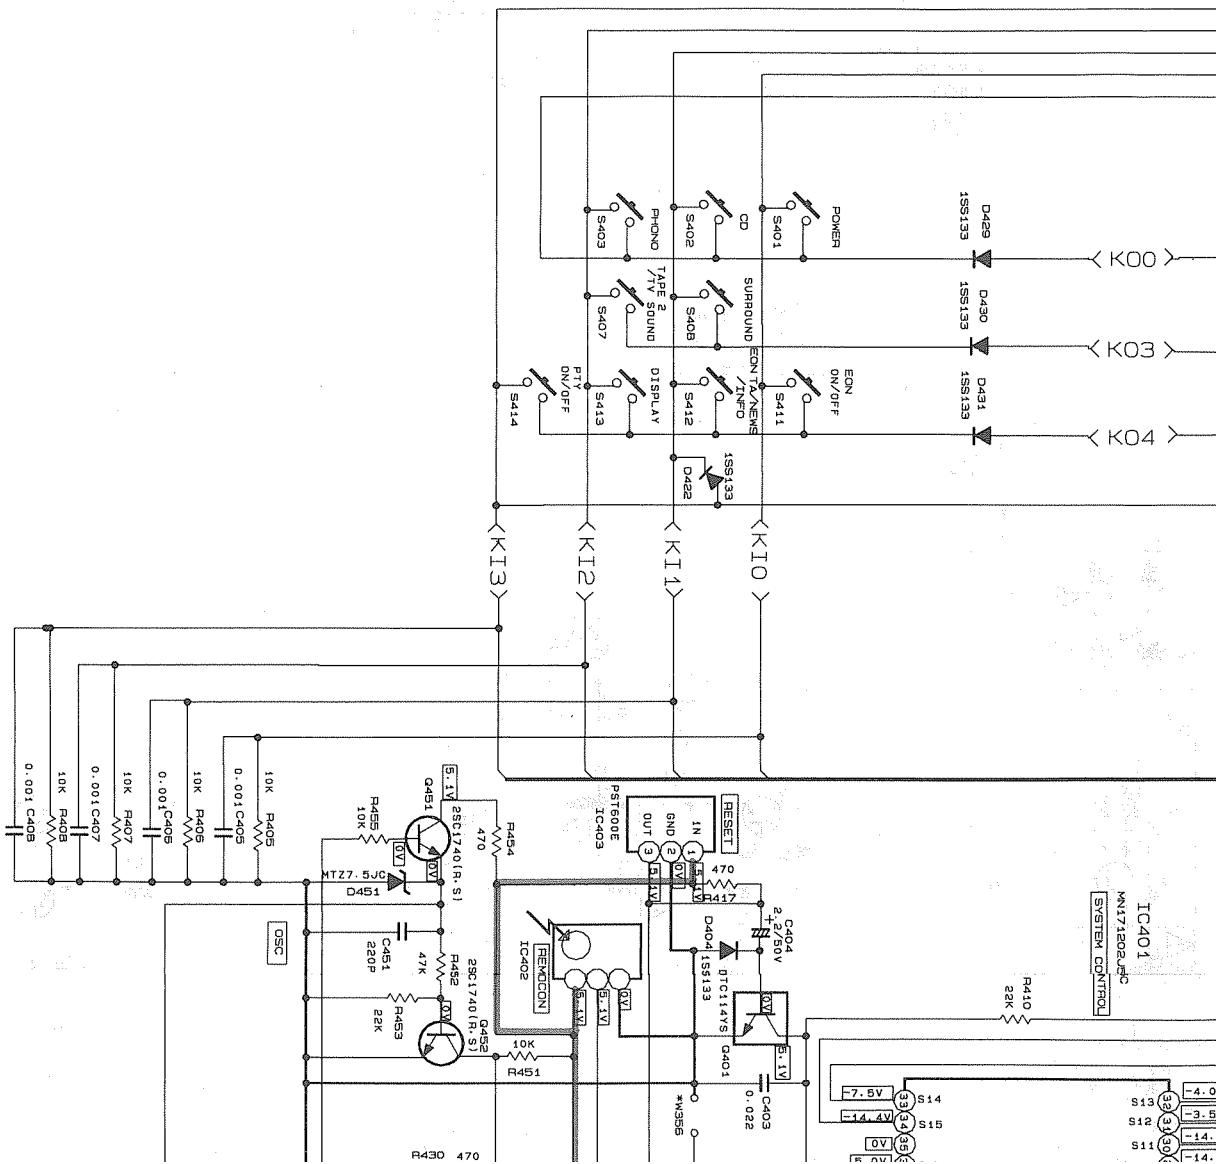

(2) System Control Section

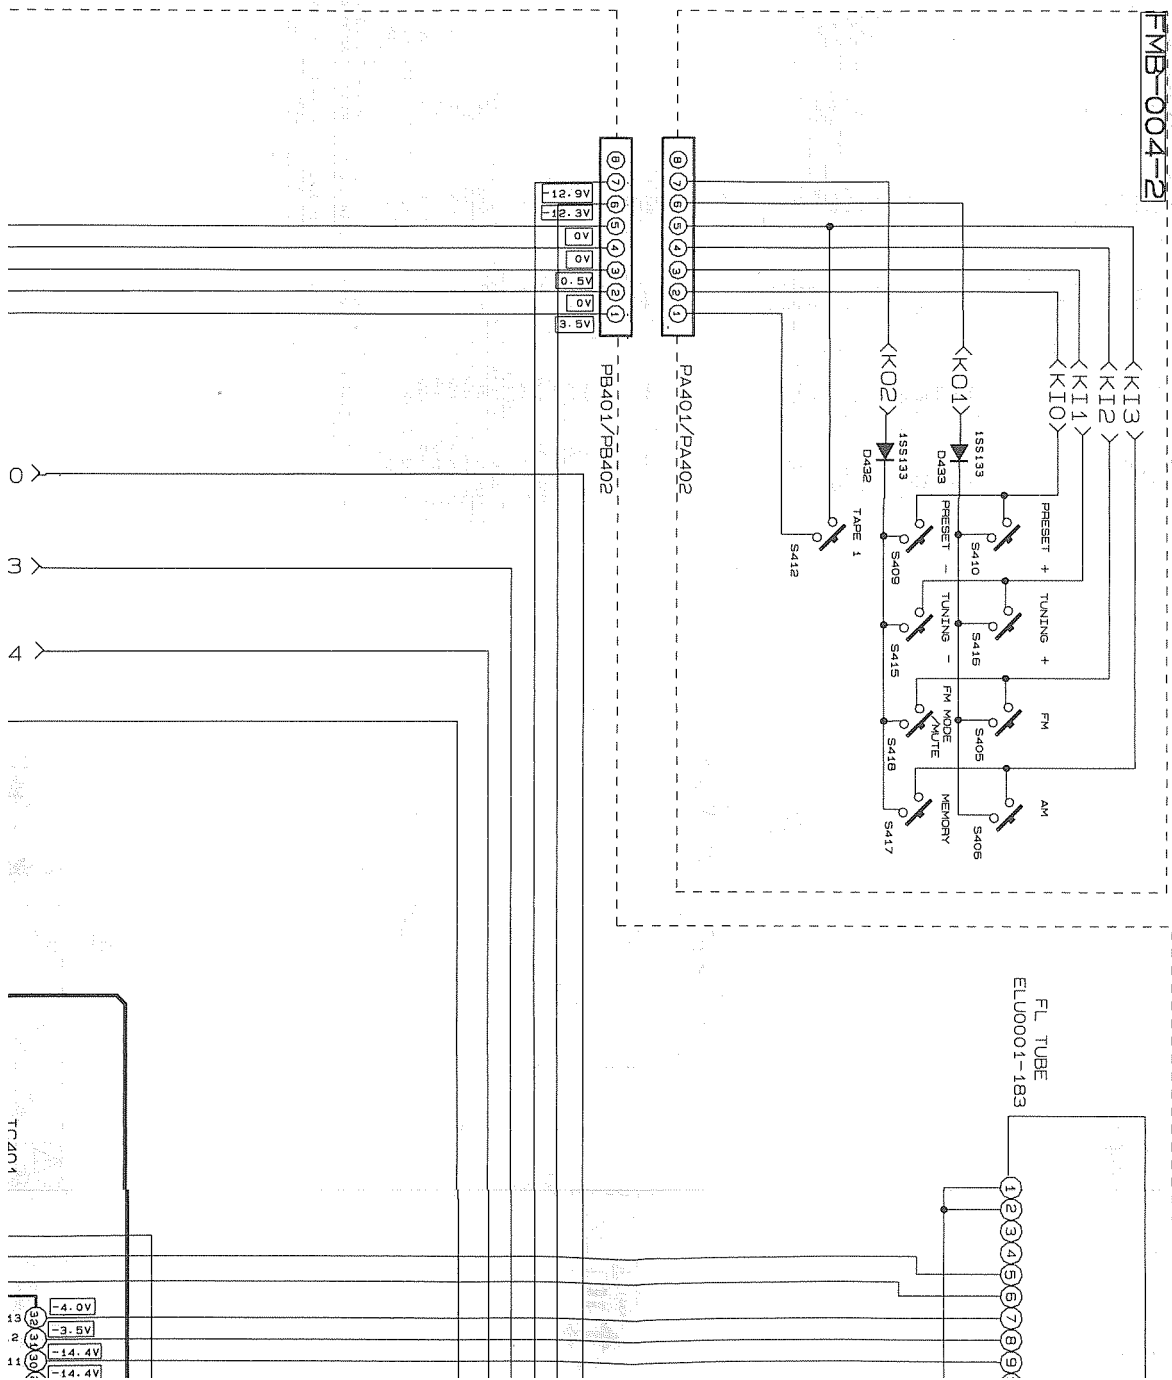

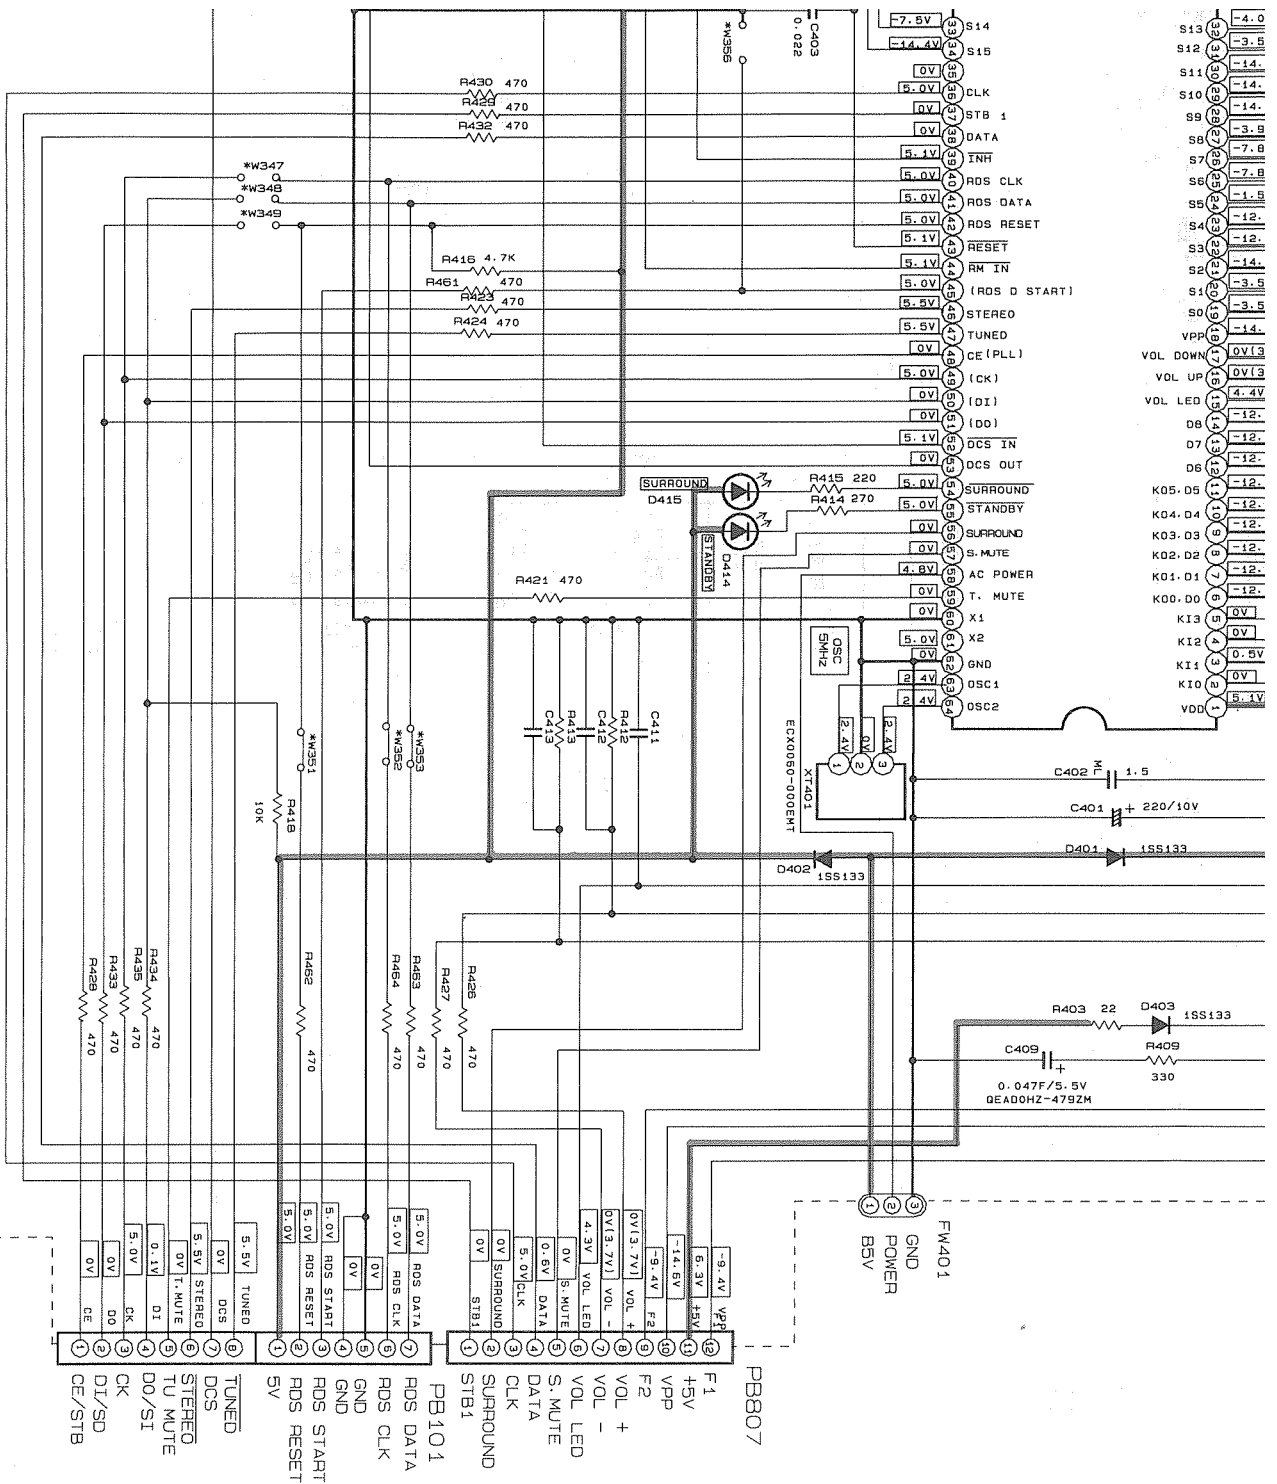

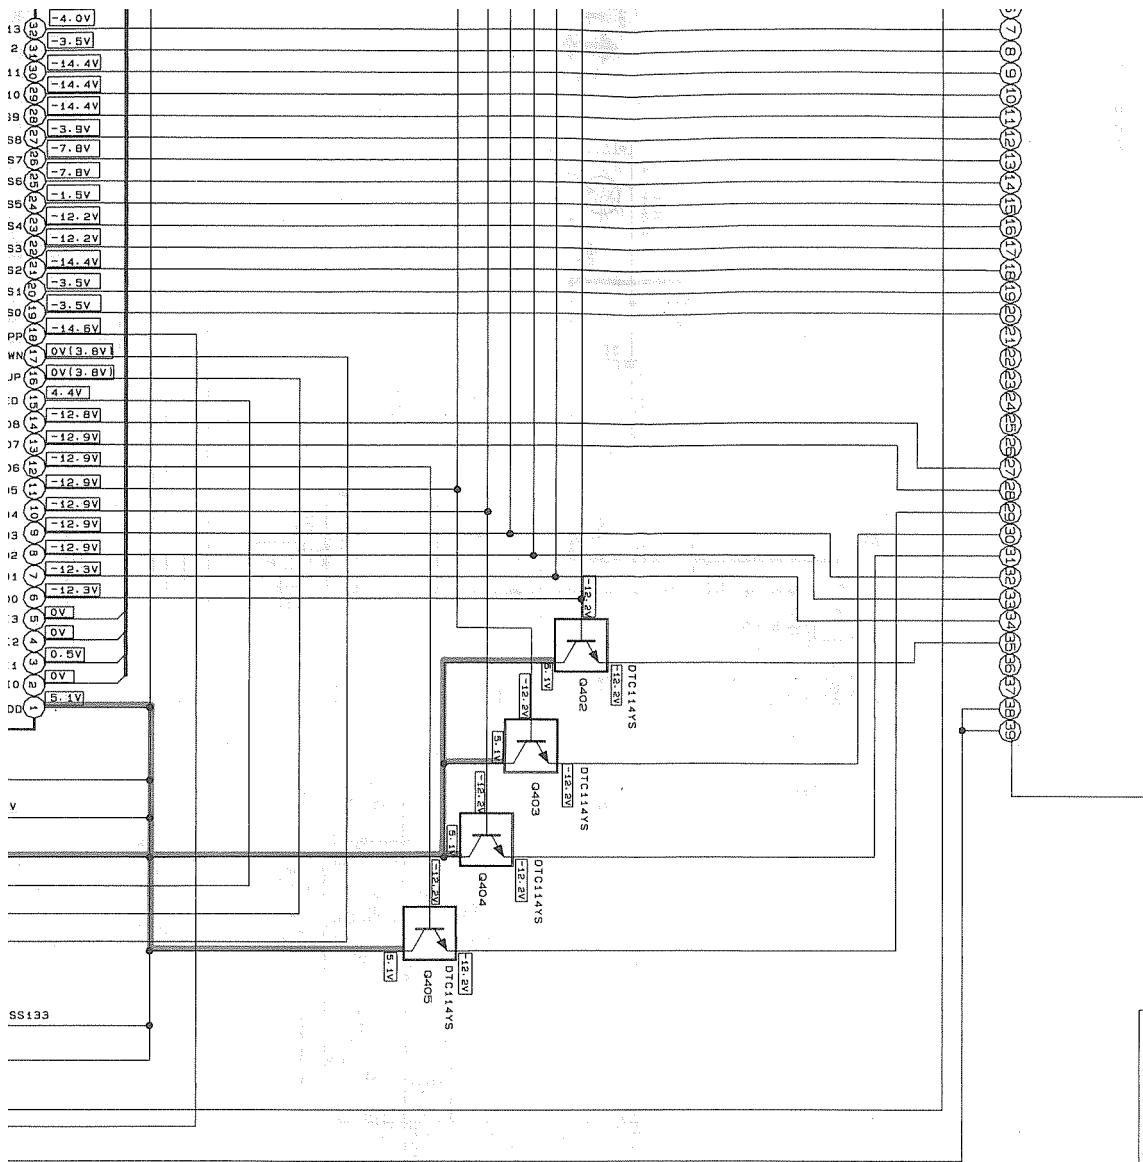

FMB-004-1


*	
W347	OPEN
W348	OPEN
W349	OPEN
W351	SHORT
W352	SHORT
W353	SHORT
W355	OPEN
Q422	USED

DC VOLTAGES WERE MEASURED UNDER THE FOLLOWING CONDITIONS:

- FM AUTO AT 98 MHZ
- SURROUND OFF
- BALANCE, BASS AND TREBLE FLAT
- VOLUME AT MINIMUM


P-(3)T.S-a

P-(3)T.S-b

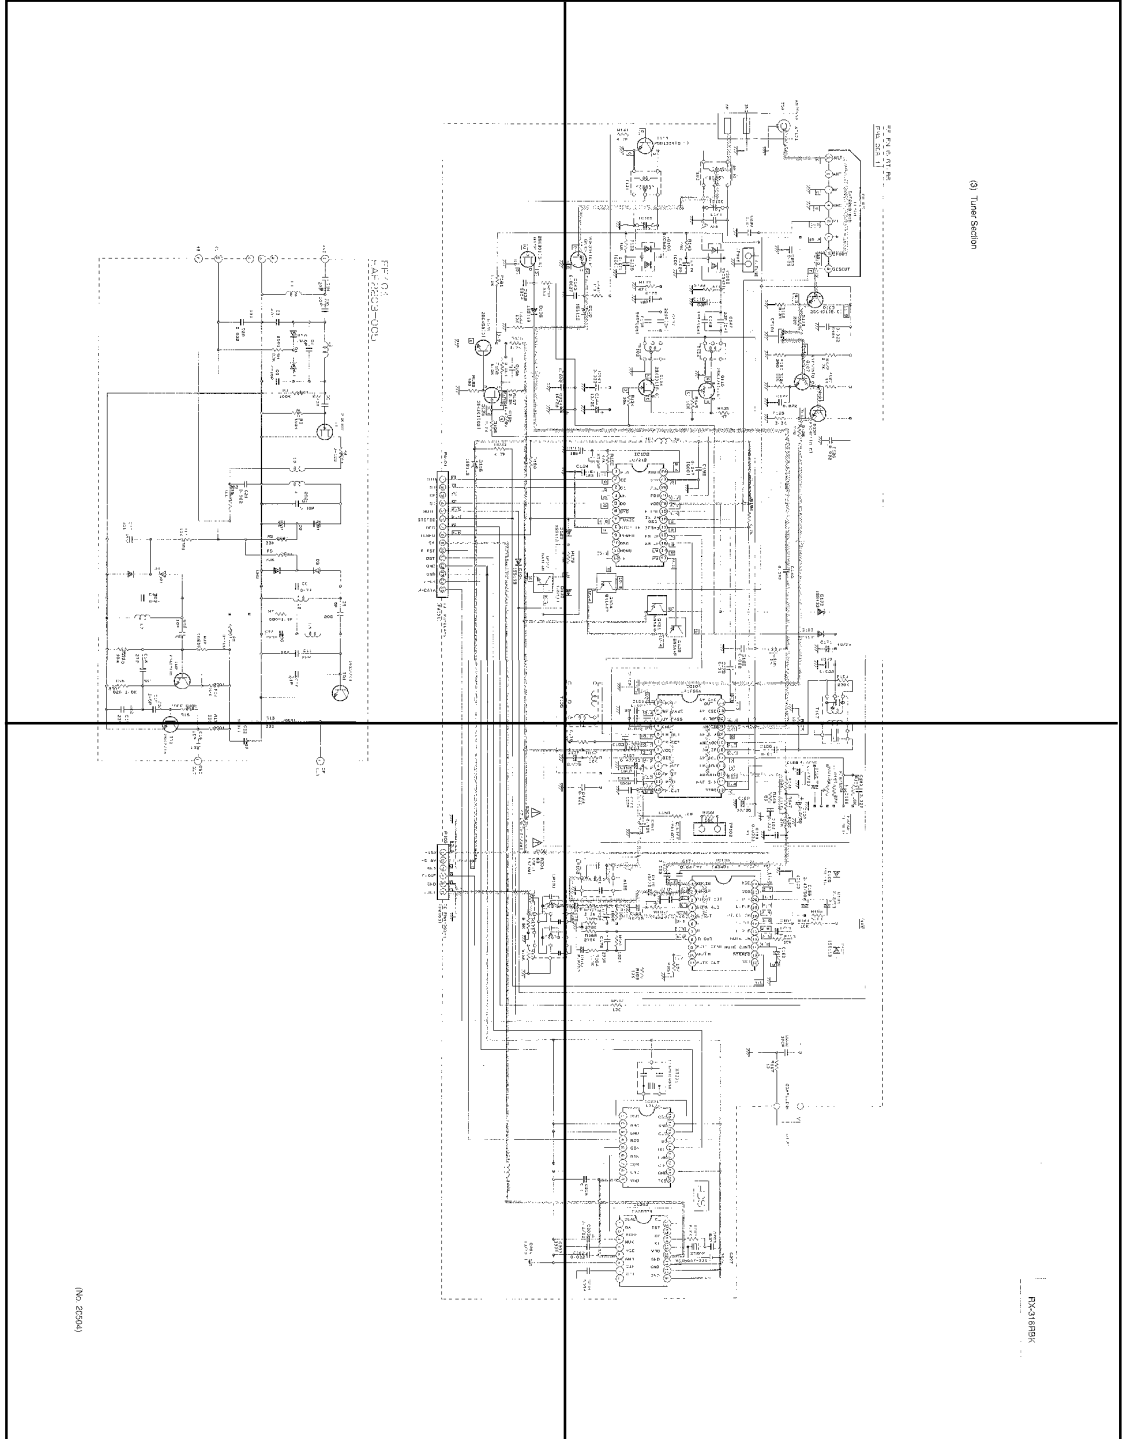


P-(3)T.S-c


P-(3)T.S-d


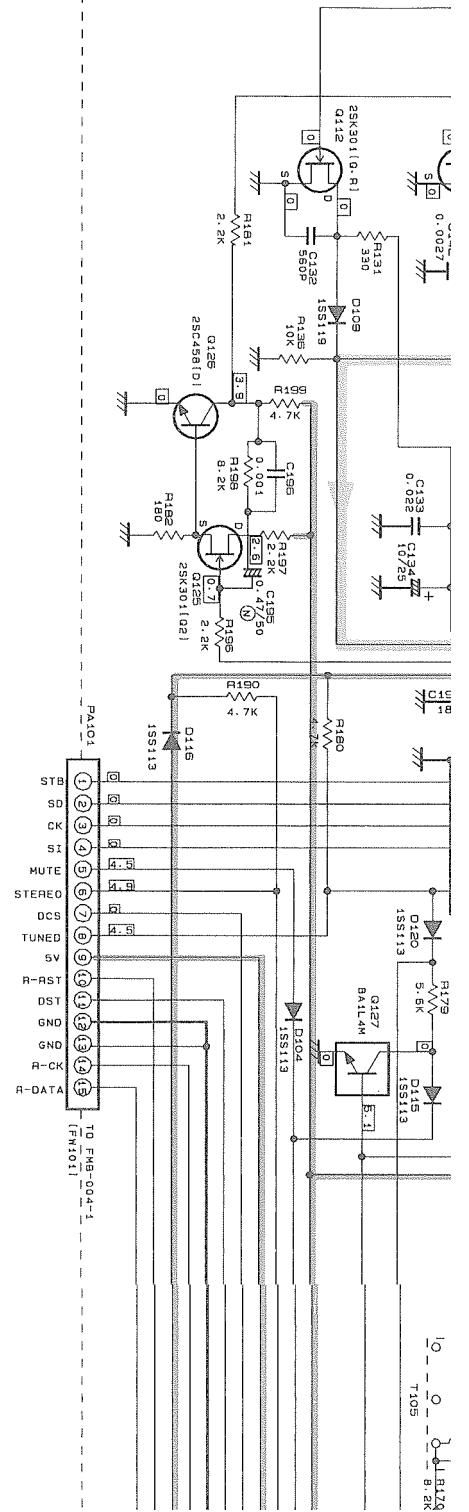


FE101
EAF2203-005


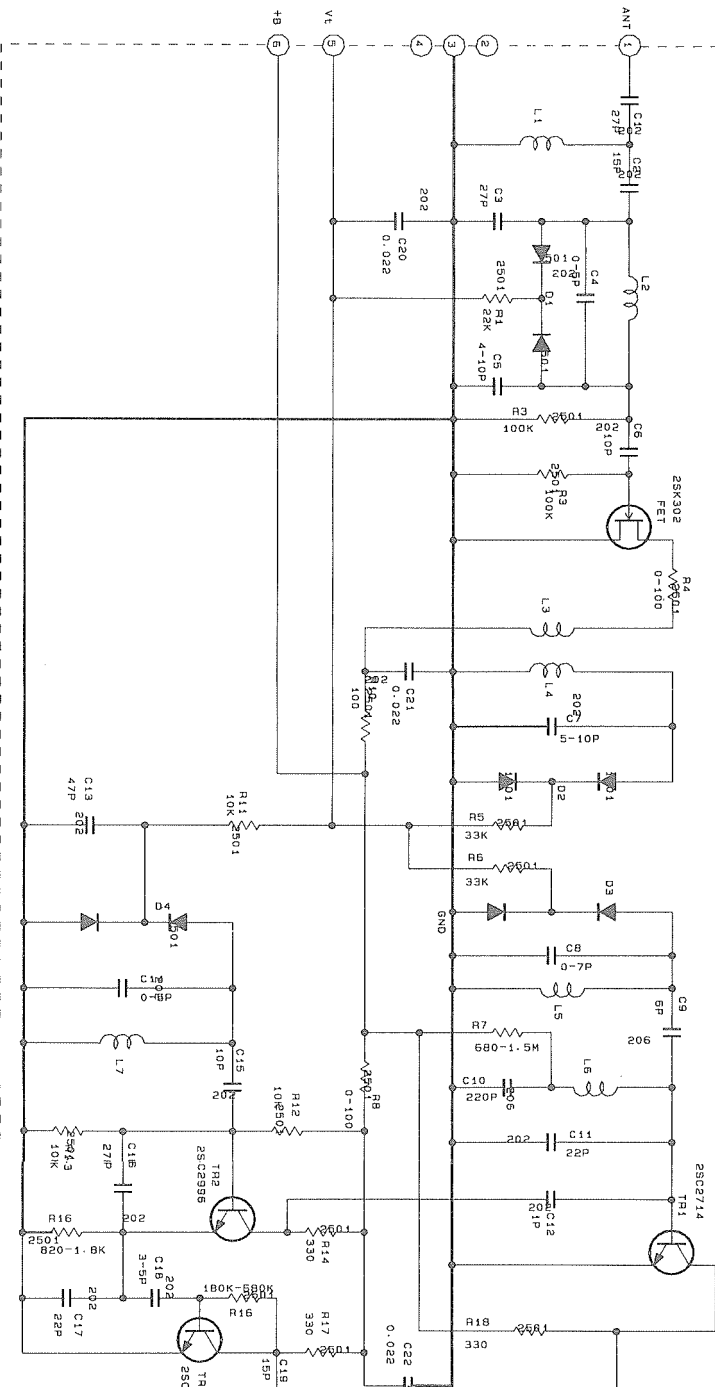


(3) Tuner Section

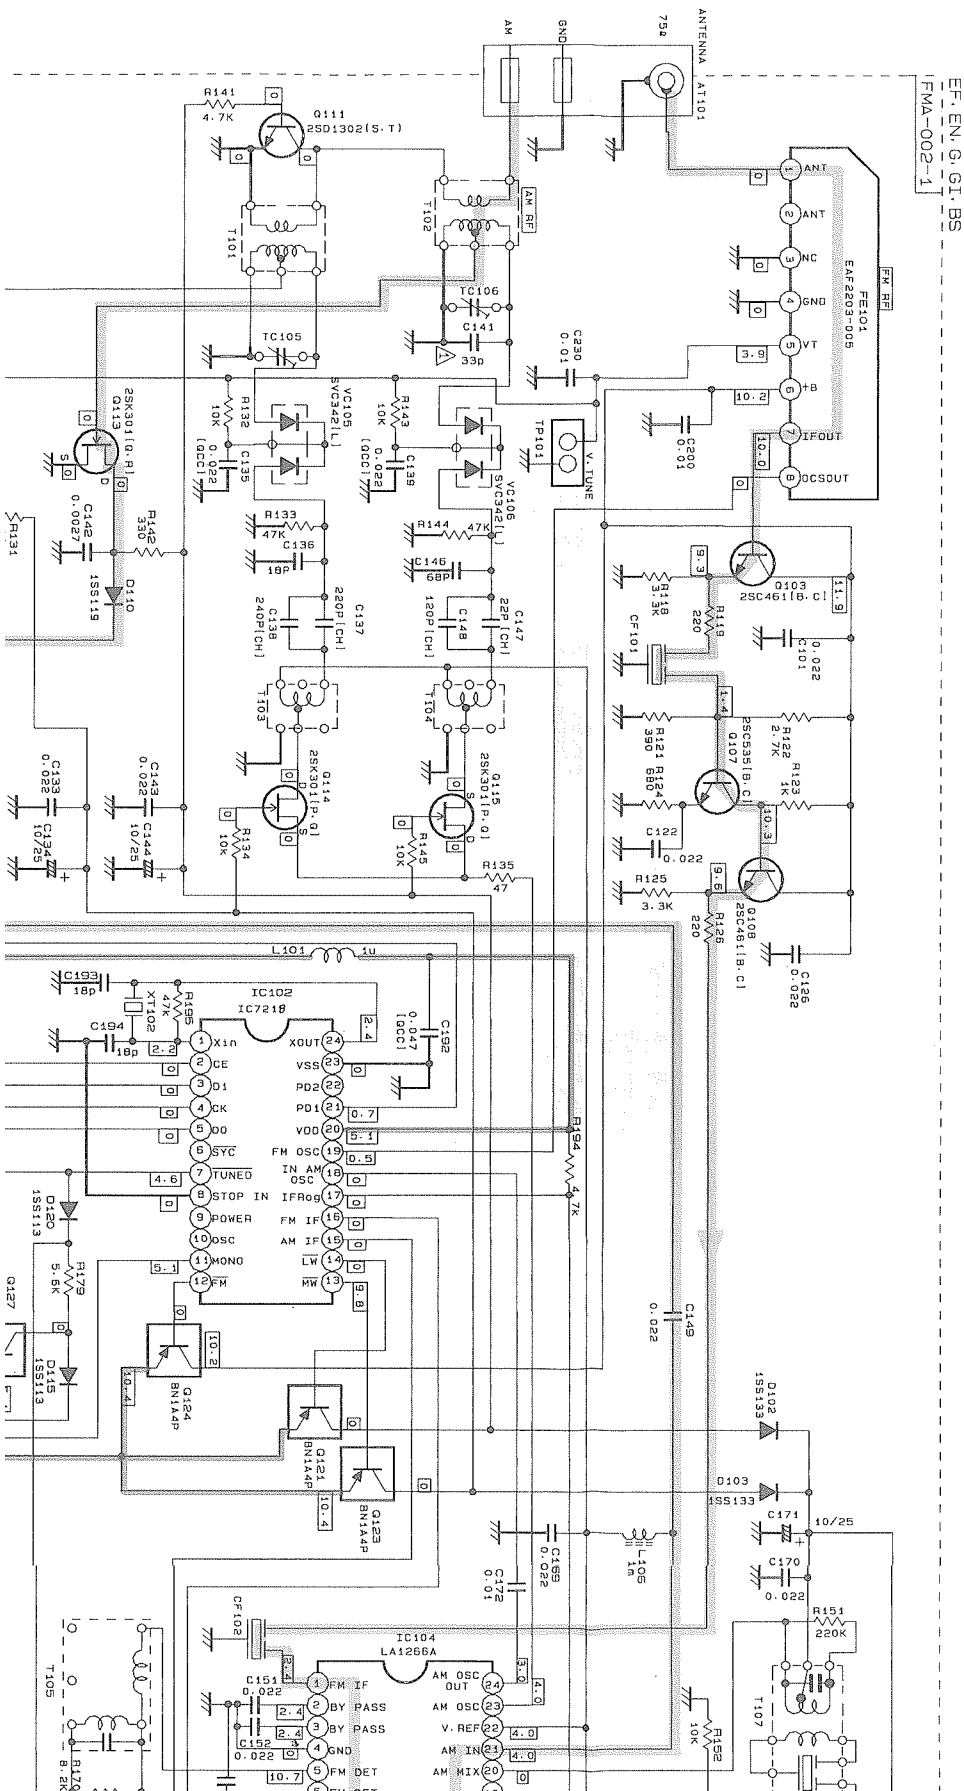

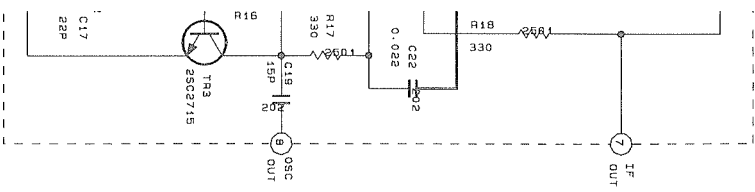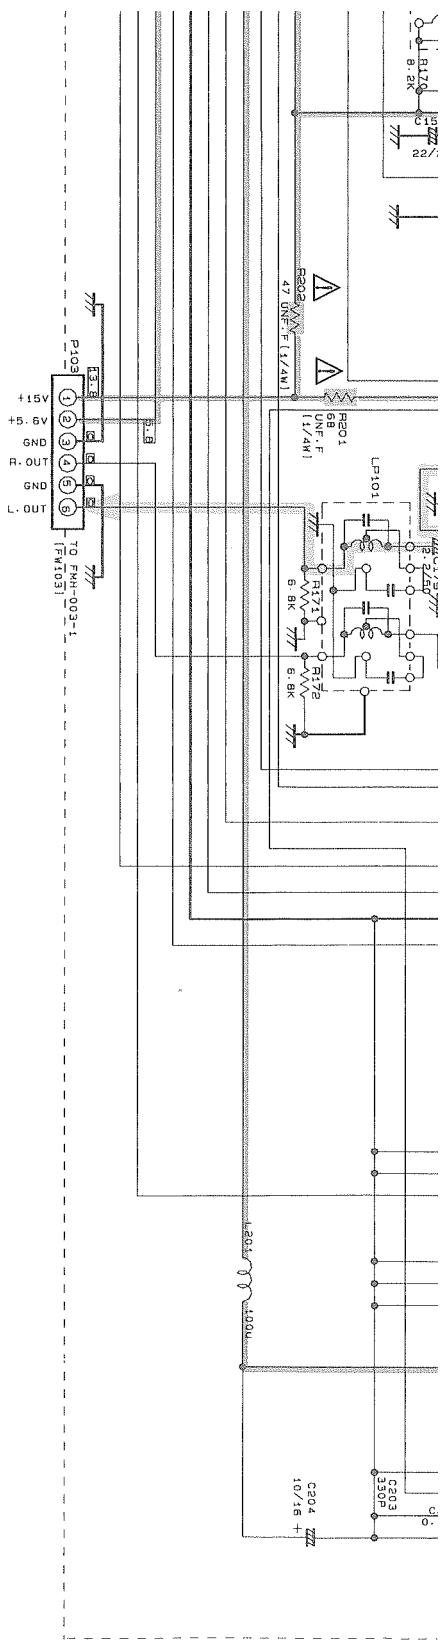

(No. 20504)

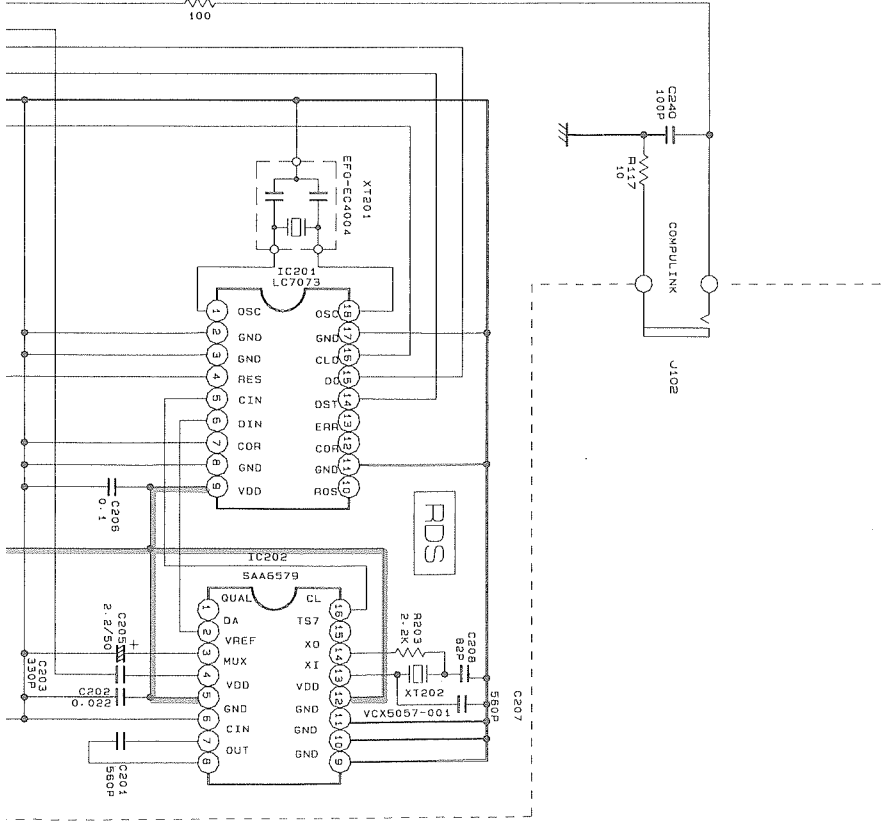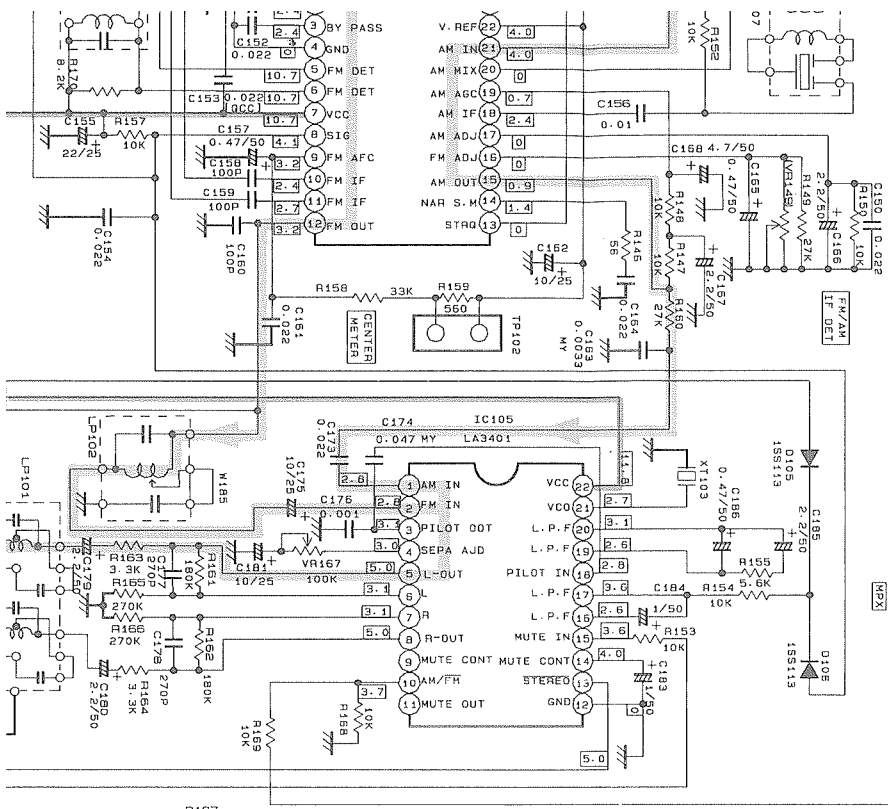





RX-316RBK

(4) Power Primary Section


Printed Circuit Board


■ Front, Tone Control & Power Supply P.C. Board (FMB-004)

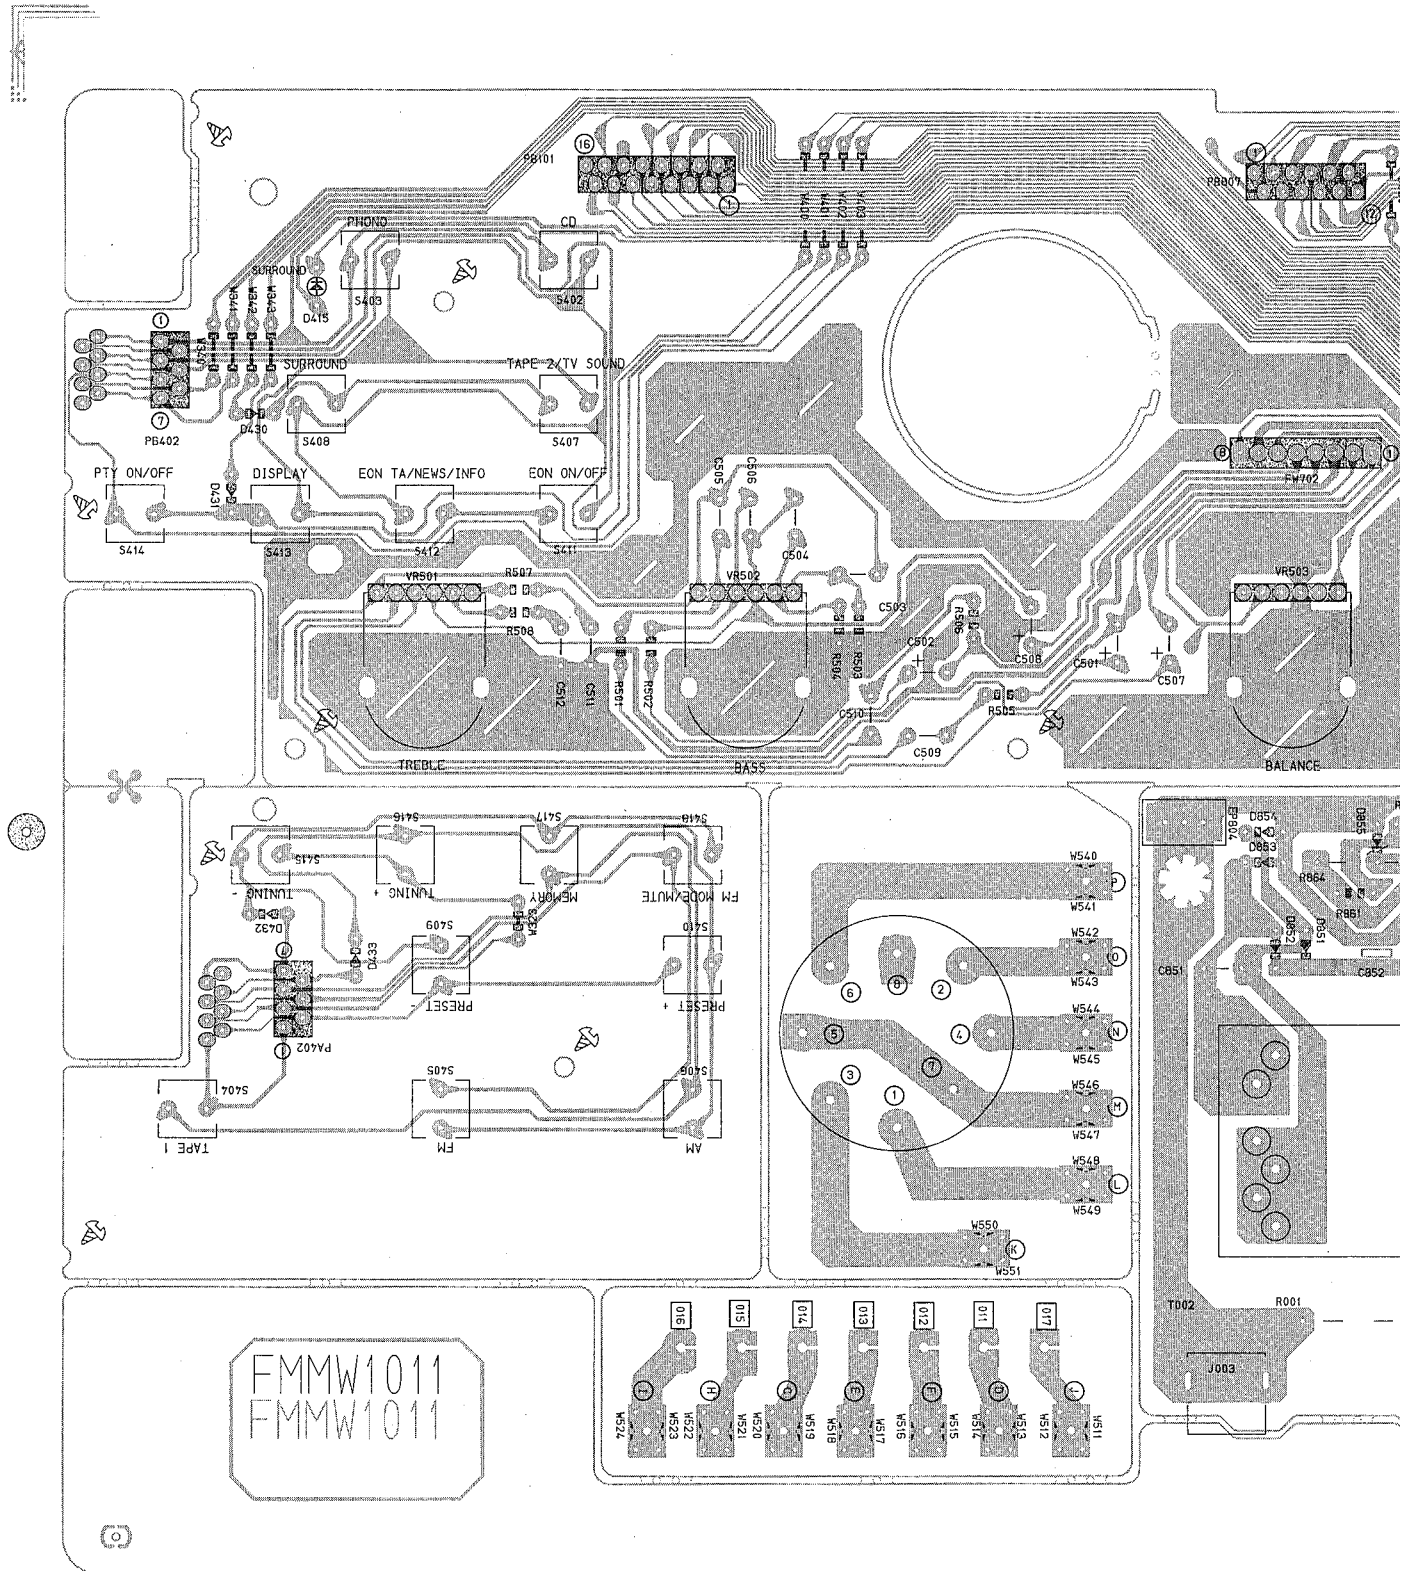

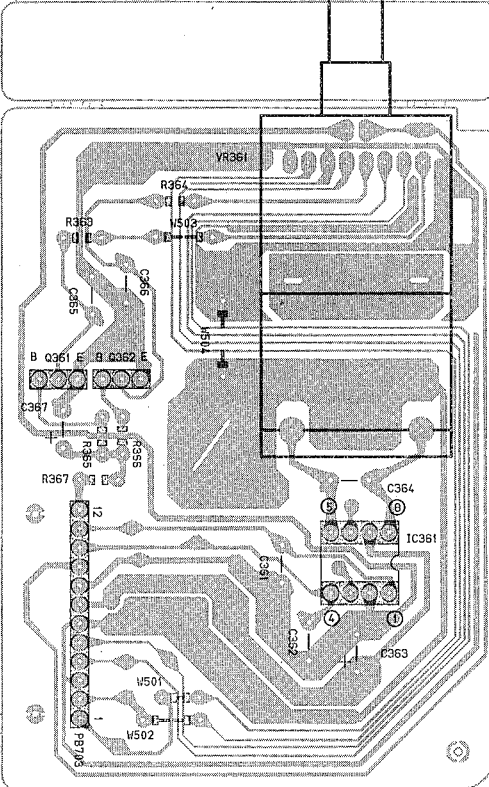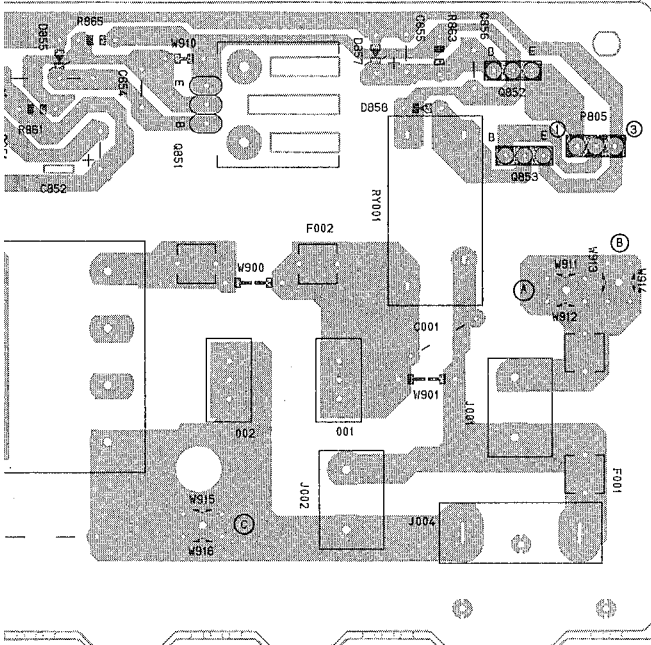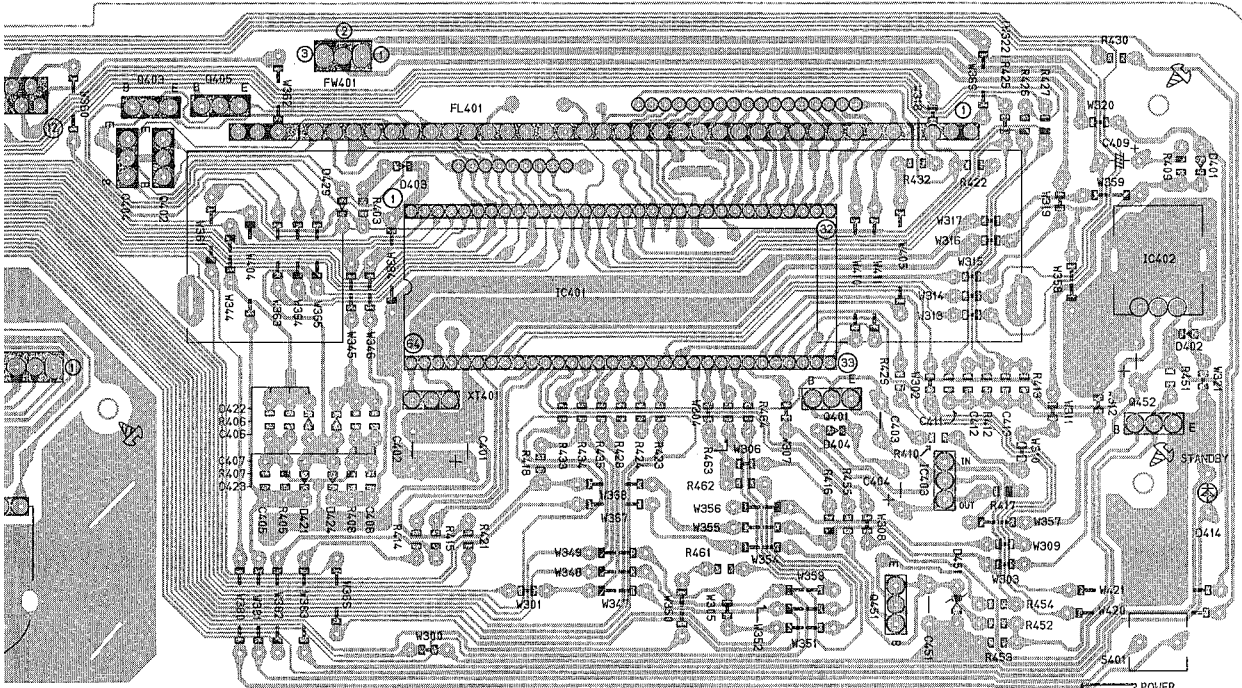



Amplifier Selector P.C. Board (FMH-003)

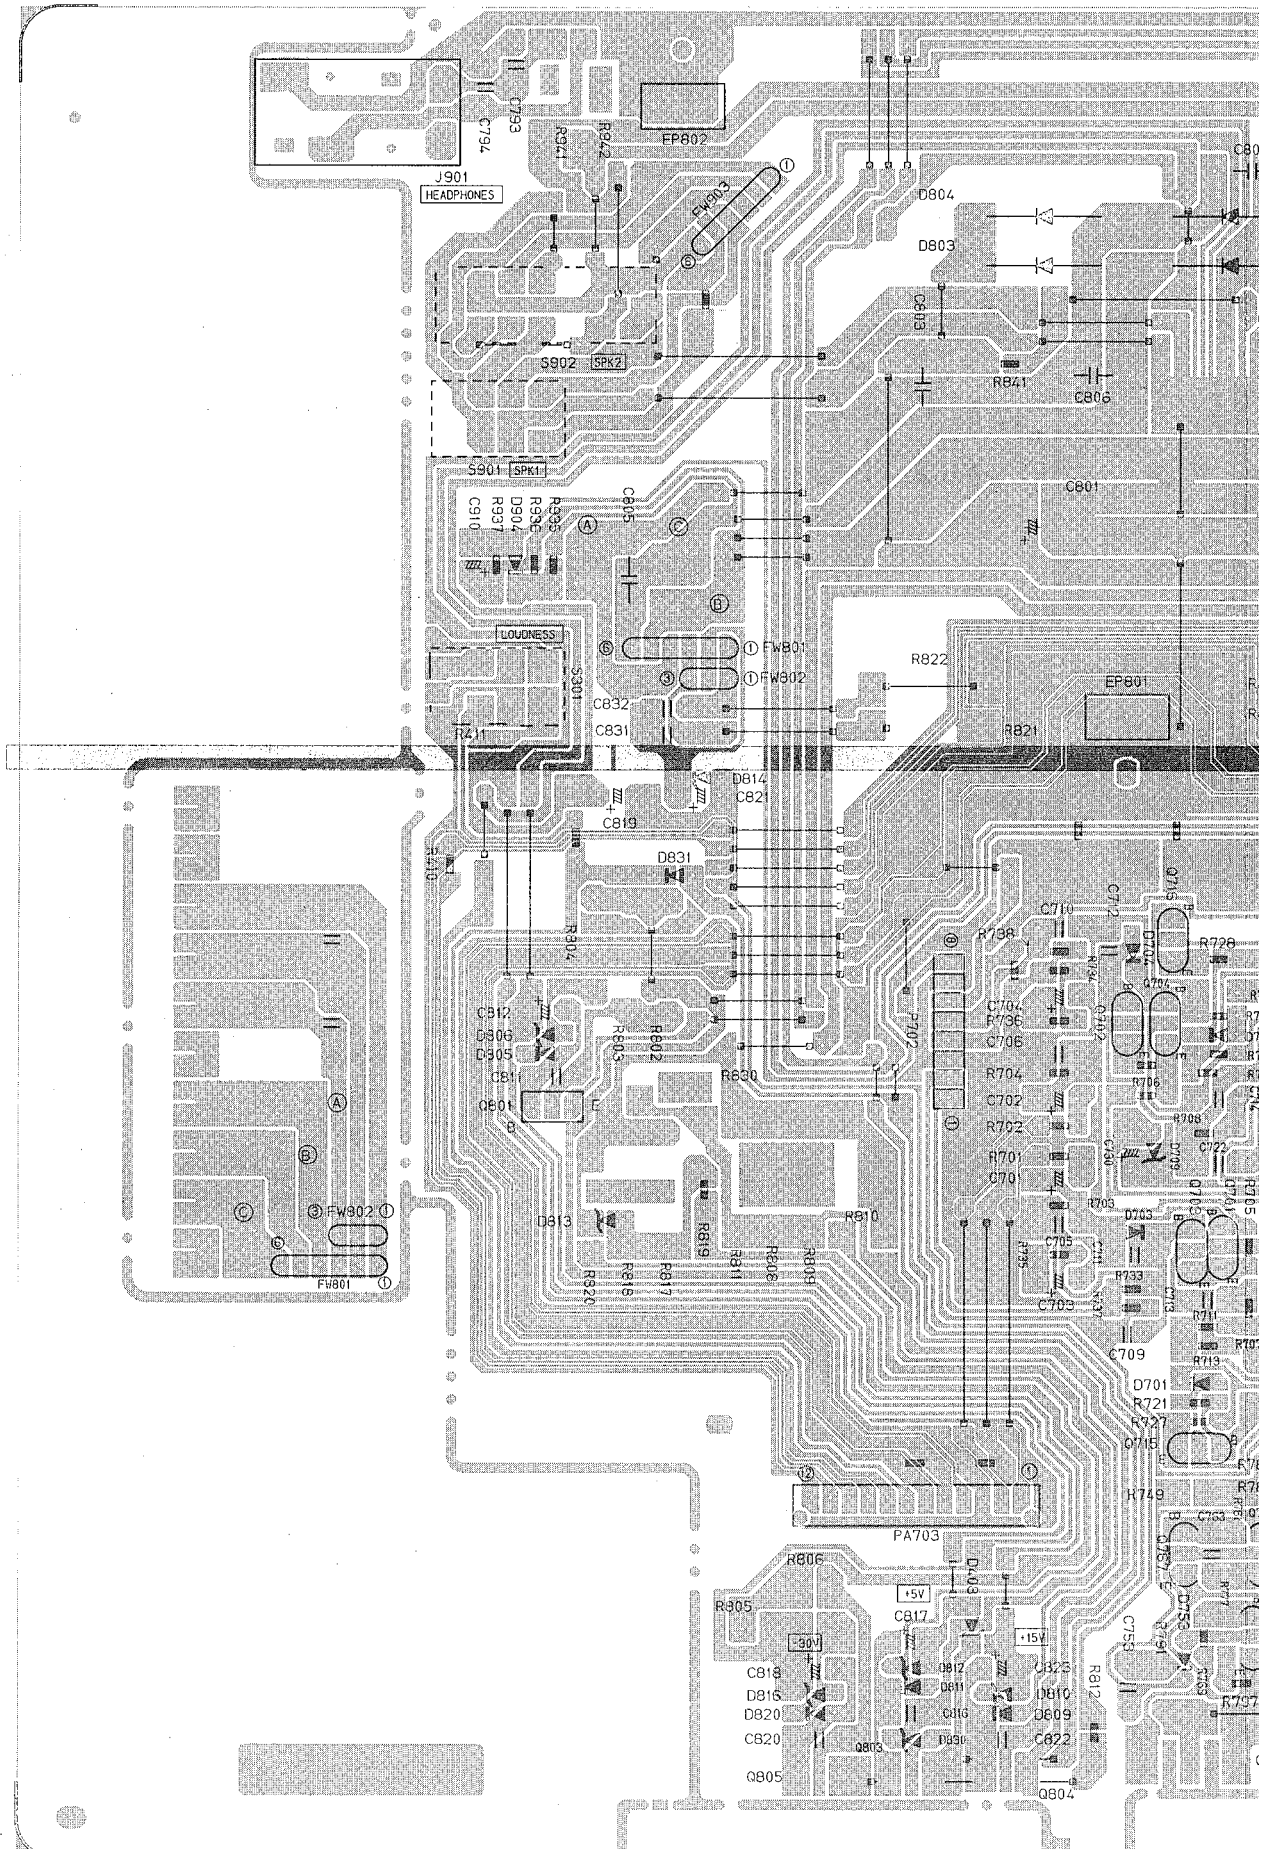

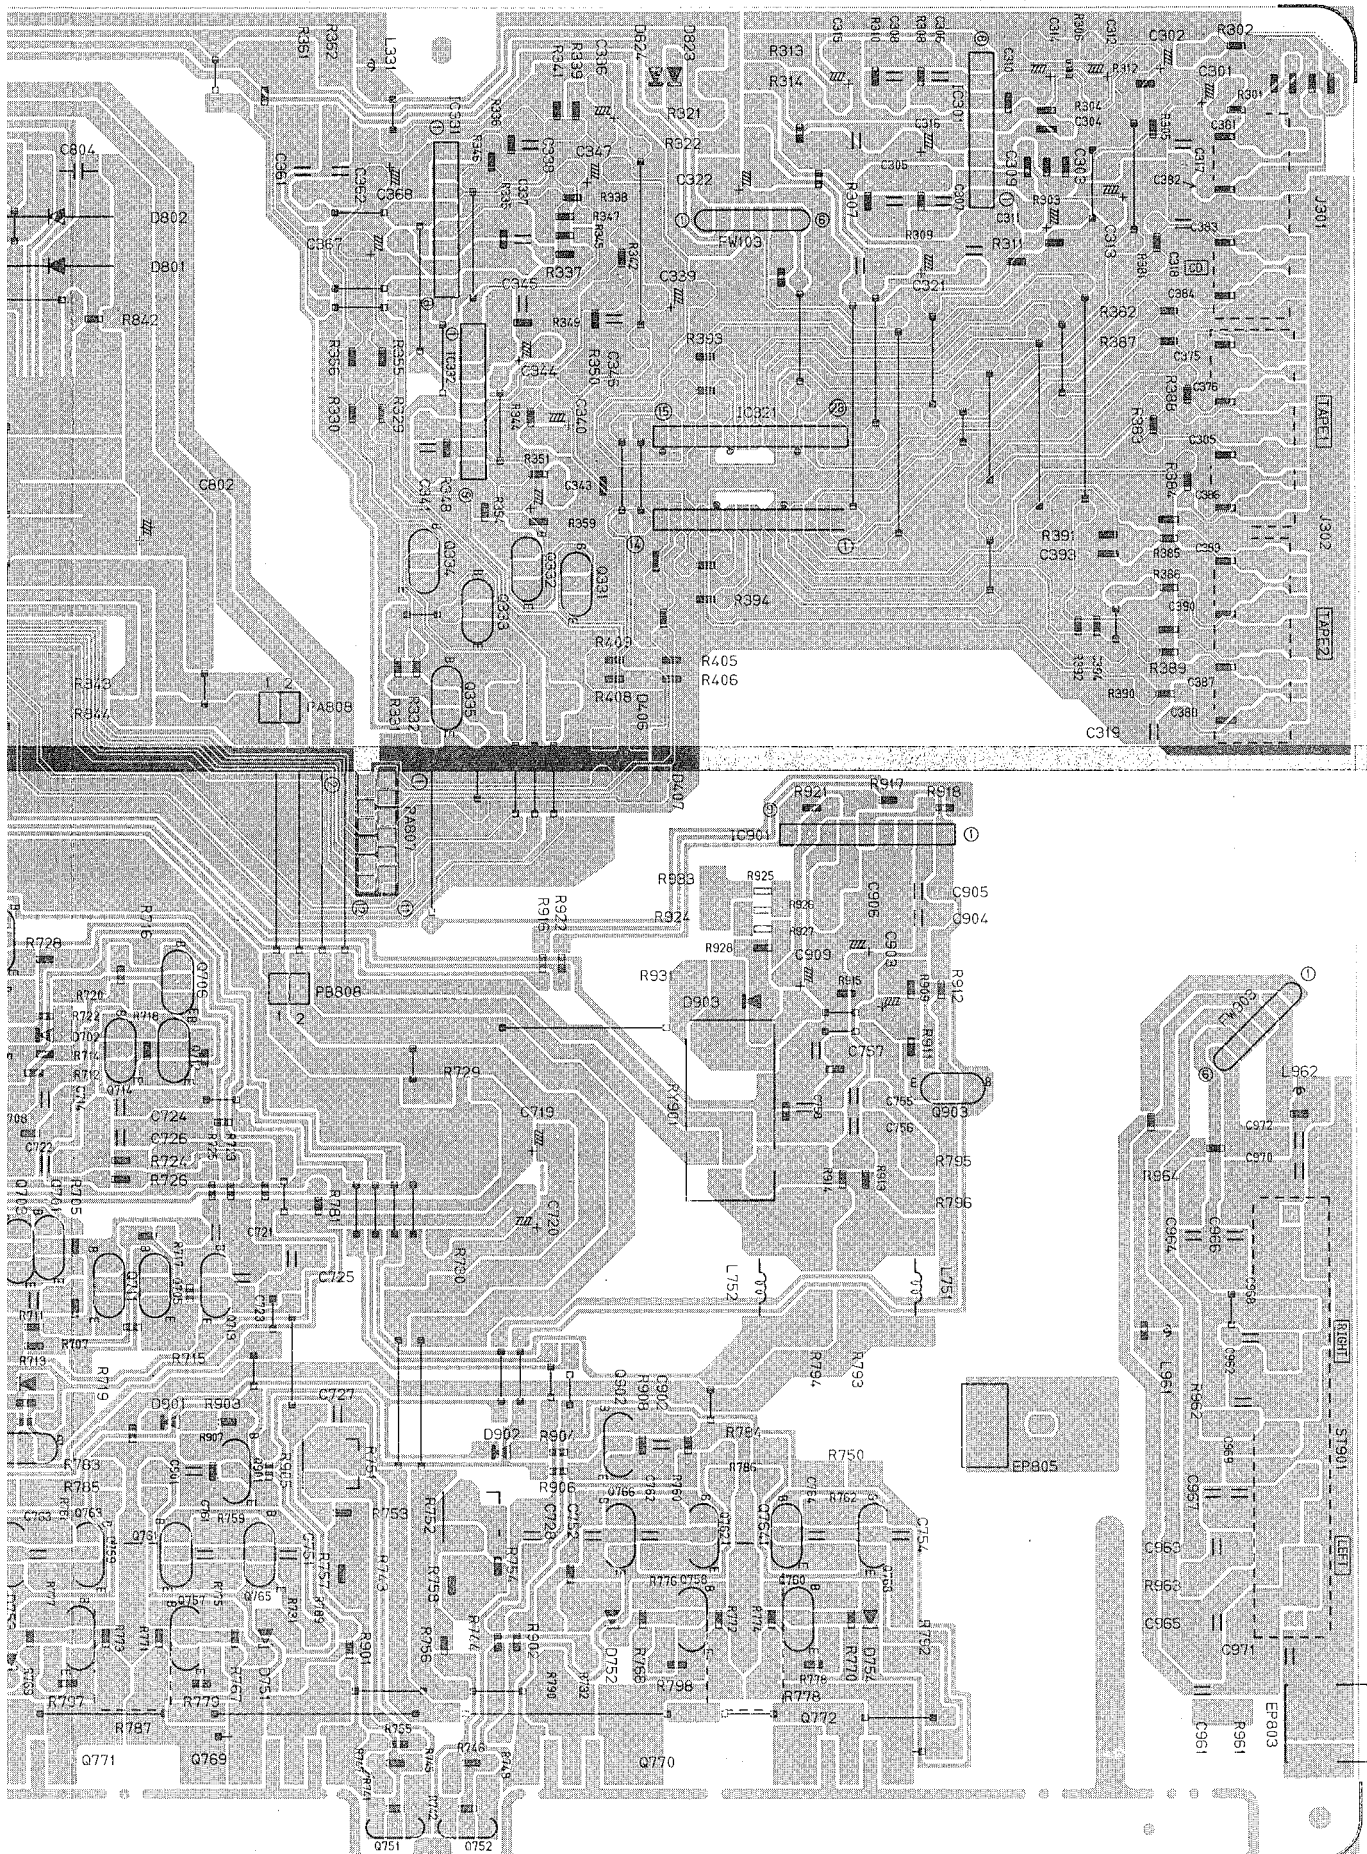

■ Tuner P.C. Board (EMA-002)

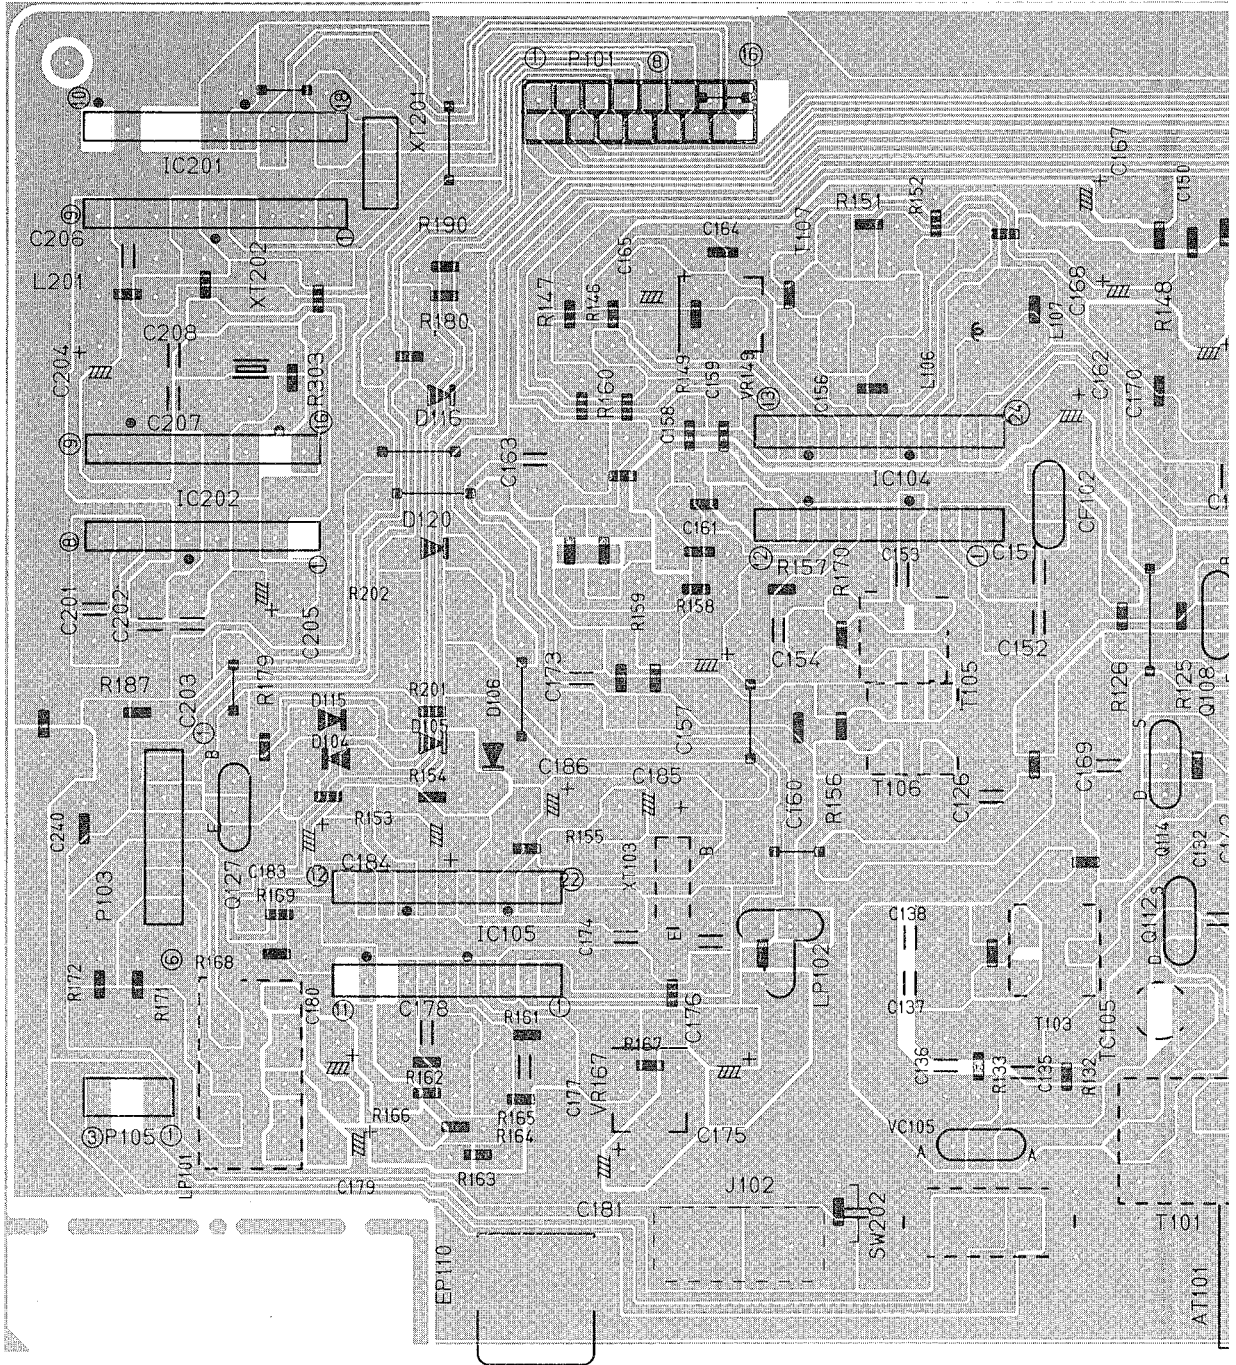

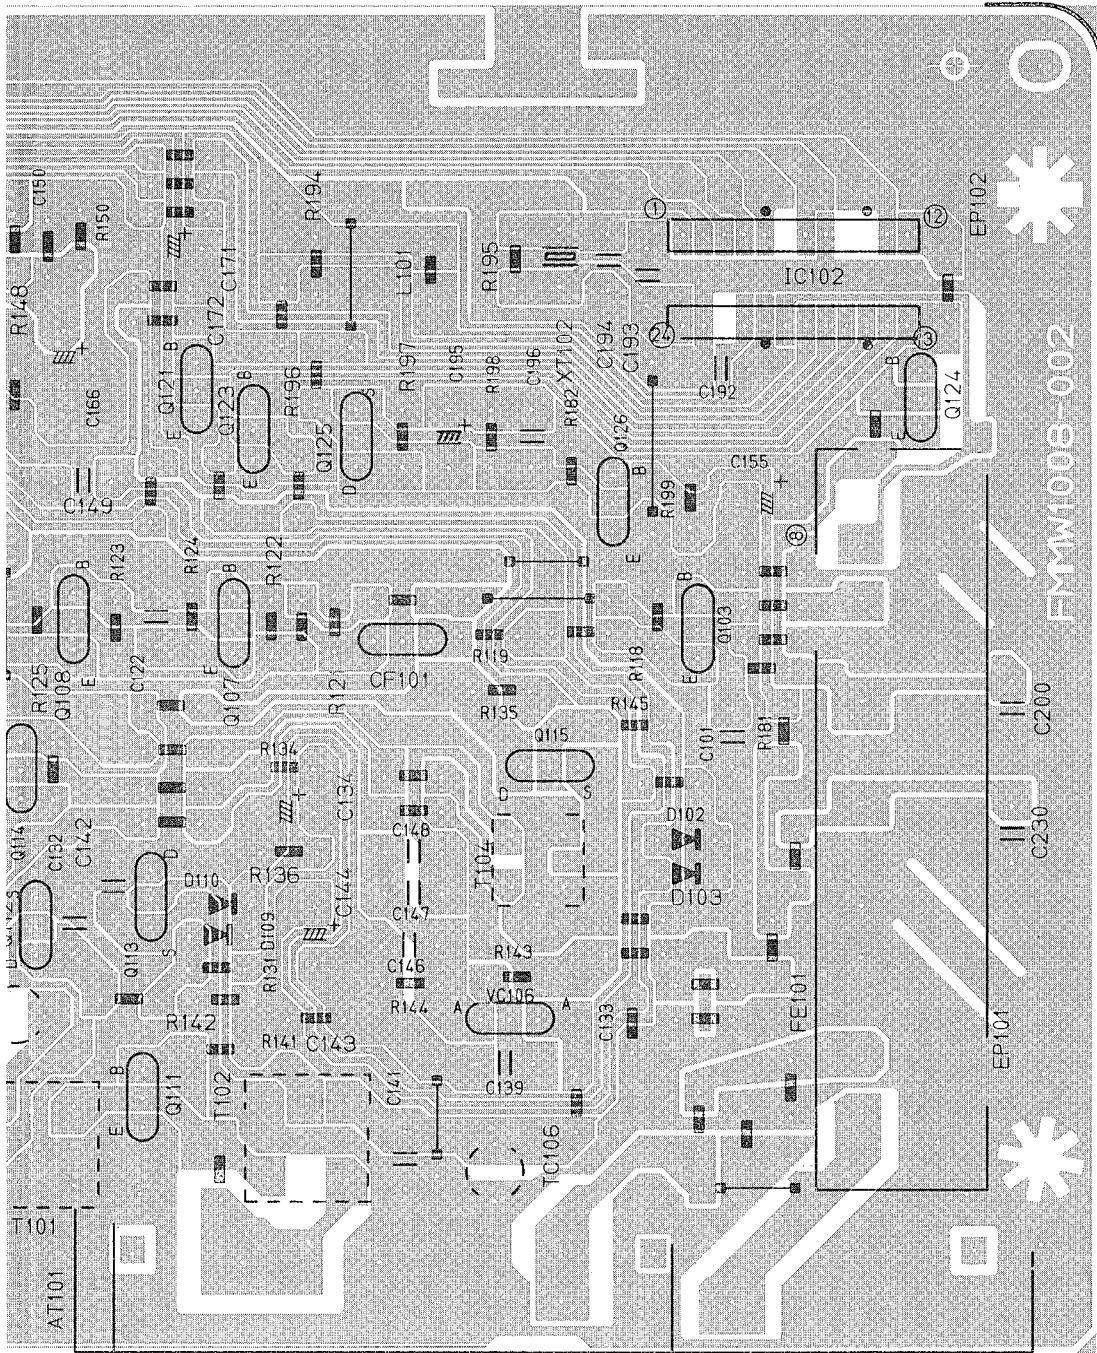

PARTS LIST

Note : All printed circuit board assemblies are not available as service parts.

Contents


General Exploded View and Parts List	2-3
Printed Circuit Board Ass'y and Parts List	2-7
■ FMH-003 <input type="checkbox"/> Amplifier & Selector PC Board Ass'y	2-7
■ FMB-004 <input type="checkbox"/> Front, Tone Control & Power Supply PC Board Ass'y	2-11
■ FMA-002 <input type="checkbox"/> Tuner PC Board Ass'y	2-13
Accessories List	2-15
Packing Materials and Part Numbers	2-16


-MEMO-

General Exploded View and Parts List

Symbol No.

M	1	M	M
---	---	---	---

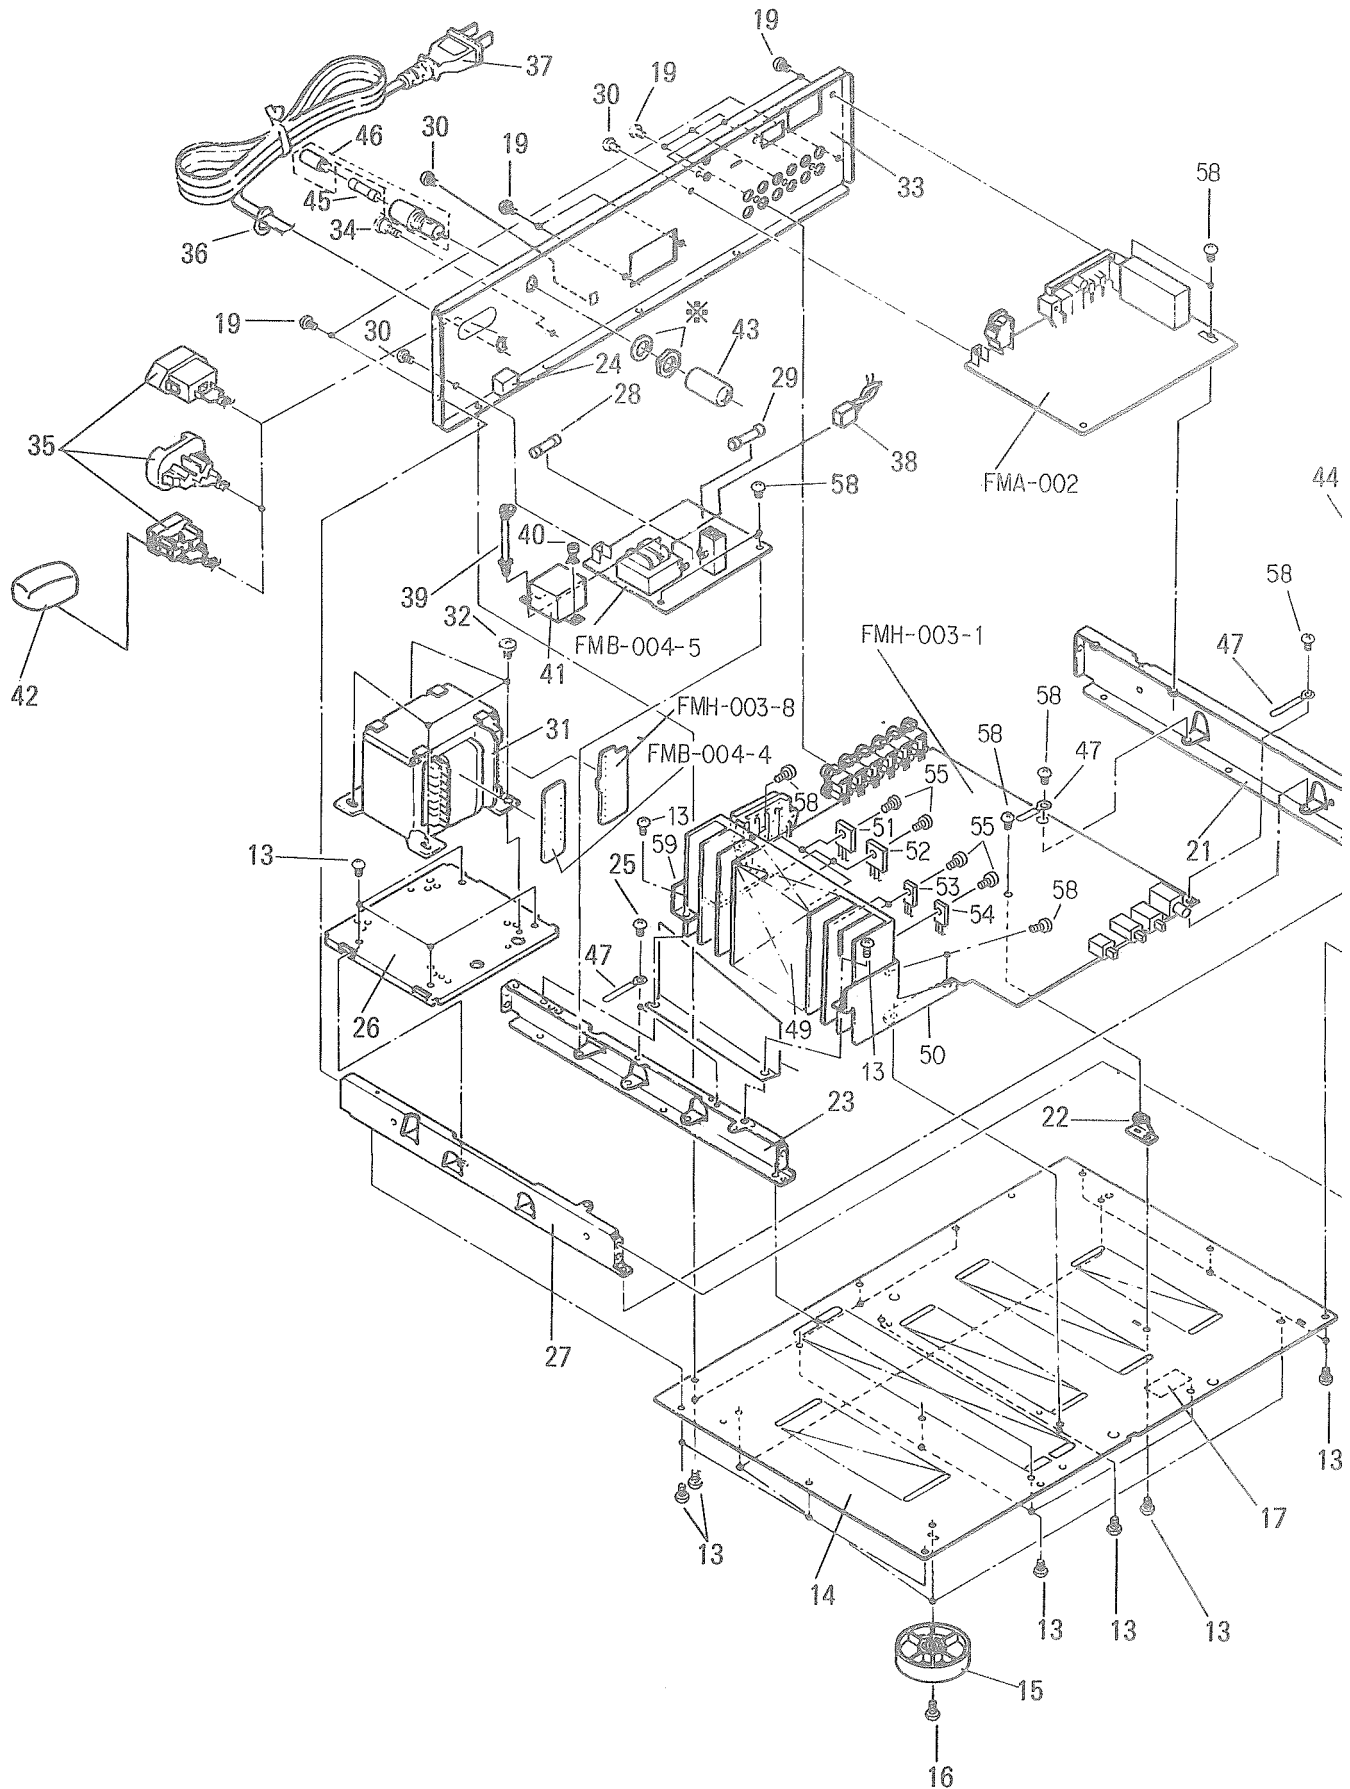

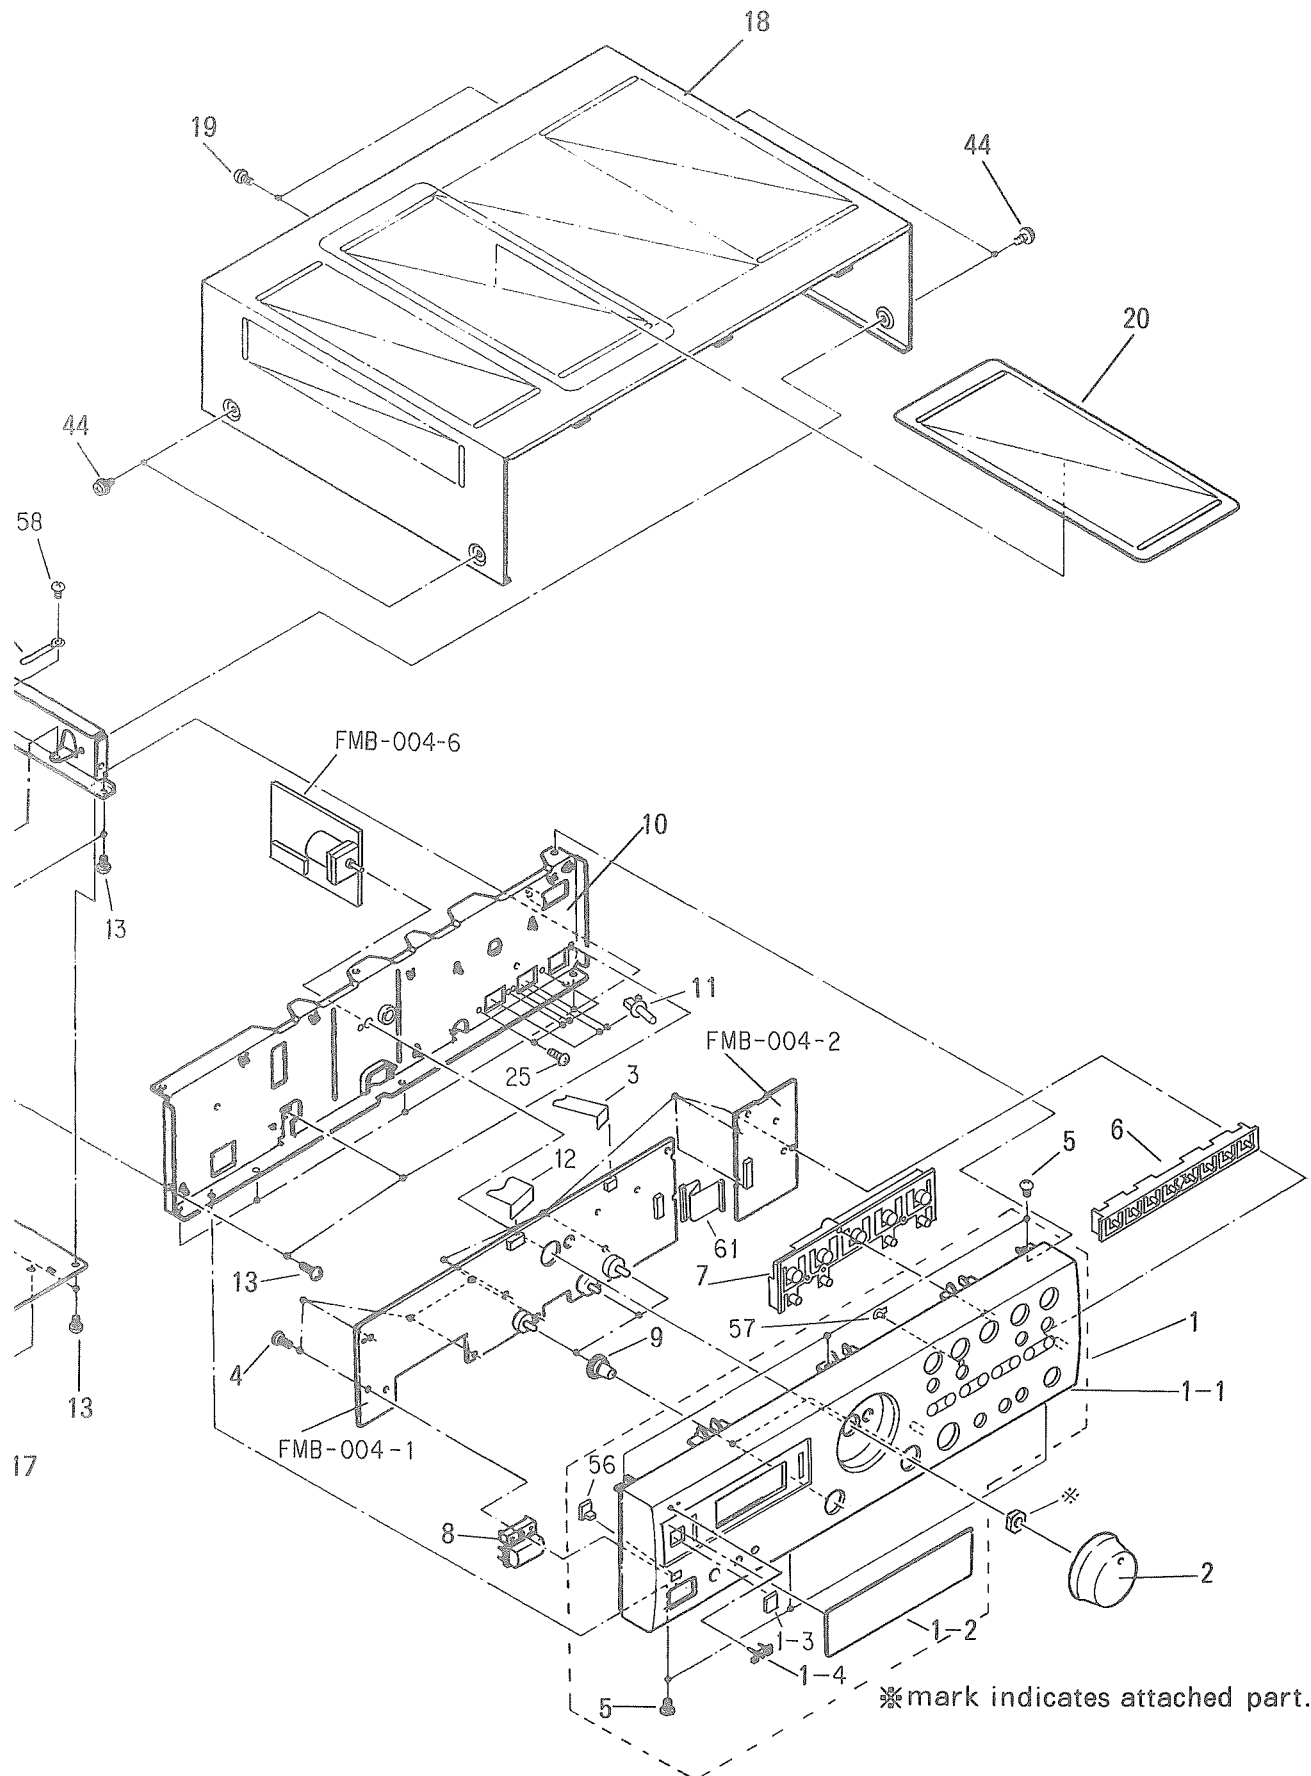

PARTS LIST

Symbol No.

M 1 M M

△	Item	Part Number	Part Name	Q'ty	Description	Area
	1	EFP-RX316RBKE(S)	FRONT PANEL	1		
	1-1	FMJC1007-001	FRONT PANEL	1		
	1-2	E308268-0115M	WINDOW SCREEN	1		
	1-3	E72436-006	REMORT SCREEN	1		
	1-4	VJD5429-001	JVC MARK	1		
	2	E309107-0015M	VOLUME KNOB	1		
	3	FMWF1216-23TTA		1		
	4	SDSF2608Z	SCREW	9		
	6	FMXP3008-001	PUSH BUTTON	1		
	7	FMXP2001-001	PUSH BUTTON	1		
	8	FMXP4004-001	POWER BUTTON	1		
	8	SDSG3008M	TAPPING SCREW	6		
	9	FMXL4006-001	BALANCE KNOB	3		
	10	FMKL1001-001	FRONT BRACKET	1		
	11	E407321-0025M	PUSH BUTTON	3		
	12	FMWF1212-35TTB	FLAT WIRE ASSY	1		
	13	SBSG3008Z	TAPPING SCREW	28		
	14	E102371-0055M	CHASSIS BASE	1		
	15	E406379-0085S	FOOT	4		
	16	SBST3010Z	TAPPING SCREW	4		
	17	E70115-002	CAUTION LABEL	1		
	18	E207049-007(S)	METAL COVER	1		
	19	SBSG3008M	TAPPING SCREW	12		
	20	E208294-001	PROTECTOR COVER	1		
	21	E206957-0015M	SIDE BRACKET	1		
	22	E68587-2225M	BRACKET PLATE	1		
	23	E206958-0045M	CENTER BRACKET	1		
	24	E306805-023	SPACER	1		
	25	SBST3006Z	TAPPING SCREW	6		
	26	E206959-0035M	TRANSFORMER BRACKET	1		
△	27	E206956-0015M	SIDE BRACKET	1		
△	28	QMF51E2-R10SBS	FUSE	1	F002(250V/100mA)	BS
△		QMF51A2-R10S	FUSE	1	F002(250V/100mA)	EF
△		QMF51A2-R10S	FUSE	1	F002(250V/100mA)	EN
△		QMF51A2-R10S	FUSE	1	F002(250V/100mA)	G
△		QMF51A2-R10S	FUSE	1	F002(250V/100mA)	GI
△	29	QMF51E2-3R15J1	FUSE	1	F001(250V/3.15A)	
△	30	SBST3006M	TAPPING SCREW	3		
△	31	FMTP1200-02EABS	POWER TRANSFORMER	1		BS
△		FMTP1200-02EA	POWER TRANSFORMER	1		EF
△		FMTP1200-02EA	POWER TRANSFORMER	1		EN
△		FMTP1200-02EA	POWER TRANSFORMER	1		G
△		FMTP1200-02EA	POWER TRANSFORMER	1		GI
	32	E65389-002	SPECIAL SCREW	4		
	33	E207332-0485M	REAR PANEL	1		BS
		E207332-0495M	REAR PANEL	1		EF
		E207332-0495M	REAR PANEL	1		EN
		E207332-0485M	REAR PANEL	1		G
		E207332-0485M	REAR PANEL	1		GI
	34	E73562-003	SPECIAL SCREW	1		
△	35	EMC0237-001BS	AC OUTLET	1		BS
△		EMC0236-001	AC OUTLET	1		EF
△		EMC0236-001	AC OUTLET	1		EN

Item	Part Number	Part Name	Q'ty	Description	Area
36	EMC0236-001	AC OUTLET	1		G
	EMC0236-001	AC OUTLET	1		GI
	QHS3876-162	CORD STOPPER	1		
	QMP5530-0085BS	POWER CORD	1		BS
	QMP3900-200	POWER CORD	1		EF
38	QMP3900-200	POWER CORD	1		EN
	QMP3900-200	POWER CORD	1		G
	QMP3900-200	POWER CORD	1		GI
	EWS282-002BS	SOCKET WIRE	1		BS
	EWS282-002	SOCKET WIRE	1		EF
39	EWS282-002	SOCKET WIRE	1		EN
	EWS282-002	SOCKET WIRE	1		G
	EWS282-002	SOCKET WIRE	1		GI
	E306232-002	FASTENER	1		
	E48729-008	PLASTIC RIVET	1		
41	E406528-003	PRIMARY COVER	1		
	E406079-001	COVER	1		BS
	E69291-001	FUSE COVER	1		EF
	E69291-001	FUSE COVER	1		EN
	E61660-004	SPECIAL SCREW	4		
45	QMF51E2-1R25	FUSE	1	(250V/1.25A)	EF
	QMF51E2-1R25	FUSE	1	(250V/1.25A)	EN
46	QMG0301-003	FUSE HOLDER	1		EF
	QMG0301-003	FUSE HOLDER	1		EN
47	VKZ4001-111S	WIRE CLAMP	2		
49	E308271-005	HEAT SINK	1		
	E307874-001SM	HEAT SINK BRACKET	1		
	2SB1429LB(R,O)	SI.TRANSISTOR	2		
	2SD2155LB(R,O)	SI.TRANSISTOR	2		
	2SD2061F(E,F)	SI.TRANSISTOR	2		
54	2SB1187F(E,F)	SI.TRANSISTOR	1		
	E73525-003SS	SCREW	7		
	FMJK4005-001	INDICATOR LENS	1		
	FMJK4004-001	INDICATOR LENS	1		
	SBSG3008CC	TAPPING SCREW	11		
59	E307874-002SM	HEAT SINK BRACKET	1		
	FMPK3001-001	INSULATOR SHEET	1		
	FMWH0001-001	FLAT WIRE ASSY	1		
	QHW4110-001	WIRE CLAMP	1		
	QZL1007-001	BEAB LABEL	1		BS
-	QWE882-14FF	VINYL WIRE	1		EF
	QZL1031-101	LABEL	1		EF
	QWE882-14FF	VINYL WIRE	1		EN
	FMND4001-002	FTZ LABEL	1		G
	E408450-094	CE LABEL	1		


The Marks for Designated Areas

BS .. the U.K. EF Continental Europe EN Scandinavia
 G ... Germany GI ... Italy
 No mark indicates all area.

Printed Circuit Board Ass'y and Parts List

■ FMH-003 □ Amplifier & Selector PC Board Ass'y

Note: FMH-003 □ varies according to the areas employed. See note (1) when placing an order.

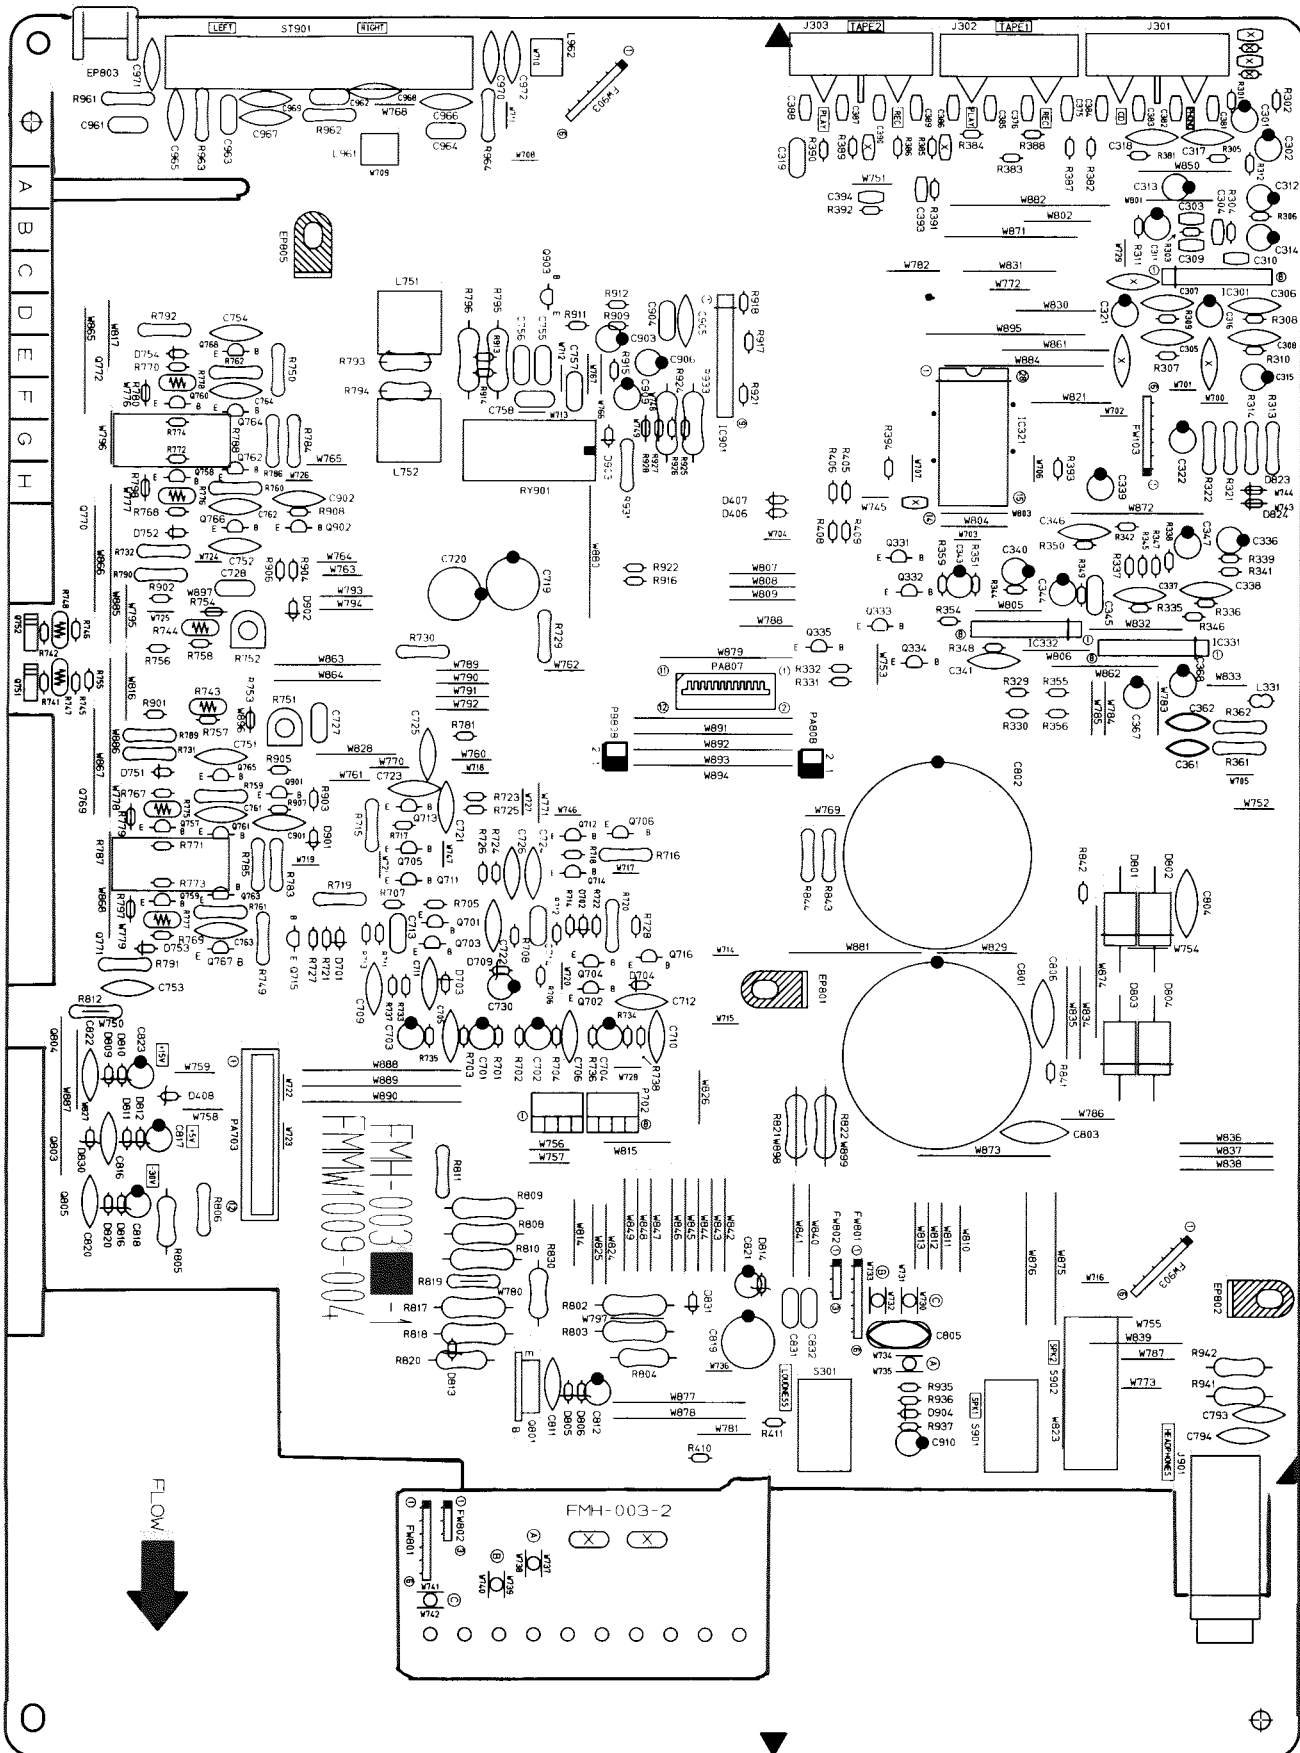

Note (1)

PC Board Ass'y	Version	Designated Areas
FMH-003 E	BS	the U.K.
FMH-003 E	EF	Continental Europe
	EN	Scandinavia
	G	Germany
	GI	Italy

DIODES

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	D820	1SS133	SI.DIODE ROHM	
	D830	MTZ3.3JB	ZENER DIODE ROHM	
	D831	1SS133	SI.DIODE ROHM	
	D901	1SS133	SI.DIODE ROHM	
	D902	1SS133	SI.DIODE ROHM	
	D903	1SS133	SI.DIODE ROHM	
	D904	1SS133	SI.DIODE ROHM	

TRANSISTORS

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	Q331	BA1L4M	DIGITAL TRA NEC	
	Q332	2SD655(E,F)	SI.TRANSIST HITACHI	
	Q333	2SD2144S(VW)	SI.TRANSIST ROHM	
	Q334	2SD2144S(VW)	SI.TRANSIST ROHM	
	Q335	BN1L4M	D.T.R.I.M	
	Q701	2SC1775AV(F1)	SI.TRANSIST HITACHI	
	Q702	2SC1775AV(F1)	SI.TRANSIST HITACHI	
	Q703	2SC1775AV(F1)	SI.TRANSIST HITACHI	
	Q704	2SC1775AV(F1)	SI.TRANSIST HITACHI	
	Q705	2SA1038(R,S)	SI.TRANSIST ROHM	
	Q706	2SA1038(R,S)	SI.TRANSIST ROHM	
	Q711	2SA1038(R,S)	SI.TRANSIST ROHM	
	Q712	2SA1038(R,S)	SI.TRANSIST ROHM	
	Q715	2SC2389(S,E)	SI.TRANSIST ROHM	
	Q716	2SC2389(S,E)	SI.TRANSIST ROHM	
	Q751	2SD636	SI.TRANSIST MATSUSHITA	
	Q752	2SD636	SI.TRANSIST MATSUSHITA	
	Q757	2SC945A	SI.TRANSIST NEC	
	Q758	2SC945A	SI.TRANSIST NEC	
	Q759	2SA733A(P,K)	SI.TRANSIST NEC	
	Q760	2SA733A(P,K)	SI.TRANSIST NEC	
	Q761	2SC2240(BL)	SI.TRANSIST	
	Q762	2SC2240(BL)	SI.TRANSIST	
	Q763	2SA970(GR)	SI.TRANSIST TOSHIBA	
	Q764	2SA970(GR)	SI.TRANSIST TOSHIBA	
	Q765	2SC2235(O,Y)	SI.TRANSIST TOSHIBA	
	Q766	2SC2235(O,Y)	SI.TRANSIST TOSHIBA	
	Q767	2SA965(Y)	SI.TRANSIST TOSHIBA	
	Q768	2SA965(Y)	SI.TRANSIST TOSHIBA	
	Q801	2SB1187(F,G)	SI.TRANSIST ROHM	
	Q901	2SC1775AV(F1)	SI.TRANSIST HITACHI	
	Q902	2SC1775AV(F1)	SI.TRANSIST HITACHI	
	Q903	2SA1038(R,S)	SI.TRANSIST ROHM	

I. C. S.

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	IC301	NJM4580LD	I.C.(MONO-AN DAINICHI	
	IC321	TC9164N	I.C.(DIGI-MO TOSHIBA	
	IC331	BA15218N	I.C.(MONO-AN ROHM	
	IC332	BA15218N	I.C.(MONO-AN ROHM	
	IC901	TA7317P	I.C.(MONO-AN TOSHIBA	

DIODES

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	D406	1SS133	SI.DIODE ROHM	
	D407	1SS133	SI.DIODE ROHM	
	D408	MTZ6.8JC	ZENER DIODE ROHM	
	D701	1SS133	SI.DIODE ROHM	
	D702	1SS133	SI.DIODE ROHM	
	D703	1SS133	SI.DIODE ROHM	
	D704	1SS133	SI.DIODE ROHM	
	D709	MTZ18JC	ZENER DIODE ROHM	
	D751	1SS133	SI.DIODE ROHM	
	D752	1SS133	SI.DIODE ROHM	
	D753	1SS133	SI.DIODE ROHM	
	D754	1SS133	SI.DIODE ROHM	
Δ	D801	30DF2SFC	SI.DIODE NIHONINTER	
Δ	D802	30DF2SFC	SI.DIODE NIHONINTER	
Δ	D803	30DF2SFC	SI.DIODE NIHONINTER	
Δ	D804	30DF2SFC	SI.DIODE NIHONINTER	
	D805	1SS133	SI.DIODE ROHM	
	D806	MTZ16JC	ZENER DIODE ROHM	
	D809	1SS133	SI.DIODE ROHM	
	D810	MTZ16JC	ZENER DIODE ROHM	
	D811	1SS133	SI.DIODE ROHM	
	D812	MTZ7.5JC	ZENER DIODE ROHM	
	D813	MTZ20JC	ZENER DIODE ROHM	
	D814	MTZ5.1JC	ZENER DIODE ROHM	
	D816	MTZ20JC	ZENER DIODE ROHM	

CAPACITORS

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	C301	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C302	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C303	QCBB1HK-471Y	470PF 50V CER.CAPACI	
	C304	QCBB1HK-471Y	470PF 50V CER.CAPACI	
	C305	QCY31HK-182Z	1800PF 50V CER.CAPACI	
	C306	QCY31HK-182Z	1800PF 50V CER.CAPACI	
	C307	QCY31HK-682Z	6800PF 50V CER.CAPACI	
	C308	QCY31HK-682Z	6800PF 50V CER.CAPACI	
	C309	QCBB1HK-101Y	100PF 50V CER.CAPACI	
	C310	QCBB1HK-101Y	100PF 50V CER.CAPACI	
	C311	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C312	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C313	QETB1AM-107	100MF 10V AL E.CAPAC	
	C314	QETB1AM-107	100MF 10V AL E.CAPAC	
	C315	QETB1CM-476	47MF 16V AL E.CAPAC	
	C316	QETB1CM-476	47MF 16V AL E.CAPAC	
	C317	QCF21HP-223A	0.022MF 50V CER.CAPACI	
	C318	QCF21HP-223A	0.022MF 50V CER.CAPACI	
	C319	QFVB1HJ-154	0.15MF 50V THIN FILM	
	C321	QETB1EM-226	22MF 25V AL E.CAPAC	
	C322	QETB1EM-226	22MF 25V AL E.CAPAC	
	C336	QETB1CM-226	22MF 16V E.CAPACITO	
	C337	QCS21HJ-100	10PF 50V CER.CAPACI	
	C338	QCS21HJ-100	10PF 50V CER.CAPACI	
	C339	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C340	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C341	QCS31HJ-330Z	33PF 50V CER.CAPACI	
	C343	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C344	QETB1HM-105	1MF 50V AL E.CAPAC	
	C345	QFLB1HJ-392	3900PF 50V MYLAR CAPA	
	C346	QCS21HJ-100	10PF 50V CER.CAPACI	
	C347	QETB1EM-226	22MF 25V AL E.CAPAC	
	C361	QCF21HP-223A	0.022MF 50V CER.CAPACI	
	C362	QCF21HP-223A	0.022MF 50V CER.CAPACI	
	C367	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C368	QETB1HM-475E	4.7MF 50V E.CAPACITO	
	C375	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C376	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C381	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C382	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C383	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C384	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C385	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C386	QCBB1HK-331Y	330PF 50V CER.CAPACI	
	C387	QCBB1HK-561Y	560PF 50V CER.CAPACI	
	C388	QCBB1HK-561Y	560PF 50V CER.CAPACI	
	C389	QCBB1HK-221Y	220PF 50V CER.CAPACI	
	C390	QCBB1HK-221Y	220PF 50V CER.CAPACI	
	C393	QCBB1HK-221Y	220PF 50V CER.CAPACI	
	C394	QCBB1HK-221Y	220PF 50V CER.CAPACI	
	C701	QETB1HM-106	10MF 50V E.CAPACITO	
	C702	QETB1HM-106	10MF 50V E.CAPACITO	
	C703	QETB1EM-476	47MF 25V AL E.CAPAC	
	C704	QETB1EM-476	47MF 25V AL E.CAPAC	
	C705	QCS21HJ-271A	270PF 50V CER.CAPACI	
	C706	QCS21HJ-271A	270PF 50V CER.CAPACI	
	C709	QCS21HJ-220A	22PF 50V CER.CAPACI	
	C710	QCS21HJ-220A	22PF 50V CER.CAPACI	
	C711	QCS21HJ-101A	100PF 50V CER.CAPACI	
	C712	QCS21HJ-101A	100PF 50V CER.CAPACI	
	C713	QFLB1HJ-152	1500PF 50V MYLAR CAPA	
	C714	QFLB1HJ-152	1500PF 50V MYLAR CAPA	
	C719	QETB1JM-476	47MF 63V AL E.CAPAC	
	C720	QETB1JM-476	47MF 63V AL E.CAPAC	
	C721	QCS22HJ-220	22PF 500V CER.CAPACI	
	C722	QCS22HJ-220	22PF 500V CER.CAPACI	
	C723	QCS21HJ-680A	68PF 50V CER.CAPACI	
	C724	QCS21HJ-680A	68PF 50V CER.CAPACI	
	C725	QCS21HJ-680A	68PF 50V CER.CAPACI	
	C726	QCS21HJ-680A	68PF 50V CER.CAPACI	
	C727	QFLB1HK-473	0.047MF 50V MYLAR CAPA	
	C728	QFLB1HK-473	0.047MF 50V MYLAR CAPA	
	C730	QETB1EM-476	47MF 25V AL E.CAPAC	
	C751	QCS22HJ-470A	47PF 500V CER.CAPACI	
	C752	QCS22HJ-470A	47PF 500V CER.CAPACI	
	C753	QCS22HJ-470A	47PF 500V CER.CAPACI	
	C754	QCS22HJ-470A	47PF 500V CER.CAPACI	
	C755	QFLB1HJ-473	0.047MF 50V MYLAR CAPA	
	C756	QFLB1HJ-473	0.047MF 50V MYLAR CAPA	
	C757	QFLB1HJ-473	0.047MF 50V MYLAR CAPA	

Δ : IS A PRIORITY PARTS

CAPACITORS

Table with columns: ITEM, PART NUMBER, DESCRIPTION, AREA. Lists capacitor specifications such as QFLB1HJ-473, QCF21HP-473A, QCS21HJ-221, etc.

RESISTORS

Table with columns: ITEM, PART NUMBER, DESCRIPTION, AREA. Lists resistor specifications such as QRD161J-222, QRD161J-473, QRD161J-621, etc.

RESISTORS

Table with columns: ITEM, PART NUMBER, DESCRIPTION, AREA. Lists resistor specifications such as QRD161J-222, QRD161J-471, QRD161J-105, etc.

Δ: IS A SPECIALTY PART

RESISTORS

△	ITEM	PART NUMBER	DESCRIPTION		AREA
△	R818	QRG022J-151A	150	2W	OXIDE META
△	R819	QRZ0077-4R7	4.7	1/4W	FUSE RESIS
△	R820	QRD125J-682	6.8K	1/2W	UNF. CARBON
△	R821	QRX022J-3R9AM	3.9	2W	OXIDE META
△	R822	QRX022J-3R9AM	3.9	2W	OXIDE META
△	R841	QRD161J-104	100K	1/6W	CARBON RES
△	R842	QRD161J-104	100K	1/6W	CARBON RES
△	R843	QRD12CJ-2R2SX	2.2	1/2W	CARBON RES
△	R844	QRD12CJ-2R2SX	2.2	1/2W	CARBON RES
	R901	QRD161J-681	680	1/6W	CARBON RES
	R902	QRD161J-681	680	1/6W	CARBON RES
	R903	QRD167J-562	5.6K	1/6W	CARBON RES
	R904	QRD167J-562	5.6K	1/6W	CARBON RES
	R905	QRD161J-123	12K	1/6W	CARBON RES
	R906	QRD161J-123	12K	1/6W	CARBON RES
	R907	QRD167J-152	1.5K	1/6W	CARBON RES
	R908	QRD167J-152	1.5K	1/6W	CARBON RES
	R909	QRD161J-103	10K	1/6W	CARBON RES
	R911	QRD167J-332	3.3K	1/6W	CARBON RES
	R912	QRD161J-473	47K	1/6W	CARBON RES
	R913	QRD161J-104	100K	1/6W	CARBON RES
	R914	QRD161J-823	82K	1/6W	CARBON RES
	R915	QRD161J-473	47K	1/6W	CARBON RES
	R916	QRD161J-563	56K	1/6W	CARBON RES
	R917	QRD161J-683	68K	1/6W	CARBON RES
	R918	QRD161J-392	3.9K	1/6W	CARBON RES
	R921	QRD161J-224	220K	1/6W	CARBON RES
	R922	QRD161J-182	1.8K	1/6W	CARBON RES
△	R924	QRG022J-821GJ7	820	2W	OXIDE META
△	R931	QRD14CJ-330SX	33	1/4W	UNF. CARBON
	R935	QRD167J-562	5.6K	1/6W	CARBON RES
	R936	QRD167J-822	8.2K	1/6W	CARBON RES
	R937	QRD161J-103	10K	1/6W	CARBON RES
△	R941	QRG012J-471A	470	1W	OXIDE META
△	R942	QRG012J-471A	470	1W	OXIDE META
△	R961	QRZ0077-100	10	1/4W	FUSIBLE RE
△	R962	QRZ0077-100	10	1/4W	FUSIBLE RE
△	R963	QRZ0077-100	10	1/4W	FUSIBLE RE
△	R964	QRZ0077-100	10	1/4W	FUSIBLE RE


△ IS SAFETY PARTS

OTHERS

△	ITEM	PART NUMBER	DESCRIPTION		AREA
		FMMW1009-002	PRINTED BOA		
		QXTF500-015	SHRINK TUBE		
	J301	EMN00TV-423AJ2	PIN JACK		
	J302	EMN00TV-421AJ2	PIN JACK		
	J303	EMN00TV-421AJ2	PIN JACK		
	J901	QMS6022-V01	MICROPHONE		
	L331	EQL4007-220	INDUCTOR		
	L751	EQL0121-1R2J1	INDUCTOR		
	L752	EQL0121-1R2J1	INDUCTOR		
	L961	EQL0011-R45J1	INDUCTOR		
	L962	EQL0011-R45J1	INDUCTOR		
	S301	QST4101-E15	PUSH SWITCH LOUDNESS		
	S901	QST4241-E05J2	PUSH SWITCH SPK 1		
	S902	QST4241-E05J2	PUSH SWITCH SPK 2		
	EP801	EMZ4002-001Z	EARTH PLATE		
	EP802	EMZ4002-001Z	EARTH PLATE		
	EP803	E70225-001	EARTH PLATE		
	FW103	EWR36D-25LS	FLAT WIRE A 6PIN		
	FW801	EWR36D-45SS	FLAT WIRE A 6PIN		
	FW903	EWR36D-35SS	FLAT WIRE A 6PIN		
	JT001	EMV7122-004Z	CONNECT TER 4PIN		
	JT002	EMV7122-004Z	CONNECT TER 4PIN		
	PA703	EMV7163-012	CONNECT TER 12PIN		
	PA807	VMC0261-012	CONNECT TER 12PIN		
	RY901	ESK7D24-2120	RELAY		
	ST901	FMMJ4002-001	SPEAKER TER		

■ FMB-004 □ Front, Tone Control & Power Supply PC Board Ass'y

Note: FMB-004 □ varies according to the areas employed. See note (2) when placing an order.

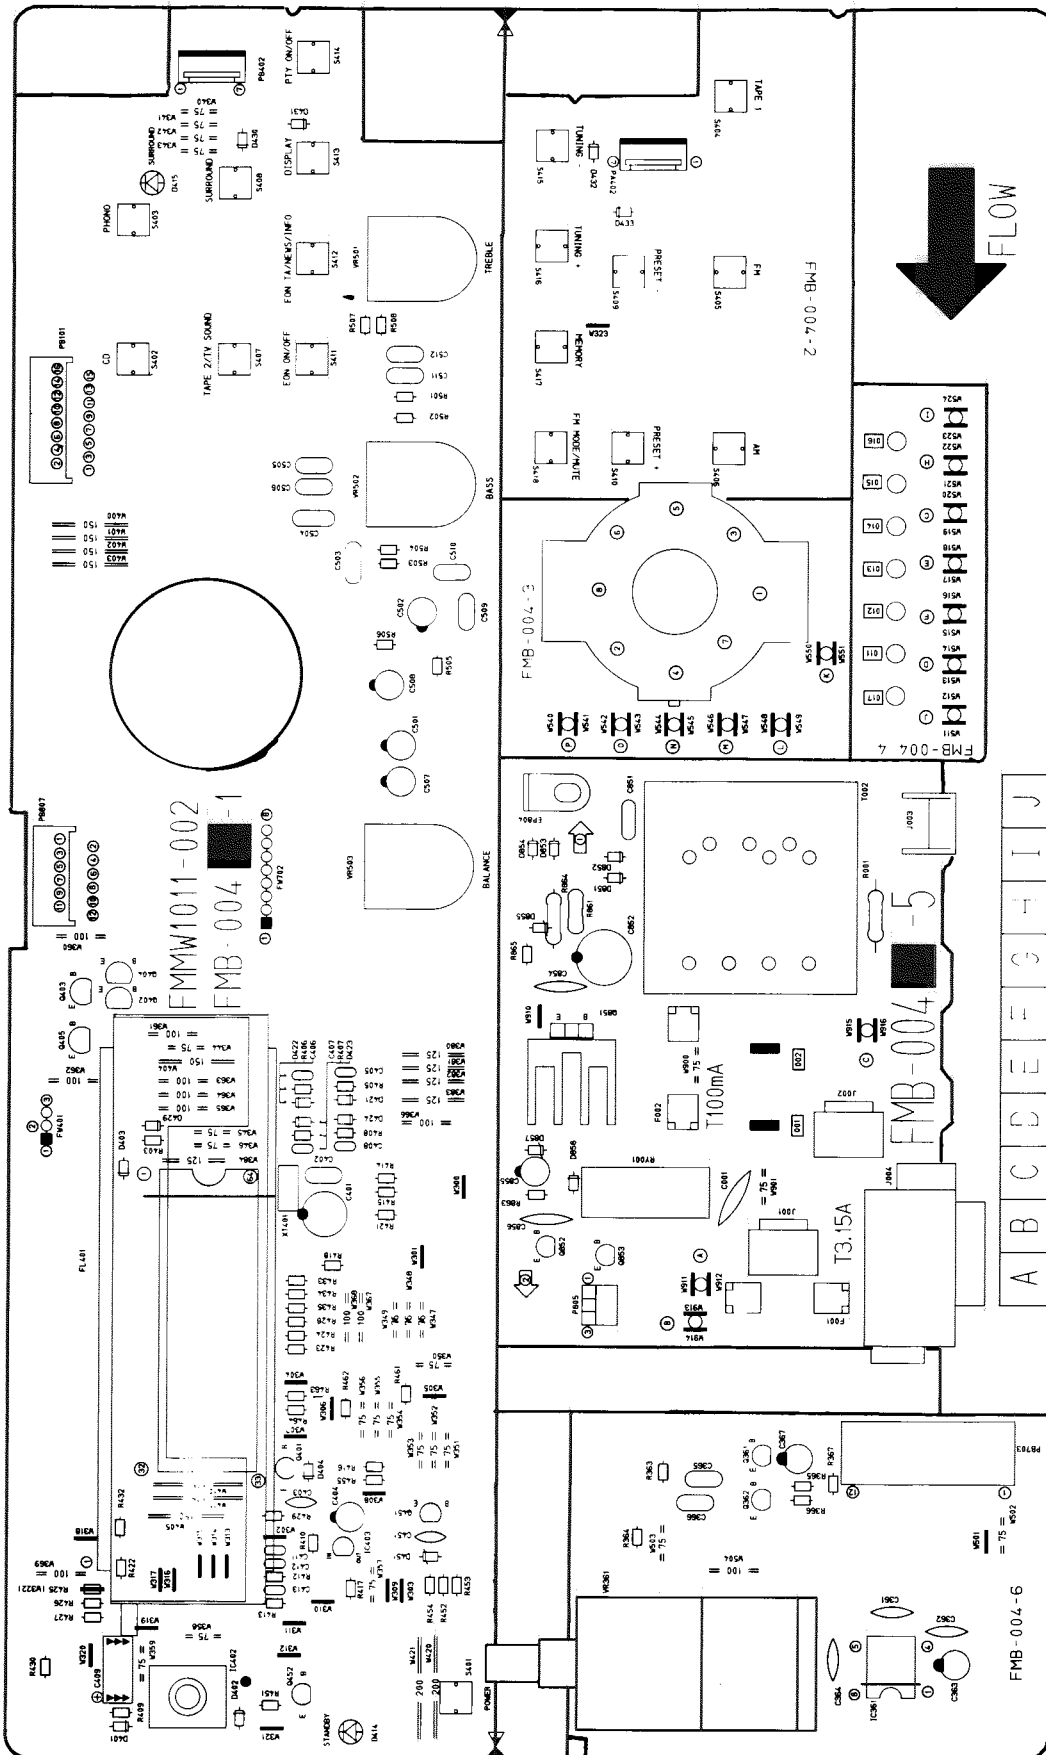

Note (2)

PC Board Ass'y	Version	Designated Areas
FMB-004 A	BS	the U.K.
FMA-002 B	EF	Continental Europe
	EN	Scandinavia
	G	Germany
FMA-002 C	GI	Italy

TRANSISTORS

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	Q361	2SD2144S(VW)	SI.TRANSIST ROHM	
	Q362	2SD2144S(VW)	SI.TRANSIST ROHM	
	Q401	DTC114YS	DIGITAL TRA ROHM	
	Q402	DTC114YS	DIGITAL TRA ROHM	
	Q403	DTC114YS	DIGITAL TRA ROHM	
	Q404	DTC114YS	DIGITAL TRA ROHM	
	Q405	DTC114YS	DIGITAL TRA ROHM	
	Q451	2SC1740S(R,S)	SI.TRANSIST ROHM	
	Q452	2SC1740S(R,S)	SI.TRANSIST ROHM	
	Q852	2SC2235(O,Y)	SI.TRANSIST TOSHIBA	
	Q853	BA1L3Z	DIGITAL TRA NEC	

I. C. S.

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	IC361	LB1639-CV	I.C(DIGI-OT SANYO	
	IC401	MN171202J5C	I.C(MICRO-C MATSUSHITA	
	IC402	NJH32H380A	I.C(M) DAINICHI	
	IC403	PST600E-T	I.C(MONO-AN 0062	

DIODES

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	D401	1SS133	SI.DIODE ROHM	
	D402	1SS133	SI.DIODE ROHM	
	D403	1SS133	SI.DIODE ROHM	
	D404	1SS133	SI.DIODE ROHM	
	D414	SLA-580LT70F124	L.E.D. ROHM	BS
	D414	SLR-54VC50F124	L.E.D. ROHM	EF
	D414	SLR-54VC50F124	L.E.D. ROHM	EN
	D414	SLR-54VC50F124	L.E.D. ROHM	G
	D414	SLR-54VC50F124	L.E.D. ROHM	GI
	D415	SLR-34DC50F124	L.E.D.	
	D422	1SS133	SI.DIODE ROHM	
	D429	1SS133	SI.DIODE ROHM	
	D430	1SS133	SI.DIODE ROHM	
	D431	1SS133	SI.DIODE ROHM	
	D432	1SS133	SI.DIODE ROHM	
	D433	1SS133	SI.DIODE ROHM	
	D451	MT27.5JC	ZENER DIODE ROHM	
	D851	1SR35-200A	SI.DIODE ROHM	
	D852	1SR35-200A	SI.DIODE ROHM	
	D853	1SR35-200A	SI.DIODE ROHM	
	D854	1SR35-200A	SI.DIODE ROHM	
	D857	MT26.2JC	ZENER DIODE ROHM	
	D858	1SS133	SI.DIODE ROHM	

CAPACITORS

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	C001	QCZ9019-472BS	4700PF CERAMIC	BS
	C001	QCZ9019-472	4700PF C.CAPACITO	EF
	C001	QCZ9019-472	4700PF C.CAPACITO	EN
	C001	QCZ9019-472	4700PF C.CAPACITO	G
	C001	QCZ9019-472	4700PF C.CAPACITO	GI
	C361	QCY21HK-331	330PF 50V CER.CAPACI	
	C362	QCY21HK-331	330PF 50V CER.CAPACI	
	C363	QETB0JM-107	100MF 6.3V AL E.CAPAC	
	C364	QCF21HP-473A	0.047MF 50V CER.CAPACI	
	C365	QFLB1HJ-104	0.1MF 50V MYLAR CAPA	

CAPACITORS

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	C366	QFLB1HJ-104	0.1MF 50V MYLAR CAPA	
	C367	QETB1EM-226	22MF 25V AL E.CAPAC	
	C401	QEK61AM-227ZM	220MF 10V AL E.CAPAC	
	C402	QCZ0202-155	1.5MF 25V CER.RESIST	
	C403	QCF21HP-223A	0.022MF 50V CER.CAPACI	
	C404	QEK51HM-225G	2.2MF 50V AL E.CAPAC	
	C405	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	C406	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	C407	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	C408	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	C409	QEAD0HZ-479A	47000MF E.CAPACITO	
	C411	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	C412	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	G413	QCBB1HK-102Y	1000PF 50V CER.CAPACI	
	C451	QCS21HJ-221	220PF 50V CER.CAPACI	
	C501	QEK51HM-105G	1MF 50V AL E.CAPAC	
	C502	QEK51HM-105G	1MF 50V AL E.CAPAC	
	C503	QFLB1HJ-823	0.082MF 50V MYLAR CAPA	
	C504	QFLB1HJ-823	0.082MF 50V MYLAR CAPA	
	C505	QFLB1HJ-153	0.015MF 50V MYLAR CAPA	
	C506	QFLB1HJ-153	0.015MF 50V MYLAR CAPA	
	C507	QETB1HM-105	1MF 50V AL E.CAPAC	
	C508	QETB1HM-105	1MF 50V AL E.CAPAC	
	C509	QFLB1HJ-332	3300PF 50V MYLAR CAPA	
	C510	QFLB1HJ-332	3300PF 50V MYLAR CAPA	
	C511	QFLB1HJ-183	0.018MF 50V MYLAR CAPA	
	C512	QFLB1HJ-183	0.018MF 50V MYLAR CAPA	
	C851	QFN82AJ-472	4700PF 100V MYLAR CAPA	
	C852	QETB1EM-227	220MF 25V AL E.CAPAC	
	C855	QETB1CM-476	47MF 16V AL E.CAPAC	
	C856	QCF21HP-472	4700PF 50V CER.CAPACI	

RESISTORS

Δ	ITEM	PART NUMBER	DESCRIPTION	AREA
	R363	QRD167J-682	6.8K 1/6W CARBON RES	
	R364	QRD167J-682	6.8K 1/6W CARBON RES	
	R365	QRD161J-222	2.2K 1/6W CARBON RES	
	R366	QRD161J-222	2.2K 1/6W CARBON RES	
	R367	QRD161J-202	2K 1/6W CARBON RES	
	R403	QRD161J-220	22 1/6W CARBON RES	
	R405	QRD161J-103	10K 1/6W CARBON RES	
	R406	QRD161J-103	10K 1/6W CARBON RES	
	R407	QRD161J-103	10K 1/6W CARBON RES	
	R408	QRD161J-103	10K 1/6W CARBON RES	
	R409	QRD161J-331	330 1/6W CARBON RES	
	R410	QRD167J-223	22K 1/6W CARBON RES	
	R412	QRD161J-221	220 1/6W CARBON RES	
	R413	QRD161J-221	220 1/6W CARBON RES	
	R414	QRD161J-271	270 1/6W CARBON RES	
	R415	QRD161J-221	220 1/6W CARBON RES	
	R416	QRD161J-472	4.7K 1/6W CARBON RES	
	R417	QRD161J-471	470 1/6W CARBON RES	
	R418	QRD161J-103	10K 1/6W CARBON RES	
	R421	QRD161J-471	470 1/6W CARBON RES	
	R423	QRD161J-471	470 1/6W CARBON RES	
	R424	QRD161J-471	470 1/6W CARBON RES	
	R426	QRD161J-471	470 1/6W CARBON RES	
	R427	QRD161J-471	470 1/6W CARBON RES	
	R428	QRD161J-471	470 1/6W CARBON RES	
	R429	QRD161J-471	470 1/6W CARBON RES	
	R430	QRD161J-471	470 1/6W CARBON RES	
	R432	QRD161J-471	470 1/6W CARBON RES	
	R433	QRD161J-471	470 1/6W CARBON RES	
	R434	QRD161J-471	470 1/6W CARBON RES	
	R435	QRD161J-471	470 1/6W CARBON RES	
	R451	QRD161J-103	10K 1/6W CARBON RES	
	R452	QRD161J-473	47K 1/6W CARBON RES	
	R453	QRD167J-223	22K 1/6W CARBON RES	
	R454	QRD161J-471	470 1/6W CARBON RES	
	R455	QRD161J-103	10K 1/6W CARBON RES	
	R461	QRD161J-471	470 1/6W CARBON RES	
	R462	QRD161J-471	470 1/6W CARBON RES	
	R463	QRD161J-471	470 1/6W CARBON RES	
	R464	QRD161J-471	470 1/6W CARBON RES	
	R501	QRD161J-203	20K 1/6W CARBON RES	
	R502	QRD161J-203	20K 1/6W CARBON RES	
	R503	QRD161J-362	3.6K 1/6W CARBON RES	
	R504	QRD161J-362	3.6K 1/6W CARBON RES	
	R505	QRD161J-472	4.7K 1/6W CARBON RES	
	R506	QRD161J-472	4.7K 1/6W CARBON RES	
	R507	QRD161J-821	820 1/6W CARBON RES	
	R508	QRD161J-821	820 1/6W CARBON RES	
	R861	QRD14CJ-270SX	27 1/4W UNF.CARBON	BS
	R861	QRD14CJ-220S	22 1/4W UNF.CARBON	EF
	R861	QRD14CJ-220S	22 1/4W UNF.CARBON	EN
	R861	QRD14CJ-220S	22 1/4W UNF.CARBON	G
	R861	QRD14CJ-220S	22 1/4W UNF.CARBON	GI
	R863	QRV144F-8200	1/4W CONST.META	
	VR361	QVDB71B-E15BJ5	100K VARIABLE R	

Δ IS A SAFETY PARTS

RESISTORS

OTHERS

ITEM	PART NUMBER	DESCRIPTION	AREA
VR501	QVDB92C-E15CJ3	100K VARIABLE R	
VR502	QVDB92C-E15CJ3	100K VARIABLE R	
VR503	QVDA92W-E15EJ3	100K VARIABLE R	

ITEM	PART NUMBER	DESCRIPTION	AREA
S412	ESP0001-023M	TACT SWITCH EON TA/NEWS/INFO	
S413	ESP0001-023M	TACT SWITCH DISPLAY	
S414	ESP0001-023M	TACT SWITCH PTY ON/OFF	
S415	ESP0001-023M	TACT SWITCH TUNING DOWN	
S416	ESP0001-023M	TACT SWITCH TUNING UP	
S417	ESP0001-023M	TACT SWITCH FM MODE/MUTE	
S418	ESP0001-023M	TACT SWITCH MEMORY	
T002	ETP1000-41EABS	POWER TRASN	BS
T002	ETP1000-41EA	POWER TRASN	EF
T002	ETP1000-41EA	POWER TRASN	EN
T002	ETP1000-41EA	POWER TRASN	G
T002	ETP1000-41EA	POWER TRASN	GI
EP804	EMZ4002-001Z	EARTH PLATE	
FH001	E309106-001SM	FL HOLDER	
FL401	ELU0001-183	FLUORESCENT	
FS001	E3400-431	FELT SPACER	
FS002	E3400-431	FELT SPACER	
FW401	EWR33D-30LS	FLAT WIRE A 3PIN	
FW702	EWR38D-30LS	FLAT WIRE A 8PIN	
PA402	VMC0261-R07	CONNECT TER 7PIN	
PB101	VMC0261-R16	CONNECT TER 16PIN	
PB402	VMC0261-R07	CONNECT TER 7PIN	
PB703	EMV5163-012R	CONNECT TER 12PIN	
PB807	VMC0261-R12	CONNECT TER 12PIN	
RY001	ESK1D12-118J1BS	RELAY	BS
RY001	ESK1D12-118J1	RELAY	EF
RY001	ESK1D12-118J1	RELAY	EN
RY001	ESK1D12-118J1	RELAY	G
RY001	ESK1D12-118J1	RELAY	GI
XT401	ECX0060-000EM	CERAMIC RES	


OTHERS

ITEM	PART NUMBER	DESCRIPTION	AREA
	FMMW1011-002	PRINTED BOA	
	EMZ4001-001	TAB	
	VMZ0087-001Z	FUSE HOLDER	
	QWE881-26RR	VINYL WIRE	
	QWE883-28RR	VINYL WIRE	
	FMMW1011-002BS	PRINTED BOA	BS
J002	EMV5137-002	CONNECT TER 2PIN	
J003	E70225-001	EARTH PLATE	
P805	EMV7122-103	CONNECT TER 3PIN	
S401	ESP0001-023M	TACT SWITCH POWER	
S402	ESP0001-023M	TACT SWITCH CD	
S403	ESP0001-023M	TACT SWITCH PHONO	
S404	ESP0001-023M	TACT SWITCH TAPE 1	
S405	ESP0001-023M	TACT SWITCH FM	
S406	ESP0001-023M	TACT SWITCH AM	
S407	ESP0001-023M	TACT SWITCH TAPE 2/TV SOUND	
S408	ESP0001-023M	TACT SWITCH SURROUND	
S409	ESP0001-023M	TACT SWITCH PRESET DOWN	
S410	ESP0001-023M	TACT SWITCH PRESET UP	
S411	ESP0001-023M	TACT SWITCH EON ON/OFF	

△ : ISIA/FI/ETV PARTS

■ FMA-002 □ Tuner PC Board Assy

Note: FMA-002 □ varies according to the areas employed. See note (3) when placing an order.

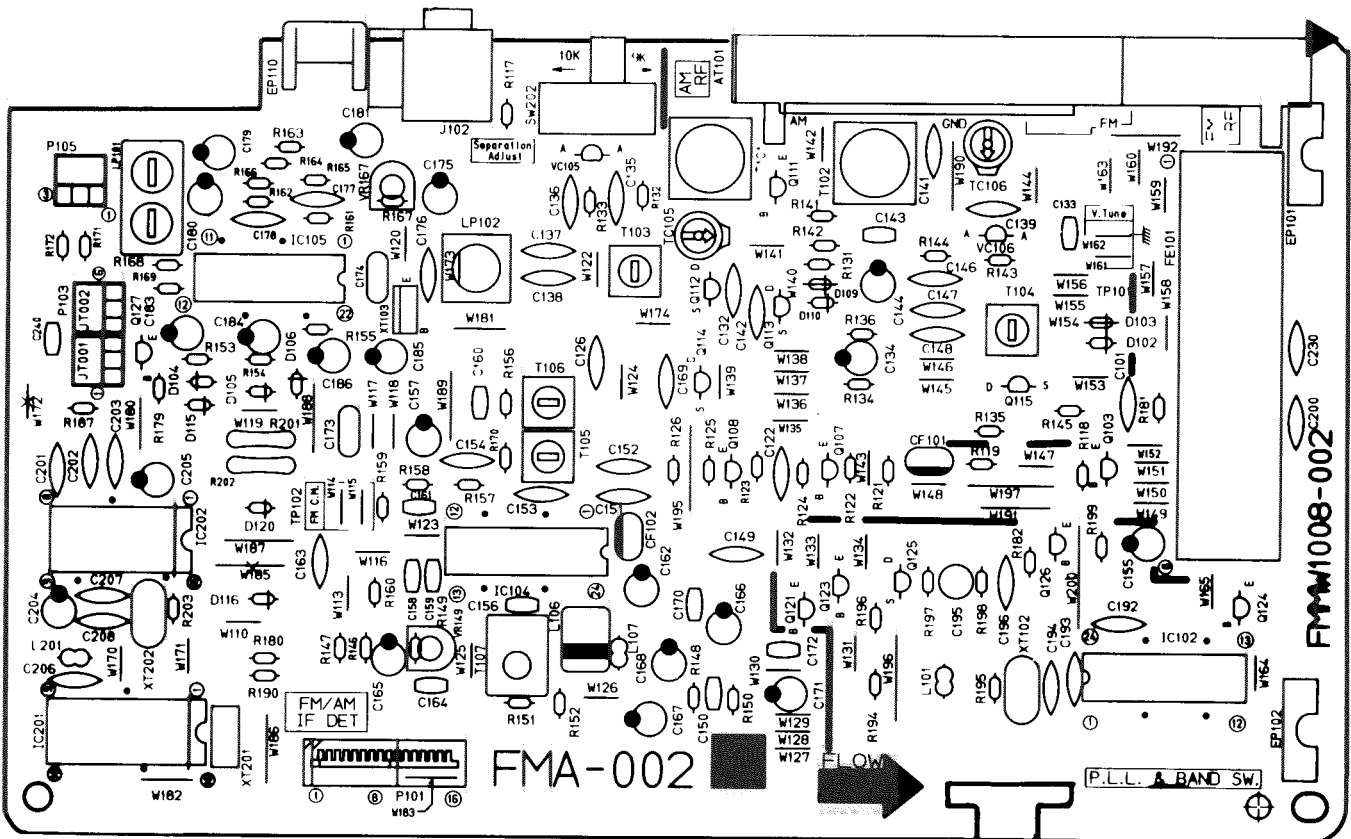

Note (3)

PC Board Ass'y	Version	Designated Areas
FMA-002 E	BS	the U.K.
FMA-002 D	EF EN	Continental Europe Scandinavia
FMA-002 G	G	Germany
FMA-002 F	GI	Italy

TRANSISTORS

Δ ITEM	PART NUMBER	DESCRIPTION	AREA
Q103	2SC461	SI. TRANSIST	
Q107	2SC535	SI. TRANSIST HITACHI	
Q108	2SC461	SI. TRANSIST	
Q111	2SD1302	SI. TRANSIST MATSUSHITA	
Q112	2SK301(P,Q)	F.E.T. MATSUSHITA	
Q113	2SK301(P,Q)	F.E.T. MATSUSHITA	
Q114	2SK301(P,Q)	F.E.T. MATSUSHITA	
Q115	2SK301(P,Q)	F.E.T. MATSUSHITA	
Q121	BN1A4P	DIGITAL TRA NEC	
Q123	BN1A4P	DIGITAL TRA NEC	
Q124	BN1A4P	DIGITAL TRA NEC	
Q125	2SK301(P,Q)	F.E.T. MATSUSHITA	
Q126	2SC458(C,D)	SI. TRANSIST HITACHI	
Q127	BA1L4M	DIGITAL TRA NEC	

I. C. S.

Δ ITEM	PART NUMBER	DESCRIPTION	AREA
IC102	LC7218	I.C(DIGI-MO	
IC104	LA1266A	I.C(MONO-AN SANYO	
IC105	LA3401	I.C(MONO-AN SANYO	
IC201	LC7073	I.C(DIGI-MO SANYO	
IC202	SAA6579	I.C(M)	

DIODES

Δ ITEM	PART NUMBER	DESCRIPTION	AREA
D102	1SS133	SI. DIODE ROHM	
D103	1SS133	SI. DIODE ROHM	
D104	1SS133	SI. DIODE ROHM	
D105	1SS133	SI. DIODE ROHM	
D106	1SS133	SI. DIODE ROHM	
D109	1SS133	SI. DIODE ROHM	
D110	1SS133	SI. DIODE ROHM	
D115	1SS133	SI. DIODE ROHM	
D116	1SS133	SI. DIODE ROHM	
D120	1SS133	SI. DIODE ROHM	
VC105	SVC342(L)	VARI-CAPA D SANYO	
VC106	SVC342(L)	VARI-CAPA D SANYO	

CAPACITORS

Δ ITEM	PART NUMBER	DESCRIPTION	AREA
C101	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C122	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C126	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C132	QCS31HJ-561Z	560PF 50V CER. CAPACI	
C133	QCHB1EZ-223	0.022MF 25V CER. CAPACI	
C134	QETB1EM-106	10MF 25V AL E. CAPAC	
C135	QCC21EM-223	0.022MF 25V CER. CAPACI	
C136	QCT25CH-180Z	18PF 50V CER. CAPACI	
C137	QCT26CH-221	220PF 50V CER. CAPACI	
C138	QCT26CH-241	240PF 50V CER. CAPACI	
C139	QCC21EM-223	0.022MF 25V CER. CAPACI	
C141	QCS21HJ-270	27PF 50V CER. CAPACI	
C142	QCY31HK-272Z	2700PF 50V CER. CAPACI	
C143	QCHB1EZ-223	0.022MF 25V CER. CAPACI	
C144	QETB1EM-106	10MF 25V AL E. CAPAC	
C146	QCT26CH-680	68PF 50V CER. CAPACI	
C147	QCT25CH-220Z	22PF 50V CER. CAPACI	
C148	QCT25CH-121	120PF 50V CER. CAPACI	
C149	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C150	QCHB1EZ-223	0.022MF 25V CER. CAPACI	

CAPACITORS

Δ ITEM	PART NUMBER	DESCRIPTION	AREA
C151	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C152	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C153	QCC21EM-223	0.022MF 25V CER. CAPACI	
C154	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C155	QETB1EM-226	22MF 25V AL E. CAPAC	
C156	QCVB1CM-103Y	0.01MF 16V CER. CAPACI	
C157	QETB1HM-474	0.47MF 50V ELECTRO	
C158	QCBB1HK-101Y	100PF 50V CER. CAPACI	
C159	QCBB1HK-101Y	100PF 50V CER. CAPACI	
C160	QCBB1HK-101Y	100PF 50V CER. CAPACI	
C161	QCHB1EZ-223	0.022MF 25V CER. CAPACI	
C162	QETB1EM-106	10MF 25V AL E. CAPAC	
C163	QCY31HK-332Z	3300PF 50V CER. CAPACI	
C164	QCHB1EZ-223	0.022MF 25V CER. CAPACI	
C165	QETB1HM-474	0.47MF 50V ELECTRO	
C166	QETB1HM-225	2.2MF 50V AL E. CAPAC	
C167	QETB1HM-225	2.2MF 50V AL E. CAPAC	
C168	QETB1HM-475E	4.7MF 50V E. CAPACITO	
C169	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C170	QCHB1EZ-223	0.022MF 25V CER. CAPACI	
C171	QETB1EM-106	10MF 25V AL E. CAPAC	
C172	QCVB1CM-103Y	0.01MF 16V CER. CAPACI	
C173	QFLB1HK-223	0.022MF 50V MYLAR CAPA	
C174	QFLB1HK-473	0.047MF 50V MYLAR CAPA	
C175	QETB1EM-106	10MF 25V AL E. CAPAC	
C176	QCY31HK-102Z	1000PF 50V CER. CAPACI	
C177	QCS21HJ-271A	270PF 50V CER. CAPACI	
C178	QCS21HJ-271A	270PF 50V CER. CAPACI	
C179	QETB1HM-225	2.2MF 50V AL E. CAPAC	
C180	QETB1HM-225	2.2MF 50V AL E. CAPAC	
C181	QETB1EM-106	10MF 25V AL E. CAPAC	
C183	QETB1HM-105	1MF 50V AL E. CAPAC	
C184	QETB1HM-105	1MF 50V AL E. CAPAC	
C185	QETB1HM-225	2.2MF 50V AL E. CAPAC	
C186	QETB1HM-474	0.47MF 50V ELECTRO	
C192	QCC21EM-473	0.047MF 25V CER. CAPACI	
C193	QCS21HJ-180A	18PF 50V CER. CAPACI	
C194	QCS21HJ-180A	18PF 50V CER. CAPACI	
C195	QEN51HM-474	0.47MF 50V NP E. CAPAC	
C196	QCY31HK-102Z	1000PF 50V CER. CAPACI	
C201	QCS31HJ-561Z	560PF 50V CER. CAPACI	
C202	QCF21HP-223A	0.022MF 50V CER. CAPACI	
C203	QCS31HJ-331Z	330PF 50V CER. CAPACI	
C204	QETC1CM-106Z	10MF 16V AL E. CAPAC	
C205	QETB1HM-225	2.2MF 50V AL E. CAPAC	
C206	QCC21EM-104	0.1MF 25V CER. CAPACI	
C207	QCS21HJ-470	47PF 50V CER. CAPACI	
C208	QCS21HJ-820	82PF 50V CER. CAPACI	
C230	QCF21HP-103A	0.01MF 50V CER. CAPACI	
C240	QCBB1HK-101Y	100PF 50V CER. CAPACI	

RESISTORS

Δ ITEM	PART NUMBER	DESCRIPTION	AREA
R117	QRD161J-100	10 1/6W CARBON RES	
R118	QRD167J-332	3.3K 1/6W CARBON RES	
R119	QRD161J-221	220 1/6W CARBON RES	
R121	QRD161J-391	390 1/6W CARBON RES	
R122	QRD167J-272	2.7K 1/6W CARBON RES	
R123	QRD161J-102	1K 1/6W CARBON RES	
R124	QRD161J-681	680 1/6W CARBON RES	
R125	QRD167J-332	3.3K 1/6W CARBON RES	
R126	QRD161J-221	220 1/6W CARBON RES	
R131	QRD161J-331	330 1/6W CARBON RES	
R132	QRD161J-103	10K 1/6W CARBON RES	
R133	QRD161J-473	47K 1/6W CARBON RES	
R134	QRD161J-103	10K 1/6W CARBON RES	
R135	QRD161J-470	47 1/6W CARBON RES	
R136	QRD161J-103	10K 1/6W CARBON RES	
R141	QRD161J-472	4.7K 1/6W CARBON RES	
R142	QRD161J-331	330 1/6W CARBON RES	
R143	QRD161J-103	10K 1/6W CARBON RES	
R144	QRD161J-473	47K 1/6W CARBON RES	
R145	QRD161J-103	10K 1/6W CARBON RES	
R146	QRD167J-560	56 1/6W CARBON RES	
R147	QRD161J-103	10K 1/6W CARBON RES	
R148	QRD161J-103	10K 1/6W CARBON RES	
R149	QRD161J-273	27K 1/6W CARBON RES	
R150	QRD161J-103	10K 1/6W CARBON RES	
R151	QRD161J-224	220K 1/6W CARBON RES	
R152	QRD161J-103	10K 1/6W CARBON RES	
R153	QRD161J-103	10K 1/6W CARBON RES	
R154	QRD161J-103	10K 1/6W CARBON RES	
R155	QRD167J-562	5.6K 1/6W CARBON RES	
R157	QRD161J-103	10K 1/6W CARBON RES	
R158	QRD161J-333	33K 1/6W CARBON RES	
R159	QRD161J-561	560 1/6W CARBON RES	
R160	QRD161J-273	27K 1/6W CARBON RES	
R161	QRD161J-184	180K 1/6W CARBON RES	
R162	QRD161J-184	180K 1/6W CARBON RES	
R163	QRD167J-332	3.3K 1/6W CARBON RES	
R164	QRD167J-332	3.3K 1/6W CARBON RES	
R165	QRD161J-274	270K 1/6W CARBON RES	
R166	QRD161J-274	270K 1/6W CARBON RES	

RESISTORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	R168	QRD161J-103	10K 1/6W CARBON RES	
	R169	QRD161J-103	10K 1/6W CARBON RES	
	R170	QRD167J-822	8.2K 1/6W CARBON RES	
	R171	QRD167J-682	6.8K 1/6W CARBON RES	
	R172	QRD167J-682	6.8K 1/6W CARBON RES	
	R179	QRD167J-562	5.6K 1/6W CARBON RES	
	R180	QRD161J-472	4.7K 1/6W CARBON RES	
	R181	QRD161J-222	2.2K 1/6W CARBON RES	
	R182	QRD161J-181	180 1/6W CARBON RES	
	R187	QRD161J-101	100 1/6W CARBON RES	
	R190	QRD161J-472	4.7K 1/6W CARBON RES	
	R194	QRD161J-472	4.7K 1/6W CARBON RES	
	R195	QRD161J-473	47K 1/6W CARBON RES	
	R196	QRD161J-222	2.2K 1/6W CARBON RES	
	R197	QRD161J-222	2.2K 1/6W CARBON RES	
	R198	QRD167J-822	8.2K 1/6W CARBON RES	
	R199	QRD161J-472	4.7K 1/6W CARBON RES	
△	R201	QRZ0077-680	68 1/4W FUSIBLE RE	
△	R202	QRZ0077-470	47 1/4W FUSIBLE RE	
	R203	QRD161J-222	2.2K 1/6W CARBON RES	
	VR167	QVPE601-104	100K 0.15W TRIMMER RE	

△ : SAFETY PARTS

OTHERS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	J102	FMMW1008-002A	PRINTED BOA	
	L101	QMS3501-021	PIN JACK	
	L106	EQL4007-1R0	INDUCTOR	
	L201	EQL3001-102K	INDUCTOR	
	L201	EQL4007-101	INDUCTOR	
	P101	VMC0261-016	CONNECT TER 16PIN	
	T101	EQR1111-014	RF COIL	
	T102	FMQ20001-001	RF COIL	
	T103	EQR1207-015	RF COIL	
	T104	EQR1307-009	RF COIL	
	T105	EQT2140-017	I.F.TRANSFO	
	T107	ECB1560-010	CERAMIC FIL	
	AT101	EMB41YV-301K	ANTENNA TER	
	CF101	ECB2118-007R	CERAMIC FIL	
	CF102	ECB2118-007R	CERAMIC FIL	
	EP101	E65396-003	EARTH PLATE	
	EP102	E65396-003	EARTH PLATE	
	EP110	E70225-001	EARTH PLATE	
	FE101	EAF2203-005	FRONT END	
	JT001	EMV7122-103	CONNECT TER 3PIN	
	JT002	EMV7122-103	CONNECT TER 3PIN	
	LP101	EQF0101-002	LOWPASS FIL	
	LP102	EQF0102-001	LOWPASS FIL	
	TC105	ENZ1003-006	TRIMMER CAP	
	TC106	ENZ1003-006	TRIMMER CAP	
	XT102	ECX0007-200KWJ1	CRYSTAL	
	XT103	ECX0000-456KR	CERAMIC RES	
	XT201	EFO-EC4004T4	CERAMIC RES	
	XT202	VCX5057-001	CRYSTAL	

Accessories List

Symbol No.

M	2	M	M
---	---	---	---

△	Item	Part Number	Part Name	Q'ty	Description	Area
	1	E30580-2189ABS	INSTRUCTION BOOK	1		BS
		E30580-2189A	INSTRUCTION BOOK	1		EF
		E30580-2190A	INSTRUCTION BOOK	1		EN
		E30580-2189A	INSTRUCTION BOOK	1		G
		E30580-2189A	INSTRUCTION BOOK	1		GI
	2	RM-SR316RU	WIRE-LESS REMOTE CONTROL	1		
	3	E03614-004	FM FEEDER ANTENNA	1		BS
		E03614-004	FM FEEDER ANTENNA	1		EF
		E03614-004	FM FEEDER ANTENNA	1		EN
		E67007-001	ANTENNA WIRE	1		G
		E03614-004	FM FEEDER ANTENNA	1		GI
	4	EQB4001-015	LOOP ANTENNA	1		
	5	UM-3(DJ)-2PSA	BATTERY	1		
	6	EMZ2001-014	ADAPTOR PLUG	1		BS
		EMZ2001-014	ADAPTOR PLUG	1		EF
		EMZ2001-014	ADAPTOR PLUG	1		EN
		EMZ2001-014	ADAPTOR PLUG	1		GI
	7	E300196-033B	POLY BAG	1		
	-	E43486-340A	SAFETY SHEET	1		BS
	-	BT20060	WARRANTY CARD	1		BS
△	-	BT-20066A	WARRANTY CARD	1		BS
	-	EMC0202-001BS	AC PLUG	1		BS
	-	E43486-371A	INSTRUCTION SHEET	1		BS
	-	BT-20134	WARRANTY CARD	1		G

The Marks for Designated Areas


BS .. the U.K. EF ... Continental Europe ... EN Scandinavia
 G ... Germany GI ... Italy

No mark indicates all area.

Packing Materials and Part Numbers

Symbol No.


M	3	M	M
---	---	---	---

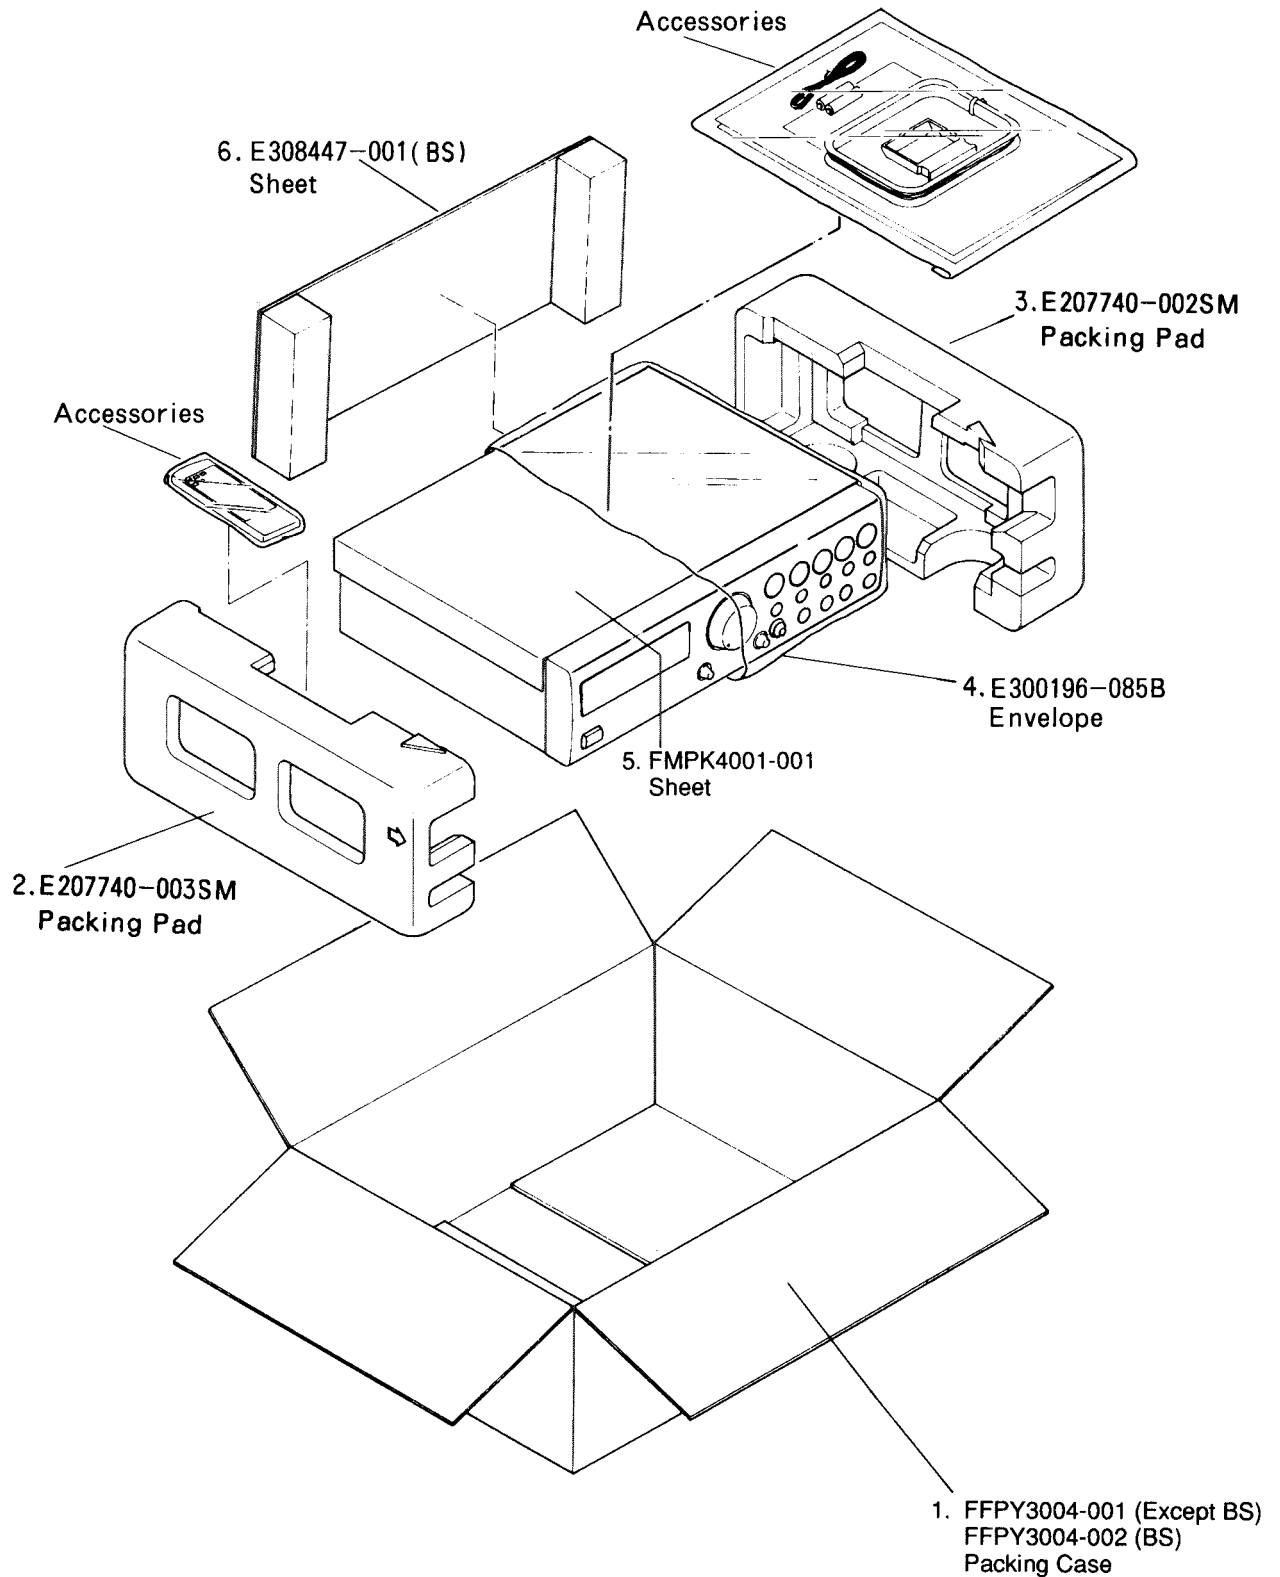

The Marks for Designated Areas			
BS	the U.K.	
G	Germany	
No mark indicates all area.			
EF	Continental Europe	EN
GI	Italy Scandinavia

-MEMO-


RX-316RBK

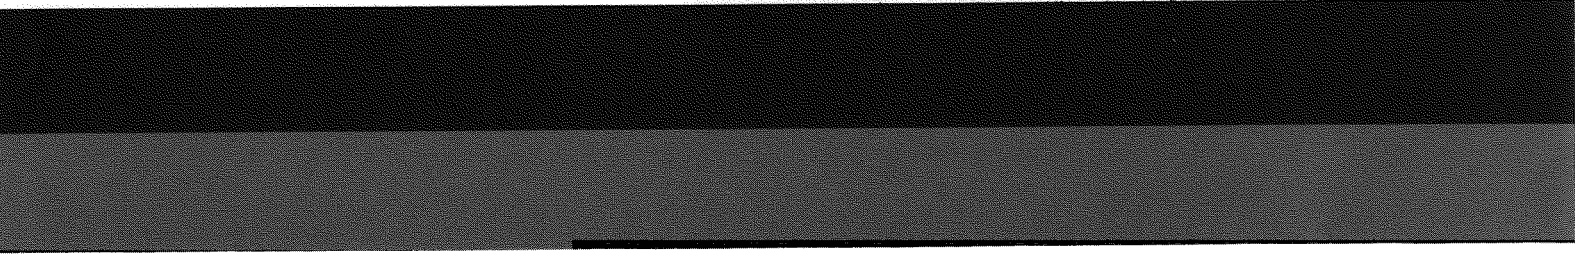

JVC

VICTOR COMPANY OF JAPAN, LIMITED
AUDIO PRODUCTS DIVISION 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

(No. 20504)

 Printed in Japa
9502[0]