

JVC

SERVICE MANUAL

AUDIO/VIDEO CONTROL RECEIVER

RX-6030VBK

Area suffix

J	-----	U.S.A.
C	-----	Canada

AV COMPU LINK

COMPU LINK
/// Remote ///

DIGITAL
dts
SURROUND

DD **DOLBY**
DIGITAL
PRO LOGIC II

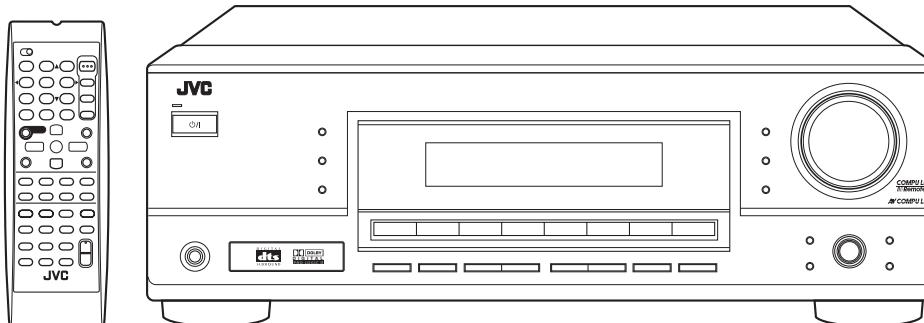


TABLE OF CONTENTS

1	Important Safety Precautions	1-2
2	Disassembly method	1-4
3	Adjustment	1-12
4	Description of major ICs	1-13

SECTION 1

Important Safety Precautions

1.1 Safety Precautions

- (1) This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
- (2) Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturers warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
- (3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (\triangle) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
- (4) The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after reassembling.
- (5) Leakage shock hazard testing)


After reassembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.

 - Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
 - Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 ohm 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an

exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

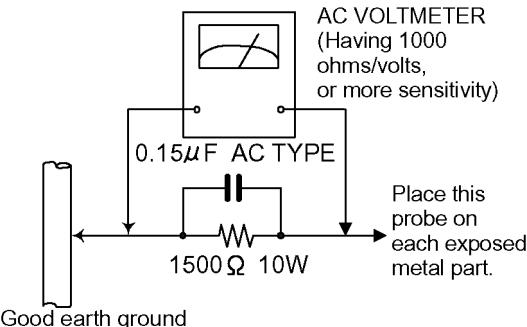

1.2 Warning

- (1) This equipment has been designed and manufactured to meet international safety standards.
- (2) It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
- (3) Repairs must be made in accordance with the relevant safety standards.
- (4) It is essential that safety critical components are replaced by approved parts.
- (5) If mains voltage selector is provided, check setting for local voltage.

1.3 Caution

Burrs formed during molding may be left over on some parts of the chassis.


Therefore, pay attention to such burrs in the case of performing repair of this system.

1.4 Critical parts for safety


In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (- - -), diode (□) and ICP (●) or identified by the " \triangle " mark nearby are critical for safety.

When replacing them, be sure to use the parts of the same type and rating as specified by the manufacturer. (Except the JC version)

1.5 Importance administering point on the safety

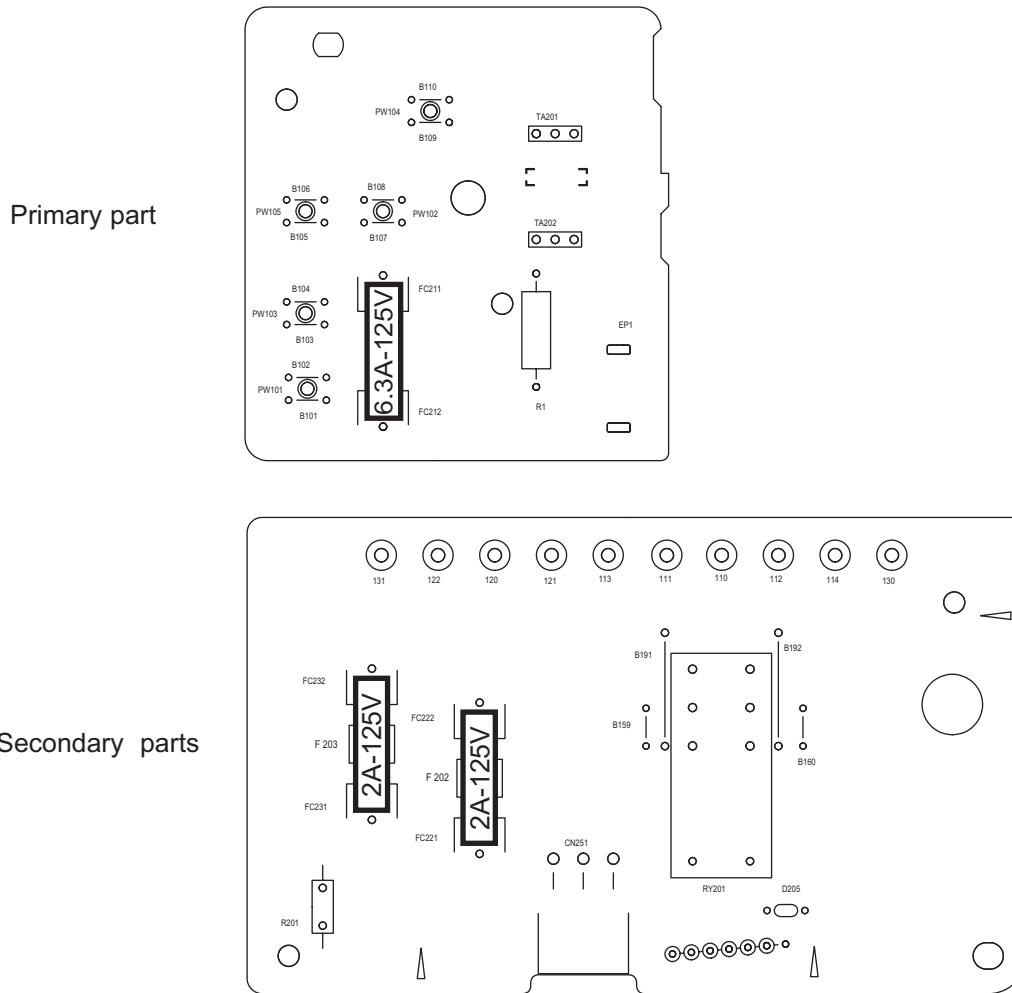

For USA and Canada / pour États - Unis d' Amérique et Canada

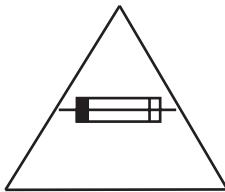

Caution: For continued protection against risk of fire, replace only with same type 6.3A/125V for F201, 2A/125V for F202 and F203.
This symbol specifies type of fast operating fuse.

Précaution: Pour eviter risques de feux, remplacez le fusible de sureté de F201 comme le même type que 6.3A/125V, et 2A/125V pour F202 et F203.
Ce sont des fusibles sûretes qui fonctionnent rapide.

SECTION 2

Disassembly method

2.1 Removing the top cover (See Fig.1)

- (1) From the right and left sides of the main body, remove the four screws **A** attaching the top cover.
- (2) From the back side of the main body, remove the three screws **B** attaching the top cover.
- (3) Remove the top cover in the direction of the arrow 2 while extending the lower sections of the top cover in the direction of the arrow 1.

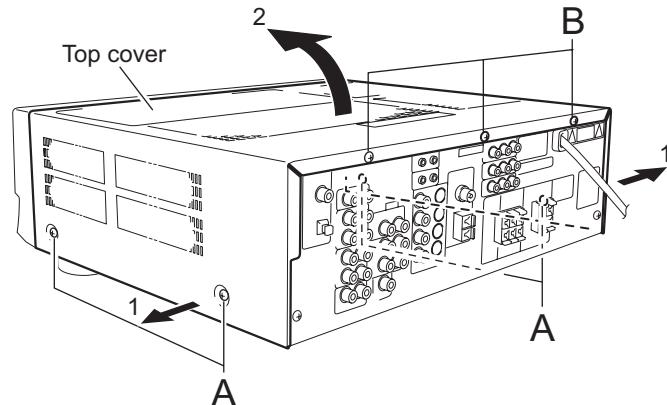


Fig.1

2.2 Removing the front panel assembly (See Figs.2 and 3)

- Prior to performing the following procedure, remove the top cover.
- (1) Disconnect the card wire from the connector CN402 on the audio board. (See Fig.2)
- (2) Disconnect the card wire from the connector CN201 on the power supply board. (See Fig.2)
- (3) Remove the tie band and wire protection board fixing the card wire. (See Fig.2)
- (4) Remove the three screws **C** attaching the front panel assembly. (See Fig.2)
- (5) From the bottom side of the main body, remove the four screws **D** attaching the front panel assembly. (See Fig.3)
- (6) Remove the front panel assembly in the direction of the arrow. (See Fig.3)

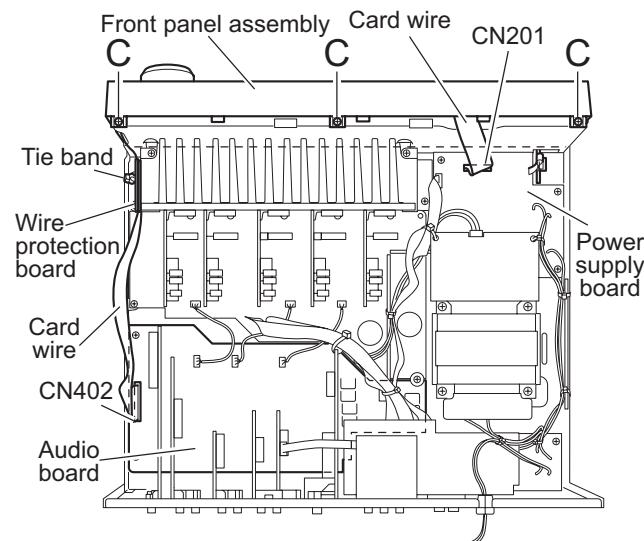


Fig.2

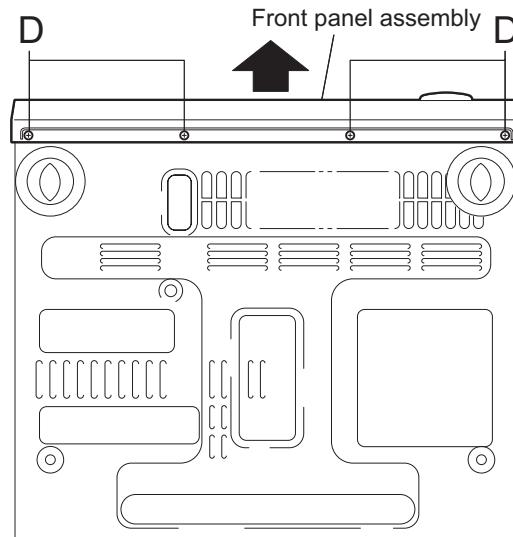


Fig.3

2.3 Removing the rear panel (See Fig.4)

- Prior to performing the following procedure, remove the top cover.

 - From the back side of the main body, remove the strain relief from the rear panel in the direction of the arrow.
 - Remove the twenty-five screws **E** and four screws **F** attaching the rear panel.

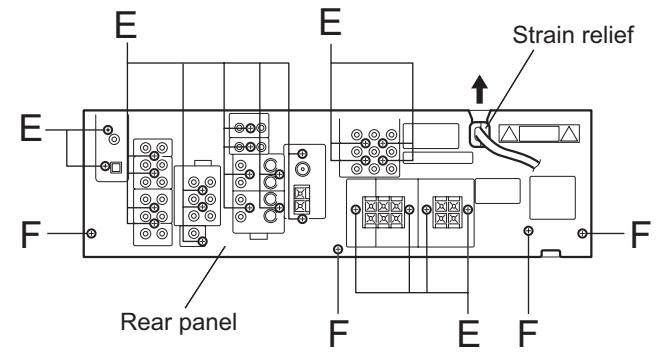


Fig.4

2.4 Removing the component board (See Figs.5 and 6)

- Prior to performing the following procedure, remove the top cover.

 - From the top side of the main body, disconnect the parallel wire from the connector CN511 on the S Video board. (See Fig.5)
 - From the back side of the main body, remove the four screws **G** attaching the component board. (See Fig.6)

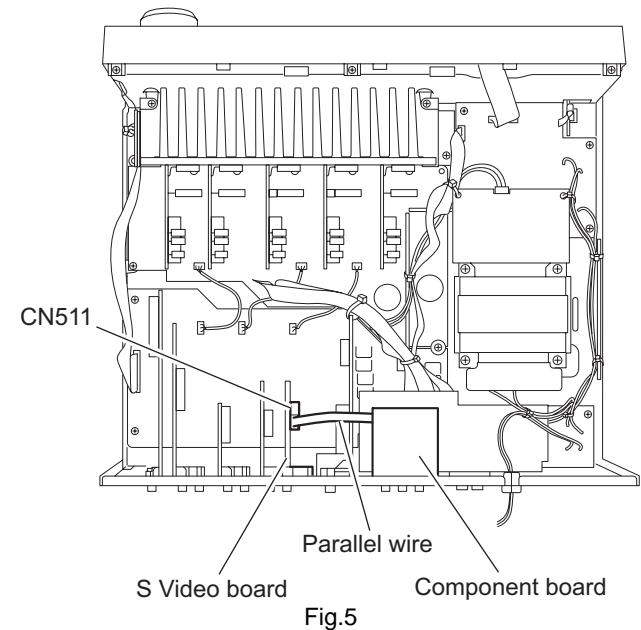


Fig.5

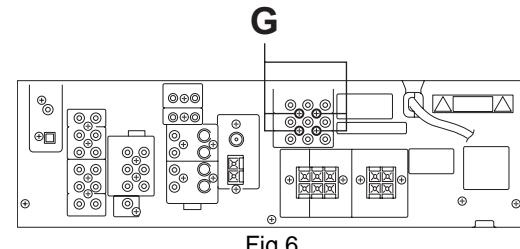


Fig.6

2.5 Removing the DSP board, audio input board, DVD board and video board (See Fig.7)

- Prior to performing the following procedure, remove the top cover and rear panel.
- From the top side of the main body, disconnect the DSP board from the connector CN481 on the audio board.
 - Disconnect the audio input board from the connector CN421 on the audio board.
 - Disconnect the DVD board from the connector CN431 on the audio board.
 - Disconnect the video board from the connector CN441 on the audio board.

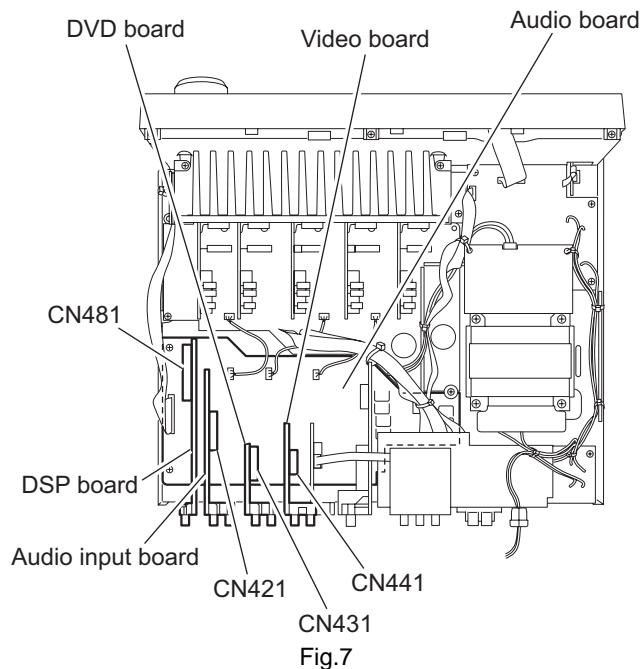


Fig.7

2.6 Removing the S Video board and tuner board (See Fig.8)

- Prior to performing the following procedure, remove the top cover and rear panel.
- From the top side of the main body, disconnect the parallel wire from the connector CN511 on the S Video board.
 - Disconnect the S Video board from the connector CN461 on the audio board.
 - Remove the tie band fixing the parallel wires, disconnect the tuner board from the connector CN411 on the audio board.

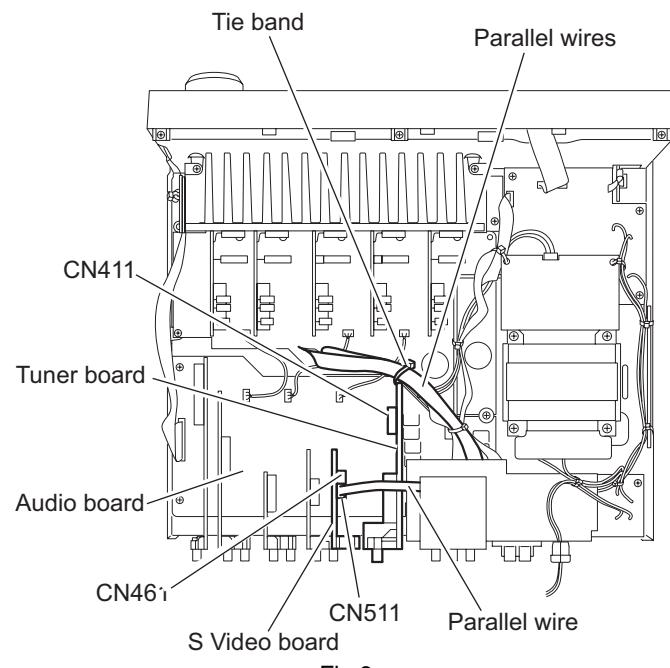


Fig.8

2.7 Removing the audio board (See Fig.9)

- Prior to performing the following procedure, remove the top cover, rear panel, component video board, DSP board, audio input board, DVD board, video board, S Video board and tuner board.

- From the top side of the main body, disconnect the card wire from the connector CN402 on the audio board.
- Disconnect the relay board from the connectors (CN291, CN491) on the power supply board and audio board.
- Disconnect the wires from the connectors CN471, CN472 and CN473 on the audio board.
- Remove the three screws **H** attaching the audio board.
- Loosen the screw **J** attaching the audio board.

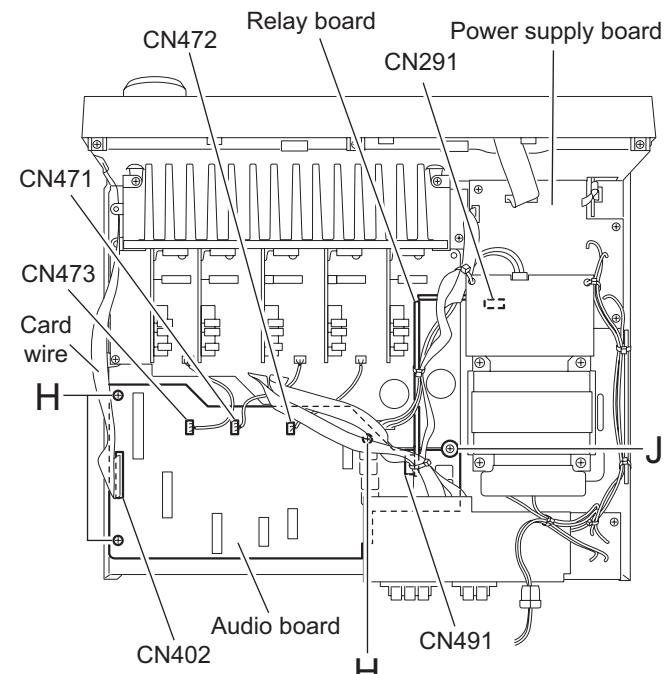


Fig.9

2.8 Removing the speaker terminal board (See Fig.10)

- Prior to performing the following procedure, remove the top cover and rear panel.
- From the top side of the main body, remove the solders from the soldered sections **a** on the speaker terminal board.


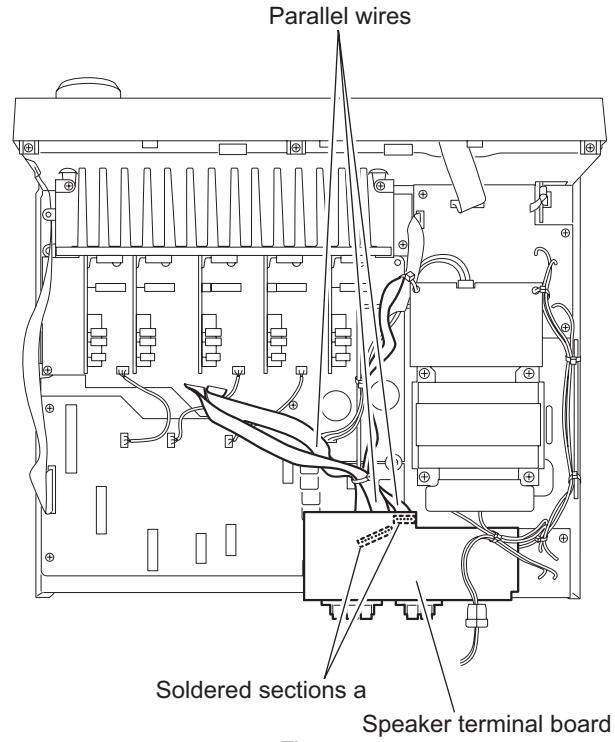


Fig.10



2.9 Removing the main board (See Fig.11)

- Prior to performing the following procedure, remove the top cover.
- (1) From the top side of the main body, remove the tie bands fixing the wires.
- (2) Remove the tie band and wire protection board fixing the card wire.
- (3) Remove the solders from the soldered section b on the speaker terminal board attaching the parallel wires.
- (4) Disconnect the relay board from the connectors (CN291, CN491) on the power supply board and audio board.
- (5) Disconnect the parallel wire from the connector CN241 on the power supply board.
- (6) Disconnect the wire from the connector CN251 on the power transformer board 1.
- (7) Disconnect the wires from the connectors CN471, CN472 and CN473 on the audio board.
- (8) Remove the screw J, two screws K and four screws L attaching the main board.
- (9) Take out the main board.

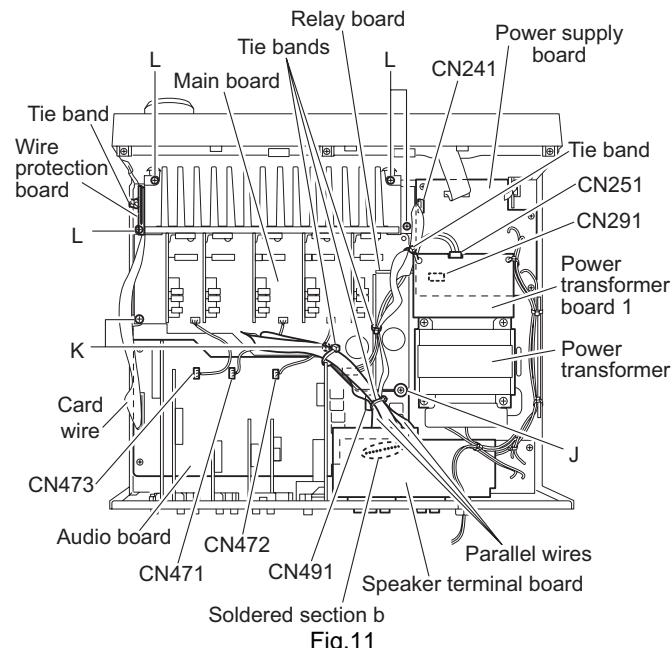

2.10 Removing the heat sink (See Figs.12 and 13)

- Prior to performing the following procedure, remove the top cover and main board.
- (1) Remove the ten screws M attaching the heat sink. (See Fig.12)
- (2) From the reverse side of the main board, remove the two screws N attaching the heat sink. (See Fig.13)

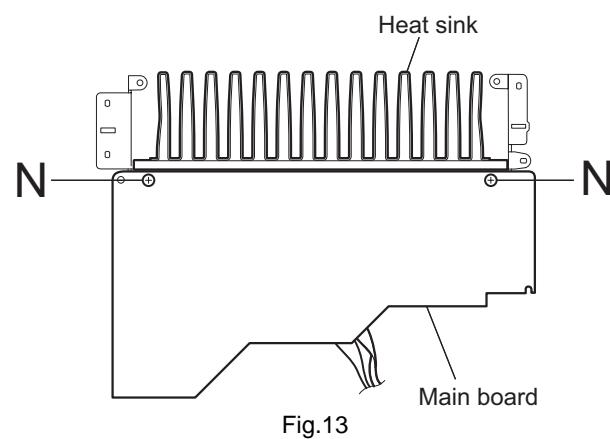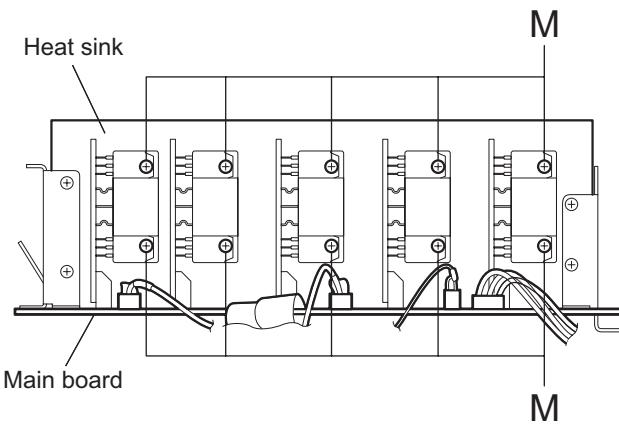

2.11 Removing the center amp. board, front amp. boards (L/R) and rear amp. boards (L/R) (See Figs.12 and 14)

- Prior to performing the following procedure, remove the top cover and main board.

 - Remove the ten screws **M** attaching the heat sink. (See Fig.12)
 - Disconnect the center amp. board from the connector CN321 on the main board. (See Fig.14)
 - Disconnect the front amp. board (L) from the connector CN311 on the main board. (See Fig.14)
 - Disconnect the front amp. board (R) from the connector CN312 on the main board. (See Fig.14)
 - Disconnect the rear amp. board (L) from the connector CN331 on the main board. (See Fig.14)
 - Disconnect the rear amp. board (R) from the connector CN332 on the main board. (See Fig.14)

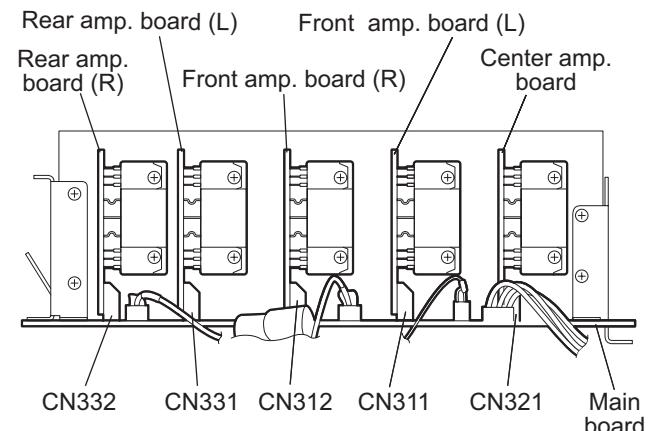


Fig.14

2.12 Removing the power transformer (See Fig.15)

- Prior to performing the following procedure, remove the top cover.

 - From the top side of the main body, remove the tie bands fixing the wires.
 - Remove the solders from the soldered section c on the power transformer board 1.
 - Remove the solders from the soldered sections d on the power transformer board 2.
 - Disconnect the wire from the connector CN251 on the power transformer board 1.
 - Remove the four screws **P** attaching the power transformer.

2.13 Removing the power/fuse board (See Fig.15)

- Prior to performing the following procedure, remove the top cover.

 - From the back and top sides of the main body, remove the screw **Q** and screw **R** attaching the power/fuse board.
 - Remove the solders from the soldered sections e attaching the power cord.
 - From the reverse side of the power/fuse board, remove the solders from the soldered sections f attaching the wires.

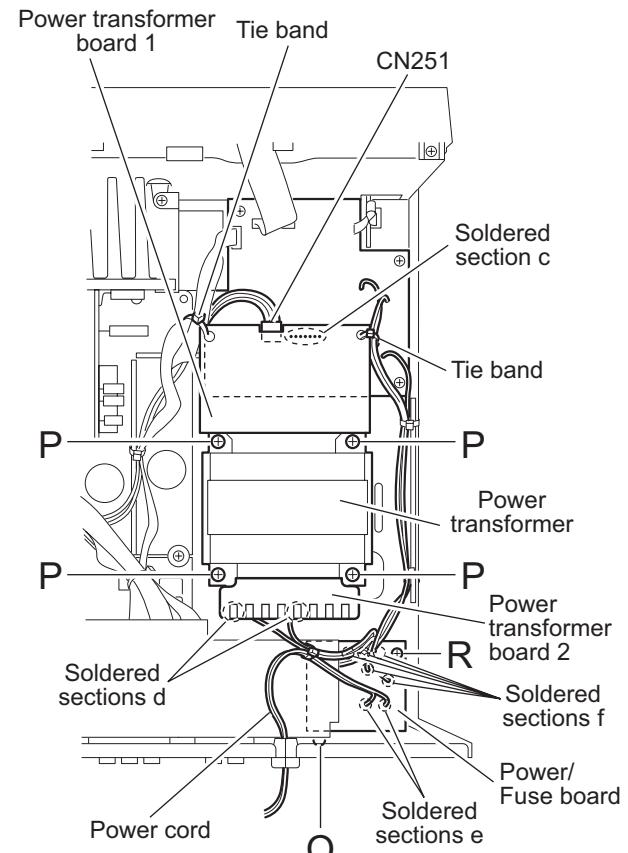


Fig.15

2.14 Removing the power supply board (See Fig.16)

- Prior to performing the following procedure, remove the top cover.
- (1) From the top side of the main body, disconnect the parallel wires from the connectors CN203 and CN241 on the power supply board.
- (2) Disconnect the card wire from the connector CN201 on the power supply board.
- (3) Disconnect the relay board from the connector CN291 on the power supply board.
- (4) Disconnect the parallel wire from the connector CN101 on the headphone jack board.
- (5) Remove the solders from the soldered section c on the power transformer board 1.
- (6) Remove the three screws **S** attaching the power supply board.
- (7) Remove the power supply board from the hook g of the chassis base bracket in the direction of the arrow, take out the power supply board.
- (8) Turn over the power supply board, remove the solders from the soldered sections h attaching the wires.

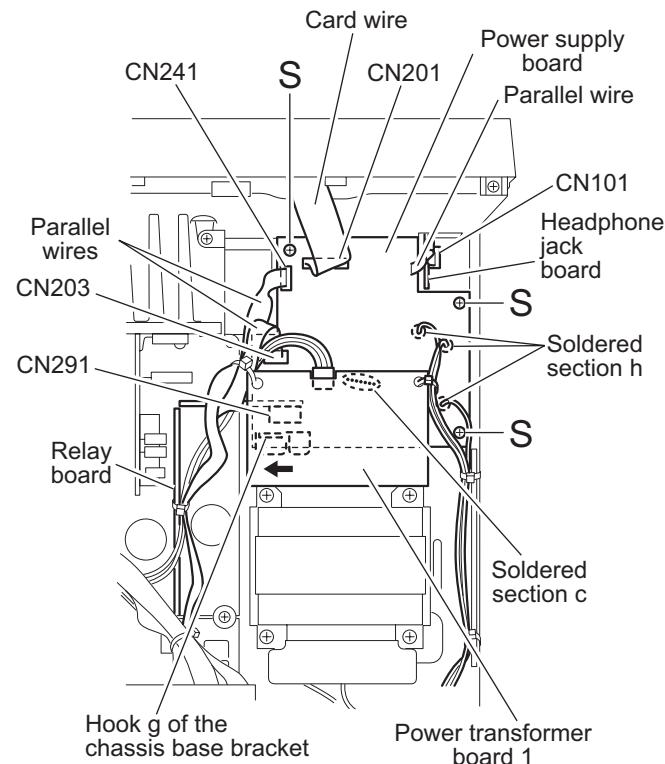


Fig.16

2.15 Removing the headphone jack board (See Figs.16 and 17)

- Prior to performing the following procedure, remove the top cover and front panel assembly.
- (1) From the top side of the main body, disconnect the parallel wire from the connector CN101 on the headphone jack board. (See Fig.16)
- (2) From the front side of the main body, remove the nut and screw **T** attaching the Bracket(phones) to the chassis base. (See Fig.17)

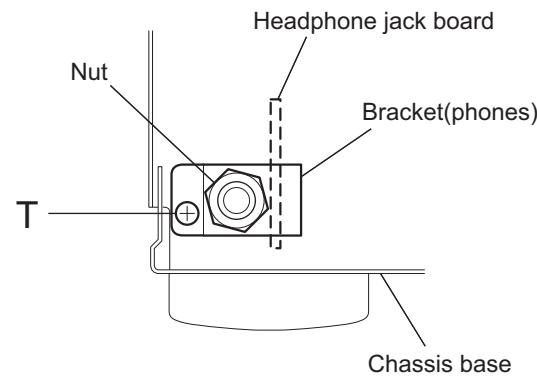


Fig.17

2.16 Removing the system control board and power switch board (See Figs.18 and 19)

- Prior to performing the following procedure, remove the top cover and front panel assembly.
- (1) Pull out the volume and jog knobs from the front side of the front panel assembly, remove the nut attaching the system control board. (See Fig.18)
- (2) From the back side of the front panel assembly, remove the nine screws **U** attaching the system control board. (See Fig.19)
- (3) Remove the solders of the soldered section **i** on the system control board and disconnect the parallel wire. (See Fig.19)
- (4) Remove the two screws **V** attaching the power switch board. (See Fig.19)

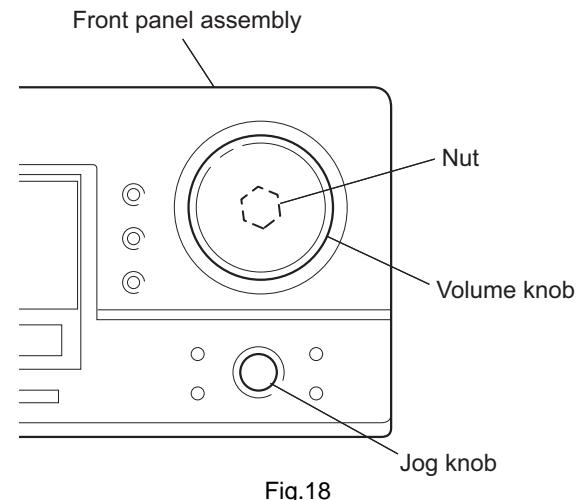


Fig.18

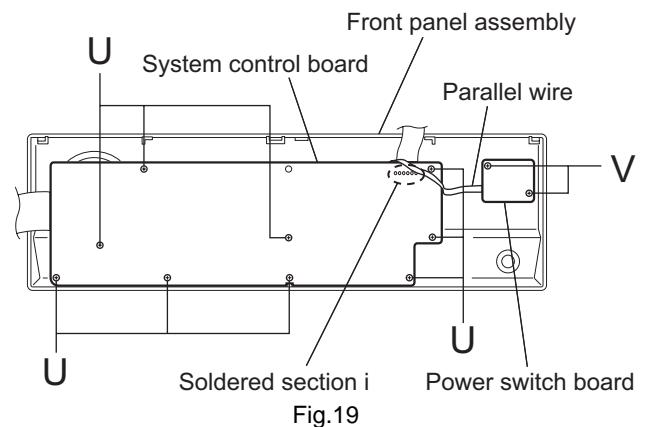


Fig.19

SECTION 3

Adjustment

3.1 Tuner section

3.1.1 Tuner range

FM: 87.5MHz~108.0MHz

AM (MW): 530kHz~1710kHz

3.2 Power amplifier section

3.2.1 Adjustment of idling current

Measurement location: TP301 (Lch), TP302 (Rch)

Adjustment part: VR301 (Lch), VR302 (Rch)

Attention:

This adjustment does not obtain a correct adjustment value immediately after the amplifier is used (state that an internal temperature has risen). Please adjust immediately after using the amplifier after turning off the power supply of the amplifier and falling an internal temperature.

3.2.2 Adjustment method

(1) Set the volume control to minimum during this adjustment. (No signal & No load)

(2) Set the surround mode OFF.


(3) Turn VR301 and VR302 fully counterclockwise to warm up before adjustment.

If the heat sink is already warm from previous use the correct adjustment can not be made.

(4) For L-ch, connect a DC voltmeter between TP301's B216 and B217 (Lch) and, connect it between TP302's B218 and B219 (Rch).

(5) Adjust the VR301 (Lch) and VR302 (Rch) so that the DC voltmeter indicates 2.0mV immediately after turning the power on.

* It is not abnormal though the idling current might not become 0mA even if it is finished to turn variable resistance (VR301, VR302) in the direction of counterclockwise.

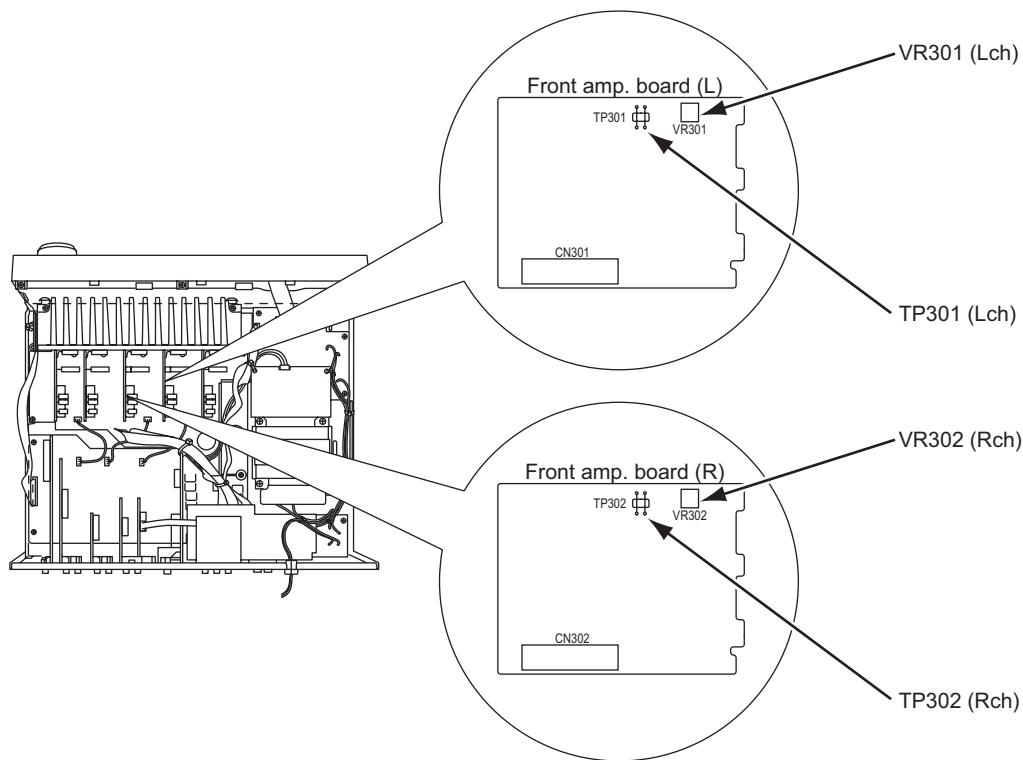


SECTION 4


Description of major ICs

4.1 TC9162AF-X (IC423): Analog switch

- Pin layout

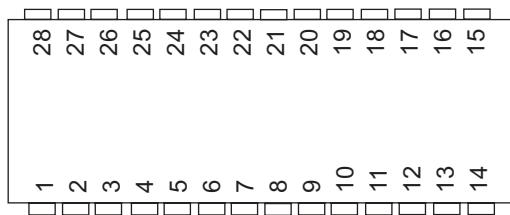


- Block diagram

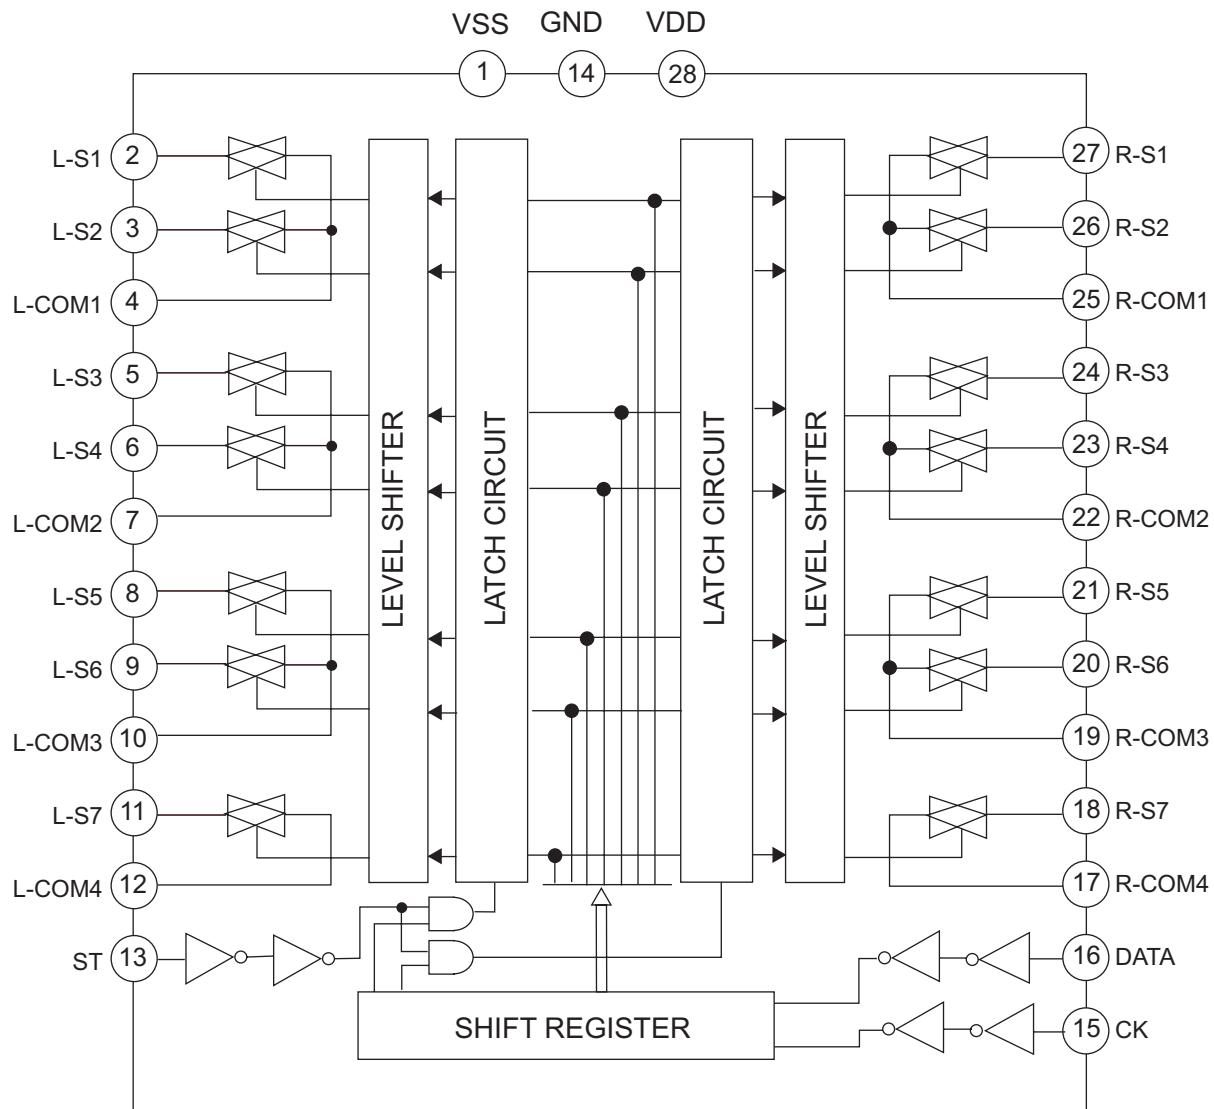

4.2 AK4527BVQP (IC601): A/D, D/A converter

- Pin layout

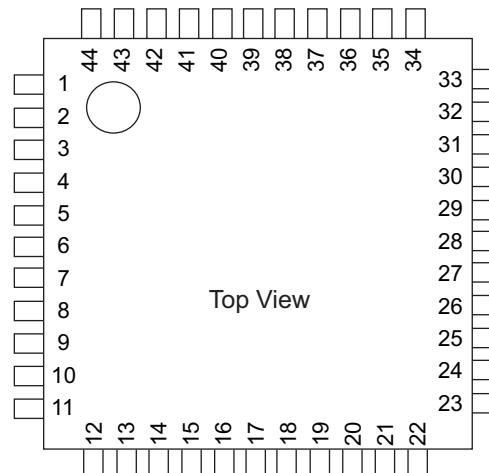

- Pin function

No.	Symbol	I/O	Function
1	SDOS	I	SDTO Source Select Pin (Note 1) "L" : Internal ADC output, "H" : DAUX input
2	OSKS	I	Control Mode Select Pin "L" : 3-wire Serial, "H" : I2C Bus
3	MIS	-	Soft Mute Pin (Note 1) Connect to GND When this pin goes to "H" soft mute cycle is initialized. When returning to "L", the output mute releases.
4	BICK	I	Audio Serial Data Clock Pin
5	LRCK	I/O	Input Channel Clock Pin
6	SDTI1	I	DAC1 Audio Serial Data Input Pin
7	SDTI2	I	DAC2 Audio Serial Data Input Pin
8	SDTI3	I	DAC3 Audio Serial Data Input Pin
9	SDTO	O	Audio Serial Data Output Pin
10	D,AUX	-	Sub Audio Serial Data Input Pin, Connect to GND
11	DFS	-	Double Speed Sampling Mode Pin (Note 1) "L" : Normal Speed, "H" : Double Speed
12	DEMI	-	Connect to GND No internal bonding.
13	DEMO	-	Zero Input Detect Enable Pin, Connect to GND "L" : mode 7 (disable) at parallel mode, zero detect mode is selectable by DZFM2-0 bits at serial mode. "H" : mode 0 (DZF is AND of all six channels)
14	MCKO	-	Output Buffer Power supply Pin, 2.7V~5.5V
15	DVDD	I	Digital Power Supply Pin, 4.5V~5.5V
16	DVSS	-	De-emphasis Pin, 0V
17	\overline{PD}	I	Power-Down & Reset Pin When "L", the AK4527B is powered-down and the control registers are reset to default state. If the state of P/S or CAD0-1 changes, then the AK4527B must be reset by PDN.
18	XTS	-	Test Pin, Connect to GND This pin should be connected to DVSS.
19	ICKS	-	Connect to GND No internal bonding.
20	ADIF	-	Analog Input Format Select Pin, Digital Power Supply H : Full-differential input "L" : Single-ended input


No.	Symbol	I/O	Function
21	CAD1	-	Chip Address 1 Pin, Connect to GND
22	CAD0	O	Chip Address 0 Pin, Connect to GND
23	LOUT3	O	DAC3 Lch Analog Output Pin
24	ROUT3	O	DAC3 Rch Analog Output Pin
25	LOUT2	O	DAC2 Lch Analog Output Pin
26	ROUT2	O	DAC2 Rch Analog Output Pin
27	LOUT1	O	DAC1 Lch Analog Output Pin
28	ROUT1	O	DAC1 Rch Analog Output Pin
29	LIN-	I	Lch Analog Negative Input Pin
30	LIN+	I	Lch Analog Positive Input Pin
31	RIN-	I	Rch Analog Negative Input Pin
32	RIN+	I	Rch Analog Positive Input Pin
33	VREFL	-	Zero Input Detect 2 Pin (Note 2), Non Connect When the input data of the group 1 follow total 8192LRCK cycles with "0" input data, this pin goes to "H".
	OVF	O	Analog Input Overflow Detect Pin (Note 3) This pin goes to "H" if the analog input of Lch or Rch is overflows.
34	VCOM	O	Common Voltage Output Pin, AVDD/2 Large external capacitor around 2.2uF is used to reduce power-supply noise.
35	VREFH	-	Positive Voltage Reference Input Pin, AVDD
36	AVDD	-	Analog Power Supply Pin, 4.5V~5.5V
37	AVSS	-	Analog Ground Pin, 0V
38	XTI	-	Zero Input Detect 1 Pin (Note 2) Non connect When the input data of the group 1 follow total 8192 LRCK cycles with "0" input data, this pin goes to "H".
39	XTO	I	Master Clock Input Pin
40	P1S	-	Parallel / Serial Select Pin "L" : Serial control mode, "H" : Parallel control mode
41	CS	I	Audio Data Interface Format 0 Pin in parallel mode
	CSN	I	Chip select pin in 3-wire serial control mode This pin should be connected to DVDD at I2C bus control mode
42	DIF1	I	Audio Data Interface Format 1 Pin in parallel mode
	SCL/CCLK	I	Control Data Clock Pin in serial control mode I2C = "L" : CCLK(3-wire Serial), I2C = "H" : SCL(I2CBus)
43	LOOP0	I	Loopback Mode 0 Pin in parallel control mode Enables digital loop-back from ADC to 3 DACs.
	SAD/CDTI	I/O	Control Data Input Pin in serial control mode I2C = "L" : CDTI(3-wire Serial), I2C = "H" : SDA(I2CBus)
44	CDTD	I	Loopback Mode 1 Pin (Note 1) Enable all 3 DAC channels to be input from SDTII.

Note:


- (1) SDOS, SMUTE, DFS, and LOOP1 pins are ORed with register data if P/S = "L".
- (2) The group 1 and 2 can be selected by DZFM2-0 bit if P/S = "L" and DZFME = "L".
- (3) This pin becomes OVF pin if OVFE bit is set to "1" at serial control mode.
- (4) All input pins should not be left floating.

4.3 BA033FP-X (IC681) : Regulator


- Pin layout

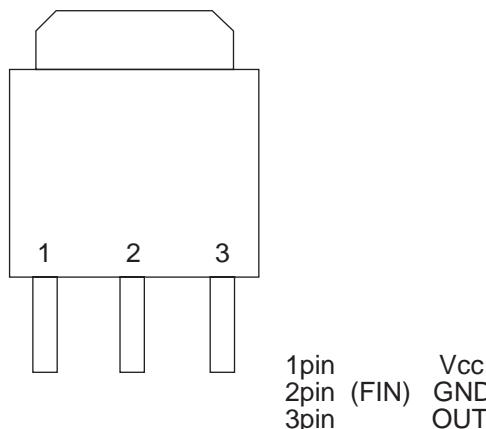


- Block Diagram

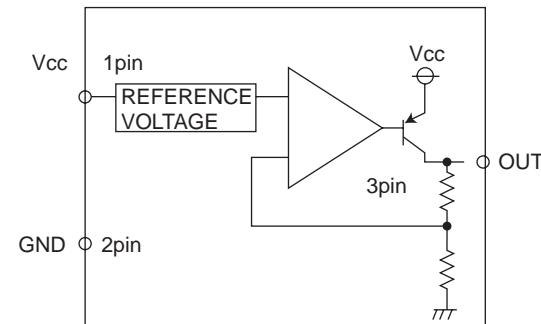**4.4 BA033LBSG-W (IC683): Regulator**

- Block diagram

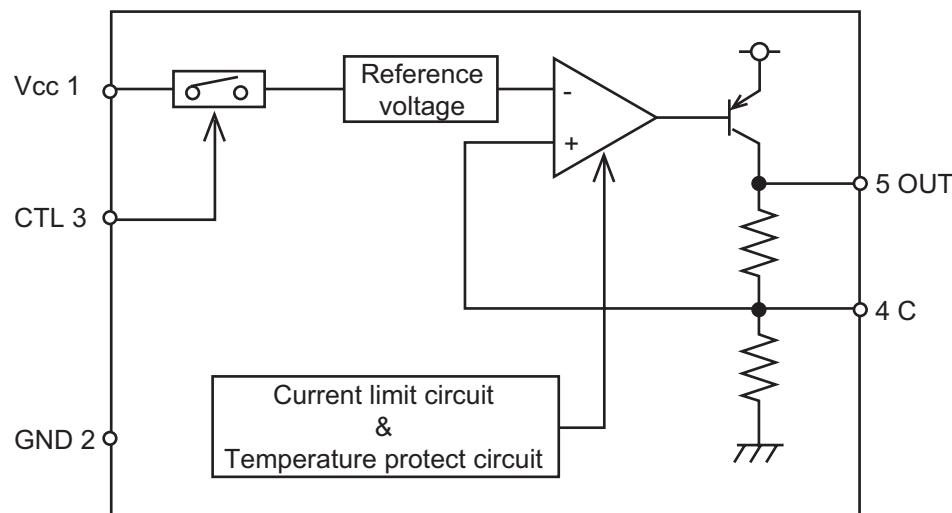
**4.5 BA15218 (IC451) : Ope. Amp.**

- Pin layout / Block diagram

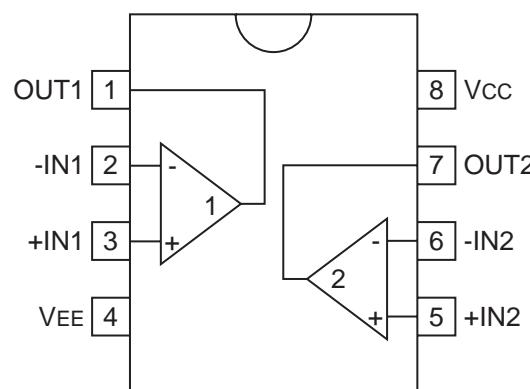


4.6 BA15218F-XE (IC412, IC422, IC427, IC609, IC610, IC650, IC651, IC661, IC690, IC691) : Dual operational amplifier

- Pin layout

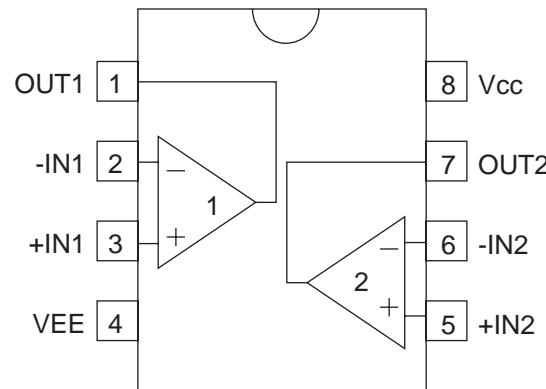


- Block diagram

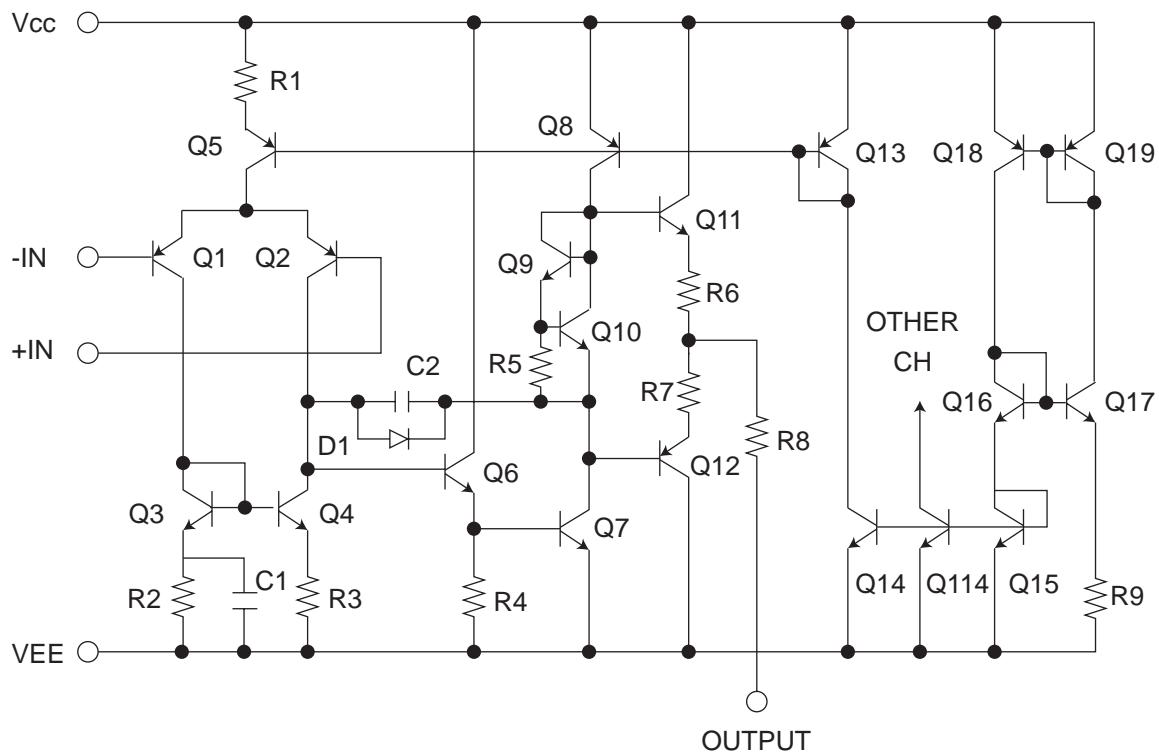


4.7 BA15218N (IC403) : Dual Ope. Amp.

- Pin layout & Block diaglam

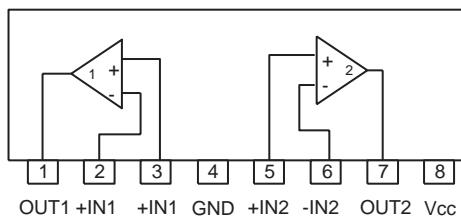


4.8 IMX9-W (IC652, IC662, IC682): Driver

- Pin layout & Block diagram

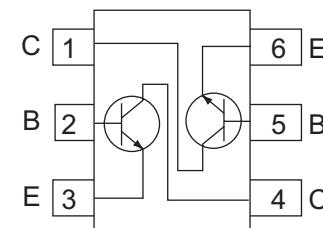


4.9 GP1UM281X (IC703) : Dual operation amplifier

- Block diagram

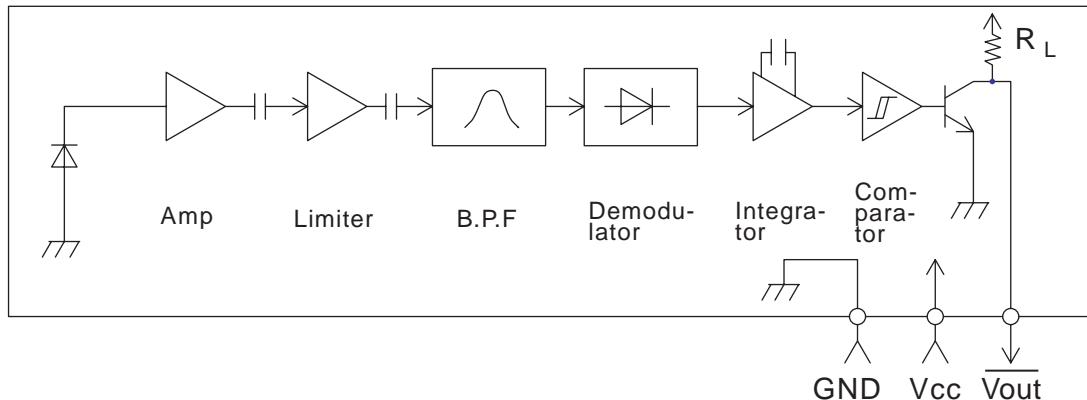


4.10 IC-PST9139-T(IC702) : System reset

- Terminal layout

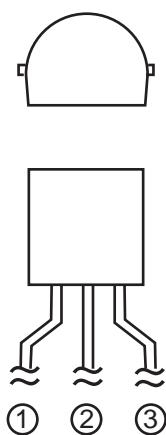


- Block diagram

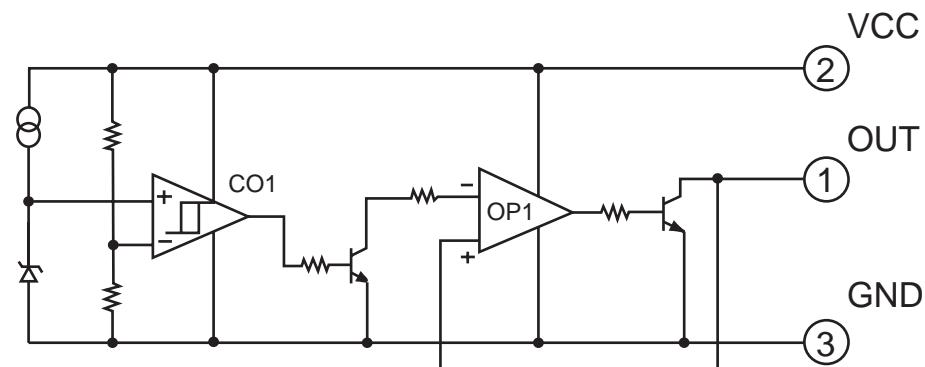

4.11 LA1838 (IC102): FM AM IF Amp. & Detector, FM MPX decoder

- Block Diagram

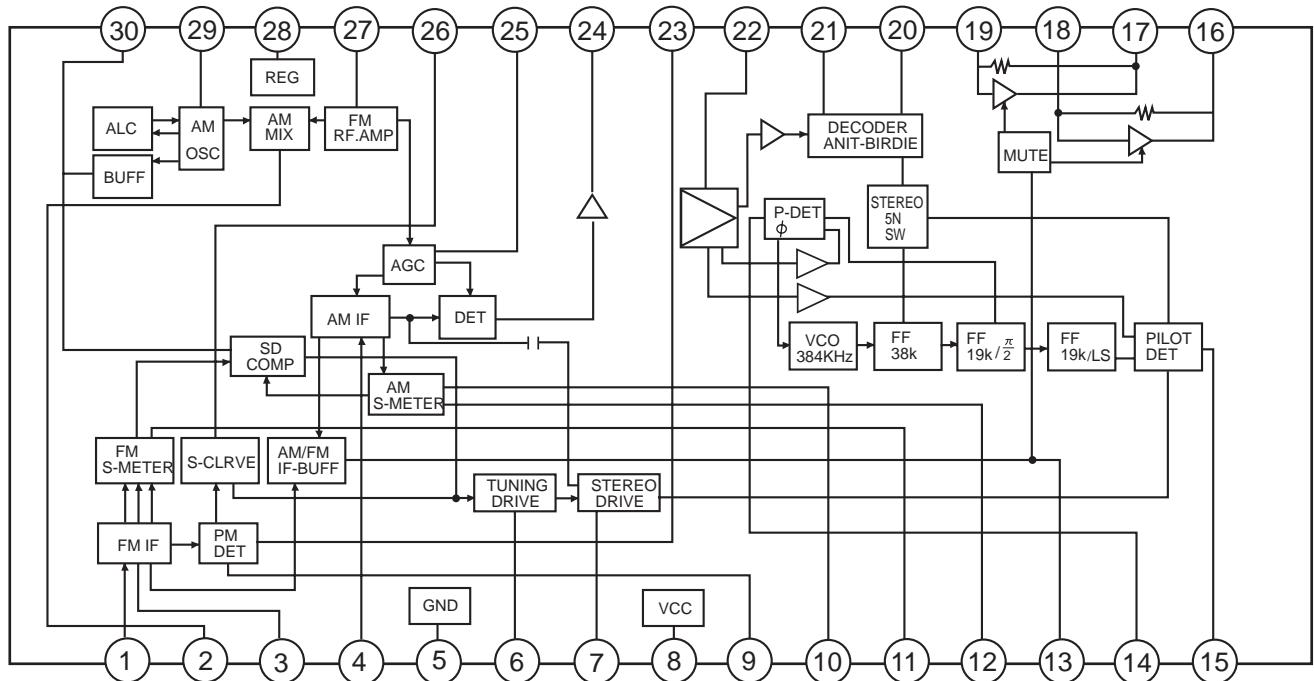

- Pin Function


Pin No.	Symbol	I/O	Function
1	FM IN	I	This is an input terminal of FM IF signal.
2	AM MIX	O	This is an output terminal for AM mixer.
3	FM IF	I	Bypass of FM IF
4	AM IF	I	Input of AM IF Signal.
5	GND	-	This is the device ground terminal.
6	TUNED	O	When the set is tuning, this terminal becomes "L".
7	STEREO	O	Stereo indicator output. Stereo "L", Mono: "H"
8	VCC	-	This is the power supply terminal.
9	FM DET	-	FM detect transformer.
10	AM SD	-	This is a terminal of AM ceramic filter.
11	FM VSM	O	Adjust FM SD sensitivity.
12	AM VSM	O	Adjust AM SD sensitivity.
13	MUTE	I/O	When the signal of IF REQ of IC121(LC72131) appear, the signal of FM/AM IF output. //Muting control input.
14	FM/AM	I	Change over the FM/AM input. "H" :FM, "L" : AM
15	MONO/ST	O	Stereo : "H", Mono: "L"
16	L OUT	O	Left channel signal output.
17	R OUT	O	Right channel signal output.
18	L IN	I	Input terminal of the Left channel post AMP.
19	R IN	I	Input terminal of the Right channel post AMP.
20	RO	O	Mpx Right channel signal output.
21	LO	O	Mpx Left channel signal output.
22	MPX IN	I	Mpx input terminal
23	FM OUT	O	FM detection output.
24	AM DET	O	AM detection output.
25	AM AGC	I	This is an AGC voltage input terminal for AM
26	AFC	-	This is an output terminal of voltage for FM-AFC.
27	AM RF	I	AM RF signal input.
28	REG	O	Register value between pin 26 and pin 28 besides the frequency width of the input signal.
29	AM OSC	-	This is a terminal of AM Local oscillation circuit.
30	OSC BUFFER	O	AM Local oscillation Signal output.

4.12 LC72136N (IC121) : PLL frequency synthesizer

- Pin layout

XT	1	22	X ^T
FM/AM	2	21	GND
CE	3	20	LPFOUT
DI	4	19	LPFIN
CLOCK	5	18	PD
DO	6	17	VCC
FM/ST/VCO	7	16	FMIN
AM/FM	8	15	AMIN
	9	14	
	10	13	IFCONT
SDIN	11	12	IFIN

- Block diagram

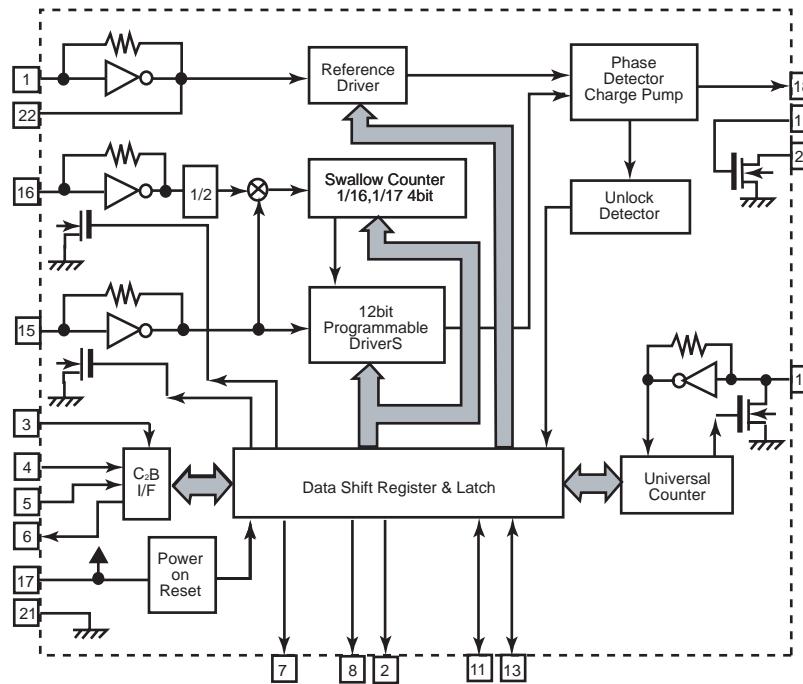


- Pin function

Pin No.	Symbol	I/O	Function
1	XT	I	X'tal oscillator connect (75kHz)
2	FM/AM	O	LOW:FM mode
3	CE	I	When data output/input for 4pin(input) and 6pin(output): H
4	DI	I	Input for receive the serial data from controller
5	CLOCK	I	Sync signal input use
6	DO	O	Data output for Controller Output port
7	FM/ST/VCO	O	Low: MW mode
8	AM/FM	O	Open state after the power on reset
9	LW	I/O	Input/output port
10	MW	I/O	Input/output port
11	SDIN	I/O	Data input/output
12	IFIN	I	IF counter signal input


Pin No.	Symbol	I/O	Function
13	IFCONT	O	IF signal output
14		-	Not use
15	AMIN	I	AM Local OSC signal output
16	FMIN	I	FM Local OSC signal input
17	VCC	-	Power supply(VDD=4.5-5.5V) When power ON:Reset circuit move
18	PD	O	PLL charge pump output (H: Local OSC frequency Height than Reference frequency. L: Low Agreement: Height impedance)
19	LPFIN	I	Input for active lowpassfilter of PLL
20	LPFOUT	O	Output for active lowpassfilter of PLL
21	GND	-	Connected to GND
22	X ^T	I	X'tal oscillator(75KHz)

4.13 LP61L1024S-12-X (IC641) : SRAM

- Pin layout

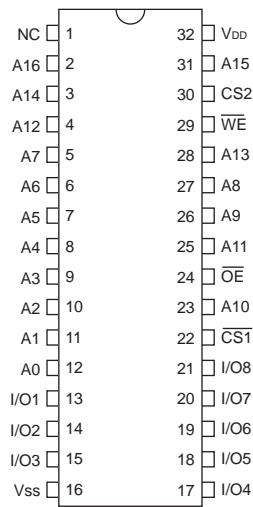

- Block diagram

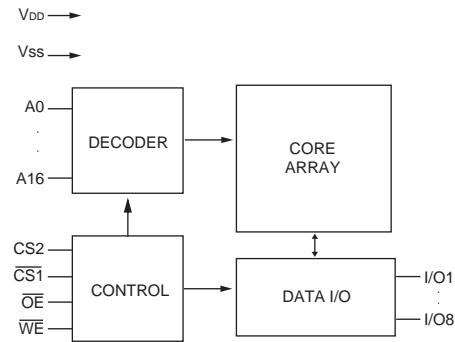


- Pin function

SYMBOL	DESCRIPTION
A0 - A16	Address Input
I/O1 - I/O8	Data Input/Output
CS1, CS2	Chip Select Inputs
WE	Write Enable Input
OE	Output Enable Input
V _{DD}	Power Supply
V _{ss}	Ground
NC	No Connection

4.14 M62446AFP-X (IC428): 6 channel electronic volume

- Pin layout & Block diagram

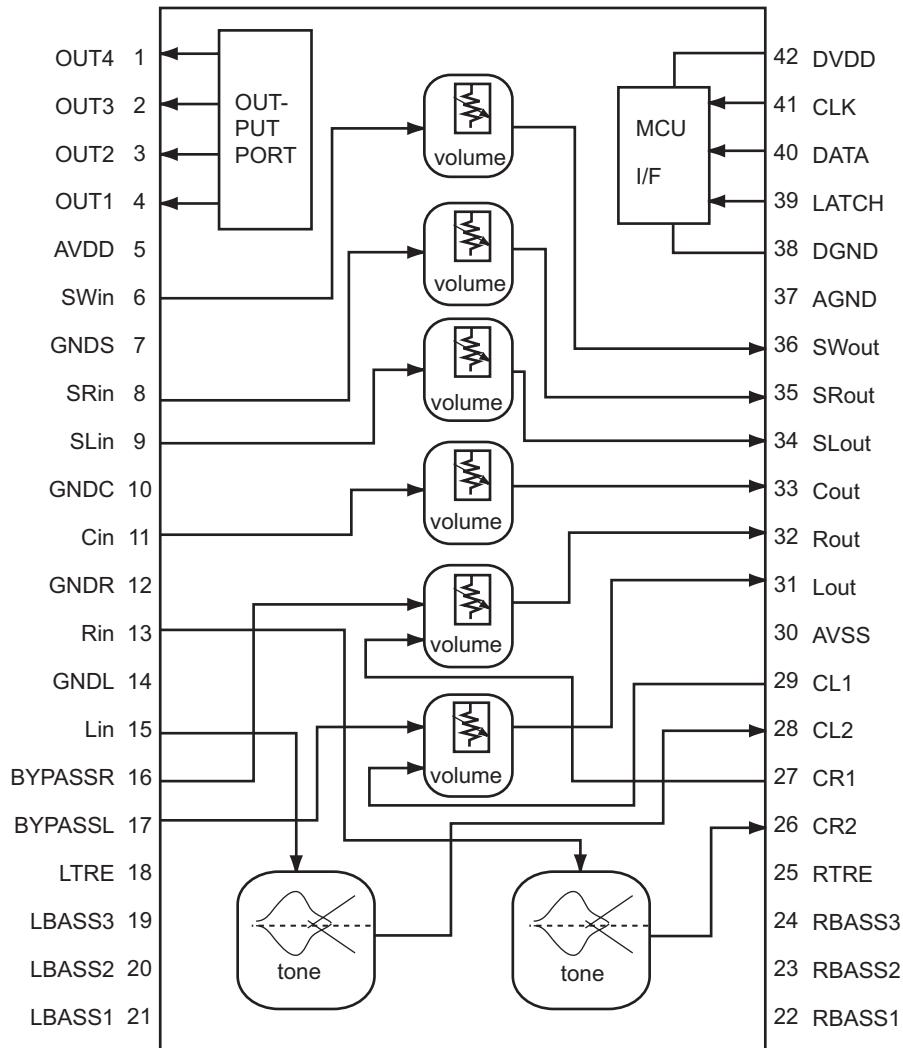


- Pin function

Pin No.	Symbol	I/O	Function
1	OUT4	O	PORT output 4
2	OUT3	O	PORT output 3
3	OUT2	O	PORT output 2
4	OUT1	O	PORT output 1
5	AVDD	-	Analog positive power supply terminal
6	SWin	I	Volume input
7	GNDS	-	Ground terminal
8	SRin	I	Volume input
9	SLin	I	Volume input
10	GNDC	-	Ground terminal
11	Cin	I	Volume input
12	GNDR	-	Ground terminal
13	Rin	I	Tone input
14	GNDL	-	Ground terminal
15	Lin	I	Tone input
16	BYPASSR	I	R channel volume input
17	BYPASSL	I	L channel volume input
18	LTRE	I	Tone treble frequency adjusting terminal
19	LBASS3	I	Tone bass frequency adjusting terminal
20	LBASS2	I	Tone bass frequency adjusting terminal
21	LBASS1	I	Tone bass frequency adjusting terminal
22	RBASS1	I	Tone bass frequency adjusting terminal
23	RBASS2	I	Tone bass frequency adjusting terminal
24	RBASS3	I	Tone bass frequency adjusting terminal
25	RTRE	I	Tone treble frequency adjusting terminal
26	CR2	O	Tone output terminal
27	CR1	I	R channel volume input
28	CL2	O	Tone output terminal
29	CL1	I	L channel volume input
30	AVSS	-	Analog negative power supply terminal
31	Lout	O	L channel output
32	Rout	O	R channel output
33	Cout	O	Volume output
34	SLout	O	Volume output
35	SRout	O	Volume output
36	SWout	O	Volume output
37	AGND	-	Analog ground terminal
38	DGND	-	Digital ground terminal
39	LATCH	I	Latch input terminal
40	DATA	I	Data input terminal
41	CLK	I	Data transfer clock input terminal
42	DVDD	-	Digital power supply terminal

4.15 NJM2246D (IC501, IC551, IC552) : Video switch

- Pin layout & Block diaglam

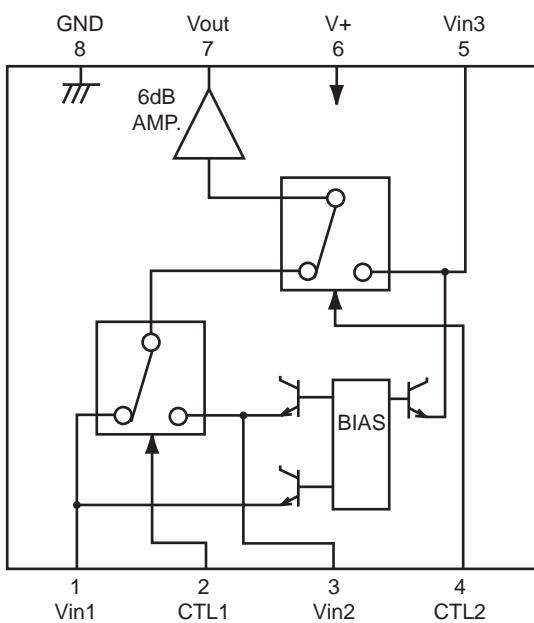


Control input - output signal

CTL 1	CTL 2	Output
L	L	VIN 1
H	L	VIN 2
L/H	H	VIN 3


4.16 NJM2580M-X (IC582) : Video amp.

- Block diagram

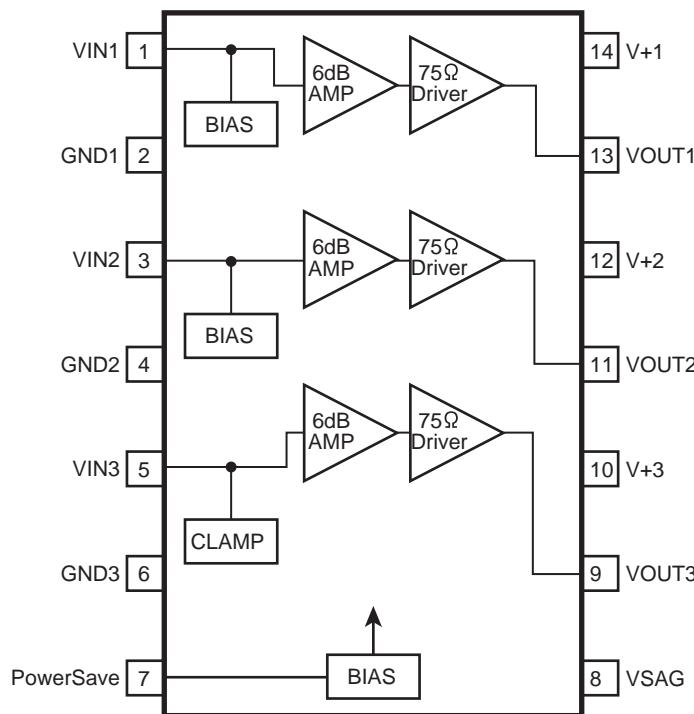

4.17 TC74HC08AF-X (IC611) : AND gate


- Block diagram

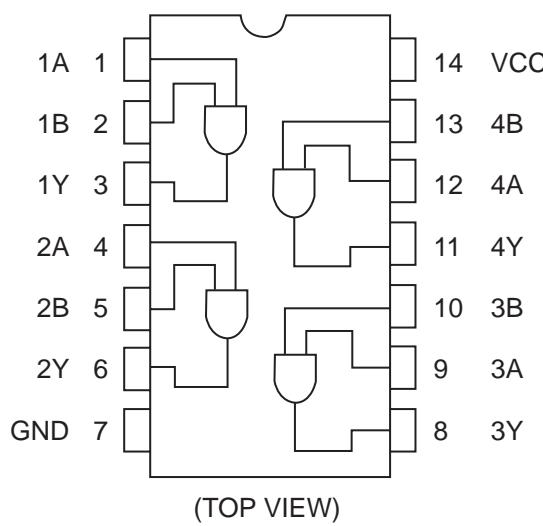

- Truth table

A	B	Y
L	L	L
L	H	L
H	L	L
H	H	H

4.18 TC74HC4053AF-X (IC581) : Multiplexer

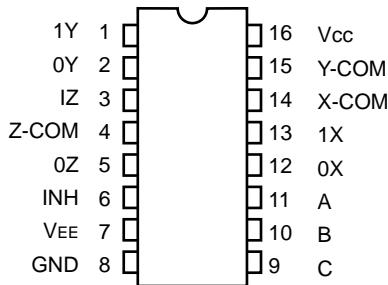


CONTROL INPUTS			
INHIBIT	C	B	A
L	L	L	K
L	L	L	H
L	L	H	K
L	L	H	H
L	H	L	K
L	H	L	H
L	H	H	K
L	H	H	H
H	X	X	X

X : Don't care.

4.19 TC74HC4072AF-X (IC612) : OR gate

- Block diagram

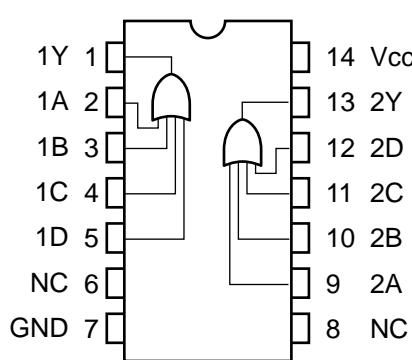


- Truth table

A	B	C	D	Y
H	X	X	X	H
X	H	X	X	H
X	X	H	X	H
X	X	X	H	H
L	L	L	L	L

X : Don't care


4.20 TC74HCU04AF-W(IC621): Inverter

- Pin layout

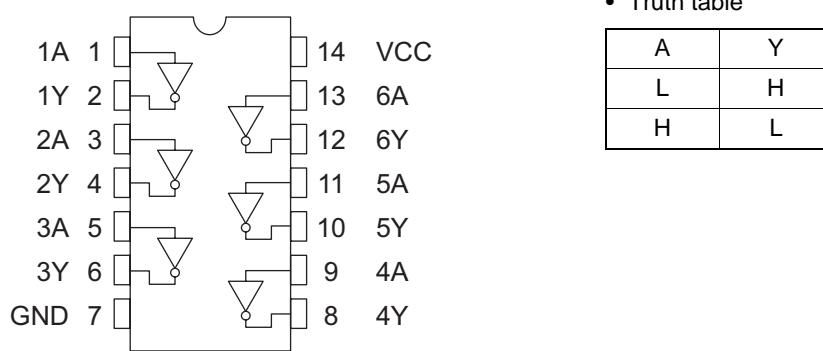


4.21 TC7SET32FU-X (IC672) : Z-input or gate

- Pin layout & Block diagram

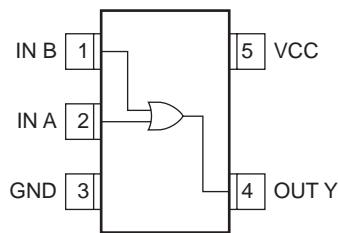

4.22 TC9164AN (IC402) : Analog switch

- Pin layout & Block Diagram

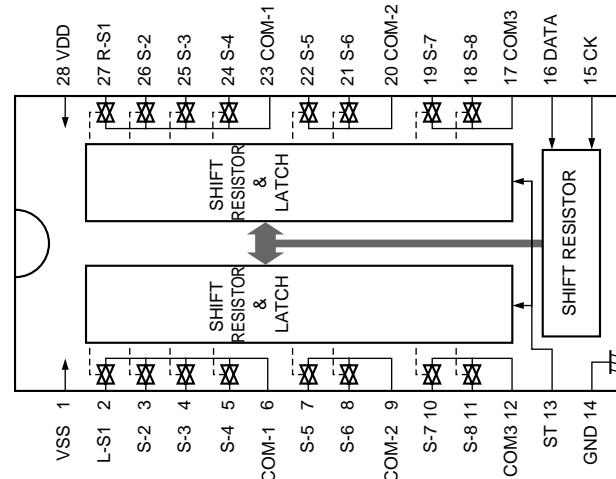

4.23 TC9446F-025 (IC631): Digital signal processor for dolby digital (AC-3) / DTS audio decode


- Pin Function

Pin No.	Symbol	I/O	Function
1	RST	I	Reset signal input terminal (L:reset H: normal operation)
2	MIMD	I	Microcomputer interface mode selection input terminal (L:serial H:IC bus)
3	MICS	I	Microcomputer interface chip select input terminal
4	MILP	I	Microcomputer interface latch pulse input
5	MIDIO	I/O	Microcomputer interface data I/O terminal
6	MICK	I	Microcomputer interface clock input terminal
7	MIACK	O	Microcomputer interface acknowledge output terminal
8~11	FI0~3	I	Flag input terminal 0~3
12	IRQ	I	Interrupt input terminal
13	VSS	-	Digital ground terminal
14	LRCKA	I	Audio interface LR clock input terminal A
15	BCKA	I	Audio interface bit clock input terminal A
16~18	SDO0~2	O	Audio interface data output terminal 0
19	SD03	-	Non connect
20	LRCKB	I	Audio interface LR clock input terminal B
21	BCKB	I	Audio interface bit clock input terminal B
22	SDT0	I	Audio interface data input terminal 0
23	SDT1	I	Audio interface data input terminal 1
24	VDD	-	Power supply for digital circuit
25	LRCKOA	O	Audio interface LR clock output terminal A
26	BCKOA	O	Audio interface bit clock output terminal A
27, 28	TEST0,1	I	Test input terminal 0/1 (L:test H: normal operation)
29~30	LRCKOBBCKOB	-	Non connect
31	TXO	O	SPDIF Output
32, 33	TEST2,3	I	Test input terminal (L:test H: normal operation)
34	RX	I	SPDIF input terminal
35	VSS	-	Ground terminal for digital circuit
36	TSTSUB0	I	Test sub input terminal 0 (L:test H: normal operation)
37	FCONT	O	VCO Frequency control output terminal
38, 39	TSTSUB1TSTSUB2	I	Test sub input terminal 12 (L:test H: normal operation)
40	PDO	O	Phase detect signal output terminal
41	VDDA	-	Power supply for analog circuit
42	PLON	I	Clock selection input terminal (L:external clock H:VCO clock)
43	AMPI	I	amplifier input terminal for LPF
44	AMPO	O	amplifier output terminal for LPF
45	CKI	I	External clock input terminal
46	VSSA	-	Ground terminal for analog circuit
47	CKO	O	DIR Clock output terminal
48	LOCK	O	VCO Lock output terminal
49	VSS	-	Ground terminal for digital circuit
50	WR	O	External SRAM writing signal output terminal
51	OE	O	External SRAM output enable signal output terminal
52	CE	O	External SRAM chip enable signal output terminal
53	VDD	-	Power supply terminal for digital circuit
54~61	IO7~0	I/O	External SRAM data I/O terminal 7~0
62	VSS	-	Ground terminal for digital circuit
63~70	AD0~7	O	External SRAM address output terminal 0~7
71	VDD	-	Power supply terminal for digital circuit
72~80	AD8~16	O	External SRAM address output terminal 8~16
81	VSS	-	round terminal for digital circuit
82~89	PO0~7	O	General purpose output terminal 0~7
90	VDDDL	-	Power supply terminal for DLL
91	LPFO	O	LPF output terminal for DLL
92, 93	DLON,DLKCS	I	Refer to the undermentioned table
94	SCKO	-	Non connect
95	VSSDL	-	Ground terminal for DLL
96	SCKI	I	External system clock input terminal
97	VSSX	-	Ground terminal for oscillation circuit
98, 99	XO,XI	I/O	Oscillation I/O terminal
100	VDDX	-	Power supply terminal for oscillation circuit

DLCKS terminal	DLON terminal	DLL clock setting
L	L	SCKI input (DLL circuit OFF)
L	H	Four times XI clock
H	L	Three times XI clock
H	H	Six times XI clock

4.24 UPD784215AGC167 (IC671): Digital signal controller

- Pin layout

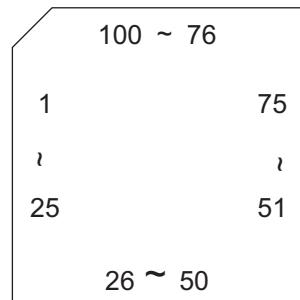

- Pin function

Pin No.	Symbol	I/O	Function
1~8		-	Non connect
9	VDD	-	Power supply terminal
10	X2	O	Connecting the crystal oscillator for system main clock
11	X1	I	Connecting the crystal oscillator for system main clock
12	VSS	-	Connect to GND
13	XT2	O	Connecting the crystal oscillator for system sub clock
14	XT1	I	Connecting the crystal oscillator for system sub clock
15	RESET	I	System reset signal input
16	AUTODATA	I	Output of DSP to general-purpose port
17	LOCK	I	Output of DSP to general-purpose port
18	DIGITAL0	I	Output of DSP to general-purpose port
19	FORMAT	I	Output of DSP to general-purpose port
20	CHANNEL	I	Output of DSP to general-purpose port
21	ERR	I	Output of DSP to general-purpose port
22	REST IN	I	Reset signal input
23	AVDD	-	Power supply terminal
24	AVREF0	-	Connect to GND
25		-	Connect to GND
26		-	Connect to GND
27		-	Connect to GND
28		-	Connect to GND
29		-	Connect to GND
30		-	Connect to GND
31		-	Connect to GND
32		-	Connect to GND
33	AVSS	-	Connect to GND
34,35		-	Non connect
36	AV REF1	-	Power supply terminal
37	RX	-	Not use
38	TX	-	Not use
39		-	Non connect
40	DSPCOM	I	Communication port from IC701
41	DSPSTS	O	Status communication port to IC701
42	DSPCLK	I	Clock input from IC701
43	DSPRDY	I	Ready signal input from IC701
44		-	Non connect

Pin No.	Symbol	I/O	Function
45	MIDIO IN	I/O	Interface I/O terminal with microcomputer
46	MIDIO OUT	I/O	Interface I/O terminal with microcomputer
47	MICK	O	Interface I/O terminal with microcomputer of clock signal
48	MICS	O	Interface I/O terminal with microcomputer of chip select
49	MILP	O	Interface I/O terminal with microcomputer
50	MIACK	O	Interface I/O terminal with microcomputer
51		-	Non connect
52		-	Non connect
53	DSPRST	O	Reset signal output of DSP
54~63		-	Non connect
64	CODEC OUT	I/O	Interface I/O terminal with microcomputer
65	CODEC IN	I/O	Interface I/O terminal with microcomputer
66	CODEC CLK	O	Interface I/O terminal with microcomputer of clock signal
67	CODEC CS	O	Interface I/O terminal with microcomputer of chip select
68	CODEC XTS	-	Non connect
69		-	Non connect
70		-	Non connect
71	PD	O	Reset signal output
72	GND	-	Connect to GND
73		-	Non connect
74		-	Non connect
75		-	Non connect
76		-	Non connect
77		-	Non connect
78		-	Non connect
79		-	Non connect
80		-	Non connect
81	VDD	-	Power supply
82		-	Non connect
83		-	Non connect
84	ANA/T-TONE	O	Test tone control
85	LEF-MIX	O	Control at output destination of LFE channel
86		-	Non connect
87	D.MUTE	O	Mute of the digital out terminal is controlled
88	S.MUTE	O	Mute of the audio signal is controlled
89		O	Non connect
90	ASW1	O	Selection of digital input selector
91	ASW2	-	Selection of digital input selector
92	ASW3	-	Selection of digital input selector
93	ASW4	-	Selection of digital input selector
94	TEST	-	Test terminal
95		-	Non connect
96		-	Non connect
97		-	Non connect
98		-	Non connect
99		-	Non connect
100		-	Non connect



VICTOR COMPANY OF JAPAN, LIMITED
AV & MULTIMEDIA COMPANY 10-1, 1chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.22026)

JVC

SCHEMATIC DIAGRAMS


AUDIO/VIDEO CONTROL RECEIVER

RX-6030VBK

CD-ROM No.SML200303

Area suffix

J -----	U.S.A.
C -----	Canada

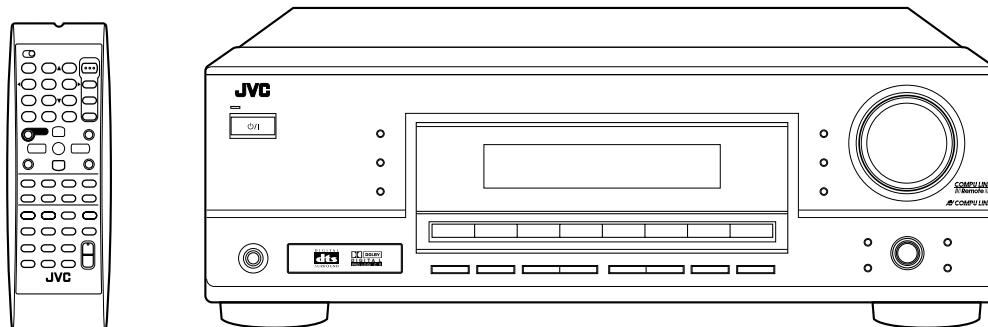

AV COMPU LINK

COMPU LINK
/// Remote ///

DIGITAL
dts
SURROUND

DOLBY
DIGITAL
PRO LOGIC II


Contents

Block diagram	-----	2-1
Standard schematic diagrams	-----	2-2
Printed circuit boards	-----	2-10~14

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (▲) and ICP (●) or identified by the "▲" mark nearby are critical for safety.


(This regulation does not correspond to J and C version.)

Block diagram

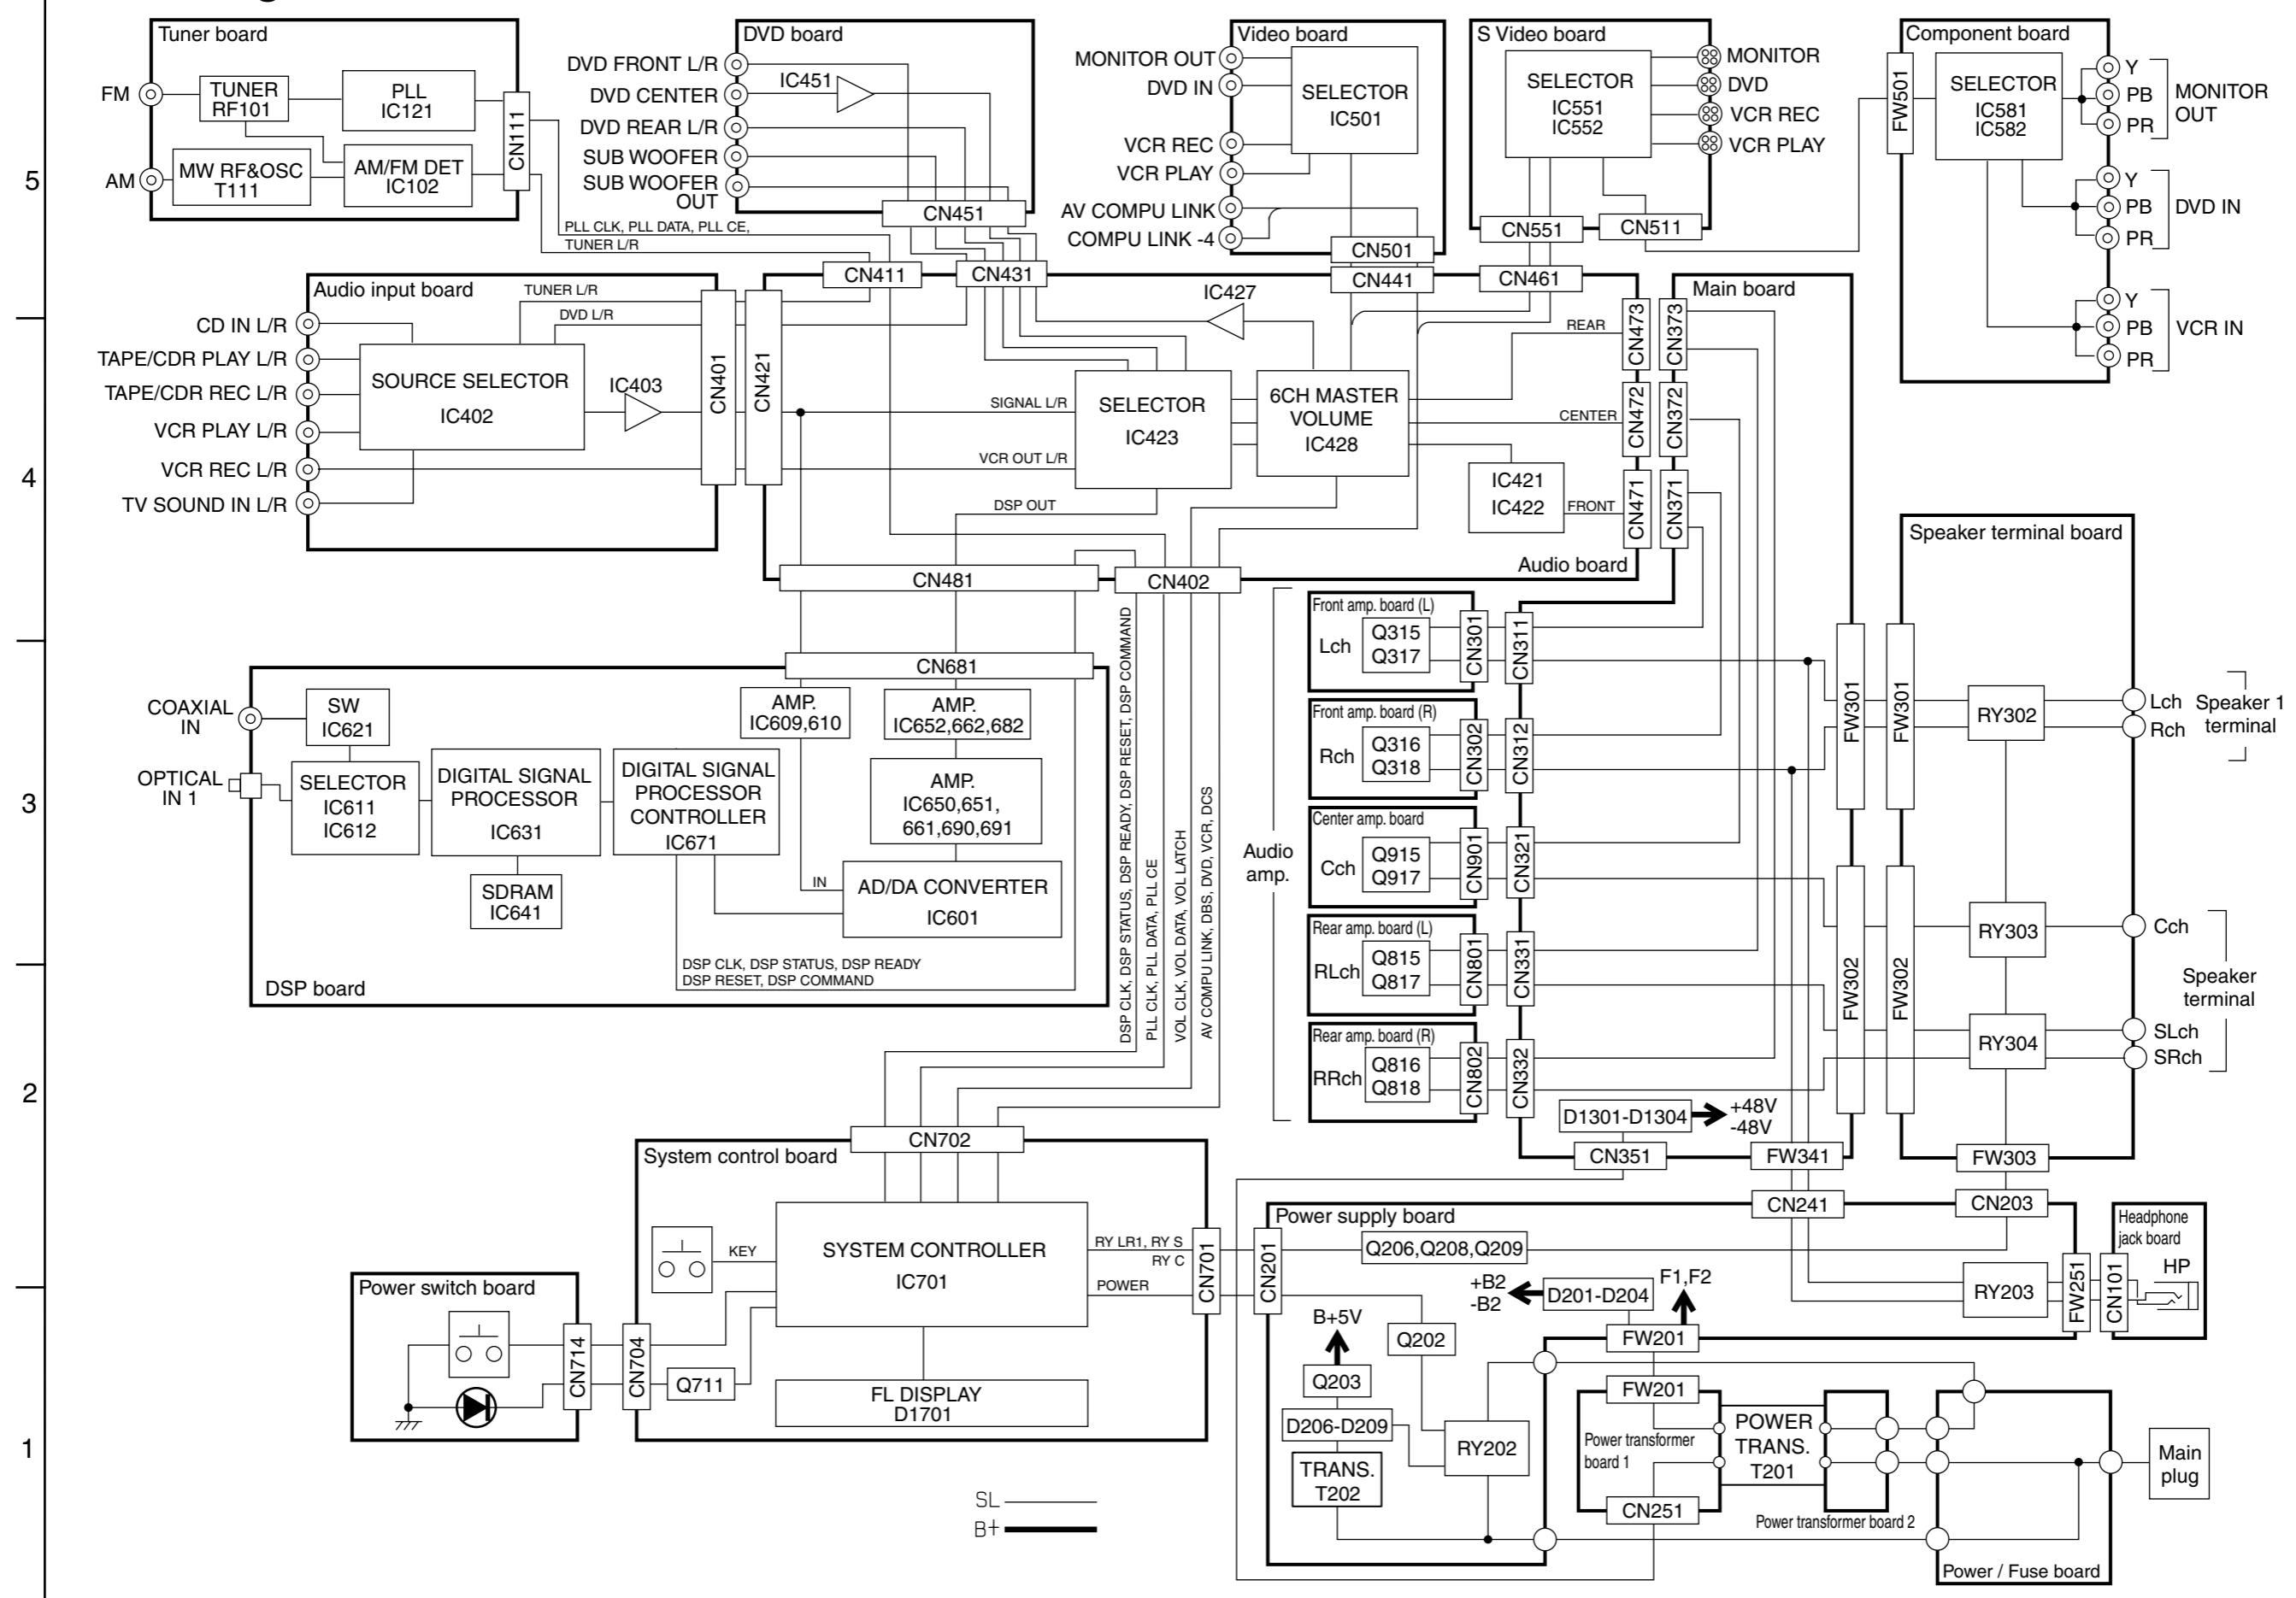

Standard schematic diagrams

■ Power supply section

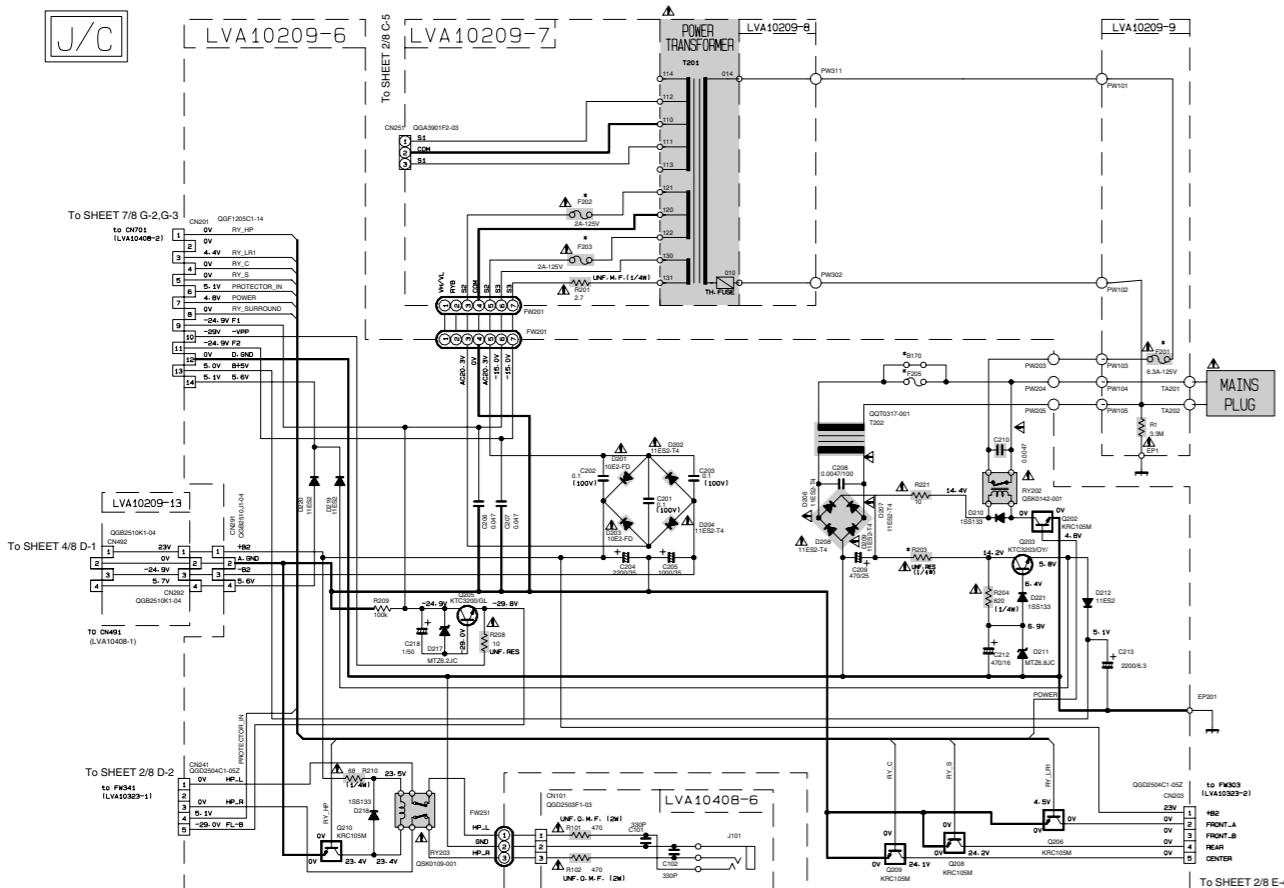

J/C	B/E/EN/VA/VA/A	US/UT/UJ
F201	GMP1201-200-J8 (16.3A-200V)	GMP1201-200-J8 (16.3A-250V)
F202-F203	GMP1101-200-J8 (2A-125V)	GMP1101-200-J8 (2A-250V)
F204	NONE	NONE
R205-R146	GMP1201-200-J8 (16.3A-200V)	GMP1201-200-J8 (16.3A-250V)
B170	USE	NONE
V201	NONE	USE


▲ Parts are safety assurance parts.
When replacing those parts make
sure to use the specified one.

J/C	B/E/EN/VA/VA/A	US/UT/UJ
R11-R12	USE	NONE
R13-R14	NONE	NONE
R211-R145	USE	NONE
R203	10	10 3.9 3.9
R206	GPT107-C01	GPT107-C02 GPT107-C04
C209	470/25	470/53 470/63
R201	2.7	4.7 5.6 5.6
C1331	330P	0.001 330P 330P
C1332	330P	0.001 330P 330P
C221	NONE	USE


SHEET No.	CIRCUIT DESCRIPTION
1 / 8	Power supply & Component video
2 / 8	Audio & Speaker terminal
3 / 8	Audio amplifier
4 / 8	Volume, Regulator & Source select
5 / 8	Audio & Video signal input terminal
6 / 8	Digital signal input terminal & Surround
7 / 8	User control, System control & FL display
8 / 8	Tuner

VERSION CODES	
J	: U. S. A.
C	: CANADA
B	: U. K.
E	: CONTINENTAL EUROPE
EN	: NORDIC COUNTRIES
EV	: EASTERN EUROPE
US	: SINGAPORE
UT	: TAIWAN
UU	: MILITARY MARKET
UP	: KOREA
A	: AUSTLARIA


■ Component video terminal section

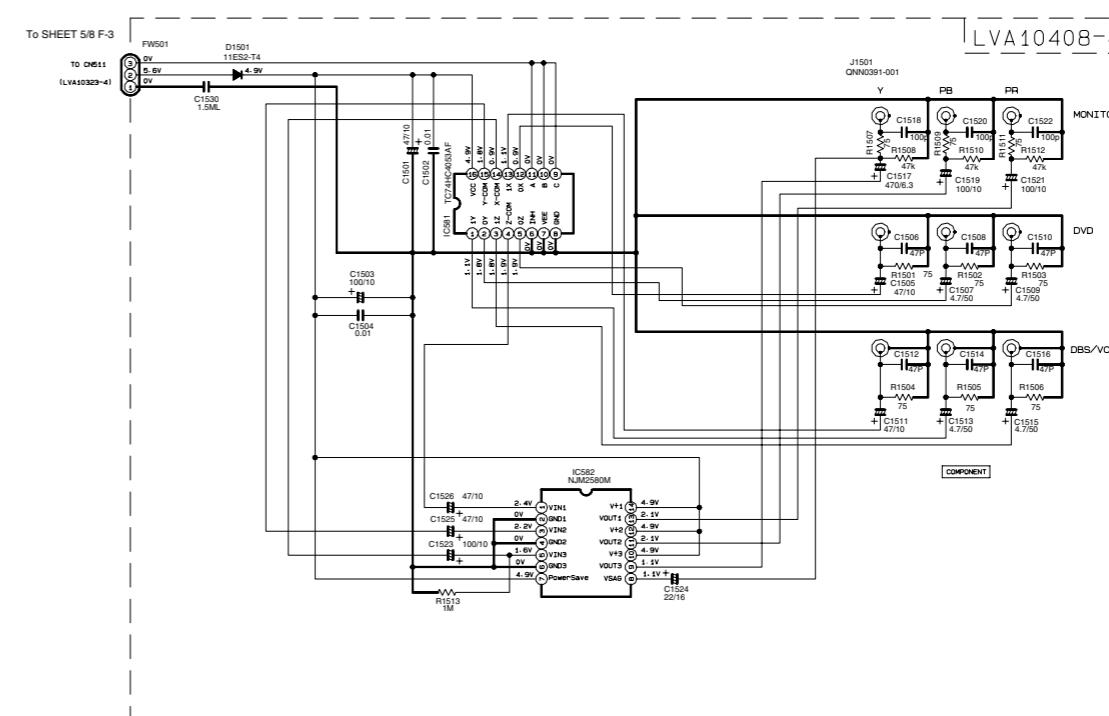


■ Audio & Speaker terminal section

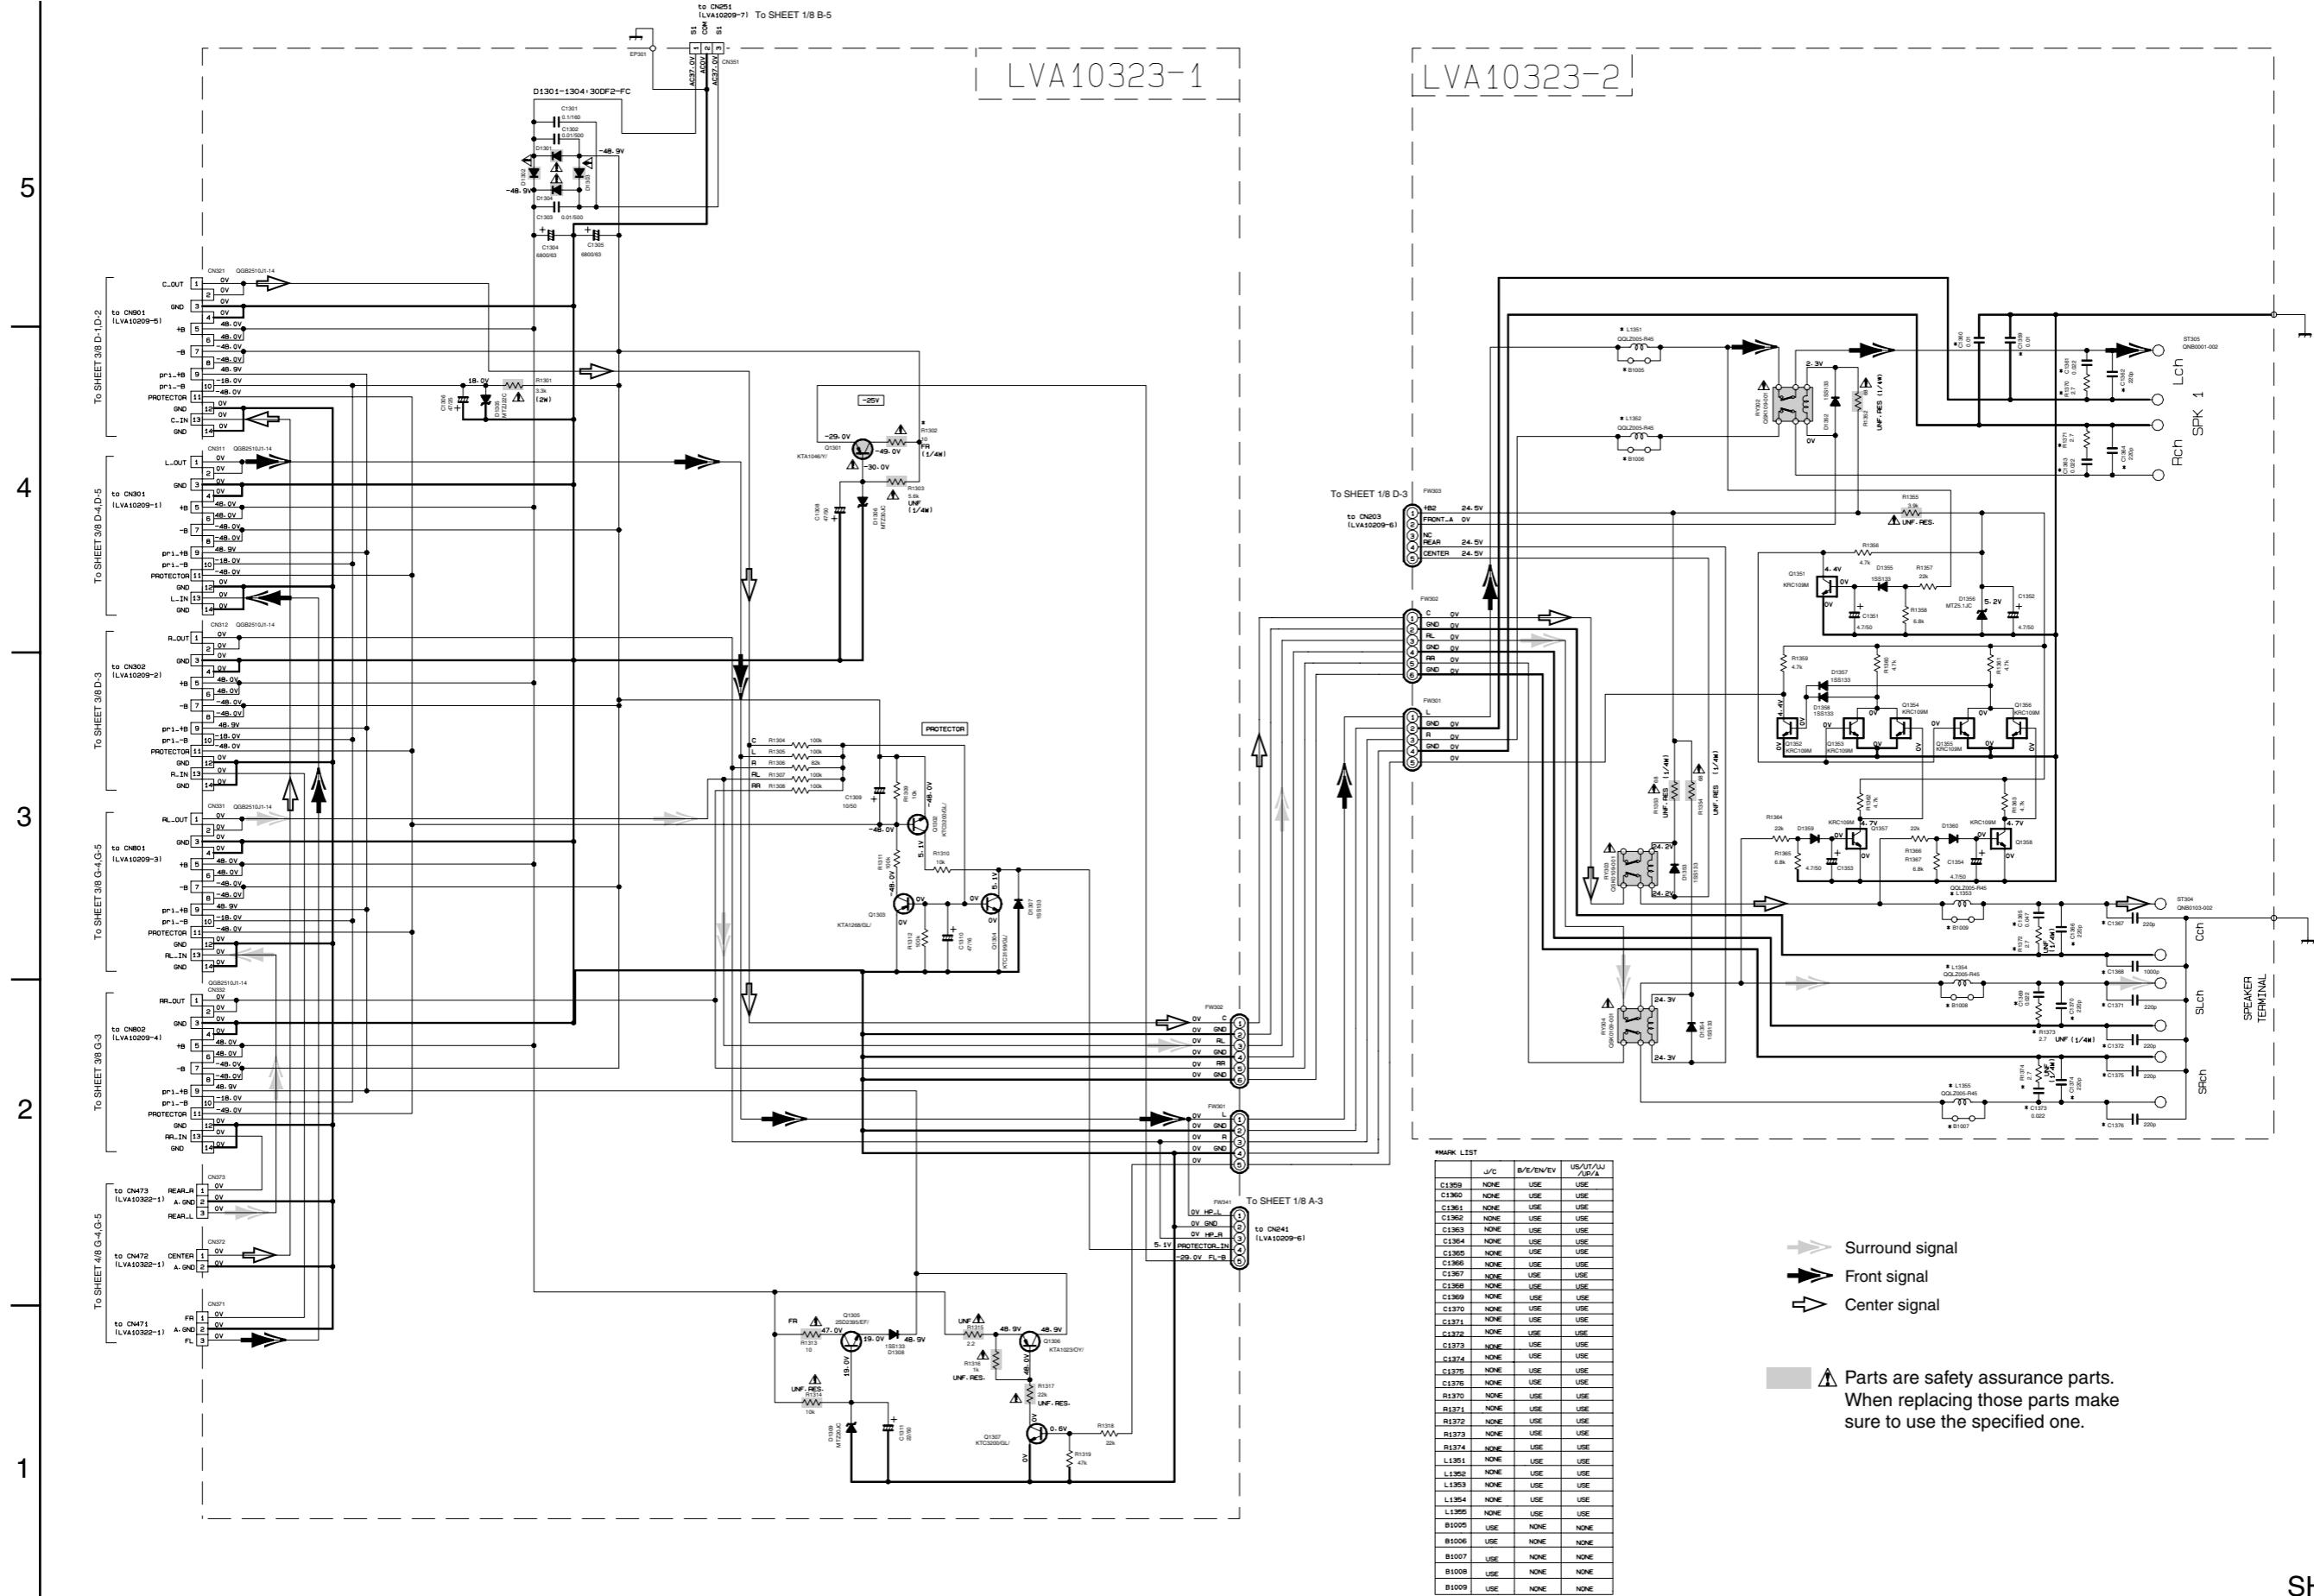


■ Audio amplifier section

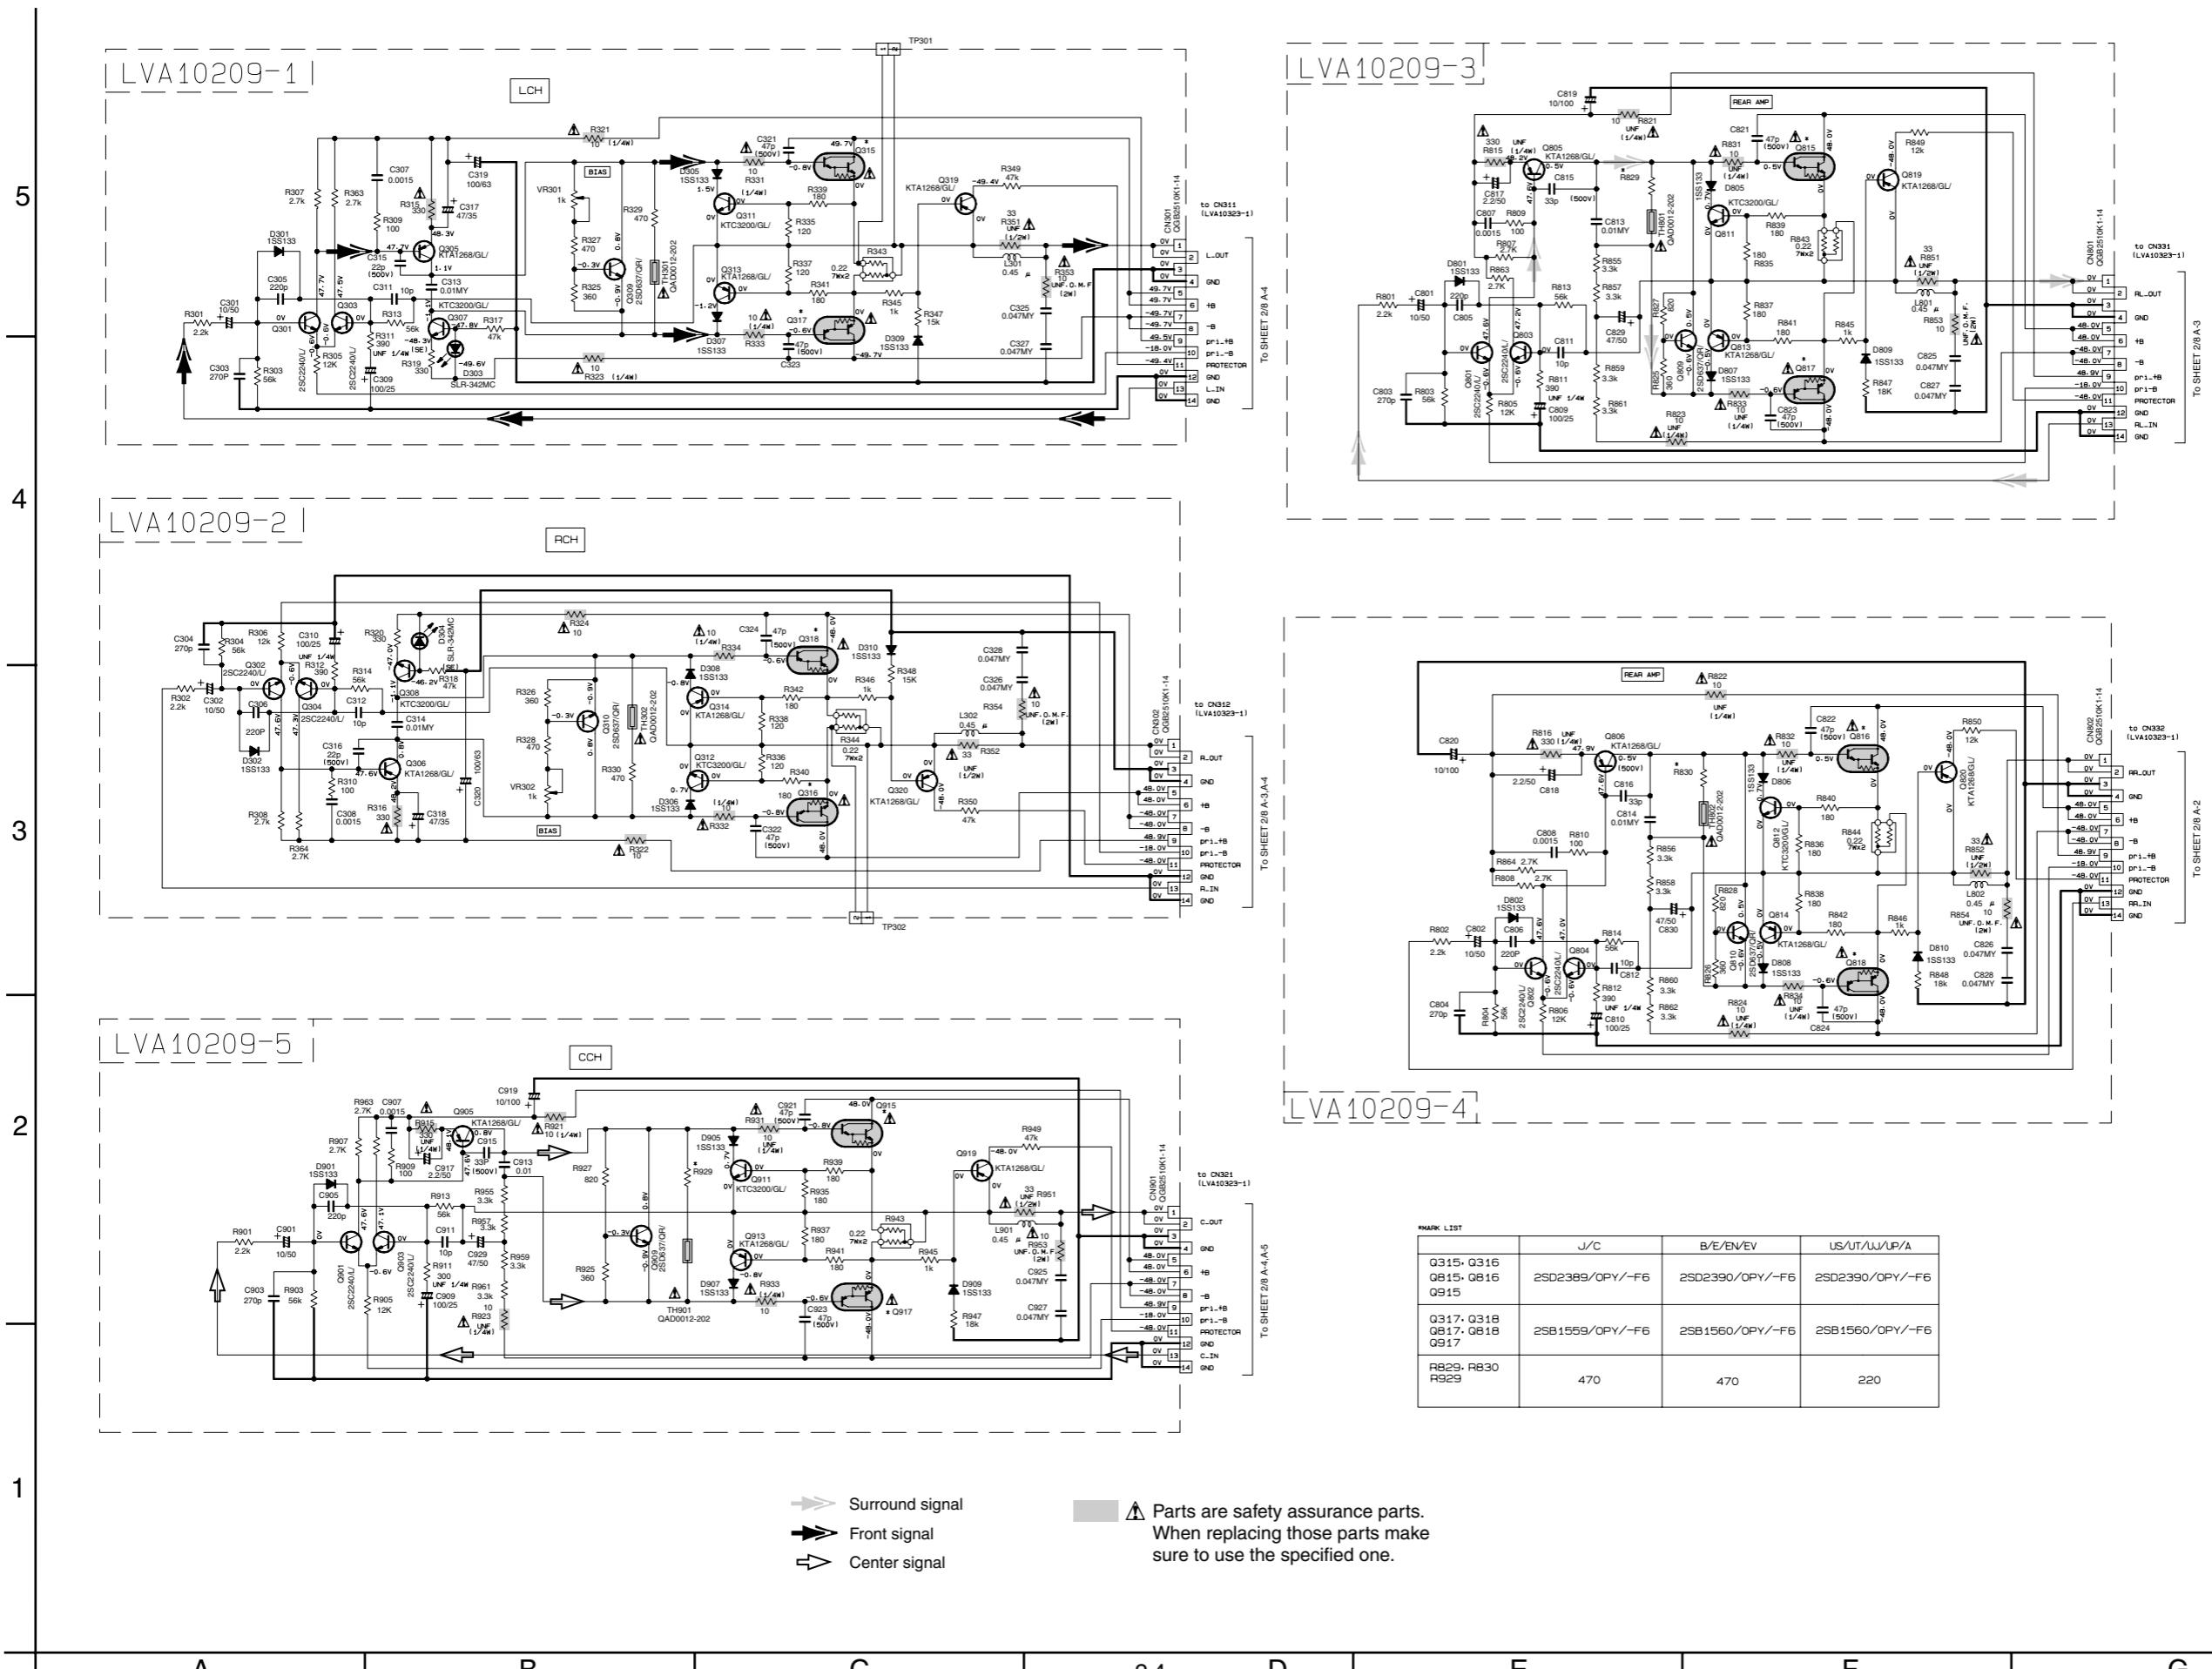


■ Volume, Regulator & Source select section

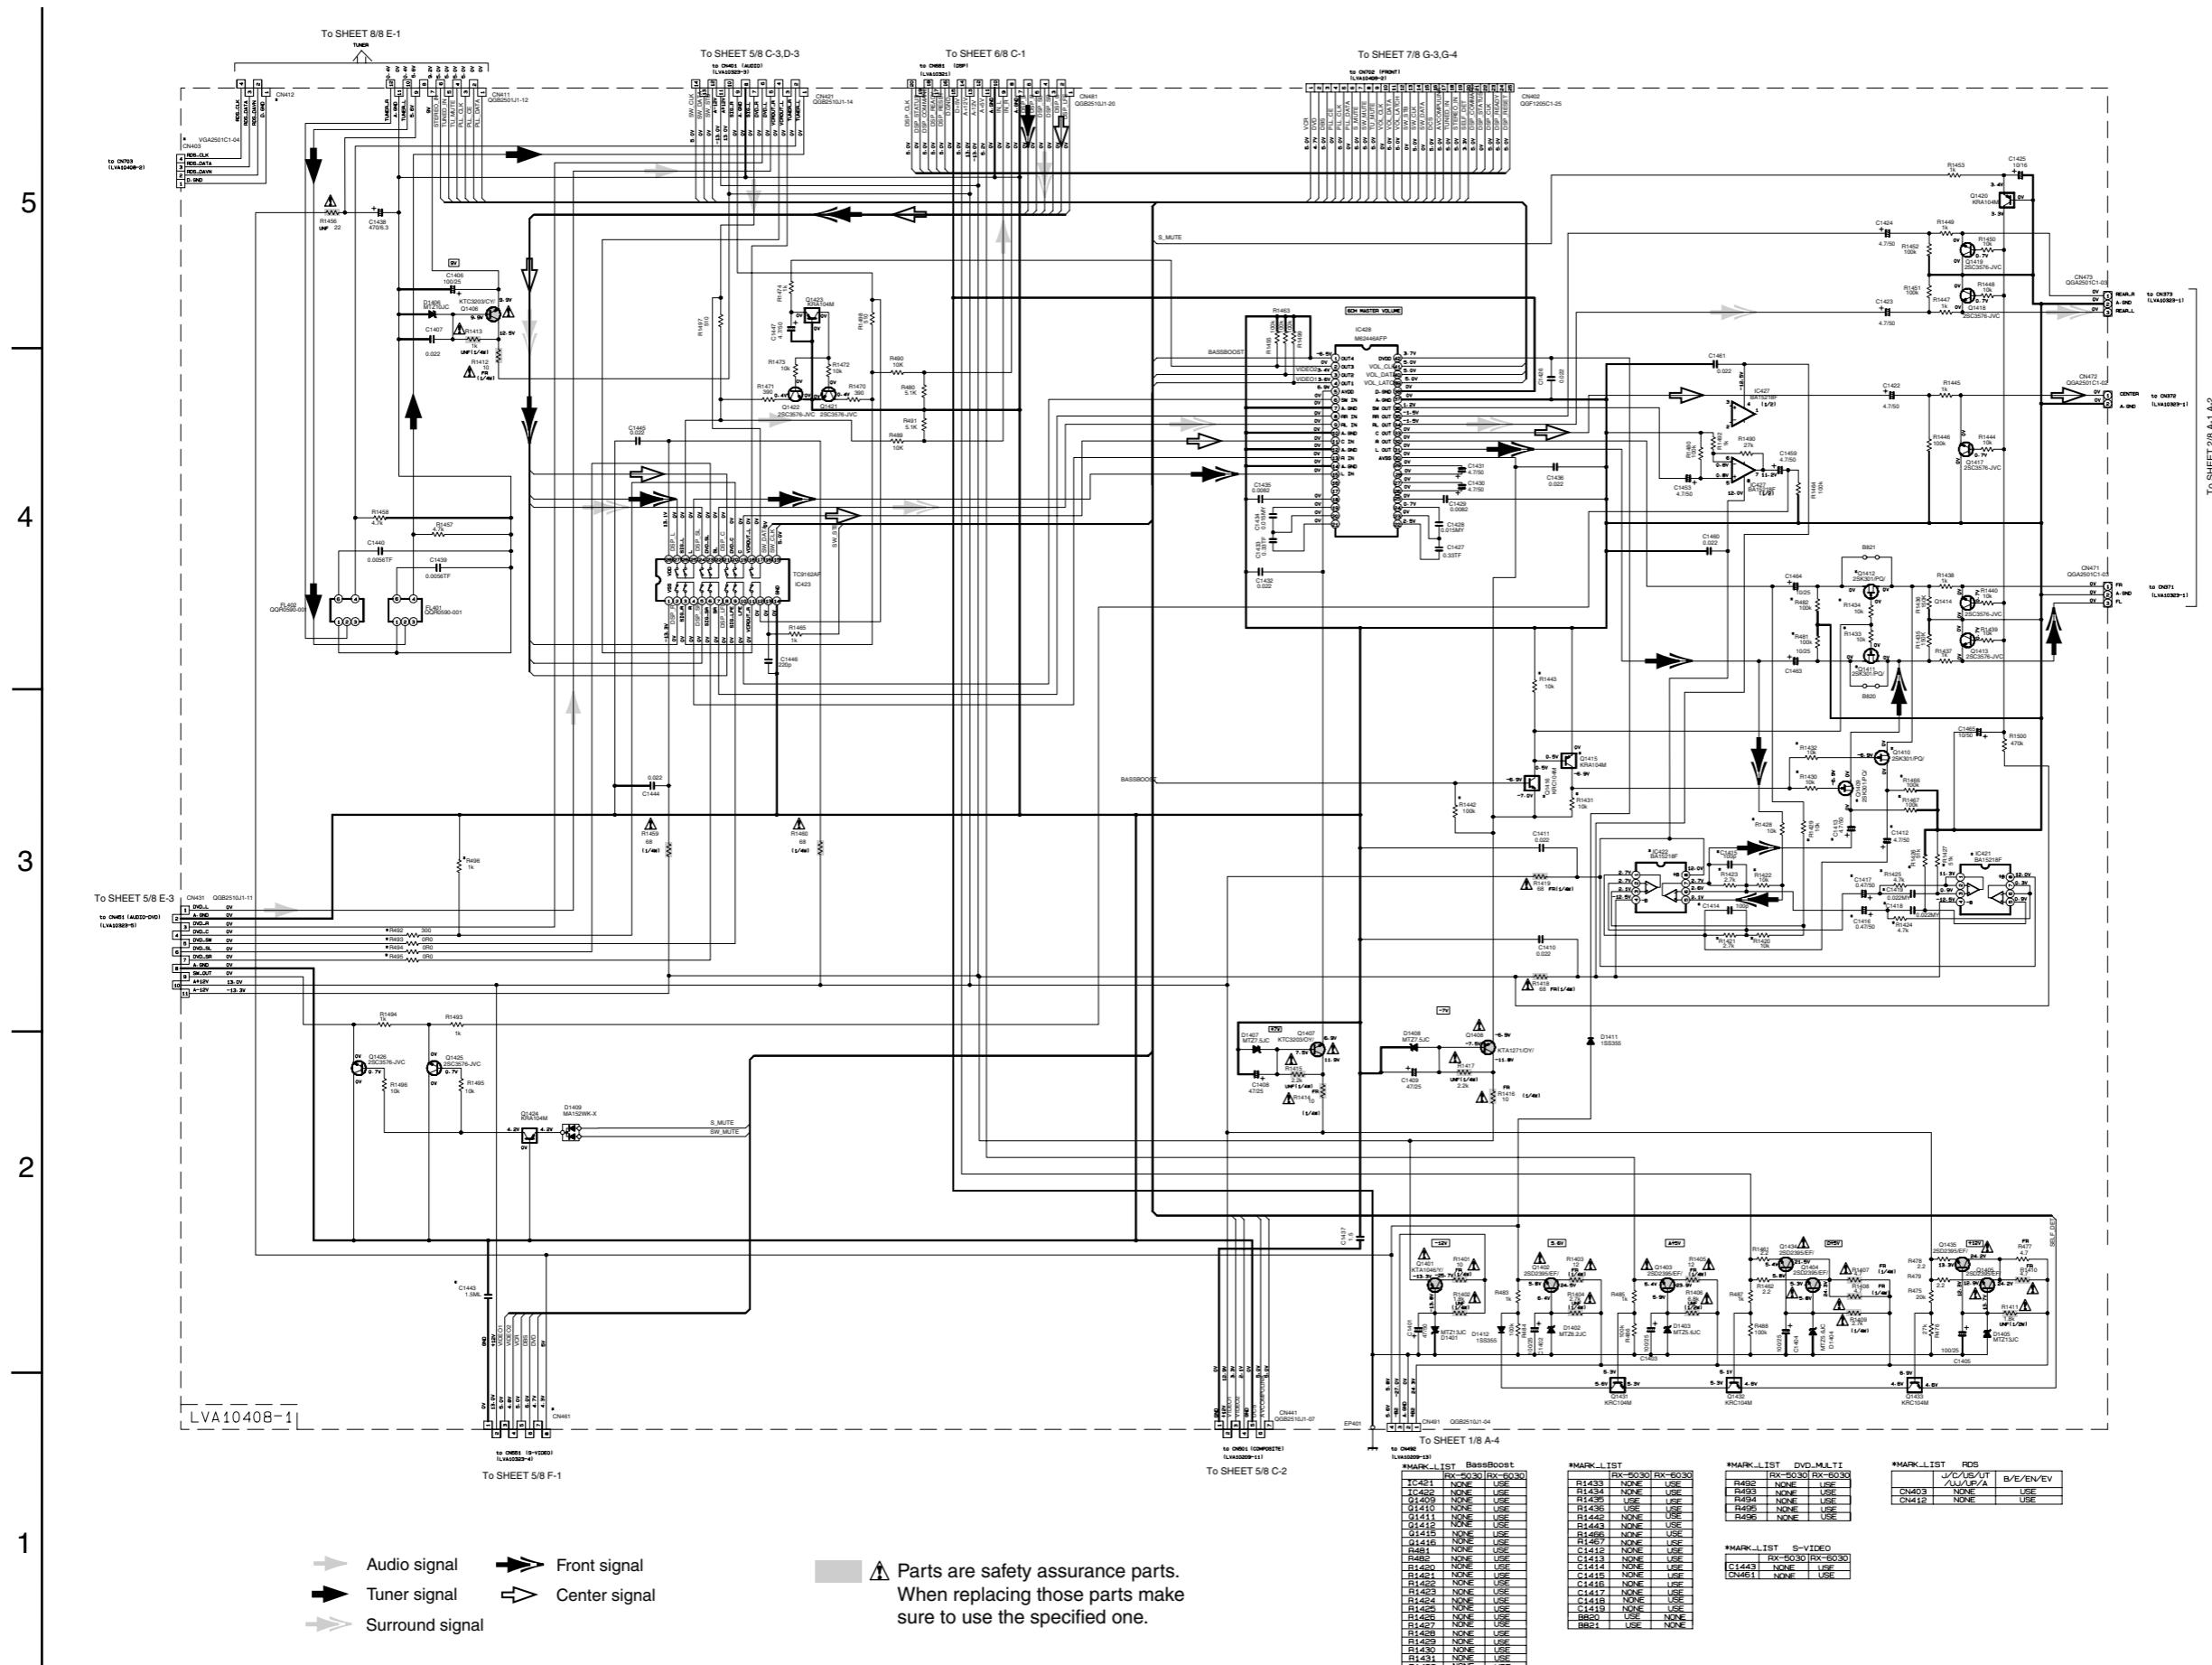

■ Audio & Video signal input terminal section

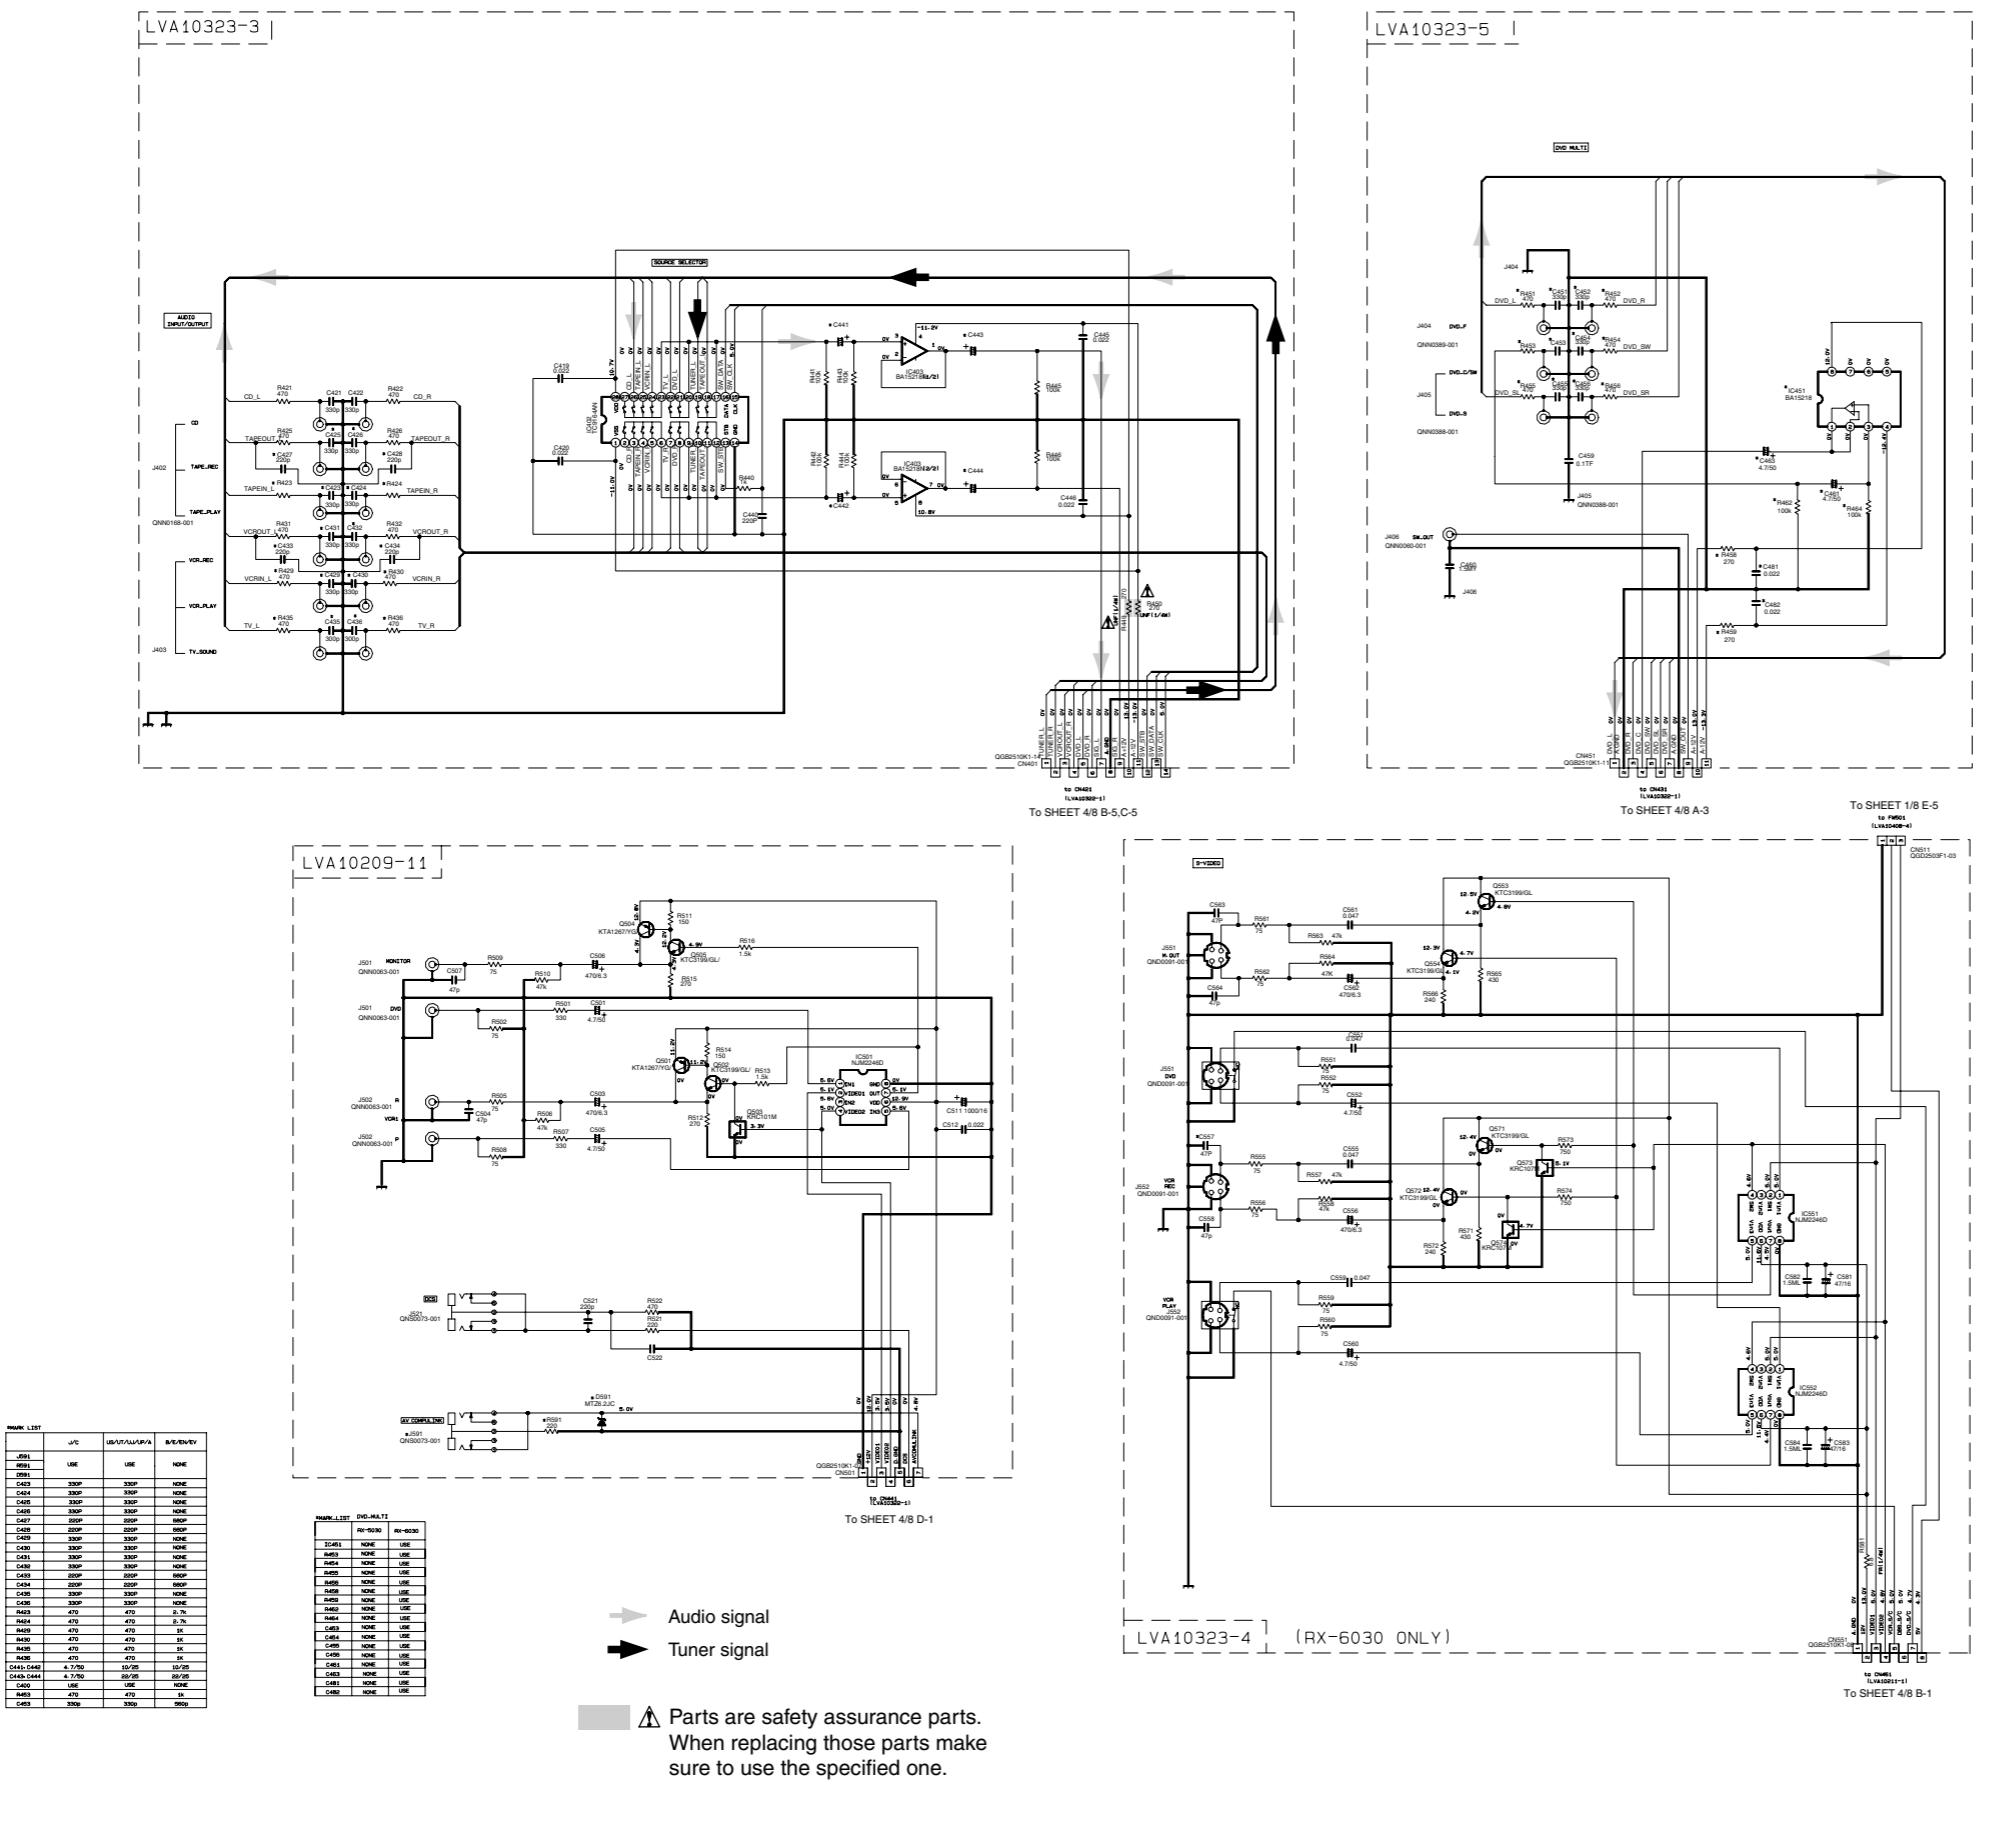


■ Digital signal input terminal & Surround section

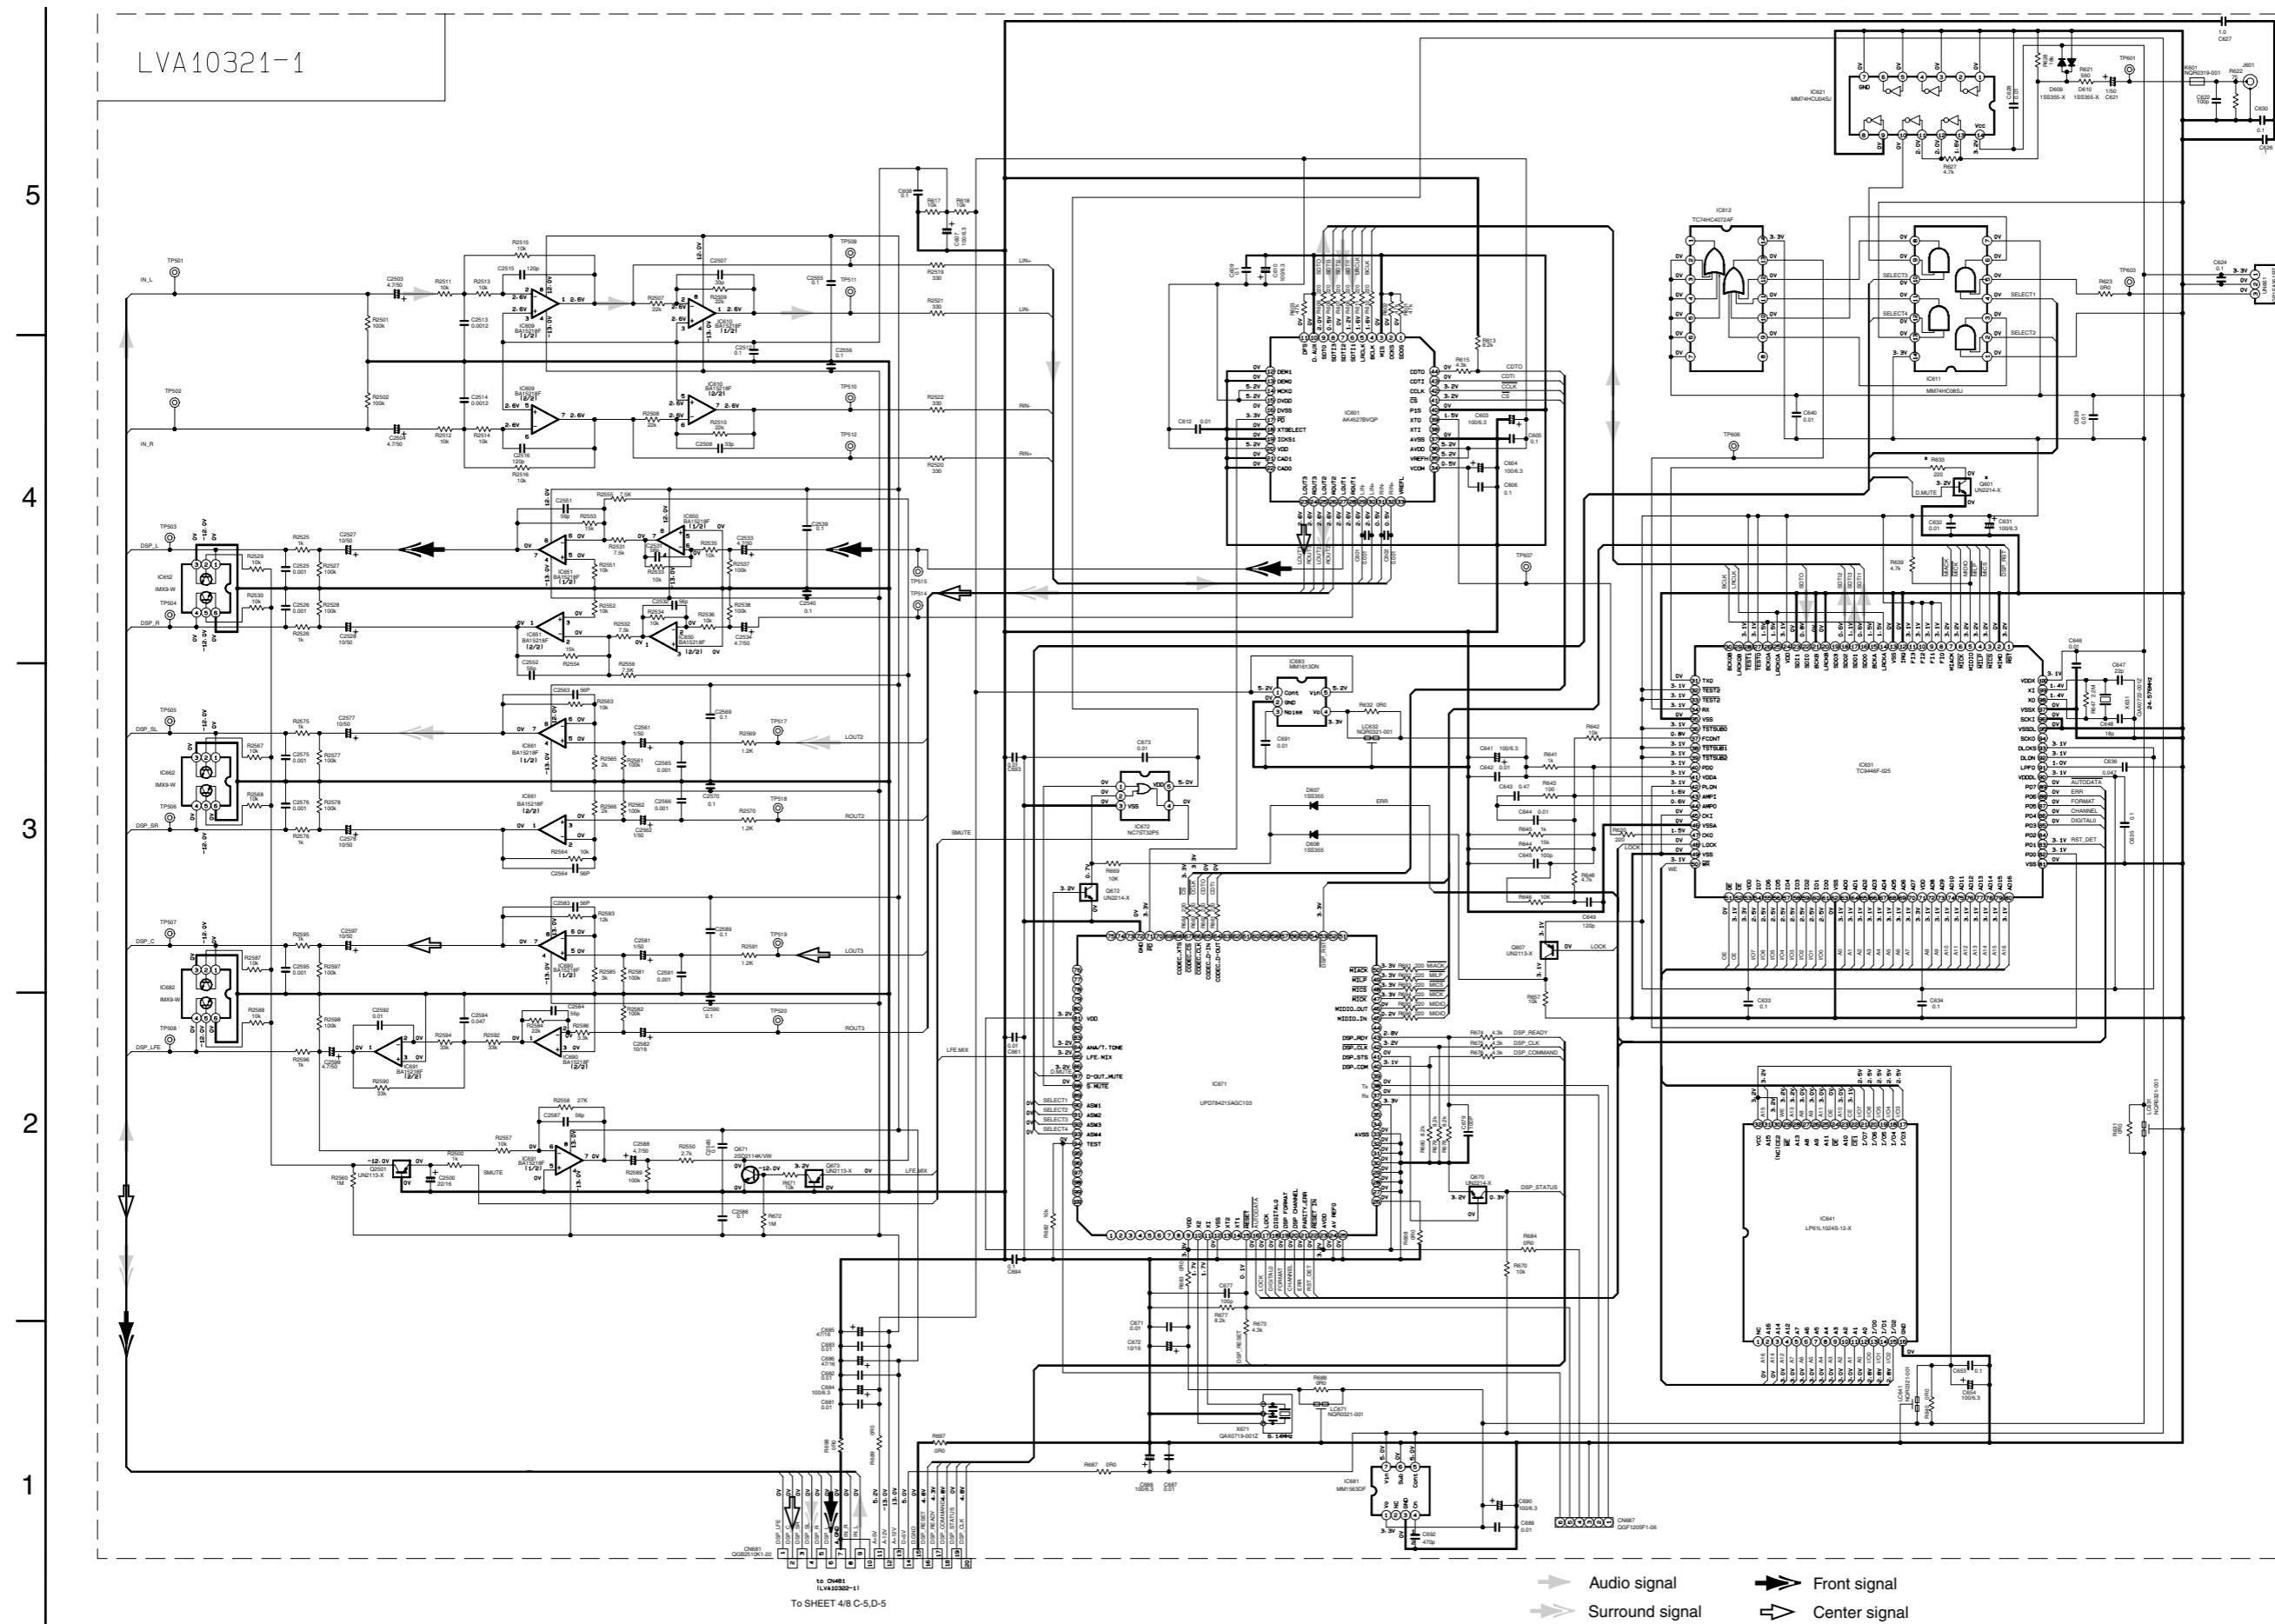


■ User control, System control & FL display section

LVA10408-2

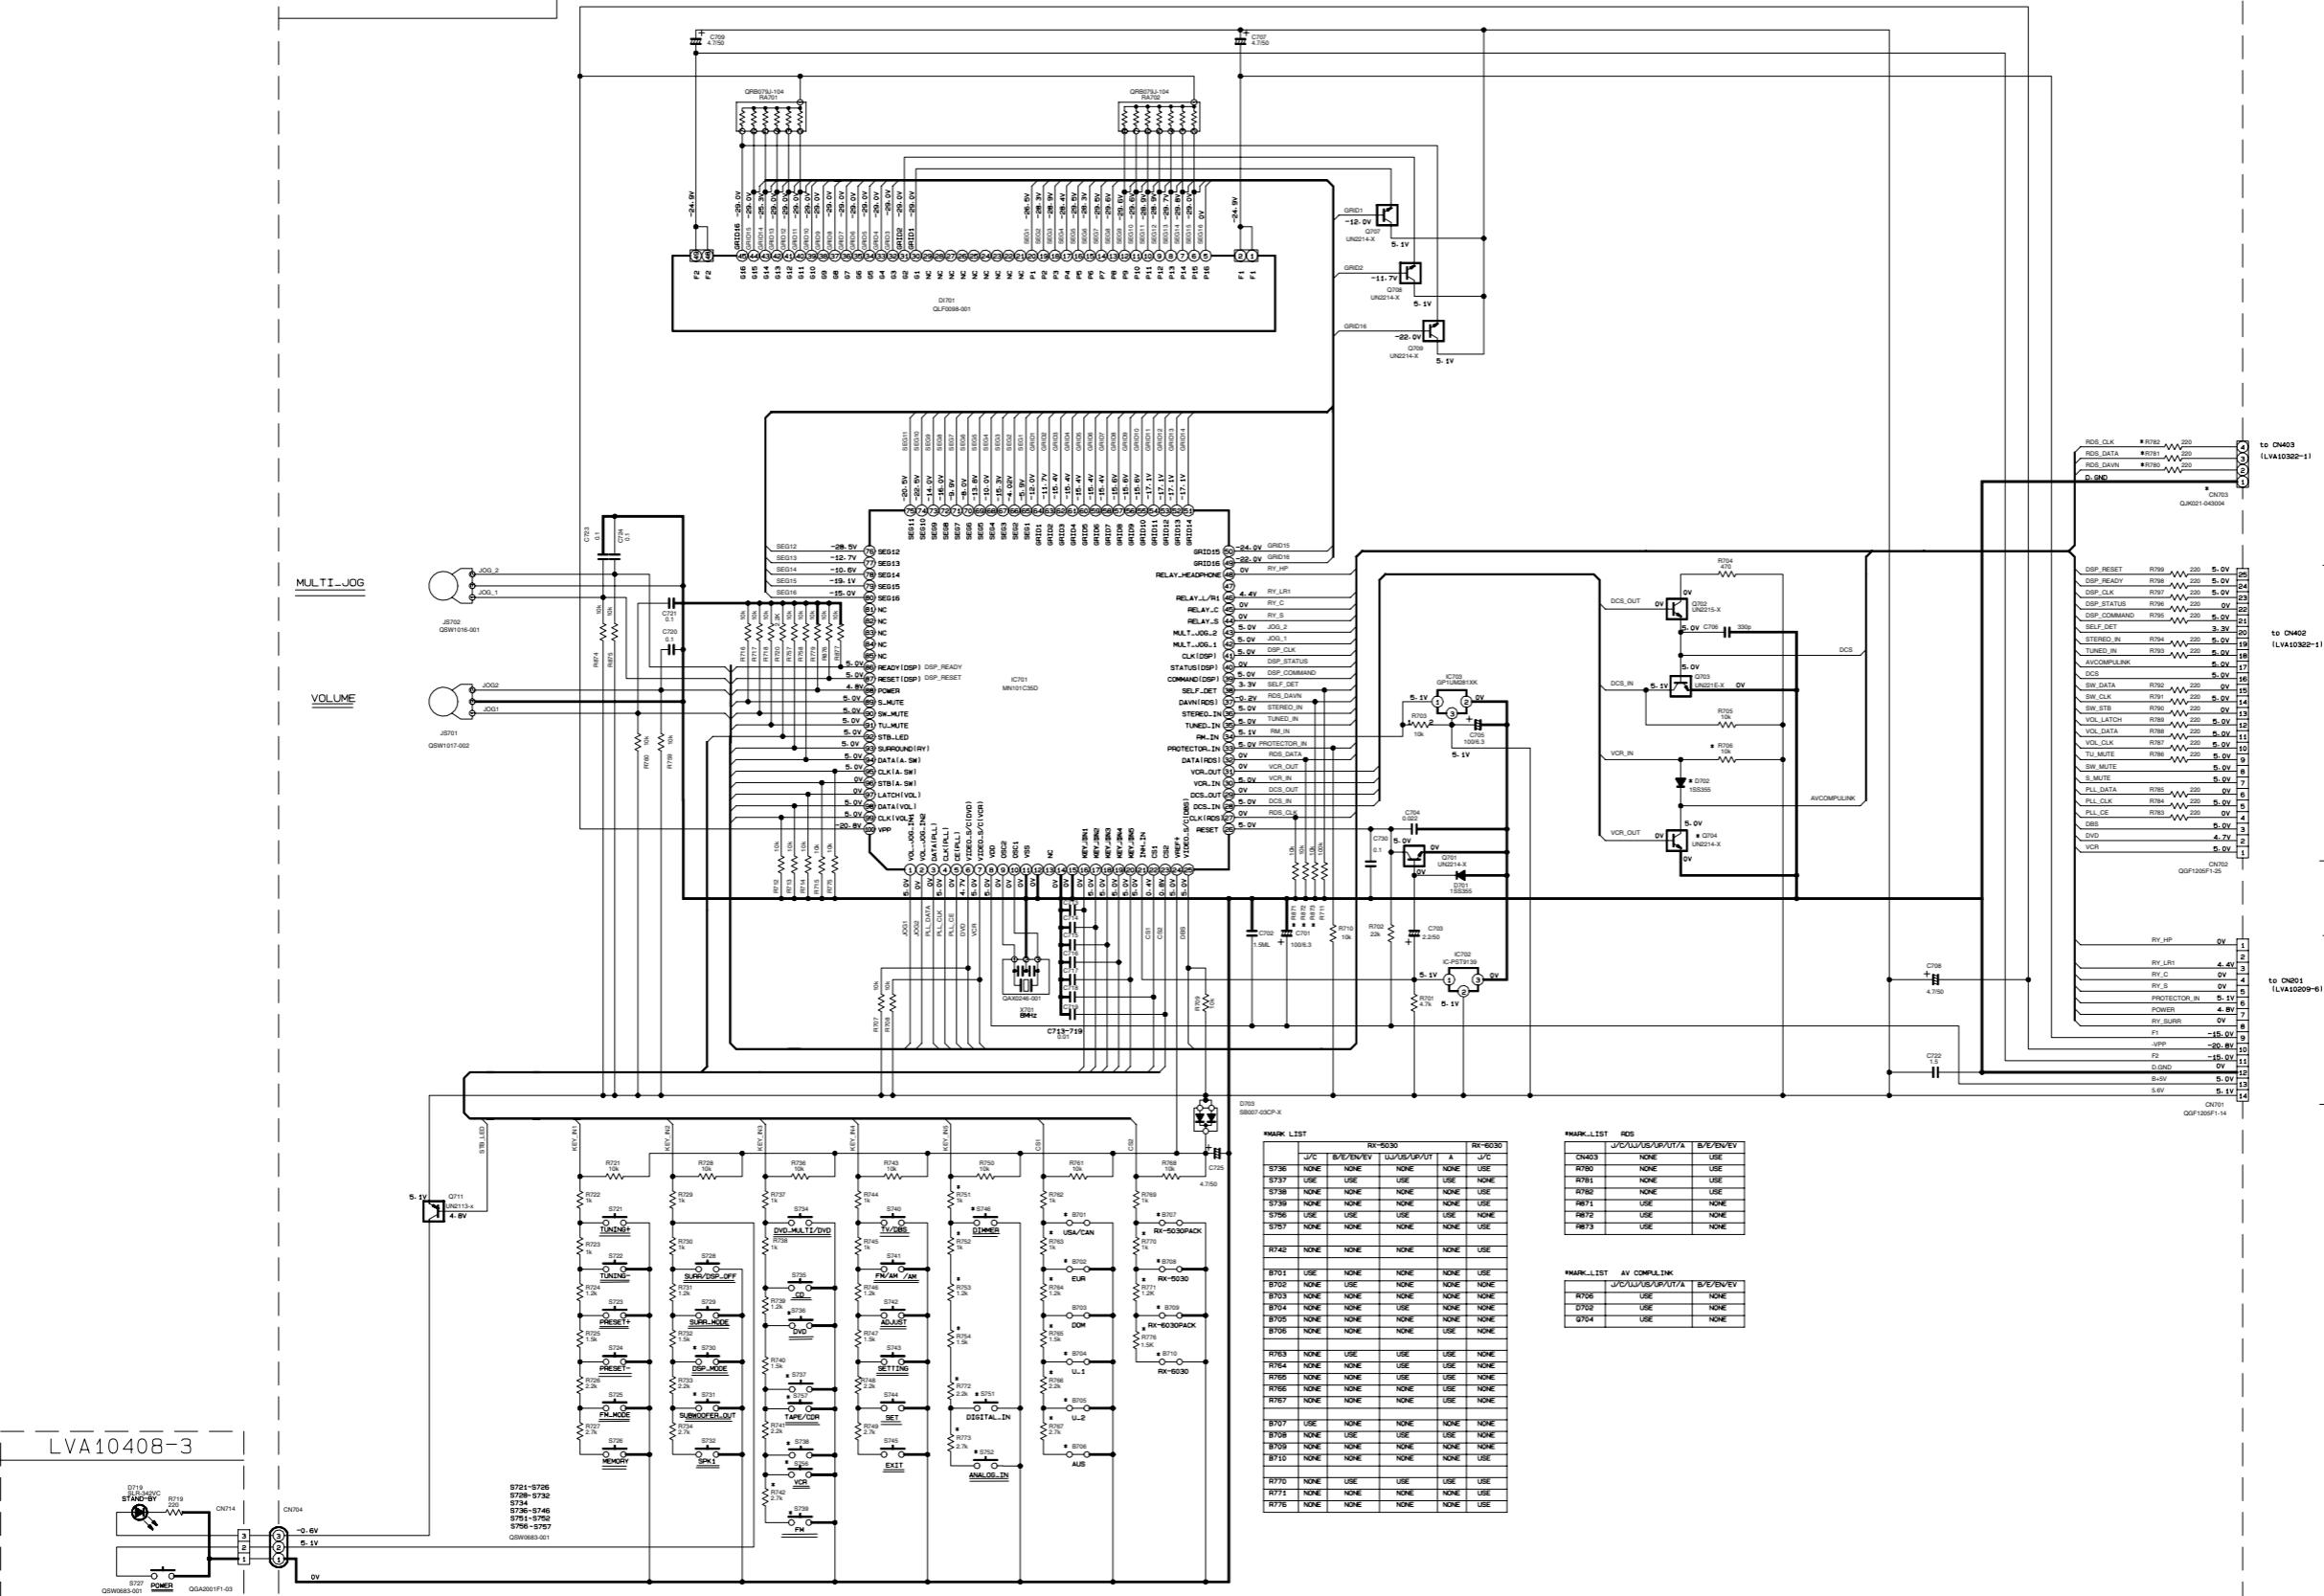


■ Tuner section

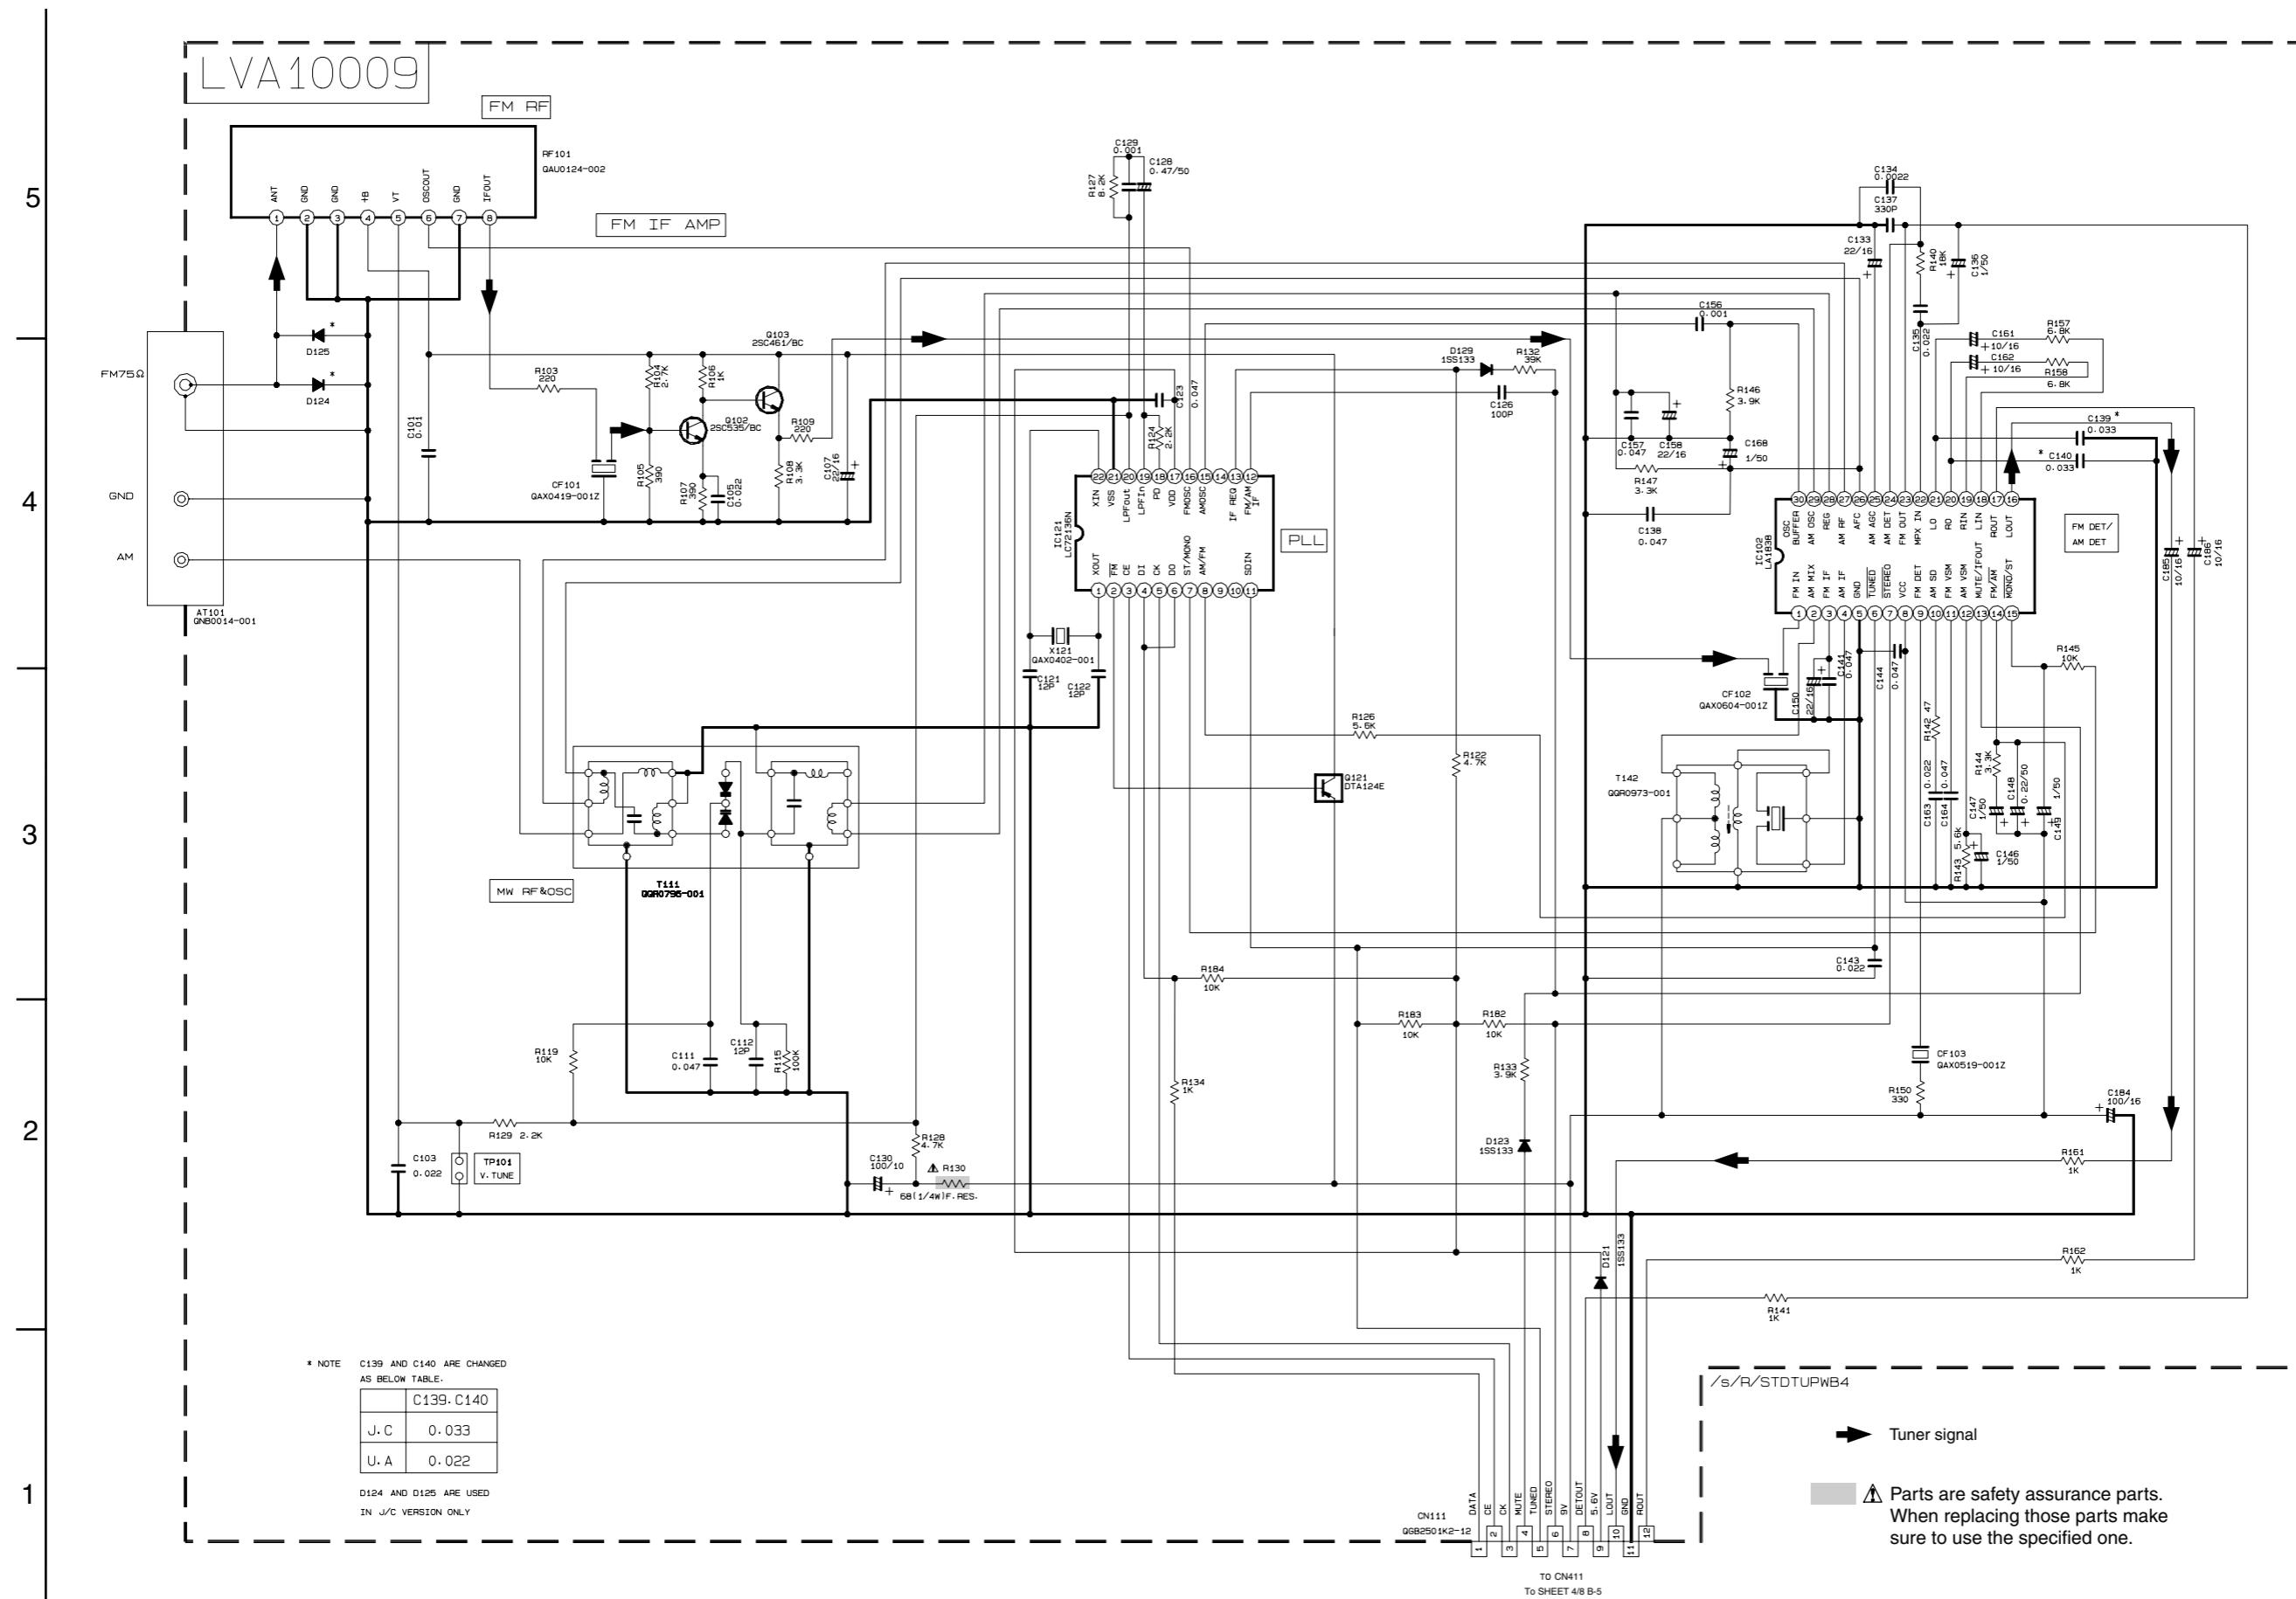

Printed circuit boards



Main board

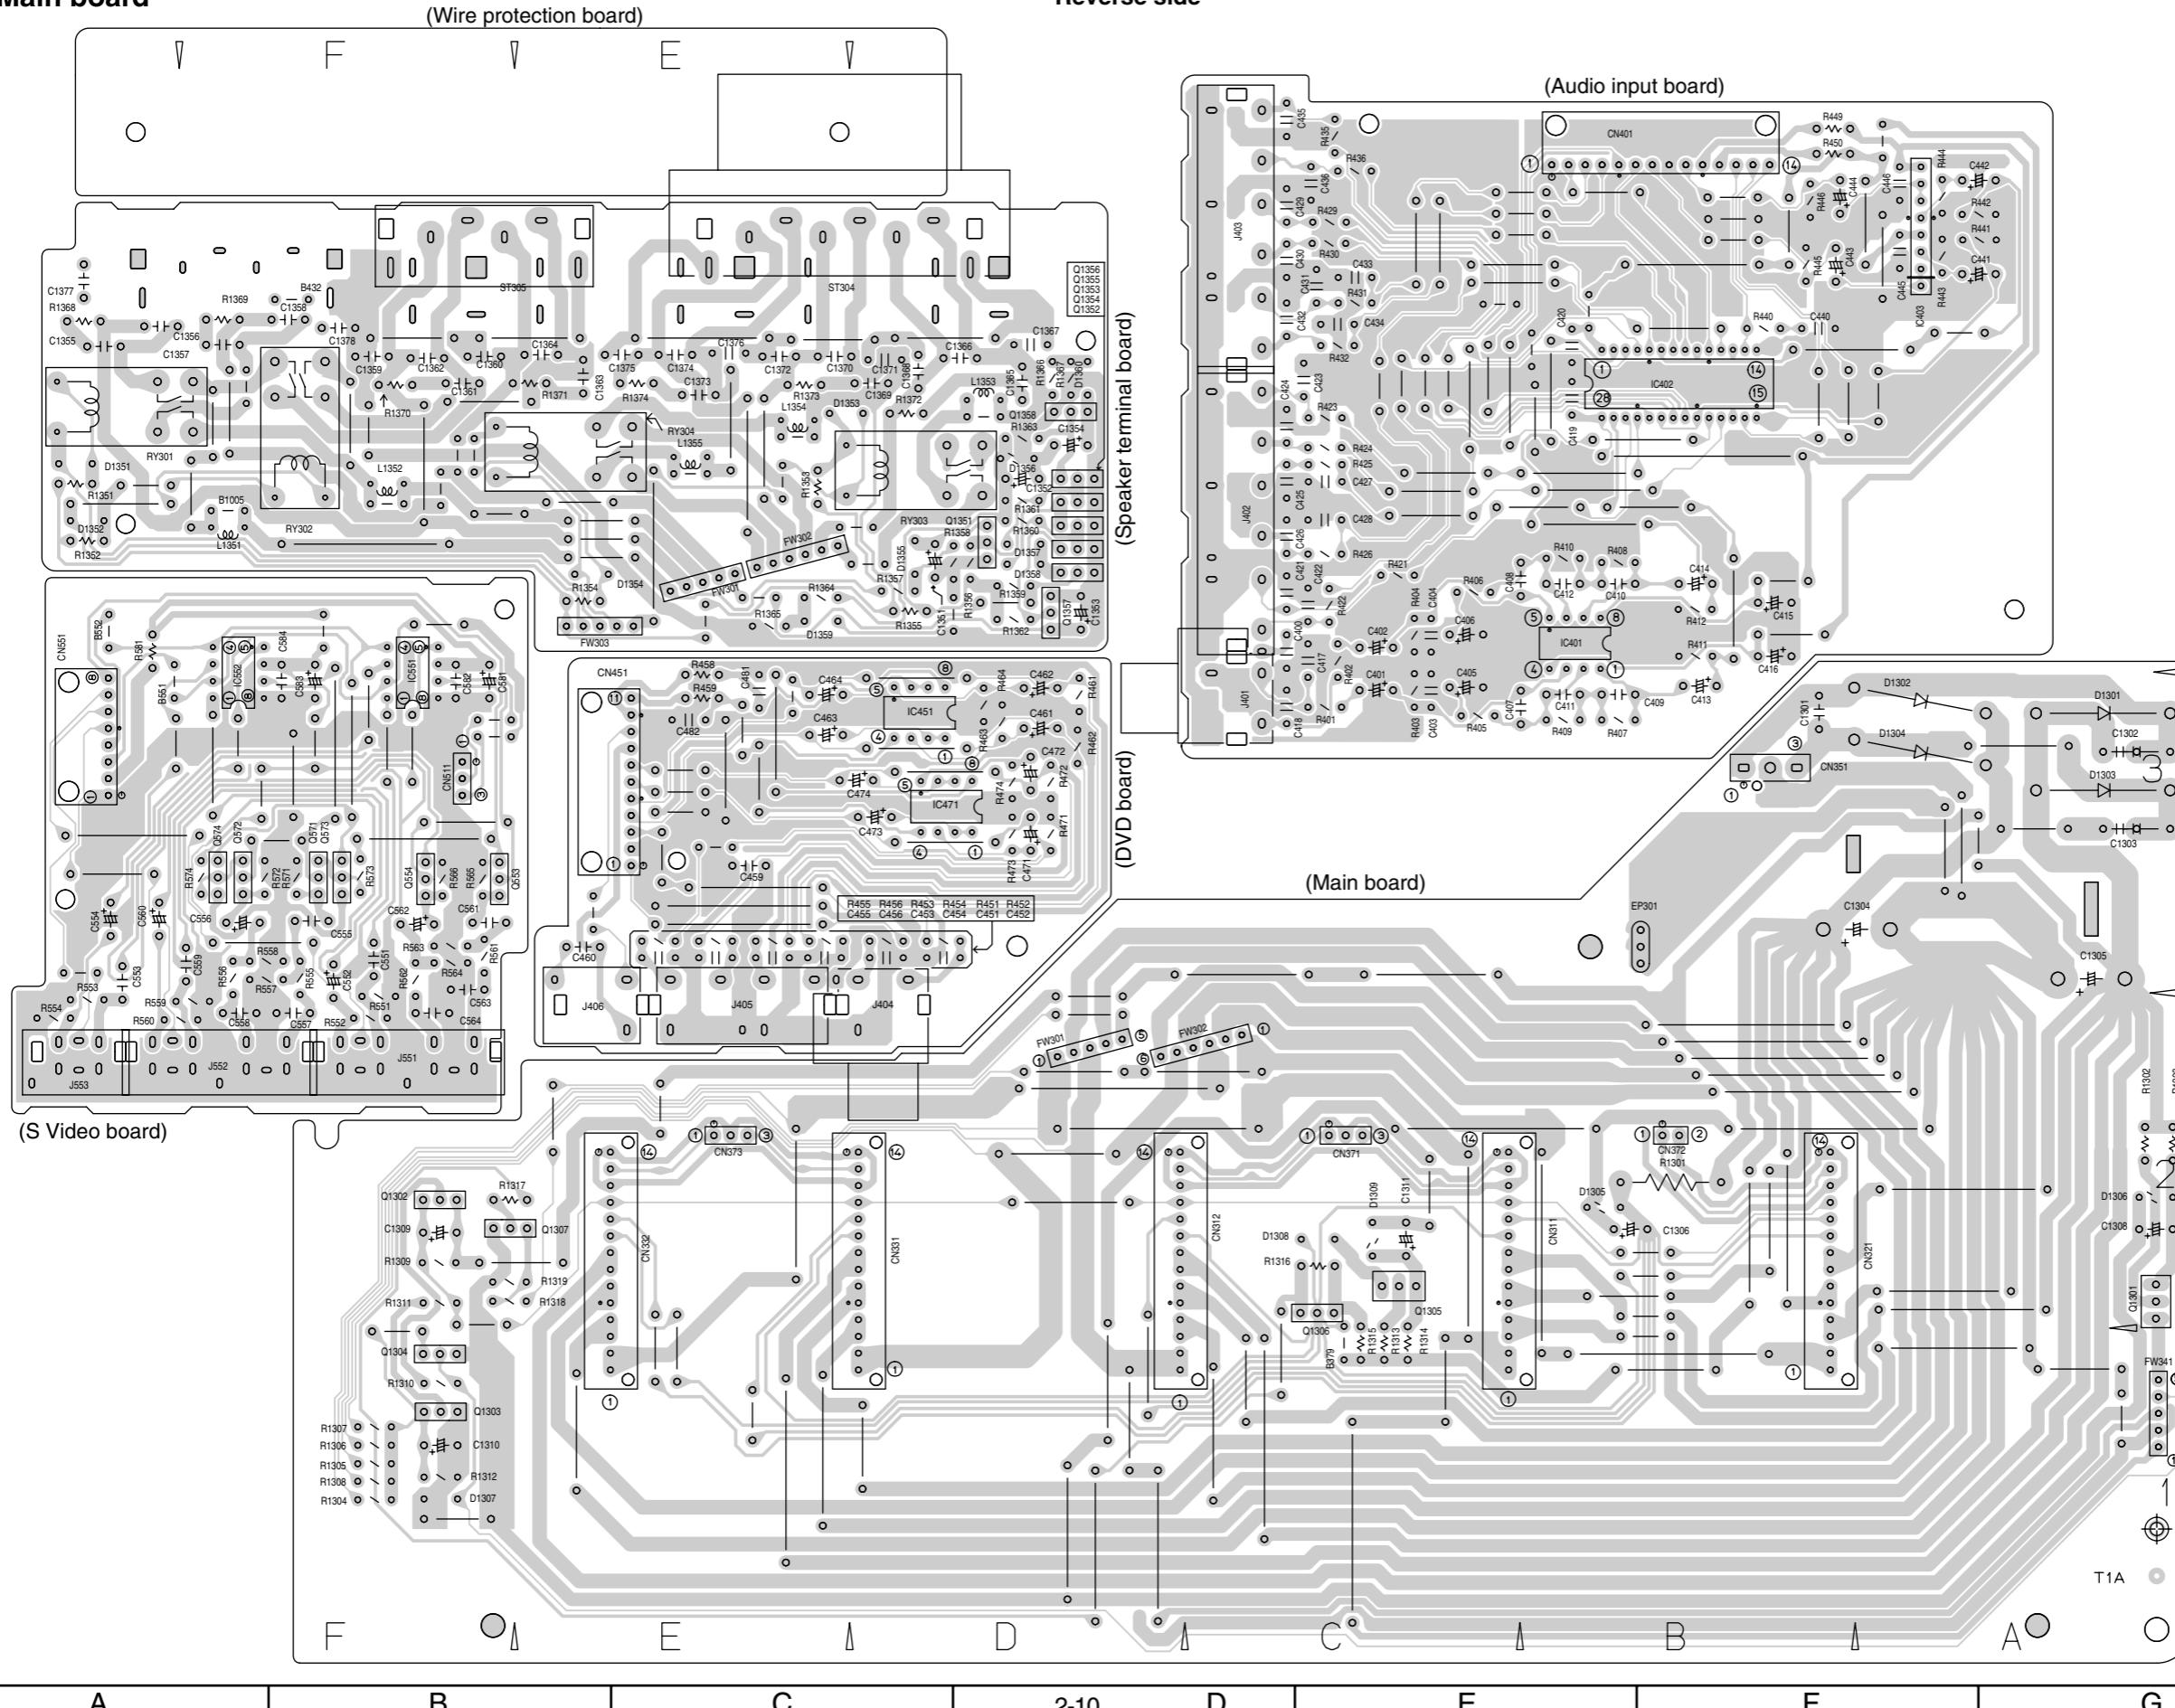


■ System control & Audio board

Reverse side

(System control board)

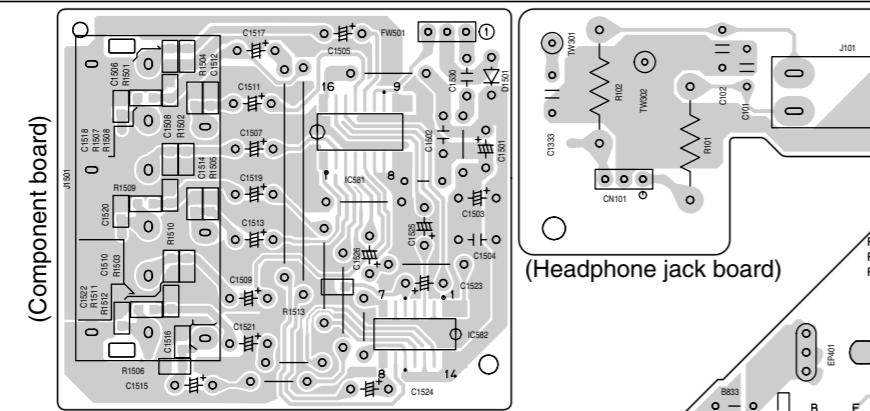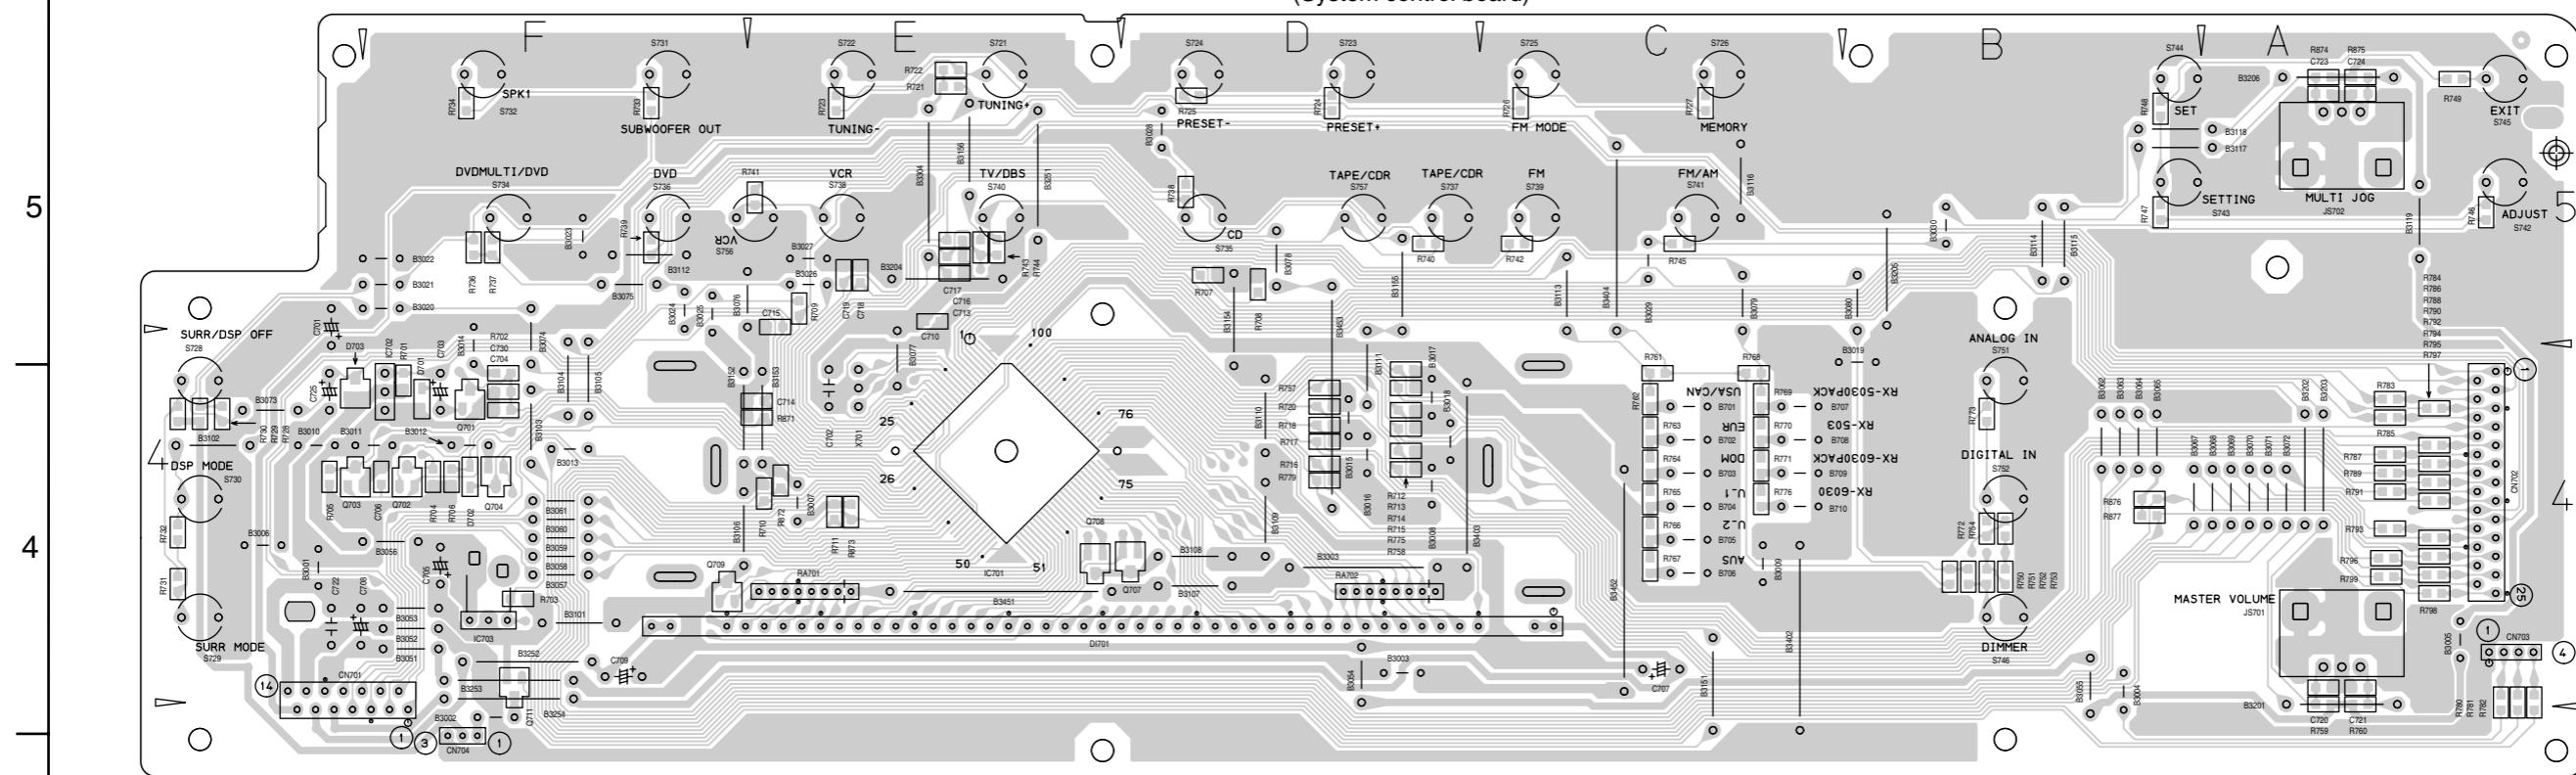


(Audio board)

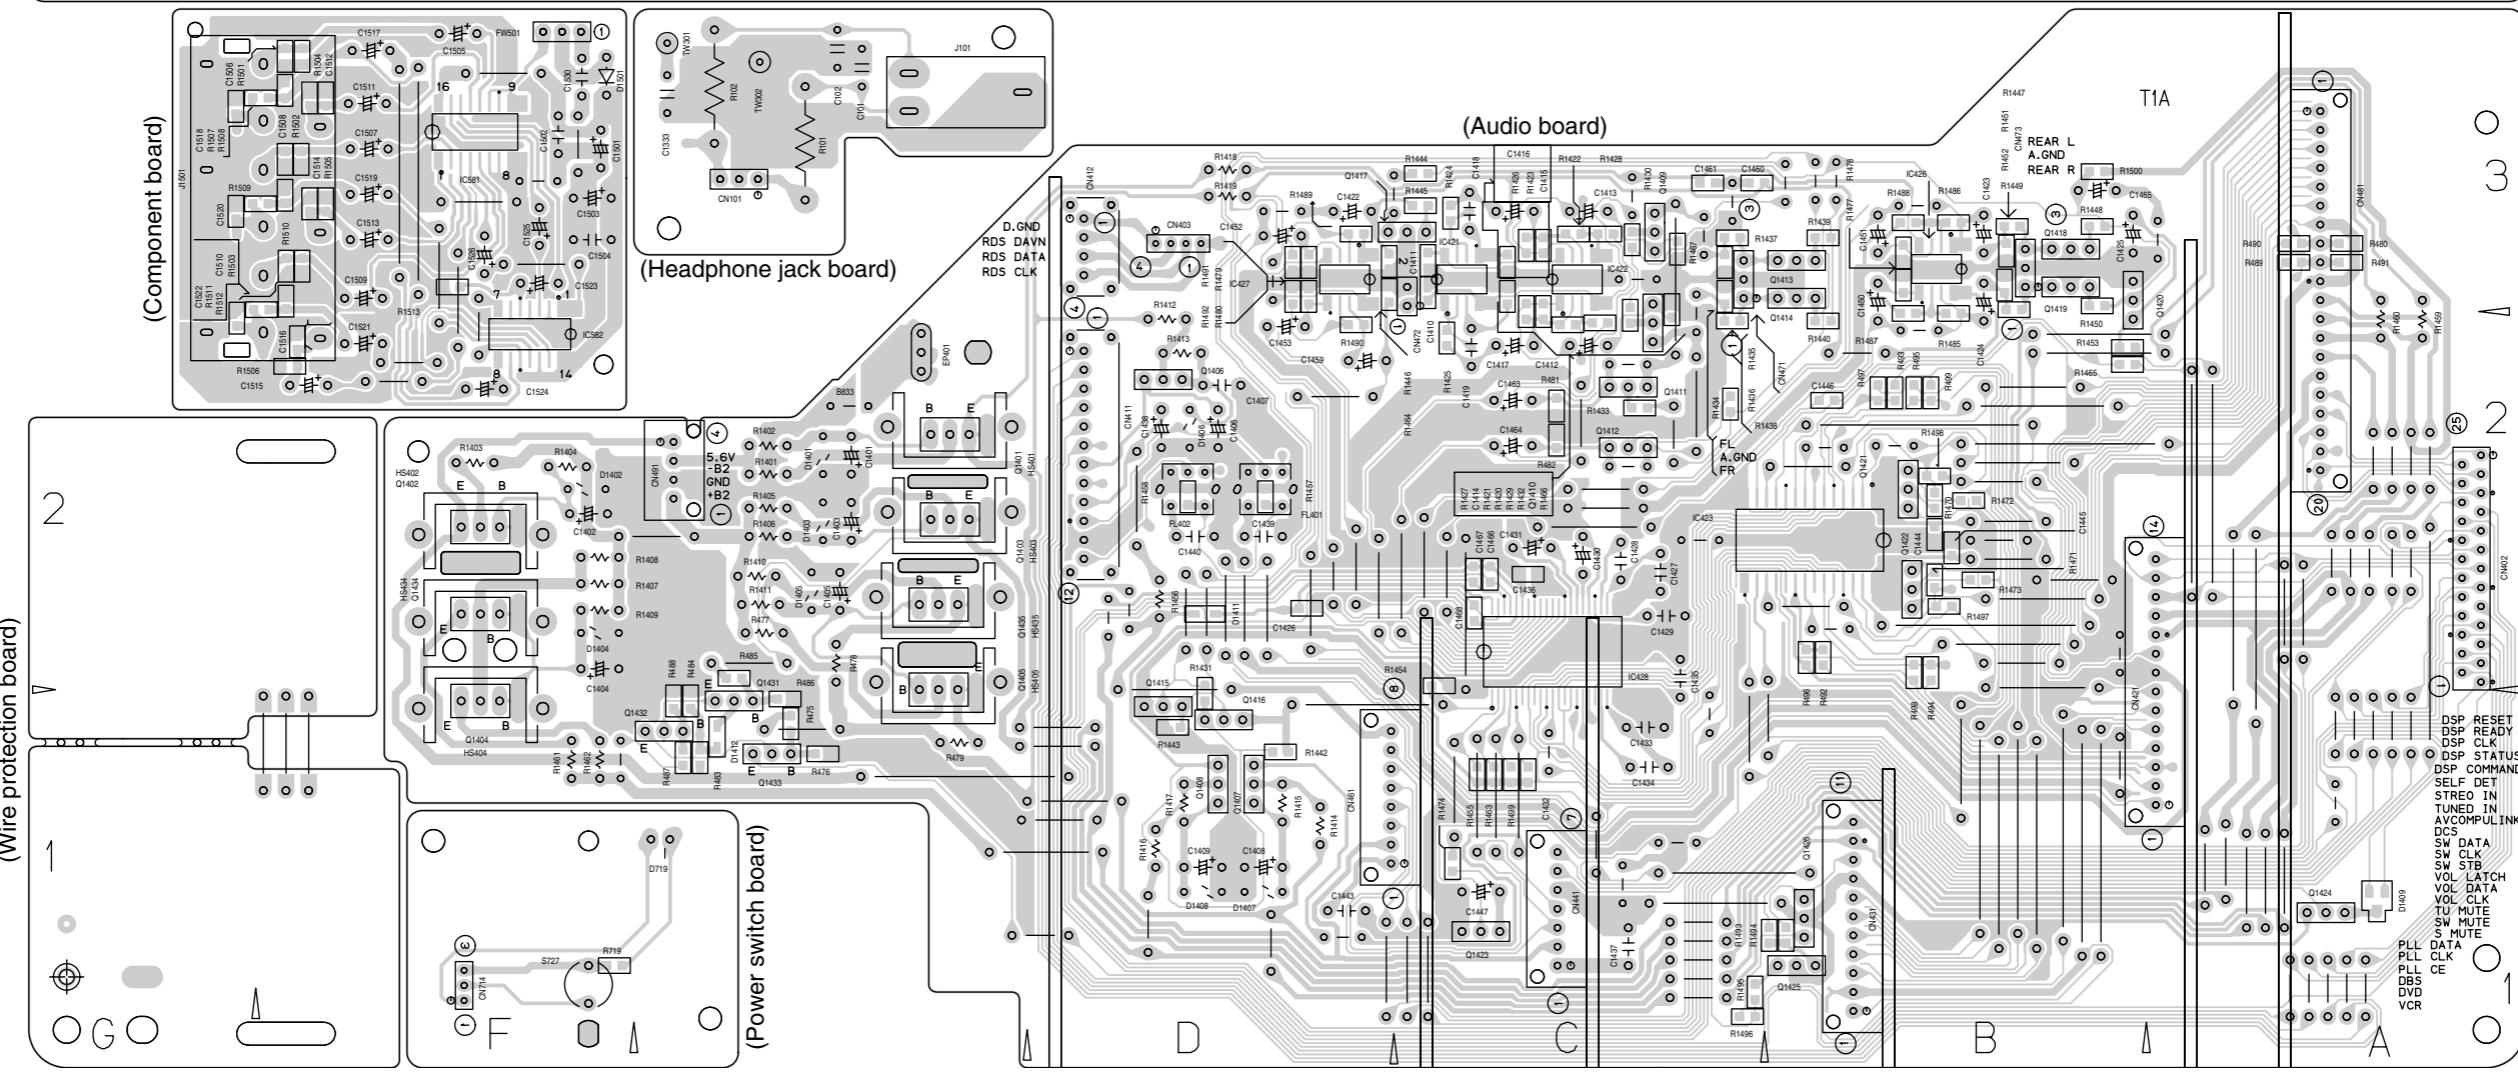


■ Power amp. board


(Power / Fuse board)

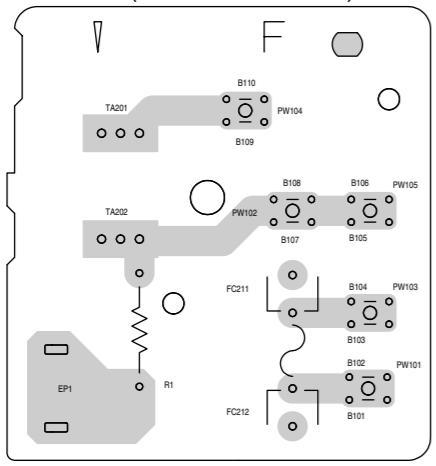


(Power transformer board 2)

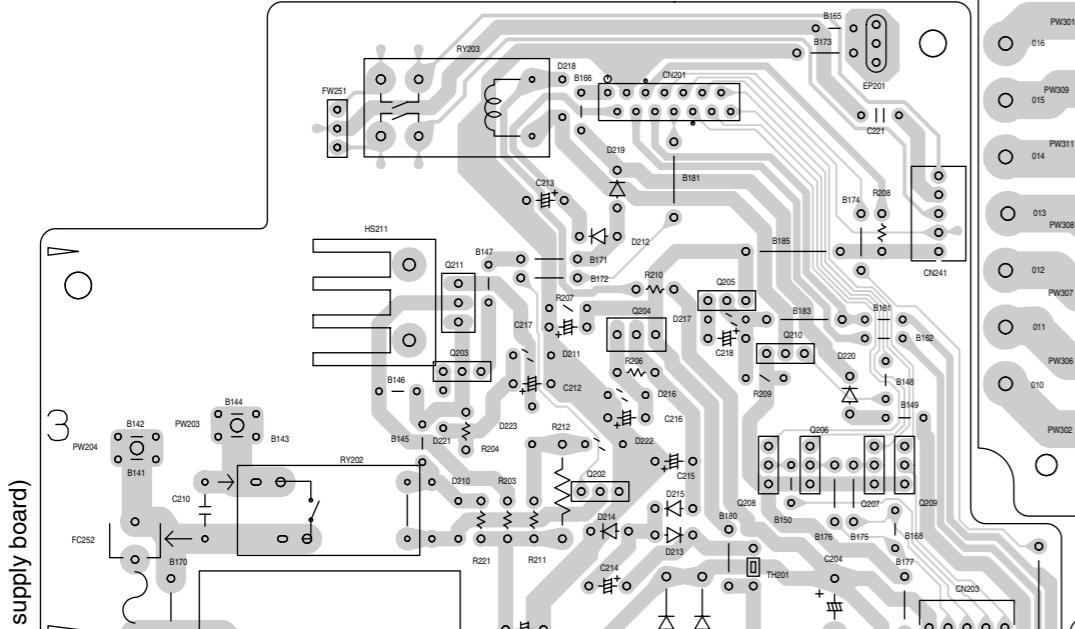

(Power transformer board 1)

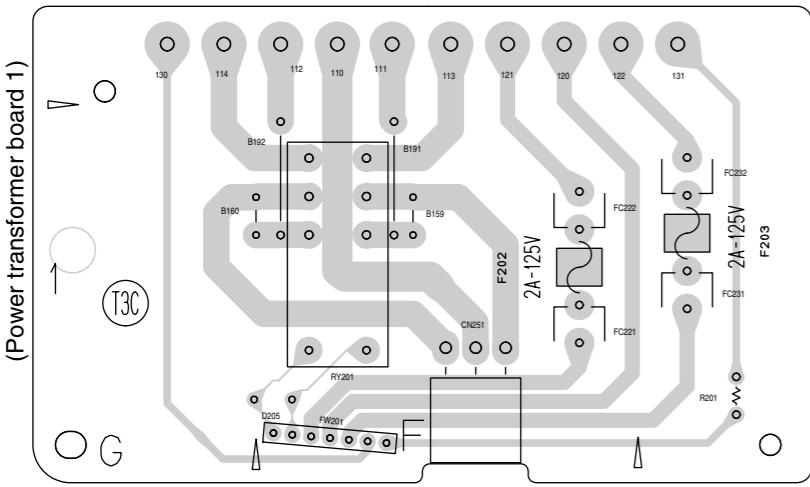


(Power supply board)

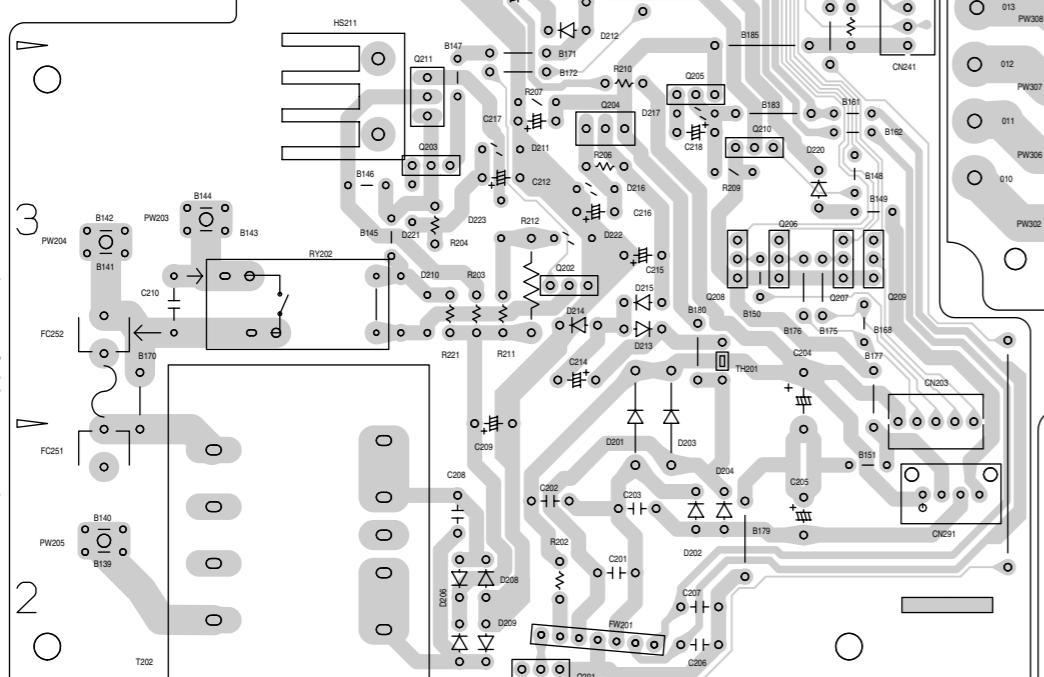


Reverse side


(Rear amp. board (L))

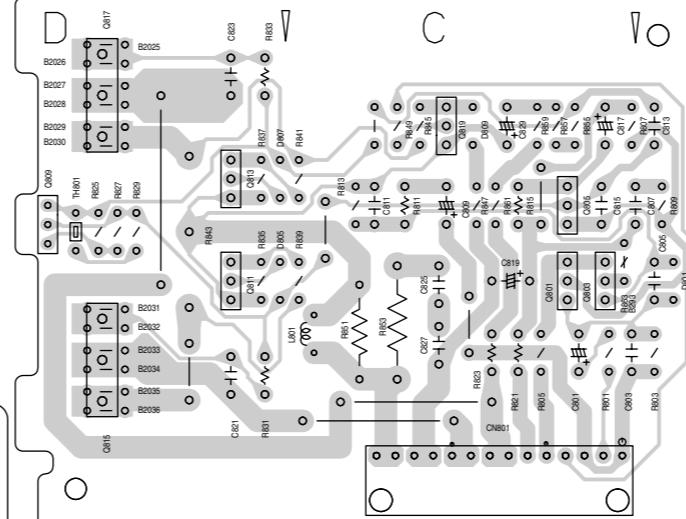


(Rear amp. board (R))

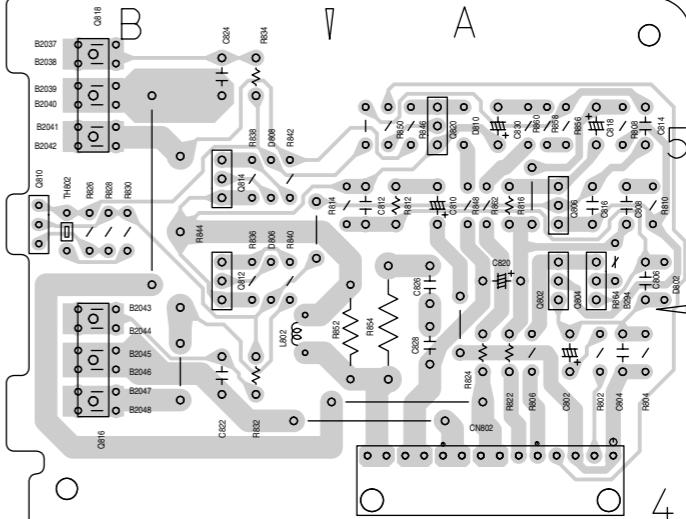


(Front amp. board (L))

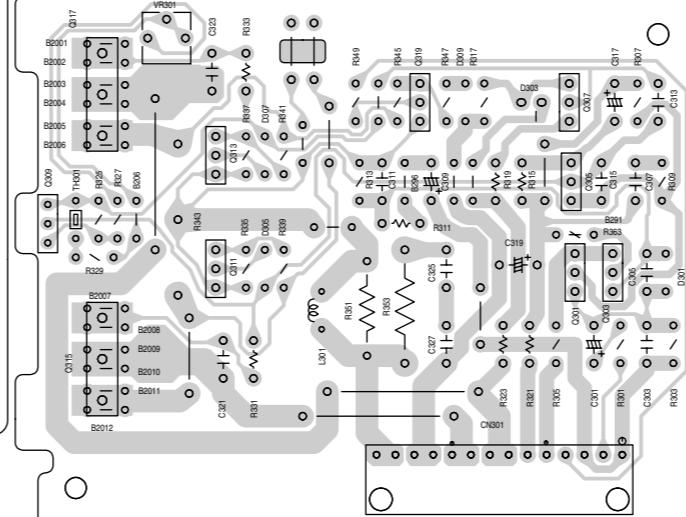


(Front amp. board (R))

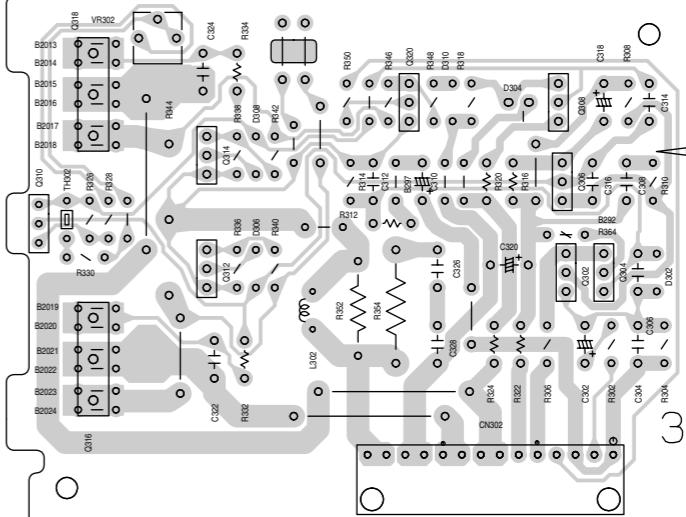


(Video board)

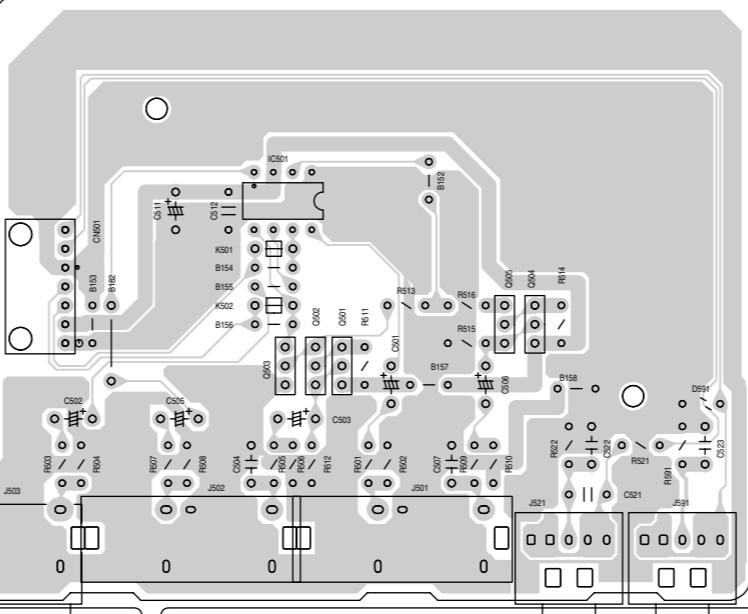

(Center amp. board)

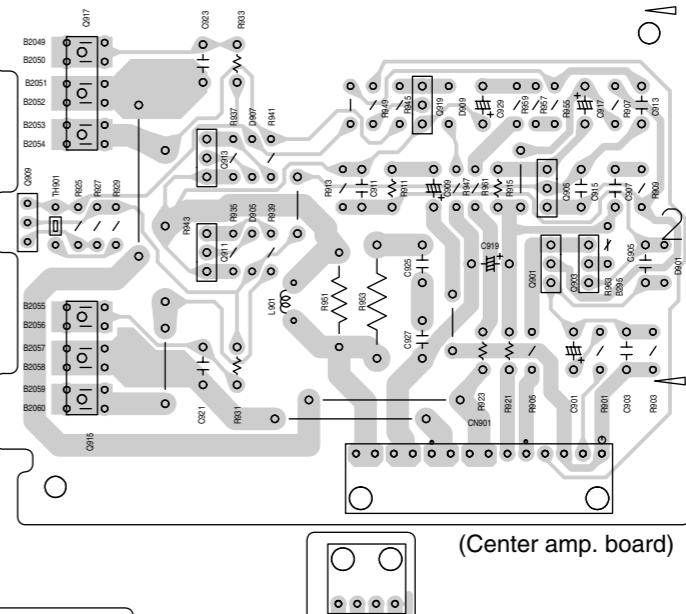

(Relay board)

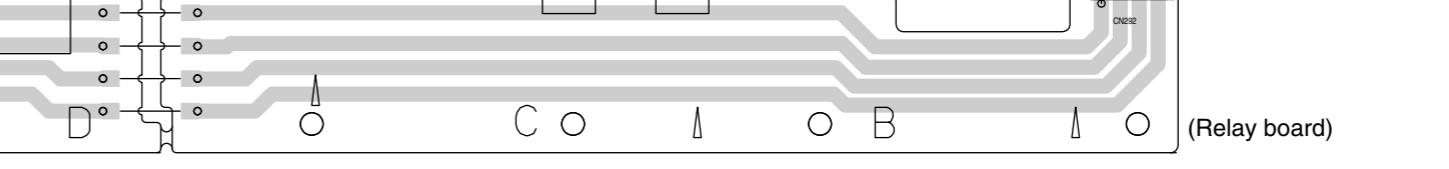

5

4

3

2

1

A

B

C

2-12



D

E

F

G

H

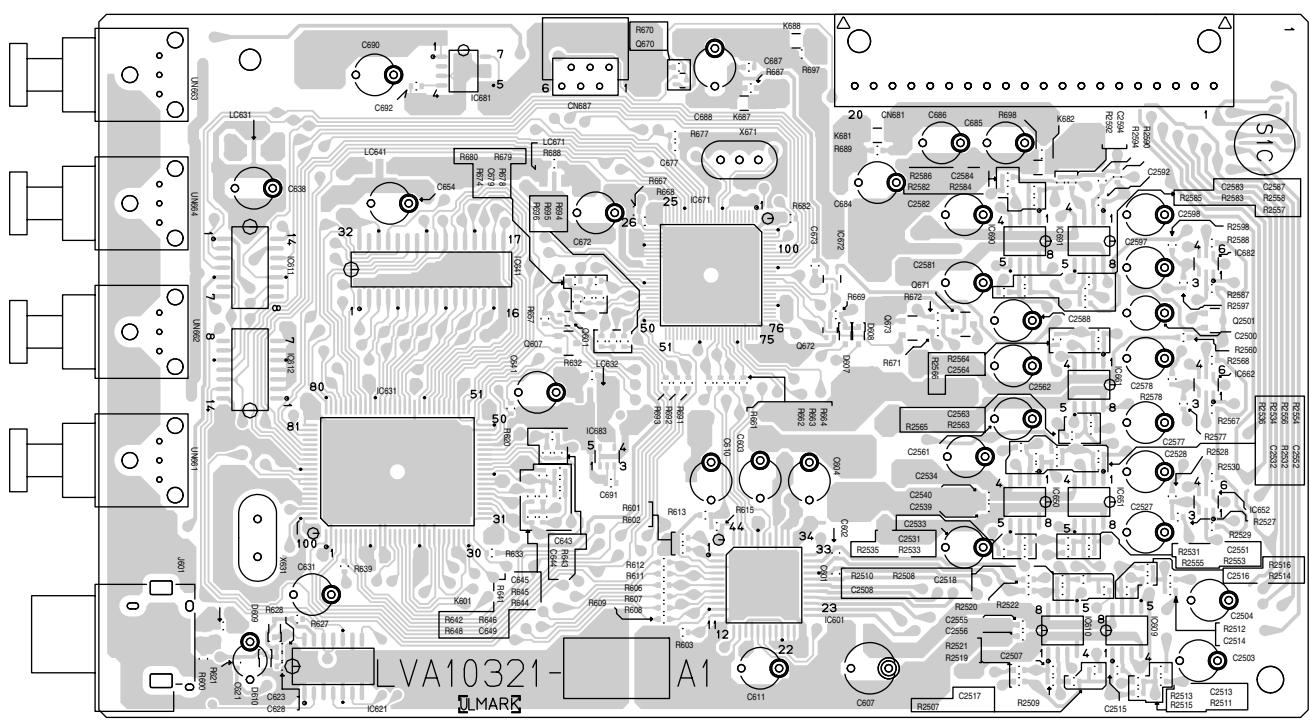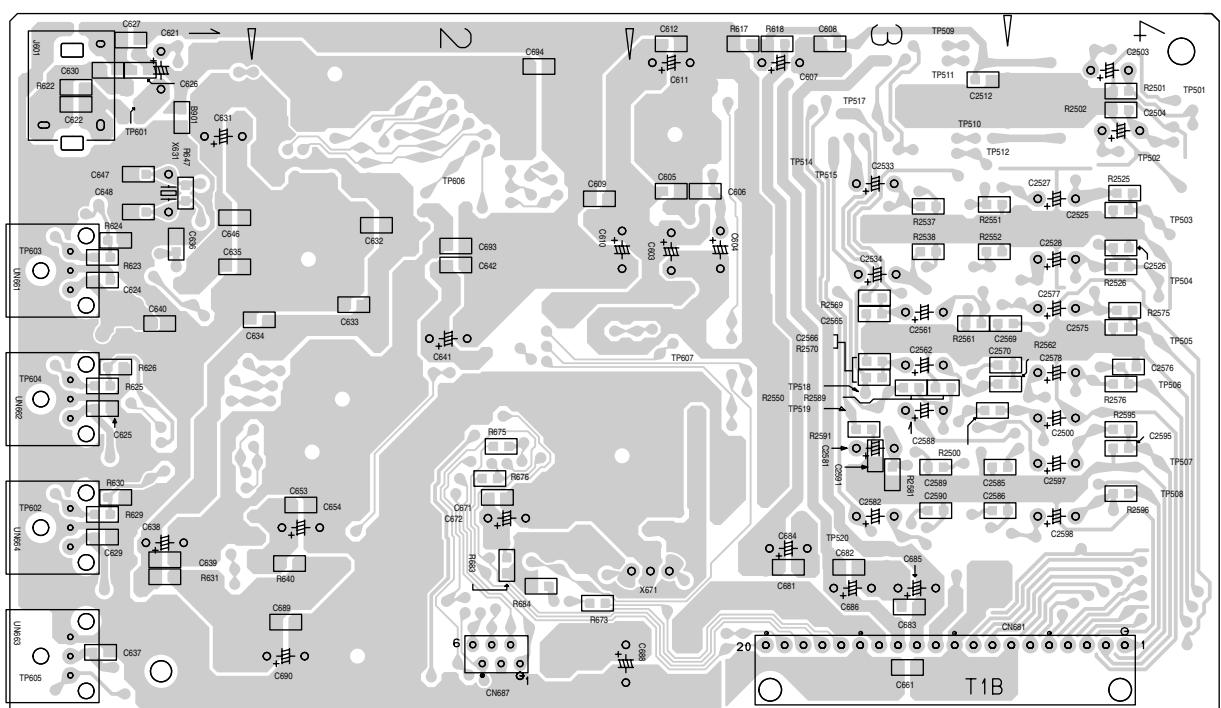DSP board**Forward side****Reverse side**


A

B

C

2-13

■ Tuner board

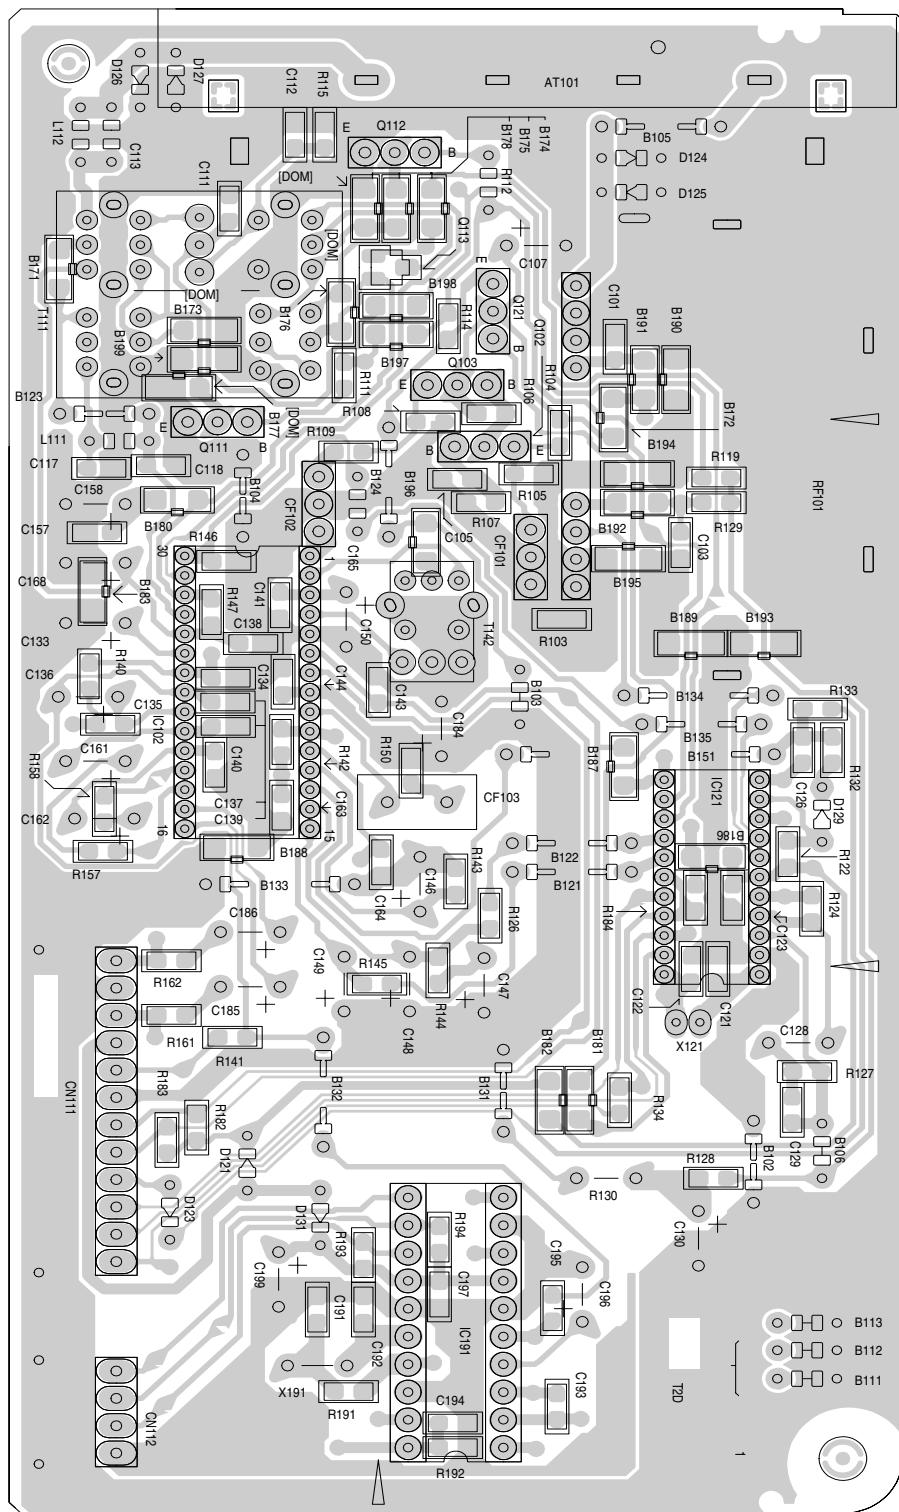

< MEMO >

RX-6030VBK

JVC

VICTOR COMPANY OF JAPAN, LIMITED

AV & MULTIMEDIA COMPANY 10-1, 1Chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.22026SCH)

 Printed in Japan
2003/03

PARTS LIST

[RX-6030VBK]

* All printed circuit boards and its assemblies are not available as service parts.

Area suffix

J ----- U.S.A.
C ----- Canada


- Contents -

Exploded view of general assembly and parts list (Block No.M1)	3- 3
Electrical parts list (Block No.01~05)	3- 5
Packing materials and accessories parts list (Block No.M3,M5)	3- 20

< **MEMO** >

Exploded view of general assembly and parts list

Block No. M 1 M M

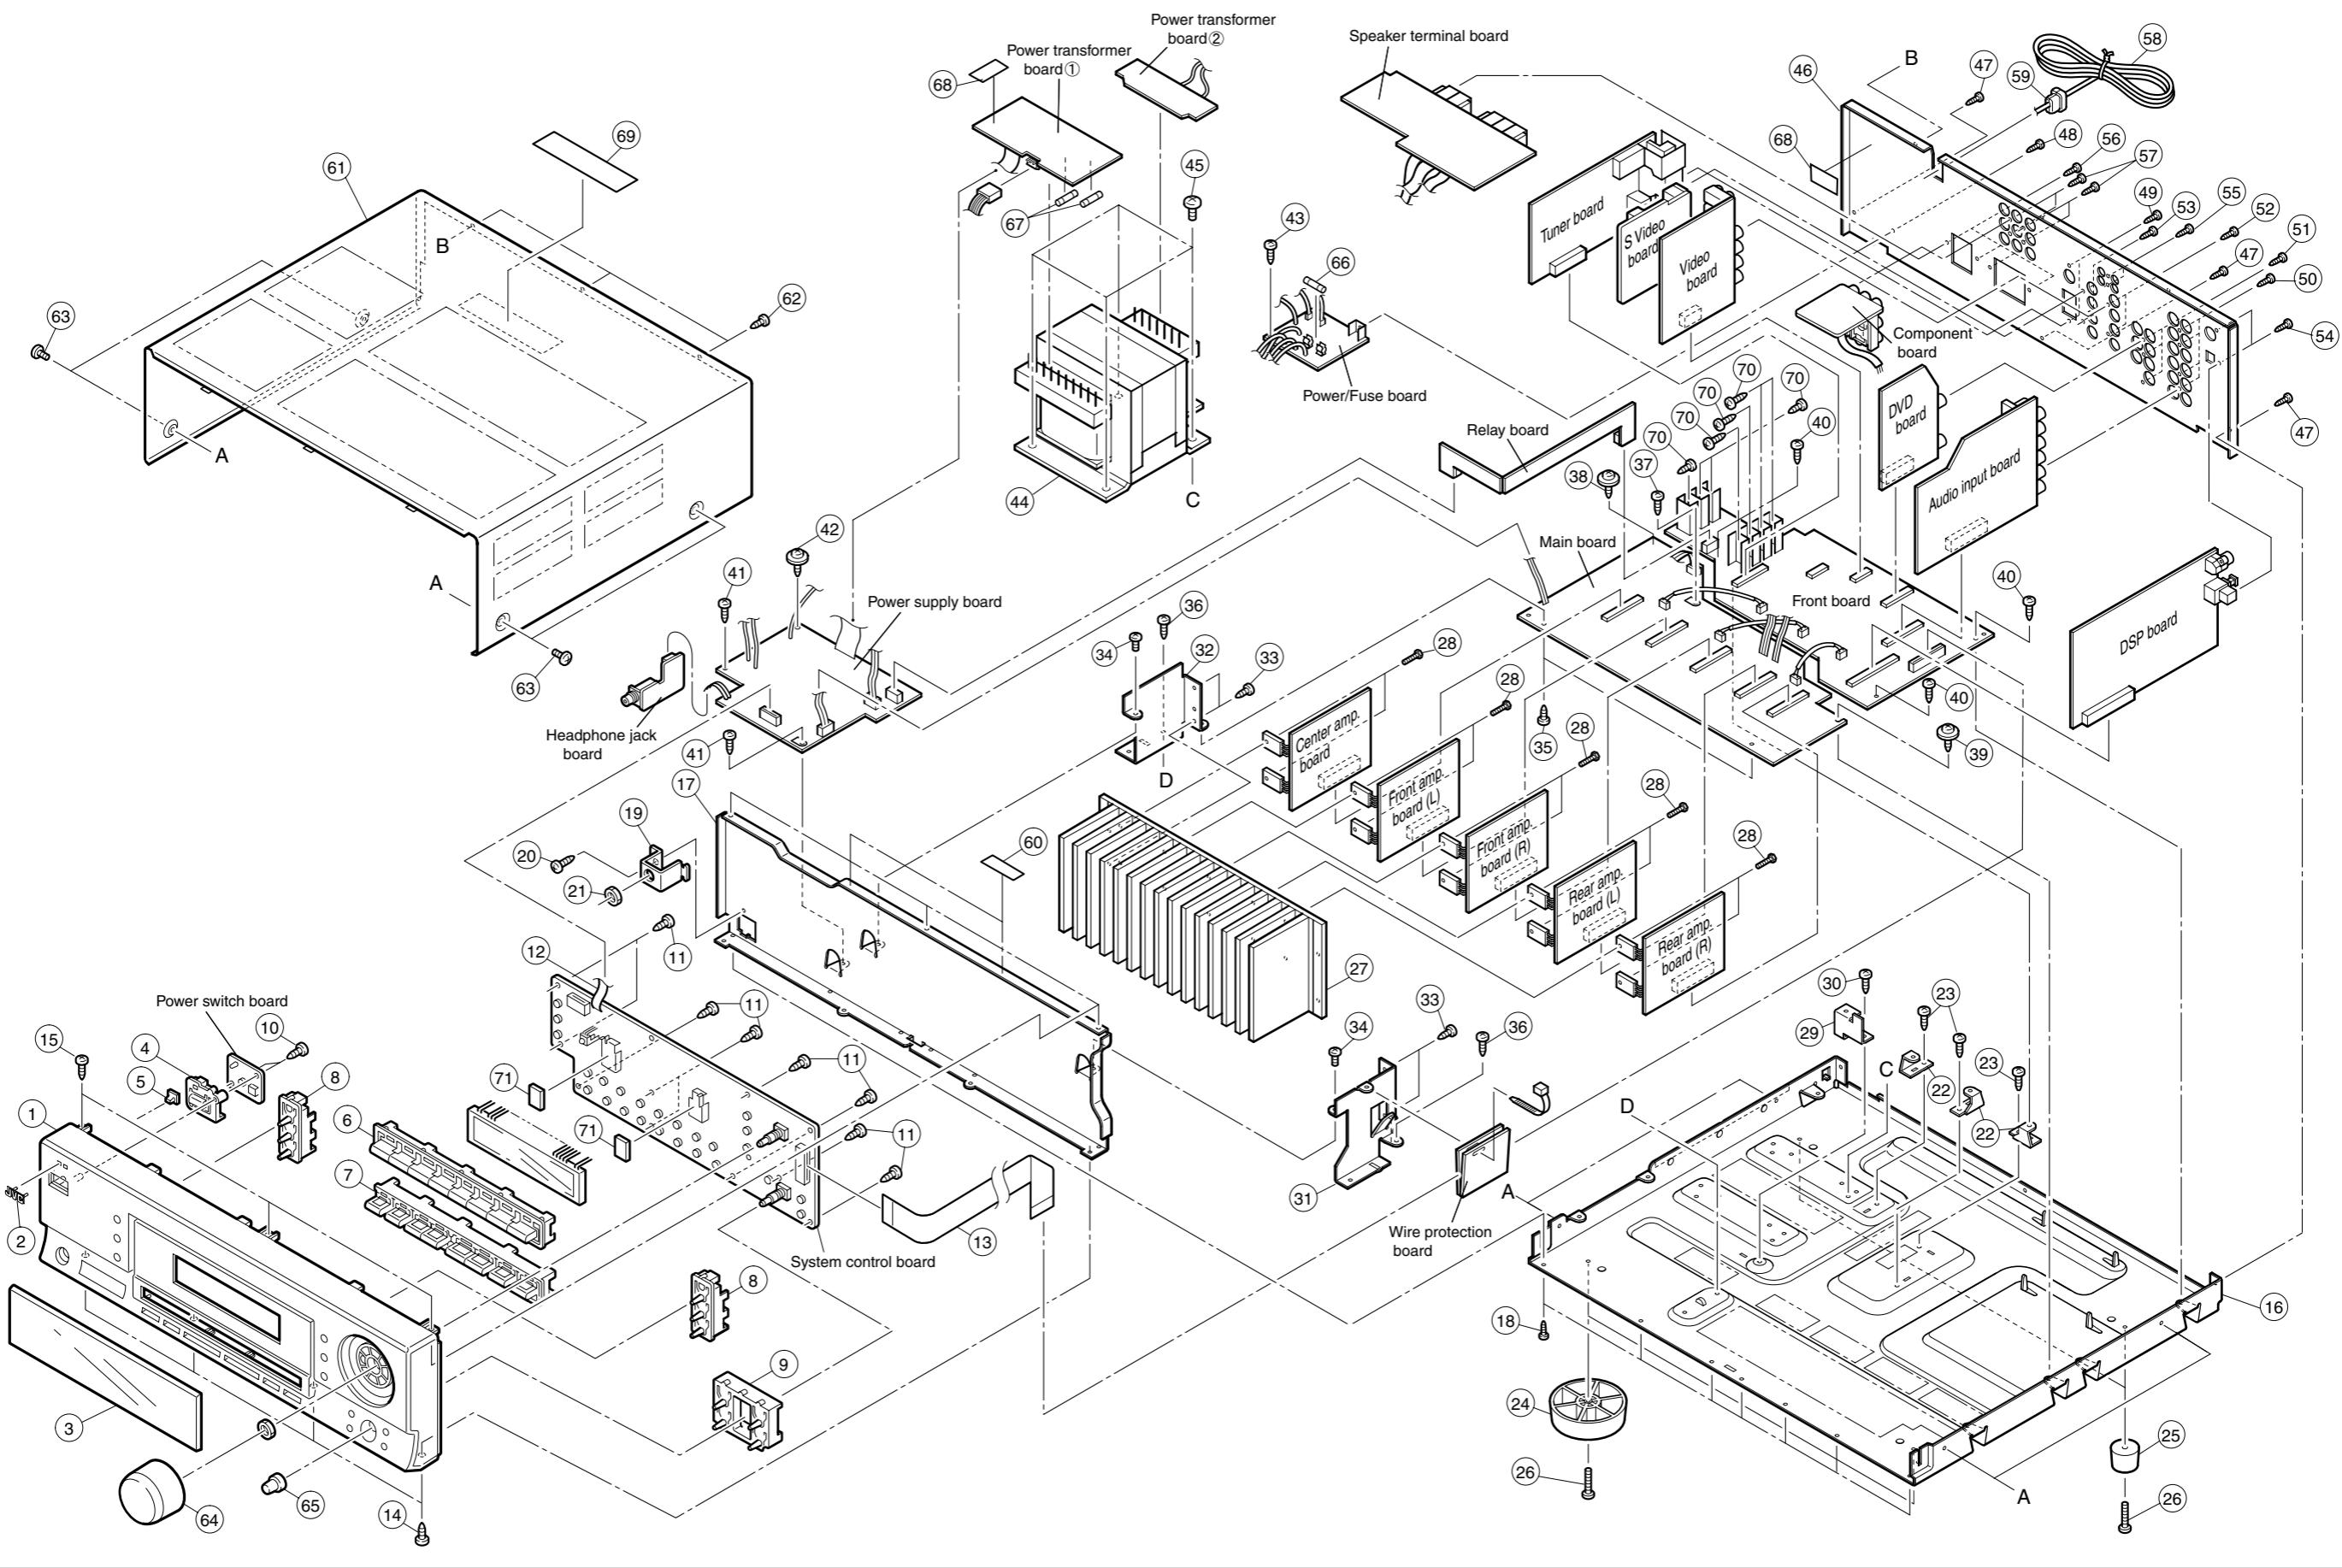

■ Parts list (General assembly)

Block No. M1MM

▲ Item	Parts number	Parts name	Q'ty	Description	Area
	1 LV10756-007A	FRONT PANEL	1	RX-6030VBKJ,C	
	2 LV43338-001A	JVC MARK	1	BK MODEL	
	3 LV34003-001A	LENS	1		
	4 LV34000-001A	PUSH BUTTON(POW	1	BK MODEL	
	5 LV42096-001A	INDICATOR	1	POWER	
	6 LV21420-001A	PUSH BUTTON	1	SOURCE	
	7 LV21421-001A	PUSH BUTTON(FM)	1	FM	
	8 LV34001-001A	3-BUTTON	2	SURROUND,INPUT	
	9 LV34002-001A	4-BUTTON	1	SET	
	10 QYSBSF2608Z	T.SCREW	2	FRONT C.B	
	11 QYSBSF2608Z	T.SCREW	9	FRONT C.B FL	
	12 QUQ412-1415CJ	FFC WIRE	1		
	13 QUQ412-2534CJ	FFC WIRE	1		
	14 QYSDSG3006Z	SCREW	4	FRONT D	
	15 QYSBHG3006Z	T.SCREW	3	FRONT U	
	16 LV10019-003A	CHASSIS BASE	1		
	17 LV10458-003A	FRONT BRACKET	1		
	18 QYSDSG3006Z	SCREW	7	C.B-F.B	
	19 LV43304-001A	BKT(PHONES)	1		
	20 QYSBHG3006Z	T.SCREW	1	H.P BKT-F.B	
	21 VKZ4150-001	SPECIAL NUT	1		
	22 E68587-223SM	CB BKT	3		
	23 QYSBHT3006Z	T.SCREW	3	C.B-BKT	
	24 QZF6018-001	FOOT	2		
	25 E47227-036	FOOT	2		
	26 QYSBHT3010Z	T.SCREW	4	FOOT	
	27 LV20916-002A	HEAT SINK	1	NEW TYPE	
	28 QYSBHG3012E	SCREW	10	TR	
	29 LV42098-001A	C.B BKT	1	PRI/SEC C.B	
	30 QYSBHT3006Z	T.SCREW	1	C.B BKT	
	31 LV32433-001A	H.S BRACKET(R)	1		
	32 LV32434-001A	H.S BRACKET(L)	1		
	33 QYSBHG3008Z	T.SCREW	4	H.S-BKT	
	34 QYSBHT3006Z	T.SCREW	2	H.S BKT-F.BKT	
	35 QYSBHG3006Z	T.SCREW	2	H.S BKT	
	36 QYSBHT3006Z	T.SCREW	2	H.S BKT-CHASSIS	
	37 QYSBHG3006Z	T.SCREW	1	M.C.B	
	38 E65923-003	TAPPING SCREW	1		
	39 E65923-003	TAPPING SCREW	1	M.C.B	
	40 QYSBHG3006Z	T.SCREW	3	H.S-C.B	
	41 QYSBHG3006Z	T.SCREW	2	P.C.B	
	42 E65923-003	TAPPING SCREW	1	P.C.B	
	43 QYSBHG3006Z	T.SCREW	1	C.B-CHASSIS	
	44 QQT0318-001	POWER TRANS.	1		
	45 QYSDSTL4008Z	SPECIAL SCREW	4	P.TRANS	
	46 LV20915-064A	REAR PANEL	1	RX-6030VJ,C	
	47 QYSBHG3008M	SPECIAL SCREW	3	R.P-C.BASE	
	48 QYSBHG3008M	SPECIAL SCREW	1	R.P-	

■ Parts list (General assembly)

Block No. M1MM

▲ Item	Parts number	Parts name	Q'ty	Description	Area
	49 QYSBHG3008M	SPECIAL SCREW	2	TUNER	
	50 QYSBHG3008M	SPECIAL SCREW	4	INPUT	
	51 QYSBHG3008M	SPECIAL SCREW	3	DVD/SUB WOOFER	
	52 QYSBHG3008M	SPECIAL SCREW	2	VIDEO	
	53 QYSBHG3008M	SPECIAL SCREW	2	S VIDEO	
	54 QYSBHG3008M	SPECIAL SCREW	2	DIGITAL	
	55 QYSBHG3008M	SPECIAL SCREW	2	COMP C.B	
	56 QYSBHG3008M	SPECIAL SCREW	4	SPK C.B	
	57 QYSBHG3008M	SPECIAL SCREW	4	COMPONENT VIDEO	
▲	58 QMPD420-200-JV	POWER CORD	1		
▲	59 QZW0033-001	STRAIN RELIEF	1		
	60 LV30225-0H3A	SPACER	2		
	61 LV21422-004A	TOP COVER	1		
	62 QYSBHG3008M	SPECIAL SCREW	3		
	63 E406308-003	SPECIAL SCREW	4		
	64 LV43463-001A	VOL KNOB ASSY	1		
	65 LV43458-001A	JOG KNOB ASSY	1		
▲	66 QMF51U1-6R3-J8	FUSE	1	F 201	
▲	67 QMF51U1-2R0-J8	FUSE	2	F 202 F 203	
	68 LV42388-001A	FUSE CAUTION	2		
	69 E409396-003	CAUTION LABEL	1	C	
	70 QYSBHG3008E	T.SCREW	7		
	71 LV30225-0J4A	SPACER	2		

■ Electrical parts list (Main board)

Block No. 01

▲	Item	Parts number	Parts name	Remarks	Area	▲	Item	Parts number	Parts name	Remarks	Area
	Q1356	KRC109M-T	D.TRANSISTOR				R1311	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	Q1357	KRC109M-T	D.TRANSISTOR				R1312	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	Q1358	KRC109M-T	D.TRANSISTOR				▲ R1313	QRZ9005-100X	F RESISTOR	10 1/4W	
	R 421	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1314	QRJ146J-103X	UNF C RESISTOR	10K 5% 1/4W	
	R 422	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1315	QRJ146J-2R2X	UNF C RESISTOR	2.2 5% 1/4W	
	R 423	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1316	QRJ146J-102X	UNF C RESISTOR	1.0K 5% 1/4W	
	R 424	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1317	QRJ146J-223X	UNF C RESISTOR	22K 5% 1/4W	
	R 425	QRE141J-471Y	C RESISTOR	470 5% 1/4W			R1318	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
	R 426	QRE141J-471Y	C RESISTOR	470 5% 1/4W			R1319	QRE141J-473Y	C RESISTOR	47K 5% 1/4W	
	R 429	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1352	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
	R 430	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1353	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
	R 431	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1354	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
	R 432	QRE141J-471Y	C RESISTOR	470 5% 1/4W			▲ R1355	QRJ146J-392X	UNF C RESISTOR	3.9K 5% 1/4W	
	R 435	QRE141J-471Y	C RESISTOR	470 5% 1/4W			R1356	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R 436	QRE141J-471Y	C RESISTOR	470 5% 1/4W			R1357	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
	R 440	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W			R1358	QRE141J-682Y	C RESISTOR	6.8K 5% 1/4W	
	R 441	QRE141J-104Y	C RESISTOR	100K 5% 1/4W			R1359	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R 442	QRE141J-104Y	C RESISTOR	100K 5% 1/4W			R1360	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R 443	QRE141J-104Y	C RESISTOR	100K 5% 1/4W			R1361	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R 444	QRE141J-104Y	C RESISTOR	100K 5% 1/4W			R1362	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R 445	QRE141J-104Y	C RESISTOR	100K 5% 1/4W			R1363	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R 446	QRE141J-104Y	C RESISTOR	100K 5% 1/4W			R1364	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
▲ R 449	QRJ146J-271X	UNF C RESISTOR	270 5% 1/4W				R1365	QRE141J-682Y	C RESISTOR	6.8K 5% 1/4W	
▲ R 450	QRJ146J-271X	UNF C RESISTOR	270 5% 1/4W				R1366	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
R 451	QRE141J-471Y	C RESISTOR	470 5% 1/4W				R1367	QRE141J-682Y	C RESISTOR	6.8K 5% 1/4W	
R 452	QRE141J-471Y	C RESISTOR	470 5% 1/4W				ST304	QNB0103-002	SPK TERMINAL	5030/6030 C/R	
R 453	QRE141J-471Y	C RESISTOR	FOR 6030				ST305	QNB0001-002	SPK TERMINAL	5030/6030 FRONT	
R 454	QRE141J-471Y	C RESISTOR	FOR 6030								
R 455	QRE141J-471Y	C RESISTOR	FOR 6030								
R 456	QRE141J-471Y	C RESISTOR	FOR 6030								
R 458	QRJ146J-271X	UNF C RESISTOR	FOR 6030								
R 459	QRJ146J-271X	UNF C RESISTOR	FOR 6030								
R 462	QRE141J-104Y	C RESISTOR	FOR 6030								
R 464	QRE141J-104Y	C RESISTOR	FOR 6030								
R 551	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 552	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 555	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 556	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 557	QRE141J-473Y	C RESISTOR	47K 5% 1/4W								
R 558	QRE141J-473Y	C RESISTOR	47K 5% 1/4W								
R 559	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 560	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 561	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 562	QRE141J-750Y	C RESISTOR	75 5% 1/4W								
R 563	QRE141J-473Y	C RESISTOR	47K 5% 1/4W								
R 564	QRE141J-473Y	C RESISTOR	47K 5% 1/4W								
R 565	QRE141J-431Y	C RESISTOR	430 5% 1/4W								
R 566	QRE141J-241Y	C RESISTOR	240 5% 1/4W								
R 571	QRE141J-431Y	C RESISTOR	430 5% 1/4W								
R 572	QRE141J-241Y	C RESISTOR	240 5% 1/4W								
R 573	QRE141J-751Y	C RESISTOR	750 5% 1/4W								
R 574	QRE141J-751Y	C RESISTOR	750 5% 1/4W								
R 581	QRJ146J-6F8X	UNF C RESISTOR	6.8 5% 1/4W								
▲ RY302	QSK0109-001	RELAY									
▲ RY303	QSK0109-001	RELAY									
▲ RY304	QSK0109-001	RELAY									
▲ R1301	QRL027J-332	UNF.OMF.RES.	3.3K 5% 1/2W								
▲ R1302	QRZ9005-100X	F RESISTOR	10 1/4W								
▲ R1303	QRJ146J-562X	UNF C RESISTOR	5.6K 5% 1/4W								
R1304	QRE141J-104Y	C RESISTOR	100K 5% 1/4W								
R1305	QRE141J-104Y	C RESISTOR	100K 5% 1/4W								
R1306	QRE141J-823Y	C RESISTOR	82K 5% 1/4W								
R1307	QRE141J-104Y	C RESISTOR	100K 5% 1/4W								
R1308	QRE141J-104Y	C RESISTOR	100K 5% 1/4W								
R1309	QRE141J-103Y	C RESISTOR	10K 5% 1/4W								
R1310	QRE141J-103Y	C RESISTOR	10K 5% 1/4W								

■ Electrical parts list (Front board)

Block No. 02

▲	Item	Parts number	Parts name	Remarks	Area
	R1501	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1502	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1503	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1504	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1505	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1506	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1507	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1508	NRSA63J-473X	MG RESISTOR	FOR 6030	
	R1509	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1510	NRSA63J-473X	MG RESISTOR	FOR 6030	
	R1511	NRSA63J-750X	MG RESISTOR	FOR 6030	
	R1512	NRSA63J-473X	MG RESISTOR	FOR 6030	
	R1513	NRSA63J-105X	MG RESISTOR	FOR 6030	
	S 721	QSW0683-001Z	PUSH SWITCH	TUNING+	
	S 722	QSW0683-001Z	PUSH SWITCH	TUNING-	
	S 723	QSW0683-001Z	PUSH SWITCH	PRESET+	
	S 724	QSW0683-001Z	PUSH SWITCH	PRESET-	
	S 725	QSW0683-001Z	PUSH SWITCH	FM MODE	
	S 726	QSW0683-001Z	PUSH SWITCH	MEMORY	
	S 727	QSW0683-001Z	PUSH SWITCH	POWER	
	S 728	QSW0683-001Z	PUSH SWITCH	SURR/DSP-OFF	
	S 729	QSW0683-001Z	PUSH SWITCH	SURR MODE	
	S 730	QSW0683-001Z	PUSH SWITCH	DSP MODE	
	S 731	QSW0683-001Z	PUSH SWITCH	SUBWOOFER	
	S 732	QSW0683-001Z	PUSH SWITCH	SPK1	
	S 734	QSW0683-001Z	PUSH SWITCH	DVD(5030)	
	S 735	QSW0683-001Z	PUSH SWITCH	CD(7020)	
	S 736	QSW0683-001Z	PUSH SWITCH	DVD(6030)	
	S 738	QSW0683-001Z	PUSH SWITCH	VCR(6030)	
	S 739	QSW0683-001Z	PUSH SWITCH	FM(6030)	
	S 740	QSW0683-001Z	PUSH SWITCH	TV/DBS(COM)	
	S 741	QSW0683-001Z	PUSH SWITCH	AM(6030)	
	S 742	QSW0683-001Z	PUSH SWITCH	ADJUST	
	S 743	QSW0683-001Z	PUSH SWITCH	SETTING	
	S 744	QSW0683-001Z	PUSH SWITCH	SET	
	S 745	QSW0683-001Z	PUSH SWITCH	EXIT	
	S 746	QSW0683-001Z	PUSH SWITCH	DIMMER	
	S 751	QSW0683-001Z	PUSH SWITCH	DIGITAL	
	S 752	QSW0683-001Z	PUSH SWITCH	ANALOG	
	S 757	QSW0683-001Z	PUSH SWITCH	TAPE/CDR(6020)	
	X 701	QAX0246-001Z	C RESONATOR		

■ Electrical parts list (Power amp. board)

Block No. 03

▲	Item	Parts number	Parts name	Remarks	Area
▲	R 951	QRJ125J-330	UNF.C.RES.	33 5% 1/2W	
▲	R 953	QRL027J-100	UNF.OMF.RES.	10 5% 1/2W	
	R 955	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 957	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 959	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 961	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 963	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
▲	RY202	QSK0142-001	RELAY		
▲	RY203	QSK0109-001	RELAY		
▲	T 202	QQT0317-001	POWER TRANSF	FOR J.C	
	TA201	QNZ0079-001Z	TAB		
	TA202	QNZ0079-001Z	TAB		
▲	TH301	QAD0012-202	BATTERY PACK		
▲	TH302	QAD0012-202	BATTERY PACK		
▲	TH801	QAD0012-202	BATTERY PACK		
▲	TH802	QAD0012-202	BATTERY PACK		
▲	TH901	QAD0012-202	BATTERY PACK		
	VR301	QVP0008-102Z	SEMI V RESISTOR		
	VR302	QVP0008-102Z	SEMI V RESISTOR		

■ Electrical parts list (DSP board)

Block No. 04

▲	Item	Parts number	Parts name	Remarks	Area	▲	Item	Parts number	Parts name	Remarks	Area
	IC683	MM1613DN-X	IC				R 689	NRSA63J-0R0X	MG RESISTOR		
	IC690	BA15218F-XE	IC				R 691	NRSA63J-221X	MG RESISTOR		
	IC691	BA15218F-XE	IC				R 692	NRSA63J-221X	MG RESISTOR		
	J 601	QNN0347-001	PIN JACK				R 693	NRSA63J-221X	MG RESISTOR		
	K 601	NQR0269-004X	FERRITE BEADS				R 694	NRSA63J-221X	MG RESISTOR		
	Q 607	UN2113-X	TRANSISTOR				R 695	NRSA63J-221X	MG RESISTOR		
	Q 670	DTC114YE-X	TRANSISTOR				R 696	NRSA63J-221X	MG RESISTOR		
	Q 671	2SD2114K/VW-X	CHIP TRANSISTOR				R 697	NRSA63J-0R0X	MG RESISTOR		
	Q 672	DTC114YE-X	TRANSISTOR				R 698	NRSA63J-0R0X	MG RESISTOR		
	Q 673	UN2113-X	TRANSISTOR				R2500	NRSA63J-102X	MG RESISTOR		
	Q2501	UN2113-X	TRANSISTOR				R2501	NRSA63J-104X	MG RESISTOR		
	R 600	NRSA63J-0R0X	MG RESISTOR				R2502	NRSA63J-104X	MG RESISTOR		
	R 601	NRSA63J-473X	MG RESISTOR				R2507	NRSA63J-223X	MG RESISTOR		
	R 602	NRSA63J-473X	MG RESISTOR				R2508	NRSA63J-223X	MG RESISTOR		
	R 603	NRSA63J-473X	MG RESISTOR				R2509	NRSA63J-223X	MG RESISTOR		
	R 606	NRSA63J-221X	MG RESISTOR				R2510	NRSA63J-223X	MG RESISTOR		
	R 607	NRSA63J-221X	MG RESISTOR				R2511	NRSA63J-103X	MG RESISTOR		
	R 608	NRSA63J-221X	MG RESISTOR				R2512	NRSA63J-103X	MG RESISTOR		
	R 609	NRSA63J-221X	MG RESISTOR				R2513	NRSA63J-103X	MG RESISTOR		
	R 611	NRSA63J-221X	MG RESISTOR				R2514	NRSA63J-103X	MG RESISTOR		
	R 612	NRSA63J-221X	MG RESISTOR				R2515	NRSA63J-103X	MG RESISTOR		
	R 613	NRSA63J-822X	MG RESISTOR				R2516	NRSA63J-103X	MG RESISTOR		
	R 615	NRSA63J-432X	MG RESISTOR				R2519	NRSA63J-331X	MG RESISTOR		
	R 617	NRSA63J-103X	MG RESISTOR				R2520	NRSA63J-331X	MG RESISTOR		
	R 618	NRSA63J-103X	MG RESISTOR				R2521	NRSA63J-331X	MG RESISTOR		
	R 620	NRSA63J-221X	MG RESISTOR				R2522	NRSA63J-331X	MG RESISTOR		
	R 621	NRSA63J-561X	MG RESISTOR				R2525	NRSA63J-102X	MG RESISTOR		
	R 622	NRSA63J-750X	MG RESISTOR				R2526	NRSA63J-102X	MG RESISTOR		
	R 623	NRSA63J-0R0X	MG RESISTOR				R2527	NRSA63J-104X	MG RESISTOR		
	R 627	NRSA63J-472X	MG RESISTOR				R2528	NRSA63J-104X	MG RESISTOR		
	R 628	NRSA63J-333X	MG RESISTOR				R2529	NRSA63J-103X	MG RESISTOR		
	R 631	NRSA63J-0R0X	MG RESISTOR				R2530	NRSA63J-103X	MG RESISTOR		
	R 632	NRSA63J-0R0X	MG RESISTOR				R2531	NRSA63J-752X	MG RESISTOR		
	R 639	NRSA63J-472X	MG RESISTOR				R2532	NRSA63J-752X	MG RESISTOR		
	R 640	NRSA63J-0R0X	MG RESISTOR				R2533	NRSA63J-103X	MG RESISTOR		
	R 641	NRSA63F-102X	MG RESISTOR				R2534	NRSA63J-103X	MG RESISTOR		
	R 642	NRSA63J-103X	MG RESISTOR				R2535	NRSA63J-103X	MG RESISTOR		
	R 643	NRSA63J-101X	MG RESISTOR				R2536	NRSA63J-103X	MG RESISTOR		
	R 644	NRSA63J-153X	MG RESISTOR				R2537	NRSA63J-104X	MG RESISTOR		
	R 645	NRSA63F-102X	MG RESISTOR				R2538	NRSA63J-104X	MG RESISTOR		
	R 646	NRSA63J-103X	MG RESISTOR				R2550	NRSA63J-272X	MG RESISTOR		
	R 647	NRSA63J-225X	MG RESISTOR				R2551	NRSA63J-103X	MG RESISTOR		
	R 648	NRSA63J-472X	MG RESISTOR				R2552	NRSA63J-103X	MG RESISTOR		
	R 657	NRSA63J-103X	MG RESISTOR				R2553	NRSA63J-153X	MG RESISTOR		
	R 661	NRSA63J-221X	MG RESISTOR				R2554	NRSA63J-153X	MG RESISTOR		
	R 662	NRSA63J-221X	MG RESISTOR				R2555	NRSA63J-752X	MG RESISTOR		
	R 663	NRSA63J-221X	MG RESISTOR				R2556	NRSA63J-752X	MG RESISTOR		
	R 664	NRSA63J-221X	MG RESISTOR				R2557	NRSA63J-103X	MG RESISTOR		
	R 668	NRSA63J-0R0X	MG RESISTOR				R2558	NRSA63J-273X	MG RESISTOR		
	R 669	NRSA63J-103X	MG RESISTOR				R2560	NRSA63J-105X	MG RESISTOR		
	R 670	NRSA63J-103X	MG RESISTOR				R2561	NRSA63J-104X	MG RESISTOR		
	R 671	NRSA63J-103X	MG RESISTOR				R2562	NRSA63J-104X	MG RESISTOR		
	R 672	NRSA63J-105X	MG RESISTOR				R2563	NRSA63J-103X	MG RESISTOR		
	R 673	NRSA63J-432X	MG RESISTOR				R2564	NRSA63J-103X	MG RESISTOR		
	R 674	NRSA63J-432X	MG RESISTOR				R2565	NRSA63J-202X	MG RESISTOR		
	R 675	NRSA63J-432X	MG RESISTOR				R2566	NRSA63J-202X	MG RESISTOR		
	R 676	NRSA63J-432X	MG RESISTOR				R2567	NRSA63J-103X	MG RESISTOR		
	R 677	NRSA63J-822X	MG RESISTOR				R2568	NRSA63J-103X	MG RESISTOR		
	R 678	NRSA63J-822X	MG RESISTOR				R2569	NRSA63J-122X	MG RESISTOR		
	R 679	NRSA63J-822X	MG RESISTOR				R2570	NRSA63J-122X	MG RESISTOR		
	R 680	NRSA63J-822X	MG RESISTOR				R2575	NRSA63J-102X	MG RESISTOR		
	R 682	NRSA63J-103X	MG RESISTOR				R2576	NRSA63J-102X	MG RESISTOR		
	R 683	NRSA63J-0R0X	MG RESISTOR				R2577	NRSA63J-104X	MG RESISTOR		
	R 684	NRSA63J-0R0X	MG RESISTOR				R2578	NRSA63J-104X	MG RESISTOR		
	R 687	NRSA63J-0R0X	MG RESISTOR				R2581	NRSA63J-104X	MG RESISTOR		
	R 688	NRSA63J-0R0X	MG RESISTOR				R2582	NRSA63J-104X	MG RESISTOR		

■ Electrical parts list (DSP board)

Block No. 04

▲	Item	Parts number	Parts name	Remarks	Area
	R2583	NRSA63J-123X	MG RESISTOR		
	R2584	NRSA63J-223X	MG RESISTOR		
	R2585	NRSA63J-302X	MG RESISTOR		
	R2586	NRSA63J-332X	MG RESISTOR		
	R2587	NRSA63J-103X	MG RESISTOR		
	R2588	NRSA63J-103X	MG RESISTOR		
	R2589	NRSA63J-104X	MG RESISTOR		
	R2590	NRSA63J-333X	MG RESISTOR		
	R2591	NRSA63J-122X	MG RESISTOR		
	R2592	NRSA63J-333X	MG RESISTOR		
	R2594	NRSA63J-333X	MG RESISTOR		
	R2595	NRSA63J-102X	MG RESISTOR		
	R2596	NRSA63J-102X	MG RESISTOR		
	R2597	NRSA63J-104X	MG RESISTOR		
	R2598	NRSA63J-104X	MG RESISTOR		
	UN661	GP1FA351RZ	OPT RECEIVER		
X 631		QAX0722-001Z	CRYSTAL		
X 671		QAX0719-001Z	1COSCIALLATOR		

■ Electrical parts list (Tuner board)

Block No. 05

▲	Item	Parts number	Parts name	Remarks	Area
	AT101	QNB0014-001	ANT TERMINAL		
	BK 1	LV31618-001A	SHIELD BKT		
C 101	NCB21HK-103X	C CAPACITOR	C/M B		
C 103	NCB21HK-223X	C CAPACITOR	C/M B		
C 105	NCB21HK-223X	C CAPACITOR	C/M B		
C 107	QEKC1CM-226Z	E CAPACITOR	22MF 20% 16V		
C 111	NCB21HK-473X	C CAPACITOR	C/M B		
C 112	NDC21HJ-120X	C CAPACITOR	C/M B		
C 121	NDC21HJ-120X	C CAPACITOR	C/M B		
C 122	NDC21HJ-120X	C CAPACITOR	C/M B		
C 123	NCB21HK-473X	C CAPACITOR	C/M B		
C 126	NCS21HJ-101X	C CAPACITOR	C/M B		
C 128	QENC1HM-474Z	NP E CAPACITOR	.47MF 20% 50V		
C 129	NCB21HK-102X	C CAPACITOR	C/M B		
C 130	QEKC1AM-107Z	E CAPACITOR	100MF 20% 10V		
C 133	QEKC1CM-226Z	E CAPACITOR	22MF 20% 16V		
C 134	NCB21HK-222X	C CAPACITOR	C/M B		
C 135	NCB21HK-223X	C CAPACITOR	C/M B		
C 136	QEKC1HM-105Z	E CAPACITOR	1.0MF 20% 50V		
C 137	NCB21HK-331X	C CAPACITOR	C/M B		
C 138	NCB21HK-473X	C CAPACITOR	C/M B		
C 139	NCB21HK-333X	C CAPACITOR	C/M B		
C 140	NCB21HK-333X	C CAPACITOR	C/M B		
C 141	NCB21HK-473X	C CAPACITOR	C/M B		
C 143	NCB21HK-223X	C CAPACITOR	C/M B		
C 144	NCB21HK-473X	C CAPACITOR	C/M B		
C 146	QEKC1HM-105Z	E CAPACITOR	1.0MF 20% 50V		
C 147	QEKC1HM-105Z	E CAPACITOR	1.0MF 20% 50V		
C 148	QEKC1HM-224Z	E CAPACITOR	.22MF 20% 50V		
C 149	QEKC1HM-105Z	E CAPACITOR	1.0MF 20% 50V		
C 150	QEKC1CM-226Z	E CAPACITOR	22MF 20% 16V		
C 156	QDGB1HK-102Y	C CAPACITOR	C/M B		
C 157	NCB21HK-473X	C CAPACITOR	C/M B		
C 158	QEKC1CM-226Z	E CAPACITOR	22MF 20% 16V		
C 161	QEKC1CM-106Z	E CAPACITOR	10MF 20% 16V		
C 162	QEKC1CM-106Z	E CAPACITOR	10MF 20% 16V		
C 163	NCB21HK-223X	C CAPACITOR	C/M B		
C 164	NCB21HK-473X	C CAPACITOR	C/M B		
C 168	QEKC1HM-105Z	E CAPACITOR	1.0MF 20% 50V		
C 184	QEKC1CM-107Z	E CAPACITOR	100MF 20% 16V		
C 185	QEKC1CM-106Z	E CAPACITOR	10MF 20% 16V		
C 186	QEKC1CM-106Z	E CAPACITOR	10MF 20% 16V		
CF101	QAX0419-001Z	C FILTER			
CF102	QAX0604-001Z	C FILTER			
CF103	QAX0519-001Z	C FILTER			
CN111	QGB2501K2-12	CONNECTOR			
D 121	1SS133-T2	SI DIODE IM			
D 123	1SS133-T2	SI DIODE IM			
D 124	1SS133-T2	SI DIODE IM			
D 125	1SS133-T2	SI DIODE IM			
D 129	1SS133-T2	SI DIODE IM			
IC102	LA1838	IC			
IC121	LC72136N	IC			
Q 102	2SC535/BC/-T	TRANSISTOR			
Q 103	2SC461/BC/-T	TRANSISTOR			
Q 121	KRA103M-T	TRANSISTOR	FM+B		
R 103	NRSA02J-221X	MG RESISTOR	C/M B		
R 104	NRSA02J-272X	MG RESISTOR	C/M B		
R 105	NRSA02J-391X	MG RESISTOR	C/M B		
R 106	NRSA02J-102X	MG RESISTOR	C/M B		
R 107	NRSA02J-391X	MG RESISTOR	C/M B		
R 108	NRSA02J-332X	MG RESISTOR	C/M B		
R 109	NRSA02J-221X	MG RESISTOR	C/M B		
R 115	NRSA02J-104X	MG RESISTOR	C/M B		
R 119	NRSA02J-103X	MG RESISTOR	C/M B		
R 122	NRSA02J-472X	MG RESISTOR	C/M B		

▲	Item	Parts number	Parts name	Remarks	Area
	R 124	NRSA02J-222X	MG RESISTOR	C/M B	
	R 126	NRSA02J-562X	MG RESISTOR	C/M B	
	R 127	NRSA02J-822X	MG RESISTOR	C/M B	
	R 128	NRSA02J-472X	MG RESISTOR	C/M B	
	R 129	NRSA02J-222X	MG RESISTOR	C/M B	
▲	R 130	QRZ9005-680X	F RESISTOR	68 1/4W	
	R 132	NRSA02J-393X	MG RESISTOR	C/M B	
	R 133	NRSA02J-392X	MG RESISTOR	C/M B	
	R 134	NRSA02J-102X	MG RESISTOR	C/M B	
	R 140	NRSA02J-183X	MG RESISTOR	C/M B	
	R 141	NRSA02J-102X	MG RESISTOR	C/M B	
	R 142	NRSA02J-470X	MG RESISTOR	C/M B	
	R 143	NRSA02J-562X	MG RESISTOR	C/M B	
	R 144	NRSA02J-332X	MG RESISTOR	C/M B	
	R 145	NRSA02J-103X	MG RESISTOR	C/M B	
	R 146	NRSA02J-392X	MG RESISTOR	C/M B	
	R 147	NRSA02J-332X	MG RESISTOR	C/M B	
	R 150	NRSA02J-331X	MG RESISTOR	C/M B	
	R 157	NRSA02J-682X	MG RESISTOR	C/M B	
	R 158	NRSA02J-682X	MG RESISTOR	C/M B	
	R 161	NRSA02J-102X	MG RESISTOR	C/M B	
	R 162	NRSA02J-102X	MG RESISTOR	C/M B	
	R 182	NRSA02J-103X	MG RESISTOR		
	R 183	NRSA02J-103X	MG RESISTOR		
	R 184	NRSA02J-103X	MG RESISTOR		
	RF101	QAU0124-002	FRONT END		
	T 111	QQR0796-001	COIL BLOCK		
	T 142	QQR0973-001	IFT		
	X 121	QAX0402-001	CRYSTAL		

< M E M O >


Packing materials and accessories parts list

Block No.

M	3	M	M
---	---	---	---

Block No.

M	5	M	M
---	---	---	---

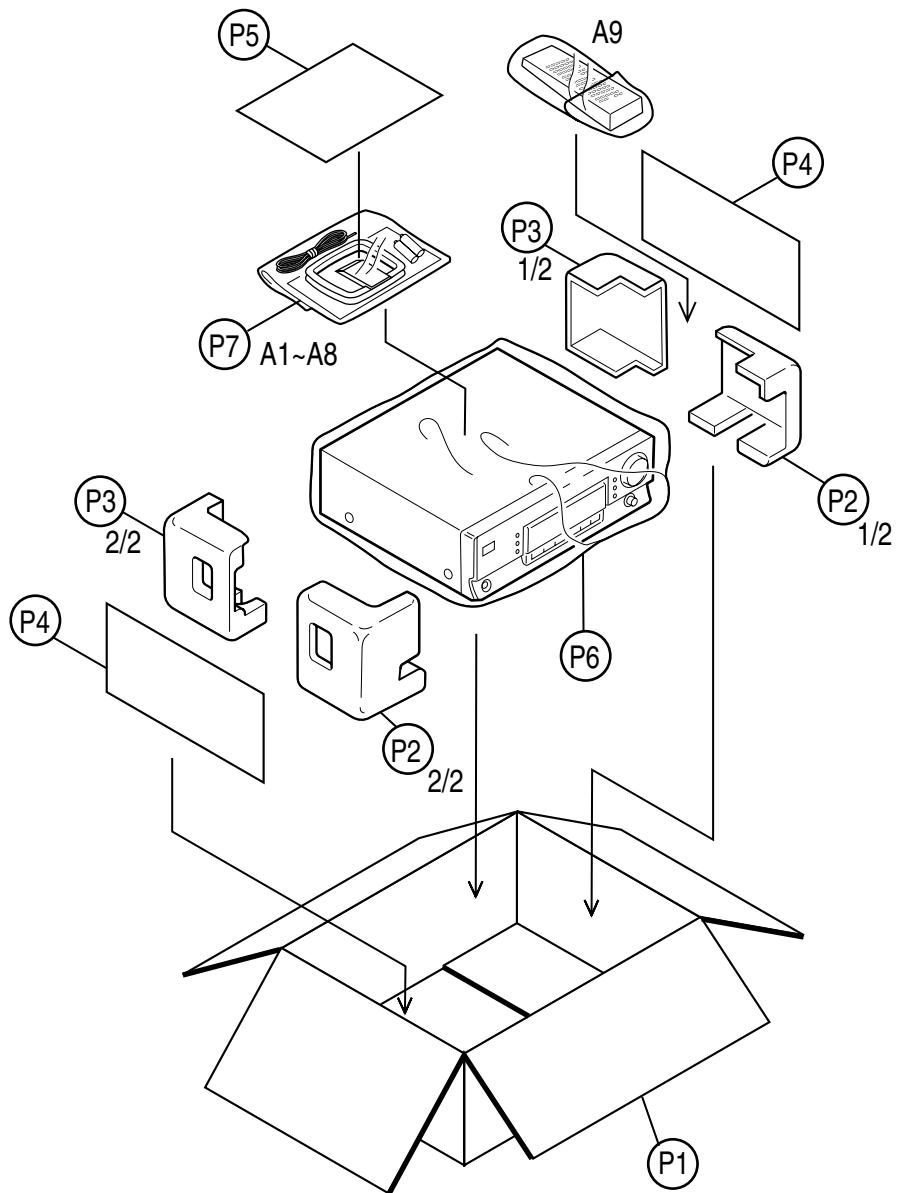

■ Parts list (Packing)**Block No. M3MM**

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	P 1	LV20983-057A	CARTON BOX	1	RX-6030VJ,C	
	P 2	LV21429-001A	CUSHION	1		
	P 3	LV21430-002A	CUSHION	1		
	P 4	LV32034-003A	SHEET	2		
	P 5	LV30256-009A	SHEET	1	TOP COVER	
	P 6	QPC06507015P	POLY BAG	1		
	P 7	QPA02503505P	POLY BAG	1		

■ Parts list (Accessories)**Block No. M5MM**

⚠	Item	Parts number	Parts name	Q'ty	Description	Area
	A 1	LVT0984-001B	INST BOOK	1	ENG	J
		LVT0984-002A	INST BOOK	1	ENG	C
	A 2	-----	BATTERY	2		
	A 3	EWP503-001C	ANT.WIRE	1		
	A 4	QAL0204-001	AM LOOP ANT	1		
	A 5	YU20333	SAFETY INST.	1		
	A 6	BT-52006-2	WARRANTY CARD	1		C
	A 7	BT-20071B	JVC CENTER LIST	1		C
	A 8	BT-51028-2	REGISTER CARD	1		J
	A 9	RM-SRX6030J	REMOCON	1		