


JVC

SERVICE MANUAL

COMPUTER CONTROLLED STEREO RECEIVER

MODEL NO. RX-9VBK

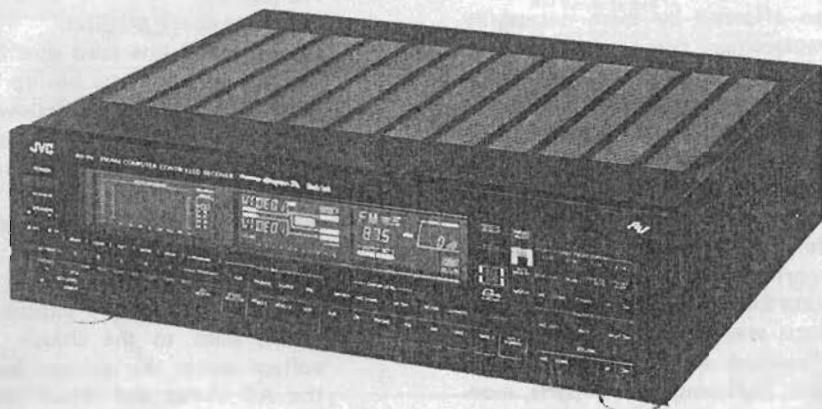

Contents

Safety Precautions	1-2
Instruction Book	Separate-Volume Insertion
Block Diagram	1-3
Technical Explanations	1-5
Removal Procedures	1-9
Adjustment Procedures	
(1) FM/AM Tuner P.C. Board	1-10
(2) Power Amplifier P.C. Board	1-11
Functions of ICs on the Pre-Amplifier PC Board	1-12
Handling Precautions of LCD Panels	1-12
Servicing Method for AWG #20 Wires with Clamping Terminals	1-13
Internal Block Diagrams of Major ICs	1-14
Parts List	Separate-Volume Insertion
Connection Diagrams	Insertion
Schematic Diagrams	
(1) Tuner Section	Insertion
(2) Logic Section	Insertion
(3) Pre-Amplifier Section	Insertion
(4) Power Amplifier Section	Insertion
(5) Sub Control Section	Insertion
(6) When Q301 ~ Q304 are used as substitutes	Insertion
(7) Buffer PC Board Section	1-23

Safety Precautions

1. The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in Service manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list in Service manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and/or the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard.

When service is required, the original lead routing and dress should be observed, and they should be confirmed to be returned to normal, after re-assembling.

5. Leakage current check

(Safety for electrical shock hazard)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the Products (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).

• Alternate check method.

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a $1500\ \Omega$ 10 W resistor paralleled by a $0.15\ \mu F$ AC-type capacitor between an exposed metal part and a known good earth ground.


Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

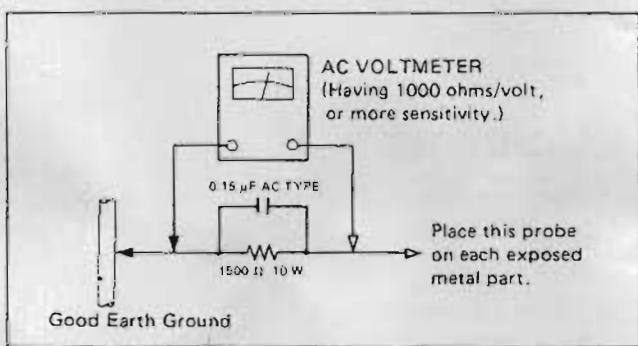

CHECKING YOUR LINE VOLTAGE (Except for U.S.A., Canada, Australia, U.K. and Continental Europe.)
Before inserting the power plug, please check this setting to see that it corresponds with the line voltage in your area. If it doesn't, be sure to adjust the voltage selector switch to the proper setting before operating this equipment. The voltage selector switch is located on the rear panel.

CAUTION Before selecting the "Voltage selector switch" to proper voltage disconnect the power plug.

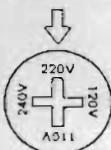


LC7560 (LCD Display Driver) C-MOS LSI, 7 bands, ± 2 db step, 11-point display

Name	Terminal No.	Terminal type	Explanation
VDD	24 56		Power supply terminal, +13V Power supply for A/D conversion
Vcc	52		Power supply terminal, +5V Power supply for logic drive
Vss	18		Power supply terminal, 0V
DI	57		Terminal for data input from CPU Schmitt inverter type
CLK	55		Terminal for clock input from CPU Schmitt inverter type
COM1	53		Output terminal to LCD common
COM2	54		Output terminal to LCD segment For bands f ₁ and f ₂
A ₁ ~ A ₁₁	31 ~ 41		Output terminal to LCD segment For bands f ₃ and f ₄
B ₁ ~ B ₁₁	19 ~ 30		Output terminal to LCD segment For bands f ₅ and f ₆
C ₁ ~ C ₁₁	7 ~ 17		Output terminal to LCD segment For band f ₇ and total display
D ₁ ~ D ₁₁	60 ~ 64 1 ~ 6		Input terminal for voice signal detection output
f ₁ ~ f ₇	42 ~ 48		Input terminal for total display Inputs signal detection output
T	49		Open-drain-type output buffer Connection terminal of exterior-mounted CR for oscillator
OSC	51		Select terminal when a plural number of chips is used (max. 4 chips)
S1	58		S1 S2 Key Code
S2	59		1 1 FB 0 1 FA 1 0 F9 0 0 F8

■ Power Supply Switching Circuit


- When the load impedance exceeds 7 ohms, or when the output is small even under 7 ohms, Q804, Q803, Q807, and Q801 go ON because Q805 is OFF. Consequently, current flows to the gates of thyristors D809 and D810, causing these thyristors to be turned ON, and the power amplifier is actuated by high voltage through D805, D806, D807, and D808.
 - When output is effected under the load impedance of less than 7 ohms, current and voltage are detected from both ends of R787 (R788 on the right side) to obtain the load impedance, and the detected output is amplified by IC051.
- When voltage at both ends of C057 rises above 11V, Q805 is turned ON, while Q804, Q803, Q807, and Q801 are turned OFF. As a result, the gate current at D809 and D810 becomes zero, causing these D809 and D810 also to become OFF. This status causes the power amplifier to start functioning at low voltage through D801, D802, D803, and D804.
- Low-voltage functioning is effected at about 70% of high voltage, contributing to improving efficiency during the low-impedance period.

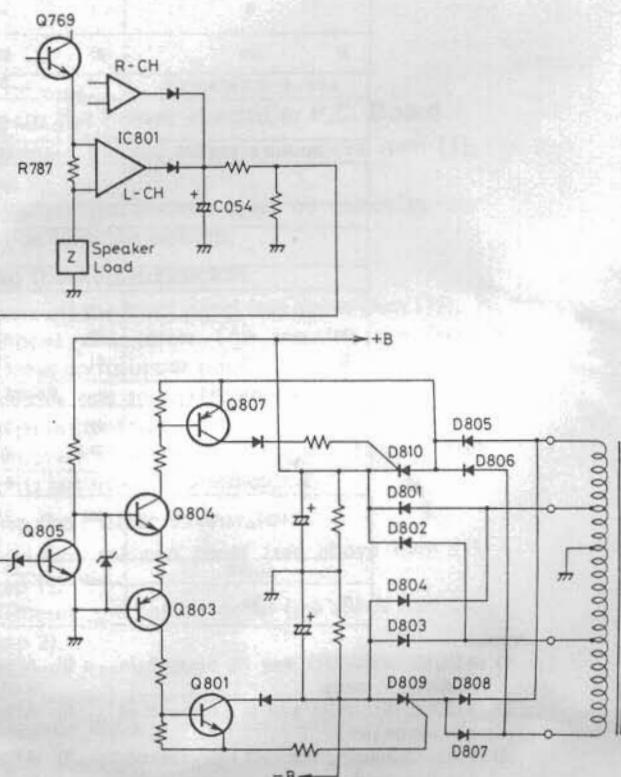

■ Data Transmission through Synchro Terminal

As the synchro terminal has a common bus line to other equipment to be connected externally, data of the both can be mutually exchanged according to the transmission method shown below.

■ Data transmission

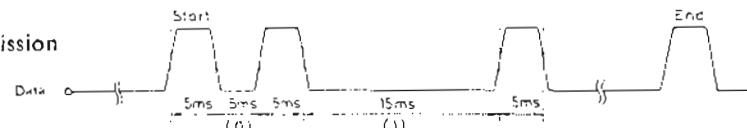


Signals "0" and "1" of data are transmitted being discriminated by different intervals between pulses.

Namely, pulse interval 5 ms "0"

pulse interval 15 ms "1"

Every transmission datum is composed of 8 bits, therefore, number of pulses for a datum is nine.

■ Configuration of datum

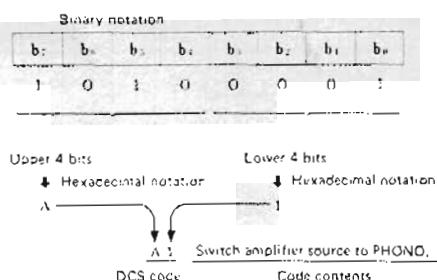


■ Relationship between Remote Control Transmitter (RM-S9) and DCS Codes

SLEEP TIMER		POWER				
		VCR	TV	AUDIO		
63 Hz/1		160 Hz/2		400 Hz/3	SEA CONTROL	
3)	D1	3)	D2	3)	O3	
1 kHz/4		2.5 kHz/5		6.3 kHz/6	FM	
3)	D4	3)	D5	3)	D6	C2
16 kHz/7		8		9	AM	
3)	D7	3)	D8	3)	D9	C3
0		PRESET STATION SEA LEVEL		+	TV	
3)	D0	3)	C7	3)	C6	
ACOUSTIC EXPANDER					VIDEO 1/TV	
-						
SOUND SELECTOR		SEA SOURCE		SEA PRESET		
-		-		-		
VCR		PHONO		CD		TAPE
-		A1		A3		A4
-		CHANNEL SKIP		STOP		PLAY
7)	44	7)	43	6)	8B	6)
8)	2C	8)	2B	7)	42	7)
				8)	2E	8)
TAPE CONTROL		PAUSE/STILL		STOP		REC
-		9) 25		9) 22		11) 2D
-		10) 2D		11) 29		12) 29
VCR CONTROL		<<		PLAY		>>
-		9) 24		9) 20		9) 23
-		10) 29		-		
MUTE				VOLUME		+
10)	26			-		-

Notes:

- 1) AUDIO (POWER) key is pressed in STANDBY mode.
- 2) AUDIO (POWER) key is depressed at turning on power.
- 3) After depressing FM/AM key, another key is pressed.
- 4) After depressing PHONO key, another key is pressed.
- 5) After depressing CD key, another key is pressed.
- 6) After depressing TAPE key, another key is pressed.
- 7) After depressing TAPE CONTROL key, this key is pressed.
- 8) After depressing TAPE CONTROL key, this key and REC key are pressed at the same time.
- 9) After depressing TAPE CONTROL key, this key and PAUSE/STILL key are pressed at the same time.
- 10) After depressing TAPE CONTROL key, this key and PLAY key are pressed at the same time.

Removal Procedures

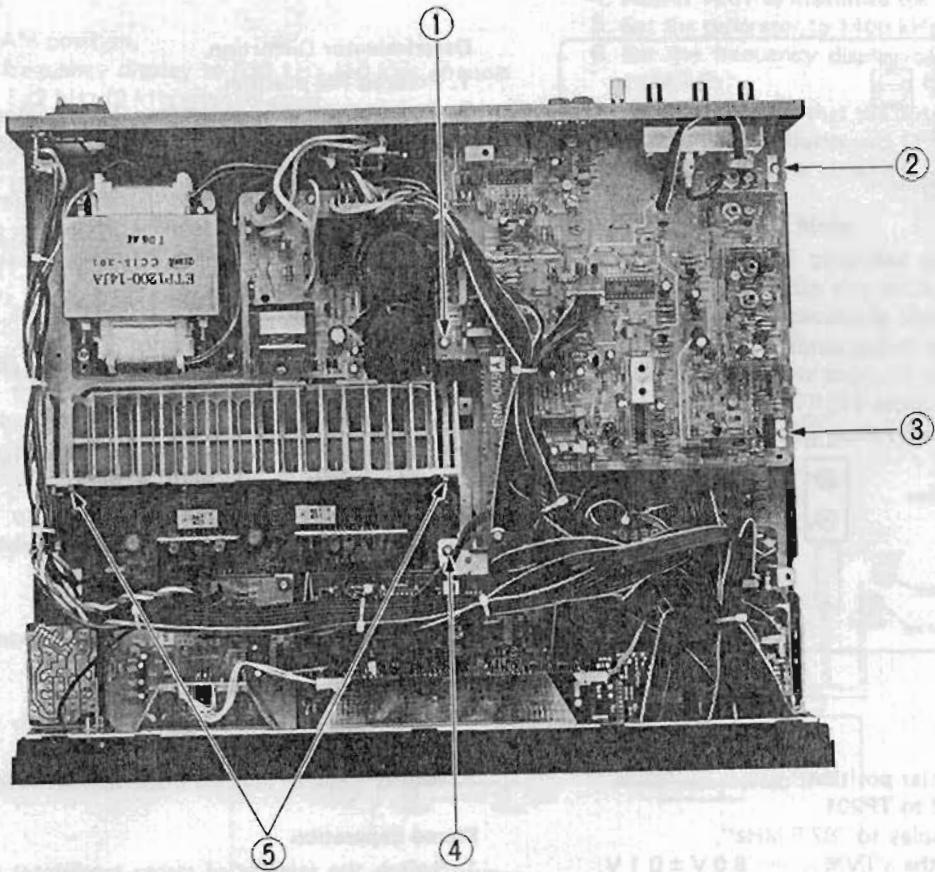

(1) Removing the Front Panel

- Step 1: Demount the top cover by removing four screws from the two sides and two screws from the rear.
 Step 2: Remove three screws securing the front panel on its upper side and three screws securing it on the lower side.
 Step 3: Demount the switch P.C. board secured to the front panel with catches.

(2) Removing the Tuner P.C. Board

- Step 1: Demount the top cover (see above item (1), step 1).
 Step 2: Remove three screws (1) through (3) securing the tuner P.C. board on its upper side.
 Step 3: Remove four screws (USA, Canada: five screws) securing the antenna terminal on its rear side.

(3) Checking-up the Pre-Amplifier P.C. Board

- Step 1: Demount the tuner P.C. board (see above item (2)).
 Step 2: Demount the bottom cover by removing three screws from the bottom.

(4) Checking-up the Power Amplifier P.C. Board

- Step 1: Demount the top cover (see above item (1), step 1).
 Step 2: Demount the bottom cover by removing two screws from the bottom.


(5) Removing the Front Bracket

- Step 1: Demount the front panel (see above item (1)).
 Step 2: Remove one screw (4) securing the front bracket on its upper side.
 Step 3: Remove one screw securing the front bracket on its bottom side.
 Step 4: Remove four screws securing the front bracket on its bottom side (toward you).

(6) Removing the Power Transistors

- Step 1: Demount the top cover (see above item (1), step 1).
 Step 2: Demount the bottom cover (see above item (4), step 2).
 Step 3: Remove four screws (5) securing the heat-sink by a bended screwdriver.
 Step 4: Resolder the pins of power transistors.
 Note: Part number of the bended screwdriver is "EBSJ-1005".

(1) FM/AM Tuner P.C. Board

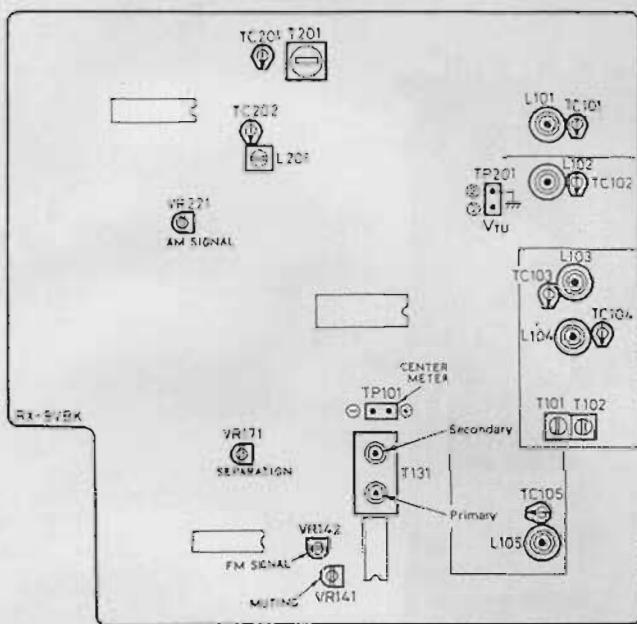

FM Section

Band Cover

1. Set the TC105 to center position.
2. Connect a DC VTVM to TP201.
3. Set the frequency display to "87.5 MHz".
4. Adjust L105 so that the VTVM shows $8.0\text{ V} \pm 0.1\text{ V}$.
5. Set the frequency display to "108.0 MHz".
6. Adjust TC105 so that the VTVM shows $23.0\text{ V} \pm 0.1\text{ V}$.
7. Repeat these items (from item 3. to item 6.) alternately until reference voltage is obtained.

Sensitivity

Low Frequency

1. Connect an RF generator to the antenna terminals on the rear panel through a dummy antenna.
2. Set an RF generator to 90 MHz, a modulation of 1 kHz and a deviation of 75 kHz to provide an input of $2\text{ }\mu\text{V}$.
3. Connect a VTVM and an oscilloscope to the "REC. OUT" terminal on the rear panel.
4. Set the frequency display to 90 MHz.
5. Adjust coils L101, L102, L103 and L104 to maximize the output.
6. Adjust IFT (T101) to maximize the output.

High Frequency

7. Set the RF generator to 106 MHz, a modulation of 1 kHz and a deviation of 75 kHz to provide an input of $2\text{ }\mu\text{V}$.
8. Set the Frequency Display to 106 MHz.
9. Adjust the FM trimmers TC101, TC102, TC103 and TC104 to maximize the output.
10. Repeat these high and low frequencies adjustment alternately until maximum sensitivity is obtained.

Discriminator Distortion

1. Press to FM position.
2. Connect an RF generator, 1 kHz modulation and a 75 kHz deviation to the antenna terminals on the rear panel through a dummy antenna.
3. Connect an oscilloscope, Distortion Meter and VTVM to the "REC. OUT" terminal on the rear panel.
4. Set the RF generator to 98 MHz, generator output to $60\text{ dB}/\mu\text{V}$ (1 mV).
5. Set the frequency display to 98 MHz.
6. Connect a DC VTVM between TP101.
7. Adjust the core indicated arrow (Primary) of T131 for DC VTVM reading of (zero) mV.
8. And set the RF generator output to 1 mV .
9. Adjust the core indicated arrow (Secondary) of T131 so that the distortion is minimized.
10. Repeat these items (from item 7. to item 9.) alternately until reference specification is obtained.

Stereo Distortion

Note: This adjustment is after the discriminator distortion adjustment.

1. Set the frequency display to 98 MHz.
2. Switch the selector of stereo-modulator to left channel modulation.
3. Adjust T102 so that the distortion is minimized.

Stereo Separation

1. Switch the selector of stereo modulator to left channel modulation.
2. Adjust VR171 so that the output of right channel is minimized.
3. Switch the selector of the modulator to right channel modulation.
4. Adjust VR171 so that the left channel is minimized.
5. Set VR171 to a average, if the separation of left and right is different.

Muting

1. Connect the RF generator to the antenna terminal on the rear panel.
2. Set the RF generator at 100.1 MHz, $10\text{ }\mu\text{V}$. Rotate VR141 counterclockwise, and stop rotating at the point where muting is eliminated (signals are output).

Signal Strength Display

1. Set the RF generator at 100.1 MHz, $100\text{ }\mu\text{V}$. While rotating VR142 clockwise, adjust the FM-signal strength meter so that this meter displays 40 dB.

AM Section


Band Cover

1. Press to AM position.
2. Set the frequency display to 530 kHz (10 kHz channel step), or 522 kHz (9 kHz channel step).
3. Connect DC VTVM to TP201.
4. Adjust L201 so that the VTVM shows 2.0 V (530 kHz), or 1.8 V (522 kHz).
5. And set the frequency display to 1710 kHz (10 kHz channel step), or 1629 kHz (9 kHz channel step).
6. Adjust TC202 so that the DC VTVM reads 22.0 V for 1710 kHz, or 20.0 V for 1629 kHz.

Tracking and Sensitivity

1. Connect the loop antenna. Also connect the RF generator to the antenna terminal on the rear panel.
2. Set the generator to 600 kHz (or 603 kHz) with 30% modulation at 400 Hz.

(2) Power Amplifier P.C. Board

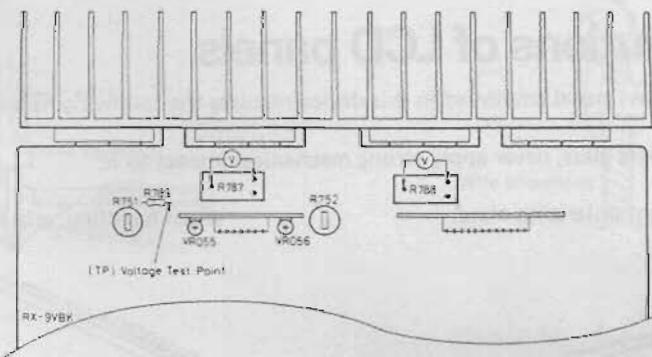

Idling Current Adjustment

1. Turn R751 and R752 fully counterclockwise before the power switch on.
2. Allow the set warm up at least 10 minutes before adjustment.
3. Must keep the heatsink to prevent overheating before adjustment.

Power Supply Switching Circuit Adjustment

1. Before turning the power ON, turn the semi-fixed resistors (VR055 for Left channel and VR056 for Right channel) of the amplifier circuit board fully counterclockwise.
2. Turn the power ON and input a 20 Hz sine wave to the Left channel (or the Right channel) of the AUX. Then, connect a 7 Ω dummy load to the speaker terminal, adjust either the amplifier's volume or the oscillator's volume to obtain 29 V output.
3. Measure voltage on the R789 (TP) and confirm that the range of "58 V ± 3 V" exists. Next, slowly rotate clockwise the semi-fixed resistors (VR055/L or VR056/R) and set voltage at the R789 (TP) to the level of 38 V ± 3 V.
4. Shift the dummy load from 7 ohms to 8 ohms and confirm that voltage at the R789 (TP) is 58 V ± 3 V. When

3. Set the frequency display to 600 kHz, or 603 kHz.
4. Adjust T201 to maximize the output.
5. Set the generator to 1400 kHz, or 1404 kHz.
6. Set the frequency display of the unit to 1400 kHz, or 1404 kHz.
7. Adjust TC201 so that the output signal is maximized.
8. Repeat these adjustments (1 ~ 7) alternately until maximum sensitivity is obtained.

AM-signal Strength Meter

1. Connect the RF generator to the antenna terminal on the rear panel. On this work, use the dummy antenna and achieve connection in series via 5.6 kΩ.
2. Set the RF generator either at 999 kHz (9 kHz step) or 1000 kHz (10 kHz step), 10 mV.
3. While rotating VR221 clockwise, adjust the AM-signal strength meter so that this meter displays 90 dB.

4. Set the volume control to minimum during this adjustment.
5. Connect a DC VTVM to R787 resistor's leads for left channel, or to R788's leads for right channel.
6. Adjust R751 for left channel, or R752 for right channel, so that the DC VTVM reads 5 mV.

this voltage is out of the range (58 V ± 3 V), readjust the semi-fixed resistors.

Note:

- Adjust on one channel at a time, either on the "L" channel or the "R" channel.
- When you need dummy (7 ohms/8 ohms), consult with JVC.
- When speaker output is observed with an oscilloscope, waveforms present a "clip" status after voltage has been switched (after (TP) has become 38 V ± 3 V).




Under Steps 2 and 4



Under Step 3

Functions of ICs on the Pre-Amplifier PC Board

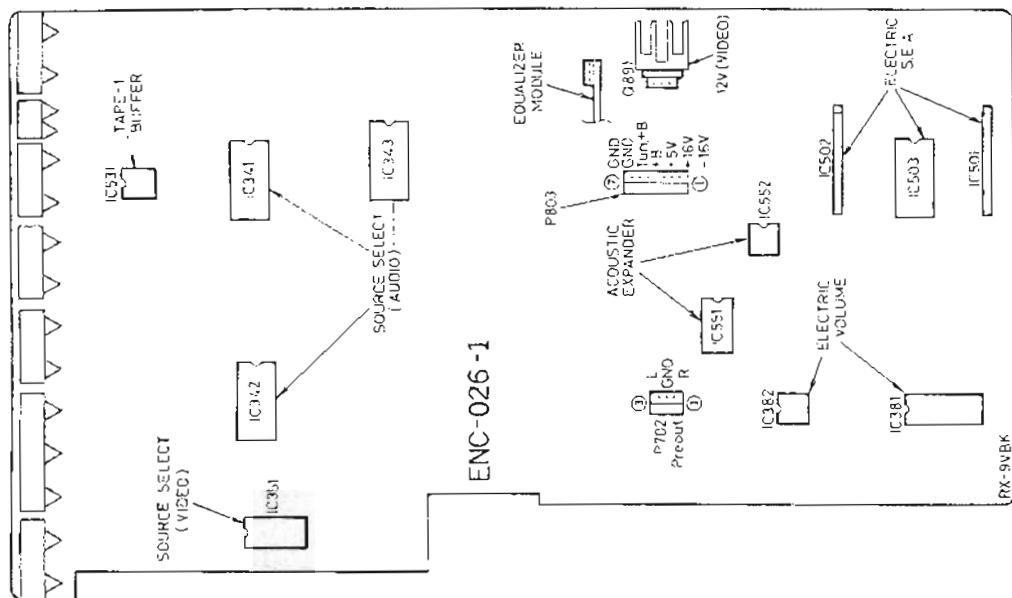



Handling precautions of LCD panels

The LCD (Liquid Crystal Display) panel employed in this device requires the following handling precautions.

1. Since the LCD is made of plate glass, never apply strong mechanical impact to it.

Do not forcibly press the light-polarizing plate.

When handling, grip it as shown in the figure below.

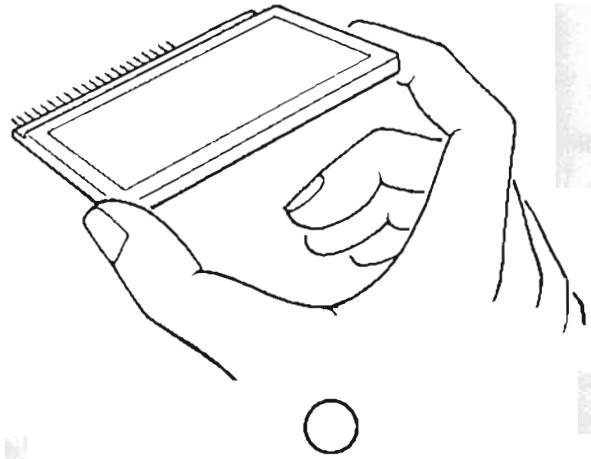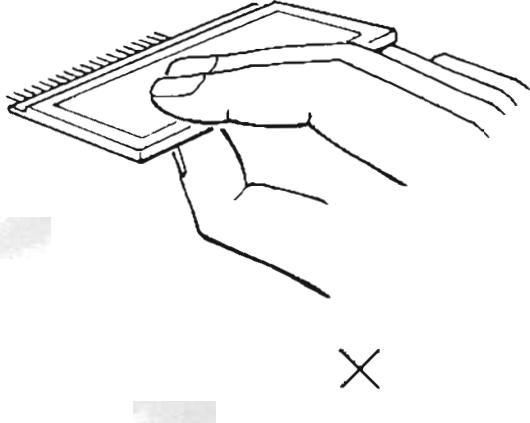

2. When handling the LCD, wear gloves whenever possible.
 3. When the light-polarizing plate (surface other than silk-printed areas) becomes contaminated, use an applicator wet with isopropyl alcohol to gently wipe it clean. As for the silk-printed areas, use a soft cloth also to gently wipe it clean.
- NOTE:** The light-polarizing plate attached to the LCD surface and the silk-printed areas are made of soft material.
4. As much as possible, avoid exposing the LCD to irradiation of harmful light (direct sunlight or ultraviolet rays), especially when the device is not in use.
 5. Do not imprint DC voltage on pins of the LCD (characteristics will be degraded).
 6. When the LCD is damaged, resulting in leakage of liquid crystal, be very cautious to avoid the liquid from penetrating one's mouth or being swallowed. Should liquid crystal contact the hands or clothing, immediately wash with water, using soap or other appropriate cleanser.

Servicing Method for AWG #20 Wires with Clamping Terminals

(1) Application objective → Confirmation of safety


Used to prevent breakage/disconnection troubles of primary and secondary wires within PC boards (or between PC boards). Even when wire breakage/disconnection has actually occurred, a safe air-gap distance between the primary wire and the secondary wire/possibly contacting metal surface can be maintained because the terminal retains the wire sheathing.

(2) Type of wire used

- ① 1015 AWG #20 (single-coated)
- ② 1672 AWG #20 (double-coated)


(3) Servicing precautions

- ① The structural design of this terminal causes its catch to hook onto the PC board, preventing the wire from being easily pulled out. As shown in the figure, use cutting pliers or a similar tool to cut off the ends of the terminal and wire; then remove the remaining terminal clip by melting the soldering.

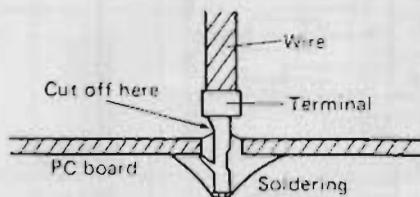


- ② Prior to soldering the wire onto the PC board, confirm safety by pressure-fitting the terminal to the wire by observing the following procedures.

1. Strip off the wire 5 ~ 6 mm from its end.

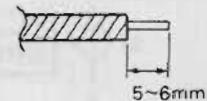

2. Insert the wire until its sheathing contacts section "A" of the terminal and pressure-fit the terminal clamp at three sections of ①

②, and ③ (section ③ is especially important to assure safety. Exercise particular care to achieve secure clamping).

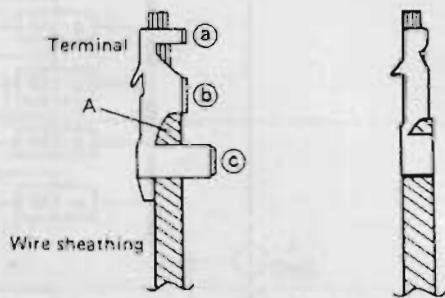


③ Part No., and name

Part No. : 5298T
Name : CRIMP PIN




■ Use of new-type connector


(1) Slide the cover upward.

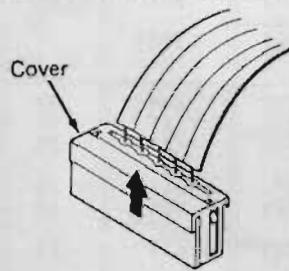


(2) Extract the wires.

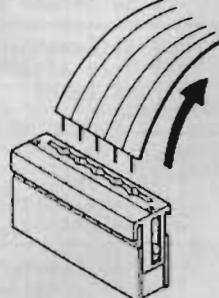

(3) Insert the wires after pushing in the cover.

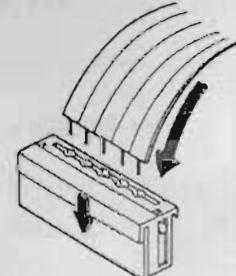


Internal Block Diagrams of Major ICs

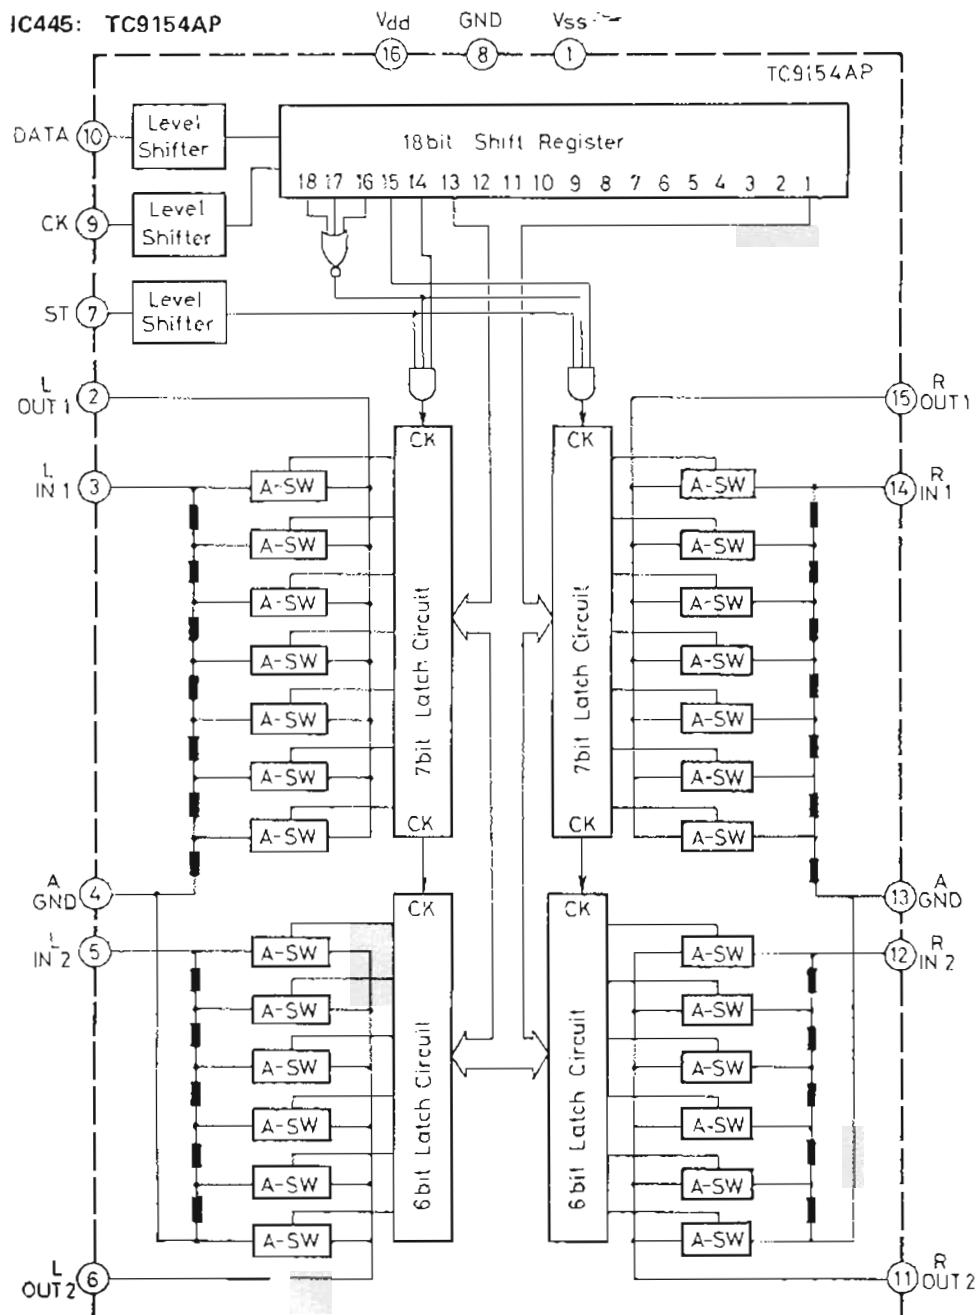

IC445: TC9154AP

Pin No.	Symbol	Function
1	V _{ss}	(-)Power Supply
2	L-OUT1	10dB Step Attenuator Output
3	L-IN 1	10dB Attenuator Input
4	A-GND	Ground (Power Supply)
5	L-IN 2	2dB Attenuator Input
6	L-OUT2	2dB Step Attenuator Output
7	ST	Strobe Input
8	GND	Ground
9	CK	Clock Input
10	DATA	Data Input
11	R-OUT2	2dB Step Attenuator Output
12	R-IN 2	2dB Attenuator Input
13	A-GND	Ground (Power Supply)
14	R-IN 1	10dB Attenuator Input
15	R-OUT1	10dB Step Attenuator Output
16	V _{dd}	(+)Power Supply


IC461: MN1758JSI

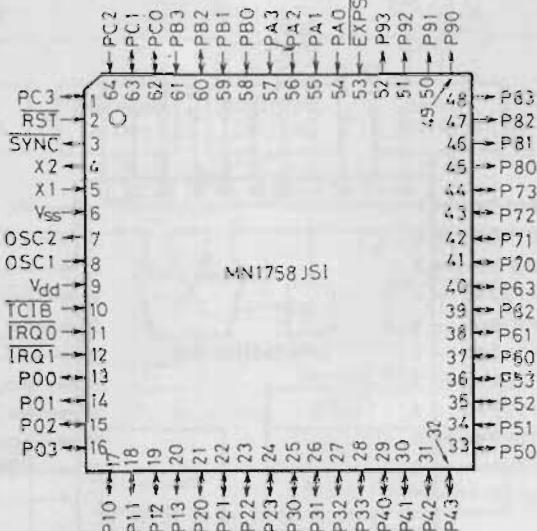

IC461: MN1758JSI

Pin No.	Symbol	Name	I/O	Terminal Function
1	PC3	DATA1	O	Serial data out; Connect to DATA terminal of TC9164N, TC9163N, TC9177P.
2	RST	RESET	I	RESET signal input
3~5	---	---	---	Not use.
6	Vss	Vss	---	GND
7	OSC2	OSC OUT	O	Connect the Ceramic Oscillator.
8	OSC1	OSC IN	I	Connect the Ceramic Oscillator.
9	Vdd	Vdd	---	+5V
10	TCIB	TCIB	---	Not use. (GND)
11	IRQ0	INH in	I	INH signal input
12	IRQ1	IRQ1	---	Not use. (GND)
13	P00	RM in	I	Remote control signal input
14	P01	INH in	I	INH signal input
15	P02	DCS in	I	DCS signal input
16	P03	DCS out	O	DCS signal output
17	P10	RM IND out	O	"H" output when Remote control signal input.
18	P11	LCD C/D	O	Connect the C/D terminal of μ PD7225G.
19	P12	LCD CD	O	Connect the CD terminal of μ PD7225G.
20	---	---	---	Not use. (pull down)
21	P20	REQ-IN	I	Connect the DATA REQUEST OUT terminal of TC9302AF-013BS
22	P21	MUT	O	"L" output when TUNER Source selected.
23	P22	REQ-OUT	O	Connect the DATA REQUEST IN terminal of TC9302AF-013BS.
24~29	P23~P33	DO-D4	O	Parallel DATA output to control TC9302AF-013BS (DO:LSB, D4:MSB)
29	P40	INH out1	O	"H" output when power "ON".
30	P41	INH out2	I	Connect the INH terminal of μ PD7507HG-507, TC9302AF-013BS.
31	P42	RESET	O	Connect the RESET terminal of μ PD7507HG-507.
32	P43	RESET	O	Connect the RESET terminal of μ PD7225G.
33	P50	VC 0	O	"H" output when VIDEO 1 selected.
34	P51	VC 1	O	"H" output when VIDEO 2 selected.
35	P52	VC 2	O	"H" output when VCR selected.
36	P53	---	--	Not use. (pull down)
37	P60	---	--	Not use. (pull down)
38	P61	MC	O	"H" output when MC phono mode selected.
39	P62	Phono Mute	O	Muting pulse out for each pressing of MC/MM switch.
40	P63	A-EXP	O	"H" output when Acoustic Expander ON.
41	---	---	--	Not use. (pull down)
42	P71	ST-1	O	Connect the strobe terminal of TC9154AP.
43	P72	ST-2	O	Connect the strobe terminal of TC9164N (JC343).
44	P73	ST-3	O	Connect the strobe terminal of TC9164N (JC341), TC9163N, TC9177P.
45~52	---	---	O	Key output; Composed the key matrix with PA0 ~ PA3.
53	EXPS	EXPS	---	Not use. (open)
54~57	---	---	I	Key input
58	PB0	BUSY	I/O	Connect the BUSY terminal of μ PD7225G.
59	PB1	TEST	I	Volume UP/DOWN test mode
60	PB2	CLK2	I	Serial clock out; Connect the SCK terminal of μ PD7225G and CK terminal of TC9154AP.
61	PB3	PB3	--	Not use. (GND)
62	PC0	DATA2	--	Serial DATA out; Connect the SI terminal of μ PD7225G and DATA terminal of TC9154AP.
63	PC1	CLK1	--	Serial CLDCK out; Connect the CLK terminal of TC9164N, TC9163N, TC9177P.
64	PC2	PC2	--	Not use. (GND)


IC441: μPD7507HG-507

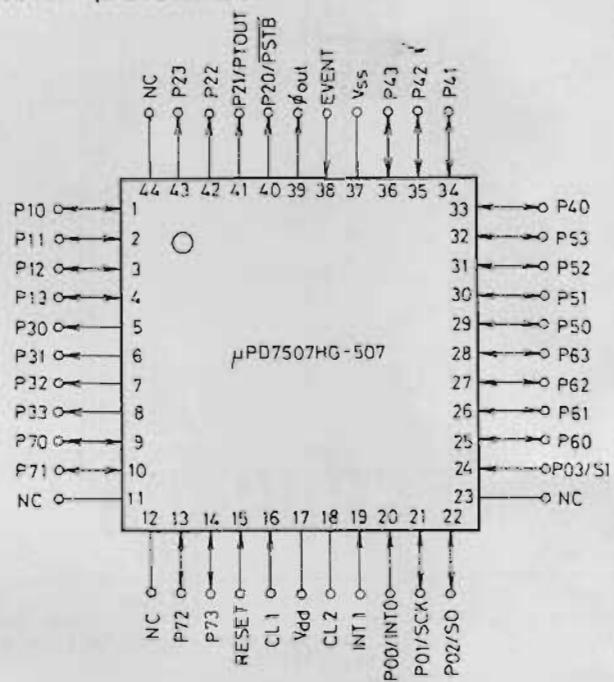


IC441: μPD7507HG-507

Pin No.	Symbol	Name	I/O	Terminal Function
1	P10	P10	I	Key input; Composed the key matrix with P30 → P33.
2	P11	P11	I	Key input; Composed the key matrix with P30 → P33.
3	P12	P12	I	Key input; Composed the key matrix with P30 → P33.
4	P13	P13	I	Key input; Composed the key matrix with P30 → P33.
5	P30	P30	O	Key output
6	P31	P31	O	Key output
7	P32	P32	O	Key output
8	P33	P33	O	Key output
9	P70	P70	I	Key input; Composed the key matrix with P30 → P33.
10	P71	P71	I	Key input; Composed the key matrix with P30 → P33.
11	NC	NC	--	Non connection
12	NC	NC	--	Non connection
13	P72	P72	I	Key input; Composed the key matrix with P30 → P33.
14	P73	P73	I	Key input; Composed the key matrix with P30 → P33.
15	RESET	RESET	I	Connect the RESET of MN1758JS1.
16	CL1	X'tal in	I	Connect the ceramic oscillator.
17	Vdd	Vdd	--	+5V
18	CL2	X'tal out	O	Connect the ceramic oscillator.
19	INT1	INT1	--	Not use. (GND)
20	P00/INT1	RM IN	I	Remote control signal input
21	P01/SCK	P01/SCK	--	Not use. (Vdd)
22	P02/SO	TNH	I	Connect the INH2 of MN1758JS1.
23	NC	NC	--	Non connection.
24	P03/SI	TEST	I	SEA volume UP/DOWN test mode
25	P60	CLK	O	Serial CLOCK OUT
26	P61	DATA	O	Serial DATA OUT
27	P62	RM IND	O	"H" output when remote control signal received.
28	P63	P63	--	Not use. (open)
29	P50	P50	--	Not use. (GND)
30	P51	P51	--	Not use. (GND)
31	P52	P52	--	Not use. (GND)
32	P53	P53	--	Not use. (GND)
33	P40	P40	--	Not use. (GND)
34	P41	P41	--	Not use. (GND)
35	P42	P42	--	Not use. (GND)
36	P43	P43	--	Not use. (GND)
37	Vss	Vss	--	GND
38	EVENT	EVENT	--	Not use. (GND)
39	φ OUT	φ OUT	--	Not use. (open)
40	P20	P20	--	Not use. (open)
41	P21	P21	--	Not use. (open)
42	P22	P22	--	Not use. (open)
43	P23	P23	--	Not use. (open)
44	NC	NC	--	Non connect.


IC441: μPD7507HG-507

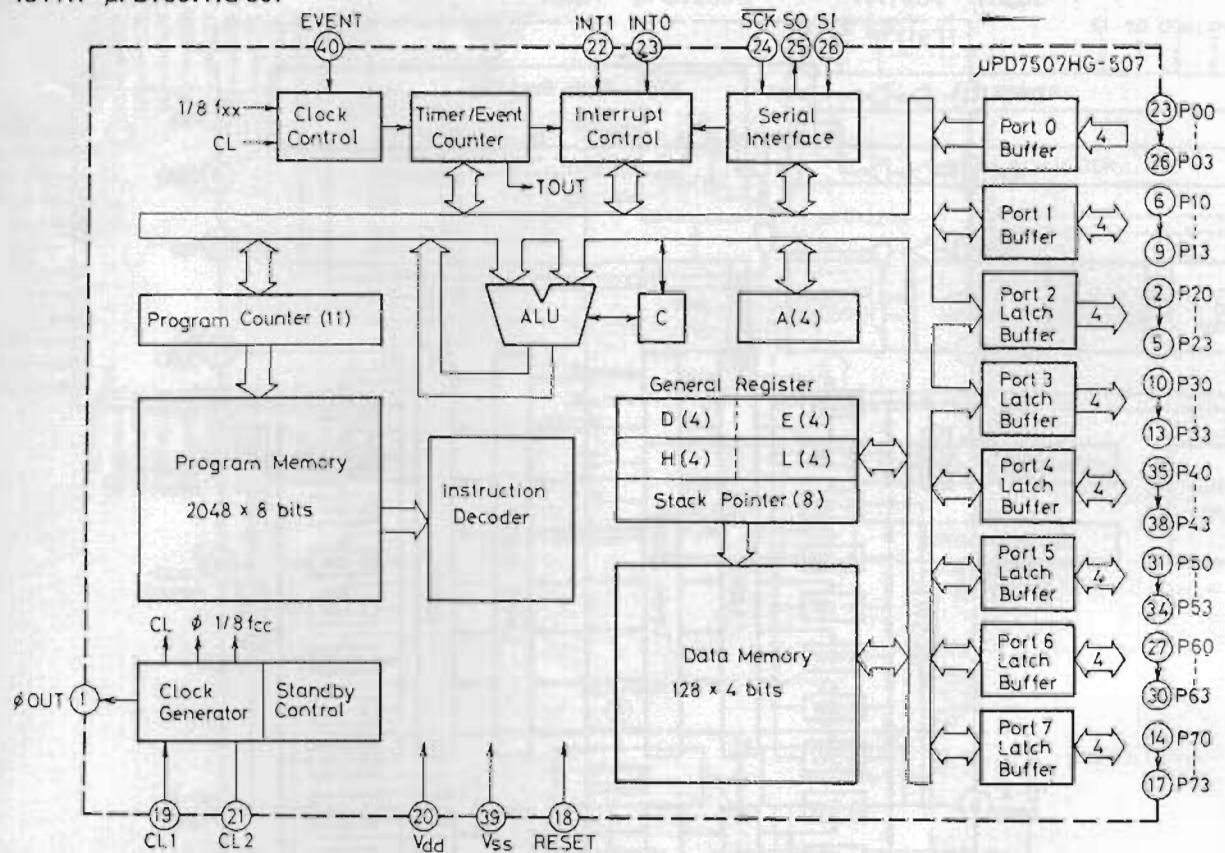


IC462: 7EL-SPI-001

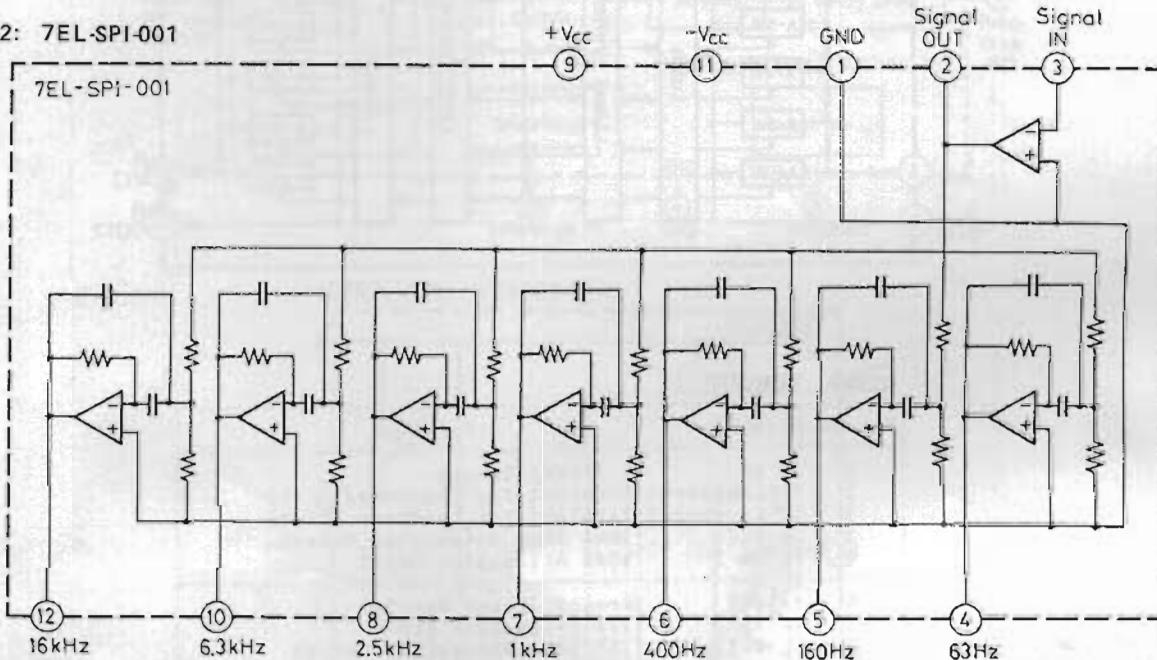

IC481: μPC1473HA


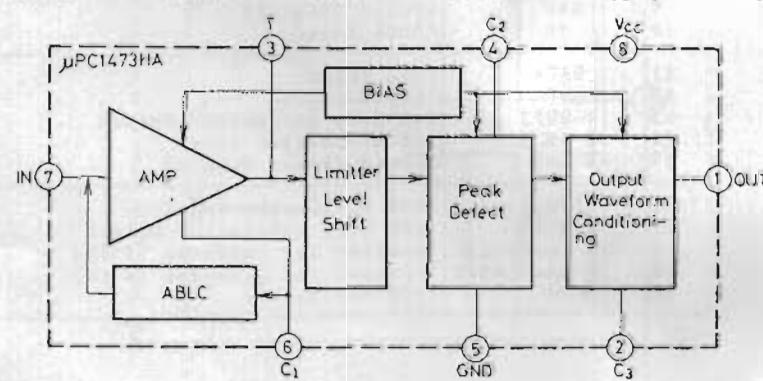


IC381: TC9177P

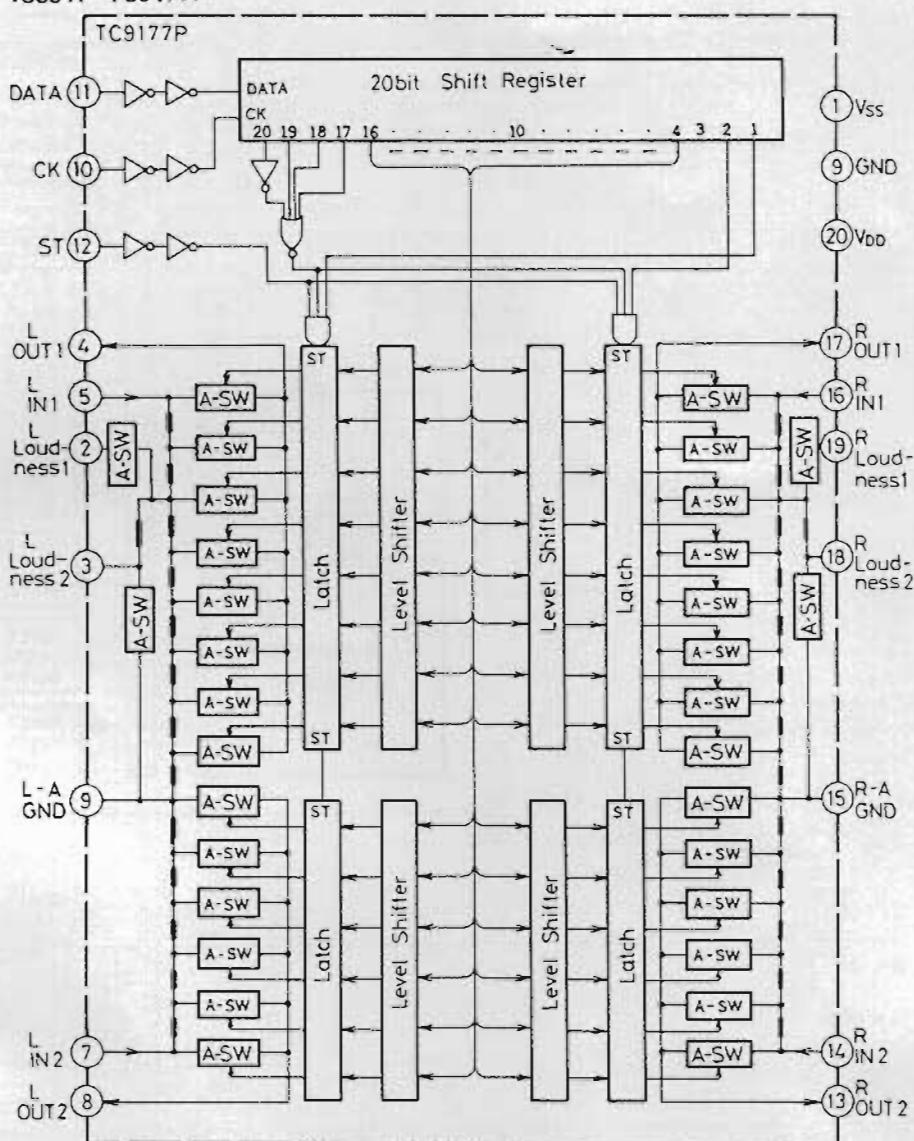


IC381: TC9177P


Pin No.	Symbol	Function
1	V _{ss}	(-) Power Supply
2	L-Loudness1	Terminal for Loudness (L-ch)
3	L-Loudness2	Terminal for Loudness (L-ch)
4	L-OUT1	10dB Step Attenuator Output
5	L-IN1	10dB Attenuator Input
6	A-GND	Ground (Power Supply)
7	L-IN2	2dB Attenuator Input
8	L-OUT2	2dB Step Attenuator Output
9	GND	Ground (Signal)
10	CK	Clock Input
11	DATA	Data Input
12	ST	Strobe Input
13	R-OUT2	2dB Step Attenuator Output
14	R-IN2	2dB Attenuator Input
15	A-GND	Ground (Power Supply)
16	R-IN1	10dB Attenuator Input
17	R-OUT1	10dB Step Attenuator Output
18	R-Loudness2	Terminal for Loudness (R-ch)
19	R-Loudness1	Terminal for Loudness (R-ch)
20	V _{dd}	(+) Power Supply

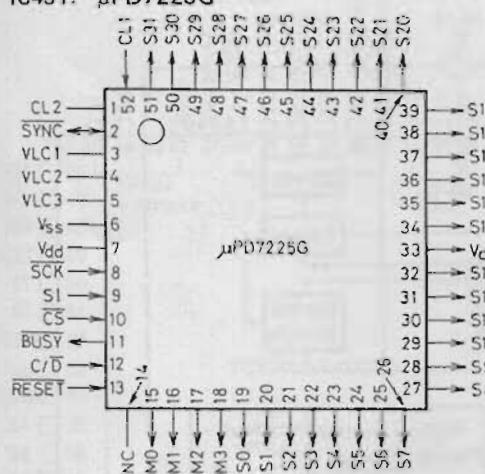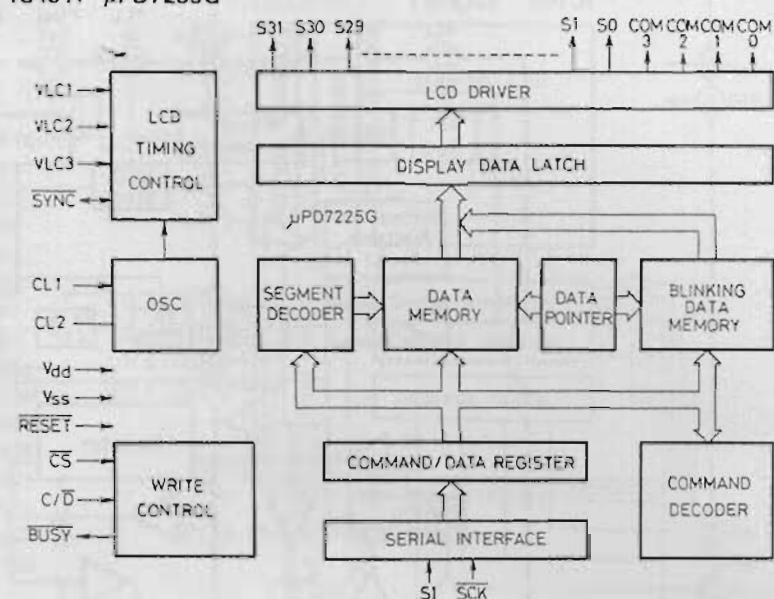IC451: μ PD7225GIC451: μ PD7255G


IC901: TA7317P

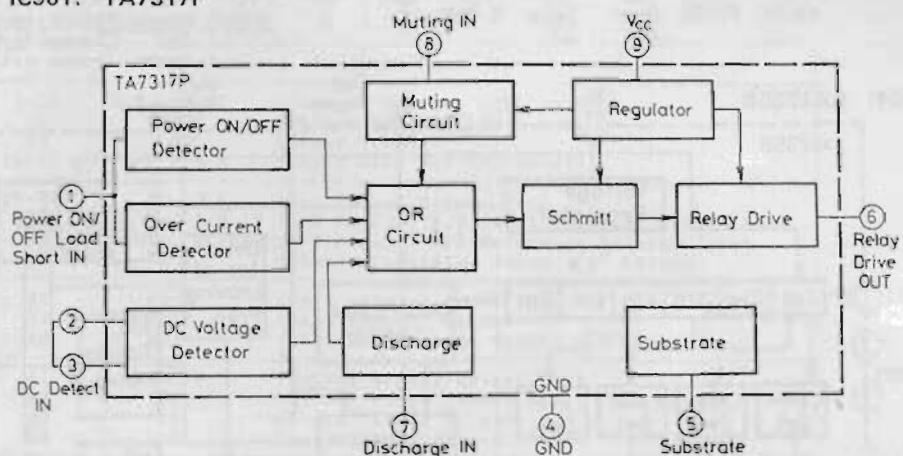


IC751, IC75: VC5022-2

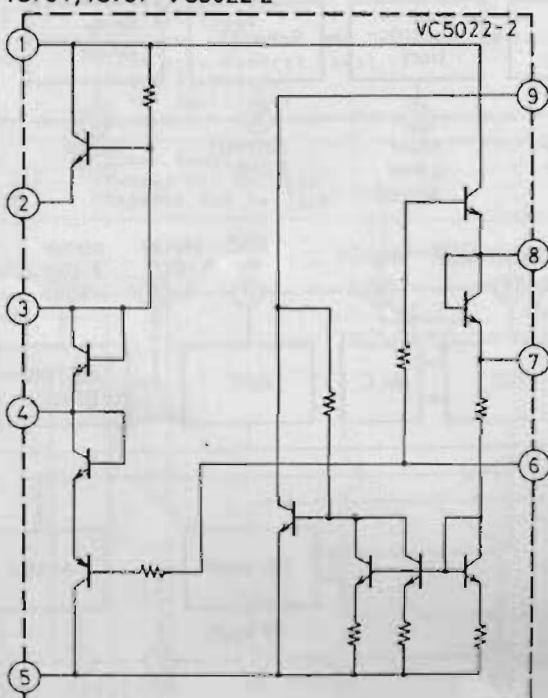


IC105: LA3401

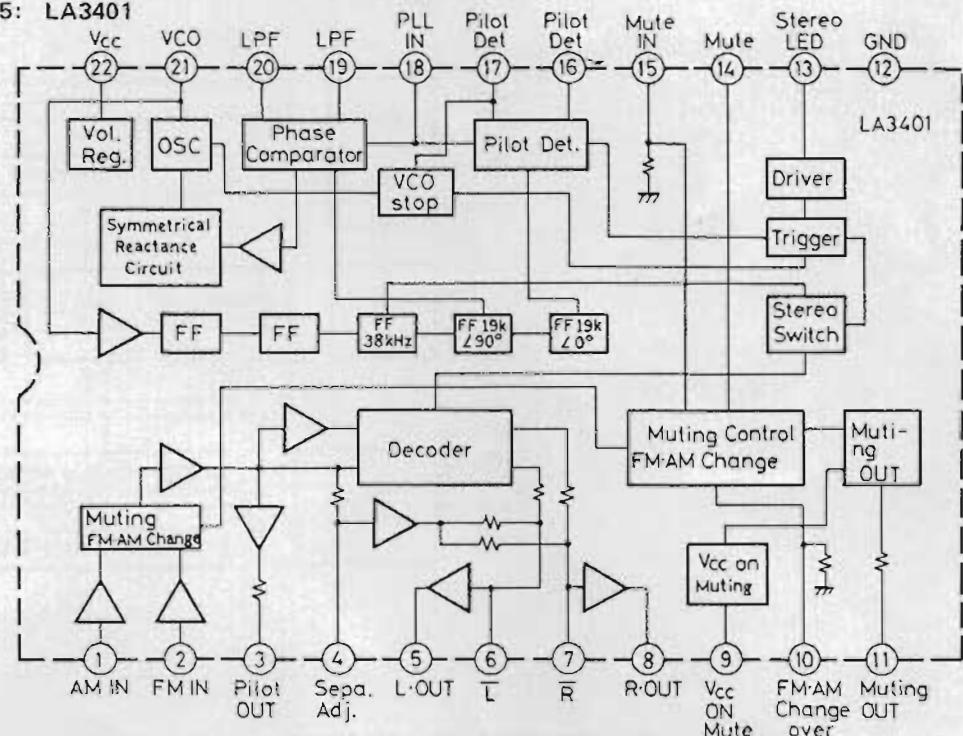



IC104: LA1235B

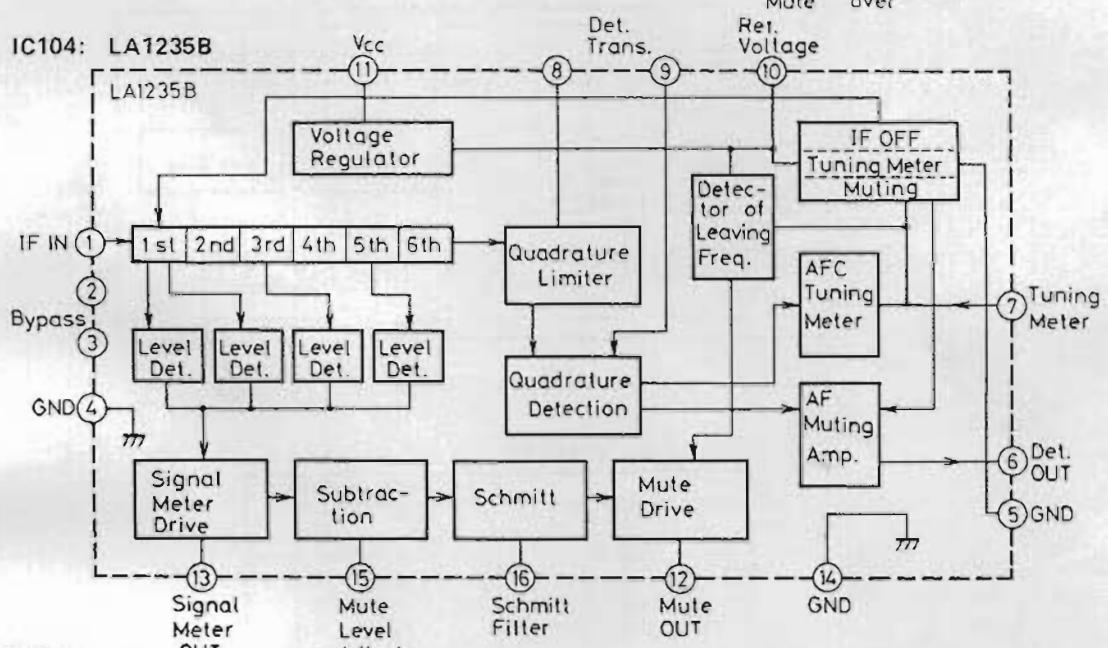

IC201: LA1245

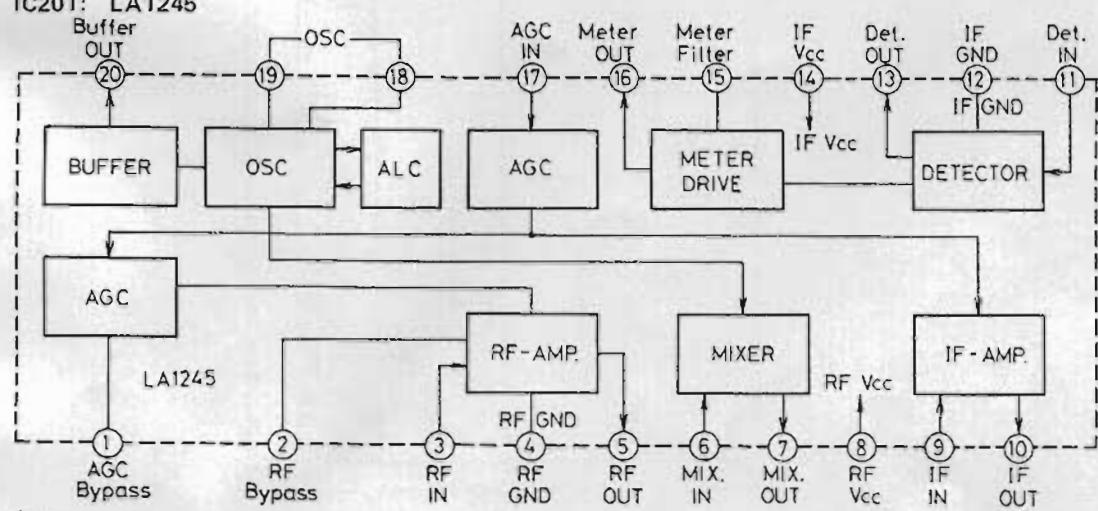


IC421: TC9302AF-013BS

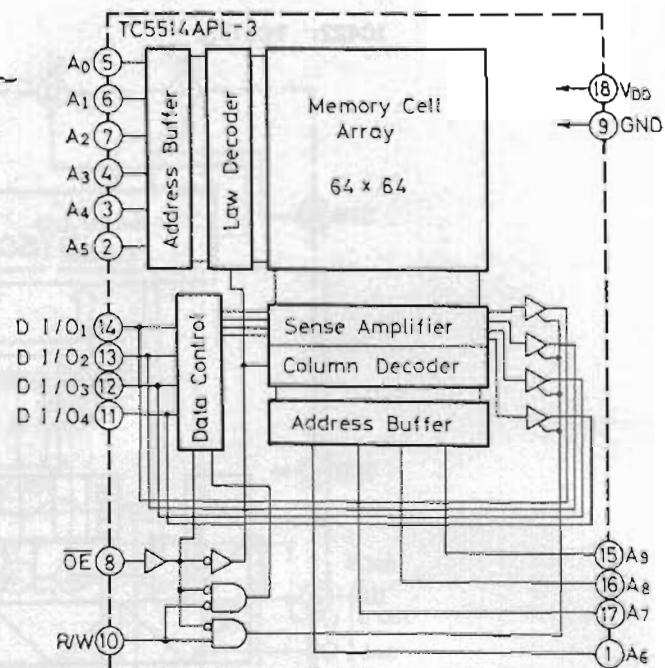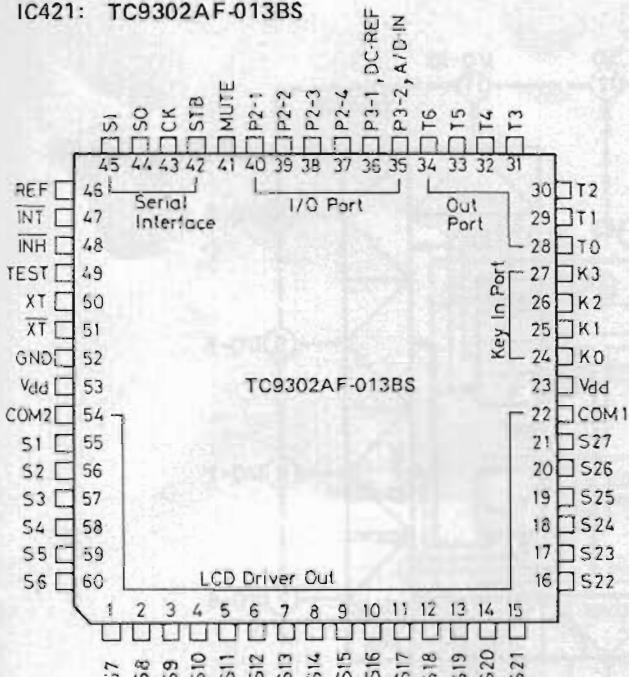


IC421: TC9302AF-013BS

Pin No.	Symbol	Terminal Function
1-21	S 7 ~ S 27	Segment Out to "LCD"
22	COM 1	Common Out to "LCD"
23	V dd	Power Supply
24-27	K 0 ~ K 3	Input Port for Key matrix
28-34	T 0 ~ T 6	Key Timing Output Port
35	P3-2 . A/D-IN	I/O Port3 . A/D Input . Signal Meter Input
36	P3-1 . DC-REF	I/O Port3 . A/D Reference Voltage Input
37	P2-4	Stereo Indicator Input ("L" Level)
38	P2-3	DATA Request Input
39	P2-2	DATA Request Output
40	P2-1	IF Count Request Output ("H" Level)
41	MUTE	Muting Signal Output Port
42	STB	Strobe Pulse Output
43	CK	Serial Clock Output
44	SO	Serial Data Output
45	S1	Serial Data Input
46	REF	PLL Reference Frequency Output
47	INT	Initialize Input
48	INH	Inhibit Input
49	TEST	Test Mode Control Input
50	XT	X'tal Oscillator
51	XT	X'tal Oscillator
52	GND	Ground
53	V dd	Power Supply
54	COM 2	Common Out to "LCD"
55-60	S1-S6	Segment Out to "LCD"


IC101, IC103: BA401

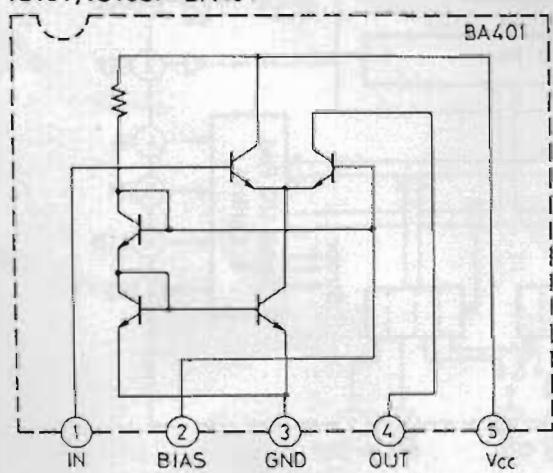


IC446: NJM4558D

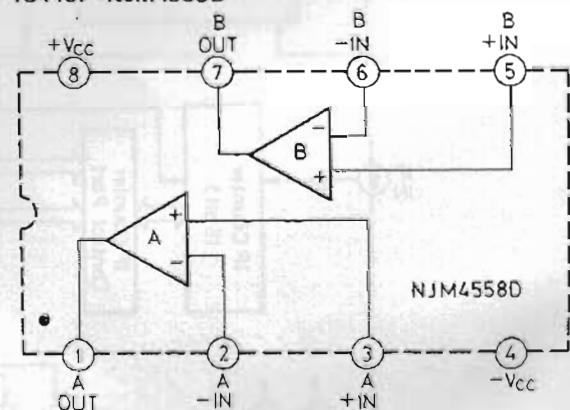


IC422: TC9173P

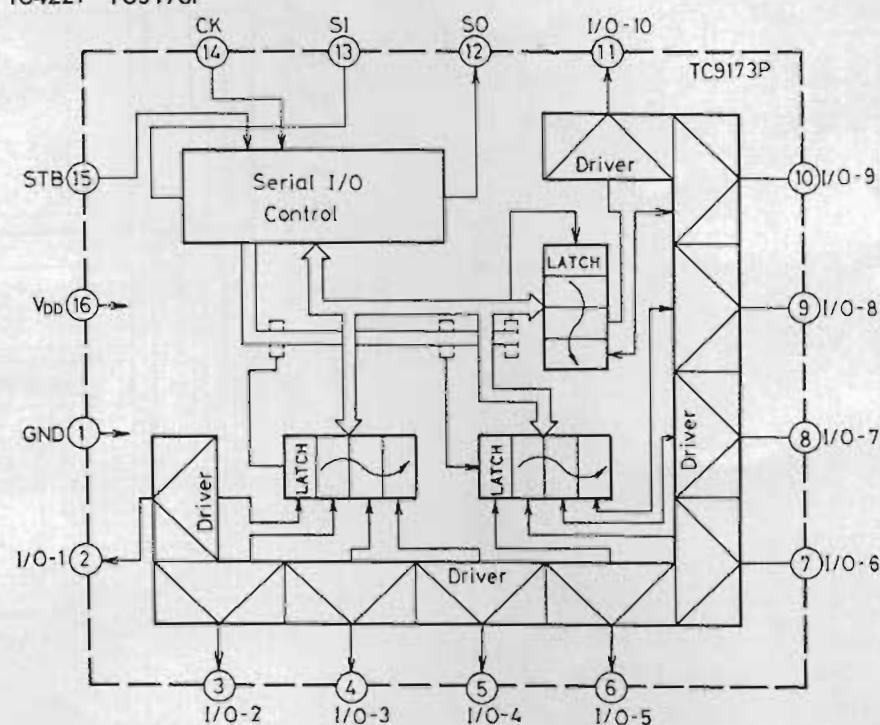


IC102: μPC1163H

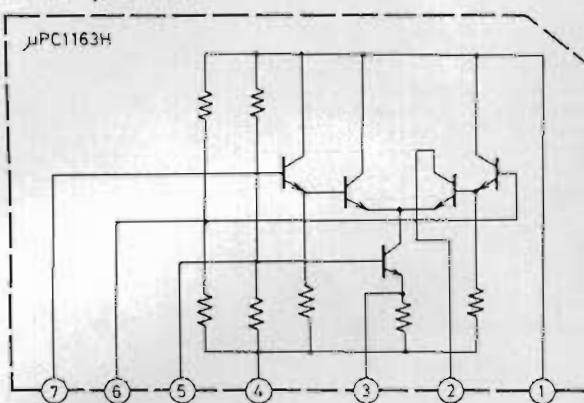

IC051: AN6912

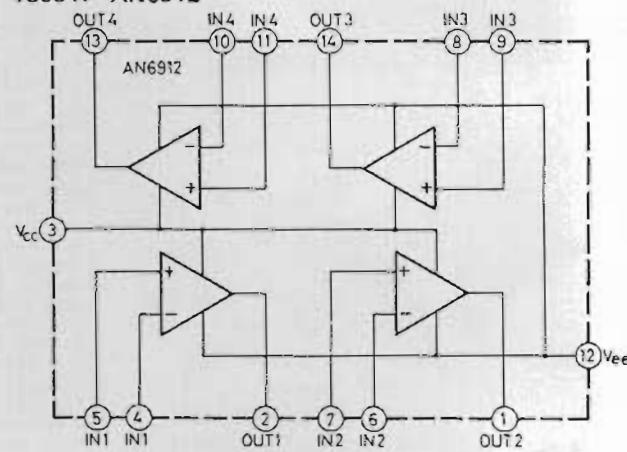


IC251: TC9171P

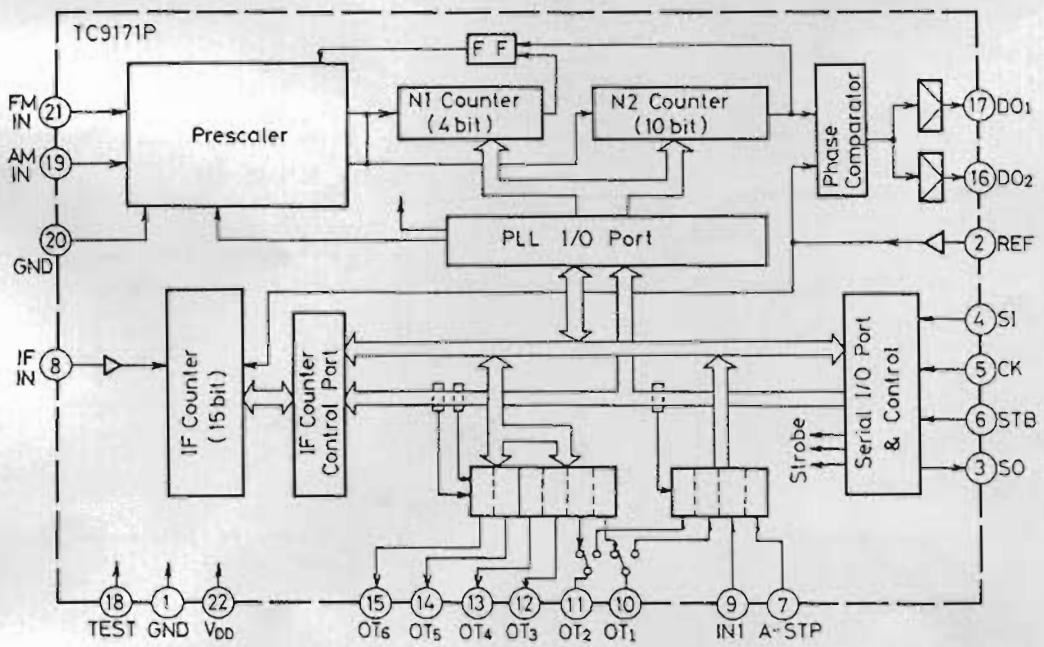



Block Diagram

(7) Buffer PC Board Section

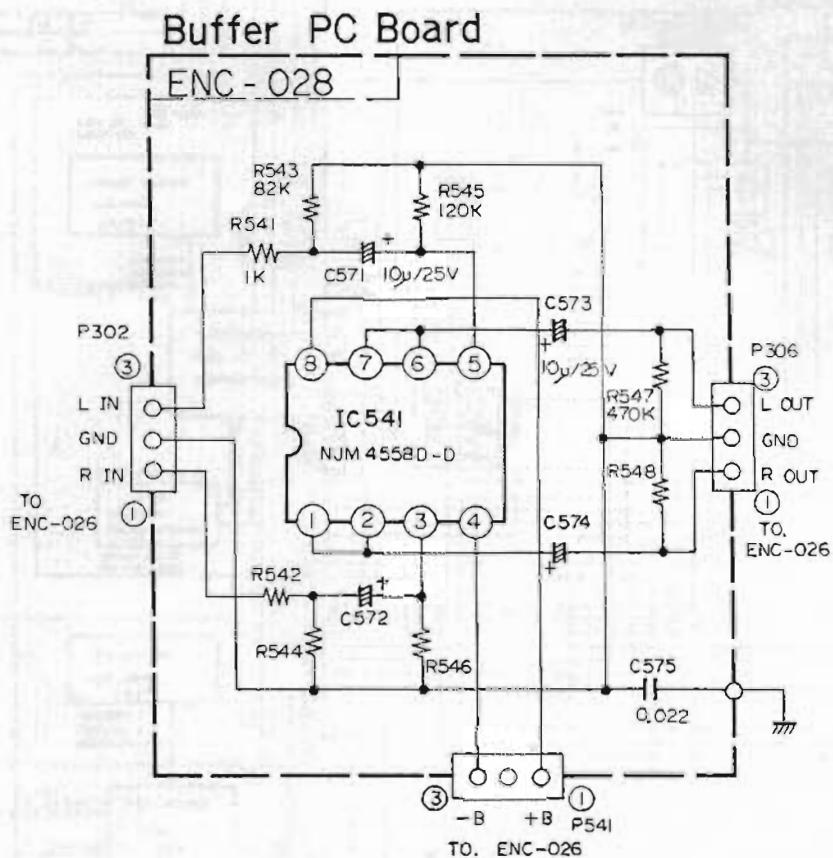

Block Diagram

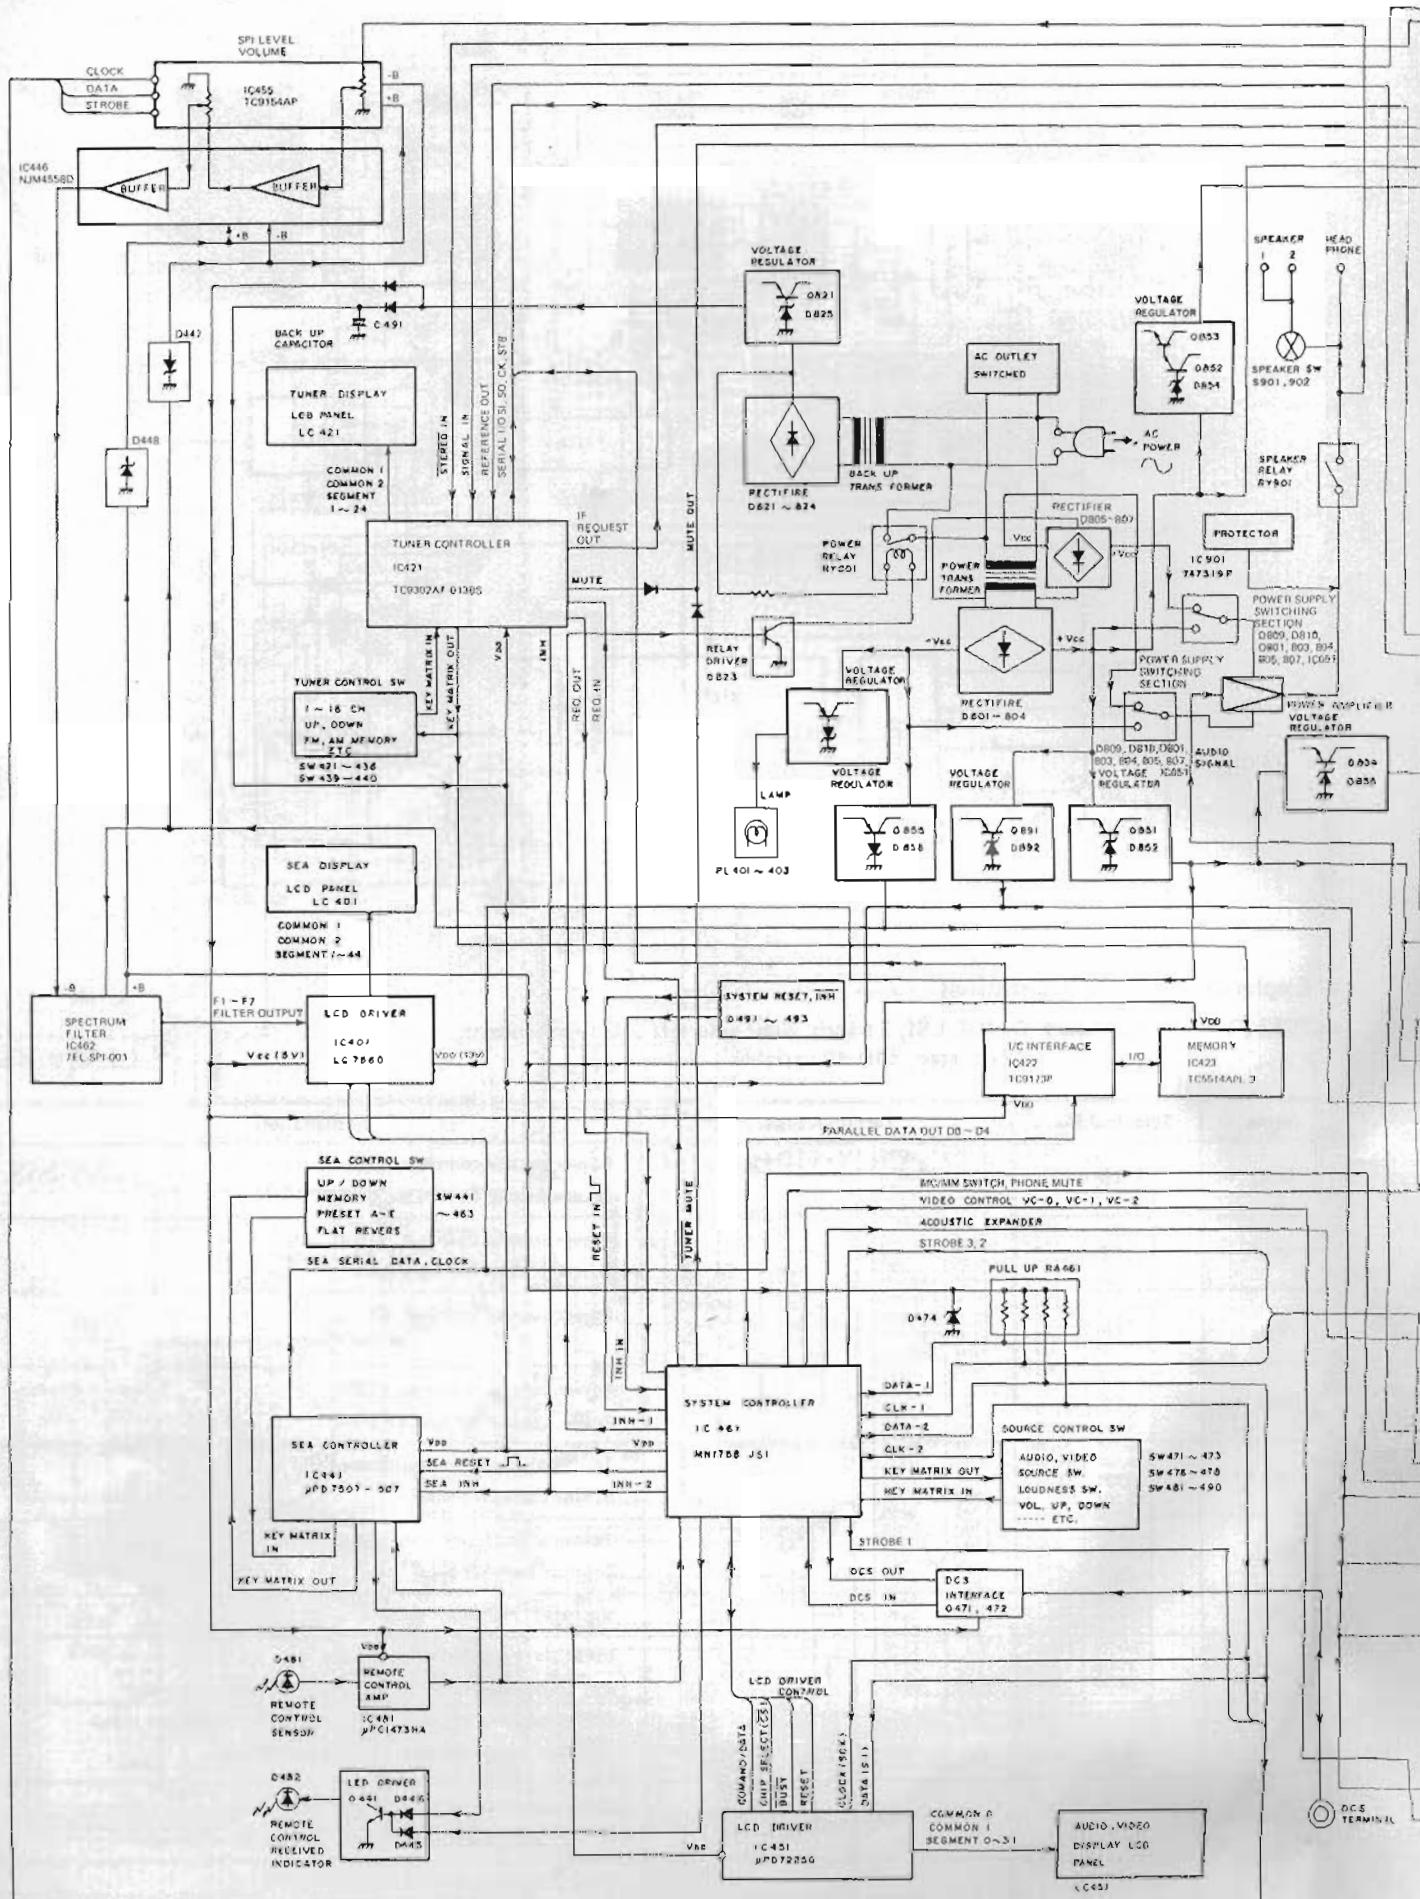


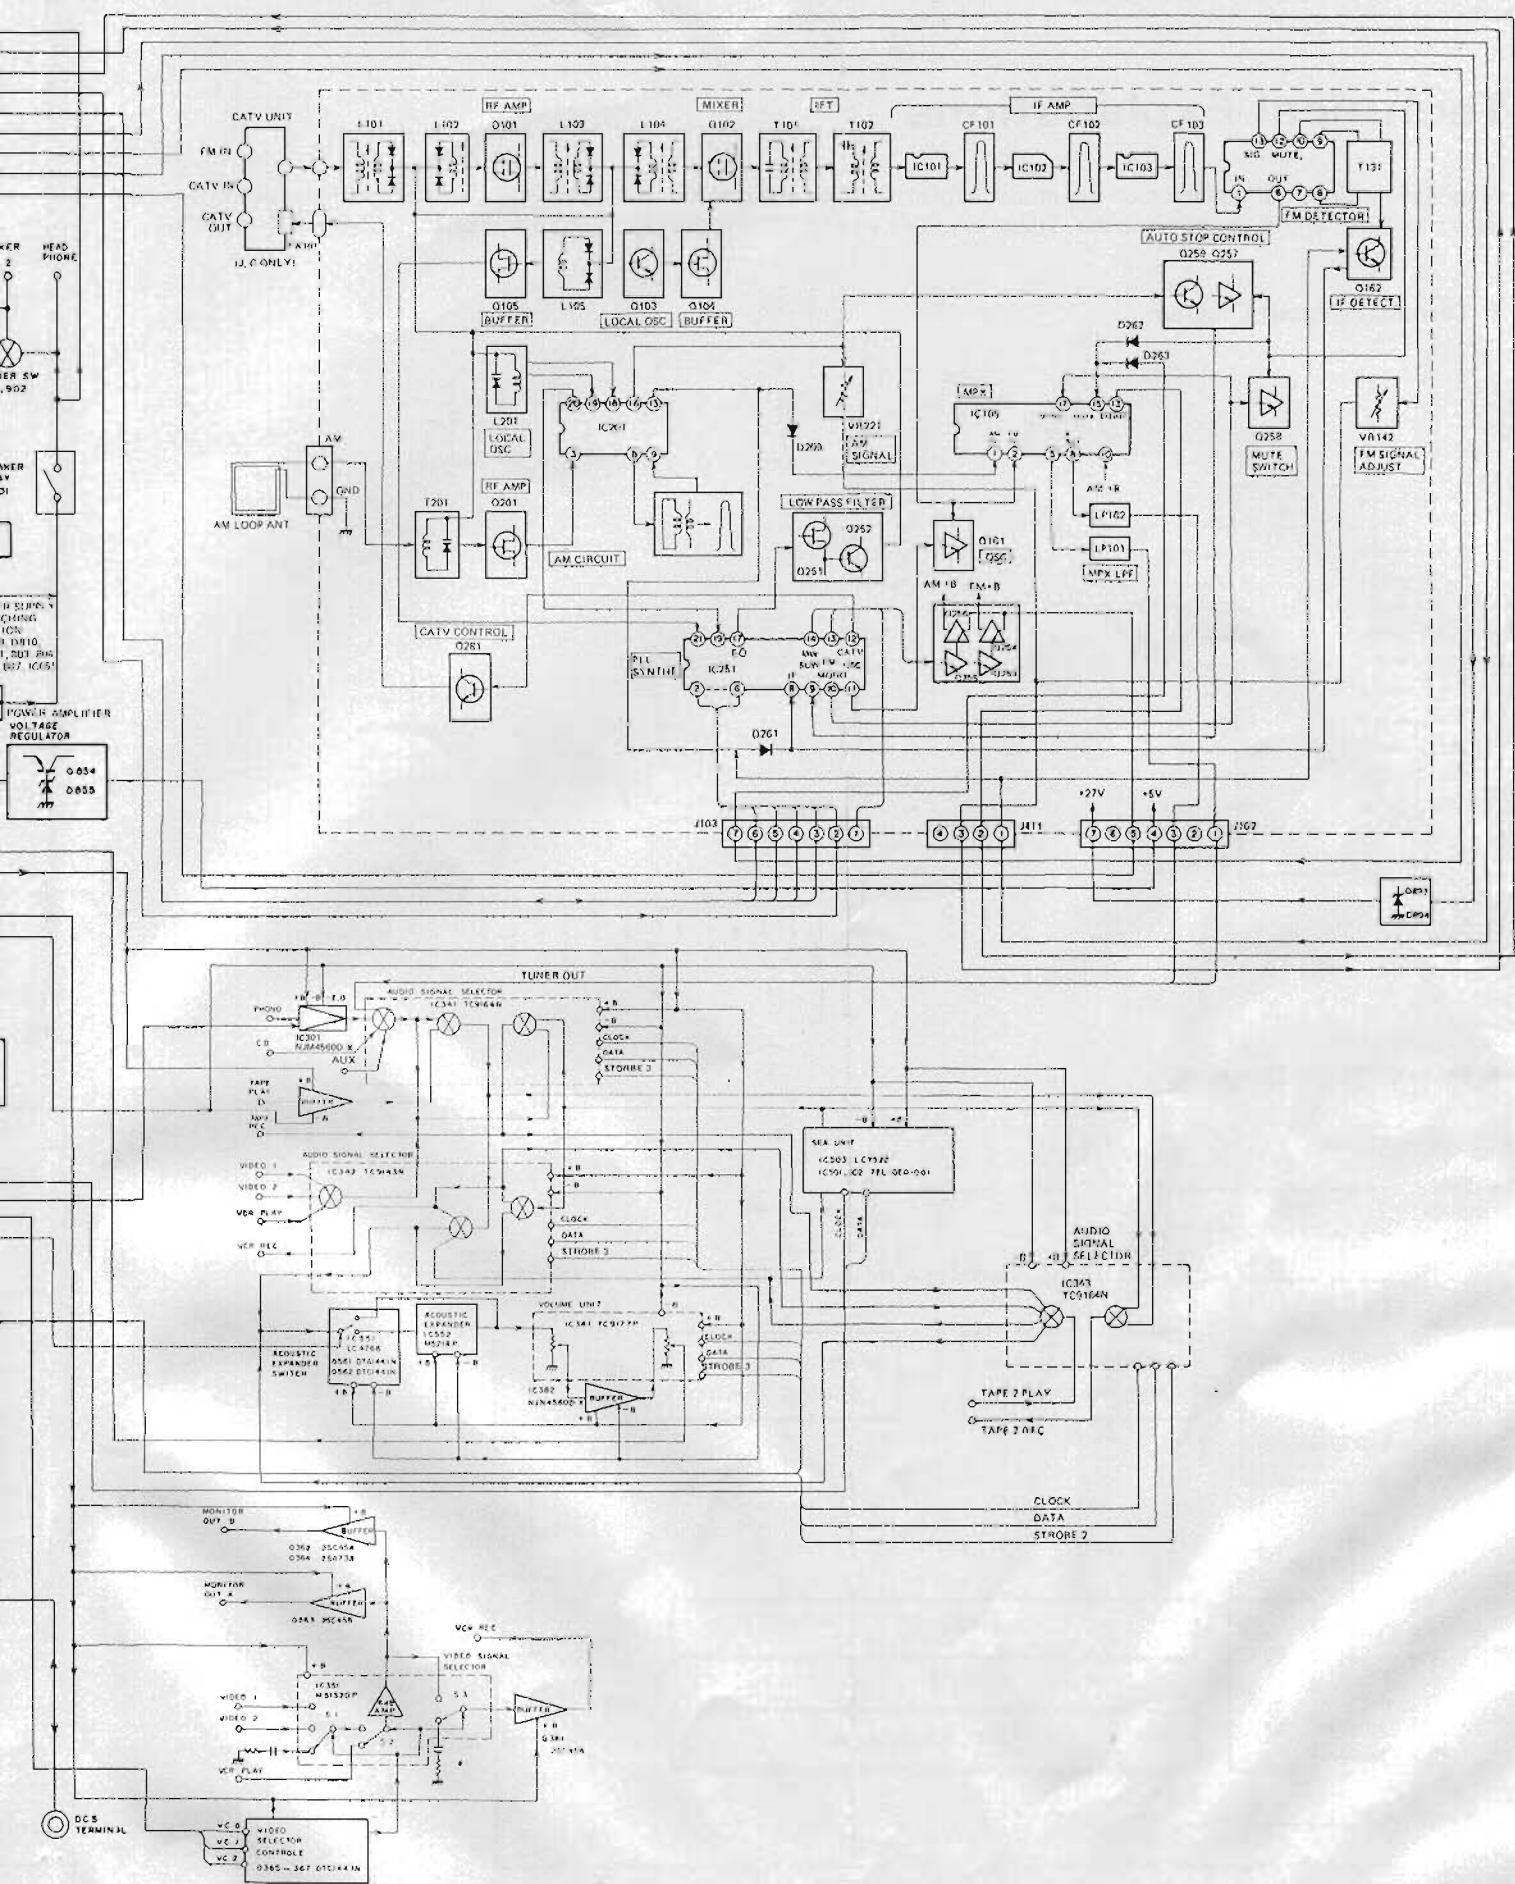


(4) Power Amplifier Section

(E, A, G, BS) (E) FOR EUROPE (G) FOR WEST GERMANY AC 220V 50Hz
 (A) FOR AUSTRALIA (BS) FOR UK AC 240V 50Hz


(U, P, PG) (U) FOR OTHER COUNTRIES
 (P, PG) FOR U.S. MILITARY

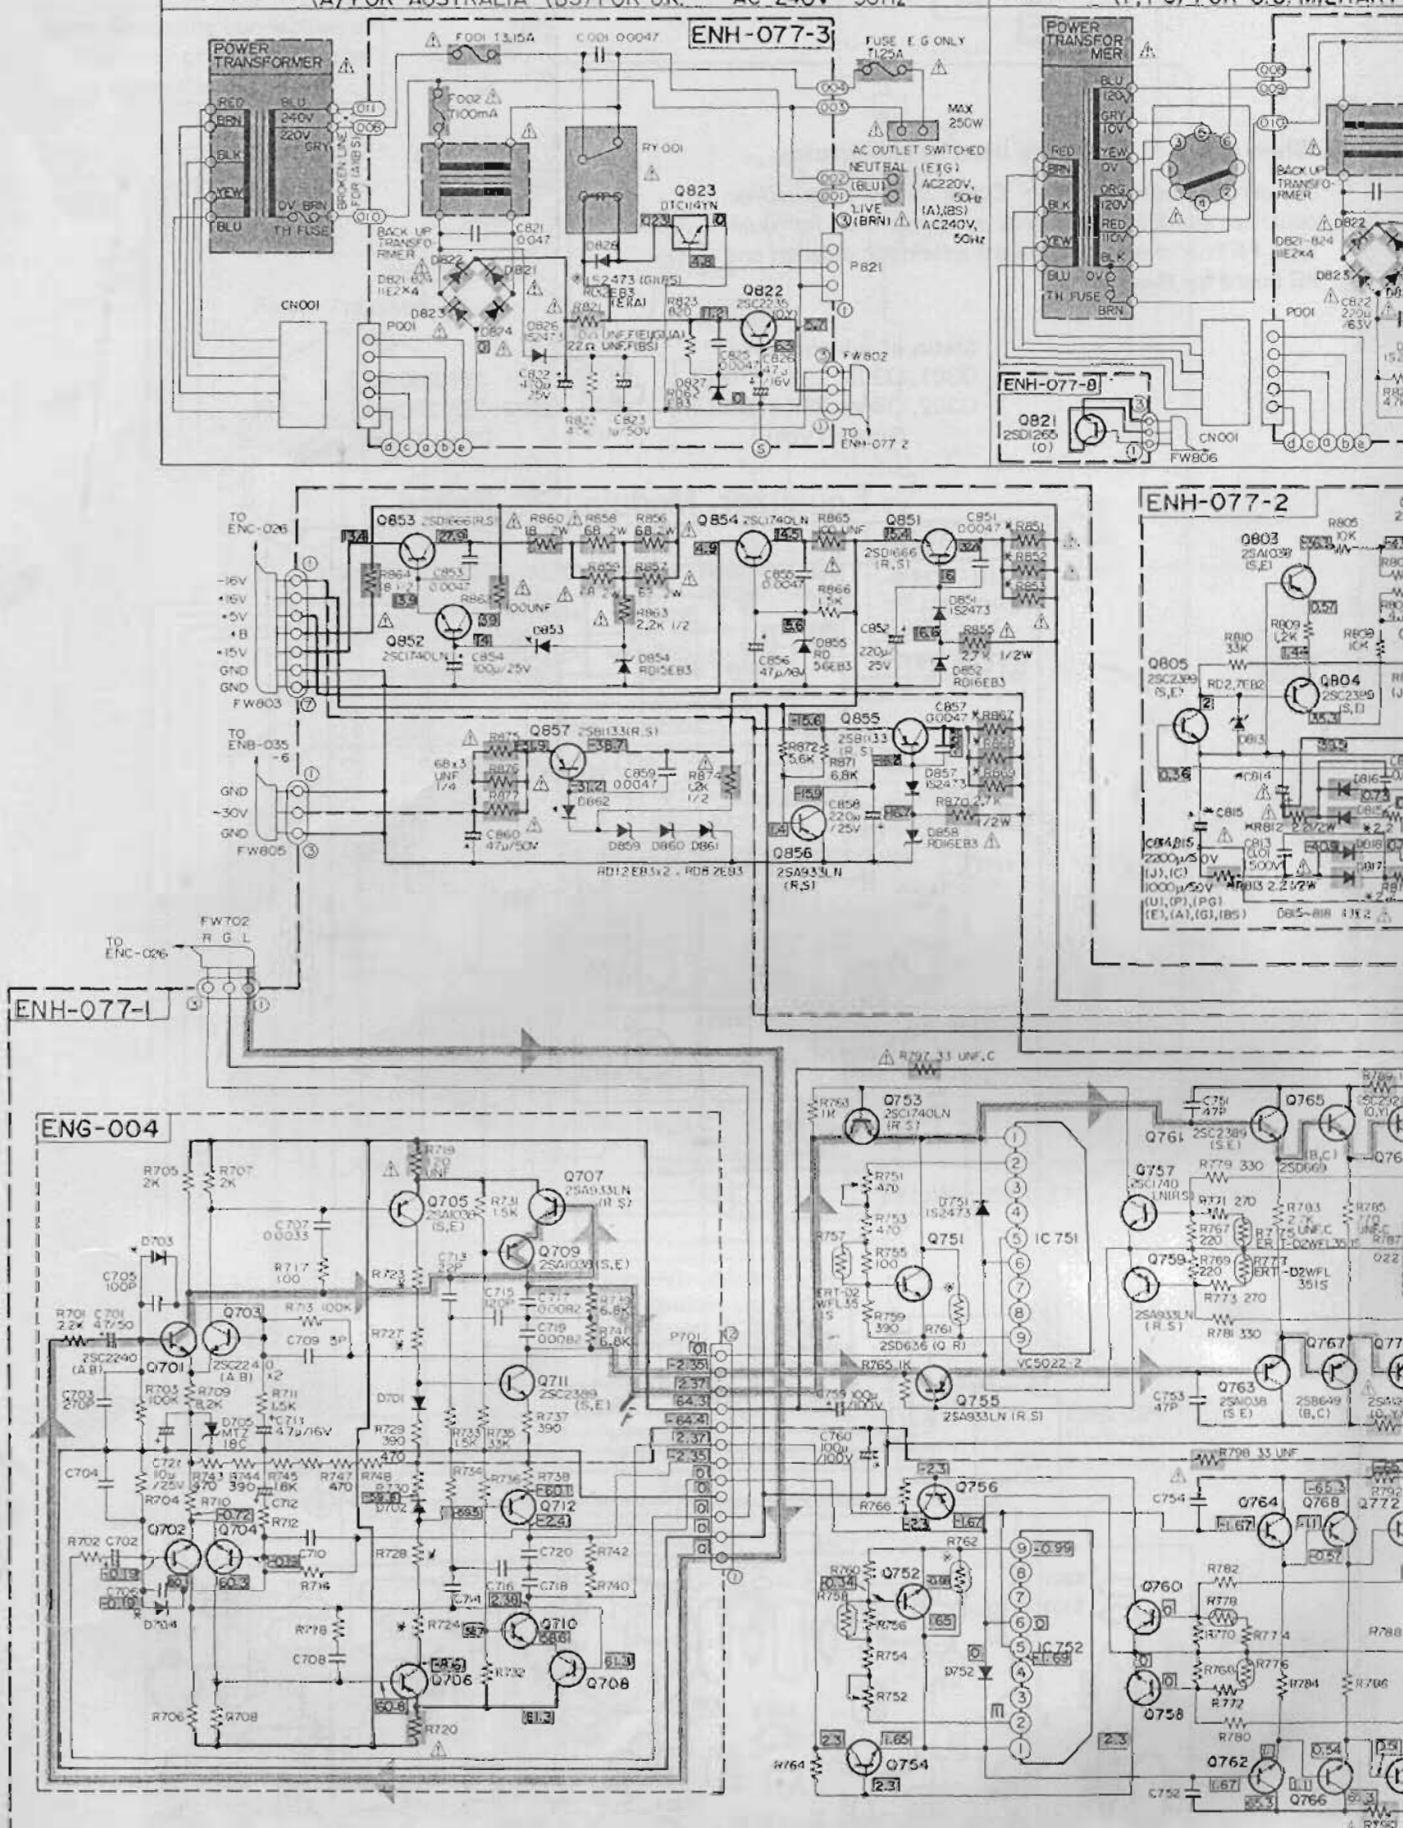


OTHER COUNTRIES
OR U.S. MILITARY MARKET

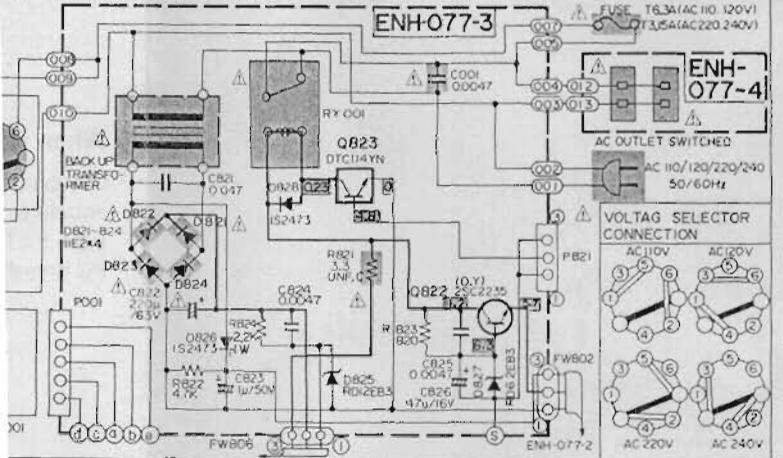

(J, C) FOR U.S.A.
(C) FOR CANADA

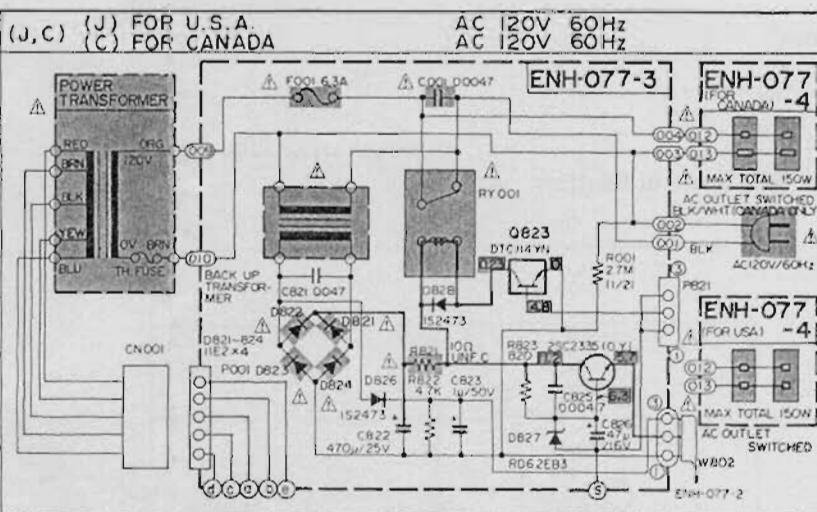

AC 120V 60Hz
AC 120V 60Hz

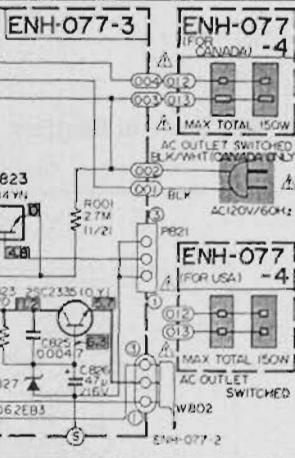


ENH-077-3
FOR CANADA - 41


MAX TOTAL 150W
AC OUTLET SWITCHED
BLK/WHIT CANADA ONLY

ENH-077-4
FOR USA - 41



MAX TOTAL 150W
AC OUTLET SWITCHED

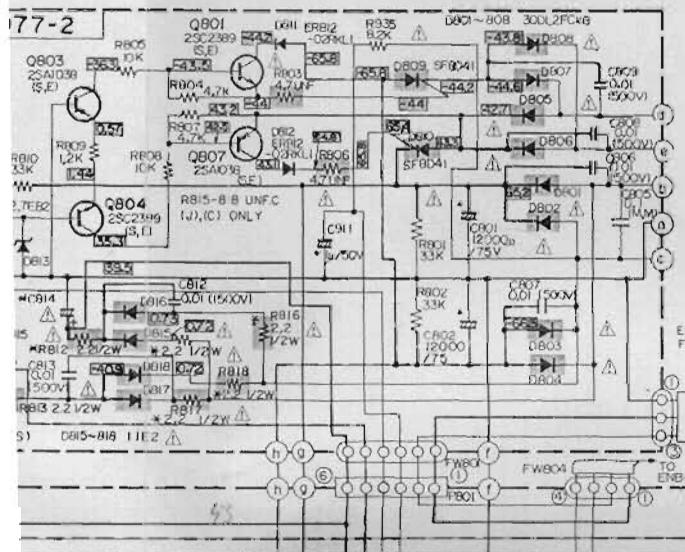


ENH-077-5

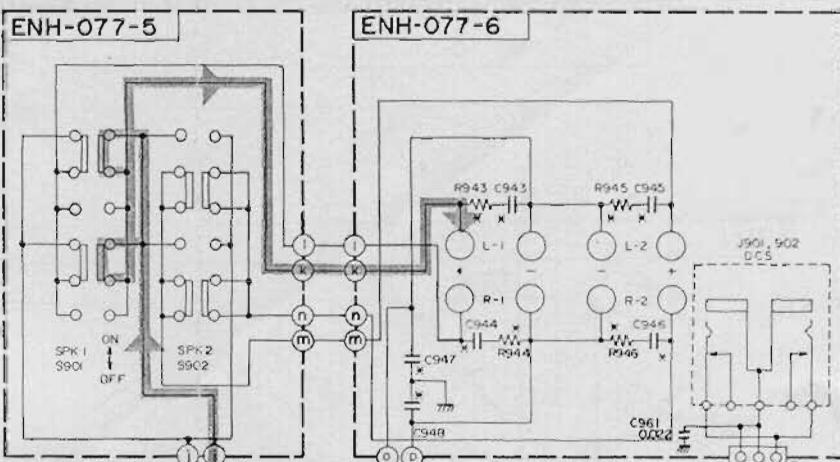

ENH-077-6

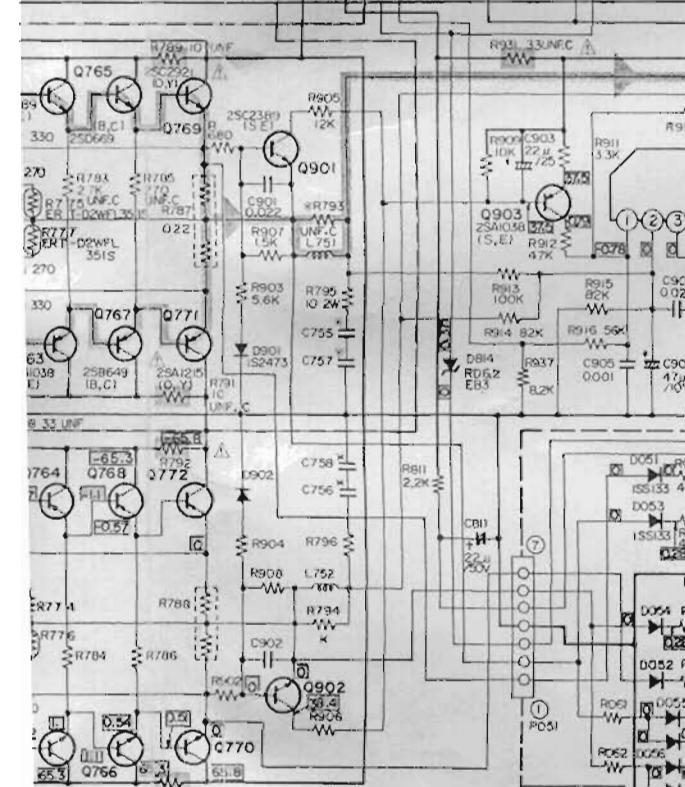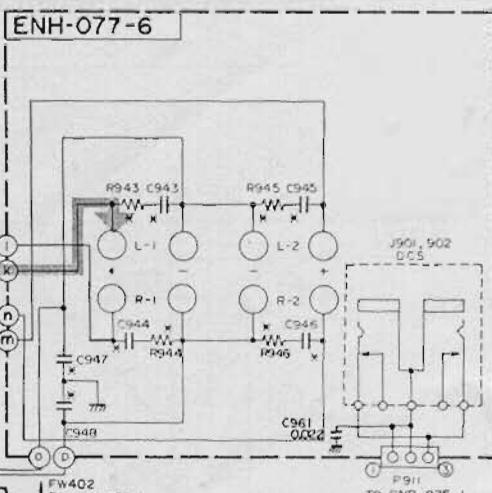

ENH-071

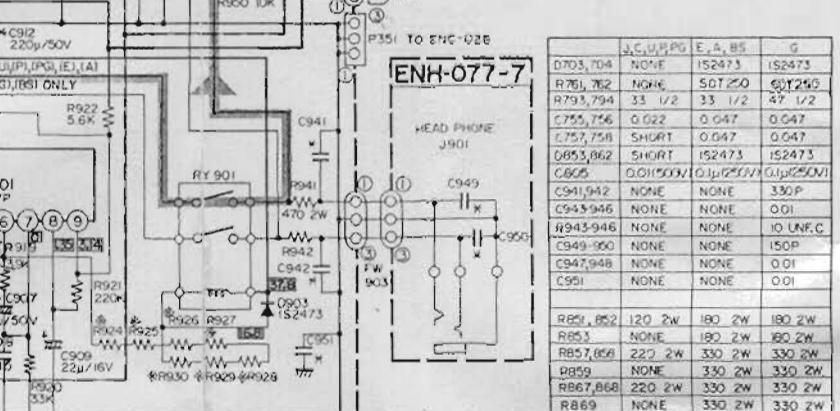


ENH-077-7

J.C.U.PPG	E.A.B5	G
D703,704	NONE	I52473
R761,762	NONE	SOT250
R793,794	33 1/2	33 1/2
C755,756	0.022	0.047
C757,758	SHORT	0.047
R653,662	SHORT	I52473
C805	Q11150V/Q11250V/Q11250V	
C941,942	NONE	330P
C943,946	NONE	0.01
R943,946	NONE	10 UNFC
C949,950	NONE	150P
C947,948	NONE	0.01
C951	NONE	0.01
R851,852	120 2W	180 2W
R853	NONE	180 2W
R857,866	220 2W	330 2W
R859	NONE	330 2W
R867,868	220 2W	330 2W
R869	NONE	330 2W
R862	UNFC	UNIF
R865	UNFC	UNIF
R875,877	UNFC	UNIF
R812 - B13	NONE	UNFC
R924	56	B2UNFC
R925	56	15UNFC
R926	56	B2UNFC
R927	56	15UNFC
R928	68	B2UNFC
R929	68	15UNFC
R930	SHORT	B2UNFC
R723,724	5.6K	56KUNFC
R727,728	5.6K	56KUNFC

R723,724 5.6K 56KUNFC

R727,728 5.6K 56KUNFC

(5) Sub Control Section

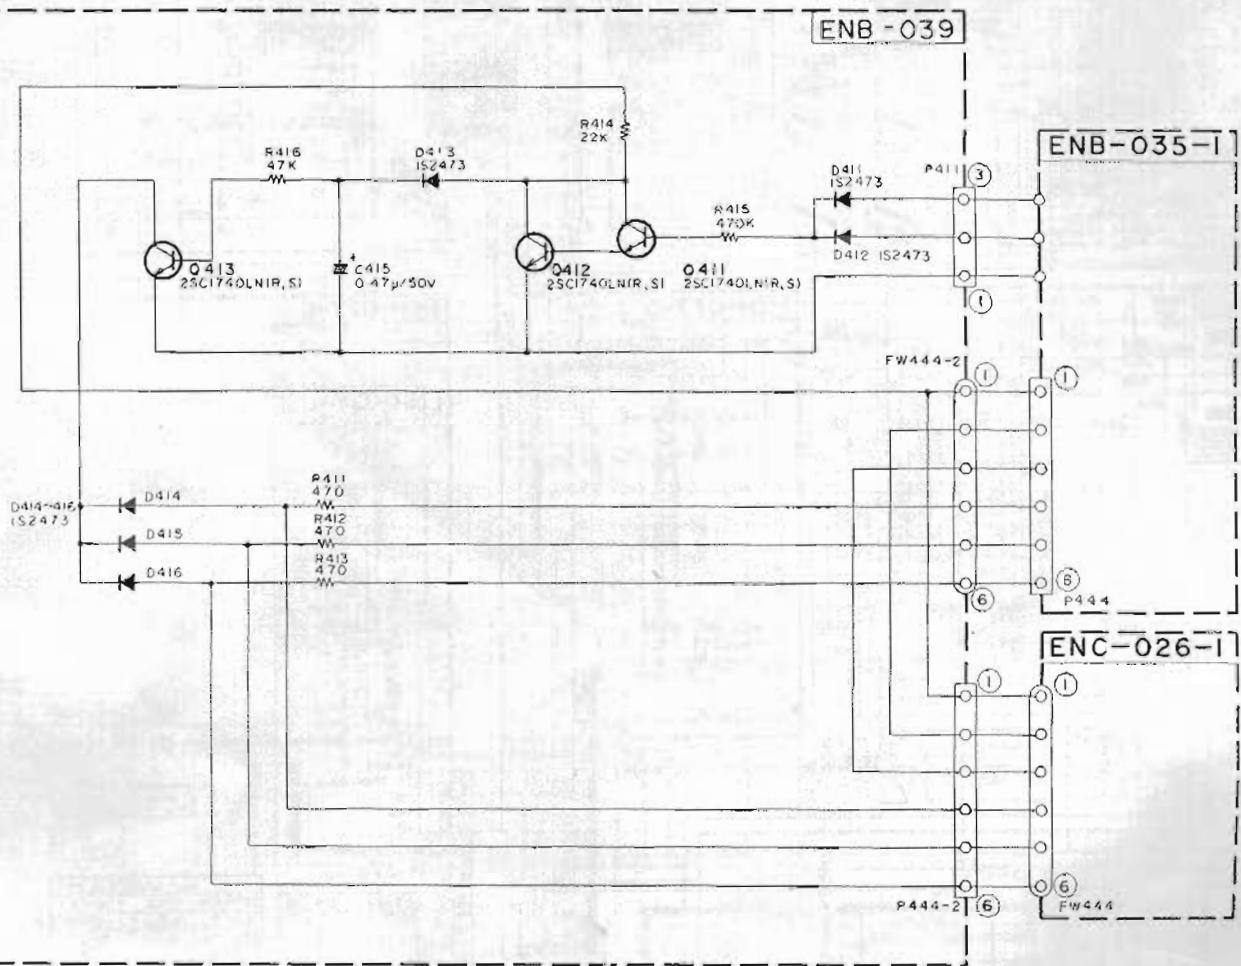



6) When Q301 ~ Q304 are used as substitutes

On certain units, Q301 ~ Q304 (FET) are used on equalizer module PC boards as substitutes for dual-type FET. Shown below are the schematic diagram and PC board for these units.

Status of substitution


Q301, Q303: 2SK170(BL) Q302, Q304: 2SK170(BL) (Single Type)		Q301: 2SK240(BL) Q302: 2SK240(BL) (Dual Type)
---	--	---



Equalizer Module PC Board

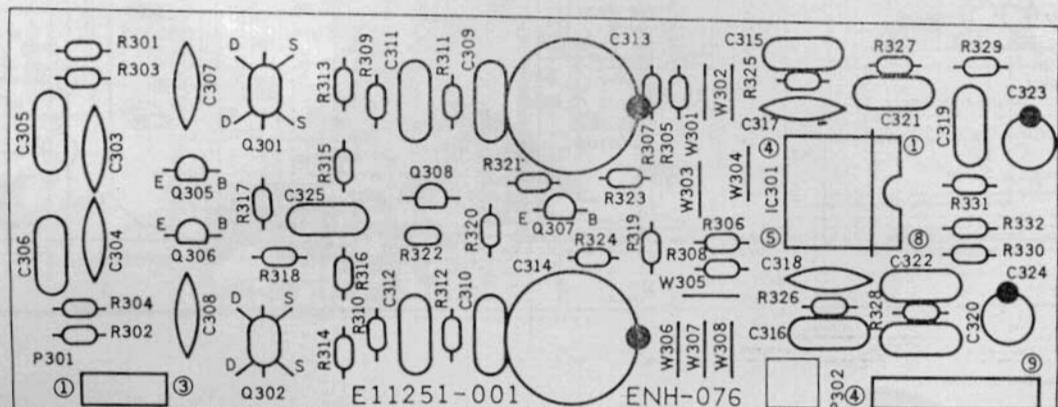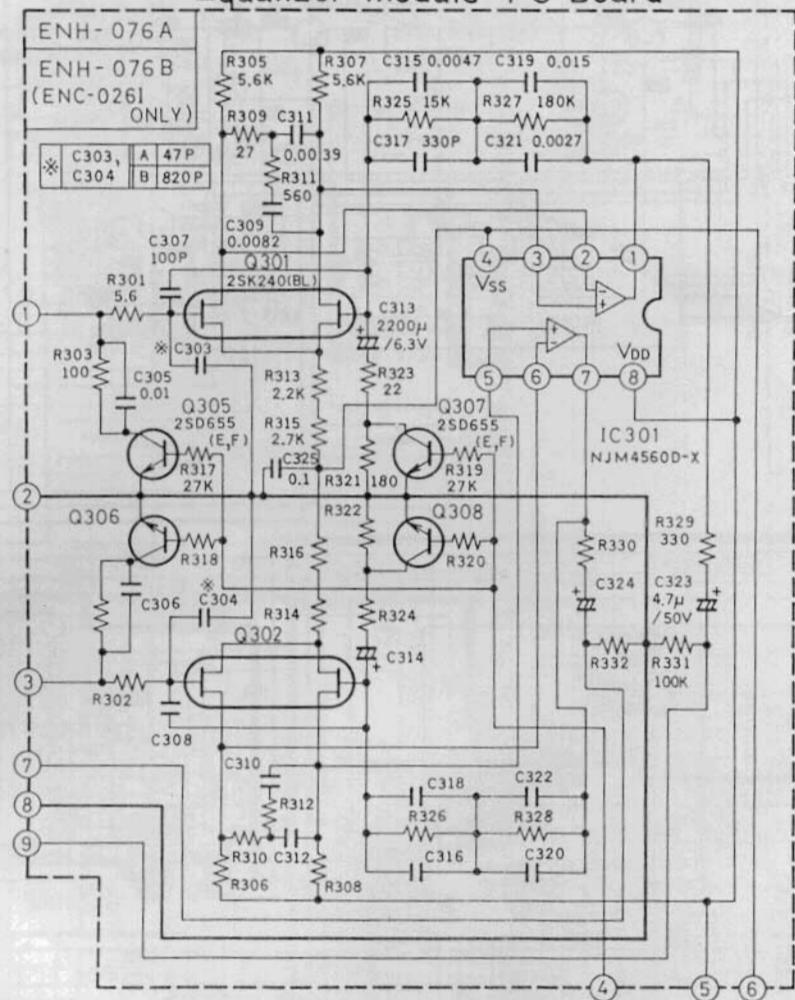

Connection Diagram


Note: Regarding connection of power cord, refer to the schematic diagram.

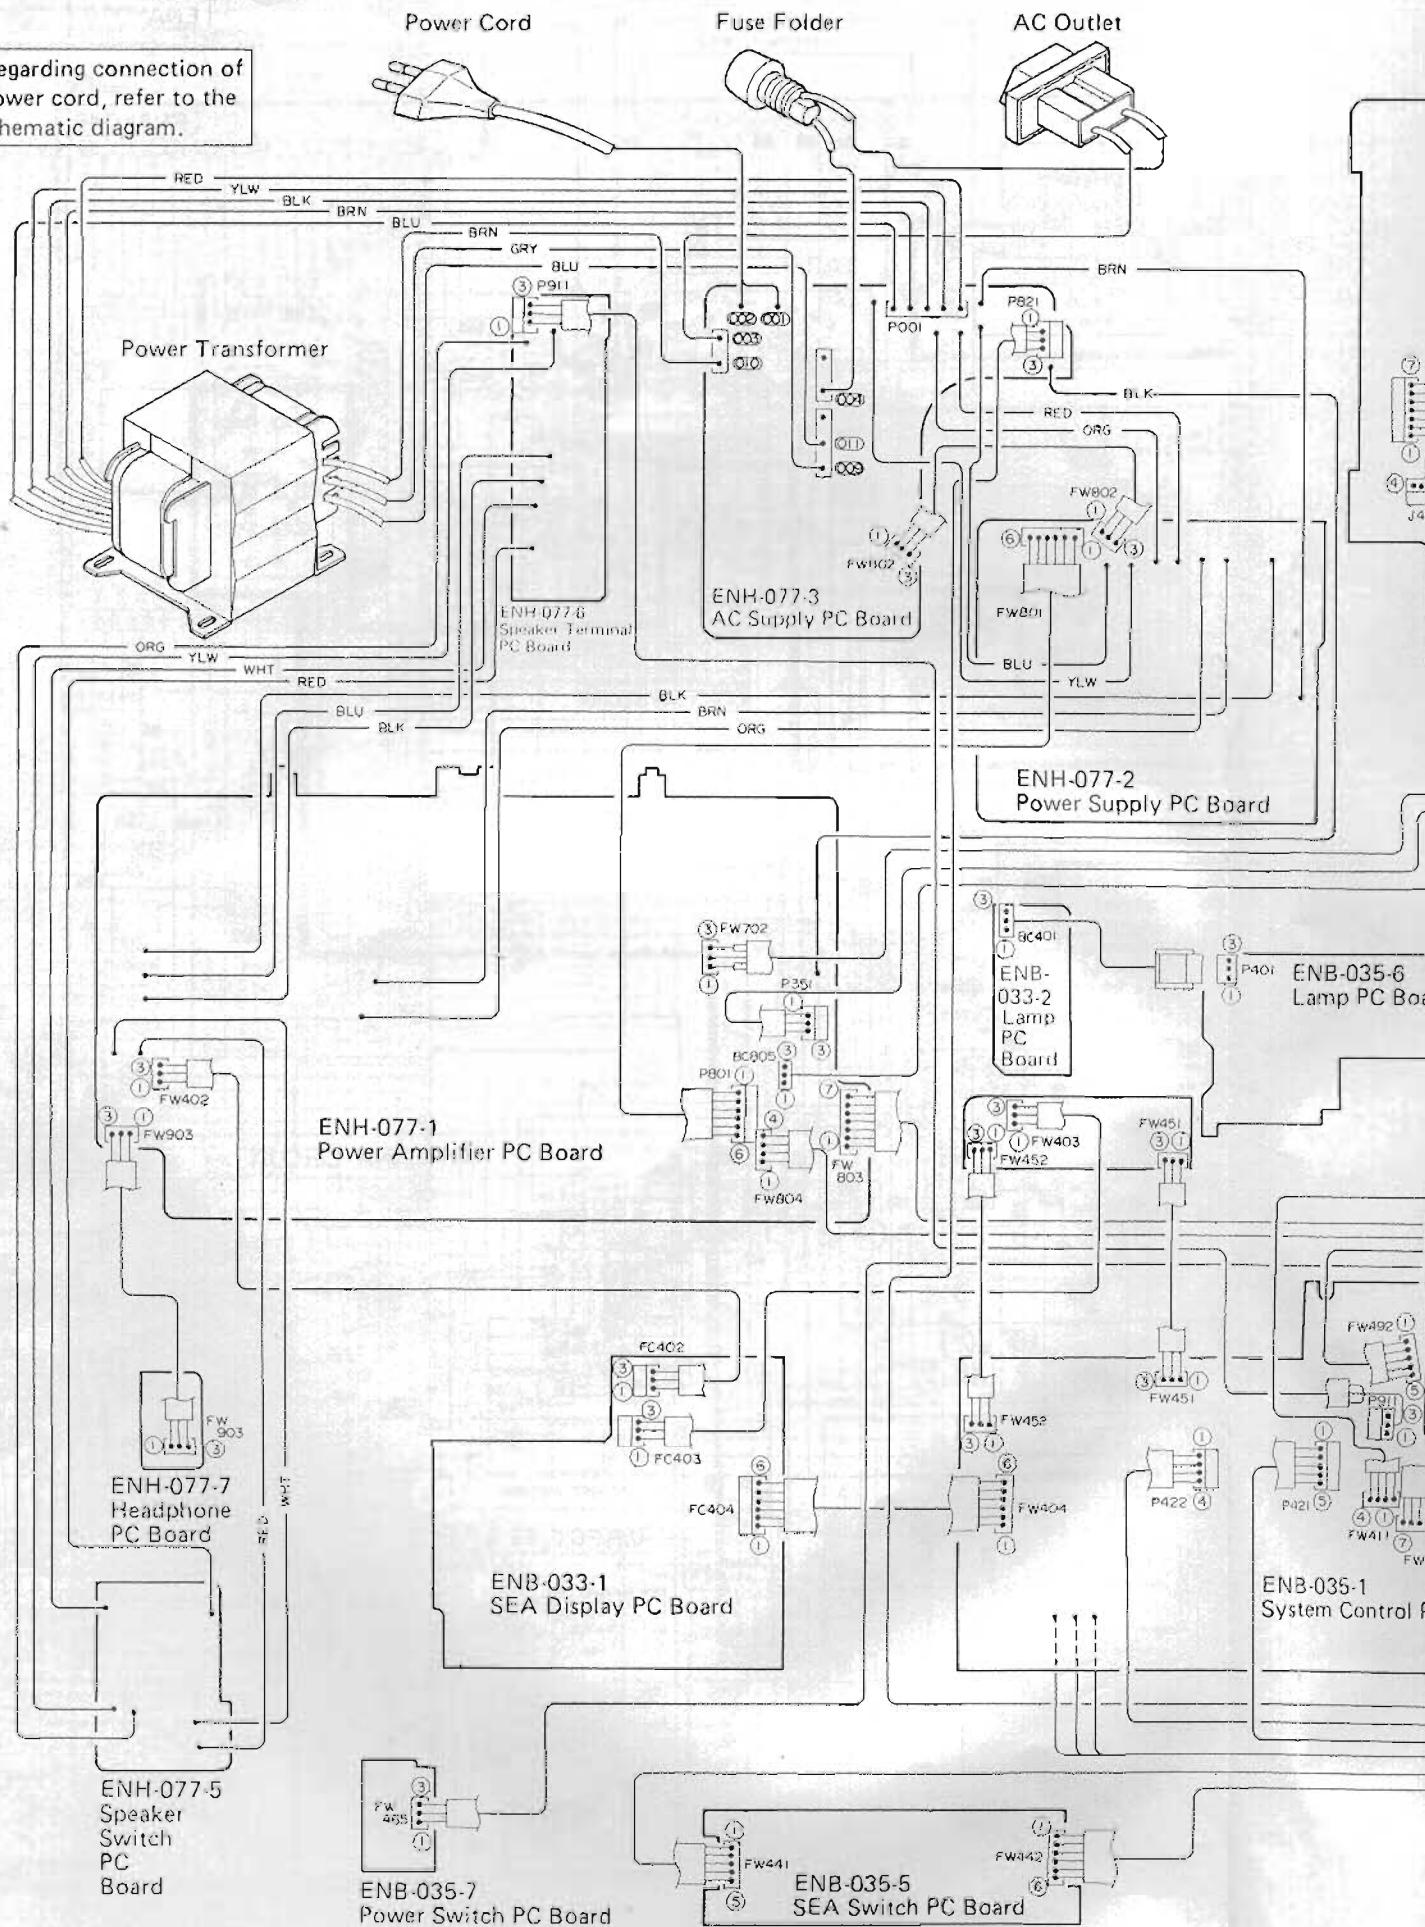

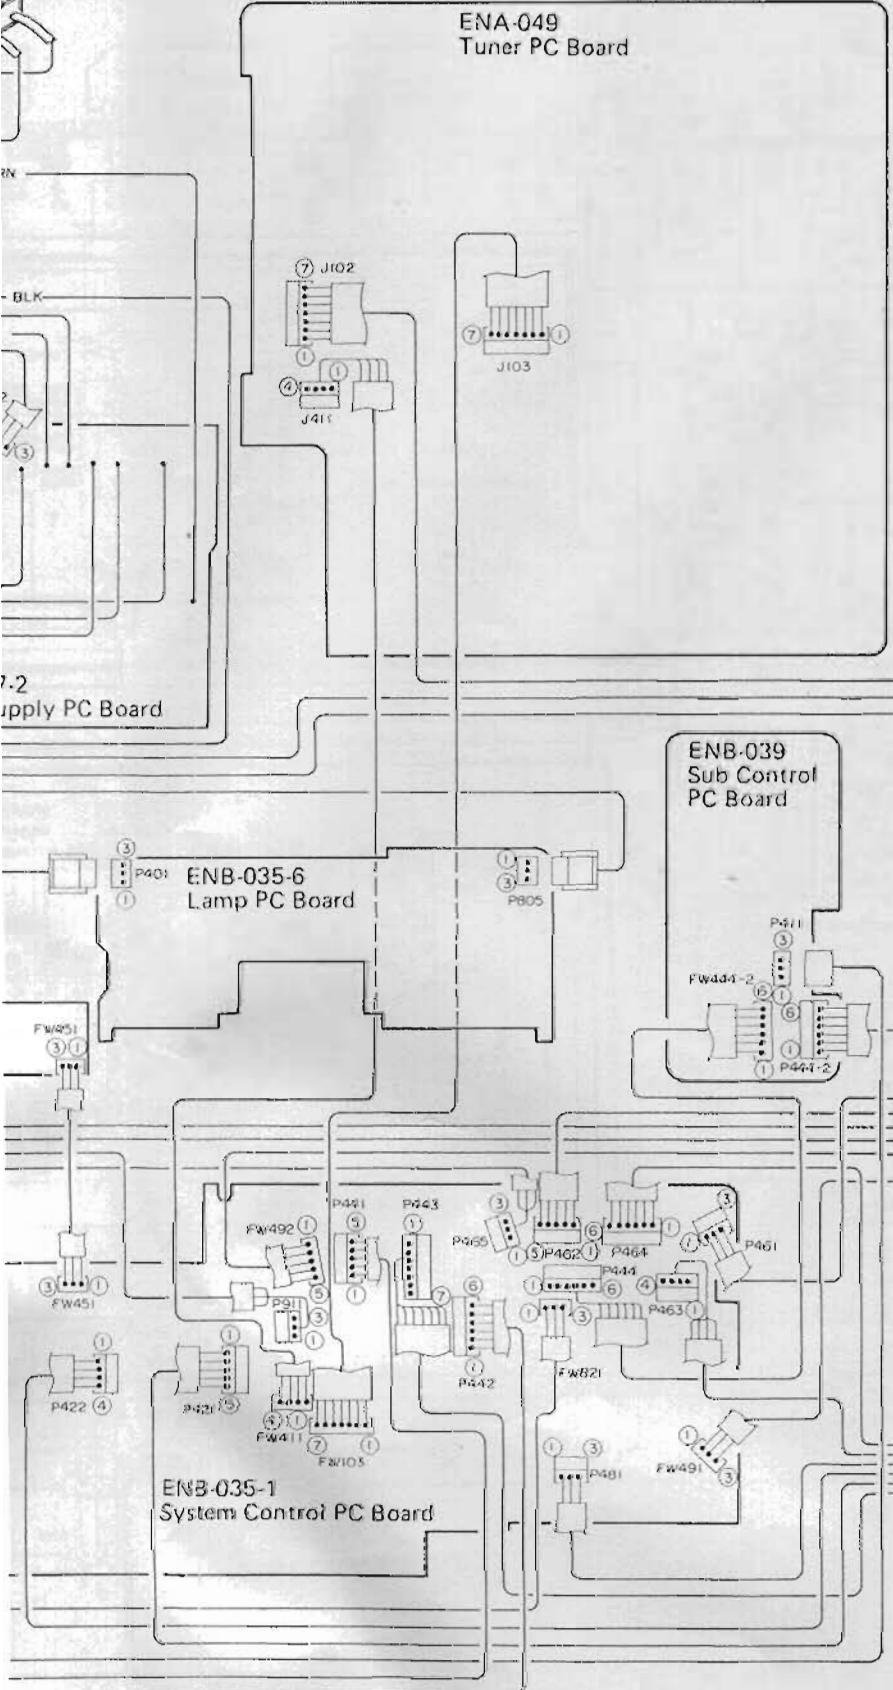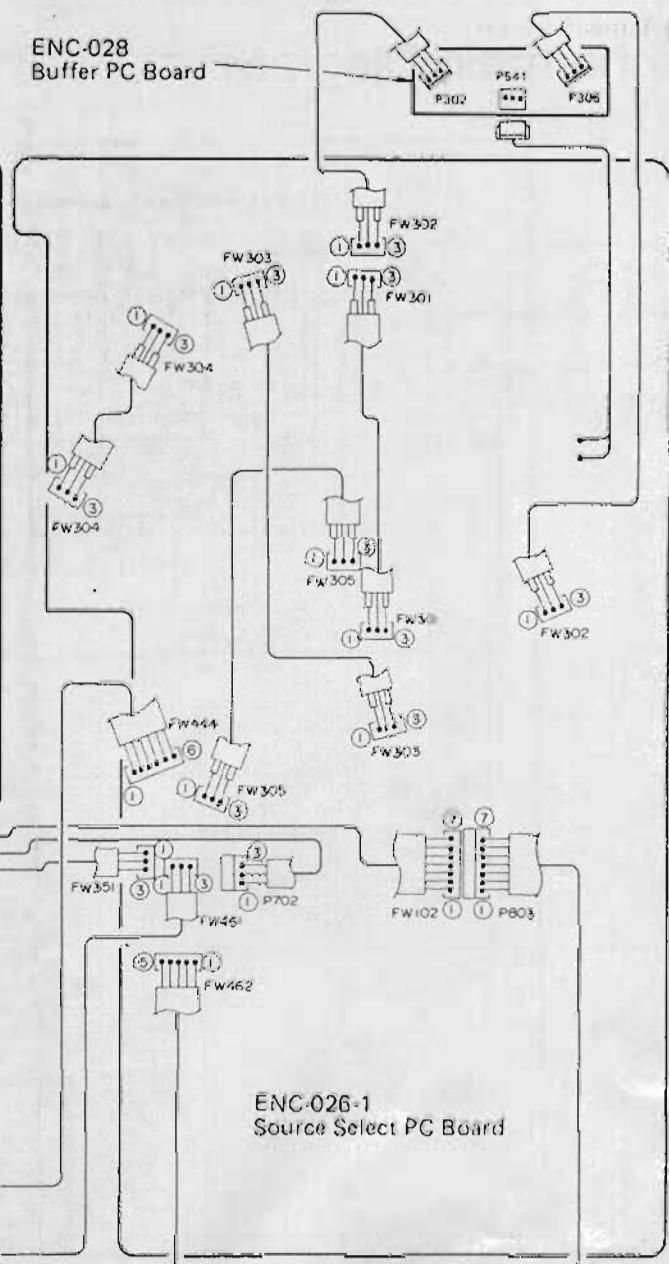ENA-049
Tuner PC BoardENC-028
Buffer PC BoardENB-035-4
Source and Tuner Switch PC Board

Schematic Diagram


(1) Tuner Section

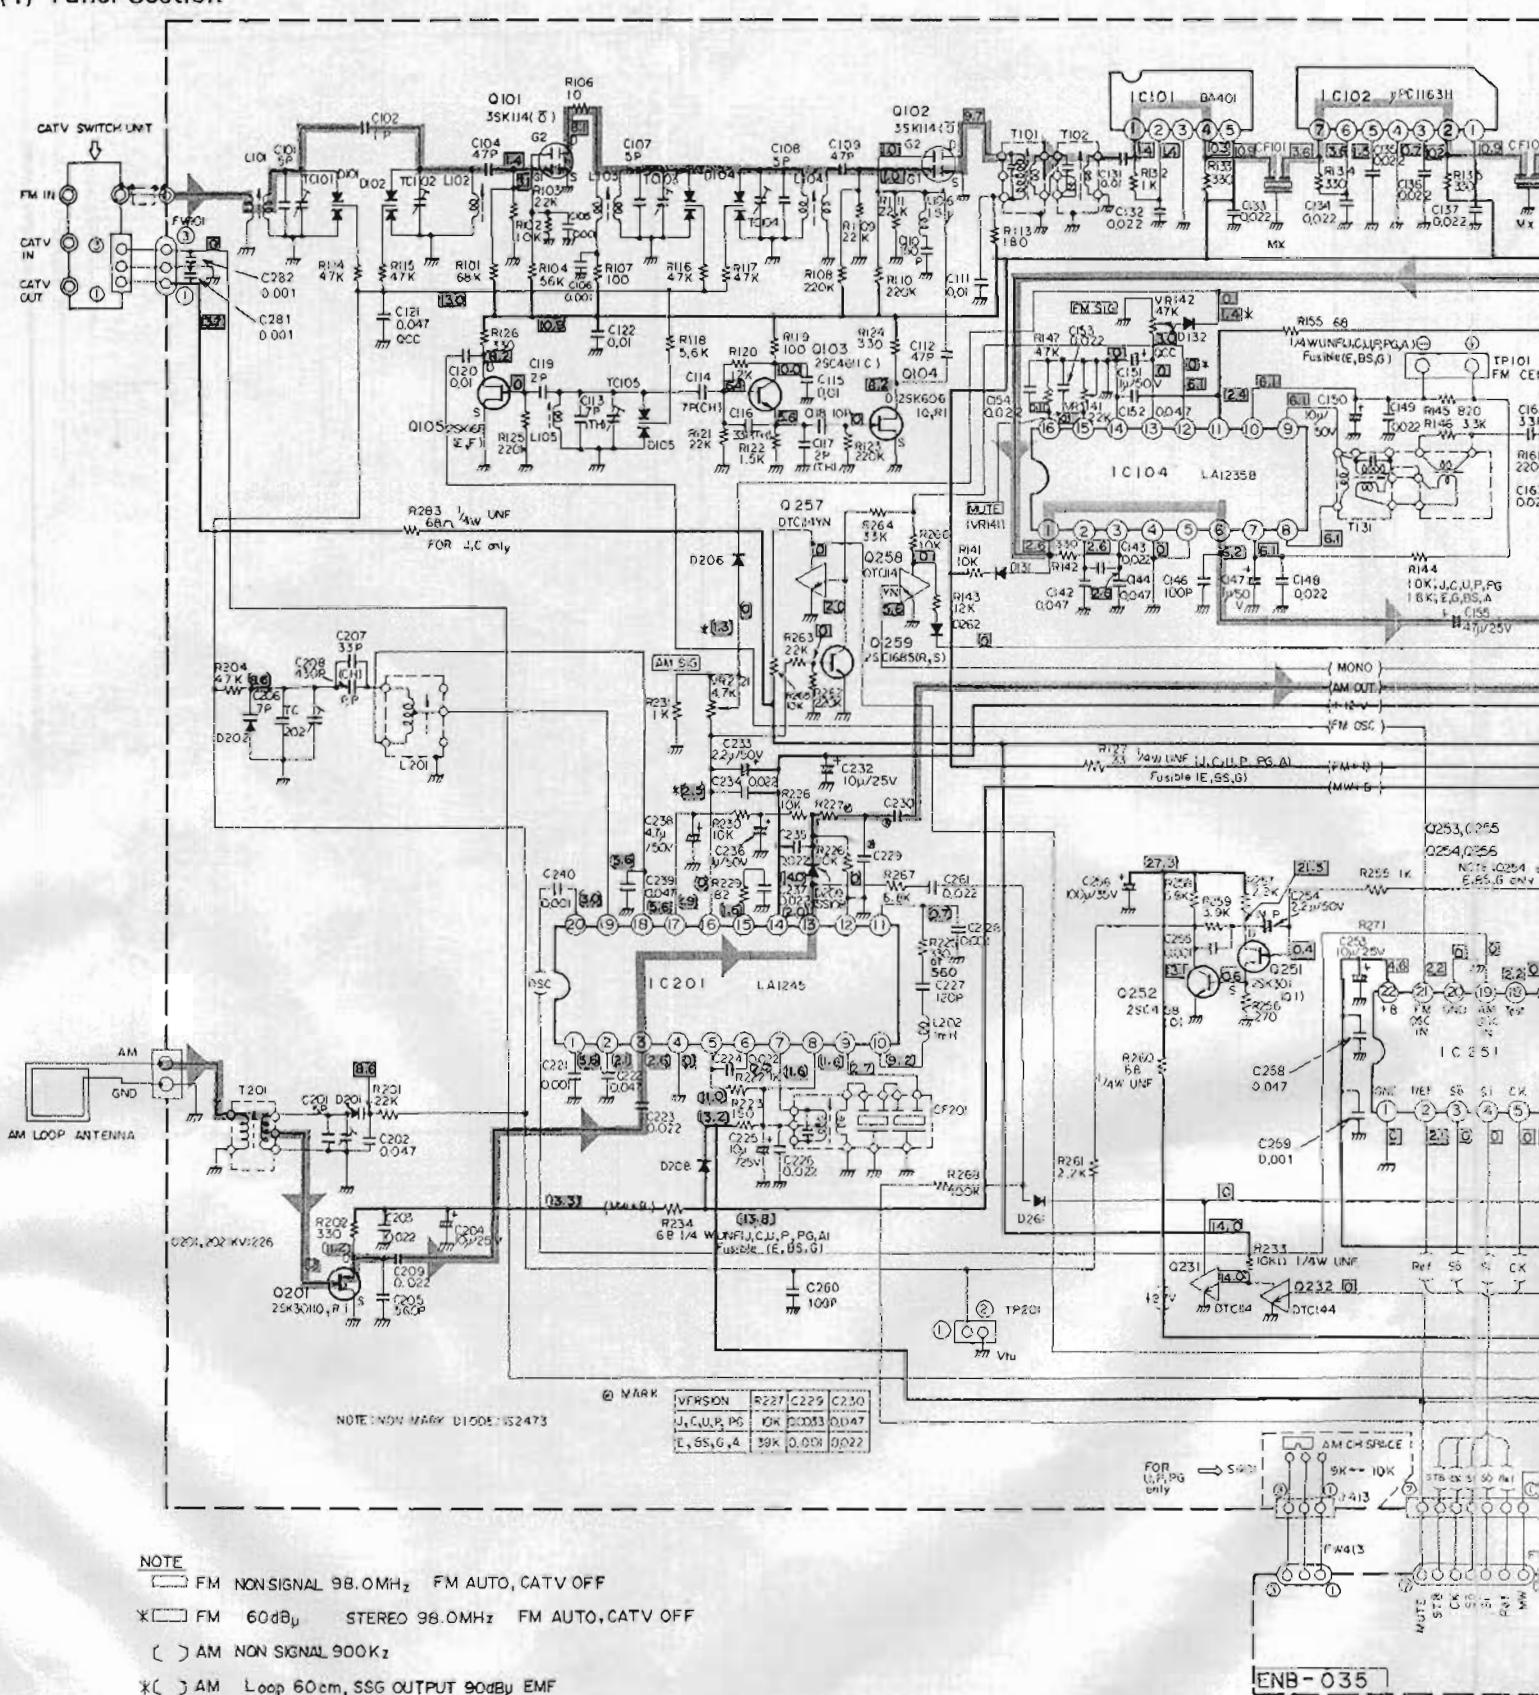
Notes:


- indicates positive B power supply.
- — indicates negative B power supply.
- █ indicates signal path.
- █ / █ shows DC voltage to the chassis with no signal input.


█ ... FM [█] ... AM

- When replacing the parts in the darkened area (█) and those marked with △, be sure to use the designated parts to ensure safety.
- This is the standard circuit diagram.
The design and contents are subject to change without notice.

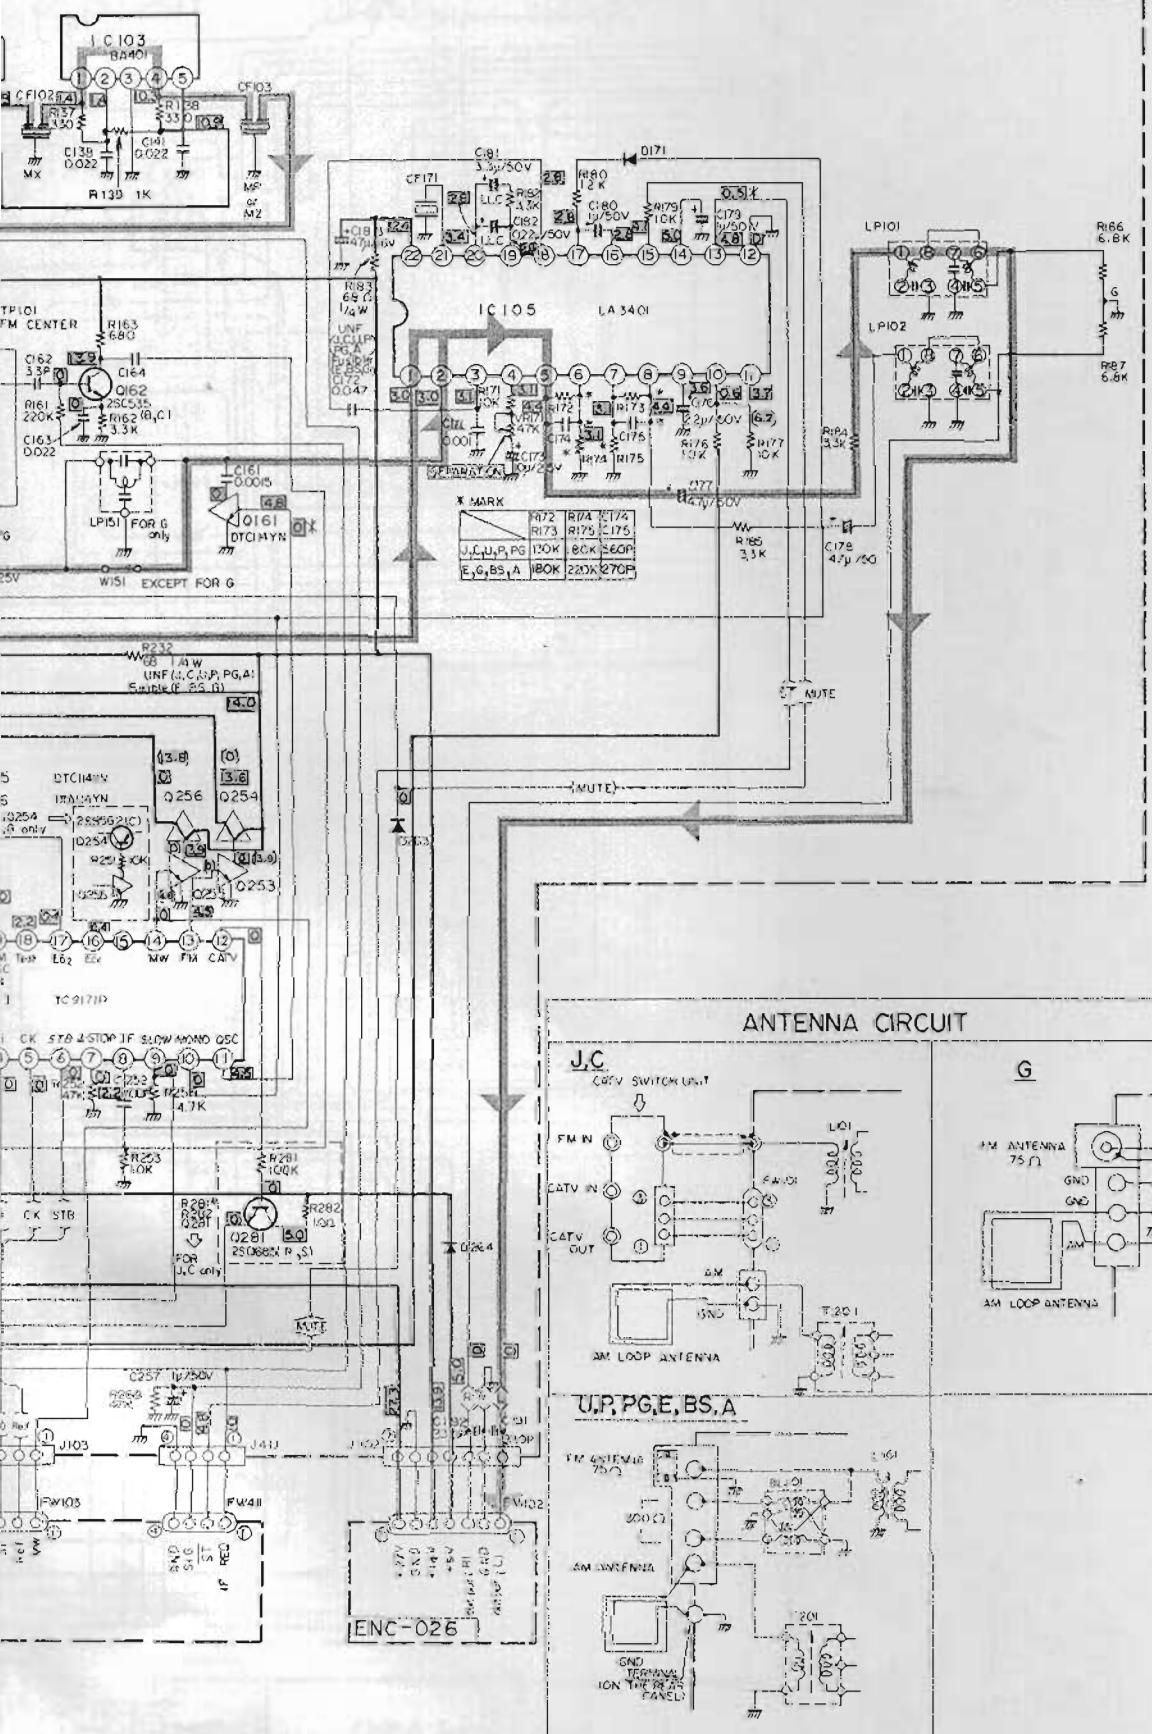


(2) Logic Section

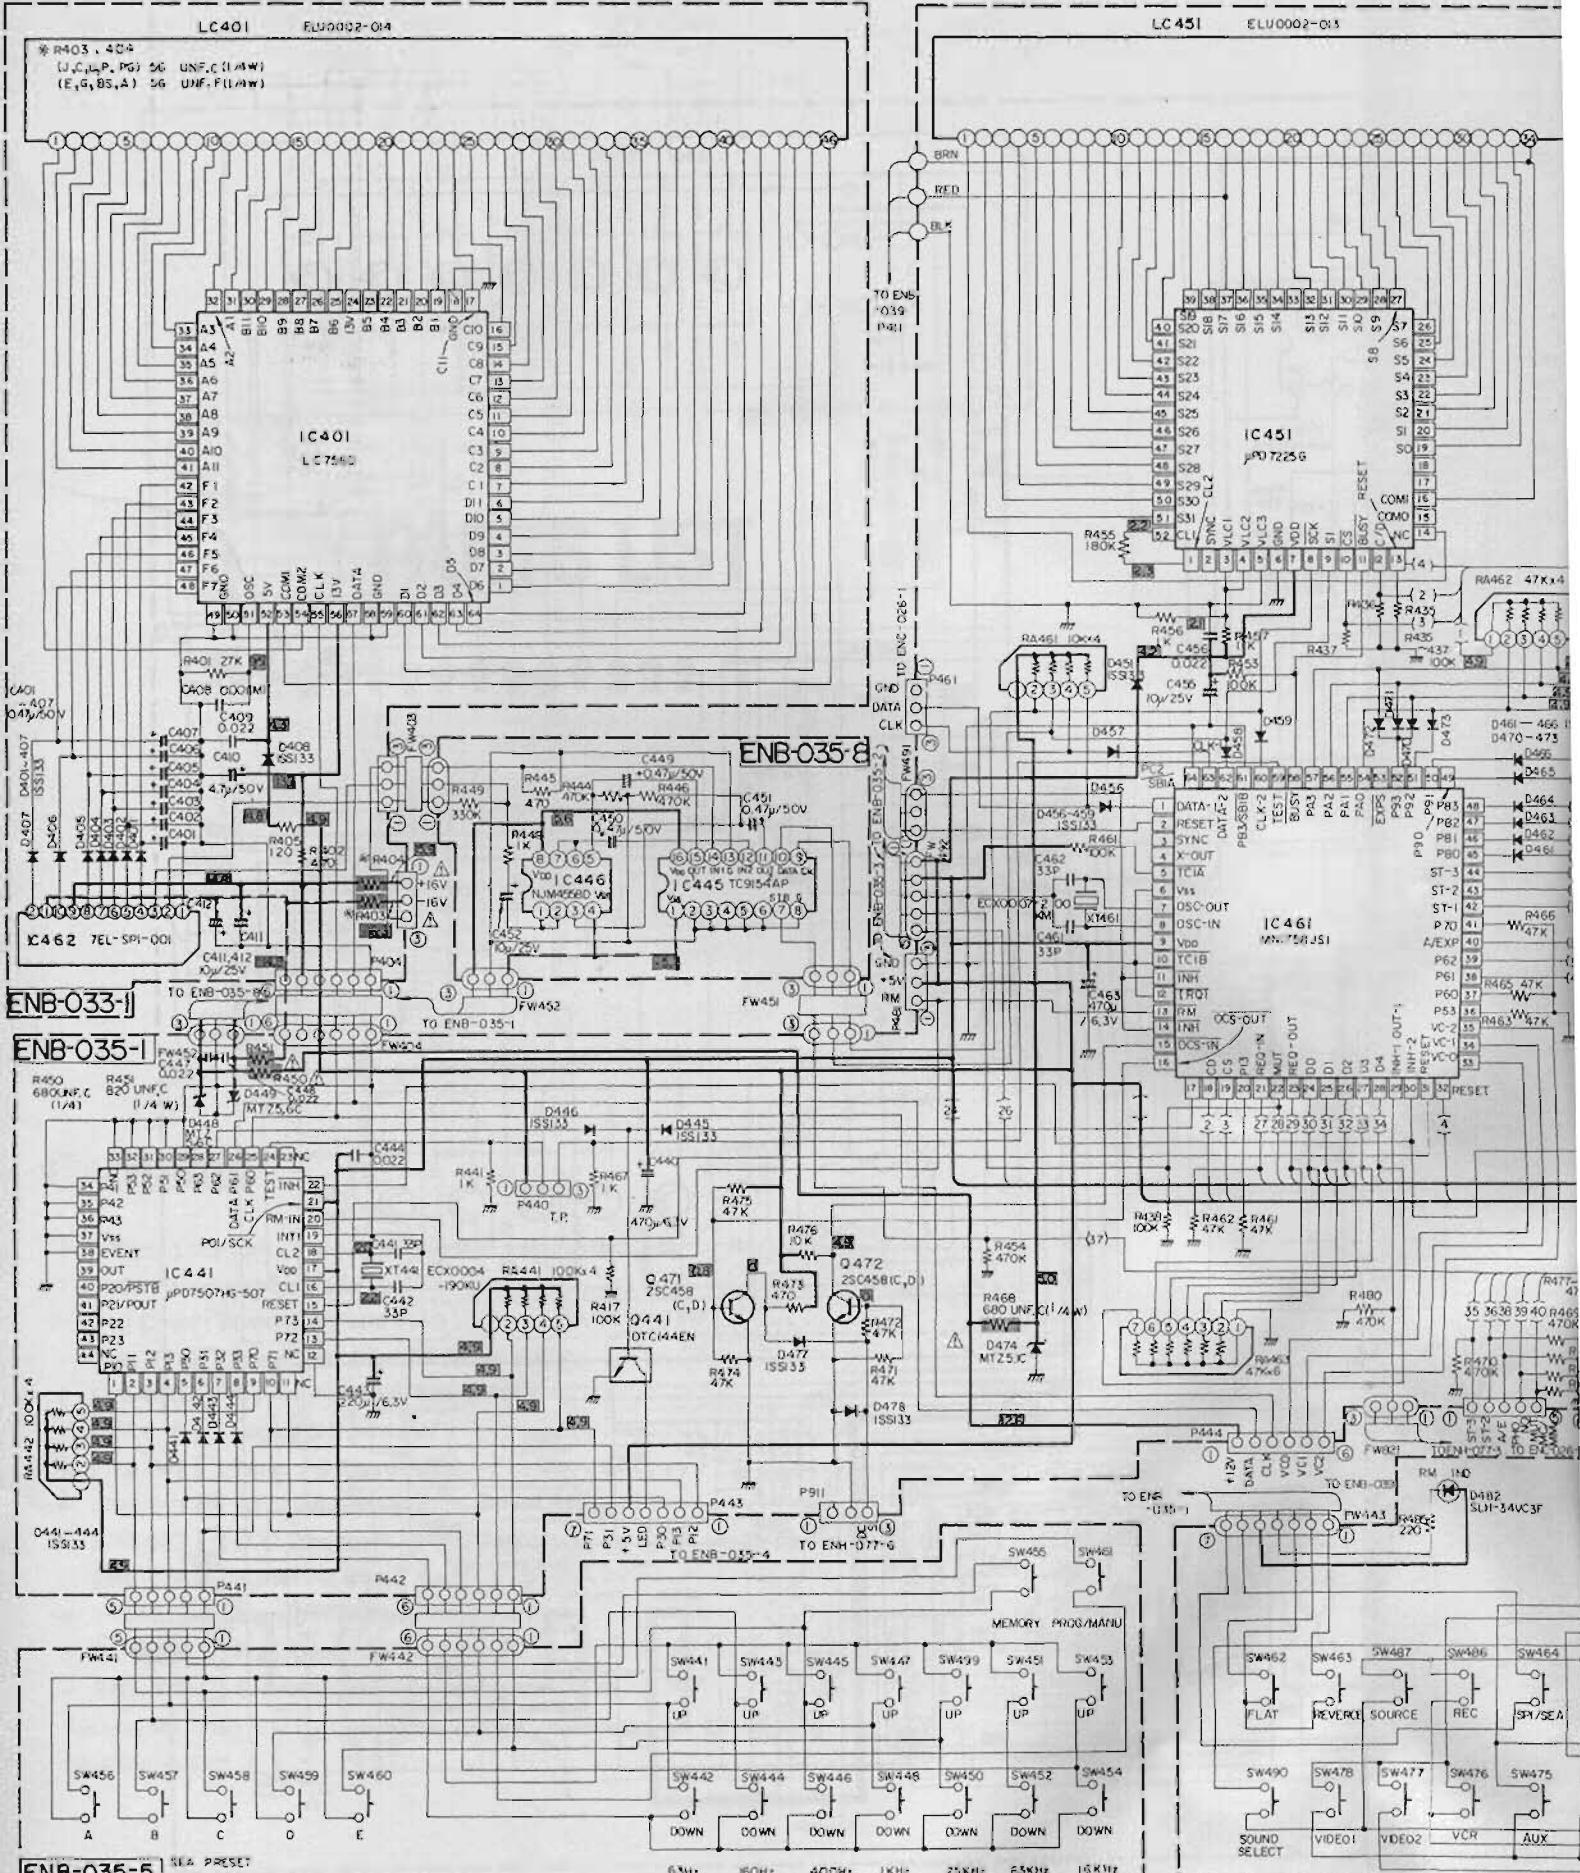

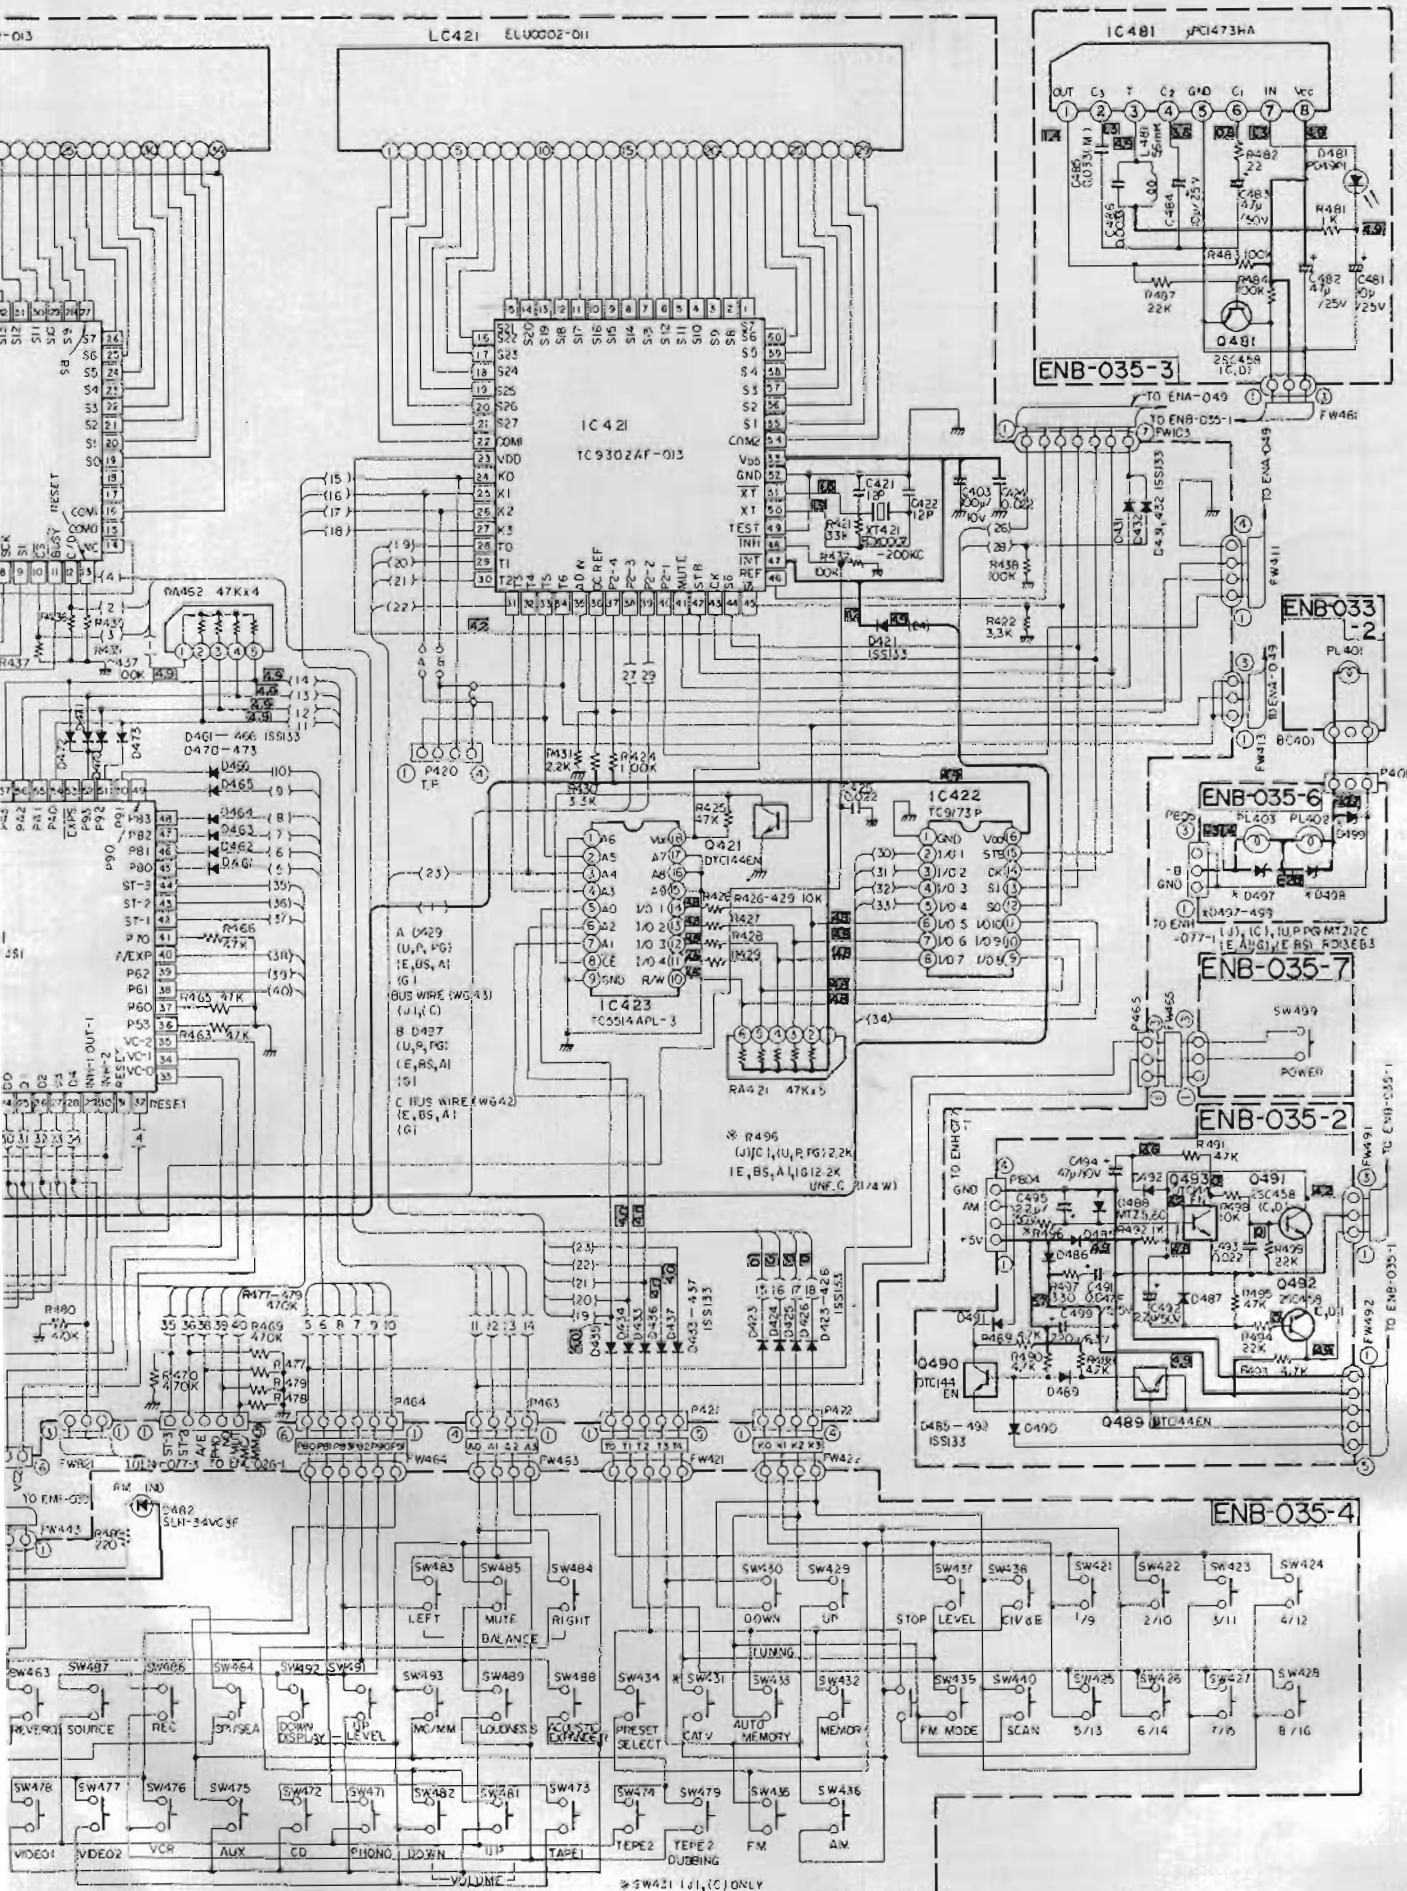


(3) Pre-Amplifier Section

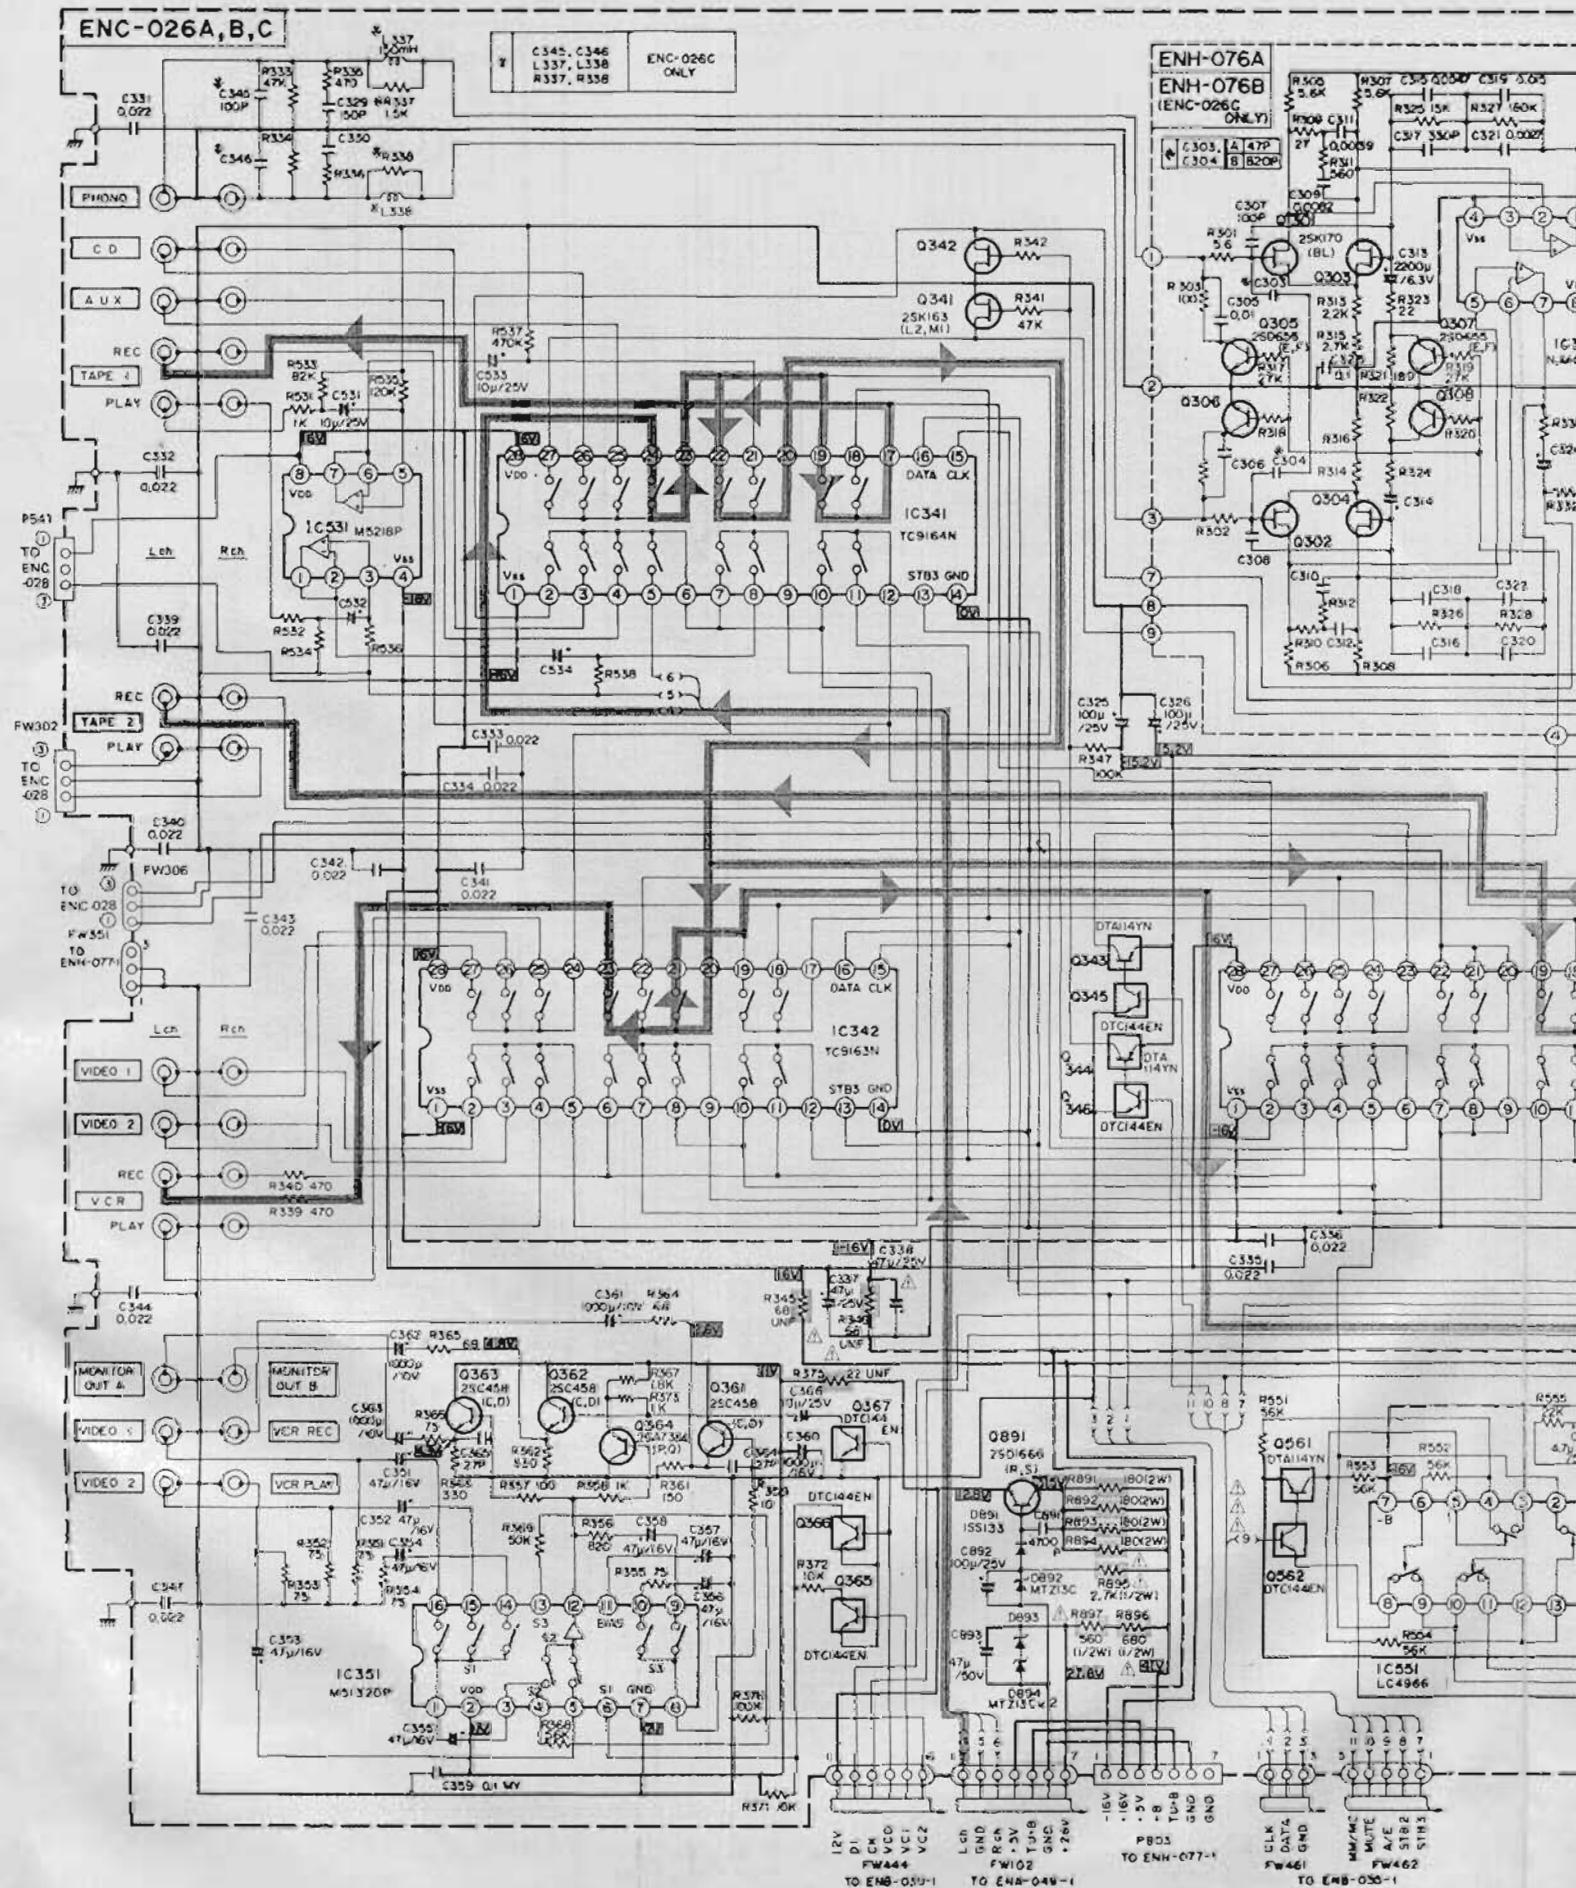

(No. 2912)

(No. 29)

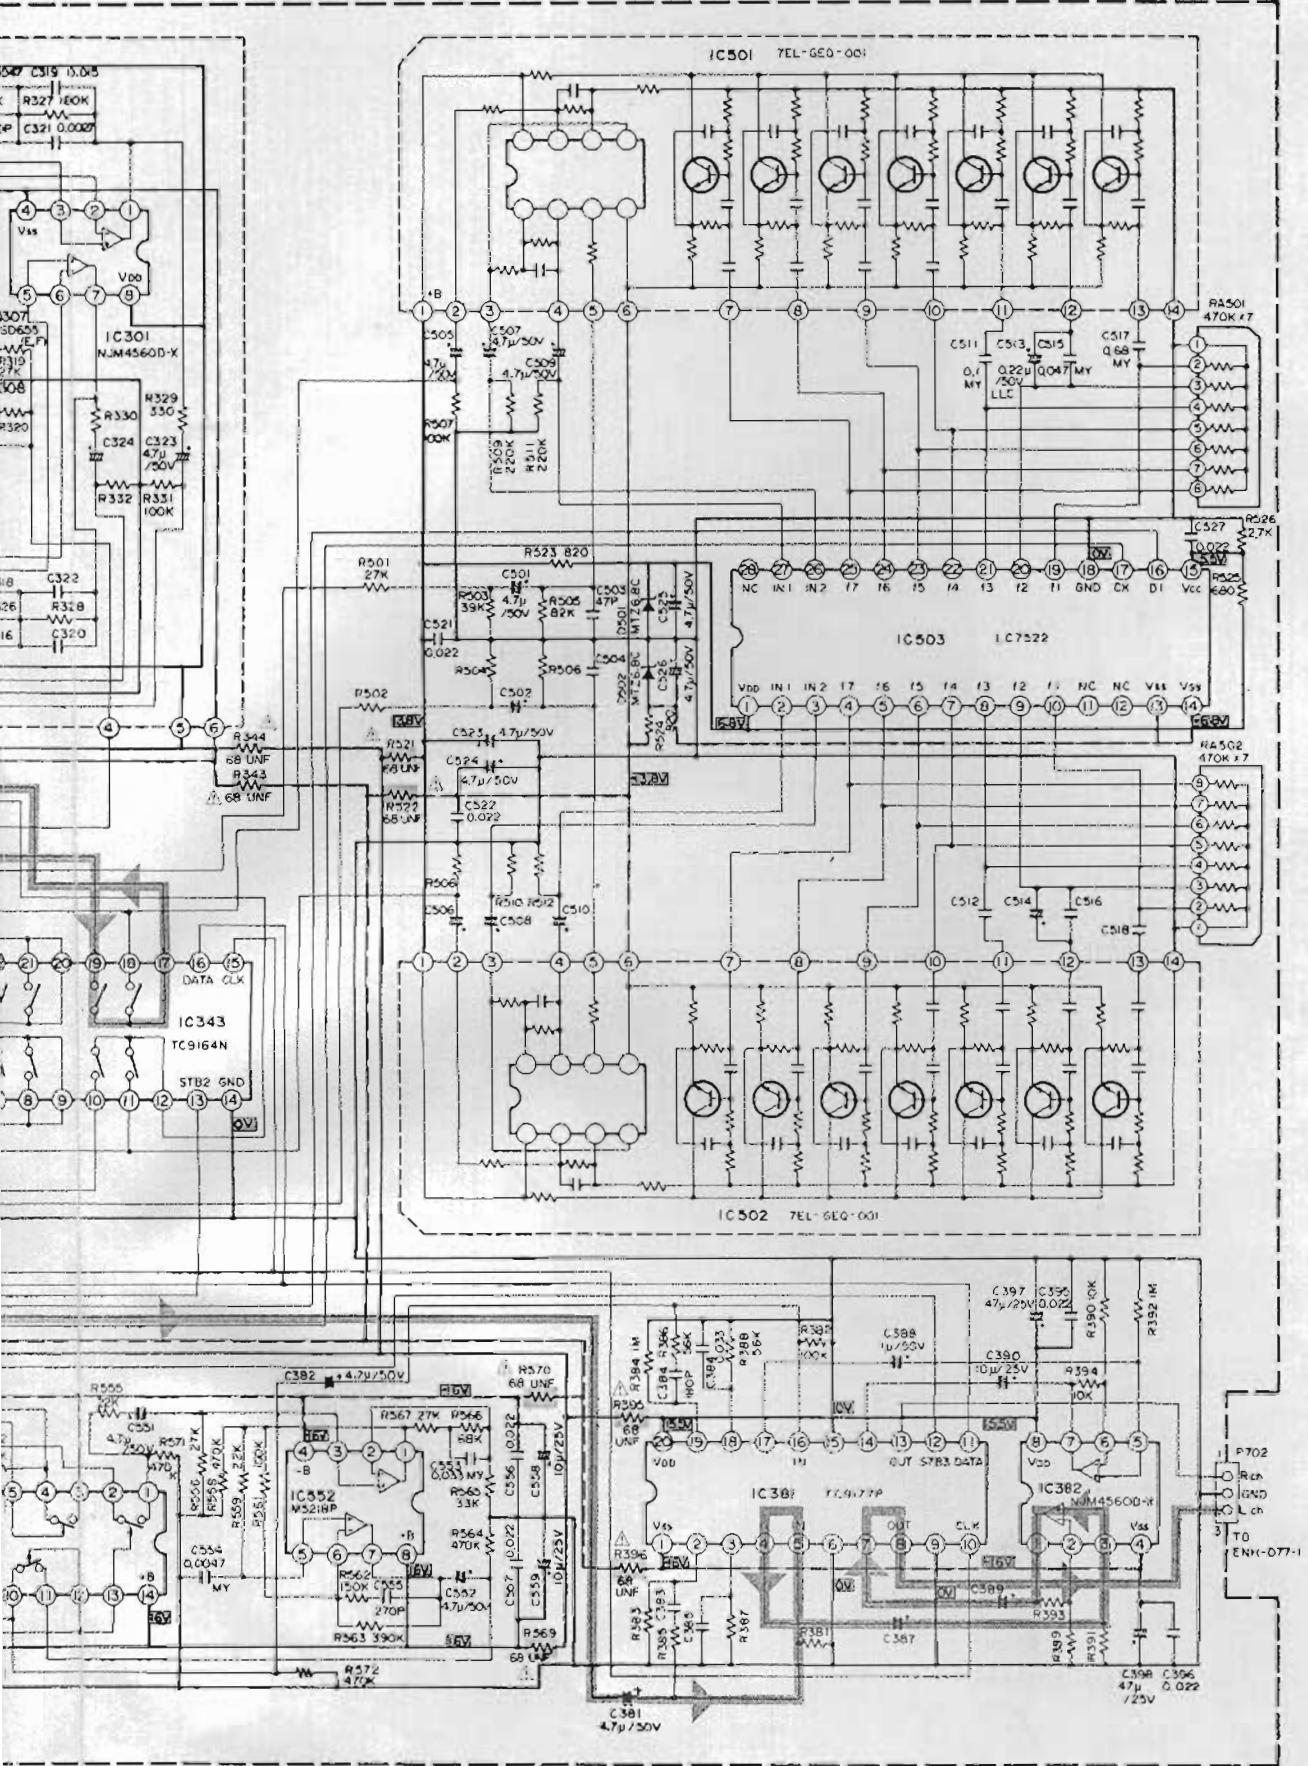

PARTS LIST

Contents

Main Parts Locations	2-2
Exploded View and Parts List	2-3
Printed Circuit Board Ass'y and Parts List	2-7
■ ENH-077 <input type="checkbox"/> Power Amplifier PC Board Ass'y	2-7
■ ENC-026 <input type="checkbox"/> Pre-Amplifier PC Board Ass'y	2-11
■ ENB-035 <input type="checkbox"/> Logic PC Board Ass'y	2-14
■ ENA-049 <input type="checkbox"/> Tuner PC Board Ass'y	2-17
■ ENH-071 <input checked="" type="checkbox"/> Switching Regulator PC Board Ass'y	2-20
■ ENB-033 <input type="checkbox"/> LCD Display PC Board Ass'y	2-21
■ ENC-028 <input checked="" type="checkbox"/> Buffer PC Board Ass'y	2-22
■ ENH-076 <input type="checkbox"/> Equalizer PC Board Ass'y	2-23
■ ENG-004 <input type="checkbox"/> Pre-Driver PC Board Ass'y	2-24
■ ENB-039 <input checked="" type="checkbox"/> Sub Control PC Board Ass'y	2-25
Packing Materials and Part Numbers	2-26
Accessories List	2-27

Printed Circuit Board Ass'y and Parts List


■ ENH-077□ Power Amplifier PC Board Ass'y

Note: ENH-077□ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENH-077 □ A	U.S.A.
ENH-077 □ B	Canada
ENH-077 □ C	U.S. Military Market & Other Countries

PC Board Ass'y	Designated Areas
ENH-077 □ D	Europe & Australia
ENH-077 □ E BS	U.K.
ENH-077 □ F	West Germany

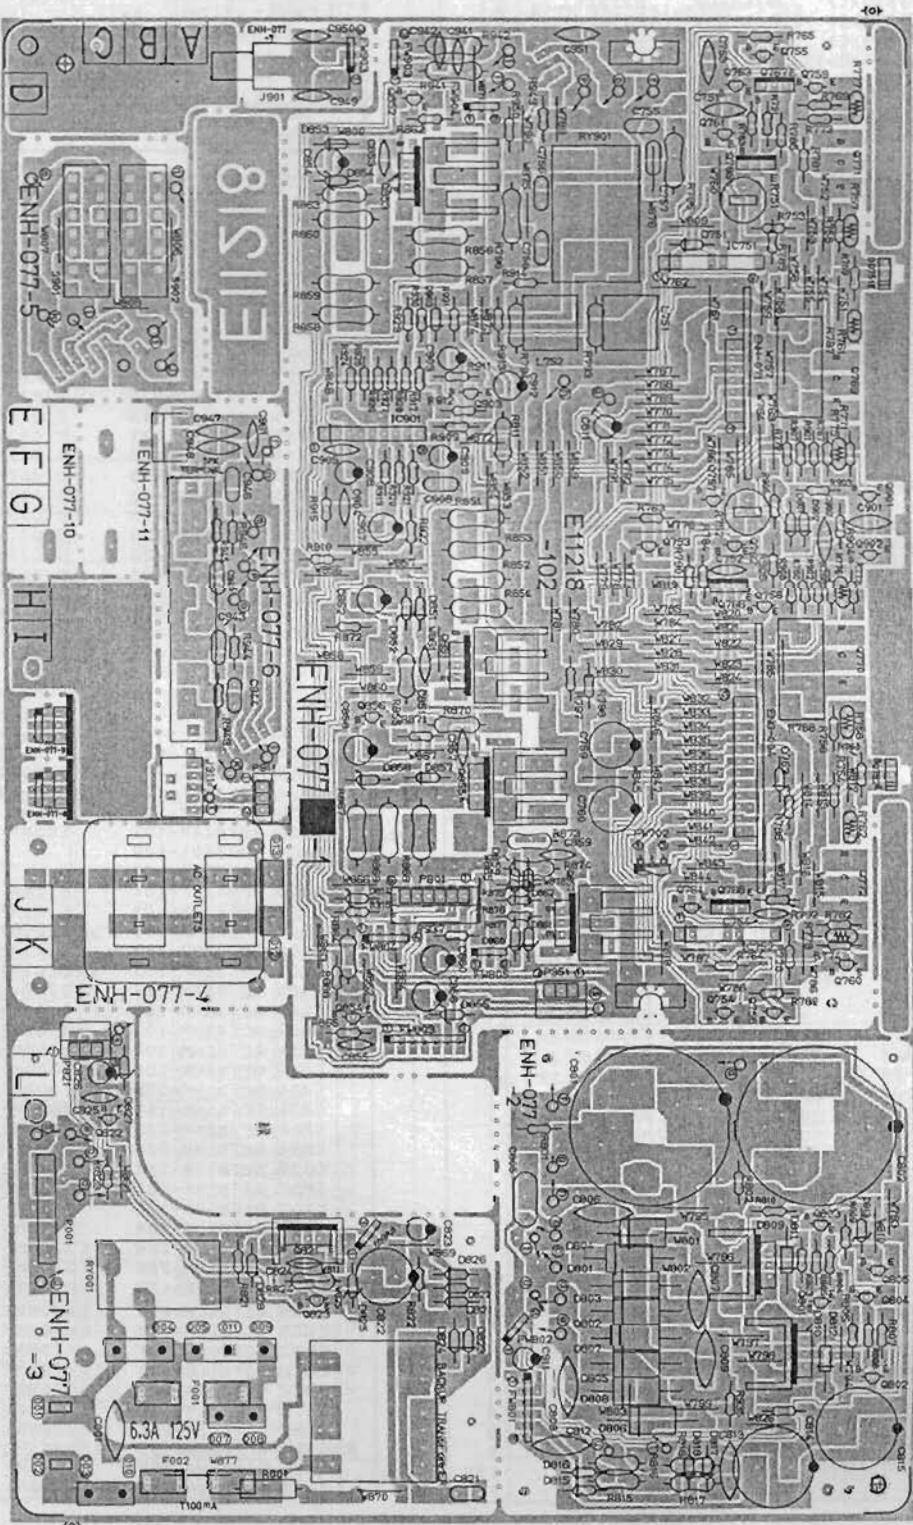


■ ENC-026 □ Pre-Amplifier PC Board Ass'y

Note: ENC-026 □ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENC-026 □ A	U.S.A., Canada U.S. Military Market & Other Countries
ENC-026 □ B	Europe, Australia & U.K.
ENC-026 □ C	West Germany

NOTE: To replace either C513 or C515, demount both capacitors and mount one QFV81HJ-274 (0.27 μ F, T.F. Capacitor).
The same procedure is required to replace C514 or C516.

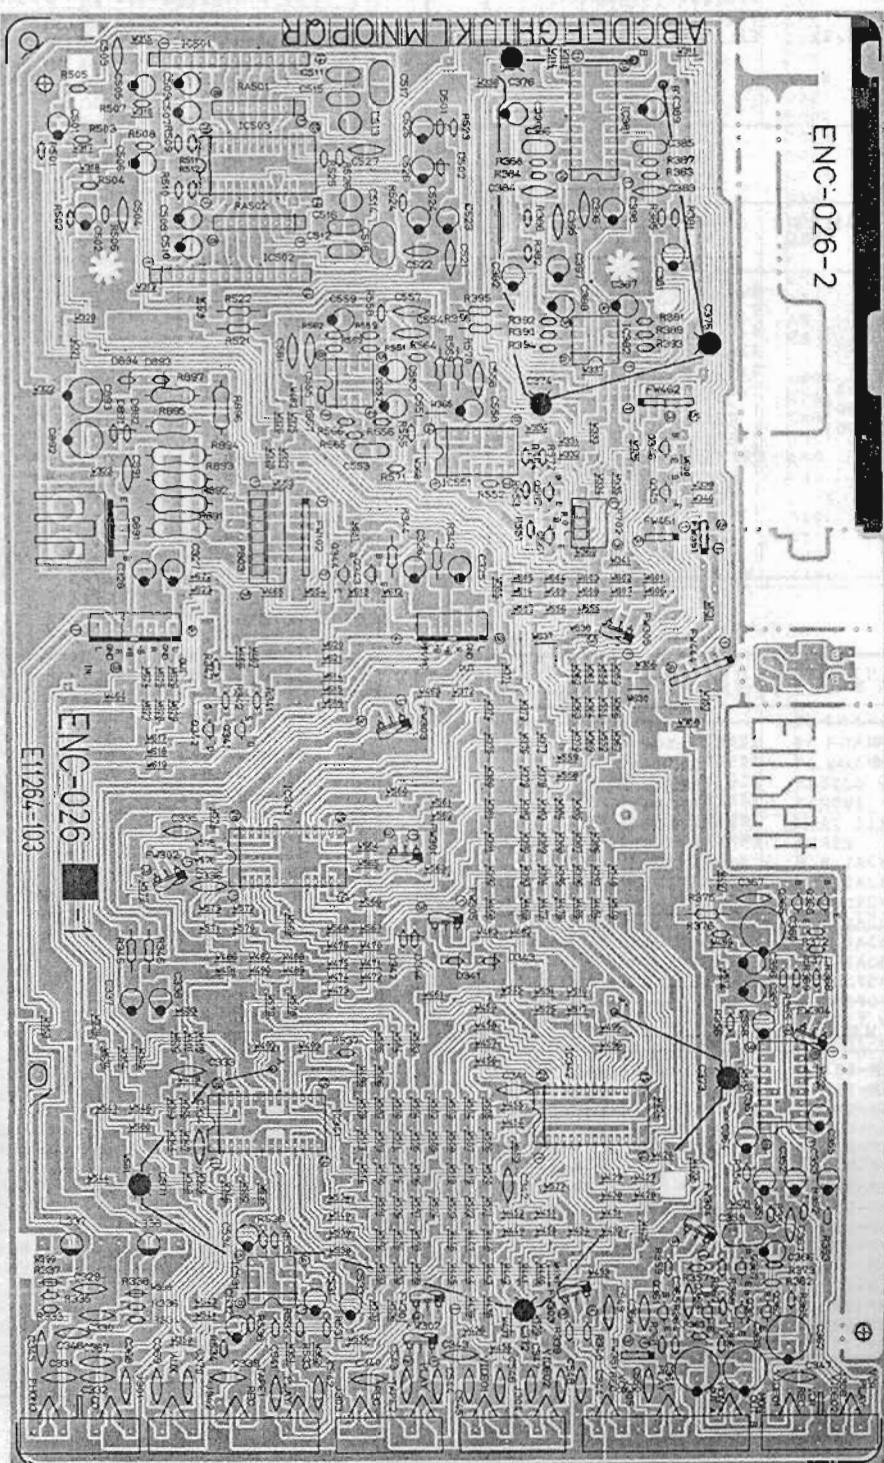


■ ENB-035 □ Logic PC Board Ass'y

Note: ENB-035 □ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Area
ENB-035 [F]	U.S.A.
ENB-035 [G]	Canada
ENB-035 [H]	U.S. Military Market & Other Countries

PC Board Ass'y	Designated Area
ENB-035 [I]	Europe, Australia & U.K.
ENB-035 [J]	West Germany

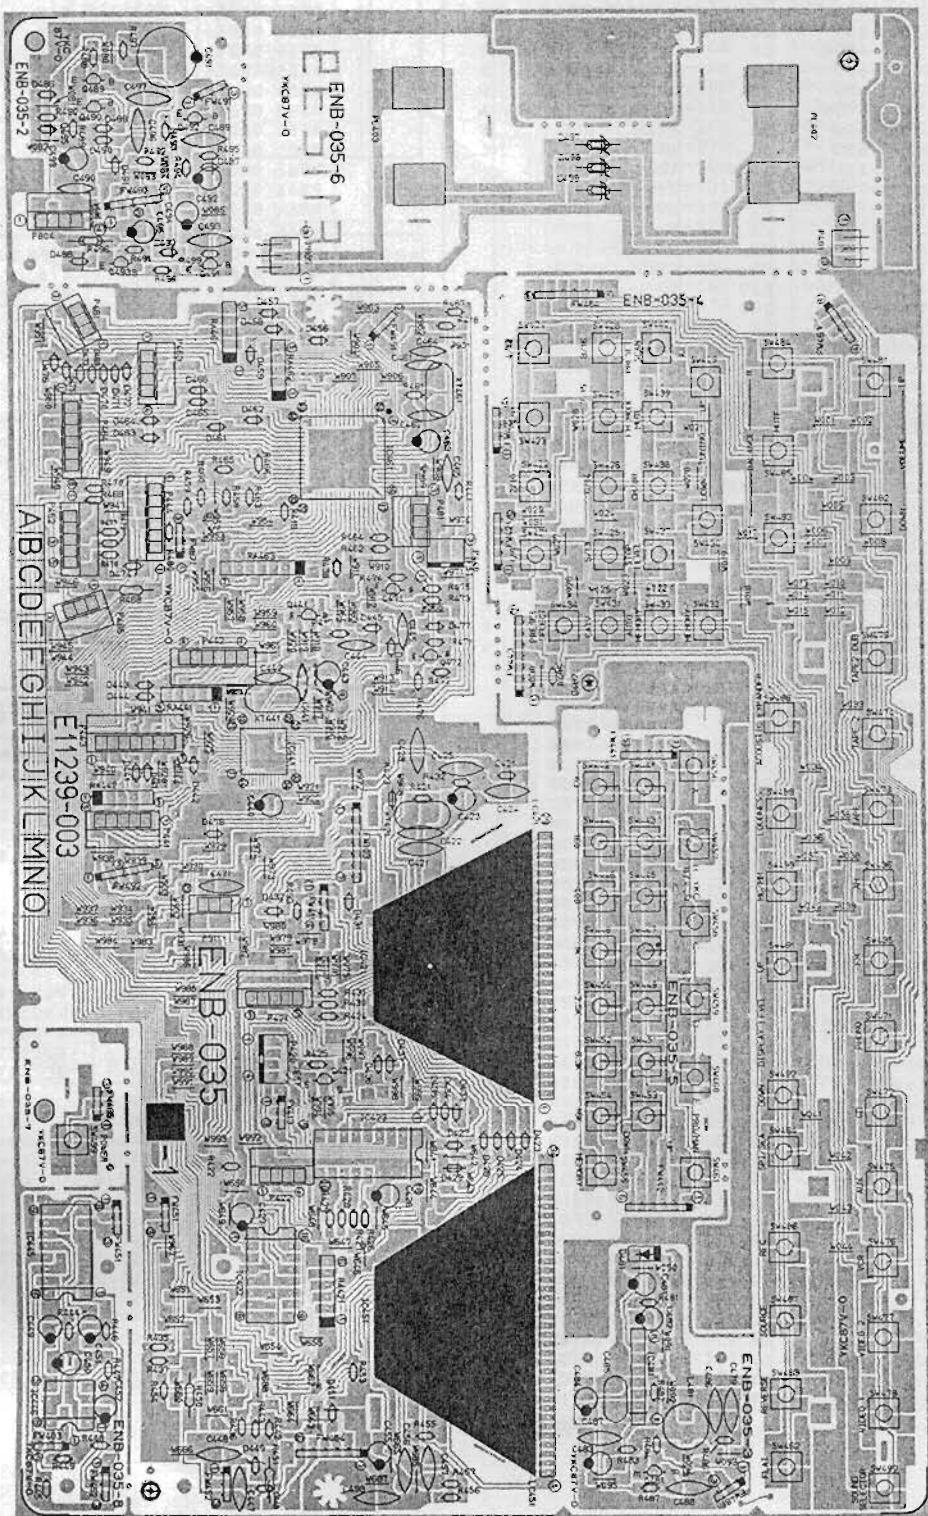


■ ENA-049 □ Tuner PC Board Ass'y

Note: ENA-049 □ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENA-049 [A]	U.S.A. & Canada
ENA-049 [C]	U.S. Military Market & Other Countries
ENA-049 [D]	Australia
ENA-049 [E]	Europe & U.K.
ENA-049 [F]	West Germany

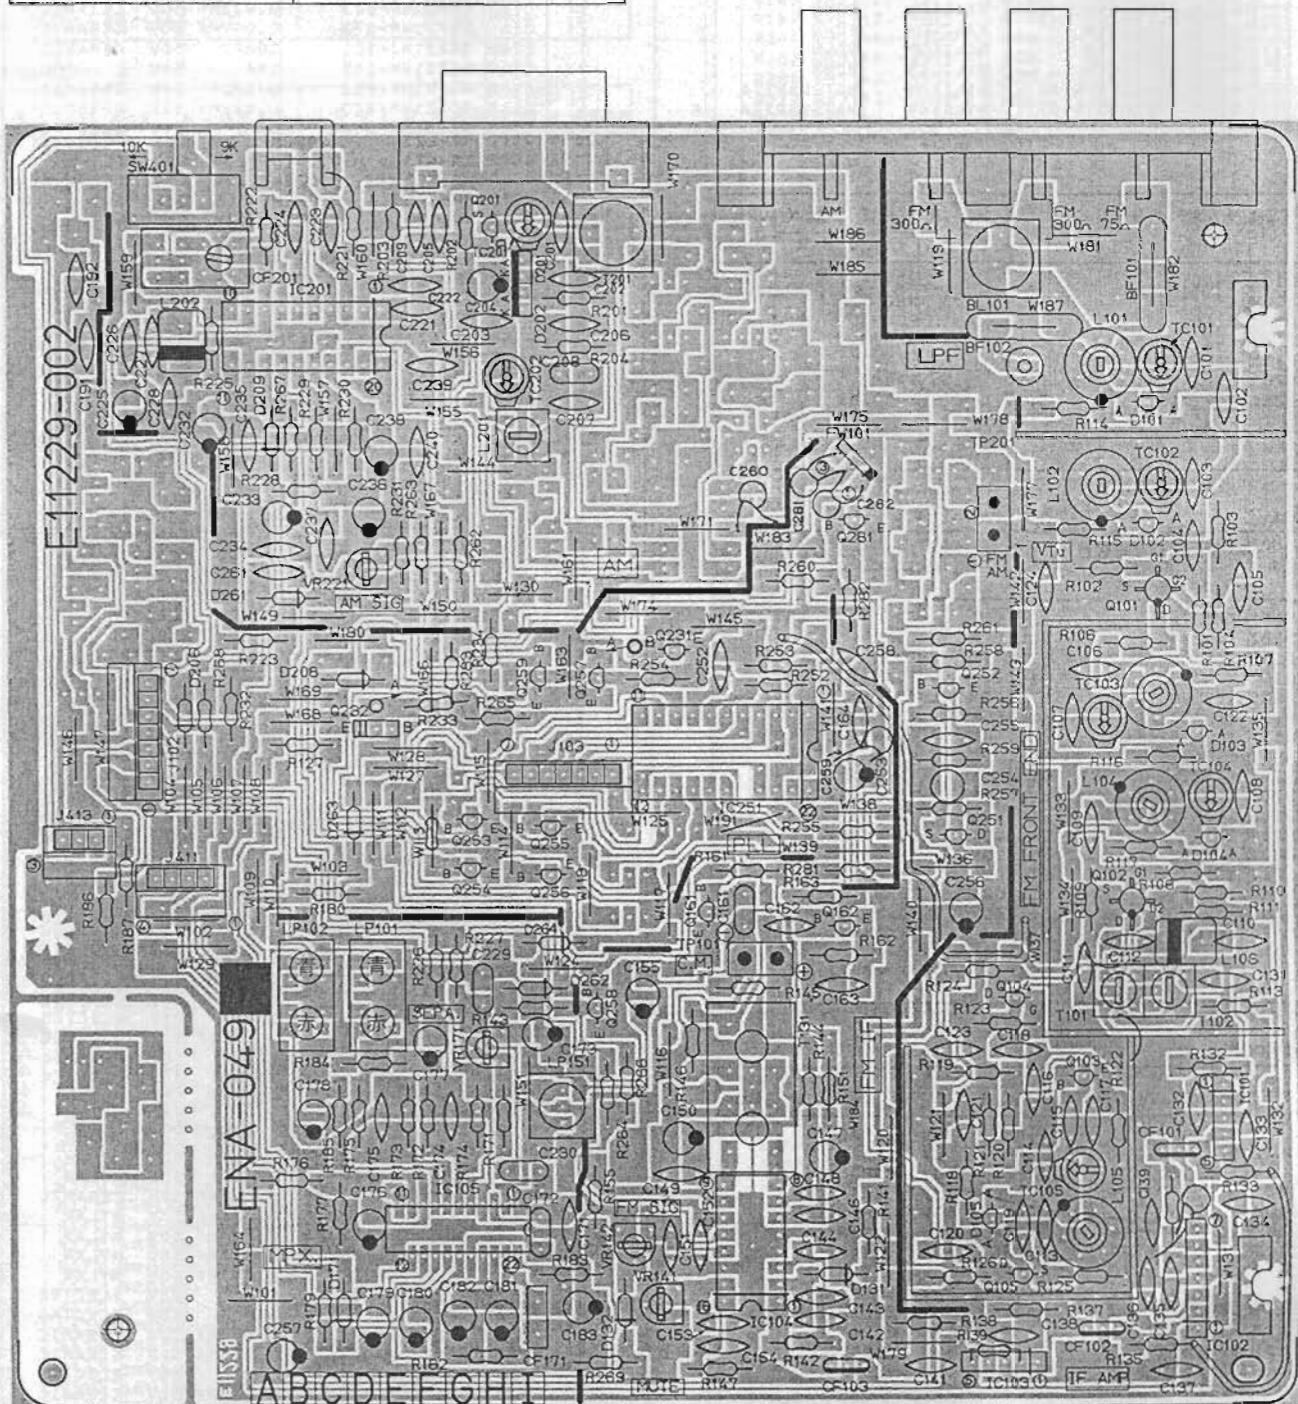

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C239	QCF21HP-473	0.047MF	50V CERAMIC
C240	QCF21HP-102	1000PF	50V CERAMIC
C252	QCS21HJ-101	100PF	50V CERAMIC
C253	QETB1EM-107	100MF	25V ELECTRO
C254	QEN51HM-225	2.2MF	50V NON POLE
C255	QCF21HP-102	1000PF	50V CERAMIC
C256	QETB1VM-107	100MF	35V ELECTRO
C257	QETB1HM-105	1MF	50V ELECTRO
C258	QCC21EM-473	0.047MF	25V CERAMIC
C259	QCF21HP-102	1000pF	50V CERAMIC
C260	QCS21HJ-102	100pF	50V CERAMIC
C261	QCF21HP-225	0.022MF	50V CERAMIC
C281	QCF21HP-102	1000pF	50V CERAMIC
C282	QCF21HP-102	1000pF	50V CERAMIC
TC101	ENZ1003-003		TRIMMER
TC102	ENZ1003-003		TRIMMER
TC103	ENZ1003-003		TRIMMER
TC104	ENZ1003-003		TRIMMER
TC105	ENZ1003-003		TRIMMER
TC201	ENZ1003-002		TRIMMER
TC202	ENZ1003-002		TRIMMER

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R174	GRD148J-224S	220K	1/4W CARBON
R174	GRD148J-224S	220K	1/4W CARBON
R175	GRD148J-184S	180K	1/4W CARBON
R175	GRD148J-184S	180K	1/4W CARBON
R175	GRD148J-224S	220K	1/4W CARBON
R175	GRD148J-224S	220K	1/4W CARBON
R176	GRD148J-103S	10K	1/4W CARBON
R177	GRD148J-103S	10K	1/4W CARBON
R179	GRD148J-103S	10K	1/4W CARBON
R180	GRD148J-123S	12K	1/4W CARBON
#182	GRD148J-332S	3.3K	1/4W CARBON
#183	GRD145J-680S	68	1/4W UNF. CARBON
#183	GRD145J-680S	68	1/4W UNF. CARBON
#183	GRD145J-680S	68	1/4W UNF. CARBON
#183	GRD145J-680S	68	1/4W FUSIBLE
#183	GRD145J-680S	68	1/4W FUSIBLE
R184	GRD148J-332S	3.3K	1/4W CARBON
R185	GRD148J-332S	3.3K	1/4W CARBON
R186	GRD148J-682S	6.8K	1/4W CARBON
R187	GRD148J-682S	6.8K	1/4W CARBON
R201	GRD148J-223S	22K	1/4W CARBON
R202	GRD148J-331S	330	1/4W CARBON
R204	GRD148J-473S	47K	1/4W CARBON
R222	GRD148J-102S	1K	1/4W CARBON
R223	GRD148J-151S	150	1/4W CARBON
R225	GRD148J-331S	330	1/4W CARBON
R225	GRD148J-561S	560	1/4W CARBON
R225	GRD148J-561S	560	1/4W CARBON
R225	GRD148J-561S	560	1/4W CARBON
R225	GRD148J-561S	560	1/4W CARBON
R226	GRD148J-103S	10K	1/4W CARBON
R227	GRD148J-103S	10K	1/4W CARBON
R227	GRD148J-103S	10K	1/4W CARBON
R227	GRD148J-393S	39K	1/4W CARBON
R227	GRD148J-393S	39K	1/4W CARBON
R228	GRD148J-103S	10K	1/4W CARBON
R229	GRD148J-820S	82	1/4W CARBON
R230	GRD148J-103S	10K	1/4W CARBON
R231	GRD148J-102S	1K	1/4W CARBON
#232	GRD145J-680S	68	1/4W UNF. CARBON
#232	GRD145J-680S	68	1/4W UNF. CARBON
#232	GRD145J-680S	68	1/4W UNF. CARBON
#232	GRD145J-680S	68	1/4W FUSIBLE
#232	GRD145J-680S	68	1/4W FUSIBLE
#233	GRD145J-103S	10K	1/4W UNF. CARBON
#234	GRD145J-680S	68	1/4W UNF. CARBON
#234	GRD145J-680S	68	1/4W UNF. CARBON
#234	GRD145J-680S	68	1/4W UNF. CARBON
#234	GRD145J-680S	68	1/4W UNF. CARBON
R234	GRD145J-680S	68	1/4W UNF. CARBON
R234	GRD145J-680S	68	1/4W FUSIBLE
R234	GRD145J-680S	68	1/4W FUSIBLE
R235	GRD148J-470S	47	1/4W CARBON
R251	GRD148J-103S	10K	1/4W CARBON
R251	GRD148J-103S	10K	1/4W CARBON
R252	GRD148J-473S	47K	1/4W CARBON
R253	GRD148J-103S	10K	1/4W CARBON
R254	GRD148J-472S	4.7K	1/4W CARBON
R255	GRD148J-102S	1K	1/4W CARBON
R256	GRD148J-271S	270	1/4W CARBON
R257	GRD148J-222S	2.2K	1/4W CARBON
R258	GRD148J-682S	6.8K	1/4W CARBON
R259	GRD148J-392S	3.9K	1/4W CARBON
R260	GRD145J-680S	68	1/4W UNF. CARBON
R260	GRD145J-680S	68	1/4W UNF. CARBON
R260	GRD145J-680S	68	1/4W UNF. CARBON
R260	GRD145J-680S	68	1/4W FUSIBLE
R260	GRD145J-680S	68	1/4W FUSIBLE
R261	GRD148J-222S	2.2K	1/4W CARBON
R262	GRD148J-224S	220K	1/4W CARBON
R263	GRD148J-223S	22K	1/4W CARBON
R264	GRD148J-333S	33K	1/4W CARBON
R265	GRD148J-103S	10K	1/4W CARBON
R266	GRD148J-103S	10K	1/4W CARBON
R267	GRD148J-682S	6.8K	1/4W CARBON
R268	GRD148J-104S	10K	1/4W CARBON
R269	GRD148J-473S	47K	1/4W CARBON
R281	GRD148J-103S	10K	1/4W CARBON
R282	GRD148J-102S	100	1/4W CARBON
R283	GRD145J-680S	68	1/4W UNF. CARBON
VR141	QV23518-223		VARIABLE
VR142	QV23518-473		VARIABLE
VR171	QV23518-473		VARIABLE
VR221	QV23518-472		VARIABLE

△ Safety parts

△ Safety Parts


Others

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
		EMB01YY-401K	ANT. TERMINAL	C
		EMB01YY-401K	ANT. TERMINAL	E
		EMB01YY-401K	ANT. TERMINAL	F
		EMB01YY-402K	ANT. TERMINAL	A
		EMB10YY-201K	ANT. TERMINAL	A
		EWPG01-101	CORD ASSY	A
		E11229-003	CIRCUIT BOARD	
		E304173-001	SHIELD CASE	
		E67883-001	SHIELD PLATE	
		E70225-002	EARTH PLATE	
		E70859-001	EARTH PLATE	
		E72108-001	SHIELD CASE	
J102		EMV7112-007	SOCKET WIRE	
J103		EMV7112-007	SOCKET WIRE	
J411		EMV7112-004	SOCKET WIRE	
J413		EMV7112-003	SOCKET WIRE	
L101		EQR2304-016	RF COIL	C
L102		EQR2304-015	RF COIL	
L103		EQR2304-013	RF COIL	
L104		EQR2304-013	RF COIL	
L105		EQR2404-004	RF COIL	
L106		EQL3001-1RSKY	INDUCTOR	
L201		EQR1207-009	RF COIL	
L202		EQL3001-102KY	INDUCTOR	
T101		EQT2121-006	I.F. TRANSFORMER	

Others

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
		T102	I.F. TRANSFORMER	
		T131	I.F. TRANSFORMER	
		T201	RF COIL	
		BL101	BALUN	C
		BL101	BALUN	E
		BL101	BALUN	D
		CF101	CERAMIC FILTER	
		CF102	CERAMIC FILTER	
		CF103	CERAMIC FILTER	
		CF103	CERAMIC FILTER	
		CF103	CERAMIC FILTER	
		CF103	CERAMIC FILTER	
		CF103	CERAMIC FILTER	
		CF171	RESONATOR	
		CF201	ECX0000-456KR	
		LP101	FILTER	
		LP102	FILTER	
		LP151	FILTER	
		SW401	SLIDE SWITCH	F
		TP101	TERMINAL ASSY	C
		TP201	TERMINAL ASSY	

■ ENH-071 □ Switching Regulator PC Board Ass'y

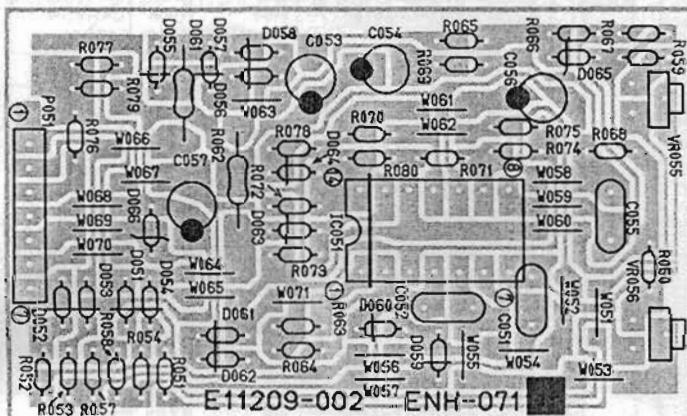

ICs

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
			MAKER	
	IC051	AN6912	I.C.	MATSUSHITA

Diodes

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
			MAKER	
	D051	ISS133	SILICON	ROHM
	D052	ISS133	SILICON	ROHM
	D053	ISS133	SILICON	ROHM
	D054	ISS133	SILICON	ROHM
	D055	ISS147	SILICON	ROHM
	D056	ISS147	SILICON	ROHM
	D057	ISS147	SILICON	ROHM
	D058	ISS147	SILICON	ROHM
	D059	ISS133	SILICON	ROHM
	D060	ISS133	SILICON	ROHM
	D061	ISS133	SILICON	ROHM
	D062	ISS133	SILICON	ROHM
	D063	ISS133	SILICON	ROHM
	D064	ISS133	SILICON	ROHM
	D065	MTZ21C	ZENER	ROHM
	D066	MTZ2SC	ZENER	ROHM

△ Safety parts

Others


▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	P051	E11209-002 EMVS101-007B	CIRCUIT BOARD PLUG ASSY	

■ ENB-033□ LCD Display PC Board Ass'y

Note: ENB-033□ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENB-033 [E]	U.S.A., Canada, U.S. Military Market & Other Countries
ENB-033 [F]	Europe, Australia, U.K. & West Germany

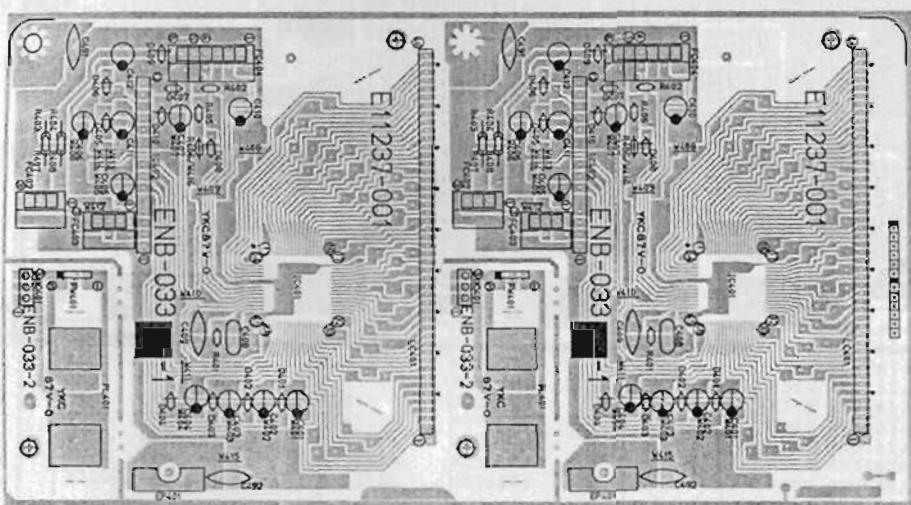

ICs

△ ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
IC401	LC7560	I.C.	SANYO
IC402	7EL-SPI-001	I.C.	E
IC402	7EL-SPI-002	I.C.	F

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C411	GETB1EM-106	26MF 25V ELECTRO	
C412	GETB1EM-106	26MF 25V ELECTRO	

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
D401	1SS133	SILICON ROHM	
D402	1SS133	SILICON ROHM	
D403	1SS133	SILICON ROHM	
D404	1SS133	SILICON ROHM	
D405	1SS133	SILICON ROHM	
D406	2SS133	SILICON ROHM	
D407	1SS133	SILICON ROHM	
D408	1SS133	SILICON ROHM	

Resistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
R401	GR3161J-273	27K 1/6W CARBON	
R402	GR3161J-471	470 1/6W CARBON	
△ R403	GRZ0062-560	56 1/4W FUSIBLE	F
△ R404	GR3145J-560S	56 3/3W UNP. CARBON	E
△ R404	ORZ0062-560	56 1/4W FUSIBLE	F
R405	GR0161J-121	120 1/6W CARBON	

△ Safety parts


Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C401	GETB1HM-474	0.47MF 50V ELECTRO	
C402	GETB1HM-474	0.47MF 50V ELECTRO	
C403	GETB1HM-474	0.47MF 50V ELECTRO	
C404	GETB1HM-474	0.47MF 50V ELECTRO	
C405	GETB1HM-474	0.47MF 50V ELECTRO	
C406	GETB1HM-474	0.47MF 50V ELECTRO	
C407	GETB1HM-474	0.47MF 50V ELECTRO	
C408	GFVB100U-1C0	0.01MF 50V MYLAR	
C409	QCF21HF-223	0.022MF 50V CERAMIC	
C410	QRTB1HM-475	4.7MF 50V ELECTRO	

Others

△ ITEM	PART NUMBER	DESCRIPTION	AREA
	E11237-001	CIRCUIT BOARD	
	E45524-002	FUSE CLIP	
FC402	EMV7112-003	SOCKET WIRE	
FC403	EMV7112-003	SOCKET WIRE	
FC404	EM7112-006	SOCKET WIRE	
LL401	ELJ0002-014	F-1 TUBE	

■ ENC-028 [A] Buffer PC Board Ass'y

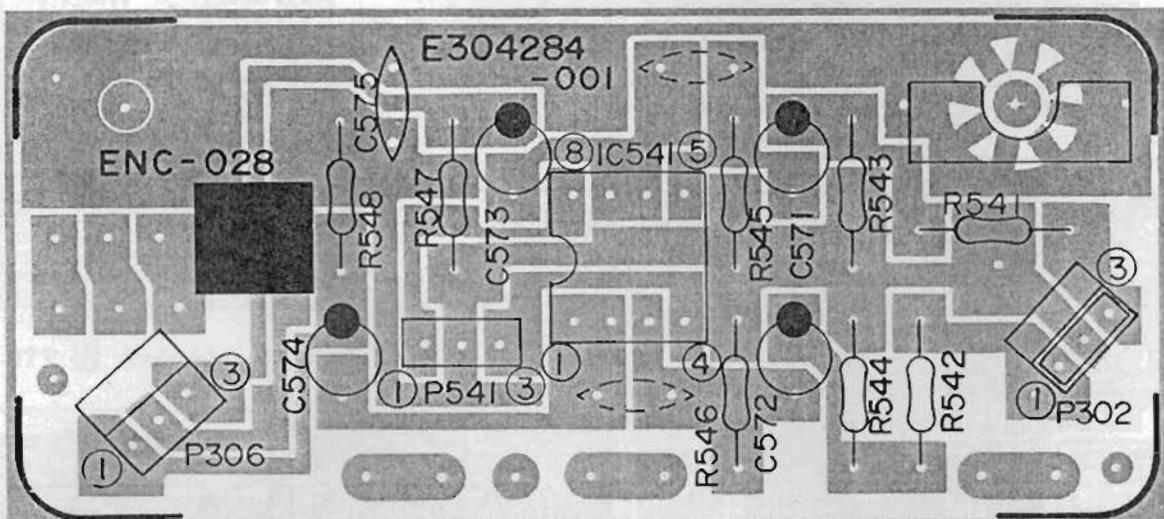

I.C.S.

△	ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER		
	IC541	NJM4558D-D			

Others

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	P302	E304284-001	CIRCUIT BOARD	
	P306	EMV7112-003	SOCKET	
	P541	EMV7112-003	SOCKET	
		QMV5005-003K	JP PLUG ASS'Y	
		E70859-001	EARTH PLATE	

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION			AREA
	C571	QETB1EM-106	10MF	25V	ELECTRO	
	C572	QETB1EM-106	10MF	25V	ELECTRO	
	C573	QETB1EM-106	10MF	25V	ELECTRO	
	C574	QETB1EM-106	10MF	25V	ELECTRO	
	C575	QCF21HP-223	0.022MF	50V	CERAMIC	

Resistors


△	ITEM	PART NUMBER	DESCRIPTION			AREA
	R541	GRD148J-102S	1K	1/4W	CARBON	
	R542	GRD148J-102S	1K	1/4W	CARBON	
	R543	GRD148J-823S	82K	1/4W	CARBON	
	R544	GRD148J-823S	82K	1/4W	CARBON	
	R545	GRD148J-124S	120K	1/4W	CARBON	
	R546	GRD148J-124S	120K	1/4W	CARBON	
	R547	GRD148J-474S	470K	1/4W	CARBON	
	R548	GRD148J-474S	470K	1/4W	CARBON	

■ ENH-076 □ Equalizer PC Board Ass'y

Note: ENH-076 □ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENH-076 □ A	U.S.A., Canada, Europe, Australia, U.K., U.S. Military Market & Other Countries
ENH-076 □ B	West Germany

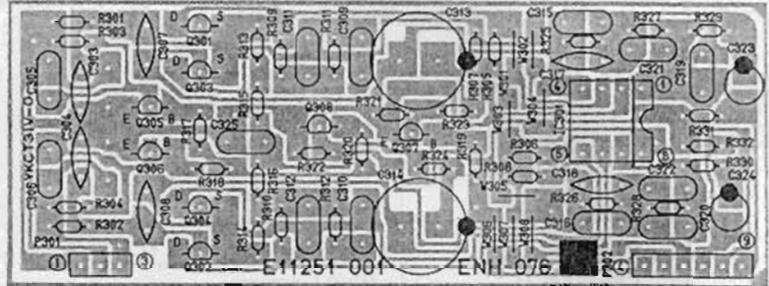

Transistors

▲	ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
	G301	2SK170(BL)	F.E.T	TOSHIBA	
	G302	2SK170(BL)	F.E.T	TOSHIBA	
	G303	2SK170(BL)	F.E.T	TOSHIBA	
	G304	2SK170(BL)	F.E.T	TOSHIBA	
	G305	2SD655(E,F)	SILICON	HITACHI	
	G306	2SD655(E,F)	SILICON	HITACHI	
	G307	2SD655(E,F)	SILICON	HITACHI	
	G308	2SD655(E,F)	SILICON	HITACHI	

ICs

▲	ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
	IC301	NJM4560DD	I.C.		

Capacitors

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	C303	QCS21HJ-470	47PF	50V CERAMIC
	C303	QCS21HJ-621	820PF	50V CERAMIC
	C304	QCS21HJ-470	47PF	50V CERAMIC
	C304	QCS21HJ-821	820PF	50V CERAMIC
	C305	QFN81HJ-103	0.01MF	50V MYLAR
	C306	QFN81HJ-103	0.01MF	50V MYLAR
	C307	QCS21HJ-101	100PF	50V CERAMIC
	C308	QCS21HJ-101	100PF	50V CERAMIC
	C309	QFN81HJ-822	8200PF	50V MYLAR
	C310	QFN81HJ-822	8200PF	50V MYLAR
	C311	QFN81HJ-392	3900PF	50V MYLAR
	C312	QFN81HJ-392	3900PF	50V MYLAR
	C313	QET80JM-228	2200MF	6.3V ELECTRO
	C314	QET80JM-228	2200MF	6.3V ELECTRO
	C315	QFN81HJ-472	4700PF	50V MYLAR
	C316	QFN81HJ-472	4700PF	50V MYLAR
	C317	QCS21HJ-331	330PF	50V CERAMIC
	C318	QCS21HJ-331	330PF	50V CERAMIC
	C319	QFN81HJ-153	0.015MF	50V MYLAR
	C320	QFN81HJ-153	0.015MF	50V MYLAR
	C321	QFN81HJ-272	2700PF	50V MYLAR
	C322	QFN81HJ-272	2700PF	50V MYLAR
	C323	QEK61HM-475	4.7MF	50V ELECTRO
	C324	QEK61HM-475	4.7MF	50V ELECTRO
	C325	QFN81HJ-104	0.1MF	50V MYLAR

Resistors

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	R301	QRD161J-5R6	5.6	1/6W CARBON
	R302	QRD161J-5R6	5.6	1/6W CARBON
	R303	QRD161J-101	100	1/6W CARBON
	R304	QRD161J-101	100	1/6W CARBON
	R305	QRD161J-562	5.6K	1/6W CARBON
	R306	QRD161J-562	5.6K	1/6W CARBON
	R307	QRD161J-562	5.6K	1/6W CARBON
	R308	QRD161J-562	5.6K	1/6W CARBON
	R309	QRD161J-270	27	1/6W CARBON
	R310	QRD161J-270	27	1/6W CARBON
	R311	QRD161J-561	560	1/6W CARBON
	R312	QRD161J-561	560	1/6W CARBON
	R313	QRD161J-222	2.2K	1/6W CARBON
	R314	QRD161J-222	2.2K	1/6W CARBON
	R315	QRD161J-272	2.7K	1/6W CARBON
	R316	ORD161J-272	2.7K	1/6W CARBON
	R317	GRD161J-273	27K	1/6W CARBON
	R318	GRD161J-273	27K	1/6W CARBON
	R319	GRD161J-273	27K	1/6W CARBON
	R320	GRD161J-273	27K	1/6W CARBON
	R321	GRD161J-181	180	1/6W CARBON
	R322	GRD161J-181	180	1/6W CARBON
	R323	GRD161J-200	20	1/6W CARBON
	R324	GRD161J-200	20	1/6W CARBON
	R325	ORD161J-153	15K	1/6W CARBON
	R326	GRD161J-153	15K	1/6W CARBON
	R327	ORD161J-184	180K	1/6W CARBON
	R328	GRD161J-184	180K	1/6W CARBON
	R329	QRD161J-331	330	1/6W CARBON
	R330	QRD161J-331	330	1/6W CARBON
	R331	QRD161J-104	100K	1/6W CARBON
	R332	GRD161J-104	100K	1/6W CARBON

Others


▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	P301	E11251-001	CIRCUIT BOARD	
	P302	EMV5101-0038	PLUG ASSY	
	P302	EMV5101-0068	PLUG ASSY	

■ ENG-004 □ Pre-Driver PC Board Ass'y

Note: ENG-004 □ Varies according to the area employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENG-004 [A]	U.S.A., Canada, U.S. Military Market & Other Countries
ENG-004 [B]	Europe, Australia & U.K.
ENG-004 [C]	West Germany

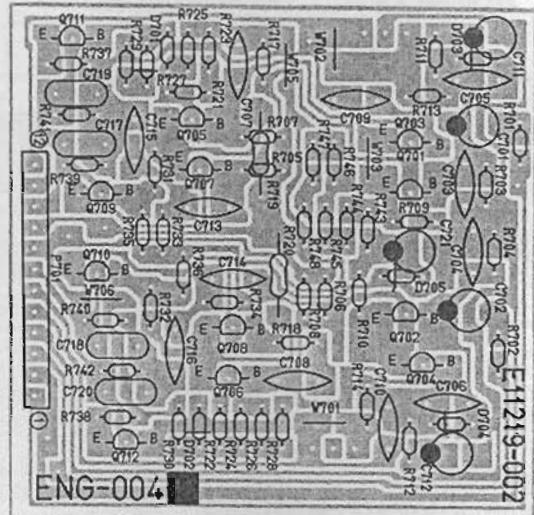

Transistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
G701	2SC2240(A,B)	SILICON		TOSHIBA
G702	2SC2240(A,B)	SILICON		TOSHIBA
G703	2SC2240(A,B)	SILICON		TOSHIBA
Q704	2SC2240(A,B)	SILICON		TOSHIBA
Q705	2SA1038(S,E)	SILICON		ROHM
Q706	2SA1038(S,E)	SILICON		ROHM
Q707	2SA933LN(R,S)	SILICON		ROHM
Q708	2SA933LN(R,S)	SILICON		ROHM
Q709	2SA1038(S,E)	SILICON		ROHM
Q710	2SA1038(S,E)	SILICON		ROHM
Q711	2SC2389(S,E)	SILICON		ROHM
Q712	2SC2389(S,E)	SILICON		ROHM

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C711	QETB1CM-476	47MF	16V ELECTRO
C712	QETB1CM-476	47MF	16V ELECTRO
C713	QCS21HJ-220	22PF	50V CERAMIC
C714	QCS21HJ-220	22PF	50V CERAMIC
C715	QCS21HJ-221	120PF	50V CERAMIC
C716	QCS21HJ-121	120PF	50V CERAMIC
C717	QFN81HJ-822	8200PF	50V MYLAR
C718	QFN81HJ-822	8200PF	50V MYLAR
C719	QFN81HJ-822	8200PF	50V MYLAR
C720	QFN81HJ-822	8200PF	50V MYLAR
C721	QETB1EM-106	10MF	25V ELECTRO

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
D701	1SS133	SILICON		ROHM
D702	1SS133	SILICON		ROHM
D703	1SS133	SILICON		ROHM
D703	1SS133	SILICON	B	ROHM
D704	1SS133	SILICON	B	ROHM
D704	1SS133	SILICON	B	ROHM
D705	MTZ18C	ZENER	C	ROHM

Resistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
R701	QRD161J-222	2.2K	1/6W CARBON
R702	QRD161J-222	2.2K	1/6W CARBON
R703	QRD161J-104	100K	1/6W CARBON
R704	QRD161J-104	100K	1/6W CARBON
R705	QRD161J-202	2K	1/6W CARBON
R706	QRD161J-202	2K	1/6W CARBON
R707	QRD161J-202	2K	1/6W CARBON
R708	QRD161J-202	2K	1/6W CARBON
R709	QRD161J-822	8.2K	1/6W CARBON
R710	QRD161J-822	8.2K	1/6W CARBON
R711	QRD161J-152	1.5K	1/6W CARBON
R712	QRD161J-152	1.5K	1/6W CARBON
R713	QRD161J-104	200K	1/6W CARBON
R714	QRD161J-104	100K	1/6W CARBON
R717	QRD161J-101	100	1/6W CARBON
R718	QRD161J-101	100	1/6W CARBON
R719	QRD145J-121S	120	1/4W UNF. CARBON
R720	QRD145J-121S	120	1/4W UNF. CARBON
R721	QRD161J-222	2.2K	A CARBON
R722	QRD161J-222	2.2K	A CARBON
R723	QRD144J-562S	5.6K	1/4W CARBON
R724	QRD144J-562S	5.6K	1/4W CARBON
R725	QRD161J-222	2.2K	A CARBON
R726	QRD161J-222	2.2K	A CARBON

△ Safety parts

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C701	QETB1HM-475	4.7MF	50V ELECTRO
C702	QETB1HM-475	4.7MF	50V ELECTRO
C703	QCS21HJ-271	270PF	50V CERAMIC
C704	QCS21HJ-271	270PF	50V CERAMIC
C705	QCS21HJ-101	100PF	50V CERAMIC
C706	QCS21HJ-101	100PF	50V CERAMIC
C707	QCY21HK-332	3300PF	50V CERAMIC
C708	QCY21HK-332	3300PF	50V CERAMIC
C709	QCS21HJ-5R0	5.0PF	50V CERAMIC
C710	QCS21HJ-5R0	5.0PF	50V CERAMIC

Resistors


△ ITEM	PART NUMBER	DESCRIPTION	AREA
R727	QRD144J-562S	5.6K	1/4W CARBON
R728	QRD144J-562S	5.6K	1/4W CARBON
R729	QRD161J-391	390	1/6W CARBON
R730	QRD161J-391	390	1/6W CARBON
R731	QRD161J-152	1.5K	1/6W CARBON
R732	QRD161J-152	1.5K	1/6W CARBON
R733	QRD161J-152	1.5K	1/6W CARBON
R734	QRD161J-152	1.5K	1/6W CARBON
R735	QRD161J-333	33K	1/6W CARBON
R736	QRD161J-333	33K	1/6W CARBON
R737	QRD161J-391	390	1/6W CARBON
R738	QRD161J-391	390	1/6W CARBON
R739	QRD161J-682	6.8K	1/6W CARBON
R740	QRD161J-682	6.8K	1/6W CARBON
R741	QRD161J-682	6.8K	1/6W CARBON
R742	QRD161J-682	6.8K	1/6W CARBON
R743	QRD161J-471	470	1/6W CARBON
R744	QRD161J-391	390	1/6W CARBON
R745	ORG012J-182AF	1.8K	1W O.M. FILM
R747	QRD161J-471	470	1/6W CARBON
R748	QRD161J-471	470	1/6W CARBON

Others

△ ITEM	PART NUMBER	DESCRIPTION	AREA
P701	E11219-002 EMV5101-012B	CIRCUIT BOARD PLUG ASSY	

△ Safety Parts

■ ENB-039 △ Sub Control PC Board Ass'y

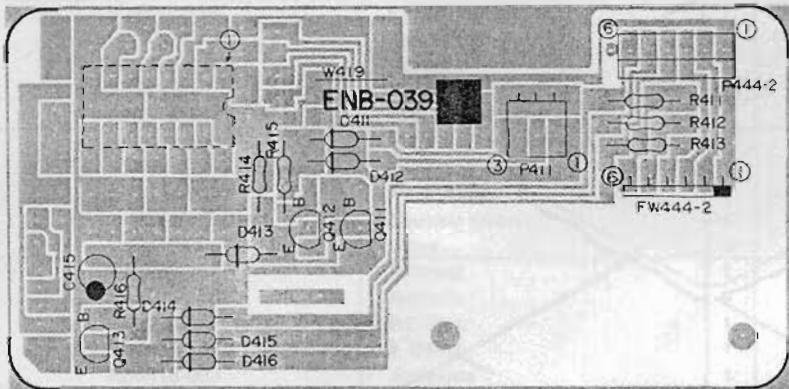**Transistors**

△ ITEM	PART NUMBER	DESCRIPTION	AREA
MAKER			
Q411	2SC1740LN(R,S)	SILICON	ROHM
Q412	2SC1740LN(R,S)	SILICON	ROHM
Q413	2SC1740LN(R,S)	SILICON	ROHM

Resistors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
R411	QRD148J-471S	470	1/4W CARBON
R412	QRD148J-471S	470	1/4W CARBON
R413	QRD148J-471S	470	1/4W CARBON
R414	QRD148J-223S	22K	1/4W CARBON
R415	QRD148J-474S	470K	1/4W CARBON
R416	QRD148J-473S	47K	1/4W CARBON

Diodes

△ ITEM	PART NUMBER	DESCRIPTION	AREA
MAKER			
D411	1S2473HX	SILICON	ROHM
D412	1S2473HX	SILICON	ROHM
D413	1S2473HX	SILICON	ROHM
D414	1S2473HX	SILICON	ROHM
D415	1S2473HX	SILICON	ROHM
D416	1S2473HX	SILICON	ROHM

Others

△ ITEM	PART NUMBER	DESCRIPTION	AREA
P411	E304243-001 QMV5004-003K	CIRCUIT BOARD PULAG ASSY	
P444	EMV7112-006	SOCKET WIRE	

Capacitors

△ ITEM	PART NUMBER	DESCRIPTION	AREA
C415	QET81HM-474	0.47MF 50V ELECTRO	