


696

JVC

SERVICE MANUAL

COMPUTER CONTROLLED RECEIVER

RX-R85BK (for the U.S.A)
MODEL No. RX-R85XBK (for Canada)

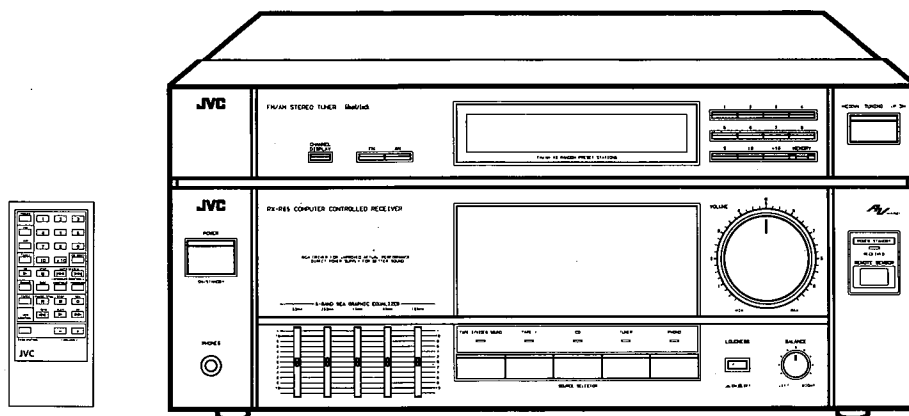

Note: RX-R85BK and RX-R85XBK are completely same in their structure, except for their outlook colors.

Contents

Safety Precautions	1-2	Internal Block Diagrams	
Instruction Book	1-3	of the FL Display Tube	1-31
Technical Explanation	1-19	Remote Control Unit (RM-SR85U)	1-32
Block Diagrams	1-20	Schematic Diagrams	Insertion
FM/AM Tuner Alignment Procedures	1-22	Printed Circuit Boards	Insertion
Removal Procedures	1-23	Connecting Diagram	Insertion
Description of ICs	1-24	Parts List	Separate-Volume Insertion

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electric shock hazard testing)
After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s).

- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10 W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.


Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s). This corresponds to 0.5 mA AC (r.m.s).

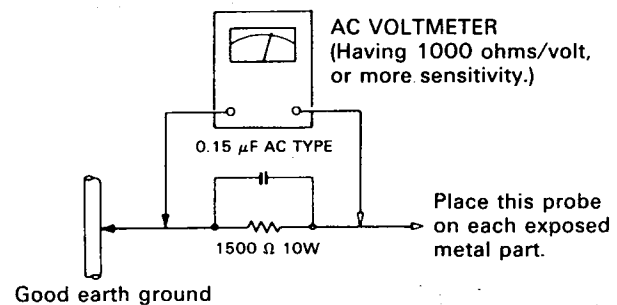

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

Introduction

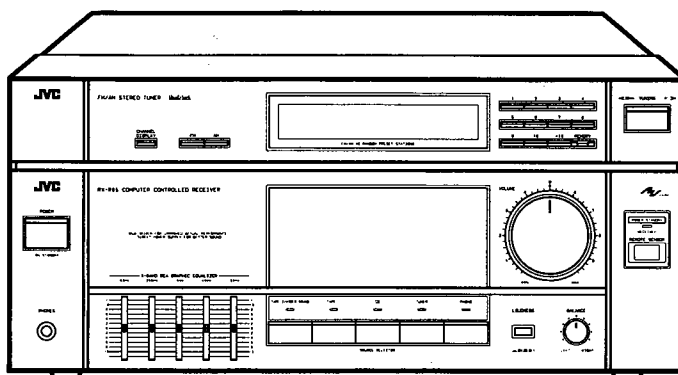

Read This First

Thank you for purchasing this JVC RX-R85BK Receiver. We hope it will be a valued addition to your stereo system. Be sure to read these instructions carefully before operating the receiver. This manual gives you the basic information you need to set up and use your receiver. It explains everything you need to know from turning on the power switch to basic troubleshooting. Please consult your JVC dealer if you have any questions about the receiver.

Use this manual to help you with the following:

- Connect your other stereo components to the receiver.
- Learn the functions of the controls and indicators on the receiver.
- Preset radio stations into the receiver's memory.
- Operate the receiver.
- Troubleshoot, if there is a problem with the receiver.

This manual is organized as follows:

The first part of this manual tells you how to connect your other stereo components and antennas to the receiver.

The second part of this manual introduces you to the controls and indicators on the receiver.

The third part of this manual tells you how to operate the receiver.

The fourth part of this manual provides a troubleshooting guide and specifications for the receiver.

Use the following guidelines to help you follow the instructions in this manual:

- Keys or buttons to be pressed are indicated with capital letters, like this: TUNING key.
- Connection points on the back of the receiver are indicated with all capital letters, like this: PHONO
- Names of indicators that light up on the receiver are indicated with all capital letters, like this: TUNED
- Steps that you need to follow to get the correct results, are labeled **Important!**
- Additional information that is helpful to know, is labeled **Note:**

Before Installing Your Receiver

Locating the Receiver

Install the receiver in a place that is level and protected from moisture.

The temperature around the receiver must be between 23° and 104° Fahrenheit (-5° and 40° Celsius).

Make sure there is good ventilation around the receiver. Poor ventilation could cause over-heating and damage the receiver.

The receiver could cause some interference with television reception. Locate the receiver away from your tv to prevent interference.

Making Power Connections

Do not handle the power cord with wet hands.

Do not pull on the power cord to unplug the receiver. Always pull the molded plug at the end of the cord instead.


Handling the Receiver

Do not insert any metallic object into the receiver.

Caution: To reduce risks, such as electric shocks or fires:

- 1. Do not remove screws, covers, or cabinet.**
- 2. Do not expose this appliance to rain or moisture.**

Stereo Component Connections

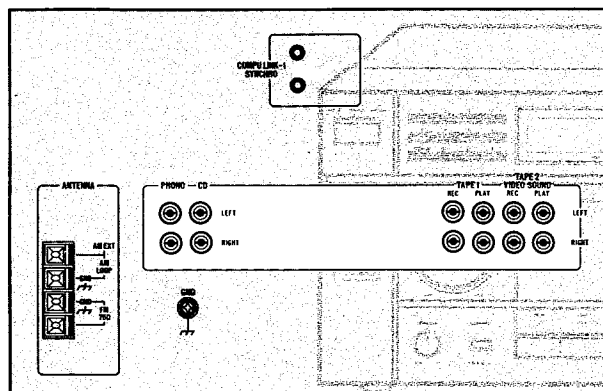

You can connect the following stereo components to the back of your RX-R85BK receiver:

- Turntable
- Compact Disc Player
- Tape Deck(s)
- VCR or TV


The following instructions will show you how to connect stereo components to the receiver.

Important! Make sure you connect the left channels of all stereo components to the left jacks on the receiver. Connect the right channels of all stereo components to the right jacks on the receiver. If you reverse the channels, the stereo sound will be affected.

Note: The top row of jacks on the back of the receiver are for the left channels of stereo components. The bottom row of jacks are for the right channels of stereo components.

Before Making Connections


- Make sure your hands are dry.
- Turn the power off to all components.
- Read the installation instructions for all components you are going to connect.

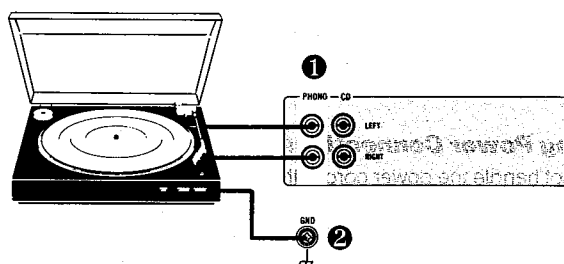

Turntable

- 1 Connect the left and right channels on your turntable to the left and right jacks marked PHONO on the back of the receiver.
- 2 Read the instruction manual for your turntable to see if the turntable needs to be grounded. If it does, connect the turntable's ground wire to the terminal marked GND on the back of the receiver.


Important! Use the RX-R85BK receiver only with turntables that have a moving magnetic (MM) type cartridge.

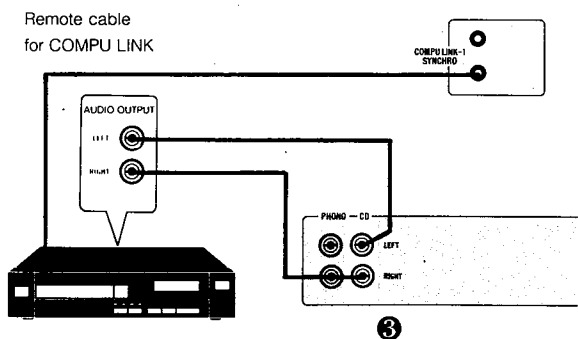

Compact Disc Player


- 3 Connect the left and right channels on your compact disc player to the left and right jacks marked CD on the back of the receiver.

Stereo Component Connections

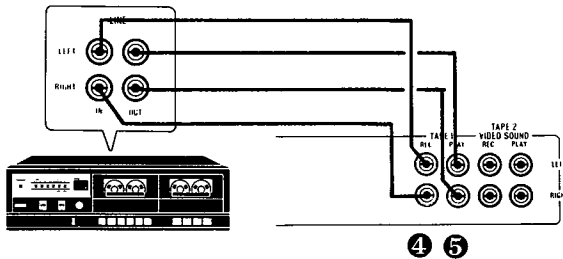


Tape Deck

- ④ Connect the left and right "Line In" channels on your tape deck to the left and right TAPE 1 jacks marked REC on the back of the receiver.
- ⑤ Connect the left and right "Line Out" channels on the tape deck to the left and right TAPE 1 jacks marked PLAY on the back of the receiver.

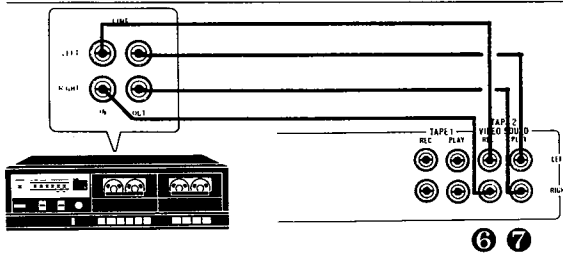


Second Tape Deck

- ⑥ Connect the left and right "Line In" channels on your second tape deck to the left and right TAPE 2/VIDEO SOUND jacks marked REC on the back of the receiver.
- ⑦ Connect the left and right "Line Out" channels of the tape deck to the left and right TAPE 2/VIDEO SOUND jacks marked PLAY on the back of the receiver.

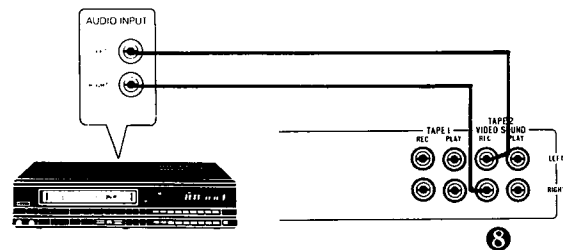


VCR or TV

- ⑧ Connect the left and right audio input channels on your VCR to the left and right TAPE 2/VIDEO SOUND jacks marked REC on the back of the receiver.

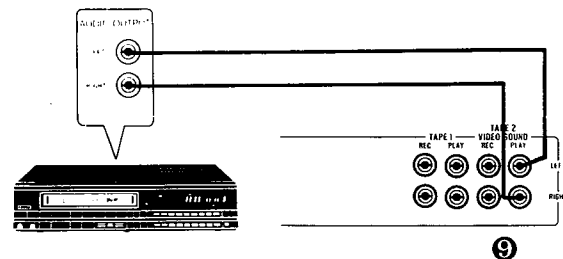


- ⑨ Connect the left and right audio output channels on your VCR or TV to the left and right TAPE 2/VIDEO SOUND jacks marked PLAY on the back of the receiver.

Speaker Connections

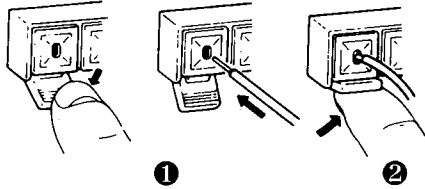

Speaker Terminals

- 1 When connecting speakers, open each terminal and insert the end of the speaker wire as shown.
- 2 Close the terminals as shown to clamp the speaker wires in place.

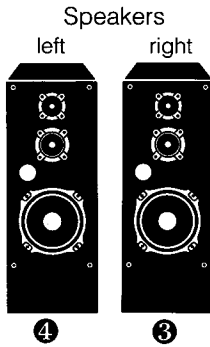


Speakers


- 3 Connect the (+) and (-) terminals of the right-side speaker to the top (+) and (-) terminals marked RIGHT on the receiver.
- 4 Connect the (+) and (-) terminals of the left-side speaker to the top (+) and (-) terminals marked LEFT on the receiver.

Important! Be sure to match the polarity of the speaker terminals with the polarity of the terminals on the receiver. (+) to (+) and (-) to (-).

This receiver is only for use with speakers having impedance of 8 to 16 ohms. Check your speaker specifications to make sure the speakers have the correct impedance.

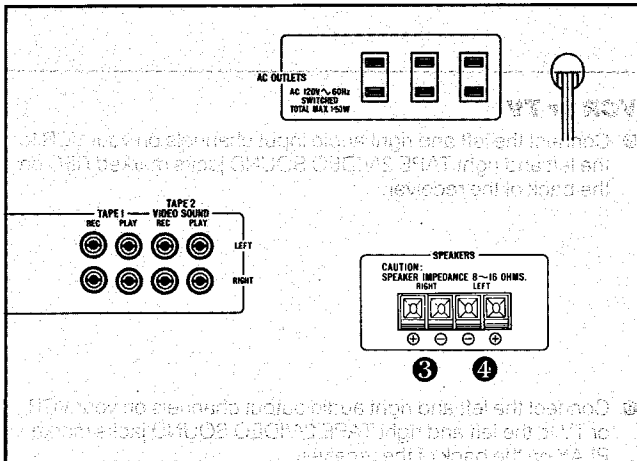

AC Power Connections

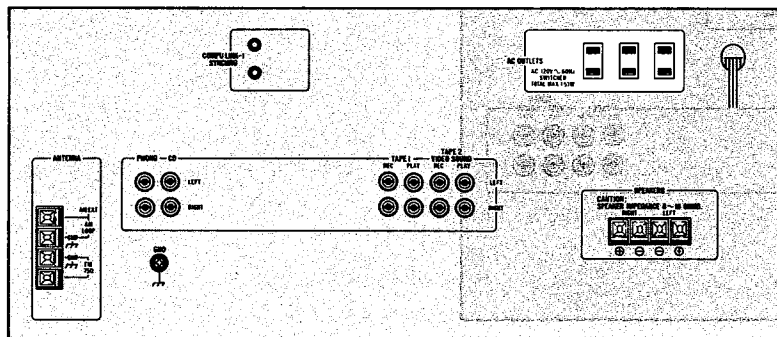

Caution: To prevent electric shock, turn all stereo components off before you install or remove power cords.

Important! Before you plug the power cord into an outlet, make sure all stereo components are connected correctly.

Plug the power cord on the back of the receiver into a 120 volt, 60 Hz AC household electrical outlet.


You can connect the power cords of the other stereo components to the three AC outlets on the back of the receiver.

Do not connect stereo components requiring more than 150 watts (total) to the receiver.

The AC outlets are connected to the receiver's ON/STANDBY circuits.

- When the power switch is set to STANDBY, power will not be supplied.
- When the power on other components connected to the receiver is switched ON, you can turn these components ON/OFF from the receiver.
- This simplifies your job of switching on power buttons.


AM Antenna Connections

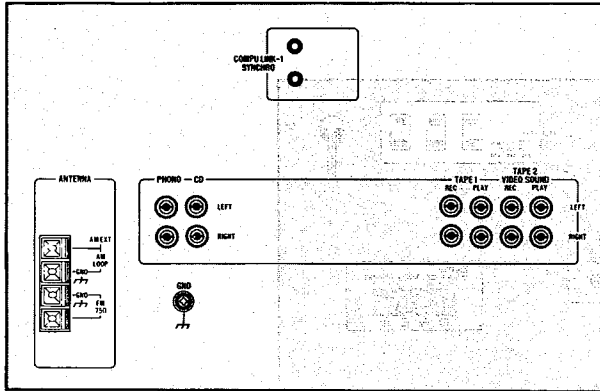

To receive AM radio broadcasts, you will have to connect an AM antenna to the receiver.

AM Loop Antenna

An AM loop antenna is included with your receiver. To use the antenna, fold out the loop from the antenna base. Place it near the receiver. Connect this antenna to the receiver as follows:

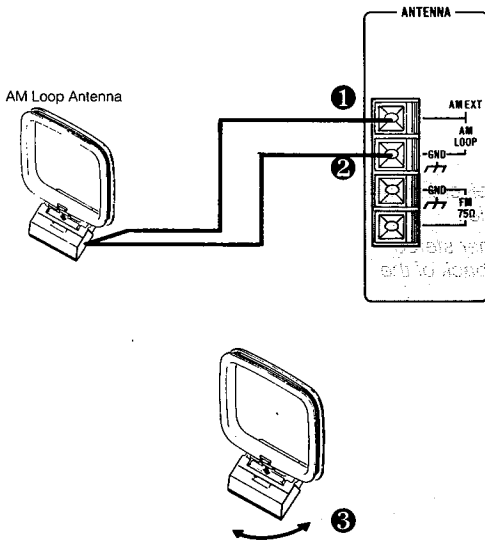

- ❶ Connect one antenna wire to one of the AM LOOP terminals on the receiver.
- ❷ Connect the remaining antenna wire to the other AM LOOP terminal.


Note: These two terminals open and close the same way as the speaker terminals.

- ❸ Adjust the loop antenna as needed to get the best reception.

AM Outdoor Antenna

If your AM broadcast reception is unsatisfactory, you should connect an AM outdoor antenna in addition to the loop antenna.


Important! The AM loop antenna must be installed to receive AM broadcasts. Do not disconnect the loop antenna when installing an outdoor antenna.

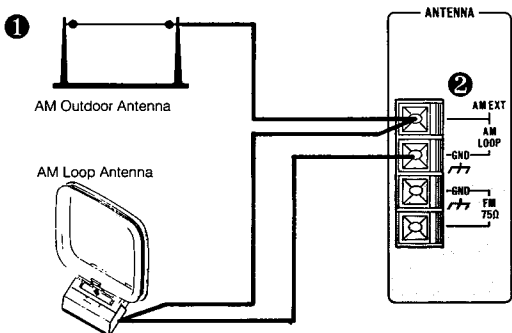

- ❶ Install a single vinyl-covered antenna wire outdoors. The antenna wire should be about 16 to 40 feet (5 to 12 meters) long.
- ❷ Connect one end of the antenna to the AM loop terminal marked AM EXT.

Note: Except for the connection, make sure no uninsulated antenna wire touches the rear panel of the receiver. Otherwise, the receiver might not pick up AM broadcasts.

FM Antenna Connections

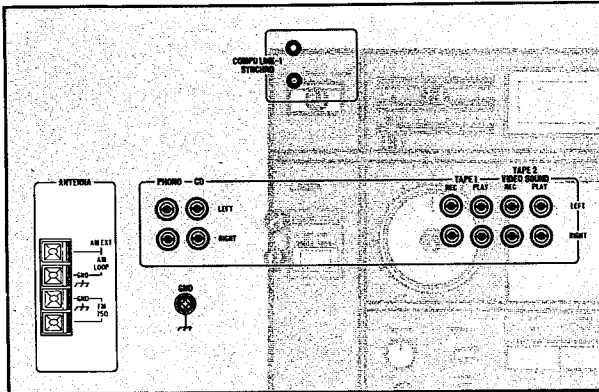


To receive FM radio broadcasts, you should connect an FM antenna to the receiver.

FM antennas use one of two types of cable. They are the coaxial cable and the flat feeder cable.


Connecting a Coaxial Antenna Cable

- ❶ Strip off about an inch of the coaxial cables outer sheathing. This will expose the braid underneath.
- ❷ Strip back the braid, without removing it, about half an inch. This will expose the conductor wire underneath.
- ❸ Twist the braid so that it tapers off to a point.
- ❹ Open the antenna terminals.
- ❺ Place the conductor wire in the FM antenna terminal.
- ❻ Place the braid into the GND terminal.
- ❼ Close the antenna terminals.

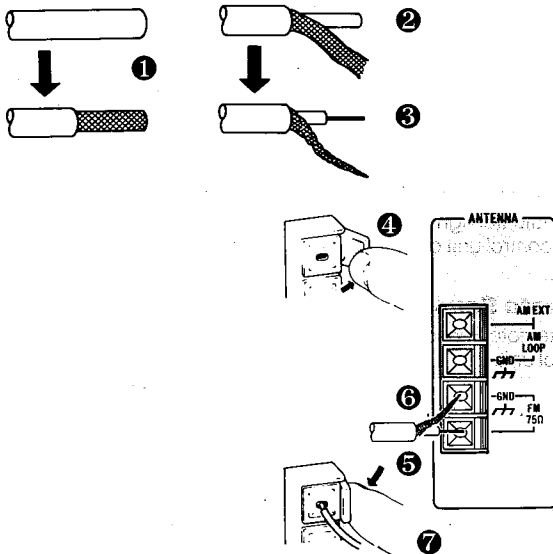


Connecting a Flat Feeder Antenna Cable

- ❶ Open the antenna terminals.
- ❷ Place one of the two antenna cable wires into the FM antenna terminal.
- ❸ Place the other wire into the GND terminal.
- ❹ Close the antenna terminals.

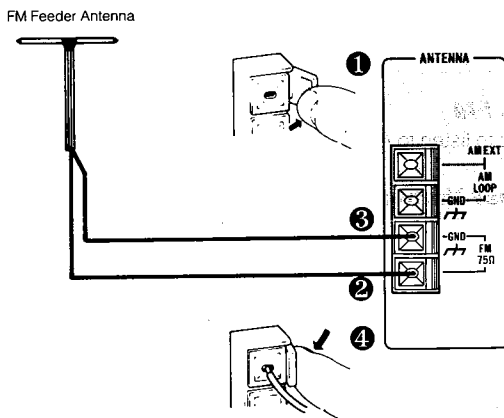

Front Panel Controls

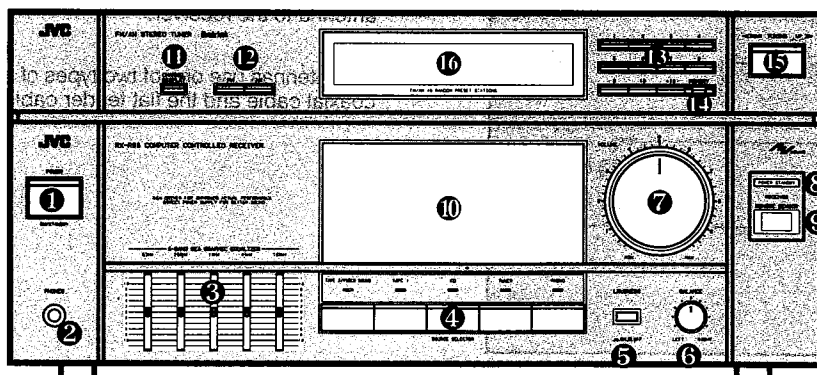

1 Power Switch

Press this switch to turn on power to the receiver. Press the switch again to turn off the power and activate STANDBY mode.

Note: The receiver uses a small amount of power (5 Watts) in the STANDBY mode. To disconnect the power completely, unplug the power cord.

2 Headphone Jack

Connect the stereo headphones here. When you connect the headphones, there will be no sound from the speakers.

3 5-Band S.E.A. Graphic Equalizer

The S.E.A. controls the volume of five tonal ranges: Deep Base, Bass, Mean, Mean Treble and Treble.

4 Source Selector

Use these five buttons to choose the stereo source you want to listen to. Corresponding indicator lights show which source or sources have been selected.

TAPE 2/VIDEO SOUND: Press to use the tape deck or video equipment connected to the TAPE 2/VIDEO SOUND jacks on the receiver.

TAPE 1: Press to use the tape deck connected to the TAPE 1 jacks of the receiver.

TUNER: Press to listen to AM and FM broadcasts.

CD: Press to listen to CDs.

PHONO: Press to listen to records.

5 Loudness Switch

Use to boost the bass and treble. This switch compensates for hearing sensitivity to both high and low frequency levels.

6 Balance Control

Turn the BALANCE control left or right to adjust the balance of the left and right speakers.

7 Volume Control and Volume Indicator Light

Turn the VOLUME control to adjust the volume. The VOLUME indicator lights up when the power is ON and flickers when the remote control is used for VOLUME and FADE.

8 RECEIVED and POWER STANDBY Indicator

This indicator lights up when signals are received from the remote control unit or when the receiver is in the STANDBY mode.

9 Remote Sensor

The Remote Sensor receives the signal sent by the remote control unit.

Note: It is important to keep the Remote Sensor clear of obstructions in order for it to receive signals from the remote control unit.

10 Power Level and Power On/Off Indicators

The Power Level indicator light represents the level of output from the receiver. The Power ON/OFF Indicator indicates whether the power is ON or OFF.

1 Channel Display Switch

Press to verify the preset channel number.

2 AM, FM

Press to listen to AM and FM broadcasts.

3 Tuner Numeric Keys

Press to select tuner preset channels.

4 Memory

Stores an AM or FM station on a preset channel.


5 Tuning < DOWN, UP >

Tunes in AM and FM stations.


6 Tuner Display Window

The Tuner Display Window shows the AM or FM frequency and provides information on the quality of the broadcast reception. It is also used to set and recall preset radio stations.

Basic Operation

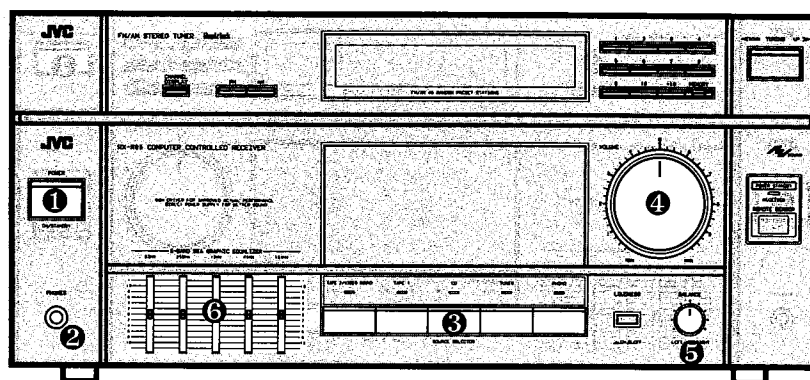

- ❶ To turn on your receiver, press the POWER switch. The Tuner Display Window, VOLUME indicator light, and Power ON/OFF indicator are illuminated and a SOURCE SELECTOR indicator light shows the last source that was played.

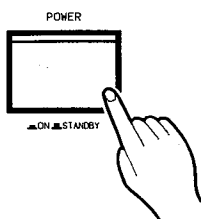

- ❷ If you want to listen through headphones, plug them into the headphones jack.
- ❸ Press one of the SOURCE SELECTOR buttons to choose the stereo source you want to listen to.

The corresponding indicator light indicates which stereo source is being played.



Note: To operate the various stereo sources (for example, CD, phono, tape deck), follow instructions in the appropriate instruction manuals.

- ❹ The VOLUME control adjusts the sound volume.
- Turning the VOLUME control to the right increases the volume.
 - Turning to the left decreases the volume.
- The VOLUME control automatically adjusts the level of the bass and treble as the volume is changed.


- ❺ The BALANCE control is used to adjust the balance of the left and right speakers.
- Turn the BALANCE control to the right to increase the volume of the right speaker or speakers.
 - Turn the BALANCE control to the left to increase the volume of the left speaker or speakers.
 - When the BALANCE control is in the center position the volume of the left and right speakers is equal.

- ❻ Use the 5-Band S.E.A. Graphic Equalizer to break the signal into five ranges:

Deep Base: 63Hz
Bass: 250Hz
Mean: 1kHz
Mean Treble: 4kHz
Treble: 16kHz

Raising the slide control for a range boosts the volume of the range. Lowering the slide control for a range decreases the volume of the range.

Selecting a Radio Station

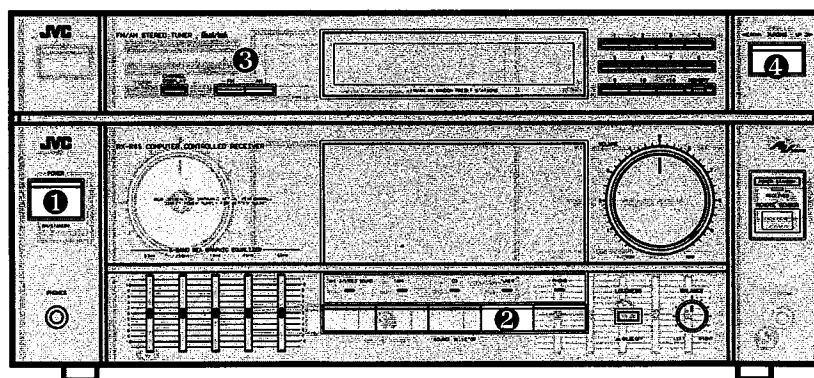

Selecting an AM Station

- ❶ Turn the receiver ON.
- ❷ Press the TUNER Source Selector button.
- ❸ Press the AM button.

AM and kHz appear in the Tuner Display Window. The receiver tunes in the last AM frequency that was played.



- ❶ Use the TUNING key to find the frequency of the radio station you want to listen to.
- Press the right side of the key to find higher frequencies.
- Press the left side of the key to find lower frequencies.

When you release the TUNING key, the receiver auto-tunes until it tunes a station in.

The TUNED indicator lights when the receiver is tuned precisely to an AM station.



Note: Tap the TUNING key momentarily to change the frequency in steps of 10 kHz. Hold the TUNING key down to change the frequency faster, then tap the key to set the frequency precisely.

Important! If the receiver is tuned to a station but the TUNED indicator doesn't light, try adjusting the antenna for better reception.

Selecting an FM Station

- ❶ Turn the receiver ON.
- ❷ Press the TUNER Source Selector button.
- ❸ Press the FM button.

FM and MHz appear in the Tuner Display Window. The receiver tunes in the last FM frequency that was played.



- ❶ Use the TUNING key to find the frequency of the radio station you want to listen to.
- Press the right side of the key to find higher frequencies.
- Press the left side of the key to find lower frequencies.

When you release the TUNING key, the receiver auto-tunes until it tunes a station in.

The TUNED indicator lights when the receiver is tuned precisely to an FM station.




Note: Tap the TUNING key momentarily to change the frequency in steps of 0.1 MHz. Hold the TUNING key down to change the frequency faster, then tap the key to set the frequency precisely.

Important! If the receiver is tuned to a station but the TUNED indicator doesn't light, try adjusting the antenna for better reception.


When you tune to an FM station, the receiver automatically plays in stereo, and the STEREO indicator lights up.



Presetting AM and FM Stations

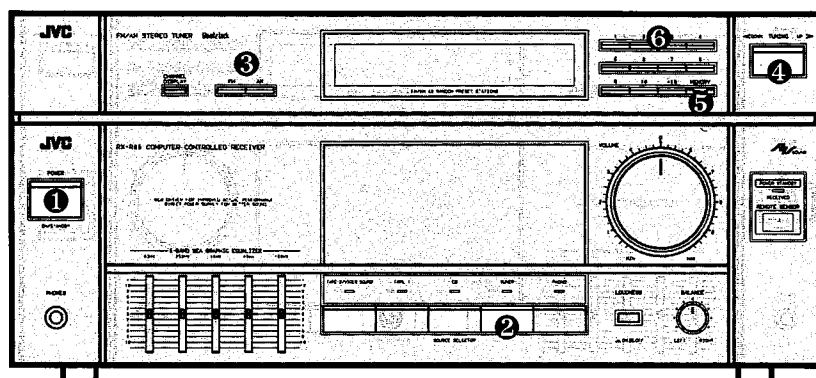

You can preset a total of 40 radio stations into the receiver's memory. You preset a station by assigning it a channel number (1 to 40). Once a station has been preset, you can tune to that station using the Numeric keys rather than the TUNING key.

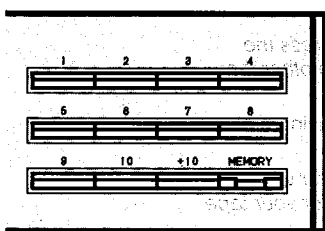

Presetting Stations

- ❶ Turn the receiver ON.
- ❷ Press the TUNER Source Selector button.
- ❸ Press the AM or the FM Source Selector button.
- ❹ Use the TUNING key to tune in the radio station you want to preset.
- ❺ Press the MEMORY button.

The MEMORY indicator lights for about five seconds.



Using Numeric Keys

Preset stations are set into the receiver's memory and recalled using the Numeric keys.

To indicate numbers 1 to 10, press the appropriate key. To indicate numbers 11 to 40, you need to use the +10 key and one other key. See the following examples:

To indicate **17**: press the **+10** key, then the **7** key

To indicate **20**: press the **+10** key, then the **10** key.

To indicate **25**: press the **+10** key twice, then the **5** key.

To indicate **40**: press the **+10** key three times, then the **10** key.

- ❻ Using the Numeric keys, enter the channel number (1 to 40) you want to assign to the station.
- The channel number appears in the Tuner Display Window.




Important! You must enter the channel number while the MEMORY indicator is lighted. If the indicator turns off too soon, press the MEMORY button and start again.

Repeat the above process to preset additional radio stations.

Note: Preset stations are held in the receiver's memory as long as the receiver is plugged in. If the receiver is unplugged, or if a power failure occurs, the receiver will keep the presets for two or three days before erasing them.

Note: The normal Frequency display will reappear after about 5 seconds. If you press the CHANNEL DISPLAY button, the CHANNEL display will appear, allowing you to reconfirm the preset channel.

Recording Tapes

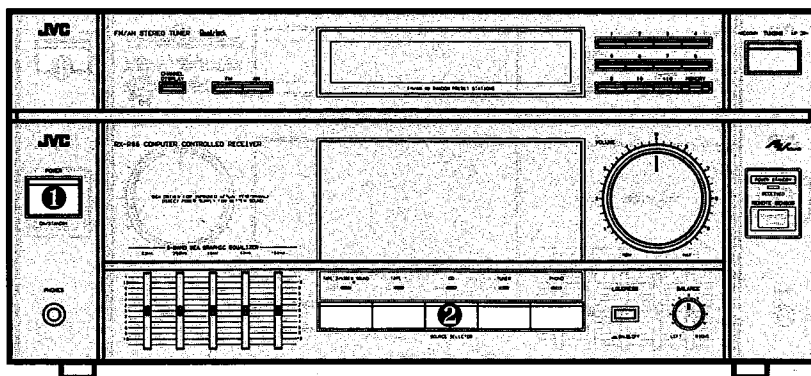

If you have a tape deck connected to the TAPE 1 or TAPE 2/VIDEO SOUND jacks of the receiver, you can record other stereo sources onto a tape.

- ① Turn the receiver ON.
- ② Press the SOURCE SELECTOR button for the source you want to record from.

Note: When recording from TAPE 2 TO TAPE 1, press the TAPE 2/VIDEO SOUND button and another button other than TAPE 1.

- Use the tape deck to record the source as it is playing. Follow the instructions for your tape deck.

Note: Adjusting the VOLUME control of the receiver will not affect the recording level. Follow the instructions for your tape deck.


Note: On TAPE 1 the sound that passed through the S.E.A. is recorded. On TAPE 2 the sound that did not pass through the S.E.A. is recorded.

Three-Head Tape Decks

If you have a three-head tape deck, you can use it to monitor the sound being recorded. Connect the tape deck to the TAPE 2/VIDEO SOUND jacks of the receiver and proceed as follows:

- Start recording the source onto the TAPE 2 deck.
- When TAPE 2/VIDEO SOUND is off, you hear the source playing through the speakers.
- Press the TAPE 2/VIDEO SOUND button. The corresponding light will light up. Now you hear the recording immediately as it is made on the tape.
- By pressing the TAPE 2/VIDEO SOUND button on and off, you can compare the sound quality of the source with the quality of the tape recording being made.

Using the Remote Control

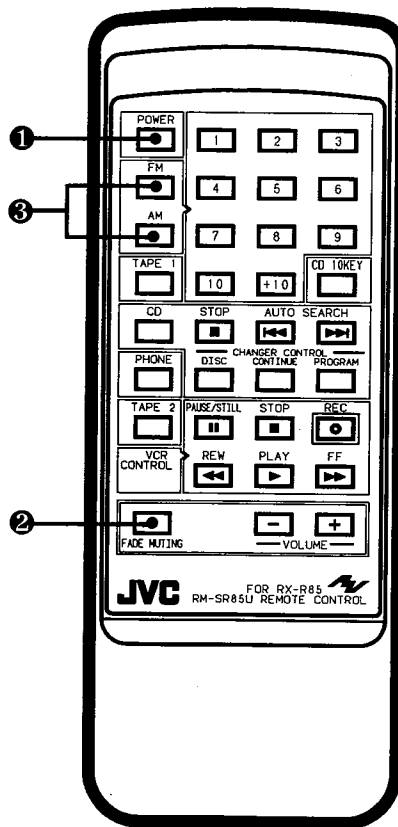

The RM-SR85U remote control unit controls the RX-R85BK receiver and other JVC audio and visual equipment.

- Aim the remote control unit directly at the equipment you wish to operate.

Note: The range of the remote control is about 25 feet. Make sure there are no obstacles between your remote and your equipment that may block the signal.

- Press the keys slowly and firmly to ensure the desired results.

The key labels of the remote may not match those on your equipment. Read the remote's instructions as well as your equipment's instructions to double check which keys control which functions.

Note: The remote control unit cannot control functions it does not support. The remote may also not work with older equipment.

Important! Check to make sure that your CD player is connected through the COMPU LINK-1/SYNCR0 terminals by the remote cable provided.

Make sure that all the equipment you wish to use is turned on before operating the remote control.

① Power

To turn on your receiver, press the POWER key. Press again to put you receiver in STANDBY mode.

② Volume and Fade Muting

- To increase the volume press the $\boxed{+}$ key. To decrease the volume press the $\boxed{-}$ key.

When using the remote's VOLUME keys, the VOLUME indicator light on the receiver will blink. The receiver's VOLUME control knob will rotate, registering the new volume level.

- To decrease the volume, press the FADE MUTING key. Each time you press the key, the volume is reduced slightly.

When you use VOLUME $\boxed{+}$ $\boxed{-}$ and FADE MUTING on the remote control, the Volume Indicator on the receiver blinks.

③ AM and FM Broadcasts


To listen to an FM broadcast, press the FM key. To listen to an AM broadcast press the AM key. Use the Numeric keys to select a preset channel.

Using the Remote Control



4 Phono



Press the PHONO key to change the SOURCE SELECTOR to PHONO.


5 CD

Press the CD  key to start playing a CD.


Press the STOP key to stop the CD.

Use the AUTO SEARCH  and  to repeat or skip tracks.

- The  key will take you to the beginning of the previous track.
- The  key takes you to the beginning of the next track.

Note: Pressing  while the tape is rewinding will take you to the beginning of the current track.



Use the Numeric keys to select CD tracks. You do this by pressing the number of the CD track you wish to hear.

Important! You must press the CD 10 key  in order to use the Numeric keys in the CD track number mode.

Note: The functions of these keys may vary according to the make and model of your CD player. Be sure to refer to your CD player's instructions.

6 CD Autochanger

Select a play mode by pressing the CONTINUE or PRGM key.


- You must press the DISC key in order to use the Numeric keys to choose the number of the disc (1 ~ 6) you wish to hear. Then press the number of the disc ( ~ ) you wish to hear.
- You must press the CD 10 key if you wish to use the Numeric keys in the CD track number mode.
- Press the CONTINUE key for continuous play.
- Press the PROGRAM key for program play.

Note: The functions of these keys may vary according to the make and model of your CD player. Be sure to refer to your CD player's instructions.









7 TAPE 1 and TAPE 2

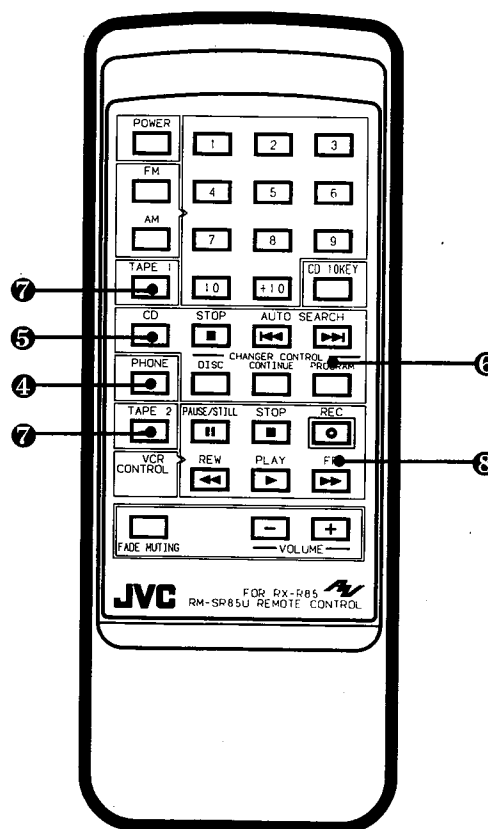Press to change the signal source to TAPE 1 or TAPE 2/VIDEO SOUND.

You cannot operate the tape deck from the remote control. You must do this manually.



8 VCR

- Press the PLAY  key to play a video tape on your VCR.
- Press the FF  to fast forward a video tape.
- Press REW  to rewind a video tape.
- Press STOP to stop a video tape.
- Press PAUSE/STILL  to pause play or recording. Depending on your VCR and the speed at which your tape was recorded, the picture on your screen may freeze. To resume play or recording, press the PLAY  key.
- Press the REC  key together with the  key to start recording. To enter the record-standby mode press together with the  key.

Note: When you are operating your VCR from the remote control unit, be sure to aim the unit at the VCR, not your receiver.

Be sure to read your VCR's instructions for further information on playing and recording video tapes.

Using the Remote Control

Batteries

The RM-SR85U Remote Control unit uses two (2) AAA size (UM-4, R03 1.5V) batteries.

The use of long-life dry cells is recommended.

Battery Replacement

If the range of the remote seems shortened, the batteries may be old. Try replacing the old batteries.


Important! Do not use a new battery with an old battery.

Use batteries of the same brand. Batteries can vary in voltage even though they look alike.


If you are not planning to use the remote control for an extended period of time, remove the batteries.

Caution: Do not heat batteries or attempt to dispose of them by burning.


1. Remove the rear cover of the remote control unit by pressing down gently while sliding it out.

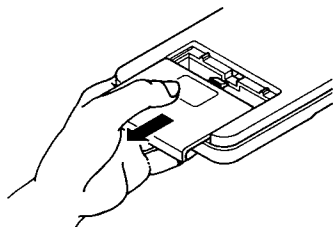

2. Insert the batteries, making sure that their position matches that of the diagram inside the remote.

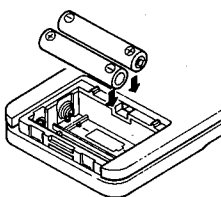

3. Replace the rear cover.

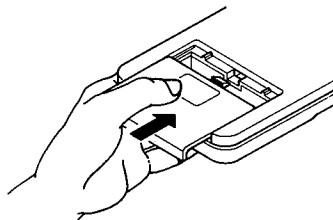

Compu Link Remote Control System

COMPU LINK
 Remote
 Control System

JVC's exclusive Compu Link Remote Control System connects equipment with JVC COMPU LINK-1/SYNCHRO terminals to the remote control system. You can control equipment from the remote control unit, or you can use other functions such as automatic source selection and synchronized recording.

Equipment remote control

JVC Compu Link equipment functions that can be controlled remotely include:

CD player: PLAY, STOP, AUTO SEARCH, TRACK NO., SELECT

CD auto-changer: PLAY MODE (CONTINUE, PROGRAM DISC NO. SELECT, TRACT NO. SELECT

Cassette deck: Source selection only

Turntable: Source selection only

JVC's VCRs can also be controlled remotely. For further details, see the remote control unit description in this manual.

Automatic source selection

Pressing SOURCE keys will automatically put the corresponding source equipment into the PLAY mode. When you press the PLAY key on source equipment, the corresponding SOURCE key is automatically set to that source. Other source equipment shuts down about 5 seconds later.

Note: Automatic source selection does not function on a tape deck connected to the TAPE2/VIDEO SOUND terminals.

This is applicable only with components that are compatible with JVC's Compu Link Remote Control System.

Synchronized recording


With synchronized recording, a tape deck can start recording automatically with a CD player or turntable.

Note: Read your tape deck manual for more information on synchronized recording.

This is applicable only with components that are compatible with JVC's Compu Link Remote Control System.

How to Connect Compu Link


This diagram shows how Compu Link compatible components are connected to the COMPU LINK-1/SYNCHRO terminals.

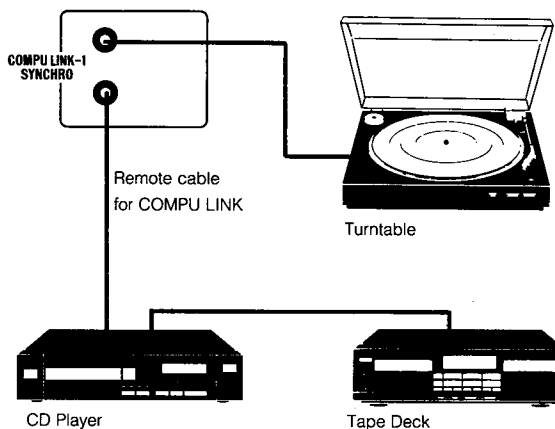

Important! Do not connect the remote cable when connecting the JVC cassette deck having COMPU LINK-1/SYNCHRO terminals to the TAPE 2/VIDEO SOUND terminals.

Technical Explanation

Protector Circuit(IC 901) μ PC1237HA

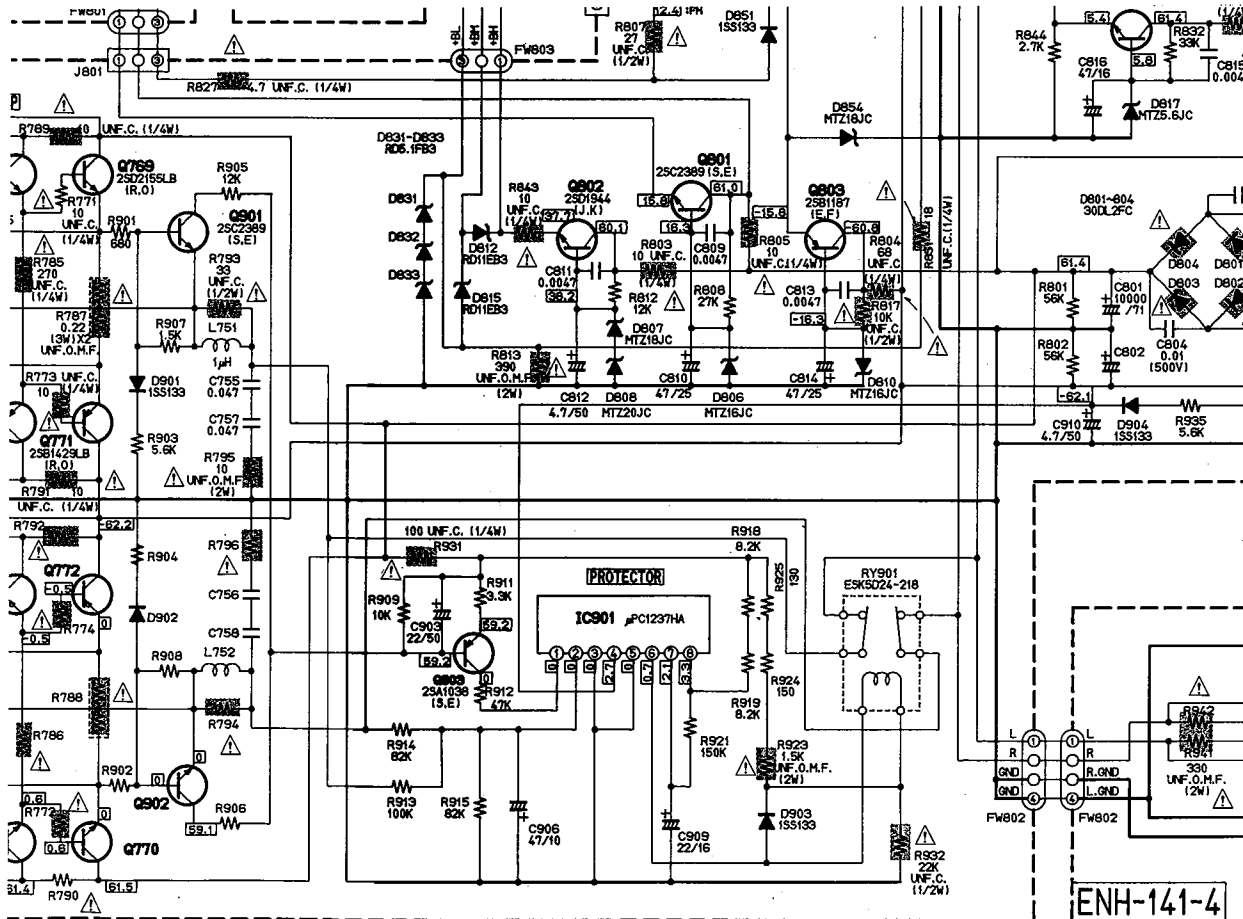

This IC is used for mute when power supply turns ON/OFF, detecting center voltage and over current. Power supply's ON/OFF mute is used for protect to come out noise when power switch turns ON and OFF.

When power switch turns ON, the pin 7 becomes "H" with time constant of R 981(150KΩ) and C909(22μF/16 V) and the pin 6 of relay drive output becomes "L", then relay turns ON.

When power switch turns OFF, the pin 4 becomes "L" with time constant of C910(4.7μF/50 V) and R935(5.6KΩ) and then relay turns OFF.


Center voltage detection circuit is for protecting speaker. When DC voltage appears at speaker output terminal, the pin 2 detects it through R913 and R914, and then relay turns OFF.

Over current detection circuit is for protecting power stages when over current flows. When the voltage across R787(0.22Ω/3W) or R788(0.22Ω/3W) exceeds the reference value, Q901 or Q902 turns ON, and then Q903 turns ON.

When Q903 turns ON, the voltage is added to the pin 1 and protective circuit works.


Block Diagrams

■ Tuner Section ENA-087

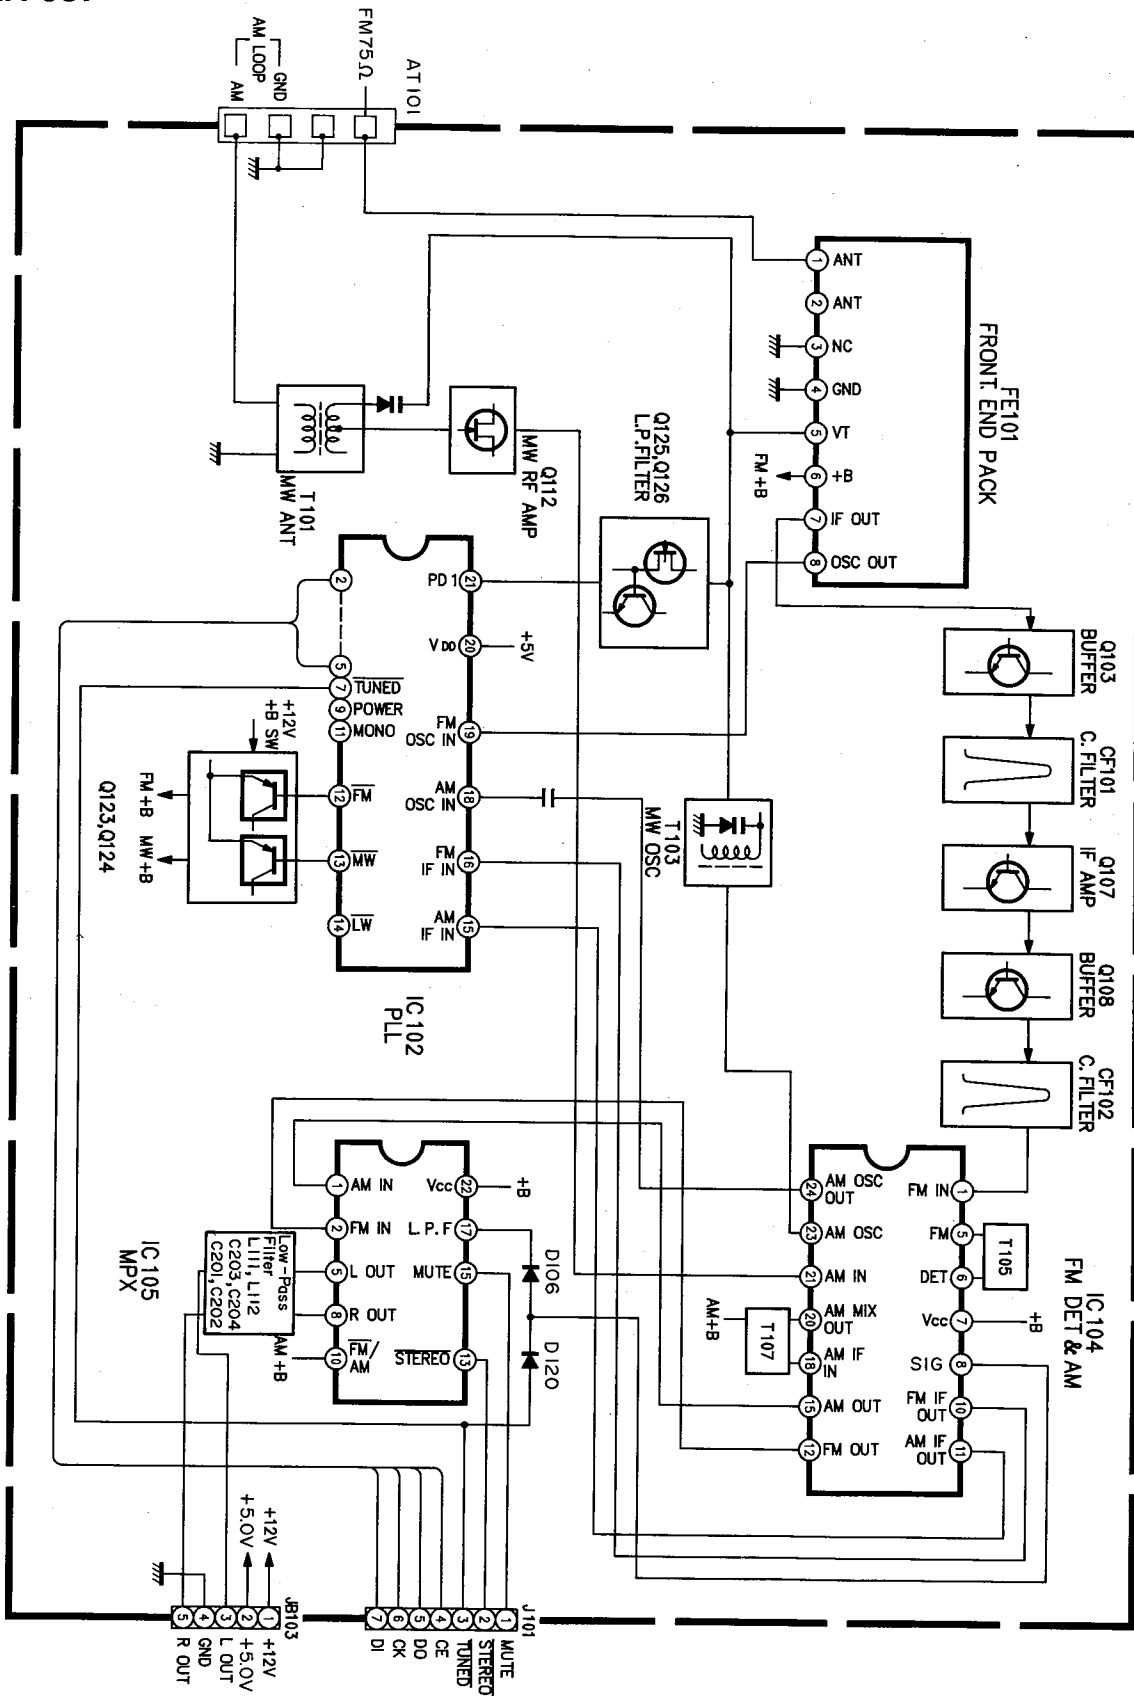


Block Diagrams

■ Power Supply & AMP. Section

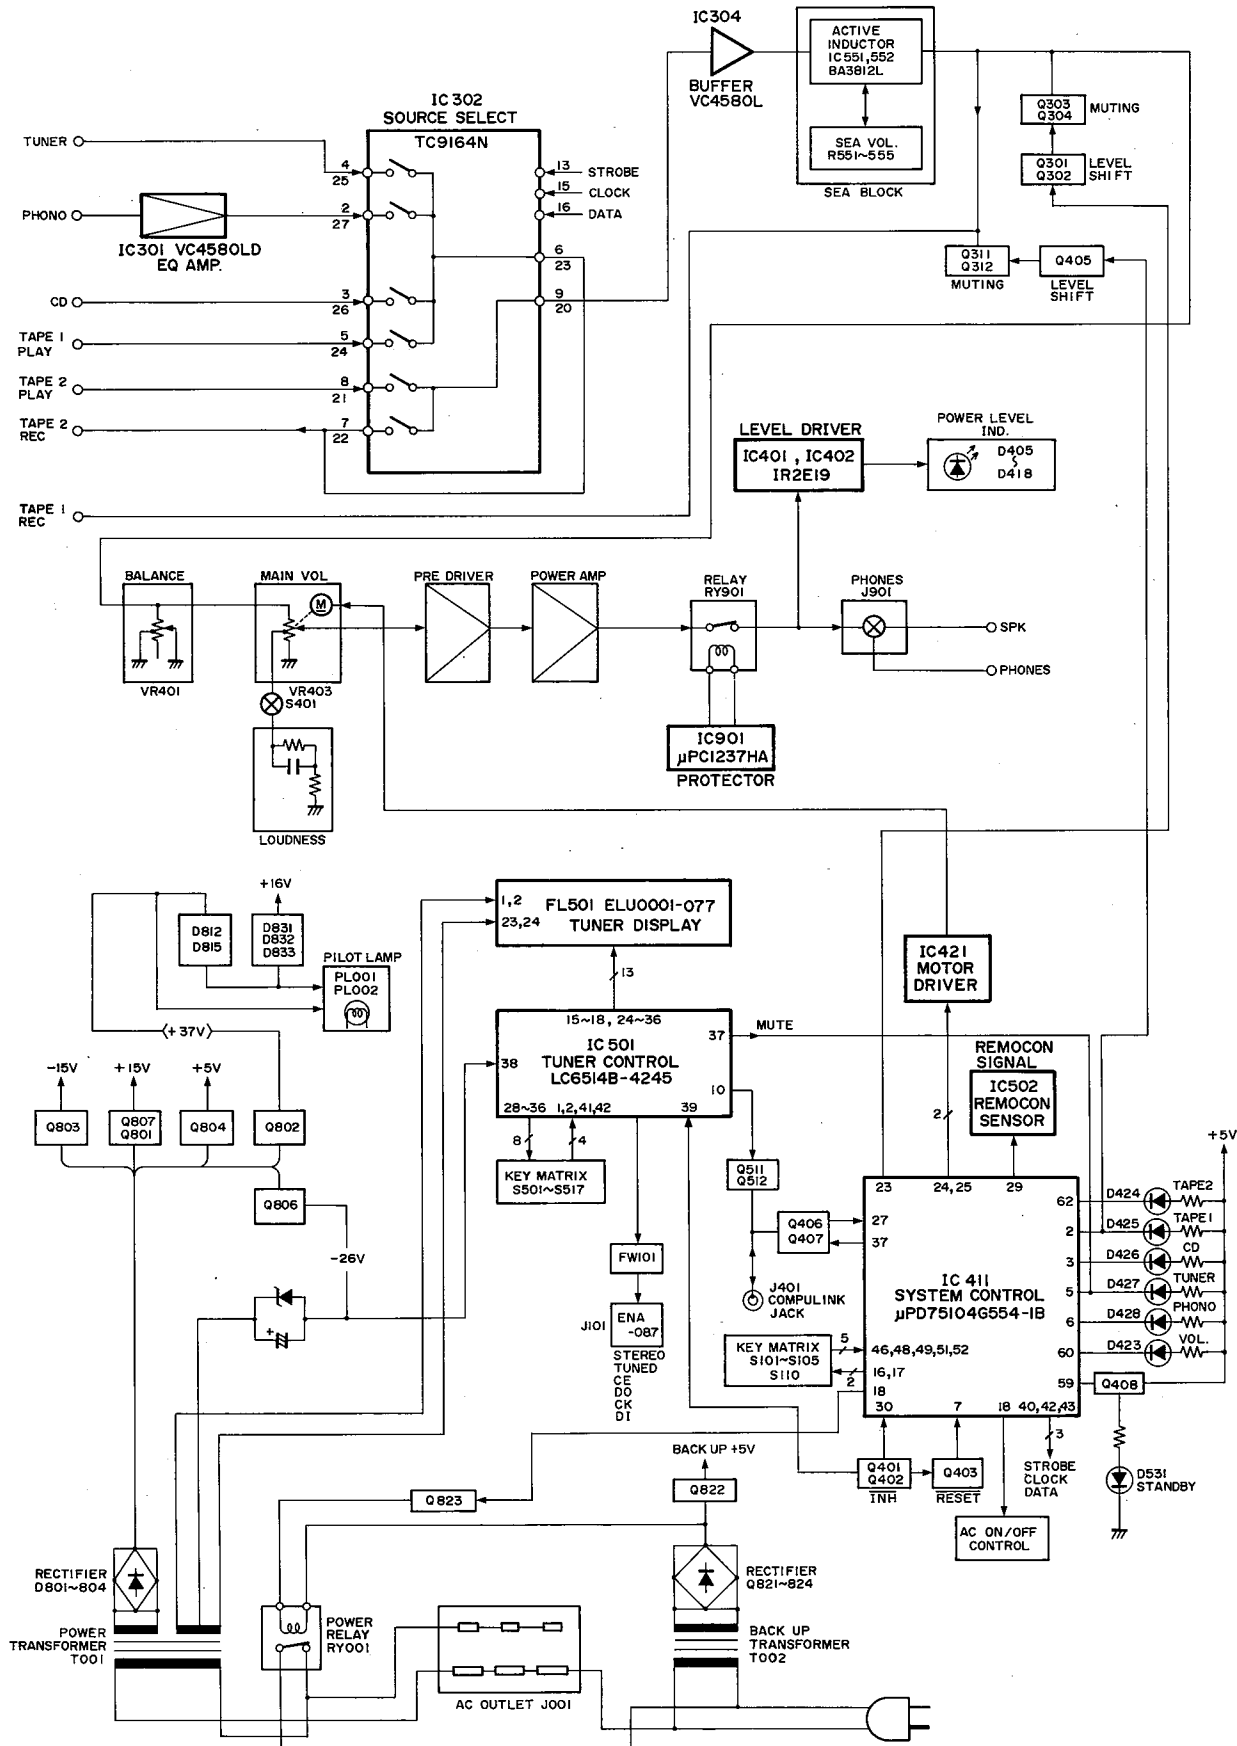

FM/AM Tuner Alignment Procedures

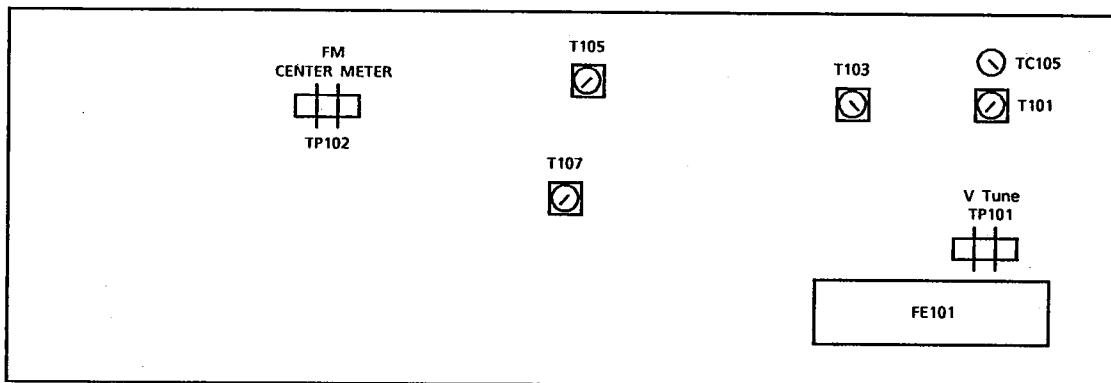

1. FM section

■ FM oscillator

- (1) Set the frequency display to "108.0MHz".
- (2) Confirm the FM inter-station noise is received.
- (3) Confirm the voltage of test point "TP101" becomes $8.0V \pm 2.0V$.
- (4) Set the frequency display to "87.5MHz" and confirm the voltage of test point "TP101" becomes $1.6V \pm 1.0V$.

■ FM detector coil : T105

- (1) Connect a digital voltmeter to test point "TP 102", and receive to "100.1MHz" signal with SSG ATT 70dB.
- (2) Adjust T105 so that the digital voltmeter reads $0 \pm 1.5mV$.

2. AM section

■ AM oscillator : T103

- (1) Set the frequency display to "530KHz" and confirm the voltage of test point "TP101" becomes $0.9V \pm 0.2V$.
- (2) Set the frequency display to "1710KHz" and confirm the voltage of test point "TP101" becomes $8.0V \pm 0.8V$.
- (3) If its voltage exceeds 8.8V at 1710KHz, adjust T103 to obtain 8.8V.

■ AM antenna coil : T103

- (1) Connect a loop antenna to the "AM Loop" terminal on the rear panel.
- (2) Adjust T101 to obtain the best receiving sensitivity on 600KHz.


■ AM antenna trimmer : TC105

- (1) Adjust TC105 to obtain the best receiving sensitivity on 1400KHz.

Power Amplifier Adjustment Procedures

■ Idling Current

- (1) Turn R751 and R752 fully counterclockwise before the power switch on.
- (2) Warm up at least 5minutes before adjustment.
- (3) Must keep the heatsink to prevent overheating before adjustment.
- (4) Set the volume control to minimum during this adjustment.
- (5) Connect a DC voltmeter to R787 resistor's leads for left channel, or to R788 for right channel.
- (6) Adjust R751 for left channel, or R752 for right channel, so that the DC voltmeter becomes $2mV \pm 1mV$.

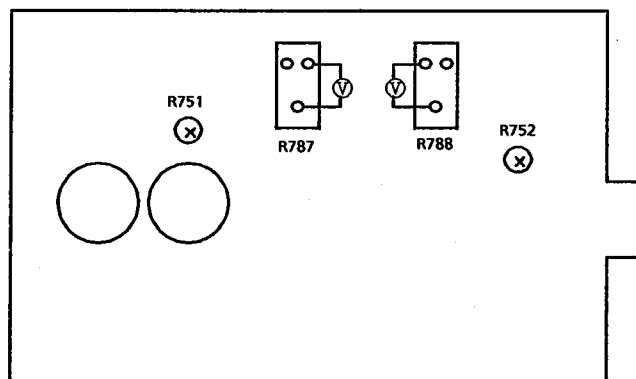

Removal Procedures

■ Removing the metal cover

1. Remove the 4 screws on both sides.
2. Remove the 2 screws located on the top of rear panel.
3. Slightly open both sides of the metal cover, to the left and right, and raise the rear side.
Then slowly lift it up and straight backward.

■ Removing the bottom plate

1. Remove the metal cover.
2. Remove the 17 screws (A & B). See Fig-1.

■ Removing the front panel

1. Remove the metal cover.
2. Remove the 9 screws (B, C, D and E).
See Fig-1 & Fig-2.
3. Pull out the main volume and balance knobs.
4. Pull out the 7 flat wires from their connectors (F).
5. Take off the lamp assembly PC Board from reflector.
6. Remove the 19 screws (G). See Fig-3.

■ Removing the power transistors

1. Remove the metal cover and the bottom plate.
2. Unsolder the defective power transistor.
3. Remove the screw holding the power transistor using a pair of pliers, a wrench or a bent screwdriver.

* Please use the same MICA SHEET (E75768-002) when replacing power transistor.

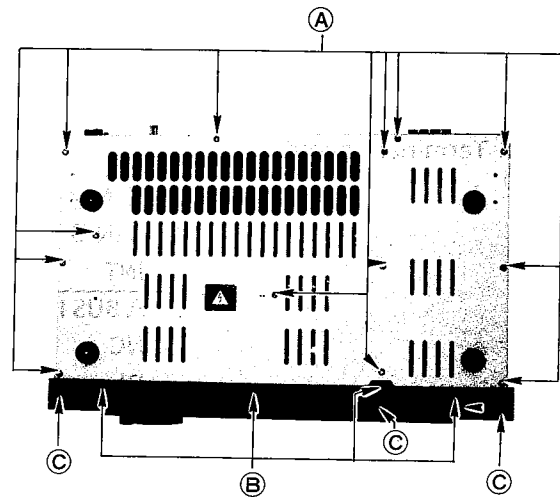


Fig. 1

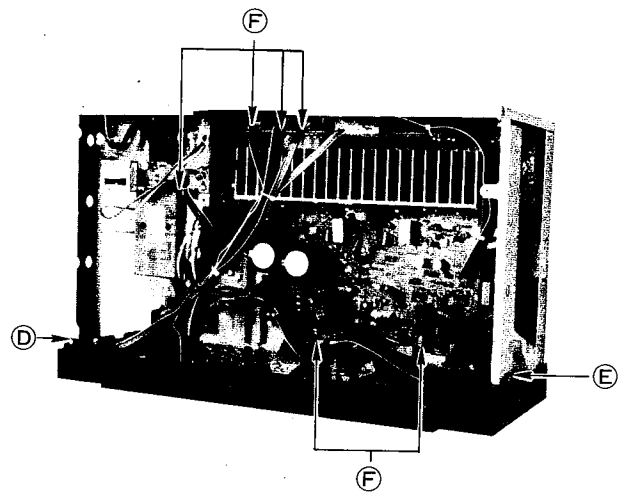


Fig. 2

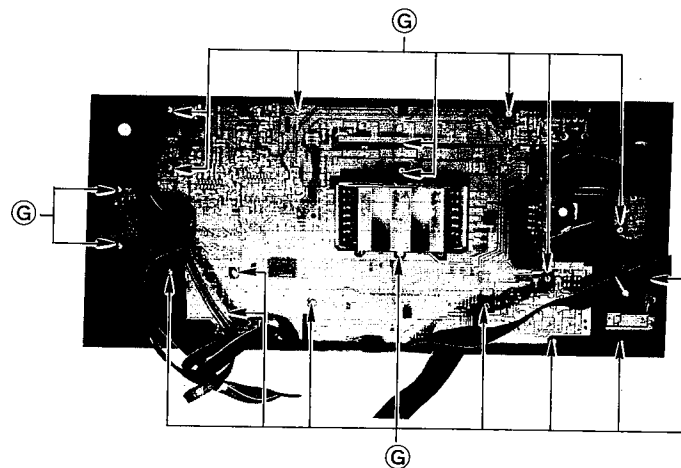


Fig. 3

Description of ICs

■ IC501 : LC6514B-4245 (Tuner control & FL Driver)

1. Terminal Layout

K IN 2	1	42	K IN 1
K IN 3	2	41	K IN 0
INT	3	40	VDD
A BUS IN	4	39	HOLD
NC	5	38	VP
DI	6	37	MUTE
CK	7	36	D8
DO	8	35	D7
CE	9	34	D6
A BUS OUT	10	33	D5
TUNED	11	32	D4
STEREO	12	31	D3
NC	13	30	D2
NC	14	29	D1
S1	15	28	D0
S2	16	27	S8
S3	17	26	S7
S4	18	25	S6
RES	19	24	S5
TEST	20	23	OSC 2
VSS	21	22	OSC 1

2. Pin functions

Pin No.	Symbol	Name	I/O	Functions and descriptions
1 ~ 2, 41 ~ 42	PA0 ~ PA3	KIN0 ~ KIN3	I	Key input
3	INT	INT	I	Interrupt at "L" level
4	PB0	A BUS IN	I	Input for DCS (COMPU LINK) system
5	PB1	NC	--	
6	PB2	D1	I	Serial Data Bus (Connect to LC 7218)
7	PC0	CK	O	Serial Data Bus (Connect to LC 7218)
8	PC1	DO	O	Serial Data Bus (Connect to LC 7218)
9	PC2	CE	O	Chip Enable Output (Connect to LC 7218)
10	PC3	A BUS OUT	O	Output for DCS (COMPU LINK) System
11	PD0	TUNED IN	I	Input for TUNED indicator
12	PD1	STEREO IN	I	Input for STEREO indicator
13	PD2	NC	--	
14	PD3	NC	--	
15 ~ 18	PE0 ~ PE3	S1 ~ S4	O	Segment output
19	RES	RES	I	Reset input
20	TEST	TEST	I	TEST mode input : GND.
21	VSS	VSS		GND.
22	OSC 1	OSC 1		Crystal oscillator
23	OSC 2	OSC 2		Crystal oscillator
24 ~ 27	PF0 ~ PF3	S5 ~ S8	O	Segment output
28 ~ 31	PG0 ~ PG3	D0 ~ D8		DIGIT OUTPUT (GRID)
32 ~ 35	PH0 ~ PH3			
36	PI0			
37	PI1	MUTE	O	"H" outputs when mute turns on
38	VP	VP		
39	HOLD	HOLD	I	Hold Request input
40	VDD	VDD		+ 5V

LA1266A (IC104) : FM AM IF AMP & detector


1. The main function descriptions

- (1) Amplify and detect of FM intermodulation frequencies.
- (2) It has local oscillator and mixer for AM, and amplify the AM-IF signal.

2. Top View

FM-IF	1	24	AM-OSC out
Bypass	2	23	AM-OSC
Bypass	3	22	V.ref
GND	4	21	AM-in
FM-DET	5	20	AM-Mix
FM-DET	6	19	AM-AGC
V _{CC}	7	18	AM-IF
SIG	8	17	AM Adj.
FM-AFC	9	16	FM Adj
FM-IF	10	15	AM out
AM-IF	11	14	NAR SM
FM-out	12	13	STRQ

3. Block Diagram

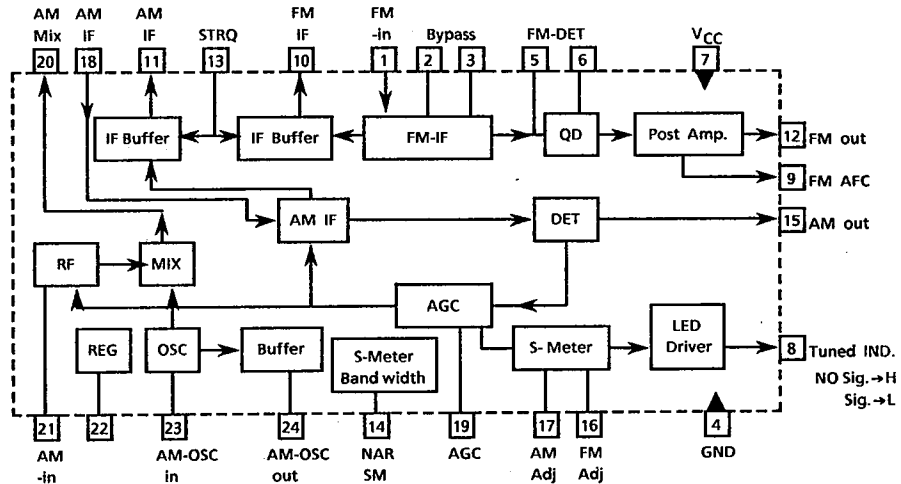

4. Pin Function Description


Pin No.	Symbol	I/O	Functions and Operations
1	FM IF	I	This is an input terminal of FM IF Signal.
2,3	Bypass		Bypass of FM IF Amp.
4	GND		This is the device ground terminal.
5,6	FM DET		FM detect transformer.
7	V _{CC}		This is the power supply terminal.
8	SIG	O	Mute drive and signal stop drive output when tuning.
9	FM AFC	O	This is an output terminal of voltage for FM -AFC.
10	FM IF out	O	When the IF REQ signal of IC102(LC7218) applies to pin13, the signal of FM IF outputs.
11	AM IF out	O	When the IF REQ signal of IC102(LC7218) applies to pin13, the signal of AM IF outputs.
12	FM out	O	FM detection output.
13	STRQ	I	The IF-signals come out from pin10 (FM-IF) or pin11 (AM-IF) while this terminal goes to "High".
14	NAR SM		Control the Band-width of signal meter.
15	AM out	O	AM detection output.
16	FM Adj		For adjust the stop level (or mute level) of FM.
17	AM Adj		For adjust the stop level (or mute level) of AM.
18	AM-IF	I	Input of AM IF Signal.
19	AM-AGC	I	This is an AGC voltage Input terminal for AM.
20	AM-MIX	O	This is an output terminal for AM mixer.
21	AM-IN	I	This is an input terminal for AM RF Signal.
22	V.REF		
23	AM-OSC		This is a terminal of AM Local oscillation circuit.
24	AM-OSC out	O	AM Local Oscillation Signal output.

■ IC102 : LC7218 (PLL Synthesizer)


1. The main function descriptions

- (1) It makes the local oscillation frequency by the control data from IC501.
- (2) Decode the control signal and transmit the signal for receiving conditions.
- (3) For the best tuning, count the internal-frequency and transmit the data to IC501.

2. Terminal Layout

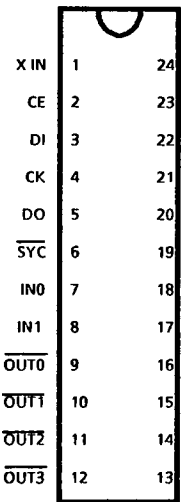

3. Block Diagram

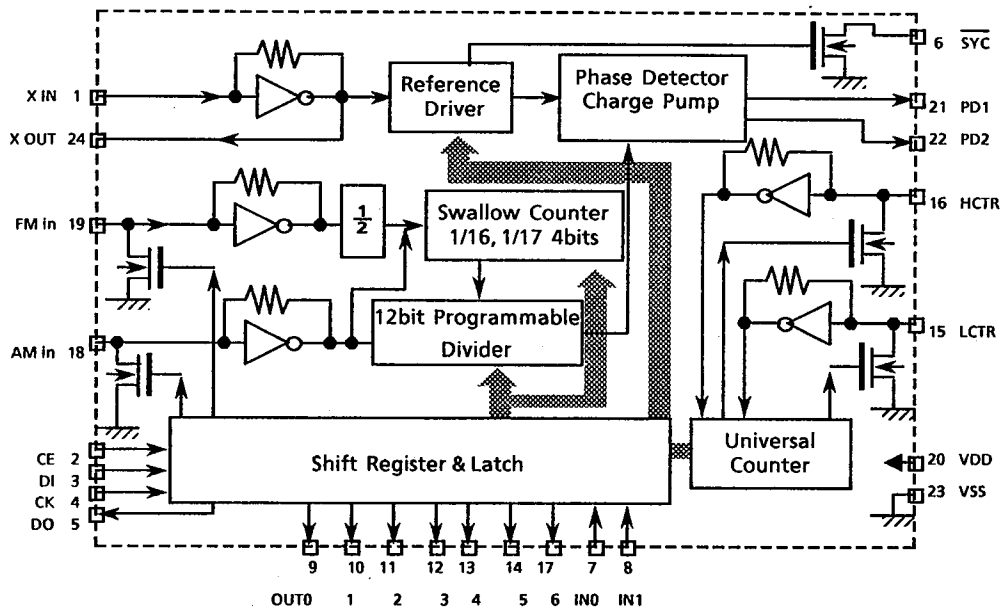

4. Pin Function Description


Pin No.	Symbol	Name	I/O	Functions and Operations
1,24	X in, X out	X in, X out	I/O	Crystal oscillator (7.2MHz).
2	CE	CE	I	Fix the chip enable to "H" when inputting (DI) and outputting (DO) the serial data.
3	DI	DI	I	Receive the control data from the controller (IC501).
4	CK	CK	I	This clock is used to synchronize data when transmitting the data of DI and DO.
5	DO	DO	O	Transmit the data from LC7218 to the controller which is synchronized with CK.
6	SYC	SYC	—	Not use
7	IN0	Tuned in	I	Receive the tuned signal from IC104 (LA1266A).
8	IN1	Stop in	I	GND
9	OUT 0	POWER	---	Not use
10	OUT 1	QSC	---	Not use
11	OUT2	MONO	---	Not use
12	OUT3	FM	O	It is "L" on FM mode.
13	OUT4	MW	O	It is "L" on AM mode.
14	OUT5	LW	—	Not used.
15	LCTR	AM-IF	I	Universal counter input for AM-IF from IC104 (LA1266A).
16	HCTR	FM-IF	I	Universal counter input for FM-IF from IC104(LA1266A).
17	OUT6	IF REQ	O	Output the "IF-signal request" to IC104 when the pin-7 (tuned in) goes to "H".
18	AM in	AM osc	I	Input the local oscillator signal of AM.
19	FM in	FM osc	I	Input the local oscillator signal of FM.
20	V _{DD}	V _{DD}	—	This is a terminal of power supply.
21	PD1	PD1	O	PLL charge pump output : When the local oscillator signal frequency is higher than the reference frequency, high level signals will output. When it is lower than the reference frequency, low level signals will output. When it is same as reference frequency signals, it will be floating.
22	PD2	PD2	O	Not use
23	V _{SS}	V _{SS}	—	GND

■ IC105 : LA3401 (FM MPX Detector)

1. The main function descriptions

- (1) Detect the FM Multiplex Signal (Stereo signal).
- (2) When receiving FM Stereo Signal, it outputs the signal for indicator.
- (3) AM/FM Audio Amplifier.

2. Top View & Block Diagram

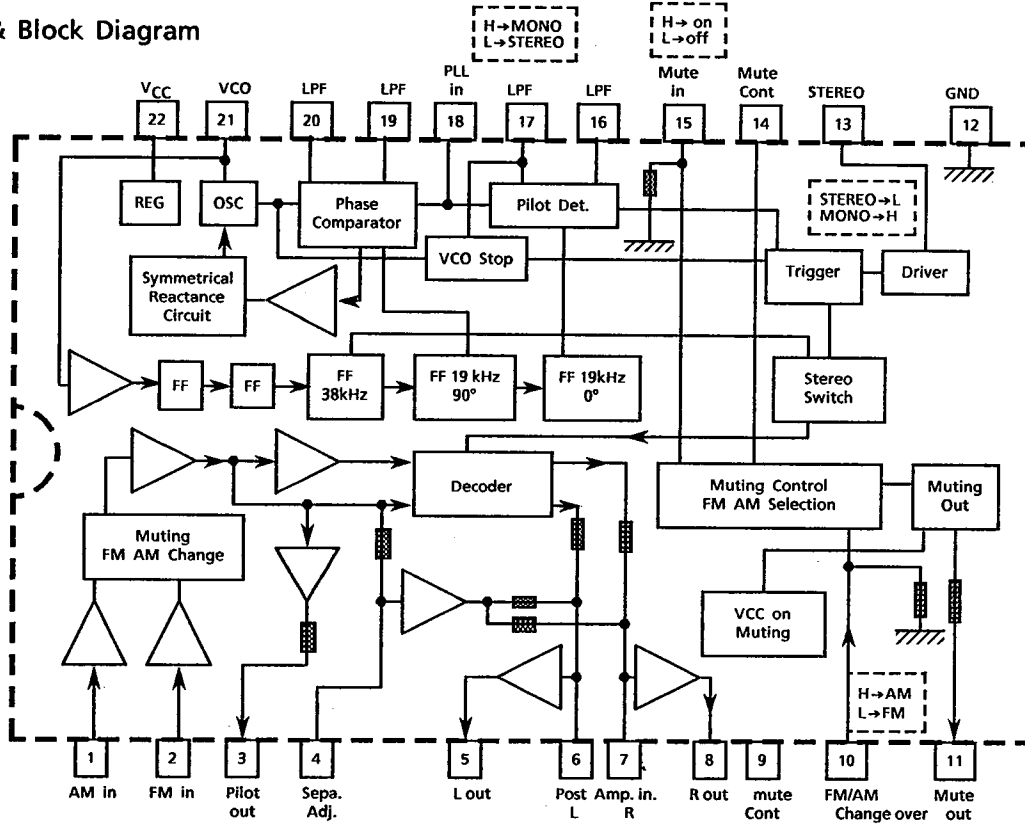


3. Pin Function Description

Pin No.	Symbol	I/O	Functions and Operations
1	AM in		This is an input terminal for AM detection signal.
2	FM in		This is an input terminal for FM detection signal.
3	Pilot out		Output of MPX pilot signal (Connect to Pin18).
4	Sepa. Adj.		Separation adjustment.
5	L out	O	Left channel signal output.
6	L	O	Reversal output of Pin5.
7	R	O	Reversal output of Pin8.
8	R out	O	Right channel signal output
9	Mute Cont		The mute time is controlled by the connected capacitor when turning the power switch on.
10	FM/AM	I	Change over the FM/AM input. "H" : AM, "L" : FM
11	Mute out	---	Not use
12	GND		Ground terminal.
13	Stereo	O	Stereo indicator output. Stereo : "L", Mono : "H"
14	Mute Cont		The mute time is controlled by the connected capacitor when changing over the FM/AM .
15	Mute in	I	Mute signal input. "H" : Mute on, "L" : Mute off.
16	LPF		Low pass filter of pilot detector.
17	LPF		While this terminal goes to "H", the VCO stop.
18	Pilot in		PLL input.
19	LPF		Loop filter of PLL.
20	LPF		Loop filter of PLL.
21	VCO		Voltage controlled oscillator terminal.
22	V _{CC}		Power supply.

■ μ PD75104G554-1B (IC411) : System Controller

1. Top view

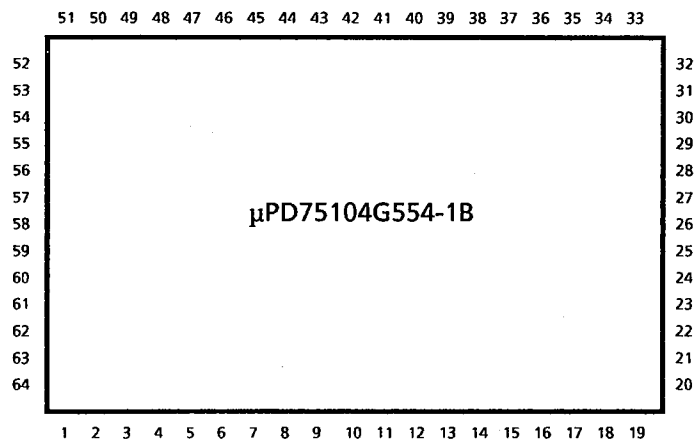


2. Pin Function

Pin No.	Symbol	I/O	Functions
1	P41	—	
2	P40	O	TAPE 1 indicator
3	P53	O	CD indicator
4	P52	—	
5	P51	O	TUNER indicator
6	P50	O	PHONO indicator
7	RESET	I	RESET : Active low
8	X2	—	Clock resonator
9	X1	—	Clock resonator
10	P63	—	None connection
11	P62	—	None connection
12	P61	—	None connection
13	P60	—	None connection
14	P73	—	None connection
15	P72	—	None connection
16	P71	I/O	Key in
17	P70	I/O	Key in
18	P83	O	AC relay On/Off
19	P82	—	None connection
20	P81	—	None connection
21	P80	—	None connection
22	P93	—	
23	P92	O	MUTE for Source changeover
24	P91	O	VOL down
25	P90	O	VOL up
26	V _{SS}	—	GND
27	P13/INT3	I	DCS in
28	P12/INT2	—	GND
29	P11/INT1	I	RM in
30	P10/INT0	I	INH
31	PTH03	—	GND
32	PTH02	—	GND


Pin No.	Symbol	I/O	Functions
33	PTH01	—	GND
34	PTH00	—	GND
35	T10	—	GND
36	T11	—	GND
37	P23	O	DCS out
38	P22	—	None connection
39	P21	—	None connection
40	P20/PT00	O	STB for IC302
41	P03/PT00	—	GND
42	P02/PY00	O	DATA for IC302
43	P01/SCK	O	CK for IC302
44	P00/INT4	—	GND
45	P123	I	Pull up
46	P122	I	Key in
47	P121	I	Pull up
48	P120	I	Key in
49	P133	I	Key in
50	P132	I	Pull up
51	P131	I	Key in
52	P130	I	Key in
53	P143	I	Pull down
54	P142	I	Pull down
55	P141	I	Pull up
56	P140	I	Pull down
57	NC	—	
58	V _{DD}	—	
59	P33	O	RM +5V IND : REMOCON indicator
60	P32	O	VOL IND : Volume indicator
61	P31	O	Pull up
62	P30	O	TAPE 2 indicator
63	P43	O	
64	P42	O	

■ LB1639-CV (IC421) : Motor Drive

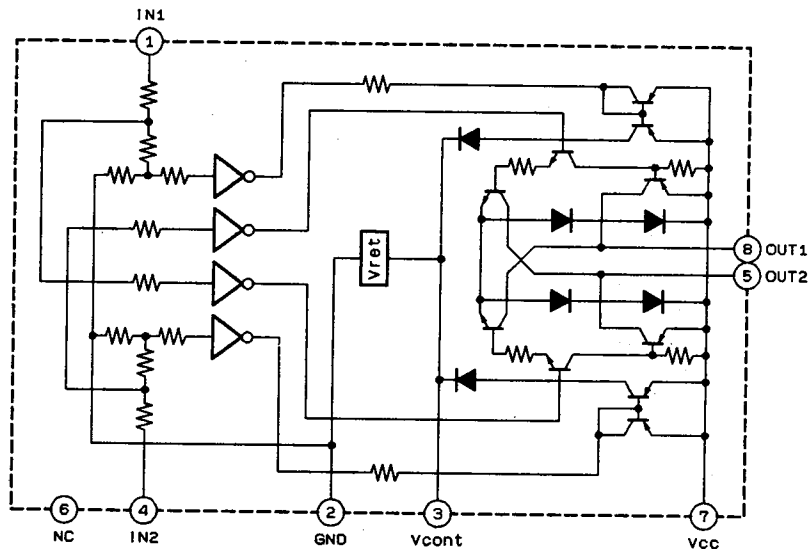


IN 1	IN 2	OUT 1	OUT 2	MOTOR
H	L	H	L	CLOCKWISE
L	H	L	H	COUNTER-CLOCKWISE
H	H	OFF	OFF	WAITING
L	L	OFF	OFF	WAITING


■ μ PC1237HA (IC901) : Protector

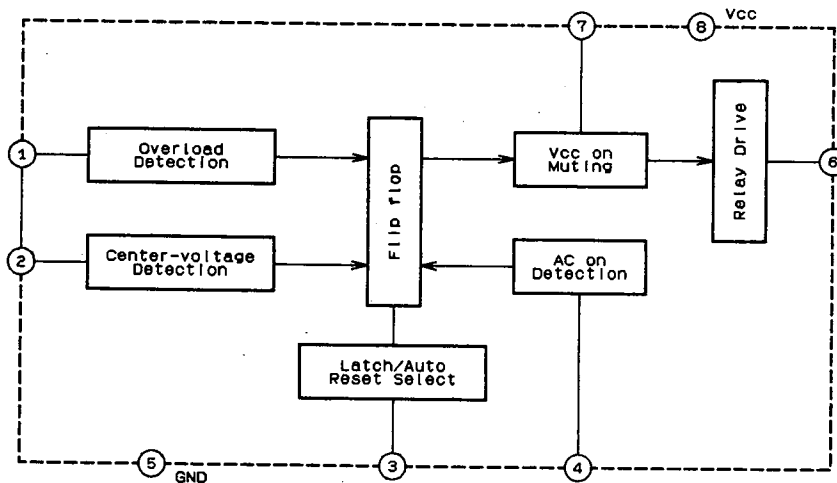


■ BA3812L (IC551, IC552) : SEA Equalizer Amplifier

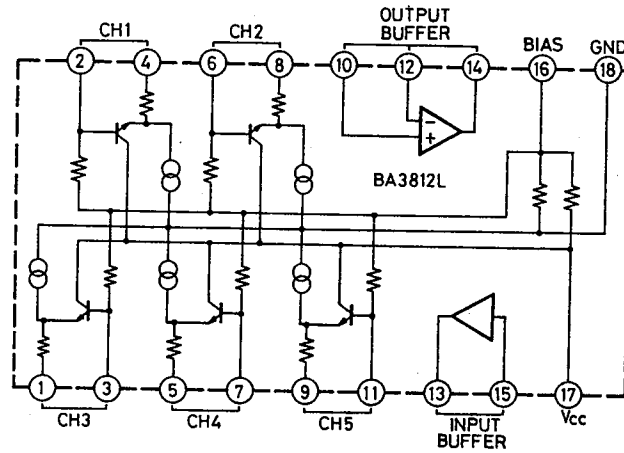

■ IR2E19 (IC401, IC402) : LED Driver

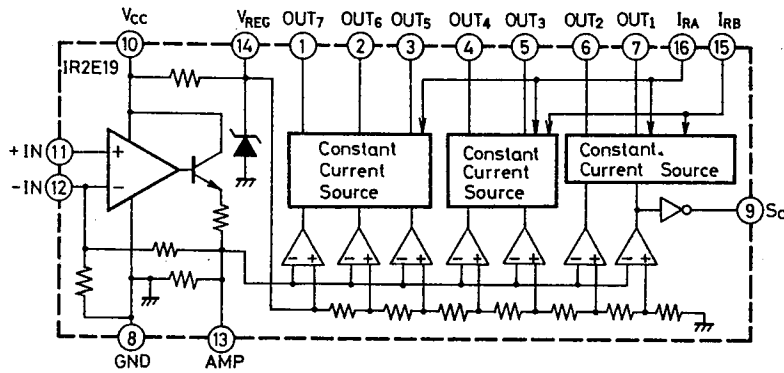


■ EAF2203-001 (FE101) : FM Front-End

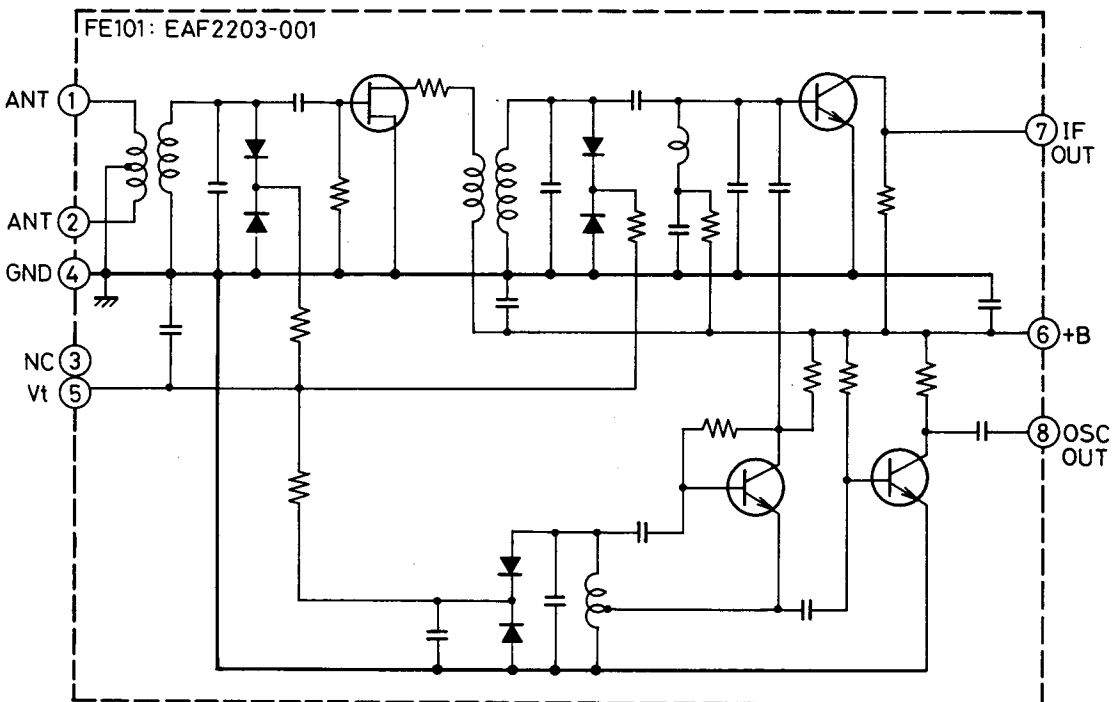

Internal Connections of the FL Display Tube

■ ELU0001-077 (FL501)

(1) Grid Layout

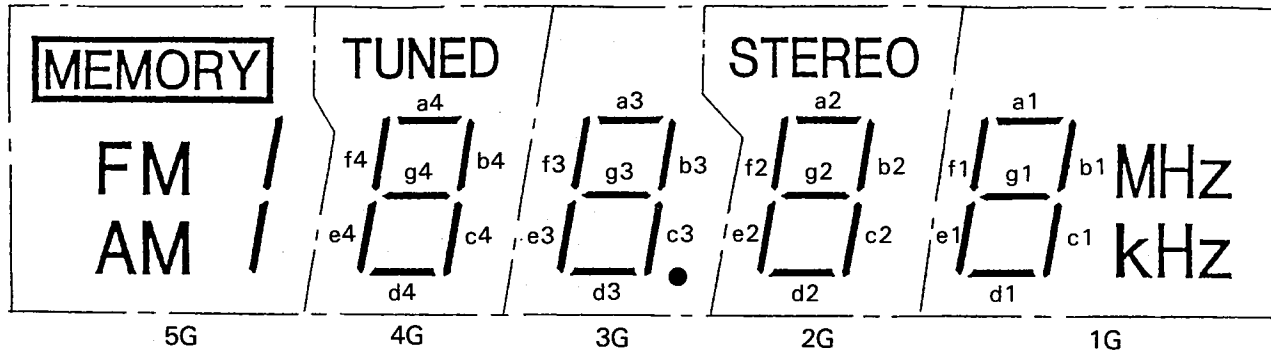

(2) Pin Connections

Pin No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Electrode	F	F	NP	NC	5G	S4	5G	S3	4G	S2	S1	3G	S5	NC	2G	NC	S6	1G


Pin No.	19	20	21	22	23	24
Electrode	S7	1G	S8	NP	F	F

(3) Anode Connection Table


	5G	4G	3G	2G	1G
S1	/	TUNED	●	STEREO	/
S2	/	a4	a3	a2	/
S3	/	b4	b3	b2	MHz
S4	MEMORY	c4	c3	c2	kHz
S5	/	d4	d3	d2	g1
S6	FM	e4	e3	e2	f1, c1
S7	AM	f4	f3	f2	b1, e1
S8	/	g4	g3	g2	a1, d1

Remote Control Unit (RM-SR85U)

■ Schematic Diagram

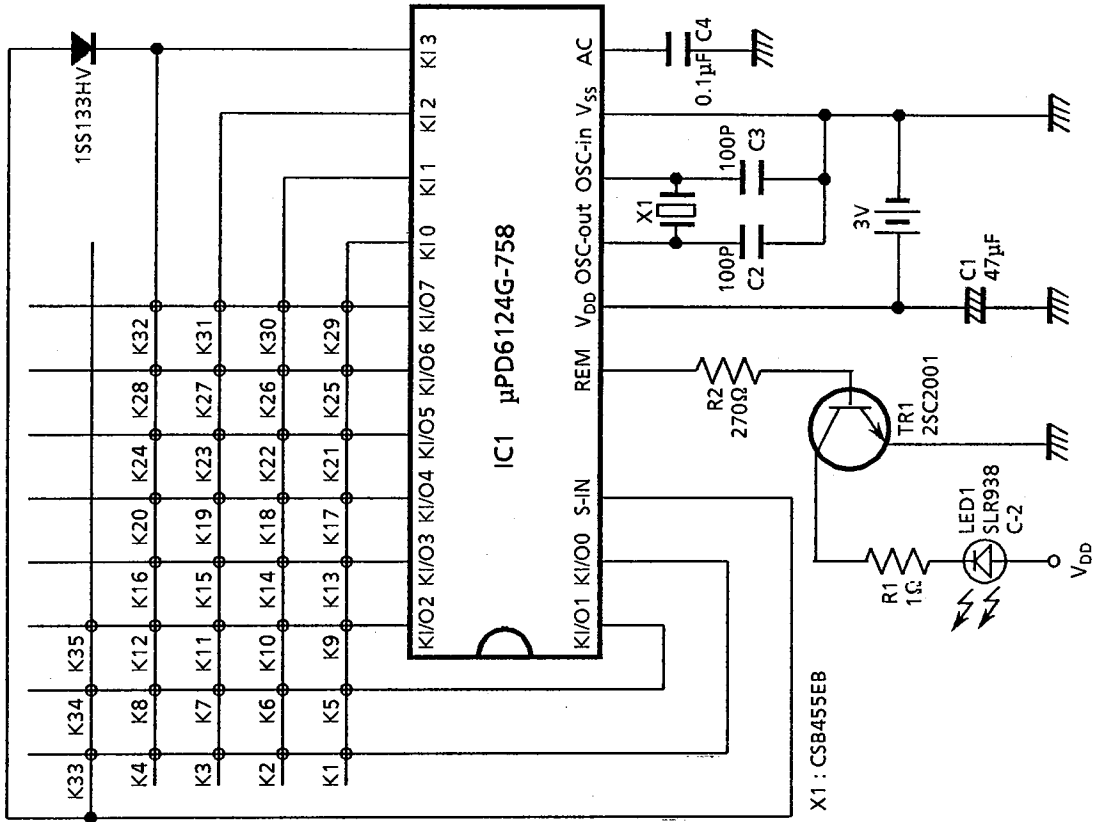


■ Key Layout

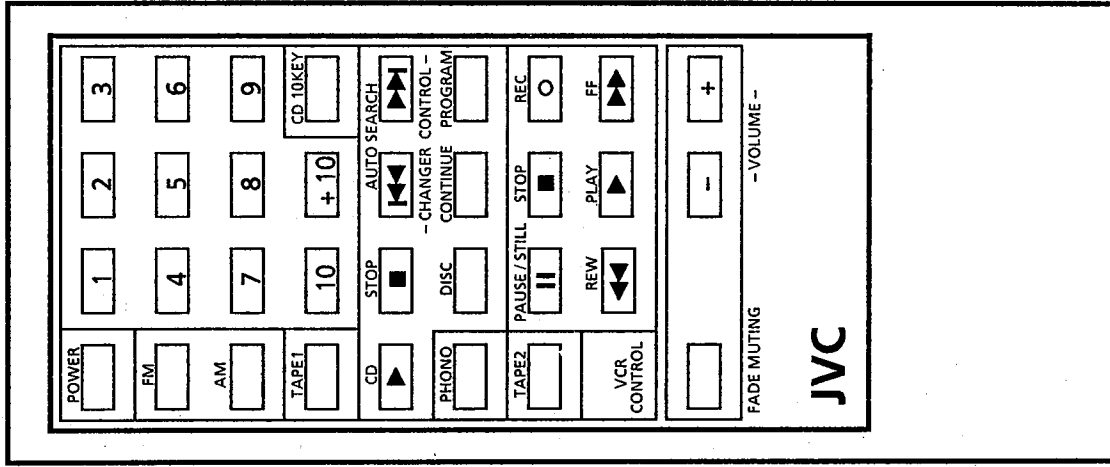

KEY NO.	KEY FUNCTION
1	POWER
2	1
3	2
4	3
5	FM
6	4
7	5
8	6
9	AM
10	7
11	8
12	9
13	TAPE 1
14	10
15	+10
16	10 KEY
17	CD
18	STOP
19	◀ AUTO SEARCH
20	▶ AUTO SEARCH
21	PHONO
22	DISC
23	CONTINUE
24	PROGRAM
25	TAPE 2
26	PAUSE/STILL
27	STOP
28	REC
29	—
30	◀
31	▶ PLAY
32	▶▶
33	FADE
34	VOL. -
35	VOL. +


RX-R85BK
RX-R85XBK

RX-R85BK
RX-R85XBK

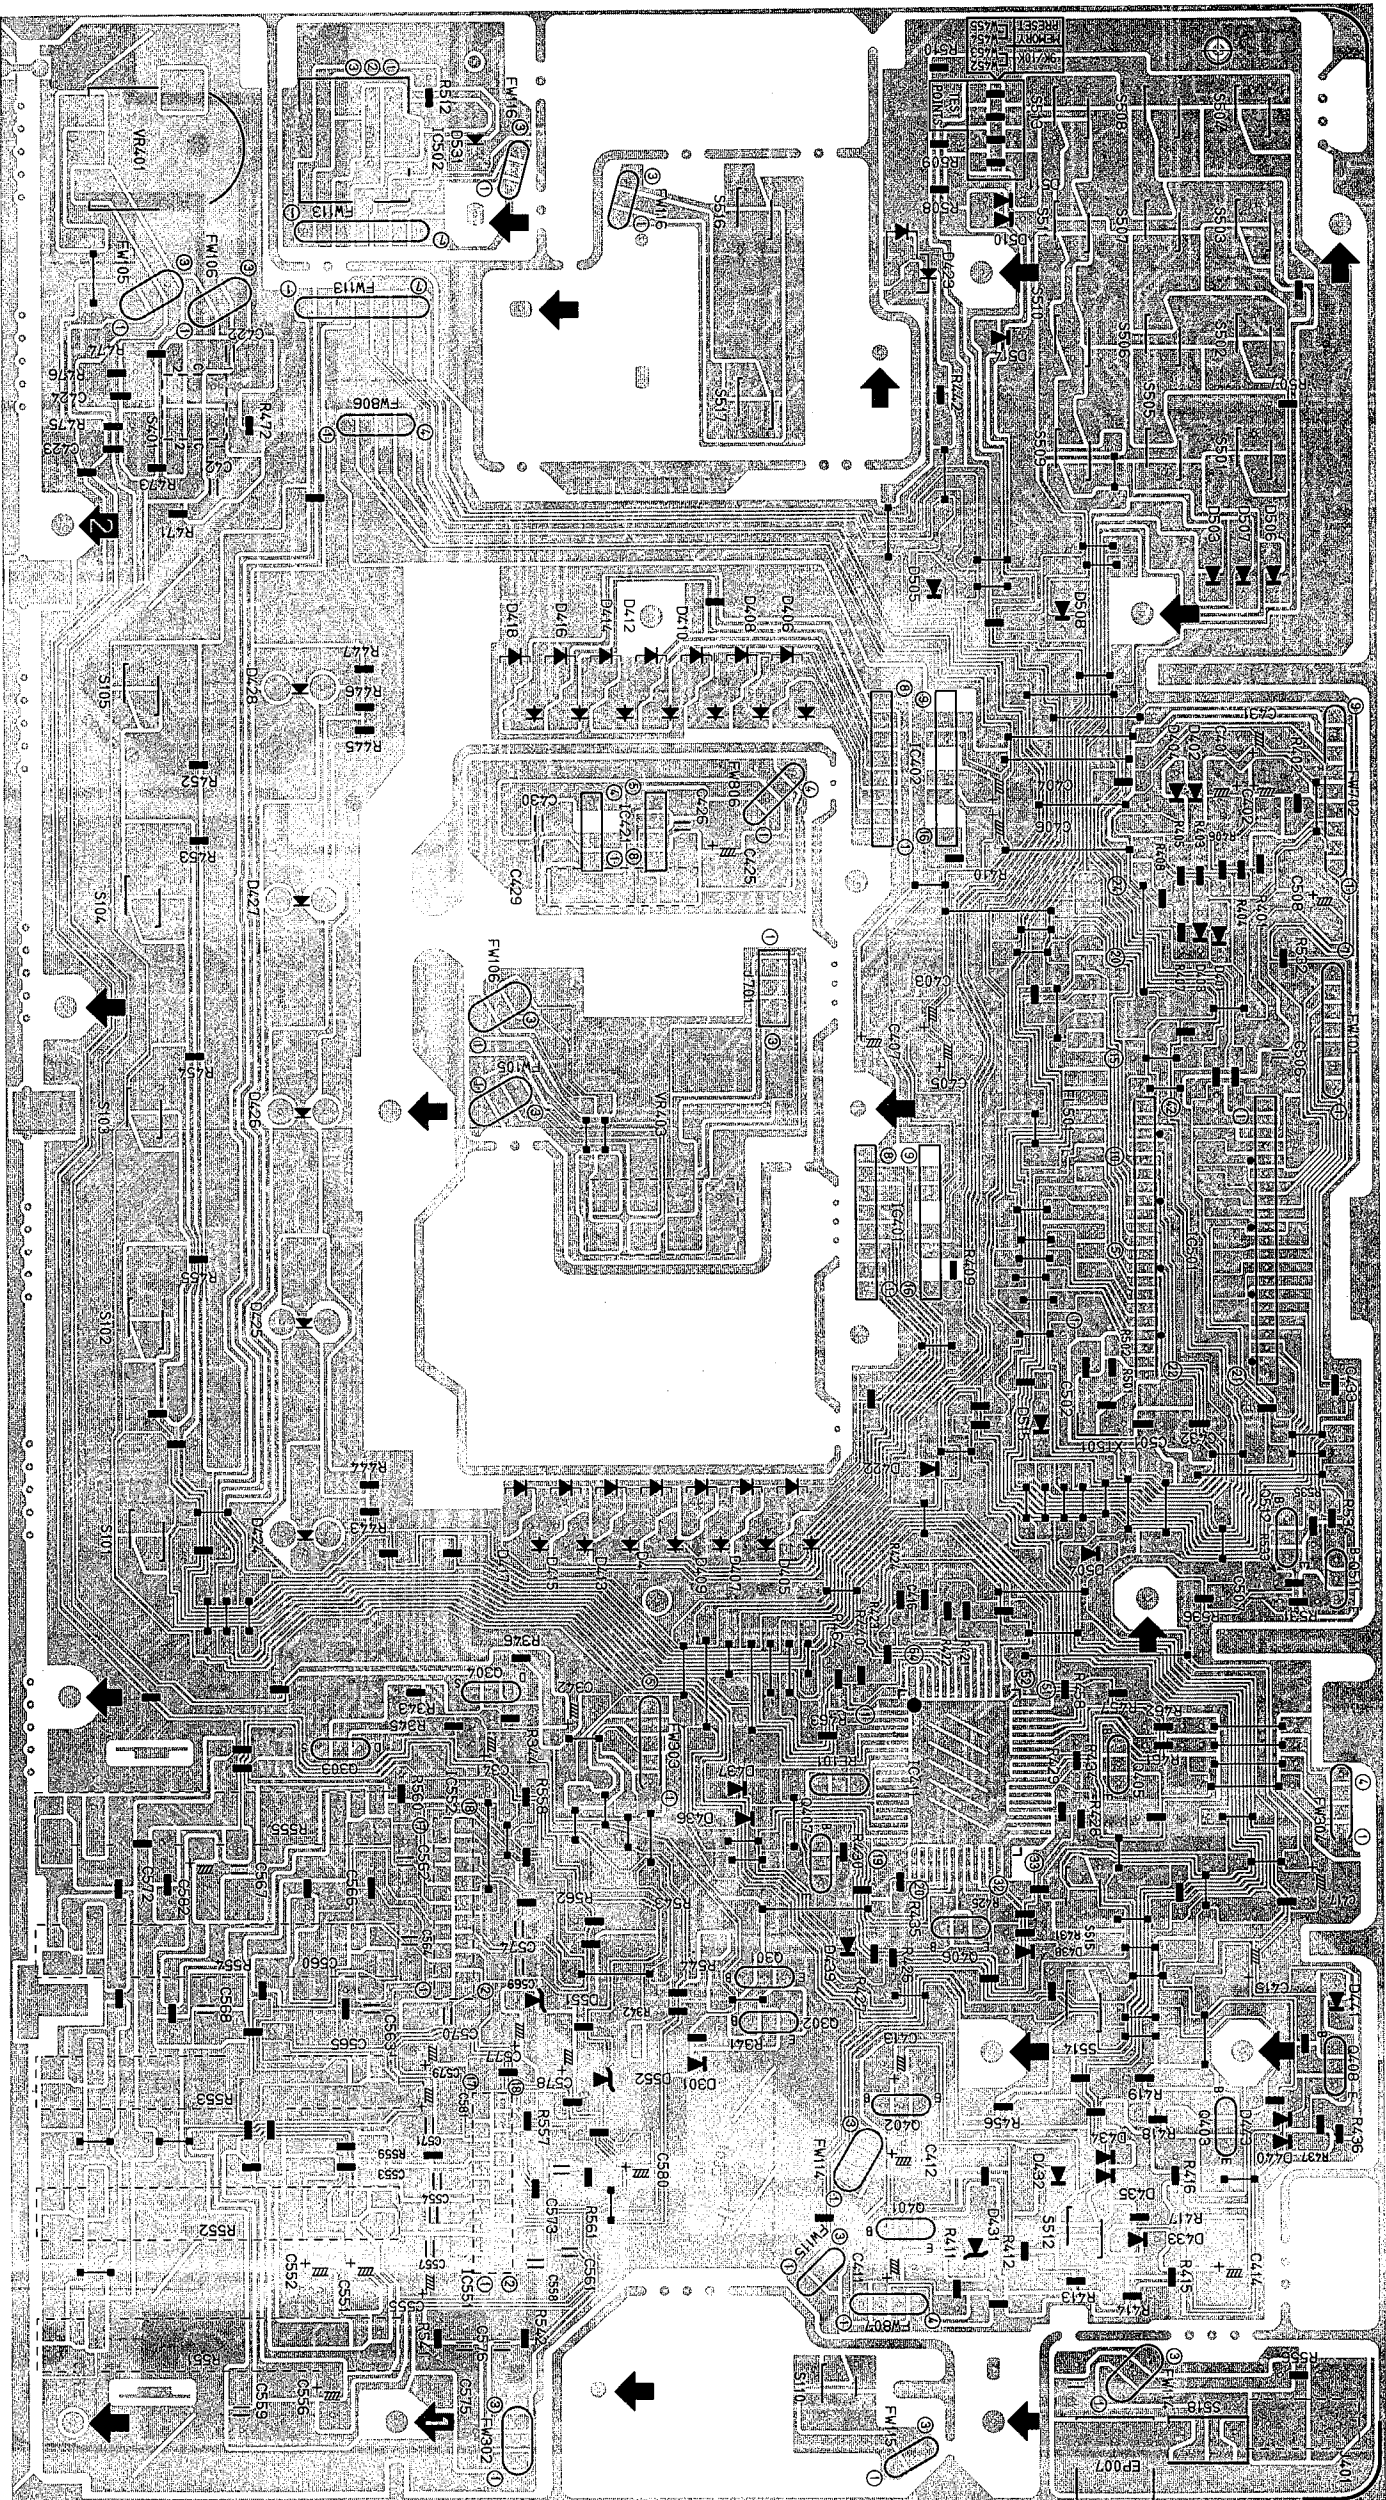


Printed Circuit Board Ass'y

■ Power Amplifier PC Board Ass'y ENH-141

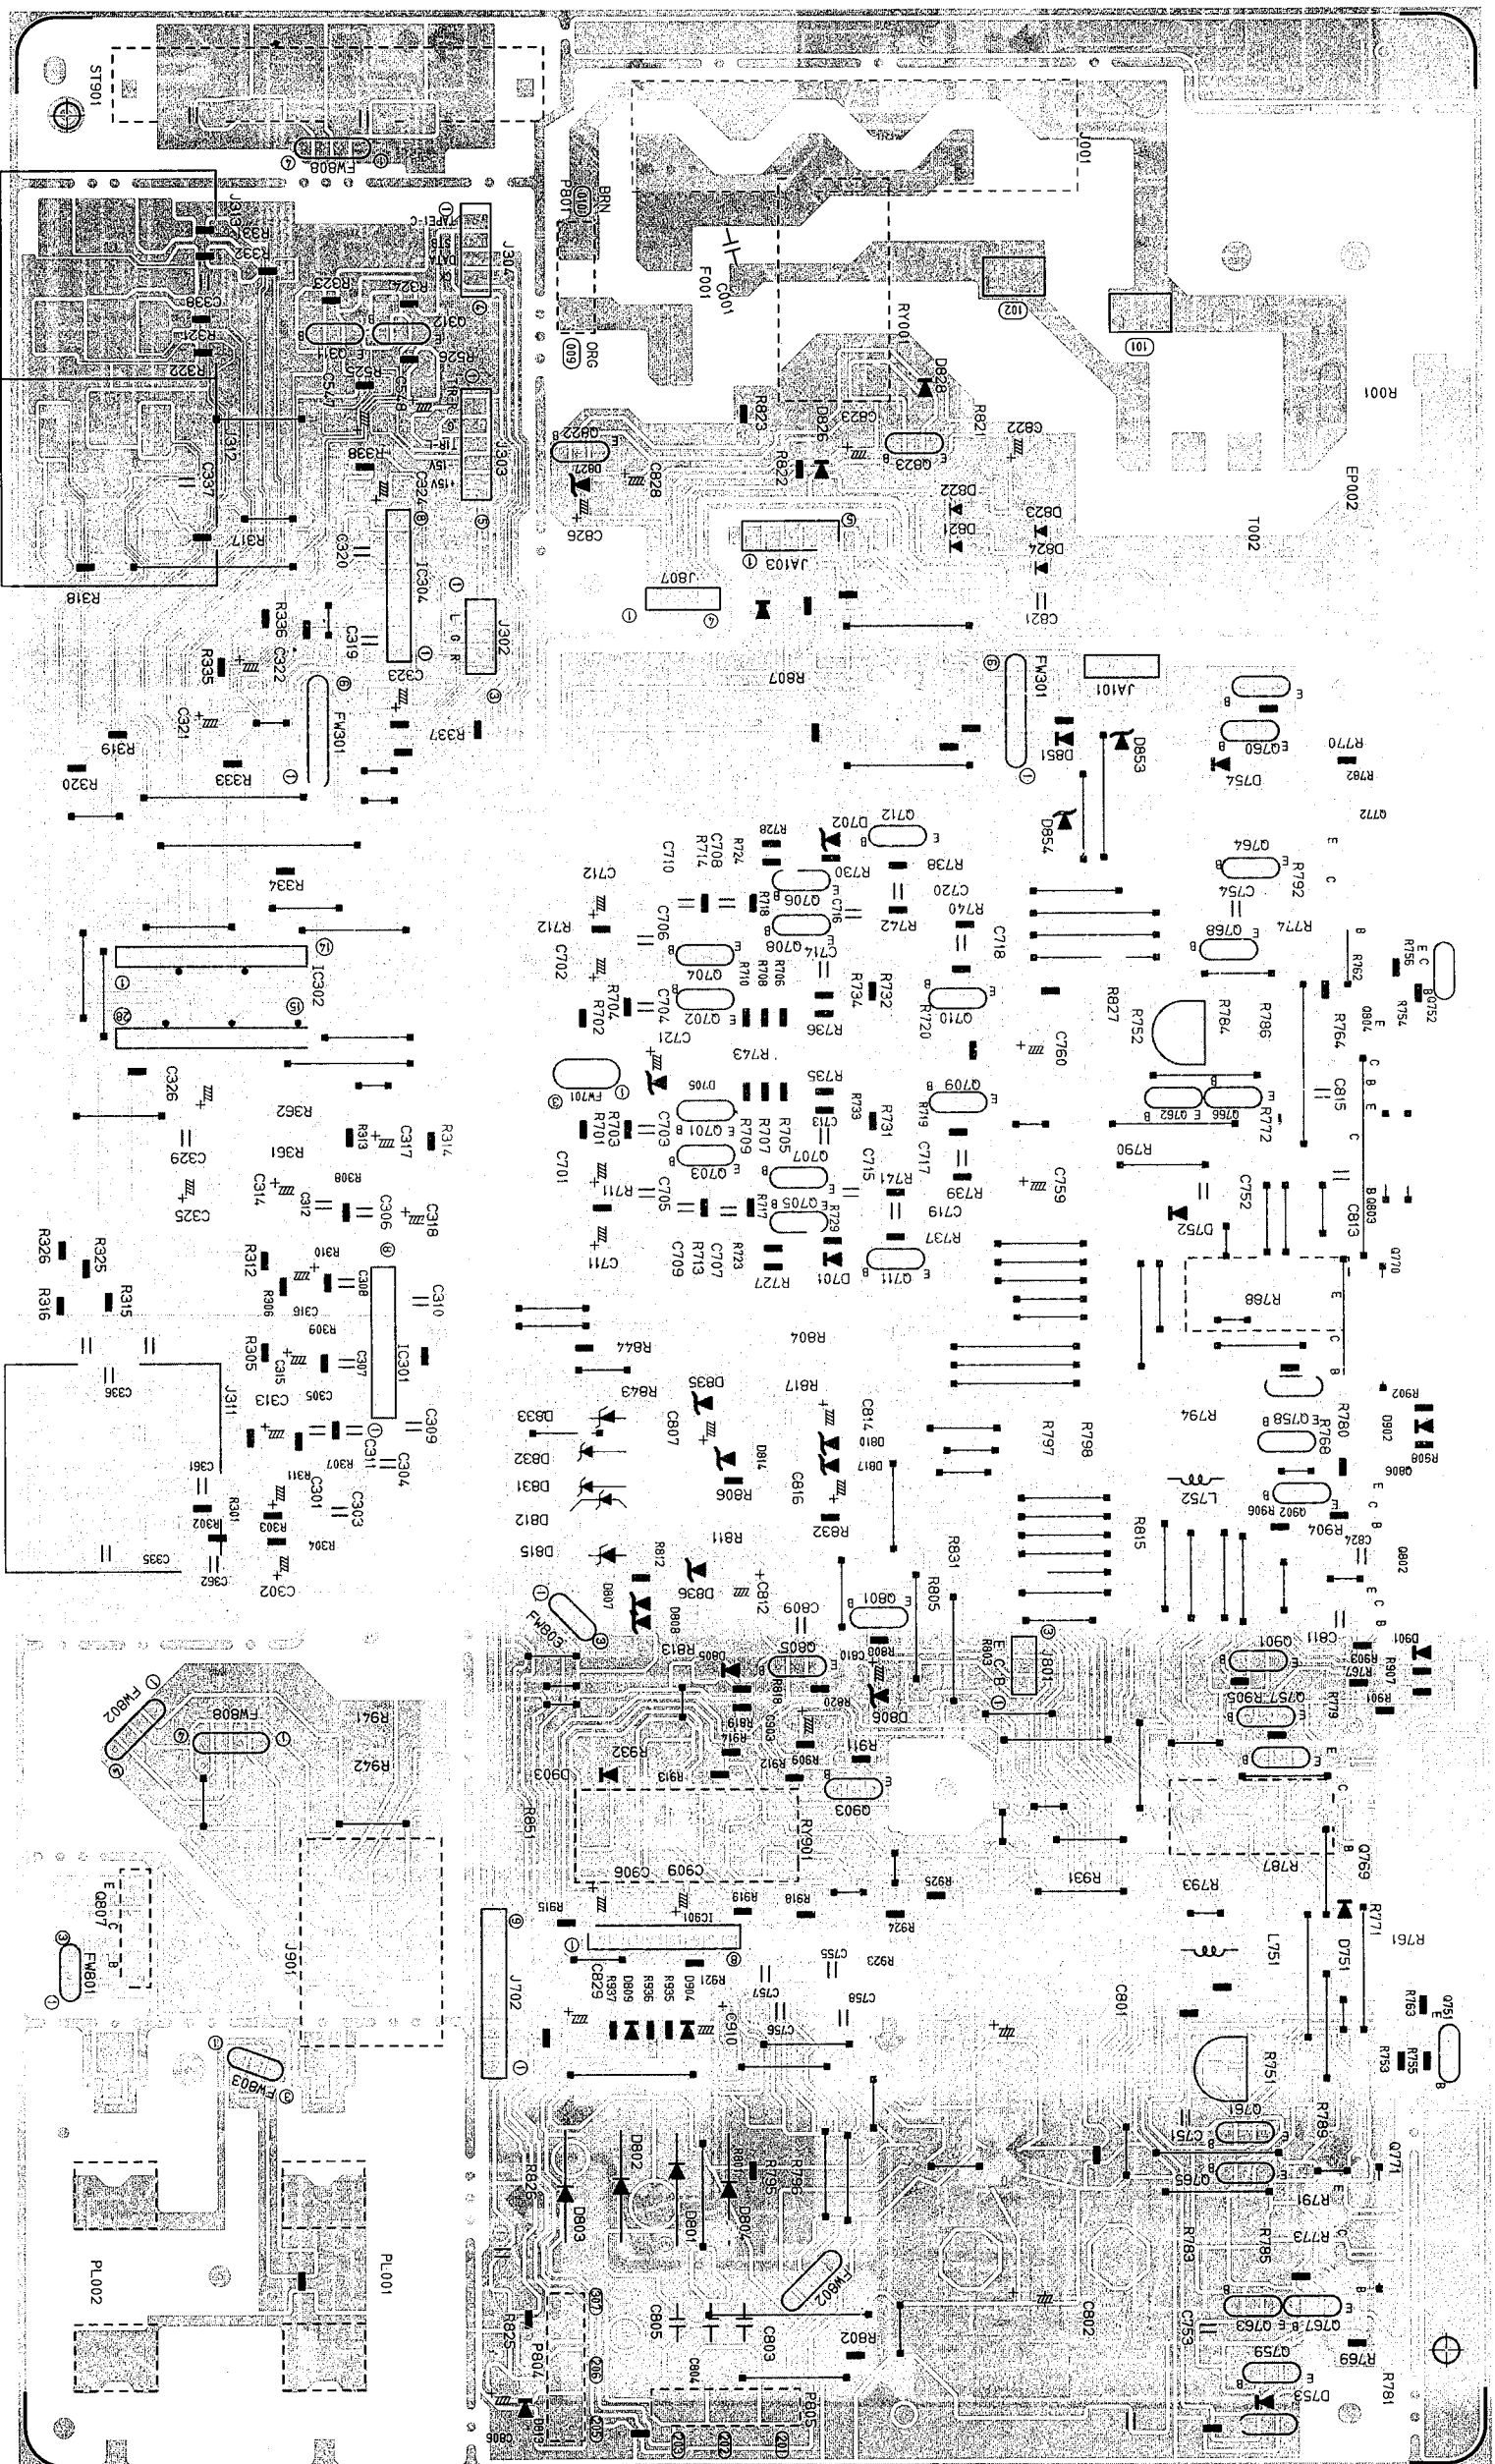

Connecting Diagram

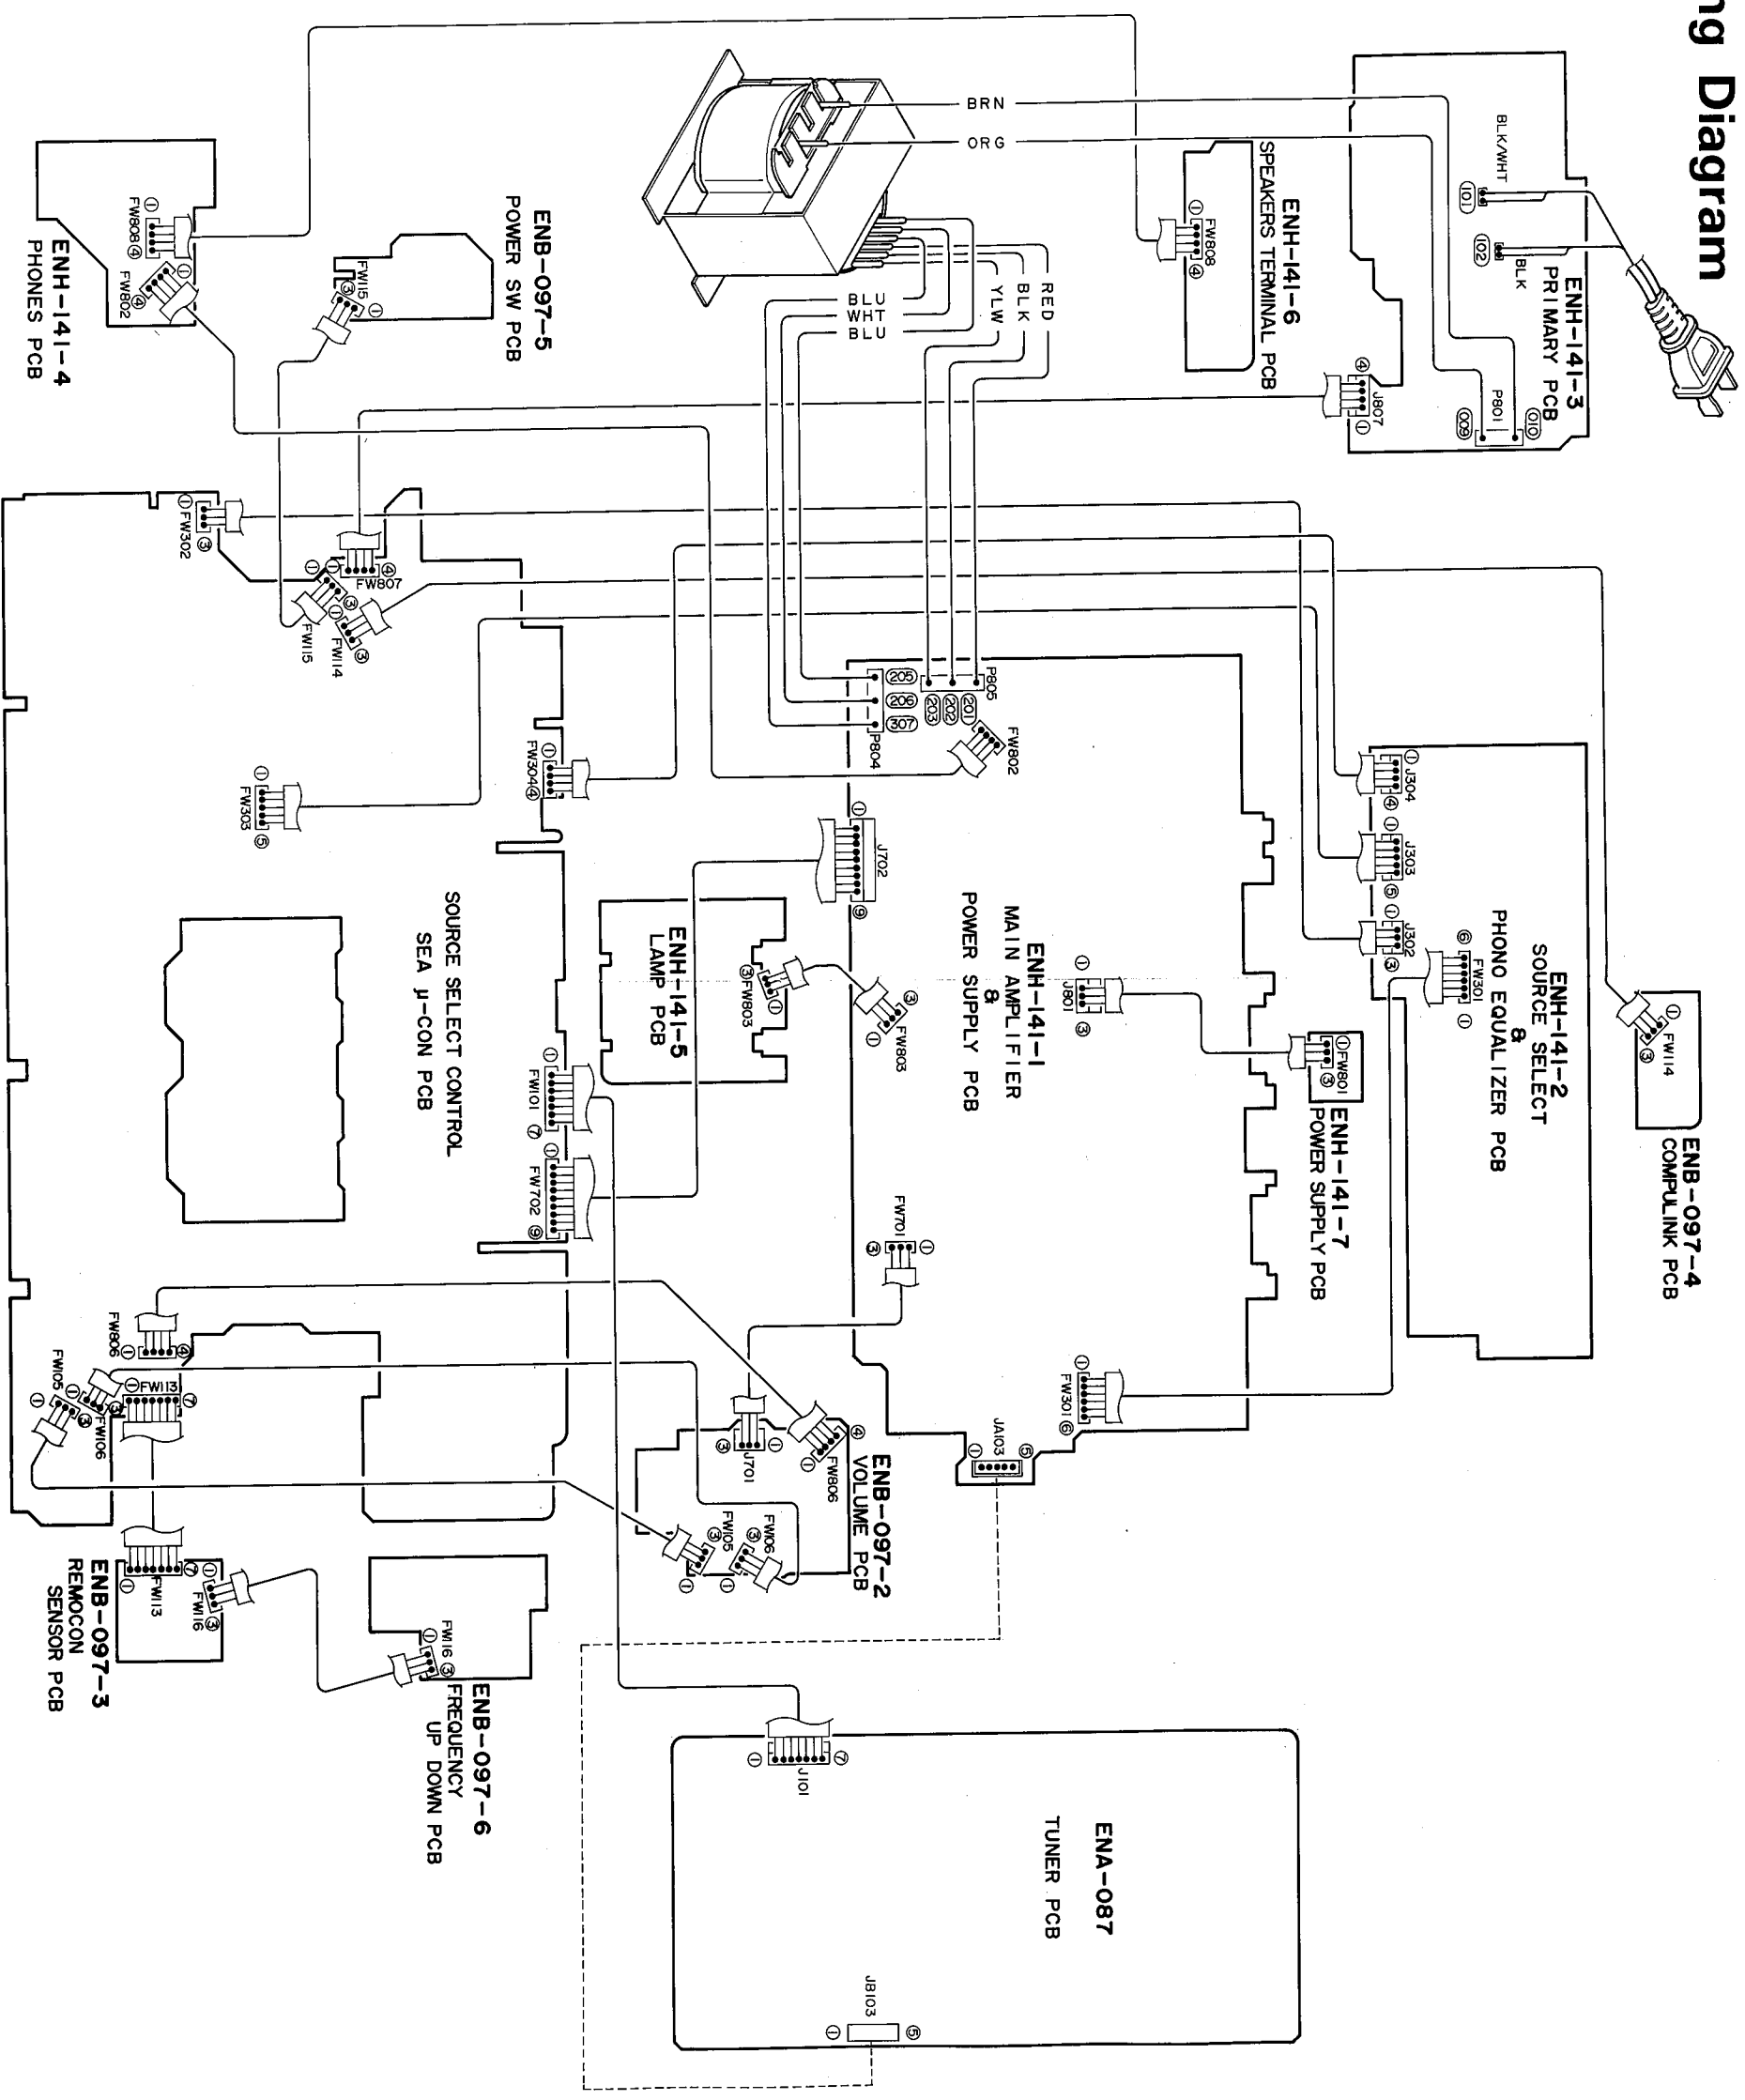


RX-R85BK
RX-R85XBK
RX-R85BK
RX-R85XBK

(No.20137)

(No.20137)

■ Tuner PC Board Ass'y ENA-087

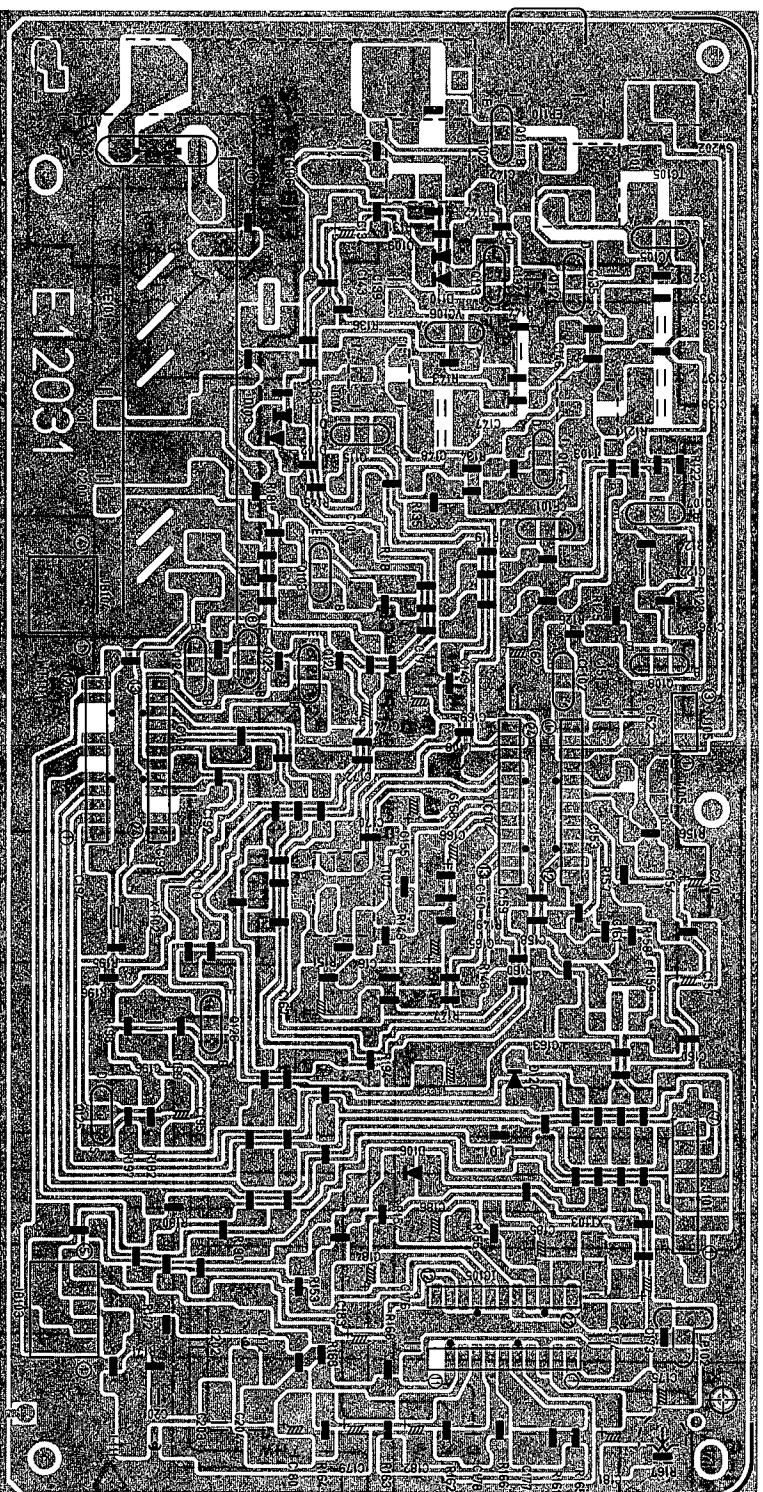


PARTS LIST

Contents

General Exploded View and Parts List	2- 2
Printed Circuit Board Ass'y and Parts List	2- 4
■ ENH-141 □ Power Amplifier PC Board Ass'y	2- 4
■ ENA-087 A Tuner PC Board Ass'y	2- 7
■ ENB-097 □ Front PC Board Ass'y	2- 9
Packing Materials and Part Numbers	2-12
Accessories List	2-12

General Exploded View and Parts List

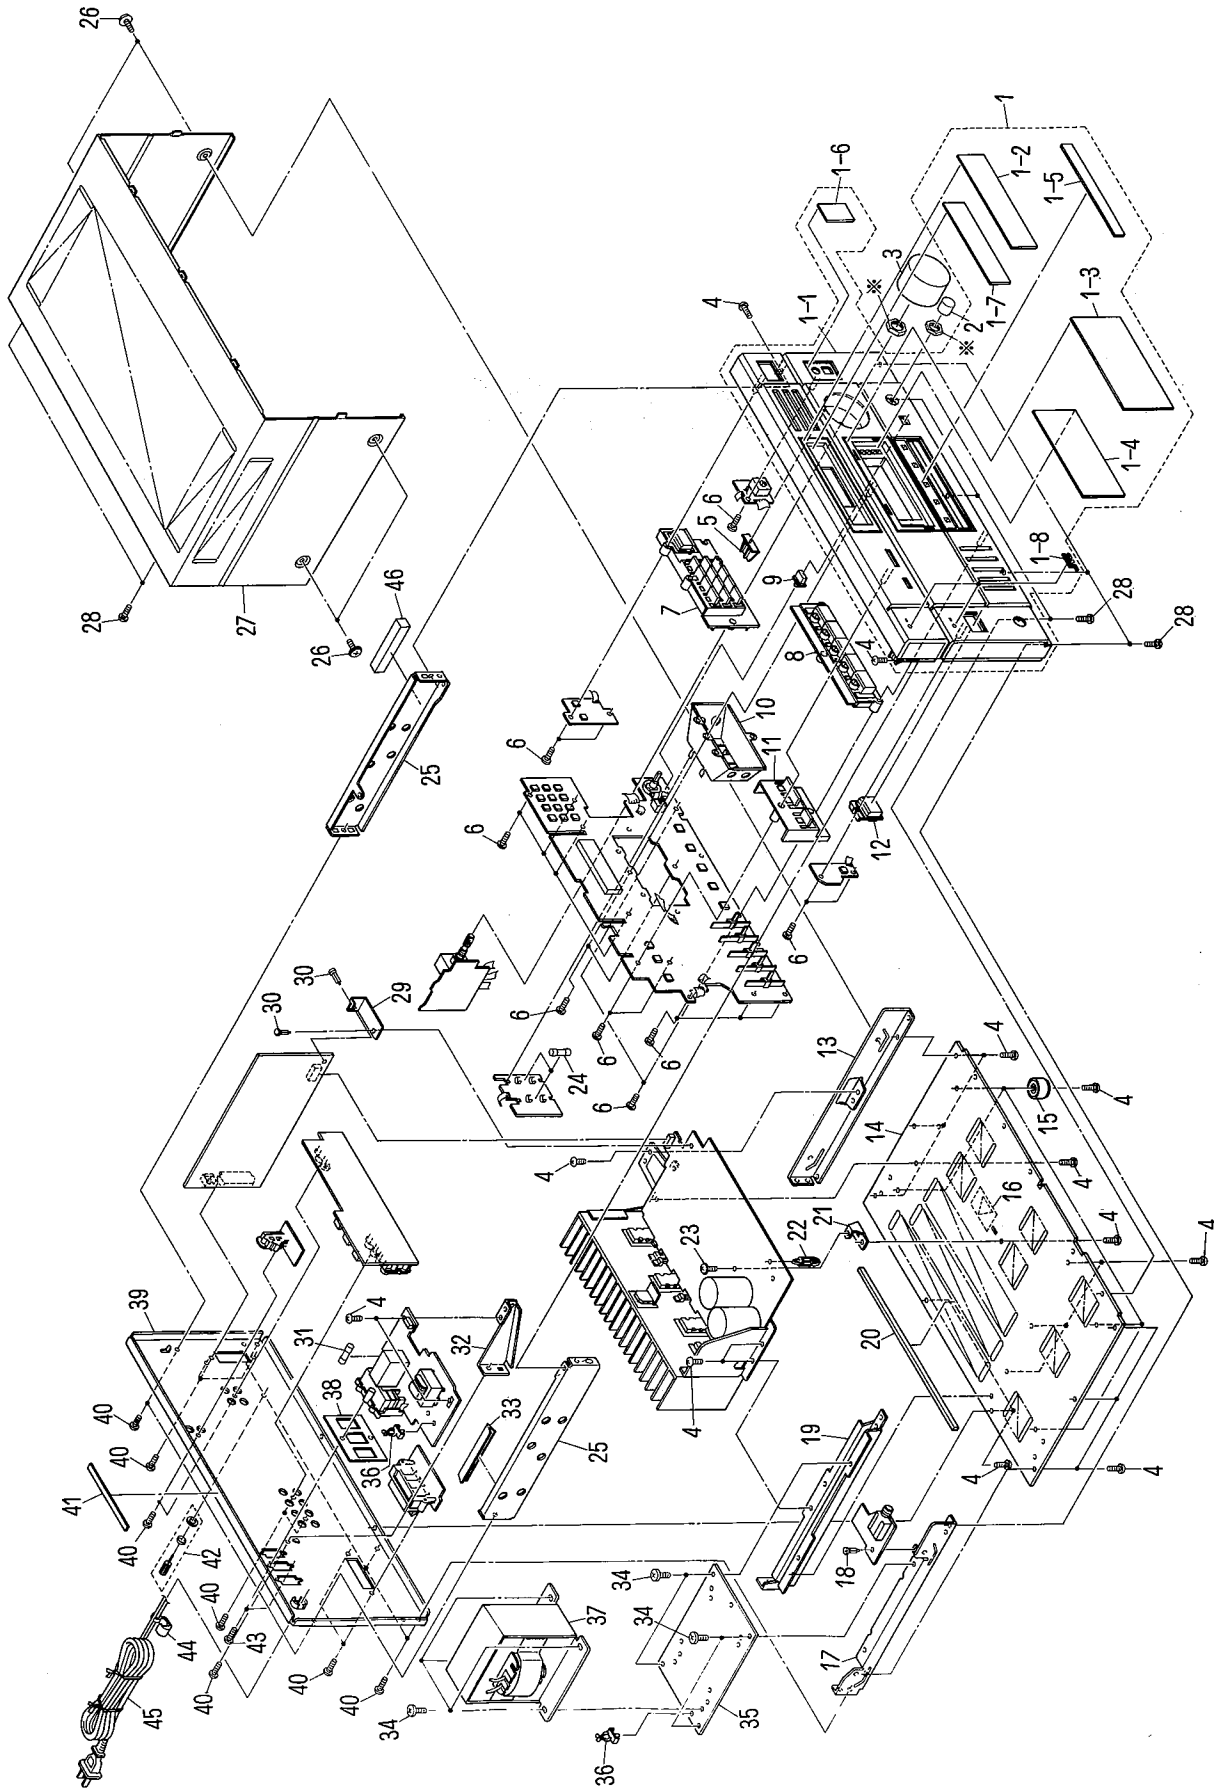

※ mark indicates attached part.

■ Parts List

△	Item	Part Number	Part Name	Q'ty	Description	Areas
	1	EFP-RXR85BKJ (S)	Front Panel Ass'y	1		J
		EFP-RXR85XBKC (S)	Front Panel Ass'y	1		C
	1-1	E12166-003	Front Panel	1		J
		E12166-004	Front Panel	1		C
	1-2	E306578-001	Window Screen	1		
	1-3	E75745-001	Window Screen	1		
	1-4	E75747-001	Indicator Sheet	1		
	1-5	E75749-001	Indicator Plate	1		
	1-6	E75751-001	Indicator Plate	1		
	1-7	E75786-001	FL Screen	1		
	1-8	E72968-001	JVC Mark	2		
	2	E305797-001	Volume Knob	1		
	3	E74657-001	Knob	1		
	4	SBSG3008CC	Screw	22		
	5	E75753-001	Indicator	1		
	6	SDSF2608Z	Screw	19		
	7	E26600-001	Push Button	1		
	8	E26601-001	Push Button	1		
	9	E75133-001	Push Button	1	LOUDNESS	
	10	E306567-001	Reflector	1		
	11	E306566-001	Push Button	1		
	12	E305741-001	Power Button	1		
	13	E306570-001	Side Bracket	1	Right	
	14	E12168-001	Bottom Plate	1		
	15	E47227-020	Foot	4		
	16	E70281-001	Caution Label	1		J
	17	E306569-001	Side Bracket	1	Left	
	18	E48729-008	Plastic Rivet	1		
	19	E306571-001	Center Bracket	1		
	20	EXO255005N60S02	Spacer	1		
	21	E68587-008	Bracket	1		
	22	E49248-004	Fastener	1		
	23	GBSB3008CC	Screw	1		
	24	ELP4101-003	Fuse Lamp	2	PL001 , PL002	
	25	E306576-001	Side Frame	2		
	26	E61660-004	Special Screw	4		
	27	E26604-001	Metal Cover	1		
	28	SBSG3008M	Screw	8		
	29	E75881-001	Circuit Board Bracket	1		J
	30	E48729-008	Plastic Rivet	2		
△	31	E48729-001	Plastic Rivet	2		C
		QMF51U1-6R3	Fuse	1	F001	
	32	E306682-001	Circuit Board Bracket	1		
	33	EXO050010H05S11	Spacer	1		
	34	E65389-004	Special Screw	8		
△	35	E306572-001	Trans Bracket	1		
	36	QHW2052-001	Wire Clamp	2		
	37	ETP1200-40JAJ	Power Transformer	1	T001	J
	38	E69589-010	Spacer	1		J
	39	E26602-001	Rear Panel	1		
	—	E26602-002	Rear Panel	1		C
		E67199-001	Caution Label	1		J
		E65507-001	Caution Label	1		C
	40	E73273-007	Special Screw	16		
	41	EXO100005N20S02	Spacer	1		
△	42	E70078-001	GND Terminal	1		
	43	SDSG3008N	Screw	2		
	44	QHS3876-162	Cord Stopper	1		
	45	QMP1D00-200H	Power Cord	1		
	46	EXO030005N60S02	Spacer	1		
	—	E61029-005	Number Label	1		J
	—	QZL1001-001	UL Label	1		C
	—	E45858-002	CSA Label	1		

The Marks for Designated Areas


J.....the U.S.A. C.....Canada

△ Safety Parts

Printed Circuit Board Ass'y and Parts List

■ ENH-141 □ Power Amplifier PC Board Ass'y

Note : ENH-141 □ varies according to the areas employed. See note (1) when placing an order.

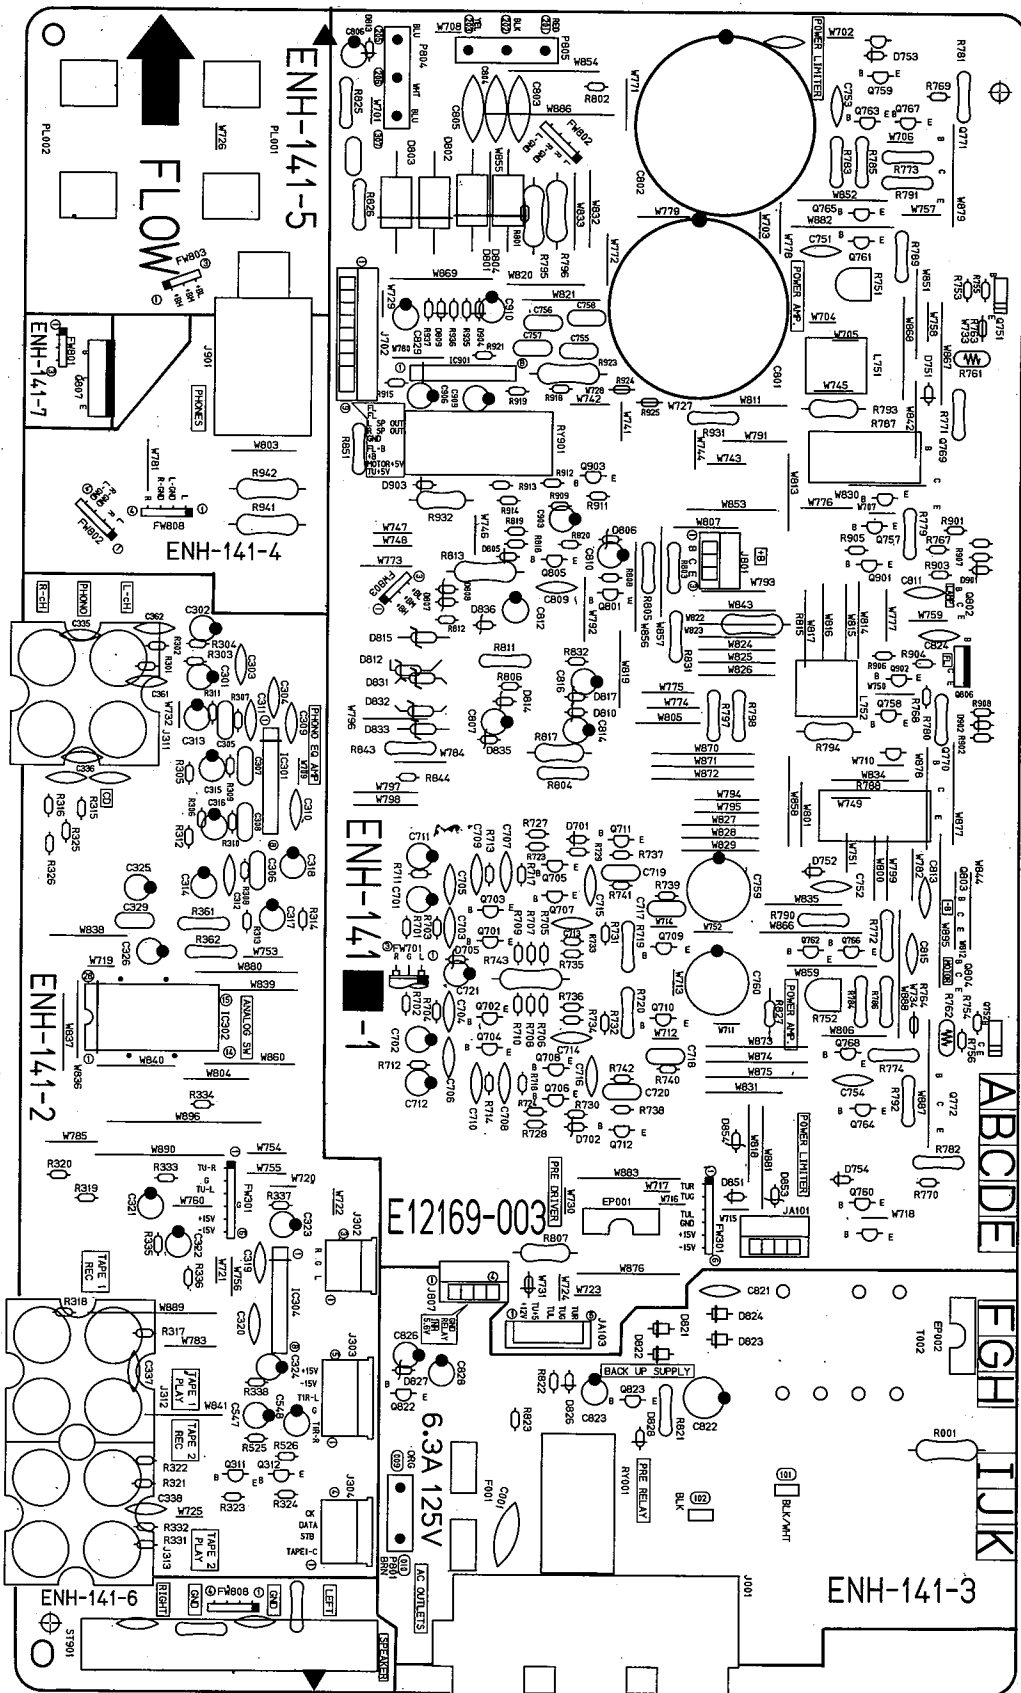

Note (1)

PC Board Ass'y		Designated Areas
ENH-141	A	the U.S.A.
ENH-141	B	Canada

Transistors

ITEM	PART NUMBER	DESCRIPTION	AREA	
			MAKER	
Q311	2SD2144S(VW)	SILICON	ROHM	
Q312	2SD2144S(VW)	SILICON	ROHM	
Q701	2SC2240(A,B)	SILICON	TOSHIBA	
Q702	2SC2240(A,B)	SILICON	TOSHIBA	
Q703	2SC2240(A,B)	SILICON	TOSHIBA	
Q704	2SC2240(A,B)	SILICON	TOSHIBA	
Q705	2SA1038(S,E)	SILICON	ROHM	
Q706	2SA1038(S,E)	SILICON	ROHM	
Q707	2SA933LN(R,S)	SILICON	ROHM	
Q708	2SA933LN(R,S)	SILICON	ROHM	
Q709	2SA1038(S,E)	SILICON	ROHM	
Q710	2SA1038(S,E)	SILICON	ROHM	
Q711	2SC2389(S,E)	SILICON	ROHM	
Q712	2SC2389(S,E)	SILICON	ROHM	
Q751	2SD636(Q,R)	SILICON	MATSUSHITA	
Q752	2SD636(Q,R)	SILICON	MATSUSHITA	
Q757	2SC1740S(R,S)	SILICON	ROHM	
Q758	2SC1740S(R,S)	SILICON	ROHM	
Q759	2SA933S(R,S)	SILICON	ROHM	
Q760	2SA933S(R,S)	SILICON	ROHM	
Q761	2SC2389(S)	SILICON	ROHM	
Q762	2SC2389(S)	SILICON	ROHM	
Q763	2SA1038(S)	SILICON	ROHM	
Q764	2SA1038(S)	SILICON	ROHM	
Q765	2SC2235(O,Y)	SILICON	TOSHIBA	
Q766	2SC2235(O,Y)	SILICON	TOSHIBA	
Q767	2SA965(O,Y)	SILICON	TOSHIBA	
Q768	2SA965(O,Y)	SILICON	TOSHIBA	
Q769	2SD2155LB(R,O)	SILICON	TOSHIBA	
Q770	2SD2155LB(R,O)	SILICON	TOSHIBA	
Q771	2SB1429LB(R,O)	SILICON	TOSHIBA	
Q772	2SB1429LB(R,O)	SILICON	TOSHIBA	
Q801	2SC2389(S,E)	SILICON	ROHM	
Q802	2SD1944(J,K)	SILICON	ROHM	
Q803	2SB1187(E,F)	SILICON	ROHM	
Q804	2SD1944(J,K)	SILICON	ROHM	
Q806	2SB1187(E,F)	SILICON	ROHM	
Q807	2SC3853V(O,Y)	SILICON	SANKEN	
Q822	2SC2235(O,Y)	SILICON	TOSHIBA	
Q823	OTC143TS	SILICON	ROHM	
Q901	2SC2389(S,E)	SILICON	ROHM	
Q902	2SC2389(S,E)	SILICON	ROHM	
Q903	2SA1038(S,E)	SILICON	ROHM	

△ : SAFETY PARTS

I.C.s

ITEM	PART NUMBER	DESCRIPTION	AREA	
			MAKER	
IC301	VC4580LD	I.C.	DAINICHI	
IC302	TC9164N	I.C.	TOSHIBA	
IC304	VC4580L	I.C.	DAINICHI	
IC901	UPC1237HA	I.C.	NEC	

△ : SAFETY PARTS

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA	
			MAKER	
D701	1SS133	SILICON	ROHM	
D702	1SS133	SILICON	ROHM	
D705	MTZ18JC	ZENER	ROHM	
D751	1SS133	SILICON	ROHM	
D752	1SS133	SILICON	ROHM	
D753	1SS133	SILICON	ROHM	
D754	1SS133	SILICON	ROHM	
D801	30DL2FC	SILICON	NIHONINTER	
D802	30DL2FC	SILICON	NIHONINTER	
D803	30DL2FC	SILICON	NIHONINTER	
D804	30DL2FC	SILICON	NIHONINTER	
D806	MTZ16JC	ZENER	ROHM	

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA	
			MAKER	
D807	MTZ18JC	ZENER	ROHM	
D808	MTZ20JC	ZENER	ROHM	
D810	MTZ16JC	ZENER	ROHM	
D812	RD11EB3	ZENER	NEC	
D813	MTZ6.8JC	ZENER	ROHM	
D814	MTZ27JC	ZENER	ROHM	
D815	RD11EB3	ZENER	NEC	
D817	MTZ5.6JC	ZENER	ROHM	
△ D821	ERA15-02L19	SILICON	KYODOU	
△ D822	ERA15-02L19	SILICON	KYODOU	
△ D823	ERA15-02L19	SILICON	KYODOU	
△ D824	ERA15-02L19	SILICON	KYODOU	
D826	1SS133	SILICON	ROHM	
D827	MTZ6.2JC	ZENER	ROHM	
D828	1SS133	SILICON	ROHM	
D831	RD5.1FB3	ZENER	NEC	
D832	RD5.1FB3	ZENER	NEC	
D833	RD5.1FB3	ZENER	NEC	
D851	1SS133	SILICON	ROHM	
D854	MTZ18JC	ZENER	ROHM	
D901	1SS133	SILICON	ROHM	
D902	1SS133	SILICON	ROHM	
D903	1SS133	SILICON	ROHM	
D904	1SS133	SILICON	ROHM	

△ : SAFETY PARTS

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA	
			MAKER	
C001	QCZ9019-472	4700PF		CERAMIC
C301	QETB1HM-475	4.7MF 50V		ELECTRO
C302	QETB1HM-475	4.7MF 50V		ELECTRO
C303	QCS21HJ-101	100PF 50V		CERAMIC
C304	QCS21HJ-101	100PF 50V		CERAMIC
C305	QFN81HJ-182	1800PF 50V		MYLAR
C306	QFN81HJ-182	1800PF 50V		MYLAR
C307	QFN81HJ-682	6800PF 50V		MYLAR
C308	QFN81HJ-682	6800PF 50V		MYLAR
C309	QCS21HJ-101	100PF 50V		CERAMIC
C310	QCS21HJ-101	100PF 50V		CERAMIC
C311	QCS21HJ-101	100PF 50V		CERAMIC
C312	QCS21HJ-101	100PF 50V		CERAMIC
C313	QETB1HM-475	4.7MF 50V		ELECTRO
C314	QETB1HM-475	4.7MF 50V		ELECTRO
C315	QETB1CM-107	100MF 16V		ELECTRO
C316	QETB1CM-107	100MF 16V		ELECTRO
C317	QETB1EM-476	47MF 25V		ELECTRO
C318	QETB1EM-476	47MF 25V		ELECTRO
C319	QCS21HJ-101	100PF 50V		CERAMIC
C320	QCS21HJ-101	100PF 50V		CERAMIC
C321	BBZ1005-106	10MF 100V		ELECTRO
C322	BBZ1005-106	10MF 100V		ELECTRO
C323	BBZ1005-106	10MF 100V		ELECTRO
C324	BBZ1005-106	10MF 100V		ELECTRO
C325	QETB1EM-476	47MF 25V		ELECTRO
C326	QETB1EM-476	47MF 25V		ELECTRO
C329	QFN81HJ-103	0.01MF 50V		MYLAR
C335	QCF21HP-223	0.022MF 50V		CERAMIC
C336	QCF21HP-223	0.022MF 50V		CERAMIC
C337	QCF21HP-223	0.022MF 50V		CERAMIC
C338	QCF21HP-223	0.022MF 50V		CERAMIC
C361	QCS21HJ-331	330PF 50V		CERAMIC
C362	QCS21HJ-331	330PF 50V		CERAMIC
C547	QETB1HM-106	10MF 50V		ELECTRO
C548	QETB1HM-106	10MF 50V		ELECTRO
C701	EEZ1005-106	10MF 100V		ELECTRO
C702	EEZ1005-106	10MF 100V		ELECTRO
C703	QCS21HJ-271	270PF 50V		CERAMIC
C704	QCS21HJ-271	270PF 50V		CERAMIC
C705	QCS21HJ-101	100PF 50V		CERAMIC
C706	QCS21HJ-101	100PF 50V		CERAMIC
C707	QCY21HK-332	3300PF 50V		CERAMIC
C708	QCY21HK-332	3300PF 50V		CERAMIC
C709	QCS21HJ-150	15PF 50V		CERAMIC
C710	QCS21HJ-150	15PF 50V		CERAMIC
C711	QETB1EM-476	47MF 25V		ELECTRO
C712	QETB1EM-476	47MF 25V		ELECTRO
C713	QCS32HJ-220	22PF 500V		CERAMIC
C714	QCS32HJ-220	22PF 500V		CERAMIC
C715	QCS21HJ-680	68PF 50V		CERAMIC
C716	QCS21HJ-680	68PF 50V		CERAMIC
C717	QFN81HJ-822	8200PF 50V		MYLAR
C718	QFN81HJ-822	8200PF 50V		MYLAR
C719	QFN81HJ-822	8200PF 50V		MYLAR
C720	QFN81HJ-822	8200PF 50V		MYLAR
C721	QETB1EM-106	10MF 25V		ELECTRO

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C751	QCS32HJ-470	47PF 500V CERAMIC	
C752	QCS32HJ-470	47PF 500V CERAMIC	
C753	QCS32HJ-470	47PF 500V CERAMIC	
C754	QCS32HJ-470	47PF 500V CERAMIC	
C755	QFN81HK-473	0.047MF 50V MYLAR	
C756	QFN81HK-473	0.047MF 50V MYLAR	
C757	QFN81HK-473	0.047MF 50V MYLAR	
C758	QFN81HK-473	0.047MF 50V MYLAR	
C759	QETB2AM-476	47MF 100V ELECTRO	
C760	QETB2AM-476	47MF 100V ELECTRO	
C801	EEW7103-109T	10000MF ELECTRO	
C802	EEW7103-109T	10000MF ELECTRO	
C803	QCE22HP-103	0.01MF 500V CERAMIC	
C804	QCE22HP-103	0.01MF 500V CERAMIC	
C805	QCE22HP-103	0.01MF 500V CERAMIC	
C806	QETB1HM-475	4.7MF 50V ELECTRO	
C807	QETB1HM-226	22MF 50V ELECTRO	
C809	QCF21HP-472	4700PF 50V CERAMIC	
C810	QETB1EM-476	47MF 25V ELECTRO	
C811	QCF21HP-472	4700PF 50V CERAMIC	
C812	QETB1HM-475	4.7MF 50V ELECTRO	
C813	QCF21HP-472	4700PF 50V CERAMIC	
C814	QETB1EM-476	47MF 25V ELECTRO	
C815	QCF21HP-223	0.022MF 50V CERAMIC	
C816	QETB1CM-476	47MF 16V ELECTRO	
C821	QCF21HP-472	4700PF 50V CERAMIC	
C822	QETB1CM-227	220MF 16V ELECTRO	
C823	QETB1HM-225	2.2MF 50V ELECTRO	
C824	QCF21HP-223	0.022MF 50V CERAMIC	
C826	QETB1CM-476	47MF 16V ELECTRO	
C828	QETB1AM-107	100MF 10V ELECTRO	
C903	QETB1HM-226	22MF 50V ELECTRO	
C906	QETB1AM-476	47MF 10V ELECTRO	
C909	QETB1CM-226	22MF 16V ELECTRO	
C910	QETB1HM-475	4.7MF 50V ELECTRO	

Δ : SAFETY PARTS

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R709	QRD167J-103	10K 1/6W CARBON	
R710	QRD167J-103	10K 1/6W CARBON	
R711	QRD167J-471	470 1/6W CARBON	
R712	QRD167J-471	470 1/6W CARBON	
R713	QRD167J-104	100K 1/6W CARBON	
R714	QRD167J-104	100K 1/6W CARBON	
R717	QRD167J-101	100 1/6W CARBON	
R718	QRD167J-101	100 1/6W CARBON	
Δ R719	QRD14CJ-181S	180 1/4W UNF. CARBON	
Δ R720	QRD14CJ-181S	180 1/4W UNF. CARBON	
R723	QRD167J-822	8.2K 1/6W CARBON	
R724	QRD167J-822	8.2K 1/6W CARBON	
R727	QRD167J-822	8.2K 1/6W CARBON	
R728	QRD167J-822	8.2K 1/6W CARBON	
R729	QRD167J-681	680 1/6W CARBON	
R730	QRD167J-681	680 1/6W CARBON	
R731	QRD167J-152	1.5K 1/6W CARBON	
R732	QRD167J-152	1.5K 1/6W CARBON	
R733	QRD167J-152	1.5K 1/6W CARBON	
R734	QRD167J-152	1.5K 1/6W CARBON	
R735	QRD167J-333	33K 1/6W CARBON	
R736	QRD167J-333	33K 1/6W CARBON	
R737	QRD167J-681	680 1/6W CARBON	
R738	QRD167J-681	680 1/6W CARBON	
R739	QRD167J-123	12K 1/6W CARBON	
R740	QRD167J-123	12K 1/6W CARBON	
R741	QRD167J-123	12K 1/6W CARBON	
R742	QRD167J-123	12K 1/6W CARBON	
Δ R743	QRG022J-562A	5.6K 2W O.M.FILM	
R751	QVPA601-501A	500 VARIABLE	
R752	QVPA601-501A	500 VARIABLE	
R753	QRD167J-152	1.5K 1/6W CARBON	
R754	QRD167J-152	1.5K 1/6W CARBON	
R755	QRD167J-391	390 1/6W CARBON	
R756	QRD167J-391	390 1/6W CARBON	
R767	QRD167J-161	160 1/6W CARBON	
R768	QRD167J-161	160 1/6W CARBON	
R769	QRD167J-161	160 1/6W CARBON	
R770	QRD167J-161	160 1/6W CARBON	
Δ R771	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R772	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R773	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R774	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R779	QRD14CJ-331S	330 1/4W UNF. CARBON	
Δ R780	QRD14CJ-331S	330 1/4W UNF. CARBON	
Δ R781	QRD14CJ-331S	330 1/4W UNF. CARBON	
Δ R782	QRD14CJ-331S	330 1/4W UNF. CARBON	
Δ R783	QRD14CJ-272S	2.7K 1/4W UNF. CARBON	
Δ R784	QRD14CJ-272S	2.7K 1/4W UNF. CARBON	
Δ R785	QRD14CJ-271S	270 1/4W UNF. CARBON	
Δ R786	QRD14CJ-271S	270 1/4W UNF. CARBON	
Δ R787	ERF032K-R22	0.22 3W CEMENT	
Δ R788	ERF032K-R22	0.22 3W CEMENT	
Δ R789	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R790	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R791	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R792	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R793	QRD125J-330	33 1/2W UNF. CARBON	
Δ R794	QRD125J-330	33 1/2W UNF. CARBON	
Δ R795	QRG022J-100A	10 2W O.M.FILM	
Δ R796	QRG022J-100A	10 2W O.M.FILM	
Δ R797	QRD14CJ-330S	33 1/4W UNF. CARBON	
Δ R798	QRD14CJ-330S	33 1/4W UNF. CARBON	
R801	QRD167J-563	56K 1/6W CARBON	
R802	QRD167J-563	56K 1/6W CARBON	
Δ R803	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R804	QRD14CJ-680S	68 1/4W UNF. CARBON	
Δ R805	QRD14CJ-100S	10 1/4W UNF. CARBON	
Δ R806	QRD167J-153	15K 1/6W CARBON	
Δ R807	QRD125J-270	27 1/2W UNF. CARBON	
R808	QRD167J-273	27K 1/6W CARBON	
Δ R811	QRD14CJ-101S	100 1/4W UNF. CARBON	
R812	QRD167J-123	12K 1/6W CARBON	
Δ R813	QRG022J-391A	390 2W O.M.FILM	
Δ R817	QRD125J-103	10K 1/2W UNF. CARBON	
Δ R821	QRD14CJ-4R7S	4.7 1/4W UNF. CARBON	
R822	QRD167J-472	4.7K 1/6W CARBON	
R823	QRD167J-821	820 1/6W CARBON	
Δ R825	QRD14CJ-5R6S	5.6 1/4W UNF. CARBON	
Δ R826	QRD14CJ-6R8S	6.8 1/4W UNF. CARBON	
Δ R827	QRD167J-4R7S	4.7 1/4W UNF. CARBON	
Δ R831	QRD14CJ-8R2S	8.2 1/4W UNF. CARBON	
Δ R832	QRD167J-333	33K 1/6W CARBON	
Δ R843	QRD14CJ-100S	10 1/4W UNF. CARBON	
R844	QRD167J-272	2.7K 1/6W CARBON	
Δ R851	QRD14CJ-180S	18 1/4W UNF. CARBON	
R901	QRD167J-681	680 1/6W CARBON	
R902	QRD167J-681	680 1/6W CARBON	
R903	QRD167J-562	5.6K 1/6W CARBON	
R904	QRD167J-562	5.6K 1/6W CARBON	
R905	QRD167J-123	12K 1/6W CARBON	

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
Δ R001	QRC128K-275EM	2.7M 1/2W COMPOSI	
R301	QRD167J-222	2.2K 1/6W CARBON	
R302	QRD167J-222	2.2K 1/6W CARBON	
R303	QRD167J-473	47K 1/6W CARBON	
R304	QRD167J-473	47K 1/6W CARBON	
R305	QRD167J-821	820 1/6W CARBON	
R306	QRD167J-821	820 1/6W CARBON	
R307	QRD167J-393	39K 1/6W CARBON	
R308	QRD167J-393	39K 1/6W CARBON	
R309	QRD167J-474	470K 1/6W CARBON	
R310	QRD167J-474	470K 1/6W CARBON	
R311	QRD167J-104	100K 1/6W CARBON	
R312	QRD167J-104	100K 1/6W CARBON	
R313	QRD167J-681	680 1/6W CARBON	
R314	QRD167J-681	680 1/6W CARBON	
R315	QRD167J-203	20K 1/6W CARBON	
R316	QRD167J-203	20K 1/6W CARBON	
R317	QRD167J-221	220 1/6W CARBON	
R318	QRD167J-221	220 1/6W CARBON	
R319	QRD167J-221	220 1/6W CARBON	
R320	QRD167J-221	220 1/6W CARBON	
R321	QRD167J-221	220 1/6W CARBON	
R322	QRD167J-221	220 1/6W CARBON	
R323	QRD167J-103	10K 1/6W CARBON	
R324	QRD167J-103	10K 1/6W CARBON	
R325	QRD167J-563	56K 1/6W CARBON	
R326	QRD167J-563	56K 1/6W CARBON	
R331	QRD167J-102	1K 1/6W CARBON	
R332	QRD167J-102	1K 1/6W CARBON	
R333	QRD167J-823	82K 1/6W CARBON	
R334	QRD167J-823	82K 1/6W CARBON	
R335	QRD167J-124	120K 1/6W CARBON	
R336	QRD167J-124	120K 1/6W CARBON	
R337	QRD167J-474	470K 1/6W CARBON	
R338	QRD167J-474	470K 1/6W CARBON	
Δ R361	QRZ0077-680	68 1/4W FUSIBLE	
Δ R362	QRZ0077-680	68 1/4W FUSIBLE	
R525	QRD167J-332	3.3K 1/6W CARBON	
R526	QRD167J-332	3.3K 1/6W CARBON	
R701	QRD167J-222	2.2K 1/6W CARBON	
R702	QRD167J-222	2.2K 1/6W CARBON	
R703	QRD167J-104	100K 1/6W CARBON	
R704	QRD167J-104	100K 1/6W CARBON	
R705	QRD167J-202	2K 1/6W CARBON	
R706	QRD167J-202	2K 1/6W CARBON	
R707	QRD167J-202	2K 1/6W CARBON	
R708	QRD167J-202	2K 1/6W CARBON	

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R906	QRD167J-123	12K 1/6W CARBON	
R907	QRD167J-152	1.5K 1/6W CARBON	
R908	QRD167J-152	1.5K 1/6W CARBON	
R909	QRD167J-103	10K 1/6W CARBON	
R911	QRD167J-332	3.3K 1/6W CARBON	
R912	QRD167J-473	47K 1/6W CARBON	
R913	QRD167J-104	100K 1/6W CARBON	
R914	QRD167J-823	82K 1/6W CARBON	
R915	QRD167J-823	82K 1/6W CARBON	
R918	QRD167J-822	8.2K 1/6W CARBON	
R919	QRD167J-822	8.2K 1/6W CARBON	
R921	QRD167J-154	150K 1/6W CARBON	
R923	QRG022J-152A	1.5K 2W O.M. FILM	
R924	QRD167J-151	150 1/6W CARBON	
R925	QRD167J-131	130 1/6W CARBON	
R931	QRD14CJ-101S	100 1/4W UNF. CARBON	
R932	QRD125J-223	22K 1/2W UNF. CARBON	
R935	QRD167J-562	5.6K 1/6W CARBON	
R936	QRD167J-393	39K 1/6W CARBON	
R937	QRD167J-153	15K 1/6W CARBON	
R941	QRG022J-331A	330 2W O.M. FILM	
R942	QRG022J-331A	330 2W O.M. FILM	

△ : SAFETY PARTS

Others


ITEM	PART NUMBER	DESCRIPTION	AREA
J001	E75768-002	MICA SHEET	
J302	GBSG3008CC	SCREW	
J303	SBSG3008CC	SCREW	
J304	QMC A007-004	AC OUTLET	
J304	VMC0107-R03	CONNECTOR	
J304	VMC0107-R05	CONNECTOR	
J304	VMC0107-R04	CONNECTOR	
J311	EMN00TP-405A	4P PIN JACK	
J312	EMN00TP-405A	4P PIN JACK	
J313	EMN00TP-407A	4P PIN JACK	
J702	VMC0107-009	CONNECTOR	
J801	VMC0107-003	CONNECTOR	
J807	VMC0107-004	CONNECTOR	
J901	QMS6312-025	HEADPHONE JACK	
L751	EQL0001-1R0	INDUCTOR	
L752	EQL0001-1R0	INDUCTOR	
P801	E67764-202	WRAPPING TERMINAL	
P804	E67764-103	WRAPPING TERMINAL	
P805	E67764-103	WRAPPING TERMINAL	
T002	ETP1000-41JA	POWER TRANSFORMER	
EP001	E70859-001	EARTH PLATE	
EP002	E70859-001	EARTH PLATE	
FW301	EWR36D-4088	FLAT WIRE	
FW701	EWR23C-16JN	FLAT WIRE	
FW801	EWR33D-08LS	FLAT WIRE	
FW802	EWR14B-20SS	FLAT WIRE	
FW803	EWR33D-1688	FLAT WIRE	
FW808	EWR14B-30SS	FLAT WIRE	
JA103	EMV5125-005	PLUG ASSY	
PL001	E45524-002	FUSE CLIP	
PL002	E45524-002	FUSE CLIP	
RY001	ESK1D12-113	RELAY	
RY901	ESK5D24-218	RELAY	
ST901	EMB90YV-401A	SPEAKER TERMINAL	

△ : SAFETY PARTS

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
EMG7331-001	EMG7331-001	FUSE CLIP	
E12169-003	E12169-003	FUSE CLIP	
E300209-037	E300209-037	CIRCUIT BOARD	
E306573-002	E306573-002	HEAT SINK	
E306574-001	E306574-001	BRACKET	
E48269-001	E48269-001	BRACKET	
E48269-001	E48269-001	SPACER	
E65508-002	E65508-002	SPACER	
E73525-003	E73525-003	TAB	
E73525-003	E73525-003	SCREW	

■ ENA-087A Tuner PC Board Ass'y

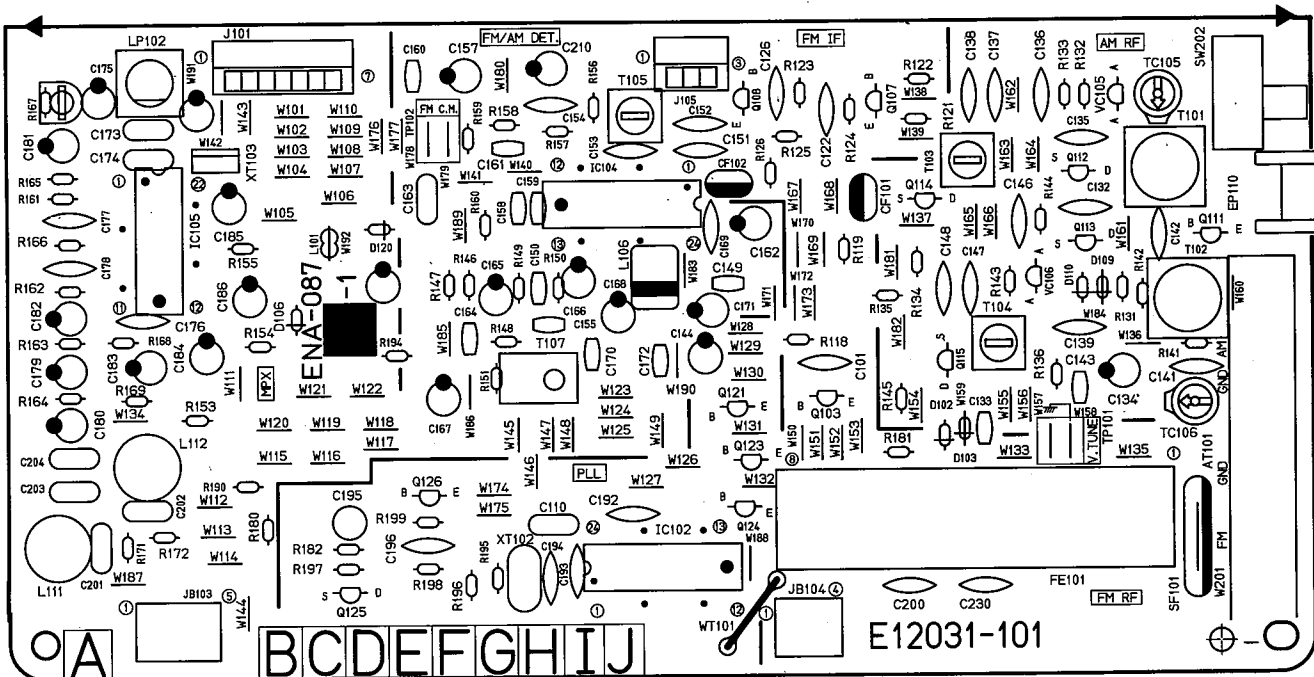

Transistors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	Q103	2SC461(B,C)	SILICON	HITACHI	
	Q107	2SC535(B,C)	SILICON	HITACHI	
	Q108	2SC461(B,C)	SILICON	HITACHI	
	Q112	2SK301(Q,R)	F.E.T	MATSUSHITA	
	Q123	DTA114YS	SILICON	ROHM	
	Q124	DTA114YS	SILICON	ROHM	
	Q125	2SK301(Q2)	F.E.T	MATSUSHITA	
	Q126	2SC458(D)	SILICON	HITACHI	

△ : SAFETY PARTS

I.C.s

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	IC102	LC7218	I.C.	SANYO	
	IC104	LA1266A	I.C.	SANYO	
	IC105	LA3401	I.C.	SANYO	

△ : SAFETY PARTS

Diodes

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	D106	1SS133	SILICON	ROHM	
	D120	1SS133	SILICON	ROHM	
	VC105	SVC342(L)	VARICAP	SANYO	

△ : SAFETY PARTS

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	C101	QCF21HP-223	0.022MF	50V CERAMIC	
	C110	QCZO205-155	1.5MF	25V CERAMIC	
	C122	QCF21HP-223	0.022MF	50V CERAMIC	
	C126	QCF21HP-223	0.022MF	50V CERAMIC	
	C132	QCS21HJ-561	560PF	50V CERAMIC	
	C133	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C134	QETB1EM-106	10MF	25V ELECTRO	
	C135	QCC21EM-223	0.022MF	25V CERAMIC	
	C136	QCT26CH-180	18PF	50V CERAMIC	
	C137	QCT26CH-221	220PF	50V CERAMIC	
	C138	QCT26CH-241	240PF	50V CERAMIC	
	C149	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C150	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C151	QCF21HP-223	0.022MF	50V CERAMIC	
	C152	QCF21HP-223	0.022MF	50V CERAMIC	
	C153	QCC21EM-223	0.022MF	25V CERAMIC	
	C154	QCF21HP-223	0.022MF	50V CERAMIC	
	C155	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C157	QETB1HM-474	0.47MF	50V ELECTRO	
	C158	QCCB1HK-101	100PF	50V CERAMIC	
	C159	QCCB1HK-101	100PF	50V CERAMIC	
	C160	QCCB1HK-221	220PF	50V CERAMIC	
	C161	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C162	QETB1EM-106	10MF	25V ELECTRO	
	C163	QFLC1HK-102	1000PF	50V CERAMIC	
	C164	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C165	QETB1HM-474	0.47MF	50V ELECTRO	
	C166	QETB1HM-225	2.2MF	50V ELECTRO	
	C167	QETB1HM-225	2.2MF	50V ELECTRO	
	C168	QETB1HM-475	4.7MF	50V ELECTRO	
	C169	QCF21HP-223	0.022MF	50V CERAMIC	
	C170	QCHB1EZ-223	0.022MF	25V CERAMIC	
	C171	QETB1EM-106	10MF	25V ELECTRO	
	C172	QCVB1CM-103	0.01MF	16V CERAMIC	
	C173	QFLC1HK-223	0.022MF	50V CERAMIC	
	C174	QFLC1HK-473	0.047MF	50V CERAMIC	
	C175	QETB1EM-106	10MF	25V ELECTRO	
	C176	QCY21HK-102	1000PF	50V CERAMIC	
	C177	QCS21HJ-471	470PF	50V CERAMIC	
	C178	QCS21HJ-471	470PF	50V CERAMIC	
	C179	QETB1HM-225	2.2MF	50V ELECTRO	
	C180	QETB1HM-225	2.2MF	50V ELECTRO	
	C181	QETB1EM-106	10MF	25V ELECTRO	
	C182	QETB1HM-225	2.2MF	50V ELECTRO	
	C183	QETB1HM-105	1MF	50V ELECTRO	
	C184	QETB1HM-105	1MF	50V ELECTRO	
	C185	QETB1HM-225	2.2MF	50V ELECTRO	
	C186	QETB1HM-474	0.47MF	50V ELECTRO	

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	C192	QCC21EM-473	0.047MF	25V CERAMIC	
	C193	QCS21HJ-180	18PF	50V CERAMIC	
	C194	QCS21HJ-180	18PF	50V CERAMIC	
	C195	QEN51HM-474	0.47MF	50V NON POLE	
	C196	QCY21HK-102	1000PF	50V CERAMIC	
	C200	QCF21HP-103	0.01MF	50V CERAMIC	
	C201	QFLC1HK-332	3300PF	50V CERAMIC	
	C202	QFLC1HK-332	3300PF	50V CERAMIC	
	C203	QFLC1HK-182	1800PF	50V CERAMIC	
	C204	QFLC1HK-182	1800PF	50V CERAMIC	
	C210	QETB1CM-227	220MF	16V ELECTRO	
	C230	QCF21HP-103	0.01MF	50V CERAMIC	
	TC105	ENZ1003-006		TRIMMER	

△ : SAFETY PARTS

Resistors

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	R118	QRD167J-332	3.3K	1/6W CARBON	
	R119	QRD167J-221	220	1/6W CARBON	
	R121	QRD167J-391	390	1/6W CARBON	
	R122	QRD167J-272	2.7K	1/6W CARBON	
	R123	QRD167J-102	1K	1/6W CARBON	
	R124	QRD167J-681	680	1/6W CARBON	
	R125	QRD167J-332	3.3K	1/6W CARBON	
	R126	QRD167J-221	220	1/6W CARBON	
	R131	QRD167J-331	330	1/6W CARBON	
	R132	QRD167J-103	10K	1/6W CARBON	
	R133	QRD167J-473	47K	1/6W CARBON	
	R135	QRD167J-470	47	1/6W CARBON	
	R136	QRD167J-103	10K	1/6W CARBON	
	R146	QRD167J-560	56	1/6W CARBON	
	R147	QRD167J-103	10K	1/6W CARBON	
	R148	QRD167J-103	10K	1/6W CARBON	
	R149	QRD167J-223	22K	1/6W CARBON	
	R150	QRD167J-103	10K	1/6W CARBON	
	R151	QRD167J-222	2.2K	1/6W CARBON	
	R153	QRD167J-103	10K	1/6W CARBON	
	R154	QRD167J-103	10K	1/6W CARBON	
	R155	QRD167J-562	5.6K	1/6W CARBON	
	R156	QRD167J-682	6.8K	1/6W CARBON	
	R157	QRD167J-103	10K	1/6W CARBON	
	R158	QRD167J-183	18K	1/6W CARBON	
	R159	QRD167J-561	560	1/6W CARBON	
	R160	QRD167J-153	15K	1/6W CARBON	
	R161	QRD167J-154	150K	1/6W CARBON	
	R162	QRD167J-154	150K	1/6W CARBON	
	R163	QRD167J-472	4.7K	1/6W CARBON	
	R164	QRD167J-472	4.7K	1/6W CARBON	
	R165	QRD167J-184	180K	1/6W CARBON	
	R166	QRD167J-184	180K	1/6W CARBON	
	R167	QRD167J-393	39K	1/6W CARBON	
	R168	QRD167J-103	10K	1/6W CARBON	
	R169	QRD167J-103	10K	1/6W CARBON	
	R171	QRD167J-682	6.8K	1/6W CARBON	
	R172	QRD167J-682	6.8K	1/6W CARBON	
	R180	QRD167J-472	4.7K	1/6W CARBON	
	R181	QRD167J-222	2.2K	1/6W CARBON	
	R182	QRD167J-181	180	1/6W CARBON	
	R190	QRD167J-472	4.7K	1/6W CARBON	
	R194	QRD167J-472	4.7K	1/6W CARBON	
	R195	QRD167J-473	47K	1/6W CARBON	
	R196	QRD167J-103	10K	1/6W CARBON	
	R197	QRD167J-222	2.2K	1/6W CARBON	
	R198	QRD167J-332	3.3K	1/6W CARBON	
	R199	QRD167J-472	4.7K	1/6W CARBON	

△ : SAFETY PARTS

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	E12031-101	CIRCUIT BOARD	
J101	VMC0107-007	CONNECTOR	
L106	EQL3001-102K	INDUCTOR	
L111	EQL2103-393	INDUCTOR	
L112	EQL2103-393	INDUCTOR	
T101	EQR1111-014	AM RF COIL	
T103	EQR1207-015	MW OSC COIL	
T105	EQT2140-017	I.F. TRANSFORMER	
T107	ECB1560-008	CERAMIC FILTER	
AT101	EMB90YV-401K	ANTENNA TERMINAL	


Others

ITEM	PART NUMBER	DESCRIPTION	AREA
CF101	ECB2123-006R	CERAMIC FILTER	
CF102	ECB2123-006R	CERAMIC FILTER	
EP110	E70225-001	EARTH PLATE	
FE101	EAF2203-001	FRONT END	
JB103	EMV7125-005R	CONNECTOR	
WT101	BWT011-063	TERMINAL WIRE	
XT102	ECX0007-200KC	RESONATOR	
XT103	ECX0000-456KR	RESONATOR	

△ : SAFETY PARTS

■ ENB-097 □ Front PC Board Ass'y

Note : ENB-097 □ varies according to the areas employed. See note (1) when placing an order.

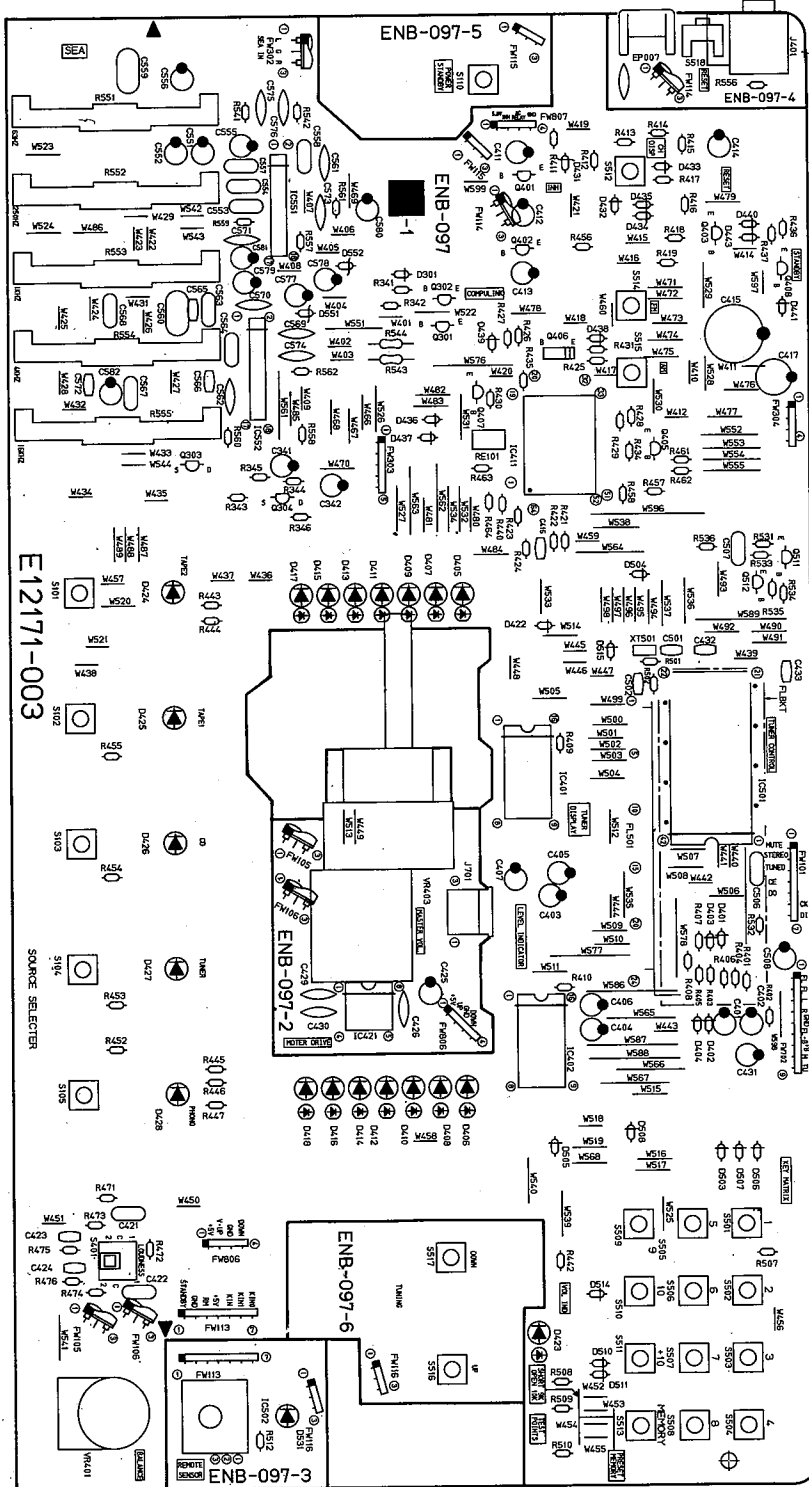

Note (1)

PC Board Ass'y	Designated Areas
ENB-097 A	the U.S.A.
ENB-097 B	Canada

Transistors

ITEM	PART NUMBER	DESCRIPTION		AREA
		MAKER		
Q301	DTC144ES	SILICON	ROHM	
Q302	DTA114YS	SILICON	ROHM	
Q303	2SK301(P,Q)	F.E.T	MATSUSHITA	
Q304	2SK301(P,Q)	F.E.T	MATSUSHITA	
Q401	DTC144ES	SILICON	ROHM	
Q402	2SC1685(R,S)	SILICON	MATSUSHITA	
Q403	2SC1685(R,S)	SILICON	MATSUSHITA	
Q405	DTA114YS	SILICON	ROHM	
Q406	2SD636(Q,R)	SILICON	MATSUSHITA	
Q407	2SC1685(R,S)	SILICON	MATSUSHITA	
Q408	DTA114YS	SILICON	ROHM	
Q511	2SC1685(R,S)	SILICON	MATSUSHITA	
Q512	2SC1685(R,S)	SILICON	MATSUSHITA	

△ : SAFETY PARTS

I.C.s

ITEM	PART NUMBER	DESCRIPTION		AREA
		MAKER		
IC401	IR2E19	I.C.	SHARP	
IC402	IR2E19	I.C.	SHARP	
IC411	UPD75104G554-1B	I.C.	NEC	
IC421	LS1639-CV	I.C.	SANYO	
IC501	LC6514B-4245	I.C.	SANYO	
IC502	A1QH3021HO	I.C.	SHARP	
IC551	BA3812L	I.C.	ROHM	
IC552	BA3812L	I.C.	ROHM	

△ : SAFETY PARTS

Diodes

ITEM	PART NUMBER	DESCRIPTION		AREA
		MAKER		
D301	1SS133	SILICON	ROHM	
D401	1SS133	SILICON	ROHM	
D402	1SS133	SILICON	ROHM	
D403	1SS133	SILICON	ROHM	
D404	1SS133	SILICON	ROHM	
D405	SLR-331DC50F070	L.E.D.	ROHM	
D406	SLR-331DC50F070	L.E.D.	ROHM	
D407	SLR-331DC50F070	L.E.D.	ROHM	
D408	SLR-331DC50F070	L.E.D.	ROHM	
D409	SLR-331DC50F070	L.E.D.	ROHM	
D410	SLR-331DC50F070	L.E.D.	ROHM	
D411	SLR-331DC50F070	L.E.D.	ROHM	
D412	SLR-331DC50F070	L.E.D.	ROHM	
D413	SLR-331DC50F070	L.E.D.	ROHM	
D414	SLR-331DC50F070	L.E.D.	ROHM	
D415	SLR-331DC50F070	L.E.D.	ROHM	
D416	SLR-331DC50F070	L.E.D.	ROHM	
D417	SLR-331DC50F070	L.E.D.	ROHM	
D418	SLR-331DC50F070	L.E.D.	ROHM	
D422	1SS133	SILICON	ROHM	
D423	SLR-331VC50F070	L.E.D.	ROHM	
D424	SLR-34VC50F124	L.E.D.	ROHM	
D425	SLR-34DC50F124	L.E.D.	ROHM	
D426	SLR-34DC50F124	L.E.D.	ROHM	
D427	SLR-34DC50F124	L.E.D.	ROHM	
D428	SLR-34DC50F124	L.E.D.	ROHM	
D431	MTZ5.6JC	ZENER	ROHM	
D432	1SS133	SILICON	ROHM	
D433	1SS133	SILICON	ROHM	
D434	1SS133	SILICON	ROHM	
D435	1SS133	SILICON	ROHM	
D436	1SS133	SILICON	ROHM	
D437	1SS133	SILICON	ROHM	
D438	1SS133	SILICON	ROHM	
D439	1SS133	SILICON	ROHM	
D440	1SS133	SILICON	ROHM	
D441	1SS133	SILICON	ROHM	
D443	1SS133	SILICON	ROHM	

Diodes

ITEM	PART NUMBER	DESCRIPTION		AREA
		MAKER		
D503	1SS133	SILICON	ROHM	
D504	1SS133	SILICON	ROHM	
D505	1SS133	SILICON	ROHM	
D506	1SS133	SILICON	ROHM	
D507	1SS133	SILICON	ROHM	
D508	1SS133	SILICON	ROHM	
D510	1SS133	SILICON	ROHM	
D511	1SS133	SILICON	ROHM	
D515	1SS133	SILICON	ROHM	
D531	SLR-34VC50F124	L.E.D.	ROHM	
D551	MTZ7.5JC	ZENER	ROHM	
D552	MTZ7.5JC	ZENER	ROHM	

△ : SAFETY PARTS

Capacitors

ITEM	PART NUMBER	DESCRIPTION			AREA
C341	QETB1HM-106	10MF	50V	ELECTRO	
C342	QETB1HM-106	10MF	50V	ELECTRO	
C401	QEK51HM-475	4.7MF	50V	ELECTRO	
C402	QEK51HM-475	4.7MF	50V	ELECTRO	
C403	QER51EM-106	10MF	25V	ELECTRO	
C404	QER51EM-106	10MF	25V	ELECTRO	
C405	QER51EM-106	10MF	25V	ELECTRO	
C406	QER51EM-106	10MF	25V	ELECTRO	
C407	QEK51EM-476	47MF	25V	ELECTRO	
C411	QER51HM-225G	2.2MF	50V	ELECTRO	
C413	QER51CM-106G	10MF	16V	ELECTRO	
C414	QER51HM-105G	1MF	50V	ELECTRO	
C415	EE20502-479	47000PF	5.5V	ELECTRO	
C416	QCHB1EZ-223	0.022MF	25V	CERAMIC	
C417	QETB0JM-477	470MF	6.3V	ELECTRO	
C421	QFLC1HK-393	0.039MF	50V	CERAMIC	
C422	QFLC1HK-393	0.039MF	50V	CERAMIC	
C423	QCB1HK-681	680PF	50V	CERAMIC	
C424	QCB1HK-681	680PF	50V	CERAMIC	
C425	QETB1AM-107	100MF	10V	ELECTRO	
C426	QCF21HP-473	0.047MF	50V	CERAMIC	
C427	QCVB1CM-103	0.01MF	16V	CERAMIC	
C429	QCS21HJ-331	330PF	50V	CERAMIC	
C430	QCS21HJ-331	330PF	50V	CERAMIC	
C431	QEK51HM-226	22MF	50V	ELECTRO	
C432	QCVB1CM-103	0.01MF	16V	CERAMIC	
C433	QCG1HK-102	1000PF	50V	CERAMIC	
C501	QCB1HK-101	100PF	50V	CERAMIC	
C502	QCB1HK-101	100PF	50V	CERAMIC	
C506	QCZ0205-155	1.5MF	25V	CERAMIC	
C507	QFLC1HK-332	3300PF	50V	CERAMIC	
C508	QETB1AM-107	100MF	10V	ELECTRO	
C551	QEK51HM-105G	1MF	50V	ELECTRO	
C552	QEK51HM-105G	1MF	50V	ELECTRO	
C553	QFLC1HK-563	0.056MF	50V	CERAMIC	
C554	QFLC1HK-563	0.056MF	50V	CERAMIC	
C555	QEK51HM-474G	0.47MF	50V	ELECTRO	
C556	QEK51HM-474G	0.47MF	50V	ELECTRO	
C557	QFLC1HK-822	8200PF	50V	CERAMIC	
C558	QFLC1HK-822	8200PF	50V	CERAMIC	
C559	QFV81HJ-124	0.12MF	50V	T.FILM	
C560	QFV81HJ-124	0.12MF	50V	T.FILM	
C561	QCY21HK-222	2200PF	50V	CERAMIC	
C562	QCY21HK-222	2200PF	50V	CERAMIC	
C563	QFV81HJ-333	0.033MF	50V	T.FILM	
C564	QFV81HJ-333	0.033MF	50V	T.FILM	
C565	QCB1HK-471	470PF	50V	CERAMIC	
C566	QCB1HK-471	470PF	50V	CERAMIC	
C567	QFLC1HK-822	8200PF	50V	CERAMIC	
C568	QFLC1HK-822	8200PF	50V	CERAMIC	
C569	QCS21HJ-121	120PF	50V	CERAMIC	
C570	QCS21HJ-121	120PF	50V	CERAMIC	
C571	QCS21HJ-471	470PF	50V	CERAMIC	
C572	QCB1HK-471	470PF	50V	CERAMIC	
C573	QCS21HJ-101	100PF	50V	CERAMIC	
C574	QCS21HJ-101	100PF	50V	CERAMIC	
C575	QCS21HJ-470	47PF	50V	CERAMIC	
C576	QCS21HJ-470	47PF	50V	CERAMIC	
C577	QETB1CM-226	22MF	16V	ELECTRO	
C578	QETB1CM-226	22MF	16V	ELECTRO	
C579	QEK51HM-225G	2.2MF	50V	ELECTRO	
C580	QEK51HM-225G	2.2MF	50V	ELECTRO	
C581	QEK51CM-106G	10MF	16V	ELECTRO	
C582	QEK51CM-106G	10MF	16V	ELECTRO	

△ : SAFETY PARTS

Resistors

ITEM	PART NUMBER	DESCRIPTION			AREA
R341	QRD167J-103	10K	1/6W	CARBON	
R342	QRD167J-823	82K	1/6W	CARBON	
R343	QRD167J-103	10K	1/6W	CARBON	
R344	QRD167J-103	10K	1/6W	CARBON	
R345	QRD167J-332	3.3K	1/6W	CARBON	
R346	QRD167J-332	3.3K	1/6W	CARBON	
R401	QRD167J-123	12K	1/6W	CARBON	
R402	QRD167J-123	12K	1/6W	CARBON	
R403	QRD167J-471	470	1/6W	CARBON	
R404	QRD167J-471	470	1/6W	CARBON	
R405	QRD167J-103	10K	1/6W	CARBON	
R406	QRD167J-103	10K	1/6W	CARBON	
R407	QRD167J-152	1.5K	1/6W	CARBON	
R408	QRD167J-152	1.5K	1/6W	CARBON	
R409	QRD167J-512	5.1K	1/6W	CARBON	
R410	QRD167J-512	5.1K	1/6W	CARBON	
R411	QRD167J-222	2.2K	1/6W	CARBON	
R412	QRD167J-472	4.7K	1/6W	CARBON	
R413	QRD167J-103	10K	1/6W	CARBON	
R414	QRD167J-223	22K	1/6W	CARBON	
R415	QRD167J-473	47K	1/6W	CARBON	
R416	QRD167J-223	22K	1/6W	CARBON	
R417	QRD167J-102	1K	1/6W	CARBON	
R418	QRD167J-472	4.7K	1/6W	CARBON	
R419	QRD167J-331	330	1/6W	CARBON	
R421	QRD167J-104	100K	1/6W	CARBON	
R422	QRD167J-104	100K	1/6W	CARBON	
R423	QRD167J-104	100K	1/6W	CARBON	
R424	QRD167J-104	100K	1/6W	CARBON	
R425	QRD167J-103	10K	1/6W	CARBON	
R426	QRD167J-473	47K	1/6W	CARBON	
R427	QRD167J-223	22K	1/6W	CARBON	
R428	QRD167J-103	10K	1/6W	CARBON	
R429	QRD167J-183	18K	1/6W	CARBON	
R430	QRD167J-103	10K	1/6W	CARBON	
R431	QRD167J-471	470	1/6W	CARBON	
R434	QRD167J-104	100K	1/6W	CARBON	
R435	QRD167J-104	100K	1/6W	CARBON	
R436	QRD167J-473	47K	1/6W	CARBON	
R437	QRD167J-112	1.1K	1/6W	CARBON	
R440	QRD167J-104	100K	1/6W	CARBON	
R442	QRD167J-221	220	1/6W	CARBON	
R443	QRD167J-221	220	1/6W	CARBON	
R444	QRD167J-221	220	1/6W	CARBON	
R445	QRD167J-221	220	1/6W	CARBON	
R446	QRD167J-221	220	1/6W	CARBON	
R447	QRD167J-221	220	1/6W	CARBON	
R452	QRD167J-104	100K	1/6W	CARBON	
R453	QRD167J-104	100K	1/6W	CARBON	
R454	QRD167J-104	100K	1/6W	CARBON	
R455	QRD167J-104	100K	1/6W	CARBON	
R456	QRD167J-104	100K	1/6W	CARBON	
R457	QRD167J-104	100K	1/6W	CARBON	
R458	QRD167J-104	100K	1/6W	CARBON	
R461	QRD167J-103	10K	1/6W	CARBON	
R462	QRD167J-103	10K	1/6W	CARBON	
R463	QRD167J-104	100K	1/6W	CARBON	
R464	QRD167J-104	100K	1/6W	CARBON	
R471	QRD167J-183	18K	1/6W	CARBON	
R472	QRD167J-183	18K	1/6W	CARBON	
R473	QRD167J-333	33K	1/6W	CARBON	
R474	QRD167J-333	33K	1/6W	CARBON	
R475	QRD167J-105	1M	1/6W	CARBON	
R476	QRD167J-105	1M	1/6W	CARBON	
R501	QRD167J-105	1M	1/6W	CARBON	
R502	QRD167J-152	1.5K	1/6W	CARBON	
R507	QRD167J-472	4.7K	1/6W	CARBON	
R508	QRD167J-472	4.7K	1/6W	CARBON	
R509	QRD167J-472	4.7K	1/6W	CARBON	
R510	QRD167J-472	4.7K	1/6W	CARBON	
R512	QRD167J-221	220	1/6W	CARBON	
R531	QRD167J-221	220	1/6W	CARBON	
R532	QRD167J-472	4.7K	1/6W	CARBON	
R533	QRD167J-473	47K	1/6W	CARBON	
R534	QRD167J-103	10K	1/6W	CARBON	
R535	QRD167J-103	10K	1/6W	CARBON	
R536	QRD167J-223	22K	1/6W	CARBON	
R541	QRD167J-474	470K	1/6W	CARBON	
R542	QRD167J-474	470K	1/6W	CARBON	
R543	QRD145J-471S	470	1/4W	UNF. CARBON	
R544	QRD145J-471S	470	1/4W	UNF. CARBON	
R551	QVUB08W-E15B	100K		VARIABLE	
R552	QVUB08W-E15B	100K		VARIABLE	
R553	QVUB08W-E15B	100K		VARIABLE	
R554	QVUB08W-E15B	100K		VARIABLE	
R555	QVUB08W-E15B	100K		VARIABLE	
R556	QRD167J-100	10	1/6W	CARBON	
R557	QRD167J-102	1K	1/6W	CARBON	
R558	QRD167J-102	1K	1/6W	CARBON	

Resistors

ITEM	PART NUMBER	DESCRIPTION			AREA
R559	QRD167J-392	3.9K	1/6W	CARBON	
R560	QRD167J-392	3.9K	1/6W	CARBON	
R561	QRD167J-392	3.9K	1/6W	CARBON	
R562	QRD167J-392	3.9K	1/6W	CARBON	
VR401	QVDA92W-E15B	100K		VARIABLE	
VR403	QVDB94B-E15B	100K		VARIABLE	


△ : SAFETY PARTS.

Others

ITEM	PART NUMBER	DESCRIPTION			AREA
	E12171-003	CIRCUIT BOARD			
	E3400-439	SPACER			
	E75817-001	HOLDER			
J401	QMS3501-021	MINI JACK			
J701	VMC0107-R03	CONNECTOR			
S101	ESP0001-018	TACT SWITCH			
S102	ESP0001-018	TACT SWITCH			
S103	ESP0001-018	TACT SWITCH			
S104	ESP0001-018	TACT SWITCH			
S105	ESP0001-018	TACT SWITCH			
S110	ESP0001-018	TACT SWITCH			
S401	QSP2256-001	PUSH SWITCH			
S501	ESP0001-018	TACT SWITCH			
S502	ESP0001-018	TACT SWITCH			
S503	ESP0001-018	TACT SWITCH			
S504	ESP0001-018	TACT SWITCH			
S505	ESP0001-018	TACT SWITCH			
S506	ESP0001-018	TACT SWITCH			
S507	ESP0001-018	TACT SWITCH			
S508	ESP0001-018	TACT SWITCH			
S509	ESP0001-018	TACT SWITCH			
S510	ESP0001-018	TACT SWITCH			
S511	ESP0001-018	TACT SWITCH			
S512	ESP0001-018	TACT SWITCH			
S513	ESP0001-018	TACT SWITCH			
S514	ESP0001-018	TACT SWITCH			
S515	ESP0001-018	TACT SWITCH			
S516	ESP0001-018	TACT SWITCH			
S517	ESP0001-018	TACT SWITCH			
FL501	ELU0001-077	FL TUBE			
FW101	EWR37D-30LS	FLAT WIRE			
FW105	EWR23C-20NN	FLAT WIRE			
FW106	EWR23C-16NN	FLAT WIRE			
FW113	EWR37D-13SS	FLAT WIRE			
FW114	EWR23C-40NN	FLAT WIRE			
FW115	EWR33D-10SS	FLAT WIRE			
FW116	EWR33D-10SS	FLAT WIRE			
FW302	EWR23C-40JN	FLAT WIRE			
FW303	EWR33D-40LS	FLAT WIRE			
FW304	EWR34D-35LS	FLAT WIRE			
FW702	EWR39D-25LS	FLAT WIRE			
FW806	EWR34D-16SS	FLAT WIRE			
FW807	EWR34D-25LS	FLAT WIRE			
RE101	ECX0004-194KM	RESONATOR			
XT501	ECX0001-000KS	RESONATOR			

△ : SAFETY PARTS

Packing Materials and Part Numbers

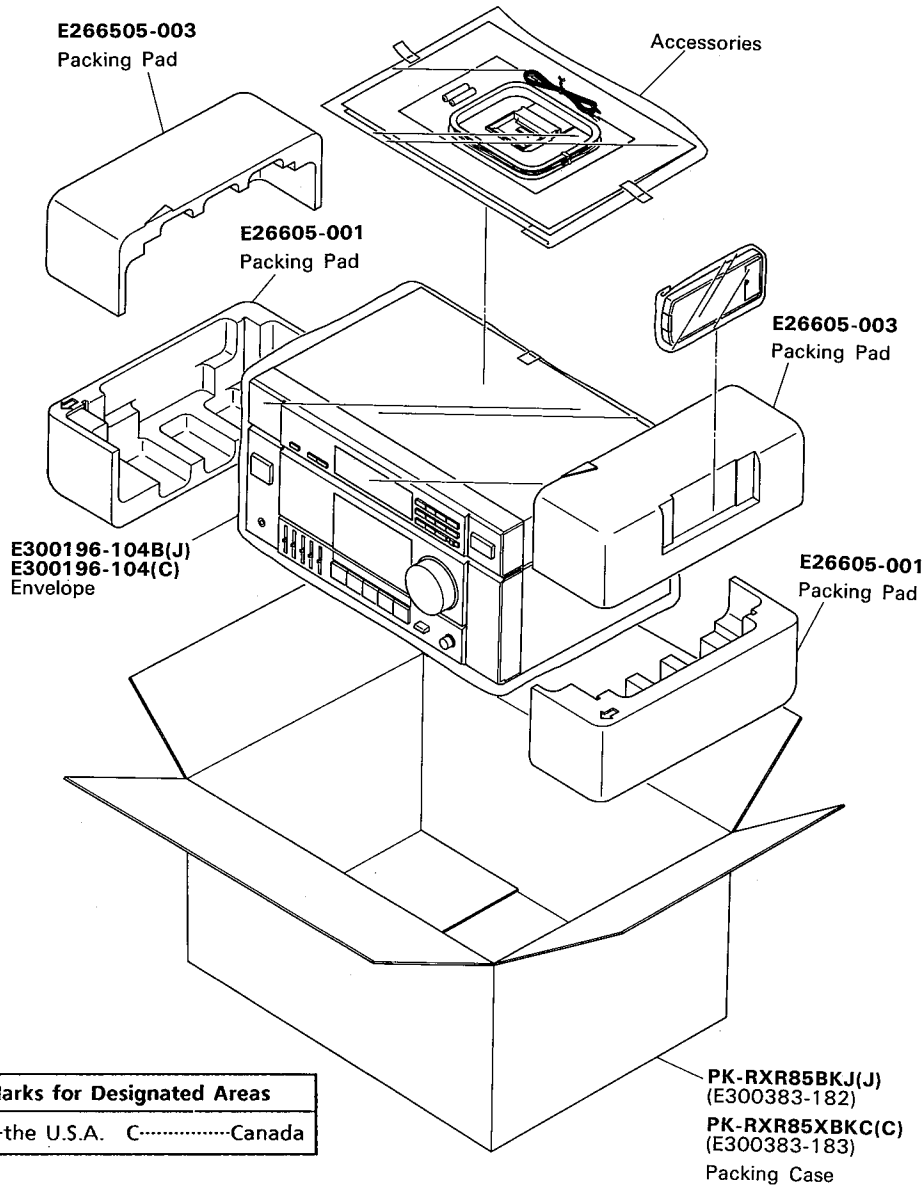

The Marks for Designated Areas
 J.....the U.S.A. C.....Canada

Accessories List

Part Number	Part Name	Q'ty	Description	Areas
E30580-1568A	Instruction Book	1		J
E30580-1569A	Instruction Book	1		C
BT-20048C	Warranty Card	1		J
BT-20025K	Warranty Card	1		C
BT20044F	Safety Instruction Sheet	1		J
BT20108	Service Information Card	1		J
BT20071A	Service Center List	1		C
EQB4001-015	AM Loop Antenna	1		
EWP502-005K	Built in Antenna	1		
UM-4NJ-2PSA	Battery	1		
RM-SR85U	Remote Controller	1		
RM-SR85UBATC	Battery Cover	1		
E72360-001	Caution Sheet	1		C
E66416-003	Envelope	1		J
QPGA025-03505	Poly Bag	1		

The Marks for Designated Areas
 J.....the U.S.A. C.....Canada

Safety Parts

MEMO

MEMO

JVC

VICTOR COMPANY OF JAPAN LIMITED
AUDIO PRODUCTS DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

