

JVC

SERVICE MANUAL

COMPACT COMPONENT SYSTEM

FX-F3000/FX-F3000R : AX-F3000

FM/AM TUNER


INTEGRATED AMPLIFIER

XL-F3000

COMPACT DISC PLAYER

:TD-F3000

DOUBLE CASSETTE DECK

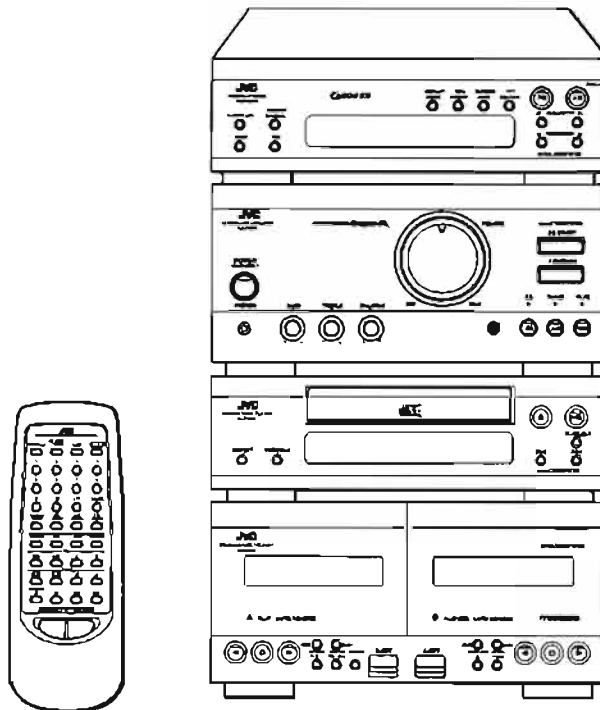

| | |
|---------------------|-----------|
| Pick up | OPTIMA-6 |
| CD signal processor | MN66270RB |

Area Suffix

| | | |
|----|-------|--|
| BS | | the U.K. |
| C | | Canada |
| EF | | Continental Europe Except Germany & Italy |
| EN | | Nordic Countries |
| G | | Germany |
| J | | the U.S.A |
| UB | | Hong Kong |
| US | | Singapore |
| UT | | Taiwan |
| U | | Universal Except All of Above |

COMPACT
disc
DIGITAL AUDIO

Note: Press S510 on ENH-296-1 for checking only AX-F3000 unit or units except FX-F3000/FX-F3000R.
Discharge C404 after services.

Contents

| | | | |
|---|-----|---------------------------------|------|
| <i>Safety Precautions</i> | 1-2 | <i>Parts List</i> | |
| <i>Important for Laser Products</i> | 1-3 | <i>AX-F3000</i> | 6-1 |
| <i>Instruction Book</i> | 1-4 | <i>XL-F3000</i> | 7-1 |
| <i>AX-F3000</i> | 2-1 | <i>TD-F3000</i> | 8-1 |
| <i>XL-F3000</i> | 3-1 | <i>FX-F3000/FX-F3000R</i> | 9-1 |
| <i>TD-F3000</i> | 4-1 | <i>Accessories List</i> | 10-1 |
| <i>FX-F3000/FX-F3000R</i> | 5-1 | <i>Packing Materials</i> | 10-2 |

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorised in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits.
2. Any unauthorised design alterations or additions will void the manufacturer's guarantee ; furthermore the manufacturer cannot accept responsibility for personal injury or property damage resulting therefrom.
3. Essential safety critical components are identified by (Δ) on the Parts List and by shading on the schematics ,and must never be replaced by parts other than those listed in the manual. Please note however that many electrical and mechanical parts in the product have special safety related characteristics . These characteristics are often not evident from visual inspection . Parts other than specified by the manufacturer may not have the same safety characteristics as the recommended replacement parts shown in the Parts List of the service manual and may create shock , fire , or other hazards .
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

Warning

1. Service should be performed by qualified personnel only.
2. This equipment has been designed and manufactured to meet international safety standards.
3. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
4. Repairs must be made in accordance with the relevant safety standards.
5. It is essential that safety critical components are replaced by approved parts.
6. If mains voltage selector is provided, check setting for local voltage .

Important for Laser Products

1. **CLASS 1 LASER PRODUCT**
2. **DANGER** : Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION** : There are no serviceable parts inside the Laser Unit. Do not disassemble the Laser Unit. Replace the complete Laser Unit if it malfunctions.
4. **CAUTION** : The compact disc player uses invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.
5. **CAUTION** : If safety switches malfunction, the laser is able to function.
6. **CAUTION** : Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
7. **CAUTION** : The compact disc player provides a laser diode of wavelength 780-790nm and optical output power typical 3mW at the laser diode.

WARNING : Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen.

VARO : Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen.

ADVARSEL : Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

ADVARSEL : Usynlig laserstrålning ved åbning, når sikkerhedsbryteren er avslott. unngå utsettelse for stråling.

REPRODUCTION AND POSITION OF LABELS

WARNING LABEL



(Except for the U. S. A.)

DANGER: Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

WARNING: Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)

ADVARSEL: Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling. (d)

VARO: Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

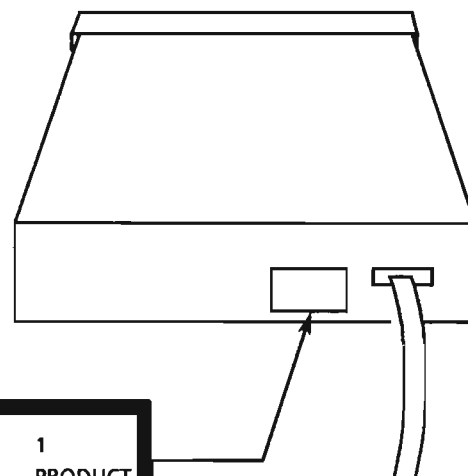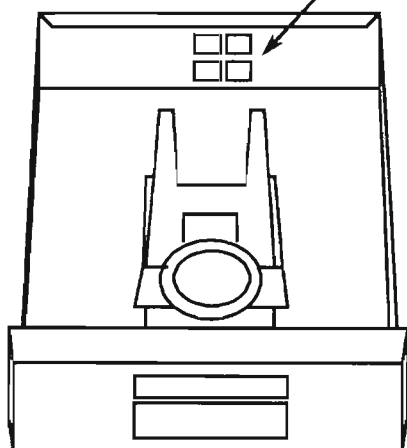

**CLASS 1
LASER PRODUCT**

CLASSIFICATION LABEL

(Except for the U. S. A. and Canada)

| | | | |
|--|----|--|----|
| Introduction | 2 | Using the Cassette Deck (Listening to a Tape) | 21 |
| How This Manual is Organized | 2 | One Touch Play | 21 |
| Getting Started | 3 | Regular Play | 21 |
| Accessories | 3 | Fast Left and Fast Right | 22 |
| Putting Batteries in the Remote Control | 3 | Music Scan | 22 |
| Connecting the External Wire | 3 | Finding the Beginning of the Next Song | 22 |
| Connecting the System Control Cords | 4 | Finding the Beginning of the Current Song | 22 |
| Connecting the Speakers | 4 | Other Useful Features of the Cassette Deck | 23 |
| Connecting the FM Antenna | 5 | Reverse Mode | 23 |
| Connecting the AM (MW/LW) Antenna | 5 | Continuous Play (only available when Reverse mode is on) | 23 |
| Connecting the Minidisc Recorder and Other Equipment | 6 | Dolby Noise Reduction | 23 |
| Switches, Buttons and Controls | 7 | Dolby HX PRO | 23 |
| Front Panel | 7 | Listening to the Turntable or Other Equipment through Your System | 24 |
| Remote Control | 9 | Using JVC's Minidisc Recorder Connected to the COMPU LINK 3+ MD Terminal | 24 |
| Displays | 10 | Using the Cassette Deck (Recording) | 25 |
| Tuner Display | 10 | Things to Know before You Start Recording | 25 |
| CD Player Display | 10 | Standard Recording | 26 |
| Using the Amplifier | 11 | Recording any Sound Source to Tape CD to Tape Recording | 27 |
| Turning the System On and Off | 11 | Tape to Tape Recording (Dubbing) | 28 |
| Turning the System Off | 11 | Using the Tuner | 29 |
| Controlling the Sound | 11 | Setting the Clock | 29 |
| Volume Control | 11 | Setting the Recording (REC) Timer | 29 |
| Speaker Balance Control | 11 | Setting the Daily Timer | 30 |
| Bass Control | 11 | Setting the Sleep Timer | 32 |
| Treble Control | 11 | Timer Priority | 33 |
| Using the CD DIRECT Function | 12 | Care and Maintenance—General Notes | 34 |
| Using the PRESENCE Function | 12 | Compact Discs | 34 |
| Listening with Headphones | 12 | Moisture Condensation | 34 |
| Using the Tuner | 13 | Cassette Tapes | 34 |
| One Touch Radio | 13 | Cassette Deck | 34 |
| Tuning in Stations Manually | 13 | Troubleshooting | 35 |
| Receiving in Stereo or Monaural | 13 | Specifications | 36 |
| Presetting Stations in Memory | 13 | | |
| Tuning in Preset Stations | 14 | | |
| Erasing the Preset Stations | 14 | | |
| Receiving FM Stations with RDS (Radio Data System) | 15 | | |
| What Information RDS Can Provide | 15 | | |
| Searching for Programs by PTY Codes | 16 | | |
| Setting EON Standby Reception | 16 | | |
| ALARM Function | 17 | | |
| Using the CD Player | 18 | | |
| Basics of Using the CD Player | 18 | | |
| Playing a CD | 18 | | |
| Finding the Track or a Particular Point You Want | 18 | | |
| Locating a Track with the Remote Control Directly | 19 | | |
| Programming the Playing Order of the Tracks | 19 | | |
| Repeating a Selection or the Entire Disc | 20 | | |

Here are some of the things that make your components (hereafter, called "System") easy to use.

- The controls and operations have been redesigned to make them easy to use so you can spend your time listening to music.
- With the One Touch Play feature of JVC's COMPU PLAY, you can turn on the System and start the tuner, the cassette deck, or the CD player with a single touch. If the System is not ready, such as no CD or tape in place, the System still turns on and then pauses so you can put in a CD or tape.
- Three tuners, Recording, Daily, and Sleep Timers, are extremely easy to set so you can really use them.
- A home-use RDS tuner offers most of the RDS services. These services include the display of station names and program types, and scanning stations by using the program types.



How This Manual is Organized

- This manual explains how to use the following four components.
 - FM/MW/LW Tuner FX-F3000R
 - Integrated Amplifier AX-F3000
 - Compact Disc Player XL-F3000
 - Double Cassette Deck TD-F3000
- This manual mainly explains operations using the buttons and controls on the front panels. If operation using the Remote Control is different from that using the buttons on the front panels, it is then explained.

IMPORTANT CAUTIONS

- 1 Installation of the System**
 - Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C or 41°F and 95°F).
 - Leave sufficient distance between the System and your TV.
 - Keep the speakers away from TV to avoid interference with TV.
 - Do not use the System in a place subject to vibrations.
- 2 Power cord**
 - Do not handle the power cord with wet hands!
 - The small amount of the power (11 watts) is always consumed as long as the power cord is connected to the wall outlet.
 - When unplugging from the wall outlet, always pull the plug, not the power cord.
- 3 Malfunctions, etc.**
 - There are no user serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
 - Do not insert any metallic object into the cabinets.

Getting Started

Accessories

Check to be sure you have all of the following things, which are supplied with the System.

- FM Wire Antenna (1)
- AM (S)/W/LW, Loop Antenna (1)
- Remote Control (1)
- Batteries (2)
- External Wire (1)

If any are missing, contact your dealer immediately.

Putting Batteries in the Remote Control

Match the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.



RO3 (UM-4)/AAAA (24F)


If the range or effectiveness of the Remote Control decreases, replace the batteries. Use two RO3 (UM-4)/AAAA (24F) type dry-cell batteries.

CAUTION

- To avoid battery leakage or explosion:
- Remove batteries when the Remote Control is not used for a long time.
 - When you need to replace the batteries, replace both batteries at the same time with new ones.
 - Do not use an old battery together with a new one.
 - Do not use different types of batteries together.
 - Do not expose batteries to heat or flame.

Connecting the External Wire

To prevent malfunction, connect the supplied wire as illustrated below.

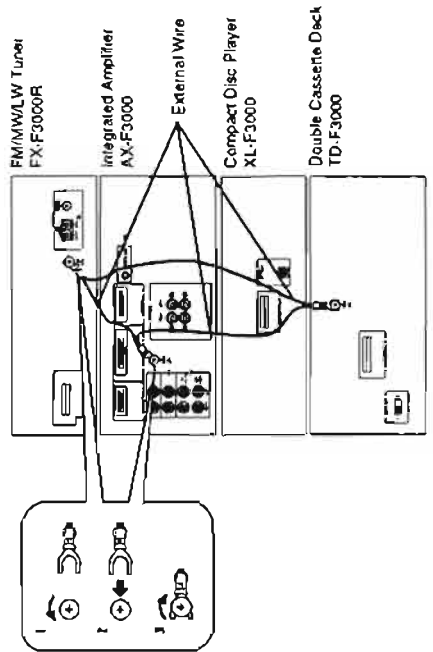


CAUTION

First make all connections before plugging the System into the AC power outlet.

Connecting the System Control Cords

Connect the components with the system control cords as illustrated below.

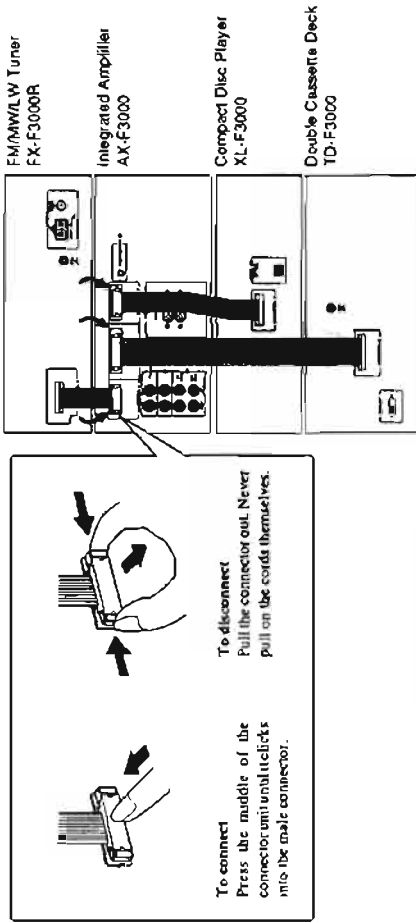

To connect
Press the middle of the connector until you feel a click into the male connector.

To disconnect
Pull the connector out. Never pull on the cords themselves.

Note


When connecting the components with the system control cords, make sure to connect the terminals having the same names like "CONNECTOR-A" or "CONNECTOR-B".

Connecting the Speakers



Twist and remove the insulation at the end of each speaker signal cable first, and then, connect the speakers to the SPEAKERS terminals by using the cutters.

For each speaker, connect the black (-) and red (+) terminals on the rear panel to the black (-) and red (+) terminals marked on the speakers.

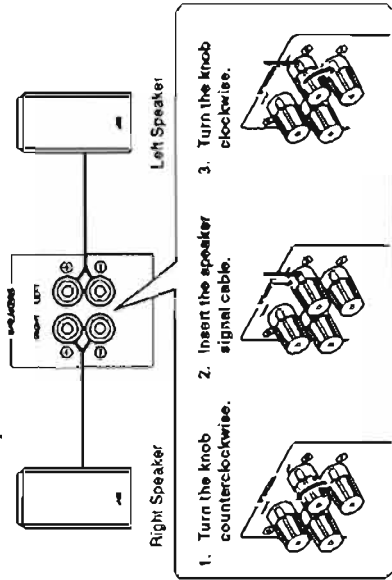


CAUTIONS

- Use speakers with the same speaker impedance indicated by the speaker terminals.
- If the TV is installed near speakers, irregular colors may result. In this case, set the TV away from the speakers.


CAUTION

First make all connections before plugging the System into the AC power outlet.


Connecting the Minidisc Recorder and Other Equipment

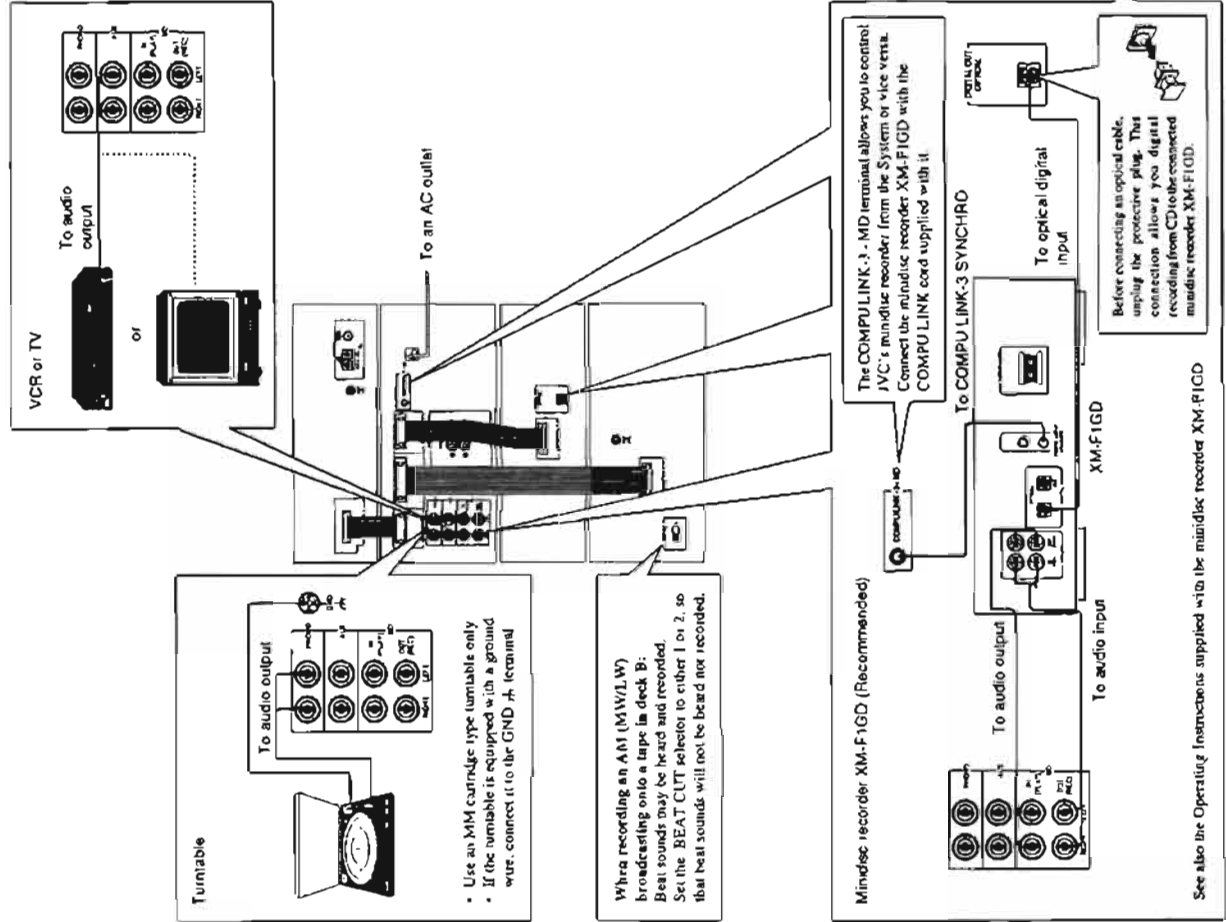

Connecting the FM Antenna

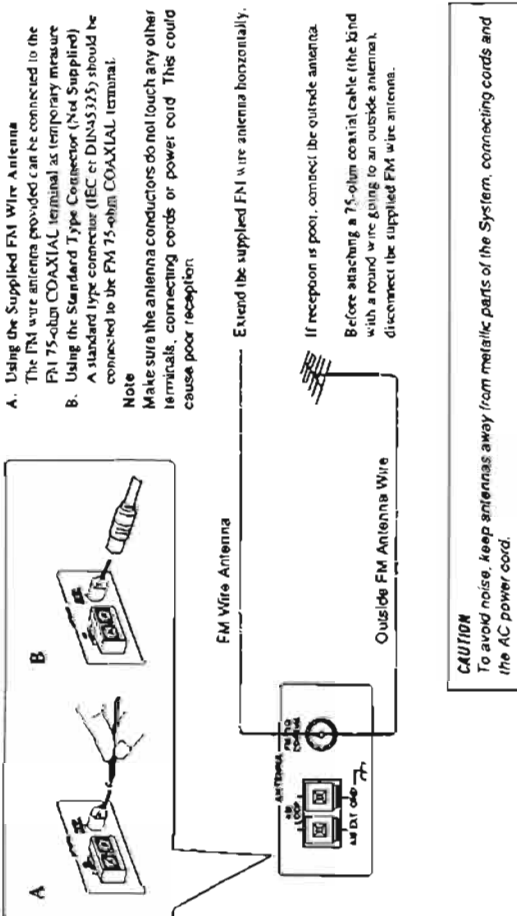


Connecting the AM (MW/LW) Antenna

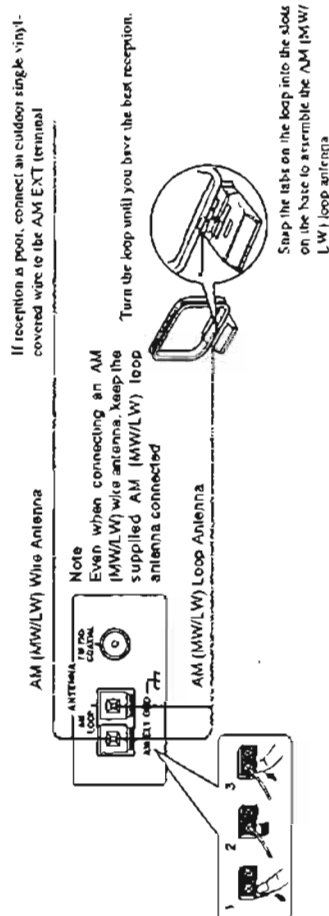


Switches, Buttons and Controls

Become familiar with the buttons and controls on the front panels before use.

**Front Panel
FM/AM/WLW Tuner FX-F3000R**

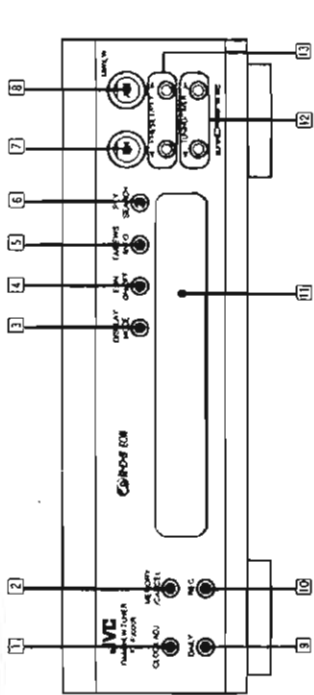

Integrated Amplifier AX-F3000

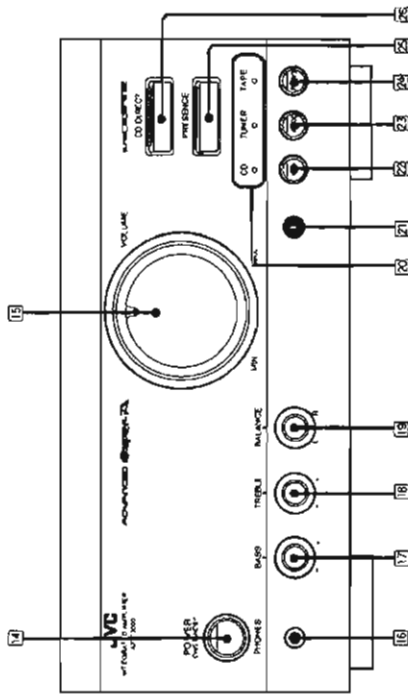

Refer to the pages in parentheses for details


FM/AM/WLW Tuner FX-F3000R

- 1 CLOK ADJ button (29)
- 2 MEMORY/CANCEL button (13, 14)
- 3 DISPLAY MODE button (15)
- 4 EON ON/OFF button (16)
- 5 T/NEWS/INFO button (16)
- 6 PTY SEARCH button (16)
- 7 FM button and indicator (13)
- 8 AM (MW/LW) button and indicator (13)
- 9 DAILY button (30)
- 10 REC button (29)
- 11 Display (10)
- 12 TUNING/TIMER </> buttons (13, 29)
- 13 PRESET/PTY </> buttons (14, 16)


Integrated Amplifier AX-F3000

- 14 POWER button and ON/STANDBY indicator (11)
- 15 VOLUME control and indicator (11)
- 16 PHONES jack (12)
- 17 BASS control (11)
- 18 TREBLE control (11)
- 19 BALANCE control (11)
- 20 Source indicators (CD/TUNER/TAPE)
- 21 Remote sensor
- 22 MD button and indicator (24)
- 23 AUX button and indicator (24)
- 24 PHONO button and indicator (24)
- 25 PRESENCE button and indicator (12)
- 26 CD DIRECT button and indicator (12)

Compact Disc Player XL-F3000

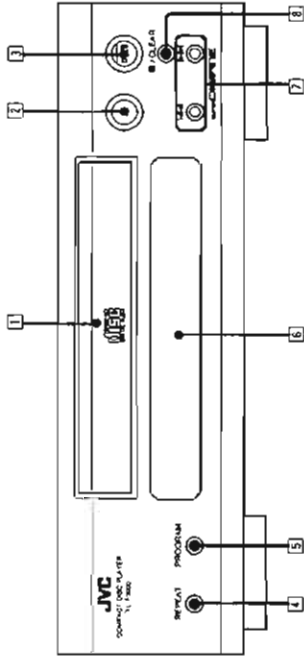

Double Cassette Deck TD-F3000

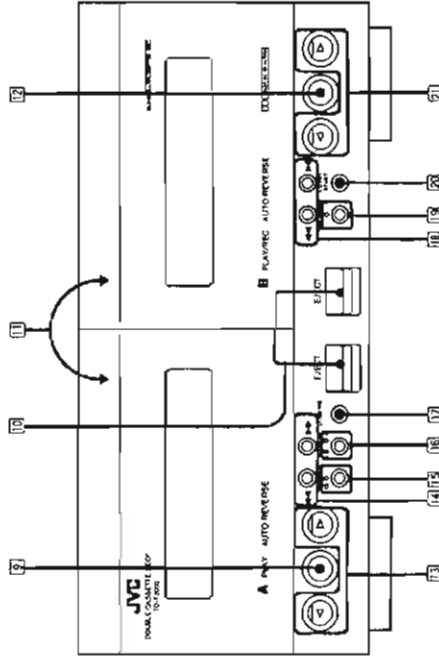

Refer to the pages in parentheses for details.


Compact Disc Player XL-F3000

- 1 CD tray (18)
- 2 (Open/Close) button (18)
- 3 (Play/Pause) button and indicator (18)
- 4 REPEAT button (20)
- 5 PROGRAM button (20)
- 6 Display (10)
- 7 (Skip Left/Skip Right or Fast Forward/Fast Reverse) buttons (18, 20)
- 8 (Stop/CLEAR button (18, 20)


Double Cassette Deck TD-F3000

- 9 (Stop) button (for Deck A) (21)
- 10 EJECT buttons (21)
- 11 Cassette Holders
- 12 (Stop) button (for Deck B) (21)
- 13 </>/> (Play Forward/Play Reverse) buttons and indicators (for Deck A) (21)
- 14 </>/> (Fast Left/Fast Right) buttons (for Deck A) (22)
- 15 REVERSE button and indicator (23)
- 16 DOLBY NR button and indicators (21)
- 17 DUBBING button (28)
- 18 </>/> (Fast Left/Fast Right) buttons (for Deck B) (22)
- 19 REC PAUSE button and indicator (26)
- 20 CD REC START button (27)
- 21 </>/> (Play Forward/Play Reverse) buttons and indicators (for Deck B) (21)

Remote Control

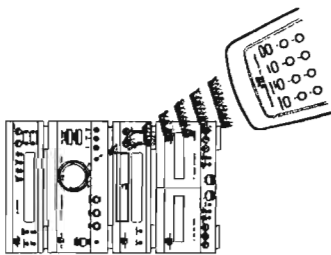

When using the Remote Control, aim it to the remote sensor on the front panel.

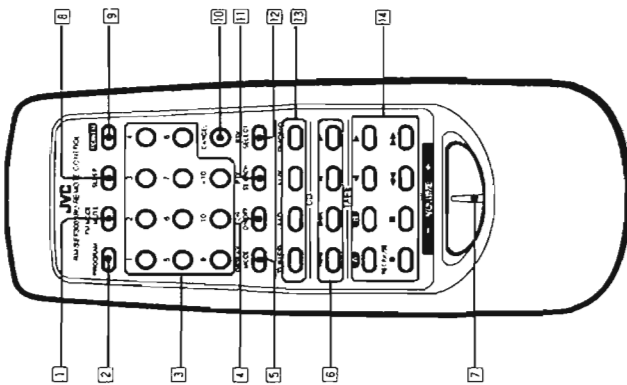

- 1 FM MODE MUTE button (13)
- 2 PROGRAM button (19)
- 3 10 key pad (14, 19)
- 4 EON ON/OFF button (16)
- 5 DISPLAY MODE button (15)
- 6 CD player control section (18)
 - ▶ (Play) button (18)
 - (Stop) button (18)
 - ◀/▶ (Skip Left/Skip Right) buttons (18)
- 7 VOLUME button (+/-) (11)
- 8 SLEEP button (32)
- 9 POWER button (11)
- 10 CANCEL button (20)
- 11 PTY SEARCH button (16)
- 12 PTY SELECT button (16)
- 13 Source selecting buttons (TUNER/MID/AUX/PHONO) (13, 24)
- 14 Cassette deck control section (21)
 - ▶ (Play) button (for Deck A) (21)
 - (Stop) button (for Deck B) (21)
 - ◀/▶ (Play) buttons (21)
 - (Fast Left/Fast Right) buttons (22)
 - REC PAUSE ● button (for Deck B only) (26)

Refer to the pages in parentheses for details.


Note

When you use the Remote Control, be sure which source the Remote Control is activated for.


- Before controlling the tuner and using the 10 key pad to select preset stations, press TUNER first on the Remote Control.
- Before controlling the CD player and using the 10 key pad to select CD tracks, press ▶, then ■ on the CD control section first.
- Before controlling the cassette deck, press ▶ or ■ on the cassette deck control section first to select which deck to use.

Displays

Tuner Display

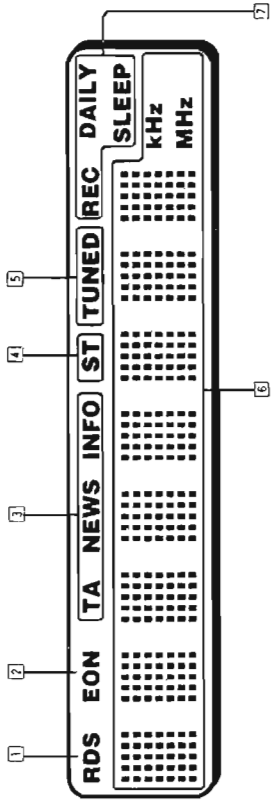

CD Player Display

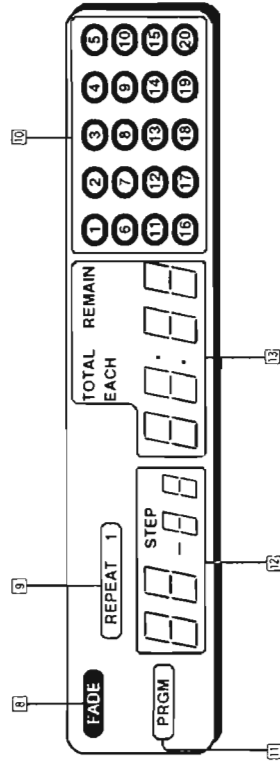

Refer to the pages in parentheses for details.

Tuner Display

- 1 RDS indicator (15)
- 2 EON indicator (16)
- 3 EON Standby reception indicator (TANews/INFO) (16)
- 4 ST (Stereo) indicator (13)
- 5 TUNED indicator (13)
- 6 Clock, frequency, timer-on time, timer-off time display (13, 29)
- 7 Timer indicators (29, 30, 32)

CD Player Display

- 8 FADE indicator (27)
- 9 REPEAT indicator (20)
- 10 Track number display
- 11 PRGM (Program) indicator (19)
- 12 Track and program step display
- 13 Playing time, remaining time display

Using the Amplifier

Here are some basic things to use this System. If something in a later procedure is unclear to you, check back here.

Turning the System On and Off

POWER
ON/STANDBY



Turning the System On

Press **POWER** so that the **ON/STANDBY** indicator goes off.


- The System comes on ready to do whatever it was doing when the power was last shut off.

Turning the System Off

Press **POWER** again so that the **ON/STANDBY** indicator lights up and the display blanks, except for the clock indication.

- The small amount of the power (11 watts) is always consumed even in standby mode.
- To turn off the System completely, unplug the AC power cord from the AC outlet. When you unplug the AC power cord, the preset stations of the tuner will be erased in a few days.

Controlling the Sound

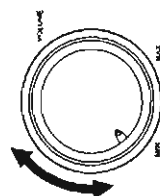

The same set of buttons and knobs control the sound, no matter which sound source is producing it.

Volume Control

Rotate the **VOLUME** control clockwise to increase the volume, counterclockwise to reduce it.

On the Remote Control:

Press **VOLUME +** to increase the volume, **VOLUME -** to reduce it.



Speaker Balance Control

If the sounds you hear from the right and left speakers are not well-balanced, you can adjust the speaker output balance with the **BALANCE** control.


Bass Control

Rotate the **BASS** control clockwise to increase bass reinforcement, counterclockwise to reduce bass reinforcement.

Treble Control

Rotate the **TREBLE** control clockwise to increase treble reinforcement, counterclockwise to reduce treble reinforcement.

Using the CD DIRECT Function



This function is useful when you want to listen to a CD with higher sound quality. The playback signal from the CD player is output directly, without passing through the **BASS**, **TREBLE**, **BALANCE** control circuits, and **PRESENCE** circuit.

To use this function, press **CD DIRECT** so that the indicator lights up.

To cancel this function, press **CD DIRECT** again so that the indicator goes off.

Notes

- If you press **CD DIRECT** while the power is on, CD play starts with a CD loaded.
- The **CD DIRECT** function and the **PRESENCE** function cannot be used at the same time. If you press **CD DIRECT** while using the **PRESENCE** function, the **PRESENCE** function will be canceled.

Using the PRESENCE Function



This function is useful when you listen to music at low volume or with small speaker systems.

To use this function, press **PRESENCE** so that the indicator lights up.

To cancel this function, press **PRESENCE** again so that the indicator goes off.

Note

The **PRESENCE** function and the **CD DIRECT** function cannot be used at the same time. If you press **PRESENCE** while using the **CD DIRECT** function, the **CD DIRECT** function will be canceled.

Listening with Headphones

A standard pair of headphones can be connected at the **PHONES** jack on the front panel. No sound can be heard from the speakers.

CAUTION

Be sure to turn down the volume before connecting or putting on headphones, as high volume can damage both the headphones and your hearing.

Using the Tuner

You can listen to both FM and AM (MW/LW) stations. Stations can be tuned manually, automatically, or from preset memory. Before listening to the radio, check that both the FM and AM (MW/LW) antennas are firmly connected. (See page 5.)


One Touch Radio



Just press AM (MW/LW) to turn on the System and start playing the most recent AM (MW/LW) station tuned in, or press FM to start the most recent FM station playing. If you press TUNER on the Remote Control instead, you can start playing the most recent station tuned in.

- You can switch from any other sound source to the tuner by pressing either AM (MW/LW) or FM.

Tuning in Stations Manually

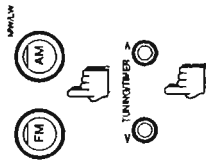

- Press FM or AM (MW/LW) to turn on the System.
- Press and release TUNING/TIMER < or > to move from station to station until you find the one you want.
OR
Hold down TUNING/TIMER < or >, the frequency starts changing on the display. As soon as a station is tuned in, the TUNED indicator lights up on the display and the frequency stops changing.
Repeat this procedure until a station you want is tuned in.

Receiving in Stereo or Monaural



- When an FM stereo broadcast is hard to receive or noisy:
- Press FM MODE MUTE on the Remote Control so that "FM MONO" appears on the display and reception improves, although you lose the stereo effect. In this state, you will hear some noise while tuning into a station.
 - To restore the stereo effect, press FM MODE MUTE again so that the "FM AUTO" appears on the display. In this state, when a program is broadcast in stereo, the ST (Stereo) indicator lights up on the display and you will hear the stereo sound; when in monaural, the ST indicator goes off and you will hear the monaural sound. Furthermore, in this state you will not hear noise while tuning in stations.

Presetting Stations in Memory

- Once stations are assigned to channel numbers, any of these stations can quickly be called up.
- You can preset a total of 40 stations: either FM or AM (MW/LW).
 - In order to use RDS broadcasting effectively, you need to preset stations in memory. Both PTY Search and EON function (which will be explained later) are applicable only to the preset FM stations.
 - In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.

IMPORTANT

When you want to preset FM stations in stereo, Press FM MODE MUTE on the Remote Control so that "FM AUTO" appears on the display before presetting stations.

- Tune in the station you want to preset (see above).
- Press MEMORY/CANCEL. "memo P_ _" appears on the display for about 5 seconds.



- Press PRESET/PTY < or > to assign a channel number while "P_ _" is blinking on the display.
- Press MEMORY/CANCEL. "stored" appears on the display.
 - If you store a new station on a used number, the new station erases the previously stored one.
- Repeat steps 1 to 4 for each station you want to store in memory.

CAUTION
If the System is unplugged or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

Tuning in Preset Stations

This method is possible after presetting stations by yourself.

- Press FM or AM (MW/LW).
- Press once and release PRESET/PTY > (or <) to go to the next (or previous) preset station, or hold PRESET/PTY < or > to cycle through the preset station: release the button when the preset station you want appears on the display.
The stations you have not preset are skipped.

You can use the Remote Control to tune in preset stations

- Press TUNER so that you can receive the most recent station tuned in.
- Select the station by entering the preset number you want using the 10 key pad.
 - Example: For number 5, press 5. For number 15, press +10 then 5. For number 20, press +10 then 10.
 - If you select the stations you have not preset, "canceled" appears on the display.

Erasing the Preset Stations

You can also use the MEMORY/CANCEL button to cancel the preset stations.

- Hold down MEMORY/CANCEL for about 5 seconds. "canc. P_ _" appears on the display.
- Press PRESET/PTY < or > to assign a channel number while "P_ _" is blinking on the display.
- Press MEMORY/CANCEL. "canceled" appears on the display.
- Repeat steps 1 to 3 for each station you want to erase.

Receiving FM Stations with RDS (Radio Data System)



RDS is a broadcasting service a growing number of FM stations are now providing. It allows the FM stations to send additional signals along with their regular program signals. For example, the stations send their station names and information about what type of program they broadcast, such as sports or music, etc.

When tuned to an FM station providing the RDS service, the RDS indicator lights up on the display, the station frequency (and then the station name if sent) is displayed.

One convenient RDS service is "Enhanced Other Networks (EON)". This allows the tuner to automatically switch to a program of your choice when one starts in your broadcast area.

- Not all FM stations provide RDS service, nor do all RDS stations provide the same services. If in doubt, check with local radio stations for details on RDS services in your area.

Note
RDS may not operate correctly if the station tuned is not transmitting data properly or if the signal strength is weak.

What Information RDS Can Provide

The following RDS services are available and you can see the following RDS information by pressing DISPLAY MODE.

RDS Service Available

PS (Program Service name)
Identifies each station by a name.

Clock Time (Non-RDS service)
Displays the time.

RT (Radio Text)
Allows the RDS station to send text messages that appear on the tuner display.

PTY (Program Type)
Identifies the type of RDS program.

- While RDS information is being received from a station, "wait PS", "wait RT", or "wait R T" may appear on the display.

The program types are as follows:

- TRAFFIC:** Traffic announcement (usually called "TA")
- NEWS:** News
- INFO:** Programs on medical service, weather forecast, etc.
- POP M:** Pop music
- ROCK M:** Rock music
- M.O.R. M:** Middle-of-the-road music (usually called "easy listening")
- LIGHT M:** Light music
- CLASSICS:** Classics
- OTHER M:** Other music
- AFFAIRS:** Topical program expanding on current news or affairs
- SPORT:** Sports events
- EDUCATE:** Educational programs
- DRAMA:** Radio plays
- CULTURE:** Programs on national or regional culture
- SCIENCE:** Programs on natural sciences and technology
- VARIED:** Other programs like comedies or ceremonies
- NONE:** Undefined

ALARM: Emergency broadcasts

Station Frequency (Non-RDS service)


Displays station frequencies.

Preset Channel Number (Non-RDS service)

Displays preset channel numbers.

Note

If you press DISPLAY MODE while receiving non-RDS FM stations or AM (MW/LW) stations, the display only shows the clock time, station frequency, and preset channel number in sequence.

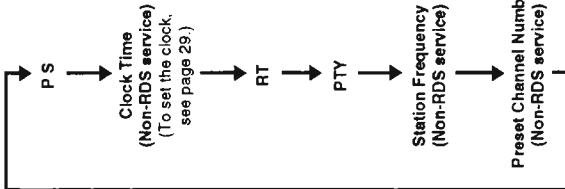

Searching for Programs by PTY Codes

One of the advantages of the RDS service is that you can locate a particular kind of program by specifying the PTY (Program Type) codes.

- PTY Search can be used even while receiving AM (MW/LW) broadcasts or while playing the other source.
- PTY Search is applicable to preset FM stations only.

1. Press PTY SEARCH.

"PTY" and "select" alternates on the display.

2. Press PRESET/PTY < or > (or PTY SELECT on the Remote Control) to select a PTY (Program Type) code.

When you press PRESET/PTY < or > on the front panel, the PTY codes change in the following order (when using the Remote Control, they change only rightward):
TRAFFIC ↔ NEWS ↔ INFO ↔ POP M ↔ ROCK M ↔ M.O.R. M ↔ LIGHT M ↔ CLASSICS ↔ OTHER M ↔ AFFAIRS ↔ SPORT ↔ EDUCATE ↔ DRAMA ↔ CULTURE ↔ SCIENCE ↔ VARIED ↔ NONE ↔ (back to the beginning)

3. Press PTY SEARCH again while the selected PTY code remains on the display.

Searching starts.
 The selected PTY code blinks during PTY Search.

Notes

- Once the station broadcasting the selected PTY code is found, searching stops. Then the station is tuned in and the preset channel number appears on the display. The preset channel number stays blinking for 10 seconds before searching ends.
- If you press PTY SEARCH again during this period, search for the same PTY code will restart. PTY Search is only completed when the indicated preset channel number stops blinking and stays lit.
- If stations broadcasting a program of the selected PTY code is not found, "No PGM" appears on the display after going through the preset channels.

Setting EON Standby Reception

With the EON (Enhanced Other Networks) code, the System can perform a standby reception which enables you to obtain desired PTY code(s) available from other stations.

- The EON indicator will light up only while receiving stations with an EON code.
- You can set EON Standby reception with either band (FM or AM (MW/LW)) received.
- EON Standby reception is not applicable in the following cases:
 - While playing the other sources.
 - While receiving non-RDS FM stations and AM (MW/LW) stations. (EON indicator will not light up.)

1. Press EON ON/OFF so that "EON MODE" appears on the display.

Indicator of the PTY code(s) (TA/NEWS/INFO) previously selected lights up.

2. Select PTY code(s) you want by pressing TA/NEWS/INFO.

TA: Traffic announcement in your area.
NEWS: News
INFO: Programs on medical service, weather forecast, etc.

Each time you press TA/NEWS/INFO, the EON Standby reception (TA/NEWS/INFO) indicator changes as follows:

"TA NEWS INFO" → "TA INFO" → "NEWS INFO" → "TA NEWS" → (back to the beginning)

As soon as your selection is entered, the tuner goes into the EON Standby reception mode.



On the front panel



From the Remote Control



Using the CD Player

Here are the basic things you need to know to play a CD and locate the different selections on it. Each selection is called a track, so when we are talking about locating a track, we are also talking about how you find a certain song or performance.

Basics of Using the CD Player

- The quickest way to start a CD is with One Touch Play:
 - Press **▶/▶** (Play) on the CD player (or **▶** on the CD player control section of the Remote Control)
 - If a CD is already loaded, the System automatically turns on and starts playing the CD.
 - If no CD is loaded, the CD tray comes out so you can put in a CD, with printed side up. Then press **▶/▶** (or **▶** on the CD player control section). The tray closes and the CD starts playing.
 - If you press **⏏** (Open), the System automatically turns on and the CD tray comes out.



IMPORTANT

When you use the Remote Control Remember you have to press **▶**, then **■** on the CD player control section to activate the 10 key pad for the CD player.


Playing a CD



1. Press **▶** (Open).
2. Put in CD, with printed side up, into the tray.
When using an 8 cm CD, place it on the inner circle of the tray.

CAUTION

Place the disc correctly on the circle of the tray

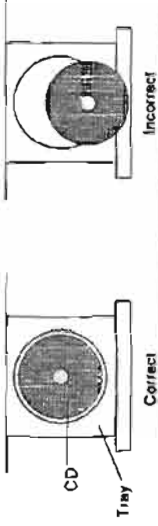

On the front panel



From the Remote Control

3. Press **▶/▶** (or **▶** on the CD player control section of the Remote Control).
 - The CD tray closes automatically.
 - The display shows the track being played and the length of time since it started.

To stop the CD, press **■**/CLEAR (or **■** on the CD player control section of the Remote Control).

To pause the play, press **⏏** (Pause) on the front panel while the CD is playing. To resume playing, press **▶/▶** (Play) again. (The Pause function cannot be used with **▶** on the CD player control section of the Remote Control.)

To remove a CD, press **⏏** (Open), take the CD out, and press **⏏** (Close) again to close the tray. Keep the tray closed except during loading and unloading to protect the mechanism from dust and damage.

Finding the Track or a Particular Point You Want

You can easily find the CD track and particular point you want by the following procedure

- Each time you press briefly and release **⏏** or **⏏** (Stop Left or Stop Right) the track changes by one
 - Press and release **⏏** to go ahead one track at a time.
 - Press and release **⏏** to go back one track at a time.
- Hold down **⏏** or **⏏** (when the CD player is stopped) allows you to change tracks continuously.
- Hold down **⏏** or **⏏** (Fast Forward or Fast Reverse) on the front panel during play will fast forward or fast reverse the CD so you can quickly find the particular point of a track you want to listen to. (The Fast Forward and Fast Reverse functions cannot be used from the Remote Control.)




While the tuner is for EON Standby reception, the display changes as follows:

1. While waiting for EON data of your selection,




Notes

- If no EON data is received, the tuner remains in this mode.
 - If the information you are waiting for is available from the current station, the indicator of the received PTY code will blink.
2. When the information of desired PTY data is received, the tuner tunes into the station sending the PTY data (sound is muted).



3. When the station is tuned in, the indicator of received PTY code starts blinking.



If the reception is failed, the previous station name and "EON seek" alternates on the display, and then, the indicator of the PTY code goes off and "EON fail" appears. The tuner then goes back to the station previously tuned.

4. When broadcasting of the selected PTY code ends, "EON end" appears and the tuner automatically goes back to the station previously tuned in.



To cancel the EON Standby reception, press EON ON/OFF (or TA/NEWS/INFO) while receiving the station tuned by EON Standby reception.

Notes

- EON broadcasts of some stations may not be compatible with the System. In the case of an incompatible EON broadcast, the EON indicator on the display may not light up.
- While receiving a program of the selected PTY code(s) by EON Standby reception, the station will not change to other stations even if a program of the same type is available from them.
- When a timer (recording or daily) starts operating while the EON Standby reception is operating, the EON Standby reception will be canceled, and the source selected by the timer will be played.
- While a timer (recording or daily) is operating, the EON Standby reception will not function.

ALARM Function

When an ALARM (Emergency) broadcast is being received, the tuner tunes in the station broadcasting the ALARM signal. "ALARM" and the station frequency will alternate on the display for your attention.

- ALARM function cannot work in the following cases
 - While playing the other sources
 - While receiving non-RDS FM stations and AM (MW/LW) stations.

Programming the CD from the front panel by the following procedure:

1. **Press PROGRAM.**
The PRGM indicator lights up on the display.
2. **Press <Left> or <Right> (Skip Left or Skip Right) to select the track you want.**
3. **Press PROGRAM to store the selected track.**
4. **Repeat steps 2 and 3 until you enter all the tracks you want to play.**
You can repeat the same tracks if you want.
5. **Press > (Play) to start playing the tracks in the order you have programmed.**



To stop the CD during programmed play, press CLEAR.

To erase the program, press CLEAR after you stop playing.

Before you start playing, you can do the following:

- If you want to change the entire program, press CLEAR on the front panel (or PROGRAM on the Remote Control). You can also erase the entire program by pressing OPEN.
- If you want to erase the last track, press CANCEL on the Remote Control. Each time you press CANCEL the last track in the program will be erased.
- To add a track to your program, just press the number you want to add using the Remote Control. (This is also possible during play.)

Repeating a Selection or the Entire Disc

You can have either all tracks or the individual track currently playing repeat as many times as you like by pressing REPEAT.

- Each time you press REPEAT, it cycles in the following order:


- REPEAT → REPEAT 1 → OFF (The REPEAT indicator goes off.) → (go back to the beginning)
- REPEAT REPEAT 1 Repeat all tracks in order or according to the program you have made.
- OFF Repeat the currently playing track. Repeat is canceled.



Locating a Track with the Remote Control Directly

Using the 10 key pad on the Remote Control allows you to go directly to the beginning of any track.

1. **Press >, then CLEAR on the CD player control section.**
This activates the 10 key pad for controlling the CD player.
2. **Enter the number of the track you want using the 10 key pad.**
Example: For track 5, press 5. For track 15, press +10 then 5. For track 20, press +10 then 10.
3. **As long as a CD is loaded and the System is on, the CD starts playing from the selected track.**

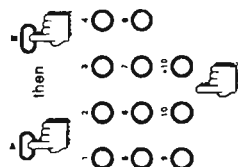


Programming the Playing Order of the Tracks

You can arrange the tracks to play in any order you like. The Remote Control is very useful for this because you can select tracks by number with the 10 key pad. You can also use the buttons on the front panel.

- You can program up to 32 tracks in any desired order.
- You can only make or change a program when the CD player is stopped.

Programming the CD track order from the Remote Control by the following procedure:

1. **Press >, then CLEAR on the CD player control section.**
This activates the 10 key pad for controlling the CD player.
2. **Press PROGRAM.**
The PRGM indicator lights up on the display.
3. **Press the number of the first track, then the number of the second track, and so on until you enter all the track numbers you want to play.**
• Example: For track 5, press 5. For track 15, press +10 then 5. For track 20, press +10 then 10.
• You can repeat the same tracks if you want.
4. **Press > on the CD player control section to start playing the tracks in the order you have programmed.**

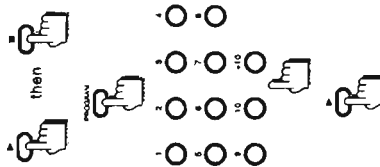

To stop the CD during programmed play, press CLEAR.

To erase the program, press PROGRAM after you stop playing.

Using the Cassette Deck (Listening to a Tape)

You can play, record and dub audio tapes by using the cassette deck.

- To record or dub, see Recording on page 25.
- With Automatic Tape Type Detection, you can listen to Type I, II and IV tapes without changing any settings.
- Most tapes are now recorded with the Dolby NR system (B or C), so first check which type of the Dolby NR system is used on the tape.

IMPORTANT
 When you use the Remote Control, Remember you have to press **◀** or **▶** on the cassette deck control section to select which deck to use.

One Touch Play




Regular Play



When power is already on, you can use these basic procedures:

1. Press EJECT for the deck you want to use.
2. When the cassette holder opens, put the cassette tape in, with the exposed part of the tape down toward the base of the holder.
 If the cassette holder does not open, turn the System off once and turn it on again, then press EJECT.
3. Close the cassette holder gently.
4. Press DOLBY NR repeatedly to set the same Dolby NR system as was used for recording the tape.
5. Press **◀** (or **▶** on the cassette deck control section of the Remote Control) to play the reverse side, or **▶** (or **▶** on the cassette deck control section) to play the front side.
 - Tape starts playing.
 - The indicator on the pressed button (**◀** or **▶**) starts blinking slowly, showing which way the tape is running.

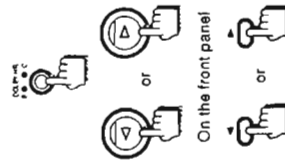

On the front panel
 From the Remote Control


Fast Left and Fast Right

- While the tape is stopped, press **◀◀** and the tape will wind rapidly onto the left side of the cassette tape without playing.
- While the tape is stopped, press **▶▶** and the tape will wind rapidly onto the right side of the cassette tape without playing.

CAUTION
 The use of C-120 (120 minutes turn around) or thinner tape is not recommended, since characteristic deterioration may occur and these tapes easily jam in the pinch and the capstan.

Music Scan

Shows the direction the tape runs

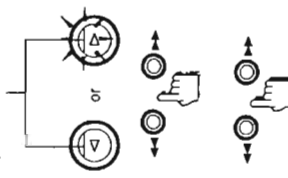

You can use Music Scan to locate the beginning of a song. Music Scan searches for blank portions that usually separate recorded songs, then plays the next song.

Finding the Beginning of the Next Song

During play, press **◀◀** or **▶▶** in the same direction as the tape play. Searching stops automatically at the beginning of the next song, and the next song starts automatically.

Finding the Beginning of the Current Song

During play, press **◀◀** or **▶▶** in the opposite direction to the tape play. Searching stops automatically at the beginning of the current song, and the current song starts automatically.

Notes

- Music Scan works by detecting a 4-second long blank between each song, so it will not work well in the following cases.
 - No blank at the beginning of a song
 - Noise (often caused by much use or poor quality dubbing) which fills the blank with noise.
 - Long, very soft passages or pauses in a song.
- Music Scan only works on one tape at a time.
 - If you use Music Scan on deck A during recording on deck B, deck B enters recording/pause mode (except during "CD to Tape Recording").
 - If you start recording on deck B while Music Scan is used on deck A, Music Scan stops.

Other Useful Features of the Cassette Deck



Reverse Mode

Use Reverse Mode to make the tape automatically reverse at the end of a side and start playing the other side. Press REVERSE to change Reverse Mode from on (when the indicator is lit) to off and vice versa.

Continuous Play (only available when Reverse Mode is on)

Use Continuous Play to play the tapes in both deck A and B.

When Reverse Mode is set to on (the indicator is lit):

When the reverse side (-) of a tape finishes playing on one deck, the System always checks to see if a tape is in the other deck. If there is, it automatically starts playing. This happens regardless of which deck starts first.



Dolby Noise Reduction

Press DOLBY NR to switch Dolby Noise Reduction (B or C) on (the selected one's indicator lights up) or off (both indicators go off). If a tape is recorded with the Dolby NR system, playing it back with the same Dolby NR on, it will reduce tape noise and improve the clarity of the sound.

Dolby HX PRO

Dolby HX PRO provides linearity in high-range frequency response during recording. Tapes recorded with this System retain the same characteristic even played back with any other deck. With Dolby HX PRO, the effective bias current is controlled in response to fluctuations in high-range frequency of the input signal, ensuring dynamic sound recording with minimal distortion and noise.

Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Listening to the Turntable or Other Equipment through Your System


By playing the sound from a minidisc recorder, a turntable or other connected equipment through the System, you can often dramatically improve the quality, and gain control over how the music or program sounds.

1. Connect the other equipment as shown on page 6.

2. Turn down the volume using the VOLUME control on the front panel (or VOLUME — on the Remote Control).

3. Press MD, AUX or PHONO .
The System is turned on and MD, AUX or PHONO indicator lights up.


4. Switch on the connected equipment and start playing.
See the manuals supplied with the other equipment.

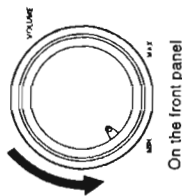

On the front panel



From the Remote Control



To cancel the MD, AUX or PHONO setting, change the source by starting any one of sound sources, such as the tuner or CD player.

Using JVC's Minidisc Recorder Connected to the COMPU LINK-3 - MD Terminal

When your minidisc recorder is JVC's XM-FIGD, you can connect it to the COMPU LINK-3 - MD terminal. You can control the minidisc recorder from the System or vice versa. About the connection, see page 6.

What you can do:

Automatic power on/off function:

When you turn on or off the System, the minidisc recorder automatically turns on or off.

Playing the minidisc recorder:

When you press MD on the System or 2/MD (Play) on the minidisc recorder in standby mode, the System and minidisc recorder turn on and start playing if a minidisc is already loaded.

Recording from the minidisc recorder, see page 26.



Recording onto the minidiscs:

1. Prepare the CD or cassette tape you want to record from.
2. Prepare the minidisc in the minidisc recorder.
3. Press REC PAUSE on the minidisc recorder.
4. Press 2/MD (for the CD) or 2/MD (for the cassette tape) on the front panel.
As soon as the System starts playing, the minidisc recorder starts recording.

Recording onto cassette tape from any of the sound sources is easy and the System does most of the work. Just have a tape in deck B, have the source ready, make one or two settings, and you are ready to record.

For each source the procedure is a little different and now we explain just what to do for each one. If you forget, just come back to the each section. But first, here are a few things to make your recordings better.

Things to Know before You Start Recording

- It may be unlawful to record or playback copyrighted material without the consent of the copyright owner.
- To reduce hiss noise, press DOLBY NR to select either B or C. (See page 23.)
- The recording level, which is the volume at which the new tape is being made, is automatically set correctly, so it is not affected by the VOLUME control on the front panel (or VOLUME - or + on the Remote Control). Thus, you can adjust the sound you are actually listening without changing the recording. If you do not want to listen to the sound, you can turn down the volume using the VOLUME control on the front panel (or VOLUME - on the Remote Control).
- The BASS/TREBLE controls, and the CD DIRECT/PRESENCE function cannot be used for recording.
- Cassette tapes have a special feature so you will not accidentally record over a tape you want to save. Two small tabs on the back, one for side A and one for side B, can be removed to prevent erasure or re-recording. To record on a cassette with the tabs removed, you must cover the holes with tape first. However, when a Type II tape is used, only cover part of the hole as shown below, since the other part of the hole is used to detect the tape type.



- Type I, II and IV tapes can be used for recording.

CAUTION

If recordings you make have excessive noise or static, the System may be too close to a TV during the recording. Either turn off the TV or increase the distance between the TV and the System.

Standard Recording


This is the basic method for recording any source. The System also has special ways for recording CD to tape, and tape to tape, which save you time and effort, as well as give you some special effects. However, when you need to add a selection to a tape you have made, or are combining selections from several sources on one tape, use the method we describe here. You can record from a minidisc recorder, a turntable or other sources with this procedure.

Recording any Sound Source to Tape

Follow the procedure to record from any sound source onto a tape in deck B.

IMPORTANT

When you use the Remote Control: Remember you have to press **◀** or **▶** on the cassette deck control section to select which deck to use. Press **▶** first before starting the following procedure.



On the front panel



From the Remote Control



1. Put the cassette tape to record onto into deck B.
2. Press **◀** (or **▶** on the cassette deck control section of the Remote Control) or **▶** (or **▶** on the cassette deck control section) and **▶** (or **▶** on the cassette deck control section) to select the side for recording on deck B.
 - When you want to record on the front side (A), press **▶** (or **▶** on the cassette deck control section), then **▶** (or **▶** on the cassette deck control section).
 - When you want to record on the reverse side (B), press **◀** (or **▶** on the cassette deck control section), then **▶** (or **▶** on the cassette deck control section).

3. Press REC PAUSE.

The REC PAUSE indicator lights up.


When you want to record on both sides of the tape, press REVERSE on the cassette deck to set Reverse Mode on and be sure to start recording from the front side (A). If you start recording from the reverse side (B), the deck stops after recording the reverse side (B) without going to the front side (A), even if Reverse Mode is on.

4. Prepare the source, for example, tuning in a radio station, turning on the connected equipment and then, start playing the source.

- When you want to record from the CD player or minidisc recorder, you need to do the next step first.
- When you want to record from IVC's minidisc recorder XM-FIGD connected with COMPU LINK cord, you do not need to do the next step since recording starts automatically.



On the front panel



From the Remote Control

5. To start recording, press either **◀** (or **▶** on the cassette deck control section of the Remote Control) or **▶** (or **▶** on the cassette deck control section) (the same button you have pressed in step 2).

To stop recording any time during the process, press **□** on deck B (or **■** on the cassette deck control section).

To pause recording any time during the process, press REC PAUSE again.


To resume recording, press **◀** / **▶** (or **▶** / **▶** on the cassette deck control section of the Remote Control) (the same button you have pressed in step 5).

CD to Tape Recording

Everything on the CD goes onto the tape in the order it is on the CD or according to an order you have set in a program. To make a program, see page 19. During "CD to Tape Recording", you cannot change the sound sources.

IMPORTANT
When you use the Remote Control, Remember you have to press **CD**, or **EB** on the cassette deck control section to select which deck to use. Press **EB** first before starting the following procedure.

1. Put the cassette tape in deck B.
Press REVERSE so that the REVERSE indicator lights up if you want to record on both sides of the tape.
2. Load the CD into the CD Player.
If the CD is already loaded, be sure the System is on.

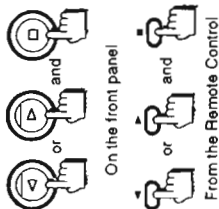

3. Press **◀** (or **▶** on the cassette deck control section of the Remote Control) or **▷** (or **▶** on the cassette deck control section) and **□** (or **■** on the cassette deck control section) to select the side for recording.
 - When you want to record on the front side (A), press **▷** (or **▶** on the cassette deck control section), then **□** (or **■** on the cassette deck control section).
 - When you want to record on the reverse side (B), press **◀** (or **◀** on the cassette deck control section), then **□** (or **■** on the cassette deck control section).

4. Press CD REC START on the cassette deck.
The FADE indicator lights up on the CD display.
 - As soon as deck B starts recording, the CD starts playing. At the end of the tape, the System automatically goes back to the beginning of the last track and records it, this time gently fading out at the end. If you set Reverse Mode on, the reverse side (B) starts with the last track on the front side (A) and will be faded out at the end again. (A 10-second blank is created on the beginning of the reverse side (B).)
 - For "CD to Tape Recording", using more than one disc, use a blank tape. If you use a pre-recorded tape, pre-recorded material may not be erased between newly-recorded tracks.

To stop recording any time during the process, press either **■/CLEAR** on the CD player (or **■** on the CD player control section of the Remote Control) or **□** on deck B. When you press **■/CLEAR** (or **■** on the cassette deck control section), you can make a 4-second blank at the end of recording.

CAUTION
◀ (Skip Left) or **▶** (Skip Right), and REPEAT will work during "CD to Tape Recording". If you press these buttons, recording will be interrupted.

Tape to Tape Recording (Dubbing)

Recording from one tape to another is called dubbing.

- Dolby NR is inactive in dubbing mode regardless of the setting of the DOLBY NR. The dubbed tape automatically contains the same processing as the source tape. The DOLBY NR indicator goes off automatically.
- It is preferable that the tape type (Type I, II and IV) you record from be the same as the tape type you record onto.
- To dub both sides of a tape, start from the front side (A) for both deck A and B, and press REVERSE so that the REVERSE indicator lights up.

1. Put the cassette tape you want to copy from into deck A for playback.
2. Put the cassette tape you want to copy onto into deck B for recording.
The cassette tape in deck B will be erased as the new sound from the cassette tape in deck A is recorded.



3. Press DUBBING.
Deck A starts playing and deck B starts recording.
 - When dubbing, you can also listen to the another source such as the radio or the CD player.
- To stop dubbing, press **□** for deck B.

Recording selections from several different tapes

When you want to take selections from several different tapes and combine them on one tape during dubbing, follow these steps:

1. Press **□** on deck A.
This causes deck A to stop, so you can change tapes, and deck B makes pauses.
2. Change the cassette tape in deck A.
3. Press DUBBING to start deck A playing and deck B recording again.



Using the Timer

The timers let you control recording and playing sources automatically. Three types of timers are available:

- Recording (REC) Timer**—Unattended recording of radio broadcasts that works only once.
- Daily Timer**—The System turns on and plays a source at a particular time every day.
- Sleep Timer**—Fall asleep and have your System turn off automatically after a certain length of time.


Setting the Clock

The timers depend on the clock. If the clock is right, the timers will work like you expect, but if the time is incorrect on the clock then the timers will also be incorrect.

Special Notice: The clock must be set, or the timers cannot be set!

- So, let's set the clock first.
- You can set the clock whether the System is on or off.

1. Press CLOCK ADJ.



2. Set the hours by pressing TUNING/TIMER < or >.

Pressing > increases the hour, and pressing < decreases it.



3. Press MEMORY/CANCEL.



4. Set the minutes by pressing TUNING/TIMER < or >.

Pressing > increases the minute, and pressing < decreases it.



5. Press MEMORY/CANCEL again.

The clock is set and starts from zero second.



CAUTION
If the System is unplugged or if a power failure occurs, the clock loses its setting. The tuner display shows "0:00" and it must be reset.

Setting the Recording (REC) Timer

With the recording timer you can make a tape of a radio broadcast automatically even when you are not there to start the System. For the timer to work correctly, you need to make sure that the tape you want to record onto must be in deck B when you want to record.

- You can set the recording timer whether the System is on or off.
- When you want to record on both sides of the cassette tape, press REVERSE, with the power turned on, so that the REVERSE indicator lights up.

1. Press REC.

The REC indicator blinks on the tuner display.





2. Set the time you want to start recording.

Use TUNING/TIMER < or > and MEMORY/CANCEL just like setting the clock. See instructions above.



3. Set the time you want to stop recording.

Use TUNING/TIMER < or > and MEMORY/CANCEL just like setting the clock. See instructions above.

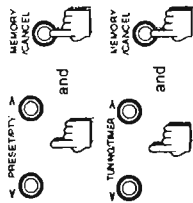

4. Select a preset channel with PRESETTY < or > and MEMORY/CANCEL.

5. Select the equipment (either deck B or minidisc recorder XM-F1GD) you want to use for recording with TUNING/TIMER < or > and MEMORY/CANCEL.

Each time you press TUNING/TIMER < or >, the System gives you one of the following:

- TAPE?** Records onto a tape
- MD?** Records onto a minidisc

For connecting and operating the minidisc recorder, see page 6 of this manual and the manuals supplied with the minidisc recorder.


When you select TAPE as the equipment, you need to check that tape direction is correct. This is important especially when Reverse Mode is off.

Set Reverse Mode on and start recording from the front side (A) if you want to record on both sides of the tape.

6. Press REC again.

The REC indicator stops blinking and remains lit. The display, then, shows the settings you have done in step 2 to 5.

- Notice that the REC indicator lights up on the display whenever the timer is set.
- A few seconds before the on-time for the recording, the System automatically turns on if it is off and the REC indicator blinks on the display. When the on-time comes, recording starts. When the off-time comes, recording stops and the System automatically turns off.
- Once the recording timer has worked, the REC indicator goes off. (The recording timer also turns off. However, the contents stored in the timer will not be erased.)

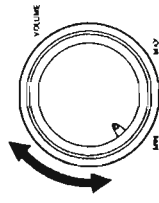

7. Adjust the volume with the VOLUME control (or VOLUME - or + on the Remote Control).

To cancel the recording timer, press REC so that the REC indicator on the display goes off.

To change the timer settings, repeat the setting procedure from the beginning and change the contents as you want.

On the front panel



From the Remote Control

Note
If you change the source while the recording timer is operating, the recording timer will be canceled but the recording continues.

CAUTION

If the System is unplugged or if a power failure occurs, the timer setting will be erased. If settings are erased, reset the timer settings.

Setting the Daily Timer

With the timer you can play the sound source at the specified time without recording them. The daily timer executes the timer operation at the specified time every day.

- You can set the daily timer whether the System is on or off.


1. Press DAILY.

The DAILY indicator blinks on the tuner display.



2. Set the time you want the sound source to turn on.

Use TUNING/TIMER < or > and MEMORY/CANCEL just like setting the clock.



Setting the Sleep Timer

Using this timer, you can fall asleep to music and know your System will turn off by itself rather than play all night.


- You can only set the sleep timer when the System is on.

1. Press SLEEP on the Remote Control while playing a source.

The SLEEP indicator blinks on the tuner display.

2. Set the length of time you want the source to play before shutting off.

Each time you press SLEEP while the SLEEP indicator is blinking, it changes the number of minutes shown on the display in the following sequence:

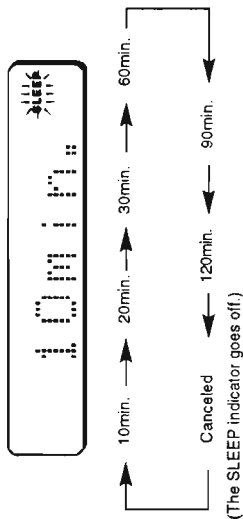

3. When the number of minutes you want is shown on the display, just wait about 5 seconds until the SLEEP indicator stops blinking, and remains lit.


The System is now set to turn off after the number of minutes you set.

To cancel the sleep timer, press SLEEP until the SLEEP indicator goes off on the display. When you turn off the System, the sleep timer is also canceled.

To change the shut-off time, press SLEEP until the number of minutes you want appears on the display.

To check the remaining time, after setting the sleep timer, you can check the time remaining until the System turns off.

Pressing SLEEP shows you the remaining time in minutes on the display for about 5 seconds.

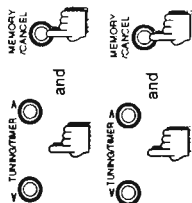

3. Set the time you want the sound source to shut off.

Use TUNING/TIMER < or > and MEMORY/CANCEL just like setting the clock.

4. Select the sound source to play with TUNING/TIMER < or > and MEMORY/CANCEL.

Each time you press TUNING/TIMER < or >, the System gives you one of the following:

- P, -- ch Tunes into a preset station
- CD Plays a CD from the beginning
- TAPE Plays a tape
- MID Plays a minidisc recorder from the beginning

For connecting and operating the minidisc recorder, see page 6 of this manual and the manuals supplied with the minidisc recorder.

- When you select the tuner as the source, you need to designate a preset station by pressing PRESET/PTY < or >.
- When you select TAPE as the source:
 - You need to check that the tape direction is correct. This is important especially when Reverse Mode is off.
 - Deck B has priority, so if tapes are in both decks, the tape in deck B plays first.
 - Set Reverse Mode on if you want to play both sides of the tape.



5. Press DAILY again.

The DAILY indicator stops blinking and remains lit. The display, then, shows the settings you have done in step 2 to 4.

- Notice that the DAILY indicator lights up on the display whenever the timer is set, and) the DAILY indicator blinks on the display. When the on-time comes, playback starts using the selected source. When the off-time comes, playback stops and the System automatically turns off.

6. Adjust the volume with the VOLUME control (or VOLUME - or + on the Remote Control).

To cancel the daily timer, press DAILY so that the DAILY indicator on the display goes off.

To change the timer settings, repeat the setting procedure from the beginning and change the contents as you want.

To erase all the contents stored in the timer:


1. Press DAILY so that on-time for the timer blinks on the display.
2. Hold down MEMORY/CANCEL.
3. Press DAILY again.

Note

If you change the source while the daily timer is operating, the daily timer will be canceled.

CAUTION

If the System is unplugged or if a power failure occurs, the timer setting will be erased. If settings are erased, reset the timer settings.

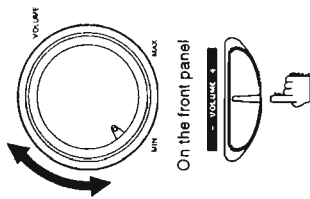

From the Remote Control

Care and Maintenance—General Notes

Cassette Tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose it may get stretched, cut, or caught in the cassette.



- Do not touch the tape surface




- Do not store the tapes:
 - In dusty places
 - In direct sunlight or heat
 - In moist areas
 - On a TV or speaker
 - Near a magnet!



Cassette Deck

- If the heads, capstans, and pinch-rollers of the cassette deck become dirty, the following will occur:
 - Impaired sound quality
 - Discontinuous sound
 - Fading
 - Incomplete erasure
 - Difficulty in recording
- Clean the heads, capstans, and pinch-rollers using a cotton swab moistened with alcohol.

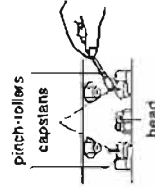

- If the heads become magnetized, they will produce noise or loose high frequencies.
- To demagnetize the heads, turn off the System, and use a head demagnetizer (available at electronics and record shops).

Compact Discs

Handle your compact discs, cassette tapes, and cassette deck carefully, and they will last a long time.

- Remove the CD from the case by holding it at the edges while pressing the center hole lightly.
- Do not touch the shiny surface of the CD, or bend the CD



- Place the CD into the open tray with the printed side up.



- Put the CD back in its case after use to prevent warping.
- Be careful not to scratch the surface of the CD when placing it back in the case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.



- A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.



CAUTION
Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzene, etc.) to clean a CD.

Moisture Condensation

- Moisture may condense on the lens inside the CD player in the following cases:
- After starting the heating in the room
 - In a damp room
 - If the System is brought directly from a cold to a warm place
- Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.




- In general, you will have the best performance by keeping your tapes, CDs, and the mechanism clean
- Store tapes and CDs in their cases, and keep them in cabinets or on shelves.
 - Keep the cassette holders and the CD tray closed when not in use.

Timer Priority

Since each timer can be set independently, you may have wondered what happens if the settings overlap. Here are the priorities for each timer.

Recording Timer > Sleep Timer > Daily Timer

- The recording timer always has priority. This means that:
 - If the recording and daily timer has the same starting time, the recording timer will be activated
 - If another timer is set to come on during a time when the recording timer is operating, the other timer just will not come on at all, so you will always get the entire program on a tape
 - If the recording timer is set to come on while another timer is operating, the other timer will shut off about 10 seconds before the recording timer will then take over.

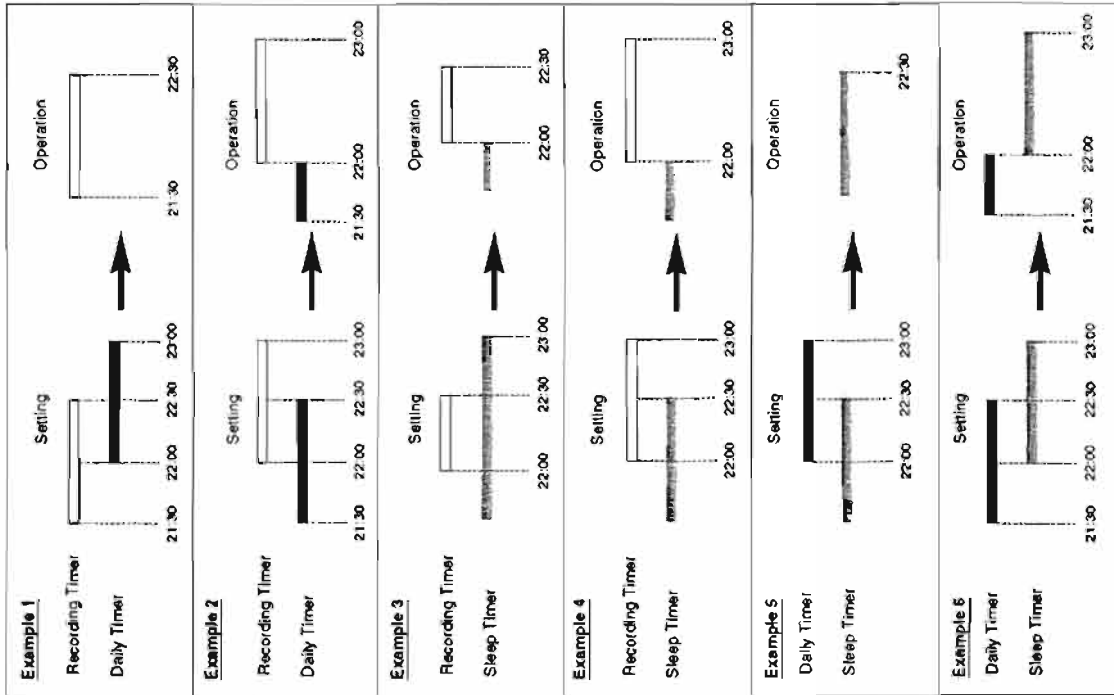

Troubleshooting

- If you are having a problem with your System, check this list for a possible solution before calling for service.
- If you cannot solve the problem from the hints given here, or the System has been physically damaged, call a qualified person, such as your dealer, for service.

| Symptom | Possible Cause | ACTION |
|--|--|---|
| No sound is heard. | Connections are incorrect, or loose. | Check all connections and make corrections. (See pages 4 to 6.) |
| Impossible to record. | Cassette record protect tabs are removed. | Cover holes on back edge of cassette with tape. |
| Hard to listen to broadcasts because of noise. | The antenna is disconnected. The loop antenna is too close to the system. | Reconnect the antenna securely. Change the position and direction of the loop antenna. |
| The wire antenna is not properly extended and positioned. | The wire antenna is not properly extended and positioned. | Extend wire antenna at the best reception position. |
| The CD sound is discontinuous. | The CD is scratched or dirty. | Clean or replace the CD. |
| Unable to operate the Remote Control. | The path between the Remote Control and the sensor on the front panel is blocked. The batteries are discharged. | Remove the obstruction. Replace the batteries. |
| The CD tray cannot be operated. | The AC power cord is not plugged in. | Plug in the AC power cord. |
| The CD does not play. | The CD is upside down. | Put the CD in with the printed side up. |
| Operations are disabled. | The built-in microprocessor may malfunction due to external electrical interference. | Unplug the System then plug it back in. |
| The cassette holder cannot be opened. | The System was turned off because the timer was operated while the tape was running. | Turn on the System. |
| The FM station tuned alternates between the currently selected one and another when using the EON Standby reception. | An incorrect EON signal is being sent. | Press EON ON/OFF to cancel the EON Standby reception. |

Specifications

Integrated Amplifier AX-F3000

Output Power (IEC 268-3/DIN)
Front Speakers
40 watts per channel, min. RMS, both channels driven, into 4 ohms at 1 kHz with no more than 0.9% total harmonic distortion.

Input Sensitivity/Impedance (1 kHz)
MD
AUX
PHONO
Output Load/Impedance (1 kHz)
MD
Speaker Impedance
Power Requirements
Power Consumption
Dimensions (Approx.)
Mass (Approx.)

FM/W/LW Tuner FX-F3000R

FM Tuner
Tuning Range
AM (M/W/LW) Tuner
MW-Tuning Range
LW-Tuning Range
Dimensions (Approx.)
Mass (Approx.)

Double Cassette Deck LD-F3000

Frequency Response
Metal (Type IV)
Cr-Ox (Type II)
Normal (Type I)
Wow and Flutter
Dimensions (Approx.)
Mass (Approx.)

Compact Disc Player XL-F3000

Wow and Flutter
Digital output
Dimensions (Approx.)
Mass (Approx.)

Supplied Accessories

FM Wire Antenna (1)
AM (M/W/LW) Loop Antenna (1)
Remote Control (1)
Batteries (2)
External Wire (1)

Design and specifications are subject to change without notice.

— MEMO —

AX-F3000

**Note: Press S510 on ENH-296-1 for checking only AX-F3000 unit or units
except FX-F3000/FX-F3000R.
Discharge C404 after services.**

Contents

| | |
|---------------------------------------|------|
| <i>Description of Major ICs</i> | 2-2 |
| <i>Disassembly Procedures</i> | 2-5 |
| <i>Adjustment Procedures</i> | 2-8 |
| <i>Block Diagram</i> | 2-9 |
| <i>Printed Circuit Boards</i> | 2-10 |
| <i>Schematic Diagrams</i> | 2-13 |

Description of Major LSIs

■ MN171202J6S (IC501) : System controller

Terminal Layout

| | | | |
|---------------|----|----|---------------|
| VDD | 1 | 64 | OSC IN |
| CD.IND | 2 | 63 | OSC OUT |
| TUNER.IND | 3 | 62 | GND |
| TAPE.IND | 4 | 61 | |
| MD.IND | 5 | 60 | |
| PHONO.IND | 6 | 59 | |
| AUX.IND | 7 | 58 | POWER ON |
| POWER ON.IND | 8 | 57 | SPK-RELAY |
| VOLUME.IND | 9 | 56 | MUTE |
| DIRECT.IND | 10 | 55 | DIRECT ON/OFF |
| PRESENCE.IND | 11 | 54 | PRESENCE |
| | 12 | 53 | VOL.DOWN |
| | 13 | 52 | VOL.UP |
| | 14 | 51 | H.P.IN |
| | 15 | 50 | P.CONT |
| | 16 | 49 | |
| | 17 | 48 | |
| GND | 18 | 47 | |
| | 19 | 46 | PROTECT IN |
| | 20 | 45 | INH |
| | 21 | 44 | RM IN |
| | 22 | 43 | RESET |
| | 23 | 42 | DATA |
| | 24 | 41 | STB |
| | 25 | 40 | SCLK |
| | 26 | 39 | AUX KEY |
| DCS IN | 27 | 38 | PHONO KEY |
| DCS OUT | 28 | 37 | MD KEY |
| | 29 | 36 | |
| AX PON | 30 | 35 | |
| DIRECT KEY IN | 31 | 34 | |
| POWER KEY IN | 32 | 33 | PRESENCE KEY |

KEY SW. INPUT


| Symbol | Function |
|--------|-----------|
| S501 | PRESENCE |
| S502 | CD DIRECT |
| S503 | POWER |
| S507 | MD |
| S508 | PHONO |
| S509 | AUX |
| S510 | AX POWER |

Terminal Description


| Pin No. | Symbol | I/O | Function | Pin No. | Symbol | I/O | Function |
|---------|---------------|-----|-----------------------------|---------|---------------|-----|---------------------------------|
| 1 | VDD | -- | Power supply | 33 | PRESENCE KEY | I | PRESENCE key input |
| 2 | CD.IND | O | Indicator signal output | 34 | | -- | Pull up |
| 3 | TUNER.IND | O | Indicator signal output | 35 | | -- | Pull up |
| 4 | TAPE.IND | O | Indicator signal output | 36 | | -- | Pull up |
| 5 | MD.IND | O | Indicator signal output | 37 | MD KEY | I | MD key input |
| 6 | PHONO.IND | O | Indicator signal output | 38 | PHONO KEY | I | PHONO key input |
| 7 | AUX.IND | O | Indicator signal output | 39 | AUX | I | AUX key input |
| 8 | POWER ON.IND | O | Indicator signal output | 40 | SCLK | O | Switck clock signal input |
| 9 | VOLUME.IND | O | Indicator signal output | 41 | STB | O | Switck strobe signal input |
| 10 | DIRECT.IND | O | Indicator signal output | 42 | DATA | O | Switck data signal input |
| 11 | PRESENCE.IND | O | Indicator signal output | 43 | RESET | I | Reset signal input |
| 12 | | -- | Pull up | 44 | RM IN | I | Remort control signal input |
| 13 | | -- | Pull up | 45 | INH | I | Inhbit signal input |
| 14 | | -- | Pull up | 46 | PROTECT IN | I | PROTECT control signal input |
| 15 | | -- | Pull up | 47 | | -- | GND |
| 16 | | -- | Pull up | 48 | | -- | GND |
| 17 | | -- | Pull up | 49 | | -- | GND |
| 18 | GND | -- | GND | 50 | P.CONT | O | DECK power control signal |
| 19 | | -- | Pull up | 51 | H.P.IN | I | H.P. ON/OFF control signal |
| 20 | | -- | Pull up | 52 | VOL.UP | O | VOL. up control signal |
| 21 | | -- | Pull up | 53 | VOL.DOWN | O | VOL. down control signal |
| 22 | | -- | Pull up | 54 | PRESENCE | O | PRESENCE ON/OFF control signal |
| 23 | | -- | Pull up | 55 | DIRECT ON/OFF | O | CD DIRECT ON/OFF control signal |
| 24 | | -- | Pull up | 56 | MUTE | O | SOURCE MUTE control signal |
| 25 | | -- | Pull up | 57 | SPK-RELAY | O | SPK-RELAY control signal |
| 26 | | -- | Pull up | 58 | POWER ON | O | POWER ON/OFF control signal |
| 27 | DCS IN | I | Compulink input | 59 | | -- | GND |
| 28 | DCS OUT | O | Compulink output | 60 | | -- | GND |
| 29 | | -- | Pull up | 61 | | -- | Not used |
| 30 | AX PON | I | AX-F3000 Power on key input | 62 | GND | -- | GND |
| 31 | DIRECT KEY IN | I | CD DIRECT key input | 63 | OSC OUT | O | Oscillation terminal |
| 32 | POWER KEY IN | I | POWER keyinput | 64 | OSC IN | I | Oscillation terminal |

■ VC5022-2(IC751,752) :SUPER A

1. Terminal Layout




2. Block Diagram

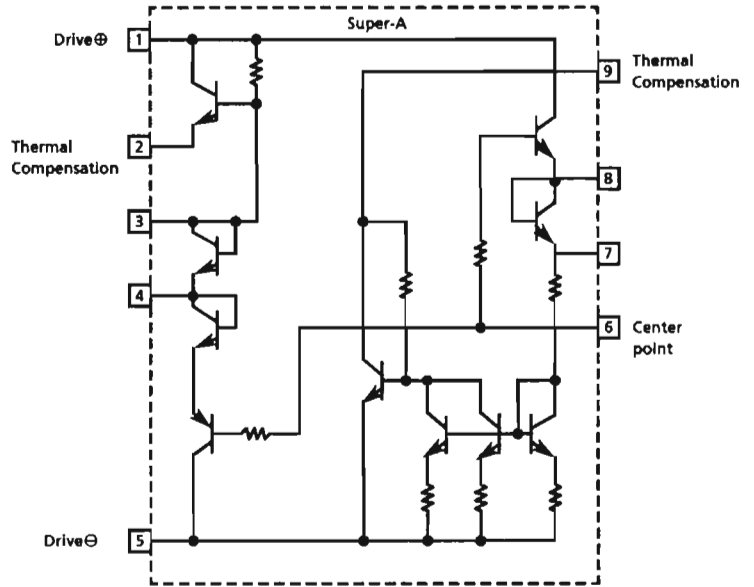


■ LB1639-CV (IC351) : DC Motor driver

1. Terminal Layout

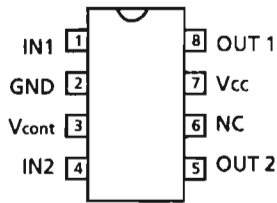

2. Block Diagram

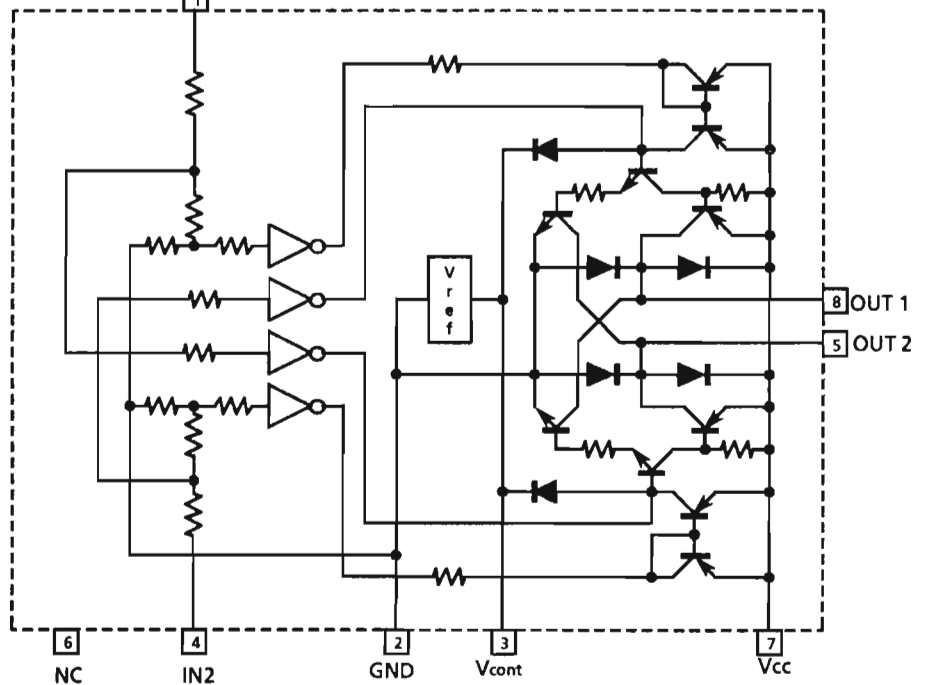


Pin Functions


| IN 1 | IN 2 | OUT 1 | OUT 2 | MOTOR |
|------|------|-------|-------|-------------------|
| H | L | H | L | CLOCKWISE |
| L | H | L | H | COUNTER-CLOCKWISE |
| H | H | OFF | OFF | WAITING |
| L | L | OFF | OFF | WAITING |

AX-F3000

■ NJH32H380A (IC502) : Remocon Module IC

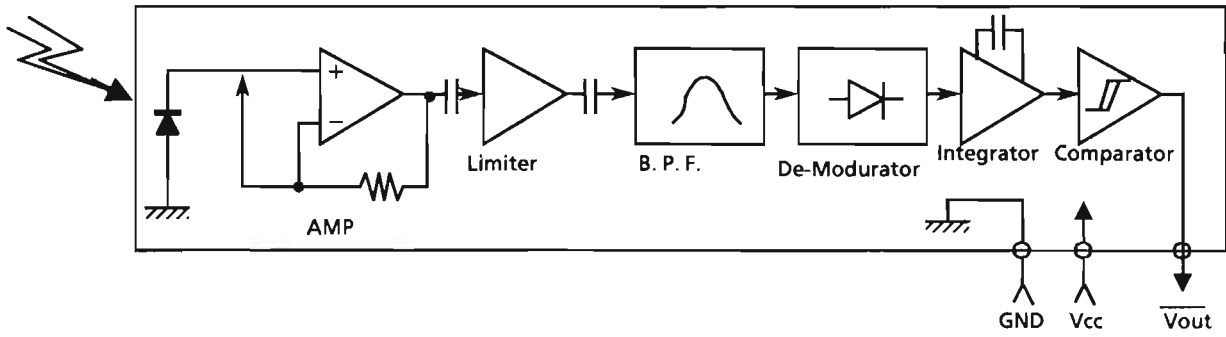


■ NJM4580DD (IC101), NJM4558 (IC363) VC4580DD (IC231,301,361) : Dual OP Amp.

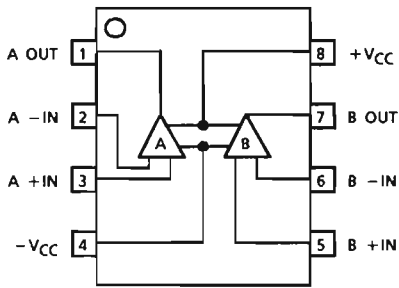

Disassembly Procedures


(1) Removing the top cover

1. Remove 2 screws **A** fastening both sides of top cover, and 4 screws **B** fastening the rear side.
2. Remove the top cover.

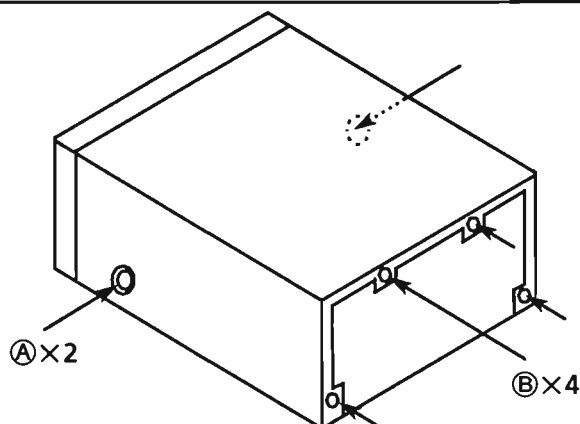


(2) Removing the Front Panel Assembly

1. Remove the top cover.
2. Pull out the Master volume knob, and Remove the nut fastening the Master volume.
3. Cut the tie band, and Disconnect the connectors .(CN201,CN203)
4. Remove 2 screws **C** and 2 hooks **a** fastening bottom of the front panel assembly.



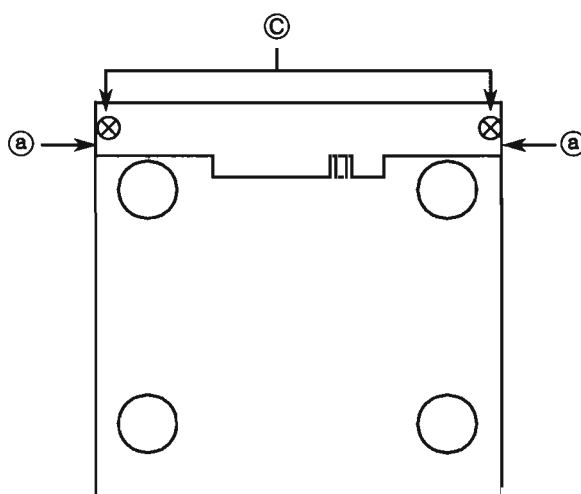


(3) Removing the Control PCB (ENB-241-1)

1. Remove the top cover.
2. Remove the front panel assembly.
3. Pull out the Treble knob, Bass knob and Balance knob.
4. Remove 10 screws **D** fastening the control PCB to remove it.

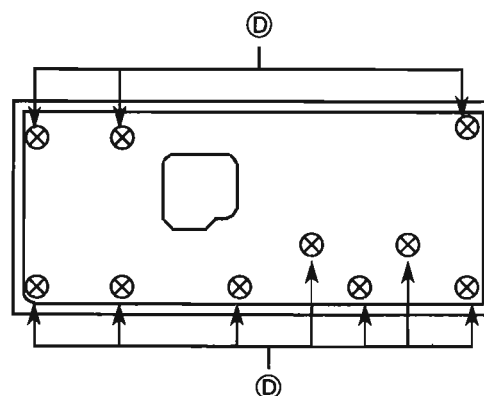


A .. SDSG3008N **B** ... GBSG3008CC **C** ... SDSG3008CC **D** ... SDSF2608Z
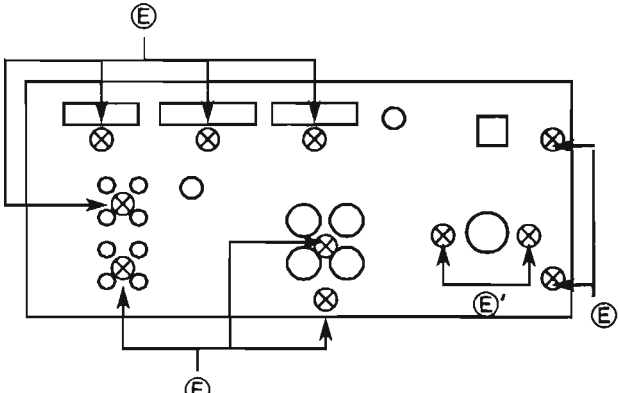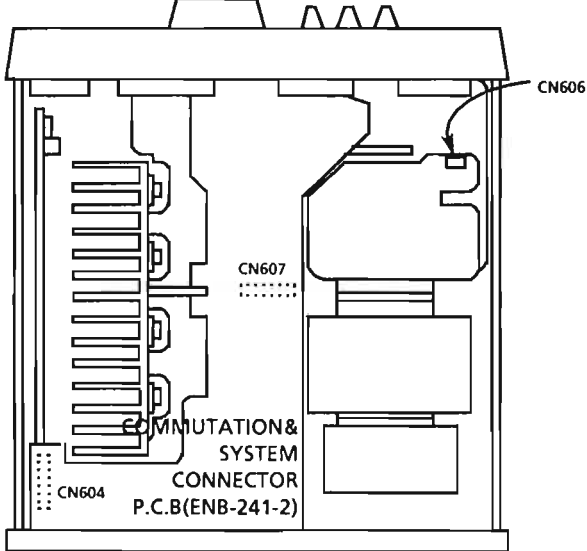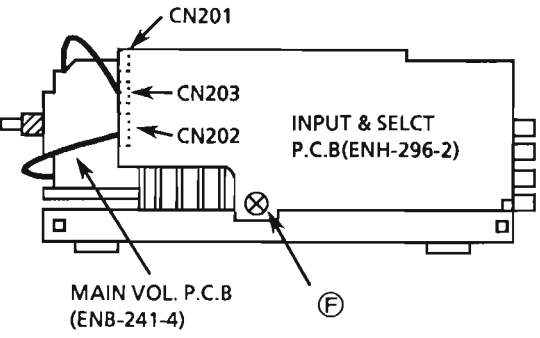
| | |
|--|--|
| <p>(4) Removing the Rear panel</p> <ol style="list-style-type: none"> 1. Remove the top cover. 2. Remove the 9 screws (E). (Universal type: Remove the 2 screws (E')) 3. Remove the rear panel. |  |
| <p>(5) Removing the Commutation & system connector P.C.B(ENB-241-2)</p> <ol style="list-style-type: none"> 1. Remove the top cover. 2. Remove the rear panel. 3. Disconnect the CN606, CN607, CN604. 4. Remove the Commutation & system connector P.C.B. |  |
| <p>(6) Removing the Input & select P.C.B (ENH-296-2)</p> <ol style="list-style-type: none"> 1. Remove the top cover and front panel ass'y. 2. Remove the rear panel. 3. Remove the Commutation & system connector P.C.B. 4. Remove the a screw (F). |  |
| <p>(E) .. E73273-003 (F) ... SBSG3008CC</p> | |

(7) Removing the Main P.C.B (ENH-296-1)

1. Remove the top cover and front panel ass'y.
2. Remove the rear panel.
3. Remove the Commutation & system connector P.C.B.
4. Remove the 2 screws ⑥ holding the main P.C.B, and the 4 screws ③ holding the heat sink bracket.
5. Remove the heat sink with the main P.C.B.

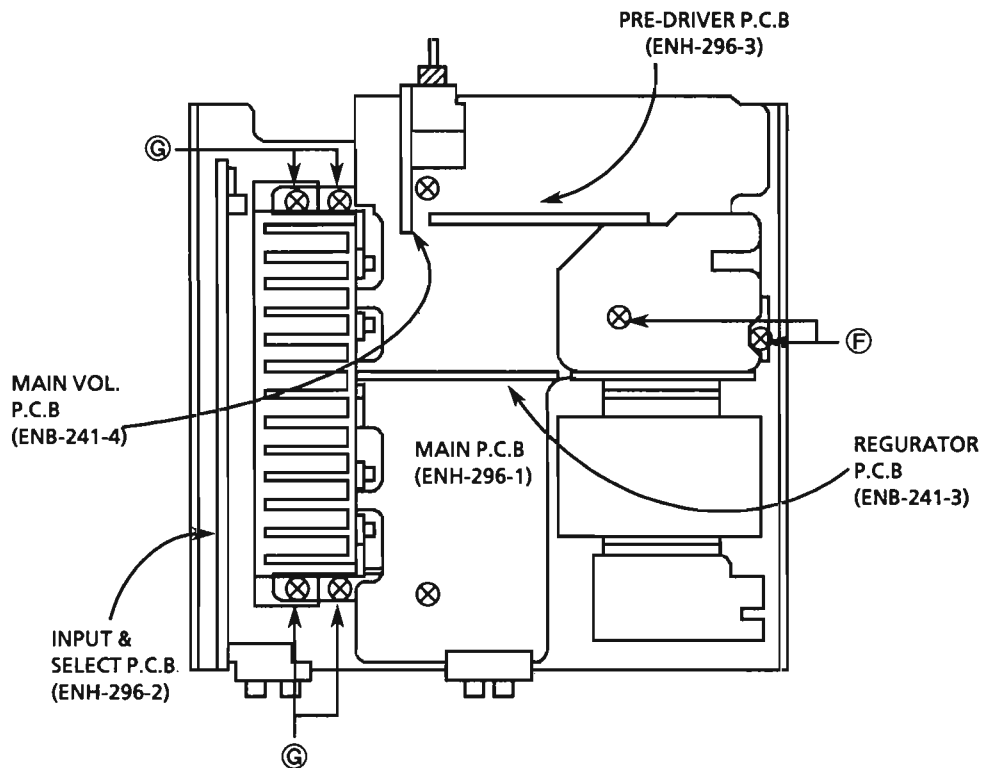


⑥ .. SBSG3008CC ③ ... SBST3006CC


ADJUSTMENT PROCEDURES


■ Idling Current

- (1) Set the volume control to minimum during this adjustment.
- (2) Turn R751 and R752 fully counterclockwise before the power is switch on.
- (3) Always start from cold, and allow 5 minutes to warm up before adjustment.
If the heatsink is already warm from previous use the correct adjustment can not be made.
- (4) Connect a DC voltmeter to R771 resistor's leads for left channel, or to R772 for right channel.
- (5) Adjust R751 for left channel, or R752 for right channel, so that the DC voltmeter becomes 2.2 mV ~ 22mV.

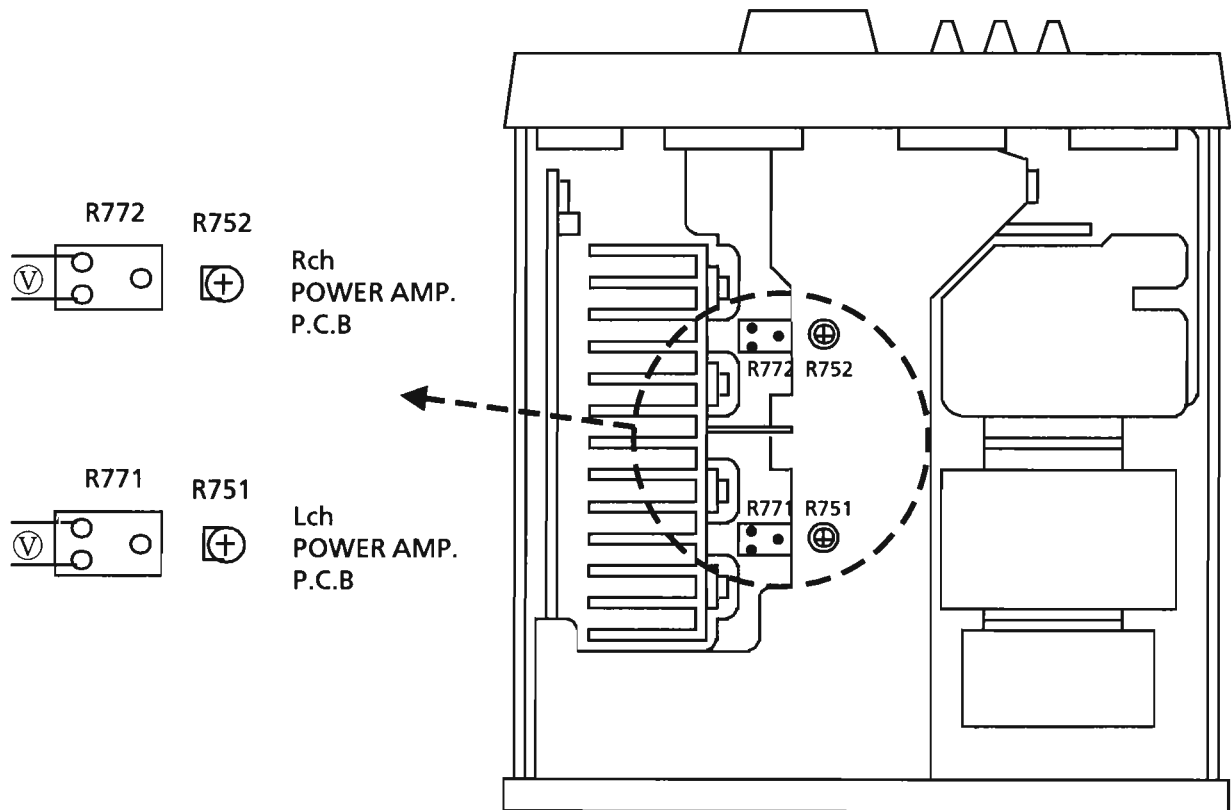


Block Diagram

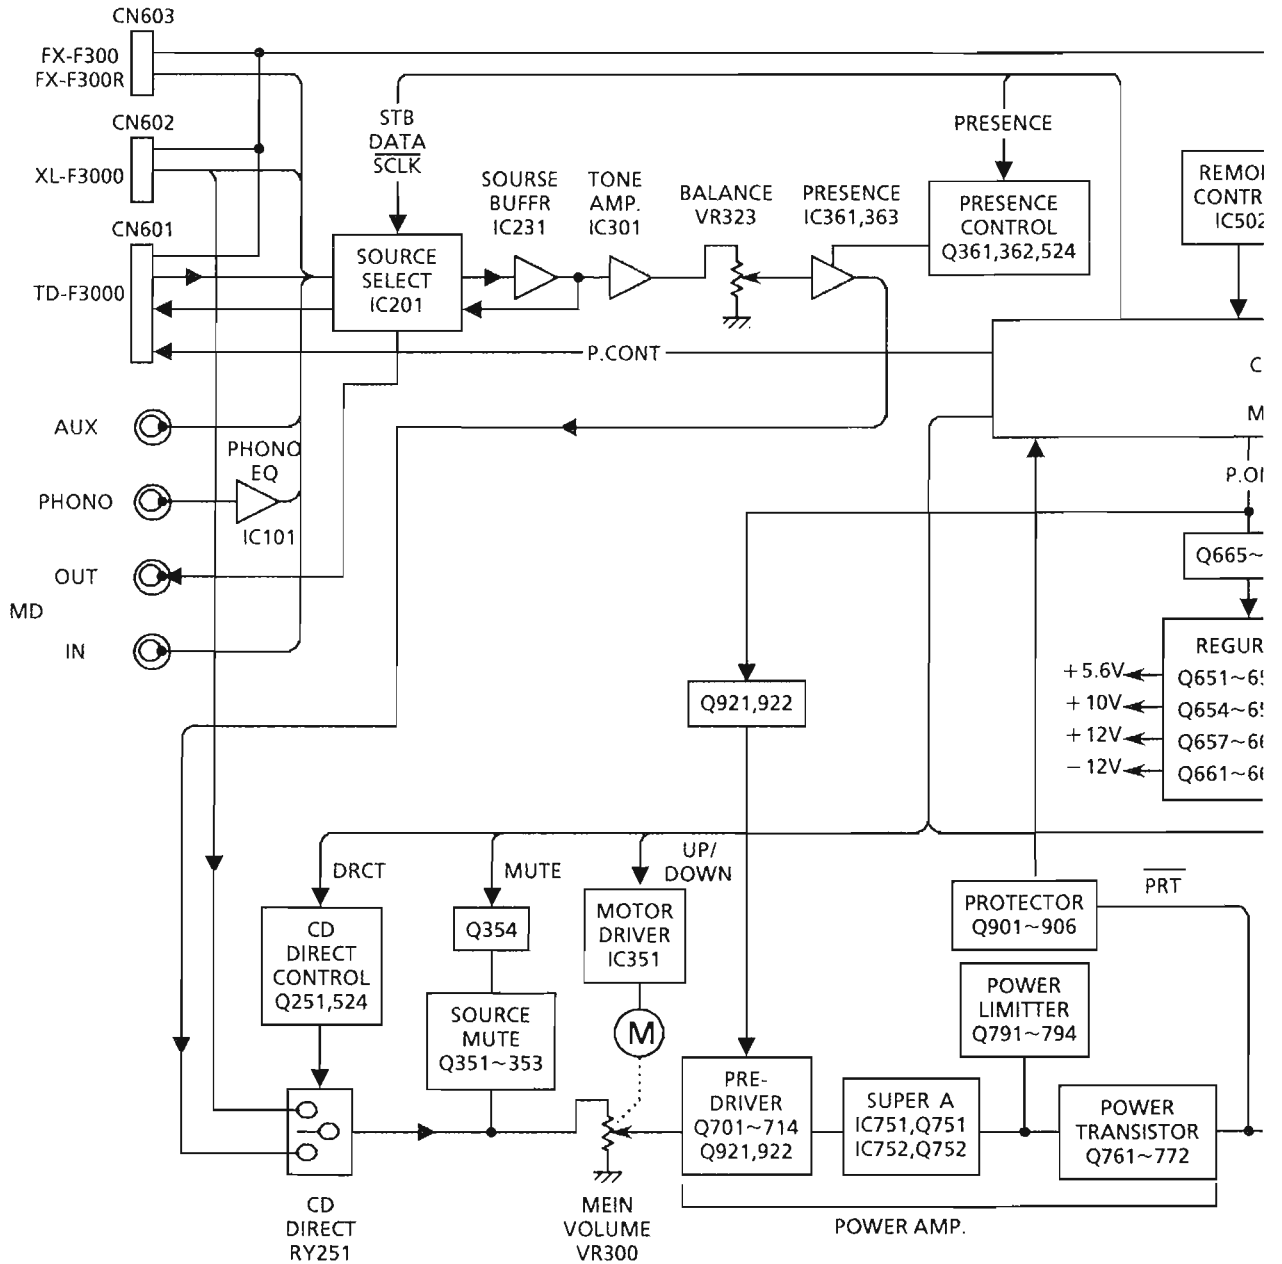


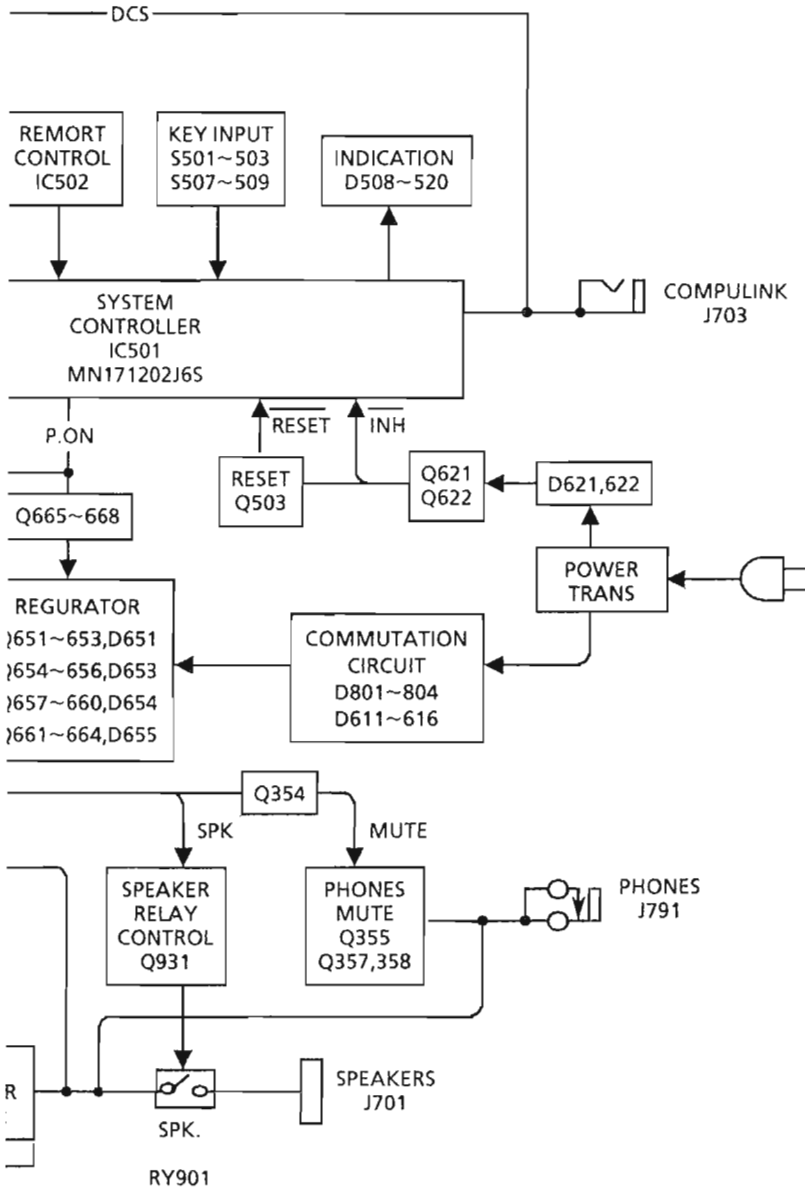


Printed Circuit Boards

■ Power Supply P.C.B(END-104)

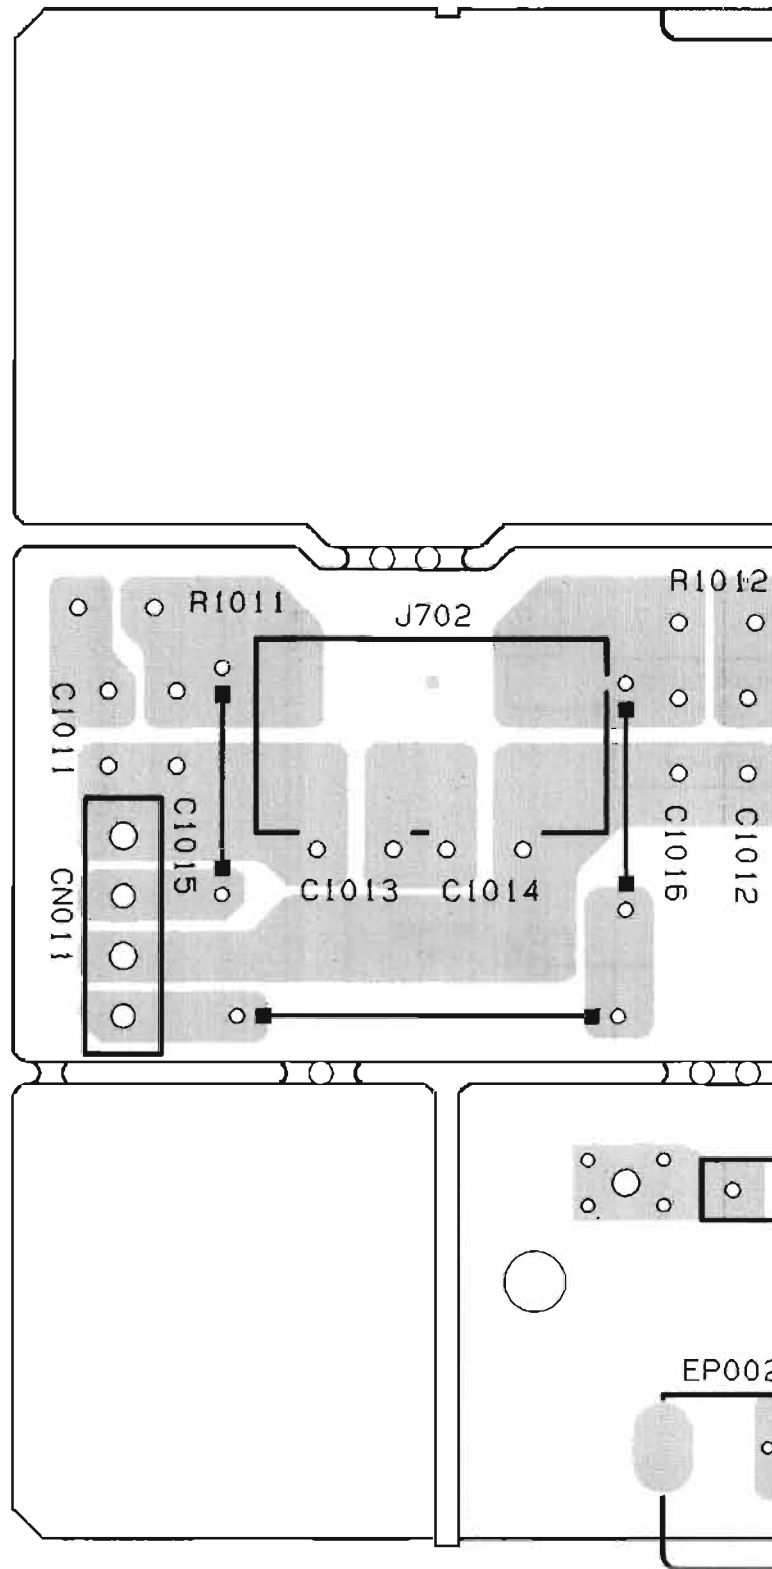


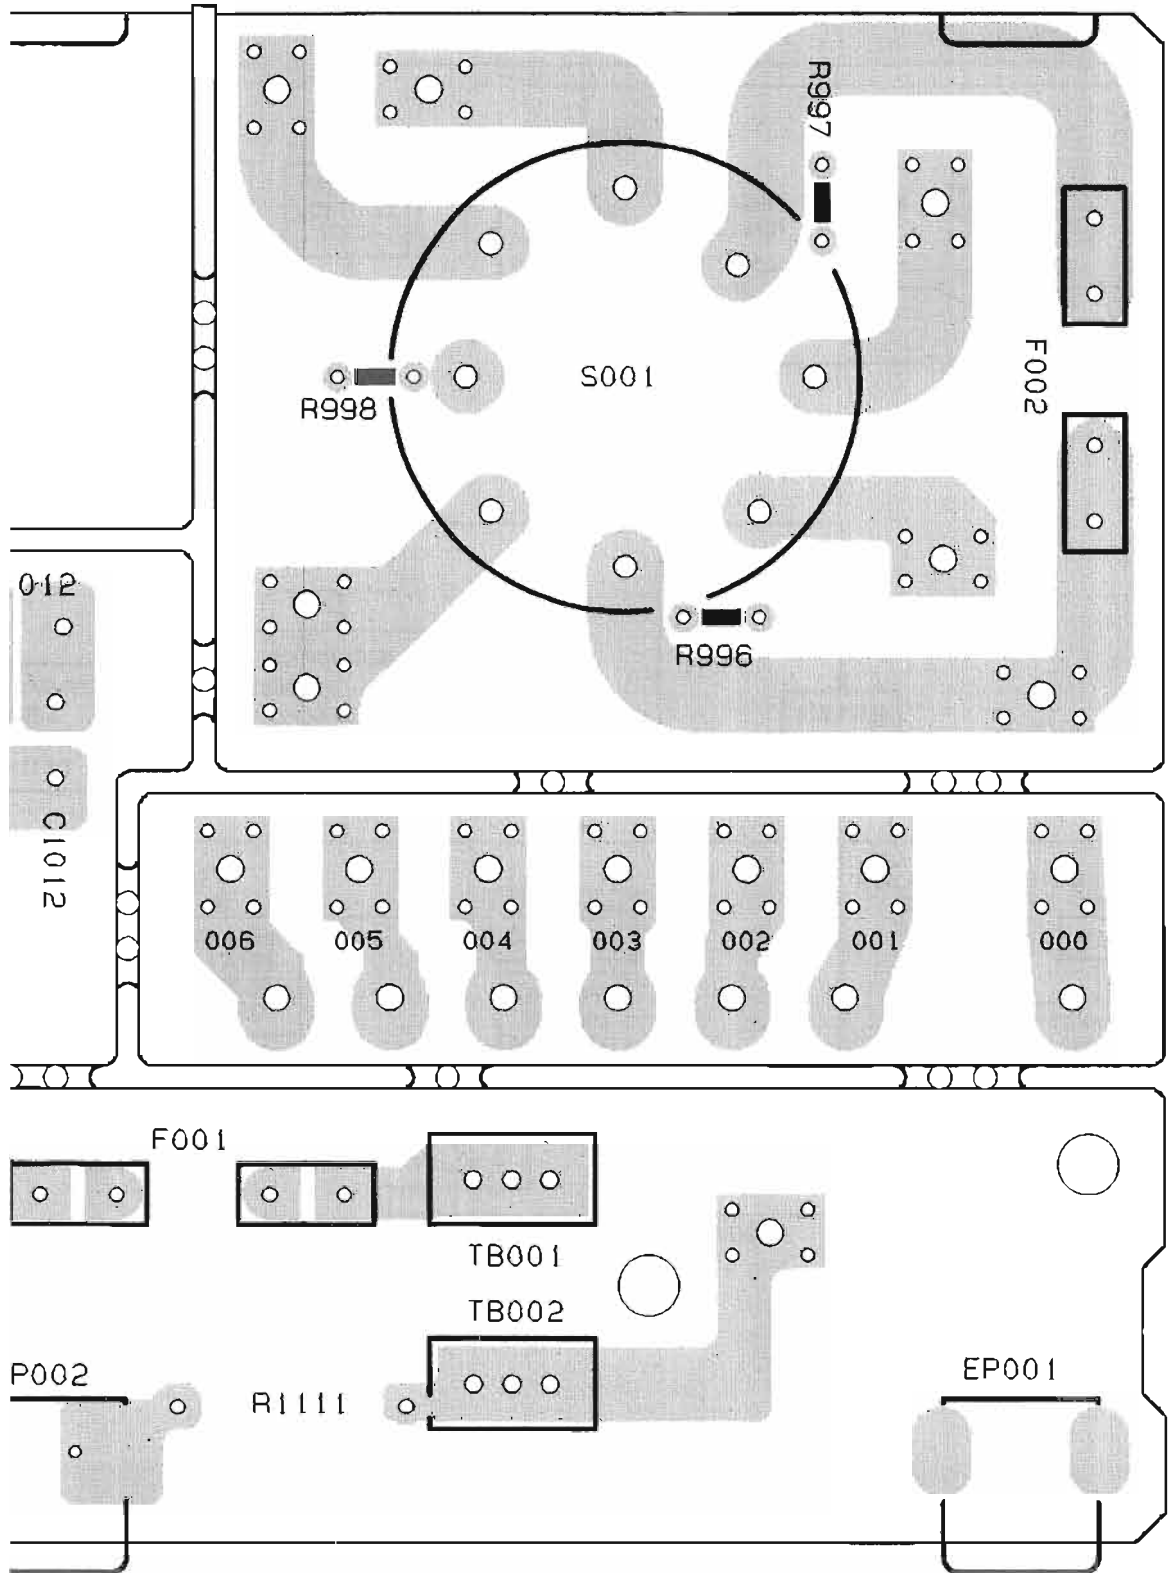

Input Selector and Power Amplifier P.C. BOARD (ENH-296)

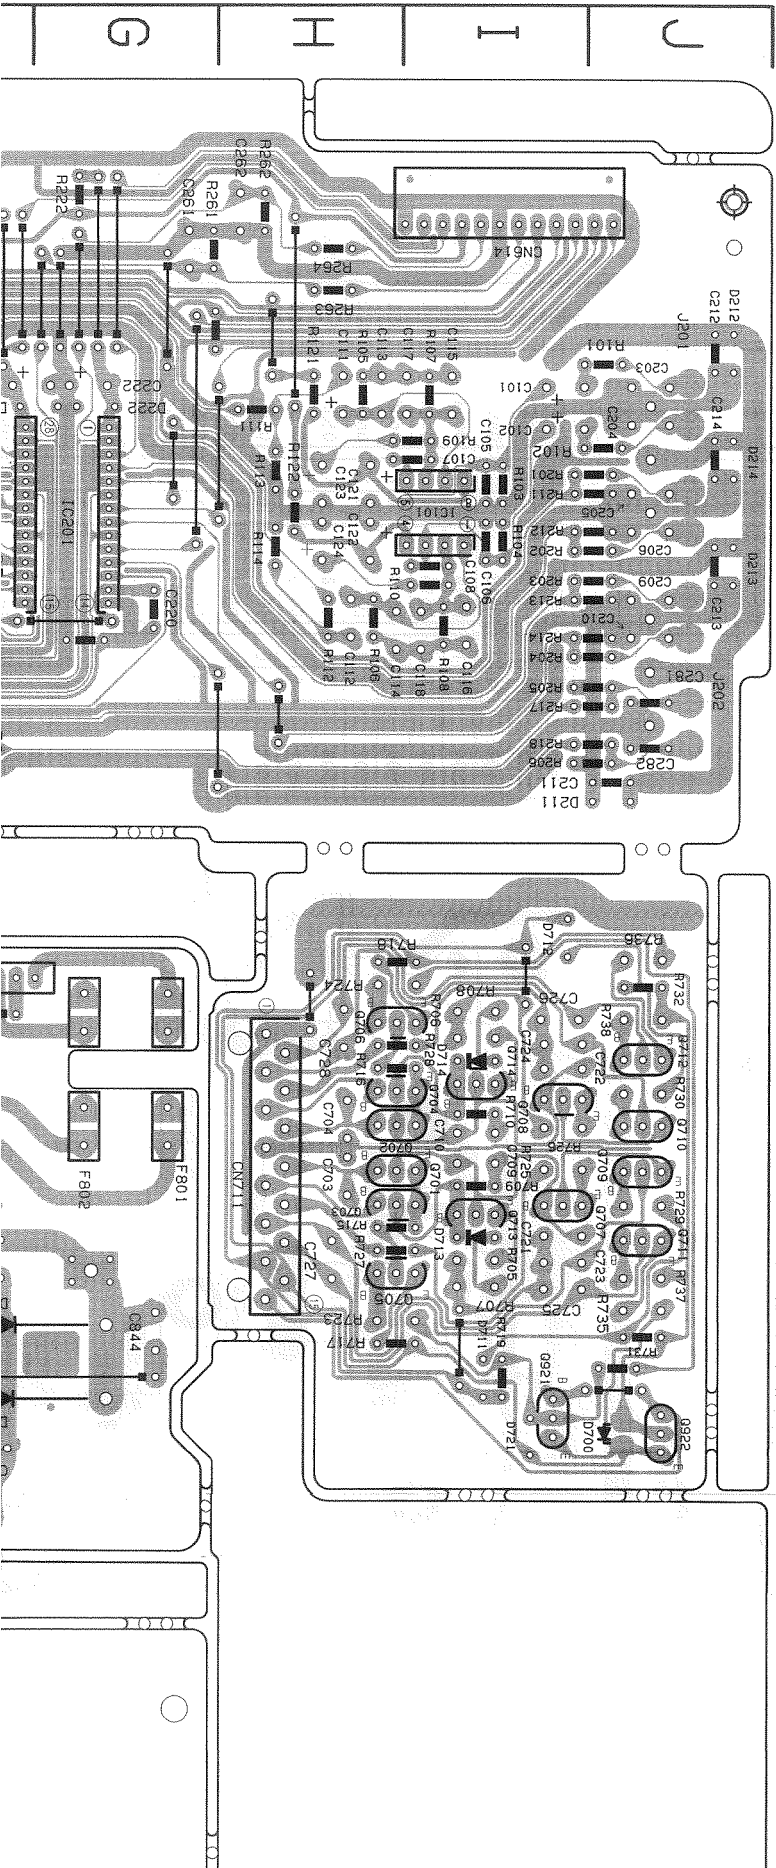


Location List (ENH-296)

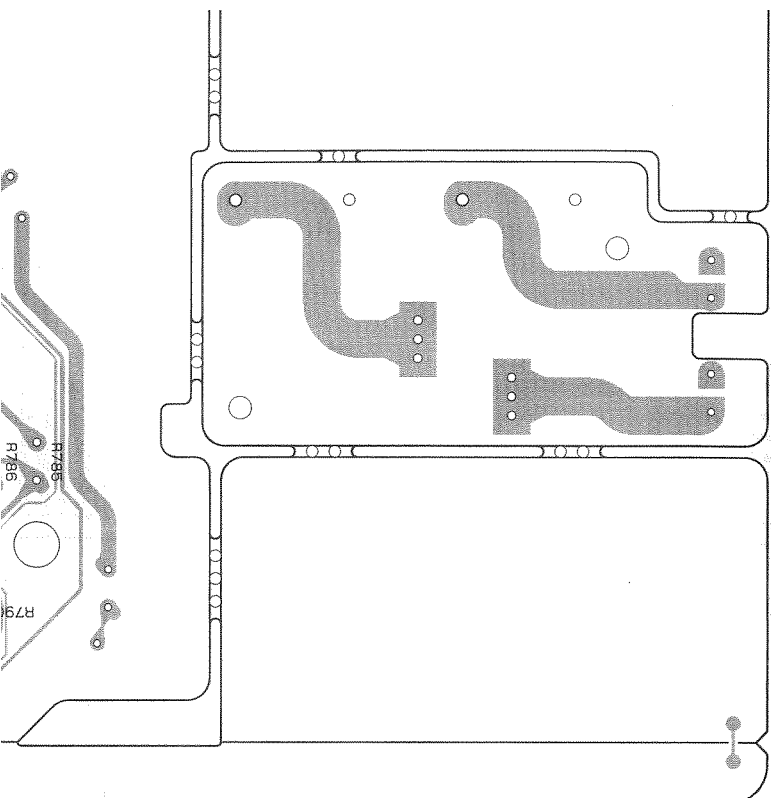

| Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y |
|--------|---|---|--------|----|---|--------|----|---|--------|----|---|--------|----|---|--------|----|---|
| C101 | 2 | I | C701 | 13 | B | D791 | 6 | B | G902 | 8 | A | R383 | 1 | D | R781 | 7 | B |
| C102 | 2 | I | C702 | 12 | B | D792 | 11 | B | G903 | 10 | E | R384 | 2 | D | R782 | 9 | B |
| C105 | 3 | I | C703 | 7 | H | D793 | 6 | B | G904 | 10 | F | R385 | 1 | E | R783 | 7 | B |
| C106 | 3 | I | C704 | 6 | H | D794 | 11 | B | G905 | 10 | F | R386 | 2 | E | R784 | 9 | B |
| C107 | 3 | H | C709 | 6 | I | D801 | 8 | F | G906 | 10 | E | R389 | 1 | E | R785 | 12 | G |
| C108 | 3 | I | C710 | 6 | I | D802 | 7 | F | G921 | 8 | I | R390 | 2 | E | R786 | 12 | F |
| C111 | 2 | H | C711 | 11 | C | D803 | 8 | E | G922 | 8 | J | R391 | 2 | E | R787 | 4 | C |
| C112 | 3 | H | C712 | 11 | C | D804 | 7 | E | G923 | 11 | E | R392 | 2 | E | R788 | 4 | B |
| C113 | 2 | H | C713 | 11 | D | D901 | 8 | B | G931 | 4 | A | R393 | 1 | E | R789 | 13 | F |
| C114 | 4 | H | C714 | 11 | C | D902 | 9 | B | R101 | 2 | J | R394 | 2 | E | R790 | 13 | F |
| C115 | 2 | I | C721 | 7 | I | D905 | 10 | F | R102 | 2 | I | R395 | 2 | F | R791 | 7 | B |
| C116 | 3 | I | C722 | 6 | I | D911 | 4 | B | R103 | 3 | I | R396 | 1 | D | R792 | 10 | B |
| C117 | 2 | I | C723 | 7 | I | D912 | 11 | F | R104 | 3 | I | R522 | 1 | C | R793 | 6 | B |
| C118 | 3 | I | C724 | 6 | I | F001 | 12 | J | R105 | 2 | H | R523 | 1 | D | R794 | 10 | B |
| C121 | 3 | H | C725 | 7 | I | F801 | 6 | G | R106 | 4 | H | R524 | 2 | D | R795 | 7 | B |
| C122 | 3 | H | C726 | 6 | I | F802 | 6 | G | R107 | 2 | I | R527 | 1 | D | R796 | 9 | B |
| C123 | 3 | H | C727 | 7 | H | IC101 | 3 | I | R108 | 3 | I | R528 | 2 | D | R797 | 6 | B |
| C124 | 3 | H | C728 | 6 | H | IC201 | 2 | G | R109 | 2 | H | R701 | 12 | B | R798 | 11 | B |
| C203 | 2 | J | C761 | 6 | B | IC231 | 3 | E | R110 | 3 | I | R702 | 12 | B | R811 | 11 | E |
| C204 | 2 | J | C762 | 11 | B | IC301 | 13 | D | R111 | 2 | H | R703 | 12 | B | R812 | 11 | E |
| C205 | 3 | J | C763 | 5 | B | IC361 | 2 | D | R112 | 4 | H | R704 | 12 | B | R851 | 7 | F |
| C206 | 3 | J | C764 | 11 | B | IC363 | 2 | E | R113 | 3 | H | R705 | 7 | I | R901 | 8 | B |
| C209 | 3 | J | C773 | 5 | B | IC751 | 6 | C | R114 | 3 | H | R706 | 6 | I | R902 | 8 | B |
| C210 | 4 | J | C774 | 11 | B | IC752 | 10 | C | R121 | 2 | H | R707 | 7 | I | R903 | 8 | A |
| C211 | 4 | J | C781 | 7 | B | J201 | 2 | J | R122 | 3 | H | R708 | 6 | I | R904 | 8 | A |
| C212 | 2 | J | C782 | 9 | B | J202 | 3 | J | R201 | 3 | J | R709 | 6 | I | R905 | 8 | B |
| C213 | 3 | J | C783 | 7 | B | J701 | 3 | C | R202 | 3 | J | R710 | 6 | I | R906 | 9 | B |
| C214 | 3 | J | C784 | 9 | B | K503 | 4 | A | R203 | 3 | J | R711 | 11 | C | R907 | 8 | B |
| C220 | 3 | G | C787 | 4 | C | L781 | 7 | B | R204 | 4 | J | R712 | 11 | C | R908 | 8 | B |
| C221 | 2 | F | C788 | 4 | B | L782 | 9 | B | R205 | 4 | J | R713 | 11 | D | R909 | 11 | E |
| C222 | 2 | G | C789 | 3 | D | O251 | 2 | F | R206 | 4 | J | R714 | 11 | C | R910 | 11 | E |
| C231 | 3 | E | C790 | 3 | B | O353 | 13 | F | R211 | 3 | J | R715 | 7 | H | R911 | 10 | E |
| C232 | 3 | E | C801 | 9 | D | O354 | 13 | E | R212 | 3 | I | R716 | 6 | H | R912 | 10 | F |
| C233 | 3 | E | C802 | 10 | D | O355 | 13 | F | R213 | 3 | J | R717 | 7 | I | R913 | 10 | F |
| C234 | 3 | E | C811 | 11 | E | O357 | 12 | F | R214 | 4 | I | R718 | 5 | I | R914 | 10 | E |
| C235 | 3 | D | C812 | 11 | E | O358 | 12 | F | R217 | 4 | J | R719 | 7 | I | R915 | 10 | E |


P2-12-a

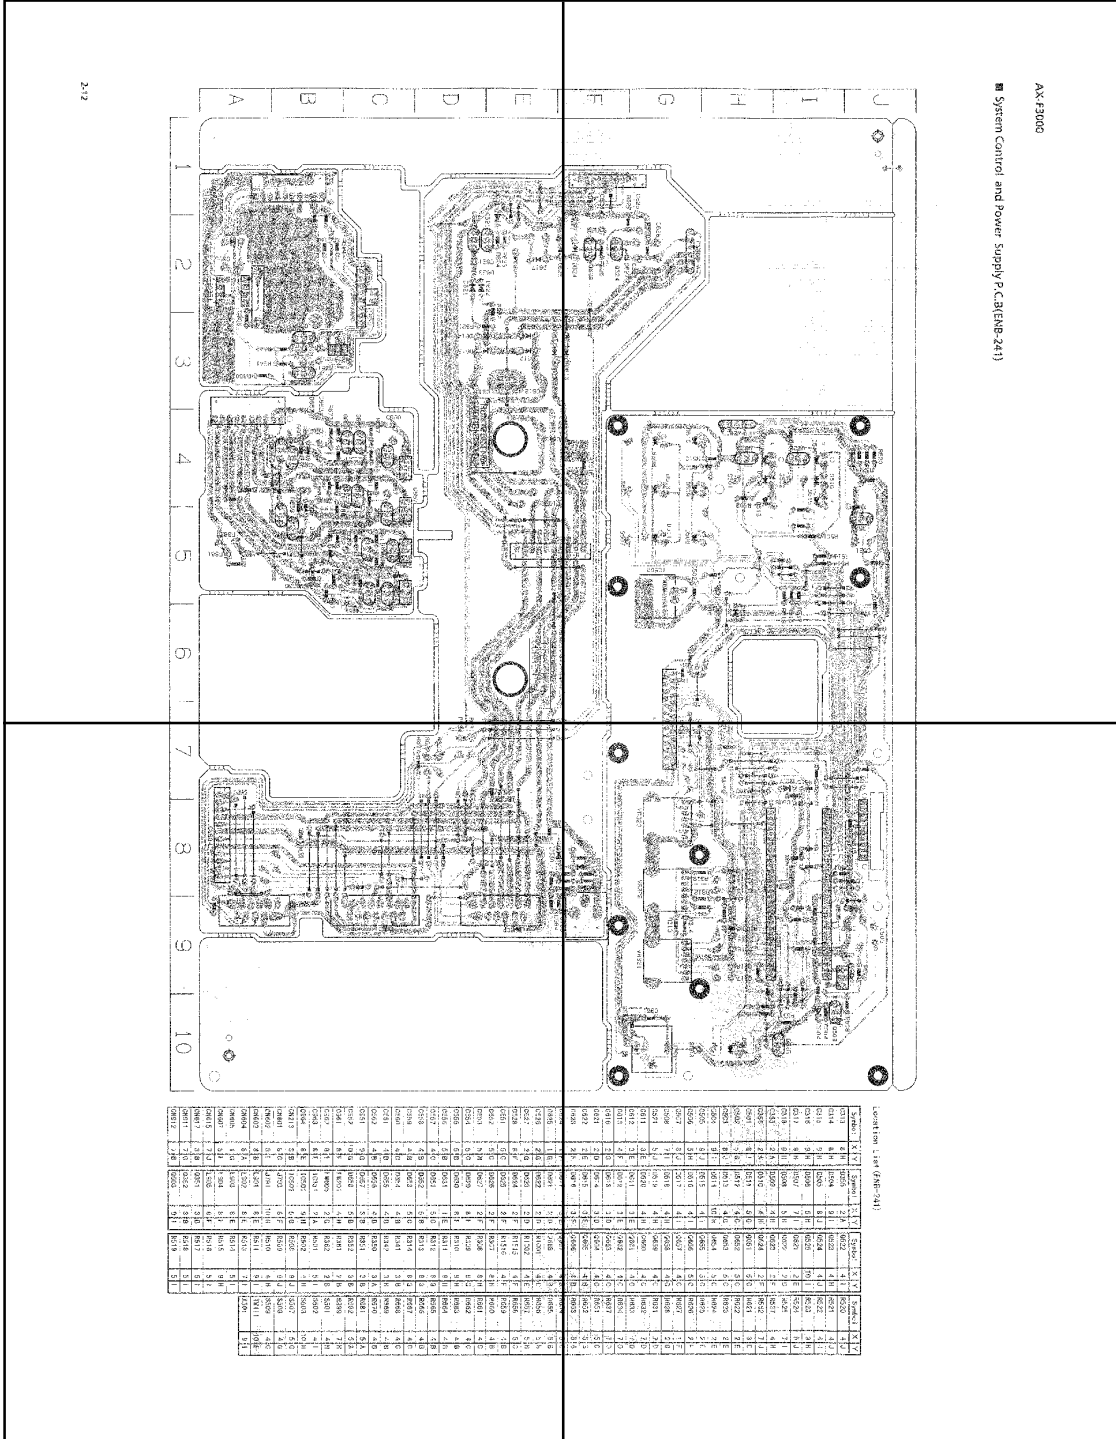


P2-12-b


P2-12-c

P2-12-d

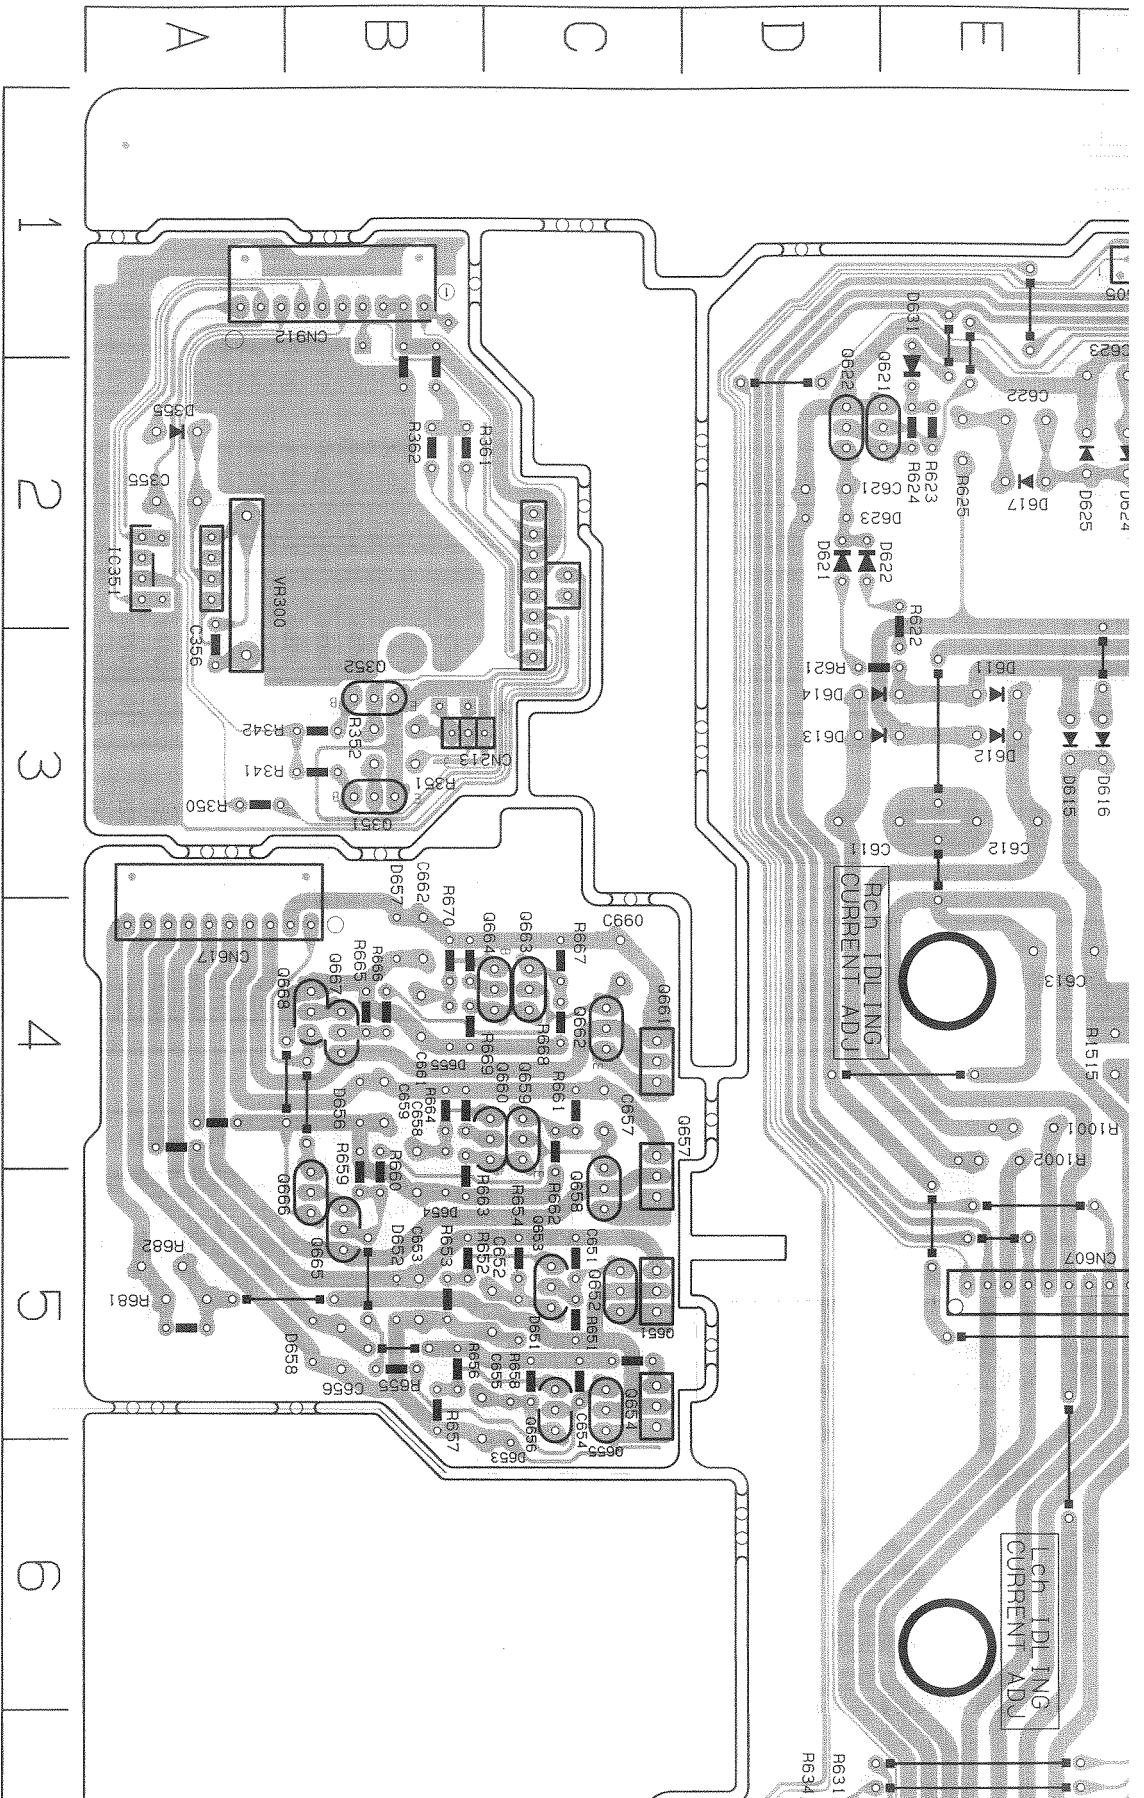


System Control and Power Supply P.C.B.(ENB-241)

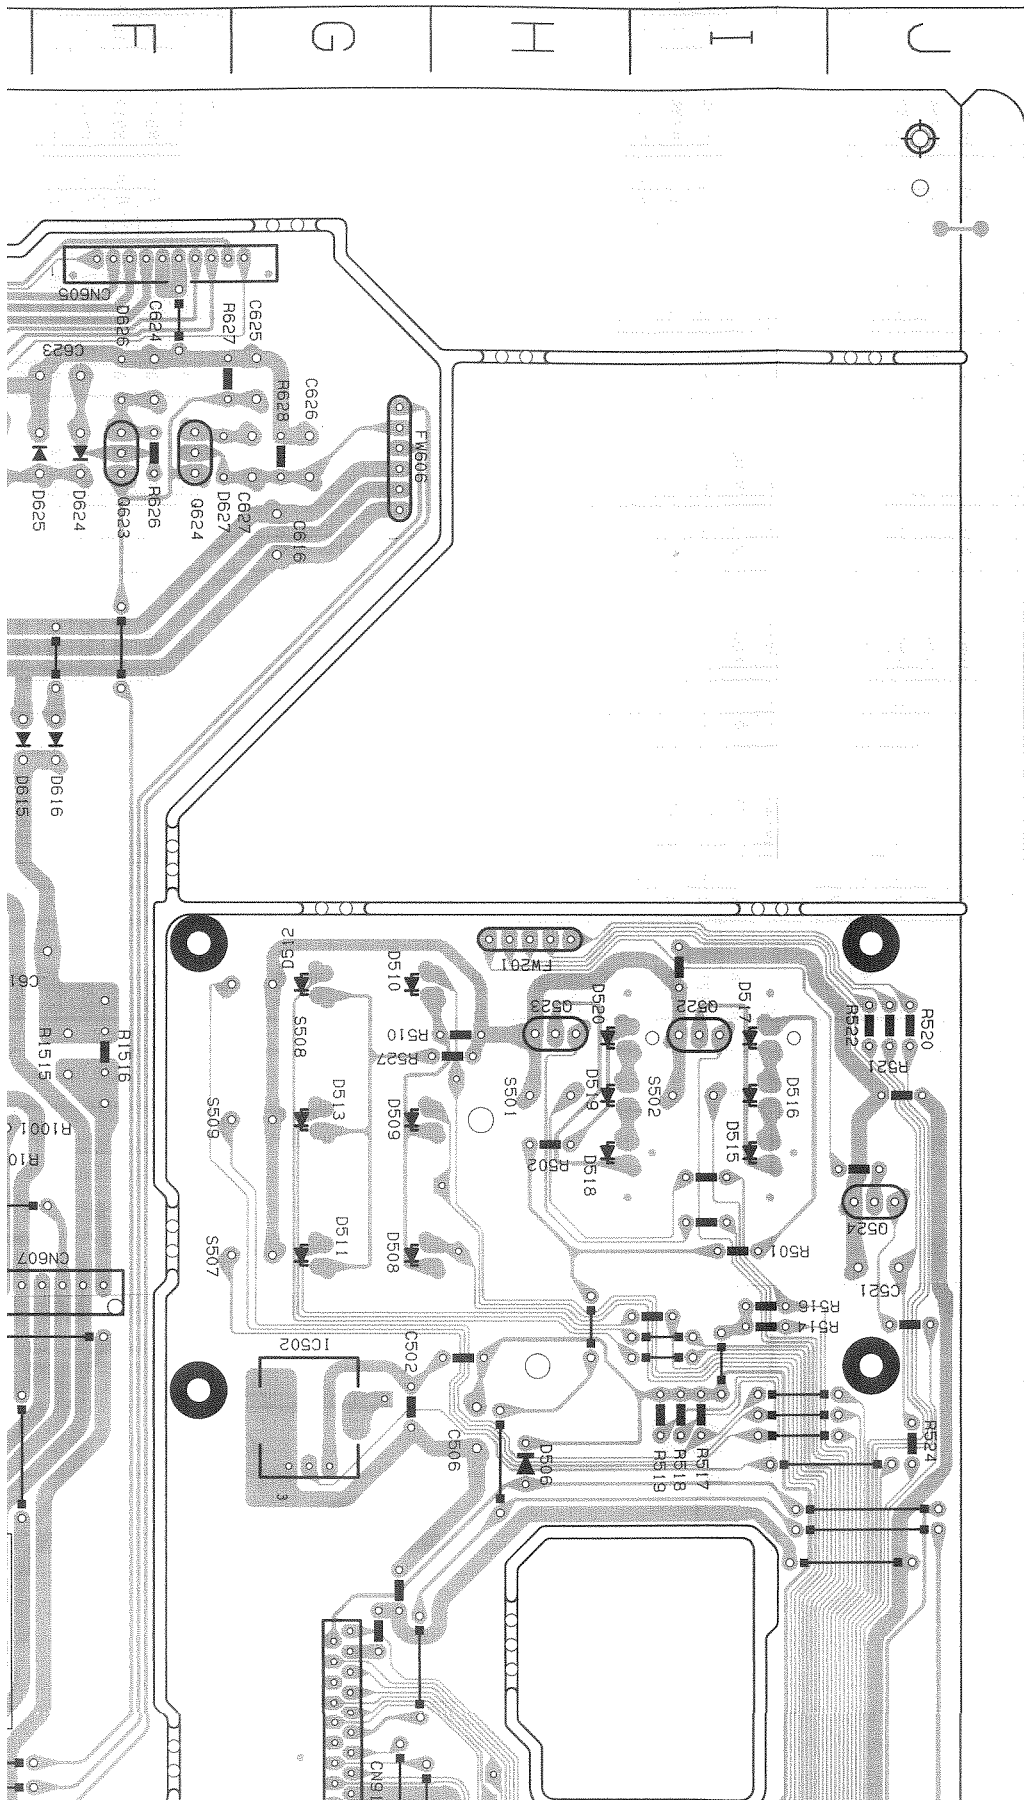

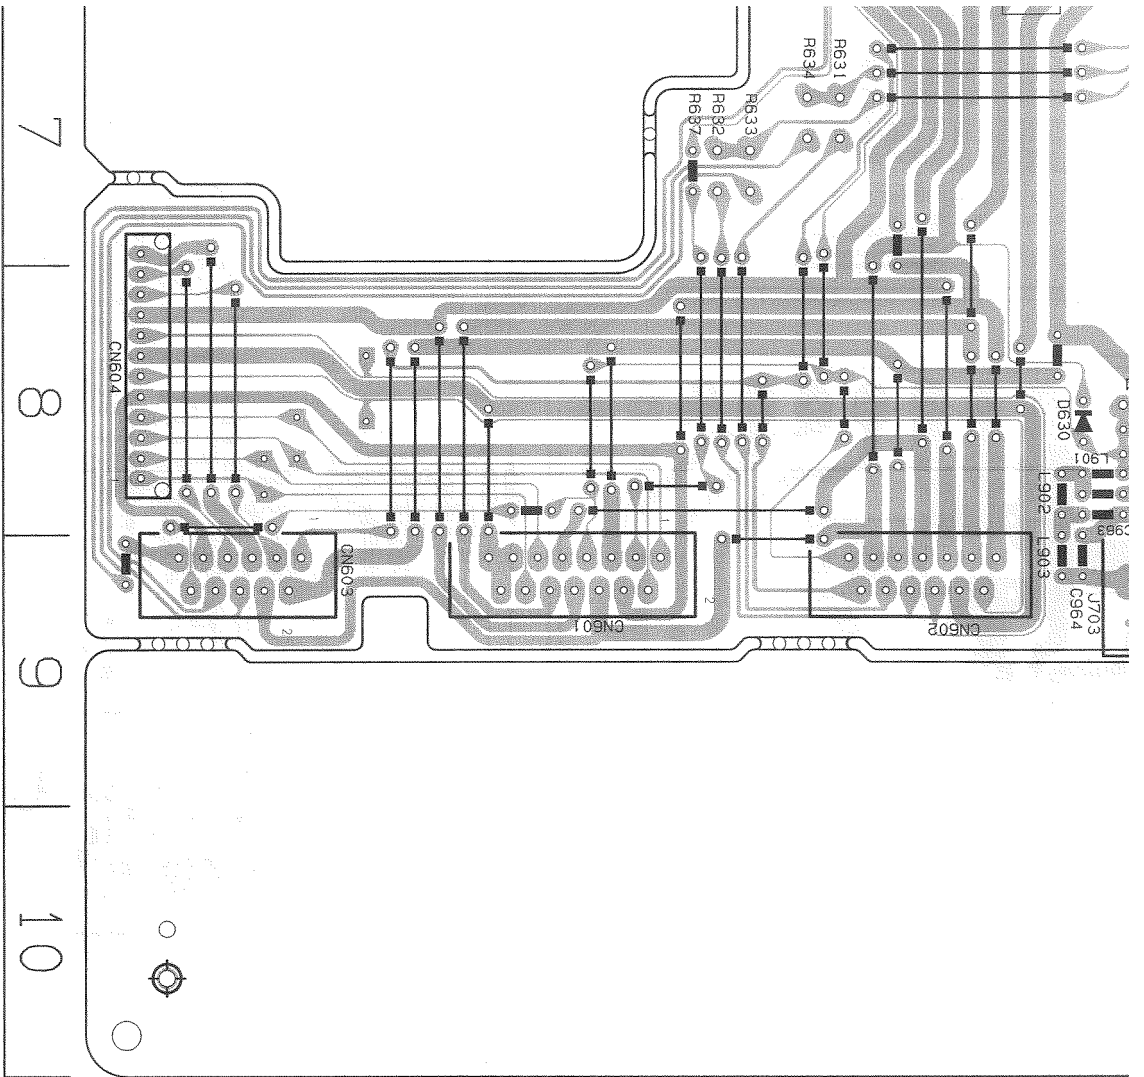


| | | | | | | | |
|-------|------|-------|------|-------|-----|-------|------|
| U623 | 2/F | D616 | 3/F | Q666 | 4/B | R653 | 5/B |
| U624 | 1/F | D617 | 2/E | Q667 | 4/B | R654 | 5/C |
| U625 | 1/G | D621 | 2/D | Q668 | 4/B | R655 | 5/B |
| U626 | 2/G | D622 | 2/D | R1001 | 4/E | R656 | 5/B |
| U627 | 2/G | D623 | 2/D | R1002 | 4/E | R657 | 5/B |
| U628 | 8/F | D624 | 2/F | R1515 | 4/F | R658 | 5/C |
| U661 | 5/C | D625 | 2/F | R1516 | 4/F | R659 | 4/B |
| U662 | 5/C | D626 | 2/F | R307 | 8/H | R660 | 4/B |
| U663 | 5/B | D627 | 2/F | R308 | 8/H | R661 | 4/C |
| U664 | 5/C | D629 | 8/F | R309 | 8/G | R662 | 4/C |
| U665 | 5/B | D630 | 8/F | R310 | 8/H | R663 | 4/B |
| U666 | 5/B | D631 | 1/E | R311 | 8/H | R664 | 4/B |
| U667 | 4/C | D651 | 5/C | R312 | 8/G | R665 | 4/B |
| U668 | 4/B | D652 | 5/B | R313 | 8/G | R666 | 4/B |
| U669 | 4/B | D653 | 5/C | R314 | 8/G | R667 | 4/C |
| U660 | 4/C | D654 | 4/B | R341 | 3/B | R668 | 4/C |
| U661 | 4/B | D655 | 4/B | R342 | 3/B | R669 | 4/B |
| U662 | 4/B | D656 | 4/B | R350 | 3/A | R670 | 4/B |
| U663 | 9/G | D657 | 3/B | R351 | 3/B | R681 | 5/A |
| U664 | 10/G | D658 | 5/B | R352 | 3/B | R682 | 5/A |
| U661 | 8/F | FW201 | 4/H | R361 | 2/B | R999 | 7/H |
| U662 | 8/E | FW606 | 2/G | R362 | 2/B | S01 | 4/H |
| U663 | 8/E | IC351 | 2/A | R501 | 5/1 | S02 | 4/1 |
| U664 | 8/E | IC501 | 9/H | R502 | 4/H | S03 | 10/H |
| U6213 | 3/B | IC502 | 5/G | R508 | 9/J | S07 | 5/G |
| U601 | 8/C | J703 | 8/F | R509 | 9/J | S08 | 4/G |
| U602 | 8/E | J791 | 10/G | R510 | 4/H | S09 | 4/G |
| U603 | 8/B | L901 | 8/E | R511 | 9/1 | TW111 | 10/F |
| U604 | 8/A | L902 | 8/E | R513 | 7/1 | X501 | 9/1 |
| U605 | 1/G | L903 | 8/E | R514 | 5/1 | | |
| U607 | 5/E | L904 | 8/F | R515 | 9/H | | |
| U615 | 7/J | L905 | 8/F | R516 | 5/1 | | |
| U617 | 3/B | Q351 | 3/B | R517 | 5/1 | | |
| U611 | 7/G | Q352 | 3/B | R518 | 5/1 | | |
| U612 | 1/B | Q503 | 9/1 | R519 | 5/1 | | |

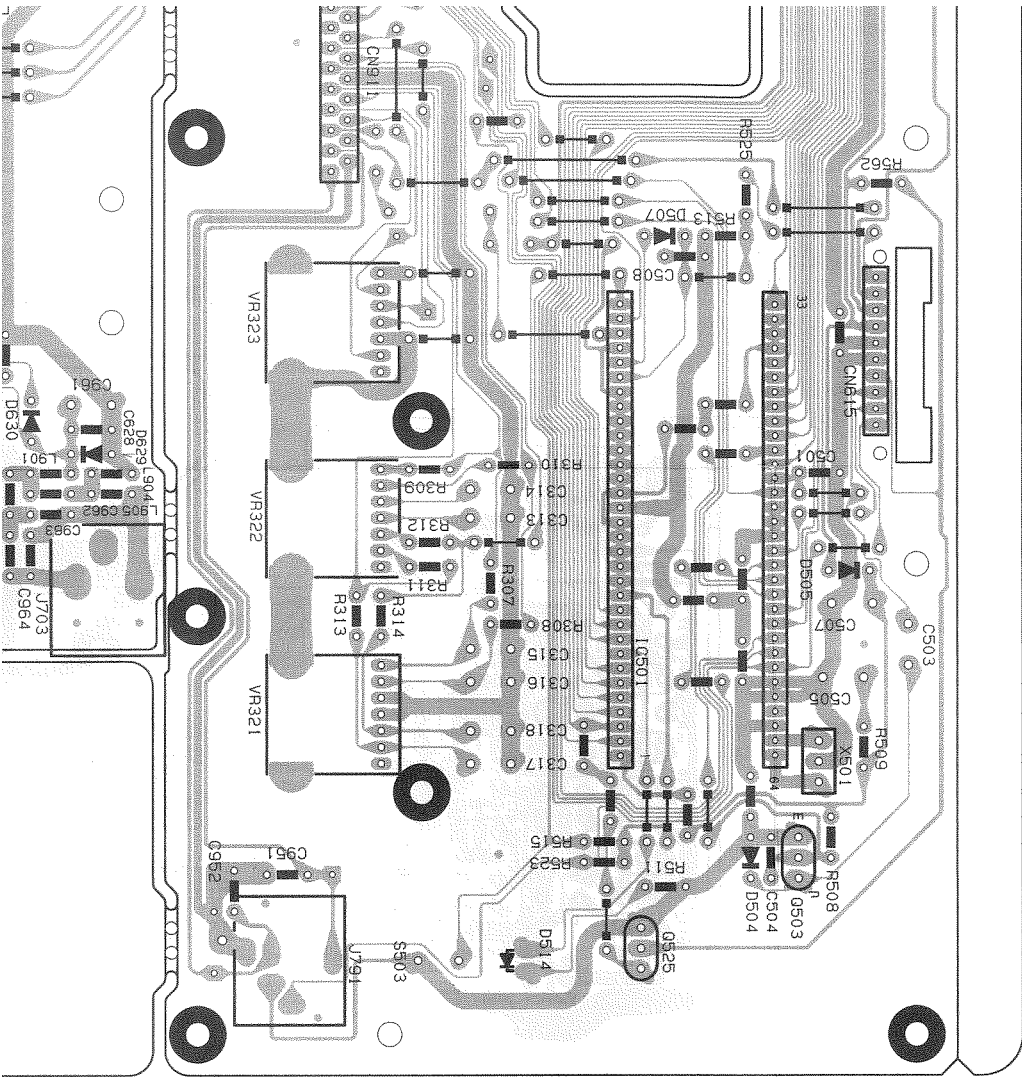

Location List (ENB-241)


| | | | | | | | | | | | |
|--------|-----|------|--------|------|------|--------|-----|---|--------|---|---|
| Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y |
| C313 | 8 H | D355 | 2 A | 0622 | 4 I | R520 | 4 J | | | | |
| C314 | 8 H | D504 | 9 I | 0523 | 4 H | R521 | 4 J | | | | |
| C315 | 9 H | D505 | 8 J | 0524 | 4 J | R522 | 4 J | | | | |
| C316 | 9 H | D506 | 5 H | 0525 | 10 I | R523 | 9 H | | | | |
| C317 | 9 H | D507 | 7 I | 0621 | 2 E | R524 | 5 J | | | | |
| C318 | 9 H | D508 | 5 H | 0622 | 2 D | R525 | 7 I | | | | |
| C355 | 2 A | D509 | 4 H | 0623 | 2 F | R527 | 4 H | | | | |
| C356 | 2 A | D510 | 4 H | 0624 | 2 F | R562 | 7 J | | | | |
| C501 | 8 I | D511 | 5 G | 0651 | 5 C | R621 | 3 D | | | | |
| C502 | 5 G | D512 | 4 G | 0652 | 5 C | R622 | 2 E | | | | |
| C503 | 8 J | D513 | 4 G | 0653 | 5 C | R623 | 2 E | | | | |
| C504 | 9 I | D514 | 10 H | 0654 | 5 C | R624 | 2 E | | | | |
| C505 | 9 J | D515 | 4 I | 0655 | 5 C | R625 | 2 E | | | | |
| C506 | 5 H | D516 | 4 I | 0656 | 5 C | R626 | 2 F | | | | |
| C507 | 8 J | D517 | 4 I | 0657 | 4 C | R627 | 1 F | | | | |
| C508 | 7 I | D518 | 4 H | 0658 | 4 C | R628 | 2 G | | | | |
| C521 | 5 J | D519 | 4 H | 0659 | 4 C | R631 | 7 D | | | | |
| C611 | 3 E | D520 | 4 H | 0660 | 4 C | R632 | 7 D | | | | |
| C612 | 3 E | D611 | 3 E | 0661 | 4 C | R633 | 7 D | | | | |
| C613 | 4 F | D612 | 3 E | 0662 | 4 C | R634 | 7 D | | | | |
| C616 | 2 G | D613 | 3 D | 0663 | 4 C | R637 | 7 D | | | | |
| C621 | 2 D | D614 | 3 D | 0664 | 4 C | R651 | 5 C | | | | |
| C622 | 2 E | D615 | 3 E | 0665 | 4 B | R652 | 5 B | | | | |
| C623 | 2 F | D616 | 3 F | 0666 | 4 B | R653 | 5 B | | | | |
| C624 | 1 F | D617 | 2 E | 0667 | 4 B | R654 | 5 C | | | | |
| C625 | 1 G | D621 | 2 D | 0668 | 4 B | R655 | 5 B | | | | |

P2-13-a

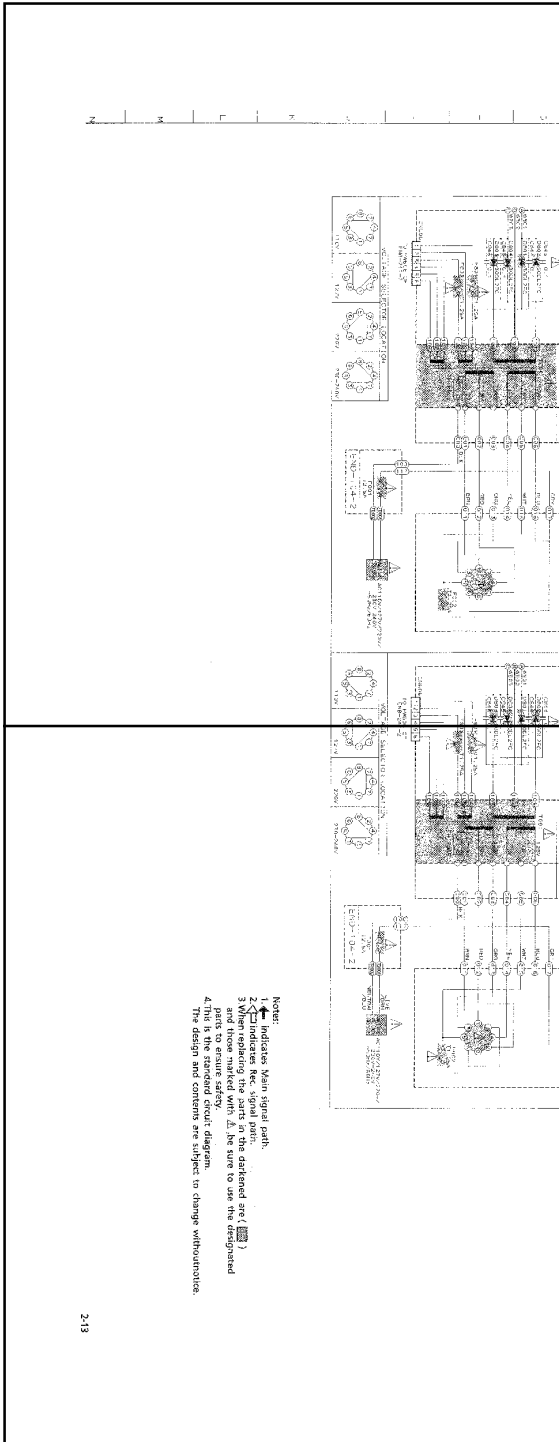

P2-13-c

P2-13-b

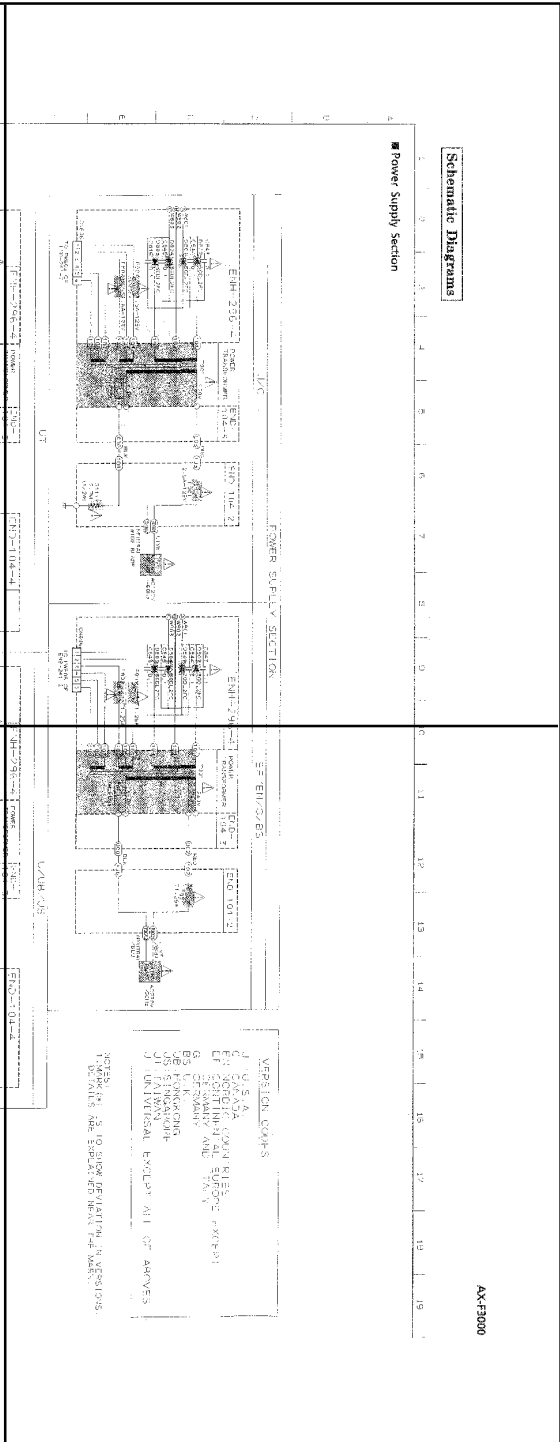


REVISIONS

| | |
|----|---------|
| 1 | REVISED |
| 2 | REVISED |
| 3 | REVISED |
| 4 | REVISED |
| 5 | REVISED |
| 6 | REVISED |
| 7 | REVISED |
| 8 | REVISED |
| 9 | REVISED |
| 10 | REVISED |
| 11 | REVISED |
| 12 | REVISED |
| 13 | REVISED |
| 14 | REVISED |
| 15 | REVISED |
| 16 | REVISED |
| 17 | REVISED |
| 18 | REVISED |
| 19 | REVISED |
| 20 | REVISED |

NOTES:
1. REFER TO DRAWING AX-F3000 FOR DETAILS.
2. REFER TO DRAWING AX-F3000 FOR DETAILS.
3. REFER TO DRAWING AX-F3000 FOR DETAILS.
4. REFER TO DRAWING AX-F3000 FOR DETAILS.
5. REFER TO DRAWING AX-F3000 FOR DETAILS.
6. REFER TO DRAWING AX-F3000 FOR DETAILS.
7. REFER TO DRAWING AX-F3000 FOR DETAILS.
8. REFER TO DRAWING AX-F3000 FOR DETAILS.
9. REFER TO DRAWING AX-F3000 FOR DETAILS.
10. REFER TO DRAWING AX-F3000 FOR DETAILS.
11. REFER TO DRAWING AX-F3000 FOR DETAILS.
12. REFER TO DRAWING AX-F3000 FOR DETAILS.
13. REFER TO DRAWING AX-F3000 FOR DETAILS.
14. REFER TO DRAWING AX-F3000 FOR DETAILS.
15. REFER TO DRAWING AX-F3000 FOR DETAILS.
16. REFER TO DRAWING AX-F3000 FOR DETAILS.
17. REFER TO DRAWING AX-F3000 FOR DETAILS.
18. REFER TO DRAWING AX-F3000 FOR DETAILS.
19. REFER TO DRAWING AX-F3000 FOR DETAILS.
20. REFER TO DRAWING AX-F3000 FOR DETAILS.

P2-13-d


Notes:
1. Refer to drawing AX-F3000 for details.
2. Refer to drawing AX-F3000 for details.
3. When replacing the parts in the attached are () and those marked with Δ, be sure to use the designated parts in the standard circuit diagram.
The design and contents are subject to change without notice.

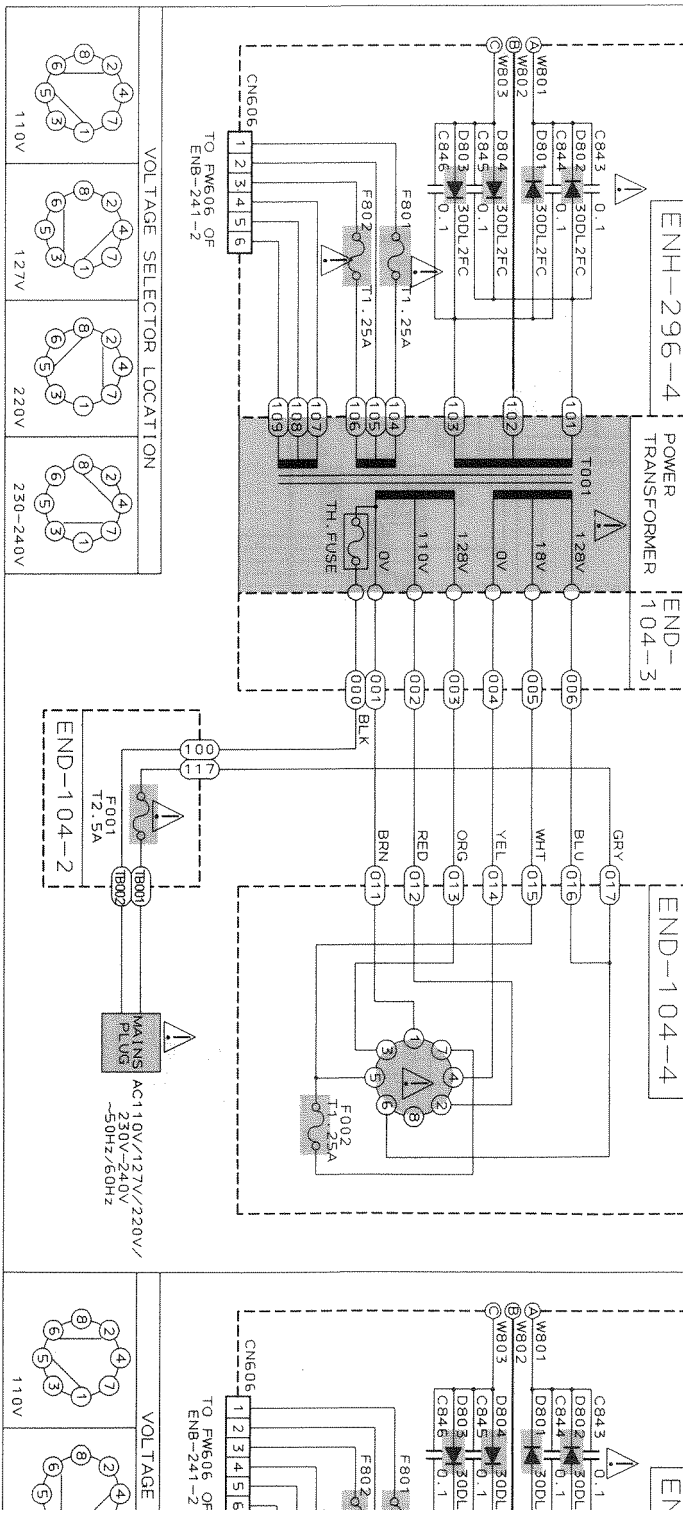


G I I C X F N Z

Schematic Diagrams

Power Supply Section

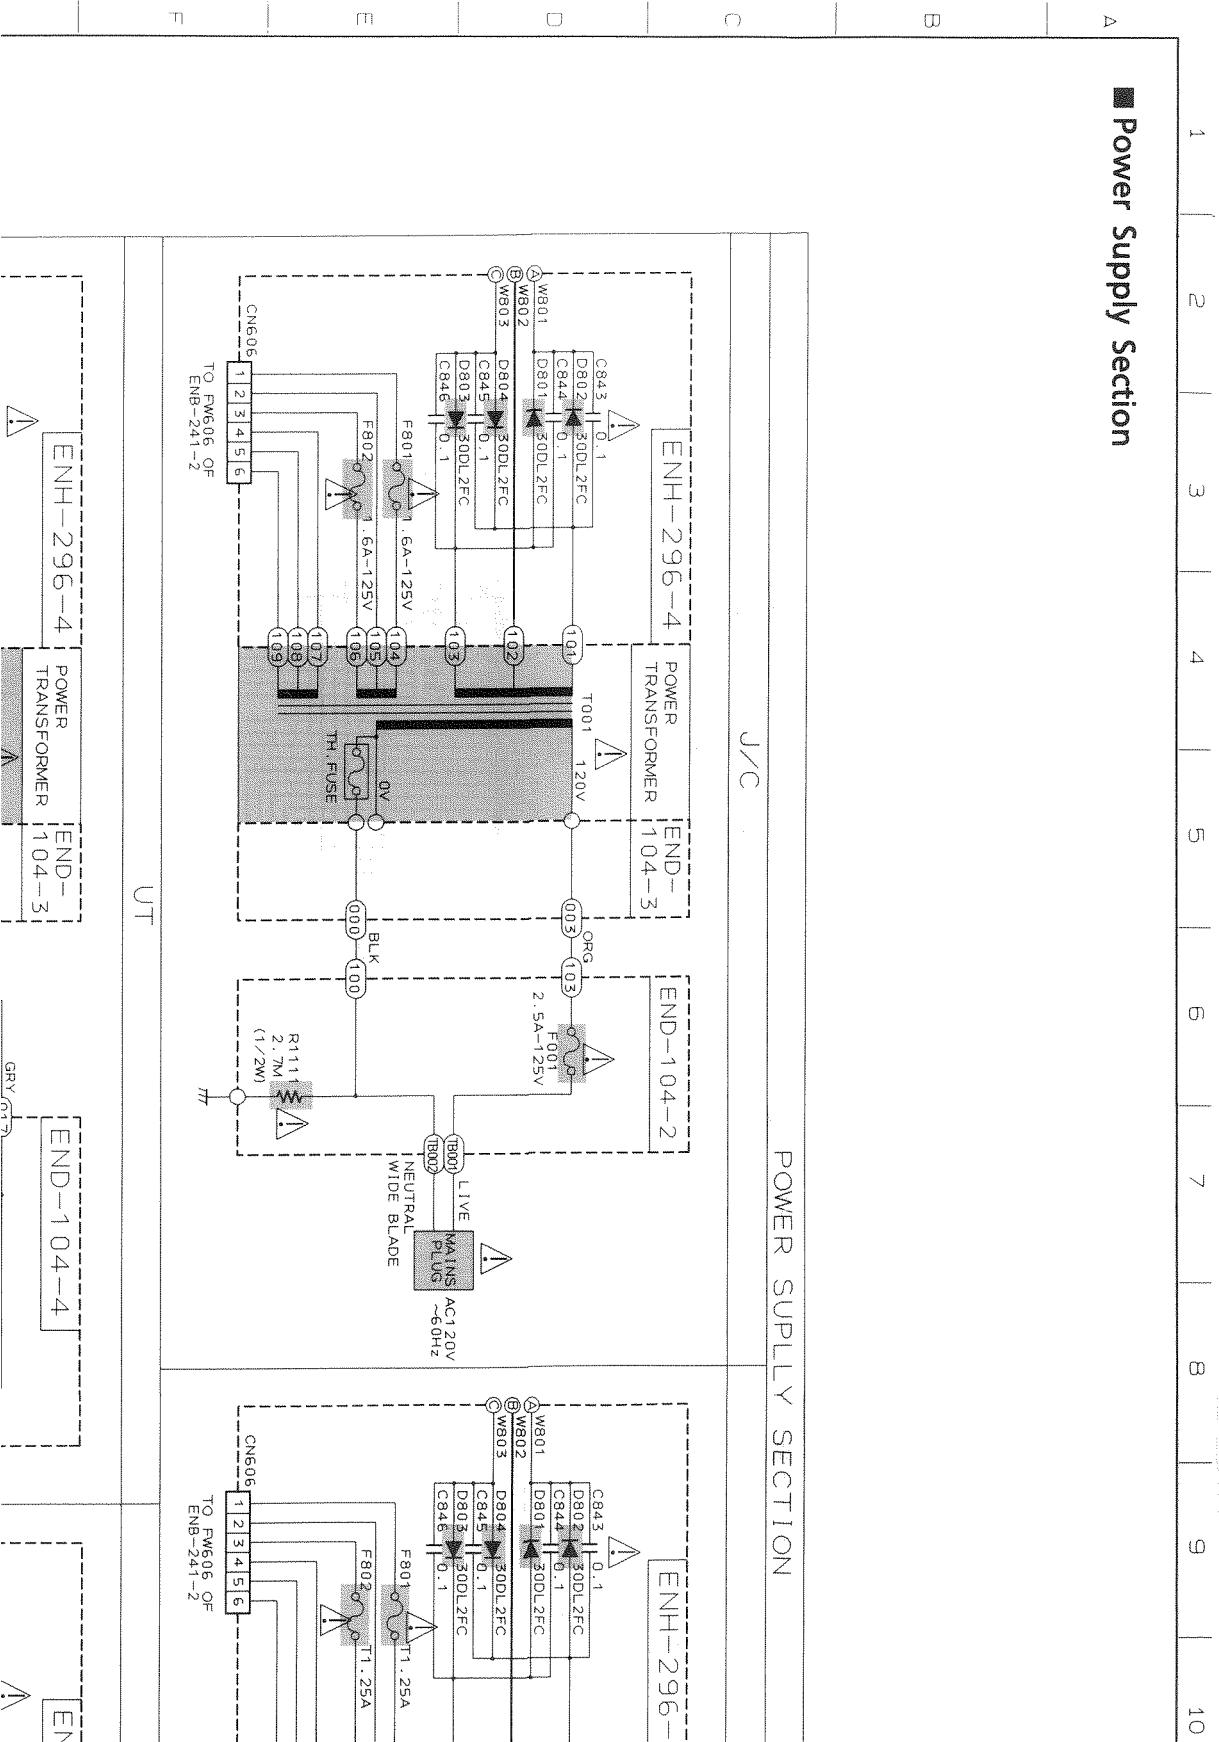


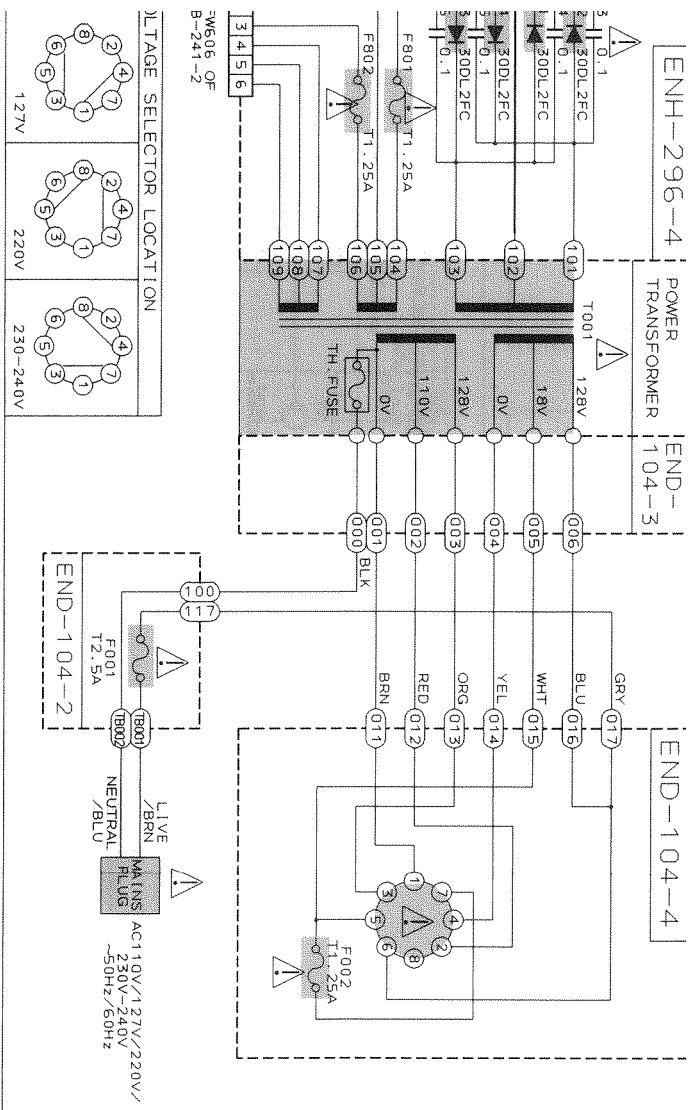

- Notes:
1. ↑ indicates Main signal path.
 2. ◀ indicates Rec. signal path.
 3. When replacing the parts in the darkened area () and those marked with Δ, be sure to use the designated parts to ensure safety.
 4. This is the standard circuit diagram. The design and contents are subject to change without notice.

10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19

EF/EN/G/BS

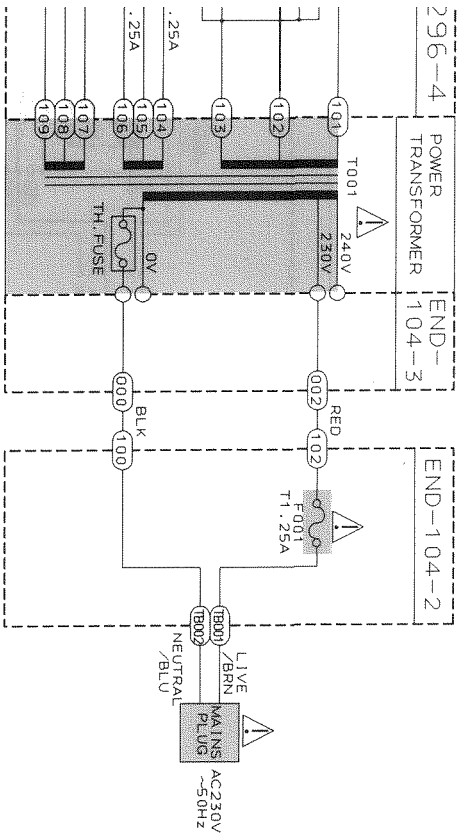


VERSION CODES

- J : U.S.A.
- C : CANADA
- EN : NORDIC COUNTRIES
- EF : CONTINENTAL EUROPE EXCEPT GERMANY AND ITALY
- G : GERMANY
- BS : U.K.
- UB : HONGKONG
- US : SINGAPORE
- UT : TAIWAN
- U : UNIVERSAL EXCEPT ALL OF ABOVE


NOTES:
 1. MARK (*) IS TO SHOW DEVIATION IN VERSIONS.
 DETAILS ARE EXPLAINED NEAR THE MARK.

U/UB/US



P2-14-a


P2-14-b

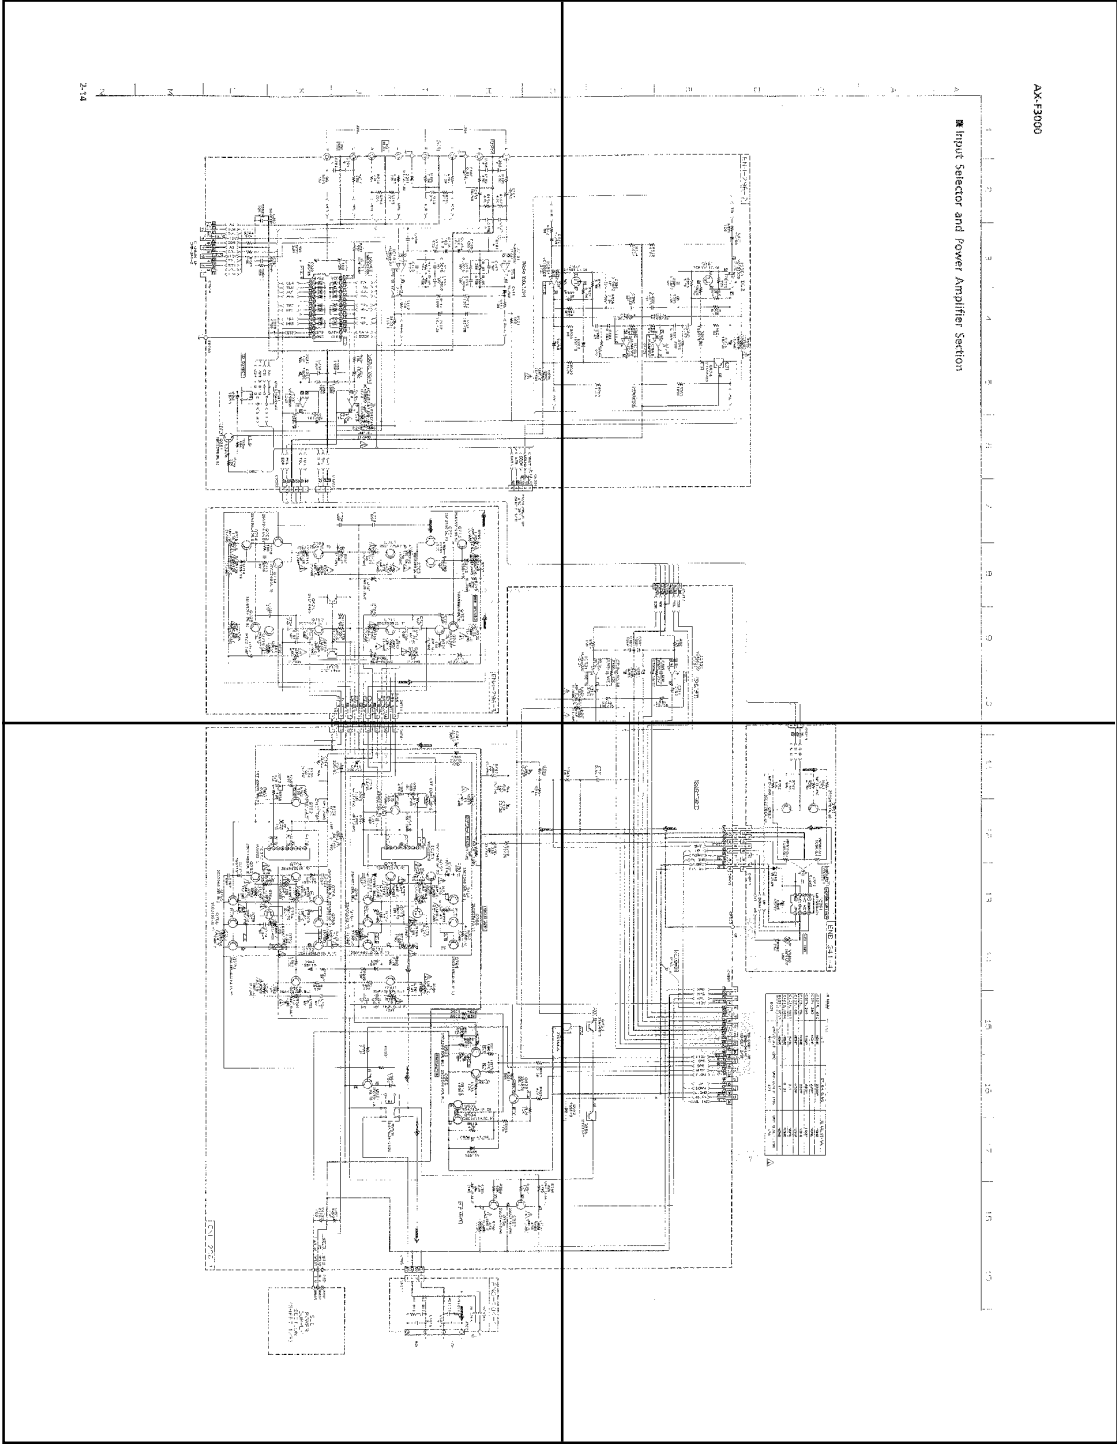

P2-14-c



P2-14-d


G I H I J K L M N

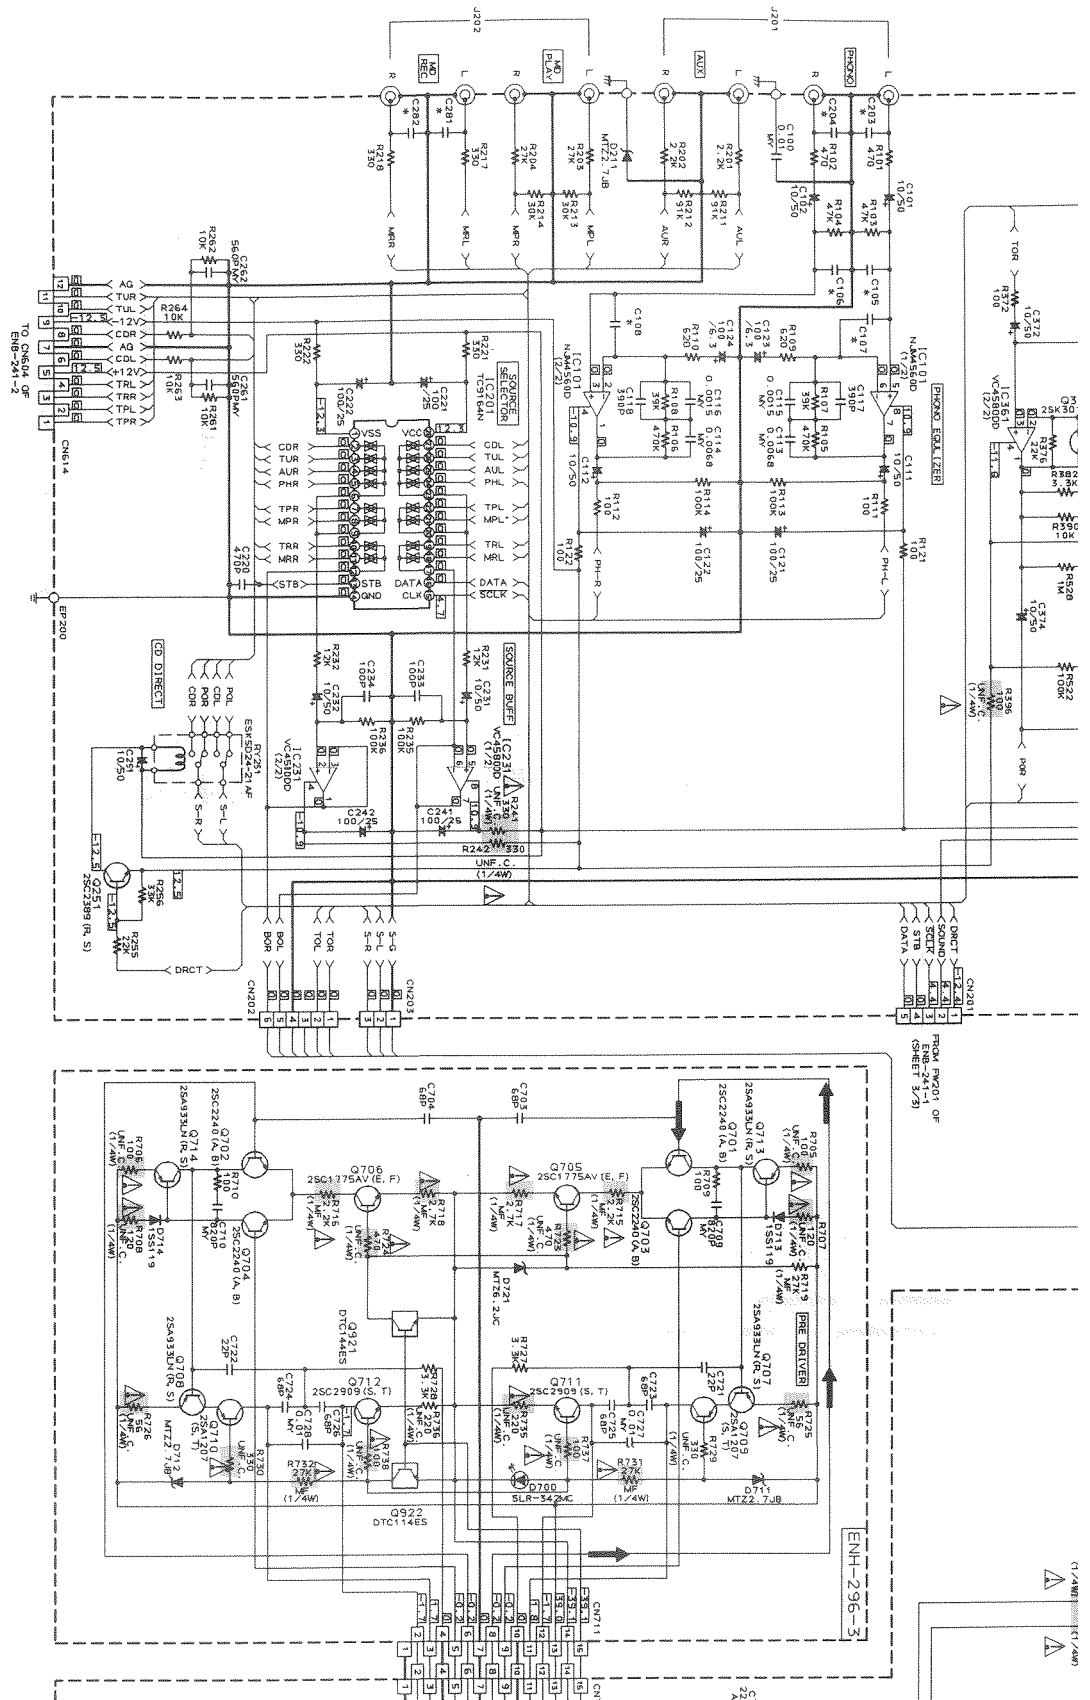


1 2 3 4 5 6 7 8 9 10

Input Selector and Power Amplifier Section

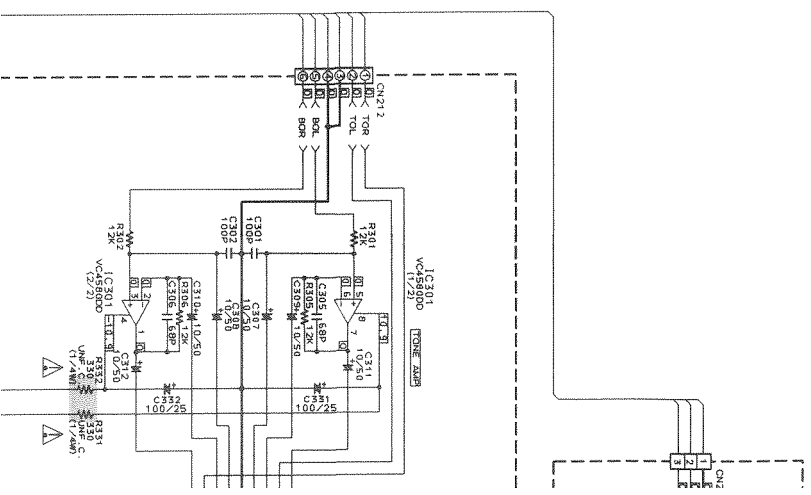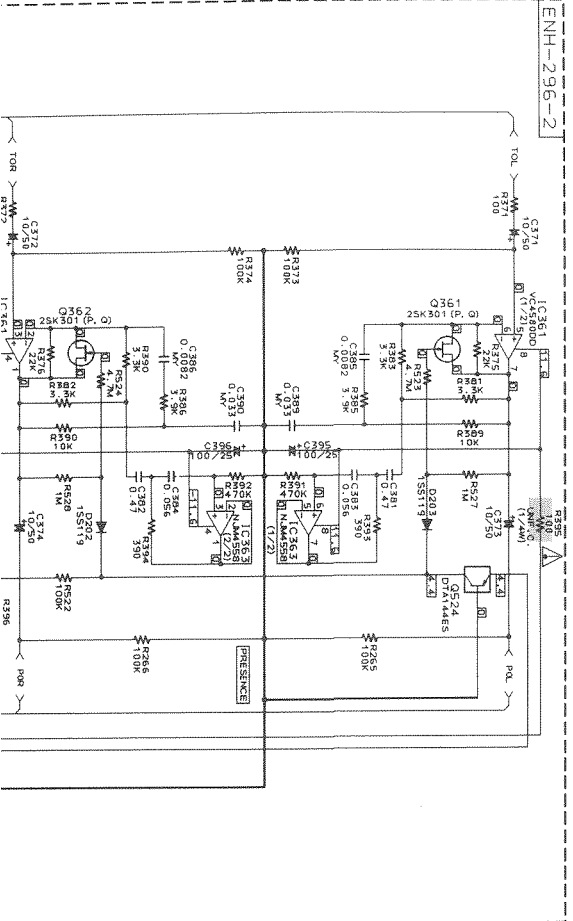


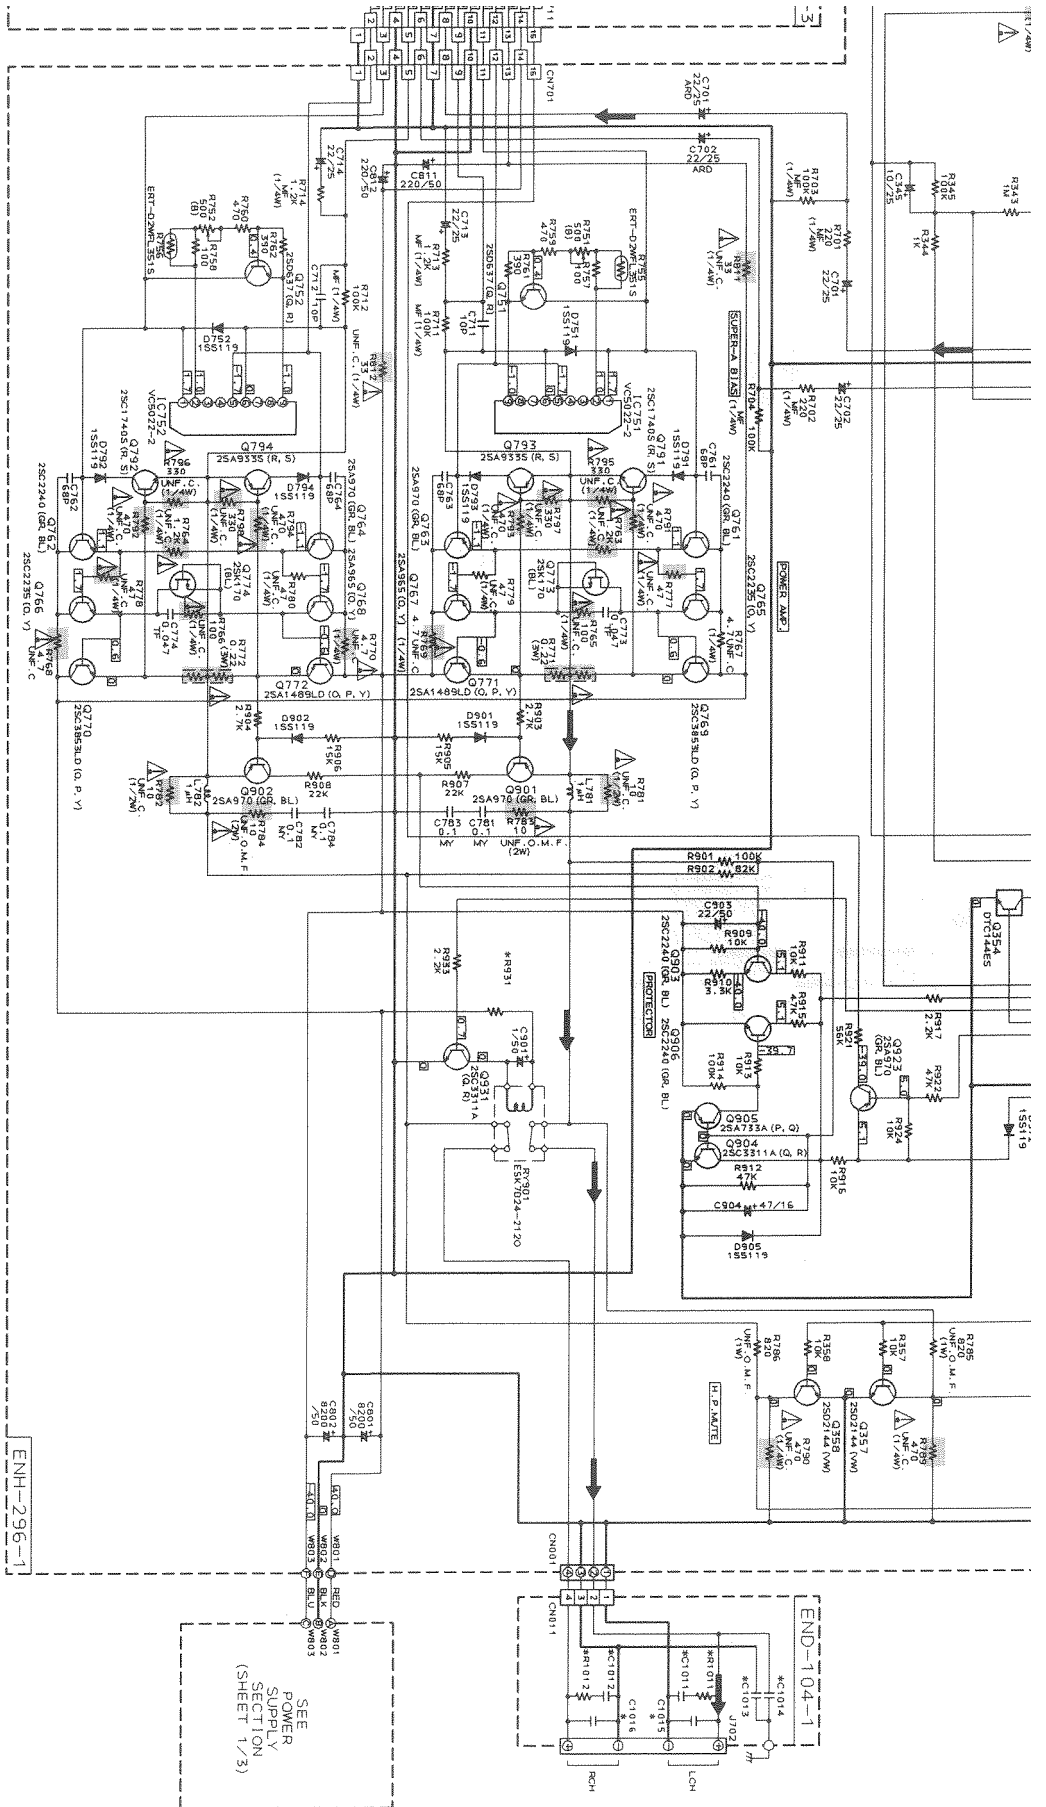

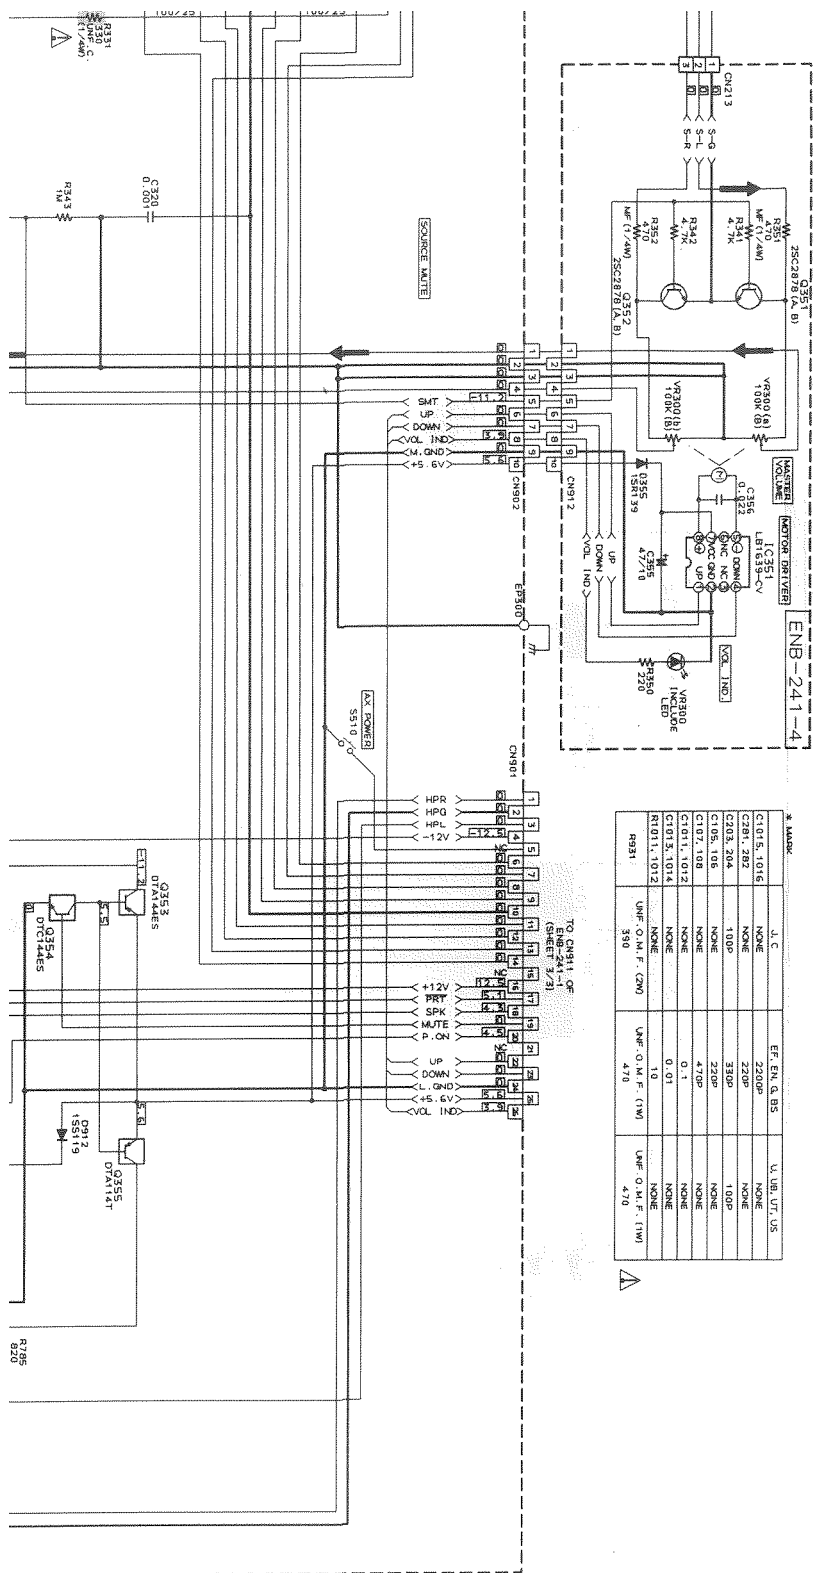


| X MODEL | L.C | EP, EN, G, BS | L, UB, UT, US |
|-------------|-----------------|-----------------|-----------------|
| C1015, 1016 | NONE | 2200P | NONE |
| C201, 202 | NONE | 220P | NONE |
| C203, 204 | 100P | 330P | 100P |
| C107, 108 | NONE | 220P | NONE |
| C1011, 1012 | NONE | 470P | NONE |
| C1013, 1014 | NONE | 0.1 | NONE |
| R1011, 1012 | NONE | 10 | NONE |
| R931 | UMF-O.M.F. (2W) | UMF-O.M.F. (1W) | UMF-O.M.F. (1W) |
| | 350 | 470 | 470 |

P2-15-a

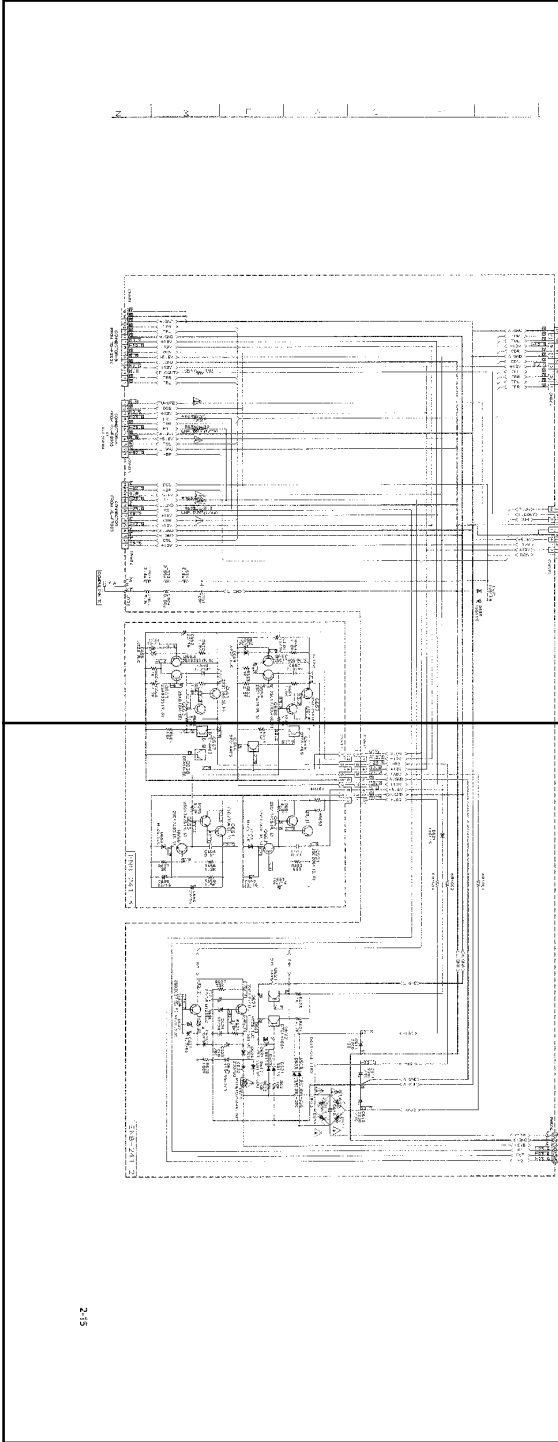

2/15


P2-15-b

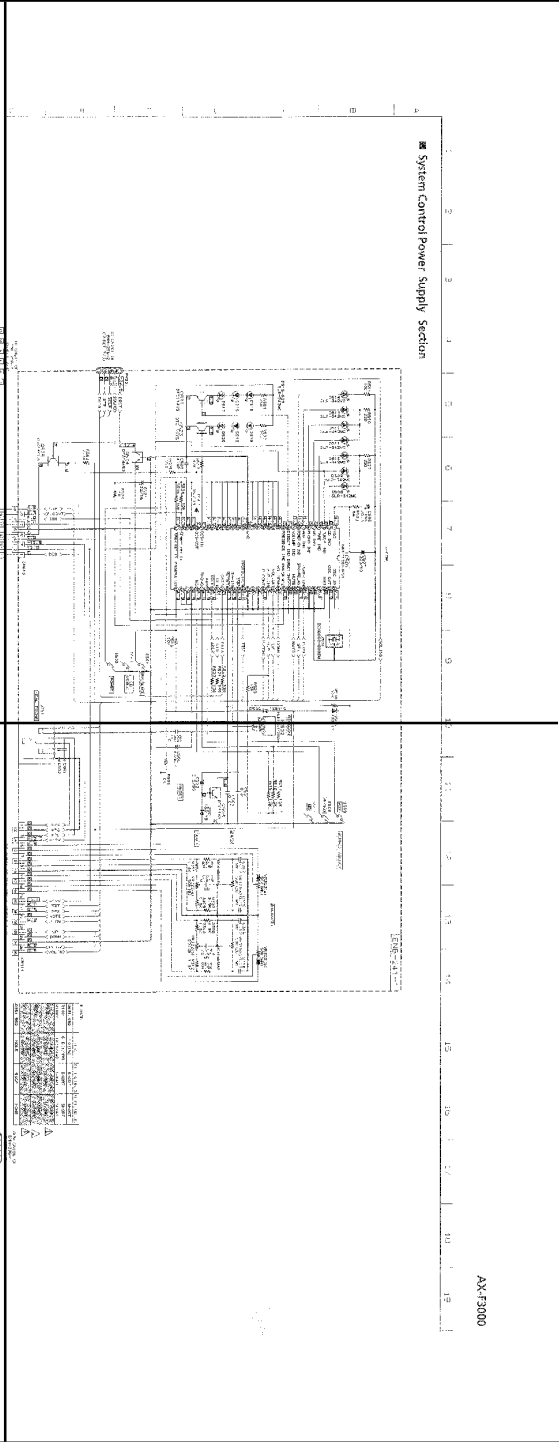


AX-F3000

P2-15-c

P2-15-d

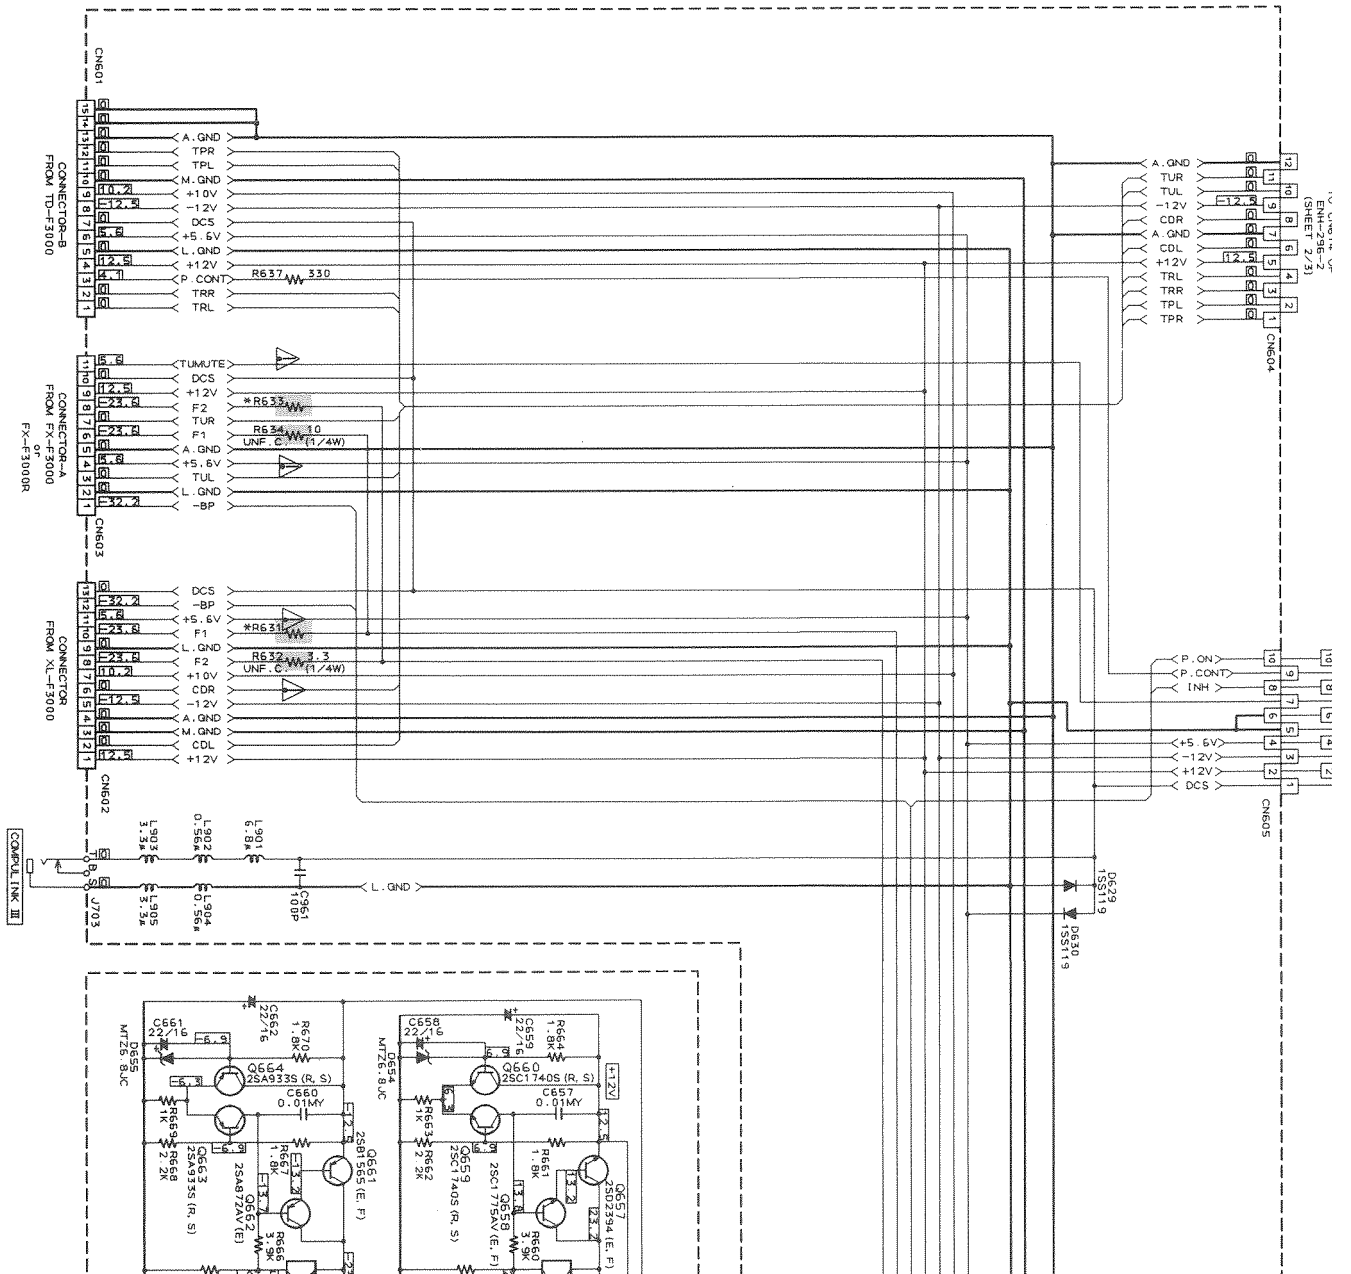

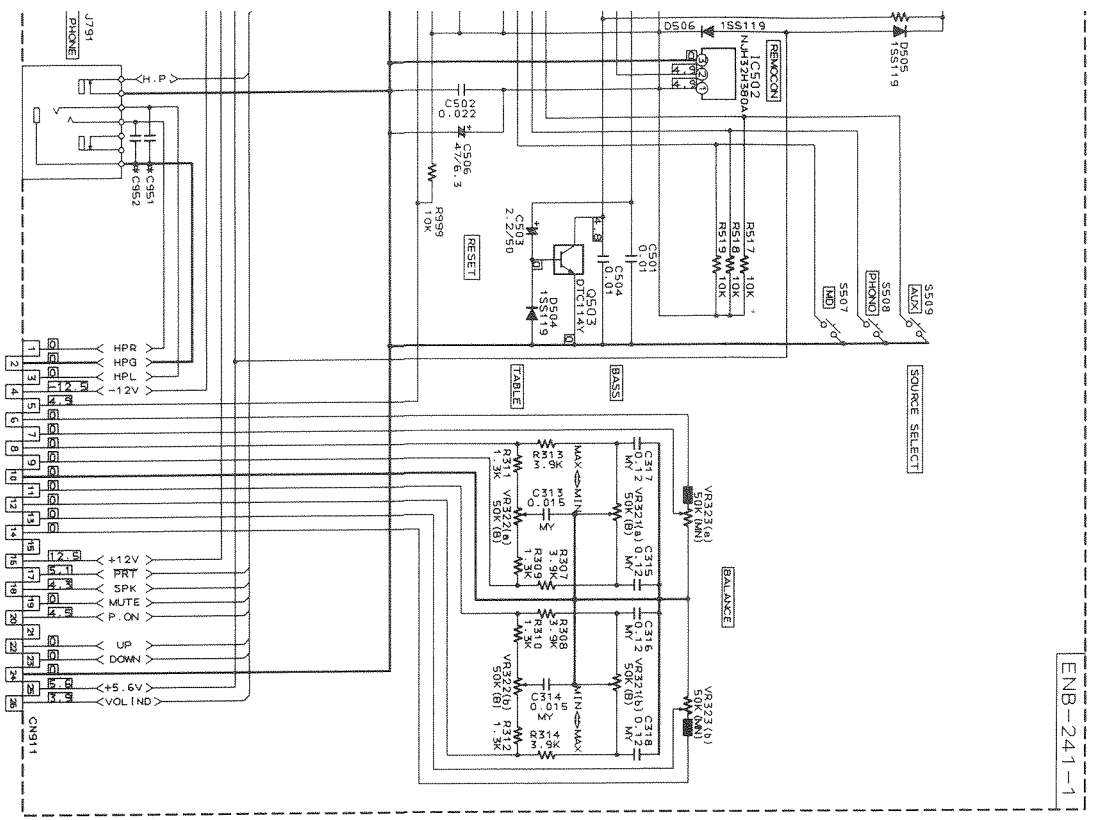

* MARK

| | | | |
|-----------|------------|------------------------------|-------|
| R6B1, 6B2 | J.C | EF, EN, BS, G, U, UT, UB, US | SHORT |
| R1001 | 6.8 (1/4W) | SHORT | SHORT |
| R1002 | 10 (1/4W) | SHORT | SHORT |
| R6B3 | 2.7 (1/4W) | SHORT | SHORT |
| R6B4 | 2.7 (1/4W) | SHORT | SHORT |
| R6B5 | 2.7 (1/4W) | SHORT | SHORT |
| R6B6 | 2.7 (1/4W) | SHORT | SHORT |
| R6B7 | 2.7 (1/4W) | SHORT | SHORT |
| R6B8 | 2.7 (1/4W) | SHORT | SHORT |
| R6B9 | 2.7 (1/4W) | SHORT | SHORT |
| R6B10 | 2.7 (1/4W) | SHORT | SHORT |
| R6B11 | 2.7 (1/4W) | SHORT | SHORT |
| R6B12 | 2.7 (1/4W) | SHORT | SHORT |
| R6B13 | 2.7 (1/4W) | SHORT | SHORT |
| R6B14 | 2.7 (1/4W) | SHORT | SHORT |
| R6B15 | 2.7 (1/4W) | SHORT | SHORT |
| R6B16 | 2.7 (1/4W) | SHORT | SHORT |
| R6B17 | 2.7 (1/4W) | SHORT | SHORT |
| R6B18 | 2.7 (1/4W) | SHORT | SHORT |
| R6B19 | 2.7 (1/4W) | SHORT | SHORT |
| R6B20 | 2.7 (1/4W) | SHORT | SHORT |
| R6B21 | 2.7 (1/4W) | SHORT | SHORT |
| R6B22 | 2.7 (1/4W) | SHORT | SHORT |
| R6B23 | 2.7 (1/4W) | SHORT | SHORT |
| R6B24 | 2.7 (1/4W) | SHORT | SHORT |
| R6B25 | 2.7 (1/4W) | SHORT | SHORT |
| R6B26 | 2.7 (1/4W) | SHORT | SHORT |
| R6B27 | 2.7 (1/4W) | SHORT | SHORT |
| R6B28 | 2.7 (1/4W) | SHORT | SHORT |
| R6B29 | 2.7 (1/4W) | SHORT | SHORT |
| R6B30 | 2.7 (1/4W) | SHORT | SHORT |
| R6B31 | 2.7 (1/4W) | SHORT | SHORT |
| R6B32 | 2.7 (1/4W) | SHORT | SHORT |
| R6B33 | 2.7 (1/4W) | SHORT | SHORT |
| R6B34 | 2.7 (1/4W) | SHORT | SHORT |
| R6B35 | 2.7 (1/4W) | SHORT | SHORT |
| R6B36 | 2.7 (1/4W) | SHORT | SHORT |
| R6B37 | 2.7 (1/4W) | SHORT | SHORT |
| R6B38 | 2.7 (1/4W) | SHORT | SHORT |
| R6B39 | 2.7 (1/4W) | SHORT | SHORT |
| R6B40 | 2.7 (1/4W) | SHORT | SHORT |
| R6B41 | 2.7 (1/4W) | SHORT | SHORT |
| R6B42 | 2.7 (1/4W) | SHORT | SHORT |
| R6B43 | 2.7 (1/4W) | SHORT | SHORT |
| R6B44 | 2.7 (1/4W) | SHORT | SHORT |
| R6B45 | 2.7 (1/4W) | SHORT | SHORT |
| R6B46 | 2.7 (1/4W) | SHORT | SHORT |
| R6B47 | 2.7 (1/4W) | SHORT | SHORT |
| R6B48 | 2.7 (1/4W) | SHORT | SHORT |
| R6B49 | 2.7 (1/4W) | SHORT | SHORT |
| R6B50 | 2.7 (1/4W) | SHORT | SHORT |
| R6B51 | 2.7 (1/4W) | SHORT | SHORT |
| R6B52 | 2.7 (1/4W) | SHORT | SHORT |
| R6B53 | 2.7 (1/4W) | SHORT | SHORT |
| R6B54 | 2.7 (1/4W) | SHORT | SHORT |
| R6B55 | 2.7 (1/4W) | SHORT | SHORT |
| R6B56 | 2.7 (1/4W) | SHORT | SHORT |
| R6B57 | 2.7 (1/4W) | SHORT | SHORT |
| R6B58 | 2.7 (1/4W) | SHORT | SHORT |
| R6B59 | 2.7 (1/4W) | SHORT | SHORT |
| R6B60 | 2.7 (1/4W) | SHORT | SHORT |
| R6B61 | 2.7 (1/4W) | SHORT | SHORT |
| R6B62 | 2.7 (1/4W) | SHORT | SHORT |
| R6B63 | 2.7 (1/4W) | SHORT | SHORT |
| R6B64 | 2.7 (1/4W) | SHORT | SHORT |
| R6B65 | 2.7 (1/4W) | SHORT | SHORT |
| R6B66 | 2.7 (1/4W) | SHORT | SHORT |
| R6B67 | 2.7 (1/4W) | SHORT | SHORT |
| R6B68 | 2.7 (1/4W) | SHORT | SHORT |
| R6B69 | 2.7 (1/4W) | SHORT | SHORT |
| R6B70 | 2.7 (1/4W) | SHORT | SHORT |
| R6B71 | 2.7 (1/4W) | SHORT | SHORT |
| R6B72 | 2.7 (1/4W) | SHORT | SHORT |
| R6B73 | 2.7 (1/4W) | SHORT | SHORT |
| R6B74 | 2.7 (1/4W) | SHORT | SHORT |
| R6B75 | 2.7 (1/4W) | SHORT | SHORT |
| R6B76 | 2.7 (1/4W) | SHORT | SHORT |
| R6B77 | 2.7 (1/4W) | SHORT | SHORT |
| R6B78 | 2.7 (1/4W) | SHORT | SHORT |
| R6B79 | 2.7 (1/4W) | SHORT | SHORT |
| R6B80 | 2.7 (1/4W) | SHORT | SHORT |
| R6B81 | 2.7 (1/4W) | SHORT | SHORT |
| R6B82 | 2.7 (1/4W) | SHORT | SHORT |
| R6B83 | 2.7 (1/4W) | SHORT | SHORT |
| R6B84 | 2.7 (1/4W) | SHORT | SHORT |
| R6B85 | 2.7 (1/4W) | SHORT | SHORT |
| R6B86 | 2.7 (1/4W) | SHORT | SHORT |
| R6B87 | 2.7 (1/4W) | SHORT | SHORT |
| R6B88 | 2.7 (1/4W) | SHORT | SHORT |
| R6B89 | 2.7 (1/4W) | SHORT | SHORT |
| R6B90 | 2.7 (1/4W) | SHORT | SHORT |
| R6B91 | 2.7 (1/4W) | SHORT | SHORT |
| R6B92 | 2.7 (1/4W) | SHORT | SHORT |
| R6B93 | 2.7 (1/4W) | SHORT | SHORT |
| R6B94 | 2.7 (1/4W) | SHORT | SHORT |
| R6B95 | 2.7 (1/4W) | SHORT | SHORT |
| R6B96 | 2.7 (1/4W) | SHORT | SHORT |
| R6B97 | 2.7 (1/4W) | SHORT | SHORT |
| R6B98 | 2.7 (1/4W) | SHORT | SHORT |
| R6B99 | 2.7 (1/4W) | SHORT | SHORT |
| R6B100 | 2.7 (1/4W) | SHORT | SHORT |

FROM CN505 OF ENH-296-4 (SHEET 1/3)

FW506


XL-F3000

Contents

| | |
|---|------|
| <i>Description of Major ICs</i> | 3-2 |
| <i>Internal Connection of Display</i> | 3-8 |
| <i>Disassembly Procedures</i> | 3-9 |
| <i>Flow of Functional Operation Until TOC is Read</i> | 3-12 |
| <i>Self - diagnosis for pickup</i> | 3-14 |
| <i>Block Diagram</i> | 3-16 |
| <i>Printed Circuit Boards</i> | 3-17 |
| <i>Schematic Diagrams</i> | 3-18 |

■ MN171602JJX1 (IC901) : CD SYSTEM CONTROLLER

1. Terminal Layout

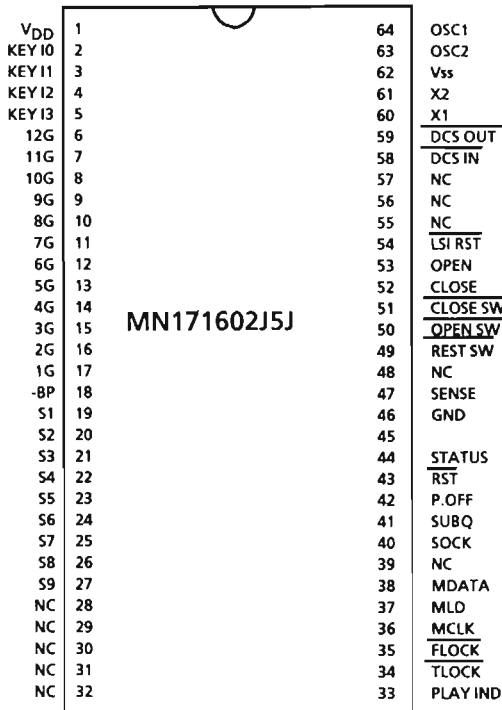

2. Key Matrix

| | KEY I 0 | KEY I 1 | KEY I 2 | KEY I 3 |
|----|----------------|----------------|---------------|----------|
| G4 | ■/CLEAR (S904) | ▶/ (908) | REPEAT (S912) | -- |
| G6 | -- | ▲ (S906) | -- | ⏮ (S914) |
| G7 | -- | PROGRAM (S905) | -- | ⏭ (S913) |

Pin Functions


| Pin NO. | Symbol | I/O | Function | Pin NO. | Symbol | I/O | Function |
|---------|-----------------|-----|------------------------------------|---------|-----------------|-----|--|
| 1 | V _{DD} | -- | +5V | 33 | PLAY IND | O | "PLAY" indicator control signa |
| 2 | KEY I0 | I | Key input | 34 | TLOCK | I | Tracking Lock with "L" |
| 3 | KEY I1 | I | Key input | 35 | FLOCK | I | Focus Lock with "L" |
| 4 | KEY I2 | I | Key input | 36 | MCLK | O | Command Clock Signal |
| 5 | KEY I3 | I | Key input | 37 | MLD | O | Command Load Signal |
| 6 | 12G | O | FL Grid control signal | 38 | MDATA | O | Command Data Signal |
| 7 | 11G | O | FL Grid control signal | 39 | NC | - | Not used |
| 8 | 10G | O | FL Grid control signal | 40 | SOCK | O | External clock for Sub Code Q register |
| 9 | 9G | O | FL Grid control signal | 41 | SUBQ | I | Sub code Q code input |
| 10 | 8G | O | FL Grid control signal | 42 | P.OFF | O | Power off signal output (L:ON,H:OFF) |
| 11 | 7G | O | FL Grid control signal(Key output) | 43 | RST | I | Reset signal input |
| 12 | 6G | O | FL Grid control signal(Key output) | 44 | STATUS | I | Status signal input |
| 13 | 5G | O | FL Grid control signal | 45 | | - | GND |
| 14 | 4G | O | FL Grid control signal(Key output) | 46 | GND | - | GND |
| 15 | 3G | O | FL Grid control signal | 47 | SENSE | I | Sense signal Input |
| 16 | 2G | O | FL Grid control signal | 48 | NC | - | Not used |
| 17 | 1G | O | FL Grid control signal | 49 | RESET SW | I | RESET SW active: low |
| 18 | -BP | I | FL Power | 50 | OPEN SW | I | OPEN SW active: low |
| 19 | S1 | O | FL anode control signal | 51 | CLOSE SW | I | CLOSE SW active: low |
| 20 | S2 | O | FL anode control signal | 52 | CLOSE | O | CLOSE signal output |
| 21 | S3 | O | FL anode control signal | 53 | OPEN | O | OPEN signal output |
| 22 | S4 | O | FL anode control signal | 54 | LSIRST | O | CD reset signal output (L:RESET) |
| 23 | S5 | O | FL anode control signal | 55 | NC | - | Not used |
| 24 | S6 | O | FL anode control signal | 56 | NC | - | Not used |
| 25 | S7 | O | FL anode control signal | 57 | NC | - | Not used |
| 26 | S8 | O | FL anode control signal | 58 | DCS IN | I | Compulink signal Input |
| 27 | S9 | O | FL anode control signal | 59 | DCS OUT | O | Compulink signal output |
| 28 | NC | - | Not used | 60 | X1 | - | Connected to Ground |
| 29 | NC | - | Not used | 61 | X2 | - | Not connection |
| 30 | NC | - | Not used | 62 | V _{SS} | - | GND |
| 31 | NC | - | Not used | 63 | OSC2 | O | Clock oscillation output |
| 32 | NC | - | Not used | 64 | OSC1 | I | Clock oscillation input |

■ AN8806SB (IC501) : RF & SERVO AMP

1. Terminal Layout


| | | | |
|--------|----|----|--------|
| PD | 1 | 36 | PDAC |
| LD | 2 | 35 | PDBD |
| LDON | 3 | 34 | PDE |
| LDP | 4 | 33 | PDF |
| VCC | 5 | 32 | PDER |
| RF- | 6 | 31 | PDFR |
| RF OUT | 7 | 30 | TBAL |
| RF IN | 8 | 29 | FBAL |
| C.AGC | 9 | 28 | FE- |
| ARF | 10 | 27 | FE OUT |
| C.ENV | 11 | 26 | TE- |
| C.EA | 12 | 25 | TE OUT |
| CS BDO | 13 | 24 | CROSS |
| BDO | 14 | 23 | TE BPF |
| CS BRT | 15 | 22 | VDET |
| OFTR | 16 | 21 | LD OFF |
| NRFDET | 17 | 20 | VREF |
| GND | 18 | 19 | ENV |

2. Block Diagram

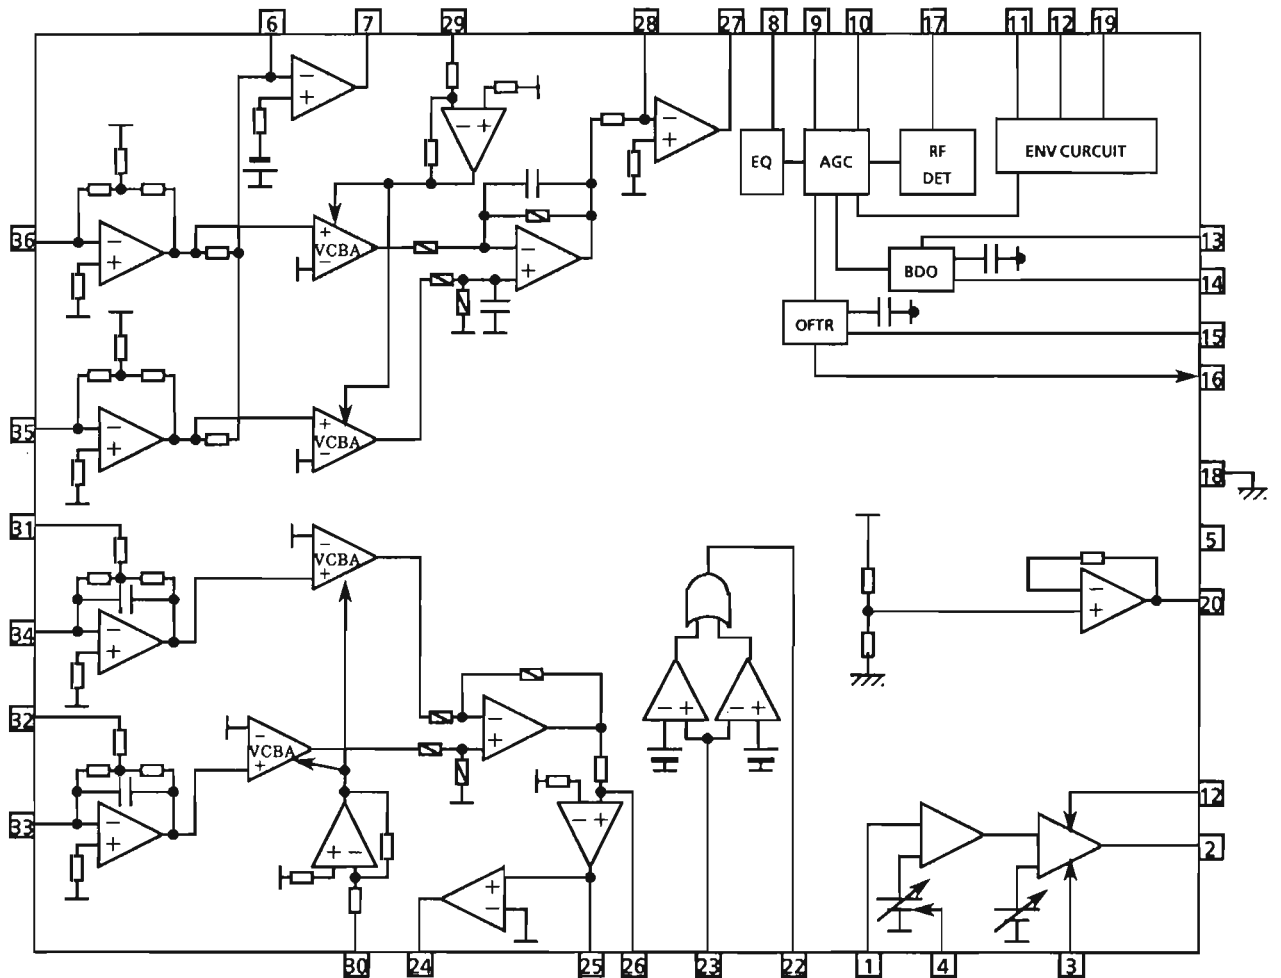


■ MN662720RB (IC401) : DIGITAL SERVO & DIGITAL SIGNAL PROCESSOR

1. Terminal Layout

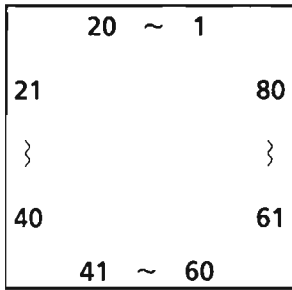

2. Block Diagram

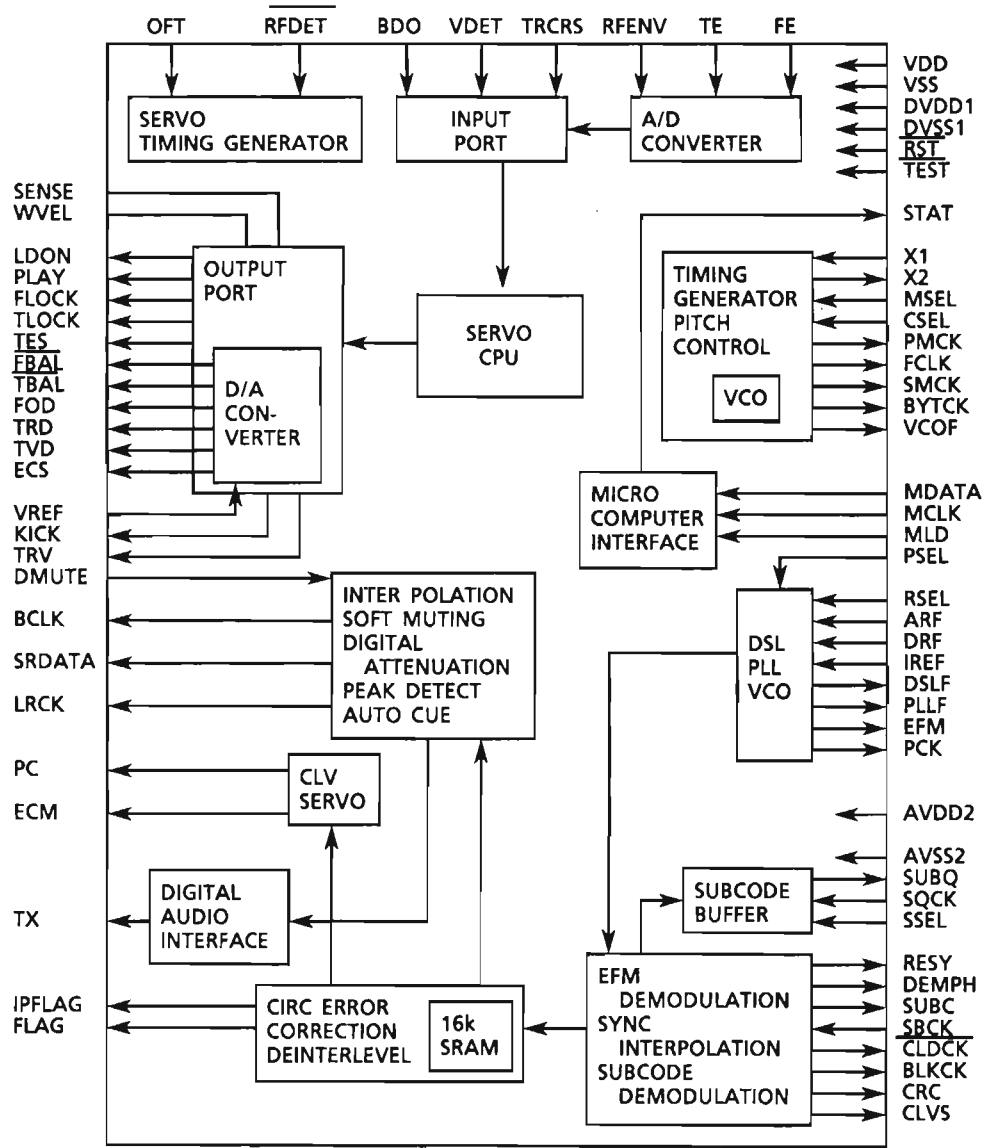

3. Description


| Pin No. | symbol | I/O | Description | Pin No. | symbol | I/O | Description |
|---------|--------------------|-----|---|---------|-------------------|-----|--|
| 1 | BCLK | O | Bit clock output pin for SRDATA | 41 | TES | — | Not used |
| 2 | LRCK | O | L/R distinction signal output | 42 | PLAY | — | " |
| 3 | SRDATA | O | Serial data output | 43 | WVEL | — | " |
| 4 | DVDD1 | — | Power supply(Digital) | 44 | ARF | I | RF signal input |
| 5 | DVSS1 | — | Connected to GND(Digital) | 45 | IREF | I | Reference current input pin |
| 6 | TX | O | Digital audio interface signal | 46 | DRF | I | Bias pin for DSL |
| 7 | MCLK | I | μ -com command clock signal input (Data is latched at signal's rising point) | 47 | DSLIF | I/O | Loop filter pin for DSL |
| 8 | MDATA | I | μ -com command data input | 48 | PLLIF | I/O | Loop filter pin for PLL |
| 9 | MLD | I | μ -com command load signal input | 49 | VCOF | — | Not used |
| 10 | SENSE | O | Sense signal output (OFT,FESL,NACEND,NAJEND,POSAD,SFG) | 50 | AVDD2 | — | Power supply (Analog) |
| 11 | F \overline LOCK | O | Lock signal for Focus L : pull | 51 | AVSS2 | — | Connected to GND(Analog) |
| 12 | T \overline LOCK | O | Lock signal for Tracking L : pull | 52 | EFM | — | Not used |
| 13 | BLKCK | O | Subcode · block · clock signal output | 53 | PCK | — | " |
| 14 | SQCK | I | Outside lock for sub-code Q resister input | 54 | PDO | — | " |
| 15 | SUBQ | O | Sub-code Q-code output | 55 | SUBC | O | Subcode serial output data output |
| 16 | DMUTE | I | Muting input (H : MUTE) | 56 | SBCK | — | Clock input for subcode serial output |
| 17 | STATUS | O | Status signal (CRC,CUE,CLVS,TTSTOP,ECLV,SQOK) | 57 | VSS | — | Connected to GND(for X'tal cscillation circuit) |
| 18 | R \overline ST | I | Reset signal input (L : Reset) | 58 | X1 | I | Input of 16.9344MHz X'tal oscillation circuit |
| 19 | SMCK | — | Not used | 59 | X2 | — | Not used |
| 20 | PMCK | — | Not used | 60 | VDD | — | Power supply(for X'tal cscillation circuit) |
| 21 | TRV | O | Traverse enforced output | 61 | BYTCK | — | Not used |
| 22 | TVD | O | Traverse drive output | 62 | CLDCK | O | Subcode · Frame · Clock signal output |
| 23 | PC | — | Not used | 63 | FCLK | O | X'tal frame clock output |
| 24 | ECM | O | Spindle motor drive signal (Enforced mode output) 3-State | 64 | IPPLAG | O | Interpolation flag output H : Interpolation |
| 25 | ECS | O | Spindle motor drive signal (Servo error signal output) | 65 | FLAG | — | Flag output |
| 26 | KICK | O | Kick pulse output | 66 | CLVS | — | Not used |
| 27 | TRD | O | Tracking drive output | 67 | CRC | — | " |
| 28 | FOD | O | Focus drive output | 68 | DEMPH | O | De-emphasis ON signal (H : ON) |
| 29 | VREF | I | Reference voltage input pin for D/A output block(TVD,FOD,FBAL,TBAL) | 69 | RESY | — | Not used |
| 30 | FBAL | O | Focus Balance adjust signal output | 70 | NC1 | — | " |
| 31 | TBAL | O | Tracking Balance adjust signal output | 71 | T \overline EST | — | Pull up (+5V) |
| 32 | FE | I | Focus error signal input(Analog input) | 72 | AVDD1 | — | Power supply (Digital) |
| 33 | TE | I | Tracking error signal input(Analog input) | 73 | NC2 | — | Not used |
| 34 | RFENV | I | RF envelope signal input(Analog input) | 74 | AVSS1 | — | Connected to GND |
| 35 | VDET | I | Vibration detect signal input(H : detect) | 75 | NC3 | — | Not used |
| 36 | OFT | I | Off track signal input(H : off track) | 76 | RSEL | I | Rf signal polarity appointed pin Light level "H" → RSEL = H Light level "L" → RSEL = L |
| 37 | TRCRS | I | Track cross signal input | 77 | CSEL | I | X'tal oscillation frequency appointed pin L : 16.9344MHz H : 33.8688MHz |
| 38 | R \overline FDET | I | RF detect signal input (L : detect) | 78 | PSEL | I | Terminal of Test |
| 39 | BDO | I | BDO input pin (H : drop out) | 79 | MSEL | I | SMCK pin output of frequency select terminal L : SMCK + 4.2336MHZ H : SMCK + 8.4672MHZ |
| 40 | LDON | O | Laser ON signal output (H : on) | 80 | SSEL | — | SUBQ terminal output mode select pin H : Mode for Q code buffer |

■ MN35503 (IC750) : D / A CONVERTER

1. Terminal Layout

| | | | |
|-------|----|----|-------|
| MA | 1 | 28 | RDO |
| DIN | 2 | 27 | MD |
| LRCK | 3 | 26 | MC |
| BCK | 4 | 25 | M3 |
| MB | 5 | 24 | DVDD1 |
| DVDD2 | 6 | 23 | XIN |
| CKO | 7 | 22 | XOUT |
| DVSS2 | 8 | 21 | DVSS1 |
| M1 | 9 | 20 | M2 |
| OUT1C | 10 | 19 | OUT2C |
| NC | 11 | 18 | NC |
| AVDD1 | 12 | 17 | AVDD2 |
| OUT1D | 13 | 16 | OUT2D |
| AVSS1 | 14 | 15 | AVSS2 |


2. Block Diagram

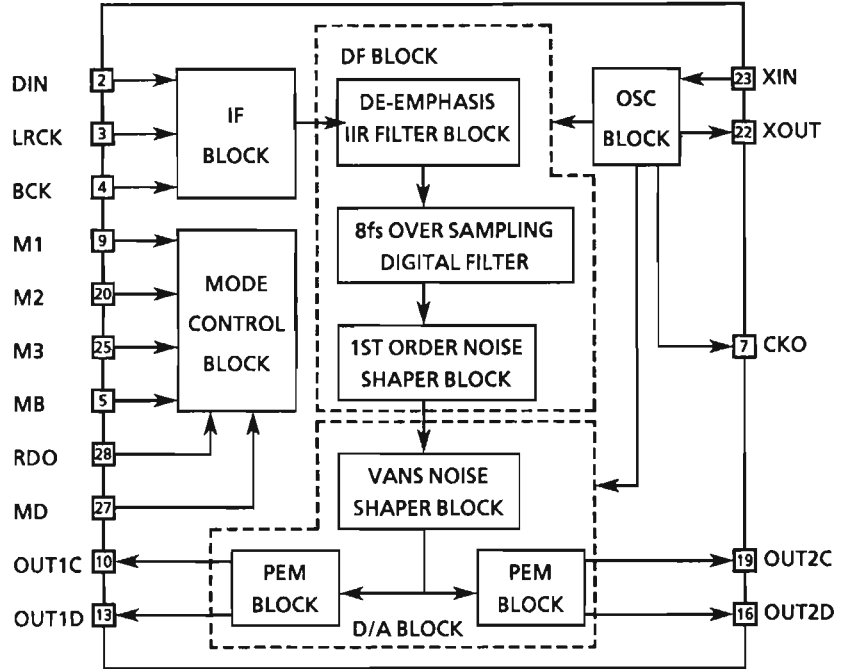


3. Description

| Pin No | Symbol | I/O | Description | Pin No | Symbol | I/O | Description |
|--------|--------|-----|------------------------|--------|--------|-----|--|
| 1 | MA | -- | Connected to ground | 15 | AVSS2 | -- | Analog ground 2 |
| 2 | DIN | I | Data input | 16 | OUT2D | O | 2D PEM output |
| 3 | LRCK | I | LR clock input | 17 | AVDD2 | -- | Analog power supply 2 |
| 4 | BCK | I | Bit clock input | 18 | NC | -- | Non connection |
| 5 | MB | I | De-emphasis ON signal | 19 | OUT2C | O | 2C PEM output |
| 6 | DVDD2 | -- | Digital power supply 2 | 20 | M2 | -- | Connected to ground |
| 7 | CKO | I | Clock output | 21 | DVSS1 | -- | Digital ground pin 1 |
| 8 | DVSS2 | -- | Digital ground 2 | 22 | XOUT | O | Crystal oscillator output |
| 9 | M1 | -- | Connected to ground | 23 | XIN | I | Crystal oscillator input |
| 10 | OUT1C | O | 1C PEM output | 24 | DVDD1 | -- | Digital power supply 1 |
| 11 | NC | -- | Non connection | 25 | M3 | -- | Connected to ground |
| 12 | AVDD1 | -- | Analog power supply 1 | 26 | MC | -- | Connected to ground |
| 13 | OUT1D | O | 1D PEM output | 27 | MD | I | Reset signal / Digital Att. control signal input |
| 14 | AVSS1 | -- | Analog ground 1 | 28 | RDO | -- | Not used |

■ VC4580D (IC751) : Dual OP Amp.

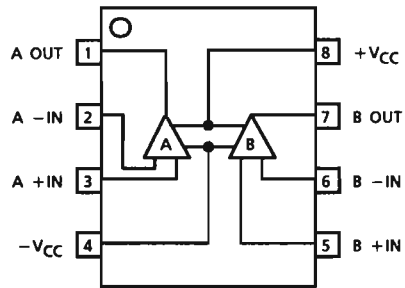

■ MN1281 (P.Q). : IC902 RESET IC


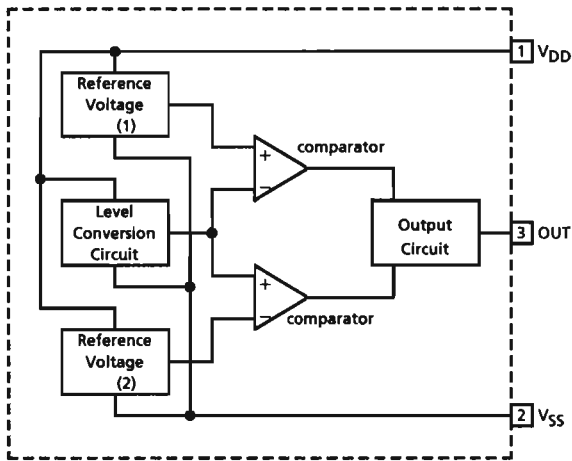


| Pin No. | Pin Name | Functions |
|---------|-----------------|---|
| 1 | V _{DD} | Power supply |
| 2 | V _{SS} | Ground |
| 3 | OUT | Reset signal output : Low level is output when resetting : High level is output when cancelling the reset. |

Internal Connections of FL Display

■ ELU0001-178:(DI901)

1. Grid Layout

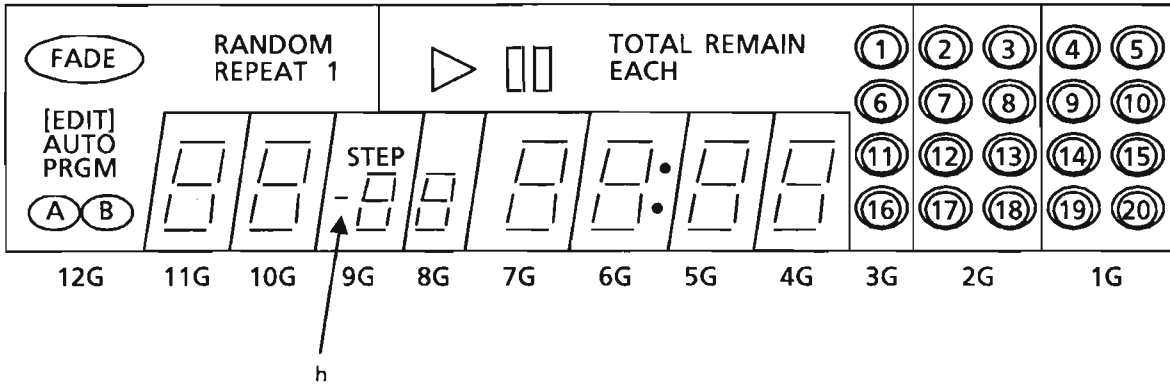

2. Pin Connections

| TERMINAL NO. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 |
|--------------|----|----|----|-----|-----|-----|----|----|----|----|----|----|----|----|----|----|----|----|
| ELECTRODE | F1 | F1 | NP | 12G | 11G | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G | NP | NP | NP |

| TERMINAL NO. | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 |
|--------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| ELECTRODE | NP | NP | NP | NP | NP | NP | NP | S1 | S2 | S3 | S4 | S5 | S6 | S7 | S8 | S9 | NP | F2 | F2 |

(Note) F : Filament G : Grid NP : NoPin NC : No Connection P1~P9 : Anode

3. Anode Designation

| | 12G | 11G | 10G | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G |
|----|--------|------|------|------|------|------|------|------|------|--------|------|------|
| S1 | FADE | a | a | a | a | a | a | a | a | ① | ② | ④ |
| S2 | [EDIT] | b | b | b | b | b | b | b | b | ⑥ | ⑦ | ⑨ |
| S3 | AUTO | c | c | c | c | c | c | c | c | ⑪ | ⑫ | ⑭ |
| S4 | PRGM | d | d | d | d | d | d | d | d | ⑯ | ⑰ | ⑲ |
| S5 | A | e | e | e | e | e | e | e | e | ▶ | ③ | ⑤ |
| S6 | B | f | f | f | f | f | f | f | f | | ⑧ | ⑩ |
| S7 | RANDOM | g | g | g | g | g | g | g | g | TOTAL | ⑬ | ⑮ |
| S8 | REPEAT | ---- | ---- | STEP | ---- | ---- | ●● | ---- | ---- | EACH | ⑱ | ⑳ |
| S9 | 1 | ---- | ---- | (-) | ---- | ---- | ---- | ---- | ---- | REMAIN | ---- | ---- |

Disassembly Procedures

(1) Top cover removal

1. Remove the 4 screws **Ⓜ** on the rear side and 2 screws **Ⓐ** on both sides of the cover.
2. Remove the cover.

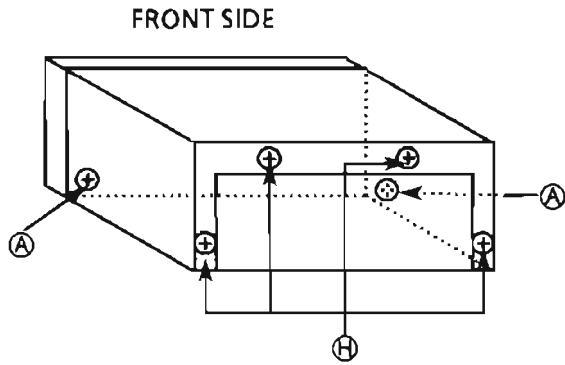


Fig.1

(2) Rear panel removal

1. Remove the top cover.
2. Remove the 2 screws **Ⓑ**. Disconnect the CN601. (Fig.3)
3. Remove the rear panel.

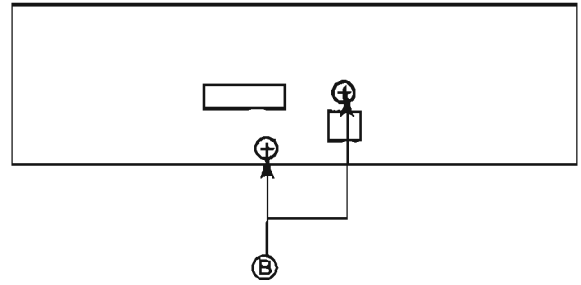


Fig.2

(3) Tray assembly removal

1. Remove the top cover.
2. Remove the a screw **Ⓒ**.
3. Turn the screw located under the mechanism to remove the tray out of the loading mechanism.
4. Remove the tray.

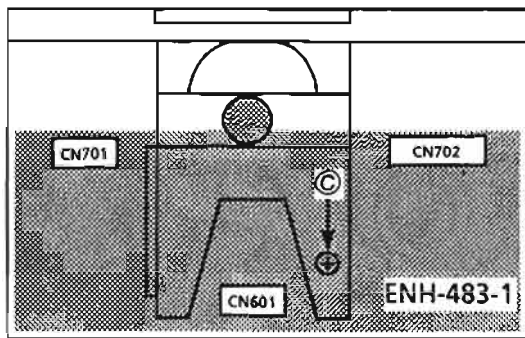


Fig. 3 UP SIDE

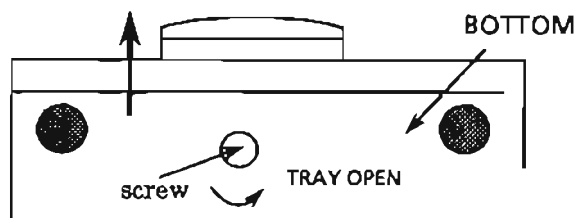


Fig. 4

(4) Front panel assembly removal

1. Remove the top cover and tray assembly.
2. Disconnect the CN701 and CN702. (Fig.3)
3. Remove the 2 screws **Ⓓ**.
4. Release the hooks **Ⓐ** holding the front panel, and remove the front panel assembly.

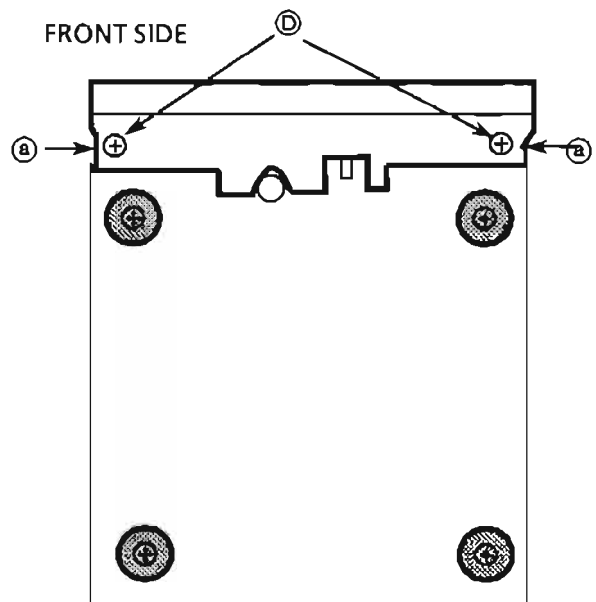


Fig. 5

- Ⓐ .. SDSG3008N Ⓑ ... E73273-003 Ⓒ ... SBSF3008Z Ⓓ ... SDSG3008CC
 Ⓜ .. GBSB3008CC

- (5) CD mechanism assembly removal
1. Remove the top cover and tray assembly.
 2. Remove the 2 screws (C) to remove the clamp assembly.
 3. Remove the 3 screws (E) holding the CD mechanism assembly.
 4. Disconnect the CN102, CN103 and CN104.
 5. Remove it.

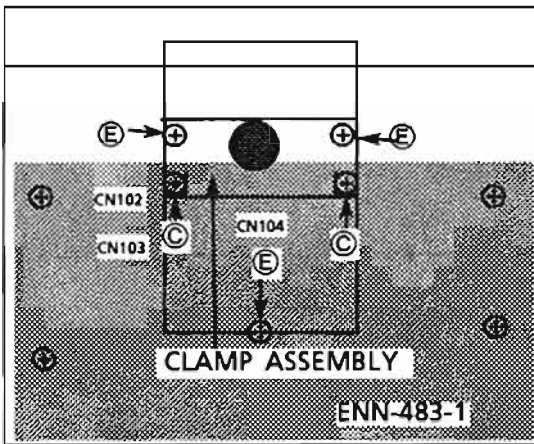


Fig.6

- (6) Main PCB(ENN-483-1) removal
1. Remove the top cover, tray assembly, rear panel and CD mechanism assembly.
 2. Remove the 4 screws (F) holding the Main PCB (ENN-483-1).
 3. Remove it.

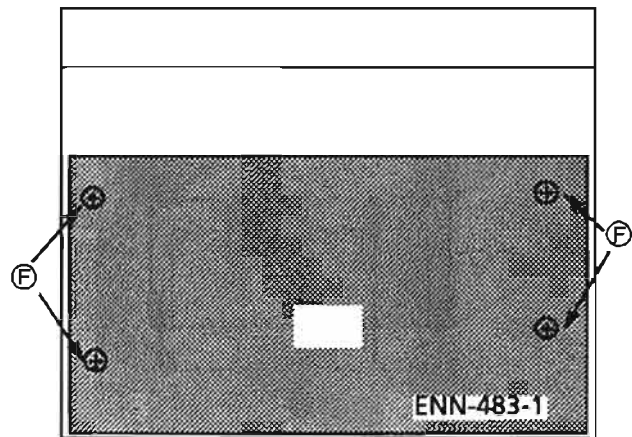


Fig.7

- (7) Front PCB(ENN-483-2) removal
1. Remove the top cover, tray assembly and front panel assembly.
 2. Remove the 5 screw (G).
 3. Remove the Front PCB (ENN-483-2).

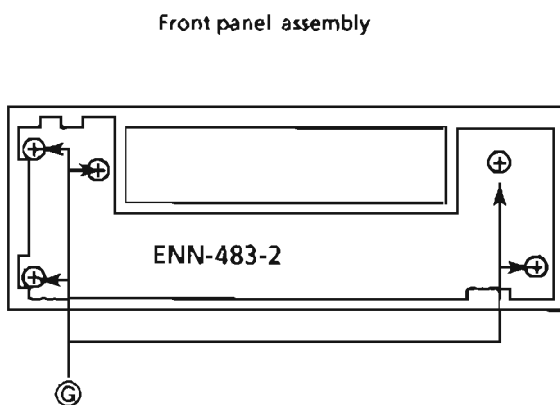


Fig. 8

- (8) Installing the CD tray
1. Insert the CD tray after checking that traverse mechanism assembly is positioned slantingly.
 2. If it is set horizontally, press the cam plate until it stops so that the traverse mechanism assembly slants. (See an arrow in the following figure.)

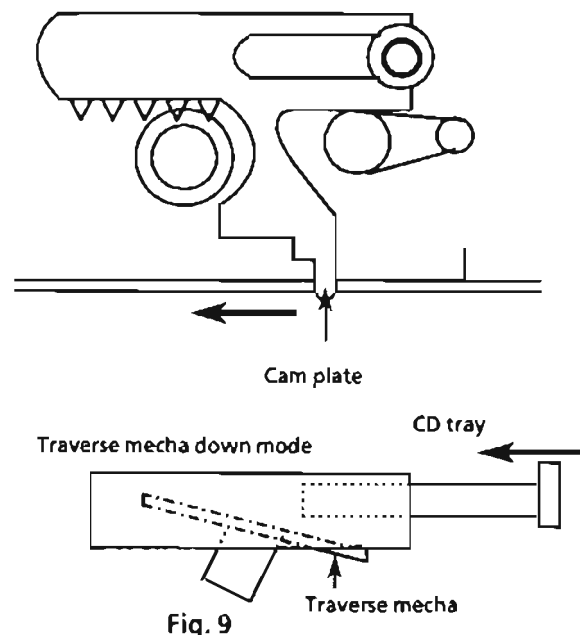


Fig. 9

© ... SBSF3008Z (E) ... SBST3008Z (F) ... SBSG3006CC (G) ... SDSF2608Z

(9) Pickup removal

1. Remove the CD mechanism assembly.
2. Release the shaft to remove the pickup. (Fig 10)

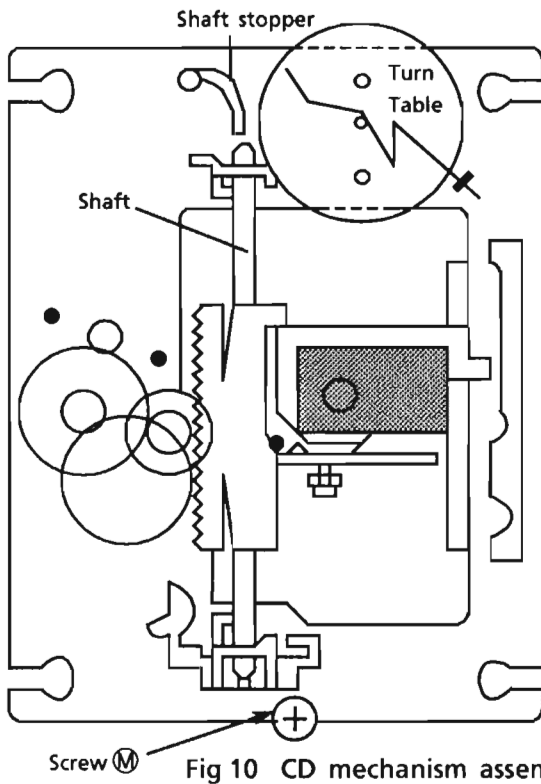


Fig 10 CD mechanism assembly

(10) Spindle motor removal

1. Remove the CD mechanism assembly.
2. Remove the turntable, and remove the two screws (N) retaining the spindle motor.
3. Remove the a screw retaining the spindle and feed motor P.C. Board and unsolder it.

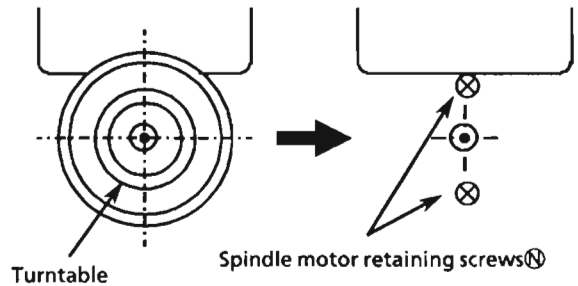


Fig 11

- (12)**After inserting the turntable, bond the motor shaft and turntable together (at the section marked by an arrow in fig 13 on the left below).

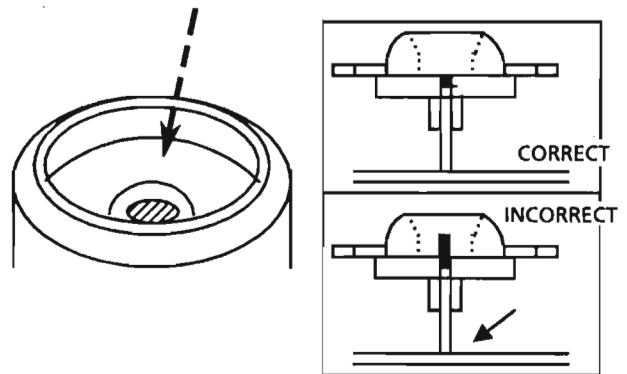


Fig 13

(11) Spindle motor installation

1. Tighten the 2 screws to the same torque.
2. Fasten the spindle and feed motor P.C. board with the screw and solder.
3. Install the turntable. When installing, press straight down at the center of the turntable until the distance from the surface of the mechanism base to the turntable is exactly $19.4 \pm 0.1\text{mm}$.



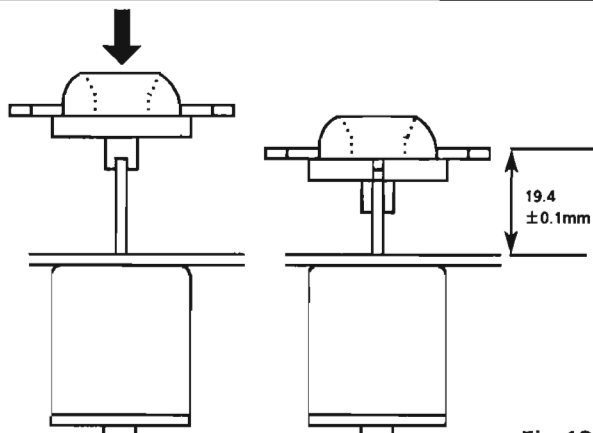


Fig 12

- (13)**Use "LOCKTITE" #460 bonding agent, and apply as little as possible. Take care not to allow any excess bonding agent to get onto the turntable. Be extremely careful not to allow bonding agent to adhere to the motor bearing (the section marked by an allow in fig 13 on the right).

(M) .. E406293-001 (N) ... SDSP2003N

Flow of Functional Operation Until TOC is Read

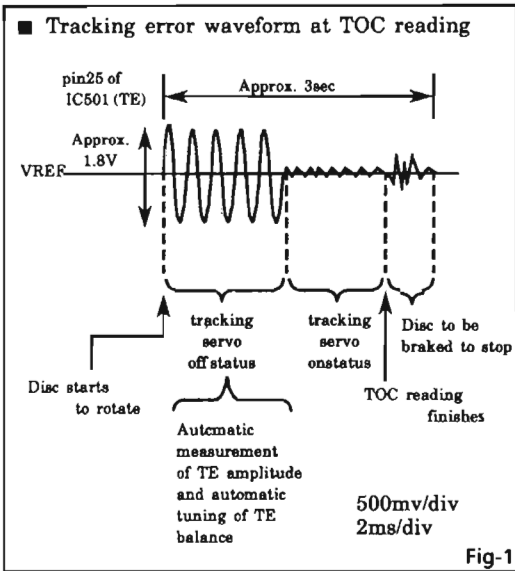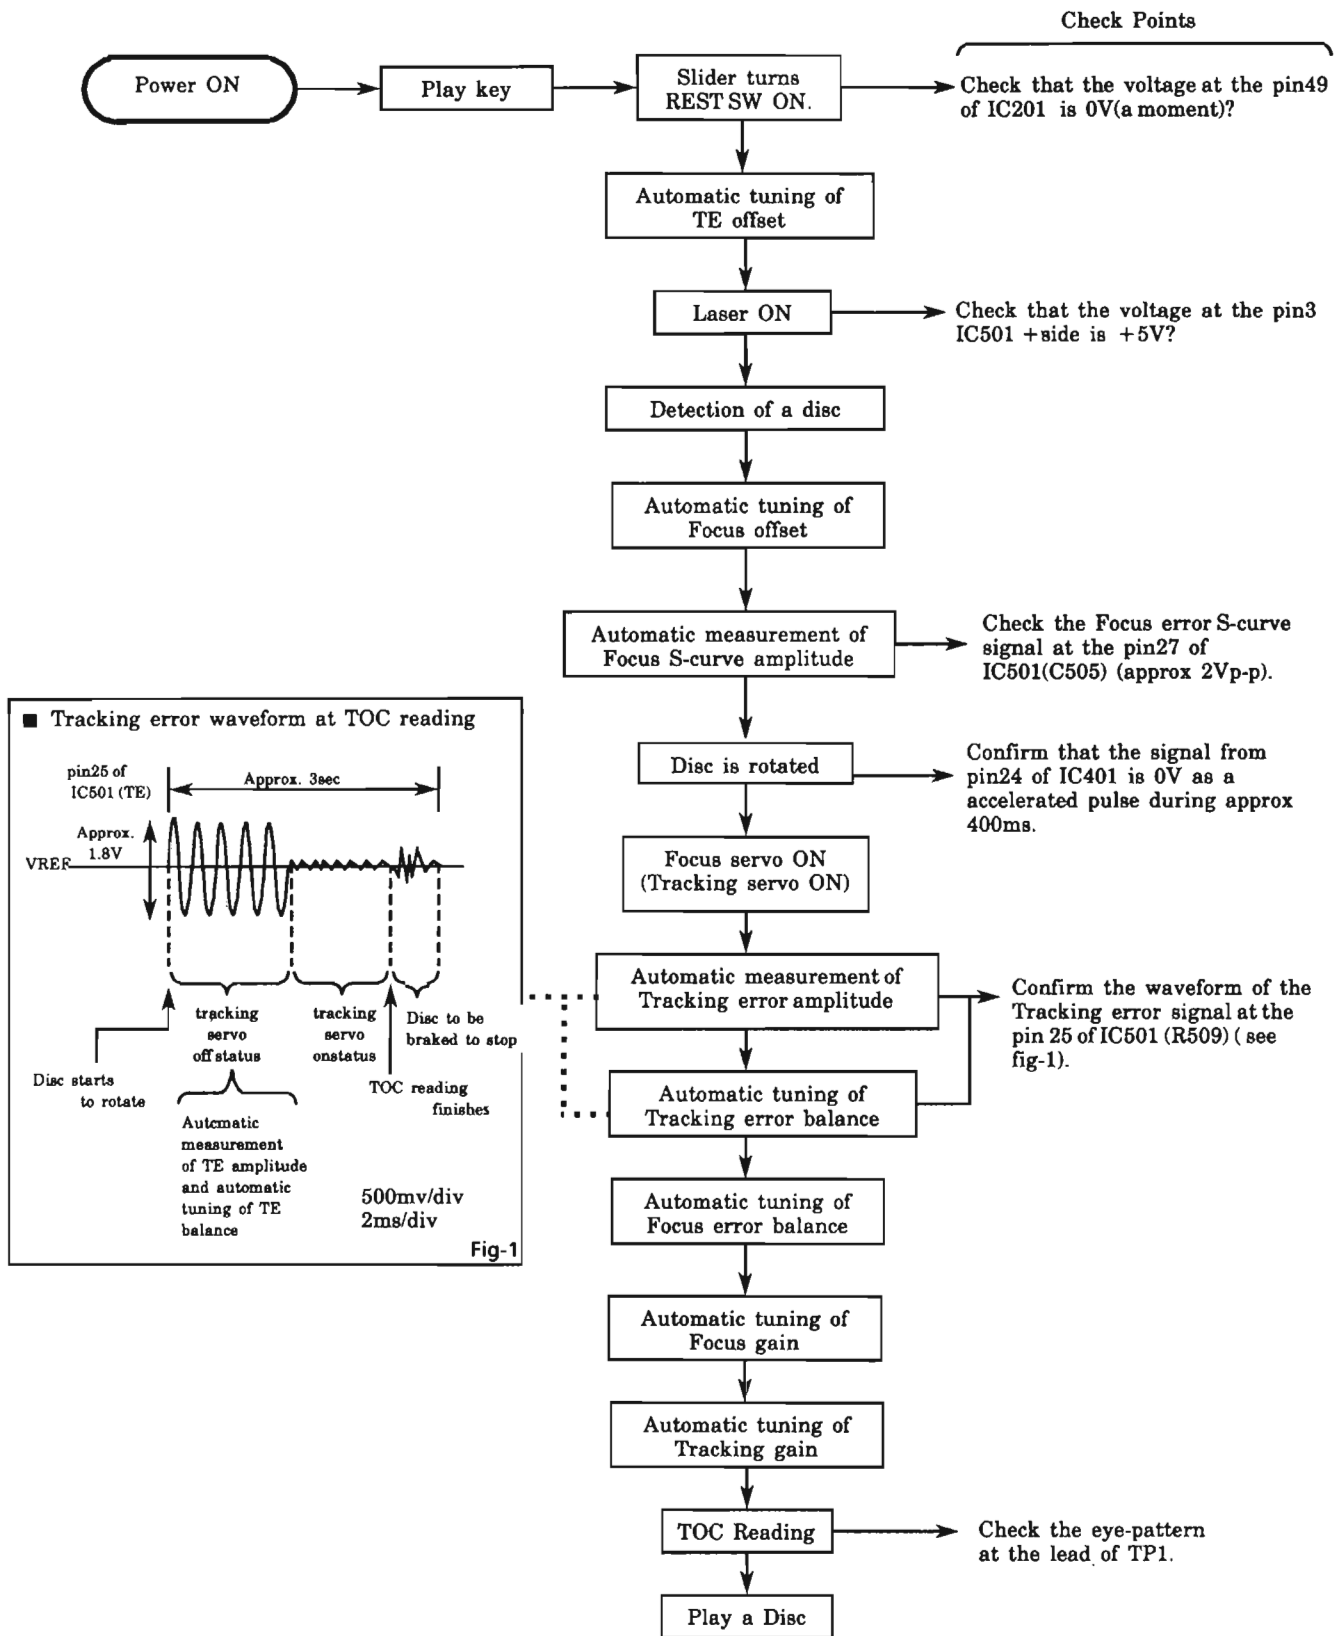

Maintenance of Laser Pickup

(1) Cleaning the pick up lens

Before you replace the pick up, please try to clean the lens with a alcohol soaked cotton swab.

(2) Life of the laser diode (Fig.1)


When the life of the laser diode has expired, the following symptoms will appear.

- (1) The level of RF output (EFM output: amplitude of eye pattern) will be low.
- (2) The drive current required by the laser diode will be increased. In such a case, check the life of the laser diode following the flowchart below.

(3) Measurement of laser diode drive current (Fig.2)



Cut the jump wire (B107) and add a 1Ω resistor. (See the following Fig,2)

Measure the voltage across the resistor (1Ω) with a milli-voltmeter. When the voltage is more than 120mV, it shows that the life of the laser diode has expired.

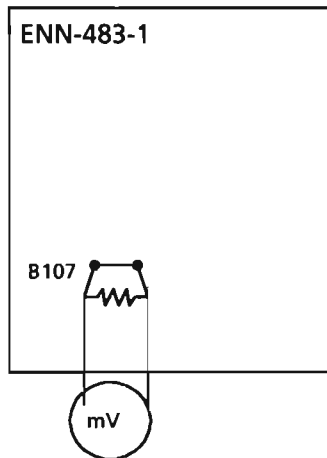

(Fig.2)

Replacement of Laser Pickup

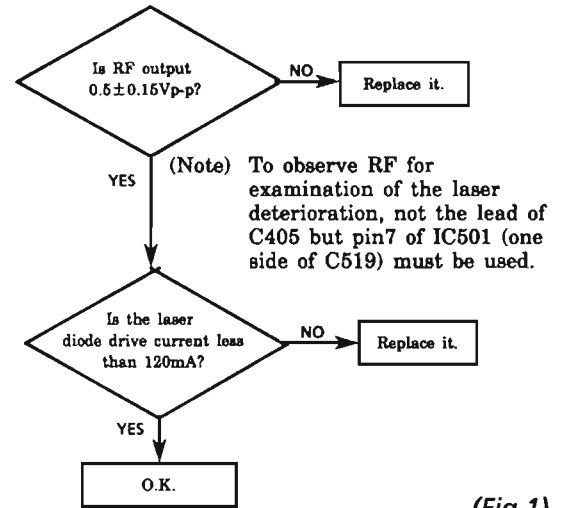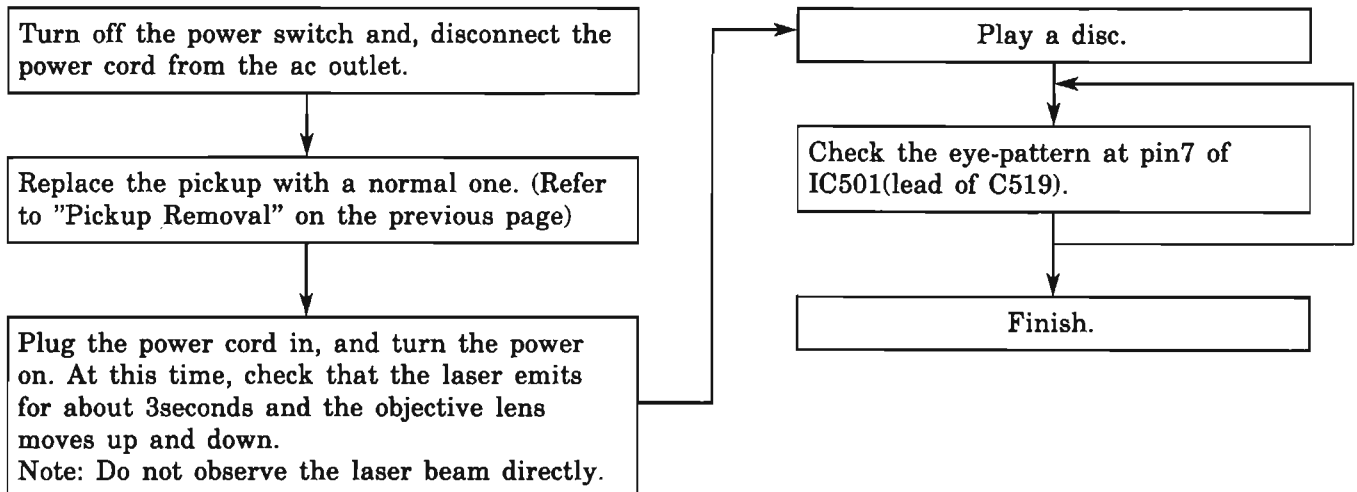

(Fig.1)

(4) Semi-fixed resistor on the APC PC board

The semi-fixed resistor on the APC printed circuit board which is attached to the pickup is used to adjust the laser power. Since this adjustment should be performed to match the characteristics of the whole optical block, do not touch the semi-fixed resistor.

If the laser power is lower than the specified value, the laser diode is almost worn out, and the laser pickup should be replaced.

If the semi-fixed resistor is adjusted while the pickup is functioning normally, the laser pickup may be damaged due to excessive current.


Self-diagnosis for pickup

From DCS output, this model reads automatically adjusted data for CD so that the pickup can be judged defective or not. Following shows its details.

1. Necessary items

- ① DCS → 232C Converting board (No.EBSJ1022)
- ② 232C cord (straight)
- ③ Floppy disc for self-diagnosis (No.EBSJ1022)
- ④ DCS cord
- ⑤ Cord of Power supply (E407992-001)
- ⑥ Power supply DC 6.3V (AA-SV11J--America/Canada) (AA-SV11Bs--the UK)
(AA-SV11G--Germany) (AA-SV11EF--Continental Europe) (AA-SV11U--the
Other aria)
- ⑦ CD (without scratches or damage)

2. Connection

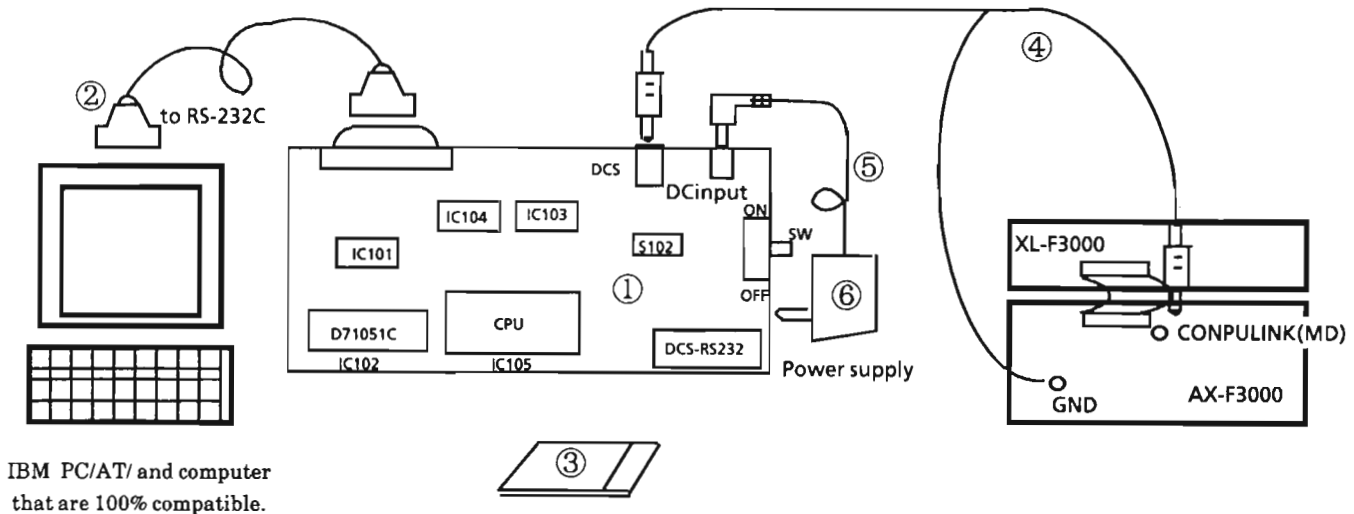

3. Procedure to use CD self-diagnosis jig by IBM PC

Two com pins are frequently adopted in recent IBM AT and its substitute RS232C port.

This jig can also use both COM1 and COM2.

DEFAULT is COM1. Indicate "2" to the option only for COM2.

When COM1 is used,...

I AUTO 01

When COM2 is used,...

I AUTO 02

[NOTE] Press ESC key to stop processing during the operation.

Contents of the attached floppy IBM self-diagnosis program VER.1.00 Execution file.

(Mistake the conection/Mistake the polarity)

4. Judgment

To judge whether pickup is defective or not, firstly process of automatic adjustment is checked by automatic adjustment flag. And, the value(automatic adjustment value for focus gain) displayed on the screen is used for its final judgment.


It is supposed that the pickup is defective or the signal path is faulty if the Flag 1 or Flag 0 indicates not "F" but a figure.

(See the following example.)


| Flag 1 | Flag 0 | Details | Supposed cause |
|--------|--------|---|---|
| 0 | 0 | Automatic adjustment for tracking offset is failed. | The automatic adjustment is not completed. (Trouble in circuit.) |
| 0 | 1 | Automatic adjustment for focus offset is failed. (Disc does not rotate.) | The lens does not move. (Power supply is not turned on. Wire is cut.) |
| 0 | 3 | Automatic rough adjustment for focus gain is failed. | |
| 0 | 7 | Automatic rough adjustment for tracking gain is failed. (The focus and tracking gain are not locked though the disc rotates.) | Laser deterioration (low RF signal output). Offset beam. |
| 0 | F | Disc rotates, focus and tracking gain are locked and automatic rough adjustment for tracking gain is also completed though automatic adjustment for tracking balance is failed. | Laser deterioration (low RF signal output). Offset beam. |
| 1 | F | Automatic adjustment for focus balance is failed. (TOC is not read though the disc rotates.) | RF signal output is low. Tracking loop is not turned on. RF jitter is too much. |
| 3 | F | Automatic rough adjustment for focus gain is failed. | |
| 7 | F | Automatic rough adjustment for tracking gain is failed. | |
| F | F | All automatic adjustments are completed. | |

The pickup is judged defective though the Flag 0 and Flag 1 indicate "F" and those adjustments are completed if the adjustment value exceeds 19dB.


Block Diagram

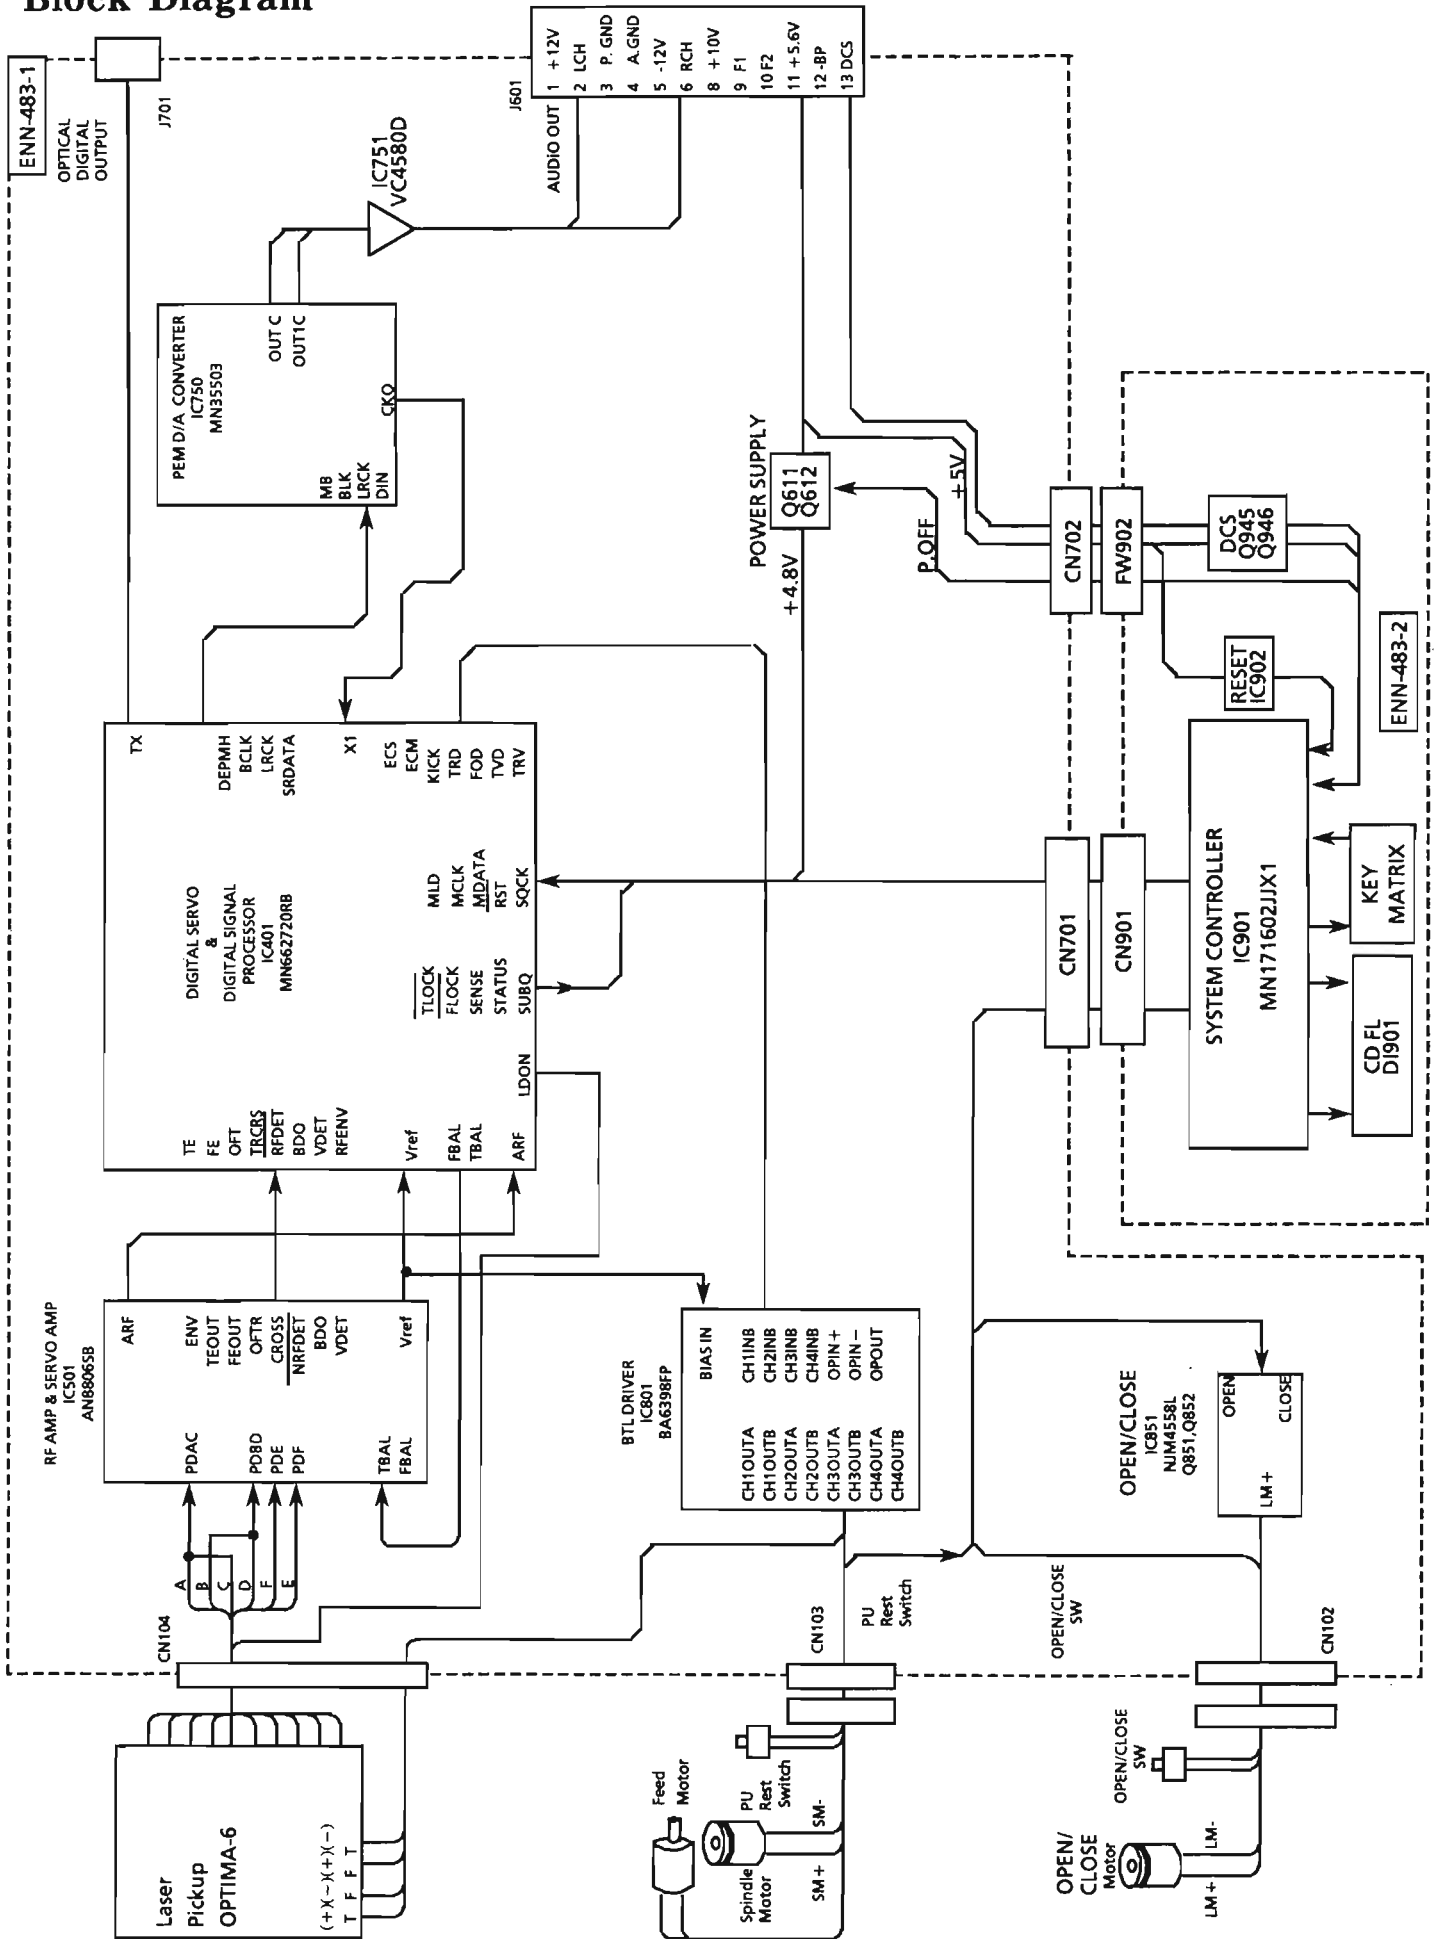

P3-17-a

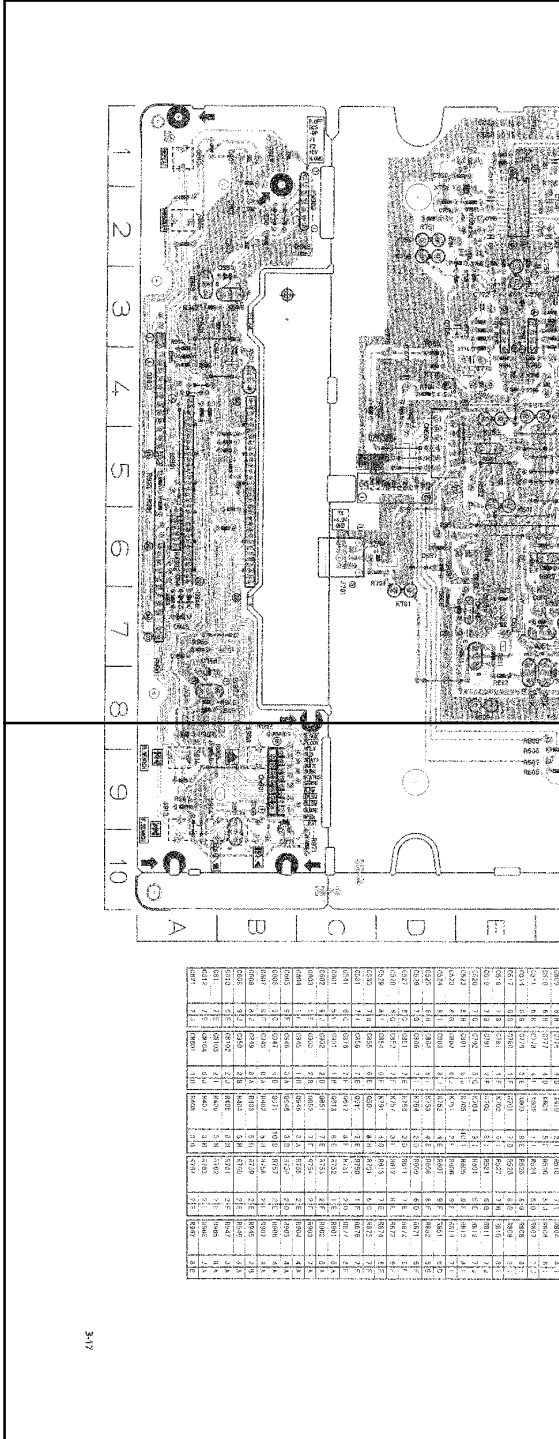

P3-17-b

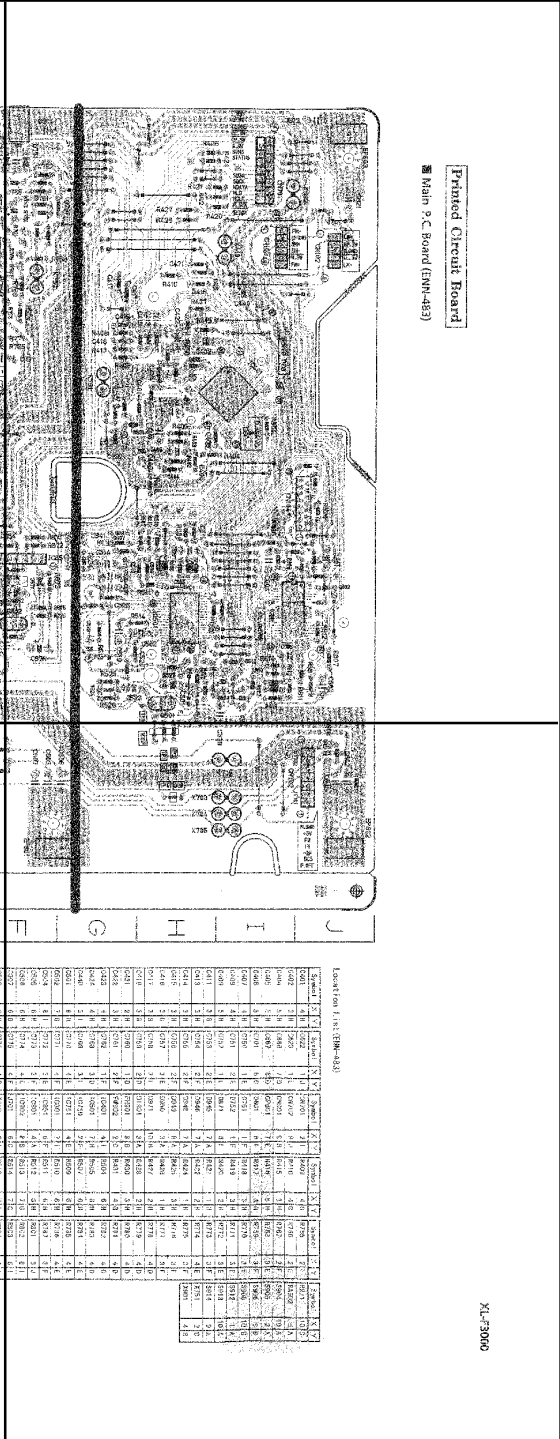


Printed Circuit Board
Main P.C. Board (EMV-483)

Location 1 (1:1) (EMV-483)

| Part No. | QTY | Part No. | QTY | Part No. | QTY | Part No. | QTY | Part No. | QTY | Part No. | QTY | Part No. | QTY | Part No. | QTY |
|----------|-----|----------|-----|----------|-----|----------|-----|----------|-----|----------|-----|----------|-----|----------|-----|
| 0001 | 1 | 0002 | 1 | 0003 | 1 | 0004 | 1 | 0005 | 1 | 0006 | 1 | 0007 | 1 | 0008 | 1 |
| 0009 | 1 | 0010 | 1 | 0011 | 1 | 0012 | 1 | 0013 | 1 | 0014 | 1 | 0015 | 1 | 0016 | 1 |
| 0017 | 1 | 0018 | 1 | 0019 | 1 | 0020 | 1 | 0021 | 1 | 0022 | 1 | 0023 | 1 | 0024 | 1 |
| 0025 | 1 | 0026 | 1 | 0027 | 1 | 0028 | 1 | 0029 | 1 | 0030 | 1 | 0031 | 1 | 0032 | 1 |
| 0033 | 1 | 0034 | 1 | 0035 | 1 | 0036 | 1 | 0037 | 1 | 0038 | 1 | 0039 | 1 | 0040 | 1 |
| 0041 | 1 | 0042 | 1 | 0043 | 1 | 0044 | 1 | 0045 | 1 | 0046 | 1 | 0047 | 1 | 0048 | 1 |
| 0049 | 1 | 0050 | 1 | 0051 | 1 | 0052 | 1 | 0053 | 1 | 0054 | 1 | 0055 | 1 | 0056 | 1 |
| 0057 | 1 | 0058 | 1 | 0059 | 1 | 0060 | 1 | 0061 | 1 | 0062 | 1 | 0063 | 1 | 0064 | 1 |
| 0065 | 1 | 0066 | 1 | 0067 | 1 | 0068 | 1 | 0069 | 1 | 0070 | 1 | 0071 | 1 | 0072 | 1 |
| 0073 | 1 | 0074 | 1 | 0075 | 1 | 0076 | 1 | 0077 | 1 | 0078 | 1 | 0079 | 1 | 0080 | 1 |
| 0081 | 1 | 0082 | 1 | 0083 | 1 | 0084 | 1 | 0085 | 1 | 0086 | 1 | 0087 | 1 | 0088 | 1 |
| 0089 | 1 | 0090 | 1 | 0091 | 1 | 0092 | 1 | 0093 | 1 | 0094 | 1 | 0095 | 1 | 0096 | 1 |
| 0097 | 1 | 0098 | 1 | 0099 | 1 | 0100 | 1 | 0101 | 1 | 0102 | 1 | 0103 | 1 | 0104 | 1 |
| 0105 | 1 | 0106 | 1 | 0107 | 1 | 0108 | 1 | 0109 | 1 | 0110 | 1 | 0111 | 1 | 0112 | 1 |
| 0113 | 1 | 0114 | 1 | 0115 | 1 | 0116 | 1 | 0117 | 1 | 0118 | 1 | 0119 | 1 | 0120 | 1 |
| 0121 | 1 | 0122 | 1 | 0123 | 1 | 0124 | 1 | 0125 | 1 | 0126 | 1 | 0127 | 1 | 0128 | 1 |
| 0129 | 1 | 0130 | 1 | 0131 | 1 | 0132 | 1 | 0133 | 1 | 0134 | 1 | 0135 | 1 | 0136 | 1 |
| 0137 | 1 | 0138 | 1 | 0139 | 1 | 0140 | 1 | 0141 | 1 | 0142 | 1 | 0143 | 1 | 0144 | 1 |
| 0145 | 1 | 0146 | 1 | 0147 | 1 | 0148 | 1 | 0149 | 1 | 0150 | 1 | 0151 | 1 | 0152 | 1 |
| 0153 | 1 | 0154 | 1 | 0155 | 1 | 0156 | 1 | 0157 | 1 | 0158 | 1 | 0159 | 1 | 0160 | 1 |
| 0161 | 1 | 0162 | 1 | 0163 | 1 | 0164 | 1 | 0165 | 1 | 0166 | 1 | 0167 | 1 | 0168 | 1 |
| 0169 | 1 | 0170 | 1 | 0171 | 1 | 0172 | 1 | 0173 | 1 | 0174 | 1 | 0175 | 1 | 0176 | 1 |
| 0177 | 1 | 0178 | 1 | 0179 | 1 | 0180 | 1 | 0181 | 1 | 0182 | 1 | 0183 | 1 | 0184 | 1 |
| 0185 | 1 | 0186 | 1 | 0187 | 1 | 0188 | 1 | 0189 | 1 | 0190 | 1 | 0191 | 1 | 0192 | 1 |
| 0193 | 1 | 0194 | 1 | 0195 | 1 | 0196 | 1 | 0197 | 1 | 0198 | 1 | 0199 | 1 | 0200 | 1 |


P3-17-c


P3-17-d

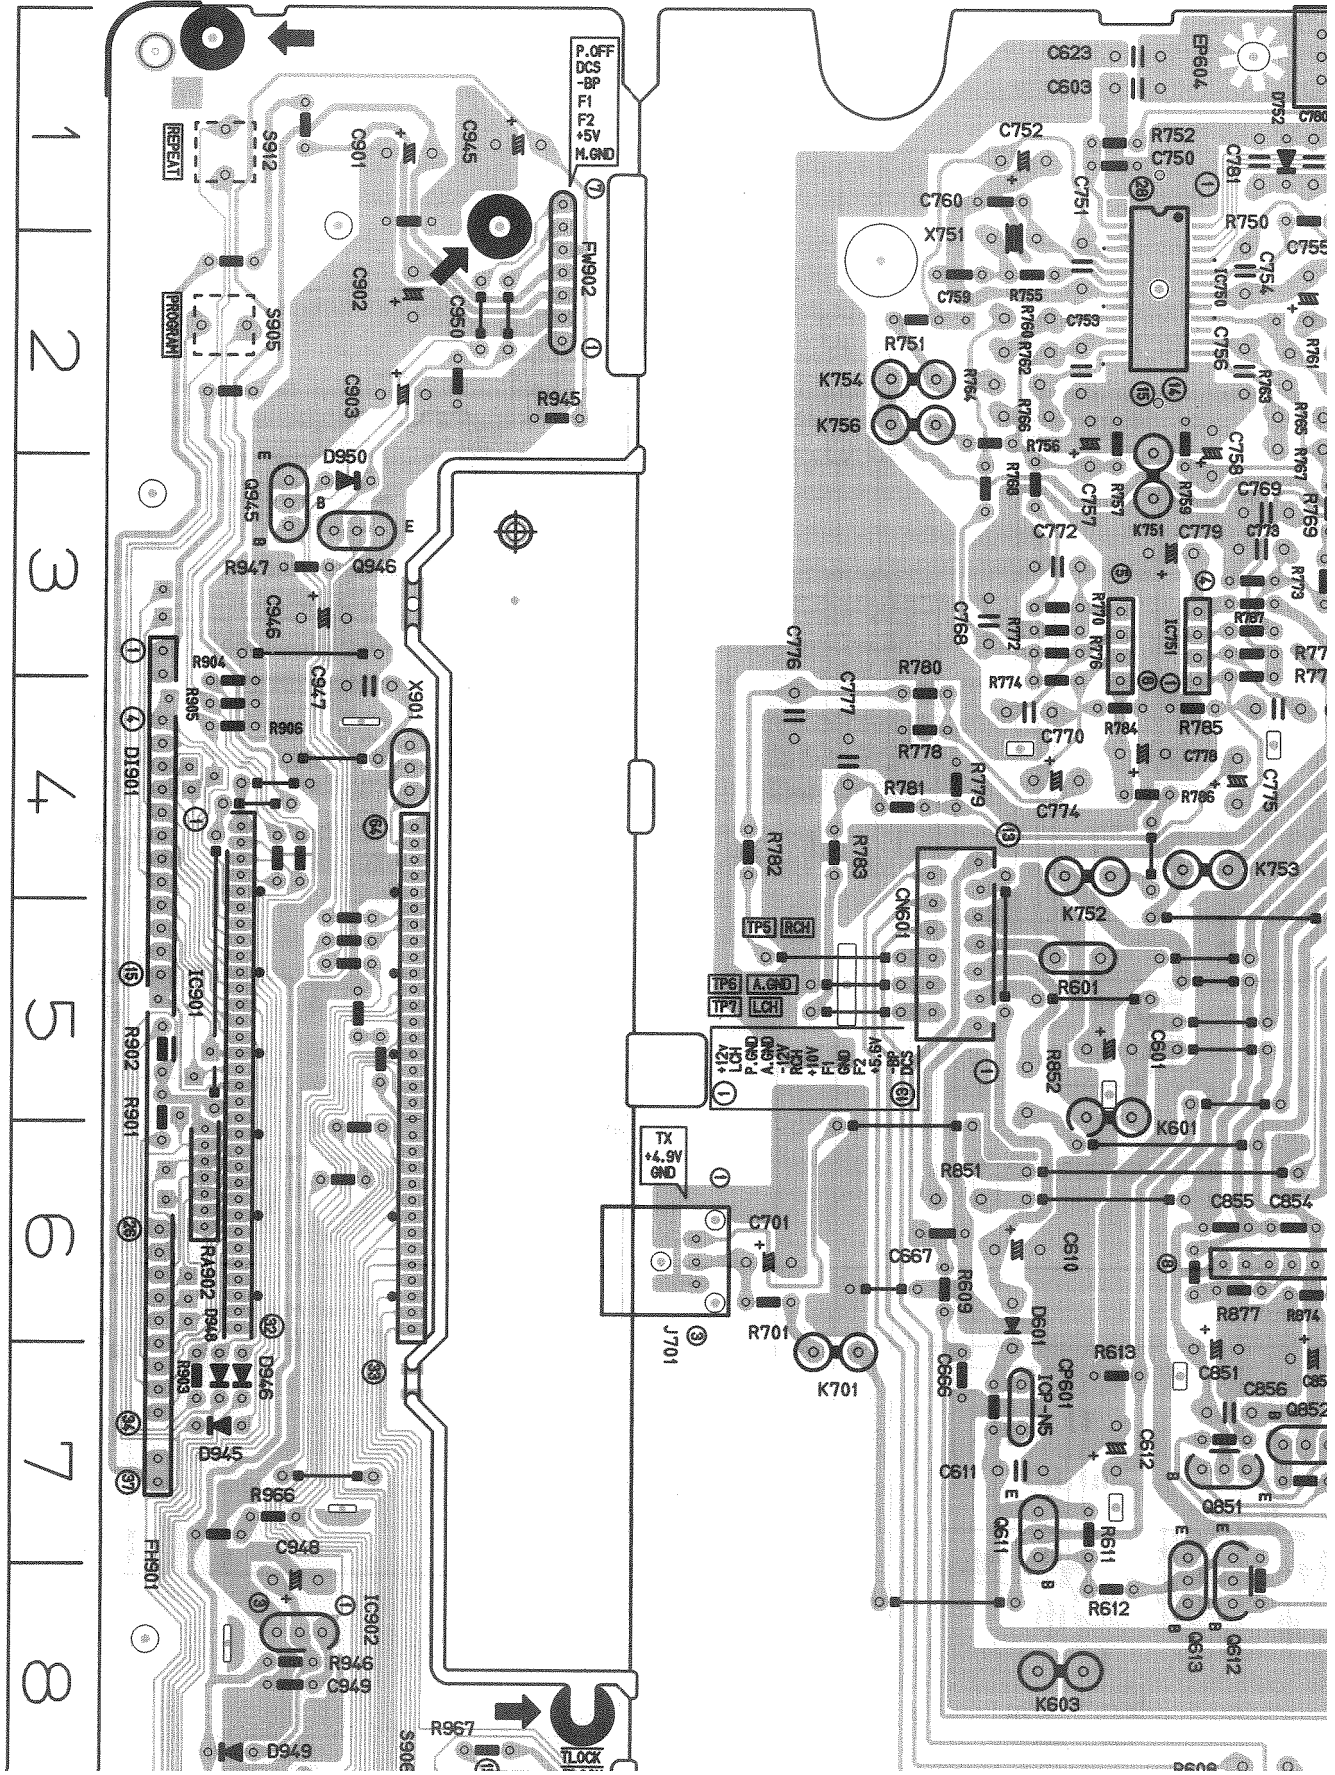


Printed Circuit Board

■ Main P.C. Board (ENN-483)

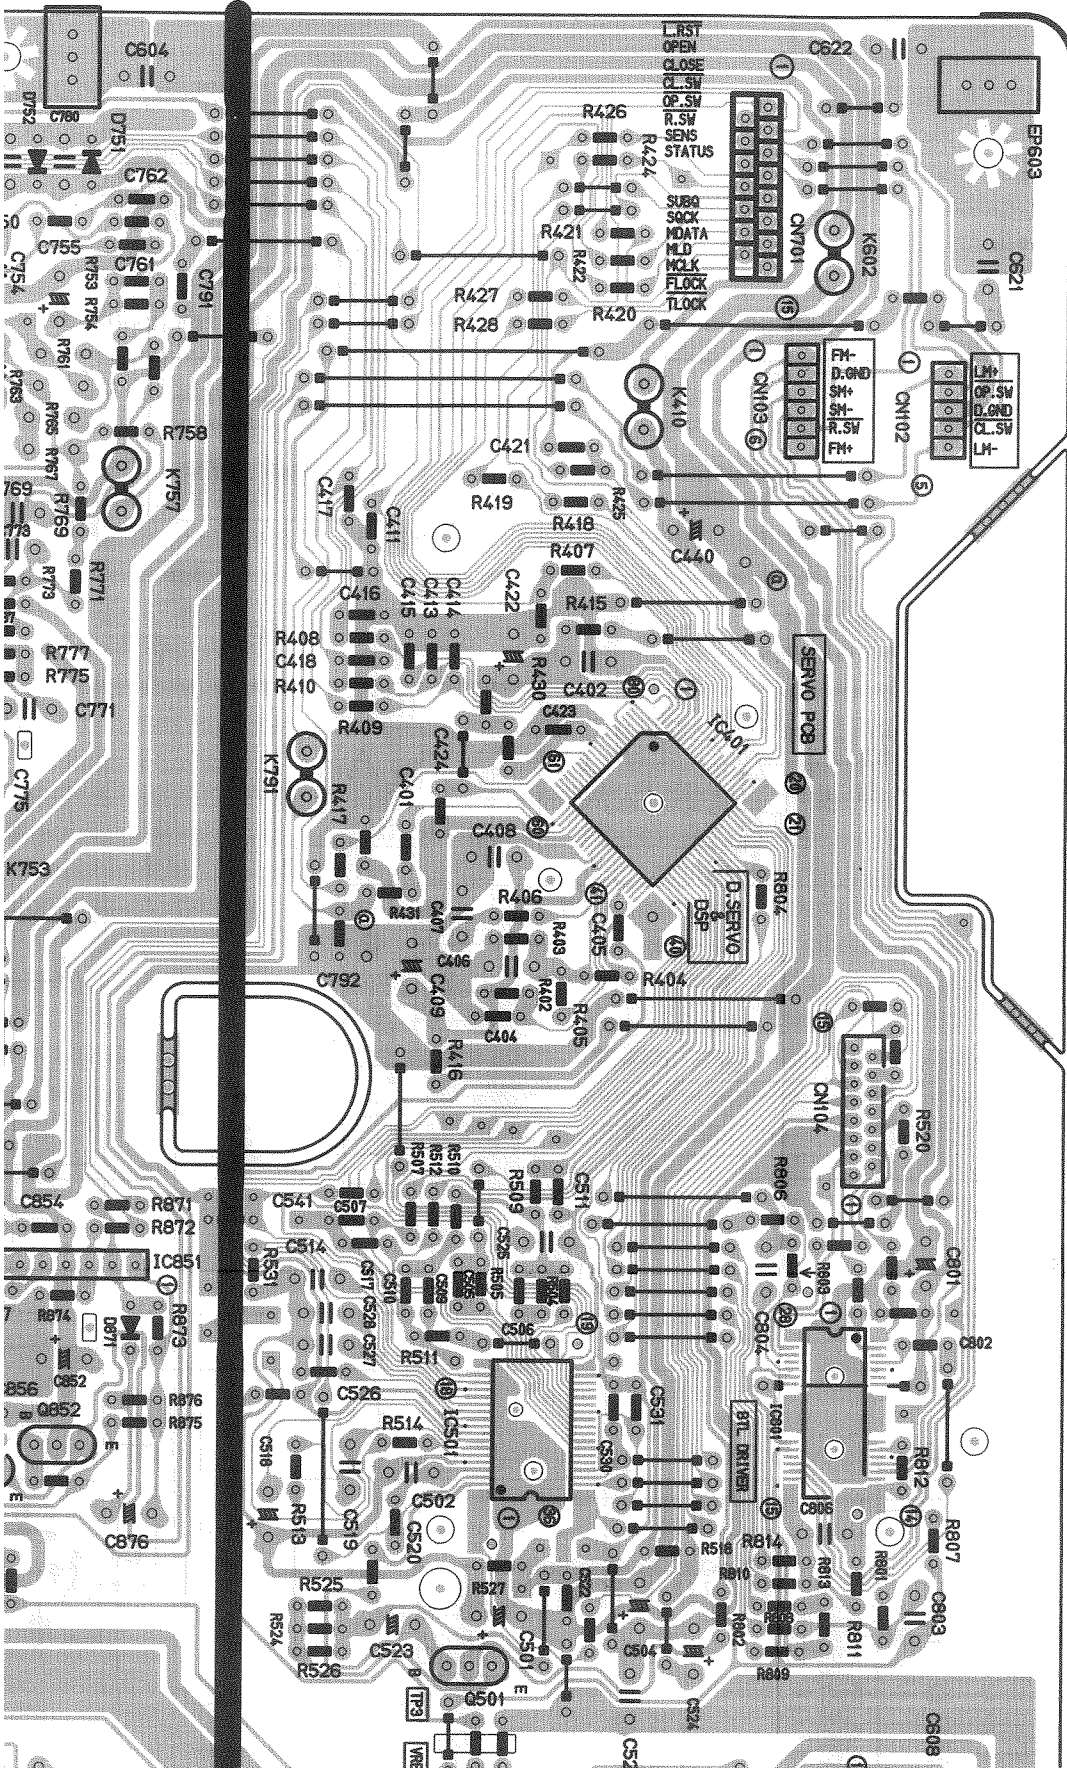

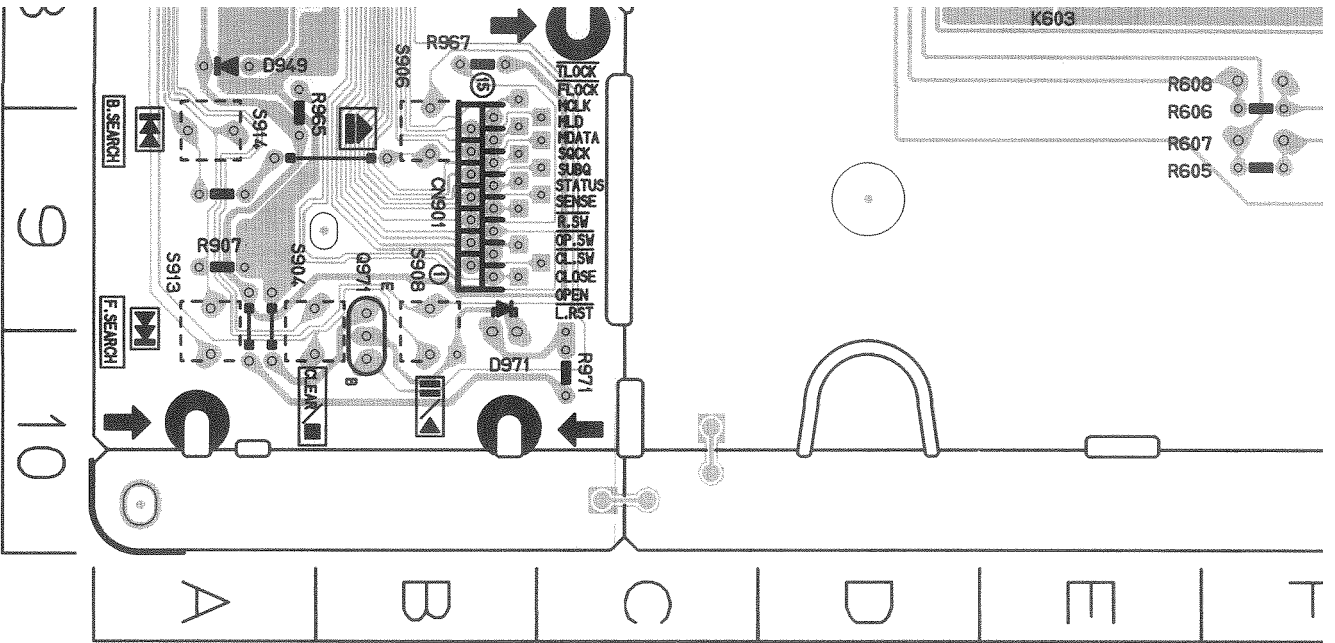

| | | | | | | | | | |
|------|-----|-------|-----|------|------|------|-----|------|-----|
| 0607 | 6 G | C775 | 4 F | J701 | 6 C | R514 | 7 G | R803 | 6 I |
| 0509 | 6 H | C776 | 4 D | K410 | 2 I | R518 | 7 I | R804 | 4 I |
| 0510 | 6 H | C777 | 4 D | K601 | 5 E | R520 | 5 J | R806 | 6 I |
| 0511 | 6 H | C778 | 4 E | K602 | 1 I | R524 | 8 G | R807 | 7 J |
| 0514 | 6 G | C779 | 3 E | K603 | 8 E | R525 | 8 G | R808 | 8 I |
| 0517 | 6 G | C780 | 1 F | K701 | 7 D | R526 | 8 G | R809 | 8 I |
| 0518 | 7 G | C781 | 1 F | K702 | 9 I | R527 | 7 H | R810 | 8 I |
| 0519 | 7 G | C791 | 2 F | K703 | 9 I | R531 | 6 G | R811 | 7 J |
| 0520 | 7 G | C792 | 5 G | K704 | 9 I | R601 | 5 E | R812 | 7 J |
| 0522 | 8 H | C801 | 6 J | K705 | 10 I | R605 | 9 F | R813 | 8 I |
| 0523 | 8 G | C802 | 6 J | K751 | 2 E | R606 | 9 F | R814 | 7 I |
| 0524 | 8 I | C803 | 8 J | K752 | 4 E | R607 | 9 F | R851 | 6 D |
| 0525 | 6 H | C804 | 6 I | K753 | 4 E | R608 | 8 F | R852 | 5 E |
| 0526 | 7 G | C806 | 7 I | K754 | 2 D | R609 | 6 D | R871 | 6 F |
| 0527 | 6 G | C851 | 7 E | K756 | 2 D | R611 | 7 E | R872 | 6 F |
| 0528 | 6 G | C852 | 7 F | K757 | 3 F | R612 | 8 E | R873 | 6 F |
| 0529 | 8 I | C854 | 6 F | K791 | 4 G | R613 | 7 E | R874 | 6 F |
| 0530 | 7 H | C855 | 6 E | Q501 | 8 H | R701 | 6 G | R875 | 7 F |
| 0531 | 7 I | C856 | 7 E | Q611 | 7 E | R750 | 1 F | R876 | 7 F |
| 0541 | 6 G | C876 | 7 F | Q612 | 8 F | R751 | 2 D | R877 | 6 F |
| 0601 | 5 E | C901 | 1 B | Q613 | 8 E | R752 | 1 E | R901 | 5 A |
| 0602 | 9 J | C902 | 2 B | Q851 | 7 E | R753 | 2 F | R902 | 5 A |
| 0603 | 1 E | C903 | 2 B | Q852 | 7 F | R754 | 2 F | R903 | 7 A |
| 0604 | 1 F | C945 | 1 B | Q945 | 3 A | R755 | 2 E | R904 | 4 A |
| 0605 | 9 F | C946 | 3 A | Q946 | 3 B | R756 | 2 D | R905 | 4 A |
| 0606 | 9 G | C947 | 4 B | Q971 | 10 B | R757 | 2 E | R906 | 4 A |
| 0607 | 9 F | C948 | 8 A | R402 | 5 H | R758 | 2 F | R907 | 9 A |
| 0608 | 8 J | C949 | 8 A | R403 | 5 H | R759 | 2 E | R945 | 2 B |
| 0609 | 9 J | C950 | 2 B | R404 | 5 H | R760 | 2 E | R946 | 8 A |
| 0610 | 6 E | CN102 | 2 J | R405 | 5 H | R761 | 2 F | R947 | 3 A |
| 0611 | 7 E | CN103 | 2 I | R406 | 5 H | R762 | 2 E | R965 | 8 A |
| 0612 | 7 E | CN104 | 6 J | R407 | 3 H | R763 | 2 F | R966 | 7 A |
| 0621 | 2 J | CN601 | 4 D | R408 | 3 G | R764 | 2 E | R967 | 8 B |

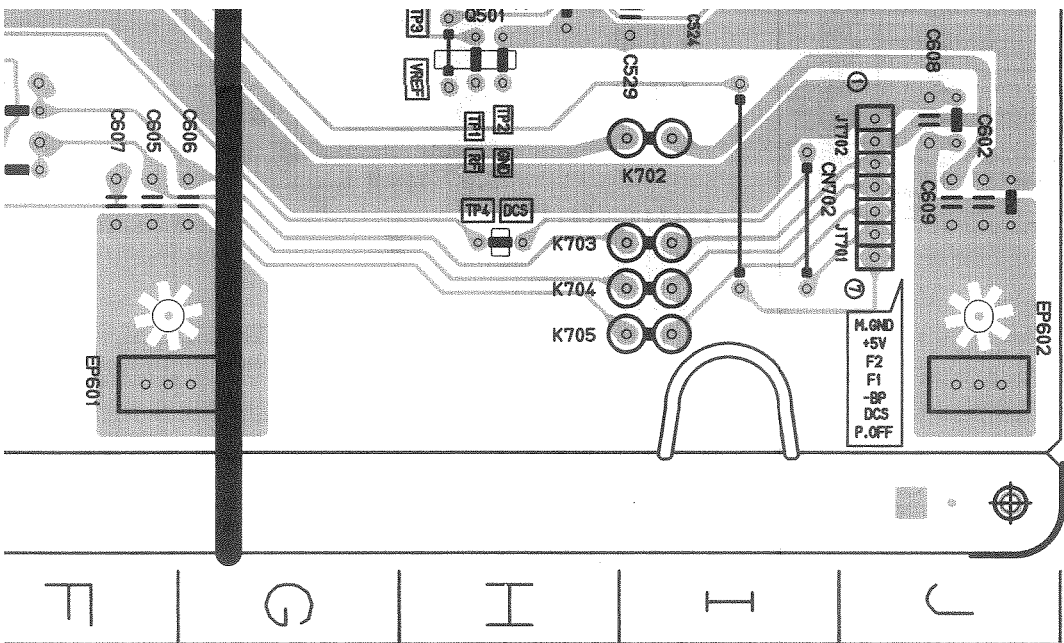


Location List (ENN-483)


| Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y |
|--------|---|---|--------|---|---|--------|----|---|--------|---|---|--------|---|---|
| C401 | 4 | H | C622 | 1 | J | CN701 | 2 | I | R409 | 4 | G | R765 | 2 | F |
| C402 | 3 | H | C623 | 1 | E | CN702 | 9 | J | R410 | 4 | G | R766 | 2 | E |
| C404 | 5 | H | C666 | 7 | D | CN901 | 9 | B | R415 | 3 | H | R767 | 2 | F |
| C405 | 5 | H | C667 | 6 | D | GP601 | 7 | E | R416 | 5 | H | R768 | 3 | E |
| C406 | 5 | H | C701 | 6 | C | D601 | 6 | E | R417 | 4 | G | R769 | 3 | F |
| C407 | 4 | H | C750 | 1 | E | D751 | 1 | F | R418 | 3 | H | R770 | 3 | E |
| C408 | 4 | H | C751 | 2 | E | D752 | 1 | F | R419 | 3 | H | R771 | 3 | F |
| C409 | 5 | H | C752 | 1 | E | D871 | 6 | F | R420 | 2 | H | R772 | 3 | E |
| C411 | 3 | G | C753 | 2 | E | D945 | 7 | A | R421 | 1 | H | R773 | 3 | F |
| C413 | 3 | H | C754 | 2 | F | D946 | 7 | A | R422 | 2 | H | R774 | 4 | E |
| C414 | 3 | H | C755 | 2 | F | D948 | 7 | A | R424 | 1 | H | R775 | 3 | F |
| C415 | 3 | H | C756 | 2 | F | D949 | 8 | A | R425 | 3 | H | R776 | 3 | E |
| C416 | 3 | G | C757 | 3 | E | D950 | 3 | A | R426 | 1 | H | R777 | 3 | F |
| C417 | 3 | G | C758 | 3 | E | D971 | 10 | B | R427 | 2 | H | R778 | 4 | D |
| C418 | 3 | G | C759 | 2 | D | D1901 | 3 | A | R428 | 2 | H | R779 | 4 | D |
| C421 | 2 | H | C760 | 1 | D | FH901 | 8 | B | R430 | 3 | H | R780 | 4 | D |
| C422 | 3 | H | C761 | 2 | F | FW902 | 2 | C | R431 | 4 | G | R781 | 4 | D |
| C423 | 4 | H | C762 | 1 | F | IC401 | 4 | I | R504 | 6 | H | R782 | 4 | C |
| C424 | 4 | H | C768 | 3 | D | IC501 | 7 | H | R505 | 6 | H | R783 | 4 | D |
| C440 | 3 | I | C769 | 3 | F | IC750 | 2 | E | R507 | 6 | H | R784 | 4 | E |
| C501 | 8 | H | C770 | 4 | E | IC751 | 4 | E | R509 | 6 | H | R785 | 4 | E |
| C502 | 7 | G | C771 | 4 | F | IC801 | 7 | I | R510 | 6 | H | R786 | 4 | E |
| C504 | 8 | I | C772 | 3 | E | IC851 | 6 | F | R511 | 6 | H | R787 | 3 | F |
| C505 | 6 | H | C773 | 3 | F | IC901 | 4 | A | R512 | 6 | H | R801 | 8 | J |
| C506 | 6 | H | C774 | 4 | E | IC902 | 8 | B | R513 | 7 | G | R802 | 8 | I |
| C507 | 6 | G | C775 | 4 | F | J701 | 6 | C | R514 | 7 | G | R803 | 6 | I |
| C509 | 6 | H | C776 | 4 | D | K410 | 2 | I | R518 | 7 | I | R804 | 4 | I |

| Symbol | X | Y |
|--------|----|---|
| R971 | 10 | C |
| RA902 | 6 | A |
| S904 | 10 | A |
| S905 | 2 | A |
| S906 | 9 | B |
| S908 | 10 | B |
| S912 | 1 | A |
| S913 | 10 | A |
| S914 | 9 | A |
| X751 | 2 | D |
| X901 | 4 | B |

P3-18-a

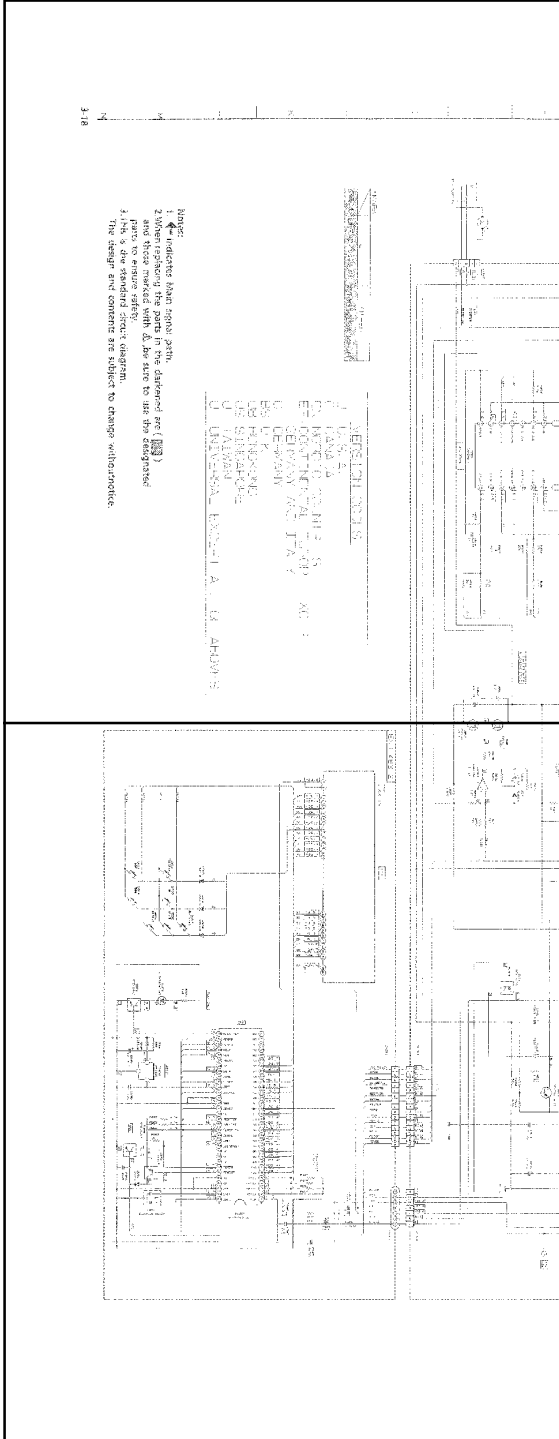


P3-18-b

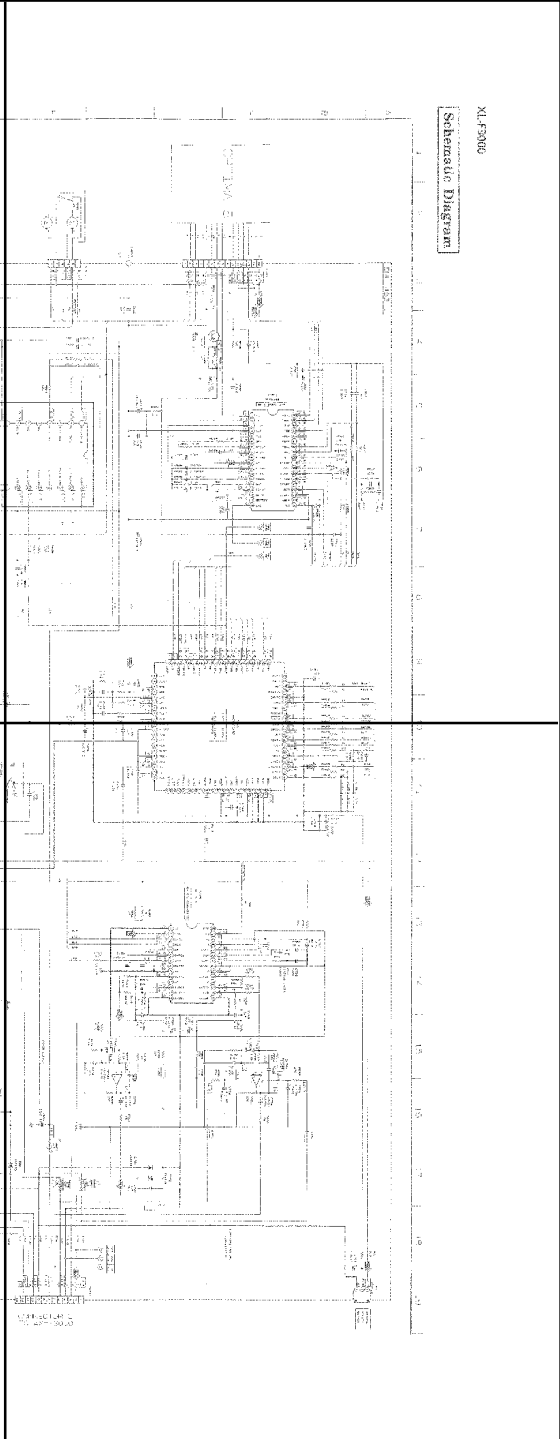


P3-18-c



P3-18-d



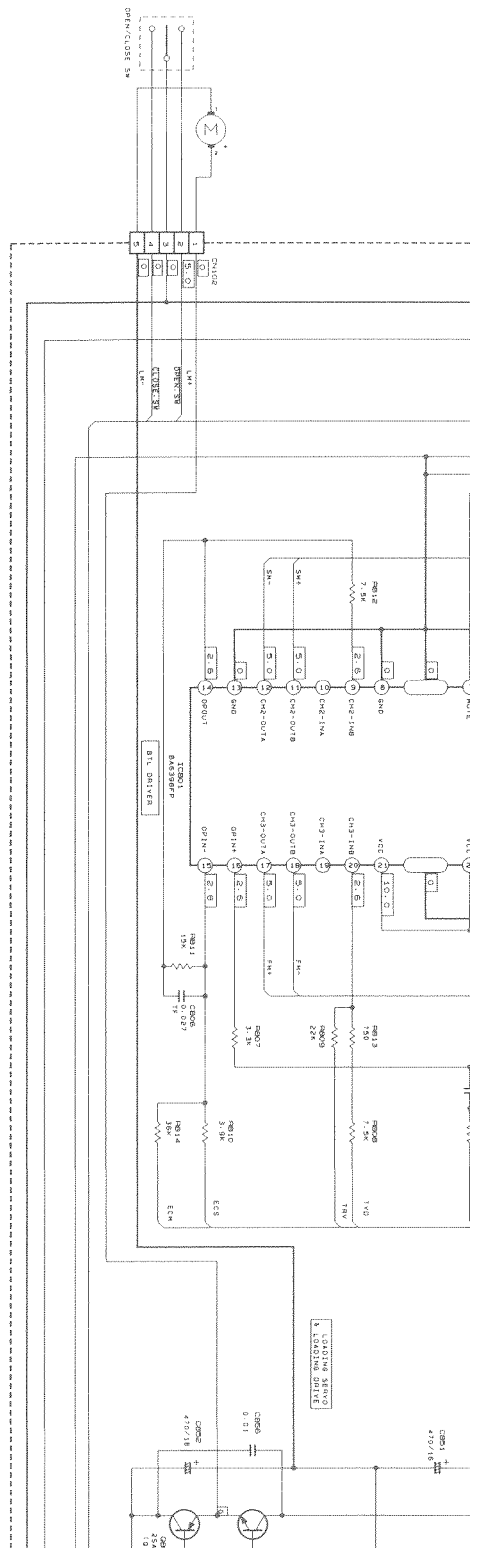



| | | |
|-------|---------------|----------------|
| *MARK | J | OTHER |
| R601 | UNF-C. (1/2W) | PT161625AR4R7M |


| VERSION CODES | |
|---------------|---|
| J | : U.S.A. |
| C | : CANADA |
| EN | : NORDIC COUNTRIES |
| EF | : CONTINENTAL EUROPE EXCEPT GERMANY AND ITALY |
| G | : GERMANY |
| BS | : U.K. |
| UB | : HONGKONG |
| US | : SINGAPORE |
| UT | : TAIWAN |
| U | : UNIVERSAL EXCEPT ALL OF ABOVE |

- Notes:
1. indicates Main signal path.
 2. When replacing the parts in the darkened are () and those marked with , be sure to use the designated parts to ensure safety.
 3. This is the standard circuit diagram. The design and contents are subject to change without notice.

Schematic Diagram

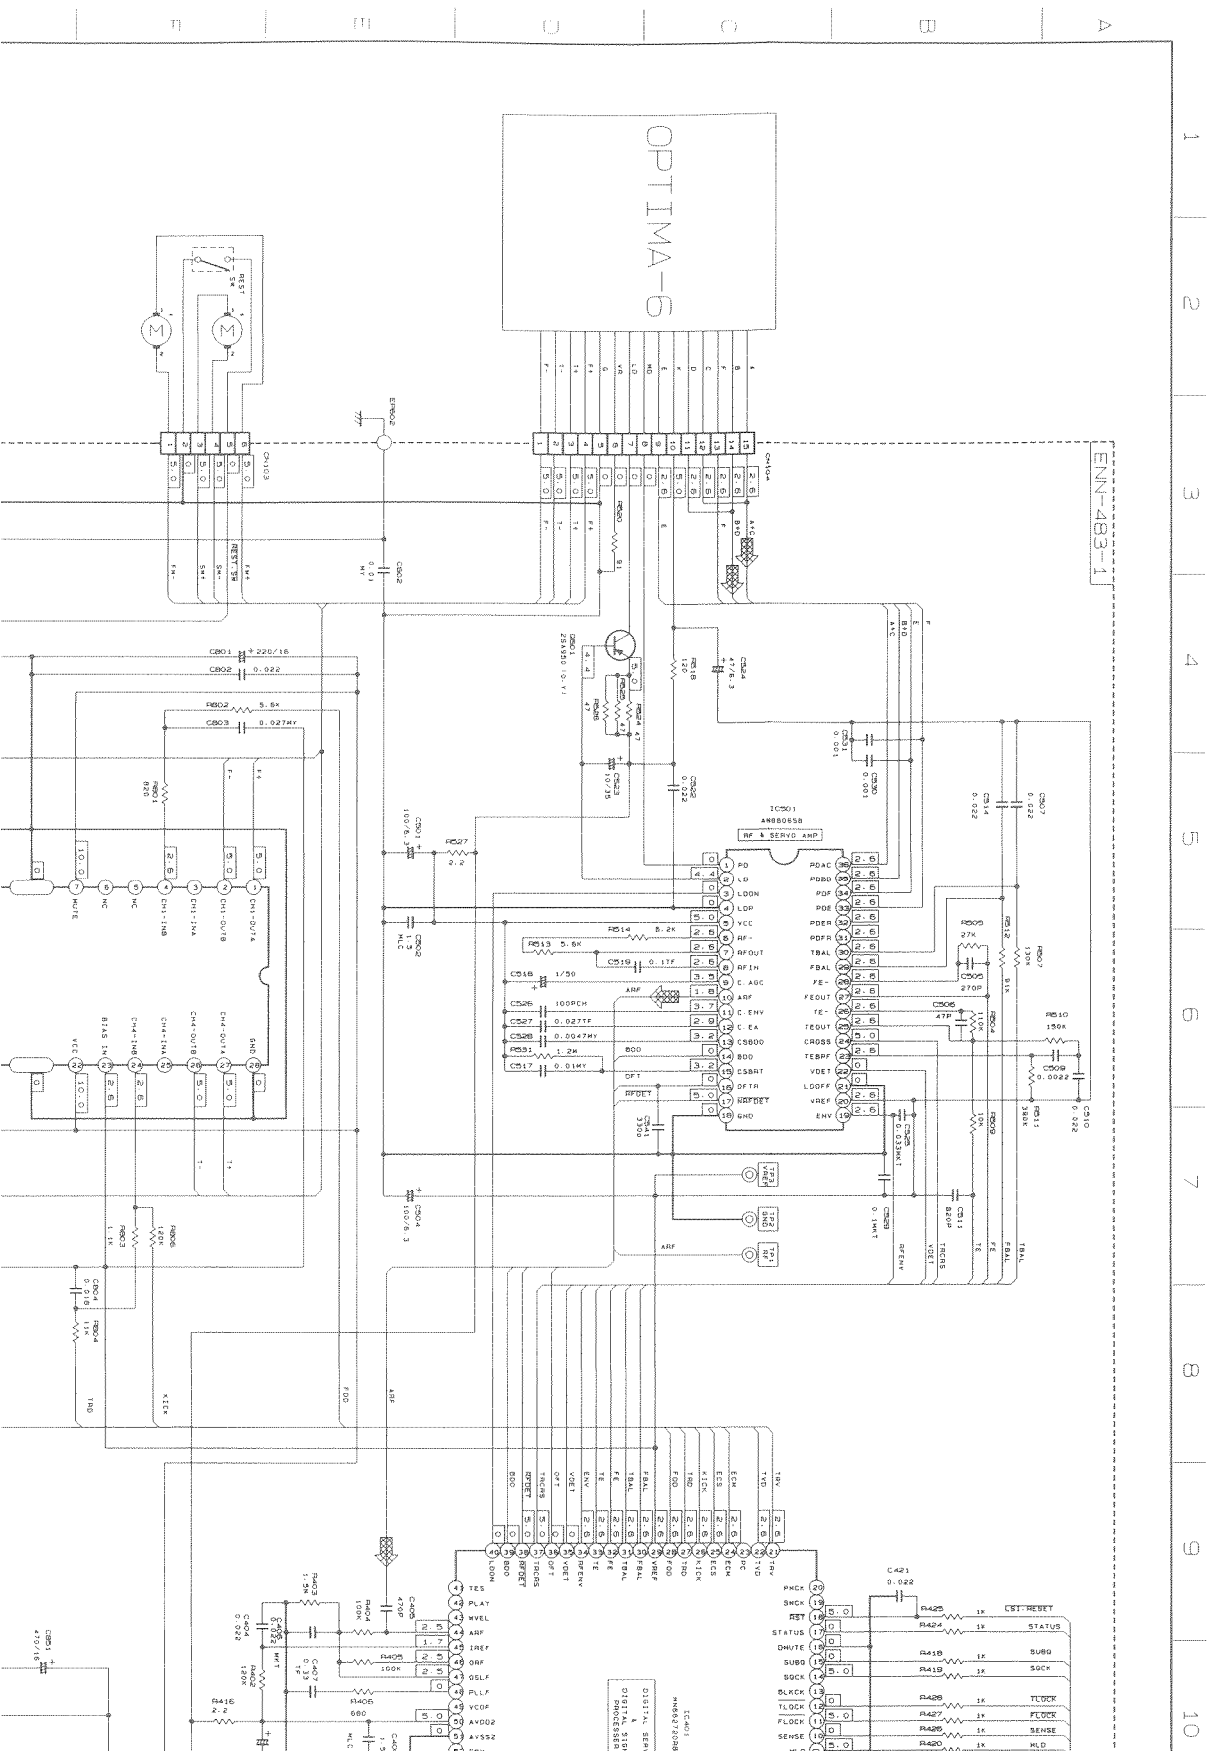

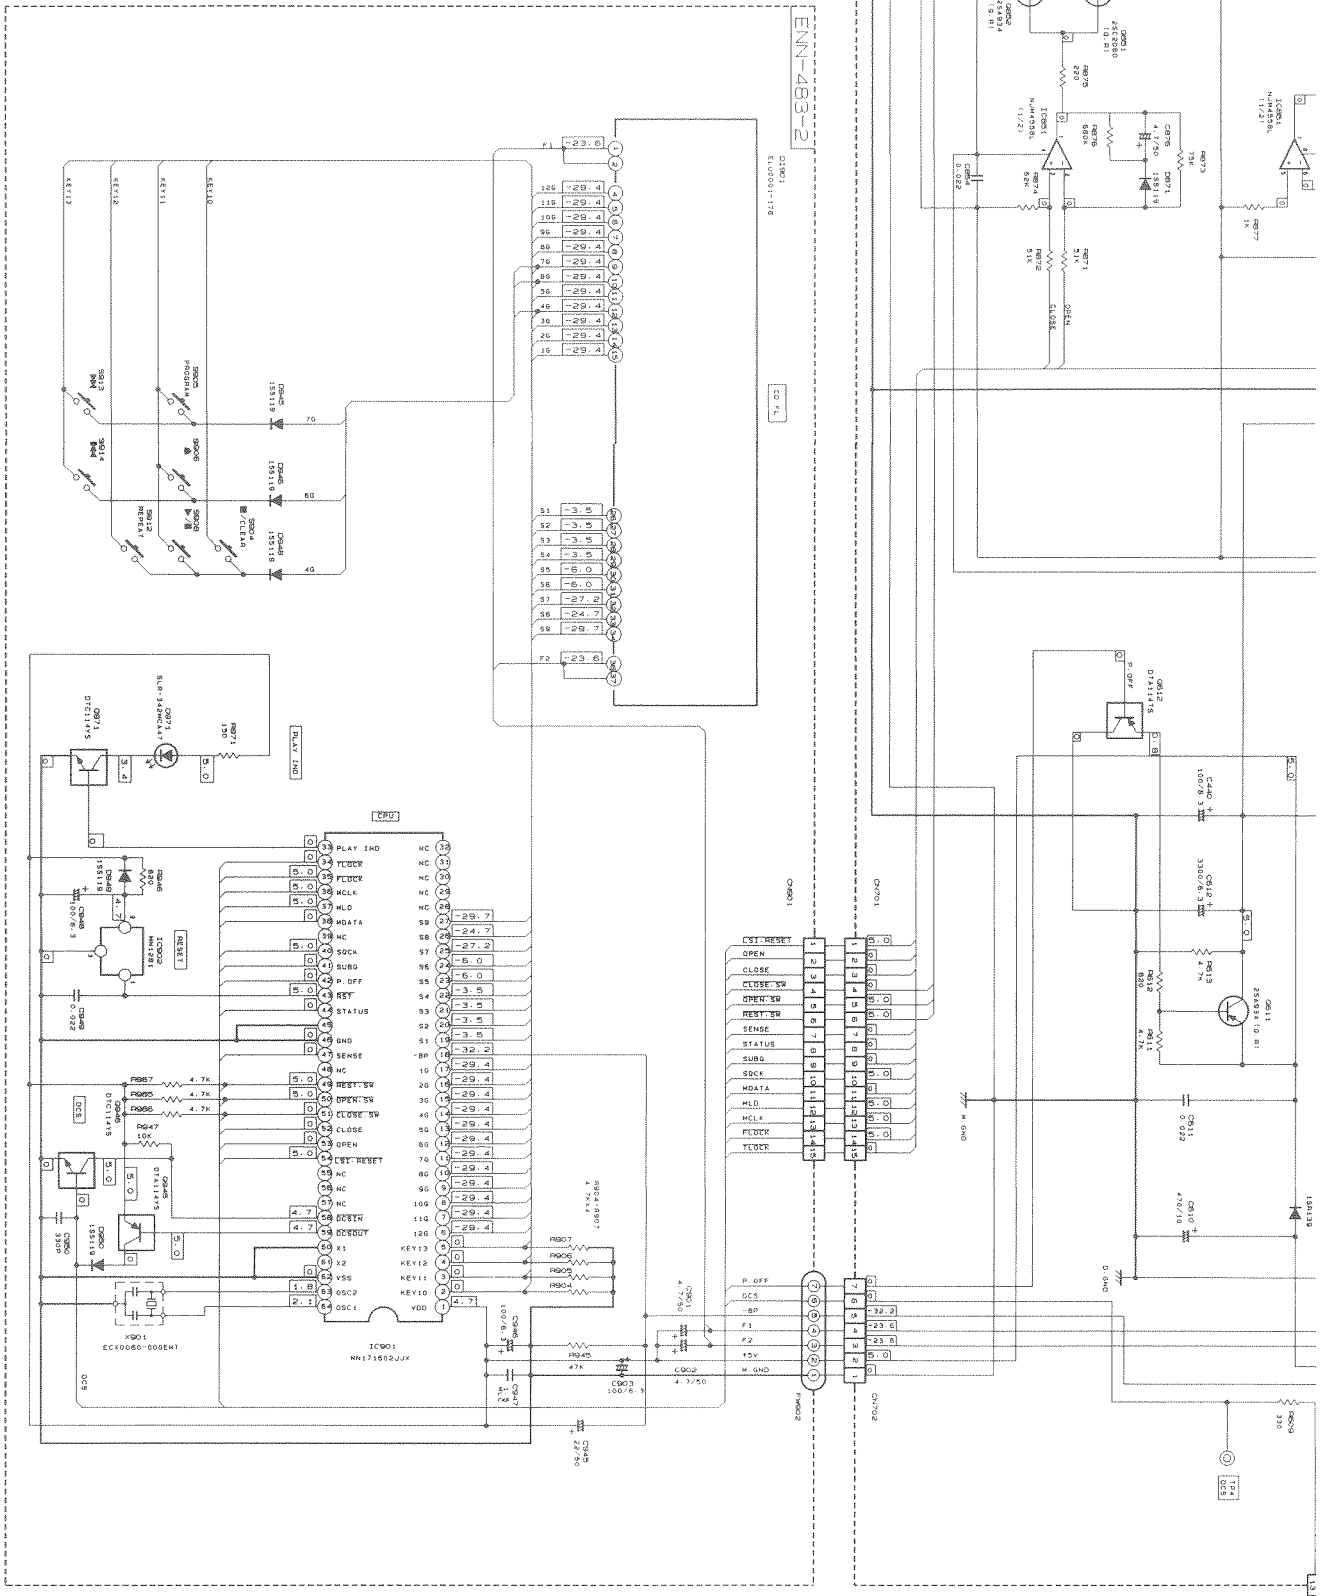

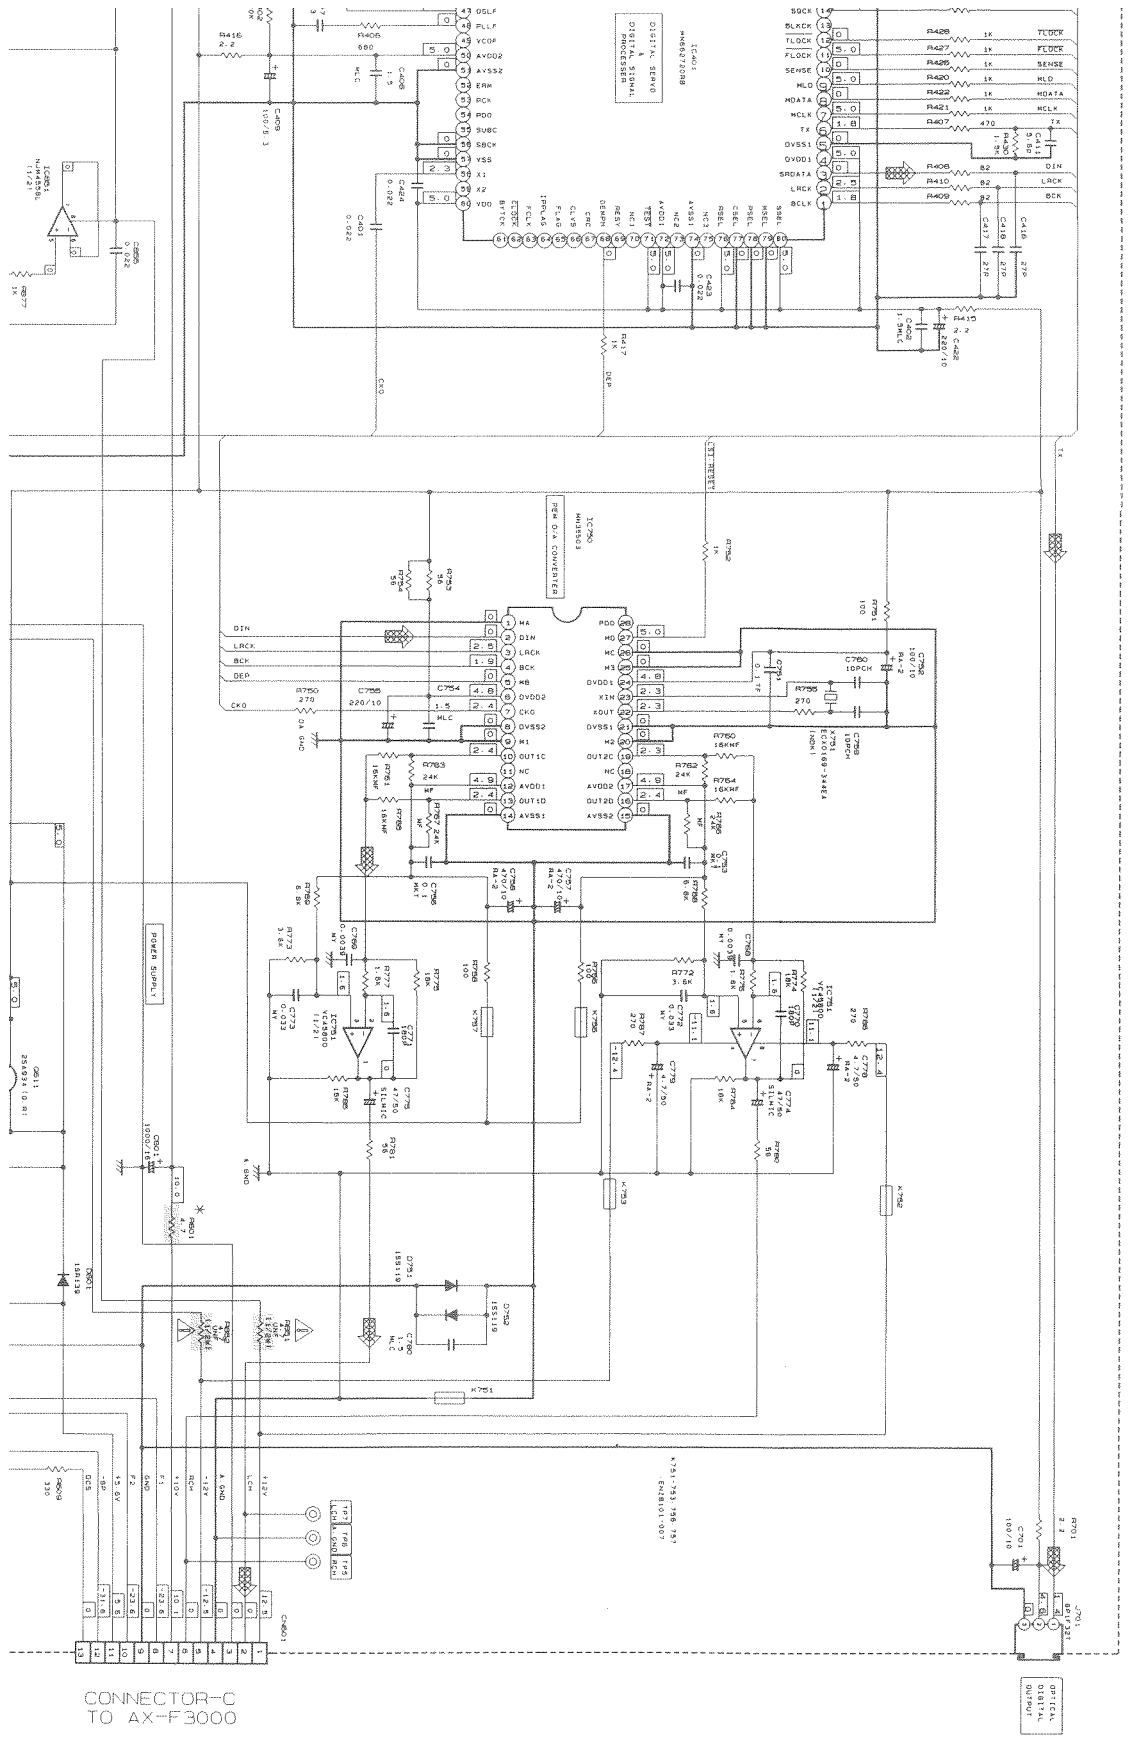

CONNECTOR-C
TO AX-F3000

TD-F3000

Contents

| | |
|---------------------------------------|------|
| <i>Description of Major ICs</i> | 4-2 |
| <i>Disassembly Procedures</i> | 4-5 |
| <i>Adjustment Procedures</i> | 4-10 |
| <i>Block Diagram</i> | 4-13 |
| <i>Printed Circuit Boards</i> | 4-14 |
| <i>Schematic Diagrams</i> | 4-15 |

Description of Major LSIs

■ HD614081SE39 (IC203) : Deck controller

Terminal Layout

| | | | |
|------------------|----|----|------------------|
| NR LED | 1 | 64 | A.FWD. LED |
| NR LED(C) | 2 | 63 | A. REV. LED |
| A SPEED UP | 3 | 62 | B FWD. LED |
| B SPEED UP | 4 | 61 | B.REV. LED |
| MUSIC IN | 5 | 60 | REC LED |
| B.FWD.REEL MOTOR | 6 | 59 | REV. MODE |
| B.REV.REEL MOTOR | 7 | 58 | BIAS |
| B REV CAM MOTOR | 8 | 57 | NR OFF |
| B FWD CAM MOTOR | 9 | 56 | REC MUTE |
| A CAM SW-2 | 10 | 55 | DCS IN |
| A CAM SW-1 | 11 | 54 | DCS OUT |
| A CAM SW-0 | 12 | 53 | GND |
| A PULSE IN | 13 | 52 | 4.19MHzOSC IN |
| B CAM SW-2 | 14 | 51 | 4.19MHzOSC IN |
| B CAM SW-1 | 15 | 50 | TO VCC |
| B CAM SW-0 | 16 | 49 | RESET IN |
| B PULSE IN | 17 | 48 | KEY&SW IN-4 |
| POWER OFF IN | 18 | 47 | KEY&SW IN-3 |
| GND | 19 | 46 | KEY&SW IN-2 |
| A FWD REEL MOTOR | 20 | 45 | KEY&SW IN-1 |
| A REV REEL MOTOR | 21 | 44 | KEY OUT-4 |
| A REV CAM MOTOR | 22 | 43 | KEY OUT-3 |
| A FWD CAM MOTOR | 23 | 42 | KEY OUT-2 |
| NR REC | 24 | 41 | KEY OUT-1 |
| A MUTE | 25 | 40 | SWOUT-2 |
| B MUTE | 26 | 39 | SWOUT-1 |
| PLAY MUTE | 27 | 38 | HI-SPEED DUBBING |
| CAP.MOTOR ON | 28 | 37 | H.S.CrO2 |
| REC | 29 | 36 | H.S. ME |
| FADE CTRL. | 30 | 35 | H.S.NORM. |
| BEQ | 31 | 34 | CrO2 |
| +5V | 32 | 33 | METAL |

Key matrix


| | KEY&SW-1 (PIN45) | KEY&SW-2 (PIN46) | KEY&SW-3 (PIN47) | KEY&SW-4 (PIN48) |
|----------------------|---------------------|---------------------|------------------------|---------------------|
| KEY OUT 1 (PIN41) | A ◀ (S300) | A ◀◀ (S301) | A ▶▶ (S302) | A ▶ (S303) |
| KEY OUT 2 (PIN42) | B ◀ (S310) | B ◀◀ (S311) | B ▶▶ (S312) | B ▶ (S313) |
| KEY OUT 3 (PIN43) | A ■ (S320) | B ■ (S321) | REC PAUSE (S322) | — |
| KEY OUT 4 (PIN44) | A▶▶B (S330) | DOLBY (S331) | REV. MODE (S332) | CD REC (S333) |
| SW OUT 1 (PIN39) | — | B CrO2 | METAL | — |
| SW OUT 2 (PIN40) | B PACK | REV REC | FWD REC | A PACK |

Terminal Description

| Pin NO. | Symbol | I/O | Function | Pin NO. | Symbol | I/O | Function |
|---------|------------|-----|--|---------|------------------|-----|---|
| 1 | NR LED | O | Dolby B indicator signal output | 33 | METAL | O | Metal tape , normal speed record |
| 2 | NR LED(C) | O | Dolby C indicator signal output | 34 | CrO ₂ | O | CrO ₂ tape , normal speed record |
| 3 | A S UP | O | Reel speed up control (Deck A) | 35 | HS NORM | O | Not used |
| 4 | B S UP | O | Reel speed up control (Deck B) | 36 | HS METAL | O | Metal tape , high speed record |
| 5 | MUSIC IN | I | Music scan signal input | 37 | HS CrO2 | O | CrO2 tape , high speed record |
| 6 | B FRM | O | Reel control signal for forward (Deck B) | 38 | HI DUB | O | Not used |
| 7 | B RRM | O | Reel control signal for reverse (Deck B) | 39 | SW O1 | O | Keymatrix output for leaf switch |
| 8 | B RCM | O | Cam control signal for reverse (Deck B) | 40 | SW O2 | O | Keymatrix output for leaf switch |
| 9 | B FCM | O | Cam control signal for forward (Deck B) | 41 | KEY O1 | O | Key matrix output |
| 10 | A CSW2 | I | Cam data input | 42 | KEY O2 | O | Key matrix output |
| 11 | A CSW1 | I | Cam data input | 43 | KEY O3 | O | Key matrix output |
| 12 | A CSW0 | I | Cam data input | 44 | KEY O4 | O | Key matrix output |
| 13 | A.PULS IN | I | Reel pulse input from deck A | 45 | KEY/SW I1 | I | Key matrix input |
| 14 | B CSW2 | I | Cam data input | 46 | KEY/SW I2 | I | Key matrix input |
| 15 | B CSW1 | I | Cam data input | 47 | KEY/SW I3 | I | Key matrix input |
| 16 | B CSW0 | I | Cam data input | 48 | KEY/SW I4 | I | Key matrix input |
| 17 | B.PULSE IN | I | Reel pulse input from deck B | 49 | RESET | I | Reset input |
| 18 | P.CONT | I | Inhibit input from system controller | 50 | TO VCC | -- | Connected to VCC |
| 19 | GND | -- | GND | 51 | OSC | -- | Oscillation terminal |
| 20 | A FRM | O | Reel control signal for forward (Deck A) | 52 | OSC | -- | Oscillation terminal |
| 21 | A RRM | O | Reel control signal for reverse (Deck A) | 53 | GND | -- | GND |
| 22 | A RCM | O | Cam control signal for reverse (Deck A) | 54 | DCS OUT | O | Compulink output |
| 23 | A FCM | O | Cam control signal for forward (Deck A) | 55 | DCS IN | I | Compulink input |
| 24 | NR REC | O | It is "H" when recording with NR on | 56 | REC MUTE | O | Recording mute control |
| 25 | A MUTE | O | It is "H" when deck A is not playing | 57 | NR OFF | O | NR on/off control |
| 26 | B MUTE | O | It is "H" when deck B is not playing | 58 | BIAS | O | Bias on/off control |
| 27 | PLAY MU | O | Deck mute | 59 | REV MODE | O | Indication control for reverse mode |
| 28 | CAP CONT | O | Capstan on/off control | 60 | REC LED | O | Indication control for record |
| 29 | REC | O | It is "H" when recording | 61 | BREV LED | O | Indication control for reverse playback |
| 30 | FADE CON | O | It is "H" when recording with fade | 62 | BFWD LED | O | Indication control for forward playback |
| 31 | BEQ | O | It is "L" when CrO2 tape is in deck B | 63 | AREV LED | O | Indication control for reverse playback |
| 32 | +5V | -- | Power supply | 64 | AFWD LED | O | Indication control for forward playback |

■ AN7374K (IC201) : Dolby IC


1. Block Diagram

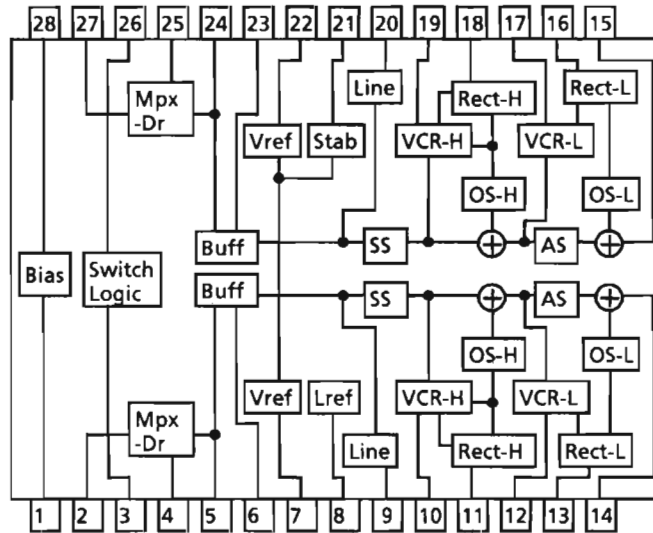


2. Pin function

| Pin No | Symbol | Function | Pin No | Symbol | Function |
|--------|-----------|------------------------------------|--------|-----------|------------------------------------|
| 1 | GND | GND | 15 | REC OUT-L | Ch. B REC-OUT |
| 2 | REC IN-R | Ch. A REC-IN | 16 | | Ch. B LLS control signal rectifier |
| 3 | OFF/B/C | C-type/B-type/OFF NR switch | 17 | | Ch. B LLS control resistance |
| 4 | PB IN-R | Ch. A PB-IN | 18 | | Ch. B HLS control signal rectifier |
| 5 | | Ch. A MPX filter sriver output | 19 | | Ch. B HLS control resistance |
| 6 | | Ch. A Processor input | 20 | PB OUT-L | Ch. B LINE -OUT |
| 7 | | Ch. A reference voltage output | 21 | | Reference voltage input |
| 8 | | Reference curent generator | 22 | | Ch. B reference voltage output |
| 9 | PB OUT-R | Ch. A LINE -OUT | 23 | | Ch. B Processor input |
| 10 | | Ch. A HLS control resistance | 24 | | Ch. B MPX filter sriver output |
| 11 | | Ch. A HLS control signal rectifier | 25 | PB IN-L | Ch. B PB-IN |
| 12 | | Ch. A LLS control resistance | 26 | PB/REC | PB/REC/PBmpx Mode switch |
| 13 | | Ch. A LLS control signal rectifier | 27 | REC IN-L | Ch. B REC-IN |
| 14 | REC OUT-R | Ch. A REC-OUT | 28 | Vcc | Vcc |

■ μ PC1297CA (IC341) : Dolby HX PRO System IC

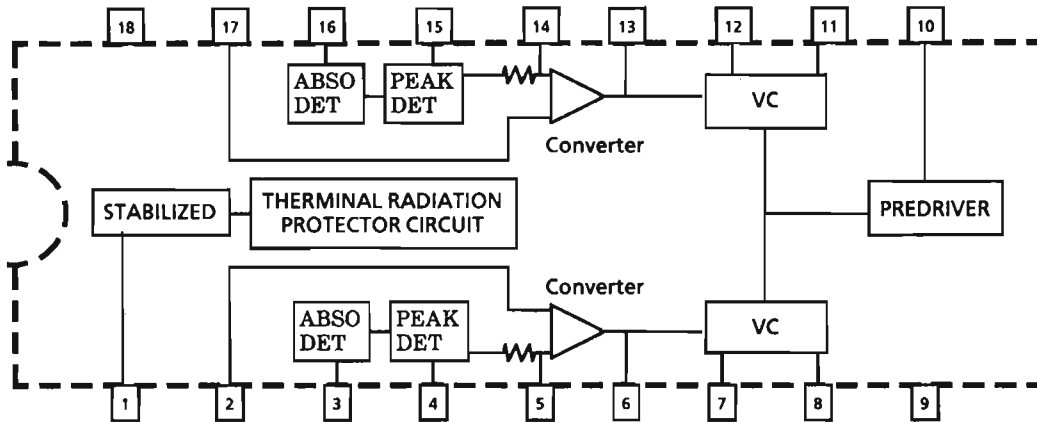


■ LB1641 (IC204~207) : DC Motor Driver

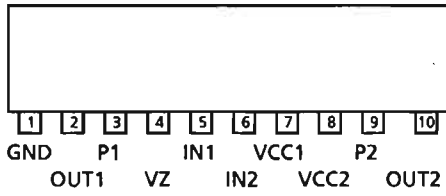

| Input | | Output | | Mode |
|-------|-----|--------|------|-------------------|
| IN1 | IN2 | OUT1 | OUT2 | |
| 0 | 0 | 0 | 0 | Brake |
| 1 | 0 | 1 | 0 | CLOCKWISE |
| 0 | 1 | 0 | 1 | COUNTER-CLOCKWISE |
| 1 | 1 | 0 | 0 | Brake |

∞ : Hi impedance

■ μ PC1330 HA (IC304) : HEAD SWITCH

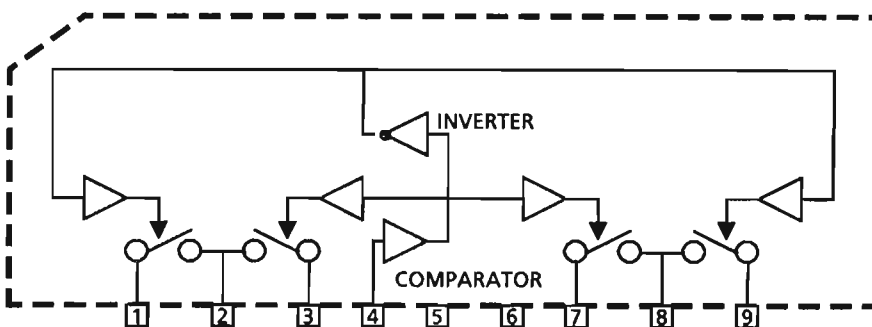


| | |
|-----|------|
| | 4pin |
| PB | L |
| REC | H |

Disassembly Procedures


(1) Removing the top cover

1. Remove 6 screws (A) and (B) fastening the rear and sides of the top cover to remove the cover.

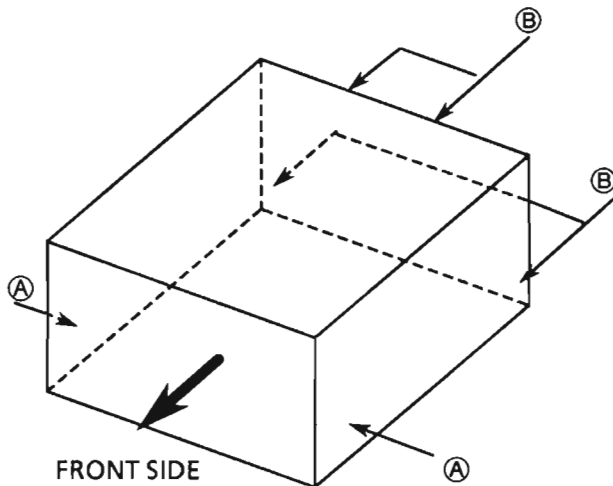


(2) Removing the Front panel assembly with same P.C.Bard

1. Remove the top cover.
3. Disconnect the connectors CN221.
4. Remove a screw (C) and 2 hooks fastening the assembly with chassis to remove the assembly.

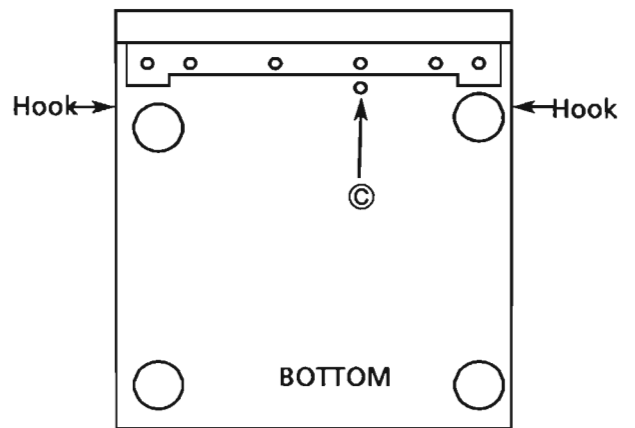


(3) Removing the Deck control circuit board (ENJ-097-2)

1. Remove the top cover .
2. Remove the 2 screws (E) fixing the circuit board.
3. Disconnect the connectors P292,293 and CN701.

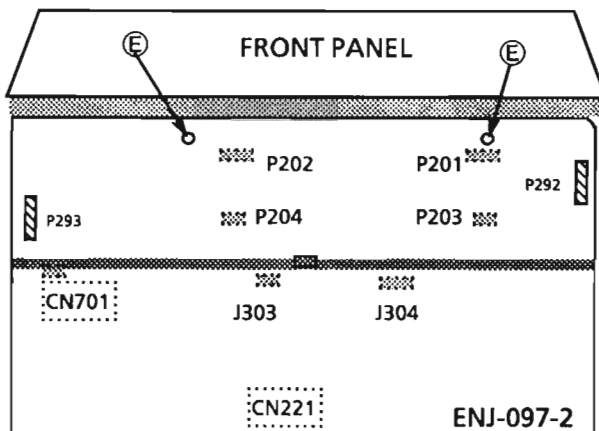


(4) Removing the mechanism assembly (ENJ-097-1)

1. Remove the top cover, frontpanel assembly and deck control circuit board.
2. Remove 8 screws (C) and (D) fastening mechanism assembly

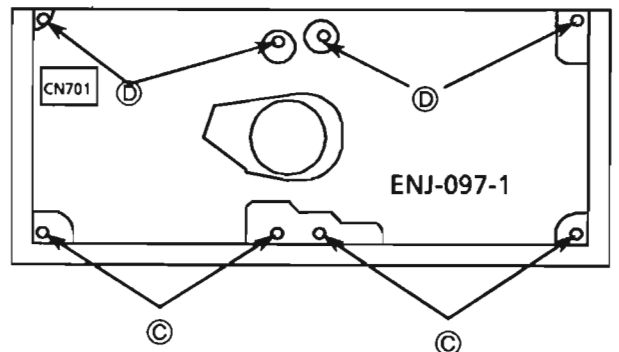


- (A) .. SDGS3008N (B) ... GBSG3008CC (C) ... SBST3006Z (D) ... SBSF3008Z
 (E) .. SDST2604Z


- (5) Removing the door lock plate assembly
1. Remove the mechanism assembly.
 2. Remove the 2 screws (F) fixing the assembly.
 3. Open the cassette doors to remove the assembly.

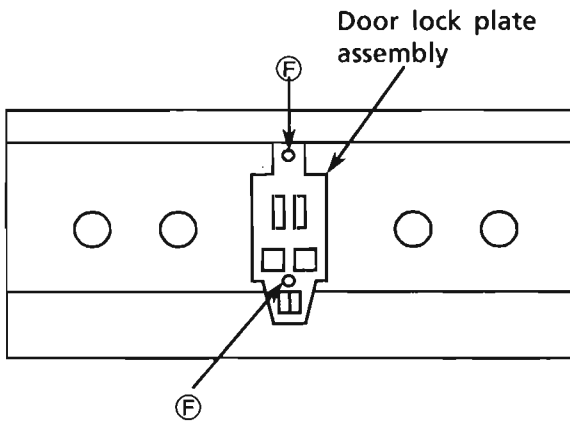


- (6) Removing the cassette lids
1. Push the eject button to open the cassette doors.
 2. Slide the lids up to remove them.

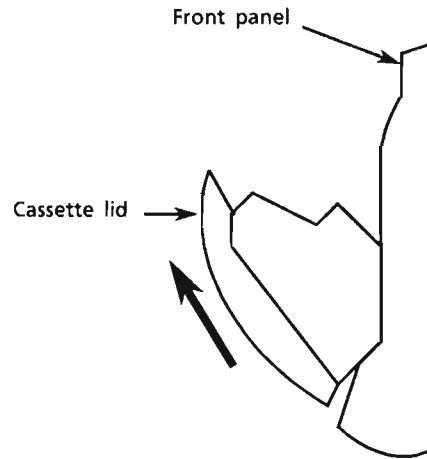

- (7) Removing the dumpers
1. Remove the mechanism assembly.
 2. Press the hook and release it to remove the dumper. (See an arrow)

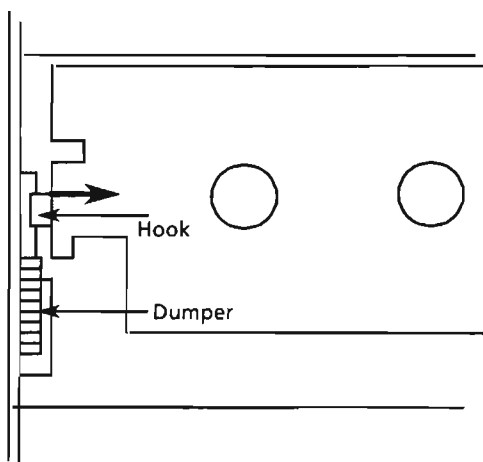


- (8) Removing the Cassette holder
1. Remove the mechanism assembly.
 2. Open the cassette door.
 3. Remove the spring.
 4. Remove the cassette holder.

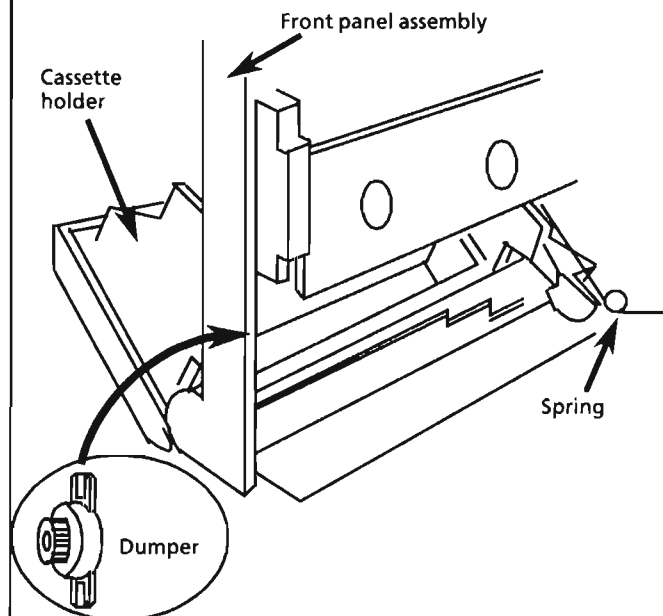


(9) Removing the Front SW circuit board (ENJ-097-3)

1. Remove the mechanism assembly and cassette holder.
2. Remove the 6 screws **(M)** to remove the holder bracket fixing the SW circuit board.
3. Remove 2 screws **(F)** to remove the circuit board.

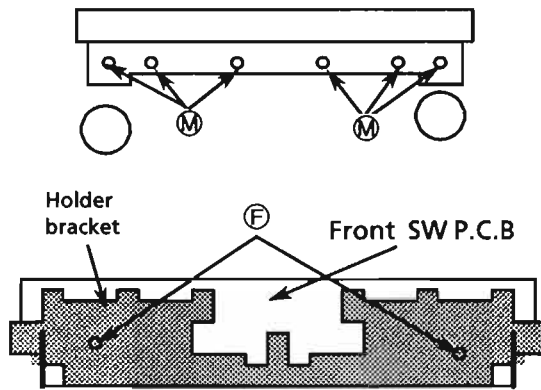


(10) Removing the deck audio circuit board (ENJ-097-1)

1. Remove the front panel assembly and Deck control circuit board (ENJ-097-2).
2. Disconnect CN331 and CN332.
3. Remove the 2 screws **(C)** to remove the circuit board. (Pay attention to the pawls.)

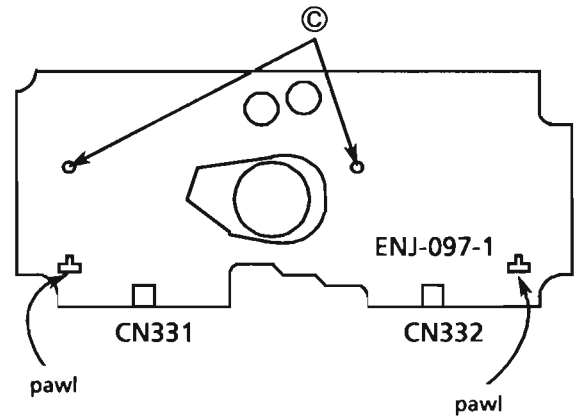

(11) Removing the capstan motor

1. Remove the deck audio circuit board.
2. Remove the 7 screws **(F)** fixing the bracket.
3. Release the hooks holding the bracket to remove the bracket with the capstan motor.
4. Remove the 2 screws fixing the motor to remove it.

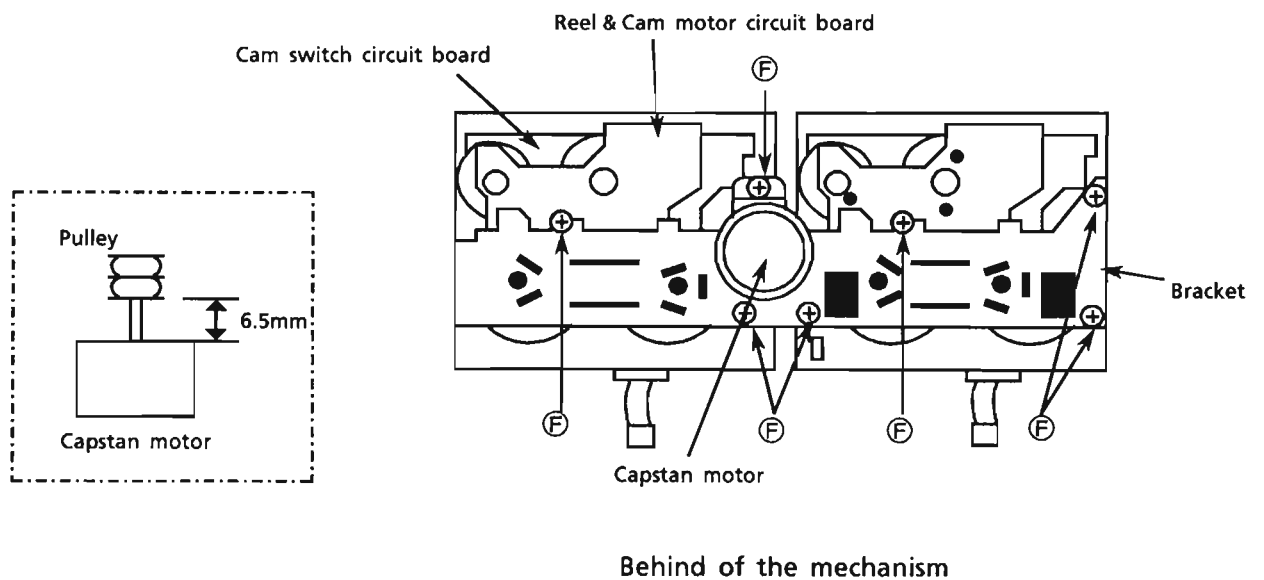


(C) .. SBST3006Z

(F) ... SDSF2608Z

(M) ... SDST3008CC


(12) Installing the head assembly

The direction of the head is changed with the head gear. When servicing, install the head gear according to the direction of the head.

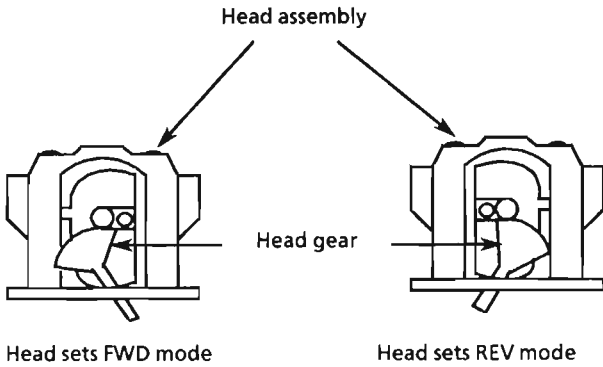

(13) Removing the pinchroller arm assembly


1. Remove the mechanism assembly.
2. Release the hook holding the assembly to remove it.

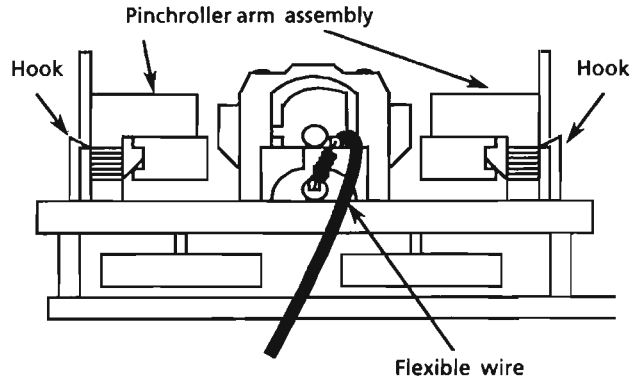

Bottom view of the mechanism


(14) Removing the Flywheels

1. Remove the deck audio circuit board.
2. Remove the 7 screws (E) and release the hooks holding the bracket to remove the bracket with the capstan motor.
3. Remove the flywheel.

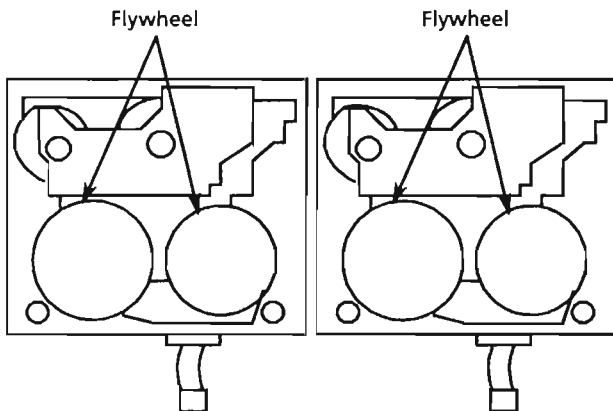


(15) How to install the belts

1. Install the belts as shown in the figure below.
When putting the belts, put the belt B first.
2. Install the bracket with the capstan motor to put the belts on the pulleys.

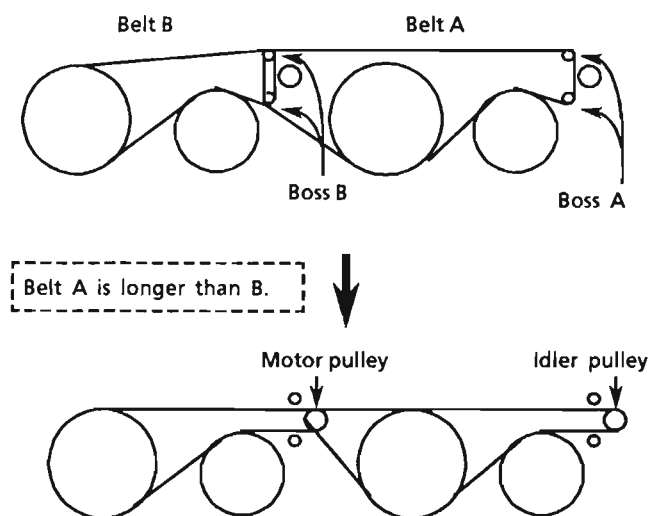


- (16) Removing the reel & cam motor
1. Remove the flywheel.
 2. Remove the screws ㊦ and ㊧ fixing the motors to remove the reel & cam motor circuit board.
 3. Unsolder the motors to remove them.


- (17) Removing the cam switch circuit board
1. Remove the flywheel.
 2. Remove the reel & cam motor circuit board.
 3. Release the hook holding the cam switch circuit board and remove the screw to remove it.
- ※ When installing the cam switch circuit board, assemble the circuit board so that the part ㊱ meets part ㊲.

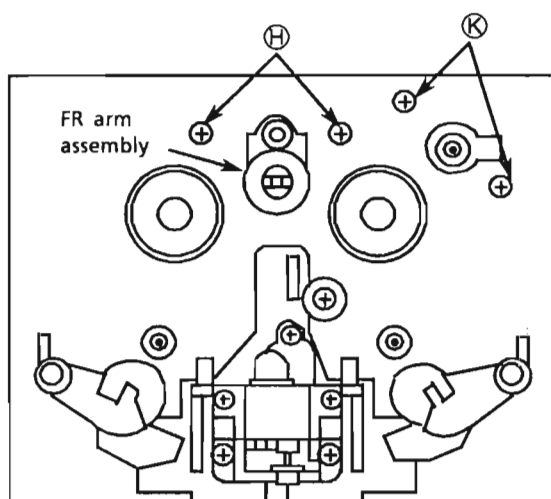

Front view of the mechanism

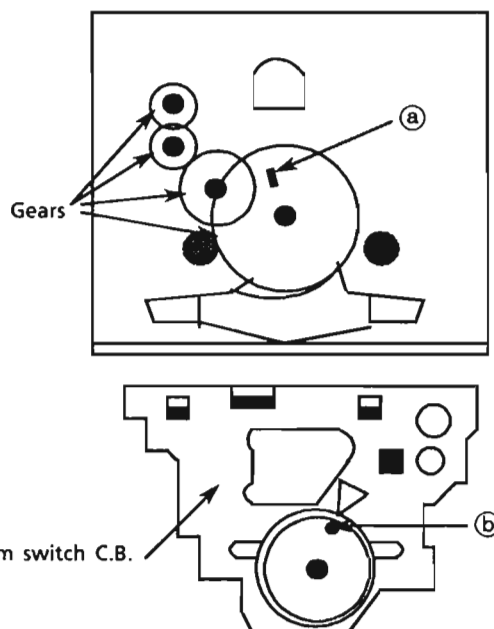

- (18) Removing the head assembly
1. Remove the mechanism assembly. (Refer to Item 8)
 2. Disconnect the connector CN331 or CN332 on the deck audio circuit board.
 3. Remove the 3 screws ㊬ fixing the head assembly to remove it.

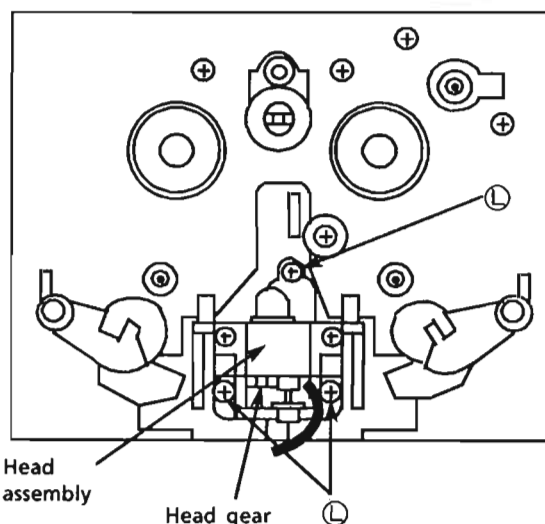

Front view of the mechanism

㊦ VKZ4705-001

㊧ VKZ4705-002

㊬ SDST2004Z

Adjustment Procedures (Cassette Deck)

1. Measuring instruments

- Audio frequency signal generator (0dbS output at the 600 ohm output terminal from 50Hz to 20KHz)
- Electronic voltmeter
- Frequency counter
- Wow & Flutter meter
- Distortion Meter with band pass filter
- Attenuator (600 ohm impedance)
- A resistor with 600Ω


Standard Tape

0dbS=0.775V


| Tape No. | Frequency | Level (Wow & Fkutter) | Purpose |
|---------------------|-----------|-----------------------|--|
| VTT-703L | 10kHz | -10dBs | Head azimuth , Frequency Response |
| VTT-712 | 3000Hz | 0dBs 0.025%WRMS | Tape Speed , Wow & Flutter |
| VTT-724 | 1kHz | -4dBs | Standard Level |
| TMT-6447 | — | — | Blunk Skip |
| TMT-6247 , TMT-6237 | — | — | Music Scan |
| TMT-7046 | — | — | Recording standard Normal : UR |
| AC-712 | — | — | Recording standard METAL : MA |
| AC-513 | — | — | Recording standard CrO ₂ : SA |
| TW-2111, TW-2121 | — | — | Forward / reverse play torque measuring |
| TW-2231 | — | — | Feed forward / rewind torque measuring |
| C-120 Tape | — | — | Confirming the tape running |

2. Adjustment and repairing the mechanism

| Item | Adjustment method | Standard value | Remarks |
|---------------------|---|----------------|---|
| Head azimuth | <p>Deck A</p> <ol style="list-style-type: none"> 1. Connect an electronic voltmeter to the DOLBY TP (figure 3) to playback VTT-703L. 2. Adjust screw Ⓐ so that the indication of the voltmeter becomes maximum when PLAY (▶) is pressed. 3. Adjust screw Ⓑ so that the indication of the voltmeter becomes maximum when PLAY (◀) is pressed. <p>Deck B</p> <ol style="list-style-type: none"> 4. Adjust screw Ⓒ so that the indication of the voltmeter becomes maximum when PLAY (▶) is pressed. 5. Adjust screw Ⓓ so that the indication of the voltmeter becomes maximum when PLAY (◀) is pressed. 6. After making the adjustment, apply screw lock to prevent screws Ⓐ, Ⓑ, Ⓒ and Ⓓ coming loose . | Maximum | <ol style="list-style-type: none"> 1. Refer to figure 1. 2. When the specified characteristic cannot be obtained because of head wear, excessive magnetization, etc., replace the head assembly and adjust the head azimuth. Also, perform the electric adjustment. 3. When there is the difference of more than 3 ~ 4 dB between left and right output levels, replace the head assembly to avoid complaints. |
| Playback torque | 1. Measure the torque in the playback mode by the torqu meter. | 26 ~ 62 g-cm | When the standard torque cannot be obtained, replace the FR arm assembly or motor. |
| Fast forward torque | 1. Measure the torque in the fast forward mode by the torqu meter. | 80 ~ 170 g-cm | When the standard torque cannot be obtained, replace the FR arm assembly or motor. |
| Rewind torque | 1. Measure the torque in the rewind mode by the torqu meter. | 80 ~ 170 g-cm | When the standard torque cannot be obtained, replace the FR arm assembly or motor. |
| Wow & flutter | <ol style="list-style-type: none"> 1. Connect the wow & flutter meter to the DOLBY TP (figure 3) and play back VTT-712 . 2. Its reading should be within 0.2% (WTD). | — | As a complaint may occur if the wow & flutter fluctuates by 0.1% even though it is allowed in the standard, repairing is required. |

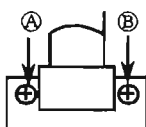

Deck A

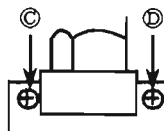

Deck B

Figure 1

3. Electrical Adjustments (Make the following adjustments after adjusting the head azimuth.)

In principle, the adjustments should be made in the following sequence.

Set the NR switch to OFF and the BEAT CUT switch to "1".

Adjustments marked with an asterisk (*) should always be made after the head is replaced

0dBs=0.775V.

| Item | Adjustment Method | Adjustment Location | Standard Value | Remarks |
|---|--|--|--|---|
| Tape Speed | 1. Connect a frequency counter to the DOLBY TP (figure 3) and play back VTT-712 . 2. Normal speed Adjustment 1) Mechanism B Play back deck B to adjust the semi-fixed resistor VR201 on ENJ - 086 - 2. 2) Mechanism A Play back deck A to confirm that the difference between deck A and deck B is within $\pm 51\text{Hz}$. | VR201 Check | 3,000 Hz $\pm 10\text{Hz}$ | 1) Adjust the normal speed first, and perform the high speed adjustment. |
| * Standard level (Playback Level) | 1. Connect an electronic voltmeter to the DOLBY TP (figure 3) . Play back VTT-724 (1 kHz : -4dBs) to adjust the semi - fixed resistors. | Deck A L: VR301 R: VR302 Deck B L: VR303 R: VR304 | -5.5dBs (411mV) $\pm 1\text{dB}$ | 1) The playback level varies when the head is replaced so should be adjusted. Use an electronic voltmeter with an impedance of 100 k Ω or more. |
| * Playback Frequency Response | 1. Connect an electronic voltmeter to the DOLBY TP (figure 3) . 2. Play VTT-703L (10kHz : -10dBs) and adjust semi-fixed resistors to obtain the standard values. | Deck A L: VR305 R: VR306 Deck B L: VR307 R: VR308 | -11.5dBs (206mV) $\pm 3\text{dB}$ | — |
| * Recording Bias Frequency | 1. Connect a frequency counter to the BIAS TP (figure 3) , and perform a recording to adjust bias frequency . | L301 | 100 kHz ± 6 kHz | Set the BEAT CUT SWITCH to "1" . |
| * Record / Play Frequency Response (Bias current) | 1. Supply 1kHz and 12.5kHz with 30mV signals to AUX (AX-F3000) terminals respectively to record them. 2. Connect an electronic voltmeter to the DOLBY TP (figure 3) to confirm the recorded values . 3. If the values are not satisfied , adjust the semi-fixed resistors and record the signal again to confirm the recorded values. | L: VR513 R: VR514 | 0 ± 2 dB for 12.5 kHz with 1 kHz as the standard. | Refer to figure 2 below. 1) The recording and playback frequency response of a cassette deck are adjusted by adjusting the bias. 2) Perform the adjustment with normal tape and confirm that the values are within the range for metal tape. |
| * Adjustment HX PRO | 1. Connect an electronic voltmeter to the R504(L), R503(R) at either end, and record the no signal Metal tape. 2. Adjust to the liast volues. | L501(L) L502(R) | | |

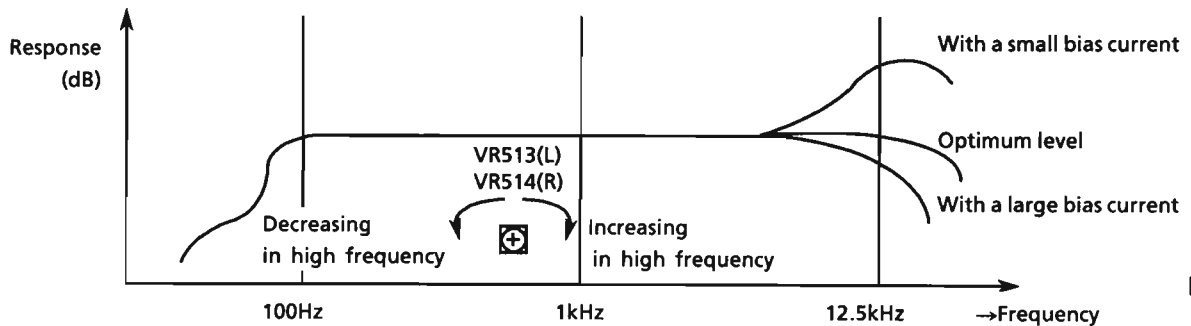


Figure 2

| Item | Adjustment Method | Adjustment Location | Standard Value | Remarks |
|---------------------------------|--|------------------------|--------------------|---|
| * Record / Playback Sensitivity | <ol style="list-style-type: none"> 1. Input a 1 kHz (-8.2dBs: 300mV) signal to PHONO / VCR terminals and record it on the left and right channels . 2. Connect an electronic voltmeter to the DOLBY TP (figure 3) to confirm the values . 3. If the values are not satisfied , adjust the semi-fixed resistors and record the signals again to confirm the values. | L : VR311 R : VR312 | -5.5dBs (411mV) | Adjust with normal tape and make sure that the left / right level difference is 1.0dB or less |
| * Erase ratio check | <ol style="list-style-type: none"> 1. Record a music source using metal tape. 2. Rewind and erase the recorded section. 3. Comfirm nothing can be heard. | — | — | — |
| Auto-stop check | Make sure to operate AUTO STOP at the end of tape running and not to operate on the way of the playing. | — | — | — |
| Music Scan | <ol style="list-style-type: none"> 1. Make sure not to work the music scanning operation at the start of tape wind using TMT-6237. 2. Make sure to work the music scanning operation at the end of tape wind using TMT-6247. | — | — | — |

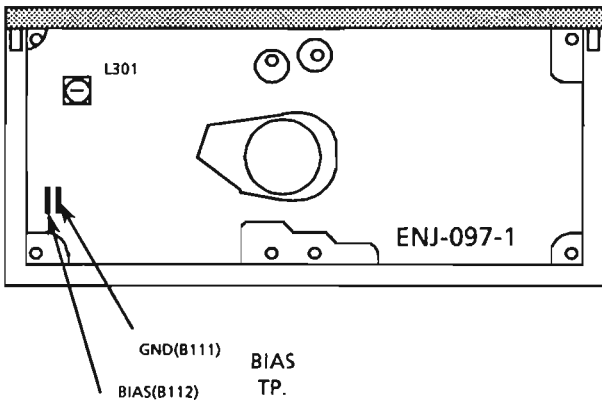


FIG.3

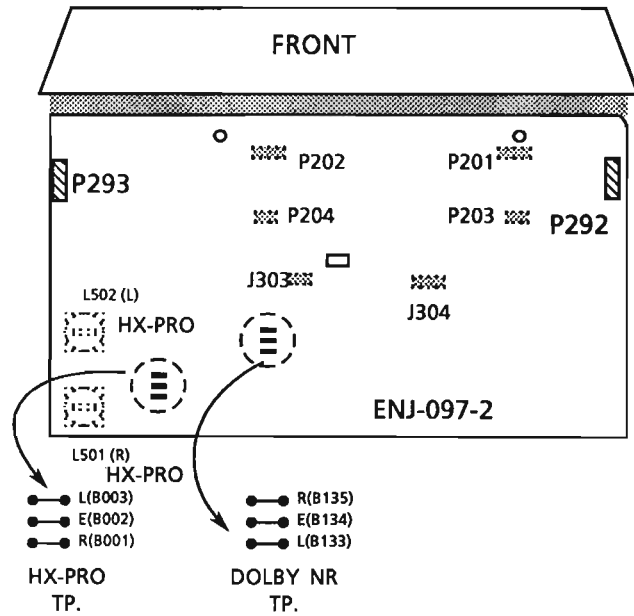


FIG.4

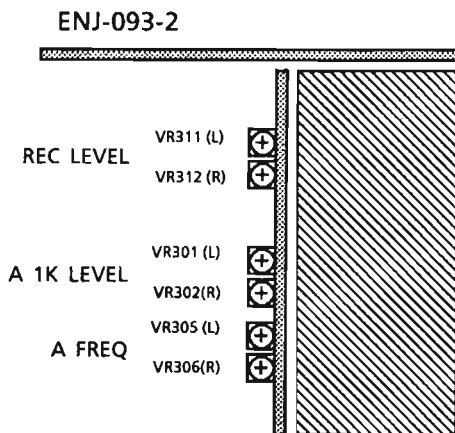


FIG.5 LEFT SIDE


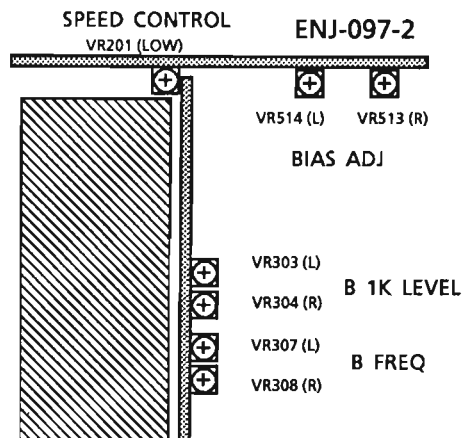



FIG.6 RIGHT SIDE

P4-13-a

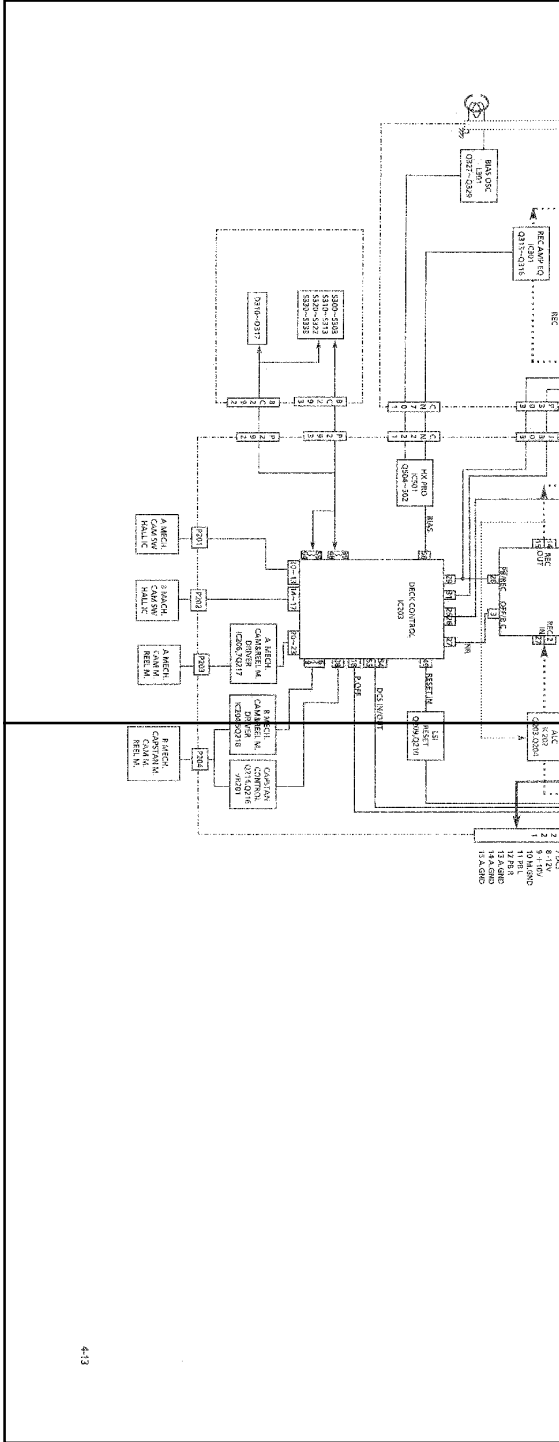


P4-13-c


P4-13-b

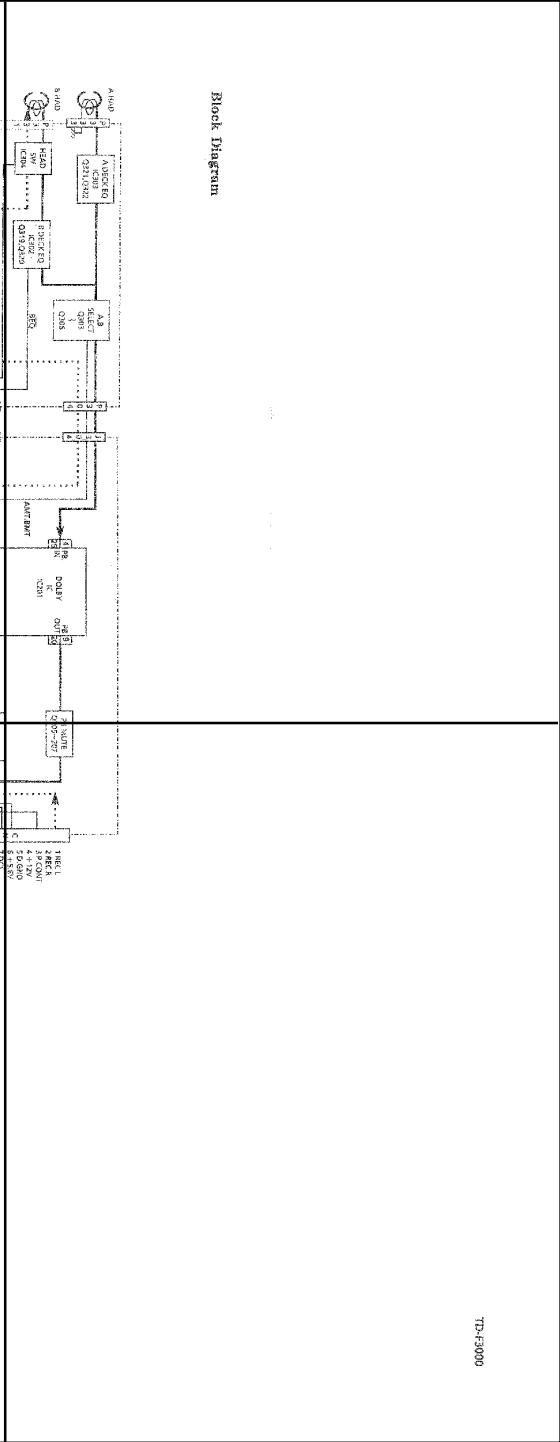


P4-13-d

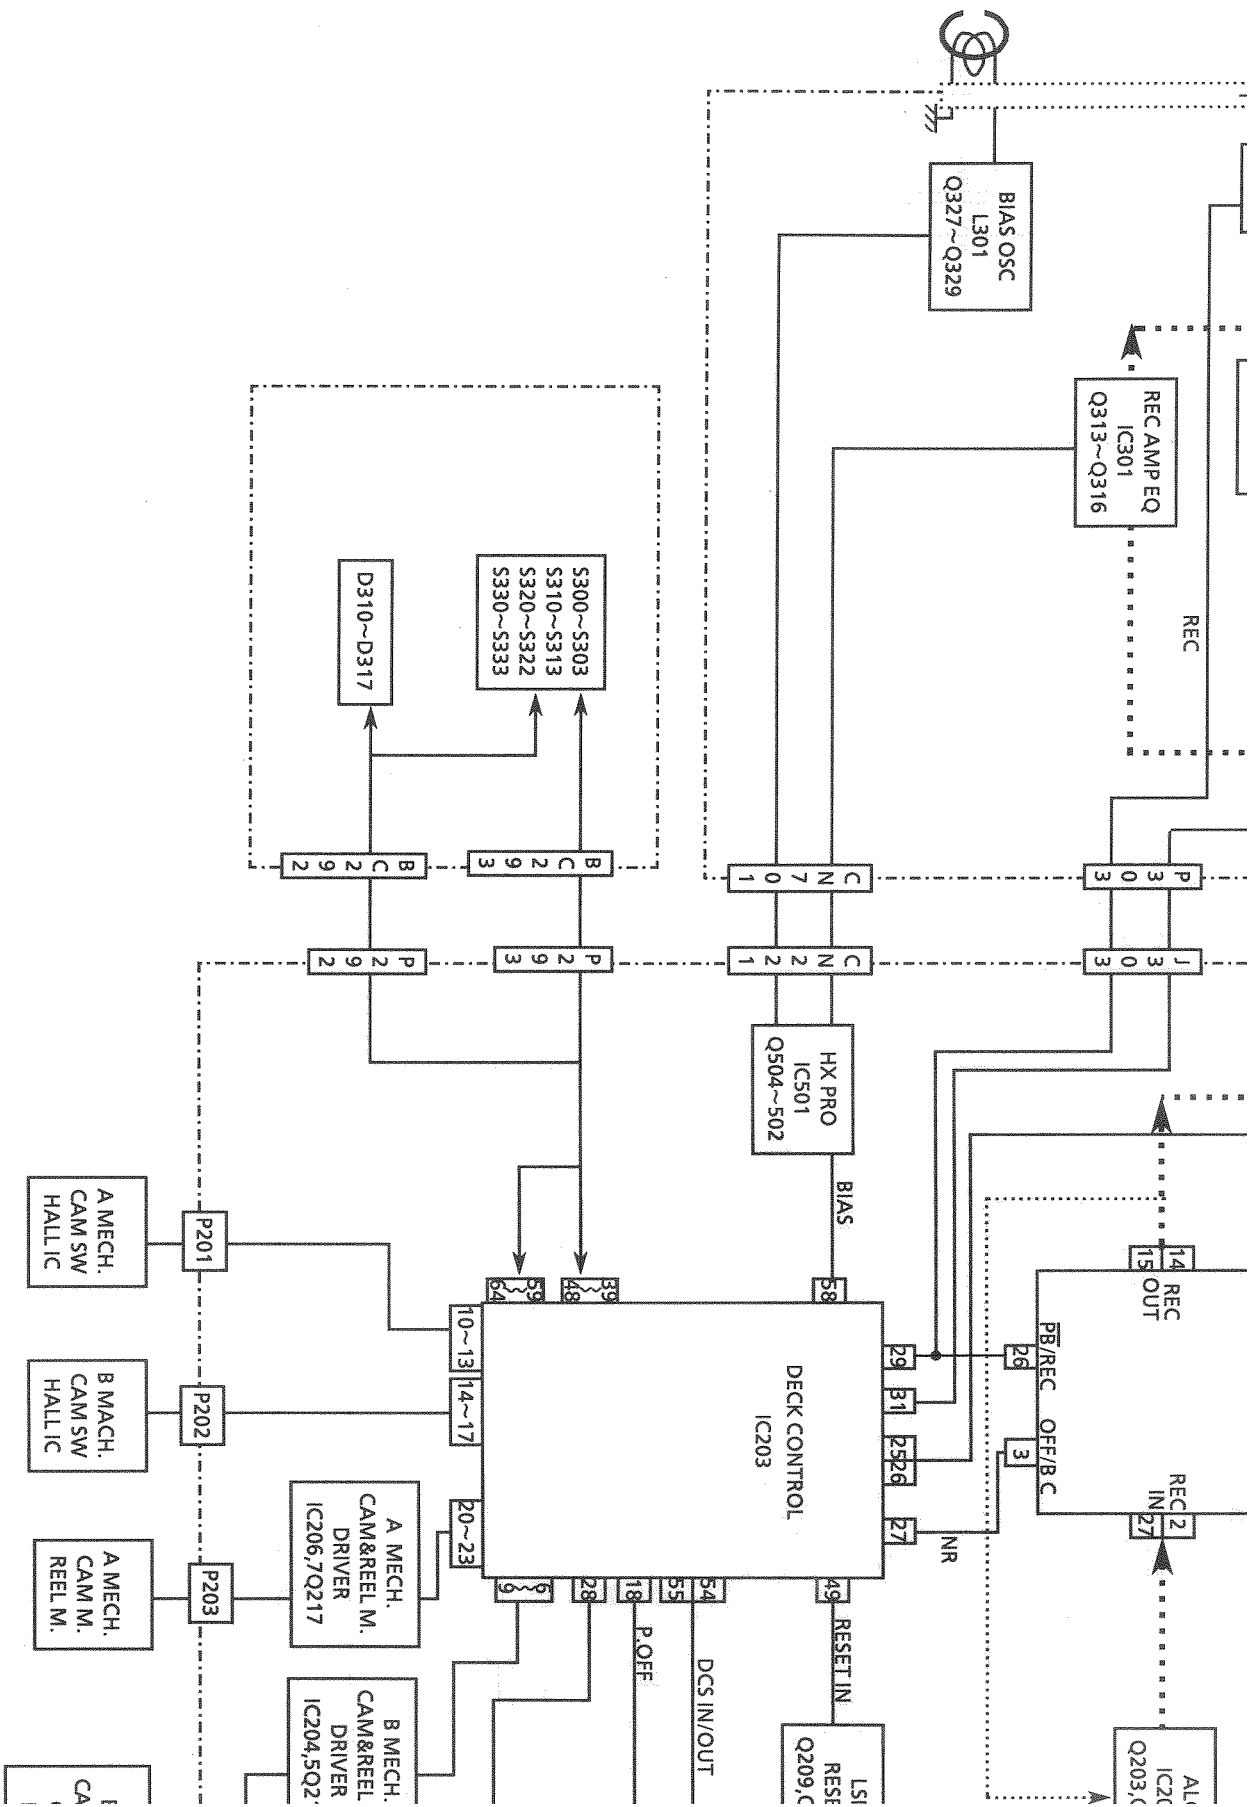



Block Diagram

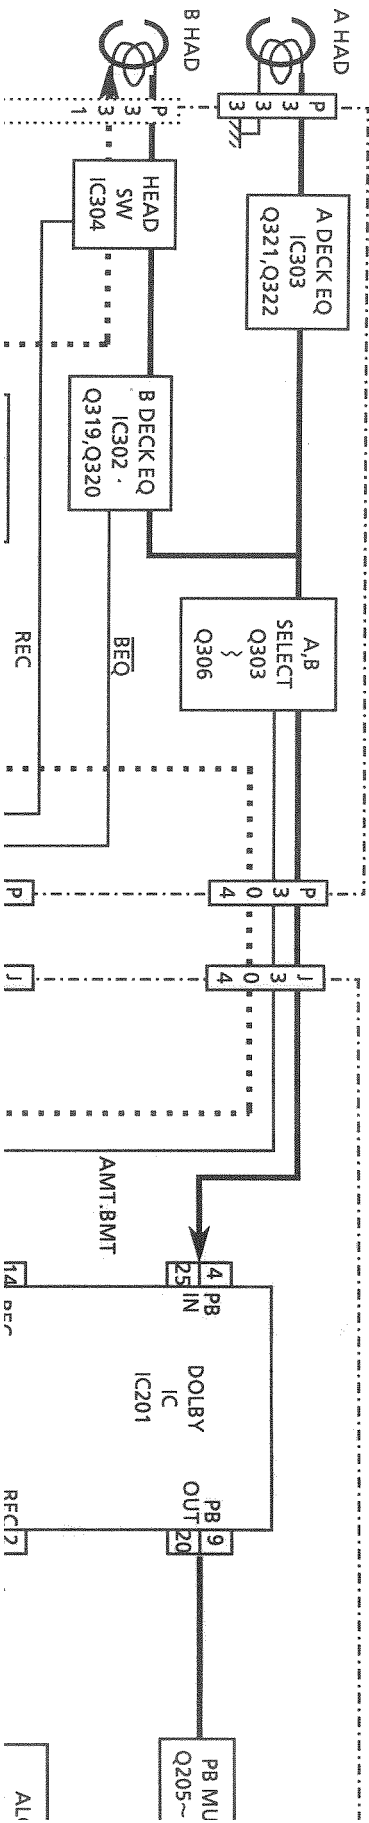

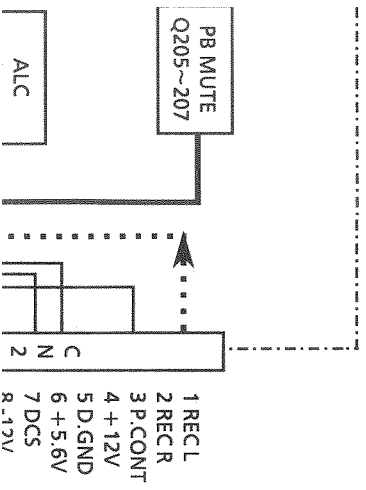

Printed Circuit Board

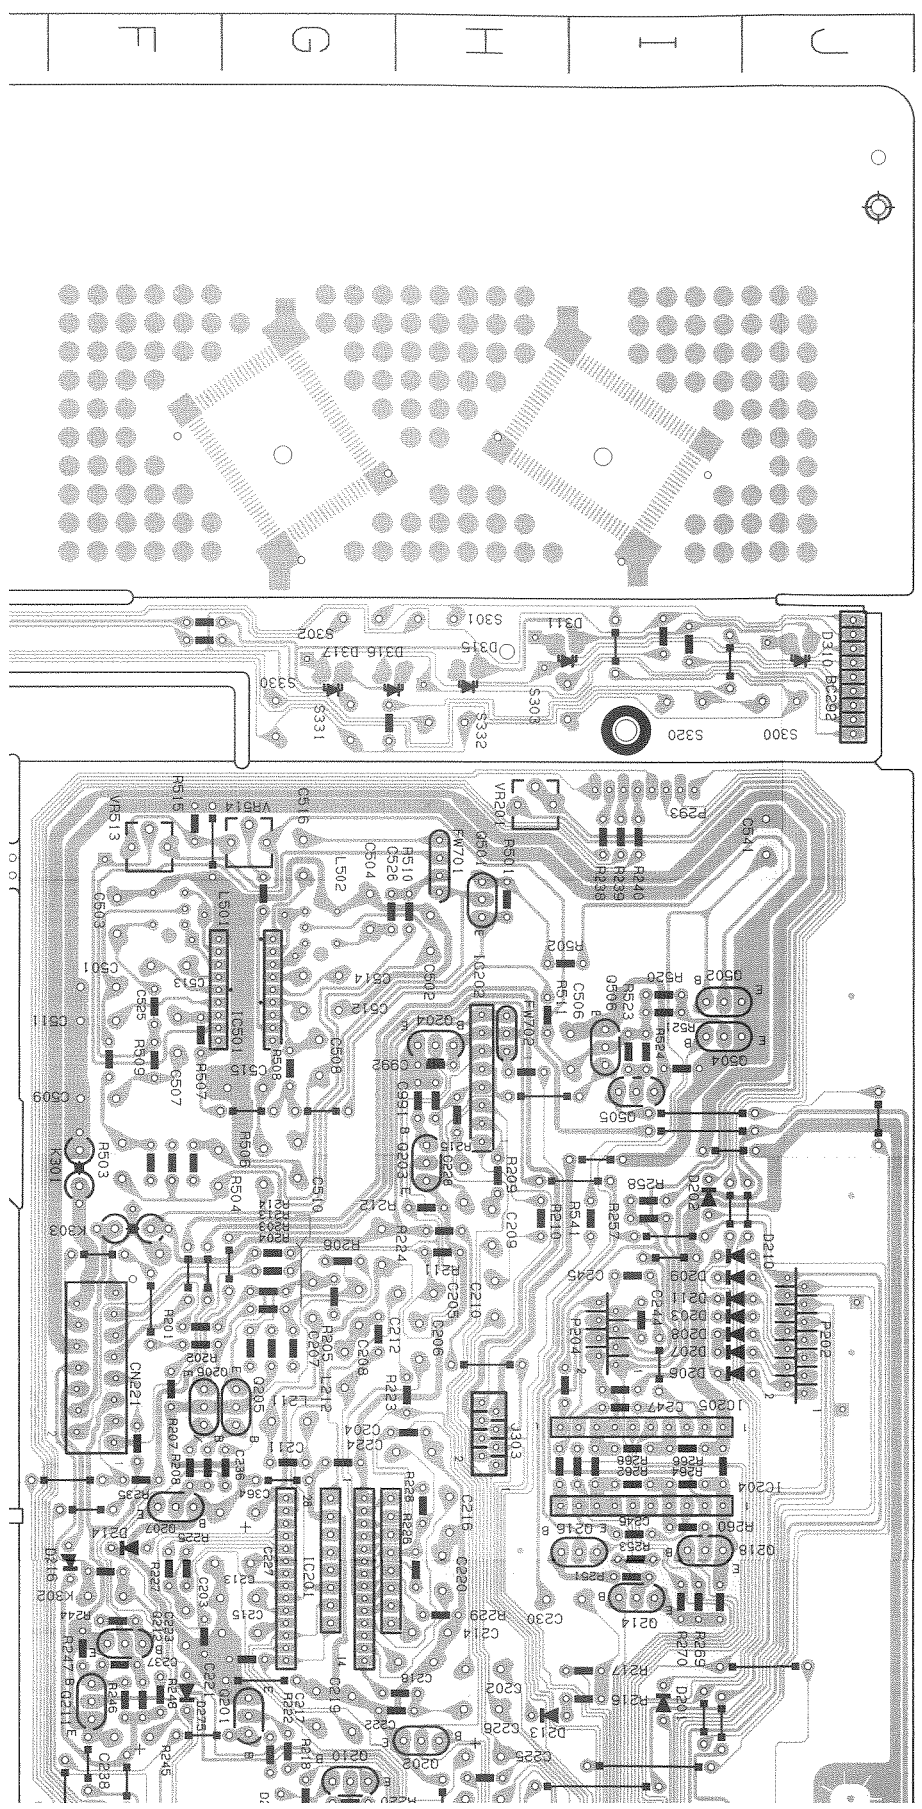

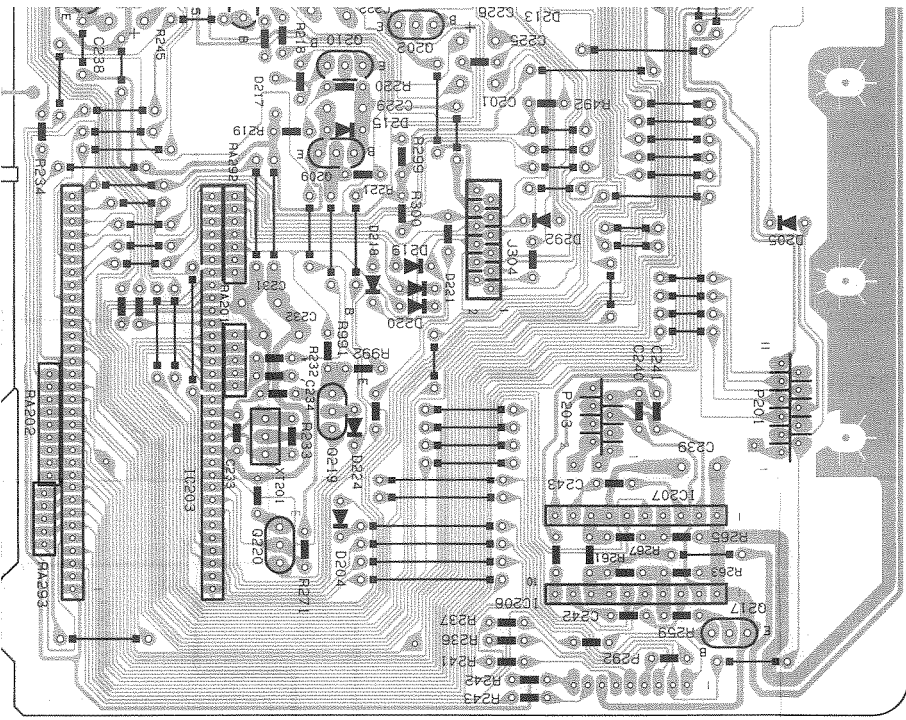


Location List (ENJ097)

| | | | | | | | | | | | |
|------|-----|------|------|------|-----|------|-----|------|------|------|-----|
| C101 | 7 J | C161 | 7 I | C214 | 4 C | J201 | 3 E | R165 | 7 C | R217 | 4 C |
| C101 | 7 E | C161 | 7 E | C214 | 4 G | J201 | 3 I | R165 | 7 G | R217 | 4 G |
| C102 | 7 E | C162 | 7 H | C221 | 3 E | J202 | 3 C | R166 | 7 G | R218 | 4 C |
| C102 | 7 I | C162 | 7 D | C221 | 3 I | J202 | 3 H | R166 | 7 C | R218 | 4 G |
| C103 | 8 I | C163 | 7 C | C222 | 3 E | J203 | 3 B | R167 | 7 H | R221 | 4 E |
| C103 | 8 E | C163 | 7 G | C222 | 3 I | J203 | 3 G | R167 | 7 D | R221 | 4 J |
| C104 | 8 I | C171 | 9 H | C223 | 3 D | R101 | 8 I | R168 | 7 C | R222 | 4 E |
| C104 | 8 E | C171 | 9 C | C223 | 3 H | R101 | 8 E | R168 | 7 H | R222 | 4 I |
| C105 | 8 I | C172 | 9 C | C224 | 3 G | R102 | 8 I | R171 | 9 C | R223 | 4 E |
| C105 | 8 E | C172 | 9 G | C224 | 3 B | R102 | 8 E | R171 | 9 H | R223 | 4 I |
| C106 | 8 I | C173 | 10 H | C231 | 6 G | R105 | 8 I | R172 | 9 C | R224 | 4 D |
| C106 | 8 E | C173 | 10 C | C231 | 6 C | R105 | 8 E | R172 | 9 G | R224 | 4 I |
| C107 | 7 I | C174 | 10 G | C232 | 6 C | R106 | 8 I | R173 | 9 C | R225 | 4 D |
| C107 | 7 E | C174 | 10 C | C232 | 6 G | R106 | 8 E | R173 | 9 H | R225 | 4 H |
| C111 | 8 E | C175 | 9 H | C233 | 6 C | R121 | 8 I | R174 | 9 C | R226 | 4 H |
| C111 | 8 J | C175 | 9 D | C233 | 6 G | R121 | 8 E | R174 | 9 G | R226 | 4 C |
| C112 | 8 I | C176 | 9 G | C234 | 6 C | R122 | 8 I | R177 | 9 C | R227 | 4 B |
| C112 | 8 E | C176 | 9 C | C234 | 6 G | R122 | 8 E | R177 | 9 H | R227 | 4 G |
| C121 | 8 I | C177 | 9 I | C235 | 6 G | R131 | 9 I | R178 | 9 G | R228 | 4 F |
| C121 | 8 E | C177 | 9 D | C235 | 6 B | R131 | 9 E | R178 | 9 C | R228 | 4 B |
| C122 | 8 I | C178 | 10 D | C236 | 6 G | R132 | 9 I | R179 | 10 I | R231 | 6 C |
| C122 | 8 E | C178 | 10 I | C236 | 6 B | R132 | 9 E | R179 | 10 E | R231 | 6 H |
| C131 | 9 I | C179 | 10 I | C241 | 5 D | R133 | 9 E | R180 | 10 I | R232 | 6 H |
| C131 | 9 E | C179 | 10 D | C241 | 5 H | R133 | 9 I | R180 | 10 E | R232 | 6 C |
| C132 | 9 I | C180 | 10 D | C242 | 5 D | R134 | 9 E | R191 | 8 B | R233 | 6 C |

P4-15-a


P4-15-b

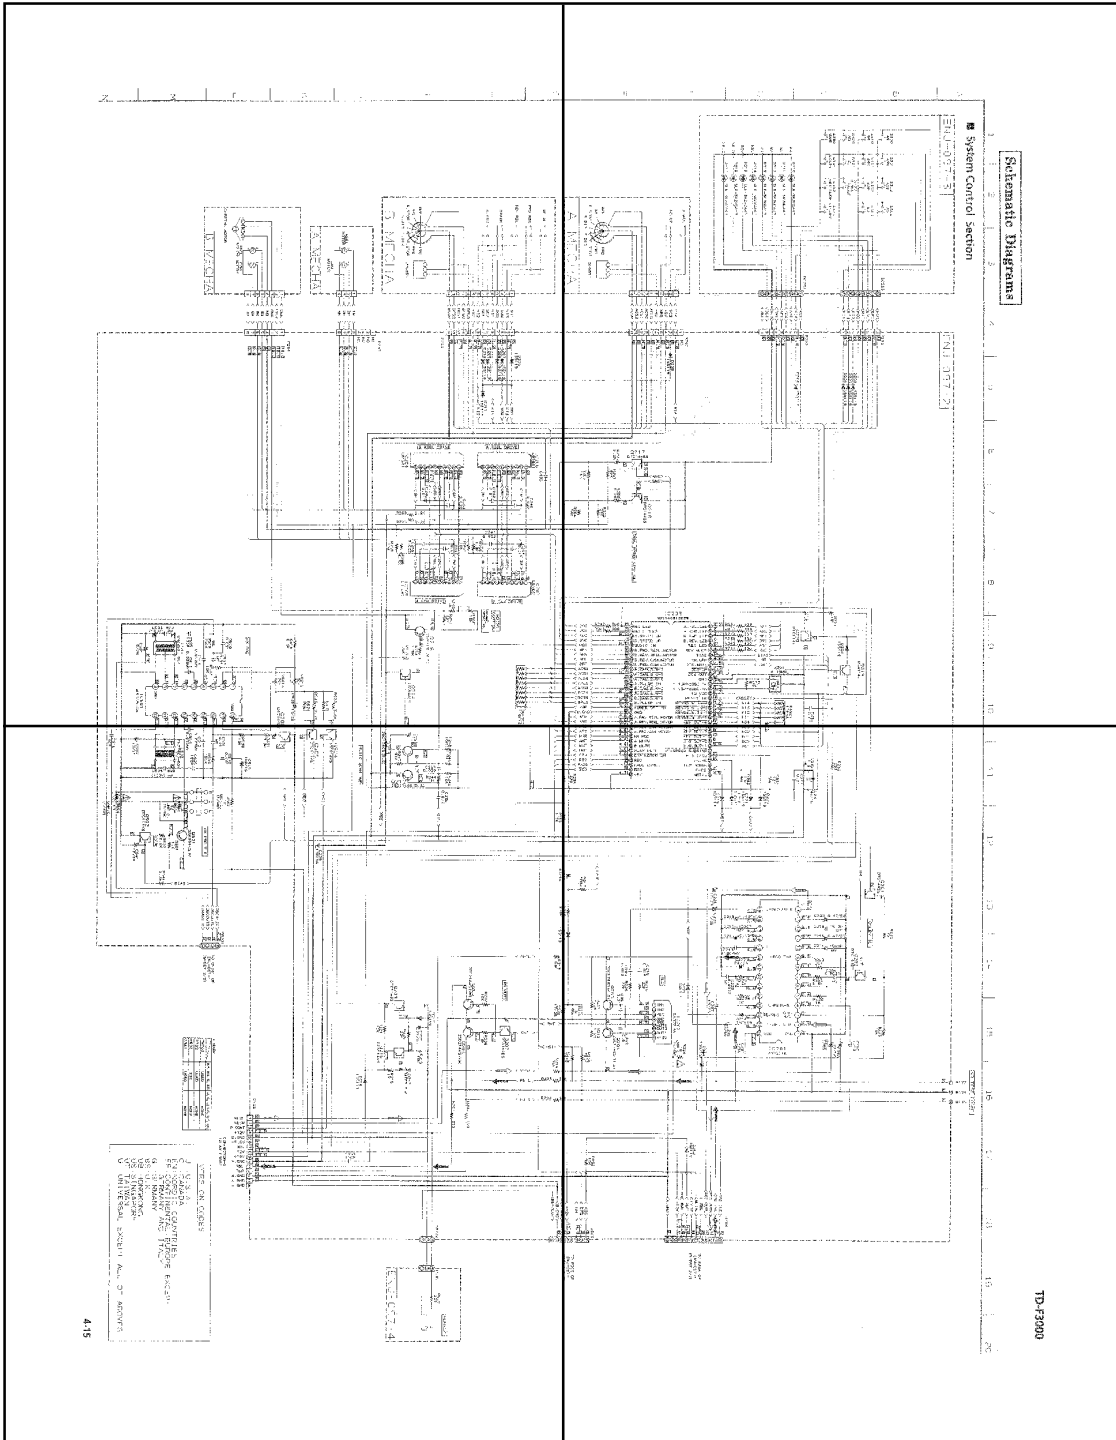

P4-15-c

P4-15-d

G
H
I
J
K
L
M
N
O

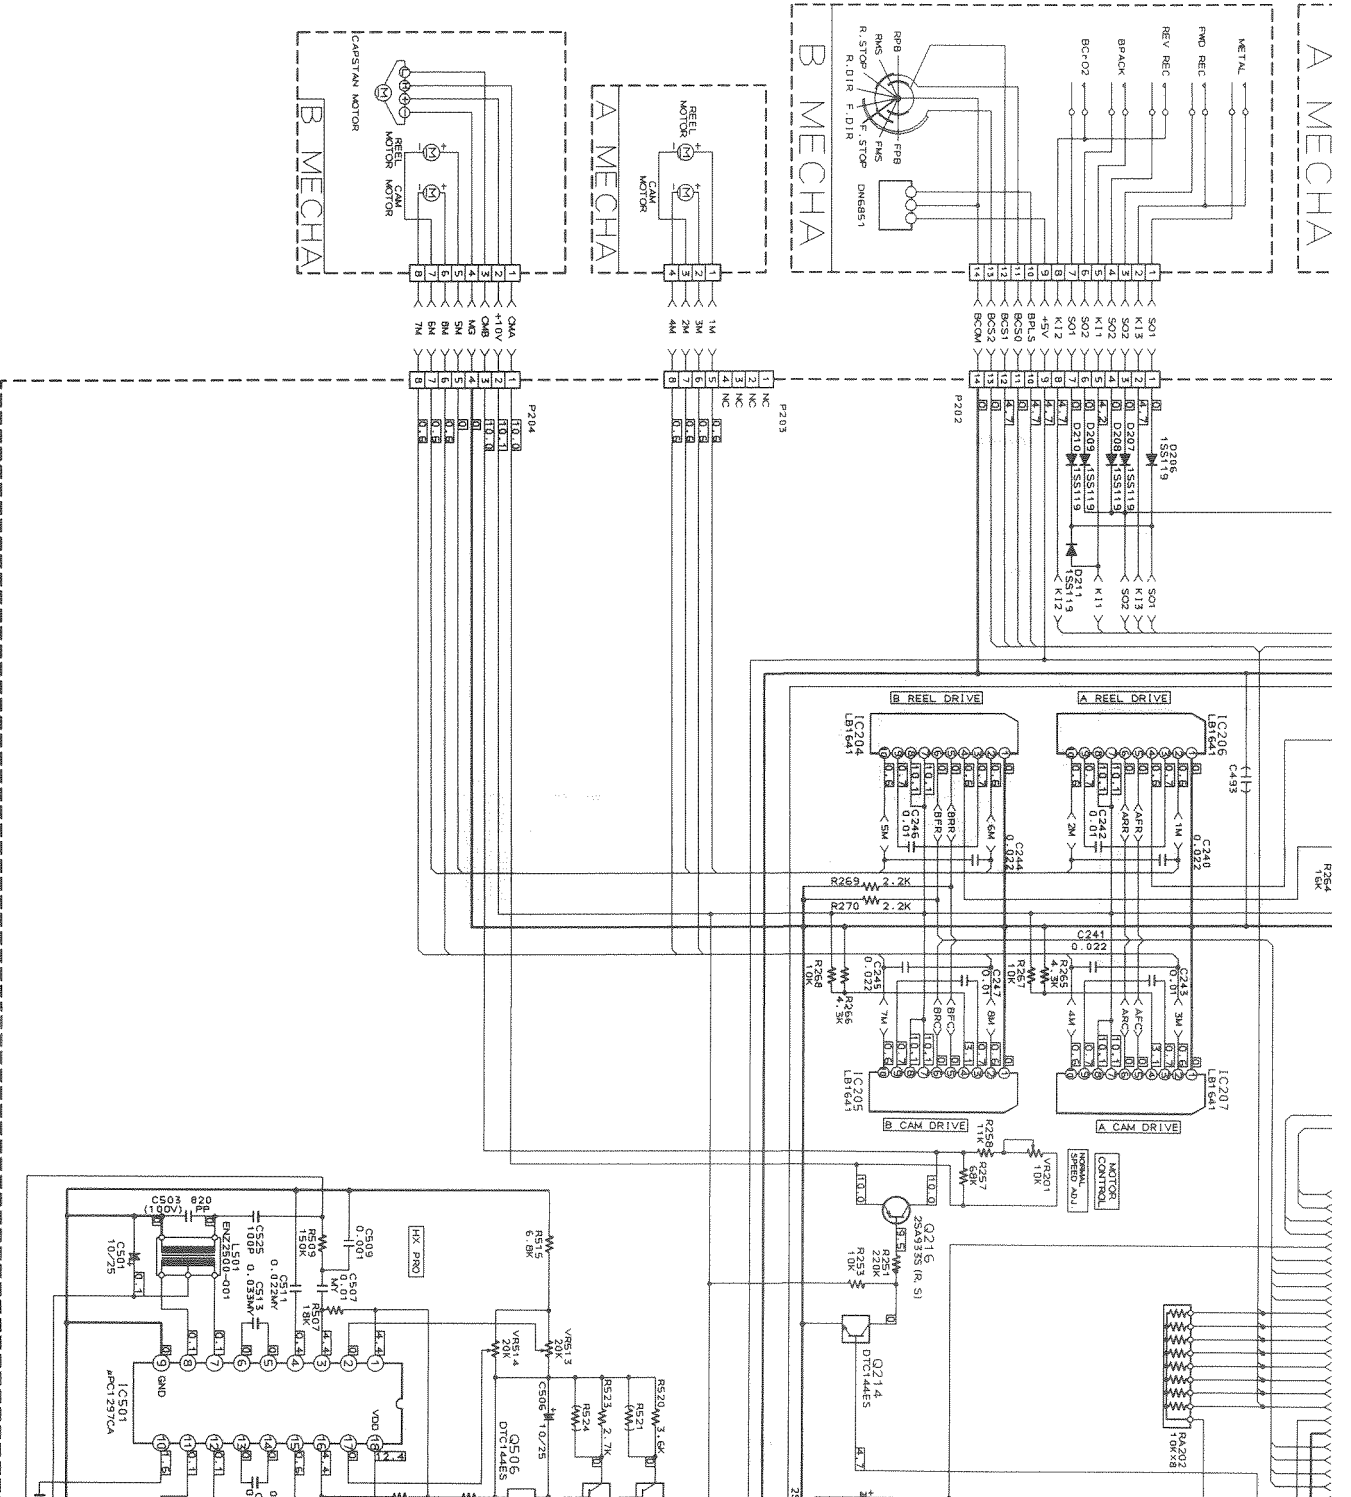


Schematic Diagrams


System Control Section

1 2 3 4 5 6 7 8 9 10

ENJ-097-3

ENJ-097-2

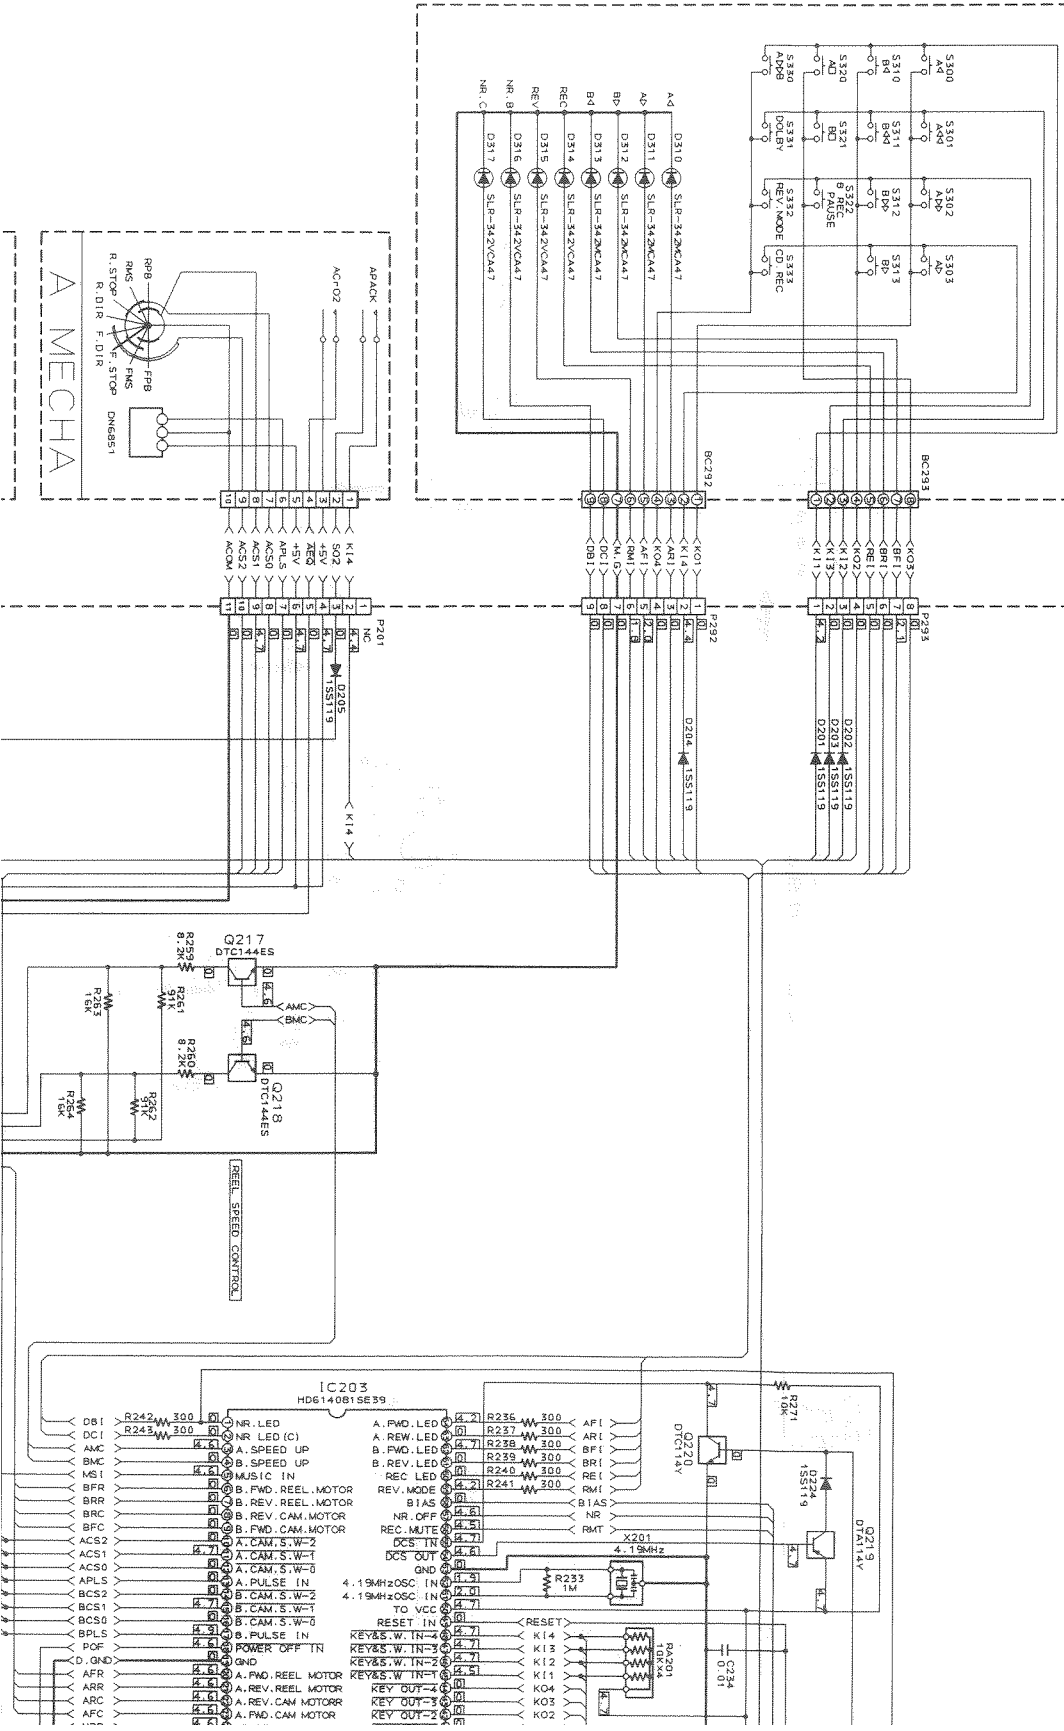

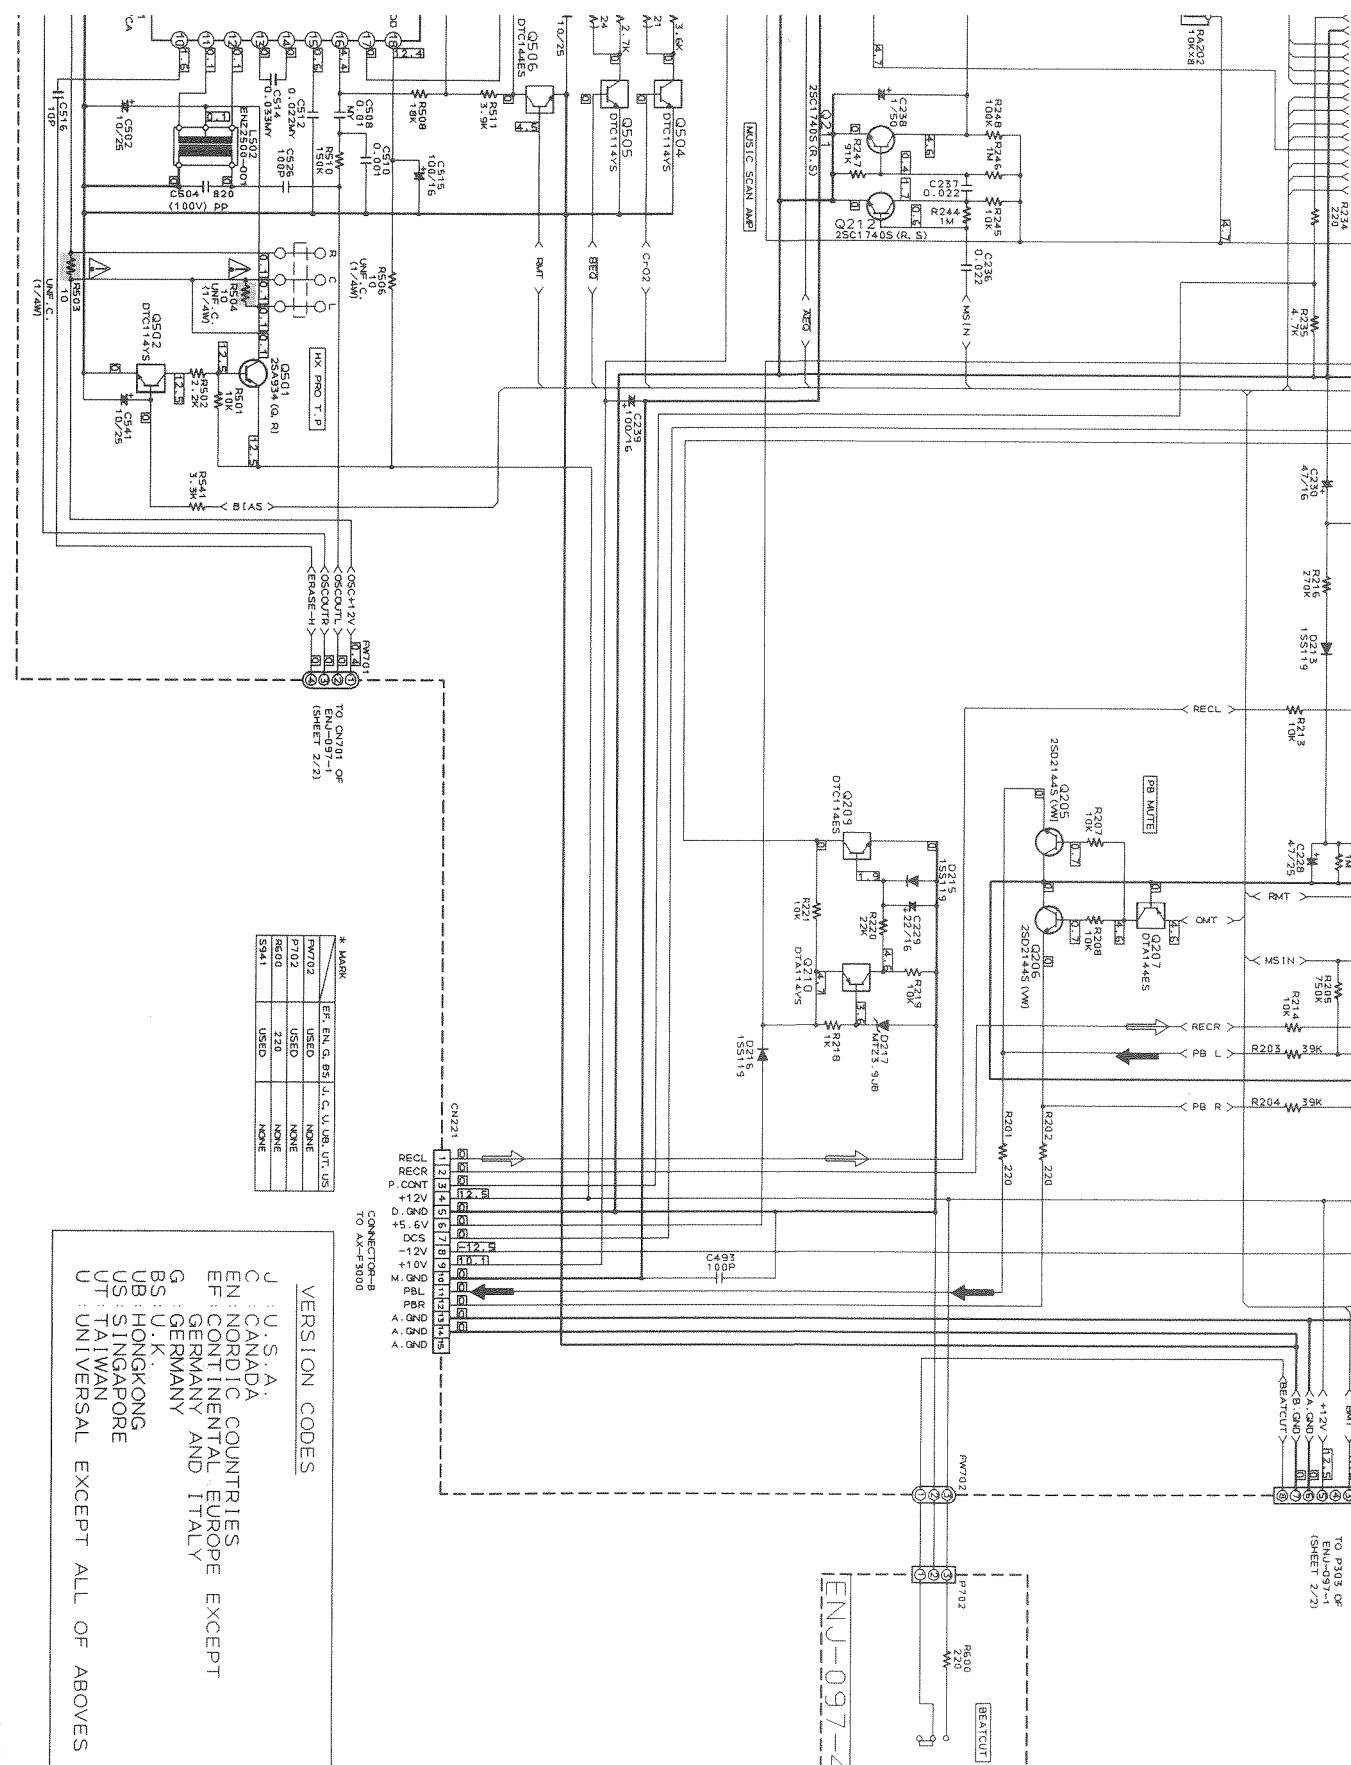


* MARK

| | | | | | | | | | |
|------|------|------|------|------|------|------|------|------|------|
| EF | EN | G | BS | J | C | U | UB | UT | US |
| USED | USED | USED | USED | NONE | NONE | NONE | NONE | NONE | NONE |
| PT02 | PT02 | PT02 | PT02 | PT02 | PT02 | PT02 | PT02 | PT02 | PT02 |
| 220 | 220 | 220 | 220 | 220 | 220 | 220 | 220 | 220 | 220 |
| 5341 | 5341 | 5341 | 5341 | 5341 | 5341 | 5341 | 5341 | 5341 | 5341 |

VERSION CODES


J : U.S.A.
 C : CANADA
 EN : NORDIC COUNTRIES
 EF : CONTINENTAL EUROPE EXCEPT
 G : GERMANY
 BS : U.K.
 UB : HONGKONG
 US : SINGAPORE
 UT : TAIWAN
 U : UNIVERSAL EXCEPT ALL OF ABOVE


NR TEST POINT

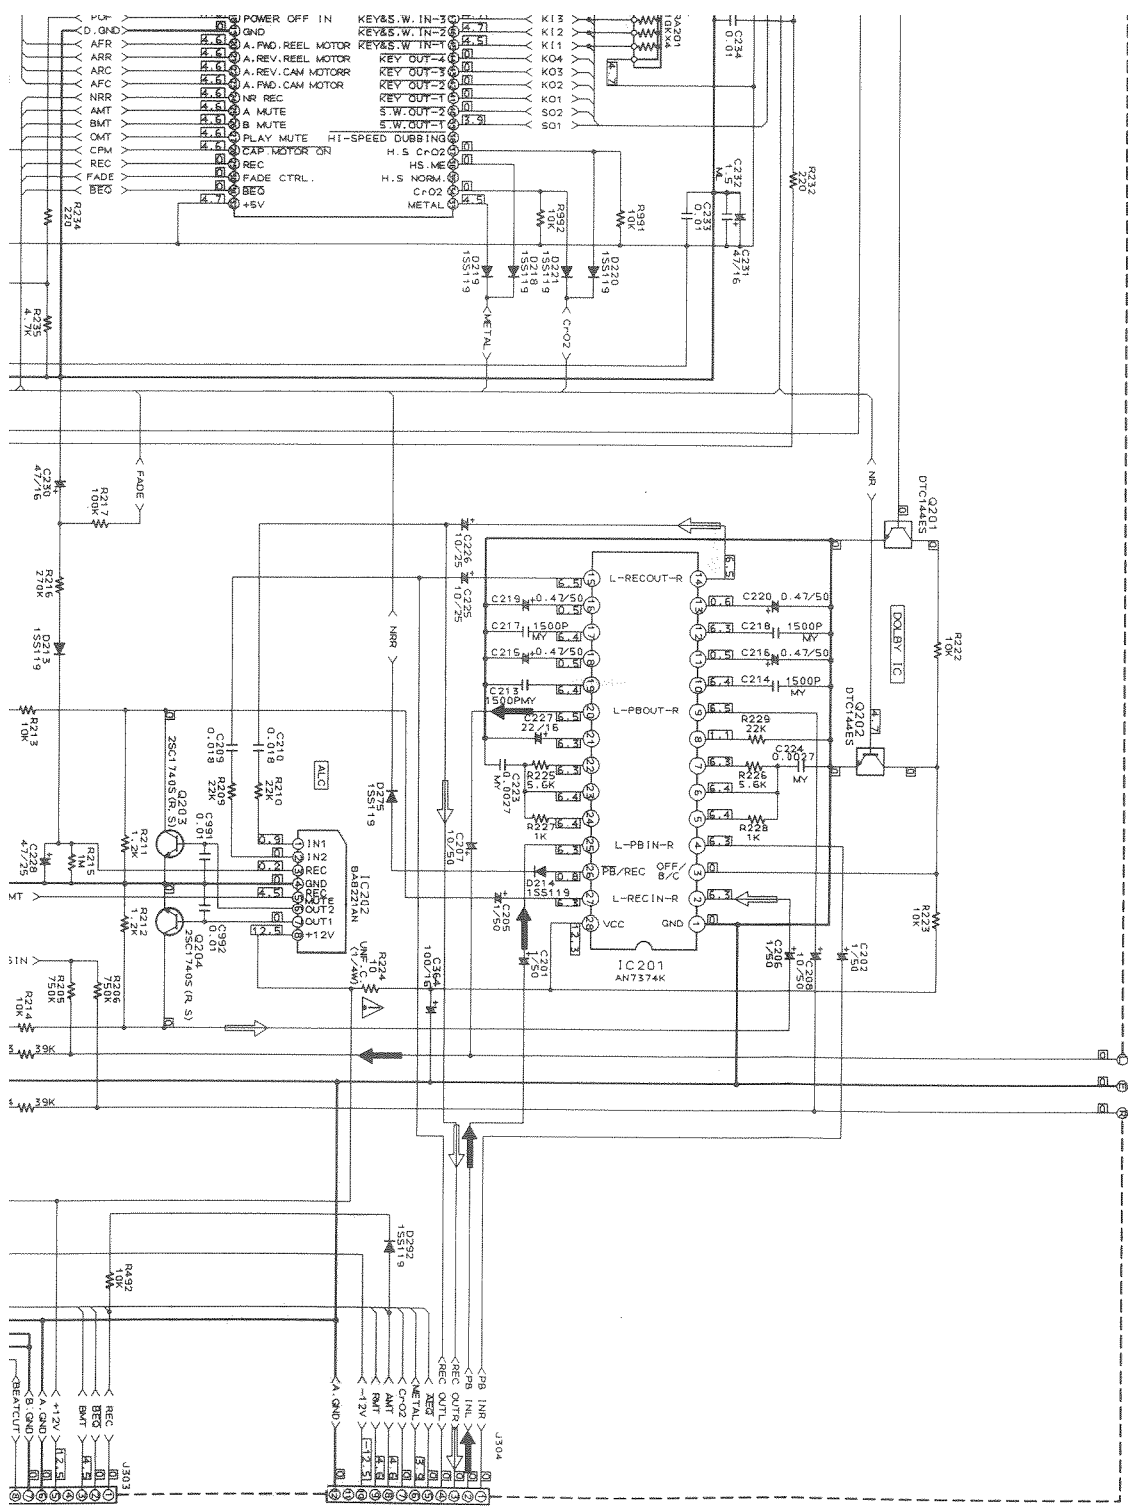

TO P304 OF
ENJ-097-1
(SHEET 2/2)

TO P105 OF
ENJ-097-1
(SHEET 2/2)

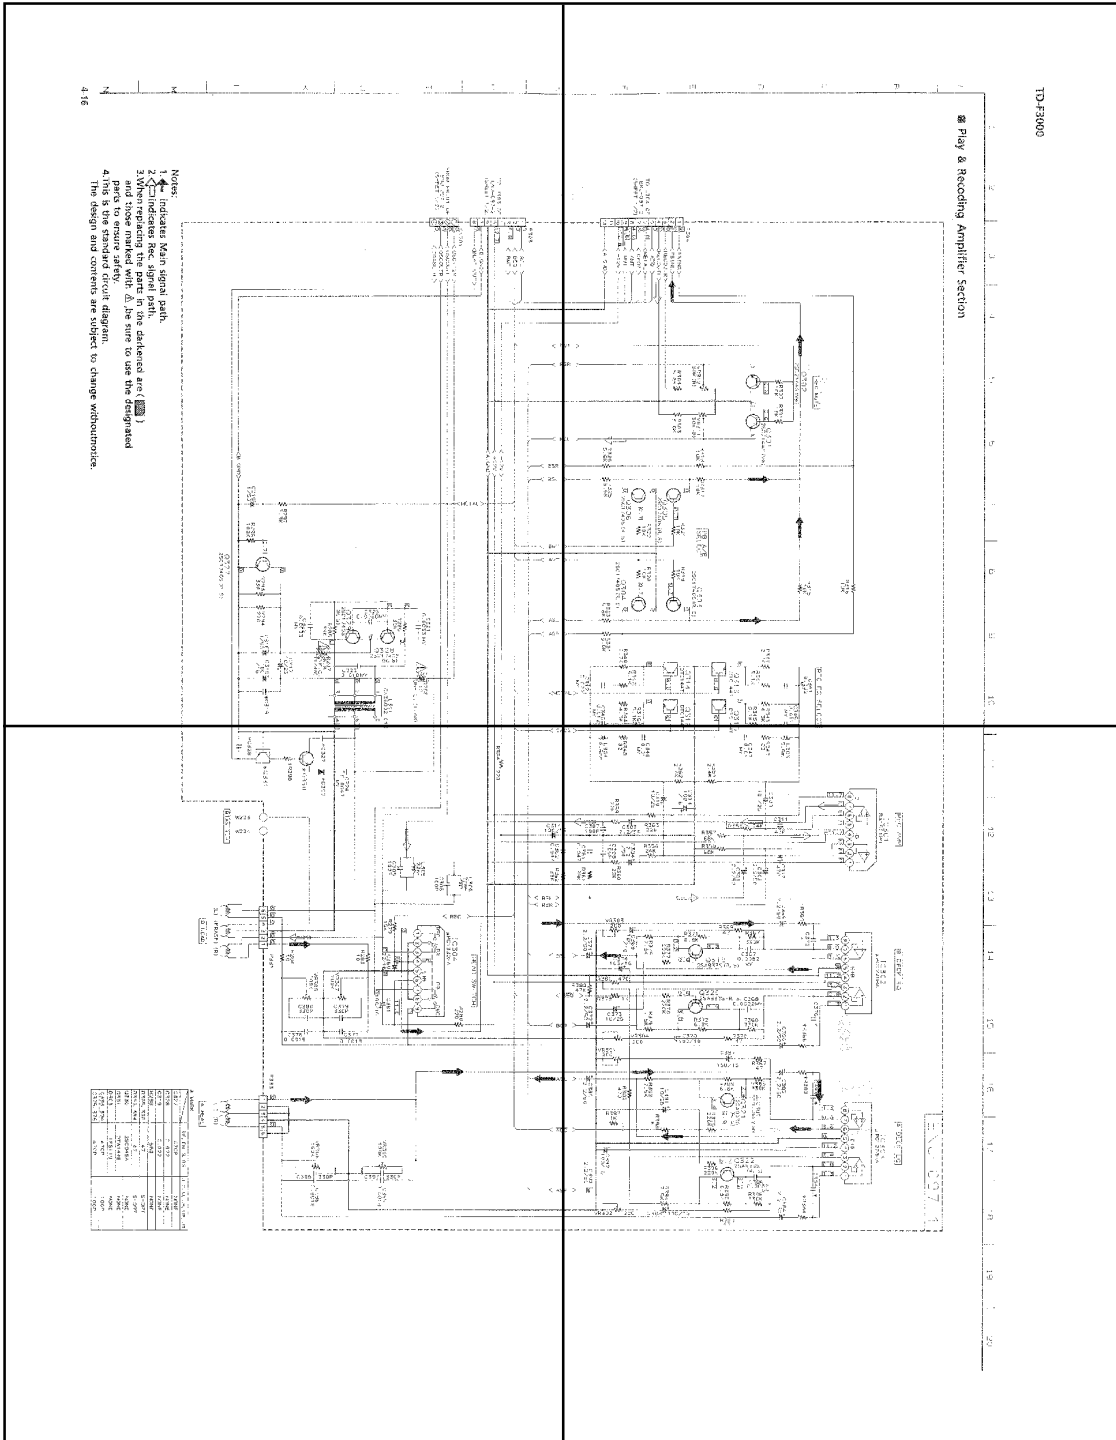


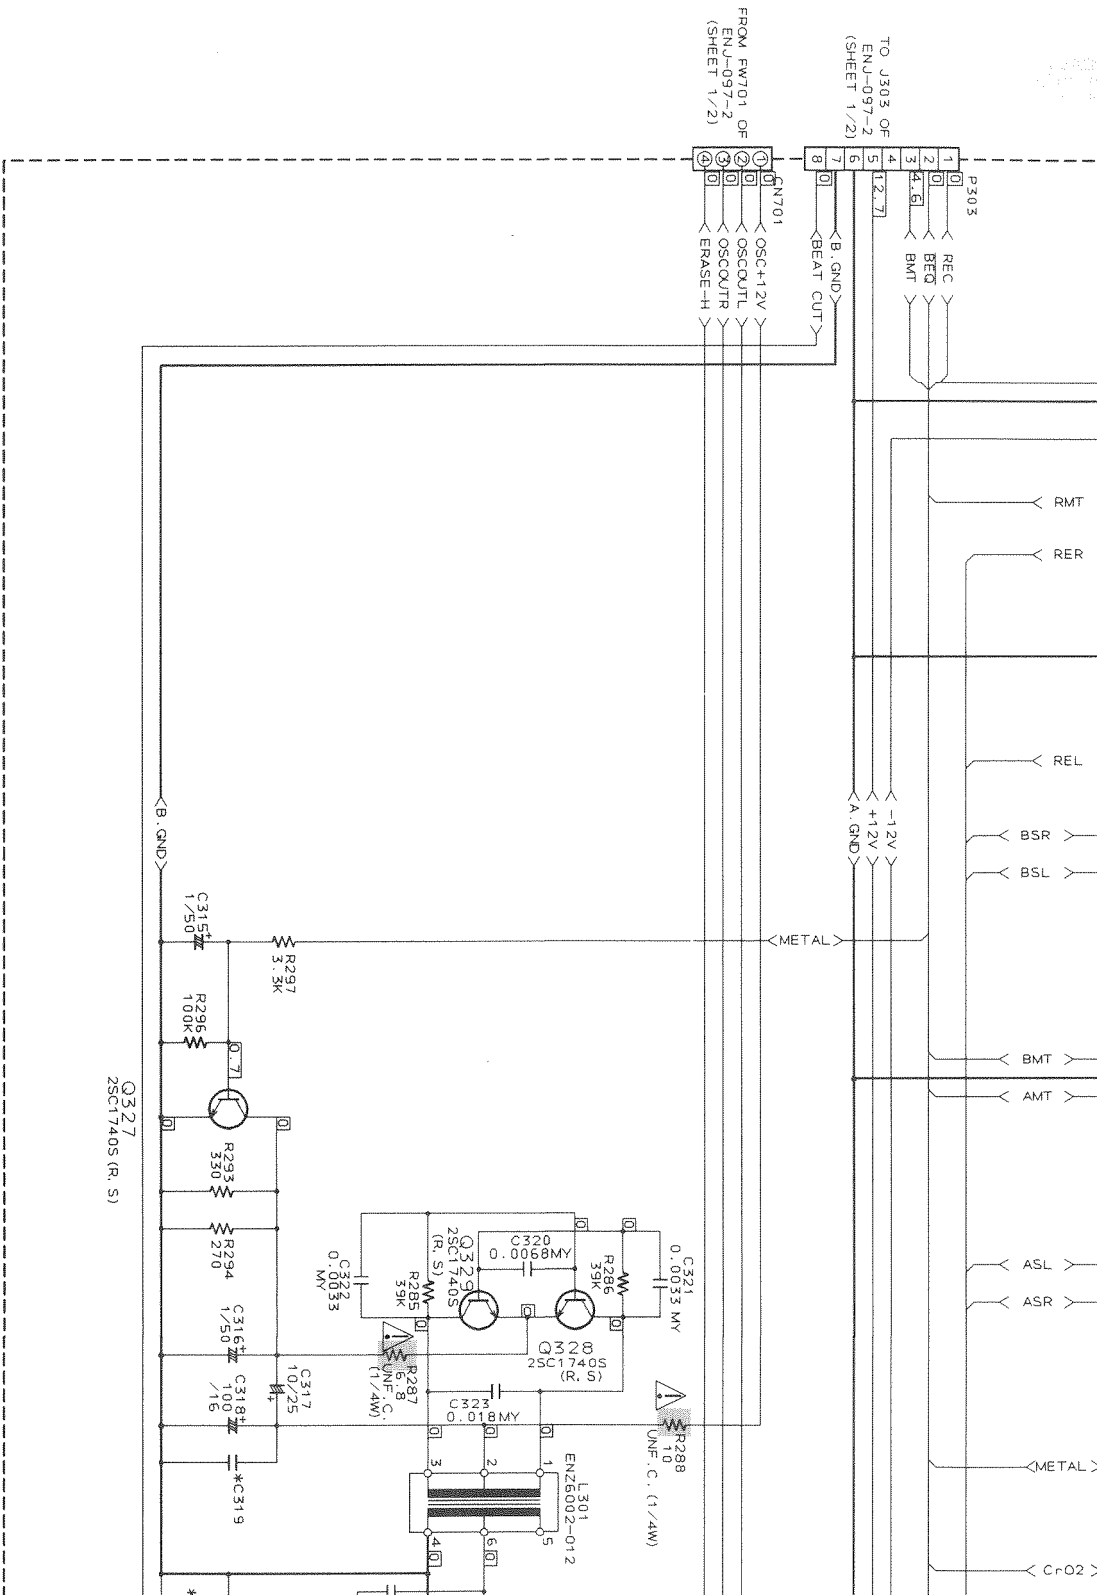


Notes:

1. indicates Main signal path.
2. indicates Rec. signal path.
3. When replacing the parts in the darkened area () and those marked with , be sure to use the designated parts to ensure safety.
4. This is the standard circuit diagram. The design and contents are subject to change without notice.

■ Play & Recoding Amplifier Section

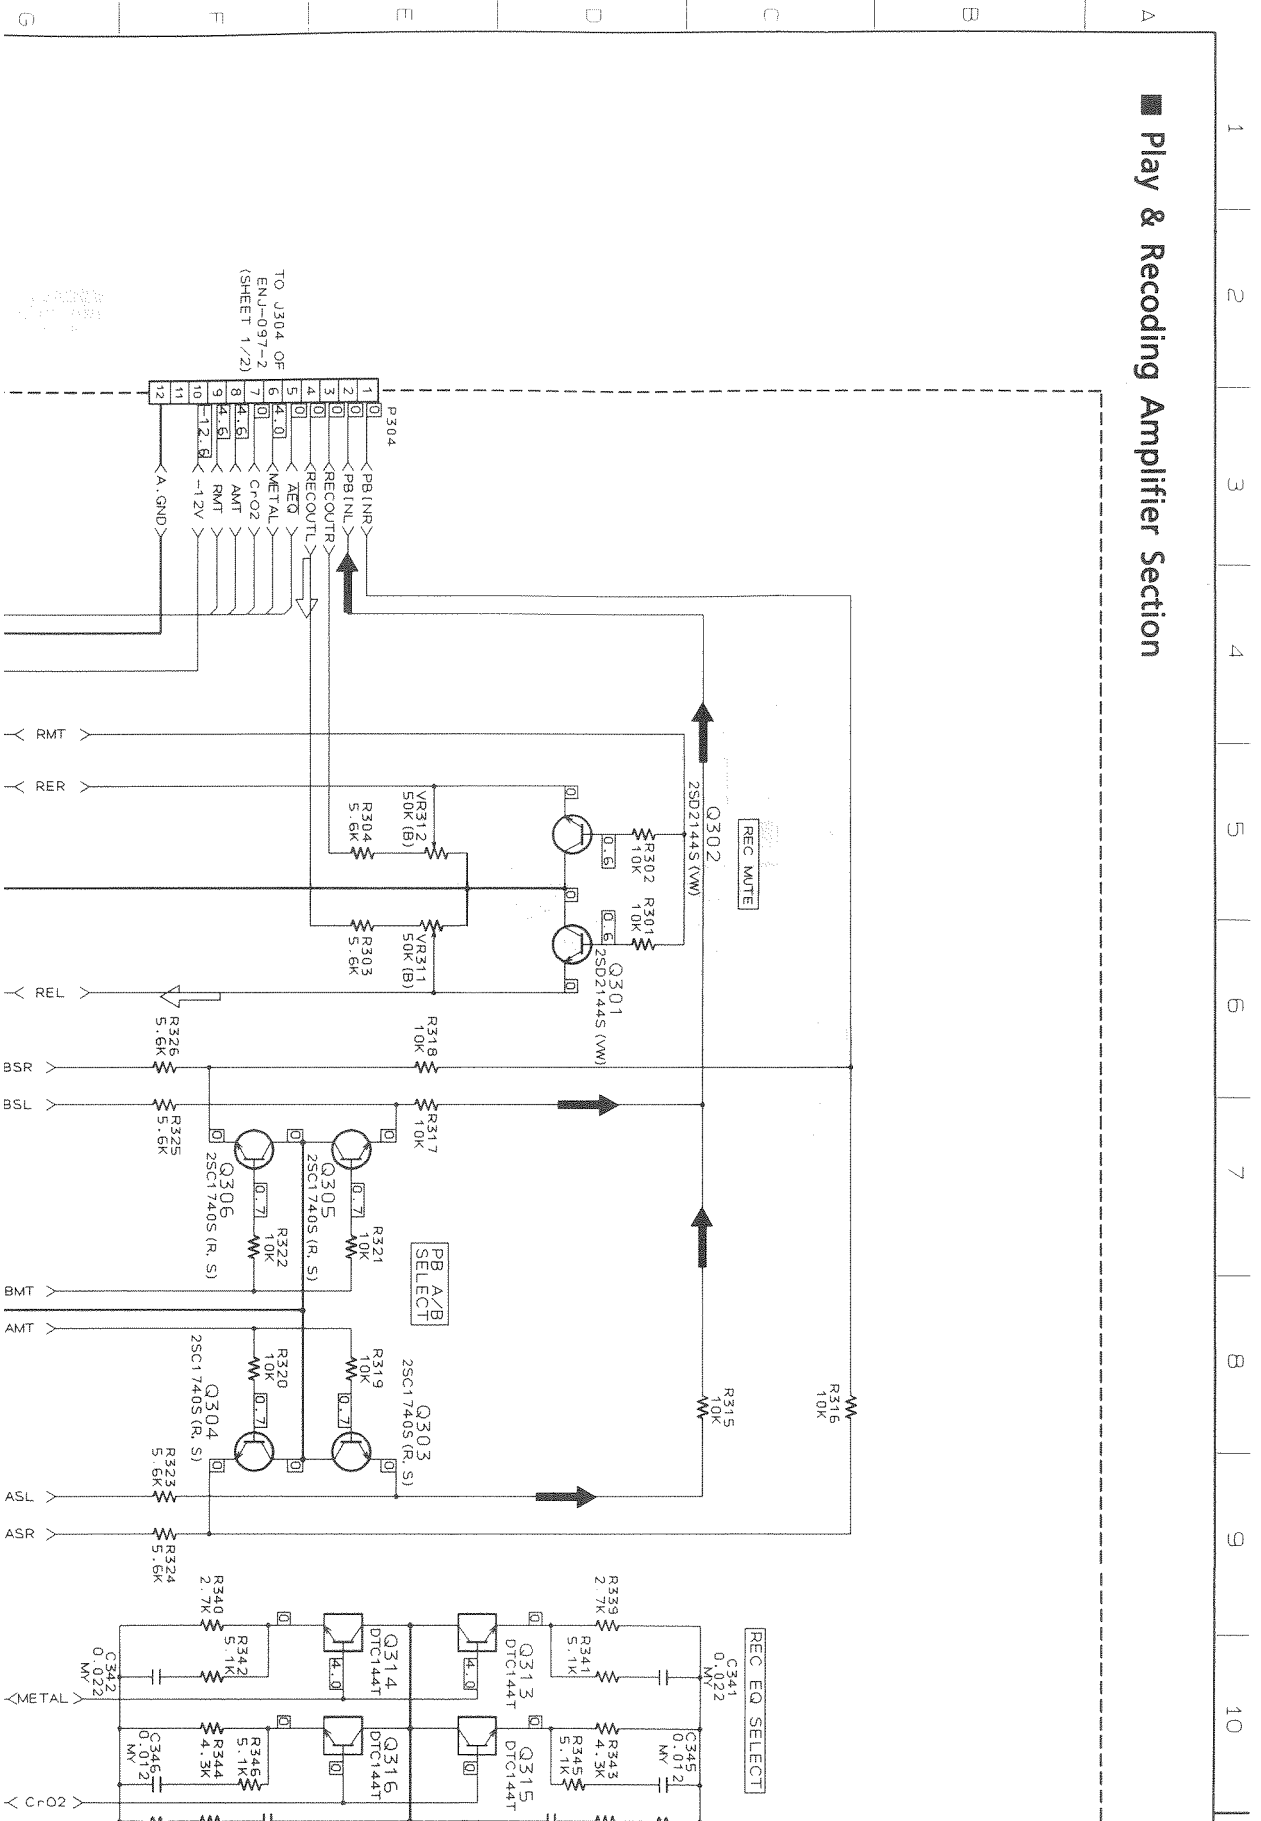


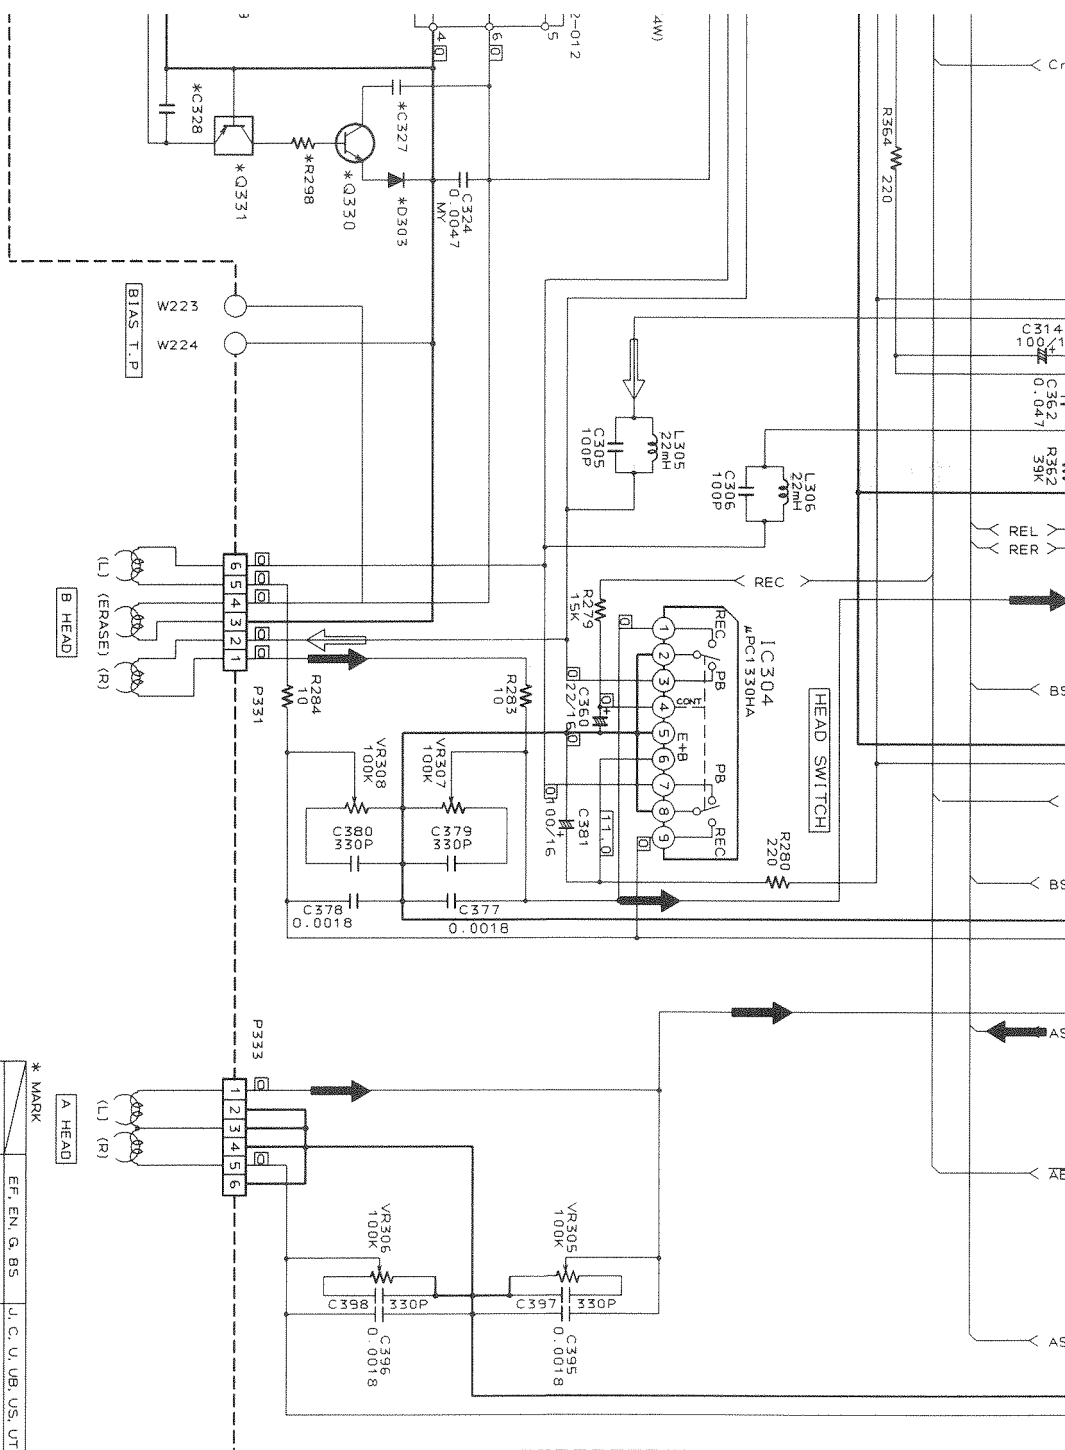

* MARK

| REF. | EN | G | BS | J | C | U | UB | US | UT |
|-----------|----|---|---------|---|---|---|----|----|-------|
| C327 | | | 4.70P | | | | | | NONE |
| C328 | | | 0.022 | | | | | | NONE |
| C319 | | | 0.022 | | | | | | NONE |
| R298 | | | 560 | | | | | | NONE |
| R365, 366 | | | 4.7 | | | | | | SHORT |
| R383, 384 | | | 4.7 | | | | | | SHORT |
| Q330 | | | 2SC945A | | | | | | NONE |
| Q331 | | | DTA144E | | | | | | NONE |
| D303 | | | 1SS119 | | | | | | NONE |
| C393, 394 | | | 4.70P | | | | | | 100P |
| C375, 376 | | | 4.70P | | | | | | 100P |

ENU-097-1

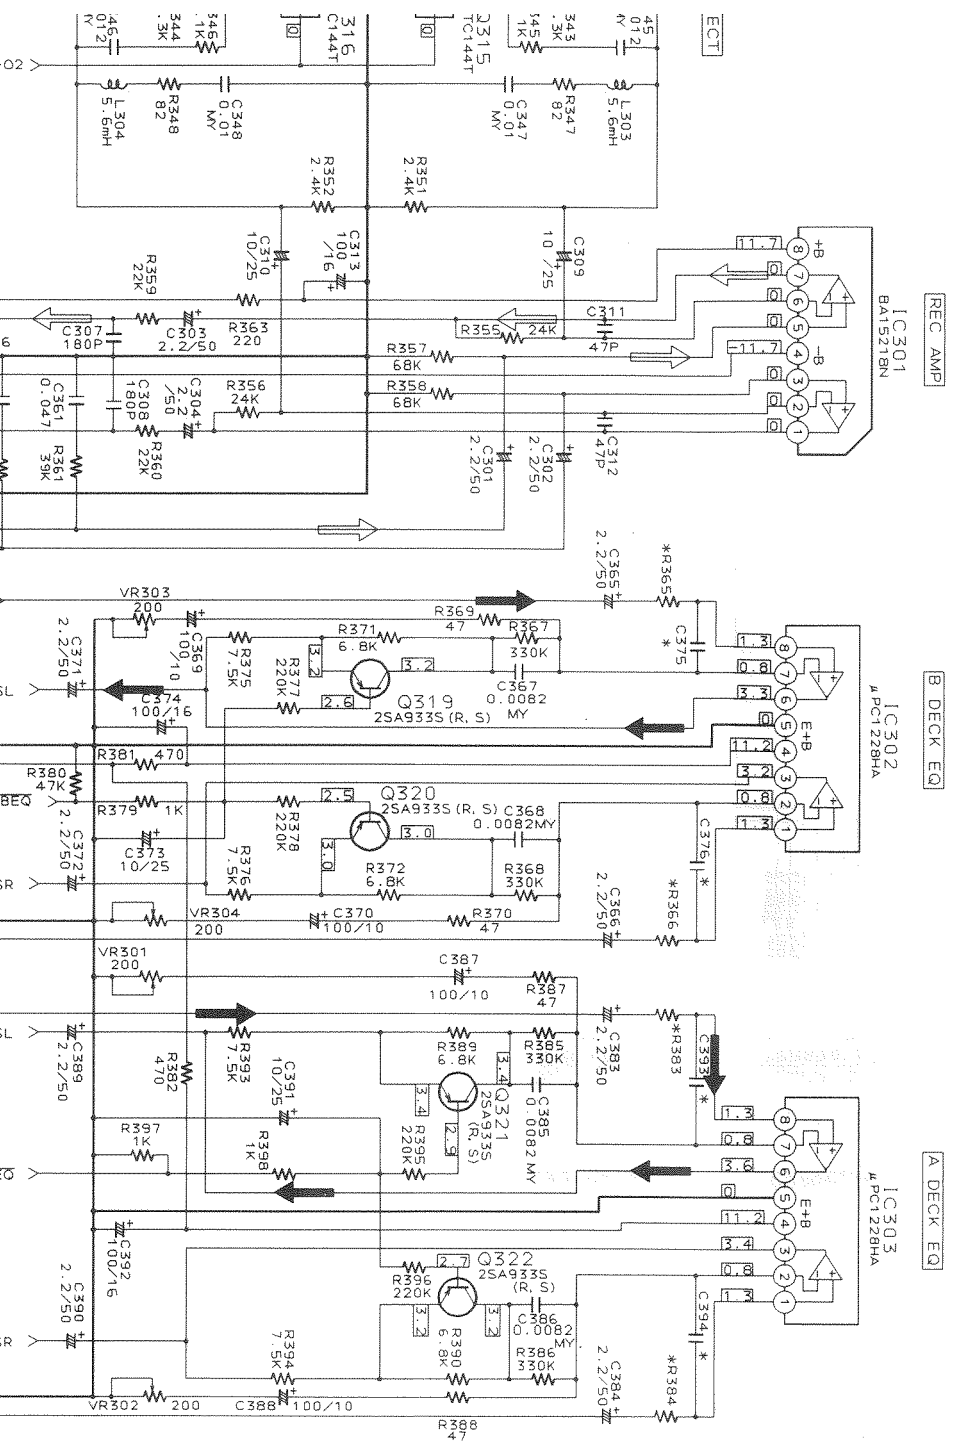

| |
|---|
| <p>FX-F3000 FX-F3000R</p> |
|---|

Contents

| | |
|---------------------------------------|------|
| <i>Description of Major ICs</i> | 5-2 |
| <i>Disassembly Procedures</i> | 5-8 |
| <i>Adjustment Procedures</i> | 5-9 |
| <i>Block Diagram</i> | 5-10 |
| <i>Printed Circuit Board</i> | 5-11 |
| <i>Schematic Diagrams</i> | 5-12 |

Description of Major LSIs

■ MN172124J6E (IC201) : SYSTEM CONTROLLER

1. Terminal Layout

| | |
|---------|----|
| 63 ~ 43 | |
| 64 | 42 |
| } | } |
| 84 | 22 |
| 1 ~ 21 | |

2. Key Matrix

※ :FX-F3000R

| | KEY IN 0 (PIN56) | KEY IN 1 (PIN57) | KEY IN2 (PIN58) | KEY IN3 (PIN59) |
|----------------------|--------------------------------|------------------------------|---------------------------------------|-----------------------------|
| KEY OUT 0 (PIN60) | MEMORY (S201) | CLOCK ADJ (S202) | REC (S203) | DAILY (S204) |
| KEY OUT 1 (PIN61) | TUNING/TIMER DOWN (S205) | TUNING/TIMER UP (S206) | P R E S E T / P T Y DOWN (S207) | PRESET /PTY UP (S208) |
| KEY OUT 2 (PIN62) | | | FM (S209) | AM (S210) |
| KEY OUT 3 (PIN63) | ※ DISPLAY (S211) | ※ EON ON/OFF (S212) | ※ EON MODE (S213) | ※ PTY SEARCH (S214) |

3. Description


| Pin No. | Symbol | I/O | Description | Pin No. | Symbol | I/O | Description |
|---------|--------|-----|--|---------|----------|-----|----------------------------|
| 1 | 7G | O | FL grid control | 43 | TUDATA | O | Data for PLL synthesizer |
| 2 | 6G | O | FL grid control | 44 | fout | O | Clock frequency |
| 3 | 5G | O | FL grid control | 45 | RDS CLK | I | Clock input from IC191 |
| 4 | 4G | O | FL grid control | 46 | RDS DATA | I | Data signal from IC191 |
| 5 | 3G | O | FL grid control | 47 | RDS RST | O | Reset signal for IC191 |
| 6 | 2G | O | FL grid control | 48 | INH | I | Inhibit signal input |
| 7 | 1G | O | FL grid control | 49 | RDS D.ST | I | D.Start signal from IC191 |
| 8 | P1 | O | FL anode control | 50 | TUNED | I | TUNED indication control |
| 9 | P2 | O | FL anode control | 51 | STEREO | I | STEREO indication control |
| 10 | P3 | O | FL anode control | 52 | MUTE | O | Muting tuner sound |
| 11 | P4 | O | FL anode control | 53 | | -- | Not used |
| 12 | P5 | O | FL anode control | 54 | DCS OUT | O | Compulink signal output |
| 13 | P6 | O | FL anode control | 55 | DCS IN | I | Compulink signal input |
| 14 | P7 | O | FL anode control | 56 | KI0 | I | Key matrix input |
| 15 | P8 | O | FL anode control | 57 | KI1 | I | Key matrix input |
| 16 | P9 | O | FL anode control | 58 | KI2 | I | Key matrix input |
| 17 | P10 | O | FL anode control | 59 | KI3 | I | Key matrix input |
| 18 | P11 | O | FL anode control | 60 | KO0 | O | Key matrix output |
| 19 | P12 | O | FL anode control | 61 | KO1 | O | Key matrix output |
| 20 | P13 | O | FL anode control | 62 | KO2 | O | Key matrix output |
| 21 | P14 | O | FL anode control | 63 | KO3 | O | Key matrix output |
| 22 | P15 | O | FL anode control | 64 | KO4 | O | Key matrix output |
| 23 | VP | -- | Power supply for FL display | 65 | KO5 | O | Key matrix output |
| 24 | P16 | O | FL anode control | 66 | KO6 | O | Key matrix output |
| 25 | P17 | O | FL anode control | 67 | KO7 | O | Key matrix output |
| 26 | P18 | O | FL anode control | 68 | RST | I | Reset signal input |
| 27 | P19 | O | FL anode control | 69 | | -- | GND |
| 28 | P20 | O | FL anode control | 70 | | -- | Not used |
| 29 | P21 | O | FL anode control | 71 | | -- | GND |
| 30 | P22 | O | FL anode control | 72 | OSC2 | I/O | Clock oscillation terminal |
| 31 | P23 | O | FL anode control | 73 | OSC1 | I/O | Clock oscillation terminal |
| 32 | P24 | O | FL anode control | 74 | VDD | -- | Power supply |
| 33 | P25 | O | FL anode control | 75 | TEST | I | TEST mode |
| 34 | P26 | O | FL anode control | 76 | FM IND. | O | FM indication control |
| 35 | P27 | O | FL anode control | 77 | AM IND. | O | AM indication control |
| 36 | P28 | O | FL anode control | 78 | P35 | O | FL anode control |
| 37 | P29 | O | FL anode control | 79 | P34 | O | FL anode control |
| 38 | P30 | O | FL anode control | 80 | P33 | O | FL anode control |
| 39 | P36 | O | FL anode control | 81 | P32 | O | FL anode control |
| 40 | CE | O | Chip enable signal for PLL synthesizer | 82 | P31 | O | FL anode control |
| 41 | CLK | O | Clock for PLL synthesizer | 83 | 9G | O | FL grid control |
| 42 | IFDATA | I | Data from PLL synthesizer | 84 | 8G | O | FL grid control |

■ LC72131M (IC121) : PLL Synthesizer

1. Terminal Layout

| | | | |
|-----------|----|----|----------|
| XIN | 1 | 20 | XOUT |
| CE | 2 | 19 | VSS |
| TDATA | 3 | 18 | LPF OUT |
| CK | 4 | 17 | LPF IN |
| IFDATA | 5 | 16 | PD |
| FM | 6 | 15 | VDD |
| MW | 7 | 14 | FM OSC |
| LW | 8 | 13 | AM OSC |
| AUTO/MONO | 9 | 12 | IF REQ |
| POWER | 10 | 11 | FM/AM IF |

2. Block Diagram

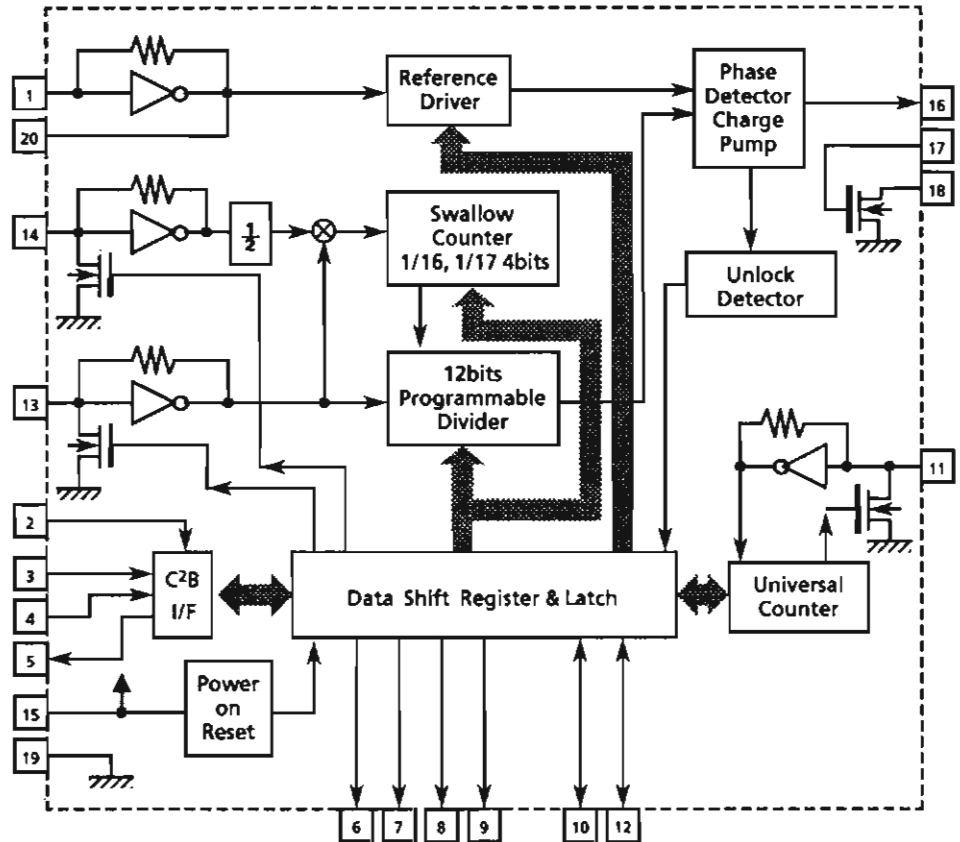

3. Pin Functions

| Pin No. | Symbol | I/O | Functions | Pin No. | Symbol | I/O | Functions |
|---------|-----------|-----|---|---------|----------|-----|--|
| 1 | Xin | I | Crystal oscillator (7.2MHz). | 11 | FM/AM IF | I | Universal counter input |
| 2 | CE | I | Fix the chip enable to "H" when inputting (DI) and outputting (DO) the serial data. | 12 | IF REQ | O | Output the "IF-signal request" to IC102 |
| 3 | TDATA | I | Receive the control data from the controller (IC201). | 13 | AM IN | I | Input the local oscillator signal of AM. |
| 4 | CK | I | This clock is used to synchronize data when transmitting the data of DI and DO. | 14 | FM IN | I | Input the local oscillator signal of FM. |
| 5 | IFDATA | O | Transmit the data from LC72131M to the controller which is synchronized with CK. | 15 | VDD | - | This is a terminal of power supply. |
| 6 | FM | O | It is "L" on FM mode. | 16 | PD | O | PLL charge pump output: When the local oscillator signal frequency is higher than the reference frequency high level signals will output. When it is lower than the reference frequency, low level signals will output. When it is same as reference frequency signals, it will be floating. |
| 7 | MW | O | It is "L" on MW mode. | 17 | LPF IN | I | Transistor used for the PLL active low-pass filter |
| 8 | LW | O | It is "L" on LW mode. | 18 | LPF OUT | O | Transistor used for the PLL active low-pass filter |
| 9 | AUTO/MONO | O | It is "L" on monaural, "H" on auto. | 19 | VSS | - | Connected to GND |
| 10 | POWER | O | Regulator control signal P ON "H", STANDBY "L" | 20 | X out | O | Crystal oscillator (7.2MHz). |

■ SAA6579T (IC192) : Radio data system demodulator (Used for FX-F3000R)


1. Terminal Layout

| | | | |
|-------|---|----|------|
| QUAL | 1 | 16 | RDCL |
| RDDA | 2 | 15 | T57 |
| Vref | 3 | 14 | OSCO |
| MUX | 4 | 13 | OSCI |
| VDDA | 5 | 12 | VDD |
| GND | 6 | 11 | GND |
| CIN | 7 | 10 | GND |
| SCOUT | 8 | 9 | GND |

2. Pin Function


| Pin No. | Symbol | I/O | Function |
|---------|--------|-----|--|
| 1 | QUAL | — | Non connection |
| 2 | RDDA | O | RDS data output |
| 3 | Vref | O | Reference voltage output |
| 4 | MUX | I | Multiplex signal input |
| 5 | VDDA | — | +5V supply voltage for analog part |
| 6 | GND | — | Ground for analog part (0V) |
| 7 | CIN | I | Subcarrier input to comparator |
| 8 | SCOUT | O | Subcarrier output of reconstruction filter |
| 9 | GND | — | Ground for digital part (0V) |
| 10 | GND | — | Ground for digital part (0V) |
| 11 | GND | — | Ground for digital part (0V) |
| 12 | VDD | — | +5V supply voltage for digital part |
| 13 | OSCI | I | Oscillator input |
| 14 | OSCO | O | Oscillator output |
| 15 | T57 | — | Non connection |
| 16 | RDCL | O | RDS clock output |

3. Block Diagram

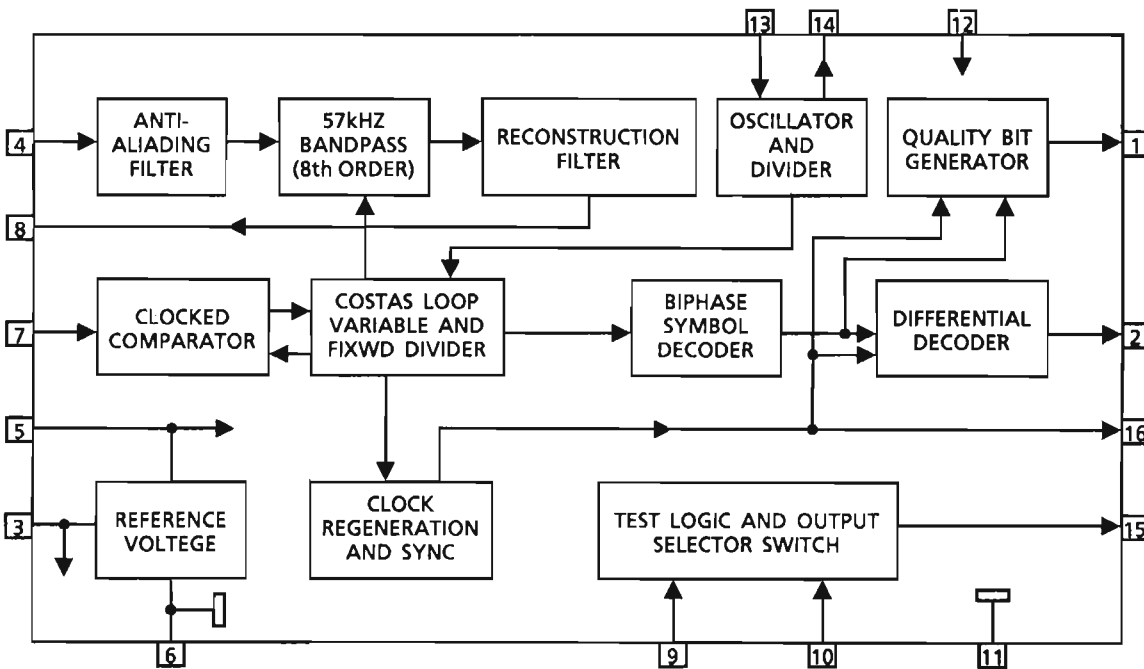

LA1836M (IC102) : FM AM IF AMP & detector, FM MPX Decoder


1. Terminal Layout

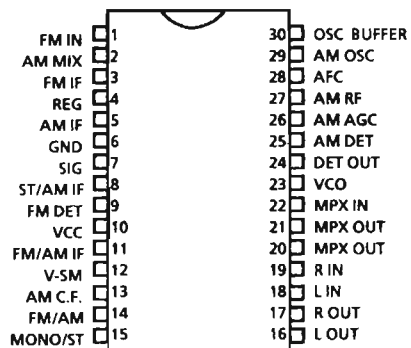

3. Pin Function


| Pin No. | Symbol | I/O | Function |
|---------|-----------------|-----|---|
| 1 | FM IN | I | This is an input terminal of FM IF Signal. |
| 2 | AM MIX | O | This is an output terminal for AM mixer. |
| 3 | FM IF | I | Bypass of FM IF |
| 4 | REG | — | Register value between pin4 and pin28 desides the frequency width of the input signal. |
| 5 | AM IF | I | Input of AM IF Signal. |
| 6 | GND | — | This is the device ground terminal. |
| 7 | SIG | O | When the set is tuning ,this terminal becomes "L". |
| 8 | ST/AM IF | O | Stereo indicator output. Stereo : "L", Mono : "H" |
| 9 | FM DET | — | FM detect transformer. |
| 10 | VCC | — | This is the power supply terminal. |
| 11 | FM/AM IF //MUTE | O/I | When the signal of IF REQ of IC121(LC72131M) appear, the signal of FM/AM IF output. //Muting control input. |
| 12 | VSM | O | S Meter output and adjust AM SD sensitivity. |
| 13 | AM C.F. | O | This is a terminal of AM ceramic filter. |
| 14 | FM/AM | I | Change over the FM/AM input. "H" : FM, "L" : AM |
| 15 | MONO/ST | O | Stereo : "H", Mono : "L" |
| 16 | L OUT | O | Left channel signal output. |
| 17 | R OUT | O | Right channel signal output |
| 18 | L IN | I | Input terminal of the Left channel post AMP. |
| 19 | R IN | I | Input terminal of the Right channel post AMP. |
| 20 | MPX L OUT | O | Mpx Left channel signal output. |
| 21 | MPX R OUT | O | Mpx Right channel signal output. |
| 22 | MPX IN | I | Mpx input terminal. |
| 23 | VCO | I | Voltage controlled oscillator terminal. |
| 24 | DET OUT | O | AM/FM detection output. |
| 25 | AM DET | — | AM low cut adjustment. |
| 26 | AM AGC | I | This is an AGC voltage input terminal for AM. |
| 27 | AM RF | I | This is an input terminal for AM RF signal. |
| 28 | AFC | — | This is an output terminal of voltage for FM-AFC. |
| 29 | AM OSC | — | This is a terminal of AM Local oscillation circuit. |
| 30 | OSC BUFFER | O | AM Local oscillation signal output. |

2. Block Diagram

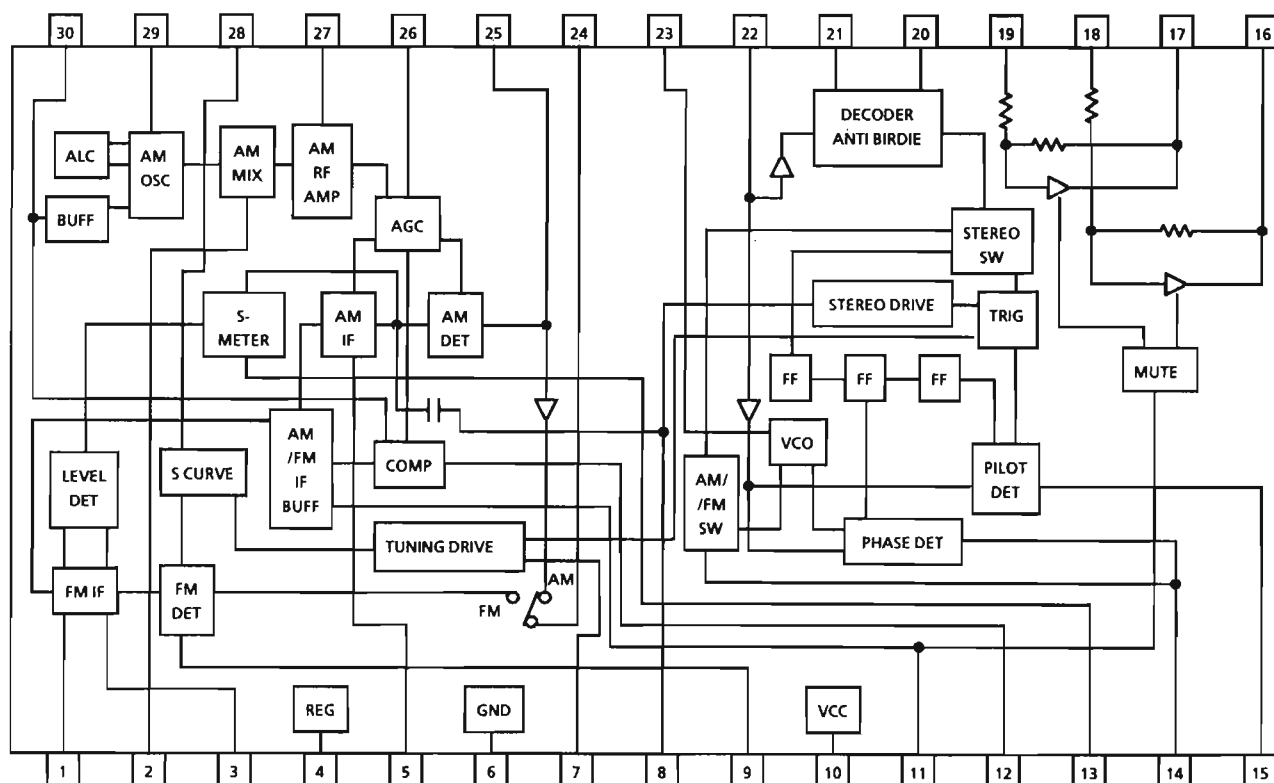


■ LC7073M (IC191) : Radio Data System (Used for FX-F3000R)

1. Terminal Layout

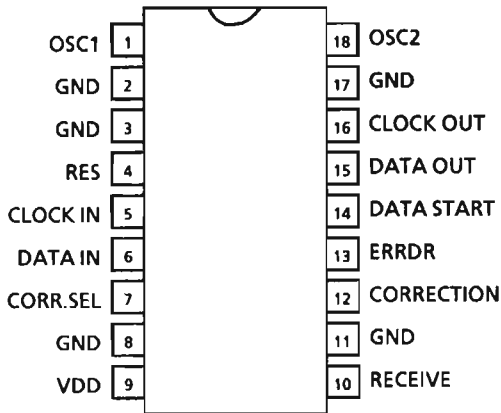

2. Block Diagram

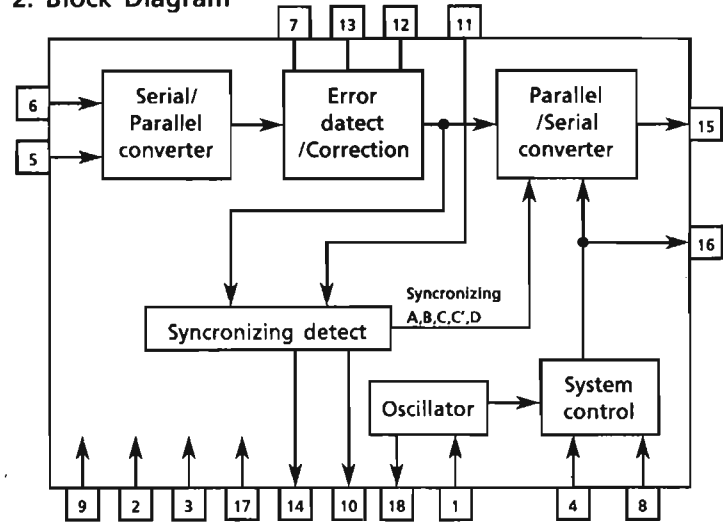



3. Pin Functions

| Pin No. | Symbol | I/O | Function | Pin No. | Symbol | I/O | Function |
|---------|----------|-----|----------------------|---------|------------|-----|--|
| 1 | OSC1 | I | Oscillation terminal | 10 | RECEIVE | — | Non connection |
| 2 | GND | — | GND | 11 | GND | — | GND |
| 3 | GND | — | GND | 12 | CORRECTION | — | Non connection |
| 4 | RES | I | Reset input | 13 | ERRDR | — | Non connection |
| 5 | CLOCK IN | I | RDS clock input | 14 | DATA START | O | Data start signal for block data to output serial data |
| 6 | DATA IN | I | RDS data input | 15 | DATA OUT | O | Serial data output |
| 7 | CORR.SEL | I | Non connection | 16 | CLOCK OUT | O | Data output of serial data output |
| 8 | GND | — | GND | 17 | GND | — | GND |
| 9 | VDD | — | Power supply | 18 | OSC2 | O | Oscillation terminal |

Internal Connections of the FL Display

■ ELU0001-205 : (DI201)

1. Grid Assignment

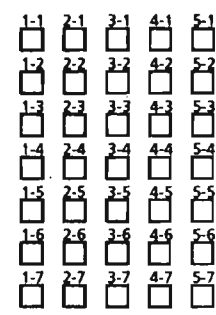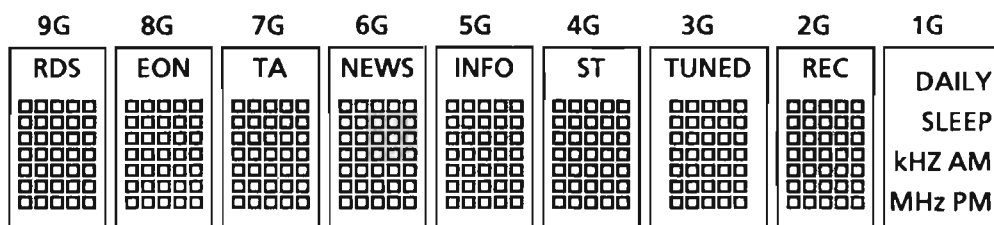

(9G~2G)

2. Pin Connection

| | | | | | | | | | | | | | | | | | | | | | | | | |
|------------|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Pin No. | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| Connection | F1 | F1 | F1 | NP | NP | NC | P31 | P30 | P29 | P28 | P27 | P26 | P25 | P24 | P23 | P22 | P21 | P20 | P19 | P18 | P17 | P16 | P15 | P14 |

| | | | | | | | | | | | | | | | | | | | | | | | | |
|------------|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| Pin No. | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 |
| Connection | P13 | P12 | P11 | P10 | 9P | P8 | P7 | NP | NP | F2 | F2 | F2 | F2 | F2 | F2 | NP | NP | IC | P6 | P5 | P4 | P3 | P2 | P1 |

| | | | | | | | | | | | | | | | | | | | | | | | | |
|------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|----|----|----|----|----|
| Pin No. | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 |
| Connection | NC | NC | NC | NC | NC | 1G | 2G | 3G | 4G | 5G | 6G | 7G | 8G | 9G | P36 | P35 | P34 | P33 | P32 | NP | NP | F1 | F1 | F1 |

(NOTE) F1,F2 : Filament, NP : No pin, NC : No connection, 1G~9G : Grid, P : Anode IC : Internal connection,

3. Anode Connection

| | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G | | 9G | 8G | 7G | 6G | 5G | 4G | 3G | 2G | 1G | |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|-----|-----|-----|-----|------|------|-----|-------|-----|-----|---|
| P1 | 1-1 | 1-1 | 1-1 | 1-1 | 1-1 | 1-1 | 1-1 | 1-1 | DAILY | P19 | 4-4 | 4-4 | 4-4 | 4-4 | 4-4 | 4-4 | 4-4 | 4-4 | 4-4 | — |
| P2 | 2-1 | 2-1 | 2-1 | 2-1 | 2-1 | 2-1 | 2-1 | 2-1 | SLEEP | P20 | 5-4 | 5-4 | 5-4 | 5-4 | 5-4 | 5-4 | 5-4 | 5-4 | 5-4 | — |
| P3 | 3-1 | 3-1 | 3-1 | 3-1 | 3-1 | 3-1 | 3-1 | 3-1 | AM | P21 | 1-5 | 1-5 | 1-5 | 1-5 | 1-5 | 1-5 | 1-5 | 1-5 | 1-5 | — |
| P4 | 4-1 | 4-1 | 4-1 | 4-1 | 4-1 | 4-1 | 4-1 | 4-1 | PM | P22 | 2-5 | 2-5 | 2-5 | 2-5 | 2-5 | 2-5 | 2-5 | 2-5 | 2-5 | — |
| P5 | 5-1 | 5-1 | 5-1 | 5-1 | 5-1 | 5-1 | 5-1 | 5-1 | MHz | P23 | 3-5 | 3-5 | 3-5 | 3-5 | 3-5 | 3-5 | 3-5 | 3-5 | 3-5 | — |
| P6 | 1-2 | 1-2 | 1-2 | 1-2 | 1-2 | 1-2 | 1-2 | 1-2 | kHz | P24 | 4-5 | 4-5 | 4-5 | 4-5 | 4-5 | 4-5 | 4-5 | 4-5 | 4-5 | — |
| P7 | 2-2 | 2-2 | 2-2 | 2-2 | 2-2 | 2-2 | 2-2 | 2-2 | — | P25 | 5-5 | 5-5 | 5-5 | 5-5 | 5-5 | 5-5 | 5-5 | 5-5 | 5-5 | — |
| P8 | 3-2 | 3-2 | 3-2 | 3-2 | 3-2 | 3-2 | 3-2 | 3-2 | — | P26 | 1-6 | 1-6 | 1-6 | 1-6 | 1-6 | 1-6 | 1-6 | 1-6 | 1-6 | — |
| P9 | 4-2 | 4-2 | 4-2 | 4-2 | 4-2 | 4-2 | 4-2 | 4-2 | — | P27 | 2-6 | 2-6 | 2-6 | 2-6 | 2-6 | 2-6 | 2-6 | 2-6 | 2-6 | — |
| P10 | 5-2 | 5-2 | 5-2 | 5-2 | 5-2 | 5-2 | 5-2 | 5-2 | — | P28 | 3-6 | 3-6 | 3-6 | 3-6 | 3-6 | 3-6 | 3-6 | 3-6 | 3-6 | — |
| P11 | 1-3 | 1-3 | 1-3 | 1-3 | 1-3 | 1-3 | 1-3 | 1-3 | — | P29 | 4-6 | 4-6 | 4-6 | 4-6 | 4-6 | 4-6 | 4-6 | 4-6 | 4-6 | — |
| P12 | 2-3 | 2-3 | 2-3 | 2-3 | 2-3 | 2-3 | 2-3 | 2-3 | — | P30 | 5-6 | 5-6 | 5-6 | 5-6 | 5-6 | 5-6 | 5-6 | 5-6 | 5-6 | — |
| P13 | 3-3 | 3-3 | 3-3 | 3-3 | 3-3 | 3-3 | 3-3 | 3-3 | — | P31 | 1-7 | 1-7 | 1-7 | 1-7 | 1-7 | 1-7 | 1-7 | 1-7 | 1-7 | — |
| P14 | 4-3 | 4-3 | 4-3 | 4-3 | 4-3 | 4-3 | 4-3 | 4-3 | — | P32 | 2-7 | 2-7 | 2-7 | 2-7 | 2-7 | 2-7 | 2-7 | 2-7 | 2-7 | — |
| P15 | 5-3 | 5-3 | 5-3 | 5-3 | 5-3 | 5-3 | 5-3 | 5-3 | — | P33 | 3-7 | 3-7 | 3-7 | 3-7 | 3-7 | 3-7 | 3-7 | 3-7 | 3-7 | — |
| P16 | 1-4 | 1-4 | 1-4 | 1-4 | 1-4 | 1-4 | 1-4 | 1-4 | — | P34 | 4-7 | 4-7 | 4-7 | 4-7 | 4-7 | 4-7 | 4-7 | 4-7 | 4-7 | — |
| P17 | 2-4 | 2-4 | 2-4 | 2-4 | 2-4 | 2-4 | 2-4 | 2-4 | — | P35 | 5-7 | 5-7 | 5-7 | 5-7 | 5-7 | 5-7 | 5-7 | 5-7 | 5-7 | — |
| P18 | 3-4 | 3-4 | 3-4 | 3-4 | 3-4 | 3-4 | 3-4 | 3-4 | — | P36 | RDS | EON | TA | NEWS | INFO | ST | TUNED | REC | — | |

Disassembly Procedures

(1) Removing the top cover

1. Remove 2 screws **(A)** fastening both sides of top cover, and 4 screws **(B)** fastening the rear side.
2. Remove the top cover.

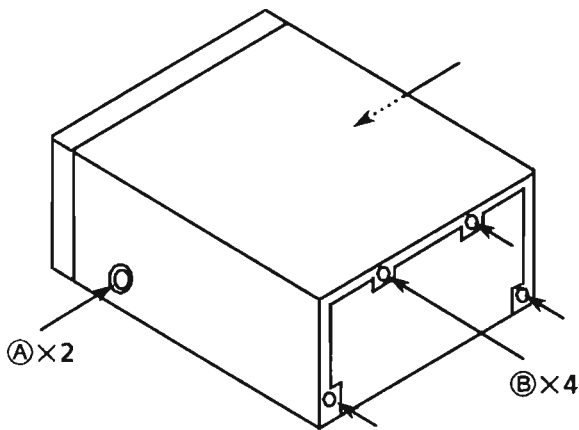


FIG. 1

(3) Removing the Front Panel Assembly

1. Removing the top cover.
2. Remove 2 screws **(C)** fastening bottom of the front panel.
3. Remove 2 hooks **(a)** fastening the assembly with chassis to remove the assembly.

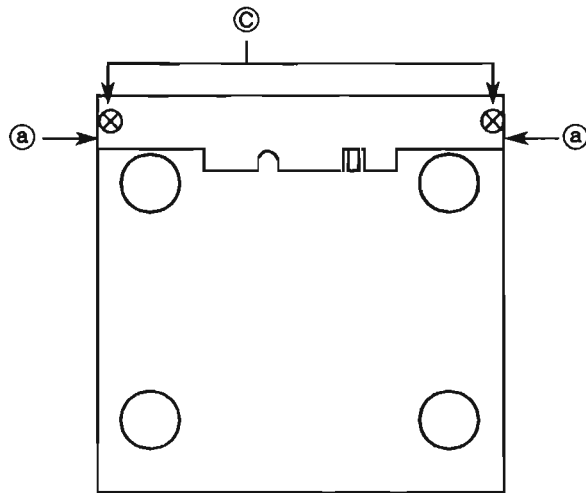


FIG. 2

(3) Removing the front circuit board

1. Removing the front panel assembly.
2. Remove 5 screws **(D)** to remove the front circuit board.(FX-F3000R : Remove a screw **(D')**)
3. Remove it.

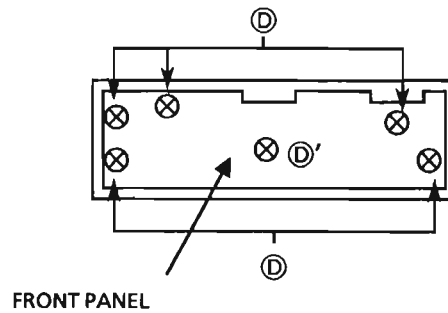


FIG. 3

(A) .. SDSG3008N **(B)** ... GBSG3008CC **(C)** ... SDSG3008CC **(D)** ... SDSF2608Z

Adjustment Procedures

Tuning range

| Area | Range | | |
|--|-----------|----------|----------------|
| | LW (kHz) | MW (kHz) | FM (MHz) |
| Continental Europe, the U.K | 144~288 | 522~1629 | 87.5MHz~108MHz |
| Universal type (AM Channel space 9kHz) | — | 531~1602 | |
| Universal type (AM Channel space 10kHz) | — | 530~1600 | |
| U.S.A,CANADA | — | 530~1710 | |

(1) Tuning voltage

Confirm the voltages in the table below at TP101.

FM Tuning voltage (Unit : V)

| Area | Frequency | |
|--|-----------|--------|
| | 87.5MHz | 108MHz |
| the U.K. , Continental Europe, Universal U.S.A & CANADA | 1.3 < | 9.0 > |

AM Tuning voltage (Unit : V)

| Area | Frequency (MW) | | | | | | | Frequency (LW) | |
|---------------------------------|----------------|--------|--------|---------|---------|---------|---------|----------------|----------|
| | 522KHz | 530KHz | 531KHz | 1600KHz | 1602KHz | 1629KHz | 1629KHz | 144kHz | 288kHz |
| the U.K. , Continental Europe | 0.8 < | — | — | — | — | <9.0 | — | 0.8 <1.0 | 6.5 <9.0 |
| Universal (Channel space 9kHz) | — | — | 0.8 < | — | 8.0 < | — | — | — | — |
| Universal (Channel space 10kHz) | — | 0.8 < | — | 8.0 < | — | — | — | — | — |
| U.S.A,CANADA | — | 0.8 < | — | — | — | — | <9.0 | — | — |



(2) FM center meter

Receive a broadcast by using the function of 'AUTO STOP'.


Adjust T141 (detector coil) so that the voltage at TP102 becomes $0 \pm 1.5mV$.

(3) Clock Adjustment

1. After connecting B154 and B155 with some wire as shown in figure below, connect the AC power cord into an AC outlet.
2. Confirm that the display is off and remove the wire.
3. Connect a frequency counter to B165 and B269.
4. Adjust TC201 so that the frequency becomes $50000.00 \pm 0.38Hz$.

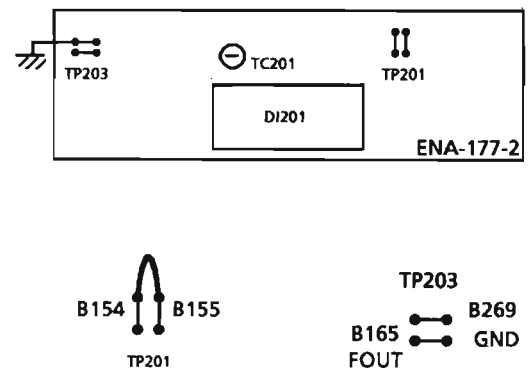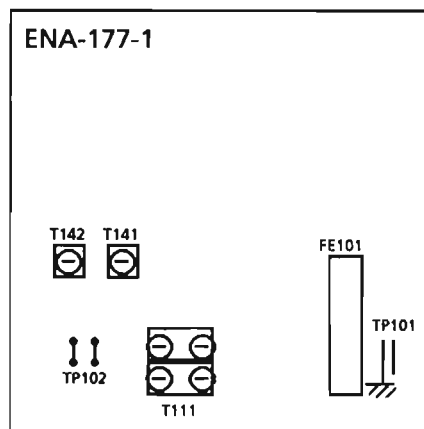


Block Diagram

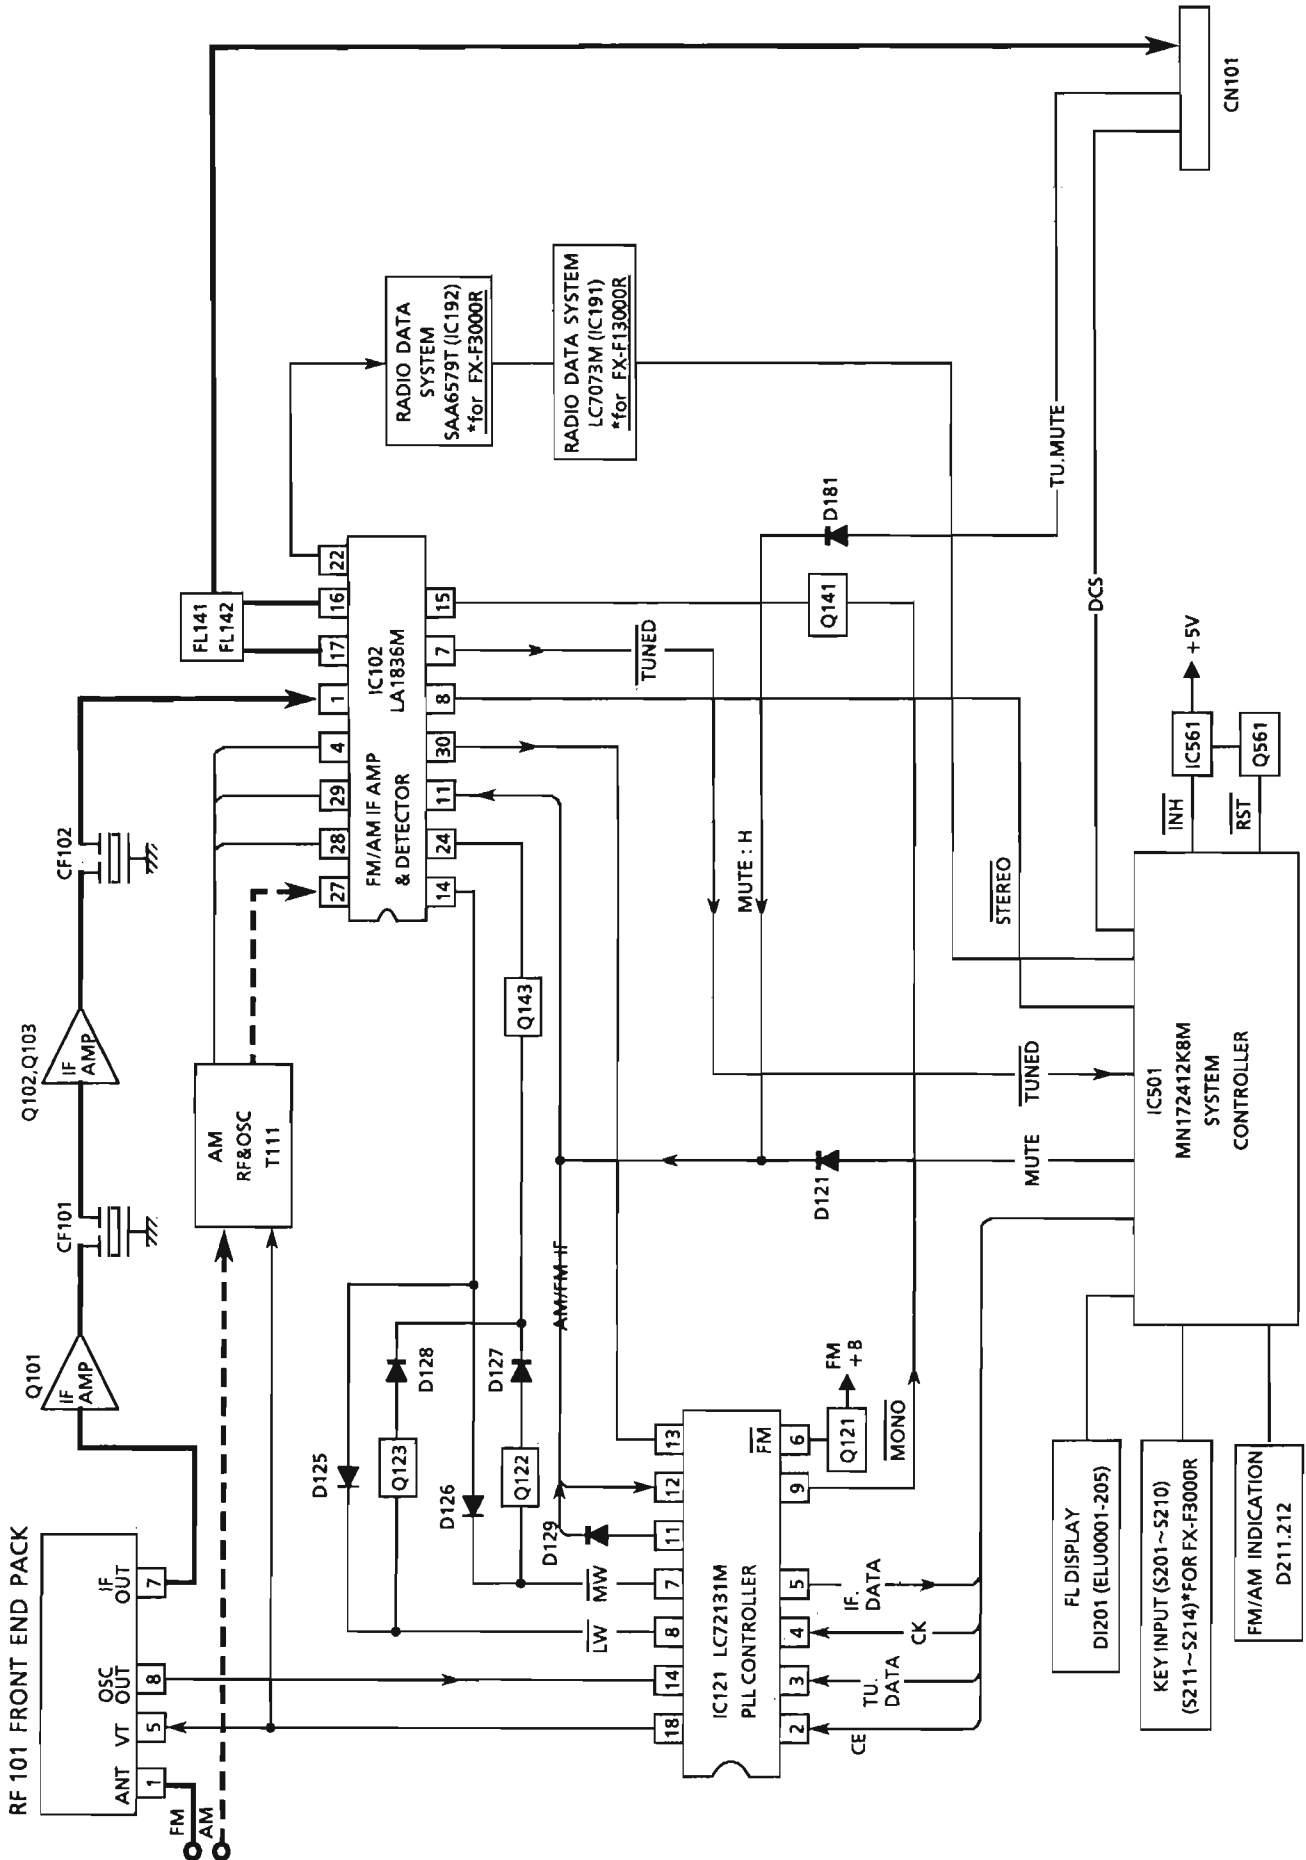


P5-11-a

P5-11-b

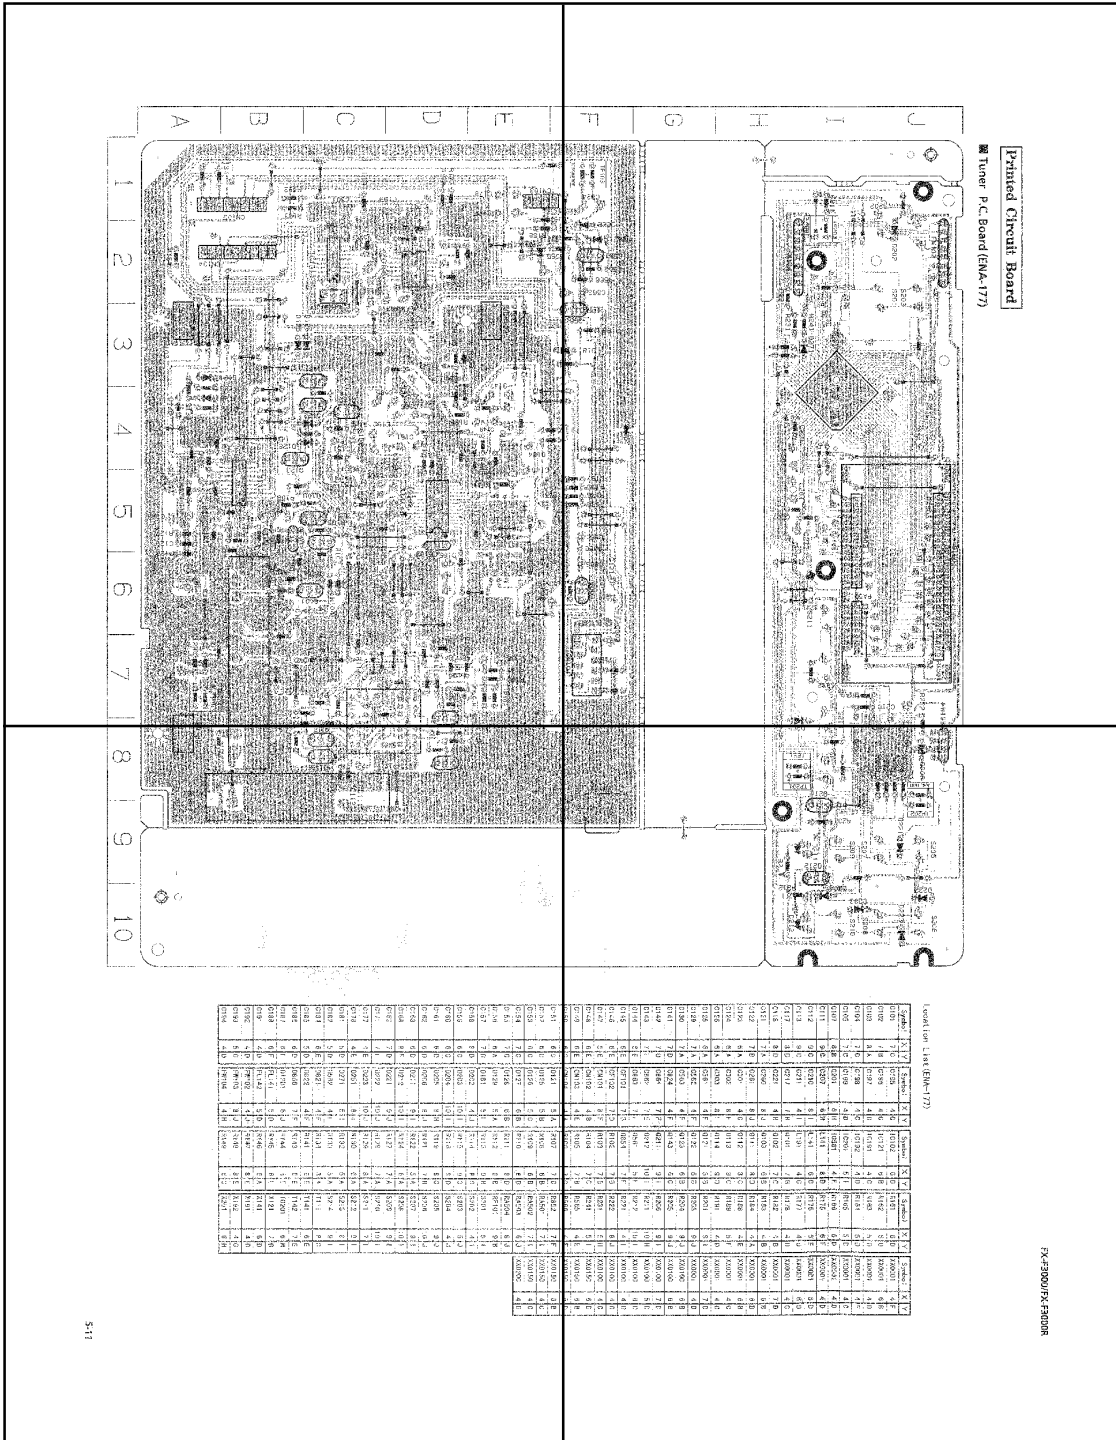


P5-11-c


P5-11-d

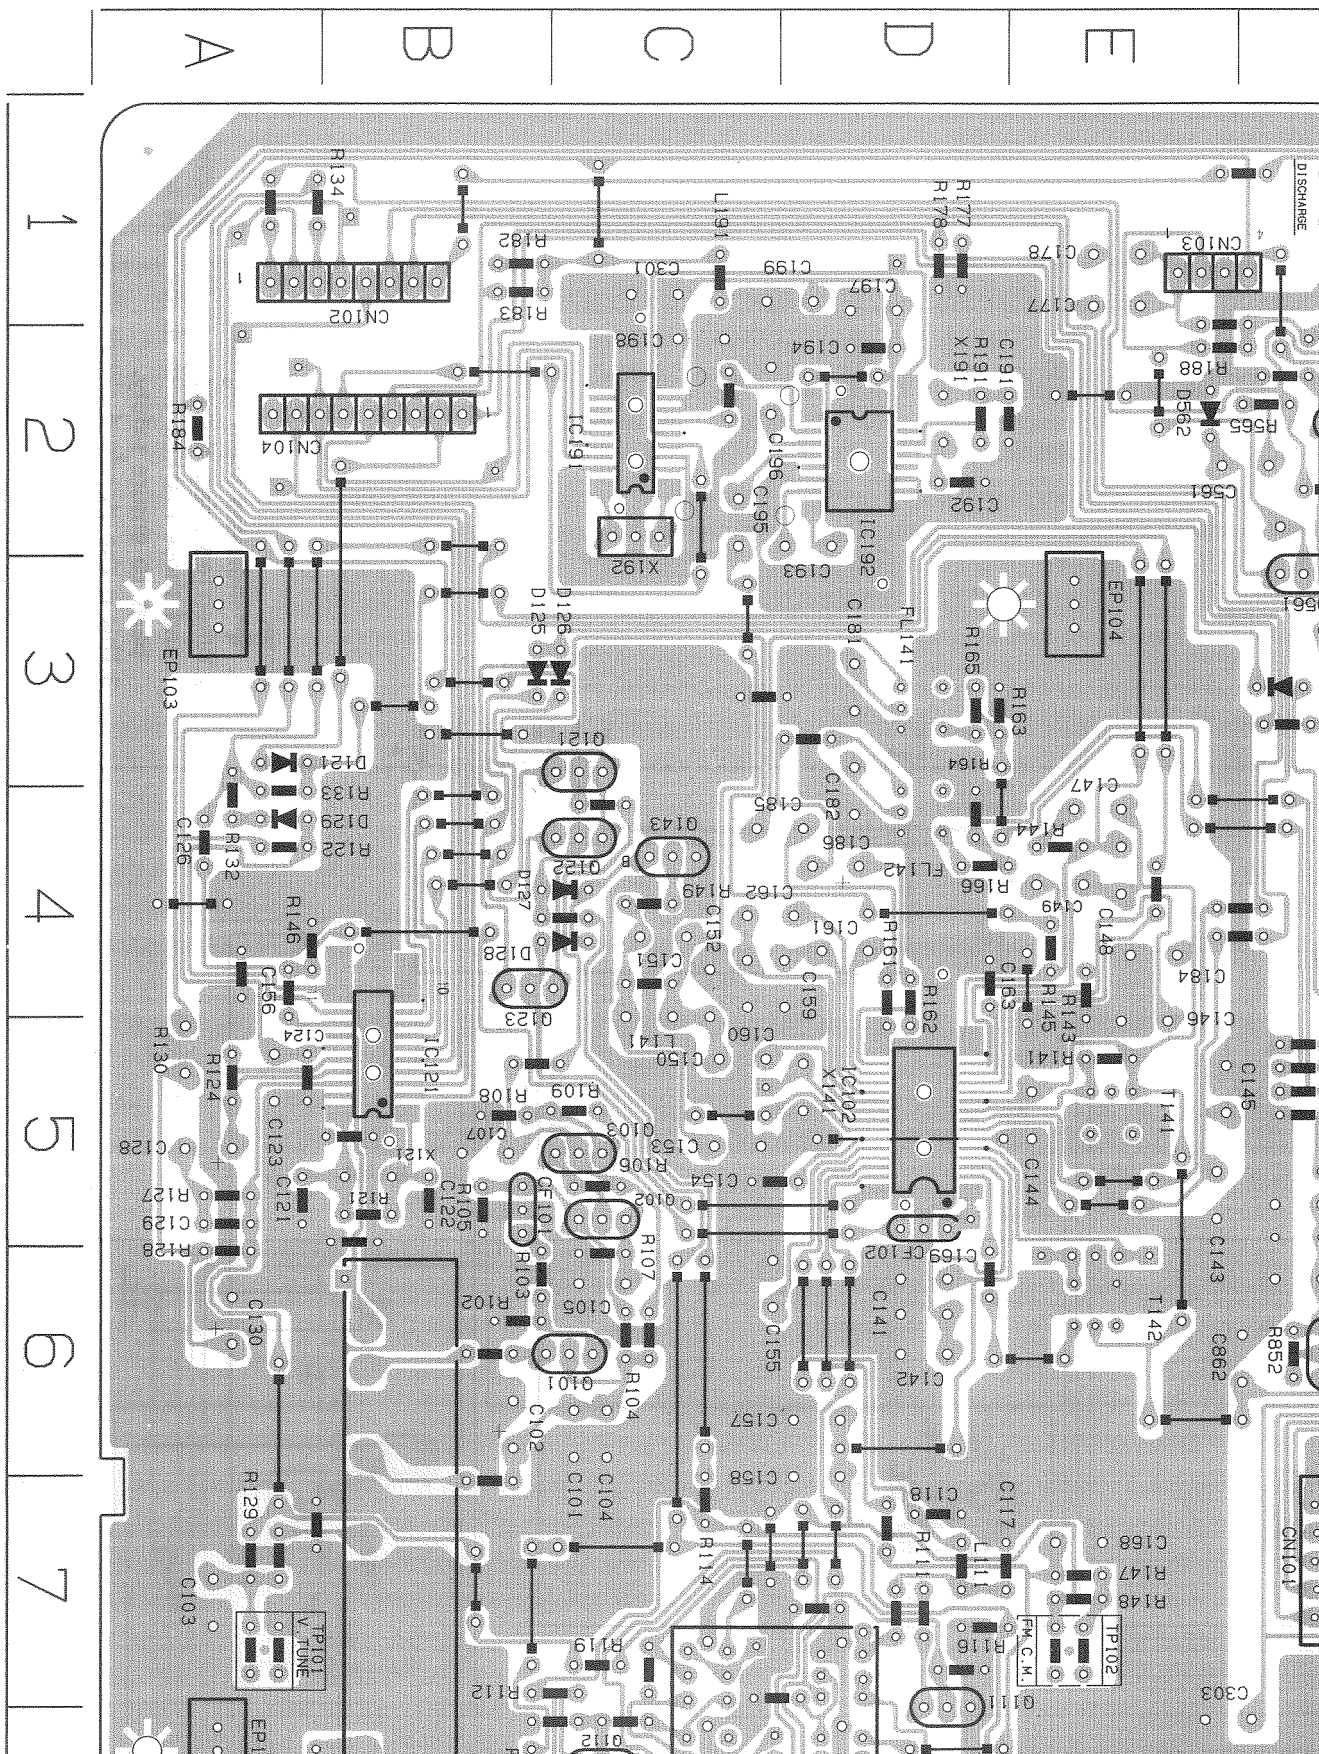


Printed Circuit Board

■ Tuner P.C. Board (ENA-177)

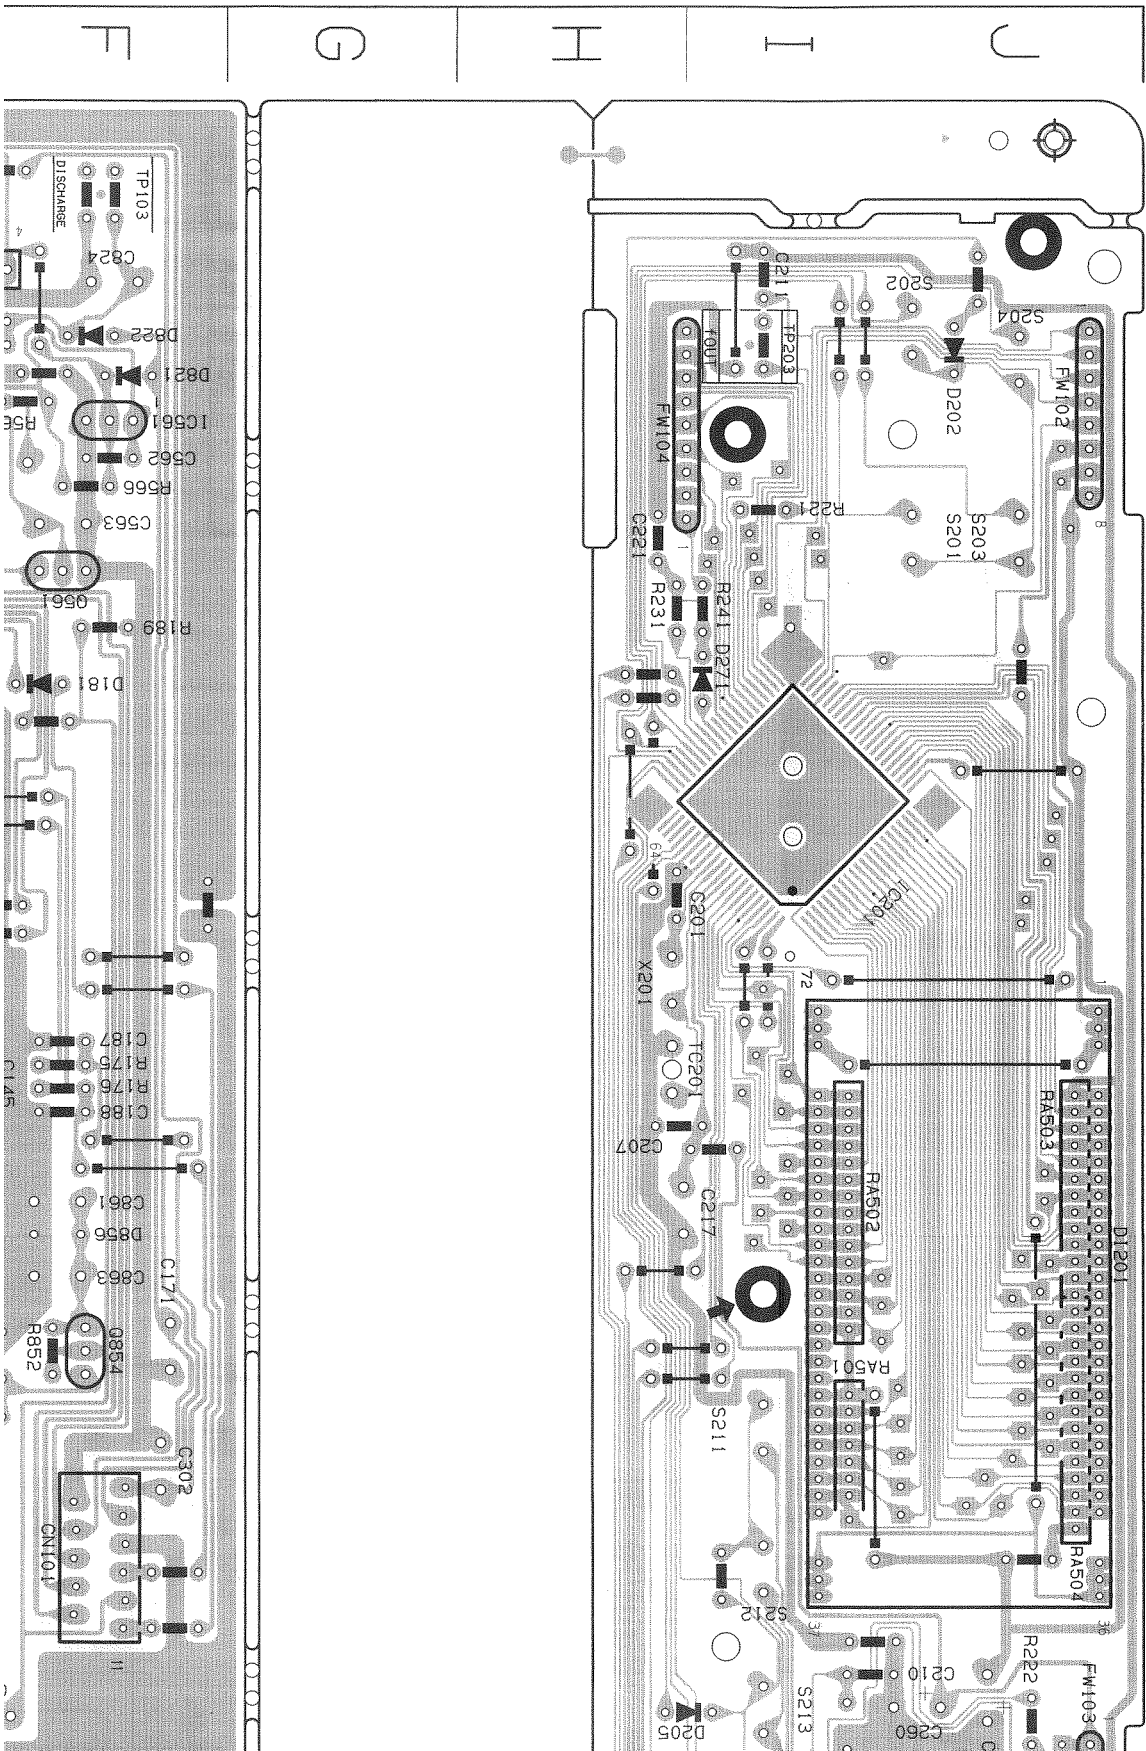

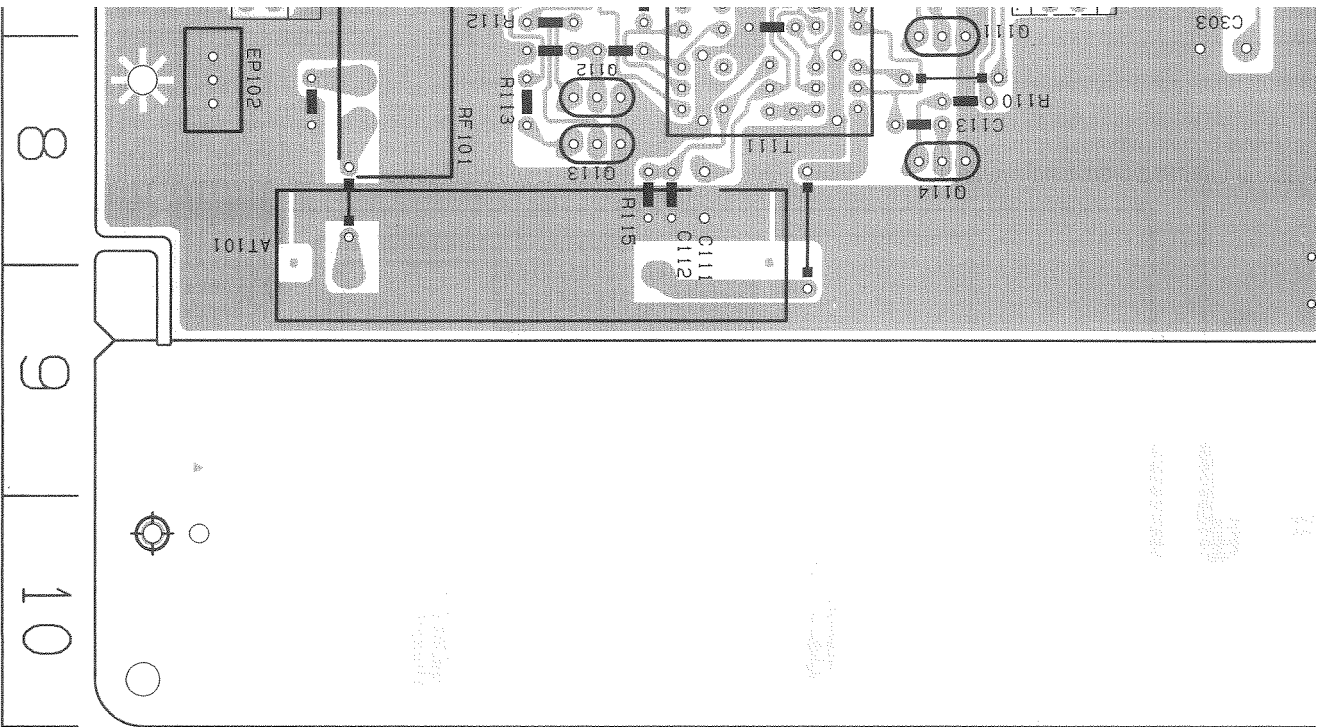


| | | | | | | | | | |
|------|-----|-------|------|------|-----|-------|------|--------|-----|
| C149 | 6 E | CN103 | 4 E | R105 | 7 B | R565 | 4 E | XX0150 | 6 B |
| C150 | 6 C | CN104 | 4 A | R106 | 7 C | R566 | 4 F | XX0150 | 6 D |
| C151 | 6 C | D121 | 5 A | R107 | 7 C | R852 | 7 F | XX0150 | 6 B |
| C152 | 6 C | D125 | 5 B | R108 | 6 B | RA501 | 7 I | XX0150 | 4 C |
| C153 | 6 C | D126 | 5 C | R109 | 6 B | RA502 | 7 I | XX0150 | 4 C |
| C154 | 7 C | D127 | 6 B | R110 | 8 D | RA503 | 6 J | XX0200 | 4 D |
| C155 | 7 C | D128 | 6 B | R111 | 8 D | RA504 | 8 J | | |
| C156 | 6 A | D129 | 5 A | R112 | 8 B | RF101 | 9 B | | |
| C157 | 7 D | D181 | 5 F | R113 | 9 B | S201 | 5 I | | |
| C158 | 8 D | D202 | 4 J | R114 | 8 C | S202 | 4 I | | |
| C159 | 6 C | D203 | 10 I | R115 | 9 C | S203 | 5 J | | |
| C160 | 6 C | D204 | 10 I | R116 | 8 D | S204 | 4 J | | |
| C161 | 6 D | D205 | 8 H | R119 | 8 C | S205 | 9 J | | |
| C162 | 6 D | D206 | 8 J | R121 | 7 B | S206 | 10 J | | |
| C163 | 6 D | D211 | 9 I | R122 | 5 A | S207 | 9 I | | |
| C168 | 8 E | D212 | 10 I | R124 | 6 A | S208 | 10 I | | |
| C169 | 7 D | D221 | 9 J | R127 | 7 A | S209 | 9 I | | |
| C171 | 7 F | D222 | 10 J | R128 | 7 A | S210 | 10 I | | |
| C177 | 4 E | D223 | 10 J | R129 | 8 A | S211 | 7 I | | |
| C178 | 4 E | D251 | 8 I | R130 | 6 A | S212 | 8 I | | |
| C181 | 5 D | D271 | 5 I | R132 | 5 A | S213 | 8 I | | |
| C182 | 5 D | D562 | 4 E | R133 | 5 A | S214 | 9 I | | |
| C184 | 6 E | D821 | 4 F | R134 | 3 A | T111 | 8 C | | |
| C185 | 5 D | D822 | 4 F | R141 | 6 E | T141 | 6 E | | |
| C186 | 6 D | D856 | 7 F | R143 | 6 E | T142 | 7 E | | |
| C187 | 6 F | D1201 | 6 J | R144 | 5 E | T0201 | 6 H | | |
| C188 | 6 F | FL141 | 5 D | R145 | 6 E | X121 | 7 B | | |
| C191 | 4 D | FL142 | 5 D | R146 | 6 A | X141 | 6 D | | |
| C192 | 4 D | FW102 | 4 J | R147 | 8 E | X191 | 4 D | | |
| C193 | 5 C | FW103 | 8 J | R148 | 8 E | X192 | 4 C | | |
| C194 | 4 D | FW104 | 4 H | R149 | 6 C | X201 | 6 H | | |

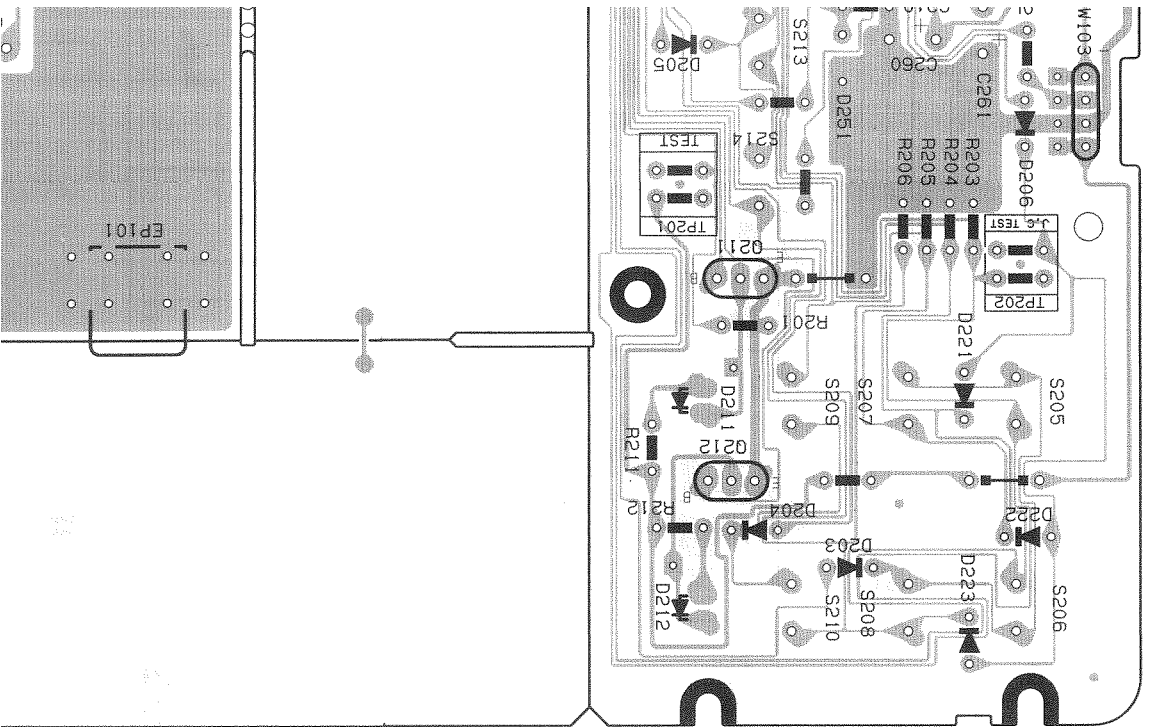

Location List (ENA-177)


| Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y | Symbol | X | Y |
|--------|-----|---|--------|-----|---|--------|------|---|--------|------|---|--------|-----|---|
| C101 | 7 C | | C195 | 4 C | | IC102 | 6 D | | R161 | 6 D | | XX0001 | 4 F | |
| C102 | 7 B | | C196 | 4 C | | IC121 | 6 B | | R162 | 6 D | | XX0001 | 6 B | |
| C103 | 8 A | | C197 | 4 D | | IC191 | 4 C | | R163 | 5 D | | XX0001 | 4 D | |
| C104 | 7 C | | C198 | 4 C | | IC192 | 4 D | | R164 | 5 D | | XX0001 | 4 F | |
| C105 | 7 C | | C199 | 4 D | | IC201 | 5 I | | R165 | 5 D | | XX0001 | 4 C | |
| C107 | 6 B | | C201 | 6 H | | IC561 | 4 F | | R166 | 6 D | | XX0001 | 4 D | |
| C111 | 9 C | | C207 | 6 H | | L111 | 8 D | | R175 | 6 F | | XX0001 | 4 D | |
| C112 | 9 C | | C210 | 8 I | | L141 | 6 C | | R176 | 6 F | | XX0001 | 6 D | |
| C113 | 9 D | | C211 | 4 I | | L191 | 4 C | | R177 | 4 D | | XX0001 | 6 D | |
| C117 | 8 D | | C217 | 7 H | | Q101 | 7 B | | R178 | 4 D | | XX0001 | 4 C | |
| C118 | 8 D | | C221 | 4 H | | Q102 | 7 C | | R182 | 4 B | | XX0001 | 7 D | |
| C121 | 7 A | | C260 | 8 J | | Q103 | 6 B | | R183 | 4 B | | XX0001 | 6 B | |
| C122 | 7 B | | C261 | 8 J | | Q111 | 8 D | | R184 | 4 A | | XX0001 | 6 B | |
| C123 | 6 A | | C301 | 4 C | | Q112 | 8 C | | R188 | 4 E | | XX0001 | 6 B | |
| C124 | 6 A | | C302 | 8 F | | Q113 | 9 C | | R189 | 5 F | | XX0001 | 4 C | |
| C126 | 6 A | | C303 | 8 F | | Q114 | 9 D | | R191 | 4 D | | XX0001 | 4 C | |
| C128 | 6 A | | C361 | 4 F | | Q121 | 5 B | | R201 | 9 I | | XX0001 | 7 D | |
| C129 | 7 A | | C362 | 4 F | | Q122 | 5 B | | R203 | 9 J | | XX0001 | 4 D | |
| C130 | 7 A | | C563 | 4 F | | Q123 | 6 B | | R204 | 9 J | | XX0100 | 6 B | |
| C141 | 7 D | | C824 | 4 F | | Q143 | 6 C | | R205 | 9 J | | XX0100 | 6 B | |
| C142 | 7 D | | C861 | 7 F | | Q211 | 9 I | | R206 | 9 I | | XX0100 | 7 D | |
| C143 | 7 E | | C862 | 7 E | | Q212 | 10 I | | R211 | 10 H | | XX0100 | 5 D | |
| C144 | 6 E | | C863 | 7 F | | Q561 | 5 F | | R212 | 10 I | | XX0100 | 6 D | |
| C145 | 6 E | | CF101 | 7 B | | Q854 | 7 F | | R221 | 4 I | | XX0100 | 4 D | |
| C146 | 6 E | | CF102 | 7 D | | R102 | 7 B | | R222 | 8 J | | XX0100 | 4 C | |
| C147 | 5 E | | CN101 | 8 F | | R103 | 7 B | | R231 | 5 H | | XX0100 | 4 C | |
| C148 | 6 E | | CN102 | 4 B | | R104 | 7 C | | R241 | 5 I | | XX0150 | 6 D | |
| C149 | 6 E | | CN103 | 4 E | | R105 | 7 B | | R565 | 4 E | | XX0150 | 6 B | |
| C150 | 6 C | | CN104 | 4 A | | R106 | 7 C | | R566 | 4 F | | XX0150 | 6 D | |
| FP101 | | | D191 | | | D107 | | | D859 | | | YV0150 | | |

P5-12-a

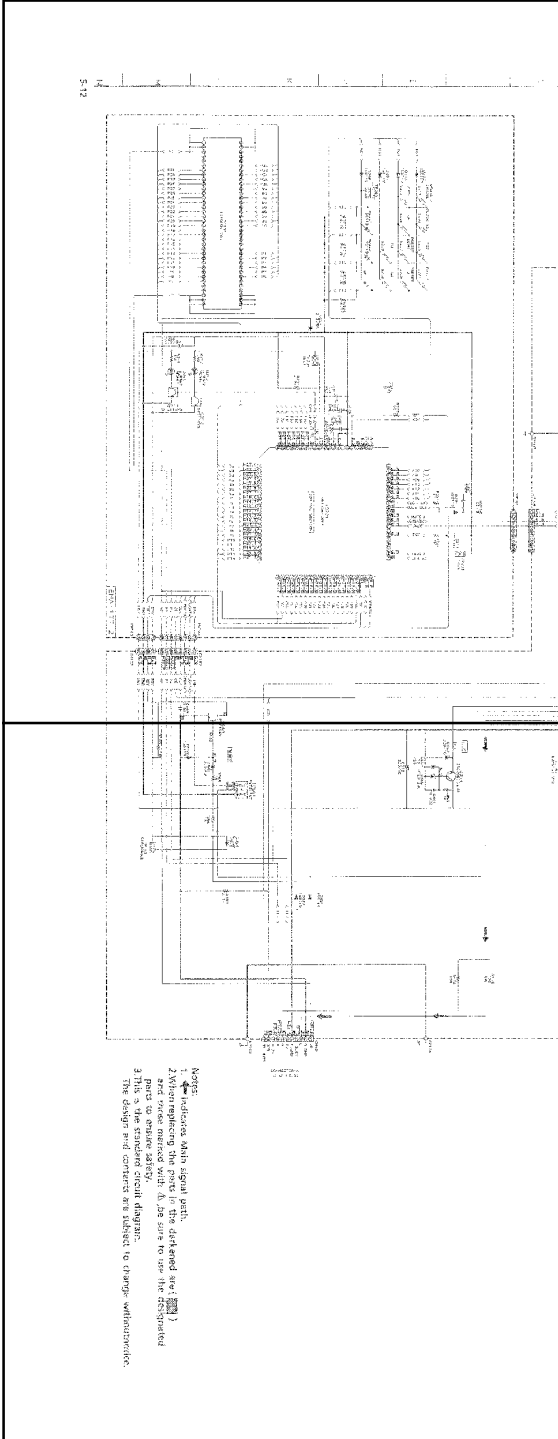


P5-12-c

P5-12-b

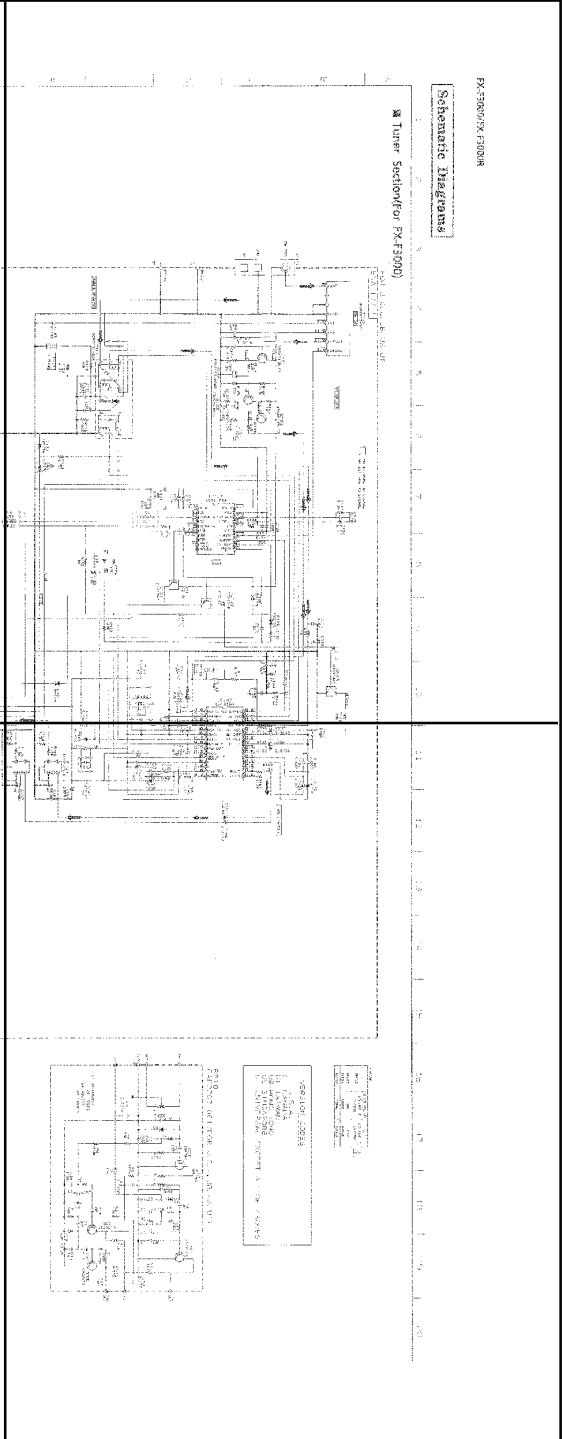

P5-12-d

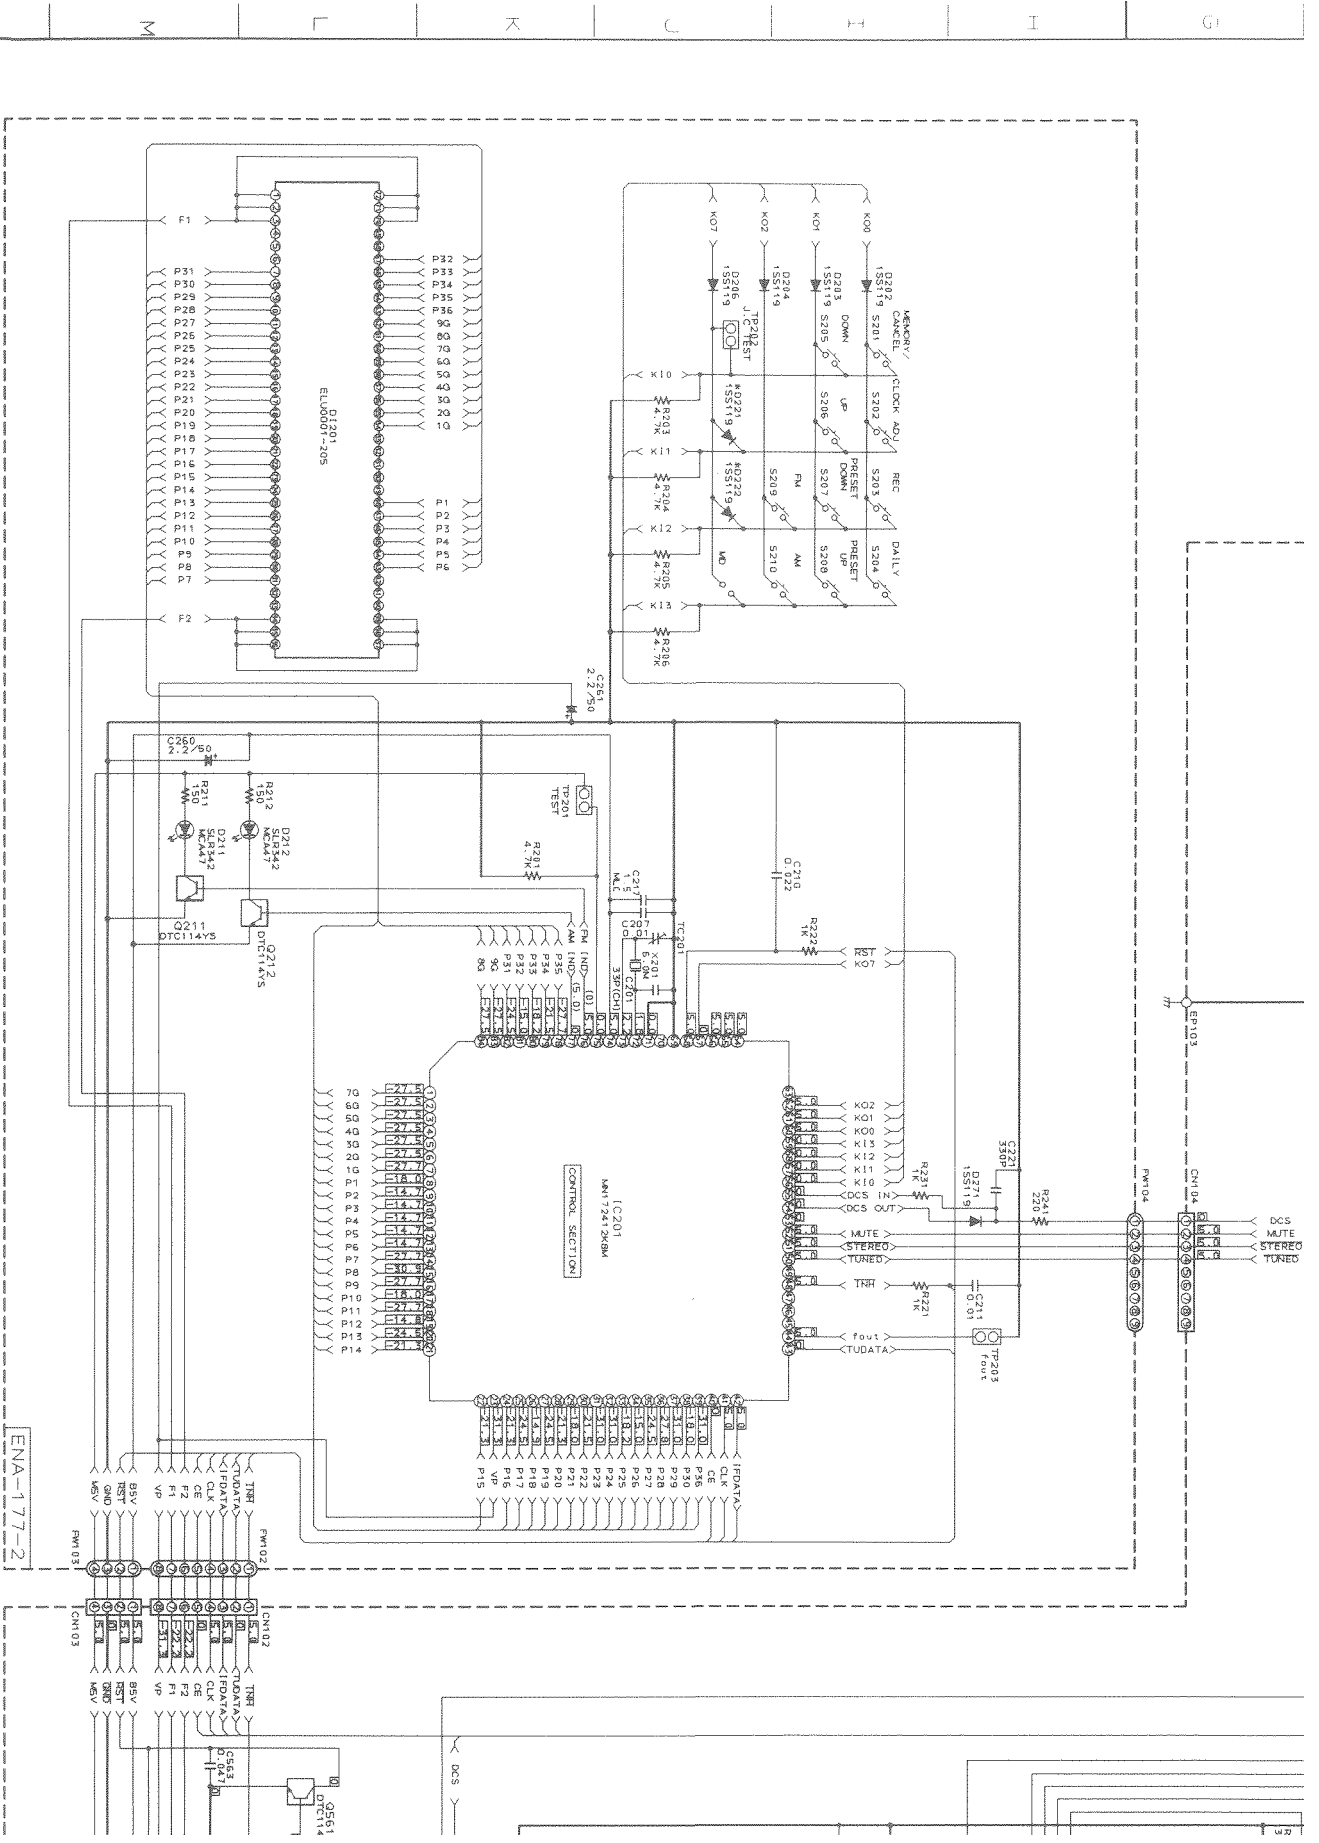


Schematic Diagrams


1 2 3 4 5 6 7 8 9 10

Tuner Section(For FX-F3000)


FOR J, C, U, UB, US, UT
ENA-177-1

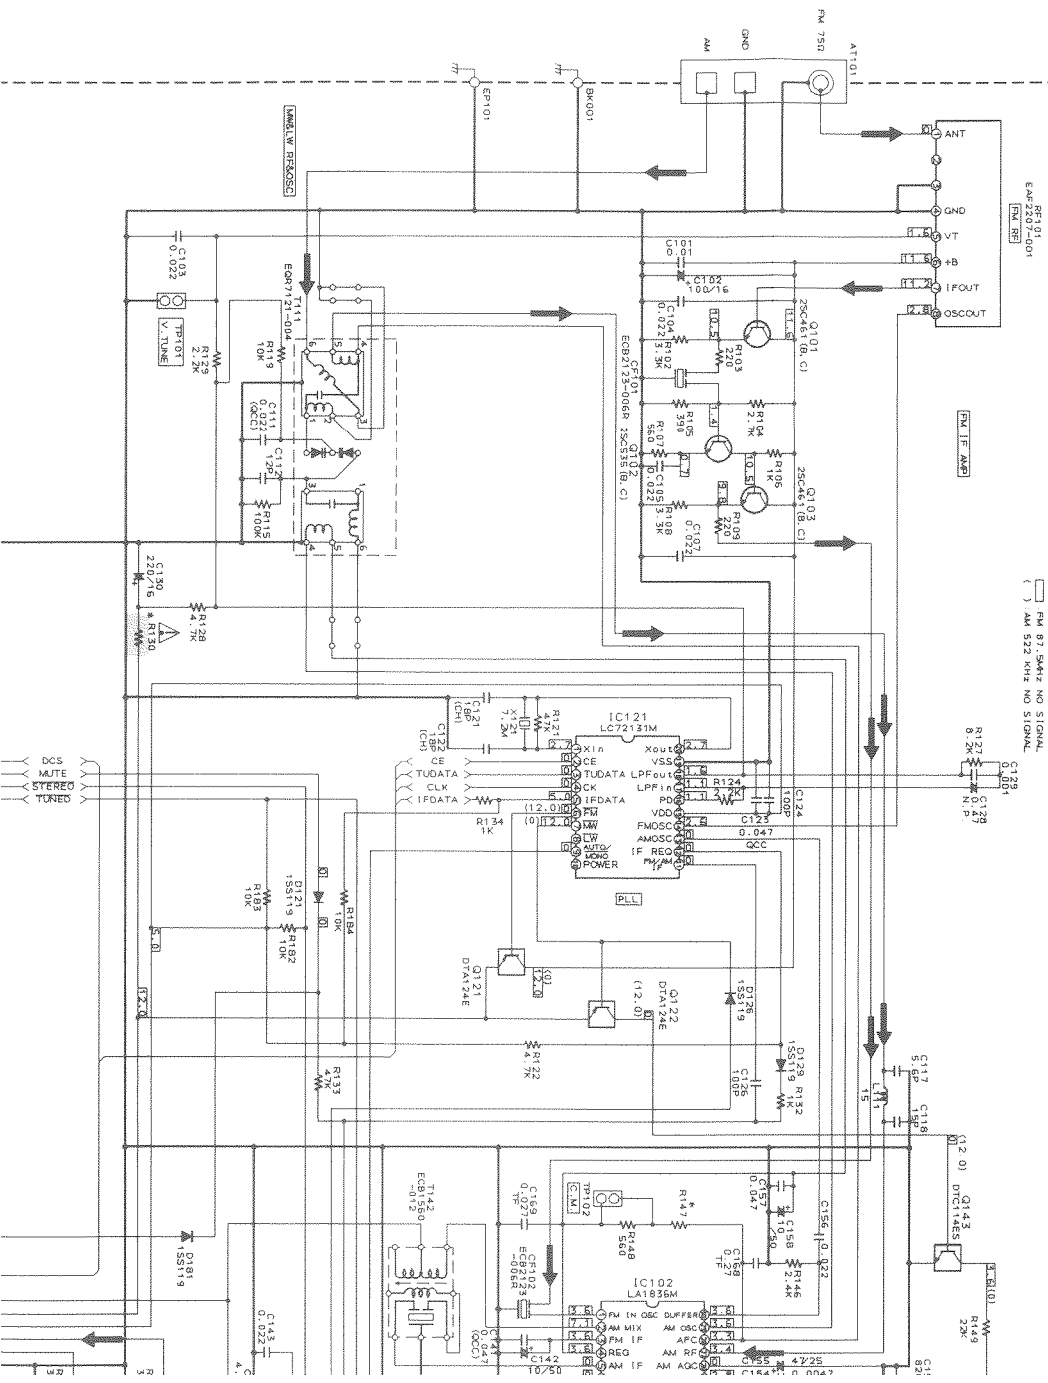

□ FM 87.5MHz NO SIGNAL
() AM 522 KHz NO SIGNAL

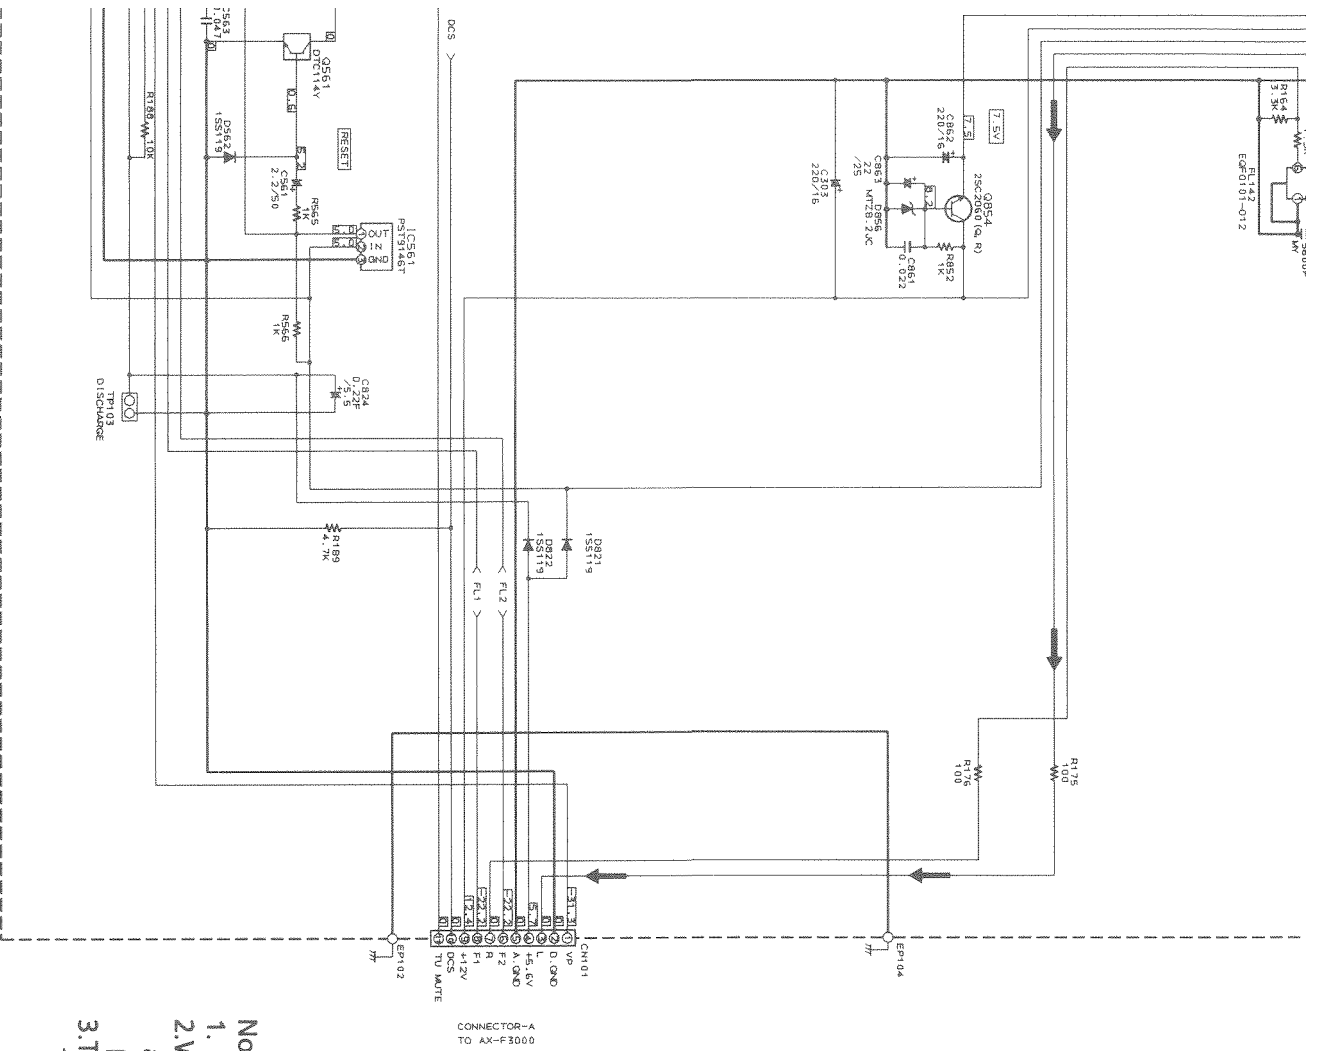

- Notes:
1. indicates Main signal path.
 2. When replacing the parts in the darkened are () and those marked with , be sure to use the designated parts to ensure safety.
 3. This is the standard circuit diagram. The design and contents are subject to change without notice.

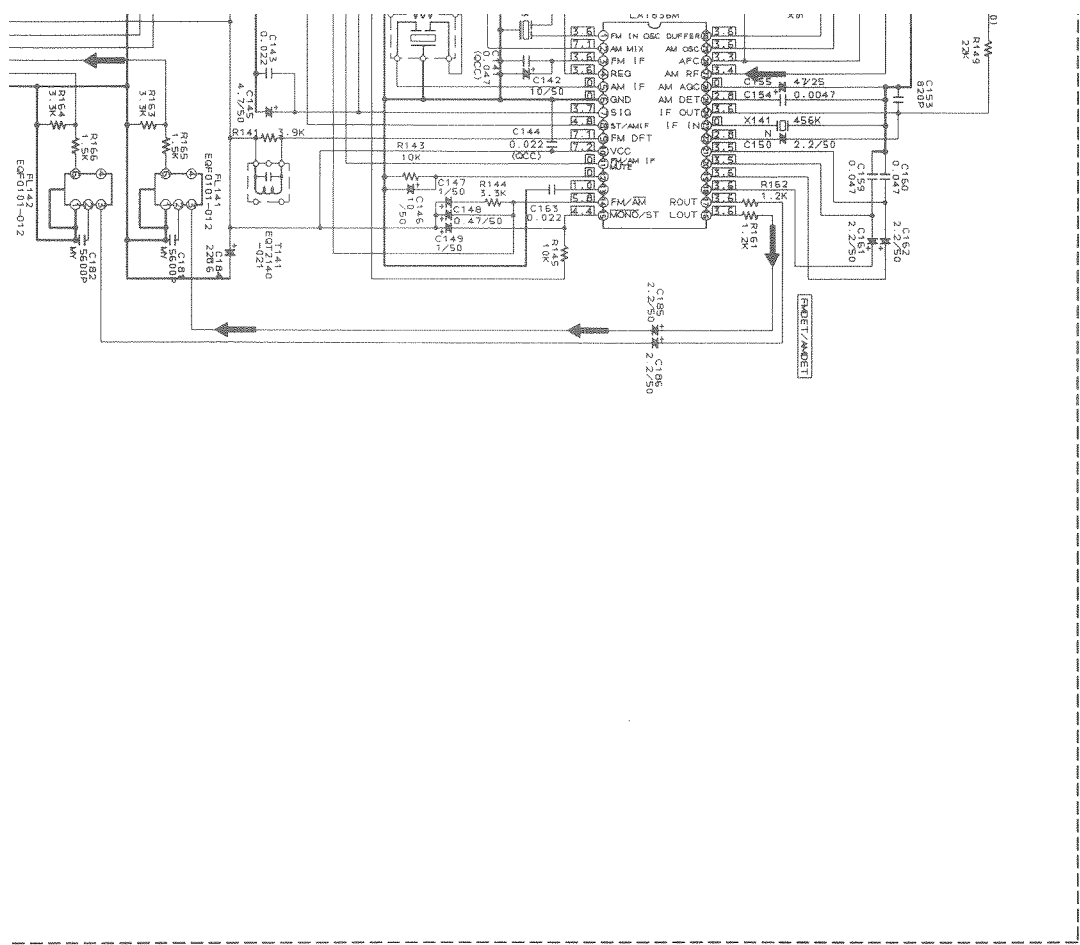


* MARK

| U | UB | US | UT | L-C |
|------|-----------------|-----------------|------|-----|
| R130 | 68 UNF F (1/4W) | 68 UNF C (1/4W) | 22K | |
| R147 | 58K | USED | NONE | |
| D221 | USED | NONE | USED | |
| D222 | NONE | USED | USED | |


VERSION CODES

U : U.S.A.
 C : CANADA
 UT : TAIWAN
 UB : HONG KONG
 US : SINGAPORE
 U : UNIVERSAL EXCEPT ALL OF ABOVE

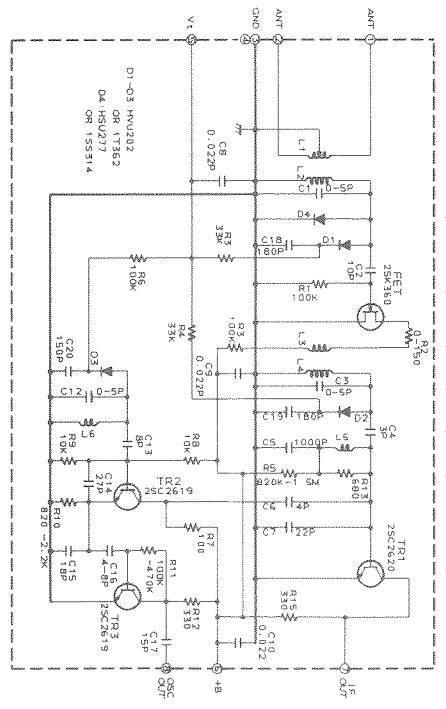


P5-13-a

P5-13-b

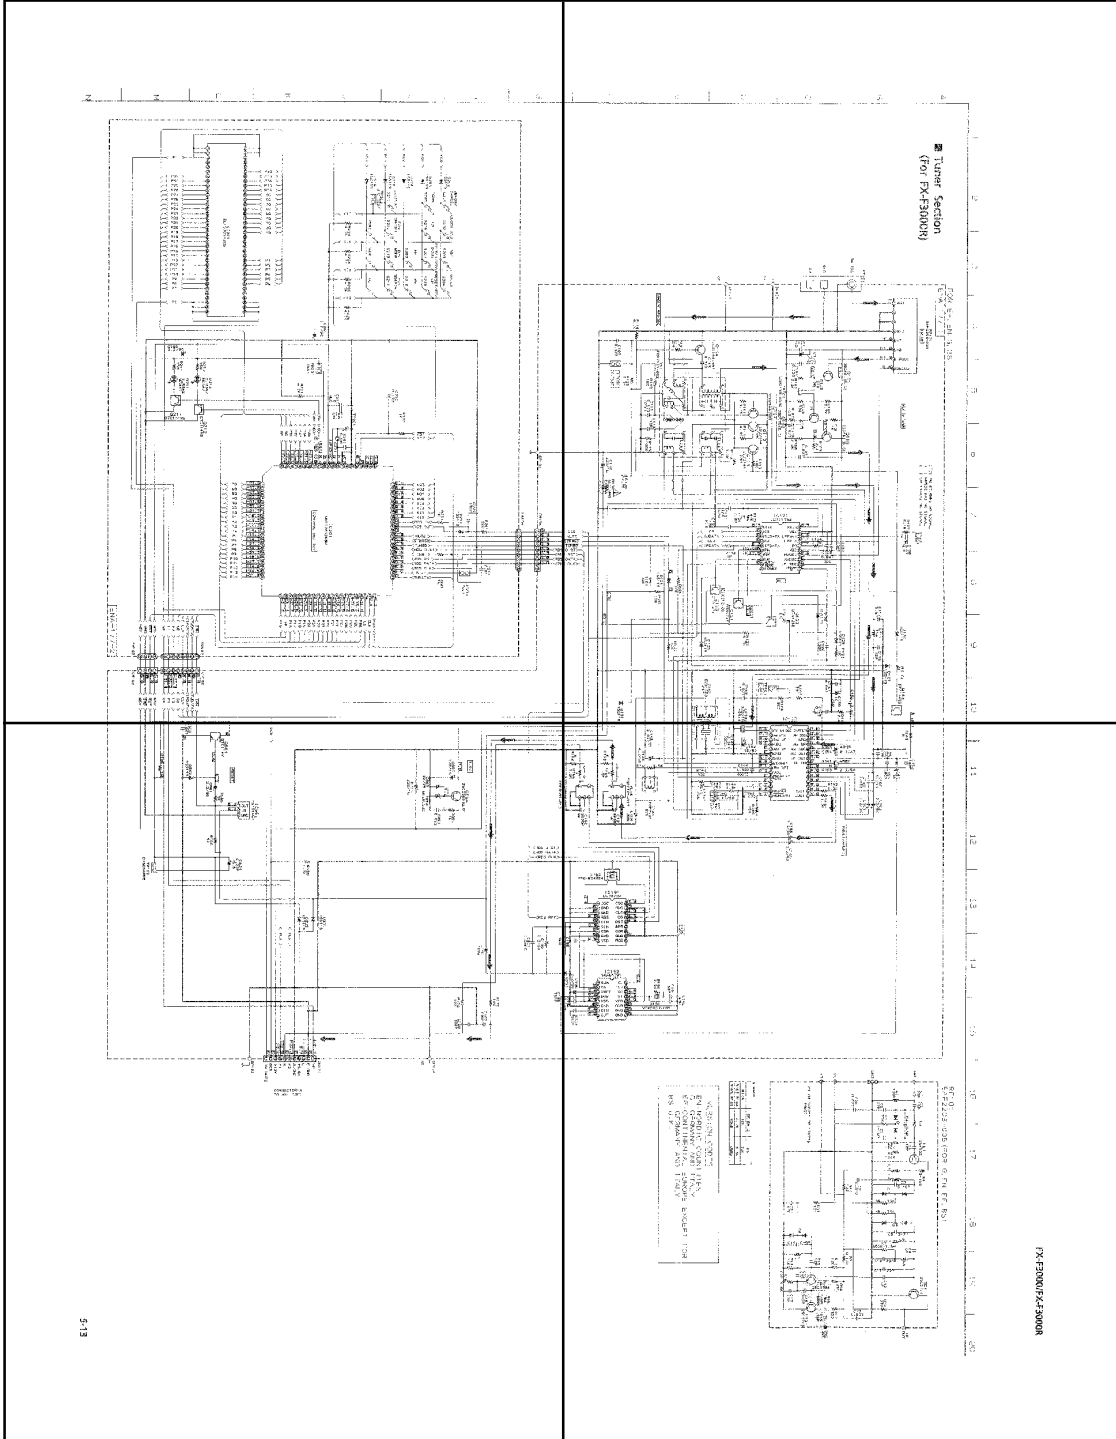

P5-13-c


P5-13-d

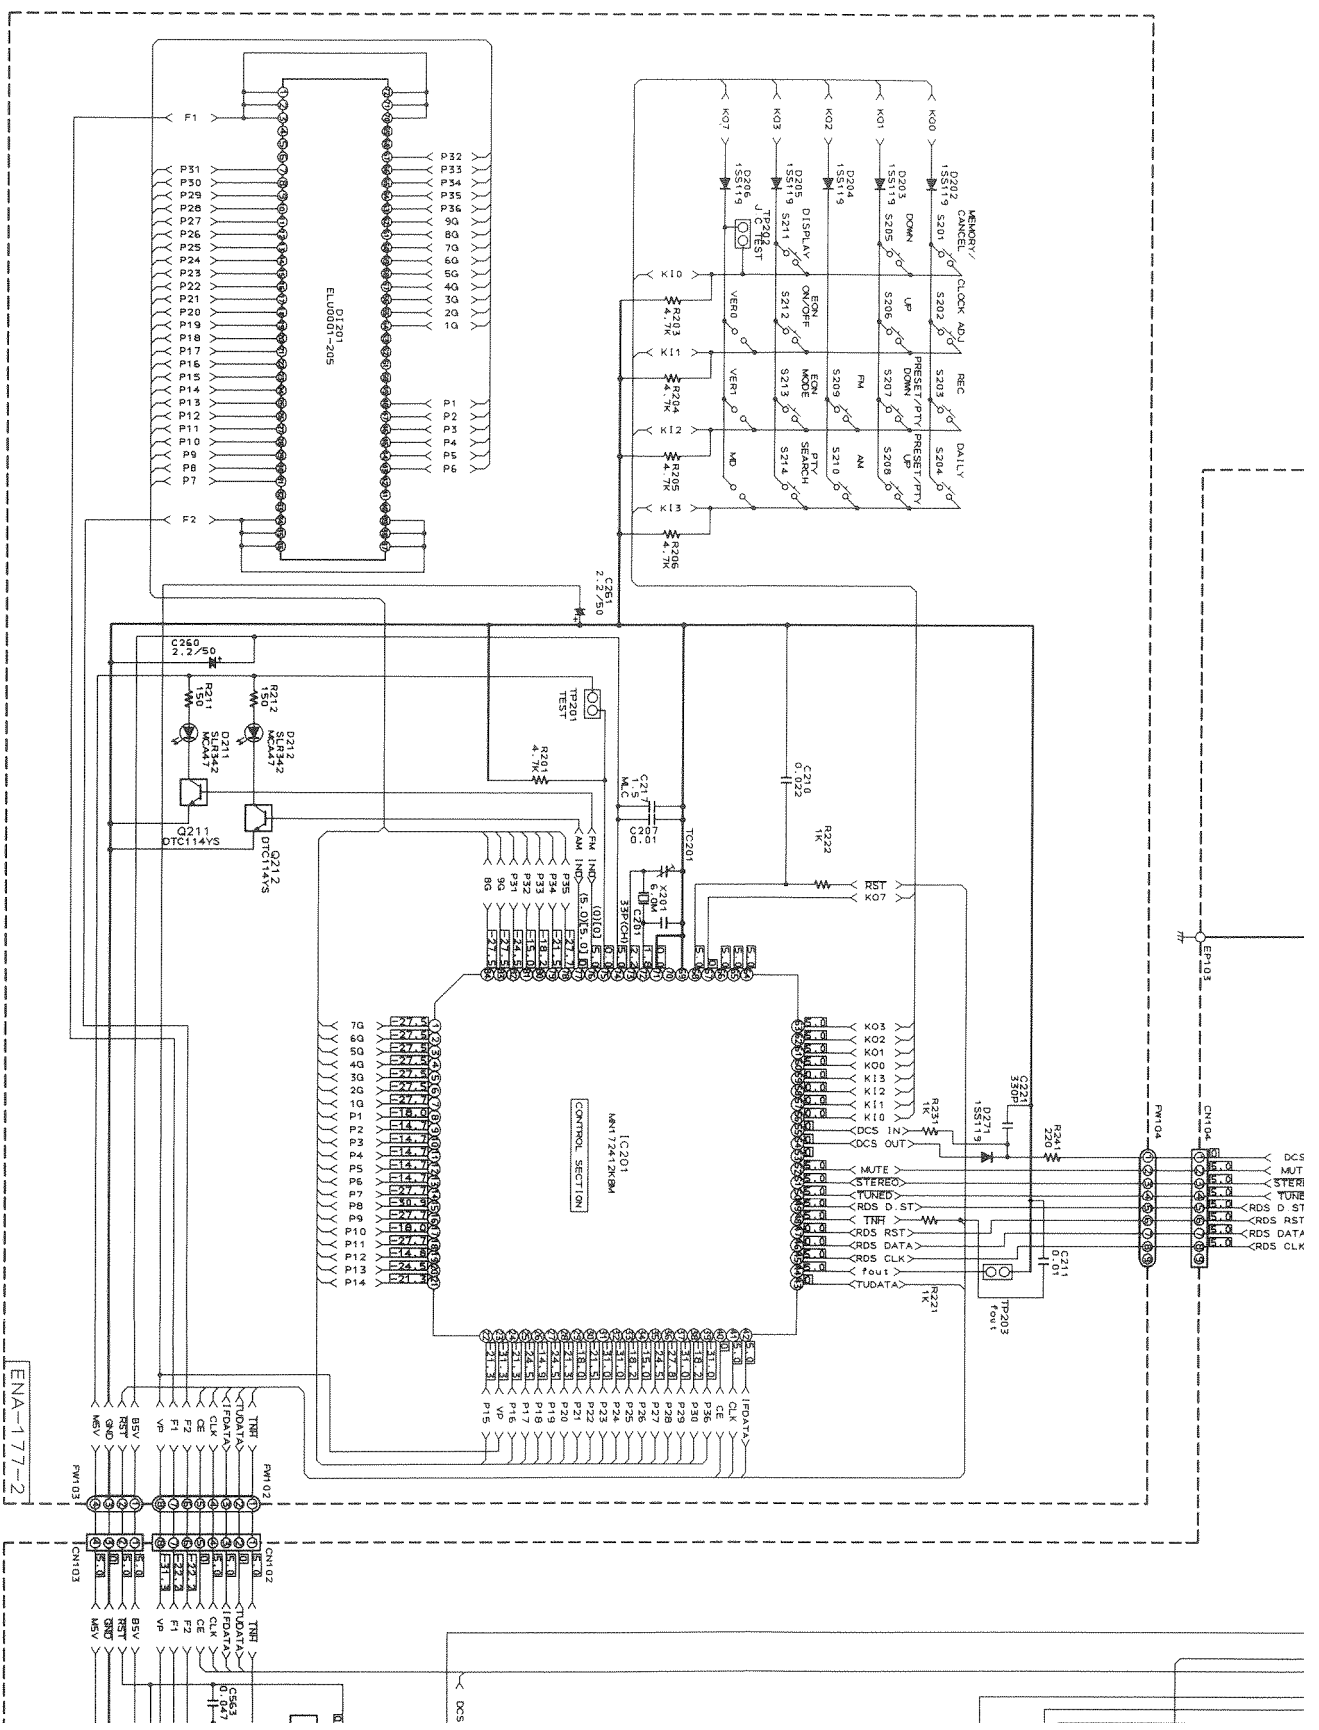


Tuner Section (For FX-F3000R)



FOR EF, EN, G, BS
ENA-177-1

□ R1 01 504K NO SIGNAL
○ WMS22 30K NO SIGNAL
[] LW 144KHZ NO SIGNAL

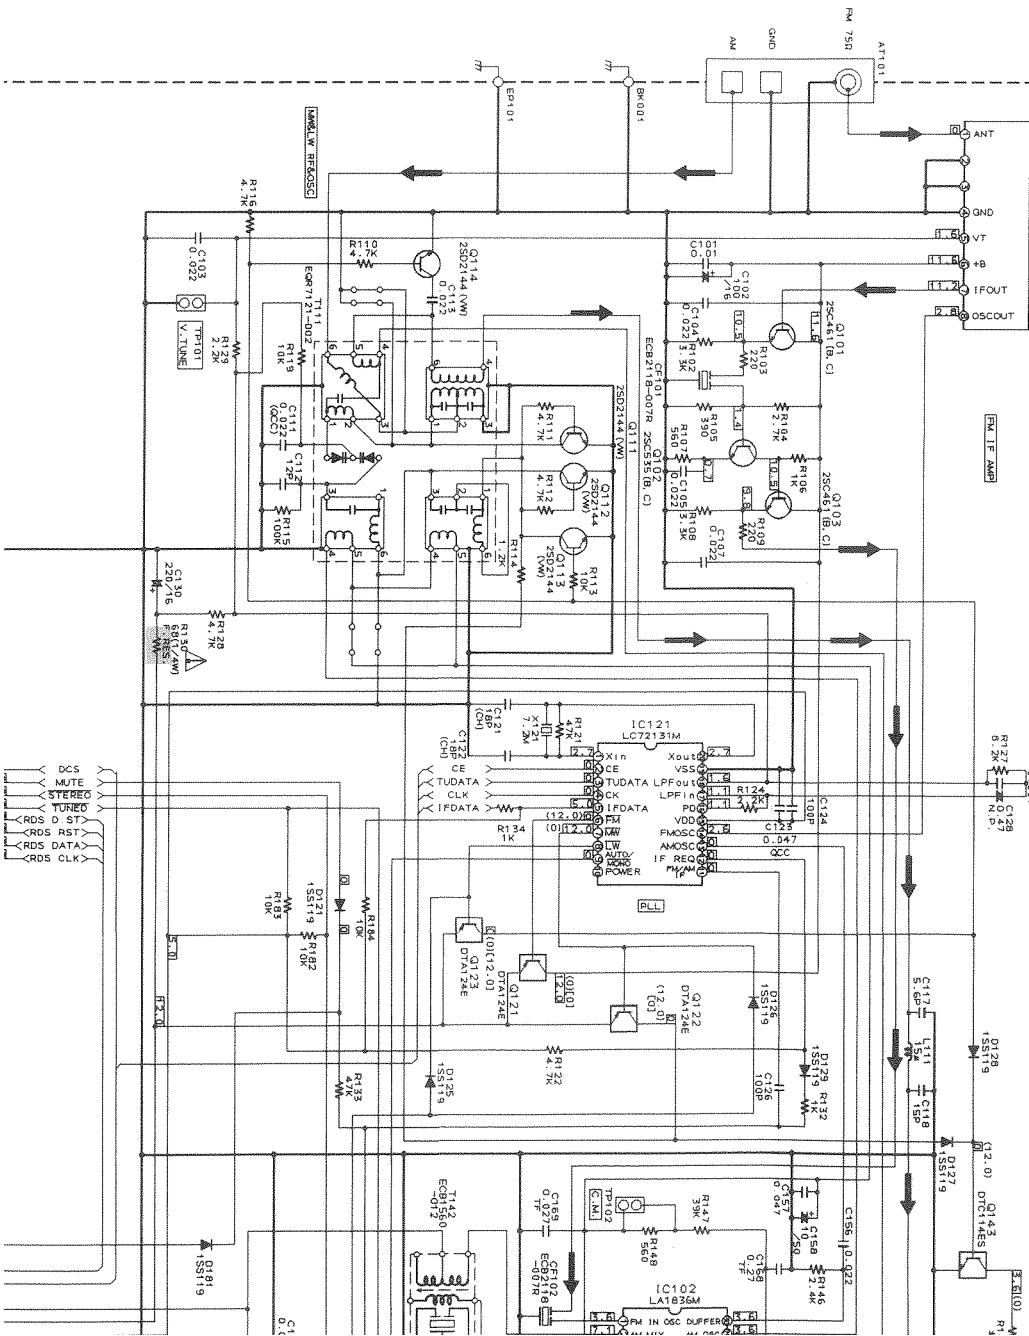

1 2 3 4 5 6 7 8 9 10

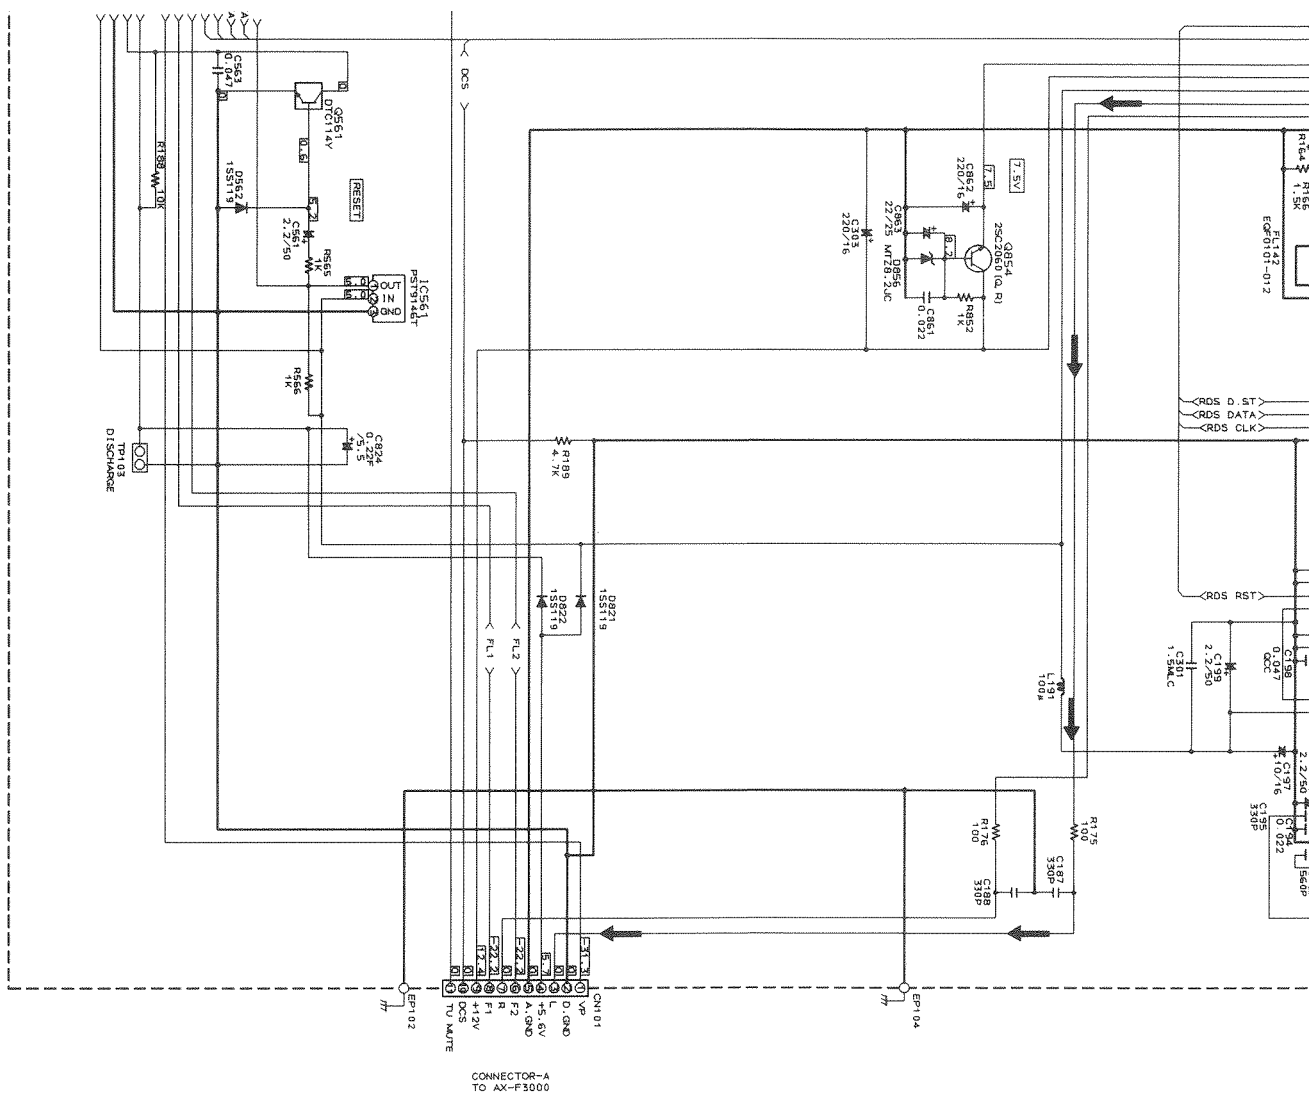

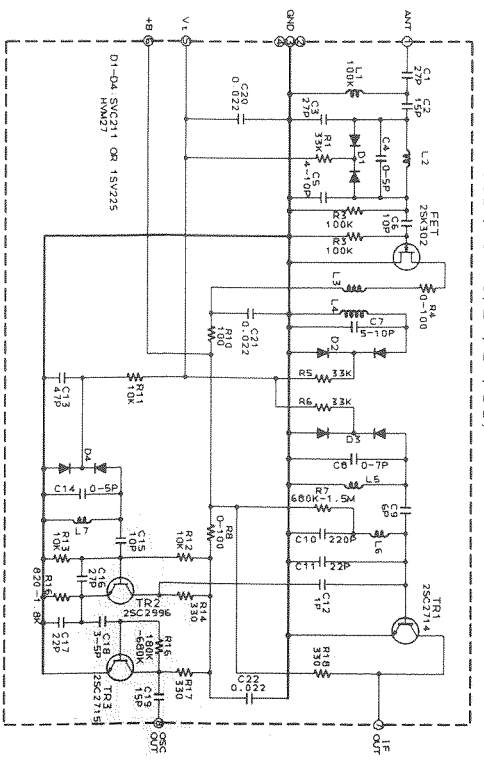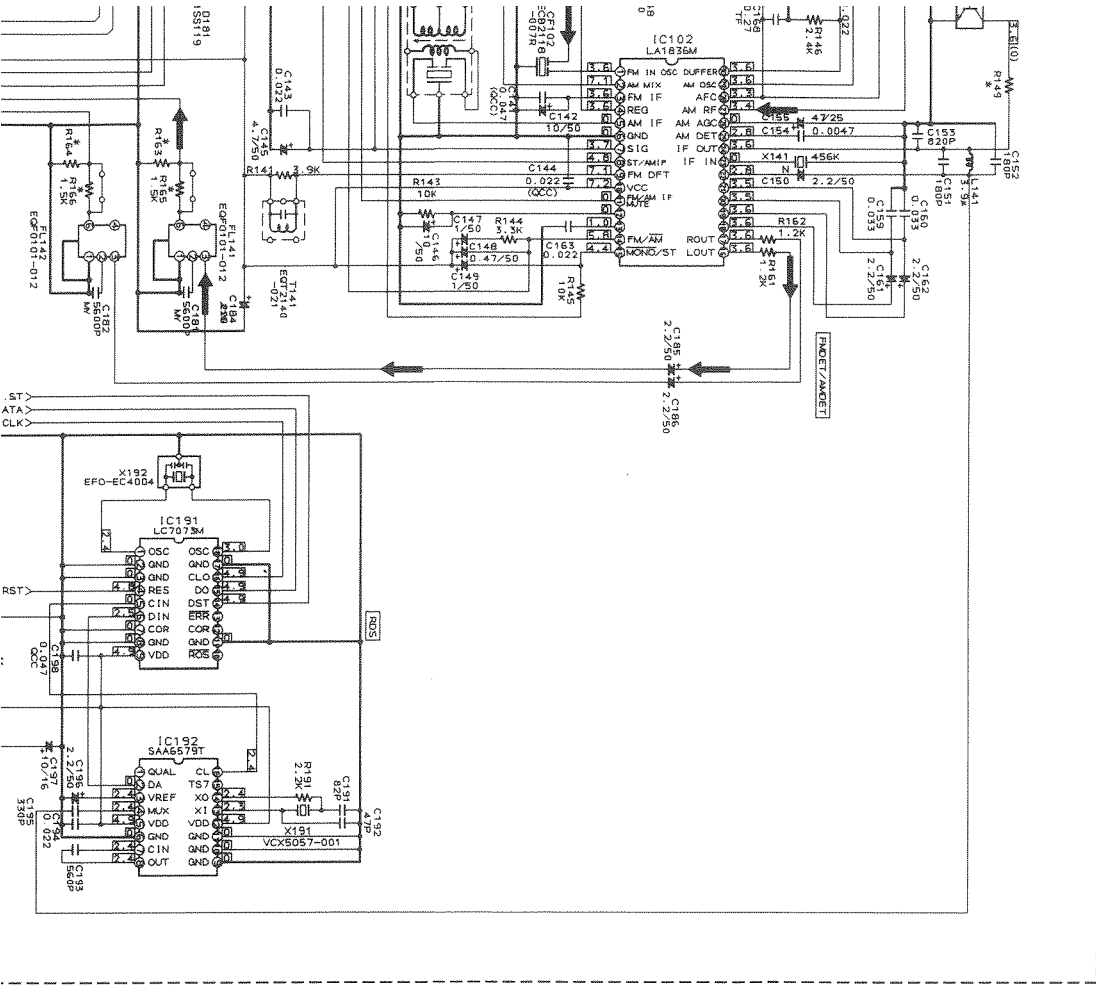

| MARK | EF, EN, G | BS |
|------------|-----------|------|
| R148 | 10K | 22K |
| R153, R154 | 4.7K | 3.3K |
| R155, R156 | NONE | USED |

VERSION CODES
 EN: NORDIC COUNTRIES
 G: GERMANY AND ITALY
 EF: CONTINENTAL EUROPE EXCEPT FOR
 GERMANY AND ITALY
 BS: U.K.

PARTS LIST

< AX-F3000 >

* All printed circuit boards and its assemblies are not available as service parts.


The Marks for Designated Areas


| | | | |
|--------------------|----------------------|-------------------------------|------------------------|
| BS . . . the U. K. | C . . . Canada | EF . . . Continental Europe | EN . . . Scandinavia |
| G . . . Germany | J . . . the U. S. A. | UB . . . Hong Kong | U . . . Universal Type |
| US . . . Singapore | UT . . . Taiwan | No marks indicates all areas. | |

- Contents -


| | |
|--|-----|
| General Exploded View and Parts List | 6-2 |
| Electrical Parts List | 6-4 |
| (ENH-296) | 6-4 |
| (ENB-241) | 6-7 |
| (END-104) | 6-9 |

General Exploded View and Parts List

Block No. 

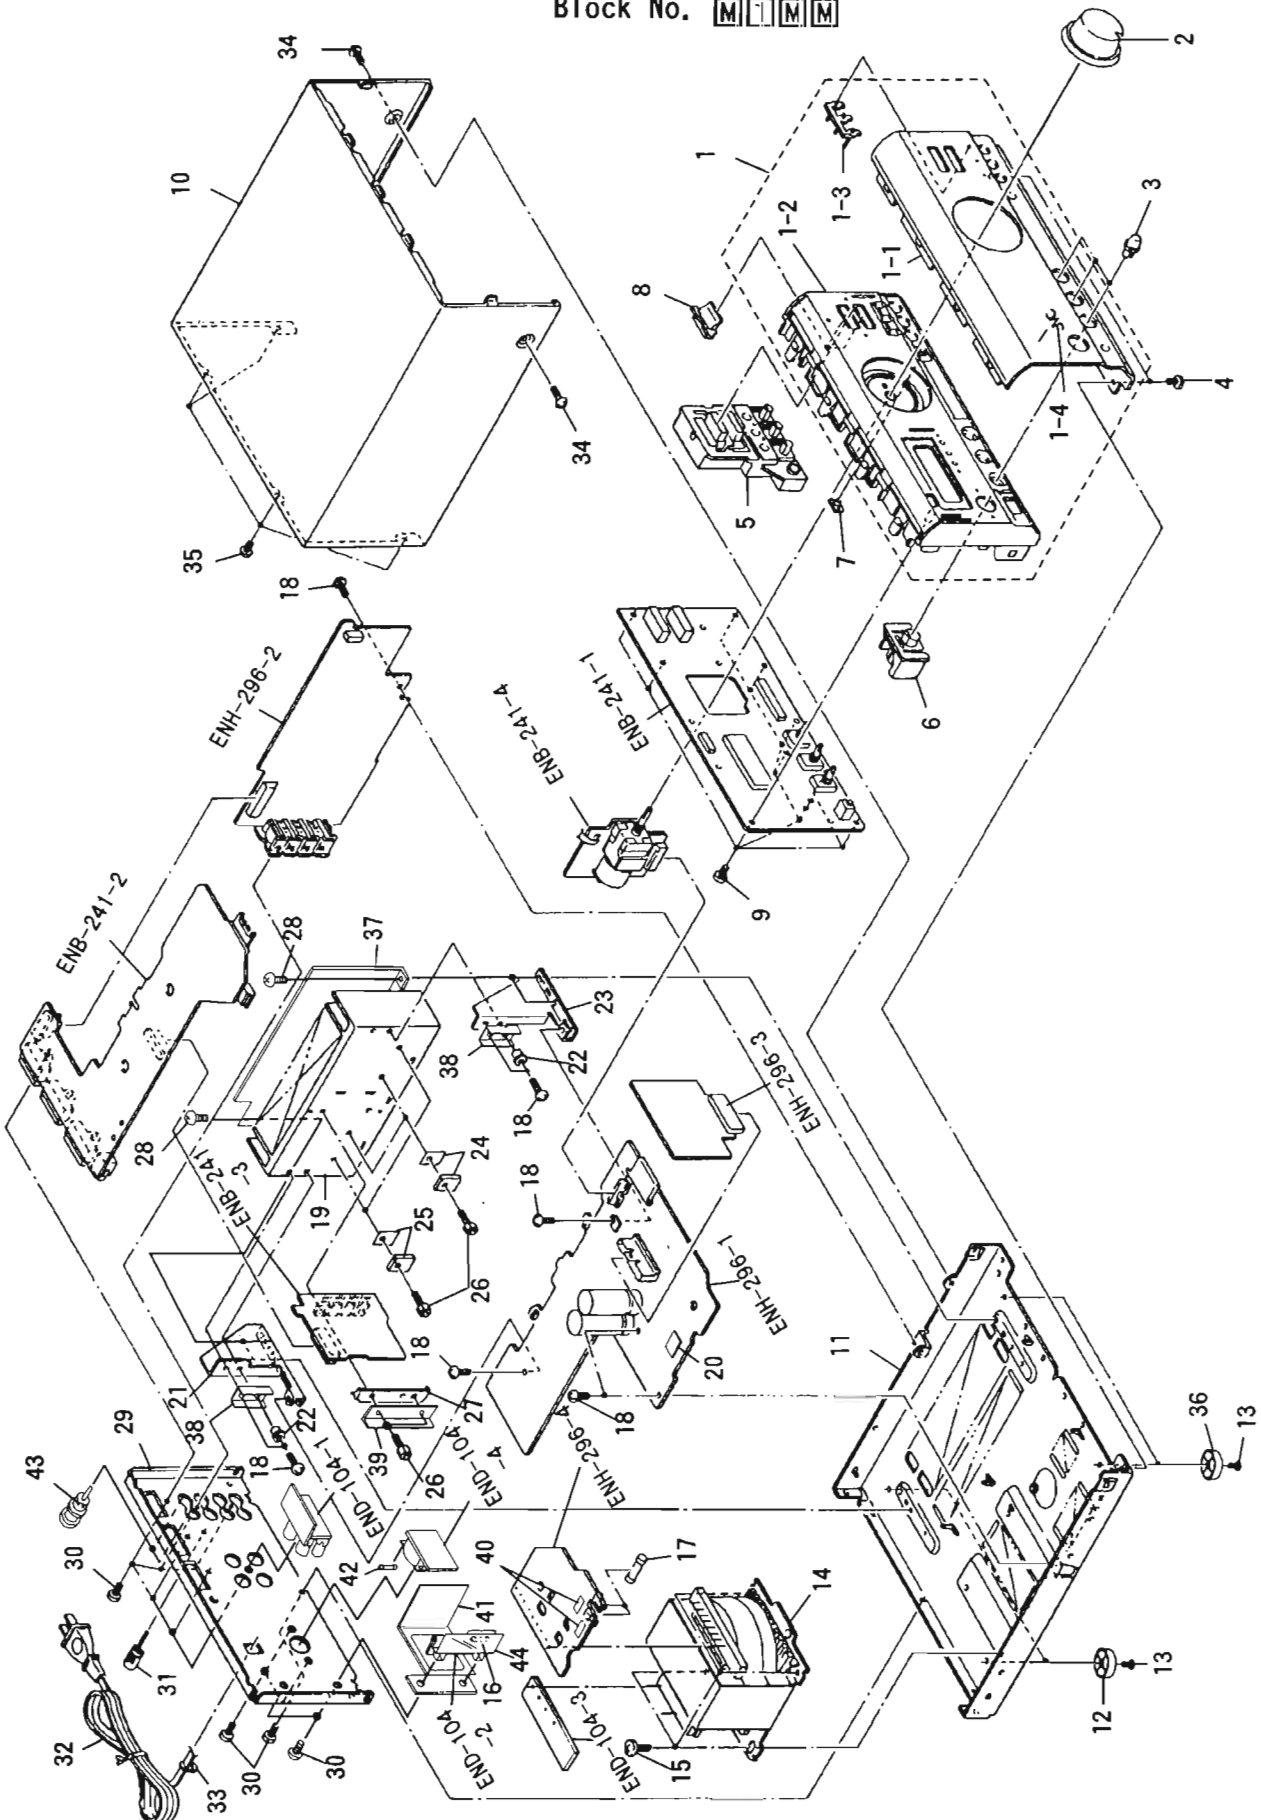

■ Parts List

Block No. 

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|-----------------|-------------------|------|--------------------------|--------------------|
| | 1 | EFP-AXF3000E(S) | FRONT PANEL ASSY | 1 | | |
| | 1-1 | E208722-003 | FRONT PANEL | 1 | | |
| | 1-2 | E103093-002ST | FRONT BASE | 1 | | |
| | 1-3 | E408916-001 | INDICATOR | 1 | FUNCTION | |
| | 1-4 | E406971-221 | JVC MARK | 1 | | |
| | 2 | E309630-004SS | VOLUME KNOB | 1 | | |
| | 3 | E408127-006 | KNOB | 3 | BASS TREBLE BALANCE | |
| | 4 | SDSG3008CC | TAPPING SCREW | 2 | | |
| | 5 | E208724-003SS | PUSH BUTTON ASSY | 1 | SOURCE | |
| | 6 | E309827-003SS | PUSH BUTTON ASSY | 1 | POWER | |
| | 7 | E408131-001 | REMOCON PLATE | 1 | | |
| | 8 | E408915-001 | INDICATOR | 2 | DIRECT | |
| | 9 | SDSF2608Z | SCREW | 10 | | |
| | 10 | E208174-009(S) | METAL COVER | 1 | | |
| | 11 | E102864-001 | CHASSIS BASE | 1 | | |
| | 12 | E75281-010 | FOOT | 2 | | |
| | 13 | SBST3010Z | TAPPING SCREW | 4 | | |
| △ | 14 | ETP1100-63EAJ | POWER TRANSFORMER | 1 | | EF EN G BS |
| △ | | ETP1100-63FAJ | POWER TRANSFORMER | 1 | | U UB US UT |
| △ | | ETP1100-63JAJ | POWER TRANSFORMER | 1 | | C J |
| | 15 | E65389-004 | SPECIAL SCREW | 4 | | |
| △ | 16 | QMF0007-2R5J1 | FUSE | 1 | F001 (T2. 5A/125V) | C J |
| △ | | QMF51E2-1R2J1BS | FUSE | 1 | F001 (T1. 2A/250V) | BS |
| △ | | QMF51E2-1R25 | FUSE | 1 | F001 (T1. 25A/250V) | EF EN G |
| △ | | QMF51E2-2R5J1 | FUSE | 1 | F001 (2. 5A/250V) | U UB US UT |
| △ | 17 | QMF0007-1R6J1 | FUSE | 2 | F801 F802 (T1. 6A/125V) | C J |
| △ | | QMF51E2-1R2J1BS | FUSE | 2 | F801 F802 (T1. 2A/250V) | BS |
| △ | | QMF51E2-1R25 | FUSE | 2 | F801 F802 (T1. 25A/250V) | EF EN G U UB US UT |
| | 18 | SBS3008CC | TAPPING SCREW | 9 | | |
| | 19 | E309632-003SS | HEAT SINK | 1 | | |
| | 20 | E3400-431 | FELT SPACER | 1 | | BS EF EN G |
| | 21 | E308971-001ST | HEAT SINK BRACKET | 1 | | |
| | 22 | BUSH-PUL | BUSHING | 2 | | |
| | 23 | E308971-002ST | HEAT SINK BRACKET | 1 | | |
| | 24 | 2SC3853LD(O. Y) | SI. TRANSISTOR | 2 | Q769 Q770 | |
| | 25 | 2SA1489LD(O. Y) | SI. TRANSISTOR | 2 | Q771 Q772 | |
| | 26 | E73525-003 | SCREW | 6 | | |
| | 27 | E408969-221 | LEAF SPRING | 1 | | |
| | 28 | SBST3006CC | TAPPING SCREW | 4 | | |
| | 29 | E208727-002 | REAR PANEL | 1 | | J |
| | | E208727-003 | REAR PANEL | 1 | | C |
| | | E208727-004 | REAR PANEL | 1 | | BS EF EN G |
| | | E208727-005 | REAR PANEL | 1 | | U UB US UT |
| | 30 | E73273-003 | SPECIAL SCREW | 11 | | U UB US UT |
| | | E73273-003 | SPECIAL SCREW | 9 | | Except U UB US UT |
| | 31 | E409257-001 | EARTH TERMINAL | 1 | | |
| △ | 32 | QMP1480-200L | POWER CORD | 1 | | C J |
| △ | | QMP3900-200 | POWER CORD | 1 | | EF EN G US |
| △ | | QMP5530-0085BS | POWER CORD | 1 | | BS UB |
| △ | | QMP7520-200 | POWER CORD | 1 | | U UT |
| △ | 33 | QHS3771-108 | CORD STOPPER | 1 | | |
| | 34 | SDSG3008N | TAPPING SCREW | 2 | | |
| | 35 | GBSG3008CC | TAPPING SCREW | 4 | | |
| | 36 | E75281-009 | FOOT | 2 | | |
| | 37 | E310161-001 | PROTECT SHEET | 1 | | |
| | 38 | E70306-001 | HEAT SINK | 2 | | |
| | 39 | E409510-001SS | HEAT SINK | 1 | | |
| | 40 | E61380-032 | FUSE LABEL | 2 | | C J |
| | 41 | E310128-001SS | PROTECT SHEET | 1 | | U UB US UT |
| | | E409464-001SS | PROTECT SHEET | 1 | | BS C EF EN G J |
| △ | 42 | QMF51E2-1R25 | FUSE | 1 | F002 (T1. 25A/250V) | U UB US UT |
| | 43 | E03449-001 | SHORT PLUG | 2 | | |
| | 44 | E310127-001SS | PROTECT COVER | 1 | | |
| | - | E61029-005 | NUMBER LABEL | 1 | | |
| | | E75803-001 | FUSE C. LABEL | 1 | | J |
| | | E75804-001 | FUSE C. LABEL | 1 | | C |
| | | E75139-004 | NAME SHEET | 1 | | U |
| | | E309384-027 | RATING LABEL | 1 | | UT |

AX-F3000

■ Electrical Parts List (ENH-296)

| Item | Part Number | Description | Area |
|--------|------------------|---------------------|------|
| | I. C. S | | |
| IC101 | NJM4580DD | I. C. (MONO-ANALOG) | |
| IC201 | TC9164AM | I. C. (DIGI-MOS) | |
| IC231 | NJM4580DD | I. C. (MONO-ANALOG) | |
| IC301 | NJM4580DD | I. C. (MONO-ANALOG) | |
| IC361 | NJM4580DD | I. C. (MONO-ANALOG) | |
| IC363 | NJM4558D | I. C. (MONO-ANALOG) | |
| IC751 | VC5022-2 | I. C. (MONO-ANALOG) | |
| IC752 | VC5022-2 | I. C. (MONO-ANALOG) | |
| | DIODES | | |
| D202 | 1SS119 | SI. DIODE | |
| D203 | 1SS119 | SI. DIODE | |
| D211 | MTZ2.7JB | ZENER DIODE | |
| D700 | SLR-342MCA47 | L. E. D. | |
| D711 | MTZ2.7JB | ZENER DIODE | |
| D712 | MTZ2.7JB | ZENER DIODE | |
| D713 | 1SS119 | SI. DIODE | |
| D714 | 1SS119 | SI. DIODE | |
| D721 | MTZ6.2JC | ZENER DIODE | |
| D751 | 1SS119 | SI. DIODE | |
| D752 | 1SS119 | SI. DIODE | |
| D791 | 1SS119 | SI. DIODE | |
| D792 | 1SS119 | SI. DIODE | |
| D793 | 1SS119 | SI. DIODE | |
| D794 | 1SS119 | SI. DIODE | |
| Δ D801 | 30DL2FC | SI. DIODE | |
| Δ D802 | 30DL2FC | SI. DIODE | |
| Δ D803 | 30DL2FC | SI. DIODE | |
| Δ D804 | 30DL2FC | SI. DIODE | |
| D901 | 1SS119 | SI. DIODE | |
| D902 | 1SS119 | SI. DIODE | |
| D905 | 1SS119 | SI. DIODE | |
| D912 | 1SS119 | SI. DIODE | |
| | TRANSISTORS | | |
| Q251 | 2SC2389 (S. E) | SI. TRANSISTOR | |
| Q353 | DTA144ES | DIGITAL TRANSISTOR | |
| Q354 | DTA144ES | DIGITAL TRANSISTOR | |
| Q355 | DTA114TS | DIGITAL TRANSISTOR | |
| Q357 | 2SD2144S (VM) | SI. TRANSISTOR | |
| Q358 | 2SD2144S (VM) | SI. TRANSISTOR | |
| Q361 | 2SK301 (P. Q) | F. E. T. | |
| Q362 | 2SK301 (P. Q) | F. E. T. | |
| Q524 | DTA144ES | DIGITAL TRANSISTOR | |
| Q701 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q702 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q703 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q704 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q705 | 2SC1775AY (F1) | SI. TRANSISTOR | |
| Q706 | 2SC1775AY (F1) | SI. TRANSISTOR | |
| Q707 | 2SA933LN (R. S) | SI. TRANSISTOR | |
| Q708 | 2SA933LN (R. S) | SI. TRANSISTOR | |
| Q709 | 2SA1207 (S. T) | SI. TRANSISTOR | |
| Q710 | 2SA1207 (S. T) | SI. TRANSISTOR | |
| Q711 | 2SC2909 (S. T) | SI. TRANSISTOR | |
| Q712 | 2SC2909 (S. T) | SI. TRANSISTOR | |
| Q713 | 2SA933LN (R. S) | SI. TRANSISTOR | |
| Q714 | 2SA933LN (R. S) | SI. TRANSISTOR | |
| Q751 | 2SD637 (Q. R) | SI. TRANSISTOR | |
| Q752 | 2SD637 (Q. R) | SI. TRANSISTOR | |
| Q761 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q762 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q763 | 2SA970 (GR) | SI. TRANSISTOR | |
| Q764 | 2SA970 (GR) | SI. TRANSISTOR | |
| Q765 | 2SC2235 (Q. Y) | SI. TRANSISTOR | |
| Q766 | 2SC2235 (Q. Y) | SI. TRANSISTOR | |
| Q767 | 2SA965 (Y) | SI. TRANSISTOR | |
| Q768 | 2SA965 (Y) | SI. TRANSISTOR | |
| Q773 | 2SK170 (BL) | F. E. T. | |
| Q774 | 2SK170 (BL) | F. E. T. | |

| Item | Part Number | Description | Area |
|------|------------------|------------------------|----------------|
| Q791 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| Q792 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| Q793 | 2SA933S (RS) | SI. TRANSISTOR | |
| Q794 | 2SA933S (RS) | SI. TRANSISTOR | |
| Q901 | 2SA970 (GR) | SI. TRANSISTOR | |
| Q902 | 2SA970 (GR) | SI. TRANSISTOR | |
| Q903 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q904 | 2SC3311A (Q. R) | SI. TRANSISTOR | |
| Q905 | 2SA703A (P. K) | SI. TRANSISTOR | |
| Q906 | 2SC2240 (GR. BL) | SI. TRANSISTOR | |
| Q921 | DTA144ES | DIGITAL TRANSISTOR | |
| Q922 | DTA114YS | DIGITAL TRANSISTOR | |
| Q923 | 2SA970 (GR) | SI. TRANSISTOR | |
| Q931 | 2SC3311A (Q. R) | SI. TRANSISTOR | |
| | CAPACITORS | | |
| C101 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C102 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C105 | QCBB1HK-221Y | 220PF 50V CER. CAP. | BS EF EN Q |
| C106 | QCBB1HK-221Y | 220PF 50V CER. CAP. | BS EF EN Q |
| C107 | QCBB1HK-471Y | 470PF 50V CER. CAP. | BS EF EN Q |
| C108 | QCBB1HK-471Y | 470PF 50V CER. CAP. | BS EF EN Q |
| C111 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C112 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C113 | QFLB1HJ-682 | 6800PF 50V MYLAR CAP. | |
| C114 | QFLB1HJ-682 | 6800PF 50V MYLAR CAP. | |
| C115 | QFLB1HJ-152 | 1500PF 50V MYLAR CAP. | |
| C116 | QFLB1HJ-152 | 1500PF 50V MYLAR CAP. | |
| C117 | QCS31HJ-391Z | 390PF 50V CER. CAP. | |
| C118 | QCS31HJ-391Z | 390PF 50V CER. CAP. | |
| C121 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C122 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C123 | QETB0JM-107 | 100MF 6.3V AL. E. CAP. | |
| C124 | QETB0JM-107 | 100MF 6.3V AL. E. CAP. | |
| C203 | QCS21HJ-101A | 100PF 50V CER. CAP. | C J U UB US UT |
| C203 | QCS31HJ-331Z | 330PF 50V CER. CAP. | BS EF EN G |
| C204 | QCS21HJ-101A | 100PF 50V CER. CAP. | C J U UB US UT |
| C204 | QCS31HJ-331Z | 330PF 50V CER. CAP. | BS EF EN G |
| C220 | QCBB1HK-471Y | 470PF 50V CER. CAP. | |
| C221 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C222 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C231 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C232 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C233 | QCBB1HK-101Y | 100PF 50V CER. CAP. | |
| C234 | QCBB1HK-101Y | 100PF 50V CER. CAP. | |
| C241 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C242 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C251 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C261 | QFLC1HJ-561Z | 560PF 50V MYLAR CAP. | |
| C262 | QFLC1HJ-561Z | 560PF 50V MYLAR CAP. | |
| C281 | QCBB1HK-221Y | 220PF 50V CER. CAP. | BS EF EN Q |
| C282 | QCBB1HK-221Y | 220PF 50V CER. CAP. | BS EF EN Q |
| C301 | QCBB1HK-101Y | 100PF 50V CER. CAP. | |
| C302 | QCBB1HK-101Y | 100PF 50V CER. CAP. | |
| C305 | QCSB1HJ-680 | 68PF 50V CER. CAP. | |
| C306 | QCSB1HJ-680 | 68PF 50V CER. CAP. | |
| C307 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C308 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C309 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C310 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C311 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C312 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C320 | QCBB1HK-102 | 1000PF 50V CER. CAP. | |
| C331 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C332 | QETB1EM-107 | 100MF 25V AL. E. CAP. | |
| C345 | QETB1EM-106 | 10MF 25V AL. E. CAP. | |
| C371 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C372 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C373 | QETB1HM-106 | 10MF 50V E. CAP. | |
| C374 | QETB1HM-106 | 10MF 50V E. CAP. | |

■ Electrical Parts List (ENH-296)

| △ | Item | Parts Number | Description | Area |
|---|------|---------------|-------------------------|------------|
| | C381 | QFVB1HJ-474N | 0.47MF 50V THIN FILM CA | |
| | C382 | QFVB1HJ-474N | 0.47MF 50V THIN FILM CA | |
| | C383 | QFLB1HJ-563 | 0.056MF 50V MYLAR CAP. | |
| | C384 | QFLB1HJ-563 | 0.056MF 50V MYLAR CAP. | |
| | C385 | QFLB1HJ-822 | 8200PF 50V MYLAR CAP. | |
| | C386 | QFLB1HJ-822 | 8200PF 50V MYLAR CAP. | |
| | C389 | QFLB1HJ-333 | 0.033MF 50V MYLAR CAP. | |
| | C390 | QFLB1HJ-333 | 0.033MF 50V MYLAR CAP. | |
| | C395 | QETB1EM-107 | 100MF 25V AL E. CAP. | |
| | C396 | QETB1EM-107 | 100MF 25V AL E. CAP. | |
| | C701 | EETB1CM-228E | 22MF 18V E. CAP. | |
| | C702 | EETB1CM-228E | 22MF 18V E. CAP. | |
| | C703 | QCS21HJ-680A | 68PF 50V CER. CAP. | |
| | C704 | QCS21HJ-680A | 68PF 50V CER. CAP. | |
| | C705 | QCS21HJ-101A | 100PF 50V CER. CAP. | BS EF EN G |
| | C706 | QCS21HJ-101A | 100PF 50V CER. CAP. | BS EF EN G |
| | C709 | QFN81HJ-821 | 820PF 50V MYLAR CAP. | |
| | C710 | QFN81HJ-821 | 820PF 50V MYLAR CAP. | |
| | C711 | QCS21HJ-100 | 10PF 50V CER. CAP. | |
| | C712 | QCS21HJ-100 | 10PF 50V CER. CAP. | |
| | C713 | EETB1CM-228E | 22MF 18V E. CAP. | |
| | C714 | EETB1CM-228E | 22MF 18V E. CAP. | |
| | C721 | QCS21HJ-220A | 22PF 50V CER. CAP. | |
| | C722 | QCS21HJ-220A | 22PF 50V CER. CAP. | |
| | C723 | QCS21HJ-680A | 68PF 50V CER. CAP. | |
| | C724 | QCS21HJ-680A | 68PF 50V CER. CAP. | |
| | C725 | QCS21HJ-680A | 68PF 50V CER. CAP. | |
| | C726 | QCS21HJ-680A | 68PF 50V CER. CAP. | |
| | C727 | QFN31HJ-103Z | 0.01MF 50V MYLAR CAP. | |
| | C728 | QFN31HJ-103Z | 0.01MF 50V MYLAR CAP. | |
| | C781 | QFP81HJ-680 | 68PF 50V POLYPROP. F1 | |
| | C782 | QFP81HJ-680 | 68PF 50V POLYPROP. F1 | |
| | C783 | QFP81HJ-680 | 68PF 50V POLYPROP. F1 | |
| | C784 | QFP81HJ-680 | 68PF 50V POLYPROP. F1 | |
| | C773 | QFN31HJ-473ZN | 0.047MF 50V MYLAR CAP. | |
| | C774 | QFN31HJ-473ZN | 0.047MF 50V MYLAR CAP. | |
| | C781 | QFVC1HJ-104ZN | 0.1MF 50V METAL. MYLAR | |
| | C782 | QFVC1HJ-104ZN | 0.1MF 50V METAL. MYLAR | |
| | C783 | QFVC1HJ-104ZN | 0.1MF 50V METAL. MYLAR | |
| | C784 | QFVC1HJ-104ZN | 0.1MF 50V METAL. MYLAR | |
| | C801 | EEW5009-828E | 8200MF E. CAP. | |
| | C802 | EEW5009-828E | 8200MF E. CAP. | |
| | C811 | EETB1HM-227E | 220MF 50V AL E. CAP. | |
| | C812 | EETB1HM-227E | 220MF 50V AL E. CAP. | |
| | C843 | QFN82AJ-104 | 0.1MF 100V MYLAR CAP. | |
| | C844 | QFN82AJ-104 | 0.1MF 100V MYLAR CAP. | |
| | C845 | QFN82AJ-104 | 0.1MF 100V MYLAR CAP. | |
| | C846 | QFN82AJ-104 | 0.1MF 100V MYLAR CAP. | |
| | C901 | QETB1HM-105 | 1MF 50V AL E. CAP. | |
| | C903 | QETB1HM-228E | 22MF 50V E. CAP. | |
| | C904 | QETB1CM-476 | 47MF 16V AL E. CAP. | |
| | C955 | QCS31HJ-471Z | 470PF 50V CER. CAP. | BS EF EN G |
| | | RESISTORS | | |
| | R101 | QRD161J-471 | 470 1/6W CARBON RES. | |
| | R102 | QRD161J-471 | 470 1/6W CARBON RES. | |
| | R103 | QRD161J-473 | 47K 1/6W CARBON RES. | |
| | R104 | QRD161J-473 | 47K 1/6W CARBON RES. | |
| | R105 | QRD161J-474 | 470K 1/6W CARBON RES. | |
| | R106 | QRD161J-474 | 470K 1/6W CARBON RES. | |
| | R107 | QRD161J-393 | 39K 1/6W CARBON RES. | |
| | R108 | QRD161J-393 | 39K 1/6W CARBON RES. | |
| | R109 | QRD167J-511 | 510 1/6W CARBON RES. | |
| | R110 | QRD167J-511 | 510 1/6W CARBON RES. | |
| | R111 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R112 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R113 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R114 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R121 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R122 | QRD161J-101 | 100 1/6W CARBON RES. | |

| △ | Item | Parts Number | Description | Area |
|---|------|---------------|------------------------|------|
| | R201 | QRD161J-222 | 2.2K 1/6W CARBON RES. | |
| | R202 | QRD161J-222 | 2.2K 1/6W CARBON RES. | |
| | R203 | QRD161J-273 | 27K 1/6W CARBON RES. | |
| | R204 | QRD161J-273 | 27K 1/6W CARBON RES. | |
| | R211 | QRD161J-913 | 91K 1/6W CARBON RES. | |
| | R212 | QRD161J-913 | 91K 1/6W CARBON RES. | |
| | R213 | QRD161J-303Y | 30K 1/6W CARBON RES. | |
| | R214 | QRD161J-303Y | 30K 1/6W CARBON RES. | |
| | R217 | QRD161J-331 | 330 1/6W CARBON RES. | |
| | R218 | QRD161J-331 | 330 1/6W CARBON RES. | |
| | R221 | QRD161J-331 | 330 1/6W CARBON RES. | |
| | R222 | QRD161J-331 | 330 1/6W CARBON RES. | |
| | R231 | QRD161J-123 | 12K 1/6W CARBON RES. | |
| | R232 | QRD161J-123 | 12K 1/6W CARBON RES. | |
| | R235 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R236 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R241 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R242 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R255 | QRD167J-223 | 22K 1/6W CARBON RES. | |
| | R256 | QRD161J-333 | 33K 1/6W CARBON RES. | |
| | R261 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R262 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R263 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R264 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R265 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R266 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R301 | QRD161J-123 | 12K 1/6W CARBON RES. | |
| | R302 | QRD161J-123 | 12K 1/6W CARBON RES. | |
| | R305 | QRD161J-123 | 12K 1/6W CARBON RES. | |
| | R306 | QRD161J-123 | 12K 1/6W CARBON RES. | |
| | R331 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R332 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R343 | QRD161J-105 | 1M 1/6W CARBON RES. | |
| | R344 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R345 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R357 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R358 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R371 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R372 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R373 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R374 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R375 | QRD167J-223 | 22K 1/6W CARBON RES. | |
| | R376 | QRD167J-223 | 22K 1/6W CARBON RES. | |
| | R381 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R382 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R383 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R384 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R385 | QRD161J-392 | 3.9K 1/6W CARBON RES. | |
| | R386 | QRD161J-392 | 3.9K 1/6W CARBON RES. | |
| | R389 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R390 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R391 | QRD161J-474 | 470K 1/6W CARBON RES. | |
| | R392 | QRD161J-474 | 470K 1/6W CARBON RES. | |
| | R393 | QRD161J-391 | 390 1/6W CARBON RES. | |
| | R394 | QRD161J-391 | 390 1/6W CARBON RES. | |
| △ | R395 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| △ | R396 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| | R522 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R523 | QRD161J-475 | 4.7M 1/6W CARBON RES. | |
| | R524 | QRD161J-475 | 4.7M 1/6W CARBON RES. | |
| | R527 | QRD161J-105 | 1M 1/6W CARBON RES. | |
| | R528 | QRD161J-105 | 1M 1/6W CARBON RES. | |
| | R701 | ERD004J-221Z | 220 CARBON RES. | |
| | R702 | ERD004J-221Z | 220 CARBON RES. | |
| | R703 | ERD004J-104 | 100K CARBON RES. | |
| | R704 | ERD004J-104 | 100K CARBON RES. | |
| △ | R705 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| △ | R706 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| | R707 | QRD14CJ-121SX | 120 1/4W UNF. CARBON R | |

AX-F3000

■ Electrical Parts List (ENH-296)

| △ | Item | Parts Number | Description | Area |
|---|------|---------------|-------------------------|------|
| | R708 | QRD14CJ-121SX | 120 1/4W UNF. CARBON R | |
| | R709 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R710 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R711 | ERD004J-104 | 100K CARBON RES. | |
| | R712 | ERD004J-104 | 100K CARBON RES. | |
| | R713 | ERD004J-182Z | 1.8K CARBON RES. | |
| | R714 | ERD004J-182Z | 1.8K CARBON RES. | |
| △ | R715 | QRV144F-2201A | 2.2K 1/4W CONST. METAL | |
| △ | R716 | QRV144F-2201A | 2.2K 1/4W CONST. METAL | |
| △ | R717 | QRV144F-2701 | 2.7K 1/4W CONST. METAL | |
| △ | R718 | QRV144F-2701 | 2.7K 1/4W CONST. METAL | |
| △ | R719 | QRV144F-2702 | 27K 1/4W CONST. METAL | |
| △ | R723 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R724 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R725 | QRD14CJ-560S | 56 1/4W UNF. CARBON R | |
| △ | R726 | QRD14CJ-560S | 56 1/4W UNF. CARBON R | |
| | R727 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R728 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R729 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R730 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| △ | R731 | QRV144F-2702 | 27K 1/4W CONST. METAL | |
| △ | R732 | QRV144F-2702 | 27K 1/4W CONST. METAL | |
| △ | R735 | QRD14CJ-221S | 220 1/4W UNF. CARBON R | |
| △ | R738 | QRD14CJ-221S | 220 1/4W UNF. CARBON R | |
| △ | R737 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| △ | R738 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| | R751 | QVPE601-501 | 500 0.15W TRIMMER RES. | |
| | R752 | QVPE601-501 | 500 0.15W TRIMMER RES. | |
| | R755 | ERT-D2WFL351S | 350 1/4W NEGATIVE THE | |
| | R756 | ERT-D2WFL351S | 350 1/4W NEGATIVE THE | |
| | R757 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R758 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R759 | QRD161J-471 | 470 1/6W CARBON RES. | |
| | R780 | QRD161J-471 | 470 1/6W CARBON RES. | |
| | R781 | QRD161J-391 | 390 1/6W CARBON RES. | |
| | R782 | QRD161J-391 | 390 1/6W CARBON RES. | |
| △ | R763 | QRD14CJ-122SX | 1.2K 1/4W UNF. CARBON R | |
| △ | R764 | QRD14CJ-122SX | 1.2K 1/4W UNF. CARBON R | |
| △ | R765 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| △ | R766 | QRD14CJ-101S | 100 1/4W UNF. CARBON R | |
| | R767 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | |
| | R768 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | |
| | R769 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | |
| | R770 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | |
| △ | R771 | ERF032K-R22 | 0.22 3W CEM. RES. | |
| △ | R772 | ERF032K-R22 | 0.22 3W CEM. RES. | |
| △ | R777 | QRD14CJ-470SX | 47 1/4W UNF. CARBON R | |
| △ | R778 | QRD14CJ-470SX | 47 1/4W UNF. CARBON R | |
| △ | R779 | QRD14CJ-470SX | 47 1/4W UNF. CARBON R | |
| △ | R780 | QRD14CJ-470SX | 47 1/4W UNF. CARBON R | |
| △ | R781 | QRD125J-100 | 10 1/2W UNF. CARBON R | |
| △ | R782 | QRD125J-100 | 10 1/2W UNF. CARBON R | |
| △ | R783 | ORG022J-100A | 10 2W OXIDE METAL | |
| △ | R784 | ORG022J-100A | 10 2W OXIDE METAL | |
| | R785 | ORG01DJ-821X | 820 1W OXIDE METAL | |
| | R786 | ORG01DJ-821X | 820 1W OXIDE METAL | |
| △ | R789 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R790 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R791 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R792 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R793 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| △ | R794 | QRD14CJ-471SX | 470 1/4W UNF. CARBON R | |
| | R795 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R796 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R797 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| | R798 | QRD14CJ-331SX | 330 1/4W UNF. CARBON R | |
| △ | R811 | QRD14CJ-330SX | 33 1/4W UNF. CARBON R | |
| △ | R812 | QRD14CJ-330SX | 33 1/4W UNF. CARBON R | |
| | R901 | QRD161J-104 | 100K 1/6W CARBON RES. | |

| △ | Item | Parts Number | Description | Area |
|---|-------|--------------|-----------------------|--------------------------|
| | R902 | QRD161J-823 | 82K 1/6W CARBON RES. | |
| | R903 | QRD167J-272 | 2.7K 1/6W CARBON RES. | |
| | R904 | QRD167J-272 | 2.7K 1/6W CARBON RES. | |
| | R905 | QRD167J-153 | 15K 1/6W CARBON RES. | |
| | R906 | QRD167J-153 | 15K 1/6W CARBON RES. | |
| | R907 | QRD167J-223 | 22K 1/6W CARBON RES. | |
| | R908 | QRD167J-223 | 22K 1/6W CARBON RES. | |
| | R909 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R910 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R911 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R912 | QRD161J-473 | 47K 1/6W CARBON RES. | |
| | R913 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R914 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R915 | QRD161J-473 | 47K 1/6W CARBON RES. | |
| | R916 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R917 | QRD161J-222 | 2.2K 1/6W CARBON RES. | |
| | R921 | QRD161J-563 | 56K 1/6W CARBON RES. | |
| | R922 | QRD161J-473 | 47K 1/6W CARBON RES. | |
| | R924 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R931 | ORG01DJ-471X | 470 1W OXIDE METAL | BS EF EM G U UB US U1 |
| △ | R931 | ORG022J-391A | 390 2W OXIDE METAL | C J |
| | R933 | QRD161J-222 | 2.2K 1/6W CARBON RES. | |
| | | OTHERS | | |
| | | EMW10582-102 | PRINTED BOARD | |
| | | E61380-032 | FUSE LABEL | C |
| | | E61380-032 | FUSE LABEL | J |
| | J201 | EMN00TV-406B | PIN JACK | |
| | J202 | EMN00TV-406A | JACK BOARD ASSY | |
| | L781 | EQL0001-1R0 | INDUCTOR | |
| | L782 | EQL0001-1R0 | INDUCTOR | |
| | S510 | ESP0001-023M | TACT SWITCH | |
| | CN001 | EMS284-004 | SOCKET WIRE ASSY | |
| | CN201 | EMV7145-005Z | SOCKET ASSY | |
| | CN202 | EMV5109-006B | CONNECT TERMINAL | |
| | CN203 | EMV5109-003B | CONNECT TERMINAL | |
| | CN212 | EMS296-1916 | SOCKET WIRE ASSY | |
| | CN606 | VMC0107-R06 | MALE CONNECTOR | |
| | CN614 | EMV5163-012R | CONNECT TERMINAL | |
| | CN701 | EMV3140-015 | CONNECT TERMINAL | |
| | CN711 | EMV7140-L15R | CONNECT TERMINAL | |
| | CN901 | EMV7167-026R | CONNECT TERMINAL | |
| | CN902 | EMV7163-010 | CONNECT TERMINAL | |
| | EP200 | EMZ4002-002Z | EARTH PLATE | |
| | EP300 | EMZ4002-002Z | EARTH PLATE | |
| | FS705 | E3400-431 | FELT SPACER | BS EF EN G |
| | FS706 | E3400-431 | FELT SPACER | BS EF EN G |
| | FS707 | E3400-431 | FELT SPACER | BS EF EN G |
| | FS708 | E3400-431 | FELT SPACER | BS EF EN G |
| | FT801 | EMG7331-003Z | FUSE CLIP | |
| | FT802 | EMG7331-003Z | FUSE CLIP | |
| | FT811 | EMG7331-003Z | FUSE CLIP | |
| | FT812 | EMG7331-003Z | FUSE CLIP | |
| | RY251 | ESK5024-21AF | RELAY | |
| | RY901 | ESK7024-2120 | RELAY | |

■ Electrical Parts List (ENB-241)

| Δ | Item | Parts Number | Description | Area |
|---|-------|-----------------|-----------------------|---------------------------|
| | | I. C. S | | |
| | IC351 | LB1639-CV | I. C (DIQI-OTHER) | |
| | IC501 | MN17120ZKBH | I. C (MICRO-COMPUTER) | |
| | IC502 | MJH32H380A | I. C (M) | |
| | | DIODES | | |
| | D655 | 1SR139-200 | SI. DIODE | |
| | D604 | 1SS119 | SI. DIODE | |
| | D605 | 1SS119 | SI. DIODE | |
| | D606 | 1SS119 | SI. DIODE | |
| | D607 | 1SS119 | SI. DIODE | |
| | D608 | SLR-342MCA47 | L. E. D. | |
| | D609 | SLR-342MCA47 | L. E. D. | |
| | D610 | SLR-342MCA47 | L. E. D. | |
| | D611 | SLR-342MCA47 | L. E. D. | |
| | D612 | SLR-342MCA47 | L. E. D. | |
| | D613 | SLR-342MCA47 | L. E. D. | |
| | D614 | SLA-380LT | L. E. D. | BS |
| | D614 | SLR-342VC3F | L. E. D. | C EF EN G J U UB US UT |
| | D615 | SLR-342VC3F | L. E. D. | |
| | D616 | SLR-342VC3F | L. E. D. | |
| | D617 | SLR-342VC3F | L. E. D. | |
| | D618 | SLR-342VC3F | L. E. D. | |
| | D619 | SLR-342VC3F | L. E. D. | |
| | D620 | SLR-342VC3F | L. E. D. | |
| Δ | D611 | 11E2 | SI. DIODE | |
| Δ | D612 | 11E2 | SI. DIODE | |
| Δ | D613 | 11E2 | SI. DIODE | |
| Δ | D614 | 11E2 | SI. DIODE | |
| | D615 | 1SR139-200 | SI. DIODE | |
| | D616 | 1SR139-200 | SI. DIODE | |
| | D617 | 1SR139-200 | SI. DIODE | |
| | D621 | 1SS119 | SI. DIODE | |
| | D622 | 1SS119 | SI. DIODE | |
| | D623 | MTZ5. 1JB | ZENER DIODE | |
| | D624 | 1SR139-200 | SI. DIODE | |
| | D625 | 1SR139-200 | SI. DIODE | |
| | D626 | MTZ33JC | ZENER DIODE | |
| | D627 | MTZ8. 2JC | ZENER DIODE | |
| | D629 | 1SS119 | SI. DIODE | |
| | D630 | 1SS119 | SI. DIODE | |
| | D631 | 1SS119 | SI. DIODE | |
| | D651 | MTZ5. 1JAT-77 | ZENER DIODE | |
| | D653 | MTZ5. 6JC | ZENER DIODE | |
| | D654 | MTZ8. 8JC | ZENER DIODE | |
| | D655 | MTZ8. 8JC | ZENER DIODE | |
| | | TRANSISTORS | | |
| | Q351 | 2SC2878 (B) | SI. TRANSISTOR | |
| | Q352 | 2SC2878 (B) | SI. TRANSISTOR | |
| | Q503 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q522 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q523 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q524 | DTA144ES | DIGITAL TRANSISTOR | |
| | Q525 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q621 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q622 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q623 | 2SB1357 (E. F) | SI. TRANSISTOR | |
| | Q624 | 2SD2037 (E. F) | SI. TRANSISTOR | |
| | Q651 | 2SD2061 (F. G) | SI. TRANSISTOR | |
| | Q652 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q653 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| Δ | Q654 | 2SD2394 (E. F) | SI. TRANSISTOR | |
| | Q655 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q658 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| Δ | Q657 | 2SD2394 (E. F) | SI. TRANSISTOR | |
| | Q658 | 2SC1775AV (F1) | SI. TRANSISTOR | |
| | Q659 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q660 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q661 | 2SB1565 (E. F) | SI. TRANSISTOR | |

| Δ | Item | Parts Number | Description | Area |
|---|------|-----------------|--------------------------|------------|
| | Q662 | 2SA872AV (E. F) | SI. TRANSISTOR | |
| | Q663 | 2SA933LN (R. S) | SI. TRANSISTOR | |
| | Q664 | 2SA933LN (R. S) | SI. TRANSISTOR | |
| | Q665 | DTA144ES | DIGITAL TRANSISTOR | |
| | Q666 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q667 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q668 | DTA144ES | DIGITAL TRANSISTOR | |
| | | CAPACITORS | | |
| | C313 | QFN81HJ-153 | 0. 015MF 50V MYLAR CAP. | |
| | C314 | QFN81HJ-153 | 0. 015MF 50V MYLAR CAP. | |
| | C315 | QFVB1HJ-124H | 0. 12MF 50V THIN FILM CA | |
| | C316 | QFVB1HJ-124H | 0. 12MF 50V THIN FILM CA | |
| | C317 | QFVB1HJ-124H | 0. 12MF 50V THIN FILM CA | |
| | C318 | QFVB1HJ-124H | 0. 12MF 50V THIN FILM CA | |
| | C355 | QETB1AM-476 | 47MF 10V E. CAP. | |
| | C356 | QCHB1EZ-223 | 0. 022MF 25V CER. CAP. | |
| | C501 | QCVB1CM-103Y | 0. 01MF 16V CER. CAP. | |
| | C502 | QCHB1EZ-223 | 0. 022MF 25V CER. CAP. | |
| | C503 | QETB1HM-225 | 2. 2MF 50V AL. E. CAP. | |
| | C504 | QCVB1CM-103Y | 0. 01MF 16V CER. CAP. | |
| | C505 | EE20601-106 | 1000MF AL. E. CAP. | |
| | C506 | QEK50JM-476 | 47MF 6. 3V AL. E. CAP. | |
| | C507 | QETB1AM-227 | 220MF 10V E. CAP. | |
| | C508 | QCB81HK-471Y | 470PF 50V CER. CAP. | |
| | C521 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C611 | EET3513-228 | 2200MF ELECTRO | |
| | C612 | EET3513-228 | 2200MF ELECTRO | |
| | C613 | EET3513-228 | 2200MF ELECTRO | |
| | C616 | QFN82AJ-104 | 0. 1MF 100V MYLAR CAP. | |
| | C621 | QETB1HM-105 | 1MF 50V AL. E. CAP. | |
| | C622 | QETB1HM-227 | 220MF 50V E. CAP. | |
| | C623 | QETB1HM-227 | 220MF 50V E. CAP. | |
| | C624 | QETB1HM-226E | 22MF 50V E. CAP. | |
| | C625 | QETB1HM-226E | 22MF 50V E. CAP. | |
| | C626 | QETB1HM-475E | 4. 7MF 50V E. CAP. | |
| | C627 | QETB1HM-475E | 4. 7MF 50V E. CAP. | |
| | C651 | QCVB1CM-103Y | 0. 01MF 16V CER. CAP. | |
| | C652 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C653 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C654 | QCVB1CM-103Y | 0. 01MF 16V CER. CAP. | |
| | C655 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C656 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C657 | QFLB1HJ-103 | 0. 01MF 50V MYLAR CAP. | |
| | C658 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C659 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C660 | QFLB1HJ-103 | 0. 01MF 50V MYLAR CAP. | |
| | C661 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C662 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C951 | QCB81HK-561Y | 560PF 50V CER. CAP. | BS EF EN O |
| | C952 | QCB81HK-561Y | 560PF 50V CER. CAP. | BS EF EN O |
| | C953 | QCS31HJ-471Z | 470PF 50V CER. CAP. | BS EF EN G |
| | C961 | QCS21HJ-101A | 100PF 50V CER. CAP. | |
| | | RESISTORS | | |
| | R307 | QRD161J-392 | 3. 9K 1/6W CARBON RES. | |
| | R308 | QRD161J-392 | 3. 9K 1/6W CARBON RES. | |
| | R309 | QRD161J-132 | 1. 3K 1/6W CARBON RES. | |
| | R310 | QRD161J-132 | 1. 3K 1/6W CARBON RES. | |
| | R311 | QRD161J-132 | 1. 3K 1/6W CARBON RES. | |
| | R312 | QRD161J-132 | 1. 3K 1/6W CARBON RES. | |
| | R313 | QRD161J-392 | 3. 9K 1/6W CARBON RES. | |
| | R314 | QRD161J-392 | 3. 9K 1/6W CARBON RES. | |
| | R341 | QRD161J-472 | 4. 7K 1/6W CARBON RES. | |
| | R342 | QRD161J-472 | 4. 7K 1/6W CARBON RES. | |
| | R350 | QRD161J-221 | 220 1/6W CARBON RES. | |
| | R351 | ERD004J-471 | 470 NETWORK RES. | |
| | R352 | ERD004J-471 | 470 NETWORK RES. | |
| | R501 | QRD167J-751 | 750 1/6W CARBON RES. | |
| | R502 | QRD167J-751 | 750 1/6W CARBON RES. | |
| | R508 | QRD167J-223 | 22K 1/6W CARBON RES. | |

AX-F3000

■ Electrical Parts List (ENB-241)

| △ | Item | Parts Number | Description | Area | |
|---|--------|----------------|------------------------|--------------------------|--|
| | R509 | QRD167J-560 | 56 1/8W CARBON RES. | | |
| | R510 | QRD161J-221 | 220 1/8W CARBON RES. | | |
| | R511 | QRD161J-101 | 100 1/8W CARBON RES. | | |
| | R513 | QRD161J-473 | 47K 1/8W CARBON RES. | | |
| | R514 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R515 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R516 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R517 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R518 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R519 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R520 | QRD161J-331 | 330 1/8W CARBON RES. | | |
| | R521 | QRD161J-331 | 330 1/8W CARBON RES. | | |
| | R522 | QRD161J-331 | 330 1/8W CARBON RES. | | |
| | R523 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R524 | QRD161J-102 | 1K 1/8W CARBON RES. | | |
| | R525 | QRD161J-221 | 220 1/8W CARBON RES. | | |
| | R527 | QRD161J-221 | 220 1/8W CARBON RES. | | |
| | R562 | QRD167J-272 | 2.7K 1/8W CARBON RES. | | |
| | R621 | QRD181J-103 | 10K 1/8W CARBON RES. | | |
| | R622 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R623 | QRD161J-102 | 1K 1/8W CARBON RES. | | |
| | R624 | QRD161J-472 | 4.7K 1/8W CARBON RES. | | |
| △ | R625 | PTH61Q25AR4R7M | POSITIVE THE | | |
| | R626 | QRD167J-332 | 3.3K 1/8W CARBON RES. | | |
| | R627 | QRD167J-223 | 22K 1/8W CARBON RES. | | |
| | R628 | QRD161J-104 | 100K 1/8W CARBON RES. | | |
| △ | R631 | QRD14CJ-2R7S | 2.7 1/4W UNF. CARBON R | C J | |
| | R631 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | BS EF EN G U UB US UT | |
| △ | R632 | QRD14CJ-3R3S | 3.3 1/4W UNF. CARBON R | | |
| | R633 | QRD14CJ-110SX | 11 1/4W CARBON RES. | BS EF EN G U UB US UT | |
| △ | R633 | QRD14CJ-8R2S | 8.2 1/4W UNF. CARBON R | C J | |
| △ | R634 | QRD14CJ-100SX | 10 1/4W UNF. CARBON R | | |
| | R637 | QRD161J-331 | 330 1/8W CARBON RES. | | |
| | R651 | QRD167J-332 | 3.3K 1/8W CARBON RES. | | |
| | R652 | QRD161J-681 | 680 1/8W CARBON RES. | | |
| | R653 | QRD161J-123 | 12K 1/8W CARBON RES. | | |
| | R655 | QRD161J-512 | 5.1K 1/8W CARBON RES. | | |
| | R656 | QRD161J-122 | 1.2K 1/8W CARBON RES. | | |
| | R657 | QRD161J-202 | 2K 1/8W CARBON RES. | | |
| | R658 | QRD167J-152 | 1.5K 1/8W CARBON RES. | | |
| | R659 | QRD167J-153 | 15K 1/8W CARBON RES. | | |
| | R660 | QRD161J-392 | 3.9K 1/8W CARBON RES. | | |
| | R661 | QRD161J-182 | 1.8K 1/8W CARBON RES. | | |
| | R662 | QRD161J-222 | 2.2K 1/8W CARBON RES. | | |
| | R663 | QRD161J-102 | 1K 1/8W CARBON RES. | | |
| | R664 | QRD161J-182 | 1.8K 1/8W CARBON RES. | | |
| | R665 | QRD167J-153 | 15K 1/8W CARBON RES. | | |
| | R666 | QRD161J-392 | 3.9K 1/8W CARBON RES. | | |
| | R667 | QRD161J-182 | 1.8K 1/8W CARBON RES. | | |
| | R668 | QRD161J-222 | 2.2K 1/8W CARBON RES. | | |
| | R669 | QRD161J-102 | 1K 1/8W CARBON RES. | | |
| | R670 | QRD161J-182 | 1.8K 1/8W CARBON RES. | | |
| | R681 | ORG01DJ-100X | 10 1W OXIDE METAL | C J | |
| | R682 | ORG01DJ-100X | 10 1W OXIDE METAL | C J | |
| | R999 | QRD161J-103 | 10K 1/8W CARBON RES. | | |
| | R1001 | QRD14CJ-8R8SX | 8.8 1/4W UNF. CARBON R | C J | |
| △ | R1002 | QRD14CJ-100SX | 10 1/4W UNF. CARBON R | C J | |
| | R1515 | QRD12CJ-1R0SX | 1 1/2W UNF. CARBON R | C J | |
| | VR300 | QVDB94B-E15H | 100K VARIABLE RE | | |
| | VR321 | QVJB81B-E54D | 50K VARIABLE RE | | |
| | VR322 | QVJB81B-E54D | 50K VARIABLE RE | | |
| | VR323 | QVJB81B-E54B | 50K VARIABLE RE | | |
| | OTHERS | | | | |
| | | ENW10581-102 | PRINTED BOARD | | |
| | | E309629-001SS | LED HOLDER | | |
| | J703 | QMS3L10-0A0 | MICROPHONE JACK | | |
| | J791 | QMS3R80-EE0S | HEADPHONE JACK | | |

| △ | Item | Parts Number | Description | Area |
|---|-------|---------------|-------------------|------------|
| | L901 | EQL4007-6R8T | INDUCTOR | |
| | L902 | EQL4007-R56T | INDUCTOR | |
| | L903 | EQL4007-3R3T | INDUCTOR | |
| | L904 | EQL4007-R56T | INDUCTOR | |
| | L905 | EQL4007-3R3T | INDUCTOR | |
| | LG001 | EMV9519-001 | LUG | BS EF EN G |
| | S501 | ESPO001-023M | TACT SWITCH | |
| | S502 | ESPO001-023M | TACT SWITCH | |
| | S503 | ESPO001-023M | TACT SWITCH | |
| | S507 | ESPO001-023M | TACT SWITCH | |
| | S508 | ESPO001-023M | TACT SWITCH | |
| | S509 | ESPO001-023M | TACT SWITCH | |
| | TW111 | QWE350-134K4K | WIRE | BS EF EN G |
| | X501 | ECX0080-000EM | CERAMIC RESONATOR | |
| | CN213 | EWS293-0113 | SOCKET WIRE ASSY | |
| | CN601 | EMV7127-015 | FEMALE CONNECTOR | |
| | CN602 | EMV7127-013 | CONNECT TERMINAL | |
| | CN603 | EMV7127-011 | JACK TERMINAL | |
| | CN604 | EMV7163-012 | CONNECT TERMINAL | |
| | CN605 | EMV5159-010R | CONNECT TERMINAL | |
| | CN607 | EMV7163-010 | CONNECT TERMINAL | |
| | CN615 | EMV7159-010 | PIN PLUG | |
| | CN617 | EMV5163-010R | CONNECT TERMINAL | |
| | CN911 | EMV5167-126 | CONNECT TERMINAL | |
| | CN912 | EMV5163-010R | CONNECT TERMINAL | |
| | FW201 | EWR35D-16LS | CORD | |
| | FW606 | EWR36D-13LS | CORD | |

■ Electrical Parts List (END-104)

| △ | Item | Parts Number | Description | Area |
|---|-------|---------------|------------------------|------------|
| | | CAPACITORS | | |
| | C1011 | QFVC1HJ-103ZM | 0.01MF 50V METAL.MYLAR | BS EF EN G |
| | C1012 | QFVC1HJ-103ZM | 0.01MF 50V METAL.MYLAR | BS EF EN G |
| | C1015 | QCS31HJ-471Z | 470PF 50V CER.CAP. | BS EF EN G |
| | C1016 | QCS31HJ-471Z | 470PF 50V CER.CAP. | BS EF EN G |
| | C1017 | QCS31HJ-471Z | 470PF 50V CER.CAP. | BS EF EN G |
| | | RESISTORS | | |
| | R996 | QRD161J-104 | 100K 1/8W CARBON RES. | U UB US UT |
| | R997 | QRD161J-104 | 100K 1/8W CARBON RES. | U UB US UT |
| | R998 | QRD161J-104 | 100K 1/8W CARBON RES. | U UB US UT |
| | R1011 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | BS EF EN G |
| | R1012 | QRD14CJ-4R7SX | 4.7 1/4W UNF. CARBON R | BS EF EN G |
| △ | R1111 | QRC128K-275EM | 2.7M 1/2W COMPOSITION | C J |
| | | OTHERS | | |
| | | EMW10660-002A | PRINTED BOARD | |
| | | E61380-024 | FUSE LABEL | C J |
| | | E67132-T2R5 | FUSE LABEL | U UB US UT |
| | | QWE882-19RR | VINYL WIRE | |
| | | QWE883-19RR | VINYL WIRE | |
| | | QWE888-19RR | VINYL WIRE | |
| | J702 | EMB00TV-406A | SPEAKER TERMINAL | |
| | S001 | QSR8001-E01U | ROTARY SWITCH | U UB US UT |
| | CN011 | EMV5138-004 | PIN CONNECTOR | |
| | EP001 | E70225-003SS | EARTH PLATE | |
| | EP002 | E70225-003SS | EARTH PLATE | |
| | FS017 | E3400-431 | FELT SPACER | BS EF EN G |
| | FT001 | EMG7331-003Z | FUSE CLIP | |
| | FT002 | EMG7331-003Z | FUSE CLIP | U UB US UT |
| | FT011 | EMG7331-003Z | FUSE CLIP | |
| | FT022 | EMG7331-003Z | FUSE CLIP | U UB US UT |
| | TB001 | ENZ4001-002Z | TAB | |
| | TB002 | ENZ4001-002Z | TAB | |

PARTS LIST

< XL-F3000 >

* All printed circuit boards and its assemblies are not available as service parts.

The Marks for Designated Areas


| | | | |
|--------------------|--------------------|-------------------------------|------------------------|
| BS . . . the U.K. | C . . . Canada | EF . . . Continental Europe | EN . . . Scandinavia |
| G . . . Germany | J . . . the U.S.A. | UB . . . Hong Kong | U . . . Universal Type |
| US . . . Singapore | UT . . . Taiwan | No marks indicates all areas. | |

- Contents -

| | |
|--|-----|
| General Exploded View and Parts List | 7-2 |
| Loading Mechanism Ass'y and Parts List | 7-4 |
| ■ Grease Point | 7-4 |
| CD Mechanism Ass'y and Parts List | 7-5 |
| ■ Grease Point | 7-5 |
| Electrical Parts List | 7-6 |
| (ENN-483) | 7-6 |

General Exploded View and Parts List

Block No. **M2MM**

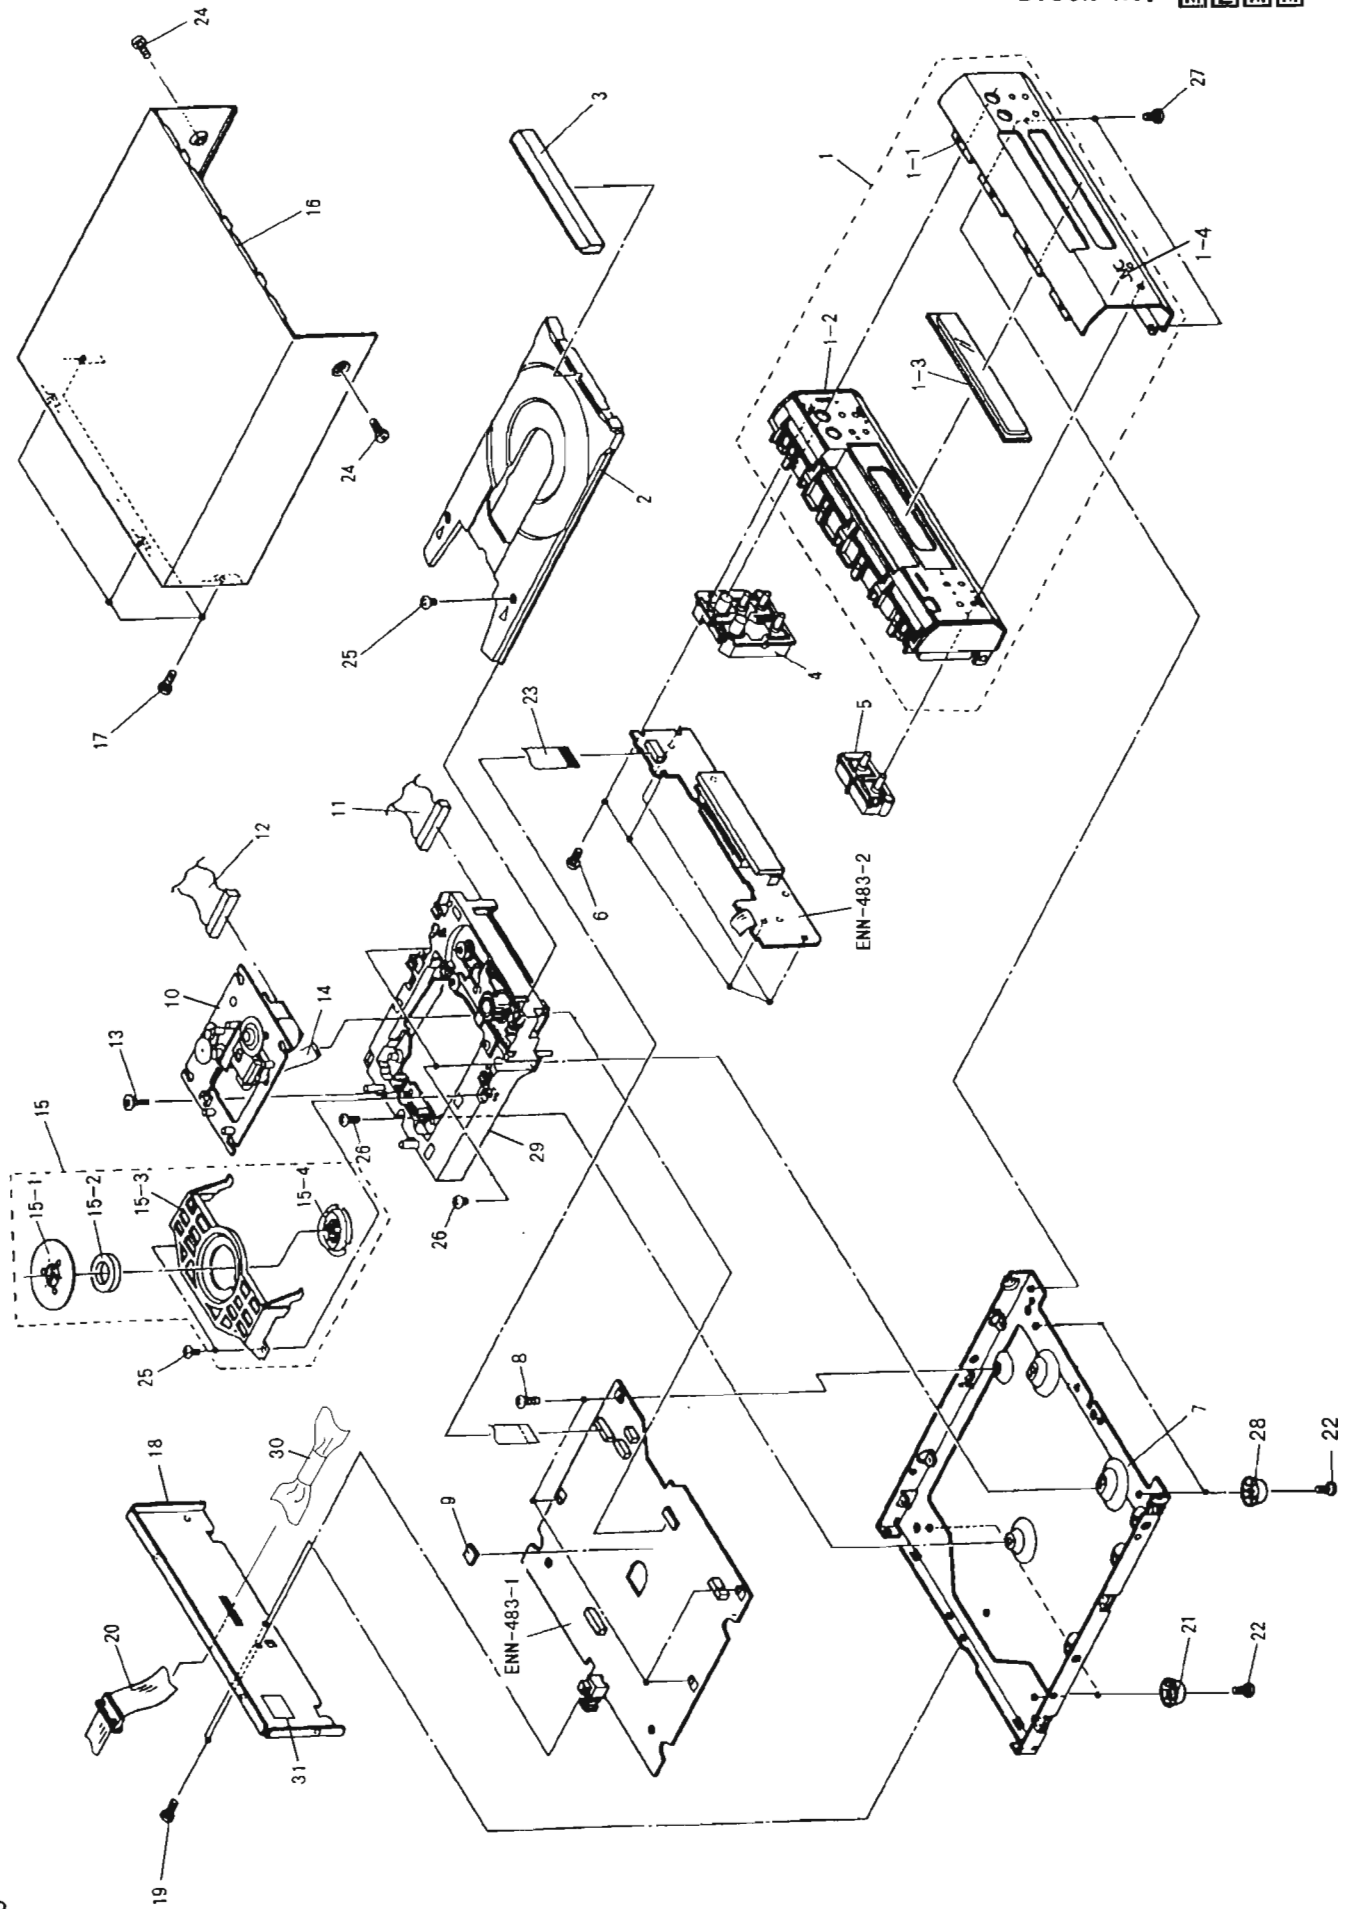

■ Parts List


Block No. **M2M**

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|-----------------|---------------------------|------|--------------|------------|
| | 1 | EFP-XLF3000E(S) | FRONT PANEL ASSY | 1 | | |
| | 1-1 | E208737-002 | FRONT PANEL | 1 | | |
| | 1-2 | E103087-003ST | FRONT BASE | 1 | | |
| | 1-3 | E309614-002 | WINDOW SCREEN | 1 | | |
| | 1-4 | E406971-221 | JVC MARK | 1 | | |
| | 2 | E102358-332SS | CD TRAY | 1 | | |
| | 3 | E309616-004SS | CD FITTING | 1 | | |
| | 4 | E208703-003SS | PUSH BUTTON ASSY | 1 | | |
| | 5 | E309613-003SS | PUSH BUTTON | 1 | | |
| | 6 | SDSF2608Z | SCREW | 5 | | |
| | 7 | E103088-001 | CHASSIS BASE | 1 | | |
| | 8 | SBST3006CC | TAPPING SCREW | 4 | | |
| | 9 | E75896-001 | SPACER | 1 | | |
| | 10 | ----- | CD MECHANISM ASSY | 1 | See Page 7-5 | |
| | 11 | EWS265-B410 | SOCKET WIRE | 1 | | |
| | 12 | EWS266-B410 | SOCKET WIRE | 1 | | |
| | 13 | E406293-001 | SPECIAL SCREW | 1 | | |
| | 14 | VWF1015-09PPAV | FFC CABLE | 1 | | |
| | 15 | E306837-005 | CLAMPER ASSY | 1 | | |
| | 15-1 | E306836-003 | YOKE PLATE | 1 | | |
| | 15-2 | E74897-002 | MAGNET | 1 | | |
| | 15-3 | E26756-002 | CLAMPER BASE | 1 | | |
| | 15-4 | E306835-001 | CD CLAMPER | 1 | | |
| | 16 | E208179-013(S) | METAL COVER | 1 | | |
| | 17 | GBSG3008CC | TAPPING SCREW | 4 | | |
| | 18 | E208705-003 | REAR PANEL | 1 | | J |
| | | E208705-004 | REAR PANEL | 1 | | C |
| | | E208705-005 | REAR PANEL | 1 | | BS EF EN G |
| | | E208705-006 | REAR PANEL | 1 | | U UB US UT |
| | 19 | E73273-003 | SPECIAL SCREW | 2 | | |
| | 20 | EWP907-025 | FLAT WIRE ASSY | 1 | | |
| | 21 | E75281-010 | FOOT | 2 | | |
| | 22 | SBST3010Z | TAPPING SCREW | 4 | | |
| | 23 | VWF1215-16TTB | FLAT WIRE ASSY | 1 | | |
| | 24 | SDSG3008N | TAPPING SCREW | 2 | | |
| | 25 | SBSF3008Z | TAPPING SCREW | 3 | | |
| | 26 | SBSF3008Z | TAPPING SCREW | 3 | | |
| | 27 | SDSG3008CC | TAPPING SCREW | 2 | | |
| | 28 | E75281-009 | FOOT | 2 | | |
| | 29 | ----- | CD LOADING MECHANISM ASSY | 1 | See Page 7-4 | |
| | 30 | ENZ8104-005 | NOISE FILTER | 1 | | |
| | 31 | E406507-001 | CAUTION LABEL | 1 | | Except J |
| | - | E75139-004 | NAME LABEL | 1 | | U |
| | | E307570-001 | NUMBER LABEL | 1 | | J |
| | | E61029-005 | NUMBER LABEL | 1 | | Except J |

Loading Mechanism Ass'y and Parts List

Block No. **M3MM**

■ Grease Point

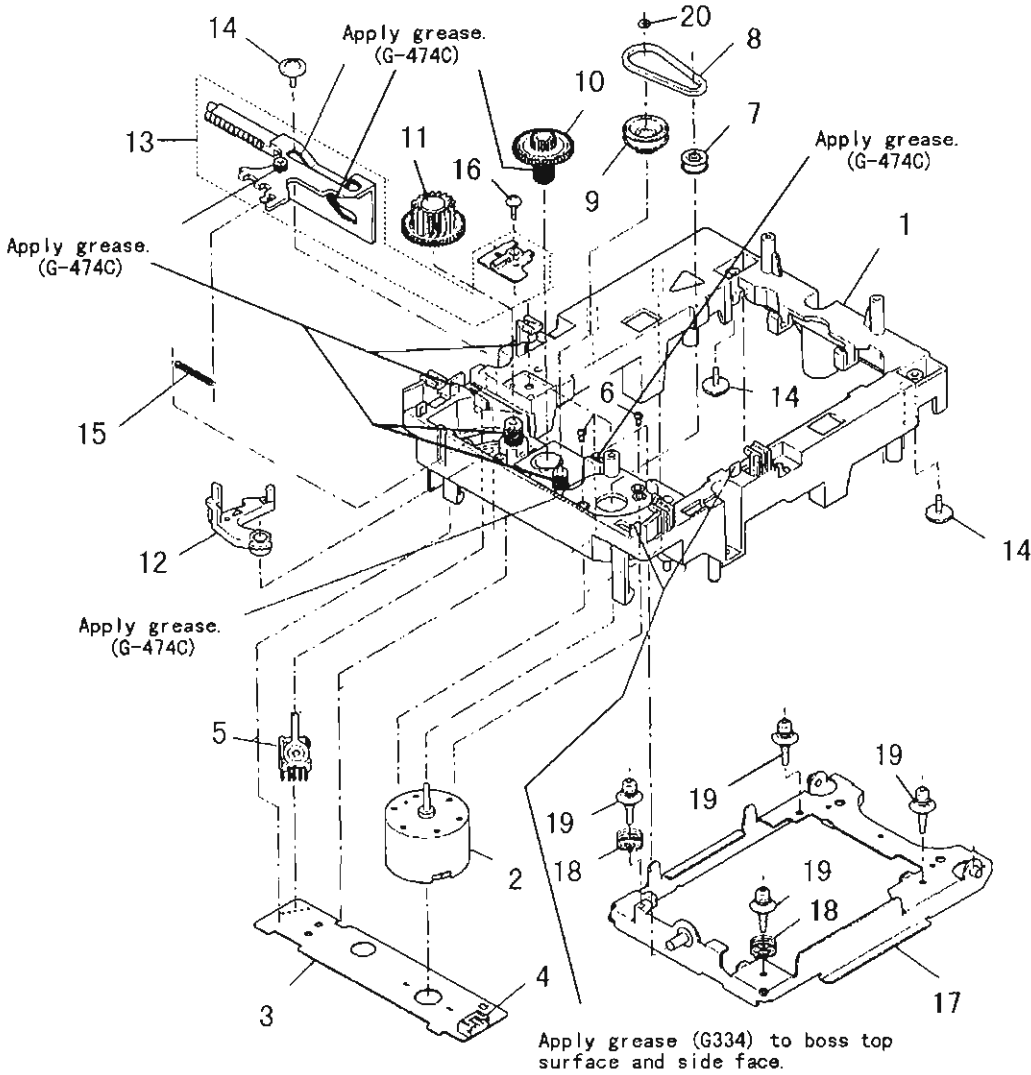

■ Parts List (Loading Mechanism Ass'y)


Block No. **M3MM**

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|--------------|--------------------|------|-------------|------|
| | 1 | E102357-221 | LOADING BASE | 1 | | |
| | 2 | MMN-6F1LB8K | MOTOR | 1 | | |
| | 3 | EMW10264-002 | P. C. BOARD | 1 | | |
| | 4 | EMV5109-005B | 5P PLUG ASSY | 1 | | |
| | 5 | ESS1200-002 | SWITCH | 1 | | |
| | 6 | SPSK2640Z | SCREW | 2 | | |
| | 7 | E75984-221 | MOTOR PULLEY | 1 | | |
| | 8 | E75950-002 | BELT | 1 | | |
| | 9 | E75985-221SS | GEAR (1) | 1 | | |
| | 10 | E75986-221SS | GEAR (2) | 1 | | |
| | 11 | E75987-221SS | GEAR (3) | 1 | | |
| | 12 | E307162-331 | LEVER | 1 | | |
| | 13 | E307252-331 | CAM PLATE | 1 | | |
| | 14 | E65923-003 | SCREW | 3 | | |
| | 15 | E75989-001 | SPRING | 1 | | |
| | 16 | SBSF3008Z | SCREW | 1 | | |
| | 17 | E307179-332 | ELEVATOR BASE ASSY | 1 | | |
| | 18 | E406871-001 | SPRING | 2 | | |
| | 19 | E406294-002 | INSULATOR | 4 | | |
| | 20 | E60912-005SS | SPEED NUT | 1 | | |

CD Mechanism Ass'y and Pars List

■ Grease Point

Block No. **M4MM**

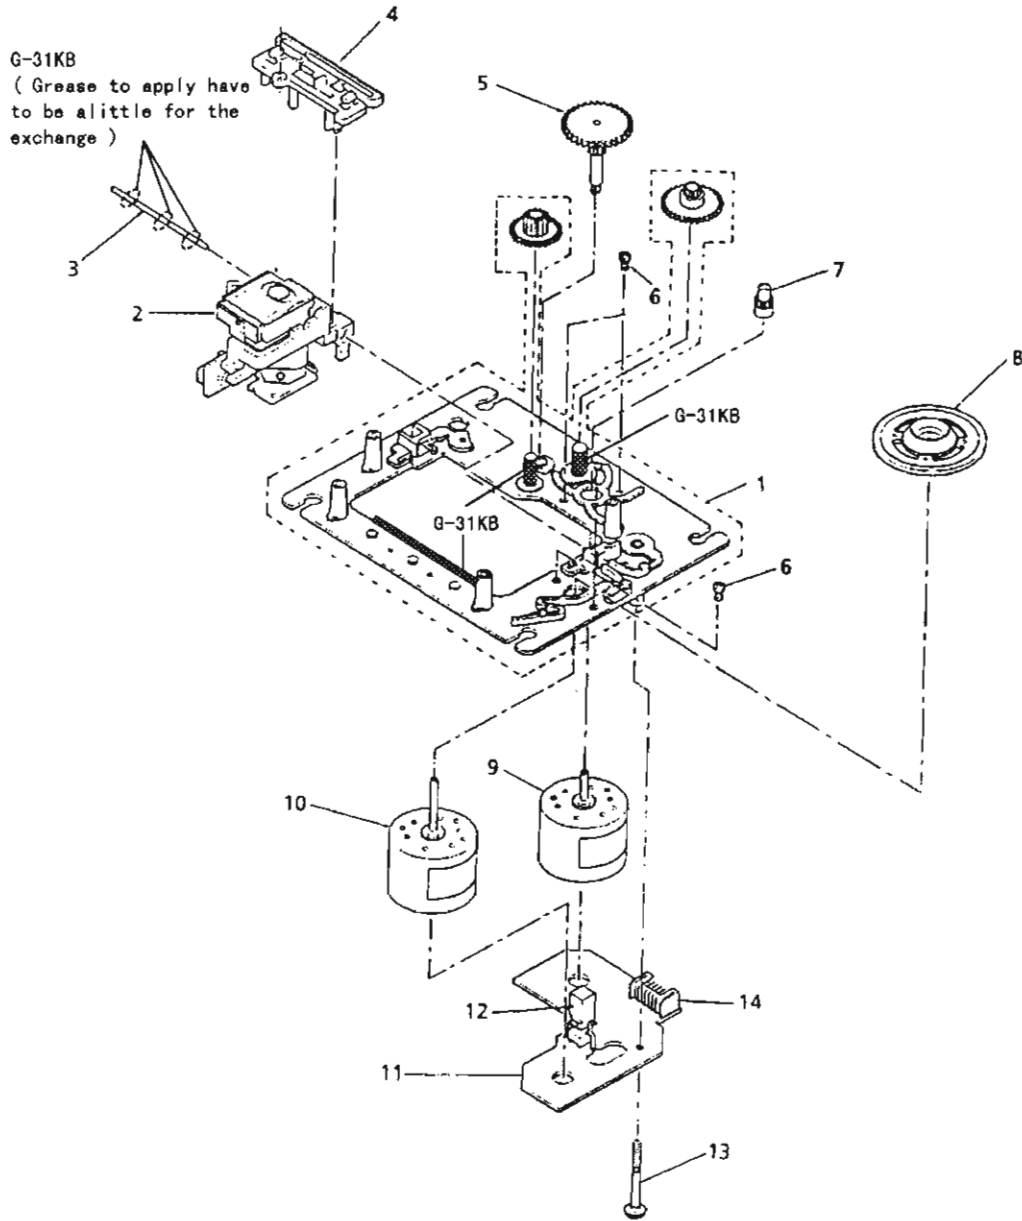

■ Parts List (CD Mechanism Ass'y)

Block No. **M4MM**

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|-----------------|------------------|------|-------------|------|
| | 1 | EPB-002A | MECHA. BASE ASSY | 1 | | |
| | 2 | OPTIMA-6S | OPTICAL PICK UP | 1 | | |
| | 3 | E407782-001 | CD SHAFT | 1 | | |
| | 4 | E307746-001 | CD RACK | 1 | | |
| | 5 | EPB-003A | MECHA GEAR | 1 | | |
| | 6 | SDSP2003N | SCREW | 3 | | |
| | 7 | E406750-001 | PINION GEAR | 1 | | |
| | 8 | E75807-302 | TURN TABLE | 1 | | |
| | 9 | E406784-001 | FEED MOTOR | 1 | | |
| | 10 | E406783-001 | SPINDLE MOTOR | 1 | | |
| | 11 | EMW10190-001(S) | P. C. BOARD | 1 | | |
| | 12 | ESB1100-005 | LEAF SWITCH | 1 | | |
| | 13 | E75832-001 | SCREW | 1 | | |
| | 14 | EMV5109-006B | CONN. TERMINAL | 1 | 6PIN | |

XL-F3000

■ Electrical Parts List (ENN-483)

| Δ | Item | Parts Number | Description | Area |
|---|-------|----------------|--------------------------|------|
| | | I. C. S | | |
| | IC401 | MN662720RB | I. C (DIGI-MOS) | |
| | IC501 | AN8806SB | I. C (MONO-ANALOG) | |
| | IC750 | MN35503 | I. C (DIGI-MOS) | |
| | IC751 | NJM4580DD | I. C (MONO-ANALOG) | |
| | IC801 | BA6398FPX | I. C (MONO-ANALOG) | |
| | IC851 | NJM4558L | I. C (MONO-ANALOG) | |
| | IC901 | MN171602JJX1 | I. C (MICRO-COMPUTER) | |
| | IC902 | MN1281 (P. Q) | I. C (DIGI-MOS) | |
| | | DIODES | | |
| | D601 | 1SR139-200 | SI. DIODE | |
| | D751 | 1SS119 | SI. DIODE | |
| | D752 | 1SS119 | SI. DIODE | |
| | D871 | 1SS119 | SI. DIODE | |
| | D945 | 1SS119 | SI. DIODE | |
| | D946 | 1SS119 | SI. DIODE | |
| | D948 | 1SS119 | SI. DIODE | |
| | D949 | 1SS119 | SI. DIODE | |
| | D950 | 1SS119 | SI. DIODE | |
| | D971 | SLR-342MCA47 | L. E. D. | |
| | | TRANSISTORS | | |
| | Q501 | 2SA950 (Q. Y) | SI. TRANSISTOR | |
| | Q811 | 2SA934 (Q. R) | SI. TRANSISTOR | |
| | Q812 | DTA114TS | DIGITAL TRANSISTOR | |
| | Q851 | 2SC2060 (Q. R) | SI. TRANSISTOR | |
| | Q852 | 2SA934 (Q. R) | SI. TRANSISTOR | |
| | Q945 | DTA114YS | DIGITAL TRANSISTOR | |
| | Q946 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q971 | DTC114YS | DIGITAL TRANSISTOR | |
| | | CAPACITORS | | |
| | C401 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C402 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C404 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C405 | QCBB1HK-471Y | 470PF 50V CER. CAP. | |
| | C406 | EFH001J-223 | METAL. NYLAR | |
| | C407 | QFV81HJ-334 | 0.33MF 50V TF. CAP. | |
| | C408 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C409 | QETB1AM-107Z | 100MF 10V AL E. CAP. | |
| | C411 | QCSB1HK-5R6Y | 5.6PF 50V CER. CAP. | |
| | C416 | QCSB1HJ-270Y | 27PF 50V CER. CAP. | |
| | C417 | QCSB1HJ-270Y | 27PF 50V CER. CAP. | |
| | C418 | QCSB1HJ-270Y | 27PF 50V CER. CAP. | |
| | C421 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C422 | QERS1AM-227 | 220MF 10V AL E. CAP. | |
| | C423 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C424 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C440 | QERS0JM-107 | 100MF 6.3V AL E. CAP. | |
| | C501 | QERS0JM-107 | 100MF 6.3V AL E. CAP. | |
| | C502 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C504 | QERS0JM-107 | 100MF 6.3V AL E. CAP. | |
| | C505 | QCBB1HK-271Y | 270PF 50V CER. CAP. | |
| | C506 | QCSB1HJ-470 | 47PF 50V CER. CAP. | |
| | C507 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C509 | QCXB1CM-222Y | 2200PF 16V CER. CAP. | |
| | C510 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C511 | QCGB1HK-821 | 820PF 50V CER. CAP. | |
| | C514 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C517 | QFLB1HJ-103 | 0.01MF 50V MYLAR CAP. | |
| | C518 | QEK51HM-1050 | 1MF 50V AL E. CAP. | |
| | C519 | QFV81HJ-104 | 0.1MF 50V THIN FILM CA | |
| | C522 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C523 | QERS1YM-106 | 10MF 35V AL E. CAP. | |
| | C524 | QERS0JM-476 | 47MF 6.3V AL E. CAP. | |
| | C525 | EFH001J-333 | METAL. NYLAR | |
| | C526 | QCBB1HK-101Y | 100PF 50V CER. CAP. | |
| | C527 | QFV81HJ-273 | 0.027MF 50V THIN FILM CA | |
| | C528 | QFLB1HJ-472 | 4700PF 50V MYLAR CAP. | |
| | C529 | QFV81HJ-104 | 0.1MF 50V THIN FILM CA | |
| | C530 | QCBB1HK-102Y | 1000PF 50V CER. CAP. | |

| Δ | Item | Parts Number | Description | Area |
|---|------|--------------|--------------------------|------|
| | C531 | QCBB1HK-102Y | 1000PF 50V CER. CAP. | |
| | C541 | QCBB1HK-331Y | 330PF 50V CER. CAP. | |
| Δ | C601 | QETB1CM-108 | 1000MF 16V AL E. CAP. | |
| | C602 | QFLB1HJ-103 | 0.01MF 50V MYLAR CAP. | |
| | C603 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C610 | QETB1AM-477 | 470MF 10V E. CAP. | |
| | C611 | QCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C612 | QETB0JM-338M | 3300MF 6.3V AL E. CAP. | |
| | C621 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C701 | QETB1AM-107 | 100MF 10V AL E. CAP. | |
| | C751 | QFV81HJ-104 | 0.1MF 50V THIN FILM CA | |
| | C752 | EETB1AM-107E | 100MF 10V E. CAP. | |
| | C753 | EFH001J-104 | METAL. NYLAR | |
| | C754 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C755 | EETB1AM-227E | 220MF 10V E. CAP. | |
| | C756 | EFH001J-104 | METAL. NYLAR | |
| | C757 | EETB1AM-477E | 470MF 10V E. CAP. | |
| | C758 | EETB1AM-477E | 470MF 10V E. CAP. | |
| | C759 | QCT30CH-100Y | 10PF 50V CER. CAP. | |
| | C780 | QCT30CH-100Y | 10PF 50V CER. CAP. | |
| | C768 | QFN31HJ-392Z | 3900PF 50V MYLAR CAP. | |
| | C769 | QFN31HJ-392Z | 3900PF 50V MYLAR CAP. | |
| | C770 | QCS21HJ-181A | 180PF 50V CER. CAP. | |
| | C771 | QCS21HJ-181A | 180PF 50V CER. CAP. | |
| | C772 | QFN31HJ-333Z | 0.033MF 50V MYLAR CAP. | |
| | C773 | QFN31HJ-333Z | 0.033MF 50V MYLAR CAP. | |
| | C774 | EEZ5011-476E | 47MF E. CAP. | |
| | C775 | EEZ5011-476E | 47MF E. CAP. | |
| | C778 | EETB1HM-475E | 4.7MF 50V E. CAP. | |
| | C779 | EETB1HM-475E | 4.7MF 50V E. CAP. | |
| | C780 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C801 | QETB1CM-227 | 220MF 16V AL E. CAP. | |
| | C802 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C803 | QFLB1HJ-273 | 0.027MF 50V MYLAR CAP. | |
| | C804 | QFLB1HJ-183 | 0.018MF 50V MYLAR CAP. | |
| | C806 | QFV81HJ-273 | 0.027MF 50V THIN FILM CA | |
| | C851 | QETB1CM-477M | 470MF 16V E. CAP. | |
| | C852 | QETB1CM-477M | 470MF 16V E. CAP. | |
| | C854 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C855 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C856 | QCF21HP-103A | 0.01MF 50V CER. CAP. | |
| | C876 | QERS1HM-475 | 4.7MF 50V AL E. CAP. | |
| | C901 | QERS1HM-475 | 4.7MF 50V AL E. CAP. | |
| | C902 | QERS1HM-475 | 4.7MF 50V AL E. CAP. | |
| | C903 | QERS0JM-107 | 100MF 6.3V AL E. CAP. | |
| | C945 | QER61HM-226 | 22MF 50V AL E. CAP. | |
| | C946 | QERS0JM-107 | 100MF 6.3V AL E. CAP. | |
| | C947 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C948 | QERS0JM-107 | 100MF 6.3V AL E. CAP. | |
| | C949 | QCXB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C950 | QCBB1HK-331Y | 330PF 50V CER. CAP. | |
| | | RESISTORS | | |
| | R402 | QRD161J-124 | 120K 1/6W CARBON RES. | |
| | R403 | QRD161J-155 | 1.5M 1/6W CARBON RES. | |
| | R404 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R405 | QRD161J-104 | 100K 1/6W CARBON RES. | |
| | R406 | QRD161J-681 | 680 1/6W CARBON RES. | |
| | R407 | QRD161J-471 | 470 1/6W CARBON RES. | |
| | R408 | QRD161J-820 | 82 1/6W CARBON RES. | |
| | R409 | QRD161J-820 | 82 1/6W CARBON RES. | |
| | R410 | QRD161J-820 | 82 1/6W CARBON RES. | |
| | R415 | QRD161J-2R2 | 2.2 1/6W CARBON RES. | |
| | R416 | QRD161J-2R2 | 2.2 1/6W CARBON RES. | |
| | R417 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R418 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R419 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R420 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R421 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R422 | QRD161J-102 | 1K 1/6W CARBON RES. | |

■ Electrical Parts List (ENN-483)

| △ | Item | Parts Number | Description | Area |
|---|------|----------------|------------------------|----------|
| | R424 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R425 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R426 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R427 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R428 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R430 | QRD167J-152 | 1.5K 1/6W CARBON RES. | |
| | R504 | QRD161J-114 | 110K 1/6W CARBON RES. | |
| | R505 | QRD161J-273 | 27K 1/6W CARBON RES. | |
| | R507 | QRD167J-134 | 130K 1/6W CARBON RES. | |
| | R509 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R510 | QRD167J-154 | 150K 1/6W CARBON RES. | |
| | R511 | QRD161J-394 | 390K 1/6W CARBON RES. | |
| | R512 | QRD161J-913 | 91K 1/6W CARBON RES. | |
| | R513 | QRD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R514 | QRD161J-622 | 6.2K 1/6W CARBON RES. | |
| | R518 | QRD167J-121 | 120 1/6W CARBON RES. | |
| | R520 | QRD161J-910Y | 91 1/6W CARBON RES. | |
| | R524 | QRD161J-470 | 47 1/6W CARBON RES. | |
| | R525 | QRD161J-470 | 47 1/6W CARBON RES. | |
| | R526 | QRD161J-470 | 47 1/6W CARBON RES. | |
| | R527 | QRD161J-2R2 | 2.2 1/6W CARBON RES. | |
| | R531 | QRD161J-125 | 1.2W 1/6W CARBON RES. | |
| △ | R601 | PTH61G25AR4R7M | POSITIVE THE | Except J |
| △ | R601 | QRD12CJ-4R7S | 4.7 1/2W UNF. CARBON R | J |
| | R609 | QRD161J-331 | 330 1/6W CARBON RES. | |
| | R611 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R612 | QRD161J-821 | 820 1/6W CARBON RES. | |
| | R613 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R701 | QRD161J-2R2 | 2.2 1/6W CARBON RES. | |
| | R750 | QRD161J-271 | 270 1/6W CARBON RES. | |
| | R751 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R752 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R753 | QRD167J-560 | 56 1/6W CARBON RES. | |
| | R754 | QRD167J-560 | 56 1/6W CARBON RES. | |
| | R755 | QRD161J-271 | 270 1/6W CARBON RES. | |
| | R756 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R758 | QRD161J-101 | 100 1/6W CARBON RES. | |
| | R760 | ERD004J-163Z | 16K CARBON RES. | |
| | R761 | ERD004J-163Z | 16K CARBON RES. | |
| | R762 | ERD004J-243Z | 24K CARBON RES. | |
| | R763 | ERD004J-243Z | 24K CARBON RES. | |
| | R764 | ERD004J-163Z | 16K CARBON RES. | |
| | R765 | ERD004J-163Z | 16K CARBON RES. | |
| | R766 | ERD004J-243Z | 24K CARBON RES. | |
| | R767 | ERD004J-243Z | 24K CARBON RES. | |
| | R768 | QRD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R769 | QRD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R772 | QRD161J-362 | 3.6K 1/6W CARBON RES. | |
| | R773 | QRD161J-362 | 3.6K 1/6W CARBON RES. | |
| | R774 | QRD161J-183 | 18K 1/6W CARBON RES. | |
| | R775 | QRD161J-183 | 18K 1/6W CARBON RES. | |
| | R776 | QRD161J-162 | 1.6K 1/6W CARBON RES. | |
| | R777 | QRD161J-162 | 1.6K 1/6W CARBON RES. | |
| | R780 | QRD167J-560 | 56 1/6W CARBON RES. | |
| | R781 | QRD167J-560 | 56 1/6W CARBON RES. | |
| | R784 | QRD161J-183 | 18K 1/6W CARBON RES. | |
| | R785 | QRD161J-183 | 18K 1/6W CARBON RES. | |
| | R786 | QRD161J-271 | 270 1/6W CARBON RES. | |
| | R787 | QRD161J-271 | 270 1/6W CARBON RES. | |
| | R801 | QRD161J-821 | 820 1/6W CARBON RES. | |
| | R802 | QRD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R803 | QRD161J-112 | 1.1K 1/6W CARBON RES. | |
| | R804 | QRD167J-113 | 11K 1/6W CARBON RES. | |
| | R806 | QRD161J-124 | 120K 1/6W CARBON RES. | |
| | R807 | QRD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R808 | QRD161J-752 | 7.5K 1/6W CARBON RES. | |
| | R809 | QRD167J-223 | 22K 1/6W CARBON RES. | |
| | R810 | QRD161J-392 | 3.9K 1/6W CARBON RES. | |
| | R811 | QRD167J-153 | 15K 1/6W CARBON RES. | |

| △ | Item | Parts Number | Description | Area |
|---|-------|---------------|--------------------------|------|
| | R812 | QRD161J-752 | 7.5K 1/6W CARBON RES. | |
| | R813 | QRD167J-751 | 750 1/6W CARBON RES. | |
| | R814 | QRD161J-363 | 36K 1/6W CARBON RES. | |
| △ | R851 | QRD12CJ-4R7S | 4.7 1/2W UNF. CARBON R | |
| △ | R852 | QRD12CJ-4R7S | 4.7 1/2W UNF. CARBON R | |
| | R871 | QRD161J-513 | 51K 1/6W CARBON RES. | |
| | R872 | QRD161J-513 | 51K 1/6W CARBON RES. | |
| | R873 | QRD161J-753 | 75K 1/6W CARBON RES. | |
| | R874 | QRD161J-623 | 62K 1/6W CARBON RES. | |
| | R875 | QRD161J-221 | 220 1/6W CARBON RES. | |
| | R876 | QRD161J-684 | 680K 1/6W CARBON RES. | |
| | R877 | QRD161J-102 | 1K 1/6W CARBON RES. | |
| | R904 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R905 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R906 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R907 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R945 | QRD161J-473 | 47K 1/6W CARBON RES. | |
| | R946 | QRD161J-821 | 820 1/6W CARBON RES. | |
| | R947 | QRD161J-103 | 10K 1/6W CARBON RES. | |
| | R965 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R966 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R967 | QRD161J-472 | 4.7K 1/6W CARBON RES. | |
| | R971 | QRD167J-151 | 150 1/6W CARBON RES. | |
| | | OTHERS | | |
| | | EMW10583-102 | PRINTED BOARD | |
| | J701 | GP1F32T | OPTICAL JACK | |
| | K751 | ENZ8101-007 | F. BEADS | |
| | K752 | ENZ8101-007 | F. BEADS | |
| | K753 | ENZ8101-007 | F. BEADS | |
| | K756 | ENZ8101-007 | F. BEADS | |
| | K757 | ENZ8101-007 | F. BEADS | |
| | K910 | ENZ8101-007 | F. BEADS | |
| | K911 | ENZ8101-007 | F. BEADS | |
| | K912 | ENZ8101-007 | F. BEADS | |
| | K913 | ENZ8101-007 | F. BEADS | |
| | S904 | ESP0001-023M | TACT SWITCH | |
| | S905 | ESP0001-023M | TACT SWITCH | |
| | S906 | ESP0001-023M | TACT SWITCH | |
| | S908 | ESP0001-023M | TACT SWITCH | |
| | S912 | ESP0001-023M | TACT SWITCH | |
| | S913 | ESP0001-023M | TACT SWITCH | |
| | S914 | ESP0001-023M | TACT SWITCH | |
| | X751 | ECX0169-344EA | CRYSTAL | |
| | X901 | ECX0060-000EM | CERAMIC RESONATOR | |
| | CN102 | EMV5109-005A | MALE CONNECTOR | |
| | CN103 | EMV5109-006A | CONNECT TERMINAL | |
| | CN104 | EMV7144-015R | CONNECT TERMINAL | |
| | CN601 | EMV7141-013 | CONNECT TERMINAL | |
| | CN701 | EMV7123-015 | MALE CONNECTOR | |
| | CN901 | EMV7123-015R | MALE CONNECTOR | |
| | D1901 | ELU0001-178 | FLUORESCENT DISPLAY TUBE | |
| | EP601 | EMZ4002-002Z | EARTH PLATE | |
| | EP602 | EMZ4002-002Z | EARTH PLATE | |
| | EP603 | EMZ4002-002Z | EARTH PLATE | |
| | EP604 | EMZ4002-002Z | EARTH PLATE | |
| | FH901 | E308892-001ST | FL HOLDER | |
| | FS901 | E306805-075 | FELT SPACER | |
| | FW902 | ENR37D-16LS | FLAT WIRE ASSY | |
| | J1701 | EMV7145-003Z | SOCKET ASSY | |
| | J1702 | EMV7145-004Z | SOCKET ASSY | |
| | SP401 | VYH7653-002 | I. C. SOCKET | |
| | SP501 | VYH7653-008 | P. W. BOARD HOLDER | |
| | SP750 | VYH7653-002 | I. C. SOCKET | |
| | SP801 | VYH7653-002 | I. C. SOCKET | |

PARTS LIST

< TD-F3000 >

* All printed circuit boards and its assemblies are not available as service parts.

The Marks for Designated Areas


| | | | |
|--------------------|--------------------|-------------------------------|------------------------|
| BS . . . the U.K. | C . . . Canada | EF . . . Continental Europe | EN . . . Scandinavia |
| G . . . Germany | J . . . the U.S.A. | UB . . . Hong Kong | U . . . Universal Type |
| US . . . Singapore | UT . . . Taiwan | No marks indicates all areas. | |

- Contents -

| | |
|---|-----|
| General Exploded View and Parts List | 8-2 |
| Cassette Mechanism Ass'y and Parts List | 8-4 |
| ■ Grease Point | 8-4 |
| Electrical Parts List | 8-6 |
| (ENJ-097) | 8-6 |

General Exploded View and Parts List

Block No. **M5MM**

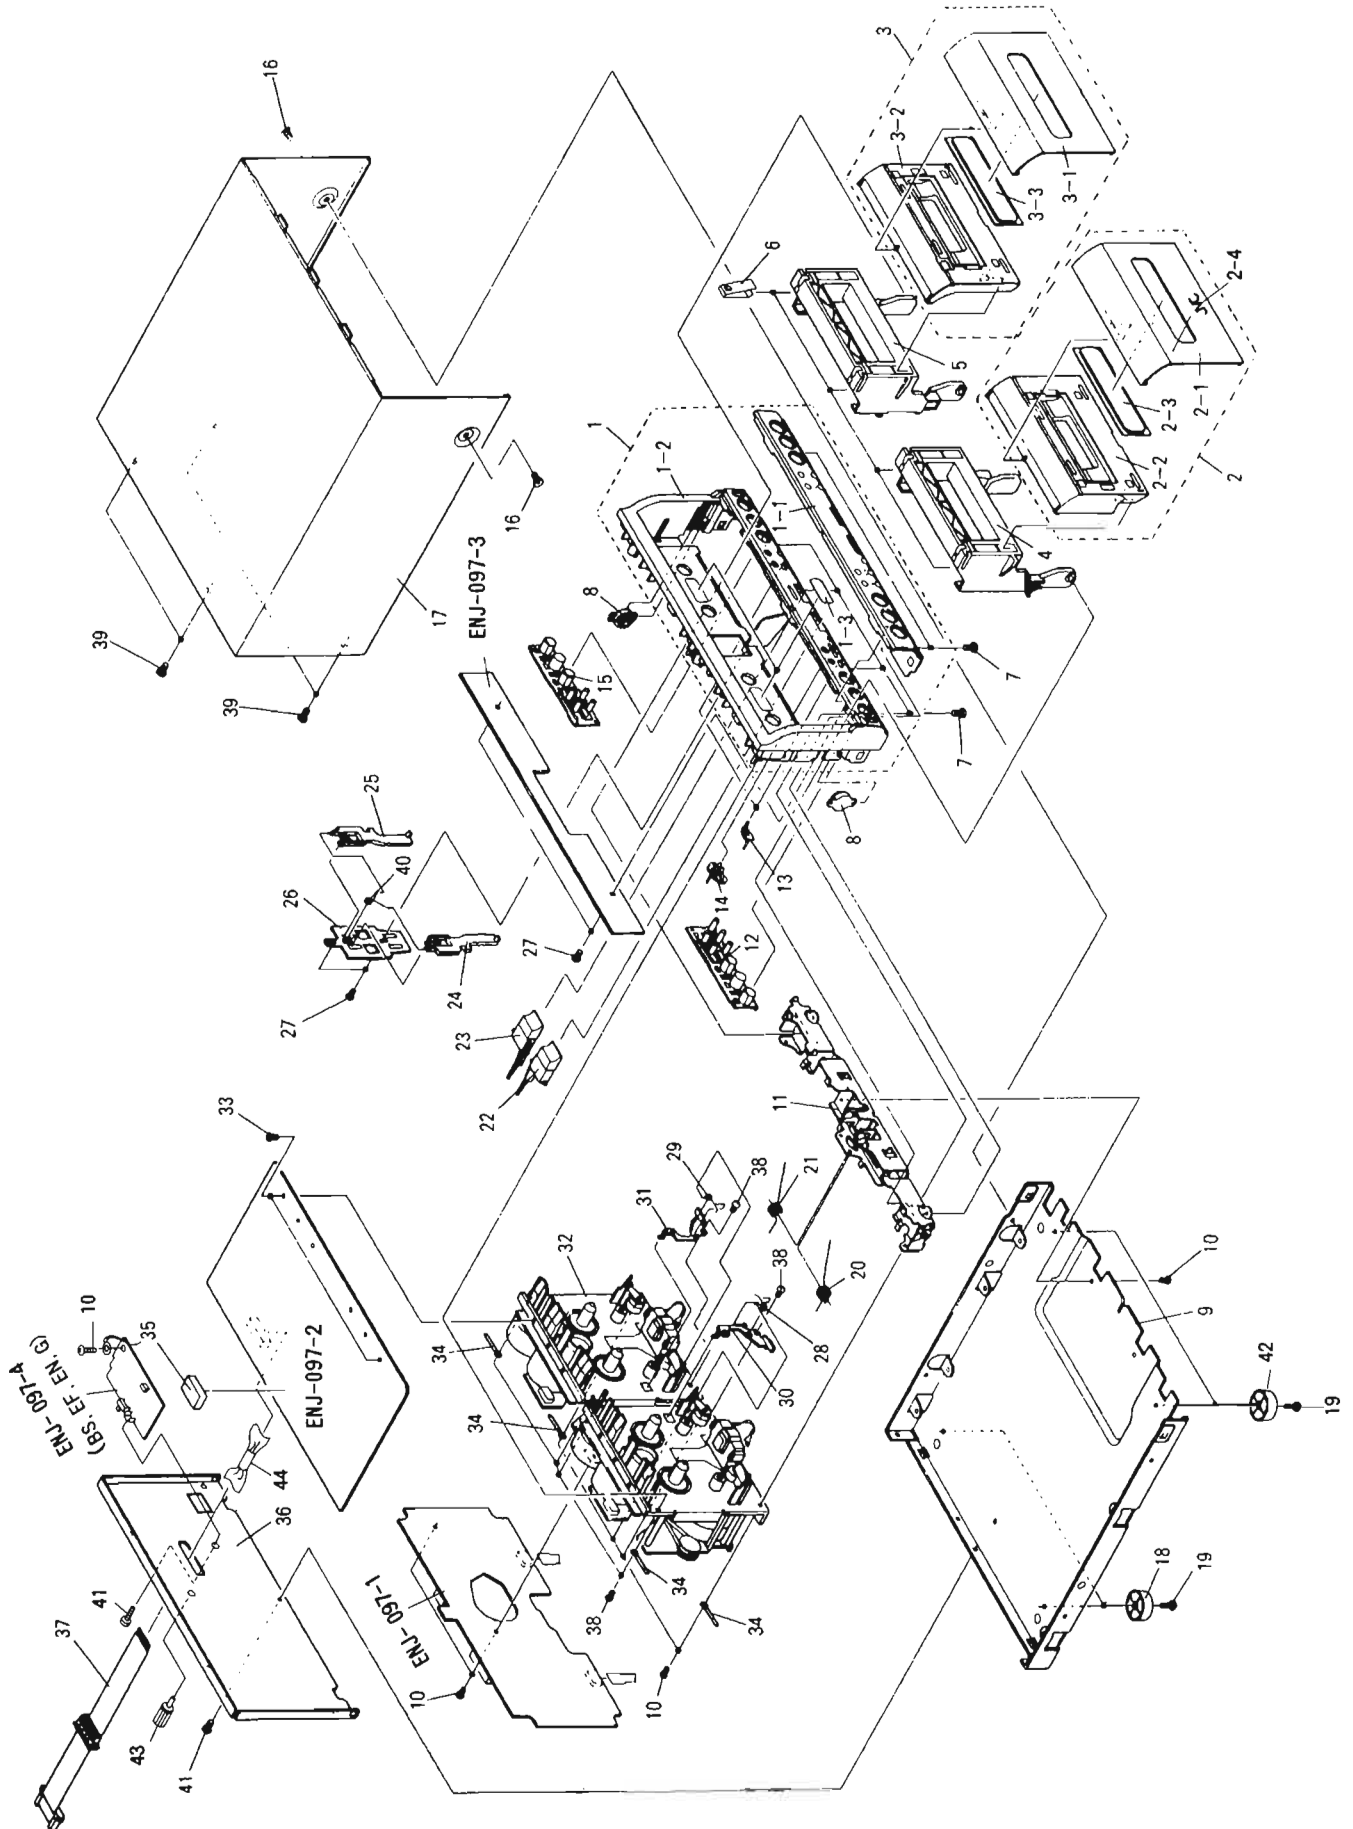

■ Parts List


Block No. **M5MM**

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|------------------|-------------------------|------|--------------|------------|
| | 1 | EFP-TDF3000E (S) | FRONT PANEL ASSY | 1 | | |
| | 1-1 | E208709-003 | FRONT PANEL | 1 | | |
| | 1-2 | E103091-002ST | FRONT BASE | 1 | | |
| | 1-3 | E69777-003 | REFLECTION PLATE | 2 | | |
| | 2 | E309621-002SA | CASSETTE LID ASSY | 1 | | |
| | 2-1 | E309621-002 | CASSETTE LID | 1 | | |
| | 2-2 | E208720-002ST | LID BASE | 1 | | |
| | 2-3 | E309625-001 | CASSETTE LENS | 1 | | |
| | 2-4 | E406971-221 | JVC MARK | 1 | | |
| | 3 | E309623-002SA | CASSETTE LID ASSY | 1 | | |
| | 3-1 | E309623-002 | CASSETTE LID | 1 | | |
| | 3-2 | E208721-002ST | LID BASE | 1 | | |
| | 3-3 | E309625-001 | CASSETTE LENS | 1 | | |
| | 4 | E207972-005SS | CASSETTE HOLDER | 1 | | |
| | 5 | E207973-005SS | CASSETTE HOLDER | 1 | | |
| | 6 | E406713-001 | CASSETTE SPRING | 4 | | |
| | 7 | SDST3008CC | SCREW | 6 | | |
| | 8 | E304434-005 | DAMPER ASSY | 2 | | |
| | 9 | E103092-002 | CHASSIS BASE | 1 | | |
| | 10 | SBST3006Z | TAPPING SCREW | 8 | | |
| | 11 | E208717-001 | HOLDER BKT | 1 | | |
| | 12 | E208711-003SS | PUSH BUTTON ASSY | 1 | | |
| | 13 | E408911-001 | INDICATOR | 2 | REC | |
| | 14 | E408910-001 | INDICATOR | 1 | REV. | |
| | 15 | E208714-003SS | PUSH BUTTON ASSY | 1 | | |
| | 16 | SDSG3008N | TAPPING SCREW | 2 | | |
| | 17 | E208174-010 (S) | METAL COVER | 1 | | |
| | 18 | E75281-010 | FOOT | 2 | | |
| | 19 | SBST3010Z | TAPPING SCREW | 4 | | |
| | 20 | FSKW4002-001 | HOLDER SPRING | 1 | | |
| | 21 | FSKW4003-001 | HOLDER SPRING | 1 | | |
| | 22 | E309619-003SS | EJECT BUTTON | 1 | | |
| | 23 | E309620-003SS | EJECT BUTTON | 1 | | |
| | 24 | E308681-002SS | EJECT LEVER | 1 | | |
| | 25 | E308682-002SS | EJECT LEVER | 1 | | |
| | 26 | E308683-002 | EJECT GUIDE | 1 | | |
| | 27 | SDSF2608Z | SCREW | 4 | | |
| | 28 | E407801-002 | SPRING | 1 | | |
| | 29 | E407802-002 | SPRING | 1 | | |
| | 30 | E407799-001 | EJECT BRACKET | 1 | | |
| | 31 | E407800-001 | EJECT BRACKET | 1 | | |
| | 32 | ----- | CASSETTE MECHANISM ASSY | 1 | See page 8-4 | |
| | 33 | SDST2604Z | SCREW | 2 | | |
| | 34 | PU49485-3 | CORD CLAMP | 4 | | |
| | 35 | E306805-056 | SPACER | 1 | | |
| | 36 | E208718-002 | REAR PANEL | 1 | | J |
| | | E208718-003 | REAR PANEL | 1 | | C |
| | | E208718-005 | REAR PANEL | 1 | | U UB US UT |
| | | E208718-006 | REAR PANEL | 1 | | BS EF EN G |
| | 37 | EWP907-020 | FLAT WIRE ASSY | 1 | | |
| | 38 | SBSF3008Z | TAPPING SCREW | 6 | | |
| | 39 | GBSG3008CC | TAPPING SCREW | 4 | | |
| | 40 | E407798-002 | SPRING | 1 | | |
| | 41 | E73273-003 | SPECIAL SCREW | 1 | | BS EF EN G |
| | 42 | E75281-009 | FOOT | 2 | | |
| | 43 | E409257-001 | EARTH TERMINAL | 1 | | BS EF EN G |
| | 44 | ENZ8104-005 | NOISE FILTER | 1 | | BS EF EN G |
| | - | E61029-005 | NUMBER LABEL | 1 | | |

Cassette Mechanism Ass'y and Parts List

Block No. **M6MM**

■ Grease Point

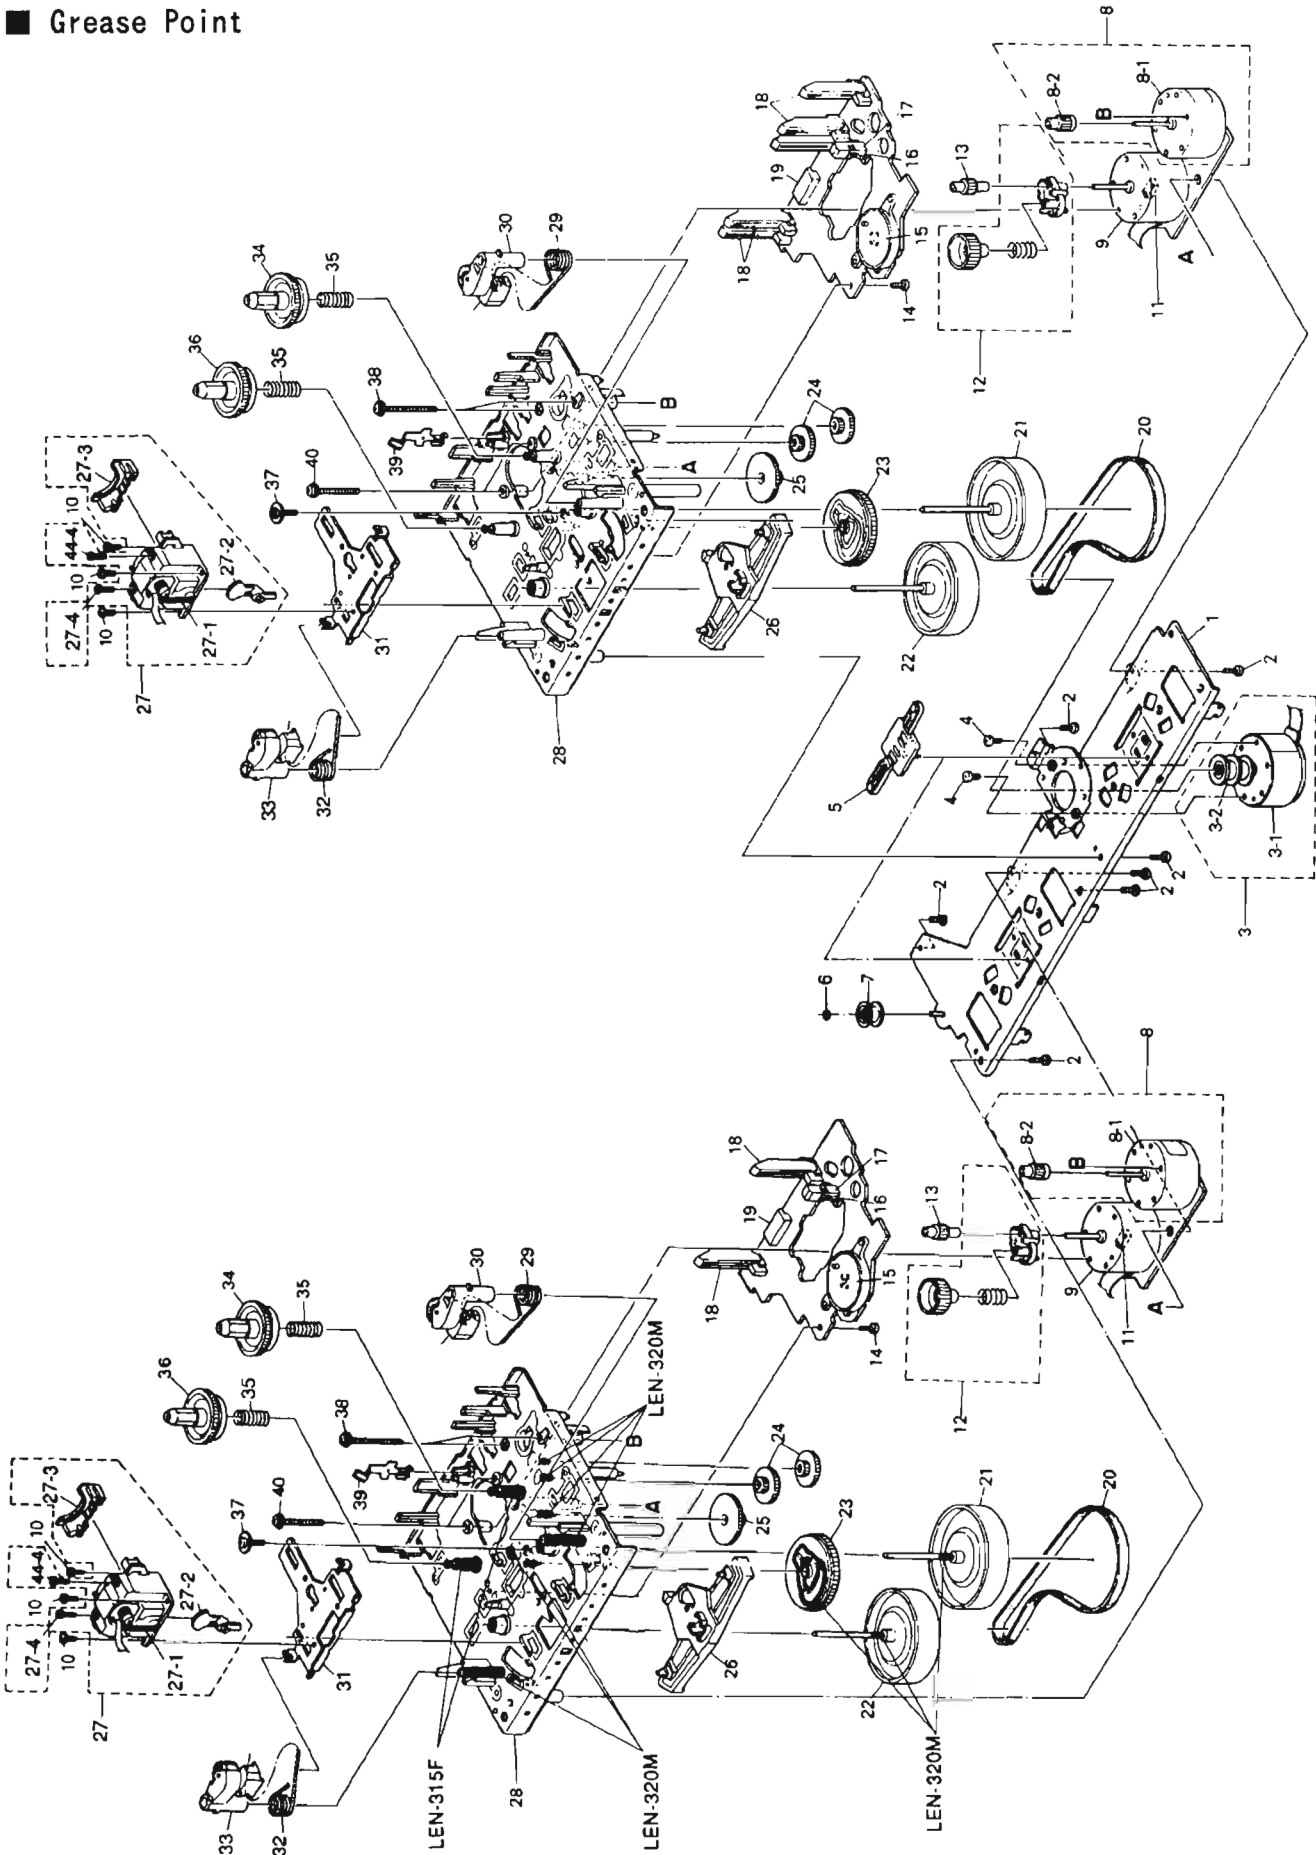

■ Parts List (Cassette Mechanism Ass'y)

Block No. **M6MM**

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|---------------|---------------------|------|--------------------|------|
| | 1 | VKM3775-00A | FM. BKT. ASS'Y | 1 | | |
| | 2 | SPSP2603Z | WOOD SCREW | 2 | | |
| | 3 | MSI5U2LWA-SA1 | DC MOTOR | 1 | CAPSTAN MOTOR ASSY | |
| | 3-1 | MSI-5U2LWA | DC MOTOR | 1 | CAPSTAN MOTOR | |
| | 3-2 | VKR4632-003MM | MOTOR PULLEY | 1 | | |
| | 4 | SBSF2608Z | TAPPING SCREW | 7 | | |
| | 5 | VKS5327-005MM | LOCK PLATE | 2 | | |
| | 6 | WDL163525-4 | WASHER | 1 | | |
| | 7 | VKR4631-005MM | IDLER PULLEY | 1 | | |
| | 8 | MSN5D257A-SA1 | DC MOTOR | 2 | CAM MOTOR ASSY | |
| | 8-1 | MSN-5D257A | DC MOTOR | 2 | CAM MOTOR | |
| | 8-2 | VKS5433-001 | ACTUATER MOTOR GEAR | 2 | | |
| | 9 | MMN-6F4RA38 | DC MOTOR | 2 | REEL MOTOR | |
| | 10 | SDSR2004Z | SCREW | 6 | | |
| | 11 | VMCO234-R08 | CONNECT TERMINAL | 2 | 8PIN | |
| | 12 | VKS5430-00CMM | F. F./REW. ARM | 2 | | |
| | 13 | VKS5432-001 | REEL MOTOR GEAR | 2 | | |
| | 14 | SDST2612Z | SCREW | 2 | | |
| | 15 | VKS3616-00A | CAM SWITCH | 2 | | |
| | 16 | DN6851-H1 | I. C (M) | 2 | | |
| | 17 | VKS3630-001MM | I. C. PROTECTOR | 2 | | |
| | 18 | MXS00220MVL0 | CASSETTE SWITCH | 7 | | |
| | 19 | VMCO234-R11 | CONNECT TERMINAL | 1 | A MECHA. 11PIN | |
| | | VMCO234-R14 | CONNECT TERMINAL | 1 | B MECHA. 14PIN | |
| | 20 | VKB3001-064 | DRIVE BELT | 1 | A MECHA. | |
| | | VKB3001-065 | DRIVE BELT | 1 | B MECHA. | |
| | 21 | VKF3184-00H | FLYWHEEL ASS'Y | 2 | RIGHT | |
| | 22 | VKF3186-00H | FLYWHEEL ASS'Y | 2 | LEFT | |
| | 23 | VKS2224-002 | CONTROL CAM | 2 | | |
| | 24 | VKS5454-001 | ACTUATER GEAR | 4 | | |
| | 25 | VKS5455-001 | ACTUATER GEAR | 2 | | |
| | 26 | VKS3627-002 | PINCH ROLLER LEVER | 2 | | |
| | 27 | VKS3626-00F | H. MOUNT ASS'Y | 1 | A MECHA. | |
| | | VKS3629-00F | H. MOUNT ASS'Y | 1 | B MECHA. | |
| | 27-1 | VKW5126-001 | HEAD SPRING | 2 | | |
| | 27-2 | VKS3614-001 | TURN OVER GEAR | 2 | | |
| | 27-3 | VKS3654-001 | HEAD MT. COVER | 2 | | |
| | 27-4 | VKZ4629-003 | SCREW | 4 | | |
| | 28 | VKS1134-00B | CHASSIS BASE | 2 | | |
| | 29 | VKW5045-003 | PINCH ROLLER SPRING | 2 | RIGHT | |
| | 30 | VKP4227-00B | PINCH ROLLER | 2 | RIGHT | |
| | 31 | VKM3632-001 | HEAD BASE | 2 | | |
| | 32 | VKW5046-003 | PINCH ROLLER SPRING | 2 | LEFT | |
| | 33 | VKP4229-00B | PINCH ROLLER | 2 | LEFT | |
| | 34 | VKS5428-00B | REEL DISK | 2 | | |
| | 35 | VKW5043-001 | TENSION SPRING | 4 | | |
| | 36 | VKS3617-002 | REEL DISK | 2 | | |
| | 37 | VKZ4708-001 | SPECIAL SCREW | 2 | | |
| | 38 | VKZ4705-002 | SCREW | 4 | | |
| | 39 | VKY4670-001 | CASSETTE SPRING | 2 | | |
| | 40 | VKZ4705-001 | SCREW | 4 | | |

■ Electrical Parts List (ENJ-097)

| Δ | Item | Parts Number | Description | Area |
|---|-------|-----------------|------------------------|------------|
| | | I. C. S | | |
| | IC201 | AN7374K | I. C. (MONO-ANALOG) | |
| | IC202 | BA8221AM | I. C. (MONO-ANALOG) | |
| | IC203 | HD6140B1SE39 | I. C. (MICRO-COMPUTER) | |
| | IC204 | LB1641 | I. C. (DIGI-OTHER) | |
| | IC205 | LB1641 | I. C. (DIGI-OTHER) | |
| | IC206 | LB1641 | I. C. (DIGI-OTHER) | |
| | IC207 | LB1641 | I. C. (DIGI-OTHER) | |
| | IC301 | BA15218M | I. C. (MONO-ANALOG) | |
| | IC302 | UPC1228HA | I. C. (MONO-ANALOG) | |
| | IC303 | UPC1228HA | I. C. (MONO-ANALOG) | |
| | IC304 | UPC1330HA | I. C. (MONO-ANALOG) | |
| | IC501 | UPC1297CA | I. C. (MONO-ANALOG) | |
| | | DIODES | | |
| | D201 | 1SS119 | SI. DIODE | |
| | D202 | 1SS119 | SI. DIODE | |
| | D203 | 1SS119 | SI. DIODE | |
| | D204 | 1SS119 | SI. DIODE | |
| | D205 | 1SS119 | SI. DIODE | |
| | D206 | 1SS119 | SI. DIODE | |
| | D207 | 1SS119 | SI. DIODE | |
| | D208 | 1SS119 | SI. DIODE | |
| | D209 | 1SS119 | SI. DIODE | |
| | D210 | 1SS119 | SI. DIODE | |
| | D211 | 1SS119 | SI. DIODE | |
| | D213 | 1SS119 | SI. DIODE | |
| | D214 | 1SS119 | SI. DIODE | |
| | D215 | 1SS119 | SI. DIODE | |
| | D216 | 1SS119 | SI. DIODE | |
| | D217 | MTZ3.9JB | ZENER DIODE | |
| | D218 | 1SS119 | SI. DIODE | |
| | D219 | 1SS119 | SI. DIODE | |
| | D220 | 1SS119 | SI. DIODE | |
| | D221 | 1SS119 | SI. DIODE | |
| | D224 | 1SS119 | SI. DIODE | |
| | D275 | 1SS119 | SI. DIODE | |
| | D292 | 1SS119 | SI. DIODE | |
| | D303 | 1SS119 | SI. DIODE | BS EF EN G |
| | D310 | SLR-342MCA47 | L. E. D. | |
| | D311 | SLR-342MCA47 | L. E. D. | |
| | D312 | SLR-342MCA47 | L. E. D. | |
| | D313 | SLR-342MCA47 | L. E. D. | |
| | D314 | SLR-342VC3F | L. E. D. | |
| | D315 | SLR-342VC3F | L. E. D. | |
| | D316 | SLR-342VC3F | L. E. D. | |
| | D317 | SLR-342VC3F | L. E. D. | |
| | | TRANSISTORS | | |
| | Q201 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q202 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q203 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q204 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q205 | 2SD2144S (VM) | SI. TRANSISTOR | |
| | Q206 | 2SD2144S (VM) | SI. TRANSISTOR | |
| | Q207 | DTA144ES | DIGITAL TRANSISTOR | |
| | Q209 | DTC114ES | DIGITAL TRANSISTOR | |
| | Q210 | DTA114YS | DIGITAL TRANSISTOR | |
| | Q211 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q212 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q214 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q216 | 2SA933AS | SI. TRANSISTOR | |
| | Q217 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q218 | DTC144ES | DIGITAL TRANSISTOR | |
| | Q219 | DTA114YS | DIGITAL TRANSISTOR | |
| | Q220 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q301 | 2SD2144S (VM) | SI. TRANSISTOR | |
| | Q302 | 2SD2144S (VM) | SI. TRANSISTOR | |
| | Q303 | 2SC1740S (R. S) | SI. TRANSISTOR | |

| Δ | Item | Parts Number | Description | Area |
|---|------|-----------------|------------------------|------------|
| | Q304 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q305 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q306 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q313 | DTC144TS | DIGITAL TRANSISTOR | |
| | Q314 | DTC144TS | DIGITAL TRANSISTOR | |
| | Q315 | DTC144TS | DIGITAL TRANSISTOR | |
| | Q316 | DTC144TS | DIGITAL TRANSISTOR | |
| | Q319 | 2SA933AS | SI. TRANSISTOR | |
| | Q320 | 2SA933AS | SI. TRANSISTOR | |
| | Q321 | 2SA933AS | SI. TRANSISTOR | |
| | Q322 | 2SA933AS | SI. TRANSISTOR | |
| | Q327 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q328 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q329 | 2SC1740S (R. S) | SI. TRANSISTOR | |
| | Q330 | 2SC945A | SI. TRANSISTOR | BS EF EN G |
| | Q331 | DTA144ES | DIGITAL TRANSISTOR | BS EF EN G |
| | Q501 | 2SA934 (O. R) | SI. TRANSISTOR | |
| | Q502 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q504 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q505 | DTC114YS | DIGITAL TRANSISTOR | |
| | Q506 | DTC144ES | DIGITAL TRANSISTOR | |
| | | CAPACITORS | | |
| | C201 | QEK51HM-105G | 1MF 50V AL. E. CAP. | |
| | C202 | QEK51HM-105G | 1MF 50V AL. E. CAP. | |
| | C203 | QCB81HK-101Y | 100PF 50V CER. CAP. | BS EF EN G |
| | C204 | QCB81HK-101Y | 100PF 50V CER. CAP. | BS EF EN G |
| | C205 | QEK51HM-105G | 1MF 50V AL. E. CAP. | |
| | C206 | QEK51HM-105G | 1MF 50V AL. E. CAP. | |
| | C207 | QETB1HM-106 | 10MF 50V E. CAP. | |
| | C208 | QETB1HM-106 | 10MF 50V E. CAP. | |
| | C209 | QFLB1HJ-183 | 0.018MF 50V MYLAR CAP. | |
| | C210 | QFLB1HJ-183 | 0.018MF 50V MYLAR CAP. | |
| | C213 | QFLB1HJ-152 | 1500PF 50V MYLAR CAP. | |
| | C214 | QFLB1HJ-152 | 1500PF 50V MYLAR CAP. | |
| | C215 | QEK51HM-474G | 0.47MF 50V AL. E. CAP. | |
| | C216 | QEK51HM-474G | 0.47MF 50V AL. E. CAP. | |
| | C217 | QFLB1HJ-152 | 1500PF 50V MYLAR CAP. | |
| | C218 | QFLB1HJ-152 | 1500PF 50V MYLAR CAP. | |
| | C219 | QEK51HM-474G | 0.47MF 50V AL. E. CAP. | |
| | C220 | QEK51HM-474G | 0.47MF 50V AL. E. CAP. | |
| | C221 | QCB81HK-101Y | 100PF 50V CER. CAP. | BS EF EN G |
| | C222 | QCB81HK-101Y | 100PF 50V CER. CAP. | BS EF EN G |
| | C223 | QFLB1HJ-272 | 2700PF 50V MYLAR CAP. | |
| | C224 | QFLB1HJ-272 | 2700PF 50V MYLAR CAP. | |
| | C225 | QETB1EM-106 | 10MF 25V AL. E. CAP. | |
| | C226 | QETB1EM-106 | 10MF 25V AL. E. CAP. | |
| | C227 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C228 | QETB1EM-476 | 47MF 25V AL. E. CAP. | |
| | C229 | QETB1CM-226 | 22MF 16V E. CAP. | |
| | C231 | QETB1CM-476 | 47MF 16V AL. E. CAP. | |
| | C232 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C233 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C234 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C236 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C237 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C238 | QETB1HM-105 | 1MF 50V AL. E. CAP. | |
| | C239 | QETB1CM-107 | 100MF 16V AL. E. CAP. | |
| | C240 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C241 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C242 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C243 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C244 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C245 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C246 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C247 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C301 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C302 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |

■ Electrical Parts List (ENJ-097)

| △ | Item | Parts Number | Description | Area |
|---|------|--------------|--------------------------|----------------|
| | C303 | QEK51HM-225G | 2.2MF 50V AL E. CAP. | |
| | C304 | QEK51HM-225G | 2.2MF 50V AL E. CAP. | |
| | C305 | QCB81HK-101Y | 100PF 50V CER. CAP. | |
| | C308 | QCB81HK-101Y | 100PF 50V CER. CAP. | |
| | C307 | QCB81HK-181Y | 180PF 50V CER. CAP. | |
| | C308 | QCB81HK-181Y | 180PF 50V CER. CAP. | |
| | C309 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C310 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C311 | QCSB1HJ-470 | 47PF 50V CER. CAP. | |
| | C312 | QCSB1HJ-470 | 47PF 50V CER. CAP. | |
| | C313 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C314 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C315 | QEK51HM-105G | 1MF 50V AL E. CAP. | |
| | C318 | QEK51HM-105G | 1MF 50V AL E. CAP. | |
| | C317 | QEK51EM-106 | 10MF 25V AL E. CAP. | |
| | C318 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C319 | QCF21HP-223A | 0.022MF 50V CER. CAP. | BS EF EN G |
| | C320 | QFLB1HJ-692 | 6800PF 50V NYLAR CAP. | |
| | C321 | QFLB1HJ-332 | 3300PF 50V NYLAR CAP. | |
| | C322 | QFLB1HJ-332 | 3300PF 50V NYLAR CAP. | |
| | C323 | QFLB1HJ-183 | 0.018MF 50V NYLAR CAP. | |
| | C324 | QFP81HG-472 | 4700PF 50V POLYPROPY. FI | |
| | C327 | QCB81HK-471Y | 470PF 50V CER. CAP. | BS EF EN G |
| | C328 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | BS EF EN G |
| | C341 | QFLB1HJ-223 | 0.022MF 50V NYLAR CAP. | |
| | C342 | QFLB1HJ-223 | 0.022MF 50V NYLAR CAP. | |
| | C345 | QFLB1HJ-123 | 0.012MF 50V NYLAR CAP. | |
| | C346 | QFLB1HJ-123 | 0.012MF 50V NYLAR CAP. | |
| | C347 | QFLB1HJ-103 | 0.01MF 50V NYLAR CAP. | |
| | C348 | QFLB1HJ-103 | 0.01MF 50V NYLAR CAP. | |
| | C360 | QETB1CM-226 | 22MF 18V E. CAP. | |
| | C361 | QCF21HP-473A | 0.047MF 50V CER. CAP. | |
| | C362 | QCF21HP-473A | 0.047MF 50V CER. CAP. | |
| | C364 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C365 | QETB1HM-225 | 2.2MF 50V AL E. CAP. | |
| | C366 | QETB1HM-225 | 2.2MF 50V AL E. CAP. | |
| | C367 | QFLB1HJ-822 | 8200PF 50V NYLAR CAP. | |
| | C368 | QFLB1HJ-822 | 8200PF 50V NYLAR CAP. | |
| | C369 | QETB1AM-107 | 100MF 10V AL E. CAP. | |
| | C370 | QETB1AM-107 | 100MF 10V AL E. CAP. | |
| | C371 | QEK51HM-225G | 2.2MF 50V AL E. CAP. | |
| | C372 | QEK51HM-225G | 2.2MF 50V AL E. CAP. | |
| | C373 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C374 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C375 | QCB81HK-101Y | 100PF 50V CER. CAP. | C J U UB US UT |
| | | QCB81HK-471Y | 470PF 50V CER. CAP. | BS EF EN G |
| | C378 | QCB81HK-101Y | 100PF 50V CER. CAP. | C J U UB US UT |
| | | QCB81HK-471Y | 470PF 50V CER. CAP. | BS EF EN G |
| | C377 | QCY31HK-182Z | 1800PF 50V CER. CAP. | |
| | C378 | QCY31HK-182Z | 1800PF 50V CER. CAP. | |
| | C379 | QCB81HK-331Y | 330PF 50V CER. CAP. | |
| | C380 | QCB81HK-331Y | 330PF 50V CER. CAP. | |
| | C381 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C383 | QETB1HM-225 | 2.2MF 50V AL E. CAP. | |
| | C384 | QETB1HM-225 | 2.2MF 50V AL E. CAP. | |
| | C385 | QFLB1HJ-822 | 8200PF 50V NYLAR CAP. | |
| | C386 | QFLB1HJ-822 | 8200PF 50V NYLAR CAP. | |
| | C387 | QETB1AM-107 | 100MF 10V AL E. CAP. | |
| | C388 | QETB1AM-107 | 100MF 10V AL E. CAP. | |
| | C389 | QETB1HM-225 | 2.2MF 50V AL E. CAP. | |
| | C390 | QETB1HM-225 | 2.2MF 50V AL E. CAP. | |
| | C391 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C392 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C393 | QCB81HK-101Y | 100PF 50V CER. CAP. | C J U UB US UT |
| | | QCB81HK-471Y | 470PF 50V CER. CAP. | BS EF EN G |
| | C394 | QCB81HK-101Y | 100PF 50V CER. CAP. | C J U UB US UT |
| | | QCB81HK-471Y | 470PF 50V CER. CAP. | BS EF EN G |

| △ | Item | Parts Number | Description | Area |
|---|------|---------------|-------------------------|------|
| | C395 | QCX81CM-182Y | 1800PF 16V CER. CAP. | |
| | C396 | QCX81CM-182Y | 1800PF 16V CER. CAP. | |
| | C397 | QCB81HK-331Y | 330PF 50V CER. CAP. | |
| | C398 | QCB81HK-331Y | 330PF 50V CER. CAP. | |
| | C501 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C502 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C503 | QFP81HG-821 | 820PF 50V POLYPROPY. FI | |
| | C504 | QFP81HG-821 | 820PF 50V POLYPROPY. FI | |
| | C506 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C507 | QFLB1HJ-103 | 0.01MF 50V NYLAR CAP. | |
| | C508 | QFLB1HJ-103 | 0.01MF 50V NYLAR CAP. | |
| | C509 | QCF31HP-102Z | 1000PF 50V CER. CAP. | |
| | C510 | QCF31HP-102Z | 1000PF 50V CER. CAP. | |
| | C511 | QFLB1HJ-223 | 0.022MF 50V NYLAR CAP. | |
| | C512 | QFLB1HJ-223 | 0.022MF 50V NYLAR CAP. | |
| | C513 | QFLB1HJ-333 | 0.033MF 50V NYLAR CAP. | |
| | C514 | QFLB1HJ-333 | 0.033MF 50V NYLAR CAP. | |
| | C515 | QETB1CM-107 | 100MF 18V AL E. CAP. | |
| | C516 | QCS21HJ-100 | 10PF 50V CER. CAP. | |
| | C525 | QCB81HK-101Y | 100PF 50V CER. CAP. | |
| | C526 | QCB81HK-101Y | 100PF 50V CER. CAP. | |
| | C541 | QETB1EM-106 | 10MF 25V AL E. CAP. | |
| | C991 | QCV81CM-103Y | 0.01MF 16V CER. CAP. | |
| | C992 | QCV81CM-103Y | 0.01MF 16V CER. CAP. | |
| | | RESISTORS | | |
| | R201 | QRD181J-221 | 220 1/8W CARBON RES. | |
| | R202 | QRD181J-221 | 220 1/8W CARBON RES. | |
| | R203 | QRD181J-393 | 39K 1/8W CARBON RES. | |
| | R204 | QRD181J-393 | 39K 1/8W CARBON RES. | |
| | R205 | QRD181J-754 | 750K 1/8W CARBON RES. | |
| | R206 | QRD181J-754 | 750K 1/8W CARBON RES. | |
| | R207 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R208 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R209 | QRD187J-223 | 22K 1/8W CARBON RES. | |
| | R210 | QRD187J-223 | 22K 1/8W CARBON RES. | |
| | R211 | QRD181J-122 | 1.2K 1/8W CARBON RES. | |
| | R212 | QRD181J-122 | 1.2K 1/8W CARBON RES. | |
| | R213 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R214 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R215 | QRD181J-105 | 1M 1/8W CARBON RES. | |
| | R216 | QRD181J-274 | 270K 1/8W CARBON RES. | |
| | R217 | QRD181J-104 | 100K 1/8W CARBON RES. | |
| | R218 | QRD181J-102 | 1K 1/8W CARBON RES. | |
| | R219 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R220 | QRD187J-223 | 22K 1/8W CARBON RES. | |
| | R221 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R222 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| | R223 | QRD181J-103 | 10K 1/8W CARBON RES. | |
| △ | R224 | QRD140J-100SX | 10 1/4W UNF. CARBON R | |
| | R225 | QRD187J-562 | 5.6K 1/8W CARBON RES. | |
| | R226 | QRD187J-562 | 5.6K 1/8W CARBON RES. | |
| | R227 | QRD181J-102 | 1K 1/8W CARBON RES. | |
| | R228 | QRD181J-102 | 1K 1/8W CARBON RES. | |
| | R229 | QRD187J-223 | 22K 1/8W CARBON RES. | |
| | R232 | QRD181J-221 | 220 1/8W CARBON RES. | |
| | R233 | QRD181J-105 | 1M 1/8W CARBON RES. | |
| | R234 | QRD181J-221 | 220 1/8W CARBON RES. | |
| | R235 | QRD181J-472 | 4.7K 1/8W CARBON RES. | |
| | R236 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R237 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R238 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R239 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R240 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R241 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R242 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R243 | QRD181J-301 | 300 1/8W CARBON RES. | |
| | R244 | QRD181J-105 | 1M 1/8W CARBON RES. | |

■ Electrical Parts List (ENJ-097)

| △ | Item | Parts Number | Description | Area |
|---|------|---------------|-----------------------|------------|
| | R245 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R246 | ORD161J-105 | 1M 1/6W CARBON RES. | |
| | R247 | ORD161J-913 | 91K 1/6W CARBON RES. | |
| | R248 | ORD161J-104 | 100K 1/6W CARBON RES. | |
| | R251 | ORD161J-224 | 220K 1/6W CARBON RES. | |
| | R253 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R257 | ORD161J-683 | 68K 1/6W CARBON RES. | |
| | R258 | ORD167J-113 | 11K 1/6W CARBON RES. | |
| | R259 | ORD167J-622 | 8.2K 1/6W CARBON RES. | |
| | R260 | ORD167J-622 | 8.2K 1/6W CARBON RES. | |
| | R261 | ORD161J-913 | 91K 1/6W CARBON RES. | |
| | R262 | ORD161J-913 | 91K 1/6W CARBON RES. | |
| | R263 | ORD161J-163 | 16K 1/6W CARBON RES. | |
| | R264 | ORD161J-163 | 16K 1/6W CARBON RES. | |
| | R265 | ORD161J-432 | 4.3K 1/6W CARBON RES. | |
| | R266 | ORD161J-432 | 4.3K 1/6W CARBON RES. | |
| | R267 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R268 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R269 | ORD161J-222 | 2.2K 1/6W CARBON RES. | |
| | R270 | ORD161J-222 | 2.2K 1/6W CARBON RES. | |
| | R271 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R279 | ORD167J-153 | 15K 1/6W CARBON RES. | |
| | R280 | ORD161J-221 | 220 1/6W CARBON RES. | |
| | R283 | ORD161J-100 | 10 1/6W CARBON RES. | |
| | R284 | ORD161J-100 | 10 1/6W CARBON RES. | |
| | R285 | ORD161J-393 | 39K 1/6W CARBON RES. | |
| | R286 | ORD161J-393 | 39K 1/6W CARBON RES. | |
| | R287 | ORD14CJ-6RBSX | 6 R 1/4W UNF CARBON R | |
| △ | R288 | ORD14CJ-100SX | 10 1/4W UNF CARBON R | |
| | R293 | ORD161J-301 | 330 1/6W CARBON RES. | |
| | R294 | ORD161J-271 | 270 1/6W CARBON RES. | |
| | R296 | ORD161J-104 | 100K 1/6W CARBON RES. | |
| | R297 | ORD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R298 | ORD161J-561 | 560 1/6W CARBON RES. | BS EF EN G |
| | R301 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R302 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R303 | ORD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R304 | ORD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R315 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R316 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R317 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R318 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R319 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R320 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R321 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R322 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R323 | ORD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R324 | ORD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R325 | ORD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R326 | ORD167J-562 | 5.6K 1/6W CARBON RES. | |
| | R339 | ORD167J-272 | 2.7K 1/6W CARBON RES. | |
| | R340 | ORD167J-272 | 2.7K 1/6W CARBON RES. | |
| | R341 | ORD161J-512 | 5.1K 1/6W CARBON RES. | |
| | R342 | ORD161J-512 | 5.1K 1/6W CARBON RES. | |
| | R343 | ORD161J-432 | 4.3K 1/6W CARBON RES. | |
| | R344 | ORD161J-432 | 4.3K 1/6W CARBON RES. | |
| | R345 | ORD161J-512 | 5.1K 1/6W CARBON RES. | |
| | R346 | ORD161J-512 | 5.1K 1/6W CARBON RES. | |
| | R347 | ORD161J-820 | 82 1/6W CARBON RES. | |
| | R348 | ORD161J-820 | 82 1/6W CARBON RES. | |
| | R351 | ORD161J-242 | 2.4K 1/6W CARBON RES. | |
| | R352 | ORD161J-242 | 2.4K 1/6W CARBON RES. | |
| | R355 | ORD161J-243 | 24K 1/6W CARBON RES. | |
| | R356 | ORD161J-243 | 24K 1/6W CARBON RES. | |
| | R357 | ORD161J-683 | 68K 1/6W CARBON RES. | |
| | R358 | ORD161J-683 | 68K 1/6W CARBON RES. | |
| | R359 | ORD167J-223 | 22K 1/6W CARBON RES. | |

| △ | Item | Parts Number | Description | Area |
|---|-------|---------------|-----------------------|------------|
| | R360 | ORD167J-223 | 22K 1/6W CARBON RES. | |
| | R361 | ORD161J-393 | 39K 1/6W CARBON RES. | |
| | R362 | ORD161J-393 | 39K 1/6W CARBON RES. | |
| | R363 | ORD161J-221 | 220 1/6W CARBON RES. | |
| | R364 | ORD161J-221 | 220 1/6W CARBON RES. | |
| | R365 | ORD161J-470 | 47 1/6W CARBON RES. | BS EF EN G |
| | R366 | ORD161J-470 | 47 1/6W CARBON RES. | BS EF EN G |
| | R367 | ORD167J-334 | 330K 1/6W CARBON RES. | |
| | R368 | ORD167J-334 | 330K 1/6W CARBON RES. | |
| | R369 | ORD161J-470 | 47 1/6W CARBON RES. | |
| | R370 | ORD161J-470 | 47 1/6W CARBON RES. | |
| | R371 | ORD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R372 | ORD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R375 | ORD161J-752 | 7.5K 1/6W CARBON RES. | |
| | R376 | ORD161J-752 | 7.5K 1/6W CARBON RES. | |
| | R377 | ORD161J-224 | 220K 1/6W CARBON RES. | |
| | R378 | ORD161J-224 | 220K 1/6W CARBON RES. | |
| | R379 | ORD161J-102 | 1K 1/6W CARBON RES. | |
| | R380 | ORD161J-473 | 47K 1/6W CARBON RES. | |
| | R381 | ORD161J-471 | 470 1/6W CARBON RES. | |
| | R382 | ORD161J-471 | 470 1/6W CARBON RES. | |
| | R383 | ORD161J-470 | 47 1/6W CARBON RES. | BS EF EN G |
| | R384 | ORD161J-470 | 47 1/6W CARBON RES. | BS EF EN G |
| | R385 | ORD167J-334 | 330K 1/6W CARBON RES. | |
| | R386 | ORD167J-334 | 330K 1/6W CARBON RES. | |
| | R387 | ORD161J-470 | 47 1/6W CARBON RES. | |
| | R388 | ORD161J-470 | 47 1/6W CARBON RES. | |
| | R389 | ORD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R390 | ORD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R393 | ORD161J-752 | 7.5K 1/6W CARBON RES. | |
| | R394 | ORD161J-752 | 7.5K 1/6W CARBON RES. | |
| | R395 | ORD161J-224 | 220K 1/6W CARBON RES. | |
| | R396 | ORD161J-224 | 220K 1/6W CARBON RES. | |
| | R397 | ORD161J-102 | 1K 1/6W CARBON RES. | |
| | R398 | ORD161J-102 | 1K 1/6W CARBON RES. | |
| | R492 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R501 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R502 | ORD161J-222 | 2.2K 1/6W CARBON RES. | |
| △ | R503 | ORD14CJ-100SX | 10 1/4W UNF CARBON R | |
| △ | R504 | ORD14CJ-100SX | 10 1/4W UNF CARBON R | |
| △ | R506 | ORD14CJ-100SX | 10 1/4W UNF CARBON R | |
| | R607 | ORD161J-183 | 18K 1/6W CARBON RES. | |
| | R508 | ORD161J-183 | 18K 1/6W CARBON RES. | |
| | R509 | ORD167J-154 | 150K 1/6W CARBON RES. | |
| | R510 | ORD167J-154 | 150K 1/6W CARBON RES. | |
| | R511 | ORD161J-392 | 3.9K 1/6W CARBON RES. | |
| | R515 | ORD167J-682 | 6.8K 1/6W CARBON RES. | |
| | R520 | ORD161J-352 | 3.6K 1/6W CARBON RES. | |
| | R523 | ORD167J-272 | 2.7K 1/6W CARBON RES. | |
| | R541 | ORD167J-332 | 3.3K 1/6W CARBON RES. | |
| | R800 | ORD161J-221 | 220 1/6W CARBON RES. | BS EF EN G |
| | R991 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | R992 | ORD161J-103 | 10K 1/6W CARBON RES. | |
| | RA201 | DRB049J-103 | 10K 1/10WRES | |
| | RA202 | DRB089J-103 | 10K 1/10WNETWORK RES. | |
| | VR201 | OVP603-103A | 10K TRIMMER RES. | |
| | VR301 | OVP603-201AZ | 200 VARIABLE RE | |
| | VR302 | OVP603-201AZ | 200 VARIABLE RE | |
| | VR303 | OVP603-201AZ | 200 VARIABLE RE | |
| | VR304 | OVP603-201AZ | 200 VARIABLE RE | |
| | VR305 | OVP603-104A | 100K TRIMMER RES. | |
| | VR308 | OVP603-104A | 100K TRIMMER RES. | |
| | VR307 | OVP603-104A | 100K TRIMMER RES. | |
| | VR308 | OVP603-104A | 100K TRIMMER RES. | |
| | VR311 | OVP603-503A | 50K VARIABLE RE | |
| | VR312 | OVP603-503A | 50K VARIABLE RE | |
| | VR513 | OVP603-203M | 20K TRIMMER RES. | |

■ Electrical Parts List (ENJ-097)

| △ | Item | Parts Number | Description | Area |
|---|-------|---------------|-------------------|------------|
| | VR514 | QVPA603-203M | 20K TRIMMER RES. | |
| | | OTHERS | | |
| | | EMW10584-102 | PRINTED BOARD | |
| | J303 | VMC0314-S08 | CONNECT TERMINAL | |
| | J304 | VMC0314-S12 | CONNECT TERMINAL | |
| | K303 | ENZ8101-007 | INDUCTOR | BS EF EN G |
| | L301 | ENZ6002-012 | OSCILLATOR COIL | |
| | L303 | EQL2106-562 | INDUCTOR | |
| | L304 | EQL2106-562 | INDUCTOR | |
| | L305 | EQL2106-223 | INDUCTOR | |
| | L306 | EQL2106-223 | INDUCTOR | |
| | L501 | ENZ2500-001 | OSCILLATOR COIL | |
| | L502 | ENZ2500-001 | OSCILLATOR COIL | |
| | P201 | VMC0234-P11 | CONNECT TERMINAL | |
| | P202 | VMC0234-P14 | CONNECT TERMINAL | |
| | P203 | VMC0234-P08 | CONNECT TERMINAL | |
| | P204 | VMC0234-P08 | CONNECT TERMINAL | |
| | P292 | EMV5142-909 | CONNECT TERMINAL | |
| | P293 | EMV5142-908 | CONNECT TERMINAL | |
| | P303 | EMV5132-008R | CONNECT TERMINAL | |
| | P304 | EMV5132-012R | CONNECT TERMINAL | |
| | P331 | EMV7155-106R | CONNECT TERMINAL | |
| | P333 | EMV7155-106R | CONNECT TERMINAL | |
| | P702 | EMV7145-003Z | SOCKET ASSY | BS EF EN G |
| | S300 | ESP0001-023M | TACT SWITCH | |
| | S301 | ESP0001-023M | TACT SWITCH | |
| | S302 | ESP0001-023M | TACT SWITCH | |
| | S303 | ESP0001-023M | TACT SWITCH | |
| | S310 | ESP0001-023M | TACT SWITCH | |
| | S311 | ESP0001-023M | TACT SWITCH | |
| | S312 | ESP0001-023M | TACT SWITCH | |
| | S313 | ESP0001-023M | TACT SWITCH | |
| | S320 | ESP0001-023M | TACT SWITCH | |
| | S321 | ESP0001-023M | TACT SWITCH | |
| | S322 | ESP0001-023M | TACT SWITCH | |
| | S330 | ESP0001-023M | TACT SWITCH | |
| | S331 | ESP0001-023M | TACT SWITCH | |
| | S332 | ESP0001-023M | TACT SWITCH | |
| | S333 | ESP0001-023M | TACT SWITCH | |
| | S941 | QSS7A12-E01 | SLIDE SWITCH | BS EF EN G |
| | BC292 | EWS329-A920 | SOCKET WIRE ASSY | |
| | BC293 | EWS328-A920 | SOCKET WIRE ASSY | |
| | CN221 | EMV7141-015 | PIN CONNECTOR | |
| | CN701 | EMV7145-004Z | SOCKET ASSY | |
| | EP302 | E70225-003SS | EARTH PLATE | BS EF EN G |
| | FW701 | EWR34D-08LS | FLAT WIRE ASSY | |
| | FW702 | EWR33D-20LS | FLAT WIRE ASSY | BS EF EN G |
| | TW010 | EWT015-002 | TERMINAL WIRE | |
| | XT201 | ECX0004-194KM | CERAMIC RESONATOR | |

PARTS LIST

< FX-F3000 >

* All printed circuit boards and its assemblies are not available as service parts.

The Marks for Designated Areas


| | | | |
|--------------------|--------------------|-------------------------------|------------------------|
| BS . . . the U.K. | C . . . Canada | EF . . . Continental Europe | EN . . . Scandinavia |
| G . . . Germany | J . . . the U.S.A. | UB . . . Hong Kong | U . . . Universal Type |
| US . . . Singapore | UT . . . Taiwan | No marks indicates all areas. | |

- Contents -

| | |
|--|-----|
| General Exploded View and Parts List | 9-2 |
| Electrical Parts List | 9-4 |
| (ENA-177) | 9-4 |

General Exploded View and Parts List

Block No. M7MM

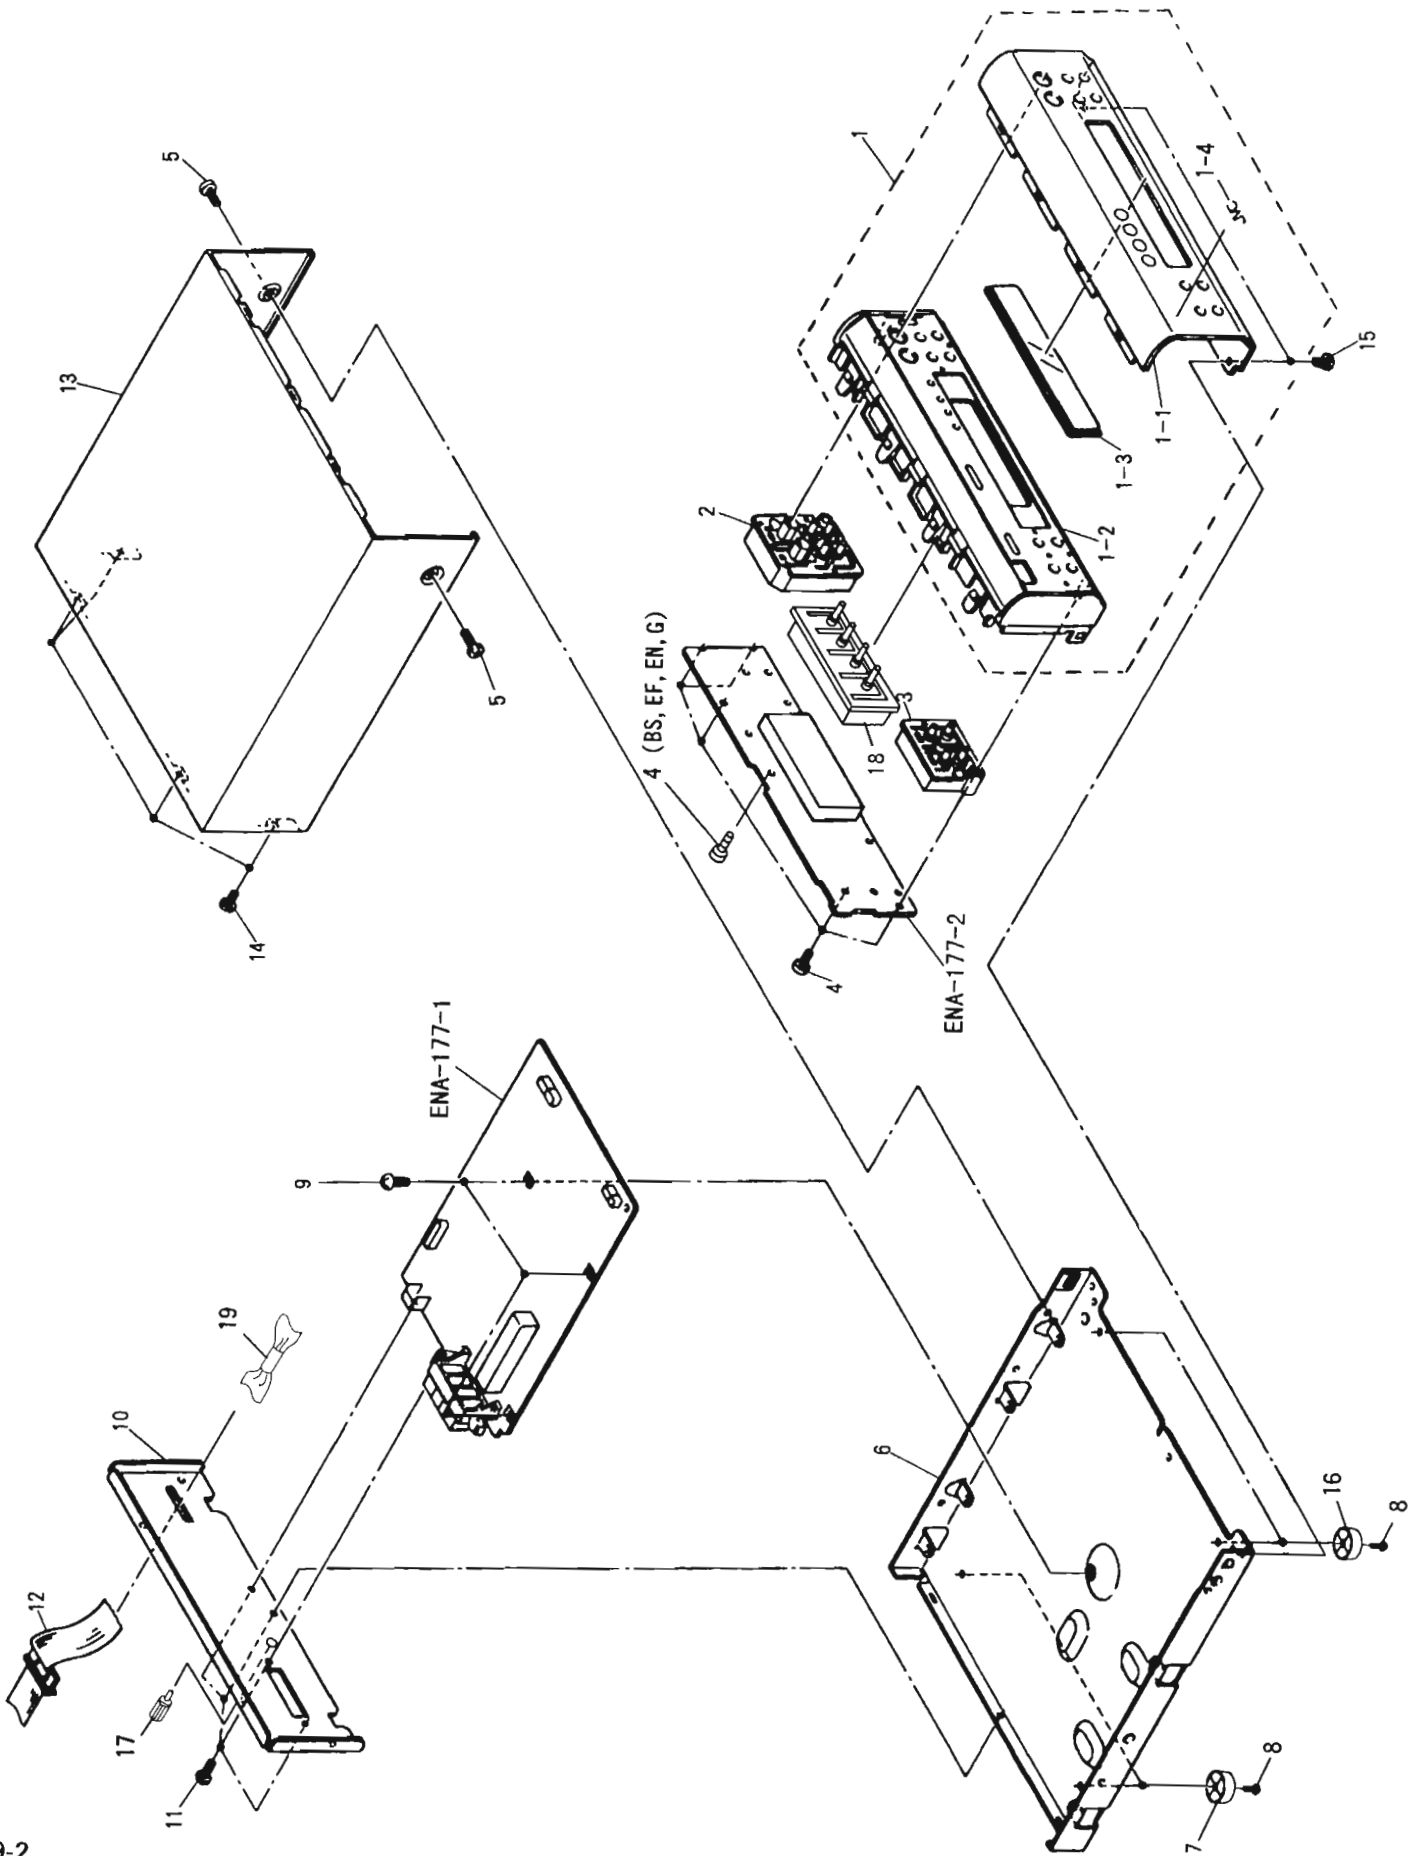

■ Parts List (FX-F3000)

Block No. **M7MM**

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|-----------------|------------------|------|-------------|------------|
| | 1 | EFP-FXF3000U(S) | FRONT PANEL ASSY | 1 | | |
| | 1-1 | E208739-002 | FRONT PANEL | 1 | | |
| | 1-2 | E103087-004ST | FRONT BASE | 1 | | |
| | 1-3 | E309614-002 | WINDOW SCREEN | 1 | | |
| | 1-4 | E406971-221 | JVC MARK | 1 | | |
| | 2 | E208707-003SS | PUSH BUTTON ASSY | 1 | | |
| | 3 | E309618-003SS | PUSH BUTTON | 1 | | |
| | 4 | SDSF2608Z | SCREW | 5 | | |
| | 5 | SDSG3008N | TAPPING SCREW | 2 | | |
| | 6 | E102878-005 | CHASSIS BASE | 1 | | |
| | 7 | E75281-010 | FOOT | 2 | | |
| | 8 | SBST3010Z | TAPPING SCREW | 4 | | |
| | 9 | SBST3006CC | TAPPING SCREW | 3 | | |
| | 10 | E208705-007 | REAR PANEL | 1 | | J |
| | | E208705-008 | REAR PANEL | 1 | | C |
| | | E208705-010 | REAR PANEL | 1 | | U UB US UT |
| | 11 | E73273-003 | SPECIAL SCREW | 4 | | |
| | 12 | EWP907-018 | FLAT WIRE ASSY | 1 | | |
| | 13 | E208179-013(S) | METAL COVER | 1 | | |
| | 14 | GBSG3008CC | TAPPING SCREW | 4 | | |
| | 15 | SDSG3008CC | TAPPING SCREW | 2 | | |
| | 16 | E75281-009 | FOOT | 2 | | |
| | 17 | E409257-001 | EARTH TERMINAL | 1 | | |
| | - | E61029-005 | NUMBER LABEL | 1 | | |
| | | E75139-004 | NAME LABEL | 1 | | U |

■ Parts List (FX-F3000R)

* Please see the parts list for FX-F3000 for parts which are not described.

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|------------------|------------------|------|-------------|------|
| | 1 | EFP-FXF3000RE(S) | FRONT PANEL ASSY | 1 | | |
| | 1-1 | E208739-003 | FRONT PANEL | 1 | | |
| | 4 | SDSF2608Z | SCREW | 6 | | |
| | 10 | E208705-009 | REAR PANEL | 1 | | |
| | 18 | E310023-001SS | PUSH BUTTON | 1 | RDS | |
| | 19 | ENZ8104-005 | NOISE FILTER | 1 | | |

■ Electrical Parts List (ENA-177)

| Δ | Item | Parts Number | Description | Area |
|---|-------|----------------|------------------------|------------|
| | | I. C. S | | |
| | IC102 | LA1836M | I. C (MONO-ANALOG) | |
| | IC121 | LC72131M | I. C (M) | |
| | IC191 | LC7073M | I. C (DIGI-MOS) | BS EF EN G |
| | IC192 | SAA6579T | I. C (M) | BS EF EN G |
| | IC201 | MN72412KBM | I. C (MICRO-COMPUTER) | |
| | IC561 | PST9146T | I. C (MONO-ANALOG) | |
| | | DIODES | | |
| | D121 | 1SS119 | SI. DIODE | |
| | D125 | 1SS119 | SI. DIODE | BS EF EN G |
| | D126 | 1SS119 | SI. DIODE | |
| | D127 | 1SS119 | SI. DIODE | BS EF EN G |
| | D128 | 1SS119 | SI. DIODE | BS EF EN G |
| | D129 | 1SS119 | SI. DIODE | |
| | D181 | 1SS119 | SI. DIODE | |
| | D202 | 1SS119 | SI. DIODE | |
| | D203 | 1SS119 | SI. DIODE | |
| | D204 | 1SS119 | SI. DIODE | |
| | D205 | 1SS119 | SI. DIODE | BS EF EN G |
| | D206 | 1SS119 | SI. DIODE | |
| | D211 | SLR-342MCA47 | L. E. D. | |
| | D212 | SLR-342MCA47 | L. E. D. | |
| | D221 | 1SS119 | SI. DIODE | U UB US UT |
| | D222 | 1SS119 | SI. DIODE | C J |
| | D271 | 1SS119 | SI. DIODE | |
| | D662 | 1SS119 | SI. DIODE | |
| | D621 | 1SS119 | SI. DIODE | |
| | D622 | 1SS119 | SI. DIODE | |
| | D656 | MTZ6.2JC | ZENER DIODE | |
| | | TRANSISTORS | | |
| | Q101 | 2SC461 | SI. TRANSISTOR | |
| | Q102 | 2SC535 | SI. TRANSISTOR | |
| | Q103 | 2SC461 | SI. TRANSISTOR | |
| | Q111 | 2SD2144S (VM) | SI. TRANSISTOR | BS EF EN G |
| | Q112 | 2SD2144S (VM) | SI. TRANSISTOR | BS EF EN G |
| | Q113 | 2SD2144S (VM) | SI. TRANSISTOR | BS EF EN G |
| | Q114 | 2SD2144S (VM) | SI. TRANSISTOR | BS EF EN G |
| | Q121 | DTA124ES | DIGITAL TRANSISTOR | |
| | Q122 | DTA124ES | DIGITAL TRANSISTOR | |
| | Q123 | DTA124ES | DIGITAL TRANSISTOR | BS EF EN G |
| | Q143 | D1C114ES | DIGITAL TRANSISTOR | |
| | Q211 | D1C114YS | DIGITAL TRANSISTOR | |
| | Q212 | D1C114YS | DIGITAL TRANSISTOR | |
| | Q561 | D1C114YS | DIGITAL TRANSISTOR | |
| | Q854 | 2SC2060 (G. R) | SI. TRANSISTOR | |
| | | CAPACITORS | | |
| | C101 | OCF21HP-103A | 0.01MF 50V CER. CAP. | |
| | C102 | QETB1CM-107 | 100MF 16V AL. E. CAP. | |
| | C103 | OCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C104 | OCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C105 | OCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C107 | OCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C111 | QCC21EM-223 | 0.022MF 25V CER. CAP. | |
| | C112 | QCT30CH-120Y | 12PF 50V CER. CAP. | |
| | C113 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | BS EF EN G |
| | C117 | QCSB1HK-5R6Y | 5.6PF 50V CER. CAP. | |
| | C118 | QCSB1HJ-150Y | 15PF 50V CER. CAP. | |
| | C121 | QCT30CH-180Y | 18PF 50V CER. CAP. | |
| | C122 | QCT30CH-180Y | 18PF 50V CER. CAP. | |
| | C123 | QCC21EM-473 | 0.047MF 25V CER. CAP. | |
| | C124 | QCSB1HK-101Y | 100PF 50V CER. CAP. | |
| | C126 | QCSB1HK-101Y | 100PF 50V CER. CAP. | |
| | C128 | QENB1HM-474 | 0.47MF 50V NP. E. CAP. | |
| | C129 | QCSB1HK-102 | 1000PF 50V CER. CAP. | |
| | C130 | QETB1CM-227 | 220MF 16V AL. E. CAP. | |
| | C141 | QCC21EM-473 | 0.047MF 25V CER. CAP. | |
| | C142 | QETB1HM-106 | 10MF 50V E. CAP. | |
| | C143 | OCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C144 | QCC21EM-223 | 0.022MF 25V CER. CAP. | |
| | C145 | QETB1HM-475E | 4.7MF 50V E. CAP. | |


| Δ | Item | Parts Number | Description | Area |
|---|-------|---------------|------------------------|----------------|
| | C146 | QETB1HM-106 | 10MF 50V E. CAP. | |
| | C147 | QETB1HM-105 | 1MF 50V AL. E. CAP. | |
| | C148 | QETB1HM-474 | 0.47MF 50V E. CAP. | |
| | C149 | QETB1HM-105 | 1MF 50V AL. E. CAP. | |
| | C150 | QETC1HM-225ZM | 2.2MF 50V AL. E. CAP. | |
| | C151 | QCS21HJ-181A | 180PF 50V CER. CAP. | BS EF EN G |
| | C152 | QCS21HJ-181A | 180PF 50V CER. CAP. | BS EF EN G |
| | C153 | QCS31HJ-821Z | 820PF 50V CER. CAP. | |
| | C154 | QCXB1CM-472Y | 4700PF 16V CER. CAP. | |
| | C155 | QETB1EM-476 | 47MF 25V AL. E. CAP. | |
| | C156 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C157 | QCC21EM-473 | 0.047MF 25V CER. CAP. | |
| | C158 | QETB1HM-106 | 10MF 50V E. CAP. | |
| | C159 | QFLB1HJ-333 | 0.033MF 50V NYLAR CAP. | BS EF EN G |
| | | QFLB1HJ-473 | 0.047MF 50V NYLAR CAP. | C J U UB US UT |
| | C160 | QFLB1HJ-333 | 0.033MF 50V NYLAR CAP. | BS EF EN G |
| | | QFLB1HJ-473 | 0.047MF 50V NYLAR CAP. | C J U UB US UT |
| | C161 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C162 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C163 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | |
| | C168 | QFV81HJ-274 | 0.27MF 50V THIN FILM | |
| | C169 | QFV81HJ-273 | 0.027MF 50V THIN FILM | |
| | C181 | QFN81HJ-562 | 5600PF 50V METAL. NYLA | |
| | C182 | QFN81HJ-562 | 5600PF 50V METAL. NYLA | |
| | C184 | QETB1CM-227 | 220MF 16V AL. E. CAP. | |
| | C185 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C186 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C187 | QCSB1HK-331Y | 330PF 50V CER. CAP. | BS EF EN G |
| | C188 | QCSB1HK-331Y | 330PF 50V CER. CAP. | BS EF EN G |
| | C191 | QCSB1HK-820Y | 82PF 50V CER. CAP. | BS EF EN G |
| | C192 | QCS31HJ-470 | 47PF 50V CER. CAP. | BS EF EN G |
| | C193 | QCS31HJ-561Z | 560PF 50V CER. CAP. | BS EF EN G |
| | C194 | QCHB1EZ-223 | 0.022MF 25V CER. CAP. | BS EF EN G |
| | C195 | QCS31HJ-331Z | 330PF 50V CER. CAP. | BS EF EN G |
| | C196 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | BS EF EN G |
| | C197 | QETC1CM-106Z | 10MF 16V AL. E. CAP. | BS EF EN G |
| | C198 | QCC21EM-473 | 0.047MF 25V CER. CAP. | BS EF EN G |
| | C199 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | BS EF EN G |
| | C201 | QCSB1HJ-330Y | 33PF 50V CER. CAP. | |
| | C207 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C210 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C211 | QCVB1CM-103Y | 0.01MF 16V CER. CAP. | |
| | C217 | QCZ0205-155 | 1.5MF 25V C. CAP. | |
| | C221 | QCSB1HK-331Y | 330PF 50V CER. CAP. | |
| | C260 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C261 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C301 | QCZ0205-155 | 1.5MF 25V C. CAP. | BS EF EN G |
| | C303 | QETB1CM-227 | 220MF 16V AL. E. CAP. | |
| | C561 | QETB1HM-225 | 2.2MF 50V AL. E. CAP. | |
| | C583 | OCF21HP-473A | 0.047MF 50V CER. CAP. | |
| | C824 | QEA00HZ-22AZM | E. CAP. | |
| | C861 | OCF21HP-223A | 0.022MF 50V CER. CAP. | |
| | C862 | QETB1CM-227 | 220MF 16V AL. E. CAP. | |
| | C863 | QETB1EM-226M | 22MF 25V E. CAP. | |
| | TC201 | ENZ1003-015 | 0.1MF TRIMMER CA | |
| | | RESISTORS | | |
| | R102 | ORD187J-332 | 3.3K 1/6W CARBON RE | |
| | R103 | ORD161J-221 | 220 1/6W CARBON RE | |
| | R104 | ORD167J-272 | 2.7K 1/6W CARBON RE | |
| | R105 | ORD161J-391 | 390 1/6W CARBON RE | |
| | R106 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R107 | ORD161J-561 | 560 1/6W CARBON RE | |
| | R108 | ORD167J-332 | 3.3K 1/6W CARBON RE | |
| | R109 | ORD161J-221 | 220 1/6W CARBON RE | |
| | R110 | ORD161J-472 | 4.7K 1/6W CARBON RE | BS EF EN G |
| | R111 | ORD161J-472 | 4.7K 1/6W CARBON RE | BS EF EN G |
| | R112 | ORD161J-472 | 4.7K 1/6W CARBON RE | BS EF EN G |
| | R113 | ORD161J-103 | 10K 1/6W CARBON RE | BS EF EN G |
| | R114 | ORD161J-122 | 1.2K 1/6W CARBON RE | BS EF EN G |
| | R115 | ORD161J-104 | 100K 1/6W CARBON RE | |

■ Electrical Parts List (ENA-177)

| △ | Item | Parts Number | Description | Area |
|---|------|---------------|---------------------|-----------------------|
| | R116 | ORD161J-472 | 4.7K 1/6W CARBON RE | BS EF EN G |
| | R119 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R121 | ORD161J-473 | 47K 1/6W CARBON RE | |
| | R122 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R124 | ORD161J-222 | 2.2K 1/6W CARBON RE | |
| | R127 | ORD167J-822 | 8.2K 1/6W CARBON RE | |
| | R128 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R129 | ORD161J-222 | 2.2K 1/6W CARBON RE | |
| △ | R130 | ORD14CJ-680SX | 68 1/4W UNF CARBON | C J |
| △ | | ORZ0077-680 | 68 1/4W FUSIBLE RE | BS EF EN G U UB US UT |
| | R132 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R133 | ORD161J-473 | 47K 1/6W CARBON RE | |
| | R134 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R141 | ORD161J-392 | 3.9K 1/6W CARBON RE | |
| | R143 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R144 | ORD167J-332 | 3.3K 1/6W CARBON RE | |
| | R145 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R148 | ORD161J-222 | 2.2K 1/6W CARBON RE | |
| | R147 | ORD161J-393 | 39K 1/6W CARBON RE | BS EF EN G U UB US UT |
| | | ORD167J-223 | 22K 1/6W CARBON RE | C J |
| | R148 | ORD161J-561 | 560 1/6W CARBON RE | |
| | R149 | ORD161J-103 | 10K 1/6W CARBON RE | EF EN G |
| | | ORD167J-223 | 22K 1/6W CARBON RE | BS C J U UB US UT |
| | R161 | ORD161J-122 | 1.2K 1/6W CARBON RE | |
| | R162 | ORD161J-122 | 1.2K 1/6W CARBON RE | |
| | R163 | ORD161J-472 | 4.7K 1/6W CARBON RE | EF EN G |
| | | ORD167J-332 | 3.3K 1/6W CARBON RE | BS C J U UB US UT |
| | R164 | ORD161J-472 | 4.7K 1/6W CARBON RE | EF EN G |
| | | ORD167J-332 | 3.3K 1/6W CARBON RE | BS C J U UB US UT |
| | R165 | ORD167J-152 | 1.5K 1/6W CARBON RE | BS C J U UB US UT |
| | R166 | ORD167J-152 | 1.5K 1/6W CARBON RE | BS C J U UB US UT |
| | R175 | ORD161J-101 | 100 1/6W CARBON RE | |
| | R176 | ORD161J-101 | 100 1/6W CARBON RE | |
| | R182 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R183 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R184 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R188 | ORD161J-103 | 10K 1/6W CARBON RE | |
| | R189 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R191 | ORD161J-222 | 2.2K 1/6W CARBON RE | BS EF EN G |
| | R201 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R203 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R204 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R205 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R206 | ORD161J-472 | 4.7K 1/6W CARBON RE | |
| | R211 | ORD167J-151 | 150 1/6W CARBON RE | |
| | R212 | ORD167J-151 | 150 1/6W CARBON RE | |
| | R221 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R222 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R231 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R241 | ORD161J-221 | 220 1/6W CARBON RE | |
| | R565 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R566 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | R852 | ORD161J-102 | 1K 1/6W CARBON RE | |
| | | OTHERS | | |
| | | EMW70853-002 | PRINTED BOARD | |
| | L111 | EQL4007-150T | INDUCTOR | |
| | L141 | EQL2108-392 | INDUCTOR | BS EF EN G |
| | L191 | EQL4007-101 | INDUCTOR | BS EF EN G |
| | S201 | ESP0001-023M | TACT SWITCH | |
| | S202 | ESP0001-023M | TACT SWITCH | |
| | S203 | ESP0001-023M | TACT SWITCH | |
| | S204 | ESP0001-023M | TACT SWITCH | |
| | S205 | ESP0001-023M | TACT SWITCH | |
| | S206 | ESP0001-023M | TACT SWITCH | |
| | S207 | ESP0001-023M | TACT SWITCH | |
| | S208 | ESP0001-023M | TACT SWITCH | |
| | S209 | ESP0001-023M | TACT SWITCH | |
| | S210 | ESP0001-023M | TACT SWITCH | |
| | S211 | ESP0001-023M | TACT SWITCH | BS EF EN G |
| | S212 | ESP0001-023M | TACT SWITCH | BS EF EN G |

| △ | Item | Parts Number | Description | Area |
|---|-------|-----------------|-------------------------|----------------|
| | S213 | ESP0001-023M | TACT SWITCH | BS EF EN G |
| | S214 | ESP0001-023M | TACT SWITCH | BS EF EN G |
| | T111 | EOR7121-002 | RF COIL | BS EF EN G |
| | | EOR7121-004 | RF COIL | C J U UB US UT |
| | T141 | EQT2140-021 | I. F. TRANSFORMER | |
| | T142 | ECB1560-012 | CERAMIC FILTER | |
| | X121 | ECX0007-200KNJ1 | CRYSTAL | |
| | X141 | ECXPR46-001A | CRYSTAL | |
| | X191 | VCX5057-001 | CRYSTAL | BS EF EN G |
| | X192 | EFO-EC4004T4 | CERAMIC RESONATOR | BS EF EN G |
| | X201 | ECX0006-000KNJ | CRYSTAL | |
| | AT101 | EMB41YV-302K | ANTENNA TERMINAL | |
| | BK001 | E308963-002 | SHIELD BRACKET | |
| | CF101 | ECB2118-007R | CERAMIC FILTER | BS EF EN G |
| | | ECB2123-006R | CERAMIC FILTER | C J U UB US UT |
| | CF102 | ECB2118-007R | CERAMIC FILTER | BS EF EN G |
| | | ECB2123-006R | CERAMIC FILTER | C J U UB US UT |
| | CN101 | EMV7141-011 | CONNECT TERMINAL | |
| | DI201 | ELU0001-205 | FLUORESCENT DISPLAY TUB | |
| | EP101 | E70225-003SS | EARTH PLATE | |
| | EP102 | EMZ4002-002Z | EARTH PLATE | |
| | EP103 | EMZ4002-002Z | EARTH PLATE | |
| | EP104 | EMZ4002-002Z | EARTH PLATE | |
| | FL141 | EQF0101-012 | LOWPASS FILTER | |
| | FL142 | EQF0101-012 | LOWPASS FILTER | |
| | FS101 | E306805-191 | SPACER | |
| | FS102 | E306805-191 | SPACER | |
| | FW102 | EMR380-16LS | FLAT WIRE ASSY | |
| | FW103 | EMR340-16LS | FLAT WIRE ASSY | |
| | FW104 | EMR390-16LS | FLAT WIRE ASSY | |
| | J1101 | EMV7145-004Z | SOCKET ASSY | |
| | J1102 | EMV7145-004Z | SOCKET ASSY | |
| | J1103 | EMV7145-004Z | SOCKET ASSY | |
| | J1104 | EMV7145-005Z | SOCKET ASSY | |
| | J1105 | EMV7145-004Z | SOCKET ASSY | |
| | RF101 | EAF2203-005 | FRONT END | BS EF EN G |
| | | EAF2207-001 | FRONT END | C J U UB US UT |
| | SP102 | VYH7653-002 | I. C. SOCKET | |
| | SP121 | VYH7653-004 | I. C. PROTECTOR | |
| | SP191 | VYH7653-004 | I. C. PROTECTOR | BS EF EN G |
| | SP192 | VYH7653-009 | I. C. HOLDER | BS EF EN G |
| | SP201 | VYH7653-001 | SPRING | |

Accessories List


Block No. 

| △ | Item | Parts Number | Parts Name | Q'ty | Description | Area |
|---|------|----------------|--------------------------|------|-------------|----------------|
| △ | 1 | E30580-2516A | INSTRUCTION BOOK | 1 | | J |
| △ | | E30580-2517A | INSTRUCTION BOOK | 1 | | C |
| △ | | E30580-2518A | INSTRUCTION BOOK | 1 | | EF G |
| △ | | E30580-2519A | INSTRUCTION BOOK | 1 | | EN |
| △ | | E30580-2520A | INSTRUCTION BOOK | 1 | | U UB US UT |
| △ | | E30580-2521ABS | INSTRUCTION BOOK | 1 | | BS |
| | 2 | E43486-696A | CAUTION SHEET | 1 | | |
| | 3 | E309758-003 | ENVELOPE | 1 | | |
| | 4 | BT-51006-1 | REGISTER CARD | 1 | | J |
| | 5 | BT-20134 | WARRANTY CARD | 1 | | G |
| | | BT-52002-1 | WARRANTY CARD | 1 | | C |
| | | BT-54003-1 | WARRANTY CARD | 1 | | BS |
| | 6 | BT-20071B | SERVICE NETWORK | 1 | | C |
| | 7 | BT-20066A | DISTRIBUTOR LIST | 1 | | BS |
| | 8 | BT-20044G | SAFETY SHEET | 1 | | J |
| | | E43486-340A | SAFETY SHEET | 1 | | BS |
| | 9 | RM-SEF3000RU | WIRE-LESS REMOTE CONTROL | 1 | | BS EF EN G |
| | | RM-SEF3000U | WIRE-LESS REMOTE CONTROL | 1 | | C J U UB US UT |
| | 10 | R03BPA-2STSA | BATTERY | 1 | | |
| | 11 | E0B4001-015 | LOOP ANTENNA | 1 | | |
| | 12 | EWP503-001 | ANTENNA WIRE | 1 | | BS EF EN G |
| | 13 | E03614-004 | FM FEEDER ANTENNA | 1 | | C J U UB US UT |
| | 14 | EMZ2001-014 | ADAPTOR | 1 | | C J U UB US UT |
| | 15 | EWPZ01-012 | EARTH WIRE | 1 | | BS EF EN G |
| | | EWPZ01-015 | EARTH WIRE | 1 | | C J U UB US UT |
| | 16 | ENZ2202-001 | SIEMENS PLUG | 1 | | US |
| | | ENZ2203-001 | SIEMENS PLUG | 1 | | U UT |

Packing Materials and Part Numbers

Block No. **M9MM**


- For U, UB, US, UT, J and C -

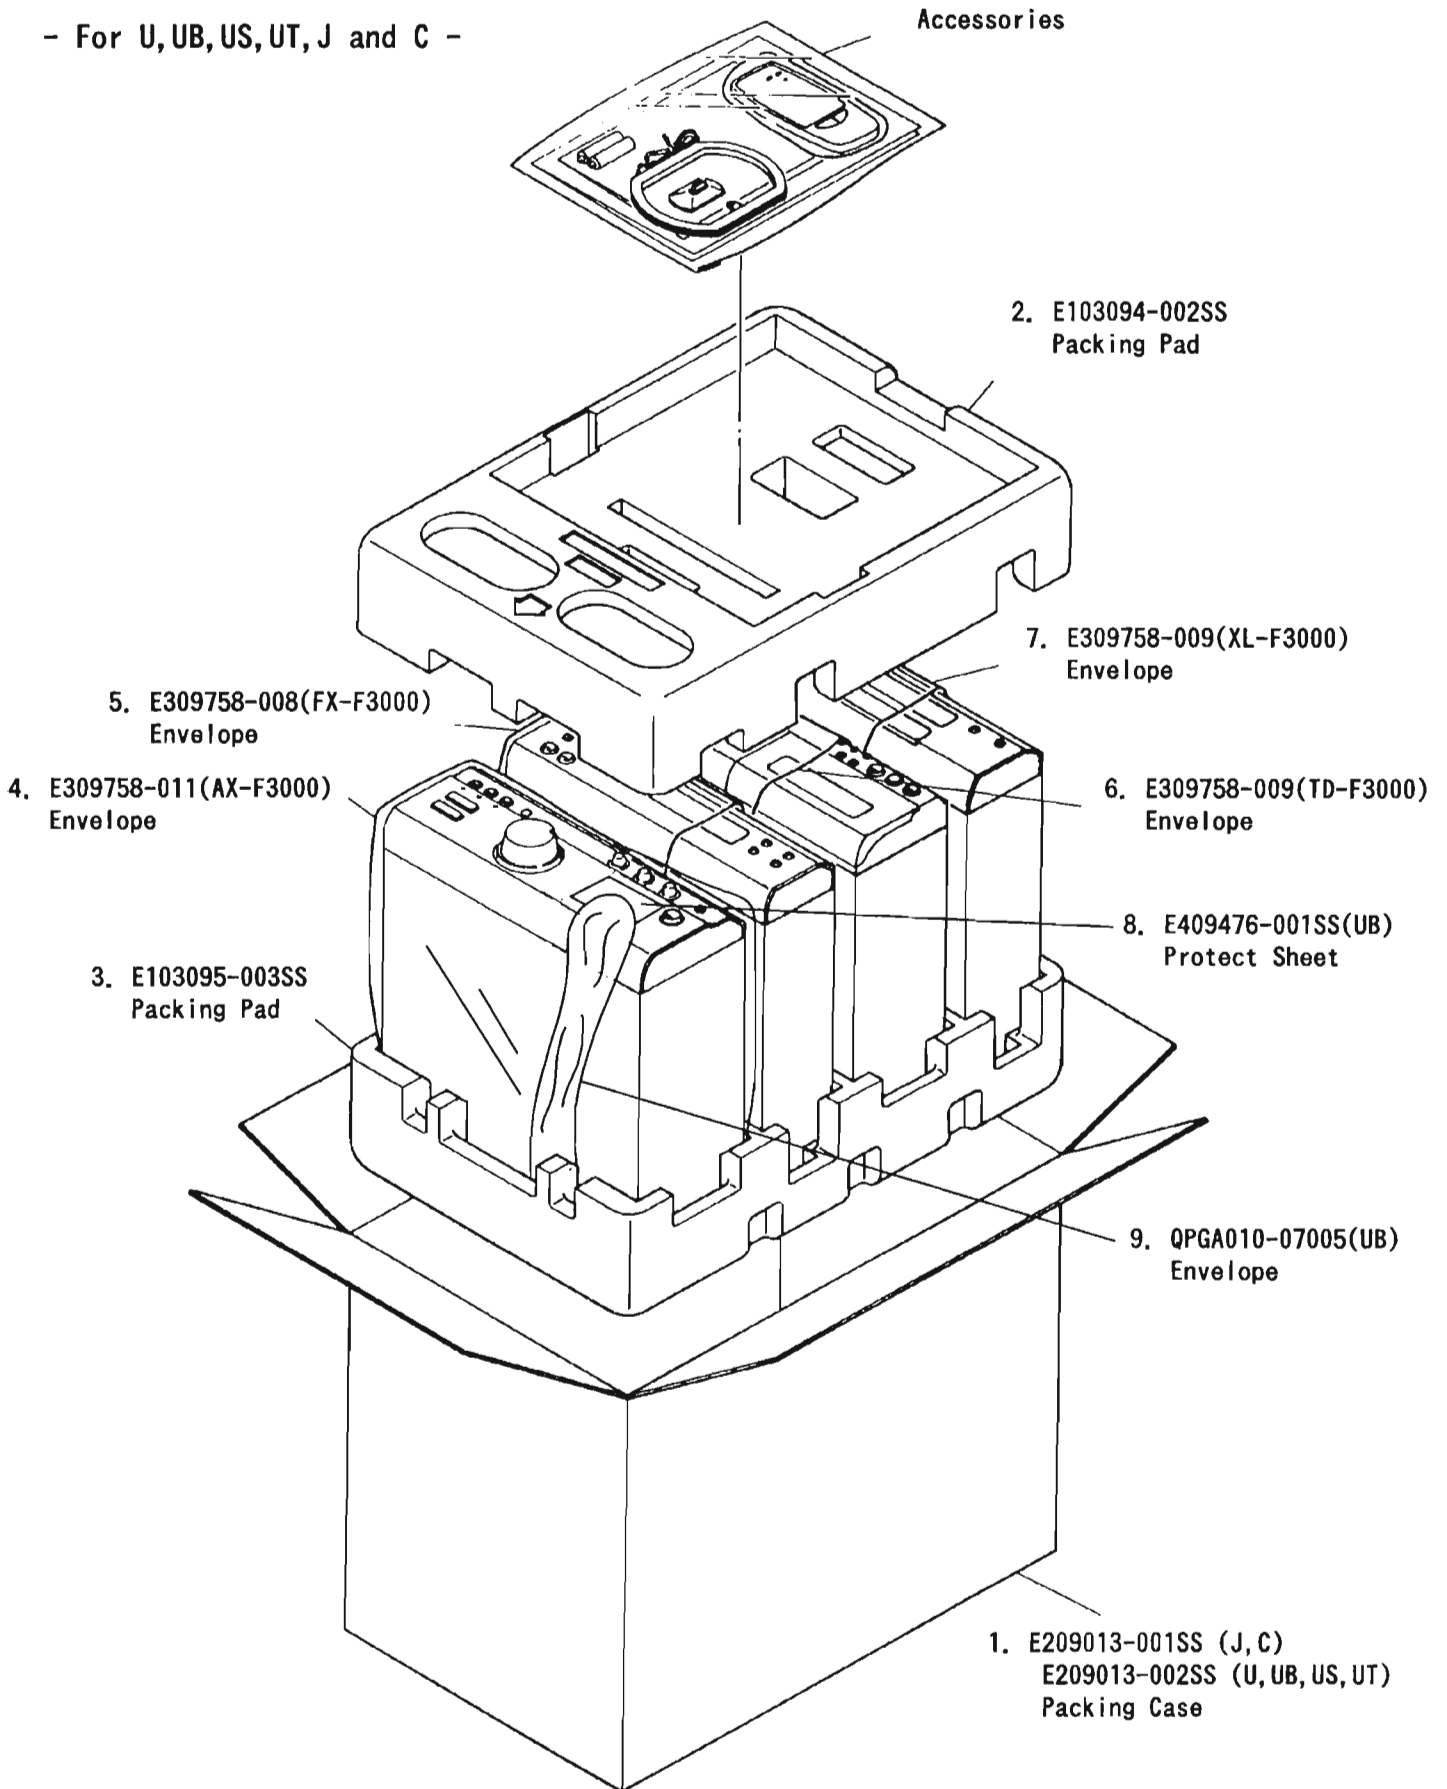

Packing Materials and Part Numbers

Block No. MTMM

- For BS, EF, EN and G -

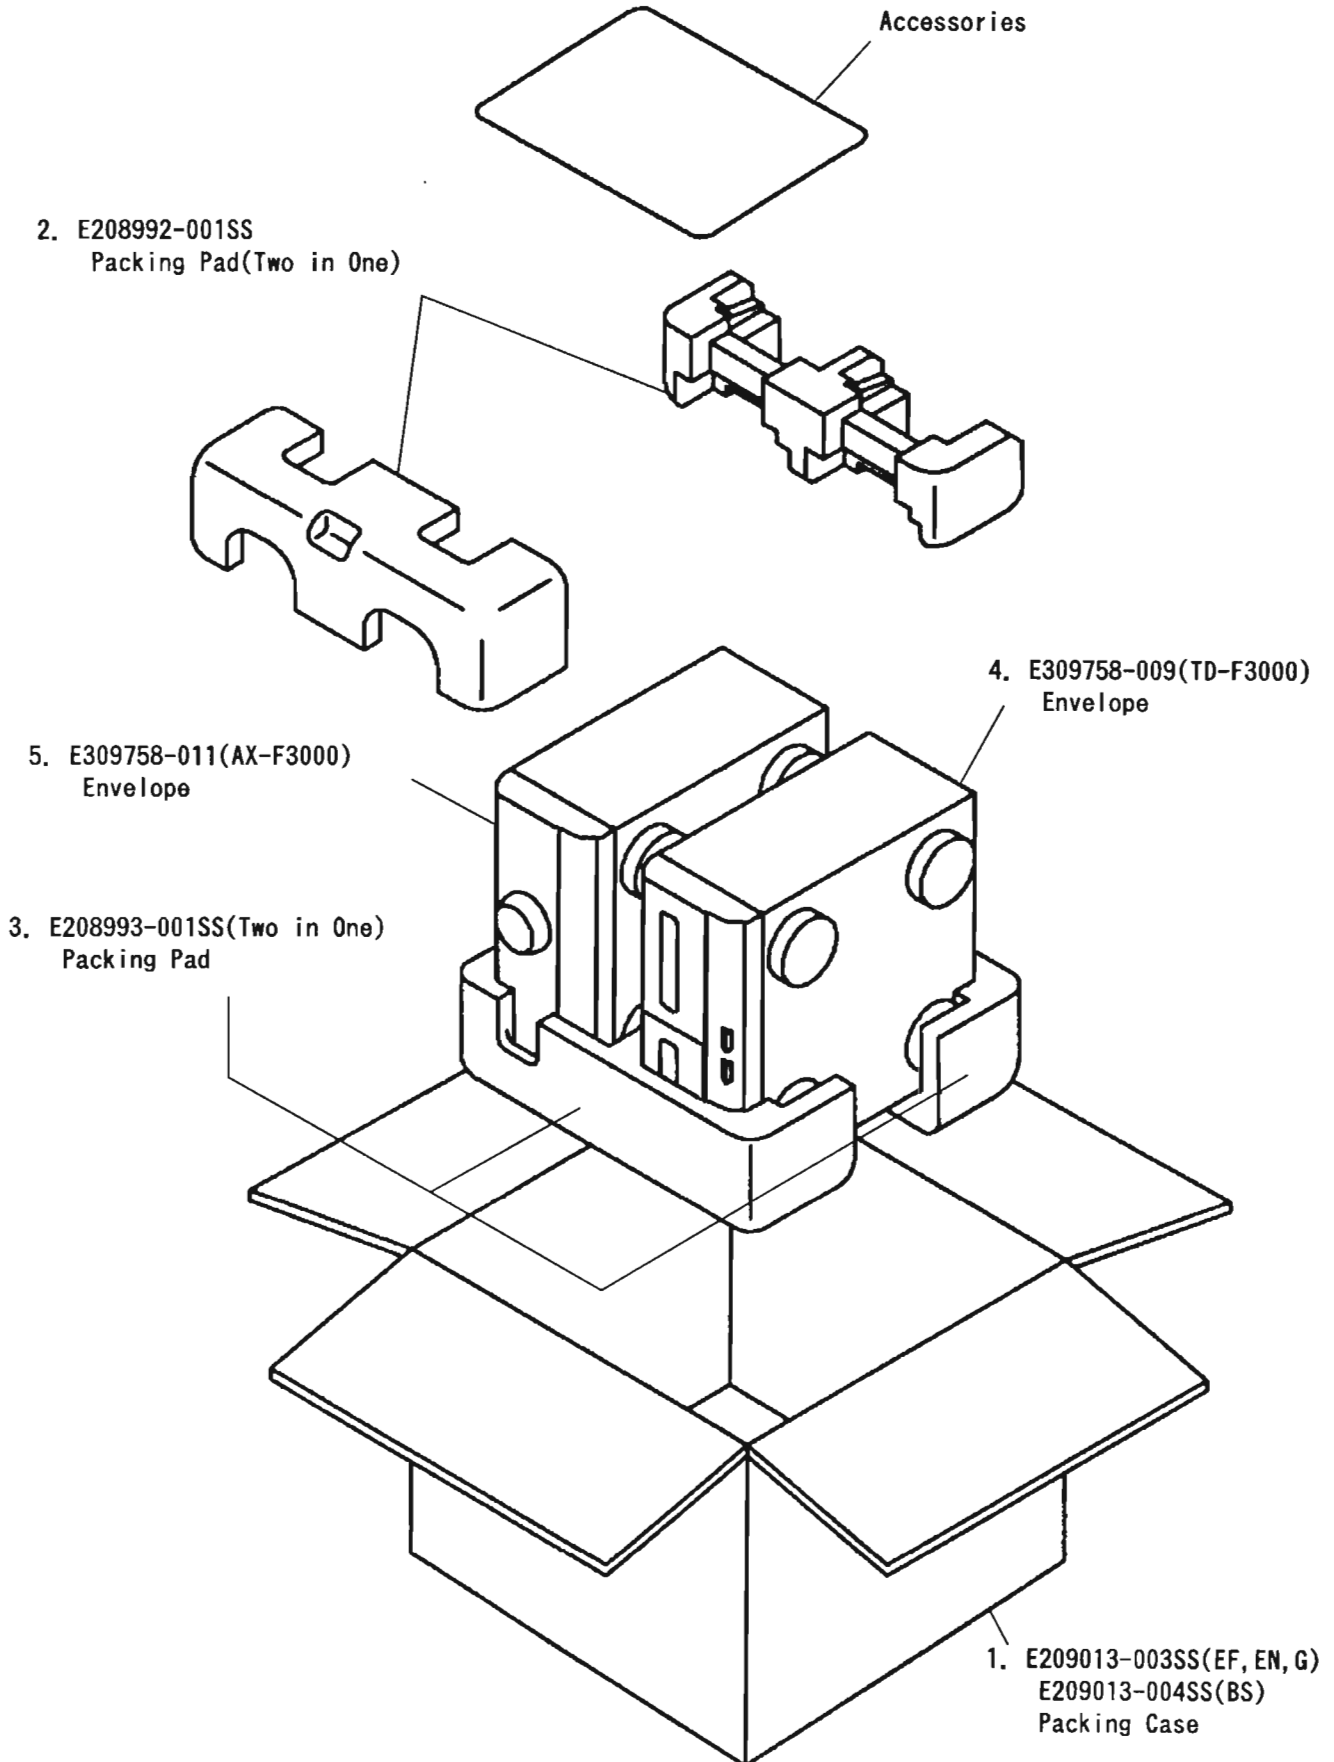

Description of Major LSIs

■ HD614081SE39 (IC203) : Deck controller

Terminal Layout

| | | | |
|------------------|----|----|------------------|
| NR LED | 1 | 64 | A.FWD. LED |
| NR LED(C) | 2 | 63 | A. REV. LED |
| A SPEED UP | 3 | 62 | B FWD. LED |
| B SPEED UP | 4 | 61 | B.REV. LED |
| MUSIC IN | 5 | 60 | REC LED |
| B.FWD.REEL MOTOR | 6 | 59 | REV. MODE |
| B.REV.REEL MOTOR | 7 | 58 | BIAS |
| B REV CAM MOTOR | 8 | 57 | NR OFF |
| B FWD CAM MOTOR | 9 | 56 | REC MUTE |
| A CAM SW-2 | 10 | 55 | DCS IN |
| A CAM SW-1 | 11 | 54 | DCS OUT |
| A CAM SW-0 | 12 | 53 | GND |
| A PULSE IN | 13 | 52 | 4.19MHzOSC IN |
| B CAM SW-2 | 14 | 51 | 4.19MHzOSC IN |
| B CAM SW-1 | 15 | 50 | TO VCC |
| B CAM SW-0 | 16 | 49 | RESET IN |
| B PULSE IN | 17 | 48 | KEY&SW IN-4 |
| POWER OFF IN | 18 | 47 | KEY&SW IN-3 |
| GND | 19 | 46 | KEY&SW IN-2 |
| A FWD REEL MOTOR | 20 | 45 | KEY&SW IN-1 |
| A REV REEL MOTOR | 21 | 44 | KEY OUT-4 |
| A REV CAM MOTOR | 22 | 43 | KEY OUT-3 |
| A FWD CAM MOTOR | 23 | 42 | KEY OUT-2 |
| NR REC | 24 | 41 | KEY OUT-1 |
| A MUTE | 25 | 40 | SWOUT-2 |
| B MUTE | 26 | 39 | SWOUT-1 |
| PLAY MUTE | 27 | 38 | HI-SPEED DUBBING |
| CAP.MOTOR ON | 28 | 37 | H.S.CrO2 |
| REC | 29 | 36 | H.S. ME |
| FADE CTRL. | 30 | 35 | H.S.NORM. |
| BEQ | 31 | 34 | CrO2 |
| +5V | 32 | 33 | METAL |

Key matrix

| | KEY&SW-1 (PIN45) | KEY&SW-2 (PIN46) | KEY&SW-3 (PIN47) | KEY&SW-4 (PIN48) |
|----------------------|---------------------|---------------------|------------------------|---------------------|
| KEY OUT 1 (PIN41) | A ◀ (S300) | A ◀◀ (S301) | A ▶▶ (S302) | A ▶ (S303) |
| KEY OUT 2 (PIN42) | B ◀ (S310) | B ◀◀ (S311) | B ▶▶ (S312) | B ▶ (S313) |
| KEY OUT 3 (PIN43) | A ■ (S320) | B ■ (S321) | REC PAUSE (S322) | — |
| KEY OUT 4 (PIN44) | A▶▶B (S330) | DOLBY (S331) | REV. MODE (S332) | CD REC (S333) |
| SW OUT 1 (PIN39) | — | B CrO2 | METAL | — |
| SW OUT 2 (PIN40) | B PACK | REV REC | FWD REC | A PACK |

Terminal Description

| Pin NO. | Symbol | I/O | Function | Pin NO. | Symbol | I/O | Function |
|---------|------------|-----|--|---------|------------------|-----|---|
| 1 | NR LED | O | Dolby B indicator signal output | 33 | METAL | O | Metal tape , normal speed record |
| 2 | NR LED(C) | O | Dolby C indicator signal output | 34 | CrO ₂ | O | CrO ₂ tape , normal speed record |
| 3 | A S UP | O | Reel speed up control (Deck A) | 35 | HS NORM | O | Not used |
| 4 | B S UP | O | Reel speed up control (Deck B) | 36 | HS METAL | O | Metal tape , high speed record |
| 5 | MUSIC IN | I | Music scan signal input | 37 | HS CrO2 | O | CrO2 tape , high speed record |
| 6 | B FRM | O | Reel control signal for forward (Deck B) | 38 | HI DUB | O | Not used |
| 7 | B RRM | O | Reel control signal for reverse (Deck B) | 39 | SW O1 | O | Keymatrix output for leaf switch |
| 8 | B RCM | O | Cam control signal for reverse (Deck B) | 40 | SW O2 | O | Keymatrix output for leaf switch |
| 9 | B FCM | O | Cam control signal for forward (Deck B) | 41 | KEY O1 | O | Key matrix output |
| 10 | A CSW2 | I | Cam data input | 42 | KEY O2 | O | Key matrix output |
| 11 | A CSW1 | I | Cam data input | 43 | KEY O3 | O | Key matrix output |
| 12 | A CSW0 | I | Cam data input | 44 | KEY O4 | O | Key matrix output |
| 13 | A.PULS IN | I | Reel pulse input from deck A | 45 | KEY/SW I1 | I | Key matrix input |
| 14 | B CSW2 | I | Cam data input | 46 | KEY/SW I2 | I | Key matrix input |
| 15 | B CSW1 | I | Cam data input | 47 | KEY/SW I3 | I | Key matrix input |
| 16 | B CSW0 | I | Cam data input | 48 | KEY/SW I4 | I | Key matrix input |
| 17 | B.PULSE IN | I | Reel pulse input from deck B | 49 | RESET | I | Reset input |
| 18 | P.CONT | I | Inhibit input from system controller | 50 | TO VCC | -- | Connected to VCC |
| 19 | GND | -- | GND | 51 | OSC | -- | Oscillation terminal |
| 20 | A FRM | O | Reel control signal for forward (Deck A) | 52 | OSC | -- | Oscillation terminal |
| 21 | A RRM | O | Reel control signal for reverse (Deck A) | 53 | GND | -- | GND |
| 22 | A RCM | O | Cam control signal for reverse (Deck A) | 54 | DCS OUT | O | Compulink output |
| 23 | A FCM | O | Cam control signal for forward (Deck A) | 55 | DCS IN | I | Compulink input |
| 24 | NR REC | O | It is "H" when recording with NR on | 56 | REC MUTE | O | Recording mute control |
| 25 | A MUTE | O | It is "H" when deck A is not playing | 57 | NR OFF | O | NR on/off control |
| 26 | B MUTE | O | It is "H" when deck B is not playing | 58 | BIAS | O | Bias on/off control |
| 27 | PLAY MU | O | Deck mute | 59 | REV MODE | O | Indication control for reverse mode |
| 28 | CAP CONT | O | Capstan on/off control | 60 | REC LED | O | Indication control for record |
| 29 | REC | O | It is "H" when recording | 61 | BREV LED | O | Indication control for reverse playback |
| 30 | FADE CON | O | It is "H" when recording with fade | 62 | BFWD LED | O | Indication control for forward playback |
| 31 | BEQ | O | It is "L" when CrO2 tape is in deck B | 63 | AREV LED | O | Indication control for reverse playback |
| 32 | +5V | -- | Power supply | 64 | AFWD LED | O | Indication control for forward playback |

CA-F3000

JVC

VICTOR COMPANY OF JAPAN, LIMITED
AUDIO PRODUCT DIVISION, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

(No. 20590U)



Printed in Japan
9607(S)